

SUZUKI

GS1000

SERVICE MANUAL

SR-8503
(英) E-3

FOREWORD

The new GS1000 Suzuki is the fastest, best handling and most thoroughly engineered Suzuki has ever produced. The GS1000 is a continuation of Suzuki's world famous standards of technical engineering, and superior products.

This service manual has been produced primarily for experienced mechanics whose job it is to inspect, adjust, repair and service Suzuki motorcycles. Apprentice mechanics and do-it-yourself mechanics, will also find this manual an extremely useful guide.

IMPORTANT

All Suzuki motorcycles manufactured on or after January 1, 1978 are subject to Environmental Protection Agency emission regulations. These regulations set standards for emission control, and also set specific servicing requirements. This manual contains all of the necessary information that is required to properly inspect and service the GS1000 and GS1000E in accordance with the EPA regulations.

Primarily, the emission components which can effect the emission output of the GS1000 consist of the carburetors and crankcase breather device. Emission control information is contained in the Fuel System chapter and the Emission Control chapter. However, we strongly suggest that the chapter on Emission Control be reviewed before any type of service work is performed.

Further information concerning the EPA emission regulations and U.S. Suzuki's emission control program can be found in the U.S. SUZUKI EMISSION CONTROL PROGRAM MANUAL.

SUZUKI MOTOR CO., LTD.

Service Department

Quoting, copying or otherwise using any part of this manual without explicit authorization from Suzuki Motor Co., Ltd. is not permitted as all rights to the publication are reserved under copyright law.

VIEW OF SUZUKI GS1000



Right side



Left side

GROUP INDEX

GENERAL INFORMATION	1
SERVICE SPECIFICATIONS	2
PERIODIC MAINTENANCE	3
SPECIAL MATERIALS	4
SPECIAL TOOLS	5
TROUBLE SHOOTING	6
ENGINE	7
FUEL SYSTEM & CARBURETORS	8
EMISSION CONTROL & REGULATIONS	9
CHASSIS	10
ELECTRICAL SYSTEM	11
GS1000E	12
GS1000S	13
GS1000L	14

GENERAL INFORMATION

1

CONTENTS

IDENTIFICATION TABLE	1-2
FUEL, OILS AND BRAKING-IN PROCEDURE	1-2
ORIENTATION.....	1-3
SERVICE SPECIFICATIONS	1-4

GENERAL INFORMATION

IDENTIFICATION TABLE

SERIAL NUMBER LOCATION

The frame serial number ① is stamped on the steering head pipe. The engine serial number ② is located on the right side of the crankcase. These numbers are required especially for registering the machine and ordering spare parts.



Fig. 1-1.



Fig. 1-2.

FUEL, OILS AND BREAKING-IN PROCEDURE

FUEL

Gasoline used should be graded 85 ~ 95 octane or higher. An unleaded or low-lead gasoline type is recommended.

ENGINE OIL

Be sure that the engine oil you used comes under API classification of SE or SD and that its viscosity rating is SAE 10W-40. If SAE 10W-40 motor oil is not available, select the oil viscosity according to the following chart:

SAE	40	30	20W-50	10W-50	10W-30	20W	10W
Temperature							
	°C: -20 -10 0 10 20 30 40 °F: 4 14 32 50 68 86 104						

BRAKE OIL (for front and rear brakes)

Specification and classification:
DOT 3, DOT 4

NOTE:

- 1) Since the brake system of this motorcycle is filled with a glycol-based brake fluid by the manufacture, do not use or mix different types of fluid such as silicone-based and petroleum-based fluid for refilling the system, otherwise serious damage will result.
- 2) Do not use any brake fluid taken from old or used or unsealed containers.
- 3) Never re-use brake fluid left over from the previous servicing and stored for a long period.

FRONT FORK OIL

SAE 10W/20

BREAKING-IN PROCEDURE

During manufacture only the best possible materials are used and all machined parts are finished to a very high standard but it is still necessary to allow the moving parts to "BREAK-IN" before subjecting the engine to maximum stresses. The future performance and reliability of the engine depends on the care and restraint exercised during its early life. The general rules are as follows:

1. Keep to these break-in engine speed limits:

Initial 500 miles (800 km)	Below 4,000 rpm
Up to 1,000 miles (1,600 km)	Below 6,000 rpm
Over 1,000 miles (1,600 km)	Below 8,500 rpm

2. Upon reaching an odometer reading of 1,000 miles (1,600 km), you can subject the motorcycle to full throttle operation. However, do not exceed 8,500 rpm at any time.

ORIENTATION

CYLINDER IDENTIFICATION

The four cylinders of this engine are identified as No. 1, No. 2, No. 3 and No. 4 cylinder, as counted from left to right (as viewed by the rider on the seat).

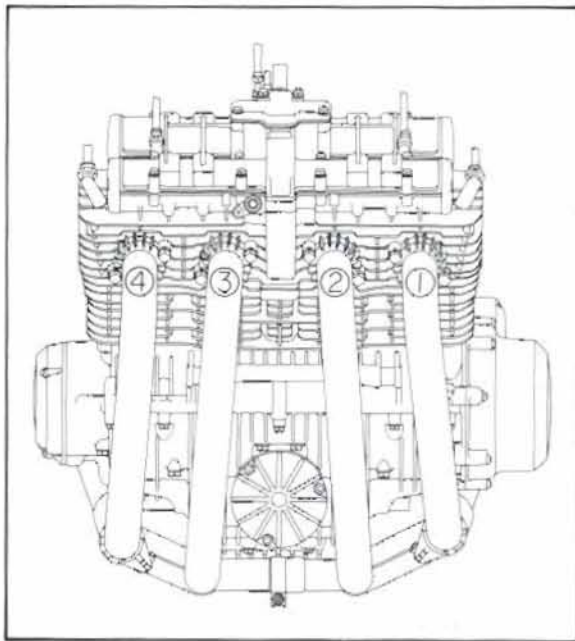


Fig. 1-3.

LOCATION OF PARTS

1. Tachometer
2. Ignition switch
3. Front brake lever
4. Throttle grip
5. Rear brake pedal
6. Foot rests
7. Speedometer
8. Clutch lever
9. Fuel tank cap
10. Gear shift lever

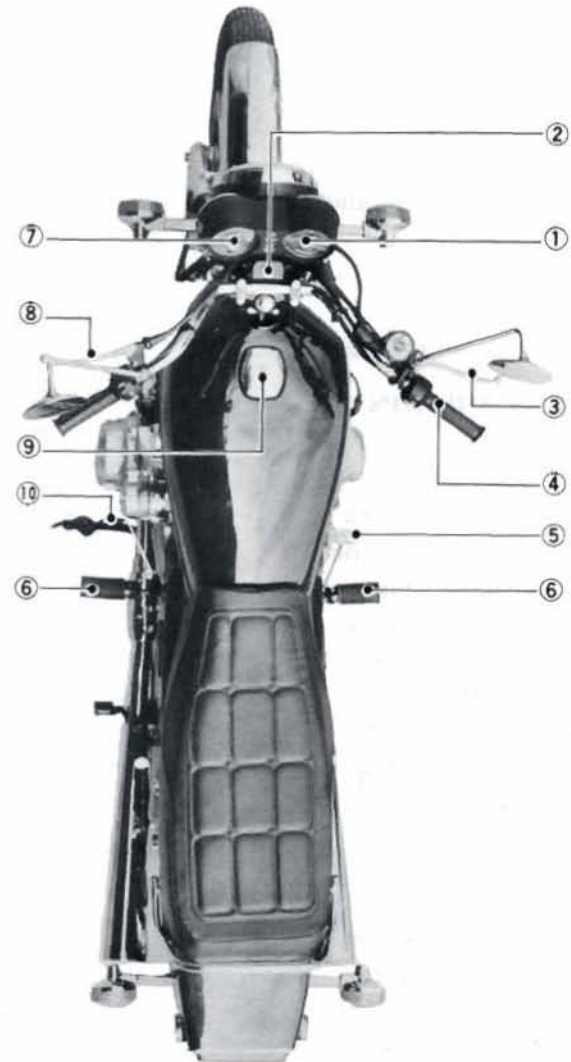


Fig. 1-4.

Left ↔ Right

SERVICE SPECIFICATIONS

DIMENSIONS AND WEIGHT

Overall length	2,225 mm (87.6 in.)
Overall width	850 mm (33.5 in.)
Overall height	1,165 mm (45.9 in.)
Wheelbase	1,505 mm (59.3 in.)
Ground clearance	155 mm (6.1 in.)
Dry weight	230 kg (507 lbs.)
Gross vehicle weight rating	924 lbs.

ENGINE

Type	Four-stroke cycle, air-cooled, DOHC
Number of cylinder	4
Bore	70.0 mm (2.756 in.) 73.0
Stroke	64.8 mm (2.551 in.)
Piston displacement	997 cm ³ (60.8 cu.in.) 1085 cc
Compression ratio	9.2 : 1 66.1 10.45
Carburetor	MIKUNI VM26SS, four
Air cleaner	Paper element
Starter system	Electric
Lubrication system	Wet sump

29 mm smooth bores

TRANSMISSION

Clutch	Wet multi-plate type
Transmission	5-speed constant mesh
Gearshift pattern	1-down 4-up
Primary reduction	1.775 (87/49)
Final reduction	2.800 (42/15)
Gear ratios, Low	2.500 (35/14)
2nd	1.777 (32/18)
3rd	1.380 (29/21)
4th	1.125 (27/24)
Top	0.961 (25/26)
Drive chain	TAKASAGO #630GSO, 96 links
	DAIDO #630 YL, 96 links

CHASSIS

Front suspension	Telescopic, pneumatic/coil spring, oil dampened
Rear suspension	Swinging arm, oil dampened, damper 4-way/spring
	5-way adjustable
Steering angle	40° (right and left)
Caster	63°
Trail	113 mm (4.45 in.)
Turning radius	2.62 m (8.5 ft.)
Front brake	Disc brake
Rear brake	Disc brake
Front tire size	3.25V19-4PR
Rear tire size	4.00V18-4PR
Front tire pressure	175 kPa 1.75 kg/cm ² (25 psi) (Normal solo riding)
Rear tire pressure	200 kPa 2.00 kg/cm ² (28 psi) (Normal solo riding)

16.398026

ELECTRICAL

Ignition type	Battery ignition
Ignition timing	17° B.T.D.C. below 1,500 rpm and 37° B.T.D.C. above 2,500 rpm
Spark plug	NGK B-8ES or NIPPON DENSO W24ES
Spark plug gap	0.6 ~ 0.8 mm both NGK and NIPPON DENSO
Battery	12V 14Ah/10 Hous
Generator	Three-phase A.C. generator
Fuse	10/10/10/15A

CAPACITIES

Fuel tank including reserve	19 L (5.0 US.gal)
	4.0 L (4.2 US.qt.)
Engine oil change	3.4 L (3.6 US.qt.)
change filter	3.8 L (4.0 US.qt.)
overhaul	4.2 L (4.4 US.qt.)
Front fork air pressure	0.8 kg/cm ² (11.4 psi)
Front fork oil	241 ml (8.15 US.oz.) in each leg
(At time of overhaul and replacement)	

* Specifications are subject to change without notice.

- MEMO -

Pistons \$268.17 Yoshimura Kit 4012

SPEED Graph	V.C. Hillclimb	60,820'
TIME	Fps	MPH
9:30	106,701	72,748
9:45	103,965	70,883
10:00	101,366	69,111
10:15	98,894	67,426
10:30	96,539	65,820
10:45	94,294	64,290
11:00	92,151	62,828
11:15	90,103	61,432
11:30	88,145	60,972

SP 500 (stat) 10.48 40 10.42 back
 63.992 64.570
 10:29 9:50 back
 65.925 70.283

1st run
 2nd

SERVICE SPECIFICATIONS

CONTENTS

SERVICE SPECIFICATIONS.....	2-2
ENGINE TOP END.....	2-2
ENGINE LOWER END.....	2-4
LUBRICATION SYSTEM.....	2-4
CLUTCH.....	2-4
TRANSMISSION.....	2-5
FUEL SYSTEM.....	2-5
IGNITION SYSTEM.....	2-6
CHARGING SYSTEM.....	2-6
LAMP WATTAGE.....	2-6
BRAKES + WHEELS.....	2-7
SUSPENSION + FRAME + STEERING.....	2-8
TORQUE TABLE.....	2-9
ENGINE.....	2-9
CHASSIS.....	2-9
TIGHTENING TORQUE CHART.....	2-10

SERVICE SPECIFICATIONS

ENGINE TOP END

Unit: mm (in.)

Valves + Guides		Standard	Service Limit
Tappet Clearance (Cold Engine)		0.03 ~ 0.08 (0.001 ~ 0.003)	—
Valve Stem Dia. O.D.	IN	6.960 ~ 6.975 (0.2740 ~ 0.3746)	6.90 (0.271)
	EX	6.945 ~ 6.960 (0.2734 ~ 0.2740)	6.80 (0.267)
Valve Stem Deflection		—	0.05 (0.002)
Valve Head Dia.	IN	38 (1.496)	—
	EX	32 (1.259)	—
Valve Thickness		—	0.5 (0.0197)
Valve Seat Width	IN/EX	1.1 ~ 1.3 (0.04 ~ 0.05)	—
Valve Guide I.D.	IN/EX	7.000 ~ 7.015 (0.2756 ~ 0.2762)	—
Valve to Guide Clearance	IN	0.025 ~ 0.055 (0.0009 ~ 0.0022)	0.090 (0.0035)
	EX	0.040 ~ 0.070 (0.0016 ~ 0.0028)	0.200 (0.0039)
Valve Spring Free Length	INNER	35.3 ~ 37.0 (1.39 ~ 1.46)	33.9 (1.33)
	OUTER	43.00 ~ 43.25 (1.692 ~ 1.702)	41.3 (1.63)
Valve Spring Tension	INNER	29.3 ~ 34.0 kg/23 mm (64.59 ~ 74.96 lbs./0.91 in.)	—
	OUTER	50.4 ~ 58.3 kg/27 mm (111.11 ~ 128.53 lbs./1.06 in.)	—
Camshaft			
Cam Lift	IN	8.0 (0.31)	—
	EX	7.5 (0.30)	—
Cam Height	IN	36.325 ~ 36.355 (1.4301 ~ 1.4313)	36.030 (1.4185)
	EX	35.775 ~ 35.805 (1.4085 ~ 1.4096)	35.480 (1.3968)
Camshaft Journal Holder I.D.		22.000 ~ 22.013 (0.8661 ~ 0.8667)	—

	Standard	Service Limit
Camshaft Journal O.D.	21.960 ~ 21.975 (0.8646 ~ 0.8652)	—
Camshaft/Journal Clearance	0.025 ~ 0.053 (0.0010 ~ 0.0021)	0.150 (0.0059)
Camshaft Deflection	—	0.10 (0.004)
Cam Chain Tensioner Guide Roller Wear	—	2.5 (0.098)
Camshaft Chain Size	D1D219FTS	—
Number of Chain Links	120	—
Cam Chain 20-pitch Length	—	157.80 (6.213)
Piston + Rings + Cylinders		
Compression Pressure Difference between Cylinders	9 ~ 13 kg/cm ² (128 ~ 184 psi)	7 kg/cm ² (100 psi) 2 kg/cm ² (28.5 psi)
Cylinder Bore Dia.	70.000 ~ 70.015 (2.7559 ~ 2.7565)	70.080 (2.7590)
Cylinder and Cylinder Head Warpage	—	0.2 (0.008)
Piston Dia./Measured at	(15 mm (0.59) above skirt end) 69.945 ~ 69.960 (2.7537 ~ 2.7543)	69.880 (2.7512)
Piston/Cylinder Clearance	0.050 ~ 0.060 (0.0020 ~ 0.0024)	0.120 (0.0047)
Piston Ring Free End Gap (Top and 2nd)	Approx. 8.5 (0.33)	6.8 (0.27)
Piston Ring End Gap (Top and 2nd)	0.15 ~ 0.35 (0.006 ~ 0.014)	0.70 (0.028)
Piston Ring Thickness	Top 1.175 ~ 1.190 (0.0463 ~ 0.0469)	—
	2nd 1.170 ~ 1.190 (0.0461 ~ 0.0469)	—
Piston Ring Groove Width (Top, 2nd and Oil-Ring)	TOP 1.21 ~ 1.23 (0.047 ~ 0.048)	—
	2nd 1.21 ~ 1.23 (0.047 ~ 0.048)	—
	Oil-ring 2.51 ~ 2.53 (0.099 ~ 0.100)	—
Piston Ring to Groove Clearance (Top, 2nd and Oil-Ring)	Top 0.020 ~ 0.055 (0.0008 ~ 0.0022)	0.180 (0.0071)
	2nd 0.020 ~ 0.060 (0.0008 ~ 0.0024)	0.150 (0.0059)
Piston Pin O.D.	17.995 ~ 18.000 (0.7085 ~ 0.7087)	—
Piston Pin Bore I.D.	18.002 ~ 18.008 (0.7087 ~ 0.7090)	—

	Standard	Service Limit
Piston Pin/Bore Clearance	0.002 ~ 0.013 (0.0001 ~ 0.0005)	0.120 (0.0047)

ENGINE LOWER END

Crankshaft	Standard	Service Limit
Connecting Rod Small End Bore	18.006 ~ 18.014 (0.7089 ~ 0.7092)	—
Connecting Rod Deflection	—	3 (0.11)
Connecting Rod Big End Side Clearance	0.10 ~ 0.65 (0.004 ~ 0.026)	1.00 (0.039)
Crankshaft Runout	—	0.10 (0.003)

LUBRICATION SYSTEM

Oil Pump	Standard	Service Limit
Trochoid Oil Pump — Discharge rate (Lit/HR/rmp)	1.85/min/500	—
Output Pressure	1 kg/cm ² (14.22 psi)	—
Cranking Speed	862 rpm	—
Operational Speed Reduction Ratio	1.723	—
Tip Clearance	—	0.2 (0.008)
Outer Rotor Clearance	—	0.25 (0.010)
Side Clearance	—	0.15 (0.006)
Oil Pressure (60°C, 92°F)	Over 0.1 kg/cm ² (1.42 psi) at 3,000 rpm Below 0.5 kg/cm ² (7.11 psi)	

CLUTCH

	Standard	Service Limit
Clutch Drive Plate Thickness	2.7 ~ 2.9 (0.10 ~ 0.11)	2.4 (0.09)
Clutch Drive Plate Distortion	—	0.2 (0.008)
Clutch Drive Plate Claw Width	15.6 ~ 15.8 (0.61 ~ 0.62)	14.8 (0.58)

	Standard	Service Limit
Clutch Driven Plate Thickness	—	1.6 (0.06)
Clutch Driven Plate Distortion	—	0.1 (0.004)
Clutch Spring/Free Length	39.0 ~ 40.5 (1.54 ~ 1.59)	37.1 (1.46)

TRANSMISSION

	Standard	Service Limit
Gear Ratios	Primary reduction 1.775 (87/49) Final reduction 2.800 (42/15) Gear ratios, Low 2.500 (35/14) 2nd 1.777 (32/18) 3rd 1.380 (29/21) 4th 1.125 (27/24) Top 0.961 (25/26)	
Primary Drive — Driven Gears Backlash	0 ~ 0.03 (0 ~ 0.001)	0.08 (0.003)
Gear Backlash	1st, 2nd and 3rd 0 ~ 0.04 (0 ~ 0.002)	0.09 (0.004)
	4th and Top 0.05 ~ 0.10 (0.002 ~ 0.004)	0.15 (0.006)
Shift Fork Thickness	4.95 ~ 5.05 (0.195 ~ 0.199)	—
Shift Fork — Groove Clearance	0.4 ~ 0.6 (0.016 ~ 0.024)	0.8 (0.031)
Shift Fork Groove Width	5.45 ~ 5.55 (0.215 ~ 0.219)	—
Countershaft Ass'y Length	109.4 ~ 109.5 (4.307 ~ 4.311)	—
Drivechain Size	RK630GSO, 96 links (TAKASAGO MAKE)	

FUEL SYSTEM

Idle rpm's	900 ~ 1,100 rpm
Carb Type	MIKUNI VM26SS
Carb I.D. Number	49020
Bore Size	26 (1.023)
Float Height	23 ~ 25 (0.90 ~ 0.98)
Fuel Level	3 ~ 5 (0.12 ~ 0.20)
Air Screw	PRE-SET (DO NOT DISTURB)

SERVICE SPECIFICATIONS

Pilot Screw	PRE-SET (DO NOT DISTURB)
Pilot Air Jet	1.2
Pilot Jet	#15
Cut-a-Way	1.5
Jet Needle	5DL36-3
Needle Jet	O-2
Main Air Jet	1.5
Main Jet	#95 <i>115</i>
Throttle Cable Free Play	1.0 ~ 1.5 (0.039 ~ 0.059)
Air Filter—Type	Paper Element

IGNITION SYSTEM

	Standard	Service Limit
Ignition Timing	17° B.T.D.C. below, 1,500 rpm and 37° B.T.D.C. above 2,500 rpm	
Spark Plug Heat Range	NGK: B-8ES NIPPON DENSO : W24ES	—
Spark Plug Gap	0.6 ~ 0.8 (0.024 ~ 0.031)	—
Ignition Point Gap	0.3 ~ 0.4 (0.012 ~ 0.016)	—
Ignition Point Dwell	180°	—
Spark Performance (over—mm at 1 atm.)	7 (0.28)	—
Condenser Capacity Mfd.	0.18 ±0.02	—
Ignition Coil Resistance Primary	Approx. 4Ω	—
Ignition Coil Resistance Secondary	Approx. 15kΩ	—

CHARGING SYSTEM

Alternator Output	14V, 18A/5,000 rpm	
Battery Capacity/Code Number/Specific Gravity @20°	12V, 14Ah/12N14-3A/1.280 at 20°C	
Brush Length	12 ~ 13 (0.47 ~ 0.51)	6 (0.24)
Commutator Undercut	0.6 (0.023)	0.2 (0.008)
DC Line “no-load” Voltage	More than 16.5V at 5,000 rpm	

LAMP WATTAGE

Fuse	10/10/10/15A
Headlamp	12V 50/40W
Tail/Brake Lamp	12V 8/23W (3/32 cp)
Turn Signal Lamp	12V 23W (32 cp)
License Plate Lamp	12V 8W (3 cp)
Speedometer Lamp	12V 3.4W
Tachometer Lamp	12V 3.4W
Neutral Indicator Lamp	12V 3.4W
High Beam Indicator Lamp	12V 3.4W
Turn Signal Pilot Lamp	12V 3.4W
Oil P. Indicator Lamp	12V 3.4W

BRAKES + WHEELS

		Standard	Service Limit	
Brake Disc Thickness	Front	6.5 ~ 6.9 (0.26 ~ 0.27)	Under	6.0 (0.24)
	Rear	6.5 ~ 6.9 (0.26 ~ 0.27)	Under	6.0 (0.24)
Brake Disc Runout		—		0.30 (0.012)
Brake Caliper Piston Dia. Front		42.82 (1.686)	Under	42.77 (1.684)
Brake Caliper Cylinder Dia. Front		42.85 (1.687)	Over	42.89 (1.689)
Brake Caliper Piston Dia. Rear		38.15 (1.502)	Under	38.13 (1.501)
Brake Caliper Cylinder Dia. Rear		38.18 (1.503)	Over	38.19 (1.504)
Brake Master Cylinder Piston Dia. Front		13.96 (0.550)	Under	13.94 (0.549)
Brake Master Cylinder Dia. Front		14.00 (0.551)	Over	14.05 (0.553)
Brake Master Cylinder Piston Dia. Rear		13.96 (0.550)	Under	13.94 (0.549)
Brake Master Cylinder Dia. Rear		14.00 (0.551)	Over	14.05 (0.553)
Wheel Rim Runout—Axial, Radial	Front and Rear	Axial		Radial
		2.0 (0.08)		2.0 (0.08)
Axle Runout	Front and Rear	—		0.25 (0.010)

SERVICE SPECIFICATIONS

Tire Size	Front	3.25V19 — 4PR	
	Rear	4.00V18 — 4PR	
Front Wheel Tread Depth		—	1.6 (0.06)
Rear Wheel Tread Depth		—	2.0 (0.08)
Front Tire Pressure (Normal Solo Riding)		175 kPa, 1.75 kg/cm ² (25 psi)	
Rear Tire Pressure (Normal Solo Riding)		200 kPa, 2.00 kg/cm ² (28 psi)	

SUSPENSION + FRAME + STEERING

	Standard	Service Limit
Fork Fluid Viscosity and Fork Oil Capacity	SAE 10W/20, 241 cc (8.15 US.oz.) in each leg	
Front Fork Air Pressure	0.8 kg/cm ² (11.4 psi)	
Fork Oil Level	140 (5.51)	

TORQUE TABLE

ENGINE

	Thread dia.	kg-m	lb-ft
Camshaft holder bolt	6	1.0	7.0
Cylinder head bolt	6	0.9 ~ 1.4	6.5 ~ 10.0
Cylinder head nut	10	3.7	27.0
Cylinder head cover bolt	6	0.9	6.5
Crankcase bolt	6	1.0	7.0
Crankcase bolt	8	2.0	14.5
Starter motor bolt	5	0.2 ~ 0.4	1.5 ~ 3.0
Oil pan bolt	6	0.6 ~ 0.9	4.5 ~ 6.5
Engine mounting bolt	8	2.5	18.0
Engine mounting bolt	10	3.5	25.5
Primary drive rear bolt	6	1.5 ~ 2.0	11.0 ~ 14.5
Starter clutch bolt	6	1.5 ~ 2.0	11.0 ~ 14.5
Camshaft sprocket bolt	6	0.8 ~ 1.1	6.0 ~ 8.0
Cam chain guide bolt No. 4	6	0.4 ~ 0.7	3.0 ~ 5.0
Cam chain tensioner bolt	8	0.9 ~ 1.4	6.5 ~ 10.0
Cam chain tensioner adjuster bolt	6	0.4 ~ 0.7	3.0 ~ 5.0
Air cleaner bolt	6	0.4 ~ 0.7	3.0 ~ 5.0
Exhaust pipe bolt	8	0.9 ~ 1.4	6.5 ~ 10.0
Muffler bolt	10	1.8 ~ 2.8	13.0 ~ 20.0
Pressure switch housing	6	0.6 ~ 0.9	4.5 ~ 6.5
Clutch spring bolt	6	1.1 ~ 1.3	8.0 ~ 9.5
Clutch sleeve hub nut	24	5.0 ~ 7.0	36.0 ~ 50.5
Clutch release arm bolt	6	0.6 ~ 1.0	4.5 ~ 7.0
Gear shifting cam stopper spring holder bolt holder		1.8 ~ 2.8	13.0 ~ 20.0
Gear shift arm stopper		1.5 ~ 2.3	11.0 ~ 16.5
Gear shift lever bolt	8	1.3 ~ 2.3	9.5 ~ 16.5
Engine sprocket nut		9.0 ~ 10.0	65.0 ~ 72.5
Generator rotor bolt	12	9.0 ~ 10.0	65.0 ~ 72.5

CHASSIS

	Thread dia.	kg-m	lb-ft
Handle holder bolt	8	1.2 ~ 2.0	8.5 ~ 14.5
Steering stem head center side bolt	8	1.5 ~ 2.5	11.0 ~ 18.0
Front fork tube upper pinch bolt (R, L)	10	2.0 ~ 3.0	14.5 ~ 21.5
Front fork tube lower pinch bolt (R, L)	8	1.5 ~ 2.5	11.0 ~ 18.0
Steering stem head center bolt	12	3.6 ~ 5.2	26.0 ~ 37.5
Front axle nut	12	3.6 ~ 5.2	26.0 ~ 37.5
Front axle holder nut	8	1.5 ~ 2.5	11.0 ~ 18.0
Swinging arm pivot shaft nut	16	5.0 ~ 8.0	36.0 ~ 58.0


	Thread dia.	kg-m	lb-ft
Rear torque link nut	10	2.0 ~ 3.0	14.5 ~ 21.5
Rear axle nut	18	8.5 ~ 11.5	61.5 ~ 83.0
Rear shock absorber bolt	10	2.0 ~ 3.0	14.5 ~ 21.5
Rear shock absorber nut	10	2.0 ~ 3.0	14.5 ~ 21.5
Front step bolt	10	2.7 ~ 4.3	19.5 ~ 31.0
Front brake caliper mounting bolt	10	2.5 ~ 4.0	18.0 ~ 29.0
Front and rear brake disc plate bolt	8	1.5 ~ 2.5	11.0 ~ 18.0
Front brake caliper axle bolt	10	2.5 ~ 3.5	18.0 ~ 25.5
Front brake master cylinder mounting bolt	6	0.5 ~ 0.8	3.5 ~ 6.0
Front and rear brake hose union bolt	10	1.5 ~ 2.5	11.0 ~ 18.0
Front and rear brake fluid bleeder bolt	7	0.6 ~ 0.9	4.5 ~ 6.5
Rear brake caliper mounting bolt	10	2.0 ~ 3.0	14.5 ~ 21.5
Rear brake caliper axle bolt	10	2.5 ~ 3.5	18.0 ~ 25.5
Rear brake master cylinder mounting bolt	8	1.5 ~ 2.5	11.0 ~ 18.0
Chain adjuster support bolt	8	1.0 ~ 1.5	7.0 ~ 11.0

TIGHTENING TORQUE CHART


For other bolts and nuts not listed above, refer to this chart:

Tightening Torque


Thread Diameter (mm)	Conventional or "4" Marked Bolt		"S" or "7" Marked Bolt	
	kg-m	lb-ft	kg-m	lb-ft
5	0.2 ~ 0.4	1.5 ~ 3.0	0.3 ~ 0.6	2.0 ~ 4.5
6	0.4 ~ 0.7	3.0 ~ 5.0	0.7 ~ 1.0	5.0 ~ 7.0
8	0.9 ~ 1.4	6.5 ~ 10.0	2.0 ~ 2.5	14.5 ~ 18.0
10	1.8 ~ 2.8	13.0 ~ 20.0	3.5 ~ 4.0	25.5 ~ 29.0

 


Conventional Bolt

 

"S" Marked Bolt

 

"4" Marked Bolt

 

"7" Marked Bolt

PERIODIC MAINTENANCE

CONTENTS

PERIODIC MAINTENANCE SCHEDULE.....	3-2
PERIODIC MAINTENANCE PROCEDURES.....	3-3
BATTERY.....	3-3
CYLINDER HEAD NUTS AND EXHAUST PIPE BOLTS.....	3-3
AIR CLEANER ELEMENT.....	3-4
TAPPET CLEARANCE.....	3-5
SHIM SELECTION CHART.....	3-8
SPARK PLUG.....	3-9
FUEL LINE.....	3-9
CONTACT BREAKER POINT.....	3-9
IGNITION TIMING.....	3-9
ENGINE OIL.....	3-11
ENGINE OIL FILTER.....	3-12
CARBURETOR IDLE RPM.....	3-12
CLUTCH.....	3-13
DRIVE CHAIN.....	3-13
BRAKE HOSES.....	3-15
TIRES.....	3-15
BRAKES.....	3-16
STEERING.....	3-16
FRONT FORKS.....	3-17
CHASSIS BOLTS AND NUTS.....	3-18

PERIODIC MAINTENANCE

IMPORTANT: The periodic maintenance intervals and service requirements have been established in accordance with EPA regulations. Following these instructions will ensure that the motorcycle will not exceed emission standards and it will also ensure the reliability and performance of the motorcycle.

NOTE:

More frequent servicing may be performed on motorcycles that are used under extreme service conditions, however, it is not necessary for ensuring emission level compliance.

The chart below lists the recommended intervals for all the required periodic service work necessary to keep the motorcycle operating at peak performance and to maintain proper emission levels. Mileages are expressed in terms of kilometers, miles and time for your convenience.

PERIODIC MAINTENANCE SCHEDULE

INTERVAL: THIS INTERVAL SHOULD BE JUDGED BY ODOMETER READING OR MONTHS WHICHEVER COMES FIRST	Mile	600	4000	7500	11000	15000
	Km	1000	6000	12000	18000	24000
	Month	2	12	24	36	48
Battery		—	I	I	I	I
Cylinder head nuts and exhaust pipe bolts		T	T	T	T	T
Air cleaner element	Clean every 3000 km (2000 miles), and replace every 12000 km (7500 miles).					
Tappet clearance		I	I	I	I	I
Spark plug		—	C	R	C	R
Fuel line	Replace every two years.					
Contact breaker point		I	I	I	I	I
Ignition timing		I	I	I	I	I
Engine oil	Change oil at initial 1000 km (600 miles) and initial 3000 km (2000 miles), and thereafter change every 3000 km (2000 miles).					
Engine oil filter		R	R	R	R	R
Carburetor idle rpm		A	A	A	A	A
Clutch		I	I	I	I	I
Drive chain		I	I	I	I	I
	Clean and lubricate every 1000 km (600 miles).					
Brake hose	Replace every two years.					
Brake		I	I	I	I	I
Tire		I	I	I	I	I
Steering		I	I	I	I	I
Front fork		—	—	I	—	I
Chassis bolts and nuts		T	T	T	T	T

NOTE: T = Tighten, A = Adjust, I = Inspect, R = Replace, C = Clean

PERIODIC MAINTENANCE PROCEDURES

This section describes the service procedures for each section of the Periodic Maintenance requirements.

BATTERY

**6,000; 12,000; 18,000; 24,000 km
4,000; 7,500; 11,000; 15,000 miles**

1. Remove air cleaner case to check battery.
2. Check that the vent pipe is tightly secured and undamaged, and is routed as shown below.
3. Check electrolyte for level and specific gravity. Add distilled water, as necessary, to keep the surface of the electrolyte above the LOWER level line but not above the UPPER level line.

For checking specific gravity, use a hydrometer to determine the charge condition.

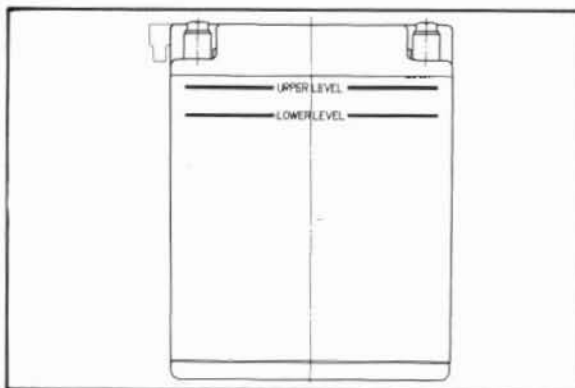


Fig. 3-1.

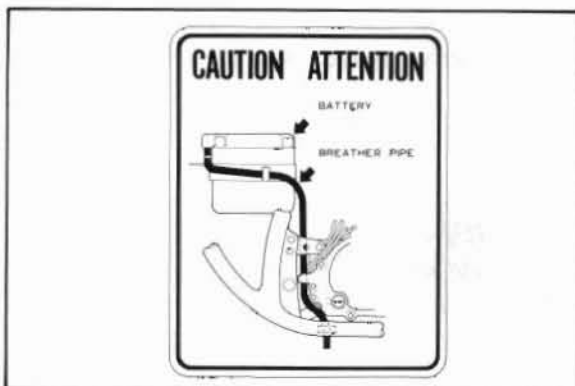


Fig. 3-2.

**Standard specific gravity:
1.280 at 20°C**

A S.G. reading of 1.20 (at 20°C) or under means that the battery needs recharging off the machine: take it off and charge it from a recharger. Charging the battery in place from the recharger can lead to rusting or even rupture of the rectifier.

CYLINDER HEAD NUTS AND EXHAUST PIPE BOLTS

**1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles**

1. CYLINDER HEAD

Remove the fuel tank.

Tighten the twelve 10 mm nuts to the specified torque with a torque wrench sequentially in the ascending numerical order, when engine is cold.

**Cylinder head nut tightening torque:
3.7 kg-m (27.0 lb-ft)**

After firmly tightening the 12 nuts, tighten three 6 mm bolts (indicated as (A)) to this torque value:

**Head bolt tightening torque:
0.9 ~ 1.4 kg-m (6.5 ~ 10.0 lb-ft)**

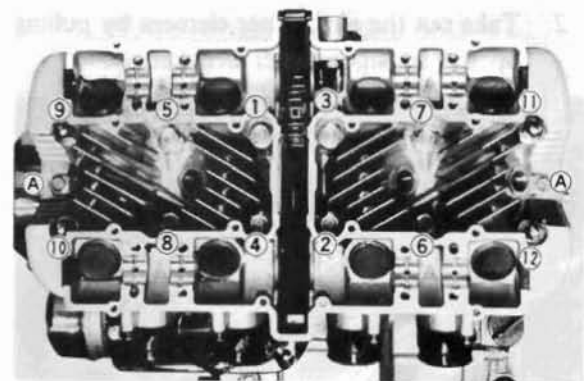


Fig. 3-3.

2. EXHAUST PIPE

Tighten the exhaust pipe bolts to the specified torque with a torque wrench.

Exhaust pipe bolt tightening torque:

0.9 ~ 1.4 kg-m
(6.5 ~ 10.0 lb-ft)

AIR CLEANER ELEMENT

Clean every 3,000 km (2,000 miles), and replace every 12,000 km (7,500 miles).

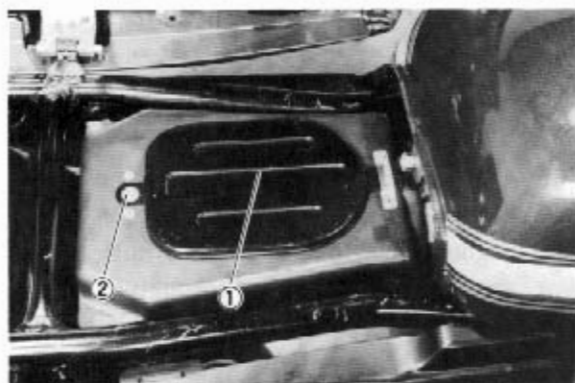


Fig. 3-4.

The air cleaner element is a paper type. If the air cleaner element is clogged with dust, intake resistance will increase with a resultant decrease in power output and increase in fuel consumption. Check and clean the air cleaner element every 2,000 miles (3,000 km) observing the following procedures.

1. Open the seat and remove the air cleaner case cover (1) by unscrewing the fixing screw (2).
2. Take out the air cleaner element by pulling up the spring retainer bracket (3).

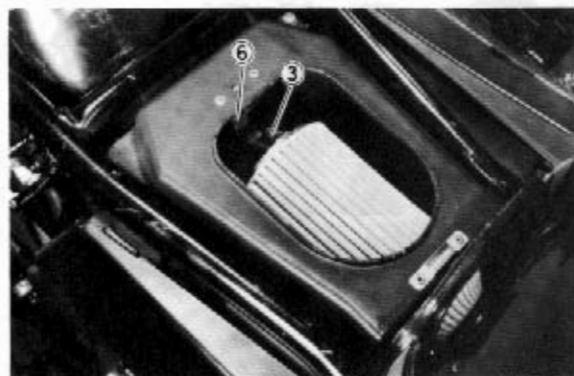


Fig. 3-5.

3. Carefully use an air hose to blow the dust from the cleaner element.

CAUTION:

Always use air pressure (4) on the inside of the cleaner element. If air pressure is used on the outside (5) dirt will be forced into the pores of the cleaner element thus restricting air flow through the cleaner element.



Fig. 3-6.

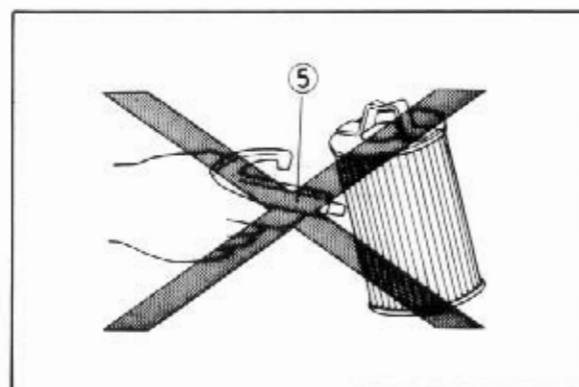


Fig. 3-7.

4. Reinstall the cleaned or new cleaner element in the reverse order of removal making sure that the spring bracket (3) is properly engaged with the securing spring (6).

CAUTION:

If driving under dusty conditions, clean the air cleaner element more frequently. The surest way to accelerate engine wear is to run the engine without the element or to use a ruptured element. Make sure that the air cleaner is in good condition at all times. Life of the engine depends largely on this component!

TAPPET CLEARANCE

**1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles**

CHECKING AND ADJUSTING THE TAPPET CLEARANCE

The tappet clearance specification is the same for both intake and exhaust valves. Too small a tappet clearance may reduce the engine power; too large a tappet clearance increases valve noise and hastens valve and seat wear. When the tappets are set to the specified clearance, the engine will run without excessive noise from the valve mechanism and will deliver full power. In this engine, the tappet clearance is increased or decreased by replacing the shim disc, made of a special wear-resistant material, fitted to the top of the tappet. The shim discs are easy to remove and refit. Tappet clearance adjustment must be checked and adjusted 1) at the time of periodic inspection, 2) when the valve mechanism is serviced, and 3) when the camshafts are disturbed by removing them for servicing.

CHECKING THE TAPPET CLEARANCE

Tappet clearance specification
(for both intake and exhaust valves):
0.03 ~ 0.08 mm
(0.001 ~ 0.003 in.)

NOTE:

- 1) The cam must be at position (A) or (B) in order to check the tappet clearance or to remove the shim disc. Clearance readings should not be taken with the cam in any other position than these two positions.
- 2) The clearance specification is for COLD state.
- 3) To turn the crankshaft for clearance checking, be sure to use a 19-mm wrench and to rotate in normal running direction.

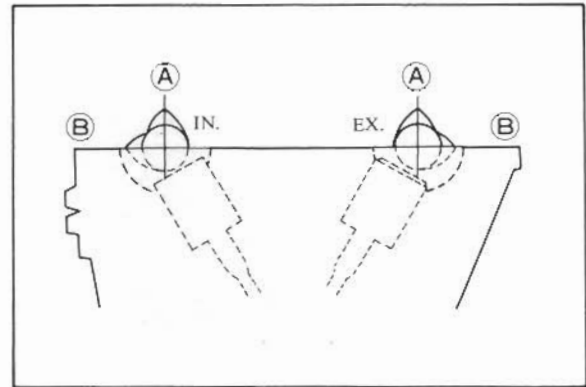


Fig. 3-8.

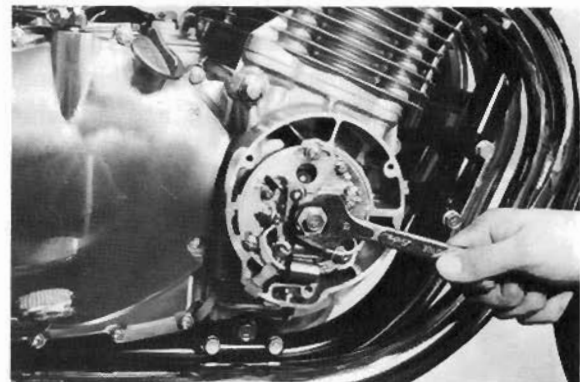


Fig. 3-9.

1. Turn crankshaft to bring the exhaust cam of No. 1 cylinder to this position. In this condition, read the clearance at the exhaust tappets of Nos. 1 and 2 cylinders. Use the thickness gauge (special tool: 09900-20803) on all tappets.

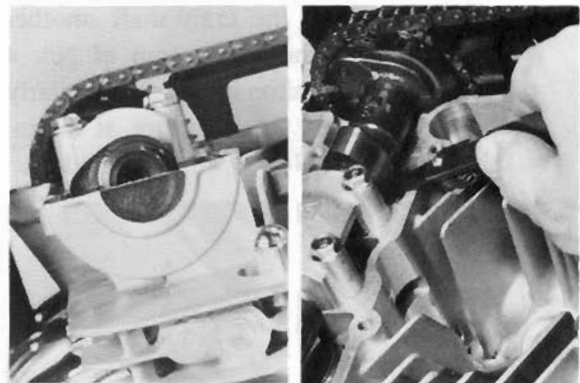


Fig. 3-10.

2. After setting the clearance to the specification at the exhaust tappets of Nos. 1 and 2 cylinders, turn the crankshaft by 180° (half rotation) to bring the intake cam of No. 1 cylinder to the position indicated. Read the clearance at the intake tappets of Nos. 1 and 2 cylinders and, where necessary, adjust the clearance to each specification.

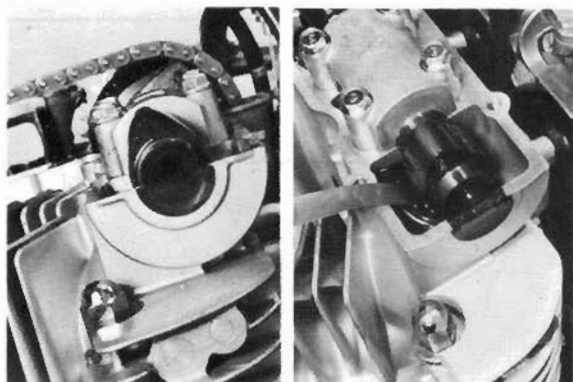


Fig. 3-11.

3. Turn over crankshaft another 180°, bringing the exhaust cam of No. 4 cylinder to the position indicated. Under this condition, repeat the checking and adjusting process outlined in step "1" at the exhaust tappets of Nos. 3 and 4 cylinders.

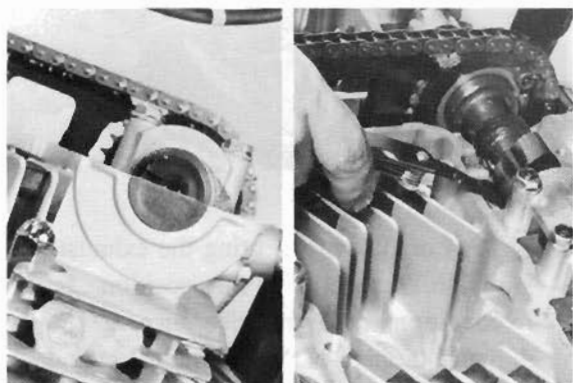


Fig. 3-12.

4. Again turn over the crankshaft another 180°, bringing the intake cam of No. 4 cylinder to the position indicated. Similarly check and adjust the clearance at the intake tappets of Nos. 3 and 4 cylinders.

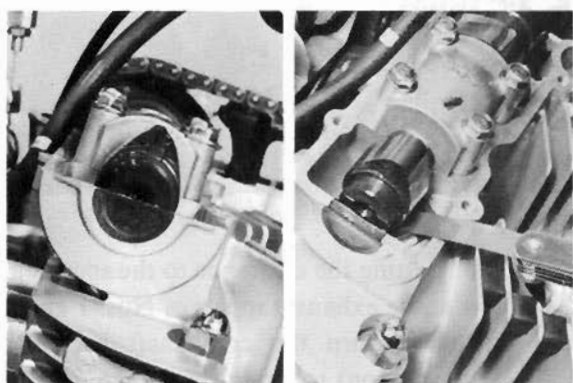


Fig. 3-13.

TAPPET CLEARANCE ADJUSTMENT

The clearance is adjusted by replacing the existing tappet shim by a thicker or thinner disc.

1. Put your fingertips to the tappet, and turn it in place to bring its notch ① to the position indicated.

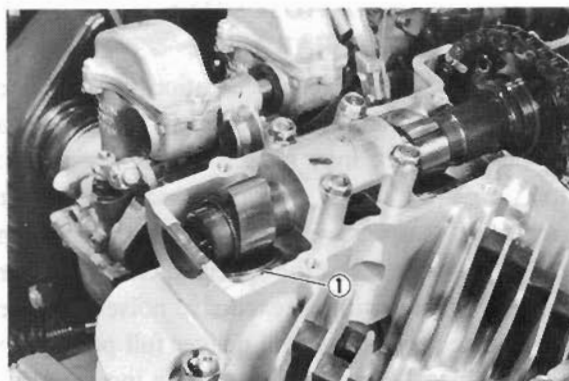


Fig. 3-14.

2. Using the tappet depressor (special tool: 09916-64510), push down the tappet.

NOTE:

Make sure the tool exerts pressure on the tappet correctly, as shown, with its tip hitched securely.

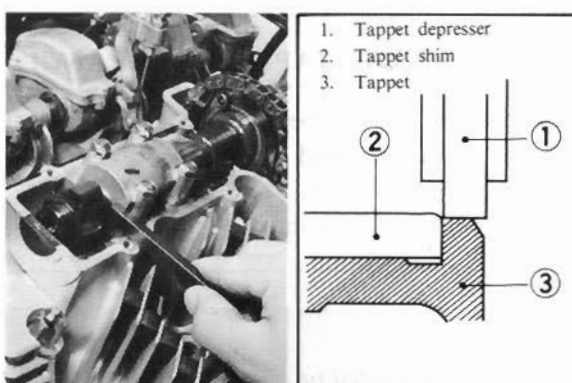


Fig. 3-15.

3. Pick out the tappet shim from the tappet, using a pair of forceps (special tool: 09916-84510).

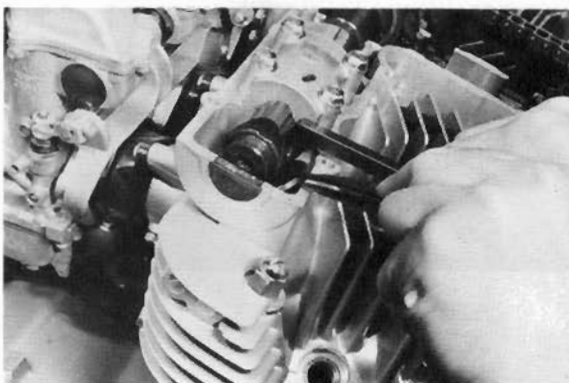


Fig. 3-16.

4. Check the figures punched on the shim. These figures indicate the thickness of the shim, as illustrated.

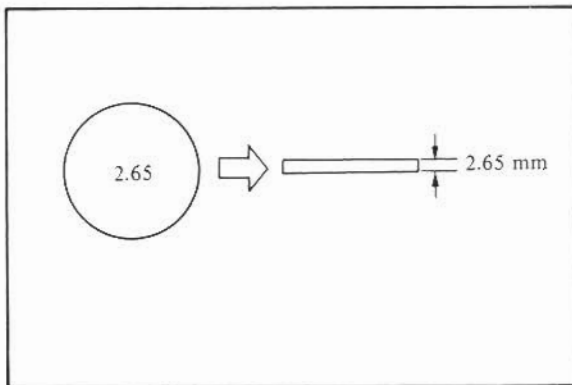


Fig. 3-17.

5. Select a replacement shim that will provide a clearance coming without the specified range (0.03 ~ 0.08 mm). For the purpose of this adjustment, a total of 20 sizes of tappet shim are available ranging from 2.15 to 3.10 mm in steps of 0.05 mm each. Fit the selected shim to the tappet.

Tappet shim size chart

No.	Thickness (mm)	Part No.
1	2.15	12892-45000
2	2.20	12892-45001
3	2.25	12892-45002
4	2.30	12892-45003
5	2.35	12892-45004
6	2.40	12892-45005
7	2.45	12892-45006
8	2.50	12892-45007
9	2.55	12892-45008
10	2.60	12892-45009
11	2.65	12892-45010
12	2.70	12892-45011
13	2.75	12892-45012
14	2.80	12892-45013
15	2.85	12892-45014
16	2.90	12892-45015
17	2.95	12892-45016
18	3.00	12892-45017
19	3.05	12892-45018
20	3.10	12892-45019

NOTE:


Before fitting the tappet shim to the tappet, be sure to oil its top and bottom faces with engine oil.

6. After replacing the tappet shim, check the clearance again to make sure that it is within the specified range.

SHIM SELECTION CHART

PART NUMBER — PREFIX 12892

P/N SUFFIX	45000	45001	45002	45003	45004	45005	45006	45007	45008	45009	45010	45011	45012	45013	45014	45015	45016	45017	45018	45019
Tappet Clearance (mm)	2.15	2.20	2.25	2.30	2.35	2.40	2.45	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10
0.00~0.02	2.15	2.20	2.25	2.30	2.35	2.40	2.45	2.50	2.55	2.60	2.65	2.70	2.75	2.80	2.85	2.90	2.95	3.00	3.05	3.10
0.03~0.08																				
0.09~0.13																				
0.14~0.18																				
0.19~0.23																				
0.24~0.28																				
0.29~0.33																				
0.34~0.38																				
0.39~0.43																				
0.44~0.48																				
0.49~0.53																				
0.54~0.58																				
0.59~0.63																				
0.64~0.68																				
0.69~0.73																				
0.74~0.78																				
0.79~0.83																				
0.84~0.88																				
0.89~0.93																				
0.94~0.98																				
0.99~1.03																				

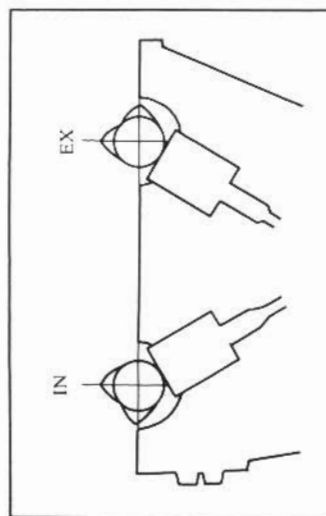

I. Measure tappet clearance. "ENGINE COLD"

II. Measure present shim size.

III. Match clearance in vertical column with present shim size in horizontal column.

EXAMPLE

Tappet clearance is — 0.55 mm
Present shim size — 2.40 mm
Shim size to be used — 2.90 mm

SPARK PLUG

6,000; 12,000; 18,000; 24,000 km
4,000; 7,500; 11,000; 15,000 miles

At initial 6,000 km, remove the carbon deposits with a wire or pin and adjust the spark plug gap to 0.6 ~ 0.8 mm (0.024 ~ 0.031 in.) by measuring with a thickness gauge.

Replace the plugs every 12,000 km and remove the carbon deposits and adjust the gap every 6,000 km after replacing the plugs.

Whenever removing the carbon deposits, be sure to observe the appearance of the plug, noting the color of the carbon deposit. The color observed tells whether the standard plug is suitable for your usage. If the standard plug is apt to get wet, the hotter plug should be used. If the standard plug is apt to overheat, with the porcelain having a whitish appearance, replace with the colder one.

Hot type spark plug:

NGK B7ES or NIPPON DENSO W22ES

Standard spark plug:

NGK B8ES or NIPPON DENSO W24ES

Cold type spark plug:

NGK B9ES or NIPPON DENSO W27ES

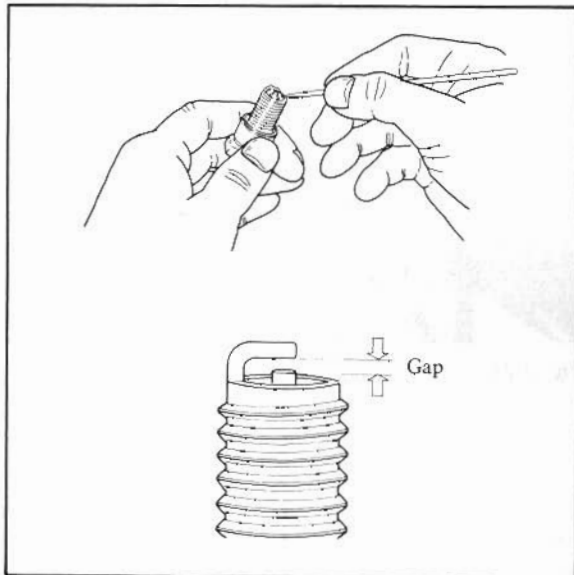


Fig. 3-18.

FUEL LINE (Replace every two years)

Replace the fuel hose every two years.

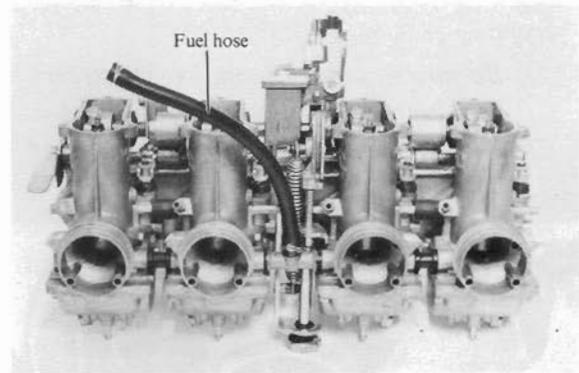


Fig. 3-19.

CONTACT BREAKER POINTS

1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles

Check and adjust the contact points as outlined in the next page. Inspect the contact points for wear and burning. If the point faces are dirty, wipe them clean with a clean and dry cloth.

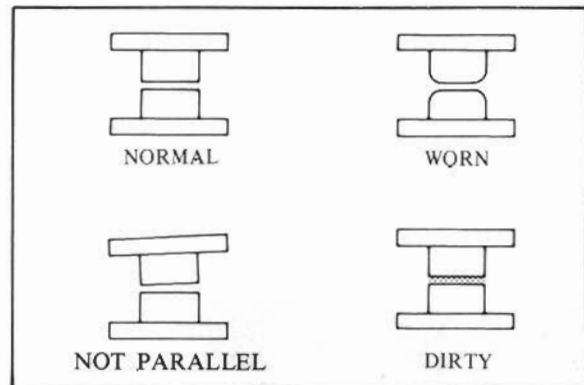


Fig. 3-20.

IGNITION TIMING

1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles

Ignition timing specifications

Point gap	0.35 ±0.05 mm (0.014 ±0.01 in.)
Spark plug gap	0.6 ~ 0.8 mm (0.024 ~ 0.031 in.)
Ignition timing	17° B.T.D.C. below 1,500 rpm and 37° B.T.D.C. above 2,500 rpm

NOTE:

- 1) Be sure to use a 19-mm wrench to turn over crankshaft in the direction shown.
- 2) Remove all four plugs until the adjustment is completed.

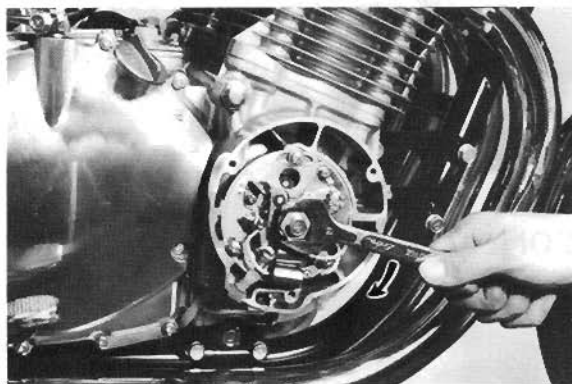


Fig. 3-21.

TIMING ADJUSTMENT FOR NOS. 1 AND 4 CYLINDERS

1. Set the contact point gap ① to 0.35 mm in the Nos. 1-4 breaker. To adjust the gap, loosen screw ② and displace terminal ③.
2. Connect the timing tester (09900-27003) between the (+) terminal of the same breaker and ground.

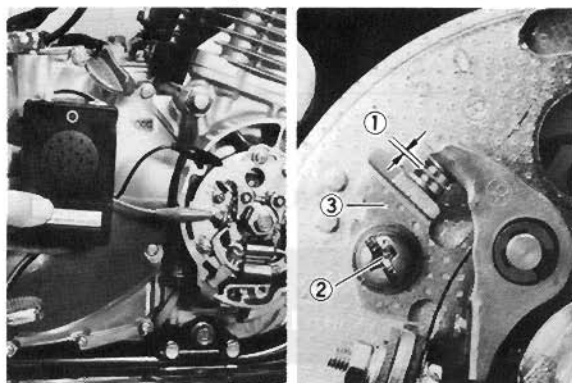


Fig. 3-22.

3. Slowly turn over crankshaft in normal direction until index mark ② (on the Nos. 1-4 side of the advance governor) comes into register with timing mark ④.
- ① : Corresponding to T.D.C. of Nos. 1-4 pistons
 ② : Timing index mark
 ③ : Ignition advance timing mark

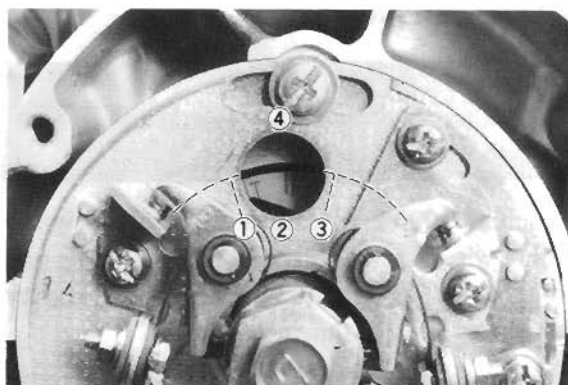


Fig. 3-23.

4. With the pistons brought to the specified B.T.D.C. position in Nos. 1 and 4 cylinder, as above, loosen the three screws ⑤ securing the breaker plate and turn the plate slowly counterclockwise until the contact points begin to separate. Secure the plate in that position by tightening the screws ⑤.
5. To check, turn over crankshaft slowly while paying attention to the timing tester. If the breaker begins to open its contact just when mark ② comes into register with mark ④, then it means that the adjustment is correct and that the ignition is timed as specified for Nos. 1 and 4 cylinders.

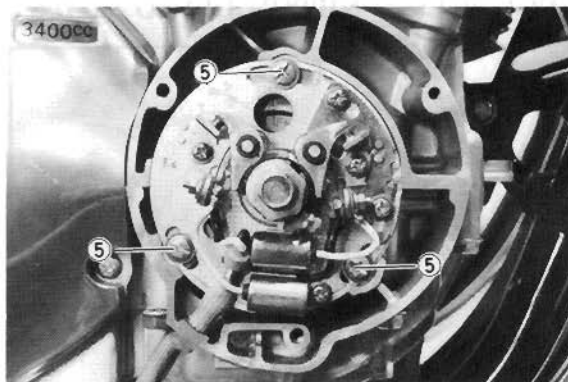


Fig. 3-24.

TIMING ADJUSTMENT FOR NOS. 2 and 3 CYLINDERS

The procedure is identical to the foregoing except for two points:

1. Bring mark "F" (on Nos. 2 ~ 3 side in the advance governor) into register with the timing mark.

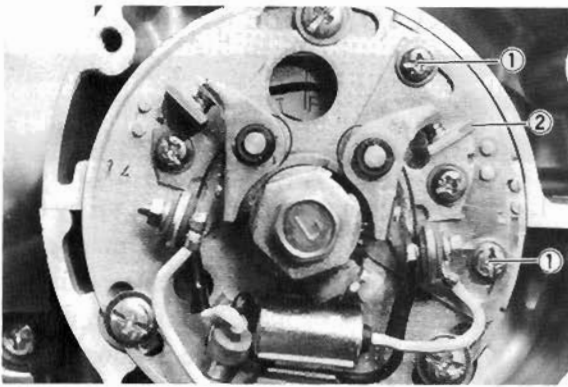


Fig. 3-25.

2. Loosen two screws ① and move plate ② counterclockwise to determine its position for the beginning of opening action.

CHECKING THE IGNITION TIMING WITH THE TIMING LIGHT

After setting the contact points of the twin breaker by adjusting in the above-described manner, check the performance of the timing mechanism by using the electro tester (09900-28106). Illuminate the advance governor with the timing light of this tester and vary the engine speed to see if the ignition is correctly timed or not. Here's the procedure:

1. Run the engine in the speed range not exceeding 1,500 rpm. Under this condition, "F" mark and timing mark should be in perfect alignment: if not, readjust the twin breaker referring to these marks in the advance governor.

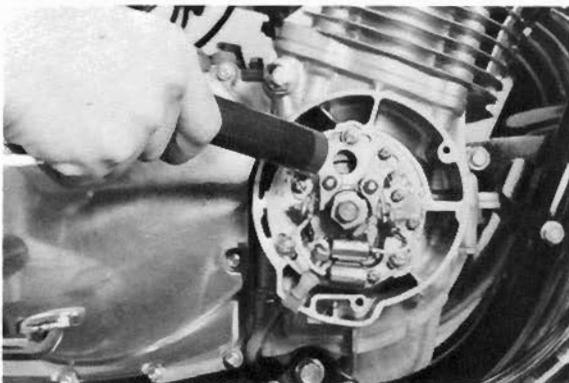


Fig. 3-26.

2. Run the engine in the speed range above 2,500 rpm; and similarly observe the position of mark ③ relative to mark ④. If the two marks are in register, it means that the ignition is properly advanced.

3. Carry out the above steps 1, 2 for Nos. 2 and 3 cylinders.

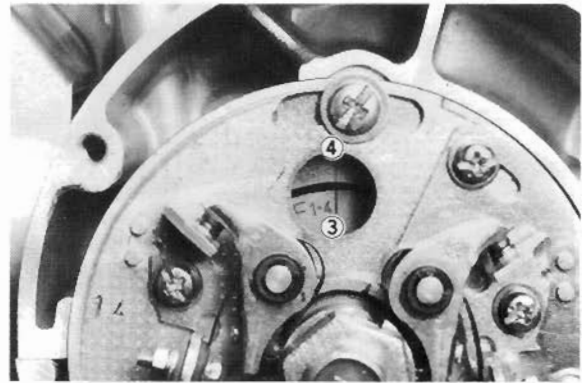


Fig. 3-27.

ENGINE OIL

Change oil at initial 1,000 km (600 miles) and initial 3,000 km (2,000 miles), and thereafter change every 3,000 km (2,000 miles).

The oil should be changed with the engine hot. The procedure is as follows:

- Keep the motorcycle upright, supported by the center stand.
- Place an oil pan below the engine and drain out the oil by removing the drain plug ① and filler cap ②.

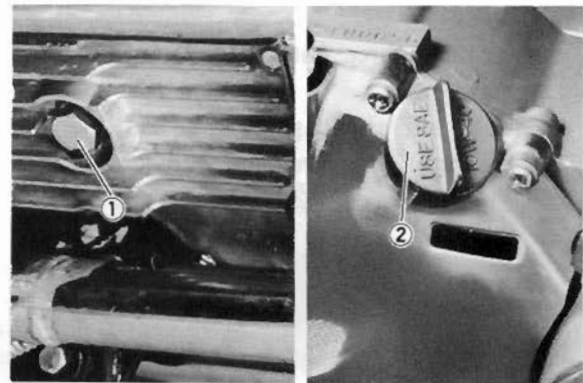


Fig. 3-28.

- Fit the drain plug ① securely, and add fresh oil through the filler. The oil pan will hold about 3.4 lit. (3.6 US.qt) of oil. Use API or SD oil with SAE 10W-40 viscosity.
- Start up the engine and allow it to run for several seconds at idling speed.
- Turn off the engine and wait about one minute, then check the oil level in the level gauge ③. If the level is below "F" mark, add oil to reach the level.

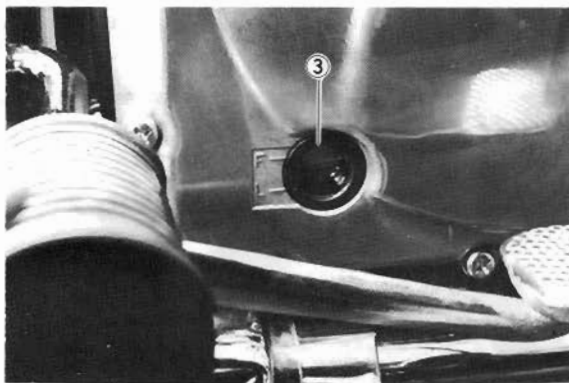


Fig. 3-29.

NOTE:

- When replacing the oil filter, the amount of oil to be replaced is 3.8 L (4.0 US.qt).
- When performing engine overhaul, the amount of oil to be replaced is 4.2 L (4.4 US.qt).

ENGINE OIL FILTER

**1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles**

Replace the oil filter by a new one in the following way:

1. Remove three nuts ① securing the filter cap ②.
2. Take off the cap ②, pull out the old element ③ and replace with a new one.
3. Put on the cap ② and secure it tightly.

NOTE:

Pour about 3,800 ml (4.0 US.qt) of engine oil into oil pan only when changing oil and replacing oil filter at the same time.

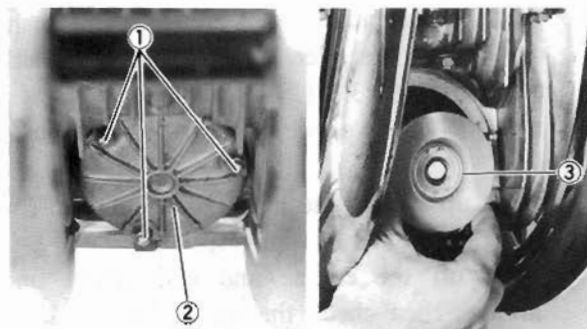


Fig. 3-30.

CARBURETOR IDLE RPM

**1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles**

1. Start up the engine and warm it up by running it at 1,500 rpm for 10 minutes in summer, when ambient temperature is 30°C (86°F), or for 20 minutes in winter, when ambient temperature is down to approx. -5°C (23°F).
2. After engine warms up, turn the throttle stop screw in or out so that engine runs at 900 ~ 1100 rpm.

CAUTION:

No adjustment except the procedure mentioned above is necessary because calibration is performed by carburetor manufacturer.

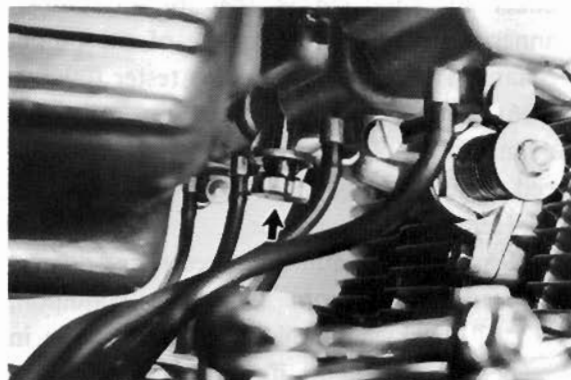


Fig. 3-31.

At the same intervals, adjust the throttle cable play in the following way:

THROTTLE CABLE ADJUSTMENT

A twin throttle cable system is used in your GS1000: One cable (B) is for pulling and the other cable (A) for returning.

Pulling cable play

The throttle cable should be adjusted to have a slack ① of 3 ~ 5 mm (0.12 ~ 0.20 in.) at the middle point between adjusting holder ② and throttle cable end ③ of the carburetor side.

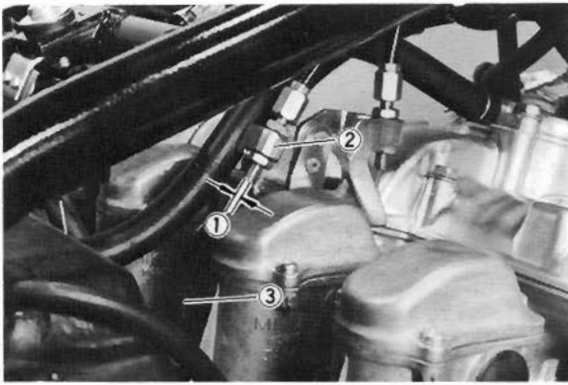


Fig. 3-32.

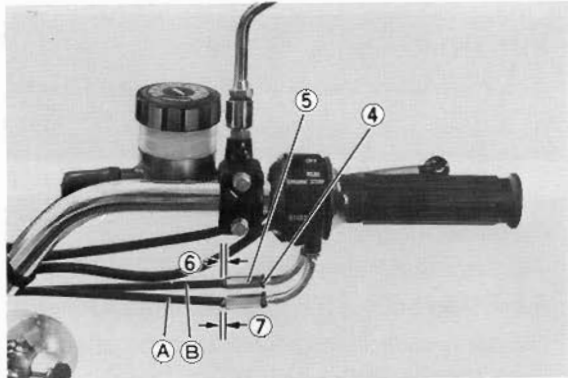


Fig. 3-33.

NOTE:

Inspect the cable slack at times, and if necessary, adjust it to the specified value. The cable end could come out when the sag is excessive.

1. Loosen lock nut (4).
2. Turn adjusting nut (5) to introduce a cable play (6) of 1.0 ~ 1.5 mm (0.04 ~ 0.06 in.).
3. Tighten lock nut (4).

Returning cable play

1. Reduce the play (7) to zero by turning its adjusting nut, and securely tighten the lock nut.

CLUTCH

1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles

CLUTCH CABLE ADJUSTMENT

Loosen lock nuts (1) at the lever side of clutch cable and screw adjust nut (2) fully into the clutch lever side.



Fig. 3-34.

Loosen the lock nut for the cable, tighten the adjust nut and provide play to outer cable. Adjust the play of the cable with adjusting nut (2) until the play (1) of the clutch lever becomes 2 ~ 3 mm. Next, firmly secure lock nut (3).

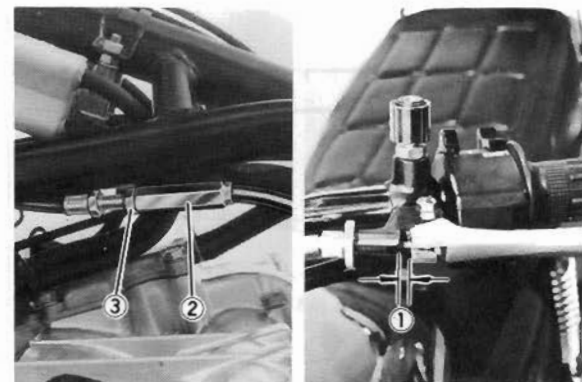


Fig. 3-35.

When the adjustment can not be attained by the adjusting nut (2) shown in the above drawing, carry out the adjustment using the adjust nut on the clutch lever side.

DRIVE CHAIN

Inspect

1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles

Clean and lubricate

..... every 1,000 km (600 miles)

PERIODIC MAINTENANCE

Check the drive chain for wear and adjust the chain tension as follows:

- Loosen axle nut ① after pulling out cotter pin ②.
- Adjust the drive chain by turning the right and left chain adjuster bolts ③ after loosening the lock nut ④. Turning adjuster bolt in tightens chain.

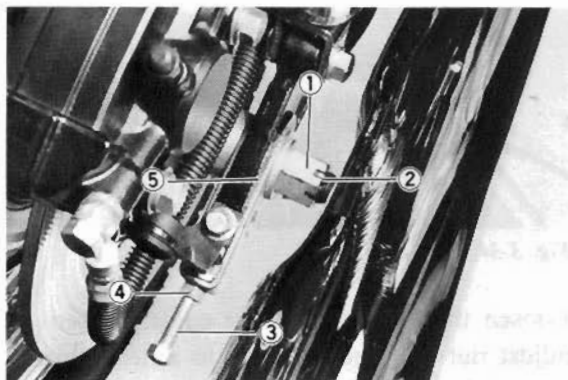


Fig. 3-36.

Chain slack (at the middle of two sprockets)	20 mm (0.8 in.)
--	-----------------

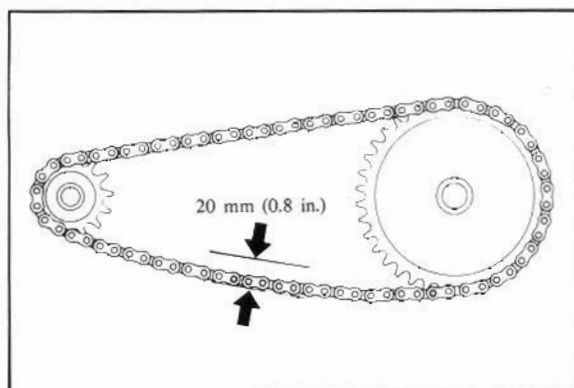


Fig. 3-37.

- Mark ⑤ on both chain adjusters must indicate the same position to show that the front and rear wheels are correctly aligned.
- After adjusting the drive chain tighten the axle nut securely and lock it with a cotter pin ②. Be sure to use a new cotter pin.

NOTE:

If the indicator mark ① on chain adjuster aligns with the end of swing arm ②, replace the drive chain with a new one.

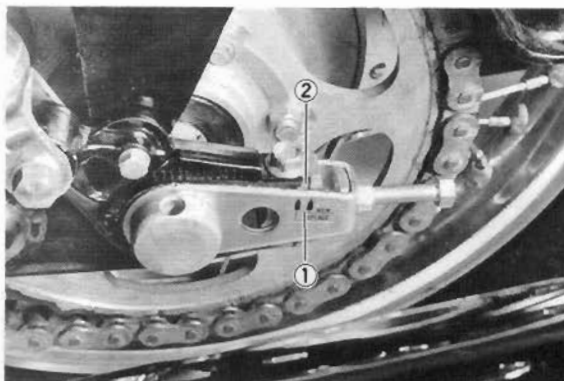


Fig. 3-38.

CAUTION:

Never allow the chain slack to exceed 50 mm (2 in.)

CAUTION:

The standard drive chain is TAKASAGO RK630 GSO. SUZUKI recommends that the above-mentioned standard drive chain be used for the replacement.

The number of pitches and links of the GS1000 drive chain is the same as for the GS750 drive chain. However, as they differ from each other in precision and material, do not use the GS750 drive chain for the GS1000.

Visually check the drive chain for the below-listed possible malconditions. (Set up the machine on its center stand, and turn the rear wheel slowly by hand, with the transmission shifted to Neutral.)

1. Loose pins
2. Damaged rollers
3. Dry or rusted links
4. Kinked or binding links
5. Excessive wear
6. Improper chain adjustment

CHAIN CLEANING AND OILING

At intervals of 1,000 km, clean and lubricate the chain, as follows:

Cleaning by washing

Wash the chain with kerosene. If the chain tends to rust faster, the intervals must be shortened.

CAUTION:

Do not use trichlene, gasoline or any similar fluids: These fluids have too great a dissolving power for this chain and, what is more important, can spoil the "O" rings confining the grease in the bush-to-pin clearance.

Remember, high durability comes from the presence of grease in that clearance.

Oiling

After washing and drying the chain, oil it with a heavy-weight motor oil.

CAUTION:

Do not use any oil sold commercially as "drive chain oil". Such oil too can spoil the "O" rings.

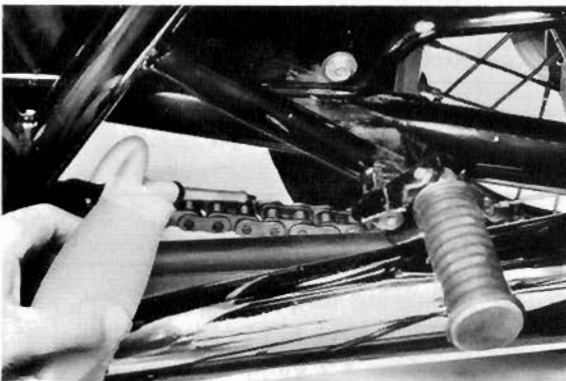


Fig. 3-39.

BRAKE HOSES (Replace every two years)

Replace the brake hoses by new ones.

TIRES

**1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles**

Inspect the tire for wear and damage and check the tire tread depth as shown. Replace a badly worn or damaged tire. A tire with its tread worn down to the limit (in terms of tread depth) must be replaced.

Tread depth service limit:

Front: 1.6 mm (0.06 in.)

Rear: 2.0 mm (0.08 in.)

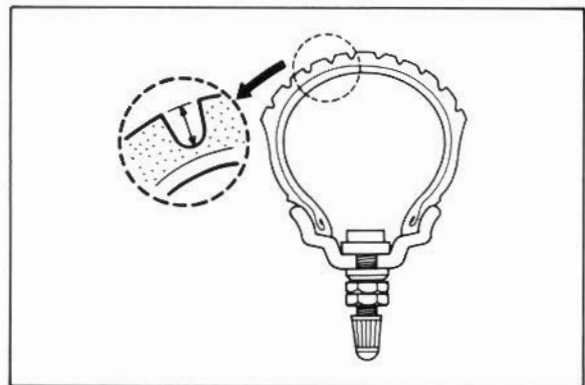


Fig. 3-40.

Check the tire inflation pressure, and examine the valve for evidence of air leakage.

COLD INFLATION TIRE PRESSURE	FRONT				REAR			
	Solo Riding		Dual Riding		Solo Riding		Dual Riding	
	psi	kg/cm ²	psi	kg/cm ²	psi	kg/cm ²	psi	kg/cm ²
NORMAL RIDING	25	1.75	28	2.00	28	2.00	32	2.25
CONTINUOUS HIGH SPEED RIDING	28	2.00	32	2.25	32	2.25	40	2.80

BRAKES

1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles

Check the front and rear brake systems for the following items:

1. Insufficient brake power
2. Brake squeaking
3. Excessive brake lever stroke
4. Leakage of brake fluid

If these troubles are detected, repair or replace the damaged parts as indicated in the chart below.

Symptom and possible cause	Countermeasure
INSUFFICIENT BRAKE POWER	
1) Leakage of brake fluid from hydraulic system	Repair or replace
2) Worn pads	Replace
3) Oil adhesion on engaging surface of pads	Clean disc and pads
4) Worn disc	Replace
5) Air entered into hydraulic system	Bleed air
BRAKE SQUEAKING	
1) Carbon adhesion on pad surface	Repair surface with sandpaper
2) Tilted pad	Modify pad fitting
3) Damaged wheel bearing	Replace
4) Loosened front-wheel axle or rear-wheel axle	Tighten to regular torque
5) Worn pads	Replace
6) Foreign substance entered into brake fluid	Replace brake fluid
7) Clogged return port of master cylinder	Disassemble and clean master cylinder
EXCESSIVE BRAKE LEVER STROKE	
1) Air entered into hydraulic system	Bleed air
2) Insufficient brake fluid	Replenish fluid to normal level; bleed air
3) Improper quality of brake fluid	Replace by correct fluid
LEAKAGE OF BRAKE FLUID	
1) Insufficient tightening of connection joints	Tighten to specified torque
2) Cracked hose	Replace

STEERING

1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles

Check that there is no abnormal rattle from the handlebar when it is shaken sideways and up and down. If a rattling sound is detected, the following bolts should be checked whether they are properly tightened or not.

1. Steering stem head center bolt ①.
2. Handlebar holder bolts ②.
3. Upper and lower pinch bolts ③, ④.

Tightening torque:
 Steering stem head center bolt:
 3.6 ~ 5.2 kg-m
 (26.0 ~ 37.5 lb-ft)
 Handle holder bolt:
 1.2 ~ 2.0 kg-m
 (8.5 ~ 14.5 lb-ft)
 Upper pinch bolt:
 2.0 ~ 3.0 kg-m
 (14.5 ~ 21.5 lb-ft)
 Lower pinch bolt:
 1.5 ~ 2.5 kg-m
 (11.0 ~ 18.0 lb-ft)

If it still rattles even after these bolts are correctly tightened, disassemble the steering stem and inspect the following items and replace, if necessary, the malfunctioning parts.

1. Wear of the races ⑤, ⑥.
2. Wear or damage of bearings ⑦.
3. Distortion of steering stem ⑧.

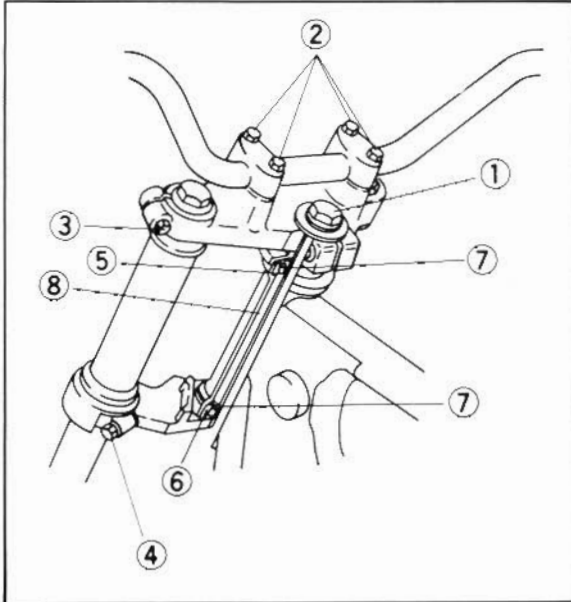


Fig. 3-41.

FRONT FORKS

**12,000; 24,000 km
7,500; 15,000 miles**

Check the air pressure of the front fork in the following way.

1. Set the machine on its center stand, and keep the front wheel off the floor.
2. Measure the air pressure by setting the pressure gauge to the valve as shown.

Specified air pressure:
0.8 kg/cm² (11.4 psi)



Fig. 3-42.

3. If necessary, inject water-free hand pump through the valve until the pressure gauge reads the specified value.

NOTE:

- 1) Just before charging with air, see if the valve is tightened.
- 2) Try to equalize the air pressure of the right and left forks, as closely as possible. The maximum permissible difference is 0.1 kg/cm².

CHASSIS BOLTS AND NUTS

1,000; 6,000; 12,000; 18,000; 24,000 km
600; 4,000; 7,500; 11,000; 15,000 miles

The bolts and nuts listed hereunder are important safety parts. They must be retightened, as necessary, to the specified torque with a torque wrench. (Refer to page 3-19 for the position of the following bolts and nuts on the motorcycle.)

1) Handlebar holder bolt	1.2 ~ 2.0 kg-m (8.5 ~ 14.5 lb-ft)
2) Steering stem center side bolt	1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)
3) Front fork tubes upper pinch bolt (R and L)	2.0 ~ 3.0 kg-m (14.5 ~ 21.5 lb-ft)
4) Steering stem head center bolt	3.6 ~ 5.2 kg-m (26.0 ~ 37.5 lb-ft)
5) Brake hose union bolt	1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)
6) Master cylinder bolt	0.5 ~ 0.8 kg-m (3.5 ~ 6.0 lb-ft)
7) Front fork tubes lower pinch bolt (R and L)	1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)
8) Caliper air bleeder bolt	0.6 ~ 0.9 kg-m (4.5 ~ 6.5 lb-ft)
9) Caliper axle bolt	2.5 ~ 3.5 kg-m (18.0 ~ 25.5 lb-ft)
10) Rear torque link nut	2.0 ~ 3.0 kg-m (14.5 ~ 21.5 lb-ft)
11) Rear shock absorber nut	2.0 ~ 3.0 kg-m (14.5 ~ 21.5 lb-ft)
12) Rear shock absorber bolt	2.0 ~ 3.0 kg-m (14.5 ~ 21.5 lb-ft)
13) Rear axle nut	8.5 ~ 11.5 kg-m (61.5 ~ 83.0 lb-ft)
14) Swinging arm pivot nut	5.0 ~ 8.0 kg-m (36.0 ~ 58.0 lb-ft)
15) Disc bolt	1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)
16) Front axle holder nut	1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)
17) Front axle nut	3.6 ~ 5.2 kg-m (26.0 ~ 37.5 lb-ft)

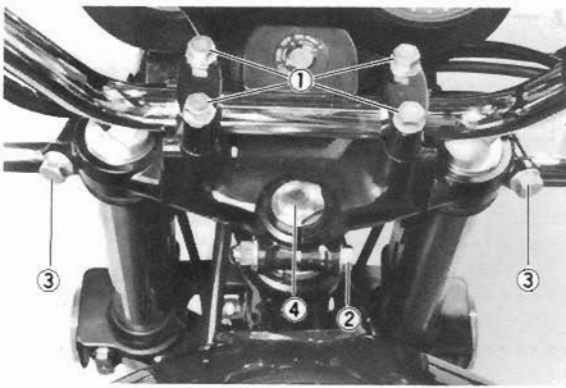


Fig. 3-43.

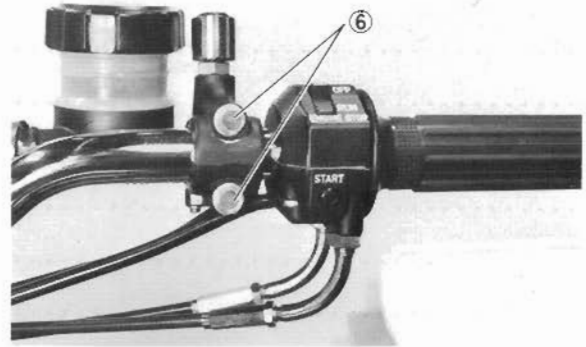


Fig. 3-47.

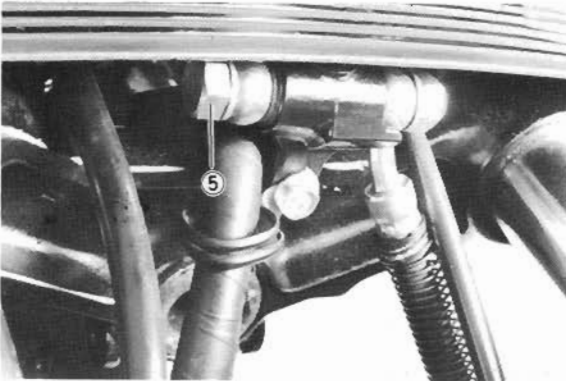


Fig. 3-44.

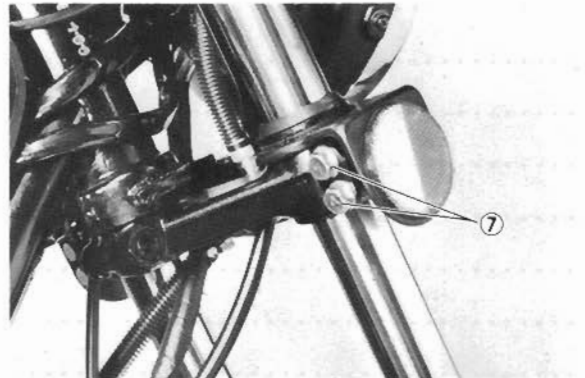


Fig. 3-48.

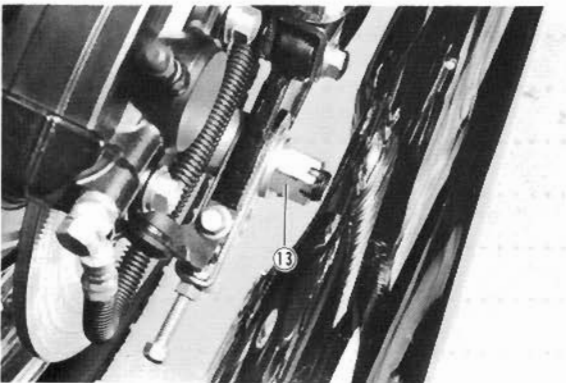


Fig. 3-45.

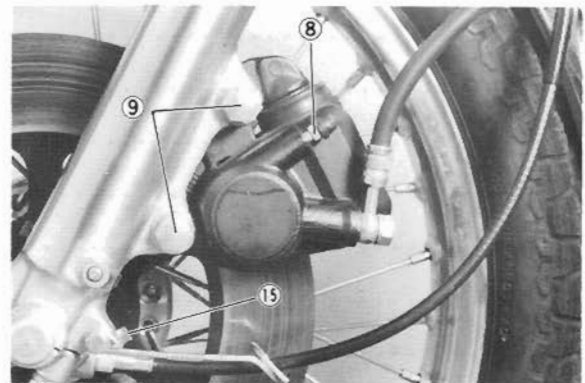


Fig. 3-49.



Fig. 3-46.

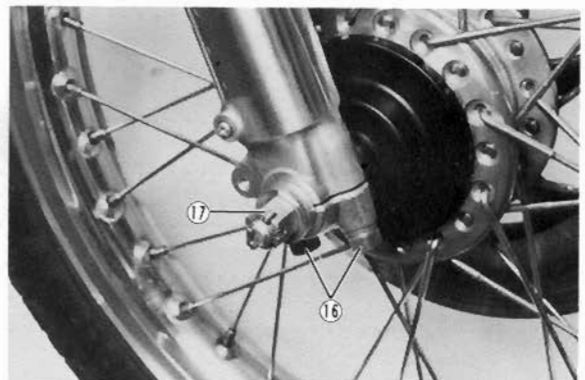
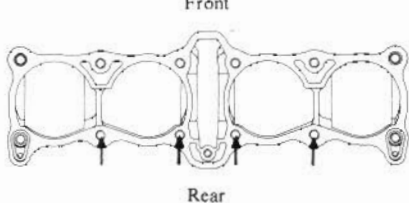


Fig. 3-50.

SPECIAL MATERIALS

The materials listed below are needed for maintenance work on the GS1000, and should be kept on hand for ready use. They supplement such standard materials as cleaning fluids, lubricants, emery cloth and the like. How to use them and where to use them are described in the text of this manual.

	Part	See page	Part	See page
①  99000-32040 THREAD LOCK CEMENT	Gear shift cam guide screw 2 pcs. Gear shift pawl screw 2 pcs. Counter shaft B/g retainer screw 3 pcs. Drive shaft plate screw 4 pcs. Rotor bolt 1 pc. Stator bolt 3 pcs. Stud bolt, cylinder 12 pcs. Starter clutch bolt 3 pcs.	7-30 7-28 7-29	Oil filter cover 3 pcs. Carburetor bracket bolt 8 pcs. Cylinder head cover cap screw Engine oil pump screw 4 pcs. Oil gallery plate screw 3 pcs. Front fork Allen bolt (one side) 1 pc. Carburetor set screw 8 pcs.	10-9 8-7
②  99000-32030 SUZUKI LOCK SUPER "103K"	2nd drive gear Cam chain guide bolt 2 pcs. Cam sprocket bolt 4 pcs. Cam chain guide screw 2 pcs.	7-42 7-14	Starter clutch bolt 1 pc. Primary drive gear bolt 2 pcs.	7-29
③  99000-31030 SUZUKI BOND No. 4	Mating surfaces of upper and lower crankcase Cylinder stud bolt 4 pcs. (Apply a small quantity to the threads of cylinder stud bolts.)			
④  99000-25100 SUZUKI BRAKE PAD GREASE	Apply to the outer periphery of brake pad			
⑤  99000-25110 SUZUKI CALIPER AXLE GREASE	Apply to caliper axle shaft			
⑥  99000-25140 SUZUKI MOLY PASTE	• Valve stem • Cam shaft • Chain tensioner adjuster shaft	7-13 7-14 7-23		

Use of Genuine Suzuki Parts

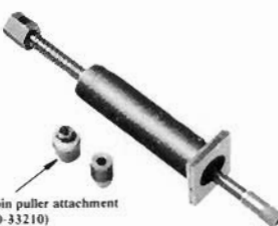
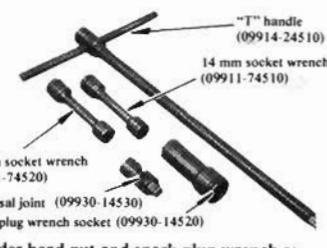
To replace any part of the machine, use a genuine SUZUKI replacement part. Imitation parts or parts supplied from any other source than SUZUKI, if used to replace SUZUKI parts will reduce the machine's performance and, even worse, could induce costly mechanical trouble.






Fig. 4-1.

SPECIAL TOOLS




The special tools listed hereunder are designed to facilitate maintenance work — disassembly, reassembly, servicing, checking, etc. — on the GS1000, and protect the parts and components of the motorcycle against damage. Each shop is advised to keep these special tools as standard shop equipment.

①  Steering inner race and swing arm bearing installer (*09941-34511)	②  Swing arm bearing puller (*09941-44910)	③  Steering nut socket wrench (*09940-14910)
④  Steering stem inner race remover (*09941-54910)	⑤  Flywheel holder (*09930-44910)	⑥  Piston pin puller attachment (*09910-33210) Piston pin puller (09910-34510)
⑦  Valve lifter (09916-14510)	⑧  Valve stem seal and valve guide installer handle (09916-57320)	⑨  Valve stem seal installer attachment (09911-94530)
⑩  Valve guide installer attachment (09916-54530)	⑪  Valve guide remover (09916-44510)	⑫  Tappet depressor (09916-64510)
⑬  12 mm socket wrench (09911-74520) Universal joint (09930-14530) Spark plug wrench socket (09930-14520) Cylinder head nut and spark plug wrench set. (*09930-14511)	⑭  Fuel level gauge (09913-14510)	⑮  "T" type hexagon wrench (6 mm) (09914-25811)

NOTE: Asterisked (*) tools are exclusively for GS1000.

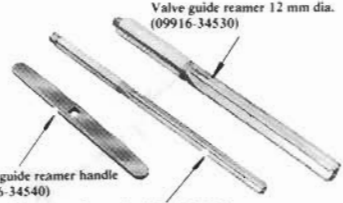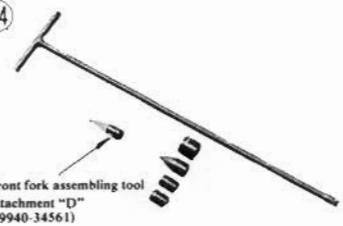
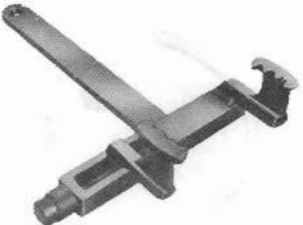
①⑥  Piston ring holder body (09916-74520)	①⑦  Piston ring holder band (09916-74540)	①⑧  Carburetor throttle valve adjust wrench (09913-14520)
①⑨  Forceps (09916-84510)	Valve guide reamer 12 mm dia. (09916-34530)  Valve guide reamer handle (09916-34540) Valve guide reamer 7 mm dia. (09916-34520) Valve guide reamer set (09916-34510)	②①  Carburetor balancer (09913-14520)
②②  Oil pressure gauge (09915-74510)	②③  Compression gauge (09915-64510)	②④  Front fork assembling tool attachment "D" (09940-34561) Front fork assembling tools "T" handle (09940-34520)
②⑤  Hexagon wrench (4 mm) (09911-70130)	②⑥  Cylinder disassembling tool (09912-34510)	②⑦  10 mm stud bolt installing tool (09910-11510)
②⑧  Oil seal remover (09913-50110)	②⑨  Bearing puller (09913-60910)	③⑦  Bearing puller (09913-61110)
③①  Bearing and oil seal installing tool (09913-85210)	③②  Clutch sleeve hub holder (09920-53710)	③③  Snap ring pliers (angle open) (09900-06104)

NOTE: Asterisk (*) tools are exclusively for GS1000.

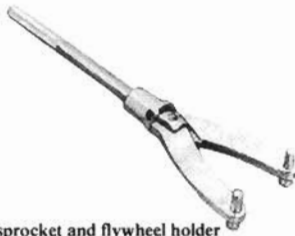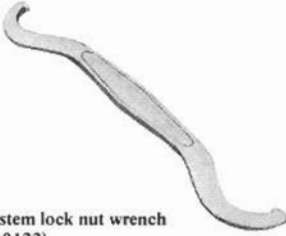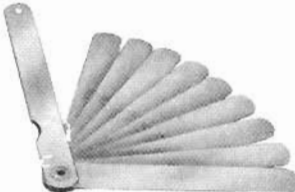34  Snap ring pliers (angle closed: large size) (09900-06105)	35  Snap ring pliers (angle closed: small size) (09900-06106)	36  Snap ring pliers (straight open) (09900-06107)
37  Engine sprocket and flywheel holder (09930-40113)	38  Steering stem lock nut wrench (09940-10122)	39  Front fork oil seal installing tool attachment (*09940-54920) Front fork oil seal installing tool (*09940-54910)
40  Spoke nipple wrench (09940-60112)	41  Shock driver set (09900-09002)	42  Pocket tester (09900-25002)
43  Timing tester (09900-27003)	44  Electro tester (09900-28106)	45  Rotor remover shaft set (09930-30102)
46  Thickness gauge (09900-20803)	47  8 mm hexagon wrench (09911-71510)	48  Front fork oil seal remover (*09941-64910)
49  Front fork oil level gauge (09943-74110)	50  Front fork pressure gauge (09940-44110)	51  "T" type hexagon wrench 5 mm (09911-73730)

NOTE: Asterisked (*) tools are exclusively for GS1000.

SPECIAL TOOLS

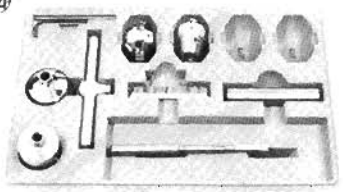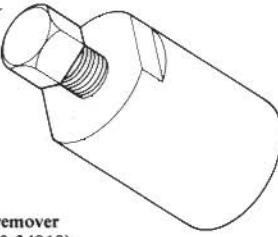 Valve seat cutterset (99103-45011)	 Bearing and oil seal installer (09913-80111)	 Bearing and oil seal installer (09914-79610)
 Steering stem bearing puller *(09941-84910)	 Race and bearing driver *(09941-74910)	 Rotor remover *(09930-34910)

NOTE: Asterisked (*) tools are exclusively for GS1000.

TRUBLE SHOOTING

CONTENTS

ENGINE AND CHASSIS.....	6-2
ELECTRICAL	6-5

TROUBLE SHOOTING

ENGINE AND CHASSIS

Complaint	Symptom and possible causes	Remedy
Engine will not start, or is hard to start.	Compression too low 1. Tappet clearance out of adjustment. 2. Worn valve guides or poor seating of valves. 3. Valves mistiming. 4. Piston rings excessively worn. 5. Worn-down cylinder bores. 6. Starter motor cranks but too slowly.	Adjust. Repair, or replace. Adjust. Replace. Replace, or rebore. Consult "electrical complaints".
	Plugs not sparking 1. Fouled spark plugs. 2. Wet spark plugs. 3. Contact points dirty. 4. Improper gaps on contact points. 5. Ignition timing out of adjustment. 6. Defective ignition coil. 7. Open or short in high-tension cords. 8. Ruptured condenser. No fuel reaching the carburetors 1. Clogged hole in the fuel tank cap. 2. Clogged or defective fuel cock. 3. Defective carburetor float valve. 4. Clogged fuel pipe or suction cock pipe.	Clean. Clean and dry. Clean. Adjust. Adjust. Replace. Replace. Replace. Clean. Clean or replace. Replace. Clean.
Engine stalls easily.	1. Fouled spark plugs. 2. Dirty contact points. 3. Ignition timing out of adjustment. 4. Clogged fuel pipe. 5. Clogged jets in carburetors. 6. Tappet clearance out of adjustment.	Clean. Clean. Adjust. Clean. Clean. Adjust.
Noisy engine	Excessive tappet chatters 1. Tappet clearance too large. 2. Weakened or broken valve springs. Noise appears to come from pistons 1. Pistons or cylinders worn down. 2. Combustion chambers fouled with carbon. 3. Piston pins worn. Noise seems to come from timing chain 1. Stretched chain. 2. Worn sprockets. 3. Tension adjustor not working. Noise seems to come from clutch 1. Worn splines of countershaft or hub. 2. Worn teeth of clutch plates. 3. Distorted clutch plates, driven and drive. Noise seems to come from crankshaft 1. Rattling bearings due to wear. 2. Big-end bearings worn and rapping. Noise seems to come from transmission 1. Gears worn or rubbing. 2. Badly worn splines. 3. Primary gears worn or rubbing.	Adjust. Replace. Replace. Clean. Replace. Replace. Replace. Repair or replace. Replace. Replace. Repair or replace. Replace. Replace. Replace. Replace. Replace.

Complaint	Symptom and possible causes	Remedy
Slipping clutch	1. Clutch control out of adjustment or loss of play. 2. Weakened clutch springs. 3. Worn or distorted pressure plate. 4. Distorted clutch plates, driven and drive.	Adjust. Replace. Replace. Replace.
Dragging clutch	1. Clutch control out of adjustment or too much play. 2. Some clutch springs weakened while others are not. 3. Distorted pressure plate or clutch plates.	Adjust. Replace. Replace.
Transmission will not shift	1. Broken gearshift cam. 2. Distorted gearshift forks.	Replace. Replace.
Transmission will not shift back.	1. Broken return spring on shift shaft. 2. Shift shafts are rubbing or sticky.	Replace. Repair.
Transmission jumps out of gear.	1. Worn shifting gears on drive shaft or countershaft. 2. Distorted or worn gearshift forks. 3. Weakened stopper spring on gearshift cam.	Replace. Replace. Replace.
Engine idles poorly.	1. Tappet clearance out of adjustment. 2. Poor seating of valves. 3. Defective valve guides. 4. Ignition timing out of adjustment. 5. Improper gaps on contact points. 6. Spark plug gaps too wide. 7. Defective ignition coil or condenser resulting in weak sparking. 8. Float-chamber fuel level out of adjustment in carburetors.	Adjust. Replace. Replace. Adjust. Adjust. Adjust or replace. Replace. Adjust.
Engine runs poorly in high-speed range.	1. Valve springs weakened. 2. Valve timing out of adjustment. 3. Spark plug gaps too narrow. 4. Ignition not advanced sufficiently due to poorly working advancer. 5. Weakened springs on breaker arms. 6. Defective ignition coil. 7. Float-chamber fuel level too low. 8. Clogged air cleaner element. 9. Clogged fuel pipe, resulting in inadequate fuel supply to carburetors. 10. Clogged suction cock pipe.	Replace. Adjust. Repair. Repair. Replace. Replace. Adjust. Clean. Clean, and prime. Clean.
Dirty or heavy exhaust smoke.	1. Too much lube oil in the engine. 2. Worn piston rings or cylinders. 3. Worn valve guides. 4. Cylinder walls scored or scuffed. 5. Worn valves stems. 6. Defective stem seal.	Check with level gauge; drain out excess oil. Replace. Replace. Replace. Replace. Replace.
Engine lacks power.	1. Loss of tappet clearance. 2. Weakened valve springs. 3. Valve timing out of adjustment. 4. Worn piston rings or cylinders. 5. Poor seating of valves. 6. Ignition timing out of adjustment. 7. Improper gaps on contact points. 8. Spark plug gaps incorrect. 9. Clogged jets in carburetors.	Adjust. Replace. Adjust. Replace. Repair. Adjust. Adjust. Adjust or replace. Clean.

TROUBLE SHOOTING

Complaint	Symptom and possible causes	Remedy
	10. Float-chamber fuel level out of adjustment. 11. Clogged air cleaner element. 12. Carburetor balancing screw loose. 13. Too much engine lube oil.	Adjust. Clean. Retighten. Drain out excess oil.
Engine overheats.	1. Heavy carbon deposit on piston crowns. 2. Not enough oil in the engine. 3. Defective oil pump or clogged oil circuit. 4. Fuel level too low in float chambers. 5. Ignition timing excessively retarded, accompanied by pinging.	Clean. Add oil Repair or clean. Adjust. Adjust.
Handle feels too heavy.	1. Steering stem nut overtightened. 2. Broken bearing in steering stem. 3. Distorted steering stem. 4. Not enough pressure in tires. 5. Overtightened steering races. 6. Insufficient air pressure in front suspension.	Adjust. Replace. Replace. Adjust. Adjust. Adjust.
Wobbly handle	1. Loss of balance between right and left suspension. 2. Distorted front fork. 3. Distorted front axle or cocked tire. 4. Insufficient air pressure in front suspension.	Replace. Repair or replace. Replace. Adjust.
Wobbly front wheel	1. Distorted wheel rim. 2. Worn-down front wheel bearings. 3. Loose wheel spokes. 4. Defective or incorrect tire. 5. Loose nut on axle.	Replace. Replace. Retighten. Replace. Retighten.
Front suspension too soft	1. Weakened springs. 2. Not enough fork oil. 3. Insufficient air pressure in front suspension.	Replace. Refill. Adjust.
Front suspension too stiff	1. Fork oil too viscous. 2. Too much fork oil. 3. Insufficient air pressure in front suspension.	Replace. Remove excess oil. Adjust.
Noisy front suspension	1. Not enough fork oil. 2. Loose nuts on suspension.	Refill. Retighten.
Wobbly rear wheel	1. Distorted wheel rim. 2. Worn-down rear wheel bearings. 3. Loose wheel spokes. 4. Defective or incorrect tire.	Replace. Replace. Retighten. Replace.
Rear suspension too soft	1. Weakened springs. 2. Rear suspension adjusters improperly set.	Replace. Adjust.
Rear suspension too stiff	Rear suspension adjusters improperly set.	Adjust.
Noisy rear suspension	Loose nuts on suspension.	Retighten.
Poor braking (FRONT and REAR)	1. Not enough brake fluid in the reservoir. 2. Air trapped in brake fluid circuit. 3. Pads or linings worn down.	Refill to level mark. Bleed air out. Replace.

ELECTRICAL

Complaint	Symptom and possible causes	Remedy
No sparking or poor sparking	1. Defective ignition coil. 2. Defective spark plugs.	Replace. Replace.
Contact points burn or pit prematurely.	Defective condenser.	Replace.
Spark plugs soon become fouled with carbon.	1. Mixture too rich. 2. Idling speed set too high. 3. Incorrect gasoline. 4. Dirty element in air cleaner. 5. Spark plugs too cold.	Adjust carburetors. Adjust carburetors. Change. Clean. Replace by hot type plugs.
Spark plugs become fouled too soon.	1. Worn piston rings. 2. Pistons or cylinders worn. 3. Excessive clearance of valve stems in valve guides.	Replace. Replace. Replace.
Spark plug electrodes overheat or burn.	1. Spark plugs too hot. 2. The engine overheats. 3. Ignition timing out of adjustment. 4. Spark plugs loose. 5. Mixture too lean.	Replace by cold type plugs. Tune up. Adjust. Retighten. Adjust carburetors.
Generator does not charge.	1. Open or short in lead wires, or loose lead connections. 2. Shorted, grounded or open generator coils. 3. Silicon diodes punctured. 4. Shorted regulator lead wire.	Repair or replace or retighten. Replace. Replace. Repair or replace.
Generator does charge, but charging rate is below the specification.	1. Lead wires tend to get shorted or open-circuited or loosely connected at terminals. 2. Grounded or open-circuited stator coils of generator. 3. Defective silicon diodes. 4. Defective regulator. 5. Not enough electrolyte in the battery. 6. Defective cell plates in the battery.	Repair, or retighten. Replace. Replace. Replace. Add distilled water to the upper level. Replace the battery.
Generator overcharges.	1. Internal short-circuit in the battery. 2. Coil element in the regulator damaged or defective. 3. Regulator poorly grounded.	Replace the battery. Replace the regulator. Clean and tighten ground connection.
Unstable charging	1. Lead wire insulation frayed due to vibration, resulting in intermittent shorting. 2. Generator internally shorted. 3. Defective regulator.	Repair or replace. Replace. Replace.
Starter button is not effective.	1. Battery run down. 2. Defective switch contacts. 3. Brushes not seating properly on commutator in starter motor.	Recharge or replace. Replace. Repair or replace.
Battery "sulfation"	1. Charging rate too low or too high. (When not in use batteries should be recharged at least once a month to avoid sulfation.)	Replace the battery.

Complaint	Symptom and possible causes	Remedy
Battery "Sulfation"	2. Battery electrolyte excessive or insufficient, or its specific gravity too high or too low. 3. The battery left unused for too long in cold climate.	Keep the electrolyte up to the prescribed level, or adjust the S.G. by consulting the battery maker's directions. Replace the battery, if badly sulfated.
Battery discharges too rapidly.	1. Dirty container top and sides. 2. Impurities in the electrolyte or electrolyte S.G. is too high.	Clean. Change the electrolyte by consulting the battery maker's directions.

ENGINE

CONTENTS

ENGINE REMOVAL.....	7-3
ENGINE REMOUNTING	7-5
COMPRESSION CHECK.....	7-9
TOP END — REMOVAL.....	7-9
CYLINDER HEAD COVER.....	7-9
CHAIN TENSIONER ADJUSTER.....	7-9
CAMSHAFT.....	7-10
CYLINDER HEAD.....	7-10
TOP END — INSTALLATION.....	7-12
VALVE GUIDE HOLE REAMING	7-12
VALVE GUIDE.....	7-12
VALVE STEM SEAL.....	7-12
VALVE.....	7-13
VALVE SPRINGS	7-13
VALVE COTTER TO VALVE STEM	7-13
CYLINDER HEAD.....	7-13
SPROCKETS ON CAMSHAFTS.....	7-14
POSITIONING CAMSHAFT IN PLACE	7-14
CAMSHAFT HOLDER.....	7-16
CAM CHAIN TENSIONER ADJUSTER	7-16
TENSIONING ACTION CHECK	7-17
TAPPET CLEARANCE ADJUSTMENT	7-18
TOP END — INSPECTION	7-18
CAMSHAFT WEAR	7-18
CAMSHAFT JOURNAL WEAR.....	7-18
CAMSHAFT DEFLECTION	7-19
VALVE FACE WEAR	7-19
VALVE STEM DEFLECTION.....	7-20
VALVE-TO-GUIDE CLEARANCE	7-20
VALVE SEAT WIDTH MEASUREMENT.....	7-20
VALVE SEAT SERVICING	7-21
VALVE SPRING	7-22
CYLINDER HEAD FLATNESS	7-22
CAM CHAIN TENSIONER ADJUSTER	7-23

CYLINDER	7-23
REMOVAL.....	7-23
INSTALLATION	7-24
INSPECTION	7-25
PISTON AND RINGS	7-25
REMOVAL.....	7-25
INSTALLATION	7-26
INSPECTION	7-27
LOWER END.....	7-28
GENERATOR STATOR	7-28
GENERATOR ROTOR	7-29
CONTACT BREAKER POINTS.....	7-30
CONDENSER	7-30
AUTOMATIC ADVANCER FOR CONTACT BREAKER	7-30
CLUTCH	7-32
REMOVAL.....	7-32
INSPECTION	7-33
INSTALLATION	7-34
EXTERNAL MECHANISM FOR GEAR SHIFT.....	7-35
ENGINE LUBRICATION SYSTEM.....	7-36
OIL PUMP.....	7-37
OIL PUMP PRESSURE TEST.....	7-38
OIL FILTER	7-39
SUMP FILTER.....	7-39
CRANKCASE	7-40
CRANKSHAFT	7-41
TRANSMISSION	7-42
CAUTION IN INSTALLATION OF TRANSMISSION	
GEARS AND CRANKSHAFT ON CRANKCASE.....	7-44

ENGINE

ENGINE REMOVAL

- Place an oil pan under the engine and remove the oil filter and engine drain plugs to drain out engine oil.

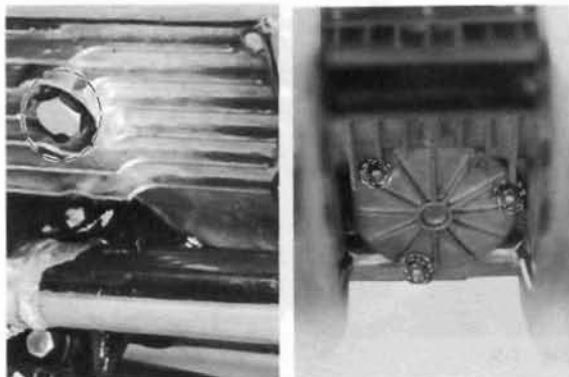


Fig. 7-1.

- Set the fuel cock lever in the "ON" or "RES" position and shift the fuel pipe clip sideways to remove the two pipes from the fuel cock.
- Remove the lead wire of fuel meter sensor located at the left lower side of the fuel tank.



Fig. 7-2.

- Open the seat and remove the bolts at the rear of the fuel tank to remove the tank rearwards.



Fig. 7-3.

- Remove mounting bolts ① of air cleaner body.
- Loosen the clamp bolts ② connecting the air cleaner chamber body and air cleaner body to remove the cleaner body upwards.

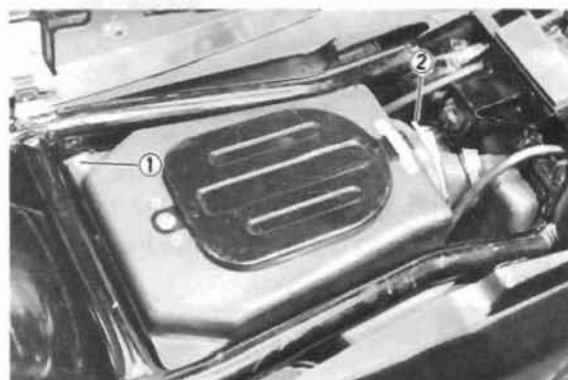


Fig. 7-4.

- Remove the left and right frame side covers.
- Remove the connectors for various lead wires.
- Alternator lead wire.
- Battery ⊖ terminal and battery ⊕ terminal.
- Starter relay ⊖ terminal.
- Contact point lead wire.
- Neutral switch lead wire.
- Oil pressure gauge lead wire.
- Plug cords.

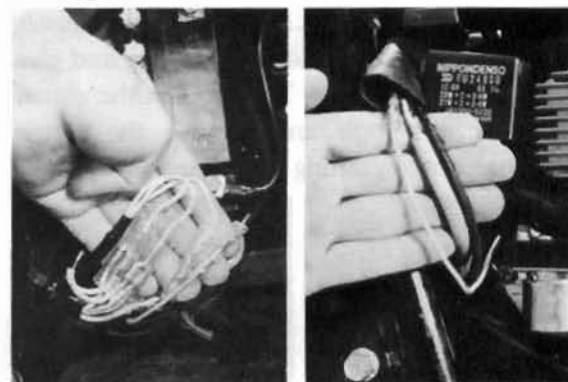


Fig. 7-5.

- Remove tachometer cable from the engine side.
- Remove gear shift pedal and engine sprocket cover.
- Straighten the bent washer on the engine sprocket with a chisel and secure the sprocket with a special tool to remove the mounting nut and the sprocket together with the chain from the drive shaft.

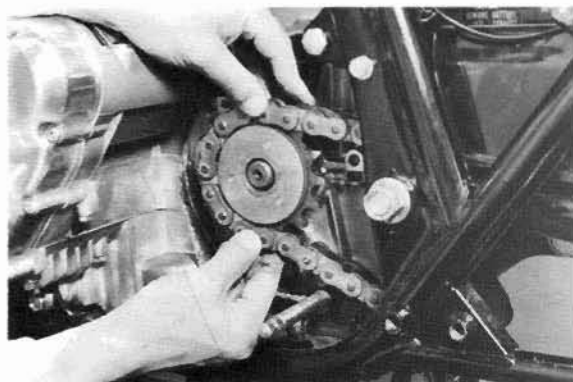


Fig. 7-6.

- Remove the left and right footrests.
- Remove the brake pedal mounting bolts and then return spring while withdrawing the brake pedal toward you.

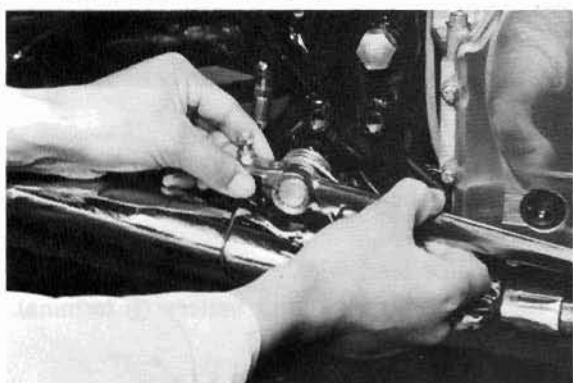


Fig. 7-7.

- Remove the lead wire and mounting bolts of the horn to remove the horn from the body.
- Fully loosen the clutch lock nut and adjuster bolts on the engine side respectively and give the wire some play. Then loosen the clutch release arm bolt and remove the clutch release arm by lifting it upwards.

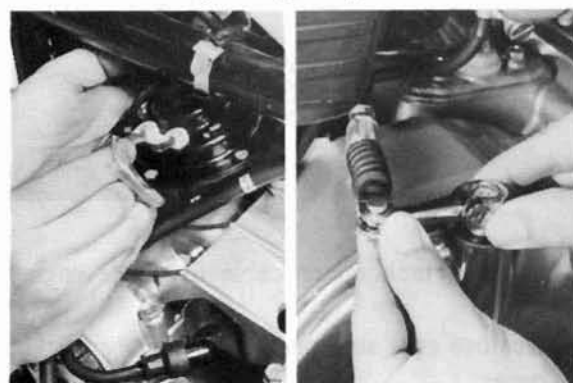


Fig. 7-8.

- Remove two screws securing the air cleaner chamber body.
- Loosen the respective clamps for the air cleaner chamber body and intake manifold to

remove carburetor by pulling it towards the rear.

- Loosen the throttle cable mounting nuts on the opening side ① and the closing side ② to remove the respective cables from the carburetor lever.



Fig. 7-9.

Shift breather pipe sideways and extract the pipe from the breather to remove the air cleaner chamber body ①.

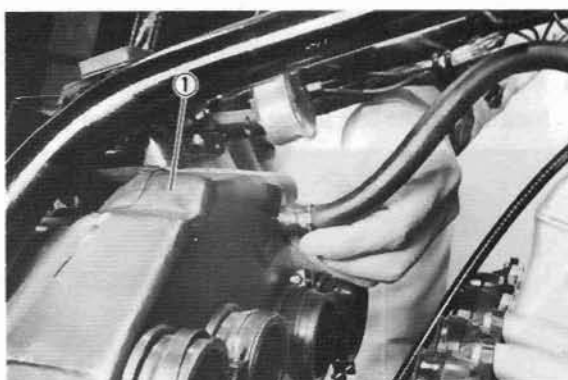


Fig. 7-10.

- Remove the left and right pairs of mufflers two at a time. Remove the respective exhaust clamp bolts on the cylinder side. Next loosen bolts connecting No. 2 and 3 exhausts located on the lower part of the engine, and remove the muffler mounting bolts located on the lower part of the rear footrests to extract the muffler toward you.
- Remove breather cover mounted on the top of cylinder head cover.

NOTE:

The frame on the upper portion of the breather cover may be damaged if the engine assembly is mounted and dismantled with the breather cover mounted on the top of the cylinder head cover.



Fig. 7-11.

- Place a jack, etc., under the engine beforehand to remove the engine mounting bolts and nuts.
- Extract front bolts and the upper and lower rear bolts.
- Remove the left and right engine mounting brackets on the front part of the engine.
- Remove only the right engine mounting bracket on the rear part of the engine.
- Remove the right engine mounting bracket on the lower part of the engine.
(Remove only the mounting bolts on the left side.)

Right side

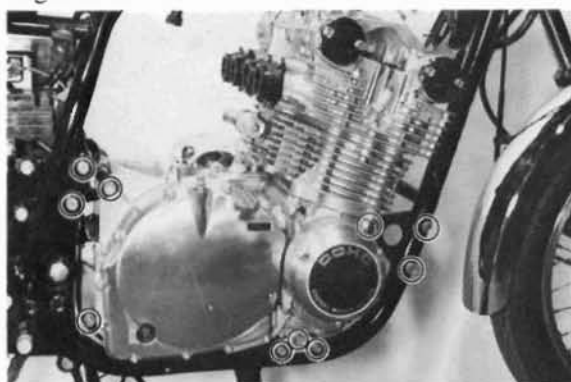


Fig. 7-12.

Left side



Fig. 7-13.

- Gradually lift up the engine and lower the engine ass'y on the right side making sure that it does not make contact with the rear bracket.

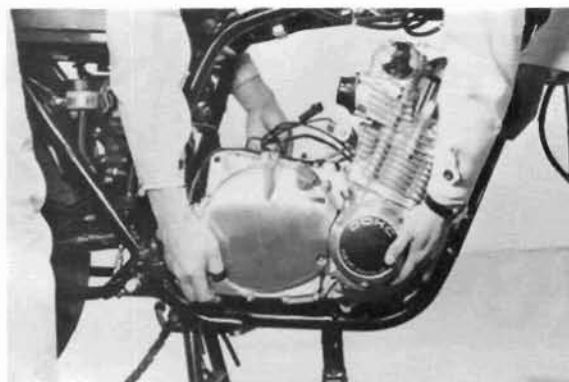


Fig. 7-14.

ENGINE REMOUNTING

Carry out remounting in the reverse order of engine removal.

- Temporarily fasten the engine mounting bracket before inserting the engine mounting bolts.
- After inserting the engine mounting bolts, tighten engine mounting bracket bolts and engine mounting bolts. Insert all three long bolts from the left side and insert the rear upper bolt through the spacer on the left side of the engine.

Tightening torque for engine mounting bolts	
10 mm Dia.	3.5 kg-m (25.5 lb-ft)
8 mm Dia.	2.5 kg-m (18.0 lb-ft)

- The engine sprocket should be installed on the drive shaft beforehand, at the same time as installing the drive chain.
If it is difficult to assemble the engine sprocket, remove the rear axle cotter pin and loosen the axle nut, torque link mounting nut and chain adjuster bolt to push the wheel forward and give the drive chain some play. After complete tightening of the engine mounting bolts, adjust the drive chain play (see page 3-14).
- Firmly secure the carburetor with the respective clamps. If the carburetor is not firmly secured, gas leakage, incorrect air-fuel ratio and unsatisfactory engine running may result.

ENGINE

- Securely tighten bolts ① connecting exhausts No. 2 and 3 to prevent gas leakage.
- Securely tighten each exhaust bolt by 0.9 ~ 1.4 kg-m (6.5 ~ 10.0 lb-ft).

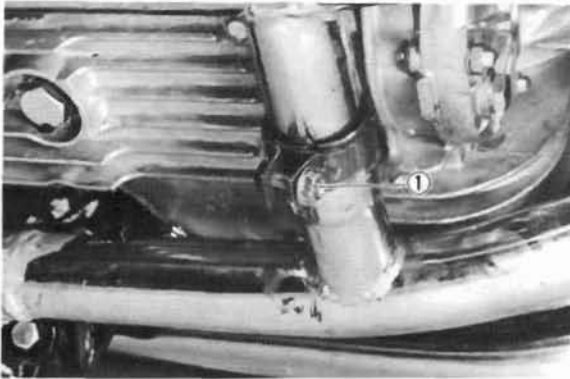


Fig. 7-15.

- Replace the plug caps on the spark plugs so that their code markings correspond to the cylinder numbers arranged in the order of 1, 2, 3, and 4 from the left.

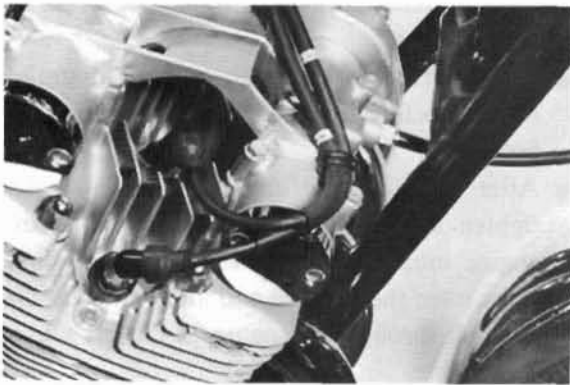


Fig. 7-16.

- Introduce 3.4 lit. of engine oil SAE 10W40 into the engine. Several minutes after starting and stopping the engine, check that the oil level remains between the marks of oil gauge.
- After remounting the engine, adjust the rear brake pedal (page 10-31, 35), brake lamp (page 11-14), clutch (page 3-13) and throttle cable (page 3-12).

ENGINE

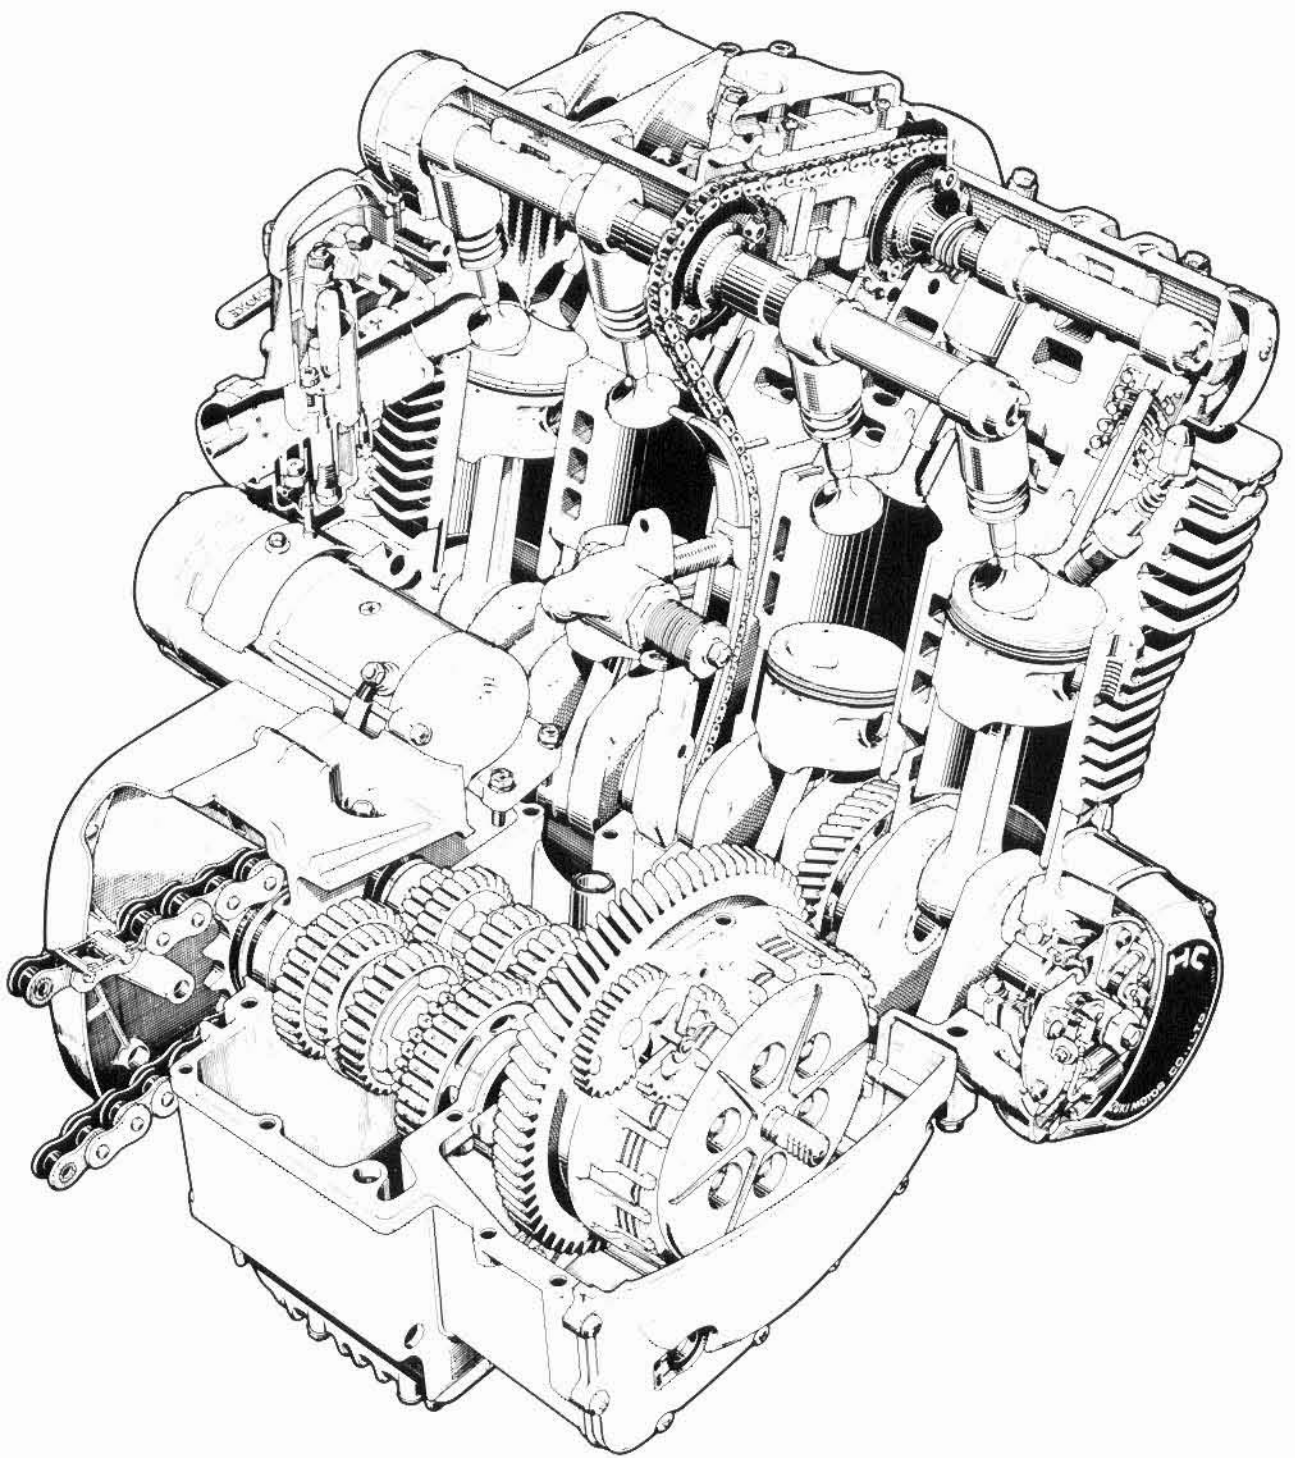


Fig. 7-17.

COMPRESSION CHECK

The compression of a cylinder is a good indicator of its internal condition. The decision to overhaul the cylinders is often based on the results of a compression test. Periodic maintenance records kept at your dealership should include compression readings for each maintenance service.

Compression

Standard	Limit
9-13 kg/cm ² (128 ~ 184 psi)	7 kg/cm ² (100 psi)

Low compression can indicate any of the following malconditions:

- Excessively worn cylinder wall
- Worn-down piston or piston rings
- Piston rings stuck in the grooves
- Poor sealing of valves
- Ruptured or otherwise defective cylinder head gasket

When the compression noted is down to or below the value indicated above, the engine must be overhauled, with these five malconditions in mind.

Compression test procedure:

NOTE:

- 1) Before testing the compression of the engine, make sure that the cylinder head nuts and bolts are tightened to the specified torque values.
- 2) Warm up the engine before testing.

1. Remove all spark plugs.
2. Fit the compression gauge (special tool: 09915-64510) ① to one of the plug holes, taking care that the connection is absolutely tight.
3. Twist the throttle grip into full-open position.
4. Crank the engine a few seconds with the starter, and read the maximum gauge reading as the compression of that cylinder. Repeat this procedure with the other cylinders.

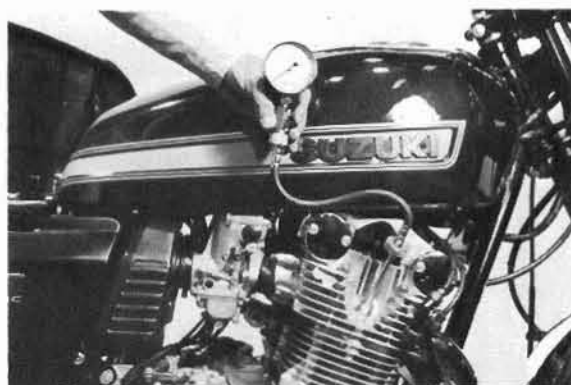


Fig. 7-18.

TOP END — REMOVAL

Cylinder head cover

NOTE:

Breather cover need not be removed.

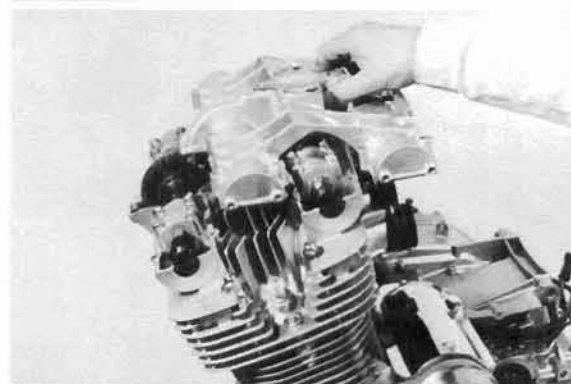


Fig. 7-19.

Chain tensioner adjuster

This is accomplished by first loosening lock nut ① and tightening screw ② and then by removing two mounting bolts ③.

NOTE:

Tightening screw ② locks the spring loaded tensioner pushrod inside.

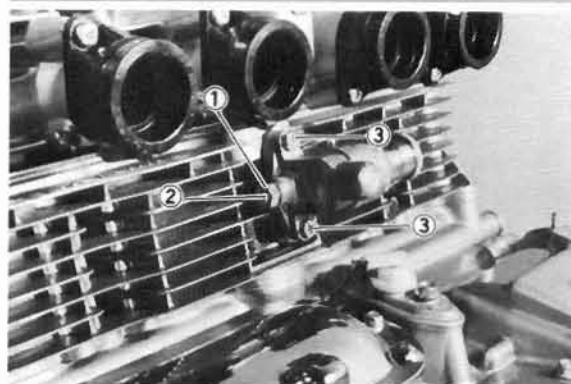


Fig. 7-20.

- Parts to be removably mounted without dismounting engine and their operations.

The following sections describe operational contents from top end to carburetor, following the previous sections dealing with engine removal. Parts which can be removably mounted without dismounting the engine are described here. See reference pages with respect to their operations.

ENGINE LEFT SIDE	ENGINE CENTER	ENGINE RIGHT SIDE
Engine sprocket cover.....	Fuel tank	Clutch cover.....
Engine sprocket and drive chain	Tachometer cable.....	Primary drive gear
Generator cover	Air cleaner	Gear shifting shaft
Generator rotor.....	Carburetor and throttle cable	Oil pump ass'y
Gear shift lever.....	Clutch cable	Gear shifting pawl and cam drive gear ..
Gear shift switch body	Exhaust and muffler	
	Horn	
	Cylinder head breather cover.....	
	Cam chain tensioner.....	
	Cylinder head cover	
	Camshaft	
	Cylinder head	
	Cylinder	
	Oil filter	
	Oil pan	
	Sump filter	
	Starter motor	
	• Generator cover and starter motor lead wire should be removed from the starting motor relay side.	

Camshaft

- Remove the two camshafts, intake and exhaust.

NOTE:

- Be sure to loosen the four camshaft holder bolts evenly by shifting the wrench diagonally after loosening a bolt.
- Hold down each camshaft with vice pliers ①, and remove the bolts securing the camshaft holders, two on each camshaft. Then, remove the pliers and take off the camshaft.

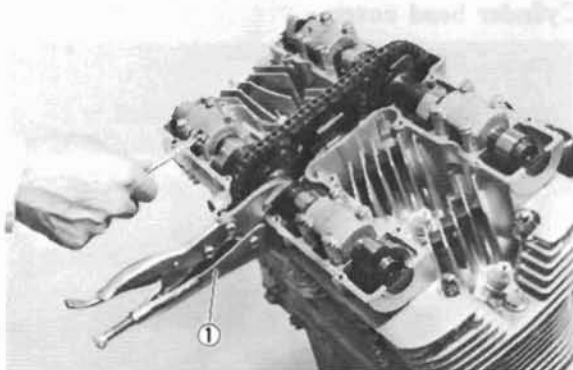


Fig. 7-21.

Cylinder head

The cylinder head becomes free for removal when its three 6-mm bolts ① and twelve 10-mm nuts are removed.

NOTE:

Be sure to use the special tool ("T" wrench) designed to enter the pockets formed in the head and reach the nuts down below to loosen the 10-mm nuts, and to shift the tool sequentially in the nuts descending order of numbers in order to reduce the pressure equally and evenly.

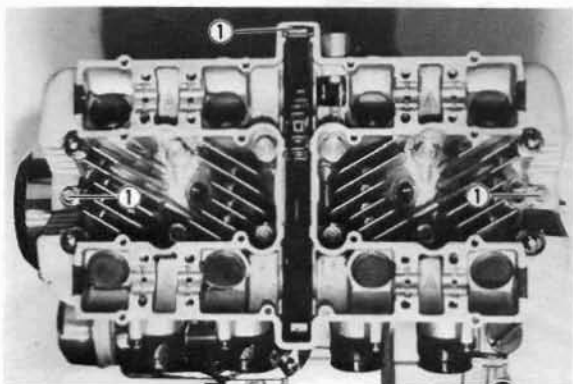


Fig. 7-22.
7-10

- Remove tappet shims, using forceps (special tool: 09916-84510) to pick each shim up.
①: Tappet shim.

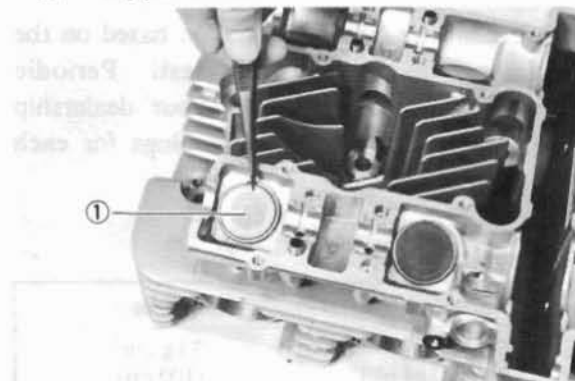


Fig. 7-23.

- Pull out the tappets with your fingers.

NOTE:

Exercise caution in removing tappets so as not to nick them.

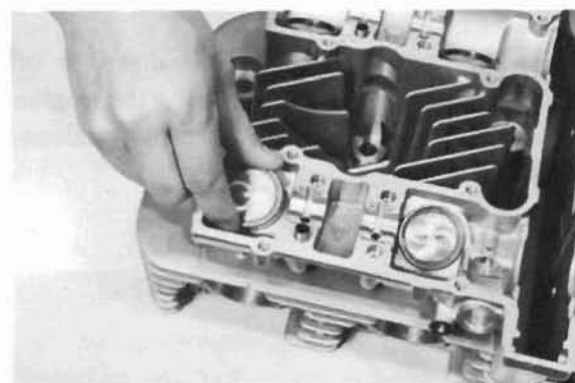


Fig. 7-24.

- Remove each valve in the following manner:
1. Using the valve lifter (special tool: 09916-14510), compress the spring.

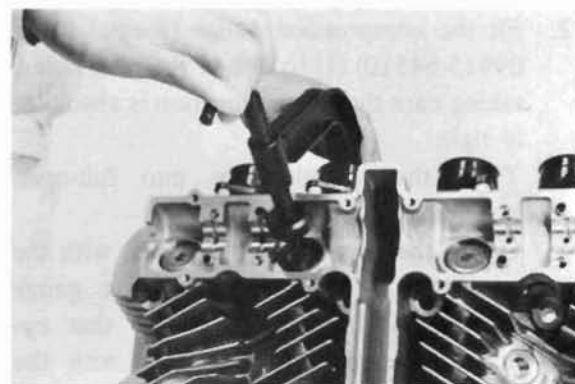


Fig. 7-25.

2. Take off the two cotter halves from the valve stem, using forceps.

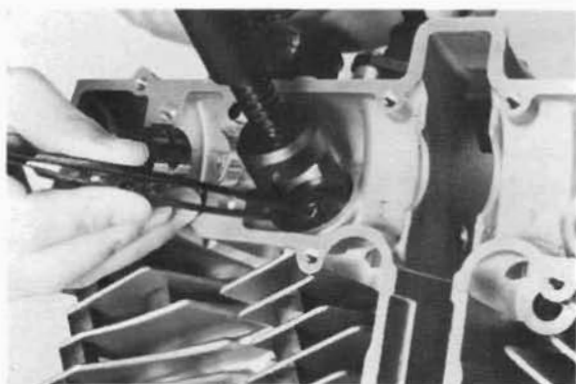


Fig. 7-26.

3. Take out the valve upper seat, inner spring and outer spring.

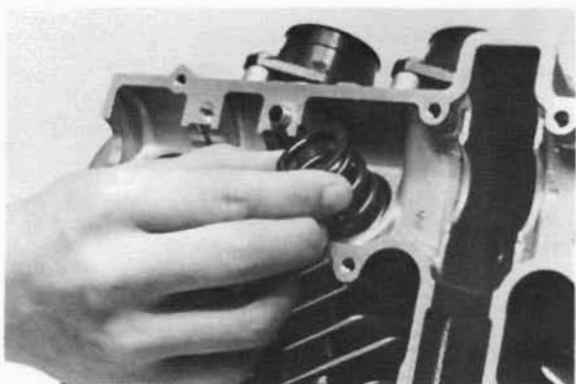


Fig. 7-27.

4. From the other side, pull out the valve.

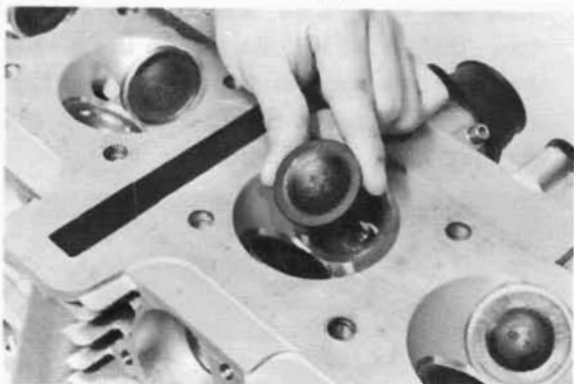


Fig. 7-28.

5. Drive the valve guide out toward cylinder head side: use the valve guide remover (special tool: 09916-44150).

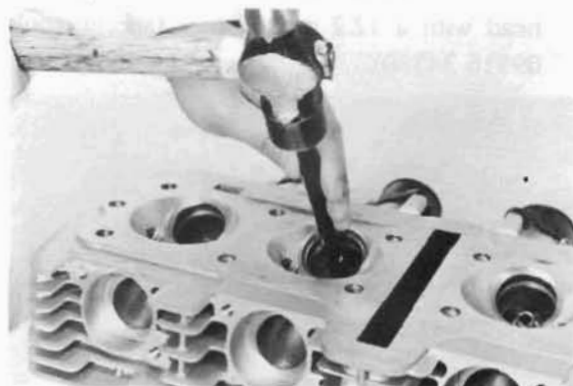


Fig. 7-29.

NOTE:

Discard the removed valve guide subassemblies.

During reassembly, use replacement subassemblies, each consisting of guide ring ①, oil seal ② and valve guide ③.

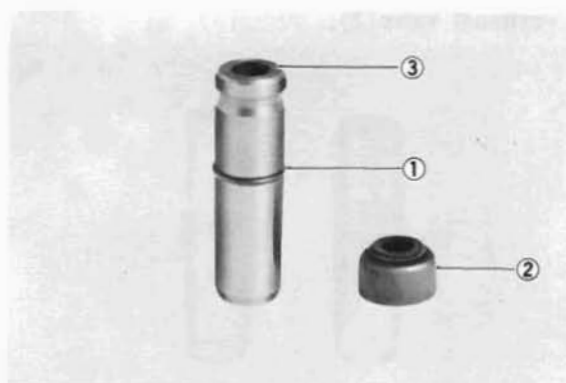


Fig. 7-30.

NOTE:

- *When replacing the valve mechanism parts, be sure to restore each part in its correct position.*
- *For normal reassembling work, steps 1 through 5 of the following procedure may be omitted. These steps are necessary only when valve guides must be removed for replacement.*

TOP END – INSTALLATION

Valve guide hole reaming

- Re-finish the valve guide holes in cylinder head with a 12.2 mm reamer (special tool: 09916-34530).

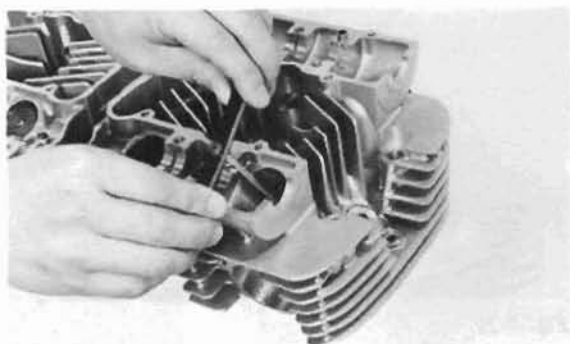


Fig. 7-31.

Valve guide

- Fit a ring to each valve guide. Be sure to use new rings and valve guides. Use of rings and valve guides removed during disassembly is prohibited. Remember that the guide for intake valve ① differs in shape from that of the exhaust valve ②.

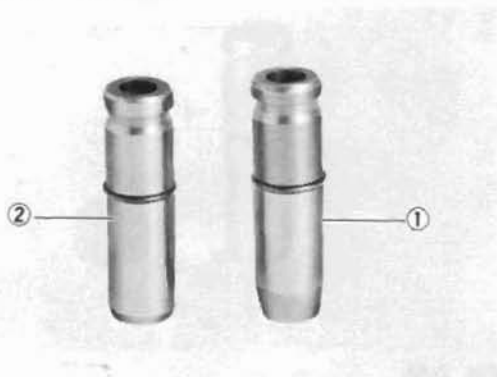


Fig. 7-32.

- Oil the stem hole, too, of each valve guide and drive the guide into the guide hole with the valve guide and stem seal installer attachment (special tool: 09916-54530). Be sure to use a valve guide installer attachment handle (special tool: 09916-57320) on the pushing face of the installer, as shown, to avoid direct contact between installer and valve guide.

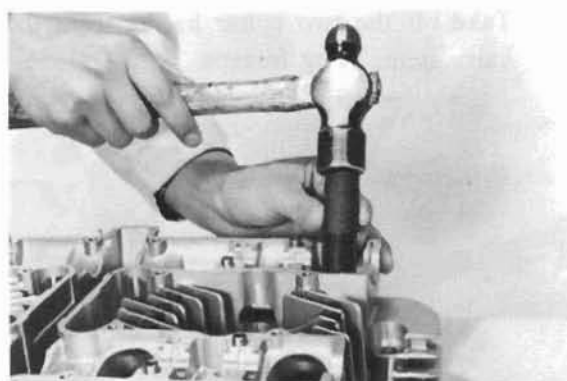


Fig. 7-33.

- Install valve spring lower seats ①. Be careful not to confuse the lower seats with the spring retainer ②.

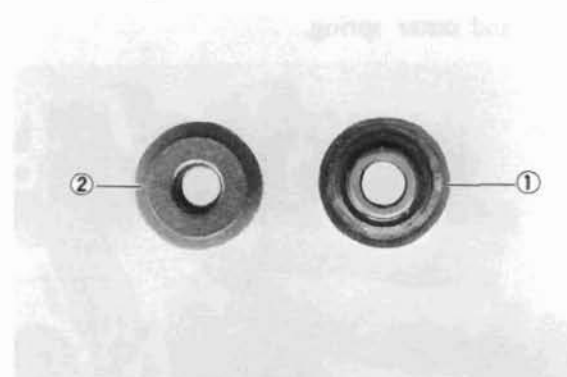


Fig. 7-34.

Valve stem seal

1. Oil each oil seal, and drive them into position with the valve stem seal installer (special tool: 09911-94530). Be sure to use a valve guide and stem seal installer attachment handle (special tool: 09916-57320) on the pushing face of the installer.

NOTE:

Do not use the oil seals removed in disassembly: use new seals.

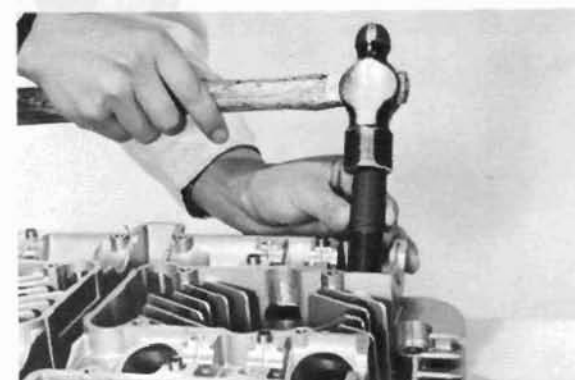


Fig. 7-35.

Valve

2. Insert the valves, with their stems coated with high quality molybdenum disulfide lubricant (SUZUKI MOLY PASTE) all around and along the full stem length without any break. Similarly oil the lip of the stem seal.

CAUTION:

When inserting each valve, take care not to damage the lip of the stem seal.

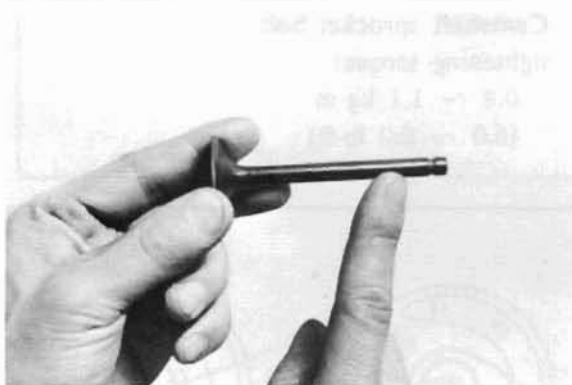


Fig. 7-36.

Valve springs

3. Position valve springs in place, making them rest on lower spring seat ① by their closed-pitch ends ②. Both springs, inner ③ and outer ④, have varied coil pitches: coil turns are progressively closes from one end to the other. Large-pitch portions are indicated as ⑤: small-pitch portions as ⑥.

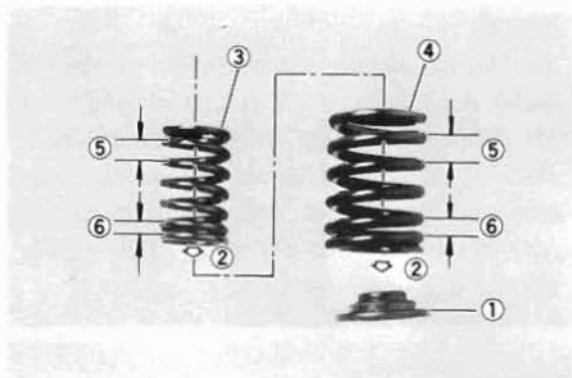


Fig. 7-37.

Valve cotter to valve stem

4. Put on the upper valve seat and, using the valve lifter, press down the springs, fit the two cotter halves to the stem end, and release the lifter to allow the cotter ① to wedge in between seat and stem. Be sure that the rounded lip ② of the cotter fits snugly into the groove ③ in the stem end.

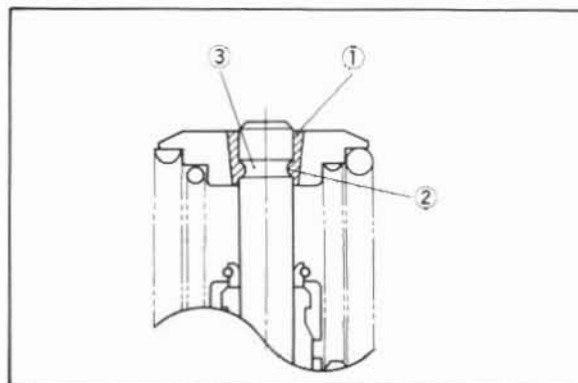


Fig. 7-38.

5. Oil each valve tappet and the bore in which it slides. Push the tappet into the bore with your fingertips. Only a light force is required to push it in.

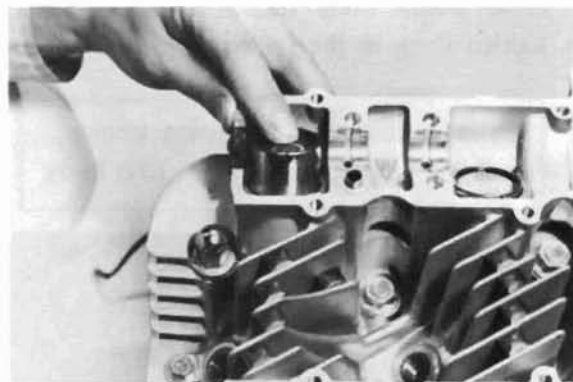


Fig. 7-39.

Cylinder head

- After thus installing the intake and exhaust valves in the cylinder head, mount the head on the cylinder block as follows:
- Be sure to replace cylinder head gasket by new one to prevent gas leakage. Gasket is installed with the wider side of metal ring around cylinder opening toward the cylinder.

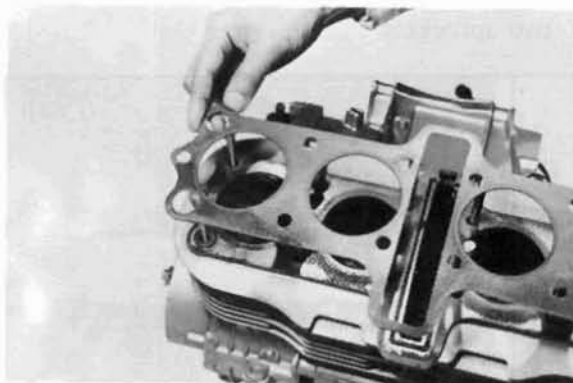


Fig. 7-40.

- Install the four crown nuts and copper washers in the positions (A) (oil passages) indicated.
- With the head snugly seated on the cylinder block, secure it by tightening the twelve 8-mm nuts sequentially in the ascending order of numbers.
- Tighten the twelve 10-mm nuts to the specified torque with a torque wrench sequentially in the ascending order of numbers, when the engine is cold.

Cylinder head nut tightening torque:
3.7 kg-m (27.0 lb-ft)

- After firmly tightening the 12 nuts, insert three 6-mm bolts (indicated as B) and tighten them to the following torque value:

Cylinder head bolt tightening torque:
0.9 ~ 1.4 kg-m (6.5 ~ 10.0 lb-ft)

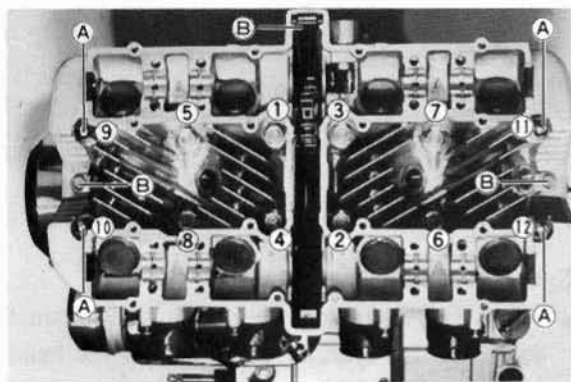


Fig. 7-41.

Sprockets on camshafts

- Exhaust camshaft has its own sprocket, as does the intake camshaft. Do not confuse the two sprockets.

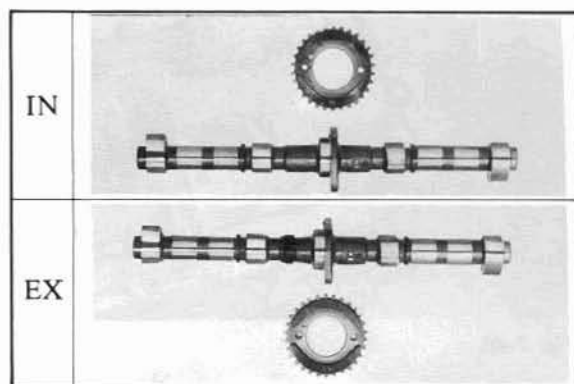


Fig. 7-42.
7-14

- It is very important that each sprocket be positioned angularly on its camshaft as illustrated. Its correct position is determined by arrow mark "3" (on INTAKE sprocket) or arrow marks "1" and "2" (on EXHAUST sprocket) located (as shown) in reference to the notch (1) in the camshaft end.
- Apply THREAD LOCK (99000-32040) to the threads of Allen-head bolts, and tighten them to the following torque value:

Camshaft sprocket bolt
tightening torque:
0.8 ~ 1.1 kg-m
(6.0 ~ 8.0 lb-ft)

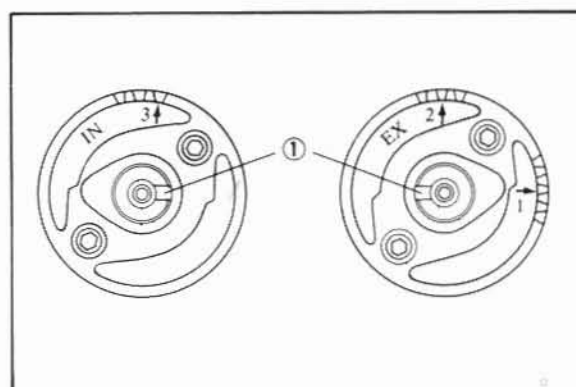


Fig. 7-43.

Positioning camshaft in place

NOTE:

Just before placing the camshaft on the cylinder head, apply high quality molybdenum disulfide lubricant (SUZUKI MOLY PASTE: 99000-25140) to its journals, fully coating each journal with the paste taking care not to leave any dry spot. Apply engine oil to the journal bearings.

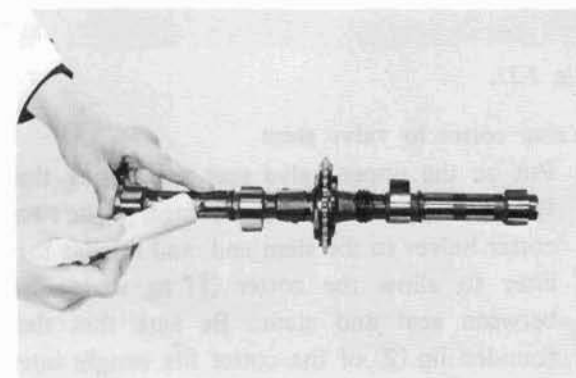


Fig. 7-44.

- The exhaust camshaft can be distinguished from that of the intake by the embossed letters "EX" (for exhaust) as against letters "IN" (for intake). Similarly, the right end can be distinguished "R" from the left end "L" of each camshaft.

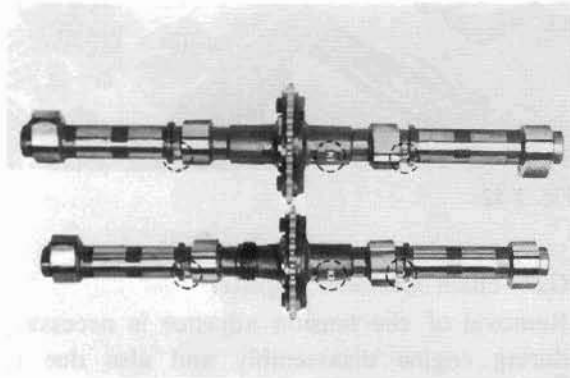


Fig. 7-45.

- While holding down the timing chain, rotate the crankshaft in normal running direction to bring the "T" mark on Nos. 1 and 4 side (of the advance governor) to the timing mark. Use a 19-mm wrench to turn the crankshaft.

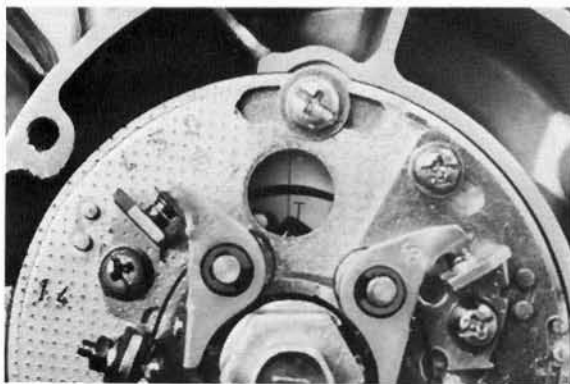


Fig. 7-46.

CAUTION:

To turn over the crankshaft, torque nut ① with a 19-mm wrench. Never try to rotate the crankshaft by putting a 12-mm wrench to bolt ②.

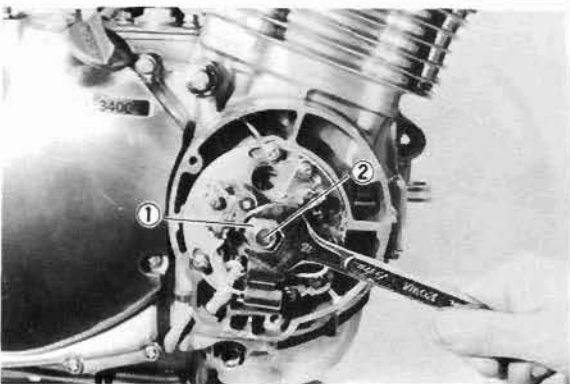


Fig. 7-47.

- With "T" mark accurately lined up with the timing mark, hold the crankshaft steady and lightly pull up the chain to take up the sag between the crank sprocket and exhaust sprocket.

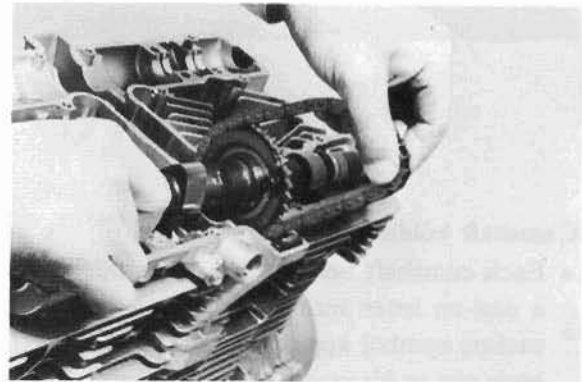


Fig. 7-48.

- Exhaust sprocket bears an arrow mark "1" indicated as ①. Turn over the exhaust camshaft so that the arrow points flush with the joint surface of the cylinder head. Engage the timing chain with this sprocket.

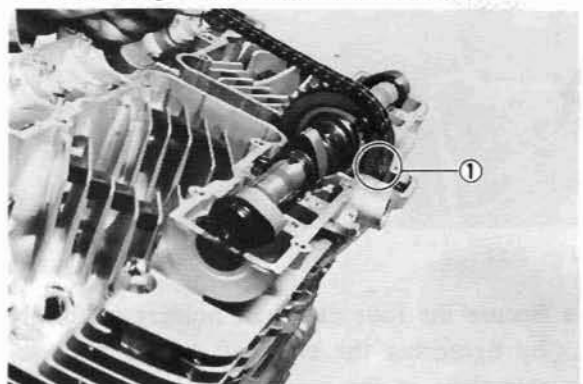


Fig. 7-49.

- The other arrow mark "2" is now pointing straight upward. Count the chain roller pins toward the intake camshaft, starting from the roller pin directly above this arrow mark "2" and ending with the 20th roller pin. Engage the chain with intake sprocket, locating the 20th pin at and above the arrow mark "3" on the intake sprocket.

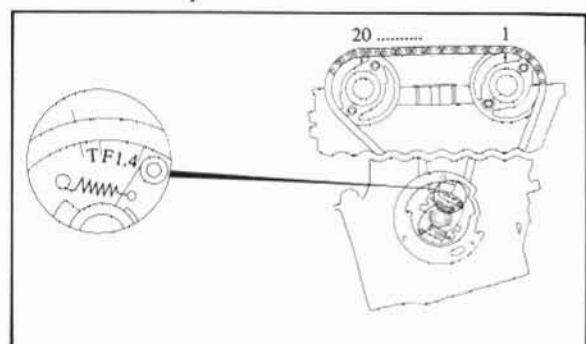


Fig. 7-50.

NOTE:

The camshaft chain is now riding on all three sprockets. Be careful not to disturb the crankshaft until the four camshaft holder bolts are secured.

Camshaft holder

- Each camshaft bearing cap is identified with a cast-on letter with a triangle. A matching cast-on symbol appears on the head. Install each cap at its matching letter, with triangle symbols pointing the same way.

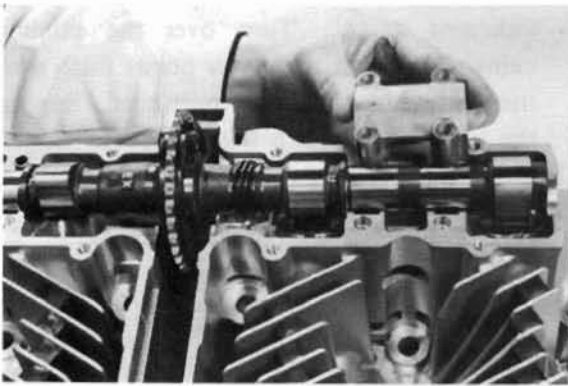


Fig. 7-51.

- Secure the four camshaft holders uniformly by tightening the camshaft holder bolts sequentially in the manner illustrated. Try to equalize the pressure by moving the wrench diagonally from one bolt to another and from one camshaft holder to another. (It is assumed here that the vice pliers ① are used for each camshaft to hold down the tappet interfering with the cams). Tighten the camshaft holder bolts (identified by the letter "9" on the bolt head) to the following torque value:

Camshaft holder bolt
tightening torque:
1.0 kg-m (7.0 lb-ft)

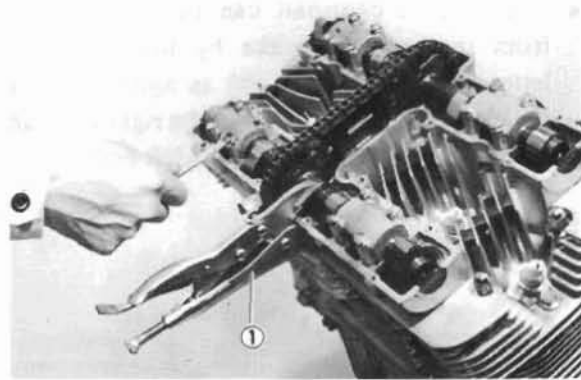


Fig. 7-52.

Cam chain tensioner adjuster

Removal of the tension adjuster is necessary during engine disassembly and also due to removal of camshafts. In either case, re-install the adjuster on the cylinder block after the camshafts have been installed. The procedure is as follows:

- While turning lock shaft handle counterclockwise, push in the pushrod all the way. Keep on turning the handle until it refuses to turn further.

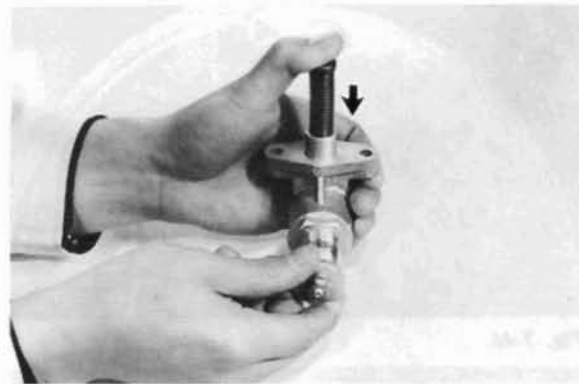


Fig. 7-53.

- Tighten the lock screw to lock the pushrod, so that the pushrod will not plunge out.
- Secure the adjuster to the cylinder block.

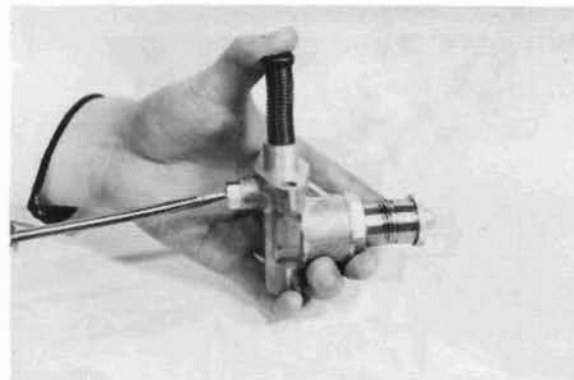


Fig. 7-54.

- Withdraw the lock screw by one-quarter to half a turn: this separates the tip of the screw from the pushrod, thereby allowing the pushrod to advance under spring force and press the tensioner against the camshaft chain.

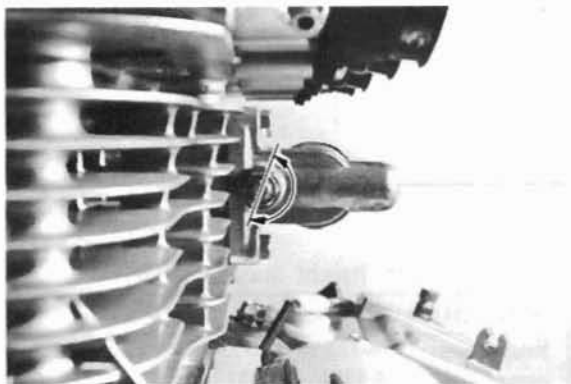


Fig. 7-55.

- Tighten the lock nut.

NOTE:

When tightening the lock nut, take care to prevent the lock screw from turning.

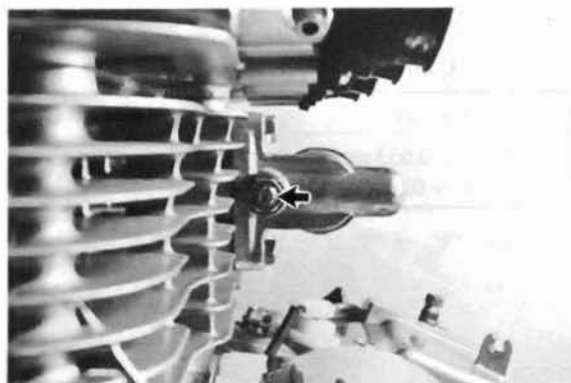


Fig. 7-56.

Tensioning action check

- After installing the tensioner, check its tensioning action according to the following 3-step procedure:

CAUTION:

As stated previously, do not attempt to turn over crankshaft by torque bolt ② (which requires a 12-mm wrench): torque nut ① with a 19-mm wrench, instead.



Fig. 7-57.

- While turning the handle ① counter-clockwise, slowly rotate the crankshaft in reverse direction (thus causing the chain to push back the tensioner).



Fig. 7-58.

- Release the handle and slowly turn back the crankshaft in normal running direction (to slacken that portion of the chain extending along the tensioner). See if the handle rotates by itself as the chain becomes progressively slackened; if it does, then the pushrod inside is obviously moving forward under spring force as it should, thus signifying that the tensioner is in good operable condition. If the handle rotates, but sluggishly, it means that the pushrod or lock shaft is sticking and, in such a case, remove the tensioner and service the pushrod and lock shaft to make them move smoothly.

CAUTION:

After installing the tensioner and checking it in initially set condition for operation, do not attempt to turn the handle in either direction until the next overhaul.

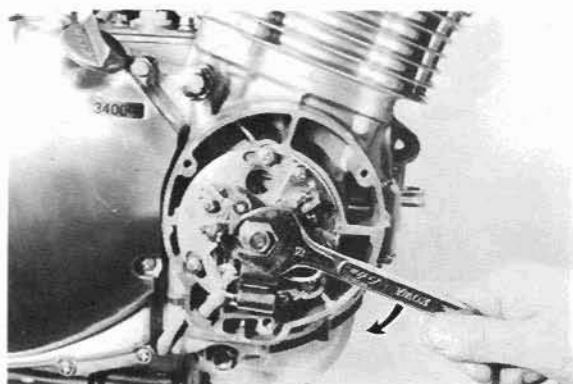


Fig. 7-59.

Tappet clearance adjustment

- After checking tensioning action, check all valves for tappet clearance and, as necessary, adjust the clearance to the specification outlined on page 3-5.

TOP END — INSPECTION

One camshaft is provided for the intake valves and the other for the exhaust valves. Be sure to discriminate between the two. The camshafts should be checked for deflection and also for the wear of cams and journals if the engine has been noted as giving abnormal noise or vibration or to lack power output. Any of these malconditions may be caused by camshafts worn down or distorted to the service limit.

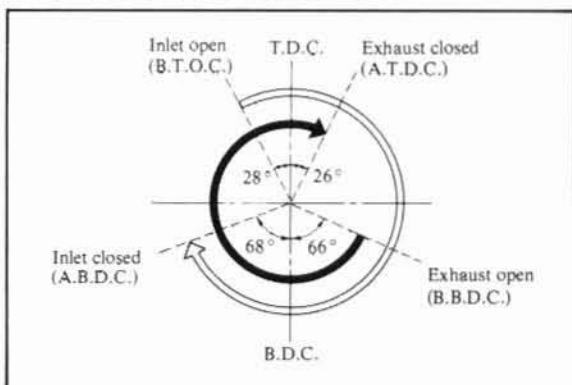


Fig. 7-60.

Camshaft wear

- Worn-down cams are often the cause of mistiming valve operation resulting in reduced power output. The limit of cam wear is specified for both intake and exhaust cams in terms of cam height $\textcircled{H}$, which is to be measured with a micrometer. Replace camshafts if found worn down to the limit.

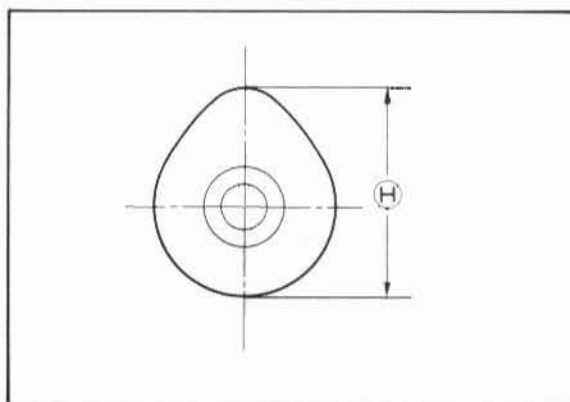


Fig. 7-61.

Cam height specification

Height (H)	Standard	Service limit
Intake cams	36.325 ~ 36.355 mm (1.4301 ~ 1.4313 in.)	36.030 mm (1.4185 in.)
Exhaust	35.775 ~ 35.805 mm (1.4085 ~ 1.4096 in.)	35.480 mm (1.3968 in.)

Camshaft journal wear

- Determine whether each journal is worn down to the limit or not by measuring the running clearance with the camshaft installed in place. Use plastigage to read the clearance, which is specified as follows:

Camshaft/Journal clearance

Standard	Service limit
0.025 ~ 0.053 mm (0.0010 ~ 0.0021 in.)	0.15 mm (0.0059 in.)

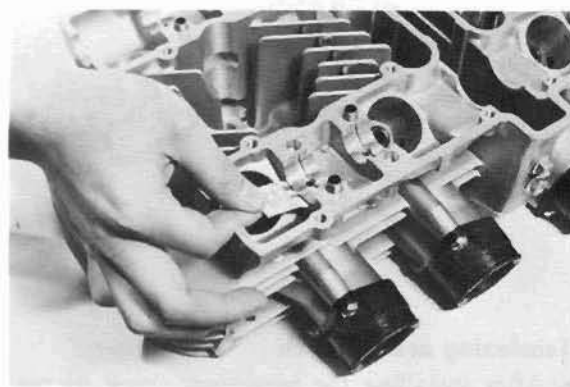


Fig. 7-62.

- Be sure each camshaft is fastened down in place by its camshaft holders. Tighten the camshaft holder bolts to the following torque value:

Camshaft holder bolt torque:

1.0 kg-m
(7.0 lb-ft)

- If the clearance exceeds the service limit, measure the inside diameter of the camshaft journal holder. If the measured value is more than the service limit, replace it using the cylinder head assembly.

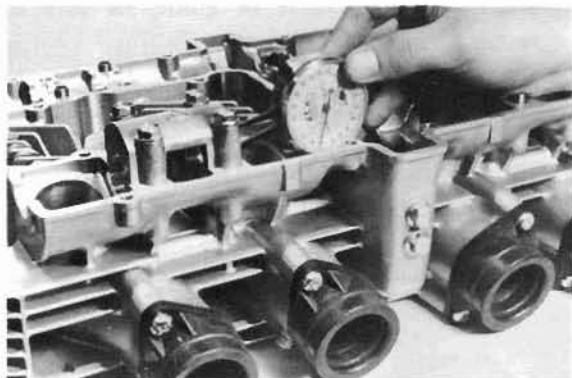


Fig. 7-63.

Camshaft journal holder

I.D. specification

Standard	Service limit
22.000 ~ 22.013 mm (0.8661 ~ 0.8667 in.)	21.920 mm (0.862 in.)

- If the measured value of the outside diameter of the camshaft exceeds the service limit, replace the camshaft.

Camshaft journal

O.D. specification

Standard	Service limit
21.960 ~ 21.975 mm (0.8646 ~ 0.8652 in.)	22.100 mm (0.870 in.)

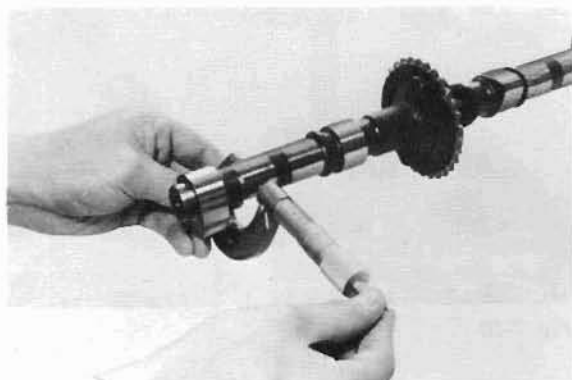


Fig. 7-64.

Camshaft deflection

- Measure the deflection with a dial gauge. Replace the camshaft if the deflection exceeds the limit.

Deflection specification

Standard	Service limit
0.03 mm (0.0012 in.)	0.10 mm (0.004 in.)

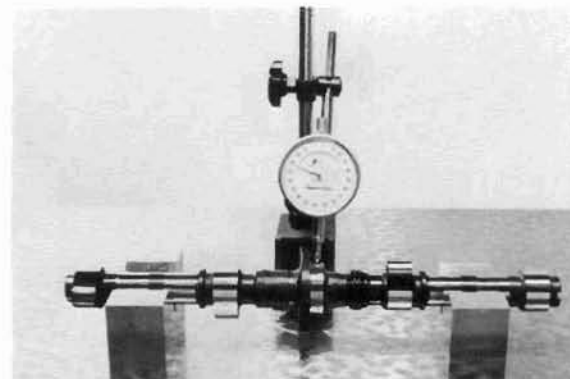


Fig. 7-65.

Valve face wear

- Visually inspect each valve for wear of its seating face. Replace any valve with an abnormally worn face.
- The thickness $\textcircled{T}$ decreases as the wear of the face advances. Measure the thickness and, if the thickness is found to have been reduced to the limit, replace it.

Valve thickness specification

Standard	Service limit
1.0 ~ 1.4 mm (0.039 ~ 0.055 in.)	0.5 mm (0.020 in.)

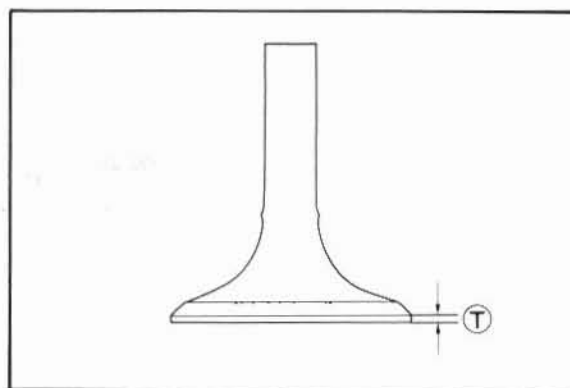


Fig. 7-66.

Valve stem deflection

- Support the valve with "V" blocks, as shown, and check its deflection with a dial gauge. The valve must be replaced if the deflection exceeds the limit.

Valve stem deflection specification

Service limit
0.05 mm (0.002 in.)

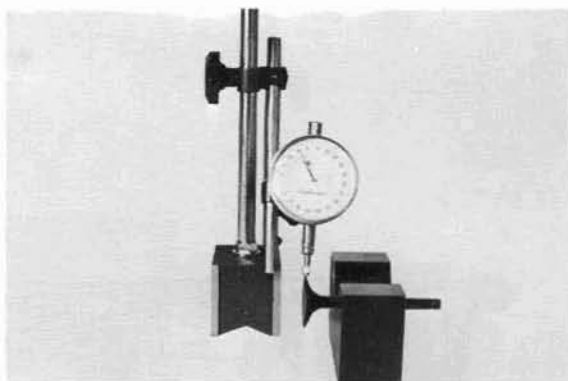


Fig. 7-67.

Valve-to-guide clearance

- Measure the clearance in two directions, "X" and "Y", perpendicular to each other, by rigging up the dial gauge as shown. If the clearance exceeds the limit specified below, then determine whether the valve or the guide should be replaced to reduce the clearance to the standard range:

Valve-to-guide clearance specification

Valve	Standard	Service limit
Intake valves	0.025 ~ 0.055 mm (0.0009 ~ 0.0022 in.)	0.090 mm (0.0035 in.)
Exhaust valves	0.040 ~ 0.070 mm (0.0016 ~ 0.0028 in.)	0.100 mm (0.0039 in.)

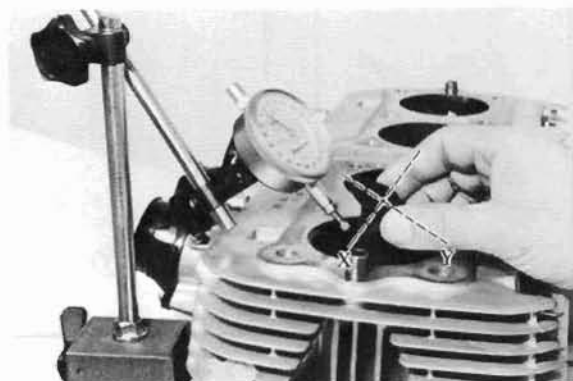


Fig. 7-68.

- If the valve stem is worn down to the limit, as measured with a micrometer, where the clearance is found to be in excess of the limit indicated above, replace the valve; if the stem is within the limit, then replace the guide. After replacing valve or guide, be sure to recheck the clearance.

Valve stem diameter specification

Valve	Standard	Service limit
Intake valves	6.960 ~ 6.975 mm (0.2740 ~ 0.2746 in.)	6.90 mm (0.271 in.)
Exhaust valves	6.945 ~ 6.960 mm (0.2734 ~ 0.2740 in.)	6.80 mm (0.267 in.)

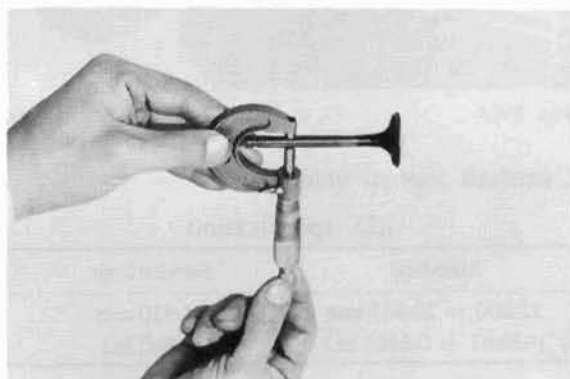


Fig. 7-69.

Valve seat width measurement

- Coat the valve seat with red lead paste uniformly. Fit the valve and tap the coated seat with the valve face in a rotating manner, in order to obtain a clear impression of the seating contact. In this operation, use the valve lapper to hold the valve head.

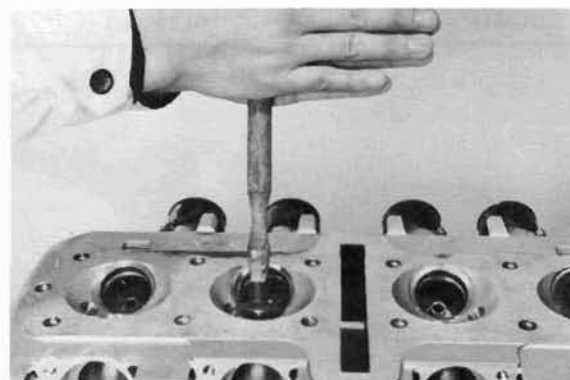


Fig. 7-70.

- The ring-like red lead impression left on the valve face must be continuous — without any break — and, in addition to this requirement, the width of the red-lead ring, which is the visualized seat “width”, must be within the following limit:

Valve seat width specification

Seat width	Standard	Wear limit
Ⓢ	1.1 ~ 1.3 mm (0.04 ~ 0.05 in.)	1.6 mm (0.06 in.)

If either requirement is not met, correct the seat by servicing it as follows:

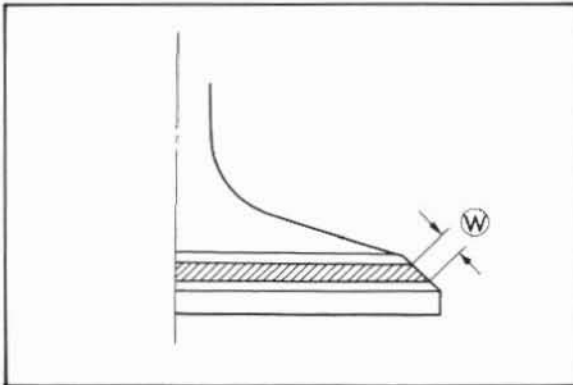


Fig. 7-71.

Valve seat servicing

- The valve seats for both intake and exhaust valves are angled to present three bevels, 15° (inner), 45° (middle) and 75° (outer). To reface the seat, proceed as follows:

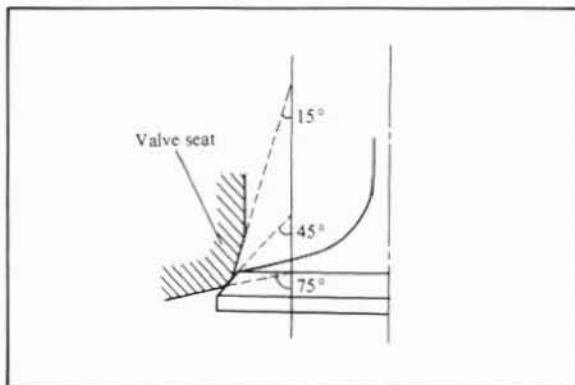


Fig. 7-72.

- Make cuts at 15° and 75° first, removing a minimum of stock at each. Make a cut at 45°, producing a width of 1.1 ~ 1.3 mm (0.04 ~ 0.05 in.). The amount of stock removed in this cutting directly affects the valve position in regard to tappet clearance.

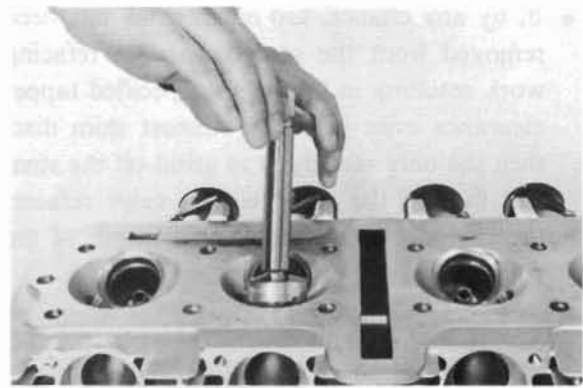


Fig. 7-73.

NOTE:

This is a delicate machining operation, and must be carried out cautiously, bearing in mind that there is a danger that the valve will be raised of so much toward the camshaft that the tappet clearance will become unadjustable even with the thinnest shim fitted to the tappet.

- Lap the seat with two or three sizes of lapping compound. Use the coarse compound to produce contacting width by operating the valve lapper in the usual manner. Finish the seat width with the fine compound.

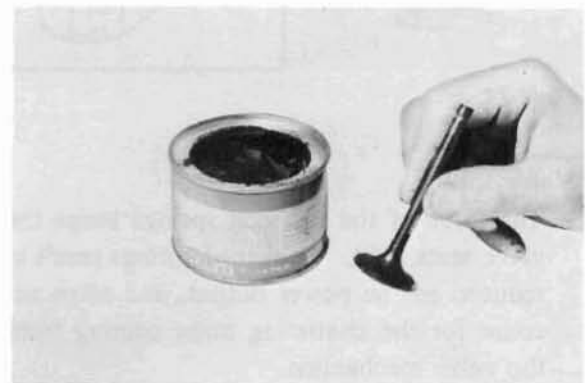


Fig. 7-74.

- Clean the seat after lapping. Check the seat width with the valve in the manner outlined above, with the red-lead paste applied uniformly on the seat.

NOTE:

After servicing the valve seats, be sure to adjust the tappet clearance after the cylinder head has been reinstalled.

- If, by any chance, too much stock has been removed from the seat during the refacing work resulting in loss of the specified tappet clearance even with the thinnest shim disc, then the only remedy is to grind off the stem end face of the valve with a valve refacer, thereby shortening the overall length of the valve.

IMPORTANT:

- This remedy is permissible where the length ① will not be reduced to less than 4.0 mm. If this length becomes shorter than 4.0 mm, then the valve must be replaced.
- After installing the valve whose stem end has been ground off as above, check that the face ② of valve stem end is above the cotter pin ③.

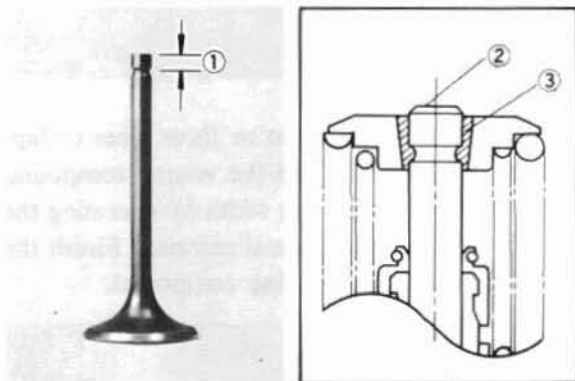


Fig. 7-75.

Valve spring

- The force of the two coil springs keeps the valve seats tight. Weakened springs result in reduced engine power output, and often account for the chattering noise coming from the valve mechanism.
- Check the springs for strength by measuring their free lengths and also the force required to compress them. If the limit indicated below is exceeded by the free length reading or if the measured force does not fall within the range specified, replace with a SUZUKI spring.

NOTE:

Replace two springs at a time, outer and inner, if any one of these is found to be beyond the limit.

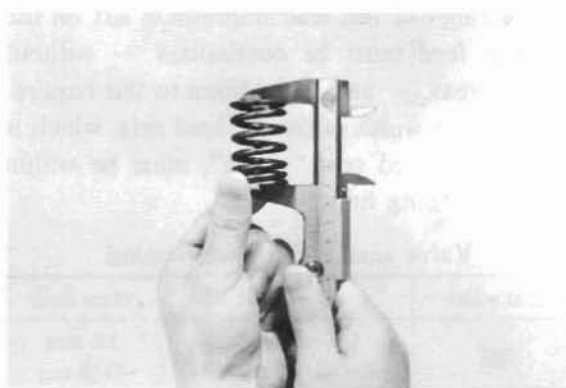


Fig. 7-76.

Free length specification

Spring	Standard	Service limit
INNER	35.3 ~ 37.0 mm (1.39 ~ 1.46 in.)	33.9 mm (1.33 in.)
OUTER	43.00 ~ 43.25 mm (1.692 ~ 1.702 in.)	41.3 mm (1.63 in.)

Spring tension specification

INNER	29.3 ~ 34.0 kg/23 mm (64.59 ~ 74.96 lb/0.91 in.)
OUTER	50.4 ~ 58.3 kg/27 mm (111.11 ~ 128.53 lb/1.06 in.)

IMPORTANT:

Replace all of the valve springs at a time, if any one of these is found to be less than the limit.

Cylinder head flatness

- Decarbonize the combustion chambers.
- Check the gasketed surface of the cylinder head for flatness with a straightedge and thickness gauge, taking a clearance reading at several places indicated. If the largest reading at any position of the straightedge exceeds the limit, replace the cylinder head.

Cylinder head warpage specification

Standard	Service limit
0.03 mm (0.001 in.)	0.2 mm (0.008 in.)

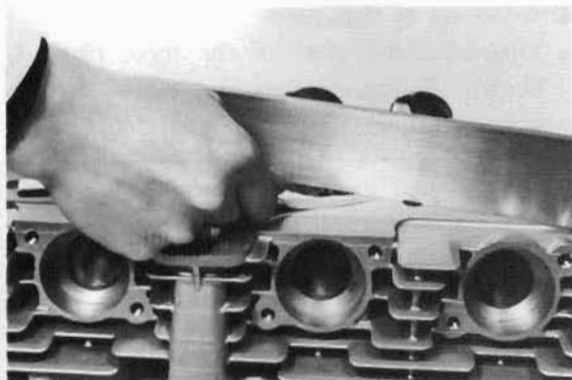


Fig. 7-77.

Cam chain tensioner adjuster

- The tension adjuster used in Model GS1000 is an automatic type that adjusts itself to apply a constant tensioning force to the chain by compensating for the stretch of the chain.
- The spring-loaded pushrod exerts a constant pressure on the camshaft chain. As the chain stretches, it yields to this pressure and remains in a state of tension. Once the adjuster is set after installation, there is no need to make any further adjustment.
- The pushrod is prevented from withdrawing. As a result, the pushrod effectively contends with the tendency of the camshaft chain to shake or vibrate during rough driving conditions.

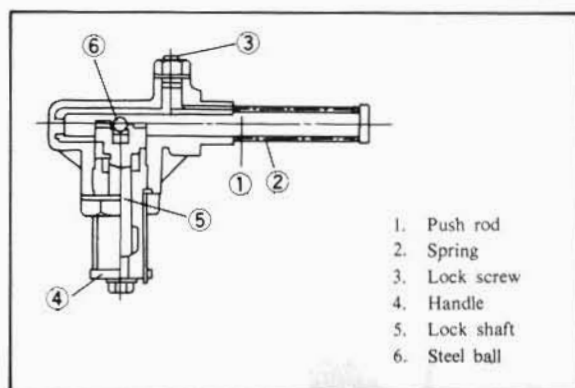


Fig. 7-78.

Reassembling

- Apply some high quality molybdenum disulfide lubricant (SUZUKI MOLY PASTE) to the pushrod and engine oil to the pushrod guide hole. Match the lock screw to the long groove in the pushrod, as shown, and insert the pushrod by pushing it to the indicated position.



Fig. 7-79.



- Move the pushrod back and forth with fingers to make sure that it moves smoothly.

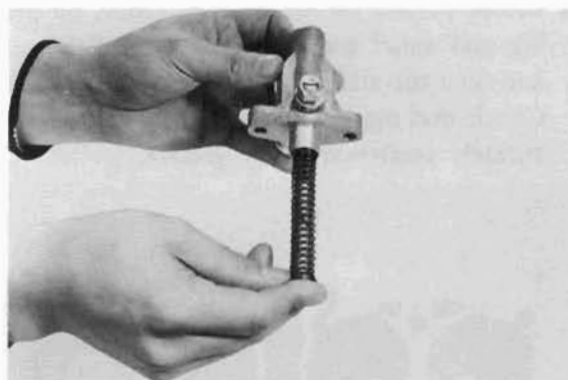


Fig. 7-80.

CYLINDER

REMOVAL

- Remove cylinder block.

After removing cylinder head, firmly grip the cylinder block at both ends, and lift it straight up. If the block does not come off, lightly tap on the finless portions of the block with a plastic mallet to shake the gasketed joint loose.

NOTE:

Cylinder removal from crankcase is made easier by the use of the cylinder disassembling tool (special tool: 09912-34510). This tool can be used on the cylinder head, too.



Fig. 7-81.

INSTALLATION

- Before putting on the cylinder block, oil the big and small ends of each connecting rod and also the sliding surface of each piston. Check that the "O" rings ① and ② are accurately positioned in the groove.

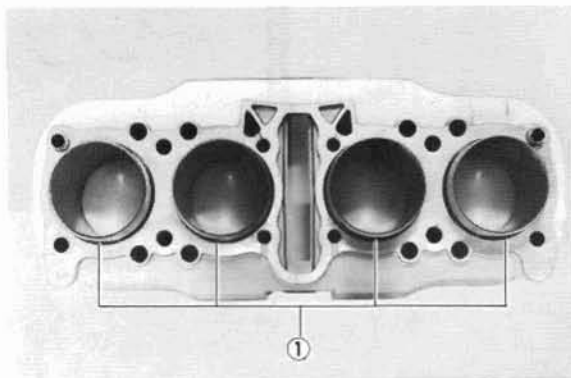


Fig. 7-82.

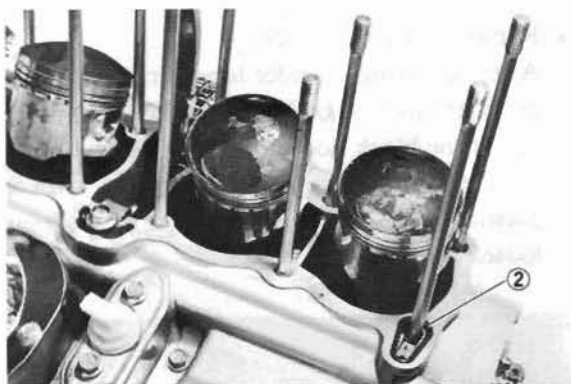


Fig. 7-83.

Distribution of ring gaps

- Distribute the gaps of the three rings as shown. Before inserting each piston into the cylinder, check that the gaps are so located.

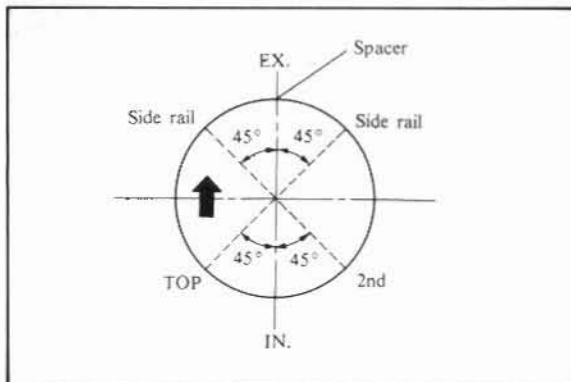


Fig. 7-84.

- Set the ring gaps as shown in Fig. 7-85 on No. 2 and No. 3 pistons, and then install piston ring compressor (special tool) in the manner indicated. Some light resistance must be overcome to lower the cylinder block.
- With No. 2 and No. 3 pistons in place, install No. 1 and No. 4 pistons and insert them into the cylinder.

NOTE:

- Do not overtighten the special tool bands or the cylinders will not admit the pistons.
- To rotate the crankshaft, hold down the camshaft-chain with one hand and torque the shaft in normal running direction with the other hand, using a 19-mm wrench.



Fig. 7-85.

INSPECTION

Cylinder wear

To check the cylinders for wear, take I.D. readings on each and determine whether they need reworking to the next oversize. For this purpose, use the cylinder gauge (special tool) and take a total of 6 readings at three elevations in longitudinal and transverse directions, two readings at each elevation.

Cylinder I.D. specification

Standard I.D.	Service limit
70.000 ~ 70.015 mm (2.7559 ~ 2.7565 in.)	70.080 mm (2.7590 in.)

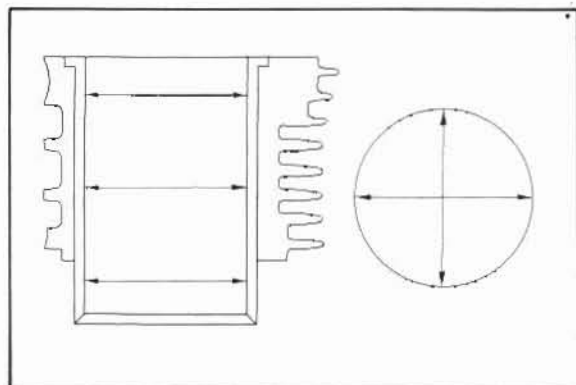


Fig. 7-86.

If any of the readings exceeds the I.D. limit or if the difference between the maximum and the minimum reading exceeds the limit for the difference, or if the bore surface is found to be badly burned or scored, rebore the cylinder to a suitable size according to the available oversize piston.

Piston-to-cylinder clearance	0.050 ~ 0.060 mm (0.0020 ~ 0.0024 in.)
------------------------------	---

Oversize piston	0.5 mm, 1.0 mm
-----------------	----------------

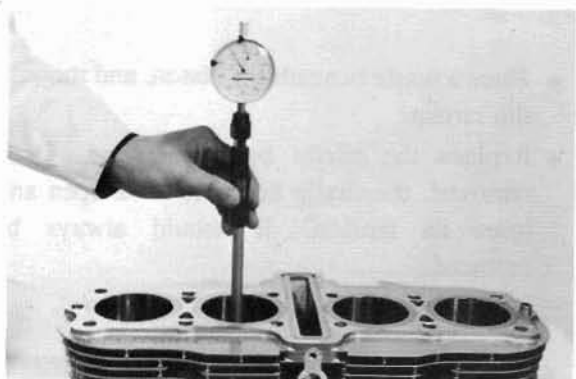


Fig. 7-87.

PISTON AND RINGS

REMOVAL

- Place a waste beneath the piston not to drop the parts in the crank case, and remove the circlip with a pincers.

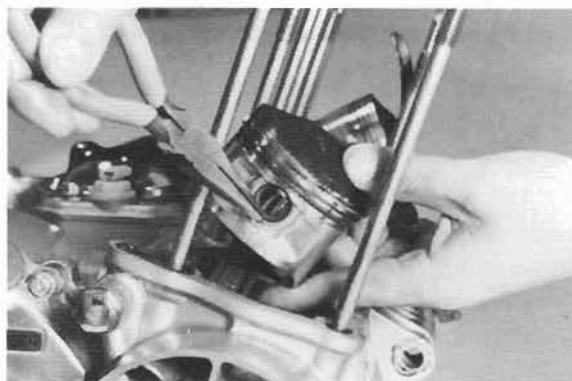


Fig. 7-88.

- Give the cylinder No. on the head of the piston, and draw out the piston pin with the special tool ①. Place the drawn-out piston pin in the same place as that given the cylinder No. on the head of the piston.

Special tools

09910-34510..... Piston pin puller

09910-33210..... Piston attachment

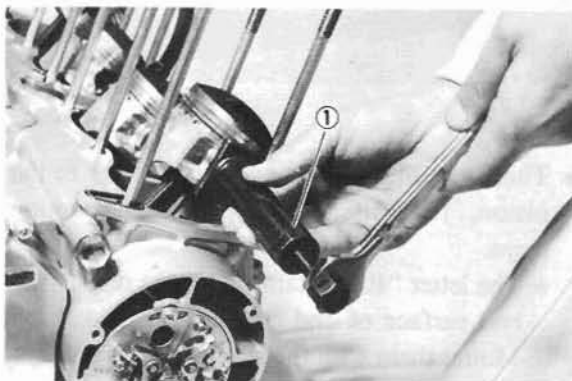


Fig. 7-89.

- In order to remove the piston ring, open its opening with the thumbs of both hands and push it upwards with a forefinger.

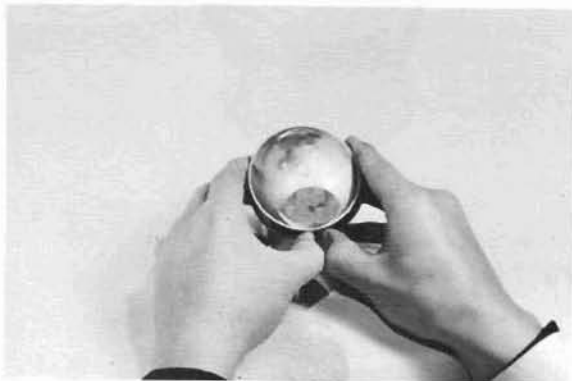


Fig. 7-90.

INSTALLATION

- Mount the piston ring in the order of oil ring, 2nd ring and top ring.
- Three rings should be mounted to the groove of the oil ring. First, mount the spacer ①. Then, mount the side rails ② to the upper and lower portions of the spacer ①.

NOTE:

- Mounting should be carried out as explained above since the ring groove is so constructed that the spacer may not be inserted if the side rails are mounted first.
- Be sure to remove the carbon left in the ring groove before mounting the piston ring.



Fig. 7-91.

- Then, mount 2nd ring and the top ring to the piston. Note the following before mounting them.
 - ★ The letter "R" is stamped on the respective end surface of 2nd ring and the top ring. Mount them with the stamped end surfaces turned upwards.

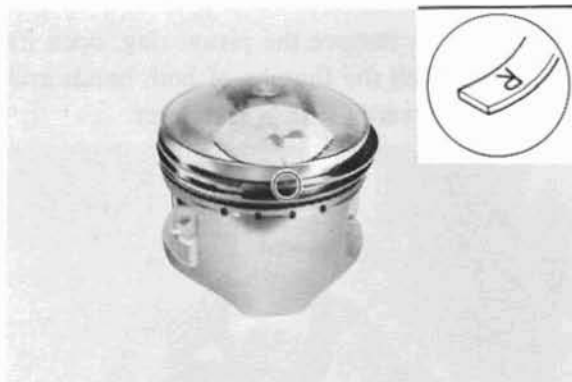


Fig. 7-92.

- ★ How to discriminate top ring and 2nd ring. Top ring and middle (2nd) ring differ according to the shape of ring face. In addition the face of top ring is chrome-plated whereas that of 2nd ring is not. The color of 2nd ring appears darker than that of the top one.

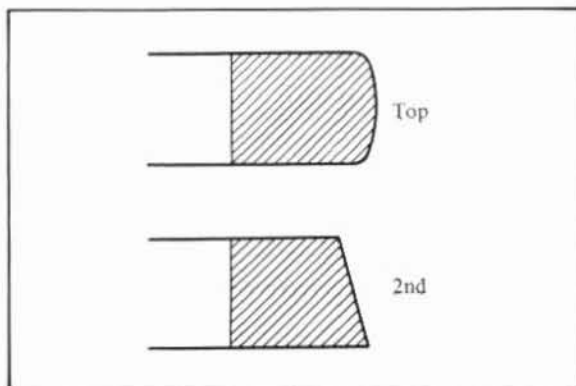


Fig. 7-93.

Piston should be mounted to the connecting rod in the following manner

- Before mounting the piston, be sure to remove the carbon left on the upper part of the piston using a soft metal scraper.
- Coat the piston pin with engine oil, and insert the piston pin into the piston by pushing it by hand, directing the arrow mark on the top of the piston towards the exhaust side.

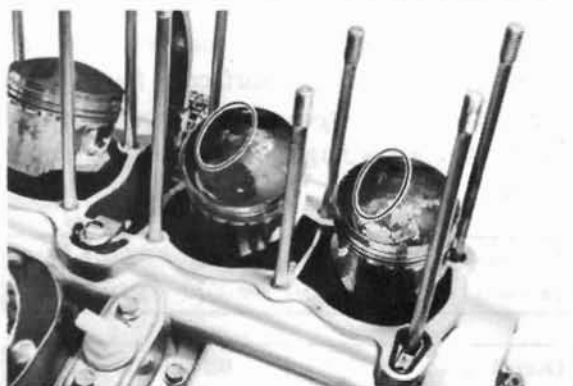


Fig. 7-94.

- Place a waste beneath the piston, and mount the circlip.
- Replace the circlip by a new one. Once removed, the circlip becomes misshapen and loses its tension. It should always be replaced.

- The circlip should be mounted in such a position ① that the mating ends of the circlip do not coincide with the groove portion of the piston.



Fig. 7-95.

INSPECTION

Piston wear determination

Measure with a micrometer the piston at the places and in the directions indicated. If the service limit has been reached or exceeded, replace the piston.

Piston diameter specification

Standard	Service limit
69.945 ~ 69.960 mm (2.7537 ~ 2.7543 in.)	69.880 mm (2.7512 in.)

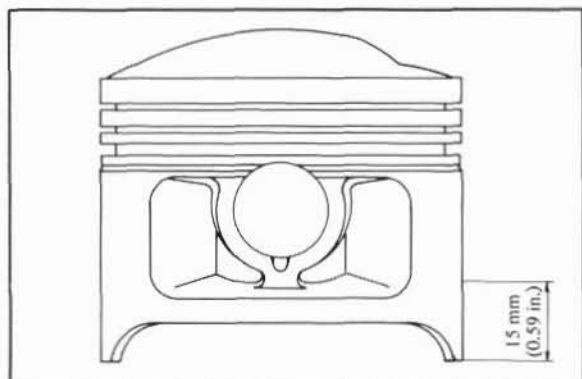


Fig. 7-96.

Piston ring clearance in the groove

Check each ring with a thickness gauge. If any of the three rings exceed the clearance limit, determine whether the ring or the piston should be replaced by measuring the ring thickness and the groove width. Limits are specified for the width and thickness.



Fig. 7-97.

- Oversize piston rings

The following two types of oversize piston rings are used. They bear the following identification numbers.

	1st	2nd
0.5 mm	50	50
1.0 mm	100	100

- Oversize oil rings

The following two types of oversize oil rings are used. They bear the following identification marks.

0.5 mm	Painted red
1.0 mm	Painted yellow

Ring-to-groove clearance specification

Piston ring	Standard	Limit
TOP	0.020 ~ 0.055 mm (0.0008 ~ 0.0022 in.)	0.180 mm (0.0071 in.)
2ND	0.020 ~ 0.060 mm (0.0008 ~ 0.0024 in.)	0.150 mm (0.0059 in.)

Ring thickness specification

Piston ring	Standard	Limit
TOP	1.175 ~ 1.190 mm (0.0463 ~ 0.0469 in.)	1.10 mm (0.043 in.)
2ND	1.170 ~ 1.190 mm (0.0461 ~ 0.0469 in.)	1.10 mm (0.043 in.)

Ring groove width specification

Ring groove	Standard	Limit
TOP	1.21 ~ 1.23 mm (0.047 ~ 0.048 in.)	1.30 mm (0.051 in.)
2ND	1.21 ~ 1.23 mm (0.047 ~ 0.048 in.)	1.30 mm (0.051 in.)
OIL	2.51 ~ 2.53 mm (0.099 ~ 0.100 in.)	2.60 mm (0.102 in.)

Piston ring gap

Each piston ring, with the exception of oil rings, is required to have its ring gap within the specified range and must be replaced if the limit is exceeded. To measure the gap, fit the ring to the piston at its skirt portion near the end and measure the gap. The specification values indicated here refer to the gap measured in this condition.



Fig. 7-98.

Ring gap specification

Piston ring	Standard	Limit
TOP and 2ND	0.15 ~ 0.35 mm (0.006 ~ 0.014 in.)	0.70 mm (0.028 in.)

A piston ring where elasticity has been reduced to a critical value must be replaced. For this reason, the limit is specified on free-state ring gap, as follows.

Free-state ring end gap specification

Piston ring	Standard	Limit
TOP and 2ND	Approx. 8.5 mm (0.33 in.)	6.8 mm (0.27 in.)

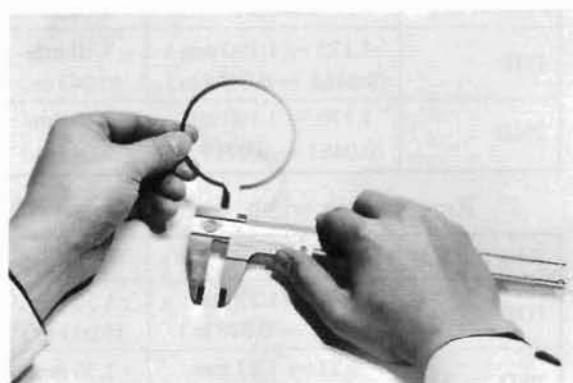


Fig. 7-99.

LOWER END**GENERATOR STATOR****Removal**

- Remove two bolts and starter motor cover.
- Place oil pan under generator cover and remove screw to remove generator cover and gasket.



Fig. 7-100.

- Remove two lead wire clamp screws ① and three stator set screws ② to remove stator.

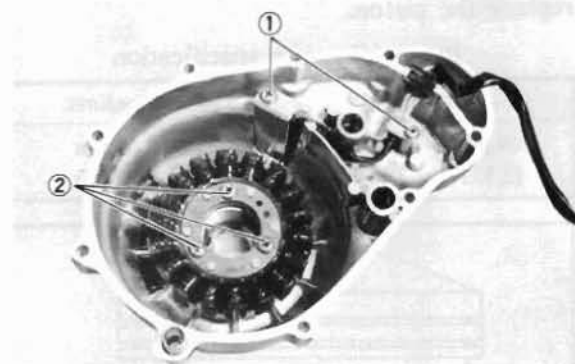


Fig. 7-101.

Installation

- Apply screw lock (special tool: 99000-32040) to the stator set screws and securely tighten the latter.

NOTE:

Wipe off oil and grease on screw completely and then apply the screw lock.

- Mount the lead wire clamp as shown in the drawing.
- Replace gasket by new one to prevent oil leakage, and tighten generator cover screw.

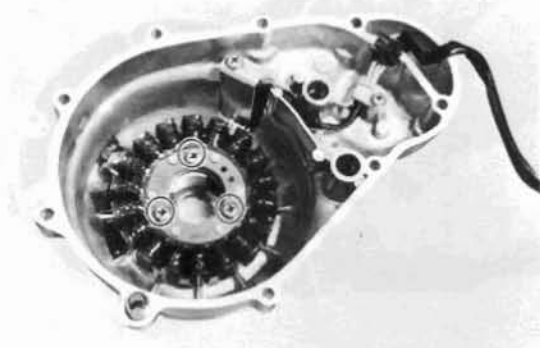


Fig. 7-102.

GENERATOR ROTOR

Removal

- The generator cover is removed in the same manner as the stator.
- Securely fix the rotor with the flywheel holder (special tool: 09930-44910) and remove the rotor bolt by turning it counterclockwise.

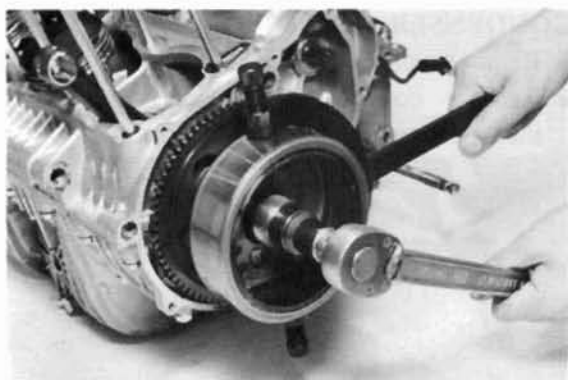


Fig. 7-103.

- Set rotor remover (special tool: 09930-34910) and remove rotor.

NOTE:

Do not hit the rotor with a hammer.

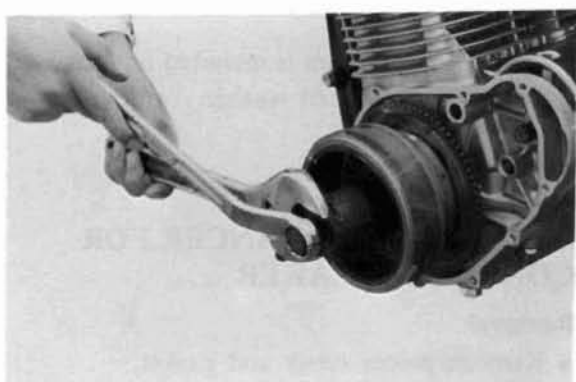


Fig. 7-104.

- Remove roller ①, spring ② and push piece ③ from starter clutch.

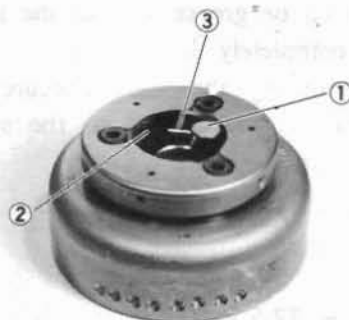


Fig. 7-105.

- Clamp the rotor with a vise taking care not to damage it and separate starter clutch from the rotor using the T type hexagonal wrench (special tool: 09914-25811).



Fig. 7-106.

Installation

- Installation is carried out in the reverse order of removal.
- Apply screw lock (special tool: 99000-32040) to Allen bolt.
- Thick copper washer ① is mounted with its notch directed towards crankshaft.

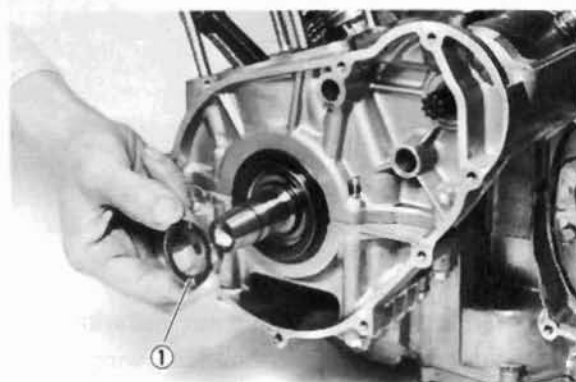


Fig. 7-107.

- Clean the tapered portion of the rotor and also the crankshaft. Use cleaning solvent to wipe off oil or grease so that the surfaces become completely dry.
- After mounting the rotor, secure it by tightening the center bolt to the specified torque value.

Bolt tightening torque:
9.0 ~ 10.0 kg-m
(65.0 ~ 72.5 lb-ft)

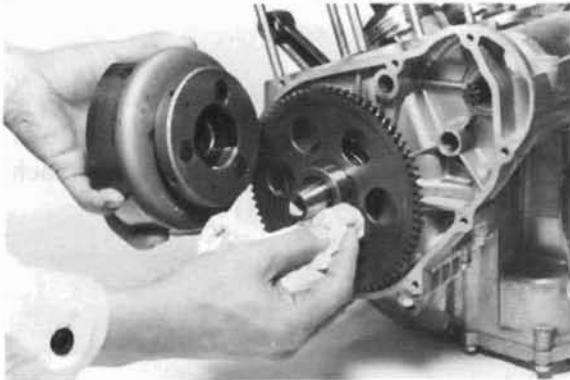


Fig. 7-108.

- Replace gasket by new one to prevent oil leakage.

CONTACT BREAKER POINTS

Removal

- Remove points cover and gasket.
- Remove mounting screws and the points.

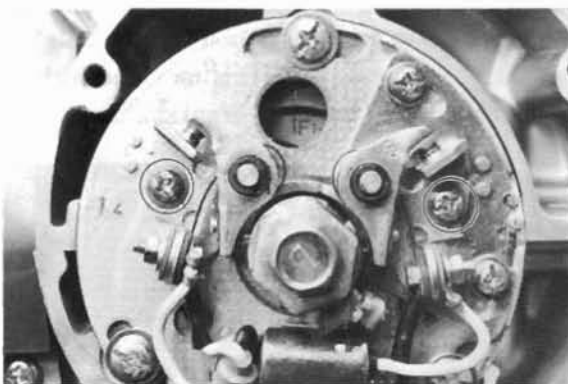


Fig. 7-109.

- Loosen lead wire mounting nut and withdraw condenser and ignition coil lead wires from the points.

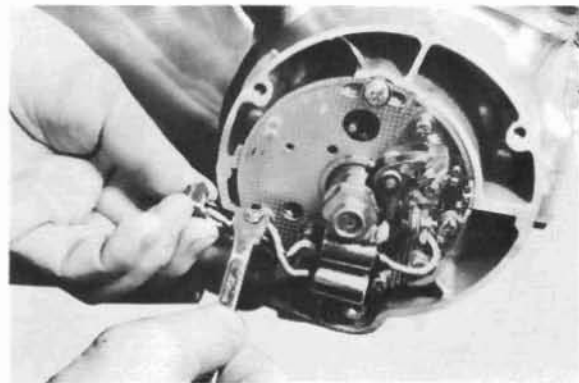


Fig. 7-110.

Installation

- Installation is carried out in the reverse order of removal.
- The condenser and ignition coil lead wires are mounted on the outer side of insulated washer.

CONDENSER

- Remove point cover and gasket.
- Remove condenser mounting screws and then condenser from contact breaker.

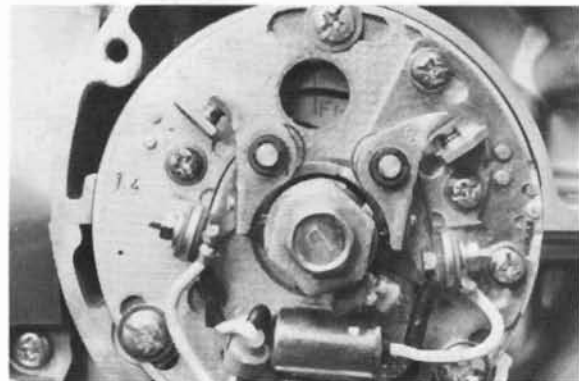


Fig. 7-111.

Installation

- Installation is carried out in the reverse order of removal.
- Condenser lead wire is mounted on the outer side of the insulated washer.

AUTOMATIC ADVANCER FOR CONTACT BREAKER

Removal

- Remove points cover and gasket.
- Apply wrench to crank turning nut to remove automatic advancer mounting bolts and the crank turning nut.

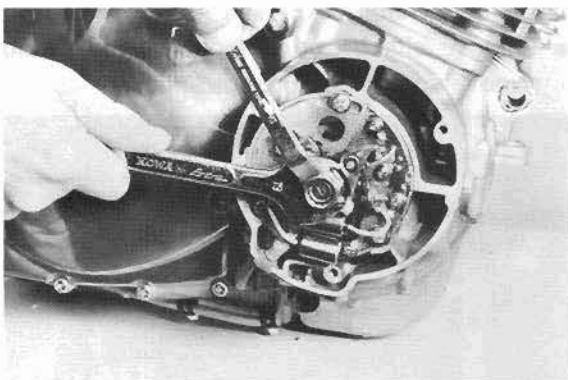


Fig. 7-112.

- Remove mounting screws for contact breaker assembly and then remove the assembly and the automatic advancer.

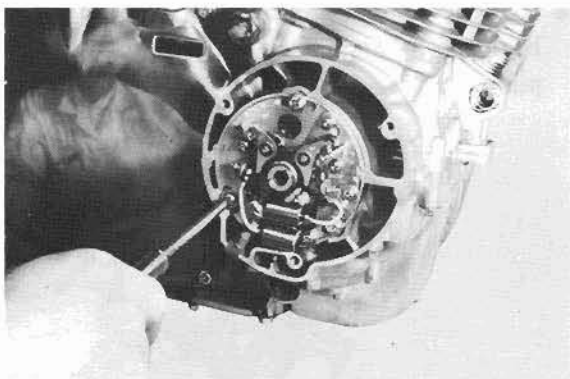


Fig. 7-113.

Installation

- Installation is carried out in the reverse order of removal.
- Make sure to register the groove on the back surface of the automatic advancer with the projection on the pin surface of crankshaft and the groove of the crankshaft turning nut.

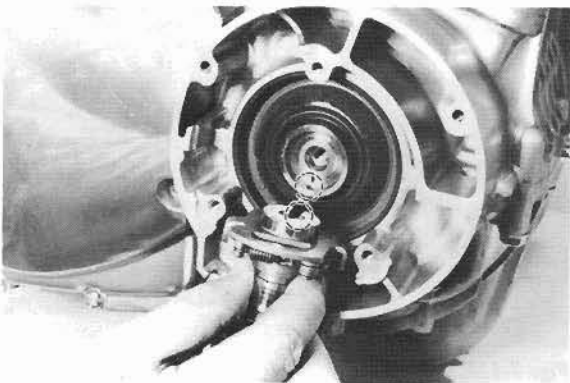


Fig. 7-114.

- Adjust ignition timing (see page 3-9).

Dismantling of automatic advancer

- Extract cam from the automatic advancer body and wipe off dirt, etc., completely from the cam.


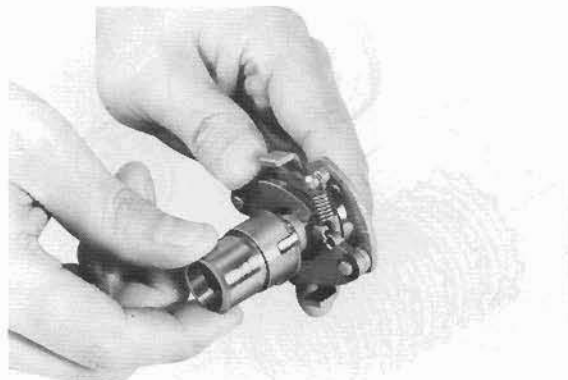


Fig. 7-115.

Assembly

- When installing the cam, the notch on the end face of the cam is aligned with the notch of the automatic advancer body.

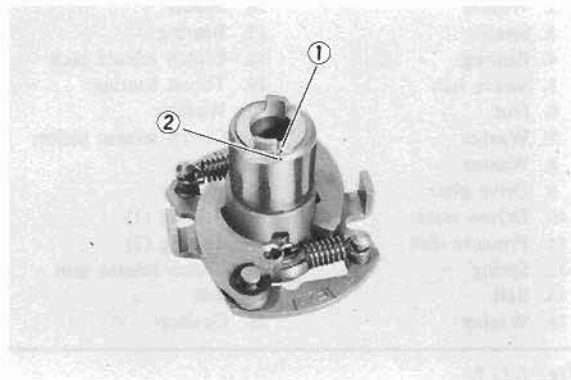

1. Notch 2. Notch

Fig. 7-116.

CLUTCH

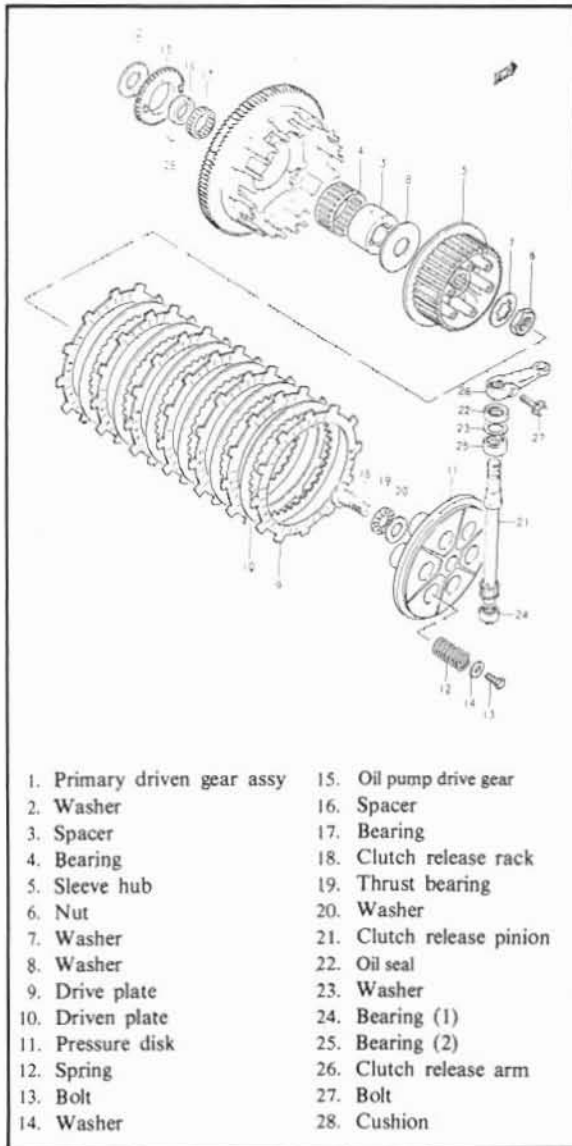
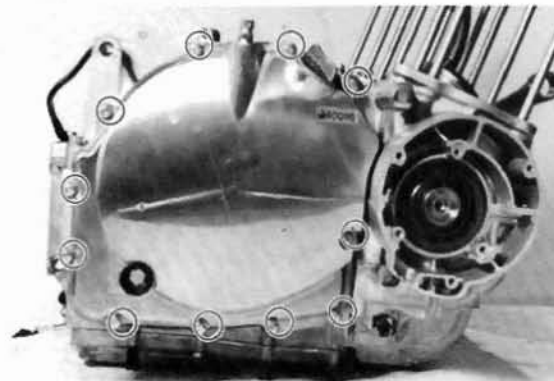


Fig. 7-117.

REMOVAL

- Remove the cam lever bolts for clutch cable and clutch cover screw.

Fig. 7-118.
7-32

- Remove clutch cover and gasket.
- Remove clutch spring mounting bolts and remove spring and pressure plate.

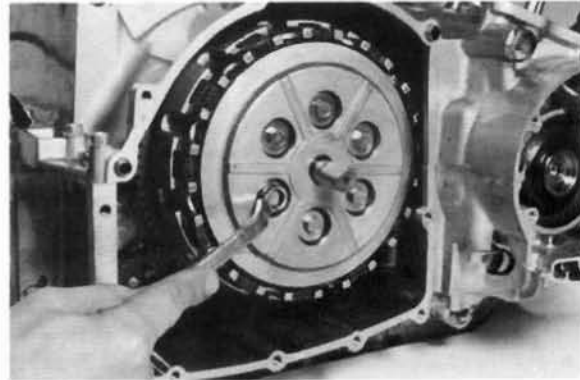


Fig. 7-119.

- Remove clutch release rack (1), needle bearing (2) and washer (3) from pressure plate.

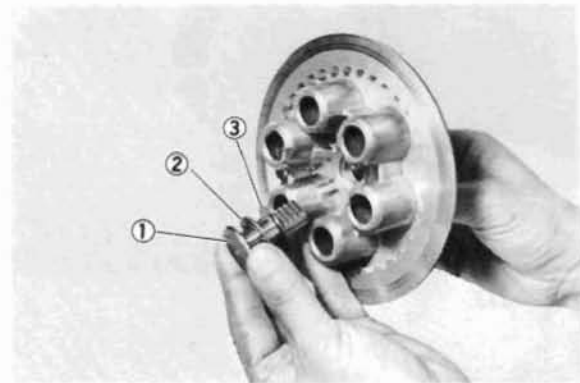


Fig. 7-120.

- After removal of the several sheets of clutch driven plate and drive plate, firmly secure clutch sleeve hub to remove mounting nut with special tool (1) (special tool: 09920-53710).

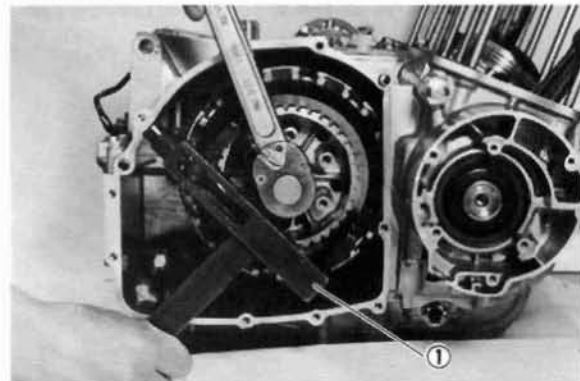


Fig. 7-121.

- Remove washer, clutch hub and the remaining plate.

Run two 6-mm bolts into the primary driven gear spacer to ease out the spacer by jacking. With the spacer removed, the primary driven gear (integral with the clutch housing) is free to disengage from the primary drive gear.

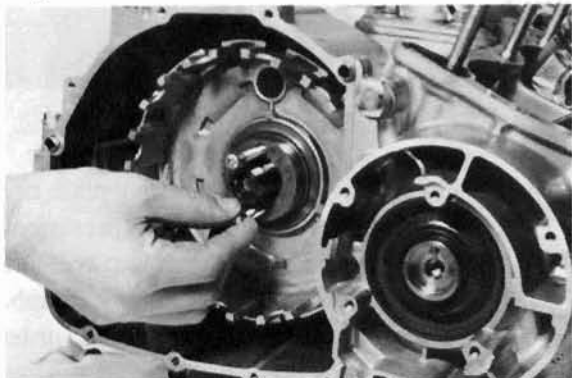


Fig. 7-122.

INSPECTION

Free length of clutch spring

Measure the free length of each coil spring with a caliper rule, and compare the elastic strength of each with the specified limit. Replace any spring not within the limit.

Clutch spring free length specification

Standard (when new)	Limit
39.0 ~ 40.5 mm (1.54 ~ 1.59 in.)	37.1 mm (1.46 in.)

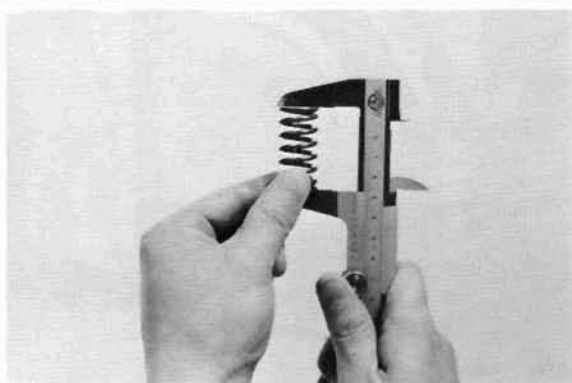


Fig. 7-123.

Clutch drive plate wear

Measure the thickness of each drive plate with a caliper rule. Replace drive plates found to have worn down to the limit.

Drive plate thickness specification

Standard (when new)	Limit
2.7 ~ 2.9 mm (0.10 ~ 0.11 in.)	2.4 mm (0.09 in.)

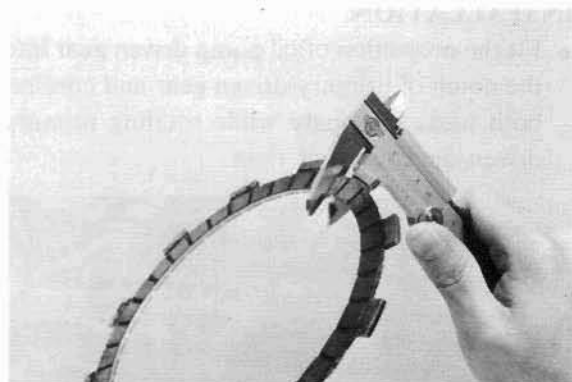


Fig. 7-124.

Clutch plate distortion

Check each plate for distortion by placing it on a surface plate and by inserting a thickness gauge under the clutch plate at several places. The distortion limit in terms of clearance for drive plates and driven plates are specified as follows:

Distortion	Service limit
Drive plate	0.2 mm (0.008 in.)
Driven plate	0.1 mm (0.004 in.)

Be sure to replace any plates exceeding this limit.

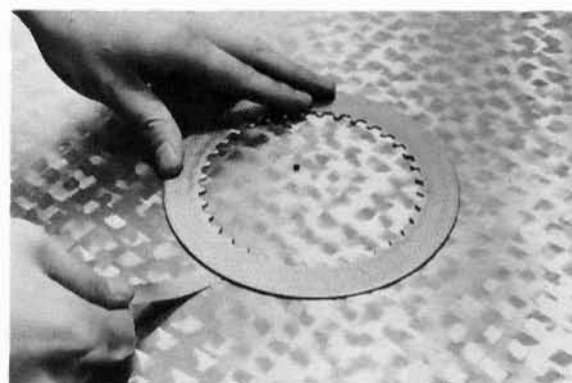


Fig. 7-125.

INSTALLATION

- Fit the projection of oil pump driven gear into the notch of primary driven gear and confirm both parts fit snugly while rotating primary driven gear left and right.

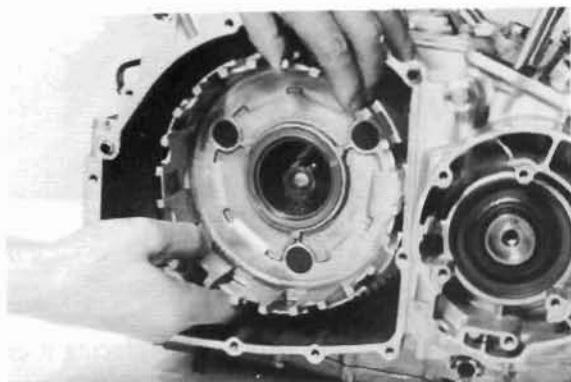


Fig. 7-126.

- After installing the oil pump driven gear and primary driven gear, apply engine oil to needle bearing and spacer to assemble the needle bearing and the spacer in the prescribed order.
- Assemble the primary driven gear and then thrust washer must be installed with the grooved side facing in.

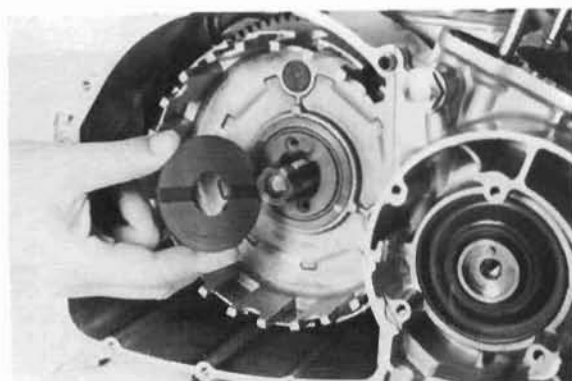


Fig. 7-127.

- After tightening the clutch sleeve hub nut, be sure to lock the nut by firmly bending the tongue of the washer. Tightening torque for the nut is specified.

Clutch sleeve hub nut tightening torque:

5.0 ~ 7.0 kg-m
(36.0 ~ 50.5 lb-ft)

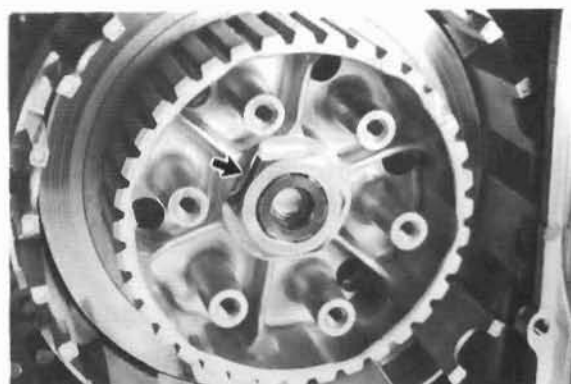


Fig. 7-128.

- Insert clutch driven plate and drive plate one by one into sleeve hub in the prescribed order. Insert clutch release rack into pressure plate and fit pressure plate into sleeve hub.
- Tighten clutch spring bolts in the order shown in the drawing.

NOTE:

Tighten the clutch spring set bolts in the manner indicated, tightening them by degrees until they attain a uniform tightness.

Clutch spring bolt tightening torque:

1.1 ~ 1.3 kg-m
(8.0 ~ 9.5 lb-ft)

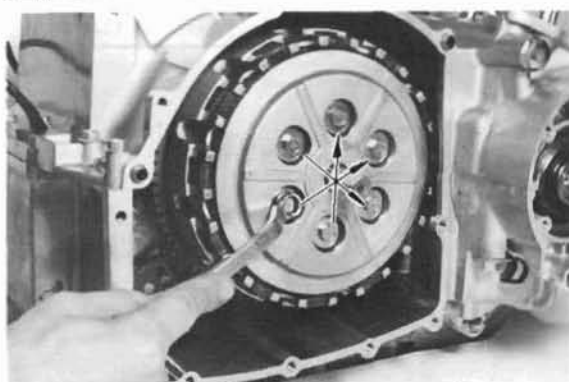


Fig. 7-129.

- Replace gasket by new one to prevent oil leakage.
- Engage the teeth of clutch release rack with those of pinion gear at the clutch cover side and replace clutch cover. Make sure that the rack and pinion gear engage positively. Install them, hammering lightly with plastic hammer and tighten screw.



Fig. 7-130.

EXTERNAL MECHANISM FOR GEAR SHIFT

Removal

- Remove gear shift lever.
- Remove engine sprocket cover and engine sprocket (see page 7-3).
- Remove clutch cover and primary driven gear (see page 7-32).
- Remove circlip set at the gear shift lever side using the special tool (09900-06104).
- Extract gear shift shaft from crankcase.

Installation

- Installation is carried out in the reverse order of removal.
- Install the gearshift shafts, with the center of the gear on shaft side matching the center of gearshift cam driven gear.

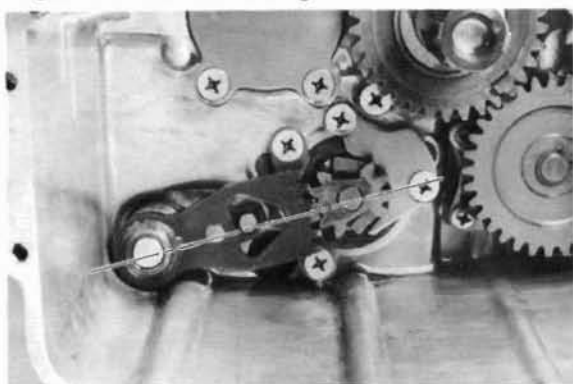


Fig. 7-131.

- Set circlip on the gear shift lever side.
Replace the circlip by new one.
- Install clutch driven gear and clutch cover.
- Replace gasket by new one to prevent oil leakage.

ENGINE LUBRICATION SYSTEM

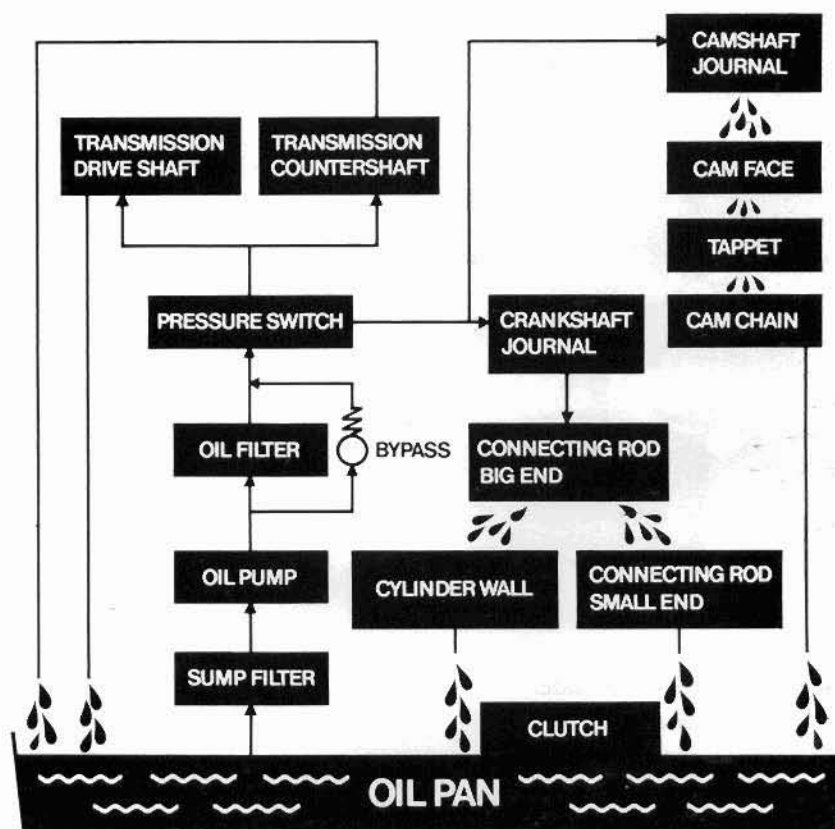
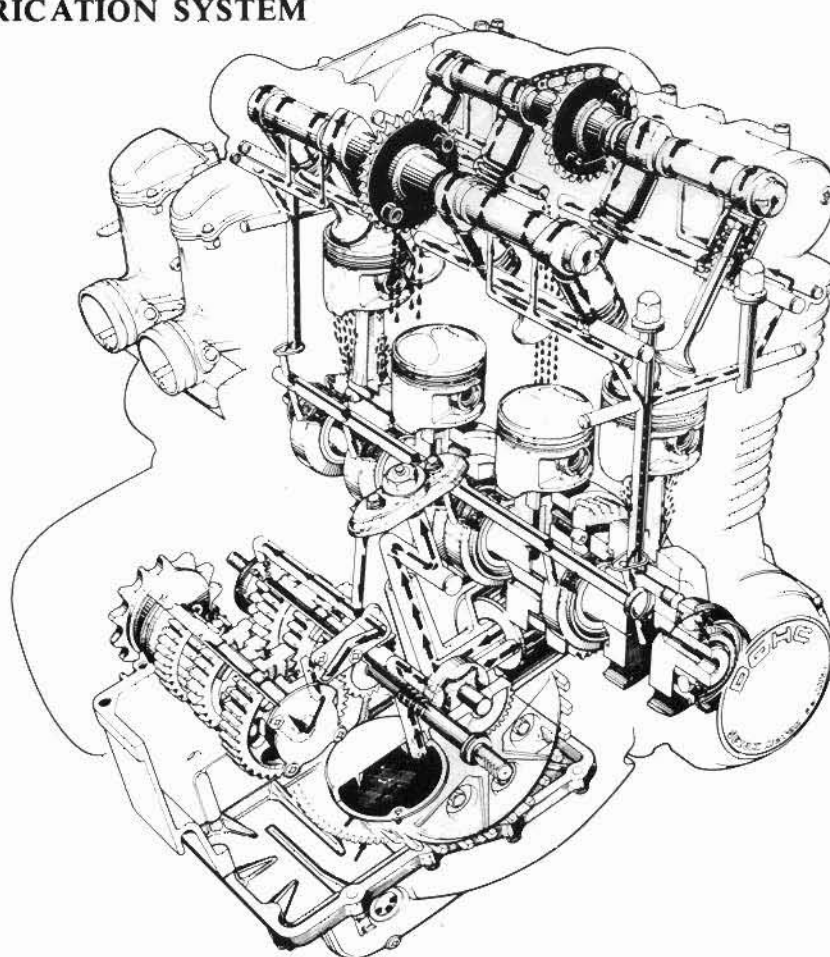


Fig. 7-132.

OIL PUMP

Removal

- Remove clutch cover and primary driven gear (see page 7-32).
- Remove oil pump drive gear, needle bearing and spacer.
- Remove three oil pump mounting bolts and remove oil pump body from crankcase.
- Remove the circlip of oil pump gear and then the gear.
- Remove one screw fastening oil pump body and extract pin securing the lower case and the upper case.

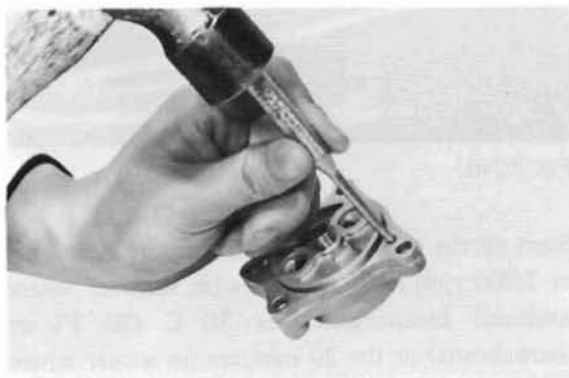


Fig. 7-133.

Outer rotor clearance in the body

Use a thickness gauge.

Outer rotor clearance limit:
0.25 mm (0.010 in.)

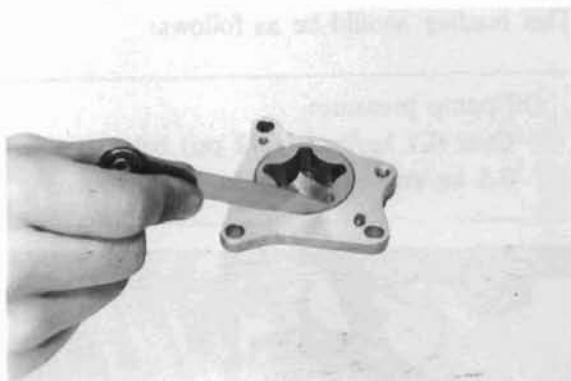


Fig. 7-134.

Tip clearance

This is the clearance between inner rotor and outer rotor. Use a thickness gauge.

Tip clearance limit:
0.2 mm (0.008 in.)

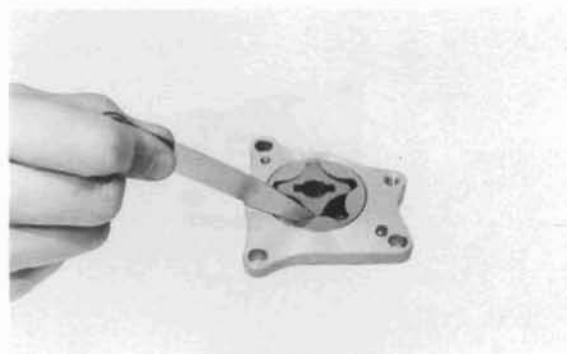


Fig. 7-135.

Side clearance

Put a straightedge to the pump and measure the clearance under the straightedge, as shown.

Side clearance limit:
0.15 mm (0.006 in.)

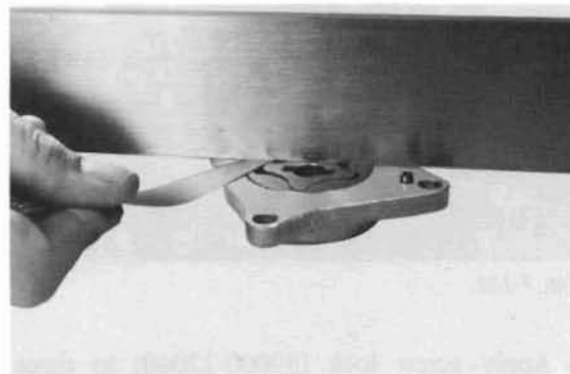


Fig. 7-136.

Installation

- Installation is carried out in the reverse order of removal.
- Thoroughly wash the oil pump, inner and outer rotors and oil pump case with a detergent and apply engine oil to them before inserting them into case.
Since there are no identification marks for the upper or lower portions of the inner rotor and outer rotor, the rotor can be inserted irrespective of these portions.
- Replace circlip by new one.

- Apply screw lock (99000-32040) to one screw fastening oil pump body. Wipe off oil completely.

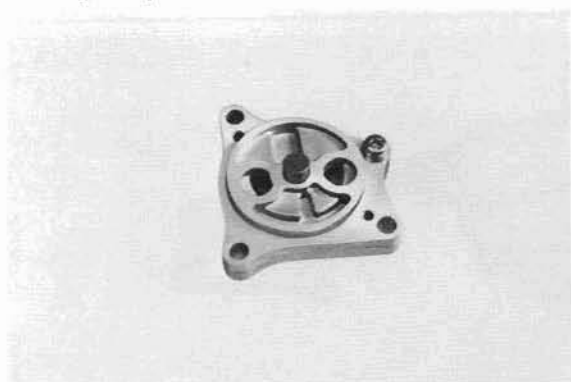


Fig. 7-137.

- Place two "O" rings, mounted on the crank case side, into "O" ring groove without fail. It is advisable to apply grease to "O" ring to prevent it from falling off.



Fig. 7-138.

- Apply screw lock (99000-32040) to three screws and fasten oil pump body (wipe oil off completely). At this time make sure that oil pump gear rotates smoothly.

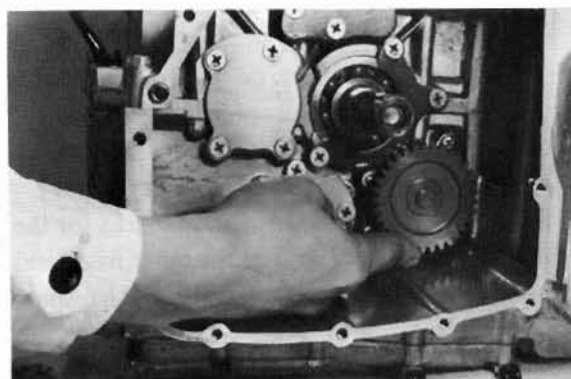


Fig. 7-139.

OIL PUMP PRESSURE TEST

Make sure the oil level is between "F" ① and "L" ② mark in the inspection window, and check there is no sign of oil leakage in any part of the lubrication oil circuit. Be sure, also, that both oil strainer (in the sump) and oil filter (in the pump discharge line) are clean.

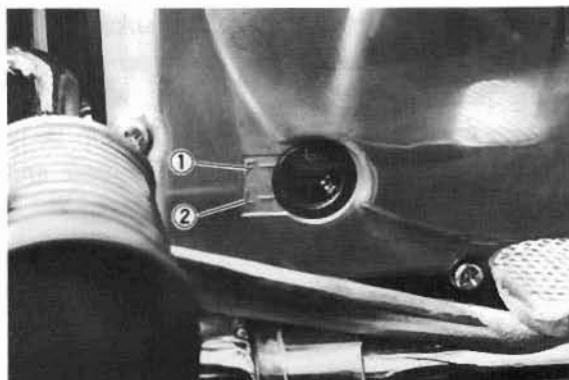


Fig. 7-140.

Start up the engine and warm it up by running it at 2,000 rpm for 10 minutes (in summer where ambient temperature is 30°C (86°F) or thereabouts) or for 20 minutes (in winter where ambient temperature is down to -5°C (23°F) or thereabouts).

Stop the engine, and affix the oil pressure gauge (special tool: 09915-74510) ① at the place indicated.

Restart the engine and run it at 3,000 rpm. Under this condition, take a pressure reading on the gauge.

This reading should be as follows:

Oil pump pressure:

Over 0.1 kg/cm² (1.42 psi) below
0.5 kg/cm² (7.11 psi) at 3,000 rpm

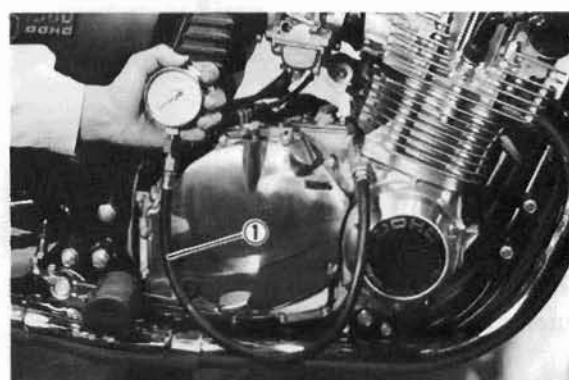


Fig. 7-141.

If the pressure is too low, it means that the oil pump is internally worn or otherwise defective and needs to be overhauled. If inner parts are found to be worn down to or beyond the limit, replace the complete oil pump unit.

OIL FILTER

Removal

Replace the oil filter by a new one in the following manner:

- Remove three nuts ① securing the filter cap ②.
- Take off the cap ②, pull out the old element.

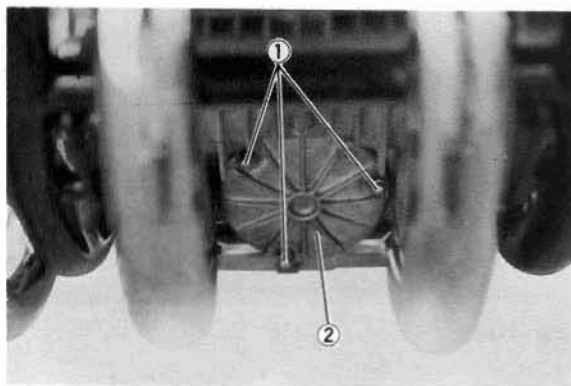


Fig. 7-142.

Installation

- This package contains a rubber seal ring in addition to the oil filter. When replacing the oil filter, be sure to also replace the seal ring to ensure oil-tightness.
- In fitting the seal ring to the filter chamber cap, lightly coat grease on the seal ring groove to avoid any chance of dropping or mislocating the ring during the installation work.

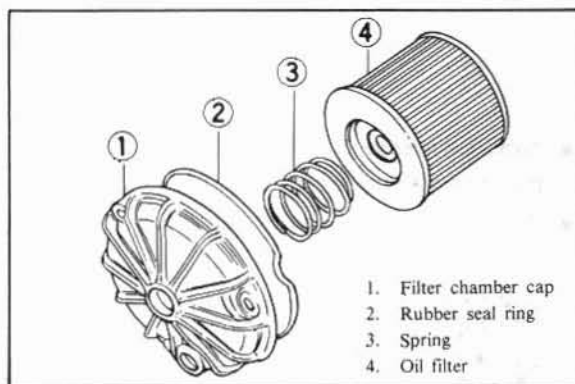


Fig. 7-143.

- Put on the cap ③ and secure it tightly.
- Install oil filter drain plug.

NOTE:

Pour about 3,800 ml (4.0 US.qt) of engine oil into oil pan only when changing oil and replacing oil filter at the same time.

SUMP FILTER

Removal

- Remove screws of oil pan ① and remove the oil pan from crank case.

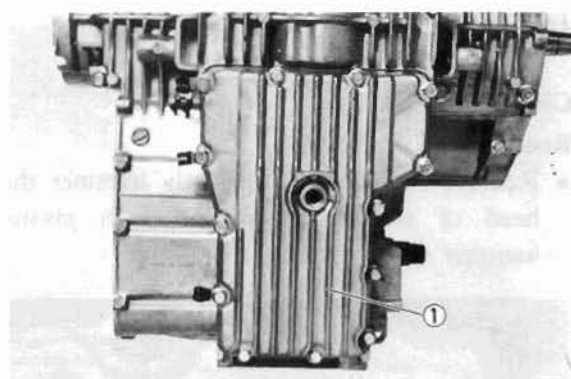


Fig. 7-144.

- Remove three screws and then sump filter.

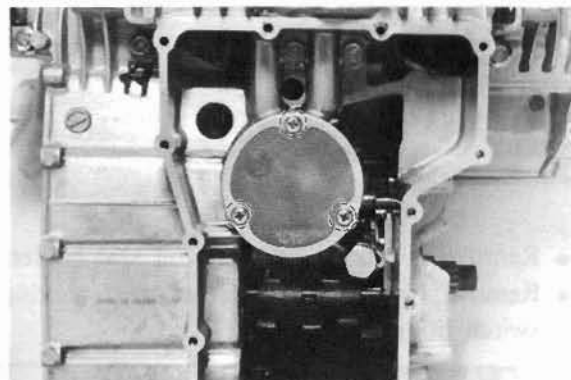


Fig. 7-145.

Installation

- Thoroughly wash the sump filter with detergent and fasten it with three screws.
- Install oil pan and tighten screws.
- Replace gasket by new one to prevent oil leakage.

Tightening torque:
0.6 ~ 0.9 kg-m
(4.5 ~ 6.5 lb-ft)

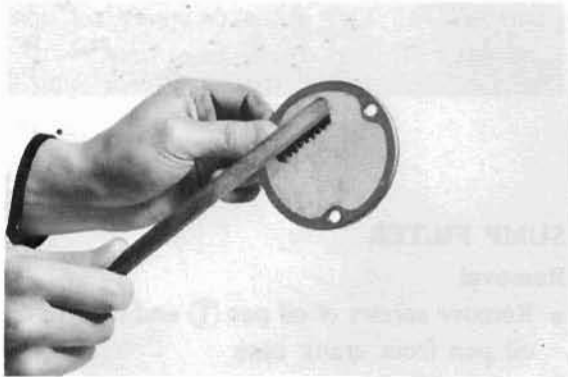


Fig. 7-146.

CRANKCASE

Removal

- Remove two bolts, and lightly hammer the head of starter motor gear with plastic hammer to remove starter motor.

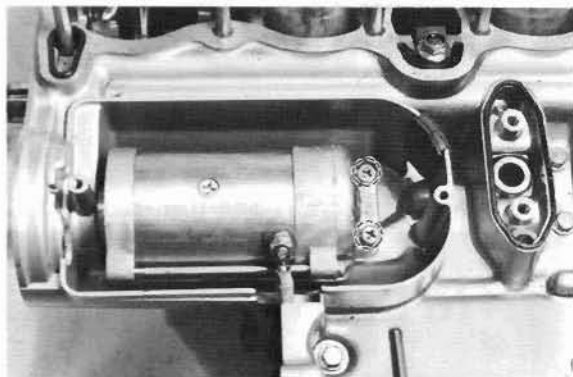


Fig. 7-147.

- Remove two bolts and then oil seal holder.
- Remove two screws and then gear shifting switch body.

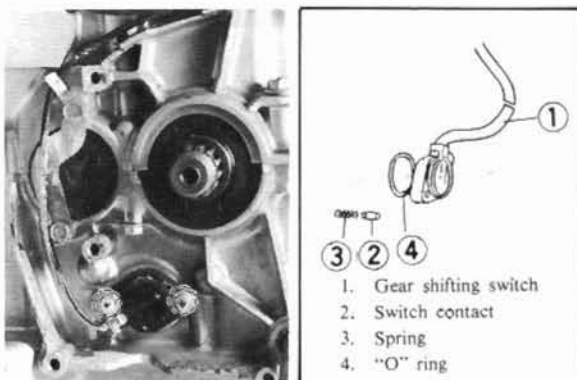


Fig. 7-148.

- Gear shift cam guide screw
..... 2 pcs. (overall length 12 mm)
- Gear shift pawl screw
..... 2 pcs. (overall length 12 mm)
- Counter shaft B/g retainer screw
..... 3 pcs. (overall length 16 mm)
- Drive shaft plate screw
..... 4 pcs. (overall length 16 mm)
- Oil pump gallery plate screw
..... 3 pcs. (overall length 16 mm)
- Remove cam driven gear shifting pawls No. 1 and No. 2.

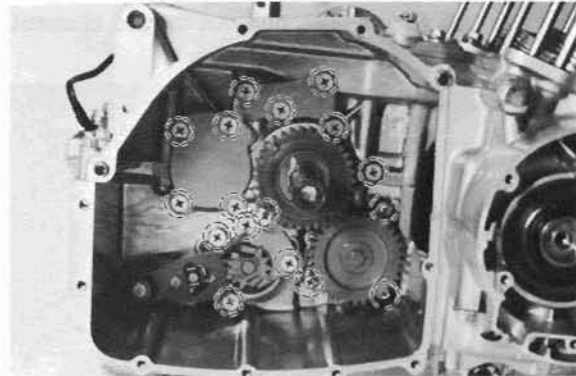


Fig. 7-149.

- Remove upper crankcase tightening bolts.
6 mm bolt..... 12 pcs.
8 mm bolt..... 1 pc.

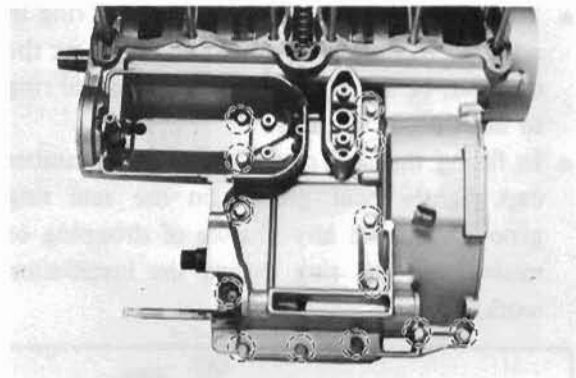


Fig. 7-150.

- Next turn engine upside down to remove oil pan from lower crankcase (see page 7-39).
- After removal of oil pan, remove lower crankcase tightening bolts.
6 mm bolt..... 9 pcs.
8 mm bolt..... 12 pcs.

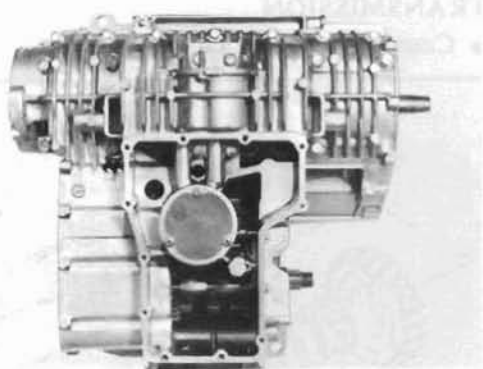


Fig. 7-151.

- Make sure that bolts are removed without fail. Hammer lightly the lower crankcase side with a plastic hammer to separate the upper and lower crankcase halves and then lift the latter.
- Remove the crankshaft sub-assembly, counter shaft gear and drive shaft gear which are all mounted on the upper crankcase. At this time be careful not to drop "C" ring and the like.

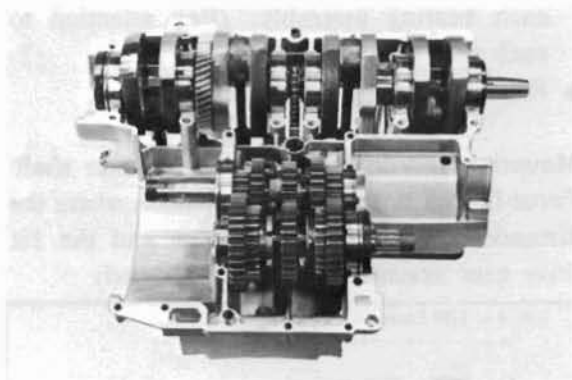


Fig. 7-152.

- Hold gear shifting fork by hand to extract gear shifting fork shaft from the lower crankcase.

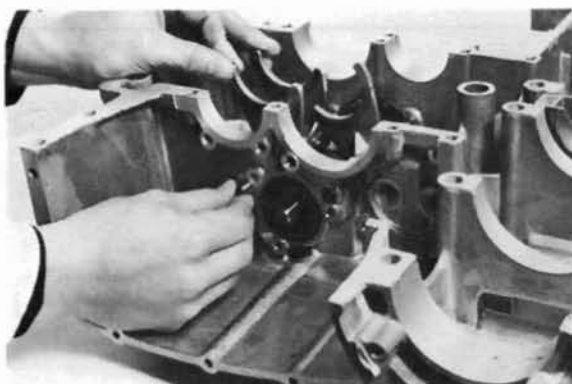


Fig. 7-153.

- Remove cam stopper holder to remove cam stopper and spring.

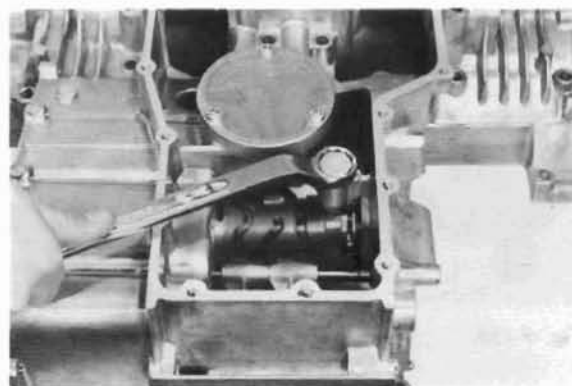


Fig. 7-154.

- Extract gear shifting cam to the right side.

CRANKSHAFT

Crankpin wear and big end side clearance

Check the wear of each crankpin in terms of connecting rod movement using a dial gauge as shown.

Deflection service limit:
3 mm (0.11 in.)

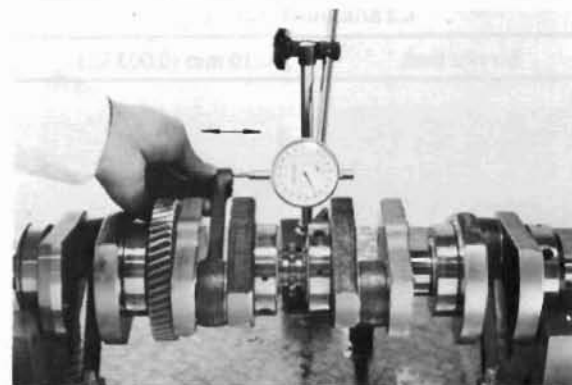


Fig. 7-155.

Push the big end of the connecting rod to one side and measure its side clearance with a thickness gauge.

Big end side clearance specification

Standard	Limit
0.10 ~ 0.65 mm (0.004 ~ 0.026 in.)	1.0 mm (0.039 in.)

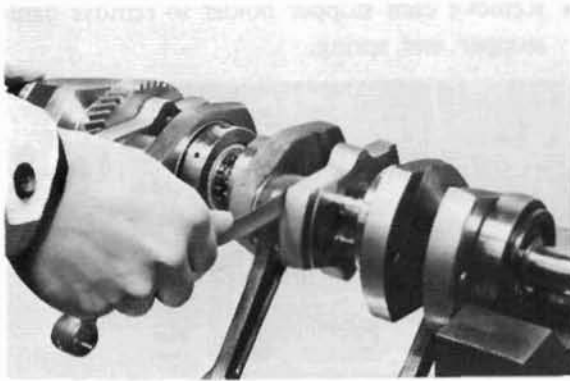


Fig. 7-156.

Where the limit is exceeded, replace crankshaft assembly or reduce the deflection and the side clearance within the limit by replacing the worn parts — connecting rod, big end bearing, crankpin and thrust washer etc.

Crankshaft deflection

Support the crankshaft with "V" blocks as shown, with the two end bearings resting on the blocks. Rig up the dial gauge, as shown, and rotate the crankshaft slowly to read the deflection.

Replace the crankshaft if the deflection is greater than the limit.

Crankshaft runout

Service limit	0.10 mm (0.003 in.)
---------------	---------------------

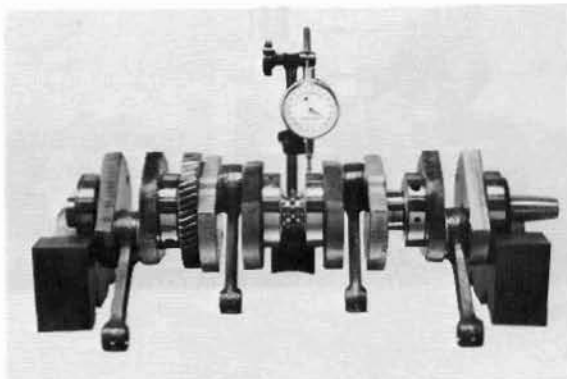


Fig. 7-157.

TRANSMISSION

• Counter shaft gear assembly

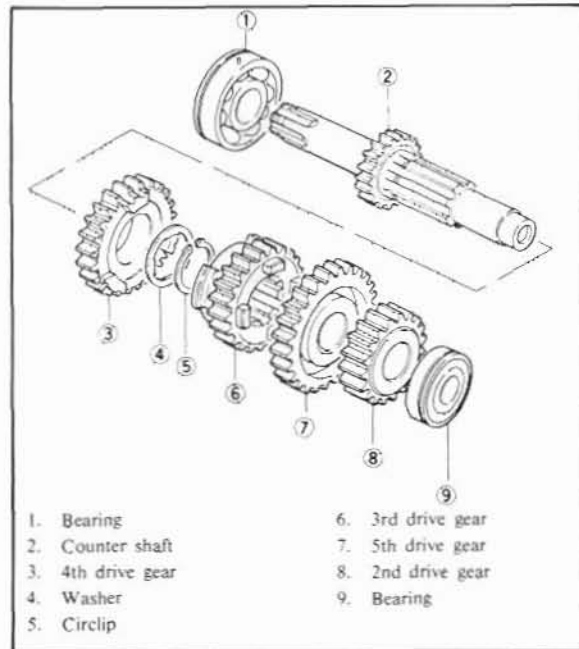


Fig. 7-158.

- Refer to the above drawing with respect to each bearing assembly. (Pay attention to each gear's direction.)
- Replace circlip by new one.

Mounting 2nd drive gear on the counter shaft

Force-fit 2nd drive gear to a position where the distance between this drive gear and the 1st drive gear assumes the value indicated:

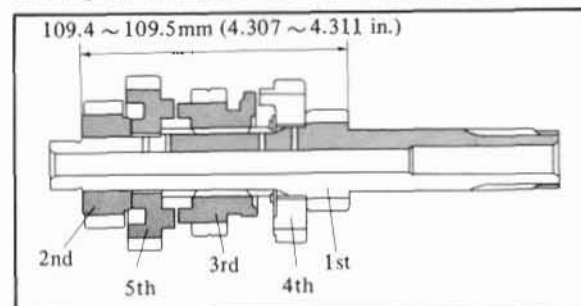


Fig. 7-159.

NOTE:

- 1) Before mounting 2nd drive gear, apply "THREAD LOCK SUPER 103K" (99000-32030) to its bore, taking care not to smear 5th drive gear with "SUPER 103K".
- 2) After mounting the 2nd drive gear, check that 5th drive gear spins smoothly by moving it with your fingers.

- Press fit bearings at both sides using the special tool (09913-85210).

Drive shaft gear assembly

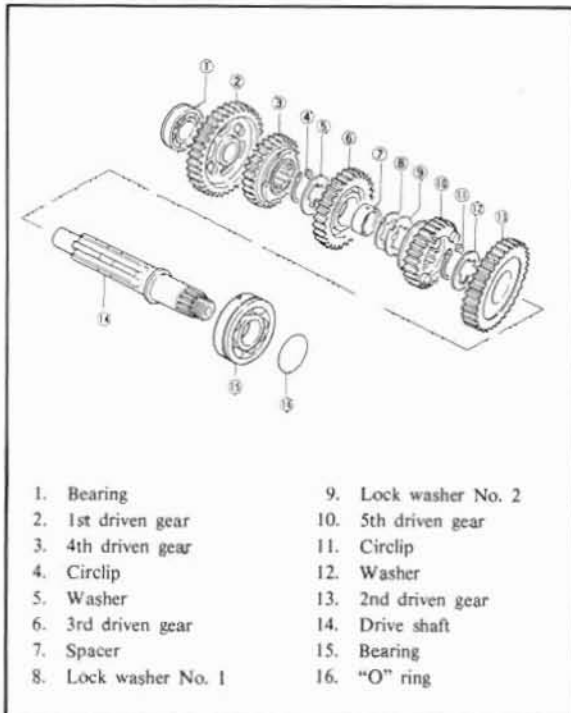


Fig. 7-160.

- See the above drawing with respect to the assembly of each gear (pay attention to the gear's direction).

CAUTION:

Spacer ⑦, lock washer No. 1 ⑧, lock washer No. 2 ⑨ and circlip should be mounted in the following manner.

- Insert lock washer No. 2 ⑨ into the drive shaft, and turn it to fit it into the groove. Then, fit the lock washer No. 1 ⑧ in the lock washer No. 2.



Fig. 7-161.

- Insert spacer ⑦ into the drive shaft, aligning the hole on the outside periphery of the spacer with that of the drive shaft. (The latter hole is for passing oil.)



Fig. 7-162.

- When mounting circlip, pay attention to the direction of the circlip. Fit it to the side where the thrust is as shown in the figure.

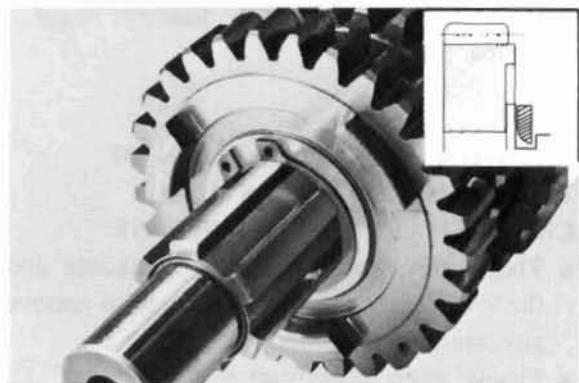


Fig. 7-163.

- Replace circlip by new one.
- Press-fit bearing ⑮ illustrated in the drawing using special tool (09913-85210).
- Fit "O" ring ⑯ in the bearing on the engine sprocket side. (Replace "O" ring by new one.)

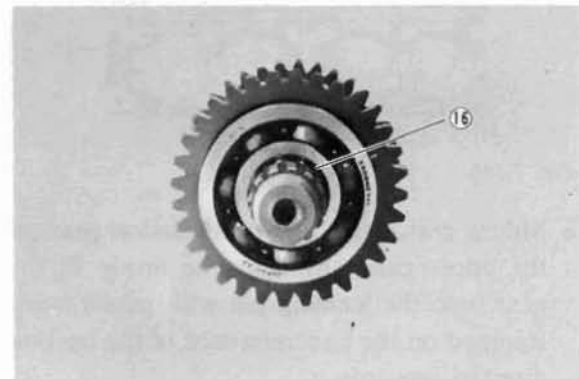


Fig. 7-164.

Gear backlash

Use a dial gauge to check the backlash. Drive gear and driven gear must be replaced if their backlash exceeds the limit.

Transmission gear backlash specification

Gears	Standard	Limit
1st, 2nd and 3rd	0 ~ 0.04 mm (0 ~ 0.002 in.)	0.09 mm (0.004 in.)
4th and 5th	0.05 ~ 0.10 mm (0.002 ~ 0.004 in.)	0.15 mm (0.006 in.)

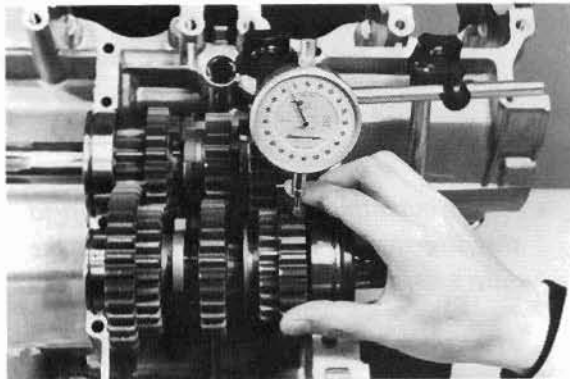


Fig. 7-165.

**CAUTION IN INSTALLATION OF
TRANSMISSION GEARS AND
CRANKSHAFT ON CRANKCASE**

- Thoroughly wash the upper crankcase and the lower crankcase with detergent to remove any sealing compound.
- Firmly insert crankshaft locating “pins” ①, transmission gear locating “C” rings ② for bearings on both sides and knock pin ③.

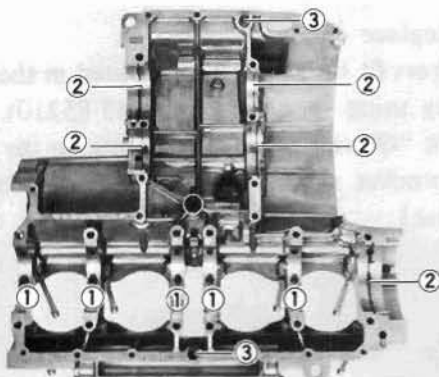


Fig. 7-166.

- Mount crankshaft and transmission gear on the upper case. At this time firmly fit the gear onto the locating pin with punch mark stamped on the circumference of the bearing directed upwards.

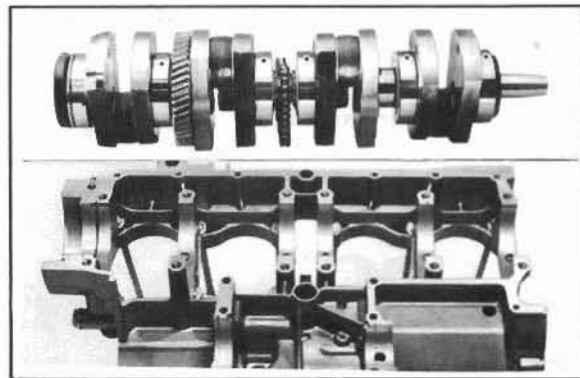


Fig. 7-167.

- Firmly fit the “C” rings for bearings on both sides of transmission gears and mount bearing stopper pin in the position shown in the drawing.

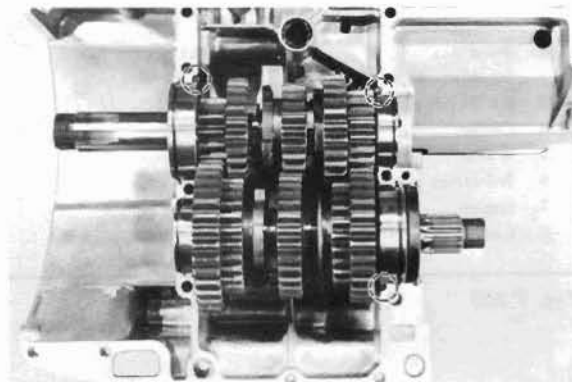


Fig. 7-168.

- Insert gear shifting cam into the lower crankcase. Confirm the neutral position of gear shifting cam, mount cam stopper, spring and cam stopper holder and fasten the cam stopper holder.

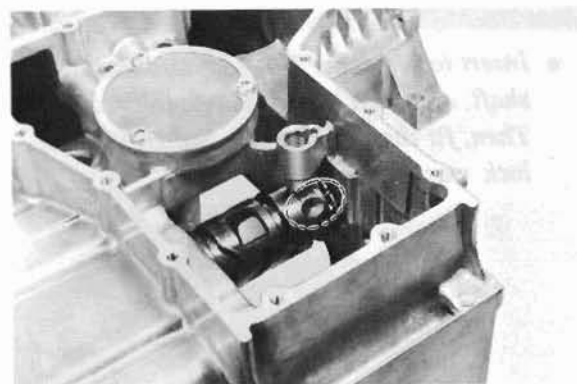


Fig. 7-169.

- Insert gear shifting fork shafts from the right side and mount gear shifting forks and cam stopper as shown in the drawing. At this time, pay attention to the direction of the gear shifting forks.

- ① Gear shifting fork for 3rd drive gear.
- ② Gear shifting forks for 4th and 5th driven gears.
- ③ Cam stopper.

- Apply engine oil to gear shifting forks and gear shifting cam.

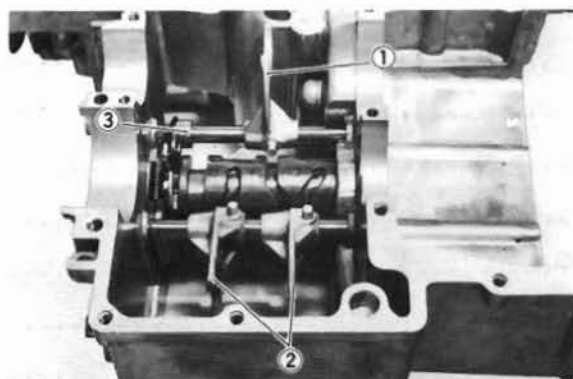


Fig. 7-170.

- Completely wipe off oil on the mating surface of lower crankcase and apply sealing compound (Suzuki three bond; 99000-31030) uniformly to the mating surface.
- Do not forget "O" ring.

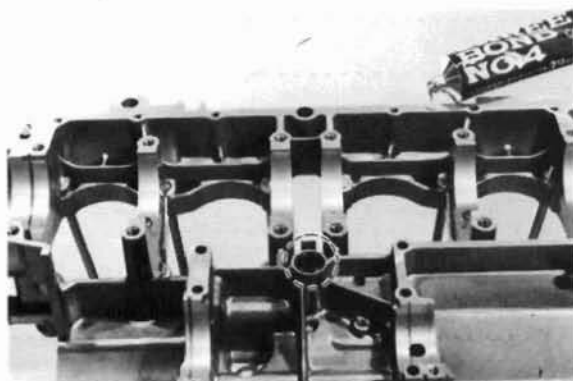


Fig. 7-171.

- Place the lower crankcase on the upper crankcase housing the transmission gears and crankshaft.
- Fasten together the upper and lower crankcase halves using the crankcase fastening bolts.

The lower crankcase fastening bolts must be tightened securely in the order of the numbers embossed on the crankcase.

- 6 mm bolt 9 pcs.
- 8 mm bolt 12 pcs.

Tightening torque for 8-mm bolts	2.0 kg-m (14.5 lb-ft)
Tightening torque for 6-mm bolts	1.0 kg-m (7.0 lb-ft)

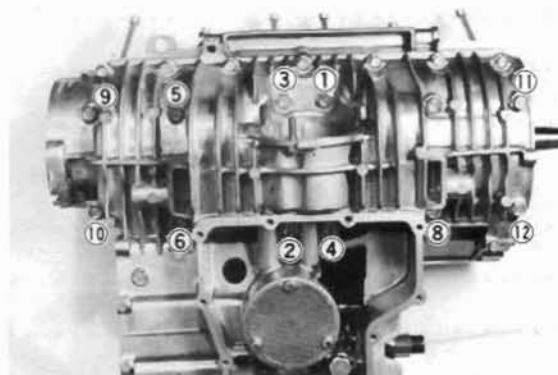


Fig. 7-172.

- Place crankcase with the open side directed upwards and tighten upper crankcase bolts.

6 mm bolt..... 12 pcs.

8 mm bolt..... 1 pc.

Tightening torque for 8-mm bolts	2.0 kg-m (14.5 lb-ft)
Tightening torque for 6-mm bolts	1.0 kg-m (7.0 lb-ft)

The shape of each gear shifting pawl is different. Mount the one with the narrower width on the gear shifting cam side.

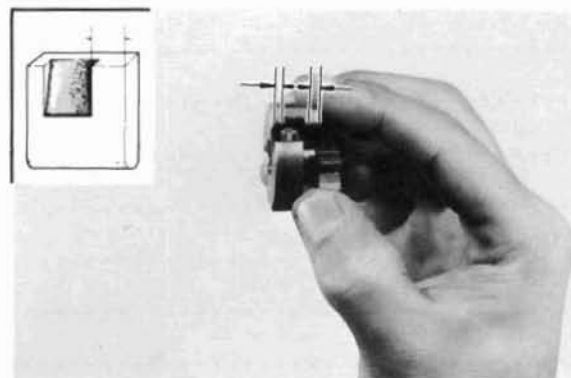


Fig. 7-173.

FUEL SYSTEM & CARBURETORS

CONTENTS

FUEL COCK	8-2
FUEL TANK.....	8-2
CARBURETORS	8-2
STARTER UNIT	8-3
PILOT CIRCUIT	8-4
MAIN CIRCUIT.....	8-4
FLOAT UNIT	8-5
NEEDLE VALVE	8-5
DISASSEMBLY	8-6
REASSEMBLY	8-7
ADJUSTMENT	8-8
TROUBLESHOOTING	8-12

FUEL COCK

The construction of the diaphragm type auto cock is shown below. When the engine is not running with the lever in the ON or RES position, the valve is kept in the closed position by applying pressure utilizing a spring so that no fuel will flow to the carburetors. When the engine is engaged, a negative pressure is generated in the diaphragm chamber through the vacuum (negative pressure) pipe which is connected to the carburetors, and builds up a negative pressure which is higher than the spring pressure so that the diaphragm is forced to open the valve and thus allow the fuel to flow to the carburetors. When the lever is set at the PRI (which stands for priming to supply the fuel to the carburetors of an internal combustion engines) position, the fuel flows to the carburetors not via the diaphragm unit but directly through the RES (reserve) pipe.

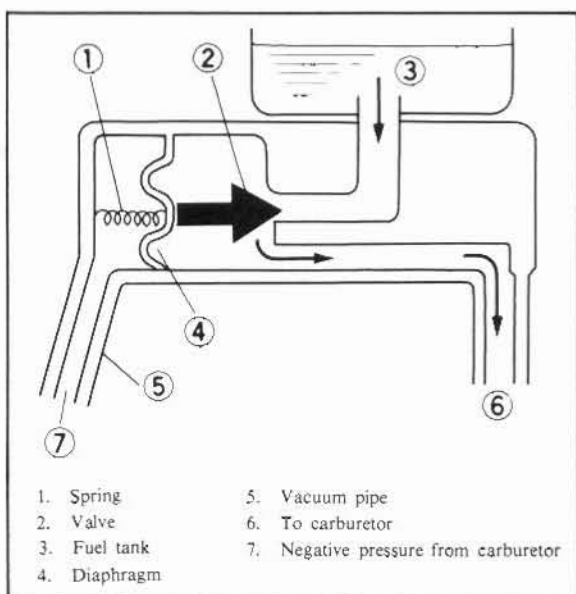


Fig. 8-1.

ON: Normally used. Functions as auto cock.

RES: Reserve fuel is used. Functions as auto cock.

PRI: Fuel is directly supplied. Does not function as auto cock.

The PRI position is used when the carburetors have little or no fuel, for example, when filling the fuel tank for the first time, or when the carburetors have been disassembled and

repaired. Shift the lever to the ON position when the engine begins to run smoothly.

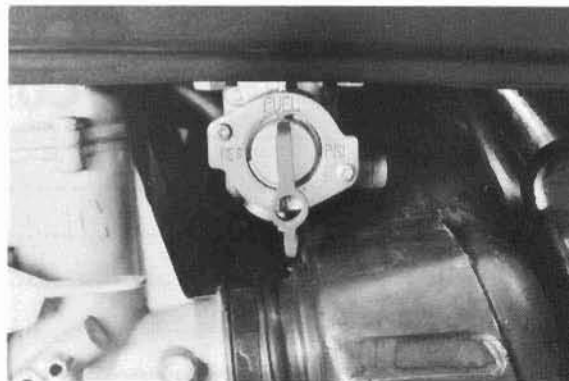


Fig. 8-2.

Cleaning

The fuel cock filter will collect impurities, and therefore must be periodically checked and cleaned.

FUEL TANK

The fuel tank has a cap with an air vent which is necessary for the smooth flow of the fuel to the carburetors. The fuel will not flow if the air vent is clogged. If this occurs, clean the air vent with compressed air.

Install the tank filler cap with the arrow mark facing toward the front.

Cleaning

Clean the fuel tank with flushing oil at the same time the fuel cock filter is being cleaned.

CARBURETORS

IMPORTANT:

The GS1000 carburetors have been manufactured and adjusted to special precise tolerances in order to meet the EPA emission levels. Before attempting to service or repair the carburetor assemblies, thoroughly read and understand the following instructions contained in this chapter, and also carefully review the information contained in the emission control systems and regulations chapter. It contains very important and specific information on the carburetor components.

DO NOT ADJUST THE AIR SCREW AND PILOT SCREW. Both of these components are pre-set at the factory using very specialized equipment. They can not be reset to the exact setting determined by the factory. Refer to the emission control systems and regulation chapter for further information.

Description

This motorcycle has four carburetors, each of which must be so adjusted properly to assure engine performance.

The link motion is moved by the two throttle cables that are connected to the throttle grip to open or close all carburetor throttle valves at the same time.

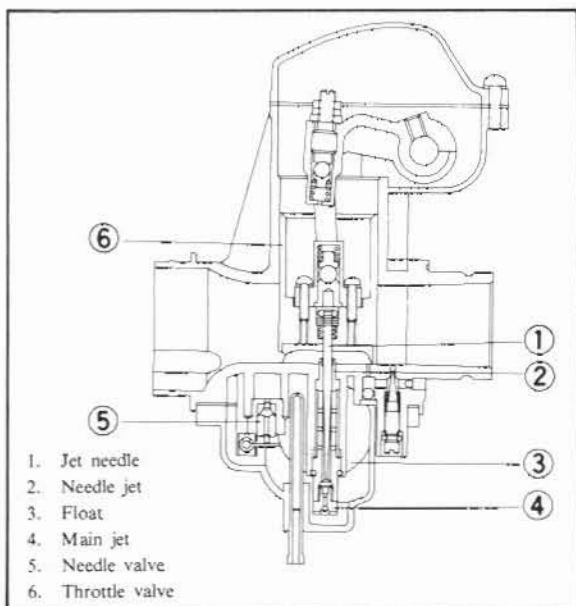


Fig. 8-3.

Each carburetor has four units for regulating and supplying fuel. There is the starter unit for supplying a rich fuel-air mixture when starting the engine, a pilot unit for supplying fuel when the engine is idling, a main unit for supplying fuel when the engine is running at medium-or high-speed, and a float unit for maintaining a constant carburetor fuel level. The carburetors mix gasoline with air, and regulates the mixture. Carburetor malfunctioning or trouble generally occurs due to a bad mixing ratio, which is the result of wearing, blocking by foreign matter, or an improper fuel level. The following are some of the symptoms of a faulty carburetor.

Fuel-air mixture too lean

1. The engine becomes overheated.
2. The engine runs well when the starter is opened further.
3. Poor acceleration.
4. The spark plugs become overheated.
5. Engine speed is irregular.
6. Exhaust gas is light.

Fuel-air mixture too rich

1. The engine is sluggish, and does not run smoothly.
2. The engine runs badly when the starter is opened further.
3. The engine runs badly after being warmed up.
4. The engine runs well when the air filter is removed.
5. The spark plugs get soiled with carbon.
6. Exhaust gas is blackish in color.

STARTER UNIT

The starter unit is a starting aid device which supplies a highly concentrated gasoline-air mixture to a cold engine at initial starting. It consists of a starter jet ①, starter pipe ②, and starter plunger ③. Refer to close the throttle valve, open the starter plunger fully, and switch on the starter, or kick. Then the engine will generate negative pressure to draw the fuel through the fuel injection ports.

The fuel is metered by the starter jet, is mixed with the air coming from the float chamber in the starter pipe, sucked into the starter plunger chamber, where it is mixed with the starter's primary air, and then drawn out into the main bores from the injection ports as a well-atomized and concentrated fuel very suitable for starting purposes. This fuel-air mixture is added to the fuel-air mixture being supplied by the pilot circuit in the carburetors. When using the starter, the throttle valve must be completely closed. If the throttle valve is opened, the negative pressure falls and will not build up at injection ports and the engine will not be able to draw sufficient fuel. The starter plunger has a needle-like tip, which closes the starter unit's fuel passage. If the starter lever is not pulled all the way up, the fuel passage will not open to let the gasoline flow. If the starter pipe's bleed hole is clogged, the fuel will not be atomized properly.

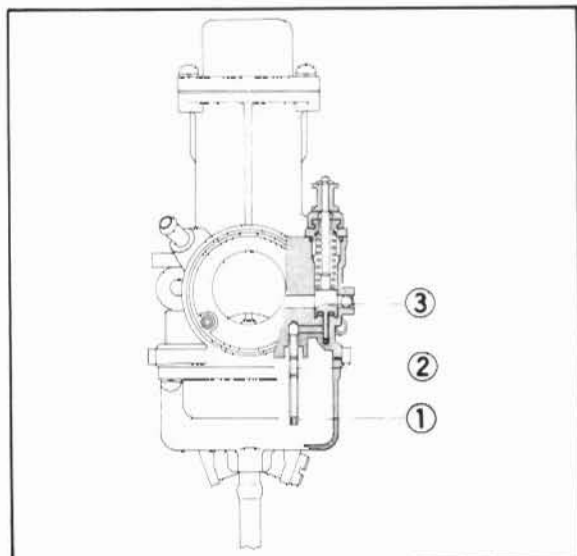


Fig. 8-4.

PILOT CIRCUIT

The pilot unit consists of a pilot jet (1), pilot screw (2), and pilot outlet (3).

The purpose of the pilot unit is to supply the fuel to the engine until it reaches low idling speed. The passage around the needle jet which serves as the main unit's fuel injection port is wide and little gasoline can be drawn out through the needle jet. The passage is narrower near the pilot outlet and this is where the negative pressure builds up. This negative pressure allows a highly concentrated gas mixture to be drawn up from the pilot outlet. The metered fuel and air are mixed together prior going to the pilot fuel-air outlets.

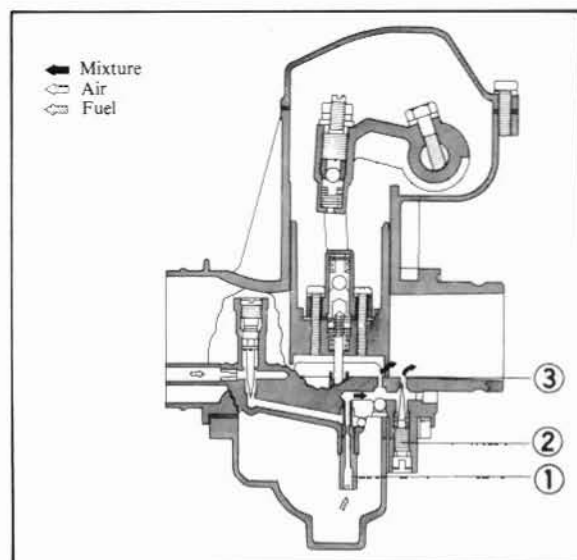


Fig. 8-5.

MAIN CIRCUIT

The main unit consists of a main jet (1), bleed pipe (2), jet needle (3), needle jet (4), throttle valve (5), and air jet (6). When the throttle valve is opened by more than a quarter, the negative pressure generated near the jet needle builds up and the main unit begins operating. The gasoline runs through the main jet, air bleed pipe, and the clearance between the needle jet and the jet needle, and mixes with the air which flows through the main bore. The air bleed pipe has a bleed hole, into which the air metered by the air jet is introduced to be mixed with the gasoline to help atomization.

The jet needle is attached to the throttle valve, and placed in the needle jet. When the valve opens, the needle is raised from the jet. The needle has a tapered tip so that, when the valve is opened by one quarter, the tapered portion of the needle begins to rise. Thus, the clearance between the needle and the jet increases to allow more gasoline to flow in accordance with the opening of the valve. The throttle valve has a nick called the cutaway, which controls the negative pressure on the needle jet and thus the flow of gasoline at the one-quarter valve opening and thereabouts.

When the throttle valve opened fully, the cross sectional area of the clearance between the needle jet and the jet needle becomes larger than that of the main jet. When the throttle valve is almost in a fully opened position the flow of gasoline will be controlled according to the size of the main jet. If the main unit goes malfunctions, the engine will lose output power at high-speed. If the main jet is clogged, the mixed gas will become lean. If the air jet, the air passage of the air jet, or the bleed hole in the bleeder pipe is clogged, or if the clearance between the needle jet and the jet needle widens due to wearing, or if the bleeder pipe or needle jet becomes loose, then richer mixture of gas will be supplied.

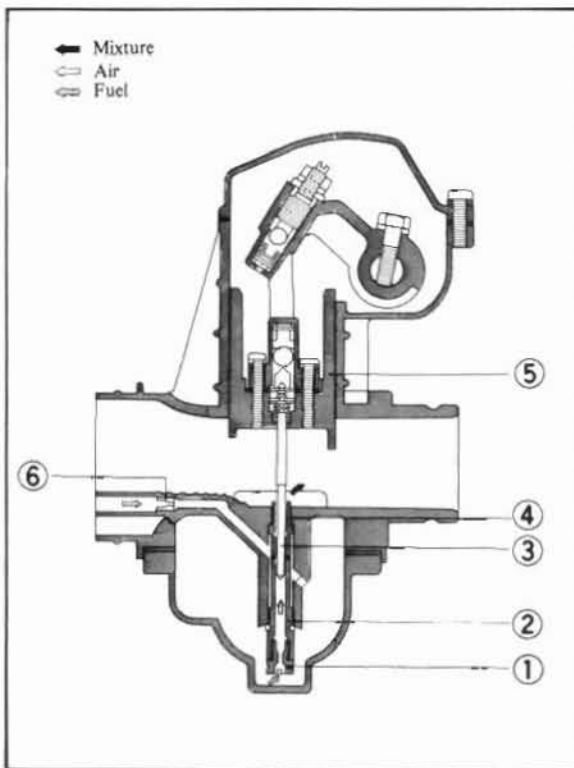


Fig. 8-6. Main system

FLOAT UNIT

The float unit consists of a float ①, needle valve ②, etc. The float unit regulates the fuel level in the carburetors to ensure uniform fuel mixing. If the fuel level is too low, it is difficult to draw the gasoline and the mixed gas will become lean. On the other hand, if the fuel level is too high, it is too easy to draw the gas and the mixed gas will be rich.

Fuel level means the distance from the center of the carburetor's main bore to the surface of the gasoline in the float chamber. It is kept regulated by the opening or closing of the float valve. When the gasoline flows in through the float valve, the fuel level of the float chamber rises and the float goes up at the same time to push the needle up.

When the gasoline reaches the required level, the needle contacts close to the seat completely stopping the flow of gasoline. When the fuel level falls as the gasoline is consumed, the float and needle will fall to allow the gasoline to flow in.

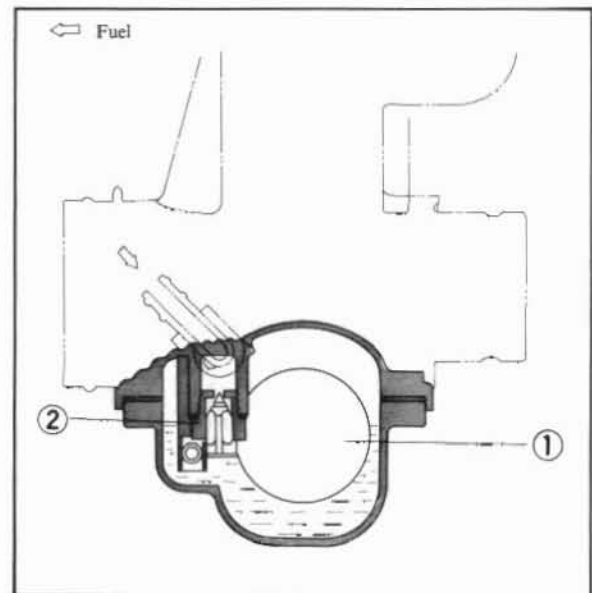


Fig. 8-7. Float system

NEEDLE VALVE

If foreign matter is caught between the valve seat and the needle, the gasoline will continue flowing and overflow. If the seat and needle are worn beyond the permissible limits, similar troubles will occur. Conversely, if the needle sticks, the gasoline will not flow into the float chamber.

To service and inspect, remove the carburetors, float chambers and floats, and clean the float chambers and float parts with gasoline. If the needle is worn as shown below, replace it together with a valve seat. Clean the fuel passage of the mixing chamber with compressed air.

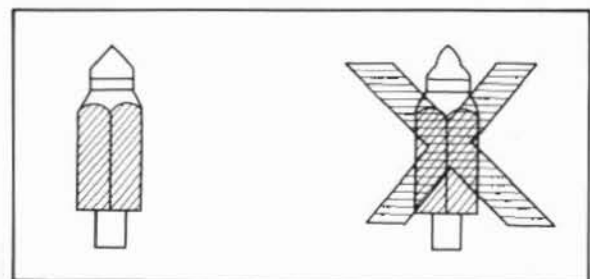


Fig. 8-8.

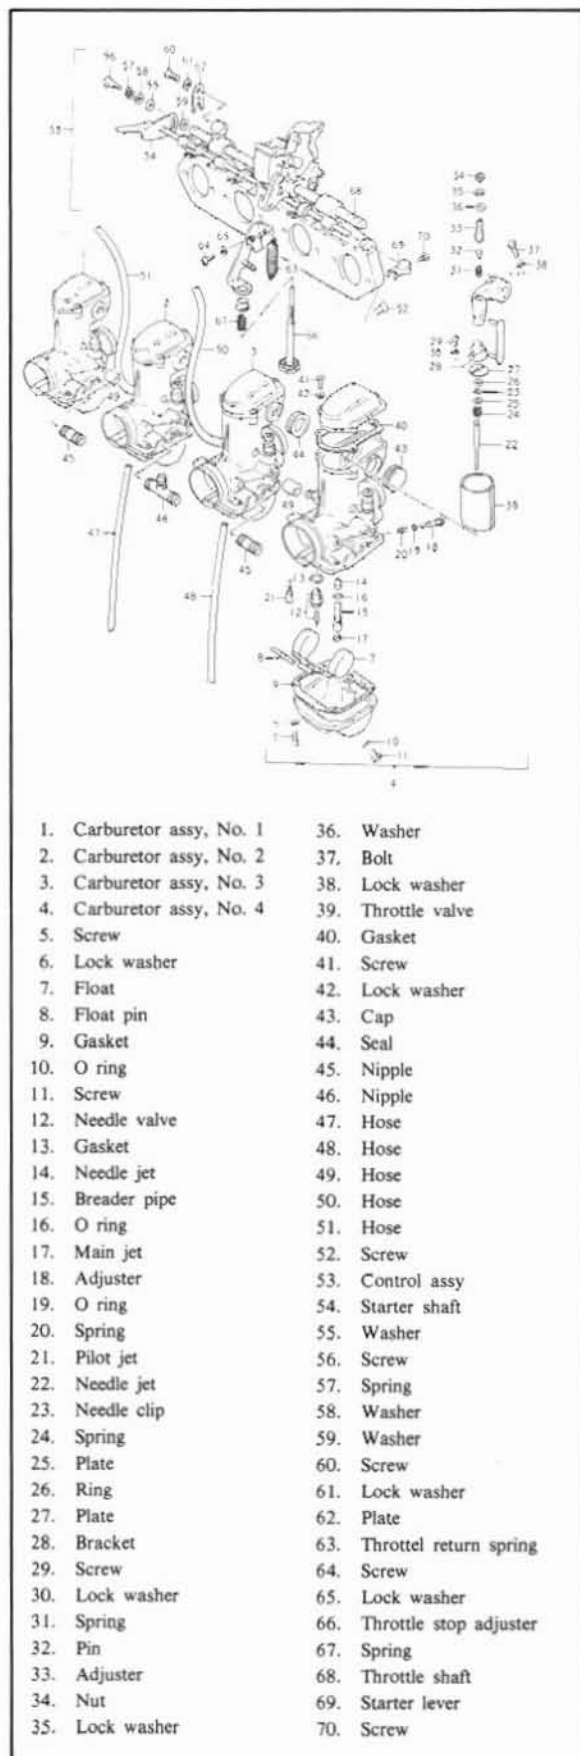


Fig. 8-9.

DISASSEMBLY

- Shift the fuel cock lever to the ON or RES position.
- Disconnect the fuel pipe and negative pressure pipe from the fuel cock.
- Open the seat, remove the fuel tank mounting bolts, and dismount the fuel tank from the frame.
- Remove the air cleaner body and the air cleaner chamber body. (See page 7-3).
- Remove the carburetors. (See page 7-4).
- Disconnect the throttle cables and starter cable from the carburetors. (See page 7-4).
- Remove the carburetor top cover from each carburetor.
- At the right section of the carburetor assembly, unhook the throttle return spring from the pin.

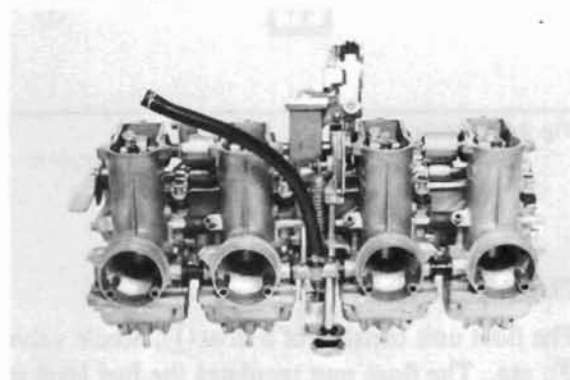


Fig. 8-10.

- Remove five bolts to free the throttle shaft.

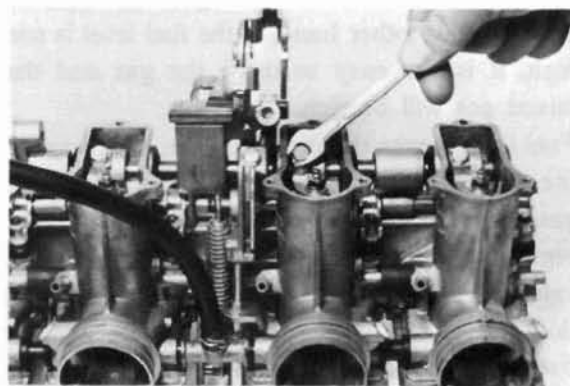


Fig. 8-11.

- Remove the stopper plate and pull out the shaft.

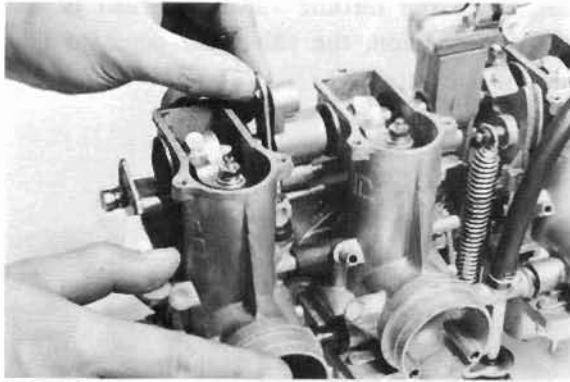


Fig. 8-12.

- Loosen the four cross-recessed screws and also the screw in the slot. Draw out choke shaft.

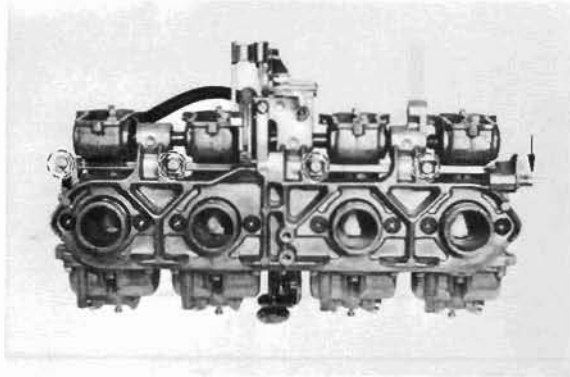


Fig. 8-13.

- Remove the plate. A total of 8 screws must be removed to free this plate for removal.

The foregoing procedure permits the rest of the carburetor assembly to be disassembled further in the usual manner.

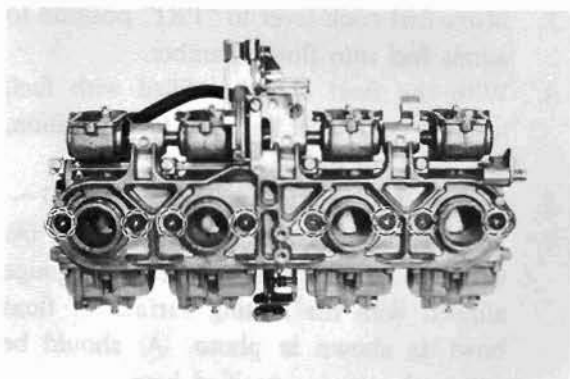


Fig. 8-14.

REASSEMBLY

- Carburetor identification

Be sure to identify each carburetor for the cylinder which it serves and to mount each in the correct position as indicated:

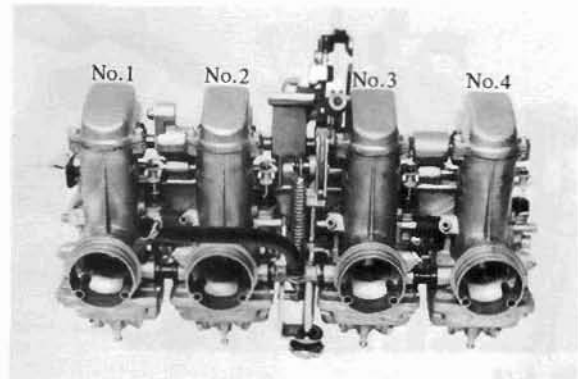


Fig. 8-15.

- Grease throttle shaft, and install it in the carburetor. Leave the throttle shaft screw loose.

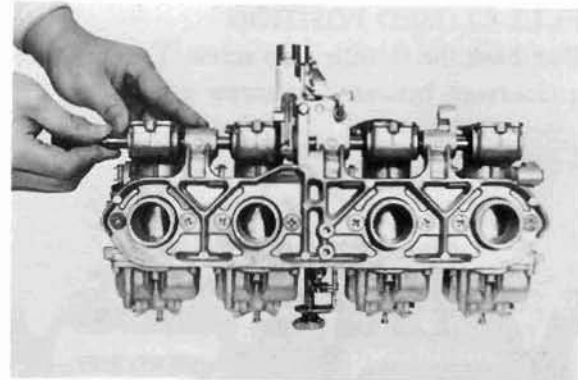


Fig. 8-16.

- Secure the plate by tightening 8 screws. Be sure to apply **THREAD LOCK CEMENT** (99000-32040) to these screws before tightening them.

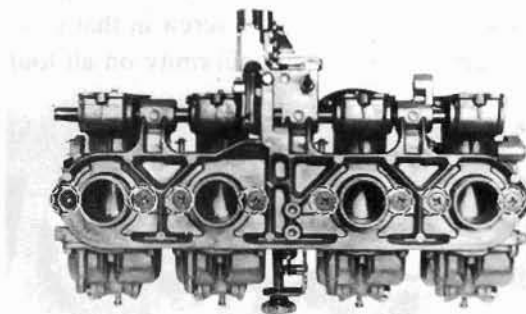


Fig. 8-17.

- Tighten the bolt ① to this torque value:

Bolt ① tightening torque:
0.35 kg-m (2.5 lb-ft)

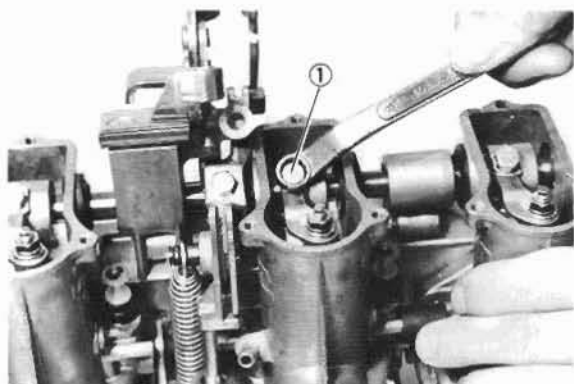


Fig. 8-18.

ADJUSTMENT

Adjusting full-open and full-closed positions of throttle valves and balance the carburetors.

FULL-CLOSED POSITION

Run back the throttle stop screw ① to produce a clearance between the screw and pulley.

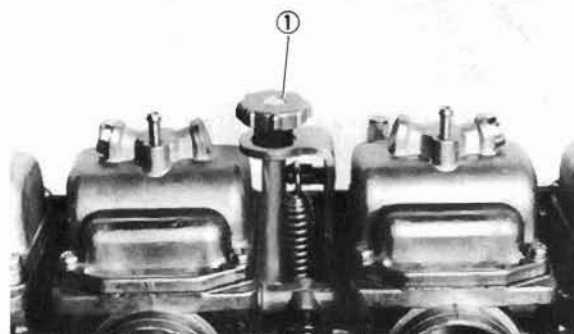


Fig. 8-19.

Loosen lock nut. Turn throttle adjusting screw ① to close the throttle valve fully, and tighten the lock nut ② to secure the screw in that position. Carry out this step uniformly on all four carburetors.

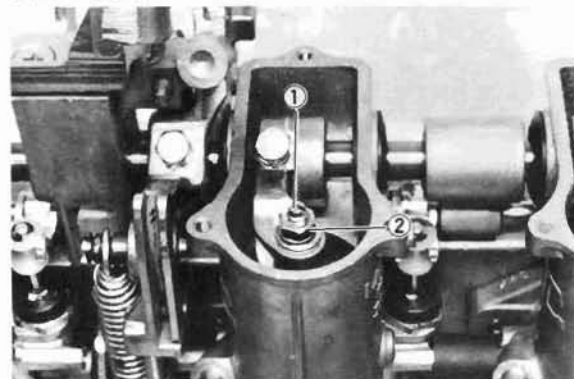


Fig. 8-20.

FULL-OPEN POSITION

Adjust the full-throttle stopper ① in such a way that, when the throttle valve is turned to its full-open position, the valve will come to the position indicated.

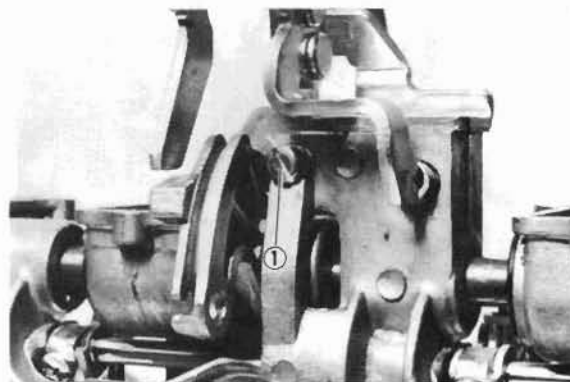


Fig. 8-21.

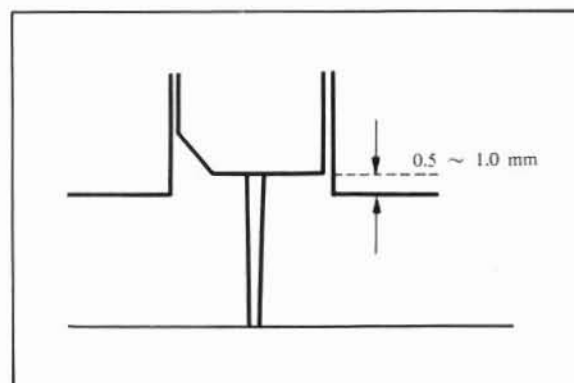


Fig. 8-22.

Checking fuel level in each float chamber

1. Leave fuel cock lever in "ON" or "RES" position.
2. Remove float chamber screw and install the fuel level gauge (special tool: 09913-14510).
3. Move fuel cock lever to "PRI" position to admit fuel into float chamber.
4. With the float chamber filled with fuel, turn the cock lever back to "ON" position, and start up the engine.
5. Run the engine at the idling speed (900 ~ 1,100 rpm), and measure the distance ① with the middle line of the level gauge aligned with the mating surface of float bowl as shown in photo. ① should be within the range specified here.

Distance ① :
3.0 ~ 5.0 mm
(0.11 ~ 0.196 in.)

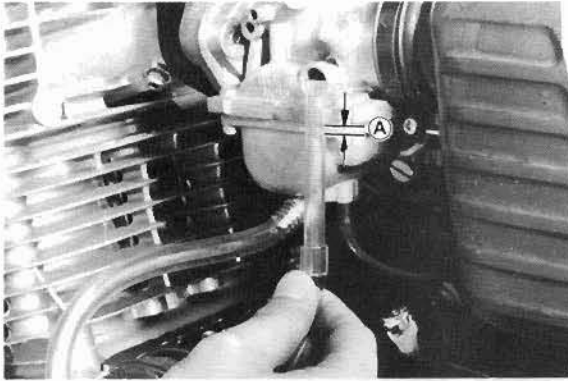


Fig. 8-23.

Fuel level measurement

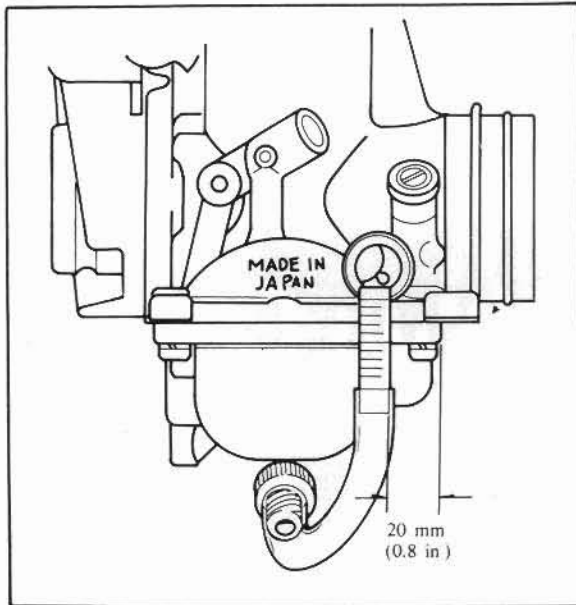


Fig. 8-24.

NOTE:

When checking the fuel level, place the machine on a center stand. The fuel level gauge pipe makes sure to locate at about 20 mm (0.08 in.) off the rear end of the float chamber.

Fuel level adjustment

- If the distance (A) measured is not within the specified range, it means that the float height (H) is off the specification. To adjust this height, proceed as follows:
Remove float bowl, and bend the float arm to increase or decrease the height to this value:

Float height (H):
23 ~ 25 mm (0.90 ~ 0.98 in.)

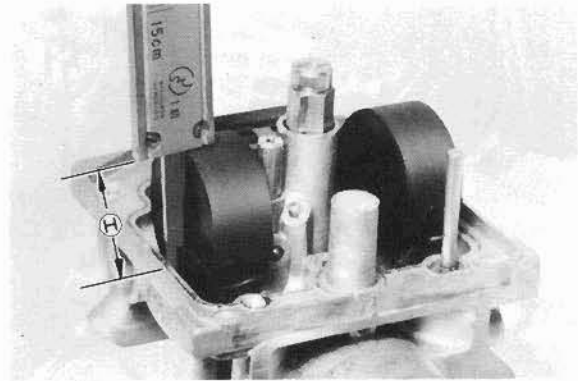


Fig. 8-25.

IMPORTANT:

Be sure to have the gasket removed before measuring the height.

- Bending the arm upward (A) raises the level; being it downward (B) lowers the level (in the inverted condition of the carburetor).

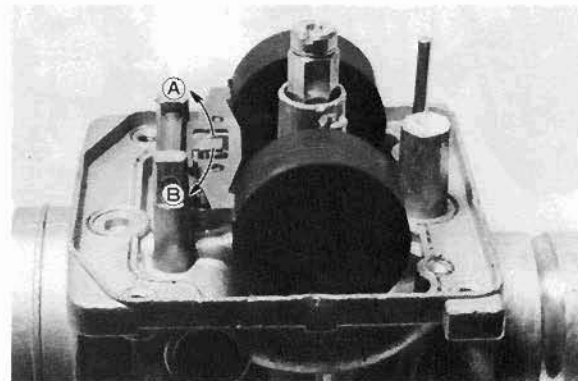


Fig. 8-26.

Balancing carburetors

The four carburetors must be balanced after disassembling the engine or the carburetors. As the first step, calibrate the carburetor balancer gauge (special tool: 09913-13121, carburetor balancer set), as follows:

1. Remove the vacuum inlet screw (Allen bolt) on No. 4 carburetor or No. 1 carburetor intake pipe by using a 4 mm hexagon wrench (special tool), and install the adaptor (special tool: 09911-70130, hexagon wrench, 4mm) in the screw hole.

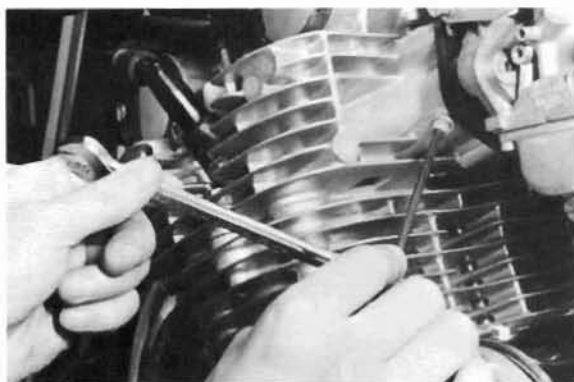


Fig. 8-27.

2. Connect one of the four rubber hoses of the balance gauge to this adaptor.
3. Start up engine, and keep it running at 1,500 ~ 2,000 rpm.

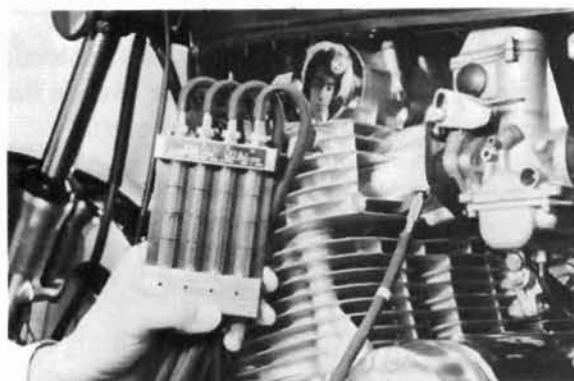


Fig. 8-28.

4. Turn the air screw of the gauge so that the vacuum acting on the tube of that hose will bring the steel ball in the tube to the center.

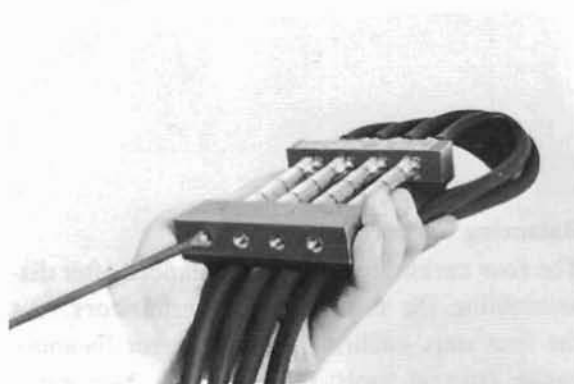


Fig. 8-29.

5. After finishing with one hose, connect the adaptor to the next hose and, by adjusting the next air screw, bring the steel ball in the next tube to the center line.

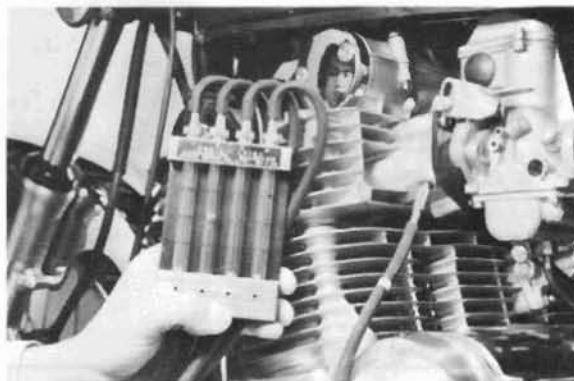


Fig. 8-30.

6. Repeat the process on the third and fourth tubes. The balancer gauge is now ready for use in balancing the carburetors.

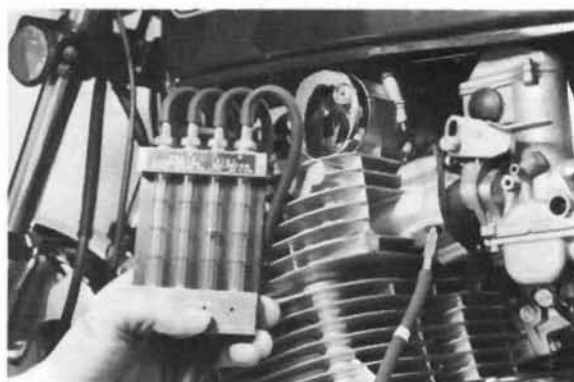


Fig. 8-31.

Remove the respective vacuum inlet screws and insert the adaptors in the holes. Connect the balancer gauge hoses to these adaptors, one hose to one adaptor, and balance the four carburetors as follows:

- Start up the engine, and keep it running at 1,500 ~ 2,000 rpm.
- A correctly adjusted carburetor has the steel balls in the first and fourth tubes at the same level, and those in the second and third tubes also at the same level, but lower by one half of the ball diameter than the steel balls in the first and fourth tubes as shown in the diagram below.

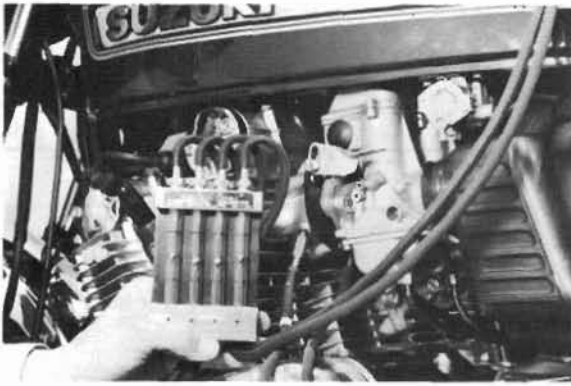


Fig. 8-32.

- If the steel balls are not in the correct positions shown in the above diagram, remove the carburetor top cover, and correctly adjust the throttle valve adjusting screw with the special tool ① (09913-13110, throttle adjusting tool).

NOTE:

If an adjustment is required, it is suggested that the fuel tank and the carburetors top covers be removed beforehand.

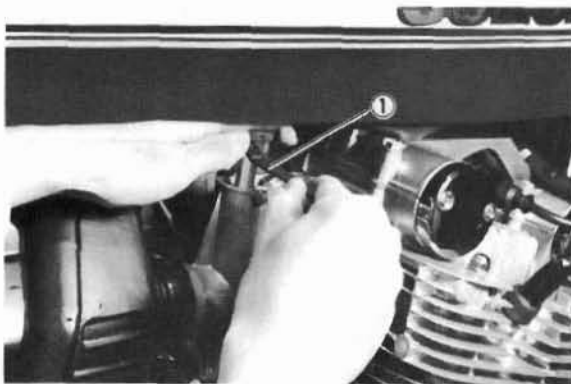


Fig. 8-33.

- After this adjustment, adjust the idling speed to somewhere between 900 and 1,100 rpm with the throttle stop adjusting screw ①.



Fig. 8-34.

- Install the top cover on the carburetors which have been adjusted.
- Disconnect the adapter from the intake pipe, and turn the vacuum inlet screw in.

Throttle cable adjustment

- See page 3-12 for throttle cable adjustment.

NOTE:

If engine is run with fuel tank removed, be sure to plug the fuel cock vacuum line.

TROUBLESHOOTING

Before adjusting the carburetors, be sure to check that there is nothing wrong with the engine's compression, ignition timing, and spark performance.

Trouble	Check Point	Remedy
Trouble with starting	1. Starter jet is clogged. 2. Starter pipe is clogged. 3. Air leaking from a joint between starter body and carburetor. 4. Air leaking from carburetor's joint or vacuum gauge joint. 5. Starter plunger is not operating properly.	1. Clean. 2. Clean. 3. Check starter body and carburetor for tightness, adjust and replace gasket. 4. Check and adjust. 5. Check and adjust.
Idling or low-speed trouble	1. Pilot jet, pilot air jet are clogged or loose. 2. Air leaking from carburetor's joint, vacuum gauge joint, or starter. 3. Pilot outlet or bypass is clogged. 4. Starter plunger is not fully closed.	1. Check and clean. 2. Check and adjust. 3. Check and clean. 4. Check and adjust.
Medium- or high-speed trouble	1. Main jet or main air jet is clogged. 2. Needle jet is clogged. 3. Fuel leaking due to a broken O-ring in needle jet. 4. Piston valve is not operating properly. 5. Filter is clogged.	1. Check and clean. 2. Check and clean. 3. Replace O-ring. 4. Check piston valve for operation. 5. Check and clean.
Overflow and fuel level fluctuations	1. Needle valve is worn or damaged. 2. Spring in needle valve is broken. 3. Float is punctured or deformed. 4. Float is not working properly. 5. Foreign matter has adhered to needle valve. 6. Fuel level is too high or low.	1. Replace. 2. Replace. 3. Replace. 4. Check and adjust. 5. Clean. 6. See page 8-9.

EMISSION CONTROL & REGULATIONS

CONTENTS

REGULATION	9-2
EMISSION CONTROL CARBURETOR COMPONENTS.....	9-3
GENERAL EMISSION INFORMATION	9-4

EMISSION CONTROL AND REGULATIONS

REGULATION

On February 4, 1977 Federal Emission Regulations for motorcycles took affect. All motorcycles produced after January 1, 1978 must meet specific emission limits. This act establishes three categories of motorcycles and an emission level for each category. The categories are as follows:

50 cc — 170 cc
171 cc — 749 cc
750 cc — Larger

The emission limits for motorcycles produced during 1978 and 1979 are as follows:

1978 — 1979 EMISSION LIMITS

Categories	Hydrocarbons (HC)	Carbon Monoxide (CO)
50 cc — 170 cc	5.0 Grams/Kilometer (8.0 Grams/Mile)	17 Grams/Kilometer (27.4 Grams/Mile)
171 cc — 749 cc	* 5.0 — 14.0 Grams/Kilometer (8.0 — 22.5 Grams/Mile)	17 Grams/Kilometer (27.4 Grams/Mile)
750 cc — Larger	14.0 Grams/Kilometer (22.5 Grams/Mile)	17 Grams/Kilometer (27.4 Grams/Mile)

* Dependent upon displacement.

The emission limits for 1980 are more restrictive than the previous two model years. These limits are as follows:

1980 EMISSION LIMITS

Categories	Hydrocarbons (HC)	Carbon Monoxide (CO)
All motorcycles 50 cc — Larger	5.0 Grams/Kilometer (8.0 Grams/Mile)	12 Grams/Kilometer (19.3 Grams/Mile)

This regulation affects all motorcycles that may be licensable for highway operation. This definition of highway-approved motorcycles covers motorcycles equipped with a headlight, taillight, stop light and which have an engine displacement larger than 50 cc.

All testing and certification of emission-controlled motorcycles will be performed by Suzuki Motor Company in compliance with the E.P.A. testing regulations. Motorcycle dealers are not required to certify emission levels on any motorcycle.

This regulation provides for fines of up to \$10,000 per motorcycle for individuals who alter, render inoperative or improperly service emission-controlled motorcycles. It is essential that the individual servicing this emission-controlled motorcycle review thoroughly the correct service procedures discussed in this manual. Under no circumstances should the service procedures be deviated from nor adjustments made which are not in accordance with the factory specifications.

EMISSION CONTROL CARBURETOR COMPONENTS

GS1000 machines manufactured on or after January 1, 1978 are equipped with specially manufactured carburetors. These carburetors are installed on machines with the following frame number:

Frame No. GS1000 — 102531

These emission type carburetors require different components and other special adjustments if they are to function properly.

There are seven (7) carburetor mixture control components in each carburetor assembly. Three (3) of these components are machined to much closer tolerances than standard carburetor jets. These three (3) particular jets, MAIN JET, NEEDLE JET, PILOT JET, must not be replaced by standard jets. To aid in identifying these three (3) jets a different design of letter and number are used. If replacement of these close tolerance jets becomes necessary, be sure to replace them with the same type close tolerance jets marked as in the examples shown below.

Conventional Figures Used On Standard Tolerance Jet Components	1 2 3 4 5 6 7 8 9 0
Emission Type Figures Used On Close Tolerance Jet Components	1 2 3 4 5 6 7 8 9 0

The throttle Slide and the Jet Needles are not special tolerance components. Either of these two parts may be replaced by standard tolerance parts provided that they are the same size. The carburetor specifications for the emission-controlled GS1000s are as follows.

Carburetor I.D. No.	Main Jet	Needle Jet	Jet Needle	Cut Away	Pilot Jet	Air Screw	Pilot Screw
49000	#95	□-2	5DL36-3	1.5	#15	PRE-SET	PRE-SET
							DO NOT ADJUST

DO NOT ADJUST THE AIR SCREW AND PILOT SCREW. Adjusting, interfering with, replacing, or resetting of either of these adjustable metering components may affect the carburetor performance adversely and cause the machine to exceed the emission levels. Tampering with either of these two adjustments may also subject the person to fines under the federal emission regulations and also the state regulations regarding tampering. The air screw and pilot screw are pre-set by the factory by the use of specialized testing and adjusting procedures. It is not possible to duplicate these adjustments. If persons, who are unaware of these special adjustments or the anti-tampering laws, have tampered with the carburetor adjustments the Suzuki dealer should contact the distributor's representative for further technical information and assistance.

GENERAL EMISSION INFORMATION

There are three different types of emissions. They are:

- Hydrocarbons (HC)
- Carbon Monoxide (CO)
- Oxides of Nitrogen (NOx)

Automobiles must meet specific emission standards for all three of these pollutants. Motorcycles must only meet the requirements for the following:

- Hydrocarbons (HC)
- Carbon Monoxide (CO)

HC exhaust emissions are basically unburned fuel vapors which have passed through the engine and escaped the combustion process.

CO exhaust emissions are formed during an incomplete combustion cycle as a result of a rich air fuel mixture. The only way that CO can be produced is by the combustion cycle.

Total NOx emissions from all motorcycles is considered negligible. The EPA states that total NOx emission from motorcycles by 1990 will only amount to approximately 0.5%. NOx is formed during the combustion process at high combustion chamber temperatures.

CARBON MONOXIDE

Carbon monoxide is a product of an incomplete combustion cycle. CO is measured in grams per mile or kilometer and also in percentage (%)

The most common cause of CO is rich carburetion. As the mixture is richened excessively, the CO amount increases proportionately. Engine oil is also a hydrocarbon, so engine problems which lead to oil burning increase carbon monoxide.

CARBURETION MALFUNCTION

1. Air Cleaner — Dirty or over oiled.
2. Idle Mixture — Adjusted incorrectly.
3. Idle Speed — Too high or low.
4. Fuel Level — Sticking float, leaking needle, incorrect setting.
5. Choke — Leaking or linkage sticking.
6. Synchronization — Improper balance on multi cylinders.

ENGINE MALFUNCTIONS

1. Valve Seals — Leaking or torn.
2. Valve Guide — Worn and leaking excess oil.
3. Gaskets — Leaking oil into combustion chamber.
4. Oil Pump — CCI pump adjusted too high.

HYDROCARBONS

Hydrocarbons are unburnt gasoline vapors and can be measured in two different ways. The first is to measure the weight of the pollutants over a specific distance such as grams per mile or grams per kilometer. The second method is to measure the concentration of HC in the exhaust gas in parts per million (PPM).

The most common cause of high HC emissions are ignition system problems. If the ignition system fails to ignite the fuel mixture properly, then raw gasoline vapors will pass through the engine into the exhaust system. Listed are the most common ignition problems which occur and which can affect HC emission output.

IGNITION SYSTEM MALFUNCTIONS

1. Spark Plugs — Fouled, dirty, improper type or improperly gapped.
2. Contact Points — Improperly adjusted, pitted, worn or sticking.
3. Ignition Timing — Advanced or Retarded.
4. Timing Advance — Too fast or too slow an advance rate.
5. Battery — Low charge or faulty.

Carburetion can also lead to high HC emissions if the mixture is either excessively rich or excessively lean.

MIXTURE-RELATED MALFUNCTIONS

1. Air Cleaner — Dirty, over oiled or torn.
2. Jets — Clogged, restricted or incorrect size.
3. Float Level — Level too low (lean) or too high (rich).
4. Choke — Leaking choke plunger or sticking linkage.
5. Air Leaks — Intake manifolds, engine gaskets and other sealing surfaces.
6. Synchronization — Unbalanced on multi-cylinder machines.
7. Exhaust System — Restricted flow or improper exhaust system.

Engine wear or damage can also cause high HC emissions.

1. Rings — Low compression, leakage into crankcase.
2. Valves — Improper adjustment, bent stem or burnt.
3. Gaskets — Leaking, loss of compression.
4. Crank Seals — Leaking.
5. Oil Consumption — Worn valve guides, worn rings, clogged crankcase breather.
6. Oil Pump — Improper adjustment.
7. Oil — Improper engine oil.

CHASSIS

CONTENTS

HANDLEBAR	10-2
CLUTCH CABLE.....	10-2
THROTTLE CABLE.....	10-3
SPEEDOMETER CABLE	10-4
TACHOMETER CABLE	10-4
SPEEDOMETER AND TACHOMETER	10-5
HEADLAMP	10-5
IGNITION SWITCH.....	10-6
FRONT FORK	10-7
STEERING STEM	10-12
STEERING STEM BEARING	10-17
FRONT WHEEL	10-17
FRONT BRAKE MASTER CYLINDER	10-23
FRONT BRAKE CALIPER.....	10-27
CALIPER.....	10-27
REAR BRAKE CALIPER	10-30
REAR MASTER CYLINDER.....	10-34
REAR WHEEL.....	10-37
SWINGING ARM	10-42
REAR SHOCK ABSORBER.....	10-45

HANDLEBAR

REMOVAL

- Remove the left and right rear view mirrors.
- Shift the clutch cover boot towards the cable side.
- Loosen the lock nut ① of clutch lever portion to fully tighten adjuster ②.
- Align the grooves of the adjuster and lock nut with that of the clutch lever to remove clutch cable from the clutch lever.

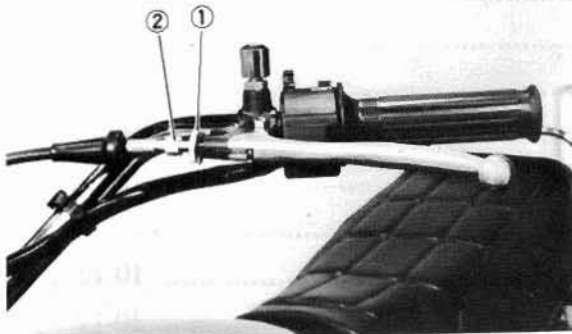


Fig. 10-1.

- Remove vinyl bands from the left and right of the handlebar.
- Remove screws for mounting the left handle bar switch to separate the upper and lower portions of the switch.
- Remove screws for mounting the right handle bar switch to separate the upper and lower portions of the switch.
- Remove the master cylinder clamp bolts.
- Remove together throttle grip and throttle wire from the handle bar.
- Remove the handlebar clamping bolts and remove handle holders.
- To remove the clutch lever from the handlebar, take off the handle grip before loosening the clutch lever bolts.



Fig. 10-2.

MOUNTING

- Pass both the throttle grip and the throttle wire through the handlebar from the right side.
- Align punched mark on the handlebar with the upper end of steering upper bracket to mount the handlebar. At this time the front and rear holder bolts must be tightened with the same clearance.
- The tightening torque for the handle bar holder bolt is 1.2 ~ 2.0 kg-m (8.5 ~ 14.5 lb-ft).

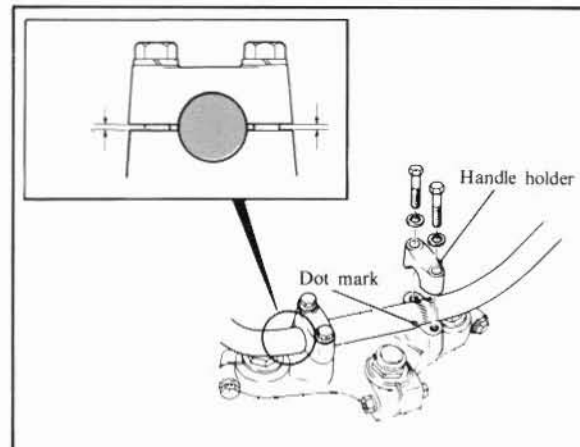


Fig. 10-3.

- Mount the right and left handlebar switches securely on the handlebar fastening them with the screws.
- Mount the master cylinder securely on the handlebar.
- Fix the lead wire from the left and right switch to the handlebar with a vinyl band.
- Mount the left and right rear view mirrors.
- Adjust the clutch play.

CLUTCH CABLE

REMOVAL

- Remove fuel tank.
- See Fig. 10-1. with respect to removal of the clutch cable on the handlebar side.
- Remove cam lever bolt ① on the clutch side to loosen the adjuster lock nut and remove the adjuster.
- Remove the clutch cable from the motorcycle frame.



Fig. 10-4.

MOUNTING

- Route the clutch cable between carburetors No. 1 and 2. Next, as shown in the drawing below, route it along the upper left portion of the ignition coil below the upper steering bracket to the left side of the ignition switch through the tacho-speedometer mounting brackets.

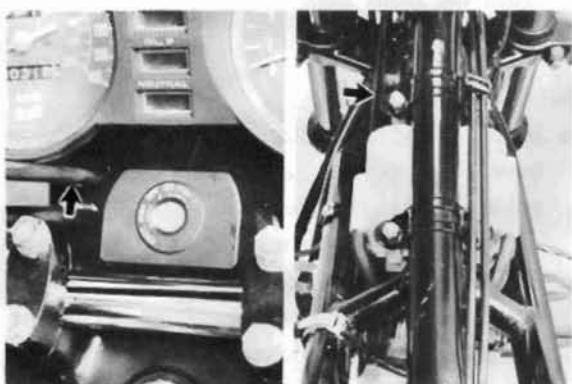


Fig. 10-5.

- Mount the clutch cable on the clutch lever.
- Mount adjuster bolts on the clutch cover side and fasten the cam lever with cam lever bolts.
- Adjust the clutch lever play (see page 3-13).

THROTTLE CABLE

REMOVAL

- Remove the fuel tank.
- Loosen lock nuts for both cables on the throttle grip portion and firmly tighten both cable adjusting nuts to provide sufficient cable play.
- Remove cable adjusters ① from the bracket at the opening and closing ports on the carburetor side to remove the inner cable from lever.



Fig. 10-6.

- A clamp fixing the throttle wire is located in front of the ignition coil. Draw out the throttle wire over the bent clamp.
- Remove the right handlebar switch screws to separate the upper and lower portions of the handle switch.
- Screw back the cable adjusting nut ① at the closing side to remove it from the throttle cable guide, and loosen the cable guide lock nut to remove cable guide ② from the handle bar switch.

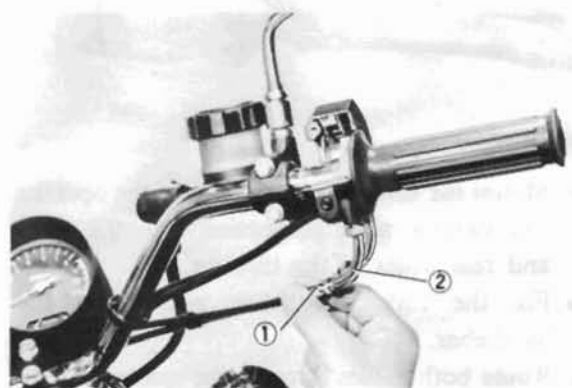


Fig. 10-7.

- Remove throttle inner cable ① at the closing side from the throttle grip and remove the cable.
- Loosen the cable guide lock nut at the opening side and remove the cable guide from the handlebar switch.
- Remove throttle inner cable ② at the opening side from the throttle grip and remove the cable.

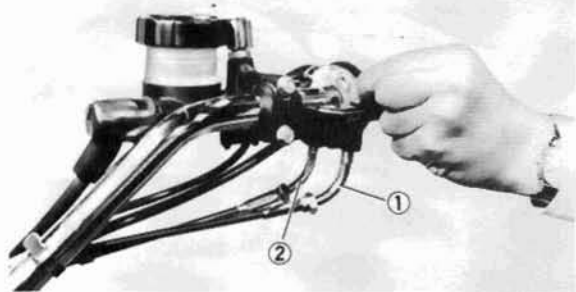


Fig. 10-8.

MOUNTING

- Mount the throttle cable guide ① at the opening side and the throttle cable guide ② at the closing side on the handle bar switch and lightly tighten the lock nuts.

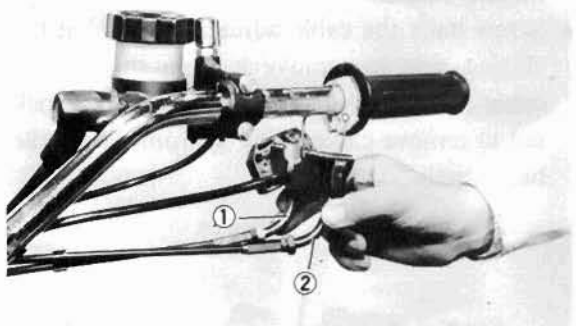


Fig. 10-9.

- Mount the throttle inner cables at the opening and closing sides respectively on the front and rear holes in the throttle grip.
- Fix the right handlebar switch on the handlebar.
- Route both cables through the space between the tachometer and ignition switch and then between the steering head pipe and the right front fork.
- Fix the throttle wire with the clamp on the front of the ignition coil.

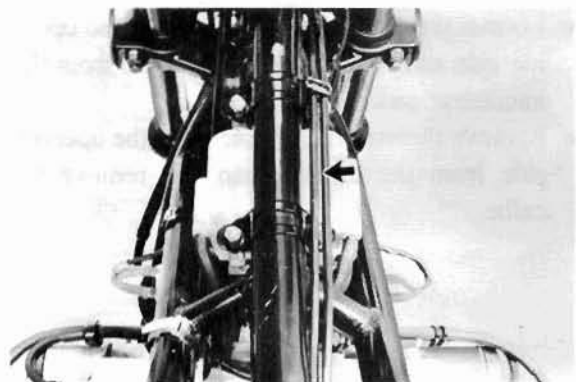


Fig. 10-10.

10-4

- Mount the inner cable at the opening side on the lever at the rear side. Mount cable adjuster on the bracket and fix it with the upper and lower nuts.

- Mount the inner cable at the closing side on the lever at the front side and mount the cable adjuster on the bracket to fix it with the upper and lower nuts.

If it is difficult to mount the inner cable on the lever, turn the throttle grip to the full open position and then mount the inner cable.

- Adjust the throttle cable (see page 3-13).
- Mount the fuel tank.

SPEEDOMETER CABLE**REMOVAL**

- Remove both ends of the speedometer cable with pliers and remove the cable from the speedometer gear housing and speedometer from the front hub.

MOUNTING

- Route the speedometer cable to the brake oil hose joint portion and through the cable guide. Mount the cable nut of the upper end on the speedometer and tighten it with pliers.
- Mount the lower end of the cable on the speedometer gear housing. Then rotate the wheel so that the groove at the end of the inner cable meshes with the projection of the speedometer pinion and tighten the cable nut.

TACHOMETER CABLE**REMOVAL**

- Remove the tachometer cable from the tachometer side and the cylinder head side with pliers.

MOUNTING

- Route the tachometer cable from the rear portion of the speedometer between the steering head pipe and right front fork and mount it on the cylinder head cover.

At this time make sure that the inner cable engages with the tachometer gear, and tighten the cable nut.

SPEEDOMETER AND TACHOMETER REMOVAL

- Remove the speedometer and the tachometer.
- Remove fuel tank.
- Remove head lamp.
- Remove connection coupler connected to the main wire harness on the lower portion of tank for the meter lead wire over the fixed clamp.



Fig. 10-11.

MOUNTING

- Route the lead wire of the meter between the steering head pipe and the right front fork and clamp it to the fixed clamp on the frame side.
- Fasten the meter with two bolts. Fasten the right side of the meter together with the brake hose guide.
- Mount the speedometer and the tachometer.
- Mount the headlamp.
- Mount the fuel tank.

HEADLAMP REMOVAL

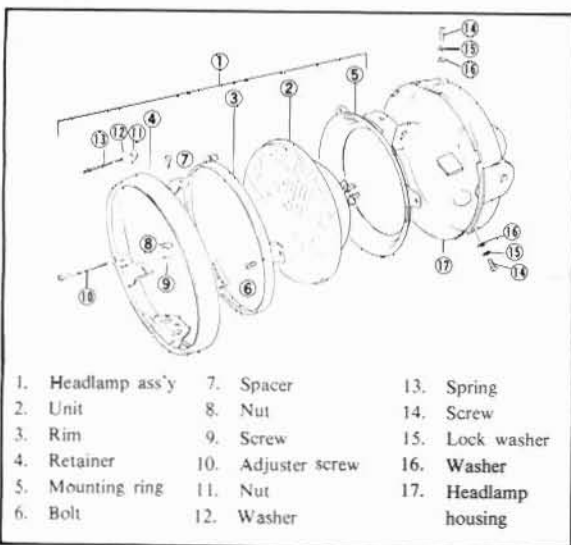


Fig. 10-12.

- Remove three screws securing the headlamp.
- Disconnect the headlamp connection coupler.
- Remove the adjusting screw ⑩.
- Remove two screws ⑦ and remove the headlamp unit and ring.
- Remove three screws ⑥ and remove the headlamp from the ring.

CAUTIONS IN MOUNTING

- When installing the adjusting screw, make sure to insert a washer between the spring and bracket.
- When mounting the headlamp, the word "TOP" must face upwards.
- After completion of work, adjust the horizontal angle of the headlamp beam.

ADJUSTMENT OF HORIZONTAL ANGLE

- Turn the adjusting screw ① on headlamp rim to change the direction of the beam. Turning the screw clockwise directs the beam to the left and turning the screw counterclockwise direct the beam the to right.

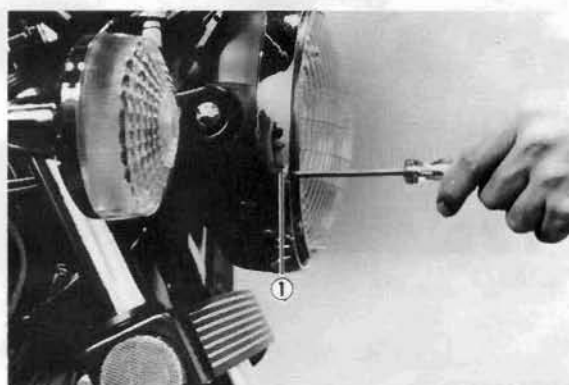


Fig. 10-13.

ADJUSTMENT OF VERTICAL ANGLE

- Loosen the left and right headlamp housing bolts.
- Manually adjust the vertical beam angle of the headlamp and tighten the right and left mounting bolts.



Fig. 10-14.

IGNITION SWITCH

REMOVAL

- Remove the headlamp and then each lead wire connected within the headlamp housing.
- Remove the two headlamp housing bolts and remove the housing.
- Remove two screws with 5 mm Allen wrench and remove the ignition switch.

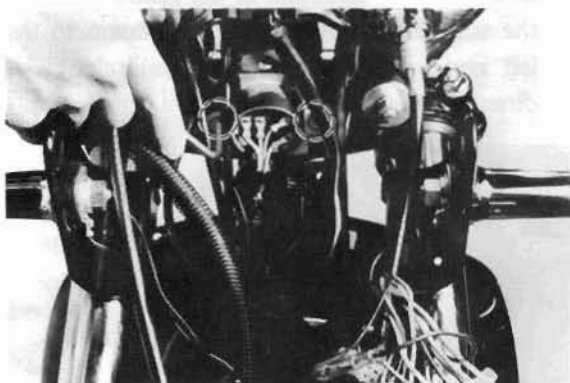


Fig. 10-15.

MOUNTING

- Mount parts in the reverse order to removal.
- Route the lead wires of ignition switch, left handle bar switch, front brake switch and turn signal lamp through the lower hole in the headlamp housing and fasten the headlamp housing with two bolts.
- Connect each lead wire.
Connect the lead wire of the ignition switch to the coupler ① on the wire harness side. Connect the lead wire of the right handle bar switch to the coupler ② on the wire harness side.

The orange and white lead wires of the front brake switch are to be connected respectively

with the orange and white ones on the wire harness side.

The black/white lead wires of the left and right ground wire for the front turn signal are to be connected respectively with the black/white ones on the wire harness side. Also connect the black lead wire of the left turn signal body to the black one on the wire harness, and connect the right side lead wire to the light green one on the wire harness side.

- Connection of headlamp. Connect the connection coupler ③ for the headlamp to the headlamp connection.

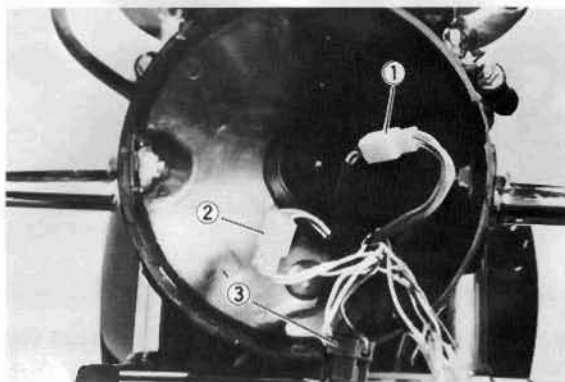


Fig. 10-16.

- Secure the headlamp with three screws. Adjust the vertical beam angle of the headlamp (see page 10-5).

FRONT FORK

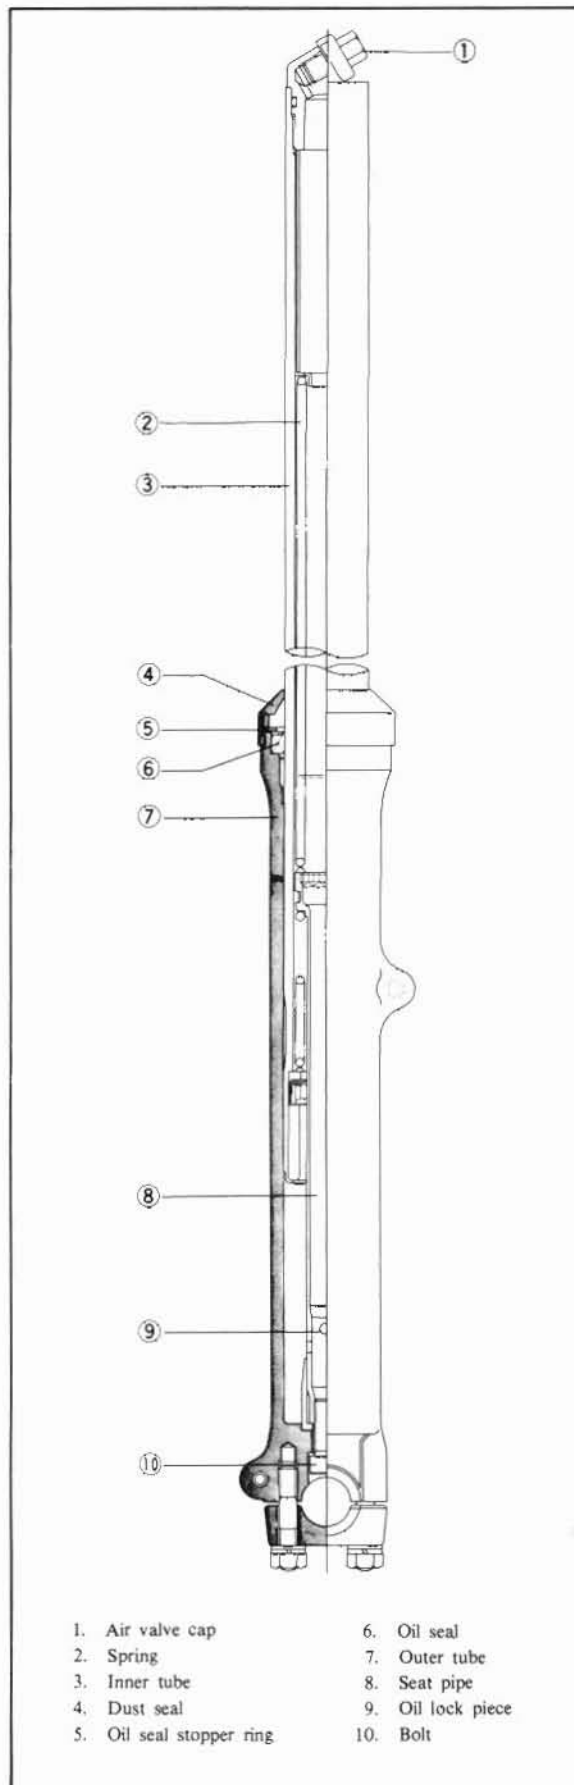


Fig. 10-17.

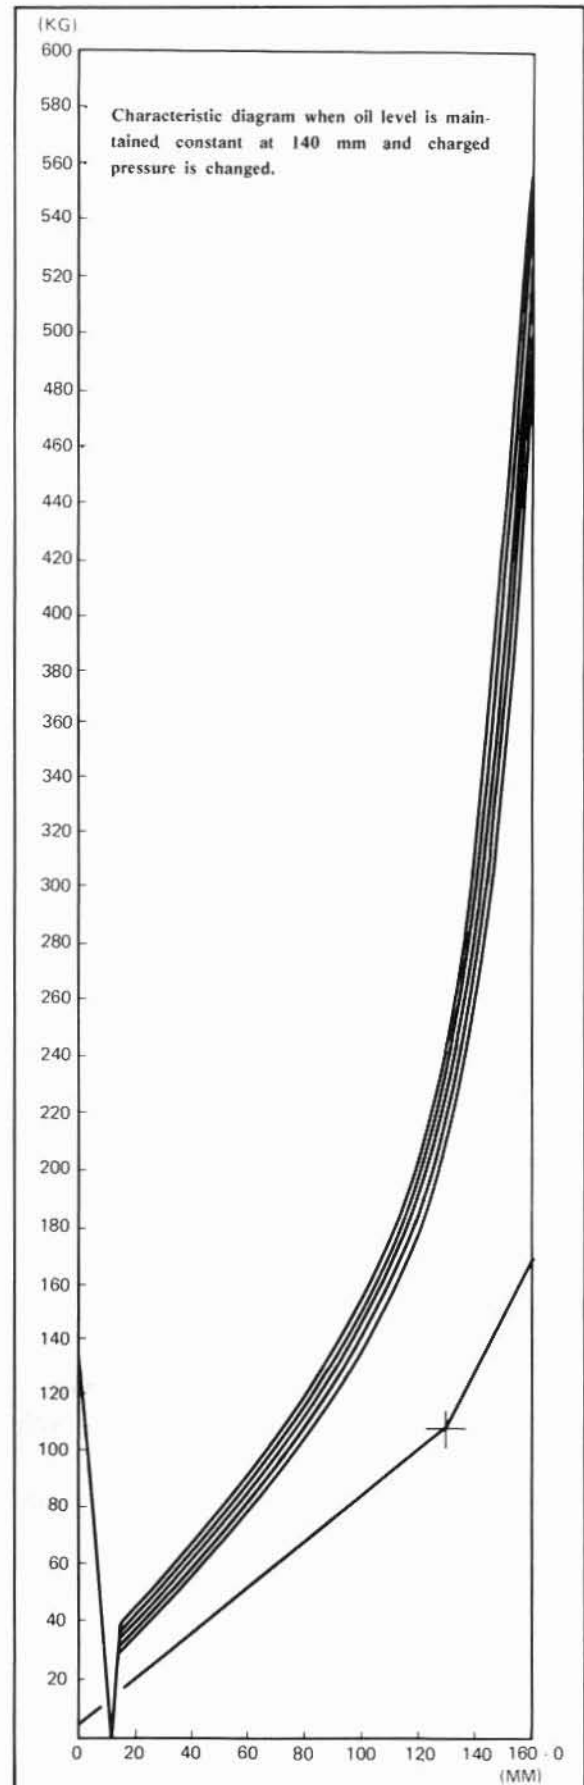


Fig. 10-18 Compression (length)

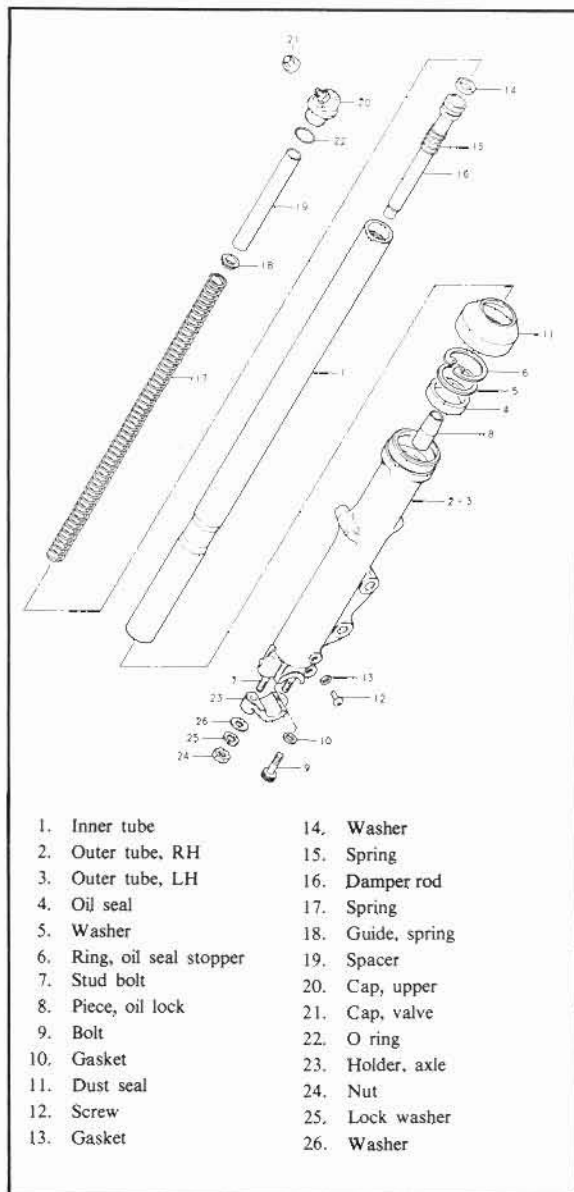


Fig. 10-19.

REMOVAL

- Place a jack below engine.
- Remove the front wheel and front fender.
- Remove valve cap ① and hold the valve with a pointed tool to bleed air.
- To remove fork, it is preferable to loosen the upper pinch bolt ②.
- Loosen the front fork tube upper pinch bolt ③ and lower pinch bolt ④.

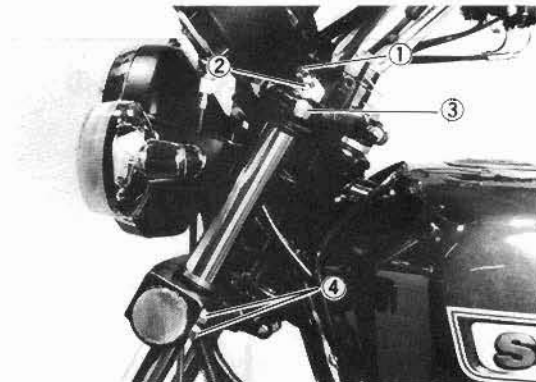


Fig. 10-20.

- When removing the left side front fork, remove the caliper mounting bolt and remove the caliper.
Hang the caliper from the motorcycle frame using string, etc., taking care not to bend the brake hose.
- Pull down the front fork while rotating it.

MOUNTING

- Mount the front fork so that the upper end of the inner tube in the front fork is flush with the upper surface of the stem head.

Tightening torque:

Upper pinch bolt:

2.0 ~ 3.0 kg-m (14.5 ~ 21.5 lb-ft)

Lower pinch bolt:

1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)

- Mount the caliper. The tightening torque of the caliper mounting bolt is as follows;

Tightening torque:

Caliper mounting bolt:

2.5 ~ 4.0 kg-m (18.0 ~ 29.0 lb-ft)

- Mount the front fender on the front fork.
- Mount front wheel.

CAUTION:

- Fasten the speedometer gear box at the position shown in the drawing below and take care not to bend the speedometer cable excessively.
- When securing the front axle holders, check that the clearances, front and back, on each holder are equal. In order to make sure that the two legs, right and left, are parallel, check as follows: Fasten the two axle holders temporarily and loosen the four front fender mounting bolts; under this condition, move the fork up and down several times to make the two legs parallel. Tighten the bolts on axle holders and fender fully after checking in this manner.

Tightening torque of front axle holder nut:

1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)

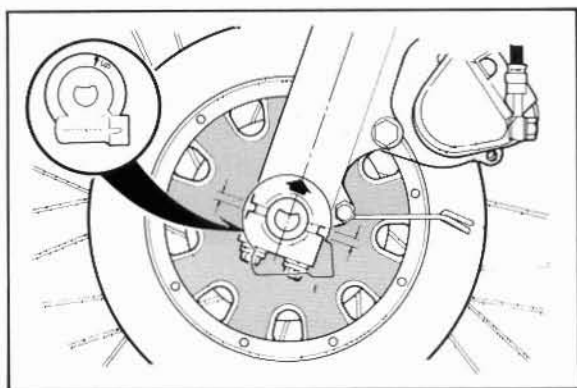


Fig. 10-21.

DISASSEMBLY OF FRONT FORK

- Remove the upper cap bolt and the fork spring.
- Expand and compress the front fork to drain oil.
- Remove dust rail.
- Remove Allen bolt mounted on the lower portion of the front fork using the special tool ① (09911-71510; 8 mm hexagon wrench). At this time firmly secure the cylinder using the special tool ② (09940-34520; Front fork assembling tool "T" handle, 09940-34561; Front fork assembling tool attachment "D") so that the cylinder does not rotate.



Fig. 10-22.

- Remove the inner tube from the outer tube.
- Remove the cylinder unit from the inner tube.
- To be removed from the outer tube, remove the oil seal stopper ring and the washer. When removing oil seal stopper ring, use special tool ① (09900-06105; Snapping pliers).

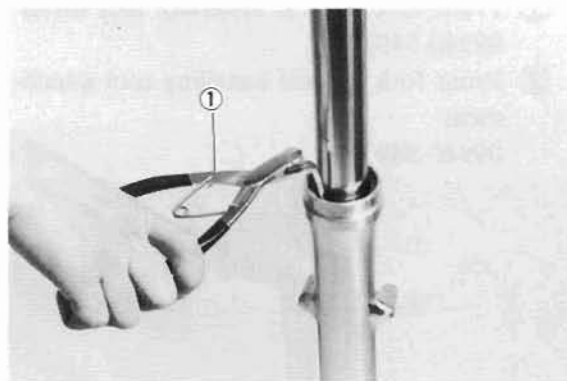


Fig. 10-23.

- Remove the oil seal, using the special tool ① (front fork oil seal remover: 09941-64910) if necessary.

NOTE:

When using the oil seal remover, use the sliding hammer with it.

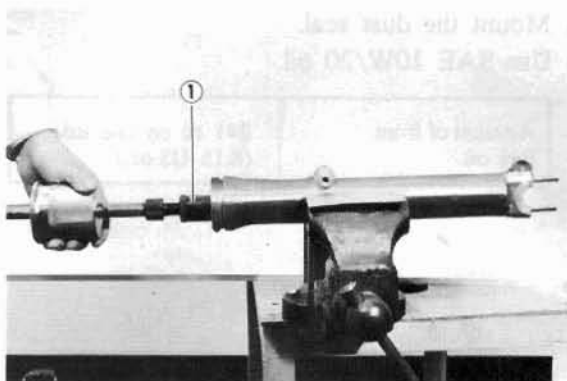


Fig. 10-24.

ASSEMBLY

- Insert the cylinder unit into the inner tube. Apply the screw lock (99000-32040) to Allen bolt and firmly secure the cylinder so that it does not rotate with the front fork assembling tool "T" handle and front fork assembling tool attachment "D", and tighten Allen bolt.

The tightening torque of Allen bolt is as follows:
 Front fork Allen bolt:
 2.0 ~ 2.6 kg-m (14.5 ~ 19.0 lb-ft)

- After removing the oil seal replace it with a new one mounting it on the outer tube using special tools, i.e. ① front fork oil seal installing tool driver and ② front fork oil seal installing tool attachment after applying oil to the outer periphery of the oil seal.
- ① Front fork oil seal installing tool driver
 09940-54910
- ② Front fork oil seal installing tool attachment
 09940-54920

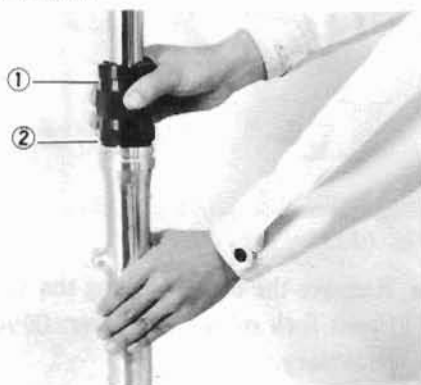


Fig. 10-25.

- Place the washer on the upper surface of the oil seal and fit the oil seal stopper ring, using special tools.
- Mount the dust seal.
- Use SAE 10W/20 oil.

Amount of front fork oil	241 cc on one side (8.15 US.oz.)
--------------------------	----------------------------------

MEASURING METHOD OF FORK OIL LEVEL

- Carry out the measurement with front fork damper assembly removed from motorcycle frame.
 In disassembly of the front fork, constantly check the oil level.
- Carry out the measurement using the special tool ① (09943-74110; Front fork oil level gauge) with the front fork spring extracted and the inner tube fully compressed.
- Measure fork oil level by securing adjustable clip ② to the upper end of the inner tube as shown below.

Front fork oil level: 140 mm (5.51 in.)

If the oil is found to be over the level after measurement, drain the oil to the correct level using the oil pump lever.

If the oil is below the level, supply oil using the oil level gauge.

CAUTION:

Exceeding the specified oil level will lead to malfunctioning of the fork resulting in oil leakage, breakage, etc. Always make sure that the oil level is as specified.

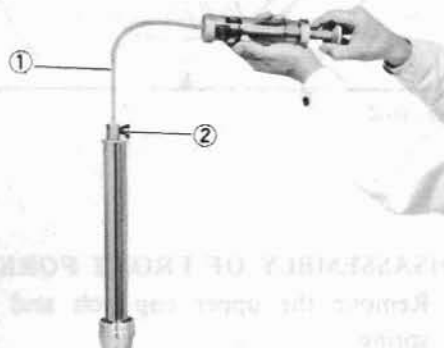


Fig. 10-26.

- Insert the spring into the inner tube with closely coiled portion upward and mount the upper cap bolt.

HANDLING THE FRONT FORK

The GS1000 front fork is mechanical pneumatic type. The fork tubes contain compressed air, and coil springs are used to augment the pneumatic cushioning action. The air pressure is adjustable so that you can obtain a degree of "softness" to suit running condition by raising or lowering the pressure.

ADJUSTING THE AIR FORK

- Stand the motorcycle erect on the center stand, and raise the front end slightly by jacking up the underside of the engine.
- Remove the air valve cap.



Fig. 10-27.

- Before attaching air pressure gauge (09940-44110; Front fork gauge) on the front fork, turn valve ① clockwise until it locks. Next turn freely valve ② counterclockwise until it turns freely. Mount valve nut ③ on the air valve of front fork and turn it manually clockwise until it stops. Next turn the valve ② clockwise until it locks. Inject air through air charging port ④ using an air pump (hand pump).

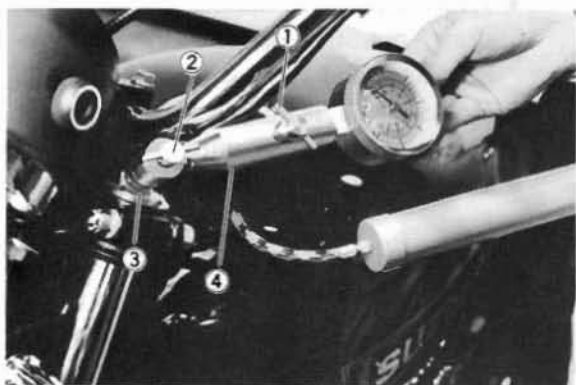


Fig. 10-28.

- Inject 2 to 2.5 kg/cm² of air with the air pump to adjust the pressure to the specified value, carrying out fine adjustment with valve ①.

When the specified pressure is obtained, turn valve ① clockwise until it locks, loosen valve ②, and remove the gauge.

Next, loosen valve nut ③ and remove the gauge from the front fork. Finally firmly fasten the valve cap.

CAUTION:

- *Inspect and adjust air pressure when the front fork is cold.*
- *Only air or nitrogen should be used. Never use oxygen or any other gas.*
- *Never allow the charged gas to come into contact with, or near, fire.*
- *The specified pressure of the charged gas is as follows;*

Reference pressure:
0.8 kg/cm² (11 psi)

However it may be adjusted in the range of 0.8 to 1.2 kg/cm² according to the demand of the customer.

- *Never use an air compressor to inject air. Always supply air with a hand pump.*
- *Adjust the balance of the left and right pressures within 0.1 kg/cm². Before riding, always inspect and if necessary, adjust the pressure to the reference pressure.*
- *The pressure must not exceed the following value.*

Max. charged pressure:
2.5 kg/cm² (35 psi)

Air charged above the max. valve will damage the fork leading to oil leakage, breakage, etc. Always maintain the specified value

WARNING

- Be sure to balance the front and rear suspension by referring to "MATCHING FRONT AND REAR FORKS". Changing

the air pressure setting of front fork requires the spring and damper settings of rear suspension to be changed according to the instruction, and vice versa.

- Inspection and adjustment of air pressure without disassembly of front fork should be carried out after completely draining air from the fork. At this time drain the air slowly, by degrees. Draining the air all at once may cause bydraulic fluid to be mixed into the oil.

INSPECTION

- Inspect front fork spring.
Measure the free length of the fork spring. Replace it by new one if it is less than the service limit.

Standard	Service limit
421 mm (16.6 in.)	416 mm (16.4 in.)

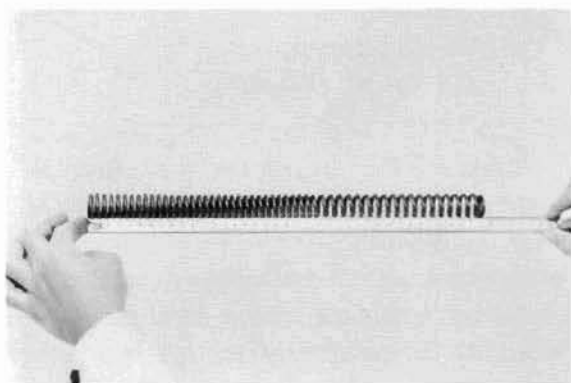


Fig. 10-29.

- Inspect the inner tube.
Visually inspect the sliding surface of the inner tube. Replace the inner tube by new one if any flaws are found.
- Inspect the outer tube.
Visually inspect the outer tube to see whether it is dented or damaged.
- Inspection of oil leakage.
Replace oil seal by new one if oil leakage is found. Leakage is caused by intrusion of dust or abnormal flaws on the inner tube.

STEERING STEM

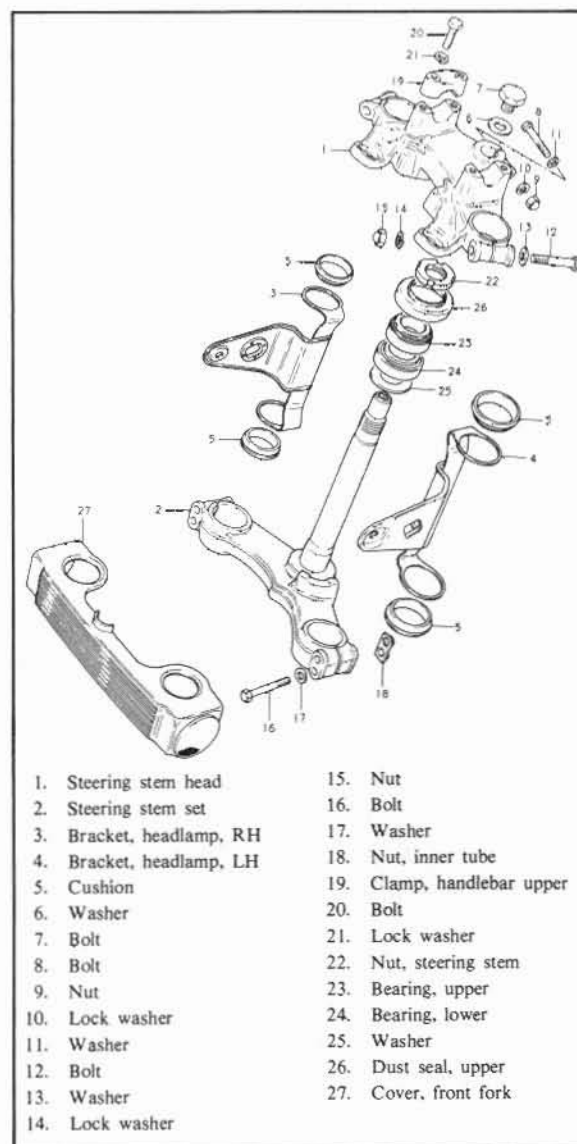


Fig. 10-30.

REMOVAL

- Remove the fuel tank (see page 7-3).
- Remove the three headlamp retaining screws, draw out the socket connected to the headlamp and remove the headlamp.
- Remove the lead wires connected to the interior of the headlamp.
- Remove the two bolts fastening the headlamp housing and remove the housing from headlamp bracket.
- Remove the tachometer cable and speedometer cable on the meter side.

- Remove the two bolts fastening the meter and remove the meter assembly.
Remove the connection coupler at the end of lead wire.
- Before removing the front wheel, loosen steering stem head center locking bolt ① and stem head center bolt ②.



Fig. 10-31.

- Remove the two caliper mounting bolts and remove the caliper assembly from the left front fork.
Then suspend the removed caliper from the motorcycle frame with string so as not to bend the oil hose.

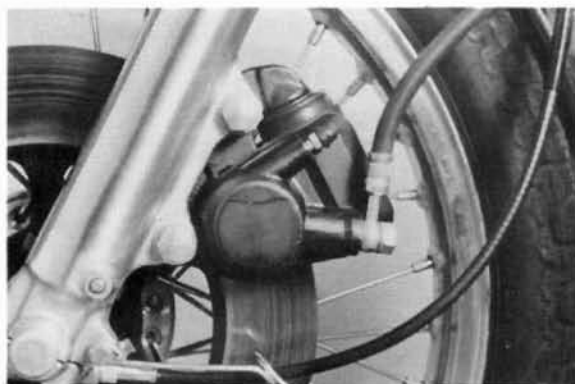


Fig. 10-32.

- Remove the front wheel.
- Remove the front fender.
- Loosen the left and right upper pinch bolt and lower pinch bolt securing the front fork. Draw out the front fork while rotating it. While removing the front fork, hold the left and right headlamp brackets to prevent it falling.

- Remove the front fork cover.

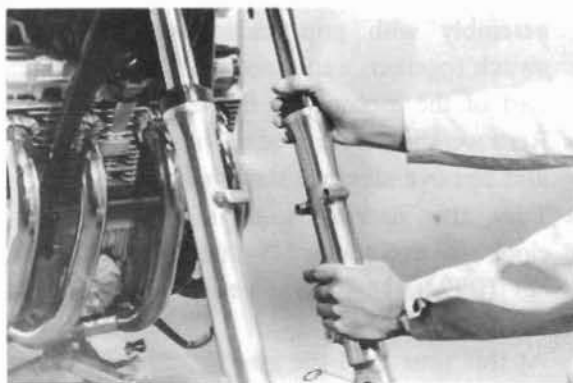


Fig. 10-33.

- Remove the two master cylinder mounting bolts ① on the handlebar.
At this time take care not to bend the oil hose.

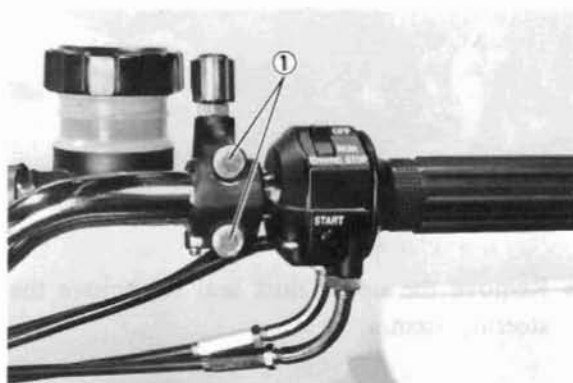


Fig. 10-34.

- Remove one bolt fastening the oil hose joint at the lower portion of the steering stem and remove the oil hose joint from the lower portion of the steering stem.
The series of parts from the master cylinder to caliper assembly can now be removed.

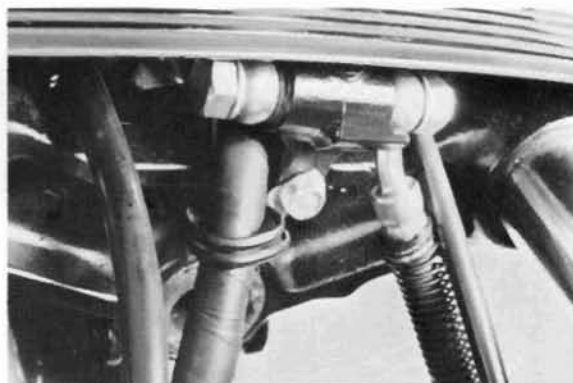


Fig. 10-35.

- Remove the four clamp bolts securing the handlebar and remove the handlebar assembly with grip, cable and handlebar switch together, and place them on the upper part of the motorcycle frame.
- Remove the steering stem head center bolt and remove steering stem head.
- Turn the steering stem nut ① counter-clockwise and remove it using the special tool ② (09940-14910: Steering nut socket wrench).

At this time hold the steering stem carefully to prevent it falling.

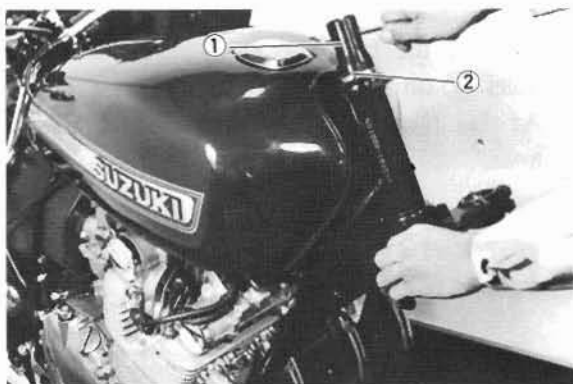


Fig. 10-36.

- Remove the upper dust seal to remove the steering stem.

ASSEMBLY

- Wipe dirt off the upper and lower bearing races with a rag. In addition, thoroughly wash the bearings with detergent.
- Apply a suitable amount of water-resistant chassis grease to the upper and lower bearings.



Fig. 10-37.

- Insert the steering stem into the head pipe from below. Place the upper bearing on the upper portion of the head pipe, place the upper dust seal on the bearing and tighten the steering nut. The nut is tightened using the special torque wrench ① (09940-14910: Steering nut socket wrench).

Steering stem nut tightening method

NOTE:

Tighten the steering stem lock nut to a sufficient degree for assembling. It can be changed during subsequent readjustment of the steering.

CAUTION:

The following adjustment procedure applies when the front fork has already been set. Follow the steps below for adjusting and checking the steering stem.

1. Combine the steering nut socket wrench with the torque wrench, and tighten the stem nut to 4.0 ~ 5.0 kg-m (29.0 ~ 36.0 lb-ft).



Fig. 10-38.

2. Move the steering stem back and forth 5 or 6 times to seat the bearings.
3. Turn the stem nut back to 0 kg-m. Then retighten very lightly so that no play can be detected in the stem.
4. Install the steering stem head and temporarily tighten the steering stem head center bolt at 2.0 ~ 3.0 kg-m (14.5 ~ 21.5 lb-ft).

5. Tighten the steering stem head center side bolt at 1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft).
6. Turn the stem nut back slightly and tighten the steering stem head center bolt to the normal torque of 3.6 ~ 5.2 kg-m (26.0 ~ 37.5 lb-ft). When the front fork is moved back and forth, it must move freely. If there is any play in the forks, loosen the center bolt, tighten the stem nut slightly and retorque the center bolt.

Tightening torque:

Steering stem head center bolt:

3.6 ~ 5.2 kg-m (26.0 ~ 37.5 lb-ft)

Steering stem head center side bolt:

1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)

- Install the handlebar using the two clamps and four bolts.

Tightening torque:

1.2 ~ 2.0 kg-m (8.5 ~ 14.5 lb-ft)

- Push the main wire harness ① through the left lower portion of the steering stem. A bolt fastens the oil hose joint on the lower portion of the steering stem. The holder is fastened by this bolt together with other parts. Firmly secure the wire harness with this holder after assembling the hose joint.
- Route clutch cable ② and lead wires ③, ④ of left and right handlebar switches to the front side of the steering stem head as shown in the photo.

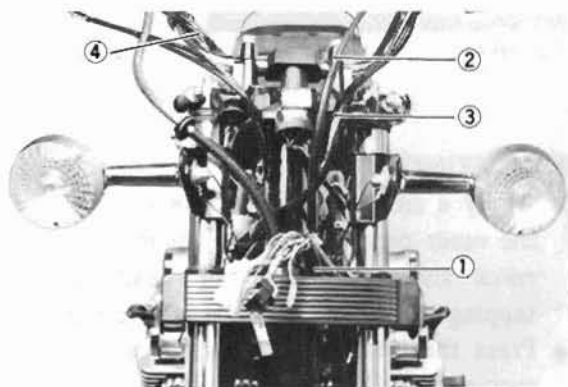


Fig. 10-39.

- Secure the meter assy with two bolts.
 - Install tachometer cable ②.
- Now, route the tachometer cable through the

bottom of steering stem to the front of steering stem head as shown in the drawing. Install the speedometer cable after mounting the front wheel.

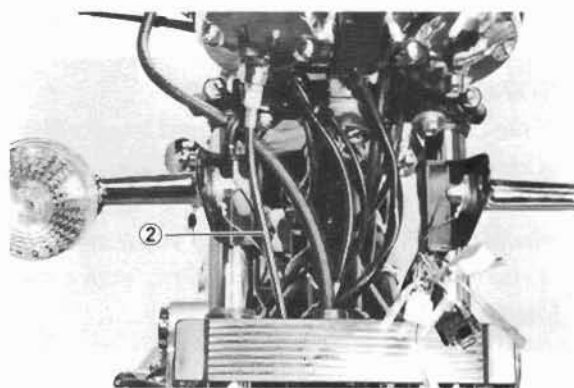


Fig. 10-40.

- Secure the front master cylinder with two bolts ①. Maintain a clearance ② between the right handlebar switch and the master cylinder of 2 mm.

Tightening torque:

0.5 ~ 0.8 kg-m (3.5 ~ 6.0 lb-ft)

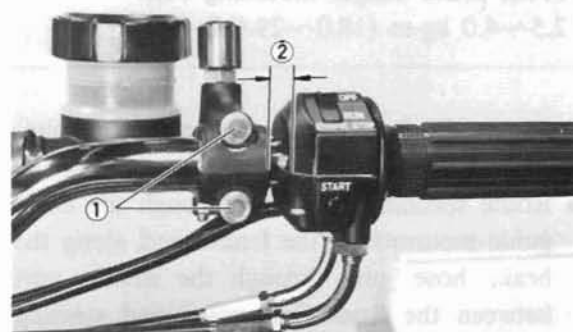


Fig. 10-41.

- Attach the brake hose joint to the lower portion of the steering stem with one bolt. Then tighten the clamp securing the main wire harness. Suspend the caliper from the motorcycle frame by string.
- Fit the headlamp brackets into the intermediate portion between the steering stem head and steering stem without mistaking the left or right positions. Now replace the front fork cover.

- Insert the left and right front forks from the underside of the steering stem and tighten the front fork upper pinch bolt and lower pinch bolt. Then align the end of the inner tube with the upper end of the stem head.

NOTE:

If the cushiones on the upper and lower sides of the headlamp bracket are hard and do not permit the front forks to slide smoothly when they are inserted, apply a small amount of motor oil, etc., to the front forks with your finger.

Tightening torque:

Front fork upper pinch bolt:

2.0 ~ 3.0 kg-m (14.5 ~ 21.5 lb-ft)

Front fork lower pinch bolt:

1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)

- Secure the front caliper assembly to the left front fork by two bolts.

Tightening torque:

Front brake caliper mounting bolt:

2.5 ~ 4.0 kg-m (18.0 ~ 29.0 lb-ft)

- Secure the front fender with the four bolts.
- Mount the front wheel.
- Route speedometer cable through the cable guide mounted on the fender and along the brake hose joint through the middle part between the front fork cover and steering stem and mount it on the meter side.
- Confirm that the speedometer gearbox is positioned correctly (see page 10-9).
- Remove the jack from under the engine.
- Route the main wire harness ①, ignition switch lead wire ②, right handlebar switch lead wire ③, front brake switch lead wire ④ and turn signal lamp lead wire ⑤ through the lower hole of the headlamp housing, and fasten them together using the headlamp bracket.

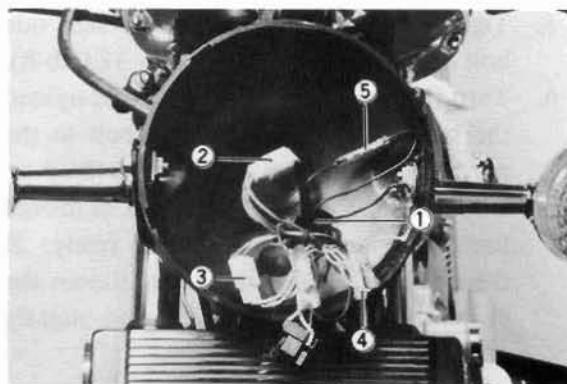


Fig. 10-42.

- Connect each lead wire (see page 10-6).
- Secure the headlamp with the three screws.
- Adjust the vertical angle of the headlamp beam (see page 10-5).

REMOVAL OF STEERING STEM RACE

- Place a jack under the engine.
- Hook special tool ① (09941-54910; Steering stem inner race remover) on the race and use special tool ② (09941-74910; Inner race and bearing driver) to remove the upper and lower races.



Fig. 10-43.

MOUNTING

- Apply a small amount of motor oil, etc., to the outer periphery of the upper and lower races and start them into head pipe by tapping them lightly with a plastic hammer.
- Press the lower and upper races using the special tool ① (0994-34511; Steering inner race and swinging arm bearing installer).

Use of special tool ①

- Two of the four tapered guides set in the special tool ① are to be used. Place the one with larger outer diameter below and the other with smaller outer diameter above and press-fit the race while rotating it. Then tighten the nut until it locks completely.



Fig. 10-44.

STEERING STEM BEARING**REMOVAL**

- Remove bearing using the special tool ① (09941-84910: Steering stem bearing puller).

Use of special tool

- Firmly fit the holder into the roller portion of steering stem bearing. Next, fit the ring into the holder and screw the two shafts into the upper portion of the holder. Screw attachment ② into the top of the steering shaft and remove the bearing while rotating the handle.

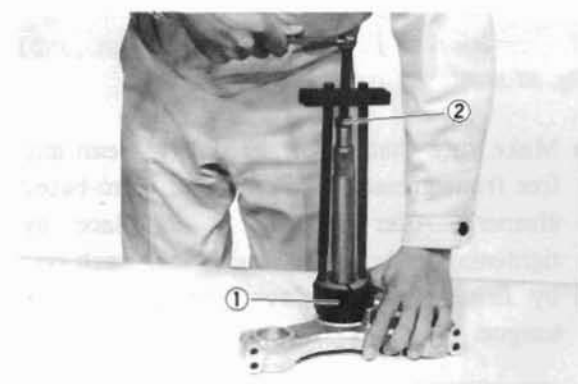


Fig. 10-45.

MOUNTING

- Apply a small amount of motor oil to the inside of the bearing and press it into the steering stem shaft using the special tool ① (09941-74910: Race and bearing driver).

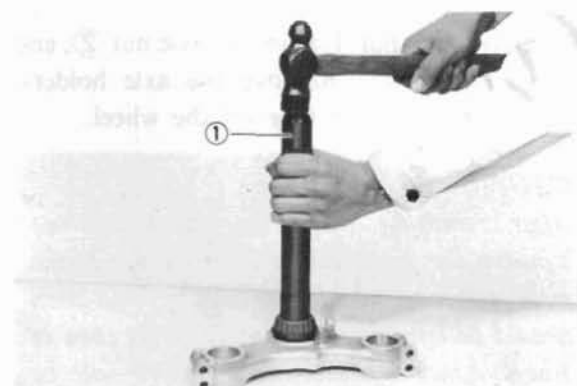


Fig. 10-46.

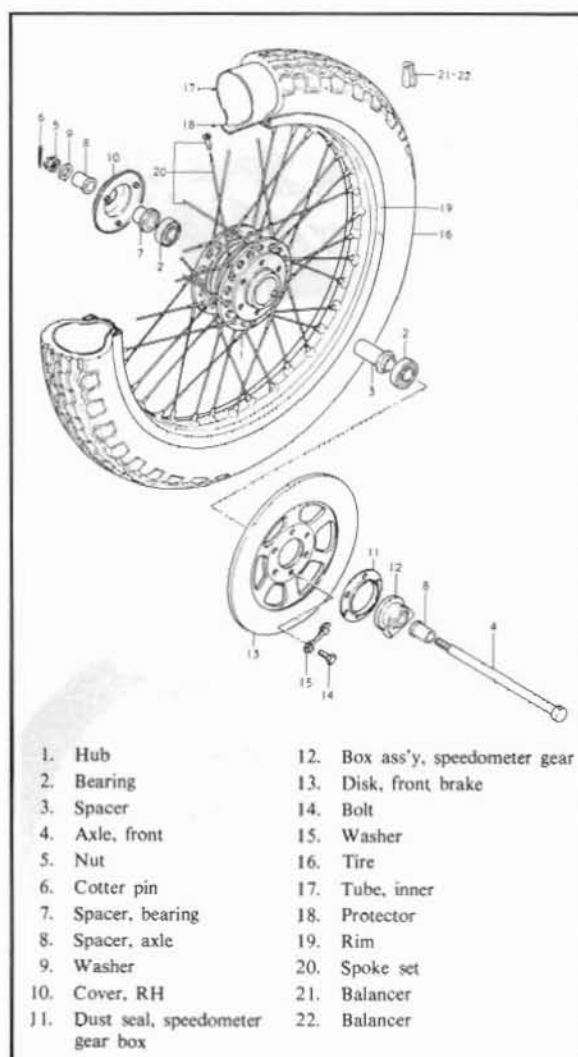
FRONT WHEEL

Fig. 10-47.

REMOVAL

- Lift the front wheel off the floor by raising up the engine, with the center stand resting firmly on the floor.
- Disconnect the speedometer cable from the wheel.
- Pull off split pin ① from the axle nut ②; and loosen the nut. Remove the axle holders, right and left, and take off the wheel.

CAUTION:

After removing the front wheel, do not squeeze the front brake lever or the brake pads will move inside the caliper. The pads should be left where they were at the time of wheel removal otherwise difficulty will be encountered in reinstalling.

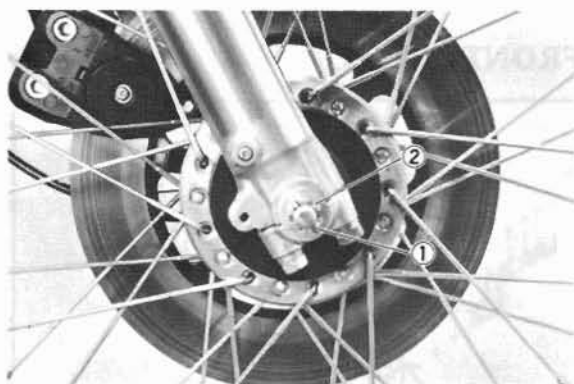


Fig. 10-48.

- Unlock the 6 bolts securing the disc to the wheel hub after straightening the lock washers. Remove the bolts and separate the disc from the wheel.



Fig. 10-49.

- Insert an iron bar into the front hub from the speedometer gear box side and tap the circumference of the ball bearing inner race uniformly to remove the bearing.



Fig. 10-50.

- Similarly, insert an iron bar into the front hub and uniformly tap the periphery of the ball bearing inner race on the opposite side to remove the bearing.

ASSEMBLY

- Reassemble and remount the front wheel in the reverse order to disassembly and removal and in addition to the following items:
- Use the special tool ① (09914-79610 Bearing installer) to install the wheel bearings. These bearings are to be driven into the hub bore.



Fig. 10-51.

- Make sure that the brake disc is clean and free from grease. Use only non petro-based cleaner. After securing it in place by tightening its bolts, be sure to lock each bolt by firmly bending down the lock washer tongue.

Tightening torque of brake disc plate:
1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)



Fig. 10-52.

- Before installing the speedometer gear box ①, grease it and align groove ② (for fitting the two drive pawls to the hub) with the hub to insert the gear box in the wheel.



Fig. 10-53.

- Insert an axle spacer into the front wheel and insert the front axle. Next, from the right side, assemble the bearing spacer, cover, axle spacer, washer and nut in the order mentioned and temporarily tighten the axle nut. See page 10-8 with respect to the order of assembly.
- With the axle shaft mounted, place the front wheel under the front fork and lower the jack placed under the engine to move it close to the front fork.
- Do not change the position of the speedometer gear box (see page 10-8).
- Tighten axle nut.

CAUTION:

To prevent the axle shaft rotating while tightening the axle nut, insert a round bar into the head of shaft on the disc plate side. Rotation of the shaft may lead to bending of the speedometer cable.

Tightening torque of axle shaft:
3.6 ~ 5.2 kg-m (26.0 ~ 37.5 lb-ft)

- Mount the axle holder on the lower portion of the front fork. Maintain uniform clearance between the axle holder and the fork side front and rear (see page 10-9).

Tightening torque of axle holder:
1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)

- Remove the jack under the engine.

INSPECTION

- Using a micrometer check the disc for wear. Its thickness can be checked with disk and wheel in place. The service limit is specified below:

Front and rear disc thickness	
Standard	Service limit
6.5 ~ 6.9 mm (0.26 ~ 0.27 in.)	Under 6.00 mm (0.24 in.)

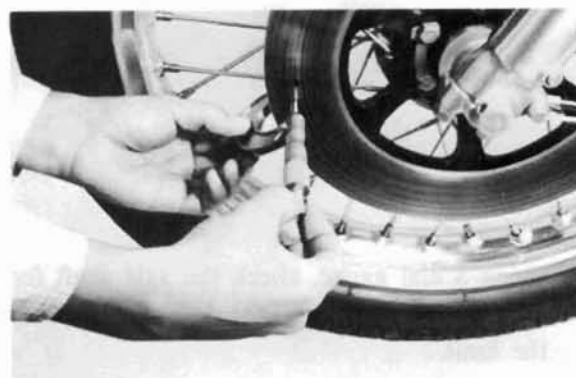


Fig. 10-54.

- With the disc mounted on the wheel, check the disc for face runout with a dial gauge, as shown.

Front and rear disc face runout	
Standard	Service limit
0.1 mm (0.004 in.)	0.3 mm (0.012 in.)



Fig. 10-55.

- Visually inspect the wheel hub bore, from which the bearings have been extracted, for evidence of abnormal wear caused by creeping of bearing outer races.
- Check the wheel bearings in the usual manner after washing them. Make sure that the bearings spin smoothly without any noise or resistance: spin them with your fingers. Never use an air gun for this purpose.



Fig. 10-56.

- Using a dial gauge, check the axle shaft for runout and replace it if the deflection exceeds the limit.

Front and rear axle shaft runout	
Standard	Service limit
0.15 mm (0.006 in.)	0.25 mm (0.010 in.)

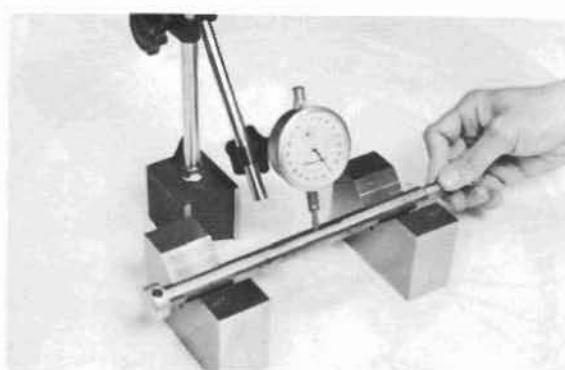


Fig. 10-57.

- Check the spokes for tightness, distortion and damage.
- Inspect the tire for wear and damage, and check the tire tread depth as shown. Replace a badly worn or damaged tire. A tire with its tread worn down to the limit (in terms of tread depth) must be replaced.

Tire tread depth		
Service limit	Front	1.6 mm (0.06 in.)
	Rear	2.0 mm (0.08 in.)



Fig. 10-58.

TIRE WARNING

Check tire inflation and general tire condition frequently. Suzuki recommends replacement only with the specified size Inoue brand V-rated tire.

Tire Inflation Pressure Model GS1000		Solo Riding		Dual Riding	
		KG/CM ²	LB/IN ²	KG/CM ²	LB/IN ²
Normal Riding	Front	1.75	25	2.00	28
	Rear	2.00	28	2.25	32
Continuous High Speed Riding	Front	2.00	28	2.25	32
	Rear	2.25	32	2.80	40
TIRE SIZE : FRONT 3.25V19-4PR REAR 4.00V18-4PR					

* TIRE PRESSURE SHOULD BE MEASURED WHEN TIRE IS COLD.

- Check the tire pressure, and examine the valve for evidence of air leakage.
- Check the wheel for axial and radial runout. For the axial runout, apply the dial gauge spindle horizontally to the rim; for the latter, point the spindle radially to the inner surface of the rim.
- While holding both ends of the shaft to inspect runout of the rim with a dial gauge, tighten the nipple further, using a spoke wrench (Special tool: 09940-60112; Spoke nipple wrench) to attain the specified value.

Front wheel rim runout

Runout	Service limit
AXIAL	2.0 mm (0.08 in.)
RADIAL	2.0 mm (0.08 in.)



Fig. 10-59.

- Spin the wheel (complete with the brake disc and tire) to check dynamic balance. Use a 20-gram or 30-gram balancing piece, as necessary. Spin the wheel several times and make sure that the wheel comes to a natural halt not in a particular position but in random positions each time.

Wheel balancer

Weight	Part Number
20 grams (0.04 lbs)	55411-11000
30 grams (0.07 lbs)	55412-11000

IMPORTANT:

Remember, that the wheel will not be dynamically balanced when the tire is replaced or repaired after a puncture: the wheel must be rebalanced each time its mass is altered.



Fig. 10-60.

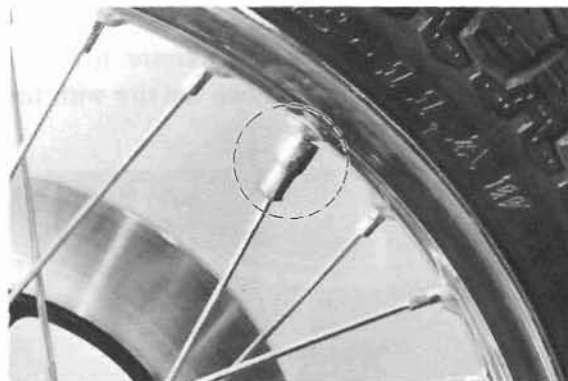


Fig. 10-61.

REMOVAL OF TUBE AND TIRE

- Mark the position of the tires and rotational direction of the valve stem with chalk.
- Remove the valve cap and let out the air.
- Remove the valve fastening nut and fully loosen the bead protector nut.

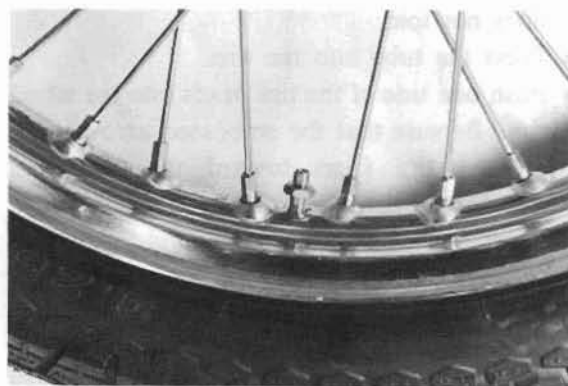


Fig. 10-62.

- Tread on the tire to push down the bead portion and remove one side of the tire from the portion close to the valve using a tire lever.



Fig. 10-63.

- Remove the tube.
- Remove the other bead protector from the bead of the tire to remove the tire with tire lever.



Fig. 10-64.

MOUNTING

- Inflate the tube sufficiently so that the tube does not fold.
- Press the tube into the tire.
- Push one side of the tire beads into the wheel rim. Be sure that the embossed arrow mark on the tire faces toward the rotational direction of the wheel. Next, install the tube, insert the valve into the rim, and tighten the valve nut temporarily. An arrow indicating the rotational direction is marked both front and rear tires. A yellow colored mark is provided on the valve portion to aid checking of the tire balance.



Fig. 10-65.



Fig. 10-66.

- Apply soapy water to the tire bead.
- Hook the bead protector on the bead portion of the tire.
- Fit the other tire using a tire levers in a position well away from the valve.

CAUTION:

Never interfere with the tube by inserting the tire lever too deeply (to avoid damaging the tube).

- By pushing the tire, confirm that the tube is not caught between the rim and tire.
- Inflate the tire to the specified pressure (see page 10-20).
- Tighten the bead protector nut and then the valve nut.
- Mount the valve cap.

FRONT BRAKE MASTER CYLINDER

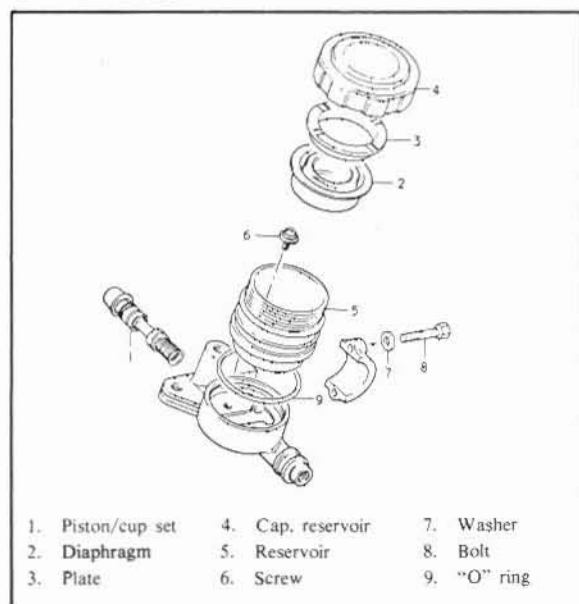


Fig. 10-67.

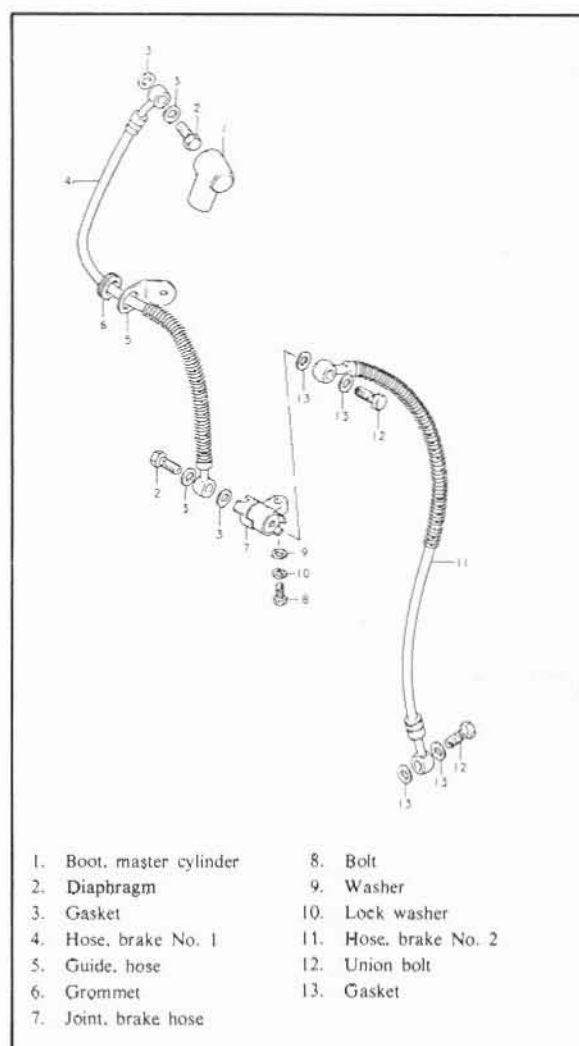


Fig. 10-68.

REMOVAL

- Remove the headlamp.
- Remove the left handlebar switch lead wire and front brake switch lead wire connected within the headlamp housing.
- Remove the union bolt.

CAUTION:

Loosening of the union bolt will cause brake fluid to flow out. Therefore, remove the brake fluid from the brake fluid cup beforehand. Completely wipe off any brake fluid adhering to any part of the motorcycle frame.

MOUNTING

- Mount the master cylinder on the handlebar.

CAUTION:

A clearance of about 2 mm (0.078 in.) ① just be provided between the right-hand handlebar switch and the master cylinder.

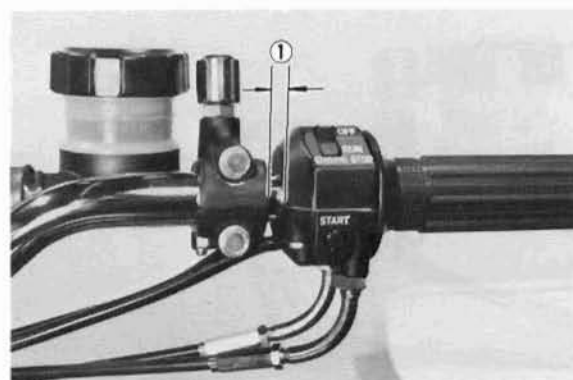


Fig. 10-69.

- Refer to the illustration to reconnect the brake hose to the master cylinder.

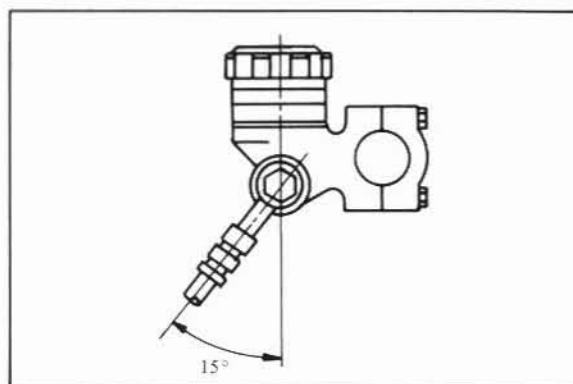


Fig. 10-70.

- Connect the front brake lamp switch lead wire and the left handlebar switch lead wire within the headlamp housing.
- Fasten the headlamp with three screws.

AIR BLEEDING THE BRAKE FLUID CIRCUIT

- Air trapped in the fluid circuit acts like a cushion to absorb a large proportion of the pressure developed by the master cylinder and thus interferes with the full braking performance of the caliper brake. Such air is evidenced by “sponginess” of the brake lever and also by lack of braking force. Considering the danger to which such trapped air exposes the machine and rider, it is essential that, after remounting the brake and restoring the brake system to the normal condition, the brake fluid circuit be purged of air in the following manner:
- Fill up the master cylinder reservoir to “HIGH” level line. Replace the reservoir cap to prevent entry of dirt.



Fig. 10-71.

Bleeder valve tightening torque	0.6 ~ 0.9 kg-m (4.5 ~ 6.5 lb-ft)
------------------------------------	-------------------------------------

- Attach a pipe to the caliper bleeder valve and insert the free end of the pipe into a receptacle.

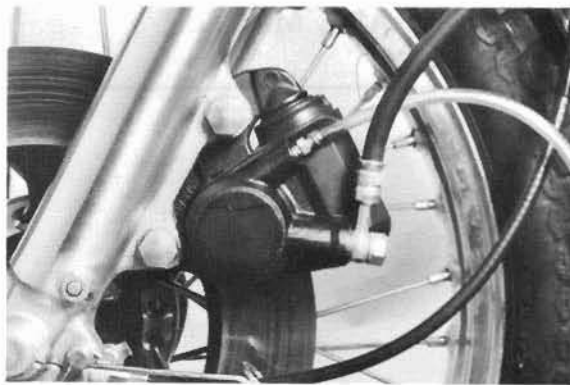


Fig. 10-72.

- Squeeze and release the brake lever several times in rapid succession, and squeeze the lever fully without releasing it. Loosen the bleeder valve by turning it one-quarter rotation or so, spilling the brake fluid into the receptacle; this will remove the tension of the brake lever causing it to touch the handlebar grip. Then, close the valve, pump and squeeze the lever, and open the valve. Repeat this process until the oil flowing into the receptacle no longer contains air bubbles.

NOTE:

Replenish the brake fluid reservoir as necessary while bleeding the brake system. Make sure that there is always some fluid visible in the reservoir.

- Close the bleeder valve, and disconnect the pipe. Fill up the reservoir to the “HIGH” level line.

CAUTION:

Handle the brake fluid with care: the fluid reacts chemically with paint, plastics, rubber materials, etc.

MASTER CYLINDER DISASSEMBLY

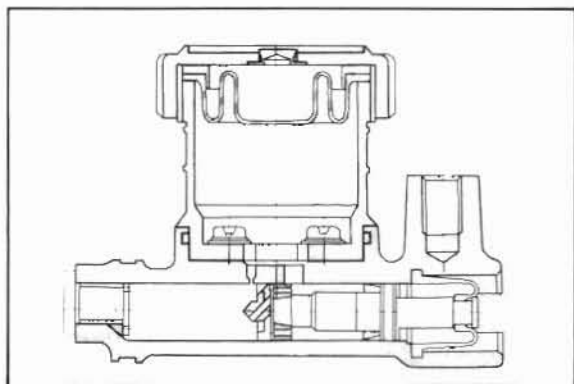


Fig. 10-74.

- Remove the front brake lever: pull off the split pin and remove the nut to free the lever for removal.

Remove the boot. Pick out the circlip from the bore of the master cylinder with special tool ① (09900-06105: Snap ring pliers).

NOTE:

Discard the removed boot. Replace with a new boot in reassembling.

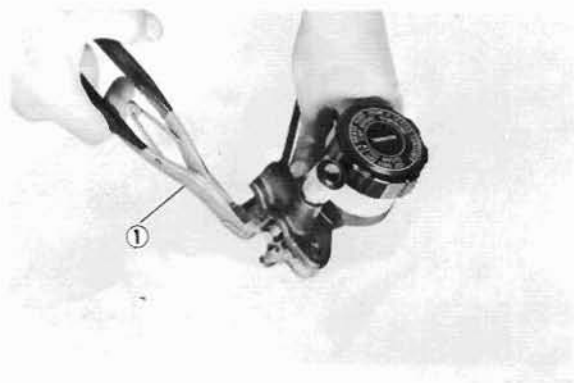


Fig. 10-75.

- Take out the piston, check valve, coil spring and primary cup from the bore.

NOTE:

Using a piece of wood or soft-metal, push out the check valve, coil spring and primary cup. Avoid scratching the bore wall.



Fig. 10-76.

- Remove the two screws ① securing the reservoir to the master cylinder body, and take off the "O" ring from the body.

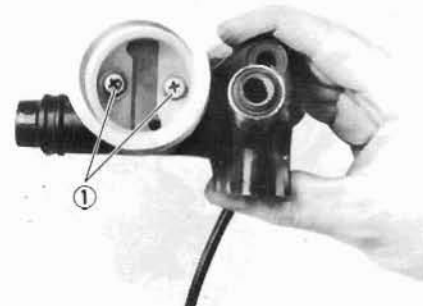


Fig. 10-77.

ASSEMBLY

- Reassemble the master cylinder in the reverse orders of disassembly and by taking the following additional steps:
- Apply brake fluid to the cylinder bore and all the internals to be inserted into the bore. Do not attempt to insert one internal after another into the bore; assemble the primary cup, coil spring and check valve together. Insert this assembly into the bore, taking care not to allow the check valve to become cocked or to unseat the coil spring as it goes into the bore.
- It is advisable, though not essential, to replace the primary cup with a new one in reassembly.

CAUTION:

Always install the circlip with the sharp edge away from the spring.

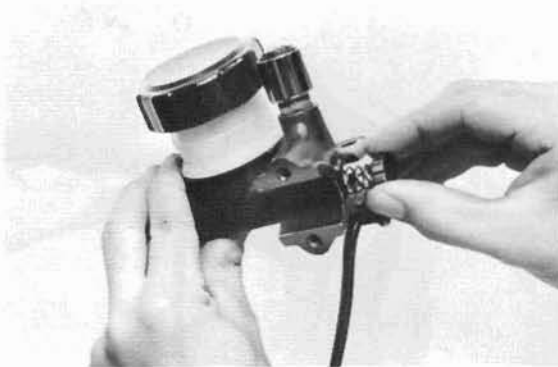


Fig. 10-78.

- After fitting the circlip, try to turn it in place to make sure it is snugly seated in the groove. Replacing the circlip with a new one is advisable instead of re-using the circlip removed in disassembly.

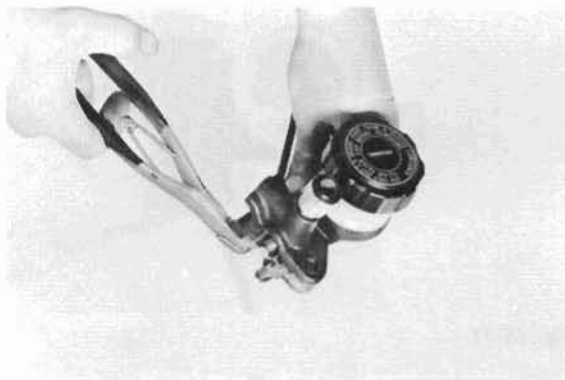


Fig. 10-79.

- Reconnect the brake lever to the master cylinder before mounting the master cylinder on the handlebar.
- Mount to the handlebar as described on page 10-23.

INSPECTION OF MASTER CYLINDER

- Using a micrometer, measure the cylinder bore and piston to check their diameters are within the limits. Replace the cylinder or piston or both if the limit is exceeded.

Diameter	Standard	Service limit
Bore	14.00 mm (0.551 in.)	Over 14.05 mm (0.553 in.)
Piston	13.96 mm (0.550 in.)	Under 13.94 mm (0.549 in.)

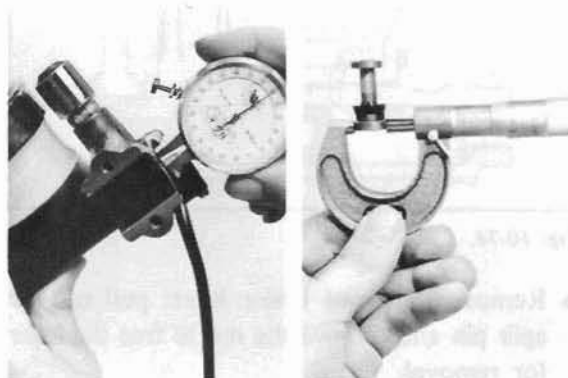


Fig. 10-80.

- Check the fit of the reservoir with the cylinder body. If signs of fluid were noted at the time of disassembly, replace the "O" ring.
- Inspect the primary cup for wear and damage, and replace it with a new one if necessary.

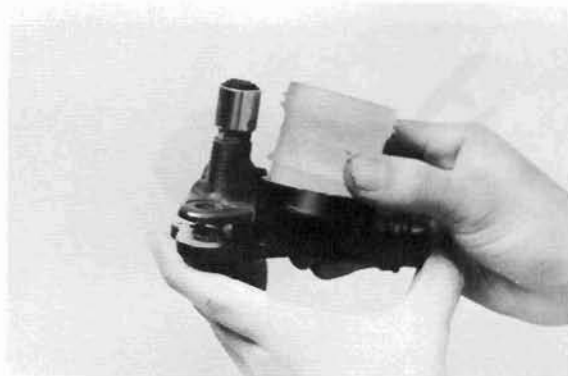


Fig. 10-81.

- Replace the brake hose every two years.

FRONT BRAKE CALIPER

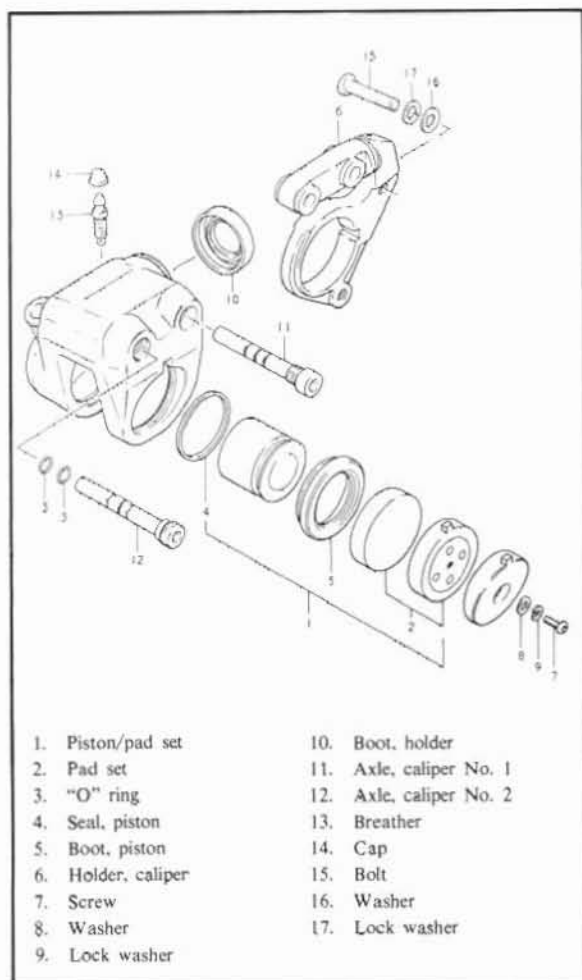


Fig. 10-82.

REMOVAL

- Disconnect brake hose No. 2 ① from the caliper, and catch the brake fluid in a suitable receptacle. Squeeze the brake lever to push out the fluid.



Fig. 10-83.

CAUTION:

Do not splash the brake fluid when removing the caliper assembly.

- Remove two mounting bolts ① securing the caliper to the fork. Take off the caliper assembly.



Fig. 10-84.

MOUNTING

- Tighten two caliper mounting bolts.

Tightening torque:

2.5~4.0 kg-m (18.0 ~ 29.0 lb-ft)

- Tighten the brake hose union bolt.

Tightening torque:

1.5~2.5 kg-m (11.0 ~ 18.0 lb-ft)

- Pour brake fluid into the reservoir up to the low level.
- See page 10-24 for air bleeding of the caliper and brake hose.

CALIPER

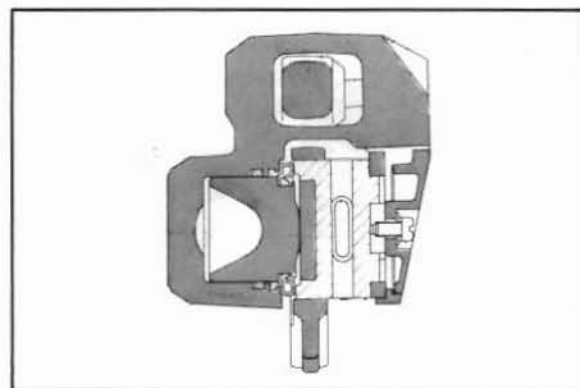


Fig. 10-85.

CALIPER DISASSEMBLY

- Loosen and remove the two caliper axle bolts.

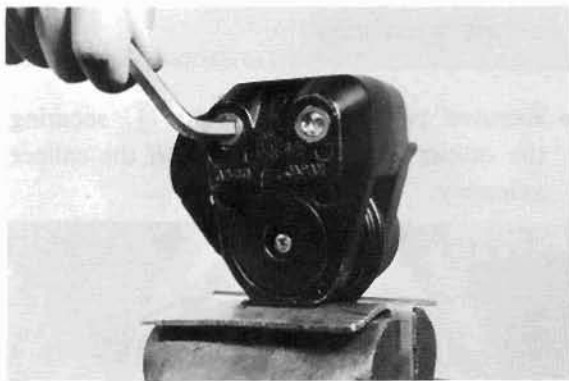


Fig. 10-86.

- Remove screw ① fastening No. 2 pad (stationary) to the caliper body, and take out the pad. Separate the caliper holder from the body.

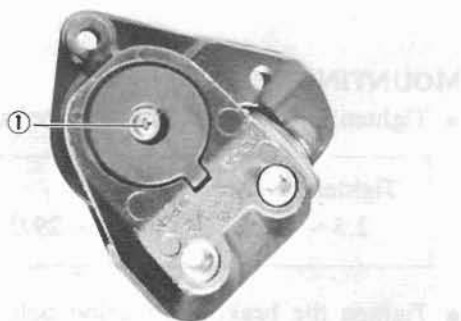


Fig. 10-87.

- Apply compressed air (2.0 kg/cm², 28 psi) to the oil hose connection to push out the piston.

NOTE:

Remove the piston boot to facilitate piston removal.



Fig. 10-88.

- After removal of the caliper holder, take out the piston seal, dust seal, piston boot and "O" ring. Wash the piston seal and piston boot clean with fresh brake fluid. Discard the removed dust seal and "O" ring: always use replacement seal and "O" ring in reassembly.

CAUTION:

Do not use such a cleaning fluid as trichlene or even gasoline to wash the piston seal and boot.

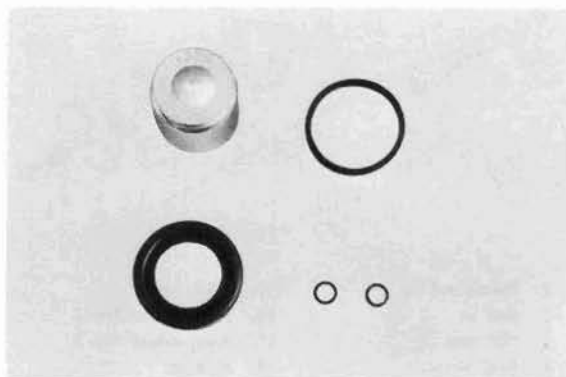


Fig. 10-89.

ASSEMBLY

- Apply brake fluid to the piston seal ① and fit it into the caliper body.

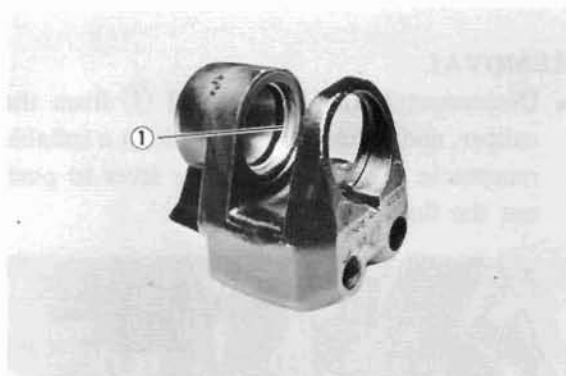


Fig. 10-90.

- Fit the caliper holder ①, to the body, taking care not to damage the dust seal.
- Apply brake fluid to the piston, and insert it into the bore.

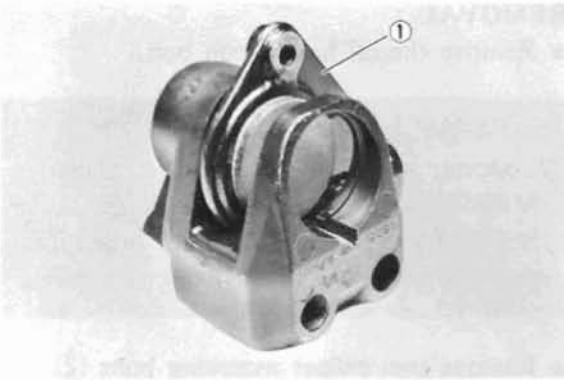


Fig. 10-91.

- Coat caliper axle bolts ① with SUZUKI caliper axle grease ②, and install the bolts. Mount the caliper assembly, securing it to the front fork. Check that the pads are not in an abnormal dragging condition — dragging excessively on the disc.


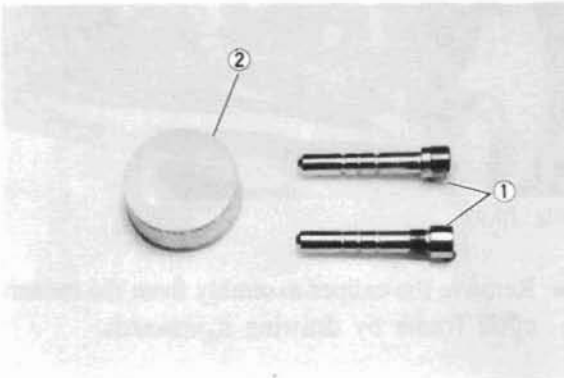


Fig. 10-92.

INSPECTION

- Check brake pads for wear. A pad worn down to the limit (indicated by the red groove on the edge) must be replaced.

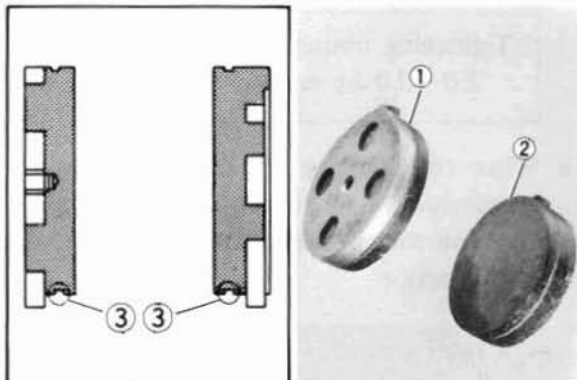

1. Pad No. 2
2. Pad No. 1
3. Red groove

Fig. 10-93.

- Using a micrometer, measure the piston and bore to check that their diameters are within the limits. Use a cylinder gauge to take the reading on the bore.

Diameter	Standard	Service limit	
Bore	42.85 mm (1.687 in.)	Over	42.89 mm (1.689 in.)
Piston	42.82 mm (1.686 in.)	Under	42.77 mm (1.684 in.)

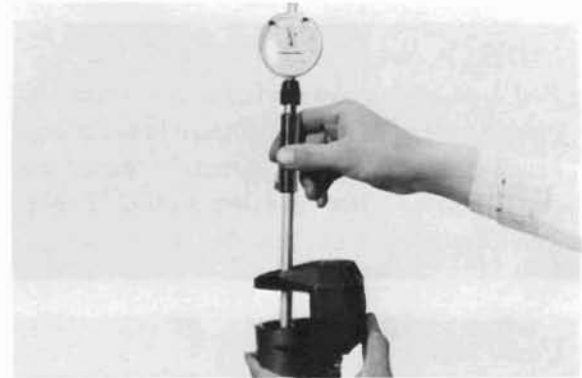


Fig. 10-94.

- Inspect the piston seal and boot for wear and damage.
- Examine the caliper body for damage.

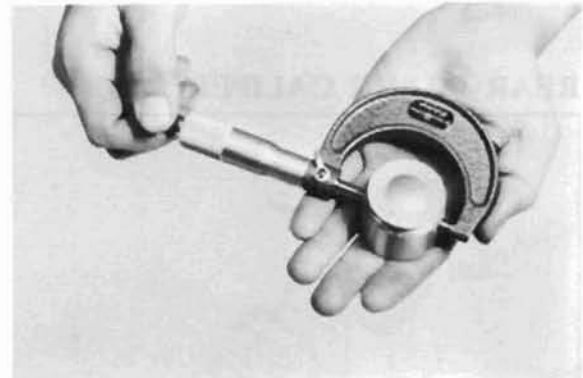


Fig. 10-95.

BRAKE PARTS TO BE PERIODICALLY REPLACED

Brakes are critical safety components which must be maintained in peak condition at all times. In view of this requirement, the following brake parts of the Model GS1000 should all be simultaneously replaced at intervals of two years.

The parts named are subject to wear or deterioration but may continue to work satisfactorily beyond the two-year interval. Experience, however, tells that replacement after each two

years is justified from standpoints of safety and economy. Adherence to this rule is strongly recommended.

Replacement interval: Two years

- Components of master cylinder assembly
(Use Suzuki Genuine parts: Master cylinder cup set)
- Component of caliper assembly
(Use Suzuki Genuine parts: Pad and piston set)

NOTE:

Pad and piston set includes two kinds of grease packed in pouch. Grease in the pouch printed "Caliper Axle Grease" should be used for the caliper axle and printed "Brake Pad Grease" for the pad No. 1.

CAUTION:

Be sure to wash all component parts in the above sets with clean brake fluid before installing them into the master cylinder or caliper.

REAR BRAKE CALIPER

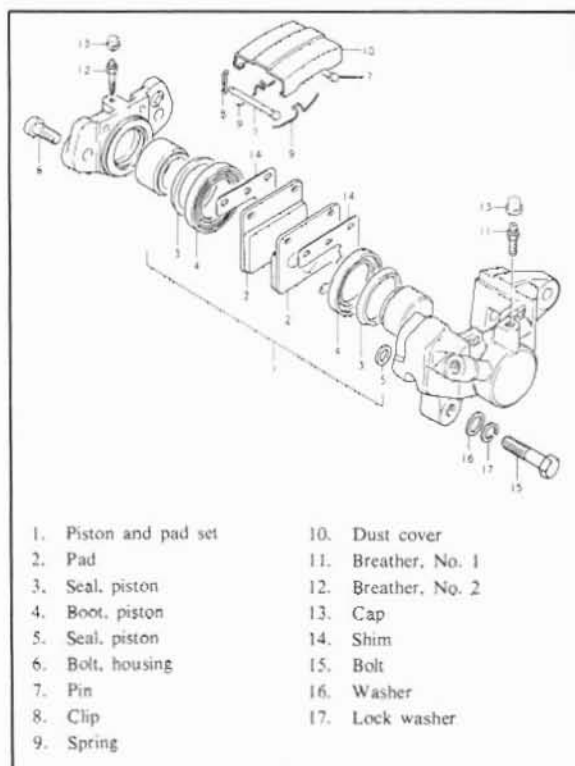


Fig. 10-96.

REMOVAL

- Remove the oil hose union bolt.

CAUTION:

Loosening the oil hose union bolt ① causes the brake fluid to flow out. Block the brake fluid with a rag, etc., to avoid the brake fluid coming in contact with the motorcycle frame.

- Remove two caliper mounting bolts ②.
- Remove nut ③ together with the rear torque link bolt and rear caliper, and remove the wheel side bolt towards the wheel side.



Fig. 10-97.

- Remove the caliper assembly from the motorcycle frame by drawing it upwards.

MOUNTING

- With the disc pad opened, insert the caliper assembly into the upper portion of the brake disc.
- Put the rear torque link bolt from the wheel
- Secure it with the fastening nut temporarily.
- Next tighten the caliper mounting bolt.

Tightening torque:

2.0~3.0 kg-m (14.5~21.5 lb-ft)

- When reconnecting the brake hose to the caliper body, be sure to point the hose in the direction shown to keep the hose away from other parts.

IMPORTANT:

Most of the steps in reassembly of the front-brake caliper assembly are applicable also to the rear-brake caliper assembly.

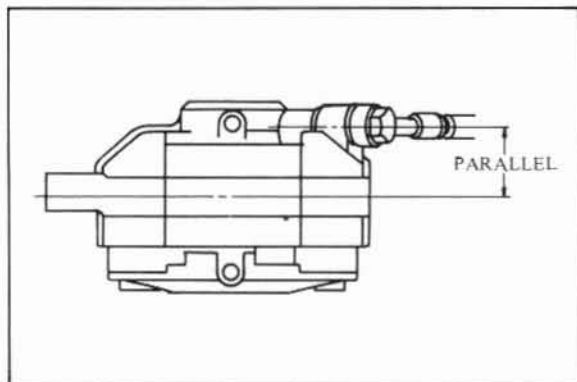


Fig. 10-98.

Tightening torque:
1.5 ~ 2.5 kg-m (11.0 ~ 18.0 lb-ft)

- Remove the right frame cover.
- Remove the reservoir cap and pour the brake fluid.
- Bleed air from the caliper and the oil hose.

AIR BLEEDING OF THE BRAKE FLUID CIRCUIT

- Refer to the procedure outlined in FRONT-BRAKE ASSEMBLY; the underlying principles are the same. Differences, however, are due to the fact that the master cylinder is actuated by a pedal and that there are two bleeder valves. Bleed air out from the in-board valve first, and then from the outboard valve.
- Operate the pedal in the way the brake lever is operated to drive air out. The pedal being depressed will yield and go down as the fluid is spilled into the receptacle; in the case of the front brake, the lever touches the handlebar. When the pedal is about 40 mm (1.6 in.) from the footrest when depressing, close the bleeder valve and release the pedal. Repeat the process of pumping and depressing the pedal until no air bubbles appear in the receptacle.

Bleeder valve tightening torque:
0.6 ~ 0.9 kg-m (4.5 ~ 6.5 lb-ft)

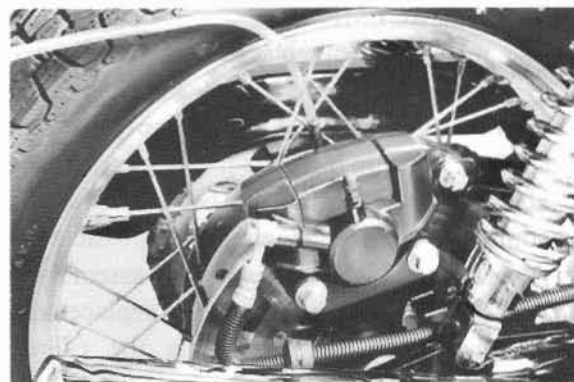


Fig. 10-99.

CAUTION:

As in the case of front-brake caliper assembly, it is essential that the air bleeding operation be carried out after restoring the rear brake system to the operating condition.

- After completion of air bleeding, tighten the rear torque link nut and install retaining pin.

Tightening torque:
2.0 ~ 3.0 kg-m (14.5 ~ 21.5 lb-ft)

BRAKE PEDAL ADJUSTMENT

Adjust the pedal height in the following manner:

- Loosen lock nut ①. Loosen the return stopper bolt ② on the brake pedal.
- Loosen lock nut ③. Rotate the pushrod ④ to bring the pedal to the elevation 10 mm (0.39 in.) below the top face of the footrest; and secure the pedal there by tightening the nut 3.
- Adjust the clearance between pedal arm and return stopper to 0.5 mm (0.02 in.), and tighten lock nut ①.

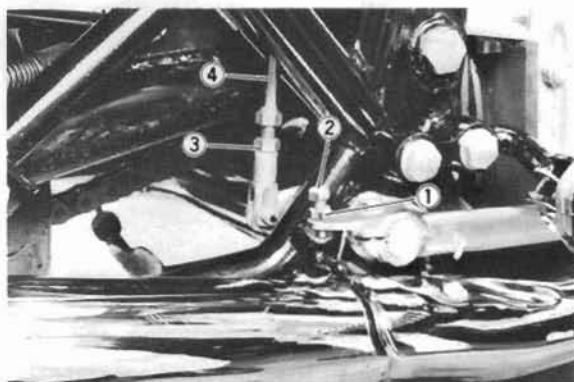
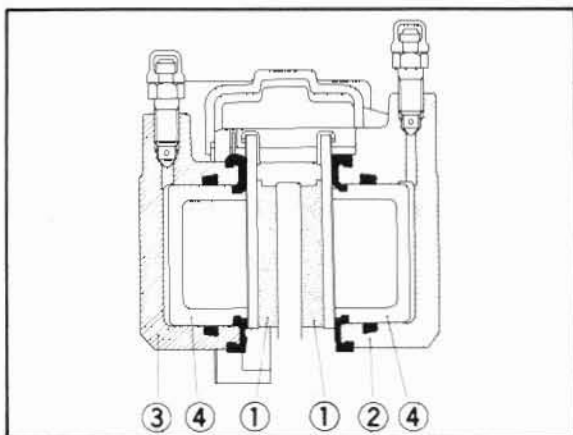


Fig. 10-100.

PAD REPLACEMENT

- The pads can be replaced with the caliper assembly in place, by removing the pins supporting the pads and their stop pins and springs, but this method is not recommendable because the piston boots might also come off and, it is almost impossible to accurately refit the boot when the assembly is in place. Reliable and accurate replacement is ensured by first removing the caliper assembly.

DISASSEMBLY OF REAR BRAKE CALIPER

1. Pad
2. Left caliper body
3. Right caliper body
4. Piston

Fig. 10-102.

- Remove the pad inspection cap. Draw out the two pins ① supporting each pad: a stop pin ② must be pulled off first from the end of each pin ②. At the same time, remove two springs ③.

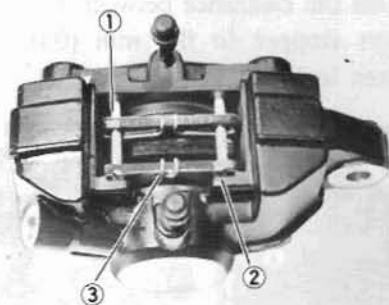


Fig. 10-103.

- Remove the two bolts fastening the two caliper body halves together, and separate the two halves.

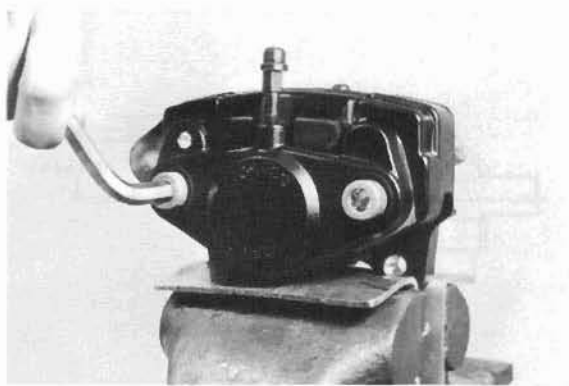


Fig. 10-104.

- Remove the boot from each piston. Apply compressed air (2 kg/cm², 28 psi) to the internal fluid passage to force each piston out of the bores.

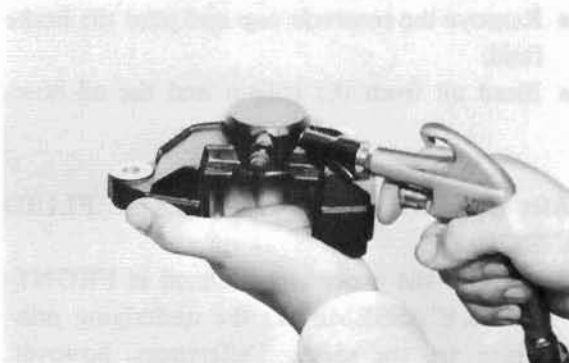


Fig. 10-105.

ASSEMBLY

- Reassemble in the reverse order to disassembly paying attention to the following points.
- Wash the pistons, piston boots, rubber seal and caliper body halves with fresh brake fluid just before reassembling each part : reassemble while washing.

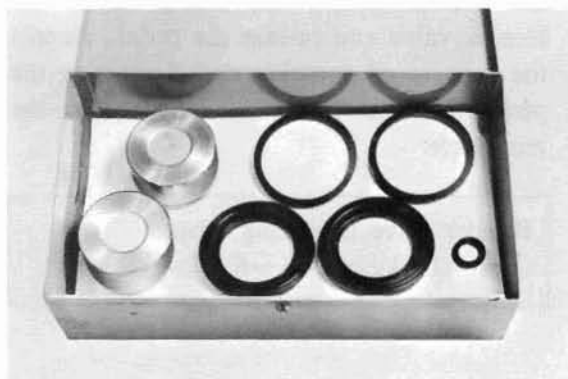


Fig. 10-106.

- Fasten the two body halves, tighten the two bolts to the torque specified below:

Tightening torque:

Rear brake caliper axle bolt:

2.5~3.5 kg-m (18.0~25.5 lb-ft)

- Fit a brake pad shim to the rear of the brake pad so that the "►" hole in the shim points to the front.

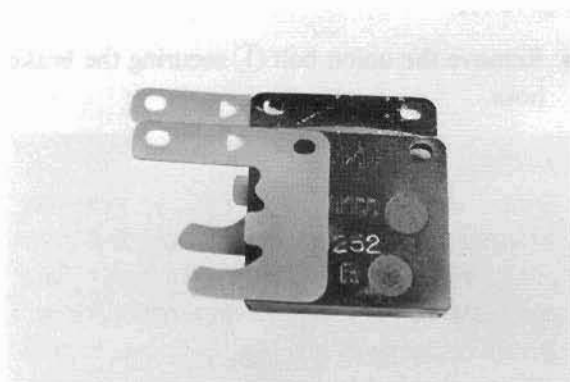


Fig. 10-107.

- Insert the pin into the caliper body from the wheel side.
- Run the pin through shims and pad into the opposite caliper body.
- Hook the two springs onto the lower part of the pin.
- While holding the springs with fingers, insert the other pin through the shims and pad into the caliper body.
- Set the stop pin into the pin hole.
- Place the inspection cap back on the brake pad.
- Bleed the air from the system.

INSPECTION

- Measure the cylinder bore and piston to see whether these diameters are within the limits. Replacement is necessary where the limits are exceeded.

Diameter	Standard	Service limit	
Bore	38.18 mm (1.503 in.)	Over	38.19 mm (1.504 in.)
Piston	38.15 mm (1.502 in.)	Under	38.13 mm (1.501 in.)

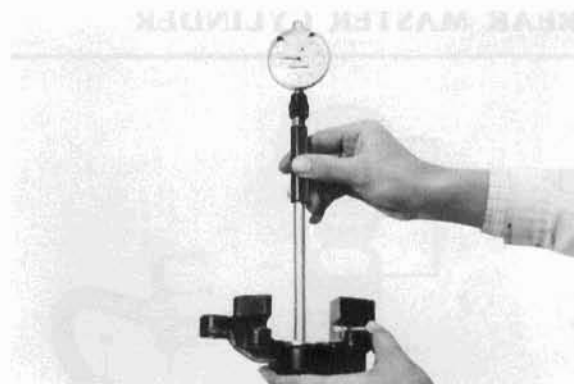


Fig. 10-108.

- Inspect the piston boot and seal of each piston for wear and damage.

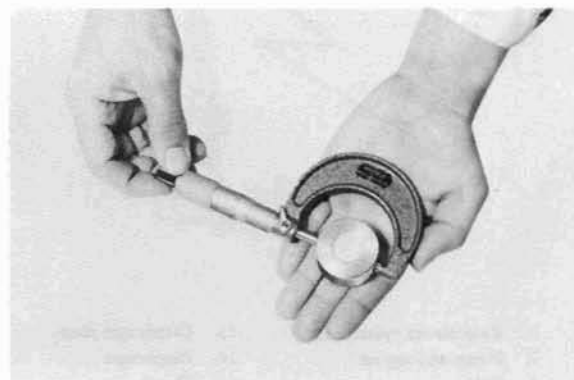


Fig. 10-109.

- Check brake pads for wear. Each pad is stepped at its edge to present two edge faces, one being painted red and the other being 1.5 mm (0.06 in.) ① thick. The pad may be kept in service until this 1.5 mm (0.06 in.) face disappears due to wear.

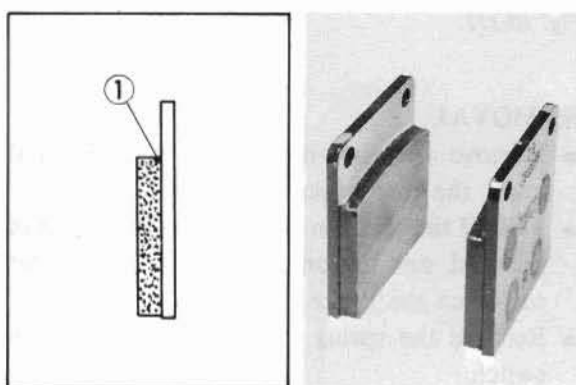


Fig. 10-110.

REAR MASTER CYLINDER

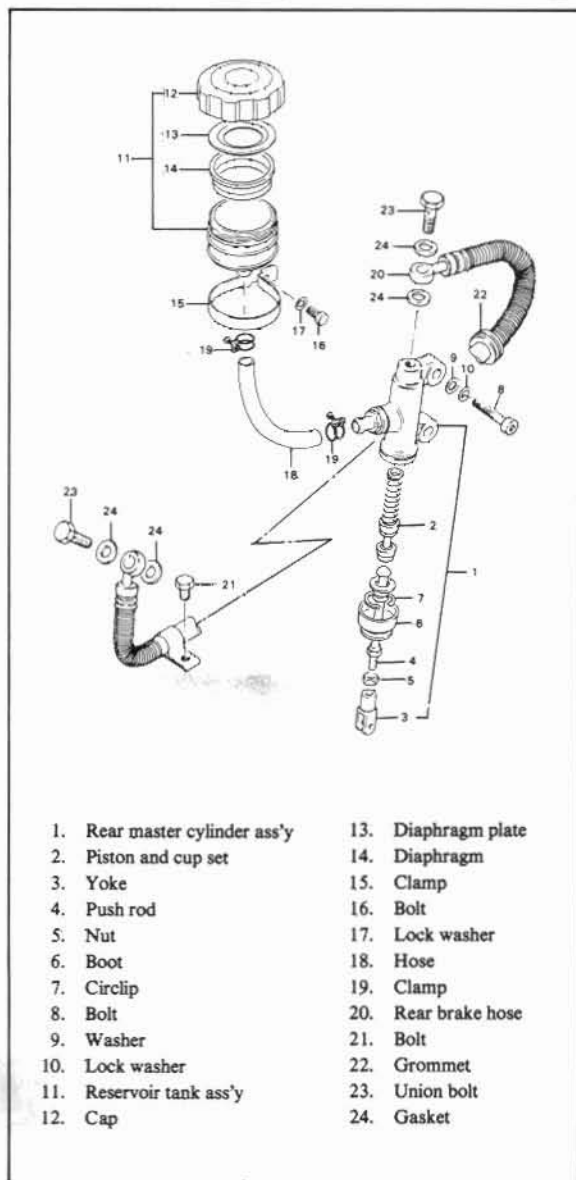


Fig. 10-111.

REMOVAL

- Remove the right-hand front step ①, and lower the rear brake pedal ②.
- Pull off the split pin ③ from the lower end of pushrod, and disconnect the master cylinder rod from the brake pedal arm.
- Remove the spring for the rear brake lamp switch.
- Remove the right frame cover.

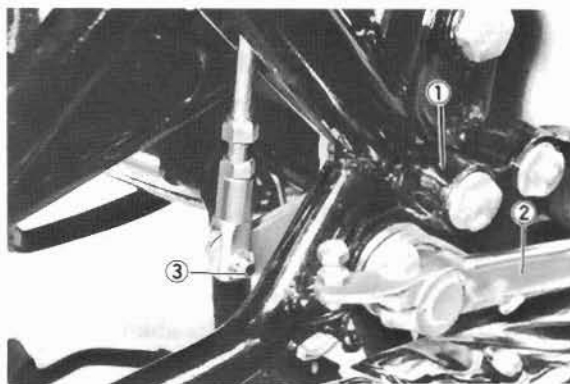


Fig. 10-112.

- Remove the union bolt ① securing the brake hose.

NOTE:

Drain the brake fluid from the reservoir beforehand since the brake fluid will flow out. Take care not to allow the brake fluid coming in contact with the motorcycle frame. If any brake fluid touches the frame, wipe it off completely with a rag.

- Remove the two bolts ② securing the master cylinder to the frame, and lower the cylinder.



Fig. 10-113.

- Remove bolt ① securing the reservoir and remove the reservoir from the frame.



Fig. 10-114.

MOUNTING

- Fasten the reservoir with one bolt.
- Insert the cylinder master rod into the brake arm.
- Fasten the master cylinder with two bolts.

Tightening torque:

Rear brake master cylinder mounting bolt:
1.5~2.5 kg-m (11.0~18.0 lb-ft)

- Position the master cylinder rod and the brake arm with a pin and secure them with a split pin.

NOTE:

Insert the pin from the frame side, insert a washer and connect the rod with the arm through the split pin.

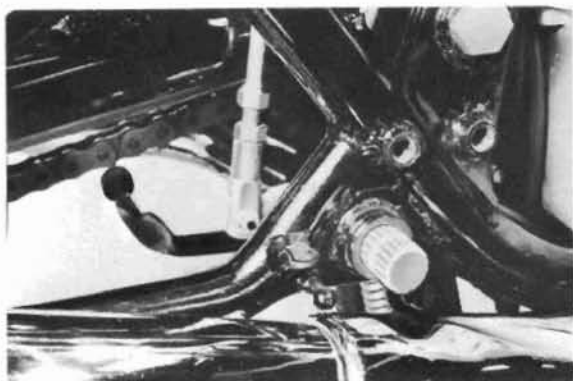


Fig. 10-115.

- When installing the brake pedal, be sure to align the match marks at the pivot part, thereby positioning the pedal correctly. After securing the pedal, install the foot rests.

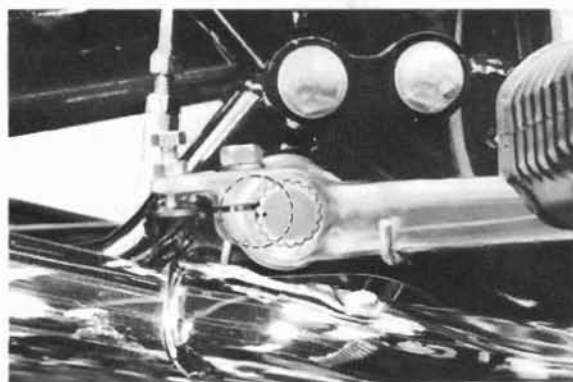


Fig. 10-116.

- Carry out air bleeding operation as indicated previously. (See page 10-31).

- Adjust the brake pedal height as indicated below: (See page 10-31).

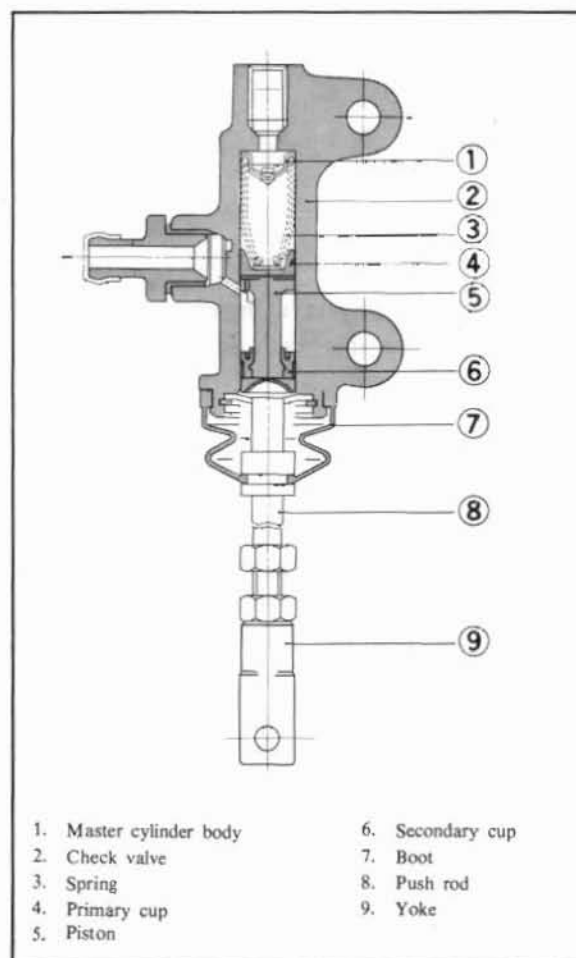
DISASSEMBLY OF MASTER CYLINDER

Fig. 10-117.

- Loosen the clip screw on the master cylinder side and extract the brake hose from the master cylinder.
- Take off the boot, and take out the circlip by using the special tool ① (09900-06105: Snapping plier).

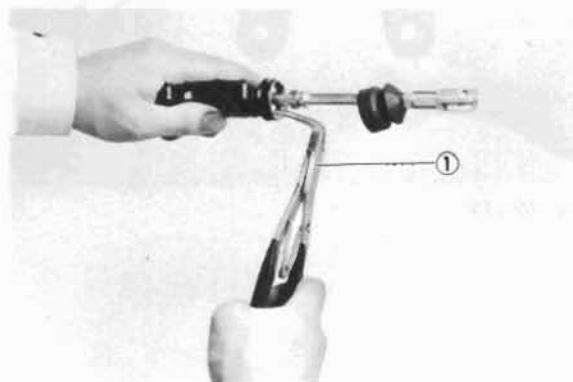


Fig. 10-118.

- Take out piston, check valve, coil spring and primary cup from the cylinder.

NOTE:

Using a piece of wood or soft-metal, push these internals out of the cylinder bore, taking care not to nick or scratch the bore wall. Be careful, too, not to damage the parts.

ASSEMBLY

Reassemble the master cylinder in the reverse order to disassembly with taking the following additional steps:

- Be sure to apply brake fluid to the cylinder bore and all the internals to be inserted into the bore.
- Assemble the check valve, coil spring and primary cup outside the cylinder, and insert the assembly into the bore, taking care not to unseat the coil spring off the check valve. Remember, the spring can easily come off the valve. Be careful not to allow the primary cup to cock inside the bore.
- It is advisable to replace the primary cup unless the cup removed in disassembly is in perfect condition.

CAUTION:

Always install the circlip with the sharp edge away from the spring.

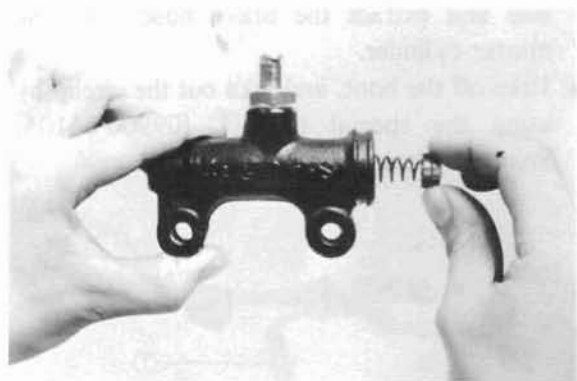


Fig. 10-119.

- After fitting the circlip, try to turn it in place to make sure it is snugly seated in the groove. Use of a replacement circlip is advisable to re-using the one removed in disassembly.

INSPECTION

- Using a micrometer, measure the cylinder bore and piston to see whether their diameters are within the limits; if not, replace the cylinder or piston or both.

Diameter	Standard	Service limit	
Bore	14.00 mm (0.551 in.)	Over	14.05 mm (0.553 in.)
Piston	13.96 mm (0.550 in.)	Under	13.94 mm (0.549 in.)

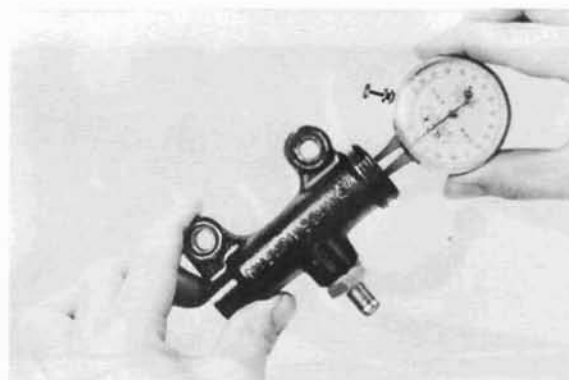


Fig. 10-120.

- Inspect the primary cup and boot for wear and damage and, if necessary, replace them.

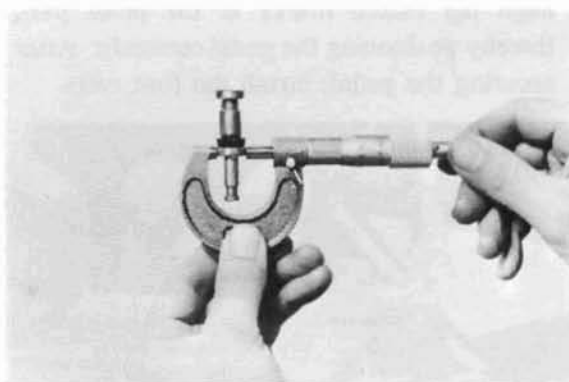


Fig. 10-121.

REAR WHEEL

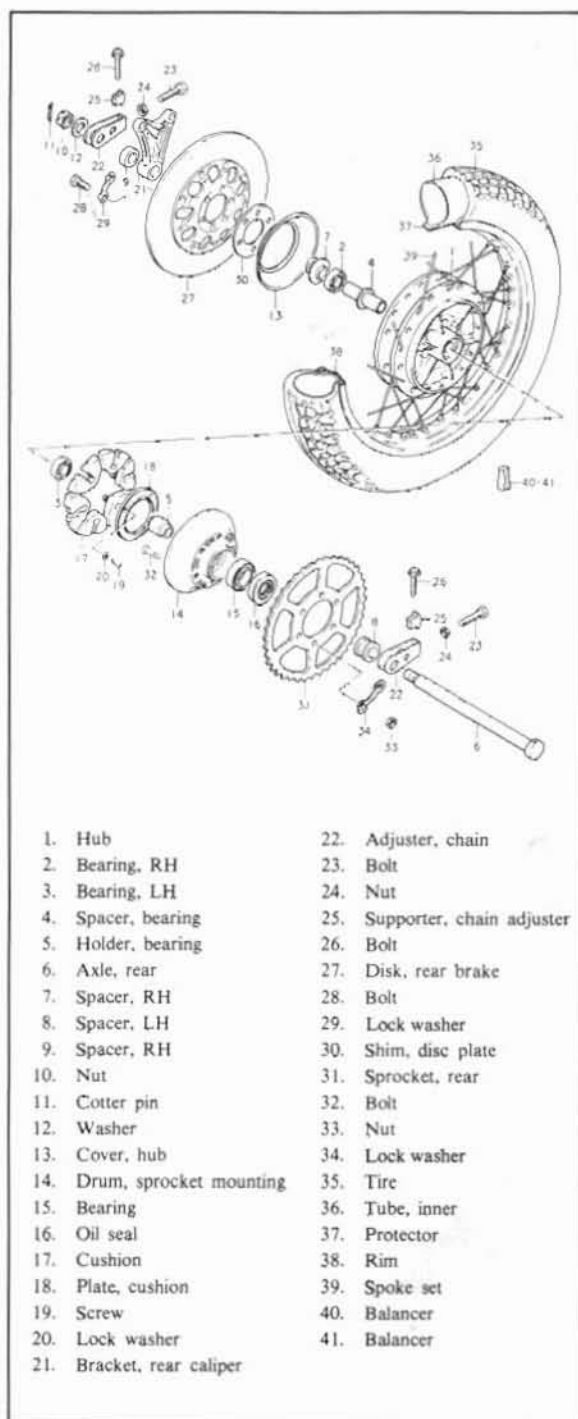


Fig. 10-122.

REMOVAL

- Remove the two bolts securing the chain case, and take off the case.

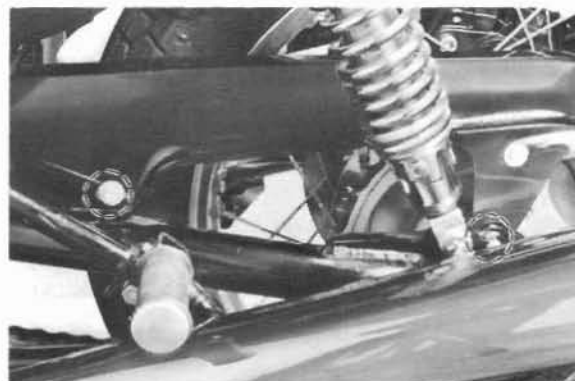


Fig. 10-123.

- Pull the split pin ① off the axle nut, loosen the nut ②, and remove the two chain adjuster support bolts ③, right and left.



Fig. 10-124.

- Remove the two bolts ① securing the caliper, and also the torque link rear nut ② and split pin ③.



Fig. 10-125.

- Separate the caliper assembly from the disc and take it off the machine.

NOTE:

- This removal will be greatly facilitated if the caliper assembly is suspended with a sling, as shown, at the time of loosening its securing bolts for removal.
- Be careful not to bend the brake hose when taking the caliper assembly out.

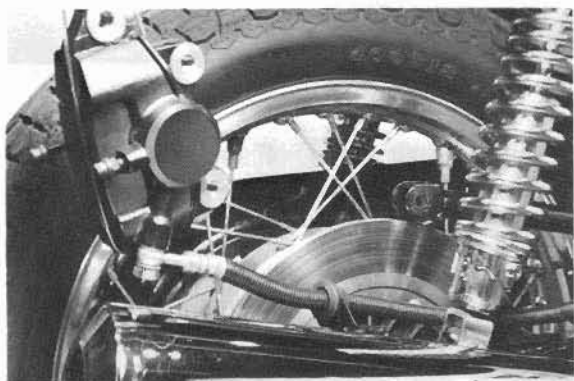


Fig. 10-126.

- Loosen the two chain adjuster bolts, right and left. Turn down both adjusters ①; push the wheel forward; and disengage the drive chain from the sprocket, displacing the chain toward the outer side.



Fig. 10-127.

- Tilt the wheel and withdraw it from the frame.
- Remove the axle nut, and draw the axle off the wheel.

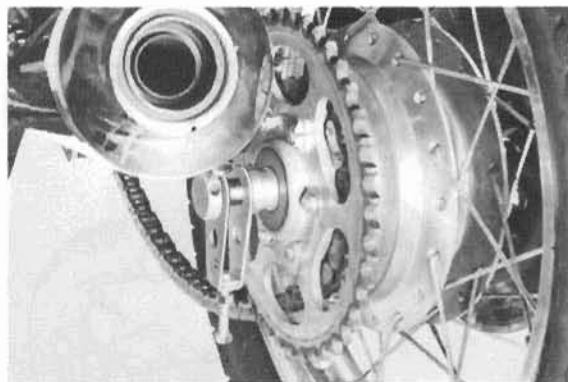


Fig. 10-128.

- The brake disk is secured to the wheel hub by 6 bolts, each being locked with a washer. Bend up the lock washer, remove the bolts and separate the disc from wheel.



Fig. 10-129.

- Remove the sprocket. This is accomplished by unlocking its 6 securing nuts, and removing the bolts and nuts to free the sprocket.

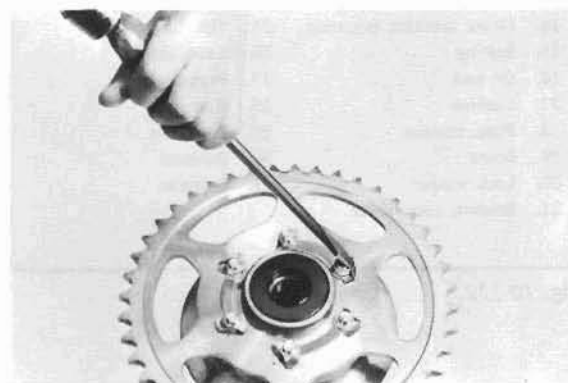


Fig. 10-130.

- Using the special tool ① (09914-79610: Bearing oil seal installer), remove oil seals and bearings from the sprocket drum.

NOTE:

Do not re-use the removed oil seal: replace oil seal with new one in reassembly.



Fig. 10-131.

ASSEMBLY

- Assemble parts in the reverse order of removal.
- Reassemble and remount the rear wheel in the reverse order of removal and disassembly, and by carrying out the following additional steps:
- Before fitting the oil seals to the sprocket drum, be sure to oil the seals.
- Deposit the chain on the inner side of the sprocket before inserting the axle shaft.

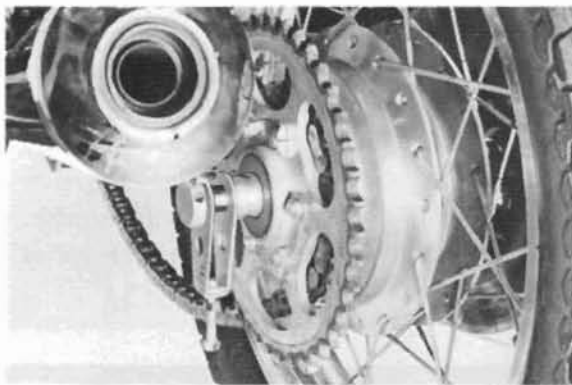


Fig. 10-132.

- After positioning the wheel in place, with the axle inserted, make tighten the axle nut finger-tight. Make sure that each chain adjuster is in place with its graduated scale coming on the outer side: correctly distinguish the right-hand adjuster from the left-hand adjuster.

- After resting the wheel on the swing arm, engage the drive chain with the sprocket, and then insert the chain adjuster supports.
- After setting the chain adjusters in place, fit the torque link rear bolts and nuts and leave them snug-tight.



Fig. 10-133.

- Install the caliper assembly, making its securing bolts snug-tight, and then firmly tighten the chain adjuster support bolts. Now the drive chain is ready to be tautened to provide the specified amount of sag.

Drive chain sag: 20 mm (0.8 in.)

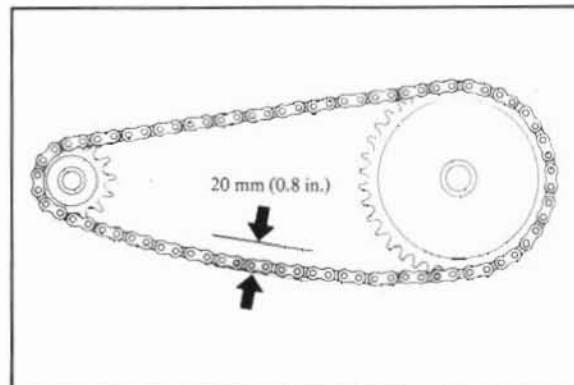


Fig. 10-134.

NOTE:

If the indicator mark ① on chain adjuster aligns with the end of swing arm ②, replace the drive chain with a new one.

CAUTION:

Never allow the chain slack to exceed 50 mm (2 in.).

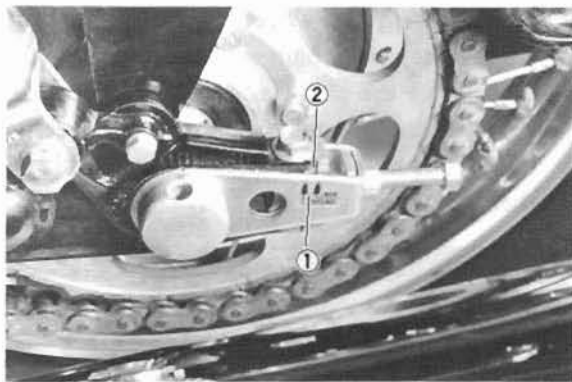


Fig. 10-135.

CAUTION:

The standard drive chain is **TAKASAGO RK630 GSO**. **SUZUKI** recommends that the above-mentioned standard drive chain be used for the replacement.

- Further, since the drive chain of GS1000 is different from the one of GS750 in accuracy, material, etc., while similar in pitch and number of links, do not use the drive chain of GS750 for GS1000.
- After firmly tightening the axle nut and locking it by inserting the split pin, spin the rear wheel by hand and apply the brake lightly to "feel" the drag of the brake pads. Adjust the caliper assembly so that its pads exert a minimum of drag, if any, on the disk. With the caliper adjusted to that position, firmly tighten its securing bolts to the specified torque value indicated above.
- Firmly tighten the torque link rear nuts to the specified torque, and lock each nut by inserting a split pin.

Tightening torque

Rear axle shaft nut	8.5 ~ 11.5 kg-m (61.5 ~ 83.0 lb-ft)
Rear brake caliper mounting bolt	2.0 ~ 3.0 kg-m (14.5 ~ 21.5 lb-ft)
Torque link nut	2.0 ~ 3.0 kg-m (14.5 ~ 21.5 lb-ft)
Chain adjuster support bolt	1.0 ~ 1.5 kg-m (7.5 ~ 11.0 lb-ft)



Fig. 10-136.

INSPECTION**CHAIN CLEANING AND OILING**

At intervals of 600 miles (1,000 km) clean and oil the chain, as follows:

- **Cleaning by washing**

Wash the chain with kerosene. If the chain tends to rust faster, the interval must be shortened.

- **Oiling**

After washing and drying the chain, oil it with heavy motor oil.

CAUTION:

Do not use any oil sold commercially as "drive chain oil". Such oil can damage the "O" rings.

CAUTION:

Do not use trichlene, gasoline or any similar fluids: these fluids have a dissolving power too high for this chain and, moreover, they can damage the "O" rings sealing the grease in the bush-to-pin clearance. Remember, high durability comes from the presence of grease in that clearance.



Fig. 10-137.

- There is practically no difference between front wheel and rear wheel as far as the items of inspection and checking are concerned. As to the methods and inspection criteria, refer to "INSPECTION, FRONT WHEEL". Items are as follows:
 - Brake disc thickness
 - Spoke tightness, distortion and damage
 - Wheel tire tread depth
 - Wheel rim runouts, radial and axial.
 - Wheel bearing wear
 - Axle shaft deflection
 - Tire inflation pressure
 - Wheel dynamic balance
 - Wheel hub wear
 - Inspect the wheel hub cushion for cracks or any other damage.
 - Inspect the sprocket drum oil seal for distortion, wear and damage.

Checking the sprockets for wear

- Sprockets that have become excessively worn cause chain noise and greatly accelerate chain and sprocket wear. The sprockets should be checked for wear when the chain is removed. Visually inspect the sprocket teeth. If they are worn as illustrated, replace the sprocket.

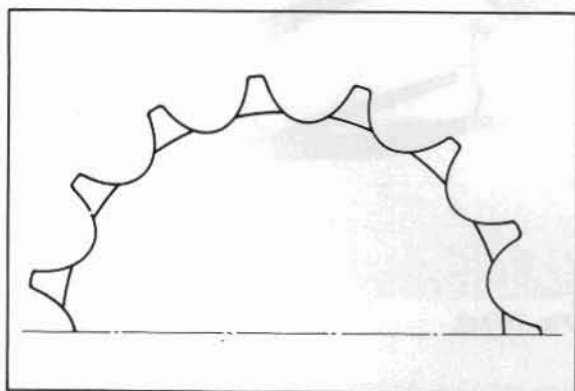


Fig. 10-138. Proper wear condition

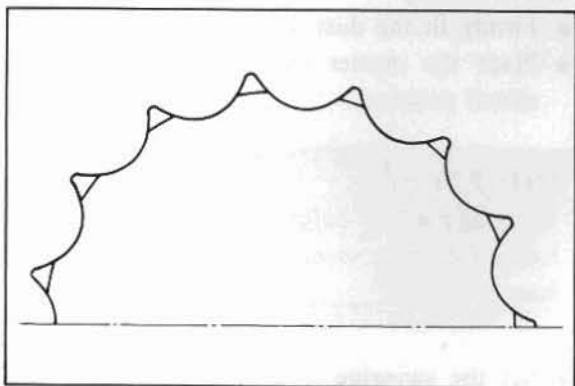


Fig. 10-139. Excessive wear condition

Adjustment of wheel alignment

- Set the alignment gauges (09827-00001) to the rims of the front and rear wheels to check them in the manner shown in the drawing. The difference of alignment between the front and rear wheels shall be within 3 mm (0.01 in.).

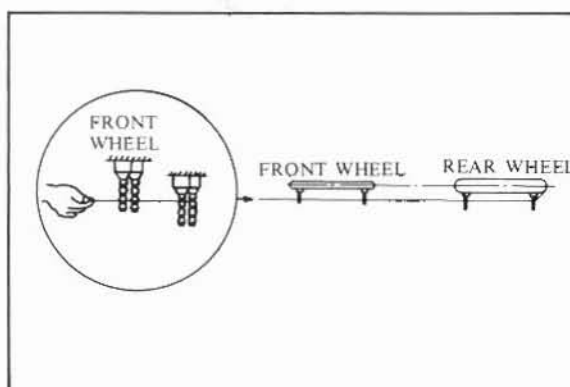


Fig. 10-140.

Removal of drive chain

- Remove the drive chain. See page 10-42 with respect to the procedure for removing the swinging arm.
- Remove the gearshift lever (see page 7-3).
- Remove the screw to remove the sprocket cover (see page 7-3).
- Remove the nut to remove the engine sprocket (see page 7-4).

MOUNTING

- Mount parts in the reverse order of removal.
- Adjust the play of drive chain (see page 10-39).

SWINGING ARM

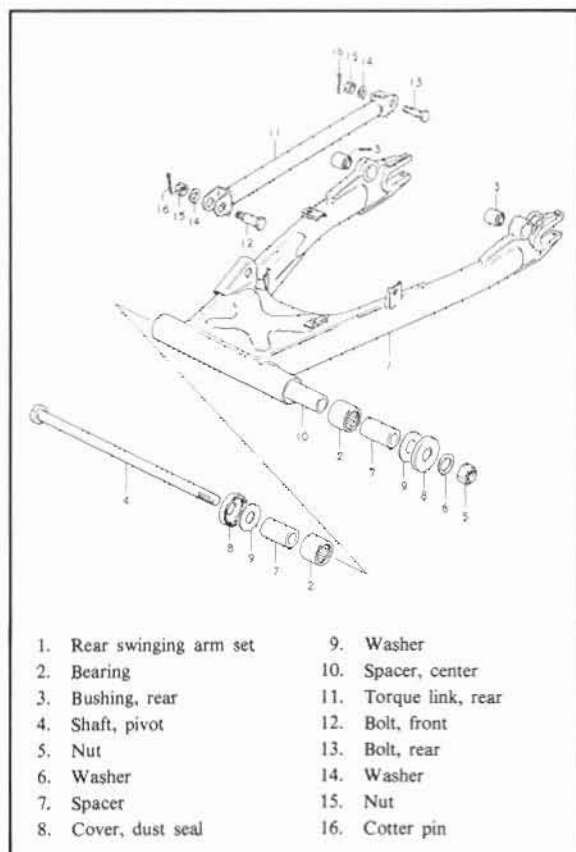


Fig. 10-141.

REMOVAL

- Remove the rear brake caliper (see page 10-30).
- Remove the drive chain case (see page 10-37).
- Remove the rear wheel (see page 10-37).
- Remove the rear brake pedal and front foot rest (see page 10-34).
- Remove the frame left cover and then the rear master cylinder (see page 10-34).
- Loosen the fastening bolts on the lower portion of the rear shock absorber.
- Remove the upper left and right nuts fastening the rear shock absorber to remove the nuts from the motorcycle frame.
- Lift the swinging arm to remove bolts on the lower portion of the absorber to remove it from the motorcycle frame.
- Remove the pivot shaft nut to extract the pivot shaft from the motorcycle frame to the right side.



Fig. 10-142.

- From the removed swinging arm, disconnect the torque links, free the brake oil line secured to the arm, and take off the caliper and master cylinder together with the brake oil line.

NOTE:

The swinging arm at this time is complete with the master cylinder and brake caliper. Be careful not to bend or twist the brake hose.

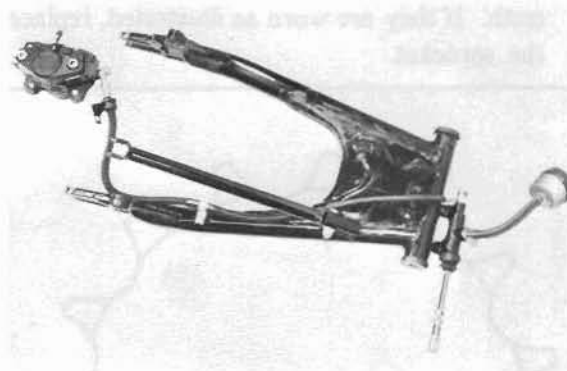


Fig. 10-143.

MOUNTING

- Firmly fit the dust seal on the bearing side.
- Place the master cylinder at the predetermined position.

CAUTION:

Suspend the rear caliper from the motorcycle frame by string so as not to bend the brake hose.

- Set the swinging arm to the predetermined position and insert the pivot shaft into the

frame and the swinging arm from the right side.

NOTE:

Since there is a difference in level between the side spacer and the center spacer within the swinging arm, insert the pivot shaft while guiding with screw driver, etc. and tapping it lightly.



Fig. 10-144.

- Mount nut on the pivot shaft.

Tightening torque:
5.0~8.0 kg-m (36.0~58.0 lb-ft)

- Lift the swinging arm to set the lower portion of the rear shock absorber to the swinging arm and temporarily tighten bolt.

Tightening torque after temporary securing:
2.0~3.0 kg-m (14.5~21.5 lb-ft)

- Fit the rear shock absorber into the boss mounting the rear shock absorber on the frame side, put washers (1 pc of 3.2 mm and 2 pcs. of 2.3 mm from the nut side) and fasten the absorber with nut.

Tightening torque:
2.0~3.0 kg-m (14.5~21.5 lb-ft)

- Tighten two bolts securing the master cylinder (see page 10-35).
- Mount the rear brake pedal and adjust the brake (see page 10-31).

- Mount the rear wheel (see page 10-39).
- Mount the chain case (see page 10-37).
- Mount the rear brake caliper (see page 10-30).
- Mount the frame cover on the frame and fasten it with one screw.
- Adjust the play of the drive chain (see page 10-39).

DISASSEMBLY OF SWINGING ARM BEARING

- Remove the dust seal at both sides of the swinging arm.
- Pull out by fingers the side spacers at both sides.
- Remove bearings at both sides by the use of special tool ① (09941-44910: Swinging arm bearing puller).

USE OF SPECIAL TOOL

- Turn the center screw ② of the tool clockwise to adjust the claw portion to the length of the bearing.
- Hold the end ③ of the tool on the swinging arm to set the handle ④ to the chuck.
- While turning the handle counterclockwise, open the claw portion. Then fix the center screw ② by a wrench to prevent it from turning idly. (see Fig. 10-146).

CAUTION:

Take care not to set the claw portion on the bearing and gauge. Apply the claw portion to the outside (bearing cage) of bearing.

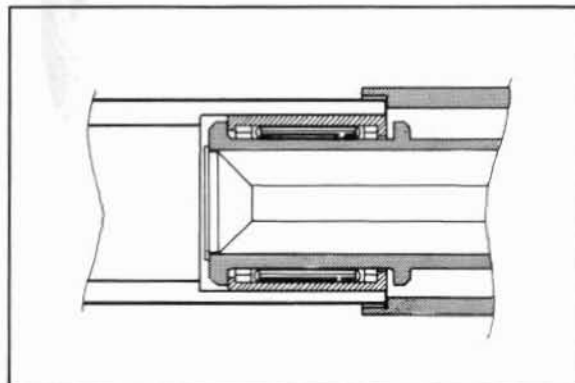


Fig. 10-145.

- After confirming it is firmly secured to the outside of the bearing, pull out the bearing while rotating the handle of the main body clockwise.



Fig. 10-146.

MOUNTING

- Wipe off fouling on the press fitted bearing portion with a rag, etc.

CAUTION:

Do not reuse the removed bearing. Replace it by a new one.

- Apply motor oil to the outer periphery of the new bearing and the press fitted bearing portion at the swing arm side.
- Apply a proper amount of water-resistant chassis grease to the interior of the bearing.
- Press in the bearing with the engraved mark directed outside.

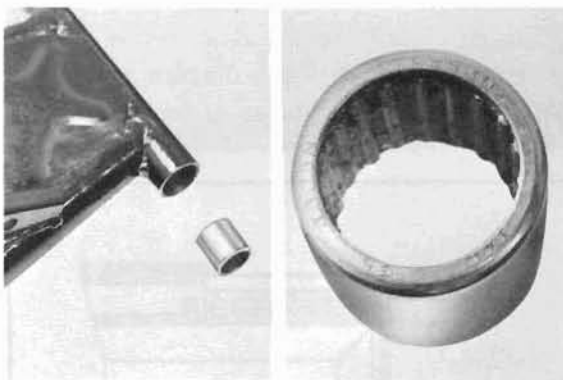


Fig. 10-147.

- Press in the bearings each at one side using the special tool ① (09941-34511: Steering inner race and swing arm bearing installer).

USE OF SPECIAL TOOL

- As shown in the drawing, use two tapered guides. Then set the guides with the tapered portion at the outside with reference to the swinging arm.

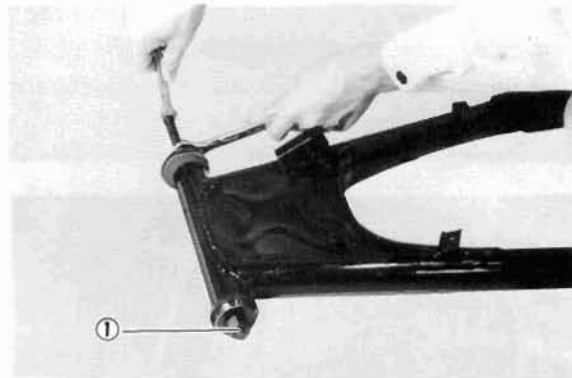


Fig. 10-148.

- Press in the bearing by turning the nut clockwise with a wrench until it locks. When it locks, tighten the nut once more to confirm it is locked.
- Insert the center spacer and similarly press in the bearing at the other side.
- After pressing in the bearings, insert the side placer.

NOTE:

Thoroughly wipe off any dirt on the side spacer and apply a proper amount of water-resistant chassis grease to the inside of the spacer.

- Fit the dust seal cover into the swinging arm.

CAUTION:

- Confirm the absence of cracks or breakages on the lip of the dust seal. If any cracks or breakages are found, replace the dust seal by a new one.
- Apply a suitable amount of water-resistant chassis grease to the lip portion.
- When fitting the dust seal cover, caseless hammering may result in breakage of the lip.

REAR SHOCK ABSORBER

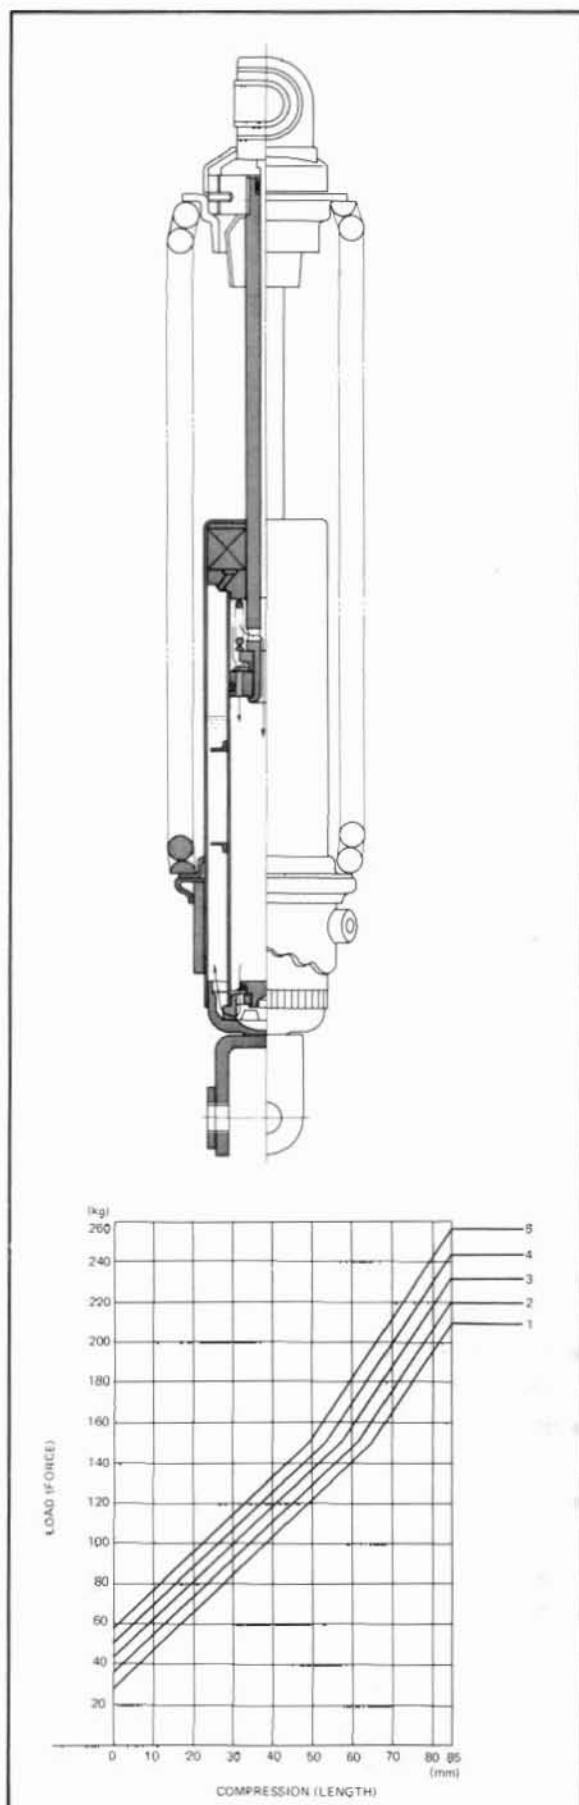


Fig. 10-149.

REAR SHOCK ABSORBERS

- The spring and damper settings of the rear shock absorbers can be varied. Spring preload can be changed in five steps, and damper force in four steps. The two settings provide the user with a choice of rear suspension "softness" to suit running speed and road conditions.

SPRING ADJUSTMENT

- At the bottom of each absorber, turn the spring seat, as shown in the photo, to bring another notch to the supporting lug. This alters the spring tension. The spring seats of both absorbers are factory-set at Notch 1 which is the softest spring setting.

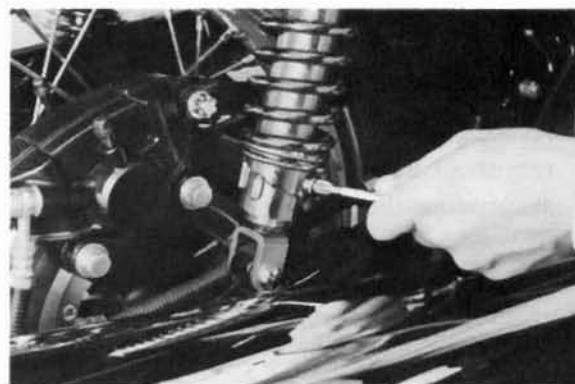


Fig. 10-150.

DAMPER ADJUSTMENT

- Roll up the rubber cap ① at the top end of each absorber to reveal damper force adjuster ②. To increase or decrease the damper force, turn this adjuster as shown in the photo. Numbers, 1 to 4, are engraved on the adjuster. As the adjuster is turned, it is arrested with a "click" at each numbered position.

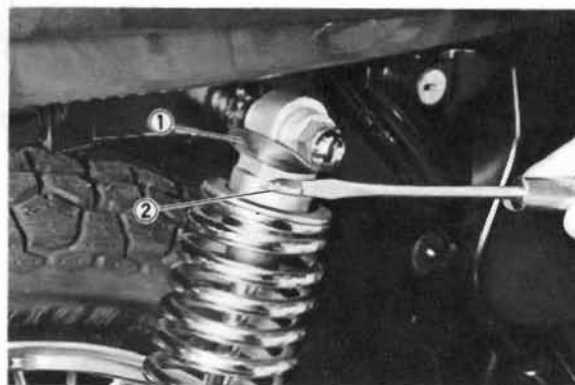


Fig. 10-151.

Be sure to leave the adjuster in a click position. Position 1 is for the smallest damper force, and position 4 for the largest. Position 1 is the factory setting.

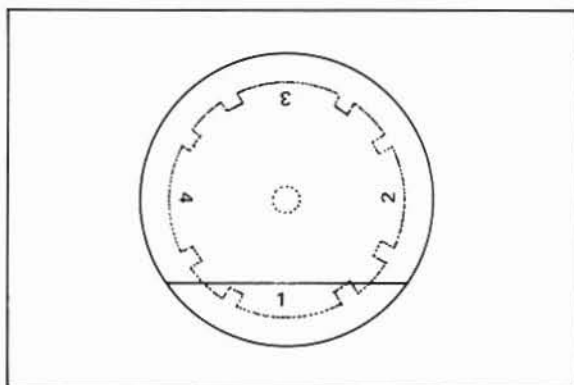


Fig. 10-152.

COMBINATION OF SPRING SETTING AND DAMPER SETTING

- At the factory, both spring and damper in the rear shock absorbers are set for the "softest" suspension, that is, spring in Notch I and damper in Position 1. This combination is calculated to provide the best cushioning effect for the average-build rider of 68 kg (150 lbs) for solo riding at about 60 miles/h (95 km/h) on the highway, without any accessories attached to the motorcycle.
- Rear shock absorber must be made "harder" if two persons on the motorcycle, if accessories are fitted to the motorcycle, or if the machine is to be driven over rough terrain. For stable cushioning, both spring and damper must be set similarly. The following is a list of recommended combinations:

Spring setting	Damper setting
I	1 or 2
II	2 or 3
III	3 or 4
IV	3 or 4
V	4

WARNING:

- Any other combination than the above is dangerous. For safe riding, only use the recommended settings.
- Be sure to adjust the springs and dampers of the two absorbers equally. Making one absorber harder than the other disturbs the running stability of the machine.
- Match front suspension to rear suspension for balanced cushioning and for stable and safe riding. Readjusting the rear shock absorbers alone or the front fork alone is dangerous. Set the two suspensions similarly according to the list below:

SUSPENSION MATCH BETWEEN FRONT AND REAR

Spring setting	Damper	Front fork air pressure
I	1	0.8 kg/cm ² (11 psi)
I	2	0.8~0.9 kg/cm ² (11~13 psi)
II	2	0.8~0.9 kg/cm ² (11~13 psi)
II	3	0.8~0.9 kg/cm ² (11~13 psi)
III	3	1.0~1.1 kg/cm ² (14~16 psi)
III	4	1.0~1.1 kg/cm ² (14~16 psi)
IV	3	1.0~1.1 kg/cm ² (14~16 psi)
IV	4	1.0~1.1 kg/cm ² (14~16 psi)
V	4	1.2 kg/cm ² (17 psi)

REMOVAL OF REAR SHOCK ABSORBER

- Remove the left and right nuts securing the rear shock absorber.
- Loosen bolts on the lower portion of the rear shock absorber.
- Remove the upper portion of the rear shock absorber from the boss portion.
- Lift the wheel with a jack so that the bolts on the lower part of the rear shock absorber do not interfere with the muffler.
- Remove the bolts to remove the absorber from the motorcycle frame.

ASSEMBLY

- Carry out assembly in the reverse order to removal.
- Tighten the bolts and nuts to the specified torque (see page 3-18).

Rear shockabsorber tightening torque	2.0 ~ 3.0 kg-m (14.5 ~ 21.5 lb-ft)
---	---------------------------------------

INSPECTION

- Inspect the hydraulic damper for evidence of oil leakage.
- Check the piston rod for distortion. Visually inspect the other internals for damage — cracks, dents, galling, etc.

IMPORTANT:

There must be a good balance in shock absorbing performance between the right and left units. If one unit is so poor in performance as to require replacement, then they should both be replaced at the same time. Always treat the two as an inseparable pair.

ELECTRICAL SYSTEM

CONTENTS

IGNITION SYSTEM.....	11-2
SPARK PLUG.....	11-3
CHARGING SYSTEM.....	11-5
METHOD OF TESTING RECTIFIER, REGULATOR AND ALTERNATOR	11-5
INSPECTION OF CHARGING SYSTEM COMPONENTS	11-6
STARTER SYSTEM.....	11-7
BATTERY.....	11-9
TROUBLESHOOTING.....	11-13
WIRING DIAGRAM.....	11-22

ELECTRICAL SYSTEM

IGNITION SYSTEM

There are two ignition coils, two contact breakers and two condensers to produce sparking energy for the four spark plugs. No. 1 breaker is for Nos. 1 and 4 spark plugs; and No. 2 breaker is for Nos. 2 and 3 spark plugs. Each ignition coil is connected to the plugs as shown.

When No. 1 piston is up on its compression stroke, No. 4 piston is up on its exhaust stroke. The sparking action occurring at the same time in Nos. 1 and 4 cylinders present no problem, and the same applies to Nos. 2 and 3 cylinders. Ignition order is 1-2-4-3, as counted from left to right by the rider mounted the machine. It should be noted that Nos. 1 and 2 breakers operate 180 degrees apart in terms of crank angle.

Schematic diagram of ignition system

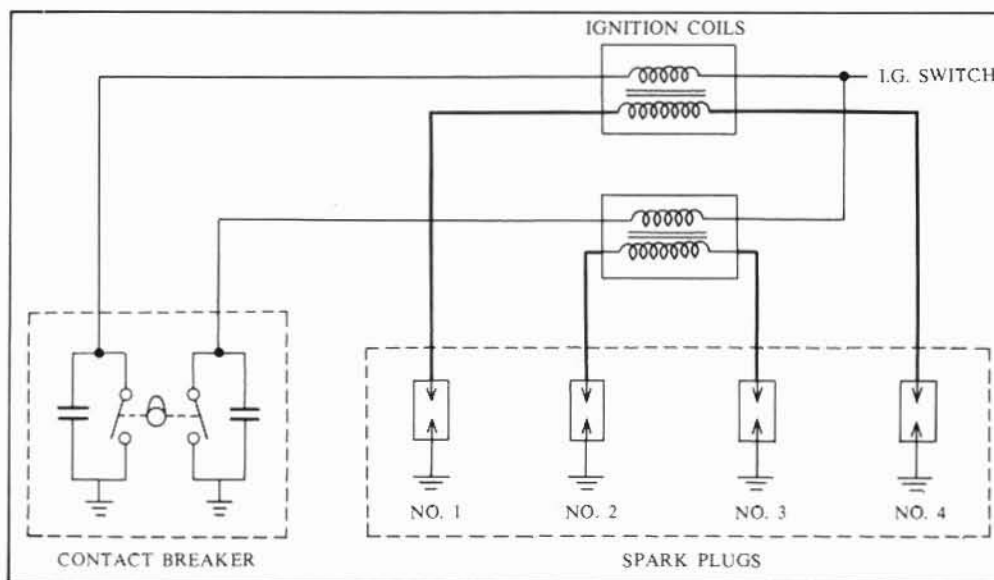


Fig. 11-1.

Ignition system data

Spark Plugs:	
Type	NGK B-8ES or DENSO W24ES
Gap	0.6 ~ 0.8 mm (0.023 ~ 0.031 in.)
Three-Needle Sparking Distance of Ignition Coil	7 mm (0.28 in.) minimum
Contact Point Gap	0.35 mm (0.01 in.)
DENSO	0.18 μ F
Spark Advancer:	
Advance angle	20°
Beginning of advance	1,500 rpm
End of advance	2,500 rpm
Ignition Coil Resistance:	
Primary	2 ~ 6 Ω
Secondary	11 ~ 17k Ω

Ignition coils

Using the electro tester, test each ignition coil for sparking performance. Test connection is as indicated. Make sure that the three-needle sparking distance is at least of 7 mm (0.28 in.).

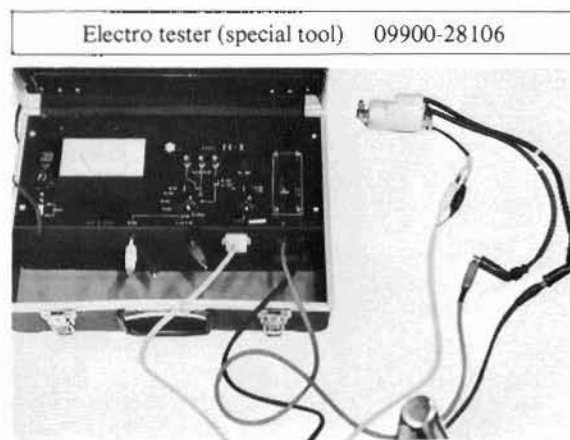


Fig. 11-2.

Contact breakers

Check and adjust the contact points as outlined on page 3-10. Inspect the contact points for wear and burning. If the surface of the points are dirty, wipe them clean with clean, dry cloth.

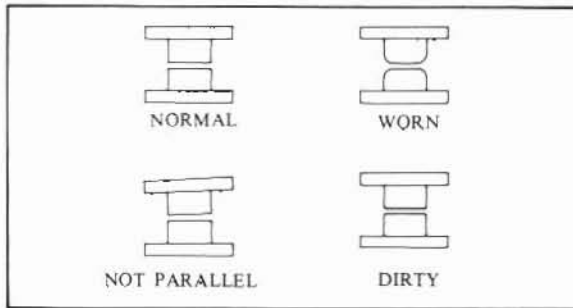


Fig. 11-3.

Condensers

Use the electro-tester to check each condenser for capacitance. When checking, be sure to lift the condenser off the breaker base plate by removing the screws securing it to the base.

Condenser capacitance
0.18 μ F

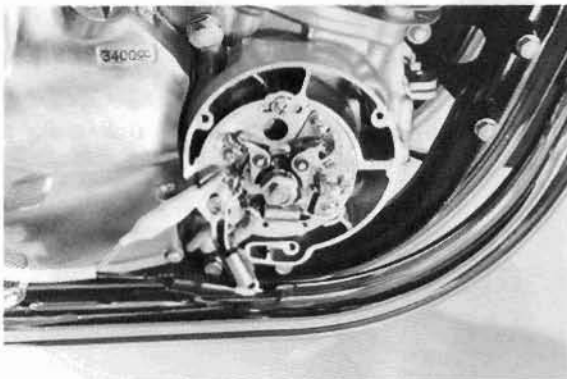


Fig. 11-4.

Checking advancing action

Upon starting up the engine, check engine speeds at which the ignition begins to advance or retard. Use the electro tester (special tool: 09900-28106).



Fig. 11-5.

SPARK PLUG

Spark plugs ignite fuel/air mixture in the cylinder. For effective ignition at the required time, the correct plugs should always be used and they should be properly adjusted and cleaned.

NGK	NIPPON DENSO	Remarks
B7ES	W22ES	If the standard plug is apt to get wet, replace with this plug. Hot type.
B8ES	W24ES	Standard
B9ES	W27ES	If the standard plug is apt to overheat, replace with this plug. Cold type.

NGK B8ES or NIPPON DENSO W24ES listed in the above table should be used as the standard plug. However the heat range of the plug should be selected to meet the requirements of speed, actual load, fuel, etc. If the plug needs to be replaced, it is recommended that one having a heat range closest to the standard plug in the above table be selected.

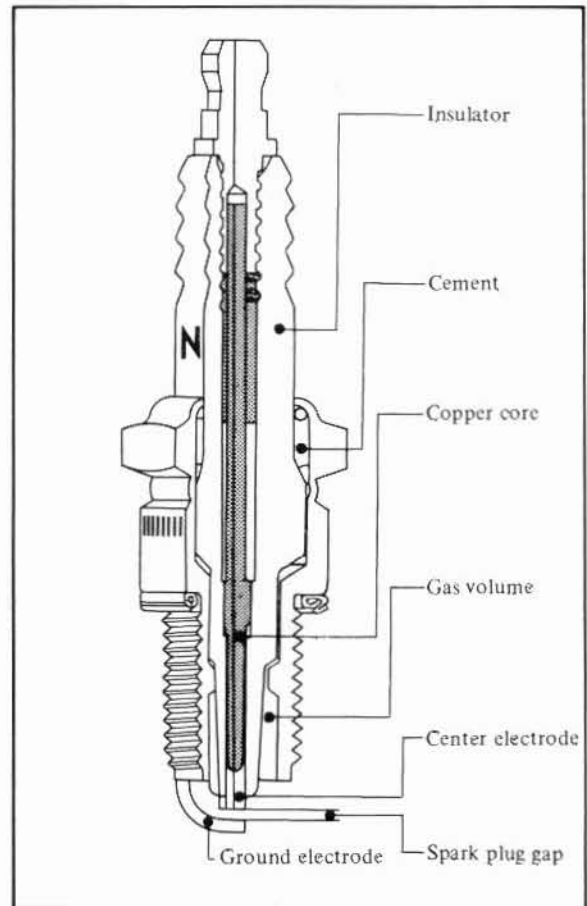


Fig. 11-6.

Remove the plug and inspect the insulator. If the insulator is a light brown color, it is acceptable. If it is blackened by carbon, it should be replaced by a hot type NGK B7ES or NIPPON DENSO W22ES and if baked white, by NGK B9ES or NIPPON DENSO W27ES.

Plugs with high heat range number are used for high speed running. These plugs are designed to be sufficiently cooled to prevent overheating and are called cold type plugs. If a plug with too high a heat value is used, the plug will be overcooled with the result that insufficiently burnt carbon will be deposited on the insulator and electrode.

A large amount of deposited carbon will prevent good sparking. Carbon deposits tend to get red-hot themselves, resulting in pre-ignition or knocking. When the temperature of the engine is relatively low, for example, when the motorcycle is always run in a town or subjected to breaking-in without running at high speed, plugs with low heat range are used. These plugs are designed to prevent heat dissipation and are called hot type plugs. If these plugs are used for high speed running, they may be overheated, resulting in overheating and pre-ignition of the engine.

The plug gap is adjusted to 0.6 ~ 0.8 mm (0.024 ~ 0.031 in.). The gap is correctly adjusted using a thickness gauge (special tool; 09900-20803). When carbon is deposited on the spark plug, remove the carbon with a spark plug cleaning machine or any tool with a pointed end. If electrodes are extremely worn or burnt, replace the plug. Also replace the plug if it has a broken insulator, damaged thread, etc.

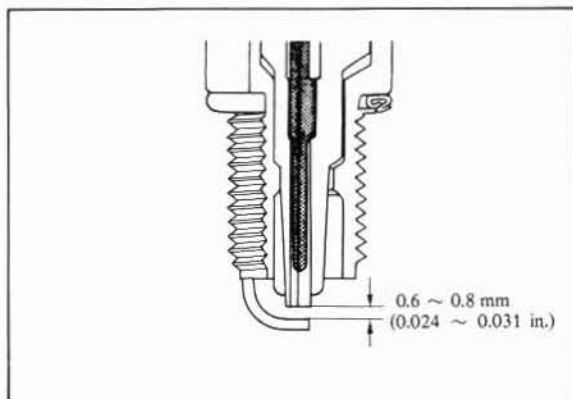


Fig. 11-7.

CAUTION:

Confirm the thread size and reach when replacing the plug. If the reach is too short, carbon will be deposited on the screw portion of the plug hole and engine will be damaged.

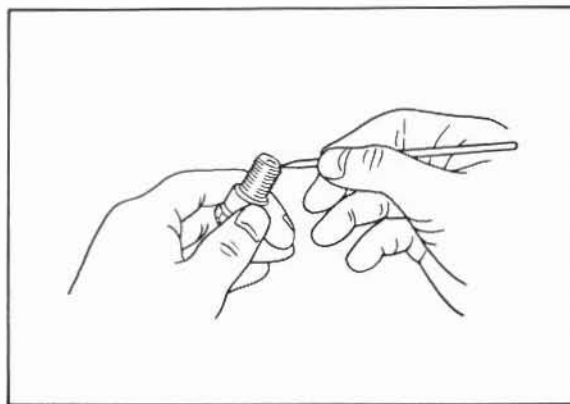


Fig. 11-8.

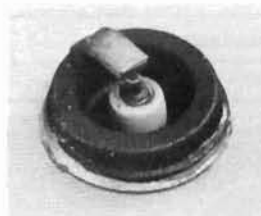


Fig. 11-9. Normal carbon condition



Fig. 11-10. Overheating condition



Fig. 11-11. Wet fouling of plug



Fig. 11-12. Carbon stained plug

CHARGING SYSTEM

DESCRIPTION

When the engine is started, the AC generator runs and produces an output current. This current is full-wave rectified by a rectifier, from which the current runs to the battery and the load. If the output power generated by the AC generator rises above the battery and load currents, the battery terminal voltage is raised so that, at or over the specific voltage applied via the rectifier diode, the zener diode DZ is switched on in response to the voltage presented by dividing resistor Ra and Rb. Thus a gate signal is supplied to the thyristor SCR to short the AC terminal of the AC generator. In case of low speed or large load, neither SCR1 nor SCR2 starts operating; and in case of high speed or small load, both SCR1 and SCR2 operate to cover a wider control range.

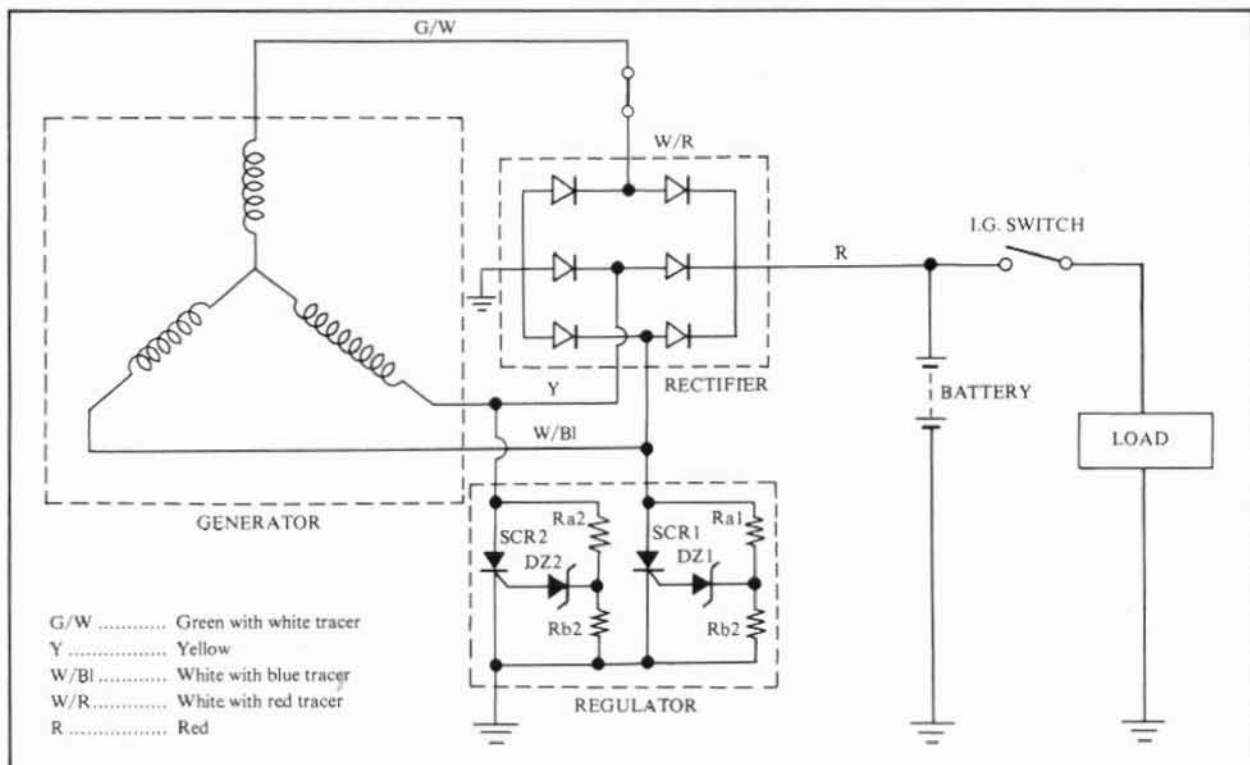


Fig. 11-13.

METHOD OF TESTING RECTIFIER, REGULATOR AND ALTERNATOR

- Before testing them, check the battery voltage. If it is less than 12.5V, recharge the battery. If the battery is discharged or broken, it is not possible to check the rectifier, regulator and alternator to determine whether or not they are normal.
- Set all switches in the OFF position, and remove the head lamp fuse from the fuse box.
- Connect the (+) lead of the tester to the (+) terminal of the battery, and the (—) lead of

the tester to the (—) terminal of the battery. Run the engine at 5,000 rpm, and read the tester. If the tester reads 14 to 15.5V, they are normal.

- ★ If the tester reads more than 15.5V, the regulator is faulty. The regulator is a non-disassembly type so it must be replaced if faulty.
- ★ If the tester reads less than 14V, the rectifier or the regulator or the alternator is faulty.

INSPECTION OF CHARGING SYSTEM COMPONENTS

Rectifier

A total of 6 semi-conductor elements are connected as shown, for full-wave rectification. They are encapsulated into a mold and contained in a compact case. Each element is conductive in the forward direction and non-conductive in the reverse direction. Check each element for this property of directionality with a tester, as follows:

1. Undo all the terminal connections on the rectifier, disconnecting the lead wires coming from the alternator (YELLOW, WHITE/RED and WHITE/BLUE), from the battery (RED) and from ground (BLACK/WHITE).
2. Put the minus (−) probe pin of the tester on to ground terminal (BLACK/WHITE), and the positive (+) pin on to YELLOW, WHITE/RED and WHITE/BLUE, sequentially in that order. The tester should indicate continuity for each. Repeat this process with minus (−) pin and plus (+) pin swapped: the tester should not indicate continuity.

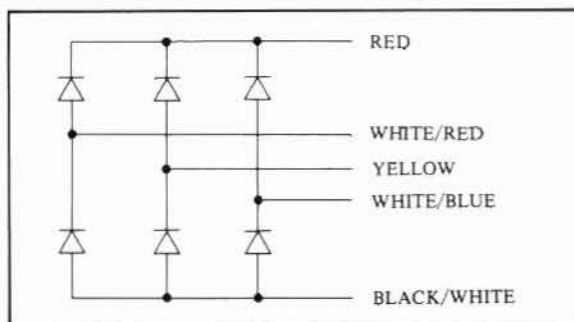


Fig. 11-14.

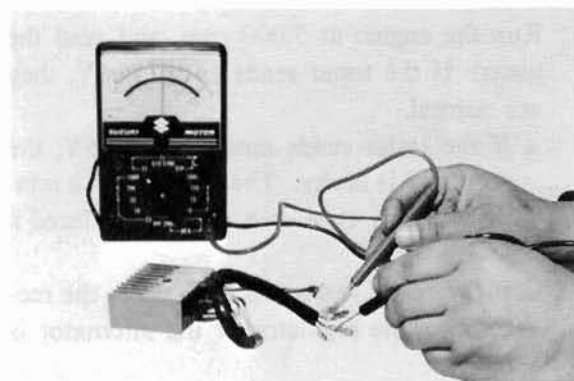


Fig. 11-15.

3. You have just checked the three rectifier elements. Check the other three in the same way by putting one of the probe pins on to the output terminal (RED). If any one of the elements is found to be non-conductive in the forward direction or conductive in the reverse direction, replace the rectifier unit.

CAUTION:

- 1) Be sure to disconnect the output lead wire in order to cut off the rectifier from the battery side. Checking the rectifier with this lead wire connected may cause the element to get burned due to possible grounding.
- 2) Never use a megger-type instrument to check for continuity: Be sure to use circuit tester. A megger could rupture the rectifier element.
- 3) Never increase engine speed when the output lead wire (RED) has been disconnected or the rectifier elements will be burnt and damaged.

It should be borne in mind that, when the circuit tester is used for checking ohmic resistance or continuity, its internally contained battery becomes connected to the probe pins: plus (+) polarity appears on negative (−) pin and minus (−) polarity on positive (+) pin.

Alternator

Disconnect the yellow and white blue leads from the regulator.

1. Disconnect the white blue lead from the alternator. Connect the (+) terminal of the tester to the red, and its (−) terminal to the (−) terminal of the battery. The coils ① and ③ are good if the tester reads 16.5V or more at 5,000 rpm.

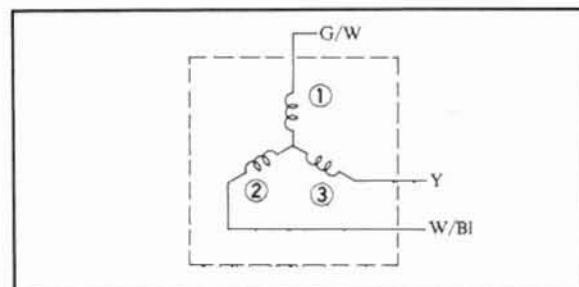


Fig. 11-16.

2. Connect the the W/BI lead, and disconnect the yellow lead from the alternator. The coils ① and ② are good if the tester reads 16.5V or more at 5,000 rpm.
If the coils mentioned in items 1 and are in good condition, the alternator and rectifier are in good order. If the tester reads otherwise, replace the alternator.

CAUTION:

If all the 3 phases are checked at the same time after disconnecting the regulator lead, the voltage rises to more than about 18V, and possibly damage the battery. Be sure to follow the instructions given above for testing.

Regulator

Check the regulator for performance, as follows. Restore the three phase circuit to the normal hook-up, placing the switch and regulator back in service. Run the engine and check the voltage again. If the tester reads less than 14V or higher than 15.5V at 5,000 rpm, the cause is faulty regulator. The regulator is not a disassembly type so it must be replaced if faulty.

STARTER SYSTEM

The starter system is shown in the diagram below: namely, the starter motor, relay, starter switch and battery. Depressing the starter button (on the right handle) energizes the relay to close its contact points, thereby connecting the starter motor to the battery. The motor draws about 80 amperes to start the engine.

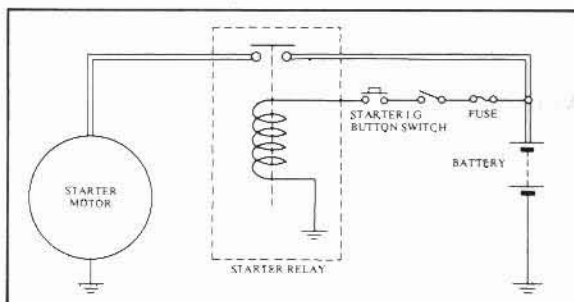
Starter system diagram

Fig. 11-17.

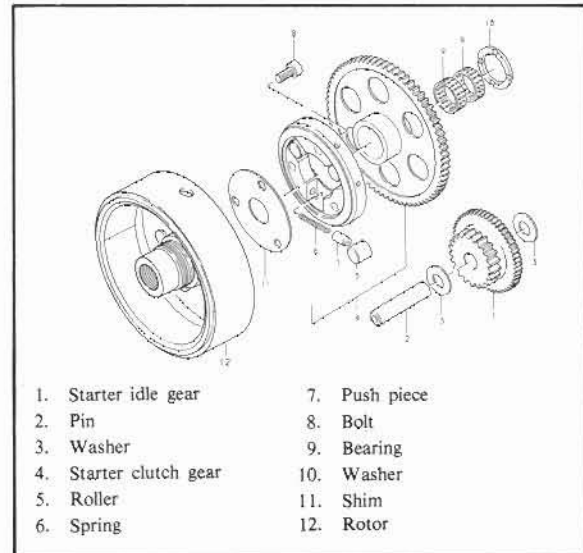
Starter clutch and generator rotor

Fig. 11-18.

- See page 7-29 with respect to the removal procedures for the rotor and starter clutch.

INSPECTION

Inspect the components to be sure that wiring connections are all tight and that the circuit wires are in good condition. Make sure, too, that each component is securely grounded.

When the system is in good condition, the starter relay will make a single clattering sound as the starter button is depressed and immediately the motor will crank the engine. When this clattering noise is not heard or when the starter motor fails to turn the engine over possibly means that either the relay is not being properly energized due to a run-down battery, or the relay coil is open.

If the relay "clatters" but the motor will not crank, then it is likely that the relay contact points are defective or the motor is internally open-circuited.

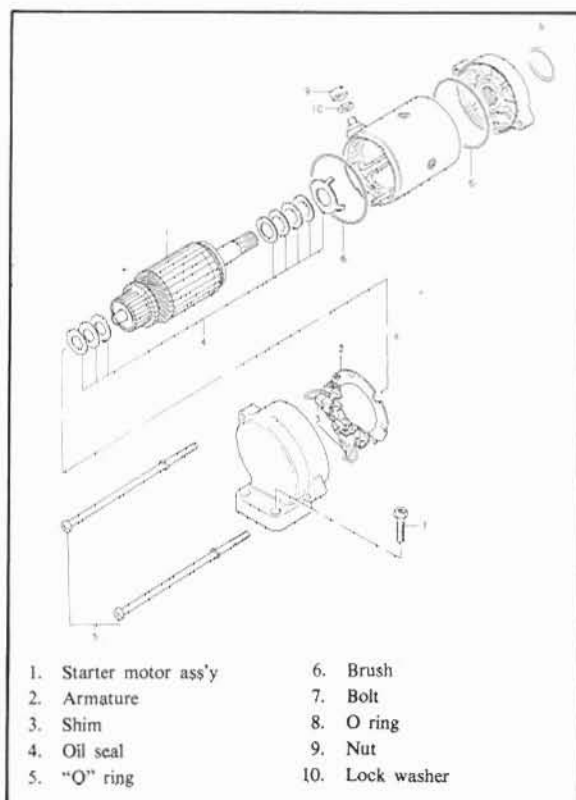


Fig. 11-19.

Starter motor specifications

The motor is mounted on top of the crankcase behind the cylinder block, and drives the engine's crankshaft by a series of gears and a one-way clutch which is mounted on the alternator rotor. The motor either DENSO or MITSUBA is made, and is made to the following electrical specifications:

Item	No-load data	Locked-rotor data
Voltage	11 volts	5.5 volts
Current	50 amperes under	280 amperes under
Torque	—	0.35 kg-m over
Speed	4,500 rpm over	—

INSPECTION OF COMPONENTS

Carbon brushes

When the brushes are worn, the motor will be unable to produce sufficient current, and the engine will be difficult to crank over. In order to prevent this, periodically, inspect the length of the brushes, replacing those which are too short.

Brush length specification	
Standard	Service limit
12 ~ 13 mm (0.47 ~ 0.51 in.)	6 mm (0.24 in.)

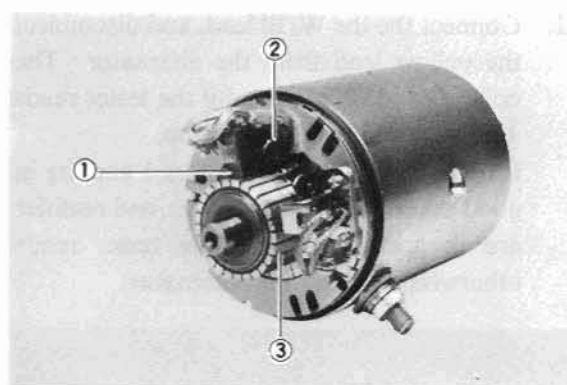


Fig. 11-20.

Commutator

Inspect the commutator surface for wear, "high mica", burns or grooving. To smooth the surface, sand it down with sandpaper, as shown in armature coil. Undercut the mica to the depth specified.

Standard undercut	0.6 mm (0.023 in.)
Limit on undercut	0.2 mm (0.008 in.)

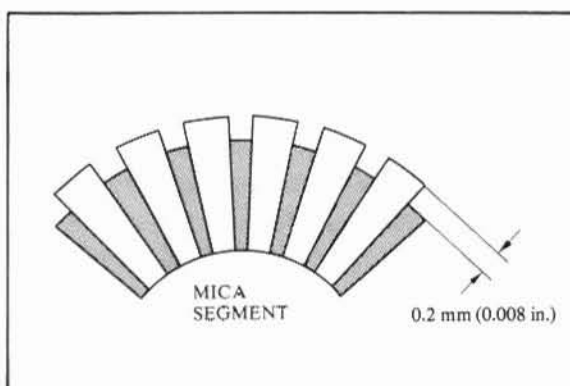


Fig. 11-21.

Armature coil

Using a circuit tester, check the coil for open and ground by putting probe pins on each commutator segment and rotor core (to test for ground) and on any two segments at various places (to test for open), with the brushes lifted off the commutator surface.

If the coil is found to be open-circuited or grounded, replace the armature. Continued use of such an armature will cause the starter motor to suddenly fail.

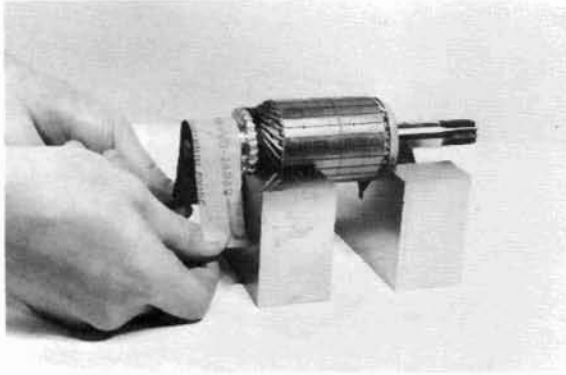


Fig. 11-22.

Relay for starter motor

This relay acts as a solenoid switch and, as such, it is necessary for its coil, contact plunger and contact points to be in good condition. It should be borne in mind that its contact points have to transmit the strong current to the starter motor.



Fig. 11-23.

Check the coil for "open", "ground" and ohmic resistance. The coil is in good condition if its resistance is equal to $3.5 \text{ ohms} \pm 0.5$.

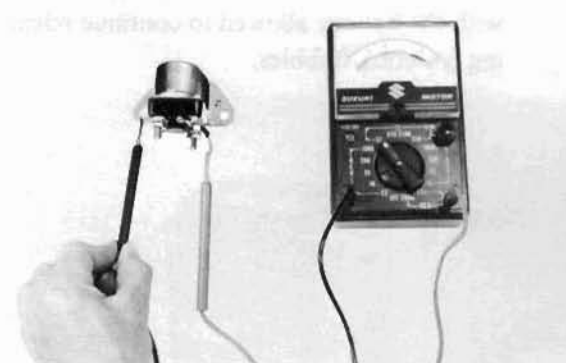


Fig. 11-24.

To see whether the contact points are closing fully to transmit the heavy load of current, operate it in the usual manner (by depressing the button on the right handle) to connect the battery to the motor and measure the voltage between the positive (+) terminal of motor and ground; and also between the positive (+) terminal of battery and ground. If the two readings are equal, it means that the relay contact points are satisfactory.

If the difference between the two is large or if no voltage shows up on the motor side, replace the relay for its contact points are faulty.

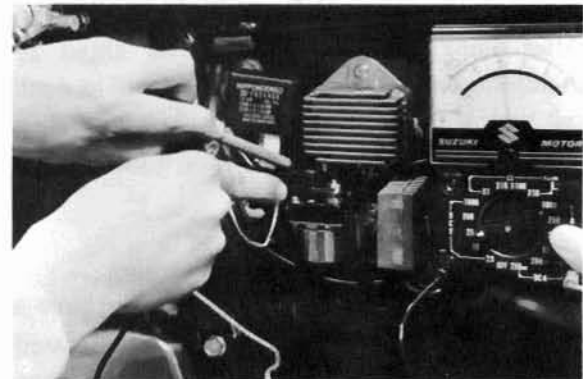


Fig. 11-25.

BATTERY

DESCRIPTION

YUASA and FURUKAWA MAKE 12N14-3A vacuum-sealed dry cell batteries are furnished with every GS1000.

This battery, when properly activated and initially charged, has a capacity of 14 ampere-hours on a 10-hour rating basis. No skill is required in activating this battery and charging it for the first time to place it in initial service; all necessary information is contained in the instructions given under the heading of INITIAL CHARGING METHOD. Battery's serviceable life depends much on the attention it receives thereafter. Each GS1000 user should be reminded of the importance of giving proper care to their batteries.

SPECIFICATIONS

Type designation	12N14-3A
Battery voltage	12 volts
Standard electrolyte S.G.	1.280 (at 20°C or 68°F)

INITIAL CHARGING METHOD

Each new GS1000 motorcycle is delivered with its battery in a "vacuum-sealed dry" condition. This battery can be utilized after conducting the four following steps:

1. Initial electrolyte filling

Take the battery off the motorcycle, and set it down on a battery servicing bench. Fill up each cell to the upper level with electrolyte, which is

- Dilute sulfuric acid solution with acid concentration of 34.6% by weight, having a specific gravity of 1.280 at 20°C (68°F), whose temperature, at the time of filling, should not be higher than 30°C (86°F).


After filling, let the battery sit for about 30 minutes. Then, check electrolyte level in each cell and, if the electrolyte in any cell has fallen then add more electrolyte to bring it back to the same level.

2. Initial charging duration

The acting materials on the cell plates have a store of energy equivalent to 75% of rated capacity, that is, if the battery is one that has just been manufactured and supplied by the battery maker. This stored energy, however, dissipates spontaneously and progressively with the lapse of time, so that, after filling it with electrolyte, the charging duration must be extended if a period of longer than 6 months has elapsed since the date of manufacture (which is indicated on each battery as shown in Fig. 11-26), the standard initial charging duration being 20 hours. The charging time is to be determined according to this schedule:

Age of dry battery (since manufacture)	Charging time
Up to 6 months	20 hours
Over 6 months and up to 9 months	30 hours
Over 9 months and up to 12 months	40 hours
Over 12 months	50 hours

Date of manufacture is indicated by a three-part number, Fig. 11-26, the leftmost part standing for the calendar date, the middle part the month, and the last part the year.

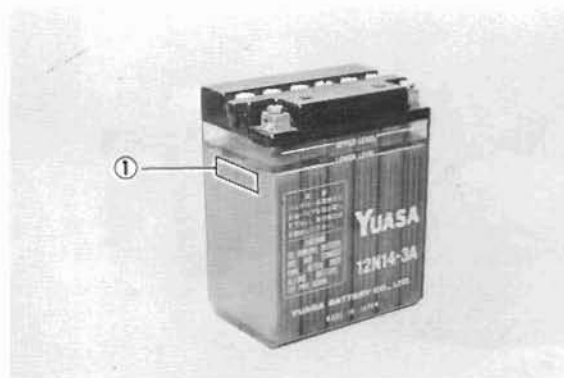


1. Manufacturing date

Fig. 11-26.

3. Initial charging current

The constant-current method of charging is recommended for initial charging, and is carried out by the following procedures:

- 1) Before turning on the charger, to which the filled battery is connected, remove the seal and cell caps. Be sure that the polarity marks are matched correctly in charging line connections. (Fig. 11-27)
- 2) Start charging, with the charger set for a charging rate of 3 amperes. While charging, check the electrolyte for S.G. (specific gravity) and also the charging voltage now and then, particularly towards the end of the charging time.
- 3) Towards the end of the charge, the battery will start releasing gaseous bubbles and the voltage and S.G. will be up and leveling; if not, it is likely that the vacuum seal was damage during transit or in storage. Continue charging, even in excess of the predetermined time, until the voltage and S.G. have leveled for one or two hours, with the battery allowed to continue releasing gaseous bubbles.

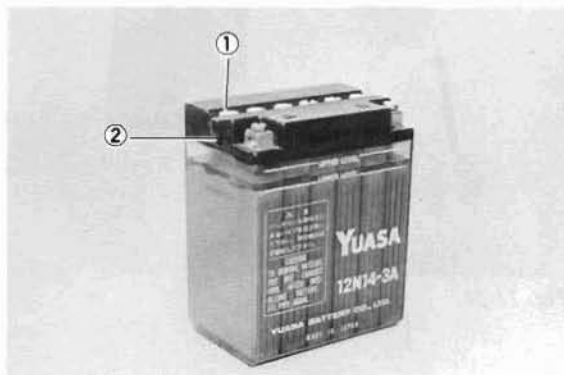

1. Seal cap

2. Battery cell cap

Fig. 11-27.

4. Electrolyte adjustment

Upon terminating the charging operation, re-check the electrolyte's S.G. to make sure it is 1.280 as corrected to 20°C (68°F). Add distilled water, as necessary, to adjust the S.G.'s upper level in each cell, as necessary. Replace the caps, and wash the surfaces of the battery container with fresh water. Let the battery dry before mounting it on the motorcycle.

BATTERY SERVICING

Removal

1. Open the seat, and disconnect the battery's positive terminal.
2. Remove the right-side frame cover. Pull off the battery vent hose. Disconnect the battery's negative terminal. (Fig. 11-28)
3. Remove the bolts securing the battery plate, take off the plate, and remove the battery.



1. Battery 2. Battery vent hose

Fig. 11-28.

Installation

Before mounting the battery, make sure that the exterior surface of the battery container are dry and free from electrolyte. Be careful not to forget to re-connect the vent hose. The installing procedure is the reverse of the removal procedure.

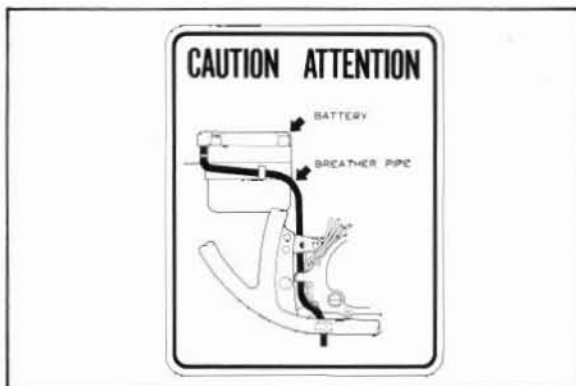


Fig. 11-29.

Inspection

1. Visually inspect the surface of the battery container. If any signs of cracking or electrolyte leakage from the sides of the battery has occurred, replace the battery with a new one.
2. If the battery terminals are found to be coated with rust or an acidic white powdery substance, then this can be cleaned away with sandpaper or hot water respectively.
3. Check the electrolyte level and add distilled water, as necessary, to raise the electrolyte to each cell's upper level.

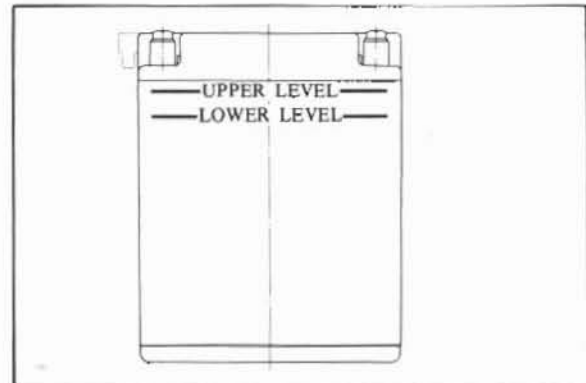


Fig. 11-30.

4. Check the battery for proper charge by taking an electrolyte S.G. reading. If the reading is 1.200 or less, as corrected to 20°C (68°F), it means that the battery is still in a run-down condition and needs recharging.

Recharging operation based on S.G. reading

To correct a S.G. reading to 20°C (68°F), use this formula:

$$S_{20} = S_t + 0.0007 (t - 20),$$

Where S_{20} = corrected value of S.G.

(20°C or 68°F),

S_t = value of S.G. read at temperature $t^\circ\text{C}$,

0.0007 = temperature coefficient of S.G., and

t = temperature in degrees Centigrade, at which S_t was read.

To read the S.G. on the hydrometer, bring the electrolyte in the hydrometer to eye level and read the graduations on the float scale bordering on the meniscus (curved-up portion of electrolyte surface), as shown in Fig. 11-30.

Check the reading (as corrected to 20°C) with Fig. 11-31 to determine the recharging time in hours by constant-current charging at a charging rate of 3 amperes (which is a tenth of the capacity of the present battery).

Be careful not to permit the electrolyte temperature to exceed 45°C (113°F), at any time, during the recharging operation. Interrupt the operation, as necessary, to let the electrolyte cool down.

The battery is properly recharged if any three of the following four conditions are met:

Recharging has been carried out to the specification stated in Fig. 11-32's graph.

Electrolyte S.G. rose to 1.260 or higher and has remained there for at least one hour.

The battery terminal voltage rose to 15 ~ 16 volts or higher and has remained there for at least one hour.

Gaseous bubbles are being released in every cell.

NOTE:

Constant-voltage charging, otherwise called "quick" charging, is not recommendable for it could shorten the life of the battery. "Quick" charging should be regarded as a last resort, only in case of emergency and, it must be carried out with the following precautions:


Limit the charging current to 14 amperes.

Limit the electrolyte temperature to 55°C (132°F).

Recharge with the battery detached from the motorcycle. Never attempt to "quick" charge the battery in place.

Exercise all common-sense precautions on battery recharging.

Operate the charger in a manner consistent with the directions prescribed for the charger.

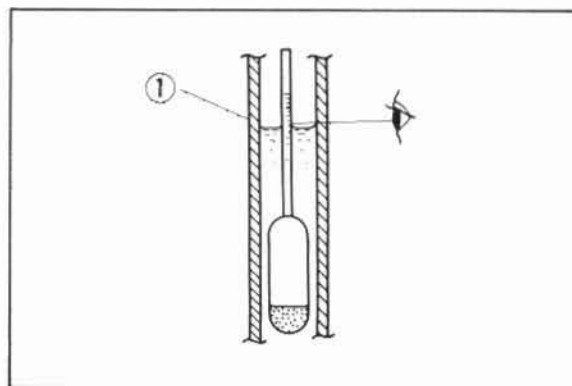

1. Hydrometer

Fig. 11-31.

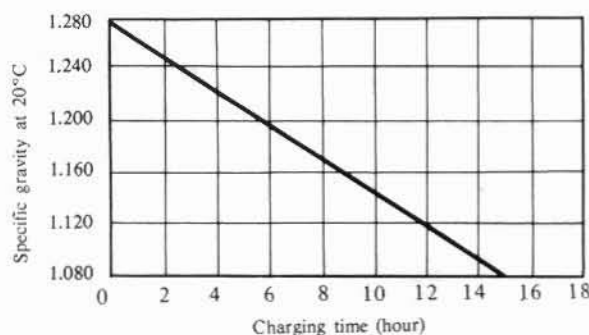


Fig. 11-32.

TROUBLESHOOTING

Symptom	Probable cause	Remedy
"Sulfation", acidic white powdery substance or spots on surfaces of cell plates.	1. Not enough electrolyte 2. Battery container has cracks. 3. Battery has been left in a run-down condition for a longtime. 4. Adulterated electrolyte (Foreign matter has entered, mixed with the electrolyte, and contaminated it.)	Add distilled water, if the battery has not been damaged, and recharge, if "sulfation" has not advanced too far. Replaced the battery. Replace the battery. If "sulfation" has not advanced too far, try to restore the battery by replacing the electrolyte, recharging it fully with the battery detached from the motorcycle and then adjusting electrolyte's S.G.
Battery runs down easily.	1. The charging system is not set for proper charging operation. 2. Cell plates have lost much of their active material as a result of over-charging. 3. A short-circuit condition exists within the battery due to an excessive accumulation of sediments caused by the electrolyte's high S.G.. 4. Electrolyte's S.G. is too low. 5. Adulterated electrolyte. 6. Battery is too old.	Check the alternator, regulator and circuit connections, and make necessary adjustments for specified charging operation. Replace the battery, and correct the charging system. Replace the battery. Recharge the battery fully and adjust electrolyte's S.G. Replace the electrolyte, recharge the battery and then adjust S.G. Replace the battery.
Reversed battery polarity.	The battery has been connected the other way around in the system, so that it is being charged in the reverse direction.	Replace the battery and be sure to connect the battery properly.

UTILITY SWITCHES AND DEVICES

Ignition switch

Be sure that the ignition switch ①, when checked with a circuit tester, shows internal continuity as indicated in the chart below, and replace it if any continuity or non-continuity not indicated in the chart is noted:

Ignition switch continuity chart

Switch position	Terminals			
	RED	ORANGE	GRAY	BROWN
OFF				
ON	○	○	○	○
P	○			○

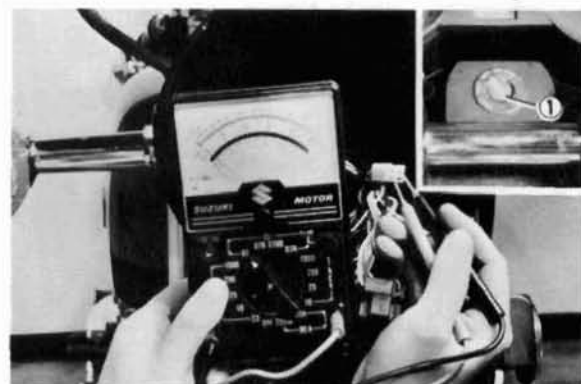


Fig. 11-33.

Front brake lamp switch

See if this switch shows continuity when the front brake lever is squeezed: put the tester probe pins to the WHITE ① and ORANGE ② lead wires of this lamp switch.

NOTE:

To advance or retard the action of this switch for the purpose of adjustment, reposition it in place: this is accomplished by loosening the 2 screws securing the switch to the body ③.

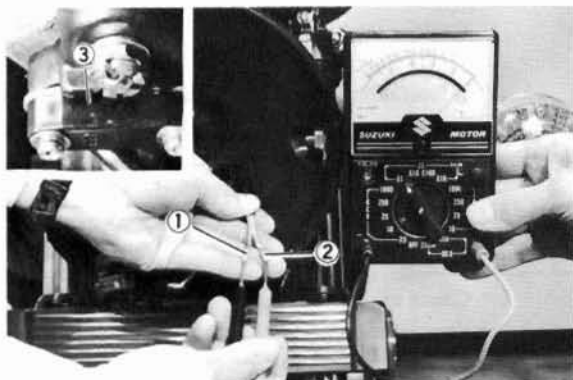


Fig. 11-34.

Rear brake lamp switch

Check this lamp in the same way that the front lamp switch is tested for internal continuity. Its lead wires are WHITE ① and ORANGE with GREEN tracer ②. Press down on the brake pedal, and continuity will be noted.

NOTE:

To make the switch close quicker (turn on the lamp while pressing down on the brake pedal), reposition the switch body ③ upward. Lowering this it retards the action.

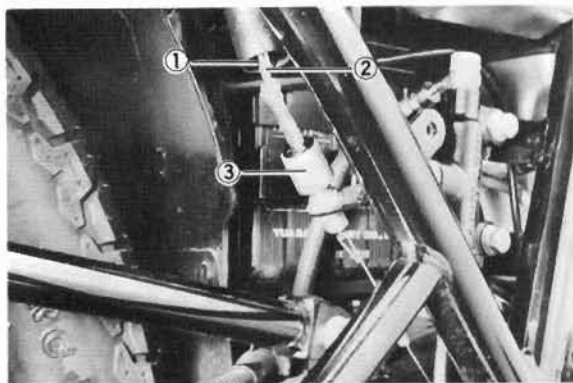


Fig. 11-35.

Left handle switch

This switch operates the lighting, dimmer and turn signal switches. Circuit continuity through each switch component can be checked by putting the two testing prods or pins of the circuit tester to the switch leads (at the coupler).

Lighting and dimmer switches

The lighting and dimmer switches should exhibit continuity, when checked with the circuit tester, according to this chart:

Dimmer switch

	WHITE	YELLOW		ORANGE	GRAY	WHITE/ RED	WHITE/ GREEN
HI		○	○				
LO	○	○	○				

LIGHTING SWITCH

If any abnormally high resistance is noted to accompany the continuity indication, it probably means that the contact points in the switch are faulty and need repairing.

Turn signal

Disconnect the lead wires from the winker switch, and check for internal continuity by putting the probe pins of the tester to the LIGHT GREEN and BLACK leads (for right-hand switch) and to the BLACK and BLACK leads (for left-hand switch).

Switch position	BLACK	LIGHT BLUE	LIGHT GREEN
RIGHT		○	○
●			
LEFT	○	○	

Horn

The horn is to be checked for internal continuity and its sound. Use the circuit tester for the former check, and a 12-volt battery for the latter. Make sure that the horn has full volume when its lead wires are put to the battery terminals; if not, replace it.

Switch position	GREEN	ORANGE/GREEN Tracer
OFF		
ON	○	○

Kill switch and starter switch

Check these switches in the same way that the lighting switch is checked.

Kill switch

Switch position	ORANGE	ORANGE/WHITE
OFF		
ON	○	○

Starter switch


Switch position	YELLOW/GREEN	ORANGE/WHITE
OFF		
ON	○ — ○	○ — ○



Fig. 11-36.

Oil pressure switch

This switch is located on the discharge side of the lube oil pump and turns the warning lamp on and off in response to the discharge pressure.

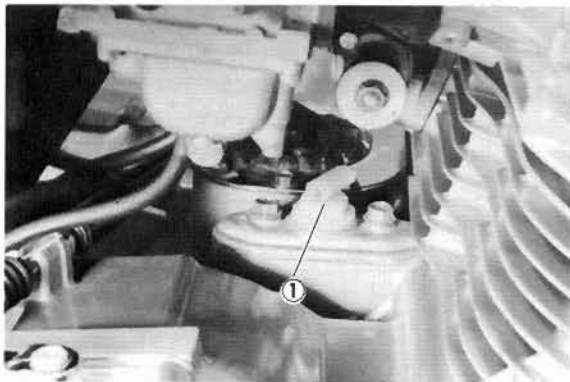

1. Oil pressure switch

Fig. 11-37.

The normal function of this switch and its lamp is such that, when the engine is turned off, turning on the ignition switch will light up the lamp (oil pressure indicating lamp), but the lamp will go out immediately as the engine is started, thus signifying that the oil pump is delivering enough lube oil.

Two possibilities must be taken into consideration when the switch and lamp do not operate as stated above. One is that the switch is internally faulty due to an open-circuit or grounding: this can be checked with the circuit tester. The other is a mechanical malfunction — the inability of the switch to respond to the pressure: this can be checked by measuring the oil pressure when

the engine is running. If the pressure is low, the oil pump is malfunctioning; if high, the switch is mechanically defective and needs to be replaced.

Lamp wattage data

The lighting system for Model GS1000 uses lamps with the following rated wattage.

Headlamp	12V, 50/40W
Tail/Brake lamp	12V, 8/23W (3/32 cp)
Turn signal lamp	12V, 23W (32 cp)
License plate lamp	12V, 8W (3 cp)
Speedometer lamp	12V, 3.4W
Tachometer lamp	12V, 3.4W
Neutral indicator lamp	12V, 3.4W
High beam indicator lamp	12V, 3.4W
Turn signal pilot lamp	12V, 3.4W
Oil p. indicator lamp	12V, 3.4W

Inspection of headlamp

- Make sure that the bulb is not burnt out.
- Make sure that there is no damaged to the wiring or bad connections.
- Make sure that each connection is tightly fastened.
- Make sure that there is a proper radiation angle.
See page 10-5 with respect to the adjustment of the irradiation angle.
- Change the headlamp in the sealed beam assembly.

Inspection of tail brake lamps and turn signal lamps

- Make sure that the bulb is not burnt out.
- Make sure that there is no damaged to the wiring or bad connections.
- Defective grounding or a short-circuit exists when the front and rear signal lamps continue to stay lit after the switch has been turned off.
- Make sure that each connection is tightly fastened. Loose connections can shorten the bulb's life due to vibration.

Rear combination lamps

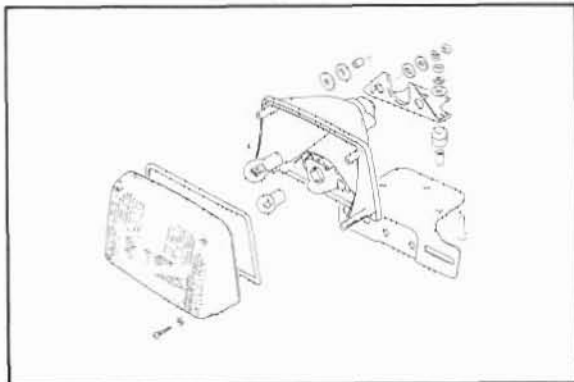


Fig. 11-38.

Turn signal lamps

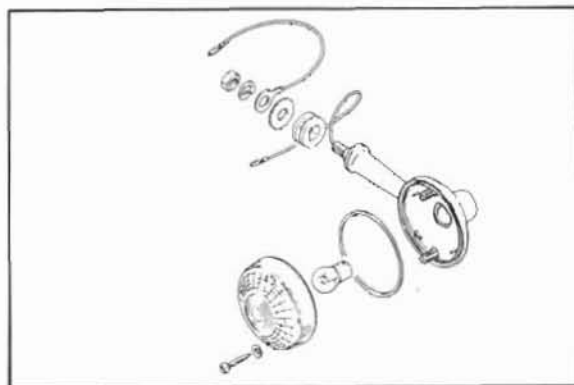


Fig. 11-39.

- A turn signal buzzer is mounted on the lower portion of the fuel tank. Make sure that the buzzer operates properly.

Inspection of speedometer and tachometer

- Replace burnt out bulbs after removal of meters. See page 10-5 with respect to removal procedures.

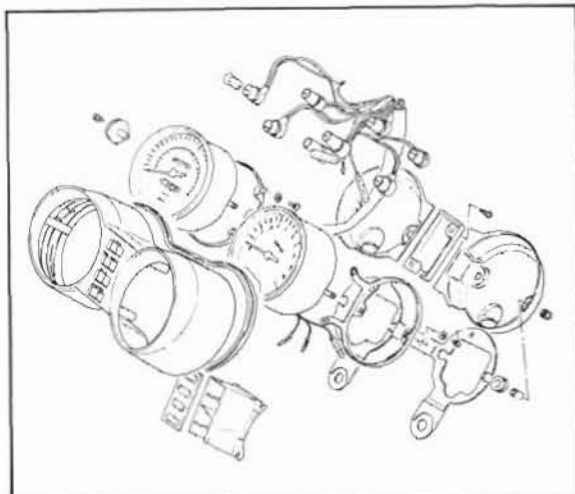


Fig. 11-40.

Fuel gauge

Wiring

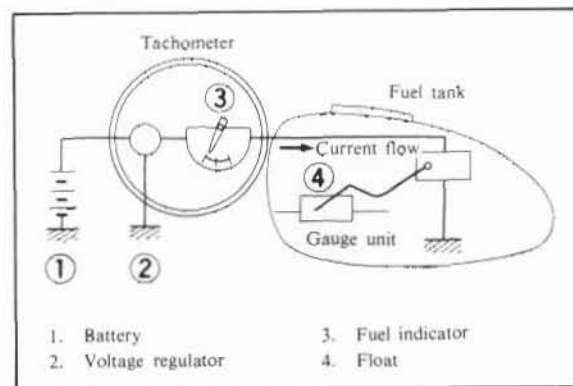


Fig. 11-41.

The above drawing is a schematic for fuel gauge wiring. The internal resistance value of gauge unit is adapted to vary with the height of the float.

Since it is difficult for to pass through the circuit when the resistance value is high, the swing of the meter is small (close to E point).

The current passing through the circuit increases the swing of the meter's pointer (close to point F) when the resistance value is low.

- The relationship between the amount of gasoline and meter indications are as follows:

Amount of gasoline (in liters)	Meter indication
4.2	Point E - 2°30'
5.0	E
10.8	1/2
17.0	F
17.7	Point F + 5°

The meter points to E - 2°30' when the amount of gasoline is between 0 to 4.2 liters. Also the meter points to F + 5° when the amount of gasoline in the tank is between 17.7 liters to full.

3. Construction of each portion and operating meter

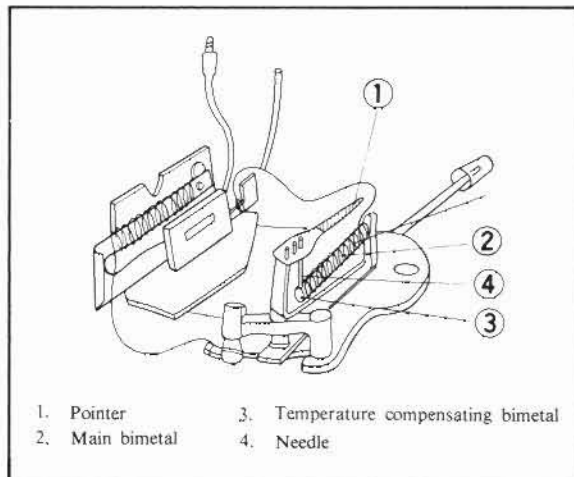


Fig. 11-42.

- Main operation
Current passing through the heat wire makes the main bimetal element deflect causing the pointer to move.
- Auxiliary operation
(This compensates for variations in temperature and voltage.)
- Auxiliary operation
A temperature compensating bimetal is provided so that no indication errors will occur due to the temperature changes inside the meter.

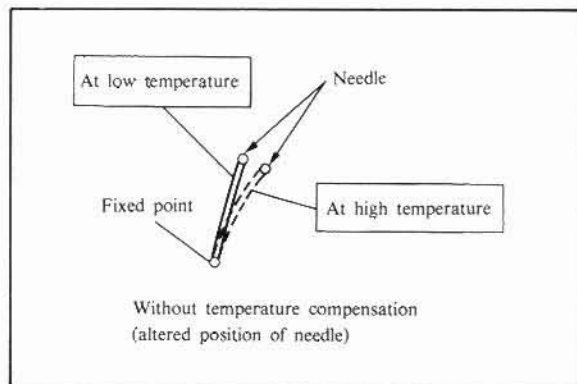


Fig. 11-43.

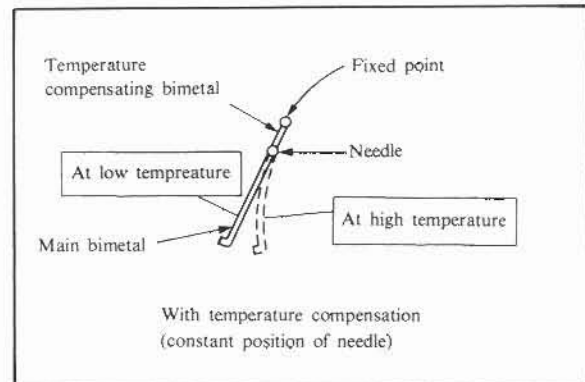


Fig. 11-44.

Even if the temperature should rise inside the meter and cause the main bimetal to deflect as shown in the above drawing, the temperature compensating bimetal will deflect to the same degree as the main bimetal, in the reverse direction, to keep the needle position constant.

- Voltage regulator

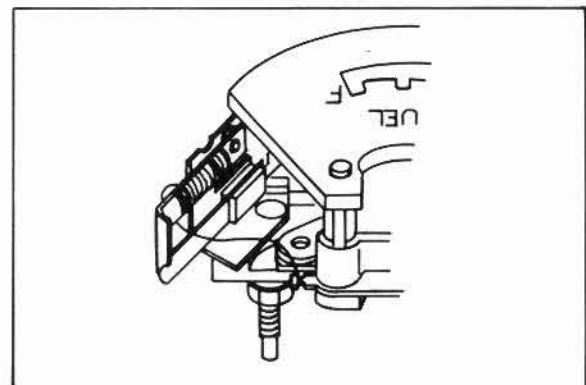


Fig. 11-45.

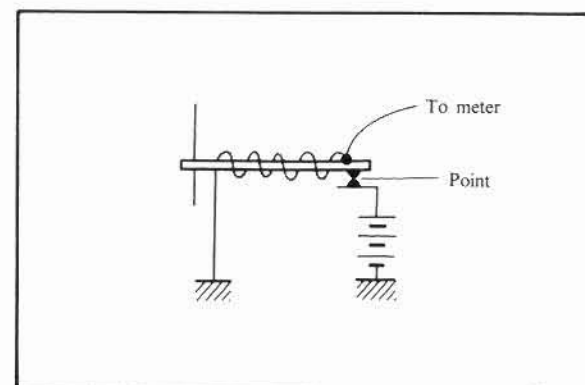


Fig. 11-46.

The passage of current through the heat wire makes the bimetal deflect and causes point separation. This point separation stops the current until the bimetal begins to cool, causing the point to connect again.

Since a lot current passes through the heat wire when the supply voltage is high, the bimetal will quickly deflect, causing point separation. This is illustrated in the following drawing showing that the average current is constant.

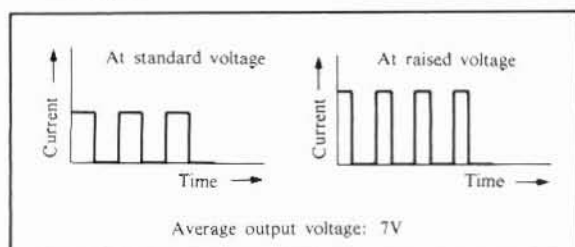


Fig. 11-47.

● Gauge unit

The displacement of float changes the position of contact plate which slides on a winding resistor to vary the resistance value.

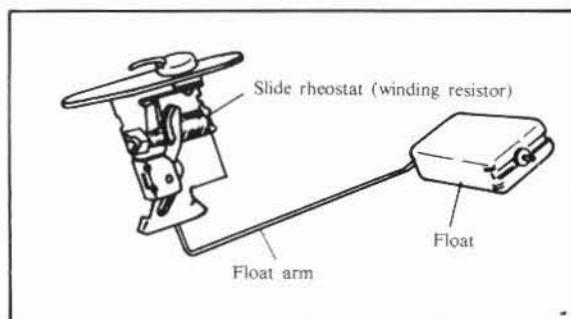


Fig. 11-48.

Inspection of fuel meter and gauge

The fuel meter is enclosed within the tachometer assembly.

The following table is used for trouble-shooting.

Amount of gasoline (L)	1.5	2.7	6.1	9.3	15.8	16.3
Resistance (Ω)	110	95	52	32.5	7	3

 
Pointer failure and minus indication

- (1) The meter's pointer fails to move.
- (2) The meter has a substantial minus indication.

Checking method

- (1) Determine whether the trouble is within the meter or gauge.

Remove the gauge connector to short-circuit the meter side of same connector (make gauge resistance equal to zero Ω), and observe meter indication.



Meter's pointer fails to move





Meter side defective

Check (2)

Meter's pointer swings to extreme position





Gauge defective



Check (3)

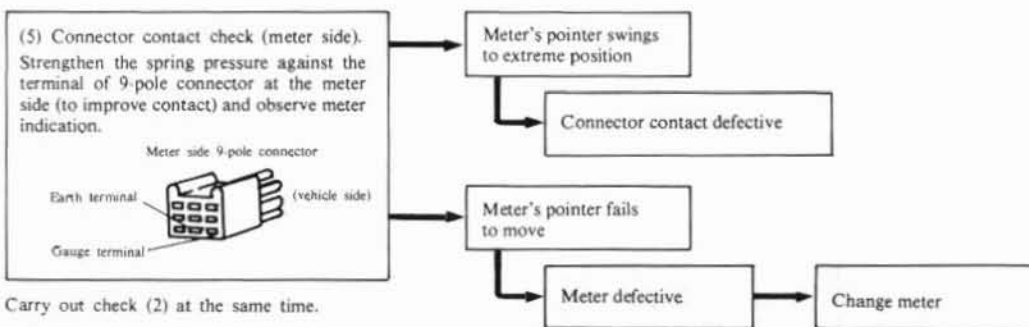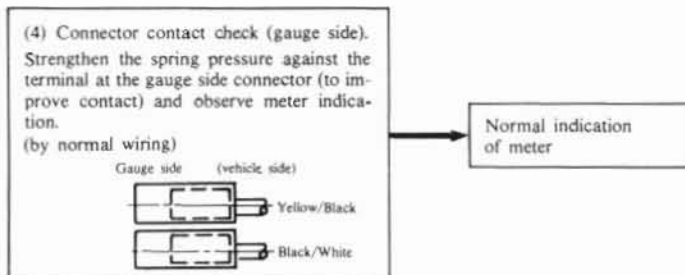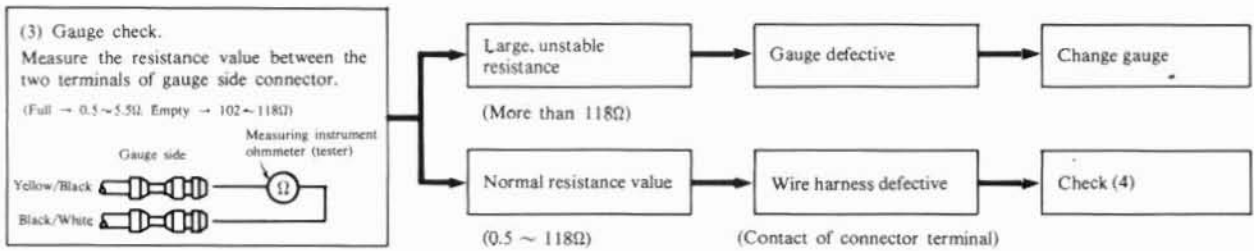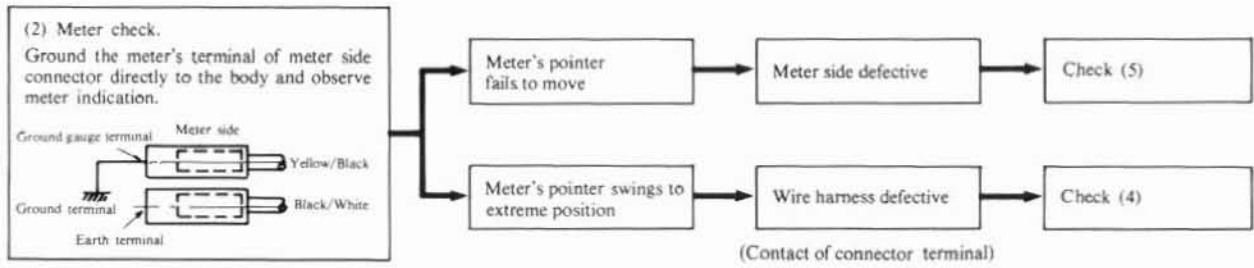

Meter's pointer swings to extreme position and indicates plus.
 (1) Swinging up of pointer.
 (2) Substantially plus indication of meter.

Method of checking

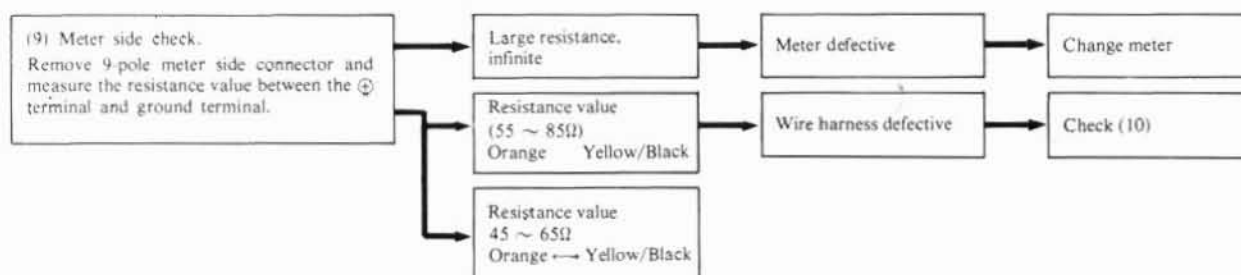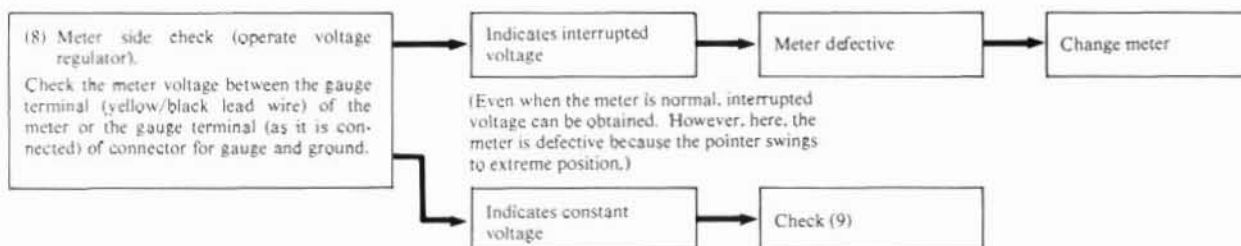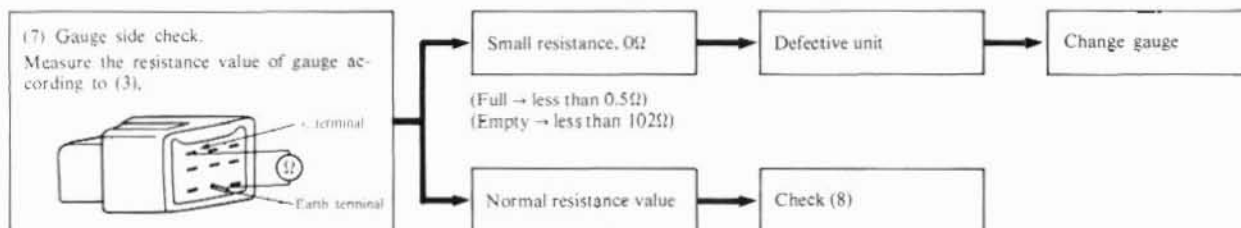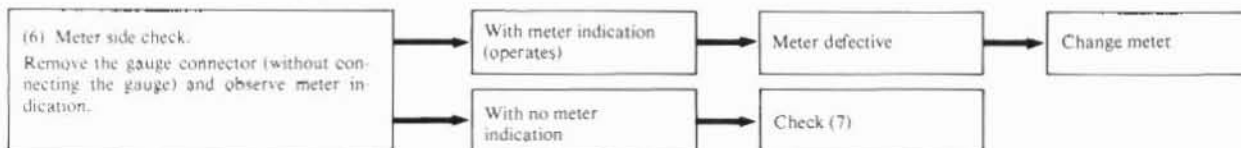

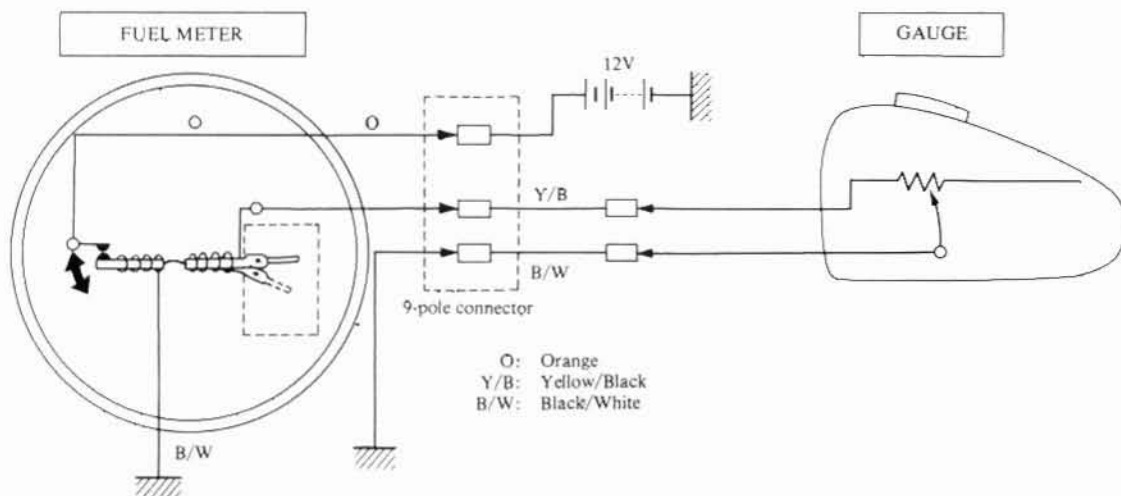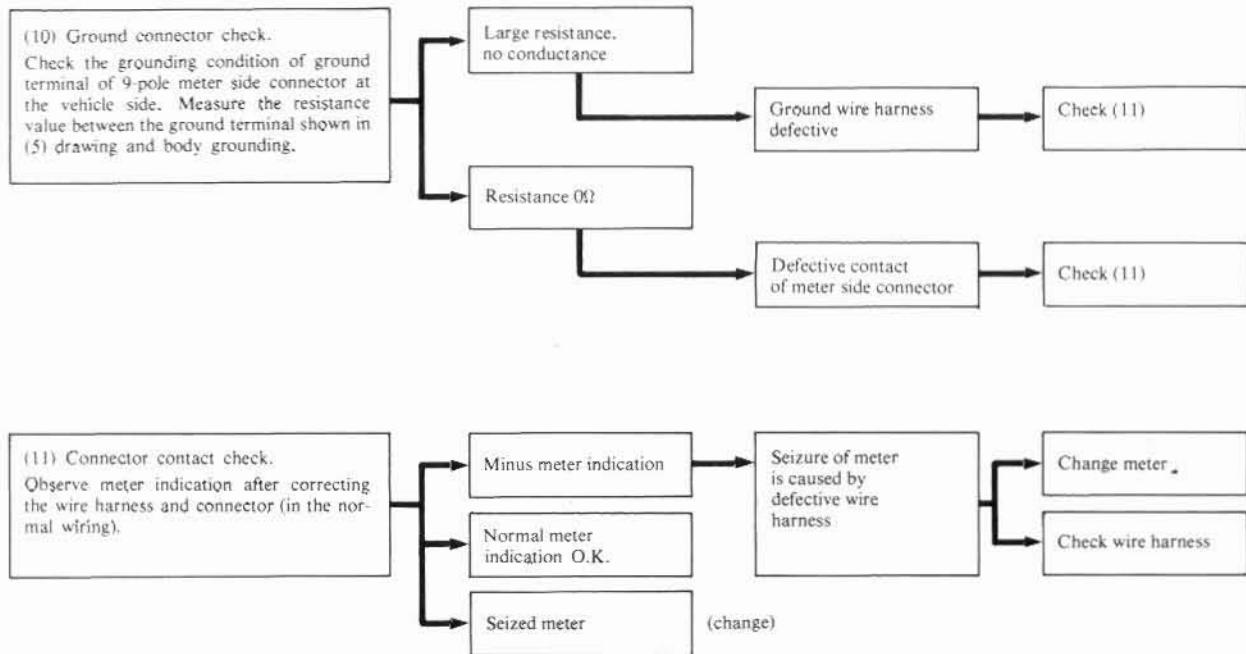

Check of resistance value between terminals

Meter side

Orange ↔ Yellow/Black 45 ~ 65Ω


Orange ↔ Black/White 55 ~ 85Ω

Gauge side


Full 0.5 ~ 5.5Ω

Empty 102 ~ 118Ω


WIRING DIAGRAM

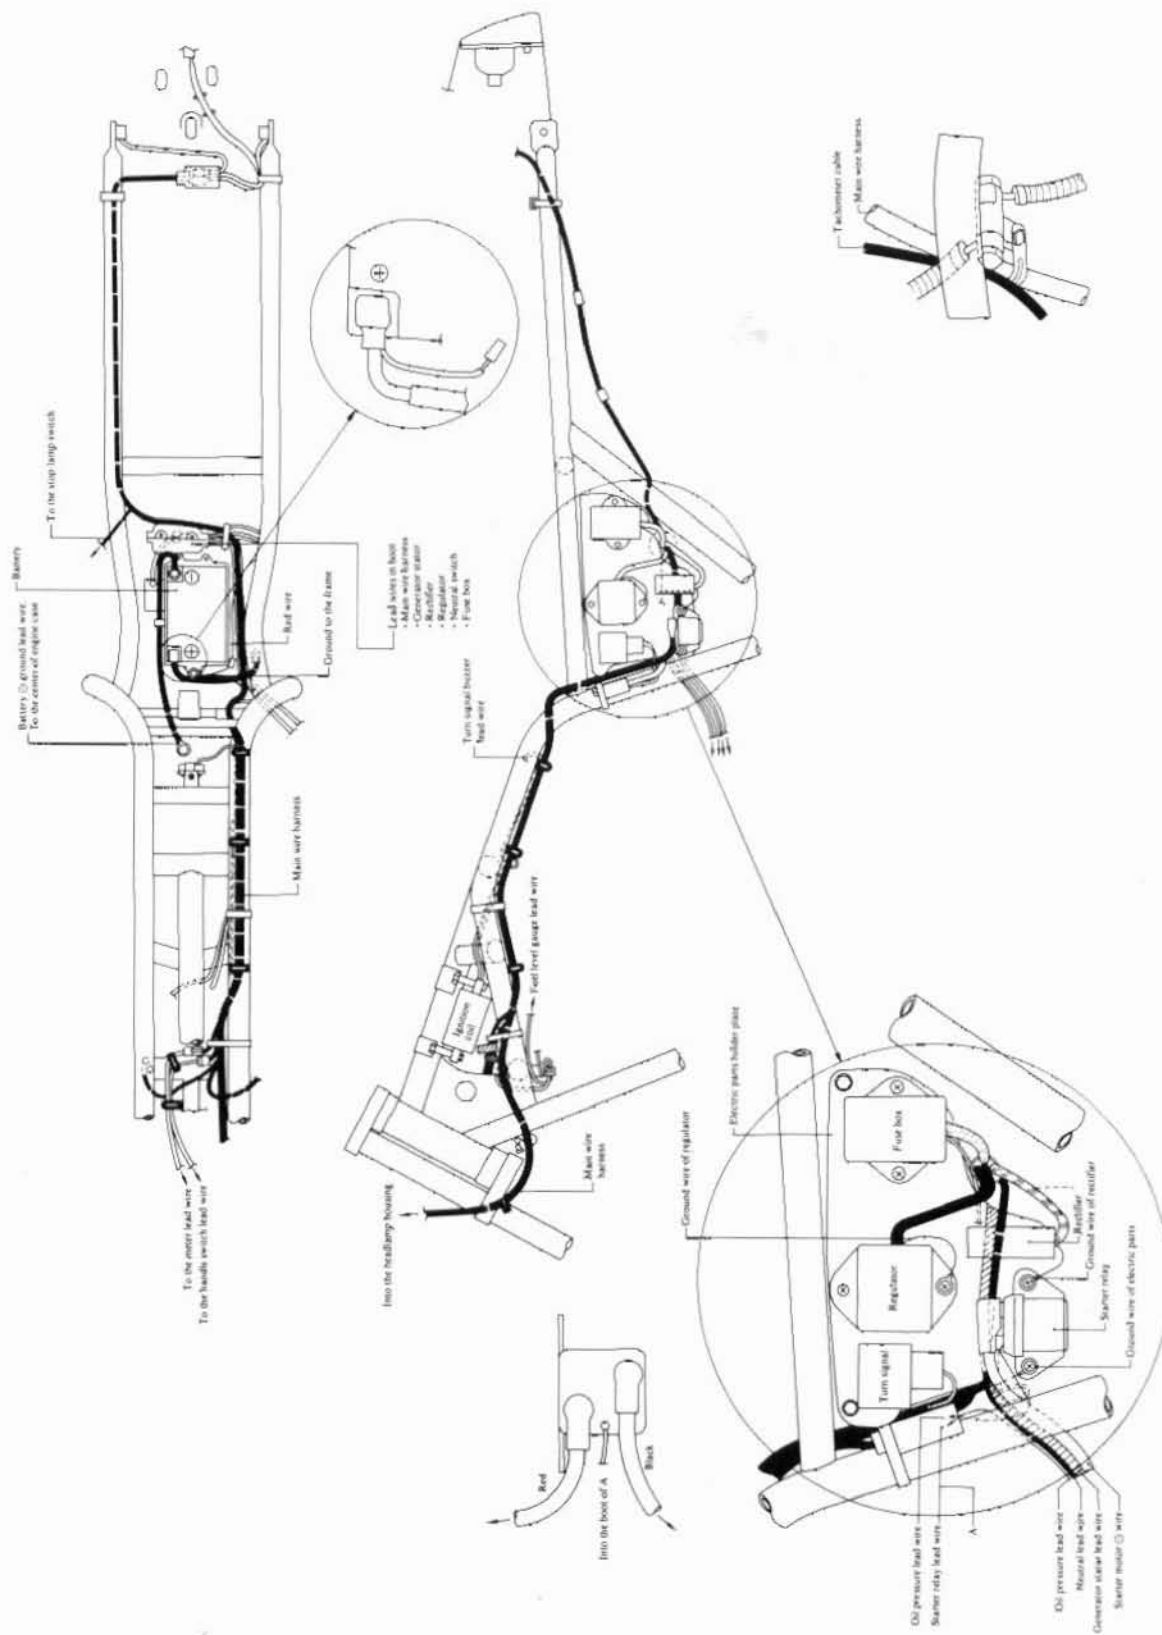



How to set the high-tension cord.

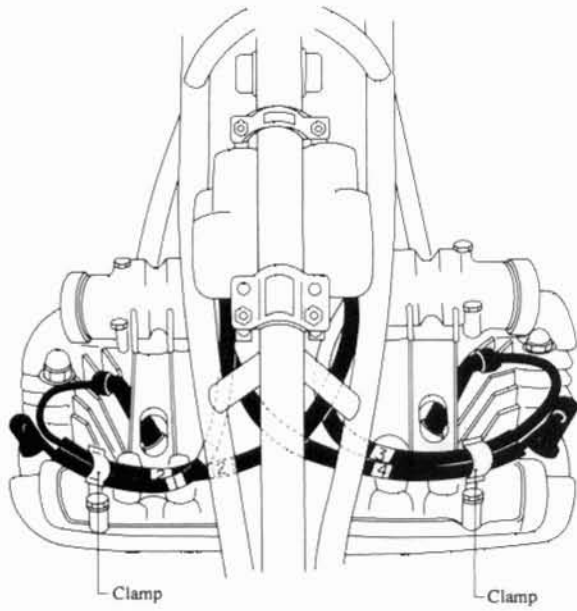


How to set contact breaker lead wire.

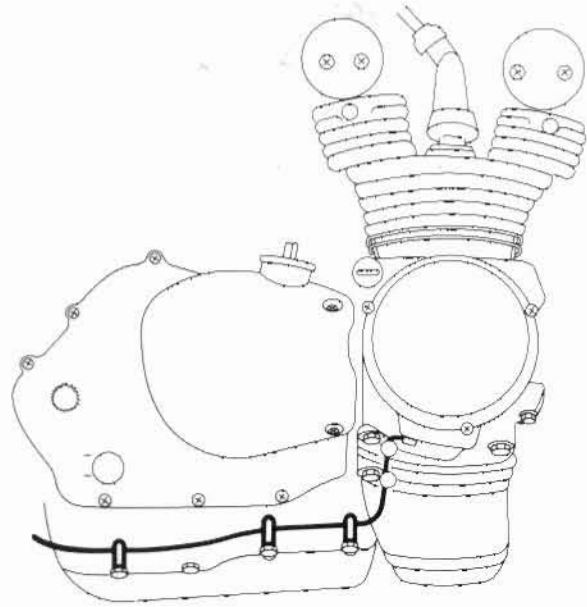

CABLE ROUTING

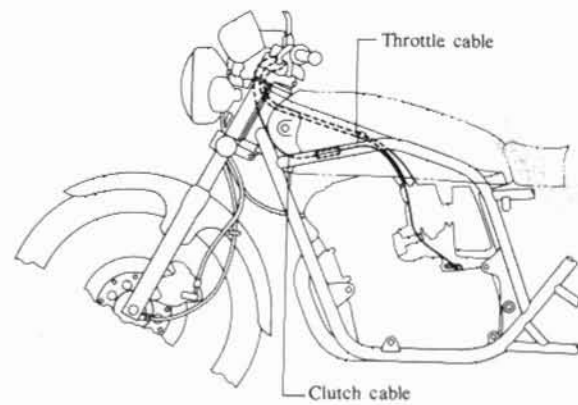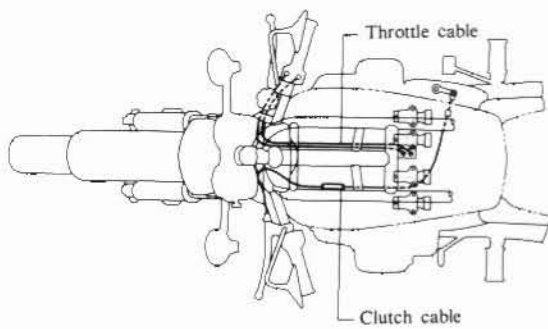

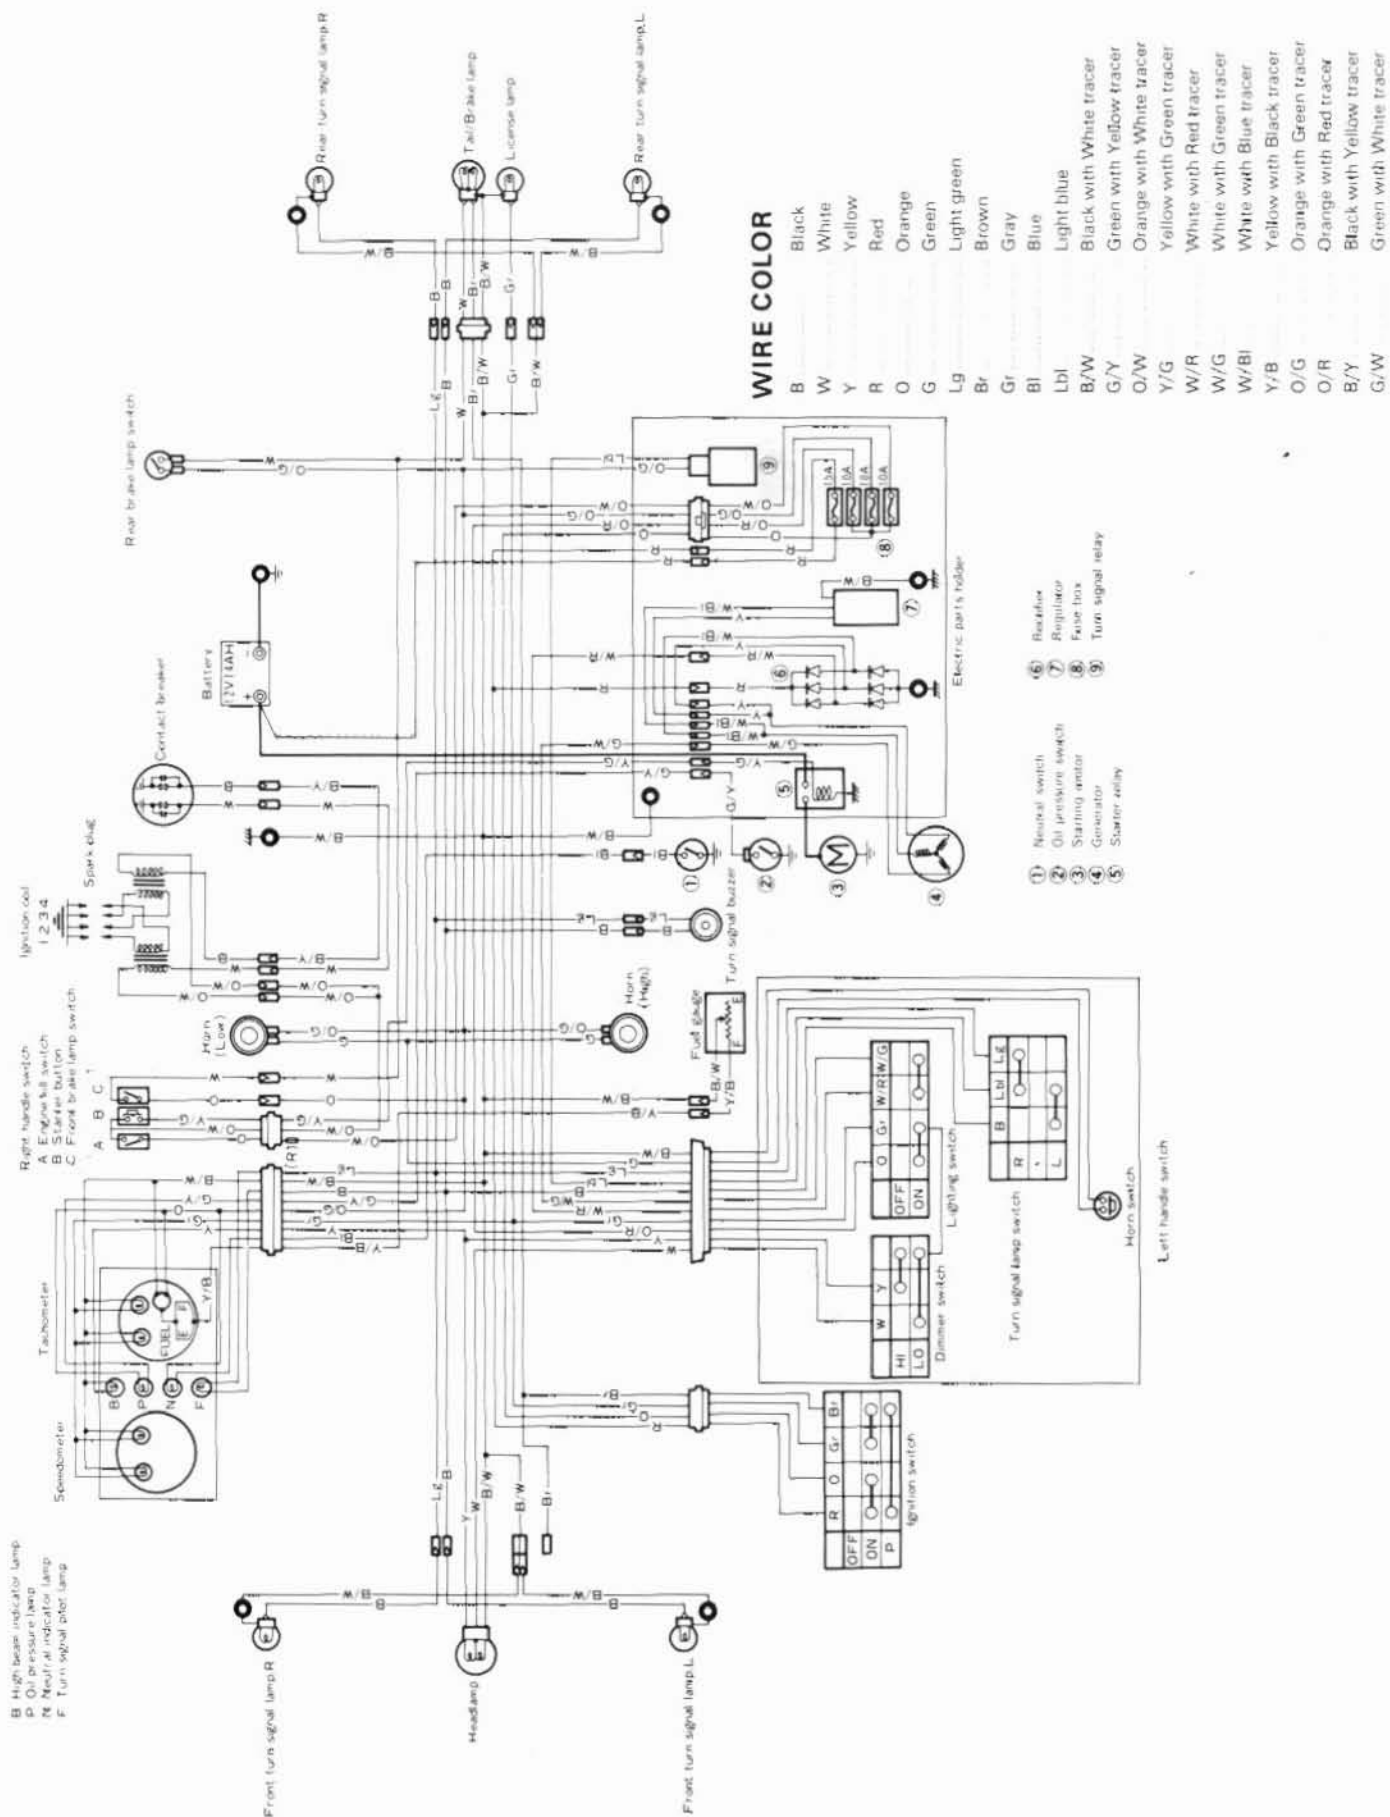

SUZUKI

GS1000

SUPPLEMENTARY SERVICE MANUAL

GS1000E

CONTENTS

GENERAL INFORMATION.....	12- 3
SERVICE SPECIFICATIONS.....	12- 3
FRONT BRAKE.....	12- 5
MASTER CYLINDER.....	12- 5
CALIPER.....	12- 5
WHEEL.....	12- 6
SELF-CANCELLING TURN SIGNAL.....	12- 8
CIRCUIT DIAGRAM.....	12- 8
OPERATION.....	12- 8
TROUBLE SHOOTING.....	12- 9
WIRING DIAGRAM.....	12-12

This section describes features of the GS1000E not provided on the GS1000.

The major differences are as follows:

1. Double disk front brake
2. Single-piece cast wheels
3. Self-cancelling turn signal



Fig. 1. Left side



Fig. 2. Right side

GENERAL INFORMATION

SERVICE SPECIFICATIONS

DIMENSIONS AND WEIGHT

Overall length	2,225 mm (87.6 in.)
Overall width	850 mm (33.5 in.)
Overall height	1,165 mm (45.9 in.)
Wheelbase	1,505 mm (59.3 in.)
Ground clearance	155 mm (6.1 in.)
Dry weight	234 kg (516 lbs.)
Gross vehicle weight rating	924 lbs.

ENGINE

Type	Four-stroke cycle, air-cooled, DOHC
Number of cylinder	4
Bore	70.0 mm (2.756 in.)
Stroke	64.8 mm (2.551 in.)
Piston displacement	997 cm ³ (60.8 cu.in.)
Compression ratio	9.2 : 1
Carburetor	MIKUNI VM26SS, four
Air cleaner	Paper element
Starter system	Electric
Lubrication system	Wet sump

TRANSMISSION

Clutch	Wet multi-plate type
Transmission	5-speed constant mesh
Gearshift pattern	1-down 4-up
Primary reduction	1.775 (87/49)
Final reduction	2.800 (42/15)
Gear ratios, Low	2.500 (35/14)
2nd	1.777 (32/18)
3rd	1.380 (29/21)
4th	1.125 (27/24)
Top	0.961 (25/26)
Drive chain	TAKASAGO #630GSO, 96 links

CHASSIS

Front suspension	Telescopic, pneumatic/coil spring, oil dampened
Rear suspension	Swinging arm, oil dampened, damper 4-way/spring 5-way adjustable
Steering angle	40° (right and left)
Caster	63°
Trail	116 mm (4.57 in.)
Turning radius	2.62 m (8.5 ft.)
Front brake	Disc brake
Rear brake	Disc brake
Front tire size	3.50V 19-4PR

Rear tire size	4.50V 17-4PR
Front tire pressure	See page 10-20 (Chapter 10)
Rear tire pressure	See page 10-20 (Chapter 10)

ELECTRICAL

Ignition type	Battery ignition
Ignition timing	17° B.T.D.C. below 1,500 rpm and 37° B.T.D.C. above 2,500 rpm
Spark plug	NGK B-8ES or NIPPON DENSO W24EC
Spark plug gap	0.6 ~ 0.8 both NGK and NIPPON DENSO
Battery	12V 14AH/10 Hours
Generator	Three-phase A.C. generator
Fuse	10/10/10/15A
Headlamp	12V 60/55W
Tail/Brake lamp	12V 8/23W
Turn signal lamp	12V 23W
License plate lamp	12V 8W
Speedometer lamp	12V 3.4W
Tachometer lamp	12V 3.4W
Neutral indicator lamp	12V 3.4W
High beam indicator lamp	12V 3.4W
Turn signal pilot lamp	12V 3.4W
Oil pump indicator lamp	12V 3.4W

CAPACITIES

Fuel tank including reserve	19 L (5.0 US.gal)
reserve	4.0 L (4.2 US.qt)
Engine oil change	3.4 L (3.6 US.qt)
filter change	3.8 L (4.0 US.qt)
overhaul	4.2 L (4.4 US.qt)
Front fork air pressure	0.8 kg/cm ² (11.4 psi)
Front fork oil (in each leg)	241 ml (8.15 US.oz)
(At time of overhaul and replacement)	

* Specifications are subject to change without notice.

FRONT BRAKE

The master cylinder and caliper differ from those of the single-disc front brake in regard only to the diameters of piston and cylinder bore. This difference is due to the change in brake operating pressure.

MASTER CYLINDER

INSPECTION

The only difference is that the bore diameter is larger. Thus, the servicing instructions (on disassembly, reassembly and inspection) set forth in the GS1000 Service Manual already in issue (which is originally for single-disc machines) with respect to the master cylinder are applicable to the subject model.

Diameter	Standard	Service limit
Bore	15.870 ~ 15.913 mm (0.6248 ~ 0.6265 in.)	Over 15.925 mm (0.6270 in.)
Piston	15.811 ~ 15.838 mm (0.6225 ~ 0.6235 in.)	Under 15.799 mm (0.6220 in.)

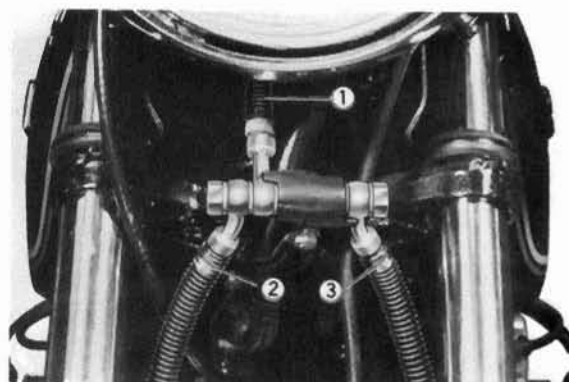


Fig. 3.

1. From master cylinder
2. To right caliper
3. To left caliper

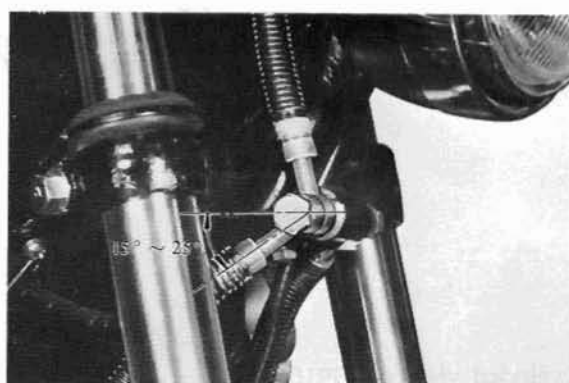


Fig. 4.

CALIPER

INSEPTION

The bore diameter is smaller, there being no other difference as in the case of master cylinder.

Diameter	Standard	Service limit
Bore	38.180 ~ 38.219 mm (1.5031 ~ 1.5047 in.)	Over 38.230 mm (1.5051 in.)
Piston	38.025 ~ 38.050 mm (1.4970 ~ 1.4980 in.)	Under 37.925 mm (1.4931 in.)

REASSEMBLY


Three brake hoses are tied into the hose joint. One is from master cylinder; one is to the left caliper; and one is to the right caliper. When connecting the hoses to the joint, be sure to make connections as shown.

AIR BLEEDING FROM BRAKE FLUID CIRCUIT

To bleed air out of the calipers, proceed as described in page 10-24 of the GS1000 manual. Bleed out from the left caliper first, and then from the right caliper.

WHEEL


Exploded view of GS1000E front wheel

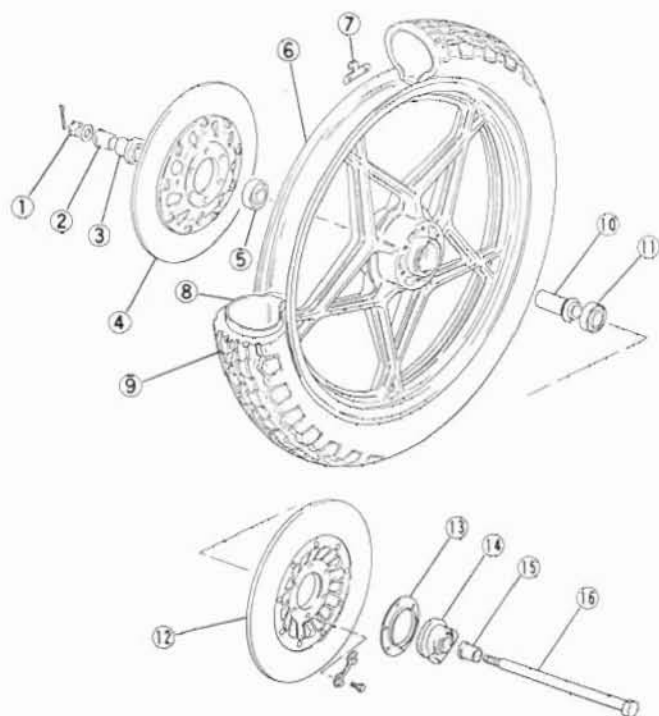

1. Front axle nut
2. Axle spacer
3. Bearing RH spacer
4. Front brake disc
5. Bearing
6. Front wheel
7. Balance weight
8. Inner tube
9. Front tire
10. Spacer
11. Bearing
12. Front brake disc
13. Dust seal
14. Speedometer gear box
15. Axle spacer
16. Front axle

Fig. 5.

Exploded view of GS1000E rear wheel

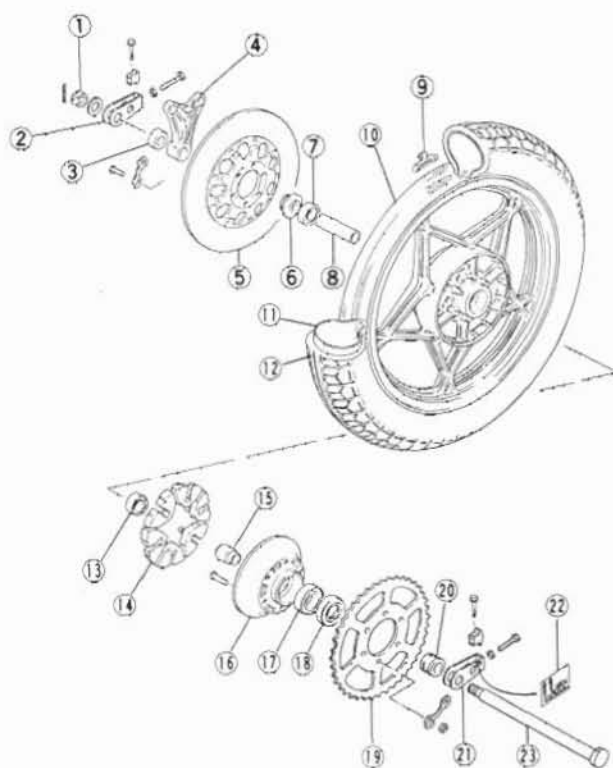

1. Rear axle nut
2. Chain RH adjuster
3. Spacer
4. Rear calipers bracket
5. Rear brake disc
6. Axle RH spacer
7. RH bearing
8. Spacer
9. Balance weight
10. Rear wheel
11. Inner tube
12. Rear tire
13. LH bearing
14. Rear hub cushion
15. Bearing holder
16. Sprocket mounting drum
17. Bearing
18. Oil seal
19. Rear sprocket
20. Axle LH spacer
21. Chain LH adjuster
22. Chain wear indicator label
23. Rear axle

Fig. 6.

DISASSEMBLY

Either right or left caliper must be removed to allow removal of front wheel.

Tightening torque for caliper mounting bolt:

2.5 ~ 4.0 kg-m

250 ~ 400 kg-cm

(18.1 ~ 29.0 lb-ft)

NOTE:

Be careful in handling the casting wheel as it is made of aluminum alloy and apt to be damaged compared with a general steel wheel.

INSPECTION AND CHECKING

1. Wheel run-out

	Face run-out	Radial run-out
Run-out limit	2 mm (0.08 in.)	2 mm (0.08 in.)

2. Wheel balance

Check the wheel balance in the same way as in GS1000. Use a balance weight of 20 gr. or 30 gr. when necessary.

Wheel balancer	
Weight	Part No.
20 gr. (0.04 lbs)	55411-47001
30 gr. (0.07 lbs)	55412-47001

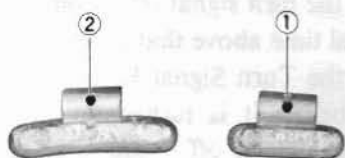


Fig. 7.

1. 20 gr.

2. 30 gr.

NOTE:

When thrusting a balance weight to the wheel (rim section), use a plastic hammer to prevent damage to the wheel. Never use a metallic hammer.

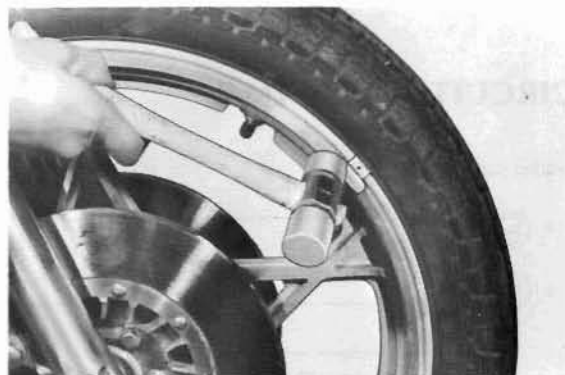


Fig. 8.

NOTE:

When removing a balance weight or when cutting it for minute adjustment, use wheel weight pliers.

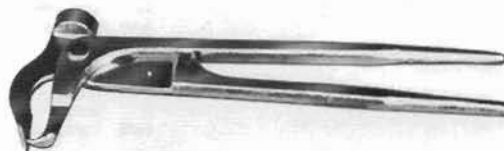


Fig. 9. Wheel weight pliers

CHECKING DISC WEAR (Front)

Including Model GS1000E, the front disc of the models equipped with double discs is thinner than those of others.

Front disc thickness	
Standard	Service limit
5.0 mm (0.20 in.)	4.5 mm (0.18 in.)
5.9 ~ 6.1 mm (0.23 ~ 0.24 in.)	5.5 mm (0.22 in.)

SELF-CANCELLING TURN SIGNAL

When the Turn Signal Knob is switched to LEFT or RIGHT, the turn signal lamp starts flashing.

If the motorcycle speed is faster than a certain

speed (about 15 km/h), the turn signal lamp is switched off automatically after a certain period of time (about 9 sec).

CIRCUIT DIAGRAM

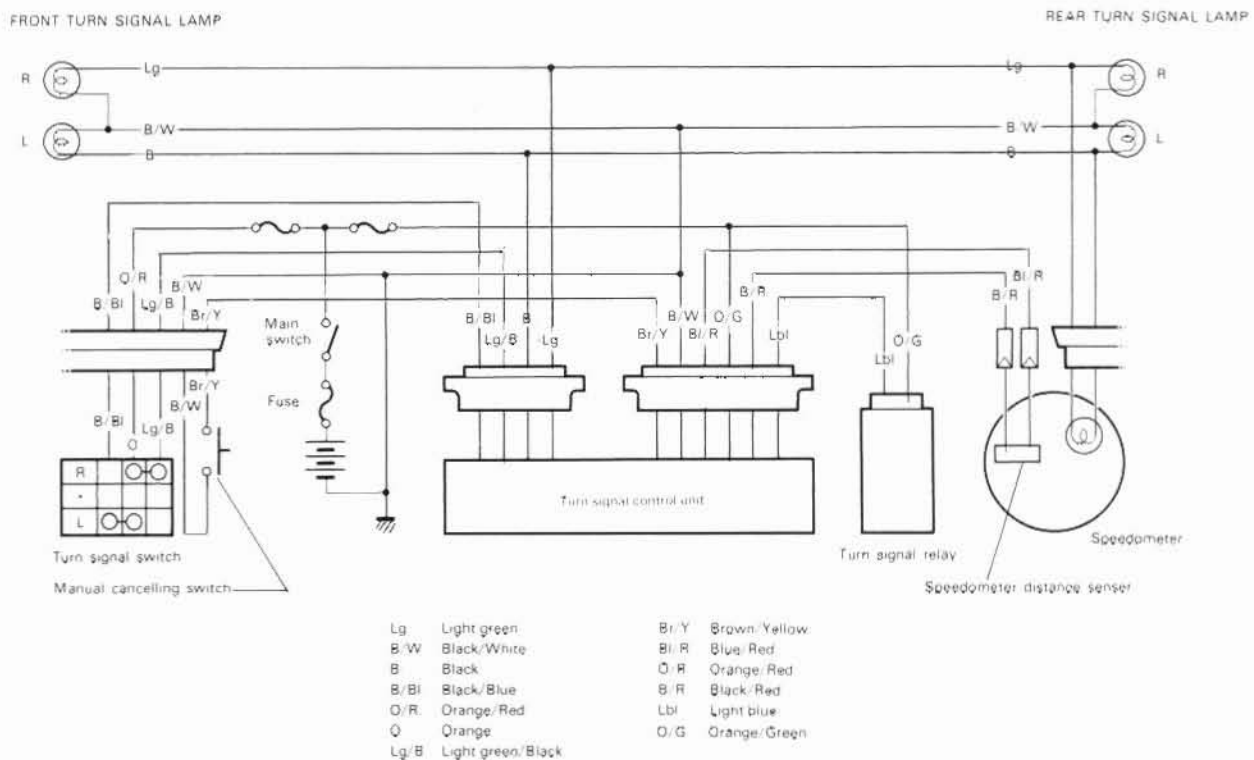


Fig. 10.

OPERATION

- When the Turn Signal Knob is switched to LEFT or RIGHT, the turn signal lamp starts flashing.
 - If the motorcycle speed is faster than 15 km/h (9.3 mph), flashing will be switched off automatically about 9 sec after the knob is released.
 - The timer does not operate when the motorcycle stops or runs at a speed slower than 15 km/h.
- Only when the motorcycle runs at speeds

faster than 15 km/h does the timer operate to switch the turn signal off automatically when the total time above that speed exceeds 9 sec.

- When the Turn Signal Knob is switched on again before it is turned off automatically, flashing will go off 9 sec after this time at speeds faster than 15 km/h.
- Flashing can be switched off before it goes off automatically, by pressing the Turn Signal Knob downward.

TROUBLE SHOOTING

Refer to Circuit Diagram, and check the operation at 1 the lead connector of the left handle switch (Turn Signal Knob), 2 the lead of Turn Signal Relay, and 3 the lead of Speed Sensor, according to the following procedure:



Fig. 11.



Fig. 12.



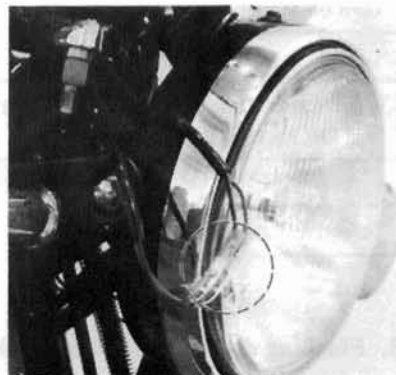


Fig. 13.

1. The turn signal lamp does not flash.

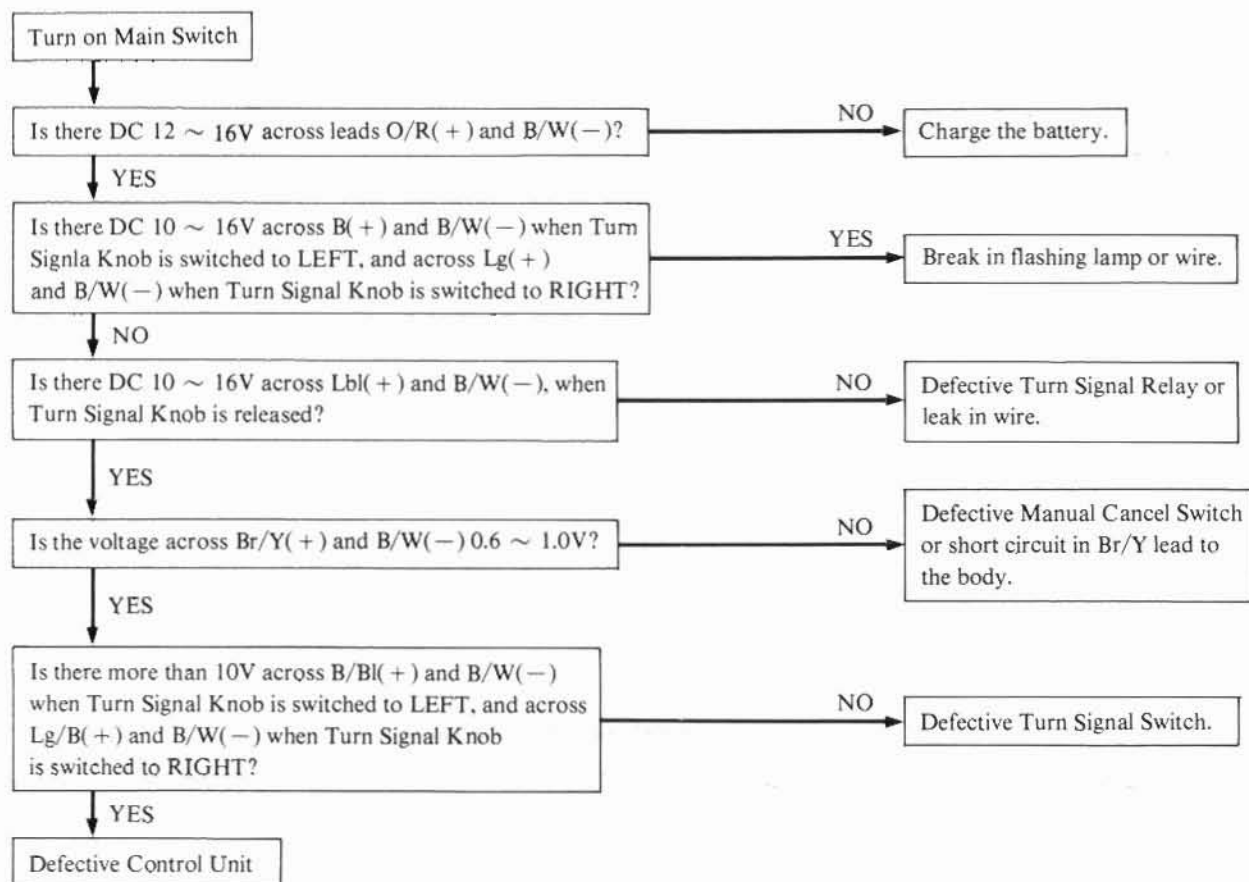

2. The turn signal lamp lights continuously (does not flash).

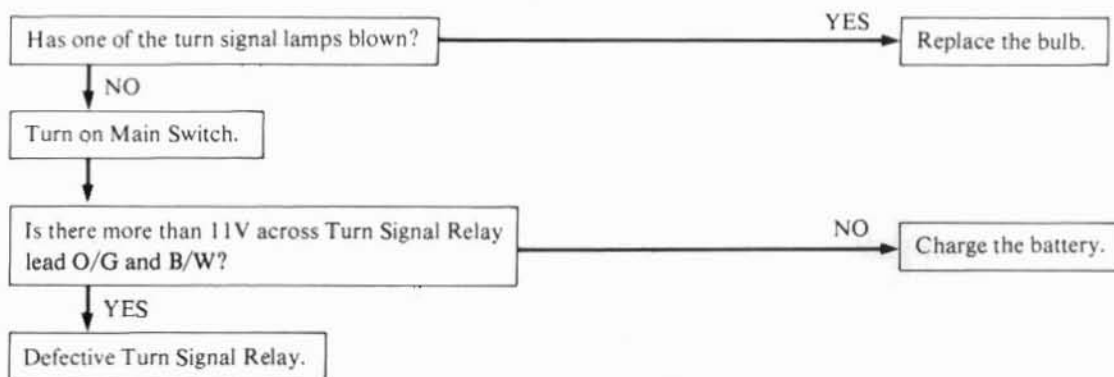

3. Flashing does not go off after 9 ± 1 sec at speeds faster than 14 ± 5 km/h

Check Turn Signal Switch, Speed Sensor, and the speedometer cable in the following manner. If they are found to be normal, Control Unit may be defective.

3-1. Turn Signal Switch

Disconnect wires coming from Control Unit at the harness connector.

Using a multimeter check that continuity is obtained, between leads O/G and B/Bl when Turn Signal Knob is switched to LEFT, and that continuity is not obtained when the knob is released. Continuity should be obtained between O/G and Lg/B when Turn Signal Knob is switched to RIGHT, and not obtained when the knob is released.

If above conditions are satisfied, Turn Signal Switch is normal.

3-2. Speed Sensor

Remove the meter cable from the speedometer.

Insert a minus screwdriver in the boss of the meter, and slowly turn the screwdriver one turn.

If continuity/no continuity is obtained between leads B/R and Bl/R few times alternatively, i.e. for ON/OFF, ON/OFF, ON/OFF, ON/OFF, then speed sensor is normal.

CAUTION:


The lead relay used in the Speed Sensor is rated at 10 mA max.



Do not exceed the rated current when checking continuity, otherwise contacts may be damaged.

- Check speedometer cable and driving components.


4. Flashing does not go off when Manual Cancel Switch is pressed.

- Check that continuity between leads B/W and Br/Y is obtained when Manual Cancel Switch is pressed.

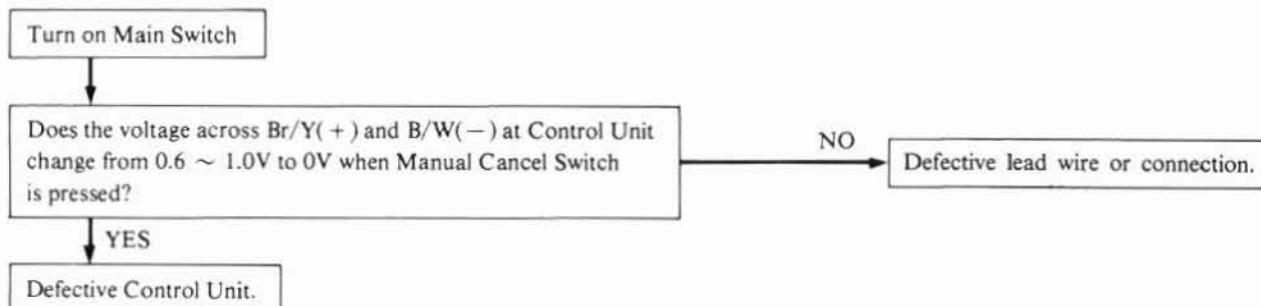

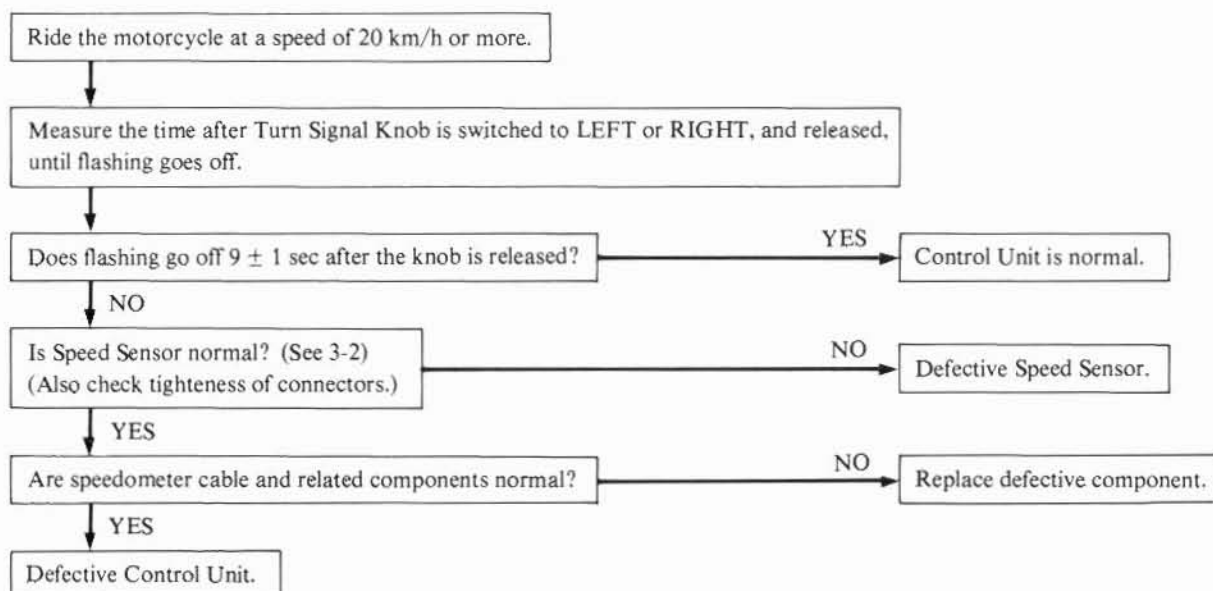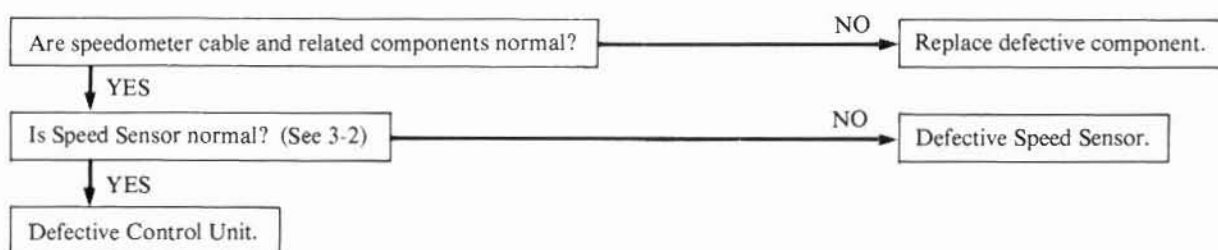5. Flashing goes off before 9 ± 1 sec.**6. Flashing does not go off at the speed of 14 ± 5 km/h or more.**

WIRING DIAGRAM

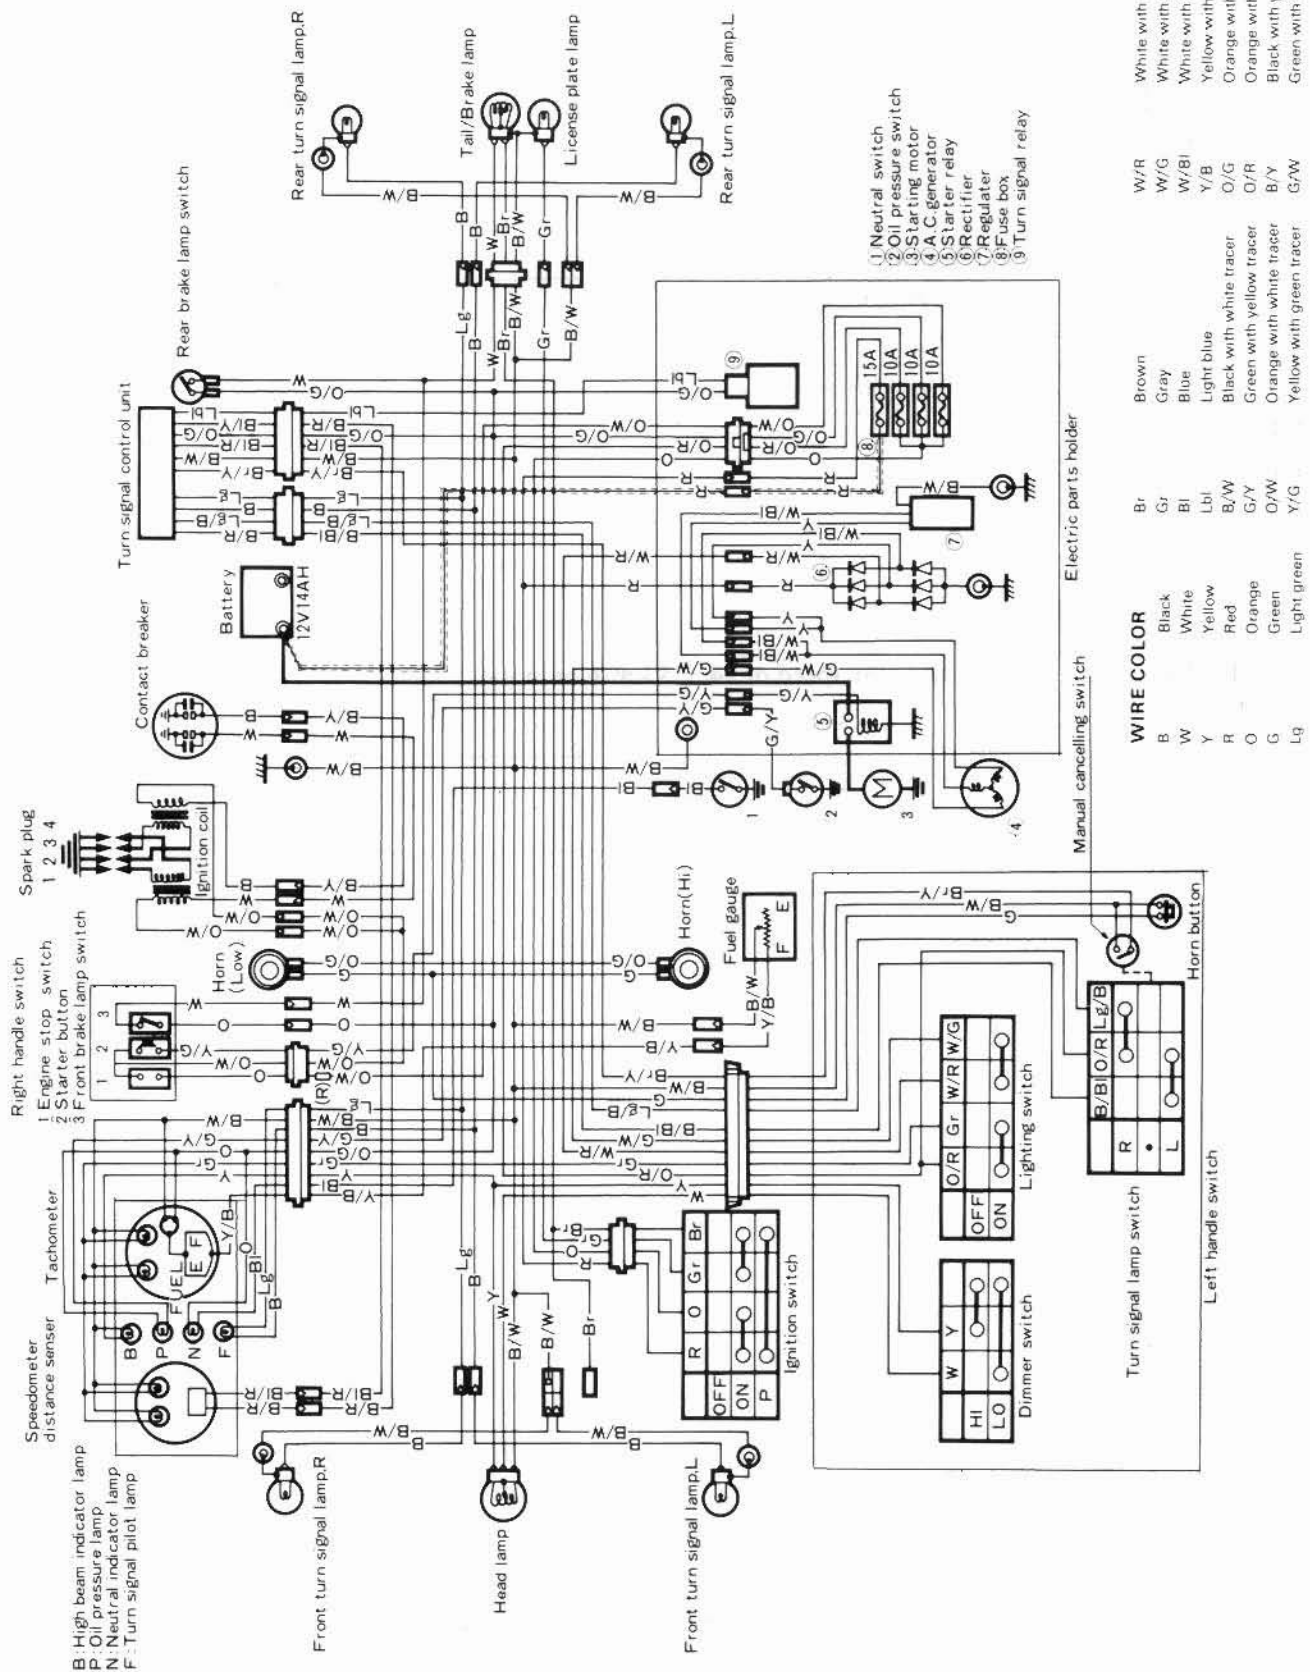

SUZUKI

GS1000

SUPPLEMENTARY SERVICE MANUAL

GS1000S


CONTENTS

GENERAL INFORMATION.....	13-3
SPECIFICATIONS.....	13-3
SERVICE DATA	13-5
PERIODIC MAINTENANCE	13-12
ENGINE REMOVAL	13-12
CARBURETOR REMOVAL.....	13-12
FUEL SYSTEM	13-13
CARBURETOR DISASSEMBLY	13-13
CHASSIS	13-14
HANDLEBAR	13-14
CHOKE CABLE.....	13-14
CLUTCH CABLE.....	13-14
COWLING	13-15
COMBINATION METER.....	13-16
TUBE AND TIRE	13-17
ELECTRICAL	13-19
COMBINATION METER.....	13-19
POWER SOURCE TERMINAL.....	13-21
WIRE AND CABLE ROUTING.....	13-22
WIRING DIAGRAM	13-24

This manual gives only servicing procedures which differ from those of the GS1000 and describes the new features of the GS1000S.

For the GS1000S servicing procedures of the following parts, refer to the GS1000E manual.

- FRONT BRAKE
- WHEELS
- SELF-CANCELLING TURN SIGNAL

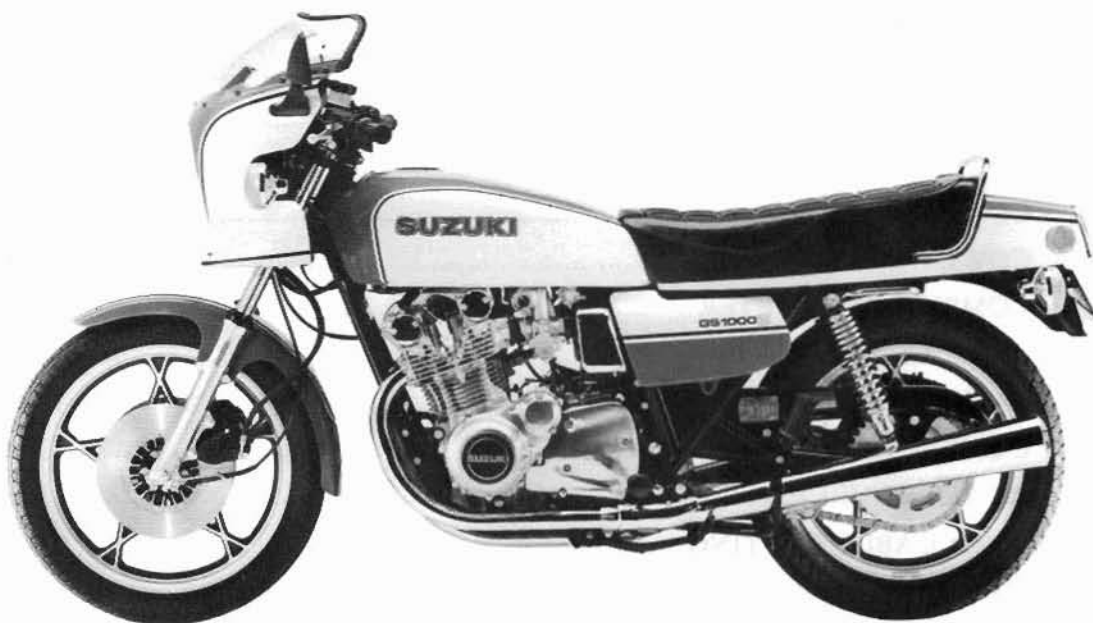

GS1000S

GENERAL INFORMATION

SPECIFICATIONS

DIMENSIONS AND WEIGHT

Overall length	2 225 mm (87.6 in)
Overall width	735 mm (28.9 in)
Overall height	1 255 mm (49.4 in)
Wheelbase	1 505 mm (59.3 in)
Ground clearance	160 mm (6.3 in)
Seat height	840 mm (33.1 in)
Dry mass (weight)	238 kg (525 lbs)

ENGINE

Type	Four-stroke cycle, air-cooled, DOHC
Number of cylinders	4
Bore	70.0 mm (2.756 in) <i>73 mm</i>
Stroke	64.8 mm (2.551 in)
Piston displacement	997 cm ³ (60.8 cu.in) <i>1100</i>
Compression ratio	9.2 : 1 <i>10.45</i>
Carburetor	MIKUNI VM26SS, four <i>small MIKUNI 29</i>
Air cleaner	Paper element <i>K+N</i>
Starter system	Electric
Lubrication system	Wet sump

TRANSMISSION

Clutch	Wet multi-plate type
Transmission	5-speed constant mesh
Gearshift pattern	1-down 4-up
Primary reduction	1.775 (87/49)
Final reduction	2.800 (42/15)
Gear ratios, Low	2.500 (35/14)
2nd	1.777 (32/18)
3rd	1.380 (29/21)
4th	1.125 (27/24)
Top	0.961 (25/26)
Drive chain	DAIDO D.I.D. 630YL, 96 links

CHASSIS

Front suspension	Telescopic, pneumatic/coil spring, oil dampened
Rear suspension	Swinging arm, oil dampened, damper 4-way/spring 5-way adjustable
Steering angle	40° (right and left)
Caster	63°00'
Trail	116 mm (4.57 in)
Turning radius	2.50 m (8.2 ft)
Front brake	Disk brake, twin
Rear brake	Disk brake
Front tire size	3.25V19-4PR
Rear tire size	4.00V18-14PR

Front tire pressure	175 kPa (1.75 kg/cm ² , 25 psi) (Normal solo riding)
Rear tire pressure	200 kPa (2.00 kg/cm ² , 28 psi) (Normal solo riding)

ELECTRICAL

Ignition type	Battery Ignition
Ignition timing	17° B.T.D.C. below 1 500 r/min and 37° B.T.D.C. above 2 500 r/min
Spark plug	NGK B8ES or NIPPON DENSO W24ES
Battery	12V 50.4 kC (14 Ah)/10 HR
Generator	Three-phase A.C generator
Fuse	10/10/10/15A

CAPACITIES

Fuel tank including reserve	19 L (5.0/4.2 US/Imp gal)
reserve	4.0 L (1.1/0.9 US/Imp gal)
Engine oil tank	3.4 L (3.6/3.0 US/Imp qt)
Front fork oil	259 ml (8.75/9.12 US/Imp oz)

SERVICE DATA

Valves + Guides

Unit: mm (in)

Item		Standard	Service Limit
Valve Lift	IN	8.0 (0.31)	—
	EX	7.5 (0.30)	—
Tappet Clearance or Valve Clearance (cold engine)	IN	0.03 — 0.08 (0.001 — 0.003)	
	EX	0.03 — 0.08 (0.001 — 0.003)	
Valve Guide — Valve Stem Clearance	IN	0.025 — 0.055 (0.0009 — 0.0022)	0.090 (0.0035)
	EX	0.040 — 0.070 (0.0016 — 0.0028)	0.100 (0.0039)
Valve Guide I.D.	IN/EX	7.000 — 7.015 (0.2756 — 0.2762)	—
Valve Stem O.D.	IN	6.960 — 6.975 (0.2740 — 0.2746)	—
	EX	6.945 — 6.960 (0.2734 — 0.2740)	—
Valve Stem Deflection	IN/EX	—	0.05 (0.002)
Valve Head Thickness	IN/EX	—	0.5 (0.02)
Valve Seat Width	IN/EX	1.1 — 1.3 (0.04 — 0.05)	
Valve Head Radial Runout	IN/EX	—	0.03 (1.33)
Valve Spring Free Length	INNER	35.3 — 37.0 (1.39 — 1.46)	33.9 (1.33)
	OUTER	43.0 — 43.25 (1.69 — 1.70)	41.3 (1.63)
Valve Spring Tension	INNER	29.3 — 34.0 kg/23.0 (64.59 — 74.96 lbs/0.91 in)	—
	OUTER	50.4 — 58.3 kg/27.0 (111.11 — 128.53 lbs/1.06 in)	—

Camshaft

Unit: mm (in)

Item		Standard	Service Limit
Cam Height	IN	36.325 — 36.355 (1.4301 — 1.4313)	36.030 (1.4185)
	EX	35.775 — 35.805 (1.4085 — 1.4096)	35.480 (1.3968)

Unit: mm (in)

Item		Standard	Service Limit
Camshaft — Journal Clearance	IN/EX	0.025 — 0.053 (0.0010 — 0.0021)	0.150 (0.0059)
Camshaft Journal Holder I.D.	IN/EX	22.000 — 22.013 (0.8661 — 0.8667)	—
Camshaft Journal O.D.	IN/EX	21.960 — 21.975 (0.8646 — 0.8652)	—
Camshaft Deflection	IN/EX	—	0.10 (0.004)
Cam Chain 20 Pitch Length		—	157.80 (6.213)

Piston + Ring + Cylinder

Unit: mm (in)

Item		Standard	Service Limit
Compression Pressure		9 — 13 kg/cm ² (128 — 184 psi)	7 kg/cm ² (100 psi)
Difference Between Cylinders		—	2 kg/cm ² (28.5 psi)
Piston — Cylinder Clearance		0.050 — 0.060 (0.0020 — 0.0024)	0.120 (0.0047)
Cylinder Bore		70.000 — 70.015 (2.7559 — 2.7565)	70.080 (2.7590)
Piston Dia./Measurement Point		69.945 — 69.960/15.0 (2.7537 — 2.7543/0.59)	69.880 (2.7512)
Cylinder Warpage		—	0.2 (0.008)
Cylinder Head Warpage		—	0.2 (0.008)
Piston Ring Free End Gap	1st	Approx. 8.5 (0.33)	6.8 (0.27)
	2nd	Approx. 8.5 (0.33)	6.8 (0.27)
Piston Ring End Gap	1st	0.15 — 0.35 (0.006 — 0.014)	0.70 (0.028)
	2nd	0.15 — 0.35 (0.006 — 0.014)	0.70 (0.028)
Piston Ring — Groove Clearance	1st	0.020 — 0.055 (0.0008 — 0.0022)	0.180 (0.0071)
	2nd	0.020 — 0.060 (0.0008 — 0.0024)	0.150 (0.0059)
Piston Ring Groove Width	1st	1.21 — 1.23 (0.047 — 0.048)	—
	2nd	1.21 — 1.23 (0.047 — 0.048)	—
	Oil	2.51 — 2.53 (0.099 — 0.100)	—

Unit: mm (in)

Item		Standard	Service Limit
Piston Ring Thickness	1st	1.175 – 1.190 (0.0463 – 0.0469)	—
	2nd	1.170 – 1.190 (0.0461 – 0.0469)	—
Piston Pin — Pin Bore Clearance		0.002 – 0.013 (0.0001 – 0.0005)	0.120 (0.0047)
Piston Pin Bore I.D.		18.002 – 18.008 (0.7087 – 0.7090)	—
Piston Pin O.D.		17.995 – 18.000 (0.7085 – 0.7087)	—

Crankshaft

Unit: mm (in)

Item	Standard	Service Limit
Con-rod Small End Bore — Piston Pin Clearance	0.002 – 0.013 (0.00008 – 0.00051)	0.080 (0.0031)
Con-rod Small End Bore I.D.	18.006 – 18.014 (0.7089 – 0.7092)	—
Piston Pin O.D.	17.995 – 18.000 (0.7085 – 0.7087)	—
Big End Side Clearance	0.10 – 0.65 (0.004 – 0.026)	1.00 (0.039)
Con-rod Big End Wear	—	0.08 (0.003)
Crankshaft Runout	—	0.05 (0.002)

Oil Pump

Unit: mm (in)

Item	Standard	Service Limit
Oil Pump Reduction Ratio	1.723 (87/49 × 33/34)	
Oil Pressure (for 60°C)	Above 0.1 kg/cm ² (142 psi), Below 0.5 kg/cm ² (7.11 psi) at 3,000 r/min	
Tip Clearance	—	0.20 (0.008)
Outer Rotor Clearance	—	0.25 (0.010)
Side Clearance	—	0.15 (0.006)

Clutch

Unit: mm (in)

Item	Standard	Service Limit
Drive Plate Thickness	2.7 ~ 2.9 (0.10 ~ 0.11)	2.4 (0.09)
Drive Plate Distortion	—	0.2 (0.008)
Driven Plate Thickness	1.6 (0.06)	—
Driven Plate Distortion	—	0.1 (0.004)
Drive Plate Claw Width	15.6 — 15.8 (0.61 — 0.62)	14.8 (0.58)
Clutch Spring Free Length	39.0 — 40.5 (1.54 — 1.59)	37.1 (1.46)
Pri. Drive — Driven Gear Backlash	0 — 0.03 (0 — 0.001)	0.08 (0.003)

Transmission

Unit: mm (in)

Item	Standard	Service Limit
Primary Reduction	1.775 (87/49)	
Final Reduction	2.800 (42/15)	
Gear Ratios	Low	2.500 (35/14)
	2nd	1.777 (32/18)
	3rd	1.380 (29/21)
	4th	1.125 (27/24)
	Top	0.961 (25/26)
Gear Backlash	1st, 2nd and 3rd	0 — 0.04 (0 — 0.002)
	4th and Top	0.05 — 0.10 (0.002 — 0.004)
Shift Fork — Groove Clearance	0.4 — 0.6 (0.016 — 0.024)	0.8 (0.031)
Shift Fork Groove Width	5.45 — 5.55 (0.215 — 0.219)	—
Shift Fork Thickness	4.95 — 5.05 (0.195 — 0.199)	—
Drive Chain Size	D.I.D 630YL, 96 links	

Carburetor

Unit: mm (in)

Item	Specification
Idle r/min	1000 $\pm$ 50 r/min
Carburetor Type	MIKUNI VM26SS
I.D. No.	49020
Bore Size	26 (1.0)
Float Height	24.0 $\pm$ 1.0 (0.94 $\pm$ 0.04)
Fuel level	4.0 $\pm$ 1.0 (0.16 $\pm$ 0.04)
Air Screw	PRE-SET
Cut Away	1.5
Jet Needle	5DL36-3
Pilot Screw	PRE-SET
Pilot AIR Jet	1.2
Pilot Jet	#15
Pilot Outlet	1.5
Needle Jet	0 — 2
By-pass	0.8
Main Jet	#95

Electrical

Unit: mm (in)

Item	Standard	
Ignition Timing	17° B.T.D.C. below, 1500 r/min, 37° B.T.D.C. above, 2500 r/min	
Firing Order	1. 2. 4. 3.	
Spark Plug	NGK B8ES or NIPPON DENSO W24ES	
Spark Plug Gap	0.6 — 0.8 (0.024 — 0.031)	
Contact Point Gap	0.35 ±0.05 (0.014 ±0.002)	
Dwell Angle	180°	
Spark Performance	Over 8 (0.3) at 1 atm	
Condenser Capacity	0.18 ±0.02μF	
Ignition Coil Resistance (Primary)	Approx. 4Ω	
Ignition Coil Resistance (Secondary)	Approx. 15kΩ	
Battery Capacity	12V 50.4 kC (14Ah) 10 HR	
Specific Gravity	1.28 at 20°C	
Regulated Voltage	14.0 — 15.5V	
Fuse Size	15/10/10/10A	
Alternator No-load Data	More than 16.5V (DC) at 5000 r/min	
Starter Motor Brush Length	12 — 13 (0.47 — 0.51)	6 (0.24)

Brake + Wheel

Unit: mm (in)

Item		Standard	Service Limit
Axle Runout	Front and Rear	—	0.25 (0.010)
Brake Disc Thickness	Front	4.8 — 5.2 (0.19 — 0.20)	4.5 (0.18)
	Rear	6.5 — 6.9 (0.26 — 0.27)	6.0 (0.24)
Brake Disc Runout	Front and Rear	—	0.30 (0.012)
Master Cylinder Dia.	Front	15.87 (0.625)	—
	Rear	14.00 (0.551)	—
Master Cylinder Piston Dia.	Front	15.80 (0.622)	—
	Rear	13.96 (0.550)	—
Brake Caliper Cylinder Bore	Front	42.85 (1.687)	—
	Rear	38.18 (1.503)	—
Brake Caliper Piston Dia.	Front	42.82 (1.686)	—
	Rear	38.15 (1.502)	—
Wheel Rim Runout	Radial and Axial	—	2.0 (0.08)
Tire Size	Front	3.25V19-4PR	
	Rear	4.00V18-4PR	
Tire Tread Depth	Front	—	1.6 (0.06)
	Rear	—	2.0 (0.08)

Tire Air Pressure

Cold Inflation Tire Pressure	FRONT						REAR					
	Solo Riding			Dual Riding			Solo Riding			Dual Riding		
	kPa	kg/cm ²	psi	kPa	kg/cm ²	psi	kPa	kg/cm ²	psi	kPa	kg/cm ²	psi
Normal Riding	175	1.75	25	200	2.00	28	200	2.00	28	225	2.25	32
Continuous High Speed Riding	200	2.00	28	225	2.25	32	250	2.50	36	280	2.80	40

Suspension

Unit: mm (in)

Item	Standard	Service Limit
Front Fork Stroke	160 (6.3)	
Rear Wheel Travel	100 (3.9)	
Fork Spring Free Length	351 (13.8)	346 (13.6)
Fork Oil Level	110 (4.3)	
Swinging Arm Pivot Shaft Runout	—	0.3 (0.012)

Capacity

Item	Specification
Fuel Tank Including Reserve	19 L (5.0/4.2 US/Imp gal)
Fuel Tank Including Reserve	4 L (1.1/0.9 US/Imp gal)
Engine Oil	Change: 3.4 L (3.6/3.0 US/Imp qt)
	Filter change: 3.8 L (4.0/3.3 US/Imp qt)
	Overhaul: 4.2 L (4.4/3.7 US/Imp qt)
Front Fork Oil (each leg)	259 ml (8.75/9.12 US/Imp oz)
Front Fork Air Pressure	0.9 kg/cm ² (12.8 psi)
Fuel Type	Unleaded or low-lead type gasoline (85 to 95 octane)
Engine Oil Type	SAE 10W/40
Front Fork Oil Type	SAE 10W/20

PERIODIC MAINTENANCE

CHOKE CABLE ADJUSTMENT

When the choke knob is returned fully, play ① must be 0.5 — 1.0 mm (0.02 — 0.04 in). Loosen lock nut ② and turn the adjuster ③ to obtain the specified play.



Fig. 13-1.

CHOKE KNOB ADJUSTMENT

When the choke knob is pulled, if it is too stiff or too loose, raise seal cover ④ and turn adjuster ⑤. Turning the adjuster clockwise will make the choke knob harder to turn, and vice versa.



Fig. 13-2.

CLUTCH CABLE ADJUSTMENT

Loosen lock nut ⑥ on the clutch lever side and screw in adjuster ⑦ fully in the direction of the clutch lever.

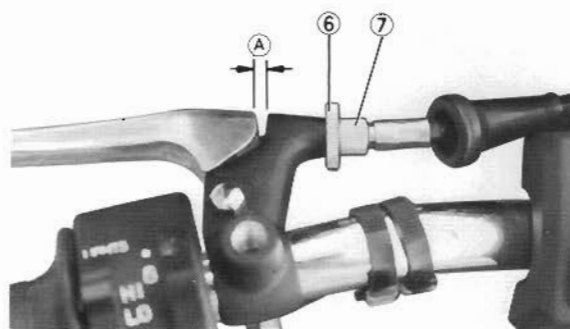


Fig. 13-3.

Remove the fuel tank (refer to Page 13-16) and loosen the lock nut ⑧ of the adjuster located under the left side of the fuel tank.

Turn the adjuster ⑨ so that play A should be 2 — 3 mm (0.08 — 0.10 in) at the clutch lever side.



Fig. 13-4.

ENGINE REMOVAL

CARBURETOR REMOVAL

When removing the carburetor, remove the throttle cable ⑩ and ⑪ together with the choke cable ⑫.

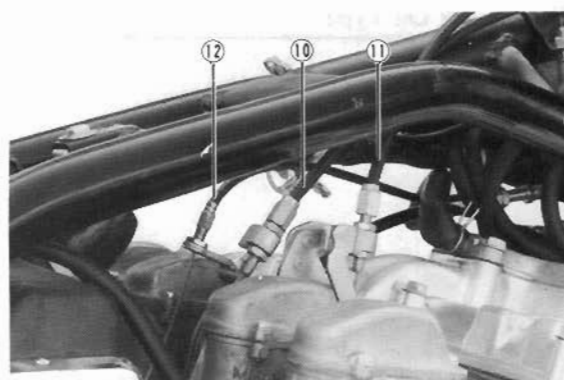


Fig. 13-5.

FUEL SYSTEM

CARBURETOR DISASSEMBLY

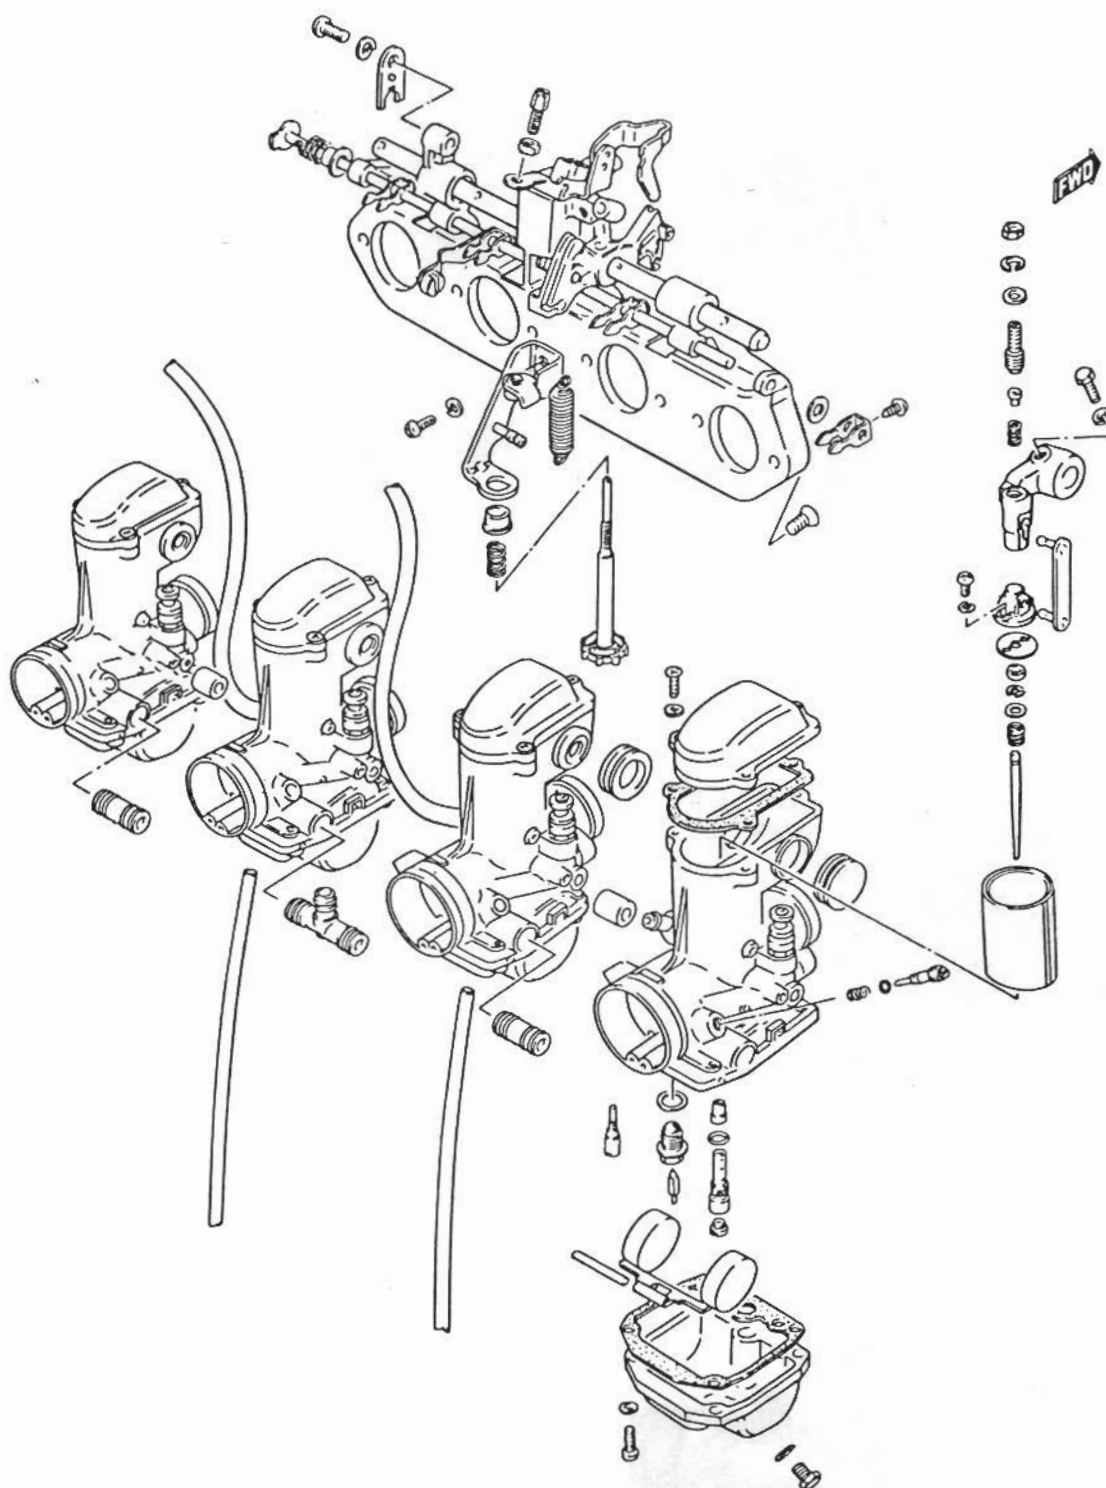


Fig. 13-6.

NOTE:

Although the choke lever has been made obsolete on the carburetor ass'y, the disassembling procedure is the same as that for the GS1000.

CHASSIS

HANDLEBAR

Removal

Before removing the handlebar holders, loosen right and left screws ① and remove the handlebar pad ②.



Fig. 13-7.

CHOKE CABLE

Removal

Raise choke lever ③ and remove cable end ④ from the lever. Pull out the cable end from the cable adjuster.

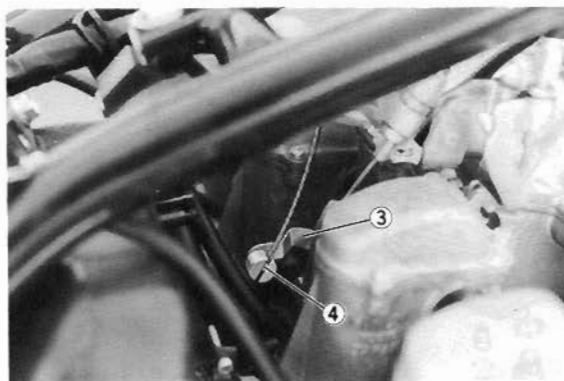


Fig. 13-8.

Remove the handlebar pad, loosen the lock nut ⑤ of the choke knob and turn the choke knob counterclockwise.

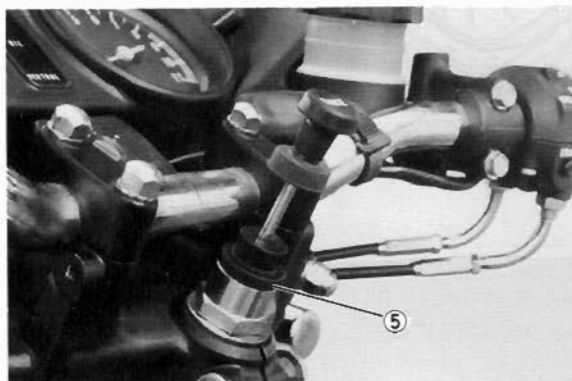


Fig. 13-9.

Installation

Install the choke knob so that the knob direction is as shown in Fig. 13-10.

CAUTION:

Tightening the choke knob body and the lock nut excessively may damage them. Avoid tightening them excessively.

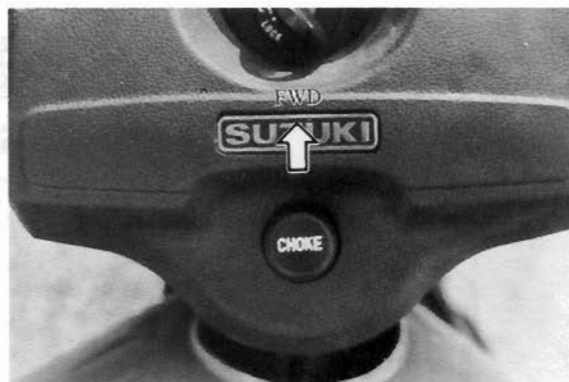


Fig. 13-10.

CLUTCH CABLE

Installation

- Turn the clutch release pinion ⑥ fully in the direction by the arrow.
- Install the clutch release arm ⑦ and the clutch cable ⑧ as shown in Fig. 12-11.
- For cable adjustment, refer to Page 12-12.

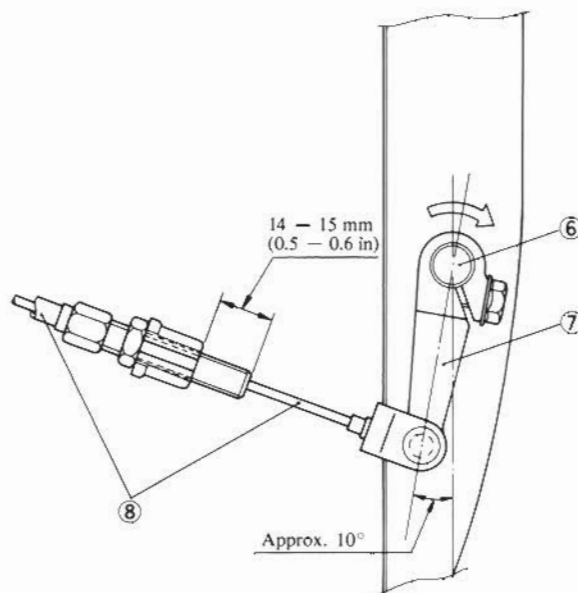


Fig. 13-11.

COWLING

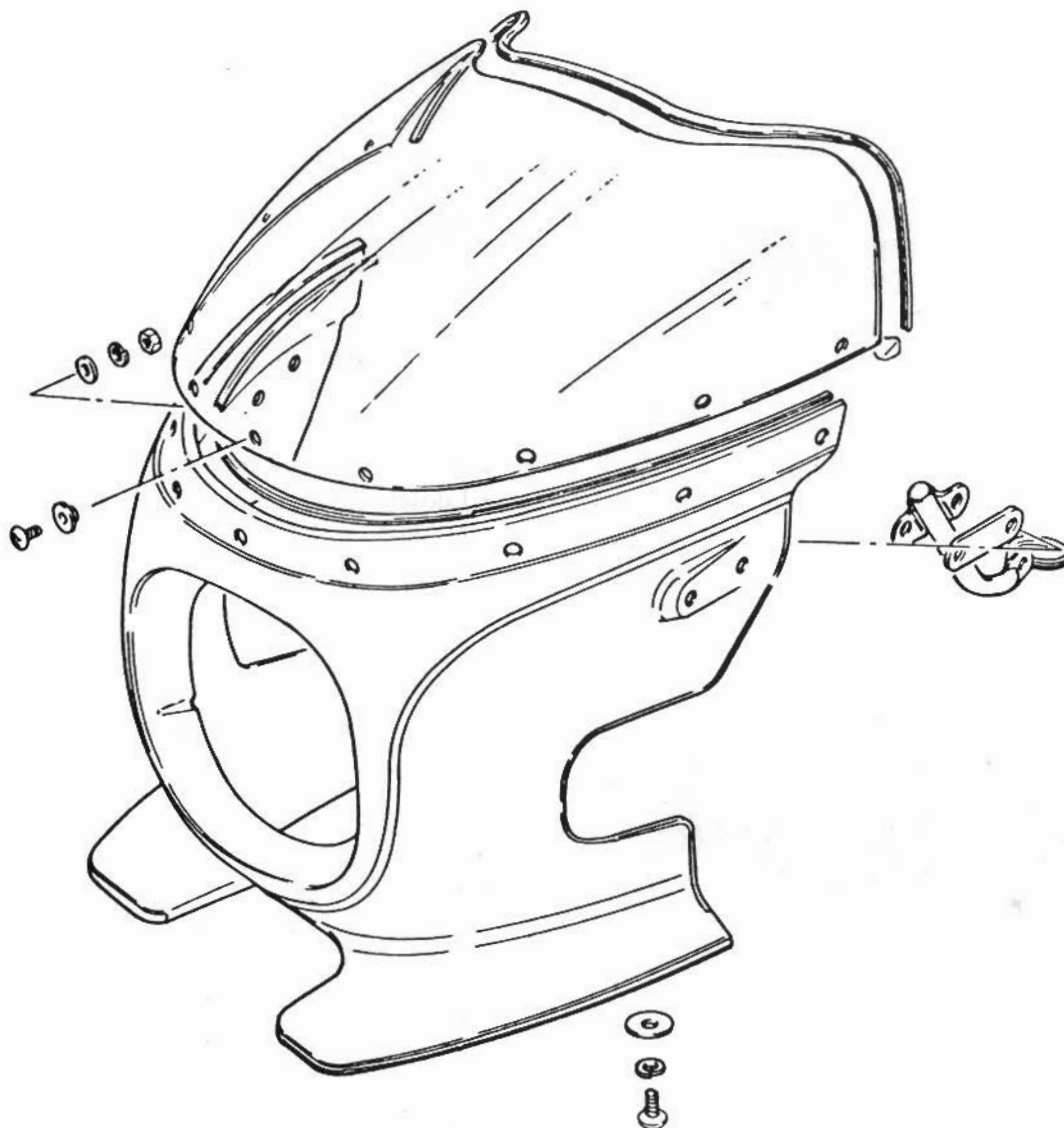


Fig. 13-12.

Removal

- Remove rear view mirror ① with a 5 mm hexagon wrench.
- Loosen the four screws ② located under the right and left sides of the cowlings and remove the cowlings.

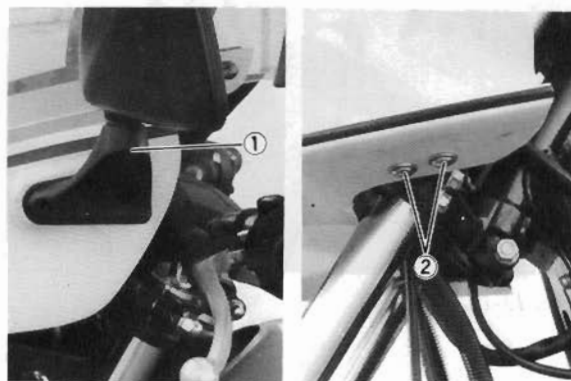


Fig. 13-13.

COMBINATION METER

Removal

- Disconnect the lead wires from the fuel gauge.

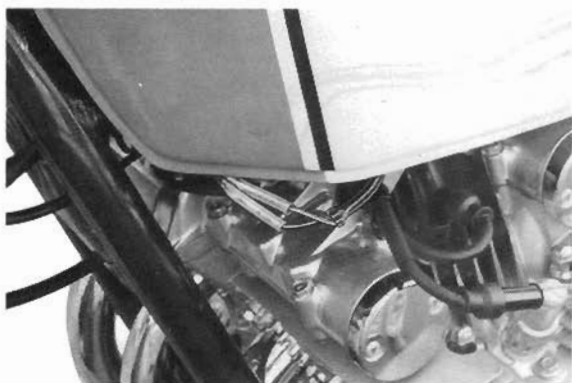


Fig. 13-14.

- Turn the fuel cock to the ON or RES position and remove the fuel hose and vacuum hose.

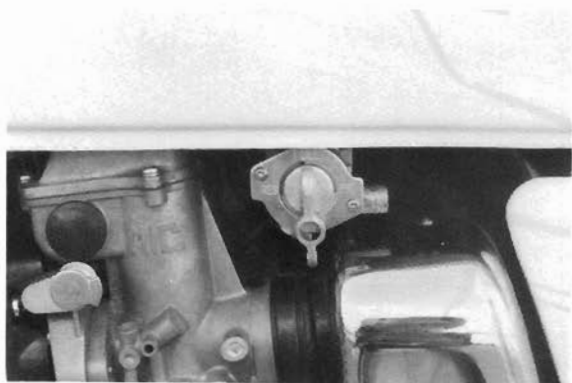


Fig. 13-15.

- Open the seat and loosen the fuel tank retaining bolt ①.
- Remove fuel tank.

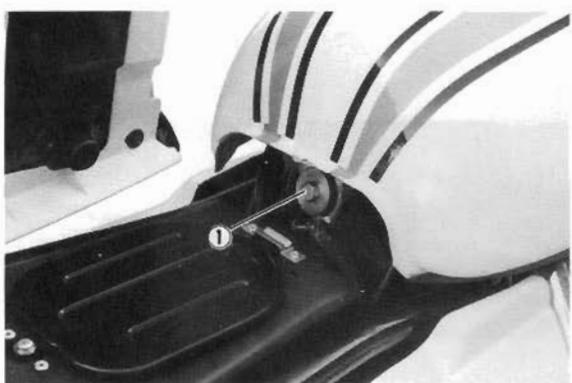


Fig. 13-16.

- Disconnect the lead wires ② from the combination meter

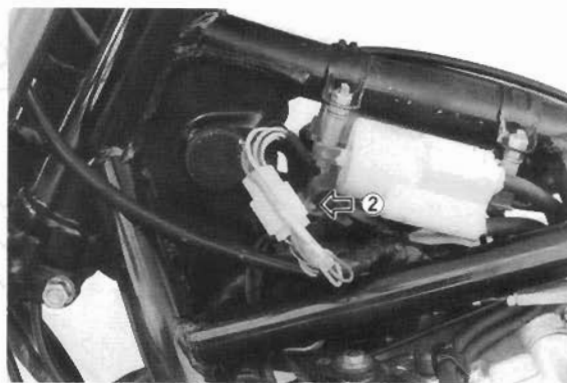


Fig. 13-17.

- Remove the cowl (refer to Cowling item).
- Loosen the three screws ③ and remove the headlight.
- Remove the wires from the headlight housing.
- Loosen the right and left headlight housing retaining screws ④ and remove the headlight housing.

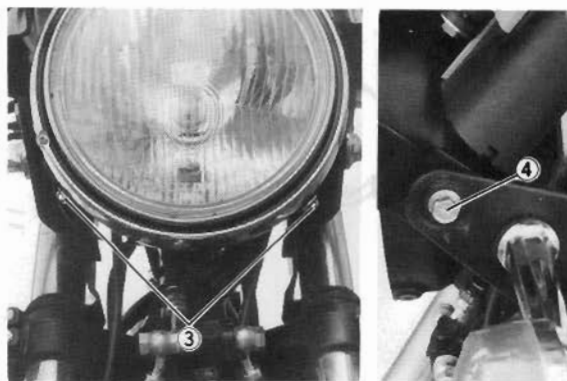


Fig. 13-18.

- Remove the speedometer and tachometer cables ⑤.
- Loosen the two bolts ⑥ and remove the combination meter ass'y.

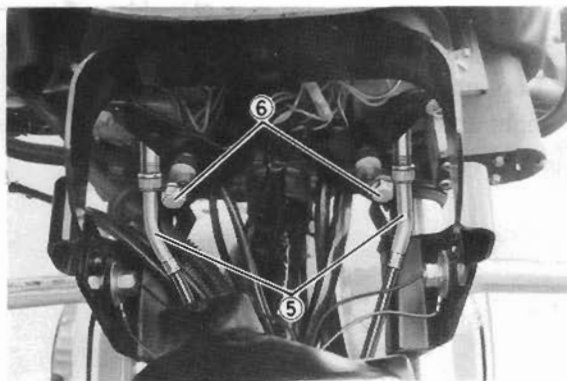


Fig. 13-19.

Installation

- Install the combination meter in the steering stem upper bracket as shown in Fig. 13-20.

NOTE:

The right side of part (A) shown in the figure is the brake hose guide and the left side is the washer.

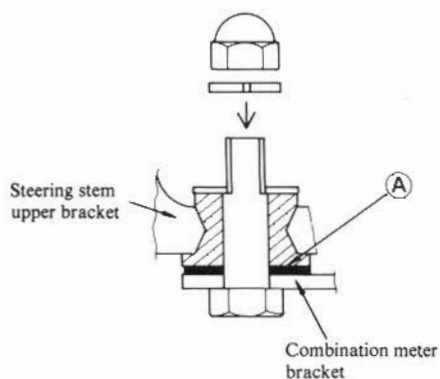


Fig. 13-20.

NOTE:

After installing the cowling, align the beam in the horizontal plane and adjust the angle of the beam in the vertical plane. For this adjustment, refer to Page 9-5.

TUBE AND TIRE**Removal**

- Mark the position of the valve stem and rotational direction of the tires with chalk.
- Remove the valve cap and let out the air.
- Remove the valve fastening nut and fully loosen the bead protector nut.



Fig. 13-21.

- Step on the tire bead, push it down as shown below, install the five wheel rim protectors (special tools) on the wheel.

Wheel rim protector	09941-94510
Tire lever	09825-00002



Fig. 13-22.

- Using flat tire levers, work the tire bead over the rim, starting near the valve stem.

CAUTION:

- 1) Always use the wheel rim protectors. If not, the tire rim could be damaged by the tire lever.
- 2) The tire lever should be applied over the wheel rim protectors.

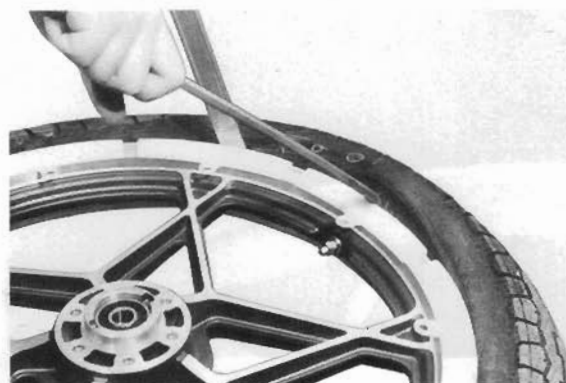


Fig. 13-23.

- Remove the tube.
- Remove the tire from the wheel.



Fig. 13-24.

Mounting

- Inflate the tube sufficiently so that the tube does not fold.
- Press the tube into the tire.
- Push one side of the tire beads into the wheel rim. Be sure that the embossed arrow mark on the tire faces toward the rotational direction of the wheel.

Next, install the tube, insert the valve into the rim, and tighten the valve nut temporarily. An arrow indicating the rotational direction is marked on the rear tire. A yellow mark is provided on the valve portion to aid checking of the tire balance.



Fig. 13-25.



Fig. 13-26.

- Apply soapy water to the tire bead.
- Hook the bead protector on the bead portion of the tire.
- Fit the rest of the tire using tire levers placing them well away from the valve.

CAUTION:

- 1) *Avoid inserting the tire lever too deeply into the tube (to avoid damaging the tube).*
- 2) *As in tire removal, use the wheel rim protectors.*

- By pushing the tire, confirm that the tube is not caught between the rim and tire.
- Inflate the tire to the specified pressure (see Page 13-10).
- Tighten the bead protector nut and then the valve nut.
- Mount the valve cap.

ELECTRICAL

COMBINATION METER

Disassembly

- When replacing the bulbs, remove the combination meter. For removal of the combination meter, refer to Page 13-16.

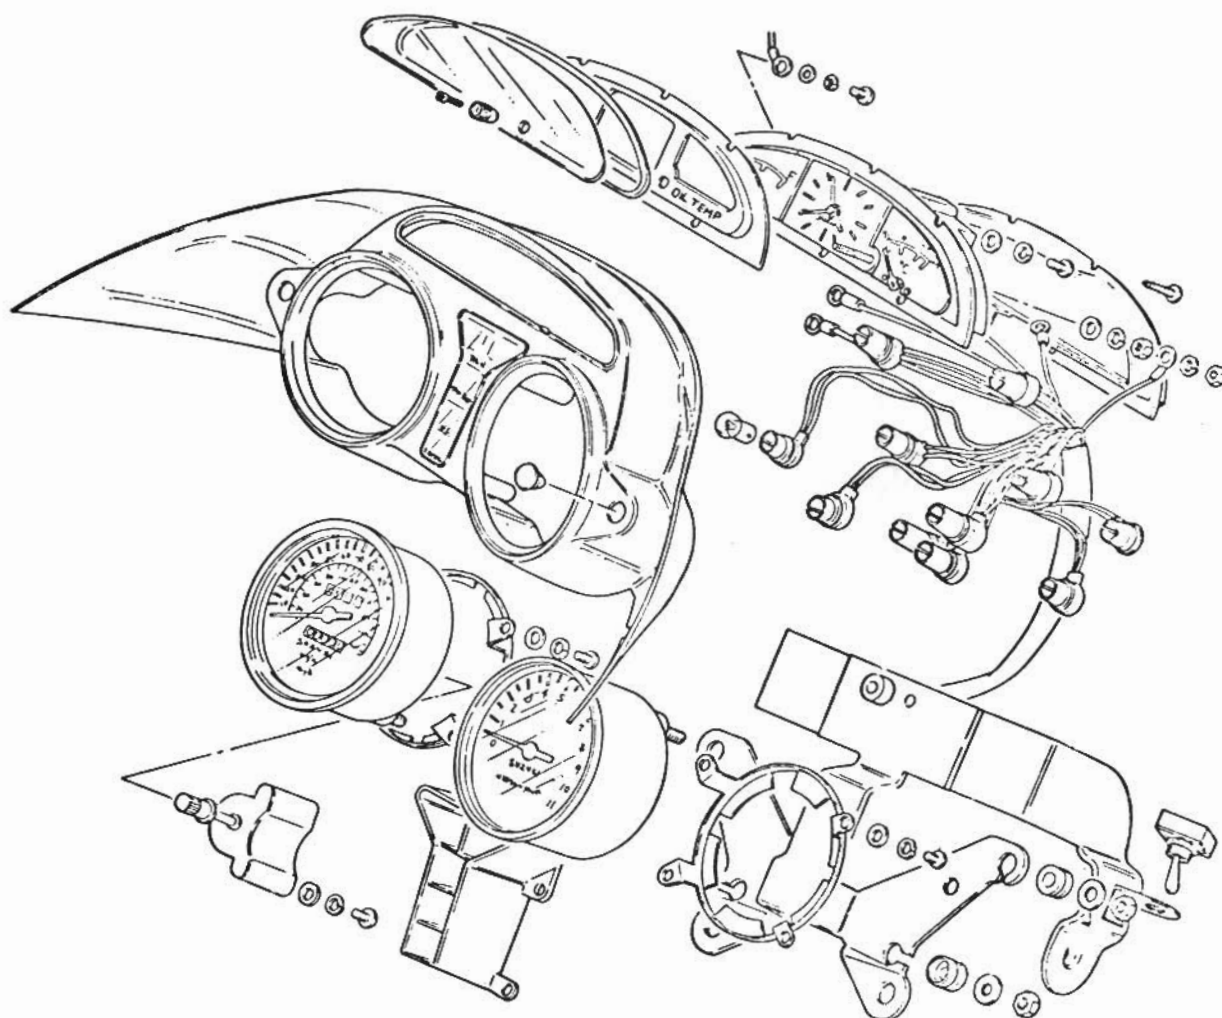


Fig. 13-27.

Assembly

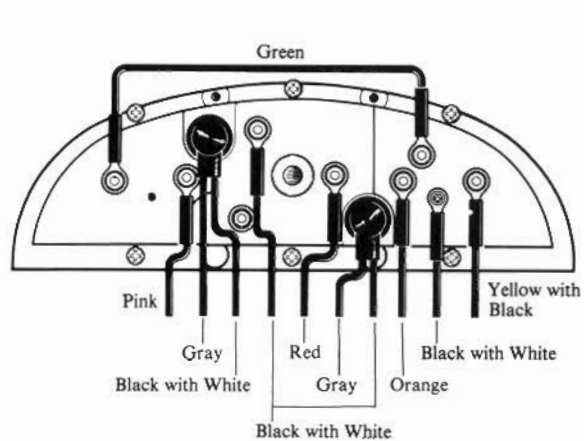


Fig. 13-28.

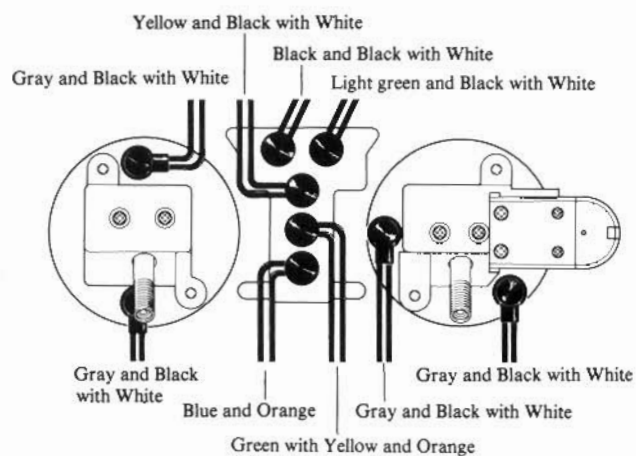


Fig. 13-29.

Inspection of fuel meter and oil temperature meter.

- As shown in Fig. 13-30, the oil meter is connected in parallel with the same fuel meter used in the GS1000.

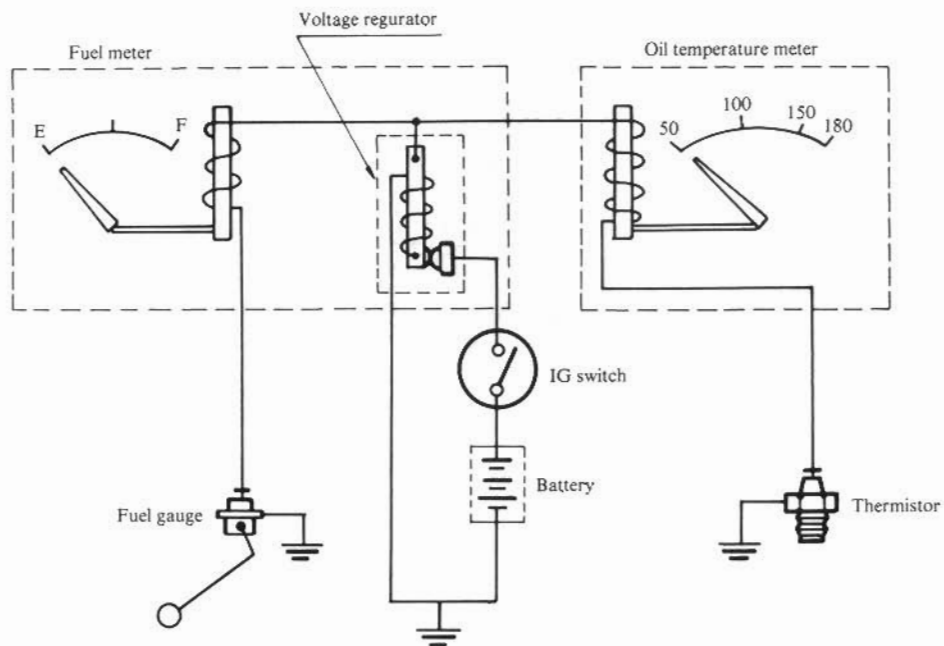


Fig. 13-30.

- The oil temperature meter has the same needle mechanism as the fuel meter. The temperature gauge employs a thermistor, the resistance of which decreases with increasing temperature of the engine oil. The current through the thermistor heats a bimetal strip in the meter section, which moves the meter needle.

Checking the thermistor

To check the thermistor measure its resistance. When the temperature of the engine is 10 ~ 30°C (50 — 86°F) the resistance of the thermistor should be 300 — 900Ω.

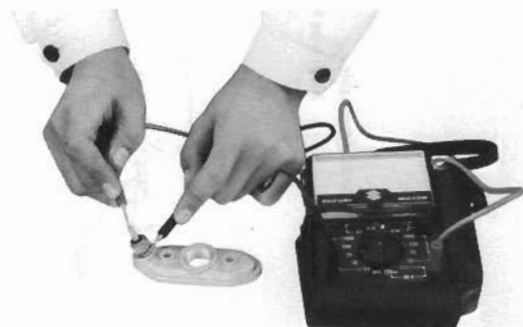


Fig. 13-31.

CAUTION:

When reinstalling the thermistor in the switch housing, apply SUZUKI BOND No. 4 lightly to the threaded portion of the thermistor.

SUZUKI BOND No.4	99000-31030
------------------	-------------

Tightening torque:	8 — 10 N.m (0.8 — 1.0 kg-m) (6.0 — 7.0 lb-ft)
--------------------	---

POWER SOURCE TERMINAL

A vacant power source terminal is provided in the left frame cover. When using optional accessories, supply power from this terminal.


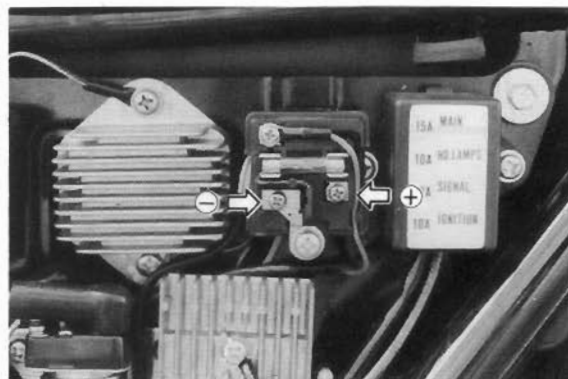


Fig. 13-32.


CAUTION:

Do not install a large capacity optional accessory and do not use the electrical system without operating the engine to prevent the battery running down.





WIRE AND CABLE ROUTING

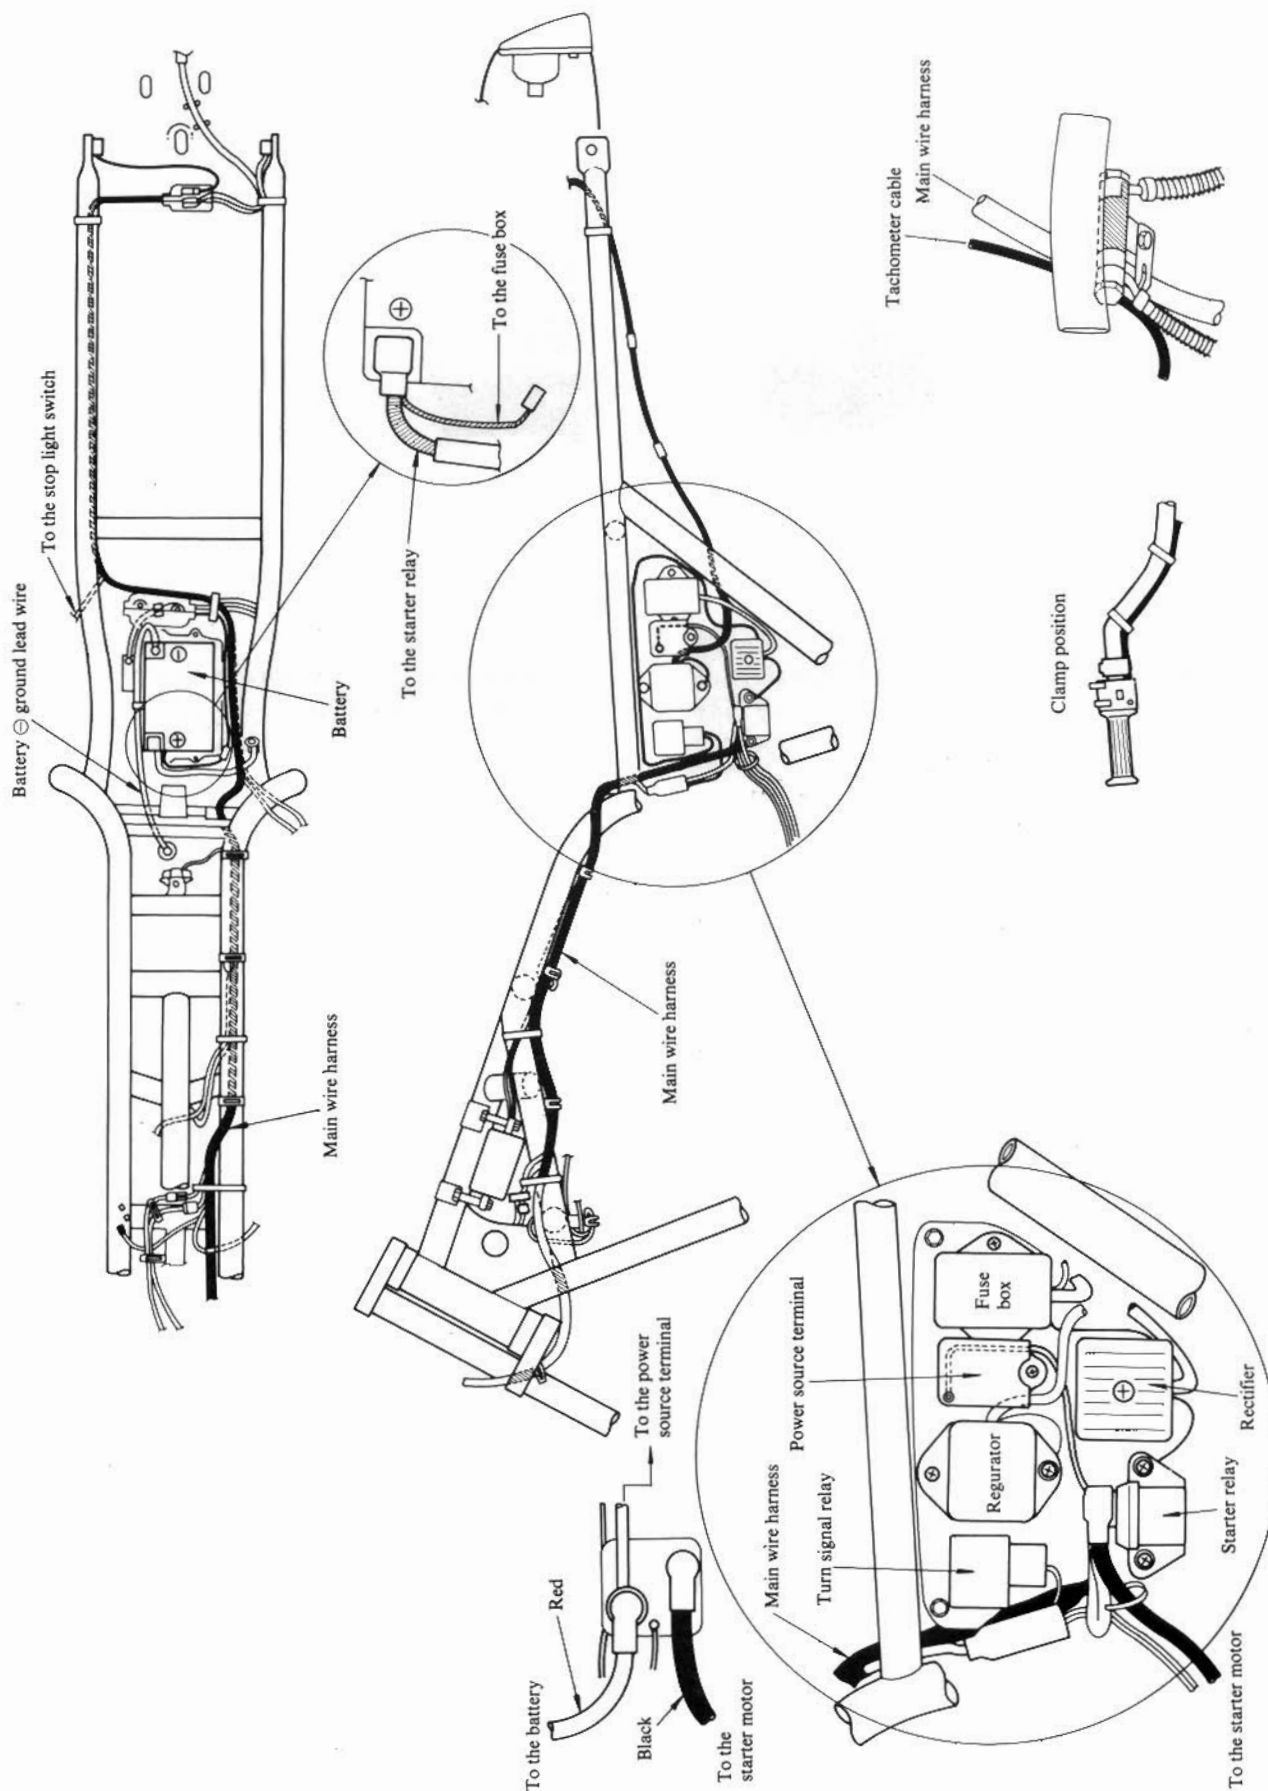


How to set the high-tension cord

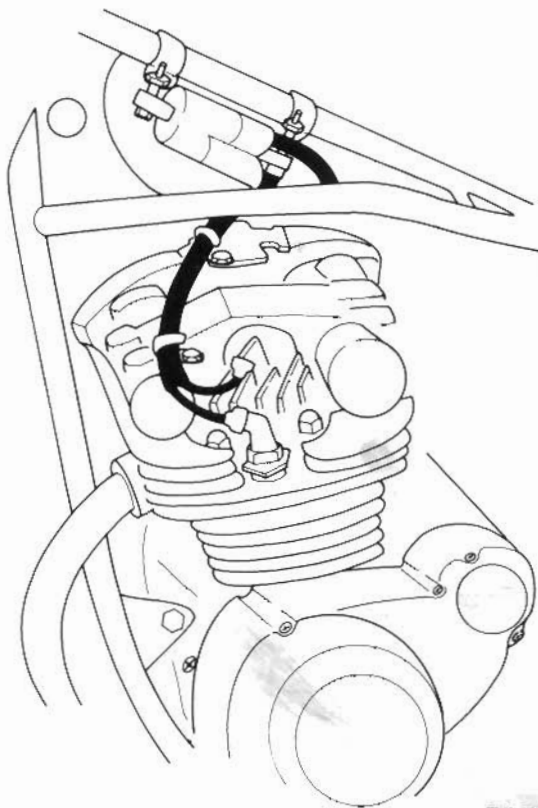

How to set contact breaker lead wire

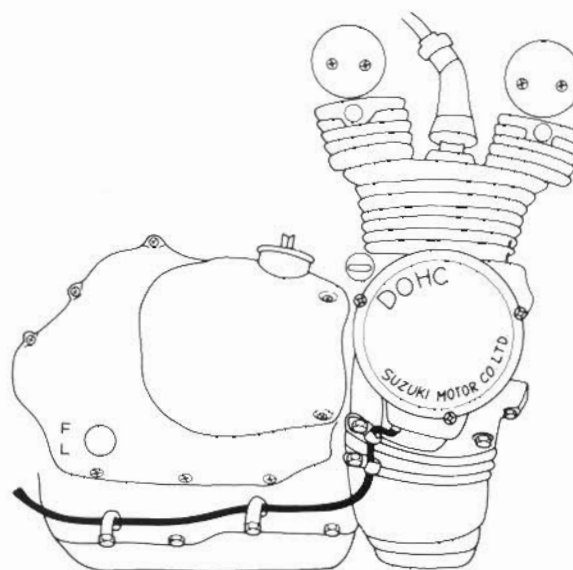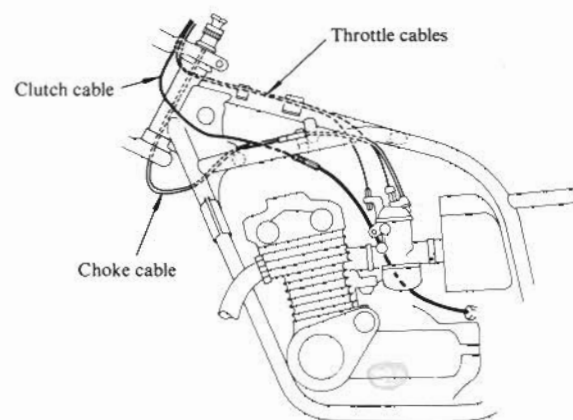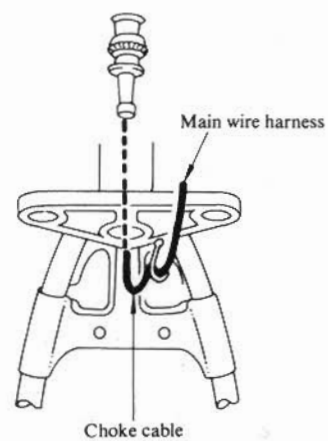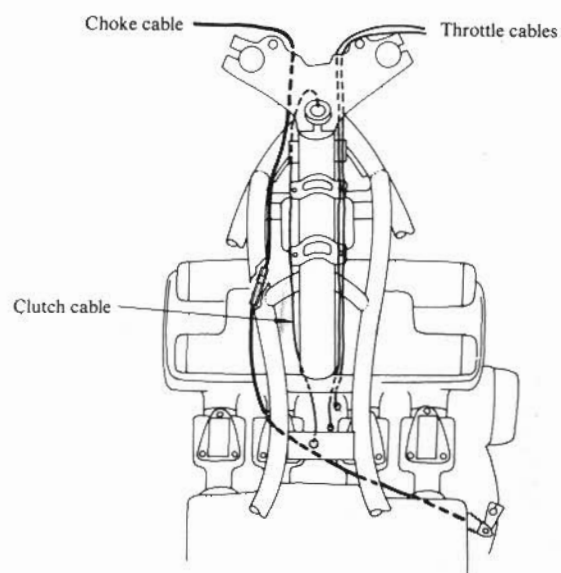**CABLE ROUTING**

WIRING DIAGRAM

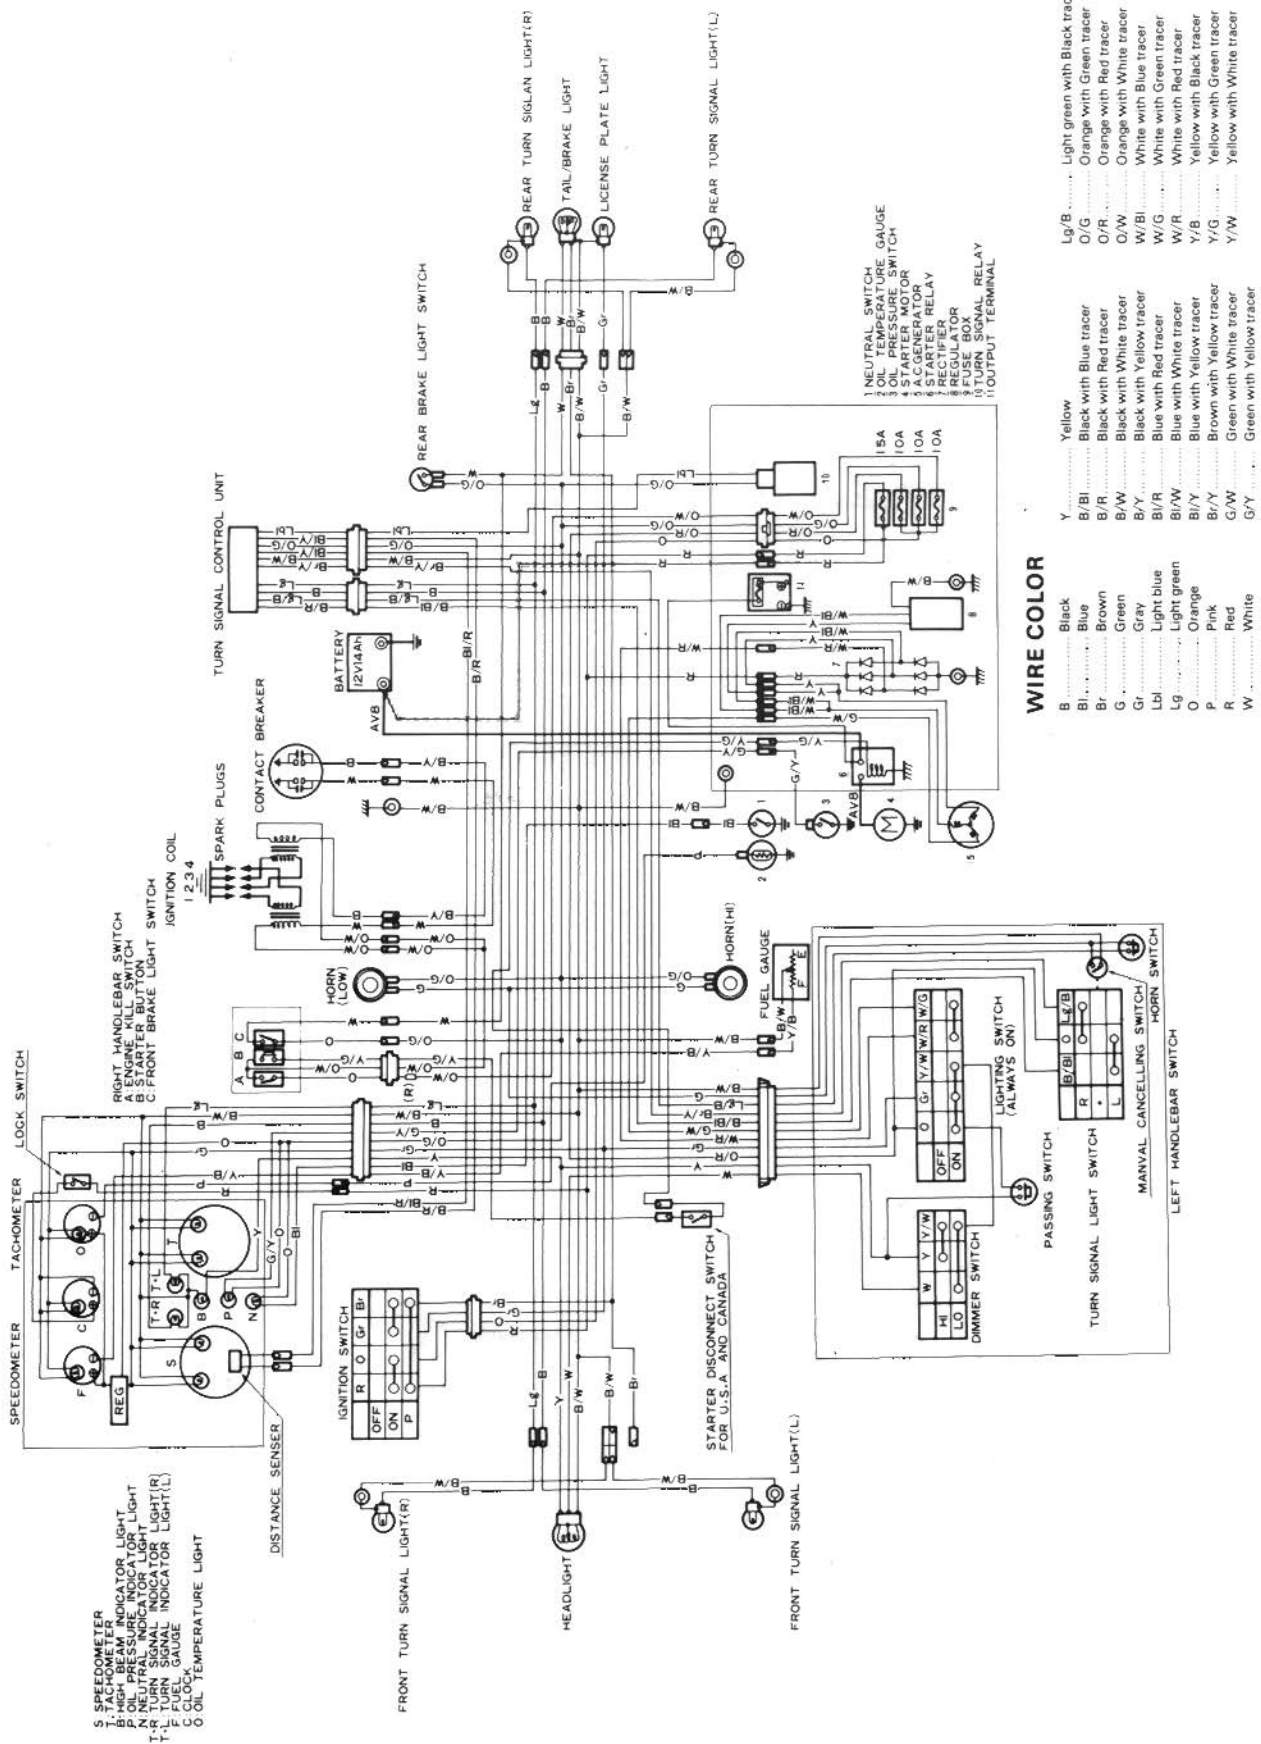

SUZUKI

GS1000

SUPPLEMENTARY SERVICE MANUAL

GS1000L

CONTENTS

GENERAL INFORMATION	14- 3
SPECIFICATIONS	14- 3
SERVICE DATA	14- 5
PERIODIC MAINTENANCE	14-12
CHASSIS BOLTS AND NUTS	14-12
FUEL LINE	14-14
CHOKE CABLE ADJUSTMENT	14-14
CHOKE KNOB ADJUSTMENT	14-14
ENGINE REMOVAL	14-14
CARBURETOR REMOVAL	14-14
FUEL SYSTEM AND CARBURETORS	14-14
FUEL COCK	14-14
CARBURETOR DISASSEMBLY	14-15
CHASSIS	14-16
FRONT FORK	14-16
FRONT WHEEL	14-18
TUBE AND TIRE	14-19
REAR SHOCK ABSORBER	14-20
ELECTRICAL	14-21
GEAR SHIFTING SWITCH AND GEAR	
POSITION INDICATOR	14-21
FUEL GAUGE	14-22
WIRE AND CABLE ROUTING	14-27
WIRING DIAGRAM	14-29

This manual gives only servicing procedures which differ from those of the GS1000 and describes the new features of the GS1000L.

For the GS1000L servicing procedures of the following parts, refer to the GS1000E section.

- FRONT BRAKE
- REAR WHEEL
- SELF-CANCELLING TURN SIGNAL

VIEW OF SUZUKI GS1000L



Right side



Left side

GENERAL INFORMATION

SPECIFICATIONS

DIMENSIONS AND WEIGHT

Overall length	2 265 mm (89.2 in)
Overall width	890 mm (35.0 in)
Overall height	1 245 mm (49.0 in)
Wheelbase	1 535 mm (60.4 in)
Ground clearance	160 mm (6.3 in)
Dry mass (weight)	240 kg (529 lbs)

ENGINE

Type	Four-stroke, air-cooled, DOHC
Number of cylinders	4
Bore	70.0 mm (2.756 in)
Stroke	64.8 mm (2.551 in)
Piston displacement	997 cm ³ (60.8 cu.in)
Compression ratio	9.2 : 1
Carburetor	MIKUNI VM26SS, four
Air cleaner	Paper element
Starter system	Electric
Lubrication system	Wet sump

TRANSMISSION

Clutch	Wet multi-plate type
Transmission	5-speed constant mesh
Gearshift pattern	1-down 4-up
Primary reduction	1.775 (87/49)
Final reduction	2.800 (42/15)
Gear ratios, Low	2.500 (35/14)
2nd	1.777 (32/18)
3rd	1.380 (29/21)
4th	1.125 (27/24)
Top	0.961 (25/26)
Drive chain	DAIDO D.I.D. 630YL, 96 links or TAKASAGO RK 630GSO, 96 links

CHASSIS

Front suspension	Telescopic, pneumatic/coil spring, oil dampened
Rear suspension	Swinging arm, oil dampened, damper 4-way/spring 5-way adjustable
Steering angle	40° (right and left)
Caster	61°00'
Trail	111 mm (4.37 in)
Turning radius	2.6 m (8.5 ft)
Front brake	Disk brake, twin
Rear brake	Disk brake
Front tire size	3.50V 19-4PR
Rear tire size	4.50V 17-4PR

Front tire pressure	175 kPa (1.75 kg/cm ² , 25 psi) (Normal solo riding)
Rear tire pressure	200 kPa (2.00 kg/cm ² , 28 psi) (Normal solo riding)

ELECTRICAL

Ignition type	Battery Ignition
Ignition timing	17° B.T.D.C. below 1 500 r/min and 37° B.T.D.C. above 2 500 r/min
Spark plug	NGK B8ES or NIPPON DENSO W24ES
Battery	12V 50.4 kC (14 Ah)/10 HR FURUKAWA 12N14-3A, YUASA 12N14-3A
Generator	Three-phase A.C. generator
Fuse	15/10/10/10A
Headlight	12V 60/55W
Tail/Brake light	12V 8/23W (3/32 cp)
Turn signal light	12V 23W (32 cp)
Speedometer light	12V 3.4W
Tachometer light	12V 3.4W
Neutral indicator light	12V 3.4W
High beam indicator light	12V 3.4W
Turn signal indicator light	12V 3.4W
Oil pressure light	12V 3.4W
Gear position indicator light	12V 1.1W

CAPACITIES

Fuel tank including reserve	15 L (4.0 US gal)
reserve	3.0 L (3.2 US qt)
Engine oil tank	3.4 L (3.6 US qt)
Front fork oil	241 ml (8.15 US oz)

* Specifications are subject to change without notice.

SERVICE DATA

Valves + Guides

Unit: mm (in)

Item		Standard	Service Limit
Valve Lift	IN	8.0 (0.31)	—
	EX	7.5 (0.30)	—
Tappet Clearance or Valve Clearance (cold engine)	IN	0.03 — 0.08 (0.001 — 0.003)	
	EX	0.03 — 0.08 (0.001 — 0.003)	
Valve Guide — Valve Stem Clearance	IN	0.025 — 0.055 (0.0009 — 0.0022)	0.090 (0.0035)
	EX	0.040 — 0.070 (0.0016 — 0.0028)	0.100 (0.0039)
Valve Guide I.D.	IN/EX	7.000 — 7.015 (0.2756 — 0.2762)	—
Valve Stem O.D.	IN	6.960 — 6.975 (0.2740 — 0.2746)	—
	EX	6.945 — 6.960 (0.2734 — 0.2740)	—
Valve Stem Deflection	IN/EX	—	0.05 (0.002)
Valve Head Thickness	IN/EX	—	0.5 (0.02)
Valve Seat Width	IN/EX	1.1 — 1.3 (0.04 — 0.05)	
Valve Head Radial Runout	IN/EX	—	0.03 (1.33)
Valve Spring Free Length	INNER	35.3 — 37.0 (1.39 — 1.46)	33.9 (1.33)
	OUTER	43.0 — 43.25 (1.69 — 1.70)	41.3 (1.63)
Valve Spring Tension	INNER	29.3 — 34.0 kg/23.0 mm (64.59 — 74.96 lbs/0.91 in)	—
	OUTER	50.4 — 58.3 kg/27.0 mm (111.11 — 128.53 lbs/1.06 in)	—

Camshaft

Unit: mm (in)

Item		Standard	Service Limit
Cam Height	IN	36.325 — 36.355 (1.4301 — 1.4313)	36.030 (1.4185)
	EX	35.775 — 35.805 (1.4085 — 1.4096)	35.480 (1.3968)

Unit: mm (in)

Item		Standard	Service Limit
Camshaft — Journal Clearance	IN/EX	0.025 — 0.053 (0.0010 — 0.0021)	0.150 (0.0059)
Camshaft Journal Holder I.D.	IN/EX	22.000 — 22.013 (0.8661 — 0.8667)	—
Camshaft Journal O.D.	IN/EX	21.960 — 21.975 (0.8646 — 0.8652)	—
Camshaft Deflection	IN/EX	—	0.10 (0.004)
Cam Chain 20 Pitch Length		—	157.80 (6.213)

Piston + Ring + Cylinder

Unit: mm (in)

Item		Standard	Service Limit
Compression Pressure		9 — 13 kg/cm ² (128 — 184 psi)	7 kg/cm ² (100 psi)
Difference Between Cylinders		—	2 kg/cm ² (28.5 psi)
Piston — Cylinder Clearance		0.050 — 0.060 (0.0020 — 0.0024)	0.120 (0.0047)
Cylinder Bore		70.000 — 70.015 (2.7559 — 2.7565)	70.080 (2.7590)
Piston Dia./Measurement Point		69.945 — 69.960/15.0 (2.7537 — 2.7543/0.59)	69.880 (2.7512)
Cylinder Warp		—	0.2 (0.008)
Cylinder Head Warp		—	0.2 (0.008)
Piston Ring Free End Gap	1st	Approx. 8.5 (0.33)	6.8 (0.27)
	2nd	Approx. 8.5 (0.33)	6.8 (0.27)
Piston Ring End Gap	1st	0.15 — 0.35 (0.006 — 0.014)	0.70 (0.028)
	2nd	0.15 — 0.35 (0.006 — 0.014)	0.70 (0.028)
Piston Ring — Groove Clearance	1st	0.020 — 0.055 (0.0008 — 0.0022)	0.180 (0.0071)
	2nd	0.020 — 0.060 (0.0008 — 0.0024)	0.150 (0.0059)
Piston Ring Groove Width	1st	1.21 — 1.23 (0.047 — 0.048)	—
	2nd	1.21 — 1.23 (0.047 — 0.048)	—
	Oil	2.51 — 2.53 (0.099 — 0.100)	—

Unit: mm (in)

Item	Standard	Service Limit
Piston Ring Thickness	1st 1.175 — 1.190 (0.0463 — 0.0469)	—
	2nd 1.170 — 1.190 (0.0461 — 0.0469)	—
Piston Pin — Pin Bore Clearance	0.002 — 0.013 (0.0001 — 0.0005)	0.120 (0.0047)
Piston Pin Bore I.D.	18.002 — 18.008 (0.7087 — 0.7090)	—
Piston Pin O.D.	17.995 — 18.000 (0.7085 — 0.7087)	—

Crankshaft

Unit: mm (in)

Item	Standard	Service Limit
Con-rod Small End Bore — Piston Pin Clearance	0.002 — 0.013 (0.0001 — 0.0005)	0.080 (0.0031)
Con-rod Small End Bore I.D.	18.006 — 18.014 (0.7089 — 0.7092)	—
Piston Pin O.D.	17.995 — 18.000 (0.7085 — 0.7087)	—
Big End Side Clearance	0.10 — 0.65 (0.004 — 0.026)	1.00 (0.039)
Con-rod Big End Wear	—	0.08 (0.003)
Crankshaft Runout	—	0.05 (0.002)

Oil Pump

Unit: mm (in)

Item	Standard	Service Limit
Oil Pump Reduction Ratio	1.723 (87/49 × 33/34)	
Oil Pressure (for 60°C)	Above 0.1 kg/cm ² (1.42 psi), Below 0.5 kg/cm ² (7.11 psi) at 3,000 r/min	
Tip Clearance	—	0.20 (0.008)
Outer Rotor Clearance	—	0.25 (0.010)
Side Clearance	—	0.15 (0.006)

Clutch

Unit: mm (in)

Item	Standard	Service Limit
Drive Plate Thickness	2.7 — 2.9 (0.10 — 0.11)	2.4 (0.09)
Drive Plate Distortion	—	0.2 (0.008)
Driven Plate Thickness	1.6 (0.06)	—
Driven Plate Distortion	—	0.1 (0.004)
Drive Plate Claw Width	15.6 — 15.8 (0.61 — 0.62)	14.8 (0.58)
Clutch Spring Free Length	39.0 — 40.5 (1.54 — 1.59)	37.1 (1.46)
Pri. Drive — Driven Gear Backlash	0 — 0.03 (0 — 0.001)	0.08 (0.003)

Transmission

Unit: mm (in)

Item	Standard	Service Limit
Primary Reduction	1.775 (87/49)	
Final Reduction	2.800 (42/15)	
Gear Ratios	Low 2nd 3rd 4th Top	2.500 (35/14) 1.777 (32/18) 1.380 (29/21) 1.125 (27/24) 0.961 (25/26)
Gear Backlash	1st, 2nd and 3rd	0 — 0.04 (0 — 0.002)
	4th and Top	0.09 (0.004)
		0.05 — 0.10 (0.002 — 0.004)
		0.15 (0.006)
Shift Fork — Groove Clearance	0.4 — 0.6 (0.016 — 0.024)	0.8 (0.031)
Shift Fork Groove Width	5.45 — 5.55 (0.215 — 0.219)	—
Shift Fork Thickness	4.95 — 5.05 (0.195 — 0.199)	—
Drive Chain Size	D.I.D 630YL or TAKASAGO RK 630GSO, 96 links	

Carburetor

Unit: mm (in)

Item	Specification
Idle r/min	1000 $\pm$ 50 r/min
Carburetor Type	MIKUNI VM26SS
I.D. No.	49050
Bore Size	26 (1.0)
Float Height	24.0 $\pm$ 1.0 (0.94 $\pm$ 0.04)
Fuel level	4.0 $\pm$ 1.0 (0.16 $\pm$ 0.04)
Air Screw	PRE-SET (DO NOT DISTURB)
Cut Away	1.5
Jet Needle	5DL36-3
Pilot Screw	PRE-SET (DO NOT DISTURB)
Pilot AIR Jet	1.2
Pilot Jet	#15
Pilot Outlet	0.6
Needle Jet	0 – 2
By-pass	0.8
Main Jet	#95

Electrical

Unit: mm (in)

Item	Standard	Service Limit
Ignition Timing	17° B.T.D.C. below, 1500 r/min, 37° B.T.D.C. above, 2500 r/min	
Firing Order	1. 2. 4. 3.	
Spark Plug	NGK B8ES or NIPPON DENSO W24ES	
Spark Plug Gap	0.6 – 0.8 (0.024 – 0.031)	
Contact Point Gap	0.35 $\pm$ 0.05 (0.014 $\pm$ 0.002)	
Dwell Angle	180°	
Spark Performance	Over 8 (0.3) at 1 atm	
Condenser Capacity	0.18 $\pm$ 0.02 μ F	
Ignition Coil Resistance (Primary)	Approx. 4 Ω	
Ignition Coil Resistance (Secondary)	Approx. 15k Ω	
Battery Capacity	12V 50.4 kC (14Ah) 10 HR	
Specific Gravity	1.28 at 20°C	
Regulated Voltage	14.0 – 15.5V	
Fuse Size	15/10/10/10A	
Alternator No-load Data	More than 16.5V (DC) at 5000 r/min	
Starter Motor Brush Length	12 – 13 (0.47 – 0.51)	6 (0.24)

Brake + Wheel

Unit: mm (in)

Item		Standard	Service Limit
Axle Runout	Front and Rear	—	0.25 (0.010)
Brake Disk Thickness	Front	4.8 — 5.2 (0.19 — 0.20)	4.5 (0.18)
	Rear	6.5 — 6.9 (0.26 — 0.27)	6.0 (0.24)
Brake Disk Runout	Front and Rear	—	0.30 (0.012)
Master Cylinder Dia.	Front	15.87 (0.625)	—
	Rear	14.00 (0.551)	—
Master Cylinder Piston Dia.	Front	15.80 (0.622)	—
	Rear	13.96 (0.550)	—
Brake Caliper Cylinder Bore	Front	42.85 (1.687)	—
	Rear	38.18 (1.503)	—
Brake Caliper Piston Dia.	Front	42.82 (1.686)	—
	Rear	38.15 (1.502)	—
Wheel Rim Runout	Radial and Axial	—	2.0 (0.08)
Tire Size	Front	3.50V19-4PR	
	Rear	4.50V17-4PR	
Tire Tread Depth	Front	—	1.6 (0.06)
	Rear	—	2.0 (0.08)

Tire Air Pressure

Cold Inflation Tire Pressure	FRONT						REAR					
	Solo Riding			Dual Riding			Solo Riding			Dual Riding		
	kPa	kg/cm ²	psi	kPa	kg/cm ²	psi	kPa	kg/cm ²	psi	kPa	kg/cm ²	psi
Normal Riding	175	1.75	25	175	1.75	25	200	2.00	28	225	2.25	32
Continuous High Speed Riding	200	2.00	28	200	2.00	28	225	2.25	32	280	2.80	40

Carburetor

Unit: mm (in)

Item	Specification
Idle r/min	1000 $\pm$ 50 r/min
Carburetor Type	MIKUNI VM26SS
I.D. No.	49050
Bore Size	26 (1.0)
Float Height	24.0 $\pm$ 1.0 (0.94 $\pm$ 0.04)
Fuel level	4.0 $\pm$ 1.0 (0.16 $\pm$ 0.04)
Air Screw	PRE-SET (DO NOT DISTURB)
Cut Away	1.5
Jet Needle	5DL36-3
Pilot Screw	PRE-SET (DO NOT DISTURB)
Pilot AIR Jet	1.2
Pilot Jet	#15
Pilot Outlet	0.6
Needle Jet	0 – 2
By-pass	0.8
Main Jet	#95

Electrical

Unit: mm (in)

Item	Standard	Service Limit
Ignition Timing	17° B.T.D.C. below, 1500 r/min, 37° B.T.D.C. above, 2500 r/min	
Firing Order	1. 2. 4. 3.	
Spark Plug	NGK B8ES or NIPPON DENSO W24ES	
Spark Plug Gap	0.6 – 0.8 (0.024 – 0.031)	
Contact Point Gap	0.35 $\pm$ 0.05 (0.014 $\pm$ 0.002)	
Dwell Angle	180°	
Spark Performance	Over 8 (0.3) at 1 atm	
Condenser Capacity	0.18 $\pm$ 0.02 μ F	
Ignition Coil Resistance (Primary)	Approx. 4 Ω	
Ignition Coil Resistance (Secondary)	Approx. 15k Ω	
Battery Capacity	12V 50.4 kC (14Ah) 10 HR	
Specific Gravity	1.28 at 20°C	
Regulated Voltage	14.0 – 15.5V	
Fuse Size	15/10/10/10A	
Alternator No-load Data	More than 16.5V (DC) at 5000 r/min	
Starter Motor Brush Length	12 – 13 (0.47 – 0.51)	6 (0.24)

Brake + Wheel

Unit: mm (in)

Item		Standard	Service Limit
Axle Runout	Front and Rear	—	0.25 (0.010)
Brake Disk Thickness	Front	4.8 — 5.2 (0.19 — 0.20)	4.5 (0.18)
	Rear	6.5 — 6.9 (0.26 — 0.27)	6.0 (0.24)
Brake Disk Runout	Front and Rear	—	0.30 (0.012)
Master Cylinder Dia.	Front	15.87 (0.625)	—
	Rear	14.00 (0.551)	—
Master Cylinder Piston Dia.	Front	15.80 (0.622)	—
	Rear	13.96 (0.550)	—
Brake Caliper Cylinder Bore	Front	42.85 (1.687)	—
	Rear	38.18 (1.503)	—
Brake Caliper Piston Dia.	Front	42.82 (1.686)	—
	Rear	38.15 (1.502)	—
Wheel Rim Runout	Radial and Axial	—	2.0 (0.08)
Tire Size	Front	3.50V19-4PR	
	Rear	4.50V17-4PR	
Tire Tread Depth	Front	—	1.6 (0.06)
	Rear	—	2.0 (0.08)

Tire Air Pressure

Cold Inflation Tire Pressure	FRONT						REAR					
	Solo Riding			Dual Riding			Solo Riding			Dual Riding		
	kPa	kg/cm ²	psi	kPa	kg/cm ²	psi	kPa	kg/cm ²	psi	kPa	kg/cm ²	psi
Normal Riding	175	1.75	25	175	1.75	25	200	2.00	28	225	2.25	32
Continuous High Speed Riding	200	2.00	28	200	2.00	28	225	2.25	32	280	2.80	40

Suspension

Unit: mm (in)

Item	Standard	Service Limit
Front Fork Stroke	160 (6.3)	
Rear Wheel Travel	100 (3.9)	
Fork Spring Free Length	541 (21.3)	516 (20.3)
Fork Oil Level	260 (10.2)	
Swinging Arm Pivot Shaft Runout	—	0.3 (0.012)

Capacity

Item	Specification
Fuel Tank Including Reserve	15 L (4.0 US gal)
Reserve	3.0 L (3.2 US qt)
Engine Oil	Change 3.4 L (3.6 US qt)
	Filter Change 3.8 L (4.0 US qt)
	Overhaul 4.2 L (4.4 US qt)
Front Fork Oil (each leg)	241 ml (8.15 US oz)
Front Fork Air Pressure	0.8 kg/cm ² (11.4 psi)
Fuel Type	Should be unleaded or low-lead where they are available.
Engine Oil Type	SAE 10W/40
Front Fork Oil Type	SAE 10W/20

PERIODIC MAINTENANCE

CHASSIS BOLTS AND NUTS

1 000; 6 000; 12 000; 18 000; 24 000 km
600; 4 000; 7 500; 11 000; 15 000 miles

The bolts and nuts listed hereunder are important safety parts. They must be retightened, as necessary, to the specified torque with a torque wrench. (Refer to the next page for the position of the following bolts and nuts on the motorcycle.)

1) Handlebar holder bolt.....	1.2 — 2.0 kg-m (8.5 — 14.5 lb-ft)
2) Steering stem center side nut.....	1.5 — 2.5 kg-m (11.0 — 18.0 lb-ft)
3) Front fork tubes upper pinch bolt (R and L).....	2.0 — 3.0 kg-m (14.5 — 21.5 lb-ft)
4) Steering stem head center nut.....	8.0 kg-m (58.0 lb-ft)
5) Brake hose union bolt.....	1.5 — 2.5 kg-m (11.0 — 18.0 lb-ft)
6) Master cylinder bolt	0.5 — 0.8 kg-m (3.5 — 6.0 lb-ft)
7) Front fork tubes lower pinch bolt (R and L).....	1.5 — 2.5 kg-m (11.0 — 18.0 lb-ft)
8) Caliper bleeder bolt	0.6 — 0.9 kg-m (4.5 — 6.5 lb-ft)
9) Caliper bolt	2.5 — 4.0 kg-m (18.0 — 29.0 lb-ft)
10) Rear torque link nut	2.0 — 3.0 kg-m (14.5 — 21.5 lb-ft)
11) Rear shock absorber nut	2.0 — 3.0 kg-m (14.5 — 21.5 lb-ft)
12) Rear shock absorber bolt	2.0 — 3.0 kg-m (14.5 — 21.5 lb-ft)
13) Rear axle nut	8.5 — 11.5 kg-m (61.5 — 83.0 lb-ft)
14) Swinging arm pivot nut	5.0 — 8.0 kg-m (36.0 — 58.0 lb-ft)
15) Disk bolt	1.5 — 2.5 kg-m (11.0 — 18.0 lb-ft)
16) Front axle pinch nut	1.5 — 2.5 kg-m (11.0 — 18.0 lb-ft)
17) Front axle nut	3.6 — 5.2 kg-m (26.0 — 37.5 lb-ft)

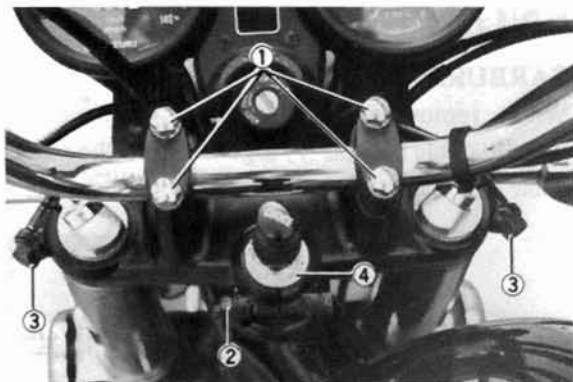


Fig. 14-1.

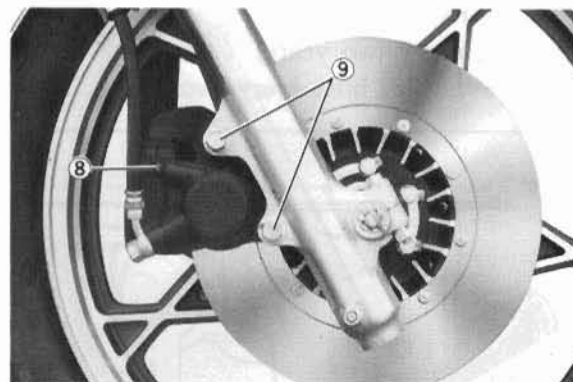


Fig. 14-5.

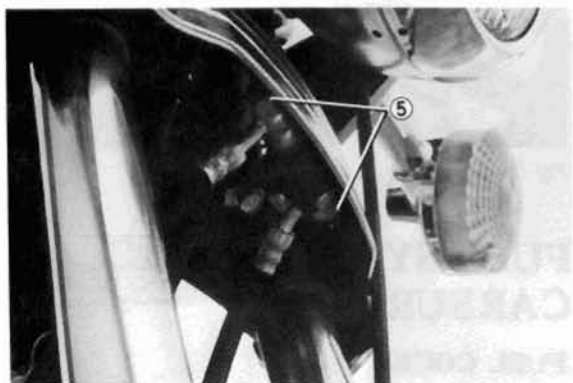


Fig. 14-2.



Fig. 14-6.

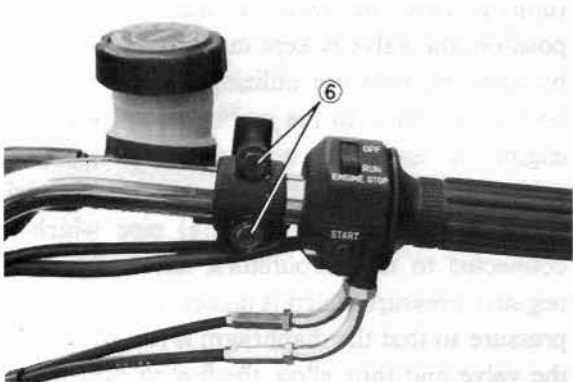


Fig. 14-3.

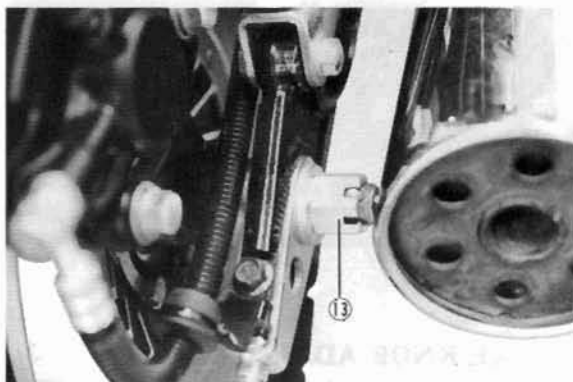


Fig. 14-7.

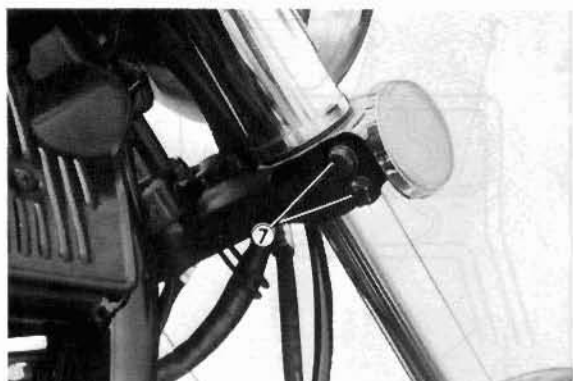


Fig. 14-4.

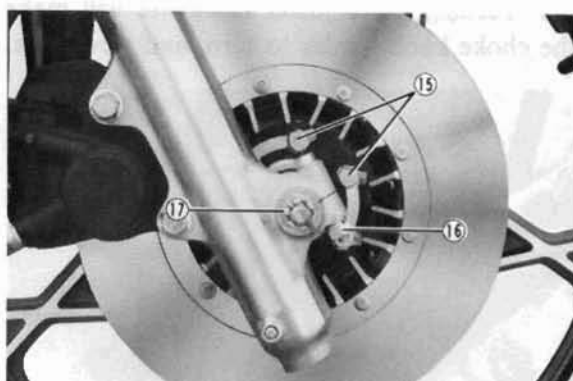


Fig. 14-8.

FUEL LINE

(Replace every two years)

Replace the fuel hose every two years.

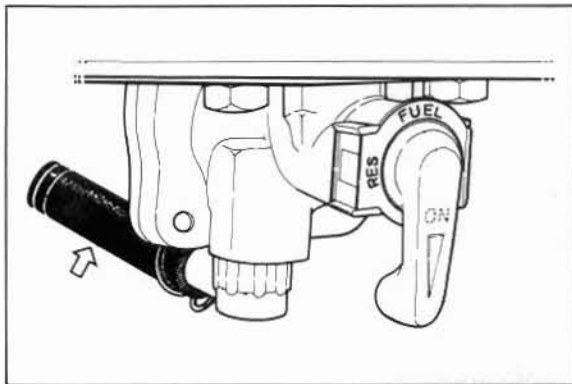


Fig. 14-9.

CHOKE CABLE ADJUSTMENT

When the choke knob is returned fully, play ① must be 0.5 — 1.0 mm (0.02 — 0.04 in). Loosen lock nut ② and turn the adjuster ③ to obtain the specified play.

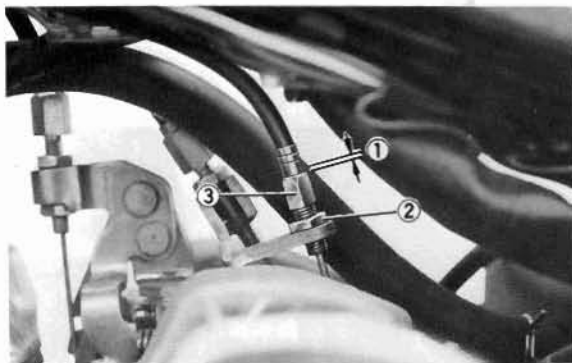


Fig. 14-10.

CHOKE KNOB ADJUSTMENT

When the choke knob is pulled, if it is too stiff or too loose, raise seal cover ④ and turn adjuster ⑤. Turning the adjuster clockwise will make the choke knob harder to turn, and vice versa.

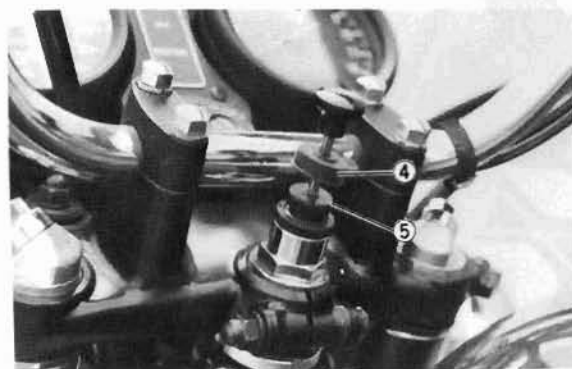


Fig. 14-11.

ENGINE REMOVAL**CARBURETOR REMOVAL**

When removing the carburetor, remove the throttle cable ⑥ and ⑦ together with the choke cable ⑧.



Fig. 14-12.

FUEL SYSTEM AND CARBURETORS**FUEL COCK**

The construction of the diaphragm type auto cock is shown below. When the engine is not running with the lever in the ON or RES position, the valve is kept in the closed position by applying pressure utilizing a spring so that no fuel will flow to the carburetors. When the engine is engaged, a negative pressure is generated in the diaphragm chamber through the vacuum (negative pressure) pipe which is connected to the carburetors, and builds up a negative pressure which is higher than the spring pressure so that the diaphragm is forced to open the valve and thus allow the fuel to flow to the carburetors.

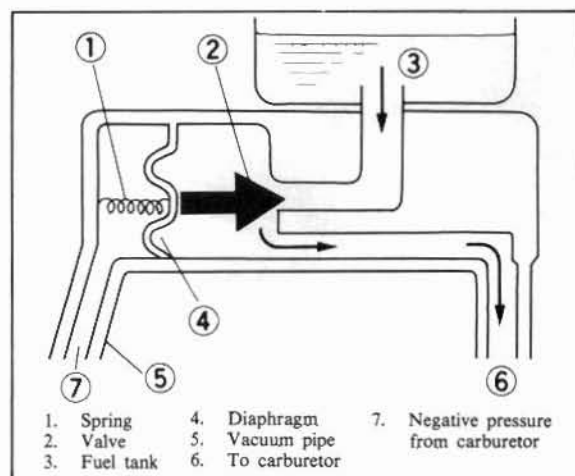


Fig. 14-13.

ON: Normally used. Functions as auto cock.

RES: Reserve fuel is used. Functions as auto cock.

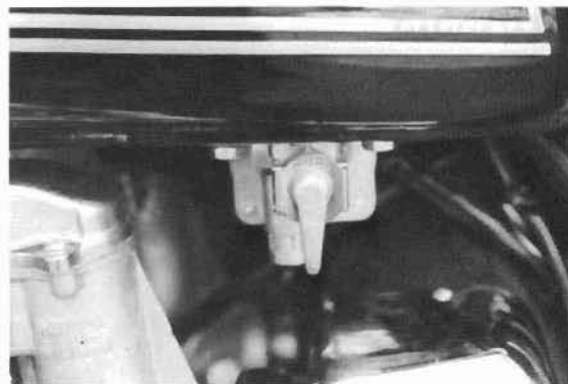


Fig. 14-14.

CARBURETOR DISASSEMBLY

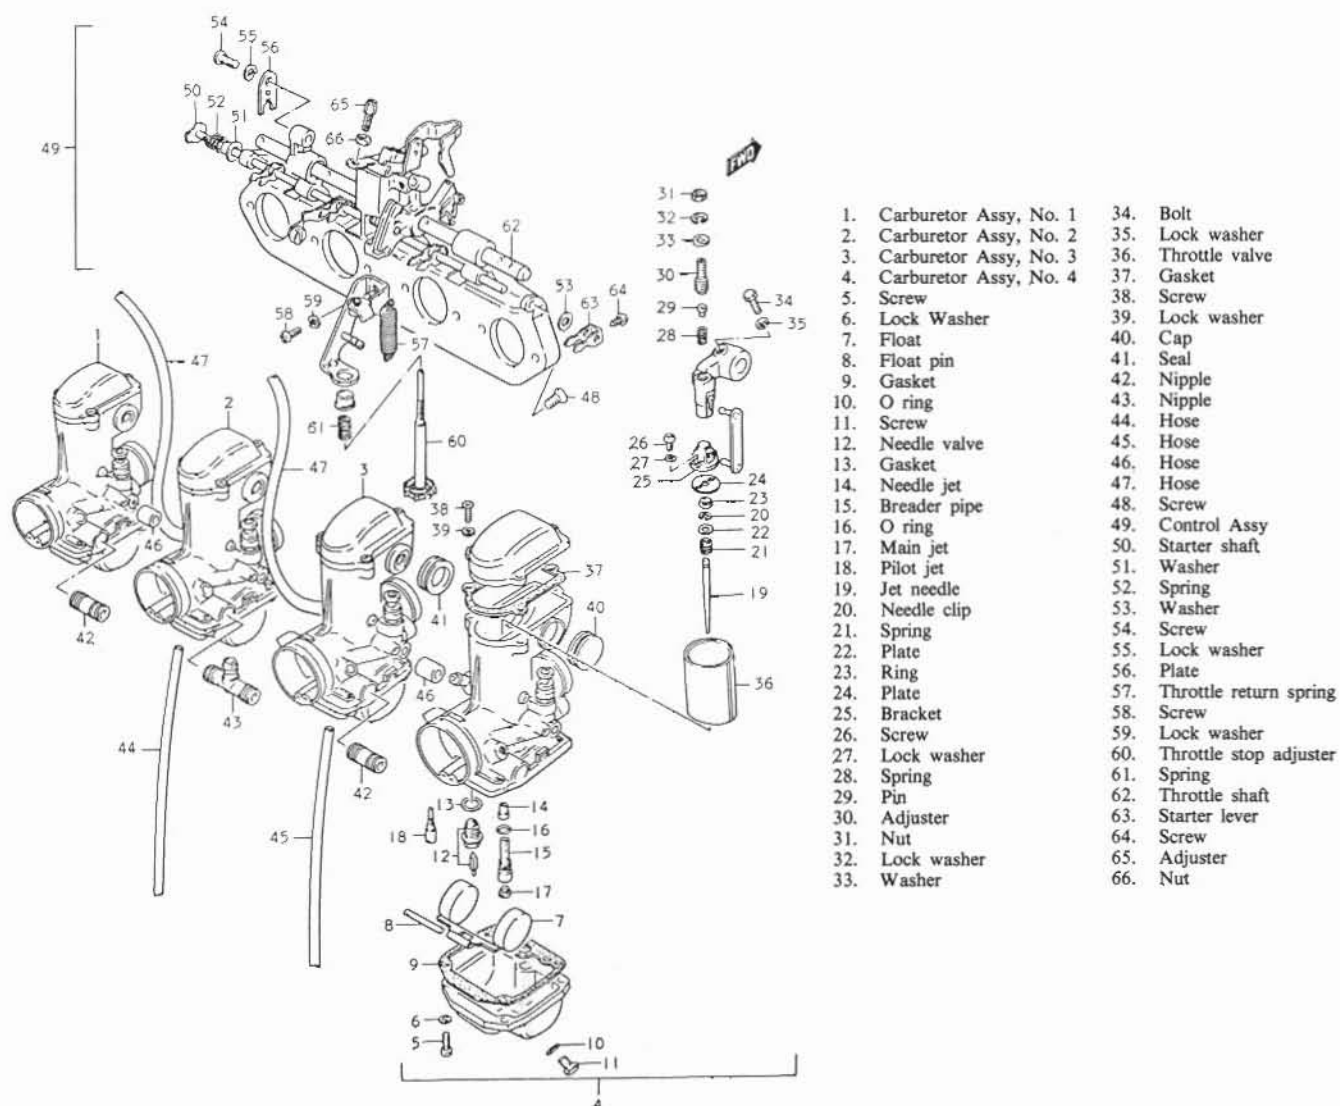


Fig. 14-15.

NOTE:

Although the choke lever has been made obsolete on the carburetor ass'y, the disassembling procedure is the same as that for the GS1000.

CHASSIS

FRONT FORK

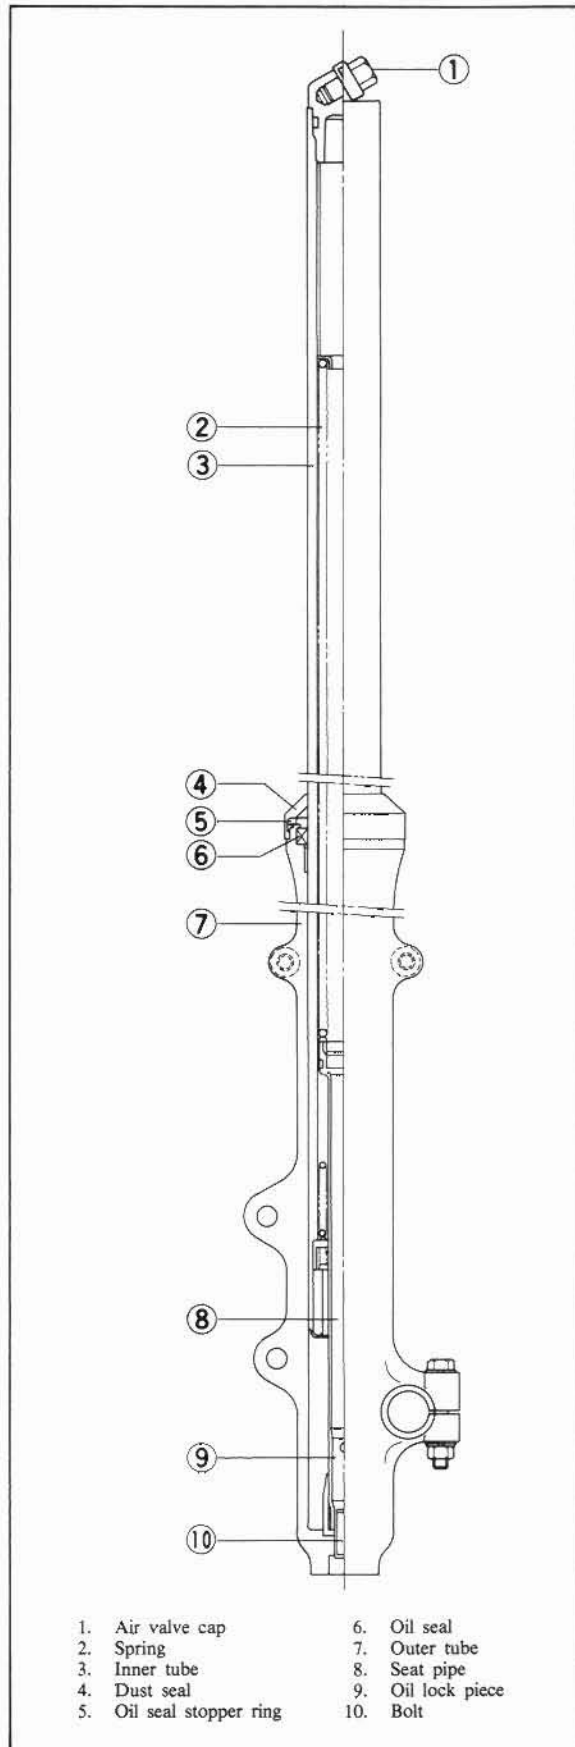


Fig. 14-16.

14-16

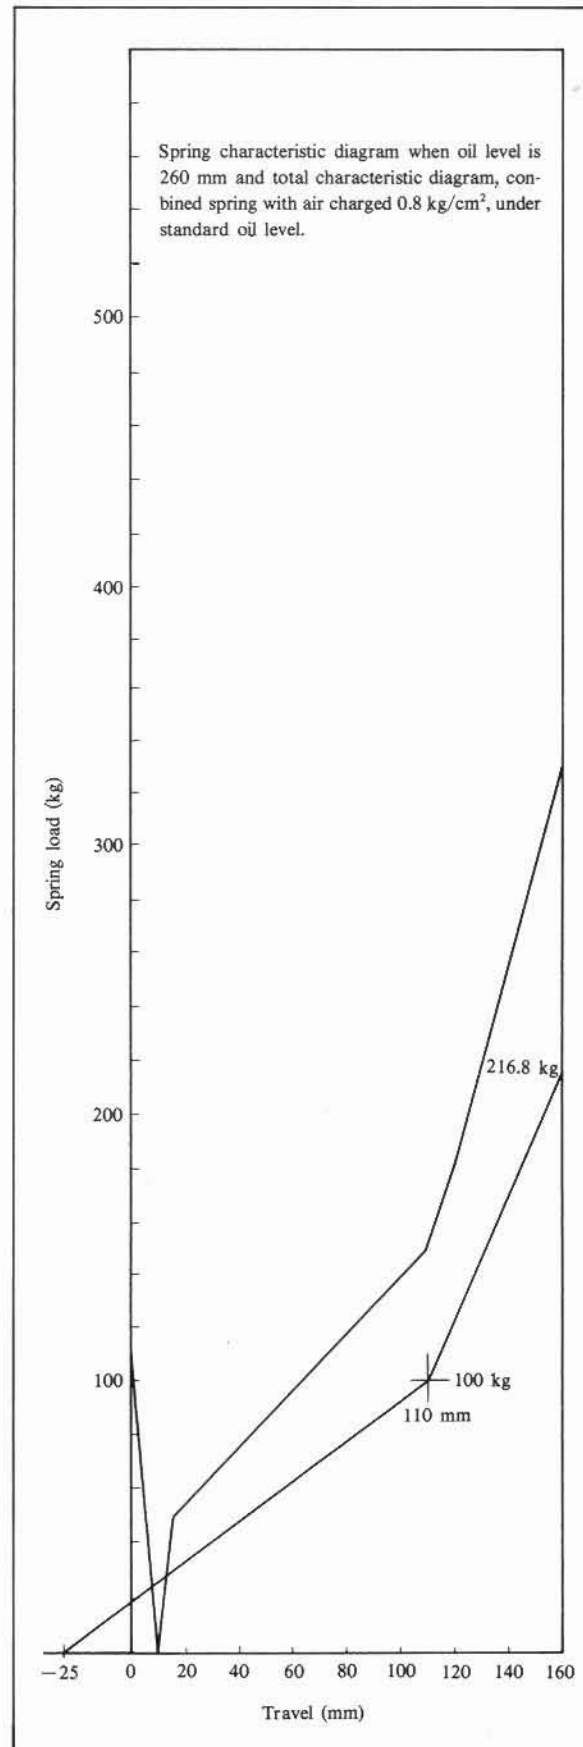


Fig. 14-17.

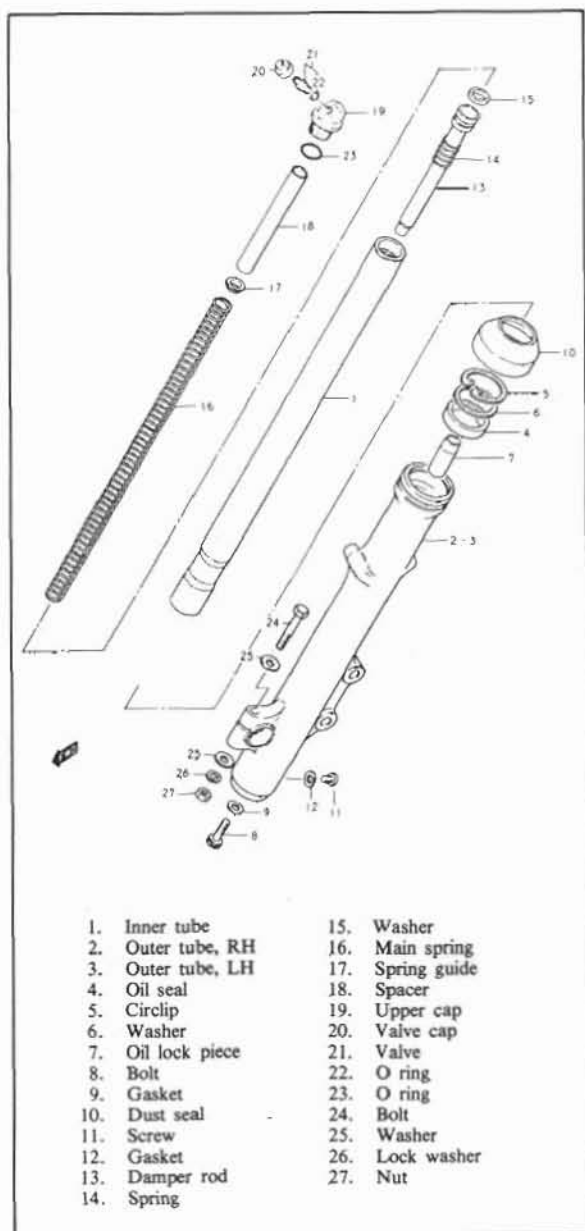


Fig. 14-18.

Removal

- Place jack below engine.
- Remove the front wheel and front fender.
- Remove valve cap ① and hold the valve with pointed tool to bleed air.
- In disassembly of fork, it is preferable to loose the upper cap ②.
- Loosen the front fork tube upper pinch bolt ③ and lower pinch bolt ④.

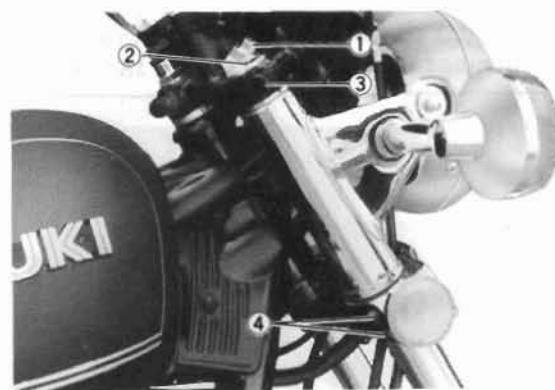


Fig. 14-19.

- When removing the front fork, remove the caliper mounting bolts and remove the right and left calipers.
Hang the caliper from the motorcycle frame using string, etc., taking care not to bend the brake hoses.
- Pull down the front fork while rotating it.

Mounting

- Mount the front fork so that the upper end of the inner tube in the front fork is flush with the upper surface of the stem head.

Upper pinch bolt tightening torque	2.0 — 3.0 kg-m (14.5 — 21.5 lb-ft)
Lower pinch bolt tightening torque	1.5 — 2.5 kg-m (11.0 — 18.0 lb-ft)

- Mount the caliper. The tightening torque of the caliper mounting bolts are as follows:

Caliper mounting bolt tightening torque	2.5 — 4.0 kg-m (18.0 — 29.0 lb-ft)
---	---------------------------------------

- Mount the front fender on the front fork.
- Install the right and left axle spacers to the front fork.
- Mount front wheel.

CAUTION:

Fasten the speedometer gear box at the position shown in the following drawing and take care not to bend the speedometer cable excessively.

Front axle pinch nut
tightening torque

1.5 — 2.5 kg-m
(11.0 — 18.0 lb-ft)

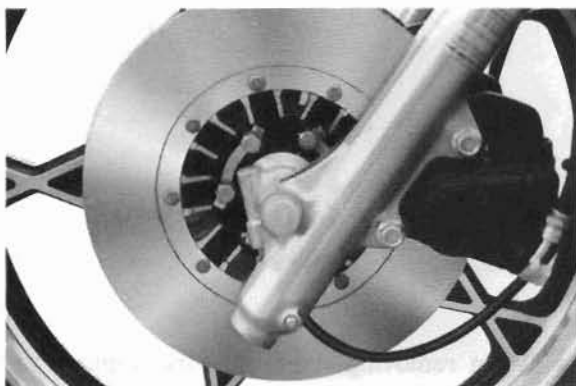


Fig. 14-20.

FRONT WHEEL

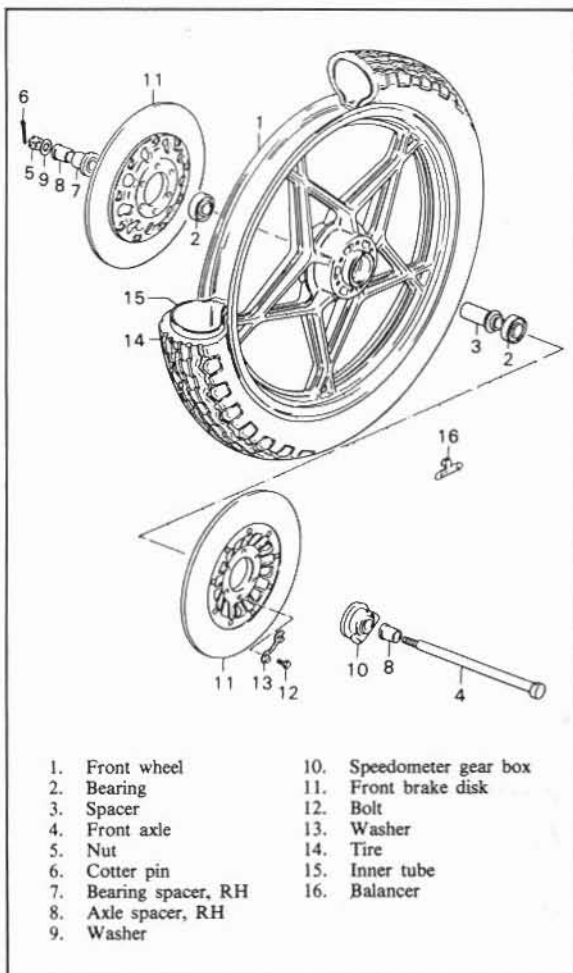


Fig. 14-21.

Removal

- Lift the front wheel off the floor by raising up the engine, with the center stand resting firmly on the ground.
- Remove either one of two calipers, left or right, from the fork by unfastening its two mounting bolts.
- Pull off cotter pin ⑤ from axle nut ⑥; and loosen the nut.
- Place a jack or a block under the engine or chassis tubes. Draw out the axle shaft and take off the wheel.

CAUTION:

After removing the front wheel, do not squeeze the front brake lever or the brake pads will move inside the caliper. The pads should be left where they are at the time of wheel removal otherwise difficulty will be encountered in reinstalling.

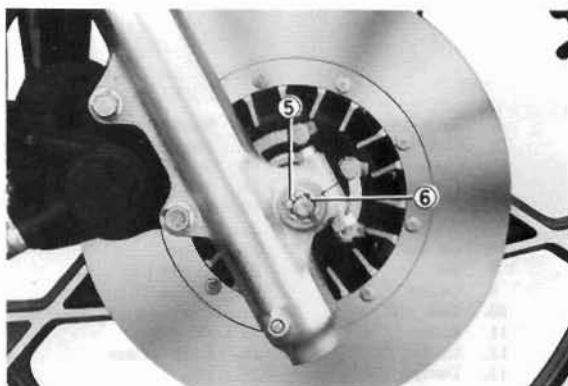


Fig. 14-22.

Mounting

- Before installing the speedometer gear box ⑦, grease it and align groove ⑧ (for fitting the two drive pawls to the hub) with the hub to insert the gear box in the wheel.

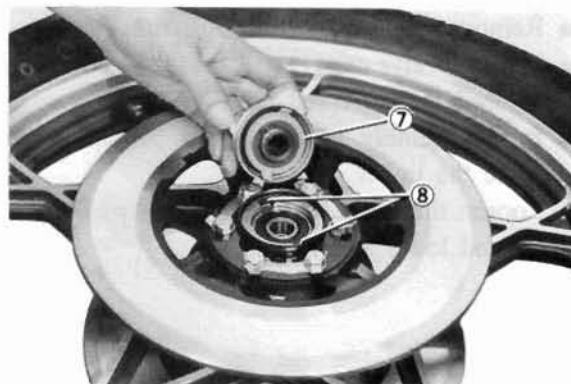


Fig. 14-23.

- Insert the axle through to the left side of the front fork and mount the wheel.
- Do not change the position of the speedometer gear box (see Fig. 14-20).
- Tighten axle nut and fit the new cotter pin.

Front axle nut tightening torque	3.6 — 5.2 kg-m (26.0 — 37.5 lb-ft)
-------------------------------------	---------------------------------------

TUBE AND TIRE

Removal

- Mark the position of the valve stem and rotational direction of the tires with chalk.
- Remove the valve cap and let out the air.
- Remove the valve fastening nut and fully loosen the bead protector nut.



Fig. 14-24.

- Step on the tire bead, push it down as shown below, install the five wheel rim protectors (special tools) on the wheel.

Wheel rim protector	09941-94510
---------------------	-------------



Fig. 14-25.

- Using flat tire levers, work the tire bead over the rim, starting near the valve stem.

CAUTION:

- 1) Always use the wheel rim protectors. If not, the tire rim could be damaged by the tire lever.
- 2) The tire lever should be applied over the wheel rim protectors.



Fig. 14-26.

- Remove the tube.
- Remove the tire from the wheel.



Fig. 14-27.

Mounting

- Inflate the tube sufficiently so that the tube does not fold.
- Press the tube into the tire.
- Push one side of the tire beads into the wheel rim. Be sure that the embossed arrow mark on the rear tire face toward the rotational direction of the wheel.

Next, install the tube, insert the valve into the rim, and tighten the valve nut temporarily. An arrow indicating the rotational direction is marked on the rear tire. A yellow mark is provided on the valve portion to aid checking of the tire balance.



Fig. 14-28.

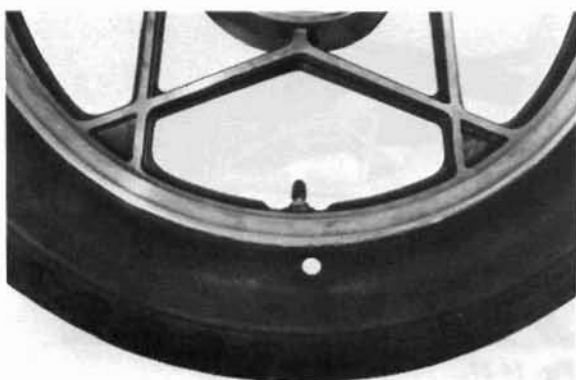


Fig. 14-29.

- Apply soapy water to the tire bead.
- Hook the bead protector on the bead portion of the tire.
- Fit the rest of the tire using tire levers placing them well away from the valve.

CAUTION:

- 1) Avoid inserting the tire lever too deeply into the tire (to avoid damaging the tube).
- 2) As in tire removal, use the wheel rim protectors.

- By pushing the tire, confirm that the tube is not caught between the rim and tire.
- Inflate the tire to the specified pressure (see Page 14-10).
- Tighten the bead protector nut and then the valve nut.
- Mount the valve cap.

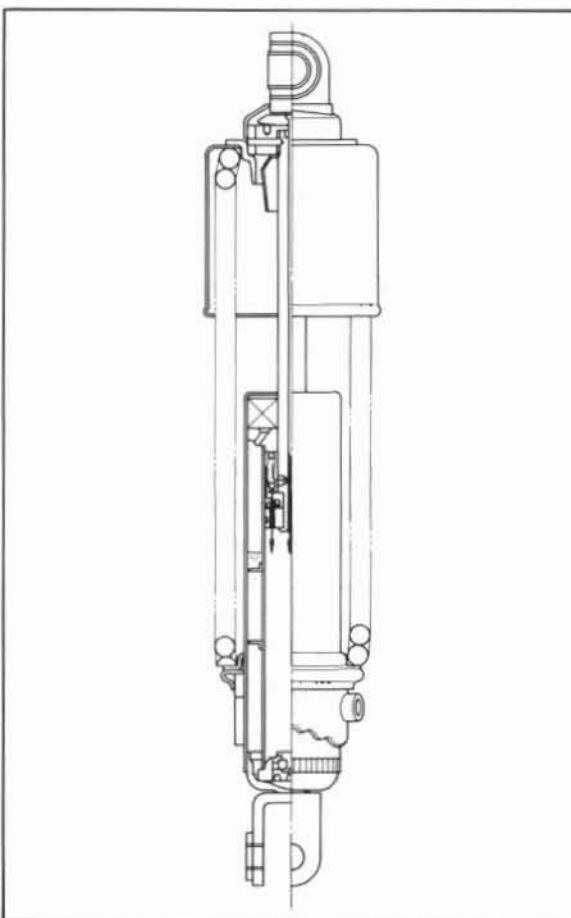
REAR SHOCK ABSORBER

Fig. 14-30.

NOTE:

Although the spring cover is attached on the rear shock absorber, spring adjustment, damper adjustment and etc. are the same as that for the GS1000.

ELECTRICAL

GEAR SHIFTING SWITCH AND GEAR POSITION INDICATOR

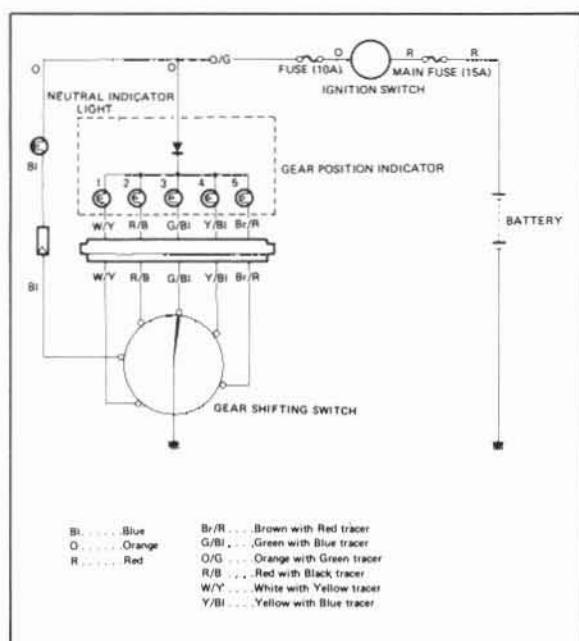


Fig. 14-31.

If the neutral indicator light and gear position indicator light do not come on, disconnect the lead wires coming from the gear shifting switch at the coupler and terminals, and check continuity between the O lead and B1 lead, and also between the W/Y, R/B, G/B1, Y/B1 and Br/R in the coupler using the Pocket Tester.



Fig. 14-32.

NOTE:

When checking the continuity of the gear indicator (inside the coupler), connect the positive (+) terminal of the Pocket Tester to the terminal in the coupler, and connect the negative (-) terminal to the orange lead wire (inside the coupler).

If there is no continuity, the indicator light bulb is burnt out and it should be replaced.

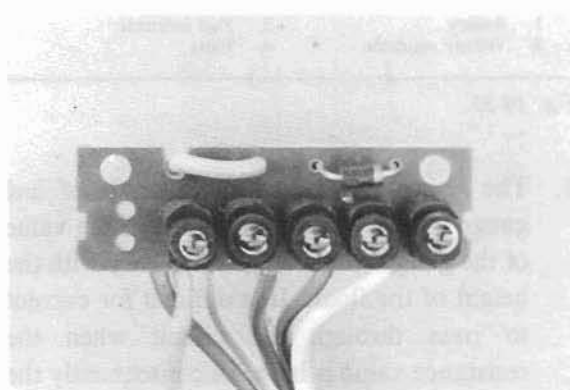


Fig. 14-33.

If the above check reveals no irregularity, remove the gear shifting switch from the crankcase, and using a lead wire of the Pocket Tester, ground one of the gear shifting switch contact points and check the condition of the gear shifting switch. If both neutral and gear position indicator lights turn on, the switch is in good condition. (To make this check, the ignition switch should be turned on with the wiring normal.)

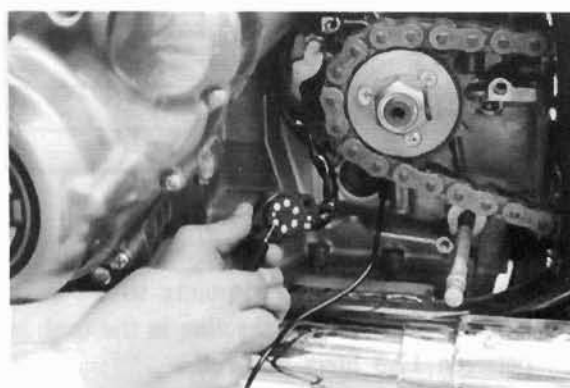


Fig. 14-34.

FUEL GAUGE

Wiring

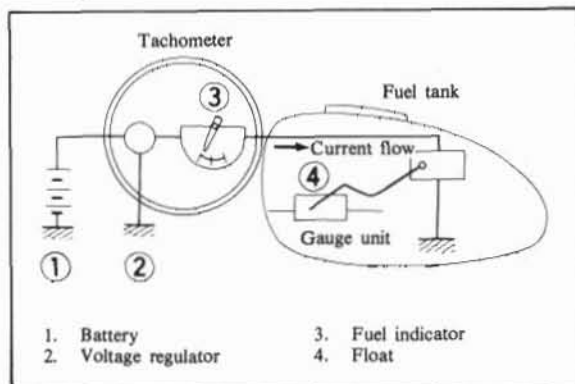


Fig. 14-35.

1. The above drawing is a schematic of fuel gauge wiring. The internal resistance value of the gauge unit is adapted to vary with the height of the float. It is difficult for current to pass through the circuit when the resistance value is high, and consequently the swing of the meter is small (close to point E).

The more current passes through the circuit, increasing the swing of the pointer (close to point F), when the resistance value is low.

2. The relationships between the amount of gasoline and meter indications are as follows:

Amount of gasoline (in liters)	Meter indication
1.6	Point E - 2°30'
2.3	E
5.2	Red zone max. limit
7.4	1/2
11.6	F
12.3	Point F + 5°

The meter points to E - 2°30' when the amount of gasoline is between 0 to 1.6 liters. Also the meter points to F + 5° when the amount of gasoline in the tank is between 12.3 liters and full.

3. Construction of each portion and operating meter.

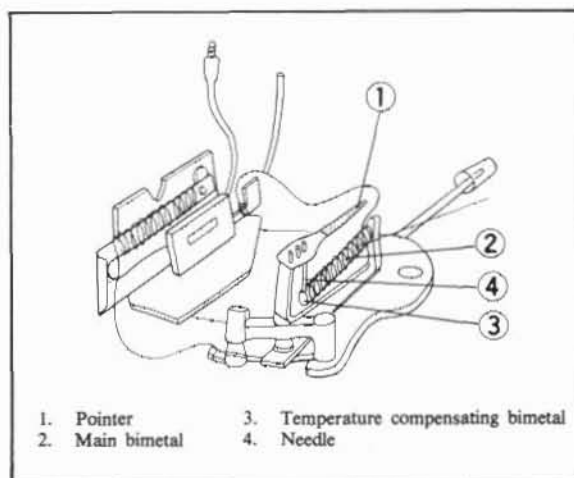


Fig. 14-36.

• Main operation

Current passing through the heater wire deflects the main bimetal causing the pointer to move.

• Auxiliary operation

This compensates for variations in temperature and voltage. A temperature compensating bimetal is provided so that no indication errors occur due to temperature changes inside the meter:

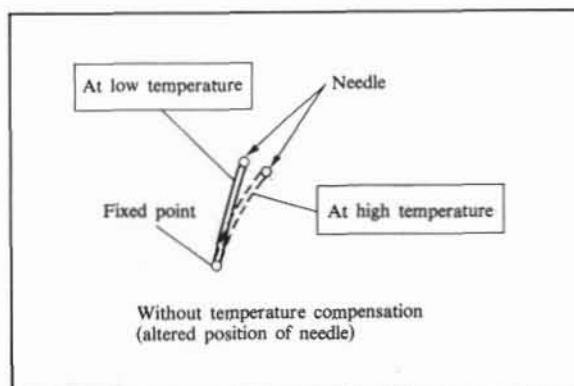


Fig. 14-37.

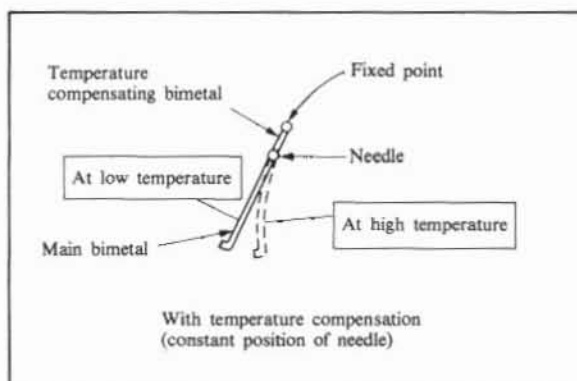


Fig. 14-38.

Even if the temperature rises inside the meter and causes the main bimetal to deflect as shown in the above drawing, the temperature compensating bimetal will deflect to the same degree as the main bimetal, in the reverse direction, to keep the needle position constant.

• Voltage regulator

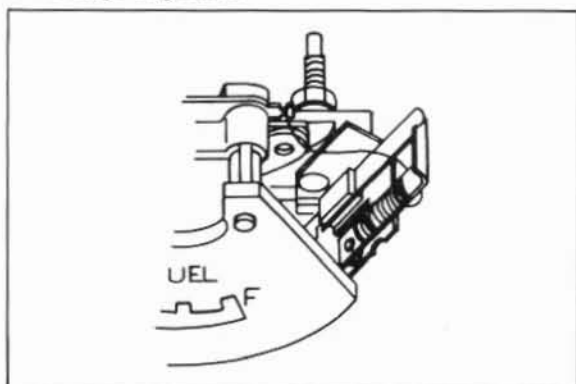


Fig. 14-39.

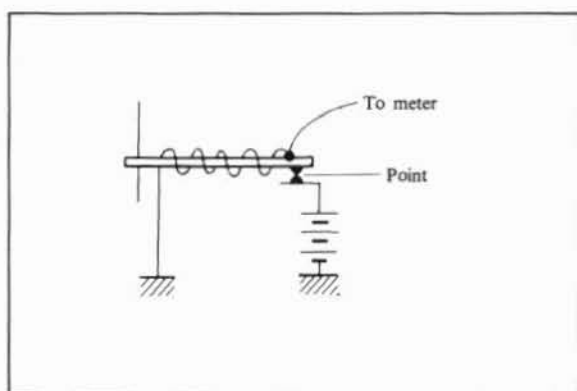


Fig. 14-40.

The passage of current through the heater wire deflects the bimetal and causes point separation. This point separation stops the current until the bimetal begins to cool which causing the point to connect again.

A large amount of current passes through the heater wire when the supply voltage is high, causing the bimetal to deflect quickly, and the points to separate. This is illustrated in the following drawing which shows that the average current is constant.

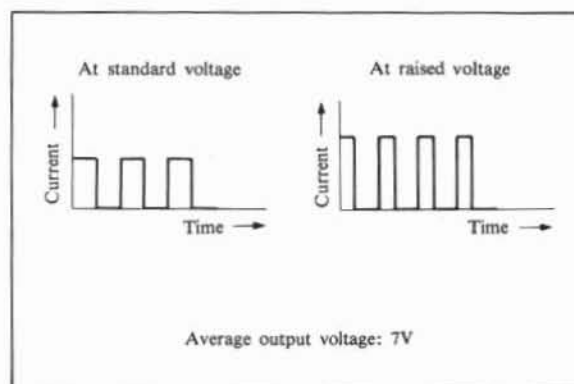


Fig. 14-41.

• Gauge unit

The displacement of the float changes the position of the contact plate which slides on a wire wound resistor causing the resistance value to vary.

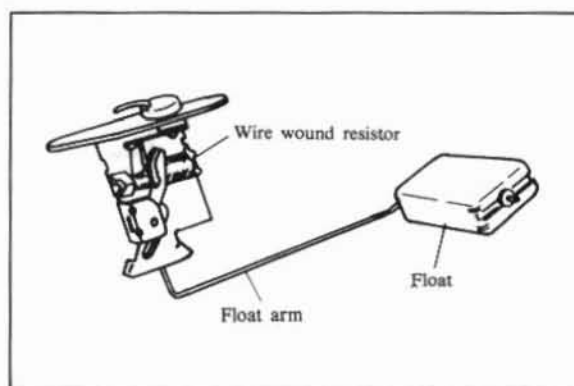


Fig. 14-42.

INSPECTION OF FUEL METER AND GAUGE

The fuel meter is enclosed within the tachometer assembly.

The following table is used for troubleshooting.


Amount of gasoline (L)	1.6	2.3	5.2	7.4	11.6	12.3
Resistance (Ω)	110	95	50	32.5	7	3

Pointer failure and minus indication

- (1) Meter pointer fails to move.
- (2) Meter has a substantial minus indication when key is turned on.

Checking method

 - (1) Determine whether trouble is within meter or gauge.
Remove gauge connector to short-circuit meter side of same connector (make gauge resistance equal to zero Ω), and observe meter indication.



Meter pointer fails to move

Meter side defective

Check (2)


Meter pointer swings to extreme position

Gauge defective

Check (3)

- (2) Meter check

Ground meter terminal of meter side connector directly to frame and observe meter indication.

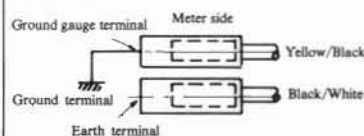

Meter pointer fails to move

Meter side defective

Check (5)

Meter pointer swings to extreme position

Wiring harness defective


Check (4)

(Contact of connector terminal)

- (3) Gauge check

Measure resistance value between two terminals of gauge side connector.

(Full $\rightarrow$ 1 - 5 Ω ; Empty $\rightarrow$ 103 - 117 Ω)

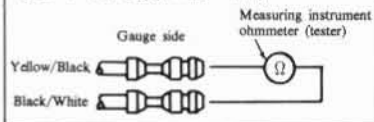

Large, unstable resistance

(More than 117 Ω)

Gauge defective

Replace gauge

Normal resistance value

(1 - 117 Ω)

Wire harness defective

 
Check (4)

(Contact of connector terminal)

- (4) Connector contact check (wiring harness side).

Strengthen spring pressure against terminal at wiring harness side connector (to improve contact) and observe meter indication. (by normal wiring).

Wiring harness side/vehicle side



Normal indication of meter

- (5) Connector contact check (wiring harness side).

Strengthen spring pressure against terminal of 3-pole connector at wiring harness side (to improve contact) and observe meter indication.

Wiring harness side 3-pole connector



Meter pointer swings to extreme position

Connector contact defective

Meter pointer fails to move


Meter defective



Change meter

Carry out check (2) at the same time.

Meter pointer swings to extreme position and indicates plus.
 (1) Swinging-up of pointer.
 (2) Substantially plus indication of meter.

Method of checking

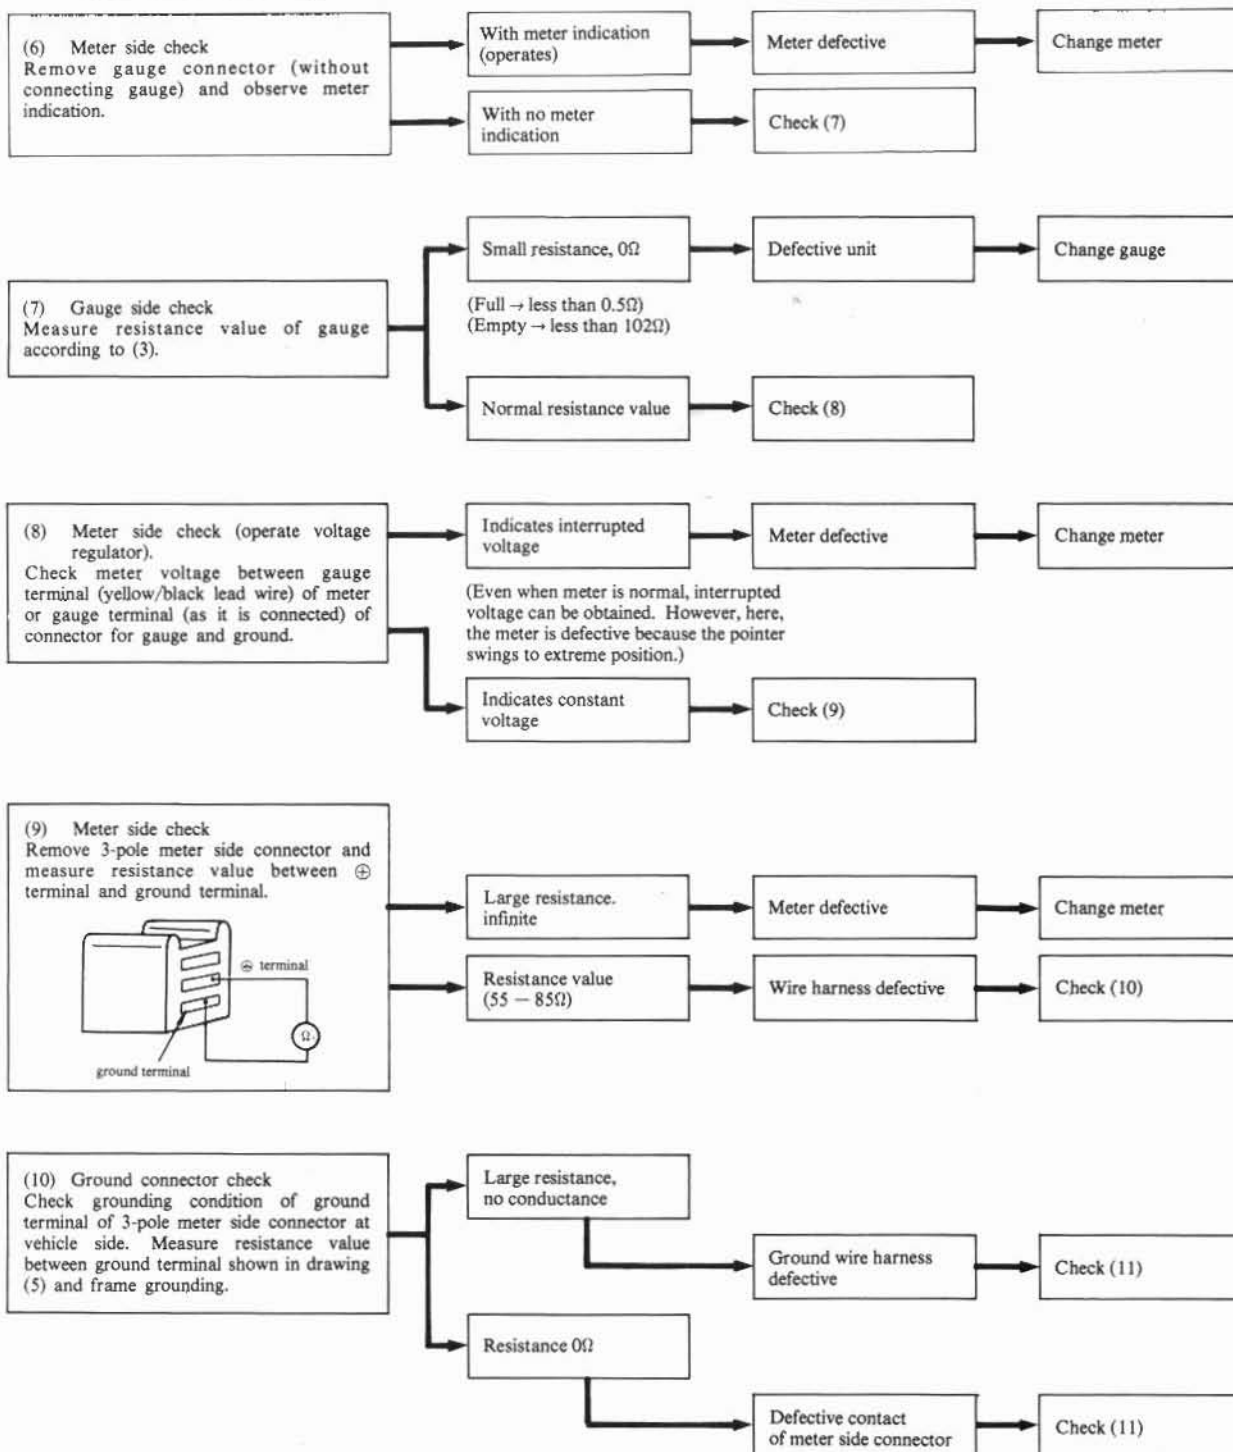

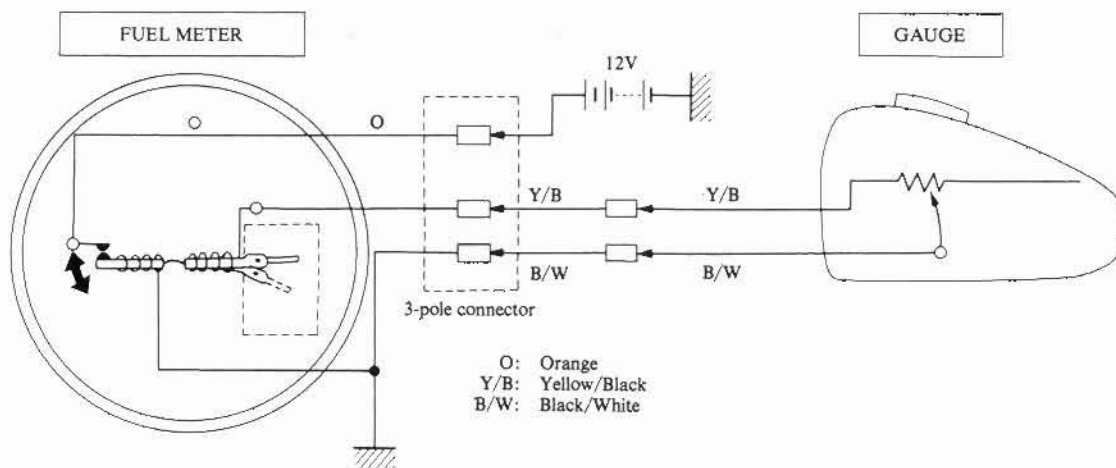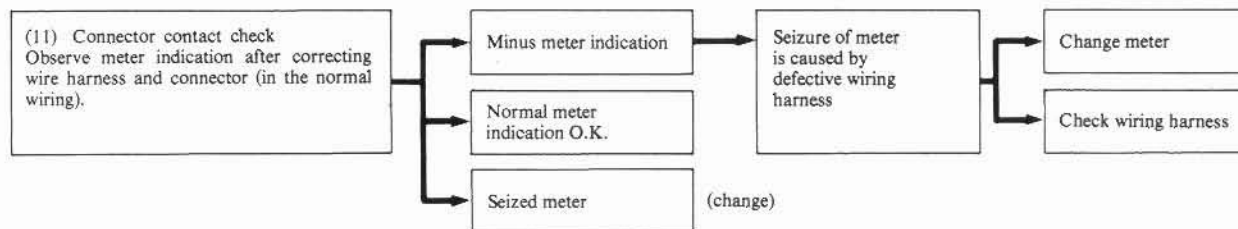

Check resistance value between terminals
Meter side


Orange-Yellow/Black 45 — 65Ω
Orange-Black/White 55 — 85Ω

Gauge side

Full 1 — 5Ω
Empty 103 — 117Ω


Fig. 14-43.

WIRE AND CABLE ROUTING

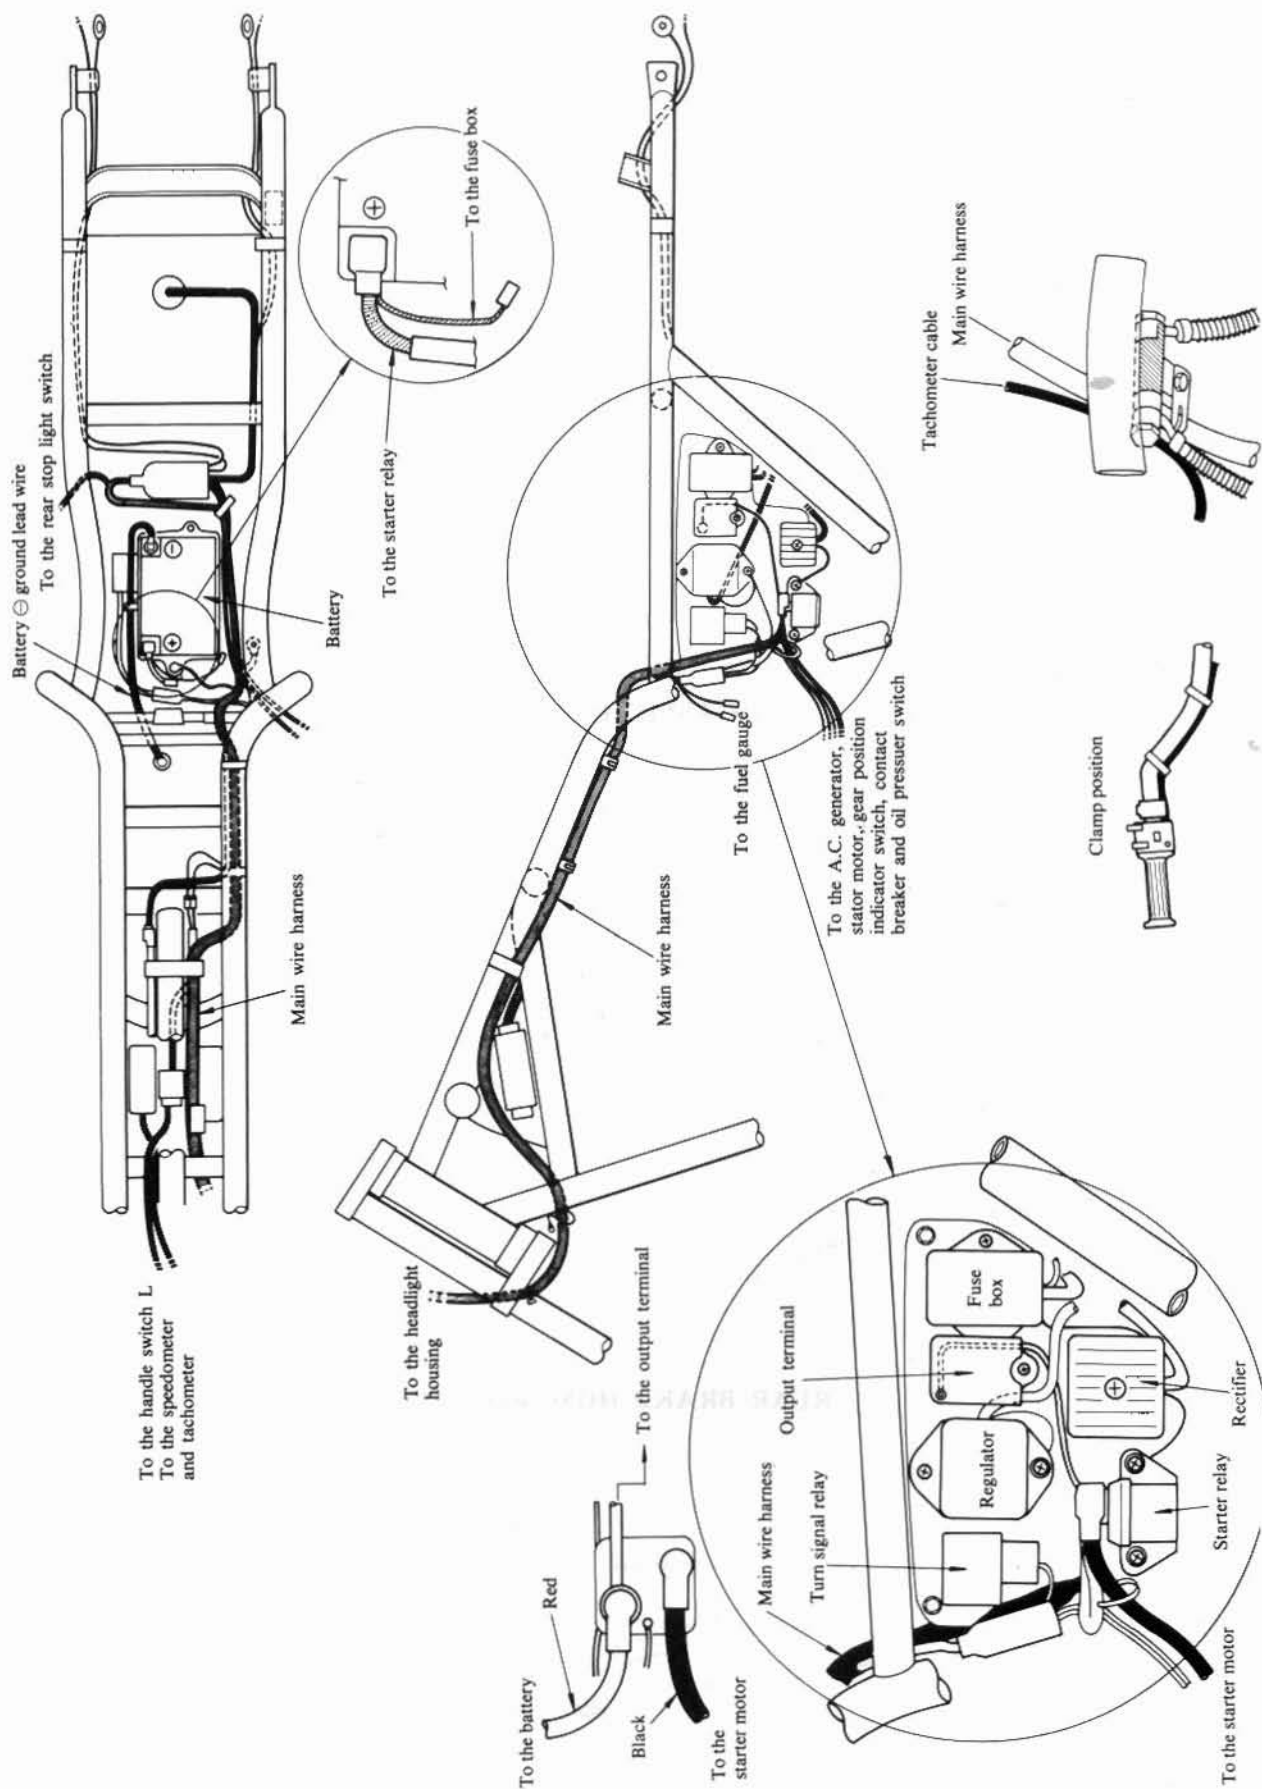


WIRE AND CABLE ROUTING



How to set the high-tension cord

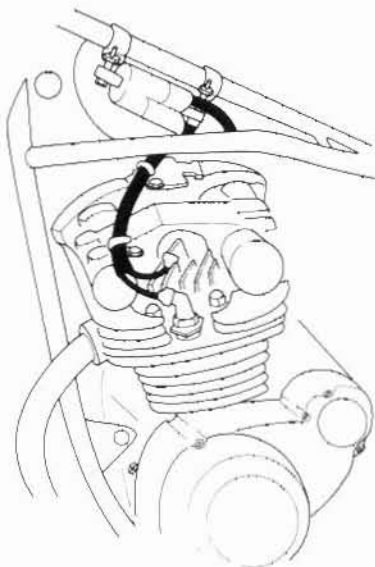


How to set contact breaker lead wire

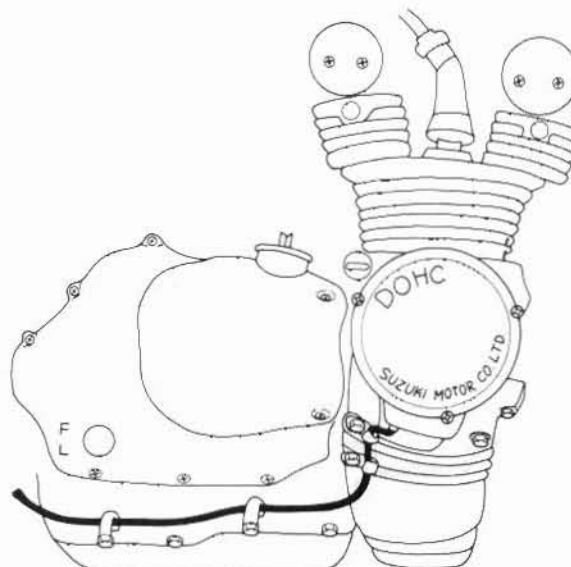


CABLE ROUTING

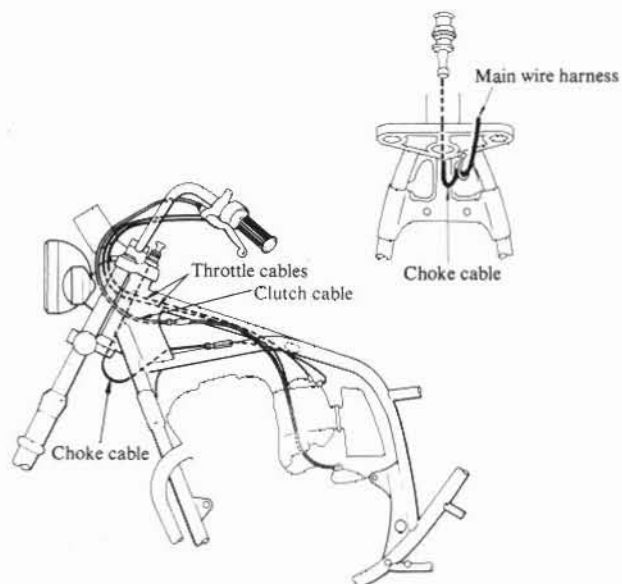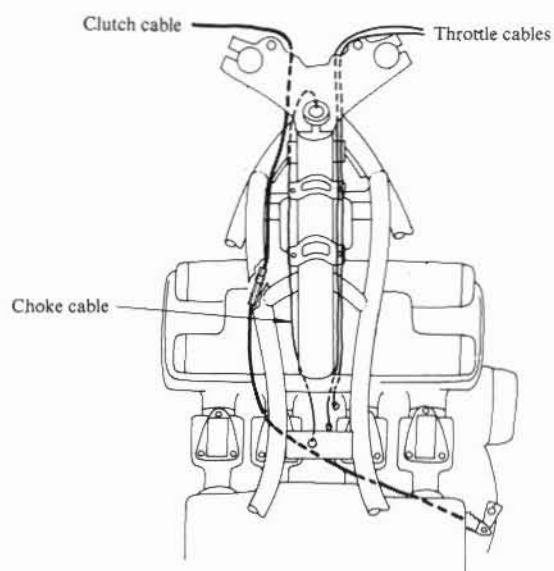

REAR BRAKE HOSE ROUTING

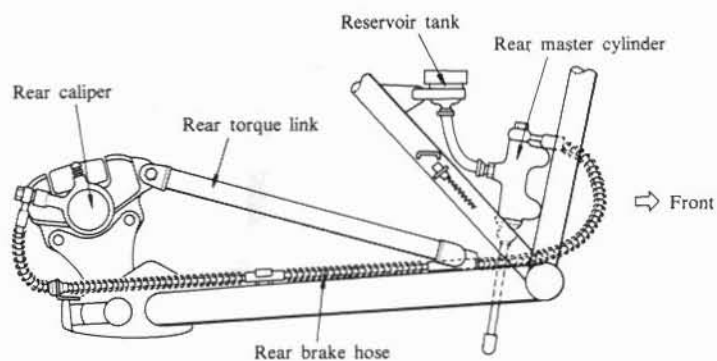

WIRING DIAGRAM

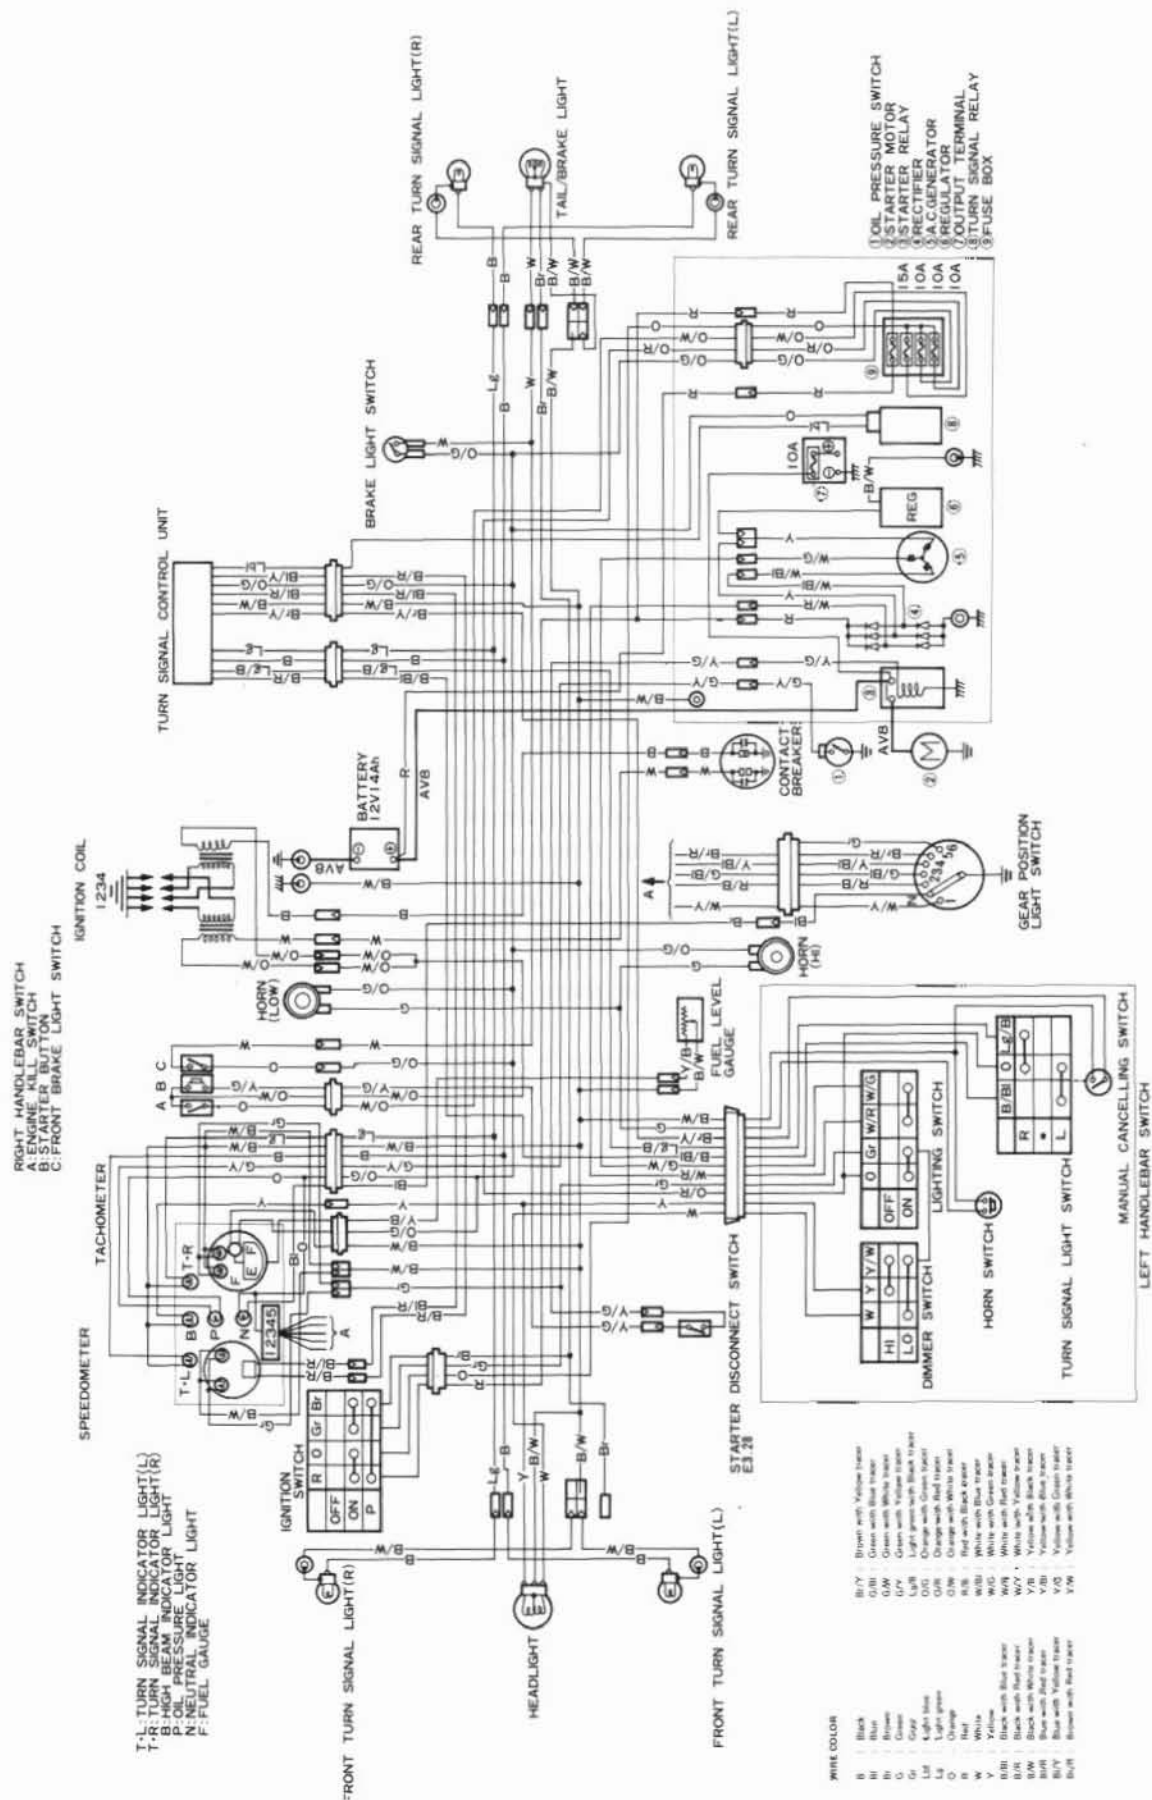



Prepared by

SUZUKI MOTOR CO., LTD.

*Service Department
Overseas Operations Division*

May, 1979

*Manual No. SR-8503 (英) E-03
Printed in Japan*