



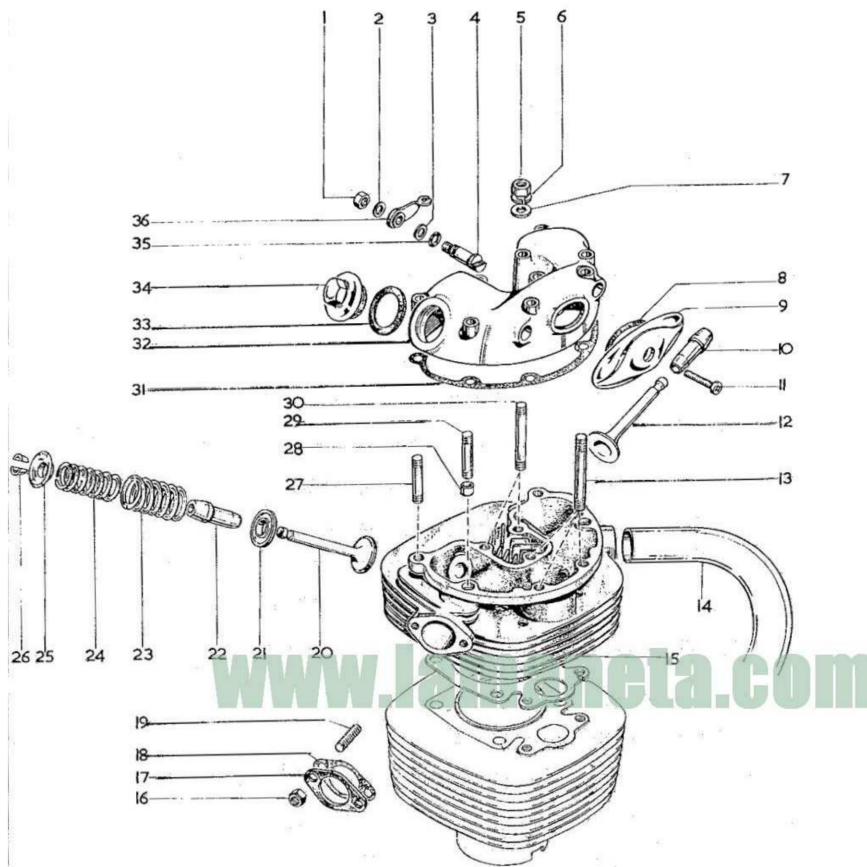


1	2-443 Q	Nut - valve lifter (1/4 B.S.C.)	1	1971-73 B 50 T SSH	18	71-2593	Gasket - carburettor joint	1	1971-73 B 50 MX
2	2-526 Q	Plain washer, valve lifter, inner	1	1971-73 All B 50	18	71-1421	Carburettor joint gasket	1	1971-72 All B 50
3	15-5155	Plain washer, valve lifter, outer	1	1971-73 All B 50	19	14-1619	Stud (5/16 UN.C./UN.F. X 1 1/4)	2	1972-73 All B 50
4	40-417	Exhaust valve lifter Spindle	1	1971-73 All B 50	20	71-1735	Inlet valve	1	1971-73 All B 50
5	14-402	Nut - rocker box, beneath head steady bracket	2	1972-73 All B 50	21	68-931	Valve spring bottom cup	1	1971-73 All B 50
5	14-302	Nut, rocker box	7	1971-73 All B 50	22	71-1626	Inlet valve guide	1	1971-73 All B 50
6	60-2428	Spring washer, rocker box	9	1971-73 All B 50	23	65-2494	Valve spring outer supplied as a complete Set	2	1971-73 All B 50
7	60-2330 Q	Washer (5/16 x 5/8 x 1/16)	9	1971-73 All B 50	24	65-2495	Valve spring inner supplied as a complete Set	2	1971-73 All B 50
8	71-1420	Gasket - rocker inspection cover	1	1971-73 All B 50	25	71-1165	Valve spring top collar	2	1971-73 All B 50
9	40-0208	Rocker inspection cover	1	1971-73 All B 50	26	71-1166	Valve spring collet	4	1971-73 All B 50
10	71-1627	Exhaust valve glide	1	1971-73 All B 50	27	21-2133	Stud - cylinder head (5/16 UN.F./UN.C. 2 9/16)	2	1972-73 All B 50
11	40-309	Screw - rocker inspection cover (2 B.A. x 1 3/8)	1	1971-73 All B 50	28	71-1989	Cylinder head dowel	2	1971-73 All B 50
12	71-1736	Exhaust valve	1	1971-73 All B 50	29	14-1627	Cylinder head stud (5/16 UN.C./UN.F. X 3)	2	1971 B 50
13	21-2135	Stud - cylinder head (5/16 UN.C./UN.F. x 3 1/16)	3	1972-73 All B 50	29	21-2134	Stud - cylinder head (5/16 UN.C./UN.F. X 2 13/16)	2	1972-73 All B 50
14	71-3148	Low level pipe	1	1971-73 B 50 H	30	21-2092	Rocker box stud (5/16 UN.C./UN.F. X 3 1/4)	2	1971-73 All B 50
14	71-2899	Exhaust pipe complete	1	1972 B 50 MX	31	71-1623	Rocker box gasket	1	1971-73 All B 50
14	71-2177	Exhaust pipe complete	1	1971-72 All B 50	32	71-1638	Rocker box	1	1971-72 All B 50
14	71-3801	Exhaust pipe, complete with bracket	1	1973 B 50 MX	32	71-3255	Rockerbox	1	1973 B 50 MX
15	71-1732	Cylinder head with fixed fittings	1	1971-73 All B 50	33	40-969	Washer - valve inspection cap	2	1971-72 All B 50
16	14-1302	Nut, carb fixing	2		33	97-3765	O'ring - valve inspection cap*	2	1973 B 50 MX
17	71-2592	Insulating washer - carburettor joint	1	1971-73 B 50 MX	34	40-968	Valve inspection cap	2	1971-73 All B 50
17	70-7821	Insulating washer - carburettor joint	1	1971-72 All B 50	36	41-176	Exhaust valve lifter lever	1	1971 B 50 T SSH

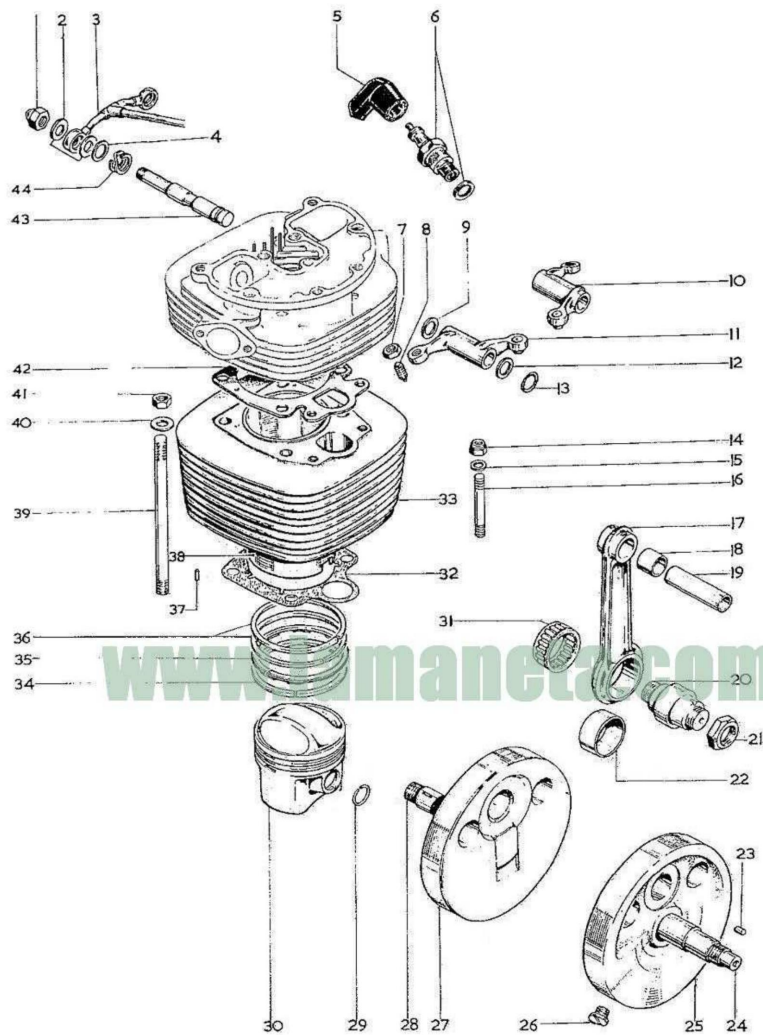


1	40-162	Nut - rocker spindle (domed 3/8 B.S.C.)	2	1971-73	All B 50
2	942-48	Copper washer - oil feed union	2	1973	All B 50
3	41-807	Rocker oil feed pipe	1	1971-73	All B 50
4	942-48	Copper washer - oil feed union	2	1973	All B 50
5	19-762	Spark plug cover	1	1971-73	All B 50
6	19-760	Spark plug	1	1971-73	B 50 MX
6	19-761	Spark plug	1	1971-72	B 50 T SS H
7	24-563	Nut - rocker adjusting screw (5/16 B.S.C.)	2	1971-73	All B 50
8	40-148	O ring - rocker spindle	2	1971-73	All B 50
9	70-1330	Washer	2	1973	All B 50
10	40-296	Exhaust rocker complete	1	1971-73	All B 50
11	40-292	Inlet rocker complete	1	1971-73	All B 50
12	40-158	Thrust washer - rocker spindle (3/8)	2	1971-73	All B 50
13	68-155	Rocker adjusting screw (5/16 B.S.C.)	2	1971-73	All B 50
14	14-302	Nut, Cylinder Base	2	1971-73	All B 50
15	70-821	Washer (21/64 X 9/16 X 3/32)	2	1973	All B 50
16	21-2034	Cylinder stud (5/16 UNF 3 1/8)	2	1971-73	All B 50
17	71-1635	Connecting rod complete	1	1971-73	All B 50
18	66-492	Small-end bush - connecting rod	1	1971-73	All B 50
19	66-953	Gudgeon pin	1	1971-73	All B 50
20	71-1616	Crankpin	1	1971-73	All B 50
21	41-588	Crankpin nut - Can Use 71-1616	2	1971-73	All B 50
22	71-1199	Big-end bush - Can Use 71-1616	1	1971-73	All B 50
23	41-551	Peg crankpin location	1	1971-73	All B 50
24	71-1681	Engine shaft - right	1	1971-73	All B 50
25	71-1677	Flywheel complete right	1	1971-73	All B 50

26	71-1678	Flywheel plug	1	1971-73	All B 50
27	71-1676	Flywheel complete left	1	1971-72	All B 50
28	71-1632	Engine shaft - left	1	1971-73	All B 50
29	66-954	Circlip, Gudgeon pin	2	1971-73	All B 50
30	19257/STD	Piston complete (standard)	1	1972	All B 50
30	19257/20	Piston complete + .020	1	1972	All B 50
30	19257/40	Piston complete + .040	1	1972	All B 50
30	19257/60	Piston complete + .060	1	1972	All B 50
31	70-7850	Needle roller - big-end bearing - Can Use 71-1616	1	1971-73	All B 50
32	71-1624	Cylinder base washer	1	1971-73	All B 50
33	71-1219	Cylinder barrel	1	1971-73	All B 50
34	R26510/STD	Piston Ring Set (3) Standard	1	1971-73	All B 50
34	R26510/20	Piston Ring Set (3) + .020	1	1971-73	All B 50
34	R26510/40	Piston Ring Set (3) + .040	1	1971-73	All B 50
34	R26510/60	Piston Ring Set (3) + .060	1	1971-73	All B 50
37	71-2549	Peg - cylinder liner	1	1972-73	All B 50
38	71-1218	Liner - cylinder barrel	1	1972	All B 50
39	21-2033	Stud, Cylinder Holding	4	1971-73	All B 50
40	41-639	Washer cylinder barrel stud	4	1971-73	All B 50
41	14-304	Nut cylinder barrel stud (7/16 UNF)	4	1971-73	All B 50
42	71-1625	Cylinder head gasket	4	1971-73	All B 50
43	40-294	Rocker spindle inlet and exhaust	4	1971-73	All B 50
42	40-156	Spring washer - rocker spindle	1	1971-72	All B 50
44	70-1574	Spring washer - rocker spindle	2	1973	All B 50
Not illustrated	40-862	Circlip - crankshaft oil seal	1	1971-72	All B 50
Not illustrated	70-8157	Circlip - crankshaft oil seal	1	1973	All B 50
Not illustrated	71-1631	Spacer - crankcase bearing	1	1971-73	All B 50
Not illustrated	71-2546	Circlip - crankcase bearing	1	1971	All B 50
Not illustrated	71-2586	Connecting rod and crankpin assembly	1	1971-73	All B 50

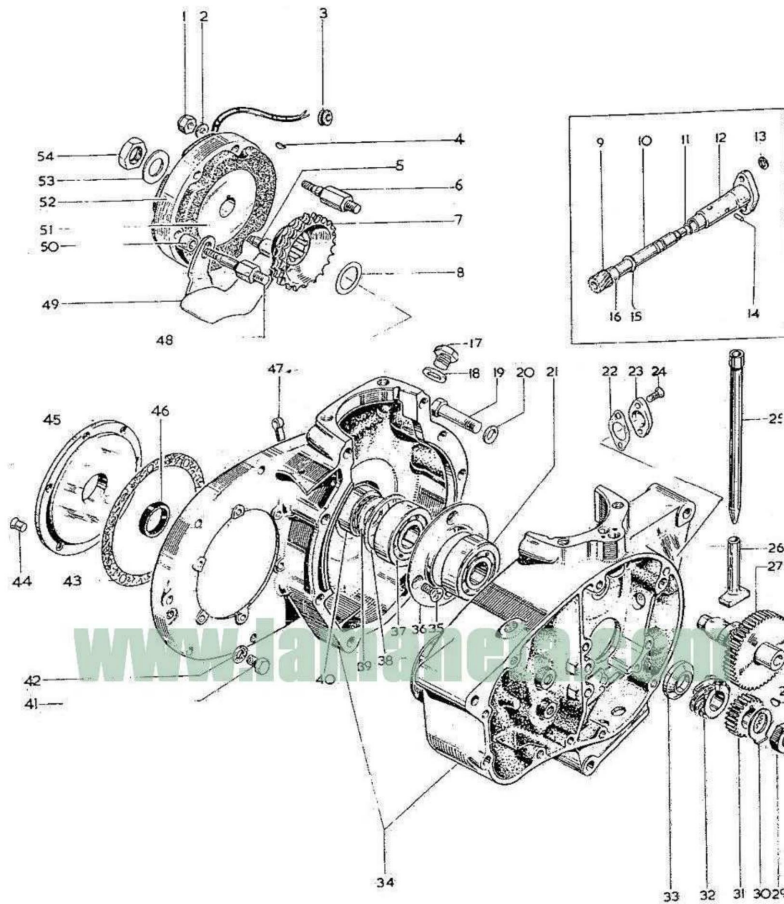


Ref	Part Number	Description	Per	Year	Model
1	14-1901	Nut, stator fixing	3	1971-73	All B50
2	2-525	Plain Washer, stator fixing	3	1971-73	All B50
3	40-705	Grommet-generator lead	1	1971-72	All B50
4	68-3218	Key - rotor to shaft	1	1971-72	All B50
5	21-1896	Bottom stud - stator fixing (1/4 UNF. X 5/16 UNC. X 2 9/16)	1	1971-73	All B50
6	21-1895	Front stud - stator fixing (1/4 UNF. X 5/16 UNC. X 2 19/32)	1	1971-73	All B50
7	71-1634	Engine sprocket 28 teeth	1	1971-73	All B50
Not Illustrated	40-327	Engine sprocket spacer (.294 - .297)	1	1971	All B50
Not Illustrated	70-8142	Engine sprocket spacer (.294 - .297)	1	1973	All B50
8	71-1629	Crankshaft shims, set of	AR	1971-73	All B50
9	70-9382	Tachometer drive shaft gear	1	1971-73	All B50
10	71-3233	Tachometer drive shaft	1	1972-1973	All B50
11	70-9381	Tachometer drive shaft	1	1971	All B50
12	70-9430	O ring - drive shaft	1	1971-73	All B50
12	71-3232	Housing - tachometer drive shaft	1	1972-1973	All B50
12	70-9517	Housing - tachometer drive shaft	1	1971	All B50
13	24-36	Sealing washer - drive shaft	1	1971-73	All B50
14	70-9431	Locating pin - drive shaft	1	1971-73	All B50
15	70-9383	Thrust washer - drive shaft	1	1971-73	All B50
16	70-9429	Retaining pin - drive gear	1	1971-73	All B50
17	21-1872	Plug timing aperture (1/2 X 13 UNC. X 1/2)	1	1971-73	All B50
18	14-6219	Bolt 5/16 UNC x 1 1/2 3 Per	1	1972	All B50
19	70-8896	Washer - timing plug	1	1971-73	All B50
19	14-6219	Bolt, crankcase, 5/16 UNC x 1 1/2	3	1971-73	All B50
20	2-923	Washer, crankcase bolt	3	1971-73	All B50
21	24-724	Main Bearing RH	1	1972	All B50
21	24-732	Bearing - ball, right	1	1971	All B50
21	70-8003	Bearing - ball, right	1	1973	All B50
22	71-1422	Gasket tachometer drive	1	1971-73	All B50
23	70-9384	Plate - tachometer drive cover	1	1971-73	All B50
24	40-242	Screw - tachometer drive (2 B. A. X 27/64 countersunk)	1	1971-73	All B50
25	71-3657	Push rod - inlet and exhaust	2	1973	B50 MX
25	71-1620	Push rod - inlet and exhaust	2	1971-72	All B50

27	71-2567	Camshaft complete	1	1971-73	B50 MX
26	71-2513	Tappet -inlet and exhaust	2	1971-73	All B50
27	71-1680	Camshaft complete	1	1971-72	B50 TSS H
Not Illustrated	71-1679	Key -camshaft pinion	1	1971-73	All B50
28	41-560	Key -crankshaft pinion	1	1971-73	All B50
29	21-2039	Nut -crankshaft (5/8 UNF.)	1	1971-73	All B50
30	40-455	Lockwasher -crankshaft nut	1	1971-73	All B50
31	41-569	Pinion -crankshaft	1	1971-73	All B50
32	41-567	Oil pump drive - crankshaft	1	1971-73	All B50
33	41-565	Distance piece -oil pump drive	1	1971-72	All B50
34	71-1870	Crankcase, Pair	1	1971-73	All B50
35	14-6502	Screw -bearing retaining ring (1/4 UNC. X 1/2) 4 Per	4	1972-1973	All B50
36	71-2649	Retaining ring -left, crankcase bearing	1	1971-73	All B50
37	24-724	Bearing -roller, left, inner	1	1971-72	All B50
38	71-2650	Distance piece - left, crankcase bearings, outer races	1	1971-73	All B50
Not Illustrated	40-375	Oil pipe -rear chain oiler	1	1971	All B50
39	71-1631	Distance Piece - Inner Race	1	1972	All B50
40	65-5883	Bearing -ball, left, outer	1	1971-72	All B50
40	37-2363	Bearing -ball, left, outer	1	1973	B50 MX
41	14-6102	Bolt -chain oiler blanking (1/4 UNC. x 5/8)	1	1971-72	B50 / B25
	21-1985	Stud -rear chain oiler (1/4 UNC. / UNF. x 1 5/8)	1	1971	All B50
42	66-7518	Fibre washer -chain oiler blanking	1	1971-73	All B50
Not Illustrated	70-8179	Rear chain oiler	1	1973	All B50
43	71-3419	Gasket - primary case back	1	1971-73	All B50
44	40-246	Screw -primary case back (2 B. A. x 5/16)	6	1971-73	All B50
45	70-3789	Cover plate -primary case back	1	1971-73	All B50
46	40-0243	Oil seal -primary case back	1	1971-73	All B50
47	40-9190	Clip -alternator lead	1	1972-73	B50 MX
48	21-1894	Rear stud -stator fixing (1/4 UNF. x 5/16 UNC. x 2 19/32)	1	1971-73	All B50
49	41-143	Chain tensioner - primary	1	1971-73	All B50
50	41-146	Distance piece -chain tensioner	1	1971-73	All B50
50	71-2923	Distance piece -chain	1	1971-73	B50 MX

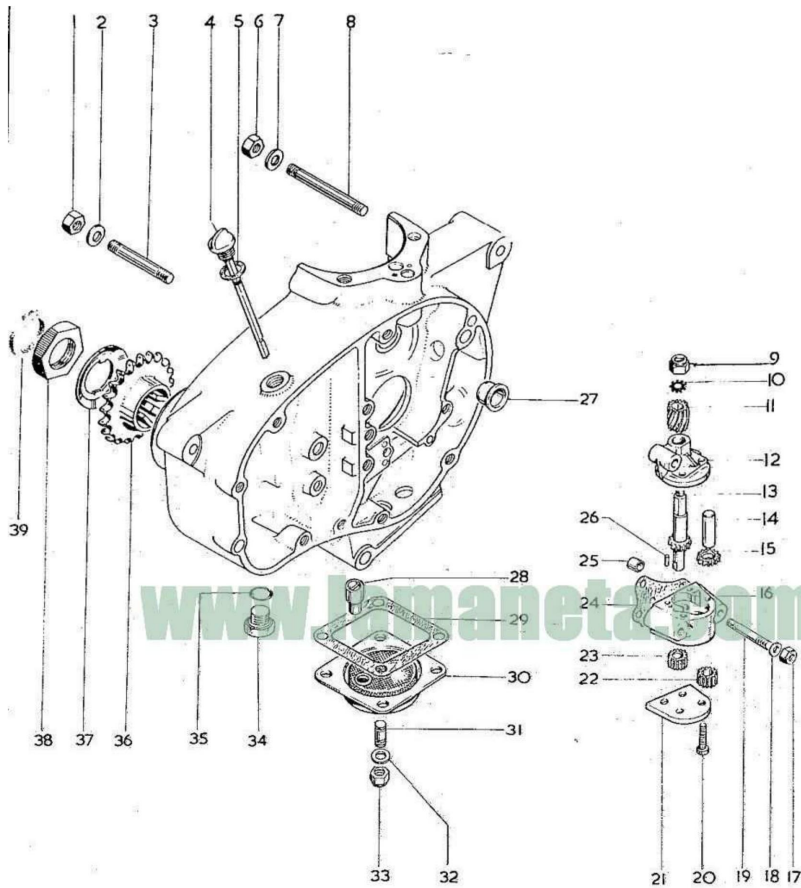


Ref	Part Number	Description	Year	Model
1	14-302	Nut 5/16 UNF 4 Per		
2	2-923	Washer 4 Per		
3	21-1890	Stud -crankcase, rear (5/16 UNF/UNC. x 2 11/16) 2 Per	1971-1973	B50 T SSH MX
4	40-1033	Gearbox dipstick	1971-1972	B50 T SSH MX
4	57-2695	Gearbox dipstick	1973	B50 T SSH MX
4	57-4679	Gearbox filler plug	1973	B50 MX
5	57-948	Dipstick washer	1971-1972	B50 T SSH MX
5	57-4681	Washer -gearbox filler plug	1973	B50 MX
6	14-302	Nut 5/16 UNF 4 Per		
7	2-923	Washer 4 Per		
8	21-2042	Crankcase stud -top (5/16 UNF/UNC. X 2 11/16) 2 Per	1971-1973	B50 T SSH MX
9	14-1301	Nut - Oil Pump		
10	20-541	Lockwasher	1971-1972	B50 T SSH MX
10	82-9041	Lockwasher	1973	B50 T SSH MX
10	70-9041	Washer-oil pump drive gear fixing	1973	B50 MX
11	41-603	Oil pump driving gear	1971-1972	B50 T SSH MX
11	70-8094	Oil pump driving gear	1973	B50 T SSH MX
12	71-2119	Oil pump spindle housing	1971-1973	B50 T SSH MX
13	71-2123	Oil pump driving spindle	1971-1973	B50 T SSH MX
14	71-1147	Oil pump driven spindle	1971-1973	B50 T SSH MX
15	71-2121	Oil pump feed gear -driven	1971-1973	B50 T SSH MX
	41-714	Oil pump thrust washer	1971	B50 T SSH MX
	71-2001	Oil pump complete	1972-1973	B50 T SSH MX
16	71-2125	Oil pump body	1971	B50 T SSH MX
17	14-1901	Nut oil pump fixing, 1/4 UNF 3 per		
19	21-597	Stud -oil pump fixing (1/4 UNF/UNC x 2 1/8)	1972-1973	B50 T SSH MX
18	68-938	Washer -oil pump mounting (17/64 X 5/8 X 1/16) 3 Per	1971-1972	B50 T SSH MX
18	70-8104	Washer -oil pump mounting (17/64 X 5/8 X 1/16) 3 Per	1973	B50 T SSH MX
19	14-1606	Stud (1/4 UNF/UNC. x 1 3/4)	1971-1972	B50 /B 25
19	21-1893	Stud -oil pump mounting (1/4 UNF/UNC. X 2 3/16) 2 Per	1971	B50 T SSH MX
20	41-0609	Screw -oil pump cover plate (3/16 B.S.C. x 1 5/16) 4 per	1971-1972	B50 T SSH MX
20	70-8100	Screw -oil pump cover plate (3/16 B.S.C. x 1 5/16) 4 Per	1973	B50 T SSH MX
21	67-1391	Oil pump cover plate	1971-1972	B50 T SSH MX
21	70-8099	Oil pump cover plate	1973	B50 T SSH MX

22	71-2124	Oil pump scavenge gear -driven	1971-1973	B50 T SSH MX
23	71-2122	Oil pump scavenge gear -driving	1971-1973	B50 T SSH MX
24	71-2115	Oil pump gasket	1971-1973	B50 /B 25
25	41-706	Dowel -oil pump 2 Per	1971-1972	B50 T SSH MX
25	70-8022	Dowel -oil pump 2 Per	1973	B50 T SSH MX
26	71-1148	Dowel -oil pump body	1971-1973	B50 T SSH MX
27	70-8315	Camsshaft bush	1971-1972	B50 T SSH MX
27	71-2771	Scavenge valve complete	1971-1973	B50 T SSH MX
27	41-624	Scavenge valve complete	1971	B50 T SSH MX
27	70-8017	Scavenge valve complete	1973	B50 T SSH MX
29	71-1424	Scavenge cover gasket	1971-1973	B50 T SSH MX
30	71-2933	Sump plate with filter	1972-1973	B50 T SSH MX
30	67-1286	Sump plate without filter	1971	B50 T SSH MX
31	14-1401	Stud (1/4 UNF/UNC. X 1) 4 per	1971-1973	B50 /B 25
32	70-8071	Washer -scavenge cover fixing (.255 x .500 x .048)	1973	B50 MX
33	14-1901	Nut - Support Plate 1/4 UNF 4 Per		
34	21-2111	Drain plug -gearbox	1972-1973	B50 T SSH MX
35	60-3530	O ring -drain plug	1972-1973	B50 T SSH MX
36	70-9979	Crankcase filter assembly	1971	B50 T SSH MX
36	41-3092	Gearbox sprocket -14 teeth	1972	B50 SS H
36	57-2766	Gearbox sprocket -17 teeth	1973	B50 SS H
34	21-1857	Drain plug -gearbox (1/2 UNC)	1971	B50 T SSH MX
35	57-2697	O ring -drain plug	1973	B50 T SSH MX
35	68-3168	O ring -drain plug	1971	B50 T SSH MX
36	57-4306	Gearbox sprocket -14 teeth	1971-1973	B50 MX
36	41-3095	Gearbox sprocket -16 teeth	1971	B50 SS H
36	57-2701	Gearbox sprocket -16 teeth	1973	B50 SS H
36	41-3094	Gearbox sprocket -15 teeth	1971-1972	B50 T
36	57-2765	Gearbox sprocket -15 teeth	1973	B50 T
37	40-3121	Lockwasher -gearbox sprocket	1971-1972	B50 T SSH MX
37	57-2702	Lockwasher -gearbox sprocket	1973	B50 T SSH MX
48	40-3051	Nut -gearbox sprocket (1 3/16 x 20 t.p.i. WHITWORTH)	1971-1972	B50 T SSH MX
48	57-1434	Nut -gearbox sprocket (1 3/16 x 20 t.p.i. WHITWORTH)	1973	B50 T SSH MX
49	57-2677	Felt washer -gearbox sprocket	1973	B50 T SSH H

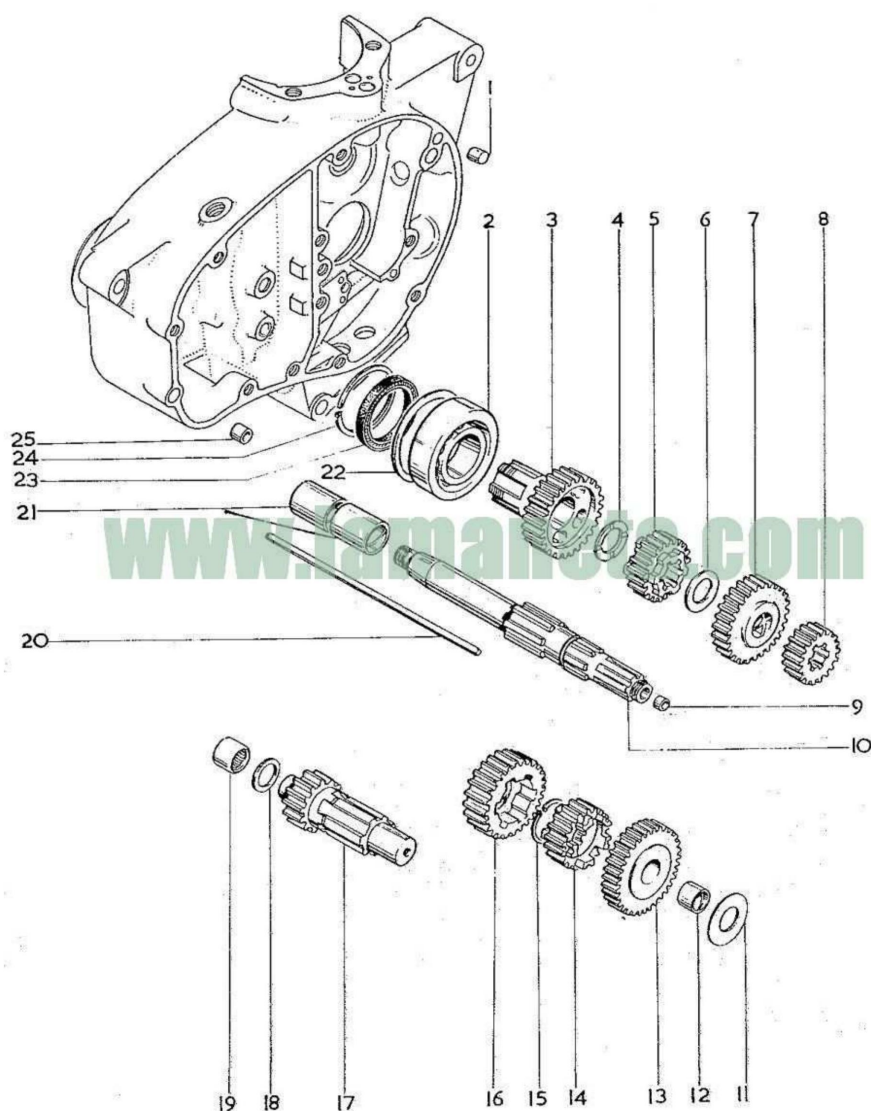

Ref	Part Number	Description	Per	Year	Model
1	40-394	Dowel -inner cover to crankcase	2	1971-73	All B 50
2	29-3857	Mainshaft bearing	2	1971-73	All B 50
3	57-3872	Pinion-mainshaft top gear (22 teeth)	1	1971-73	All B 50
4	40-3020	Spacer (.093-.094)	1	1971-73	All B 50
4	40-3126	Spacer (.098-.099)	AR	1971-73	All B 50
4	40-3127	Spacer (.103-.104)	AR	1971-73	All B 50
5	57-3876	Pinion-layshaft second gear (21 teeth)	AR	1971-73	All B 50
6	40-3019	Spacer (.075-.076)	1	1971-73	All B 50
6	40-3119	Spacer (.070-.071)	1	1971-73	All B 50
6	40-3120	Spacer (.080-.081)	1	1971-73	All B 50
7	57-2662	Pinion-mainshaft third gear (24 teeth)	1	1973	All B 50
7	57-4665	Gear-mainshaft third (24 teeth)	1	1971-73	B 50 MX
8	41-3065	Pinion-mainshaft first gear (18 teeth)	1	1971-72	B 50 MX
8	57-2663	Pinion-mainshaft first gear (16 teeth)	1	1971-73	B 50 T SS H
9	40-3007	Mainshaft bush -push rod	1	1971-73	All B 50
10	57-4682	Mainshaft (complete with 18T gear)	1	1973	B 50 MX
10	57-4344	Mainshaft with bush	1	1971-72	All B 50
11	40-3258	Layshaft shim	1	1971-73	All B 50
12	40-3262	Bush-layshaft first gear	1	1971-73	All B 50
13	41-3073	Pinion-layshaft first gear (25 teeth)	1	1971-73	B 50 MX
13	57-3874	Pinion-layshaft first gear (27 teeth)	1	1971-72	B 50 T SS H
14	57-3877	Pinion-layshaft third gear (19 teeth)	1	1971-73	All B 50
15	41-3078	Layshaft circlip	1	1971-73	All B 50


16	41-3070	Pinion-layshaft second gear (22 teeth)	1	1971-73	All B 50
17	41-3068	Layshaft with top gear (14 teeth)	1	1971-73	All B 50
18	41-3072	Thrust washer (.078-.080)	AR	1971-73	All B 50
18	41-3074	Thrust washer (.083-.085)	AR	1971-73	All B 50
19	40-3292	Bearing, needle roller, layshaft	1	1971-73	All B 50
20	40-3265	Clutch push rod	1	1971-73	All B 50
21	41-3045	Bush-mainshaft top gear	2	1971-73	All B 50
22	71-1271	Shield-gearbox main bearing	1	1971-73	All B 50
23	41-3054	Mainshaft oil seal	1	1971-73	All B 50
24	70-6026	Circlip-mainshaft oil seal	1	1971-73	All B 50
25	71-2547	Dowel -crankcase inner cover	1	1971-73	All B 50
Not illustrated	37-3932	Distance piece - front wheel spindle, inner side right bearing		1971-72	B 50 SS H
Not illustrated	37-1237	Grease retainer -left, outer		1971-73	B 50 T MX
Not illustrated	37-3758	Locknut (25/64 x 3/4 x 3/64)		1971	B 50 T MX
Not illustrated	42-5836	Pivot pin - front brake cable to lever		1971-73	B 50 T MX
Not illustrated	60-2632	Circlip - grease retainer, right		1971-73	B 50 T MX
Not illustrated	60-3152	Gaiter - front brake cable		1971	B 50 T MX
Not illustrated	65-5904	Brake shoe spring		1971-73	B 50 T MX

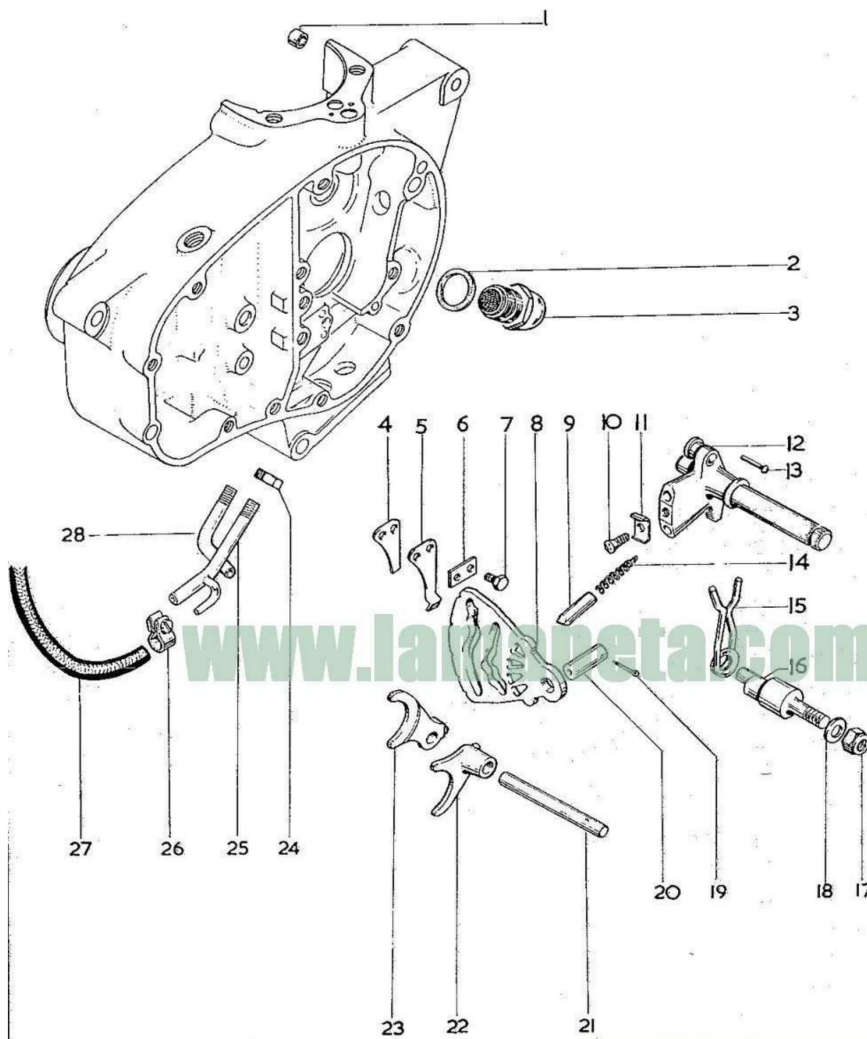

1	67-1236	Crankcase dowel	1971-1972	B50 T SSH MX
1	70-8009	Crankcase dowel	1973	B50 T SSH MX
2	70-1670	Fibre washer - pressure release valve	1972	B50 T SSH MX
2	71-2211	Washer - pressure release valve	1971	B50 T SSH MX
2	70-9737	Joint washer - pressure release valve	1973	B50 MX
3	71-2370	Pressure release valve assembly	1971-1972	B50 T SSH MX
3	71-3684	Pressure release valve complete	1973	B50 MX
4	40-3043	Spring plate	1971-1972	B50 T SSH MX
4	57-1249	Spring plate	1973	B50 T SSH MX
5	40-3042	Cam plate spring	1971-1972	B50 T SSH MX
5	57-2691	Cam plate spring	1973	B50 T SSH MX
6	57-1180	Lock plate - cam plate spring	1973	B50 T SSH MX
7	57-1076	Screw (2 B.A. X 3/8)	1973	B50 T SSH MX
8	57-3850	Cam plate - gearchange	1971-1973	B50 T SSH MX
9	40-3193	Plunger - gearchange quadrant	1971-1972	B50 T SSH MX
9	57-2105	Plunger - gearchange quadrant	1973	B50 T SSH MX
10	40-3323	Screw - plunger retaining plate (5 B.A. X 5/16)	1971-1972	B50 T SSH MX
10	57-2435	Screw - plunger retaining plate (5 B.A. X 5/16)	1973	B50 T SSH MX
11	40-3194	Retaining plate - quadrant plungers	1971-1972	B50 T SSH MX
11	57-2107	Retaining plate - quadrant plungers	1973	B50 T SSH MX
11	57-2167	Retaining plate quadrant plungers	1973	B50 MX
12	40-3321	Gearchange quadrant complete	1971-1972	B50 T SSH MX
12	57-2692	Gearchange quadrant complete	1973	B50 T SSH MX
13	40-3050	Rivet - plunger spring	1971-1972	B50 T SSH MX
13	57-1277	Rivet - plunger spring	1973	B50 T SSH MX
14	40-3155	Plunger spring	1971-1972	B50 T SSH MX
14	57-2106	Plunger spring	1973	B50 T SSH MX
15	40-3061	Gearchange return spring	1971-1972	B50 T SSH MX
15	57-1109	Gearchange return spring	1973	B50 T SSH MX
16	57-3763	Anchor bolt - return spring	1971-1972	B50 T SSH MX

16	57-3763	Anchor bolt - return spring	1971-1972	B50 T SSH MX
16	57-4454	Anchor bolt - return spring	1973	B50 T SSH MX
17	60-2724	Split pin - cam plate spindle (3/32 x 1)	1971-1973	B50 T SSH MX
18	40-3201	Cam plate spindle	1971-1972	B50 T SSH MX


18	40-3201	Cam plate spindle	1971-1972	B50 T SSH MX
18	57-4048	Cam plate spindle	1973	B50 T SSH MX
19	40-3032	Selector fork spindle	1971-1972	B50 T SSH MX
19	57-2688	Selector fork spindle	1973	B50 T SSH MX
20	40-3033	Layshaft selector fork	1971-1972	B50 T SSH MX
20	57-2689	Layshaft selector fork	1973	B50 T SSH MX
21	57-3854	Mainshaft selector fork	1971-1972	B50 T SSH MX
22	71-2240	Oil return pipe	1971	B50 T SSH MX
23	62-263	Clamp - rocker feed pipe	1971-1972	B50 T SSH MX
23	70-8111	Clamp - rocker feed pipe	1973	B50 T SSH MX
23	57-4603	Selector fork - mainshaft	1973	B50 MX
24	21-2117	Nut oil feed and return pipes	1972	B50 T SSH MX
24	40-1037	Rocker oil feed pipe	1971-1972	B50 T SSH MX
24	70-8106	Rocker oil feed pipe	1973	B50 T SSH MX
25	71-2243	Oil feed pipe	1971	B50 T SSH MX
25	71-2656	Oil return pipe	1972	B50 T SSH MX
25	71-5656	Oil return pipe	1973	B50 MX
28	71-2658	Oil feed pipe	1971-1973	B50 T SSH MX
Not illustrated	37-3932	Distance piece - front wheel spindle, inner side right bearing	1971-1972	B50 SSH
Not illustrated	37-1237	Grease retainer - left, outer	1971-1973	B50 T MX
Not illustrated	37-3758	Locknut (25/64 x 3/4 x 3/64)	1971	B50 T MX
Not illustrated	42-5836	Pivot pin - front brake cable to lever	1971-1973	B50 T MX
Not illustrated	60-2632	Circlip - grease retainer, right	1971-1973	B50 T MX
Not illustrated	60-3152	Gaiter - front brake cable	1971	B50 T MX
Not illustrated	65-5904	Brake shoe spring	1971-1972	B50 T MX

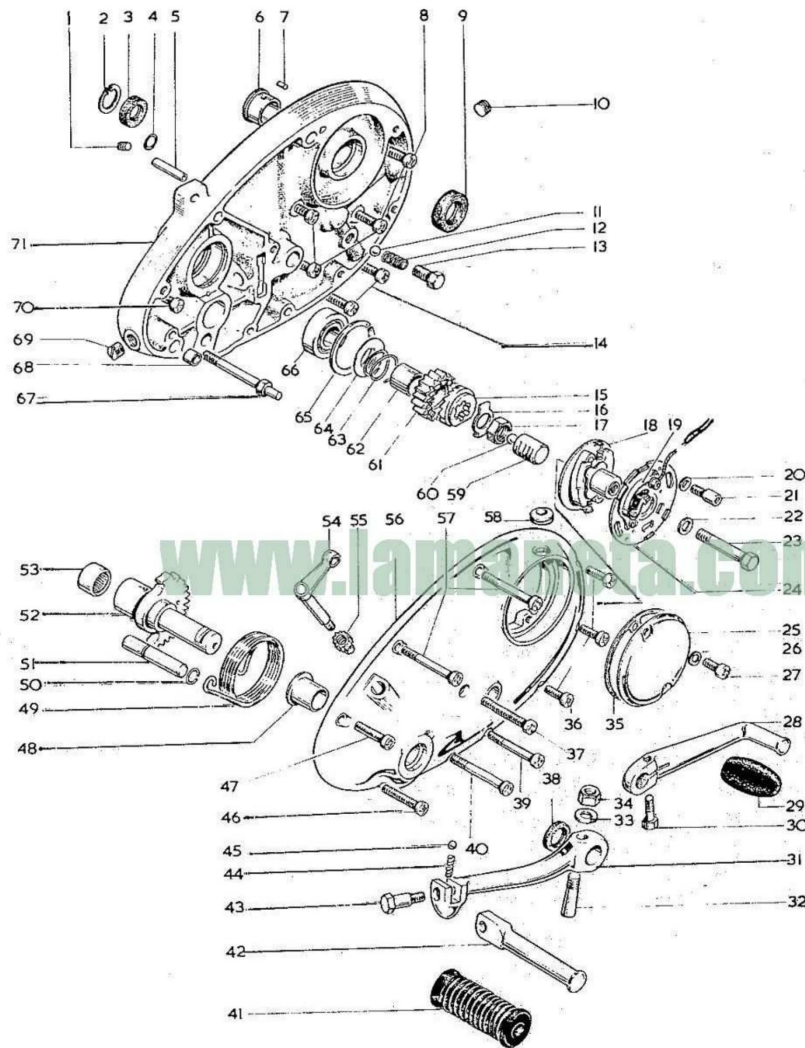

1	53-3049	Plug-mainshaft oil feed	1971-72All B50
2	70-8162	Plug-mainshaft oil feed	1973 All B50
3	40-862	Circlip, crankshaft oil seal	1971-73All B50
4	70-8154	Oil seal - crankshaft	1971-73All B50
5	6-2583	O ring - inner cover	1971-73All B50
6	75-257	Breather pipe - inner cover...	1971-72All B50
7	57-1026	Breather pipe - inner cover	1973 B50 MX
8	40-222	Camshaft bush	1971-73All B50
9	70-3172	Camshaft bush peg	1971-73All B50
10	14-6610	Screw	1971-73All B50
11	40-679	Camshaft oil seal	1971-73All B50
12	70-9526	Sealing plug	1971-73All B50
13	60-2364	Ball Bearing	1971-73All B50
14	40-385	Spring - non-return valve	1971-73All B50
15	21-2044	Plug - non-return valve (3/8 UNC.)	1971-73All B50
16	14-6606	Screw	1971-73All B50
17	57-4339	Kick start ratchet	1971-73All B50
18	57-4343	Mainshaft lockwasher	1971-73All B50
19	76-271	Nut - kickstart ratchet	1971-72All B50
20	57-2686	Nut - kickstart ratchet	1973 B50 MX
21	19-1906	Auto-advance unit - 5 Degree range	1971-72B50 MX
22	19-1853	Auto-advance unit - 15 Degree	1971 B50 T SS H
23	19-1947	Auto-advance unit - 15 Degree range	1973 B50 MX
24	19-1849	Contact set	1971-72All B50
25	19-1948	Contact set	1973 B50 MX
26	40-681	Washer - contact breaker plate fixing	1972 All B50
27	40-682	Washer - contact breaker plate fixing	1971-73All B50
28	40-683	Pillar bolt - contact breaker plate	1971-73All B50
29	71-8163	Washer - auto-advance unit fixing	1971-73All B50
30	14-208	Bolt - auto-advance unit	1971-73All B50
31	19-1852	Contact breaker plate assembly	1971-73All B50
32	70-8737	Contact breaker cover	1971-73All B50
33	54-42	Fibre washer - contact breaker cover	1971-73All B50
34	70-7354	Screw - contact breaker cover	1971-73All B50
35	57-1164	Gearchange pedal	1971-73All B50
36	21-5403	Bolt - gearchange pedal	1972-73All B50
37	57-2648	Rubber - gearchange pedal	1971-73All B50
38	42-6554	Bolt gearchange pedal	1971-73All B50
39	57-2652	Kickstart lever	1971-73All B50
40	57-2764	Kickstart lever complete	1971-73All B50
41	2-2579	Cotter - kickstart lever with Nut & Washer	1971-73All B50
42	33a2-2579A	Cotter - kickstart lever with Nut & Washer - For Worn Kickstart	1971-73All B50
43	60-2320	Washer - kickstart lever cotter	1971-73All B50
44	2-2578	Nut - kickstart lever cotter	1971-73All B50
45	71-1423	Gasket - contact breaker cover	1971-73All B50


36	40-236	Screw - outer cover	1971-72All B50
38	57-2641	Oil seal - kickstart spindle	1971-73All B50
39	14-6612	Screw	1971-73All B50
40	14-6614	Screw	1971-73All B50
41	57-2330	Rubber - kickstart lever	1973 B50 MX
41	57-2759	Rubber - kickstart lever	1971-72All B50
42	57-1272	Folding pedal - kickstart lever	1973 B50 MX
42	57-2646	Folding pedal - kickstart lever	1971-72All B50
43	21-541	Bolt kickstart folding pedal	1973 B50 MX
43	40-3084	Bolt kickstart folding pedal	1971-73All B50
44	40-3085	Spring - kickstart folding pedal	1971-73All B50
45	60-2364	Ball (1/4)	1971-73All B50
46	14-6610	Case screw	1971-73All B50
47	14-6606	Case screw	1971-73All B50
48	57-2642	Bush - kick start spindle	1971-73All B50
49	57-4338	Return spring - kick start lever	1971-73All B50
50	40-3277	Circlip - kick start quadrant stop	1971-73All B50
51	57-4342	Kick start quadrant stop	1971-73All B50
52	57-4341	Kick start spindle complete	1971-73All B50
53	40-3292	Bearing	1971-73All B50
54	57-2750	Clutch lever complete	1971-72All B50
55	40-3283	Pinion - clutch operating lever	1971-73All B50
56	71-2273	Outer timing cover complete	1971 All B50
56	71-2946	Outer timing cover complete	1972 All B50
56	71-3276	Outer timing cover complete	1973 B50 MX
57	14-6612	Case Screw	1971-73All B50
58	41-715	Grommet - contact breaker cable	1971-73All B50
59	40-3282	Rack - clutch operating	1971-73All B50
59	60-2363	Ball - clutch push rod (7/32)	1971-73All B50
60	60-3755	Grommet - contact breaker lead	1971-73All B50
60	40-3272	Bush - kick start ratchet pinion	1971-72All B50
61	57-4336	Kick start ratchet pinion	1971-73All B50
63	70-8152	Circlip main shaft bearing	1973 All B50
63	40-3273	Spring - kickstart ratchet	1971-72All B50
64	57-4452	Washer - kick start ratchet spring	1972-73All B50
65	76-0528	Circlip main shaft bearing	1971-72All B50
66	90-11	Bearing gearbox main shaft	1971-72All B50
67	57-3764	Anchor bolt Kick start return spring	1971-73All B50
68	66-3074	Dowel	1971-73All B50
69	21-1899	Screw plug inner cover	1971-73All B50
70	14-6608	Screw	1971-73All B50
71	71-2652	Inner cover complete	1971-73All B50

Not illustrated 40-0723 Contact breaker lead sleeve 1971-73All B50

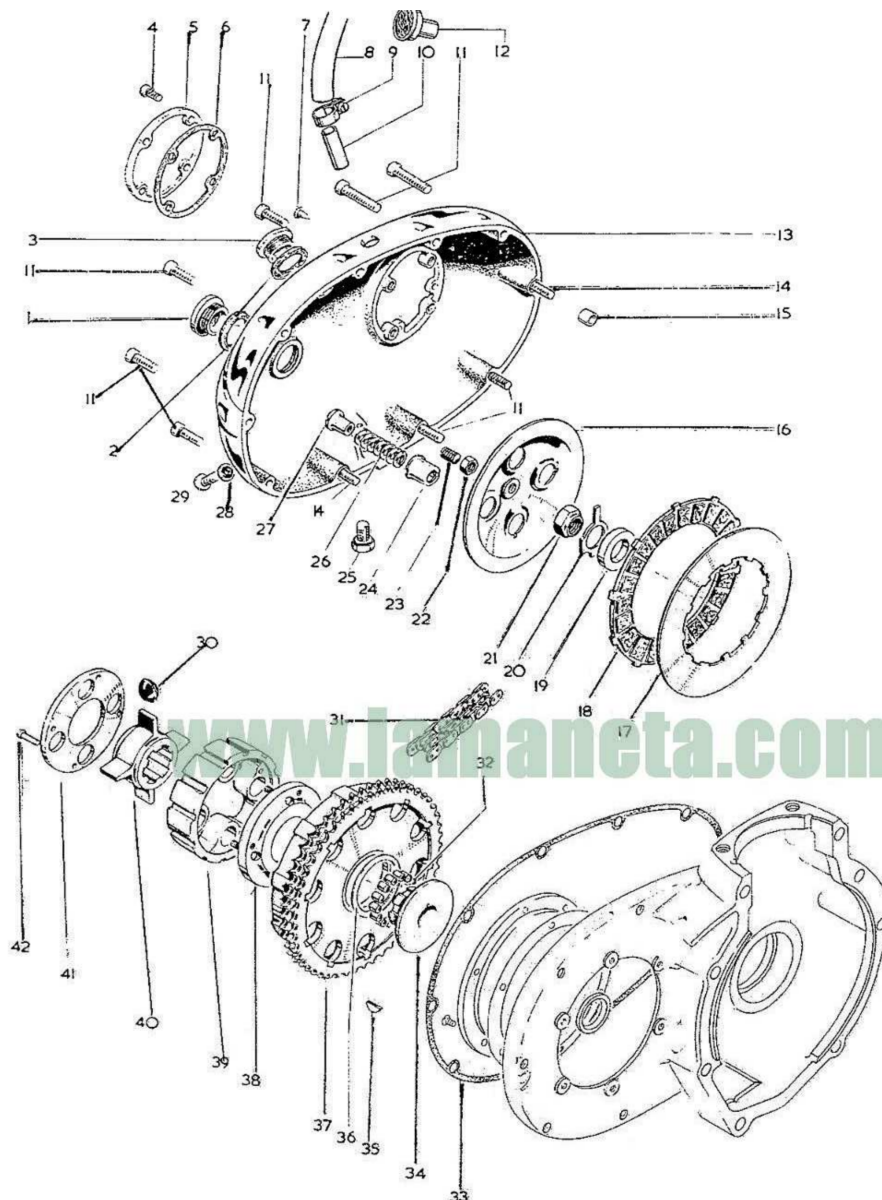


Key Part Number	Description	Per	Year	Model
1 57-2166	Inspection plug, primary cover	1	1971-73	All B50
2 70-8782	Washer, inspection plugs	2	1971-73	All B50
3 70-9800	Inspection plug, primary cover, vented (add your own hole)	1	1971-73	All B50
4 76-4116	Screw, inspection cover	4	1971-73	All B50
5 68-839	Timing inspection cover	1	1971-73	All B50
6 71-1420	Gasket, inspection cover	1	1971-73	All B50
7 40-1005	Ignition timing pointer	1	1971-73	All B50
8 83-4122	Breather pipe	1	1972	All B50
8 83-5115	Breather pipe (long)	1	1973	B50 MX
9 60-2252	Clip - breather pipe	1	1972-73	All B50
10 71-2927	Stub - breather outlet	1	1972-73	All B50
11 14-6610	Case Screw, 1/4 x 1 1/2"	8	1971-73	All B50
12 60-3745	Filter - breather pipe	1	1972-73	All B50
13 71-2025	Primary chain case cover	1	1971-73	All B50
14 21-1951	Case screw, dowel hole (1/4 UNC x 1 7/8)	2	1969 -	All B50
14 21-2153	Case screw, dowel holes (1/4 UNC x 139/64)	2	1972-73	All B50
15 66-3074	Dowel	2	1971-73	All B50
16 57-4019	Clutch pressure plate	1	1971-73	All B50
17 57-2725	Clutch driven plate	5	1971-73	All B50
18 57-2726	Clutch driving plate	5	1971-73	All B50
19 40-3234	Spacing washer, clutch nut	1	1971-73	All B50
20 40-3221	Lockwasher - clutch retaining nut	1	1971-73	All B50
21 40-3227	Clutch retaining nut (1/2 B.S.C.)	1	1971-73	All B50
22 14-401	Nut, pushrod adjusting (1/4 UNF.)	1	1971-73	All B50
23 57-4189	Screw, pushrod adjusting (1/4 UNF. x 5/8)	1	1971-73	All B50
24 57-4121	Spring cup	4	1971-73	All B50
25 21-1943	Drain plug, primary case	1	1971-73	All B50
26 41-3091	Clutch spring	4	1971-73	All B50

27 41-3215	Clutch spring nut	4	1971-73	All B50
28 71-1065	Washer, oil level screw	1	1971-73	All B50
29 14-7804	Screw, oil level	1	1971-73	All B50
30 41-3212	Rubber pad, shock absorber	8	1971-73	All B50
31 19-8683	Primary chain (72 pitches)	1	1971-73	All B50
32 40-3206	Clutch roller (3/16 X 3/16)	25	1971-73	All B50
33 71-1418	Gasket, primary cover	1	1971-73	All B50
34 57-4200	Clutch hub	1	1971-73	All B50
35 40-3150	Key, clutch hub	1	1971-73	All B50
36 57-3931	Thrust washer	1	1971-73	All B50
37 57-4303	Chainwheel	1	1971-73	All B50
38 40-3207	Retaining plate - inner	1	1971-73	All B50
39 57-4186	Clutch centre	1	1971	All B50
39 57-4531	Clutch centre assembly	1	1972-73	B50 MX
39 57-4511	Clutch centre	1	1972-73	All B50
40 41-3209	Clutch spider	1	1971-73	All B50
41 40-3210	Retaining plate - outer	1	1971-73	All B50
42 40-3330	Screw, inner and outer retaining plates (1 B.A. x 15/16)	4	1971	All B50
42 57-4507	Rivet, inner and outer retaining plates	4	1972-73	All B50

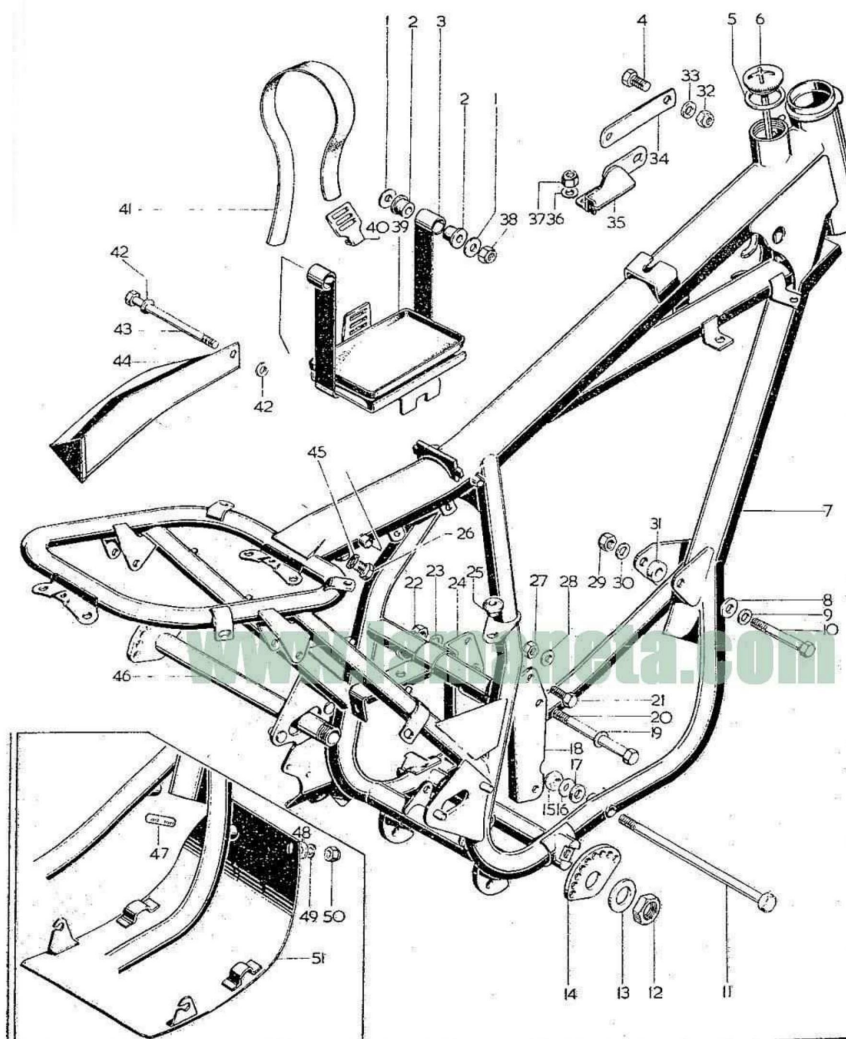


Ref.	Part Number	Description	Per	Year	Model
1	76-101	Washer - battery carrier mounting	4	1971-73	B 50 T SS H
2	83-2204	Bush - battery carrier mounting	4	1971-72	B 50 T SS H
3	83-2018	Battery carrier	1	1971-72	B 50 T SS H
4	14-126	Bolt - engine steady (3/8 UNF. X 3/4)	2	1971-73	All B 50
5	70-3751	Washer - oil filler	1	1971-73	All B 50
6	83-3046	Oil filler cap	1	1971-73	All B 50
7	83-2984	Frame Complete	1	1971-73	B 50 MX
7	83-3996	Frame Complete	1	1971-73	B 50 T SS H
8	83-2004	Distance piece - engine mounting, front	1	1971	All B 50
8	68-4925	Distance piece - exhaust pipe and front engine bolt	1	1972-73	All B 50
10	14-252	Bolt - engine mounting, front (7/16 UNF. X 3)	1	1972-73	All B 50
10	14-230	Bolt - engine mounting, front (7/16 UNF. X 3)	1	1971	All B 50
11	21-2160	Bolt - engine mounting, bottom (3/8 UNF. X 8 3/8)	1	1972-73	All B 50
11	21-2061	Bolt - engine mounting, bottom (3/8 UNF. X 8 3/8)	1	1971	All B 50
12	21-755	Nut - swinging arm pivot (13/16 UN.C.)	1	1971-73	All B 50
13	37-2085	Washer - swinging arm pivot	1	1971-73	All B 50
14	83-3556	Adjuster - swinging arm pivot, right	1	1971-73	All B 50
15	14-1303	Locknut - Engine mounting bottom	2	1971-73	All B 50
16	70-8770	Washer - Engine mounting bottom	2	1971-73	All B 50
17	83-2005	Spacer - Engine mounting bottom	1	1971-73	All B 50
18	83-2015	Engine mounting plate - rear, right	1	1971-73	B 50 T SS
18	83-3937	Engine mounting plate - rear, right	1	1971-72	B 50 H
18	83-4501	Engine mounting plate - rear, right	1	1973	All B 50
19	70-8770	Washer - Engine mounting, rear	2	1971-73	All B 50
20	21-671	Bolt - engine mounting, rear (3/8 UNF. X 3 7/8)	1	1971-73	All B 50
21	14-114	Bolt - engine steady (3/8 UNF. X 3/4)	4	1971-72	All B 50
21	14-126	Bolt - engine steady (3/8 UNF. X 3/4)	4	1973	All B 50
22	14-1303	Locknut (3/8 UNF.)	1	1971-73	All B 50
23	70-8770	Washer	2	1971-73	All B 50
24	83-2014	Engine mounting plate - rear, left	1	1971-72	All B 50
25	83-2006	Grommet - battery carrier mounting	1	1971-72	B 50 T SS H
26	21-2015	Oil drain plug	1	1971-73	All B 50
27	14-1302	Locknut - engine mounting plate bolt (5/16 UNF.)	4	1971-73	All B 50
28	71-1003	Washer - engine mounting, rear	8	1973	All B 50
28	75-176	Washer - engine mounting, rear	8	1971-72	All B 50
29	14-1303	Locknut - engine mounting front (3/8 UNF.)	4	1971	All B 50
29	14-1302	Locknut - engine mounting front (5/16 UNF.)	4	1972	All B 50
29	14-1304	Locknut - engine mounting front (7/16 UNF.)	4	1973	All B 50
30	70-8770	Washer - engine mounting front	1	1971	All B 50
30	60-2532	Washer - engine mounting front	1	1972-73	All B 50
31	83-3998	Distance piece - engine mounting, front	1	1972-73	All B 50
32	14-1303	Locknut - engine steady (3/8 UNF.)	2	1972-73	All B 50

33	60-2331	Washer - engine steady	2	1971-73	All B 50
34	83-3840	Engine steady stay	1	1971-73	All B 50
35	83-3838	Engine steady bracket	1	1971-73	All B 50
36	60-2330	Washer - engine steady stay	2	1971-73	All B 50
37	14-1302	Locknut - Engine steady stay (5/16 UNF.)	2	1971-73	All B 50
38	14-1301	Locknut - Battery tray (1/4 UNF.)	2	1971-72	All B 50
39	68-4597	Battery tray/mat	1	1971-72	B 50 T SS H
40	82-9004	Hook - battery strap	1	1971-72	B 50 T SS H
41	68-4577	Battery strap	1	1971-72	B 50 T SS H
42	60-2347	Washer - tool tray mounting	4	1971-72	All B 50
43	21-2060	Bolt - tool tray and battery carrier mounting (1/4 UNF. x 4 3/4)	2	1971-72	All B 50
44	83-2671	Tool tray	1	1971-72	All B 50
45	54-8006	Washer - drain plug	1	1971-73	All B 50
46	83-3554	Spindle assembly - swinging arm	1	1971-73	All B 50
47	21-2137	Stud - engine shield fixing (1/4 UNF. x 15/16)	1	1972-73	All B 50
47	21-543	Bolt - engine shield fixing (1/4 UNF. x 15/16)	2	1971	All B 50
48	70-3302	Washer - engine shield fixing (1/4 x 1/2 x 5/64)	2	1971-73	All B 50
49	60-2427	Spring Washer - engine shield fixing (1/4 UNF. x 1/4)	2	1972-73	B 50 T
50	14-1301	Locknut - engine shield fixing	2	1972-73	All B 50
51	83-2228	Engine shield	1	1971-73	B 50 T
Not illustrated	60-3921	Bolt - Tachometer drive fixing			B 50 / B 25
Not illustrated	14-214	Bolt - coil and bracket (1/4 UNF. X 4)			B 50 MX
Not illustrated	83-3306	Bracket - coil mounting			B 50 MX

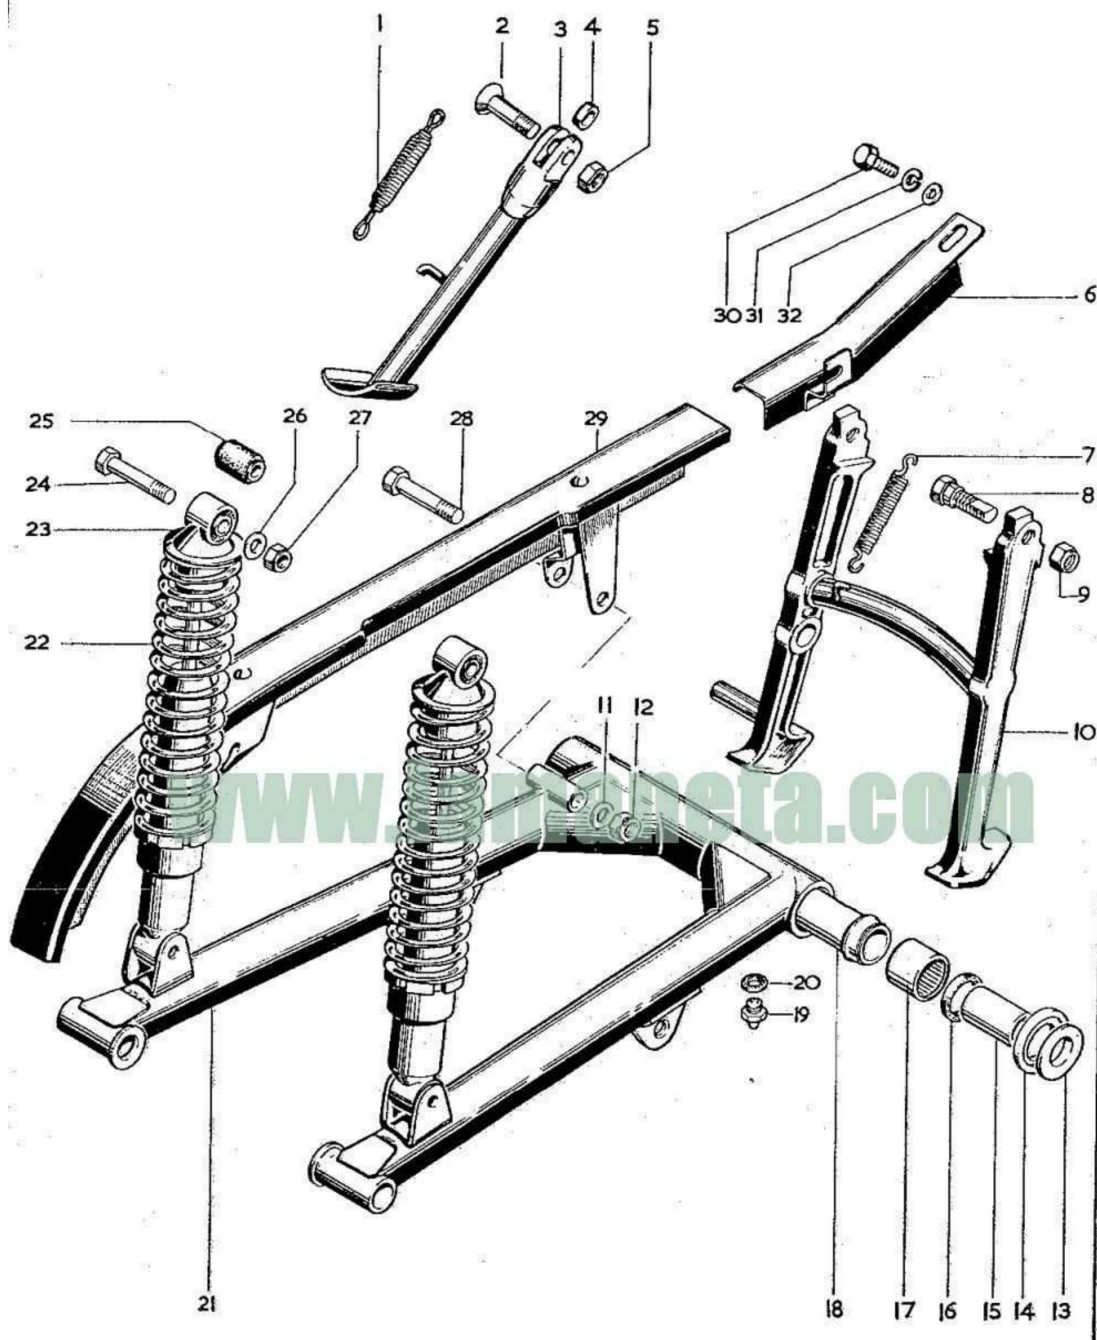


Ref	Part Number	Description	Per Model
1	68-4708	Spring - prop stand	1 All B50
2	14-232	Bolt - prop stand (3/8 UNF. X 1 3/8)	1 All B50
3	83-3162	Prop stand	1 All B50
3	83-4278	Prop stand	1 All B50
4	83-3165	Distance piece	1 All B50
5	14-1303	Nut - prop stand pivot bolt	1 All B50
6	83-2674	Chainguard extension	1 All B50
7	82-4671	Spring - centre stand	1 All B50
8	21-2077	Bolt - centre stand fixing	1 All B50
9	14-1304	Locknut - centre stand bolt (7/16 UNF.)	1 All B50
10	83-3170	Centre stand (optional extra in 1973)	1 All B50
11	60-2339	Washer - chainguard to swinging arm	1 All B50
12	14-1302	Locknut - chainguard bolt (5/16 UNF.)	1 All B50
13	83-2233	Thrust washer - swinging arm	1 All B50
14	83-3014	Seal - thrust washer	1 All B50

15	83-2012	Sleeve - inner	1 All B50
16	83-2244	Oil seal - swinging arm	1 All B50
17	83-2245	Needle bearing - swinging arm	2 All B50
18	83-1969	Spacer tube - swinging arm bearing	1 All B50
19	60-1841	Grease nipple - swinging arm	1 All B50
20	24-1088	Washer - swinging arm	1 All B50
21	83-2212	Swinging arm complete	1 All B50
22	19-7460	Suspension unit spring (Girling 64543626)	2 B50 MX
22	19-7458	Suspension unit spring (Girling 64543708)	2 All B50
23	19-7456	Suspension unit complete (Girling S. 2488)	2 B50 MX
23	19-7454	Suspension unit complete (Girling S. 2484)	2 All B50
23	19-7474	Suspension unit complete (Girling 64052453)	2 All B50
24	14-234	Bolt - suspension unit	4 All B50
25	19-7461	Bush - suspension unit (Girling 64533645)	2 All B50
26	60-2322	Washer - suspension unit fixing, top and bottom	4 All B50
27	14-1303	Nut - suspension unit	4 All B50
28	14-6221	Bolt - chainguard to swinging arm (5/16 UNF. X 2)	2 All B50
29	83-2224	Chainguard complete	1 All B50
30	14-6101	Screw - chainguard extension fixing	1 All B50
31	60-2417	Lockwasher - chainguard extension fixing	1 All B50
31	60-2329	Washer - chainguard extension fixing	1 All B50

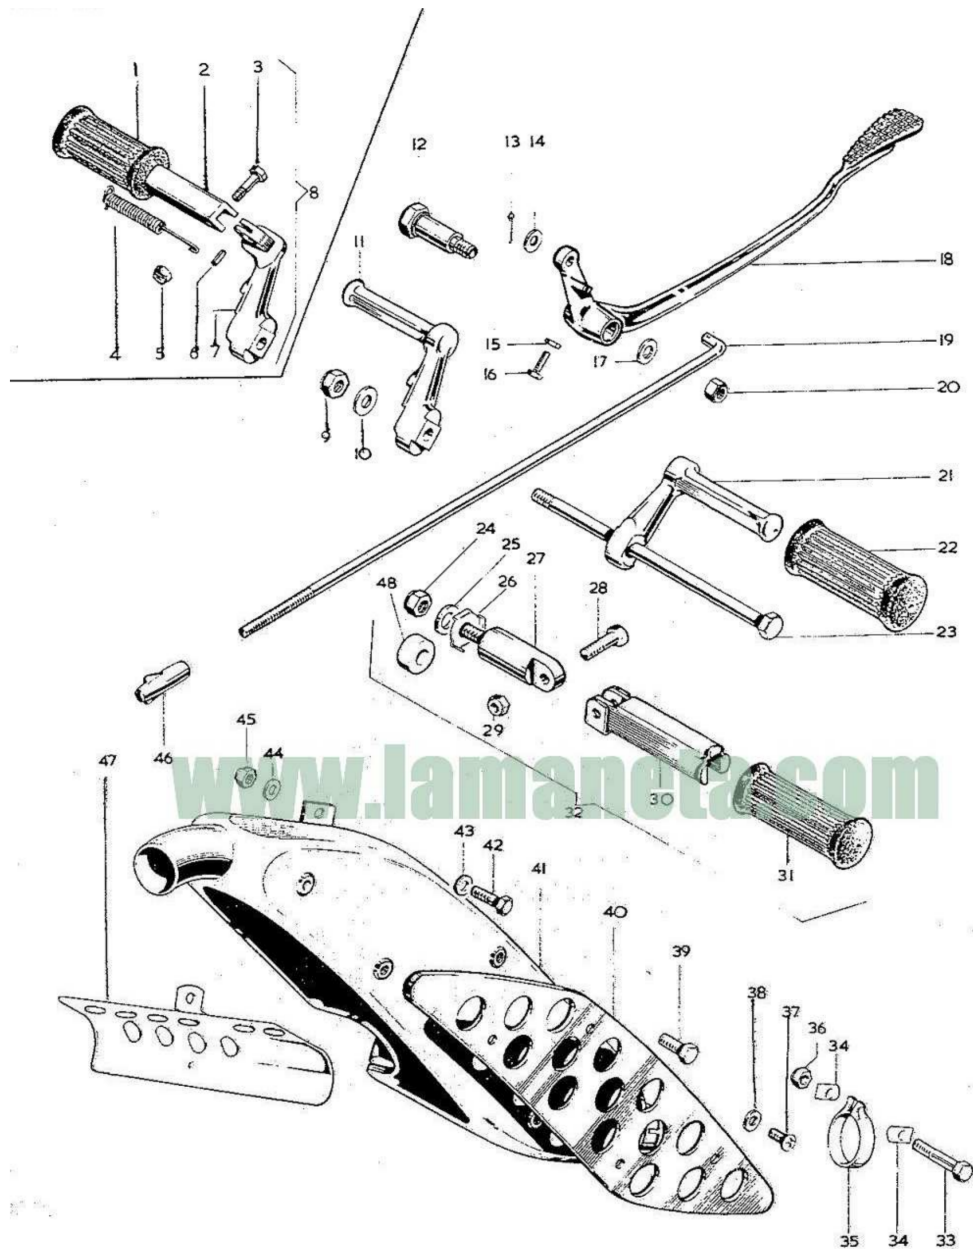


Ref.	Part Number	Description	Per Model
1	42-4925	Footrest Rubber - folding footrest	2 Trials MX
1	42-4925A	Footrest Rubber - folding footrest (With Logo)	2 Trials MX
2	83-3092	Folding footrest support	2 Trials MX
3	14-216	Bolt - folding footrest pivot	2 Trials MX
4	83-3095	Return spring - folding footrest	2 Trials MX
5	14-1302	Nut - Folding footrest bolt	2 Trials MX
6	83-3094	Anchor peg - return spring	2 Trials MX
7	83-2218	Bracket - folding footrest, left	1 Trials MX
7	83-2220	Bracket - folding footrest, right	1 Trials MX
8	83-2781	Complete Bracket - Left	1 Trials MX
8	83-3013	Complete Bracket - Right	1 Trials MX
9	14-1303	Nut - footrest bolt (3/8" UNF)	1 All
10	2-2138 Q	Washer - Footrest bolt	1 All
11	83-3015	Footrest - left	1 SS Standard
12	21-2045	Pivot - rear brake pedal	1 All
13	60-2683	Split pin - brake rod	1 All
14	83-4277	Washer - brake pivot bolt	1 All
15	14-1301	Locknut - brake pedal pivot bolt	1 All
16	14-0103	Screw - brake pedal adjuster	1 All
17	2-2138 Q	Washer - brake pedal bolt	1 All
18	83-2040	Brake pedal	1 All
19	83-2616	Brake rod	1 All
20	14-1303	Locknut - brake pedal pivot	1 All
21	83-3017	Footrest - right	1 SS H
22	40-4850	Footrest Rubber	2 SS H
23	21-2094	Footrest bolt	1 All
24	14-1303	Nut - footrest bolt (3/8" UNF)	2 All (Not MX)

25	40-0157	Washer - Rear footrest anchor bolt	2 All (Not MX)
26	83-3638	Lockwasher - rear footrest, right	1 All (Not MX)
27	83-4133	Anchor bolt - rear footrest	2 All (Not MX)
28	14-0216	Bolt - Rear footrest pivot	2 All (Not MX)
29	14-1302	Nut - Folding footrest bolt	2 All (Not MX)
30	68-4835	Rear footrest	2 All (Not MX)
31	29-7583	Rubber - pillion footrest	2 All (Not MX)
32	83-3032	Rear footrest complete - left and right	2 All (Not MX)
33	14-0218	Bolt - Silencer Clamp	1 All
34	71-2894	D washer - clamp bolt	2 All (Not H)
34	75-2519	D washer - clamp bolt	2 H
35	71-2895	Clamp - silencer to exhaust pipe	1 All (Not H)
35	71-2725	Clamp - silencer to exhaust pipe	1 H
36	21-1908	Nut - silencer clamp bolt	1 All (Not H)
36	14-1302	Nut - silencer clamp bolt	1 H
37	14-2203	Screw - Heat shield fixing	5 T SS
38	68-0331	Washer - Heat shield fixing	5 T SS
39	14-0113	Bolt - Silencer fixing, lower	1 All (Not MX)
40	71-2114	Heat shield	1 T SS
41	71-1710	Silencer	1 H
41	71-2401	Silencer	1 T SS
42	14-0116	Bolt - silencer fixing, top (5/16 UNF. x 1)	1 T SS
43	15-5155	Washer - Silencer Fixing	4 T SS
44	83-4322	Distance piece - silencer top fixing	1 T SS
45	14-1302	Nut - Silencer fixing	2 Trials MX
46	82-7387	Adjuster nut - brake rod	1 All
47	71-2402	Heat shield - tail pipe	1 T SS H
48	40-4080	Distance piece - rear footrest, right	1 T SS H
Not illustrated 14-0101 Bolt - Silencer to bracket			
Not illustrated 14-1381 Locknut - silencer bracket bolt			
Not illustrated 14-0115 Bolt - megaphone bracket to frame (5/16 UNF. X 7/8)			
Not illustrated 54-8003 Washer - silencer clamp bolt			
Not illustrated 14-1302 Nut - Megaphone Fixing			

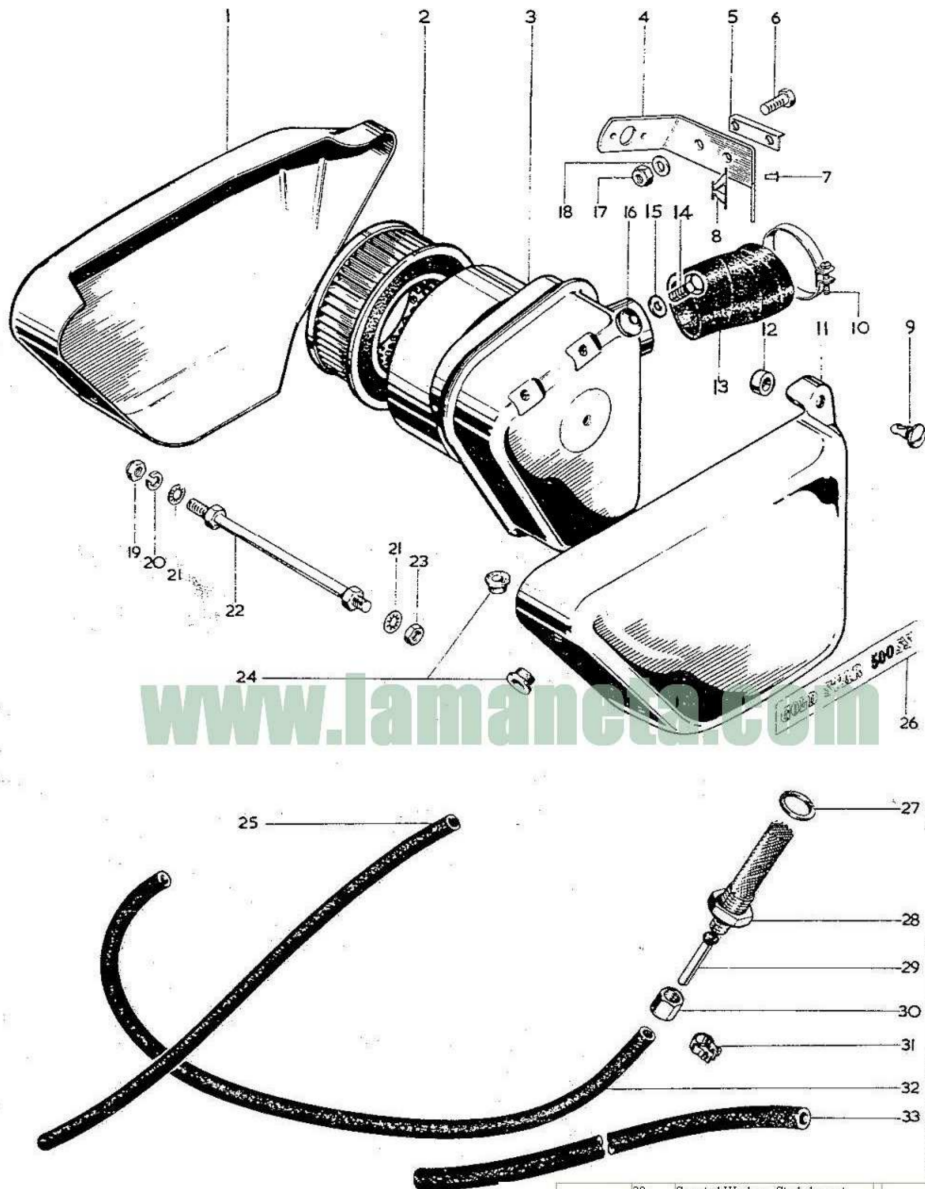


Ref. Part Number	Description	Per Model
1 83-2937	Side cover - left	1 All (Not MX)
2 60-2601	Element - air cleaner	1 All
3 83-3299	Air filter box	1 Motor Cross
3 83-3541	Air filter box	1 All (Not MX)
4 83-3721	Bracket - side cover fixing	1 All (Not MX)
4 83-3035	Bracket - side cover fixing	1 Motor Cross
5 83-3632	Tab washer - front fixing bracket	1 All (Not MX)
6 14-102	Bolt - Front Fixing bracket	2 All (Not MX)
7 83-2785	Rivet - Oddie Clip	4 All (Not MX)
8 68-9115	Oddie clip - side cover fixing	2 All (Not MX)
9 60-3159	Rivet - Oddie clip fixing	2 All (Not MX)
10 60-3536	Clamp - Carburettor hose	1 All (Not MX)
12 60-3160	Rubber washer - Oddie fastener	2 All (Not MX)
13 83-2507	Rubber sleeve - air cleaner to carburettor	1 All (Not MX)
14 14-103	Bolt - Air filter box mounting	2 All (Not MX)
15 40-2705	Washer - Air filter box mounting	4 All (Not MX)
16 60-3161	Grommet - side cover mounting	2 All (Not MX)
17 14-1301	Nut - Front Fixing Bracket	2 All (Not MX)
18 27-8560 Q	Washer - Front Fixing Bracket	2 All (Not MX)
19 14-1901	Nut - Air Filter element fixing	1 All (Not MX)
20 60-2427	Spring Washer - Air filter element fixing	1 All (Not MX)

21	29-0541	Serrated Washer - Stud element fixing	2 All (Not MX)
22	83-3605	Stud assembly - air filter element fixing	1 All (Not MX)
23	14-0401	Nut - Air filter stud fixing	1 All (Not MX)
24	83-2006	Grommet - Side Cover and Air filter box	5 All (Not MX)
25	83-3077	Breather pipe - Oil reservoir	1 All (Not MX)
26	60-3262	Transfer - side cover	2 Street Scrambler Standard
26	60-3732	Transfer - side cover	2 Trials
27	40-8331	Fibre washer - frame oil filter	1 All
28	82-9430	Oil filter - frame	1 All
29	40-8322	Oil feed pipe	1 All
30	40-8323	Nut - oil pipe union	1 All
31	68-8343	Clamp - oil pipe	4 All
32	83-3078	Oil feed pipe - frame to engine	1 All
33	83-3076	Oil return pipe - Engine to frame	1 All
Not illustrated	60-3483	Connecting hose - air filter to carburettor	1 Motor Cross
Not illustrated	83-3305	Air filter fixing plate	1 Motor Cross
Not illustrated	83-3473	Number plate -left	1 Motor Cross
Not illustrated	83-3474	Number plate -right	1 Motor Cross
Not illustrated	83-3475	Number plate -left	1 Motor Cross
Not illustrated	83-3476	Number plate -right	1 Motor Cross

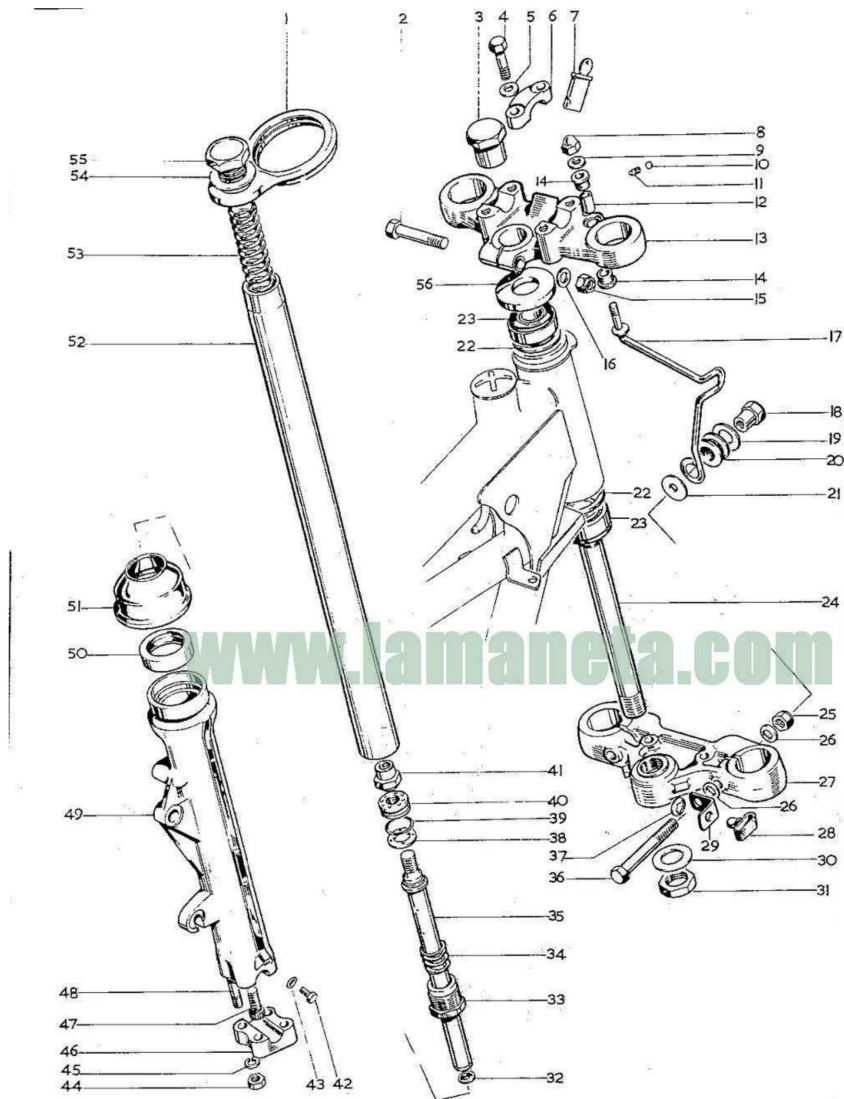

Ref.	Part Number	Description	Qty	Model
	97-4355	Front Fork Complete	1	All (Not MX)
	97-4366	Front Fork Complete	1	MX
1	97-4026	Mounting bracket - Speedometer / tachometer, 80 mm	1	All (Not MX)
2	14-0236	Pinch bolt (3/8 UNF x 2 1/4)	1	All
3	97-4317	Nut - steering stem adjuster	1	All
4	14-6219	Bolt - Handlebar clamp	4	All
5	42-157	Washer - handlebar cap	4	All
6	97-722	Handlebar cap	2	All
7	68-5050	Steering lock and key	1	All (Not MX)
8	21-1809	Nut - headlamp mounting, top (domed 1/4 UNF)	2	All (Not MX)
9	60-2338	Washer - head lamp mounting, top	2	All (Not MX)
10	97-2266	Sealing washer - steering lock grub-screw	1	All (Not MX)
11	21-0578	Grub - screw - steering lock	1	All (Not MX)
12	83-2211	Spacer - headlamp mounting bush	2	All (Not MX)
13	97-4115	Top yoke complete	1	All (Not MX)
13	97-3985	Top yoke complete	1	MX
14	83-2209	Bush - head lamp mounting	4	All (Not MX)
15	14-1303	Nut - Top yoke pinch bolt	1	All
16	2-2138 Q	Washer - Top yoke pinch bolt	1	All
17	97-4048	Bracket - headlamp mounting, left	1	All (Not MX)
17	97-4050	Bracket - headlamp mounting, right	1	All (Not MX)
18	21-2062	Sleeve nut - head lamp mounting bracket	2	All (Not MX)
19	60-2333 Q	Washer - Sleeve nut	2	All (Not MX)
20	60-2630	Grommet - sleeve nut, head lamp mounting bracket	2	All (Not MX)


21	82-9046	Washer - sleeve nut	2	All (Not MX)
22	83-2007	Bearing abutment ring	2	All
23	97-4031	Taper roller bearing - steering head	2	All
24	97-4319	Steering stem	1	All
25	14-1203	Locknut - bottom yoke pinch bolt (3/8 UNF)	2	All
26	2-2138 Q	Washer - Bottom yoke pinch bolt	4	All
27	97-3987	Bottom yoke	1	All
28	97-2270	Retainer - brake cable	1/2	All
29	97-3682	Bracket - brake cable retainer	1/2	All
30	60-2336	Washer - steering stem	1	SS H
31	14-7308	Locknut (3/4 UN C.)	1	All
32	97-4004	Washer - damper tube	2	All
33	97-4076	Stanchion end plug complete	2	All
34	97-4009	Recoil spring	2	All
35	97-3996	Damper tube complete	2	All
36	14-240	Bolt (3/8 UNF x 3 1/4)	2	All (Not MX)
37	82-8245	Lockwasher - brake cable retainer	1/2	All (Not MX)
38	97-4010	Washer - damper	2	All
39	97-4003	O ring - damper valve	2	All
40	97-4020	Valve - damper	2	All
41	97-4012	Nut - damper valve	2	All
42	97-3894	Drain plug - outer member	2	All
43	97-3893	Washer - drain plug	2	All
44	14-0302	Nut - Fork end cap	8	All
45	60-2428	Spring Washer - Fork end cap	8	All
46	97-3947	Fork end cap	2	All
47	14-1019	Bolt - damper tube (5/16 UNF x 7/8)	2	All
48	21-2102	Shut - fork end cap (5/16 UNF AUNC. X 1 7/8)	8	All
49	97-4032	Outer member complete - right	1	All
49	97-4033	Outer member complete - left	1	All
50	97-4001	Oil seal - outer member	2	All
51	97-4002	Scraper sleeve - outer member	2	All
52	97-4003	Fork stanchion	2	All
53	97-4011	Fork spring	2	All
54	97-4166	Washer - top cap nut	2	All
55	97-4258	Nut - top cap	2	All
56	97-4028	Dust cover - steering head	2	All
Not illustrated	37-4185	Front wheel, with brake		MX
Not illustrated	37-4186	Front wheel less brake		MX

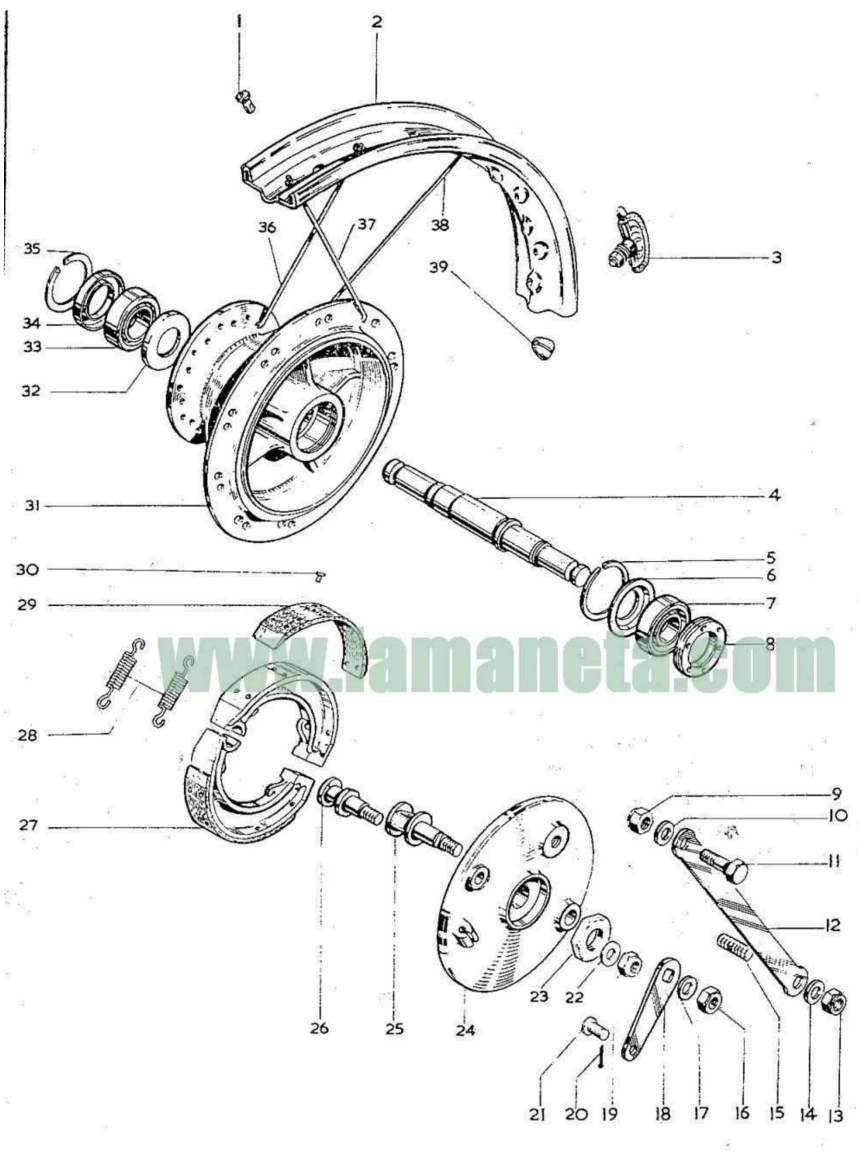

Ref.	Part Number	Description	Per Model
	37-3791	Front Wheel, Less brake	1 Trial Moto-cross
	37-3792	Front Wheel, With brake	1 Trial Moto-cross
1	27-6810	Spoke Set	1 Trial Moto-cross
1	27-6810	Spoke Set Stainless Steel	1 Trial Moto-cross
2	37-3795	Wheel rim (WM 1 X 20) - Standard Chrome	1 Trial Moto-cross
2	37-3795	Wheel rim (WM 1 X 20) - High level Chrome	1 Trial Moto-cross
2	37-3795	Wheel rim (WM 1 X 20) - Polished Stainless Steel	1 Trial Moto-cross
3	37-3584	Security bolt	1 Trial Moto-cross
4	37-3796	Wheel Spindle	1 Trial Moto-cross
5	60-2632	Circlip - Grease retainer	1 Trial Moto-cross
6	37-3797	Grease retainer -right	1 Trial Moto-cross
7	37-0653	Bearing, rear hub	1 Trial Moto-cross
8	37-3759	Lock Ring - Bearing right	1 Trial Moto-cross
9	14-1304	Locknut - anchor strap at fork leg	1 Trial Moto-cross
10	60-2332	Washer - nut anchor strap at brake plate	1 Trial Moto-cross
11	14-0134	Bolt - anchor strap to leg, Shorten this bolt - > 67-354	1 Trial Moto-cross
12	83-2600	Anchor strap	1 Trial Moto-cross


15	21-2063	Stud - anchor strap to brake plate	1 Trial Moto-cross
16	14-1303	Locknut - Brake lever	1 Trial Moto-cross
17	60-2331	Washer - nut brake lever	1 Trial Moto-cross
18	37-3694	Brake lever	1 Trial Moto-cross
19	14-1303	Locknut - Fulcrum pin	1 Trial Moto-cross

20	60-2683	Split pin - brake cable pivot	1 Trial Moto-cross
21	42-5836	Pivot Pin - front brake cable	1 Trial Moto-cross
22	37-3704	Brake anchor plate	1 Trial Moto-cross
22	60-2331	Washer (3/8 x 3/4 X 5/64)	1 Trial Moto-cross
23	37-2058	Locknut	1 Trial Moto-cross
24	37-3704	Brake anchor plate	1 Trial Moto-cross
25	37-3799	Brake cam complete	1 Trial Moto-cross
26	37-3798	Fulcrum pin	1 Trial Moto-cross
27	37-3804	Brake shoe complete	1 Trial Moto-cross
28	65-5004	Spring - brake shoe return	2 Trial Moto-cross
29	19-7707	Brake shoe lining	2 Trial Moto-cross
30	29-5853	Rivet - brake shoe lining	16 Trial Moto-cross
31	37-3793	Hub Complete with spindle and bearings	1 Trial Moto-cross
32	37-1481	Grease retainer - left inner	1 Trial Moto-cross
33	37-0653	Bearing	1 Trial Moto-cross
34	37-1237	Grease retainer - left outer	1 Trial Moto-cross
35	37-0280	Circlip - grease retainer left	1 Trial Moto-cross
36/37/38	37-3697	Spoke set	1 Trial Moto-cross
36/37/38	37-3697	Spoke set Stainless Steel	1 Trial Moto-cross
39	37-3670	Balance weight - Long	1 Trial Moto-cross
39	37-3969	Balance weight - short	1 Trial Moto-cross

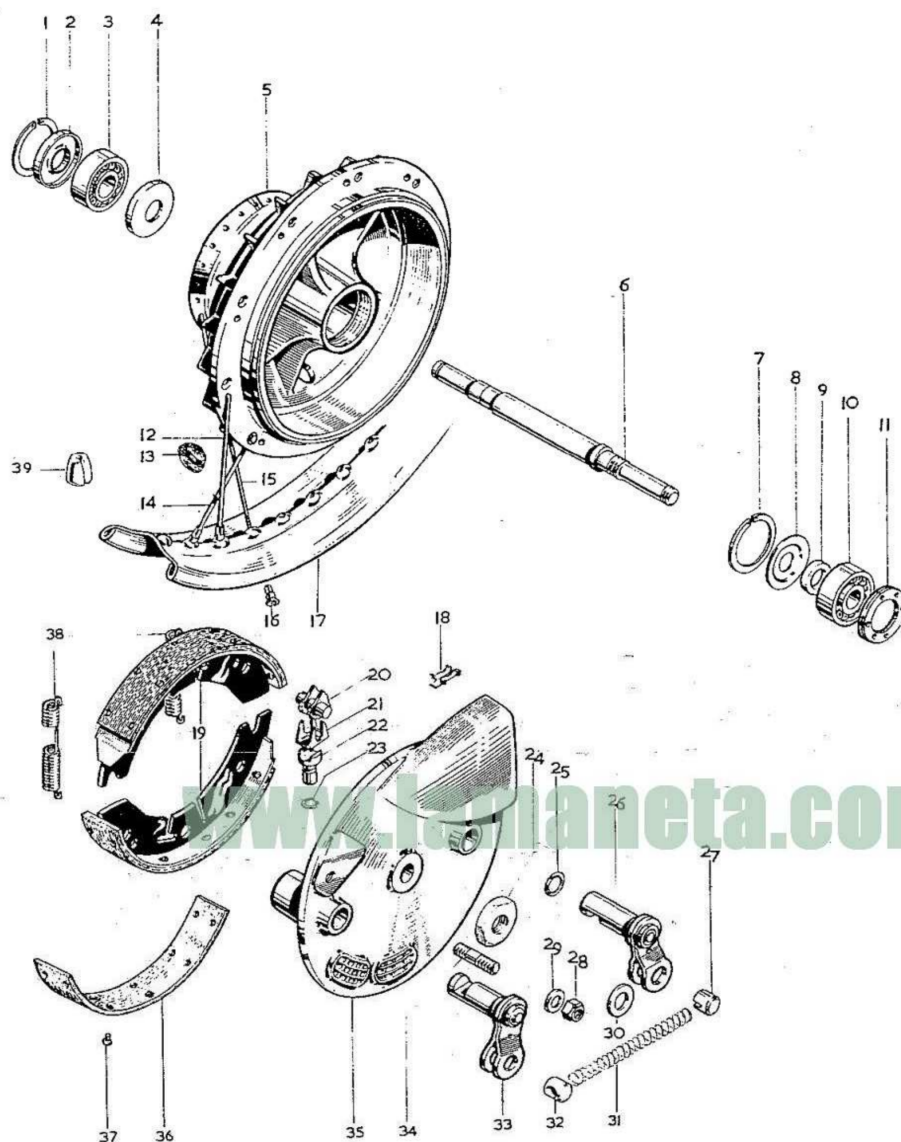


Ref.	Part Number	Description	Per Model
1	37-3735	Front Wheel, less brake	1 Street Scrambler
2	57-0280	Circlip - grease retainer left	1 Street Scrambler
3	37-0653	Bearing	1 Street Scrambler
4	37-1481	Grease retainer - left inner	1 Street Scrambler
5	37-3848	Hub complete with spindle and bearings	1 Street Scrambler
6	37-3796	Wheel spindle	1 Street Scrambler
7	60-2632	Circlip - grease retainer left	1 Street Scrambler
8	37-3797	Grease retainer - right	1 Street Scrambler
9	37-3932	Distance piece - wheel spindle, right bearing, inner	1 Street Scrambler
10	37-0653	Bearing	1 Street Scrambler
11	37-3759	Lockring - Bearing	1 Street Scrambler
12	37-3817	Spoke Set (Complete)	1 Street Scrambler
12	37-3817	Spoke Set - Stainless Steel	1 Street Scrambler
13	60-3669	Grommet - Brake drum	1 Street Scrambler

14	37-3816	Spoke - right, inner	1 Street Scrambler
14/15/16	37-3816	Spoke Set (Complete, same as No.12)	1 Street Scrambler
14/15/16	37-3816	Spoke Set - Stainless Steel (Complete, same as No.12)	1 Street Scrambler
17	37-3785	Wheel Rim (WM2 x 18) - Standard Chrome	1 Street Scrambler
17	37-3785	Wheel Rim (WM2 x 18) - High Level Chrome	1 Street Scrambler
17	37-3785	Wheel Rim (WM2 x 18) - Polished Stainless Steel	1 Street Scrambler
18	19-7743	Abutment - Micram adjuster	2 Street Scrambler
19	19-7744	Brake shoe complete	2 Street Scrambler
20	19-7742	Micram adjuster	2 Street Scrambler
21	19-7741	Cage - brake adjuster	2 Street Scrambler
22	37-3762	Tappet - brake cam	2 Street Scrambler
23	37-3761	Ring - brake tappet	2 Street Scrambler
24	37-2058	Locknut - wheel spindle	2 Street Scrambler
25	60-2639	Ring - brake cam	2 Street Scrambler
26	37-3987	Brake lever - front	1 Street Scrambler
27	37-3996	Bush - cable to levers, front	1 Street Scrambler
28	14-1303	Nut - anchor plate to fork	1 Street Scrambler
29	60-2340	Washer - anchor plate to fork	1 Street Scrambler
30	67-645	Washer - cable to lever bush	2 Street Scrambler
31	37-4014	Return spring - brake levers	1 Street Scrambler
32	37-3986	Brake lever - rear	1 Street Scrambler
33	14-1635	Stud - anchor plate to fork leg	1 Street Scrambler
34	37-3655	Brake anchor plate	1 Street Scrambler
35	19-7466	Lining - brake shoe	1 Street Scrambler
36	19-7467	Rivet - brake shoe	10 Street Scrambler
37	37-3997	Bush - cable to lever, rear	1 Street Scrambler
38	19-7745	Spring - brake shoe	2 Street Scrambler

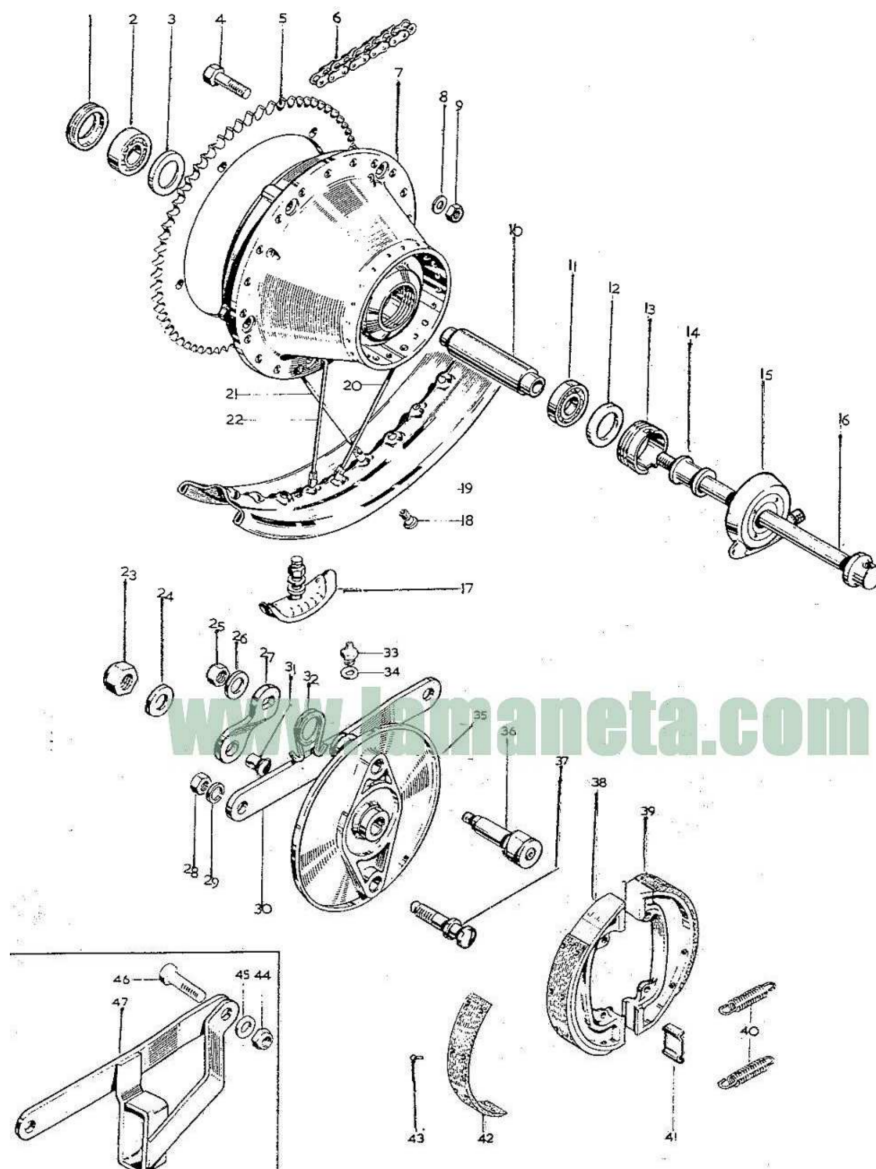


Ref	Part Number	Description	Per Model
1	37-3752	Lock ring - left	1 All
2	37-0653	Bearing - Left	1 Trials Standard
2	37-1340	Bearing - Left	1 Motocross
3	37-3749	Support ring - left	1 All
4	14-207	Bolt - sprockets to Hub (1/4 UN.F. x 2)	5 All
5	37-3992	Sprocket - 47 teeth	1 Street Scrambler Standard
5	37-3741	Sprocket - 52 teeth	1 Trials Motocross
6	19-8711	Chain - rear (5/8 x 1/4 x 105 pitches)	1 Street Scrambler Standard
6	19-8698	Chain - rear (5/8 x 1/4 x 106 pitches)	1 Motocross
6	19-8701	Chain - rear (5/8 x 1/4 x 107 pitches)	1 T
7	37-3907	Hub complete with spindle and bearing	1 Trials Standard
7	37-3908	Hub complete with spindle and bearing	1 Motocross
8	60-2320	Washer - sprocket bolt (9/32 x 9/16 X 1/16)	5 All
9	14-1301	Nut - sprocket fixing	5 All
10	37-3753	Spacer - bearing	1 All
11	37-0653	Bearing - Right	1 Trials Standard
11	37-1340	Bearing - Right	1 Motocross
12	37-3909	Grease retainer - right	1 Motocross
12	37-1654	Grease retainer - right	1 Trials Standard
13	37-3751	Ring - speedometer drive	1 All
14	37-3750	Distance piece - speedometer drive	1 All
15	19-9223	Speedometer drive - gearbox 2/1 (B G 5330/24)	1 Street Scrambler Standard
15	19-9224	Speedometer drive - gearbox 21/10 (B G 5330/104)	1 T
16	37-3977	Spindle - rear wheel	1 All
17	31-3468	Security bolt	2 Trials Motocross
18	27-6810	Spoke Set	1 All
18	27-6810	Spoke Set - Stainless Steel	1 All
19	37-3785	Wheel rim (WM3 x 18)	1 Trials Motocross
19	37-3785	Wheel rim (WM3 x 18) - High level Chrome	1 Trials Motocross
19	37-3785	Wheel rim (WM3 x 18) - Polished Stainless Steel	1 Trials Motocross
19	37-3785	Wheel rim (WM2 x 18)	1 Street Scrambler Standard
19	37-3785	Wheel rim (WM2 x 18) - High level Chrome	1 Street Scrambler Standard
19	37-3785	Wheel rim (WM2 x 18) - Polished Stainless Steel	1 Street Scrambler Standard
20	37-3726	Spoke Set - See No. 18	1 All
21	37-3725	Spoke Set - See No. 18	1 All
22	37-3724	Spoke Set - See No. 18	1 All
23	14-1307	Locknut (5/8 UN.F.)	1 All
24	83-2266	Washer - rear wheel spindle	1 All

25	14-1303	Nut - Brake Lever	1 All
26	60-2331	Washer - brake lever	1 All
27	37-4034	Brake lever	1 Street Scrambler Standard
27	37-3877	Brake lever	1 Trials Motocross
28	14-305	Nut - torque arm to brake pivot (1/2 UN.F.)	1 All
29	60-2431	Spring washer - torque arm to brake pivot	1 All
30	83-3523	Torque arm	1 Standard
31	37-1467	Brake rod pivot pin	1 All
32	37-4049	Spring - brake lever return	1 Street Scrambler Standard
32	37-3880	Return spring - brake lever	1 Trials Motocross
33	60-1841	Grease nipple 1/4 B SF	1 All
34	24-1088	Fibre washer - grease nipple	1 All
35	37-3857	Brake Anchor plate	1 All
36	37-3872	Brake cam	1 All
37	37-3870	Brake pivot	1 All
38	37-3925	Brake shoe complete - Outright sale	1 All
39	37-3926	Brake shoe complete - Exchange	1 All
40	37-2228	Spring - brake shoe	2 All
41	37-4071	Brake pivot pad	2 All
42	19-7740	Brake shoe lining	2 All
43	42-5640	Rivet - brake shoe	16 All
44	14-1303	Nut - torque arm fixing	1 Motocross
45	40-0157	Washer - torque arm fixing	1 Motocross
46	14-0126	Bolt - Torque arm fixing	1 Motocross
47	83-4218	Torque arm and chain guide assembly	1 All (Not Standard)

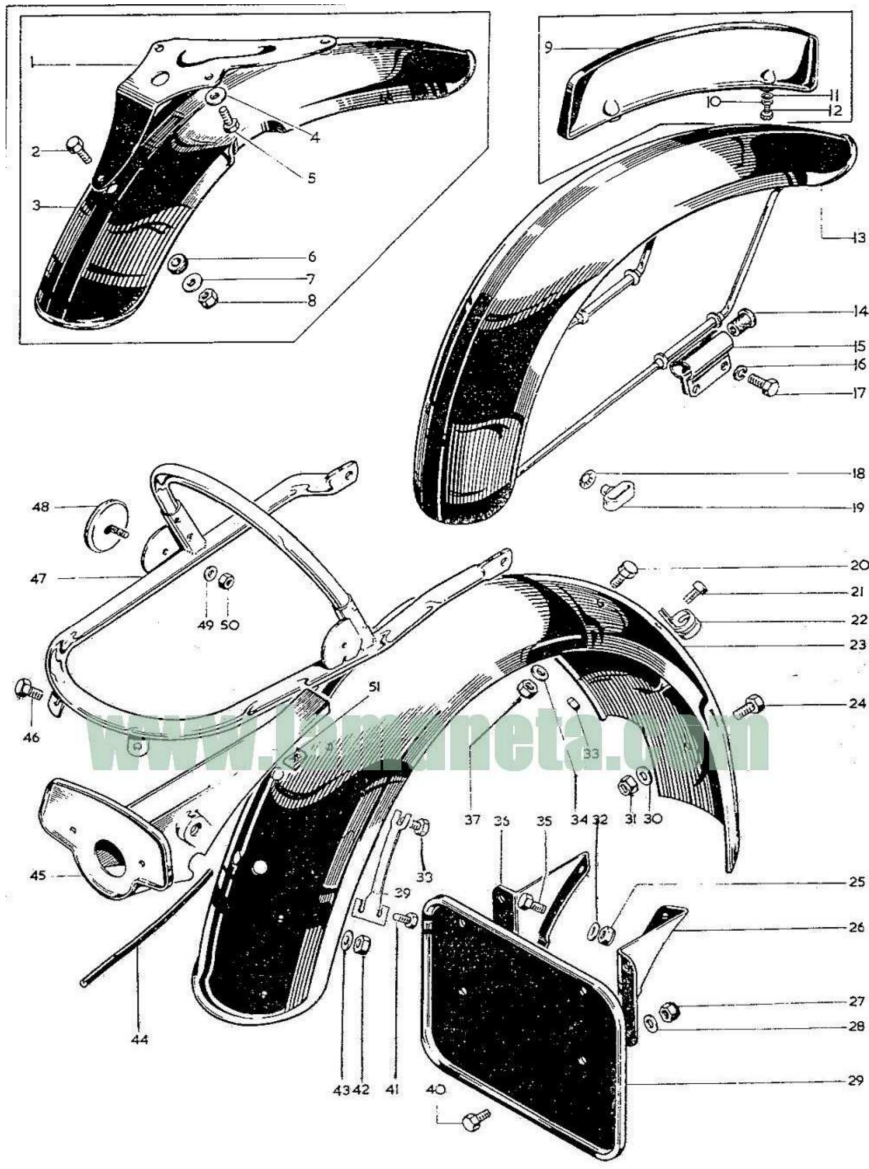


Ref.	Part Number	Description	Per Model
1	97-4075	Bracket - front mudguard	1 T MX
2	14-114	Bolt - Front mudguard fixing	2 T MX
3	97-4072	Front mudguard	1 MX
3	97-4333	Front mudguard	1 T
4	60-2348 Q	Washer - Front mudguard bracket	2 T MX
5	14-6114	Bolt - bracket bottom yoke (5/16 UN C X 3/4)	2 T MX
6	60-3242	Grommet - mudguard fixing	2 T MX
7	60-2348 Q	Washer - Front mudguard bracket	2 T MX
8	14-1302	Locknut - Front mudguard fixing	2 T MX
9	83-2834	Front number plate	1 H
10	90-6219	Washer - Front number plate fixing	2 H
11	68-597	O ring - Front number plate fixing	2 H
12	40-3044	Screw - Front number plate fixing	2 H
13	97-4127	Front mudguard complete	1 H
13	97-4052	Front mudguard complete	1 SS
14	97-4021	Rubber bush - mudguard stay	4 SS H
15	97-4022	Bracket - mudguard stay to fork	4 SS H
16	60-2427	Washer - Front mudguard mounting	4 SS H
17	14-0103	Bolt - Front mudguard mounting	4 SS H
18	82-8245	Star lockwasher	1 SS H
19	97-2270	Retainer - Front brake cable	1 SS H
20	14-0101	Bolt - rear mudguard to frame	4 All (Not MX)
21	97-3894	Screw - Breather pipe clip	1 All
22	83-4123	P clip - Breather pipe	1 All
23	83-4318	Rear mudguard	1 T
23	83-4092	Rear mudguard	1 SS H
23	83-2934	Rear mudguard	1 MX
24	14-0101	Bolt - rear mudguard to frame	1 All
25	14-1301	Nut - Bracket to rear mudguard fixing	2 All (Not MX)
26	83-2728	Bracket - number plate mounting	1 H
27	14-1301	Nut - Rear number plate fixing	4 H
28	60-2329 Q	Washer - Rear number plate mounting	4 H
29	83-2726	Rear number plate	1 H


30	27-8560 Q	Washer - Rear mudguard fixing	1 All
31	14-1301	Nut - Rear number plate fixing	1 All
32	60-2329 Q	Washer - Rear number plate bracket	2 All (Not MX)
33	82-4717	Nut - Mudguard Fixing	1 All (Not MX)
34	27-8560 Q	Washer - Rear mudguard fixing	4 All (Not MX)
35	14-0101	Bolt - rear mudguard to frame	4 All (Not MX)
36	83-2727	Bracket - number plate mounting	1 All (Not MX)
37	14-1301	Nut - Mudguard mounting	4 All (Not MX)
38	14-6101	Bolt - Rear lamp mounting	1 All (Not MX)
39	83-3254	Triple 'C' washer - Rear lamp mounting	1 All (Not MX)
40	14-0101	Bolt - rear numberplate fixing	4 H
41	14-0101	Bolt - rear lamp mounting	2 All (Not MX)
42	14-1301	Nut - Support rail and number plate	2 All (Not MX)
43	27-8560 Q	Washer - Rear mudguard fixing	2 All (Not MX)
44	83-3212	Rubber beading - lamp mounting bracket	2 All (Not MX)
45	83-2693	Bracket - Rear lamp mounting	1 All (Not MX)
46	14-0102	Bolt - Support rail and rear number plate	2 All (Not MX)
47	83-3174	Support rail - rear mudguard	1 All (Not MX)
48	19-1339	Reflector - rear, side (Lucas 57079)	2 All (Not MX)
49	60-2391	Washer - reflector fixing	2 All (Not MX)
50	54-9017	Nut - Reflector fixing (2 B A.)	2 All (Not MX)
51	60-3313	Spire nut - rear lamp mounting bracket	1 All (Not MX)
Not illustrated	60-3370	Grommet - Rear mudguard	5 MX
Not illustrated	14-0103	Bolt - Mudguard fixing	5 MX
Not illustrated	60-2347	Washer - Mudguard fixing	5 MX
Not illustrated	14-1301	Nut - Mudguard fixing	5 MX

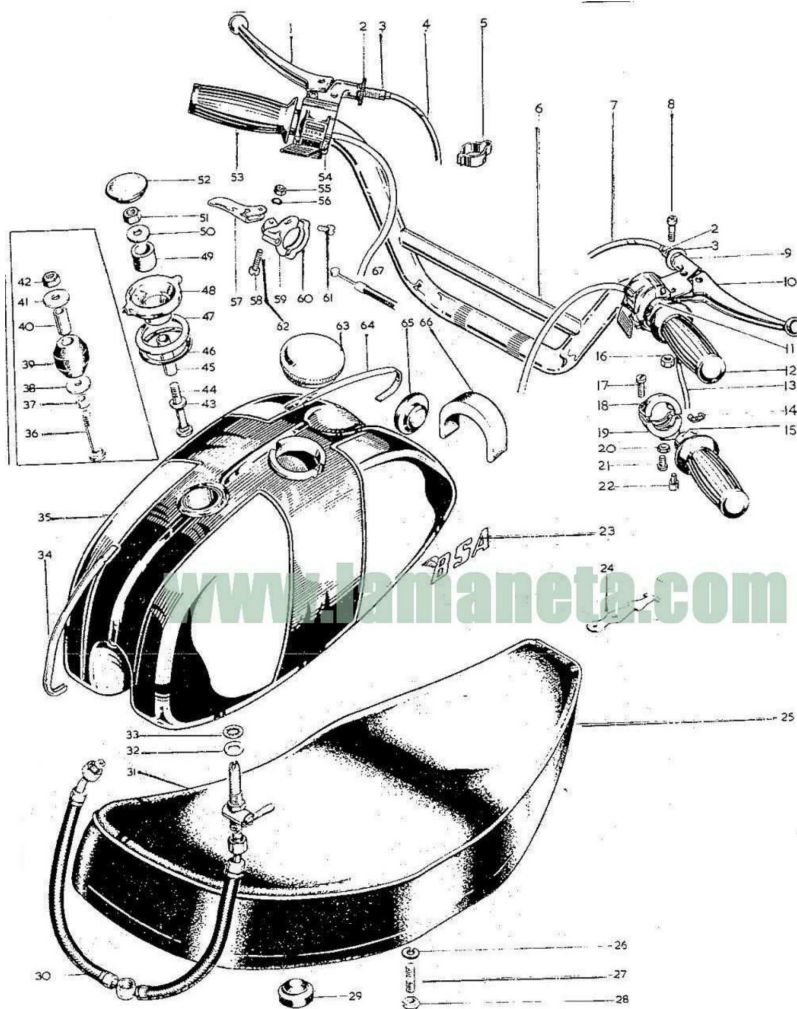


Ref.	Part Number	Description	Per Model			
1	60-2242	Lever - Clutch control Complete	1 Motocross			
1	60-3657	Lever - Clutch control	1 All (Not Motocross)			
2	60-3586	Adjuster nut - control cables	2 All (Not Motocross)			
3	60-3585	Adjuster sleeve - control cables	2 All (Not Motocross)			
4	60-2083	Clutch cable	1 All			
5	97-4112	Cable clip	4 All (Not Motocross)			
6	97-4173	Handlebar	1 Street Scramblers Stadard			
6	97-4062	Handlebar	1 Trials Motocross			
7	60-3817	Cable - front brake	1 Street Scramblers Stadard			
7	60-3535	Cable - front brake	1 Motocross			
8	21-2048	Pivot pin - control levers	2 All (Not Motocross)			
9	19-1332	Switch Assembly - Indicator RH	1 All (Not Motocross)			
10	60-3583	Lever - Front brake	1 All (Not Motocross)			
10	60-2243	Lever - Front brake Complete	1 Motocross			
11	19-7240	Throttle control	1 Motocross			
11	19-7223	Throttle control 16/364	1 All (Not Motocross)			
12	19-9526	Rubber grip - Right handlebar	1 Motocross			
12	19-7222	Rubber grip - Right handlebar	1 All (Not Motocross)			
13	60-3499	Cable - Throttle control	1 Motocross			
13	40-8657	Cable - Throttle control	1 All (Not Motocross)			
14	16/008	Friction spring	1 All (Not Motocross)			
15	16/091	Rotor - throttle control	1 All (Not Motocross)			
16	14-1301	Nut - Pivot Screw	2 All (Not Motocross)			
17	11/013	Clamp screw	2 All (Not Motocross)			
18	16/328	Body - top half	1 All (Not Motocross)			
19	16/329	Body - bottom half	1 All (Not Motocross)			
20	16/010	Nut - friction screw	1 All (Not Motocross)			
21	16/009	Screw - friction spring	1 All (Not Motocross)			
22	16/011	Cable stop - throttle control	1 All (Not Motocross)			
23	60-2568	Tank badge	2 Standard			
23	60-3736	Transfer - Petrol tank	2 Motocross			
23	60-3158	Transfer - Petrol tank	2 All (Not Motocross)			
24	90-9024	Cable clip - Rubber, short	6 All (Not Motocross)			
24	97-4297	Cable clip - Frimre	6 All (Not Motocross)			
24	66-9049	Cable clip - Rubber, long	12 All (Not Motocross)			
25	83-2621	Twinsseat	1 Standard			
25	83-2746	Short seat complete	1 Motocross			
26	60-2428	Spring washer - Seat bolt	2 All (Not Motocross)			
27	21-2109	Stud - seat fixing	2 All (Not Motocross)			
28	14-0302	Nut - Seat fixing	2 All (Not Motocross)			
29	76-9110	Buffer - Twinsseat mounting	2 All (Not Motocross)			
30	83-3040	Petrol pipe	1 All (Not Motocross)			
30	83-3208	Petrol pipe	1 Motocross			
31	83-2800	Petrol tap	1/2 All			
31	83-2801	Petrol tap - Reserve	1 All (Not Motocross)			
32	83-2	Washer - petrol tap	1 All			
32	70-7351	Sealing washer - petrol tap	2 All			
34	83-3180	Trim strip - petrol tank, rear	1 Standard			
35	83-3946	Petrol tank - aluminium (2 gallon)	1 Trials			
35	83-2721	Petrol tank - aluminium (1 gallon)	1 Motocross			
35	83-3945	Petrol tank - steel (2 gallon)	1 SS			
35	83-4320	Petrol tank - steel (3 gallon)	1 Standard			
36	83-2776	Bolt - Petrol tank, centre fixing	1 All (Not Motocross)			
36	83-2776	Bolt - Petrol tank, centre fixing	1 All (Not Motocross)			
37	82-7071	Distance collar - Fuel tank, Centre bolt	1 All (Not Motocross)			
38	03-0101	Washer - Petrol tank, centre bolt	1 Trials Motocross			
39	40-8085	Mounting rubber - petrol tank, centre	2 All (Not Motocross)			
40	76-4120	Distance tube - petrol tank, centre	1 All (Not Motocross)			
41	03-0101	Washer - Petrol tank, centre bolt	1 Trials Motocross			
42	14-0302	Nut - Petrol tank centre bolt	1 All (Not Motocross)			
43	68-8016	Washer - petrol tank, centre bolt	1 Standard			
44	83-3042	Bolt - Petrol tank, centre fixing	1 Standard			
45	41-8011	Distance tube - Petrol tank, centre	1 Standard			
46	68-8013	Rubber ring - Petrol tank mounting	1 Standard			
47	68-8019	Mounting ring - Petrol tank, centre	1 Standard			
48	82-9782	Trim strip holder	1 Standard			
49	42-8017	Mounting rubber - Petrol tank, centre	1 Standard			
50	03-0101	Washer - Petrol tank, centre bolt	1 SS			
51	21-1999	Nut - petrol tank, centre bolt	1 Standard			
52	83-3068	Grommet - petrol tank, centre	1 Standard			
53	19-7221/2	Rubber grip - Left & Right handlebar	1 All (Not Motocross)			
53	19-7241	Rubber grip - Left handlebar	1 Motocross			
54	19-1333	Switch assembly - left	1 All (Not Motocross)			
55	16-2763	Nut - Exhaust lifter fulcrum pin	1 All			
56	19-3087	Lockwasher - Exhaust lifter fulcrum pin	1 All			
57	19-3085	Lever - Exhaust lifter	1 All			
58	19-3084	Fulcrum pin - Exhaust lifter lever	1 All			
59	19-3086	Bracket - Exhaust lifter	1 All			
60	19-3083	Clamp - Exhaust lifter	1 All			
61	19-3082	Screw - Exhaust lifter clamp	1 All			
62	42-8611	Exhaust lifter control complete	1 All			
63	83-3875	Filter cap - Petrol tank	1 Street Scramblers Stadard			
64	83-1547	Filter cap - Petrol tank	1 Trials Motocross			
64	83-3179	Trim strip - front	1 Standard			
65	82-9222	Rubber - Petrol tank 'anti-roll'	1 All			
66	83-2980	Rubber - Petrol tank, front	1 All			
66	83-3563	Rubber - Petrol tank, rear	1 All			
67	60-3752	Cable - Exhaust lifter control	1 All			
Not illustrated	19-6000	Twinsseat cover	1 Trials Street Scramblers			
Not illustrated	19-6001	Twinsseat cover	1 Standard			
Not illustrated	19-6062	Seat cover	1 Motocross			
Not illustrated	21-2064	Screw - tank badge to tank	4 Standard			
Not illustrated	14-0113	Bolt - Front Fixing	2 Motocross			
Not illustrated	21-2166	Stud - rear bracket to seat	2 Motocross			
Not illustrated	83-2742	Front bracket - Seat fixing	1 Motocross			
Not illustrated	60-2428	Spring washer - Seat bolt	2 All (Not Motocross)			
Not illustrated	83-2745	Distance piece - rear fixing	2 Motocross			

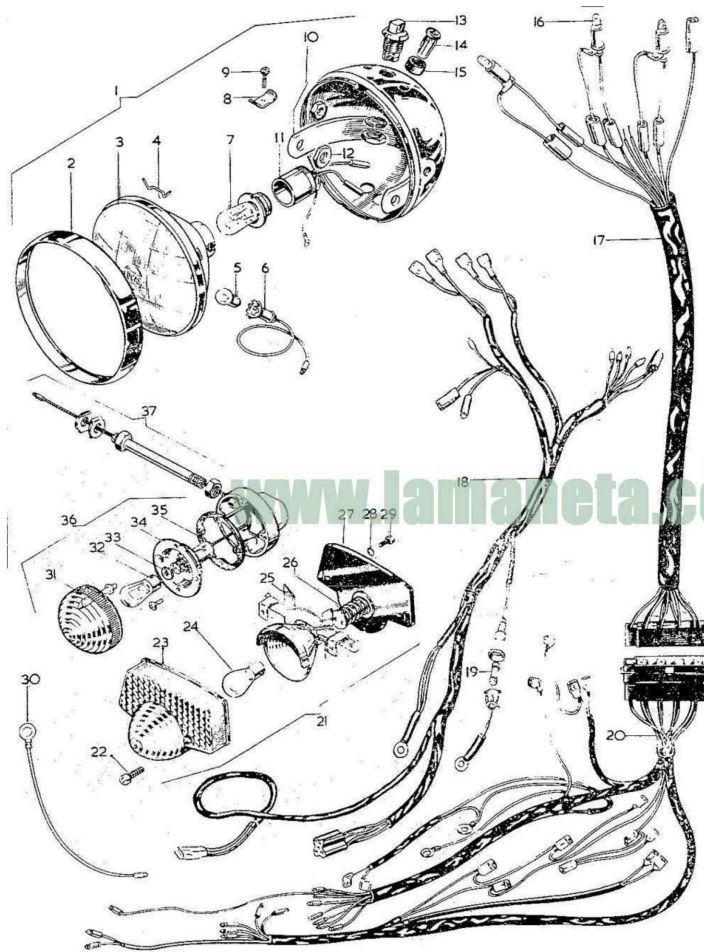

Ref	Part Number	Description	Part Model
1	19-1084	60262 Headlamp complete	1 T SS H
1	19-1275	60334 Headlamp complete - France	1 T SS H
2	553343	Headlamp rim	1 T SS H
3	19-1088	Light unit - head lamp	1 T SS H
3	19-1276	Light unit - France	1 T SS H
4	504665	Wire clip - Light unit fixing	6 T SS H
5	989	Bulb - pilot	1 T SS H
6	54573590	Bulb holder - pilot	1 T SS H
7	370	Bulb - standard, main 12V	1 T SS H
7	371	Bulb - standard, main France	1 T SS H
8	534296	Plate - Head lamp rim fixing	1 T SS H
9	144921	Screw - Headlamp rim fixing	1 T SS H
10	97-4247	Bracket - Headlamp interior support	1 T SS H
11	554602	Bulb holder - main	1 T SS H
12	14-0404	Nut - headlamp interior support fixing (7/16 UNF)	2 T SS H
13	19-1095	Lighting switch	1 T SS H
14	54363453	Direction indicator warning light body - amber	1 T SS H
14	54263454	Ignition warning light body - red	1 T SS H
15	54525212	Rubber cup - warning lights	2 T SS H
16	281	Bulb - Warning lights	3 T SS H
17	19-1096	Harness - Headlamp to electrical box	1 T SS H
18	19-1270	Main harness	1 T SS H
17	1316	Main harness 1973	1 T SS H
18	19-1340	Harness - ignition	1 T SS H
19	19-1249	188218 Fuse - main harness, 35 amp.	1 T SS H
20	19-1271	Harness - electrical box	1 T SS H
21	19-1245G	Rear lamp complete	1 T SS H
22	144921	Screw - Headlamp rim fixing	2 T SS H
23	54577109	Lens - rear lamp	1 T SS H
24	380	Bulb - rear lamp	1 T SS H
25	54525286	Base plate - rear lamp	1 T SS H

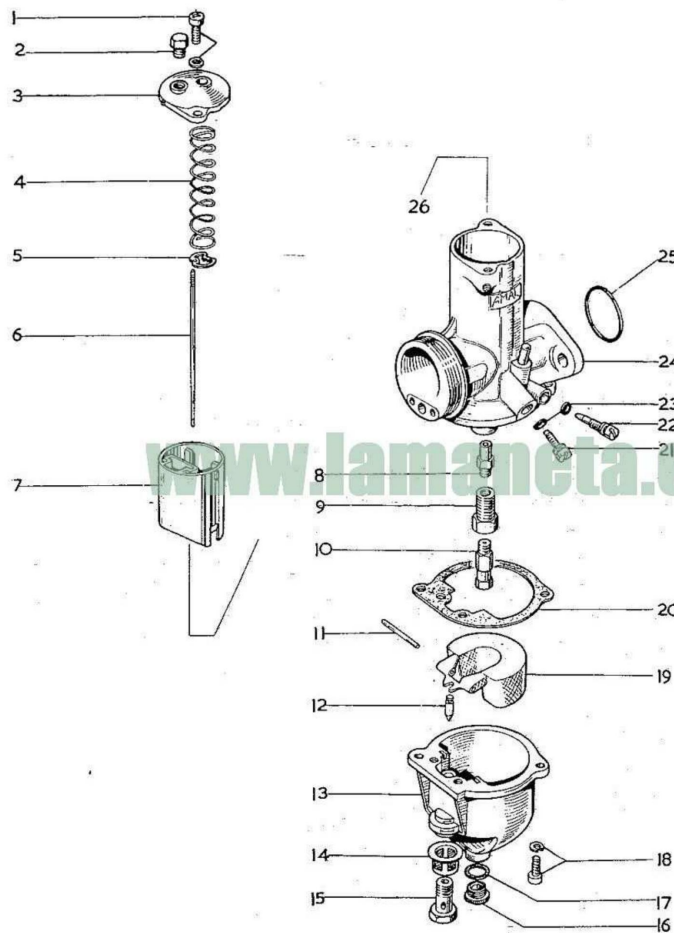

Ref	Part Number	Description	Per Model
1	19-3093	Screw and Washer - top cap	2 All
2	4/137A	Screw plug - top cap	1 All
3	928/097	Cap - mixing chamber	1 All
4	622/131	Spring - throttle	1 All
5	19-3095	Clip - throttle needle	1 All
6	19-3137	Needle - Throttle	1 All
7	19-3108	Throttle slide (No 3 cutaway)	1 All
8	19-3136	Needle jet (.106)	1 All
9	622/128	Jet holder	1 All
10	19-2885	Main jet (250 c.c.)	1 MX
10	19-2880	Main jet (200 c.c.)	1 Not MX
11	19-3116	622/071 Float spindle	1 All
12	19-3105	622/068 Float needle	1 All
13	19-3143U	622/055 Float chamber	1 All
14	19-3048	376/093 Petrol filter	1 All
15	19-3103	622/078 Banjo bolt	1 All
16	19-3144	622/147 Drain plug	1 All
17	622/151	Washer - drain plug	1 All
18	19-3093	622/086 Screw and washer - Float chamber to body	2 All
19	19-3102	622/069 Float	1 All
20	19-3106	622/073 Gasket - float chamber	1 All
21	21622/077	Screw - Throttle stop	1 All
22	22622/076	Adjuster Screw - Pilot air	1 All
23	19-3098	622/082 O ring - pilot air and throttle stop screws	2 All
24	R.932	R.932 Carburettor body	1 MX
24	R.930	R.930 Carburettor body	1 Not MX
25	19-3090	622/101 O ring - carburettor flange	1 All

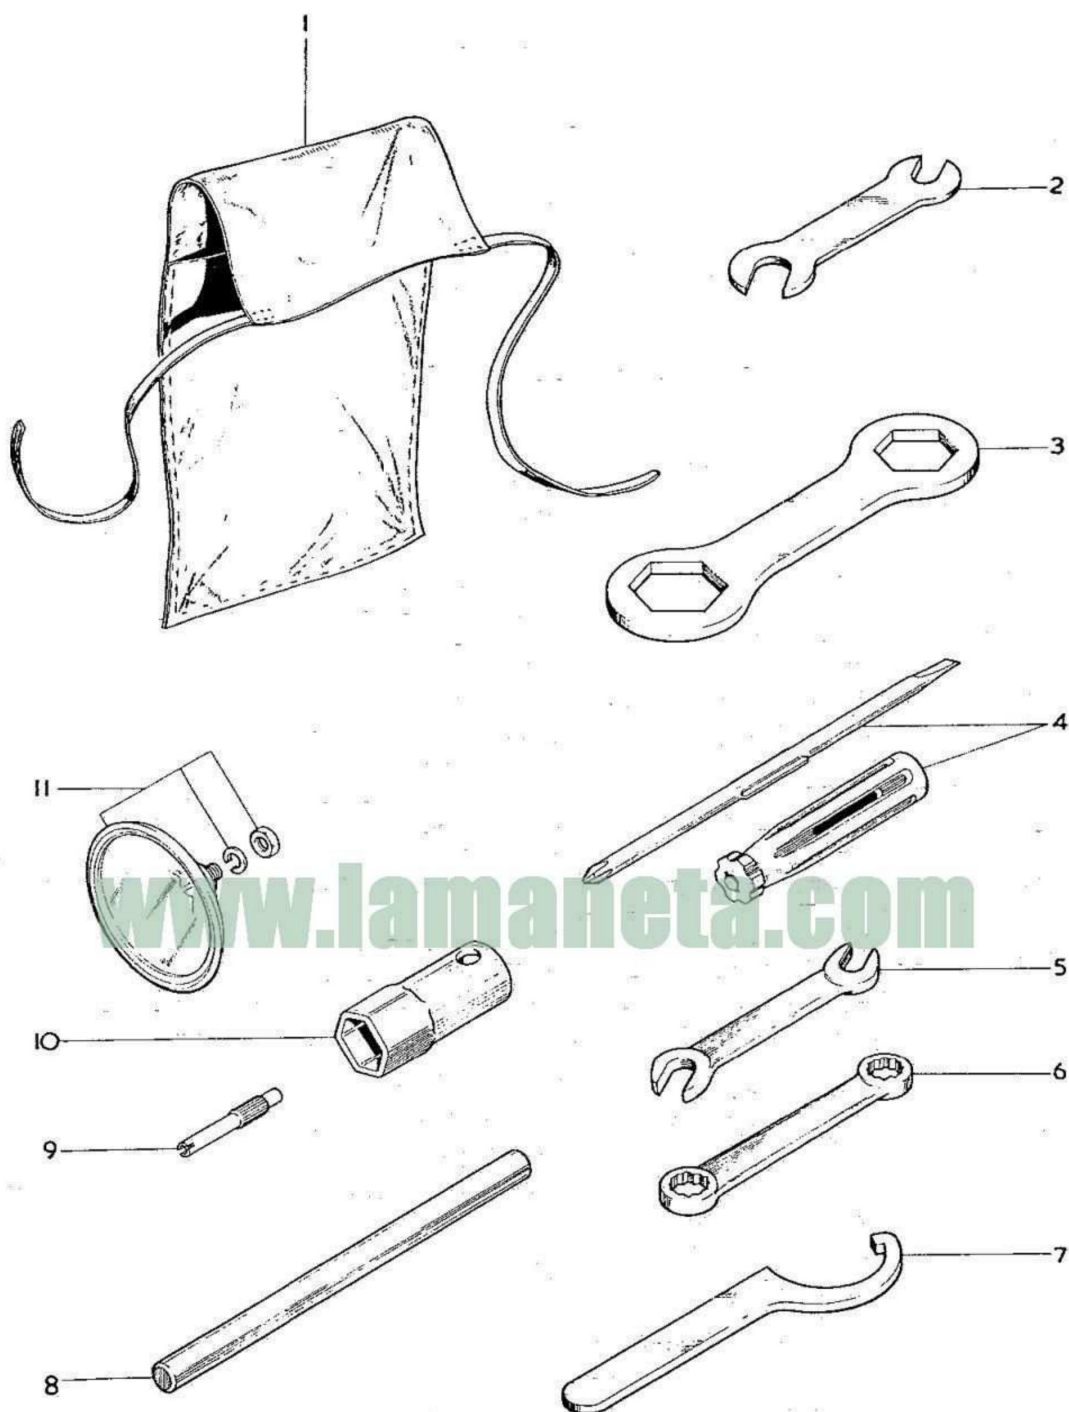

Ref.	Part Number	Description	Per Model
1	65-9132	Spanner	1 T SS H
2	611-11/67	Screwdriver set	1 T SS H
3	68-4464	Plug Spanner	1 H
4	60-2184	Suspension unit C spanner	1 T SS H
5	60-3711	Tommy Bar	1 All
6	60-1911	Tommy bar	1 T SS H
7	68-9467	Tyre valve key	1 T SS H
8	19-5390	Licence Holder Stainless Steel	1 H
9	75-9089	Tool roll	1 T SS II