



BMW Motorrad

bmw-motorrad.com



The Ultimate
Riding Machine

Rider's Manual

S 1000 XR

Vehicle data/dealership details

Vehicle data

Model

Vehicle Identification Number

Colour code

Date of first registration

Registration number

Dealership details

Person to contact in Service department

Ms/Mr

Phone number

Dealership address/phone number (company stamp)

Welcome to BMW

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

About this Rider's Manual

Please read this Rider's Manual carefully before starting to use your new BMW. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features. In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

This record of the maintenance work you have had performed on

your vehicle is a precondition for generous treatment of goodwill claims.

If the time comes to sell your BMW, please remember to hand over this Rider's Manual to the new owner. It is an important part of the vehicle.

Suggestions and criticism

If you have questions concerning your vehicle, your authorised BMW Motorrad dealer will gladly provide advice and assistance.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

01 40 8 388 251



Table of Contents

1 General instructions	5	4 Operation.....	37	Seat	62
Overview	6	Ignition switch/steering lock	38	5 Adjustment.....	63
Abbreviations and symbols	6	Emergency off switch (kill switch)	40	Mirrors	64
Equipment	7	Lights	40	Headlight	64
Technical data	7	Daytime riding light.....	42	Windscreen	65
Actualty	7	Hazard warning lights system	45	Brakes	66
2 General views	9	Turn indicators	46	Spring preload	66
General view, left side	11	Multifunction display	47	Damping	68
General view, right side	13	Anti-theft alarm (DWA)	50	6 Riding.....	71
Underneath the seat	14	Clock.....	52	Safety instructions	72
Multifunction switch, left	15	Anti-lock brake system (ABS).....	52	Comply with checklist	75
Multifunction switch, right	17	Automatic Stability Control (ASC)	53	Starting.....	75
Instrument panel	18	Dynamic Traction Control (DTC)	54	Running in	79
3 Status indicators	19	Electronic Suspension Adjustment (ESA)	55	Shifting gear	80
Indicator and warning lights	20	Riding mode	56	Brakes	82
Multifunction display	21	Cruise-control system	59	Parking your motorcycle	84
ABS Pro indicator	22	Heated handlebar grips	61	Refuelling	85
Warnings	22			Securing motorcycle for transportation	87
				7 On the race track.....	89
				SETUP MENU	90
				SETUP EQUIPMENT	94
				LAPTIMER	97

RACE INFO	102
SETUP RACETRACK.....	108

8 Engineering

details	113
General instructions	114
Anti-lock brake system (ABS).....	114
Dynamic Traction Control (DTC)	117
Electronic Suspension Adjustment (ESA)	118
Riding mode	119
Riding mode RAIN	120
Riding mode ROAD	121
Riding mode DYNAMIC ...	122
Riding mode DYNAMIC PRO	123
Deactivatable suspension and running-gear control systems	124
Shift assistant Pro	125
9 Maintenance	127
General instructions	128
Toolkit.....	128
Front-wheel stand.....	129

Rear-wheel stand	129
Engine oil	130
Brake system	131
Clutch	135
Coolant.....	136
Tyres.....	137
Rims and tyres	137
Wheels	138
Light source.....	147
Trim panel components	153
Jump-starting	155
Battery	156
Fuses	161
Diagnostic connector.....	162
Chain.....	163
10 Accessories	165
General instructions	166
Power sockets	166
Cases	167
Topcase.....	170
Navigation system.....	172
Socket for optional accessories	177

11 Care	181
Care products	182
Washing the vehicle.....	182
Cleaning easily damaged components.....	183
Paint	183
Preserving paintwork	184
Laying up the motor-cycle	184
Restoring motorcycle to use	184
12 Technical data	185
Troubleshooting chart.....	186
Threaded fasteners	187
Fuel	189
Engine oil	189
Engine	190
Clutch	191
Transmission.....	191
Final drive	192
Frame	192
Chassis and suspension	193
Brakes	194
Wheels and tyres.....	195

Electrical system	197
Dimensions	198
Weights	199
Riding specifications	199
13 Service	201
BMW Motorrad Service ...	202
BMW Motorrad Mobility services	202
Maintenance work.....	202
Maintenance schedule	205
Confirmation of mainten- ance work	206
Confirmation of service....	220
14 Appendix.....	223
Certificate for Electronic Immobiliser	224
15 Index	226

General instructions

Overview	6
Abbreviations and symbols	6
Equipment	7
Technical data	7
Actuality	7

Overview

An important aspect of this Rider's Manual is that it can be used for quick and easy reference. Consulting the extensive index at the end of this Rider's Manual is the fastest way to find information on a particular topic or item. To first read an overview of your motorcycle, please go to Chapter 2. All maintenance and repair work on the motorcycle is documented in Chapter 12. This record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims. When the time comes to sell your BMW, please remember to hand over this Rider's Manual; it is an important part of the motorcycle.

Abbreviations and symbols



CAUTION Low-risk hazard. Non-avoidance can lead to slight or moderate injury.



WARNING Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.



DANGER High-risk hazard. Non-avoidance leads to fatal or severe injury.



ATTENTION Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.



NOTICE Specific instructions on how to operate, control, adjust or look after items of equipment on the vehicle.



Indicates the end of an item of information.



Instruction.



Result of an activity.



Reference to a page with more detailed information.



Indicates the end of a passage relating to specific accessories or items of equipment.



Tightening torque.



Technical data.

OE

Optional extras.

The vehicles are assembled complete with all the BMW Motorrad optional extras originally ordered.

OA	Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle.
EWS	Electronic immobiliser.
DWA	Anti-theft alarm (Diebstahlwarnanlage).
ABS	Anti-lock brake system.
ASC	Automatic Stability Control.
DTC	Dynamic Traction Control.
ESA	Electronic Suspension Adjustment.

VDS Vertical Down Sensor (drop sensor).

Equipment

When you purchased your BMW motorcycle, you chose a model with individual equipment. This Rider's Manual describes the optional extras (OE) offered by BMW and selected optional accessories (OA). This explains why the manual may also contain descriptions of equipment which you have not ordered. Please note, too, that your motorcycle might not be exactly as illustrated in this manual on account of country-specific differences. If your motorcycle contains equipment that has not been described, its description can be found in a separate manual.

Technical data


All dimensions, weights and power ratings stated in the Rider's Manual are quoted to the standards and comply with the tolerance requirements of the Deutsches Institut für Normung e.V. (DIN). Versions for individual countries may differ.

Actuality

The high safety and quality standards of BMW motorcycles are maintained by constant development work on designs, equipment and accessories. Because of this, your motorcycle may differ from the information supplied in the Rider's Manual. Nor can BMW Motorrad entirely rule out errors and omissions. We hope you will appreciate that no claims can be entertained on the basis of the data, illustrations or descriptions in this manual.


General views

General view, left side.....	11
General view, right side	13
Underneath the seat	14
Multifunction switch, left	15
Multifunction switch, right.....	17
Instrument panel.....	18

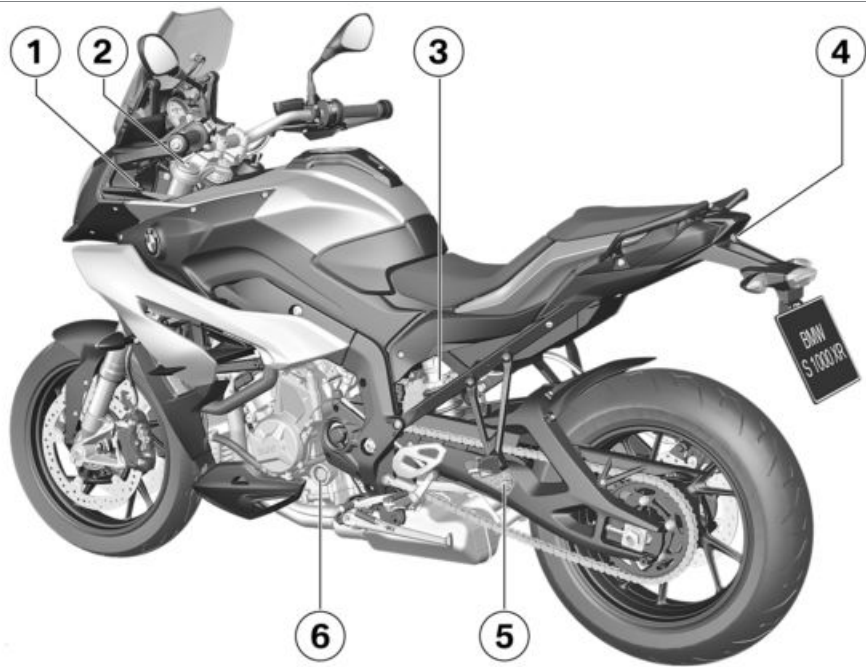

General view, left side

- 1** Power socket
- 2** Adjuster for front
compression-stage
damping (red scale)
( 68)
- 3** Adjuster for spring preload,
rear ( 66)
- 4** Seat lock ( 62)
- 5** Table of tyre pressures
Payload table
Chain settings
- 6** Engine oil level indicator
( 130)

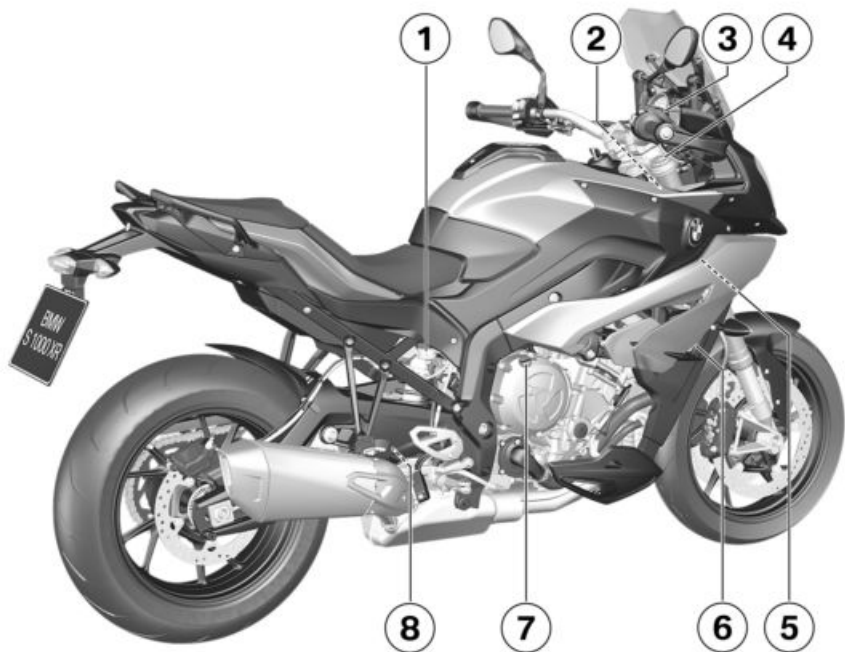



General view, right side

- 1** Brake-fluid reservoir, rear
( 134)
- 2** VIN and type plate (on steering-head, right)
- 3** Brake-fluid reservoir, front
( 133)
- 4** Adjuster for front rebound-stage damping (yellow scale) ( 69)
- 5** Check coolant level
( 136)
- 6** Socket for optional accessories ( 177)
- 7** Oil filler neck ( 131)
- 8** Adjuster for rear rebound-stage damping (yellow scale) ( 69)

Underneath the seat

- 1 Fuse box (➡ 161)
- 2 Battery (➡ 156)
- 3 Rider's Manual
- 4 Toolkit (➡ 128)
- 5 Diagnostic connector (➡ 162)

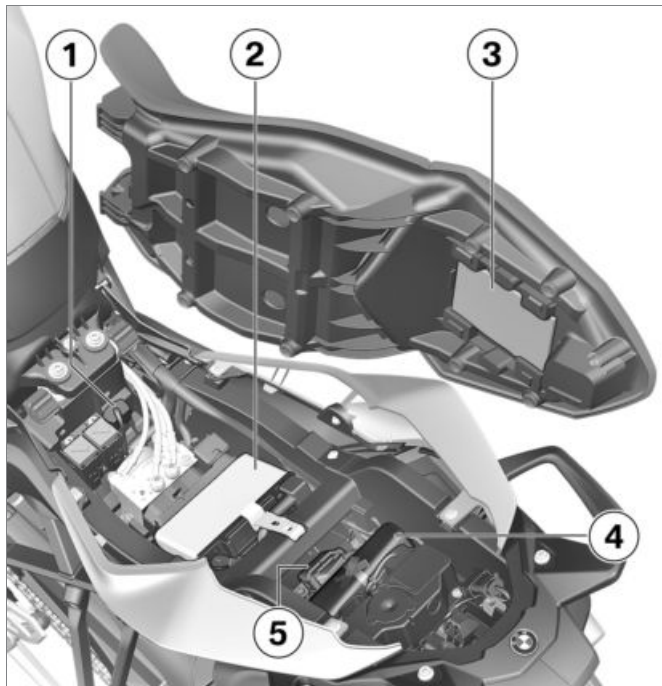


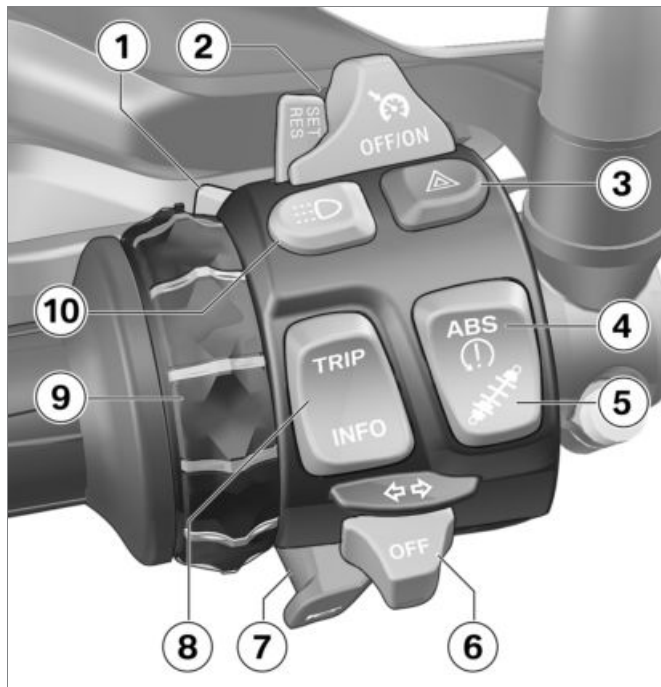

Multifunction switch, left

- 1 High-beam headlight and headlight flasher (➡ 41)
- 2 Cruise-control system (➡ 59)
- 3 Hazard warning lights system (➡ 45)
- 4 ABS (➡ 52)
ASC (➡ 53)
– with Dynamic Traction Control (DTC)^{OE}
DTC (➡ 54)
- 5 Dynamic ESA (➡ 118)
- 6 Turn indicators (➡ 46)
- 7 Horn

- 8** TRIP/INFO rocker switch
Multifunction display
( 47)
Selecting readings ( 48)
Resetting trip distance re-
corder ( 49)
Setting the clock ( 52)
Selecting submenu
( 91)
Individualising lap timer
( 99)
- 9** Multi-controller ( 174)
- 10** Daytime riding light
( 44)

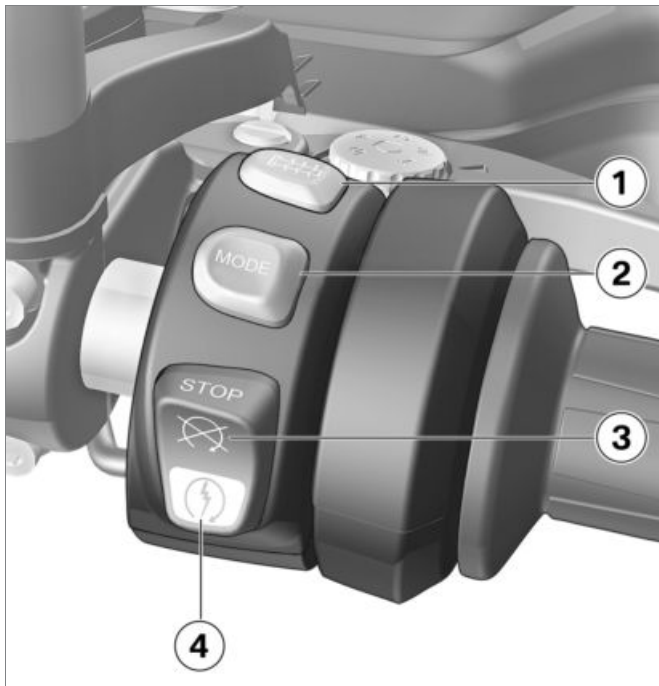


Multifunction switch, right

- 1 Heated handlebar grips (➡ 61)
- 2 Control for selecting the ride mode (➡ 57)
- 3 Emergency off switch (kill switch) (➡ 40)
- 4 Starter button
Start engine (➡ 75)

Instrument panel

- 1 Indicator and warning light fields
Indicator and warning lights
(20)
- 2 Engine speed display
- 3 Gearshift light (80)
- 4 Photosensor (for adapting the brightness of the instrument lighting)
– with alarm system (DWA) OE
DWA light-emitting diode
(50)
- 5 Multifunction display
(21)

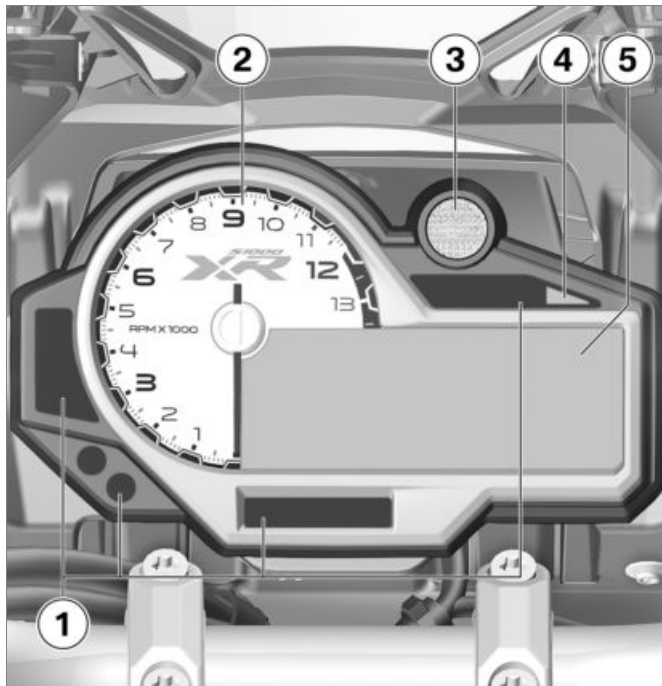



Status indicators

Indicator and warning lights	20
Multifunction display	21
ABS Pro indicator	22
Warnings	22

Indicator and warning lights

- 1 ASC (▶▶▶ 31)
- DTC (▶▶▶ 32)
- 2 ABS (▶▶▶ 30)
- 3 Turn indicators, left
- 4 General warning light, in combination with warnings in the multifunction display (▶▶▶ 22)
- 5 Turn indicators, right
- 6 Daytime riding light (▶▶▶ 44)
- 7 Neutral
- 8 High-beam headlight
- 9 Malfunction indicator lamp (▶▶▶ 28)
- 10 Cruise-control system (▶▶▶ 59)

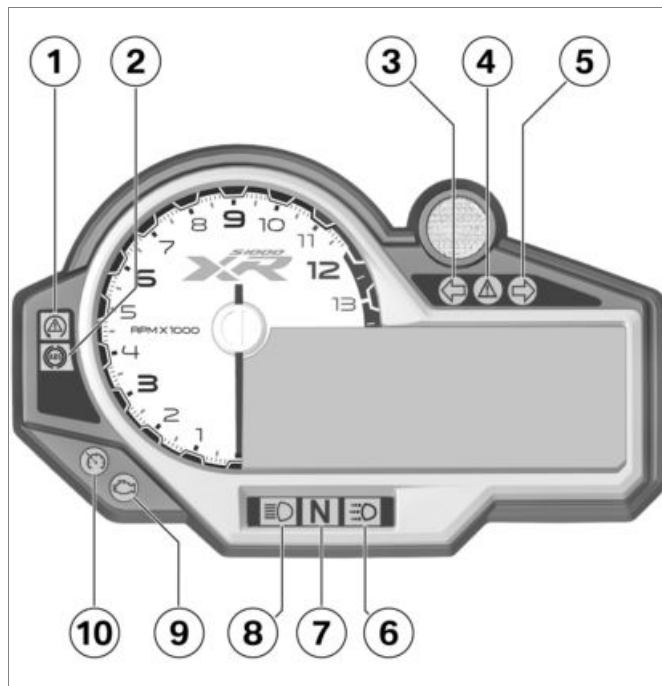

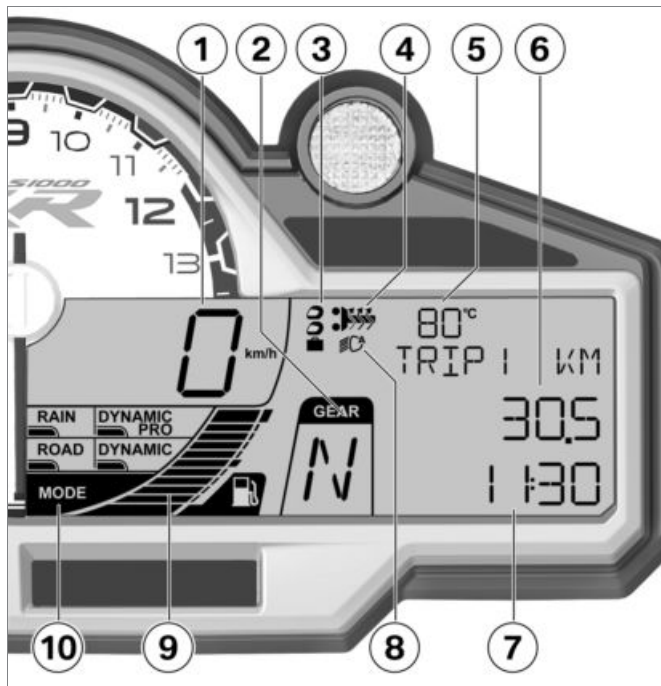

Multifunction display

- 1 Speedometer
- 2 Gear indicator; "N" indicates neutral.
- 3 Dynamic ESA adjustment (➡ 118)
- 4 Heated handlebar grips (➡ 61)
- 5 Coolant temperature
- 6 On-board computer (➡ 48)
- 7 Clock (➡ 52)
- 8 Automatic for daytime riding light (➡ 44)
- 9 Fuel level
- 10 Riding mode
RAIN
ROAD
Setting riding mode (➡ 57)
– with riding modes Pro^{OE}
Additional riding modes
DYNAMIC
DYNAMIC PRO (with coding plug)

ABS Pro indicator

– with ABS Pro^{OE}




During the Pre-Ride-Check, the availability of the ABS Pro function is indicated by "ABS Pro" showing in the multifunction display.

Warnings

Mode of presentation

Warnings are indicated by the corresponding warning lights.

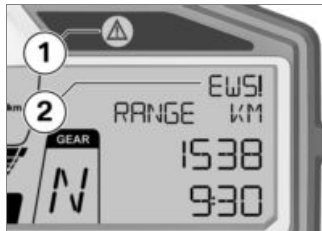

Warnings for which there is no dedicated warning light are indicated by 'General' warning light **1** showing in combination with a warning such as, for example, **2** appearing on the multifunction display. The 'general' warning light shows red or yellow, depending on the urgency of the warning.

If two or more warnings occur at the same time, all the appropriate warning lights and warning symbols appear, alternating with warning words as applicable.

The possible warnings are listed on the next pages.

Warnings, overview

Telltale and warning lights

Warning symbols in the display

Meaning

	lights up red	EWS ! appears on the display	Electronic immobiliser active (→ 27)
	flashes red	Coolant-temperature reading flashes	Coolant temperature too high (→ 27)
	lights up yellow	Engine ! is displayed	Engine in emergency-operation mode (→ 27)
	flashes yellow	Engine ! is displayed	Severe fault in the engine control (→ 28)
	The malfunction indicator lamp lights up		Emissions warning (→ 28)
		LAMP ! appears on the display	Bulbs for flashing turn indicators defective (→ 28)
	lights up yellow	LAMPR ! appears on the display	Rear light defective (→ 29)

Telltale and warning lights

Warning symbols in the display

Meaning

	lights up yellow	LAMPF ! appears on the display	Front lights defective (→ 29)
	lights up yellow	LAMPS ! appears on the display	Rear light and front lights defective (→ 29)
	lights up yellow	VDS ! appears on the blank display	Motorcycle dropped (→ 30)
	lights up yellow	VDS ! appears on the display	Drop sensor defective (→ 30)
	flashes		ABS self-diagnosis not completed (→ 30)
	lights up		ABS switched off (→ 30)
	lights up		ABS fault (→ 30)
	quick-flashes		ASC intervention (→ 31)

Telltale and warning lights

Warning symbols in the display

Meaning

	slow-flashes	ASC self-diagnosis not completed ( 31)
	lights up	ASC switched off ( 31)
	lights up	ASC fault ( 31)
	quick-flashes	DTC intervention ( 32)
	slow-flashes	DTC self-diagnosis not completed ( 32)
	lights up	DTC switched off ( 32)
	lights up	DTC fault ( 32)
	The gear indicator flashes.	Gear not trained ( 33)

Telltale and warning lights

Warning symbols in the display

Meaning

	lights up yellow	DWALO ! appears on the display	DWA battery weak (→ 33)
	lights up yellow	DWA ! appears on the display	DWA battery flat (→ 33)
	lights up yellow	D-ESA ! appears on the display	Dynamic ESA fault (→ 34)
	lights up red	NO CAN appears on the display	CAN open circuit/short circuit (→ 34)
	lights up yellow	NO CODING appears on the display	No coding (→ 34)
	lights up yellow	SERVICE ! is displayed	Service-due date has passed (→ 34)
	lights up yellow	FUEL ! appears on the display	Fuel down to reserve (→ 35)

Electronic immobiliser active



General warning light shows red.

EWS ! appears on the display.
Possible cause:

The key being used is not authorised for starting, or communication between key and engine electronics is disrupted.

- Remove all other vehicle keys from the same ring as the key used for the vehicle.
- Use the reserve key.
- Have the defective key replaced, preferably by an authorised BMW Motorrad dealer.

Coolant temperature too high



General warning light flashes red.

The coolant-temperature reading flashes.



ATTENTION

Riding with overheated engine

Engine damage

- Compliance with the information set out below is essential.◀

Possible cause:

The coolant temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- If the coolant temperature is frequently too high, have the fault rectified as soon as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Engine in emergency-operation mode



General warning light shows yellow.

Engine! is displayed.



WARNING

Unusual ride characteristics when engine running in emergency-operation mode

Risk of accident

- Adapt your style of riding accordingly: avoid accelerating sharply and overtaking.◀

Possible cause:

The engine control unit has diagnosed a fault. The engine is in emergency-operation mode. In exceptional cases, the engine stops and refuses to start.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably

an authorised BMW Motorrad dealer.

- » You can continue to ride, but bear in mind that the usual engine power or the full range of engine rpm might not be available.

Severe fault in the engine control



General warning light flashes yellow.

Engine! is displayed.



WARNING

Engine damage when running in emergency-operation mode

Risk of accident

- Adapt your style of riding accordingly: ride slowly, avoid sharp accelerating and overtaking.
- If possible, have the vehicle brought in and the fault

rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

Possible cause:

The engine control unit has diagnosed a fault which may cause severe secondary faults. The engine is in emergency-operation mode.

- Avoid high load and rpm ranges if possible.
 - Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.
- » It is possible to continue to ride but not recommended.

Emissions warning



The malfunction indicator lamp lights up

Possible cause:

The engine control unit has diagnosed a fault which affects the pollutant emissions.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

Bulbs for flashing turn indicators defective

LAMP! appears on the display.



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

Bulb for turn indicator defective.

- Replacing bulbs for front and rear turn indicators (➡ 151).

Rear light defective



General warning light shows yellow.

LAMPR ! appears on the display.

Possible cause:

Bulb for combined rear light and brake light is defective.

- The LED rear light must be replaced. Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Front lights defective



General warning light shows yellow.

LAMPF ! appears on the display.



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

Bulb for front parking light is defective.

- Replacing bulb for left parking light (➡ 149).
- Replacing bulb for right side light (➡ 150).

Possible cause:

Bulb for low-beam headlight or high-beam headlight is defective.

- Replacing bulbs for low-beam headlight and high-beam headlight (➡ 147).

Possible cause:

– with daytime riding light^{OE}

Daytime riding light defective.

- The daytime riding light has to be replaced. Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Rear light and front lights defective



General warning light shows yellow.

LAMPSS ! appears on the display.

Possible cause:

Bulb for front parking light is defective.

- Replacing bulb for left parking light (➡ 149).
- Replacing bulb for right side light (➡ 150).

Possible cause:

Bulb for combined rear light and brake light is defective.

- The LED rear light must be replaced. Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Motorcycle dropped

 General warning light shows yellow.

VDS ! (Vertical Down Sensor) appears on the blank display.

Possible cause:

The drop sensor has detected a drop and has cut out the engine.

- Bring the motorcycle to the upright position.
- Switch the ignition off and then on again or switch the kill switch on and then off again.

Drop sensor defective

 General warning light shows yellow.

VDS ! (Vertical Down Sensor) appears on the display.

Possible cause:

A defect in the drop sensor has been detected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS self-diagnosis not completed

 ABS telltale and warning light flashes.

Possible cause:

The ABS is not available, because self-diagnosis did not complete. The motorcycle has to move forward a few metres for the wheel-speed sensors to be tested.

- Pull away slowly. Bear in mind that the ABS is not available until self-diagnosis has completed.

ABS switched off

 ABS telltale and warning light shows.

Possible cause:

The rider has switched off the ABS.

- ABS Switching on (►► 53).

ABS fault

 ABS telltale and warning light shows.

Possible cause:

The ABS control unit has detected a fault. The ABS function is not available or the functionality is subject to certain restrictions.

- You can continue to ride the vehicle, but make due provision for the fact that the ABS function is not available or is only

conditionally available. Bear in mind the more detailed information on situations that can lead to an ABS fault (► 115).

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ASC intervention

 ASC telltale and warning light quick-flashes.

The ASC has detected a degree of instability at the rear wheel and has intervened to reduce torque. The warning light flashes for longer than ASC intervention lasts. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

ASC self-diagnosis not completed

 ASC telltale and warning light slow-flashes.

Possible cause:



ASC self-diagnosis not completed

The ASC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the ASC is not available until self-diagnosis has completed.

ASC switched off

 ASC telltale and warning light shows.

Possible cause:

The rider has switched off the ASC.

- ASC Switching on (► 54).

ASC fault

 ASC telltale and warning light shows.

Possible cause:

The ASC control unit has detected a fault.

- You can continue to ride. Bear in mind that the ASC is not available or the functionality is subject to certain restrictions. Bear in mind the more detailed information on situations that can lead to a ASC fault (► 117).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably

an authorised BMW Motorrad dealer.

DTC intervention

- with Dynamic Traction Control (DTC)^{OE}



DTC telltale light quick-flashes.

The DTC has detected a degree of instability at the rear wheel and has intervened to reduce torque. The warning light flashes for longer than DTC intervention lasts. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

DTC self-diagnosis not completed

- with Dynamic Traction Control (DTC)^{OE}



DTC telltale light slow-flashes.

Possible cause:



DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the DTC function is not available until self-diagnosis has completed.

DTC switched off

- with Dynamic Traction Control (DTC)^{OE}



DTC telltale light shows.

Possible cause:

The rider has switched off the DTC system.

- DTC Switching on (► 55).

DTC fault

- with Dynamic Traction Control (DTC)^{OE}



DTC telltale light shows.

Possible cause:

The DTC control unit has detected a fault. Bear in mind that the DTC function is not available or the functionality is subject to certain restrictions.

- You can continue to ride. Bear in mind the more detailed information on situations that can lead to a DTC fault (► 117).
- Have the fault rectified as quickly as possible by a

specialist workshop, preferably an authorised BMW Motorrad dealer.

Gear not trained

– with shift assistant Pro^{OE}

 The gear indicator flashes.
The Pro shift assistant is not available.

Possible cause:

– with shift assistant Pro^{OE}

The gearbox sensor is not fully trained.

- Engage neutral gear N and, with the vehicle at a standstill, let the engine run for at least 10 seconds to train the idle gear.
- Engage all gears with clutch actuation and ride at least 10 seconds with the engaged gear.
- » The gear indicator starts to flash when the gearbox sensor has been trained successfully.

– Once the transmission sensor has been fully taught-in, shift assistant Pro will operate as described (125).

- If the training process was not successful, have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

DWA battery weak

– with alarm system (DWA)^{OE}



General warning light shows yellow.

DWA LO ! appears on the display.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the anti-theft alarm has lost a significant proportion of its original capacity. There is no assurance of how long the anti-theft alarm can remain operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

DWA battery flat

– with alarm system (DWA)^{OE}



General warning light shows yellow.

DWA ! appears on the display.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the anti-theft alarm has lost its entire original capacity. There is no assurance that the anti-theft alarm will be operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Dynamic ESA fault

 General warning light shows yellow.

D-ESA ! appears on the display.

Possible cause:

The Dynamic ESA control unit has detected a fault. In this condition, the motorcycle has too much damping and is uncomfortable to drive, especially on roads in poor condition.

- Have the fault rectified as quickly as possible by a

specialist workshop, preferably an authorised BMW Motorrad dealer.

CAN open circuit/short circuit

 General warning light shows red.

NO CAN (Controller Area Network) appears on the display.

Possible cause:

A fault in the Controller Area Network has been detected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

No coding

 General warning light shows yellow.

NO CODING appears on the display.

Possible cause:

A coding fault has been detected.

- The reading remains visible for 10 seconds before disappearing automatically.
- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Service-due date has passed

 General warning light shows yellow.

SERVICE ! is displayed.

Service-due indicator



The service-due date **1** shows when a service is due within one month.



When a service is due within 1000 km (US model, 700 miles), countdown distance **1** is shown

and counted down in steps of 100 km (US model, 100 miles). This reading appears briefly after the Pre-Ride-Check completes.

 If service is overdue, the due date or the odometer reading at which service was due is accompanied by the 'General' warning light showing yellow. The word "Service" remains permanently visible.



NOTICE

If the service-due indicator appears more than a month before the service date, the date saved in the instrument cluster must be adjusted. This situation can occur if the battery was disconnected for a prolonged period of time.

If you want to have the date set consult a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

Fuel down to reserve



General warning light shows yellow.

FUEL ! appears on the display.



WARNING

Irregular engine operation or engine shutdown due to lack of fuel

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry.◀

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.




Fuel reserve

approx. 4 l

- Refuelling (➡ 85).

Range

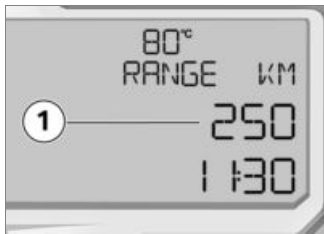

The range readout **1** RANGE indicates how far you can ride with the fuel remaining in the tank. This distance is calculated on the basis of average consumption and the quantity of fuel on board.

- When the motorcycle is propped on its side stand the slight angle of inclination means that the sensor cannot register the fuel level correctly. This is the reason why the range is calculated only when the side stand is in the retracted position.

- The range reading appears automatically on the multifunction display when fuel is down to the reserve level.
- After a refuelling stop, range is recalculated if the amount of fuel in the tank is greater than the reserve quantity.
- The calculated range is only an approximate figure.

Operation

Ignition switch/steering lock	38	Riding mode	56
Emergency off switch (kill switch)	40	Cruise-control system	59
Lights	40	Heated handlebar grips	61
Daytime riding light	42	Seat	62
Hazard warning lights system	45		
Turn indicators	46		
Multifunction display	47		
Anti-theft alarm (DWA)	50		
Clock	52		
Anti-lock brake system (ABS)	52		
Automatic Stability Control (ASC)	53		
Dynamic Traction Control (DTC)	54		
Electronic Suspension Adjustment (ESA)	55		

Ignition switch/steering lock

Keys

You receive 2 ignition keys.

Please consult the information on the electronic immobiliser (EWS) if a key is lost or mislaid (► 39). Ignition switch/steering lock, fuel filler cap lock and seat lock are all operated with the same key.

If you wish you can arrange to have the cases and the top-case fitted with locks that can be opened with the ignition key as well. Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Lock the handlebars




ATTENTION

Handlebars turned in wrong direction when motorcycle propped on side stand

Risk of damage to parts if vehicle topples

- On level ground, always turn the handlebars to the left to set the steering lock.
- In all other cases it is the lie of the ground that determines the direction in which the handlebars should be turned.◀
- If the camber of the roadway permits, turn the handlebars all the way to the left.

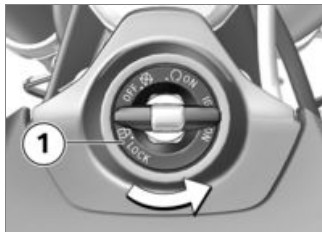

- Turn the vehicle key to position **1**, while moving the handlebars slightly.

- » Ignition, lights and all function circuits switched off.
- » Handlebars are locked.
- » Vehicle key can be removed.

Switching on ignition



- Insert the vehicle key into the ignition switch and turn it to position **1**.
- » Side lights and all function circuits are switched on.
- » Engine can be started.
- with daytime riding light^{OE}
- » When the ignition is switched on the daytime riding light comes on briefly (welcome light). The welcome light goes

out immediately in the following circumstances:

- Turn indicators or hazard warning lights are switched on.
- Light switches are operated.
- Engine is started.<1
- » Pre-Ride-Check is performed. (➡ 76)
- » ABS self-diagnosis is in progress. (➡ 77)
- » ASC self-diagnosis is in progress. (➡ 78)
- with Dynamic Traction Control (DTC)^{OE}
- » DTC self-diagnosis is in progress. (➡ 78)<1

Switching off ignition



- Turn the ignition key to position **1**.
 - » When the ignition is switched off, the instrument cluster remains switched on for a short time and displays any existing fault messages.
 - » Handlebars not locked.
 - » Electrically powered accessories remain operational for a limited period of time.
 - » The battery can be recharged via the socket.
 - » Vehicle key can be removed.

– with daytime riding light^{OE}

- » The daytime riding light goes out soon after the ignition is switched off (headlight courtesy delay feature).<1

Electronic immobiliser EWS

The electronic design of the motorcycle allows it to access data stored in the ignition key by means of a ring antenna located in the ignition switch/steering lock. The engine control unit will not permit the engine to be started unless the key is identified as “authorised”.



NOTICE

A spare key attached to the same ring as the ignition key used to start the engine could “irritate” the electronics, in which case the enabling signal for starting is not issued. The

EWS ! warning appears in the multifunction display.
Always keep the spare key separately from the ignition key.◀

If you lose your key, you can have it barred by your authorised BMW Motorrad dealer. If you wish to do this, you will need to bring all other keys for the motorcycle with you. The engine cannot be started by a barred key, but a key that has been barred can subsequently be reactivated.

You can obtain emergency/extra keys only through an authorised BMW Motorrad dealer. The keys are part of an integrated security system, so the dealer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

Emergency off switch (kill switch)



1 Emergency off switch (kill switch)




WARNING

Operation of the kill switch while riding

Risk of fall due to rear wheel locking

- Do not operate the kill switch when riding.◀

The emergency off switch is a kill switch for switching off the engine quickly and easily.

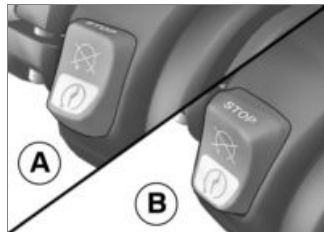

- A Engine switched off
B Normal operating position (run)

Lights

Low-beam headlight and sidelights

The side lights switch on automatically when the ignition is switched on.



NOTICE

The side lights place a strain on the battery. Do not switch the ignition on for longer than absolutely necessary. ◀


The low-beam headlight switches on automatically when the engine is switched on.

– with daytime riding light ^{OE}

In daytime the daytime riding light can be switched on as an alternative to the low-beam headlight.

High-beam headlight and headlight flasher


- Switching on ignition (▶▶▶ 38).

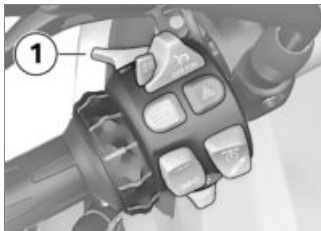

- Push switch **1** forward to switch on the high-beam headlight.
- Pull switch **1** back to operate the headlight flasher.

Headlight courtesy delay feature


- Switch off the ignition.

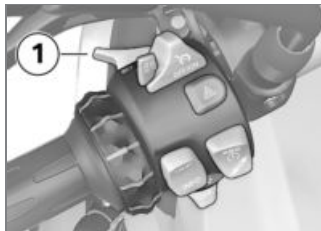

- Immediately after switching off the ignition, push button **1** to the back and hold it in this position until the headlight courtesy delay feature comes on.
 - » The vehicle lighting lights for one minute and is automatically switched back off.
- This can be used after parking the vehicle, for example, to light the way to the house door.

Parking lights

- Switching off ignition (▶▶▶ 39).

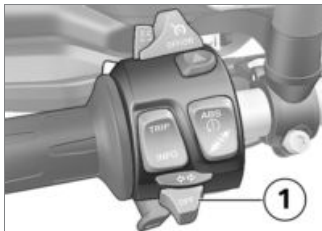

- Immediately after switching off the ignition, push button **1** to the left and hold it in this position until the parking lights come on.
- Switch the ignition on and off again to switch off the parking lights.

Daytime riding light

– with daytime riding light^{OE}

Automatic or manual daytime riding light

The daytime riding light is switched on and off either automatically or manually. You can switch the automatic function for the daytime riding light on or off in the menu.

Recommended setting:

- SETUP EQUIP: DRL AUTO **ON**
(DRL: daytime riding light)

You can switch the automatic function for the daytime riding light off temporarily by pressing the button. Pressing the button for the daytime riding light has no effect on the setting in the menu.

Automatic daytime riding light



WARNING

The automatic riding light control system cannot replace your personal assess-

ment of lighting conditions, particularly in foggy or misty weather.


Safety risk

- Manually switch on the low-beam headlight in poor lighting conditions.◀
- Start engine (III 75).




NOTICE

The changeover between daytime riding light and low-beam headlight including front side lights can be effected automatically.◀

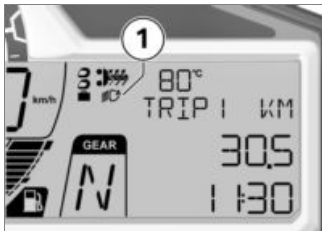


Symbol **1** for the automatic daytime riding light appears on the display.

» If symbol **1** does not appear, this is because the **SETUP EQIP:DRL AUTO OFF** is active. Proceed as follows in order to switch the daytime riding light to automatic:

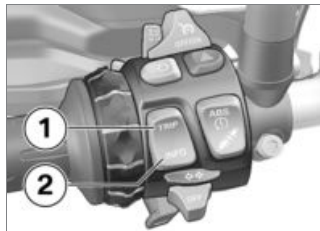

- Repeatedly short-press **INFO 2** until **SETUP MENU ENTER** appears on the display.
- Long-press **INFO 2**.
 - » The **SETUP MENU** opens.
- Repeatedly short-press **TRIP 1** or **INFO 2** until **SETUP EQUIPMENT ENTER** appears on the display.
- Long-press **INFO 2**.
 - » The **SETUP EQUIPMENT** menu opens.
- Repeatedly short-press **TRIP 1** or **INFO 2** until **SETUP EQIP:DRL AUTO** appears on the display.

- Long-press **INFO 2** to switch automatic daytime riding light ON.
- Long-press **TRIP 1** to return to the default reading.

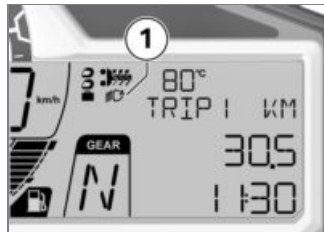

Symbol **1** for the automatic daytime riding light appears on the display.

» If the ambient brightness decreases below a certain value, the low beam headlight is automatically switched on (e. B. in a tunnel). When sufficient ambient brightness is detected, the

daytime riding light is switched back on.



The indicator light for the daytime riding light shows if the daytime riding light is active.

Manual operation of the light when the automatic system is switched on Requirement

Automatic for daytime riding light is switched on.



- Press button **1** (e. g. when you ride into a tunnel, and the response of the automatic daytime running light to the

change in ambient brightness is delayed).

- » Automatic for daytime riding light is switched off.
- » The low-beam headlight and the front side lights are switched on.
- Press button **1** again.
- » Automatic for daytime riding light is re-activated.
- » The daytime riding light is switched on again as soon as ambient light is bright enough.



The indicator light for the daytime riding light shows if the daytime riding light is active.

Manual daytime riding light Requirement

Automatic for daytime riding light must be switched off.



WARNING

Activation of daytime riding light in the dark.

Poorer vision and oncoming traffic dazzled.

- Do not use the daytime running light when it is dark.◀



NOTICE

By comparison with the low-beam headlight, the daytime running light makes the vehicle more visible to oncoming traffic. This improves daytime visibility.◀

- Start engine (III → 75).

instead of the hazard warning flashers, and remains active until you release the button. The hazard warning flashers recommence flashing as soon as the button is released.◀



- Press button **1** to switch on the hazard warning flashers.
- » Ignition can be switched off.
- To switch off the hazard warning flashers, switch on the ignition and press button **1** again.

Turn indicators

Operating the turn indicators

- Switching on ignition (➡ 38).



- Push button **1** to the left to switch on the left turn indicators.
- Push button **1** to the right to switch on the right turn indicators.
- Centre button **1** to cancel the turn indicators.




NOTICE

The turn indicators are cancelled automatically after the defined riding time and distance. The defined time and distance can be set by an authorised BMW Motorrad dealer.◀

- » Factory setting:
- Riding time = 10 s
 - Distance travelled = 300 m

Multifunction display Overview, main menu

- 1 Odometer
Default display
Selecting readings in multi-function display (➡ 48).
 - 2 LAPTIMER (➡ 98)
 - 3 RACE INFO (➡ 102)
 - 4 SETUP MENU (➡ 90)
 - 5 TRIP 1 / TRIP 2
Resetting trip distance recorder (➡ 49).
 - 6 Average consumption and average speed
Resetting the average values (➡ 49).
- Solid line means: short-press the TRIP/INFO rocker switch.
- - Broken line means: long-press the TRIP/INFO rocker switch.

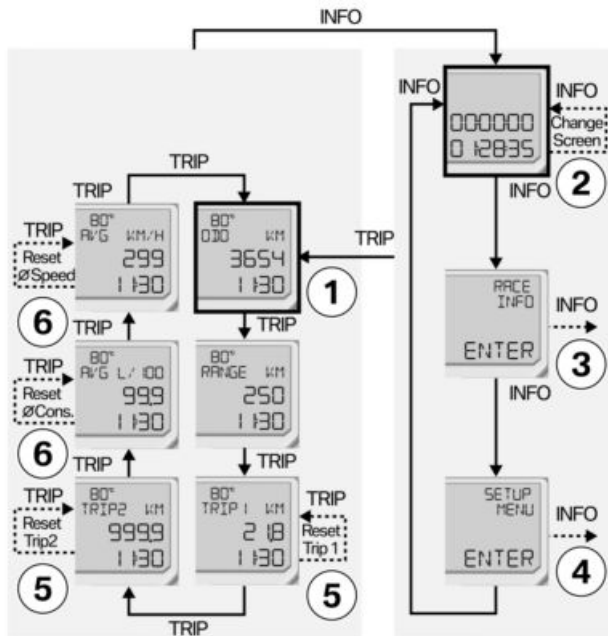

Selecting readings in multifunction display

- Switch on the ignition.
- » All the information necessary for riding on public roads is presented in the multifunction display by the on-board computer.




- Repeatedly short-press **TRIP 1** until the value you want appears in panel **2**.

The following values of the on-board computer can be displayed:

- Odometer ODO (default display)
- Range RANGE
- Tripmeter 1 (TRIP 1)
- Tripmeter 2 (TRIP 2)
- Average consumption AVG in units of volume per unit of distance or in units of distance per unit of volume
- Average speed AVG in units of distance per hour

Selecting other readings

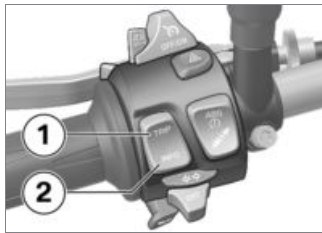

- Short-press **INFO 2** to view other readings.

- Press **TRIP 1** briefly to return to the odometer reading ODO (default display).
- Repeatedly short-press **INFO 2** until the reading you want is selected.

The display readouts at your disposal are as follows:


- **LAPTIMER**: lap times and other data can be logged here and subsequently retrieved in the **RACE INFO** menu.
- **RACE INFO**: the information logged with the **LAPTIMER** can be retrieved for viewing here. **RACE INFO** can be called up only when the vehicle is at a standstill.
- **SETUP MENU**: the instrument panel can be configured to suit the rider's preferences here. **SETUP MENU** can be called up only when the vehicle is at a standstill.
- When the display shows the **LAPTIMER**, long-press **INFO 2**

to call up the various LAP-TIMER readings.

- When the display shows RACE INFO ENTER or SETUP MENU ENTER, long-press INFO 2 to call up the corresponding menu.

Resetting trip distance recorder

- Switch on the ignition.

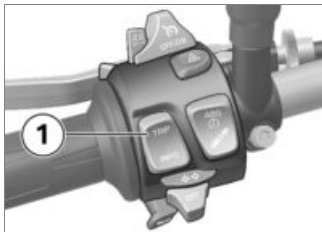


- Repeatedly short-press TRIP 1 until the trip distance recorder you want appears on the display.

- » TRIP 1 or TRIP 2 appears on the display.
- Press and hold down TRIP 1 until the trip distance recorder is reset.
- » Tripmeter reading = 0 . 0

Resetting the average values

- Switch on the ignition.

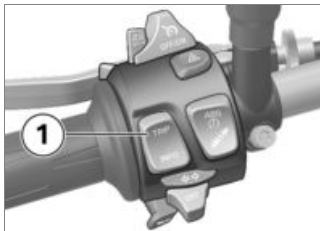

- Repeatedly short-press TRIP 1 until the average you want to reset appears on the display.
- » AVG appears on the display.

- Press and hold down TRIP 1 until the value you selected has reset.
- » Average value = 0 . 0

Anti-theft alarm (DWA)

- with alarm system (DWA)^{OE}

DWA activating

- Switching on ignition (➡ 38).
- DWA adjusting (➡ 51).
- Switch off the ignition.
- » DWA If the alarm system (DWA) is activated, then the alarm system will be armed automatically when the ignition is switched off.
- » Activation takes approximately 30 seconds to complete.
- Turn indicators flash twice.
- Confirmation tone sounds twice (if programmed).
- » Anti-theft alarm (DWA) is active.

Alarm signal

A DWA alarm can be triggered by:

- motion sensor
- an attempt to use an unauthorised vehicle key to switch on the ignition.
- disconnection of the DWA anti-theft alarm from the motorcycle's battery (DWA internal battery in the anti-theft alarm provides power - alarm tone only, the turn indicators do not flash).

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered if the system is disconnected from the motorcycle's battery.

The alarm signal continues for approx. 26 seconds. While a DWA alarm is in progress an alarm tone sounds and the turn indicators flash. The type of

alarm tone can be set by an authorised BMW Motorrad dealer.

If a DWA alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The DWA LED then indicates the reason for the DWA alarm for one minute.

Light signals issued by the DWA LED:

- Flashes 1x: Motion sensor 1
- Flashes 2x: Motion sensor 2
- Flashes 3x: Ignition switched on with unauthorised vehicle key
- Flashes 4x: Disconnection of the DWA anti-theft alarm from the motorcycle's battery
- Flashes 5x: Motion sensor 3

DWA deactivating

- Switching on ignition (➡ 38).
- » Turn indicators flash once.

- » Confirmation tone sounds once (if programmed).
- » Anti-theft alarm (DWA) is deactivated.

DWA adjusting

- Switching on ignition (🔑 38).



- Repeatedly short-press INFO **1** until SETUP MENU ENTER appears on the display.
- Long-press INFO **1** to exit SETUP MENU.



- Repeatedly short-press INFO **1** until SETUP EQUIPMENT ENTER appears on the display.
- Long-press INFO **1** to exit SETUP EQUIPMENT.



- Repeatedly short-press INFO **1** until the SETUP EQIP: DWA menu item appears on the display.
 - » AUTO appears in display line **2**.
 - » The preset ON/OFF value appears in display line **3**.
- Long-press INFO **1** to change the preset value.

The following settings are available:

- DWA AUTO ON: The DWA anti-theft alarm is active and will be armed automatically

when the ignition is switched off.

- DWA AUTO OFF: The DWA anti-theft alarm is deactivated.

Clock

Setting the clock Requirement

The vehicle is at a standstill.

- Switch on the ignition.



- Repeatedly short-press INFO **2** until SETUP MENU ENTER appears on the display.
- Long-press INFO **2**.

- » The SETUP MENU opens.
- Repeatedly short-press INFO **2** until SETUP EQUIPMENT ENTER appears on the display.
- Long-press INFO **2**.
- » The SETUP EQUIPMENT menu opens.
- Repeatedly short-press INFO **2** until SETUP EQIP: CLOCK TIME appears on the display.
- Long-press INFO **2**.
- » Minutes reading **4** flashes.
- Short-press TRIP **1** to step the minutes reading up.
- Short-press INFO **2** to step the minutes reading down.
- When the minutes reading is correct, long-press INFO **2**.
- » Hours reading **3** flashes.
- Short-press TRIP **1** to step the hours reading up.
- Short-press INFO **2** to step the hours reading down.

- When the hours reading is correct, long-press INFO **2**.
- » The hours reading stops flashing.
- » This completes the process.

Anti-lock brake system (ABS)


ABS Switching off

- Switch on the ignition.



NOTICE

You have the option of deactivating the ABS function while the motorcycle is on the move. ◀

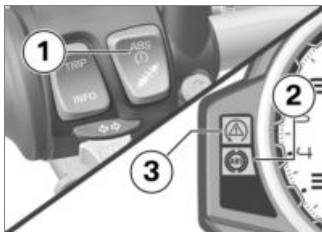

- Press and hold button **1** until first the ASC/DTC indicator light **3** and then the ABS indicator and warning light **2** change status.
- » The ASC/DTC setting remains unchanged.



ABS telltale and warning light shows.

- Release button **1** within two seconds.




ABS telltale and warning light remains on.

- » ABS is switched off.

- with ABS Pro^{OE}
- » ABS Pro is switched off.◀

ABS Switching on

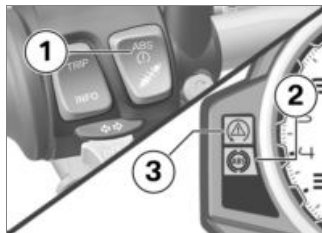

- Press and hold button **1** until first the ASC/DTC indicator light **3** and then the ABS indicator and warning light **2** change status.
- » The ASC/ DTC setting remains unchanged.



ABS telltale and warning light goes out; if self-diagnosis has not completed it starts flashing.

- If the coding plug is not inserted, you have the alternative of switching the ignition off and then on again.



An ABS fault has occurred if the ABS telltale and warning light shows when the motorcycle accelerates to a speed in excess of the minimum stated below after the ignition was switched off and then on again.

min 10 km/h

Automatic Stability Control (ASC)


ASC Switching off

- Switch on the ignition.



NOTICE

You have the option of deactivating the ASC function while the motorcycle is on the move.◀

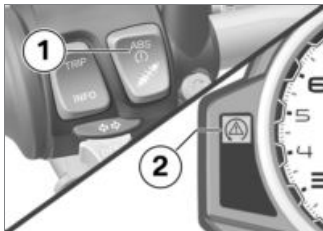

- Press and hold down button **1** until ASC telltale and warning light **2** changes status.

» The ABS setting remains unchanged.



ASC telltale and warning light starts to show.


- Release button **1** within two seconds.



ASC telltale and warning light remains on.

» ASC is switched off.

ASC Switching on

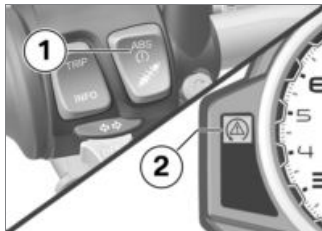

- Press and hold down button **1** until ASC indicator and warning light **2** changes status.



ASC telltale and warning light goes out; if self-diagnosis has not completed it starts flashing.

- Release button **1** within two seconds.



ASC telltale and warning light remains off or continues to flash.

» ASC is switched on.

- You also have the option of switching the ignition off and then on again.



An ASC fault has occurred if the ASC telltale and warning light shows when the motorcycle accelerates to a speed in excess of the minimum stated below after the ignition was switched off and then on again.

min 10 km/h

Dynamic Traction Control (DTC)

- with Dynamic Traction Control (DTC)^{OE}


DTC Switching off

- Switch on the ignition.



NOTICE

You have the option of deactivating the DTC function while the motorcycle is on the move.◀

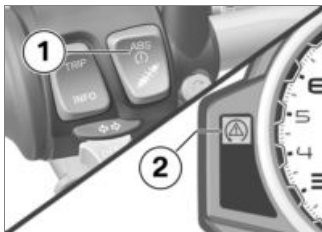

- Press and hold down button **1** until DTC telltale light **2** changes status.



DTC telltale light starts to show.


- Release button **1** within two seconds.



DTC telltale light remains on.

» DTC is switched off.

DTC Switching on

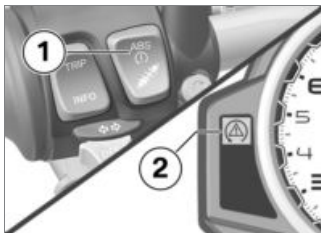

- Press and hold button **1** until DTC indicator light **2** changes status.



DTC telltale light goes out; if self-diagnosis has not completed it starts flashing.

- Release button **1** within two seconds.



DTC telltale light remains off or continues to flash.

» DTC is switched on.

- If the coding plug is not inserted, you have the alternative of switching the ignition off and then on again.



A DTC fault has occurred if the DTC telltale light shows when the motorcycle accelerates to a speed in excess of the minimum stated below after the ignition was switched off and then on again.


min 10 km/h

Electronic Suspension Adjustment (ESA)

– with Dynamic ESA^{OE}

Adjusting the chassis and suspension

- Switching on ignition (▶ 38). In the multifunction display the spring preload is shown in area **1** and the damping in area **2**.

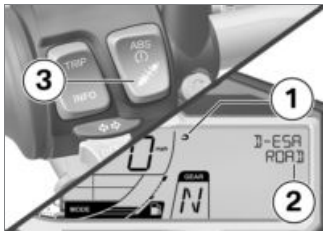

To adjust damping:

- Repeatedly press button **3** until the setting you want to use appears on the display.

NOTICE

You can adjust the damping characteristic while the motorcycle is on the move.◀

The following settings are available:

- ROAD: Normal damping characteristic
- DYNAMIC: Sporty damping characteristic

To adjust spring preload:

- Start engine (III 75).
- Press and hold down button **3** until the setting you want to use appears on the display.



NOTICE

You cannot adjust spring preload while the motorcycle is on the move.◀

The following settings are available:



One-up



One-up with luggage



Two-up (with luggage)

- Wait for the mechanism to complete all adjustments before you ride off.
- » The settings for damping and spring preload shown on the

display are automatically accepted if you allow a certain length of time to pass without pressing button **3**. The Dynamic ESA indicator flashes while adjustment is in progress.

- » The Dynamic ESA indicator disappears from the display as soon as adjustment completes.

Riding mode

Using the riding modes

BMW Motorrad has developed 4 operational scenarios for your motorcycle from which you can select the scenario suitable for your situation:

- Riding on a rain-wet road surface.
- Riding on a dry road surface.

- with riding modes Pro^{OE}

The following predefined scenarios are available:

- Dynamic riding on a dry road surface.
- Sporty, one-up riding on a dry road surface.

The interplay of engine torque, throttle response, ABS control and ASC or DTC control is optimised for each of these 4 scenarios.

- with Dynamic ESA^{OE}

The suspension's damping characteristic always initially returns to the basic setting whenever riding modes are changed. The ROAD and DYNAMIC variants can then be selected.

Setting riding mode

- Switching on ignition (➡ 38).




- Press button **1**.



NOTICE

See the section entitled "Engineering details" for more information on the various ride modes that can be selected. ◀

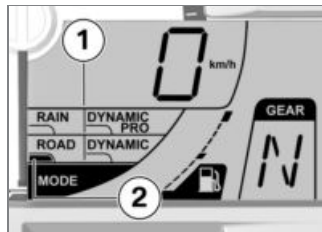

Riding modes **1** are shown. The highlight **2** tells you which riding mode is currently selected.



- Repeatedly press button **1** until the riding mode you want is highlighted.

The following ride modes can be selected:

- RAIN: For riding on a rain-wet road surface.
- ROAD: For riding on a dry road surface.

– with riding modes Pro^{OE}

- » The following riding modes are additionally available for selection:
- DYNAMIC: For dynamic riding on a dry road surface.
- DYNAMIC PRO: For sporty riding (only with coding plug installed).◀
- » With the motorcycle at a standstill, the selected mode is activated after approximately two seconds.
- » The newly selected riding mode is activated as you ride only when the following preconditions are satisfied:
- Throttle twistgrip is in idle position.


– Brake levers are in the released positions.

- » The mode selected in this way is retained with the engine-characteristic, ABS, ASC/DTC and Dynamic ESA adaptation settings even after the ignition has been switched off.


Installing encoding plug

– with riding modes Pro^{OE}

- Switching off ignition (➡ 39).
- Removing seat (➡ 62).

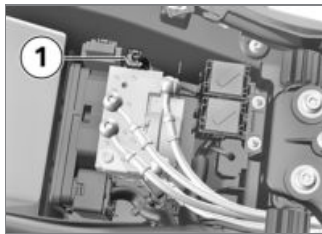

- Disconnect plug **1** from the rear carrier.

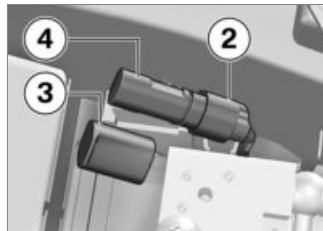

ATTENTION

Dirt and damp penetrating inside open connectors

Malfunctions

- Reinstall the protective cap after removing the coding plug.◀
- Press in latch **2** and remove cap **3**.
- Insert coding plug **4**.
- Position plug **1** in the rear carrier.
- Switch on the ignition.
- » For safety reasons, the RAIN riding mode is activated by de-

fault when the coding plug is inserted.

- Setting riding mode (➡ 57).
 - » The preset riding mode is retained in memory, even after the ignition is switched off.
- Installing seat (➡ 62).

Cruise-control system

– with cruise control^{OE}

Switching on cruise control



- Slide switch **1** to the right.
 - » Button **2** is enabled for operation.

Saving road speed



- Briefly push button **1** forward.



Adjustment range for
cruise control

20...210 km/h



Telltale light for cruise control lights up.

- » The motorcycle maintains your current cruising speed and the setting is saved.

Accelerating



- Briefly push button **1** forward.
 - » Speed is increased by approx. 2 km/h (1.2 mph) each time you push the button.
- Push button **1** forward and hold it in this position.
 - » The motorcycle accelerates steplessly.
 - » The current speed is maintained and saved if button **1** is not pushed again.

Decelerating



- Briefly push button **1** back.
- » Speed is reduced by approx. 2 km/h (1.2 mph) each time you push the button.
- Push button **1** back and hold it in this position.
- » The motorcycle decelerates steplessly.
- » The current speed is maintained and saved if button **1** is not pushed again.

Deactivating cruise control

- Brake, pull the clutch lever or turn the throttle twistgrip (close the throttle by turning the twistgrip back past the idle position) to deactivate the cruise-control system.



NOTICE

For safety reasons, cruise control is deactivated automatically when the ASC and DTC systems intervene.◀

- with shift assistant Pro^{OE}
- Shift to deactivate the cruise-control system.



NOTICE

Whenever the Pro shift assistant shifts gears, cruise control is automatically disengaged for safety reasons.◀

» Telltale light for cruise control goes out.

Resuming former cruising speed



- Briefly push button **1** back to return to the speed saved beforehand.



NOTICE

Opening the throttle does not deactivate the cruise-control system. If you release the twistgrip the motorcycle will decelerate only to the cruising speed saved in memory, even though you

might have intended slowing to a lower speed.◀



Telltale light for cruise control lights up.

Switching off cruise control



- Slide switch **1** to the left.
 - » The system is deactivated.
 - » Button **2** is disabled.

Heated handlebar grips

– with heated grips^{OE}

Operating the heated handlebar grips

- Start the engine.



NOTICE

The heating in the heated handlebar grips can be activated only when the engine is running.◀



NOTICE

The increase in power consumption caused by having the heated handlebar grips switched on can drain the battery if you are riding at low engine speeds. If the charge level is low, the heated handlebar grips are switched off to ensure the battery's starting capability.◀



NOTICE

The heated grips are switched off automatically if they start to overheat.◀




- Press button **1**.



NOTICE

The handlebar grips have two-stage heating. Stage two is for heating the grips quickly: it is advisable to switch to stage one as soon as the grips are warm.◀

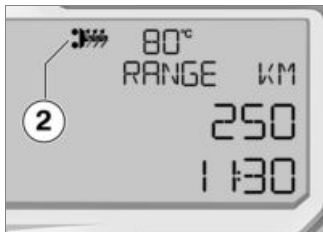

The symbol for the second heating stage **2** appears on the display.



Second stage: 100 % heating power

» The selected heating stage will be saved if you allow a certain length of time to pass without making further changes.

- Press button **1** again.
- » The symbol for the first heating stage appears on the display.




First stage: Approx. 50 % heating power

- Press button **1** again.
- » The symbol for heating stages disappears.
- » The heating is off.

Seat

Removing seat

- Make sure the ground is level and firm and place the motorcycle on its stand.

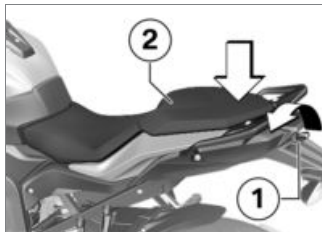


- Press down on the rear part of seat **2** to relieve the strain on the lock and at the same time unlock the seat lock by

turning vehicle key **1** counter-clockwise.

- Lift the seat at the rear and remove.
- Lay the seat on a clean surface.

Installing seat

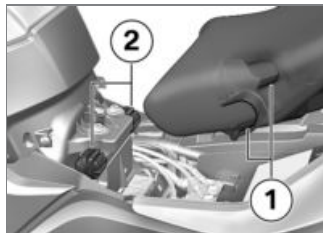

- Position the seat with mounts **1** in buffers **2** on left and right.
- Lower the rear of the seat and engage the seat in the latching mechanism.

Adjustment

Mirrors	64
Headlight	64
Windscreen	65
Brakes	66
Spring preload	66
Damping	68


Mirrors

Adjusting mirrors



- Turn the mirror to the desired position.

Adjusting mirror arm

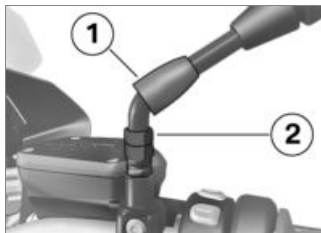

- Push protective cap **1** for the threaded fastener up on the mirror arm.
- Slacken locknut **2**.
- Turn the mirror arm to the appropriate position.
- Tighten the locknut to the specified tightening torque, while holding the mirror arm to ensure that it does not move out of position.



Mirror (locknut) to adapter

22 Nm (Left-hand thread)

- Push protective cap **1** over the threaded fastener.

Headlight

Adjusting headlight for driving on left/driving on right

This motorcycle has a symmetric-beam low-beam headlight. If the motorcycle is ridden in a country where the opposite rule of the road applies, its symmetric low-beam headlight means that no measures are necessary to prevent the headlight beam from dazzling oncoming traffic.

Headlight beam throw and spring preload

Headlight beam throw is generally kept constant when spring preload is adjusted to suit load. Headlight beam throw is set correctly ex-works.



NOTICE

If there are doubts about the correct headlight beam throw, have the setting checked by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

Adjusting headlight beam throw

- Disengage the inner trim panel (► 154).



If, for a high load, the adjustment of the spring pre-load is no longer sufficient not to dazzle oncoming traffic:

- Turn adjusting screw **1** counter-clockwise with open-ended spanner **2** (on-board toolkit) to lower the headlight beam.
- Installing inboard cover (► 155).

When the motorcycle is again ridden with a lower load:

- Return the headlight to its basic setting.

Windscreen

Adjusting windscreen Requirement

The motorcycle is at a standstill.



WARNING

Adjusting the windscreen while riding.

Risk of falling

- Do not attempt to adjust the windscreen unless the motorcycle is at a standstill. ◀

- Move the windscreen up or down. Take care not to scratch the windscreen when adjusting.
- » The windscreen is held at the top or bottom limit position by spring force.

Brakes

Adjusting brake lever



WARNING

Relocated brake fluid tank

Air in the brake system

- Do not turn the handlebars or the handlebar fitting on the handlebar. ◀




WARNING

Adjusting the brake lever while riding

Risk of accident

- Do not attempt to adjust the brake lever unless the motorcycle is at a standstill. ◀

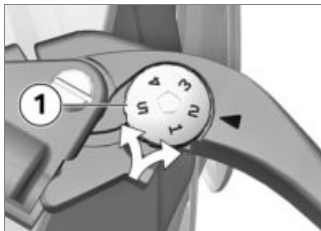

- Applying light pressure from behind, turn adjusting screw **1** to the desired position.



NOTICE

The adjusting screw is easier to turn if you push the brake lever forward. ◀

- » Adjustment options:
 - from position 1: largest span between handlebar grip and brake lever
 - to position 5: smallest span between handlebar grip and brake lever

Spring preload

– without Dynamic ESA^{OE}

Adjustment

Spring preload has to be adjusted to suit the weight of rider, passenger and luggage. Increase spring preload for heavier loads, decrease spring preload for lighter loads.



WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload. ◀


Adjusting spring preload for rear wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.

- Make sure there is no load on the motorcycle; remove all items of luggage, if carried.



- Use the tool from the on-board toolkit to slacken screw **1**.

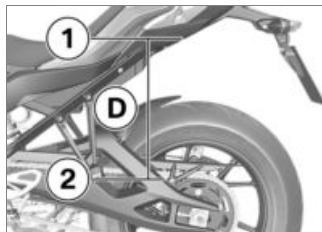

- Hold the motorcycle upright (do not prop it on the side stand) and measure distance **D** from bottom edge **1** of the rear trim panel to screw **2** of the chain guard.
- Apply the rider's weight to the motorcycle.
- With the assistance of a second person, measure distance **D** between points **1** and **2** again and calculate the difference (negative spring displacement) between the two readings.




Load-dependent adjustment of spring preload

Suspension compression at rear wheel

10 mm (One-up riding without luggage)

16 mm (One-up with luggage)

26 mm (Two-up with luggage)

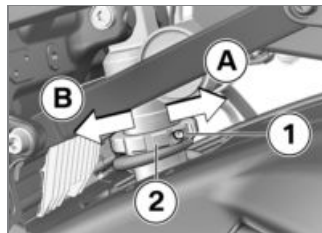

- To reduce negative spring displacement (increase spring preload, in other words), use the tool from the on-board toolkit to turn adjusting ring **2** in direction **B**.

- To increase negative spring displacement (reduce spring preload, in other words), use the tool from the on-board toolkit to turn adjusting ring **2** in direction **A**.
- Tighten screw **1** to the specified tightening torque.



Screw in adjusting ring

3 Nm

Damping

– without Dynamic ESA^{OE}

Adjustment

Damping must be adapted to suit the condition of the surface on which the motorcycle is ridden and to suit spring preload.

- An uneven surface requires softer damping than a smooth surface.

- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

Adjusting compression-stage damping for front wheel



- Adjust compression-stage damping by turning adjusting screw **1** and reading the red scale on the left fork leg.



- To increase damping: Use the tool from the on-board kit to turn the adjusting screw in the appropriate direction so that mark **2** points to a higher reading on the scale.
- To reduce damping: Use the tool from the on-board kit to turn the adjusting screw in the appropriate direction so that mark **2** points to a lower reading on the scale.




Compression stage, basic setting, front

Position 1 (comfortable setting with rider 85 kg)

Position 3 (normal setting with rider 85 kg)

Position 7 (sports setting with rider 85 kg)

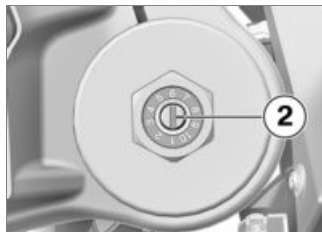

- To increase damping: Use the tool from the on-board kit to turn the adjusting screw in the appropriate direction so that mark **2** points to a higher reading on the scale.
- To reduce damping: Use the tool from the on-board kit to turn the adjusting screw in the appropriate direction so that mark **2** points to a lower reading on the scale.




Rebound stage, basic setting, front

Position 1 (comfortable setting with rider 85 kg)

Position 3 (normal setting with rider 85 kg)

Position 7 (sports setting with rider 85 kg)

Adjust the rebound-stage damping for front wheel

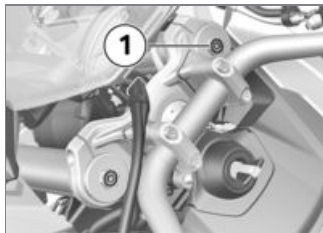

- Adjust rebound-stage damping by turning adjusting screw **1** and reading the yellow scale on the right fork leg.

Factory default settings, front wheel

- Reset the factory defaults as stated below.




Factory default settings for compression/rebound stages, front

Position 5

Adjusting rebound-stage damping for rear wheel

- Make sure the ground is level and firm and place the motorcycle on its stand.

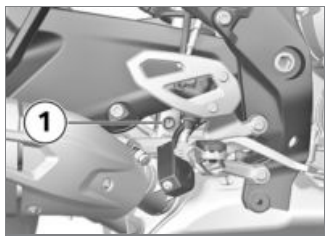

- Adjust compression-stage damping by turning adjusting screw **1** and reading the yellow scale.



- To increase damping: Use the tool from the on-board kit to turn the adjusting screw in the

appropriate direction so that mark **2** points to a higher reading on the scale.

- To reduce damping: Use the tool from the on-board kit to turn the adjusting screw in the appropriate direction so that mark **2** points to a lower reading on the scale.

	Rebound stage, basic setting, rear
Position 5 (One-up riding without luggage)	
Position 6 (One-up with luggage)	
Position 8 (Two-up with luggage)	

Riding

Safety instructions	72
Comply with checklist.....	75
Starting	75
Running in	79
Shifting gear	80
Brakes	82
Parking your motorcycle	84
Refuelling	85
Securing motorcycle for transportation	87

Safety instructions

Rider's equipment

Do not ride without the correct clothing! Always wear:

- Helmet
- Motorcycling jacket and trousers
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad dealer will be glad to advise you on the correct clothing for every purpose.

Restricted angle of heel

A motorcycle with lowered suspension has less ground clearance and cannot corner at angles of heel as extreme as those achievable by a counterpart motorcycle with standard-height suspension.



WARNING

When a motorcycle with lowered suspension is cornering, certain components can come into contact with the surface at a bank angle less than that to which the rider is accustomed.

Risk of falling

- Carefully try out the limits of the motorcycle's bank angle and adapt your style of riding accordingly.◀

Test your motorcycle's angle of heel in situations that do not involve risk. When riding over kerbs and similar obstacles, bear in mind that your motorcycle's ground clearance is limited.

Lowering the motorcycle's suspension shortens suspension travel (see the section entitled "Technical Data"). Ride comfort might be restricted as a result.

Be sure to adjust spring preload accordingly, particularly for riding two-up.

Loading



WARNING

Handling adversely affected by overloading and imbalanced loads

Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading.◀
- Adjusting spring preload setting and damping to the total weight.
- with case holder left/right^{OE}
- Ensure that the case volumes on the left and right are equal.
- Make sure that the weight is uniformly distributed between right and left.

- Pack heavy items at the bottom and toward the inboard side.
- Note the maximum permissible payload and the speed limit for riding with cases fitted, as stated on the label inside the case (see also the section entitled "Accessories").◀
- with topcase^{OA}
- Note the maximum permissible payload and the speed limit for riding with topcase fitted, as stated on the label inside the case (see also the section entitled "Accessories").◀
- with tank bag^{OA}
- Note the maximum permissible payload and the speed limit for riding with the tank rucksack fitted.

 Payload of tank rucksack
max 5 kg
 Maximum permissible speed for riding with the tank bag fitted to the motorcycle
max 160 km/h◀

Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle:

- Spring-strut and shock-absorber system not set up correctly
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread
- Etc.

Top speed



DANGER

Maximum speed of the motorcycle is higher than the permissible maximum rated speed of the tyres

Risk of accident due to tyre damage at high speed

- Comply with the tyre-specific speed restrictions.◀

Affix a label stating the maximum permissible speed in the rider's field of vision.

Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.

**WARNING****Exhaust gases adversely affecting health**

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space.◀

Risk of burn injury**CAUTION****Engine and exhaust system become very hot when the vehicle is in use**

Risk of burn injury

- When you park the vehicle make sure that no-one and no objects can come into contact with the hot engine and exhaust system.◀

Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

The following guidelines must be observed:

- Do not run the fuel tank dry.
- Do not attempt to start or run the engine with a spark-plug cap disconnected.
- Stop the engine immediately if it misfires.
- Use only unleaded fuel.
- Comply with all specified maintenance intervals.

**ATTENTION****Unburned fuel in catalytic converter**

Damage to catalytic converter

- Note the points listed for protection of the catalytic converter.◀

Risk of overheating**ATTENTION****Engine running for prolonged period with vehicle at standstill**

Overheating due to insufficient cooling; in extreme cases vehicle fire

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine.◀

Tampering**ATTENTION****Tampering with the motorcycle (e.g. engine management ECU, throttle valves, clutch)**

Damage to the affected parts, failure of safety-relevant functions, voiding of warranty

- Do not tamper with the vehicle in any way that could result in tuned performance.◀

Comply with checklist

- At regular intervals, use the checklist below to check your motorcycle.

Requirement

Always before riding off:

- Check operation of the brake system.
- Check operation of the lights and signalling equipment.
- Checking clutch function (▣▣▣ 135).
- Checking tyre tread depth (▣▣▣ 138).
- Check that cases and luggage are securely held in place.

Requirement

Every 3rd refuelling stop:

- without Dynamic ESA^{OE}
 - Adjusting spring preload for rear wheel (▣▣▣ 66).
 - Adjusting rebound-stage damping for rear wheel (▣▣▣ 69).◀
- with Dynamic ESA^{OE}
 - Adjusting the chassis and suspension (▣▣▣ 55).◀
 - Checking engine oil level (▣▣▣ 130).
 - Checking front brake pad thickness (▣▣▣ 132).
 - Check rear brake pad thickness (▣▣▣ 133).
 - Checking brake-fluid level, front brakes (▣▣▣ 133).
 - Checking the brake-fluid level, rear brakes (▣▣▣ 134).
 - Check coolant level (▣▣▣ 136).
 - Lubricating chain (▣▣▣ 163).

- Checking chain tension (▣▣▣ 163).

Starting

Start engine

- Switch on the ignition.
 - » Pre-Ride-Check is performed. (▣▣▣ 76)
 - » ABS self-diagnosis is in progress. (▣▣▣ 77)
 - » ASC self-diagnosis is in progress. (▣▣▣ 78)
- with Dynamic Traction Control (DTC)^{OE}
 - » DTC self-diagnosis is in progress. (▣▣▣ 78)◀
- Select neutral or, if a gear is engaged, pull the clutch lever.



NOTICE

You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the gearbox in neutral and then

engage a gear before retracting the side stand.◀

- For a cold engine start and low temperatures: pull clutch.



- Press starter button **1**.



NOTICE

The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you start the engine, or use jump leads and a donor battery to start.


See the subsection on jump starting in "Maintenance" for more details.◀

- » The engine starts.
- » Consult the troubleshooting chart below if the engine refuses to start. (▶ 186)

Pre-Ride-Check

The instrument panel runs a test of the warning lights, the revolution counter and the display when the ignition is switched on: this is the Pre-Ride-Check. The test is aborted if you start the engine before it completes.

Phase 1

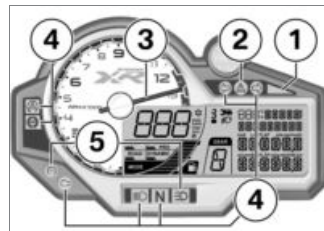

– with alarm system (DWA)^{OE}
LED **1** briefly flashes red.

"General" warning light **2** shows red.

All the segments in the display light up.

The indicator and warning lights **4** light up.

– with cruise control^{OE}
The indicator and warning lights **5** light up, depending on the equipment.

Needle **3** of the revolution counter moves all the way to the position for maximum engine revolutions.

Phase 2

'General' warning light **2** changes from red to yellow.

Phase 3

The needle of the revolution counter moves to the position for zero engine revolutions. The indicator and warning lights go out or start operation as intended.

– with ABS Pro^{OE}

» ABS Pro is displayed.◀

The display switches to its ordinary display mode. The on-board computer readings appear on the display.

If a warning light does not show:



Faulty warning lights

No indication of malfunctions

- Check all the telltale and warning lights.◀
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS self-diagnosis

BMW Motorrad Race ABS performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition. The motorcycle has to move forward a few metres for the wheel-speed sensors to be tested.

Phase 1

» Test of the diagnosis-compatible system components with the vehicle at a standstill.



ABS telltale and warning light flashes.

Phase 2

» Test of the wheel-speed sensors as the vehicle pulls away from rest.



ABS telltale and warning light flashes.

ABS self-diagnosis completed

» The ABS telltale and warning light goes out.

If an indicator showing an ABS fault appears when ABS self-diagnosis completes:

- You can continue to ride. Bear in mind that the ABS and integral braking function are not

available or the functionality is subject to certain restrictions.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ASC self-diagnosis

BMW Motorrad ASC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

- » Test of the diagnosis-compatible system components with the vehicle at a standstill.



ASC telltale and warning light slow-flashes.

Phase 2

- » Pullaway test of the system components with diagnostic capability.



ASC telltale and warning light slow-flashes.

ASC self-diagnosis completed

- » The ASC symbol no longer shows.
- Check all the indicator and warning lights.



ASC self-diagnosis not completed

The ASC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

If an indicator showing an ASC fault appears when ASC self-diagnosis completes:

- You can continue to ride. Bear in mind that the ASC is not available.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

DTC self-diagnosis

– with Dynamic Traction Control (DTC)^{OE}

BMW Motorrad DTC performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

- » Test of the diagnosis-compatible system components with the vehicle at a standstill.



DTC telltale light slow-flashes.

Phase 2

- » Pullaway test of the system components with diagnostic capability.



DTC telltale light slow-flashes.

DTC self-diagnosis completed

- » The DTC symbol no longer shows.
- Check all the indicator and warning lights.



DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

If an indicator showing an DTC fault appears when DTC self-diagnosis completes:

- You can continue to ride. Bear in mind that the DTC function is not available or the functionality might be subject to certain restrictions.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Running in Engine

- Until the running-in check, vary the throttle opening and engine-speed range frequently; avoid riding at constant engine rpm for prolonged periods.
- Try to do most of your riding during this initial period on twisting, fairly hilly roads.

- Comply with the rpm limits for running in.



Running-in speed

<7000 min⁻¹ (Odometer reading 0...300 km)

<9000 min⁻¹ (Odometer reading 300...1000 km)

No full load (Odometer reading 0...1000 km)

- Note the mileage after which the running-in check should be carried out.



NOTICE

Engine rpm is governed by the electronic engine management system until the vehicle has undergone its running-in check. The authorised BMW Motorrad dealer deactivates this rpm governing function when the motorcycle is brought in for its running-in check.◀



Mileage until the running-in check

500...1200 km



Engine-rpm governing until the running-in check

max 9000 min⁻¹

Brake pads

New brake pads have to bed down before they can achieve their optimum friction levels. You can compensate for this initial reduction in braking efficiency by exerting greater pressure on the levers.



WARNING

New brake pads

Longer stopping distance, risk of accident

- Apply the brakes in good time.◀

Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to achieve maximum grip.



WARNING


New tyres losing grip on wet roads and at extreme bank angles

Risk of accident

- Ride carefully and avoid extremely sharp inclines.◀

Shifting gear

Gearshift light

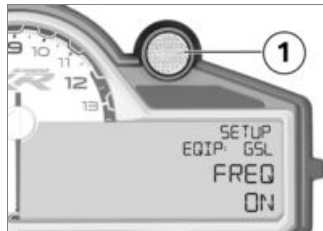

Gearshift light **1** shows the rider the engine-speed thresholds for shifting gear.

Shift speed

When the motorcycle is on the move, gearshift light **1** indicates the engine speed at which the rider should upshift.

- Gearshift light flashes at preset frequency: approaching upshift rpm.

- Gearshift light goes out: the engine has reached the ideal speed for an upshift.

The engine-speed thresholds and the way in which the gearshift light indicates the various states can be customised in the **SETUP EQUIPMENT** sub-menu.

Shift assistant Pro

- with shift assistant Pro^{OE}

Requirement

The shift assistant assists upshifts and downshifts without the rider having to pull the clutch. This is not an automatic-shift system. The rider is the most important part of the system and decides when to shift gears.

Requirement

The twistgrip has to be turned to open the throttle for upshifts.

Requirement

The twistgrip has to be turned to close the throttle for downshifts.



NOTICE

See the section entitled "Engineering details" for more information on the Pro shift assistant.◀



NOTICE

Whenever the Pro shift assistant shifts gears, cruise control is automatically disengaged for safety reasons.◀

- To engage a gear from neutral, pull the clutch and operate the shift lever.
- To shift into neutral, pull the clutch and operate the shift lever.



- To shift gears while riding, operate the shift lever without pulling the clutch.
- » Sensor **1** on the selector rod registers the shift request and triggers shift assistance.
- » When riding at a steady speed in a low gear at high engine rpm, an attempt to shift gear without pulling the clutch can cause a severe load-change reaction. BMW Motorrad recommends disengaging the clutch for shifts in these circumstances. It is advisable to avoid using the shift assistant at engine speeds close to the

- limits at which the governor cuts in to limit engine rpm.
- » Shift assistance is not available in the following situations:
- With clutch lever pulled.
 - Gearshift lever not in initial setting.
 - Upshift request with throttle grip closed in coasting overrun mode.
 - After a gearshift, you must fully release the shift lever before another gearshift with the shift assistant can take place.

Brakes

How can stopping distance be minimised?

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the vehicle decelerates, the more load is shifted to the front wheel. The

higher the wheel load, the more braking force can be transmitted without the wheel locking. To optimise stopping distance, apply the front brakes rapidly and keep on increasing the force you apply to the brake lever. This makes the best possible use of the dynamic increase in load at the front wheel. Remember to pull the clutch at the same time. BMW Motorrad ABS prevents the front wheel from locking up. In the "panic braking situations" that are trained so frequently, braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers; under these circumstances, the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road. In the absence of load on the wheel the ABS

has to intervene to prevent the front wheel from locking even if the brakes are applied only very lightly. This leads to a reduced braking effect.

Hazard braking

– with ABS Pro^{OE}

If you brake sharply from a speed in excess of 50 km/h, the brake light flashes rapidly as an additional warning for road users behind you.

The hazard warning lights system switches on if you brake to below 15 km/h in this process. The hazard warning lights system automatically switches off again from a speed of 20 km/h.

Descending mountain passes

WARNING

Braking only with the rear brake on mountain descents

Brake fade, destruction of the brakes due to overheating

- Use both front and rear brakes, and make use of the engine's braking effect as well.◀

Wet and dirty brakes

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency.

Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.

- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- Riding on dirt-covered surfaces or off-road.

WARNING

Wetness and dirt result in diminished braking efficiency

Risk of accident

- Apply the brakes lightly while riding to remove wetness and dirt, or dismount and clean the brakes.
- Think ahead and brake in good time until full braking efficiency is restored.◀

ABS Pro

- with ABS Pro^{OE}

Physical limits applicable to motorcycling

WARNING

Braking when cornering

Risk of crash despite ABS Pro

- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.
- Do not take risks that would negate the additional safety offered by this system.◀

ABS Pro is available in all riding modes. Assistance varies, depending on the riding mode selected and decreases in 3 stages from RAIN to DYNAMIC PRO.

Assistance by ABS Pro

- RAIN and ROAD: Maximum assistance.
- DYNAMIC: less assistance.
- DYNAMIC PRO: slight assistance.

Possibility of a fall not precluded

Although ABS Pro provides the rider with valuable assistance and constitutes a huge advance in safety for braking with the motorcycle banked for cornering, it cannot under any circumstances be considered as redefining the physical limits that apply to motorcycling. It is still possible for these limits to be overshoot due to misjudgement or rider error. In extreme cases this can result in a crash.

Use on public roads

ABS Pro helps make the motorcycle even safer for riding on public roads. When the brakes are applied because of an unforeseen hazard when the motorcycle is banked for cornering, within the physical limits that apply to motorcycling the system

prevents the wheels from locking and skidding away.



NOTICE

ABS Pro was not developed to enhance individual braking performance with the motorcycle banked into corners in situations approaching the limits of performance.◀

Parking your motorcycle

Side stand

- Switch off the engine.
- On a gradient, the motorcycle should always face uphill; select 1st gear.



ATTENTION

Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm.◀
- Extend the side stand and prop the motorcycle on the stand.



ATTENTION

Additional weight placing strain on the side stand

Risk of damage to parts if vehicle topples

- Do not sit or lean on the vehicle while it is propped on the side stand.◀
- If the camber of the roadway permits, turn the handlebars all the way to the left.

Centre stand

– with centre stand^{OE}

- Switch off the engine.



ATTENTION

Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm. ◀



ATTENTION

Centre stand folds in due to sharp movements

Risk of damage to parts if vehicle topples

- Do not lean or sit on the vehicle with the centre stand extended. ◀
- Extend the centre stand and lift the motorcycle onto the stand.
- On a gradient, the motorcycle should always face uphill; select 1st gear.

Refuelling

Fuel grade

Requirement

For optimum fuel consumption, fuel should be sulphur-free or with the lowest sulphur content possible.



ATTENTION

Engine operation with leaded fuel

Damage to catalytic converter

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives (e.g. manganese or iron). ◀
- You can run the engine on fuel with a maximum ethanol content of 10 %, i.e. E10.



Recommended fuel grade

Super Plus, unleaded (max.
10 % ethanol, E10)
98 ROZ/RON
91 AKI

Refuelling



WARNING

Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank. ◀



ATTENTION

Component damage

Component damage caused by overfilled fuel tank

- Overfilling the fuel tank will cause excess fuel to penetrate

the carbon canister and cause component damage.

- Fill the fuel tank up to the lower edge of the filler neck only.◀




ATTENTION

Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.◀
- Make sure the ground is level and firm and place the motorcycle on its side stand.

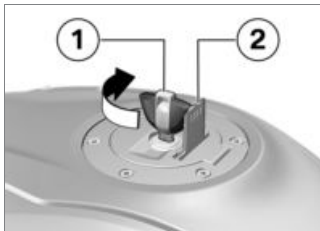

- Open the protective cap **2**.
- Use ignition key **1** to unlock fuel filler cap by turning it clockwise, and flip the cap open.



- Refuel with fuel of the grade stated above; do not fill the

tank past the bottom edge of the filler neck.



NOTICE

When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, as otherwise the new level will not be registered and the FUEL ! warning indicating that the level is down to reserve will not be switched off.◀



 
NOTICE

The “usable fuel capacity” specified in the technical data is the quantity that the fuel tank could hold if it had been run dry and the engine had cut out due to a lack of fuel.◀



Usable fuel capacity

approx. 20 l



Fuel reserve

approx. 4 l

- Press the fuel tank cap down firmly to close.
- Remove the ignition key and close the protective cap.

Securing motorcycle for transportation

- Make sure that all components that might come into contact with straps used to secure the motorcycle are adequately protected against scratching. Use adhesive tape or soft cloths, for example, for this purpose.



ATTENTION

Vehicle topples to side when being lifted on to stand

Risk of damage to parts if vehicle topples

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.◀
- Push the motorcycle onto the transportation flat and hold it in position: do not place it on the side stand.



ATTENTION

Trapping of components

Component damage

- Do not trap components such as brake lines or cable legs.◀
- At the front, loop a strap over the bottom fork bridge on each side.
- Pull the straps down and tight.



- At the rear, secure the tensioning straps to the brackets of the rear footrest on both sides and tension them.
- Tighten all the straps uniformly; the vehicle's suspension should be compressed as tightly as possible front and rear.


On the race track

SETUP MENU	90
SETUP EQUIPMENT	94
LAPTIMER	97
RACE INFO	102
SETUP RACETRACK	108

SETUP MENU

Overview, SETUP MENU

- 1 Selecting submenu
( 91).
 - 2 SETUP EQUIPMENT
( 91)
Call up submenu.
 - 3 – with Dynamic Traction Control (DTC)^{OE}
SETUP RACETRACK
( 92)
Call up submenu.
 - 4 Exit SETUP MENU
Exiting SETUP mode
( 93).
- Solid line means: short-press the TRIP/INFO rocker switch.
 - Broken line means: long-press the TRIP/INFO rocker switch.

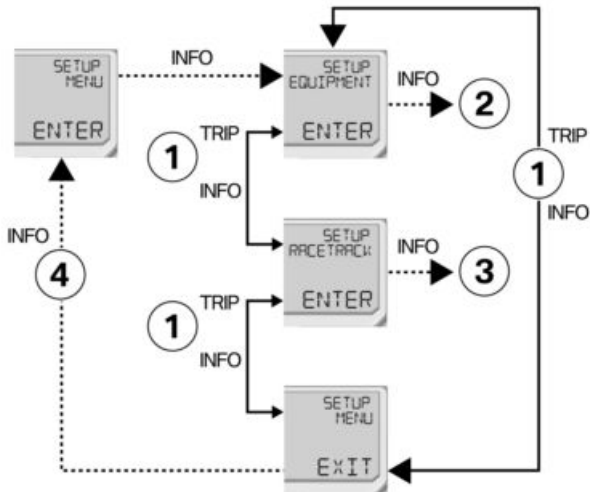


Selecting submenu

Requirement

The motorcycle is at a standstill.

Requirement

The on-board computer readings appear on the display.

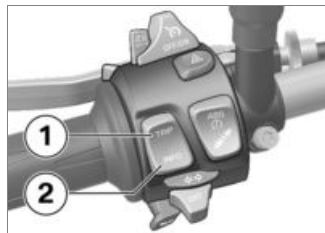

- Repeatedly short-press INFO **2** until SETUP MENU ENTER appears on the display.



NOTICE

If you scroll down too far, repeatedly short-press INFO **2** until

the menu returns to the start and then to the reading you want.◀

- Long-press INFO **2**.
» SETUP EQUIPMENT
ENTER appears as the first submenu.
- Repeatedly short-press TRIP **1** or INFO **2** until the submenu you want appears on the display.
- Long-press INFO **2** to call up the submenu you want.

Each time INFO **2** is pressed the possible parameters are shown in the sequence described below; each time TRIP **1** is pressed they are shown in reverse sequence.

SETUP EQUIPMENT

- with alarm system (DWA)^{OE}
- Automatically activate anti-theft alarm function when the ignition is switched off
DWA AUTO ON or leave the

automatic function switched off
DWA AUTO OFF.◀

- Set the time CLOCK TIME.
- Adjust display brightness
DISP BRIGHT.
- Switch-on speed for gearshift light
GSL ON-RPM (Gear Shift Light)
- Switch-off speed for gearshift light
GSL OFF-RPM
- Gearshift-light brightness
GSL BRIGHT
- Gearshift light flash frequency
GSL FREQ
- with daytime riding light^{OE}
- Activate automatic daytime riding light
DRL AUTO ON or manual daytime riding light
DRL AUTO OFF.◀
- with preparation for navigation system^{OE}
- with navigation system^{OA}
- Show time from global positioning system
GPS TIME ON or time

from on-board computer
GPS TIME OFF.<

- Open the submenu for changing units for the speed indicator, odometer display, range display, temperature display, average consumption display and time display
SETUP EQIP:UNITS
ENTER.<

SETUP EQIP:UNITS

- Change unit of measure for speed: UNIT SPEED KM/H or UNIT SPEED MPH
- Change unit for odometer: UNIT ODO KM or UNIT ODO MLS
- Change unit of measure for temperature: UNIT TEMP DEG: C or UNIT TEMP DEG: F
- Change unit of measure for average consumption: UNIT CONS L/100, UNIT CONS MPG: US,

UNIT CONS MPG: UK or
UNIT CONS KM/L

- Set 24-hour or 12-hour mode for clock: UNIT CLOCK 24 or UNIT CLOCK 12

SETUP RACETRACK


- with Dynamic Traction Control (DTC)^{OE}
- Set LAPTMR readings:
Current lap LAPTMR RUN, time required for preceding lap LAPTMR LAST, best lap LAPTMR BEST, total of all lap times and lap distances logged in memory LAPTMR TOTAL, best-ever lap LAPTMR BEST-EVER<
- with Dynamic Traction Control (DTC)^{OE}
- Display-freeze period for the most recent lap time LAPTMR HOLD<

- with Dynamic Traction Control (DTC)^{OE}
- Debounce time (waiting time before a new lap can be started) of the headlight-flasher button for LAPTMR LAPTMR DEB-TM in seconds.<
- with Dynamic Traction Control (DTC)^{OE}
- Change the headlight-flasher button to trigger lap timing. LAPTMR TRIG AUTO: Trigger by headlight-flasher button or infrared receiver; LAPTMR TRIG MANUAL: Trigger by headlight-flasher button only; LAPTMR TRIG EXTERN: Trigger by infrared receiver only.<


Setting parameters

Requirement

Parameter appears on the display.

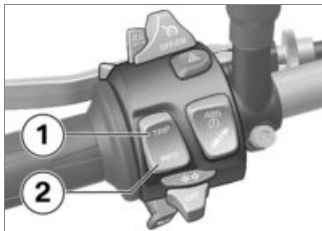

Exiting SETUP mode

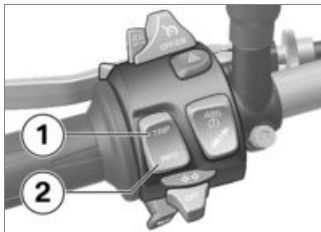

- Press and hold down INFO **2** until the parameter starts to flash.
 - Repeatedly short-press TRIP **1** or INFO **2** until the value you want appears on the display.
- When the value you want is shown:
- Press and hold down INFO **2** until the value stops flashing.
 - » The value is saved.

- Press and hold down TRIP **1** until the multifunction display switches to the default display mode.
- » A value that is still flashing will be saved.
- Alternatively: Repeatedly press TRIP **1** or INFO **2** until SETUP ... EXIT appears in the submenu.
- Long-press INFO **2** to exit the submenu.
- » SETUP ... ENTER appears on the display.

- Repeatedly press TRIP **1** or INFO **2** until SETUP MENU EXIT appears on the display.
- Long-press INFO **2** to exit the SETUP MENU.
- » SETUP MENU ENTER appears on the display.

SETUP EQUIPMENT

Display brightness



You can set display brightness to any of five levels.

Range of values

- 1, 2, 3, 4, 5
- Factory setting: 5

Engine speed for gearshift light ON



Switch-on rpm setting for the gearshift light.

Range of values

- 7000, 8000, 9000, 9500, 10000, 10500, 11000
- Factory setting: 7000
- You can select only engine speeds that are lower than the gearshift light OFF speed.

Engine speed for gearshift light OFF



Switch-off rpm setting for the gearshift light.

Range of values

- 8000, 9000, 9500, 10000, 10500, 11000, 13500
- Factory setting: 13500
- You can select only engine speeds that are higher than the gearshift light ON speed.

Shift-light brightness



Setting for gearshift-light brightness as a percentage of maximum brightness.

The gearshift light remains on while brightness is being adjusted and immediately adjusts to the selected brightness setting.

Range of values

- 20, 30, 40, ... 100
- Factory setting: 100

Shift-light flash frequency



Setting for the frequency at which the gearshift light flashes, shown in Hz (1/s).

Range of values

- ON, 4, 8
- Factory setting: 4
- If you select ON the gearshift light comes on and stays lit without flashing.
- The gearshift light slow-flashes if you select 4.
- The gearshift light quick-flashes if you select 8.

Automatic daytime riding light

- with daytime riding light^{OE}



You can switch the automatic function for the daytime riding light on or off.

Range of values

- OFF, ON
- Factory setting: OFF

GPS time

- with preparation for navigation system^{OE}
- with navigation system^{OA}




Select time: You can set this function to show either the time from the global positioning system or the time from the on-board computer.

Range of values

- OFF, ON
- Factory setting: OFF

LAPTIMER

Multifunction display

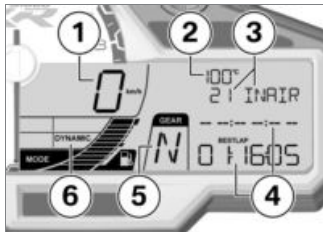

- 1 Speed
- 2 Coolant temperature
- 3 Intake-air temperature

- 4 LAPTIMER
The readings in these lines can be changed by the rider.

Individualise the LAPTIMER (➡ 99).
LAPTIMER display layout (➡ 108)

As shown:

LASTLAP: The time for the preceding lap
BESTLAP: The fastest of the laps currently logged in memory

- 5 Gear indicator
- 6 Riding mode (➡ 56)

Labels for the values shown on the display

The following times can be displayed in the third line:

- Time for the preceding lap, labelled "LASTLAP"
- Running time for the current lap

The following times can be displayed in the fourth line:


- Fastest lap saved, labelled "BESTLAP"
- All-time best lap, no label
- Running time for the current lap

The possible combinations are described on page (➡ 108).


At the start of each new lap the time for the preceding lap is shown briefly before the display switches to the running time of the current lap. The length of this freeze period can be set as described on page (➡ 110).

Overview, LAPTIMER

- 1 Pause/resume timing. (|||➡ 100)
 - 2 Starting timing (|||➡ 99).
 - 3 Individualise the LAPTIMER (|||➡ 99).
- Solid line means: short-press the TRIP/INFO rocker switch.
 - - Broken line means: long-press the TRIP/INFO rocker switch.

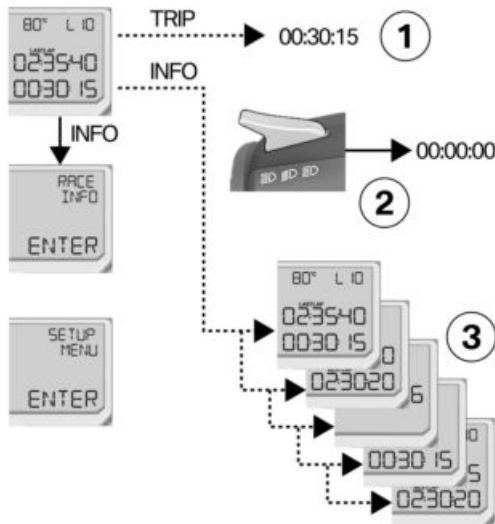

Individualising LAPTIMER

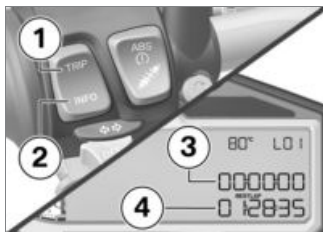

- Activating default reading (107).
- » The odometer reading (ODO) appears on the display.
- Short-press INFO **2**.
- » The LAPTIMER is called up and shows in the factory settings RUN **3** and BESTLAP **4**.
- If you want to change the content of lines **3** and **4** in the LAPTIMER, repeatedly long-press INFO **2** until lines **3** and **4** show the readings you want.

- » Your chosen LAPTIMER display layout is accepted and saved in memory.
- » LAPTIMER display layout (108)

Starting timing Requirement

The LAPTIMER is called up.



- Press button **1** to start timing.



NOTICE

The engine has to be running and the vehicle moving in order

for the headlight-flasher signal to be detected.◀

- » Timing RUN **2** is running.
- Every time you cross the start/finish line, press button **1** again to start timing for the next lap.
- » The data of the preceding lap are written into memory.
- » RUN **2** starts again at 00:00:00.
- » Timing continues even if you exit the display mode. In the other modes, however, timing of another lap can be started only by an external signal.

Infrared receiver

An infrared signal provides a convenient way of operating the LAPTIMER. In these circumstances, note the following:

- The infrared receiver available as an optional accessory has to be connected to the plug for optional accessories located

underneath the right side panel (► 177).

- In SETUP RACETRACK, the LAPTIMER trigger mode has to be set to LPTM TRIG AUTO or LPTM TRIG EXTERN (► 110).

The headlight flasher button can be used to operate the instrument panel even when the infrared receiver is installed. To do so you must have the LAPTIMER trigger mode set to LPTM TRIG AUTO or LPTM TRIG MANUAL.

A lap timeout can be defined to stop the receiver from registering completion of a lap prematurely in response to spurious signals (► 110). Signals received before this time elapses are ignored.

Interrupting timing

Requirement

Timing is running.




- Long-press TRIP **1** to interrupt timing.
- Long-press TRIP **1** again to resume timing.

Ending timing

Requirement

Timing is running.

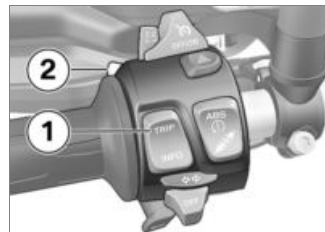

- Long-press TRIP **1** to pause timing.
- Short-press button **2**.
 - » The time shown on the display is deleted: -- : -- : -- .
 - Timing is ended.
 - No lap time is saved in memory.
- Short-press TRIP **1** to exit the lap timer.



NOTICE

If more laps are subsequently timed, lap numbering resumes. Numbering is not restarted at lap 1 unless you delete the


current timing session in the
RACE INFO display mode.◀

» ODO appears on the display.


RACE INFO

RACE INFO part 1

- 1 Delete the all-time best lap.
 - 2 Information about the current best lap
Succession of three status indicators
Information for a lap (104)
 - 3 Delete current best lap.
 - 4 Information about last lap
 - 5 Delete last lap.
 - 6 Information about other laps
Selecting saved lap (104).
Delete the lap (106).
- Solid line means: short-press the TRIP/INFO rocker switch.
- Broken line means: long-press the TRIP/INFO rocker switch.

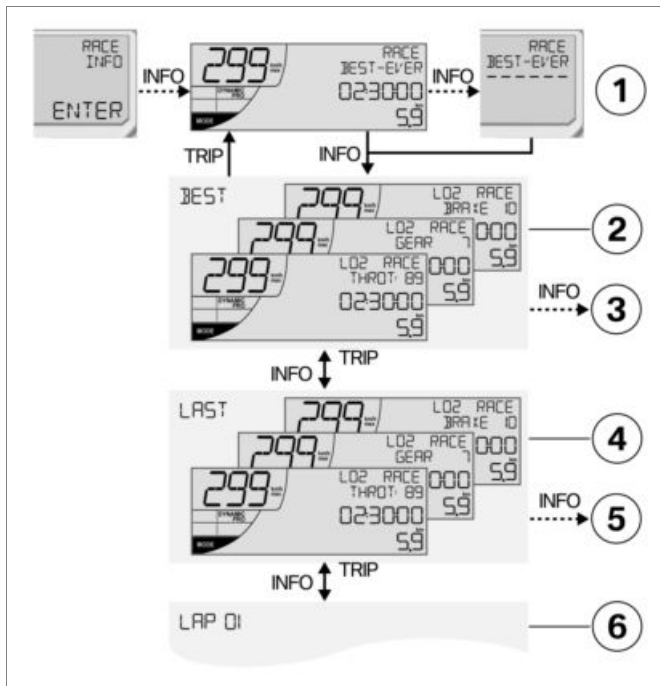

RACE INFO part 2

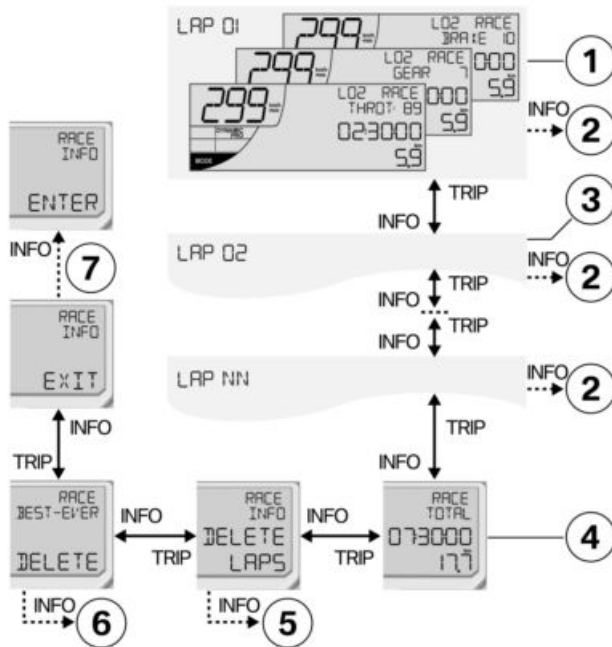

- 1** Information about lap 01
Selecting saved lap
( 104).
Information for a lap
( 104)
 - 2** Delete the lap ( 106).
 - 3** Information about lap 02
 - 4** Total of all lap times and distances
 - 5** Clearing all saved data
( 105).
 - 6** Delete the all-time best lap.
 - 7** Exit the RACE INFO
( 106).
Activating default reading
( 107).
- Solid line means: short-press the TRIP/INFO rocker switch.
- - Broken line means: long-press the TRIP/INFO rocker switch.


Selecting saved lap

Requirement

The motorcycle is at a standstill.

Requirement

RACE INFO appears on the display.

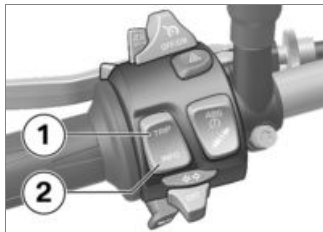

- Short-press TRIP **1** or INFO **2** to step through the laps stored in memory one by one.



NOTICE

If you pull away from rest in this mode the electronics switch


automatically to the LAPTIMER function. ◀

Each time INFO **2** is pressed the laps logged in memory and the functions are shown in the sequence described below; each time TRIP **1** is pressed they are shown in reverse sequence:

- Best-ever lap BEST-EVER
- Best lap logged in memory BEST
- Last lap logged in memory LAST
- All other laps logged in memory LAP 01 ... LAP 60
- Aggregate time and distance for all laps logged in memory TOTAL
- Delete lap data logged in memory DELETE LAPS.
- Delete the best-ever lap logged in memory BEST-EVER DELETE.

- Quit RACE INFO RACE INFO EXIT.

Information for a lap

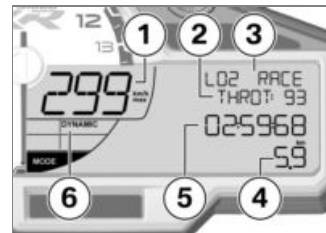


- 1** In sequence: Top speed (max), average speed (Ø) and lowest speed (min) on the lap currently displayed.
- 2** In sequence: Average throttle twistgrip position (THROT) in percent, percentage of lap ridden with brakes applied (BRAKE) and number of gearshifts (GEAR) on the lap currently displayed.

- 3** Lap for which the data on the display apply.
- 4** Distance ridden.
- 5** Time for the lap currently displayed.
- 6** The riding mode most commonly used is displayed continuously.

Clearing all saved data Requirement

RACE INFO appears on the display.

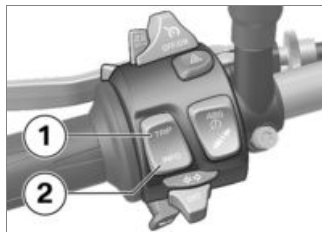

- Repeatedly short-press **TRIP 1** or **INFO 2** until **DELETE LAPS** appears on the display.
- Long-press **INFO 2** to delete all the logged data from memory.
 - » **BEST-EVER DELETE** appears on the display.
- Either short-press **INFO 2** to skip deleting the best-ever lap time.
- Or long-press **INFO 2** to delete the data for the best-ever lap time.
 - » **BEST-EVER** is deleted:
-- : -- : --

» **RACE INFO EXIT** appears on the display.

All-time best lap

The all-time best lap (**BEST-EVER**) is the fastest of all timed laps and is updated as soon as a faster lap is timed.

The best-ever lap remains stored in memory even if the timed laps are deleted. This means that other races can subsequently be timed and the lap times of those races compared with the best-ever lap from earlier races.


The best-ever lap can also be deleted from memory.

If the best-ever lap is from a race timed in the past, it is accompanied on the display by the appropriate lap number. If the best-ever lap shows without a lap number, this lack of a lap number indicates that the time is from a race timed in the past but subsequently deleted from memory.

Delete the lap

Requirement

RACE INFO appears on the display.

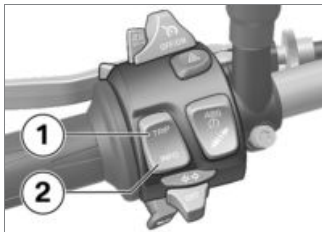


- Repeatedly short-press TRIP **1** or INFO **2** until the lap you want to delete appears on the display.
- Long-press INFO **2** to delete the lap.
- » When a logged lap has been deleted from memory it is superseded as follows:
 - BEST: The lap that was the second-best time until the best

time was deleted becomes the new best lap.

- LAST: The lap that was the preceding lap until the lap was deleted becomes the new last lap.
- » When a random lap has been deleted the following is taken into account:
 - Total time is reduced by the time for the lap you deleted.
 - Total distance is reduced by the distance for the lap you deleted.
 - The numbering of the remaining laps remains unchanged.


Exiting RACE INFO

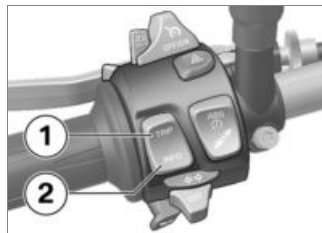

- Repeatedly short-press TRIP **1** or INFO **2** until RACE INFO EXIT appears on the display.
- Long-press INFO **2** to exit RACE INFO.
- » The readings already recorded remain saved in memory.

Activating default reading

» ODO appears on the display.

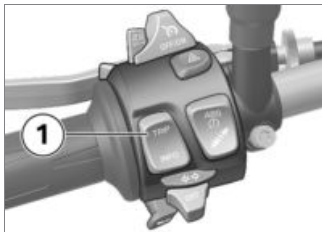

- Long-press TRIP 1.



NOTICE

Regardless of what is shown on the multifunction display at any given time, pressing and holding TRIP 1 always calls up the default layout with the odometer reading (ODO).

The only exception is the following:


LAPTIMER with timing in progress/paused: Long-pressing TRIP 1 pauses or resumes timing, as applicable.◀

SETUP RACETRACK

– with Dynamic Traction Control (DTC)^{OE}

LAPTIMER display layout

There is a choice of six LAP-TIMER display layouts.

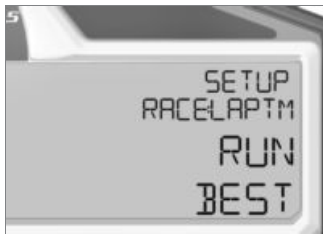

Layout 1 (factory setting)

Line 3 shows the running time for the current lap, the best lap currently logged in memory is shown in line 4.



Version 2

Line 3 shows the time recorded for the preceding lap, the running time for the current lap is shown in line 4.



Version 3

Line 3 shows the time needed for the preceding lap, the best lap currently logged in memory is shown in line 4.



Version 4

Line 3 shows the running time for the current lap, the total time for all the laps currently logged in memory is shown in line 4.



Version 5


Line 3 shows the running time for the current lap, the all-time best lap (105) is shown in line 4.



Version 6

Line 3 is blank, line 4 shows the running time for the current lap.

Display-freeze period for the most recent time

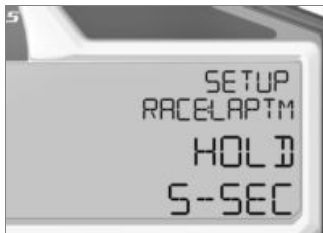

Setting for HOLD time in seconds.

After the start of a new lap the time for the preceding lap remains visible for this preset HOLD time. When this hold time expires the readout switches back to the running time for the current lap.

Range of values

- OFF, 5, 10, 15, ... 30
- Factory setting: 5

Debounce time for starting each new lap



You can set the minimum time that must elapse from when the first signal is received until a second signal will be accepted.

- Within this debounce time the headlight flasher can be used without it triggering the signal for a new lap.
- When an infrared receiver is being used this prevents the signals from two or more transmitters in close proximity from being accepted for processing.

Range of values

- OFF, 10, 30, 45, 60
- Factory setting: 10

LAPTIMER trigger mode



There are the various options for starting lap timing.

Range of values

- AUTO, EXTERN, MANUAL
- Factory setting: AUTO
- AUTO: Pressing the headlight flasher button and a signal from the lap trigger are both accepted as the trigger source.

- EXTERN: Only a signal from the lap trigger is accepted as the trigger source.
- MANUAL: Only pressing the headlight flasher button is accepted as the trigger source.

Engineering details

General instructions.....	114
Anti-lock brake system (ABS)	114
Dynamic Traction Control (DTC)	117
Electronic Suspension Adjustment (ESA)	118
Riding mode	119
Riding mode RAIN	120
Riding mode ROAD	121
Riding mode DYNAMIC	122
Riding mode DYNAMIC PRO	123
Deactivatable suspension and running-gear control systems	124
Shift assistant Pro	125

General instructions

To find out more about engineering, go to:

bmw-motorrad.com/technology

Anti-lock brake system (ABS)

Partially integral brakes

Your motorcycle is equipped with partially integral brakes. Both front and rear brakes are applied when you pull the handbrake lever. The footbrake lever acts only on the rear brake.



ATTENTION

Attempted burn-out despite Integral braking function

Damage to rear wheel brake and clutch (integral pressure build-up is supported even when the ABS is switched off)

- Do not burn out tyres. ◀

How does ABS work?

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have much lower coefficients of friction than a clean, dry asphalt surface. The lower the coefficient of friction, the longer the braking distance.

If the rider increases braking pressure to the extent that braking force exceeds the maximum transferable limit, the wheels start to lock and the vehicle loses its directional stability; a fall is imminent. Before this situation can occur, ABS intervenes and adapts braking pressure to the maximum transferable braking force, so the wheels continue to turn and directional stability is maintained irrespective of the condition of the road surface.

What are the effects of surface irregularities?

Humps and surface irregularities can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to the road can drop to zero. If the brakes are applied under these circumstances the ABS has to reduce braking force to ensure that directional stability is maintained when the wheels regain contact with the road surface. At this instant the ABS must assume an extremely low coefficient of friction, so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability. As soon as it registers the actual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

What feedback does the rider receive from the BMW Motorrad Race ABS?

If the ABS has to reduce braking force on account of the circumstances described above, vibration is perceptible through the handbrake lever.

When the handbrake lever is pulled, brake pressure is also built up at the rear wheel by the integral function. If the brake pedal is depressed after the handbrake lever is pulled, the brake pressure built up beforehand is perceptible as counter-pressure sooner than is the case when the brake pedal is depressed either before or at the same time as the brake lever is pulled.

Rear wheel lift

Even under severe braking, a high level of tyre grip can mean that the front wheel does not lock up until very late, if at all. Consequently, ABS does not intervene until very late, if at all. Under these circumstances the rear wheel can lift off the ground, and the outcome can be a high-siding situation in which the motorcycle can flip over.



WARNING

Rear wheel lift due to severe braking

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground. ◀

Special situations

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy period the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-diagnosis has to complete before fault messages can be issued. In addition to problems with the BMW Motorrad Race ABS, exceptional riding conditions can lead to a fault message being issued.

Exceptional riding conditions:

- Heating up with the motorcycle on an auxiliary stand, in neutral or with a gear engaged.
- Rear wheel locked by the engine brake for a lengthy period, for example while descending steep gradients.

If a fault message is issued on account of exceptional riding conditions, you can reactivate the ABS function by switching the ignition off and on again.

What significance devolves on regular maintenance?



WARNING

Brake system not regularly serviced.

Risk of accident

- In order to ensure that the BMW Motorrad Race ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals.◀

Reserves for safety

The potentially shorter braking distances which BMW Motorrad Race ABS permits must not be used as an excuse for careless riding. ABS is primarily a means of ensuring a safety margin in genuine emergencies.

Take care when cornering! When you apply the brakes on a corner, the motorcycle's weight and momentum take over and even BMW Motorrad Race ABS is unable to counteract their effects.

Evolution of Race ABS to ABS Pro

– with ABS Pro^{OE}

Until now, the BMW Motorrad Race ABS helped ensure a very high degree of safety for braking with the motorcycle upright and travelling in a straight line. Now ABS Pro offers enhanced safety for braking in corners as well.

ABS Pro prevents the wheels from locking even under sharp braking. ABS Pro reduces abrupt changes in steering force, particularly in panic-braking situations, counteracting the vehicle's otherwise natural but undesirable tendency to straighten up.

ABS intervention

Technically speaking, depending on the riding situation ABS Pro adapts ABS intervention to the motorcycle's bank angle. Signals for rate of roll and rate of yaw and lateral acceleration are used to calculate bank angle. These signals come from the angular rate sensor, an integral component of Dynamic Traction Control DTC and Dynamic ESA.

As the motorcycle is heeled over more and more as it banks into a corner, an increasingly strict limit is imposed on the brake-pressure gradient for the start of

brake application. This slows the build-up of brake pressure to a corresponding degree. Additionally, pressure modulation is more uniform across the range of ABS intervention.

Advantages for the rider

The advantages of ABS Pro for the rider are sensitive response and high braking and directional stability combined with best-case deceleration of the motorcycle, even when cornering.

Dynamic Traction Control (DTC)

How does traction control work?

Traction control is available in two versions

- **without** provision for the bank angle: Automatic Stability Control ASC

- ASC is a rudimentary function intended to prevent falls.
- **with** provision for bank angle: Dynamic Traction Control DTC
- DTC regulation is more delicate and more comfortable thanks to the additional bank angle and acceleration information.

The traction control system compares the speed of rotation at the circumferences of the front wheel and the rear wheel. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine management system intervenes and adapts engine torque accordingly.



WARNING

Risky riding

Risk of accident despite DTC

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adapting his or her style of riding accordingly.
- Do not take risks that would negate the additional safety offered by this system.◀

Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible reduction in acceleration out of very tight bends.

The speeds of the front and rear wheels are compared and DTC, unlike ASC, also takes the bank angle into account in processing data to detect the rear wheel's incipient tendency to spin or slip sideways.

- with Dynamic Traction Control (DTC)^{OE}

If the electronic processor receives values for the bank angle that it considers implausible over a lengthy period, a dummy value is used for the bank angle or the DTC function is switched off.

Under these circumstances the indicator for a DTC fault shows. Self-diagnosis has to complete before fault messages can be issued.

The BMW Motorrad Traction Control can shut down automatically under the exceptional riding conditions outlined below.

Exceptional riding conditions:

- Riding for a lengthy period with the front wheel lifted off the ground (wheelie).
- Rear wheel rotating with the vehicle held stationary by applying the front brake (burn-out).

- Heating up with the motorcycle on an auxiliary stand, in neutral or with a gear engaged.

If the encoding plug for the DYNAMIC PRO riding mode is not inserted, accelerating the motorcycle to a defined minimum speed after switching the ignition off and then on again reactivates the DTC.



Minimum speed for activation of DTC

min 10 km/h

If the front wheel lifts clear of the ground under severe acceleration, the ASC or DTC reduces engine torque in the RAIN and ROAD riding modes until the front wheel regains contact with the ground.

Wheelie assistance is deactivated in the DYNAMIC PRO riding mode.

Under these circumstances, BMW Motorrad recommends rolling the throttle slightly closed so as to restore stability with the least possible delay.

When riding on a slippery surface, never snap the throttle twistgrip fully closed without pulling the clutch at the same time. Engine braking torque can cause the rear wheel to skid, with a corresponding loss of stability. The BMW Motorrad DTC is unable to control a situation of this nature.

Electronic Suspension Adjustment (ESA)

- with Dynamic ESA^{OE}

Possible settings

Dynamic ESA enables you to adjust your motorcycle's suspension to suit the load and the surface conditions.

By interpreting ride height sensor signals, Dynamic ESA detects movements in the chassis and suspension and responds by adjusting the damping valves. The chassis and suspension will thus be adapted to the characteristics of the terrain.

The DYNAMIC setting enables you to set the damping to a more sporty setup than that offered by ROAD, which is the basic setting.

The suspension setting depends on the riding mode selected. The damping defined by the riding mode can be changed by the rider.

If the coding plug is not fitted, the basic setting specified by the riding mode will be set after each mode change. If the coding plug is fitted, the driver's adjustments are retained for all riding modes.

The suspension setting depends on the riding mode selected. The damping defined by the riding mode can be changed by the rider.

The basic setting specified by the riding mode will be set after each mode change.

Riding mode

Selection

Riding mode selection

Different riding modes enable the motorcycle's characteristics to adapt to the prevailing weather conditions, the road and traffic, and the rider's style of riding:

RAIN
ROAD (standard mode)

– with riding modes Pro^{OE}
DYNAMIC
DYNAMIC PRO (only with coding plug inserted)

Each of these modes produces perceptible differences in the way the motorcycle behaves. ABS and/or ASC/DTC can be switched off in each riding mode. The explanations below apply with the corresponding suspension and running-gear control systems switched on. The mode last selected is automatically reactivated after the ignition has been switched off and then on again.

The basic rule is: the sportier the riding mode you select, the more directly can you tap into the engine's reserves of power. At the same time, the level of rider assistance that the ABS and ASC/DTC systems offer decreases accordingly.

The RAIN, ROAD and DYNAMIC riding modes are set up for riding with standard tyres recommended by BMW Motorrad.

The DYNAMIC PRO riding mode is for tyres with very good grip, surfaces with a very high level of grip, and one-up riding. Consequently, you must always bear the following in mind with regard to your selection of a riding mode:

- The sportier the setting, the greater the challenge to your riding skill!
- It is the rider's responsibility to select the correct riding mode. For example, the DYNAMIC PRO riding mode is totally unsuitable for wet surfaces.

Mode changes

A changeover of the functions in the engine management system, the ABS and the ASC or, as applicable, the DTC systems while

riding is possible only in certain operating states:

- No drive torque at the rear wheel
- No brake pressure in the brake system.

One of the following preconditions has to be satisfied in order for this condition to be achieved:

- The vehicle is at a standstill with the ignition switched on.
- With the vehicle on the move, the throttle twistgrip must be turned back and the brake levers must be in the released positions.

The desired riding mode is initially preselected. The mode change does not take place until the control systems in question are all in the appropriate state. The selection menu does not disappear from the display until

the change of riding modes has completed.

Riding mode RAIN

Wet roads

The RAIN riding mode offers safety and directional stability on wet roads or roads with a similarly low coefficient of friction.

ABS

- The ABS always intervenes early enough to prevent as effectively as possible the wheels from locking and the rear wheel from lifting off the ground.
- Maximum assistance with integral pressure build-up when only the handbrake lever is pulled.
- ABS for the rear wheel is switched on.
- Rear-wheel lift detection is switched on. The rear wheel

should remain in contact with the ground at all times.

- with ABS Pro^{OE}

ABS Pro is fully available. The tendency of the motorcycle to straighten up when the brakes are applied with the machine banked for cornering is reduced to a minimum.

ASC

- The ASC intervenes early enough to prevent the rear wheel from spinning whenever possible. ASC offers maximum assistance.
- Front-wheel lift detection is ON and prevents the front wheel from lifting off the ground.

- with Dynamic Traction Control (DTC)^{OE}

DTC

- The DTC intervenes early enough to prevent the rear wheel from spinning whenever possible. DTC offers maximum assistance.
- Front-wheel lift detection is ON and prevents the front wheel from lifting off the ground.

- with Dynamic ESA^{OE}

Dynamic ESA

- The ROAD and DYNAMIC variants can be selected.
- Basic setting = ROAD

Throttle response

- Restrained: Power increase when you open the throttle is virtually linear, engine response is soft.
- The engine's maximum torque is not made available. The

torque curve for rain is imposed.

- Overrun cut-off is activated.
- The thrust acoustics are off.

Riding mode ROAD

Standard mode

The ROAD riding mode offers safety and directional stability on dry roads.

ABS

- The behaviour of the ABS is the same as in RAIN mode.
- The ABS always intervenes early enough to prevent as effectively as possible the wheels from locking and the rear wheel from lifting off the ground.
- Maximum assistance with integral pressure build-up when only the handbrake lever is pulled.
- ABS for the rear wheel is switched on.

- Rear-wheel lift detection is switched on. The rear wheel should remain in contact with the ground at all times.

- with ABS Pro^{OE}

ABS Pro is fully available. The tendency of the motorcycle to straighten up when the brakes are applied with the machine banked for cornering is reduced to a minimum.

ASC

- The ASC intervenes early enough to prevent the rear wheel from spinning whenever possible. However, ASC offers less assistance than in RAIN mode.
- Front-wheel lift detection is ON and prevents the front wheel from lifting off the ground.

- with Dynamic Traction Control (DTC)^{OE}

DTC

- The DTC intervenes later than in RAIN mode, so it is possible to induce slight drift when exiting corners.
- Front-wheel lift detection is ON and prevents the front wheel from lifting off the ground.

- with Dynamic ESA^{OE}

Dynamic ESA

- The ROAD and DYNAMIC variants can be selected.
- Basic setting = ROAD

Throttle response

- Engine response is optimum and direct.
- The engine's maximum torque is made available.
- Overrun cut-off is activated.
- The thrust acoustics are off.

Riding mode DYNAMIC

- with riding modes Pro^{OE}

Dynamic on dry roads

The DYNAMIC riding mode is suitable for sporty riding on dry roads.

ABS

- In this riding mode, the ABS intervenes later than in ROAD mode. The wheels are still prevented from locking.
- Lift detection for the rear wheel is reduced. The rear wheel can lift slightly clear of the ground.
- Assistance with integral pressure build-up is reduced.
- ABS for the rear wheel is switched on. Assistance is less than in the ROAD riding mode.
- ABS Pro is available. Assistance is less than in the ROAD riding mode.

DTC

- The DTC intervenes later than in ROAD mode, so it is possible to induce drift when exiting corners.
- Front-wheel lift detection is ON, but it offers less assistance. Agility comes before stability in the DYNAMIC riding mode, so slight wheelies are possible.
- with Dynamic ESA^{OE}

Dynamic ESA

- The ROAD and DYNAMIC variants can be selected.
- Basic setting = DYNAMIC

Throttle response

- Engine response is optimum and direct.
- The engine's maximum torque is made available.
- Overrun cut-off is activated.
- The thrust acoustics are on.

Riding mode DYNAMIC PRO

- with riding modes Pro^{OE}

Sporty one-up riding

DYNAMIC PRO is the sportiest riding mode. The DYNAMIC PRO mode cannot be activated unless the coding plug is inserted.

The DYNAMIC PRO riding mode was developed for situations in which the rider has an open view of the road ahead and the surroundings and is for riding on dry surfaces with the high level of grip generally encountered only on race tracks. Similarly, the assumption on which the parameter settings for this riding mode are based is that the motorcycle is fitted with tyres with a very high level of surface grip and is ridden one-up.

ABS

- In this riding mode, the ABS intervenes later than in DYNAMIC mode. The shortest braking distances can be achieved.
- Lift detection for the rear wheel provides only minimal assistance. The rear wheel can lift clear of the ground.
- Assistance with integral pressure build-up is reduced sooner than in the DYNAMIC riding mode.
- ABS for the rear wheel is switched on. Assistance is less than in the DYNAMIC riding mode.
- In the DYNAMIC PRO riding mode the ABS Pro functions have only minimal support.
- Note that deactivating the ABS means that the ABS remains switched off even after the ig-

dition has been switched off and then on again.

DTC

- The controller of the DTC system assumes that the vehicle is fitted with tyres with the maximum level of grip.
- DTC offers only very slight assistance.
- Slip is highest in the DYNAMIC PRO riding mode.
- Maximum acceleration is achieved.
- The DTC intervenes so late that lengthy drifts are possible.
- Front-wheel lift detection is deactivated. Agility comes before stability in this sporty riding mode, so any wheelies are possible. It is up to the rider to control wheelies and prevent the motorcycle from flipping over backwards in extreme cases.

- Note that deactivating the DTC means that the DTC remains switched off even after the ignition has been switched off and then on again.

- with Dynamic ESA^{OE}

Dynamic ESA

- The ROAD and DYNAMIC variants can be selected.
- Basic setting = DYNAMIC

Throttle response

- Engine response is optimum and direct.
- The engine's maximum torque is made available.
- Overrun cut-off is activated.
- The thrust acoustics are on.

Deactivatable suspension and running-gear control systems

Riding without ABS, ASC or DTC

ABS and ASC or, as applicable DTC can be switched off individually or together in all riding modes. Under these circumstances bear in mind the lack of assistance from the suspension and running-gear control systems:

ABS switched off

- The ABS indicator and warning light shows.
- ABS assistance is deactivated. Under these circumstances the front wheel can lock up.
- Assistance with integral pressure build-up is in accordance with the selected riding mode. Burn Outs are not permitted

even with the ABS switched off.

- ABS for the rear wheel is deactivated. Under these circumstances, the rear wheel can lock up.
- Rear-wheel lift detection is deactivated. The rear wheel can lift clear of the ground.
- with ABS Pro^{OE}
- ABS Pro is not available.

ASC switched off

- The ASC indicator and warning light shows.
- ASC assistance is deactivated. Any drifts are possible.
- Front-wheel lift detection is deactivated. Any wheelies are possible. There is a possibility of the motorcycle flipping over backwards.

– with Dynamic Traction Control (DTC)^{OE}

DTC switched off

- The DTC indicator light lights up.
- DTC assistance is deactivated. Any drifts are possible.
- Front-wheel lift detection is deactivated. Any wheelies are possible. There is a possibility of the motorcycle flipping over backwards.

Shift assistant Pro

– with shift assistant Pro^{OE}

Your vehicle is equipped with a shift assistant, a system originally developed for racing and now adapted for riding on public roads. It permits upshifts and downshifts without declutching in virtually all load and rpm ranges.

Advantages

- 70-80 % of all gearshifts on a trip can be done without using the clutch.
- Less relative movement between rider and passenger because the shift pauses are shorter.
- It is not necessary to close the throttle when upshifting under acceleration; the throttle valve remains open.
- When braking and downshifting (throttle valve closed), engine speed is automatically adjusted by blipping the throttle.
- Shift time is shorter than a gearshift with clutch actuation.

In order for the system to identify a request for a gearshift, the rider has to move the shift lever from its idle position in the desired direction against the force of the spring through a certain "over-travel" at ordinary speed or rap-

idly and keep the shift lever in this position until the gearshift is completed. It is not necessary to increase the force applied to the shift lever while shifting is in progress. Once the gearshift has completed the shift lever has to be fully released before another gearshift with the Pro shift assistant can take place. Keep the corresponding load condition (throttle grip position) constant before and during the gear shift for gear shifts using the shift assistant Pro. A change in the position of the throttle twistgrip during a gearshift can cause the function to abort and/or lead to a missed shift. The shift assistant Pro provides no assistance for the gear change if the rider de-clutches.

Downshifting

- Downshifting is assisted until maximum rpm for the target gear to be selected is reached.

- This prevents overrevving.

	Maximum engine speed
max 12000 min ⁻¹	

Upshifting

- Upshifting is assisted until idle rpm for the target gear to be selected is reached.
- This prevents the engine from dropping below idle speed.

	Idle speed
1250 min ⁻¹ (Engine at regular operating temperature)	

Maintenance

General instructions.....	128
Toolkit	128
Front-wheel stand	129
Rear-wheel stand	129
Engine oil	130
Brake system	131
Clutch	135
Coolant	136
Tyres	137
Rims and tyres.....	137
Wheels	138
Light source	147
Trim panel components	153
Jump-starting.....	155
Battery.....	156

Fuses	161
Diagnostic connector	162
Chain	163

General instructions


The Maintenance chapter describes straightforward procedures for checking and replacing certain wear parts.

Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your vehicle are listed in the section entitled "Technical data".

You will find information on more extensive maintenance and repair work in the repair instructions on DVD for your vehicle, which is available from your authorised BMW Motorrad dealer.

Some of the work calls for special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad dealer.

Toolkit

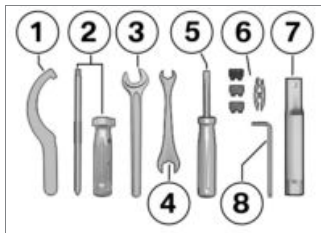

- 1** Hook wrench
 - without Dynamic ESA^{OE}
 - Adjusting spring preload for rear wheel (➡ 66).
- 2** Reversible screwdriver blade
Phillips PH1 and Torx T25
 - Remove the side panel (➡ 153).
 - Replacing bulbs for front and rear turn indicators (➡ 151).
- 3** Open-ended spanner
Width across flats 14

- 3**
 - Adjusting mirror arm (➡ 64).
 - Adjusting headlight beam throw (➡ 65).
- 4** Open-ended spanner
Width across flats 8/10
- 5** Reversible-blade screwdriver with star-head and plain tips
 - without Dynamic ESA^{OE}
 - Adjusting compression-stage damping for front wheel (➡ 68).
 - without Dynamic ESA^{OE}
 - Adjust the rebound-stage damping for front wheel (➡ 69).
 - without Dynamic ESA^{OE}
 - Adjusting rebound-stage damping for rear wheel (➡ 69).
- 6** Spare fuses with gripping clamp
Mini-fuses 4 A, 7.5 A and 10 A

- 7 Socket wrench
Width across flats 17
- 8 Torx wrench, T30
 - Removing battery
( 159).

Front-wheel stand

Fitting the front-wheel stand



ATTENTION

Use of the BMW Motorrad front wheel stand without accompanying use of centre stand or auxiliary stand

Risk of damage to parts if vehicle topples

- Place the motorcycle on its centre stand or another auxiliary stand before lifting the front wheel with the BMW Motorrad front-wheel stand.◀

- with centre stand^{OE}
 - Make sure the ground is level and firm and place the motorcycle on its centre stand.<
- without centre stand^{OE}
 - Place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
 - Fitting the rear-wheel stand ( 129).<



- The description of how to fit the front-wheel stand correctly

can be found in the instructions for the stand.

- BMW Motorrad offers an auxiliary stand suitable for every vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

Rear-wheel stand

Fitting the rear-wheel stand



- The description of how to fit the rear-wheel stand correctly will be found in the instructions for the stand.

- BMW Motorrad offers an auxiliary stand suitable for every vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

Engine oil

Checking engine oil level



ATTENTION

Misinterpretation of oil level reading, because oil level is temperature-dependent (the higher the temperature, the higher the oil level)


Engine damage

- Check the oil level only after a lengthy ride or when the engine is at operating temperature. ◀
- Make sure the engine is at operating temperature and hold the motorcycle upright.

- Allow the engine to idle for one minute.
- Switch off the ignition.



- Check the oil level in oil-level indicator **1**.

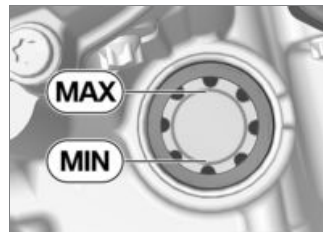

Engine oil, specified level

Between **MIN** and **MAX** mark



Engine oil, capacity

SAE 5W-40, API SJ / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil.



Engine oil, capacity

approx. 3.5 l (with filter change)

If the oil level is below the minimum mark:

- Topping up the engine oil (► 131).

If the oil level is above the maximum mark:

- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Topping up the engine oil

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Wipe the area around the oil filler neck clean.



- Remove cap **1** of the oil filler neck.



ATTENTION

Use of insufficient engine oil or too much engine oil

Engine damage

- Always make sure that the oil level is correct.◀
- Top up the engine oil to the specified level.
- Checking engine oil level (► 130).
- Install oil filler cap **1**.

Brake system

Checking function of brakes

- Operate the brake lever.
 - » The pressure point must be clearly perceptible.
- Press the footbrake lever.
 - » The pressure point must be clearly perceptible.

If pressure points are not clearly perceptible:



ATTENTION

Work on brake system not in compliance with correct procedure


Risk to operational reliability of the brake system

- Have all work on the brake system undertaken by trained and qualified specialists.◀
- Have the brakes checked by a specialist workshop, preferably


an authorised BMW Motorrad dealer.

Checking front brake pad thickness

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Turn the handlebars to the full-lock position.

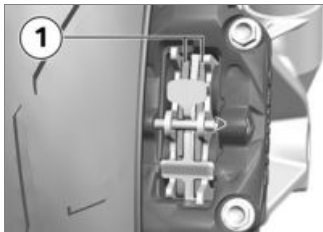

- Visually inspect the left and right brake pads to ascertain their thickness. Viewing direction: from the rear toward brake pads **1**.

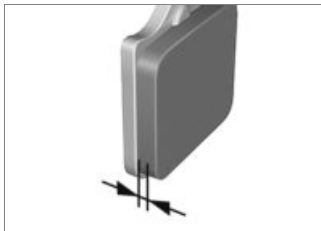

Brake-pad wear limit,
front

min 1.0 mm (Friction pad only,
without backing plate)

If the brake pads are worn:



WARNING

Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to

wear past the minimum permissible thickness. ◀

- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad dealer.
- If the brake pads installed are not genuine BMW Motorrad brake pads, it is absolutely essential to measure the thickness of the brake-pad carrier plates.



WARNING


Use of unsuitable brake pads

Failure of the brake system due to loss of the brake pads

- Use only brake pads with brake pad carrier plates of adequate thickness. ◀
- BMW Motorrad recommends installing only genuine BMW Motorrad brake pads.

Check rear brake pad thickness

- Make sure the ground is level and firm and place the motorcycle on its stand.

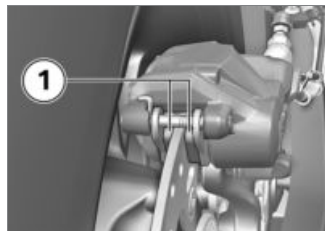

- Visually inspect the brake pads to ascertain their thickness. Viewing direction: from the rear toward brake pads **1**.



 Brake-pad wear limit, rear

min 1.0 mm (Friction pad only, without backing plate)

If the wear indicating mark is no longer visible:

WARNING

Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to

wear past the minimum permissible thickness.◀

- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Checking brake-fluid level, front brakes

WARNING

Not enough brake fluid in brake fluid reservoir

Considerably reduced braking power due to air in the brake system

- Check the brake-fluid level at regular intervals.◀

– with centre stand^{OE}

- Make sure the ground is level and firm and place the motorcycle on its centre stand.<

- without centre stand^{OE}
- Make sure the ground is level and firm and hold the motorcycle upright.◀
- Turn the handlebars to a position in which the brake fluid reservoir is horizontal.



- Check the brake fluid level in front reservoir **1**.

**NOTICE**

Wear of the brake pads causes the brake fluid level in the reservoir to sink.◀



Brake fluid level, front

Brake fluid, DOT4


It is impermissible for the brake fluid level to drop below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle upright)

If the brake fluid level drops below the permitted level:

- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Checking the brake-fluid level, rear brakes

- Make sure the ground is level and firm and hold the motorcycle upright.

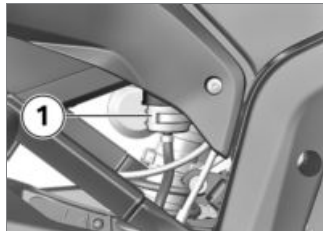

- Check the brake fluid level in rear reservoir **1**.

**NOTICE**

Wear of the brake pads causes the brake fluid level in the reservoir to sink.◀



Brake fluid level, rear

Brake fluid, DOT4

It is impermissible for the brake fluid level to drop below the MIN mark. (Brake-fluid reservoir horizontal, motorcycle upright)

If the brake fluid level drops below the permitted level:

**WARNING**

Not enough brake fluid in brake fluid reservoir

Considerably reduced braking power due to air in the brake system


- Check the brake-fluid level at regular intervals. ◀
- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Clutch**Checking clutch function**

- Pull the clutch lever.
 - » The pressure point must be clearly perceptible.

If the pressure point is not clearly perceptible:

- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

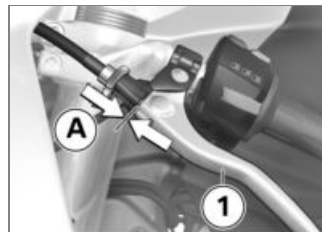Checking clutch-lever play

- Pull clutch lever **1** until resistance is perceptible.
- In this position, measure clutch play **A** between the handlebar fitting and the clutch lever.



Clutch-lever play

0.5...1.0 mm (at the handlebar fitting, with engine cold)

Clutch play is out of tolerance:

- Adjust the clutch-lever play (111 ➔ 136).

Adjust the clutch-lever play



- To increase clutch play: turn screw **2** in the tightening direction, i.e. into the handlebar fitting.
- To reduce clutch play: turn screw **2** in the loosening direction, i.e. out of the handlebar fitting.
- Checking clutch-lever play (111 ➔ 135).
- Repeat the steps in this procedure until clutch play is set correctly.


Coolant

Check coolant level

- Make sure the ground is level and firm and place the motorcycle on its stand.



- Check the coolant level in expansion tank **1**. Viewing direction: From in front toward the inside of the right side panel.

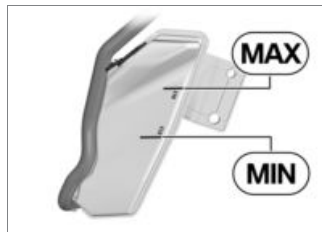

Coolant, specified level

Between MIN and MAX marks on the expansion tank (Engine cold)

If the coolant drops below the permitted level:

- Top up the coolant.

Top up coolant



- Open cap **1** of the expansion tank.
- Top up coolant to specified level. Use a funnel with filler adapter or hose.
- Check coolant level (1111111111 136).
- Close the cap of the expansion tank.

Tyres

Checking tyre pressure



WARNING

Incorrect tyre pressure

Impaired handling characteristics of the motorcycle, shorter useful tyre life

- Always check that the tyre pressures are correct. ◀



WARNING

Tendency of valve inserts to open by themselves at high riding speeds

Sudden loss of tyre pressure

- Install valve caps fitted with rubber sealing rings and tighten firmly. ◀
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Check tyre pressures against the data below.



Tyre pressure, front

2.5 bar



Tyre pressure, rear

2.9 bar

If tyre pressure is too low:

- Correct tyre pressure.

Rims and tyres

Checking rims

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Visually inspect the rims for defects.
- Have damaged rims inspected by a specialist workshop and replaced if necessary, preferably by an authorised BMW Motorrad dealer.

Checking tyre tread depth



WARNING

Riding with badly worn tyres

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before they wear to the minimum tread depth permitted by law.◀
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Measure the tyre tread depth in the main tread grooves with wear marks.



NOTICE

Wear indicators are built into the main profile grooves on each tyre. The tyre is worn out when the tyre tread has worn down to the level of the marks. The locations of the marks are indicated on the edge of the tyre, e.g.

by the letters TI, TWI or by an arrow.◀

If the tyre tread is worn to minimum:

- Replace tyre or tyres, as applicable.

Wheels

Tyre recommendation

For each size of tyre, BMW Motorrad tests and classifies as roadworthy certain makes. BMW Motorrad cannot assess the suitability or provide any guarantee of road safety for other tyres.

BMW Motorrad recommends using only tyres tested by BMW Motorrad.

Detailed information is available from your authorised BMW Motorrad dealer or in the internet at:

bmw-motorrad.com

Effect of wheel size on chassis and suspension control systems

Wheel size is very important as a parameter for the frame and suspension control systems ASC and DTC. In particular, the diameter and the width of a vehicle's wheels are programmed into the control unit and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control systems.


The sensor rings are essential for correct road-speed calculation, and they too must match the motorcycle's control systems and consequently cannot be changed.

If you decide that you would like to fit non-standard wheels to


your motorcycle, it is very important to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad dealer. In these cases, the data programmed into the control units has to be changed to suit the new wheel sizes.

Removing front wheel

- Place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Fitting the rear-wheel stand (► 129).
- with centre stand^{OE}
- Make sure the ground is level and firm and place the motorcycle on its centre stand.◀

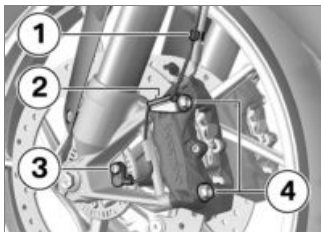

- Disengage the cable for the wheel-speed sensor from retaining clips **1** and **2**.
- Remove screw **3** and remove the wheel-speed sensor from its bore.
- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.
- Remove securing screws **4** of the left and right brake calipers.

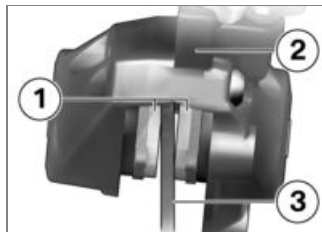

- Force the brake pads **1** slightly apart by rotational movement of the brake caliper **2** against brake disc **3**.



ATTENTION

Unwanted inward movement of the brake pads


Component damage on attempt to install the brake caliper or because brake pads have to be forced apart

- Do not operate the brakes with a brake caliper not correctly secured.◀

- Carefully pull the brake calipers back and out until clear of the brake discs.
- Lift the front of the motorcycle until the front wheel is clear of the ground, preferably using a BMW Motorrad front-wheel stand.
- Fitting the front-wheel stand (► 129).




- Slacken axle clamping screws **1**.

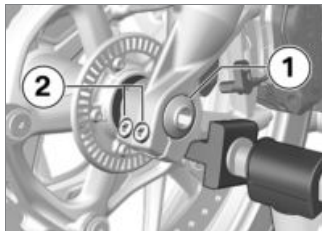

- Remove screw **1**.
- Slacken axle clamping screws **2**.
- Press quick-release axle slightly toward the inside, so as to be better able to grip it on the right-hand side.



- Withdraw quick-release axle **1**, support the front wheel when doing this.
- Set down front wheel and roll forwards out of the front suspension.

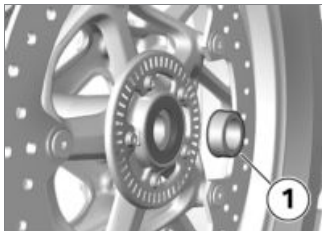

- Remove spacer bush **1** from the wheel hub.

Installing front wheel

WARNING

Use of a non-standard wheel

Malfunctions in operation of ABS and DTC

- See the information on the effect of wheel size on the ABS and DTC systems at the start of this chapter.◀




ATTENTION

Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

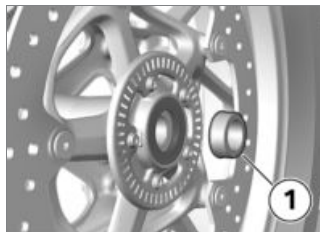

- Slip spacing bushing **1** into the wheel hub on the left-hand side.



ATTENTION

Front wheel installed wrong way round


Risk of accident

- Note direction-of-rotation arrows on tyre or rim.◀
- Roll the front wheel into position between the front forks.



- Lift front wheel and fit quick-release axle **1**.
- Remove front-wheel stand and firmly compress front forks several times. Do not operate the brake lever in this process.

- Fitting the front-wheel stand (→ 129).

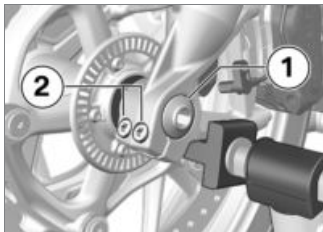

- Install screw **1** and tighten to specified torque. Counter-hold quick-release axle on the right-hand side.



Screw in front-wheel quick-release axle

50 Nm

- Tighten axle clamping screws **2** to the specified tightening torque.



Clamping screws in axle holder

Tightening sequence: Tighten screws six times in alternate sequence

19 Nm



- Tighten axle clamping screws **1** to the specified tightening torque.




 Clamping screws in axle holder

Tightening sequence: Tighten screws six times in alternate sequence

19 Nm

- Removing the front-wheel stand.
- Position left and right brake calipers on the brake discs.

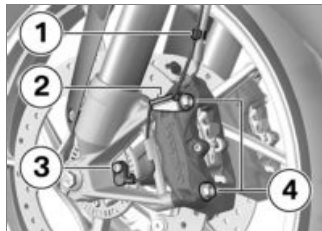

- Install securing screws **4** on left and right and tighten to specified tightening torque.

 Radial brake caliper to axle mount

38 Nm

- Remove the adhesive tape from the wheel rim.



WARNING

Brake pads not lying against the brake disc

Risk of accident due to delayed braking effect.

- Before driving, check that the brakes respond without delay. ◀
- Operate the brake several times until the brake pads are bedded.
- Seat the cable for the wheel-speed sensor in retaining clips **1** and **2**.
- Insert the wheel-speed sensor into the bore and install screw **3**.

 Wheel-speed sensor to fork leg


Joining compound: Micro-encapsulated or medium-strength thread-locking compound

8 Nm


Removing rear wheel

- Lift the motorcycle, preferably with a BMW Motorrad rear-wheel stand.

- Fitting the rear-wheel stand (111 129).
- Slip wooden chocks or similar under the rear wheel to prevent it from dropping out after the quick-release axle has been removed.

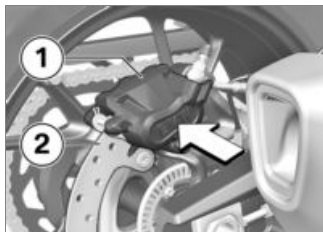


- Press brake caliper **1** against brake disc **2**.
- » Brake pistons are pushed back.

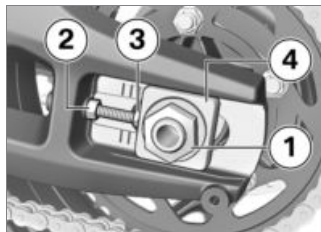

- Remove nut **1** with the washer.
- Slacken locknuts **2** on left and right.
- Slacken adjusting screws **3** on left and right.
- Remove adjusting plate **4** and push the axle in as far as it will go.




- Remove quick-release axle **2** and remove adjusting plate **1**.

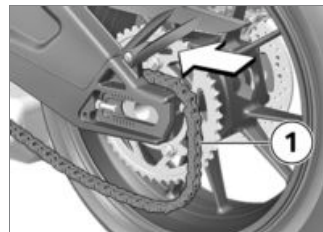

- Roll the rear wheel as far forward as possible and disengage chain **1** from the sprocket.




- Remove screw **1** and disengage the brake line from holder **2**.

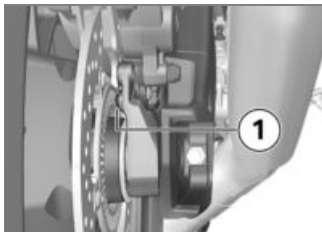

- When rolling the rear wheel clear of the motorcycle, take

care not to damage wheel-speed sensor **1**.

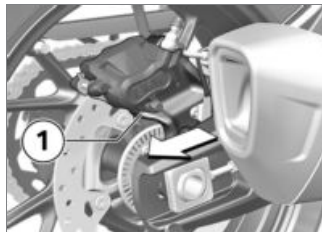

- Roll the rear wheel to the rear and clear of the swinging arm and at the same time pull brake-caliper carrier **1** back far enough to allow the rear wheel to clear it.



NOTICE

The sprocket and the spacer sleeves on left and right are loose fits in the wheel. Make sure that these parts are not damaged or lost on removal.◀

Installing the rear wheel



ATTENTION

Change in tyre size

Effect on control systems

- Have the new parameters encoded by a specialist workshop, preferably by an authorised BMW Motorrad Retailer.◀




ATTENTION

Tightening threaded fasteners to incorrect tightening torque


Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀
- Roll the rear wheel on the support into the swinging arm as far as necessary to permit the


brake-caliper carrier to be inserted.

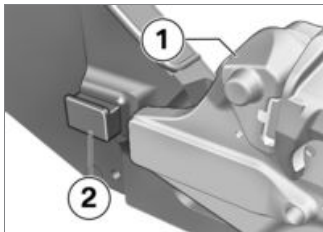

- Insert brake-caliper carrier **1** into guide **2**.

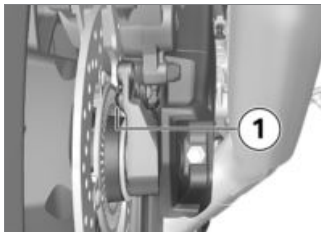


- When rolling the rear wheel into position, take care not to damage wheel-speed sensor **1**.

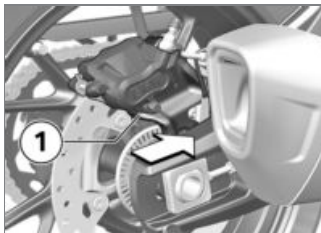


- Roll the rear wheel further into the swinging arm, while push-


ing brake-caliper carrier **1** forward at the same time.

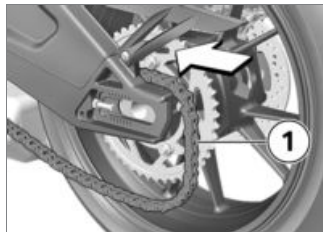


- Roll the rear wheel as far forward as possible and loop chain **1** over the sprocket.

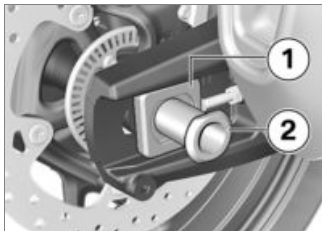

- Install right adjusting plate **1** in the swinging arm.
- Lift the rear wheel and work quick-release axle **2** through the adjusting plate and into the brake-caliper carrier and the rear wheel.
- Make sure that the quick-release axle fits into the recess for the flats.

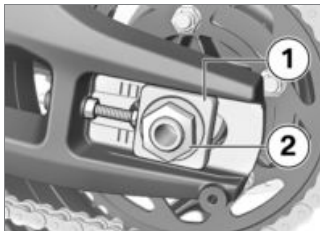

- Insert left adjusting plate **1**.
- Install nut **2** with its washer, but do not tighten the nut at this point.

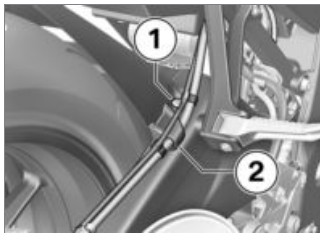

- Secure the brake line in holder **2** and install screw **1**.

- Adjust the chain tension (→ 163).

Light source

Replacing bulbs for low-beam headlight and high-beam headlight



NOTICE

The plug arrangement can differ from the illustration, depending on the bulb to be replaced. ◀

- Make sure the ground is level and firm and place the motor-cycle on its stand.
- Switch off the ignition.




- Remove cover panel **1** to replace the bulb for the low-beam headlight.



- Remove cover panel **2** to replace the bulb for the high-beam headlight.



- Disconnect connector **3**.

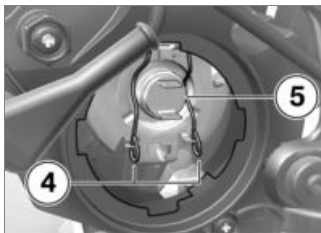

- Disengage spring clip **4** at left and right and swing it up.
- Remove bulb **5** from the socket.

- Replace the defective bulb.



NOTICE

Bulbs with higher light-intensity ratings are available through aftermarket suppliers. These bulbs burn out more rapidly and generate more heat than conventional bulbs. Under adverse conditions the extra heat can cause damage to the headlight. ◀



Bulbs for the low-beam headlight


H7 / 12 V / 55 W



Bulb for high-beam headlight

H7 / 12 V / 55 W

- Hold the bulb by the base only, in order to keep the glass free of foreign matter.

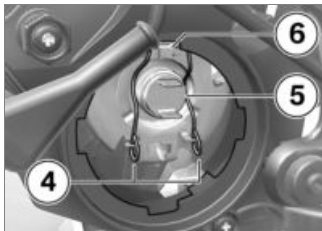

- Install bulb **5**. Begin by seating lug **6** and then press the bulb into the socket.
- Engage spring clip **4** in the catch on left and right.



- Connect connector **3**.


- Install the cover.

Replacing bulb for left parking light


- Make sure the ground is level and firm and place the motorcycle on its stand.
- Switch off the ignition.



- Remove cover **1**.

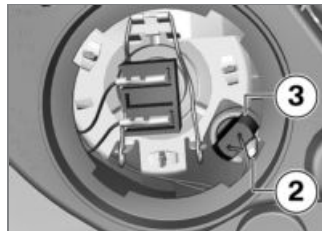

- Push down retainer **2** (using a screwdriver if necessary) and pull socket **3** out of the headlight housing.

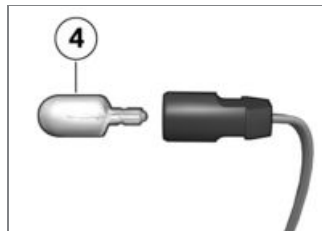

- Remove bulb **4** from the socket.


- Replace the defective bulb.




Bulb for parking light

W5W / 12 V / 5 W

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of dirt and foreign matter.

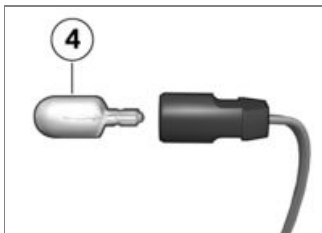

- Insert bulb **4** into the socket.

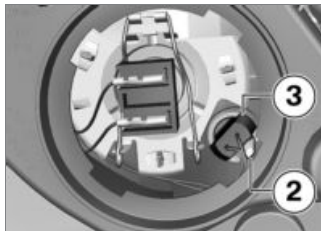


- Insert socket **3** into the headlight housing, making sure that retainer **2** engages.
- Install the cover.

Replacing bulb for right side light


- Make sure the ground is level and firm and place the motorcycle on its stand.
- Switch off the ignition.



- Remove cover **1**.

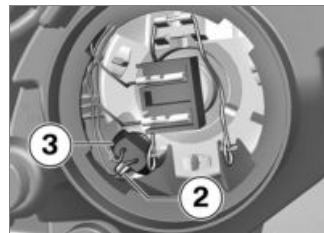

- Push down retainer **2** (using a screwdriver if necessary) and pull socket **3** out of the headlight housing.

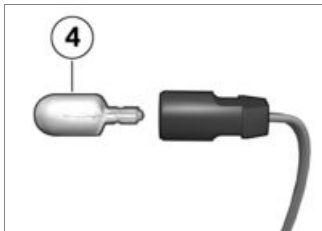


- Remove bulb **4** from the socket.
- Replace the defective bulb.




Bulb for parking light

W5W / 12 V / 5 W

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of foreign matter.

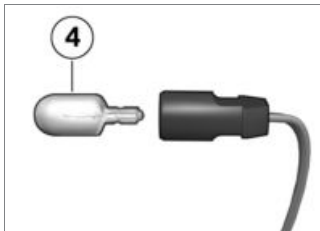

- Insert bulb **4** into the socket.

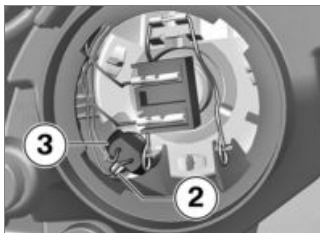

- Insert socket **3** into the headlight housing, making sure that retainer **2** engages.
- Install the cover.

Replacing bulbs for front and rear turn indicators


- Make sure the ground is level and firm and place the motorcycle on its stand.
- Switch off the ignition.



- Remove screw **1**.



- Pull the glass out of the light housing at the threaded-fastener side.

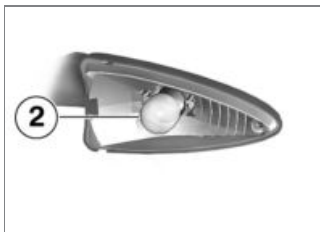

- Turn bulb **2** counter-clockwise and remove it from the light housing.

- Replace the defective bulb.



Bulbs for flashing turn indicators, front

RY10W / 12 V / 10 W

– with LED flashing turn indicators^{OE}

LED<




Bulbs for flashing turn indicators, rear

RY10W / 12 V / 10 W

– with LED flashing turn indicators^{OE}

LED<

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of dirt and foreign matter.

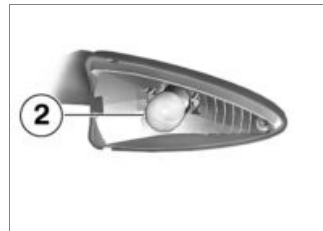

- Turn bulb **2** clockwise to install it in the bulb housing.



- Working from the inboard side, insert the glass into the light housing and close the housing.



- Install screw **1**.

LED rear light

If LEDs in the rear light fail the rear light has to be replaced. Under these circumstances:

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Number plate light

If the LEDs for the number plate light in the rear light fail the rear light has to be replaced. Under these circumstances:

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Trim panel components


Remove the side panel




NOTICE

The procedure described here for the right side apply applies by analogy to the left side panel. ◀

- Make sure the ground is level and firm and place the motorcycle on its stand.

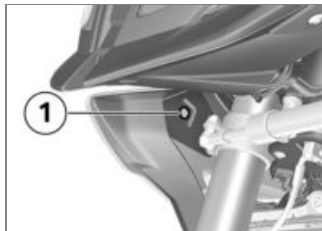


- Remove screw **1** from the in-board side of the side panel.

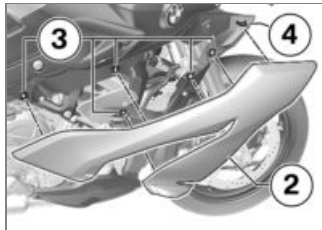


- Disengage fairing side panel **2** from slip-in retainers **3** and retaining clips **4**.
- Remove the side panel.

Installing side panel

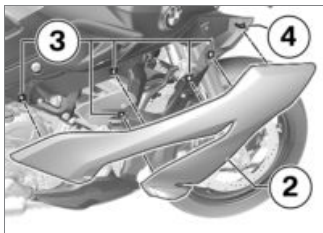


- Secure fairing top section **2** in retaining clips **4** and slip-in retainers **3**.

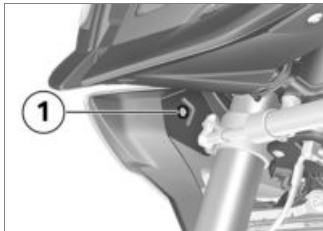


- Install screw **1**.

Disengaging inner trim panel

- Make sure the ground is level and firm and place the motorcycle on its stand.

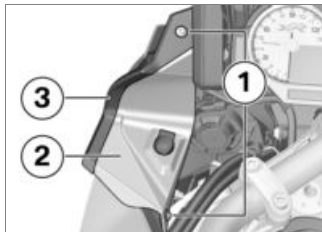


- Remove screws **1**.
- Work inner trim panel **2** out of fairing top section **3**.

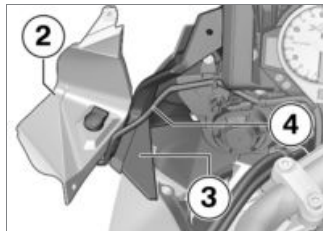


- Disengage inner trim panel **2**. In this process, take care not to strain cable **4** for the power socket.

Installing inboard cover

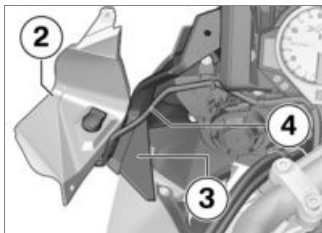

- Install inner trim panel **2**. In this process, note cable **4**.
- Align the inner trim panel and seat it in fairing top section **3**.

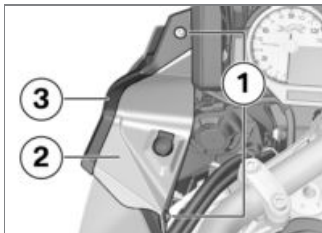

- Install screws **1**.

Jump-starting

CAUTION

Touching live parts of the ignition system when the engine is running

Electric shock

- Do not touch parts of the ignition system when the engine is running.◀

ATTENTION

Excessive current flowing when the motorcycle is jump-started

Wiring smoulders/ignites or damage to the on-board electronics

- If the motorcycle has to be jump-started connect the leads to the battery terminals; never attempt to jump-start the engine by connecting leads to the on-board socket.◀

ATTENTION

Contact between crocodile clips of jump leads and vehicle

Risk of short-circuit

- Use jump leads fitted with fully insulated crocodile clips at both ends.◀

ATTENTION

Jump-starting with a voltage greater than 12 V

Damage to the on-board electronics

- Make sure that the battery of the donor vehicle does not exceed a voltage of 12 V.◀
- When jump-starting the engine, do not disconnect the battery from the on-board electrical system.
- Removing seat (➡ 62).

- Run the engine of the donor vehicle during jump-starting.
- Begin by connecting one end of the red jump lead to the positive terminal of the discharged battery and the other end to the positive terminal of the donor battery.
- Then connect one end of the black jump lead to the negative terminal of the donor battery, and the other end to the negative terminal of the discharged battery.
- Start the engine of the vehicle with the discharged battery in the usual way; if the engine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.
- Allow both engines to idle for a few minutes before disconnecting the jump leads.

- Disconnect the jump lead from the negative terminals first, then disconnect the second lead from the positive terminals.
- Installing seat (🔧➔ 62).

Battery

Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry.
- Do not open the battery.
- Do not top up with water.
- Be sure to read and comply with the instructions for charging the battery on the following pages.

- Do not turn the battery upside down.



ATTENTION

On-board electronics (e.g. clock) draining connected battery

Battery is deep-discharged; this voids the guarantee

- Connect a float charger to the battery if the motorcycle is to remain out of use for more than four weeks.◀



NOTICE

BMW Motorrad has developed a float charger specially designed for compatibility with the electronics of your motorcycle. Using this charger, you can keep the battery charged during long periods of disuse, without having to disconnect the battery from the motorcycle's on-board sys-

tems. You can obtain additional information from your authorised BMW Motorrad dealer.◀

Charge battery when connected



ATTENTION

Charging the battery that is connected to the vehicle via the battery terminals

Damage to the on-board electronics

- Disconnect the battery at the battery terminals before charging.◀



ATTENTION

Charging a fully discharged battery via the socket or the extra socket

Damage to the on-board electronics

- If a battery has discharged to the extent that it is completely

flat (battery voltage less than 9 V, status-indicator lights and multifunction display remain off when the ignition is switched on) **it has to be disconnected from the on-board circuits** and re-charged with the charger connected directly to the battery posts.◀



ATTENTION

Unsuitable chargers connected to a socket

Damage to charger and vehicle electronics

- Use suitable BMW chargers. The suitable charger is available from your authorised BMW Motorrad dealer.◀
- Charge via the charging socket, with the battery connected to the motorcycle's on-board electrical system.



NOTICE

The motorcycle's on-board electronics know when the battery is fully charged. The on-board socket is switched off when this happens.◀

- Comply with the operating instructions of the charger.



NOTICE

If you are unable to charge the battery through the on-board socket, you may be using a charger that is not compatible with your motorcycle's electronics. If this happens, charge the battery directly at the terminals of the battery that is disconnected from the vehicle.◀

Charging battery when disconnected

- Disconnecting battery from motorcycle (🔧 158).

- Charge the battery using a suitable charger.
- Comply with the operating instructions of the charger.
- Once the battery is fully charged, disconnect the charger's terminal clips from the battery terminals.



NOTICE


The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use.◀

- Connecting battery to motorcycle (➡ 159).

Disconnecting battery from motorcycle

- Place the motorcycle on its stand on firm, even ground.

- Removing seat (➡ 62).

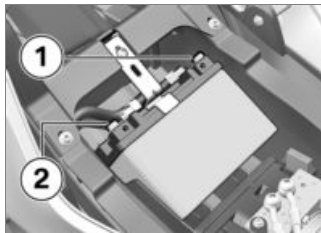


ATTENTION

Battery not disconnected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with the specified disconnection sequence.◀
- First disconnect battery negative lead **1**.
- Then disconnect battery positive lead **2**.

– with alarm system (DWA)^{OE}

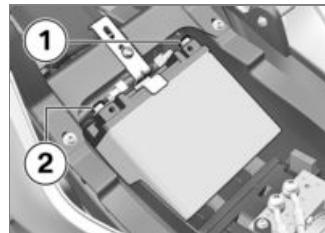


ATTENTION

Battery not disconnected in accordance with correct procedure

Risk of short-circuit


- Always proceed in compliance with the specified disconnection sequence.◀
- First disconnect battery negative lead **1**.
- Then disconnect battery positive lead **2**.◀

Connecting battery to motorcycle

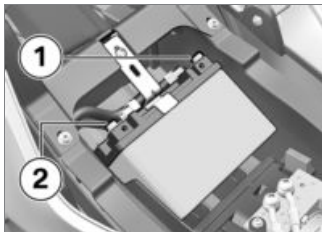

- Connect battery positive lead **2** first.
- Then install battery negative lead **1**.


– with alarm system (DWA)^{OE}

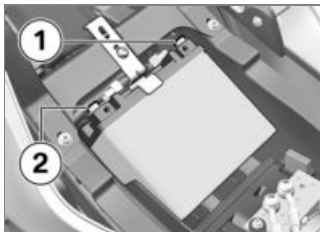

- Connect battery positive lead **2** first.
- Then install battery negative lead **1**.<
- Installing seat (➡ 62).


Removing battery

- Removing seat (➡ 62).
- Disconnecting battery from motorcycle (➡ 158).

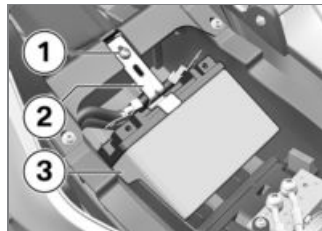

- Remove screw **1**.
- Remove bracket **2**.
- Lift battery **3** up and out; work it slightly back and forth if it is difficult to remove.

– with alarm system (DWA)^{OE}

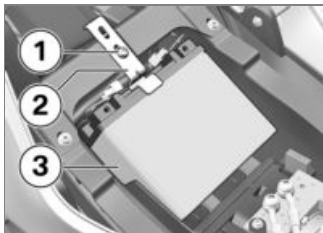

- Remove screw **1**.
- Remove bracket **2**.
- Lift battery **3** up and out; work it slightly back and forth if it is difficult to remove.◀


Installing battery



NOTICE


If the battery was disconnected from the motorcycle for a prolonged period of time it will be necessary to enter the current date in the instrument panel, in

order to ensure that the service-due indicator functions correctly. If you want to have the date set consult a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

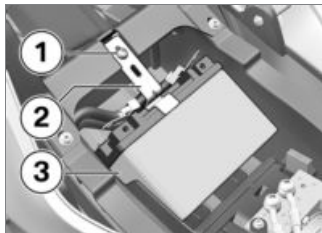

- Place battery **3** in the battery compartment, positive terminal on the right in the forward direction of travel.
- Install holder **2**.
- Install screw **1**.

– with alarm system (DWA)^{OE}

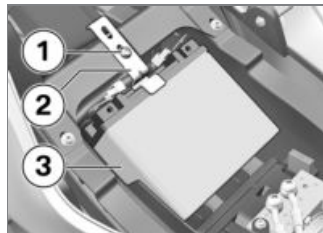

- Place battery **3** in the battery compartment, positive terminal on the right in the forward direction of travel.
- Install holder **2**.
- Install screw **1**.◀
- Connecting battery to motorcycle (➡ 159).
- Installing seat (➡ 62).
- Setting the clock (➡ 52).

Fuses

Replace fuses




ATTENTION

Jumpering of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
- Always replace a defective fuse with a new fuse of the same amperage.◀
- Switch off the ignition.
- Make sure the ground is level and firm and place the motorcycle on its stand.
- Removing seat (► 62).

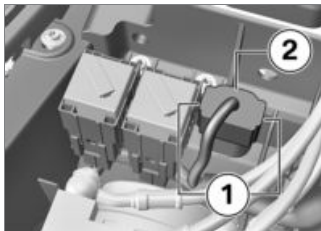

- Press latch **1** on both sides.
- Remove fuse box **2**.
- Consult the fuse assignment diagram below and replace the defective fuse.




NOTICE

If fuse defects recur frequently have the electric circuits checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

- Reinsert fuse box **2**. Make sure that latch **1** engages on both sides.
- Installing seat (► 62).

Fuse assignment

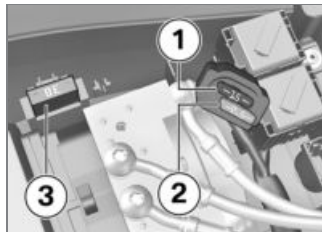

Fuse 1

15 A (Master relay, diagnosis plug, instrument cluster, anti-theft alarm, ignition switch)



Fuse 2

7.5 A (Lap trigger, left multi-function switch, sensor box)



Fuse 3

30 A (BCO, controller, master relay)

Diagnostic connector

Disengaging diagnostic connector




CAUTION

Incorrect procedure followed when loosening the diagnostic connector for the on-board diagnosis

Motorcycle experiences malfunctions

- Only have the diagnostic connector loosened by a specialist workshop or other authorised persons during your next BMW Service appointment.

- Have the work performed by appropriately trained staff.
- Refer to the vehicle manufacturer specifications.◀
- Removing seat (➡ 62).

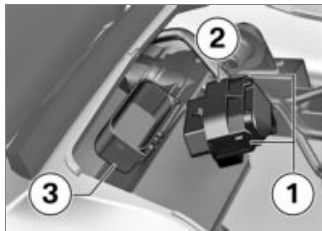

- Press locks **1**.
- Disengage diagnostic connector **2** from holder **3**.
- » The interface to the diagnosis and information system can be connected to diagnostic connector **2**.

Securing the diagnostic connector

- Disconnect the interface for the diagnosis and information system.



- Seat diagnostic connector **2** in bracket **3**.
- » Retainers **1** engage with an audible click.
- Removing seat (➡ 62).

Chain

Lubricating chain



ATTENTION

Inadequate cleaning and lubrication of the drive chain

Accelerated wear

- Clean and lubricate the drive chain at regular intervals.◀
- Lubricate the drive chain every 800 km at the latest. Lubricate the chain more frequently if the motorcycle is ridden in wet, dusty or dirty conditions.
- Switch the ignition off and select neutral.
- Clean the drive chain with a suitable cleaning product, dry it and apply chain lubricant.
- To prolong chain life, BMW Motorrad recommends the use of BMW Motorrad chain lubricant, or:




Lubricant

Chain spray

- Wipe off excess lubricant.

Checking chain tension

- Make sure the ground is level and firm and place the motorcycle on its stand.
- Turn the rear wheel until it reaches the position with the lowest amount of chain sag.

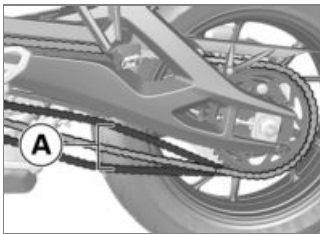

- Use a screwdriver to push the chain up and down at a point midway along the run between

pinion and sprocket and measure chain deflection **A**.



Chain deflection

45...50 mm (Motorcycle with no weight applied, supported on its side stand)

– with lowered suspension^{OE}


35...45 mm (Motorcycle with no weight applied, supported on its side stand)◀

If chain deflection is outside permitted tolerance:

- Adjust the chain tension (163).

Adjust the chain tension

- Make sure the ground is level and firm and place the motorcycle on its stand.

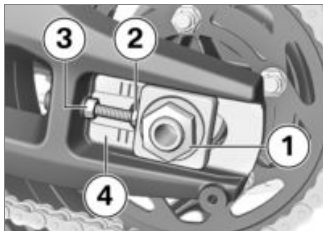

- Slacken nut **1**.
- Slacken locknuts **3** on left and right.
- Use adjusting screws **2** on left and right to adjust chain tension.
- Checking chain tension (163).
- Make sure that scale readings **4** are the same on left and right.
- Tighten locknuts **3** on left and right to the specified tightening torque.



Locknut of the final-drive chain tensioning screw

19 Nm

- Tighten nut **1** to the specified tightening torque.




Rear quick-release axle in swinging arm

Thread-locking compound:
mechanical

100 Nm

Checking chain wear

- Engage 1st gear.
- Turn the rear wheel in the normal direction of travel until the chain is tensioned.
- At 3 different positions, measure the length of the chain over the centres of 10 rivets below the rear wheel swinging arm.

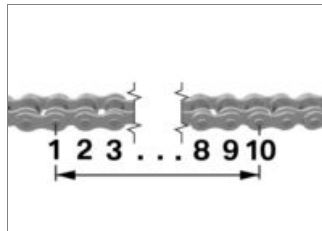

Permissible chain length

max 144.30 mm (measured
centre to centre over 10
pins, chain pulled taut)

If the chain has stretched to the maximum permissible length:

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Accessories

General instructions.....	166
Power sockets	166
Cases.....	167
Topcase	170
Navigation system	172
Socket for optional accessories	177

General instructions



Use of other-make products

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle. ◀

BMW has conducted extensive testing of the parts and ac-

cessory products to establish that they are safe, functional and suitable. Consequently, BMW accepts product liability. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

Whenever you are planning modifications, comply with all the legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country.

Your BMW Motorrad dealer can offer expert advice on the choice of genuine BMW parts, accessories and other products.

To find out more about accessories go to:

**[bmw-motorrad.com/
accessories](http://bmw-motorrad.com/accessories)**

Power sockets

Connection of electrical devices

- You can start using electrical devices connected to the motorcycle's sockets only when the ignition is switched on.

Cable routing

Note the following with regard to the routing of cables from sockets to items of electrical equipment:

- Make sure that cables do not impede the rider.
- Make sure that cables do not restrict the steering angle or obstruct handling.
- Make sure that cables cannot be trapped.

Automatic switch-off


- The sockets will be automatically switched off during the start procedure.

- The power supply to the sockets is switched off no more than 15 minutes after the ignition is switched off, in order to prevent overloading of the on-board electrics. Low-wattage electrical accessories might not be recognised by the vehicle's electronics. In such cases, power sockets are switched off very shortly after the ignition is turned off.
- If the battery charge state is too low to maintain the motorcycle's start capability, the power sockets are switched off.
- The power sockets are also switched off when the maximum load capability as stated in the technical data is exceeded.

Cases

Open cases

- with case holder left/right^{OE}

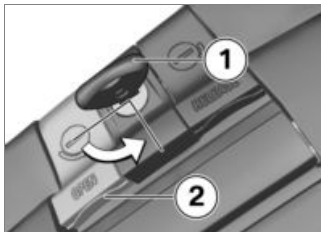

- Turn the key **1** to position OPEN.
- Pull the grey release lever **2** (OPEN) all the way up and simultaneously open the case lid.

Closing cases


- with case holder left/right^{OE}



- Turn the key **1** to position OPEN.
- Press catches **2** of the case lid into retainers **3**. Check that nothing is trapped between the lid and the case.
- Pull the grey release lever **4** (OPEN) all the way up and simultaneously open the case lid.
- » The lid engages with an audible click.
- Turn key **1** in the case lock to the position in which it is parallel with the direction of travel and remove the key.

Removing cases

– with case holder left/right^{OE}

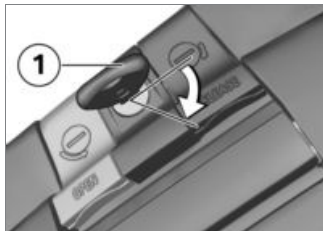


- Turn the key **1** to position RELEASE.




- Pull the black release lever **1** (RELEASE) up and simultaneously pull the case out.
- Then lift the case out of the bottom holder.

Install cases

– with case holder left/right^{OE}

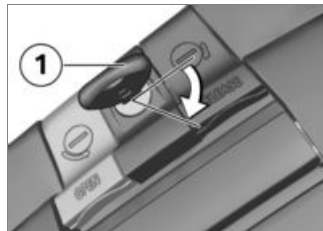

- Turn the key **1** to position RELEASE.

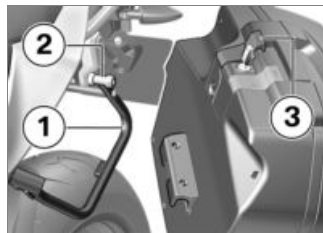

- Position the case in case holder **1**, then pivot it until it is seated at mount **2**.
- Pull the black release lever **3** (RELEASE) up and simultan-

eously push the case into the upper holder **2**.

- Push black release lever **3** (RELEASE) down until it engages.
- Turn the key in the case lock to the position in which it is parallel with the direction of travel and remove the key.


Maximum payload and maximum permissible speed

Note the maximum permissible payload and the speed limit for riding with cases fitted, as stated on the label inside the case. Contact your authorised BMW Motorrad dealer if you cannot find your combination of vehicle and cases on the label. The values for the combination described here are as follows:

 Maximum permissible speed for riding with cases fitted to the motorcycle
max 180 km/h
 Payload per case
max 10 kg

Secure attachment

– with case holder left/right^{OE}

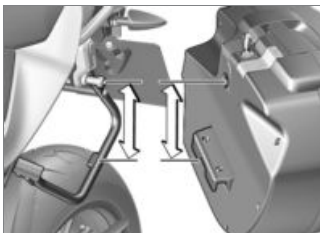

If a case wobbles or is difficult to fit, it has to be adapted to the

gap between the top and bottom holders.



WARNING

Case installation not in compliance with correct procedure.

Impairment of road safety.

- Cases may not wobble and must be secured free from play. Re-adjust the retainer if play develops over the course of time.◀



Screws **1** inside the case allow you to make this adjustment.

Topcase

Opening topcase

– with luggage carrier^{OE}



- Turn the key in the topcase lock to position **1**.



- Push lock barrel **1** forward.
» Lever **2** pops up.
- Pull the release lever all the way up.

» Topcase lid can be opened.

Closing topcase

– with luggage carrier^{OE}



- Pull release lever **1** all the way up.
- Close the lid of the topcase and hold it down. Check that nothing is trapped between the lid and the case.



NOTICE

The topcase can also be locked by turning the lock to the LOCK position. In this case, make sure

that the key is not left inside the topcase.◀



- Push release lever **1** down until it engages.
- Turn the key in the topcase lock to the LOCK position and remove the key from the lock.

Removing the topcase

– with luggage carrier^{OE}



- Turn the key in the topcase lock to position **1**.
» The handle pops out.



- Pull handle **1** up as far as it will go.

- Lift the topcase at the rear and remove it from the luggage carrier.

Installing topcase

– with luggage carrier^{OE}

WARNING

Topcase not properly secured

Driving safety is impaired

- The topcase must not wobble and must be secured free from play.◀



- Pull handle **1** up as far as it will go.



- Hook the topcase into position on the luggage carrier. Make sure that hooks **2** are securely

seated in the corresponding keepers **3**.

- Push handle **1** down until it engages.



- Turn the key in the topcase lock to position **1** and remove the key from the lock.

Maximum payload and maximum permissible speed

Note the maximum permissible payload and the speed limit for riding with topcase fitted, as stated on the label inside the topcase.

Contact your authorised BMW Motorrad dealer if you cannot find your combination of vehicle and topcase on the label. The values for the combination described here are as follows:

 Maximum permissible speed for riding with topcase fitted to the vehicle


max 180 km/h

 Payload of topcase


max 5 kg

Navigation system Installing navigation device

- with preparation for navigation system^{OE}
- with navigation system^{OA}

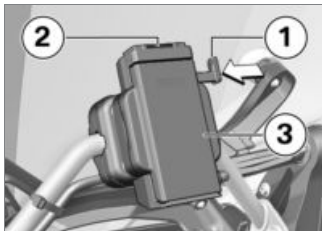


- Press latch **1**.
» Mark **2** indicates that latch is released.
- Remove cover **3**.

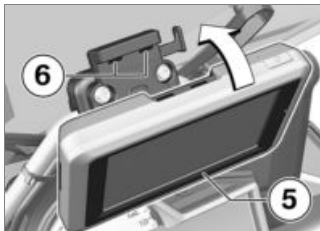

- Pivot navigation device **5** forward and at the top edge, press it into latching mechanism **6**.
» The navigation device engages.
- Check that the navigation device is secure in the cradle. Check that red mark **2** is no longer visible.

Removing navigation device

- with preparation for navigation system^{OE}
- with navigation system^{OA}

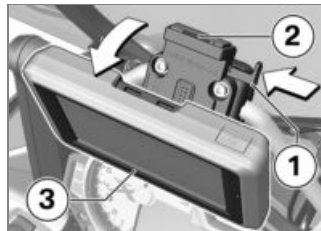


- Press latch **1**.
» Mark **2** indicates that latch is released.
- Remove navigation device **3**.



- Set the navigation device in cradle **4**.



- Set the cover in cradle **4**.

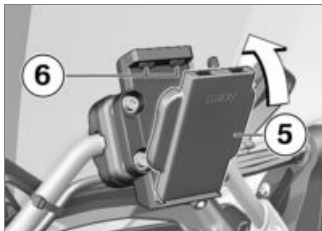

- Pivot cover **5** forward and at the top edge, press it into latching mechanism **6**.
 - » The cover engages.
- Check that the cover is secure in the cradle. Check that mark **2** is no longer visible.

Operating navigation system

- with preparation for navigation system^{OE}

– with navigation system^{OA}



NOTICE

The description below is based on the Navigator V. The Navigator IV does not support all the possibilities described here.◀



NOTICE

Only the latest version of the BMW Motorrad communication system is supported. A software update of the BMW Motorrad communication system may be necessary. If this is the case, consult your authorised BMW Motorrad dealer.◀

If the BMW Motorrad Navigator is fitted, some of its functions can be controlled directly from the handlebars using the Multi-Controller.



The Multi-Controller is operated by means of six movements:

- Turning upwards and downwards.
- Short operation to the left and right.
- Extended operation to the left and right.

Turning the Multi-Controller with the Compass or Mediaplayer page open increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

In the BMW special menu, the menu items are selected by turning the Multi-Controller.

Short operation of the Multi-Controller to the left or right changes between the main pages of the Navigator:

- Map view
- Compass
- Mediaplayer
- BMW special menu
- My Motorcycle page

Long-pushing the Multi-Controller corresponds to activating certain functions on the Navigator display. An arrow to the right or to the left above the corresponding button area on the display indicates a function that can be activated in this way.



Long-push to the right to activate this function.



Long-push to the left to activate this function.

In detail, the following functions can be controlled:

Map view

- Turn up: **Zoom in.**
- Turn down: **Zoom out.**

Compass page

- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

BMW special menu

- Speak: Repeat most recent navigation announcement.
- Waypoint: Save current location as a favourite.
- Home: Starts navigation to home address (greyed if no home address has been defined).

- Mute: Switch automatic navigation announcements off or on (off: a crossed-out lips symbol appears in the top line of the display). "Speak" will still activate navigation announcements. All other acoustic outputs remain switched on.
- Switch off display: Deactivate the display.
- Dial home number: Dials the home phone number saved in the Navigator (not shown unless a telephone is connected).
- Diversion: Activates the diversion function (not shown unless a route is active).
- Skip: Skips the next waypoint (not shown unless the route has waypoints).

My Motorcycle

- Turn: Changes the number of data shown.

- Touch a data field on the display to open the menu for selecting data.
- The values available for selection depend on the optional extras installed on the vehicle.



NOTICE

The Mediaplayer function is available only with a Bluetooth device supporting the A2DP standard, for example a BMW Motorrad communication system. ◀

Mediaplayer

- Long-push to the left: Play preceding track.
- Long-push to the right: Play next track.
- Turning increases or decreases the volume of a BMW Motorrad communication system connected via Bluetooth.

Warnings and status messages



Warning and status messages from the motorcycle are indicated by a symbol **1** appearing at the top left in the map view.



NOTICE

If a BMW Motorrad communication system is connected, warnings are accompanied by an acoustic signal. ◀

If there are two or more active warnings the number appears below the warning triangle.

Touching the warning triangle when more than one warning is active opens a list of all the warnings. Additional information appears as soon as a message is selected.



NOTICE

Detailed information cannot be displayed for all warnings. ◀

Special functions

Integration of the BMW Motorrad Navigator has produced a number of deviations from the descriptions in the operating instructions for the Navigator.

Reserve fuel level warning

The settings for the fuel gauge are not available, because the reserve fuel level warning is sent by the vehicle to the Navigator. Touch the message when it is active to view the locations of the nearest filling stations.

Time and date

The Navigator sends the time and date to the motorcycle. The transfer of these data into the instrument cluster must be activated in the **SETUP** menu of the instrument cluster.

Security settings

The BMW Motorrad Navigator V can be secured against unauthorised use with a four-digit PIN (Garmin Lock). If this function is activated, while the Navigator is cradled on the motorcycle and the ignition is switched on you are prompted to add the motorcycle to the list of secured vehicles. If you answer "Yes" at this prompt the Navigator saves the VIN of this vehicle in its internal memory.

A maximum of five VINs can be saved in this way.

Subsequently, the PIN does not have to be entered when the

Navigator is switched on by ignition ON while cradled in any of these vehicles.

If the Navigator is removed from the vehicle while switched on, a security prompt asking for the PIN to be entered is issued.

Screen brightness

Screen brightness is adjusted by the motorcycle while the unit is cradled. No manual input is necessary.

If you prefer, you can switch off automatic adjustment in the Navigator display settings.

Socket for optional accessories

Equipment

The vehicle is fitted with the following plugs for optional accessories and racing accessories:

- Infrared receiver
- Spring-travel sensor
- Optional accessory
- HP Race data logger

Underneath the right side panel



1 Plug for infrared receiver


Underneath the left side panel



- 1 Plug for optional accessories and racing accessories
Voltage supply and LIN
Spring travel sensor for front forks (racing accessory)
– with preparation for navigation system^{OE}
Navigation system

Underneath the seat


– with alarm system (DWA)^{OE}

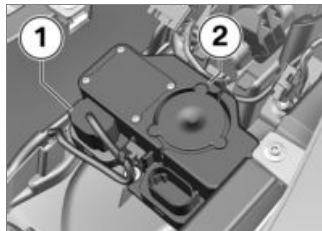

- 1 Plug for DWA and HP Race data logger
- 2 DWA


Underneath the seat

– without alarm system (DWA)^{OE}

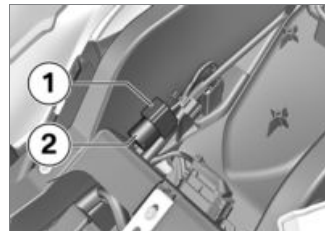

- 1 Plug for DWA and HP Race data logger
- 2 Terminating resistor

Underneath the rear carrier

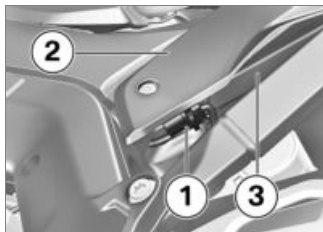

- 1** Plug for rear additional power socket

NOTICE

The plug for extra socket **1** is behind rear trim panel **2**, tied back to inner frame **3**.◀

Connecting optional accessories and racing accessories

Requirement

Remove the side panel, rear seat or tail-hump cover, as applicable, to gain access to the plugs.

- Remove the side panel (▮▮▮ 153).
- Removing seat (▮▮▮ 62).
- Unlock the protective cap or terminating resistor, as applicable, and disconnect it from the plug.
- Connect the optional accessory or racing accessory, as applicable.

NOTICE

Comply with the installation instructions supplied with the optional accessory or racing accessory.◀

NOTICE

Tightening the cable ties has to be the last step in the process; this is in order to ensure that the wiring harness can be positioned correctly and that there is no strain on the cable legs with plugs.◀

ATTENTION

Dirt and damp penetrating inside open connectors

Malfunctions

- Reinstall the cap or terminating resistor, as applicable, after removing the plug.◀
- After removing the accessory: Reinstall the cap or terminating resistor, as applicable.
- Installing side panel (▮▮▮ 154).
- Installing seat (▮▮▮ 62).

Care

Care products	182
Washing the vehicle	182
Cleaning easily damaged components.....	183
Paint	183
Preserving paintwork.....	184
Laying up the motorcycle	184
Restoring motorcycle to use	184

Care products

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad dealer.

The substances in BMW CareProducts have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.



ATTENTION

Use of unsuitable cleaning and care products

Damage to vehicle parts

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol. ◀

Washing the vehicle

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the motorcycle.

To prevent stains, do not wash the vehicle immediately after it has been exposed to strong sunlight and do not wash it in the sun.

Make sure that the vehicle is washed frequently, especially during the winter months.

To remove road salt, clean the motorcycle with cold water immediately after every trip.



WARNING

Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions

Diminished braking effect, risk of accident

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads. ◀



ATTENTION

Effect of road salt intensified by warm water

Corrosion

- Use only cold water to wash off road salt. ◀



ATTENTION

Damage due to high water pressure from high pressure cleaners or steam cleaners

Corrosion or short-circuit, damage to seals, to the hydraulic brake system, to the electrics and the seat

- Exercise restraint when using a steam jet or high-pressure cleaning equipment.◀

Cleaning easily damaged components

Plastics



ATTENTION

Use of unsuitable cleaning agents

Damage to plastic surfaces

- Do not use cleaning agents that contain alcohol, solvents or abrasives.
- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.◀

Body panels

Clean the trim panels with water and BMW plastic care emulsion.

Windscreens and lenses made of plastic

Clean off dirt and insects with a soft sponge and plenty of water.



NOTICE

Soften stubborn dirt and insects by covering the affected areas with a wet cloth.◀

Chrome

Use plenty of water and BMW shampoo to clean chrome, particularly if it has been exposed to road salt. Use chrome polish for additional treatment.

Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.



ATTENTION

Bending of radiator fins

Damage to radiator fins

- Take care not to bend the radiator fins when cleaning.◀

Rubber

Treat rubber components with water or BMW rubber-care products.



ATTENTION

Application of silicone sprays to rubber seals

Damage to the rubber seals

- Do not use silicone sprays or care products that contain silicon.◀

Paint

Washing the vehicle regularly will help counteract the long-term effects of substances that damage the paint, especially if

your vehicle is ridden in areas with high air pollution or natural sources of dirt, for example tree resin or pollen.

Remove particularly aggressive substances immediately, however, as otherwise the paint can be affected or become discoloured. Substances of this nature include spilt fuel, oil, grease, brake fluid and bird droppings. We recommend BMW vehicle polish or BMW paint cleaner for this purpose.

Marks on the paintwork are particularly easy to see after the vehicle has been washed. Remove stains of this kind immediately, using cleaning-grade benzene or petroleum spirit on a clean cloth or ball of cotton wool. BMW Motorrad recommends using BMW tar remover for removing specks of tar. Remember to wax the parts treated in this way.

Preserving paintwork

BMW Motorrad recommends applying only BMW car wax or products containing carnauba wax or synthetic wax to preserve the paintwork.

It is time to rewax the paintwork when water "puddles" on the surface, instead of forming beads.

Laying up the motorcycle

- Clean the motorcycle.
- Fill the motorcycle's fuel tank.
- Removing battery (➡ 159).
- Spray the brake and clutch lever pivots and the main and side stand pivots with a suitable lubricant.
- Coat bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).

- Stand the motorcycle in a dry room in such a way that there is no load on either wheel (preferably using the front-wheel and rear-wheel stands from BMW Motorrad).

Restoring motorcycle to use

- Remove the protective wax coating.
- Clean the motorcycle.
- Installing battery (➡ 160).
- Comply with checklist (➡ 75).

Technical data

Troubleshooting chart	186
Threaded fasteners	187
Fuel.....	189
Engine oil	189
Engine	190
Clutch	191
Transmission	191
Final drive.....	192
Frame	192
Chassis and suspension	193
Brakes	194
Wheels and tyres	195
Electrical system.....	197
Dimensions	198
Weights.....	199

Riding specifications	199
-----------------------------	-----

Troubleshooting chart

The engine does not start.

Possible cause	Rectification
Side stand extended and gear engaged	Retract the side stand.
Gear engaged and clutch not disengaged	Select neutral or pull the clutch lever.
No fuel in tank	Refuelling (▮▮▮ 85).
Battery flat	Charge battery when connected (▮▮▮ 157).
Overheating protection for starter motor has been activated. Starter motor can only be operated for a limited period of time.	Allow the starter motor to cool down for approx. 1 minute before using it again.

Threaded fasteners

Front wheel	Value	Valid
Screw in front-wheel quick-release axle		
M20 x 1.5	50 Nm	
Clamping screws in axle holder		
M8 x 35	Tighten screws six times in alternate sequence	
	19 Nm	
Radial brake caliper to axle mount		
M10 x 65	38 Nm	
Wheel-speed sensor to fork leg		
M6 x 16 Micro-encapsulated or medium-strength thread-locking compound	8 Nm	
Rear wheel	Value	Valid
Locknut of the final-drive chain tensioning screw		
M8	19 Nm	

Rear wheel		Value	Valid
Rear quick-release axle in swinging arm			
M24 x 1.5 mechanical		100 Nm	
Swinging-arm adapter to rear wheel swinging arm			
M8 x 40		20 Nm	
Screw in adjusting ring			
M5 x 25		3 Nm	– without Dynamic ESA ^{OE}
Mirrors		Value	Valid
Mirror (locknut) to adapter			
M10 x 1.25		Left-hand thread, 22 Nm	

Fuel

Recommended fuel grade	Super Plus, unleaded (max. 10 % ethanol, E10) 98 ROZ/RON 91 AKI
Usable fuel capacity	approx. 20 l
Fuel reserve	approx. 4 l

Engine oil

Engine oil, capacity	approx. 3.5 l, with filter change
Specification	SAE 5W-40, API SJ / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil.
Engine oil, quantity for topping up	max 0.8 l, Difference between MIN and MAX

BMW recommends **ADVANTEC**
ORIGINAL BMW ENGINE OIL

Engine

Location of engine number	Crankcase bottom section, right, behind coolant pump
Engine type	104EC
Engine design	Water-/oil-cooled four-cylinder four-stroke inline engine, four valves per cylinder, two overhead camshafts
Displacement	999 cm ³
Cylinder bore	80 mm
Piston stroke	49.7 mm
Compression ratio	12 : 1
Nominal output	121 kW, at engine speed: 11000 min ⁻¹
	118 kW, at engine speed: 11000 min ⁻¹
– with reduction of power ^{OE}	79 kW, at engine speed: 7500 min ⁻¹
Torque	114 Nm, at engine speed: 9250 min ⁻¹
– with reduction of power ^{OE}	103 Nm, at engine speed: 7000 min ⁻¹
Maximum engine speed	max 12000 min ⁻¹
Idle speed	1250 min ⁻¹ , Engine at regular operating temperature
Exhaust emissions standard	EU4

Clutch

Clutch type	Multiplate oil-bath clutch, anti-hopping
-------------	--

Transmission

Gearbox type	Claw-shift 6-speed gearbox, integrated into engine block
Gearbox transmission ratios	1.652 (76/46 teeth), Primary transmission ratio 2.647 (45/17 teeth), 1st gear 2.091 (46:22 teeth), 2nd gear 1.727 (38:22 teeth), 3rd gear 1.500 (33:22 teeth), 4th gear 1.360 (34:25 teeth), 5th gear 1.261 (29:23 teeth), 6th gear

Final drive

Type of final drive	Chain drive
Type of rear suspension	Aluminium double swinging arm
Final drive, number of teeth (Pinion / sprocket)	17/45
Secondary transmission ratio	2.647

Frame

Frame type	Aluminium composite bridge frame, load-bearing engine
Type plate location	Frame, front right, on steering head
Position of the Vehicle Identification Number	Frame, front right, on steering head

Chassis and suspension

Front wheel

Type of front suspension	Upside-down telescopic fork
Spring travel, front	150 mm, at front wheel
– with lowered suspension ^{OE}	120 mm, at front wheel

Rear wheel

Type of rear suspension	Aluminium double swinging arm
Type of final drive	Chain drive
Spring travel, rear	140 mm, at rear wheel
– with lowered suspension ^{OE}	110 mm, at rear wheel

Brakes

Front wheel

Type of front brake	Hydraulically radially operated twin disc brake with 4-piston radial fixed calipers and floating brake discs
Brake-pad material, front	Sintered metal
Brake disc thickness, front	4.5 mm, When new min 4.0 mm, Wear limit
Play of brake controls (Front brake)	1±0.4 mm

Rear wheel

Type of rear brake	Hydraulically operated disc brake with 2-piston floating caliper and fixed disc
Brake-pad material, rear	Organic material
Brake disc thickness, rear	5.0 mm, When new min 4.5 mm, Wear limit
Blow-by clearance of the footbrake lever	2...3 mm, between footbrake lever and footrest plate

Wheels and tyres

Recommended tyre sets	Your authorised BMW Motorrad dealer will be happy to supply an up-to-date list of the approved wheel/tyre combinations, or you can check the information posted on the bmw-motorrad.com website.
Speed category, front/rear tyres	W, required at least: 270 km/h
Front wheel	
Front wheel type	Aluminium cast wheel
Front wheel rim size	3.50" x 17"
Tyre designation, front	120/70 ZR 17
Load index, front tyre	min. 56
– with reduction of power ^{OE}	min. 48
Permissible front-wheel imbalance	max 5 g
Balance weight for front wheel (One half of the weights must be attached to the left and the other half to the right of the wheel rim)	max 80 g

Rear wheel

Rear-wheel type	Aluminium cast wheel
Rear wheel rim size	6.0" x 17"
Tyre designation, rear	190/55 ZR 17
Load index, rear tyre	min. 73
– with reduction of power ^{OE}	min. 66
Permissible rear-wheel imbalance	max 45 g
Balance weight for the rear wheel (One half of the weights must be attached to the left and the other half to the right of the wheel rim)	max 80 g
Tyre pressure	
Tyre pressure, front	2.5 bar
Tyre pressure, rear	2.9 bar

Electrical system

12

197

Technical data

Fuses

Fuse 1	15 A, Master relay, diagnosis plug, instrument cluster, anti-theft alarm, ignition switch
Fuse 2	7.5 A, Lap trigger, left multifunction switch, sensor box
Fuse 3	30 A, BCO, controller, master relay

Battery

Battery type	AGM
Battery rated voltage	12 V
Battery rated capacity	9 Ah
– with alarm system (DWA) ^{OE}	10 Ah

Spark plugs

Spark plugs, manufacturer and designation	NGK LMAR9D-J
Electrode gap of spark plug	0.8 mm

Lighting

Bulb for high-beam headlight	H7 / 12 V / 55 W
Bulbs for the low-beam headlight	H7 / 12 V / 55 W
Bulb for parking light	W5W / 12 V / 5 W

Bulb for tail light/brake light	LED
Light source for the number plate light	Integrated in rear light
Maximum number of defective LEDs in rear-light unit	1
Bulbs for flashing turn indicators, front	RY10W / 12 V / 10 W
– with LED flashing turn indicators ^{OE}	LED
Bulbs for flashing turn indicators, rear	RY10W / 12 V / 10 W
– with LED flashing turn indicators ^{OE}	LED

Dimensions

Length of motorcycle	2183 mm, measured over number-plate carrier
Height of motorcycle	max 1400 mm, measured to top of windscreen in lowest position, at DIN unladen weight
– with lowered suspension ^{OE}	max 1363 mm, measured to top of windscreen in lowest position, at DIN unladen weight
Width of motorcycle	890 mm, without mounted parts 940 mm, with mirrors
Front-seat height	840 mm, without rider at unladen weight
– with low rider's seat ^{OE}	820 mm, without rider at unladen weight
– with lowered suspension ^{OE}	790 mm, without rider at unladen weight

Rider's inside-leg arc, heel to heel	1894 mm, without rider at unladen weight
– with low rider's seat ^{OE}	1859 mm, without rider at unladen weight
– with lowered suspension ^{OE}	1790 mm, without rider at unladen weight

Weights

Vehicle kerb weight	228 kg, DIN unladen weight, ready for road, 90 % load of fuel, without optional extras (OE)
Permissible gross weight	444 kg
Maximum payload	216 kg

Riding specifications

Starting capability on uphill gradients (at permissible gross weight)	max 20°
Top speed	approx. 250 km/h
– with reduction of power ^{OE}	approx. 211 km/h

Service

BMW Motorrad Service	202
BMW Motorrad Mobility services	202
Maintenance work	202
Maintenance schedule	205
Confirmation of maintenance work	206
Confirmation of service	220

BMW Motorrad Service

BMW Motorrad has an extensive network of dealerships in place to look after you and your motorcycle in more than 100 countries. Authorised BMW Motorrad dealerships have the technical information and the technical know-how to carry out reliably all maintenance and repair work on your BMW.

You can locate your nearest authorised BMW Motorrad dealership by visiting our website:

bmw-motorrad.com



WARNING

Maintenance and repair work not in compliance with correct procedure

Risk of accident due to consequential damage

- BMW Motorrad recommends having work of this nature carried out on the vehicle by a

specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

In order to help ensure that your BMW is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your motorcycle. Have all maintenance and repair work that is carried out confirmed in the "Service" chapter in this manual. For generous treatment of claims submitted after the warranty period has expired, evidence of regular maintenance is essential.

Your authorised BMW Motorrad dealer can provide information on BMW services and the work undertaken as part of each service.

BMW Motorrad Mobility services

As owner of a new BMW vehicle, in circumstances in which assistance is required you can benefit from the protection afforded by the various BMW Motorrad mobility services (e.g. Mobile Service, breakdown service, vehicle recovery service). Your authorised BMW Motorrad dealer will be happy to provide information about the mobility services available to you.

Maintenance work

BMW pre-delivery check

Your authorised BMW Motorrad dealer conducts the BMW pre-delivery check before handing over the vehicle to you.

BMW Running-in check



Mileage until the running-in check

500...1200 km

BMW Service

The BMW Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad dealer confirms that the service work has been carried out and enters the date when the next service will be due.

Riders who cover long distances in a year might have to bring in their vehicles for service before the next scheduled date. It is to allow for these cases that a maximum odometer reading is entered as well in the confirmation of service. Servicing has to be brought forward if this odo-

meter reading is reached before the next scheduled date for the service.

The service-due indicator in the multifunction display reminds you about one month or 1000 km in advance when the time for a service is approaching, on the basis of the programmed values.

To find out more about service go to:

bmw-motorrad.com/service

The following maintenance schedule lists the scopes of maintenance work required for your vehicle:

[illegible]

Maintenance schedule

- 1** BMW Running-in check
- 2** Standard BMW service
- 3** Engine-oil change, with filter
- 4** Check valve clearance
- 5** Checking timing
- 6** Replace all spark plugs
- 7** Replacing air filter
- 8** Oil change in the telescopic forks
- 9** Change brake fluid, entire system
 - ^a annually or every 10000 km (whichever comes first)
 - ^b for the first time after one year, then every two years

Confirmation of maintenance work

BMW Motorrad Service, standard scope

The activities in the BMW Motorrad Service standard scope are listed below. The actual scope of maintenance work for your vehicle may differ.

- Performing vehicle test with BMW Motorrad diagnostic system
- Visually inspecting brake pipes, brake hoses and connections
- Checking front brake pads and brake discs for wear
- Checking brake-fluid level, front brakes
- Checking rear brake pads and brake disc for wear
- Checking brake-fluid level, rear brakes
- Checking steering-head bearing
- Checking coolant level
- Checking fastener of clutch lever fitting
- Checking clutch cable and clutch-lever play
- Lubricating clutch mechanism
- Checking and lubricating chain drive
- Checking tyre pressures and tread depth
- Checking ease of movement of side stand
- Check the lights and signalling equipment
- Function test, engine start suppression
- Final inspection and check for road safety
- Setting service-due date and service countdown distance
- Checking battery charge state
- Confirm BMW service in on-board literature

BMW Pre-delivery Check

Completed

on _____

Stamp, signature

BMW Running-in Check

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

Yes

No

BMW Motorrad Service, standard
scope☐☐

Oil change, engine, with filter

☐☐

Checking valve clearance

☐☐Checking valve timing (cylinder head
cover removed)☐☐

Renewing all spark plugs

☐☐

Renewing air cleaner insert

☐☐

Oil change in telescopic front forks

☐☐

Change brake fluid in entire system

☐☐

Notes

The table is intended as a record of maintenance and repair work, the installation of optional accessories and, if appropriate, special campaign (recall) work.

The table is intended as a record of maintenance and repair work, the installation of optional accessories and, if appropriate, special campaign (recall) work.

[illegible]

Item	Odometer reading	Date

Appendix

Certificate for Electronic Immobiliser	224
--	-----

FCC Approval

Ring aerial in the ignition switch



To verify the authorization of the ignition key, the electronic immobilizer exchanges information with the ignition key via the ring aerial.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. ◀

Approbation de la FCC

Antenne annulaire présente dans le commutateur d'allumage



Pour vérifier l'autorisation de la clé de contact, le système d'immobilisation électronique échange des

informations avec la clé de contact via l'antenne annulaire.

Le présent dispositif est conforme à la partie 15 des règles de la FCC. Son utilisation est soumise aux deux conditions suivantes :

- (1) Le dispositif ne doit pas produire d'interférences nuisibles, et
- (2) le dispositif doit pouvoir accepter toutes les interférences extérieures, y compris celles qui pourraient provoquer une activation inopportune.



Toute modification qui n'aurait pas été approuvée expressément par l'organisme responsable de l'homologation peut annuler l'autorisation accordée à l'utilisateur pour utiliser le dispositif. ◀

A

Abbreviations and symbols, 6

ABS

ABS Pro display, 22

Control, 15

Engineering details, 114

operate, 52

Self-diagnosis, 77

Warning light, 30

Accessories

General instructions, 166

Socket for optional
accessories, 177

Actuality, 7

Anti-theft alarm

Activating, 50

Adjusting, 51

Deactivating, 50

Indicator light, 18

operate, 50

Warning light, 33

ASC

Control, 15

Engineering details, 117

operate, 53

Self-diagnosis, 78

Switching off, 53

switching on, 54

Warning light, 31

Average values

Resetting, 49

B**Battery**

Charging battery when
connected, 157

Charging battery when
disconnected, 157

connecting to motorcycle, 159

disconnecting from

motorcycle, 158

Installation, 160

Maintenance instructions, 156

Position on the vehicle, 14

Removal, 159

Technical data, 197

Beam throw

adjusting, 65

Brake fluid

Checking fluid level, front, 133

Checking fluid level, rear, 134

Reservoir, front, 13

Reservoir, rear, 13

Brake pads

Checking front, 132

Checking rear, 133

Running in, 80

Brakes

ABS Pro in detail, 116

ABS Pro depending on riding
mode, 83

Adjusting handlebar lever, 66

Checking function, 131

Safety instructions, 82

Technical data, 194

C**Care**

Body panels, 183

Care products, 182

Chrome, 183

Paint, 183

Plastics, 183

- Preserving paintwork, 184
- Radiator, 183
- Rubber, 183
- Washing the vehicle, 182
- Windscreen, 183
- Cases
 - operate, 167
- Chain
 - Adjusting tension, 163
 - Checking tension, 163
 - Checking wear, 164
 - Lubricating, 163
- Checklist, 75
- Clock
 - Adjusting, 52
- Clutch
 - Adjusting play, 136
 - Checking function, 135
 - Checking play, 135
 - Technical data, 191
- Coding plug
 - install, 58
- Confirmation of maintenance work, 206
- Coolant
 - Checking fill level, 136
 - Fill-level indicator, 13
 - Topping up, 137
 - Warning light for overheating, 27
- Coolant temperature
 - Multifunction display, 21
 - too high, 27
- Cruise-control system
 - operate, 59
- D**
- Damping
 - Adjuster, front, 11
 - Adjuster, rear, 13
 - adjusting, with
 - Dynamic ESA, 55
 - adjusting, without
 - Dynamic ESA, 68
- Date
 - adjusting, 35
- Daytime riding lights
 - automatic, 42
 - automatic or manual, 42
 - manual, 44
 - manual with automatic switched on, 44
- Diagnostic connector
 - Loosen, 162
 - secure, 162
- Dimensions
 - Technical data, 198
- Drop sensor
 - Telltale light, 30
- DTC
 - Control, 15
 - Engineering details, 117
 - operate, 54
 - Self-diagnosis, 78
 - Switching off, 54
 - switching on, 55
 - Warning light, 32
- Dynamic ESA
 - Control, 15
 - Engineering details, 118
 - operate, 55

E

Electrics

- Technical data, 197

Emergency off switch (kill switch)

- Operation, 40

- Position on the vehicle, 17

Emissions warning light, 28

Engine

- Indicator light for engine control, 28

- Malfunction indicator lamp, 28

- Parking, 39

- starting, 75

- Technical data, 190

- Warning light for engine electronics, 27

Engine oil

- Checking fill level, 130

- Fill-level indicator, 11

- Oil filler neck, 13

- Technical data, 189

- Topping up, 131

Equipment, 7

F

Frame

- Technical data, 192

Front-wheel stand

- fitting, 129

Fuel

- Fuel grade, 85

- refuelling, 85

- Technical data, 189

Fuel reserve

- Range, 36

- Warning light, 35

Fuses

- Position on the vehicle, 14

- replacing, 161

- Technical data, 197

G

General views

- Indicator and warning lights, 20

- Instrument panel, 18

- Left multifunction switch, 15

- Left side of vehicle, 11

- Multifunction display, 21

- Right multifunction switch, 17

- Right side of vehicle, 13

- SETUP EQUIPMENT, 94

- SETUP MENU, 90

- SETUP RACETRACK, 108

- Underneath the seat, 14

H

Hazard warning flashers

- Control, 15

- operate, 45

Headlight

- Adjusting headlight beam throw, 65

- Adjustment for driving on left/ driving on right, 64

- Headlight beam throw and spring preload, 64

- Headlight courtesy delay feature, 41

Heated handlebar grips

- Control, 17

- operate, 61

Horn, 15

I

Ignition

- Switching off, 39
- Switching on, 38

Immobiliser

- Reserve key, 39
- Warning, 27

Instrument panel

- Gearshift light, 18
- Indicator and warning light fields, 18
- Overview, 18
- Photosensor, 18
- Rev. counter, 18

J

Jump-start, 155

K

Keys, 38

L

Laptimer

- Clearing all saved data, 105
- Delete the lap, 106
- Display layout, 108

Ending timing, 100

individualising, 99

Infrared receiver, 99

Interrupting timing, 100

operate, 97

Operation, 97

RACE INFO, 102

Starting timing, 99

Lighting

High-beam headlight, 147

Low-beam headlight, 147

Replacing number-plate light, 153

Replacing rear light, 153

Side light, left, 149

Side light, right, 150

Technical data, 197

Turn indicators, 151

Warning light for bulb fault, 29

Lights

Control, 15

Headlight courtesy delay feature, 41

Headlight flasher, operating, 41

High-beam headlight,

operating, 41

Low-beam headlight,

operating, 40

Parking lights, operating, 40, 41

Using daytime riding light, 42

Lowered suspension

Restrictions, 72

Luggage

Instructions for loading, 72

M

Maintenance

General instructions, 128

Maintenance schedule, 205

Maintenance intervals, 202

Mirrors

adjusting, 64

Mobility services, 202

Motorcycle

care, 181

cleaning, 181

Lashing, 87

Laying up, 184

Parking, 84

- Multi-Controller
 - Control, 15
- Multifunction display, 18
 - Control, 15
 - Exiting SETUP mode, 93
 - LAPTIMER Operation, 97
 - Overview, 21
 - RACE INFO, 102
 - Select display, 47
 - Selecting submenu, 91
 - Setting parameters, 92
 - SETUP EQUIPMENT, 94
 - SETUP MENU, 90
 - SETUP RACETRACK, 108
- Multifunction switch
 - General view, left side, 15
 - General view, right side, 17

N

- Navigation device
 - Control, 15
 - Installation, 172
 - Removal, 173

O

- Odometer and tripmeters
 - reset, 49

P

- Paint care, 183
- Parking, 84
- Parking light, 41
- Power socket
 - Notes on use, 166
- Pre-Ride-Check, 76

R

- Race track, 89
 - LAPTIMER Operation, 97
- Rear-wheel drive
 - Technical data, 192
- Rear-wheel stand
 - fitting, 129
- Refuelling, 85
 - Fuel grade, 85
- Rev. counter, 18
- Rider's Manual
 - Position on the vehicle, 14

Riding mode

- Adjusting, 56
 - Control, 17
 - deactivatable suspension and running-gear control systems, 124
 - DYNAMIC, 122
 - DYNAMIC PRO, 123
 - Engineering details, 119
 - RAIN, 120
 - ROAD, 121
- ## Riding specifications
- Technical data, 199
- ## Running gear
- Technical data, 193
- ## Running in, 79

S

- Safety instructions
 - for brakes, 82
 - For riding, 72

- Seat
 - install, 62
 - Installation, 62
 - Lock, 11
 - remove, 62
- Service, 202
- Service-due indicator, 35
- SETUP
 - EQUIP:UNITS, 92
 - EQUIPMENT, 94
 - MENU, 90
- Shift assistant
 - Engineering details, 125
 - Gear not trained, 33
 - Riding, 81
- Shifting gear
 - Gearshift light, 80
- Spark plugs
 - Technical data, 197
- Speedometer, 21

- Spring preload
 - Adjuster, front, 11
 - Adjuster, rear, 11
 - adjusting, with
 - Dynamic ESA, 55
 - adjusting, without
 - Dynamic ESA, 66
- Starting, 75
 - Control, 17
- Steering lock
 - Locking, 38

T

- Technical data
 - Battery, 197
 - Brakes, 194
 - Chassis and suspension, 193
 - Clutch, 191
 - Dimensions, 198
 - Electrical system, 197
 - Engine, 190
 - Engine oil, 189
 - Final drive, 192
 - Frame, 192
 - Fuel, 189

- Fuses, 197
- Lighting, 197
- Riding specifications, 199
- Spark plugs, 197
- Standards, 7
- Transmission, 191
- Weights, 199
- Wheels and tyres, 195
- Telltale lights, 18
 - Overview, 20
- Threaded fasteners, 187
- Toolkit
 - Contents, 128
 - Position on the vehicle, 14
- Topcase
 - operate, 170
- Torques, 187
- Traction control
 - ASC, 117
 - DTC, 117
- Transmission
 - Technical data, 191

- Trim panels
 - Installing side panel, 154
 - Remove the side panel, 153
- Troubleshooting chart, 186
- Turn indicators
 - Control, 15
 - operate, 46
- Type plate
 - Position on the vehicle, 13
- Tyres
 - Checking inflation pressure, 137
 - Checking tread depth, 137
 - Pressures, 196
 - Recommendation, 138
 - Running in, 80
 - Table of tyre pressures, 11
 - Technical data, 195
 - Top speed, 73

V

- Vehicle
 - Restoring to use, 184
- Vehicle Identification Number
 - Position on the vehicle, 13

- VIN
 - Vehicle Identification Number, 13

W

- Warning lights, 18
 - Overview, 20
- Warnings
 - ABS, 30
 - Anti-theft alarm, 33
 - ASC, 31
 - Bulb faulty, 29
 - Coolant temperature, 27
 - Drop sensor, 30
 - DTC, 32
 - Electronic immobiliser, 27
 - Engine control unit, 28
 - Engine electronics, 27
 - Fuel reserve, 35
 - Gear not trained, 33
 - Malfunction indicator lamp, 28
 - Mode of presentation, 22
 - Overtemperature, 27

- Rear light and bulbs for side lights faulty, 29
- Warnings, overview, 23
- Weights
 - Payload table, 11
 - Technical data, 199
- Wheels
 - Change of size, 138
 - Checking rims, 137
 - Installing front wheel, 141
 - Installing the rear wheel, 145
 - Removing front wheel, 139
 - Removing rear wheel, 143
 - Technical data, 195
- Windscreen
 - adjusting, 65

Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

Original rider's manual, printed in Germany.

© 2016 Bayerische Motoren
Werke Aktiengesellschaft
80788 Munich, Germany
Not to be reproduced by any
means whatsoever, wholly or
in part, without the written permission of BMW Motorrad, After Sales.

Fuel

Tyre pressure

Tyre pressure, front	2.5 bar
Tyre pressure, rear	2.9 bar

BMW recommends ADVANTEC
ORIGINAL BMW ENGINE OIL

