



Rocket

MODEL A75



SPARE PARTS LIST

FROM ENGINE AND FRAME Nos. A75R-101 CATALOGUE No. 00-5141

Revised January, 1969

THIS LIST SUPERSEDES ALL PREVIOUS ISSUES

CATALOGUE OF



FOR MODEL A75

ROCKET 3

ISSUED BY

B.S.A. MOTOR CYCLES LTD.

Service Department, Armoury Road,
Birmingham 11, England.

TELEPHONE
TELEGRAMS

021-772-2381
"SELMOTO" BIRMINGHAM

WESTERN U.S.A.:

B.S.A. MOTORCYCLES—WESTERN
2745 E. HUNTINGTON DRIVE,
DUARTE, CALIFORNIA 91010.

EASTERN U.S.A.:

B.S.A. INCORPORATED
639 PASSAIC AVENUE,
NUTLEY, NEW JERSEY, 07110.

Please Note!

Replacement parts or accessories must be of B.S.A. origin or as approved by B.S.A. Motor Cycles Ltd.

In this respect your attention is drawn to the Terms and Conditions of B.S.A. Guarantee.

STEERING LOCK AND KEY

Lock No.	Key No.	Lock No.	Key No.	Lock No.	Key No.
EJR 1	19-5151	EJR 18	19-5168	EJR 35	19-5185
EJR 2	19-5152	EJR 19	19-5169	EJR 36	19-5186
EJR 3	19-5153	EJR 20	19-5170	EJR 37	19-5187
EJR 4	19-5154	EJR 21	19-5171	EJR 38	19-5188
EJR 5	19-5155	EJR 22	19-5172	EJR 39	19-5189
EJR 6	19-5156	EJR 23	19-5173	EJR 40	19-5190
EJR 7	19-5157	EJR 24	19-5174	EJR 41	19-5191
EJR 8	19-5158	EJR 25	19-5175	EJR 42	19-5192
EJR 9	19-5159	EJR 26	19-5176	EJR 43	19-5193
EJR 10	19-5160	EJR 27	19-5177	EJR 44	19-5194
EJR 11	19-5161	EJR 28	19-5178	EJR 45	19-5195
EJR 12	19-5162	EJR 29	19-5179	EJR 46	19-5196
EJR 13	19-5163	EJR 30	19-5180	EJR 47	19-5197
EJR 14	19-5164	EJR 31	19-5181	EJR 48	19-5198
EJR 15	19-5165	EJR 32	19-5182	EJR 49	19-5199
EJR 16	19-5166	EJR 33	19-5183	EJR 50	19-5200
EJR 17	19-5167	EJR 34	19-5184		

PISTON CHART

Compression Ratio	PISTON COMPLETE					Number Per Set
	Standard	+.005"	+.010"	+.020"	+.040"	
9 : 1	70-9741	70-9761	70-9762	70-9763	70-9764	3
	COMPRESSION RINGS					6
	70-6838	70-9015	70-9016	70-9017	70-9018	
	SCRAPER RINGS					3
	70-9739	70-9765	70-9766	70-9767	70-9768	
Set No.	00-3466	00-3467	00-3468	00-3469	00-3470	Rings per set (9)

CARBURETTORS AND SETTINGS

Location	B.S.A. Number	Amal Number	Main Jet	Pilot Jet	Throttle Slide	Needle Jet	Needle Position	Air Cable
Right-hand	19-2408	R.626-14	150	622-107	3	.106	2	Long
Centre	19-2415	R.626-16	150	622-107	3	.106	2	Medium
Left-hand	19-2409	L.626-15	150	622-107	3	.106	2	Short

ASSEMBLIES COMPLETE

<i>Spares No.</i>	<i>Description</i>
00-3172	TOP OVERHAUL GASKET SET.
00-3315	FULL OVERHAUL GASKET SET.
00-3466	PISTON RING SET (standard).
00-3467	PISTON RING SET (.005" oversize).
00-3468	PISTON RING SET (.010" oversize).
00-3469	PISTON RING SET (.020" oversize).
00-3470	PISTON RING SET (.040" oversize).
70-7951	ENGINE UNIT, less carburettors and exhaust system, plus oil pipes and pressure switch.
70-8781	CYLINDER HEAD ASSEMBLY.
70-6529	CYLINDER BLOCK ASSEMBLY.
70-9740	CONNECTING ROD ASSEMBLY.
70-8778	CRANKSHAFT ASSEMBLY.
70-7869	CRANKCASE COMPLETE, drive-side, centre and timing-side.
70-9001	OIL PUMP COMPLETE.
19-7800	CLUTCH ASSEMBLY COMPLETE.
57-3871	PRIMARY DRIVE SHOCK ABSORBER ASSEMBLY.
82-9773	FRAME COMPLETE.
82-9963	SWINGING ARM COMPLETE.
97-2672	FRONT FORK ASSEMBLY COMPLETE.
37-3312	FRONT WHEEL COMPLETE, with spindle and bearings, less brake parts.
37-3461	FRONT BRAKE ANCHOR PLATE ASSEMBLY.
37-3317	FRONT HUB COMPLETE, with spindle and bearings, less brake parts.
37-3456	REAR WHEEL COMPLETE, with spindle and bearings, less brake parts.
37-3457	REAR HUB COMPLETE, with spindle and bearings, less brake parts.
37-1411	REAR BRAKE ANCHOR PLATE ASSEMBLY.

INDEX

	<i>Page</i>
CYLINDER HEAD, ROCKER BOXES, EXHAUST PIPES	8 - 11
CYLINDER, PISTONS AND CRANKSHAFT	12 - 13
CRANKCASE AND TIMING GEARS	14 - 17
INNER PRIMARY COVER, OIL PUMP AND GEARS	18 - 19
CLUTCH	20 - 21
PRIMARY CASE OUTER COVER, CHAIN TENSIONER, CLUTCH CONTROL ..	22 - 23
GEARBOX	24 - 25
GEARBOX COVER, GEARCHANGE AND KICKSTART CRANK	26 - 27
FRAME	28 - 29
SWINGING ARM, CENTRE STAND, PROP STAND	30 - 31
STEERING HEAD	32 - 33
FRONT FORKS	34 - 35
FRONT WHEEL	36 - 37
REAR WHEEL	38 - 39
HANDRAIL, MUDGUARDS, CHAINGUARD	40 - 41
PETROL TANK, HANDLEBAR AND CONTROLS	42 - 45
TWINSEAT, SIDECOVERS, SILENCERS	46 - 47
TOOLBOX, BATTERY CARRIER, AIR CLEANER	48 - 49
OIL TANK AND OIL COOLER	50 - 51
ELECTRICAL EQUIPMENT	52 - 55
CARBURETTORS AND THROTTLE LINKAGE	56 - 57
TOOL KIT	58 - 59

Plate 1

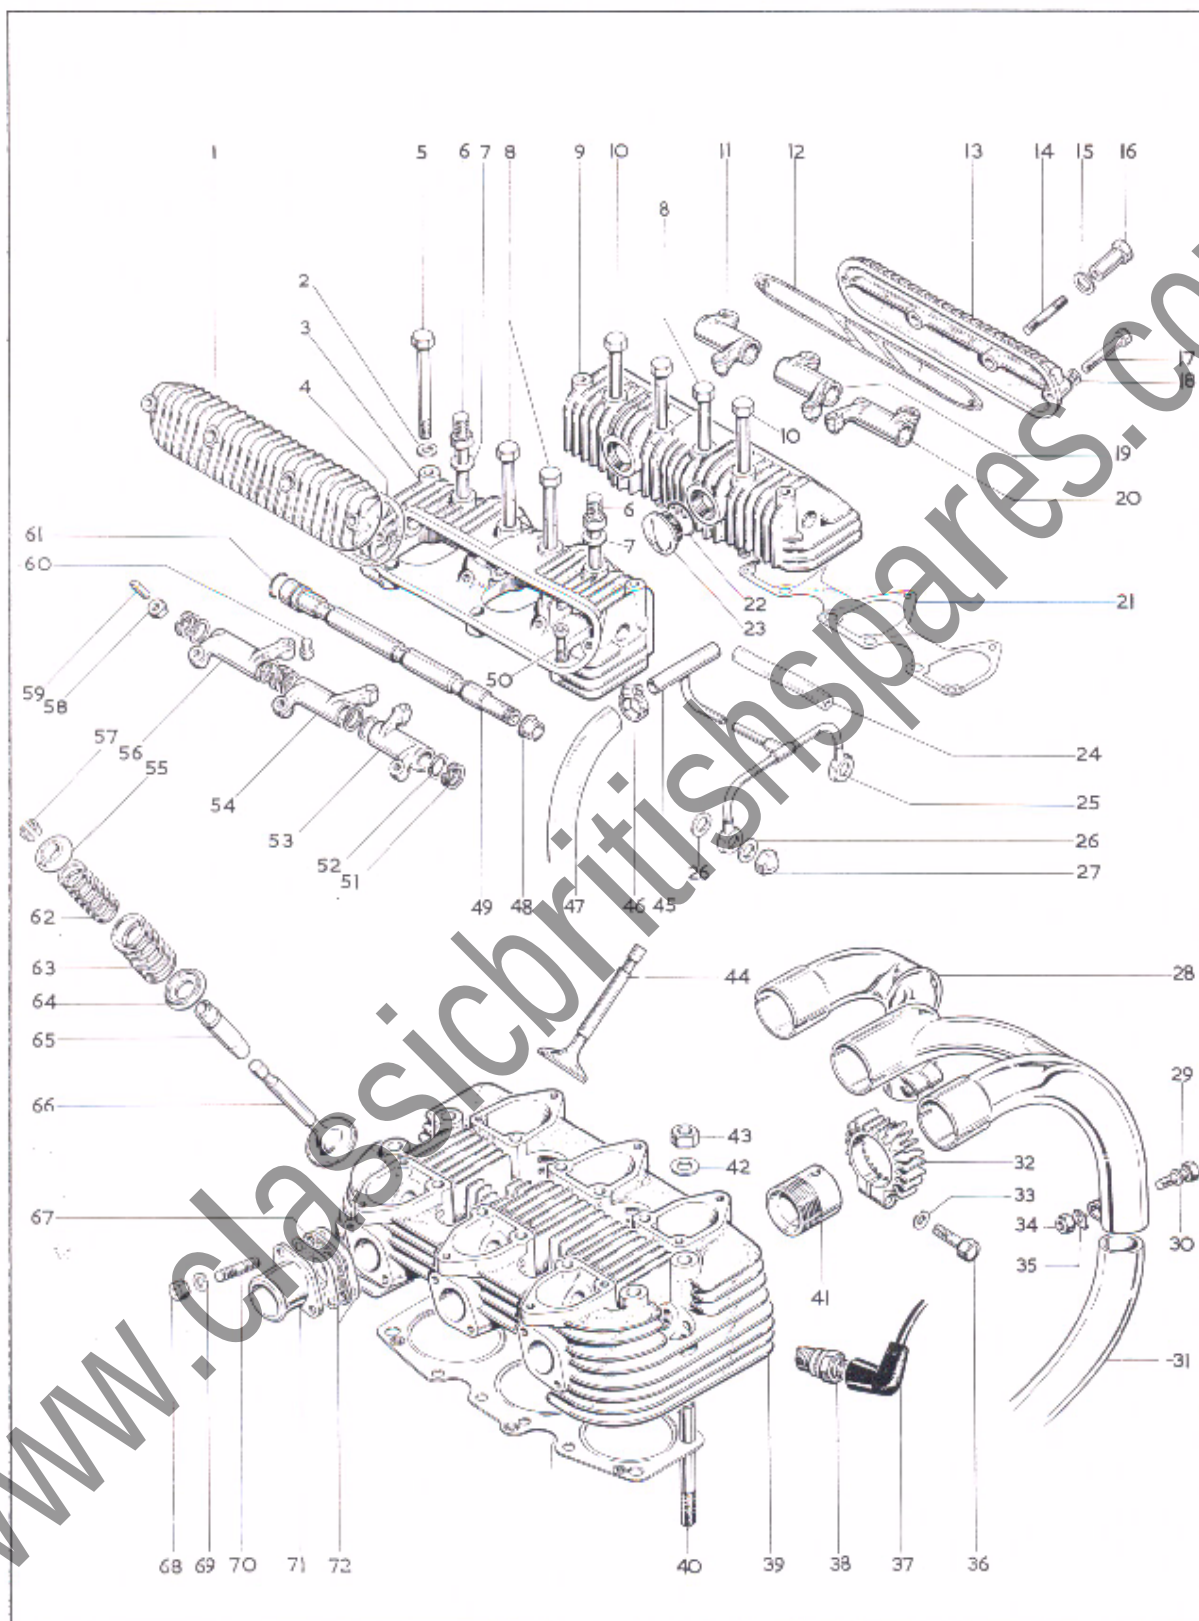


Plate 1

CYLINDER HEAD, ROCKER BOXES, EXHAUST PIPES

Plate Ref.	Spares Number	Description	Per Set
1.	70-6563	Inlet rocker box cover	4
2.	54-9081	Washer, for bolt 14-6211	4
3.	70-6561	Inlet rocker box	4
4.	70-6565	Rocker box cover gasket	4
5.	14-6211	Bolt, rocker box to cylinder head ($\frac{1}{4}$ " U.N.C. $\times$ 3")	4
6.	71-280*	Bolt, rocker box to barrel steady stay ($\frac{3}{8}$ " $\times$ $\frac{5}{16}$ " U.N.F. $\times$ 4 $\frac{1}{2}$ ")	2
7.	70-9240	Washer for bolt lines 6, 8 and 10 ($\frac{5}{8}$ " $\times$ 21/64" $\times$ 3/32")	8
8.	70-8820*	Bolt, rocker box to barrel (short)	4
9.	70-6562	Exhaust rocker box	2
10.	70-8819*	Bolt, rocker box to barrel (long)	2
11.	70-9782	Exhaust rocker, drive-side	4
12.	70-6565	Rocker box cover gasket	4
13.	70-6564	Exhaust rocker box cover	4
14.	14-1401	Stud (long), rocker box cover ($\frac{1}{4}$ " U.N.C./U.N.F. $\times$ 1")	4
15.	70-9239	Washer, cover fixing nut (9/16" $\times$ 25/64" $\times$ $\frac{1}{16}$ ")	4
16.	70-9237	Sleeve nut, cover fixing	4
17.	14-201	Bolt, rocker box cover ($\frac{1}{4}$ " U.N.F. $\times$ 1")	4
18.	54-9081	Washer, for bolt line 17	4
19.	70-9779	Exhaust rocker, centre	4
20.	70-9780	Exhaust rocker, timing-side	4
21.	70-8773	Rocker box gasket	2
22.	70-8782	"O" ring, inspection cap	4
23.	57-2166	Rocker box inspection cap	4
24.	70-6353	Connecting tube, oil feed pipes	4
25.	70-9271	Rocker oil pipe, rocker spindle	4
26.	40-159	Washer, oil pipe banjo	2
27.	21-550	Domed nut, oil pipe to rocker spindles ($\frac{3}{8}$ " U.N.F.)	2
28.	70-7990	Exhaust manifold	2
29.	14-205	Bolt, exhaust pipe to manifold ($\frac{1}{4}$ " U.N.F. $\times$ 1 $\frac{1}{2}$ ")	4
30.	54-9081	Washer, exhaust pipe to manifold bolt	4
31.	70-9460	Exhaust pipe, left-hand	3
31.	70-9461	Exhaust pipe, right-hand	3
32.	70-6743	Finned collar, exhaust pipe	3
33.	70-8860	Spherical washer, finned collar	2
34.	14-1201	Nut, for bolt line 29 ($\frac{1}{4}$ " U.N.F.)	4
35.	70-9626	Cap, for bolt line 29	3
36.	70-6744	Bolt, finned collar ($\frac{5}{16}$ " U.N.F. $\times$ 1 $\frac{3}{16}$ ")	3
37.	19-7638	Spark plug cover (Ripault)	3
38.	19-7606	Spark plug (Champion N3)	3


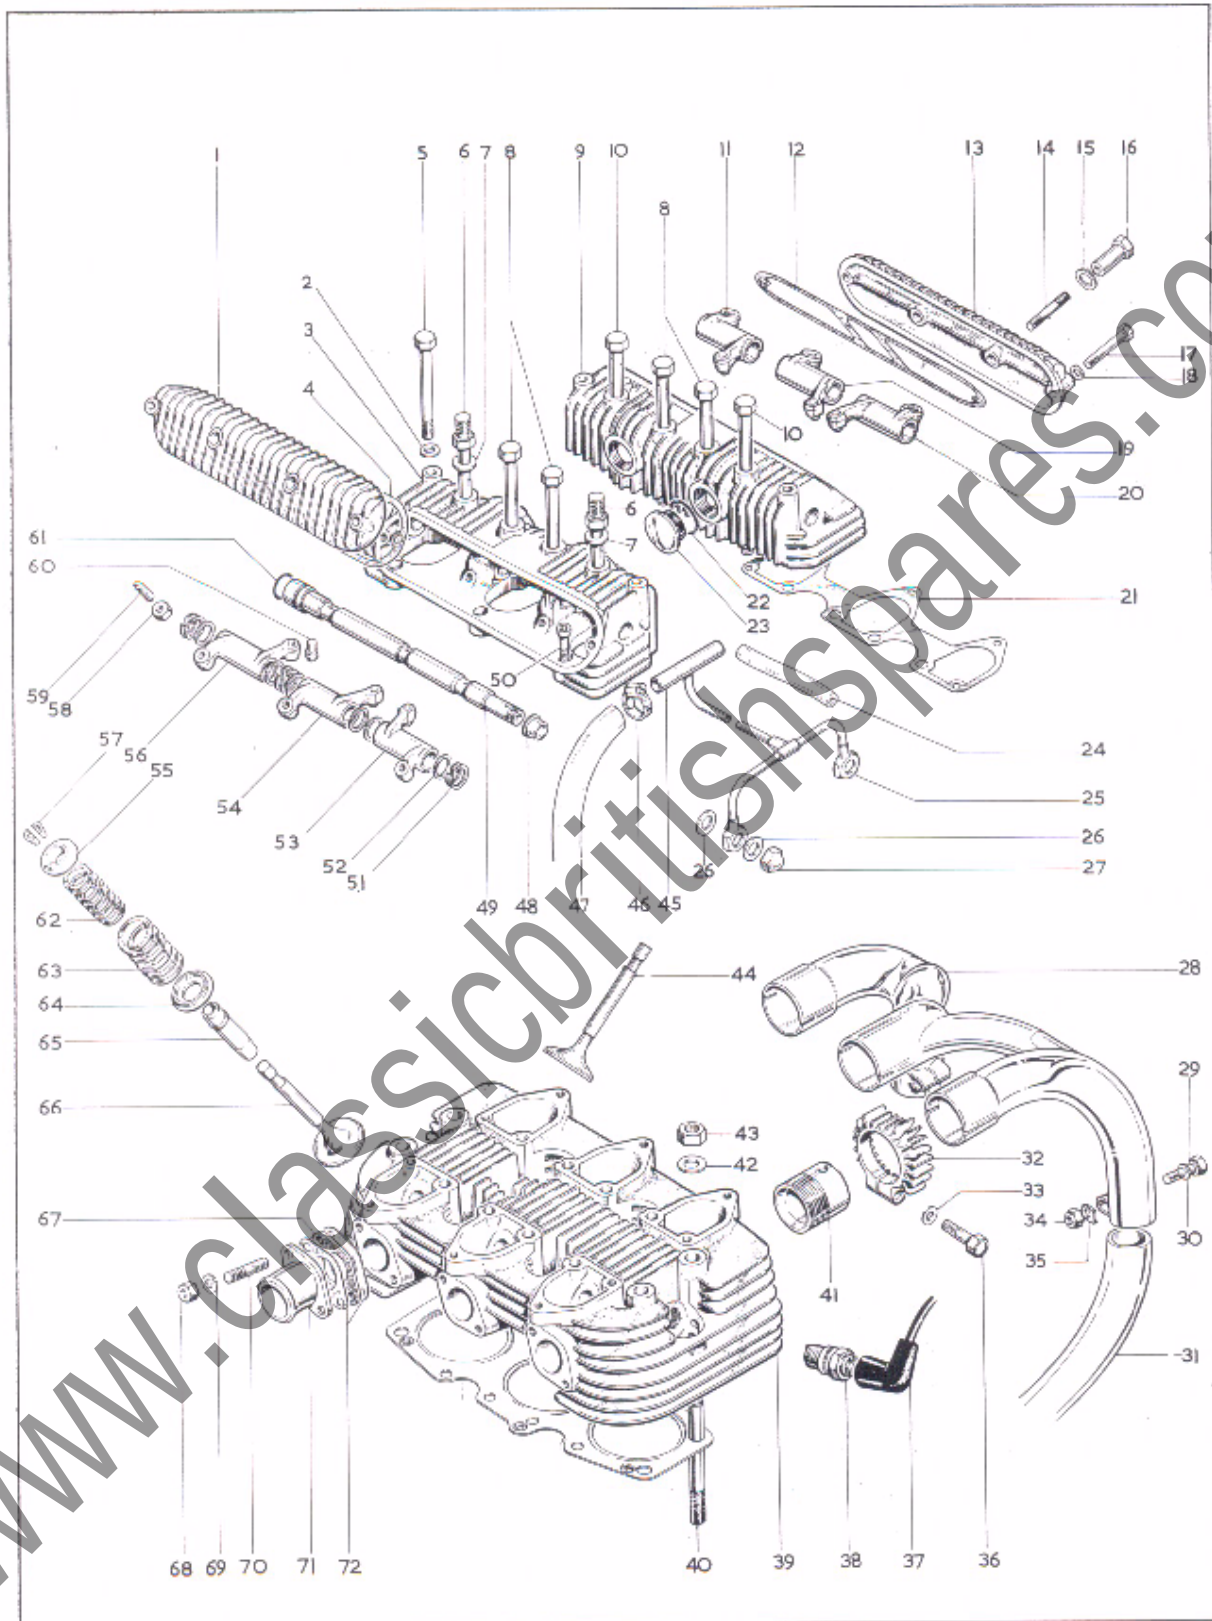


Plate 1—contd.

CYLINDER HEAD, ROCKER BOXES, EXHAUST PIPES

Plate Ref.	Spares Number	Description	Per Set
39.	70-8781	Cylinder head with fixed fittings	
30.	21-686*	Stud, head to barrel ($\frac{3}{8}$ " U.N.C./U.N.F. $\times 4\frac{3}{4}$ ")	4
41.	70-9510	Exhaust pipe adaptor	3
42.	2-861	Washer, head to barrel stud ($\frac{3}{8}$ " $\times \frac{3}{4}$ " $\times 3/32$ ")	4
43.	14-303	Nut, head to barrel stud ($\frac{3}{8}$ " U.N.F.)	4
44.	70-6423	Exhaust valve	3
45.	70-9274	Rocker oil pipe, engine to cooler	
46.	60-702	Clip, flexible oil pipe to rockers	2
47.	70-8905	Flexible oil pipe to rockers	
48.	70-6018	Bush, rocker spindle (timing-side)	2
49.	70-9558	Rocker spindle assembly	2
50.	14-7004	Screw, rocker box to cylinder head ($\frac{1}{4}$ " U.N.C. $\times \frac{3}{4}$ ")	6
51.	40-156	Spring washer, rocker spindle ($\frac{3}{4}$ " $\times 33/64$ " $\times 1/32$ ")	6
52.	40-158	Washer, rocker spindle ($\frac{1}{2}$ ")	12
53.	70-9779	Inlet rocker, timing-side	
54.	70-9780	Inlet rocker (centre)	
55.	70-8720	Top collar, valve spring	6
56.	70-9781	Inlet rocker, drive-side	
57.	40-167	Split collet, valve spring	12
58.	14-402	Adjusting pin nut, rocker lever ($\frac{1}{8}$ " U.N.F.)	6
59.	70-8783	Adjusting pin, rocker lever	6
60.	70-7651	Rocker ball pin	6
61.	75-124	"O" ring, drive-side bush	2
62.	70-8787	Valve spring (inner)	6
63.	70-8788	Valve spring (outer)	6
64.	70-8789	Cup, valve spring (bottom)	6
65.	70-6420	Valve guide	6
66.	70-6422	Inlet valve	3
67.	70-8981	Stub insulating washer (Tufnol)	3
68.	14-301	Nut, stub to cylinder head ($\frac{1}{4}$ " U.N.F.)	6
69.	40-2705	Spring washer, stub to cylinder head ($17/64$ " $\times 15/32$ " $\times \frac{1}{16}$ ")	6
70.	21-557	Stud, stub to cylinder head ($\frac{1}{4}$ " U.N.F./U.N.C. $\times 1-5/32$ ")	6
71.	70-7983	Stub, cylinder head	3
72.	70-8784	Gasket, carburettor adaptor	6

*Special material: 6.—EN16. 8.—EN16. 10.—EN16. 40.—EN8.

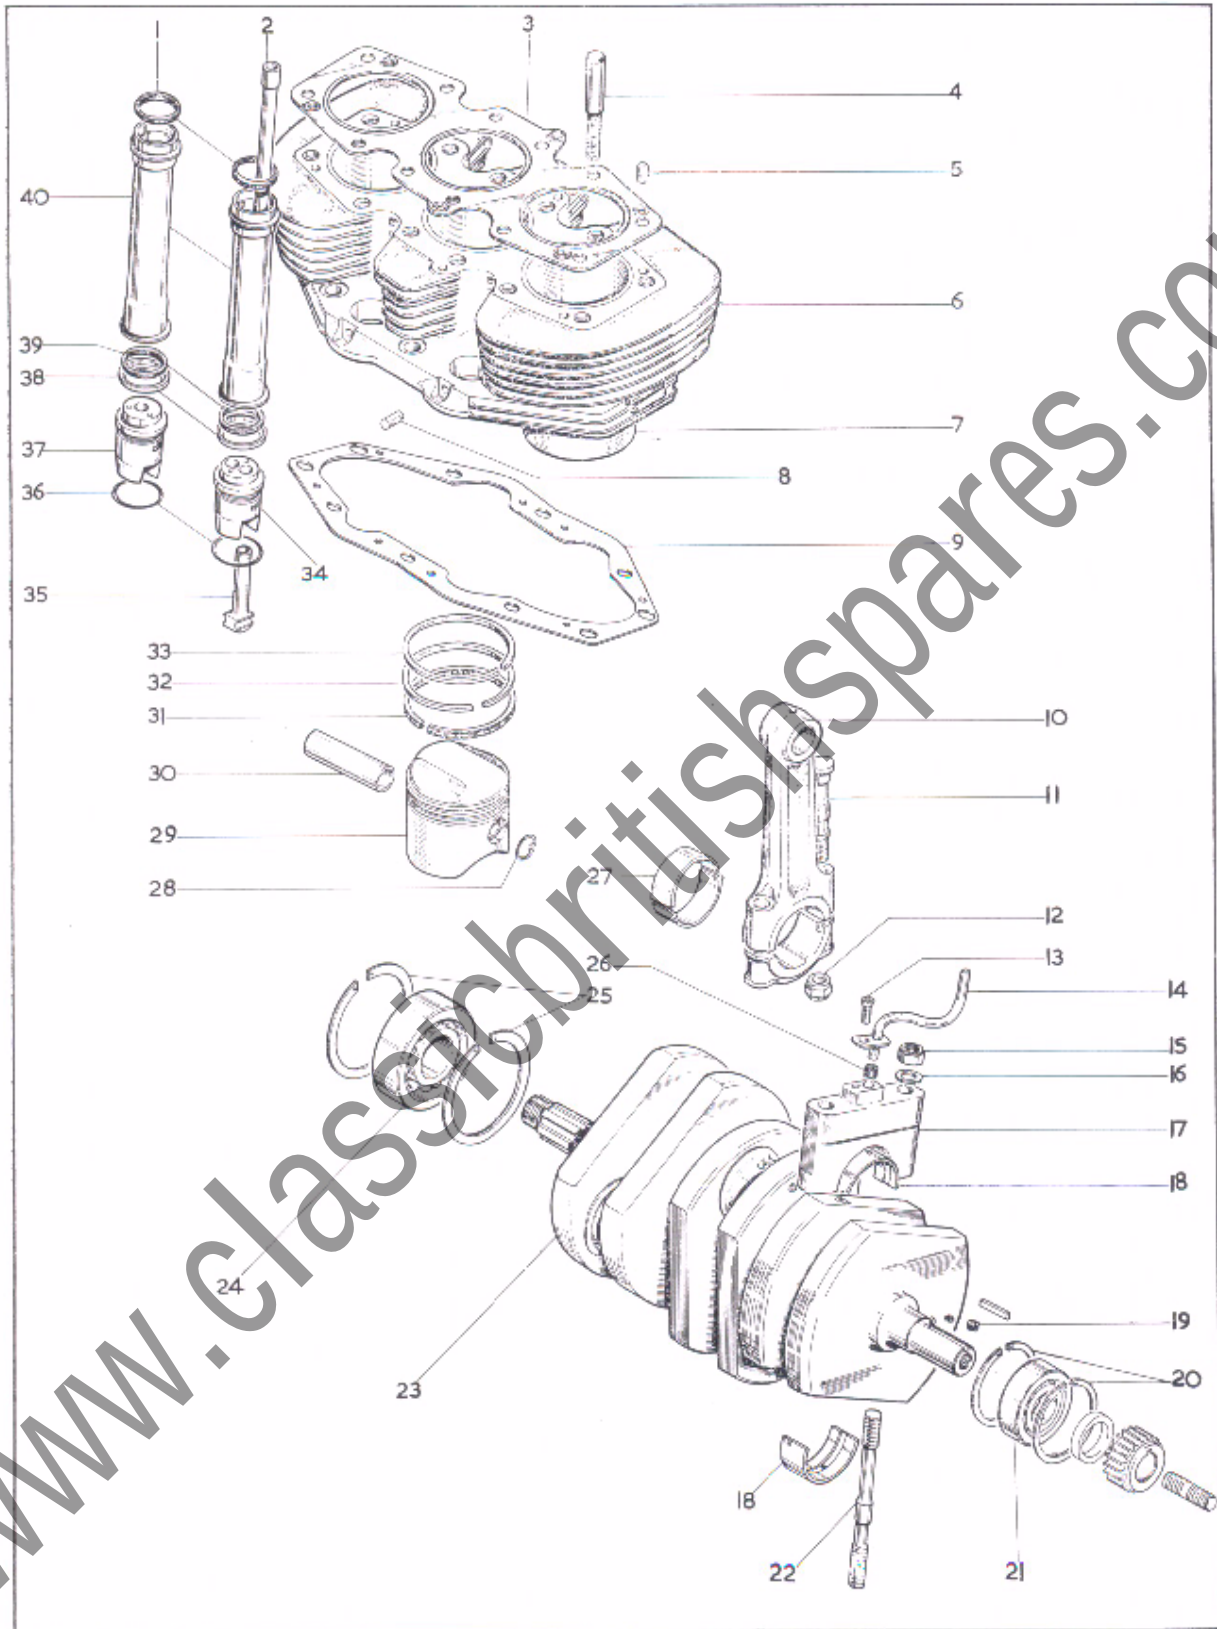


CYLINDER, PISTONS AND CRANKSHAFT

Plate Ref.	Spares Number	Description	Per Set
1.	70-4752	Joint washer, push rod cover (top)	4
2.	70-6506	Push rod, inlet and exhaust	6
3.	70-9972	Cylinder head gasket	8
4.	70-8817*	Stud, cylinder barrel	6
5.	70-1532	Dowel, cylinder head to barrel	3
6.	70-6529	Cylinder barrel assembly	4
7.	70-8914	Cylinder barrel liner	3
8.	70-9465	Dowel, tappet block	4
9.	70-6496	Cylinder base gasket	3
10.	70-9740	Connecting rod complete	6
11.	70-9727*	Connecting rod bolt ($\frac{3}{16}$ " U.N.F. $\times$ 2-37/64")	6
12.	21-549	Nut, connecting rod bolt ($\frac{3}{16}$ " U.N.F.)	6
13.	40-242	Screw, oil pipe to bearing cap (2 B.A. $\times$ 27/64" countersunk)	2
14.	70-8746	Tappet oil feed pipe, drive-side	4
14.	70-8748	Tappet oil feed pipe, timing-side	4
15.	14-1203	Locknut, bearing cap ($\frac{3}{8}$ " U.N.F.)	4
16.	54-4307	Washer, bearing cap nut	4
17.	70-7423	Main bearing cap	2
18.	70-6023	Main bearing shell (standard)	4
18.	70-9027	Main bearing shell (.010" undersize)	4
18.	70-9028	Main bearing shell (.020" undersize)	4
18.	70-9029	Main bearing shell (.030" undersize)	4
18.	70-9030	Main bearing shell (.040" undersize)	4
19.	70-6577	Crankshaft oilway plug	3
20.	70-6026	Bearing circlip, timing-side	2
21.	70-8780	Crankshaft bearing, timing-side (Hoffman R.125)	4
22.	70-8745*	Stud, main bearing cap ($\frac{3}{8}$ " U.N.F./U.N.C. $\times$ 4 $\frac{7}{8}$ ")	4
23.	70-8778	Crankshaft assembly	2
24.	70-1591	Crankshaft bearing, drive-side (Hoffman MS.11)	4
25.	70-6025	Bearing circlip, drive-side	2
26.	70-9843	Rubber seal, tappet feed pipe	4
27.	70-5998	Shell bearing, connecting rod (standard)	6
27.	70-9023	Shell bearing, connecting rod (.010" undersize)	6
27.	70-9024	Shell bearing, connecting rod (.020" undersize)	6
27.	70-9025	Shell bearing, connecting rod (.030" undersize)	6
27.	70-9026	Shell bearing, connecting rod (.040" undersize)	6
28.	70-6840	Gudgeon pin circlip	6
29.	70-9741†	Piston complete (standard)	3
30.	70-6836	Gudgeon pin	3
31.	70-9739†	Piston scraper ring (standard)	3
32.	70-6838†	Piston compression ring, centre (standard)	3
33.	70-6838†	Piston compression ring, top (standard)	3
34.	70-6509	Tappet block, timing-side	2
35.	70-8917	Inlet and exhaust tappet	6
36.	70-6560	"O" ring, tappet block	4
37.	70-6508	Tappet block, drive-side	2
38.	70-4746	Cup, push rod cover (bottom)	4
39.	70-4752	Joint washer, push rod cover (bottom)	4
40.	70-6955	Push rod cover	4


*Special material: 4.—EN8R. 11.—3AE.4042, condition $\times$ 75 ton. 22.—EN16.

†See page 5.

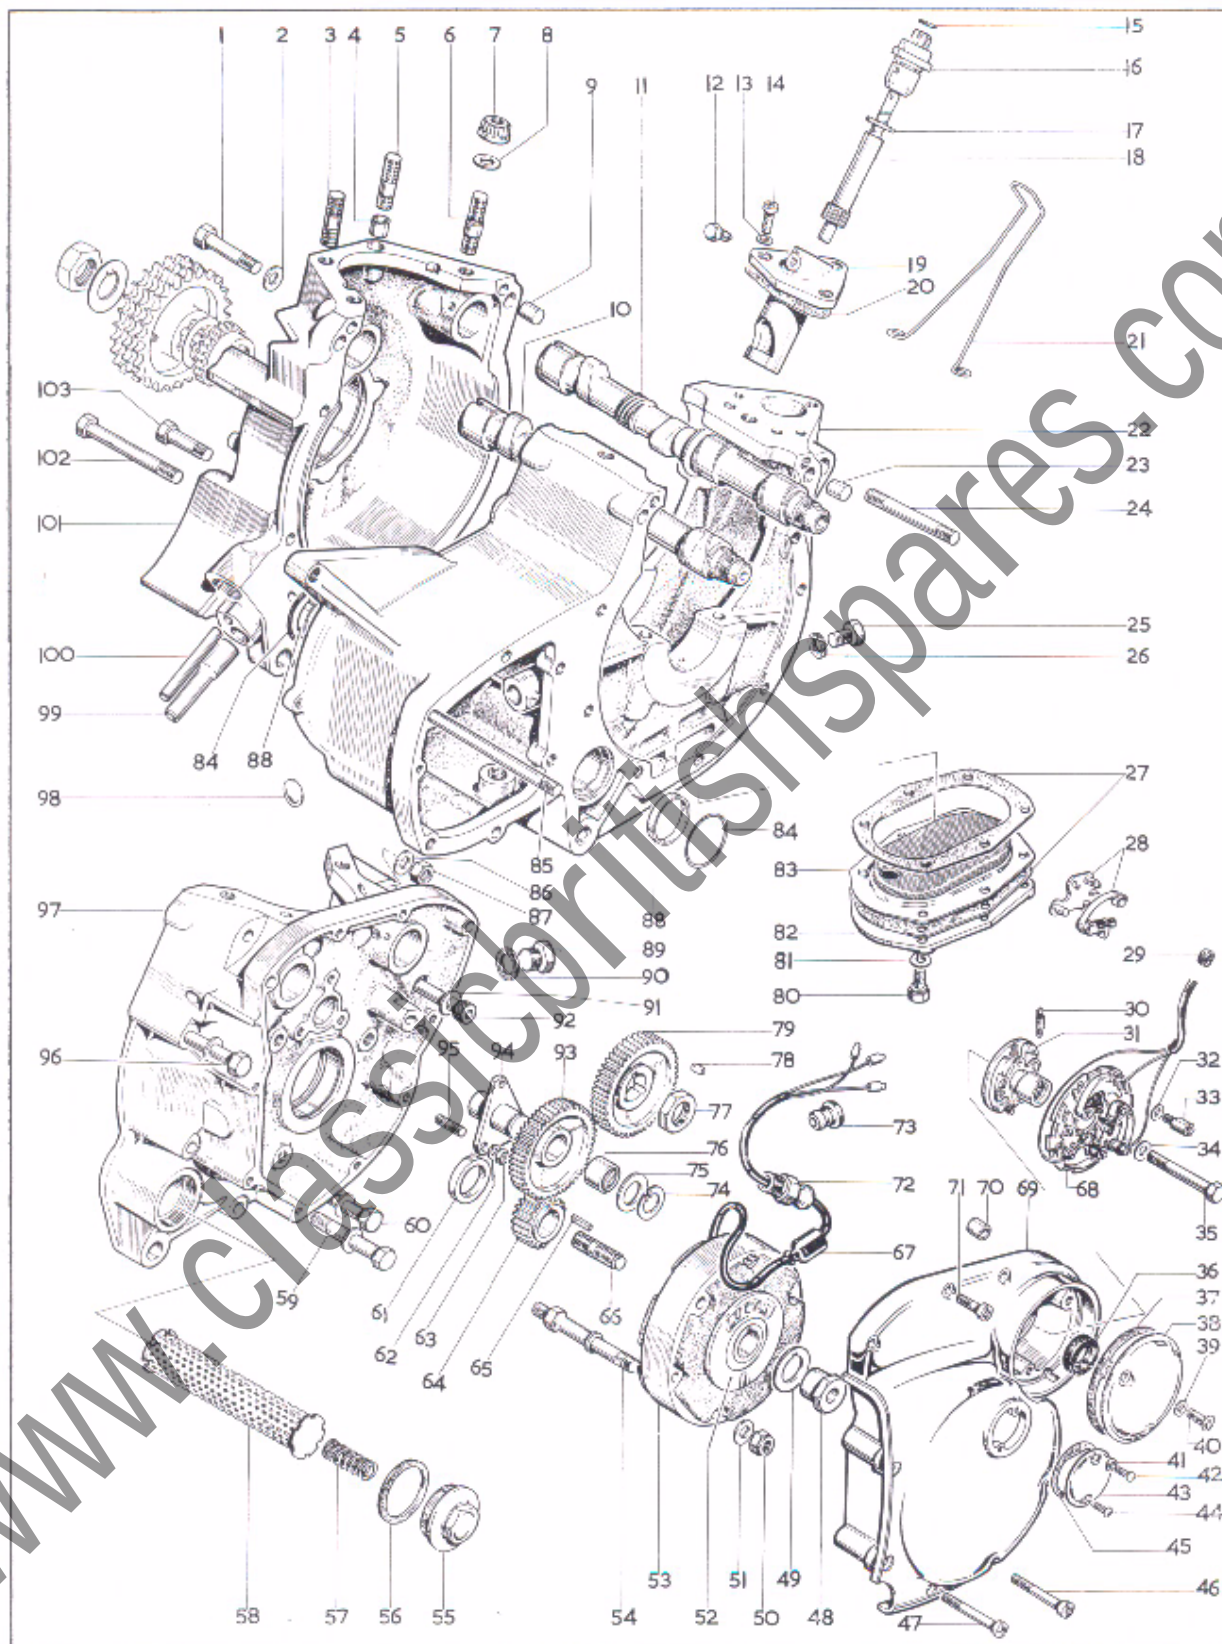

CRANKCASE AND TIMING GEARS

Plate Ref.	Spares Number	Description	Per Set
1.	14-6220	Bolt, crankcase ($\frac{5}{16}$ " U.N.C. $\times 1\frac{3}{4}$ ")	2
2.	54-55	Washer, crankcase bolt ($\frac{5}{16}$ " $\times \frac{5}{8}$ " $\times \frac{1}{16}$ ")	8
3.	21-1931*	Stud, cylinder base ($\frac{3}{8}$ " U.N.C./U.N.F. $\times 1\frac{3}{4}$ ")	4
4.	70-8751	Dowel, cylinder base	2
5.	70-8738*	Stud, cylinder base dowel ($\frac{3}{8}$ " U.N.F. $\times 1-13/16$ ")	2
6.	21-1912*	Stud, cylinder base ($\frac{3}{8}$ " U.N.C./U.N.F. $\times 1\frac{5}{8}$ ")	4
7.	21-692	Nut, cylinder base stud (12 point $\frac{3}{8}$ " U.N.F.)	10
8.	70-8770	Washer, for nut line 7	10
9.	70-8774	Dowel, drive-side	2
10.	70-8764	Inlet camshaft	
11.	70-8765	Exhaust camshaft	
12.	70-8744	Locating bolt ($\frac{1}{4}$ " U.N.C. $\times 13/32$ ")	
13.	90-262	Washer, for screw line 14	2
14.	14-6606	Screw, tachometer housing to crankcase ($\frac{1}{4}$ " U.N.C. $\times \frac{3}{4}$ ")	3
15.	70-6299	"O" ring, driven gear	
16.	70-8742	Bearing housing, tachometer drive	
17.	40-323	"O" ring, tachometer drive	
18.	70-8741	Driven gear, tachometer drive	
19.	70-8740	Driven gear housing, tachometer drive	
20.	70-8739	Gasket, tachometer drive	
21.	70-9706	Support wire, tachometer cable	
22.	70-7735†	Crankcase, centre section	
23.	70-8774	Dowel, timing-side	2
24.	14-1427	Stud, crankcase ($\frac{5}{16}$ " U.N.C./U.N.F. $\times 3$ ")	2
25.	14-6113	Oilway plug ($\frac{5}{16}$ " U.N.C. $\times \frac{5}{8}$ ")	2
26.	70-8776	Oilway plug washer	2
27.	70-6516	Scavenge cover gasket	2
28.	19-1865	Contact set (Lucas 54419828)	
29.	70-8756	Grommet, contact breaker leads	
30.		Spring, auto-advance unit (Lucas 54415642)	2
31.	19-1864	Auto-advance unit (Lucas 54419867)	
32.	70-6559	Washer, contact breaker plate	3
33.	70-6521	Pillar bolt, contact breaker plate (2 B.A. $\times 1-5/32$ ")	3
34.	68-331	Washer, auto-advance bolt line 35	
35.	14-208	Bolt, auto-advance unit ($\frac{1}{4}$ " U.N.F. $\times 2\frac{1}{4}$ ")	
36.	76-291	Oil seal, contact breaker	
37.	70-6572	Cover gasket, contact breaker	
38.	70-6519	Contact breaker cover	
39.	54-170	Washer, cover screw line 40	3
40.	54-9012	Screw, contact breaker cover (2 B.A. $\times 13/32$ ")	3
41.	70-9266	Washer, for screw lines 42 and 44	2
42.	71-7	Screw, timing aperture (4 B.A. $\times \frac{5}{16}$ ")	
43.	70-7879	Cover, timing aperture	
44.	71-6	Pointer screw, timing aperture (4 B.A. $\times 11/16$ ")	
45.	70-7880	Gasket, timing aperture	
46.	14-6611	Screw, timing cover ($\frac{1}{4}$ " U.N.C. $\times 1\frac{3}{4}$ ")	
47.	14-6612	Screw, timing cover ($\frac{1}{4}$ " U.N.C. $\times 2$ ")	4
48.	70-8763	Nut, rotor mounting ($\frac{5}{16}$ " U.N.F.)	
49.	75-223	Lockwasher, rotor mounting	
50.	21-677	Locknut, stator mounting ($\frac{5}{16}$ " U.N.F.)	3
51.	54-55	Washer, stator mounting ($\frac{5}{16}$ " $\times \frac{5}{8}$ " $\times 1\frac{1}{16}$ ")	3
52.	19-1260	Alternator rotor (Lucas 54213902)	
53.	19-1259	Alternator stator (Lucas 47209)	
54.	70-6522*	Stud, stator mounting ($\frac{5}{16}$ " U.N.F. $\times 3$ ")	3

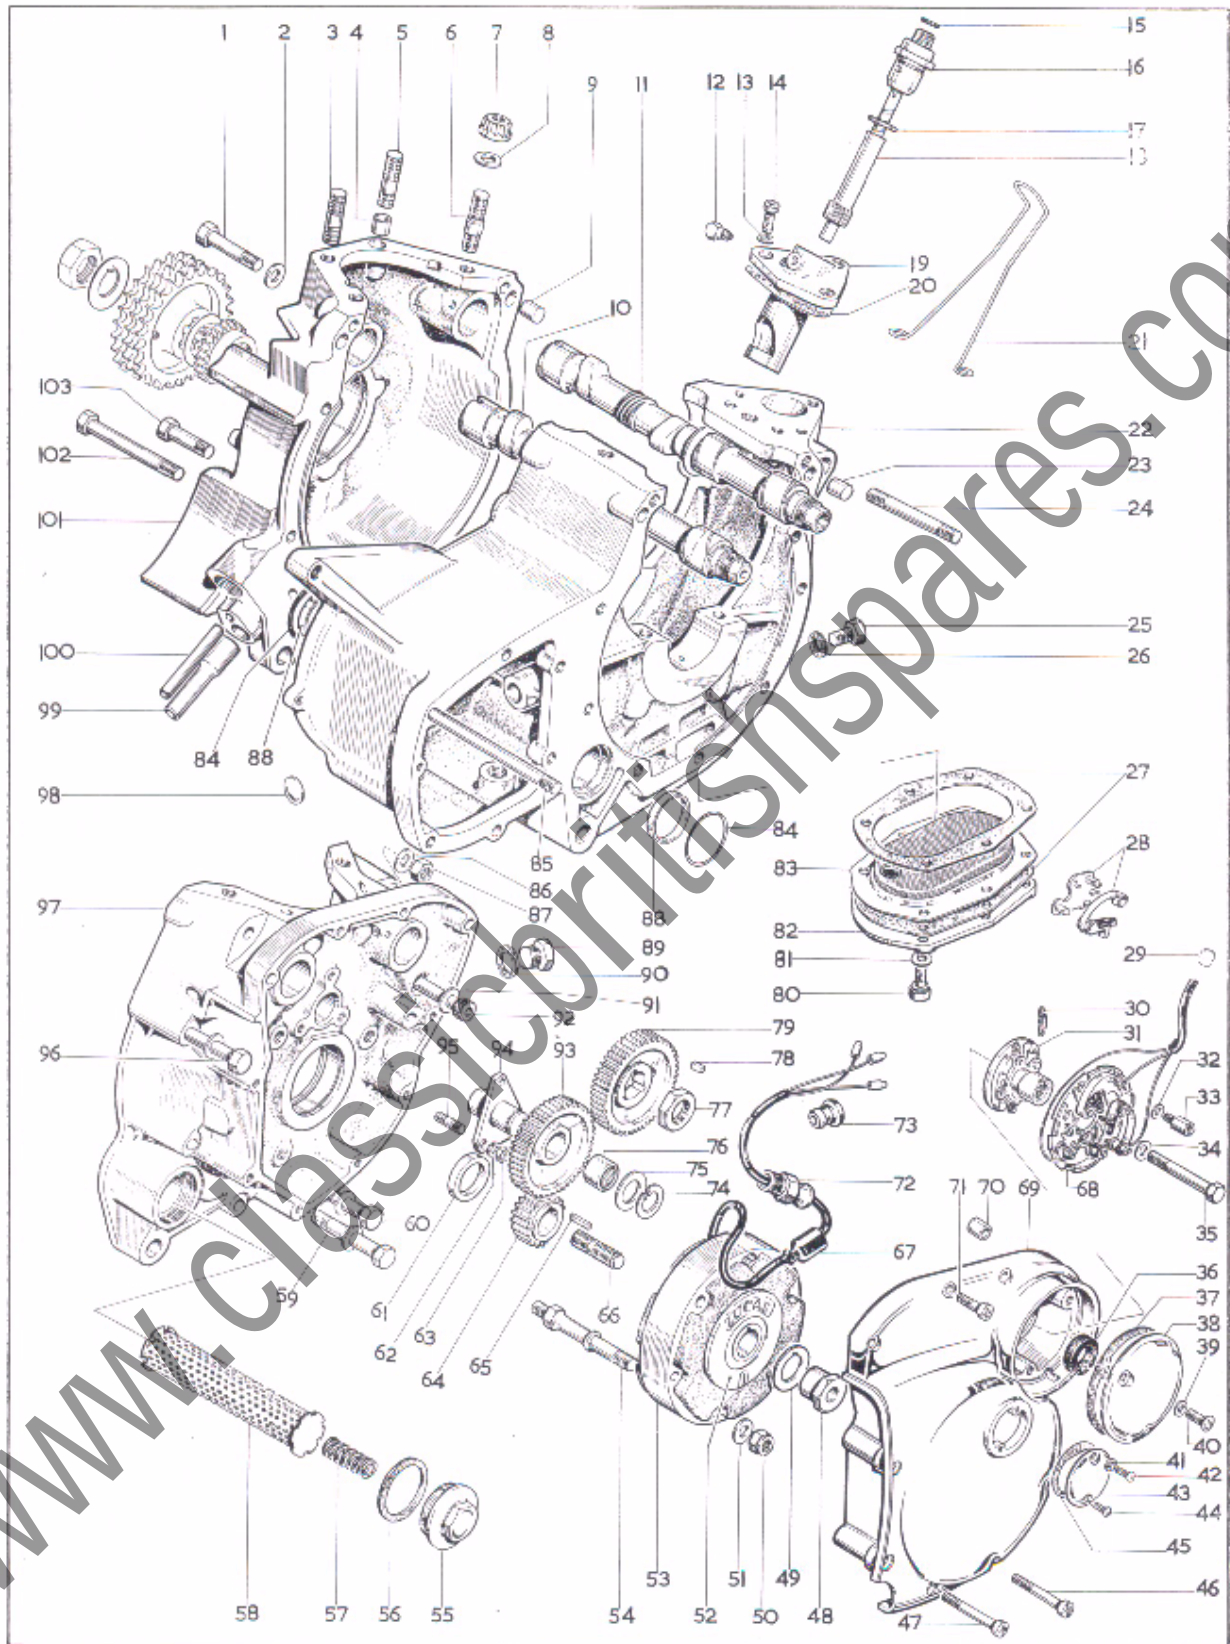


CRANKCASE AND TIMING GEARS

Plate Ref.	Spares Number	Description	Per Set
55.	70-6582	Cap, main oil filter	
56.	70-6131	Fibre washer, filter cap	
57.	70-6130	Spring, filter mounting	
58.	70-6571	Main oil filter (Fram CA.2818)	
59.	14-6226	Bolt, crankcase clamping ($\frac{5}{16}$ " U.N.C. $\times$ $3\frac{1}{4}$ ")	4
60.	14-6218	Bolt, crankcase clamping ($\frac{5}{16}$ " U.N.C. $\times$ $1\frac{1}{8}$ ")	
61.	70-6173	Distance piece, timing pinion	
62.	54-22	Washer, gear spindle stud	3
63.	14-401	Locknut, gear spindle stud ($\frac{1}{4}$ " U.N.F.)	3
64.	70-6524	Timing pinion, crankshaft	
65.	70-3974	Key, crankshaft pinion and rotor	
66.	21-548*	Stud, crankshaft ($\frac{7}{16}$ " U.N.F./U.N.F. $\times$ $1\frac{3}{8}$ ")	
67.	68-209	Grommet, for cable seal nut	
68.	19-1863	Contact breaker plate (Lucas 54419327)	
69.	70-7738	Timing gear cover	
70.	76-217	Dowel, timing cover	2
71.	14-6608	Screw, timing cover to crankcase ($\frac{1}{4}$ " U.N.C. $\times$ 1")	5
72.	70-8760	Cable sleeve nut	
73.	70-9807	Grommet, alternator leads	
74.	70-8768	Circclip, intermediate gear	
75.	70-6088	Thrust washer, intermediate gear	
76.	70-7650	Needle bearing (Torrington B.1110)	
77.	70-6523	Nut, camshaft pinion	2
78.	70-1558	Key, camshaft pinion	2
79.	70-9802	Camshaft pinion	2
80.	14-6103	Bolt, scavenge cover ($\frac{1}{4}$ " U.N.C. $\times$ $\frac{5}{8}$ ")	6
81.	54-22	Spring washer, scavenge cover bolt	6
82.	70-6580	Scavenge cover	
83.	70-6501	Scavenge cover filter	
84.	70-8779	"O" ring, filter seal	2
85.	21-1813	Stud, gearbox cover ($\frac{5}{16}$ " U.N.C./U.N.F. $\times$ $4\frac{3}{4}$ ")	2
86.	54-55	Washer, crankcase stud ($\frac{5}{16}$ " $\times$ $\frac{3}{8}$ " $\times$ $\frac{1}{16}$ ")	2
87.	14-302	Nut, crankcase stud ($\frac{5}{16}$ " U.N.F.)	2
88.	70-9856	Sleeve, for filter "O" ring	2
89.	70-8755	Plug, timing aperture	
90.	70-1523	Fibre washer, for plug line 89	
91.	54-55	Washer, crankcase bolt ($\frac{5}{16}$ " $\times$ $\frac{3}{8}$ " $\times$ $\frac{1}{16}$ ")	7
92.	21-678	Socket screw, crankcase clamping ($\frac{5}{16}$ " U.N.C. $\times$ $3\frac{7}{8}$ ")	
93.	70-6727	Intermediate gear complete	
94.	70-6030	Intermediate gear spindle	
95.	21-547	Stud, intermediate gear spindle ($\frac{1}{4}$ " U.N.C./U.N.F. $\times$ $\frac{7}{8}$ ")	3
96.	14-6223	Bolt, crankcase clamping ($\frac{5}{16}$ " U.N.C. $\times$ $2\frac{1}{2}$ ")	
97.	70-7737†	Crankcase, timing-side	
98.	57-1920	Blanking plug	
99.	70-6573	Oil return pipe stub	
100.	70-6574	Oil feed pipe stub	
101.	70-7733†	Crankcase, drive-side	
102.	14-6226	Bolt, crankcase clamping ($\frac{5}{16}$ " U.N.C. $\times$ $3\frac{1}{4}$ ")	5
103.	14-6218	Bolt, crankcase clamping ($\frac{5}{16}$ " U.N.C. $\times$ $1\frac{1}{8}$ ")	

*Special material: 3.—EN16R. 5.—EN8R. 6.—EN8R. 54.—EN8R. 66.—EN8R.

†Supplied only as crankcase complete, number 70-7869.

Plate 4

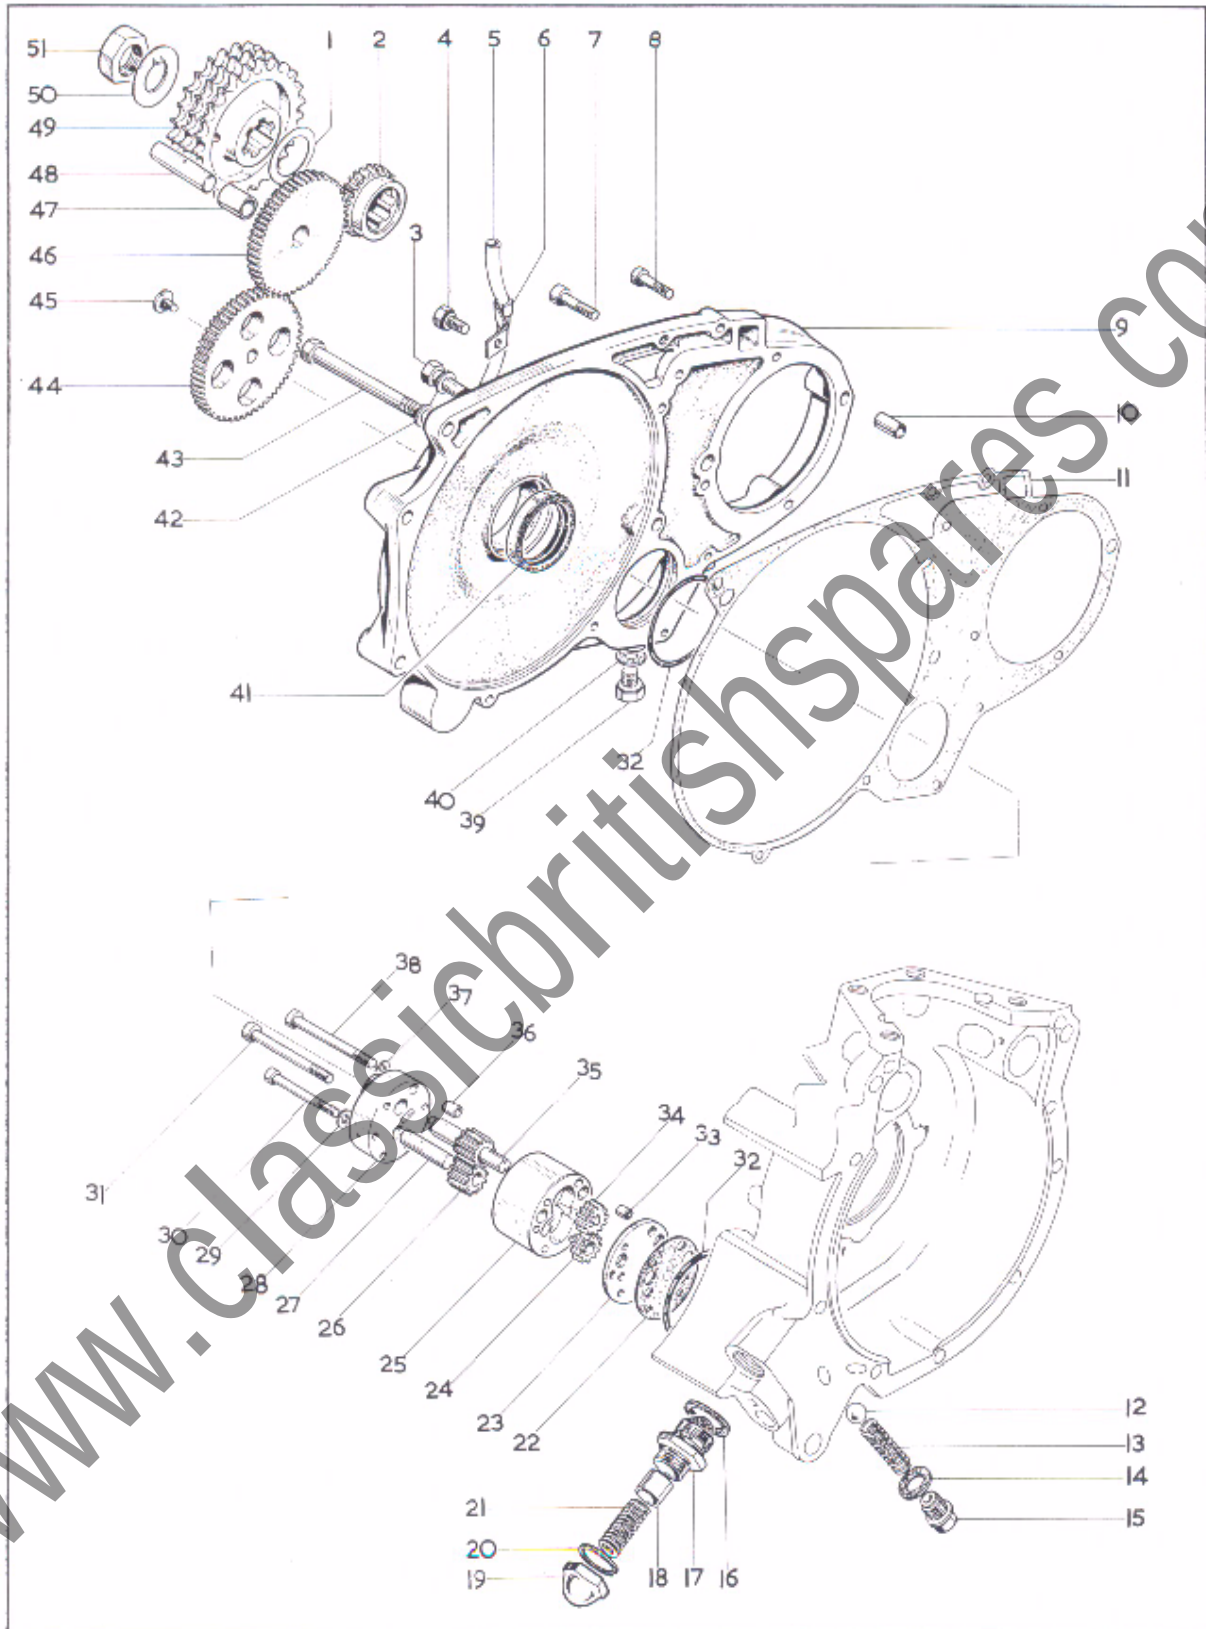

INNER PRIMARY COVER, OIL PUMP AND GEARS

Plate Ref.	Spares Number	Description	Per Set
1.	70-9634	Shim, engine sprocket (as required, maximum 4)	..
2.	70-7248	Driving gear, oil pump	..
3.	21-1820	Bolt, inner cover to crankcase ($\frac{5}{16}$ " U.N.C. $\times$ 4 $\frac{1}{2}$ ")	..
4.	14-6101	Bolt, chain oiler clip ($\frac{1}{4}$ " U.N.C. $\times$ $\frac{1}{2}$ ")	..
5.	70-8786	Chain oiler pipe	..
6.	70-4705	Clip, chain oiler pipe	..
7.	14-7006	Socket screw, inner cover to crankcase ($\frac{1}{4}$ " U.N.C. $\times$ 1")	7
8.	14-6606	Screw (short), inner cover to crankcase ($\frac{1}{4}$ " U.N.C. $\times$ $\frac{3}{4}$ ")	2
9.	57-3641	Inner primary cover with fixed fittings	..
10.	76-217	Dowel, inner chaincase to crankcase	..
11.	57-2558	Gasket, inner cover to crankcase	..
12.	70-8750	Ball, oil control valve ($\frac{7}{16}$ " diameter, 11.1125 mm.)	..
13.	70-6567	Spring, oil control valve	..
14.	70-6742	Fibre washer, oil control valve	..
15.	70-6584	Plug, oil control valve	..
16.	70-1670	Fibre washer, valve body to crankcase	..
17.	70-7590	Body, pressure release valve	..
17.	70-6595	Oil pressure release valve complete	..
18.	70-8752	Piston, pressure release valve	..
19.	70-6596	Domed nut, pressure release valve	..
20.	70-8754	Fibre washer, release valve nut to body	..
21.	70-7591	Spring, pressure release valve	..
22.	70-6503	Gasket, oil pump to crankcase	..
23.	70-6502	Oil pump base plate	..
24.	70-6038	Oil pump driven feed gear	..
25.	70-6430	Oil pump body	..
26.	70-6039	Oil pump driven scavenge gear	..
27.	70-6454	Spindle, for driven gears	..
28.	70-6525	Oil pump cover	..
29.	70-8731	Spring washer, oil pump cover screw line 30 (11/64" $\times$ 18 G.)	2
30.	21-559	Screw, oil pump cover to body (3 B.A. $\times$ 2")	2
31.	71-3	Screw, oil pump to crankcase (2 B.A. $\times$ 2 $\frac{1}{2}$ ")	3
32.	70-6570	Seal, oil pump to crankcase and cover	2
33.	70-1532	Dowel, oil pump to crankcase	..
34.	70-6455	Oil pump feed driving gear	..
35.	70-6889	Oil pump scavenge driving gear	..
36.	70-6459	Dowel, oil pump cover to body	..
37.	70-8732	Spring washer, oil pump screw line 31 (13/64" $\times$ 16 G.)	4
38.	70-9601	Screw, oil pump to crankcase — dowel position (2 B.A. $\times$ 2 $\frac{3}{4}$ ")	..
39.	21-536	Drain plug	..
40.	70-402	Fibre washer, drain plug	..
41.	57-3642	Oil seal, clutch shaft	..
42.	54-55	Washer, inner cover to crankcase bolt ($\frac{5}{16}$ " $\times$ $\frac{5}{8}$ " $\times$ $\frac{1}{16}$ ")	2
43.	21-1819	Bolt (long), inner cover to crankcase ($\frac{5}{16}$ " U.N.C. $\times$ 4 $\frac{1}{4}$ ")	..
44.	70-7249	Oil pump driven gear	..
45.	70-1250	Screw, driven gear to scavenge gear (2 B.A. $\times$ $\frac{3}{8}$ ")	..
46.	70-7246	Intermediate gear, oil pump drive	..
47.	70-6885	Bush, intermediate oil pump gear	..
48.	70-6881	Intermediate gear spindle	..
49.	70-6890	Engine sprocket (28 teeth)	..
50.	70-8785	Lockwasher, engine sprocket	..
51.	21-585	Nut, engine sprocket ($\frac{3}{4}$ " U.N.F.)	..
	70-9001	Oil pump complete	..



CLUTCH

Plate Ref.	Spares Number	Description	Per Set
1.	57-4004	Retaining plate, shock absorber	..
2.	57-3644	Oil seal, clutch pull rod	..
3.	57-2480	Nut, shock absorber	..
4.	57-2478	Spacer, shock absorber nut	..
5.	68-3282	Shock absorber rubber	12
6.	19-8692	Primary chain (Triplex, 82 pitch)	..
7.	57-3643	Needle bearing, clutch shaft (INA. SC.228)	..
8.	57-2581	Gasket, inner cover to outer cover	..
9.	57-2245	Clutch sprocket (50T)	..
10.	57-2214	Thrust washer, clutch sprocket	..
11.	57-2471	Spider, clutch shock absorber	..
12.	57-3646	Thrust race, clutch shaft (Torrington NTA.2233)	..
13.	57-3941	Tab washer for bolt line 14	3
14.	57-3940	Bolt, shock absorber retaining plate (2 B.A. $\times \frac{5}{8}$ ")	6
15.	19-7801	Clutch end cover assembly	..
16.	19-7805	Clutch spring	..
17.	19-7804	Clutch pressure plate complete	..
18.	19-7803	Clutch friction plate	..
19.	68-3218	Key, hub to mainshaft	..
20.	57-2580	Clutch hub	..
21.	57-2556	Gasket, breather duct	..
22.	57-2555	Breather duct cover	..
23.	14-6515	Screw, cover to inner chaincase ($\frac{1}{4}$ " U.N.C. $\times 4$ ")	..
24.	21-680	Screw, cover to clutch cover (number 10 U.N.C. $\times \frac{5}{8}$ ")	3
25.	57-3756	Adaptor for oil tank breather pipe	..
26.	57-3642	Oil seal, cover to mainshaft	..
27.	57-2554	Clutch cover	..
28.	14-6610	Screw, cover to crankcase ($\frac{1}{4}$ " U.N.C. $\times 1\frac{1}{2}$ ")	3
29.	57-2557	Tube, clutch cover	..
30.	21-681	Nut, hub to mainshaft (9/16" U.N.F.)	..
31.	19-7802	Clutch housing	..
32.	57-2552	Clutch pull rod	..
33.	19-7808	Bearing, clutch pressure plate	..
34.	19-7807	Lockwasher, end cover to housing bolt	6
35.	19-7806	Bolt, end cover to housing	12
36.	57-2479	Sleeve, mainshaft oil seal	..
	19-7800	Clutch assembly complete	..
	19-7809	Facing pack for friction plate (3SC.76014)	..
	57-3871	Shock absorber assembly	..


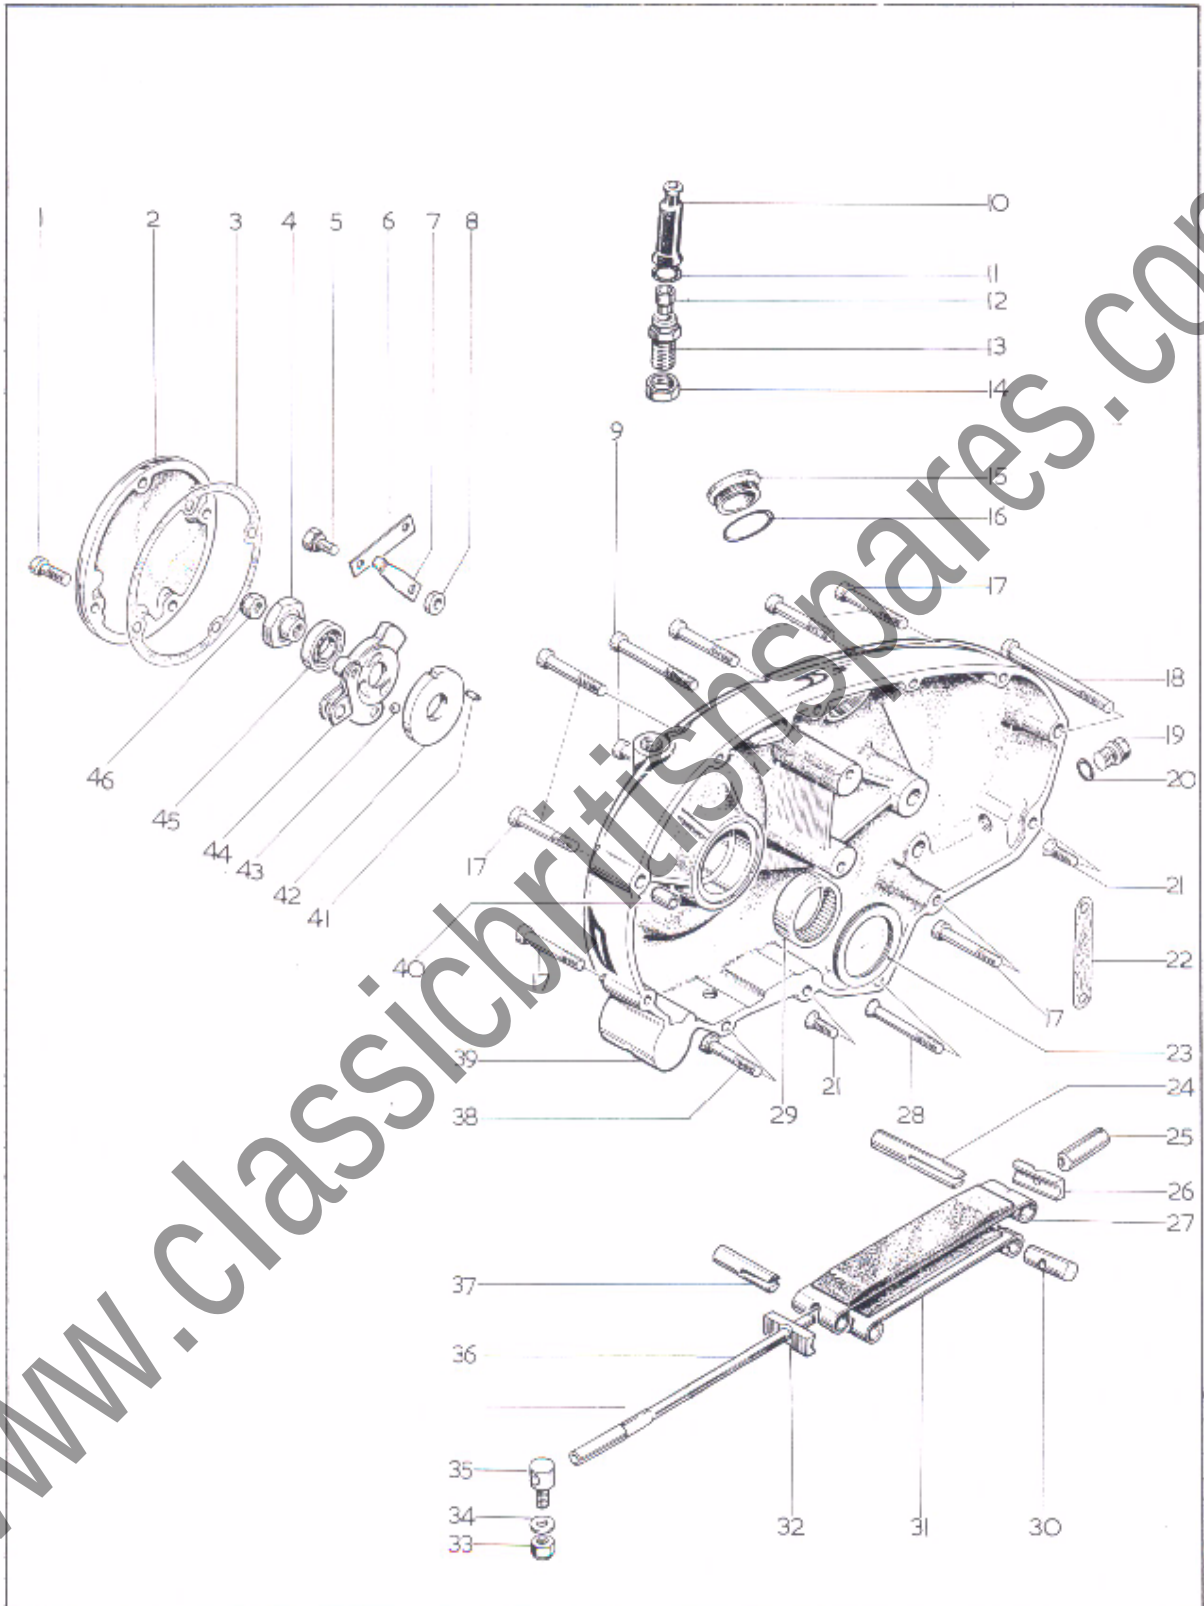


Plate 6
PRIMARY CASE OUTER COVER, CHAIN TENSIONER, CLUTCH CONTROL

Plate Ref.	Spares Number	Description	Per Set
1.	14-6605	Screw, inspection cover ($\frac{1}{4}$ " U.N.C. $\times$ $\frac{5}{8}$ ")	4
2.	57-3954	Inspection cover	
3.	57-3955	Inspection cover gasket	
4.	57-2553	Sleeve nut ($\frac{5}{16}$ " U.N.F.)	2
5.	14-6102	Bolt, clutch thrust plate spring ($\frac{1}{4}$ " U.N.C. $\times$ $\frac{5}{8}$ ")	
6.	57-2474	Tab washer, for bolt line 5	2
7.	57-2473	Spring, clutch thrust plate	2
8.	57-3638	Distance piece, clutch thrust plate spring	2
9.	14-6613	Screw, primary outer cover ($\frac{1}{4}$ " U.N.C. $\times$ $2\frac{1}{4}$ ")	2
10.	68-3264	Clutch cable grommet	
11.	57-3733	Sealing ring, clutch cable	
12.	57-1645	Adaptor, clutch cable	
13.	57-2220	Abutment for clutch cable	
14.	21-567	Locknut for abutment ($\frac{1}{2}$ " U.N.C.)	
15.	57-2166	Oil filler plug	
16.	70-8782	"O" ring for filler plug	7
17.	14-6611	Screw, primary outer cover ($\frac{1}{4}$ " U.N.C. $\times$ $1\frac{3}{4}$ ")	
18.	14-6615	Screw, primary outer cover ($\frac{1}{4}$ " U.N.C. $\times$ 3 ")	
19.	57-3619	Plug, tensioner hole	
20.	57-3620	"O" ring for tensioner hole plug	2
21.	14-6504	Screw, primary outer cover ($\frac{1}{4}$ " U.N.C. $\times$ $3\frac{1}{2}$ " countersunk head)	
22.	57-2244	Inner gasket, primary outer cover	
23.	57-2215	Thrust washer, primary outer cover	
24.	57-3614	Pivot pin, chain tensioner	
25.	57-3617	Adjuster, chain tensioner	
26.	70-9258	Saddle washer, adjuster end	
27.	57-3610	Chain tensioner blade (upper)	
28.	14-6509	Screw, primary outer cover ($\frac{1}{4}$ " U.N.C. $\times$ $1\frac{3}{4}$ " countersunk head)	
29.	57-3643	Needle bearing (INA, SC228)	2
30.	70-5977	Trunnion, lower tensioner blade	
31.	70-6061	Chain tensioner blade (lower)	
32.	70-9258	Saddle washer, chain tensioner (rear)	
33.	14-1901	Nut, chain tensioner support ($\frac{1}{4}$ " U.N.F.)	
34.	57-3987	Washer, chain tensioner support	
35.	57-3986	Support, chain tensioner	
36.	57-3983	Tie rod, chain tensioner	
37.	70-9256	Trunnion, chain tensioner	
38.	14-6610	Screw, primary outer cover ($\frac{1}{4}$ " U.N.C. $\times$ $1\frac{1}{2}$ ")	
39.	57-3958	Primary outer cover assembly	2
40.	76-217	Dowel, outer to inner chaincase	
41.	57-912	Peg, clutch thrust plate	
42.	57-2465	Clutch thrust plate	3
43.	97-2704	Steel ball ($\frac{1}{4}$ " diameter, 6.35 mm.)	
44.	57-2547	Clutch lever	
45.	57-3647	Bearing, clutch lever (Hoffman S5)	
46.	14-402	Locknut ($\frac{5}{16}$ " U.N.F.)	

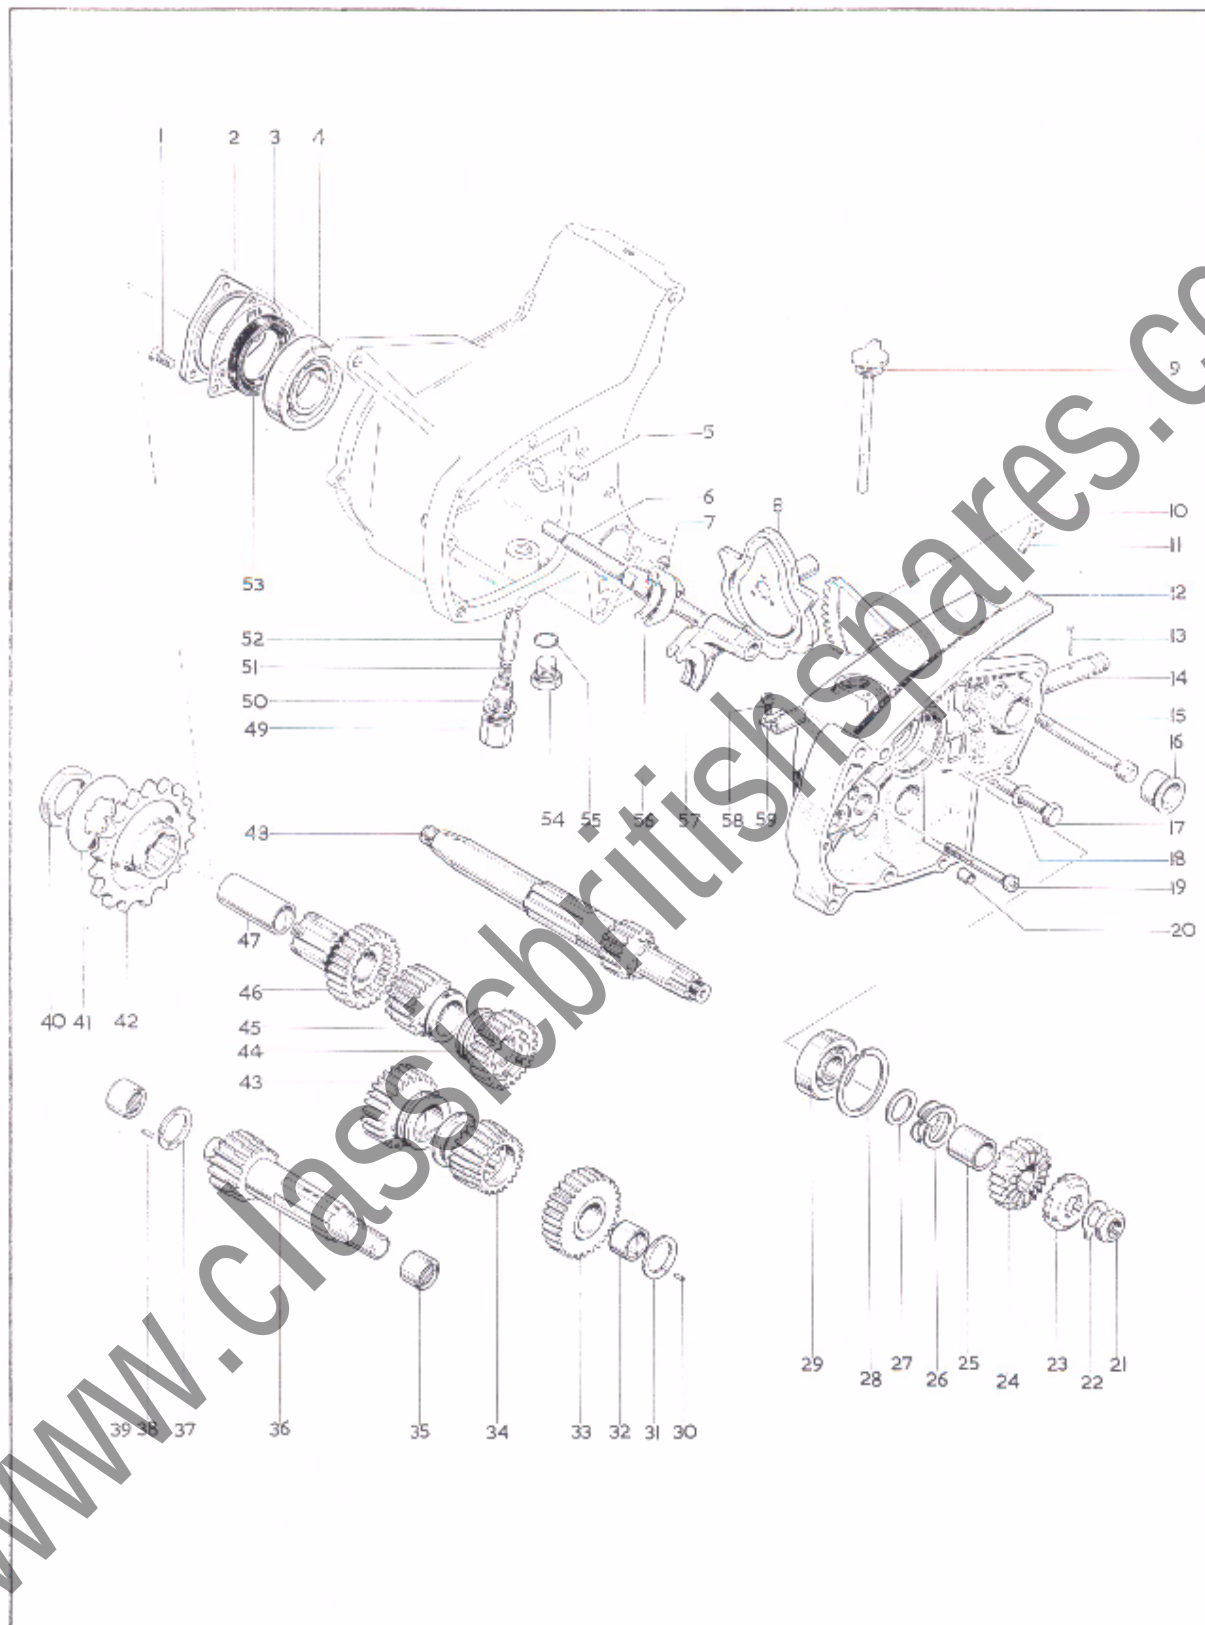

GEARBOX

Plate Ref.	Spares Number	Description	Per Set
1.	21-1811	Screw, housing to gearbox ($\frac{1}{4}$ " U.N.F. countersunk head)	3
2.	57-3633	Oil seal housing assembly, gearbox mainshaft	
3.	57-2165	Gasket, housing to gearbox	
4.	57-448	Bearing, gearbox mainshaft (Hoffman N.1443)	2
5.	76-217	Dowel, gearbox inner cover	
6.	57-291	Selector fork spindle	1
7.	57-2595	Cam plate roller	
8.	57-3650	Cam plate assembly	
9.	57-2656	Gearbox dipstick	
10.	57-397	Gear selector quadrant	
11.	40-9190	Alternator cable clip	
12.	57-2601	Gearbox inner cover	2
13.	60-1928	Split pin, quadrant spindle ($\frac{5}{64}$ " $\times$ $1\frac{3}{8}$ ")	
14.	57-1896	Spindle, selector quadrant	
15.	14-7101	Socket screw, inner cover to crankcase ($\frac{5}{16}$ " U.N.C. $\times$ $3\frac{1}{4}$ ")	
16.	57-412	Bush, footchange spindle	
17.	14-6121	Bolt, inner cover to crankcase ($\frac{5}{16}$ " U.N.C. $\times$ $2\frac{1}{2}$ ")	
18.	75-176	Washer, for bolt line 17	2
19.	14-6614	Screw, inner cover to crankcase ($\frac{1}{4}$ " U.N.C. $\times$ $2\frac{1}{2}$ ")	2
20.	76-217	Dowel, inner cover to outer cover	
21.	21-594	Nut, mainshaft timing-side ($9/16$ " U.N.F.)	
22.	57-732	Lockwasher, mainshaft nut	
23.	57-731	Kickstart ratchet	
24.	57-2170	Kickstart ratchet pinion	
25.	57-1963	Bush, kickstart ratchet pinion	
26.	57-1250	Spring, kickstart ratchet	
27.	57-1962	Washer, kickstart pinion sleeve	
28.	42-5821	Circlip, mainshaft bearing	
29.	57-3621	Bearing, mainshaft inner cover (Hoffman LS.8)	
30.	57-912	Peg, thrust washer	
31.	57-1607	Layshaft thrust washer	
32.	57-928	Bush, layshaft low gear	
33.	57-3862	Layshaft low gear complete	
34.	57-3860	Layshaft third gear	
35.	57-1614	Layshaft needle bearing, inner cover (Torrington B.1112)	
36.	57-3864	Layshaft with high gear	
37.	57-1607	Layshaft thrust washer	
38.	57-912	Peg, thrust washer (drive-side)	
39.	57-1606	Layshaft needle bearing (Torrington 11121)	
40.	21-542	Nut, gearbox final drive sprocket ($1\frac{1}{4}$ " U.N.F.)	
41.	57-2116	Lockwasher, sprocket nut ($2\frac{1}{3}$ " $\times$ 22 G.)	
42.	57-1918	Gearbox final drive sprocket (19 teeth)	
43.	57-3861	Layshaft second gear	
44.	57-3858	Mainshaft third gear	
45.	57-3857	Mainshaft second gear	
46.	57-2176	Mainshaft high gear complete	
47.	57-3785	Bush, mainshaft high gear	
48.	57-2174	Mainshaft with low gear	
49.	57-2172	Bush, cam plate plunger	
50.	57-3978	Washer, cam plate plunger bush	
51.	57-3661	Spring, cam plate plunger	
52.	57-44	Cam plate plunger	
53.	57-3634	Oil seal, gearbox mainshaft final drive	
54.	21-1857	Gearbox drain plug	
55.	68-3168	"O" ring, drain plug	
56.	57-2596	Mainshaft selector fork	
57.	57-913	Layshaft selector fork	
58.	21-1862	"Tapite" screw, cable clip (number 6 U.N.C.)	2
59.	70-9327	Cable clip	

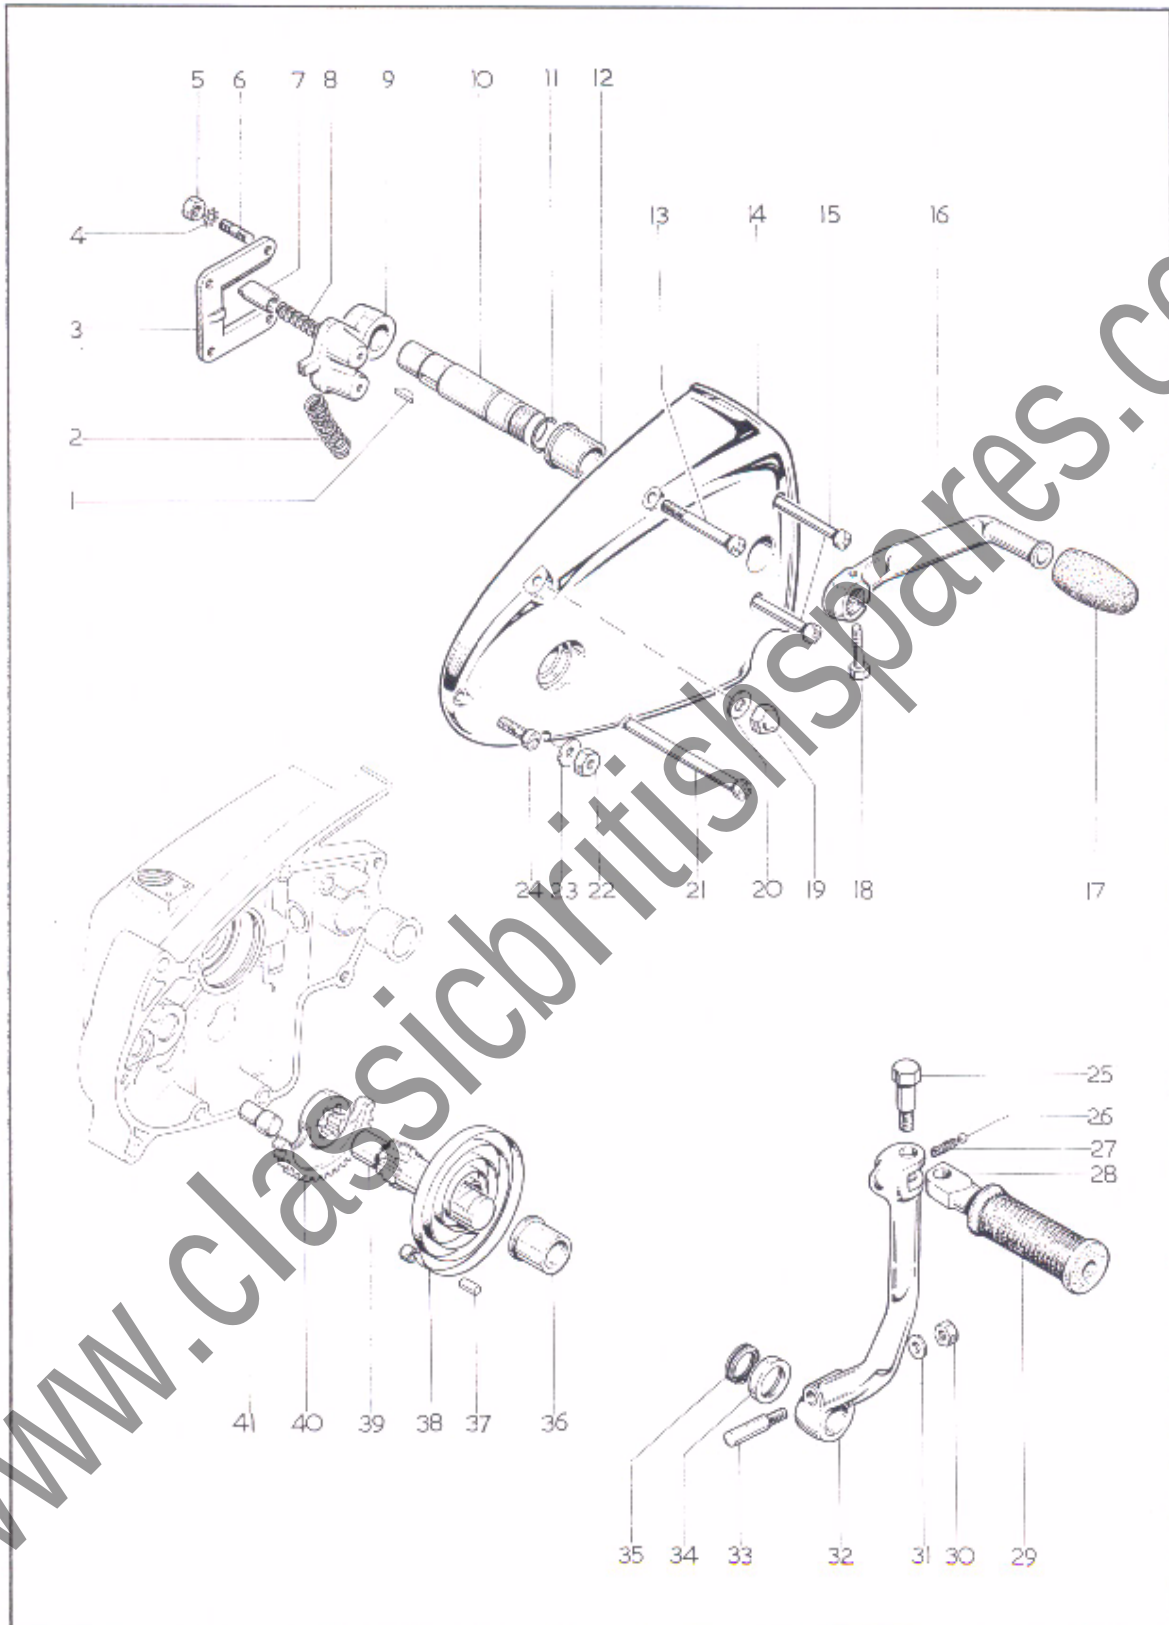


Plate 8

GEARBOX COVER, GEARCHANGE AND KICKSTART CRANK

Plate Ref.	Spares Number	Description	Per Set
1.	71-37	Key, quadrant to spindle	
2.	57-404	Return spring, footchange pedal	2
3.	57-407	Gear control guide plate	
4.	29-541	Lockwasher, gear control guide plate (17/64"×15/32"×.024")	4
5.	14-301	Nut, gear control guide plate (1/4" U.N.F.)	4
6.	21-547	Stud, gear control guide plate (1/4" U.N.C./U.N.F.×7/8")	4
7.	57-406	Plunger, footchange quadrant	2
8.	57-405	Spring, footchange quadrant	2
9.	57-409	Footchange plunger quadrant	
10.	57-3758	Footchange pedal spindle	
11.	40-323	Oil seal ring, footchange	
12.	57-3759	Bush, footchange shaft	
13.	14-6613	Screw, outer to inner cover (1/4" U.N.C.×2 1/4")	
14.	57-2603	Gearbox outer cover	
15.	14-6615	Screw, outer to inner cover (1/4" U.N.C.×3")	2
16.	57-3757	Footchange pedal	
17.	89-3208	Footchange pedal rubber	
18.	14-201	Footchange pedal bolt	
19.	21-544	Domed nut, outer cover stud — top (5/16" U.N.F.)	
20.	54-55	Washer for domed nut (5/16"×5/8"×1/16")	
21.	21-1860	Screw, outer cover to crankcase (1/4" U.N.C.×5 3/8")	
22.	14-302	Nut, bottom cover stud (5/16" U.N.F.)	
23.	54-55	Washer for nut line 22 (5/16"×5/8"×1/16")	
24.	14-6608	Screw, outer to inner cover (1/4" U.N.C.×1")	
25.	21-541	Bolt, kickstart pedal pivot (5/16" U.N.F.×1-5/32")	
26.	97-2704	Ball, kickstart folding pedal (1/4" diameter)	
27.	40-3085	Spring, kickstart folding pedal	
28.	57-1272	Kickstart crank folding pedal	
29.	57-2330	Kickstart pedal rubber	
30.	75-53	Nut, kickstart crank cotter	
31.	68-331	Washer, kickstart crank cotter (1/4"×1/2"×1/16")	
32.	57-2653	Kickstart crank only	
32.	57-3721	Kickstart crank assembly complete	
33.	75-3143	Cotter, kickstart crank	
34.	57-1955	Oil seal housing, kickstart crank	
35.	57-1956	Oil seal, kickstart crank	
36.	57-25	Bush, kickstart shaft	
37.	57-47	Anchor pin, kickstart return spring	
38.	57-31	Return spring, kickstart	
39.	57-24	Kickstart shaft	
40.	57-2169	Kickstart quadrant	
40.	57-3732	Kickstart quadrant and spindle assembly	
41.	57-3727	Kickstart quadrant stop	


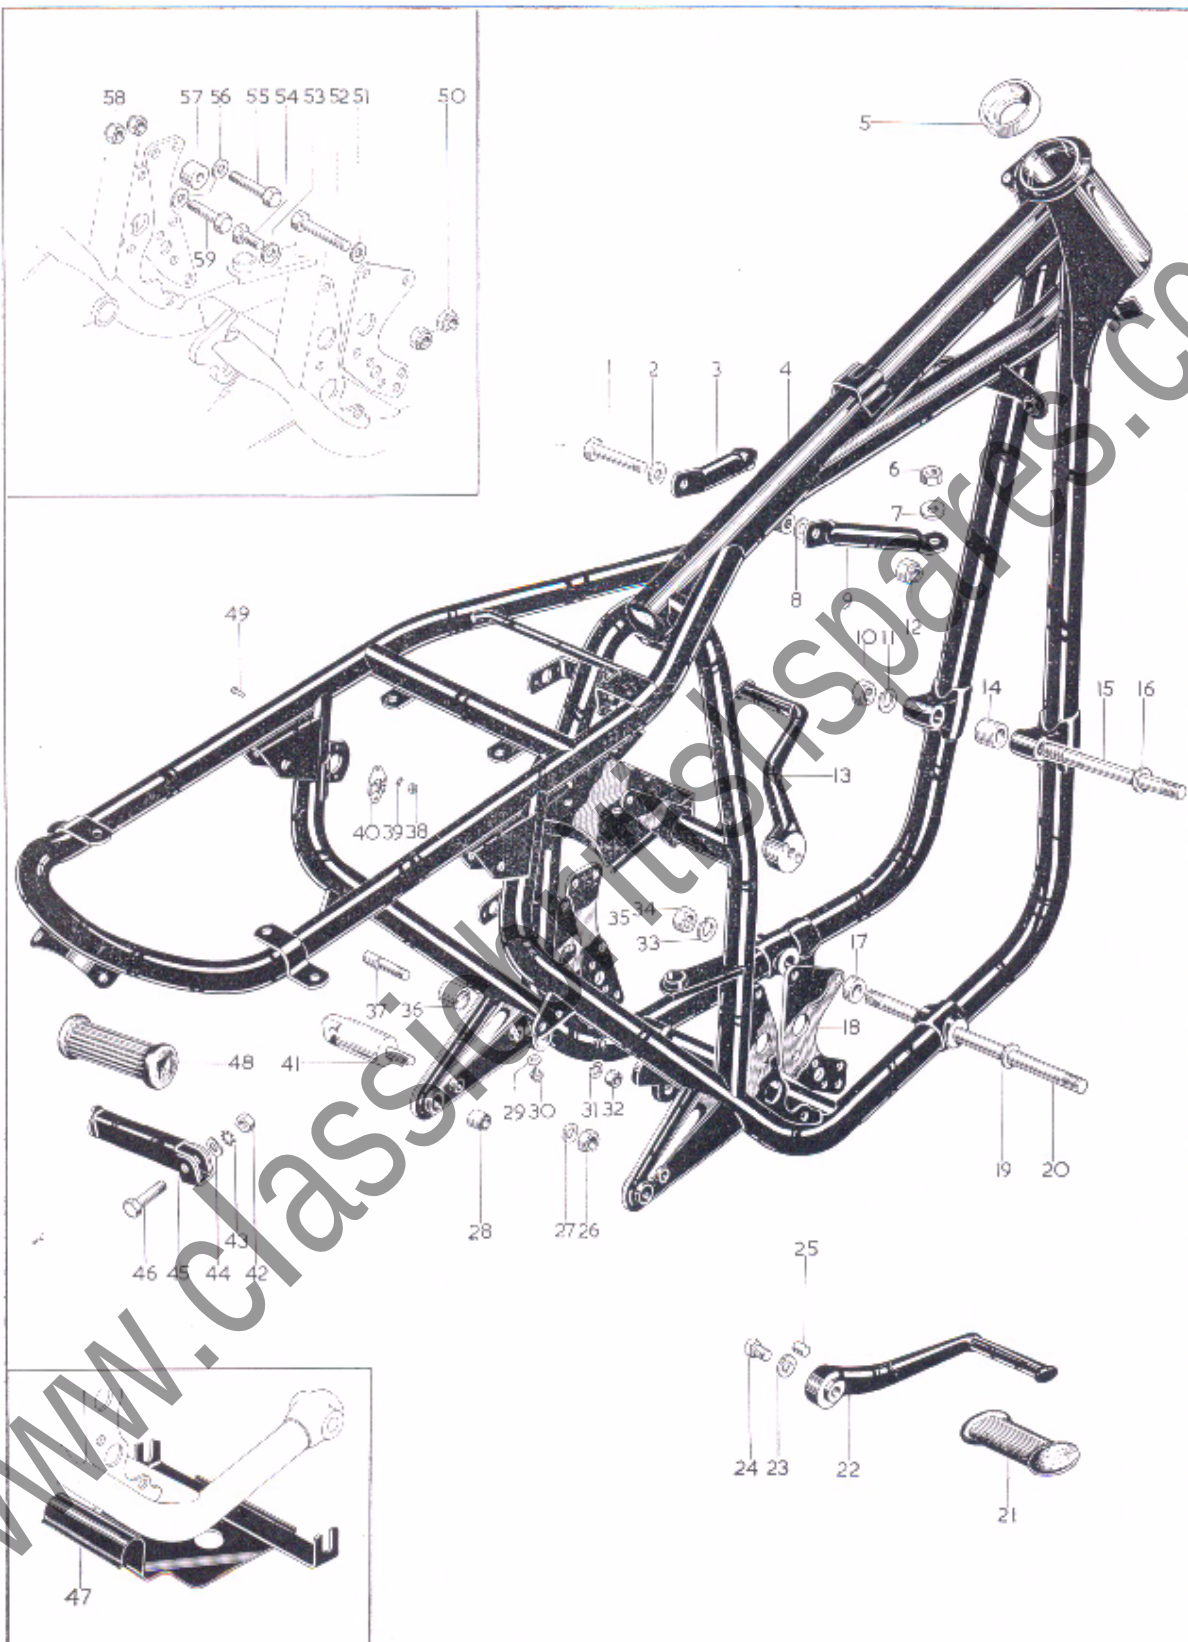


Plate 9

FRAME


Plate Ref.	Spares Number	Description	Per Set
1.	14-237	Bolt, steady stay to frame ($\frac{3}{8}$ " U.N.F. $\times$ $2\frac{1}{2}$ ")	
2.	2-2138	Washer, steady stay to frame ($\frac{3}{8}$ " $\times$ $\frac{3}{4}$ " $\times$ $\frac{1}{16}$ ")	
3.	82-9378	Steady stay (left-hand)	
4.	82-9773	Frame complete	
5.	97-111	Steering head cup	2
6.	14-403	Nut, steady stay to cylinder head ($\frac{3}{8}$ " U.N.F.)	2
7.	2-2138	Washer, steady stay to cylinder head ($\frac{3}{8}$ " $\times$ $\frac{3}{4}$ " $\times$ $\frac{1}{16}$ ")	2
8.	42-4094	Spacer, steady stay to frame (first sets only)	
9.	82-9379	Steady stay (right-hand)	
10.	14-304	Nut, front engine bolt ($\frac{7}{16}$ " U.N.F.)	2
11.	2-1967	Spring washer, front engine bolt ($\frac{7}{16}$ " $\times$ $\frac{7}{8}$ " $\times$ 16 G.)	2
12.	14-903	Nut, steady stay to frame ($\frac{3}{8}$ " U.N.F.)	
13.	82-9625	Footrest (left-hand)	
14.	82-8508	Spacer, front engine bolt	
15.	21-779*	Front engine stud ($\frac{7}{16}$ " U.N.F./U.N.F. $\times$ 7")	
16.	15-431	Washer, front engine bolt ($\frac{7}{16}$ " $\times$ $\frac{3}{4}$ " $\times$ $\frac{1}{16}$ ")	2
17.	82-8510	Spacer, bottom engine bolt	
18.	82-9642	Engine plate (right-hand)	
19.	15-431	Washer, bottom engine bolt ($\frac{7}{16}$ " $\times$ $\frac{3}{4}$ " $\times$ $\frac{1}{16}$ ")	2
20.	21-780*	Bottom engine stud ($\frac{7}{16}$ " U.N.F./U.N.F. $\times$ $11\frac{1}{8}$ ")	
21.	40-4850	Footrest rubber (right-hand)	
21.	82-9686	Footrest rubber (left-hand)	
22.	82-9624	Footrest (right-hand)	
23.	3-107	Spring washer, for screw line 24 ($17/32$ " $\times$ $49/64$ " $\times$ 11 G.)	2
24.	14-145	Footrest set-screw ($\frac{1}{2}$ " U.N.F. $\times$ 1")	2
25.	82-5943	Footrest peg	4
26.	14-303	Nut, pillion footrest anchor bolt ($\frac{3}{8}$ " U.N.F.)	2
27.	2-522	Spring washer, anchor bolt ($\frac{3}{8}$ " $\times$ $\frac{3}{4}$ " $\times$ 17 G.)	2
28.	82-9652	Silentbloc, silencer mounting	2
29.	24-1088	Fibre washer, for grease nipple line 30	
30.	47-9012	Grease nipple, brake pedal	
31.	24-8784	Spring washer, stop peg	
32.	14-302	Nut, stop peg ($\frac{1}{16}$ " U.N.F.)	
33.	2-1967	Spring washer, bottom engine bolt ($\frac{7}{16}$ " $\times$ $\frac{7}{8}$ " $\times$ 16 G.)	2
34.	14-304	Nut, bottom engine bolt ($\frac{7}{16}$ " U.N.F.)	2
35.	82-9641	Engine plate (left-hand)	
36.	82-8918	Brake pedal bush	
37.	82-8513	Brake pedal stop peg	
38.	42-8034	Nut for "Oddie" clip	6
39.	42-5099	Lockwasher for "Oddie" clip	6
40.	68-9115	"Oddie" clip, sidecover	3
41.	82-9653	Anchor bolt, pillion footrest	2
42.	14-402	Nut, swivel bolt ($\frac{5}{16}$ " U.N.F.)	2
43.	36-382	Lockwasher, swivel bolt	2
44.	4-2276	Washer, pillion footrest	2
45.	68-4835	Pillion footrest complete	2
46.	21-736*	Swivel bolt, pillion footrest ($\frac{5}{16}$ " U.N.F. $\times$ 1")	2
47.	82-9684	Engine shield	
48.	29-7583	Pillion footrest rubber	2
49.	65-8317	Screw for "Oddie" clip ($\frac{1}{8}$ " $\times$ $\frac{1}{2}$ ")	6
50.	14-1302	Nut, rear engine plate bolt ($\frac{5}{16}$ " U.N.F.)	5
51.	2-923	Washer, rear engine plate bolt ($\frac{5}{16}$ " $\times$ $\frac{5}{8}$ " $\times$ $\frac{1}{16}$ ")	5
52.	14-221	Bolt, engine to right-hand engine plate ($\frac{5}{16}$ " U.N.F. $\times$ 2")	2
53.	2-923	Washer, rear engine plate bolt ($\frac{5}{16}$ " $\times$ $\frac{5}{8}$ " $\times$ $\frac{1}{16}$ ")	5
54.	14-115	Bolt, right-hand engine plate to frame ($\frac{5}{16}$ " U.N.F. $\times$ $\frac{7}{8}$ ")	3
55.	14-220	Bolt, engine to left-hand engine plate ($\frac{5}{16}$ " U.N.F. $\times$ $1\frac{3}{4}$ ")	2
56.	2-923	Washer, rear engine plate bolt ($\frac{5}{16}$ " $\times$ $\frac{5}{8}$ " $\times$ $\frac{1}{16}$ ")	10
57.	82-8509	Spacer, rear engine plate (left-hand)	3
58.	14-1302	Nut, rear engine plate bolt ($\frac{5}{16}$ " U.N.F.)	5
59.	14-218	Bolt, left-hand engine plate to frame ($\frac{5}{16}$ " U.N.F. $\times$ $1\frac{3}{8}$ ")	3

*Special material: 15.—EN16T. 20.—EN16T. 46.—EN14B.

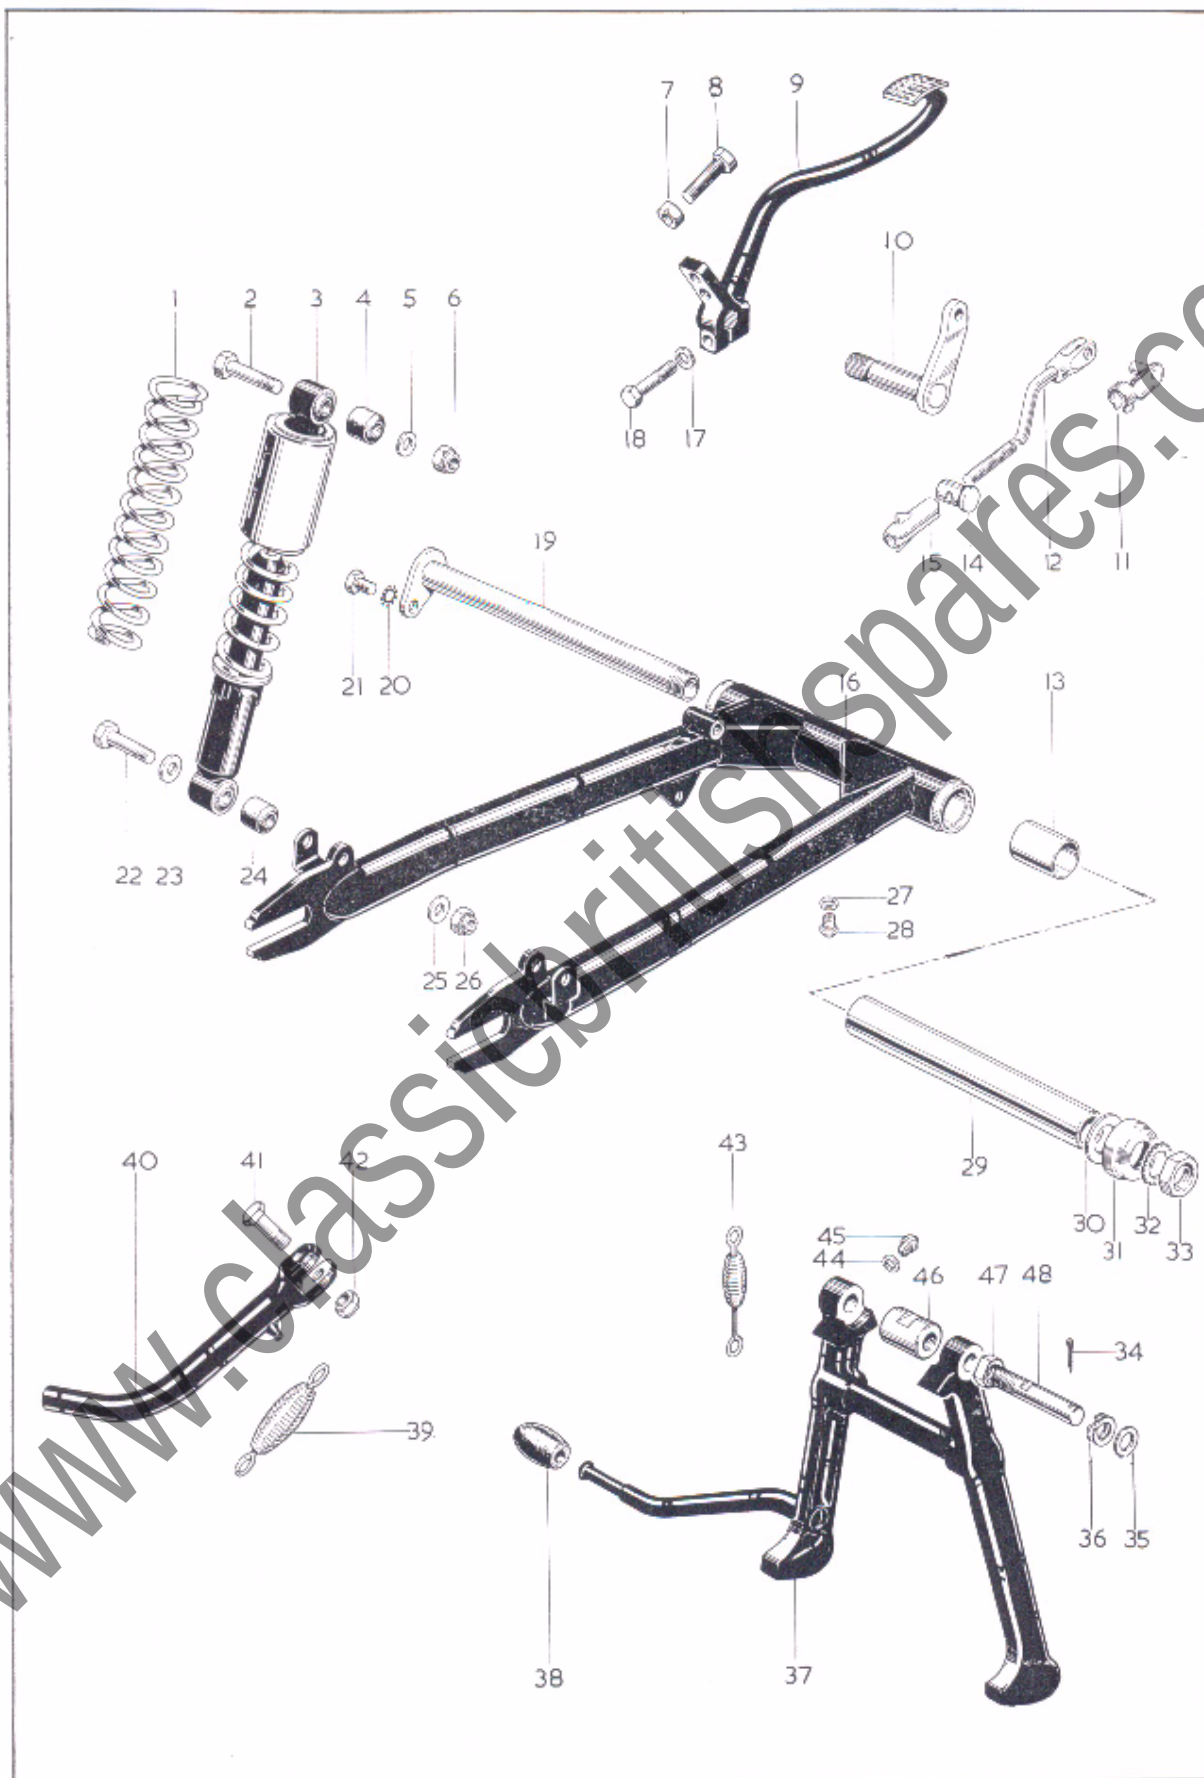

SWINGING ARM, CENTRE STAND, PROP STAND

Plate Ref.	Spares Number	Description	Per Set
1.	19-7447	Damper spring (solo) — Girling 64544120	2
2.	14-235	Top bolt, damper mounting ($\frac{3}{8}$ " U.N.F. $\times$ 2")	2
3.	19-7446	Rear damper complete (solo) — Girling 64052105	2
4.	19-5305	Top bush, rear damper — Girling 64533645	2
5.	70-8770	Washer, top damper mounting bolt	2
6.	14-1303	Nut, Top damper mounting bolt ($\frac{3}{8}$ " U.N.F.)	2
7.	14-401	Locknut, brake pedal stop ($\frac{1}{4}$ " U.N.F.)	2
8.	14-106	Screw, brake pedal stop ($\frac{1}{4}$ " U.N.F. $\times$ 1 $\frac{1}{4}$ ")	2
9.	82-9637	Rear brake pedal	2
10.	82-9665	Brake operating shaft	2
11.	68-7061	Spring pin, brake rod	2
12.	82-9667	Rear brake rod	2
13.	82-8475	Bush, swinging arm	2
14.	37-1467	Pivot pin, brake rod	2
15.	82-7387	Adjuster nut, brake rod ($\frac{1}{4}$ " U.N.F.)	2
16.	82-9963	Swinging arm with bushes	2
17.	15-5155	Washer, for bolt line 18	2
18.	14-217	Pinch bolt, brake pedal ($\frac{5}{16}$ " U.N.F. $\times$ 1 $\frac{1}{4}$ ")	2
19.	82-8468	Spindle, swinging arm	2
20.	36-382	Lockwasher, swinging arm spindle lock plate bolt ($\frac{5}{16}$ " U.N.F. $\times$ 1 $\frac{1}{4}$ ")	2
21.	14-113	Bolt, swinging arm spindle lock plate ($\frac{5}{16}$ " U.N.F. $\times$ 1 $\frac{1}{4}$ ")	2
22.	14-235	Bolt, rear damper bottom mounting ($\frac{3}{8}$ " U.N.F. $\times$ 2")	2
23.	54-4307	Washer, rear damper bottom mounting	2
24.	19-5305	Bottom bush, rear damper — Girling 64533645	2
25.	2-2138	Washer, rear damper bottom mounting	2
26.	14-1303	Nut, rear damper bottom mounting ($\frac{3}{8}$ " U.N.F.)	2
27.	24-1088	Washer, for grease nipple line 28	2
28.	47-9012	Grease nipple, swinging arm	2
29.	82-8476	Spacer tube, swinging arm spindle	2
30.	82-8478	Thrust bearing, swinging arm	2
31.	82-8477	Dust cap, swinging arm spindle	2
32.	42-4364	Lockwasher, swinging arm spindle nut	2
33.	21-755	Nut, swinging arm spindle ($\frac{13}{16}$ " U.N.F.)	2
34.	60-2683	Split pin, centre stand pivot ($\frac{1}{16}$ " $\times$ $\frac{3}{8}$ ")	2
35.	15-39	Washer, centre stand pivot ($\frac{1}{2}$ " $\times$ 27/32" $\times$ $\frac{1}{16}$ ")	2
36.	3-1346	Spring washer, centre stand pivot (17/32" $\times$ $\frac{7}{8}$ " $\times$ 19 G.)	2
37.	82-8413	Centre stand	2
38.	57-2331	Pedal rubber, centre stand	2
39.	65-4742	Return spring, prop stand	2
40.	82-8660	Prop stand leg	2
41.	21-769	Bolt, prop stand pivot ($\frac{7}{16}$ " U.N.F. $\times$ 1 $\frac{5}{16}$ ")	2
42.	14-404	Locknut, prop stand pivot bolt ($\frac{7}{16}$ " U.N.F.)	2
43.	68-4708	Return spring, centre stand	2
44.	24-1088	Washer, for grease nipple line 45	2
45.	47-9012	Grease nipple, centre stand	2
46.	82-8682	Coupling, centre stand pivot	2
47.	14-405	Locknut, centre stand pivot bar ($\frac{1}{2}$ " U.N.F.)	2
48.	83-1550	Pivot bar, centre stand	2

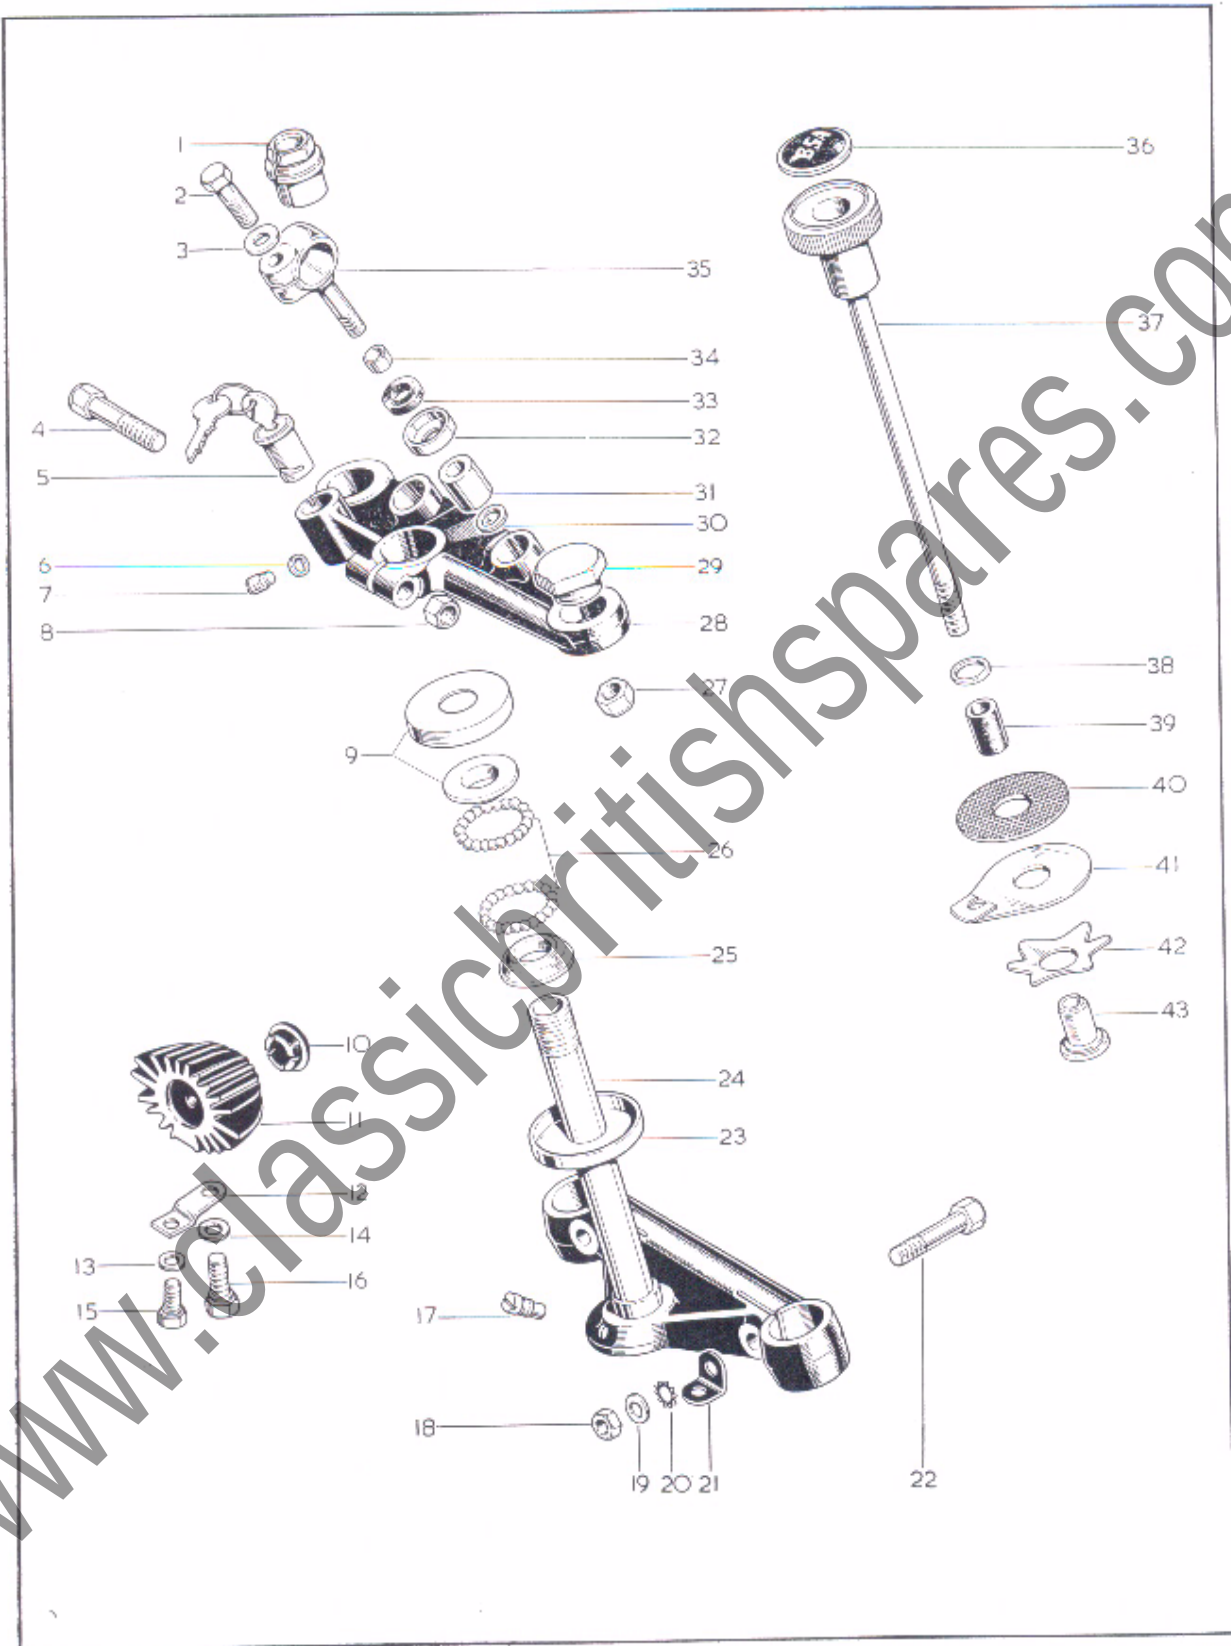

STEERING HEAD

Plate Ref.	Spares Number	Description	Per Set
1.	97-2108	Sleeve nut, steering column (1" U.N.F.)	2
2.	21-589	Bolt, handlebar clamp ($\frac{5}{16}$ " U.N.F. $\times$ 1 $\frac{1}{8}$ ")	2
3.	82-1335	Washer, handlebar clamp (21/64" $\times$ 17/32" $\times$ 1/8")	2
4.	21-684*	Bolt, top yoke pinch ($\frac{1}{8}$ " U.N.F. $\times$ 1 $\frac{3}{8}$ ")	2
5.	68-5050	Lock and key, steering (Wilmot Breeden 7-9398)	2
6.	97-2266	Sealing washer	2
7.	21-578	Grub screw, steering lock	2
8.	21-685	Nut, pinch bolt ($\frac{3}{8}$ " U.N.F.)	2
9.	97-1018	Top cone with dust cap	2
10.	97-2275	Heat sink plug	2
11.	97-2237	Diode heat sink	2
12.	97-2236	Heat sink bracket	2
13.	54-8003	Washer, bracket to fork leg bolt	2
14.	54-22	Washer, bracket bolt	2
15.	14-113	Bolt, bracket to fork leg ($\frac{5}{16}$ " U.N.F. $\times$ $\frac{5}{8}$ ")	2
16.	14-6102	Bolt, bracket to heat sink ($\frac{1}{4}$ " U.N.C. $\times$ $\frac{5}{8}$ ")	2
17.	97-2107	Pin, damper adjusting sleeve	2
18.	14-1303	Nut, bottom yoke pinch bolt ($\frac{3}{8}$ " U.N.F.)	2
19.	54-4307	Washer, pinch bolt	2
20.	82-8245	Lockwasher, cable guide bracket	2
21.	97-3682	Cable guide bracket	2
22.	97-2290	Pinch bolt, bottom yoke ($\frac{1}{8}$ " U.N.F. $\times$ 2 $\frac{1}{4}$ ")	2
23.	97-2622	Dust cover, bottom cone	2
24.	97-2621	Bottom yoke assembly	2
25.	97-439	Bottom cone	2
26.	97-2704	Steering head ball (1/4" diameter)	40
27.	14-1903	Nut, handlebar clamp (Nyloc $\frac{3}{8}$ " U.N.F.)	2
28.	97-2293	Top yoke	2
29.	97-2245	Top cap nut, main stanchion	2
30.	97-1529	Washer, handlebar clamp (25/64" $\times$ 7/8" $\times$ 3/32")	4
31.	97-1527	Bush, handlebar clamp	2
32.	97-2221	Cap, handlebar mounting	2
33.	97-1580	Rubber, handlebar mounting	2
34.	97-1581	Distance piece, handlebar mounting	2
35.	97-2291*	Handlebar clamp	2
36.	68-8166	Badge, damper knob	2
37.	97-3602	Damper rod complete	2
38.	97-565	Abutment washer	2
39.	97-1618	Rubber bush	2
40.	97-435	Damper friction disc	2
41.	97-3865	Damper anchor plate (Alternative 97-3856)	2
42.	97-95	Damper spring plate	2
43.	97-3601	Damper adjusting sleeve	2

*Special material: 4.—EN8R. 35.—EN16.



FRONT FORKS

Plate Ref.	Spares Number	Description	Per Set
1.	97-1971	Cable grommet, headlamp bracket	4
2.	97-2300	Outer cover (left-hand)	2
2.	97-2301	Outer cover (right-hand)	2
3.	82-4047	Cork washer	2
4.	97-1657	Spring abutment (top)	2
5.	97-3635	Fork rubber gaiter	2
6.	97-1892	Main spring	2
7.	97-2127	Circlip, shuttle	2
8.	75-5096	Spring support (lower)	2
9.	97-2091	Nut, hydraulic stop ($1\frac{1}{8}$ " U.N.F.)	2
10.	75-5104	Lower bush	2
11.	97-2154	Shuttle, damping	2
12.	97-2092	Stanchion (Early models)	2
12.	97-3878*	Stanchion (2 extra bleed holes)	2
13.	75-5099	Oil seal	2
14.	97-3633	Lower cover tube	2
15.	75-5199	"O" ring, sleeve	2
16.	75-5088	Outer retaining washer	2
17.	75-5105	Upper bush	2
18.	75-5091	Inner sleeve	2
19.	97-2294	Outer member (left-hand)	2
20.	40-5069	Sealing washer	2
21.	97-2126	Bolt, restrictor ($\frac{1}{4}$ " U.N.F. $\times 1\frac{3}{32}$ ")	2
22.	75-5095	Cap, outer member	2
23.	54-8003	Washer, cap bolt	4
24.	14-218	Bolt, outer member cap ($\frac{5}{16}$ " U.N.F. $\times 1\frac{3}{8}$ ")	4
25.	97-519	Drain plug	2
26.	54-42	Drain plug joint washer	2
27.	97-2295	Outer member (right-hand)	2
28.	97-2090	Restrictor, damping	2
	97-2672	Fork complete	..

*These stanchions must not be mixed with 97-2092 type.


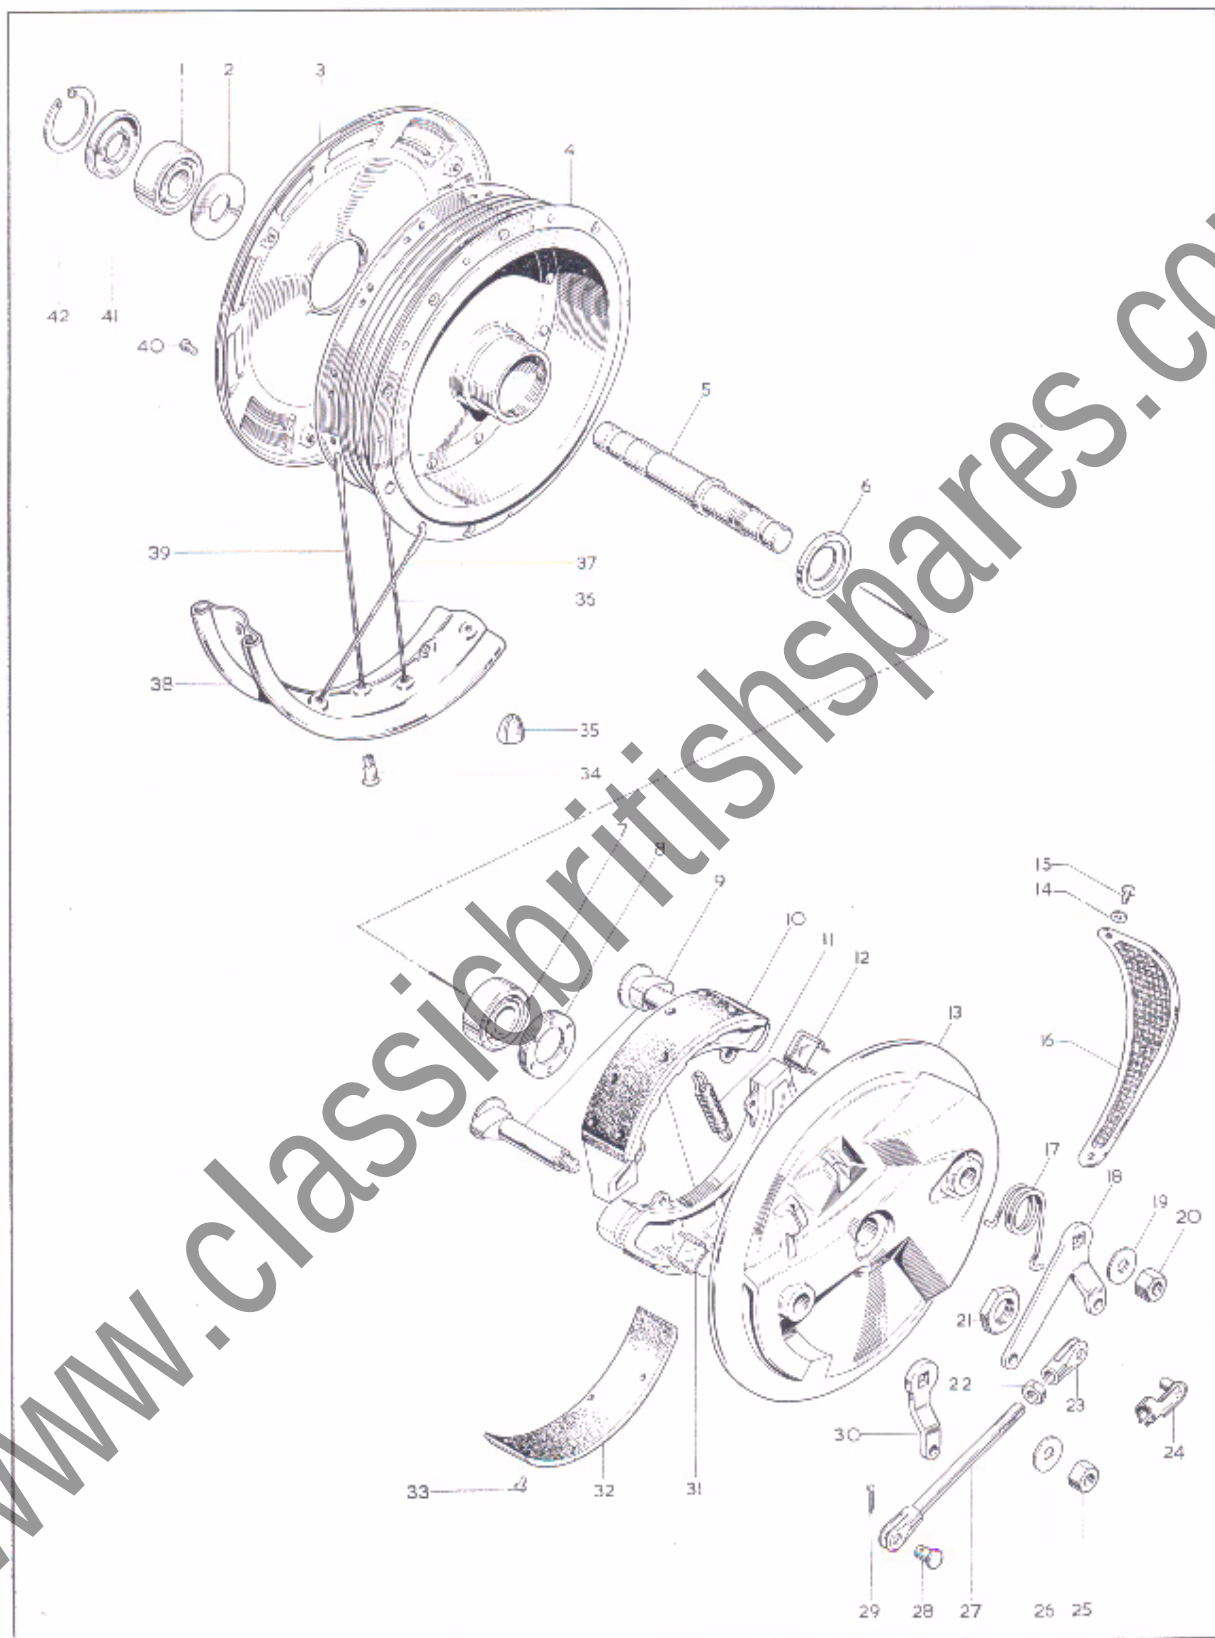


Plate 13

FRONT WHEEL

Plate Ref.	Spares Number	Description	Per Set
1.	42-5819	Bearing (Hoffman 120)	
2.	37-1481	Grease retaining cap (left-hand)	
3.	37-2240	Nave plate	
4.	37-3317	Front hub with spindle and bearings	
5.	37-3582	Wheel spindle	
6.	37-3337	Backing ring	
7.	42-5819	Bearing (Hoffman 120)	
8.	42-6335	Bearing retainer	
9.	37-2001	Brake cam	2
10.	37-1996	Brake shoe complete	2
11.	42-5841	Brake shoe spring	2
12.	37-2026	Brake shoe abutment pad	
13.	37-2129	Brake anchor plate with gauze, less brake details	
14.	82-2351	Washer, for screw line 15	3
15.	21-1998	Screw, gauze fixing (Tapite 4-40 $\times \frac{1}{16}$ ")	3
16.	37-1991	Gauze shield, air scoop	
17.	37-3522	Brake lever return spring	
18.	37-3453	Brake lever (front)	
19.	37-2027	Washer, lever fixing nut (1-1/32" $\times$ 17/32" $\times$ 13 G.)	
20.	14-303	Nut, lever fixing ($\frac{3}{8}$ " U.N.F.)	
21.	21-1995	Brake anchor plate nut	
22.	14-401	Brake rod fork end locknut ($\frac{1}{4}$ " U.N.F.)	
23.	37-2005	Brake rod fork end	
24.	37-2006	Brake cable spring pin	
25.	14-303	Nut, rear lever fixing ($\frac{3}{8}$ " U.N.F.)	
26.	37-2027	Washer, rear lever fixing nut (1-1/32" $\times$ 17/32" $\times$ 13 G.)	
27.	37-2003	Brake rod	2
28.	42-5836	Brake rod pivot pin	2
29.	60-2683	Split pin, pivot pin fixing ($\frac{1}{16}$ " $\times \frac{3}{8}$ ")	
30.	37-3454	Brake lever (rear)	
31.	37-2026	Brake shoe abutment pad	2
32.	19-7734	Brake lining	14
33.	37-2059	Brake lining rivet	40
34.	42-5812	Spoke nipple	as reqd.
35.	37-1197	Balance weight ($\frac{3}{4}$ ")	as reqd.
35.	37-1198	Balance weight (1")	10
36.	37-1709	Spoke (right-hand inner)	10
37.	37-1708	Spoke (right-hand outer)	
38.	37-1230	Rim (WM2-19, steel)	20
39.	37-1328	Spoke (left-hand)	3
40.	37-2092	Screw, nave plate fixing (4 B.A. $\times \frac{1}{4}$ ")	
41.	42-5820	Dust cap	
42.	57-280	Clamp, dust cap fixing	
	37-3312	Wheel complete with spindle and bearings	
	37-3461	Brake anchor plate complete with brake details	

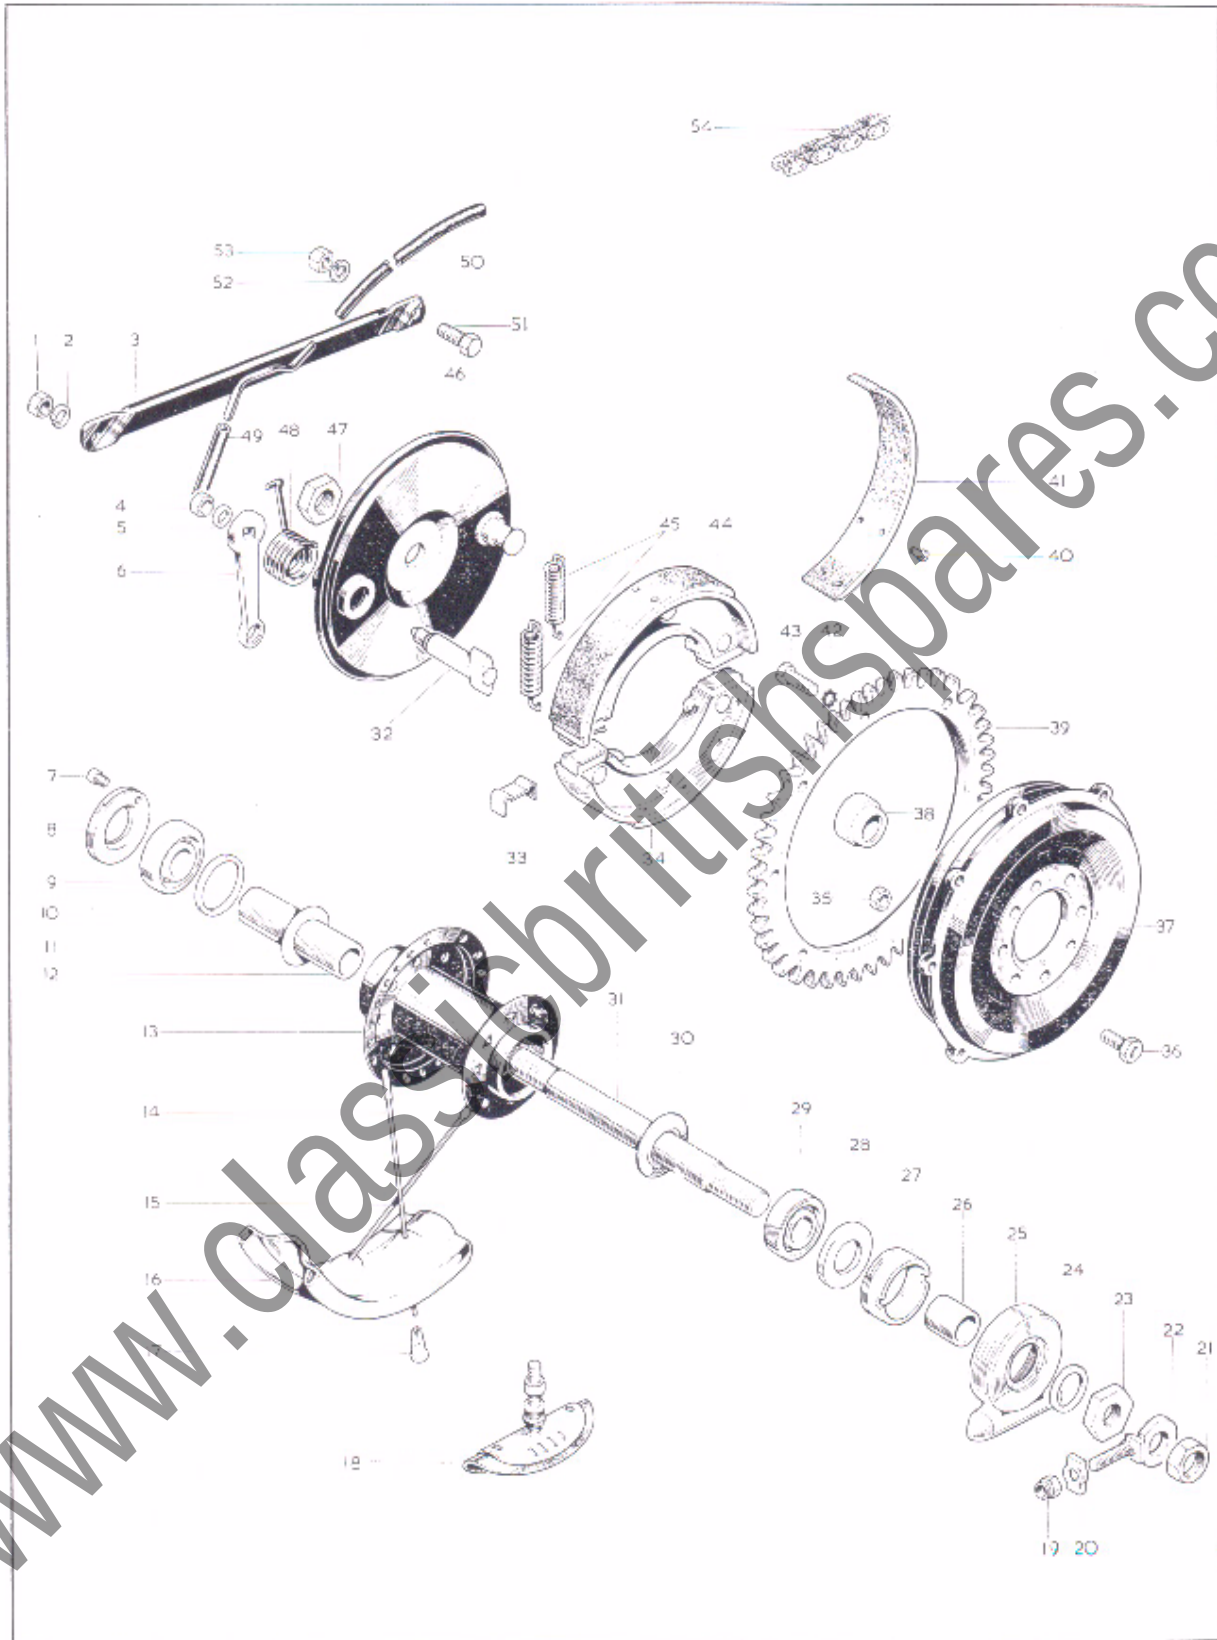

REAR WHEEL

Plate Ref.	Spares Number	Description	Per Set
1.	54-124	Nut, torque stay to brake plate ($\frac{7}{16}$ " B.S.C.)	
2.	40-4071	Spring washer, for nut line 1	
3.	82-7365	Torque stay, brake plate	
4.	54-4306	Nut, brake lever to cam spindle ($\frac{3}{8}$ " B.S.C.)	
5.	37-2027	Washer, for nut line 4	
6.	37-2015	Lever, brake plate	
7.	37-1710	Locking screw, bearing retainer (drive-side)	
8.	37-1021	Bearing retainer (drive-side)	
9.	42-5819	Bearing, drive-side (Hoffman 120)	
10.	37-1022	Backing ring, drive-side bearing	
11.	37-1474	Grease retainer (drive-side)	
12.	37-1278	Spacer tube	
13.	37-3457	Hub with spindle and bearings	
14.	37-1104	Spoke (drive-side)	20
15.	37-1106	Spoke (timing-side)	20
16.	37-270	Wheel rim (WM3-19)	
17.	42-5812	Spoke nipple	40
18.	19-6500	Security bolt	2
19.	14-1902	Nut, wheel adjuster ($\frac{5}{16}$ " U.N.F.)	2
20.	40-6040	End plate, wheel adjuster	2
21.	82-1747	Nut, outer spindle ($\frac{3}{4}$ " B.S.C.)	2
22.	37-2089	Wheel adjuster	2
23.	37-3426	Retaining nut (timing-side)	
24.	37-1280	Washer, for nut line 23	
25.	19-9221	Speedometer gearbox, m.p.h. and k.p.h. (Smiths BG.5330/168)	
26.	37-1477	Distance piece	
27.	37-1476	Speedometer drive ring	
28.	37-1654	Inner dust cap (timing-side)	
29.	42-5819	Bearing (Hoffman 120)	
30.	37-1635	Grease retainer (timing-side)	
31.	37-1281	Wheel spindle	
32.	37-1083	Brake cam spindle	
33.	41-6078	Pivot pad for brake shoe	2
34.	41-6076	Trailing brake shoe	
35.	75-6594	Nut, brake drum to hub ($\frac{5}{16}$ " B.S.C.)	8
36.	37-1690*	Bolt, brake drum to hub ($\frac{5}{16}$ " B.S.C. $\times$ $\frac{3}{4}$ ")	8
37.	37-1498	Brake drum	
38.	37-1024	Distance piece, drive-side bearing	
39.	37-3411	Sprocket (52 teeth)	
40.	35-6436	Rivet, brake lining	16
41.	19-7711	Brake lining	2
42.	29-541	Lockwasher, for bolt line 43	8
43.	37-1500*	Bolt, sprocket to brake drum ($\frac{1}{4}$ " B.S.C. $\times$ 13/16")	8
44.	41-6073	Leading brake shoe	
45.	42-5841	Spring, brake shoe	2
46.	37-1112	Brake anchor plate less brake details	
47.	37-3425	Nut, inner drive-side spindle	
48.	37-1090	Return spring, brake lever	
49.	82-9997	Chain oiler pipe (short)	
50.	82-8919	Chain oiler pipe (long)	
51.	21-1802	Bolt, anchor strap to swinging arm ($\frac{7}{16}$ " U.N.F. $\times$ 27/32")	
52.	40-4071	Spring washer, for nut line 53	
53.	14-304	Nut, for bolt line 51 ($\frac{7}{16}$ " U.N.F.)	
54.	19-8638	Rear chain ($\frac{5}{8}$ " $\times$ $\frac{3}{8}$ " $\times$ 107 pitch)	
	37-3456	Rear wheel with spindle and bearings	
	37-1111	Rear brake anchor plate with brake details	


*Special material: 36.—EN8R. 43.—EN8R.



HANDRAIL, MUDGUARDS, CHAINGUARD

Plate Ref.	Spares Number	Description	Per Set
1.	82-8490	Chainguard	
2.	29-541	Spring washer, chainguard bolt ($17/64" \times 15/32" \times .024"$)	
3.	14-206	Bolt, chainguard fixing ($1/4" \text{ U.N.F.} \times 1 3/4"$)	
4.	14-101	Bolt, stay to mudguard ($1/4" \text{ U.N.F.} \times 1/2"$)	
5.	82-8498	Front mudguard stay	
6.	82-8485	Handrail	
7.	21-1990	Bolt, handrail to frame ($5/16" \text{ U.N.F.} \times 5/8"$)	2
8.	15-5155	Washer, handrail to frame ($5/16" \times 1/2" \times .048"$)	2
9.	15-5155	Washer, handrail to frame ($5/16" \times 1/2" \times .048"$)	2
10.	14-1202	Nut, handrail to frame ($5/16" \text{ U.N.F.}$)	2
11.	14-1301	Nut, mudguard to frame ($1/4" \text{ U.N.F.}$)	2
12.	27-8560	Washer, mudguard to frame ($1/4" \times 5/8" \times .048"$)	2
13.	82-9327	Rear lamp support	
14.	68-6829	Rear lamp support plate	
15.	54-9012	Screw, plate to support (2 B.A. $\times 13/32"$)	3
16.	14-101	Bolt, number plate bracket ($1/4" \text{ U.N.F.} \times 1/2"$)	4
17.	54-9081	Washer, number plate bracket	4
18.	68-6830	Number plate bracket	
19.	14-1201	Nut, number plate bracket bolt ($1/4" \text{ U.N.F.}$)	4
20.	54-170	Lockwasher (bottom screw only)	
21.	21-5161	Nut for bottom screw (2 B.A.)	
22.	82-8195	Push-fix, rear side reflector	4
23.	82-8528	Rear Mudguard	
24.	19-943	Rear side reflector (Lucas 57111)	2
25.	82-8140	Rubber mat, side reflector	2
26.	21-547	Stud, rear lamp support ($1/4" \text{ U.N.F.} \times \text{U.N.F.} \times 7/8"$)	
27.	42-5575	Washer, support stud	
28.	14-1201	Nut, support stud ($1/4" \text{ U.N.F.}$)	
29.	27-8560	Washer, mudguard to frame ($1/4" \times 5/8" \times .048"$)	2
30.	14-101	Bolt, mudguard to frame ($1/4" \text{ U.N.F.} \times 1/2"$)	2
31.	27-8560	Washer, bridge to guard ($1/4" \times 5/8" \times .048"$)	2
32.	14-101	Bolt, bridge to guard ($1/4" \text{ U.N.F.} \times 1/2"$)	2
33.	14-101	Bolt, mudguard to frame ($1/4" \text{ U.N.F.} \times 1/2"$)	2
34.	27-8560	Washer, mudguard to frame ($1/4" \times 5/8" \times .048"$)	2
35.	27-8560	Washer, mudguard to frame ($1/4" \times 5/8" \times .048"$)	2
36.	14-1301	Nut, mudguard bolt ($1/4" \text{ U.N.F.}$)	2
37.	82-8518	Rear mudguard bridge	
38.	27-8560	Washer, bridge to guard ($1/4" \times 5/8" \times .048"$)	2
39.	14-1301	Nut, bridge to guard ($1/4" \text{ U.N.F.}$)	2
40.	14-114	Bolt, stay to fork ($5/16" \text{ U.N.F.} \times 3/4"$)	2
41.	54-55	Washer, stay to fork ($5/16" \times 5/8" \times 1/16"$)	2
42.	14-702	Nut, stay to fork ($5/16" \text{ U.N.F.}$)	2
43.	14-1301	Nut, stay to guard ($1/4" \text{ U.N.F.}$)	
44.	2-525	Washer, stay to guard ($1/4" \times 1/2" \times .048"$)	
45.	97-2270	Cable retainer	
46.	21-1822	Bolt, bracket to fork leg ($5/16" \text{ U.N.F.} \times 1/2"$)	2
47.	54-5504	Washer, bracket to fork leg	2
48.	82-8520	Front mudguard bracket	2
49.	14-1301	Nut, mudguard to bracket ($1/4" \text{ U.N.F.}$)	4
50.	2-525	Washer, mudguard to bracket ($1/4" \times 1/2" \times .048"$)	4
51.	97-3795	Front mudguard	
52.	14-101	Bolt, mudguard to bracket ($1/4" \text{ U.N.F.} \times 1/2"$)	4

Plate 16

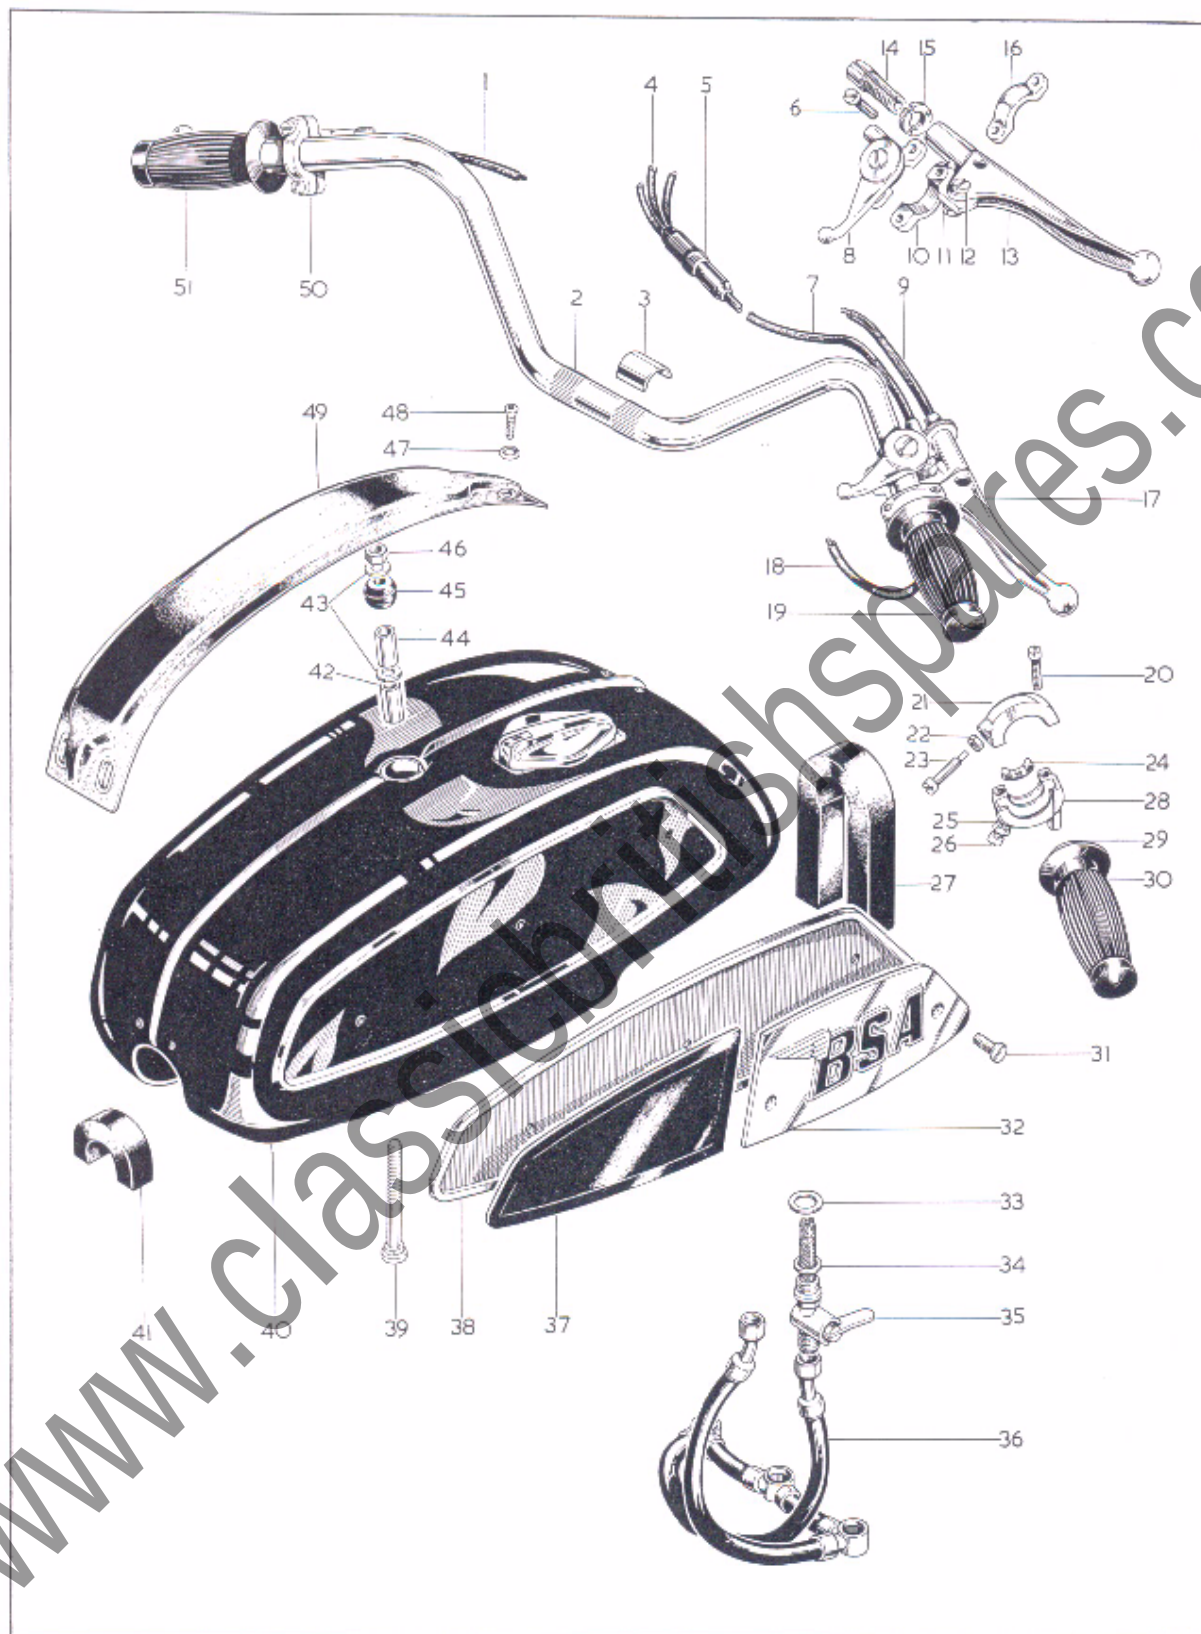

PETROL TANK, HANDLEBAR AND CONTROLS

Plate Ref.	Spares Number	Description	Per Set
	B.S.A. NO.	MAKERS NO.	
1.	60-1946	Clutch control cable	
2.	97-3648	Handlebar	
3.	75-4909	Handlebar sleeve	4
4.	60-2060	Air control cable, right-hand (carburetter to junction box) ..	
4.	60-2061	Air control cable, centre (carburetter to junction box) ..	
4.	60-2062	Air control cable, left-hand (carburetter to junction box) ..	
5.	60-1978	Junction box, air control cable	
6.	11/014	Brake lever clamp screw (short)	
6.	11/013	Brake lever clamp screw (long)	
6.	11/014	Clutch lever clamp screw	2
7.	60-1968	Air control cable, junction box to lever	
8.	12/594	Air control lever assembly	
9.	60-2076	Front brake cable complete	
10.	18/776	Brake control lever body	
10.	18/773	Clutch control lever body	
11.	18/053	Clutch and brake lever fulcrum pin nut	2
12.	18/087	Clutch and brake lever fulcrum pin	2
13.	18/754	Brake lever only	
13.	18/752	Clutch lever only	
14.	60-2071	Brake and clutch cable adjuster ($\frac{3}{8}$ " U.N.F.)	2
15.	60-2072	Brake and clutch cable adjuster locknut ($\frac{3}{8}$ " U.N.F.)	2
16.	12/595	Clutch lever clamp	
17.	60-2073	Front brake and air control complete	
18.	60-2202	Throttle control cable	
19.	19-7237	Throttle control complete	
20.	11/013	Body screw, throttle control	2
21.	364/013	Body top half, throttle control	
22.	5/077	Locknut, rotor stop screw	
23.	364/020	Adjusting screw, rotor stop	
24.	16/003	Friction spring, throttle control	
25.	16/010	Locknut, friction spring screw	


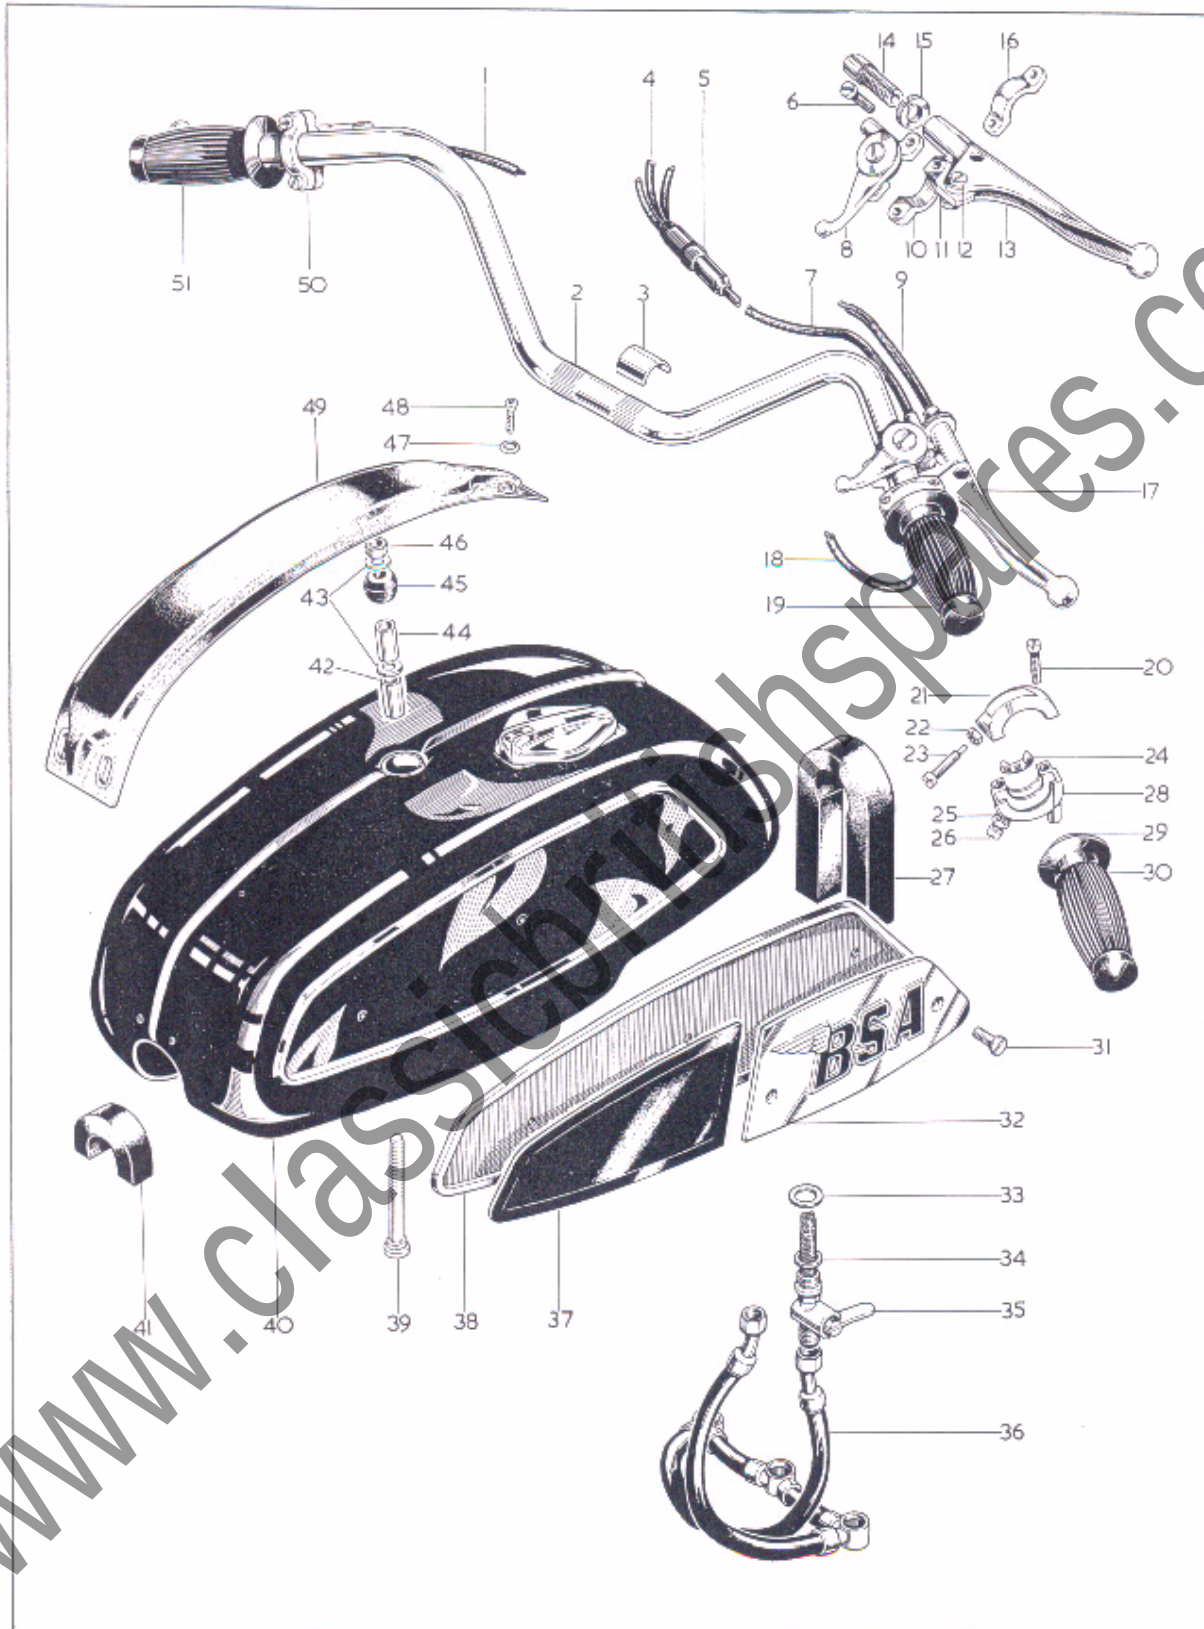


Plate 16—Contd.

PETROL TANK, HANDLEBAR AND CONTROLS


Plate Ref.	Spares Number	Description	Per Set
	B.S.A. NO.	MAKERS NO.	
26.		16/009 Screw, friction spring	
27.	82-9919	Tank mounting rubber (front)	
28.		364/014 Body bottom half, throttle control	
29.		364/017 Rotor, throttle control	
30.	19-7222	Handlebar grip (right-hand)	
31.	21-6206	Screw, badge and panel mounting (2 B.A. $\times \frac{1}{2}$ ")	6
32.	82-8610	Tank badge (left-hand)	
32.	82-8611	Tank badge (right-hand)	
33.	83-2	Seal washer, petrol tap	2
34.	70-7351	Petrol tap seal	2
35.	82-4972	Main petrol tap	
35.	82-4971	Reserve petrol tap	
36.	82-9436	Petrol pipe assembly	
37.	82-8591	Knee grip (right-hand)	
37.	82-8590	Knee grip (left-hand)	
38.	82-8589	Tank panel (right-hand)	
38.	82-8588	Tank panel (left-hand)	
39.	21-1993	Tank mounting bolt ($\frac{5}{16}$ " U.N.F. $\times \frac{3}{4}$ ")	
40.	82-8391	Petrol tank with fixed fittings	
41.	82-9920	Tank mounting rubber (rear)	
42.	82-8327	Spacer tube, tank mounting	
43.	3-101	Washer, tank mounting	2
44.	76-4120	Spacer tube, tank mounting	
45.	40-8035	Tank mounting rubber	
46.	14-302	Nut, for bolt line 39 ($\frac{5}{16}$ " U.N.F.)	
47.	82-8947	Washer, for screw line 48	4
48.	82-8946	Screw, petrol tank styling strip (2 B.A. $\times \frac{5}{8}$ ")	4
49.	82-8609	Petrol tank styling strip	
50.	60-2074	18/952 Clutch control complete	
51.	68-8717	Handlebar grip (left-hand)	

Note:—Where no B.S.A. part number is quoted, the part is only available from the makers.

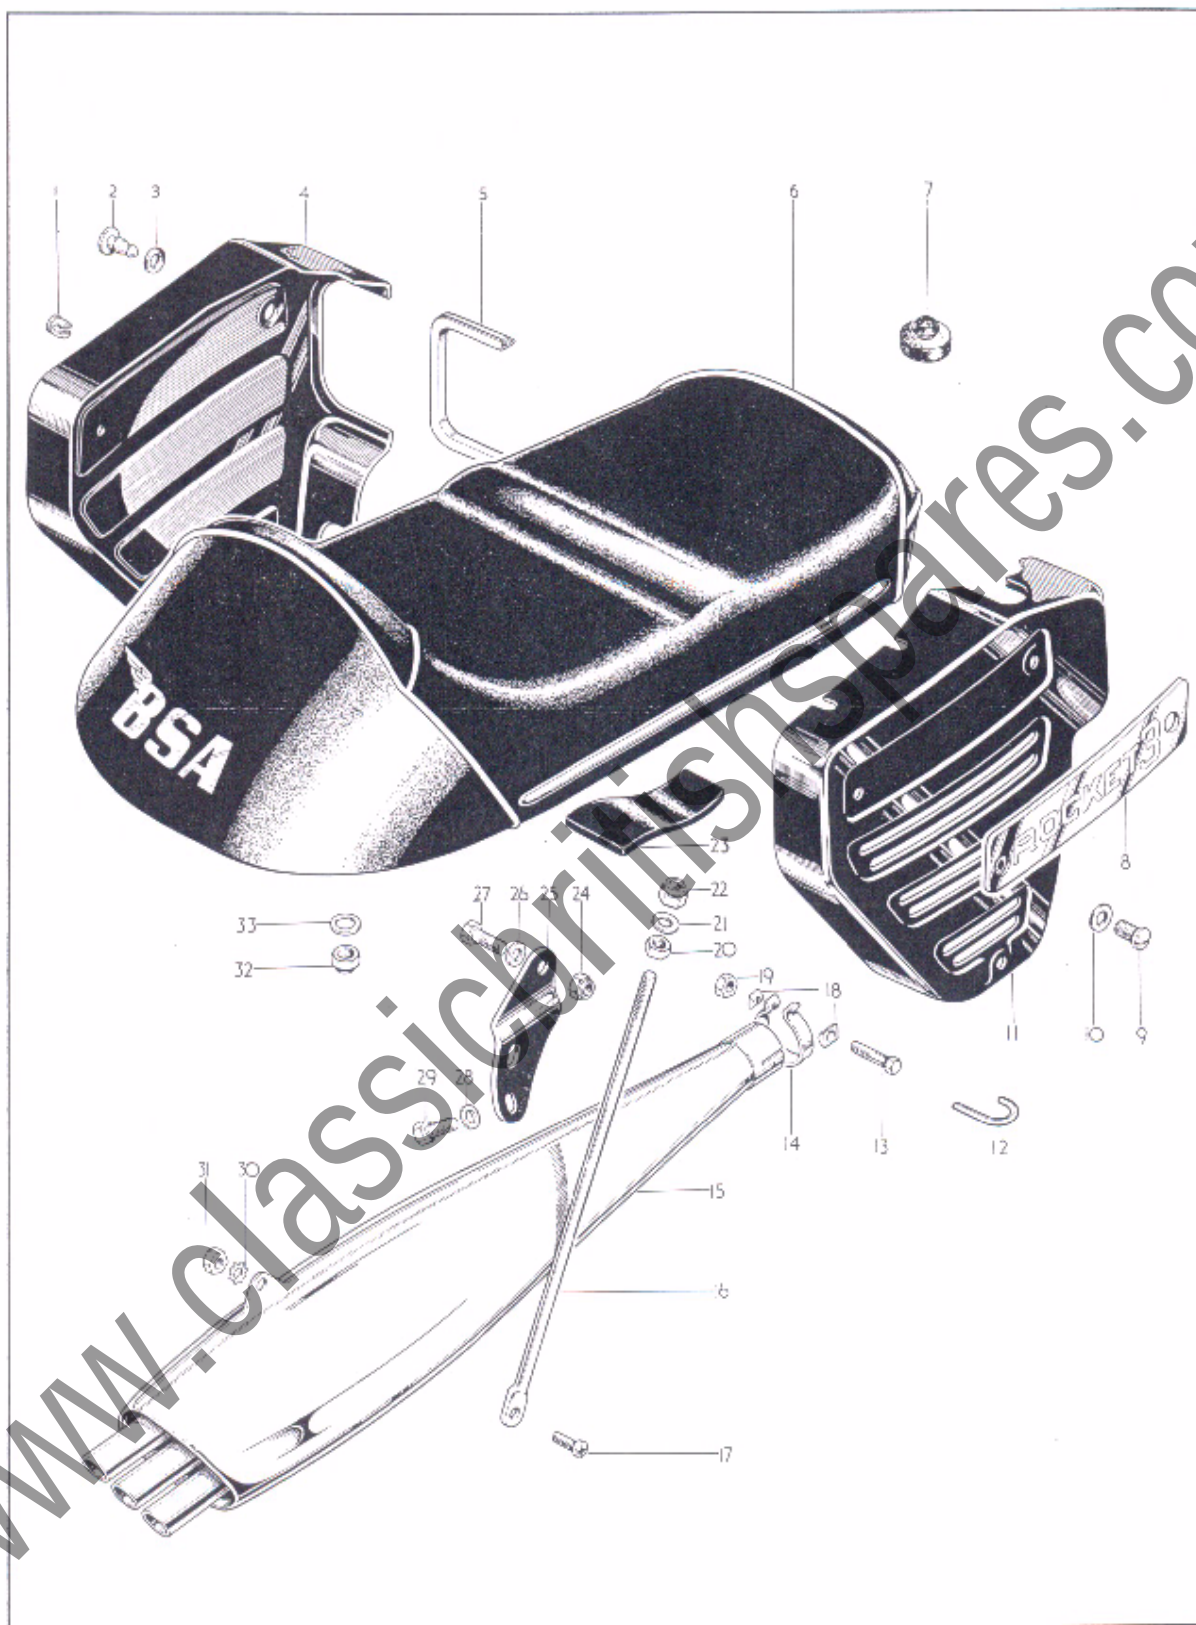


TWINSEAT, SIDECOVERS, SILENCERS

Plate Ref.	Spares Number	Description	Per Set
1.	97-2273	Clutch cable clip	
2.	68-9223	"Oddie" stud, left-hand sidecover	
2.	83-1430	Sidecover fastener	2
3.	68-9226	"Oddie" stud rubber	1
4.	82-8850	Sidecover complete (left-hand)	
5.	82-8744	Styling strip, sidecovers	2
6.	82-8942	Twinseat complete	
7.	40-8046	Front mounting rubber, twinseat	2
8.	60-853	Sidecover name plate (right-hand)	
8.	60-854	Sidecover name plate (left-hand)	
9.	21-767	Screw, sidecover to oil tank ($\frac{1}{4}$ " U.N.F. $\times \frac{7}{16}$ ")	
9.	21-1979	Screw, sidecover to oil tank	2
10.	82-9964	Rubber washer, sidecover to oil tank screw	3
11.	82-8849	Sidecover complete (right-hand)	
12.	83-1456	Protective strip, sidecover (right-hand)	
13.	14-219	Bolt, silencer to exhaust pipe clip ($\frac{5}{16}$ " U.N.F. $\times 1\frac{1}{2}$ ")	2
14.	54-2537	Clip, silencer to exhaust pipe	2
15.	70-9037	Silencer (right-hand)	
15.	70-9036	Silencer (left-hand)	
16.	82-8519	Silencer support stay	2
17.	54-9012	Bolt, support stay to silencer (2 B.A. $\times 1\frac{1}{32}$ ")	2
18.	75-2719	Saddle washer, silencer clip	4
19.	14-1302	Nut, silencer clip bolt ($\frac{5}{16}$ " U.N.F.)	2
20.	14-302	Nut, support stay to handrail ($\frac{5}{16}$ " U.N.F.)	2
21.	2-923	Washer, support stay to handrail ($\frac{5}{16}$ " $\times \frac{5}{8}$ " $\times \frac{1}{16}$ ")	2
22.	14-1902	Nut, support stay to handrail ($\frac{5}{16}$ " U.N.F.)	2
23.	82-8667	Support rubber, twinseat	2
24.	14-1303	Nut, bracket to silentbloc ($\frac{3}{8}$ " U.N.F.)	2
25.	82-8584	Silencer bracket (left-hand)	
25.	82-8583	Silencer bracket (right-hand)	
25.	2-1733	Washer, bracket to silentbloc	2
27.	14-129	Bolt, bracket to silentbloc ($\frac{3}{8}$ " U.N.F. $\times 1\frac{1}{4}$ ")	2
28.	76-12	Washer, bracket to silencer—left-hand ($21/64$ " $\times 9/16$ " $\times 3/32$ ")	2
28.	54-8003	Washer, bracket to silencer—right-hand	2
29.	14-113	Bolt, bracket to silencer—left-hand ($\frac{5}{16}$ " U.N.F. $\times \frac{5}{8}$ ")	2
29.	21-1822	Bolt, bracket to silencer—right-hand ($\frac{5}{16}$ " U.N.F. $\times \frac{1}{2}$ ")	2
30.	54-170	Lockwasher, stay to silencer bolt	2
31.	21-5161	Nut, support stay to silencer bolt (2 B.A.)	2
32.	14-1202	Nut, twinseat mounting ($\frac{5}{16}$ " U.N.F.)	2
33.	15-5155	Washer, twinseat mounting ($\frac{5}{16}$ " $\times \frac{5}{8}$ " $\times .040$ ")	2

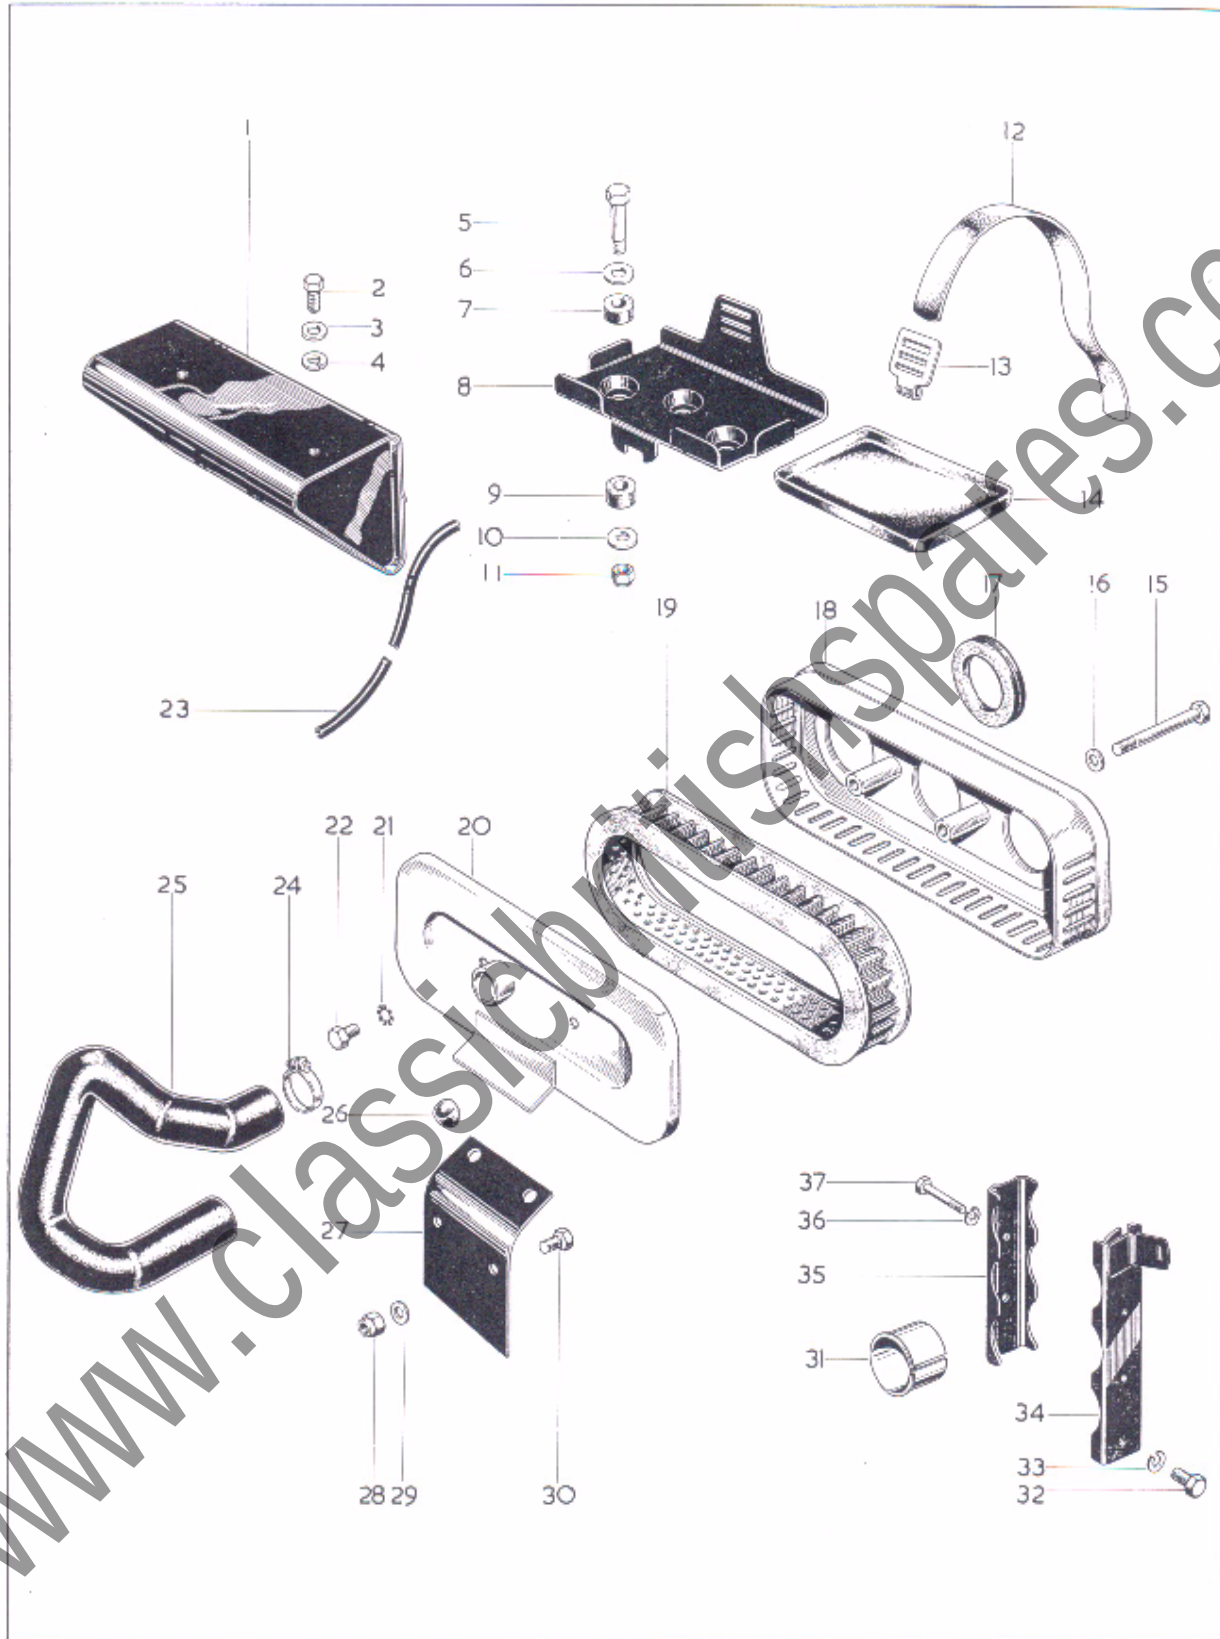

TOOLBOX, BATTERY CARRIER, AIR CLEANER


Plate Ref.	Spares Number	Description	Per Set
1.	82-8495	Toolbox	
2.	14-101	Bolt, toolbox to frame ($\frac{1}{4}$ " U.N.F. $\times \frac{1}{2}$ ")	2
3.	2-525	Washer, toolbox to frame	2
4.	2-1462	Spring washer, toolbox to frame bolt ($\frac{1}{4}$ " $\times 19/32$ " $\times .040$ ")	2
5.	21-768	Bolt, battery carrier to frame ($\frac{5}{16}$ " U.N.F. $\times 1\frac{7}{16}$ ")	3
6.	2-2138	Washer (top), battery carrier to frame bolt ($\frac{3}{8}$ " $\times \frac{3}{4}$ " $\times \frac{1}{16}$ ")	3
7.	40-4524	Rubber, battery carrier to frame	3
8.	82-8463	Battery carrier	3
9.	40-4524	Rubber, battery carrier to frame	3
10.	82-9008	Washer (bottom), battery carrier to frame bolt	3
11.	14-1202	Nut, battery carrier to frame ($\frac{5}{16}$ " U.N.F.)	3
12.	68-4577	Battery strap	
13.	4-2608	Battery strap hook	
14.	68-4597	Battery tray	
15.	14-213	Bolt, air cleaner box ($\frac{1}{4}$ " U.N.F. $\times 3\frac{1}{2}$ ")	2
16.	40-2705	Washer, for bolt line 15 ($17/64$ " $\times 15/32$ " $\times \frac{1}{16}$ ")	2
17.	82-9562	Grommet, air cleaner box	3
18.	82-9675	Air cleaner box	
19.	82-9845	Air cleaner element	
20.	82-8969	Air cleaner cover	
21.	29-541	Lockwasher, air cleaner cover ($17/64$ " $\times 15/32$ " $\times .024$ ")	2
22.	14-101	Bolt, air cleaner cover ($\frac{1}{4}$ " U.N.F. $\times \frac{1}{2}$ ")	2
23.	82-7431	Battery vent pipe	
24.	60-706	Clip, breather pipe to air cleaner	2
25.	82-8743	Engine breather pipe	
26.	82-7835	Rubber buffer, support bracket	2
27.	82-9682	Support bracket	
28.	14-1201	Nut, bracket to frame bolt ($\frac{1}{4}$ " U.N.F.)	2
29.	2-525	Washer, bracket to frame bolt ($\frac{1}{4}$ " $\times \frac{1}{2}$ " $\times .048$ ")	2
30.	14-101	Bolt, bracket fixing ($\frac{1}{4}$ " U.N.F. $\times \frac{1}{2}$ ")	2
31.	82-9654	Sleeve for coils	3
32.	14-101	Bolt, coil support to frame ($\frac{1}{4}$ " U.N.F. $\times \frac{1}{2}$ ")	
33.	2-1462	Spring washer, coil support to frame bolt ($\frac{1}{4}$ " $\times 19/32$ " $\times .040$ ")	
34.	83-1384	Coil support complete	
35.	82-8549	Coil clamp	
36.	24-7068	Spring washer, coil clamp bolt	2
37.	21-1981	Bolt, coil clamp (number 10 U.N.F. $\times 2$ ")	2

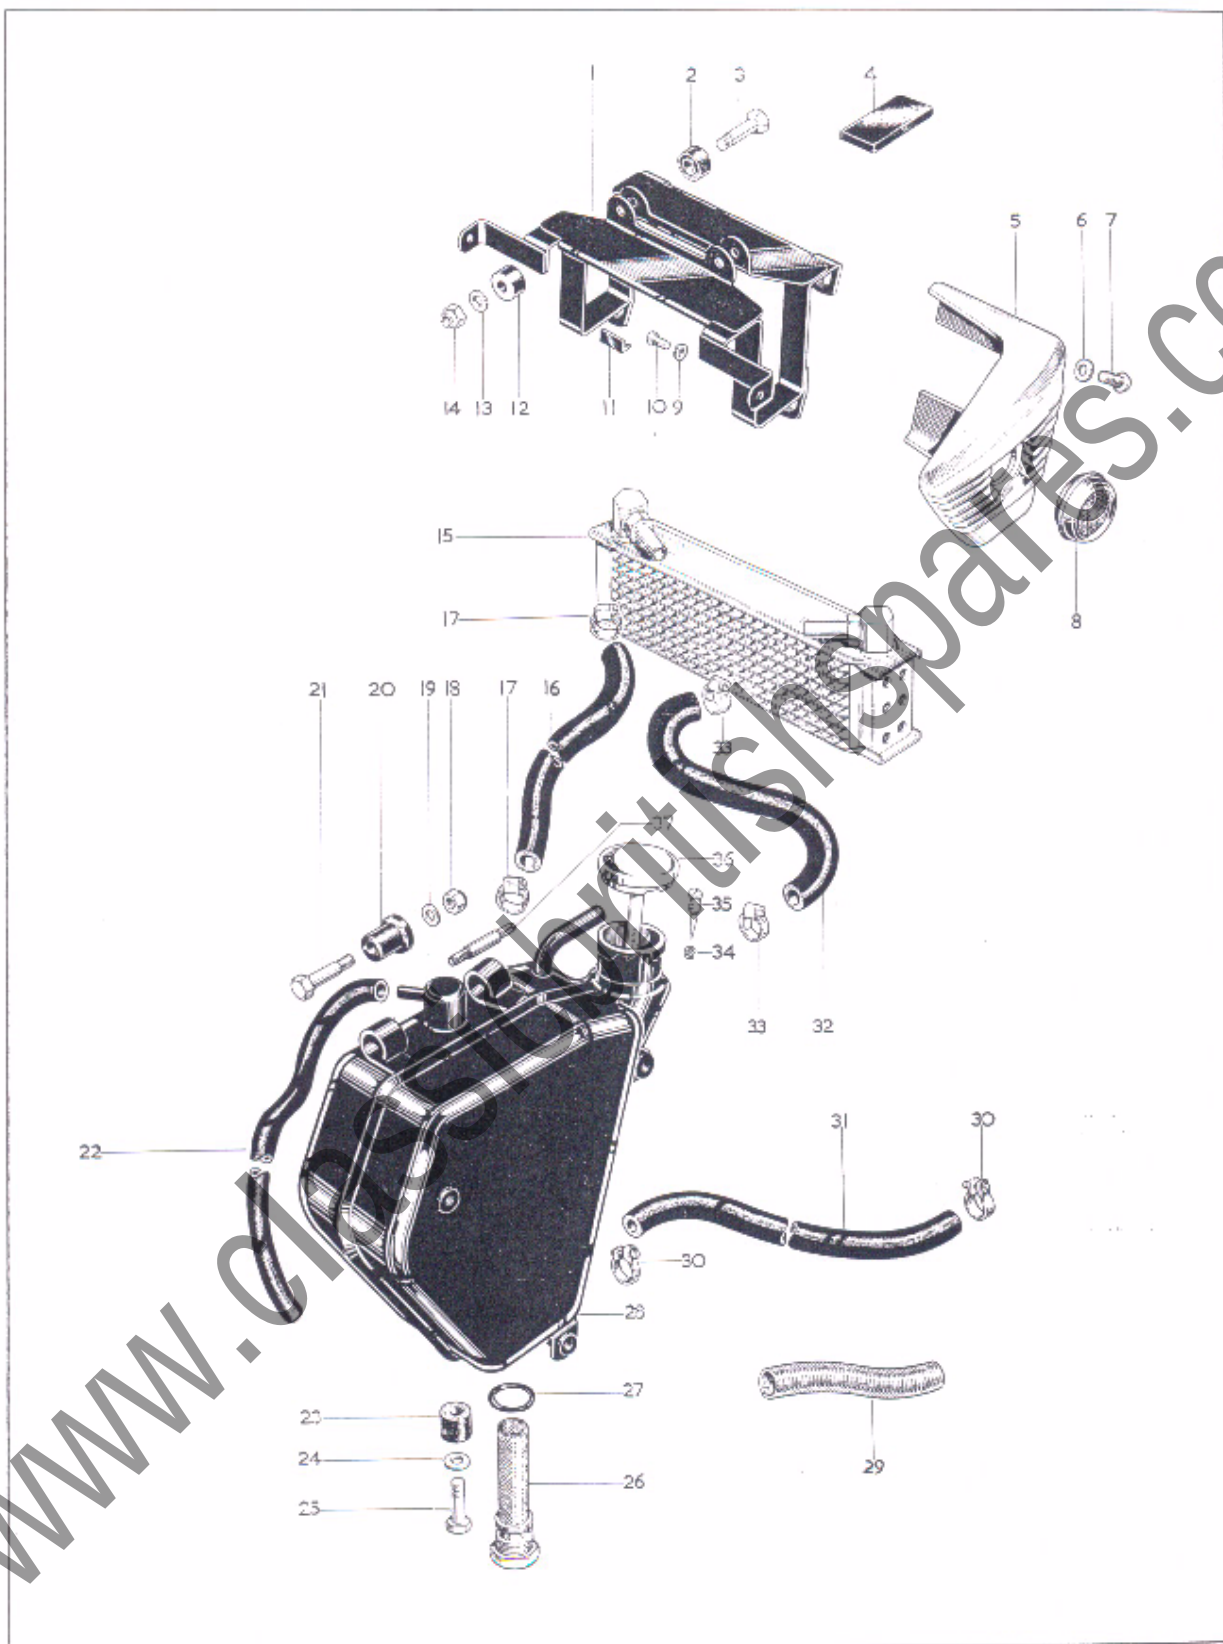

OIL TANK AND OIL COOLER


Plate Ref.	Spares Number	Description	Per Set
1.	82-9687	Oil cooler cradle	2
2.	82-8657	Rubber, oil cooler mounting	2
3.	21-752	Bolt, oil cooler mounting ($\frac{1}{4}$ " U.N.F. $\times$ 1-15/64")	2
4.	82-8667	Rubber pad, petrol tank to cooler cradle	2
5.	82-8628	Oil cooler cover (left-hand)	2
5.	82-8629	Oil cooler cover (right-hand)	2
6.	2-525	Washer, cover fixing—front ($\frac{1}{4}$ " $\times$ $\frac{1}{2}$ " $\times$.048")	4
7.	21-761	Screw, cover fixing—front ($\frac{1}{4}$ " U.N.F. $\times$ 9/16")	4
8.	19-987	Side reflector (Lucas 57161)	2
9.	2-1096	Washer, cover fixing—rear ($\frac{3}{8}$ " $\times$ $\frac{3}{8}$ " $\times$.044")	2
10.	21-762	Screw, cover fixing—rear (Posidrive number 10 $\times$ 9/16")	2
11.	82-9322	Packing rubber, oil cooler to strap	8
12.	82-8657	Rubber, cooler cradle mounting	2
13.	2-525	Washer, cooler cradle mounting ($\frac{1}{4}$ " $\times$ $\frac{1}{2}$ " $\times$.048")	2
14.	14-1301	Nut, cooler cradle mounting ($\frac{1}{4}$ " U.N.F.)	2
15.	82-9315	Oil cooler	
16.	70-8906	Flexible pipe, oil cooler to rocker box	
17.	60-702	Clip, flexible oil pipe	2
18.	14-1301	Nut, oil tank top mounting ($\frac{1}{4}$ " U.N.F.)	3
19.	27-8560	Washer, oil tank top mounting ($\frac{1}{4}$ " $\times$ $\frac{5}{8}$ " $\times$.048")	4
20.	40-8436	Rubber, oil tank top mounting	2
21.	21-754	Bolt, oil tank top mounting ($\frac{1}{4}$ " U.N.F. $\times$ 1 $\frac{3}{8}$ ")	
22.	82-9664	Breather pipe, oil tank	
23.	82-8459	Rubber, bottom oil tank mounting	
24.	2-923	Washer, bottom oil tank mounting ($\frac{5}{16}$ " $\times$ $\frac{5}{8}$ " $\times$ $\frac{1}{16}$ ")	
25.	14-217	Bolt, bottom oil tank mounting ($\frac{5}{16}$ " U.N.F. $\times$ 1 $\frac{1}{4}$ ")	
26.	83-1387	Oil tank filter plug complete	
27.	68-610	"O" ring, filter plug	
28.	82-8452	Oil tank with fixed fittings	
29.	82-9530	Oil feed pipe spring	
29.	82-9531	Oil return pipe spring	
30.	70-6848	Clip, flexible oil feed pipe	2
31.	70-8904	Flexible pipe, oil tank to engine	
32.	70-8907	Flexible pipe, cooler to tank	
33.	60-702	Clip, flexible oil pipe	2
34.	82-6874	Metering screw spring	
35.	82-9435	Metering screw, chain oiler ($\frac{1}{4}$ " U.N.F. $\times$ 29/64")	
36.	82-8627	Filler cap, dipstick	
37.	83-1386*	Stud, oil tank front fixing ($\frac{1}{4}$ " U.N.F./U.N.F. $\times$ 1-9/16")	
	82-9918	Clip, oil pipes to frame (not illustrated)	4

*Special material: 37.—EN14B.

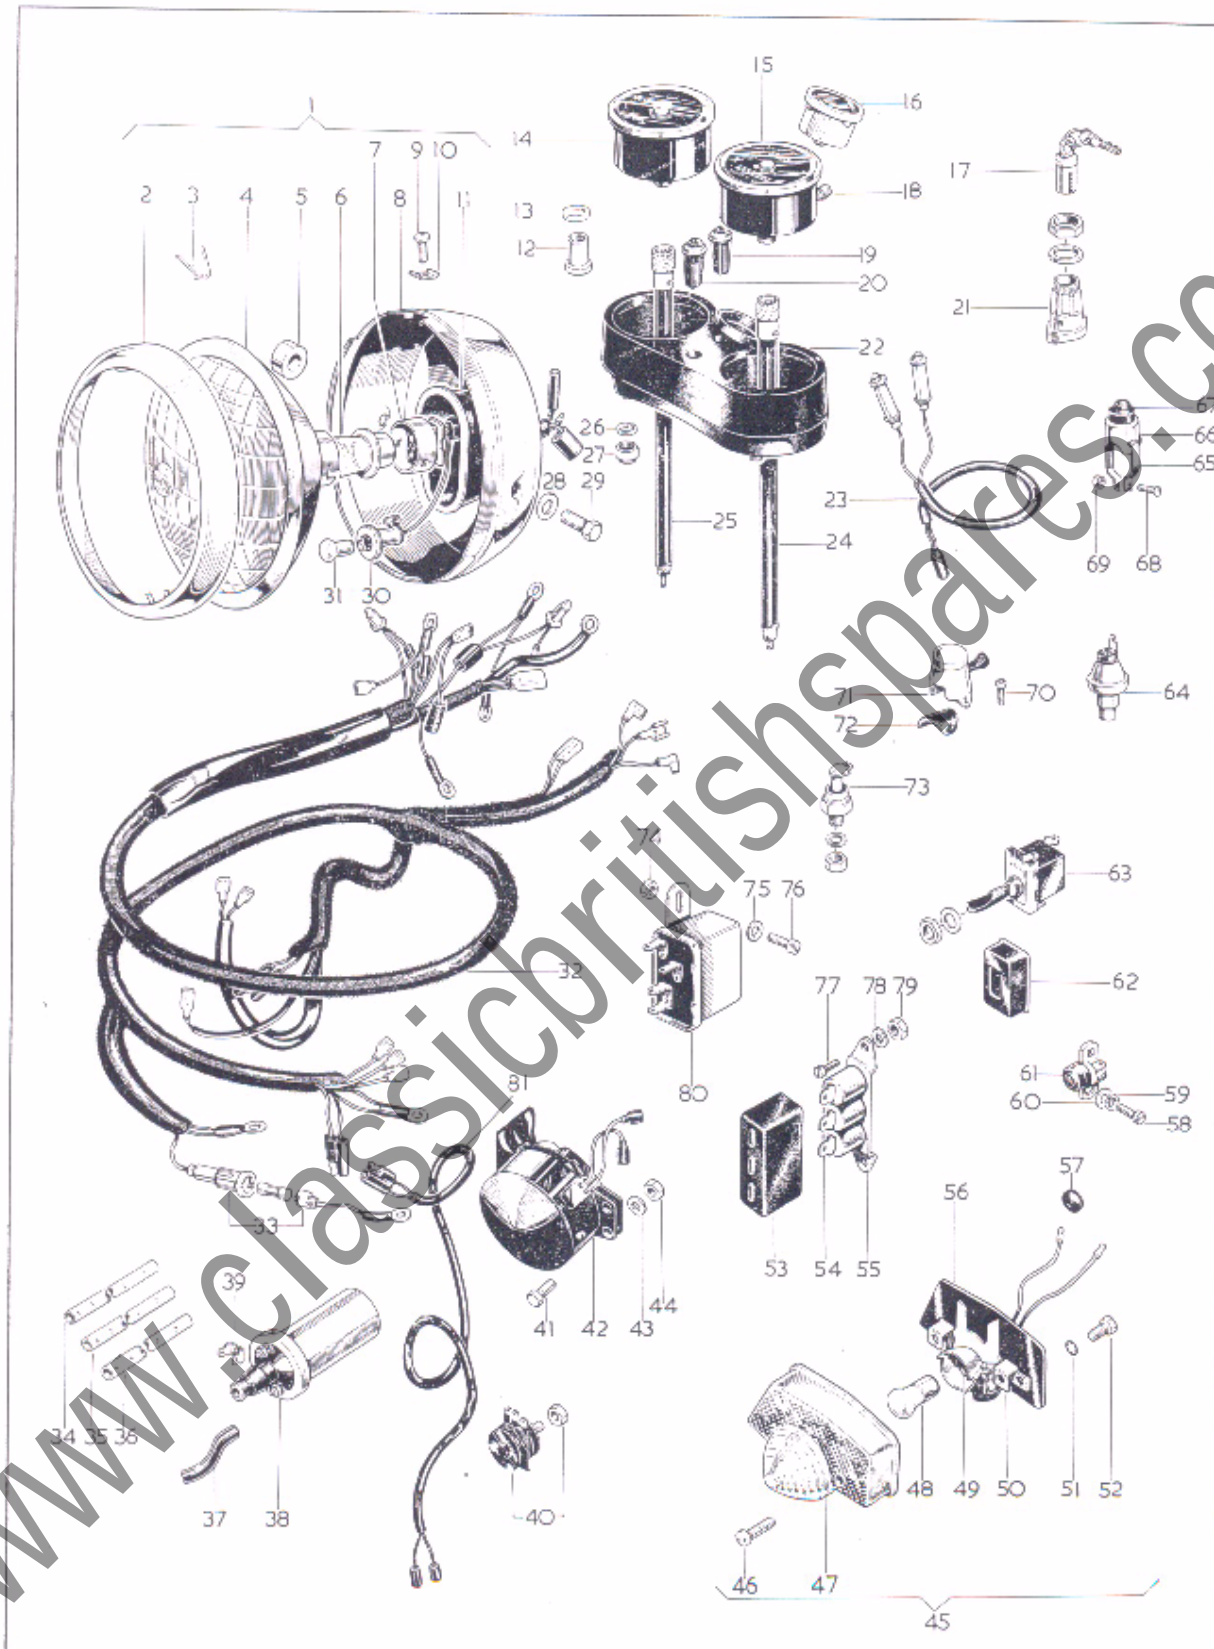

ELECTRICAL EQUIPMENT

Plate Ref.	Spares Number	Description	Per Set
1.	19-981	Headlamp complete, standard (Lucas 59892)	
1.	19-1149	Headlamp complete, Europe (Lucas 59894)	
2.		Headlamp rim (Lucas 553248)	
3.		Wire fixing light unit (Lucas 504665)	
4.		Light unit, standard (Lucas 516798)	
4.		Light unit, Europe (Lucas 54522680)	
5.	97-1932	Headlamp spacer	
6.		Main bulb, standard (Lucas 446)	
6.		Main bulb, Europe (Lucas 410)	
7.		Sleeve, terminal (Lucas 555910)	
8.		Lamp body (Lucas 54524099)	
9.		Screw fixing, headlamp rim (Lucas 144921)	
10.		Plate for rim screw (Lucas 534296)	
11.		Extension cover (Lucas 54524048)	
12.	97-3632	Sleeve nut, speedometer/tachometer mounting (10 U.N.F.)	4
13.	70-8770	Washer, for nut line 12	4
14.	19-8940	Tachometer head (Smiths RSM.3003/01)	
15.	19-8936	Speedometer head, m.p.h. (Smiths SSM.5001/05)	
15.	19-8945	Speedometer head, k.p.h. (Smiths SSM.5001/12)	
16.	19-1164	Ammeter (Lucas 36421)	
17.	82-6981	Ignition lock and key (Wilmot Breedon 1-6280)	
18.	19-9080	Speedometer trip shaft (Smiths 41-148-203-10)	
19.	19-982	High beam warning light, green (Lucas 38191)	
20.	19-965	Oil pressure warning light, red (Lucas 38189)	
21.	19-1775	Ignition switch (Lucas 31899)	
22.	97-2297	Binnacle complete	
23.	19-1303	Light lead for speedometer/tachometer (Lucas 54953446)	
24.	19-9090	Speedometer cable (Smiths)	
25.	19-9091	Tachometer cable (Smiths DF.9111/00)	
26.	54-9081	Spring washer, binnacle mounting	4
27.	14-1201	Nut, binnacle mounting (1/4" U.N.F.)	4
28.		Washer, headlamp mounting (Lucas 137498)	2
29.		Bolt, headlamp mounting (Lucas 112201)	2
30.		Pilot bulb holder (Lucas 54573590)	
		Interior, pilot bulb holder (Lucas 553780)—not illustrated	
31.		Pilot bulb (Lucas 989)	
		*Adaptor, headlamp Europe (Lucas 553738) not illustrated	
		*Spring, retaining main bulb—Europe (Lucas 556442)—not illustrated	
32.	19-1304	Main wiring harness (Lucas 54955800)	
33.		Fuse holder complete (Lucas 54190387)	
33.		Fuse only, 35 amp. (Lucas 188218)	
34.	19-1874	Identification sleeve for high-tension lead number 1	
35.	19-1875	Identification sleeve for high-tension lead number 2	
36.	19-1876	Identification sleeve for high-tension lead number 3	
37.	19-1867	High-tension lead (Lucas 842189) for use with Siba coil	3
37.	19-1882	High-tension lead (Lucas 54956435) for use with Lucas coil	3
38.	19-1864	High-tension coil, 12 volt (Siba 32000)	3
38.	19-1881	High-tension coil (Lucas 45221)	3
39.	19-970	"Lucar" blade for coil (Lucas 54190108)	3
40.	19-1715	Rectifier with nut (Lucas 49072)	

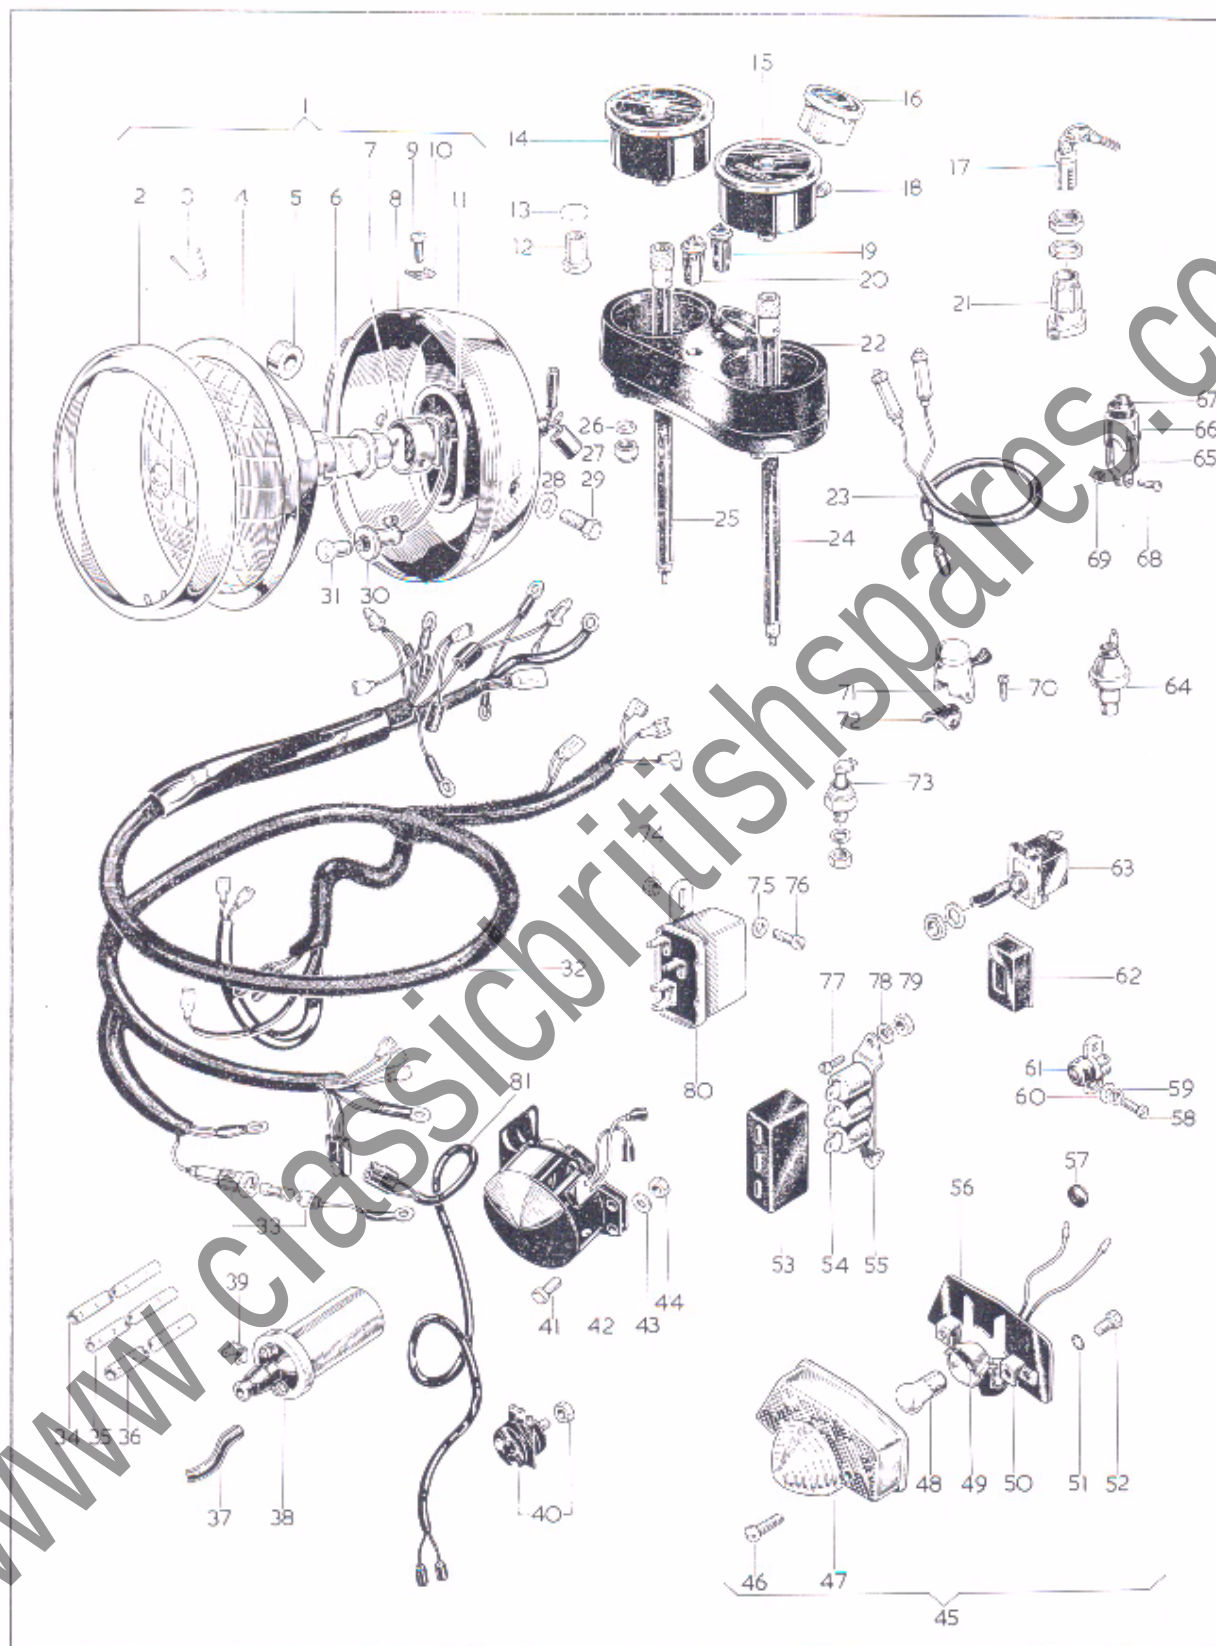


ELECTRICAL EQUIPMENT

Plate Ref.	Spares Number	Description	Per Set
41.	14-104	Bolt, horn mounting ($\frac{1}{4}$ " U.N.F. $\times$ $\frac{7}{8}$ ")	4
42.	19-2070	Windtone horn, right-hand (Clearhooter P.201)	
42.	19-2071	Windtone horn, left-hand (Clearhooter P.101)	
43.	2-525	Washer, horn mounting ($\frac{1}{4}$ " $\times$ $\frac{1}{2}$ " $\times$.048")	4
44.	14-1801	Nut, horn mounting ($\frac{1}{4}$ " U.N.F.)	4
45.	19-1245	Stop/tail lamp (Lucas 53973)	
46.		Screw for stop lamp lens (Lucas 144921)	
47.		Lens for stop lamp (Lucas 54577109)	
48.		Bulb for stop lamp (Lucas 380)	
		Interior, bulb holder (Lucas 573828) <i>not illustrated</i>	
49.		Bulb holder assembly (Lucas 54578213)	
50.		Base assembly (Lucas 54578212)	
51.		Washer, for fixing screw (Lucas 188330)	2
52.		Screw for fixing lamp (Lucas 110714)	2
53.	19-1848	Rubber cover, condenser pack (Lucas 54418528)	
54.	19-1847	Condenser (Lucas 54420128)	3
55.	19-1861	Condenser base plate (Lucas 54418526)	
56.		Gasket, stop/tail lamp (Lucas 54571677)	
57.	19-1873	Grommet, for tail lamp leads (Lucas 199001)	2
58.	21-770	Screw, stop switch mounting (number 10 U.N.F. $\times$ $\frac{1}{2}$ ")	2
59.	24-978	Spring washer, stop switch mounting ($\frac{1}{4}$ " $\times$ $\frac{3}{8}$ " $\times$ 19 G.)	2
60.	2-1096	Washer, stop switch mounting ($\frac{3}{16}$ " $\times$ $\frac{3}{8}$ " $\times$.044")	2
61.	19-916	Stop lamp switch (Lucas 34815)	
62.	82-9692	Rubber cover for light switch, line 63	
63.	19-1030	Light switch (Lucas 31788)	
64.	19-6508	Oil pressure switch (Smiths 53001107)	
65.	68-9351	Clip, cut-out switch mounting	2
66.	97-2259	Cup, ignition cut-out switch	
67.	19-1152	Ignition cut-out switch (Lucas 35835)	
68.	54-6510	Screw, cut-out switch mounting clip	
69.	21-5160	Nut, for screw line 68 (2 B.S.A.)	
70.	97-1994	Screw, dipper switch to handlebar (number 6 $\times$ 32 Tapitite)	2
71.	19-1150	Horn and dipper switch test cable (Lucas 31563)	
72.	19-1153	Mounting pad for dipper switch (Lucas 380459)	
73.	19-1735	Zener diode (Lucas 49345)	
74.	21-778	Nut, horn relay mounting (number 10 U.N.F.)	2
75.	2-1096	Washer, horn relay mounting ($\frac{3}{16}$ " $\times$ $\frac{3}{8}$ " $\times$.044")	2
76.	21-762	Screw, horn relay mounting (number 10 U.N.F. $\times$ $\frac{3}{8}$ ")	2
77.	21-762	Bolt, condenser pack mounting (number 10 U.N.F. $\times$ $\frac{3}{8}$ ")	2
78.	2-1096	Washer, condenser pack mounting ($\frac{3}{16}$ " $\times$ $\frac{3}{8}$ " $\times$.044")	2
79.	21-778	Nut, condenser pack mounting (number 10 U.N.F.)	2
80.	19-953	Horn relay (Lucas 33188)	
81.	19-1869	Tail lamp lead (Lucas 54953444)	
	17-1776	Battery, 12 volt (Lucas 54027029)	

*Other details are same as 19-981, headlamp.


Note:—Where no B.S.A. part number is quoted the part is only available from the makers.

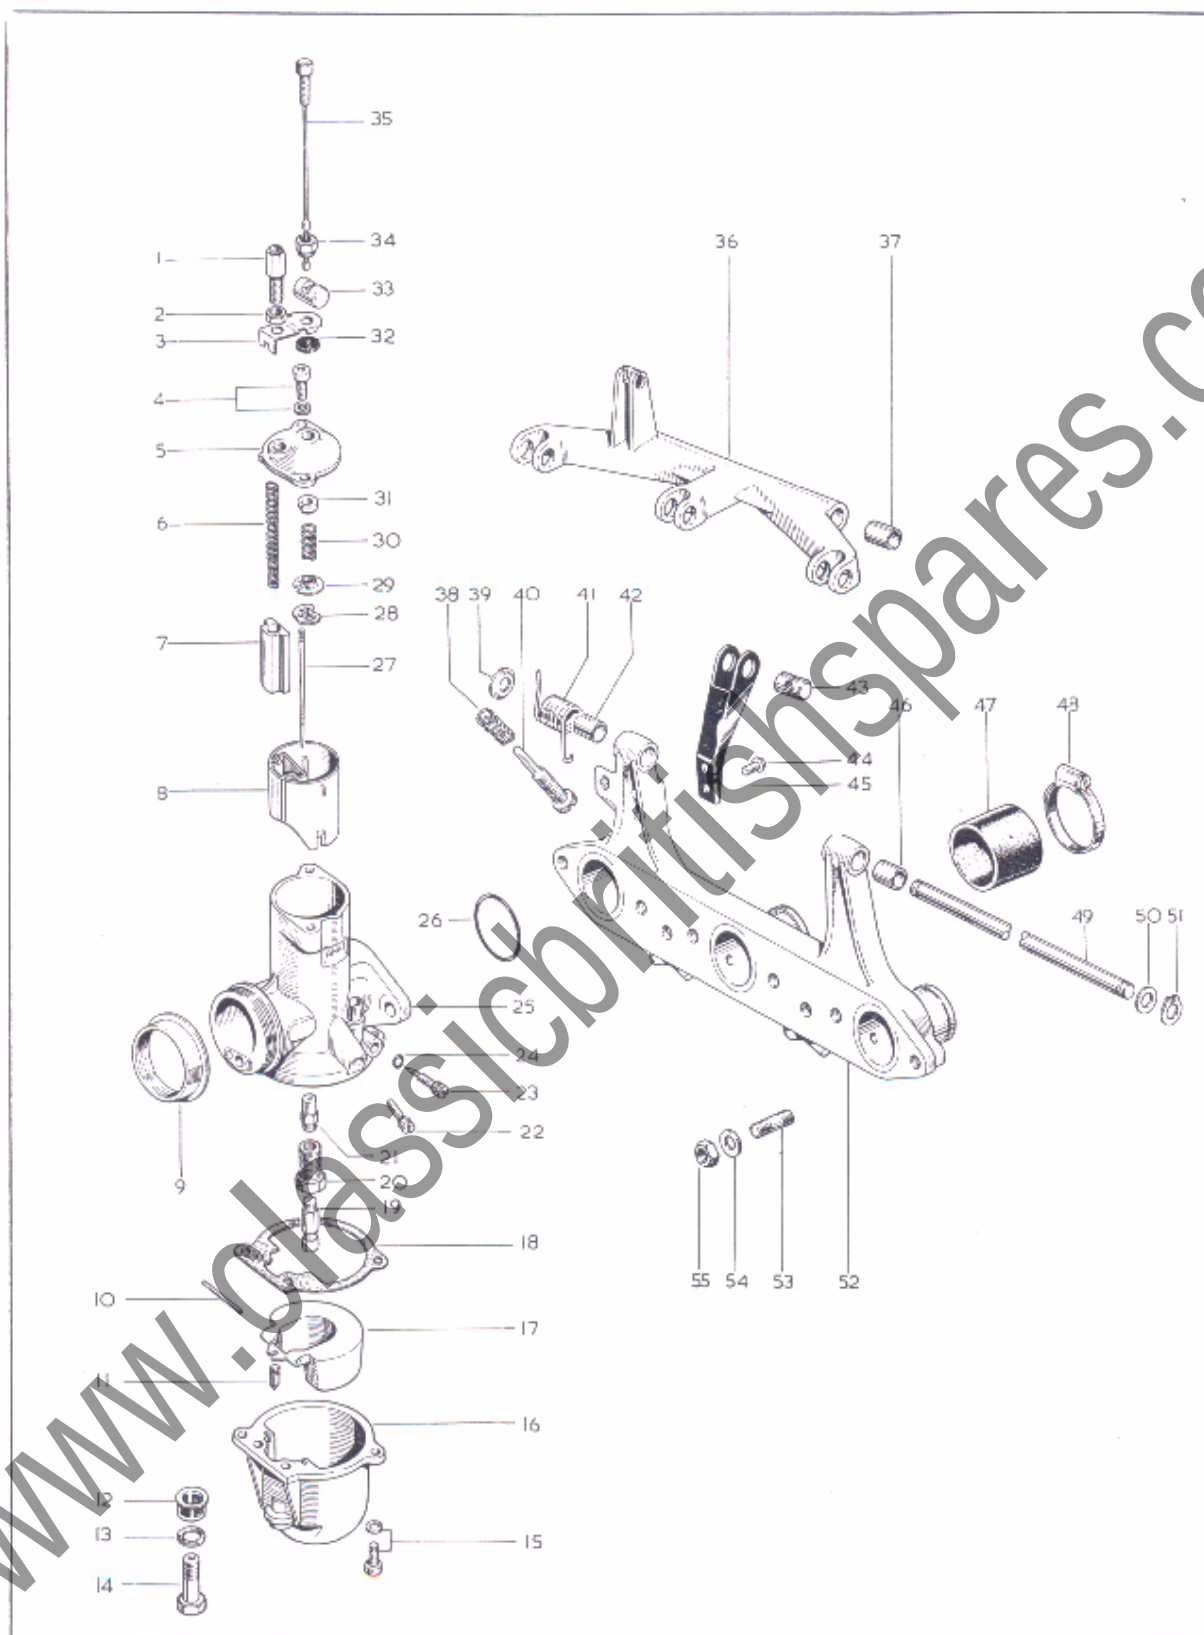

CARBURETTORS AND THROTTLE LINKAGE

Plate Ref.	Spares Number	Description	Per Set
	B.S.A. NO.	MAKERS NO.	
1.		4/035 Air cable adjuster	3
2.		5/077 Air cable adjuster locknut	3
3.		622/125 Seal locating clip	3
4.	19-3093	622/086 Screw and washer for top cap	6
5.		622/097 Carburetter top cap	3
6.	19-3092	622/065 Air valve spring	3
7.	19-3091	622/062 Air valve	3
8.	19-3138	622/060 Throttle valve (3)	3
9.	70-9586	Adaptor, carburetter intake	3
		622/107 Pilot jet tube (not removable)	3
10.		622/071 Float spindle	3
11.	19-3105	622/068 Needle for float	3
12.	19-3048	376/093 Petrol filter	3
13.		13/163 Fibre washer for banjo bolt	3
14.	19-3103	622/078 Banjo bolt, petrol pipe to float chamber	3
15.	19-3093	622/086 Screw and washer for float chamber	6
16.		622/050 Carburetter float chamber	3
17.	19-3102	622/069 Carburetter float	3
18.	19-3106	622/073 Float chamber gasket	3
19.	19-3099	376/100 Main jet (150 c.c.)	3
20.		622/080 Main jet holder	3
21.	19-3136	622/122 Needle jet (.106")	3
22.		622/133 Plug screw	3
23.		622/076 Pilot air adjusting screw	3
24.	19-3098	622/082 "O" ring for pilot air screw	3
25.	19-2409	L.626/15 Carburetter complete, left-hand (short air cable)	3
25.	19-2415	R.626/16 Carburetter complete, centre (medium air cable)	3
25.	19-2408	R.626/14 Carburetter complete, right-hand (long air cable)	3
26.	19-3090	622/101 "O" ring, carburetter flange	3
27.	19-3137	622/124 Throttle needle	3
28.	19-3095	622/067 Clip for throttle needle	3
29.	60-1987	622/116 Retaining plate, throttle rod spring	3
30.	60-1960	622/113 Retaining spring, throttle rod	3
31.	60-1959	622/115 Retaining cap, throttle rod	3
32.		622/126 Seal washer, top cap	3
33.	70-9243	Trunnion, throttle linkage	3
34.	70-9253	Locknut, throttle rod	3
35.	60-1984	622/119 Throttle assembly	3
36.	70-9278	Arm assembly, throttle linkage	2
37.	70-9073	Bush, throttle arm	2
38.	70-9254	Spring, adjuster screw, throttle stop	2
39.	70-9821	Retainer, throttle return spring	2
40.	70-9252	Adjuster screw, throttle stop	2
41.	70-9880	Throttle return spring	2
42.	70-9820	Spacer, throttle return spring	2
43.	70-9243	Trunnion, throttle linkage	2
44.	21-774	Screw, support arm to adaptor	2
45.	70-9242	Support arm, throttle linkage	2
46.	70-9073	Bush, adaptor spindle	2
47.	70-9060	Connection tube	3
48.	60-707	"Jubilee" clip, connection tube	6
49.	70-9251	Spindle, throttle linkage	2
50.	71-245	Backing washer, spindle	2
51.	70-9255	Circlip, spindle	2
52.	70-7633	Carburetter adaptor	6
53.	21-673	Stud, carburetter mounting ($\frac{5}{16}$ " U.N.C./U.N.F. $\times 1\frac{1}{4}$ ")	6
54.	54-55	Washer, carburetter mounting	6
55.	14-302	Nut, carburetter mounting ($\frac{5}{16}$ " U.N.F.)	6

NOTE:—Where no B.S.A. part number is quoted, the part is only available from the makers.

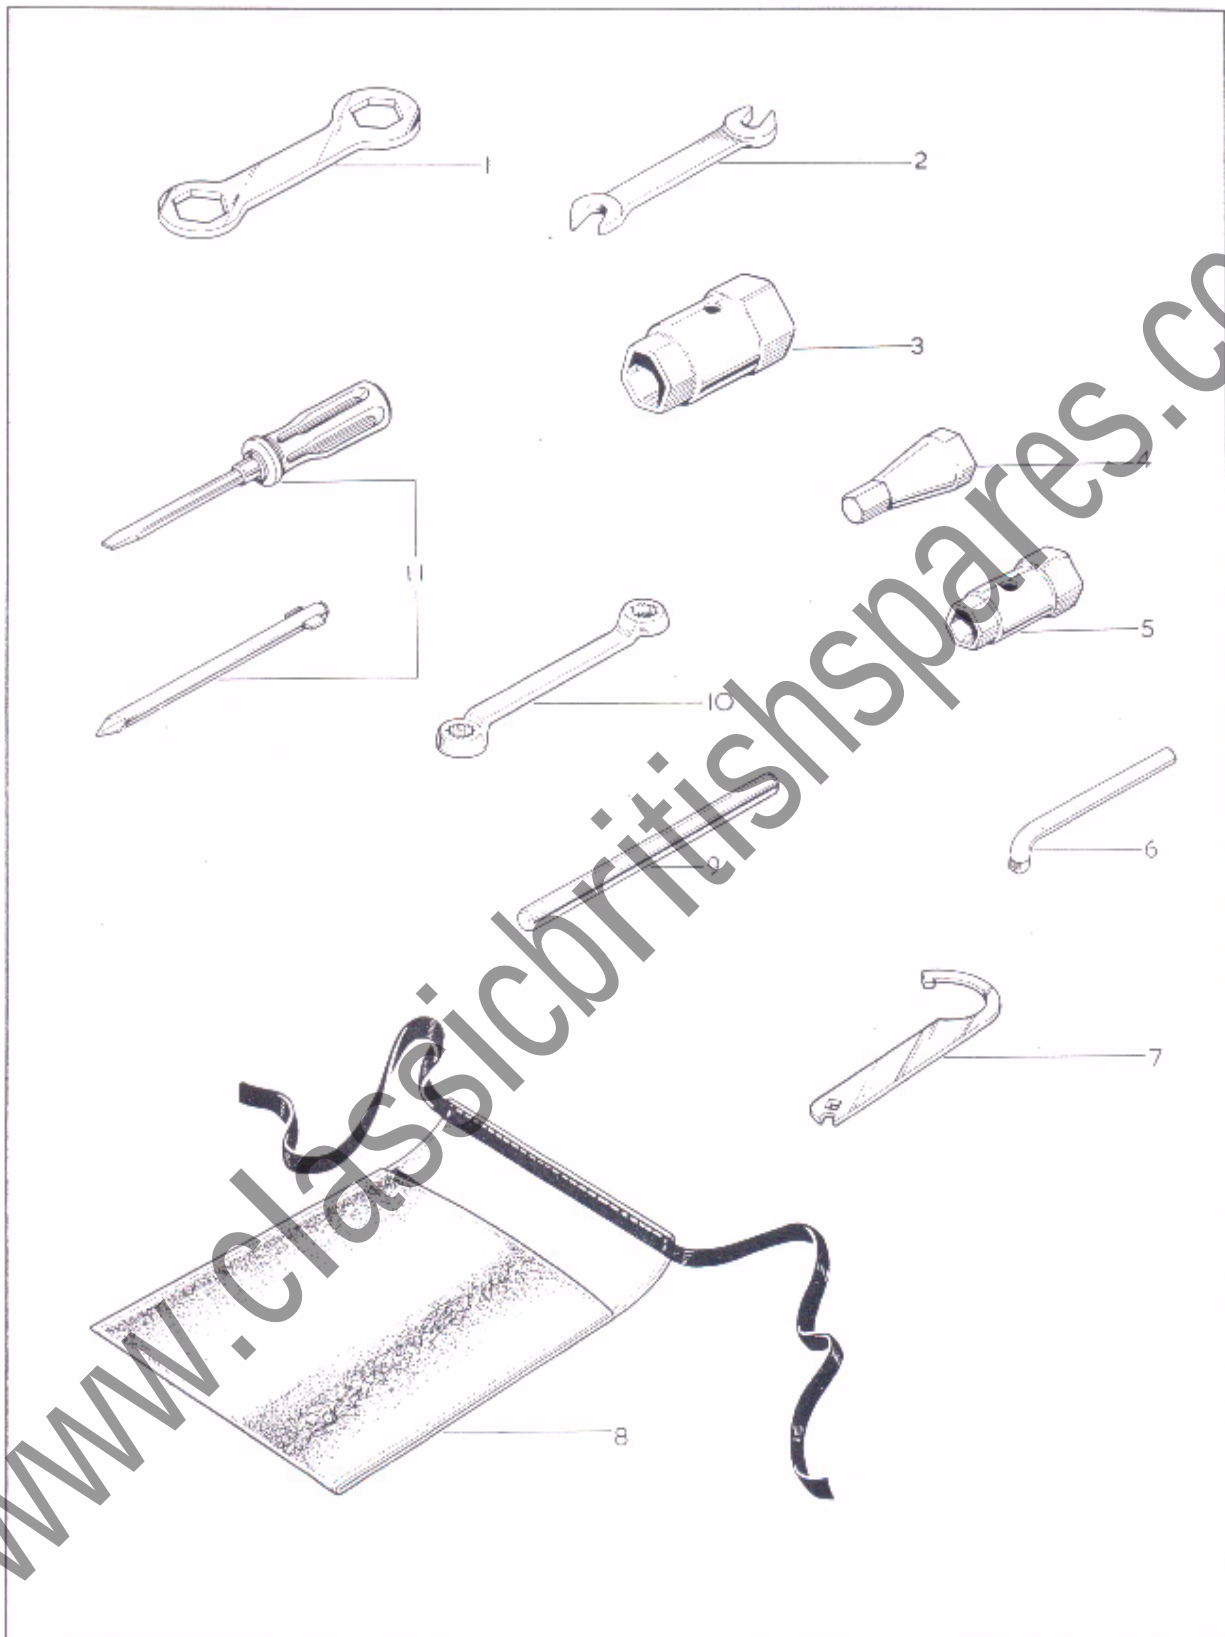

TOOL KIT

Plate Ref.	Spares Number	Description	Per Set
1.	60-311	Double-ended ring spanner ($\frac{5}{8}$ " $\times$ $1\frac{1}{16}$ " WHIT.)	..
2.	60-2084	Double open-ended spanner ($\frac{1}{2}$ " $\angle$ $\frac{7}{16}$ " A.F.)	..
3.	60-1908	Double-ended box spanner ($1\frac{1}{8}$ " $\times$ $1\frac{5}{16}$ " hexagon)	..
4.	60-1910	Spark plug spanner	..
5.	60-1909	Double-ended box spanner ($\frac{5}{8}$ " $\times$ $1\frac{5}{16}$ " hexagon)	..
6.	60-2020	Tappet spanner	..
7.	75-9076	"C" spanner with square socket	..
8.	75-9089	Tool roll	..
9.	60-1911	Tommybar	..
10.	60-1907	Double-ended ring spanner ($\frac{1}{16}$ " $\times$ $\frac{1}{2}$ " hexagon)	..
11.	60-767	Screwdriver complete	..
	60-1912	Toolkit complete	..

NUMERICAL INDEX—continued

NUMBER	PAGE	PLATE	CODE	NUMBER	PAGE	PLATE	CODE	NUMBER	PAGE	PLATE	CODE
37-1467	31	10	14	42-5575	41	15	27	57-1606	25	7	39
37-1474	39	14	11	42-5812	39	14	17	57-1607	25	7	31
37-1476	39	14	27	42-5819	37	13	34	57-1607	25	7	37
37-1477	39	14	26	42-5819	37	13	1	57-1614	25	7	35
37-1481	37	13	2	42-5819	37	13	7	57-1645	23	6	12
37-1498	39	14	37	42-5819	39	14	9	57-1896	25	7	14
37-1500	39	14	43	42-5819	39	14	29	57-1918	25	7	42
37-1635	39	14	30	42-5820	37	13	41	57-1920	17	3	98
37-1654	39	14	28	42-5821	25	7	28	57-1955	27	8	34
37-1690	39	14	36	42-5836	37	13	28	57-1956	27	8	35
37-1708	37	13	37	42-5841	37	13	11	57-1962	25	7	27
37-1709	37	13	36	42-5841	39	14	45	57-1963	25	7	25
37-1710	39	14	7	42-6335	37	13	8	57-2116	25	7	41
37-1991	37	13	16	42-8034	29	9	38	57-2165	25	7	4
37-1996	37	13	10					57-2166	23	6	15
37-2001	37	13	9	47-9012	31	10	28	57-2166	9	1	23
37-2003	37	13	27	47-9012	29	9	30	57-2169	27	8	40
37-2005	37	13	23	47-9012	31	10	45	57-2170	25	7	24
37-2006	37	13	24					57-2172	25	7	49
37-2015	39	14	6	54-22	33	11	14	57-2174	25	7	48
37-2026	37	13	12	54-22	17	3	62	57-2176	25	7	46
37-2026	37	13	31	54-22	17	3	81	57-2214	21	5	10
37-2027	39	14	5	54-42	35	12	26	57-2215	23	6	23
37-2027	37	13	19	54-55	15	3	2	57-2220	23	6	13
37-2027	37	13	26	54-55	27	8	20	57-2244	23	6	22
37-2059	37	13	33	54-55	27	8	23	57-2245	21	5	9
37-2089	39	14	22	54-55	41	15	41	57-2250	21	5	5
37-2092	37	13	40	54-55	19	4	42	57-2251	21	5	6
37-2129	37	13	13	54-55	15	3	51	57-2251	21	5	6
37-2240	37	13	3	54-55	57	21	54	57-2330	27	8	29
37-3312	6	—	—	54-55	17	3	86	57-2331	31	10	38
37-3312	37	—	—	54-55	17	3	91	57-2465	23	6	42
37-3317	6	—	—	54-124	39	14	1	57-2471	21	5	11
37-3317	37	13	4	54-170	41	15	20	57-2473	23	6	7
37-3337	37	13	6	54-170	47	17	30	57-2474	23	6	6
37-3411	39	14	39	54-170	15	3	29	57-2478	21	5	4
37-3425	39	14	47	54-2537	47	17	14	57-2479	21	5	36
37-3426	39	14	23	54-4306	39	14	4	57-2480	21	5	3
37-3453	37	13	18	54-4307	13	2	16	57-2547	23	6	44
37-3454	37	13	30	54-4307	33	11	19	57-2552	21	5	32
37-3456	6	—	—	54-4307	31	10	23	57-2553	23	6	4
37-3456	39	—	—	54-5504	41	15	47	57-2554	21	5	27
37-3457	6	—	—	54-6510	55	20	68	57-2555	21	5	22
37-3457	39	14	13	54-8003	33	11	13	57-2556	21	5	21
37-3461	6	—	—	54-8003	35	12	23	57-2557	21	5	29
37-3461	37	—	—	54-8003	47	17	28	57-2558	19	4	11
37-3522	37	13	17	54-9012	41	15	15	57-2580	21	5	20
37-3582	37	13	5	54-9012	47	17	17	57-2581	21	5	8
				54-9012	15	3	40	57-2595	25	7	7
40-156	11	1	51	54-9081	9	1	2	57-2596	25	7	56
40-158	11	1	52	54-9081	41	15	17	57-2601	25	7	12
40-159	9	1	26	54-9081	9	1	18	57-2603	27	8	14
40-167	11	1	57	54-9081	53	20	26	57-2653	27	8	32
40-242	13	2	13					57-2656	25	7	9
40-323	27	8	11	57-23	27	8	36	57-3610	23	6	27
40-323	15	3	17	57-24	27	8	39	57-3614	23	6	24
40-2705	49	18	16	57-31	27	8	38	57-3617	23	6	25
40-2705	11	1	69	57-44	25	7	52	57-3619	23	6	19
40-3085	27	8	27	57-47	27	8	37	57-3620	23	6	20
40-4071	39	14	2	57-280	37	13	42	57-3621	25	7	29
40-4071	39	14	52	57-291	25	7	6	57-3633	25	7	2
40-4524	39	18	7	57-397	25	7	10	57-3634	25	7	53
40-4524	49	18	9	57-404	27	8	2	57-3638	23	6	8
40-4850	29	9	21	57-405	27	8	8	57-3641	19	4	9
40-5069	35	12	20	57-406	27	8	7	57-3642	21	5	26
40-6040	39	14	20	57-407	27	8	3	57-3642	19	4	41
40-8046	47	17	7	57-409	27	8	9	57-3643	21	5	7
40-8085	45	16	45	57-412	25	7	16	57-3643	23	6	29
40-8436	51	19	20	57-448	25	7	4	57-3644	21	5	2
40-9190	25	7	11	57-731	25	7	23	57-3646	21	5	12
				57-732	25	7	22	57-3647	23	6	45
41-6073	39	14	44	57-912	25	7	30	57-3650	25	7	8
41-6076	39	14	34	57-912	25	7	38	57-3661	25	7	51
41-6078	39	14	33	57-912	23	6	41	57-3721	27	8	32
				57-913	25	7	57	57-3727	27	8	41
42-4094	29	9	8	57-928	25	7	32	57-3732	27	8	40
42-4364	31	10	32	57-1250	25	7	26	57-3733	23	6	11
42-5099	29	9	39	57-1272	27	8	28	57-3756	21	5	25

NUMERICAL INDEX—continued

NUMBER	PAGE	PLATE	CODE	NUMBER	PAGE	PLATE	CODE	NUMBER	PAGE	PLATE	CODE
57-3757	27	8	16	68-7061	31	10	11	70-6596	19	4	19
57-3758	27	8	10	68-8166	33	11	36	70-6727	17	3	93
57-3759	27	8	12	68-8717	45	16	51	70-6742	19	4	14
57-3785	25	7	47	68-9115	29	9	40	70-6743	9	1	32
57-3857	25	7	45	68-9223	47	17	2	70-6744	9	1	36
57-3858	25	7	44	68-9226	47	17	3	70-6836	13	2	30
57-3860	25	7	34	68-9351	55	20	65	70-6838	5	—	—
57-3861	25	7	43					70-6838	13	2	32
57-3862	25	7	33	70-402	19	4	40	70-6838	13	2	34
57-3864	25	7	36	70-1523	17	3	90	70-6840	13	2	28
57-3871	6	—	—	70-1532	13	2	5	70-6848	51	19	30
57-3871	21	—	—	70-1532	19	4	33	70-6881	19	4	48
57-3940	21	5	14	70-1558	17	3	78	70-6885	19	4	47
57-3941	21	5	13	70-1591	13	2	24	70-6889	19	4	35
57-3954	25	6	2	70-1670	19	4	16	70-6890	19	4	49
57-3955	25	6	3	70-3974	17	3	65	70-6955	13	2	40
57-3958	23	6	39	70-4705	19	4	6	70-7246	19	4	46
57-3978	25	7	50	70-4746	13	2	38	70-7248	19	4	2
57-3983	23	6	36	70-4752	13	2	1	70-7249	19	4	44
57-3986	23	6	35	70-4752	13	2	39	70-7250	19	4	45
57-3987	23	6	34	70-5977	23	6	30	70-7351	45	16	34
57-4004	21	5	1	70-5998	13	2	27	70-7423	13	2	17
				70-6018	11	1	48	70-7590	19	4	17
60-311	59	22	1	70-6023	13	2	18	70-7591	19	4	21
60-702	51	19	17	70-6025	13	2	25	70-7634	57	21	52
60-702	51	19	33	70-6026	13	2	20	70-7650	17	3	76
60-702	11	1	46	70-6030	17	3	94	70-7651	11	1	60
60-706	49	18	24	70-6038	19	4	24	70-7733	17	3	101
60-707	57	21	48	70-6039	19	4	26	70-7735	15	3	22
60-767	59	22	11	70-6061	23	6	31	70-7737	17	3	97
60-853	47	17	8	70-6088	17	3	75	70-7738	17	3	69
60-854	47	17	8	70-6130	17	3	57	70-7869	6	—	—
60-1907	59	22	10	70-6131	17	3	56	70-7869	17	—	—
60-1908	59	22	3	70-6173	17	3	61	70-7879	15	3	43
60-1909	59	22	5	70-6299	15	3	15	70-7880	15	3	45
60-1910	59	22	4	70-6353	9	1	24	70-7951	6	—	—
60-1911	59	22	9	70-6420	11	1	65	70-7983	11	1	71
60-1912	59	—	—	70-6422	11	1	66	70-7990	9	1	28
60-1928	25	7	13	70-6423	11	1	44	70-8720	11	1	55
60-1946	43	16	1	70-6430	19	4	25	70-8731	19	4	29
60-1959	57	21	31	70-6454	19	4	27	70-8732	19	4	37
60-1960	57	21	30	70-6455	19	4	34	70-8738	15	3	5
60-1968	43	16	7	70-6459	19	4	36	70-8739	15	3	20
60-1978	43	16	5	70-6496	13	2	9	70-8740	15	3	19
60-1984	57	21	35	70-6501	17	3	83	70-8741	15	3	18
60-1987	57	21	29	70-6502	19	4	23	70-8742	15	3	16
60-2020	59	22	6	70-6503	19	4	22	70-8744	15	3	12
60-2060	43	16	4	70-6506	13	2	2	70-8745	13	2	22
60-2061	43	16	4	70-6508	13	2	37	70-8746	13	2	14
60-2062	43	16	4	70-6509	13	2	34	70-8748	13	2	14
60-2071	43	16	14	70-6516	15	3	27	70-8750	19	4	12
60-2072	43	16	15	70-6519	15	3	38	70-8751	15	3	4
60-2073	43	16	17	70-6521	15	3	33	70-8752	19	4	18
60-2074	45	18	50	70-6522	15	3	54	70-8754	19	4	20
60-2076	43	16	9	70-6523	17	3	77	70-8755	17	3	89
60-2084	59	22	2	70-6524	17	3	64	70-8756	15	3	29
60-2202	45	18	18	70-6525	19	4	28	70-8760	17	3	72
60-2683	37	13	29	70-6529	6	—	—	70-8763	15	3	48
60-2683	31	10	34	70-6529	13	2	6	70-8764	15	3	10
				70-6559	15	3	32	70-8765	15	3	11
65-4742	31	10	39	70-6560	13	2	36	70-8768	17	3	74
65-8317	29	9	49	70-6561	9	1	3	70-8770	31	10	5
				70-6562	9	1	9	70-8770	15	3	8
68-208	17	3	67	70-6563	9	1	1	70-8770	53	20	13
68-331	27	8	31	70-6564	9	1	13	70-8773	9	1	21
68-331	15	3	34	70-6565	9	1	4	70-8774	15	3	9
68-610	51	19	27	70-6565	9	1	12	70-8774	15	3	23
68-3168	25	7	55	70-6567	19	4	13	70-8776	15	3	26
68-3218	21	5	19	70-6570	19	4	32	70-8778	6	—	—
68-3264	23	6	10	70-6571	17	3	58	70-8778	13	2	23
68-3282	21	5	5	70-6572	15	3	37	70-8779	17	3	84
68-4577	49	18	12	70-6573	17	3	99	70-8780	13	2	21
68-4597	49	18	14	70-6574	17	3	100	70-8781	6	—	—
68-4708	31	10	43	70-6577	13	2	19	70-8781	11	1	39
68-4835	29	9	45	70-6580	17	3	82	70-8782	23	6	16
68-5050	33	11	5	70-6582	17	3	55	70-8782	9	1	22
68-6829	41	15	14	70-6584	19	4	15	70-8783	11	1	59
68-6830	41	15	18	70-6595	19	4	17	70-8784	11	1	72

NUMERICAL INDEX—continued

NUMBER	PAGE	PLATE	CODE
70-8785	19	4	50
70-8786	19	4	5
70-8787	11	1	62
70-8788	11	1	63
70-8789	11	1	64
70-8817	13	2	4
70-8819	9	1	10
70-8820	9	1	8
70-8860	9	1	33
70-8904	51	19	31
70-8905	11	1	47
70-8906	51	19	16
70-8907	51	19	32
70-8914	13	2	7
70-8917	13	2	35
70-8981	11	1	67
70-9001	6	—	—
70-9001	19	—	—
70-9015	5	—	—
70-9016	5	—	—
70-9017	5	—	—
70-9018	5	—	—
70-9023	13	2	27
70-9024	13	2	27
70-9025	13	2	27
70-9026	13	2	27
70-9027	13	2	18
70-9028	13	2	18
70-9029	13	2	18
70-9030	13	2	18
70-9036	47	17	15
70-9037	47	17	15
70-9060	57	21	47
70-9073	57	21	37
70-9073	57	21	46
70-9237	9	1	16
70-9239	9	1	15
70-9240	9	1	7
70-9242	57	21	45
70-9243	57	21	33
70-9243	57	21	43
70-9251	57	21	49
70-9252	57	21	39
70-9253	57	21	34
70-9254	57	21	38
70-9255	57	21	51
70-9256	23	6	37
70-9258	23	6	32
70-9258	23	6	26
70-9266	15	3	31
70-9267	57	21	41
70-9271	9	1	25
70-9274	11	1	25
70-9278	57	21	38
70-9327	25	1	59
70-9460	9	1	31
70-9461	9	1	31
70-9465	13	2	8
70-9510	11	1	41
70-9534	57	21	45
70-9558	11	1	49
70-9586	57	21	9
70-9601	19	4	38
70-9626	9	1	35
70-9634	19	4	1
70-9706	15	3	21
70-9721	13	2	11
70-9739	5	—	—
70-9739	13	2	31
70-9740	13	2	10
70-9741	5	—	—
70-9741	13	2	29
70-9761	5	—	—
70-9762	5	—	—
70-9763	5	—	—
70-9764	5	—	—
70-9765	5	—	—
70-9766	5	—	—

NUMBER	PAGE	PLATE	CODE
70-9767	5	—	—
70-9768	5	—	—
70-9779	9	1	19
70-9779	11	1	53
70-9780	9	1	20
70-9780	11	1	54
70-9781	11	1	56
70-9782	9	1	11
70-9802	17	3	79
70-9807	17	3	73
70-9820	57	21	42
70-9821	57	21	39
70-9843	13	2	26
70-9856	17	3	88
70-9880	57	21	41
70-9972	13	2	3
71-3	19	4	31
71-6	15	3	44
71-7	15	3	42
71-37	27	8	1
71-245	57	21	50
71-280	9	1	6
75-53	27	8	30
75-124	11	1	61
75-176	25	7	18
75-223	15	3	49
75-2719	47	17	18
75-3143	27	8	33
75-4909	43	16	3
75-5088	35	12	16
75-5091	35	12	18
75-5095	35	12	22
75-5096	35	12	8
75-5099	35	12	13
75-5104	35	12	10
75-5105	35	12	17
75-5199	35	12	15
75-6594	39	14	35
75-9076	59	22	7
75-9089	59	22	8
76-12	47	17	28
76-217	25	7	5
76-217	19	4	10
76-217	25	7	20
76-217	23	6	40
76-217	17	3	70
76-291	15	3	36
76-420	45	16	44
82-1335	33	11	3
82-1747	39	14	21
82-2351	37	13	14
82-4047	35	12	3
82-4971	45	16	35
82-4972	45	16	35
82-5943	29	9	25
82-6874	51	19	34
82-6981	53	20	17
82-7365	39	14	3
82-7387	31	10	15
82-7431	49	18	23
82-7835	49	18	26
82-8140	41	15	25
82-8195	41	15	22
82-8245	33	11	20
82-8327	45	16	42
82-8391	45	16	40
82-8413	31	10	37
82-8452	51	19	28
82-8459	51	19	23
82-8463	49	18	8
82-8468	31	10	19
82-8475	31	10	13
82-8476	31	10	29
82-8477	31	10	31
82-8478	31	10	30
82-8485	41	15	6

NUMBER	PAGE	PLATE	CODE
82-8490	41	15	1
82-8495	49	18	1
82-8498	41	15	5
82-8508	29	9	14
82-8509	29	9	57
82-8510	29	9	17
82-8513	29	9	37
82-8518	41	15	37
82-8519	47	17	16
82-8520	41	15	48
82-8528	41	15	23
82-8549	49	18	35
82-8582	31	10	46
82-8583	47	17	28
82-8584	47	17	23
82-8588	45	16	38
82-8589	45	16	38
82-8590	45	16	37
82-8591	45	16	37
82-8609	45	16	49
82-8610	45	16	32
82-8611	45	16	32
82-8625	51	19	36
82-8628	51	19	5
82-8629	51	19	5
82-8657	51	19	2
82-8657	51	19	12
82-8660	31	10	40
82-8667	51	19	4
82-8687	47	17	23
82-8743	49	18	25
82-8744	47	17	5
82-8849	47	17	11
82-8850	47	17	4
82-8918	29	9	36
82-8919	39	14	50
82-8942	47	17	6
82-8946	45	16	48
82-8947	45	16	47
82-8969	49	18	20
82-9008	49	18	10
82-9315	51	19	15
82-9322	51	19	11
82-9327	41	15	13
82-9378	29	9	3
82-9379	29	9	9
82-9435	51	19	35
82-9436	45	16	36
82-9530	51	19	29
82-9531	51	19	29
82-9562	49	18	17
82-9624	29	9	22
82-9625	29	9	13
82-9637	31	10	9
82-9641	29	9	35
82-9642	29	9	18
82-9652	29	9	28
82-9653	29	9	41
82-9654	49	18	31
82-9664	51	19	22
82-9665	31	10	10
82-9667	31	10	12
82-9675	49	18	18
82-9682	49	18	27
82-9684	29	9	47
82-9686	29	9	21
82-9687	51	19	1
82-9692	55	20	62
82-9773	6	—	—
82-9773	29	9	4
82-9845	49	18	19
82-9918	51	—	—
82-9919	45	16	27
82-9920	45	16	41
82-9963	6	—	—
82-9963	31	10	16
82-9964	47	17	10
82-9997	39	14	49

NUMERICAL INDEX—continued

NUMBER	PAGE	PLATE	CODE
83-2	45	16	33
83-1384	49	18	34
83-1386	51	19	37
83-1387	51	19	26
83-1430	47	17	2
83-1456	47	17	12
83-1535	31	10	48
89-3208	27	8	17
90-262	15	3	13
97-95	33	11	42
97-111	29	9	5
97-435	33	11	40
97-439	33	11	25
97-519	35	12	25
97-565	33	11	38
97-1018	33	11	9
97-1527	33	11	31
97-1529	33	11	30
97-1580	33	11	33
97-1581	33	11	34
97-1618	33	11	39
97-1657	35	12	4
97-1892	35	12	6
97-1932	53	20	5
97-1971	35	12	1
97-1994	55	20	70
97-2090	35	12	28
97-2091	35	12	9
97-2092	35	12	12
97-2107	33	11	17
97-2108	33	11	1
97-2126	35	12	21
97-2127	35	12	7
97-2154	35	12	11
97-2221	33	11	32
97-2236	33	11	12
97-2237	33	11	11
97-2245	33	11	29
97-2259	55	20	66
97-2266	33	11	6
97-2270	41	15	45
97-2273	47	17	1
97-2275	33	11	10
97-2290	33	11	22
97-2291	33	11	35
97-2293	33	11	28
97-2294	35	12	19
97-2295	35	12	27
97-2297	53	20	22
97-2300	35	12	2
97-2301	35	12	7
97-2621	33	11	24
97-2622	33	11	23
97-2672	6	—	—
97-2672	35	—	—
97-2704	27	8	26
97-2704	33	11	26
97-2704	23	6	43
97-3601	33	11	43
97-3602	33	11	37
97-3632	53	20	12
97-3633	35	12	14

NUMBER	PAGE	PLATE	CODE
97-3648	43	16	2
97-3682	33	11	21
97-3795	41	15	51
97-3856	33	11	41
97-3865	33	11	41
97-3878	35	12	12
364/011	43	16	19
364/013	43	16	21
364/014	45	16	28
364/017	45	16	29
364/020	43	16	23
376/093	57	21	12
376/100	57	21	19
622/050	57	21	16
622/060	57	21	8
622/062	57	21	7
622/065	57	21	6
622/067	57	21	28
622/068	57	21	11
622/069	57	21	17
622/071	57	21	10
622/073	57	21	18
622/076	57	21	23
622/078	57	21	14
622/080	57	21	21
622/082	57	21	24
622/086	57	21	15
622/086	57	21	15
622/097	57	21	26
622/101	57	21	26
622/107	57	21	30
622/113	57	21	31
622/115	57	21	29
622/116	57	21	35
622/119	57	21	21
622/122	57	21	27
622/124	57	21	3
622/125	57	21	32
622/126	57	21	22
622/133	57	21	—
1.626/15	5	—	—
1.626/15	57	21	25
R.626/14	5	—	—
R.626/14	57	21	25
R.626/16	5	—	—
R.626/16	57	21	25
380	55	20	48
410	53	20	6
446	53	20	6
989	53	20	31
31563	55	20	71
31788	55	20	63
31899	53	20	21
32000	53	20	38
33188	55	20	80
34815	55	20	61
35835	55	20	67
36421	53	20	16

NUMBER	PAGE	PLATE	CODE
38189	53	20	20
38191	53	20	19
45221	53	20	38
47209	15	3	53
49072	53	20	40
49345	55	20	64
53973	55	20	45
59892	53	20	1
59894	53	20	1
110714	55	20	52
112201	53	20	29
137498	53	20	28
144921	53	20	9
144921	55	20	46
188218	53	20	33
188330	55	20	51
199001	55	20	57
380459	55	20	72
504665	53	20	3
516798	53	20	4
534296	53	20	10
553248	53	20	2
553738	53	—	—
553789	53	—	—
555910	53	20	7
556442	53	—	—
573828	55	—	—
842189	53	20	37
54027029	55	—	—
54190108	53	20	39
54190387	53	20	33
54218902	15	3	52
54415642	15	3	30
54418526	55	20	55
54418528	55	20	53
54419327	17	3	68
54419828	15	3	28
54419867	15	3	31
54420128	55	20	54
54522680	53	20	4
54524048	53	20	11
54524099	53	20	8
54571677	55	20	56
54573590	53	20	30
54577109	55	20	47
54578212	55	20	50
54578213	55	20	49
54953444	55	20	81
54953446	53	20	23
54955800	53	20	32
54956435	53	20	38
1/6280	53	20	17
5300/1/07	55	20	64
DF.9111/00	53	20	25
RSM.3003/01	53	20	14
SSM.5001/12	53	20	15
SSM.5001/05	53	20	15
41-148-203-10	53	20	18

