



Replacement Parts List

1971

750 cm³ model

Publication
Ref. 00-5723





Replacement parts list

750cm³ model

A75 Rocket 3

Commencing

Engine number JE.00101 A75R

Frame number JE.00101 A75R

Issued by
B.S.A. Motor Cycles Limited
Spares Department,
Montgomery Street,
Birmingham B11 1D7
Telephone: 021 - 772 0559/0537
Telegrams: "Selmoto" Birmingham

B.S.A. Motor Cycles Limited
Registered Office and Works:
Armoury Road, Birmingham B11 2PX
Telephone: 021 - 772 2381. Telex: 33315
Telegrams and Cables:
"Selmoto" Birmingham

1971 Publication
Ref. 00-5723

Printed in England
by B.S.A. Press

Please Note!

Replacement parts or accessories must be of B.S.A. origin or as approved by B.S.A. Motor Cycles Ltd.

In this respect your attention is drawn to the Terms and Conditions of B.S.A. Guarantee.

SUFFIX NUMBERS TO BE USED TO IDENTIFY VARYING FINISHES

When ordering components with varying finishes, please state finish required by adding the APPROPRIATE SUFFIX TO THE PART NUMBER.

EXAMPLE: Petrol tank — Firecracker red 82-8391/246

PETROL TANKS

Chromed, Firecracker red sides, Gold lining	..	..	..	..	..	..	..	310
Firecracker red	..	..	..	..	..	..	..	246

SIDECOVER, left

[illegible]

SIDECOVER, right

Firecracker red 246

OTHER PARTS

Grey	288
Silver sheen	307
Chrome	003

PRICES

No price codes are given in this list. For prices please refer to the latest edition of the Master Price List number 00-5125.

Wherever possible, details of thread forms and sizes are quoted after the description of nuts, bolts, screws, studs and washers. Such as: 14-0102 Bolt ($\frac{1}{4}$ " UNF x $\frac{5}{8}$ ") — $\frac{1}{4}$ " diameter unified fine thread, $\frac{5}{8}$ " long under head.

Vital components, which are manufactured from a special material, are indicated by a sign and the British Standard symbol for the material is quoted at the foot of the page.

ABBREVIATIONS (Screw Threads)

B.A. = British Association
B.S.C. = British Standard Cycle
B.S.F. = British Standard Fine
W.F. = Whitworth Form
UN.F. = Unified Fine
UN.C. = Unified Coarse
UN.S. = Unified Special

BRAKES (Lockheed)

Automotives Products Co. Ltd., P.O. Box 14, Southam Road, Banbury, Oxfordshire.

CARBURETTORS

Amal Ltd., Holdford Road, Witton, Birmingham 6.

CHAINS

Renolds, Wythenshawe, Manchester.

ELECTRICAL EQUIPMENT

Joseph Lucas Ltd., Great Hampton Street, Birmingham 18.

SUSPENSION UNITS

Girling Ltd., Birmingham Road, West Bromwich, Staffordshire.

SPARKING PLUGS

Champion Sparking Plug Co. Ltd., Feltham, Middlesex.

SPEEDOMETERS

Smith's Industries Ltd., Motor Accessory Division, 50 Oxgate Lane, Cricklewood, London N.W.2.

TYRES

Dunlop Co. Ltd., Fort Dunlop, Birmingham 24.

ASSEMBLIES COMPLETE

Part No.	Description
00-7009	B.S.A. "LOCTITE" PLASTIC GASKET (10 bottle trade pack).
00-3172	TOP OVERHAUL GASKET SET.
00-3315	FULL OVERHAUL GASKET SET.
00-3466	PISTON RING SET (standard).
00-3467	PISTON RING SET (-.005" oversize).
00-3468	PISTON RING SET (-.010" oversize).
00-3469	PISTON RING SET (-.020" oversize).
00-3470	PISTON RING SET (-.040" oversize).
70-7951	ENGINE UNIT — less carburetters and exhaust system.
71-1127	CYLINDER HEAD ASSEMBLY.
70-6529	CYLINDER BLOCK ASSEMBLY.
70-9740	CONNECTING ROD ASSEMBLY.
70-8778	CRANKSHAFT ASSEMBLY.
71-2422	CRANKCASE COMPLETE —left, centre and right.
71-1351	OIL PUMP COMPLETE.
19-7800	CLUTCH ASSEMBLY COMPLETE.
57-3871	PRIMARY DRIVE SHOCK ABSORBER ASSEMBLY
83-3278	FRAME COMPLETE.
83-3243	SWINGING ARM COMPLETE.
97-4137	FRONT FORK COMPLETE.
37-3848	FRONT HUB — with spindle and bearings.
37-3846	FRONT WHEEL — with spindle and bearings.
37-3935	FRONT BRAKE ANCHOR PLATE — with brake details.
37-3900	REAR HUB — with spindle and bearings.
37-3899	REAR WHEEL — with spindle and bearings.
37-3955	REAR BRAKE ANCHOR PLATE — with brake details.

PISTON CHART

PISTON COMPLETE

Compression Ratio	Standard	$\pm .005"$	$\pm .010"$	$\pm .020"$	$\pm .040"$
9 : 1	70-9741	70-9761	70-9762	70-9763	70-9764

PISTON RINGS (Standard)

Compression	Scraper	Set Number
70-6838 (6)	70-9739 (3)	00-3466

PISTON RINGS ($\pm .005"$)

70-9015 (6)	70-9765 (3)	00-3467
-------------	-------------	---------

PISTON RINGS ($\pm .010"$)

70-9016 (6)	70-9766 (3)	00-3468
-------------	-------------	---------

PISTON RINGS ($\pm .020"$)

70-9017 (6)	70-9767 (3)	00-3469
-------------	-------------	---------

PISTON RINGS ($\pm .040"$)

70-9018 (6)	70-9768 (3)	00-3470
-------------	-------------	---------

CARBURETTORS

Location	Part No.	Amal No.	Main Jet	Throttle Slide	Needle Jet	Needle Position
Right	19-2433	R.626/47				
Centre	19-2434	R.626/49	150	$3\frac{1}{2}$	.106	2
Left	19-2435	L.626/48				

STEERING LOCK AND KEY

Lock No.	Key No.	Lock No.	Key No.	Lock No.	Key No.
EJR 1	19-5151	EJR 18	19-5168	EJR 35	19-5185
EJR 2	19-5152	EJR 19	19-5169	EJR 36	19-5186
EJR 3	19-5153	EJR 20	19-5170	EJR 37	19-5187
EJR 4	19-5154	EJR 21	19-5171	EJR 38	19-5188
EJR 5	19-5155	EJR 22	19-5172	EJR 39	19-5189
EJR 6	19-5156	EJR 23	19-5173	EJR 40	19-5190
EJR 7	19-5157	EJR 24	19-5174	EJR 41	19-5191
EJR 8	19-5158	EJR 25	19-5175	EJR 42	19-5192
EJR 9	19-5159	EJR 26	19-5176	EJR 43	19-5193
EJR 10	19-5160	EJR 27	19-5177	EJR 44	19-5194
EJR 11	19-5161	EJR 28	19-5178	EJR 45	19-5195
EJR 12	19-5162	EJR 29	19-5179	EJR 46	19-5196
EJR 13	19-5163	EJR 30	19-5180	EJR 47	19-5197
EJR 14	19-5164	EJR 31	19-5181	EJR 48	19-5198
EJR 15	19-5165	EJR 32	19-5182	EJR 49	19-5199
EJR 16	19-5166	EJR 33	19-5183	EJR 50	19-5200
EJR 17	19-5167	EJR 34	1-95184		

INDEX

	Page
Assemblies Complete	5
Piston Chart	6
Carburettors	6
Steering Lock and Key	7
Plate 1 Cylinder Head — Rocker Boxes — Exhaust Pipes	10 - 13
Plate 2 Cylinder — Pistons — Crankshaft	14 - 15
Plate 3 Crankcase — Timing Gears — Oil Filters	16 - 21
Plate 4 Inner Primary Cover — Oil Pump	22 - 23
Plate 5 Clutch	24 - 25
Plate 6 Outer Primary Cover — Chain Tensioner — Clutch Control	26 - 27
Plate 7 Gearbox (4-speed)	28 - 31
Plate 8 Gearbox (5-speed)	32 - 33
Plate 9 Gearbox Cover — Gearchange — Kickstart	34 - 35

INDEX—continued

		Page
Plate 10	Frame	36 - 39
Plate 11	Swinging Arm — Centre Stand — Prop Stand	40 - 41
Plate 12	Front Fork	42 - 45
Plate 13	Front Wheel	46 - 47
Plate 14	Rear Wheel	48 - 49
Plate 15	Mudguards — Chainguard — Number Plates	50 - 51
Plate 16	Dual Seat — Sidecovers — Silencers — Handlebar ..	52 - 55
Plate 17	Air Filter — Battery Carrier — Toolbox — Coil Mounting ..	56 - 57
Plate 18	Oil Tank — Oil Cooler	58 - 59
Plate 19	Fuel Tank	60 - 61
Plate 20	Electrical Equipment (Part 1)	62 - 65
Plate 21	Electrical Equipment (Part 2)	66 - 67
Plate 22	Carburettors — throttle linkage	68 - 71
Plate 23	Tools	72 - 73

Plate 1

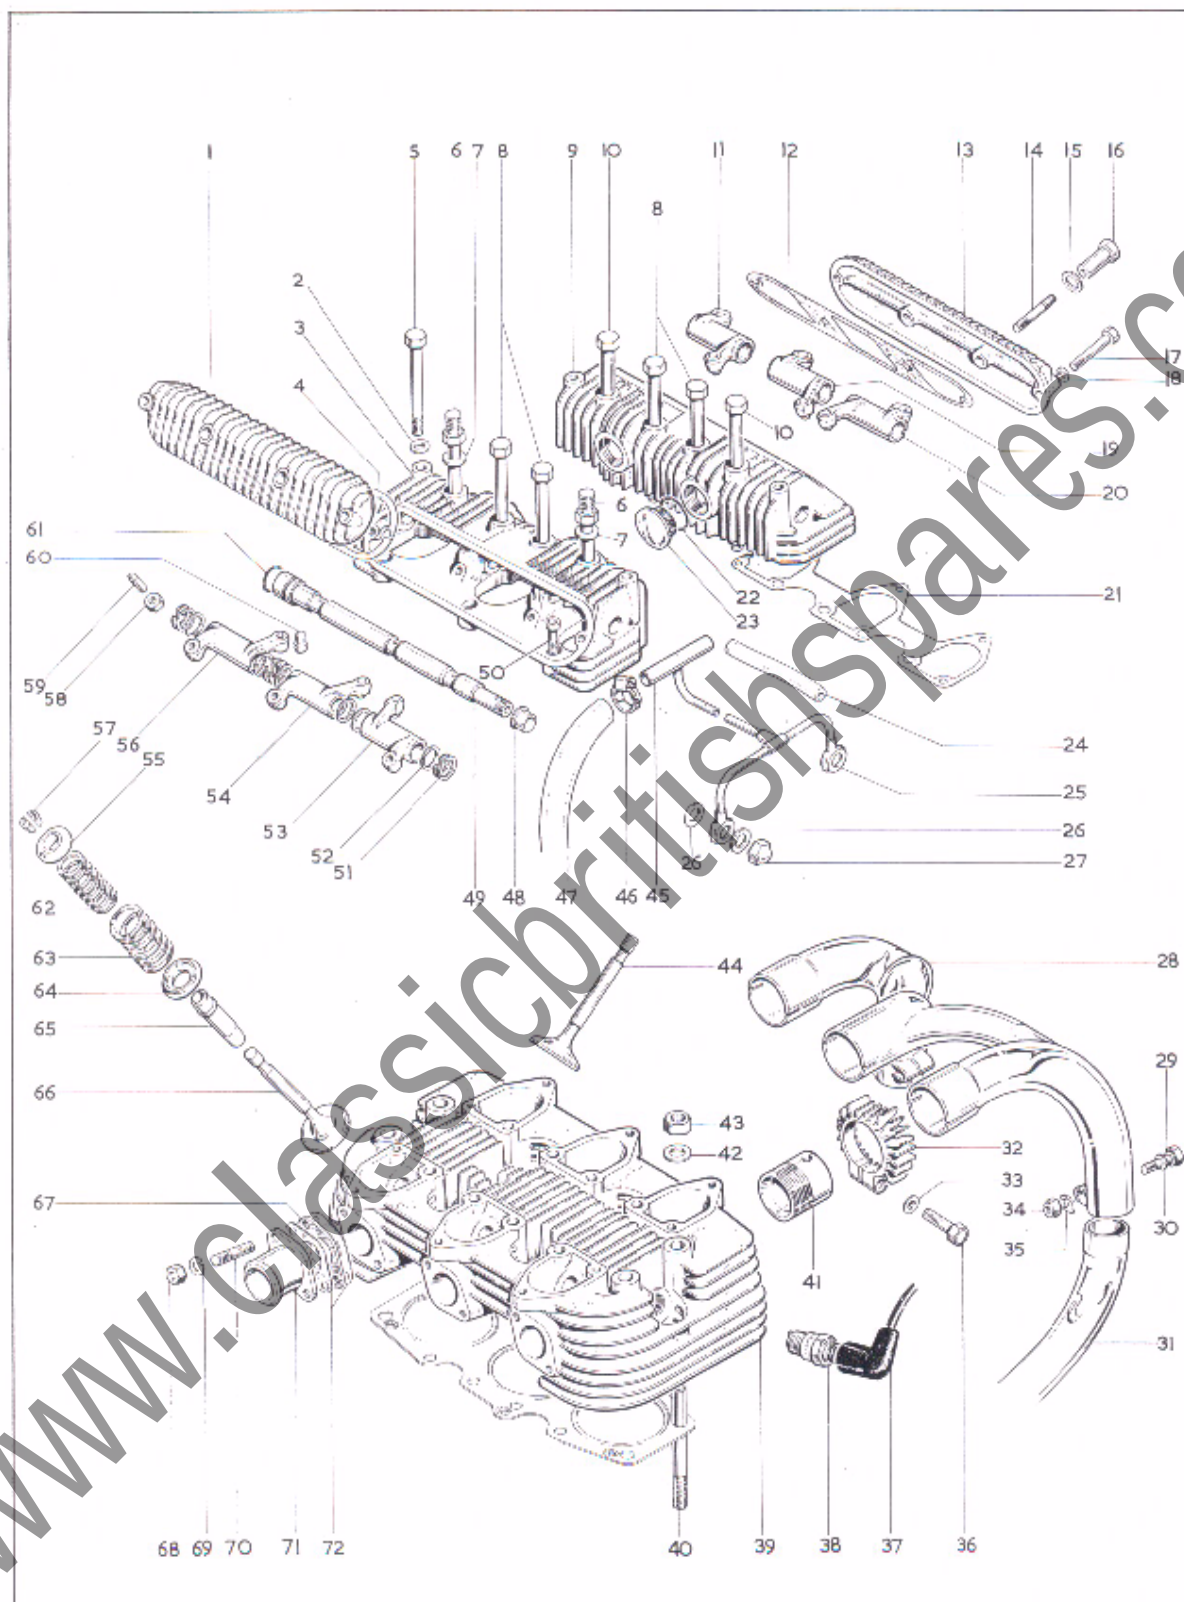


Plate 1

CYLINDER HEAD — ROCKER BOXES — EXHAUST PIPES

Plate Ref.	Part No.	Description	Per Set
1	70-6563	Cover — inlet rocker box	1
2	54-9081	Washer — rocker box to cylinder head ($\cdot 281'' \times \cdot 563'' \times \cdot 078''$)	4
3	70-6561	Rocker box — inlet	1
4	71-1445	Gasket — rocker box cover	1
5	14-6211	Bolt — rocker box to cylinder head ($\frac{1}{4}''$ UN.F. $\times 3''$)	4
5	14-6211	Bolt — rocker box to cylinder head ($\frac{1}{4}''$ UN.C. $\times 3''$)	4
6	71-0280*	Bolt — rocker box and engine steady ($\frac{3}{8}'' \times \frac{5}{16}''$ UN.F. $\times 4\frac{1}{2}''$)	2
7	70-9240	Washer — rocker box bolt ($\cdot 328'' \times \cdot 625'' \times \cdot 094''$)	8
8	70-8820*	Bolt — rocker box to barrel (short)	4
9	70-6562	Rocker box — exhaust	1
10	70-8819*	Bolt — rocker box to barrel (long)	2
11	71-1290	Rocker — exhaust (left)	1
12	70-6565	Gasket — rocker box cover	1
13	70-6564	Cover — exhaust rocker box	1
14	14-1401	Stud — rocker box cover ($\frac{1}{4}''$ UN.C./UN.F. $\times 1\frac{1}{8}''$)	4
15	70-9239	Washer — rocker box cover fixing nut ($\cdot 390'' \times \cdot 566'' \times \cdot 064''$)	4
16	70-9237	Sleeve nut — rocker box cover fixing	4
17	14-0202	Bolt — rocker box cover ($\frac{1}{4}''$ UN.F. $\times 1\frac{1}{8}''$)	4
18	54-9081	Washer — rocker box cover	4
19	71-1288	Rocker — exhaust (centre)	1
20	71-1287	Rocker — exhaust (right)	1
21	70-8773	Gasket — rocker box	2
22	70-8782	“O” ring — inspection cap	4
23	57-2166	Inspection Cap — rocker box	4
24	71-1175	Connecting tube — oil feed pipes	1
25	71-1168	Oil pipe — rocker spindle	1
26	40-0159	Washer — rocker oil pipe (copper, $\cdot 380'' \times \cdot 656'' \times \cdot 036''$)	1
27	21-0550	Domed nut — oil pipe to rocker spindles ($\frac{3}{8}''$ UN.F.)	2
28	71-1157	Exhaust manifold	1
29	14-0205	Bolt — exhaust pipe to manifold ($\frac{1}{4}''$ UN.F. $\times 1\frac{1}{2}''$)	2
30	54-9081	Washer — exhaust pipe to manifold bolt	4
31	71-2455	Exhaust pipe — left	1
31	71-2457	Exhaust pipe — right	1
32	70-6743	Finned collar — exhaust pipe	3
33	70-8860	Spherical washer — finned collar	3
34	14-1201	Locknut — exhaust pipe to manifold ($\frac{1}{4}''$ UN.F.)	2
35	70-9626	Cap — exhaust pipe to manifold	4
36	70-6744	Bolt — finned collar ($\frac{5}{16}''$ UN.F. $\times 1\frac{3}{16}''$)	3
37	19-7641	Cover — spark plug (Champion WC.200)	3
38	19-7606	Spark plug (Champion N3)	3

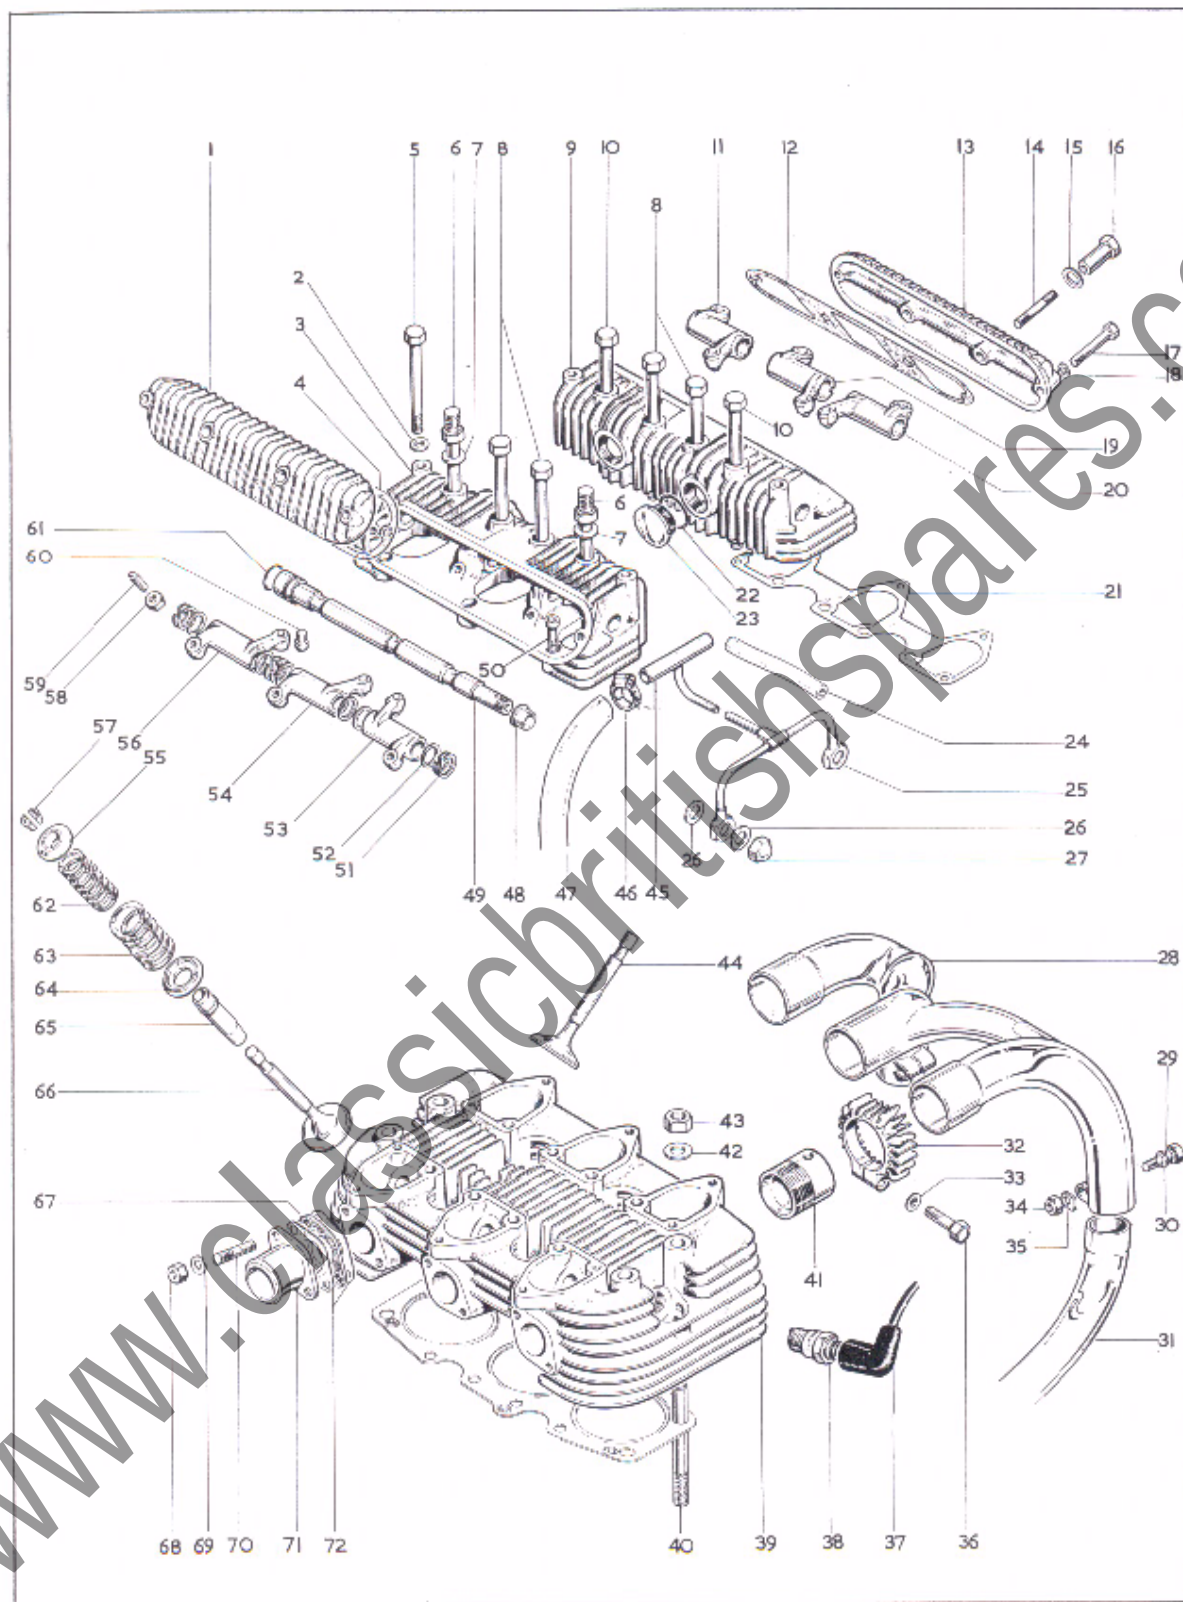


Plate 1—contd.

CYLINDER HEAD — ROCKER BOXES — EXHAUST PIPES

Plate Ref.	Part No.	Description	Per Set
39	70-8781	Cylinder head with fixed fittings	1
40	21-0686*	Stud — head to barrel ($\frac{3}{8}$ " UN.C./UN.F. $\times$ 4 $\frac{3}{4}$ ")	4
41	70-9510	Adaptor — exhaust pipe	3
42	02-0861	Washer — head to barrel stud ($\cdot 380$ " $\times$ $\cdot 750$ " $\times$ $\cdot 092$ ")	4
43	14-0303	Nut — head to barrel stud ($\frac{3}{8}$ " UN.F.)	4
44	70-6423	Valve — exhaust	3
45	71-1172	Oil connecting pipe — engine to cooler and rocker feed	1
46	60-0702	Clip — oil connecting tube	2
47	70-8905	Oil connecting tube	1
48	70-6018	Bush — rocker spindle	2
49	70-9558	Rocker spindle assembly	2
50	14-7004	Screw — rocker box to cylinder head ($\frac{1}{4}$ " UN.C. $\times$ $\frac{3}{4}$ ")	6
50	14-7004	Screw — rocker box to cylinder head ($\frac{1}{4}$ " UN.C. $\times$ $\frac{3}{4}$ ")	6
51	40-0156	Washer — spring rocker spindle ($\cdot 516$ " $\times$ $\cdot 750$ " $\times$ $\cdot 031$ " double)	6
52	40-0158	Thrust washer — rocker spindle	12
53	71-1288	Rocker — inlet (right)	1
54	71-1287	Rocker — inlet (centre)	1
55	70-8720	Collar — valve spring (top)	6
56	71-1289	Rocker — inlet (left)	1
57	40-0167	Split collet — valve spring	12
58	14-0402	Nut — rocker lever adjusting pin	6
59	70-8783	Adjusting pin — rocker lever	6
60	71-0070	Rocker ball pin	6
61	75-0124	"O" ring — rocker spindle	2
62	70-8787	Valve spring — inner	6
63	70-8788	Valve spring — outer	6
64	70-8789	Cup — valve spring (bottom)	6
65	70-6420	Valve guide	6
66	70-6422	Valve — inlet	3
67	70-8981	Insulating washer — stub to cylinder head (Tufnol)	3
68	14-0301	Nut — stub to cylinder head ($\frac{1}{4}$ " UN.F.)	6
69	40-2705	Washer — spring stub to cylinder head ($\cdot 266$ " $\times$ $\cdot 469$ " $\times$ $\cdot 064$ ")	6
70	21-0557	Stud — stub to cylinder head ($\frac{1}{4}$ " UN.F./UN.C. $\times$ 1 $\frac{5}{16}$ ")	6
71	70-7983	Stub — cylinder head	3
72	71-1446	Gasket — stub to cylinder head	6

*Special material: 6—EN16. 8—EN16. 10—EN16. 40—EN8.

Plate 2

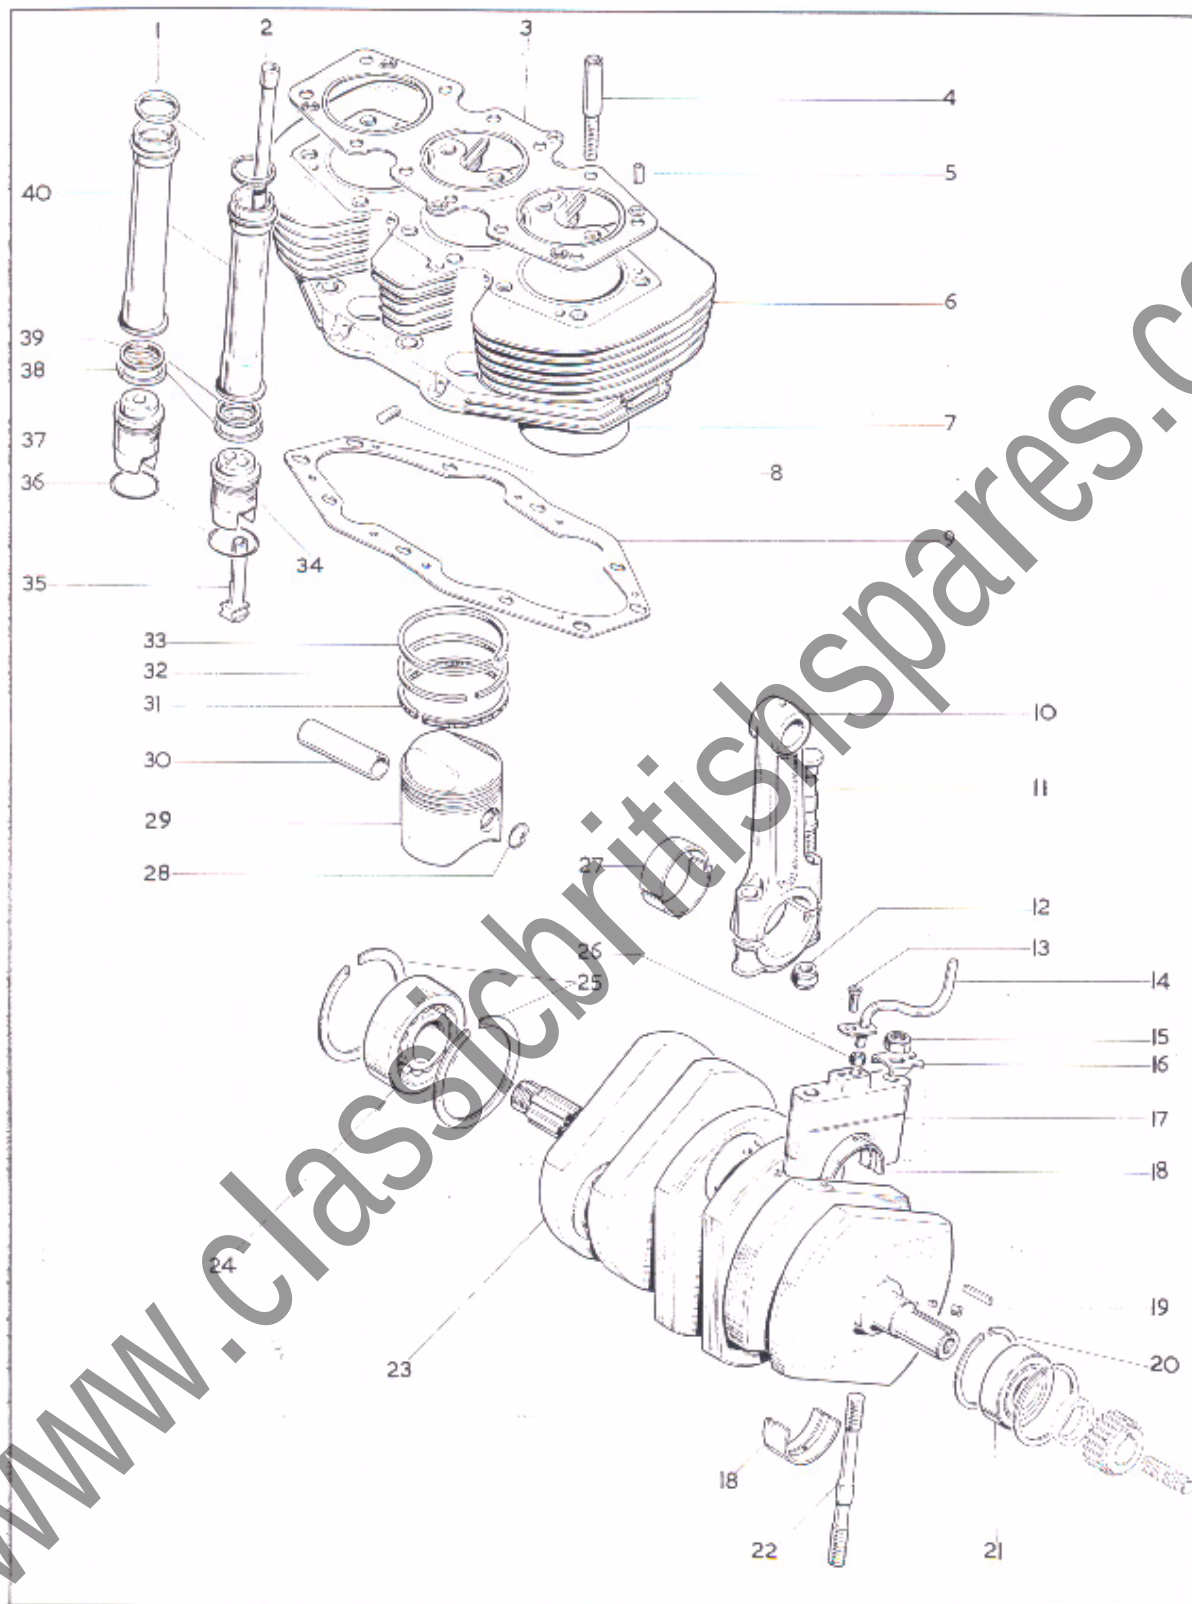


Plate 2

CYLINDER — PISTONS — CRANKSHAFT

Plate Ref.	Part No.	Description	Per Set
1	70-4752	Washer — push rod cover joint (top)	4
2	71-1238	Push rod — inlet and exhaust	6
3	71-1733	Gasket — cylinder head	1
4	70-8817*	Stud — cylinder barrel	8
5	70-1532	Dowel — cylinder head to barrel	6
6	70-6529	Cylinder barrel assembly	1
7	70-8914	Liner — cylinder barrel	3
8	70-9465	Dowel — tappet block	4
9	70-6496	Gasket — cylinder base	1
10	70-9740	Connecting rod — complete assembly	3
11	70-9727*	Bolt — connecting rod	6
12	21-2016	Nut — connecting rod bolt ($\frac{5}{16}$ " UN.F.)	6
13	40-0242	Screw — oil pipe to bearing cap (2 B.A. $\times$ 27/64" countersunk)	2
14	70-8746	Oil pipe — tappet feed (left)	1
14	70-8784	Oil pipe — tappet feed (right)	1
15	14-0303	Nut — bearing cap ($\frac{3}{8}$ " UN.F.)	4
16	71-1129	Tab washer — bearing cap nut	4
17	70-7423	Cap — main bearing	2
18	70-6023	Shell — main bearing (standard)	4
18	70-9027	Shell — main bearing ($\cdot 010$ " undersize)	4
18	70-9028	Shell — main bearing ($\cdot 020$ " undersize)	4
18	70-9029	Shell — main bearing ($\cdot 030$ " undersize)	4
18	70-9030	Shell — main bearing ($\cdot 040$ " undersize)	4
19	70-6577	Plug — crankshaft oilway	3
20	70-6026	Circlip — right bearing retaining	2
21	70-8780	Bearing — crankshaft right (Hoffmann R125)	1
22	70-8745*	Stud — main bearing cap ($\frac{3}{8}$ " UN.F. $\times$ UN.C. $\times$ 4 $\frac{1}{2}$ ")	4
23	70-8778	Crankshaft assembly	1
24	70-1591	Bearing — crankshaft left (Hoffmann MS.11)	1
25	70-6025	Circlip — left bearing retaining	2
26	70-9843	Rubber seal — tappet feed pipe	4
27	70-5998	Shell — connecting rod big-end (standard)	6
27	70-9023	Shell — connecting rod big-end ($\cdot 010$ " undersize)	6
27	70-9024	Shell — connecting rod big-end ($\cdot 020$ " undersize)	6
27	70-9025	Shell — connecting rod big-end ($\cdot 030$ " undersize)	6
27	70-9026	Shell — connecting rod big-end ($\cdot 040$ " undersize)	6
28	70-6840	Circlip — gudgeon pin	6
29	70-9741†	Piston complete (standard)	3
30	70-6836	Gudgeon pin	3
31	70-9739†	Piston ring — scraper (standard)	3
32	70-6838†	Piston ring — compression (standard)	3
33	70-6838†	Piston ring — compression (standard)	3
34	70-6509	Tappet block — right	2
35	70-8917	Inlet and exhaust tappet	6
36	70-6560	"O" ring — tappet block	4
37	70-6508	Tappet block — right	2
38	70-4746	Cup — push rod cover (bottom)	4
39	70-4746	Washer — push rod cover joint (bottom)	4
40	70-6955	Cover tube — push rod	4

*Special material: 4—EN8R. 11—3AE.4042, condition $\times$ 75 ton. 22—EN16.

†For piston details see page 6.

Plate 3

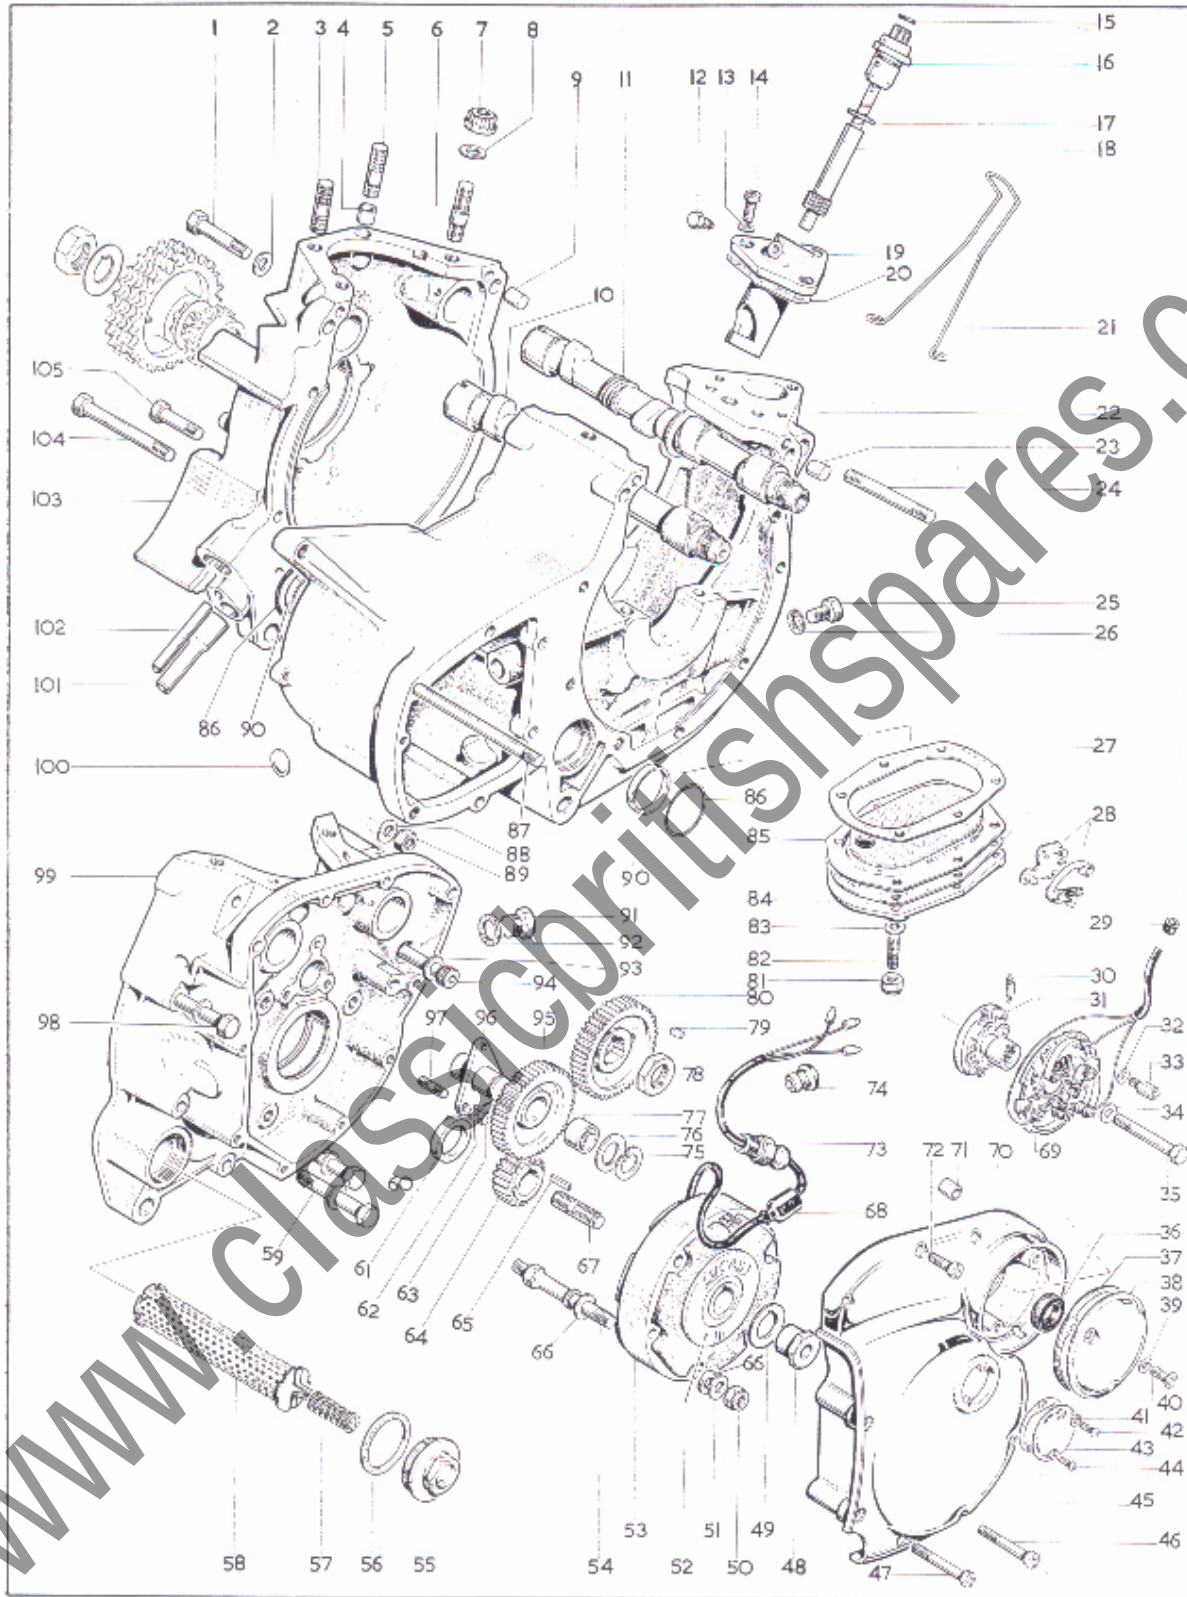


Plate 3

CRANKCASE — TIMING GEARS — OIL FILTERS

Plate Ref.	Part No.	Description	Per Set
1	14-6220	Bolt — crankcase ($\frac{5}{16}$ " UN.C. $\times$ $1\frac{3}{4}$ ")	2
2	54-0055	Washer — crankcase bolt ($\cdot 344$ " $\times$ $\cdot 625$ " $\times$ $\cdot 063$ ")	8
3	21-1931*	Stud — cylinder base ($\frac{3}{8}$ " UN.C./UN.F. $\times$ $1\frac{1}{4}$ ")	4
4	70-8751	Dowel — cylinder base location	2
5	70-8738*	Stud — cylinder base ($\frac{3}{8}$ " UN.F. $\times$ $1\frac{1}{8}$ ")	2
6	21-1912*	Stud — cylinder base ($\frac{3}{8}$ " UN.C./UN.F. $\times$ $1\frac{1}{8}$ ")	4
7	21-0692	Nut — cylinder base stud (12 point $\frac{3}{8}$ " UN.F.)	10
8	70-8770	Washer — cylinder base stud ($\cdot 391$ " $\times$ $\cdot 625$ " $\times$ $\cdot 064$ ")	10
9	70-8774	Dowel — crankcase	2
10	70-8764	Camshaft — inlet	1
11	70-8765	Camshaft — exhaust	1
12	70-8744	Bolt — tachometer drive locating ($\frac{1}{4}$ " UN.C. $\times$ $\frac{11}{32}$ ")	1
13	90-0262	Washer — fibre, tachometer drive fixing ($\cdot 265$ " $\times$ $\cdot 390$ " $\times$ $\cdot 031$ ")	2
14	14-6606	Screw — tachometer housing to crankcase ($\frac{1}{4}$ " UN.C. $\times$ $\frac{5}{8}$ ")	3
15	70-6299	"O" ring — driven gear	1
16	70-8742	Housing — tachometer drive bearing	1
17	40-0323	"O" ring — tachometer drive	1
18	70-8741	Driven gear — tachometer drive	1
19	70-8740	Housing — tachometer drive driven gear	1
20	71-1439	Gasket — tachometer drive housing	1
21	70-9706	Support wire — tachometer cable	1
22	71-2424†	Crankcase — centre section	1
23	70-8774	Dowel — crankcase location	2
24	14-1427	Stud — crankcase ($\frac{1}{8}$ " UN.C./UN.F. $\times$ 3 ")	2
25	14-6113	Oilway plug ($\frac{5}{16}$ " UN.C. $\times$ $\frac{5}{8}$ ")	2
26	70-8776	Washer — oilway plug	2
27	71-1444	Gasket — scavenge cover	2
28	19-1865	Contact set (Lucas 54419828)	1
29	70-8756	Grommet — contact breaker leads	1
30	19-1888	Spring — auto-advance unit (Lucas 54417992)	2
31	19-1864	Auto-advance unit (Lucas 54419867)	1
32	70-6559	Washer — contact breaker plate ($\cdot 203$ " $\times$ $\cdot 375$ " $\times$ $\cdot 056$ ")	3
33	70-6521	Pillar bolt — contact breaker plate (2 B.A. $\times$ $1\frac{3}{32}$ ")	3
34	68-0331	Washer — auto-advance unit bolt ($\cdot 280$ " $\times$ $\cdot 500$ " $\times$ $\cdot 064$ ")	1
35	14-0208	Bolt — auto-advance unit ($\frac{1}{4}$ " UN.F. $\times$ $2\frac{1}{4}$ ")	1
36	76-0291	Oil seal — contact breaker	1
37	71-1441	Gasket — contact breaker cover	1
38	70-6519	Cover — contact breaker	1
39	97-3893	Washer — contact breaker cover screw	3
40	54-9012	Screw — contact breaker cover (2 B.A. $\times$ $\frac{11}{32}$ ")	3

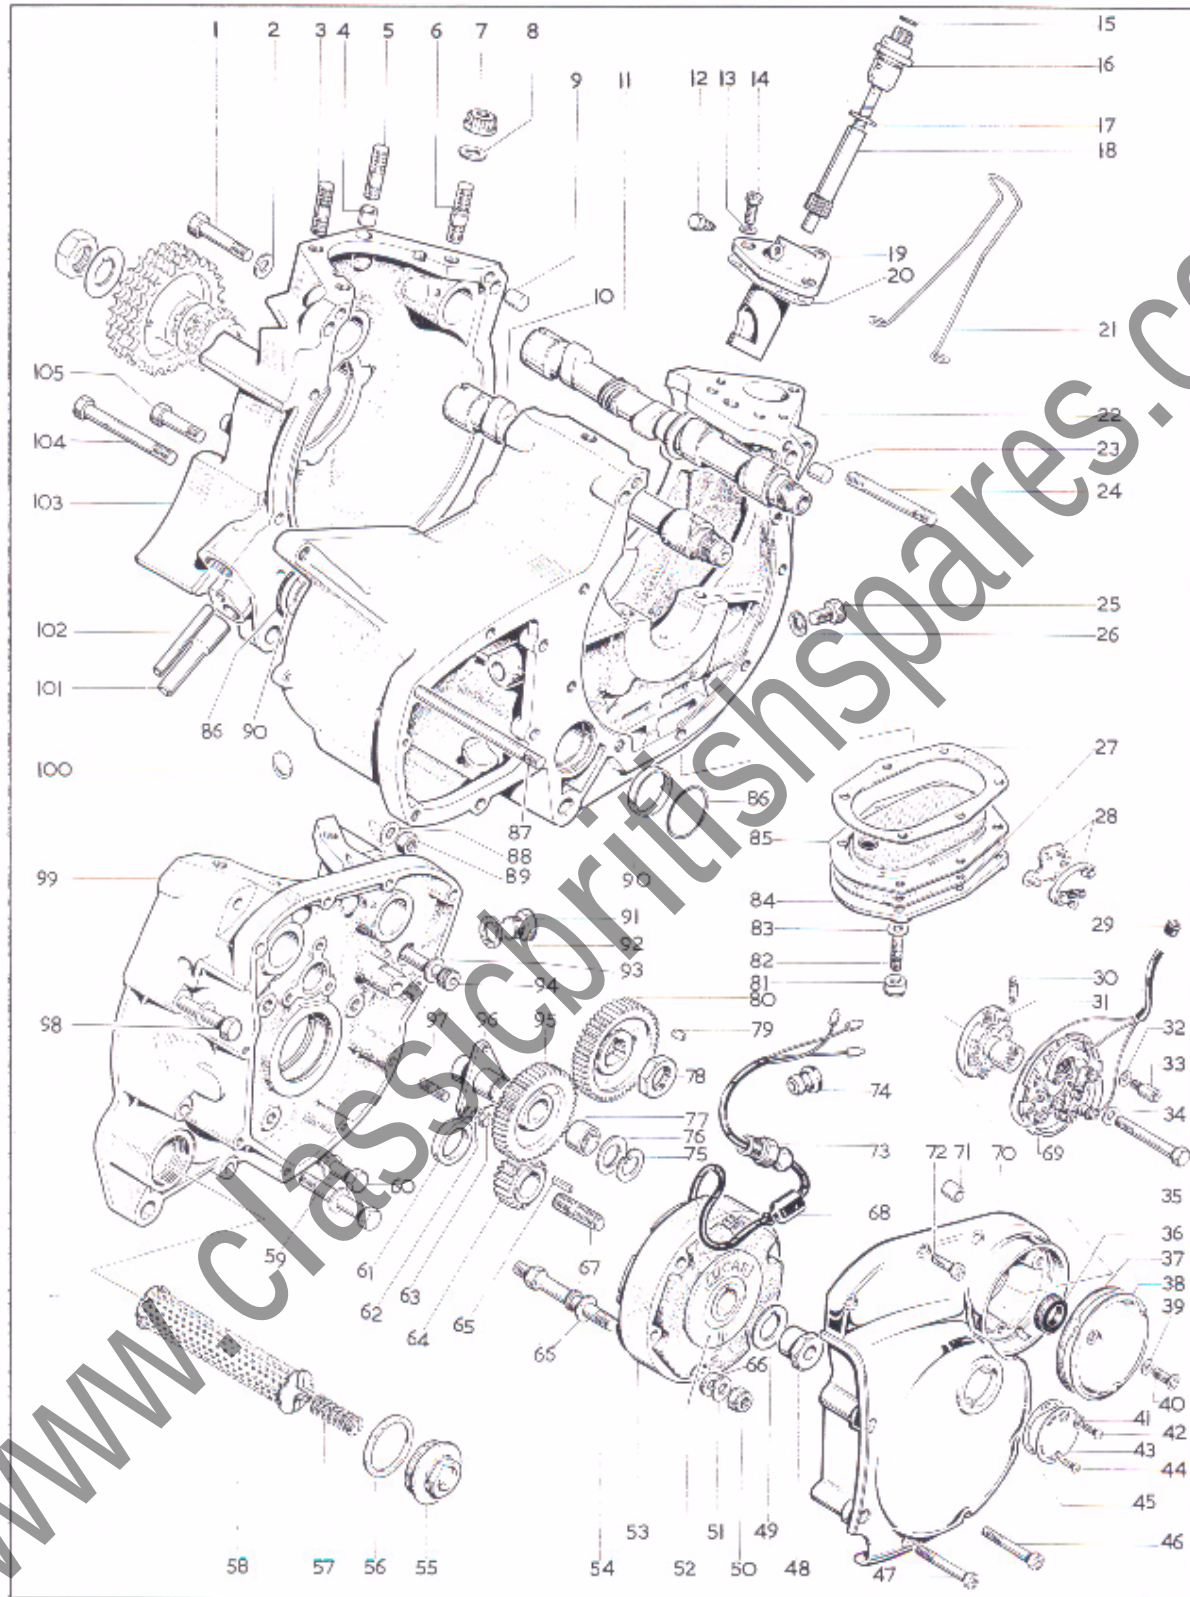


Plate 3—contd.

CRANKCASE — TIMING GEARS — OIL FILTERS

Plate Ref.	Part No.	Description	Per Set
41	70-9266	Washer — screw and pointer, timing aperture	2
42	71-1130	Screw — timing aperture (4 B.A. $\times \frac{5}{16}$ ")	1
43	70-7879	Cover — timing aperture	1
44	71-0006	Pointer screw — timing aperture (4 B.A. $\times \frac{11}{16}$ ")	1
45	71-1443	Gasket — timing aperture	1
46	14-6611	Screw — timing cover ($\frac{1}{4}$ " UN.C. $\times 1\frac{3}{4}$ ")	4
47	14-6612	Screw — timing cover ($\frac{1}{4}$ " UN.C. $\times 2$ ")	4
48	70-8763	Nut — rotor mounting ($\frac{7}{16}$ " UN.F.)	1
49	75-0223	Lockwasher — rotor mounting	1
50	21-1852	Locknut — stator mounting ($\frac{5}{16}$ " UN.F.)	3
51	54-0055	Washer — stator mounting ($\cdot 344$ " $\times \cdot 625$ " $\times \cdot 063$ ")	3
52	19-1260	Alternator rotor (Lucas 54210937)	1
53	19-1259	Alternator stator (Lucas 47209)	1
54	70-6522*	Stud — stator mounting	3
55	71-1270	Cap — oil filter	1
56	71-1070	"O" ring — oil filter cap	1
57	70-6130	Spring — filter mounting	1
58	70-6571	Oil filter (Fram CA.2818)	1
59	14-6226	Bolt — crankcase fixing ($\frac{5}{16}$ " UN.C. $\times 3\frac{1}{4}$ ")	4
60	14-6218	Bolt — crankcase fixing ($\frac{5}{16}$ " UN.C. $\times 1\frac{3}{8}$ ")	1
61	70-6173	Distance piece — timing pinion	1
62	54-0022	Washer — spring gear spindle stud nut	3
63	14-0401	Nut — gear spindle stud ($\frac{1}{4}$ " UN.F.)	3
64	70-6524	Timing pinion — crankshaft	1
65	70-3974	Key — crankshaft pinion and rotor	1
66	02-0370	Distance piece — stator	1
67	21-0548*	Stud — crankshaft ($\frac{7}{16}$ " UN.F./UN.C. $\times 1\frac{3}{8}$ ")	1
68	68-0209	Grommet — for cable seal nut	1
69	19-1863	Contact breaker plate (Lucas 54419327)	1
70	70-7738	Cover — timing cover	1
71	76-0217	Dowel — timing cover locating	2
72	14-6608	Screw — timing cover to crankcase ($\frac{1}{4}$ " UN.C. $\times 1$ ")	5
73	70-8760	Nut — alternator cable sleeve	1

Plate 3—continued

CRANKCASE — TIMING GEARS — OIL FILTERS

Plate Ref.	Part No.	Description	Per Set
74	70-9807	Grommet — alternator lead	1
75	70-8768	Circlip — idler gear retaining	1
76	71-2249	Thrust washer — idler gear	1
77	71-2248	Bush — idler gear	1
78	70-6523	Nut — camshaft pinion	2
79	70-1558	Key — camshaft pinion	2
80	71-2718	Camshaft pinion	2
81	71-1349	Stud — scavenge cover ($\frac{1}{4}$ " UN.C. $\times$ $\frac{7}{8}$ ")	6
82	14-1302	Locknut — sump fixing	1
83	60-2320	Washer — scavenge cover bolt ($\cdot 270$ " $\times$ $\cdot 562$ " $\times$ $\cdot 056$ ")	6
84	70-6580	Scavenge cover	1
85	70-6501	Filter — scavenge cover	1
86	70-8779	"O" ring — filter seal	2
87	21-1813	Stud — gearbox cover ($\frac{5}{16}$ " UN.C. $\times$ UN.F. $\times$ $4\frac{1}{2}$ ")	2
88	54-0055	Washer — crankcase stud ($\cdot 313$ " $\times$ $\cdot 625$ " $\times$ $\cdot 063$ ")	2
89	14-0302	Nut — crankcase stud ($\frac{5}{16}$ " UN.F.)	2
90	70-9856	Sleeve — filter "O" ring	2
91	70-8755	Plug — timing aperture	1
92	70-1523	Washer — fibre, timing aperture plug ($\cdot 563$ " $\times$ $\cdot 844$ " $\times$ $\cdot 064$ ")	1
93	54-0055	Washer — crankcase bolt ($\cdot 313$ " $\times$ $\cdot 625$ " $\times$ $\cdot 063$ ")	7
94	21-0678	Socket screw — crankcase fixing ($\frac{5}{16}$ " UN.C. $\times$ $3\frac{1}{8}$ ")	1
95	71-2246	Idler gear complete	1
96	71-2250	Spindle — idler gear	1
97	21-0547	Stud — intermediate gear spindle ($\frac{1}{4}$ " UN.C./UN.F. $\times$ $\frac{7}{8}$ ")	3
98	14-6223	Bolt — crankcase fixing ($\frac{5}{16}$ " UN.C. $\times$ $2\frac{1}{2}$ ")	1
99	70-7737†	Crankcase — right	1
100	57-1920	Blanking plug	1
101	70-6573	Stub — oil return pipe	1
102	70-6574	Stub — oil feed pipe	1
103	71-1050†	♦ Crankcase — left	1
104	14-6226	Bolt — crankcase fixing ($\frac{5}{16}$ " UN.C. $\times$ $3\frac{1}{4}$ ")	5
105	14-6218	Bolt — crankcase fixing ($\frac{5}{16}$ " UN.C. $\times$ $1\frac{3}{8}$ ")	1

*Special material: 3—EN16R. 5—EN8R. 6—EN8R. 54—EN8R. 67—EN8R.

†Supplied only as crankcase complete, 71-2422.

Plate 4

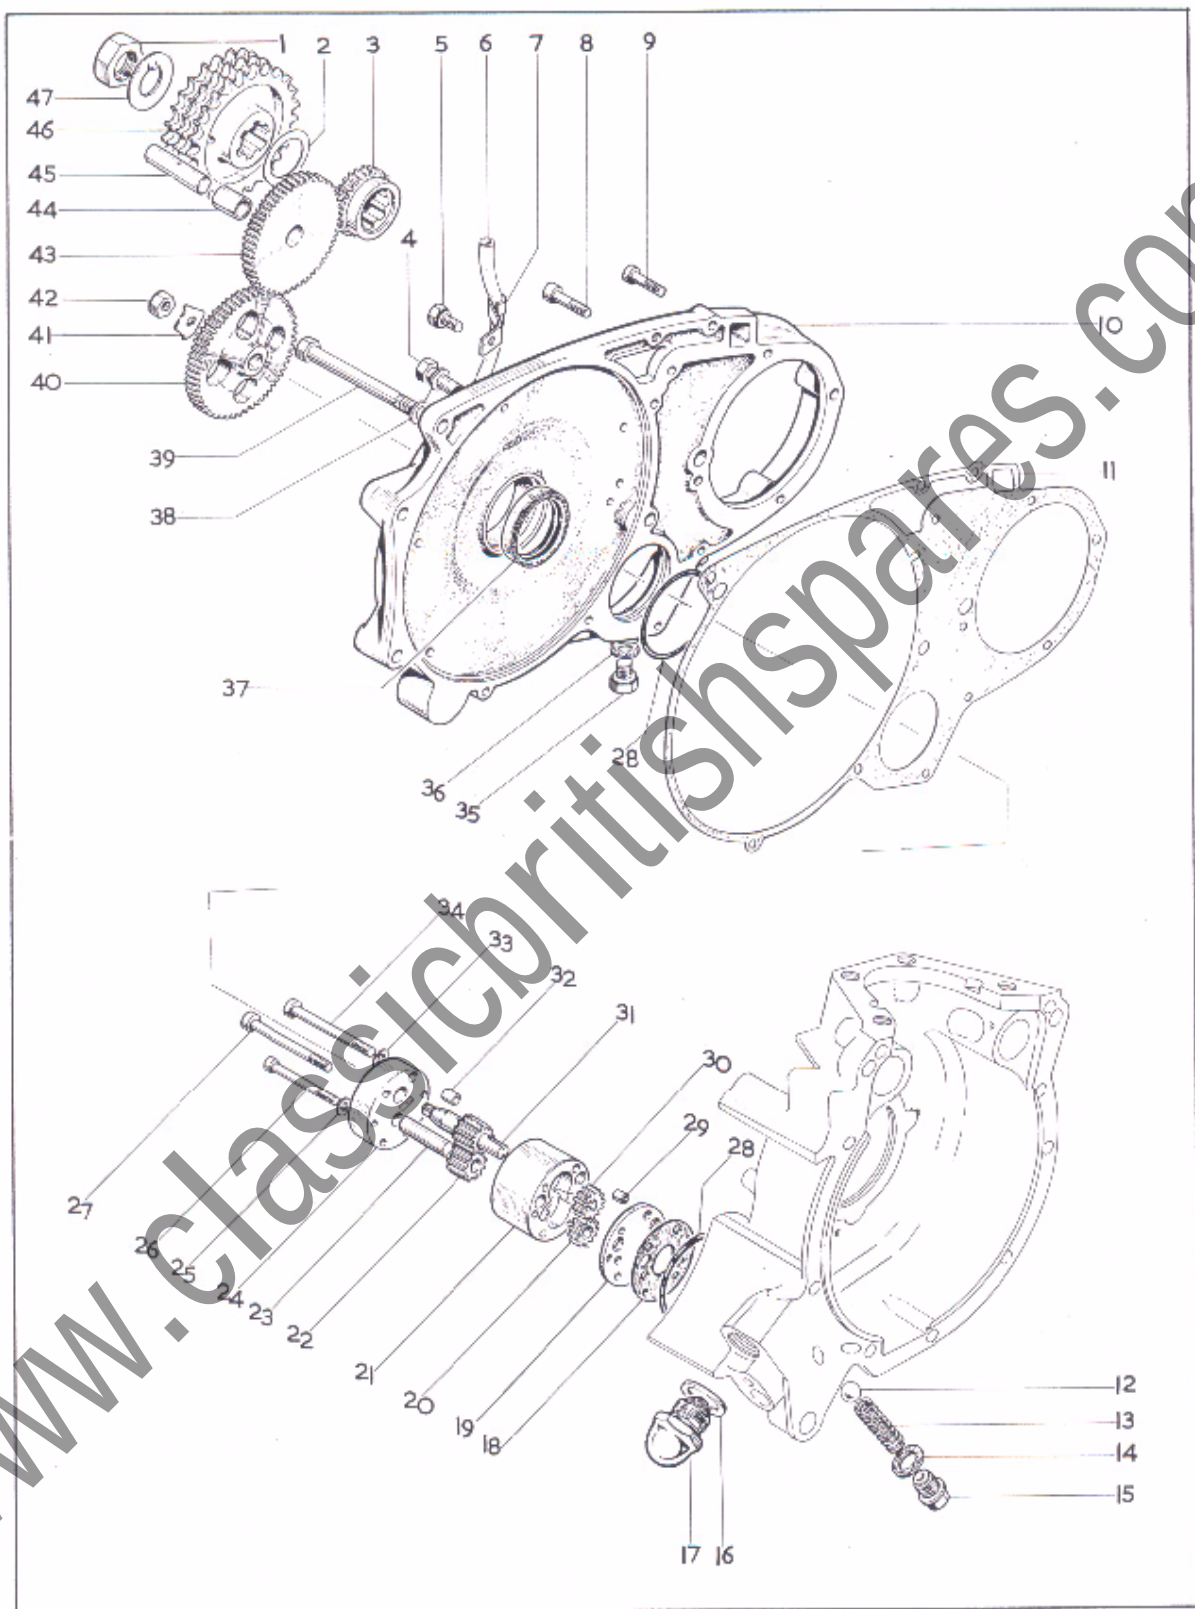


Plate 4

INNER PRIMARY COVER — OIL PUMP — GEARS

Plate Ref.	Part No.	Description	Per Set
1	21-0585	Nut — engine sprocket ($\frac{3}{8}$ " UN.F.)	1
2	40-0066	Shim — engine sprocket ($\cdot 010$ ")	as reqd.
2	71-2660	Shim — engine sprocket ($\cdot 030$ ")	as reqd.
3	70-7248	Gear — oil pump driving	1
4	21-1820	Bolt — inner cover to crankcase ($\frac{5}{16}$ " UN.C. $\times 4\frac{1}{2}$ ")	1
5	14-6101	Bolt — chain oiler clip ($\frac{1}{4}$ " UN.C. $\times \frac{1}{2}$ ")	1
6	70-8786	Chain oiler pipe	1
7	70-4705	Clip — chain oiler pipe	1
8	14-7006	Screw — socket, inner cover to crankcase ($\frac{1}{4}$ " UN.C. $\times 1$ ")	7
9	14-6606	Screw — inner cover to crankcase ($\frac{1}{4}$ " UN.C. $\times \frac{3}{4}$ ")	2
10	57-4018	Cover — inner primary with fixed fittings	1
11	71-1453	Gasket — inner cover to crankcase	1
12	60-2370	Ball — oil control valve ($\frac{7}{16}$ ")	1
13	70-6567	Spring — oil control valve	1
14	70-6742	Washer — fibre, oil control valve	1
15	70-6584	Plug — oil control valve	1
16	71-2211	Washer — valve body to crankcase ($\cdot 860$ " $\times \cdot 122$ " $\times \cdot 036$ ")	1
17	71-2369	Oil pressure release valve complete	1
18	70-1670	Gasket — oil pump to crankcase	1
19	70-6502	Plate — oil pump base	1
20	70-6038	Feed gear — oil pump, driven	1
21	70-6430	Body — oil pump	1
21	71-1351	Oil pump complete	1
22	70-6039	Scavenge gear — oil pump, driven	1
23	70-6454	Spindle — driven gears	1
24	70-9885	Cover — oil pump	1
25	70-8731	Washer — spring, oil pump cover screw	2
26	21-0559	Screw — oil pump cover to body (3 B.A. $\times 2$ ")	2
27	71-0003	Screw — oil pump to crankcase (2 B.A. $\times 2\frac{1}{2}$ ")	3
28	70-6570	"O" ring — oil pump to crankcase and cover	2
29	70-1532	Dowel — oil pump locating	1
30	70-6455	Feed gear — oil pump, driving	1
31	70-9887	Scavenge gear — oil pump, driving	1
32	70-6459	Dowel — oil pump cover locating	1
33	70-8732	Washer — spring, oil pump screw ($\cdot 203$ " $\times \cdot 331$ " $\times \cdot 064$ ")	4
34	70-9601	Screw — oil pump to crankcase dowel position (2 B.A. $\times 2\frac{3}{4}$ ")	1
35	21-0536	Drain plug — primary cover	1
36	70-0402	Washer — fibre, drain plug ($\cdot 375$ " $\times \cdot 563$ " $\times \cdot 064$ ")	1
37	57-3642	Oil seal — clutch shaft	1
38	54-0055	Washer — inner cover to crankcase bolt ($\cdot 313$ " $\times \cdot 625$ " $\times \cdot 063$ ")	2
39	21-1819	Bolt — inner cover to crankcase ($\frac{5}{16}$ " UN.C. $\times 4\frac{1}{2}$ ")	1
40	70-7886	Gear — oil pump driven	1
41	71-1353	Tab washer — oil pump gear fixing	1
42	14-0402	Nut — oil pump gear fixing ($\frac{5}{16}$ " UN.F.)	1
43	70-7246	Idler gear — oil pump drive	1
44	70-6885	Bush — oil pump idler gear	1
45	71-1051	Spindle — oil pump idler gear	1
46	70-6890	Engine sprocket	1
47	70-8785	Lockwasher — engine sprocket	1



Plate 5

CLUTCH — SHOCK ABSORBER

Plate Ref.	Part No.	Description	Per Set
	19-7800	Clutch assembly complete	1
	19-7809	Facing pack for friction plate (3SC.76014)	1
	57-3871	Shock absorber assembly	1
1	57-4004	Retaining plate — shock absorber	1
2	57-3644	Oil seal — clutch pull rod	1
3	57-2480	Nut — shock absorber	1
4	57-2478	Distance piece — shock absorber nut	1
5	57-4324	Rubber — shock absorber	12
6	19-8692	Primary chain — (Triplex, 82 pitch; Renold 116 038)	1
7	57-3643	Needle bearing — clutch shaft (INA. SC.228)	1
8	71-1454	Gasket — outer primary cover	1
9	57-4225	Sprocket — shock absorber	1
10	57-2214	Thrust washer — shock absorber sprocket	1
11	57-4323	Spider — shock absorber	1
12	57-3646	Thrust race — shock absorber (Torrington NTA.2233)	1
13	57-3941	Tab washer — shock absorber retaining plate bolt	3
14	57-3940	Bolt — shock absorber retaining plate (2 B.A. $\times \frac{3}{8}$ ")	6
15	19-7801	End cover assembly — clutch	1
16	19-7805	Clutch spring	1
17	19-7804	Pressure plate — clutch complete	1
18	19-7803	Friction plate — clutch	1
19	68-3218	Key — clutch hub to mainshaft	1
20	57-2580	Clutch hub	1
21	71-1452	Gasket — breather duct	1
22	57-2555	Cover — breather duct	1
23	14-6515	Screw — breather duct cover to inner cover ($\frac{1}{4}$ " UN.C. $\times 4$ ")	1
24	21-0680	Screw — cover to clutch cover (10 $\times$ 24 t.p.i. UN.C. $\times \frac{1}{8}$ ")	3
25	57-3756	Adaptor — oil tank breather pipe	1
26	57-3642	Oil seal — cover to mainshaft	1
27	57-2554	Clutch cover	1
28	14-6610	Screw — cover to crankcase ($\frac{1}{4}$ " UN.C. $\times 1\frac{1}{2}$ ")	3
29	57-2557	Breather tube	1
30	21-0681	Nut — clutch hub to mainshaft ($\frac{9}{16}$ " UN.F.)	1
31	19-7802	Clutch housing	1
32	57-2552	Clutch pull rod	1
33	19-7808	Bearing — clutch pressure plate	1
34	19-7807	Lockwasher — end cover to housing bolt	6
35	19-7806	Bolt — end cover to housing	12
36	57-2479	Sleeve — mainshaft oil seal	1

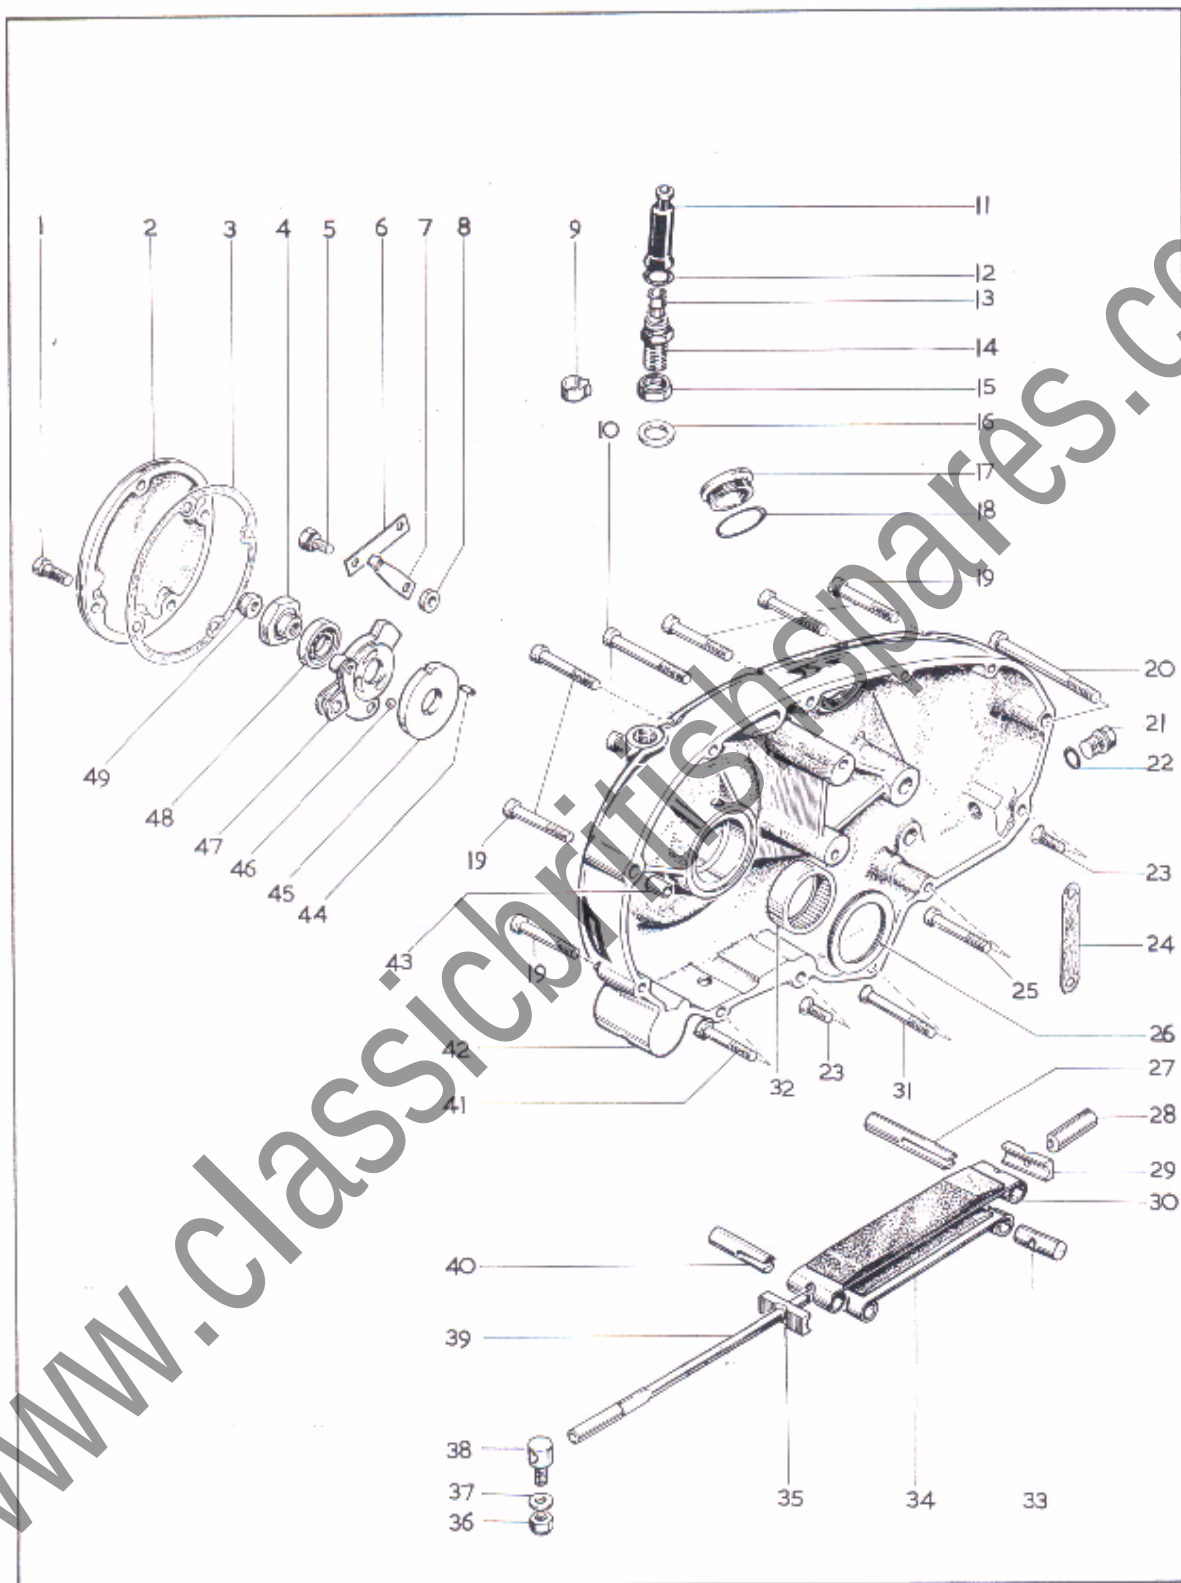


Plate 6

OUTER PRIMARY COVER — CHAIN TENSIONER — CLUTCH CONTROL

Plate Ref.	Part No.	Description	Per Set
1	14-6605	Screw — inspection cover ($\frac{1}{4}$ " UN.C. $\times$ $\frac{5}{8}$ ")	4
2	57-3954	Inspection cover	1
3	57-3955	Gasket — inspection cover	1
4	57-2553	Sleeve nut — clutch pull rod	1
5	14-6102	Bolt — thrust plate spring ($\frac{1}{4}$ " UN.C. $\times$ $\frac{5}{8}$ ")	2
6	57-2474	Tab washer — thrust plate spring	1
7	57-2473	Spring — clutch thrust plate	2
8	57-3638	Distance piece — clutch thrust plate spring	2
9	57-3194	Clip — clutch cable retaining	1
10	14-6613	Screw — primary outer cover ($\frac{1}{4}$ " UN.C. $\times$ $2\frac{1}{4}$ ")	2
11	68-3264	Grommet — clutch cable	1
12	57-3733	Sealing ring — clutch cable	1
13	57-1645	Adaptor — clutch cable	1
14	57-2220	Abutment — clutch cable	1
15	21-0567	Locknut — clutch cable abutment ($\frac{1}{2}$ " UN.C.)	1
16	57-3990	Washer — clutch cable abutment locknut	1
17	57-2166	Plug — chain inspection	1
18	70-8782	"O" ring — inspection plug	1
19	14-6611	Screw — outer cover ($\frac{1}{4}$ " UN.C. $\times$ $1\frac{3}{4}$ ")	6
20	14-6615	Screw — outer cover ($\frac{1}{4}$ " UN.C. $\times$ $3\frac{1}{2}$ ")	1
21	57-2259	Plug — tensioner adjusting hole	1
22	57-3733	"O" ring — tensioner adjusting hole plug	1
23	14-6504	Screw — primary cover ($\frac{1}{4}$ " UN.C. $\times$ $\frac{3}{4}$ " countersunk)	2
24	71-2793	Gasket — primary chain outer pipe	1
25	14-6612	Screw — outer to inner cover ($\frac{1}{4}$ " UN.C. $\times$ 2 ")	1
26	57-2215	Thrust washer — outer cover	1
27	57-3614	Pivot pin — chain tensioner	1
28	57-3617	Adjuster — chain tensioner	1
29	70-9258	Saddle washer — chain tensioner (front)	2
30	57-3610	Blade — chain tensioner (upper)	1
31	14-6509	Screw — primary outer cover ($\frac{1}{4}$ " UN.C. $\times$ $1\frac{3}{4}$ " countersunk)	1
32	57-3643	Needle bearing — outer cover (INA. SC.228)	1
33	70-5977	Trunnion — lower tensioner blade	2
34	70-6061	Blade — chain tensioner (lower)	1
35	70-9258	Saddle washer — chain tensioner (rear)	1
36	14-1901	Nut — chain tensioner support ($\frac{1}{4}$ " UN.F.)	1
37	57-2987	Washer — chain tensioner support ($.251" \times .500" \times .064"$)	1
38	57-3986	Support — chain tensioner	1
39	57-3983	Tie rod — chain tensioner	1
40	70-9256	Trunnion — chain tensioner	1
41	14-6610	Screw — outer cover ($\frac{1}{4}$ " UN.C. $\times$ $1\frac{1}{2}$ ")	1
42	57-3958	Outer cover — complete assembly	1
43	76-0217	Dowel — outer cover locating	2
44	57-0912	Peg — clutch thrust plate	1
45	57-2465	Clutch thrust plate	1
46	60-2364	Steel ball ($\frac{1}{4}$ ")	3
47	57-2547	Clutch lever	1
48	57-3647	Bearing — clutch lever (Hoffmann S5)	1
49	14-0402	Locknut — clutch pull rod ($\frac{5}{16}$ " UN.F.)	1


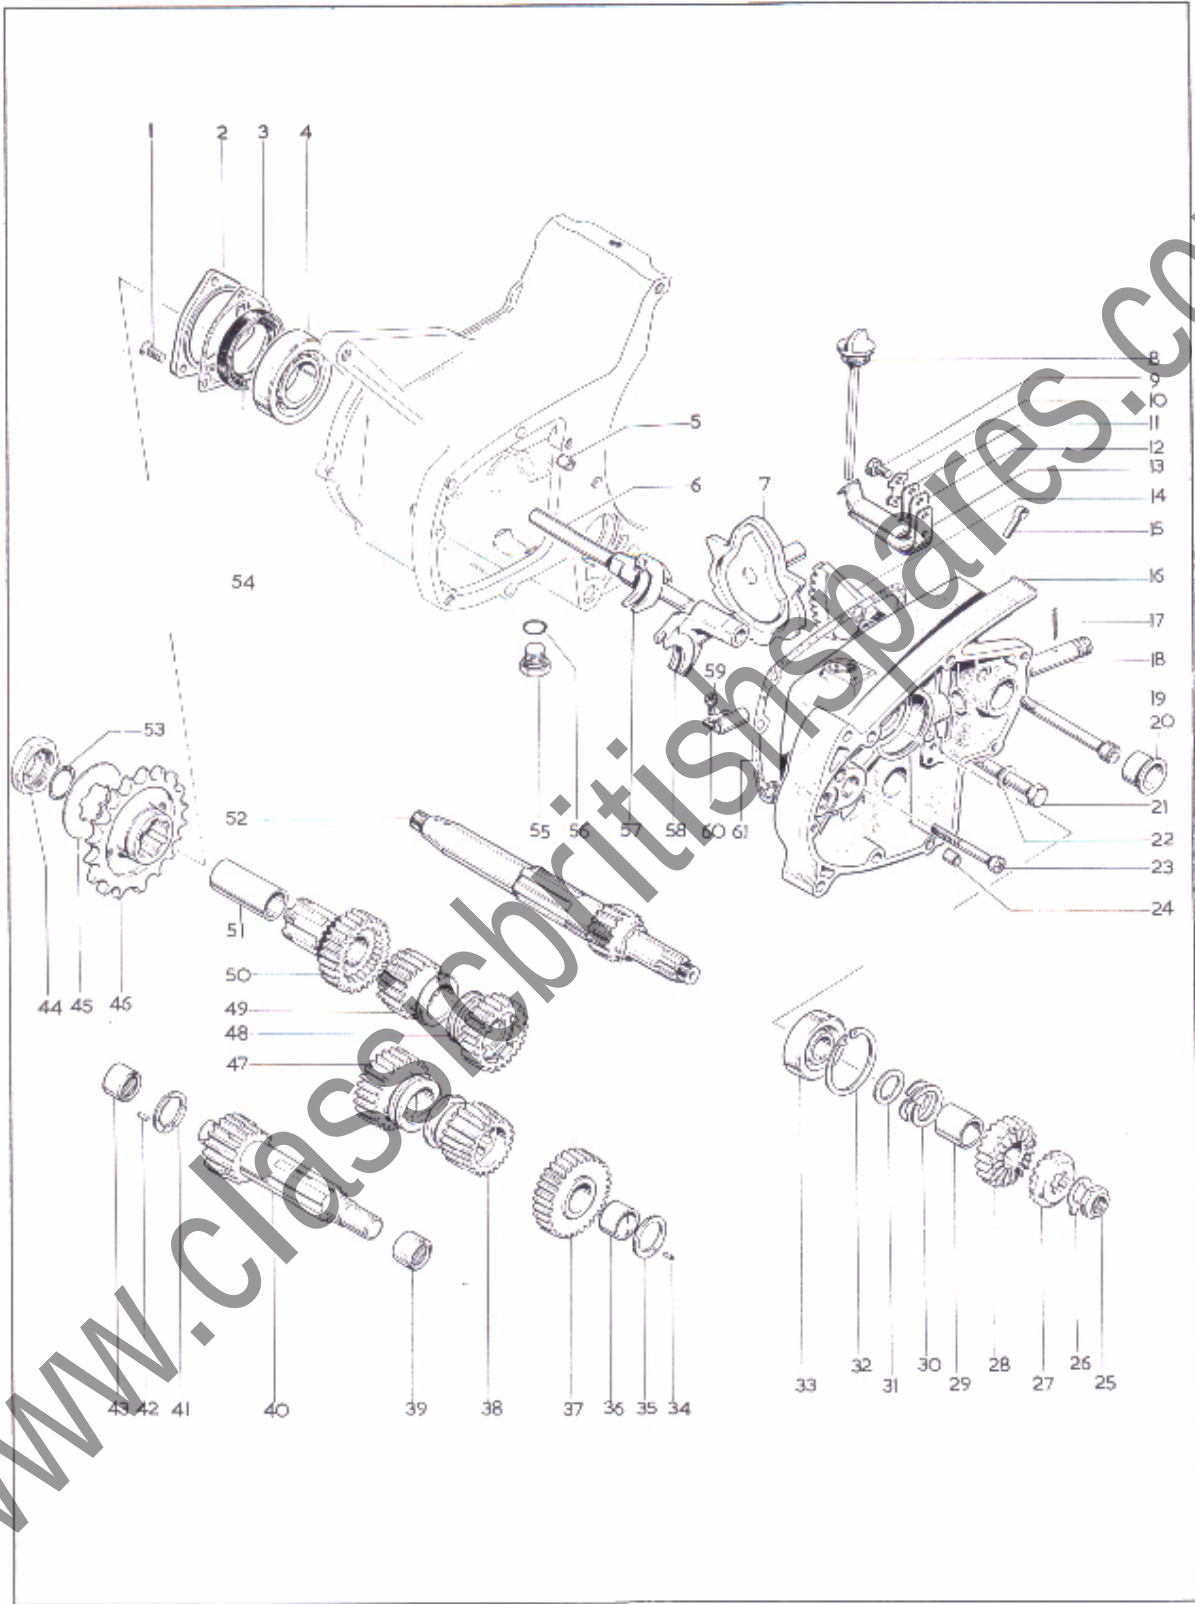


Plate 7

GEARBOX — 4-SPEED

Plate Ref.	Part No.	Description	Per Set
1	14-6504	Screw — oil seal housing to crankcase ($\frac{1}{4}$ " UN.F. countersunk)	3
2	57-3633	Oil seal housing — gearbox mainshaft	1
3	71-1451	Gasket — housing to crankcase	1
4	60-3556	Bearing — gearbox mainshaft (Hoffmann N.1443)	1
5	76-0217	Dowel — gearbox inner cover locating	2
6	57-3989	Spindle — selector fork	1
7	57-4055	Cam plate	2
8	57-2656	Dipstick — gearbox	1
9	54-0043	Set-screw — cam plate spring fixing	1
10	57-4291	Tab washer — cam plate spring fixing	1
11	57-4290	Plate — cam plate spring retaining	1
12	57-4288	Spring — cam plate	1
13	57-4289	Support — cam plate spring	1
14	57-0397	Quadrant — gear selector	1
15	40-9190	Cable clip — alternator	1
16	57-4329	Inner cover — gearbox	1
17	60-1928	Split pin — quadrant spindle ($5/64$ " $\times$ $1\frac{1}{8}$ ")	2
18	57-1896	Spindle — selector quadrant	1
19	14-7101	Screw — socket, inner cover to crankcase ($\frac{5}{16}$ " UN.C. $\times$ $3\frac{1}{4}$ ")	1
20	57-0412	Bush — gearchange quadrant	1
21	14-6121	Bolt — inner cover to crankcase ($\frac{5}{16}$ " UN.C. $\times$ $2\frac{1}{2}$ ")	1
22	75-0176	Washer — inner cover to crankcase bolt ($\cdot 328$ " $\times$ $\cdot 531$ " $\times$ $\cdot 048$ ")	1
23	14-6614	Screw — inner cover to crankcase ($\frac{1}{4}$ " UN.C. $\times$ $2\frac{1}{2}$ ")	2
24	76-0217	Dowel — outer cover locating	2
25	21-0594	Nut — kickstart ratchet retaining ($\frac{9}{16}$ " UN.F.)	1
26	57-0732	Lockwasher — kickstart ratchet retaining nut	1
27	57-0731	Kickstart ratchet	1
28	57-0730	Kickstart ratchet pinion	1
29	57-1963	Bush — kickstart ratchet pinion	1
30	57-1250	Spring — kickstart ratchet	1
31	57-1962	Washer — kickstart pinion sleeve	1
32	57-4113	Circlip — mainshaft inner cover bearing	1
33	60-3552	Bearing — mainshaft, inner cover (Hoffmann LS.8)	1
34	57-0912	Peg — thrust washer, layshaft	1
35	57-1607	Thrust washer — layshaft	1

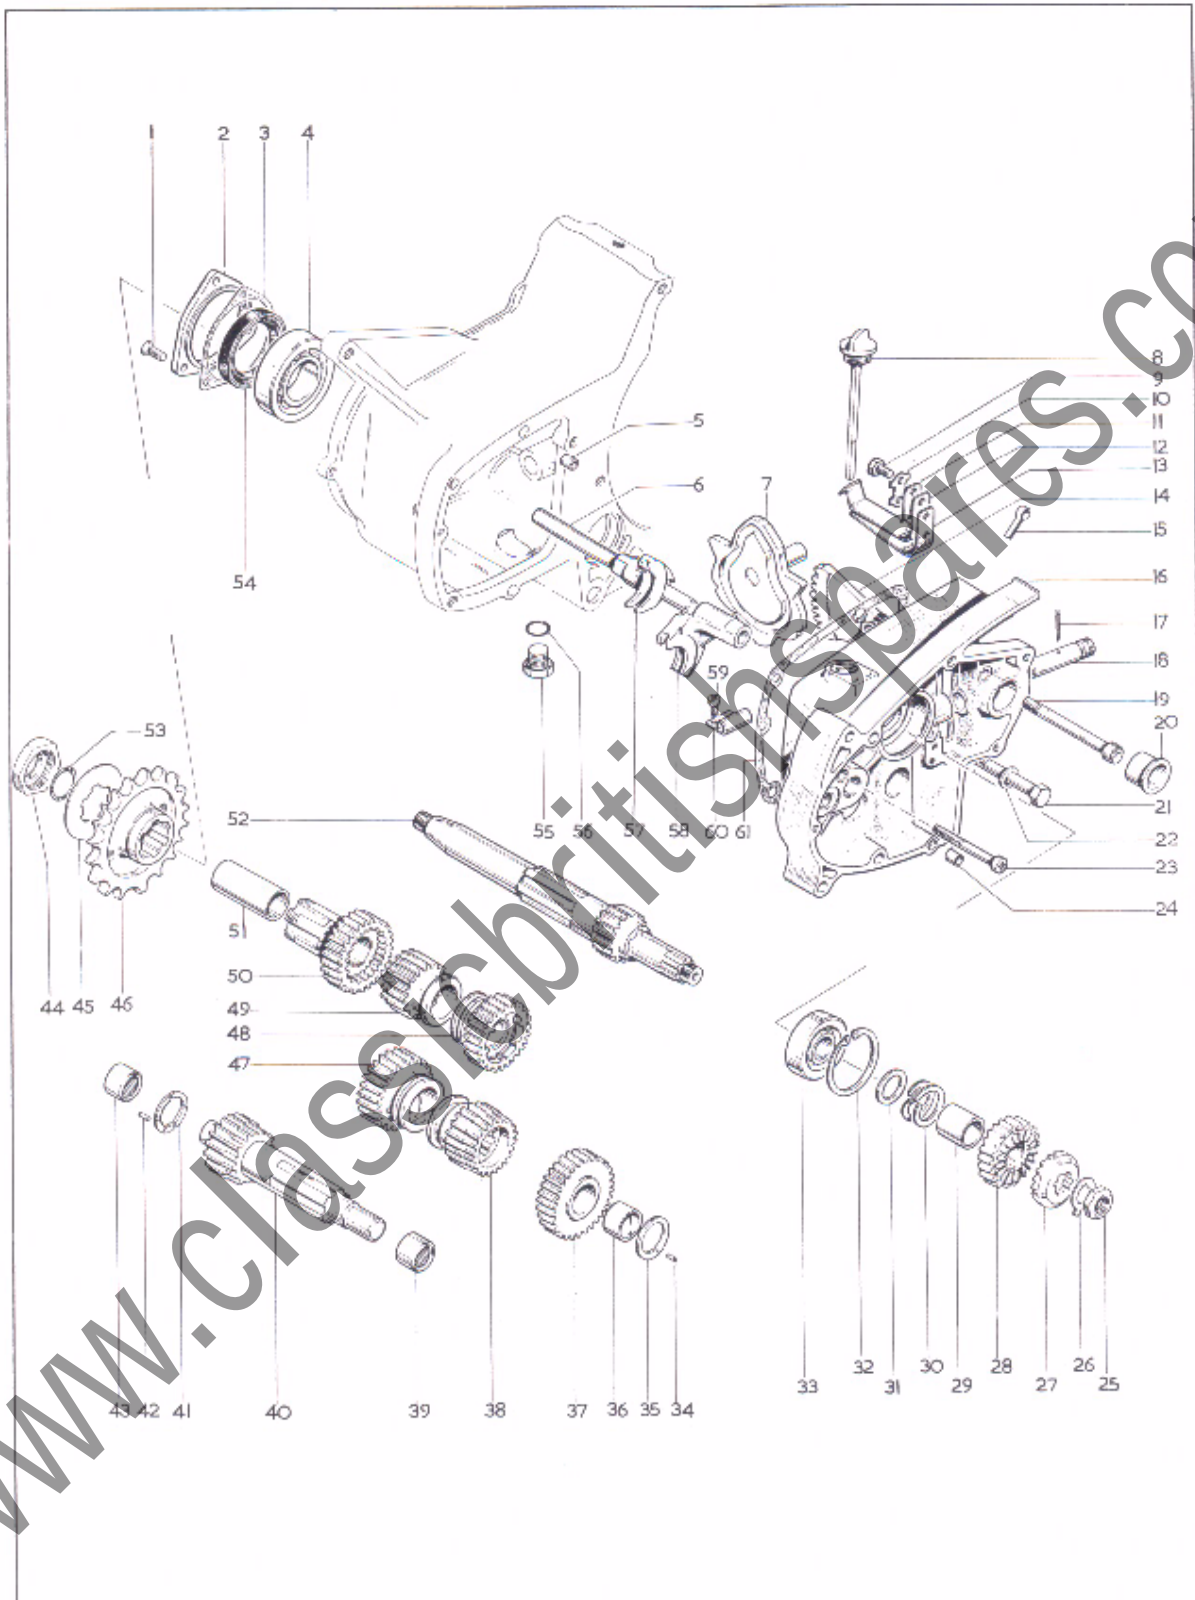

GEARBOX — 4-SPEED

Plate Ref.	Part No.	Description	Per Set
36	57-0928	Bush — layshaft first gear	1
37	57-3862	Layshaft first gear complete	1
37	57-3163*	Layshaft first gear complete	1
38	57-3890	Layshaft third gear	1
38	57-3890	Layshaft third gear	1
38	57-4168*	Layshaft third gear complete	1
39	57-1614	Needle bearing — layshaft, inner cover (Torrington B.1112)	1
40	57-4345	Layshaft with top gear	1
40	57-4162*	Layshaft with top gear	1
41	57-1607	Thrust washer — layshaft	1
42	57-0912	Peg — thrust washer, layshaft (left)	1
43	57-1606	Needle bearing — layshaft (Torrington 11121)	1
44	57-4051	Nut — gearbox final drive sprocket	1
45	57-2116	Lockwasher — gearbox sprocket nut	1
46	57-1918	Sprocket — gearbox final drive (19 teeth)	1
47	57-3861	Layshaft second gear	1
47	57-4166*	Layshaft second gear	1
48	57-3889	Mainshaft third gear	1
48	57-4169*	Mainshaft third gear	1
49	57-3857	Mainshaft second gear	1
49	57-4167*	Mainshaft second gear	1
50	57-2176	Mainshaft top gear complete	1
50	57-4177*	Mainshaft top gear complete	1
51	57-4314	Bush — mainshaft top gear	1
52	57-4175	Mainshaft with first gear	1
52	57-4178*	Mainshaft with first gear	1
53	57-4054	“O” ring — gearbox sprocket nut	1
54	57-3634	Oil seal — gearbox mainshaft	1
55	21-1872	Drain plug — gearbox	1
56	70-8896	“O” ring — drain plug	1
57	57-4308	Selector fork — mainshaft	1
58	57-4307	Selector fork — layshaft	1
59	21-1862	“Taptite” screw — cable clip (6 UN.C. $\times$ 32 t.p.i. $\times$ $\frac{1}{4}$ ")	2
60	70-9327	Cable clip	1
61	71-1447	Gasket — inner cover to crankcase	1

*Close ratio gears.

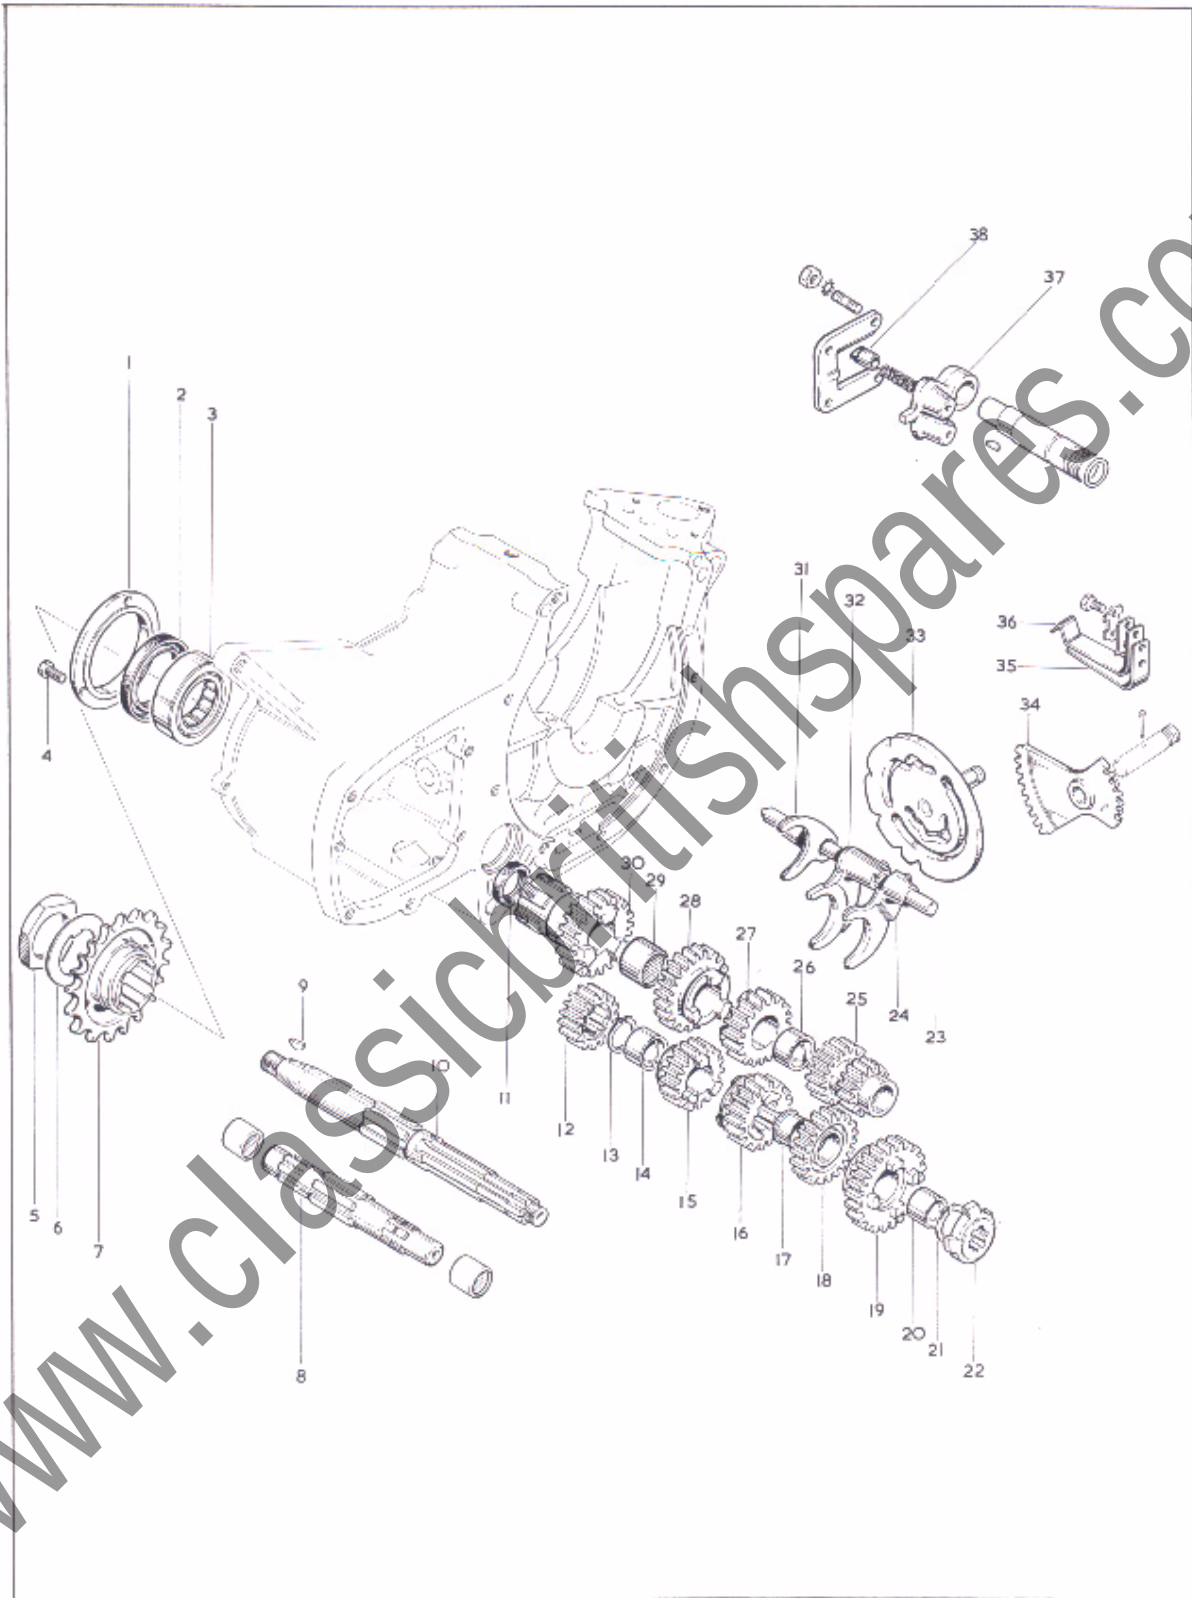


Plate 8

GEARBOX — 5-SPEED
(as standard 4-speed unit except for the following)

Plate Ref.	Part No.	Description	Per Set
1	57-4394	Oil seal housing — gearbox mainshaft	1
2	60-3510	Oil seal — gearbox mainshaft	1
3	60-3531	Bearing — gearbox mainshaft	1
4	21-2106	Screw — oil seal housing to crankcase ($\frac{1}{4}$ " UN.C. $\times \frac{9}{16}$ ")	1
5	57-4396	Nut — gearbox final drive sprocket	1
6	57-4395	Lockwasher — gearbox sprocket nut	1
7	57-4397	Sprocket — gearbox final drive	1
8	57-4382	Layshaft complete with fourth and top gears	1
8	57-4371	Layshaft only	1
9	68-3218	Key — clutch hub to mainshaft	1
10	57-4370	Mainshaft	1
11	60-3500	Oil seal — mainshaft top gear	1
12	57-4383	Pinion — layshaft top gear	1
13	60-3494	Circlip — layshaft fourth gear	1
14	57-4386	Bush — layshaft fourth gear	1
15	57-4384	Pinion — layshaft fourth gear	1
16	57-4387	Pinion — layshaft third gear	1
17	57-4390	Bush — layshaft second gear	1
18	57-4388	Pinion — layshaft second gear	1
19	57-4391	Pinion — layshaft first gear	1
20	57-4393	Bush — layshaft first gear	1
21	60-3494	Circlip — layshaft driving dog	1
22	57-4381	Driving dog — layshaft	1
23	57-3989	Spindle — selector forks	1
24	57-4368	Selector fork — layshaft first gear	1
25	57-4380	Pinion — mainshaft first and second gear	1
26	57-4379	Bush — mainshaft third gear	1
27	57-4377	Pinion — mainshaft third gear	1
28	57-4376	Pinion — mainshaft fourth gear	1
29	60-3511	Needle bearing — mainshaft high gear	2
30	57-4423	Top gear complete — mainshaft	1
31	57-4364	Selector fork — mainshaft	1
32	57-4366	Selector fork — layshaft third gear	1
33	57-4360	Cam plate	1
34	57-4363	Quadrant — gearchange	1
35	57-4401	Support — cam plate spring	1
36	57-4402	Cam plate spring	1
37	57-4374	Quadrant — gearchange plunger	1
38	57-4403	Plunger — gearchange quadrant	1

Plate 9

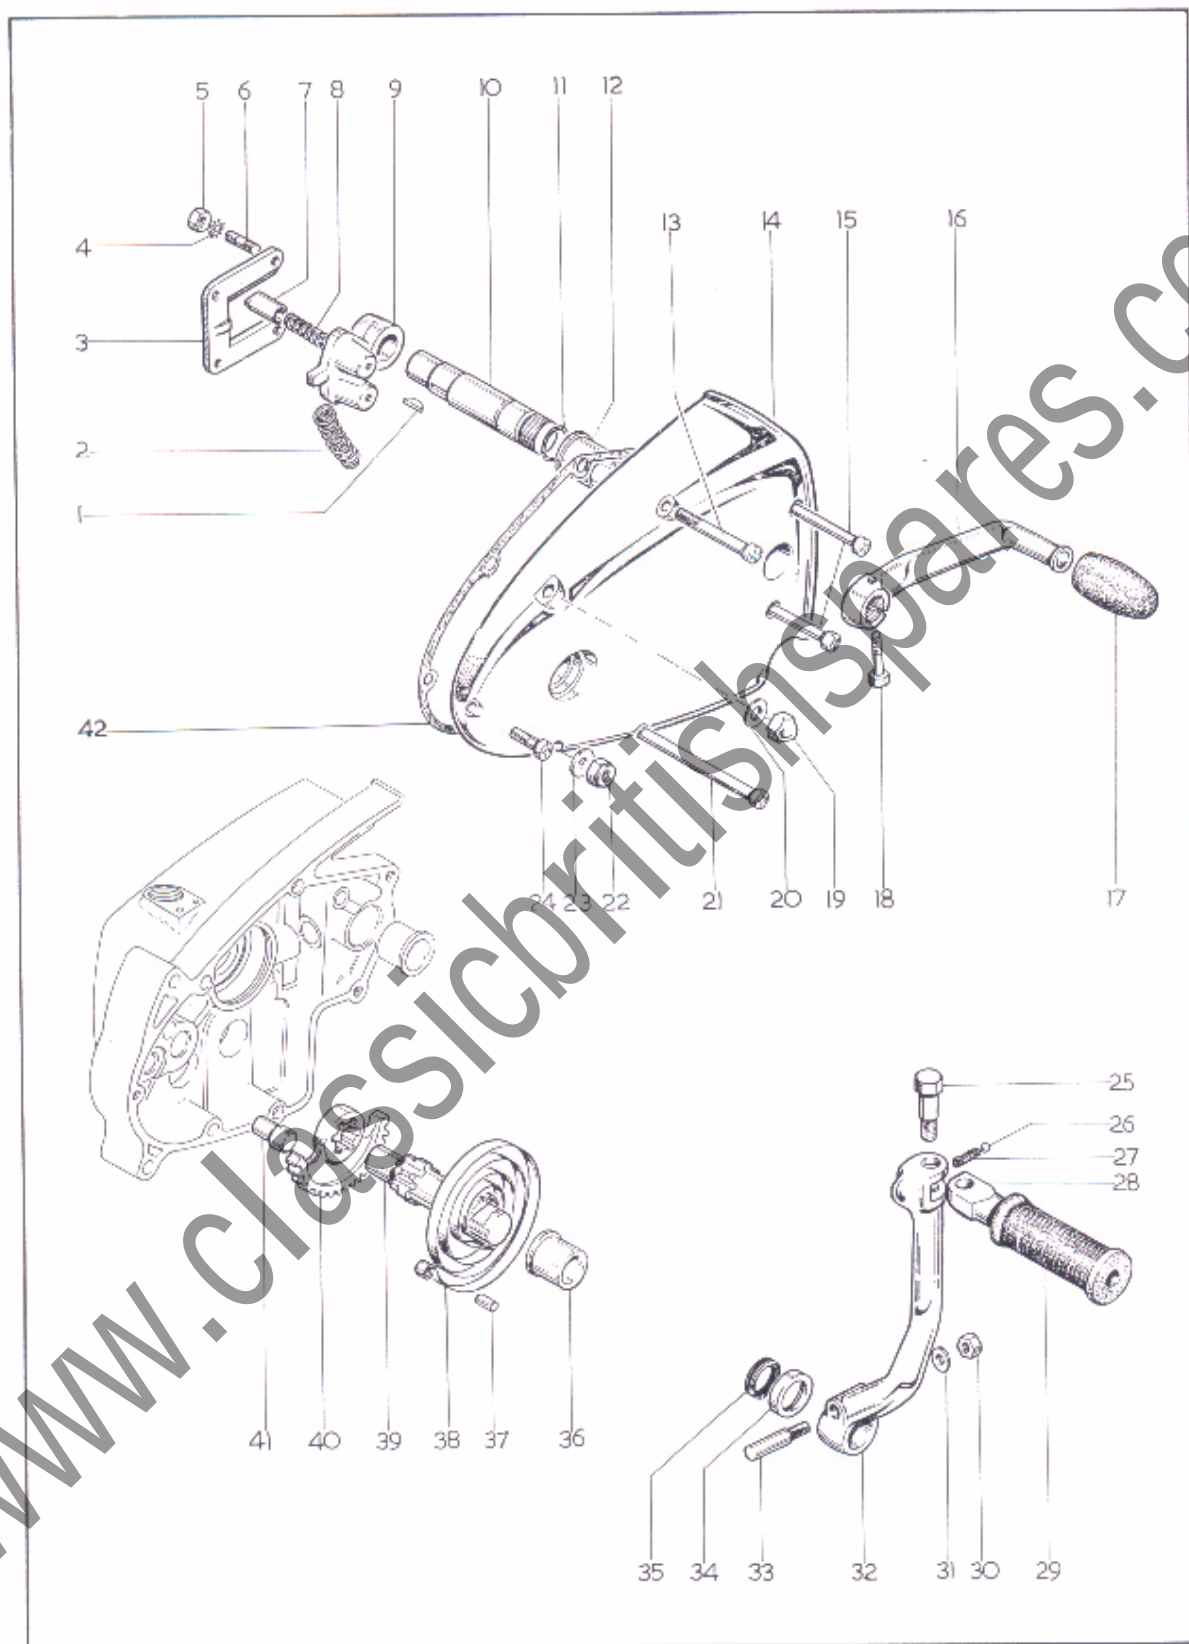


Plate 9

GEARBOX COVER — GEARCHANGE — KICKSTART CRANK

Plate Ref.	Part No.	Description	Per Set
1	71-0037	Key — quadrant to spindle	1
2	57-0404	Spring — footchange pedal return	2
3	57-0407	Plate — gear control guide	1
4	29-0541	Washer — shakeproof, guide plate nut ($\cdot 265" \times \cdot 468" \times \cdot 024"$)	4
5	14-0301	Nut — gear control guide plate stud ($\frac{1}{4}"$ UN.F.)	4
6	21-0547	Stud — gear control guide plate ($\frac{1}{4}"$ UN.C./UN.F. $\times \frac{1}{2}"$)	4
7	57-0406	Plunger — gearchange quadrant	2
8	57-0405	Spring — gearchange quadrant	2
9	57-0409	Quadrant — gearchange plunger	1
10	57-3758	Spindle — gearchange quadrant	1
11	40-0323	"O" ring — gearchange quadrant spindle	1
12	57-3759	Bush — outer cover, gearchange quadrant spindle	1
13	14-6613	Screw — outer to inner cover ($\frac{1}{4}"$ UN.C. $\times 2\frac{1}{4}"$)	1
14	57-2603	Outer cover — gearbox	1
15	14-6615	Screw — outer to inner cover ($\frac{1}{4}"$ UN.C. $\times 3"$)	2
16	57-3757	Pedal — gearchange	1
17	89-3208	Rubber — gearchange pedal	1
18	14-0201	Bolt — gearchange pedal clamping	1
19	21-0544	Nut — domed, outer cover stud, top ($\frac{5}{16}"$ UN.F.)	1
20	54-0055	Washer — outer cover domed nut ($\cdot 344" \times \cdot 625" \times \cdot 063"$)	1
21	21-1860	Screw — outer cover to crankcase ($\frac{1}{4}"$ UN.C. $\times 5\frac{1}{2}"$)	1
22	14-1302	Locknut — outer cover bottom stud ($\frac{1}{16}"$ UN.F.)	1
23	54-0055	Washer — outer cover bottom stud ($\cdot 344" \times \cdot 625" \times \cdot 063"$)	1
24	14-6608	Screw — outer to inner cover ($\frac{1}{4}"$ UN.C. $\times 1"$)	1
25	21-0541	Bolt — kickstart pedal pivot	1
26	60-2364	Steel ball — kickstart folding pedal ($\frac{1}{4}"$ diameter)	1
27	40-3085	Spring — kickstart folding pedal	1
28	57-1272	Folding pedal — kickstart crank	1
29	57-2330	Rubber — kickstart pedal	1
30	75-0053	Nut — kickstart crank cotter	1
31	68-0331	Washer — kickstart crank cotter ($\cdot 280" \times \cdot 500" \times \cdot 064"$)	1
32	57-2173	Kickstart crank	1
32	57-3632	Kickstart crank — complete assembly	1
33	75-3143	Cotter — kickstart crank	1
34	57-1955	Oil seal housing — kickstart crank	1
35	57-1956	Oil seal — kickstart crank	1
36	57-0023	Bush — kickstart shaft	1
37	57-0047	Anchor pin — kickstart return spring	1
38	57-0031	Spring — kickstart return	1
39	57-0024	Shaft — kickstart quadrant	1
40	57-4117	Kickstart quadrant	1
40	57-2297	Kickstart quadrant and spindle — complete assembly	1
41	57-3727	Stop peg — kickstart quadrant	1
42	71-1450	Gasket — inner to outer cover	1

Plate 10


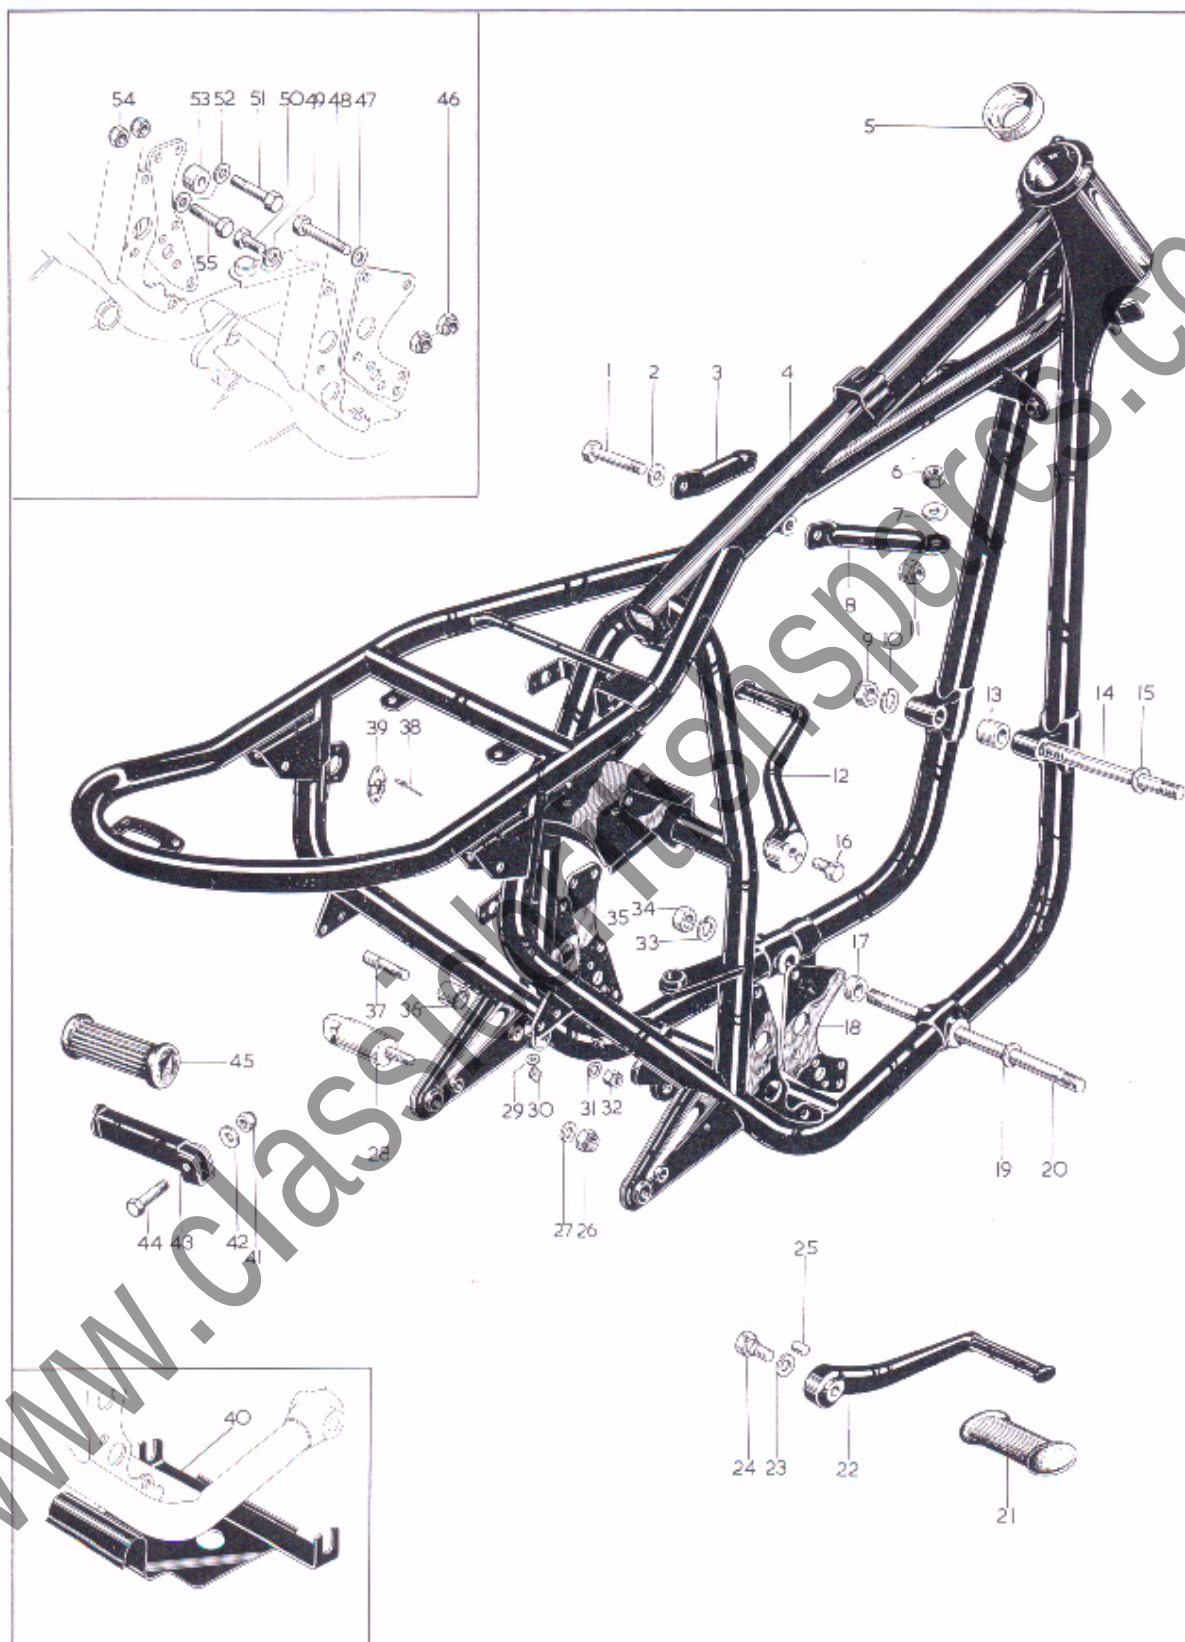


Plate 10

FRAME AND FITTINGS

Plate Ref.	Part No.	Description	Per Set
1	14-0237	Bolt — steady stay to frame ($\frac{3}{8}$ " UN.F. $\times$ 2 $\frac{1}{2}$ ")	1
2	02-2138	Washer — steady stay to frame ($\cdot 380$ " $\times$ $\cdot 750$ " $\times$ $\cdot 064$ ")	1
3	82-9378	Steady stay — left	1
4	83-3262	Frame complete	1
5	97-0111	Cup — steering head	2
6	14-1302	Locknut — steady stay to cylinder head ($\frac{5}{16}$ " UN.F.)	2
7	60-2321	Washer — steady stay to cylinder head ($\cdot 333$ " $\times$ $\cdot 625$ " $\times$ $\cdot 072$ ")	2
8	82-9379	Steady stay — right	1
9	14-0304	Nut — front engine mounting stud ($\frac{7}{16}$ " UN.F.)	2
10	02-1967	Washer — spring, front engine mounting stud ($\cdot 440$ " $\times$ $\cdot 875$ " $\times$ $\cdot 064$ ")	2
11	14-1903	Nut — steady stay to frame ($\frac{3}{8}$ " UN.F.)	1
12	82-9625	Footrest — left	1
13	82-8508	Spacer — front engine mounting stud	1
14	21-0779*	Stud — engine mounting, front ($\frac{7}{16}$ " UN.F. $\times$ 7")	1
15	15-0431	Washer — front engine mounting stud ($\cdot 447$ " $\times$ $\cdot 750$ " $\times$ $\cdot 064$ ")	2
16	14-0145	Bolt — footrest, left ($\frac{1}{2}$ " UN.F. $\times$ 1")	1
17	82-8510	Spacer — bottom engine stud	1
18	82-9642	Engine plate — right	1
19	15-0431	Washer — bottom engine stud ($\cdot 447$ " $\times$ $\cdot 750$ " $\times$ $\cdot 064$ ")	2
20	21-0780*	Stud — bottom engine mounting ($\frac{7}{16}$ " UN.F. $\times$ 11 $\frac{1}{8}$ ")	1
21	82-9686	Rubber — footrest (left)	1
21	40-4850	Rubber — footrest (right)	1
22	82-9624	Footrest — right	1
23	03-0107	Spring washer — footrest bolt ($\cdot 531$ " $\times$ $\cdot 763$ " $\times$ $\cdot 116$ ")	2
24	21-2018	Bolt — right footrest ($\frac{1}{2}$ " UN.F. $\times$ 1 $\frac{1}{4}$ ")	1
25	82-5943	Footrest peg	4
26	14-1303	Locknut — pillion footrest anchor bolt ($\frac{3}{8}$ " UN.F.)	2
27	60-2322	Washer — pillion footrest anchor bolt ($\cdot 395$ " $\times$ $\cdot 750$ " $\times$ $\cdot 072$ ")	2
28	82-9653	Anchor bolt — pillion footrest	2

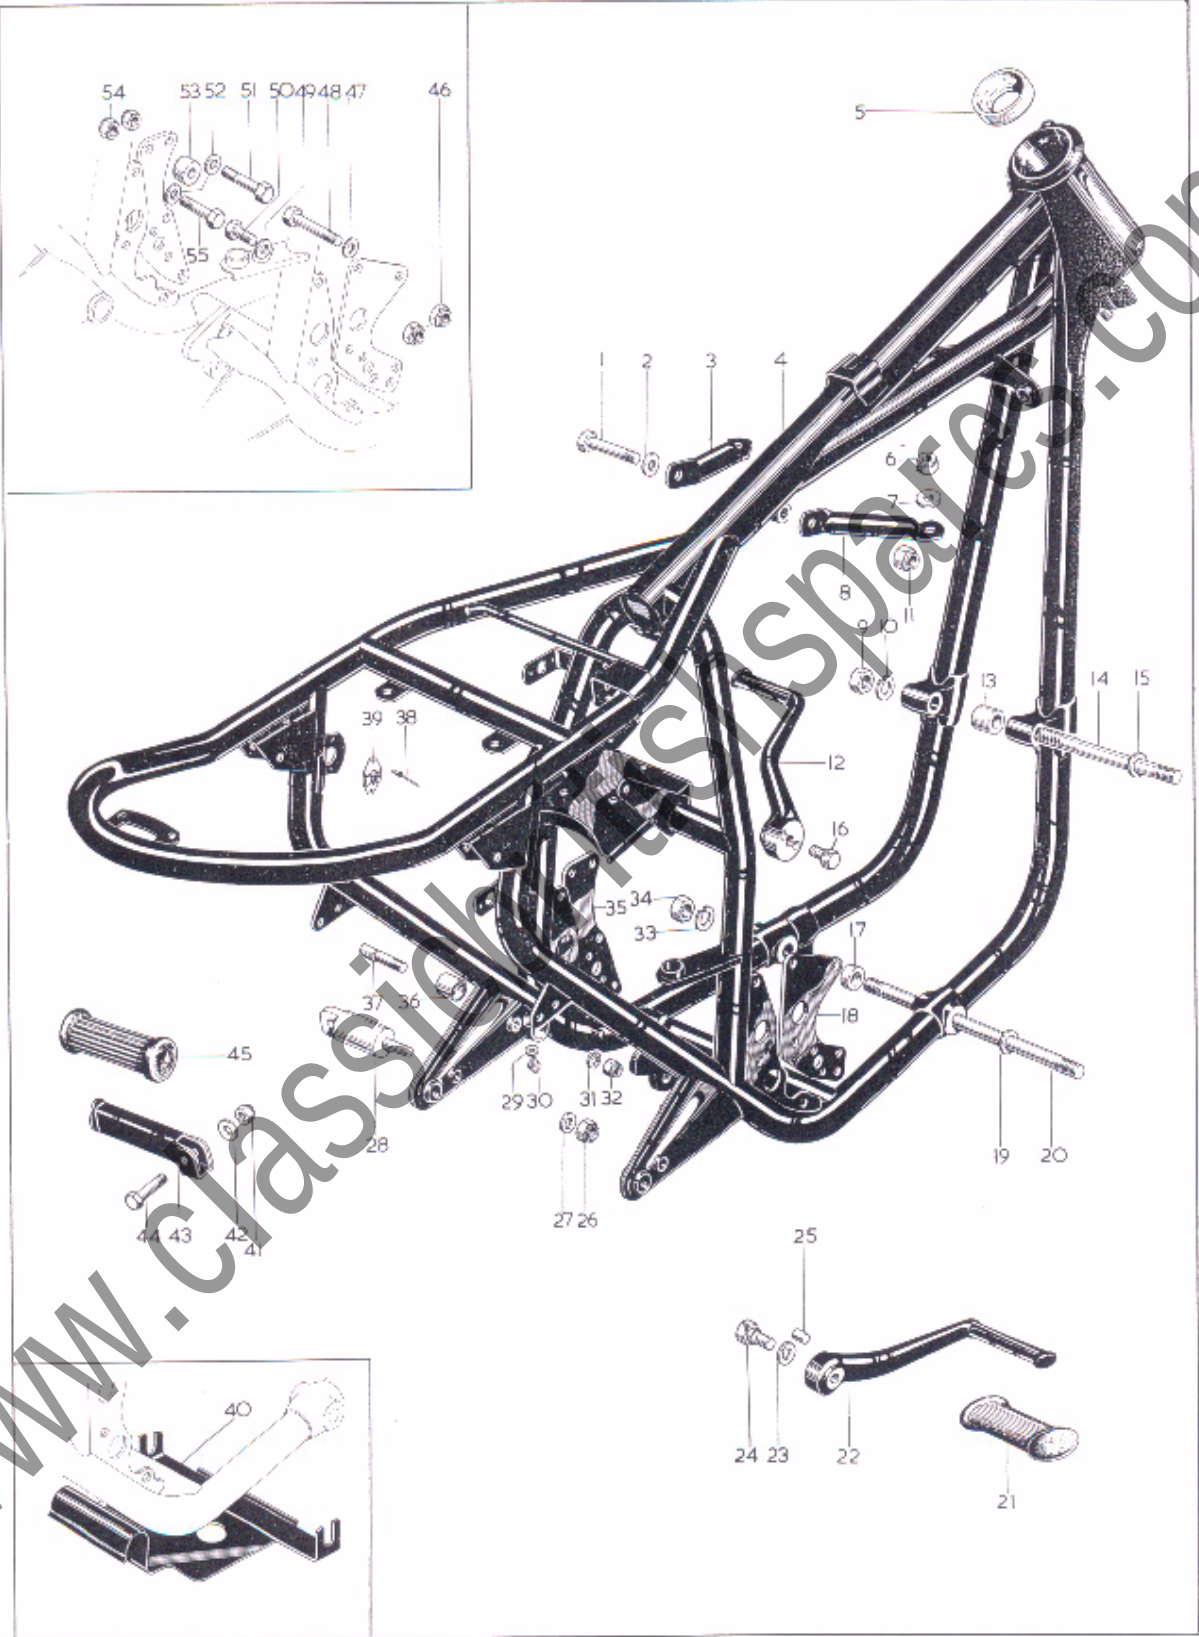

FRAME AND FITTINGS

Plate Ref.	Part No.	Description	Per Set
29	54-4302	Washer — fibre, grease nipple	1
30	47-9012	Grease nipple — brake pedal	1
31	60-2330	Washer — stop peg ($\cdot 333" \times \cdot 625" \times \cdot 040"$)	1
32	14-1302	Locknut — stop peg ($\frac{5}{16}"$ UN.F.)	1
33	02-1967	Washer — spring, bottom engine stud ($\cdot 440" \times \cdot 875" \times \cdot 064"$)	2
34	14-0304	Nut — bottom engine mounting stud ($\frac{7}{16}"$ UN.F.)	2
35	82-9641	Engine plate — left	1
36	82-8918	Bush — brake pedal	1
37	82-8513	Stop peg — brake pedal	1
38	68-9337	Rivet — "Oddie" clip	6
39	68-9115	"Oddie" clip	3
40	82-9684	Engine shield	1
41	14-1302	Locknut — pillion footrest swivel bolt ($\frac{5}{16}"$ UN.F.)	2
42	60-2330	Washer — swivel bolt ($\cdot 333" \times \cdot 625" \times \cdot 040"$)	2
43	68-4835	Pillion footrest complete	2
44	14-0217	Swivel bolt — pillion footrest ($\frac{5}{16}"$ UN.F. $\times 1\frac{1}{4}"$)	2
45	29-7583	Rubber — pillion footrest	2
46	14-1302	Locknut — rear engine plate bolt ($\frac{5}{16}"$ UN.F.)	5
47	02-0923	Washer — rear engine plate bolt ($\cdot 317" \times \cdot 625" \times \cdot 064"$)	5
48	14-0221	Bolt — engine to right engine plate ($\frac{5}{16}"$ UN.F. $\times 2"$)	2
49	02-0923	Washer — rear engine plate bolt ($\cdot 317" \times \cdot 625" \times \cdot 064"$)	5
50	14-0115	Bolt — right engine plate to frame ($\frac{5}{16}"$ UN.F. $\times \frac{7}{8}"$)	3
51	14-0220	Bolt — engine to left engine plate ($\frac{5}{16}"$ UN.F. $\times 1\frac{3}{4}"$)	2
52	02-0923	Washer — rear engine plate bolts ($\cdot 317" \times \cdot 625" \times \cdot 064"$)	10
53	82-8509	Spacer — rear engine plate (left)	3
54	14-1302	Locknut — rear engine plate bolt ($\frac{5}{16}"$ UN.F.)	5
55	14-0218	Bolt — left engine plate to frame ($\frac{5}{16}"$ UN.F. $\times 1\frac{3}{8}"$)	3

*Special materials: 14—EN16T, 20—EN16T.

Plate 11

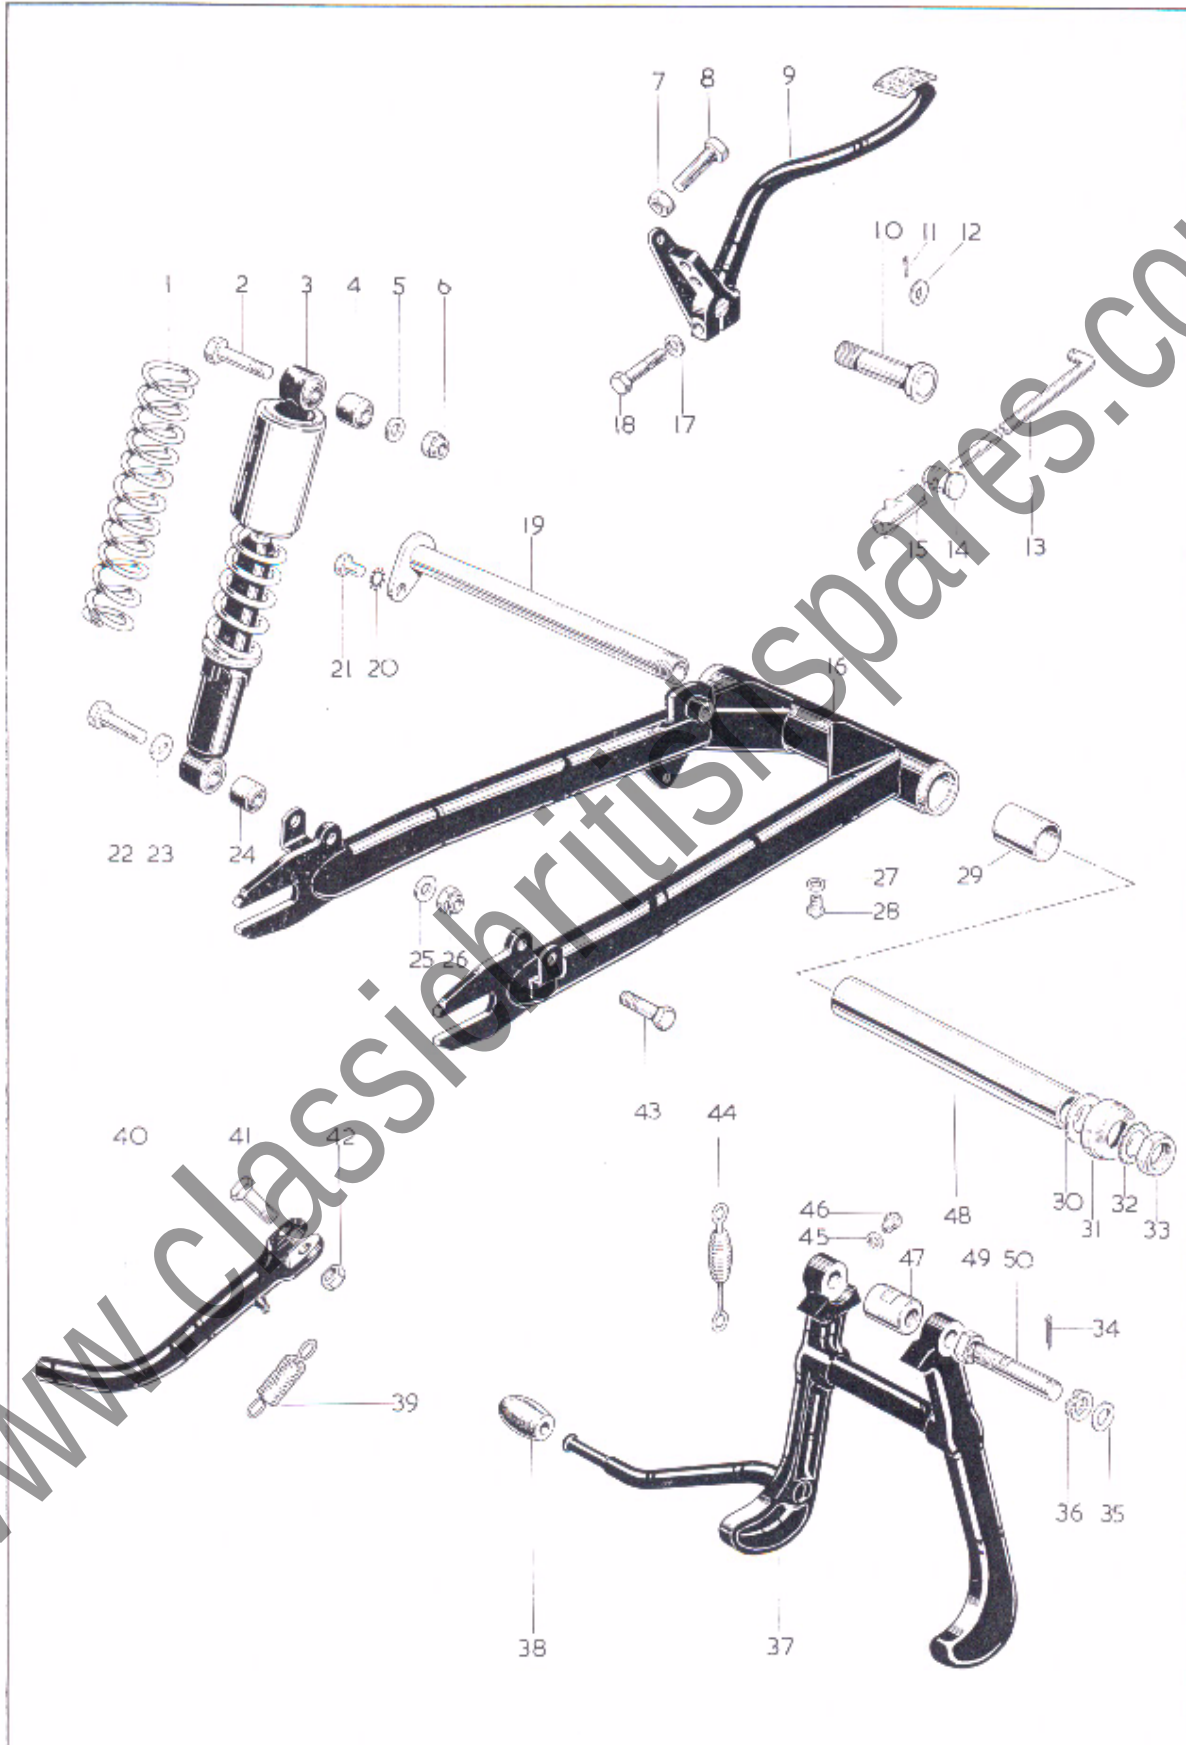


Plate 11

SWINGING ARM — CENTRE STAND — REAR BRAKE CONTROL

Plate Ref.	Part No.	Description	Per Set
1	19-7447	Damper spring (Girling 64544120)	2
2	14-0235	Bolt — damper mounting, top ($\frac{3}{8}$ " UN.F. $\times$ 2")	2
3	19-7472	Damper unit complete (Girling 64052105)	2
4	19-5305	Bush — rear damper, top (Girling 64533645)	2
5	70-8770	Washer — damper mounting, top ($\cdot 391$ " $\times$ $\cdot 625$ " $\times$ $\cdot 064$ ")	2
6	14-1303	Locknut — damper mounting, top ($\frac{3}{8}$ " UN.F.)	2
7	14-0401	Locknut — brake pedal stop screw ($\frac{1}{4}$ " UN.F.)	1
7	14-0401	Locknut — stop switch adjuster screw ($\frac{1}{4}$ " UN.F.)	1
8	14-0106	Screw — brake pedal stop ($\frac{1}{4}$ " UN.F. $\times$ $1\frac{1}{4}$ ")	1
8	14-0106	Screw — stop switch adjuster ($\frac{1}{4}$ " UN.F. $\times$ $1\frac{1}{4}$ ")	1
9	83-3239	Pedal — rear brake	1
10	83-3241	Shaft — brake pedal operating	1
11	60-2683	Split pin — brake rod ($\frac{1}{16}$ " $\times$ $\frac{3}{8}$ ")	1
12	40-2705	Plain washer — brake rod ($\cdot 265$ " $\times$ $\cdot 468$ " $\times$ $\cdot 064$ ")	1
13	83-3242	Brake rod	1
14	37-1467	Pivot pin — brake rod	1
15	82-7387	Adjuster nut — brake rod	1
16	83-3243	Swinging arm complete with bushes	1
17	15-5155	Washer — brake pedal pinch bolt ($\cdot 328$ " $\times$ $\cdot 505$ " $\times$ $\cdot 048$ ")	1
18	14-0217	Bolt — brake pedal pinch bolt ($\frac{5}{16}$ " UN.F. $\times$ $1\frac{1}{4}$ ")	1
19	82-8468	Spindle — swinging arm	1
20	36-0382	Washer — spring, spindle locking plate ($\frac{1}{16}$ "	1
21	14-0113	Bolt — spindle locking plate ($\frac{5}{16}$ " UN.F. $\times$ $\frac{3}{4}$ ")	1
22	21-2099	Bolt — damper bottom mounting, left ($\frac{3}{8}$ " UN.F. $\times$ $1\frac{7}{8}$ ")	1
23	54-4307	Washer — damper mounting, bottom ($\cdot 406$ " $\times$ $\cdot 750$ " $\times$ $\cdot 063$ ")	2
24	19-5305	Bush — rear damper, bottom (Girling 64533645)	2
25	02-2138	Washer — damper mounting, bottom ($\cdot 380$ " $\times$ $\cdot 750$ " $\times$ $\cdot 064$ ")	2
26	14-1303	Locknut — damper mounting, bottom ($\frac{3}{8}$ " UN.F.)	2
27	54-4302	Washer — fibre, grease nipple	1
28	47-9012	Grease nipple — swinging arm	1
29	82-8475	Bush — swinging arm	2
30	82-8478	Thrust bearing — swinging arm	2
31	82-8477	Dust cap — swinging arm bearing	2
32	42-4364	Shakeproof washer ($\cdot 825$ " $\times$ $1\cdot 250$ " $\times$ $\cdot 050$ ")	1
33	21-0755	Nut — swinging arm spindle ($\frac{13}{16}$ " UN.F.)	1
34	60-2683	Split pin — centre stand spindle ($\frac{1}{16}$ " $\times$ $\frac{3}{8}$ ")	2
35	75-0039	Plain washer — centre stand spindle	2
36	03-1346	Spring washer — centre stand spindle ($\cdot 531$ " $\times$ $\cdot 875$ " $\times$ $\cdot 040$ " double)	2
37	83-1628	Centre stand	1
38	57-2331	Rubber — centre stand pedal	1
39	82-8382	Spring — prop stand return	1
40	82-8660	Prop stand	1
41	21-0769	Bolt — prop stand ($\frac{7}{16}$ " UN.F. $\times$ $1\frac{5}{16}$ ")	1
42	14-0404	Locknut — prop stand bolt ($\frac{7}{16}$ " UN.F.)	1
43	21-2099	Bolt — damper bottom mounting, right ($\frac{3}{8}$ " UN.F. $\times$ $1\frac{7}{8}$ ")	1
44	68-4708	Spring — centre stand return	1
45	54-4302	Washer — fibre, centre stand grease nipple	2
46	47-9012	Grease nipple — centre stand	2
47	82-8582	Coupling — centre stand pivot	1
48	82-8476	Spacer tube — swinging arm	1
49	14-0405	Nut — centre stand pivot ($\frac{1}{2}$ " UN.F.)	2
50	83-1535	Pivot bar — centre stand	2

Plate 12


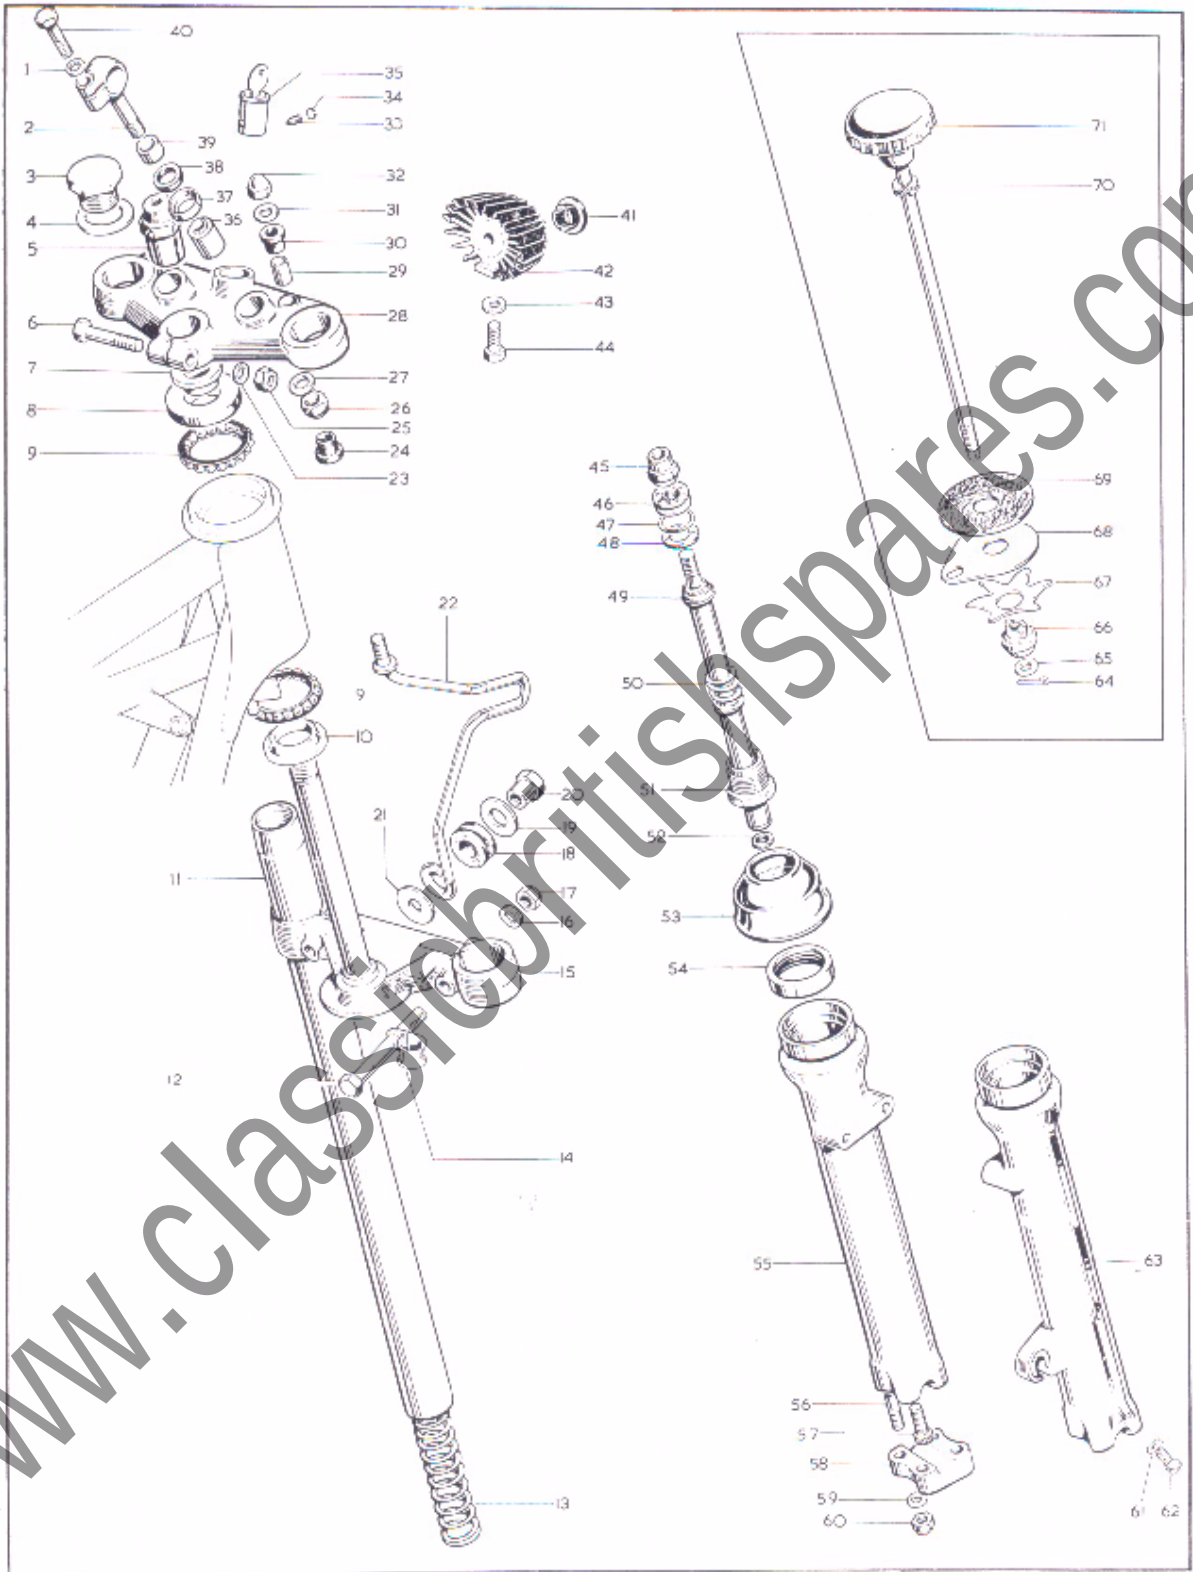


Plate 12

FRONT FORK

Plate Ref.	Part No.	Description	Per Set
	97-4245	Front fork complete	1
1	82-1335	Washer — handlebar clamp bolt ($\cdot 328'' \times \cdot 531'' \times \cdot 125''$)	2
2	97-2291	Clamp — handlebar mounting	2
3	97-4258	Nut — stanchion (top)	2
4	97-4166	Washer — stanchion top nut	2
5	97-4159	Nut — steering stem	1
6	14-0234	Pinch bolt — top yoke	1
7	97-4145	Collar — steering stem	1
8	97-4157	Top cone and dust cover	1
9	97-4034	Ballrace — steering head	2
10	97-0439	Cone — steering race (bottom)	1
11	97-4007	Stanchion	2
12	14-0238	Pinch bolt — bottom yoke ($\frac{3}{8}''$ UN.F. $\times 2\frac{3}{4}''$)	2
13	97-4215	Fork spring — main	2
14	82-3098	Clip — front brake cable guide	1
15	97-4138	Bottom yoke	1
16	54-4307	Washer — bottom yoke pinch bolt ($\cdot 406'' \times \cdot 750'' \times \cdot 063''$)	2
17	14-1303	Locknut — bottom yoke pinch bolt ($\frac{3}{8}''$ UN.F.)	2
18	60-2630	Grommet — headlamp bracket mounting, lower	2
19	60-2333	Washer — headlamp bracket mounting, lower ($\cdot 515'' \times \cdot 995'' \times \cdot 056''$)	2
20	21-2062	Sleeve nut — headlamp bracket mounting, lower	2
21	82-9046	Washer — headlamp bracket mounting, lower	2
22	97-4163	Bracket — headlamp mounting (right)	1
22	97-4162	Bracket — headlamp mounting (left)	1
23	54-4307	Washer — top yoke pinch bolt ($\cdot 406'' \times \cdot 750'' \times \cdot 063''$)	1
24	83-2209	Bush — rubber, headlamp bracket mounting (top)	2
25	14-1303	Locknut — top yoke pinch bolt ($\frac{3}{8}''$ UN.F.)	1
26	14-1303	Locknut — handlebar clamp ($\frac{3}{8}''$ UN.F.)	2
27	97-1529	Washer — handlebar clamp nut	2
28	97-4048	Top yoke complete with lock and keys	1
29	83-2211	Distance piece — headlamp bracket	2
30	83-2209	Bush — rubber, headlamp bracket mounting (top)	2
31	60-2338	Washer — headlamp bracket top fixing nut ($\cdot 270'' \times \cdot 625'' \times \cdot 056''$)	2
32	21-1809	Nut — headlamp bracket top fixing ($\frac{1}{4}''$ UN.F.)	2
33	21-0578	Grub-screw — steering lock locating	1
34	97-2266	Sealing washer — steering lock grub-screw	1
35	68-5050	Steering lock complete with keys	1

Plate 12—continued

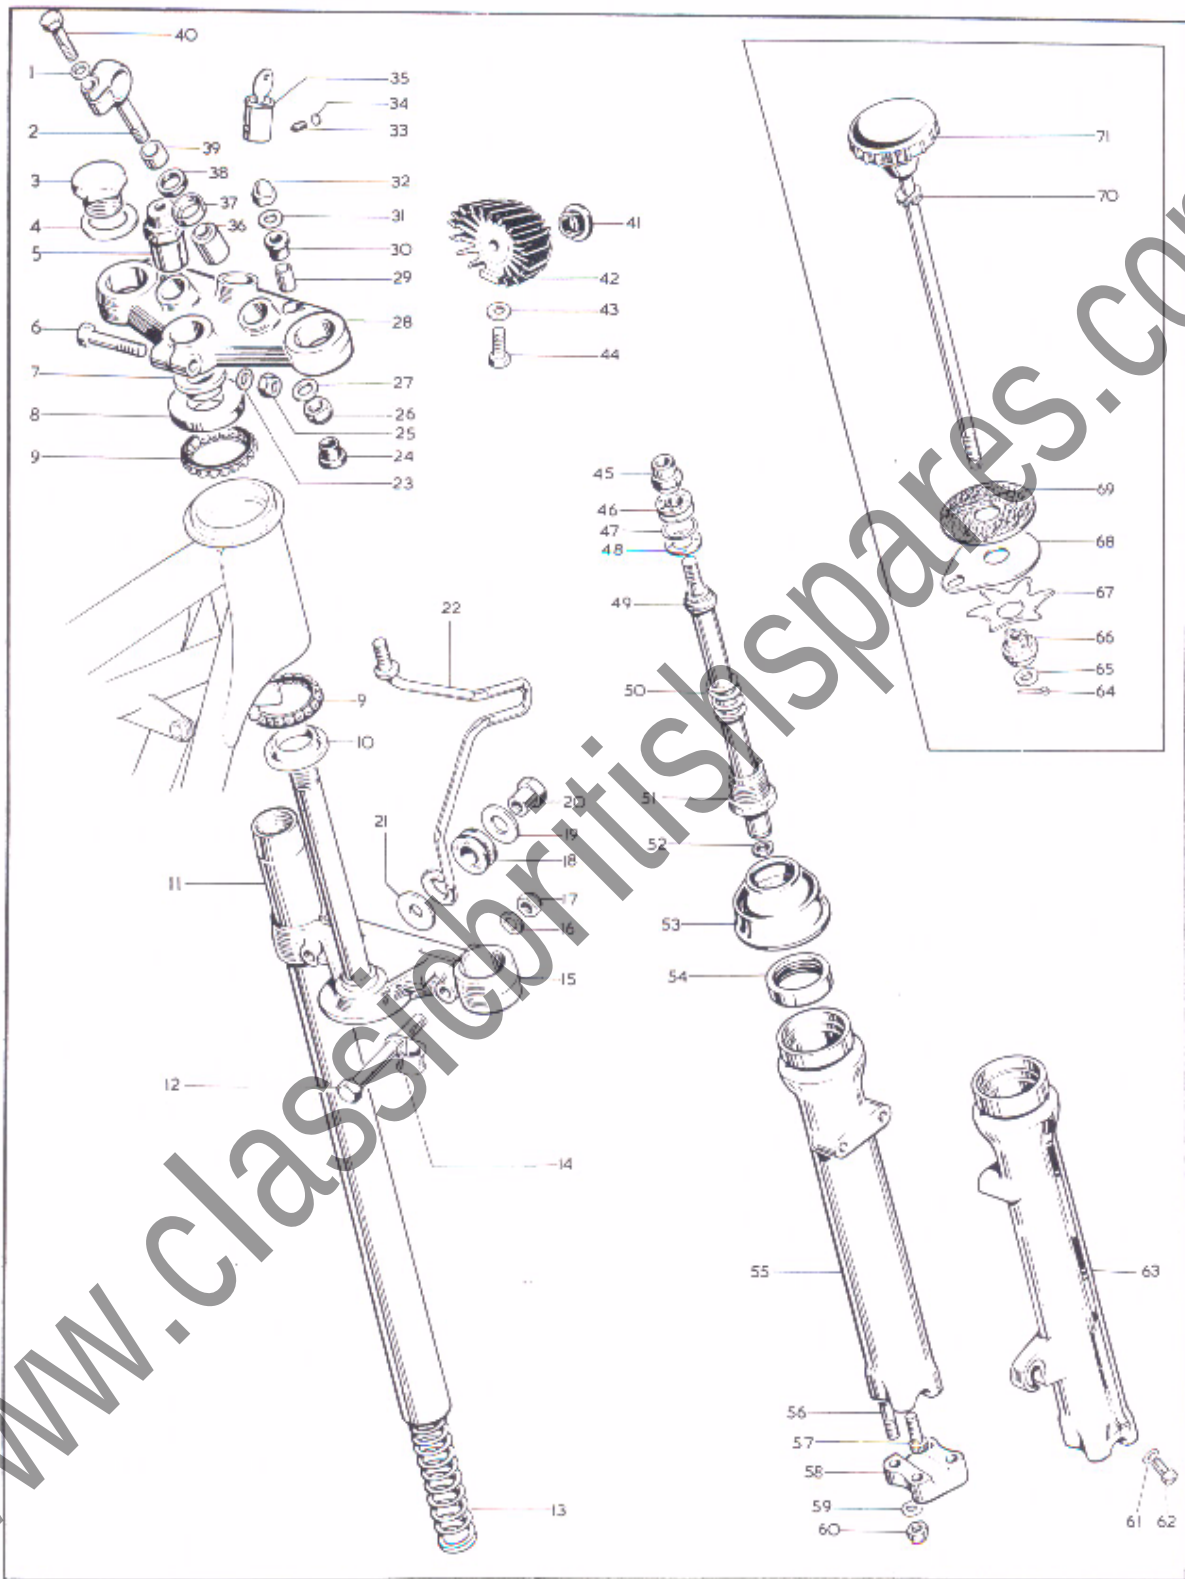


FRONT FORK

Plate Ref.	Part No.	Description	Per Set
36	97-1527	Bush — rubber, handlebar clamp mounting	2
37	97-2221	Cup — handlebar clamp mounting	2
38	97-1580	Washer — rubber, handlebar clamp mounting	2
39	97-1581	Distance piece — handlebar clamp mounting	2
40	21-0589	Bolt — handlebar clamp ($\frac{5}{16}$ " UN.F. $\times$ $1\frac{1}{4}$ ")	2
41	97-2275	Plug — heat sink	1
42	97-2237	Heat sink — zener diode	1
43	54-0022	Washer — heat sink fixing bolt	1
44	14-6107	Bolt — heat sink fixing ($\frac{1}{4}$ " UN.C. $\times$ $\frac{5}{8}$ ")	1
	29-0541*	Washer — shakeproof, heat sink fixing	1
45	97-4244	Nut — damper valve	2
46	97-4020	Valve — damper	2
47	97-4003	"O" ring — damper valve	2
48	97-4010	Washer — damper valve	2
49	97-4242	Damper tube assembly	2
50	97-4009	Spring — recoil	2
51	97-4076	Plug — stanchion end	2
52	97-4004	Dowty seal — damper tube retaining screw	2
53	97-4002	Scraper sleeve	2
54	97-4001	Oil seal — outer member	2
55	97-4033	Outer member — left	1
56	21-2102	Stud — fork end ($\frac{5}{16}$ " UN.F./UN.C. $\times$ $1\frac{7}{8}$ ")	2
57	14-1019	Screw — damper valve retaining ($\frac{3}{16}$ " UN.F. $\times$ $\frac{7}{8}$ ")	2
58	97-3947	Cap — fork end	2
59	60-2428	Washer — spring, fork end stud ($\cdot 344$ " $\times$ $\cdot 600$ " $\times$ $\cdot 064$ ")	8
60	14-0302	Nut — fork end stud ($\frac{5}{16}$ " UN.F.)	8
61	97-3893	Washer — fibre, drain plug	2
62	97-3894	Drain plug — outer member	2
63	97-4085	Outer member — right	1
64	60-2728	Split pin — steering damper rod ($\frac{3}{32}$ " $\times$ $\frac{1}{2}$ ")	1
65	60-2329	Washer — steering damper rod ($\cdot 265$ " $\times$ $\cdot 557$ " $\times$ $\cdot 036$ ")	1
66	97-4102	Nut — steering damper	1
67	97-0095	Spring plate — steering damper	1
68	97-1797	Anchor plate — steering damper	1
69	97-0435	Friction disc — steering damper	1
70	60-2438	Washer — spring, steering damper rod ($\cdot 344$ " $\times$ $\cdot 576$ " $\times$ $\cdot 048$ ")	1
71	97-3875	Steering damper rod complete	1

*Not illustrated

Plate 13

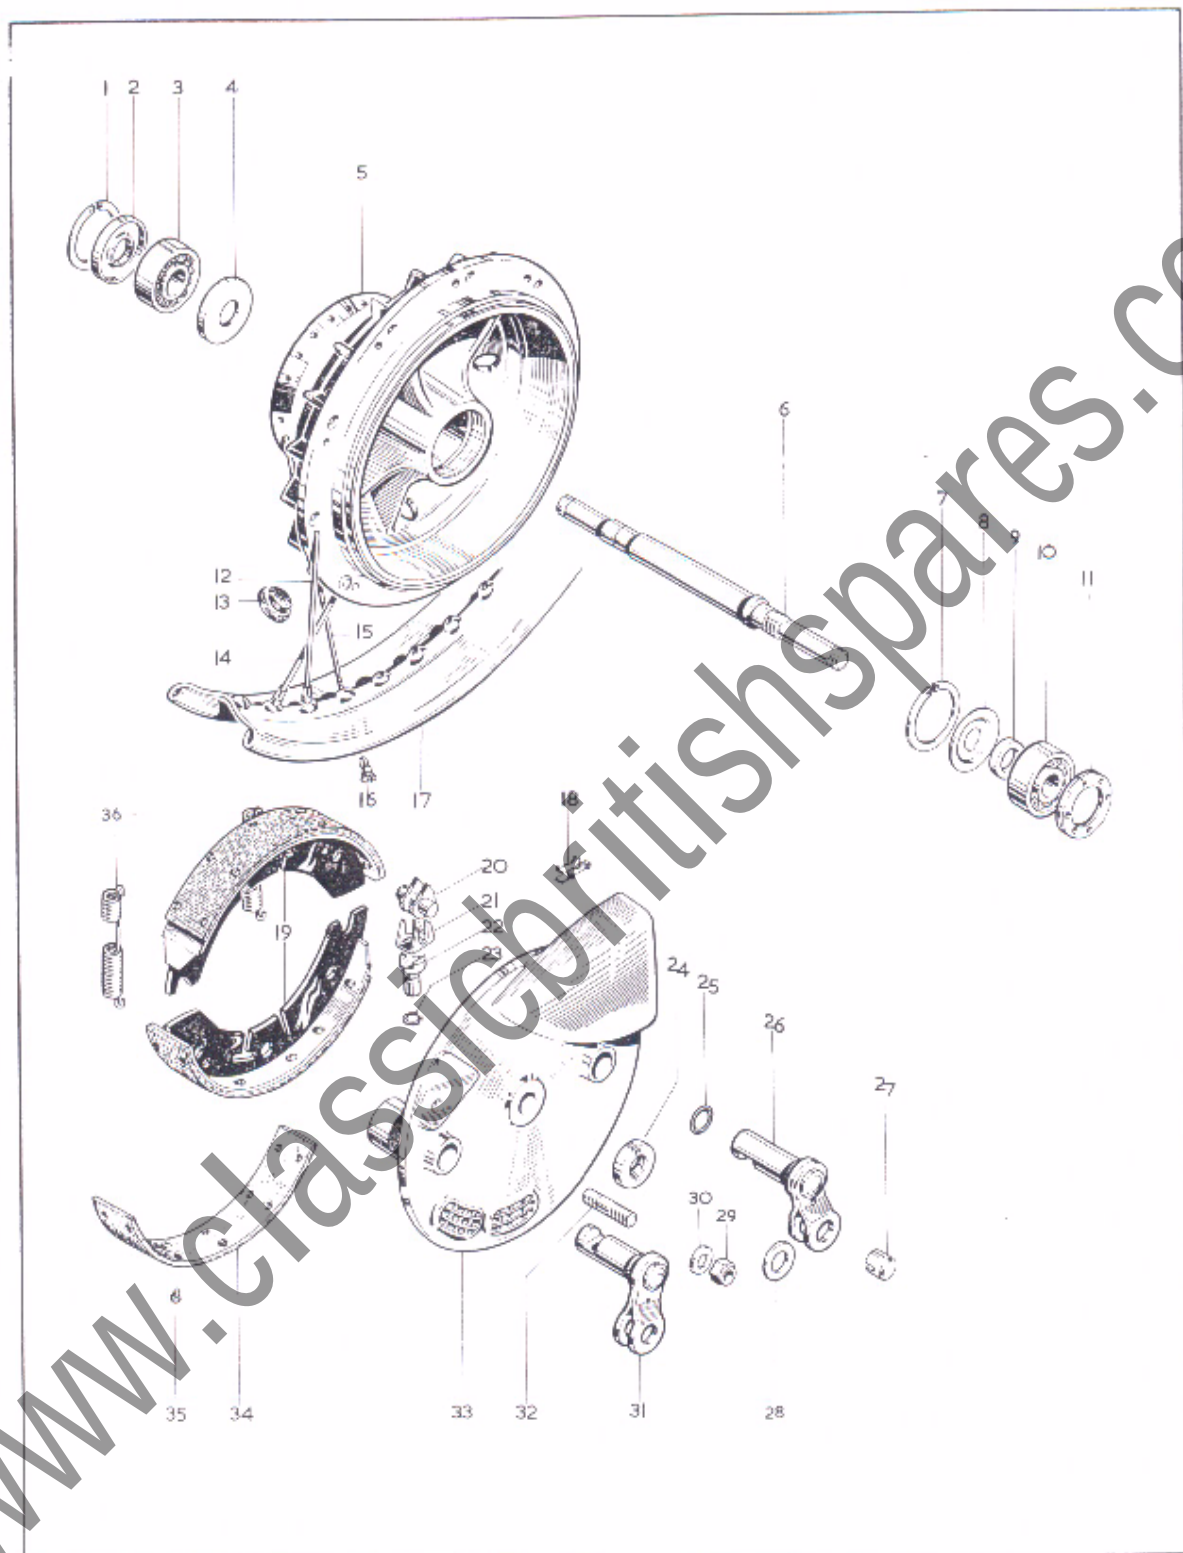

FRONT WHEEL

Plate Ref.	Part No.	Description	Per Set
1	57-0280	Circlip — grease retainer (left)	1
2	37-1237	Grease retainer — outer (left)	1
3	37-0653	Bearing (Hoffmann 120)	1
4	37-1481	Grease retainer — inner (left)	1
5	37-3848	Hub complete with spindle and bearings	1
6	37-3796	Spindle	1
7	60-2632	Circlip — grease retainer (right)	1
8	37-3797	Grease retainer — right	1
9	37-3932	Distance piece — inner side of right bearing	1
10	37-0653	Bearing (Hoffmann 120)	1
11	37-3759	Locking ring	1
12	37-3819	Spoke — right (outer)	10
13	60-3669	Grommet — brake drum	1
14	37-3820	Spoke — right (inner)	10
15	37-3821	Spoke — left	20
16	27-6810	Spoke nipple	40
17	37-3818	Wheel rim (WM2×19)	1
18	19-7743	Abutment — Micram adjuster (Lockheed 25241)	1
19	19-7744	Brake shoe complete (Lockheed 4523-166)	2
20	19-7742	Micram adjuster (Lockheed 3185-514)	2
21	19-7741	Cage — brake adjuster (Lockheed 25283)	2
22	37-3762	Tappet — brake cam	2
23	37-3761	“O” ring — brake tappet	2
24	37-2058	Locking nut — wheel spindle	1
25	60-2639	“O” ring — brake cam	2
26	37-3987	Brake lever — front	2
27	37-3868	Bush — front brake cable nipple	1
27	37-3867	Bush — front brake cable abutment	1
28	67-0645	Washer — cable bush and abutment	2
29	14-1803	Locknut — anchor plate stud ($\frac{3}{8}$ " UN.F.)	1
30	37-2338	Washer — anchor plate stud	1
31	37-3986	Brake lever — rear	1
32	14-1635	Stud — anchor plate to fork ($\frac{3}{8}$ " UN.C./UN.F. × $1\frac{3}{4}$ ")	1
33	37-3655	Brake anchor plate	1
34	19-7466	Lining — brake shoe	2
35	19-7467	Rivet — brake shoe	20
36	19-7745	Spring — brake shoe	2

Plate 14


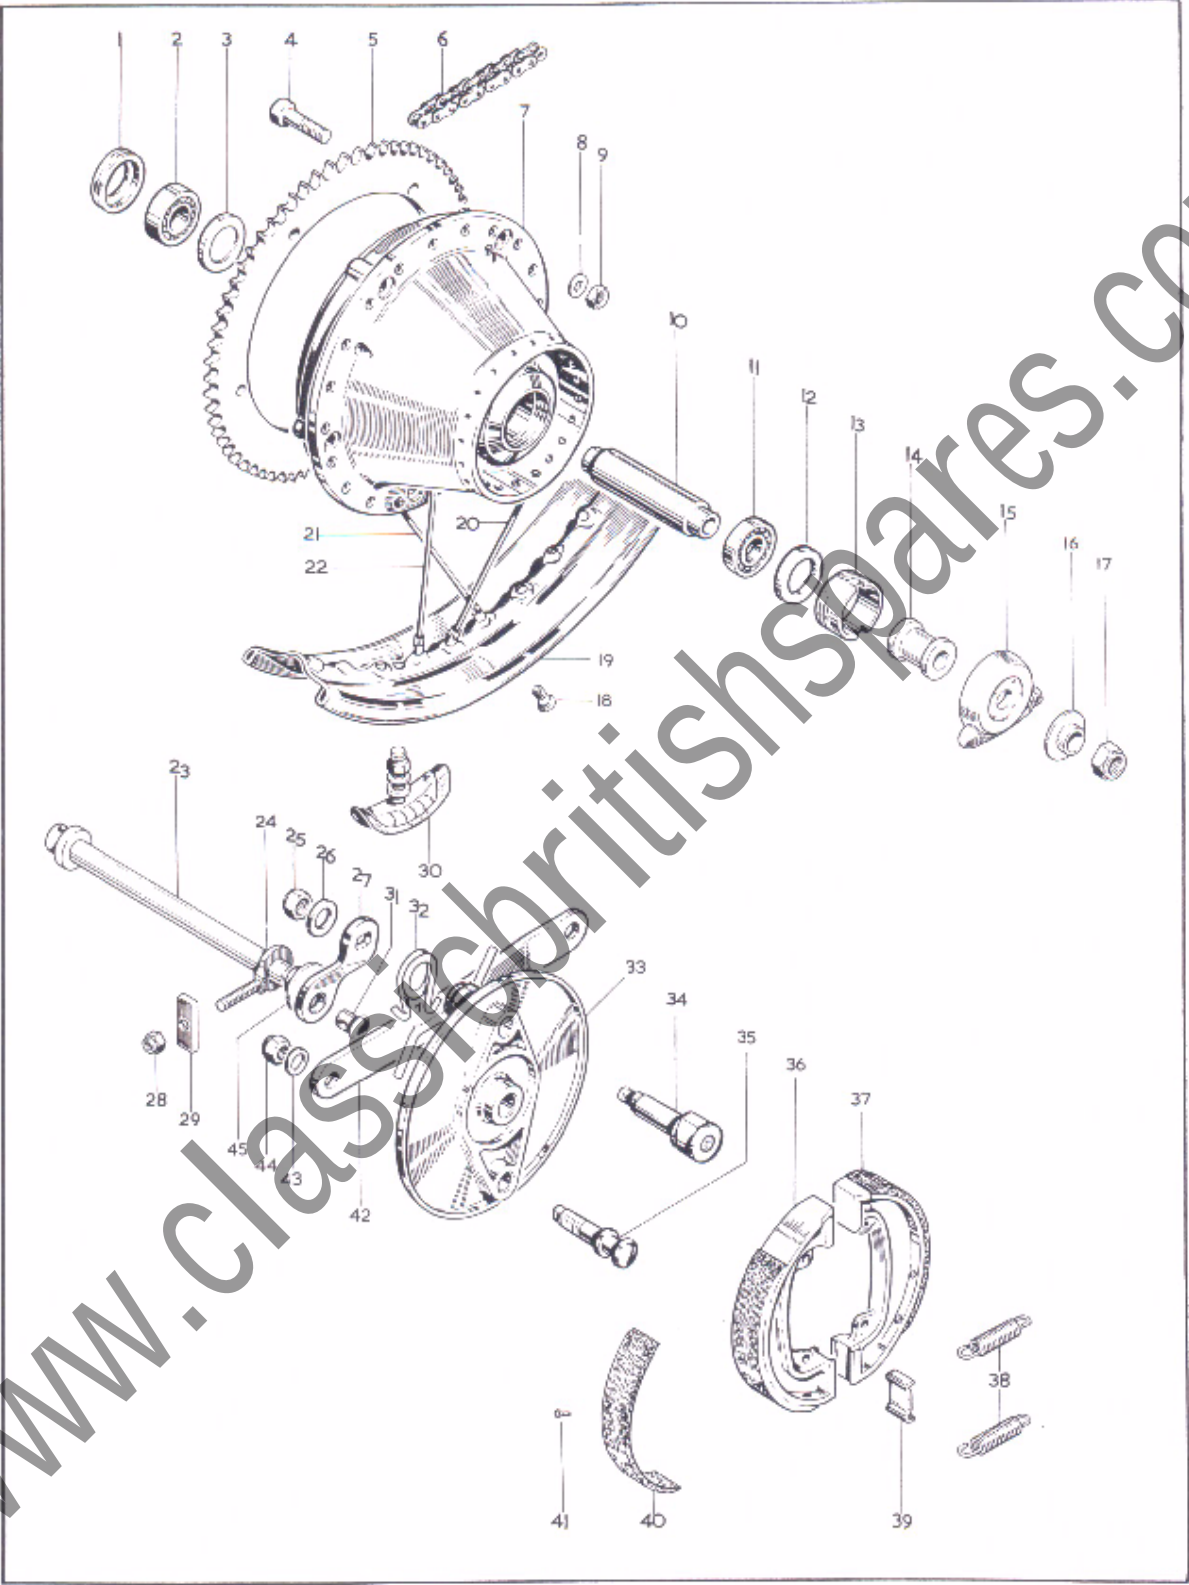


Plate 14

REAR WHEEL

Plate Ref.	Part No.	Description	Per Set
1	37-3752	Locking ring — left	1
2	37-0653	Bearing — left (Hoffmann 120)	1
3	37-3749	Support ring — left	1
4	14-0207	Bolt — sprocket to hub ($\frac{1}{4}$ " UN.F. $\times$ 2")	5
5	37-3903	Sprocket — rear wheel (53 teeth)	1
6	60-2016	Chain — rear ($\frac{5}{8}$ " $\times$ $\frac{3}{4}$ " $\times$ 108 pitches)	1
7	37-3900	Hub with spindle and bearings	1
8	60-2320	Washer — sprocket to hub ($\cdot 270$ " $\times$ $\cdot 562$ " $\times$ $\cdot 056$ ")	5
9	14-1301	Locknut — sprocket to hub ($\frac{1}{4}$ " UN.F.)	5
10	37-3753	Distance tube — bearings	1
11	37-0553	Bearing — right (Hoffmann 120)	1
12	37-1654	Grease retainer — right	1
13	37-3751	Ring — speedometer driving	1
14	37-3750	Distance piece — speedometer drive (inner)	1
15	19-9225	Speedometer drive gearbox (1:25 : 1)	1
16	37-3976	Distance piece — wheel spindle (right)	1
17	14-1307	Locknut — wheel spindle ($\frac{5}{8}$ " UN.F.)	1
18	37-2294	Spoke nipple	40
19	37-3920	Rim (WM3 $\times$ 19)	1
20	37-3923	Spoke — right	20
21	37-3922	Spoke — left (outer)	10
22	37-3921	Spoke — left (inner)	10
23	37-3980	Wheel — spindle	1
24	37-3919	Chain adjuster	2
25	14-1303	Locknut — brake lever ($\frac{3}{8}$ " UN.F.)	1
26	60-2331	Washer — brake lever ($\cdot 395$ " $\times$ $\cdot 750$ " $\times$ $\cdot 048$ ")	1
27	37-3916	Brake lever	1
28	14-1902	Locknut — chain adjuster ($\frac{5}{16}$ " UN.F.)	2
29	40-6040	End plate — chain adjuster (left)	1
29	37-3961	End plate — chain adjuster (right)	1
30	37-3468	Security bolt	2
31	37-1467	Pivot pin — brake lever	1
32	37-3880	Spring — brake lever return	1
33	37-3956	Anchor plate	1
	60-1841*	Grease nipple — anchor plate	1
	54-4302*	Washer — fibre, anchor plate grease nipple	1
34	37-3872	Cam — brake shoe	1
35	37-3870	Pivot — brake shoe	1
36	37-3925	Brake shoe — leading	1
37	37-3926	Brake shoe — trailing	1
38	37-2328	Spring — brake shoe	2
39	41-6078	Pivot pad — brake shoe	2
40	37-3876	Brake lining	2
41	42-5840	Rivet — lining to shoe	16
42	83-3266	Torque stay	1
	14-0133*	Bolt — torque stay to swinging arm ($\frac{7}{16}$ " UN.F. $\times$ 1")	1
	15-0431*	Washer — torque stay to swinging arm ($\cdot 447$ " $\times$ $\cdot 750$ " $\times$ $\cdot 064$ ")	1
	14-1304*	Nut — torque stay to swinging arm ($\frac{7}{16}$ " UN.F.)	1
43	60-2431	Washer — spring, torque stay to brake pivot ($\cdot 531$ " $\times$ $\cdot 851$ " $\times$ $\cdot 092$ ")	1
44	14-0305	Nut — torque stay to brake pivot ($\frac{1}{2}$ " UN.F.)	1
45	37-3901	Distance piece — wheel spindle (left)	1

*Not illustrated.

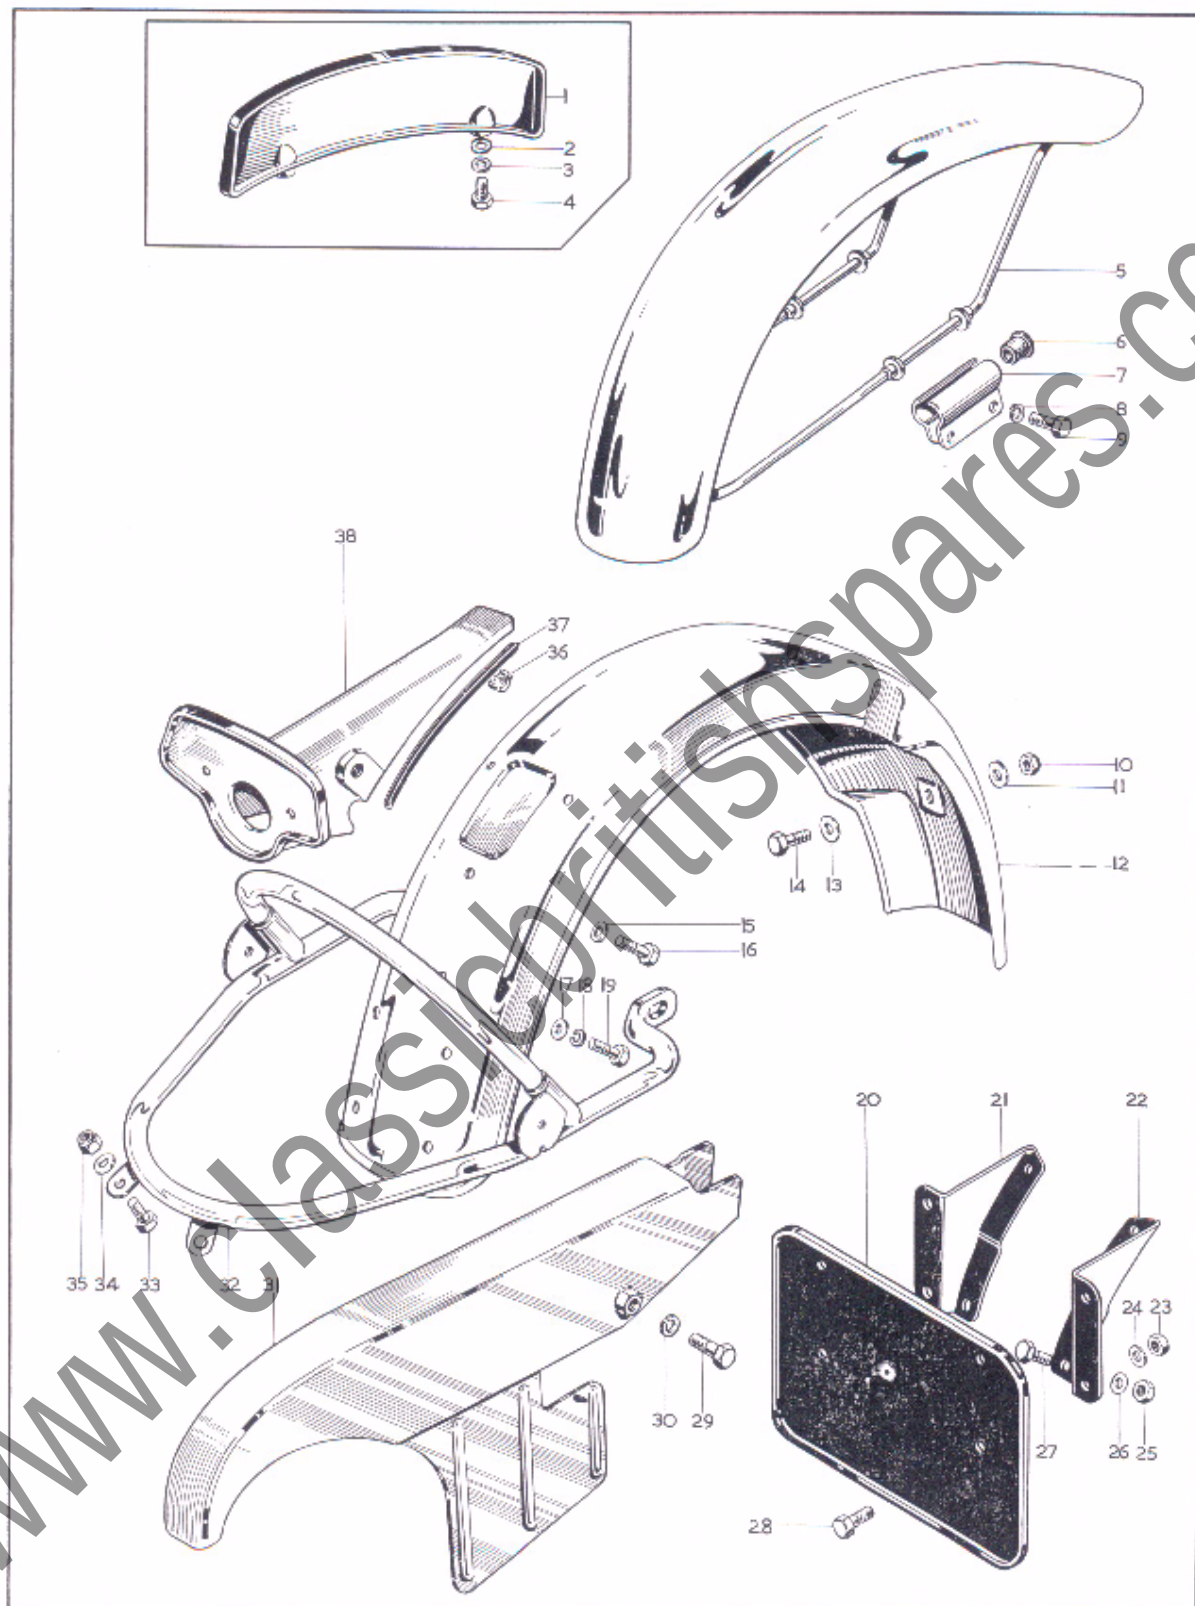

MUDGUARDS — CHAINGUARD — NUMBER PLATES

Plate Ref.	Part No.	Description	Per Set
1	83-2834	Front number plate	1
2	68-0597	Rubber washer — front number plate fixing	2
3	90-6219	Washer — front number plate fixing ($\cdot 192'' \times \cdot 437'' \times \cdot 048''$)	2
4	40-3044	Screw — front number plate fixing (2 B.A. $\times \frac{3}{8}''$)	2
5	97-4271	Front mudguard	1
5	97-4273*	Front mudguard	1
6	97-4021	Rubber bush — mudguard mounting	4
7	97-4022	Bracket — mudguard mounting	4
8	60-2427	Spring washer — mounting bracket bolt ($\cdot 281'' \times \cdot 465'' \times \cdot 054''$)	4
9	14-0103	Bolt — mudguard mounting ($\frac{1}{4}''$ UN.F. $\times \frac{3}{4}''$)	4
10	14-1301	Locknut — rear mudguard fixing bolt ($\frac{1}{4}''$ UN.F.)	2
11	27-8560	Washer — rear mudguard fixing bolt ($\cdot 255'' \times \cdot 625'' \times \cdot 048''$)	2
12	83-3160	Rear mudguard	1
13	27-8560	Washer — rear mudguard fixing bolt ($\cdot 255'' \times \cdot 625'' \times \cdot 048''$)	2
14	14-0101	Bolt — rear mudguard fixing ($\frac{1}{4}''$ UN.F. $\times \frac{1}{2}''$)	2
15	60-2320	Washer — rear lamp housing top fixing bolt ($\cdot 270'' \times \cdot 562'' \times \cdot 056''$)	1
16	14-6101	Bolt — top, rear lamp housing ($\frac{1}{4}''$ UN.C. $\times \frac{1}{2}''$)	1
17	60-2320	Washer — rear lamp housing bottom fixing bolt ($\cdot 270'' \times \cdot 562'' \times \cdot 056''$)	2
18	60-2417	Spring washer — rear lamp housing lower fixing bolts ($\cdot 281'' \times \cdot 425'' \times \cdot 072''$)	2
19	14-0102	Bolt — rear lamp lower fixing ($\frac{1}{4}''$ UN.F. $\times \frac{3}{8}''$)	2
20	83-2726	Rear number plate	1
21	83-2727	Fixing bracket — rear number plate (left)	1
22	83-2728	Fixing bracket — rear number plate (right)	1
23	14-0301	Nut — rear number plate fixing bolt ($\frac{1}{4}''$ UN.F.)	4
24	60-2320	Washer — rear number plate fixing bolt ($\cdot 270'' \times \cdot 562'' \times \cdot 056''$)	4
25	14-0301	Nut — rear number plate bracket to mudguard bolt ($\frac{1}{4}''$ UN.F.)	2
26	60-2338	Washer — rear number plate bracket to mudguard fixing bolt ($\cdot 270'' \times \cdot 625'' \times \cdot 056''$)	2
27	14-0101	Bolt — rear number plate bracket to mudguard ($\frac{1}{4}''$ UN.F. $\times \frac{1}{2}''$)	2
28	14-0604	Screw — rear number plate to bracket ($\frac{1}{4}''$ UN.F. $\times \frac{1}{2}''$)	4
29	14-0206	Bolt — chainguard to swinging arm ($\frac{1}{4}''$ UN.F. $\times 1\frac{1}{2}''$)	1
30	29-0541	Washer — chainguard bolt ($\cdot 265'' \times \cdot 468'' \times \cdot 024''$)	1
31	83-3259	Chainguard	1
32	83-3246	Support rail and grab handle	1
32	83-3443*	Support rail and grab handle	1
33	14-0102*	Bolt — support rail to mudguard ($\frac{1}{4}''$ UN.F. $\times \frac{3}{8}''$)	2
34	54-9081*	Washer — support rail to mudguard bolt ($\cdot 281'' \times \cdot 563'' \times \cdot 078''$)	2
35	14-1201*	Locknut — support rail to mudguard bolt ($\frac{1}{4}''$ UN.F.)	2
36	60-3313	Spire nut — rear lamp housing top fixing bolt	1
37	83-3211	Rubber beading — rear lamp housing	2
38	83-2736	Rear lamp housing	1

*Home and General Export only

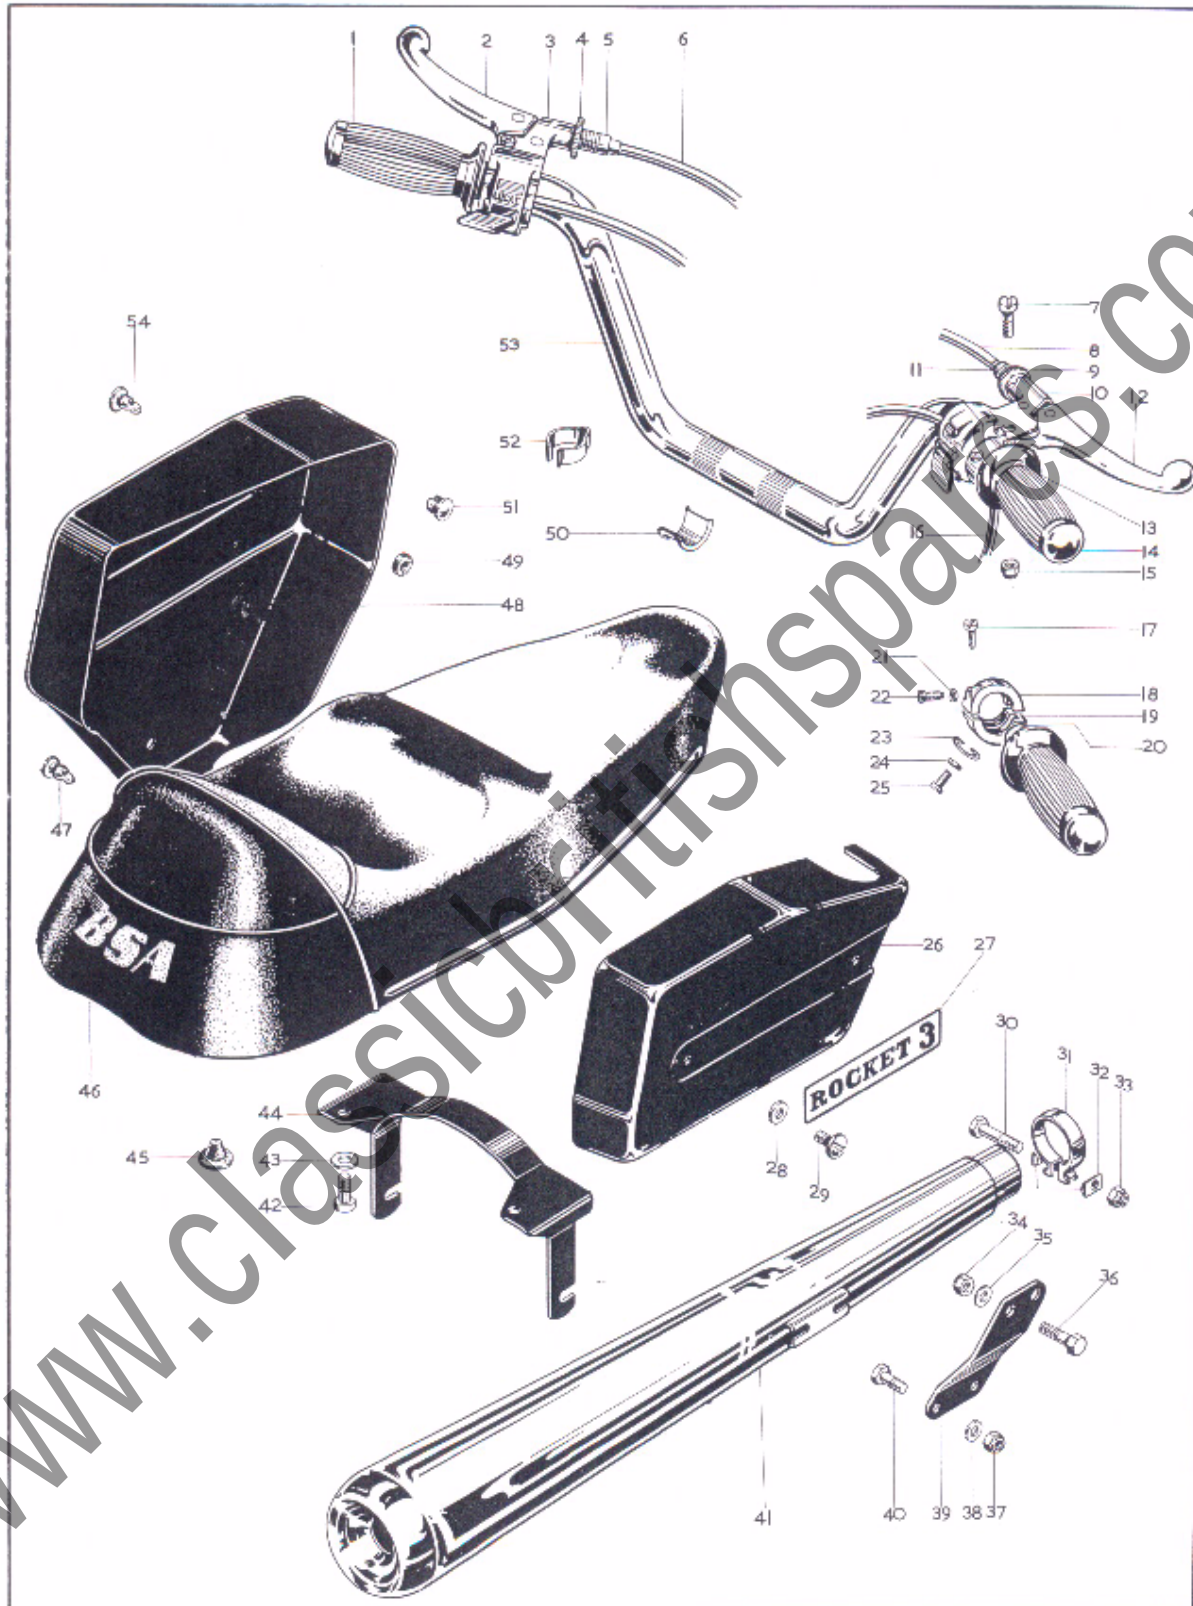


Plate 16

HANDLEBAR — DUAL SEAT — SIDE PANELS — SILENCERS

Plate Ref.	Part No.	Description	Per Set
1	97-2142	Rubber grip — handlebar, left	1
2	60-3657	Clutch lever	1
3	19-1333*	Switch assembly — left (Lucas 39595)	1
4	60-3586	Adjuster nut — clutch cable	1
5	60-3585	Adjuster — clutch cable	1
6	60-2445	Cable — clutch	1
7	21-2048	Pivot screw — clutch and brake levers ($\frac{1}{4}$ " UN.F. $\times \frac{11}{16}$ ")	2
8	60-3557	Cable — front brake	1
	60-3148†	Gaiter — front brake cable	1
9	60-2072	Adjuster nut — brake cable	1
10	19-1332*	Switch assembly — right (Lucas 39596)	1
11	60-2071	Adjuster — clutch cable	1
12	60-3583	Front brake lever	1
13	19-7237	Throttle control — complete assembly	1
14	19-7222	Rubber grip — handlebar, right	1
15	14-1301	Locknut — lever pivot ($\frac{1}{4}$ " UN.F.)	2
16	60-2202	Throttle control cable	1
17		Body screw — throttle control (Amal 11/013)	2
18		Throttle control body — top half (Amal 364/013)	1
19		Throttle control body — bottom half (Amal 364/014)	1
20		Rotor — throttle control (Amal 364/017)	1
21		Locknut — rotor adjusting screw (Amal 5/077)	1
22		Rotor adjusting screw (Amal 364/020)	1
23		Friction spring — throttle control (Amal 16/008)	1
24		Locknut — friction spring screw (Amal 16/010)	1
25		Friction spring screw (Amal 16/009)	1
26	83-3124	Sidecover — right	1
27	60-3278	Badge — side panel	2
28	82-9964	Rubber washer	2
29	21-0767	Screw — sidecover to oil tank ($\frac{1}{4}$ " UN.F. $\times \frac{7}{16}$ ")	2
30	14-0219	Bolt — silencer clamp ($\frac{5}{16}$ " UN.F. $\times 1\frac{1}{2}$ ")	2
31	75-2725	Clamp — silencer to exhaust pipe	2
32	75-2719	Saddle washer — silencer clamp	4
33	14-1302	Locknut — silencer clamp bolt ($\frac{5}{16}$ " UN.F.)	2

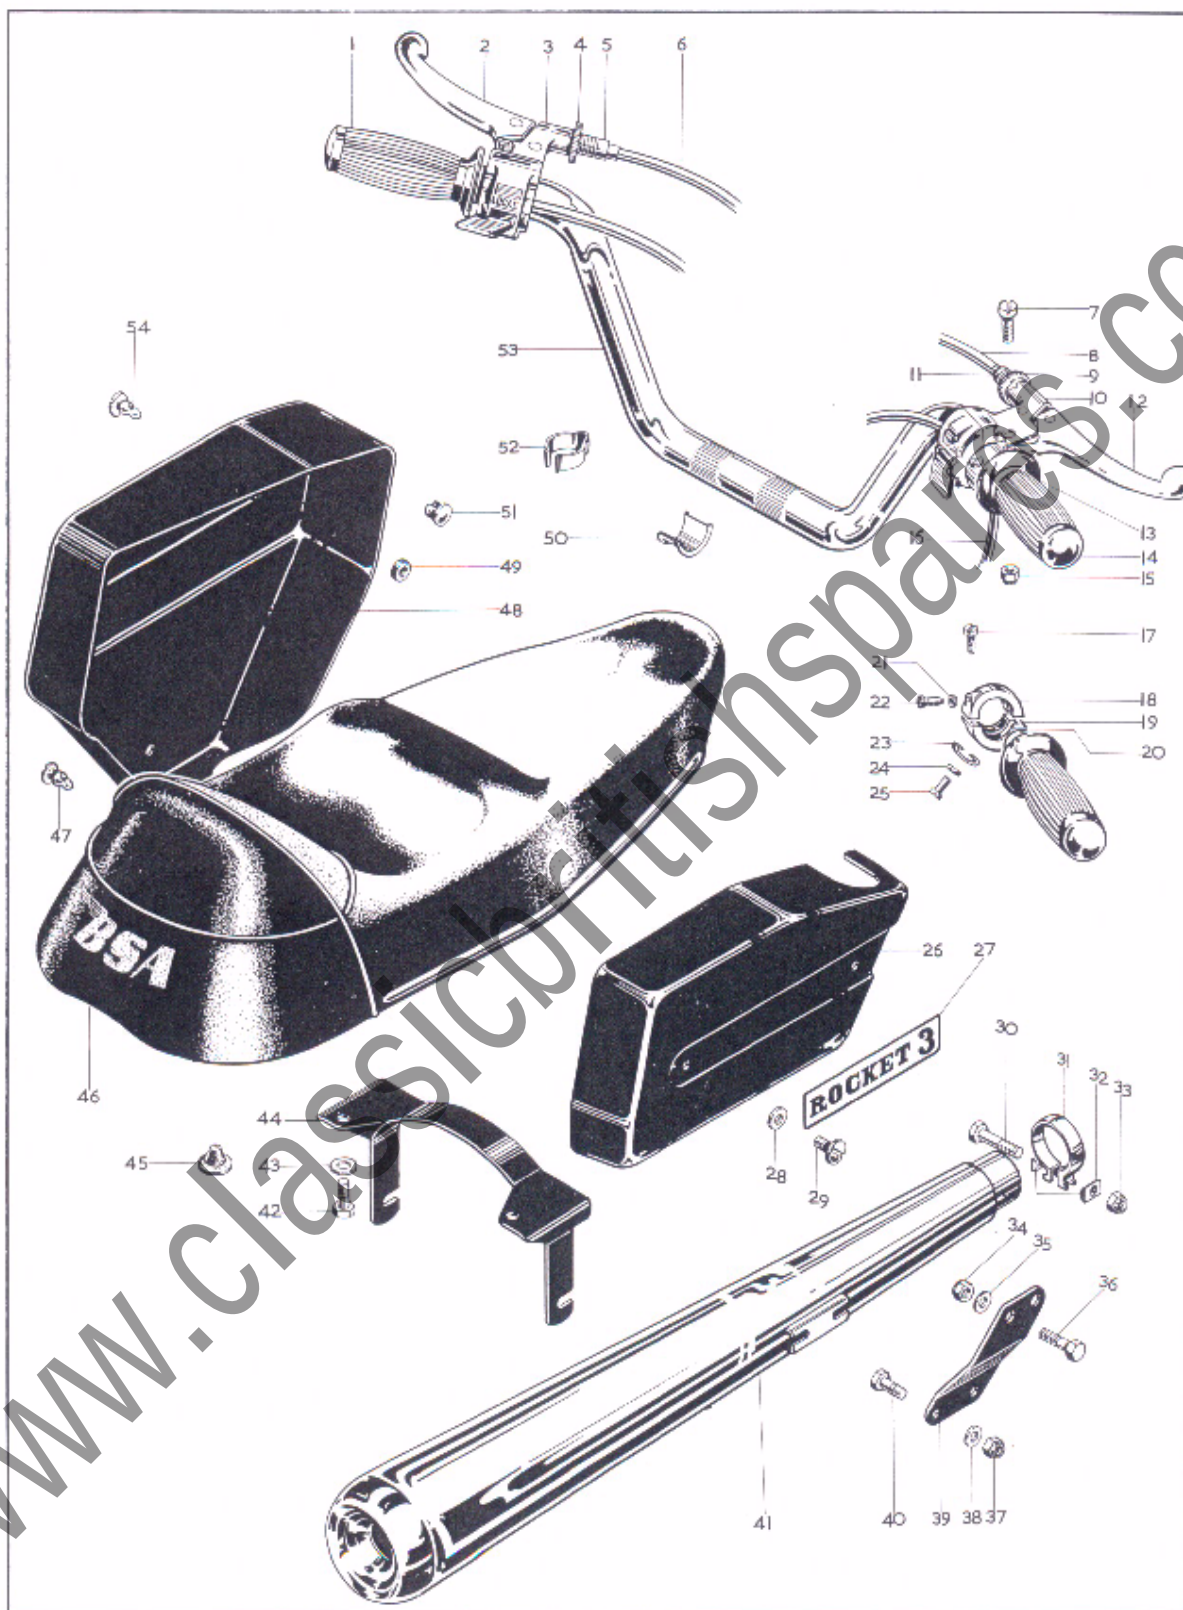


Plate 16—*contd.*

HANDLEBAR — DUAL SEAT — SIDE PANELS — SILENCERS

Plate Ref.	Part No.	Description	Per Set
34	14-1303	Locknut — silencer bracket to frame bolt ($\frac{3}{8}$ " UN.F.)	2
35	02-1733	Washer — silencer bracket to frame bolt ($\cdot 380" \times \cdot 812" \times \cdot 064"$)	2
36	14-0129	Bolt — silencer bracket to frame ($\frac{3}{8}$ " UN.F. $\times 1\frac{1}{4}"$)	2
37	14-1201	Locknut — bracket to silencer bolt ($\frac{1}{4}$ " UN.F.)	4
38	60-2338	Washer	4
38	60-2338	Washer	4
39	83-3280	Silencer bracket — right	1
39	83-3279	Silencer bracket — left	1
40	14-0101	Bolt — bracket to silencer ($\frac{1}{4}$ " UN.F. $\times \frac{1}{2}"$)	4
41	71-2382	Silencer	1
42	02-0353††	Bolt — bracket to dualseat ($\frac{5}{16}$ " B.S.C. $\times \frac{3}{8}"$)	2
43	24-8784††	Washer — spring, bracket to dualseat	2
44	83-3117††	Seat bracket	1
45	82-7835	Rubber buffer	4
46	83-3853	Dualseat — complete assembly	1
46	19-6050	Cover — dualseat	1
46	83-3438**	Dualseat — complete assembly	1
46	19-6048**	Cover — dualseat	1
47	60-3632	"Oddie" stud — ignition switch mounting bracket	1
	82-9964	Rubber washer — ignition switch mounting bracket	1
48	83-3168	Sidecover — left	1
49	68-9226	Rubber washer	3
50	75-4909	Sleeve — handlebar mounting	4
51	97-2273	Clip — clutch cable	1
52	97-4112	Cable clip — handlebar	4
53	97-4252	Handlebar	1
53	97-4251**	Handlebar	1
54	83-1430	"Oddie" stud	2

*For switch assembly details, see plate 20.

†Not illustrated.

**Home and General Export only.

††Not Home and General Export.


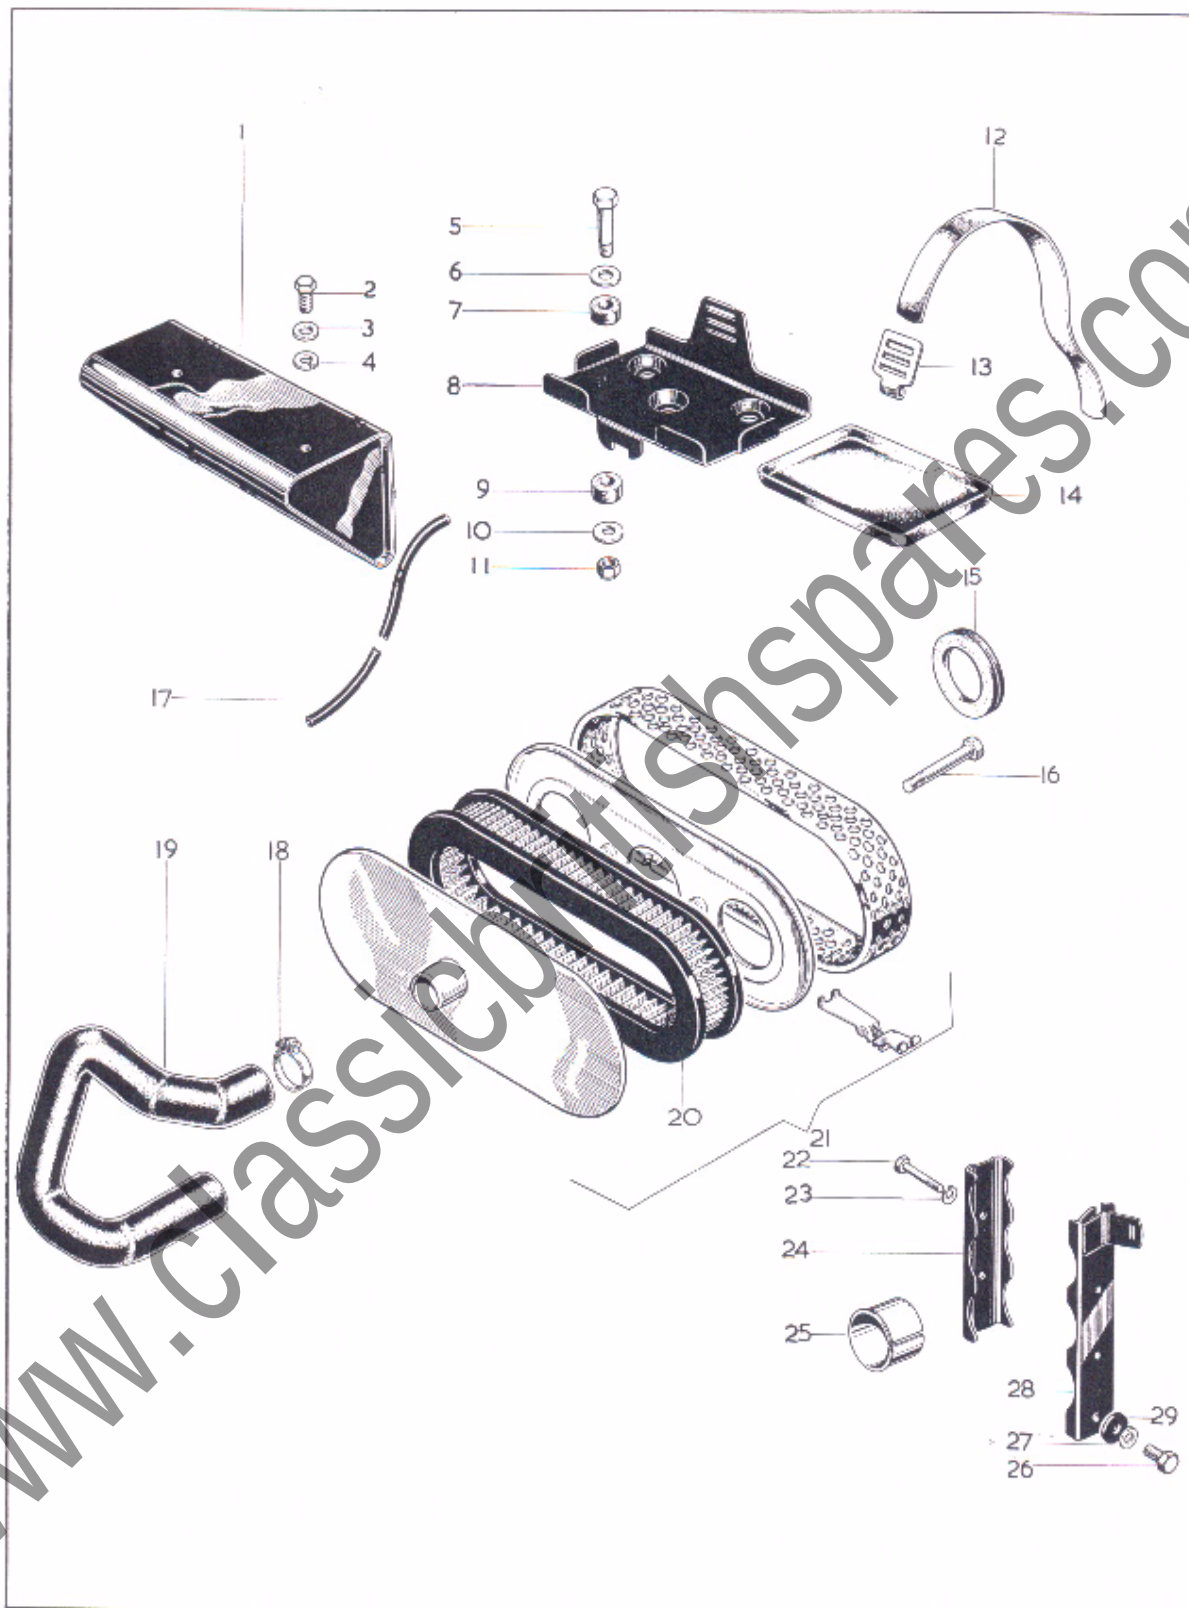


Plate 17

TOOLBOX — BATTERY CARRIER — AIR CLEANER

Plate Ref.	Part No.	Description	Per Set
1	82-8495	Toolbox	1
2	14-0101	Bolt — toolbox to frame ($\frac{1}{4}$ " UN.F. $\times$ $\frac{1}{2}$ ")	2
3	02-0525	Washer — toolbox to frame bolt ($\cdot 255"$ $\times$ $\cdot 500"$ $\times$ $\cdot 048"$)	2
4	82-9020	Spring washer — toolbox to frame bolt ($\cdot 255"$ $\times$ $\cdot 594"$ $\times$ $\cdot 040"$)	2
5	21-0768	Bolt — carrier to platform	3
6	02-2138	Washer — carrier to platform, top ($\cdot 380"$ $\times$ $\cdot 750"$ $\times$ $\cdot 064"$)	3
7	40-4524	Mounting rubber — carrier to platform, top	3
8	82-8463	Battery carrier	1
9	40-4524	Mounting rubber — carrier to platform, bottom	3
10	82-9008	Washer — carrier to platform, bottom ($\cdot 317"$ $\times$ $\cdot 875"$ $\times$ $\cdot 064"$)	3
11	14-1202	Locknut — carrier to platform ($\frac{5}{16}$ " UN.F.)	3
12	68-4577	Strap — battery retaining	1
13	04-7431	Hook — battery retaining strap	1
14	68-4597	Rubber tray — battery carrier	1
15	82-9562	Grommet — air cleaner	3
16	14-0218	Bolt — air cleaner to manifold ($\frac{1}{4}$ " UN.F. $\times$ $\frac{3}{4}$ ")	2
17	82-7431	Vent pipe — battery	1
18	60-0706	Clip — breather hose	2
19	82-8743	Connector hose — breather to air cleaner	1
20	70-9138	Element — air cleaner	1
21	60-3276	Air cleaner — complete assembly	1
22	21-1981	Bolt — coil clamp (10 UN.F. $\times$ $1\frac{3}{4}$ ")	2
23	24-7068	Washer — spring, coil clamp bolt ($\cdot 203"$ $\times$ $\cdot 328"$ $\times$ $\cdot 064"$)	2
24	82-8549	Coil clamp	3
25	82-9654	Sleeve — coil clamp	3
26	14-0103	Bolt — coil support to frame ($\frac{1}{4}$ " UN.F. $\times$ $\frac{3}{4}$ ")	1
27	27-8560	Washer — coil support to frame bolt ($\cdot 266"$ $\times$ $\cdot 625"$ $\times$ $\cdot 048"$)	2
28	83-1984	Coil support complete	1
29	83-1984	Washer — rubber, coil support to frame bolt	2

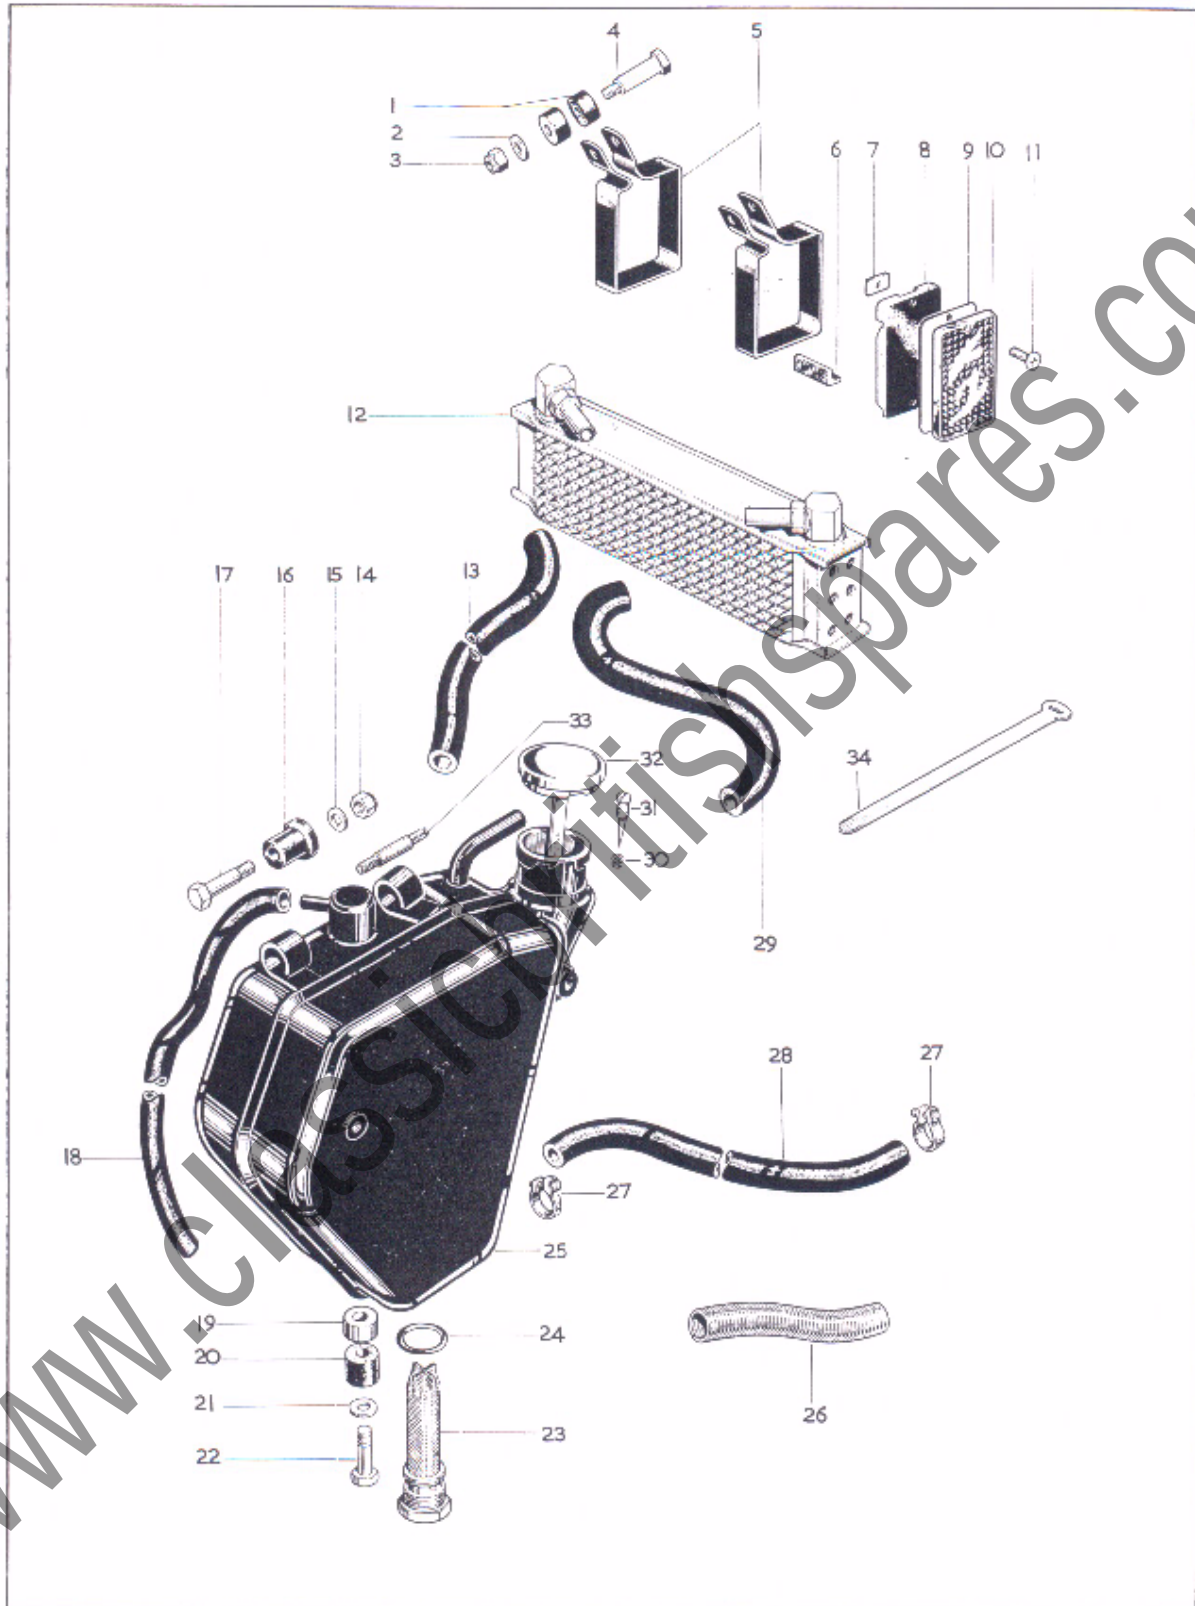

OIL TANK — OIL COOLER

Plate Ref.	Part No.	Description	Per Set
	82-9574	Oil cooler and reflector assembly	1
1	82-8657	Rubber — oil cooler mounting	4
2	76-0101	Washer — cooler strap mounting ($.266" \times .750" \times .080"$)	2
3	14-1301	Locknut — cooler strap mounting ($\frac{1}{4}"$ UN.F.)	2
4	21-0752	Bolt — cooler strap mounting ($\frac{1}{4}"$ UN.F. $\times 1-15/64"$)	2
5	83-3128	Strap — oil cooler mounting	2
6	82-9322	Packing rubber — oil cooler to strap	8
7	82-9573	Nut — oil cooler reflector mounting (4 B.A.)	4
8	82-9571	Mounting rubber — reflector fixing	2
9	82-9906	Backing plate — reflector fixing	2
10	19-1338	Reflector — front (amber)	2
11	21-1940	Screw — oil cooler reflector fixing (4 B.A.)	4
12	82-9315	Oil cooler	1
13	70-8906	Flexible pipe — oil cooler to rocker box	1
14	14-1301	Locknut — oil tank top mounting ($\frac{1}{4}"$ UN.F.)	3
15	27-8560	Washer — oil tank top mounting ($.266" \times .625" \times .048"$)	4
16	40-8436	Rubber — oil tank top mounting	2
17	21-0754	Bolt — oil tank top mounting	1
18	82-9664	Breather pipe — oil tank	1
19	83-1952	Distance piece — oil tank bottom mounting	1
20	83-1585	Rubber — oil tank bottom mounting	1
21	02-0923	Washer — oil tank bottom mounting ($.317" \times .625" \times \frac{1}{16}"$)	1
22	14-0217	Bolt — oil tank bottom mounting ($\frac{3}{16}"$ UN.F. $\times 1\frac{1}{4}"$)	1
23	83-1387	Oil tank filter plug complete	1
24	68-0610	"O" ring — filter plug	1
25	83-3199	Oil tank complete	1
26	82-9530	Spring — oil feed pipe	1
26	82-9531	Spring — oil return pipe	1
27	70-6848	Clip — flexible oil pipe	2
28	70-8904	Flexible pipe — oil tank to engine	1
29	70-8907	Flexible pipe — cooler to tank	1
30	82-6874	Spring — metering screw	1
31	82-9435	Metering screw — chain oiler ($\frac{1}{4}"$ UN.F. $\times 29/64"$)	1
32	82-8627	Filler cap and dipstick	1
33	83-1386*	Stud — oil tank front mounting	1
34	82-9918	Clip — oil pipes to frame	4

*Special material: 33—EN14B.

Plate 19


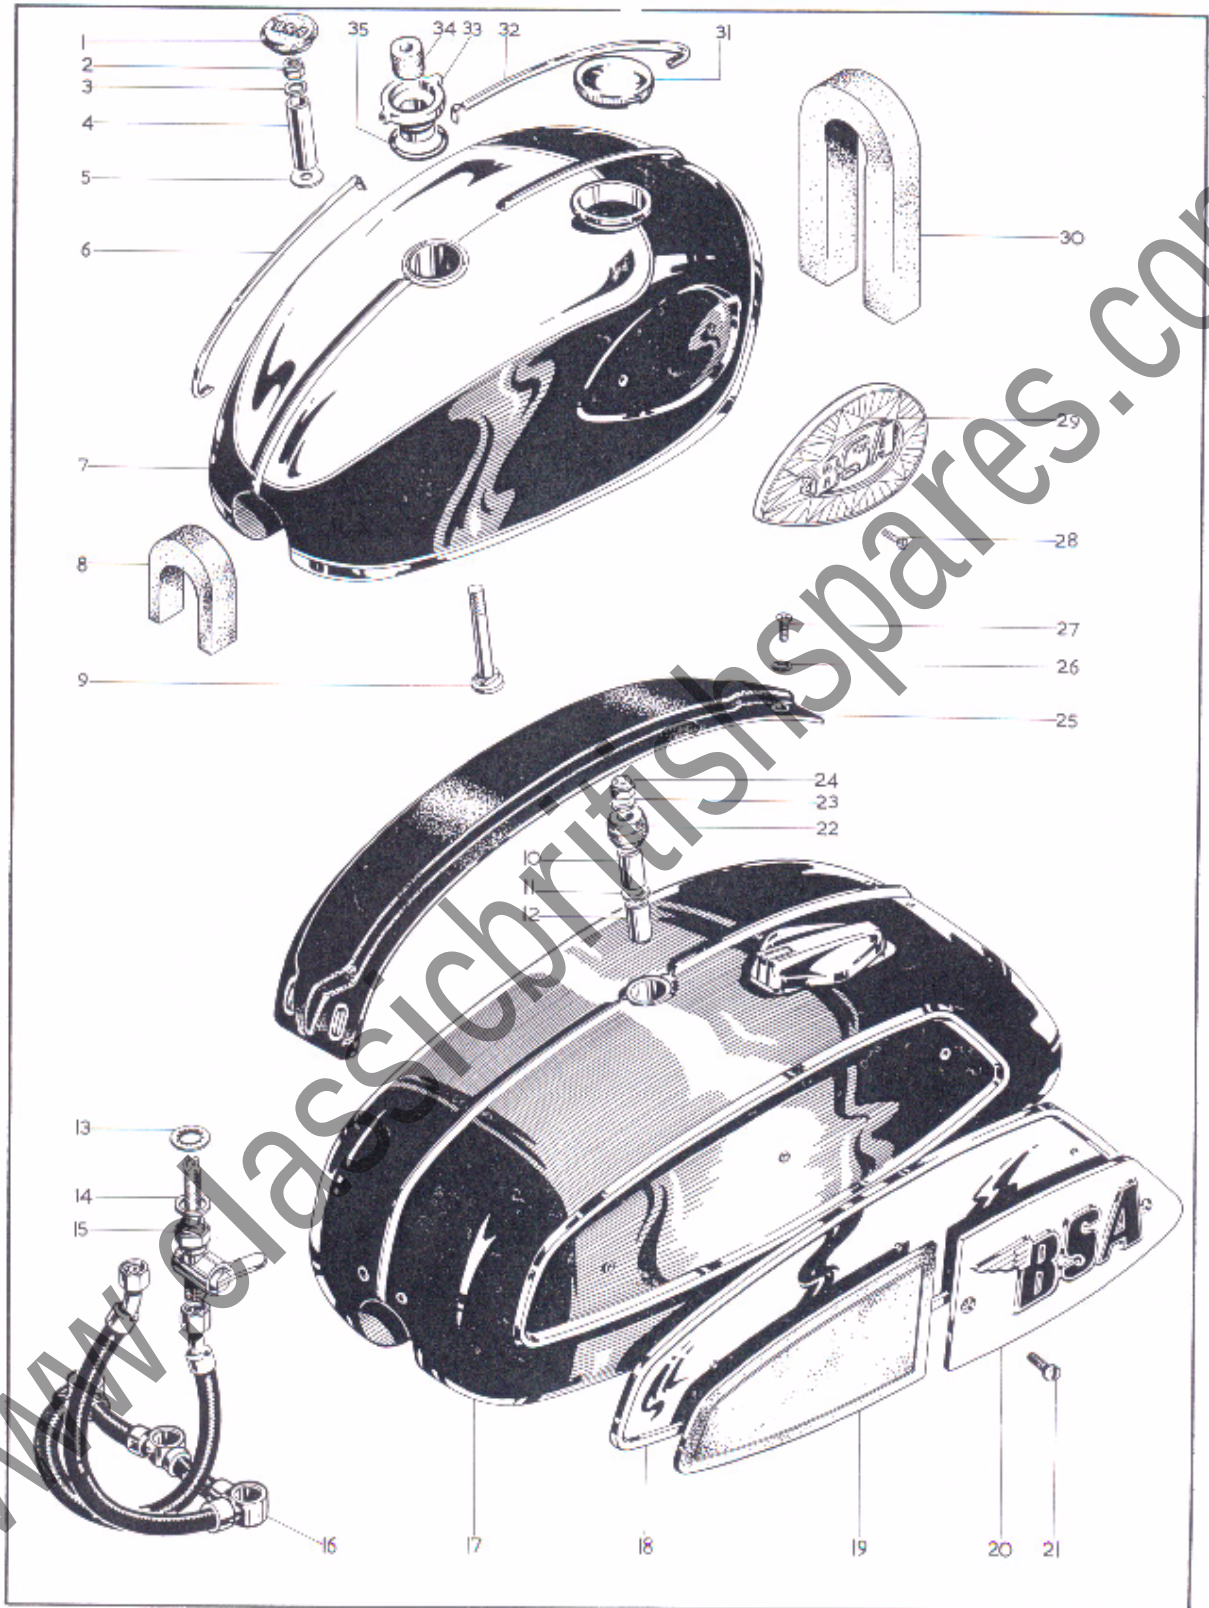


Plate 19

PETROL TANK


Plate Ref.	Part No.	Description	Per Set
1	42-8010	Grommet — petrol tank centre bolt	1
2	14-0302	Nut — petrol tank mounting ($\frac{5}{16}$ " UN.F.)	1
3	68-8016	Washer — petrol tank mounting, top ($\cdot 453" \times \cdot 906" \times \cdot 094"$)	1
4	68-8174	Spacer tube — petrol tank mounting	1
5	76-0012	Washer — petrol tank mounting, bottom ($\cdot 328" \times \cdot 563" \times \cdot 093"$)	1
6	83-3147	Styling strip — rear	1
7	83-2747	Petrol tank complete	1
8	82-9920	Rubber — petrol tank mounting, rear	1
9	21-1993	Bolt — petrol tank mounting	1
10	76-4120	Spacer tube — petrol tank mounting	1
11	03-0101*	Washer — petrol tank mounting ($\cdot 328" \times 1 \cdot 125" \times \cdot 092"$)	1
12	82-8327*	Spacer tube — petrol tank mounting	1
13	83-0002	Washer — petrol tap	1
14	70-7351	Sealing washer — petrol tap	1
15	83-2800	Petrol tap	1
15	83-2801	Petrol tap — reserve	1
16	83-3355	Petrol pipe assembly	1
16	82-9436*	Petrol pipe assembly	1
17	82-8391*	Petrol tank complete	1
18	82-8588*	Panel — petrol tank, left	1
18	82-8589*	Panel — petrol tank, right	1
19	82-8590*	Knee pad — rubber, petrol tank	1
19	82-8591*	Knee pad — rubber, petrol tank	1
20	82-8611*	Badge — petrol tank, right	1
20	82-8610*	Badge — petrol tank, left	1
21	21-6206*	Screw — petrol tank badge and panel fixing	6
22	40-8085*	Rubber — petrol tank mounting	1
23	03-0101*	Washer — petrol tank mounting ($\cdot 328" \times 1 \cdot 125" \times \cdot 092"$)	1
24	14-0302	Nut — petrol tank mounting ($\frac{5}{16}$ " UN.F.)	1
25	82-8609*	Styling strip — petrol tank	1
26	82-8947*	Washer — styling strip to tank	4
27	82-8946*	Screw — styling strip to tank (2 B.A. $\times \frac{5}{8}$ " countersunk)	4
28	82-8250	Screw — petrol tank badge fixing ($\frac{1}{8}$ " W. $\times \frac{5}{8}$ ")	4
29	83-3270	Badge — petrol tank, left	1
29	83-3271	Badge — petrol tank, right	1
30	82-9919	Rubber — petrol tank mounting, front	1
31	82-3220	Filler cap — petrol tank	1
32	83-3146	Styling strip — front	1
33	68-8035	Styling strip holder	1
34	42-8017	Rubber — petrol tank mounting	1
35	68-8013	Rubber ring — petrol tank mounting	1

*Home and general export only.

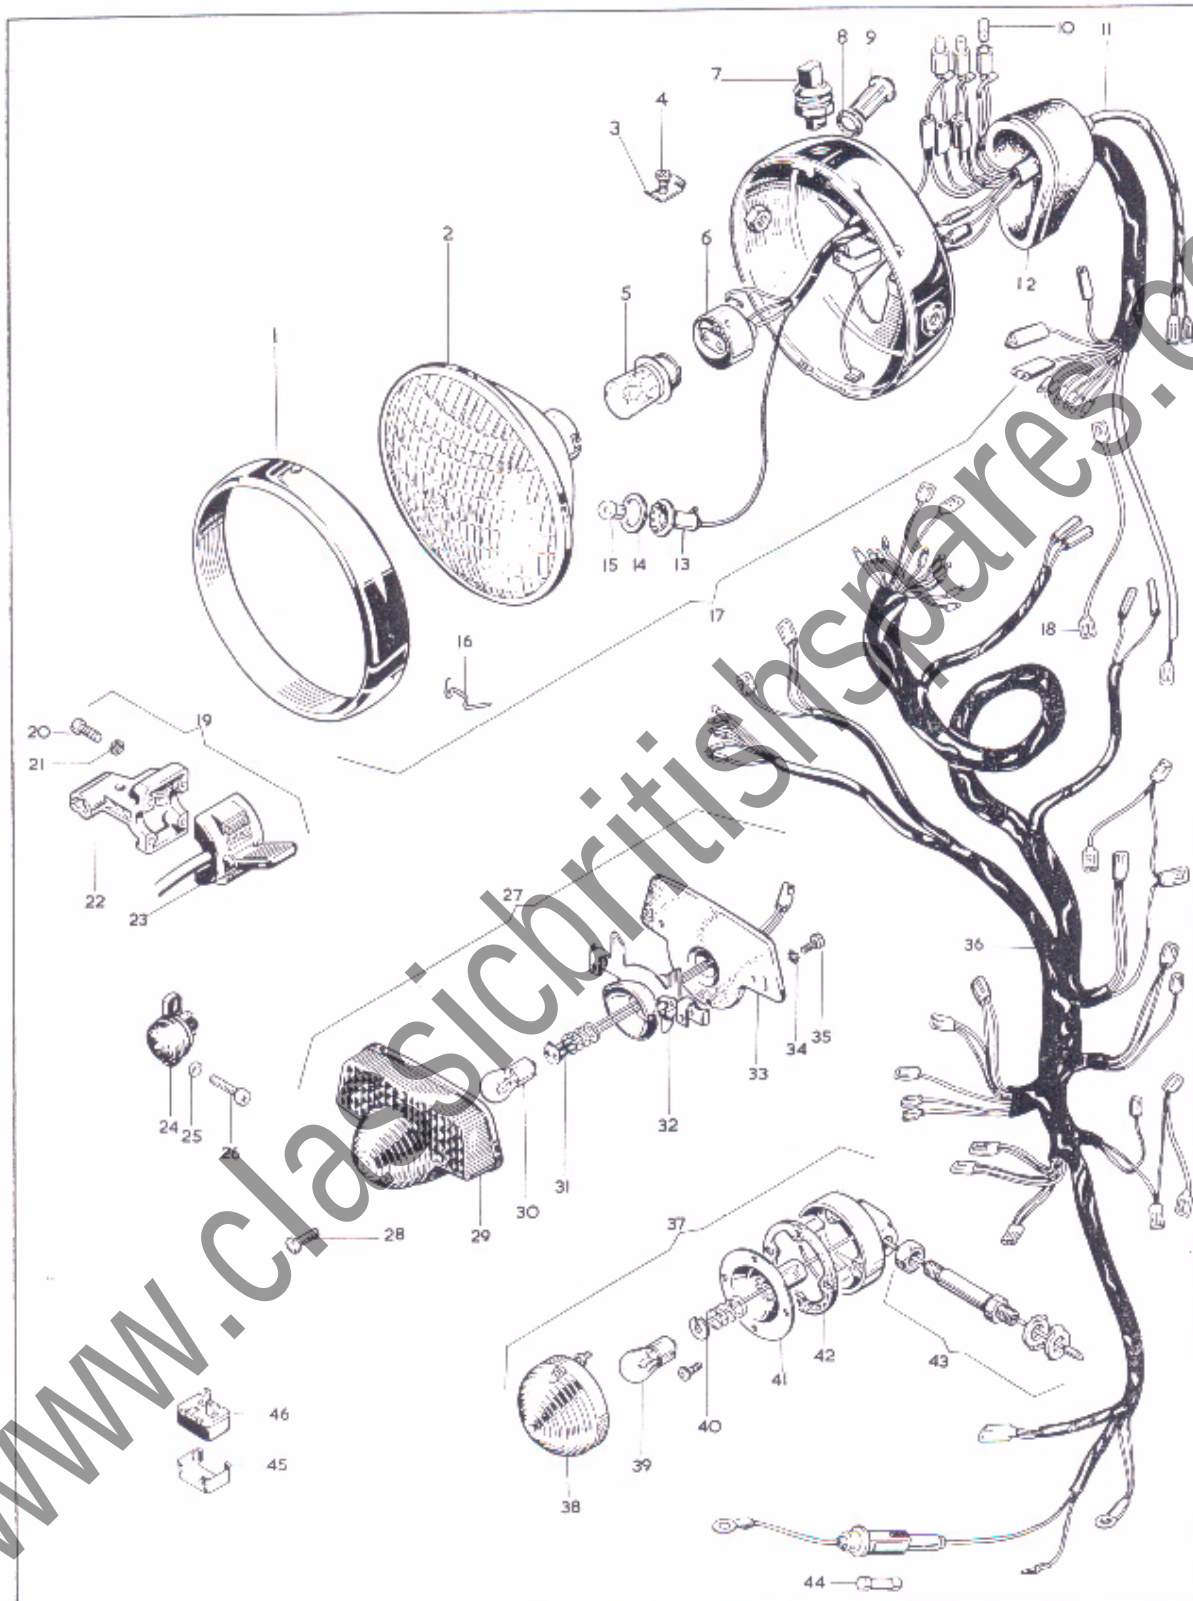

ELECTRICAL EQUIPMENT (PART 1)

Plate Ref.	Part Number		Description	Per Set
	B.S.A. No.	Makers No.		
1		553248	Headlamp rim	1
2	19-0960	516801	Light unit	1
3		534296	Plate — rim fixing	1
4		144921	Screw — rim fixing plate	1
5			Bulb — main (370)	1
5	19-1064		Bulb — main, for France (371)	1
6		554602	Bulb holder — main	1
7	19-1095	31276	Light switch	1
8		54140331	Sealing washer — warning lights	3
9		54363453	Direction indicator warning light body (amber)	1
9		54363454	Oil pressure warning light body (red)	1
9		54363455	Main beam warning light body (green)	1
10			Bulb — warning lights (281)	3
11		54959640	Headlamp harness	1
12	19-1349	54524048	Rubber cover — headlamp harness	1
13		54573590	Pilot bulb holder	1
14		554354	Rubber ring — pilot bulb holder	1
15			Bulb — pilot (989)	1
16		504665	Wire clip — light unit fixing	6
17	19-1352	60260	Headlamp	1
18		54954267	Link lead — ignition coil	1
19	19-1332	39596	Handlebar switch assembly — right	1
19	19-1333	39595	Handlebar switch assembly — left	1
20		54115246	Screw — handlebar switch	8
21		185022	Washer — handlebar switch screw	8
22	19-1335	54340881	Lever half — handlebar switch (left and right)	2
23	19-1337	54033667	Switch half — handlebar switch (right)	1

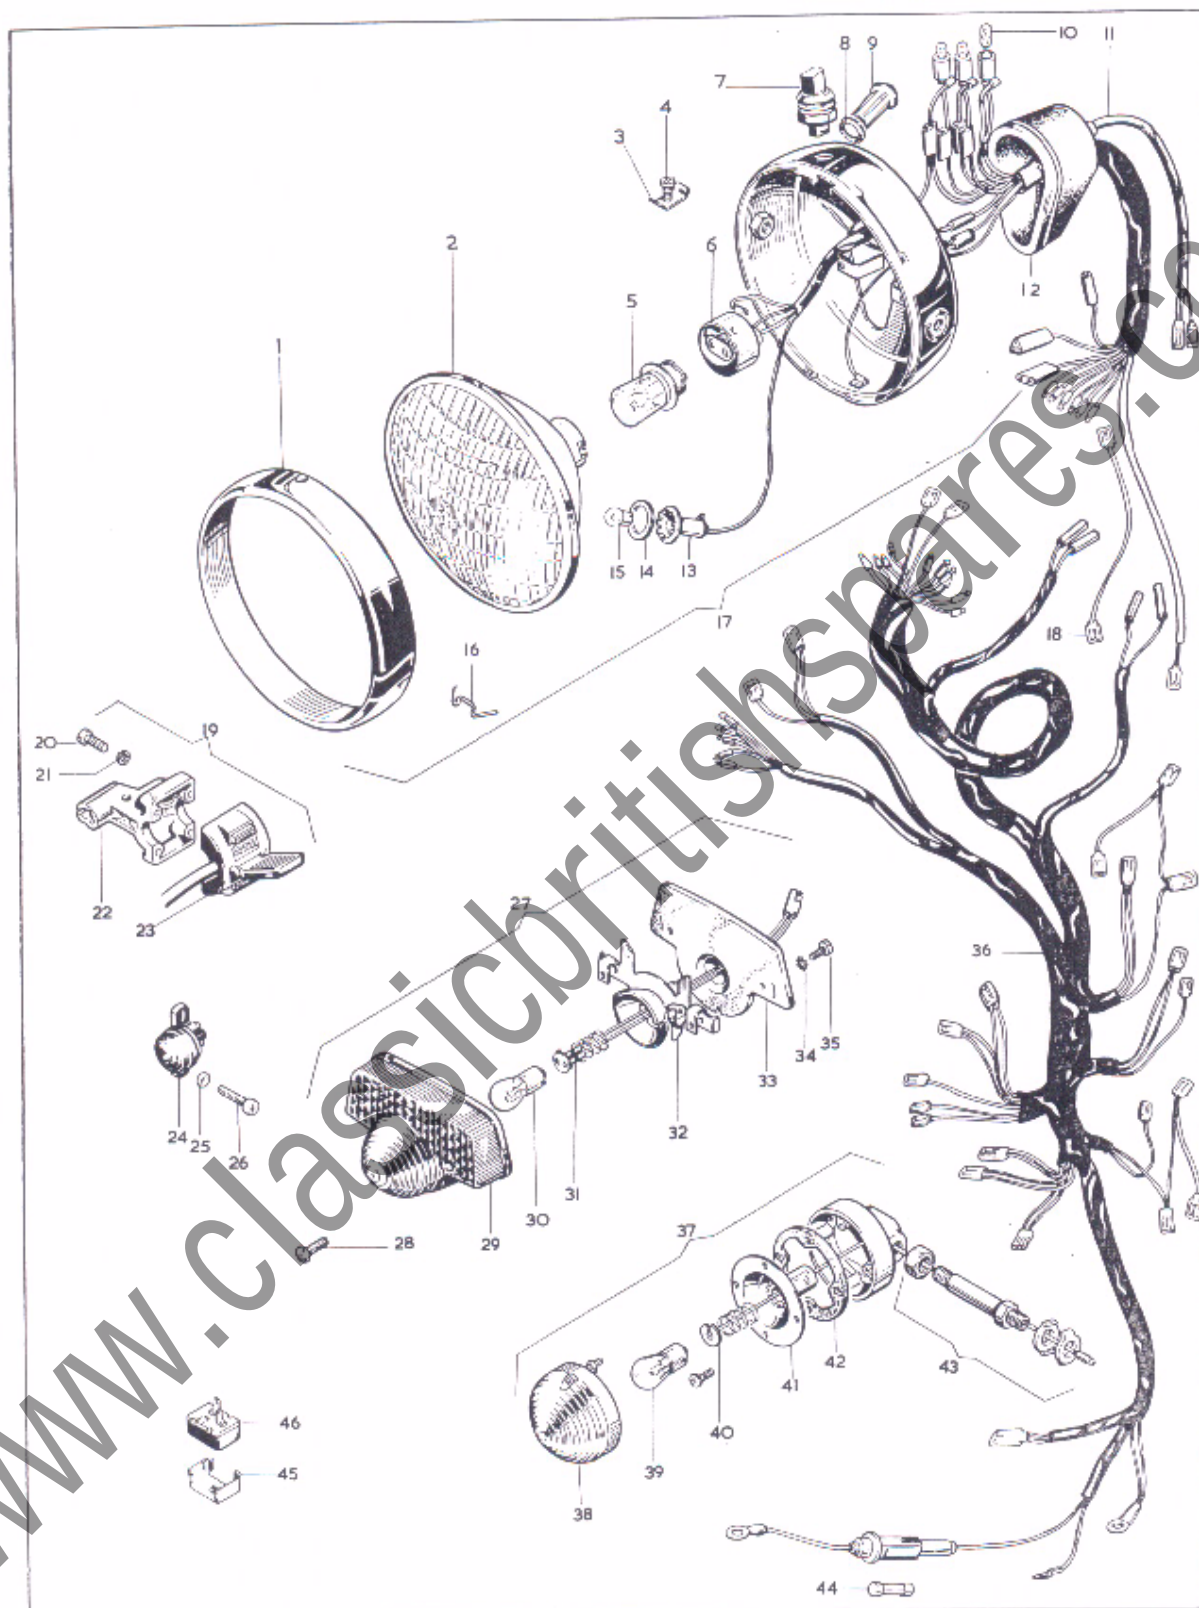


ELECTRICAL EQUIPMENT (PART 1)

Plate Ref.	Part Number		Description	Per Set
	B.S.A. No.	Makers No.		
23	19-1334	54033666	Switch half — handlebar switch (left)	1
24	19-0916	34815	Stop switch — rear	1
25	26-9461		Washer — rear stop switch screw	1
26	42-4574		Screw — rear stop switch fixing	2
27	19-1245	53973	Rear lamp — complete assembly	1
28		144921	Screw — rear lamp lens fixing	2
29		54577109	Lens — rear lamp	1
30			Bulb — rear lamp (380)	1
31		573828	Interior bulb holder — rear lamp	1
32		54525286	Base plate — rear lamp	1
33		54571677	Gasket — rear lamp mounting	1
34		188330	Shakeproof washer — rear lamp fixing	2
35		110714	Screw — rear lamp fixing	2
36	19-1099	54959638	Main harness	1
37	19-1067	56147	Flasher lamp — complete assembly	4
38	19-1068	54581638	Lens assembly — flasher lamp	4
39			Bulb — flasher lamp (382)	4
40		573832	Interior assembly — flasher lamp	4
41		554548	Bulb holder shell — flasher lamp	4
42		54580300	Gasket — flasher lamp	4
43	19-1071	54582415	Stem — flasher lamp (front)	2
43	19-1072	54582414	Stem — flasher lamp (rear)	2
44	19-1249	188218	Fuse — main harness (35 amp.)	1
45	19-1098	54385091	Clip — flasher unit mounting	1
46	19-1079	35048	Flasher unit	1
	19-1353*	54486637	Spring — flasher unit	1
	83-0033*		Bolt — flasher unit spring	1
	76-0293*		Washer — flasher unit spring	2
	54-9017*		Nut — flasher unit spring	2

*Not illustrated

Note: Where a part number is not quoted, that part is available from manufacturers only.

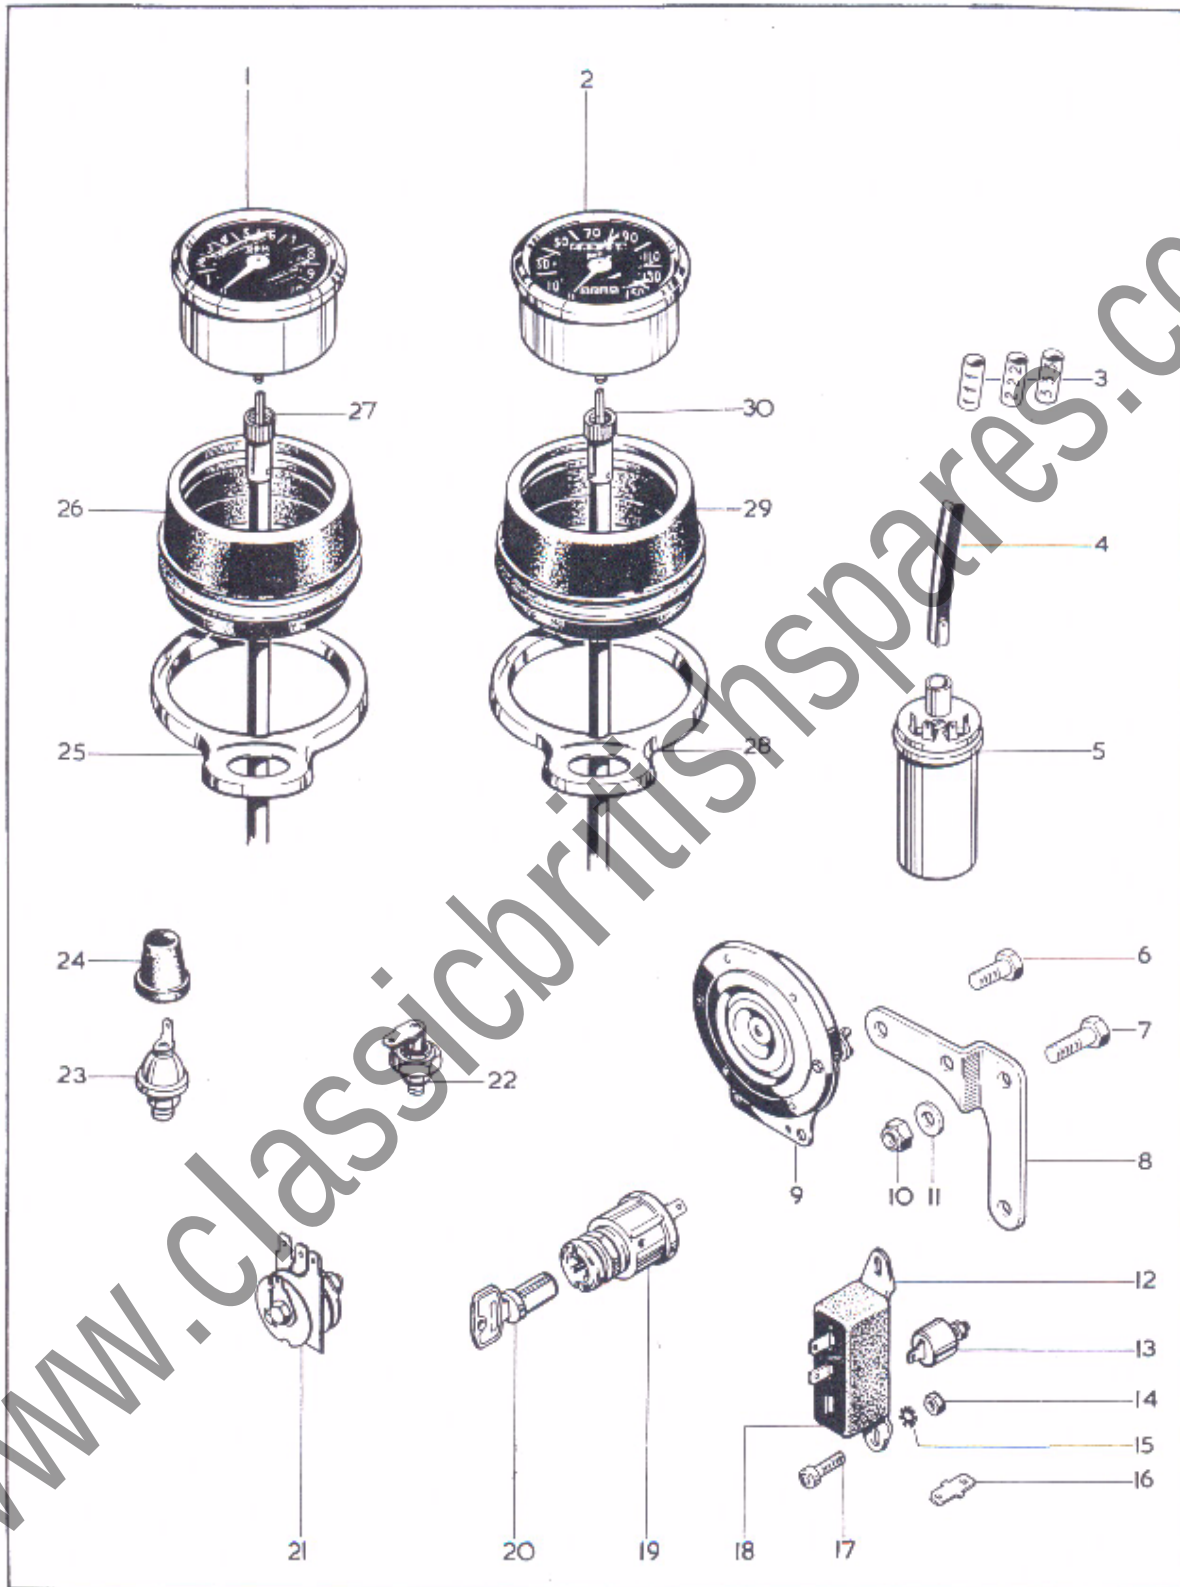


ELECTRICAL EQUIPMENT (PART 2)

Plate Ref.	Part Number		Description	Per Set
	B.S.A. No. Makers No.			
1	19-8950	RSM.3003/04	Tachometer	1
2	19-8948	SSM.5007/00	Speedometer — m.p.h.	1
2	19-8949	SSM.5007/01	Speedometer — k.p.h. (optional)	1
2	19-9080	41/148/203/10	Speedometer trip shaft (not illustrated)	1
3	60-2046		Identification sleeve — No. 1 high-tension lead	1
3	60-2047		Identification sleeve — No. 2 high-tension lead	1
3	60-2048		Identification sleeve — No. 3 high-tension lead	1
4	19-1898	54956436	High-tension lead — non-resistive	3
4	19-1899*	54956478	High-tension lead — resistive	3
5	19-1881	45221	High-tension coil	3
6	14-0103		Bolt — horn to bracket	2
7	14-0101		Bolt — horn bracket to frame	2
8	83-3269		Horn bracket	1
9	19-2084	70216	Horn	1
10	14-1202		Locknut — horn and horn bracket fixing ($\frac{1}{4}$ " UN.F.)	4
11	60-2320		Washer — horn and horn bracket ($\cdot 270^{\circ} \times \cdot 562^{\circ} \times \cdot 056^{\circ}$)	4
12	19-1861	54418526	Base plate — condenser set	1
13	19-1847	54420128	Condenser	3
14	02-0047		Nut — condenser base plate fixing ($\frac{3}{16}$ " B.S.C.)	2
15	29-3319		Washer — condenser base plate fixing screw ($\cdot 200^{\circ} \times \cdot 400^{\circ} \times \cdot 021^{\circ}$)	2
16	19-1915	54190038	"Lucar" blade — condenser earth	1
17	40-0236		Screw — condenser base plate fixing (2 B.A. $\times \frac{1}{8}$ ")	2
18	19-1848	54418528	Cover — condenser pack	1
19	19-1914	54033691	Master switch — ignition	1
20	82-6981		Lock and keys — ignition switch	1
21	19-1715	49072	Rectifier	1
22	19-1735	54048288	Zener diode	1
23	19-6508	PS.5300/1/07	Switch — oil pressure	1
24	60-2045		Cover — oil pressure switch	1
25	97-4026		Bracket — tachometer mounting	1
26	60-2600		Cup — tachometer mounting	1
27	19-9107		Cable — tachometer drive	1
28	97-4026		Bracket — speedometer mounting	1
29	60-2600		Cup — speedometer mounting	1
30	19-9108		Cable — speedometer drive	1


*Home and General Export only.

Note:—Where a part number is not quoted, that part is available from manufacturers only.

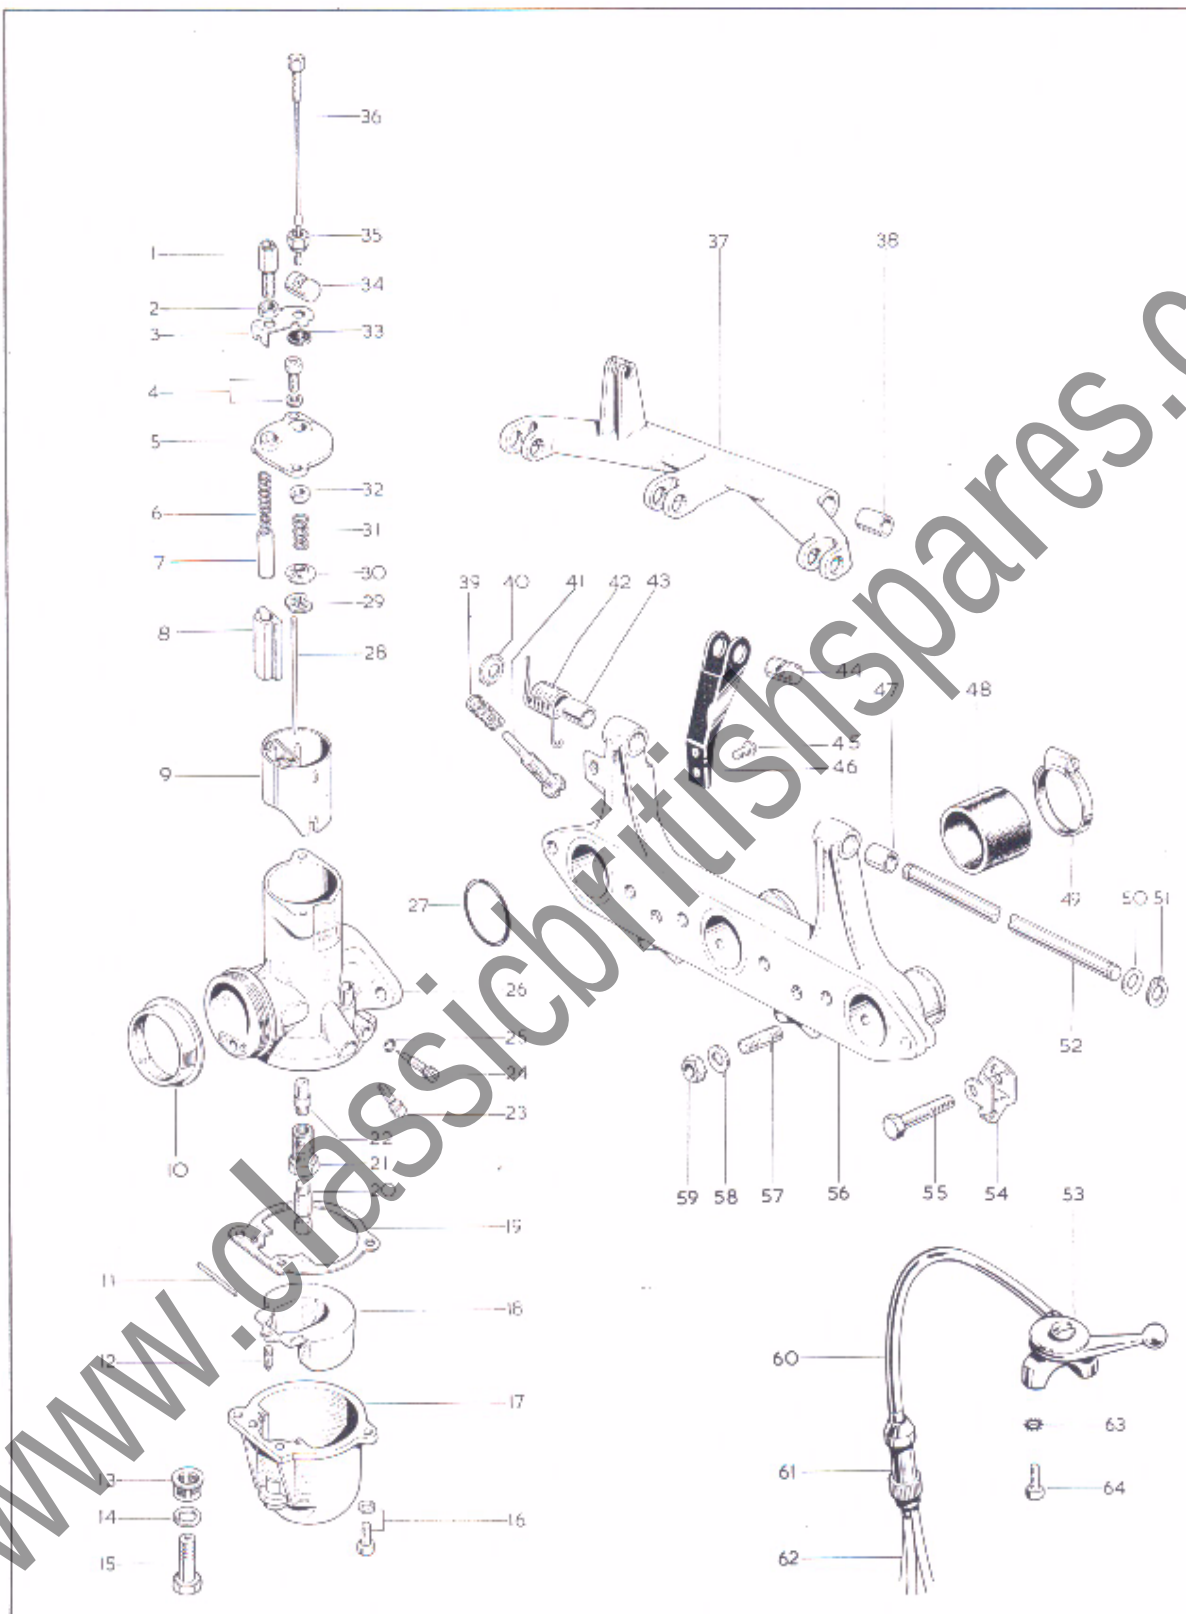

CARBURETTERS — THROTTLE LINKAGE


Plate Ref.	Part Number		Description	Per Set
	B.S.A. No.	Makers No.		
1	19-2711	4/035	Adjuster — air cable	3
2		5/077	Locknut — air cable adjuster	3
3		622/125	Locating clip — top cap seal washer	3
4	19-3093	622/086	Screw and washer — top cap fixing	6
5		622/097	Top cap — carburetter body	3
6		622/129	Spring — air valve	3
7		622/134	Guide — air valve spring	3
8	19-3091	622/062	Air valve	3
9	19-3129	622/060	Throttle valve ($3\frac{1}{2}$)	3
10	70-9586		Adaptor — carburetter intake	3
11	19-3116	622/071	Float spindle	3
12	19-3105	622/068	Needle for float	3
13	19-3048	376/093	Petrol filter	3
14	19-2834	13/163	Washer — fibre, banjo bolt	3
15	19-3103	622/078	Banjo bolt — petrol pipe to float chamber	3
16	19-3093	622/086	Screw and washer — float chamber fixing	6
17	19-3132	622/050	Float chamber	3
18	19-3102	622/069	Float	3
19	19-3106	622/073	Gasket — float chamber	3
20	19-3099	376/100	Main jet (150)	3
21		622/128	Main jet holder	3
22	19-3136	622/122	Needle jet ($\phi 106$)	3
23		622/133	Screw — throttle valve adjusting	3
24	19-3113	622/076	Screw — pilot air adjusting	3
25	19-3098	622/082	"O" ring — adjusting screws	6
25	19-2409	L.626/48	Carburetter complete (left)	1
25	19-2415	R.626/49	Carburetter complete (centre)	1
26	19-2408	R.626/47	Carburetter complete (right)	1
27	19-3090	622/101	"O" ring — carburetter flange	3
28	19-3137	622/124	Throttle needle	3
29	19-3095	622/067	Clip — throttle needle	3
30	60-1987	622/116	Retaining plate — throttle rod spring	3
31	60-1960	622/113	Spring — throttle rod retaining	3
32	60-1959	622/115	Cap — throttle rod retaining	3

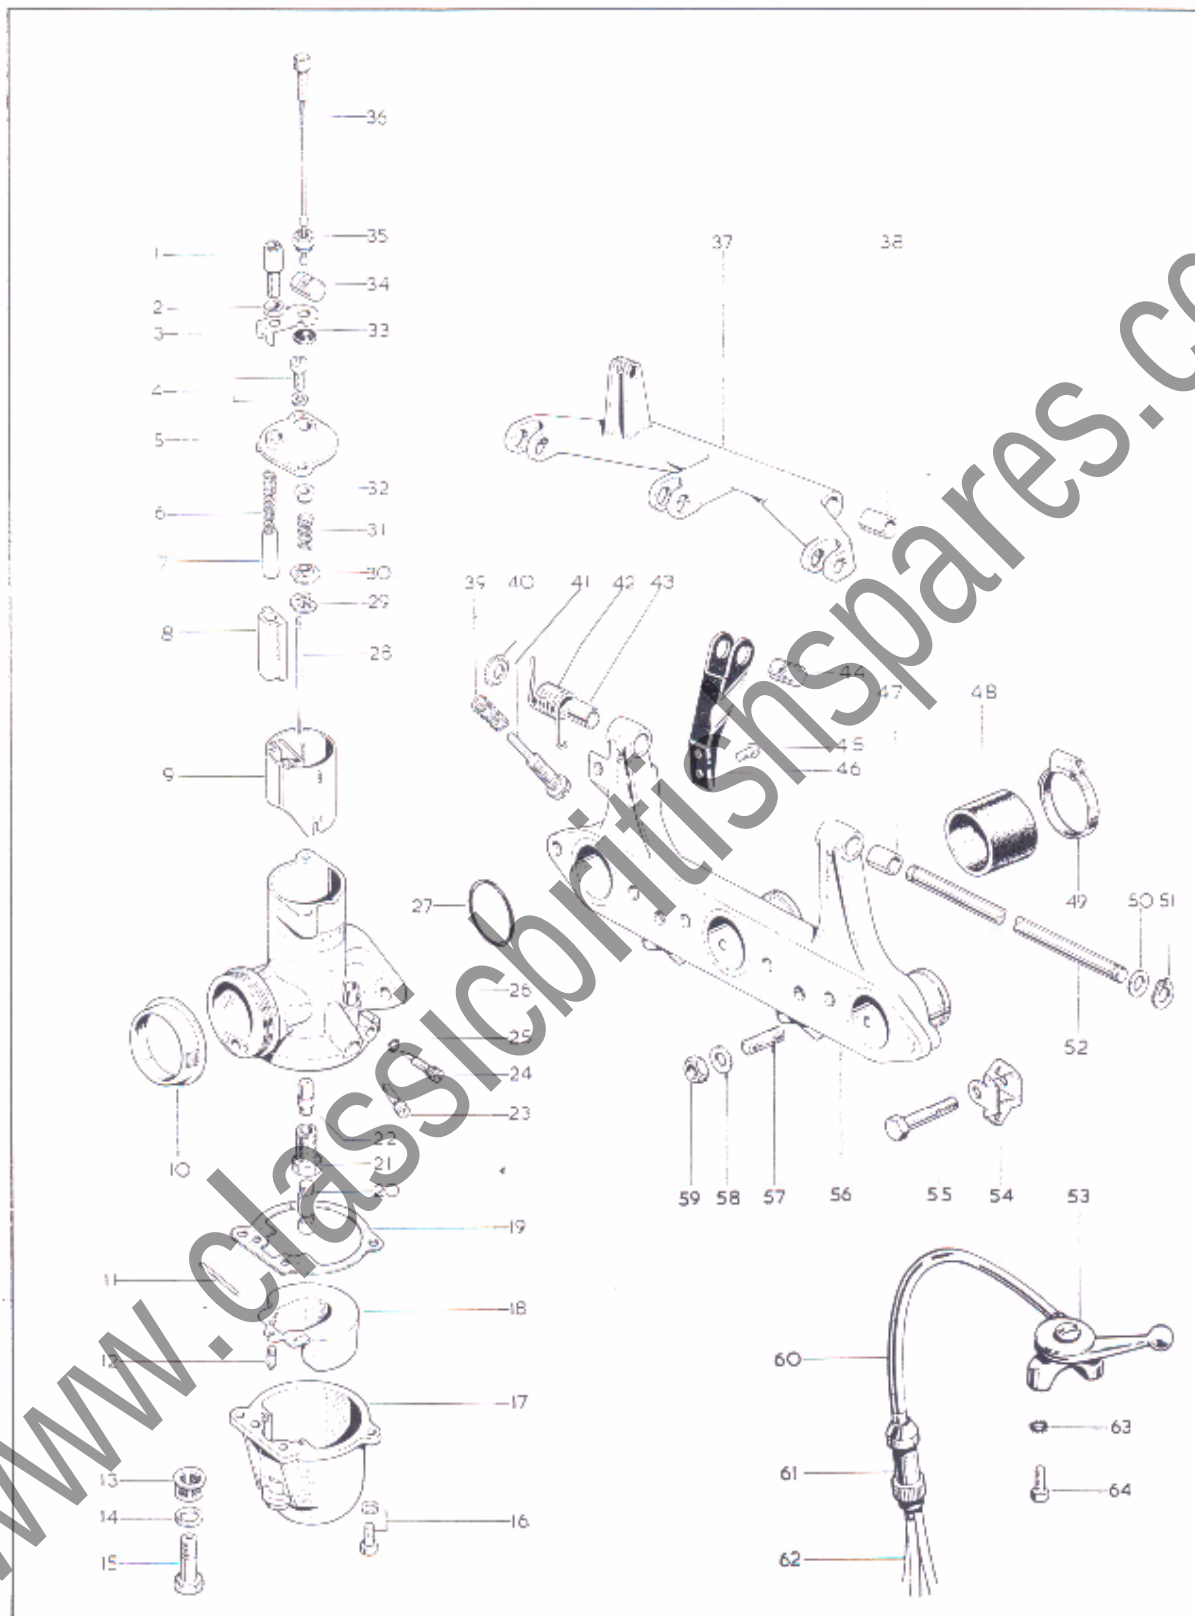

CARBURETTORS — THROTTLE LINKAGE

Plate Ref.	Part Number		Description	Per Set
	B.S.A. No.	Makers No.		
33		622/126	Seal washer — carburetter top cap	3
34	70-9243		Trunnion — throttle linkage	3
35	70-9253		Locknut — throttle rod	3
36	60-1984	622/119	Throttle assembly	3
37	70-9278		Arm assembly — throttle linkage	1
38	70-9073		Bush — throttle arm	2
39	70-9254		Spring — adjuster screw, throttle arm	1
40	70-9821		Retainer — throttle return spring	1
41	70-9252		Adjuster screw — throttle arm	1
42	70-9880		Spring — throttle arm return	1
43	70-9820		Distance piece — throttle return spring	1
44	70-9243		Trunnion — throttle linkage	1
45	21-0774		Screw — support arm to adaptor	2
46	70-9242		Support arm — throttle linkage	1
47	70-9073		Bush — adaptor spindle	2
48	70-9060		Connection tube	3
49			"Jubilee" clip — connection tube	6
50	71-0245		Washer — throttle arm spindle backing	1
51	70-9255		Circclip — throttle arm spindle	1
52	70-9251		Spindle — throttle arm	1
53	60-3567		Lever — air control	1
54	83-3665		Bracket — air control lever	1
55	14-0219		Bolt — air control lever bracket to carburetter adaptor ($\frac{5}{16}$ " UN.F. $\times$ $1\frac{1}{2}$ ")	1
56	71-1303		Carburetter adaptor	1
57	14-1619		Stud — carburetter mounting ($\frac{5}{16}$ " UN.C./UN.F. $\times$ $1\frac{1}{4}$ ")	6
58	54-0055		Washer — carburetter mounting ($\cdot 344" \times \cdot 625" \times \cdot 063"$)	6
59	14-0302		Nut — carburetter mounting ($\frac{5}{16}$ " UN.F.)	6
60	60-3566		Cable — air control, lever to junction box	1
61	60-1978		Junction box — air control cable	1
62	60-2061		Cable — air control, junction box to carburetters	3
63	54-0170		Washer — shakeproof, air control lever fixing bolt	1
64	40-3044		Bolt — air control lever to bracket (2 B.A. $\times$ $\frac{3}{4}$ ")	2

Note:—Where a part number is not quoted, that part is available from manufacturers only.

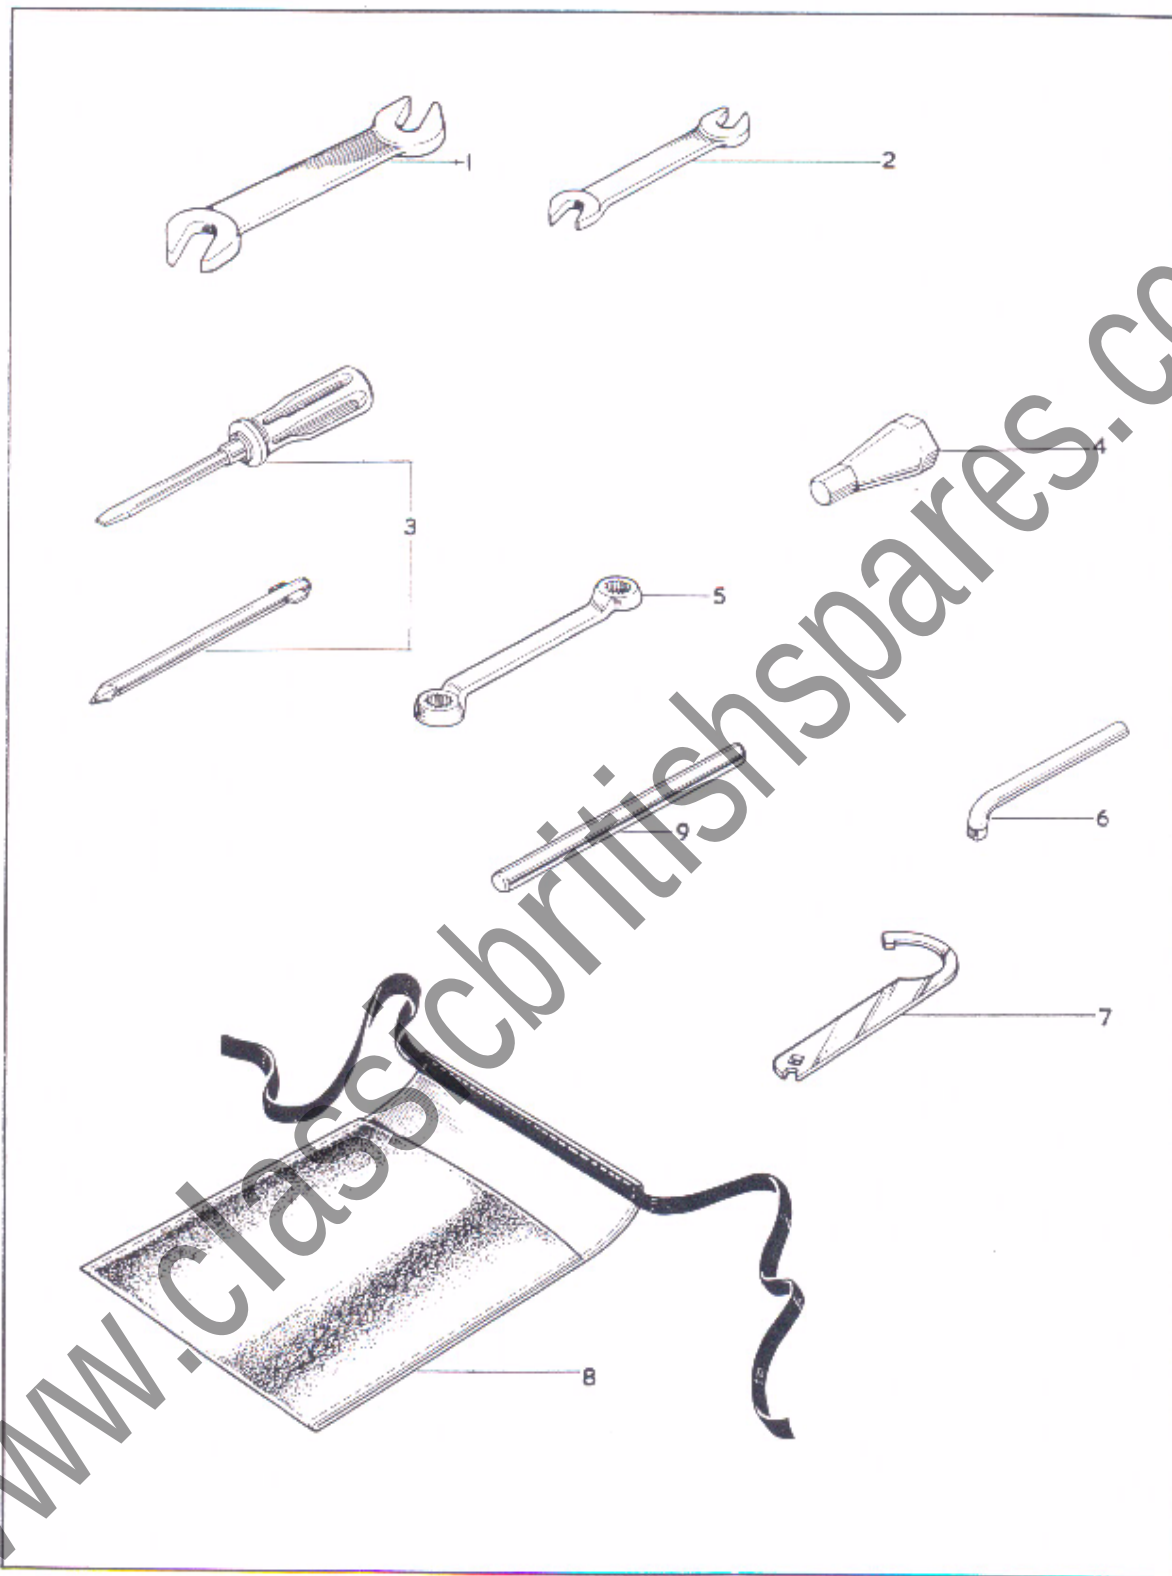

TOOLS

Plate Ref.	Part No.	Description	Per Set
	60-3351	Toolkit complete	1
1	60-2647	Double open-ended spanner ($\frac{3}{4}$ " $\times$ $\frac{15}{16}$ " A.F.)	1
2	60-3350	Double open-ended spanner ($\frac{11}{32}$ " $\times$ $\frac{9}{16}$ " A.F.)	1
3	60-0767	Screwdriver complete	1
4	60-1910	Spark plug spanner	1
5	60-1907	Double-ended ring spanner ($\frac{7}{16}$ " $\times$ $\frac{1}{2}$ " A.F.)	1
6	60-2020	Tappet spanner	1
7	75-9076	"C" spanner with square socket	1
8	75-9089	Tool roll	1
9	60-1911	Tommy bar	1

NUMERICAL INDEX

Part No.	Page	Plate ref. No.	No. off	Part No.	Page	Plate ref. No.	No. off	Part No.	Page	Plate ref. No.	No. off
00-3172	5	—	—	14-0218	57	16	2	14 1903	37	11	1
00-3315	5	—	—	14-0219	53	30	2	14-6101	23	5	1
00-3466	5	—	—	14-0219	71	55	1	14 6101	51	16	1
00-3466	6	—	—	14 0220	39	51	2	14-6102	27	5	2
00-3467	5	—	—	14-0221	39	48	2	14-6107	45	44	1
00-3467	6	—	—	14-0234	43	6	1	14 6113	17	25	2
00 3468	5	—	—	14 0235	41	2	2	14-6121	29	21	1
00-3468	6	—	—	14-0237	37	1	1	14-6211	11	5	3
00 3469	5	—	—	14 0238	43	12	2	14-6211	11	5	4
00-3469	6	—	—	14-0301	13	68	6	14-6218	19	60	1
00-3470	5	—	—	14 0301	35	5	4	14 6218	21	105	1
00-3470	6	—	—	14-0301	51	23	4	14-6220	17	1	2
00-7009	5	—	—	14-0301	51	25	2	14 6223	21	98	1
				14-0302	21	89	2	14-6226	19	59	4
02 0047	67	14	2	14 0302	45	60	8	14 6226	21	104	5
02-0353	55	42	2	14-0302	61	2	1	14-6504	27	23	1
02-0370	19	66	1	14-0302	61	24	1	14-6504	27	1	3
02-0525	57	3	2	14 0302	71	59	6	14 6509	27	31	1
02 0525	57	3	2	14-0303	13	43	4	14-6515	25	23	1
02-0861	13	42	4	14 0303	13	15	4	14-6605	27	1	4
02-0923	39	47	5	14 0304	37	9	2	14 6606	17	14	3
02-0923	39	49	5	14-0304	39	34	2	14-6606	23	9	2
02-0923	39	52	10	14 0305	49	44	1	14 6608	19	72	5
02 0923	59	21	1	14-0401	19	63	3	14-6608	35	24	1
02-1733	55	35	2	14-0401	41	7	1	14 6610	25	28	3
02-1967	37	10	2	14-0401	41	7	1	14-6610	27	41	1
02-1967	39	33	2	14-0402	13	58	6	14 6611	19	46	1
02-2138	37	2	1	14 0402	23	42	1	14-6611	27	19	6
02 2138	41	25	2	14-0402	27	49	1	14-6612	19	47	4
02-2138	57	6	3	14 0404	41	42	1	14-6612	27	25	1
				14-0405	41	49	2	14-6613	27	10	2
03-0101	61	11	1	14-0604	51	28	4	14-6613	35	13	1
03 0101	61	23	1	14-1019	45	57	2	14-6614	29	23	2
03-0107	37	23	2	14-1201	11	34	2	14 6615	27	20	1
03-1346	41	36	2	14-1201	51	35	2	14-6615	35	15	2
				14-1201	55	37	4	14-7004	13	50	6
04-2610	59	1	4	14-1202	57	11	3	14-7004	13	50	6
04-7431	57	13	1	14-1202	67	10	4	14-7006	23	8	7
				14-1301	49	9	5	14-7101	29	19	1
14-0101	51	14	2	14-1301	51	10	2				
14 0101	51	27	2	14-1301	53	15	2	15-0431	37	15	2
14-0101	55	40	4	14-1301	58	3	2	15-0431	37	19	2
14-0101	57	2	2	14-1301	59	14	3	15-0431	49	—	—
14-0101	67	7	2	14-1302	21	82	1	15 5155	41	17	1
14-0102	51	19	2	14-1302	35	22	1				
14-0102	51	33	2	14-1302	37	6	2	19-0916	65	24	1
14-0103	51	9	4	14-1302	39	32	1	19-0960	63	2	1
14-0103	57	26	1	14-1302	39	41	2	19-1064	63	5	1
14-0103	67	6	2	14-1302	39	46	5	19-1067	65	37	4
14-0106	41	8	1	14-1302	39	54	5	19-1068	65	38	4
14-0106	41	8	1	14-1302	53	33	2	19-1071	65	43	2
14-0113	41	21	1	14-1303	37	26	2	19-1072	65	43	2
14 0115	39	50	3	14-1303	41	6	2	19-1079	65	46	1
14-0129	55	36	2	14-1303	41	26	2	19-1095	63	7	1
14 0133	49	—	—	14-1303	43	17	2	19-1098	65	45	1
14 0145	37	16	1	14-1303	43	25	1	19-1099	65	36	1
14-0201	35	18	1	14-1303	49	25	1	19-1245	65	27	1
14-0202	11	17	4	14-1303	55	34	2	19-1249	65	44	1
14-0205	11	29	2	14 1304	49	—	—	19-1259	19	53	1
14-0206	51	29	1	14-1307	49	17	1	19-1260	19	52	1
14-0207	49	4	5	14-1401	11	14	4	19-1332	53	10	1
14-0208	17	35	1	14-1427	17	24	2	19-1332	63	19	1
14 0217	39	44	2	14-1619	71	57	6	19-1333	53	3	1
14-0217	41	18	1	14-1635	47	32	1	19-1333	63	19	1
14-0217	59	22	1	14-1803	47	29	1	19 1334	65	23	1
14-0218	39	55	3	14 1901	27	36	1	19-1335	63	22	2
				14-1902	49	28	2	19 1338	59	10	2

NUMERICAL INDEX—contd.

Part No.	Page	Plate ref. No.	No. off	Part No.	Page	Plate ref. No.	No. off	Part No.	Page	Plate ref. No.	No. off
19-1349	63	12	1	19-5175	7	—	—	21-0547	35	6	4
19-1352	63	17	1	19-5176	7	—	—	21-0548	19	67	1
19-1353	55	—	1	19-5177	7	—	—	21-0550	11	27	2
19-1715	67	21	1	19-5178	7	—	—	21-0557	13	70	6
19-1735	67	22	1	19-5179	7	—	—	21-0559	23	26	2
19-1847	67	13	3	19-5180	7	—	—	21-0567	27	15	1
19-1848	67	18	1	19-5181	7	—	—	21-0578	43	33	1
19-1861	67	12	1	19-5182	7	—	—	21-0585	23	1	1
19-1863	19	69	1	19-5183	7	—	—	21-0589	45	40	2
19-1864	17	31	1	19-5184	7	—	—	21-0594	29	25	1
19-1865	17	28	1	19-5185	7	—	—	21-0678	21	94	1
19-1881	67	5	3	19-5186	7	—	—	21-0680	25	24	3
19-1888	17	30	2	19-5187	7	—	—	21-0681	25	30	1
19-1893	67	4	3	19-5188	7	—	—	21-0686	13	40	4
19-1899	67	4	3	19-5189	7	—	—	21-0692	17	7	10
19-1914	67	19	1	19-5190	7	—	—	21-0752	59	1	2
19-1915	67	16	1	19-5191	7	—	—	21-0754	59	17	1
19-2084	67	9	1	19-5192	7	—	—	21-0755	41	33	1
19-2408	69	26	1	19-5193	7	—	—	21-0767	53	29	2
19-2409	69	25	1	19-5194	7	—	—	21-0768	57	5	3
19-2415	69	25	1	19-5195	7	—	—	21-0769	41	41	1
19-2433	6	—	—	19-5196	7	—	—	21-0774	71	45	2
19-2434	6	—	—	19-5197	7	—	—	21-0779	37	14	1
19-2435	6	—	—	19-5198	7	—	—	21-0780	37	20	1
19-2711	69	1	3	19-5199	7	—	—	21-1809	43	32	2
19-2834	69	14	3	19-5200	7	—	—	21-1813	21	87	2
19-3048	69	13	3	19-5305	41	4	2	21-1819	23	39	1
19-3090	69	27	3	19-5305	41	24	2	21-1820	23	4	1
19-3091	69	8	3	19-6048	55	46	1	21-1852	19	50	3
19-3093	69	4	6	19-6050	55	46	1	21-1860	35	21	1
19-3093	69	16	6	19-6508	67	23	1	21-1862	31	59	2
19-3095	69	29	3	19-7222	53	14	1	21-1872	31	55	1
19-3098	69	25	6	19-7237	53	13	1	21-1912	17	6	4
19-3099	69	20	3	19-7447	41	1	2	21-1931	17	3	4
19-3102	69	18	3	19-7465	47	34	2	21-1940	59	11	4
19-3103	69	15	3	19-7467	47	35	20	21-1981	57	22	2
19-3105	69	12	3	19-7472	41	3	2	21-1993	61	9	1
19-3106	69	19	3	19-7606	11	38	3	21-2016	15	12	6
19-3113	69	24	3	19-7641	11	37	3	21-2018	37	24	1
19-3116	69	11	3	19-7741	47	21	2	21-2048	53	7	2
19-3129	69	9	3	19-7742	47	20	2	21-2062	43	20	2
19-3132	69	17	3	19-7743	47	18	1	21-2099	41	22	1
19-3136	69	22	3	19-7744	47	19	2	21-2099	41	43	1
19-3137	69	28	3	19-7745	47	36	2	21-2102	45	56	2
19-5151	7	—	—	19-7800	5	—	—	21-2106	33	4	3
19-5152	7	—	—	19-7800	25	—	1	21-6206	61	21	6
19-5153	7	—	—	19-7801	25	15	1				
19-5154	7	—	—	19-7802	25	31	1	24-7068	57	23	2
19-5155	7	—	—	19-7803	25	18	1	24-8784	55	43	2
19-5156	7	—	—	19-7804	25	17	1				
19-5157	7	—	—	19-7805	25	16	1	26-9461	65	25	4
19-5158	7	—	—	19-7806	25	35	12				
19-5159	7	—	—	19-7807	25	34	6	27-6810	47	16	40
19-5160	7	—	—	19-7808	25	33	1	27-8560	51	11	2
19-5161	7	—	—	19-7809	25	—	1	27-8560	51	13	2
19-5162	7	—	—	19-8692	25	6	1	27-8560	57	27	2
19-5163	7	—	—	19-8948	67	2	1	27-8560	59	15	4
19-5164	7	—	—	19-8949	67	2	1				
19-5165	7	—	—	19-8950	67	1	1	29-0541	45	—	1
19-5166	7	—	—	19-9080	67	2	1	29-0541	35	4	4
19-5167	7	—	—	19-9107	67	27	1	29-0541	51	30	1
19-5168	7	—	—	19-9108	67	30	1	29-3319	67	15	2
19-5169	7	—	—	19-9225	49	15	1	29-7583	39	—	2
19-5170	7	—	—								
19-5171	7	—	—	21-0536	23	35	1	36-0382	41	20	1
19-5172	7	—	—	21-0541	35	25	1				
19-5173	7	—	—	21-0544	35	19	1				
19-5174	7	—	—	21-0547	21	97	3				

NUMERICAL INDEX—contd.

Plate ref.				Plate ref.				Plate ref.			
Part No.	Pgae	No.	No. off	Part No.	Page	No.	No. off	Part No.	Page	No.	No. off
37-0553	49	11	1	40-0242	15	13	2	57-0731	29	27	1
37-0653	47	3	1	40-0323	17	17	1	57-0732	29	26	1
37-0653	47	10	1	40-0323	35	11	1	57-0912	27	44	1
37-0653	49	2	1	40-2705	13	69	6	57-0912	29	34	1
37-1237	47	2	1	40-2705	41	12	1	57-0912	31	42	1
37-1467	41	14	1	40-3044	51	4	2	57-0928	31	36	1
37-1467	49	31	1	40-3044	71	64	2	57-1250	29	30	1
37-1481	47	4	1	40-3085	35	27	1	57-1272	35	28	1
37-1656	49	12	1	40-4524	57	7	3	57-1606	31	43	1
37-2058	47	24	1	40-4524	57	9	3	57-1607	29	35	1
37-2294	49	18	40	40-4850	37	21	1	57-1607	31	41	1
37-2328	49	38	2	40-6040	49	29	1	57-1614	31	39	1
37-2338	47	30	1	40-8085	61	22	1	57-1645	27	13	1
37-3468	49	30	2	40-8436	59	16	2	57-1896	29	18	1
37-3655	77	33	3	40-9190	29	15	1	57-1918	31	46	1
37-3749	49	3	1					57-1920	21	100	1
37-3750	49	14	1	41-6078	49	39	2	57-1955	35	34	1
37-3751	49	13	1					57-1956	35	35	1
37-3752	49	1	1					57-1967	29	31	1
37-3753	49	10	1	42-4364	41	32	1	57-1967	29	29	1
37-3759	47	11	1	42-4574	65	26	2	57-2116	31	45	1
37-3761	47	23	2	42-5840	49	41	16	57-2166	11	23	4
37-3762	47	22	2	42-8010	61	1	1	57-2166	27	17	1
37-3796	47	6	1	42-8017	61	34	1	57-2173	35	32	1
37-3797	47	8	1	47-9012	39	30	1	57-2176	31	50	1
37-3818	47	17	1	47-9012	41	28	1	57-2214	25	10	1
37-3819	47	12	10	47-9012	41	46	2	57-2215	27	26	1
37-3820	47	14	10					57-2220	27	14	1
37-3821	47	15	20	54-0022	19	62	3	57-2259	27	21	1
37-3846	5	—	—	54-0022	45	43	1	57-2297	35	40	1
37-3848	5	—	—	54-0043	29	9	1	57-2330	35	29	1
37-3848	47	5	1	54-0055	19	2	8	57-2331	41	38	1
37-3867	47	27	1	54-0055	19	31	3	57-2465	27	45	1
37-3868	47	27	1	54-0055	21	8	2	57-2473	27	7	2
37-3870	49	35	1	54-0055	21	93	7	57-2474	27	6	1
37-3872	49	34	1	54-0055	23	38	2	57-2478	25	4	1
37-3876	49	40	2	54-0055	35	20	1	57-2479	25	36	1
37-3880	49	32	1	54-0055	35	23	1	57-2480	25	3	1
37-3899	5	—	—	54-0055	71	58	6	57-2547	27	47	1
37-3900	5	—	—	54-0170	71	63	2	57-2552	25	32	1
37-3900	49	7	1	54-4302	39	29	1	57-2553	27	4	1
37-3901	49	45	1	54-4302	41	27	1	57-2554	25	27	1
37-3903	49	5	1	54-4302	41	45	2	57-2555	25	22	1
37-3916	49	27	1	54-4302	49	—	1	57-2557	25	29	1
37-3919	49	24	1	54-4307	41	23	2	57-2580	25	20	1
37-3920	49	19	1	54-4307	43	16	2	57-2603	35	14	1
37-3921	49	22	10	54-4307	43	23	1	57-2656	29	8	1
37-3922	49	21	10	54-9012	17	40	3	57-3163	31	37	1
37-3923	49	20	20	54-9017	65	—	2	57-3194	27	9	1
37-3925	49	36	1	54-9081	11	2	4	57-3610	27	30	1
37-3926	49	37	1	54-9081	11	18	4	57-3614	27	27	1
37-3932	47	9	1	54-9081	11	30	4	57-3617	27	28	1
37-3935	5	—	—	54-9081	51	34	2	57-3632	35	32	1
37-3955	5	—	—					57-3633	29	2	1
37-3956	49	33	1	57-0023	35	36	1	57-3634	31	54	1
37-3961	49	29	1	57-0024	35	39	1	57-3638	27	8	2
37-3976	49	16	1	57-0031	35	38	1	57-3642	23	37	1
37-3980	49	23	1	57-0047	35	37	1	57-3642	25	26	1
37-3985	47	31	1	57-0280	47	1	1	57-3643	25	7	1
37-3987	47	26	2	57-0397	29	14	1	57-3643	27	32	1
				57-0404	35	2	2	57-3644	25	2	1
40-0066	23	2	1	57-0405	35	8	2	57-3646	25	12	1
40-0156	13	51	6	57-0406	35	7	2	57-3647	27	48	1
40-0158	13	52	12	57-0407	35	3	1	57-3727	35	41	1
40-0159	11	26	1	57-0409	35	9	1	57-3733	27	12	1
40-0167	13	57	12	57-0412	29	20	1	57-3733	27	22	1
40-0236	67	17	2	57-0730	29	28	1	57-3756	25	25	1
								57-3757	35	16	1

NUMERICAL INDEX—contd.

Part No.	Plate ref.		
	Page	No.	No. off
57-3758	35	10	1
57-3759	35	12	1
57-3857	31	49	1
57-3861	31	47	1
57-3862	31	37	1
57-3871	5	—	—
57-3871	25	—	1
57-3889	31	48	1
57-3890	31	38	1
57-3890	31	38	1
57-3940	25	14	6
57-3941	25	13	3
57-3954	27	2	1
57-3955	27	3	1
57-3958	27	42	1
57-3983	27	39	1
57-3986	27	38	1
57-3987	27	37	1
57-3989	29	6	1
57-3989	33	23	1
57-3990	27	16	1
57-4004	25	1	1
57-4018	23	10	1
57-4051	31	44	1
57-4054	31	53	1
57-4055	29	7	2
57-4113	29	32	1
57-4117	35	40	1
57-4162	31	40	1
57-4166	31	47	1
57-4167	31	49	1
57-4168	31	38	1
57-4169	31	48	1
57-4175	31	52	1
57-4177	31	50	1
57-4178	31	52	1
57-4225	25	9	1
57-4288	29	12	1
57-4289	29	13	1
57-4290	29	11	1
57-4291	29	10	1
57-4307	31	58	1
57-4308	31	57	1
57-4314	31	51	1
57-4323	25	11	1
57-4324	25	5	12
57-4329	29	16	1
57-4345	31	40	1
57-4360	33	33	1
57-4363	33	34	1
57-4364	33	31	1
57-4366	33	32	1
57-4368	33	24	1
57-4370	33	10	1
57-4371	33	8	1
57-4374	33	37	1
57-4376	33	28	1
57-4377	33	27	1
57-4379	33	26	1
57-4380	33	25	1
57-4381	33	22	1
57-4382	33	8	1
57-4383	33	12	1
57-4384	33	15	1
57-4386	33	14	1
57-4387	33	16	1
57-4388	33	18	1
57-4390	33	17	1

Part No.	Plate ref.		
	Page	No.	No. off
57-4391	33	19	1
57-4393	33	20	1
57-4394	33	1	1
57-4395	33	6	1
57-4396	33	5	1
57-4397	33	7	1
57-4401	33	35	1
57-4402	33	36	1
57-4403	33	38	1
57-4423	33	30	1
60-0702	13	46	2
60-0706	57	18	2
60-0767	73	3	1
60-1841	49	—	1
60-1907	73	5	1
60-1910	73	4	1
60-1911	73	9	1
60-1928	29	17	2
60-1959	69	32	3
60-1960	69	31	3
60-1978	71	61	1
60-1984	71	36	3
60-1987	69	30	3
60-2016	49	6	1
60-2020	73	6	1
60-2045	67	24	1
60-2046	67	2	1
60-2047	67	3	1
60-2048	67	3	1
60-2061	71	62	3
60-2071	53	11	1
60-2072	53	9	1
60-2202	53	16	1
60-2320	21	83	6
60-2320	49	8	5
60-2320	51	15	1
60-2320	51	17	2
60-2320	51	24	4
60-2320	67	11	4
60-2321	37	7	2
60-2322	37	27	2
60-2329	45	65	1
60-2330	39	31	1
60-2330	39	42	2
60-2331	49	26	1
60-2333	43	19	2
60-2338	43	31	2
60-2338	51	26	2
60-2338	55	38	4
60-2338	55	38	4
60-2364	27	46	3
60-2364	35	26	1
60-2370	23	12	1
60-2417	51	18	2
60-2427	51	8	4
60-2428	45	59	8
60-2431	49	43	1
60-2438	45	70	1
60-2445	53	6	1
60-2600	67	26	1
60-2600	67	29	1
60-2630	43	18	2
60-2632	47	7	1
60-2639	47	25	2
60-2647	73	1	1
60-2683	41	11	1

Part No.	Plate ref.		
	Page	No.	No. off
60-2683	41	34	2
60-2720	45	64	1
60-3148	53	—	1
60-3276	57	21	1
60-3278	53	27	2
60-3313	51	36	1
60-3350	73	2	1
60-3351	73	—	1
60-3494	33	13	1
60-3494	33	21	1
60-3500	33	11	1
60-3510	33	2	1
60-3511	33	29	2
60-3531	33	3	1
60-3552	29	33	1
60-3556	29	4	1
60-3557	53	8	1
60-3566	71	60	1
60-3567	71	53	1
60-3583	53	12	1
60-3585	53	5	1
60-3586	53	4	1
60-3632	55	47	1
60-3657	53	2	1
60-3669	47	13	1
60-0645	45	28	2
68-0209	19	68	1
68-0331	17	34	1
68-0331	35	31	1
68-0597	51	2	2
68-0610	59	24	1
68-3218	25	19	1
68-3218	33	9	1
68-3264	27	11	1
68-4577	57	12	1
68-4597	57	14	1
68-4708	41	44	1
68-4835	39	43	2
68-5050	43	35	1
68-8013	61	35	1
68-8016	61	3	1
68-8035	61	33	1
68-8174	61	4	1
68-9115	39	39	3
68-9226	55	49	3
68-9337	39	38	6
70-0402	23	36	1
70-1523	21	92	1
70-1532	15	5	6
70-1532	23	29	1
70-1558	21	79	2
70-1591	15	24	1
70-1670	23	18	1
70-3974	19	65	1
70-4705	23	7	1
70-4746	15	38	4
70-4746	15	39	4
70-4752	15	1	4
70-5977	27	33	2
70-5998	15	27	6
70-6018	13	48	2
70-6023	15	18	4
70-6025	15	25	2
70-6026	15	20	2

NUMERICAL INDEX—contd.

Part No.	Page	Plate ref. No.	No. off
70-6038	23	20	1
70-6039	23	22	1
70-6061	27	34	1
70-6130	19	57	1
70-6173	19	61	1
70-6299	17	15	1
70-6420	13	65	6
70-6422	13	66	3
70-6423	13	44	3
70-6430	23	21	1
70-6454	23	23	1
70-6455	23	30	1
70-6459	23	32	1
70-6498	15	9	1
70-6501	21	85	1
70-6502	23	19	1
70-6508	15	37	2
70-6509	15	34	2
70-6519	17	38	1
70-6521	17	33	3
70-6522	19	54	3
70-6523	21	78	2
70-6524	19	64	1
70-6529	5	—	—
70-6529	15	6	1
70-6559	17	32	3
70-6560	15	36	4
70-6561	11	3	1
70-6562	11	9	1
70-6563	11	1	1
70-6564	11	13	1
70-6565	11	12	1
70-6567	23	13	1
70-6570	23	28	2
70-6571	19	58	1
70-6573	21	101	1
70-6574	21	102	1
70-6577	15	19	3
70-6580	21	84	1
70-6584	23	15	1
70-6742	23	14	1
70-6743	11	32	1
70-6744	11	36	3
70-6838	15	30	3
70-6838	6	—	—
70-6838	15	32	3
70-6838	15	33	3
70-6840	15	28	6
70-6848	59	27	2
70-6885	23	44	1
70-6890	23	46	1
70-6955	15	40	4
70-7246	23	43	1
70-7246	23	3	1
70-7351	61	14	1
70-7351	15	17	2
70-7357	21	99	1
70-7357	19	70	1
70-7379	19	43	1
70-7386	23	40	1
70-7951	5	—	—
70-7983	13	71	3
70-8720	13	55	6
70-8731	23	25	2
70-8732	23	33	4
70-8738	17	5	2
70-8740	17	19	1
70-8741	17	18	1

Part No.	Page	Plate ref. No.	No. off
70-8742	17	16	1
70-8744	17	12	1
70-8745	15	22	4
70-8746	15	14	1
70-8751	17	4	2
70-8755	21	91	1
70-8756	17	29	1
70-8760	19	73	1
70-8763	19	48	1
70-8764	17	10	1
70-8765	17	11	1
70-8768	21	75	1
70-8770	17	8	10
70-8770	41	5	2
70-8773	11	21	2
70-8774	17	9	2
70-8774	17	23	2
70-8776	17	26	2
70-8778	5	—	—
70-8778	15	23	1
70-8779	21	86	2
70-8780	15	21	1
70-8781	13	39	1
70-8782	11	22	4
70-8782	27	18	1
70-8783	13	59	6
70-8784	15	14	1
70-8785	23	47	1
70-8786	23	6	1
70-8787	13	62	6
70-8788	13	63	6
70-8789	13	64	6
70-8817	15	4	8
70-8819	11	10	2
70-8820	11	8	4
70-8860	11	33	3
70-8890	31	56	1
70-8904	59	28	1
70-8905	13	47	1
70-8906	59	13	1
70-8907	59	29	1
70-8914	15	7	3
70-8917	15	35	6
70-8981	13	67	3
70-9015	6	—	—
70-9016	6	—	—
70-9017	6	—	—
70-9018	6	—	—
70-9023	15	27	6
70-9024	15	27	6
70-9025	15	27	6
70-9026	15	27	6
70-9027	15	18	4
70-9028	15	18	4
70-9029	15	18	4
70-9030	15	18	4
70-9060	71	48	2
70-9073	71	38	2
70-9073	71	47	2
70-9138	57	20	1
70-9237	11	16	4
70-9239	11	15	4
70-9240	11	7	8
70-9242	71	46	1
70-9243	71	34	3
70-9243	71	44	1
70-9251	71	52	1
70-9252	71	41	1

Part No.	Page	Plate ref. No.	No. off
70-9253	71	35	3
70-9254	71	39	1
70-9255	71	51	1
70-9256	27	40	1
70-9258	27	29	2
70-9258	27	35	1
70-9266	19	41	2
70-9278	71	37	1
70-9237	31	60	1
70-9465	15	8	4
70-9510	13	41	3
70-9558	13	49	2
70-9586	69	10	3
70-9601	23	34	1
70-9626	11	35	4
70-9706	17	21	1
70-9727	15	11	6
70-9739	6	—	—
70-9739	15	31	3
70-9739	15	31	3
70-9740	5	—	—
70-9740	15	10	3
70-9741	6	—	—
70-9741	15	29	3
70-9761	6	—	—
70-9762	6	—	—
70-9763	6	—	—
70-9764	6	—	—
70-9765	6	—	—
70-9766	6	—	—
70-9767	6	—	—
70-9768	6	—	—
70-9807	21	74	1
70-9820	71	43	1
70-9821	71	40	1
70-9843	15	26	4
70-9856	21	90	2
70-9880	71	42	1
70-9885	23	24	1
70-9887	23	31	1
71-0003	23	27	3
71-0006	19	44	1
71-0037	35	1	1
71-0070	13	60	6
71-0245	71	50	1
71-0280	11	6	2
71-1050	21	103	1
71-1051	23	45	1
71-1070	19	56	1
71-1127	5	—	—
71-1129	15	16	4
71-1130	19	42	1
71-1157	11	28	1
71-1168	11	25	1
71-1172	13	45	1
71-1175	11	24	1
71-1238	15	2	6
71-1270	19	55	1
71-1287	11	20	1
71-1287	13	54	1
71-1288	11	19	1
71-1288	13	53	1
71-1289	13	56	1
71-1290	11	11	1
71-1303	71	56	1
71-1349	21	81	6

NUMERICAL INDEX—contd.

Plate ref.				Plate ref.				Plate ref.			
Part No.	Page	No.	No. off	Part No.	Page	No.	No. off	Part No.	Page	No.	No. off
71-1351	5	—	—	82-8476	41	48	1	83-2211	43	29	2
71-1351	23	—	—	82-8477	41	31	2	83-2726	51	20	1
71-1353	23	41	1	82-8478	41	30	2	83-2727	51	21	1
71-1439	17	20	1	82-8495	57	1	1	83-2728	51	22	1
71-1441	17	37	1	82-8508	37	13	1	83-2736	51	38	1
71-1443	19	45	1	82-8509	39	53	3	83-2747	61	7	1
71-1444	17	27	2	82-8510	37	17	1	83-2800	61	15	1
71-1445	11	4	1	82-8513	39	37	1	83-2801	61	15	1
71-1446	13	72	6	82-8549	57	24	3	83-2834	51	1	1
71-1447	31	61	1	82-8582	41	47	1	83-3117	55	44	1
71-1450	35	42	1	82-8588	61	18	1	83-3124	53	26	1
71-1451	29	3	1	82-8589	61	18	1	83-3128	59	5	2
71-1452	25	21	1	82-8590	61	19	1	83-3146	61	32	1
71-1453	23	11	1	82-8591	61	19	1	83-3147	61	6	1
71-1454	25	8	1	82-8609	61	25	1	83-3160	51	12	1
71-1733	15	3	1	82-8610	61	20	1	83-3168	55	48	1
71-2211	23	16	1	82-8611	61	20	1	83-3199	59	25	1
71-2246	21	95	1	82-8627	59	32	1	83-3211	51	17	2
71-2248	21	77	1	82-8660	41	40	1	83-3239	41	9	1
71-2249	21	76	1	82-8743	57	19	1	83-3241	41	10	1
71-2250	21	96	1	82-8918	39	36	1	83-3242	41	13	1
71-2369	23	17	1	82-8946	61	27	4	83-3243	41	16	1
71-2382	55	41	1	82-8947	61	26	4	83-3248	41	16	1
71-2422	5	—	—	82-9008	57	10	3	83-3246	51	32	1
71-2424	17	22	1	82-9020	57	4	2	83-3250	51	31	1
71-2455	11	31	1	82-9046	43	21	2	83-3260	37	4	1
71-2457	11	31	1	82-9315	59	12	1	83-3266	49	42	1
71-2660	23	2	1	82-9322	59	6	8	83-3269	67	8	1
71-2718	21	80	2	82-9378	37	3	1	83-3270	61	29	1
71-2793	27	4	1	82-9379	37	8	1	83-3271	61	29	1
75-0039	41	35	2	82-9435	59	31	1	83-3278	5	—	—
75-0053	35	30	1	82-9436	61	16	1	83-3279	55	39	1
75-0124	13	61	2	82-9530	59	20	1	83-3280	55	39	1
75-0176	29	22	1	82-9531	59	26	1	83-3355	61	16	1
75-0223	19	49	1	82-9562	57	15	3	83-3438	55	46	1
75-02719	53	32	4	82-9571	59	8	2	83-3443	51	32	1
75-2725	53	31	2	82-9573	59	7	4	83-3665	71	54	1
75-3143	35	33	1	82-9574	59	—	1	83-3853	55	46	1
75-4909	55	50	4	82-9624	37	22	1	83-3875	61	31	1
75-9076	73	7	1	82-9625	37	12	1	89-3208	35	17	1
75-9089	73	8	1	82-9641	39	35	1	90-0262	17	13	2
76-0012	61	5	1	82-9642	37	18	1	90-6219	51	3	2
76-0101	59	2	2	82-9653	37	28	2	97-0095	45	67	1
76-0217	19	71	2	82-9654	57	25	3	97-0111	37	5	2
76-0217	27	43	2	82-9664	59	18	1	97-0435	45	69	1
76-0217	29	3	2	82-9684	39	40	1	97-0439	43	10	1
76-0217	29	24	2	82-9686	37	21	1	97-1527	45	36	2
76-0291	17	36	1	82-9906	59	9	2	97-1529	43	27	2
76-0293	65	—	2	82-9918	59	34	4	97-1580	45	38	2
76-4120	61	40	1	82-9919	61	30	1	97-1581	45	39	2
82-1335	43	1	2	82-9920	61	8	1	97-1797	45	68	1
82-3098	43	14	1	82-9964	53	28	2	97-2142	53	1	1
82-5943	37	25	4	82-9964	55	35	1	97-2221	45	37	2
82-6874	59	30	1	83-0002	61	13	1	97-2237	45	42	1
82-6981	67	20	1	83-0033	65	—	1	97-2266	43	34	1
82-7387	41	15	1	83-1384	57	28	1	97-2273	55	51	1
82-7431	57	17	1	83-1386	59	33	1	97-2275	45	41	1
82-7835	55	45	4	83-1387	59	23	1	97-2291	43	2	2
82-8250	61	28	4	83-1430	55	54	2	97-3875	45	71	1
82-8327	61	12	1	83-1535	41	50	2	97-3893	17	39	3
82-8382	41	39	1	83-1585	59	20	1	97-3893	45	61	2
82-8391	61	17	1	83-1628	41	37	1	97-3894	45	62	2
82-8463	57	8	1	83-1952	59	19	1	97-3947	45	58	2
82-8468	41	19	1	83-1984	57	29	2	97-4001	45	54	2
82-8475	41	29	2	83-2209	43	24	2	97-4002	45	53	2
				83-2209	43	30	2				

NUMERICAL INDEX—contd.

Part No.	Page	Plate ref.	
		No.	No. off
97-4003	.. 45	.. 47	.. 2
97-4004	.. 45	.. 52	.. 2
97-4007	.. 43	.. 11	.. 2
97-4009	.. 45	.. 50	.. 2
97-4010	.. 45	.. 48	.. 2
97-4020	.. 45	.. 46	.. 2
97-4021	.. 51	.. 6	.. 4
97-4022	.. 51	.. 7	.. 4
97-4026	.. 67	.. 25	.. 1
97-4026	.. 67	.. 28	.. 1
97-4033	.. 45	.. 55	.. 1
97-4034	.. 43	.. 9	.. 2

Part No.	Page	Plate ref.	
		No.	No. off
97-4048	.. 43	.. 28	.. 1
97-4076	.. 45	.. 51	.. 2
97-4085	.. 45	.. 63	.. 1
97-4102	.. 45	.. 66	.. 1
97-4112	.. 55	.. 52	.. 4
97-4137	.. 5	.. —	.. —
97-4138	.. 43	.. 15	.. 1
97-4145	.. 43	.. 7	.. 1
97-4157	.. 43	.. 8	.. 1
97-4159	.. 43	.. 5	.. 1
97-4162	.. 43	.. 22	.. 1

Part No.	Page	Plate ref.	
		No.	No. off
97-4163	.. 43	.. 22	.. 1
97-4166	.. 43	.. 4	.. 2
97-4215	.. 43	.. 13	.. 2
97-4242	.. 45	.. 49	.. 2
97-4244	.. 45	.. 45	.. 2
97-4245	.. 43	.. —	.. 1
97-4251	.. 55	.. 53	.. 1
97-4252	.. 55	.. 53	.. 1
97-4258	.. 43	.. 3	.. 2
97-4271	.. 51	.. 5	.. 1
97-4273	.. 51	.. 5	.. 1