

Owner's manual

SUPERBIKE

1199 **PANIGALE** ABS



Owner's manual

US/CANADA

SUPERBIKE

1199 PANIGALE ABS

We'd like to welcome you among Ducati enthusiasts and congratulate you on your excellent choice of motorcycle. We imagine you'll be riding your Ducati motorcycle for long trips as well as short daily excursions. Ducati Motor Holding S.p.A. wishes you smooth and enjoyable riding.

Your motorcycle is the result of constant research and development by Ducati Motor Holding S.p.A., so it's important that the standard of quality is upheld through careful observance of the scheduled maintenance chart and the use of original spare parts. In the Owner's Manual you'll find instructions for performing small maintenance procedures. The most important servicing and maintenance procedures are contained in the Service Manual available at Authorized Service Centers of Ducati Motor Holding S.p.A..

In your own interest and safety, and in order to guarantee product reliability, we strongly recommend that you go to an Authorized Dealer or Service Center for any servicing included on the scheduled maintenance chart, see page 276.

Our highly skilled staff has access to the special tools and equipment needed to perform any servicing procedure with expertise. They use only Ducati original spare parts as the best guarantee for full interchangeability, smooth running and long life.

All Ducati motorcycles come with a Warranty Booklet. The Warranty does not extend to motorcycles used in competitions or competitive trials. Any tampering or even partial modification of the components will result in automatic invalidation of Warranty rights. Incorrect or insufficient servicing procedures, use of non-original spare parts or parts not explicitly approved by Ducati may lead to the invalidation of the Warranty, besides potential damage and reduced performance.

Table of Contents

Introduction	7
Safety guidelines	7
Warning symbols used in the manual.	7
Permitted use	8
Rider's obligation	9
Reporting of safety defects	11
Rider education	12
Clothing	12
"Best Practices" for safety	14
Refueling	16
Carrying the maximum load allowed	17
Dangerous products - warnings	18
Vehicle ID number	20
Engine ID number	21
Plate positioning	22
Noise and exhaust emission control system information	28

California emission control warranty statement	28
Your warranty rights and obligations	28
Manufacturer's warranty coverage	29
Owner's warranty responsibilities	29
California evaporation emission system	30
Ducati limited warranty on emission control system	31

Instrument Panel (Dashboard)	34
Instrument Panel	34
Acronyms and abbreviations used in the Manual	38
Technological Dictionary	38
Function pushbuttons	41
How to set/display parameters	42
Main functions	50
Riding Mode	57
DTC	62
EBC	69
DQS	73
ABS	74
Menu 1 functions	77
Menu 1: Odometer (TOT)	78
Menu 1: Trip 1 (TRIP 1)	80

Menu 1: Trip 2 (TRIP 2)	82
Menu 1: Partial fuel reserve counter (TRIP FUEL)	84
Menu 1: LAP time	86
MENU 2 functions	90
MENU 2: Coolant temperature	91
MENU 2: Instantaneous fuel consumption	93
MENU 2: Average fuel consumption	94
MENU 2: Average speed	95
MENU 2: Trip time	96
MENU 2: External air temperature	97
Auxiliary functions	99
CLOCK	100
Service warning (SERVICE)	101
OIL SERVICE zero indication	102
OIL SERVICE or DESMO SERVICE indication	104
Warnings/Alarms (Warning)	105
Error indication	109
Displayed error description	111
Side stand status display	116
Setting MENU	117
Customizing Riding Modes	120
Customizing Riding Modes: ABS setting	123
Customizing Riding Modes: Display setting	126
Customizing Riding Modes: DQS enable/disable	129

Customizing Riding Modes: DTC level setting	132
Customizing Riding Modes: Engine setting	135
Customizing Riding Modes: EBC level setting	139
Customizing Riding Modes: Restore default settings	141
Engine rpm digital indication (RPM)	143
Battery voltage	144
DDA	146
Pin Code	151
Changing the PIN CODE	155
Clock setup	159
Setting the date	163
Setting the display background	168
LAP	170
Setting the unit of measurement	176
Other functions	187
Display background color	195
Light control	197
The Immobilizer system	202
Keys	203
Operation	204
Duplicate keys	205
Vehicle release through PIN CODE	206

Controls	210
----------	-----

Position of motorcycle controls 210
Key-operated ignition switch and steering lock 211
Left-hand switch 212
Clutch lever 213
Right-hand switch 214
Throttle twistgrip 215
Front brake lever 216
Rear brake pedal 217
Gear change pedal 218
Adjusting the position of the gearchange and rear brake pedals 219

Main components and devices 221
Position on the vehicle 221
Tank filler plug 222
Seat lock 223
Side stand 224
Steering damper 226
Adjusting the front fork 227
Adjusting the rear shock absorber 229
Changing the motorcycle track alignment 231

Riding the motorcycle 233

Break-in recommendations 233
Pre-ride checks 236
Starting the engine 239
Moving off 241
Braking 241
ABS system 241
Stopping the motorcycle 243
Parking 243
Refueling 244
Tool kit and accessories 245

Main maintenance operations 246
Remove the fairing 246
Side fairings 247
Change the air filter 248
Check and top up the coolant level 249
Check brake and clutch fluid level 251
Check brake pads for wear 253
Charge the battery 254
Charge and maintenance of the battery during winter storage 257
Check drive chain tension 259
Chain lubrication 261
Replace the high and low beam bulbs 262
Rear turn indicators 264

Beam setting 265
Adjust rear-view mirrors 267
Tubeless tyres 268
Check engine oil level 270
Clean and replace the spark plugs 272
Clean the motorcycle 273
Storing the motorcycle 274
Important notes 275

Scheduled maintenance chart 276
Scheduled maintenance chart: operations to be performed by the Dealer 276
Scheduled maintenance chart: operations to be performed by the customer 280

Technical data 281
Weights 281
Overall dimensions 282
Top-ups 283
Engine 284
Timing system 285
Performance data 286
Spark plugs 286
Fuel system 286

Brakes 286
Transmission 287
Frame 288
Wheels 288
Tires 288
Suspensions 288
Exhaust system 289
Available colors 289
Electrical system 290

Routine maintenance record 296
Routine maintenance record 296

Introduction

Safety guidelines

Your safety and that of others are very important. Ducati Motor Holding S.p.A. urges you to ride your motorcycle responsibly.

Before using your motorcycle for the first time, please read this manual carefully from start to finish and closely follow the guidelines. This will allow you to obtain all information regarding a correct use and maintenance. If you have any doubts or questions, consult a Dealer or Authorized Service Center.

Warning symbols used in the manual.

Different forms of information regarding potential hazards that may affect you or others have been used. These include:

- Safety stickers on the motorcycle;
- Safety warnings preceded by a warning symbol and by one or the two words CAUTION or IMPORTANT.



Attention

Failure to observe these instructions may lead to a hazardous situation and cause severe injury to the rider or others, or even death.



Important

Possibility of damaging the motorcycle and/or its components.



Note

Additional information regarding the job being performed.

The terms RIGHT and LEFT are referred to the motorcycle viewed from the riding position.

Permitted use

This motorcycle must be used only on road surfaces with asphalt or flat and even pavement. This motorcycle may not be used on dirt roads or for off-road riding.



Attention

Using the bike off-road may cause the rider to lose control, which in turn may lead to vehicle damage, injury or death.



Attention

This motorcycle must not be used for towing or for the addition of a sidecar, since this may cause a loss of control and consequent accident.

This motorcycle carries the rider and may carry one passenger upon installation of a dedicated kit performed exclusively at a Ducati Dealer or Authorized Service Center.



Attention

The total weight of the motorcycle in running order with rider, passenger, baggage and additional accessories must not exceed 816 lb/ 370 kg.

Rider's obligation

All riders must hold a driver's license.



Attention

Riding without a license is illegal and punishable by law. Make sure you always have your license on you when setting out on the motorcycle. Do not allow inexperienced riders or those not in possession of an authorized driver's license to ride the motorcycle.

Do not ride the motorcycle when under the influence of alcohol or drugs.



Attention

Riding under the influence of alcohol or drugs is illegal and punishable by law.

Avoid taking medication before riding the motorcycle if you have not consulted your doctor about potential side effects.



Attention

Some medications may induce sleepiness or other effects that impair reflexes and the ability of the rider to control the motorcycle, which may lead to accident.

Some countries require mandatory insurance coverage.



Attention

Check the laws applicable to your country. Take out an insurance policy and keep the policy in a safe place along with the other motorcycle documents.

To protect the safety of the rider and/or passenger, some countries have made it a law to wear a homologated helmet.



Attention

Check the laws applicable to your country. Riding without a helmet may be punishable by a fine.



Attention

Failure to be wearing a helmet in case of accident increases the chance of serious injury and even death.



Attention

Make sure that the helmet is in compliance with safety specifications, provides excellent visibility, is the correct size for the head, and has the DOT (Department of Transportation) label affixed to the helmet surface. Laws regulating traffic vary from country to country. Check the laws in force in your country before riding the motorcycle and pay strict adherence to them .



Attention

Tampering with Noise Control System Prohibited. Federal Law prohibits the following acts or causing thereof:

- 1) the removal or rendering inoperative by any person, other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; or
- 2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among the acts presumed to constitute tampering are those listed below:

- 1) Removal of, or puncturing the muffler, baffles, header pipes or any other component that conducts exhaust gases.
- 2) Removal or puncturing of any part of the intake system.
- 3) Lack of proper maintenance.
- 4) Replacing any moving part of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

This product should be checked for repair or replacement if the motorcycle noise has increased

significantly through use. Otherwise, the owner may become subject to penalties under state and local ordinances.

Reporting of safety defects

If you believe your vehicle has a defect that could cause a crash or cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA), in addition to notifying Ducati North America, 10443 Bandle Drive Cupertino, California, 95014, Tel: 001.408.253.0499, Fax: 001.408.253.4099. If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Ducati North America. To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, 1200 New Jersey Avenue SE W43-488, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.

Rider education

Accidents are frequently due to inexperience. Riding, maneuvering and or braking are carried out differently from other vehicles.



Attention

A rider's lack of preparation or an inappropriate use of the vehicle may result in a loss of control, death or serious damage.

Check your knowledge of current "TRAFFIC LAWS"; read carefully and familiarize yourself with the contents of the M.O.M (Motorcycle Operator Manual) pertinent to your state available at the M.S.F. website (Motorcycle Safety Foundation) (www.msfsa.org).

You are strongly recommended to take a riding course approved by the M.S.F. (Motorcycle Safety Foundation).

Clothing

Clothing in the use of the motorcycle plays an important role in safety, as the motorcycle provides a person no protection from impact in the same way as an automobile.

Suitable clothing includes: helmet, eye protection, gloves, boots, long-sleeved jacket and long pants.

- The helmet must have the requisites as listed on page 9, if the helmet model has no visor, use suitable goggles;
- Gloves must have five fingers and be made of leather or other abrasion-resistant material;
- Boots or shoes used for riding must have non-slip soles and ankle protection;
- Jacket and pants, or even riding suits, must be made of leather or abrasion-resistant material and in a color with inserts that are very visible.



Important

In any case, avoid wearing loose or floppy clothing that can become stuck in the motorcycle parts.



Important

For your safety this type of clothing must be used in both summer and winter.



Important

For the safety of the passenger, make sure that he or she also wears appropriate clothing.

"Best Practices" for safety

Before, during and after use, remember to follow some simple rules that are extremely important for safety and for maintaining the motorcycle at top efficiency.



Important

During the whole running-in period, the indications recommended in section "Riding the Motorcycle" shall be observed carefully. Failure to follow these instructions releases Ducati Motor Holding S.p.A. from any liability whatsoever for any engine damage or shorter engine life.



Attention

Do not ride the motorcycle unless you are well familiarized with the controls to be used during the ride.

Before starting the motorcycle, always perform the checks detailed in this manual (see page 241).



Attention

Failure to perform checks may cause damage to the vehicle and serious injury to the rider and/or passenger.



Attention

Start the engine when outdoors or in a well ventilated place. Never start the engine in a closed environment.

Exhaust gases are poisonous and may lead to loss of consciousness or even death within a short time. During the ride, assume a correct body position and make sure the passenger does the same.



Important

The rider should ALWAYS keep both hands on the handlebar.



Important

Both rider and passenger should keep their feet on the footpegs when the motorcycle is in motion.



Important

The passenger should always hold on to the strap on passenger seat with both hands.



Important

Be very careful when maneuvering intersections or when riding in areas near exits from private grounds, parking lots or access roads to highways.



Important

Be sure you are clearly visible and do not ride in the blind spot of the vehicles ahead.



Important

ALWAYS signal your intention to turn or pull over to the next lane with due warning using the turn indicators.



Important

Park your motorcycle where no one is likely to hit it, and use the side stand. Never park on uneven or soft ground or your motorcycle may fall over.



Important

Visually inspect the tires at regular intervals for cracks and cuts, especially on sidewalls, bulges or large spots which are indicative of internal damage. Replace them if badly damaged. Remove any stones or other foreign bodies caught in the tread.



Attention

The engine, exhaust pipes and mufflers stay hot for a long time after the engine has been turned off. Be especially careful not to touch the exhaust system with any part of the body and never park the motorcycle near flammable materials (wood, leaves, etc.).



Attention

When you leave the motorcycle unattended, always remove the ignition key and make sure it is inaccessible to anyone unsuitable to ride the motorcycle.

Refueling

Refuel the motorcycle in an open area and with the engine switched off.

Do not smoke or ever use flames during refueling. Be careful never to drop fuel on the engine or exhaust pipe.

When refueling, do not fill the tank completely: fuel should never be touching the rim of filler recess.

When refueling, avoid inhaling fuel vapors and take care that they do not come in contact with eyes, skin or clothing.

Attention

The vehicle is compatible only with fuel having a maximum content of ethanol of 10% (E10).

Using fuel with ethanol content over 10% is prohibited. Using it could result in severe damage of the engine and motorcycle components. Using fuel with ethanol content over 10% will render the Warranty null and void.

Attention

In case of malaise caused by prolonged inhalation of fuel vapors, stay outdoors and consult a physician. In case of contact with eyes, rinse eyes thoroughly with water. In case of contact with skin, wash the area immediately with soap and water.

Attention

Fuel is highly flammable. If it accidentally spills onto clothes, change them.

Carrying the maximum load allowed

Your motorcycle is designed for long-distance riding with the maximum load allowed carried in full safety. Even weight distribution is critical to preserving these safety features and avoiding difficulties when performing sudden maneuvers or riding on bumpy roads.



Attention

Do not exceed the total permitted weight for the motorcycle and pay attention to the information below regarding load capacity.

Information about carrying capacity



Important

Arrange your luggage or heavy accessories in the lowest possible position and close to motorcycle center.



Important

Never fix bulky or heavy objects to the steering head or front mudguard, as this would affect stability and be dangerous.



Important

Be sure to secure the luggage to the supports provided on the motorcycle as firmly as possible. Improperly secured luggage may affect stability.



Important

Do not insert any objects you may need to carry into the gaps of the frame, as these may interfere with moving parts.



Attention

Make sure tires are inflated to the correct pressure and that they are in good condition.

Please refer to paragraph "Tires" on page 268.

Dangerous products - warnings

Used engine oil



Attention

Prolonged or repeated contact with used engine oil may cause skin cancer. If exposed to used engine oil on a daily basis, make it a rule to wash your hands thoroughly with soap immediately after use. Keep away from children.

Brake lining debris

Never attempt to clean the brake assembly using compressed air or a dry brush.

Brake fluid



Attention

Avoid spilling brake fluid onto plastic, rubber or painted parts of the motorcycle to avoid the risk of damage. Protect these parts with a clean shop rag before servicing the motorcycle. Keep away from children.



Attention

The brake fluid used in the brake system is corrosive. In the event of accidental contact with eyes or skin, wash the affected area with generous quantities of running water.

Coolant

Engine coolant contains ethylene glycol, which may ignite under particular conditions, producing invisible flames. Although the flames from burning ethylene glycol are not visible, they are still capable of causing severe burns.



Attention

Take care not to spill engine coolant on the exhaust system or engine parts.

These parts may be hot and ignite the coolant, which will subsequently burn with invisible flames. Coolant (ethylene glycol) is an irritant and is poisonous when ingested. Keep away from children. Never remove the radiator cap when the engine is hot. The coolant will be scalding hot and is under high pressure.

The cooling fan operates automatically: keep hands well clear and make sure your clothing does not get caught in the fan.

Battery



Attention

The battery gives off explosive gases; keep it away from any source of ignition such as sparks, flames and cigarettes. Charge the battery in a well-ventilated area.

Vehicle ID number



Note

These numbers identify the motorcycle model and should always be indicated when ordering spare parts.

We recommend that you note the frame number of your motorcycle in the space below.

Frame number

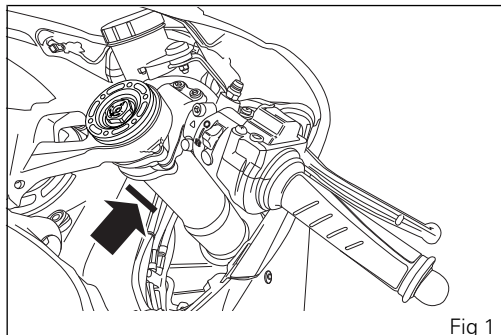


Fig 1

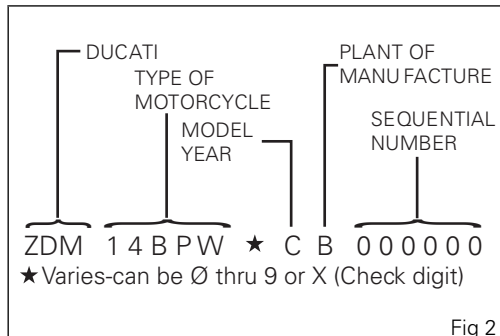


Fig 2

Engine ID number



Note

These numbers identify the motorcycle model and should always be indicated when ordering spare parts.

We recommend that you note the engine number of your motorcycle in the space below.

Engine number

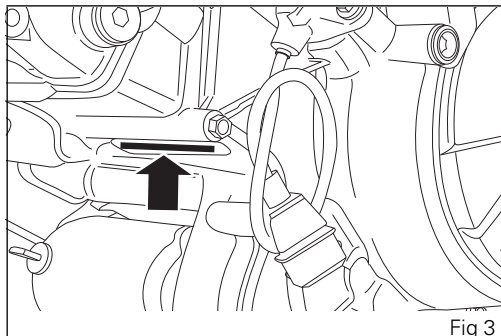


Fig 3

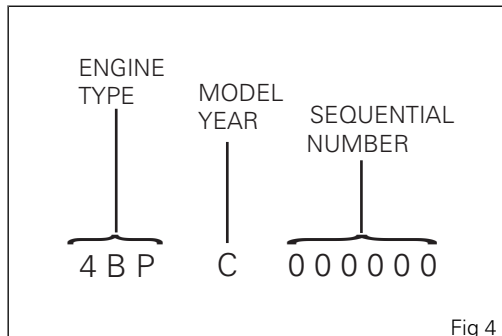


Fig 4

Plate positioning

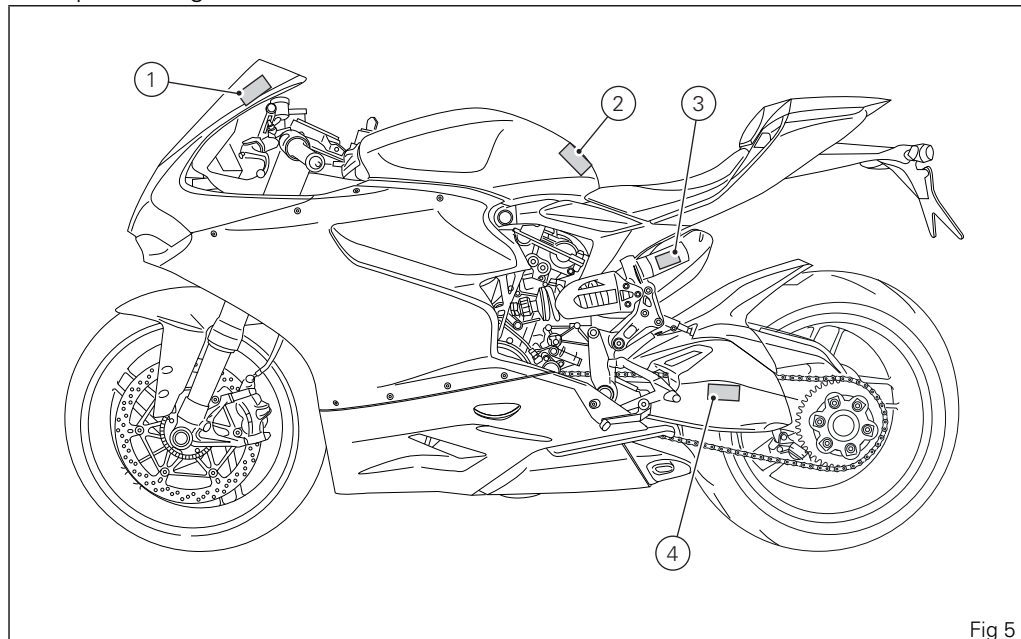


Fig 5

WARNING

DO NOT ATTEMPT TO LOOK THROUGH THIS FAIRING. THIS IS NOT A WINDSHIELD, BUT AN AERODYNAMIC FAIRING ONLY; FAILURE TO OBSERVE THIS WARNING COULD RESULT IN A COLLISION OR UPSET AND CONSEQUENT SERIOUS BODILY INJURY.

Cod. 433 1 165 1A


1

Appoggiare il veicolo sulla stampella laterale. Con la pressione del dito, spingere la catena verso il basso nel punto di misura e poi rilasciarla. Misurare la distanza (A) tra il centro dei perni della catena e l'alluminio del forcellone, che deve risultare: $A = 50 \div 52 \text{ mm}$

Chain tension: Make the rear wheel turn until you find the position where chain is tightest.

Set the vehicle on the side stand. Push down the chain with one finger at the point of measurement and release. Measure the distance (A) between the chain pins centre and swing arm aluminium edge.

Reading must be: $A = 50 \div 52 \text{ mm}$

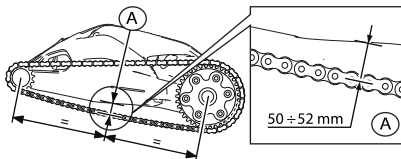

4

CAUTION

NEVER FILL TANK SO FUEL LEVEL RISES INTO FILLER NECK. IF TANK IS OVERFILLED, HEAT MAY CAUSE FUEL TO EXPAND AND FLOW INTO EVAPORATIVE EMISSION CONTROL SYSTEM RESULTING IN HARD STARTING AND ENGINE HESITATION.


2

WARNING

CONTAINS HIGHLY COMPRESSED GAS. USE ONLY PERFECTLY DRY NITROGEN GAS. OTHER GASES MAY CAUSE EXPLOSION. DO NOT INCINERATE. REFER TO OWNER'S MANUAL FOR REGULATING GAS.

3

Fig 6

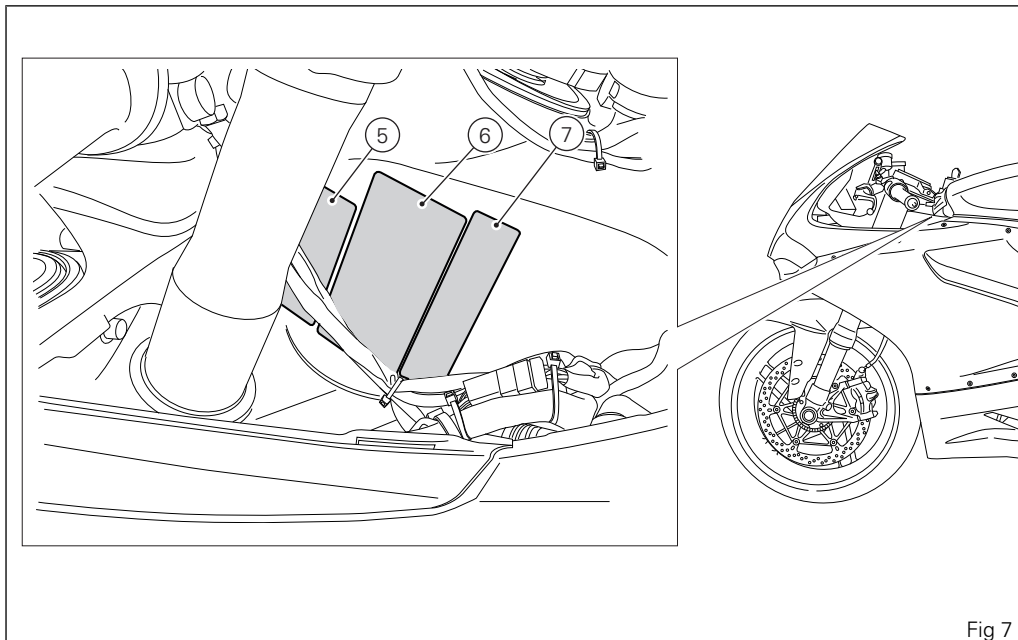

VEHICLE EMISSION CONTROL INFORMATION

ENGINE DISPLACEMENT: 1198 CC
ENGINE FAMILY: CDUCC1.20N9B
ENGINE EXHAUST CONTROL SYSTEM:
2 TWC, PAIR, 2H2S, SFI AND TBI
EVAP FAMILY: CDUCU0018234
PERMEATION FAMILY: CDUCPMETAL02

THIS VEHICLE CONFORMS TO U.S. EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2012 MODEL YEAR NEW MOTORCYCLES AND IS CERTIFIED TO 0.8 HC+NOK G/KM ENGINE FAMILY EXHAUST EMISSION STANDARD IN CALIFORNIA

ENGINE TUNEUP SPECIFICATIONS

ITEM	SPECIFICATIONS	INSTRUCTIONS
IGNITION TIMING:	20° BTDC AT IDLE SPEED	NO ADJUSTEMENTS
IDLE SPEED (RPM)	1360 ± 100	NO ADJUSTEMENTS
IDLE MIXTURE	OPENING 0.10 ± 0.20 MM	NO ADJUSTEMENTS
VALVE CLEARANCE (IN & EX)	CLOSING 0.08 ± 0.13 MM	SEE SERVICE MANUAL
SPARK PLUG : NGK MARBA-J		OIL : SAE 10W/40 OR SAE 15W/50
SPARK PLUG GAP (mm) : 0.7 ± 0.9		FUEL : UNLEADED GASOLINE

 
DUCATI MOTORHOLDING SPA - BOLOGNA - ITALY
IMPORTER: DUCATI NORTH AMERICA INC. - CUPERTINO - CALIFORNIA

432.1.622.1C

5

VEHICLE EMISSION CONTROL LABEL

ENGINE DISPLACEMENT: 1198 CC
ENGINE FAMILY: CDUCC1.20N9B
THIS VEHICLE CONFORMS TO U.S. EPA AND CALIFORNIA REGULATIONS APPLICABLE TO 2012 MODEL YEAR NEW MOTORCYCLES. EVAP FAMILY: CDUCU0018234



DUCATI
Via A. C. Ducati, 3
40132 BOLOGNA
ITALY

432.1.622.1D

6

MOTORCYCLE NOISE EMISSION CONTROL INFORMATION

THIS 2012 **DUC46E1200** MOTORCYCLE **ZDM14BPW1CB000001** MEETS EPA NOISE EMISSION REQUIREMENTS OF 80 dB(A) AT 5913 RPM BY THE FEDERAL TEST PROCEDURE. MODIFICATIONS WHICH CAUSE THIS MOTORCYCLE TO EXCEED FEDERAL NOISE STANDARDS ARE PROHIBITED BY FEDERAL LAW. SEE OWNER'S MANUAL

432.1.622.1A

7

Fig 8

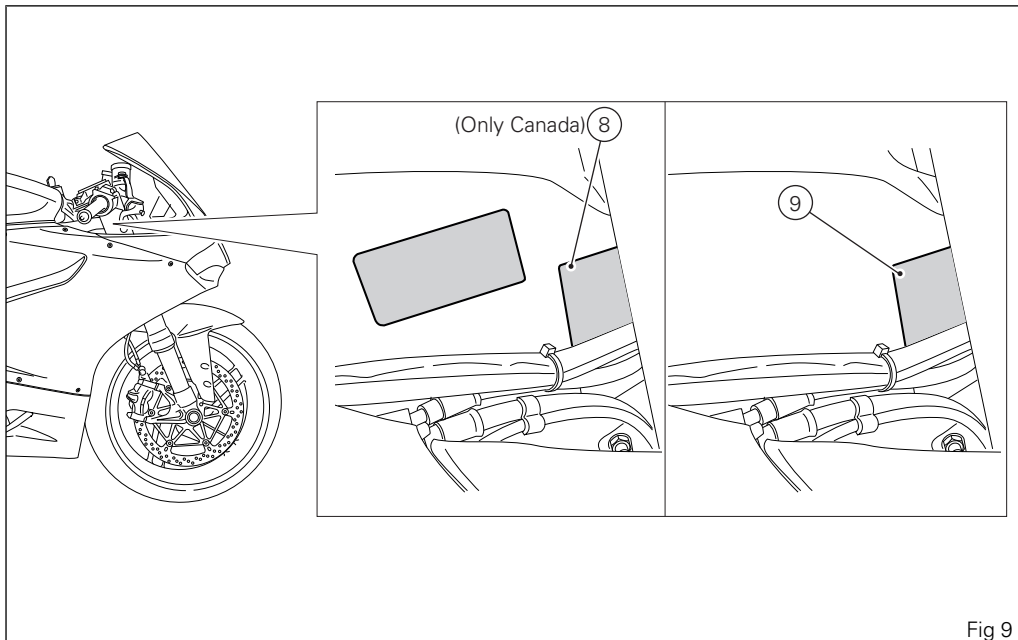


Fig 9

MANUFACTURED BY/FABRIQUÉ PAR :
DUCATMMOTORHOLDING spa DATE: 12/2011
 TYPE OF VEHICLE / TYPE DE VÉHICULE : MC
 GVWR / PNBV: 370 KG.
 V.I.N. / N.I.V.: ZDM14BPW1CB000001

GAWR PNBE KG	TIRE/PNEU DIMENSION RIM/JANTE	COLD INFL. PRESS. PRESS DE GOLFL. A FROID P.SI/LPC KPA
157 213	120/70ZR17 MT 3.50X17 200/55ZR17 MT 6.00X17	33.4 230 37.8 260

THIS VEHICLE CONFORMS TO ALL APPLICABLE STANDARDS
 PRESCRIBED UNDER THE CANADIAN MOTOR VEHICLE SAFETY
 REGULATIONS IN EFFECT ON THE DATE OF MANUFACTURE.
 CE VÉHICULE EST CONFORME A' TOUTES LES NORMES QUI
 LUI SONT APPLICABLES EN VERTU DU REGLEMENT SUR LA
 SÉCURITÉ DES VÉHICULES AUTOMOBILES DU CANADA EN
 VIGUEUR A' LA DATE DE SA FABRICATION. 432.1.622.1F

8 (Only Canada)

MANUFACTURED BY: DATE: 12/2011
DUCATMMOTORHOLDING spa
 GVWR: 816 LBS (370 kg)

GAWR F: 346 LBS (157 kg) WITH 120/70ZR17
 TIRE, MT3.50x17 RIM, AT 33.4 PSI COLD
 GAWR R: 470 LBS (213 kg) WITH 180/55ZR17
 TIRE, MT6.00x17 RIM, AT 37.8 PSI COLD
 THIS VEHICLE CONFORMS TO ALL APPLICABLE
 FEDERAL MOTOR VEHICLE STANDARDS IN
 EFFECT ON THE DATE OF MANUFACTURE
 SHOW ABOVE.

TYPE CLASSIFICATION: MOTORCYCLE
 VEHICLE I.D. No. ZDM14BPW1CB000001

432.1.622.1B

9

Fig 10

Noise and exhaust emission control system information

Source of Emissions

The combustion process produces carbon monoxide and hydrocarbons. Control of hydrocarbons is very important because under certain conditions, they react to form photochemical smog when subjected to sunlight.

Carbon monoxide does not react in the same way, but is toxic. Ducati utilizes lean carburetor settings and other systems to reduce carbon monoxide and hydrocarbons.

Exhaust Emission Control System

Exhaust Emission Control System is controlled by an Electronic Control Unit (ECU), and no adjustments should be made except idle speed adjustments with the throttle stop screw. The Exhaust Emission Control System is separate from the crankcase emission control system.

Crankcase Emission Control System

The engine is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere. Blow-by gas is returned to the

combustion chamber through the air cleaner and the throttle body.

Evaporative Emission Control System

The motorcycles are equipped with an evaporative emission control system which consists of a charcoal canister and associated piping. This system prevents the escape of fuel vapors from the engine and fuel tank.

Problems that may affect motorcycle emissions

If you are aware of any of the following symptoms, have the vehicle inspected and repaired by your local Ducati dealer.

Symptoms:

Hard starting or stalling after starting.

Rough idle.

Misfiring or backfiring during acceleration.

After-burning (backfiring).

Poor performance (drivability) and poor economy.

California emission control warranty statement

Your warranty rights and obligations

The California Air Resources Board is pleased to explain the emission control system warranty on your MY 2014 motorcycle. In California, new motor vehicles must be designated, built and equipped to meet the State's stringent anti-smog standards. Ducati North America, Inc. must warrant the emission control system on your motorcycle for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your motorcycle.

Your emission control system may include parts such as fuel-injection system, the ignition system, catalytic converter, and engine computer. Also included may be hoses, belts, connectors and other emission-related assemblies. Where a warrantable condition exists, Ducati North America, Inc. will repair your motorcycle at no cost to you including diagnosis, parts and labor.

Manufacturer's warranty coverage

Manufacturer's warranty coverage

- 5 years or 30,000 kilometers (18641 miles), whichever first occurs.

Owner's warranty responsibilities

- As the motorcycle owner, you are responsible for the performance of the required maintenance listed in your owner's manual. Ducati North America, Inc. recommends that you retain all receipts covering maintenance on your motorcycle, but Ducati North America, Inc. cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.
- You are responsible for presenting your motorcycle to a Ducati dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.
- As the motorcycle owner, you should also be aware that Ducati North America, Inc. may deny you warranty coverage if your motorcycle or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

If you have any questions regarding your warranty rights and responsibilities, you should contact Ducati North America, Inc. at 001.408.253.0499 or the California Air Resource Board at 9528 Telstar Avenue, El Monte, CA 91731.

California evaporation emission system


This system consists of:

- 1) Warm air inlet;
- 2) Canister;
- 3) Dell'Orto jet;
- 4) Fuel tank;
- 5) Breather pipe;
- 6) Intake manifolds.



Attention

In the event of a fuel system malfunction, contact a Ducati Authorized Service Center.

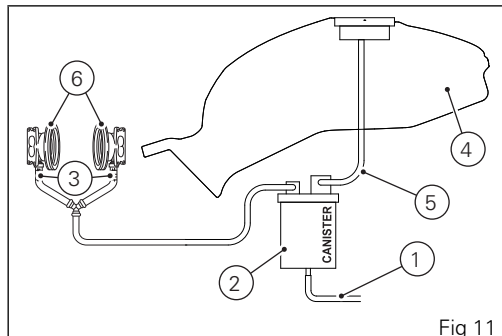

Ducati limited warranty on emission control system

Ducati North America, Inc., 10443 Bandle Drive
Cupertino, California, 95014 warrants that each new
1998 and later Ducati motorcycle, that includes as
standard equipment a headlight, tail-light and
stoplight, and is street legal:

A) is designed, built and equipped so as to conform
at the time of initial retail purchase with all applicable
regulations of the United States Environmental
Protection Agency, and the California Air Resources
Board; and

B) is free from defects in material and workmanship
which cause such motorcycle to fail to conform with
applicable regulations of the United States
Environmental Protection Agency or the California Air
Resources Board for a period of use of 30,000
kilometers (18,641 miles) or 5 (five) years from the
date of initial retail delivery, whichever first occurs.

I. Coverage

Warranty defects shall be remedied during
customary business hours at any authorized Ducati
motorcycle dealer located within the United States of
America in compliance with the Clean Air Act and

applicable regulations of the United States
Environmental Protection Agency and the California

Air Resources Board. Any part or parts replaced under
this warranty shall become the property of Ducati. In
the state of California only, emissions related
warranted parts are specifically defined by that
state's Emissions Warranty Parts List. These
warranted parts are: carburetor and internal parts;
intake manifold; fuel tank, fuel injection system; spark
advance mechanism; crankcase breather; air cutoff
valves; fuel tank cap for evaporative emission
controlled vehicles; oil filler cap; pressure control
valve; fuel/vapor separator; canister; igniters; breaker
governors; ignition coils; ignition wires; ignition
points, condensers, and spark plugs if failure occurs
prior to the first scheduled replacement, and hoses,
clamps, fittings and tubing used directly in these
parts. Since emission related parts may vary from
model to model, certain models may not contain all
of these parts and certain models may contain
functionally equivalent parts. In the state of California
only, Emission Control System emergency repairs, as
provided for in the California Administrative Code,
may be performed by other than an authorized Ducati
dealer. An emergency situation occurs when an

authorized Ducati dealer is not reasonably available, a part is not available within 30 days, or a repair is not complete within 30 days. Any replacement part can be used in an emergency repair. Ducati will reimburse the owner for the expenses, including diagnosis, not to exceed Ducati's suggested retail price for all warranted parts replaced and labor charges based on Ducati's recommended time allowance for the warranty repair and the geographically appropriate hourly labor rate. The owner may be required to keep receipts and failed parts in order to receive compensation.

II. Limitations

This Emission Control System Warranty shall not cover any of the following:

- A. Repair or replacement required as a result of
 - (1) accident,
 - (2) misuse,
 - (3) repairs improperly performed or replacements improperly installed,
 - (4) use of replacement parts or accessories not conforming to Ducati specifications which adversely affect performance and/or
 - (5) use in competitive racing or related events.

B. Inspections, replacement of parts and other services and adjustments required for routine maintenance.

C. Any motorcycle on which odometer mileage has been changed so that actual mileage cannot be readily determined.

III. Limited liability

A. The liability of Ducati under this Emission Control Systems Warranty is limited solely to the remedying of defects in material or workmanship by an authorized Ducati motorcycle dealer at its place of business during customary business hours. This warranty does not cover inconvenience or loss of use of the motorcycle or transportation of the motorcycle to or from the Ducati dealer. Ducati shall not be liable for any other expenses, loss or damage, whether direct, incidental, consequential or exemplary arising in connection with the sale or use of or inability to use the Ducati motorcycle for any purpose. Some states do not allow the exclusion or limitation of any incidental or consequential damages, so the above limitations may not apply to you. B. No express emission control system warranty is given by Ducati except as specifically set forth herein. Any emission control system warranty implied by law, including any

warranty of merchantability or fitness for a particular purpose, is limited to the express emission control systems warranty terms stated in this warranty. The foregoing statements of warranty are exclusive and in lieu of all other remedies. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. C. No dealer is authorized to modify this Ducati Limited Emission Control Systems Warranty.

IV. Legal rights

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

V. This warranty is in addition to the Ducati limited motorcycle warranty.

VI. Additional information

Any replacement part that is equivalent in performance and durability may be used in the performance of any maintenance or repairs. However, Ducati is not liable for these parts. The owner is responsible for the performance of all required maintenance. Such maintenance may be performed at a service establishment or by any individual. The warranty period begins on the date the motorcycle is delivered to an ultimate purchaser.

Ducati North America, Inc..
10443 Bandle Drive
Cupertino, California, 95014
Tel: 001.408.253.0499
Fax: 001.408.253.4099
E-mail: customerservice@ducatiusa.com
Web site: www.ducatiusa.com

Instrument Panel (Dashboard)

Instrument Panel

1) Display.

2) NEUTRAL LIGHT N (GREEN).

Comes on when in neutral position.

3) HIGH BEAM LIGHT  (BLUE).

Turns on to indicate that the high beam lights are on and when the flasher is activated.

4) ENGINE OIL PRESSURE LIGHT  (RED).

Comes on when engine oil pressure is too low. It must turn on at "Key-On", but must turn off a few seconds after the engine has started. May come on briefly when the engine is hot, but should go off as the engine revs up.

Important

If the ENGINE OIL light stays on, stop the engine or it may suffer severe damage.

5) FUEL WARNING LIGHT  (AMBER YELLOW).

Turns on when fuel is low and there are about 5 liters of fuel left in the tank.

6) TURN INDICATOR LIGHTS  (GREEN).

Illuminates and flashes when the turn indicator is in operation.

7) "ENGINE/VEHICLE DIAGNOSIS - EOBD" LIGHT

 (AMBER YELLOW).

Turns on in the case of "engine" and/or "vehicle" errors and in some cases will lock the engine.

8) GENERAL WARNING LIGHTS (RED).

the lights (8a) turn on when RPM value reaches the first threshold before the rpm limiter kicks in;

the lights (8b) turn on when RPM value reaches the second threshold before the rpm limiter kicks in;

the lights (8c) turn on when RPM value reaches the third threshold before the rpm limiter kicks in.

9) ABS LIGHTS (AMBER YELLOW).

This turns on to indicate that ABS is disabled or not functioning.

Engine off/ speed under 5 km/h		
Light off	Light flashing	Light steady
-	ABS disabled with the menu function "ABS"	ABS enabled but not working yet
Engine on/ speed under 5 km/h		
Light off	Light flashing	Light steady
-	ABS disabled with the menu function "ABS"	ABS enabled but not working yet
Engine on/ speed above 5 km/h		
Light off	Light flashing	Light steady
ABS enabled and functioning	ABS disabled with the menu function "ABS"	ABS disabled and not functioning due to a problem

10) DTC INTERVENTION (AMBER YELLOW).

	DTC
No intervention	Light OFF
Spark advance cut	Light steady ON
Injection cut	Light steady ON

Key-on status	Light OFF
Key-off status	Light ON flashing
Key-off status for over 12 hours	Light OFF

11) OVER REV / IMMOBILIZER / ANTI-THEFT SYSTEM (RED)

	Over rev
No intervention	Light OFF
First threshold (N RPM before the limiter kicks in)	Light steady ON
Limiter	Light ON flashing



Note

Each calibration of the Engine Control Unit may have a different setting for the thresholds that precede the rev limiter and the rev limiter itself.

	Immobilizer
--	--------------------

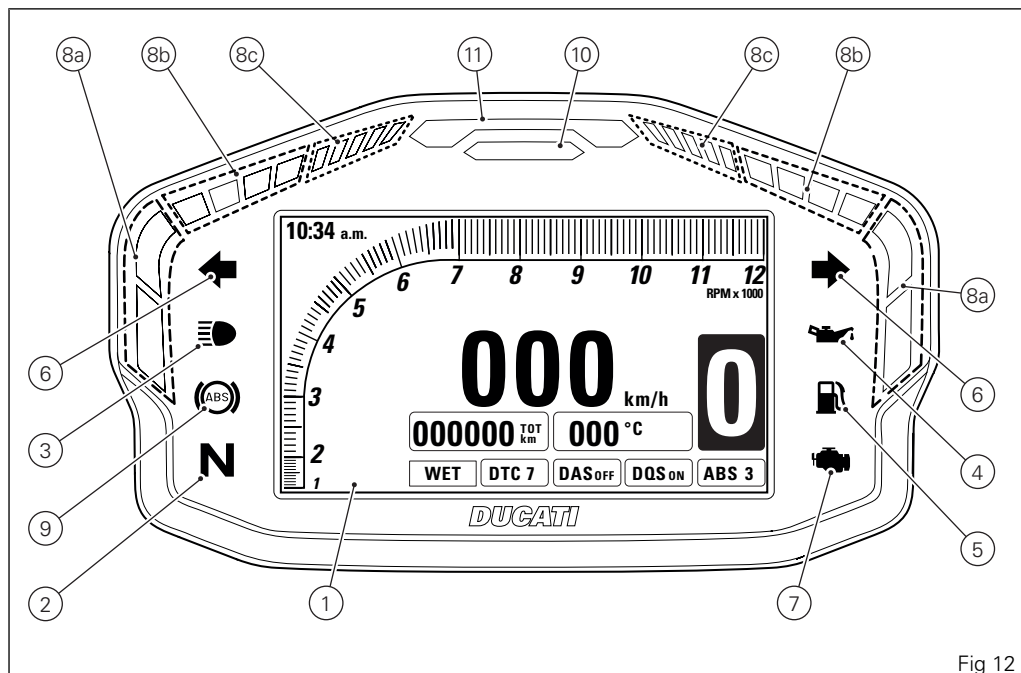


Fig 12

Acronyms and abbreviations used in the Manual

ABS

Anti-lock Braking System

BBS

Black Box System

CAN

Controller Area Network

DDA

DUCATI Data Acquisition

DES

DUCATI Electronic Suspension

DSB

Dashboard

DTC

DUCATI Traction Control

DQS

DUCATI Quick Shift

EBC

DUCATI Engine Brake Control

ECU

Engine Control Unit

E-Lock

Electronic Main Switch Set

GPS

Global Positioning System

UP-MAP

Updater Map/Calibration

Technological Dictionary

Engine Brake Control (EBC)

The engine brake control system (EBC) works together with the slipper clutch to avoid and control the rear wheel lockup during aggressive downshifting.

If the system detects wheel slipping, it sends a signal to the engine control unit to slightly increase engine rpm until the rear wheel speed is again consistent with vehicle speed.

EBC features a three-tiered operating system and is integrated in the three Riding Modes.

Riding Mode

The rider of an 1199 Panigale can choose from 3 different preset bike configurations (Riding Modes) and pick the one that best suits his/her riding style or ground conditions. The Riding Modes allow the user to instantly change the engine power delivery (Power Mode), the ABS settings, DTC, DQS, EBC and instrument panel graphics.

The Riding modes available for the 1199 Panigale are: Race, Sport and Wet. Within every Riding Mode, the rider can customize any setting.

Power Mode

The Power Modes are the different engine maps the rider can select to change power level and delivery to suit his/her own riding style and surface conditions. For the 1199 Panigale there are three Power Modes, one for each Riding Mode:

- 120 HP with "smooth" delivery;
- 195 HP with "smooth" delivery;
- 195 HP with "instant" delivery.

Ride by Wire (RbW)

The Ride by Wire system is the electronic device that controls throttle opening and closing. Since there is no mechanical connection between the throttle twistgrip and the throttle bodies, the ECU can adjust power delivery by directly affecting throttle opening angle.

The Ride by Wire system allows you to obtain different power level and delivery according to the selected Riding Mode (Power Mode), but even to

accurately control the engine brake (EBC), thereby helping to control the rear wheel slipping (DTC).

Ducati Electronic Suspension (DES)

The Ducati Electronic Suspension system by Öhlins automatically adjusts the rebound and compression damping. This allows the rider to set the suspensions in a different way according to the selected Riding Mode or to customize any setting according to his/her own riding style.

Ducati Traction Control (DTC)

The Ducati Traction Control system (DTC) supervises the rear wheel slipping control and settings vary through eight different levels that are programmed to offer a different tolerance level to rear wheel slipping. Each Riding Mode features a preset intervention level.

Level eight indicates system intervention whenever a slight slipping is detected, while level one is for very expert riders because it is less sensitive to slipping and intervention is thus rarer.

Anti-lock Braking System (ABS) 9ME

ABS 9ME system fitted to 1199 Panigale is a two-channel latest-generation system that actuates

combined braking with anti lift-up function for the rear wheel so as to guarantee not only a reduced stopping distance, but also a higher stability under braking. ABS 9ME system is specifically calibrated for sport use, and features 3 different levels of intervention, one per Riding Mode. In RACE mode the system only works on the front disks to ensure top performance for track use.

Engine Brake Control (EBC)

The engine brake control system (EBC) works together with the slipper clutch to avoid and control the rear wheel lockup during aggressive downshifting.

If the system detects wheel slipping, it sends a signal to the engine control unit to slightly increase engine rpm until the rear wheel speed is again consistent with vehicle speed.

EBC features a three-tiered operating system and is integrated in the three Riding Modes.

Ducati Quick Shift (DQS)

The Ducati Quick Shift (DQS) is the electronic shifter control system used for racing purposes that allows the rider to shift up under acceleration without using

the clutch and keeping the throttle open: this results in lower shifting time and hence faster lap time.

Ducati Data Analyzer+ (DDA+)

DDA+ is the latest generation of the Ducati Data Analyzer, with built-in GPS signal to create a "virtual finish line". The system automatically detects lap end and stops the lap timer, without the rider needing to do anything. Thanks to the built-in GPS signal, it also shows the trajectories on track map and the key vehicle parameters: throttle opening, speed, rpm, gear engaged, engine temperature, DTC intervention.

Function pushbuttons

1) CONTROL SWITCH UP "▲"

Button used to display and set instrument panel parameters with the position "▲".

2) CONTROL SWITCH DOWN "▼"

Button used to display and set instrument panel parameters with the position "▼".

3) HIGH-BEAM FLASH BUTTON FLASH

The high-beam flash button may also be used for LAP functions.

4) TURN INDICATORS CANCEL BUTTON

The turn indicators cancel button may also be used for the CONFIRM MENU function, for selecting the riding style. Press this button for 3 seconds to the left side to activate the "Hazard" lights.

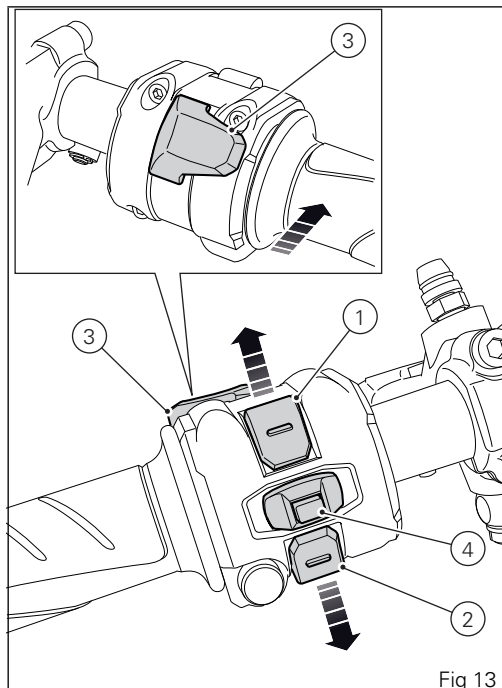


Fig 13

How to set/display parameters

When it is switched on, the instrument panel displays the DUCATI Logo and turns on the LED warning lights in two steps ("initial check").

At the end of the check, the instrument panel displays the main Screen in ROAD or TRACK mode (it depends on the last configuration in use before the key-off).


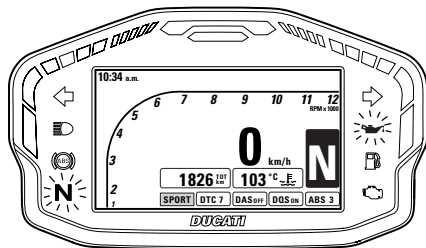


Fig 14

If the bike is equipped with the Performance exhaust system kit (part no. 96450211B) or the Performance muffler kit (part no. 96450311B), when the instrument panel is switched on, after the Ducati logo, it displays the text "RACING" or "RACING EVO":

- RACING when the vehicle is equipped with the Performance muffler kit;
- RACING EVO when the vehicle is equipped with the Performance complete exhaust system kit.

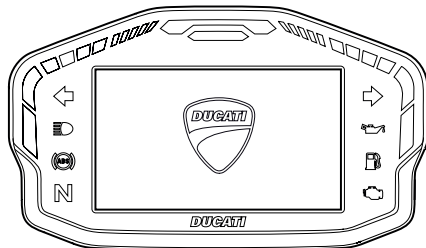

Note

The Performance exhaust kit (part no. 96450211B) and Performance muffler kit (part no. 96450311B) can be purchased at a Ducati Dealer or Authorized Service Center.



Attention

The Performance exhaust kit (part no. 96450211B) and Performance muffler kit (part no. 96450311B) must be installed at a Ducati Dealer or Authorized Service Center.



Fig 15

During this check stage, if the vehicle speed exceeds 6 mph (10 km/h) (actual speed), the instrument panel will stop:

- the display check routine and display the Standard Screen containing updated information;
- the warning light check routine and leave on only the warning lights that are actually active at the moment.



Note

When turning the key to OFF, vehicle power is cut only after 70 seconds and not immediately.

Two different main page layouts are available: ROAD and TRACK.

Data displayed on the main screen are as follows:

- 1) Rpm bar graph.
- 2) Vehicle speed.
- 3) Gear engaged.
- 4) Menu 1 (Odometer, Trip 1, Trip 2, Trip Fuel, Lap time - only if active).
- 5) Menu 2 (Engine coolant temperature, Instantaneous fuel consumption, Average fuel consumption, Average speed, Trip time, Ambient air temperature).
- 6) Set Riding Mode.
- 7) DTC level indication (ON) or DTC OFF indication.
- 8) EBC level indication (ON) or EBC OFF indication.
- 9) DQS ON indication or DQS OFF indication.
- 10) ABS level indication (ON) or ABS OFF indication.
- 11) DDA indication (ON).
- 12) GPS receiving indication (if fitted).
- 13) Clock.
- 14) SERVICE indication (only if active) - Alarm / Warning indication (only if present) - Error indication (only if present).

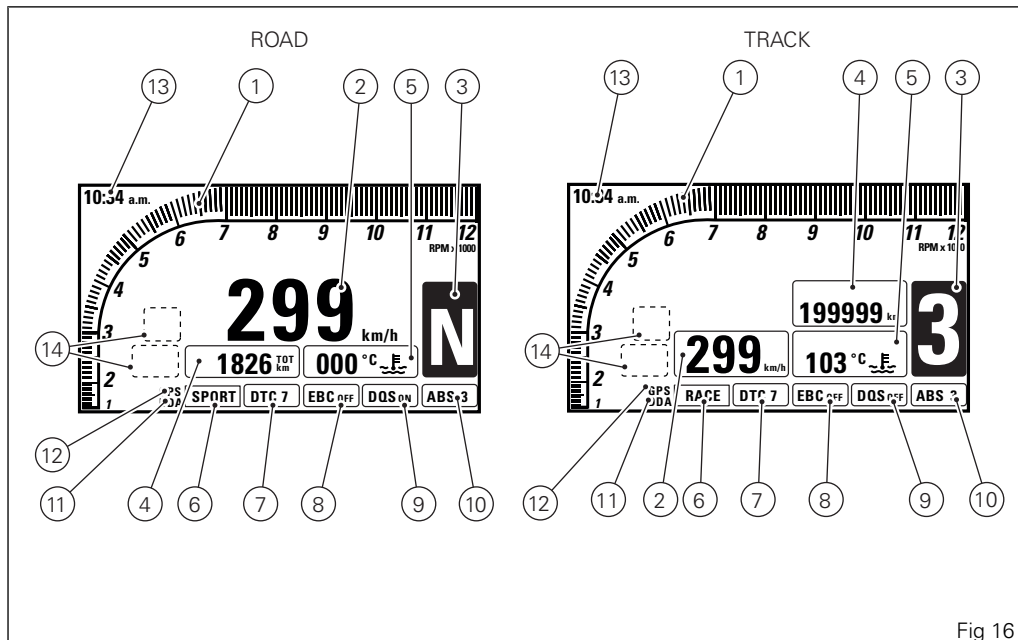


Fig 16

Press button (1) to display MENU 1 information.

The data displayed in a sequence, both in ROAD and TRACK modes, are:

- Odometer (TOT);
- TRIP 1;
- TRIP 2;
- TRIP FUEL (when function is active);
- Lap time (LAP) - only for TRACK mode.

Press button (2) to display MENU 2 information.

The data displayed in a sequence, both in ROAD and TRACK modes, are:

- Coolant temperature;
- Instantaneous fuel consumption (CONS.);
- Average Fuel Consumption (CONS. AVG);
- Average speed (SPEED AVG);
- Trip time (TRIP TIME);
- Air temperature.

Upon the Key-ON, the data displayed for MENU 1 and MENU 2 are the ones displayed upon the previous Key-OFF.



Note

In both ROAD and TRACK modes, the factory set default parameter (Odometer - TOT) is displayed for 10 seconds upon Key-ON for MENU 1 and then the parameter from last Key-OFF is displayed.



Note

In case of sudden and unexpected power off, the instrument panel displays the default settings upon the following Key-ON; in particular:

- for MENU 1 - Odometer (TOT);
- for MENU 2 - Coolant temperature.

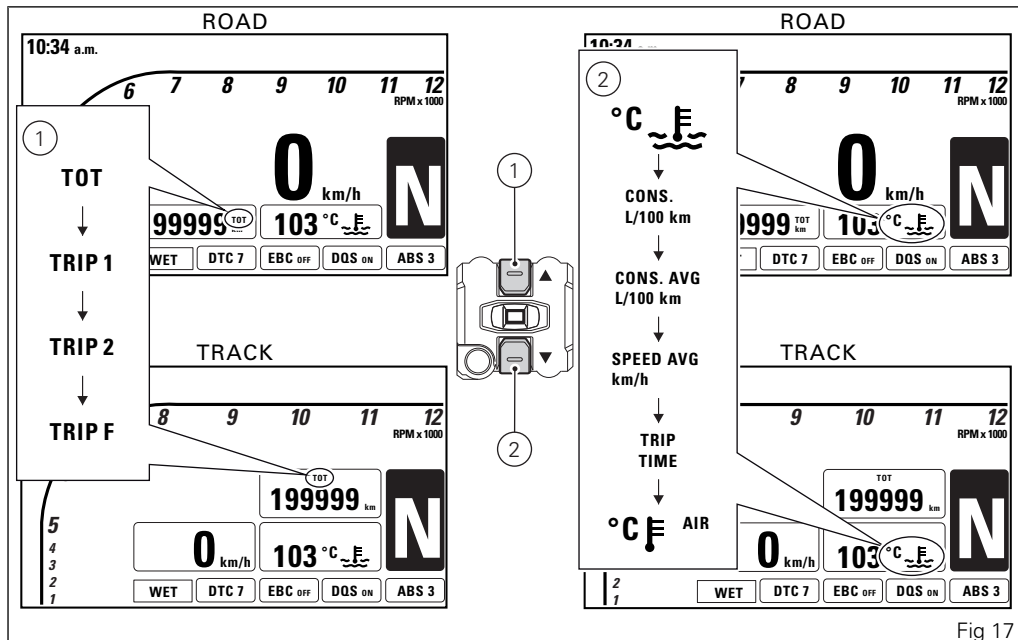


Fig 17

When the Standard Screen is displayed, hold the button (2) for 3 seconds with the actual vehicle speed lower or equal to 12 mph (20 km/h) to gain access to the Setting MENU, where you can set any function.



Important

You can enter the Setting MENU only when the actual vehicle speed is lower or equal to 12 mph (20 km/h). If you are inside the Setting MENU and the actual vehicle speed exceeds 12 mph (20 km/h), the instrument panel automatically exits from this Menu and displays the Standard Screen.

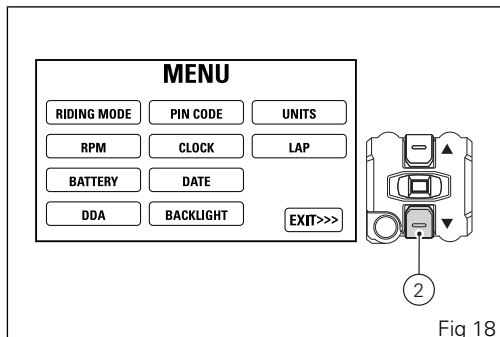


Fig 18

If the key is not acknowledged upon Key-ON and once the check routine is over, the following will happen:

- if the PIN CODE function is not active, the initial lights check routine is skipped, the Standard Screen is displayed with an E-LOCK error warning and access to the Setting MENU is not allowed;
- if the PIN CODE function is active, the PIN CODE function page is displayed, allowing the rider to enter the personal code.

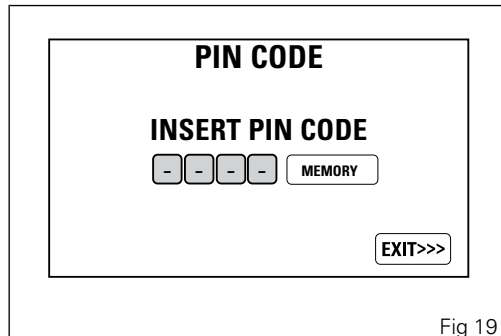


Fig 19

Main functions

The functions displayed in the Standard Screen are the following:

Main functions

- Engine rpm indication (RPM)
- Vehicle speed
- Gear
- Riding Mode
- DTC
- EBS
- DQS
- ABS
- MENU 1 displays the following functions:
 - Odometer (TOT)
 - Trip meter 1 (TRIP1)
 - Trip meter 2 (TRIP2)
 - Partial fuel reserve counter (TRIP FUEL)
 - LAP time - only if active and in TRACK mode
- MENU 2 displays the following functions:
 - Engine coolant temperature
 - Instantaneous fuel consumption (CONS.)
 - Average Fuel Consumption (CONS. AVG)
 - Average speed (SPEED AVG)
 - Trip time (TRIP TIME)
 - External air temperature

Auxiliary functions

- DDA (only if present)
- GPS (only if present)
- CLOCK
- Service warning (SERVICE)
- Warning/Alarm indication (Warning)
- ERROR indication

The functions within the Setting MENU that can be modified by the user are the following:

- RIDING MODE customization: within this menu, rider can customize the following:
 - ABS setting (ABS)
 - Electronic suspension setting (DES)
 - Display settings (DISPLAY)
 - DQS ON/OFF (DQS)
 - DTC level (DTC)
 - Engine setting (ENGINE)
 - EBC level (EBC)
 - Reset to default factory settings (DEFAULT)
 - Engine rpm digital indication (RPM)
- Battery voltage (BATTERY)
- DDA (on/off - view - delete)
- PIN CODE (enter/change)
- Clock settings (CLOCK SETTING)
- Date settings (DATE)
- Display backlighting (BACK LIGHT)
- Units of measurement (Speed - Temperature - Fuel consumption) UNIT
- LAP (view/delete/reset automatic settings)

The area for the 10500-11500 rpm range (pre-warning area) is indicated on the display in orange, used both

for filling the bar graph and indicating the corresponding figure 11 ("orange area").

The area for the 11500-12000 rpm range (warning area) is indicated on the display in red, used both for filling the bar graph and indicating the corresponding figure 12 ("red area").



Important

During the first 1000 km (Break-in period), i.e. as long as the Odometer displays a value lower than or equal to 1000 km, the "orange area" (pre-warning area - on the display with orange used for bar graph filling and to indicate the corresponding figure) is displayed when engine reaches 6000 rpm. During this break-in period, it is not advisable to exceed 6000 rpm, so make sure the instrument panel does not display the "orange area" of the bar graph.

After the break-in period, the "orange area" indicates and advises the rider to ride at lower revs when the engine is cold; the "orange area" position changes according to engine temperature as follows:

- from 8000 rpm with engine temperature lower than or equal to 104 °F (40 °C)

- from 9000 rpm with engine temperature lower than or equal to 122 °F (50 °C)
- from 10500 rpm with engine temperature lower than or equal to 122 °F (50 °C)

The lights turning on when the rev limiter thresholds are reached are divided into three groups according to the following thresholds:

1st threshold 10500 rpm (A)

2nd threshold 10700 rpm (B)

3rd threshold 10900 rpm (C)




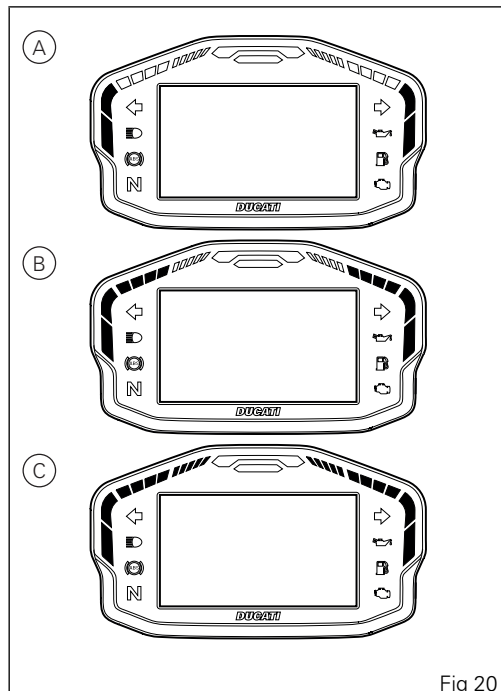


Fig 20

ROAD

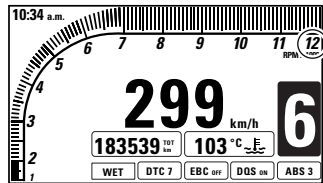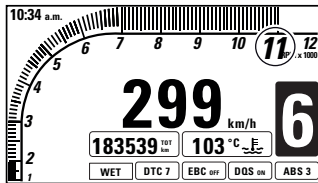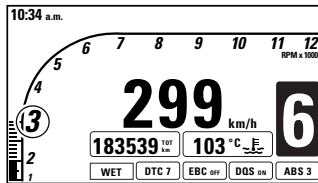

TRACK

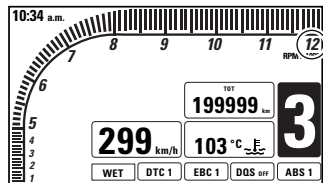
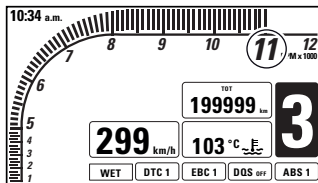
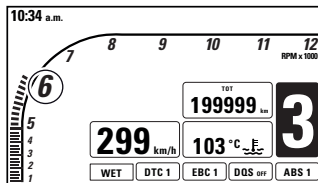


Fig 21


Vehicle speed

The instrument panel receives information about the actual vehicle speed (calculated in km/h) and displays the value increased by 5% and converted in the set unit of measurement (mph or km/h).

A string of dashes "---" is displayed with the set unit of measurement if:

- speed is equal to 186 mph or 299 km/h or if instrument panel is not receiving the speed value ("—" steady on);
- the rear speed sensor is in fault ("—" flashing, EOB light on and SPEED SENSOR error displayed).

ROAD

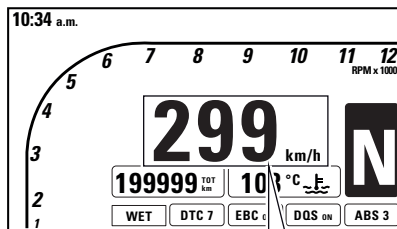

TRACK

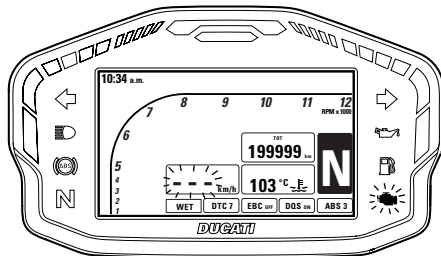
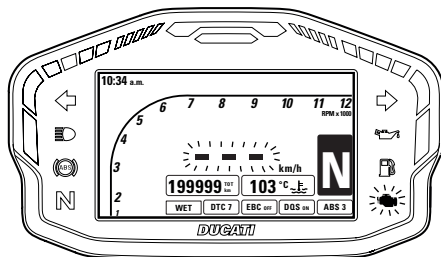
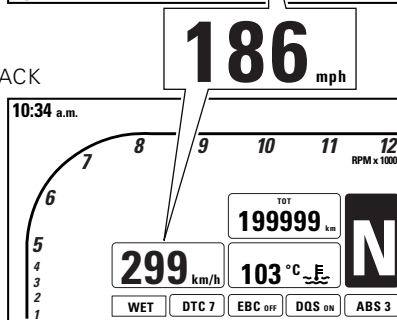


Fig 22

Gear

The instrument panel receives information about the gear engaged and displays the corresponding value. If a gear is engaged, the displayed value may range from 1 to 6, while if in neutral N is displayed.

Letter C is displayed when system requires you to shift gear.

A string of dashes "--" is displayed if:

- gear teach-in has not been carried out yet ("--" flashing and Neutral light (A) blinking);
- the gear sensor is in fault ("--" flashing, EOBD light (B) on and GEAR SENSOR error displayed);
- the instrument panel is not receiving the gear data ("--" steady on).

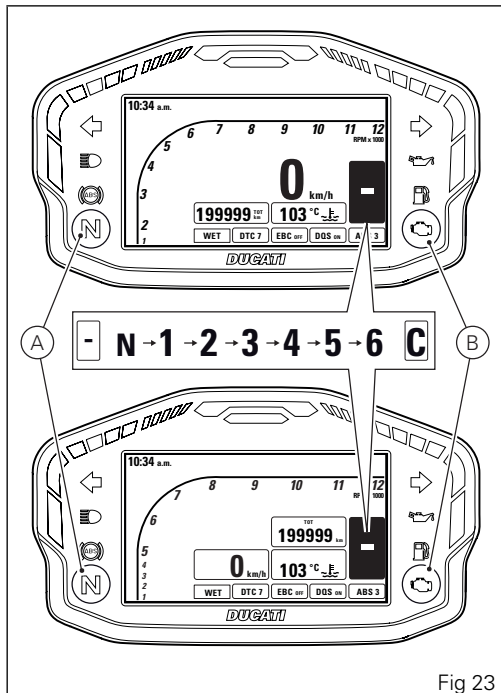


Fig 23

Riding Mode

The Riding Mode can be selected from the instrument panel. Preset riding modes are three: RACE, SPORT, WET.

The selected active Riding Mode is indicated at the bottom of the display inside a box with green background if the Riding Mode settings are the default ones, or with orange background if the Riding Mode settings have been customized by the rider. Every Riding Mode contains the following parameters set by Ducati or customized by the user through the setting function pages:

- a specific level of intervention for the DTC traction control (1, 2, 3, 4, 5, 6, 7, 8, off);
- a specific engine power that will change throttle behavior (195Hi, 195Lo, 120);
- a specific rebound damping setting and a specific compression damping setting for the front fork;
- a specific rebound damping setting and a specific compression damping setting for the rear shock absorber;
- a specific ABS calibration (1, 2, 3, off);
- a specific level of intervention of the EBC engine brake control system (1, 2, 3, off);
- the activation or deactivation of the quick shifter DQS (DQS on or DQS off).

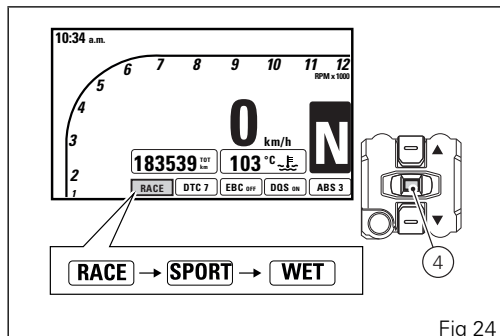


Fig 24

customized by the rider through the setting function pages.



Attention

Ducati recommends changing the Riding mode when the vehicle is stopped. If the riding mode is changed while riding, be very careful (it is recommended to change the Riding mode at a low speed).

Selecting the Riding Mode

Press CONFIRM MENU button (4) to enter the menu for selecting the Riding Mode (A). The instrument panel displays the speed indication (on the right) and riding mode name (on the left):

- RACE
- SPORT
- WET

One of these will be highlighted to indicate that it was the last memorized setting and is currently in use.



Attention

It is not possible to open the menu for selecting the riding mode, if button (4) is in the position for activating the turn indicators (to the left or right)

For the highlighted Riding Mode some of the parameter settings are displayed:

- DTC: the DTC text followed by the level of intervention set (1, 2, 3, 4, 5, 6, 7, 8) in case the DTC is active or by OFF in case the DTC is disabled;
- EBC: the EBC text followed by the level of intervention set (1, 2, 3) in case the EBC is active or by OFF in case the EBC is disabled;
- engine power (ENGINE): the ENG text followed by the set engine power; power indication may be 195 Hi, 195 Lo or 120; in some countries (such as France and Japan) HIGH, MED or LOW are used;
- DQS: the DQS text followed by ON in case the DQS is active or by OFF in case the DQS is disabled;
- ABS: the ABS text followed by the level of calibration set (1, 2, 3) in case the ABS is active or by OFF in case the ABS is disabled.

The displayed information are the settings stored in every single Riding Mode. The stored settings may be the factory ones (Ducati default settings) or the ones customized by the owner. Any time the CONFIRM MENU button (4) is pressed, you highlight a riding mode and the associated parameters are displayed (A, Fig 25).

Once the desired riding mode is highlighted, confirm the selection by holding down the CONFIRM MENU button (4) for 2 seconds: the new riding mode selection is saved and the Standard Screen is displayed (B, Fig 25).

Once the desired riding mode is highlighted, if the CONFIRM MENU button (4) is not pressed within 10 seconds, the new riding mode selection is not stored and the Standard Screen is displayed (C, Fig 25).

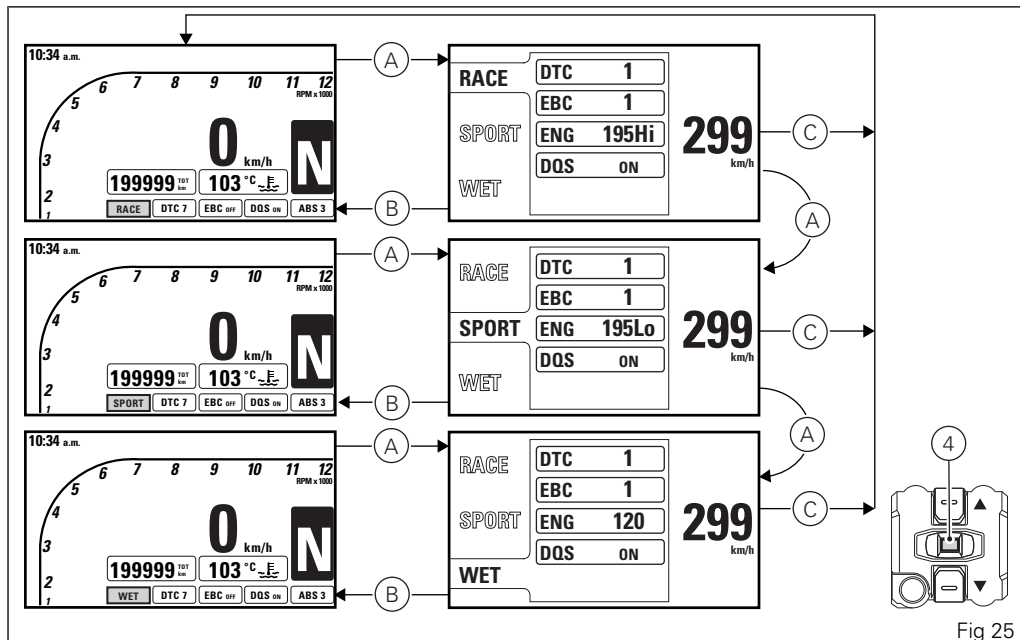


Fig 25

When the system requests rider to confirm the riding mode change, the procedure will output an error if:

- the throttle twistgrip is open, brakes are activated and the vehicle is in motion; in this case **CLOSE THROTTLE AND RELEASE BRAKES** error is displayed and the procedure for changing riding mode will not be completed unless the rider closes the throttle and releases the brakes or the vehicle is stopped (zero speed) within 5 seconds. When the procedure is not successful the Standard Screen is displayed.



Note

If the change of riding mode is associated with the ABS change of state from ON to OFF or vice-versa, the instrument panel also starts the procedure for disabling or activating the ABS, respectively, upon confirmation of the selected riding mode.

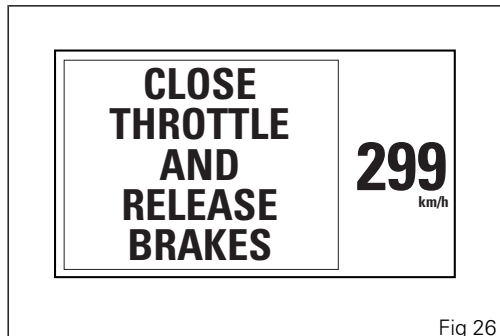


Fig 26

DTC

The instrument panel displays DTC status as follows:

- if DTC is active, DTC indication and intervention level number (1 to 8);
- if DTC is disabled, DTC OFF indication;
- if DTC is in fault or the Black Box is in fault, DTC — indication; the EOBD light turns on as well and the corresponding error is displayed.

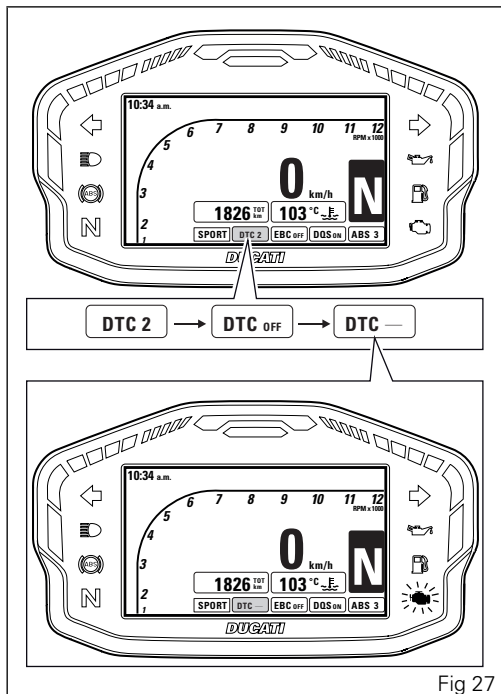


Fig 27



Attention

DTC is a rider aid that can be used both on the track and the road. The system is designed to make riding easier and to enhance safety, but in no way relieves the rider of the obligation to ride responsibly and maintain a high standard of conduct in accordance with traffic laws so as to avoid accident or force emergency maneuvers, whether caused by his own errors or those of other road users.

The rider must always be aware that active safety systems have a preventive function. The active elements help the rider control the motorcycle, making it as easy and safe to ride as possible. The presence of an active safety system should not encourage the rider to ride at speeds beyond the reasonable limits, not in accordance with road conditions, the laws of physics, good riding standards and traffic laws.

The following table indicates the most suitable level of DTC intervention for the various riding modes, as well as the default settings in the "Riding Mode" that can be selected by the rider.

DTC	RIDING MODE	USE	DEFAULT
1	RACE	Track use, for very expert riders, optimized for Pirelli tires with SC2 compound. System permits sliding sideways.	NO
2	RACE	Track use, for very expert riders, optimized for OEM tires (Original Equipment Manufacturer). Permits sliding sideways.	It is the default level for the "RACE" Riding Mode
3	RACE	Track use for expert riders. Permits sliding sideways.	NO
4	RACE	Track use (and road use for expert riders).	NO
5	SPORT	Sport style on the road or on the track, consistent with ENGINE 195HP LOW setting (maximum power 195HP, with Smooth delivery).	It is the default level for the "SPORT" Riding Mode
6	SPORT	"Very safe" style on dry surface, on the road or on the track, consistent with ENGINE 195HP LOW setting (maximum power 195HP, with Smooth delivery).	NO

DTC	RIDING MODE	USE	DEFAULT
7	WET (RAIN)	Track use, with rain tires, it was specifically optimized for Pirelli Diablo Rain tires (rear tire 190/55 ZR17).	NO
8	WET (HEAVY RAIN)	Wet road and slippery asphalt with OEM tires; it must be associated with ENGINE 120 setting.	It is the default level for the "WET" Riding Mode

Tips on how to select the sensitivity level



Attention

The DTC level 1 setting has been calibrated using tires with SC2 compound (Pirelli Diablo Supercorsa SC2), which are not originally supplied with your motorcycle. The use of this level with tires having different characteristics may alter the operating characteristics of the system.



Attention

The DTC level 7 setting has been calibrated using Rain tires (Pirelli Diablo Rain with size 190/55 ZR17 at the rear) which are not originally supplied with your motorcycle. The use of this level with tires having different characteristics may alter the operating characteristics of the system.



Attention

The DTC levels 2-3-4-5-6-8 settings have been calibrated using the tires originally supplied with your motorcycle (Pirelli Diablo Supercorsa SP 120/70ZR17 at the front and 200/55ZR17 at the rear). Using tires with different size and characteristics from the original tires may alter the operating characteristics of the system.

In the case of minor differences, such as tires of a different make and/or model than the OE ones, but with the same size (rear = 200/55 ZR17; front = 120/70 ZR17), it may be sufficient to select the suitable level setting from those available in order to restore optimal system operation.

If tires of a different size class are used or if the tire dimensions differ significantly from the original tires, it may be that the system operation is affected to the point where none of the 8 available level settings will give satisfactory results. In this case it is advisable to deactivate the traction control system.

If level 8 is selected, the DTC system will kick in at the slightest hint that the rear wheel is starting to spin. Between level 8 and level 1 there are further intermediate levels of intervention for the DTC. Levels 1, 2 and 3 allow the rear wheel to spin and

slide: these levels are recommended on the track only and exclusively for expert riders: in particular, level 1 is designed to work at best only with tires having SC2 compound.

The choice of the correct level mainly depends on the following parameters: The tire/asphalt grip (type of tire, amount of tire wear, the road/track surface, weather conditions, etc.).

The characteristics of the path/circuit (bends all taken at similar speeds or at very different speeds).

The riding mode (whether the rider has a "smooth" or a "rough" style).

Level depends on grip conditions: the choice of level setting depends greatly on the grip conditions of the track/circuit (see below, tips for use on the track and on the road). Level depends on type of track: if the track/path features bends all taken at similar speeds, it will be easier to find a level suitable for all bends; while a track/path with bends all requiring different speeds will require a DTC level setting that is the best compromise for all bends.

The relation of the DTC intervention level to riding mode: The DTC will tend to kick in more with a "smooth" riding mode, where the bike is leaned over further, rather than with a "rough" style, where the

bike is straightened up as quickly as possible when exiting a turn.

Tips for use on the track

We recommend that level 8 be used for a couple of full laps (to allow the tires to warm up) in order to get used to the system. Then try levels 7, 6, etc., in succession until you identify the DTC sensitivity level that suits you best (always try each level for at least two laps to allow the tires to warm up).

Once you have found a satisfactory setting for all the corners except one or two slow ones, where the system tends to kick in and control too much, you can try to modify your riding style slightly to a "rouger" approach to cornering i.e. straighten up more rapidly on exiting the corner, instead of immediately trying a different level setting.

Tips for use on the road

Activate the DTC, select level 8 and ride the motorcycle in your usual style; if the level of DTC sensitivity seems excessive, try reducing the setting to level 7, 6, etc., until you find the level that suits you best.

If changes occur in the grip conditions and/or circuit characteristics and/or your riding style, and the level

setting is no longer suitable, switch to the next level up or down and proceed to determine the best setting (e.g. if with level 7 the DTC intervention seems excessive, switch to level 6; alternatively, if on level 7 you cannot perceive any DTC intervention, switch to level 8).

EBC

The instrument panel displays EBC status as follows:

- if EBC is active, EBC indication and intervention level number (1 to 3);
- if EBC is disabled, EBC OFF indication;
- if EBC is in fault or the control unit is in fault, EBC — indication; the EOBD light turns on as well and the corresponding error is displayed.

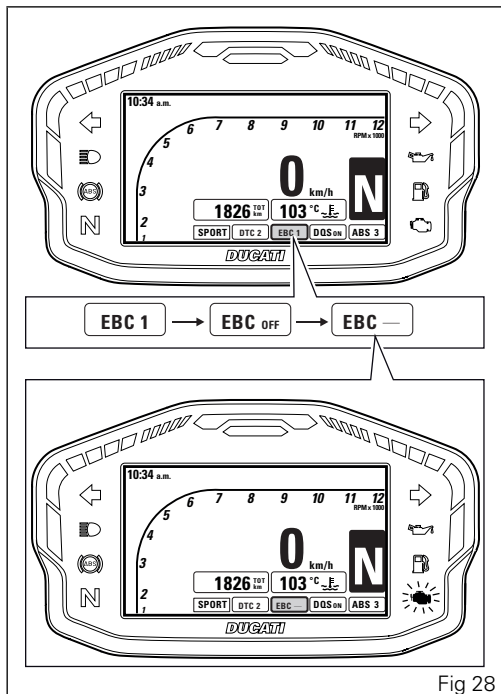


Fig 28

The EBC is a system controlling the engine brake while riding with throttle fully closed (both when downshifting and when simply releasing throttle with the same gear engaged, and both under braking or not), this system independently sets the throttles in order to make the torque transmitted backward from wheel to engine during these stages constant.

The system allows the rider to select among various settings, from a maximum engine brake with system set to OFF to a decreasing level of engine brake at increasing level number.

System intervention is quite important at high engine rpm and decreases as the engine rpm decreases.



Attention

EBC is a rider aid that can be used both on the track and the road. The system is designed to make riding easier and to enhance safety, but in no way relieves the rider of the obligation to ride responsibly and maintain a high standard of conduct in accordance with traffic laws so as to avoid accidents or force emergency maneuvers, whether caused by his own errors or those of other road users.

The following table indicates the most suitable level of EBC intervention for the various riding types as well as the default settings in the "Riding Mode" that can be selected by the rider:

EBC	CHARACTERISTIC	DEFAULT
OFF	Maximum engine brake	NO
1	Rather important engine brake, but less than that obtained with EBC OFF	It is the default level for all Riding Modes
2	Very low engine brake, recommended only for track use and for riders requiring a low engine brake when decelerating	NO
3	Minimum engine brake, recommended only for track use and for riders preferring a very low engine brake when decelerating	NO

Tips on how to select the sensitivity level



Attention

The EBC levels 1-2-3 settings have been calibrated using the tires originally supplied with your motorcycle (Pirelli Diablo Supercorsa SP 120/70ZR17 at the front and 200/55ZR17 at the rear). The use of tires of different size and characteristics from the original tires (in particular at the rear) may alter the operating characteristics of the system.

In the case of minor differences, such as tires of a different make and/or model than the OE ones, but with the same size (rear = 200/55 ZR17; front = 120/70 ZR17), it may be sufficient to select the suitable level setting from those available in order to restore optimal system operation.

If tires of a different size class are used or if the tire dimensions differ significantly from the original tires, it may be that the system operation is affected to the point where none of the 3 available level settings will give satisfactory results. In this case it is advisable to deactivate the traction control system.

Selecting level 3, the EBC will kick in to ensure the minimum engine brake possible. Between level 3 and

level 1 the engine brake is increasing progressively; with EBC OFF you set the maximum engine brake possible.

The choice of the correct level mainly depends on the following parameters:

The tire/asphalt grip (type of tire, amount of tire wear, the road/track surface, weather conditions, etc.).

The characteristics of the path/circuit (bends all taken at similar speeds or at very different speeds).

The Riding Mode.

Level depends on grip conditions: the choice of level setting depends greatly on the grip conditions of the track/circuit (see below, tips for use on the track and on the road).

Level depends on type of track: if the track/path requires consistent braking (always aggressive or always smooth), it will be easier to find a level suitable for all braking instances; while a track/path requiring different braking power will require an EBC level setting that is the best compromise for all instances.

DQS

The instrument panel displays DQS status as follows:

- if DQS is enabled, DQS ON indication;
- if DQS is disabled, DQS OFF indication;
- if DQS is in fault or the control unit is in fault, DQS — indication; the EOBD light turns on as well and the corresponding error is displayed;
- if the DQS is not present on the motorcycle, the symbol — is shown.

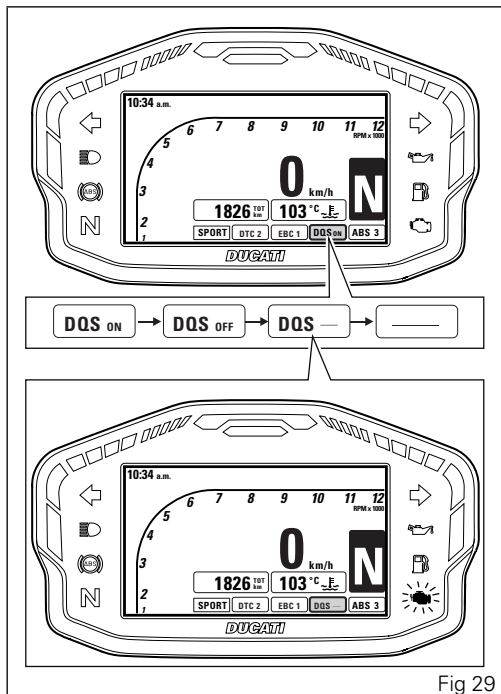


Fig 29

ABS

If the vehicle is equipped with ABS and the instrument panel displays the box with ABS status.

The instrument panel displays:

- if ABS is active, ABS indication and intervention level number (1 to 3);
- if ABS is disabled, ABS OFF indication;
- if ABS is in fault, ABS — indication; the ABS and EOBD lights turn on as well and the corresponding error is displayed.



Note

ABS 1 indication is always associated with the icon ABS FRONT ONLY displayed on amber background. This indication is displayed in the area where side stand status is, and the side stand status information has higher priority.

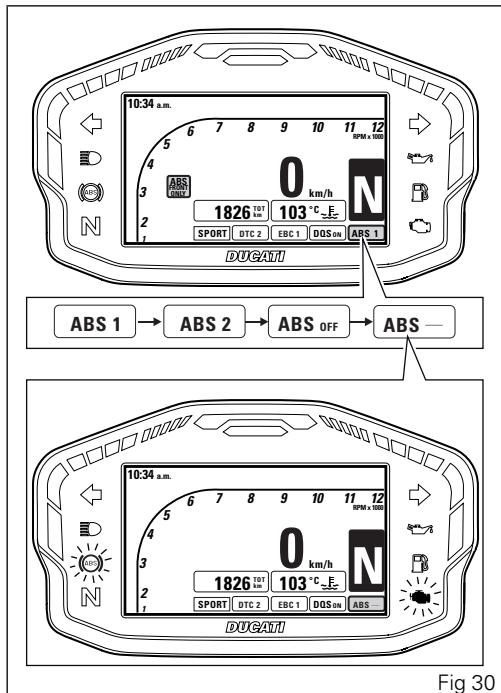


Fig 30

The following table indicates the most suitable level of ABS intervention for the various riding types, as well as the default settings in the "Riding Mode" that can be selected by the rider:

ABS	RIDING MODE	CHARACTERISTIC	DEFAULT
OFF		The ABS is disabled	NO
1	RACE	Exclusively for track use, for expert riders (not recommended for road use). The ABS in this mode only works on the front wheel (preventing it from locking), while there is no control on the rear wheel; the system does NOT control lift-up and there is NO combined braking (front and rear)	It is the default level for the "RACE" Riding Mode
2	ROAD	For road use in good grip conditions, both wheels are controlled by the system; the system combines braking power generating pressure even on the rear caliper, anti lift-up control is active but this setting mostly focuses on braking power and allows a few uncontrolled lift-ups	It is the default level for the "SPORT" Riding Mode
3	WET CONDITION ROAD/ TRACK	For use in all wet conditions, system controls both wheels and combines braking power generating pressure even on the rear caliper; the system controls most of the lift-ups	It is the default level for the "WET" Riding Mode

Tips on how to select the sensitivity level



Attention

The ABS levels 1-2-3 settings have been calibrated using the tires originally supplied with your motorcycle (Pirelli Diablo Supercorsa SP 120/70ZR17 at the front and 200/55ZR17 at the rear). The use of tires of different size and characteristics from the original tires (in particular at the rear) may alter the operating characteristics of the system.

In the case of minor differences, such as tires of a different make and/or model than the OE ones, but with the same size (rear = 200/55 ZR17; front = 120/70 ZR17), it may be sufficient to select the suitable level setting from those available in order to restore optimal system operation.

If tires of a different size class are used or if the tire dimensions differ significantly from the original tires, it may be that the system operation is affected to the point where none of the 3 available level settings will give satisfactory results. In this case it is advisable to deactivate the traction control system.

Selecting level 3, the ABS will intervene to ensure a very stable braking, good lift-up control, the vehicle

keeps a good alignment during the whole braking. Settings between level 3 and level 1 privilege more and more the braking power rather than stability and lift-up control; level 1 provides no lift-up control, the rear brake is not controlled by the ABS and there is no combined (front/rear) braking power.

The choice of the correct level mainly depends on the following parameters:

- 1) The tire/asphalt grip (type of tire, amount of tire wear, the road/track surface, weather conditions, etc.).
- 2) The rider's experience and sensitivity: expert riders can tackle a lift-up in trying to reduce the stopping distance to a minimum, while less expert riders are recommended to use settings 2 and 3, that will help them keeping the vehicle more stable even in emergency braking.

Menu 1 functions

MENU 1 functions can be displayed for every riding mode (Race, Sport and Wet) in one of the two following modes:

- ROAD;
- TRACK.

The functions are:

- Odometer (TOT);
- Trip meter 1 (TRIP1);
- Trip meter 2 (TRIP2);
- Partial fuel reserve counter (TRIP FUEL);
- LAP time (if active) - only for TRACK mode.

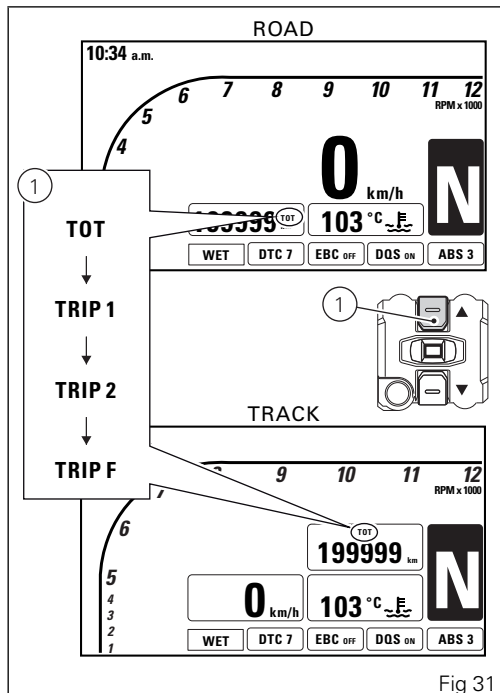


Fig 31

Menu 1: Odometer (TOT)

The odometer counts and displays the total distance covered by the vehicle with the set unit of measurement (mi or km).

The odometer number of mi or km is displayed with the TOT indication and unit of measurement. When the maximum value is reached (199999 mi or 199999 km) the instrument panel will permanently display said value.

The odometer value is saved permanently and cannot be reset under any circumstances.

The reading is not lost in case of a power off (Battery Off).



Note

Upon Key-On, the instrument panel always shows the Odometer indication for 10 seconds, then shows the user's settings page.



Note

If a string of flashing dashes " ---- " is displayed within odometer function, please contact a Ducati Dealer or Authorized Service Center.

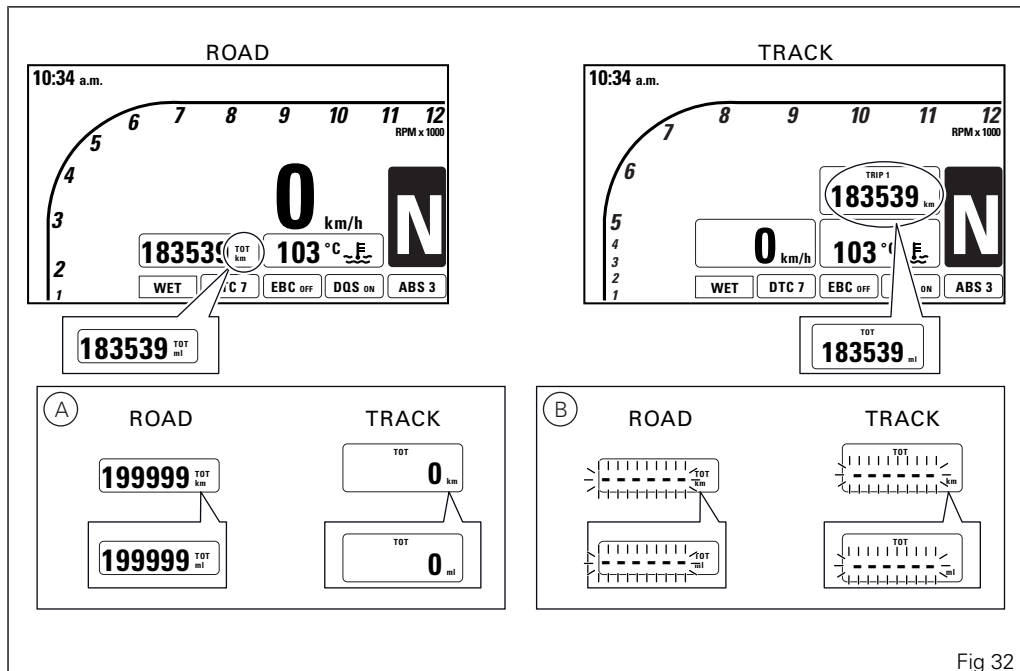


Fig 32

Menu 1: Trip 1 (TRIP 1)

The trip meter counts and displays the partial distance covered by the vehicle with the set unit of measurement (mi or km) and is used as a basis to calculate average fuel consumption, average speed and trip time.

The TRIP1 number of mi or km is displayed with the TRIP1 indication and unit of measurement.

When the reading exceeds the maximum value of 9999.9 mi or 9999.9 km, distance traveled is reset and the meter automatically starts counting from 0 again.

While the trip meter is displayed, press button (1) for 3 seconds to reset TRIP 1. When TRIP1 is reset, the average fuel consumption, average speed and trip time data are reset as well.

TRIP1 counter is automatically reset in case the system unit of measurement is changed manually: the counter will then start back from zero, considering the new units of measurement.

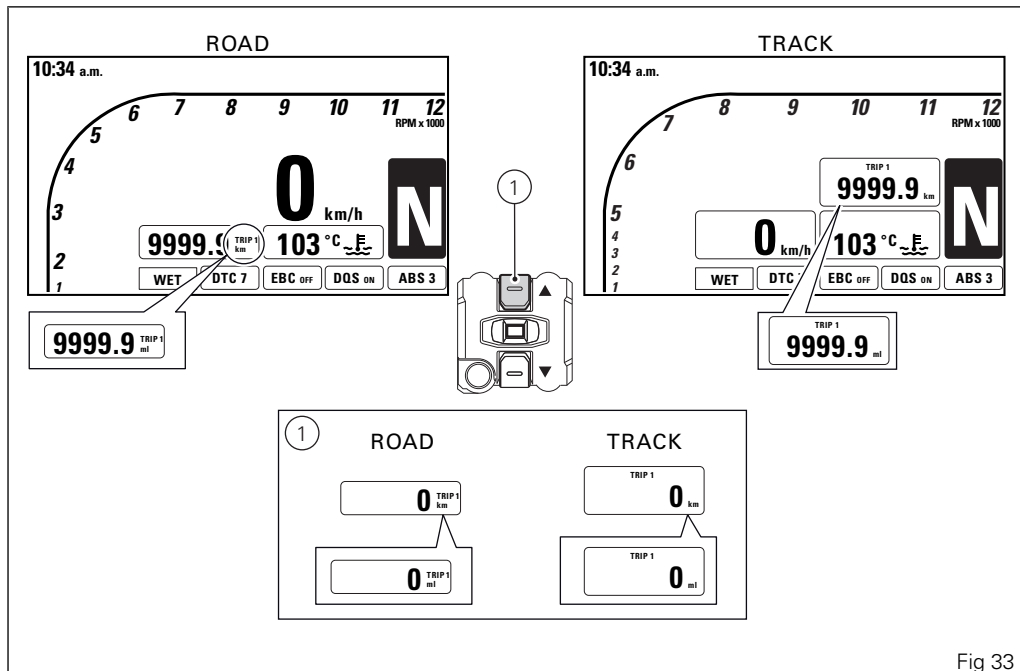


Fig 33

Menu 1: Trip 2 (TRIP 2)

The trip meter counts and displays the partial distance covered by the vehicle with the set unit of measurement (mi or km).

The TRIP2 number of mi or km is displayed with the TRIP2 indication and unit of measurement.

When the reading exceeds the maximum value of 9999.9 mi or 9999.9 km, distance traveled is reset and the meter automatically starts counting from 0 again.

While the trip meter is displayed, press button (1) for 3 seconds to reset TRIP 2.

TRIP2 counter is automatically reset in case the system unit of measurement is changed manually: the counter will then start back from zero, considering the new units of measurement.

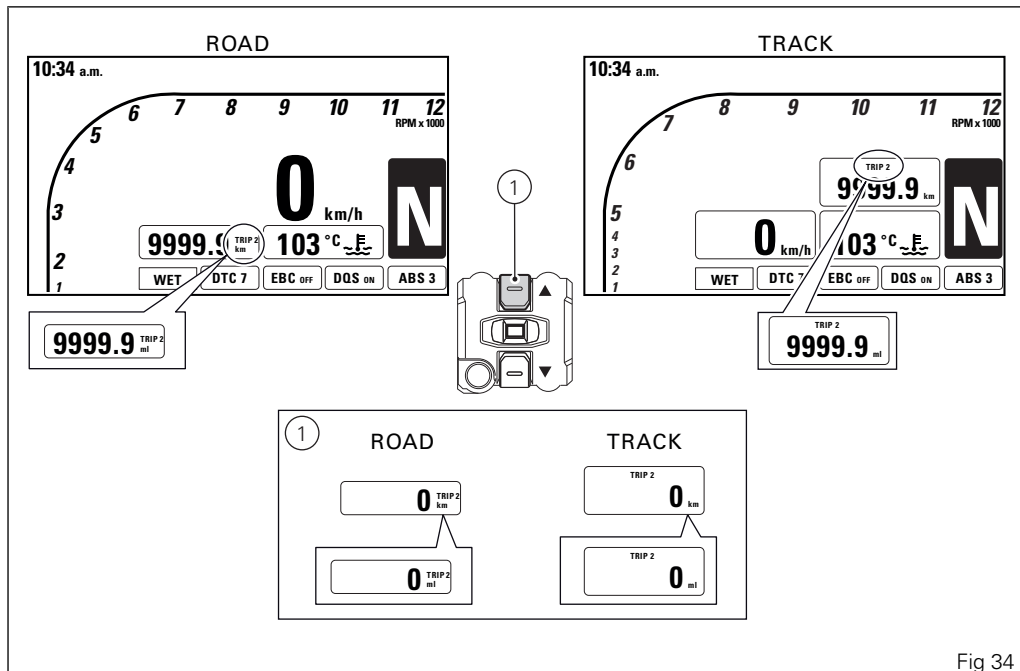


Fig 34

Menu 1: Partial fuel reserve counter (TRIP FUEL)

The fuel trip meter counts and displays the distance covered by the vehicle on reserve (since the low fuel light turns on) with the set unit of measurement (mi or km).

When the Low fuel light turns on, the display automatically shows the TRIP FUEL function, regardless of the currently displayed function; it is then possible to toggle through the other Menu functions.


Trip fuel reading remains stored even after Key-Off until the vehicle is refueled. Count is interrupted automatically as soon as fuel is topped up to above minimum level.

The number of mi or km is displayed with the TRIP FUEL indication and unit of measurement.

When the reading exceeds the maximum value of 9999.9 mi or 9999.9 km, distance traveled is reset and the meter automatically starts counting from 0 again.


When the TRIP FUEL function is not active, the corresponding value will not be displayed in the Menu.

ROAD

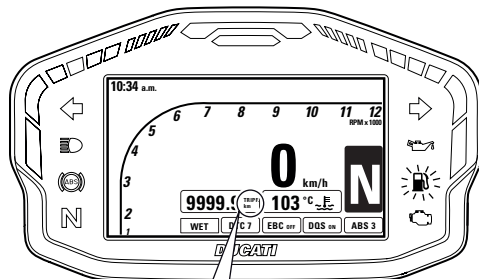

9999.9 TRIP F.
ml

TRACK

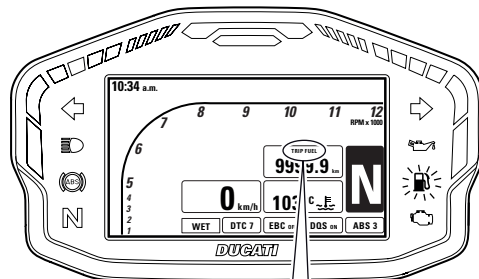

TRIP FUEL
9999.9 ml

Fig 35

Menu 1: LAP time

The LAP function is only available for the display layout with standard screen in TRACK mode. LAP function information is available when the function is active. When the LAP function is activated, the timer is displayed indicating "0'00''00" as well as the LAP number with first indication "LAP --".

When the FLASH button (3) is pressed for the first time, the timer starts with resolution of a tenth of a second ("0'00''0") and current LAP number is indicated, too. Every time the FLASH button (3) is pressed again, the display temporarily shows the number and time of the just-ended lap, then it will show the timer and number of the new current lap. If lap timer is active but vehicle is at standstill, lap timer is temporarily stopped after 5 seconds and it is displayed with the initial indication "0'00''00" and lap number "LAP --". The next time rider pushes the FLASH button (3), lap timer is reactivated.




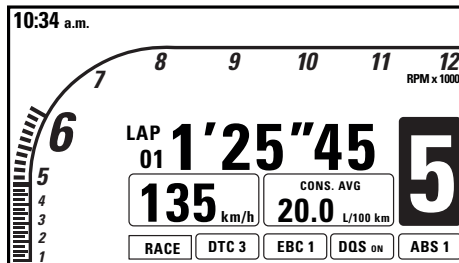


Fig 36

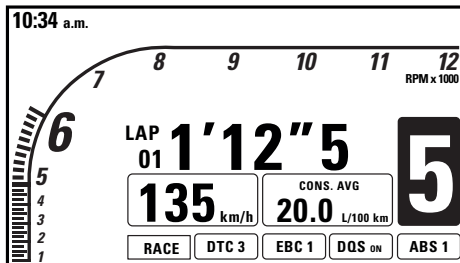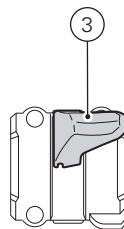

Note

When the LAP function is active, the FLASH button takes on the dual function of high beam "FLASH" and LAP timer start / stop (new lap start indication).

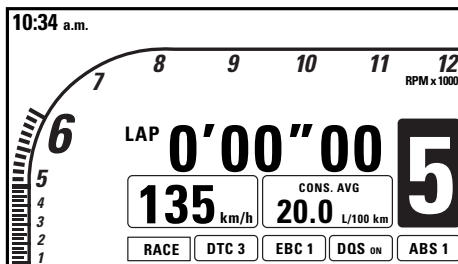

Note

The TRIP FUEL function always has top priority over the LAP function: in case of activation of the TRIP FUEL function with active LAP function, the LAP timer view is automatically removed and TRIP FUEL information is displayed instead.

LAP recording

If the LAP function is active, the lap time can be recorded for a total of 30 consecutive laps.

Operation:

- when the FLASH button (3) is pressed for the first time, the instrument panel displays the lap timer with resolution of a tenth of a second (0' 00'' 0);
- the next time the FLASH button (3) is pressed, the instrument panel displays for 5 seconds the number and time for the just-ended lap, with a resolution of a hundredth of a second;

- after these 5 seconds, the instrument panel goes back to lap timer page referred to the new current lap.
- if the vehicle is at a standstill for more than 5 seconds, lap timer operation is temporarily stopped and it displays the initial indication "0'00''00" and lap number "LAP – –";
- the next time rider pushes the FLASH button (3) or any equivalent control, lap timer is reactivated.

If the time is never stopped, it will roll over upon reaching 9 minutes, 59 seconds and 99 hundredths; the lap timer starts counting from zero and will keep running until the lap is stopped or the recording function is disabled.

Laps are numbered from 01 to 30 and are in a loop: after the first 30 laps the instrument panel will overwrite information starting from Lap 01.

If the LAP function is interrupted (change to ROAD layout or temporary disabling or key-off) and then reactivated (back to TRACK layout or reactivation or key-on) but memorized laps are not deleted, lap information will be recorded by overwriting data of the oldest Lap. Example: if you rode 34 laps without deleting data, the instrument panel stores the first 30 laps and then overwrites the first 4 laps. Upon the

following key-on or reactivation of the LAP function, if no data were deleted, the instrument panel will continue storing data from Lap 05.

During every lap, the following data are stored:

- no. 30 lap times (time between consecutive start and stop);
- no. 30 values for max. RPM (maximum RPM value reached in every lap);
- no. 30 values for max. speed (maximum speed value reached in every lap).

MENU 2 functions

MENU 2 functions can be displayed for every riding mode (Race, Sport and Wet) in one of the two following modes:

- ROAD
- TRACK

The functions are:

- Engine coolant temperature
- Instantaneous fuel consumption (CONS.)
- Average Fuel Consumption (CONS. AVG)
- Average speed (SPEED AVG)
- Trip time (TRIP TIME)
- External air temperature

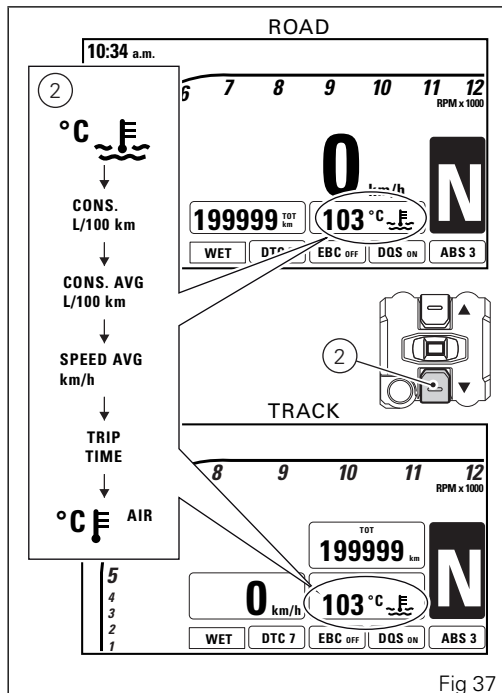


Fig 37

MENU 2: Coolant temperature

The instrument panel receives information about the engine temperature (already calculated in °C) and displays the value in the set unit of measurement (°F or °C), followed by the unit of measurement and the engine temperature symbol.

The temperature display range goes from +104 °F to +248 °F (40 °C to +120 °C).

If reading is:

- <= (lower than or equal to) -40 °F (-40 °C), a string of flashing dashes " - - - " is displayed;
- included within the interval -38 °F (-39 °C) and +102 °F (+39 °C) " LOW " is displayed steadily;
- included within the interval +104 °F (+40 °C) and +248 °F (+120 °C) the value is displayed steadily;
- >= (higher than or equal to) +250 °F (+121 °C), "HIGH" is displayed flashing.

If coolant temperature exceeds:

- +212 °F (100 °C), the temperature reading is immediately displayed in MENU 2, regardless of any other function displayed in MENU 2; the other MENU 2 functions can still be displayed;



- +250 °F (121 °C), the temperature reading is immediately displayed in MENU 2, regardless of any other function displayed in MENU 2; the other MENU 2 functions cannot be displayed. The alarm icon is also displayed.

If the coolant temperature sensor is in fault, a string of flashing dashes " - - - " is displayed, followed by the set unit of measurement; the EOBD light turns on as well and the ENGINE TEMP. SENSOR error is displayed.

If the instrument panel is not receiving coolant temperature value, a string of steady dashes " - - - " is displayed, followed by the unit of measurement.

ROAD

TRACK

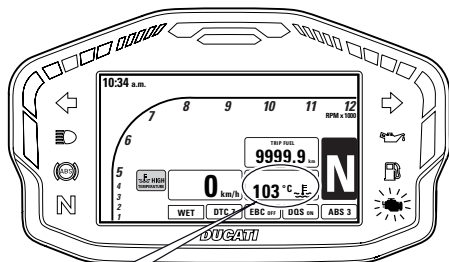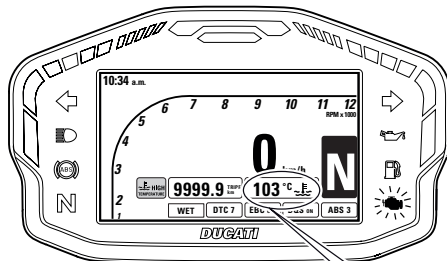

217 °F

Fig 38

MENU 2: Instantaneous fuel consumption

The instrument panel calculates and displays the vehicle instantaneous fuel consumption, the set unit of measurement and CONS. text.

The calculation is made considering the quantity of fuel used and the distance traveled during the last second. Value is expressed in the set unit of measurement: liters / 100 km or mpg UK or mpg USA. The active calculation phase only occurs when the engine is running and the vehicle is moving (times when the vehicle is not moving when speed is equal to 0 and/or when the engine is off are not considered). When the calculation is not made, a string of three dashes is displayed "- - -" steadily as instantaneous fuel consumption.



Note

It is possible to change the units of measurement for "Consumption" (both average and instantaneous together) from L/100 to km/L through the Setting MENU using the UNITS function.

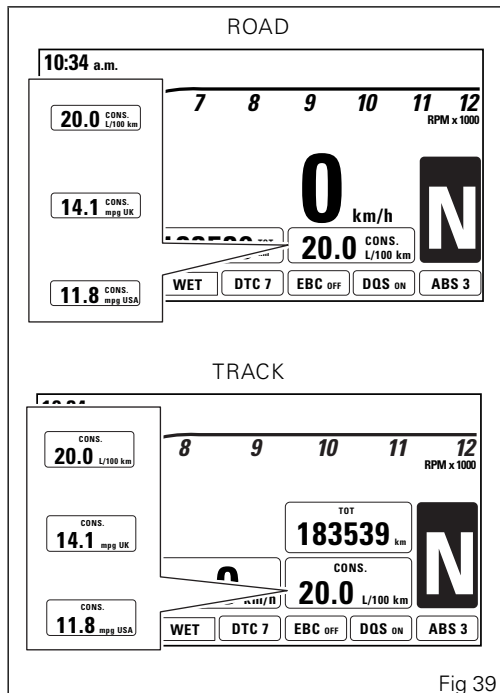


Fig 39

MENU 2: Average fuel consumption

The instrument panel calculates and displays the vehicle average fuel consumption, the set unit of measurement and CONS. AVG text. The calculation is made considering the quantity of fuel used and the distance traveled since TRIP 1 was last reset. When TRIP1 is reset, the value is reset and the first value available is displayed 10 seconds after the reset. During the first 10 seconds, when the value is not yet available, the display will show a string of three dashes "- - -" steadily as average fuel consumption. Value is expressed in the set unit of measurement: (liters / 100 km or mpg UK or mpg USA). The active calculation phase occurs when the engine is running and the vehicle is stopped (moments when the vehicle is not moving and the engine is off are not considered).



Note

It is possible to change the units of measurement for "Consumption" (both average and instantaneous together) from L/100 to km/L through the Setting MENU using the UNITS function.

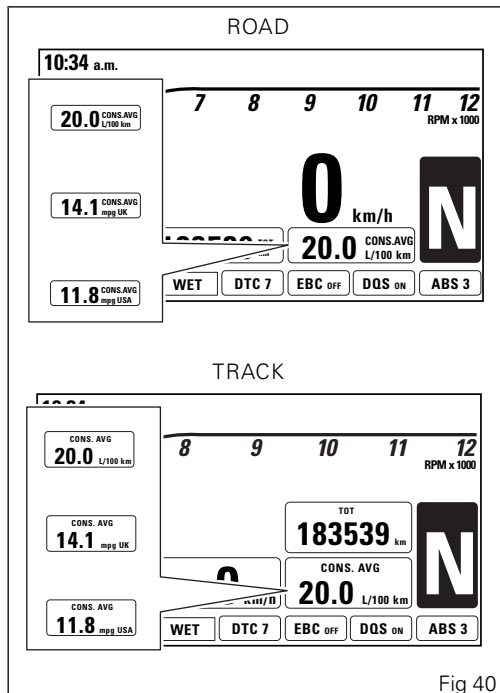


Fig 40

MENU 2: Average speed

The instrument panel calculates and displays the vehicle average speed, the set unit of measurement and SPEED AVG text. The calculation considers the distance and time since TRIP1 was last reset. When TRIP1 is reset, the value is reset and the first value available is displayed 10 seconds after the reset. During the first 10 seconds, when the value is not yet available, the display will show a string of three dashes " - - - " steadily as average speed. The active calculation phase occurs when the engine is running and the vehicle is stopped (moments when the vehicle is not moving and the engine is off are not considered). The average speed value displayed is calculated by adding 5% in order to be consistent with vehicle speed indication.



Note

You may change the units of measurement of Speed (and distance traveled as well) from km/h (and km) to mph (and mi) through the Setting Menu using the UNITS SETTING function.

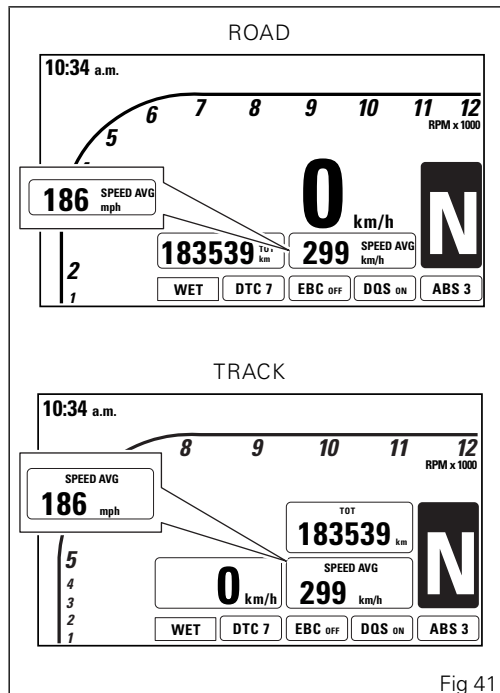


Fig 41

MENU 2: Trip time


The instrument panel calculates and displays the trip time as hhh:mm followed by TRIP TIME. The calculation considers the time since TRIP1 was last reset. When TRIP1 is reset, this value is reset as well. The time count active phase occurs when the engine is running and the vehicle is stopped (the time is automatically stopped when the vehicle is not moving and the engine is off and restarts when the counting active phase starts again). When the reading exceeds 720:00 (720 hours and 00 minutes), the meter is reset and automatically starts counting from 0 again.



Note

If you change the unit of measurement for an item connected to Speed (and distance) or Consumption, the trip time value will be automatically reset.

ROAD

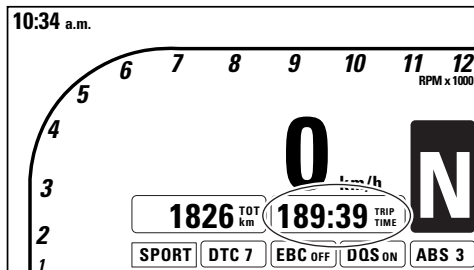

TRACK

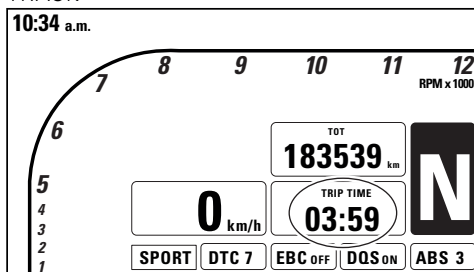


Fig 42

MENU 2: External air temperature

The instrument panel displays the ambient temperature in the set unit of measurement (°C or °F), followed by the set unit of measurement, AIR text and the thermometer symbol. The temperature value is displayed when ranging from -38 °F to +255 °F (or -39 °C to +124 °C). For different temperature values (lower than -38 °F (-39 °C) or higher than +255 °F (+124 °C)) a string of three steady dashes " - - - " is displayed followed by the unit of measurement.

If the air temperature sensor is in fault, the instrument panel will show three flashing dashes " - - - " as air temperature value, followed by the unit of measurement, the EOBd light will turn on as well and the corresponding error T AIR SENSOR is displayed. If the instrument panel is not receiving air temperature value, a string of three steady dashes " - - - " is displayed followed by the unit of measurement.



Note

When the vehicle is stopped, the engine heat may influence the displayed temperature.

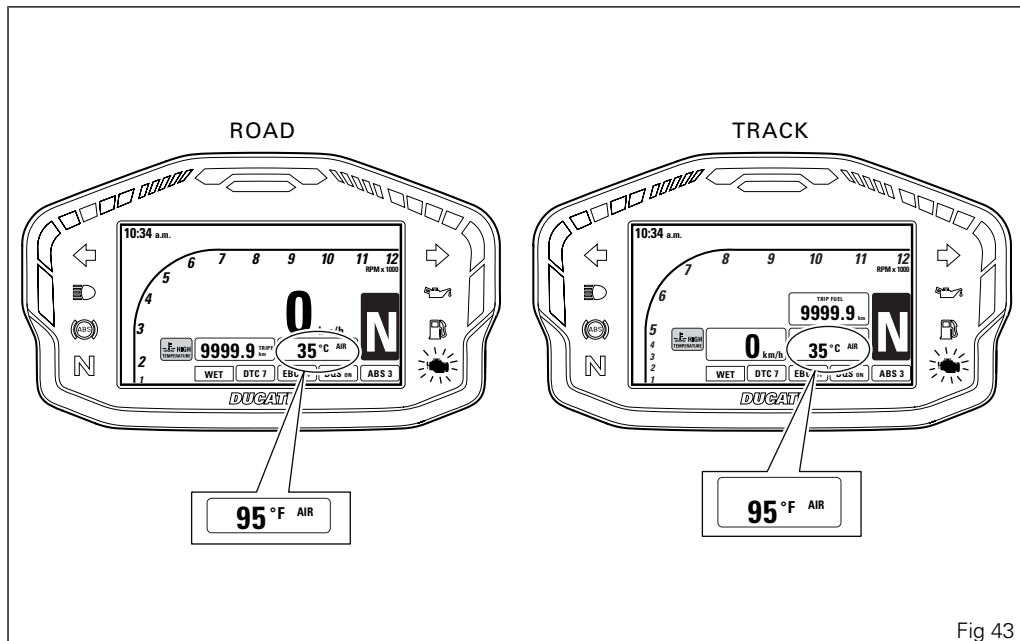


Fig 43


Auxiliary functions

DDA

The instrument panel indicates DDA status only if the vehicle fits the DDA.

If the DDA indication is displayed it means that the DDA is active and recording.

If the DDA indication is not displayed it means that the DDA is not active.

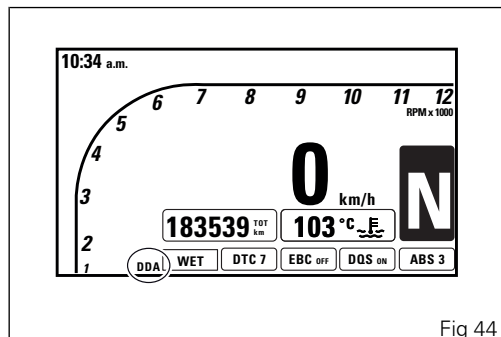

CLOCK

The instrument panel receives information about the time to be displayed.

This indication is displayed at the top left side of the display.

The instrument panel shows the time in the following format:

hh (hours) : mm (minutes)

with "a.m." indication (for values ranging between 0:00 and 11:59), or with "p.m." indication (for values ranging between 12:00 and 12:59 and between 1:00 and 11:59).

If the instrument panel does not receive current time information, it displays "- : - - a.m." steadily.

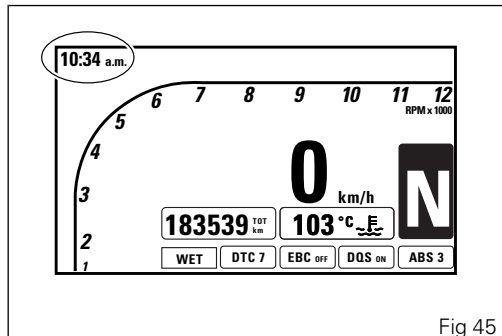


Fig 45

Service warning (SERVICE)

This indication shows the user that the bike is due for service and must be taken to a Ducati Authorized Service Center.

The service warning indication can be reset only by the Authorized Ducati Service Center during servicing.

Icons are displayed according to the Warnings/Alarms displaying rules (refer to "page 105").

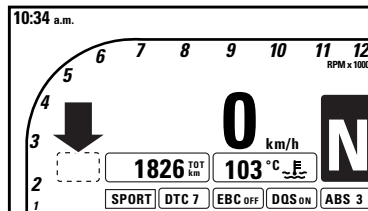


Fig 46

OIL SERVICE zero indication

The first maintenance indication is OIL SERVICE zero and is enabled when the odometer counter reaches the first 1000 km: it is displayed in the "large" format, and then is always visible in the small format, until the Ducati Authorized Service Center "resets" it during servicing.

Icons are displayed according to the Warnings/Alarms displaying rules (refer to "page 105").



Fig 47

OIL SERVICE or DESMO SERVICE countdown indication

After OIL SERVICE zero reset (at 1000 km), the instrument panel activates the countdown of the miles (or kilometers) left before the following service operation (OIL SERVICE or DESMO SERVICE).

The green indication is shown upon Key-On for 2 seconds in the "large" format; when there are 1000 km left before the next service operation, the indication turns yellow and is enabled upon every Key-On for 5 seconds.

Icons are displayed according to the Warnings/Alarms displaying rules (refer to "page 105").

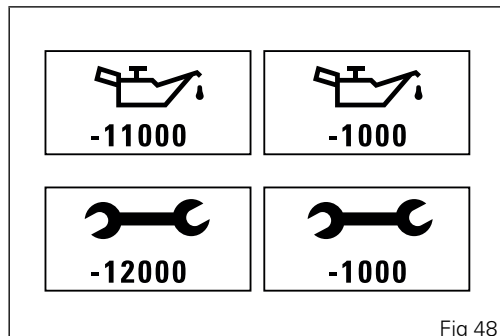


Fig 48

OIL SERVICE or DESMO SERVICE indication

When the service threshold is reached, the warning for the type of service required is triggered (OIL SERVICE or DESMO SERVICE).

The indication of the service type is enabled upon every Key-On for 5 seconds in the "large" format, and then is always visible in the small format, until the Ducati Authorized Service Center "resets" it during servicing.

Icons are displayed according to the Warnings/Alarms displaying rules (refer to "page 105").

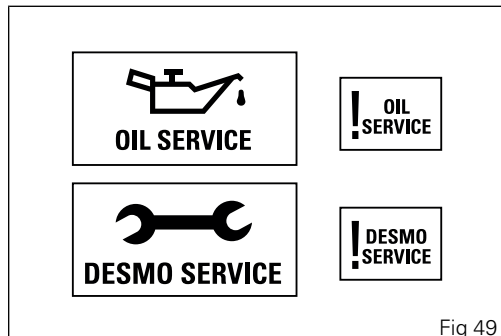


Fig 49

Warnings/Alarms (Warning)

The instrument panel manages several warnings / alarms (warnings), in order to give useful information to the rider when he/she is using the vehicle.

Upon Key-On, if there are active warnings the instrument panel displays the indication of the present warnings.

During normal vehicle operation, when a warning is triggered the instrument panel automatically displays the warning. When a warning is triggered, the indication remains well visible for 5 seconds ("large" icon) then becomes smaller ("small" icon).

If several live warnings are present, the corresponding icons will be displayed one after the other and every one will stay on for 3 seconds.

No special signal light turns on if any warning is activated.

High coolant temperature (High temperature)

This function warns the rider when the engine coolant temperature reaches 250°F (121°C).



Note

In this case, Ducati recommends stopping and shutting off the engine immediately; ensure that fans are on.

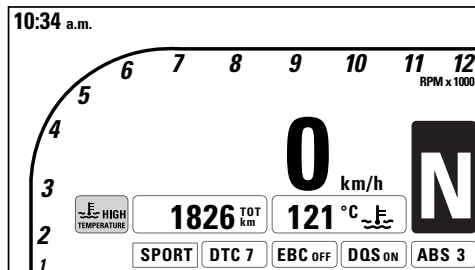
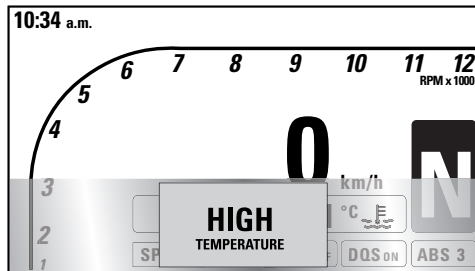


Fig 50

DDA memory full (DDA full)

This function warns the rider when the DDA memory is full, and thus no other trip data can be stored.

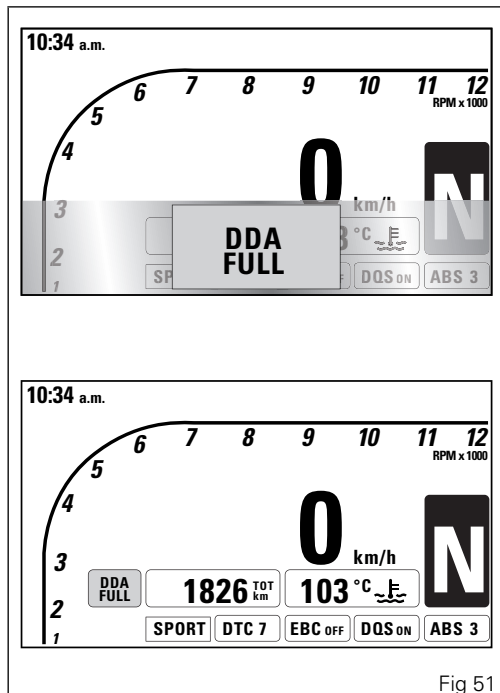


Fig 51

Ice

This function warns the rider about the possible presence of ice on the road, due to a low external temperature.

The message is displayed when the temperature goes down to 39°F (4°C), and is disabled when temperature goes up to 43°F (6°C).



Attention

This warning does not exclude the possibility of icy road sections even at temperatures above 39°F (4°C); when external temperatures are "low" it is always recommended to ride carefully, particularly on sections that are not exposed to the sun and/or on bridges.

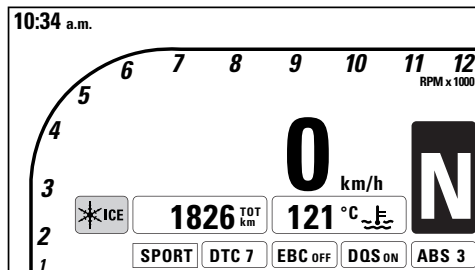
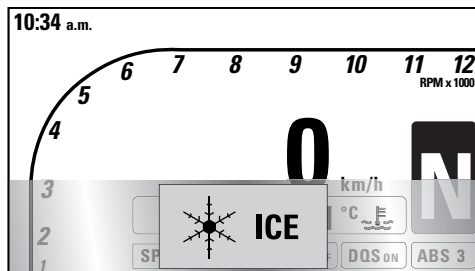


Fig 52

Error indication

The instrument panel manages error warnings in order to allow the rider to identify any abnormal vehicle behavior in real time.

Upon Key-On, if there are errors the instrument panel displays the indication of the present errors and turns on the EOBD light.

During vehicle normal operation, any time an error warning is activated, the instrument panel automatically displays the error indication and turns on the EOBD light.

When an error is triggered, the indication remains well visible for 5 seconds ("large" icon) then becomes smaller ("small" icon).

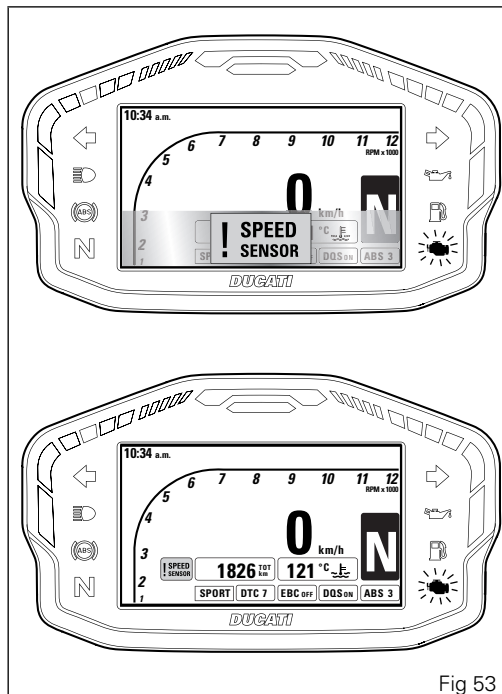


Fig 53

If several errors are present, the corresponding icons will be displayed one after the other and each will stay on for 3 seconds.

When an error is triggered the EOBD light turns on as well.



Attention

When one or more errors are displayed, always contact a Ducati Dealer or Authorized Service Center.

Displayed error description

Displayed error	Description
CAN LINE	CAN line BUS Off
UNKNOWN DEVICE	Control unit not acknowledged by the system - wrong SW
ABS	ABS control unit faulty communication / operation
BBS	BBS control unit faulty communication / operation
	BBS control unit general malfunction
	Exhaust valve motor malfunction
DSB	DSB control unit faulty communication / operation
E-LOCK	E-Lock control unit faulty communication / operation
	E-Lock control unit general malfunction
	(Immobilizer) key-antenna malfunction
ENGINE	ECU control unit faulty communication / operation
	ECU control unit general malfunction
	Throttle position sensor malfunction
	Throttle grip position sensor malfunction
	Throttle motor or relay malfunction
	Pressure sensor malfunction
	Engine coolant temperature sensor malfunction

Displayed error	Description
	Intake duct air temperature sensor malfunction
	Injection relay malfunction
	Ignition coil malfunction
	Injector malfunction
	Engine rpm sensor malfunction
	Lambda sensor or Lambda sensor heater malfunction
	Vehicle starting relay malfunction
	Quick shift device switch malfunction
	Secondary air sensor malfunction
GEAR SENSOR	Gear sensor malfunction
FUEL SENSOR	Reserve NTC sensor malfunction
SPEED SENSOR	Front and/or rear speed sensor malfunction
BATTERY	Battery voltage too high or too low
STOP LIGHT	Stop light not working
FAN	Electric cooling fan malfunction
SIDE STAND	Side stand sensor malfunction



Note

"FAN" indication can be activated also by BBS ECU malfunction and its faulty communication with fans.
Pay attention to engine temperature indication.

Error icons table

WARNING LIGHT / ERROR MESSAGE		ERROR
	ABS	ABS control unit
	BBS	Black-Box
	DSB	instrument panel control unit
	E-LOCK	E-LOCK control unit
	CAN LINE	Can Bus OFF
	UNKNOWN DEVICE	Software compatibility
	FUEL SENSOR	Low fuel sensor
	GEAR SENSOR	Gear sensor
	SIDE STAND	Side stand sensor

WARNING LIGHT / ERROR MESSAGE	ERROR
 STOP LIGHT	Rear stop light
 BATTERY	Battery voltage
 ENGINE	ECU
 SPEEDSENSOR	Speed sensor
 FAN	Cooling fan



Note

"FAN" indication can be activated also by BBS ECU malfunction and its faulty communication with fans. Pay attention to engine temperature indication.

Side stand status display

The instrument panel receives data about stand status and, if side stand is open, it displays "SIDE STAND" on a red background.

If the Side stand sensor error is live, the instrument panel displays the open side stand warning, turns on the EOBD light and displays the corresponding "Side stand sensor" error.

If the instrument panel does not receive the side stand status, the "SIDE STAND" indication (open side stand) will flash to indicate an indefinite status.

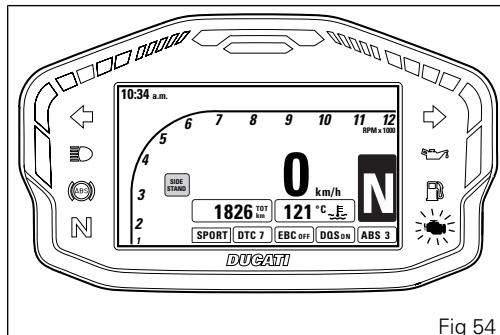


Fig 54

Setting MENU

This menu allows enabling, disabling and setting some vehicle functions.

To enter the Setting MENU hold button (2) for 3 seconds, with Key-On and vehicle actual speed $\leq$ (lower than or equal to) 12 mph (20 km/h): once inside this menu, you may no longer view any other function.

The Setting MENU displays the following functions:

- RIDING MODE
- RPM
- BATTERY
- DDA
- PIN CODE
- CLOCK
- DATE
- BACK LIGHT
- UNITS
- LAP (active only for display "TRACK" layout)

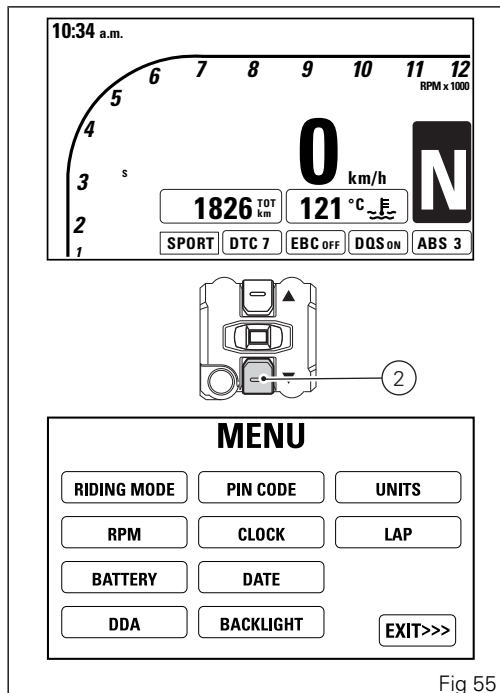


Fig 55



Important

For safety reasons, you are recommended to use this Menu with the bike at a standstill.

Press buttons (1) and (2) to highlight the customizable parameters one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item.

After highlighting the required parameter, press button (4) to open the corresponding Menu page.

If function is not available or temporarily disabled, the MENU page can not be opened.

To exit the Setting MENU, highlight "EXIT" and press CONFIRM MENU button 4.

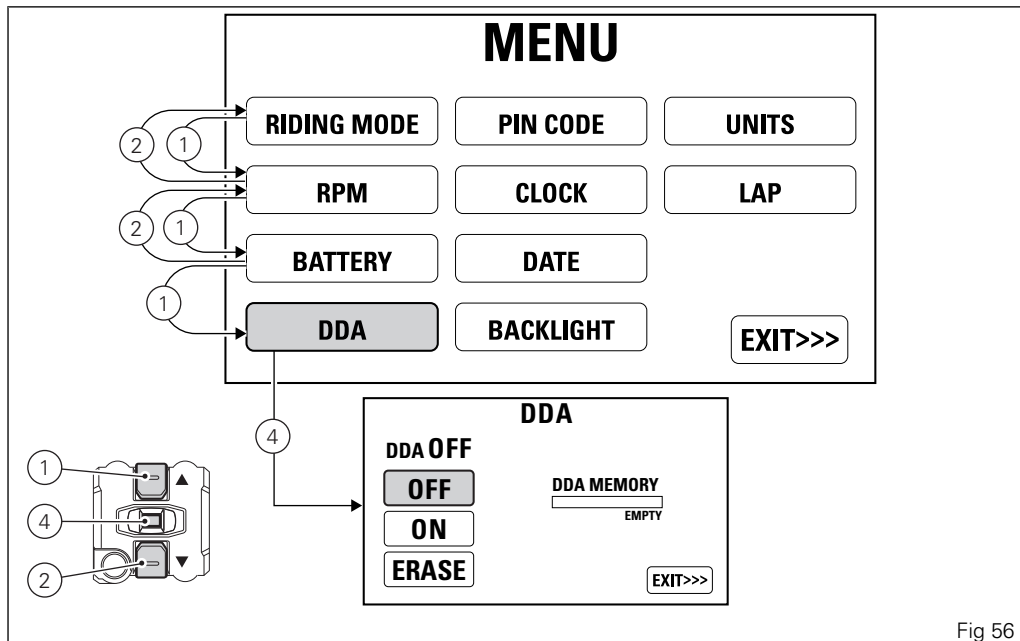




Fig 56

Customizing Riding Modes

All settings of every riding mode can be customized. Enter the Setting MENU.

Select "RIDING MODE" option by pressing button (1) or (2). Once function is highlighted, press CONFIRM MENU button (4).

You open the "RIDING MODE" menu. Select the desired riding mode (RACE, SPORT or WET), by pressing button (1) or (2). Once desired mode is highlighted, press CONFIRM MENU button (4). You open the selected riding mode customization Menu. While if you highlight "EXIT" and press button (4) you quit the sub-menu and go back to previous page.

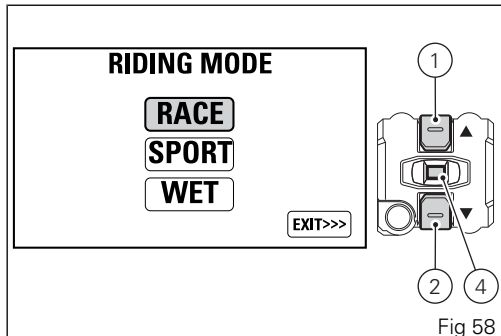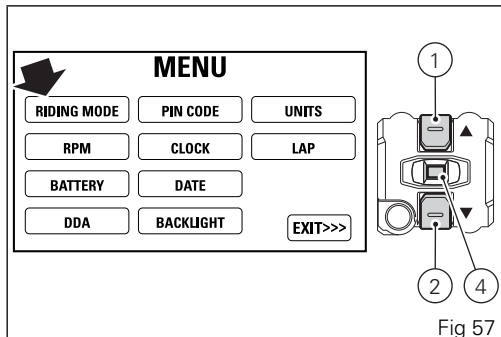

The parameters that can be customized for every riding mode are the following:

- ABS
- EBC
- DISPLAY
- DQS (active only if bike fitted with DQS)
- DTC
- ENGINE
- DEFAULT

Press buttons (1) and (2) to highlight the customizable parameters one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item.

After highlighting the required parameter, press button (4) to open the corresponding Menu page.

Any parameter change made is saved and remains in the memory also after a Battery-Off.

The parameters set by Ducati for each individual riding style can be restored with the DEFAULT function.

If you highlight "EXIT" and press button (4) you exit the sub-menu and go back to previous page.



Attention

Changes should only be made to the parameters by people who are experts in motorcycle setup; If the parameters are changed accidentally, use the "DEFAULT" function to reset the parameters.



Important

The parameter DES is not active in the versions of this motorcycle.

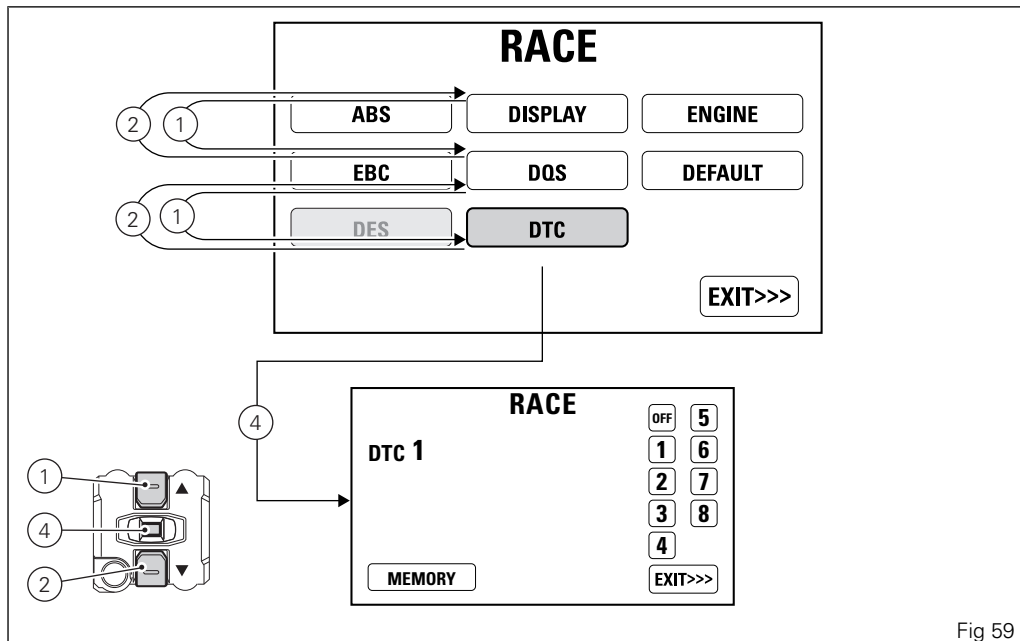


Fig 59

Customizing Riding Modes: ABS setting


This function disables or sets ABS level for the selected riding mode. Enter the Setting MENU.

Select "RIDING MODE" option by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

You open the "RIDING MODE" menu. Select the desired riding mode (RACE, SPORT or WET), by pressing button (1) or (2).

Once desired mode is highlighted, press CONFIRM MENU button (4). You open the selected riding mode customization Menu. Select the parameter to be customized (ABS), by pressing button (1) or (2). Once desired parameter is highlighted, press CONFIRM MENU button (4).

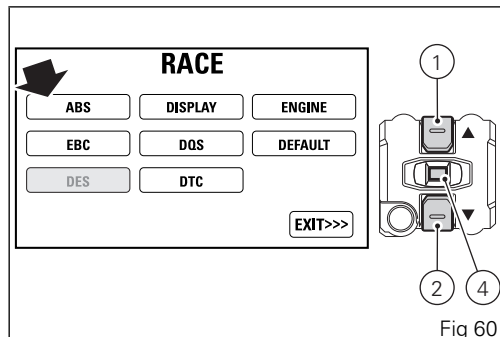

When you open the function, the currently set ABS level or status is shown on the left (e.g. ABS 1). Customization options are listed on the right: levels from 1 to 3 and status OFF.

Press buttons (1) and (2) to highlight the levels one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item.

Once desired level is selected, press CONFIRM MENU button (4) to highlight MEMORY item.

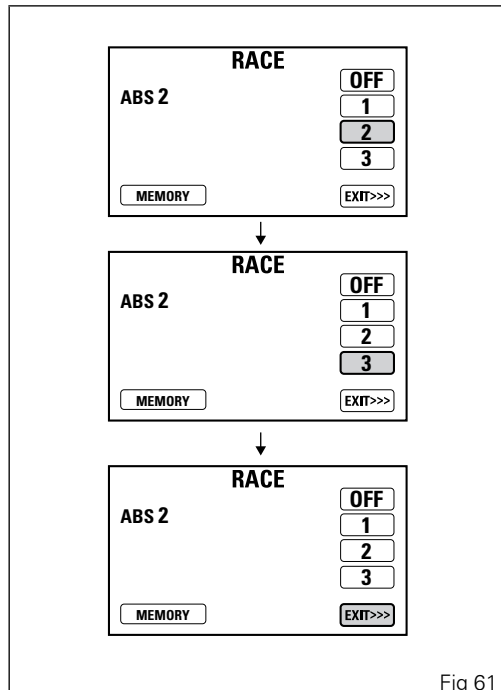


Fig 61

To save the new setting, hold button (4) for 3 seconds while the MEMORY item is highlighted in orange. If new settings have been saved, MEMORIZED will be shown in green for 1 second, the set level or status will be refreshed (refresh is indicated with the color green) and then EXIT will be highlighted in green. To exit the menu and go back to previous page, select EXIT and press button (4).



Note

When you enable or disable the ABS through this function, i.e. toggling from disabled to enabled system or vice-versa, the procedure for activating or deactivating the ABS is carried out: the change of status of the ABS control unit is not instantaneous, it takes at least 6 seconds.

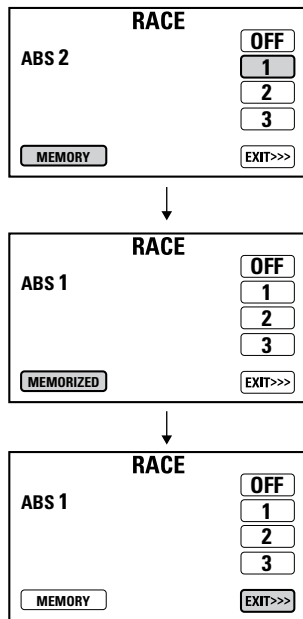


Fig 62

Customizing Riding Modes: Display setting

This function allows selecting the layout of the main screen of each riding mode.

Enter the Setting MENU. Select "RIDING MODE" option by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

You open the "RIDING MODE" menu. Select the desired riding mode (RACE, SPORT or WET), by pressing button (1) or (2).

Once desired mode is highlighted, press CONFIRM MENU button (4).

You open the selected riding mode customization Menu.

Select the parameter to be customized (DISPLAY) by pressing button (1) or (2).

Once desired parameter is highlighted, press CONFIRM MENU button (4).

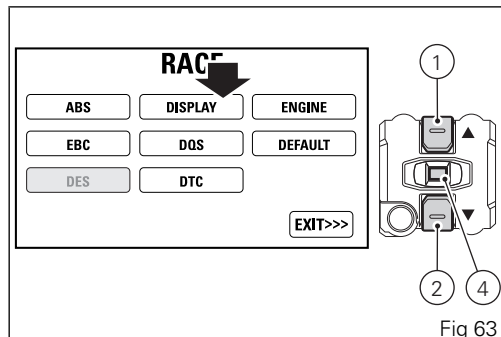


Fig 63

When opening this function, the currently set type of main page is shown on the left. Customization options are listed on the right: ROAD or TRACK. Press buttons (1) and (2) to highlight the main page types one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item.

Once desired main page layout is selected, press CONFIRM MENU button (4) to highlight MEMORY item.

To save the new setting, hold button (4) for 3 seconds while the MEMORY item is highlighted in orange.

If new settings have been saved, MEMORIZED will be shown in green for 1 second, the set page layout will be refreshed (refresh is indicated with the color green) and then EXIT will be highlighted in green.

To exit the menu and go back to previous page, select EXIT and press button (4).

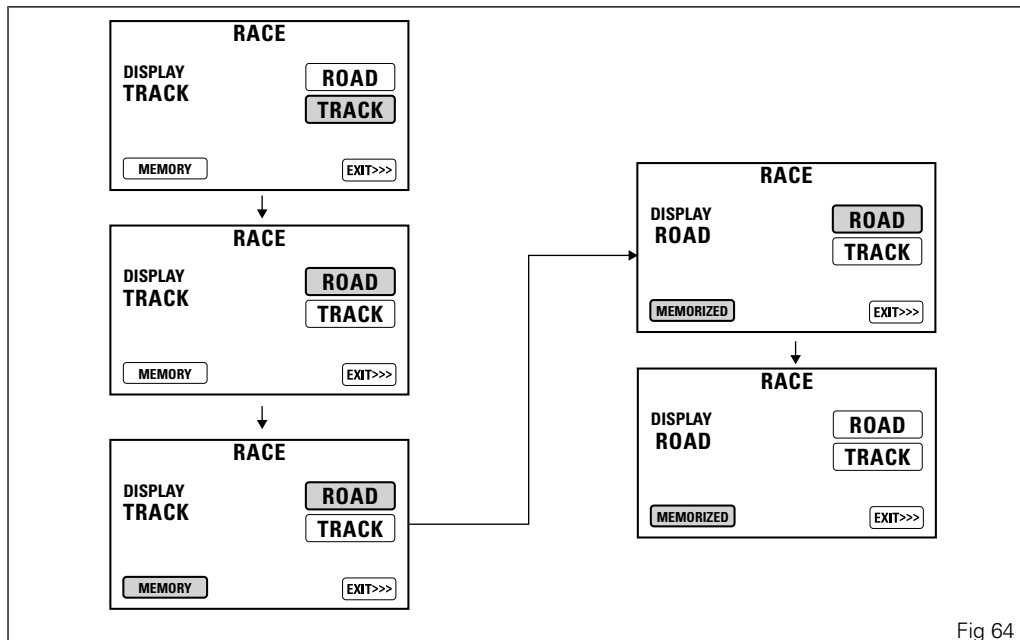


Fig 64

Customizing Riding Modes: DQS enable/disable

The ABS customization page is only available for the bikes equipped with the DQS.

This function disables or enables the DQS for the selected riding mode.

Enter the Setting MENU. Select "RIDING MODE" option by pressing button (1) or (2).


Once function is highlighted, press CONFIRM MENU button (4).

You open the "RIDING MODE" menu. Select the desired riding mode (RACE, SPORT or WET), by pressing button (1) or (2).

Once desired mode is highlighted, press CONFIRM MENU button (4).

You open the selected riding mode customization Menu. Select the parameter to be customized (DQS) by pressing button (1) or (2).

Once desired parameter is highlighted, press CONFIRM MENU button (4).

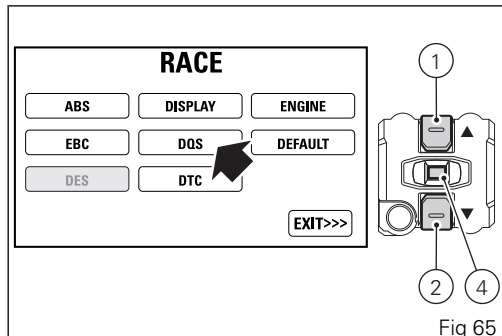

When opening this function, DQS currently set status is shown on the left (e.g. DQS ON).

Customization options are listed on the right: status ON and OFF.

Press buttons (1) and (2) to highlight the statuses one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item.

Once desired status is selected, press CONFIRM MENU button (4) to highlight MEMORY item.

To save the new setting, hold button (4) for 3 seconds while the MEMORY item is highlighted in orange.

If new settings have been saved, MEMORIZED will be shown in green for 1 second, the set status will be refreshed (refresh is indicated with the color green) and then EXIT will be highlighted in green.

To exit the menu and go back to previous page, select EXIT and press button (4).

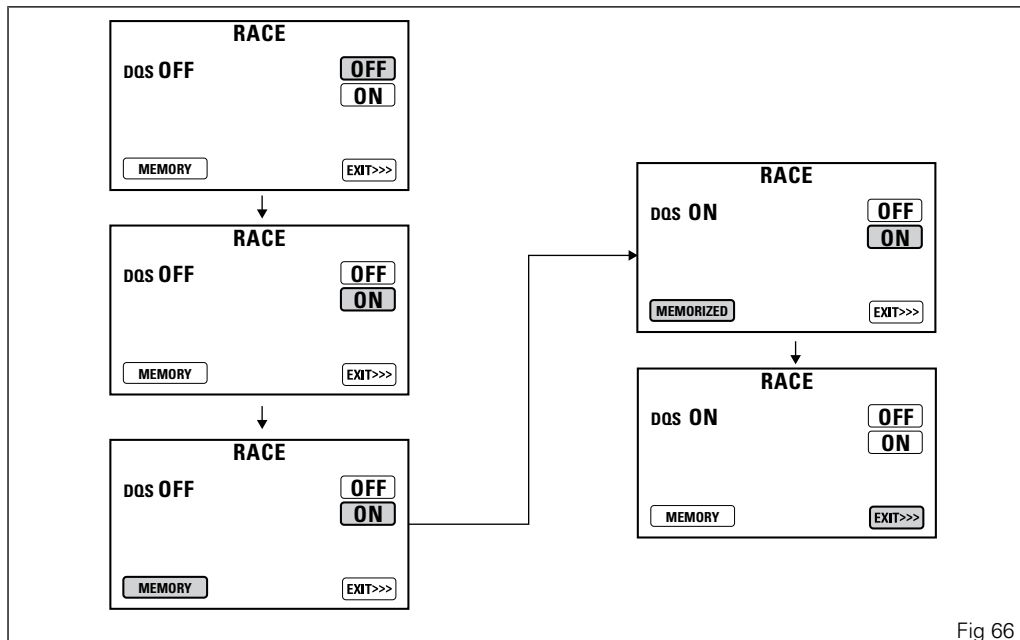


Fig 66

Customizing Riding Modes: DTC level setting

This function disables or sets DTC level for the selected riding mode.


Enter the Setting MENU. Select "RIDING MODE" option by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

You open the "RIDING MODE" menu. Select the desired riding mode (RACE, SPORT or WET), by pressing button (1) or (2).

Once desired mode is highlighted, press CONFIRM MENU button (4).

You open the selected riding mode customization Menu.

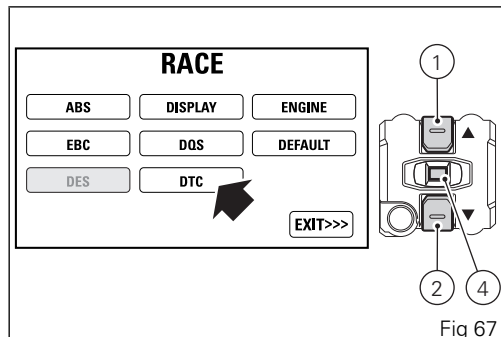

When you open the function, the currently set DTC level or status is shown on the left (e.g. DTC 3).

Customization options are listed on the right: levels from 1 to 8 and status OFF.

Select the parameter to be customized (DTC) by pressing button (1) or (2).

Once desired parameter is highlighted, press CONFIRM MENU button (4).

To save the new setting, hold button (4) for 3 seconds while the MEMORY item is highlighted in orange.

If new settings have been saved, MEMORIZED will be shown in green for 1 second, the set level or status will be refreshed (refresh is indicated with the color green) and then EXIT will be highlighted in green.

To exit the menu and go back to previous page, select EXIT and press button (4).

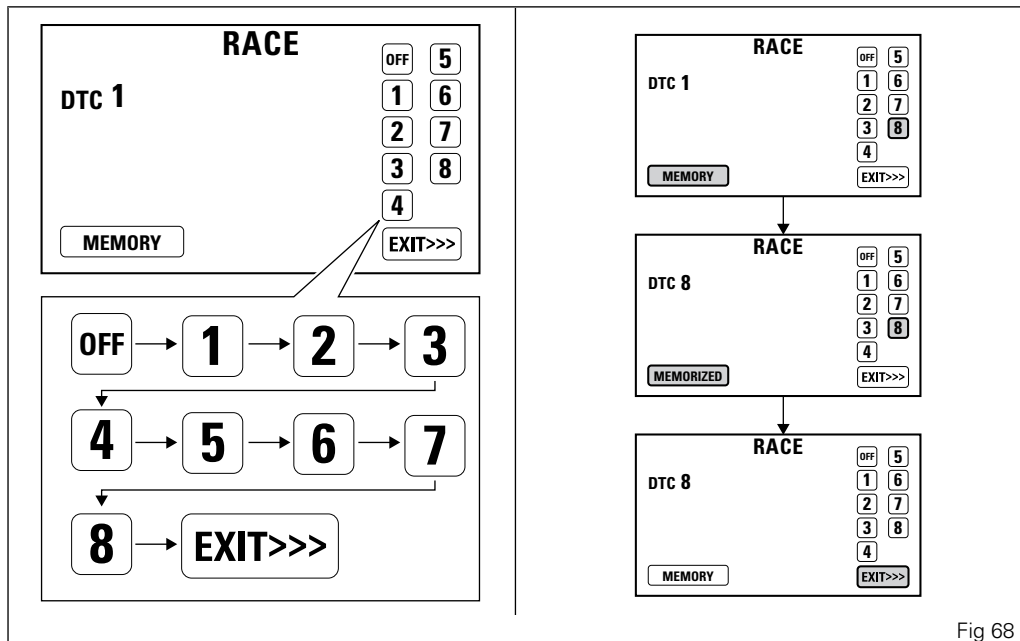


Fig 68

Customizing Riding Modes: Engine setting


This function customizes engine power associated with each riding mode.

Enter the Setting MENU. Select "RIDING MODE" option by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4). You open the "RIDING MODE" menu. Select the desired riding mode (RACE, SPORT or WET), by pressing button (1) or (2). Once desired mode is highlighted, press CONFIRM MENU button (4).

You open the selected riding mode customization Menu.

Select the parameter to be customized (ENGINE) by pressing button (1) or (2). Once desired parameter is highlighted, press CONFIRM MENU button (4).

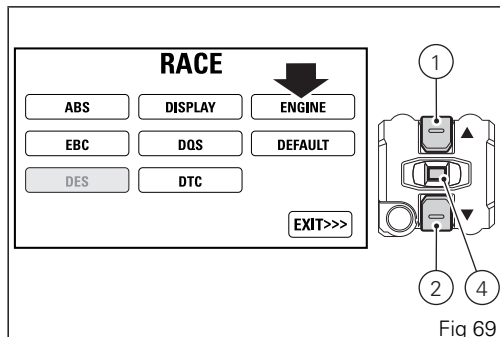

When opening this function, the currently set engine power is shown on the left (e.g. ENGINE 195Hi). Customization options are listed on the right:

- 195Hi, 195Lo, 120 (Europe, UK, USA, Canada, Brazil, Taiwan versions).
- HIGH, MED, LOW (France and Japan versions).

Europe, UK, USA, Canada, Brazil, Taiwan

RACE

ENGINE
195Hi

195 Hi
195Lo
120

MEMORY **EXIT>>>**



RACE

ENGINE
195Hi

195 Hi
195Lo
120

MEMORY **EXIT>>>**

France, Japan

RACE

ENGINE
HIGH

HIGH
MED
LOW

MEMORY **EXIT>>>**



RACE

ENGINE
HIGH

HIGH
MED
LOW

MEMORY **EXIT>>>**

Fig 70

Press buttons (1) and (2) to highlight the engine power values one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item.


Once desired engine power is selected, press CONFIRM MENU button (4) to highlight MEMORY item.

To save the new setting, hold button (4) for 3 seconds while the MEMORY item is highlighted in orange.

If new settings have been saved, MEMORIZED will be shown in green for 1 second, the set engine power will be refreshed (refresh is indicated with the color green) and then EXIT will be highlighted in green.

To exit the menu and go back to previous page, select EXIT and press button (4).

Europe, UK, USA, Canada, Brazil, Taiwan

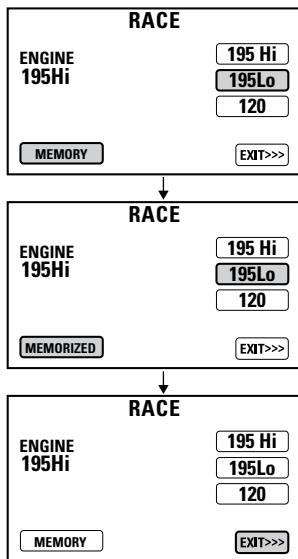

France, Japan

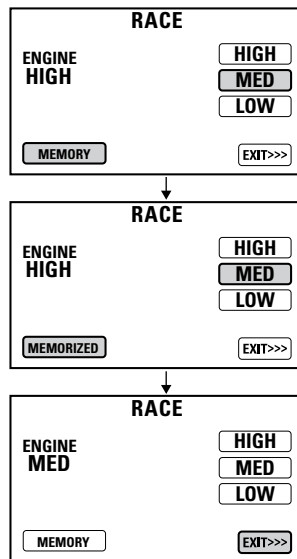


Fig 71

Customizing Riding Modes: EBC level setting

This function disables or sets the rear wheel anti-locking system (EBC) level for every single riding mode.

Enter the Setting MENU.


Select "RIDING MODE" option by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

You open the "RIDING MODE" menu.

Select the desired riding mode (RACE, SPORT or WET), by pressing button (1) or (2).

Once desired mode is highlighted, press CONFIRM MENU button (4). You open the selected riding mode customization Menu. Select the parameter to be customized (EBC), by pressing button (1) or (2). Once desired parameter is highlighted, press CONFIRM MENU button (4).

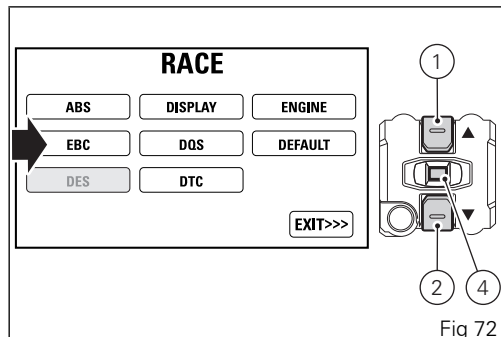

When you open the function, the currently set EBC level or status is shown on the left (e.g. EBC 1). Customization options are listed on the right: levels from 1 to 3 and status OFF. Press buttons (1) and (2) to highlight the levels one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item. Once desired level is selected, press CONFIRM MENU button (4) to highlight MEMORY item.

To save the new setting, hold button (4) for 3 seconds while the MEMORY item is highlighted in orange. If new settings have been saved, MEMORIZED will be shown in green for 1 second, the set level or status will be refreshed (refresh is indicated with the color green) and then EXIT will be highlighted in green. To exit the menu and go back to previous page, select EXIT and press button (4).


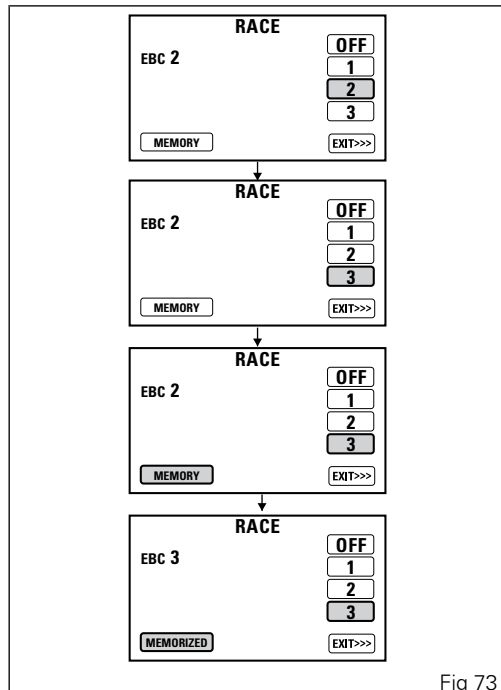


Fig 73

Customizing Riding Modes: Restore default settings

This function allows restoring the default values set by Ducati for the parameters relating to each riding mode. Enter the Setting MENU. Select "RIDING MODE" option by pressing button (1) or (2). Once function is highlighted, press CONFIRM MENU button (4). You open the "RIDING MODE" menu. Select the desired riding mode (RACE, SPORT or WET), by pressing button (1) or (2). Once desired mode is highlighted, press CONFIRM MENU button (4). You open the selected riding mode customization Menu. Select the parameter to be customized (DEFAULT), by pressing button (1) or (2). Once desired parameter is highlighted, press CONFIRM MENU button (4).

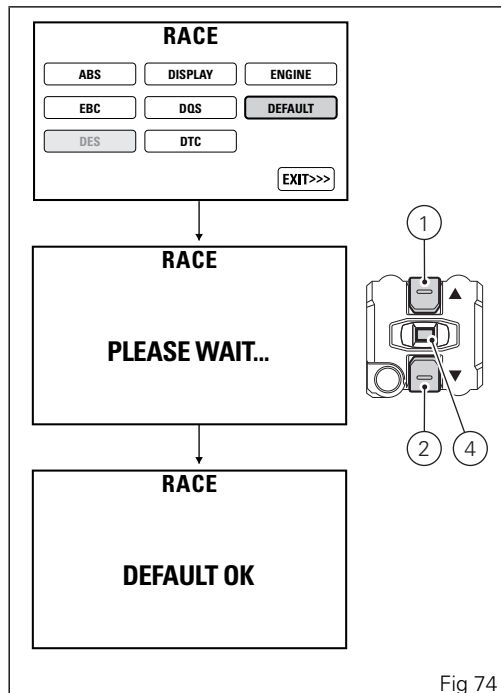

To restore parameters, the system needs 3 seconds; meanwhile, PLEASE WAIT... indication is displayed. Once procedure is completed, the display shows DEFAULT OK for 2 seconds to confirm that parameters have been reset to factory settings. The display then goes automatically back to the riding mode customization menu page, highlighting EXIT option.

To exit the menu and go back to Setting Menu main page, select EXIT and press button (4).

Engine rpm digital indication (RPM)

This function displays the number of RPM in digital format (recommended for improved accuracy when setting idle rpm).

Enter the Setting MENU.

Select "RPM" option, by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

You open the "RPM" menu. The display shows the numerical value of the RPM with a precision of 50 rpm.

If the instrument panel is not receiving RPM value, a string of five steady dashes "- - - -" is displayed to indicate an undefined reading.

To exit the menu and go back to Setting Menu main page, select EXIT and press button (4).

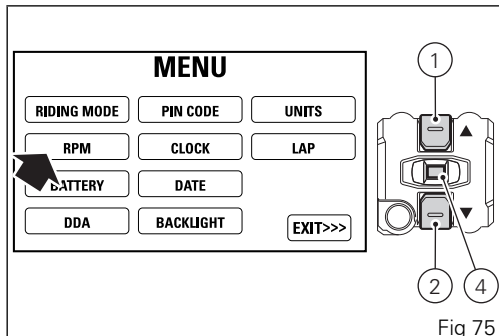


Fig 75

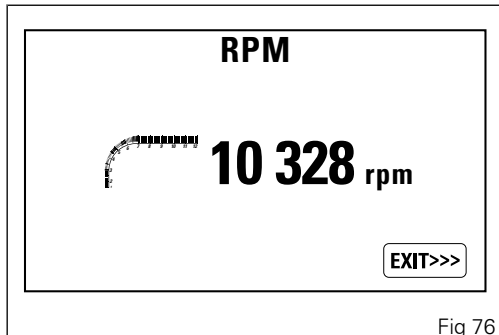



Fig 76

Battery voltage

This function allows you to check the vehicle battery voltage. Enter the Setting MENU. Select "BATTERY" option, by pressing button (1) or (2). Once function is highlighted, press CONFIRM MENU button (4). You open the "BATTERY" menu.

The information will be displayed as follows:

- if battery voltage is below 11.0 V, a flashing LOW warning is displayed with the battery icon on a red background;
- if battery voltage is between 11.0 V and 11.7 V the reading will be displayed flashing with the battery icon on a red background;
- if battery voltage is between 11.8 V and 14.9 V the reading will be displayed as a steady value with the battery icon on the standard background;
- if battery voltage is between 15.0 V and 16.0 V the reading will be displayed flashing with the battery icon on a red background;
- if battery voltage is over 16.0 V, a flashing HIGH warning is displayed with the battery icon on a red background.

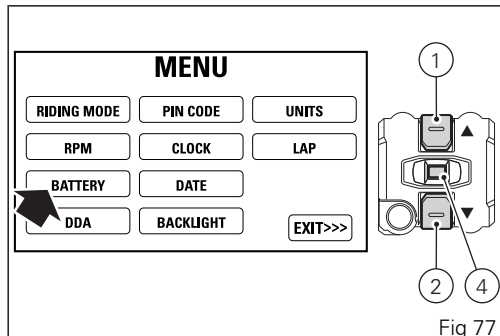

If the battery voltage error is present, the dashboard will show three flashing dashes " --- " as voltage value, followed by the unit of measurement, the EOBD light will turn on as well and the corresponding error BATTERY is displayed.

If the dashboard is not receiving battery voltage value, a string of three steady dashes " --- " is displayed followed by the unit of measurement.

To exit the menu and go back to Setting MENU main page, select EXIT and press button (4).

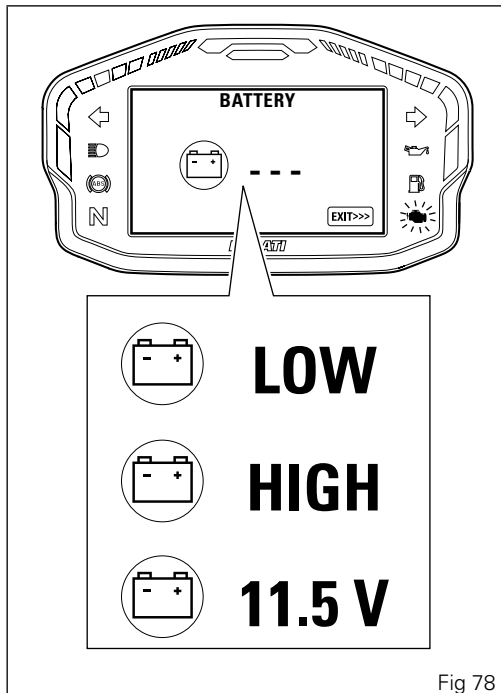


Fig 78

DDA


This function allows you to enable and disable the DDA, view the percentage of memory used and to delete data stored in the DDA memory.

The page for the DDA is only available when the device is fitted to the bike.

Enter the Setting MENU. Select "DDA" option by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

You open the "DDA" menu.

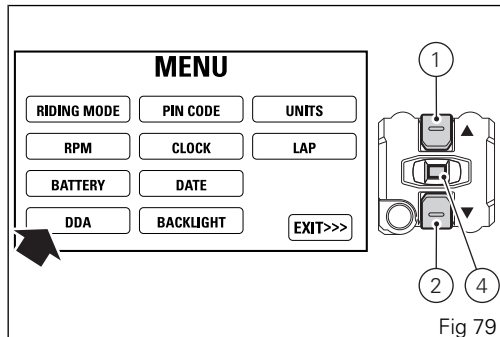

DDA enable/disable

When opening this function, DDA currently set status is shown on the left (e.g. DDA ON).

customization options are listed below these indications: status ON and OFF.

Press buttons (1) and (2) to highlight the statuses one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item.

Once desired status is selected, press CONFIRM MENU button (4) to confirm.

The new set status will be refreshed (refresh is indicated with the color green).

To exit the menu and go back to previous page, select EXIT and press button (4).



Note

The DDA is automatically disabled by the instrument panel upon every key-off.

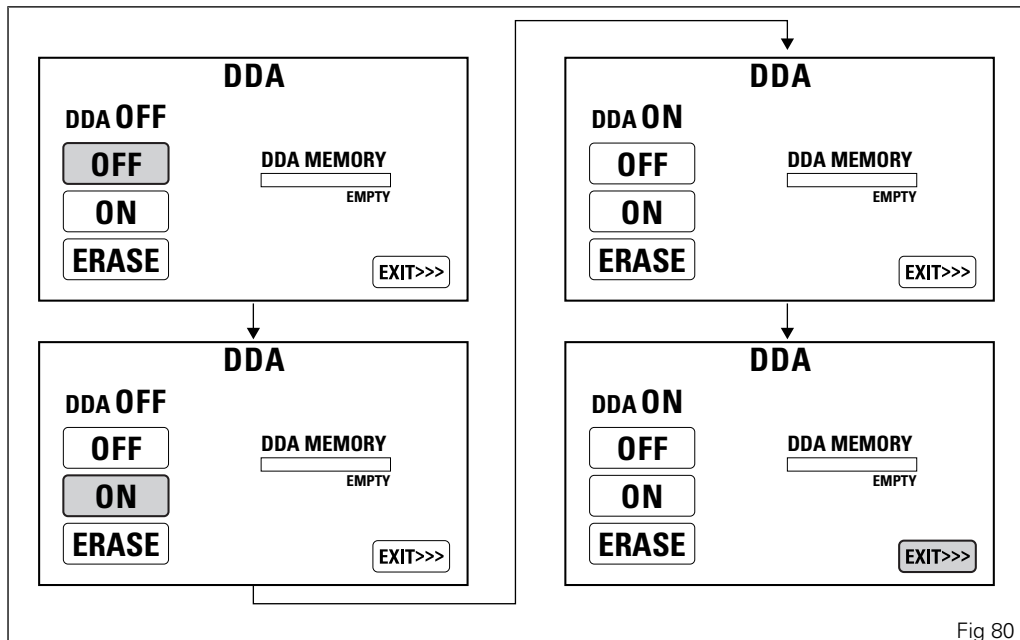


Fig 80

Viewing/deleting the DDA memory

When accessing the function, the DDA memory status is shown on the right as a percentage:

- when bar is empty and text EMPTY is shown, it means that the DDA memory is empty;
- when bar is partially colored and a percent is indicated, it means that the DDA memory is used for the specified percentage;
- when bar is full and text FULL is shown, it means that the DDA memory is full.

With DDA OFF, you can delete the memory. Select "ERASE" option, by pressing button (1) or (2). Press CONFIRM MENU (4) for at least 3 seconds to confirm.

After 3 seconds, the instrument panel will read "PLEASE WAIT..." for as long as the deletion is completed, which will depend on the quantity of data to be deleted.

If deletion is successful, the dashboard will read ERASE OK for 2 seconds and refresh the memory status displayed. If deletion is not successful, the dashboard will still show memory used status.

To exit the menu and go back to previous page, select EXIT and press button (4).



Attention

If the DDA is set to "ON" the deletion is inhibited and you can not even select the ERASE option.

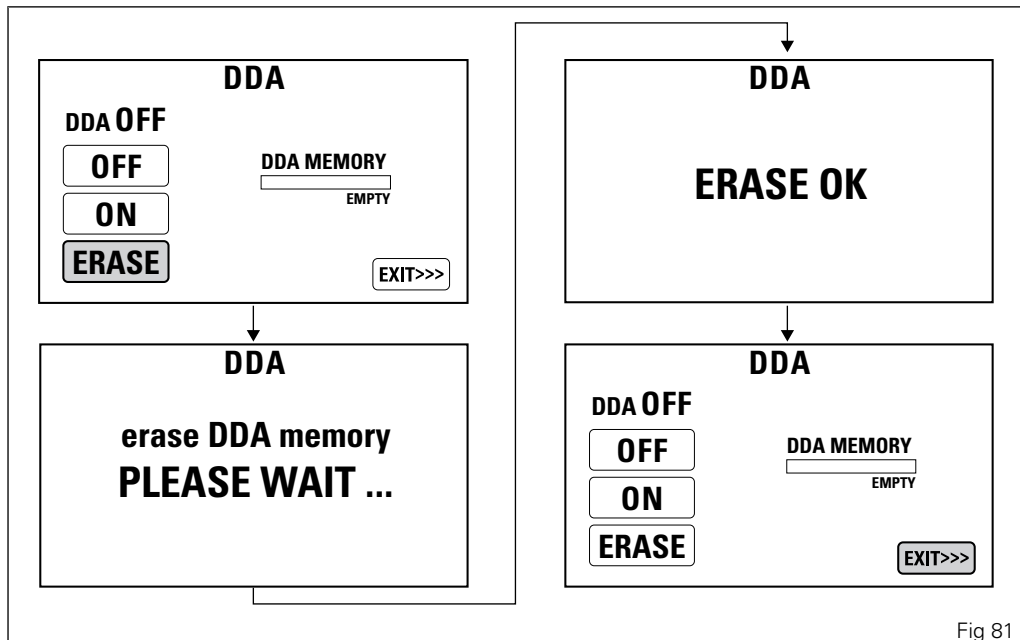


Fig 81

Pin Code

This function makes it possible to "temporarily" turn on the motorcycle if the E-Lock system is not working (if the steering unlock is disabled and there are problems to the ELock system).

The PIN CODE is initially not present in the vehicle, it must be activated by the user by entering his/her 4-digit PIN in the dashboard, otherwise the vehicle cannot be started temporarily in the case of a malfunction. To activate this function, refer to "Entering the PIN CODE" procedure.

To change the PIN refer to "Changing the PIN CODE" procedure.

In order to temporarily start the vehicle in case of malfunction of the E-Lock system, please refer to the Vehicle Release procedure.



Attention


The motorcycle owner must activate (store) the PIN code; if there is already a stored PIN, contact an Authorised Ducati Dealer to have the function "reset". To perform this procedure, the Authorised Ducati Dealer may ask you to demonstrate that you are the owner of the motorcycle.

Entering the PIN CODE

To activate the PIN CODE function and enter your own PIN CODE you must open the Setting MENU. Select "PIN CODE" option, by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

You open the "PIN CODE" menu.

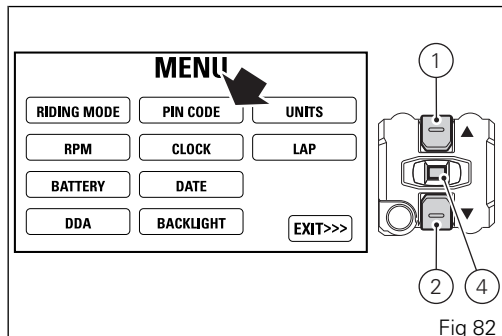

When accessing the function, "INSERT PIN CODE" with four dashes "----" below highlighted in green will be displayed.

Entering the code:

- 1) Press button (4), one digit is highlighted indicating "0";
- 2) Each time you press the button (2) the displayed number increases by one (+ 1) up to "9" and then starts back from "0";
- 3) Each time you press the button (1) the displayed number decreases by one (- 1) up to "1" and then starts back from "0";
- 4) To confirm the number, press the button (4);

Repeat the procedures until you confirm all the 4 digits of the PIN CODE.

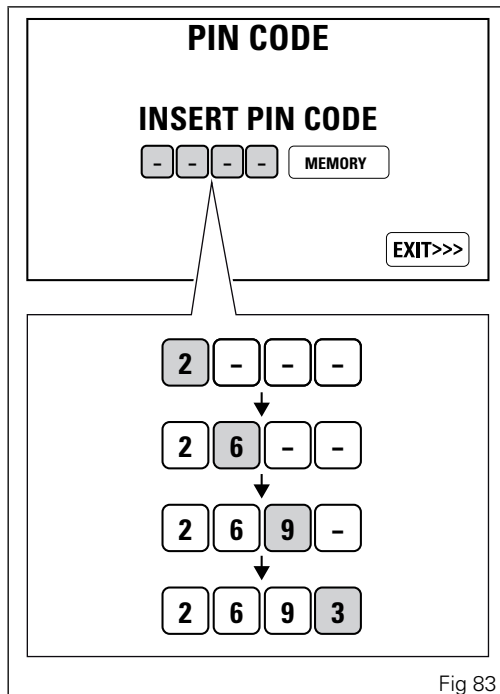


Fig 83

When you press button (4) to confirm the fourth and last digit, the dashboard highlights MEMORY item. To save the new setting, hold button (4) for 3 seconds while the MEMORY item is highlighted in orange. If settings have been saved, MEMORIZED will be shown in green for 1 second, and then the EXIT item will be highlighted in green.

Once the first PIN CODE is stored, this menu page is no longer available and is replaced by the page for changing the PIN CODE. The page for entering the very first PIN CODE is active and available again only in case the PIN CODE function is reset (but this is only possible at a DUCATI Authorized Service Center).

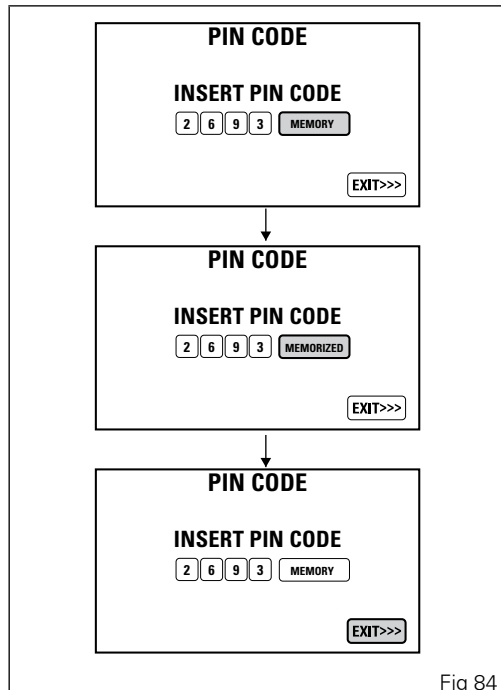


Fig 84

Changing the PIN CODE

To change the existing PIN CODE and activate a new one, you must open the Setting MENU.

Select "PIN CODE" option, by pressing button (1) or (2). Once function is highlighted, press CONFIRM MENU button (4). You open the "PIN CODE" menu. When accessing the function, OLD CODE with four dashes "----" will appear on the display highlighted in green with NEW CODE in line below.

Entering the "old" code:

- 1) Press button (4), one digit is highlighted indicating "0";
- 2) Each time you press the button (2) the displayed number increases by one (+ 1) up to "9" and then starts back from "0";
- 3) Each time you press the button (1) the displayed number decreases by one (- 1) up to "1" and then starts back from "0";
- 4) To confirm the number, press the button (4);

Repeat the procedures until you confirm all the 4 digits of the PIN CODE.

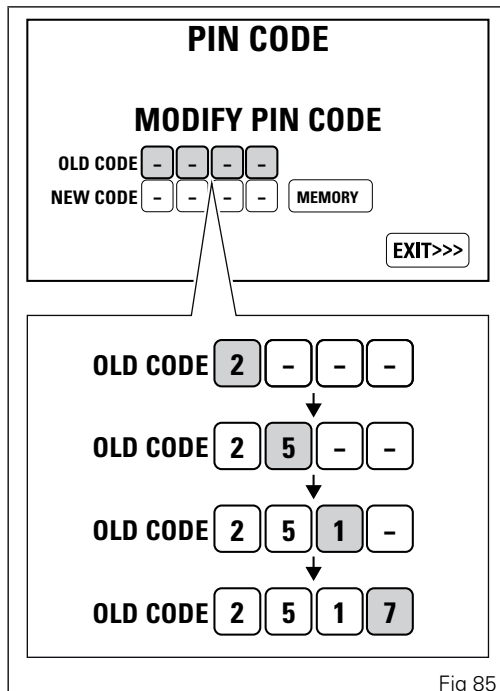


Fig 85

When you press button (4) to confirm the fourth and last digit:

- if the PIN is not correct, the dashboard displays WRONG for 3 seconds and then highlights the string of four dashes "----" for the OLD PIN to allow you to try again;
- if there is a problem during the PIN check, the dashboard displays ERROR for 3 seconds and then highlights the EXIT item;
- if the PIN code is correct, the dashboard displays CORRECT for 3 seconds and then highlights the string of four dashes "----" of the NEW PIN.

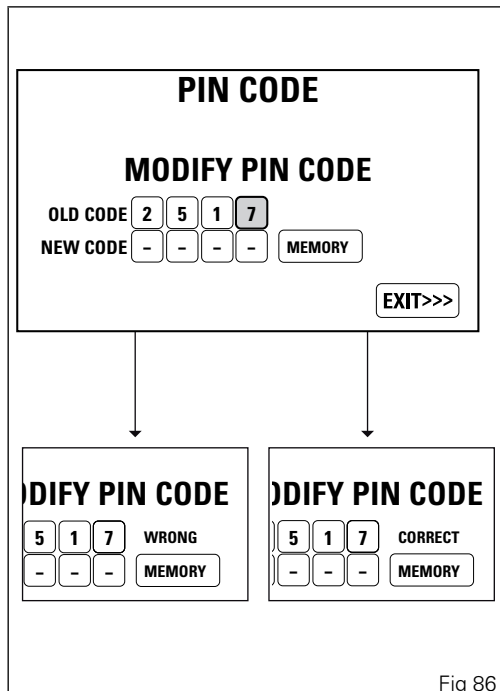


Fig 86

Entering the "new" code:

- 1) Press button (4), one digit is highlighted indicating "0";
- 2) Each time you press the button (2) the displayed number increases by one (+ 1) up to "9" and then starts back from "0";
- 3) Each time you press the button (1) the displayed number decreases by one (- 1) up to "1" and then starts back from "0";
- 4) To confirm the number, press the button (4)

Repeat the procedures until you confirm all the 4 digits of the PIN CODE.

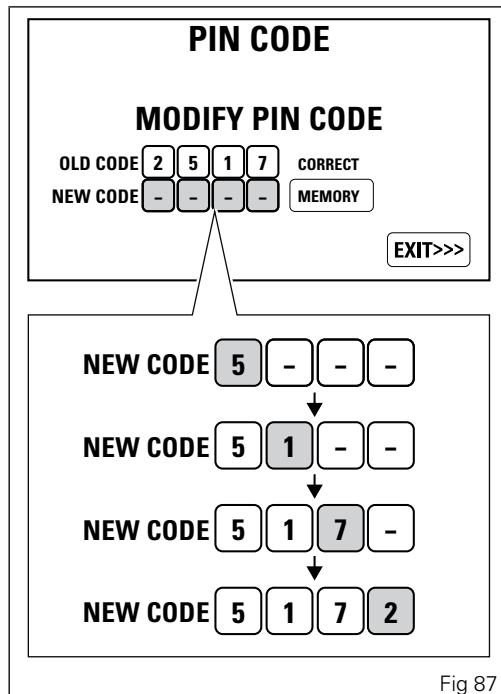


Fig 87

When you press button (4) to confirm the fourth and last digit, the dashboard highlights MEMORY item. To save the new setting, hold button (4) for 3 seconds while the MEMORY item is highlighted in orange. If settings have been saved, MEMORIZED will be shown in green for 1 second, and then the EXIT item will be highlighted in green.

If settings have not been saved, the dashboard highlights again the string of four dashes “----” of the NEW PIN to allow the rider to try again and enter a new code.


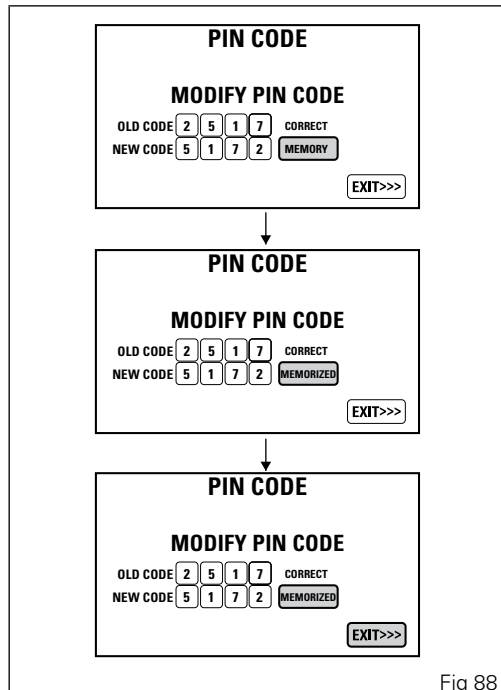


Fig 88

Clock setup

This function allows user to set or adjust the time. Enter the Setting MENU. Select "CLOCK" option, by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4). You open the "CLOCK SETTING" menu. The first screen shows, on the left side, the available time setting: HOUR, MINUTE, AM/PM, while the current time is displayed on the right side (e.g.: 10:30 a.m.).

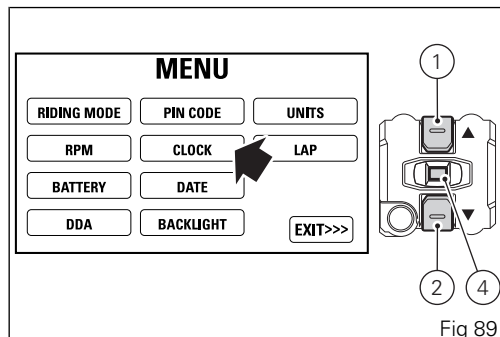


Setting the hours

Select "HOUR" option, by pressing button (1) or (2). Once function is highlighted, press CONFIRM MENU button (4). The hour value starts flashing.

Press the button (1) to decrease hour by 1: 0, 11, 1, 0 for AM - 12, 11, 1, 12 for PM.

Press the button (2) to increase hour by 1: 11, 0, 1.... 11 for AM - 12, 1, 12 for PM.

Once you reach the value to be set, press CONFIRM MENU button (4) and the set hour will stop flashing.

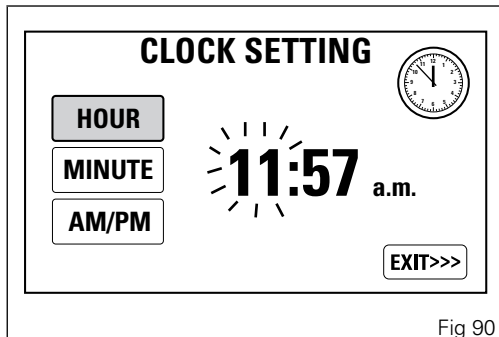

Setting the minutes

Select "MINUTE" option, by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

The minute value starts flashing.

Press button (1) to decrease minutes by 1: 59, 58, 00, 59.

Press button (2) to increase minutes by 1: 00, 01, 59, 00.

Once you reach the value to be set, press CONFIRM MENU button (4) and the set minutes will stop flashing.

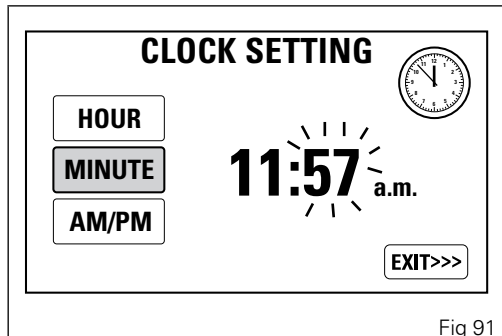


Fig 91

Setting am/pm

Select “AM/PM” option, by pressing button (1) or (2). Once function is highlighted, press CONFIRM MENU button (4).

The indication starts flashing.

Select AM or PM, by pressing button (1) or (2), respectively.

Once you reach the value to be set, press CONFIRM MENU button (4) and the setting will stop flashing. To exit the menu and go back to previous page, select EXIT and press button (4).



Note

Every time the battery is disconnected, the clock is reset and must be set again by the user.

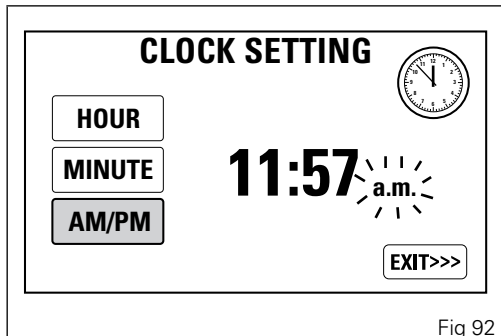


Fig 92

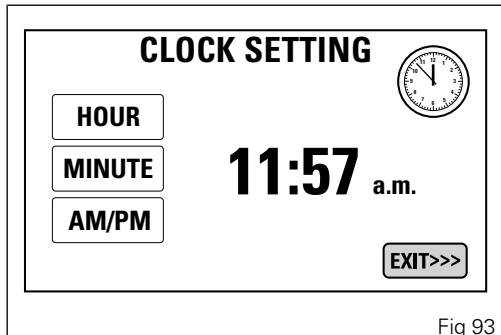


Fig 93

Setting the date

This function allows use to view and set/adjust the date.


Enter the Setting MENU.

Select "DATE" option, by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

You open the "DATE SETTING" menu.

The first screen shows, on the left side, the available date setting: YEAR, MONTH, DAY, while the current date is displayed on the right side (e.g.: 2012/01/27).

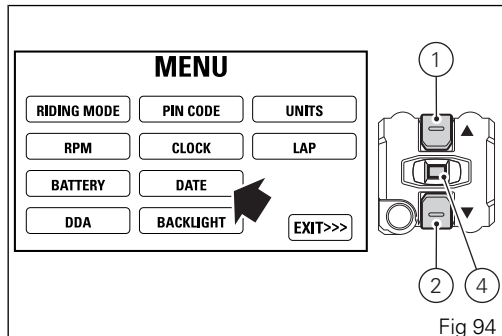

Setting the year

Select "YEAR" option, by pressing button (1) or (2). Once function is highlighted, press CONFIRM MENU button (4).

The year value starts flashing.

Press button (1) to decrease year value by 1: 2250, 2249, 2000, 2250.

Press button (2) to increase year value by 1: 2000, 2001, 2250, 2000.

Once you reach the value to be set, press CONFIRM MENU button (4) and the set year will stop flashing.

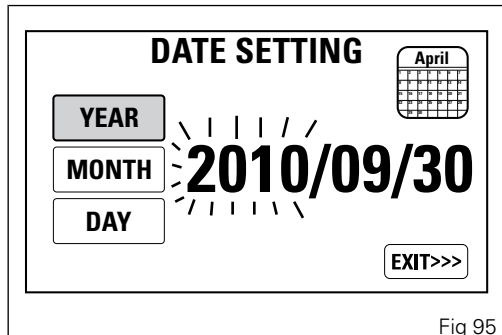


Fig 95

Setting the month

Select "MONTH" option, by pressing button (1) or (2). Once function is highlighted, press CONFIRM MENU button (4).

The month value starts flashing.

Press button (1) to decrease month by 1: 12, 11, 01, 12.

Press button (2) to increase month by 1: 01, 02, 12, 01.

Once you reach the value to be set, press CONFIRM MENU button (4) and the set month will stop flashing.

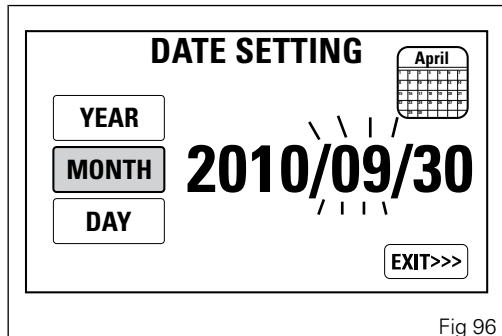


Fig 96

Setting the day

Select "DAY" option, by pressing button (1) or (2).
Once function is highlighted, press CONFIRM MENU button (4).

The day value starts flashing.

Press button (1) to decrease day by 1: 31, 30, 01, 31.

Press button (2) to increase day by 1: 01, 02, 31, 01.

Once you reach the value to be set, press CONFIRM MENU button (4) and the set day will stop flashing.

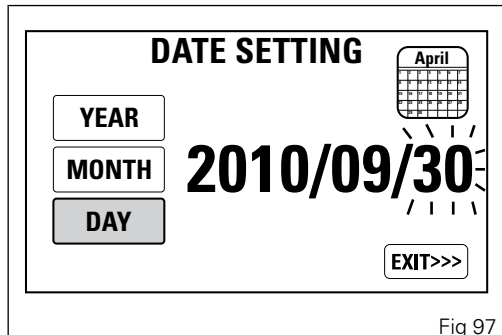



Fig 97

To exit the menu and go back to previous page, select EXIT and press button (4).



Note

Every time the battery is disconnected, the calendar is reset and must be set again by the user

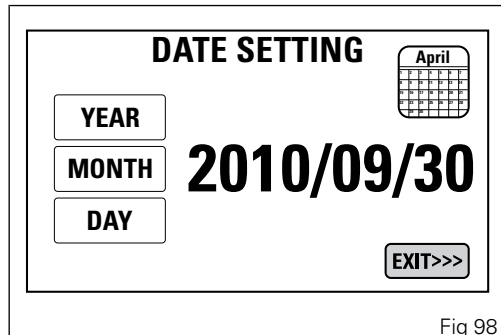


Setting the display background

This function allows the user to choose the background of the dashboard.

Enter the Setting MENU. Select "BACKLIGHT" option, by pressing button (1) or (2). Once function is highlighted, press CONFIRM MENU button (4).

You open the "BACKLIGHT" menu. When entering the function, the possible settings are shown on the left: DAY, NIGHT, AUTO, and the mode in use is highlighted.

Press buttons (1) and (2) to highlight the dashboard backlighting options one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item. Once desired backlighting option is selected, press CONFIRM MENU button (4) to confirm. The dashboard immediately activates the selected backlighting and highlights the corresponding option.

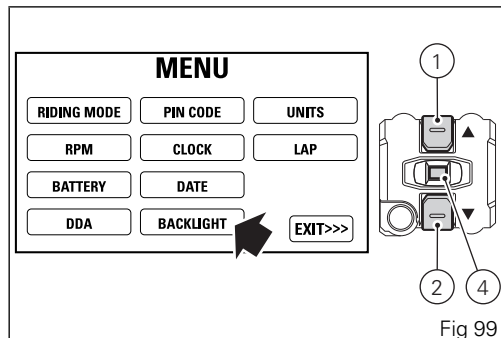

Selecting the DAY option you permanently activate the display “white” background to improve the readout view: recommended with strong external light.

Selecting the NIGHT option you permanently activate the display black background for a dimmed readout view: recommended with poor external light and/or darkness.

Selecting the AUTO option (automatic mode) the color of the background is automatically adjusted according to the external lighting conditions (as detected by a sensor).

If the external lighting is strong, the display will switch to white background; if the external lighting is poor, the display will switch to black background. To exit the menu and go back to previous page, select EXIT and press button (4).


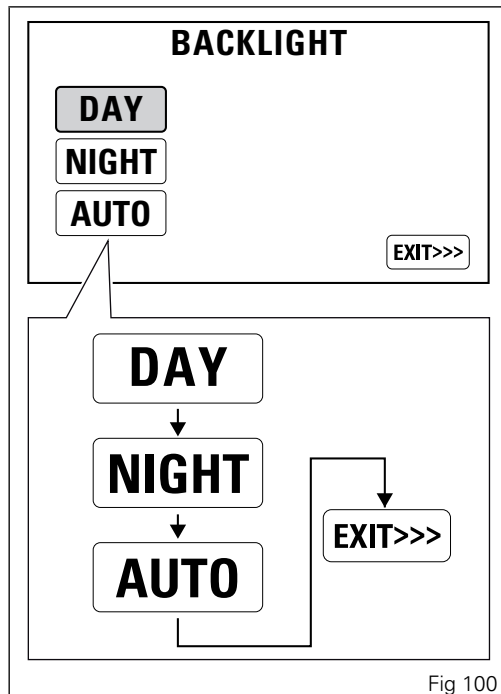


Fig 100

LAP

The LAPs previously stored with the function "LAP recording" (MENU 1 function, see page 86) can be displayed.

The information displayed is lap time, maximum rpm and top speed. Saved LAPs can also be deleted.

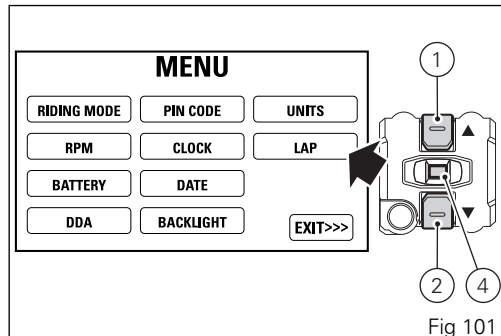

Displaying the stored LAPs

To view the stored LAPs, you must enter the Setting MENU.

Select "LAP" option, by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

You open the "LAP DATA" menu.

When you enter the function, the following is displayed:

- LAP indication followed by the number of the LAP (e.g.: LAP 01);
- TIME indication followed by the recorded lap time;
- SPEEDMAX indication followed by the top speed recorded during the lap;
- RPMMAX indication followed by the RPM value recorded during the lap.

Press the buttons (1) and (2) to highlight stored LAPs one by one; in particular: use button (2) to view the next lap (laps are displayed in increasing order, i.e. LAP 01 ... LAP 02 ... LAP 03 LAP 30); and then highlight EXIT; use button (1) to view the previous lap (laps are displayed in decreasing order, i.e. LAP 30 ...

LAP 29 ... LAP 28 LAP 01); and then highlight EXIT.

To exit the menu and go back to previous page, select EXIT and press button (4).



Note

The MAX stored speed is reached during lap (increased by 5%).



Note

If the memory is empty, the display shows the lap timer reading "-.-.-", MAX RPM = ---- and MAX speed = ----.

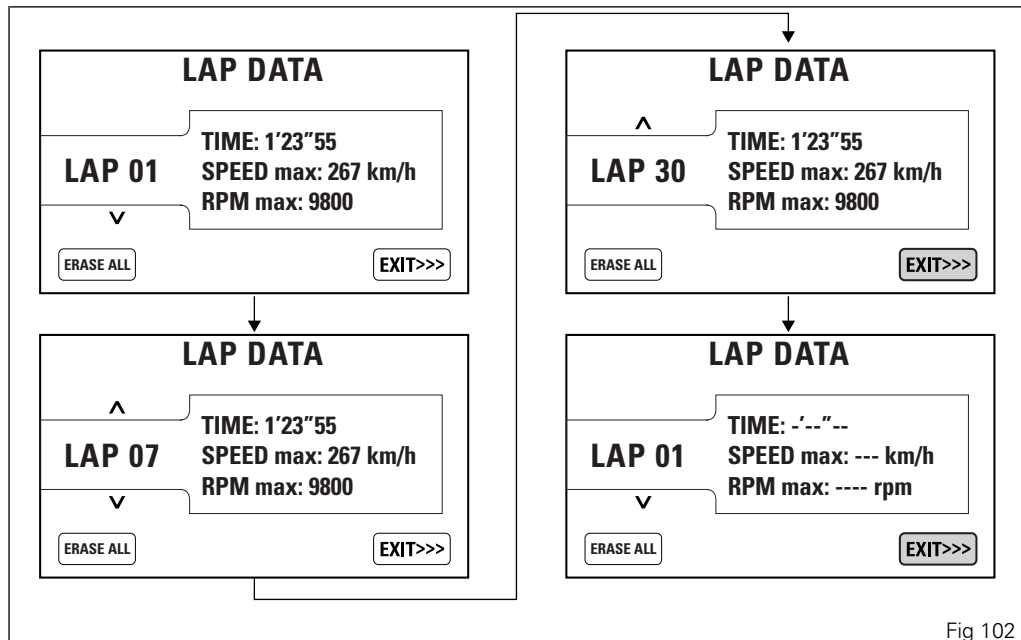


Fig 102

Erasing stored LAPs

To erase the stored LAPs, you must enter the Setting MENU.

Select "LAP" option, by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

You open the "LAP DATA" menu, where stored LAP data are viewed.

Press button (4) to highlight the option ERASE ALL.

User must confirm deletion by pressing button (4) for 3 seconds.

After 3 seconds, the instrument panel will display the indication:

- ERASE LAP PLEASE WAIT... for 3 seconds;
- ERASE OK for 2 seconds to inform about the result of the deletion process.

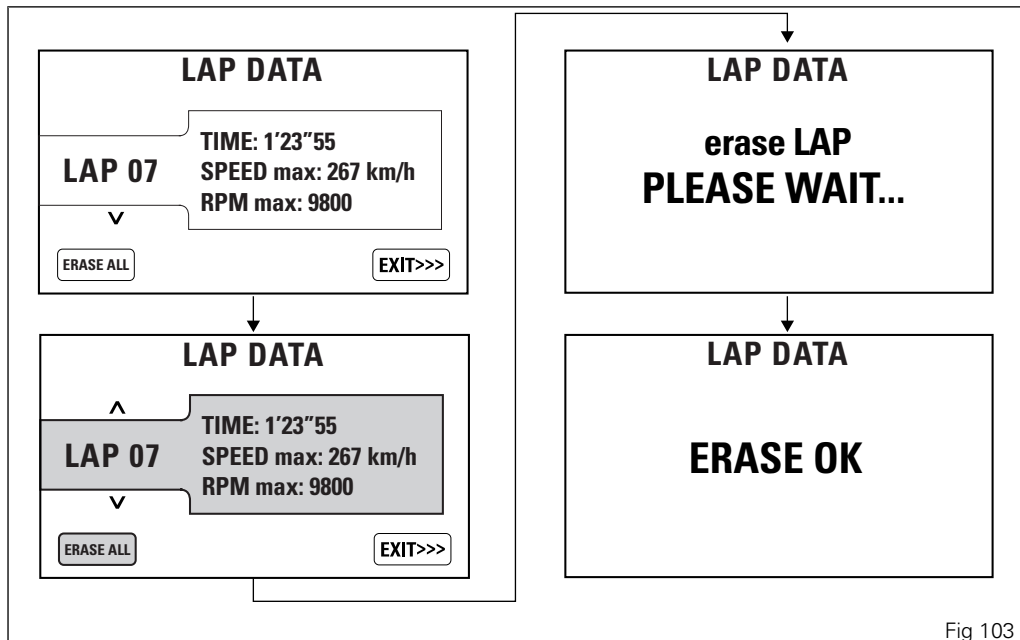


Fig 103

Deletion is one single command that erases all stored laps.

After deletion, the Laps 01 to 30 are displayed with all parameters showing an indefinite value "-" (time = -' --" --, rpm = -----, speed = ---).

To exit the menu and go back to previous page, select EXIT and press button (4).

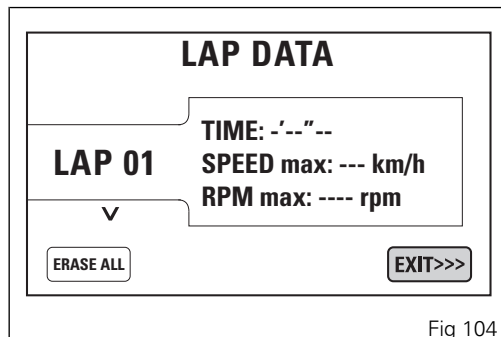


Fig 104


Setting the unit of measurement

This function allows you to change the units of measurement of the displayed values, regardless of the Country configuration.

To manually set the units of measurement, you must enter the Setting MENU.

Select "UNITS" option, by pressing button (1) or (2). Once function is highlighted, press CONFIRM MENU button (4).

You open the "UNITS SETTING" menu.

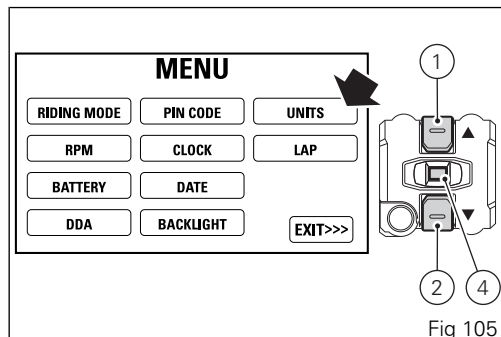

When you enter the function, the list of items for which unit of measurement can be set is shown on the left:

- SPEED;
- TEMPERATURE;
- fuel CONSUMPTION;
- reset to automatic settings (DEFAULT).

To exit the menu and go back to previous page, select EXIT and press button (4).

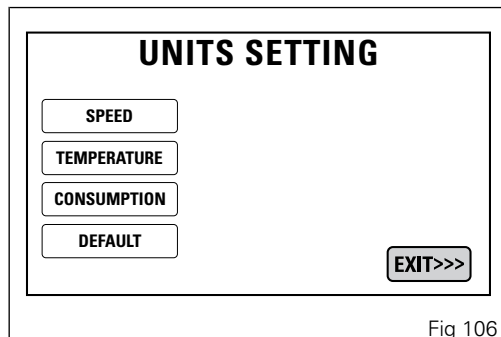


Fig 106

Setting the unit of measurement: Speed

This function allows you to change the speed measurement units (and therefore those of distance traveled).

You open the “UNITS SETTING” menu, as described in the previous pages.

Select “SPEED” option, by pressing button (1) or (2). Once function is highlighted, press CONFIRM MENU button (4). You open the “SPEED” menu.

When you enter the function, the current unit of measurement is displayed, followed by the list of the possible units: mph, km/h.

Press buttons (1) and (2) to highlight the units of measurement one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item. Select the required unit of measurement and then press the CONFIRM MENU button (4) to confirm: the selected unit is stored and the EXIT option is highlighted.

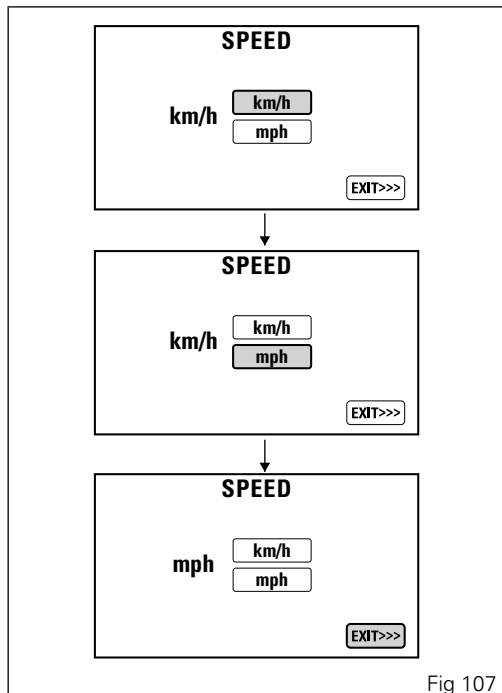


Fig 107

The selected unit of measurement will be used by the dashboard for the following indications:

- Vehicle speed and Average speed (mph or km/h);
- Odometer, Trip1, Trip2 and Trip Fuel (mi or km).

Setting the unit of measurement: Temperature

This function allows you to change the units of measurement of the temperature.

You open the "UNITS SETTING" menu, as described in the previous pages.

Select "TEMPERATURE" option, by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4).

You open the "TEMPERATURE" menu. When you enter the function, the current unit of measurement is displayed, followed by the list of the possible units: $^{\circ}\text{F}$, $^{\circ}\text{C}$.

Press buttons (1) and (2) to highlight the units of measurement one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item. Select the required unit of measurement and then press the CONFIRM MENU button (4) to confirm: the selected unit is stored and the EXIT option is highlighted.

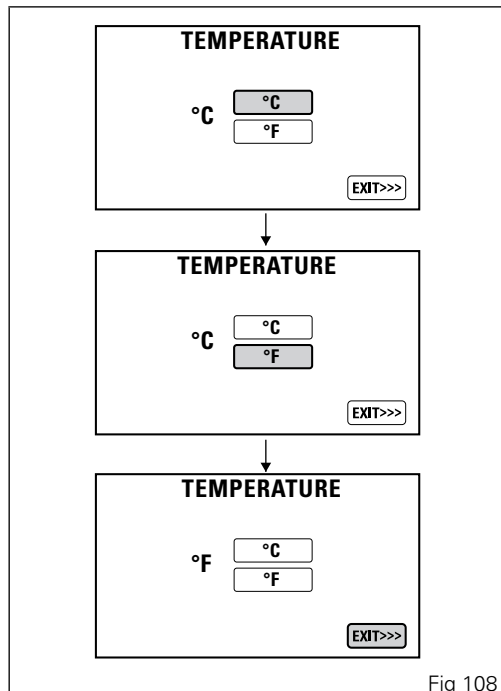


Fig 108

The selected unit of measurement will be used by the dashboard for the following indications:

- Engine coolant temperature and Ambient air temperature.

Setting the unit of measurement: Fuel consumption

This function allows you to change the units of measurement of the fuel consumption. You open the "UNITS SETTING" menu, as described in the previous pages.

Select "CONSUMPTION" option, by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4). You open the "CONSUMPTION" Menu.

When you enter the function, the current unit of measurement is displayed, followed by the list of the possible units: L / 100 km, km / L, mpg (UK), mpg (USA).

Press buttons (1) and (2) to highlight the units of measurement one by one: in particular, use button (1) to highlight the following item and button (2) to highlight the previous item.

Select the required unit of measurement and then press the CONFIRM MENU button (4) to confirm: the selected unit is stored and the EXIT option is highlighted.

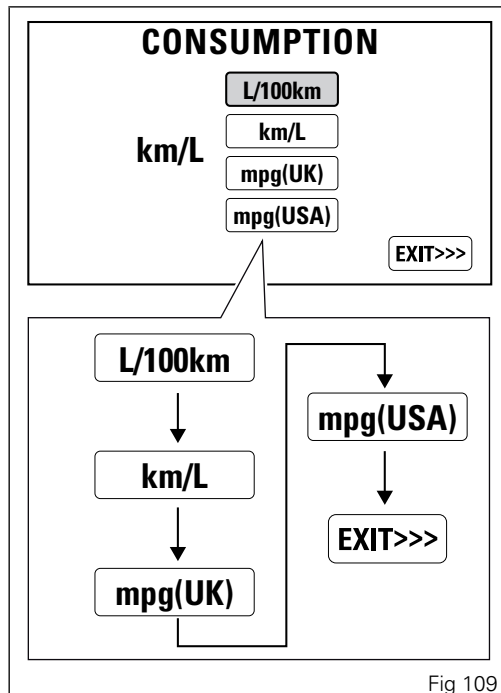


Fig 109

The selected unit of measurement will be used by the dashboard for the following indications:

- Instantaneous fuel consumption and Average fuel consumption.

Setting the unit of measurement: Restore automatic settings

This function allows you to restore the automatic settings for the units of measurement of all indications displayed on the dashboard.

You open the "UNITS SETTING" menu, as described in the previous pages. Select "DEFAULT" option, by pressing button (1) or (2).

Once function is highlighted, press CONFIRM MENU button (4) for 3 seconds. The display will read PLEASE WAIT... for 3 seconds, and then DEFAULT OK for 2 seconds, and at last the page of the UNITS SETTING menu will be displayed with the EXIT option highlighted.

To exit the menu and go back to previous page, select EXIT and press button (4).

Chart of the units of measurement

	TOT TRIP1 TRIP2 TRIP FUEL	SPEED AVERAGE SPEED	T_ENGINE T_AIR	INSTANTANEOUS FUEL CONSUMP- TION AVERAGE FUEL CONSUMPTION
Europe	km	km	°C	l/100 km
UK	mi (miles)	mph	°C	mpg UK
USA	mi (miles)	mph	°F	mpg USA
Canada	km	km	°C	l/100 km
France	km	km	°C	l/100 km
Japan	km	km	°C	l/100 km
Brazil	km	km	°C	l/100 km
Taiwan	km	km	°C	l/100 km
China	km	km	°C	l/100 km

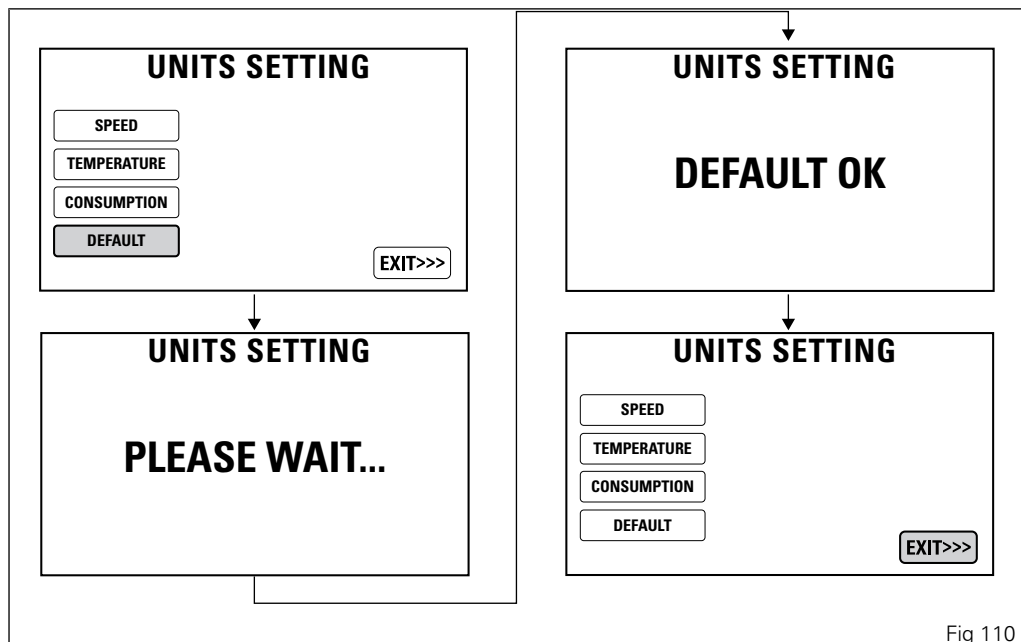


Fig 110

Other functions

UP-MAP

This function is used as an interface for uploading the Performance settings from the UP-MAP device (pen drive) to the engine control unit, after installing the Performance exhaust kit (part no. 96450211B) - Performance muffler kit (part no. 96450311B).

The device can be used with key ON but engine stopped.

When the UP-MAP is connected to the vehicle, these conditions are checked and, if they are all verified, the UP-MAP, engine control unit and instrument panel will start communicating.



Attention

FOR COMPETITION USE ONLY.

This product is legal for closed-course competition use only. Road use is forbidden.



Note

The Performance exhaust kit (part no. 96450211B) and Performance muffler kit (part no. 96450311B) can be purchased at a Ducati Dealer or Authorized Service Center.



Attention

The Performance exhaust kit (part no. 96450211B) and Performance muffler kit (part no. 96450311B) must be installed at a Ducati Dealer or Authorized Service Center.

The presence of the UP-MAP is notified by the "UP-MAP" indication displayed on the instrument panel. If the device authentication is not successful, the indication "UP-MAP NOT COMPATIBLE" is displayed for 3 seconds, and then display will read "UNPLUG UP-MAP" to urge the user to remove the device from the vehicle.

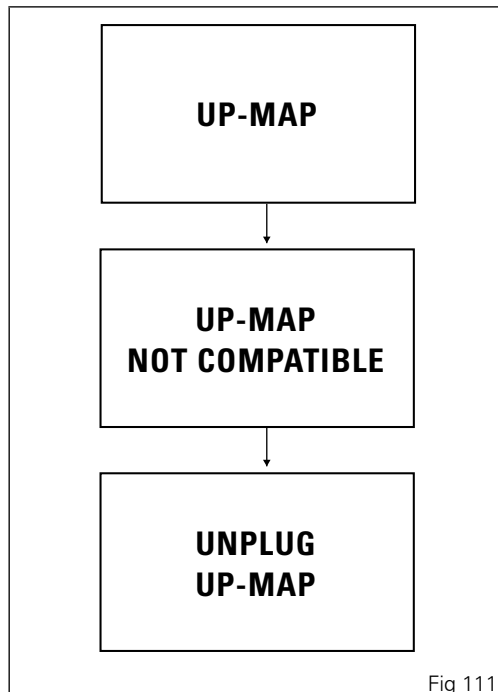


Fig 111

If the download is possible, the instrument panel will show the indication "RACING" (if installing the Performance muffler kit); or the indication "RACING EVO" (if installing the Performance complete exhaust system kit);

- the indication DOWNLOAD;

- button OK.

Press button (4) to allow the download of the specified settings.

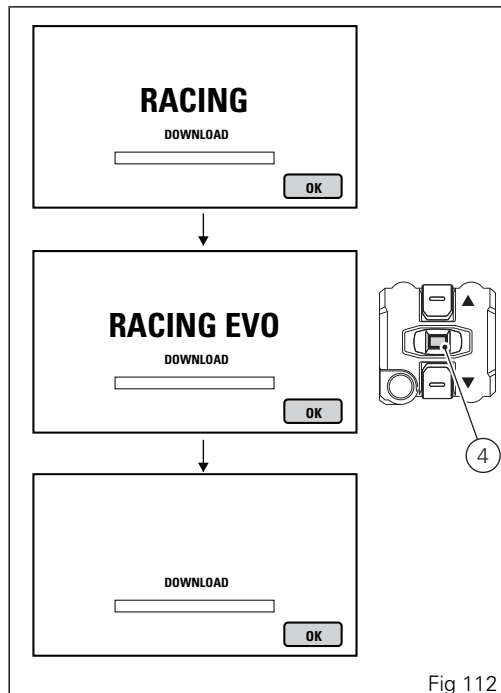


Fig 112

If the download is not possible and the setting to be downloaded is already present in the control unit, the instrument panel will read "MAP ALREADY PRESENT" and display the EXIT button. Press button (4) to quit. After pressing button (4) or after 10 seconds without pressing button (4), the instrument panel will read "UNPLUG UP-MAP" to urge the user to remove the device from the vehicle.

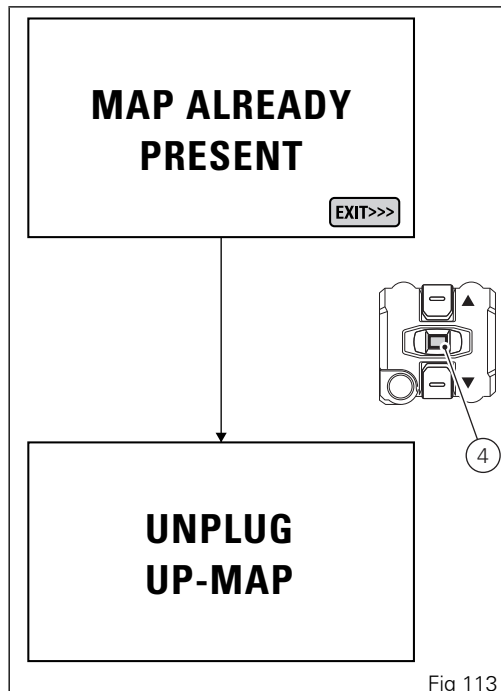


Fig 113

During the download, the display shows the indication "RACING" (setting for the Performance muffler kit) or the indication "RACING EVO" (setting for the Performance complete exhaust system kit), the indication "DOWNLOAD IN PROGRESS" and the download progress bar that progressively fills up (for approximately 5 seconds).

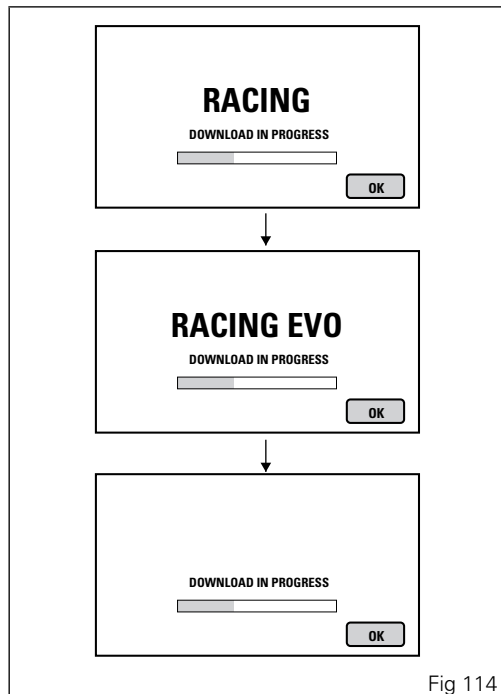


Fig 114

Once the download is completed, the display will show the indication "RACING" (setting for the Performance muffler kit) or the indication "RACING EVO" (setting for the Performance complete exhaust system kit), and the full download progress bar.

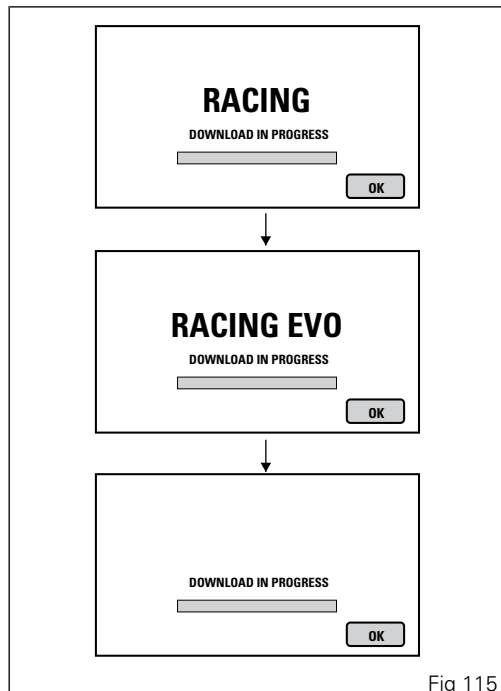


Fig 115

If the whole process was successful, the display will read "UNPLUG UP-MAP" to urge the user to remove the device from the vehicle.

The indication "UNPLUG UP-MAP" is displayed until the UP-MAP is physically disconnected from the vehicle.

When the UP-MAP is disconnected, the display reads "PLEASE WAIT..." for 3 seconds and then shows the "standard screen".

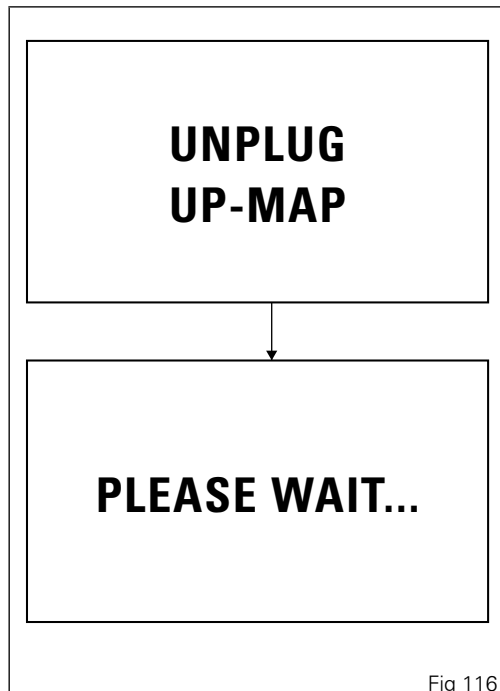


Fig 116

Any time a malfunction of the UP-MAP is found or the download procedure is not successful, the instrument panel displays "DOWNLOAD ABORTED" for 3 seconds, and then the indication "UNPLUG UP-MAP".



Attention

FOR COMPETITION USE ONLY.

This product is legal for closed-course competition use only. Road use is forbidden.



Note

In case of accidental key-off or disconnection of the UP-MAP before the download is completed, the procedure is considered not valid.



Note

When the UP-MAP is connected to the vehicle, engine starting is inhibited. It is not possible to ride the vehicle with the UP-MAP device connected.

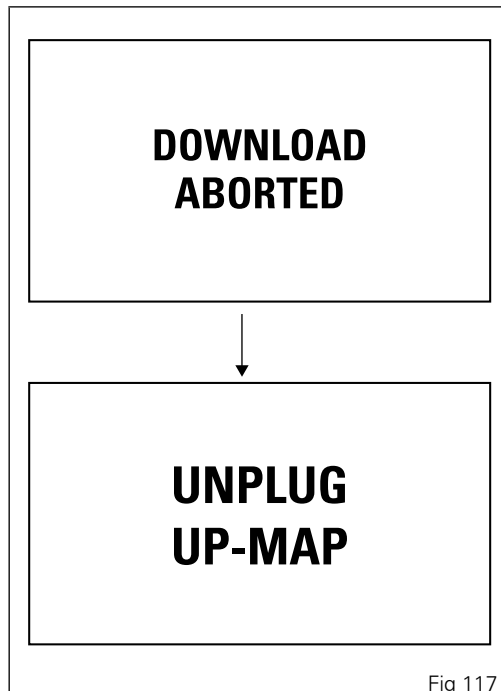


Fig 117

Display background color

Display background color can be set automatically according to exterior lighting conditions. When the BACKLIGHT – AUTO function is active, if the sensor detects "poor lighting" (night) the instrument panel switches to black background (NIGHT mode); vice-versa if a strong light is detected (day) the instrument panel switches to white background (DAY mode). This function can be customized through the Setting MENU: select the "BACKLIGHT" function and open the "BACKLIGHT" menu:

- set either NIGHT or DAY permanently, or
- set the AUTO mode.

Please refer to paragraph ("Setting the display backgroundpage 168").

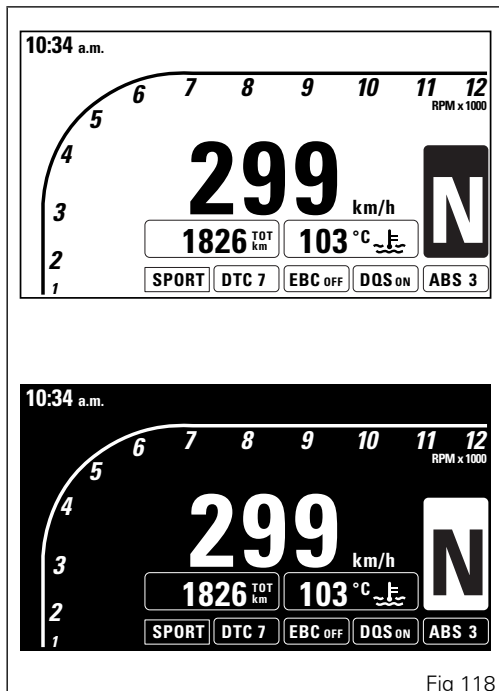


Fig 118



Note

If power supply is over 16 V, the backlighting is disabled, while if it is below 8 V the backlighting is turned off.

Light control

Low / High beam

This function allows you to reduce current consumption from the battery, by managing headlight switching-on and off.

At Key-On, the high beam and low beam lights are off, only the parking lights are turned on.

Once the engine is started, the low beam is turned on; with engine running the standard operation of the lights is restored: it is possible to switch on and off the high beam using button (1) in position (A), or flash using button (1) in position (B). If the engine is not started after key-on, it is still possible to turn on the low/high beam by pressing button (1) in position (A) on the left switch; press it once to turn on the low beam; any further time you press it you switch between low and high beam.

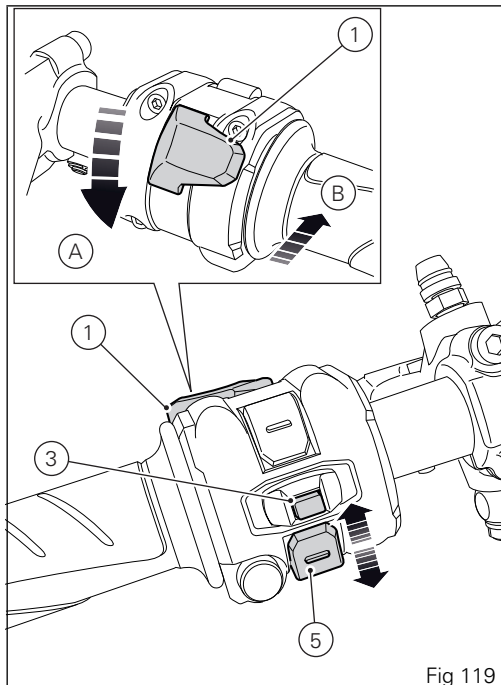


Fig 119

If engine is not started within 60 seconds since the button was first pressed, the low and high beam lights are turned off.

If the low beam or high beam was turned on before starting the engine (with the procedure described above), the headlight turns off automatically when starting the engine and will turn on again when the engine has been completely started.

Turn indicators

Turn indicators are automatically reset by the instrument panel.

After activating one of the two turn indicators, user can reset them using the button (3, Fig 119) on the left switch.

If the turn indicator is not reset manually, the instrument panel will automatically switch it off after the motorcycle has traveled 0.3 miles (500 m) from when the turn indicator was activated. The counter for the distance traveled for automatic deactivation is only activated at speeds below 50 mph (80 km/h).

If the calculation of the distance for automatic deactivation is activated and then the motorcycle exceeds a speed of 50 mph (80 km/h), the calculation is interrupted and will restart when the speed returns below the indicated threshold.

Parking function



Note

If there is a sudden interruption in the battery while the function is active, the instrument panel will disable the function when the voltage is restored.

The "Parking" function activates the front and rear parking lights when the vehicle is turned off so it is visible when parked. The function is activated by pressing the button (5, Fig 119) for 3 seconds during the first 60 seconds after the motorcycle was turned off (after key-off).

Once the function is activated, the PARKING icon is displayed for 3 seconds and the lights stay on as long as the battery voltage is ≥ 2.2 V. If voltage is $<$ (below) 12.7 V the lights turn off automatically in order to save battery charge.

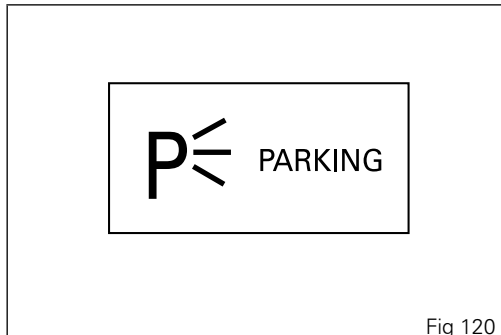


Fig 120

To interrupt the function, turn the vehicle on and off (Key-On / Key-Off).



Important

The frequent use of this function can considerably reduce the battery charge. We recommend using this function only when really necessary.

Hazard function

The "Hazard" function activates all four turn indicators at the same time to warn about an emergency situation. Take button (3) in position (6) for 3 seconds to activate this function. It can only be activated when vehicle is on (i.e. when key is turned to "ON", engine condition is irrelevant). When the "Hazard" function is active, all four turn indicators and the warning lights (7) on the Instrument panel will flash at the same time. The "Hazard" function can be turned off either when vehicle is on (i.e. key turned to "ON") by taking button (3) in position (6) or by taking button (3) in the central position, or with vehicle off (i.e. key turned to "OFF") by taking button (3) in position (6).

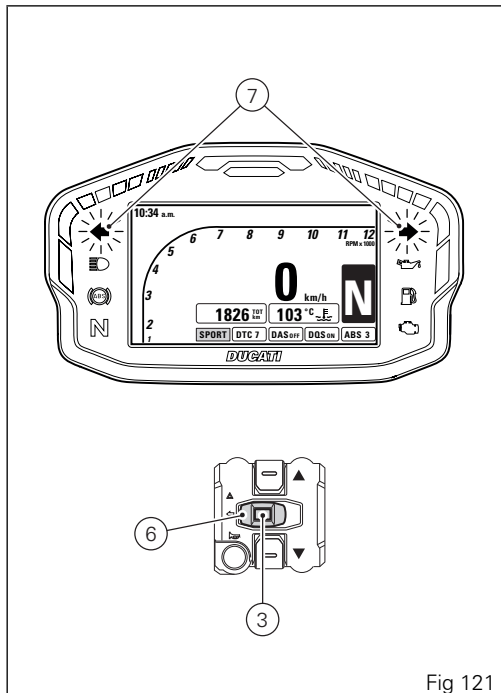


Fig 121

Once the "Hazard" function is activated, if vehicle is turned off (i.e. key turned to "OFF"), the function stays active until manually turned off by the user or as long as the battery voltage is ≥ 2.2 V. If voltage is < (below) 2.2 V the turn indicators turn off automatically in order to save battery charge.



Note

In case of key-on with "Hazard" function still active, the latter remains active (a temporary inhibition of turn indicator control is allowed during instrument panel initial check routine).



Note

If there is a sudden interruption in the battery while the function is active, the instrument panel will disable the function when the voltage is restored.



Note

The "Hazard" function has a higher priority on the operation of the single turn indicators, so as long as it is active it will not be possible to separately turn on the right or left turn indicators.

The Immobilizer system

For improved anti-theft protection, the motorcycle is equipped with an IMMOBILIZER, an electronic system that inhibits engine operation whenever the ignition switch is turned off.

Housed in the handgrip of each ignition key is an electronic device that modulates an output signal. When the ignition is turned on this signal is generated by a special antenna incorporated in the switch and changes every time.

The modulated signal represents the “password” (which is changed at each start-up) by which the ECU recognizes the ignition key. The ECU will only allow the engine to start if it recognizes this password.

Keys

The owner receives 2 keys with the vehicle.

These keys contain the "immobilizer system code".

The keys (B) are regular ignition keys and are used to:

- start up the engine;
- open the fuel tank filler plug;
- open the seat lock.



Attention

Keep the keys separate and use only one of the keys to start the motorcycle.

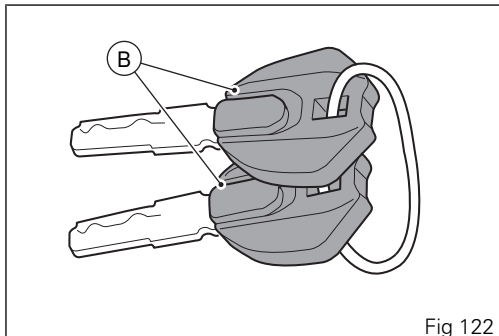


Fig 122

Operation

When the ignition key is turned to OFF, the immobilizer inhibits engine operation.

If the other key does not work out either, contact the Ducati Service network.



Attention

Any important shock might damage the electronic components fitted into the key. Use only one key during the procedure. Failure to do so might prevent the system from recognising the code of the key in use.

Duplicate keys

If you need any duplicate keys, contact the Ducati Service network with all the keys you have left.

The Ducati Service Center will program all the new keys as well as any keys you already have.

You may be asked to provide proof that you are the legitimate owner of the motorcycle.

The codes of any keys not submitted will be wiped off from the memory to make those keys unserviceable in case they have been lost.



Note

If you sell your motorcycle, do not forget to give all keys to the new owner.

Vehicle release through PIN CODE

In case of key acknowledgment system or key malfunction, the instrument panel allows the user to enter his/her own PIN code to temporarily restore vehicle operation. If the PIN CODE function is not active, the instrument panel does not activate the page for entering the code, but shows the Standard Screen instead, triggers the E-Lock error to inform the user that there is a problem with key reading/ acknowledgment and disables the opportunity to enter the Setting MENU. The E-Lock error warning must be active until key-off.

If the PIN CODE function is active, the instrument panel activates the page for entering the code and displays the request INSERT PIN CODE with a string of four dashes below it " - - - - " highlighted in green.

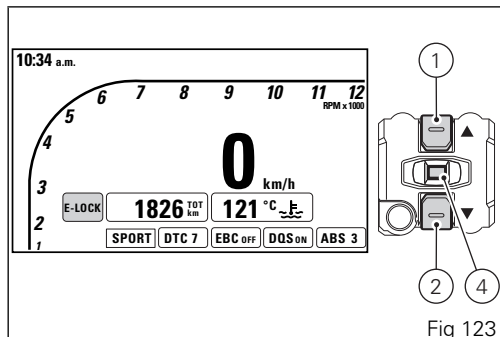


Fig 123

Entering the code:

- 1) Press button (4), one digit is highlighted indicating "0";
- 2) Each time you press the button (2) the displayed number increases by one (+ 1) up to "9" and then starts back from "0";
- 3) Each time you press the button A (1) the displayed number decreases by one (- 1) up to "1" and then starts back from "0";
- 4) To confirm the number, press the button (4).

Repeat the procedures until you confirm all the 4 digits of the PIN CODE.

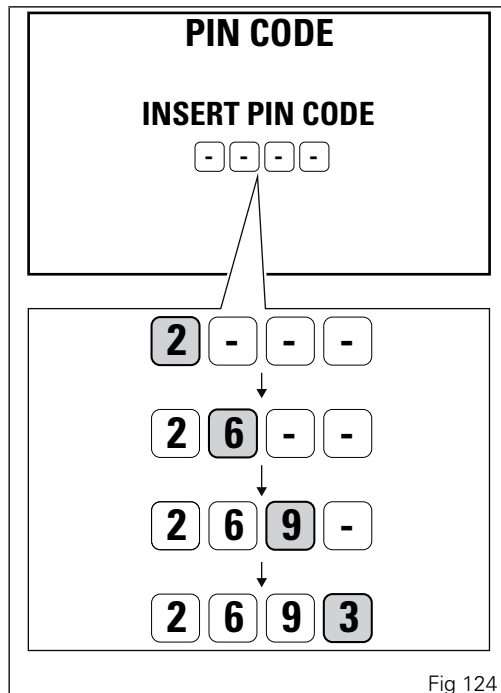


Fig 124

When you press button (4) to confirm the fourth and last digit:

- if the PIN is not correct, the instrument panel displays **WRONG** for 3 seconds and then highlights the string of four dashes "----" to allow you to try again. The number of possible attempts is determined by a preset time-out of 2 minutes. After this time, the instrument panel shows the Standard Screen, triggers the E-Lock error and disables the opportunity to enter the Setting Menu.
- if there is a problem during the PIN CODE check, the instrument panel displays **ERROR** for 3 seconds and then responds in the same way as for the **WRONG** error.
- if the PIN code is correct, the instrument panel displays **CORRECT** for 3 seconds and then shows the "standard screen" and triggers the E-Lock error to still show the user that there is a problem with key reading/acknowledgment.

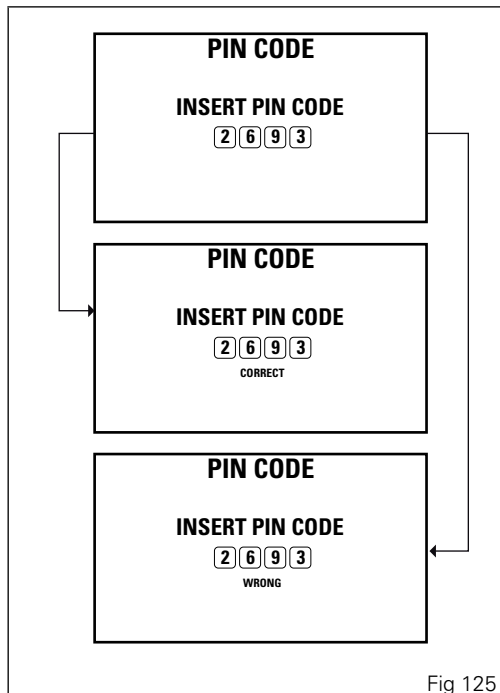


Fig 125



Important

If this procedure is necessary in order to start the vehicle, contact an Authorized Ducati Service Center as soon as possible to fix the problem.

Controls

Position of motorcycle controls



Attention

This section shows the position and function of the controls used to ride the motorcycle. Be sure to read this information carefully before you use the controls.

- 1) Instrument panel.
- 2) Key-operated ignition switch and steering lock.
- 3) Left hand handlebar switch.
- 4) Clutch lever.
- 5) Right hand handlebar switch.
- 6) Throttle twistgrip.
- 7) Front brake lever.
- 8) Rear brake pedal.
- 9) Gear change pedal.

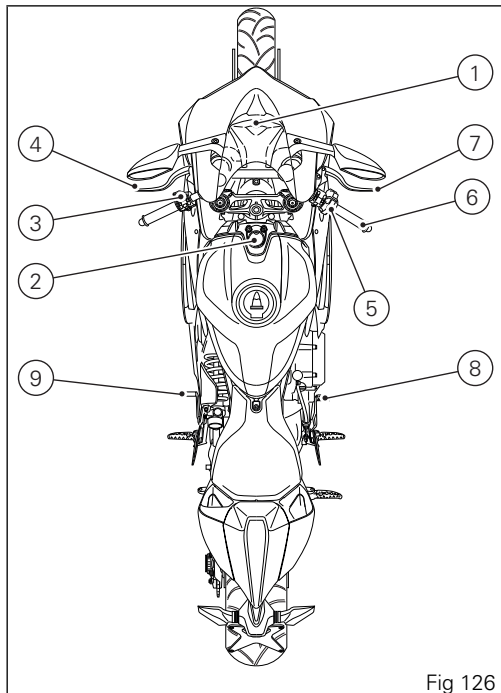


Fig 126

Key-operated ignition switch and steering lock

It is located in front of the fuel tank and has four positions:

- A) ON: enables lights and engine operation;
- B) OFF: disables lights and engine operation;
- C) LOCK: the steering is locked;
- D) P: parking light on and steering locked.



Note

To move the key to the last two positions, press it down before turning it. The key can be removed in positions (B), (C) and (D).

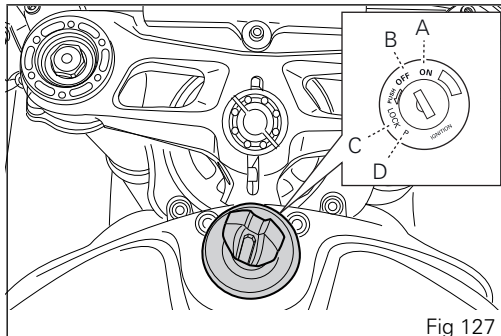


Fig 127

Left-hand switch

1) Dip switch, light dip switch, two positions:

(A) every time it is pressed down the light switches from low beam on () to low beam and high beam on;

(B) pushed to the side () = high beam flasher (FLASH), "Start-Stop lap" function.

2) three-position turn indicator button ():

central position = off;

position () = left turn;

3) Turn indicator off, "Riding mode" activation and menu navigation button.

4) Button () = warning horn.

5) Navigation menu, display scroll and TRIP1 and TRIP2 reset button.

6) Navigation menu, display scroll button.

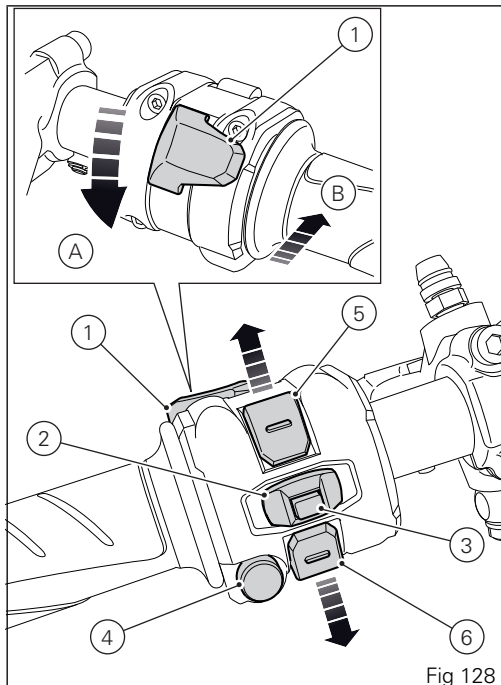


Fig 128

Clutch lever

Lever (1) disengages the clutch. It features a dial adjuster (2) for lever distance from the twistgrip on handlebar. The lever distance can be adjusted through 10 clicks of the dial (2). Turn clockwise to increase lever distance from the twistgrip. Turn the adjuster counter clockwise to decrease lever distance. When the clutch lever (1) is operated, drive from the engine to the gearbox and the drive wheel is disengaged. Using the clutch properly is essential to smooth riding, especially when moving off.



Attention

Set clutch lever when motorcycle is stopped.



Important

Using the clutch properly will avoid damage to transmission parts and spare the engine.

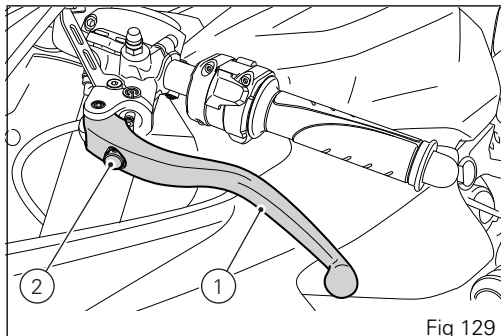


Fig 129



Note



The engine can be started with the side stand down and the gearbox in neutral. If starting with a gear engaged, pull in the clutch lever (in this case the side stand must be up).

Right-hand switch

- 1) Red ON/OFF switch.
- 2) Black ENGINE START button.

The switch (1) has three positions:

- A) center: RUN OFF. In this position, the engine cannot be started and all electronic devices are off.
- B) pushed down: ON/OFF. In this position, the system can be turned on (Key-On) and off (Key-Off).
- C) pushed up: RUN ON. The engine can only be started in this position, pushing the black button (2).

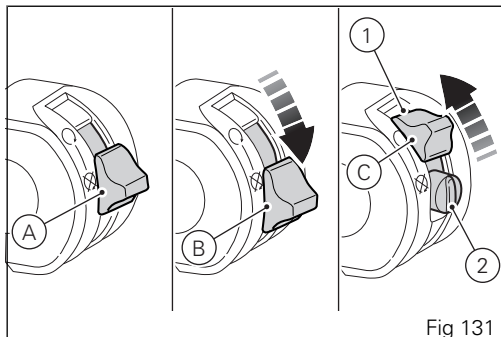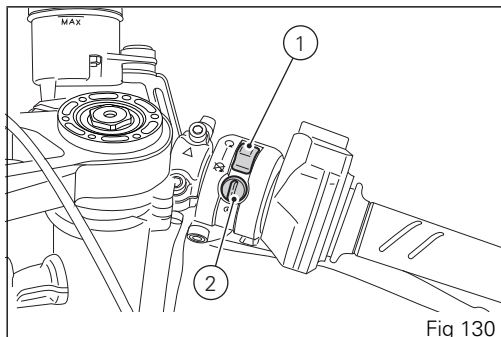

Throttle twistgrip

The twistgrip (1) on the right handlebar opens the throttles.

When released, it will spring back to the initial position (idling speed).

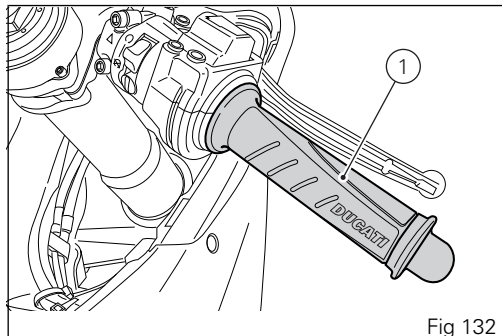


Fig 132

Front brake lever

Pull the lever (1) towards the twistgrip to operate the front brake. The system is hydraulically operated and you just need to pull the lever gently.

The control lever (1) features a dial adjuster (2) for lever distance from the twistgrip on handlebar adjustment.

The lever distance can be adjusted through 10 clicks of the dial (2). Turn clockwise to increase lever distance from the twistgrip. Turn the adjuster counter clockwise to decrease lever distance.

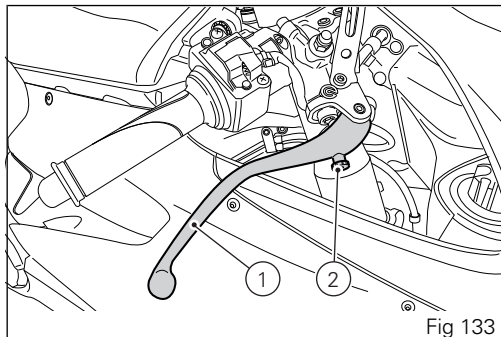


Fig 133

Rear brake pedal

Push down the pedal (1) to operate the rear brake.
The system is hydraulically operated.

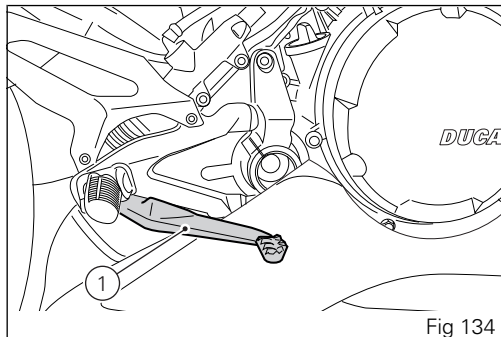


Fig 134

Gear change pedal

When released, the gear change pedal (1) automatically returns to rest position N in the center. This is indicated by the dashboard light N (2) coming on.

The pedal can be moved:

- down = press down the pedal to engage the 1st gear and to shift down. The N light will go out;
- upwards= lift the pedal to engage the 2nd gear and then the 3rd, 4th, 5th and 6th gears.

Each time you move the pedal you will engage the next gear.

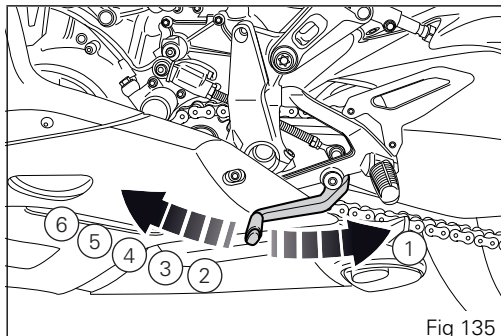


Fig 135

Adjusting the position of the gearchange and rear brake pedals

The position of the gearchange and rear brake pedals in relation to the footrests can be adjusted to suit the requirements of the rider.

Adjust the pedals as follows:

Gear change pedal

hold the linkage (1) and slacken the lock nuts (2) and (3).




Note

Nut (3) features a right-hand threading.

Fit an open-end wrench to hexagonal element of linkage (1) and rotate until setting pedal in the desired position.

Tighten both check nuts onto linkage.

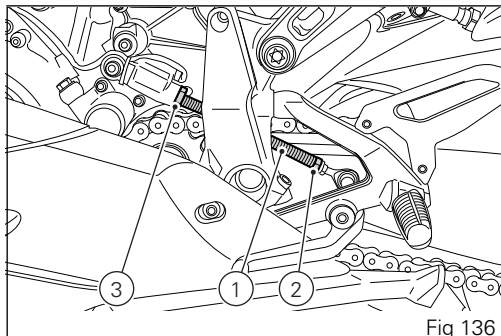

Rear brake pedal

Loosen counter nut (7).

Turn pedal stroke adjusting screw (6) until pedal is in the desired position. Tighten the counter nut (7).

Operate the pedal (8) by hand to check that there is about 0.06-0.08 in (1.5-2 mm) of free play before the brake bites.

If not, adjust the length of the master cylinder pushrod.



Attention

Have the pedal adjusted at a Ducati Dealer or Authorized Service Center.

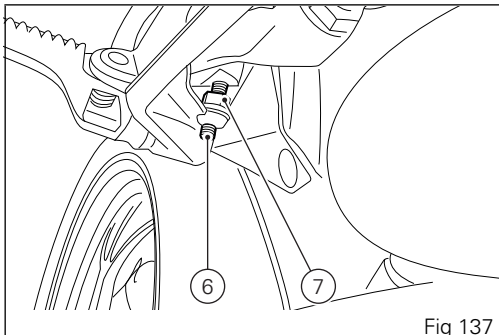


Fig 137

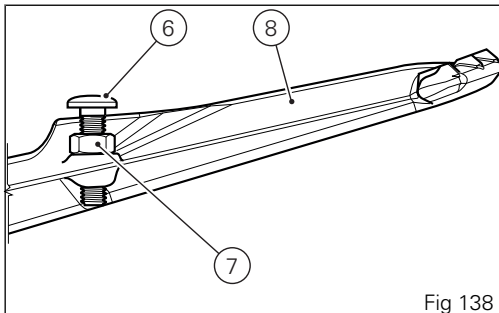


Fig 138

Main components and devices

Position on the vehicle

- 1) Fuel tank plug.
- 2) Seat lock.
- 3) Side stand.
- 4) Rear-view mirrors.
- 5) Front fork adjusters.
- 6) Rear shock absorber adjusters.
- 7) Catalytic converter (both sides).
- 8) Exhaust muffler (both sides).

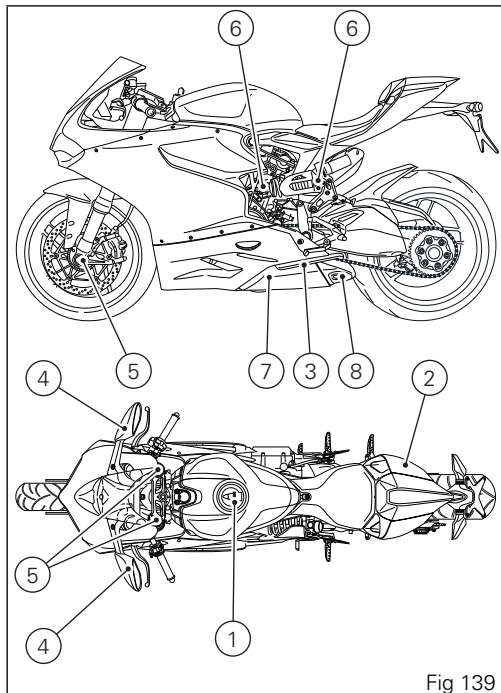


Fig 139

Tank filler plug

Opening

Lift the protection lid (1) and fit the ignition key into the lock. Turn the key clockwise 1/4 turn to unlock. Lift the plug (2).

Closing

Close the cap (2) with the key inserted and press it into its seat. Remove the key and replace the lock cover (1).



Note

The plug can only be closed with the key in.



Attention

Always make sure you have properly refitted and closed the plug after refueling.

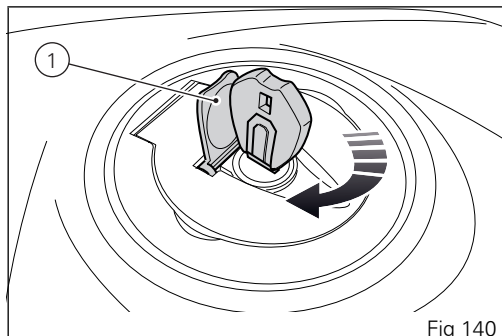


Fig 140

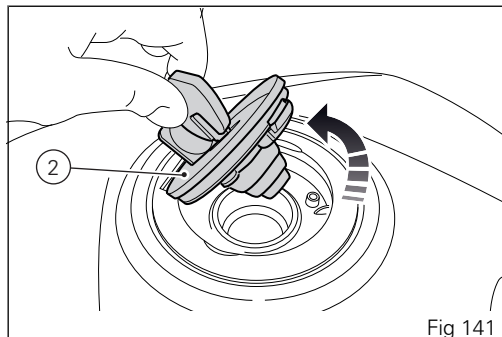


Fig 141

Seat lock



Opening

Insert the key into the seat lock (1) and turn it until the seat (2) disengages with an audible click.

Slide out the seat cover (2) towards front of the motorcycle until it comes off.

Closing

Insert the seat cover (2) from the seat side and slide the cover towards the rear of the motorcycle until it fits in place.

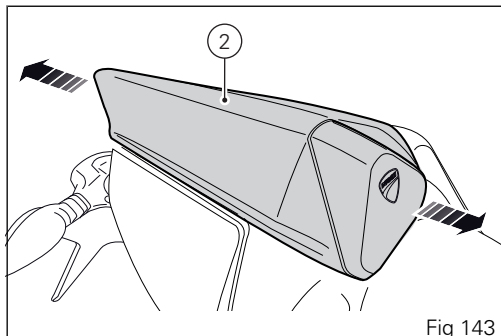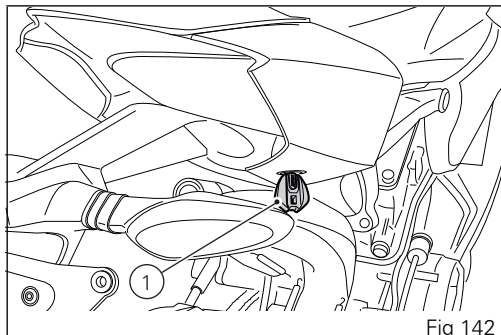

Side stand




Important

Use the side stand to support the motorcycle only during short stops. Before lowering the side stand, make sure that the supporting surface is hard and flat.

Do not park on soft or pebbled ground or on asphalt melted by the sun, etc. or else the motorcycle may fall over. When parking downhill, always position the motorcycle with the rear wheel facing downhill.

To pull down the side stand, hold the motorcycle handlebars with both hands and push down on the side stand (1) with your foot until it is fully extended. Tilt the motorcycle until the side stand is resting on the ground.

To move the side stand to its resting position (horizontal position), lean the motorcycle to the right while lifting the thrust arm (1) with your foot.

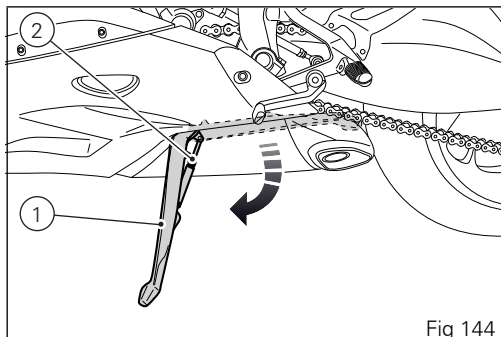

Attention

Do not sit on the motorcycle when it is supported on the side stand.



Note

Check for proper operation of the stand mechanism (two springs, one into the other) and the safety sensor (2) at regular intervals.




Note

The engine can be started with the side stand down and the gearbox in neutral. If starting with a gear engaged, pull in the clutch lever (in this case the side stand must be up).

Steering damper

It is located up front before the handlebar and is secured to the steering head.

It provides stable and accurate steering, improving the motorcycle's handling response under any conditions.

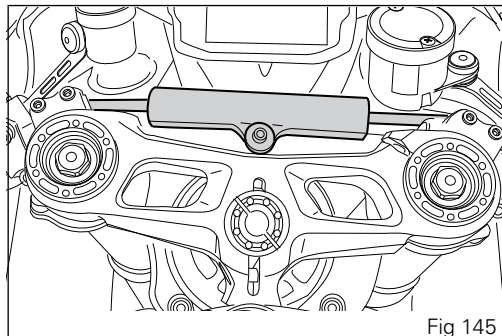



Adjusting the front fork

The front fork used on this motorcycle has rebound, compression and spring preload adjustment. Use the external screw adjusters to make adjustments.

- 1) to adjust the rebound damping (1, Fig 146);
- 2) to adjust the preload of the inner springs (2, Fig 146);
- 3) to adjust the compression damping (3, Fig 147).

Position the motorcycle on its side stand so that it is stable.

Turn the adjuster (1) at the top end of each fork leg with a flat screwdriver to adjust rebound damping. Turn the adjuster (3) on fork leg bottom with a flat screwdriver to adjust compression damping.

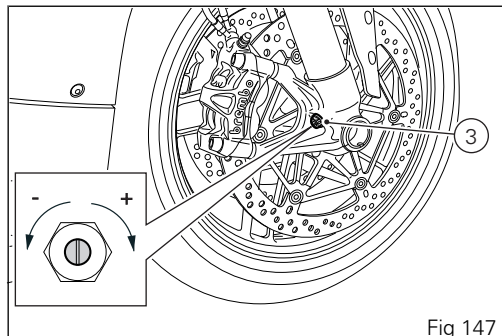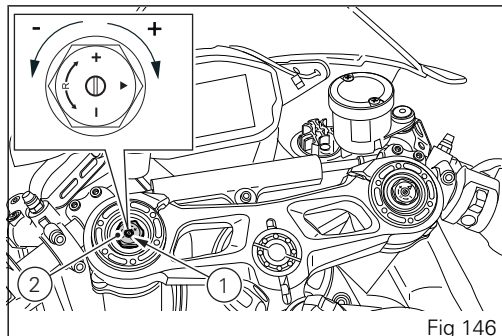

Turn the adjusting screws (1 and 3) to adjust the damping. The stiffest damping setting is obtained with the adjuster turned fully clockwise to the 0 position. Starting from this position and by rotating counterclockwise, you can count the turns.

To change preload of the spring inside each fork leg, turn the hex. adjuster (2, Fig 146) with an 8.87 in (19 mm) hex wrench, starting from the fully open (clockwise) position.

The STANDARD adjustments from fully closed are as follows:

compression: 10 clicks from fully closed;

rebound: 10 clicks from fully closed;

spring preload: FULLY OPEN (counterclockwise): 6 turns.



Attention

Regulate the adjusters on both legs to the same positions.

Adjusting the rear shock absorber

The rear shock absorber has commands that enable you to adjust the setting to suit the load on the motorcycle.



The adjuster (1) located on the front connection holding the shock absorber to the crankcase adjusts the rebound damping.

The adjuster (2) located on the expansion reservoir of the shock absorber adjusts the compression damping.

The ring nuts (3) allow adjusting the shock absorber external spring preload.

To adjust the spring preload, loosen the top ring nut. SCREWING or UNSCREWING the bottom ring nut will INCREASE or DECREASE the preload.

Once the spring preload is set, tighten the top ring nut.

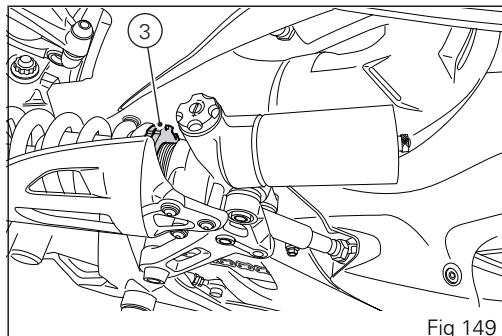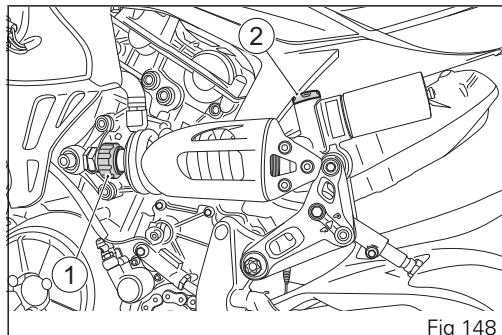

STANDARD calibration; from the fully closed position (clockwise) unscrew:
compression: 10 clicks from fully closed;
rebound: 10 clicks from fully closed;
spring preload: 0.47 in (12 mm).



Attention

The shock absorber is filled with gas under pressure and may cause severe damage if taken apart by someone who is unskilled.

If you intend to transport a passenger and baggage, preload the shock absorber spring to the maximum to improve the dynamic performance of the motorcycle and to avoid possible interference with ground. You may find that rebound damping needs adjusting as well.

Changing the motorcycle track alignment

Motorcycle setup is the result of tests carried out under different riding conditions by our technical staff.

Modifying factory setting is a very delicate operation, which may lead to serious damage if performed by someone who is unskilled.

The rider can modify setup according to his/her needs by changing working position of the shock absorber.



Attention

Have the track alignment set at a Ducati Dealer or Authorized Service Center.

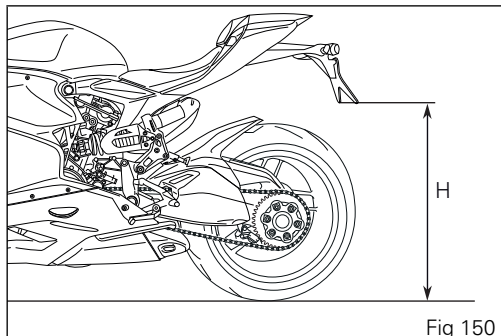


Fig 150



Attention

Using the vehicle set to FLAT (F) with a passenger aboard may result in vehicle instability. Ducati does not recommend to use the vehicle with the rear suspension set to FLAT (F) and a passenger aboard.



Important

The FLAT position (F) allows for different track alignment, as on the racing versions. The PROGRESSIVE position (P) is recommended with a passenger aboard.

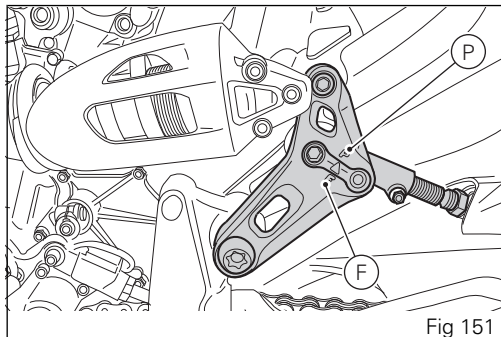


Fig 151

Riding the motorcycle

Break-in recommendations

Maximum rpm

Rotation speed for Break-in period and during standard use (rpm):


- 1) Up to 621 mi (1000 km);
- 2) 621 mi (1000 km) to 1553 mi (2500 km).

Up to 621 mi (1000 km)

During the first 621 mi (1000 km) keep an eye on the rev counter, it should never exceed: 5,500 ÷ (included) 6,000 rpm.

During the first few hours of riding, it is advisable to run the engine at varying load and rpm, though still within recommended limit.

Strict observance of Break-in recommendations will ensure longer engine life and reduce the likelihood of overhauls and tune-ups.

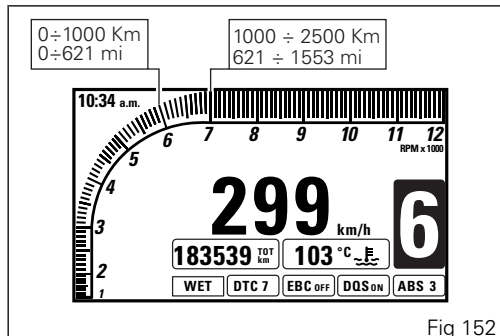



Important

During the first 621 mi (1000 km) (Break-in period), i.e. as long as the Odometer displays a value lower than or equal to 621 mi (1000 km), the "orange area" (pre-warning area - on the display with orange used for bar graph filling and to indicate the corresponding figure) is displayed when engine reaches 6000 rpm. During this break-in period, it is not advisable to exceed 6000 rpm, so make sure the instrument panel does not display the "orange area" of the bar graph.

To achieve this, roads with plenty of bends and even slightly hilly areas are ideal for the most efficient break-in of the engine, brakes and suspensions. For the first 62 mi (100 km), use the brakes gently. Avoid sudden or prolonged braking. This will allow the friction material on the brake pads to bed in against the brake disks.

So that the mechanical parts of the motorcycle can adapt to each another, and especially so the life of the basic engine parts is not affected, avoid harsh accelerations and do not run the engine at a high rpm for an extended time, especially uphill.

It is also advisable to inspect the drive chain frequently and lubricate as required.

621 mi (1000 km) to 1553 mi (2500 km)

At this point, you can squeeze some more power out of your engine. However never exceed 7,000 rpm.



Important

During the entire Break-in period, carefully observe the indications on the scheduled maintenance chart and servicing recommendations in the Warranty Booklet. Failure to follow these instructions releases Ducati Motor Holding S.p.A. from any liability whatsoever for any engine damage or shorter engine life.

Strict observance of Break-in recommendations will ensure longer engine life and reduce the likelihood of overhauls and tune-ups.

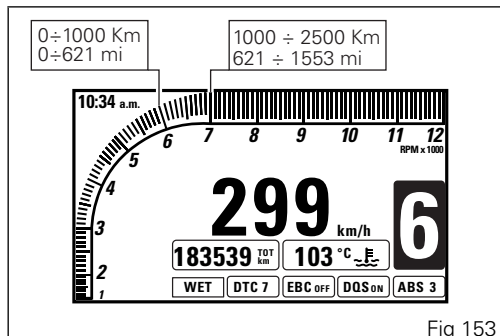


Fig 153

Pre-ride checks



Attention

Failure to carry out these checks before riding may lead to motorcycle damage and injury to rider and passenger.

Before riding, perform a thorough check-up on your bike as follows:

- **FUEL LEVEL IN THE TANK**
check the fuel level in the tank. fill tank if needed (page 244).
- **ENGINE OIL LEVEL**
Check oil level in the sump through the sight glass. Top up if needed (page 270).
- **BRAKE AND CLUTCH FLUID**
Check fluid level in the relevant reservoirs (page 251).
- **COOLANT**
Check coolant level in the expansion reservoir. Top up if needed (page 249).
- **TIRE CONDITION**
Check tire pressure and condition (page 268).

- **CONTROLS**
Work the brake, clutch, throttle and gear change controls (levers, pedals and twistgrip) and check for proper operation.
- **LIGHTS AND INDICATORS**
Make sure lights, indicators and horn work properly. Replace any burnt-out bulbs (page 262).
- **KEY LOCKS**
Ensure that fuel filler plug (page 222) and seat (page 223) are locked.
- **SIDE STAND**
Make sure side stand operates smoothly and is in the correct position (page 224).

ABS light

After Key-On, the ABS light (9) stays on.

When the vehicle speed exceeds 5 km/h, the warning light switches off to indicate the correct operation of the ABS system.



Attention

In case of malfunction, do not ride the motorcycle and contact a Ducati Dealer or Authorized Service Center.

ABS

Check that the front (1) and rear (2) phonic wheels are clean.



Attention

Clogged reading slots would compromise system proper operation. It is advisable to disable ABS in case of a very muddy road surfaces, as in these conditions the system might be subject to sudden failure.



Attention

Prolonged rearing could deactivate the ABS.

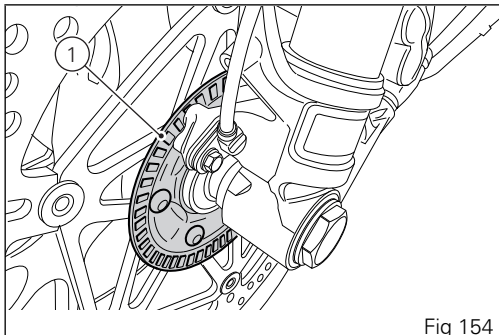


Fig 154

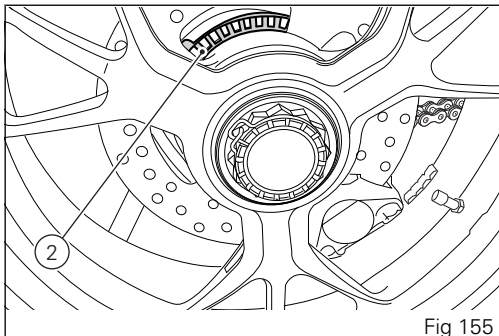


Fig 155

Starting the engine



Attention

Before starting the engine, become familiar with the controls you will need to use when riding.



Attention

Never start or run the engine indoors. Exhaust gases are poisonous and may lead to loss of consciousness or even death within a short time.

Move the ignition key to ON. Make sure both the green light N (1) and the red light  (2) on the instrument panel come on.



Important

The oil pressure light should go out a few seconds after the engine has started.

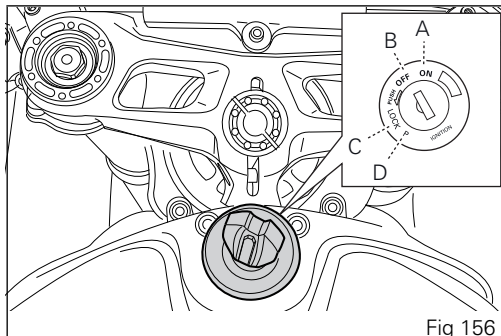


Fig 156

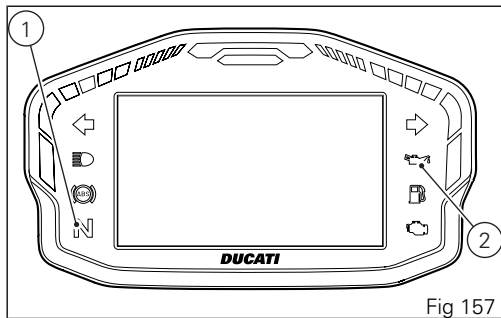


Fig 157



Attention

The side stand must be fully up (in a horizontal position), as its safety sensor prevents engine start when down.



Note


The engine can be started with side stand down and the gearbox in neutral. When starting the bike with a gear engaged, pull the clutch lever (in this case the side stand must be up).



Important

Do not rev up the engine when it is cold. Allow some time for oil to be heated and reach all points that need lubricating.

Check that the stop switch (3) is positioned to (RUN), then press the starter button (4).

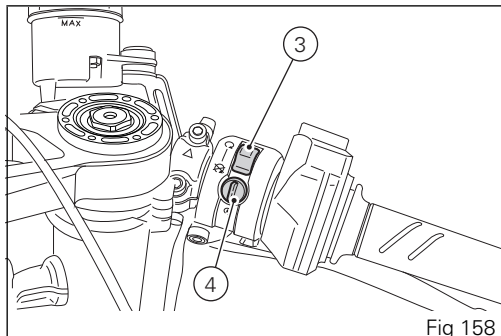

Moving off

- 1) Disengage the clutch by squeezing the clutch lever.
- 2) Push down the gear change lever firmly with the tip of your foot to engage first gear.
- 3) Raise the engine revs by turning the throttle twistgrip while gradually releasing the clutch lever. The motorcycle will start moving off.
- 4) Release the clutch lever completely and accelerate.
- 5) To shift up, close the throttle to slow down the engine, disengage the clutch, lift the gear change lever and let go the clutch lever. To shift down, proceed as follows: release the twistgrip, pull the clutch lever, shortly speed up to help gears synchronize, shift down (engage next lower gear) and release the clutch.

The controls should be used correctly and with promptness. When riding uphill do not hesitate to shift down as soon as the motorcycle tends to slow down. This will avoid undue stress on the engine and motorcycle.



Attention

Avoid harsh accelerations, as this may lead to misfiring and transmission snatching. The clutch lever should not be pulled longer than necessary after gear is engaged or else friction parts may overheat and wear out.



Attention

Prolonged rearing could deactivate the ABS.

Braking

Slow down in time, shift down to engine-brake first and then brake applying both brakes. Pull the clutch lever before stopping the motorcycle, to avoid sudden engine stop.

ABS system

Using the brakes correctly under adverse conditions is the hardest – and yet the most critical - skill to master for a rider. Braking is one of the most difficult and dangerous moments when riding a two-wheeled vehicle: the possibility of falling or having an accident during braking is statistically higher than at any other moment. A locked front wheel leads to loss of traction and stability, resulting in loss of control.

The Anti-lock Brake System (ABS) has been developed to enable riders to use the vehicle's braking force to the fullest during emergency braking, adverse weather conditions or when pavement is compromised.

ABS uses hydraulics and electronics to limit pressure in the brake circuit when a special sensor mounted to the wheel signals the electronic control unit that the wheel is about to lock up.

This avoids wheel lockup and preserves traction.

Pressure is raised back up immediately and the control unit keeps controlling the brake until the risk of a lockup disappears. Normally, the rider will perceive ABS operation as a harder feel or a pulsation of the brake lever and pedal.

The front and rear brakes use separate control systems, meaning that they operate independently. Likewise, the ABS is not an integral braking system and does not control both the front and rear brake at the same time.

If desired, the system can be deactivated from the instrument panel by using the "Customizing Riding Modes: ABS setting page 123" function.



Attention

When ABS is disabled, the vehicle restores the standard brake system features; using the two brake controls separately reduces the motorcycle braking efficiency. Never use the brake controls harshly or suddenly as you may lock the wheels and lose control of the motorcycle. When riding in the rain or on slippery surfaces, braking will become less effective. Always use the brakes very gently and carefully when riding under these conditions. Any sudden maneuvers may lead to loss of control. When tackling long, high-gradient downhill road tracts, shift down gears to use engine braking. Apply one brake at a time and use brakes sparingly. Keeping the brakes applied all the time would cause the friction material to overheat and reduce braking power dangerously. Underinflated tires reduce braking efficiency, handling accuracy and stability in a bend.

Stopping the motorcycle

Reduce speed, shift down and release the throttle twistgrip. Shift down to engage first gear and then neutral.

Apply the brakes and bring the motorcycle to a complete stop.

To switch the engine off, simply turn the key to OFF (page 211).

Parking

Stop the motorcycle, then put it on the side stand. To prevent theft, turn the handlebar fully left and turn the ignition key to the LOCK position.

If you park in a garage or other indoor area, make sure that there is proper ventilation and that the motorcycle is not near a source of heat.

You may leave the parking lights on by turning the key to position P.

Important

Do not leave the key turned to P for long periods or the battery will run down. Never leave the ignition key in the switch when you are leaving your bike unattended.



Attention

The exhaust system might be hot, even after engine is switched off; take special care not to touch the exhaust system with any body part and do not park the vehicle next to flammable material (wood, leaves etc.).



Attention

Using padlocks or other locks designed to prevent motorcycle motion, such as brake disk locks, rear sprocket locks, etc. is dangerous and may impair motorcycle operation and affect the safety of rider and passenger.

Refueling

Never overfill the tank when refueling. Fuel should never be touching the rim of filler recess.



Attention

Use fuel with a minimum octane rating of 90 (RON+MON)/2



Attention

The vehicle is compatible only with fuel having a maximum content of ethanol of 10% (E10). Using fuel with ethanol content over 10% is prohibited. Using it could result in severe damage of the engine and motorcycle components. Using fuel with ethanol content over 10% will render the Warranty null and void.

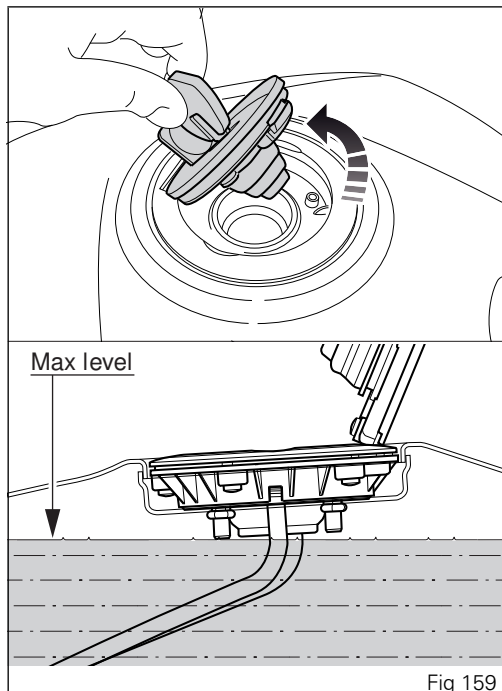


Fig 159

Tool kit and accessories

The tool kit is located under the seat and includes:

- Box wrench for spark plugs;
- Tommy bar for plug wrench;
- Double-tip screwdriver;
- Allen wrench for fairings.

To access the compartment, remove the seat (page 223).

Have the following parts (supplied as standard) installed by a Ducati Dealer or Authorized Service Center:

- right and left deflectors for the headlight fairing;
- passenger seat;
- left and right rear footpegs

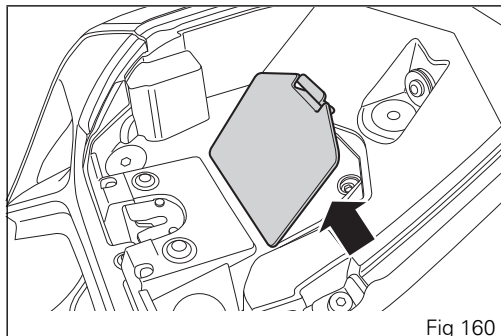


Fig 160

Main maintenance operations

Remove the fairing

Some parts of the motorcycle fairing have to be removed for certain maintenance or repair operations.



Attention

If parts that have been removed are not refitted correctly they may suddenly become loose while riding and cause you to lose control of your motorcycle.



Important

During reassembly always fit nylon washers when tightening fastening screws to avoid damage to painted parts and Plexiglas windscreen of headlight fairing.



Important

Have the fairings removed at a Ducati Dealer or Authorized Service Center.

Side fairings

To remove the fairings, use the Allen wrench fitted under the seat to loosen the following:

- the two screws (1) securing the fairing panels to the brackets;
- the four screws (2) securing the fairing panels to the headlight fairing;
- the three screws (3) securing the fairing panels to the frame;
- the two screws (4) located under the fairing that join the right fairing panel to the left fairing panel;
- the two screws (5) securing the fairing panels at the center;
- the two screws (6) securing the front of the fairing to the headlight fairing.



Note

Be careful of the splash guard, which is released by the fairing panel fastening.



Note

To refit the left fairing panel, lower the side stand and pass it through the hole in the panel.

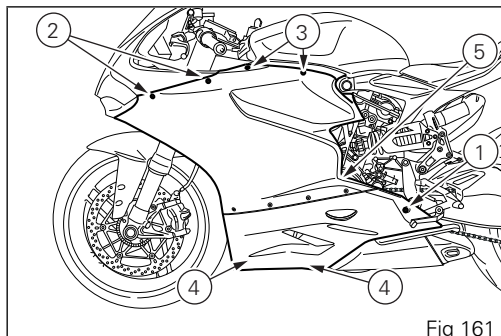


Fig 161

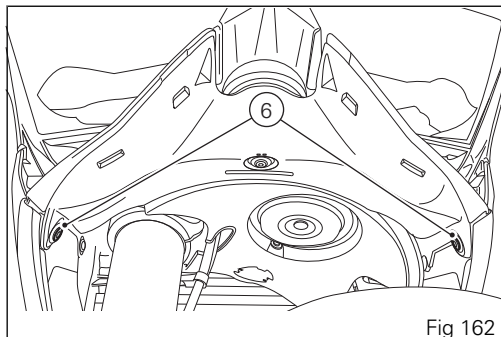


Fig 162

Change the air filter



Important

Have the air filter maintenance performed at a Ducati Dealer or Authorized Service Center.


Check and top up the coolant level

Check coolant level in the expansion tank on the right side of the vehicle.

Check that the level is between the MIN (1) and MAX (2) marks on the side of the expansion reservoir.

Top up if the level is below the MIN mark.

Remove the right-hand side fairing (page 247).

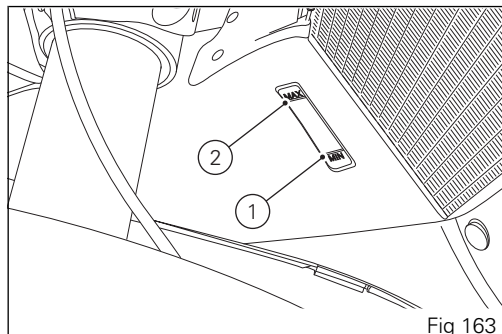

Unscrew the filler plug (3) and add ENI Agip Permanent Spezial antifreeze (do not dilute, use pure), until reaching the MAX level. Refit the filler plug (3) and reassemble all removed parts. This type of mixture ensures the best operating conditions (the coolant starts to freeze at -4 °F/-20 °C). Cooling circuit capacity: 0.61 gal (2.3 cu. dm - liters).



Attention

Place the motorcycle upright on a flat surface and make sure the engine is cold before proceeding.



Important

Have the top-up performed at a Ducati Dealer or Authorized Service Center.

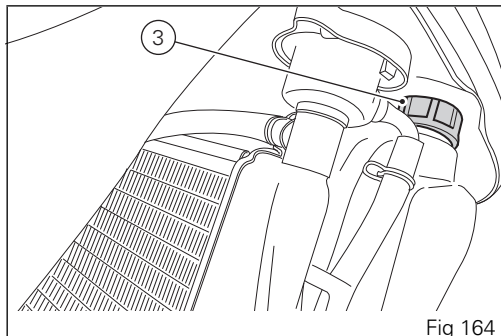


Fig 164

Check brake and clutch fluid level

The levels should not fall below the MIN marks on the respective reservoirs.



If level drops below the limit, air might get into the circuit and affect the operation of the system involved.

Brake and clutch fluid must be topped up and changed at the intervals specified in the scheduled maintenance table contained in the Warranty Booklet; please contact a Ducati Dealer or Authorized Service Center.



Important

All brake and clutch lines should be changed every four years.

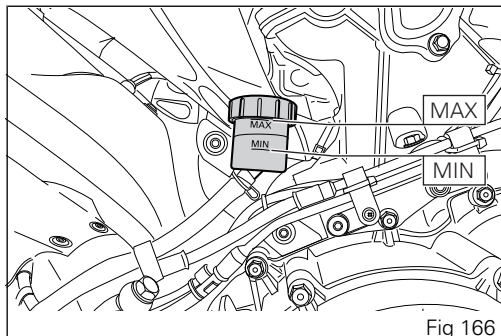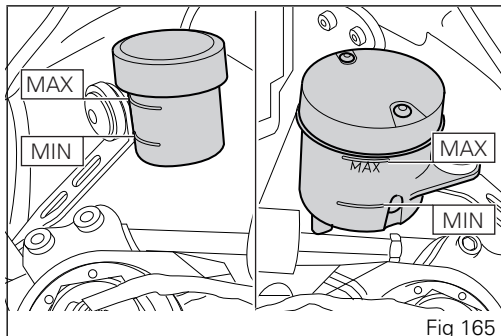

Brake system

If you note too much play on brake lever or pedal and brake pads are still in good condition, contact your Ducati Dealer or Authorized Service Center to have the system inspected and any air drained out of the circuit.



Attention

Brake and clutch fluid can damage paintwork and plastic parts, so avoid contact. Hydraulic oil is corrosive; it may cause damage and lead to severe injuries. Never mix fluids of different qualities. Check seals for proper sealing.

Clutch system

If the control lever has too much play and the transmission snatches or jams as you try to engage a gear, it means that there might be air in the circuit. Contact your Ducati Dealer or Authorized Service Center to have the system inspected and air drained out.



Attention

Clutch fluid level will increase in reservoir as clutch plate friction material wears down. Do not exceed the specified level (0.12 in (3 mm) above the minimum level).

Check brake pads for wear

Check brake pads wear through the inspection hole in the calipers. If the thickness of the friction material, even in just one pad, is about 0.04 in (1 mm) replace both pads.





Attention

Friction material wear beyond this limit would lead to metal support contact with the brake disk and compromise braking efficiency, disk integrity and rider safety.



Important

Have the brake pads replaced at a Ducati Dealer or Authorized Service Center.

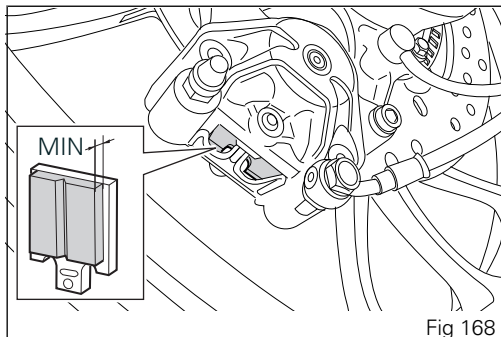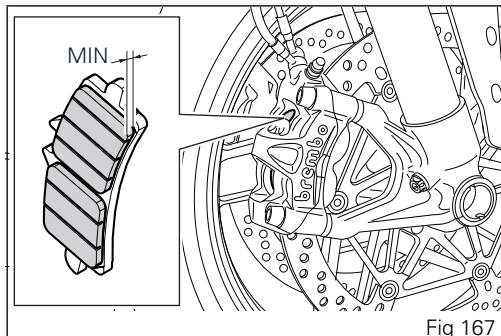

Charge the battery



Before charging the battery, it is best to remove it from the motorcycle.

Remove the left-hand side fairing (page 247).

Unscrew the screw (1) and remove the battery mounting cover (2).

Slide out the battery (3) from its housing and, always starting from the negative terminal (-), loosen the screws (4).

Remove the positive cable (5), the ABS positive cable (6) from the positive terminal and the negative cable (7) from the negative terminal.

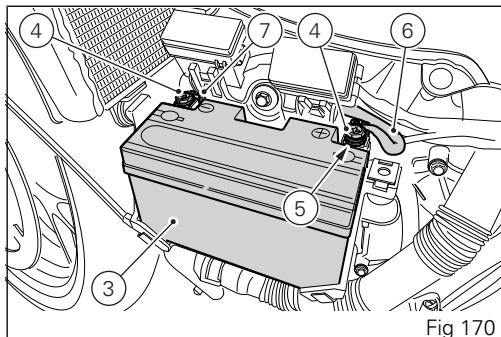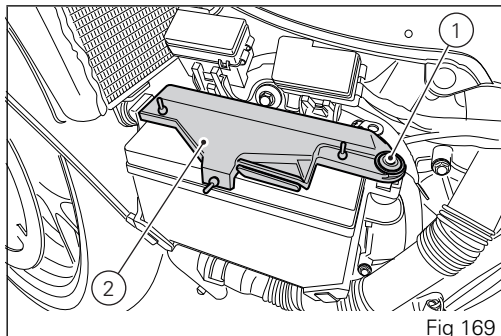



Attention

The battery produces explosive gases: keep it away from heat sources



Attention

Keep the battery out of the reach of children.

Charge the battery at 0.9 A for 5÷10 hours.
Charge the battery in a ventilated room.
Connect the battery charger leads to the battery terminals: the red one to the positive terminal (+), the black one to the negative terminal (-).



Important

Make sure the charger is off when you connect the battery to it, or you might get sparks at the battery terminals that could ignite the gases inside the cells. Always connect the red positive (+) terminal first.

Lay down the ABS positive cable (6), onto positive cable (5) and start screw (4) in its thread on these cables.

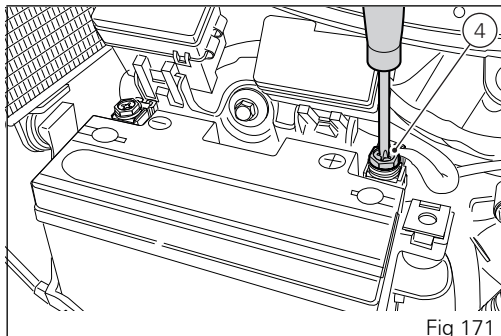


Fig 171

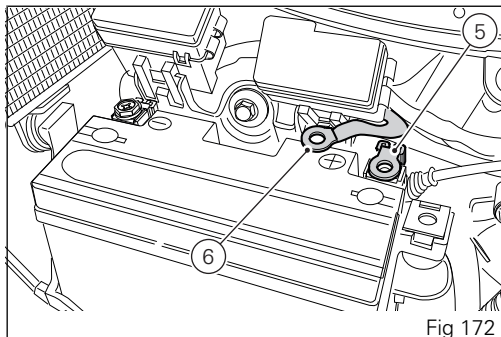




Fig 172

Connect the positive cable (5), previously assembled to ABS cable (6), to battery positive terminal, and negative cable (7) to battery negative terminal, by starting the other screw (4) in its thread.

Tighten the terminal clamp screws (4) to a torque of $5 \text{ Nm} \pm 10\%$ and apply grease onto the battery terminals to prevent oxidation.

Reposition the battery (3) in the support, positioning the cables (5) and (6) as shown in (Fig 170).

Refit battery mounting cover (2) and fasten, tightening the screw (1) to a torque of $10 \text{ Nm} \pm 10\%$. Refit the left-hand side fairing (page 247).

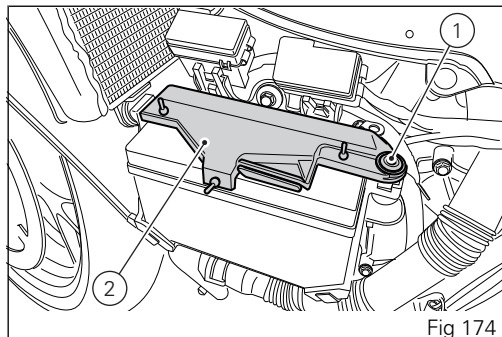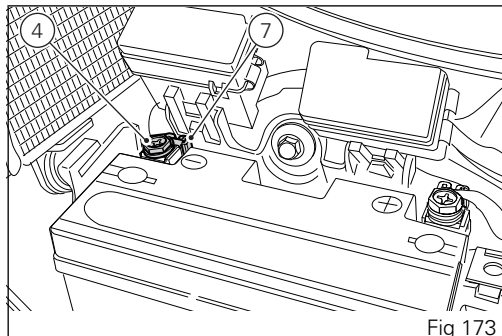

Charge and maintenance of the battery during winter storage

Your motorcycle is equipped with a connector (1) to which you can connect a special battery charger (2) (Battery maintainer kit part no. 69924601A - various countries; Battery maintainer kit part no. 69924601AX - for Japan, China and Australia only) available from our sales network.



Note

The 1199 Panigale electric system is designed so as to ensure there is a very low power drain when the motorcycle is off. Nevertheless, the battery features a certain self-discharge rate that is normal and depends on ambient conditions as well as on "non-use" time.

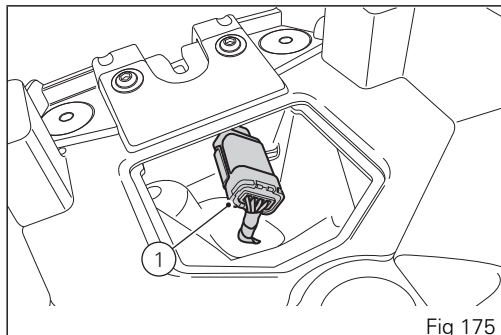


Fig 175

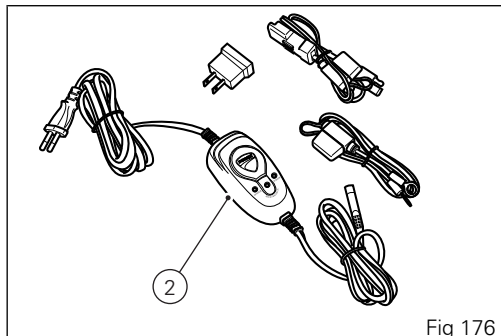


Fig 176



Important

If battery minimum voltage is not ensured by a suitable battery charge maintainer, sulfation may occur. This is irreversible and will lead to decreasing battery performance.



Note

When the motorcycle is left unused (approximately for more than 30 days). We recommend owners to use the Ducati battery charge maintainer (Battery maintainer kit part no. 69924601A - various countries; Battery maintainer kit part no. 69924601AX - for Japan, China and Australia only) since its electronics monitors the battery voltage and features a maximum charge current of 1.5 Ah. Connect the maintainer to the diagnostics socket located in the rear end of the bike.



Note

Using charge maintainers not approved by Ducati could damage the electric system; vehicle warranty does not cover the battery if damaged due to failure to comply with the above indications, since it is considered as wrong maintenance.

Check drive chain tension



Important

Have chain tension adjusted by a Ducati Dealer or Authorized Service Center.

Turn the rear wheel until you find the position where chain is tightest. Set the vehicle on the side stand. With just a finger, push down the chain at the point of measurement and release.

Measure the distance (A) between the center of the chain pins and the aluminum section of the swingarm: it must be $A = 1.97$ in (50 mm) - (included) 2.05 in (52 mm).



Important

This only applies to the motorcycle standard settings, available upon delivery.


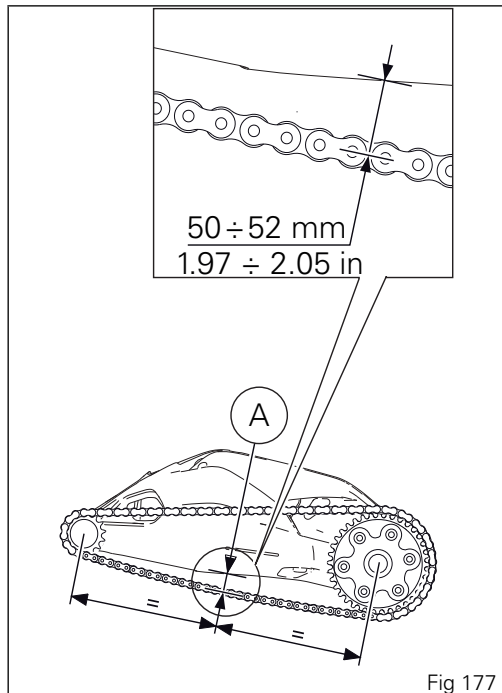


Fig 177

⚠ Attention
Correct tightening of swinging arm screws (1) is critical to rider and passenger safety.

⚠ Important
Improper chain tension will lead to rapid wear of transmission parts.

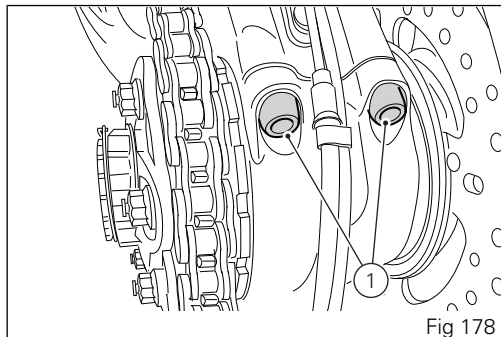

Chain lubrication

The chain fitted on your motorcycle has O-rings to protect its moving parts from dirt and to hold the lubricant inside.

The seals might be irreparably damaged if the chain is cleaned using any solvent other than those specific for O-ring chains or washed using steam or water cleaners.

After cleaning, blow the chain dry or dry it using absorbent material and apply SHELL Advance Chain or Advance Teflon Chain on each link.



Important

Using non-specific lubricants may lead to severe damage to chain, front and rear sprocket.

Replace the high and low beam bulbs

Before replacing a blown bulb, make sure that the replacement bulb has the same voltage and power as that specified in the paragraph "Electrical System" on page 290.

Always check that the bulb functions before reassembling removed parts. The figure indicates the position of the low beams (LO), high beams (HI) and led parking lights (1).

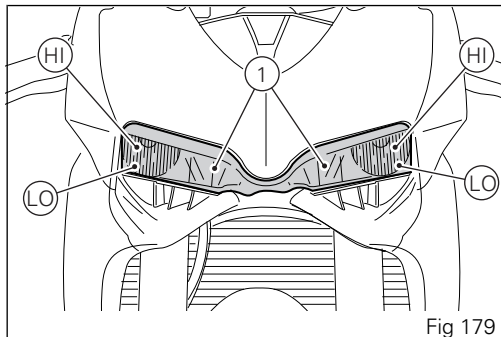


Fig 179

Headlight

Gain access to the left bulb.

Turn the ring nut on upper bulb holder

counterclockwise and remove the burnt-out bulb.

Replace the bulb with an identical one. Turn the ring nut clockwise to lock.

Gain access to the right bulb and replace it using the same procedure described for the left bulb.

Replacing the parking light bulb

LED parking lights are maintenance-free.



Important

To change headlight bulbs, it is not necessary to disconnect main wiring harness cable from headlight body.



Note

Do not touch the transparent part of the new bulb with the hands. This would cause it to blacken thereby reducing bulb brilliancy.



Attention

The headlight might fog up if the vehicle is used under the rain or after washing. Switch headlight on for a short time to dry up any condensate.


Rear turn indicators

To change the rear turn indicator bulbs, rotate the indicator body (1) by a 1/4 turn so that the lens is up, and then extract indicator body from the indicator light unit.

The bulb is the banjo-type: press and rotate counterclockwise to remove.

Fit the spare bulb by pressing and turning clockwise until it clicks.

Refit the indicator body (2) to its support and rotate it by a 1/4 turn.

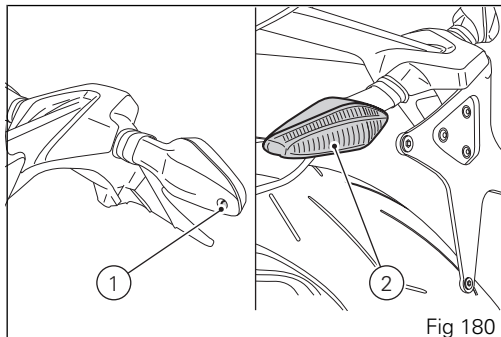


Beam setting



Note

The headlight features a double beam adjustment, one for the right beam and one for the left beam

To check the headlight aim, place the motorcycle upright with the tires inflated to the correct pressure and one person sitting astride the motorcycle. The motorcycle should be perfectly vertical, with its longitudinal axis at right angles to a wall or screen at a distance of 32.8 feet (10 meters). Draw a horizontal line corresponding to the center of the headlamp and a vertical one in line with the longitudinal axis of motorcycle. If possible, perform this check in dim light. Turn the low beam on and adjust both the right-hand and left-hand light beam: The height of the light spot (measured at the upper limit between dark and lit-up area) should not exceed 9/10th of the height from ground of headlamp center.

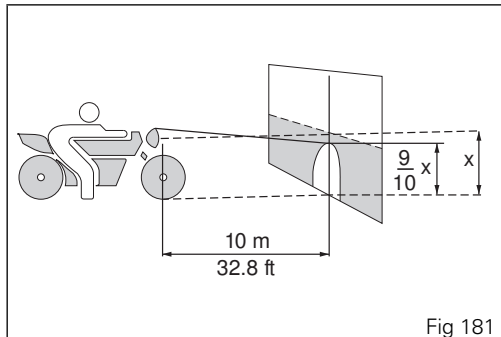

Note

The procedure described here is in compliance with the Italian Standard establishing the maximum height of the light beam. Owners in other countries will adapt said procedure to the provisions in force in their countries.



To adjust the headlight beam, turn the four screws (1) and (2) located at the front, on the right and left side of the vehicle; in particular:

- the two screws (1), located on the right and left side of the vehicle allow you to adjust the beam vertically
- the two screws (2), located on the right and left side of the vehicle allow you to adjust the beam horizontally.



Attention

The headlight might fog up if the vehicle is used under the rain or after washing. Switch headlight on for a short time to dry up any condensate.

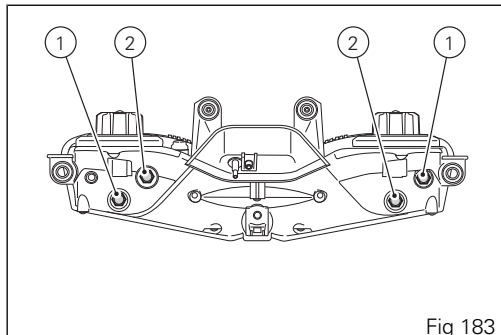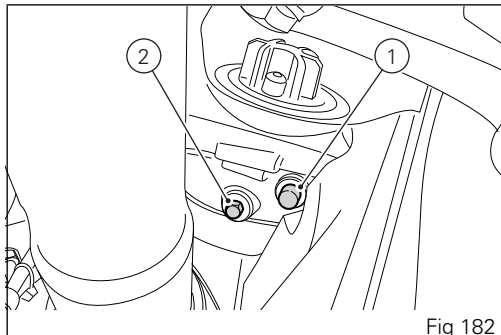

Adjust rear-view mirrors

The rear view mirror can be adjusted manually by pressing on point (A).

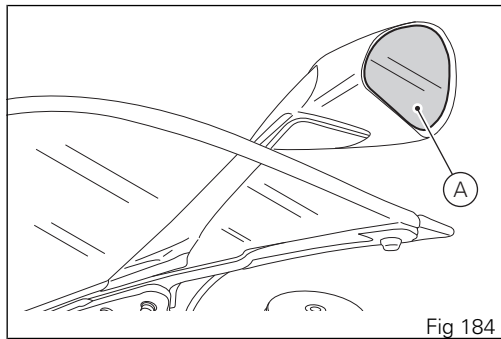


Fig 184

Tubeless tyres

Front tire pressure:

2.1 bar - 2.14 bar - (210 kPa - 30.46 PSI).

Rear tire pressure:

2.2 bar - 2.24 bar - (220 kPa - 31.9 PSI).

Because tire pressure is affected by temperature and altitude variations, you are advised to check and adjust it whenever you are riding in areas where ample variations in temperature or altitude occur.



Important

Check and set tire pressure when tires are cold. When traveling very bumpy roads, increase tire pressure by $0.2 \div 0.3$ bar to preserve the roundness of the front rim.

tire repair or change (Tubeless tires)

In the event of a tiny puncture, tubeless tires will take a long time to deflate, as they tend to keep air inside. If you find the pressure low in one tire, check the tire for punctures.



Attention

Punctured tires must be replaced. Replace tires with recommended standard tires only. Be sure to tighten the valve caps securely to avoid leaks when riding. Never use tube type tires. Failure to heed this warning may lead to sudden tire blowout and serious danger to rider and passenger.

After replacing a tire, the wheel must be balanced.



Attention

Do not remove or shift the wheel balancing weights.



Note

Have the tires replaced at a Ducati Dealer or Authorized Service Center. Correct removal and installation of the wheels is essential. Some parts of the ABS (such as sensors and phonic wheels) are mounted to the wheels (ABS version) and require specific adjustment.

Minimum tread depth

Measure tread depth (S, Fig 185) at the point where tread is most worn down: It should not be less than 0.08 in (2 mm), and in any case not less than the legal limit.



Important

Visually inspect the tires at regular intervals for cracks and cuts, especially on sidewalls, bulges or large spots which are indicative of internal damage. Replace them if badly damaged. Remove any stones or other foreign bodies caught in the tread.

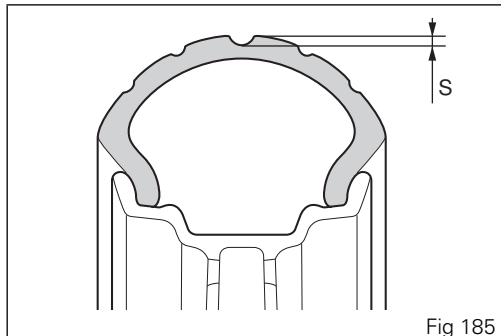


Fig 185


Check engine oil level

Engine oil level can be checked through the sight glass (1) located on the clutch cover. Oil level must be checked with the motorcycle perfectly upright and the engine cold. Oil level should be between the marks on the sight glass. If the level is low, top up with SHELL Advance 4T Ultra engine oil. Remove the oil filler cap (2) and top up until the oil reaches the required level. Refit the plug.



Important


Engine oil and oil filters must be changed by a Ducati Dealer or Authorized Service Center at the intervals specified in the scheduled maintenance chart contained in the Warranty Booklet.

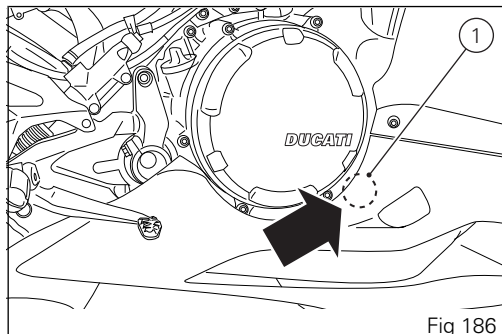

Viscosity

SAE 15W-50


The other viscosity degrees indicated in the table can be used if the local average temperature is within the limits specified for that oil viscosity.

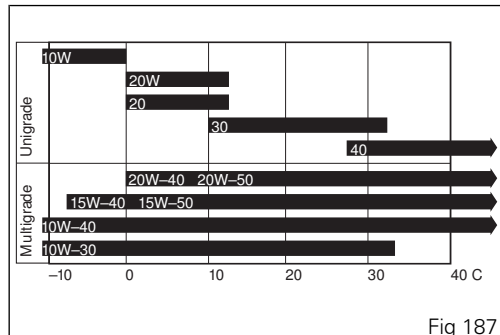

Clean and replace the spark plugs

Spark plugs are essential to smooth engine running and should be checked at regular intervals.

Have the spark plug replaced at a Ducati Dealer or Authorized Service Center.

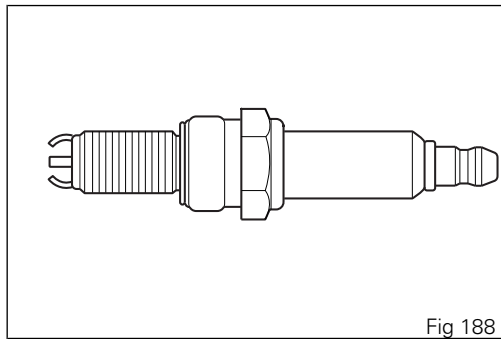

Clean the motorcycle

To preserve the finish of metal parts and paintwork, wash and clean your motorcycle at regular intervals according to the road conditions you ride in. Use specific products only. Prefer biodegradable products. Avoid harsh detergents or solvents. Only use water and neutral soap to clean the Plexiglas and the seat.

Periodically manually clean all aluminum components. Use special detergents, suitable for aluminum parts FREE of abrasives or caustic soda.



Note

Do not use sponges with abrasive parts or steel wool; only use soft cloths.

In any case, the Warranty does not apply to motorcycles whenever poor maintenance status is ascertained.



Important

Do not wash your motorcycle right after use. When the motorcycle is still hot, water drops will evaporate faster and spot hot surfaces. Never clean the motorcycle using hot or high-pressure water jets.

Cleaning the motorcycle with a high pressure water jet may lead to seizure or serious faults in the front fork, wheel hub assembly, electric system, headlight (fogging), front fork seals, air inlets or exhaust mufflers, with resulting loss of compliance with safety requirements.

Clean off stubborn dirt or exceeding grease from engine parts using a degreasing agent. Be sure to avoid contact with drive parts (chain, sprockets, etc.).

Rinse with warm water and dry all surfaces with chamois leather.



Attention

Braking performance may be impaired immediately after washing the motorcycle. Never grease or lubricate the brake disks. Loss of braking and further accidents may occur. Clean the disks with an oil-free solvent.



Attention

The headlight might fog up due to washing, rain or moisture. Switch headlight on for a short time to dry up any condensate.

Carefully clean the phonic wheels of the ABS to ensure system efficiency. Do not use aggressive products in order to avoid damaging the phonic wheels and sensors.



Note

Do not use alcohol or alcohol-derived products to clean the dashboard.

Take special care in regularly cleaning the wheel rims since they contain some machined aluminum parts; clean and dry them any time you use the motorcycle.

Storing the motorcycle

disconnect, remove the battery and periodically charge it using the battery charge maintainer (see page 257). Protect the motorcycle with a suitable canvas. This will protect paintwork and prevent retaining condensate. The canvas is available from Ducati Performance.

If the motorcycle is to be left unriden over long periods, you should perform the following procedures before storing it away:

- clean the motorcycle;
- empty the fuel tank;
- place the motorcycle on a service stand;
- disconnect, remove the battery and periodically charge it using the battery charge maintainer (see page 257).
- Protect the motorcycle with a suitable canvas. This will protect paintwork and prevent retaining condensate. The canvas is available from Ducati Performance.

Important notes

Laws in some countries (France, Germany, Great Britain, Europe, Switzerland, etc.) set certain noise and pollution standards.

Periodically carry out the required checks and replace parts as necessary using Ducati original spare parts to be in compliance with regulations in the given country.

Scheduled maintenance chart

Scheduled maintenance chart: operations to be performed by the Dealer



Attention

This scheduled maintenance chart is designed for a road use of the 1199 Panigale. If it is used on the track, even if not during sport competitions, all parts of the bike are more stressed so routine maintenance operations must be carried out more frequently than indicated.



Attention

Please contact a Ducati Dealer or Authorized Service Center for customized service advice on the sport use of your 1199 Panigale.

List of operations and type of intervention [set mileage (km/mi) or time interval *]	km x1000 mi x1000	1	12	24	36	48	Time (months)
		0.6	7.5	15	22.5	30	
Reading of the error memory with DDS 2.0 and check of Software version update on control units		•	•	•	•	•	12
Check whether there are technical updates and recall campaigns		•	•	•	•	•	12
Change engine oil and filter		•	•	•	•	•	12
Clean the engine oil intake filter				•		•	-
Check and/or adjust valve clearance				•		•	-

List of operations and type of intervention [set mileage (km/mi) or time interval *]	km x1000	1	12	24	36	48	Time (months)
	mi x1000	0.6	7.5	15	22.5	30	
Visual check for wear of the chain timing system						●	-
Replace the spark plugs				●		●	-
Clean the air filter			●		●		-
Change the air filter				●		●	-
Check tightening of clutch cover and clutch protection cover bolts			●	●	●	●	-
Check tightening of oil sump bolts				●		●	-
Check brake and clutch fluid level		●	●	●	●	●	12
Change brake and clutch fluid							24
Check brake pads. Replace if necessary		●	●	●	●	●	12
Check tightening of brake caliper bolts and brake disk carrier bolts		●	●	●	●	●	12
Check tightening of front and rear wheel nuts		●	●	●	●	●	12
Check wheel hub bearings				●		●	-
Check and lubricate the rear wheel shaft				●		●	24
Check cush drive damper on rear sprocket				●		●	-

List of operations and type of intervention [set mileage (km/mi) or time interval *]	km x1000 mi x1000	1	12	24	36	48	Time (months)
		0.6	7.5	15	22.5	30	
Check tightening of secondary drive front and rear sprocket nuts		•	•	•	•	•	12
Check chain sliding shoes for wear		•	•	•	•	•	12
Check the drive chain tension and lubrication		•	•	•	•	•	12
Check steering bearings and lubricate, if necessary				•		•	24
Change the front fork fluid							36
Visually check the front fork and rear shock absorber seals		•	•	•	•	•	12
Check the freedom of movement and tightening of side stand		•	•	•	•	•	12
Visually check the fuel lines			•	•	•	•	12
Check rubbing points, clearance, freedom of movement and positioning of hoses and electric wiring in view		•	•	•	•	•	12
Lubricate the levers at the handlebar and pedal controls			•	•	•	•	12
Change the coolant						•	36
Checking the coolant level		•	•	•	•	•	12
Check electric fan operation		•	•	•	•	•	12

List of operations and type of intervention [set mileage (km/mi) or time interval *]	km x1000 mi x1000	1	12	24	36	48	Time (months)
		0.6	7.5	15	22.5	30	
Check tire pressure and wear		●	●	●	●	●	12
Check the battery charge level		●	●	●	●	●	12
Check idling		●	●	●	●	●	12
Check secondary air system operation				●		●	-
Check the operation of the safety electrical devices (side stand sensor, front and rear brake switches, engine stop switch, gear/neutral sensor)		●	●	●	●	●	12
Check the indicators and lighting		●	●	●	●	●	12
Reset Service indication through DDS 2.0		●	●	●	●	●	12
Road test of the motorcycle, testing the safety devices (ex. ABS and DTC)		●	●	●	●	●	12
Clean the motorcycle		●	●	●	●	●	12
Fill out that the service was performed in Warranty Certificate		●	●	●	●	●	12

Scheduled maintenance chart: operations to be performed by the customer

List of operations and type of intervention [set mileage (km/mi) or time interval *]	km x1000	1
	mi x1000	0.6
	Months	6
Check engine oil level		●
Check brake and clutch fluid level		●
Check tire pressure and wear		●
Check the drive chain tension and lubrication. If necessary, contact your dealer to replace pads.		●
Check brake pads. If necessary, contact your dealer to replace pads.		●

* Service on the set interval, whichever comes first (mileage or months).

Technical data

Weights

Overall weight (in running order with 90% of fuel - 93/93/EC): 420 lb (190.5 kg).

Overall weight (without fluids and battery): 367 lb (166.5 kg).

Maximum allowed weight (carrying full load): 370 lb (816 kg).



Attention

Failure to observe weight limits could result in poor handling and impair the performance of your motorcycle and may cause you to lose control of the motorcycle.

Overall dimensions

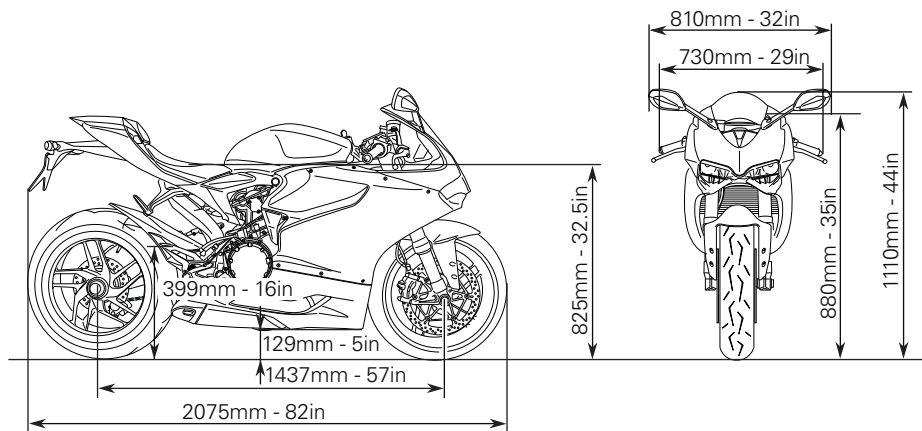


Fig 189

Top-ups

TOP-UPS	TYPE	
Fuel tank, including a reserve of 1.32 gallons (5 cu. dm liters)	Unleaded fuel with a minimum octane rating of 90 (RON+MON)/2.	4.5 gallon 17 cu. dm (liters)
Oil sump and filter	SHELL - Advance 4T Ultra	0.98 gallon - 3.7 cu. dm (liters)
Front/rear brake and clutch circuits	SHELL Advance Brake DOT 4	-
Protectant for electric contacts	SHELL Advance Contact Cleaner	-
Front fork	SHELL Advance Fork 7.5 or Donax TA	0.23 cubic inch - 155 cc (per leg)
Cooling circuit	ENI Agip Permanent Spezial antifreeze (do not dilute, use pure)	0.61 gallon - 2.3 cu. dm (liters)



Important

Do not use any additives in fuel or lubricants. Using them could result in severe damage of the engine and motorcycle components.



Attention

The vehicle is compatible only with fuel having a maximum content of ethanol of 10% (E10). Using fuel with ethanol content over 10% is prohibited. Using it could result in severe damage of the engine and motorcycle components. Using fuel with ethanol content over 10% will render the Warranty null and void.

Engine

Twin cylinder, four-stroke, 90° "L" type, longitudinal, with deep sump die-cast crankcase.

Bore: 4.41 in (112 mm).

Stroke: 2.4 in (60.8 mm).

Total displacement, cu. cm: 1198

Compression ratio: 12.5 ± 0.5:1

Max. crankshaft power (95/1/EC), kW/HP:

143 kW/195 HP at 10750 rpm

Max. torque at crankshaft (95/1/EC):

132 Nm / 13.5 kgm / 98.1 lb-ft at 9000 rpm

Maximum rpm:

11,300



Important


Do not exceed the specified rpm limits in any running conditions.

Timing system

Double overhead camshaft (DOHC) driven by chain and gearwheels, 4 valves per cylinder, desmodromic system.

Desmodromic timing system

- 1) Opening (or upper) rocker.
- 2) Opening rocker shim.
- 3) Closing (or lower) rocker shim.
- 4) Return spring for lower rocker.
- 5) Closing (or lower) rocker.
- 6) Camshaft.
- 7) Valve.

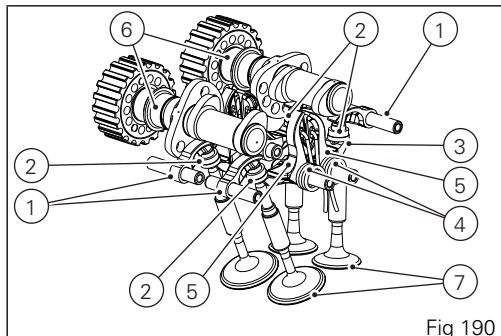

Performance data

Maximum speed in any gear should be reached only after a correct running-in period with the motorcycle properly serviced at the recommended intervals.



Important

Failure to follow these instructions will release Ducati Motor Holding S.p.A. from any liability for any engine damage or shortened engine life.

Spark plugs

Make:

NGK

Type:

MAR9A-J

Fuel system

MITSUBISHI indirect electronic injection type:

a/n / a/n.

Oval throttle body (corresponding diameter):

2.7 in (67.5 mm)

Injectors per cylinder: 2

Firing points per injector: 12

Fuel with a minimum octane rating of 90 (RON +MON)/2.



Attention

The vehicle is compatible only with fuel having a maximum content of ethanol of 10% (E10). Using fuel with ethanol content over 10% is prohibited. Using it could result in severe damage of the engine and motorcycle components. Using fuel with ethanol content over 10% will render the Warranty null and void.

Brakes

Separate-action anti-lock brake system operated by hall-type sensors mounted to each wheel with phonic wheel detection: ABS can be disabled.

Front

Semi-floating drilled twin-disk.

Braking material: steel.

Carrier material: aluminum

Disk diameter: 13 in (330 mm).

Hydraulically operated by a control lever on handlebar right hand side.

Brake caliper make: BREMBO.

Type: M50 (caliper diameter 30).

Friction material: TT2910 HH.

Master cylinder type: PR16/21.

Rear

With fixed drilled steel disk.

Disk diameter: 9.65 in (245 mm).

Hydraulically operated by a pedal on RH side.

Make: BREMBO

Type: P34c (caliper with Ø 34 pistons).

Friction material: Ferodo Ferit I/D 450 FF.

Master cylinder type: PS 13.



Attention

The brake fluid used in the brake system is corrosive.

In the event of accidental contact with eyes or skin, wash the affected area with generous quantities of running water.

Transmission

Wet clutch controlled by the lever on left hand side of the handlebar

Drive is transmitted from engine to gearbox main shaft via spur gears.

Front chain sprocket/clutch gearwheel ratio: 30/53

6-speed gearbox with constant mesh gears, gear change pedal on left side of motorcycle.

Gearbox output sprocket/rear chain sprocket ratio:
15/39

Total gear ratios:

1st gear 15/37

2nd gear 16/30

3rd gear 18/27

4th gear 20/25

5th gear 22/24

6th gear 24/23

Drive chain from gearbox to rear wheel.

Make: REGINA 525 ZRPK

Links: 104



Important

The above gear ratios are the homologated ones and under no circumstances must they be modified.

However, if you wish to tune up your motorcycle for competitions or special tracks, Ducati Motor Holding S.p.A. will be pleased to provide information about the special ratios available. Contact a Ducati Dealer or Authorized Service Center.



Attention

If the rear sprocket needs replacing, contact a Ducati Dealer or Authorized Service Center. If improperly replaced, this component could seriously endanger your safety and that of your passenger, and cause irreparable damage to your motorcycle.

Frame

aluminum alloy cast monocoque frame.

aluminum alloy cast rear subframe.

Steering head angle: 24° 50'

Steering angle: 27° on the left / 27° on the right.

Trail: 100 mm.

Wheels

Front

Three-spoke, light-alloy forged rims.

Size: MT3.50x17"

Rear

Three-spoke, light-alloy forged rims.

Size: MT6.00x17"

Tires

Front

Tubeless, radial tire.

Size: 120/70.

Rear

Tubeless, radial tire.

Size: 200/55.

Suspensions

Front

Hydraulic upside-down fork provided with external adjusters for rebound and compression damping and preload (for inner springs of fork legs).

Stanchion diameter:

50 mm, TiN coated.

Wheel travel:

4.72 in (120 mm).

Rear

The shock absorber is adjustable for rebound, compression and spring preload.

The shock absorber is connected to the crankcase at the front pivot point and to the rocker arm at the rear pivot point.

The swinging arm is connected to the pivot shafts going through the engine. The whole system gives the bike excellent stability.

Wheel travel:

5.12 in (130 mm).

Exhaust system

Exhaust pipe layout is "2 into 1 into 2".

Two stainless steel silencers with aluminum alloy external sleeve.

Two lambda sensors and two catalytic converters.

Available colors

Ducati Anniversary red code 473.101 (PPG);

Clear coat code 228.880 (PPG);

aluminum color frame and black rims.

Electrical system

Basic electric items are:

Headlight type:

no. 2 halogen bulbs H11 OSMAR 64211C 12V 55W (low beam);

no. 2 halogen bulbs H11 OSMAR 64211C 12V 55W (high beam).

parking light type:

no. 8 LEDs

Tail light type:

no. 2 REBEL LXM2-PH01-0060 LEDs.

LED stop lights type:

no. 8 LA G6SP-CBEA-24-1 LEDs.

LED number plate light type:

no. 3 CREE CLA1A-WKW-CXAYB453 LEDs.

Electrical controls on handlebars.

LED front turn indicators type: -

LED rear turn indicators type:

no. 4 OSRAM LYE65F LEDs.

Horn.

Brake light switches.

Sealed battery, 12V - 6.5 Ah.

System voltage 12 V.

GENERATOR 12V-380W.

ELECTRONIC RECTIFIER, protected by a 30A fuse located on the solenoid starter, under the battery (C, Fig 193).

Starter motor: 12V-0.6 kW.

Rear turn indicators: R10W (12V-10W) Orange Color.

Number plate light: LED.



Note



For bulb replacement instructions, please read "Replacing the high and low beam bulbs".

Fuses

There are twelve fuses that protect the electric components located inside the front fuse boxes, and one on the electric solenoid starter. There is a spare fuse in every box.

Refer to the table below to identify the circuits protected by the various fuses and their ratings. The front left fuse box (A, Fig 191) and the front right one (B, Fig 192) are located above the battery. To access the fuses, remove the left fairing (page 247).

To expose the fuses, lift the box protective cover. Mounting position and ampere capacity are marked on box cover.

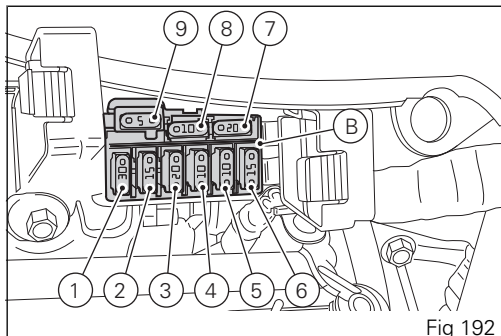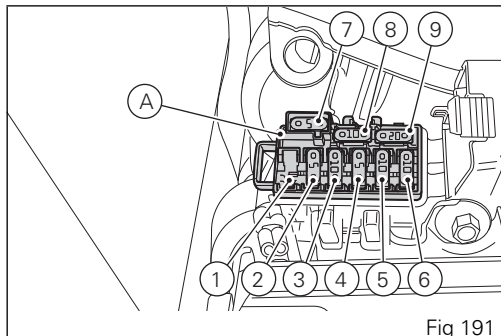

Front left fuse box key		
Pos	El. item	Rat.
1	-	-
2	GPS	5 A
3	Key-sense	10 A
4	Diagnostics	5 A
5	Throttle opening relay (ETV)	10 A
6	Instrument panel	10 A
7	Spare	5 A
8	Spare	10 A
9	Spare	20 A

Front right fuse box key		
Pos	El. item	Rat.
1	ABS 1	30 A
2	ABS 2	15 A
3	Injection relay	20 A
4	Lights	10 A

Front right fuse box key		
5	ECU	10 A
6	Black Box System (BBS)	15 A
7	Spare	20 A
8	Spare	10 A
9	Spare	5 A

To access the main fuse, remove the left half-fairing (page 247).

The main fuse (C, Fig 193), is positioned next to the battery, on the solenoid starter (D, Fig 193). Remove the fuse cap (E, Fig 193) to reach it. A blown fuse is identified by the interrupted center link (F, Fig 194).





Important

Switch the ignition key to OFF before replacing the fuse to avoid possible short-circuits.



Attention

Never use a fuse with a rating other than specified. Failure to observe this rule may damage the electric system or even cause fire.

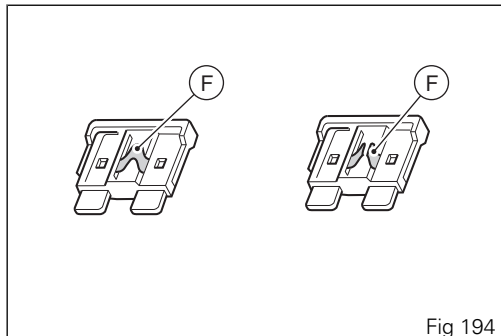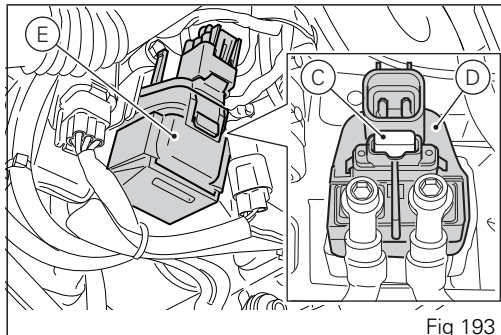

Injection /electric system diagram key

- 1) Right-hand switch
- 2) E-lock control unit
- 3) E-lock relay
- 4) Fuse box 1
- 5) Fuse box 2
- 6) ECU
- 7) APS
- 8) Starter motor
- 9) Fused solenoid
- 10) Battery
- 11) Engine ground
- 12) Regulator
- 13) Generator
- 14) Rear right turn indicator
- 15) Rear light
- 16) Rear left turn indicator
- 17) Number plate light
- 18) Diagnostics socket
- 19) Vehicle control unit (BBS)
- 20) Ex-up drive
- 21) Gear sensor
- 22) Rear speed sensor
- 23) Front speed sensor
- 24) Fuel pump

- 25) Fuel level
- 26) Vertical coil
- 27) Horizontal coil
- 28) Timing/rpm sensor
- 29) Vertical lambda sensor
- 30) Horizontal lambda sensor
- 31) Quick shifter
- 32) Side stand switch
- 33) Oil pressure sensor
- 34) Rear stop switch
- 35) Clutch switch
- 36) Front stop switch
- 37) Fuel pump relay
- 38) Vertical ETV relay
- 39) Horizontal ETV relay
- 40) Vertical MAP sensor
- 41) Horizontal MAP sensor
- 42) Water temperature sensor
- 43) Air temperature sensor
- 44) Horizontal TPS
- 45) Vertical TPS
- 46) Main horizontal injector
- 47) Top horizontal injector
- 48) Main vertical injector
- 49) Top vertical injector
- 50) Horizontal ETV drive

- 51) Vertical ETV drive
- 52) Secondary air actuator
- 53) Left-hand switch
- 54) Horn
- 55) GPS
- 56) Front left turn indicator
- 57) Instrument panel
- 58) Left high beam
- 59) Front right turn indicator
- 60) Fan
- 61) Left low beam
- 62) Parking light
- 63) Right low beam
- 64) Right high beam
- 65) Low beam relay
- 66) ABS control unit
- 67) High beam relay

Wire color coding

- B Blue
- W White
- V Violet
- Bk Black
- Y Yellow
- R Red

- Lb Light blue
- Gr Gray
- G Green
- Bn Brown
- O Orange
- P Pink



Note

The electric system wiring diagram is at the end of this manual.


Routine maintenance record

Routine maintenance record

KM	MI	DUCATI SERVICE	MILEAGE	DATE
1000	600			
12000	7500			
24000	15000			
36000	22500			
48000	30000			
60000	37500			

Stampato 07/2013

Cod. 913.7.243.1H

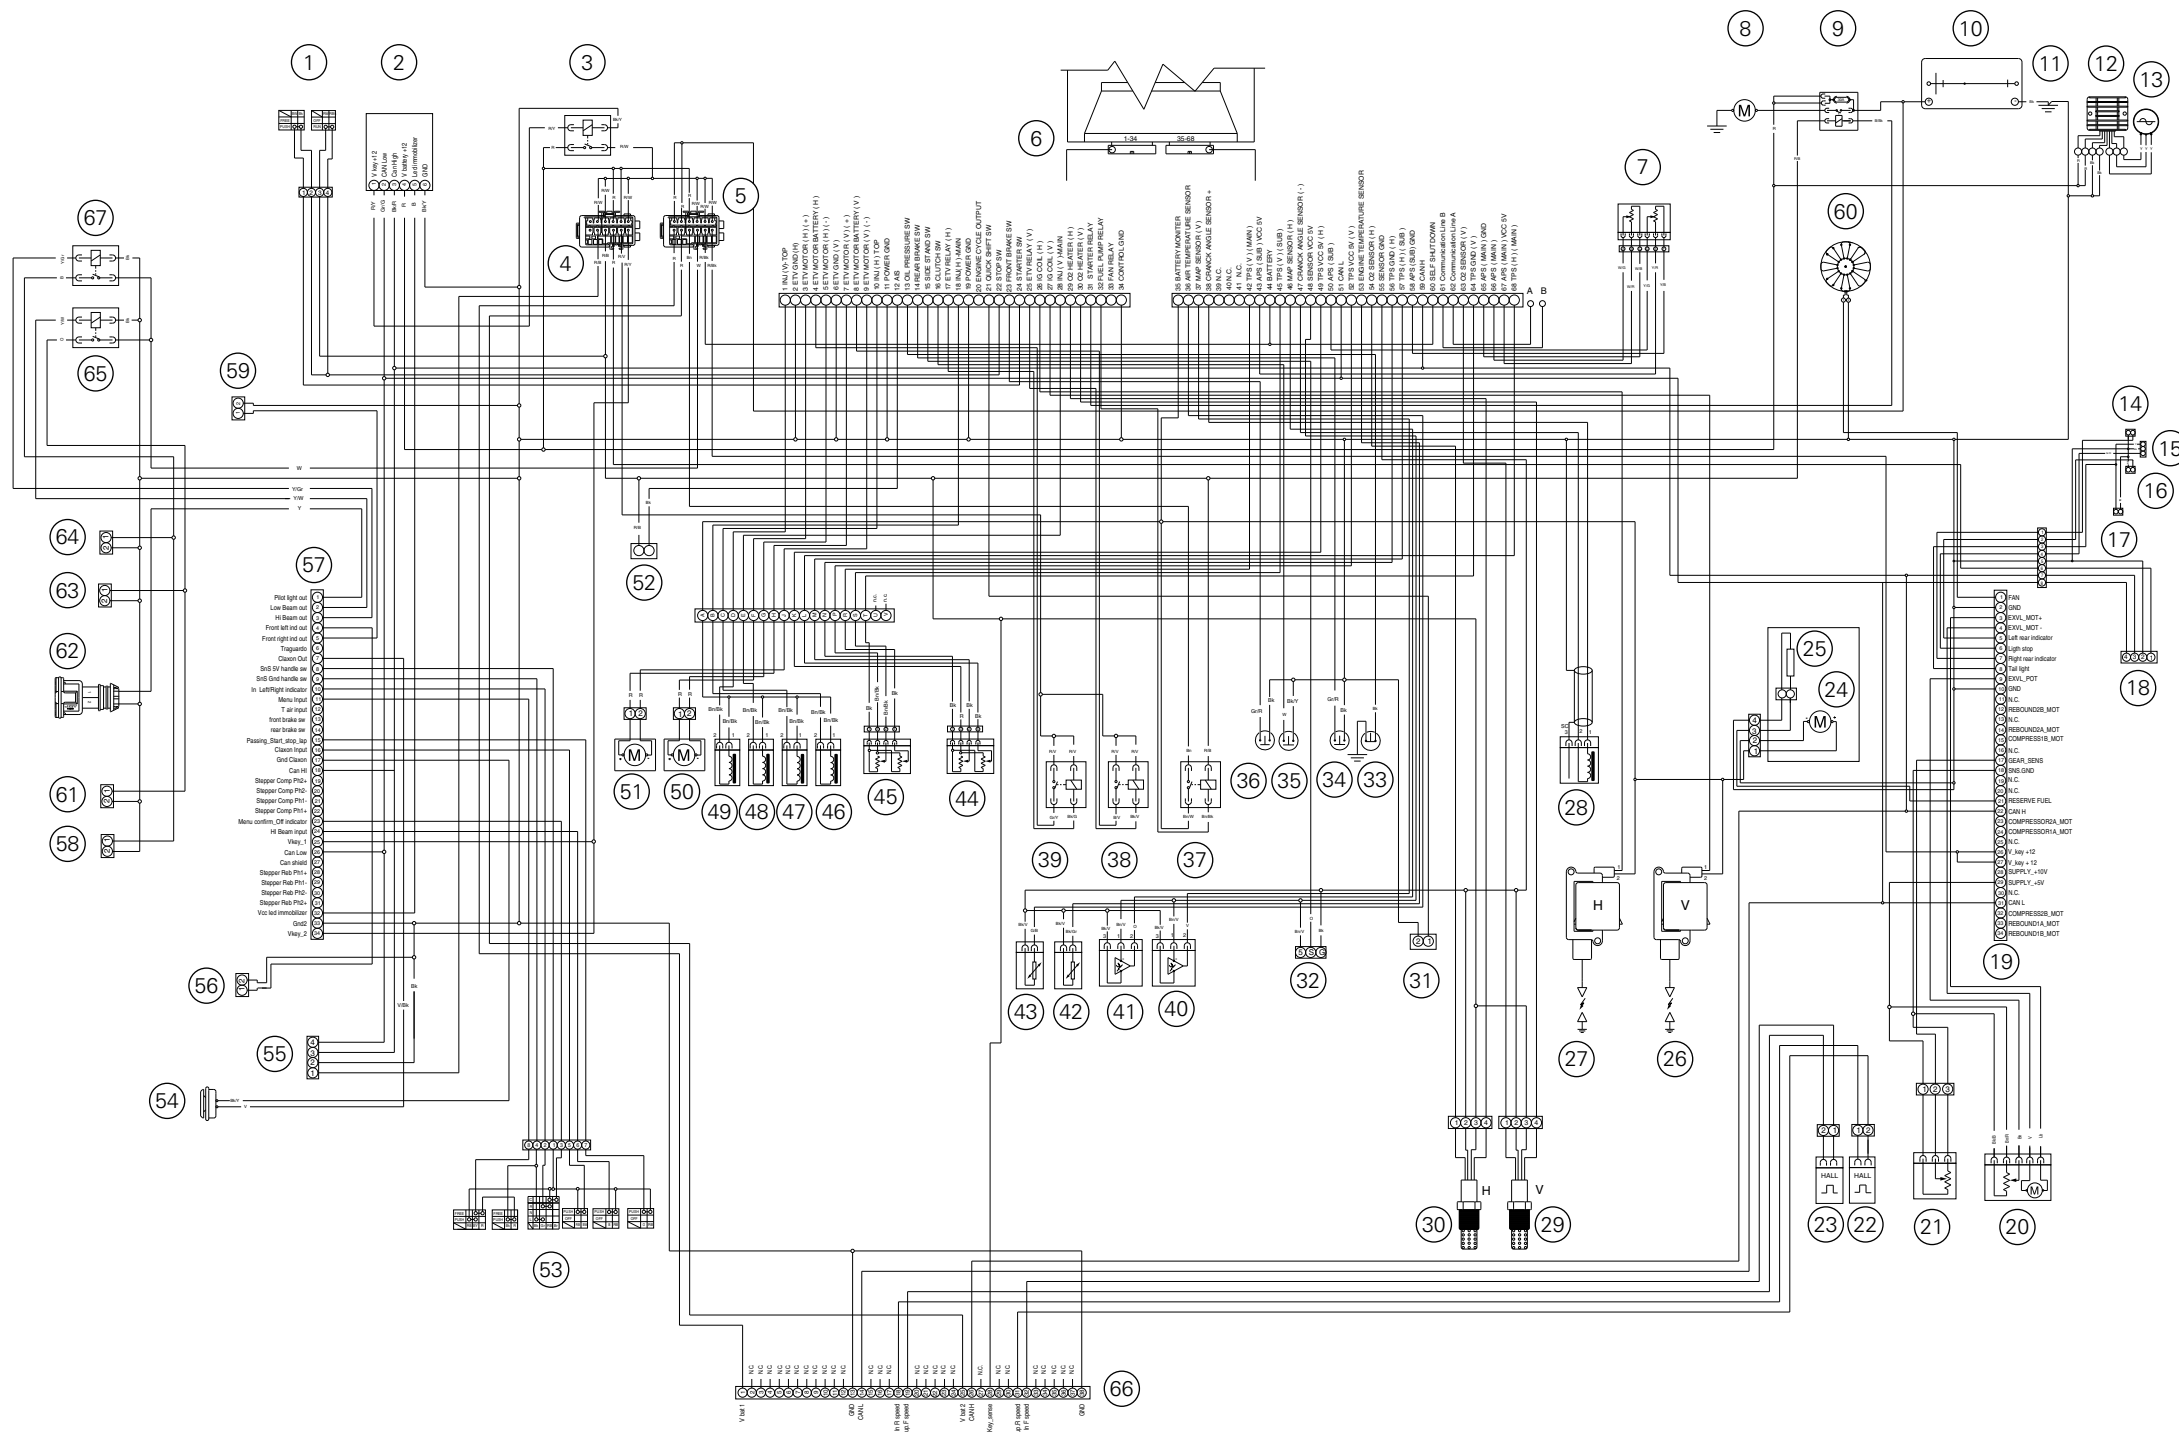

1199 Panigale ABS

cod. 913.7243.1H

Ducati Motor Holding spa
www.ducati.com

Via Cavalieri Ducati, 3
40132 Bologna, Italia
Tel. +39 051 6413111
Fax +39 051 406580

A Sole Shareholder Company
An Audi Group Company