
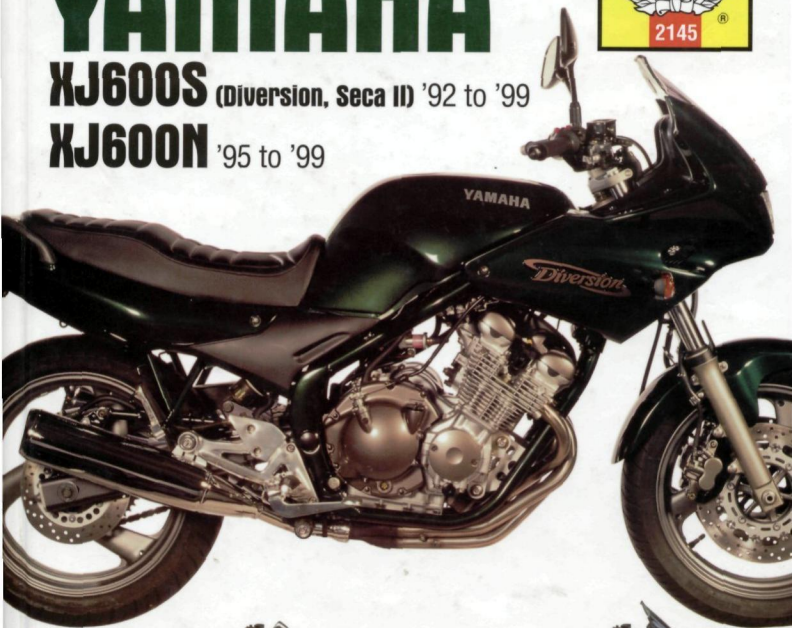


YAMAHA

XJ600S (Diverston, Seca II) '92 to '99


XJ600N '95 to '99

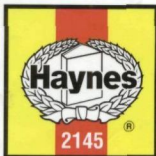

"Haynes Manuals just cannot be beaten"

Motor Cycle News

• Model history • Pre-ride checks • Wiring diagrams
• Tools and workshop tips
IN FULL COLOUR

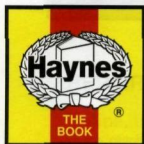

Yamaha XJ600S & XJ600N

Service and Repair Manual

by Alan Ahlstrand
and John H Haynes

Member of the Guild of Motoring Writers

Models covered

Yamaha XJ600S Diversion. 598cc. UK 1992 to 1999

Yamaha XJ600S Seca II. 598cc. US 1992 to 1999

Yamaha XJ600N. 598cc. UK 1995 to 1999

(2145-208-6Z2)

© Haynes Publishing 2001

A book in the Haynes Service and Repair Manual Series

All rights reserved. No part of this book may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage or retrieval system, without permission in writing from the copyright holder.

ISBN 1 85960 551 6

Library of Congress Catalog Card Number 98-75549

British Library Cataloguing in Publication Data

A catalogue record for this book is available from the British Library.

ABCDE
FGHIJ
KLMNO
PQR

Printed in the USA

Haynes Publishing
Sparkford, Nr Yeovil, Somerset BA22 7JJ, England

Haynes North America, Inc
861 Lawrence Drive, Newbury Park, California 91320, USA

Editions Haynes
Tour Aurore - IBC, 18 Place des Reflets
92975 Paris La Defense 2 Cedex, France

Haynes Publishing Nordiska AB
Box 1504, 751 45 UPPSALA, Sweden

Contents

LIVING WITH YOUR YAMAHA XJ

Introduction

Yamaha – Musical Instruments to Motorcycles	Page	0•4
Acknowledgements	Page	0•7
About this manual	Page	0•7
Safety first!	Page	0•8
Identification numbers	Page	0•9
Buying spare parts	Page	0•9

Daily (pre-ride) checks

Engine/transmission oil level check	Page	0•10
Brake fluid level checks	Page	0•11
Suspension, steering and final drive checks	Page	0•12
Legal and safety checks	Page	0•12
Tyre checks	Page	0•13

MAINTENANCE

Routine maintenance and servicing

Specifications	Page	1•1
Recommended lubricants and fluids	Page	1•2
Maintenance schedule	Page	1•3
Component locations	Page	1•4
Maintenance procedures	Page	1•6

Contents

REPAIRS AND OVERHAUL

Engine, transmission and associated systems

Engine, clutch and transmission	Page	2•1
Fuel and exhaust systems	Page	3•1
Ignition system	Page	4•1

Chassis components

Frame and suspension	Page	5•1
Final drive	Page	5•9
Brakes	Page	6•1
Wheels	Page	6•12
Tyres	Page	6•18
Fairing and bodywork	Page	7•1

Electrical system	Page	8•1
-------------------	------	-----

Wiring diagrams	Page	8•18
-----------------	------	------

REFERENCE

Dimensions and Weights	Page	REF•1
Conversion Factors	Page	REF•3
Tools and Workshop Tips	Page	REF•4
MOT Test Checks	Page	REF•22
Storage	Page	REF•27
Motorcycle Chemicals and Lubricants	Page	REF•30
Fault Finding	Page	REF•31
Fault Finding Equipment	Page	REF•40
Technical Terms Explained	Page	REF•44

Index	Page	REF•48
-------	------	--------

Yamaha

Musical instruments to Motorcycles

The Yamaha Motor Company

The Yamaha name can be traced back to 1889, when Torakusu Yamaha founded the Yamaha Organ Manufacturing Company. Such was the success of the company, that in 1897 it became Nippon Gakki Limited and manufactured a wide range of reed organs and pianos.

During World War II, Nippon Gakki's manufacturing base was utilised by the

Japanese authorities to produce propellers and fuel tanks for their aviation industry. The end of the war brought about a huge public demand for low cost transport and many firms decided to utilise their obsolete aircraft tooling for the production of motorcycles. Nippon Gakki's first motorcycle went on sale in February 1955 and was named the 125 YA-1 Red Dragonfly. This machine was a copy of the German DKW RT125 motorcycle, featuring a single cylinder two-stroke engine with a four-speed gearbox. Due to the

outstanding success of this model the motorcycle operation was separated from Nippon Gakki in July 1955 and the Yamaha Motor Company was formed.

The YA-1 also received acclaim by winning two of Japan's biggest road races, the Mt. Fuji Climbing race and the Asama Volcano race. The high level of public demand for the YA-1 led to the development of a whole series of two-stroke singles and twins.

Having made a large impact on their home market, Yamahas were exported to the USA in 1958 and to the UK in 1962. In the UK the signing of an Anglo-Japanese trade agreement during 1962 enabled the sale of Japanese lightweight motorcycles and scooters in Britain. At that time, competition between the many motorcycle producers in Japan had reduced numbers significantly and by the end of the sixties, only the big-four which are familiar with today remained.

Yamaha Europe was founded in 1968 and based in Holland. Although originally set up to market marine products, the Dutch base is now the official European Headquarters and distribution centre. Yamaha motorcycles are built at factories in Holland, Denmark, Norway, Italy, France, Spain and Portugal. Yamahas are imported into the UK by Yamaha Motor UK Ltd, formerly Mitsui Machinery Sales (UK) Ltd. Mitsui and Co. were originally a trading house, handling the shipping, distribution and marketing of Japanese products into western countries. Ultimately Mitsui Machinery Sales was formed to handle Yamaha motorcycles and outboard motors.

Based on the technology derived from its motorcycle operation, Yamaha have produced many other products, such as automobile and lightweight aircraft engines, marine engines and boats, generators, pumps, ATVs, snowmobiles, golf cars, industrial robots, lawnmowers, swimming pools and archery equipment.

Two-strokes first

Part of Yamaha's success was a whole string of innovations in the two-stroke world. Autolube engine lubrication, pressed steel monocoque frame, electric starting, torque induction, multi-ported engines, reed valves and power valves kept their two-strokes at the forefront of technology.

In the 1960s and 70s the two-stroke engined YA53 125, YDS1 to YDS7 250 and YR5 350 formed the core of Yamaha's range. By the mid-70s they had been superseded by the RD (Race-Developed) 125, 250, and 350 range of two-stroke twins, featuring improved 7 port engines with reed valve induction. Braking was improved by the use of an hydraulic brake on the front wheel of DX models, instead of the drum arrangement used previously, and cast alloy wheels were available as an option on later RD models. The RD350 was replaced by the RD400 in 1976.



The FS1-E - first bike of many sixteen year olds in the UK

Running parallel with the RD twins was a range of single-cylinder two-strokes. Used in a variety of chassis types, the engine was used in the popular 50 cc FS1-E moped, the V50 to 90 step-thrus, RS100 and 125, YB100 and the DT trail range.

The air-cooled single and twin cylinder RD models were eventually replaced by the LC series in 1980, featuring liquid-cooled engines, radical new styling, spiral pattern cast wheels and cantilever rear suspension (Yamaha's Monoshock). Of all the LC models, the RD350LC, or RD350R as it was later known, has made the most impact in the market. Later models had YPVS (Yamaha Power Valve System) engines, another first for Yamaha - this was essentially a valve located in the exhaust ports which was electronically operated to alter port timing to achieve maximum power output. The RD500LC was the largest two-stroke made by Yamaha and differed from the other LCs by the use of its vee-four cylinder engine.

With the exception of the RD350R, now manufactured in Brazil, the LC range has been discontinued. Two-stroke engined models have given way to environmental pressure, and thus with a few exceptions, such as the TZR125 and TZR250, are used only in scooters and small capacity bikes.

The Four-strokes

Yamaha concentrated solely on two-stroke models until 1970 when the XS1 was produced, their first four-stroke motorcycle. It was perhaps Yamaha's success with two-strokes that postponed an earlier move into the four-stroke motorcycle market, although their work with Toyota during the



The distinctive paintwork and trim of the RD models

1960s had given them a sound base in four-stroke technology.

The XS1 had a 650 cc twin-cylinder SOHC engine and was later to become known as the XS650, appearing also in the popular SE custom form. Yamaha introduced a three cylinder 750 cc engine in 1976, fitted in a sport-tourer frame and called the XS750, TX750 in the USA. The XS750 established

itself well in the sport tourer class and remained in production with very few changes until uprated to 850 cc in 1980.

Other four-strokes followed in 1976, with the introduction of the XS250/360/400 series twins. The XS range was strengthened in 1978 by the four-cylinder XS1100.

The 1980s saw a new family of four-strokes, the XJ550, 650, 750 and 900 Fours. Improvements over the XS range amounted to a slimmer DOHC engine unit due to the relocation of the alternator behind the cylinders, electronic ignition and uprated braking and suspension systems. Models were available mainly in standard trim, although custom-styled Maxims were produced especially for the US market. The XJ650T was the first model from Yamaha to have a turbo-charged engine. Although these early XJ models have now been discontinued, their roots live on in the XJ600S and XJ900S Division (Seca II) models.

The FZR prefix encompasses the pure sports Yamaha models. With the exception of the 16-valve FZR400 and FZR600 models, the FZ/FZR750 and FZR1000 used 20-valve engines, two exhaust valves and three inlet valves per cylinder. This concept was called Genesis and gave improved gas flow to the combustion chambers. Other features of the new engine were the use of down-draught carburetors and the engine's inclined angle in the frame, plus the change to liquid-cooling. Lightweight Deltabox design aluminium frames and uprated suspension improved the bikes's handling. The Genesis engine lives on in the YZF750 and 1000 models.

The vee-twin engine has been the mainstay of the XV Virago range. Since 1981 XV's have



The XS650 led the way for Yamaha's four-stroke range



Yamaha's XS750 was produced from 1976 to 1982 and then uprated to 850 cc

been produced in 535, 700, 750, 920, 1000 and 1100 engine sizes, all using the same basic air-cooled sohc vee-twin engine. Other uses of vee engines have been in the XZ550 of the early 1980s, the XVZ12 Venture and the mighty VMX-12 V-Max.

Anti-lock braking, engine management, catalytic converters and hub center steering are all features found on present-day models, ensuring that Yamaha remain at the forefront of technology.

The XJ600S and XJ600N

Yamaha's XJ range goes back to the XJ650 of 1980, introduced to replace the ageing XS series of four-strokes. The XJs have appeared in 550, 600, 750 and 900 cc form, with an XJ400 for the Japanese home market.

The Diversion is not a retro version of the old XJ or XS Yamahas, but an uncomplicated and affordable middleweight bike. Launched in 1992, the Diversion soon established itself as a firm favourite with riders wanting a good all-round motorcycle which was relatively cheap to insure and run. Its success was so great that it wasn't long before this approach was seen on other manufacturers' models,



A new family of four-strokes was released in 1990 with the introduction of the XJ range

like Suzuki's popular 600 Bandit. Yamaha carried the Diversion formula onto a 900 cc bike when the ageing XJ900F was replaced in 1994.

The Diversion, or Seca II, as it is named in the USA, uses a two valve DOHC air-cooled engine like the previous XJ models, but the engine is tilted 35° forwards in the frame to lower the centre of gravity. Angling the engine in this way allows the use of straight inlet tracts and downdraft Mikuni carburettors as seen on the Genesis-engined FZR bikes. One of the engine's most distinctive features is the crossover exhaust header pipes; the pipes from cylinders 2 and 3 connect to the right-hand silencer, whereas the pipe from cylinder no. 4 crosses over to join the no. 1 cylinder pipe in the left-hand silencer.

Without the added complexity of liquid cooling and a 16- or 20-valve head, the Diversion is a DIY mechanics dream; easy to service and with all components very accessible. Transmission is by a six speed gearbox with chain drive to the rear wheel. The three-spoke cast aluminium wheels, 17 inch front and 18 inch rear, carry tubeless tyres.

Suspension is by straightforward 38 mm telescopic forks at the front and a Monoshock linkage with preload adjustment at the rear linked to an oval section steel swingarm. Braking is all hydraulic, using a single twin piston sliding caliper at the front and an opposed caliper at the rear. The engine is rubber-mounted in a steel tube double cradle frame, painted the same colour as the fuel



The XJ600S Diversion model

tank and bodywork on many models. The US Seca II model has the benefit of a colour-matched belly pan or chin fairing.

In 1995 Yamaha responded to the need for a 'naked' style bike by producing the XJ600N – one of the most notable models being the yellow bodywork and yellow framed version. The only difference between this model and the Diversion was that it lacked a fairing and according was fitted with a chrome round headlamp and chrome instrument pods. However, the Diversion still remains the most popular of the two models, with most riders preferring its looks and the wind protection offered by its fairing.

Apart from colour and graphics there were very few changes until 1996 (UK) or 1997 (US) when the XJ600S received a new style fairing and windshield. Both models were fitted with new rear bodywork, identified by the small black fillet between the tank and side cover. Less obvious changes included a handlebar-mounted choke lever, rather than the operating knob on the carburettors, and European models received an oil cooler, electric fuel pump, throttle position switch and revised carburettor heater system. Later European models were fitted with twin front disc brakes and hazard warning lights.

Acknowledgements

Our thanks are due to Mitsui Machinery Sales (UK) Ltd for permission to reproduce certain illustrations used in this manual and for supplying some of the cover photographs. We would also like to thank NGK Spark Plugs (UK) Ltd for supplying the colour spark plug condition photos and the Avon Rubber Company for supplying information on tyre fitting.

Special thanks to Doreen DeMello for supplying the XJ600S used in these photographs; to Dave Jewell for organising and performing the teardown; and to both Dave and Denny Jewell for the technical expertise that comes from their years of experience as motorcycle mechanics and racers. Thanks are also due to Taylors Motorcycles of Misterton, Crewkerne, who supplied the later model XJ600S.

About this manual

The aim of this manual is to help you get the best value from your motorcycle. It can do so in several ways. It can help you decide what work must be done, even if you choose to have it done by a dealer; it provides information and procedures for routine maintenance and servicing; and it offers diagnostic and repair procedures to follow when trouble occurs.

We hope you use the manual to tackle the work yourself. For many simpler jobs, doing it yourself may be quicker than arranging an appointment to get the vehicle into a dealer and making the trips to leave it and pick it up. More importantly, a lot of money can be saved by avoiding the expense the dealer must pass on to you to cover its

labour and overhead costs. An added benefit is the sense of satisfaction and accomplishment that you feel after doing the job yourself.

References to the left or right side of the motorcycle assume you are sitting on the seat, facing forward.

We take great pride in the accuracy of information given in this manual, but motorcycle manufacturers make alterations and design changes during the production run of a particular motorcycle of which they do not inform us. No liability can be accepted by the authors or publishers for loss, damage or injury caused by any errors in, or omissions from, the information given.

Professional mechanics are trained in safe working procedures. However enthusiastic you may be about getting on with the job at hand, take the time to ensure that your safety is not put at risk. A moment's lack of attention can result in an accident, as can failure to observe simple precautions.

There will always be new ways of having accidents, and the following is not a comprehensive list of all dangers; it is intended rather to make you aware of the risks and to encourage a safe approach to all work you carry out on your bike.

Asbestos

● Certain friction, insulating, sealing and other products - such as brake pads, clutch linings, gaskets, etc. - contain asbestos. Extreme care must be taken to avoid inhalation of dust from such products since it is hazardous to health. If in doubt, assume that they do contain asbestos.

Fire

● Remember at all times that petrol is highly flammable. Never smoke or have any kind of naked flame around, when working on the vehicle. But the risk does not end there - a spark caused by an electrical short-circuit, by two metal surfaces contacting each other, by careless use of tools, or even by static electricity built up in your body under certain conditions, can ignite petrol vapour, which in a confined space is highly explosive. Never use petrol as a cleaning solvent. Use an approved safety solvent.

● Always disconnect the battery earth terminal before working on any part of the fuel or electrical system, and never risk spilling fuel on to a hot engine or exhaust.

● It is recommended that a fire extinguisher of a type suitable for fuel and electrical fires is kept handy in the garage or workplace at all times. Never try to extinguish a fuel or electrical fire with water.

Fumes

● Certain fumes are highly toxic and can quickly cause unconsciousness and even death if inhaled to any extent. Petrol vapour comes into this category, as do the vapours from certain solvents such as trichloroethylene. Any draining or pouring of such volatile fluids should be done in a well ventilated area.

● When using cleaning fluids and solvents, read the instructions carefully. Never use materials from unmarked containers - they may give off poisonous vapours.

● Never run the engine of a motor vehicle in an enclosed space such as a garage. Exhaust fumes contain carbon monoxide which is extremely poisonous; if you need to run the engine, always do so in the open air or at least have the rear of the vehicle outside the workplace.

The battery

● Never cause a spark, or allow a naked light near the vehicle's battery. It will normally be giving off a certain amount of hydrogen gas, which is highly explosive.

● Always disconnect the battery ground (earth) terminal before working on the fuel or electrical systems (except where noted).

● If possible, loosen the filler plugs or (if) when charging the battery from an external source. Do not charge at an excessive rate as the battery may burst.

● Take care when topping up, cleaning or carrying the battery. The acid electrolyte, even when diluted, is very corrosive and should not be allowed to contact the eyes or skin. Always wear rubber gloves and goggles or a face shield. If you ever need to prepolymerise yourself, always add the acid slowly to the water; never add the water to the acid.

Electricity

● When using an electric power inspection light etc., always ensure that the appliance is correctly connected to its supply and that, where necessary, it is properly grounded (earthed). Do not use electrical appliances in damp conditions and, beware of creating a spark or applying excessive heat in the vicinity of fuel or vapour. Also ensure that the appliances used are to national safety standards.

● A severe electric shock can result in touching certain parts of the electrical system such as the spark plug wires (HT leads), while the engine is running or being cranked, particularly if components are damp or insulation is defective. Where an electrical ignition system is used, the secondary voltage is much higher and could prove fatal.

Remember...

✗ **Don't** start the engine without first ascertaining that the transmission is in neutral.

✗ **Don't** suddenly remove the pressure cap from a hot cooling system - cover it with a cloth and release the pressure gradually first, or you may get scalded by escaping coolant.

✗ **Don't** attempt to drain oil until you are sure it has cooled sufficiently to avoid scalding you.

✗ **Don't** grasp any part of the engine or exhaust system without first ascertaining that it is cool enough not to burn you.

✗ **Don't** allow brake fluid or antifreeze to contact the machine's paintwork or plastic components.

✗ **Don't** siphon toxic liquids such as fuel, hydraulic fluid or antifreeze by mouth, or allow them to remain on your skin.

✗ **Don't** inhale dust - it may be injurious to health (see Asbestos heading).

✗ **Don't** allow any spilled oil or grease to remain on the floor - wipe it up right away, before someone slips on it.

✗ **Don't** use ill-fitting spanners or other tools which may slip and cause injury.

✗ **Don't** lift a heavy component which may be beyond your capability - get assistance.

✗ **Don't** rush to finish a job or take unverified short cuts.

✗ **Don't** allow children or animals in or around an unattended vehicle.

✗ **Don't** inflate a tyre above the recommended pressure. Apart from overstressing the carcass, in extreme cases the tyre may blow off forcibly.

✓ **Do** ensure that the machine is supported securely at all times. This is especially important when the machine is blocked up to aid wheel or fork removal.

✓ **Do** take care when attempting to loosen a stubborn nut or bolt. It is generally better to pull on a spanner, rather than push, so that if you slip, you fall away from the machine rather than onto it.

✓ **Do** wear eye protection when using power tools such as drill, sander, bench grinder etc.

✓ **Do** use a barrier cream on your hands prior to undertaking dirty jobs - it will protect your skin from infection as well as making the dirt easier to remove afterwards; but make sure your hands aren't left slippery. Note that long-term contact with used engine oil can be a health hazard.

✓ **Do** keep loose clothing (cuffs, ties etc. and long hair) well out of the way of moving mechanical parts.

✓ **Do** remove rings, wristwatch etc., before working on the vehicle - especially the electrical system.

✓ **Do** keep your work area tidy - it is too easy to fall over articles left lying around.

✓ **Do** exercise caution when compressing springs for removal or installation. Ensure that the tension is applied and released in a controlled manner, using suitable tools which preclude the possibility of the spring escaping violently.

✓ **Do** ensure that any lifting tackle used has a safe working load rating adequate for the job.

✓ **Do** get someone to check periodically that all is well, when working alone on a vehicle.

✓ **Do** carry out work in a logical sequence and check that everything is correctly assembled and tightened afterwards.

✓ **Do** remember that your vehicle's safety affects that of yourself and others. If in doubt on any point, get professional advice.

● If in spite of following these precautions you are unfortunate enough to injure yourself, seek medical attention as soon as possible.

Frame and engine numbers

The frame serial number is stamped into the steering head and printed on a label affixed to the right front portion of the frame. The engine number is stamped into the right upper side of the crankcase. Both of these numbers should be recorded and kept in a safe place so they can be furnished to law enforcement officials in the event of a theft.

The frame serial number, engine serial number and carburettor identification number should be kept in a handy place (such as with your driver's licence) so they are always available when purchasing or ordering parts for your machine.

Buying spare parts

Once you have found all the identification numbers, record them for reference when buying parts. Since the manufacturers change specifications, parts and vendors (companies that manufacture various components on the machine), providing the ID numbers is the only way to be reasonably sure that you are buying the correct parts.

Whenever possible, take the worn part to the dealer so direct comparison with the new component can be made. Along the trail from the manufacturer to the parts shelf, there are numerous places that the part can end up with the wrong number or be listed incorrectly.

The two places to purchase new parts for your motorcycle – the accessory shop and the franchised dealer – differ in the type of parts they carry. While dealers can obtain virtually every part for your motorcycle, the accessory shop is usually limited to normal high wear items such as shock absorbers, filters, various engine gaskets, cables, chains, brake pads, etc. Rarely will an accessory outlet have major suspension components, cylinders, transmission gears, or cases.

Used parts can be obtained for roughly half the price of new ones, but you can't always be sure of what you're getting. Once again, take your worn part to the breaker (wrecking yard) for direct comparison.

Whether buying new, used or rebuilt parts, the best course is to deal directly with someone who specialises in parts for your particular make.



The engine number is stamped into the right side of the crankcase



The frame number is printed on a label on the right side of the frame ...



... and stamped in the right side of the steering head

0•10 Daily (pre-ride) checks

Note: The daily (pre-ride) checks outlined in the owner's manual covers those items which should be inspected on a daily basis.

1 Engine/transmission oil level check

Before you start:

✓ Start the engine and allow it to reach normal operating temperature.

Caution: Do not run the engine in an enclosed space such as a garage or workshop.

✓ Stop the engine and allow the machine to sit undisturbed in a level position for about five minutes. Place the bike on the centrestand (if equipped) or prop it securely in an upright position.

Bike care:

● If you have to add oil frequently, you should check whether you have any oil leaks. If there is no sign of oil leakage from the joints and gaskets, the engine could be burning oil (see *Fault Finding*).

The correct oil

● Modern, high-revving engines place great demands on their oil. It is very important that the correct oil for your bike is used.

● Always top up with a good quality oil of the specified type and viscosity and do not overfill the engine.

Oil type	API grade SE, SF or SG
Oil viscosity - below 15°C (60°F)	SAE 10W30
Oil viscosity - above 5°C (40°F)	SAE 20W40



1 With the engine off, check the oil level in the window located at the lower part of the right crankcase cover. The oil level should be between the Maximum and Minimum level marks next to the window.



2 If the level is below the Minimum mark, remove the oil filler cap from the right side of the crankcase.



3 Add enough oil of the recommended grade and type to bring the level up to the Maximum mark. Do not overfill the crankcase.

2 Brake fluid level checks




Warning: Brake hydraulic fluid can harm your eyes and damage painted surfaces, so use extreme caution when handling and pouring it and cover surrounding surfaces with rag. Do not use fluid that has been standing open for some time, as it absorbs moisture from the air which can cause a dangerous loss of braking effectiveness.

Before you start:

- ✓ With the motorcycle on the centrestand or held upright, turn the handlebars until the top of the front master cylinder is as level as possible.
- ✓ Make sure that you have the correct DOT 4 hydraulic fluid (or as directed on reservoir cap). Do not mix different brands of brake fluid in the reservoir, as they may not be compatible.
- ✓ Before removing the front brake reservoir cover, place a rag over the front of the fuel tank to protect it from brake fluid spills (which will damage the paint) and remove all dust and dirt from the area around the cover.
- ✓ Remove the right side cover to access the rear brake fluid reservoir (see Chapter 7).

Bike care:

- The fluid in the front and rear brake master cylinder reservoirs will drop slightly as the brake pads wear down.
- If any fluid reservoir requires repeated topping-up this is an indication of a leak somewhere in the system, which should be investigated immediately.
- Check for signs of fluid leakage from the hydraulic hoses and components – if found, rectify immediately.
- Check the operation of both brakes before taking the machine on the road; if there is evidence of air in the system (spongy feel to lever or pedal), it must be bled (see Chapter 6).

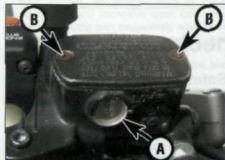

1 The front brake fluid level is checked via the inspection window in the master cylinder reservoir. Make sure that the fluid level is above the LOWER mark on the reservoir (A). If the level is too low remove the screws (B) . . .



2 . . . and lift off the cover and rubber diaphragm to allow topping up.




3 Top up with the recommended brake fluid.



4 Ensure that the diaphragm is folded correctly . . .



5 . . . then fit the cover and tighten its screws securely.

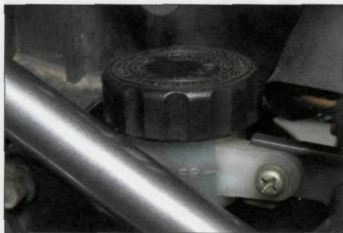

6 The rear brake fluid level can be checked by looking through the plastic reservoir. The fluid must be above the LOWER mark on the reservoir. Unscrew the cap to permit topping up.

3 Suspension, steering and final drive check

Suspension and steering:

- Check that the front and rear suspension operates smoothly without binding.
- Check that the rear suspension is adjusted as required.
- Check that the steering moves smoothly from lock-to-lock.

Final drive:

- Check that the drive chain slack isn't excessive, and adjust if necessary (see Chapter 1).
- If the chain looks dry, lubricate it (see Chapter 1).

4 Legal and safety checks

Lighting and signalling:

- Take a minute to check that the headlight, taillight, brake light, instrument lights and turn signals all work correctly.
- Check that the horn sounds when the switch is operated.
- A working speedometer, graduated in mph, is a statutory requirement in the UK.

Safety:

- Check that the throttle grip rotates smoothly and snaps shut, when released, in all steering positions.
- Check that the engine shuts off when the kill switch is operated.
- Check that the clutch lever operates smoothly and with the correct amount of freeplay.
- Check that the sidestand return spring holds the stand securely up when retracted. The same applies to the centrestand.

Fuel:

- This may seem obvious, but check that you have enough fuel to complete your journey. If you notice signs of fluid leakage rectify the cause immediately.
- Ensure you use the correct grade unleaded fuel – see Chapter 3 Specifications. Do not overfill the fuel tank – only fill up to the bottom edge of the filler tube.

5 Tyre checks

The correct pressures:

- The tyres must be checked when **cold**, not immediately after riding. Note that low tyre pressures may cause the tyre to slip on the rim or come off. High tyre pressures will cause abnormal tread wear and unsafe handling.
- Use an accurate pressure gauge.



- 1 Check the tyre pressures when the tyres are **cold** and keep them properly inflated.

- Proper air pressure will increase tyre life and provide maximum stability and ride comfort.

Tyre care:

- Check the tyres carefully for cuts, tears, cracks, bulges, embedded nails or other sharp objects and excessive wear. Operation of the motorcycle with excessively worn tyres is extremely hazardous, as traction and handling are directly affected.
- Check the condition of the tyre valve and ensure the dust cap is in place.
- Pick out any stones or nails which may have become embedded in the tyre tread. If left, they will eventually penetrate through the casing and cause a puncture.

- If tyre damage is apparent, or unexplained loss of pressure is experienced, seek the advice of a tyre fitting specialist without delay.

Tyre tread depth:

- At the time of writing UK law requires that tread depth must be at least 1 mm over 3/4 of the tread breadth all the way around the tyre, with no bald patches. Many riders, however, consider 2 mm tread depth minimum to be a safer limit.
- Many tyres now incorporate wear indicators in the tread. Identify the triangular pointer on the tyre sidewall to locate the indicator bar and replace the tyre if the tread has worn down to the bar.

Loading/speed	Front	Rear
Up to 90 kg (198 lbs)	29 psi (2.0 Bars)	33 psi (2.25 Bars)
Above 90 kg (198 lbs) or high speed riding	29 psi (2.0 Bars)	36 psi (2.50 Bars)



- 2 Measure tread depth at the centre of the tyre using a tread depth gauge.



- 3 Tyre tread wear indicator bar and its location marking (usually either an arrow, a triangle or the letters TWI) on the sidewall.

Chapter 1

Routine maintenance and servicing

Contents

Air filter element – servicing	3	Exhaust system – check	13
Battery – check	26	Fasteners – check	14
Brake fluid – change	21	Fork oil – replacement	28
Brake master cylinders and calipers – overhaul	22	Fuel system – check and filter replacement	15
Brake pads – check	7	Idle speed and throttle cable freeplay – check and adjustment	5
Brake system – checks and adjustment	8	Lubrication – general	10
Carburettor synchronisation – check and adjustment	6	Sidestand switch – operation check	17
Clutch – check	9	Spark plugs – replacement	4
Crankcase breather system – inspection	16	Steering head bearings – check and adjustment	19
Cylinder compression – check	27	Steering head bearings – lubrication	23
Drive chain and sprockets – check, adjustment and lubrication	1	Suspension – check	11
Engine/transmission oil – change	2	Swingarm bearings and rear suspension pivot points – lubrication	24
Engine oil/filter – change	18	Wheels and tyres – general check	12
Evaporative emission control system (California models only) – check	20	Valve clearances – check and adjustment	25

Degrees of difficulty

Easy, suitable for novice with little experience 	Fairly easy, suitable for beginner with some experience 	Fairly difficult, suitable for competent DIY mechanic 	Difficult, suitable for experienced DIY mechanic 	Very difficult, suitable for expert DIY or professional 
--	---	---	--	---

Specifications

Engine

Spark plugs	
Type	
US models	NGK CR7E or CR8E, ND U22ESR-N or U24ESR-N
UK models	NGK CR7E, CR8E or CR9E, ND U22ESR-N, U24ESR-N or U27ESR-N
Gap	0.7 to 0.8 mm (0.028 to 0.031 inch)
Valve clearances (COLD engine)	
Intake	0.11 to 0.15 mm (0.004 to 0.006 inch)
Exhaust	0.21 to 0.25 mm (0.008 to 0.010 inch) (Note 1)
Engine idle speed	
US models	1200 to 1400 rpm
UK models (1992-95)	1150 to 1250 rpm
UK models (1996-on)	1200 to 1300 rpm
Cylinder compression pressure (at sea level)	10.6 Bars (156 psi)
Carburettor synchronisation	
Engine vacuum at idle speed	
US models	220 to 230 mm Hg (8.06 to 9.66 inches Hg)
UK models (1992-95)	260 to 270 mm Hg (10.24 to 10.64 inches Hg)
UK models (1996-on)	230 mm Hg (9.66 inches Hg)
Maximum vacuum difference between cylinders	10 mm Hg (0.4 inch Hg)
Cylinder numbering (from left side to right side of bike)	1-2-3-4

1.2 Servicing specifications

Cycle parts

Disc brake pad thickness

Front

Standard – 1992-97 UK models, all US models	6.2 mm (1/4 inch)
Standard – 1998 UK models	5.5 mm (7/32 inch)
Minimum	0.8 mm (1/32 inch)

Rear

Standard	5.5 mm (7/32 inch)
Minimum	0.8 mm (1/32 inch)
Brake pedal position (below top of footpeg)	40 mm (1-19/32 inch)

Freeplay adjustments

Throttle grip	3 to 7 mm (1/8 to 9/32 inch)
---------------	------------------------------

Clutch lever

1992-95 UK models, 1992-96 US models (at lever stock)	2 to 3 mm (5/64 to 19/64 inch)
1996-on UK models, 1997-on US models (at lever end)	10 to 15 mm (0.4 to 0.6 inch)

Front brake lever

see text	
----------	--

Drive chain slack	30 to 40 mm (1-13/64 to 1-19/32 inch)
-------------------	---------------------------------------

Tyre pressures and tread depth	see <i>Daily (pre-ride) checks</i>
--------------------------------	------------------------------------

Torque settings

Oil drain plug	43 Nm (31 ft-lbs)
Oil filter	17 Nm (144 in-lbs)
Spark plugs	12.5 Nm (108 in-lbs)
Exhaust pipe flange nuts	15 Nm (132 in-lbs) (Note 2)
Steering head bearing ring nut	
Initial torque	52 Nm (37 ft-lbs) (Note 3)
Final torque	18 Nm (156 in-lbs) (Note 3)
Valve cover bolts	10 Nm (86 in-lbs)
Fork caps	23 Nm (17 ft-lbs)

Recommended lubricants and fluids

Engine/transmission

Type	API grade SE, SF or SG
Viscosity	
Up to 15°C (60°F)	SAE 10W-30
Above 5°C (40°F)	SAE 20W-40
Capacity – all US models, 1992-95 UK models	
With filter change	2.5 litres (2.6 US qts, 4.4 Imperial pts)
Oil change only	2.2 litres (2.3 US qts, 3.8 Imperial pts)
Capacity – 1996-on UK models	
With filter change	2.6 litres (2.7 US qts, 4.6 Imperial pts)
Oil change only	2.3 litres (2.4 US qts, 4.0 Imperial pts)

Brakes

Fluid type	DOT 4 (DOT 3 may be used if DOT 4 is unavailable)
------------	---

Front forks

Type	SAE 10W fork oil
Capacity	
1992-95 UK models, 1992-96 US models	379 cc (12.8 US fl oz, 13.3 Imperial fl oz)
1996-on UK models, 1997-on US models	375 cc (12.7 US fl oz, 13.2 Imperial fl oz)
Oil level (Note 4)	
1992-95 UK models, 1992-96 US models	111 mm (4.37 inches)
1996-on UK models, 1997-on US models	116 mm (4.57 inches)

Cycle parts

Drive chain	SAE 30 to 50W engine oil
Wheel and steering head bearings	Medium weight, lithium-based multi-purpose grease
Swingarm pivot bearings	Medium weight, lithium-based waterproof wheel bearing grease
Cables and lever pivots	Chain and cable lubricant or 10W30 motor oil
Sidestand/centrestand pivots	Medium-weight, lithium-based multi-purpose grease
Brake pedal/shift lever pivots	Chain and cable lubricant or 10W30 motor oil
Throttle grip	Multi-purpose grease or dry film lubricant

Notes

1. To minimise valve noise it may be possible to reduce the exhaust valve clearance to 0.18 mm (0.007 inch).
2. Lubricate the threads with anti-seize compound.
3. Using Yamaha ring nut wrench YU-33975 and a torque wrench placed at a right angle to the ring nut wrench.
4. Fork oil level is measured from the top of the fork tube, with the fork fully compressed and the spacer, spring seat and spring removed.

Note: The pre-ride inspection outlined in the owner's manual covers checks and maintenance that should be carried out on a daily basis. It's condensed and included here to remind you of its importance. Always perform the pre-ride inspection at every maintenance interval (in addition to the procedures listed). The intervals listed below are the shortest intervals recommended by the manufacturer for each particular operation during the model years covered in this manual. Your owner's manual may have different intervals for your model.

Daily (pre-ride) checks

- ☐ See Daily (pre-ride) checks at the beginning of this manual.

After the initial 600 miles (1000 km)

Note: This check is usually performed by a Yamaha dealer after the first 600 miles (1000 km) from new. Thereafter, maintenance is carried out according to the following intervals of the schedule.

Every 500 miles (800 km)

- ☐ Check/adjust and lubricate the drive chain (Section 1)

Every 4000 miles (6000 km) or 6 months

Note: Carry out all the items above plus the following:

- ☐ Change the engine/transmission oil (Section 2)
- ☐ Clean the air filter element and replace it if necessary (Section 3)
- ☐ Clean and gap the spark plugs (Section 4)
- ☐ Check/adjust the idle speed and throttle cable freeplay (Section 5)
- ☐ Check/adjust the carburettor synchronisation (Section 6)
- ☐ Check the brake discs and pads (Section 7)
- ☐ Lubricate brake pad edges and caliper cavities* (Section 7)
- ☐ Check/adjust the brake pedal and lever position and check the brake light (Section 8)
- ☐ Check the clutch cable freeplay (Section 9)
- ☐ Lubricate the clutch and brake lever pivots (Section 10)
- ☐ Lubricate the shift/brake lever pivots and the sidestand/centrestand pivots (Section 10)
- ☐ Lubricate the cables (Section 10)
- ☐ Check the front forks for proper operation and fluid leaks (Section 11)
- ☐ Inspect the rear shock absorber (Section 11)
- ☐ Check the wheels and tyres (Section 12)
- ☐ Check the exhaust system for leaks (Section 13)
- ☐ Check the tightness of the fasteners (Section 14)

Every 4000 miles (6000 km) or 6 months (continued)

- ☐ Check the cleanliness of the fuel system and the condition of the fuel lines and vacuum hoses (Section 15)
 - ☐ Inspect the crankcase breather system (Section 16)
 - ☐ Check the operation of the sidestand switch (Section 17)
- *Required in the UK and recommended wherever salt is used on the roads*

Every 8000 miles (12,000 km) or 12 months

Note: Carry out all the items under the previous mileage headings plus the following:

- ☐ Change the engine/transmission oil and oil filter (Section 18)
- ☐ Check and adjust the steering head bearings (Section 19)

Every 12,000 miles (18,000 km) or 18 months

Note: Carry out all the items under the 4000 mile (6000 km) heading plus the following:

- ☐ Inspect the evaporative emission control system (California models) (Section 20)

Every 16,000 miles (24,000 km) or two years


Note: Carry out all the items under the 8000 mile (12,000 km) heading plus the following:

- ☐ Change the brake fluid (Section 21)
- ☐ Overhaul the brake master cylinders and calipers (Section 22)
- ☐ Clean and repack the steering head bearings (Section 23)
- ☐ Lubricate the swingarm bearings and rear suspension pivot points (Section 24)
- ☐ Adjust the valve clearances (Section 25)

Non-scheduled maintenance

- ☐ Check the battery (Section 26)
- ☐ Check the cylinder compression (Section 27)
- ☐ Replace the fork oil (Section 28)

1•4 Component locations

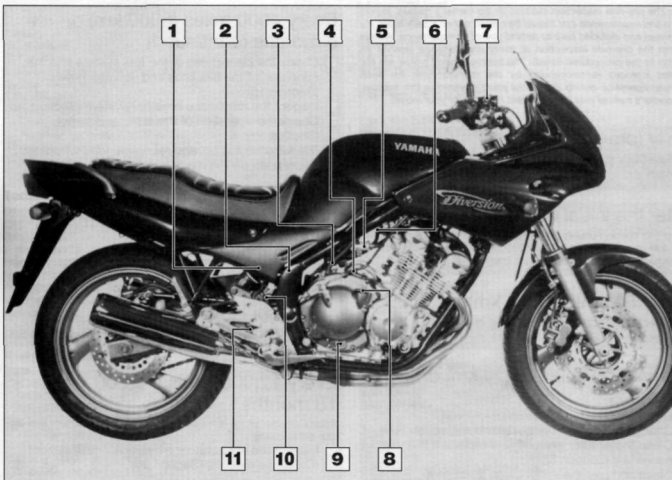


Component locations on the right side

- 1 Rear brake fluid reservoir
- 2 Emission control canister (California models)
- 3 Crankcase breather hose

- 4 Clutch cable lower adjuster
- 5 Fuel filter
- 6 Idle speed adjuster
- 7 Front brake fluid reservoir

- 8 Engine/transmission oil filler cap
- 9 Engine/transmission oil level window
- 10 Rear brake light switch
- 11 Rear brake pedal height adjuster

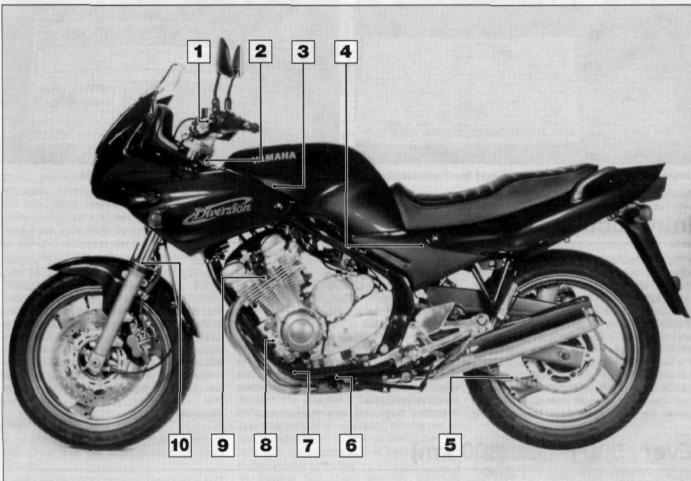


Component locations on the left side

- 1 Clutch cable upper adjuster
- 2 Steering head bearings
- 3 Air filter
- 4 Battery

- 5 Drive chain
- 6 Sidestand switch
- 7 Engine/transmission oil drain plug

- 8 Engine/transmission oil filter
- 9 Spark plugs
- 10 Fork seals

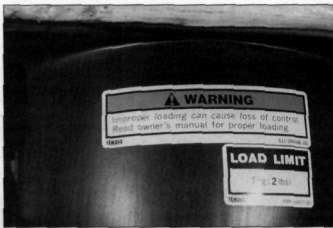

... and maximum load limit details

1 This Chapter is designed to help the home mechanic maintain his/her motorcycle for safety, economy, long life and peak performance.

2 Deciding where to start or plug into the routine maintenance schedule depends on several factors. If you have a motorcycle on which the warranty has recently expired, and if it has been maintained according to the warranty standards, you may want to pick-up *routine maintenance* as it coincides with the next mileage or calendar interval. If you have owned the machine for some time but have

never performed any maintenance on it, then you may want to start at the nearest interval and include some additional procedures to ensure that nothing important is overlooked. If you have just had a major engine overhaul, then you may want to start the maintenance routine from the beginning. If you have a used machine and have no knowledge of its history or maintenance record, you may desire to combine all the checks into one large service initially and then settle into the maintenance schedule prescribed.

3 Before beginning any maintenance or

repair, the machine should be cleaned thoroughly, especially around the oil filter, spark plugs, valve cover, side cover, carburetors, etc. Cleaning will help ensure that dirt does not contaminate the engine and will allow you to detect wear and damage that could otherwise easily go unnoticed.

4 Certain maintenance information sometimes printed on decals attached to the motorcycle. If the information on the decals differs from that included here, use the information on the decal (see illustrations).

1 Drive chain and sprockets – check, adjustment and lubrication




1 A neglected drive chain won't last long and can quickly damage the sprockets. Routine chain adjustment and lubrication *isn't difficult* and will ensure maximum chain and sprocket life.

2 To check the chain, place the bike on its centrestand (if equipped) or prop it securely in an upright position. Shift the transmission into Neutral. Make sure the ignition switch is Off.

3 Push up on the bottom run of the chain and measure the slack midway between the two sprockets (**see illustration**), then compare your measurements to the value listed in this Chapter's Specifications. As wear occurs, the chain will actually stretch, which means adjustment usually involves removing some slack from the chain. In some cases where

lubrication has been neglected, corrosion and galling may cause the links to bind and kink, which effectively shortens the chain's length. If the chain is tight between the sprockets, rusty or kinked, it's time to replace it with a new one. **Note:** Repeat the chain slack measurement along the length of the chain –

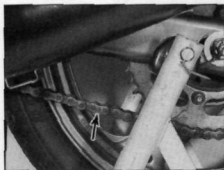


1.3 Push up on the lower run of the chain and measure how far it deflects – if it's not within the specified limits, adjust the slack in the chain

ideally, every inch or so. If you find a tight area, mark it with felt pen or paint and repeat the measurement after the bike has been ridden. If the chain is still tight in the same area, it may be damaged or worn. Because a tight or kinked chain can damage a transmission output shaft bearing, it's a good idea to replace it.


4 Remove the chain guard (see illustration)



1.4a The chain guard is secured by screws at the front and rear (arrowed)

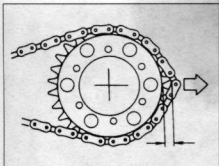

1.4b If the chain can be pulled more than half the length of a tooth away from the sprocket, it's worn and should be replaced

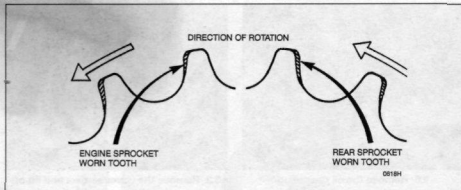

1.5 Check the sprockets in the areas indicated to see if they're worn excessively

Check the entire length of the chain for damaged rollers, loose links and pins. Pull the chain rearward, away from the centre of the rear sprocket (**see illustration**). If the chain pulls away by more than half the length of a sprocket tooth, it's worn and should be replaced. Rotate the wheel and repeat this check at several places on the chain, since it may wear unevenly. **Note:** Never install a new chain on old sprockets, and never use the old chain if you install new sprockets – replace the chain and sprockets as a set.

5 Remove the engine sprocket cover (**see Chapter 5**). Check the teeth on the engine sprocket and the rear sprocket for wear (**see illustration**).

Adjustment

6 Rotate the rear wheel until the chain is positioned with the least amount of slack present.

7 Remove the cotter pin from the axle nut and loosen the nut (**see illustration**).

8 Loosen and back-off the locknuts on the adjuster bolts.

9 Turn the axle adjusting bolts on both sides of the swingarm until the proper chain tension is obtained (get the adjuster on the chain side close, then set the adjuster on the opposite side). Be sure to turn the adjusting bolts evenly to keep the rear wheel in alignment. If the adjusting bolts reach the end of their travel, the chain is excessively worn and should be replaced with a new one (**see Chapter 6**).

10 When the chain has the correct amount of slack, make sure the marks on the adjusters correspond to the same relative marks on each side of the swingarm (**see illustration 1.7**). Tighten the axle nut to the torque listed in the Chapter 6 Specifications, then install a new cotter pin and bend it properly (**see illustration**). If necessary, turn the nut an additional amount to line up the cotter pin hole with the castellations in the nut – don't loosen the nut to do this.

11 Tighten the chain adjuster locknuts securely.

Lubrication


Note: If the chain is extremely dirty, it should be removed and cleaned before it's lubricated (**see Chapter 5**).

12 The best time to lubricate the chain is after the motorcycle has been ridden. When the chain is warm, the lubricant will penetrate the joints between the side plates, pins, bushings and rollers to provide lubrication of the internal load bearing areas. **Note:** Yamaha specifies SAE 30 to SAE 50 engine oil only; you can use aerosol chain lube, but make sure it is suitable for O-ring chains.


13 Apply the oil to the area where the side plates overlap – not the middle of the rollers. After applying the lubricant, let it soak in a few minutes before wiping off any excess.

HAYNES
HINT

Apply the oil to the top of the lower chain run, so centrifugal force will work the oil into the chain when the bike is moving.

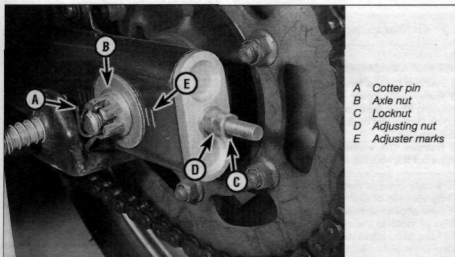

1.7 Remove the cotter pin and loosen the axle nut

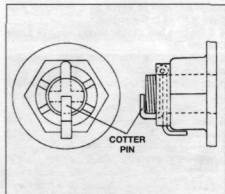

1.10 This is the correct way to bend the axle nut cotter pin – always use a new cotter pin whenever the old one is removed

1•8 Every 4000 miles (6000 km) or 6 months



2.5 Remove the oil drain plug



3.2 Remove the cover screws and lift off the cover . . .



3.3 . . . noting the position of the cover O-ring (A), then remove the filter element (B) from the air box

Every 4000 miles (6000 km) or 6 months

2 Engine/transmission oil – change

1 Consistent routine oil changes are the single most important maintenance procedure you can perform on a motorcycle. The oil not only lubricates the internal parts of the engine, transmission and clutch, but it also acts as a coolant, a cleaner, a sealant, and a protectant. Because of these demands, the oil takes a terrific amount of abuse and should be replaced often with new oil of the recommended grade and type. Saving a little money on the difference in cost between a good oil and a cheap oil won't pay off if the engine is damaged.

2 Before changing the oil, warm up the engine so the oil will drain easily.



Warning: Be careful when draining the oil, as the exhaust pipes, the engine, and the oil itself can cause severe burns.

3 Put the motorcycle on the centrestand (if equipped) or prop it securely upright. Place a clean drain pan beneath the crankcase drain plug. Remove the oil filler cap to vent the crankcase and to serve as a reminder that there is no oil in the engine.

4 If the bike has a lower fairing, remove it (see Chapter 7).

5 Next, remove the drain plug from the engine (see illustration) and allow the oil to drain into the pan. Discard the sealing washer on the drain plug; it should be replaced whenever the plug is removed.

6 Before refilling the engine, check the old oil carefully.

7 If the inspection of the oil turns up nothing unusual, refill the crankcase to the proper level with the recommended oil and install the filler cap (see *Daily (pre-ride) checks*). Start the engine and let it run for two or three minutes. Shut it off, wait a few minutes, then check the oil level. If necessary, add more oil to bring the level up to the Maximum mark. Check around the drain plug and filter housing for leaks.

8 The old oil drained from the engine cannot be reused in its present state and should be disposed of. Check with your local refuse disposal company, disposal facility or environmental agency to see whether they will accept the used oil for recycling. Don't pour used oil into drains or onto the ground. After the oil has cooled, it can be drained into a suitable container (capped plastic jugs, topped bottles, milk cartons, etc.) for transport to one of these disposal sites.

Note: It is antisocial and illegal to dump oil down the drain. In the UK, call this number free to find the location of your local oil recycling bank. In the USA, note that any oil supplier must accept used oil for recycling.

3 Air filter element – servicing

1 Remove the fuel tank (see Chapter 3).

2 Remove the cover screws and lift off the housing cover (see illustration). Inspect the cover O-ring and replace it if it's damaged or deteriorated.

3 Remove the element (see illustration). Wipe out the housing with a clean rag.

4 Tap the element on a hard surface to shake out dirt. If compressed air is available, use to clean the element by blowing from the outside in. If the element is extremely dirty or torn, replace it with a new one.

5 Reinstall the filter by reversing the removal procedure. Make sure the element is seated properly in the filter housing before installing the cover.

4 Spark plugs – replacement

1 This motorcycle is equipped with spark plugs that have a 16 mm wrench hex. Make sure your spark plug socket is the correct size before attempting to remove the plugs.

2 Rotate the spark plug caps back-and-forth to loosen them, then pull them off the plug and check them for brittleness and cracking. If available, use compressed air to blow an accumulated debris from around the spark plugs. Remove the plugs (see illustration).


3 Inspect the electrodes for wear. Both the centre and side electrodes should have square edges and the side electrode should be of uniform thickness. Look for excessive deposits and evidence of a cracked or chipped insulator around the centre electrode.




4.2 Use an extension and a deep socket to remove the spark plugs

HAYNES
HINT

If the oil is drained into a clean pan, small pieces of metal or other material can be easily detected. If the oil is very metallic coloured, then the engine is experiencing wear from break-in (new engine) or from insufficient lubrication. If there are flakes or chips of metal in the oil, then something is drastically wrong internally and the engine will have to be disassembled for inspection and repair. If there are pieces of fibre-like material in the oil, the clutch is wearing excessively and should be checked.

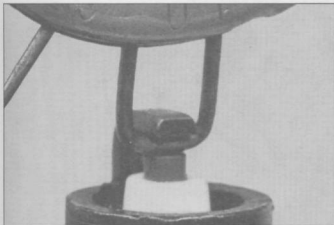

4.6a Spark plug manufacturers recommend using a wire type gauge when checking the gap

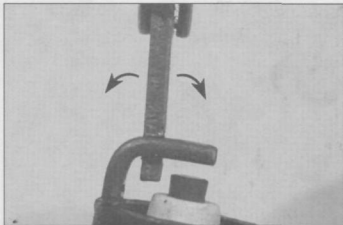

4.6b To change the gap, bend the side electrode only, as indicated by the arrows

Compare your spark plugs to the colour spark plug chart on the inside of the back cover. Check the threads, the washer and the ceramic insulator body for cracks and other damage.

4 If the electrodes are not excessively worn, and if the deposits can be easily removed with a wire brush, the plugs can be re-gapped and reused (if no cracks or chips are visible in the insulator). If in doubt concerning the condition of the plugs, replace them with new ones, as the expense is minimal.

5 Cleaning spark plugs by sandblasting is permitted, provided you clean the plugs with a high flash-point solvent afterwards.

6 Before installing new plugs, make sure they are the correct type and heat range. Check the gap between the electrodes, as they are not preset. For best results, use a wire-type gauge rather than a flat gauge to check the gap (see illustration). If the gap must be adjusted, bend the side electrode only and be very careful not to chip or crack the insulator nose (see illustration). Make sure the washer is in place before installing each plug.

7 Since the cylinder head is made of aluminum, which is soft and easily damaged, thread the plugs into the heads by hand.

HAYNES
HINT

Since the plugs are recessed, slip a short length of hose over the end of the plug to use as a tool to thread it into place. The hose will grip the plug well enough to turn it, but will start to slip if the plug begins to cross-thread in the hole – this will prevent damaged threads and the resultant repair costs.

8 Once the plugs are finger tight, the job can be finished with a socket. If a torque wrench is available, tighten the spark plugs to the torque listed in this Chapter's Specifications. If you do not have a torque wrench, tighten the plugs finger tight (until the washers bottom on the cylinder head) then use a wrench to

tighten them an additional 1/4 turn. Regardless of the method used, do not over-tighten them.

9 Reconnect the spark plug caps and reinstall all components removed for access.

5 Idle speed and throttle cable freeplay – check and adjustment

Idle speed

1 The idle speed should be checked and adjusted before and after the carburetors are synchronised and when it is obviously too high or too low. Before adjusting the idle speed, make sure the valve clearances and spark plug gaps are correct. Also, turn the handlebars back-and-forth and see if the idle speed changes as this is done. If it does, the throttle cable may not be adjusted correctly, or it may be worn out. This is a dangerous condition that can cause loss of control of the bike. Be sure to correct this problem before proceeding.

2 The engine should be at normal operating temperature, which is usually reached after 10 to 15 minutes of stop and go riding. Place the motorcycle on the centrestand (if equipped) or prop it securely upright and make sure the transmission is in Neutral. If necessary for access to the pilot air screw or idle speed screw (US models), remove the upper fairing.

3 If you're working on a UK model (or a US model with the pilot air screw covers removed) refer to Chapter 3 and adjust the pilot air screw to the setting listed in the Chapter 3 Specifications.

4 With the engine idling, turn the throttle stop screw (see illustration 6.9) until the idle speed listed in this Chapter's Specifications is obtained.

5 Snap the throttle open and shut a few times, then recheck the idle speed. If necessary, repeat the adjustment procedure.

6 If a smooth, steady idle can't be achieved,

the fuel/air mixture may be incorrect. Refer to Chapter 3 for additional carburettor information.

7 After making the adjustment adjust throttle cable freeplay.

Throttle check

8 Make sure the throttle grip rotates easily from fully closed to fully open with the front wheel turned at various angles. The grip should return automatically from fully open to fully closed when released. If the throttle sticks, check the throttle cables for cracks or kinks in the housings. Also, make sure the inner cables are clean and well-lubricated.

9 Check for a small amount of freeplay at the grip and compare the freeplay to the value listed in this Chapter's Specifications (see illustration). If adjustment is necessary, adjust the idle speed first (see above).

Throttle cable adjustment

10 Freeplay adjustments are made at the handlebar end of the accelerator cable using the mid-line adjuster, then at the carburettor end if necessary. The decelerator cable isn't adjustable.

11 Make sure the throttle grip is in the fully closed position.


12 Make sure the throttle linkage lever contacts the idle adjusting screw when the throttle grip is in the closed throttle position.



5.9 Throttle cable freeplay is measured at the grip flange



5.13 To adjust throttle freeplay, pull back the rubber boot from the mid-line adjuster, loosen the locknut, turn the adjuster (arrowed), then tighten the locknut

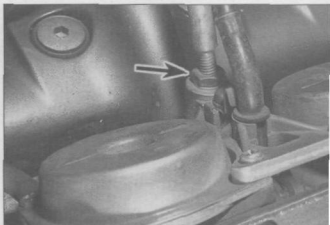

5.14 Loosen the locknut (arrowed) to adjust the carburettor end of the cable

13 At the throttle grip, loosen the locknut (see illustration). Turn the adjuster to achieve the correct freeplay, then tighten the locknut.

Warning: Turn the handlebars all the way through their travel with the engine idling. Idle speed should not change. If it does, the cables may be routed incorrectly. Correct this dangerous condition before riding the bike.

14 If correct freeplay can't be achieved at the handlebar adjuster, loosen the locknut at the carburettor end of the cable (see illustration). Reposition the cable as necessary, then tighten the locknuts.

system. Don't smoke or allow open flames or bare light bulbs near the work area, and don't work in a garage where a natural gas-type appliance (such as a water heater or clothes dryer) is present. Since gasoline is carcinogenic, wear latex gloves when there's a possibility of being exposed to fuel, and, if you spill any fuel on your skin, rinse it off immediately with soap and water. When you perform any kind of work on the fuel system, wear safety glasses and have a fire extinguisher suitable for a Class B type fire (flammable liquids) on hand.

1 Carburettor synchronisation is simply the process of adjusting the carburettors so they pass the same amount of fuel/air mixture to each cylinder. This is done by measuring the vacuum produced in each cylinder. Carburettors that are out of synchronisation will result in decreased fuel mileage, increased engine temperature, less than ideal throttle response and higher vibration levels.

2 To properly synchronise the carburettors,

you will need some sort of vacuum gauge set up, preferably with a gauge for each cylinder or a manometer, which is a calibrated tube arrangement to indicate engine vacuum. Because of the nature of the synchronisation procedure and the need for special instruments, most owners leave the task to a dealer service department or a reputable motorcycle repair shop.

3 Remove the seat and side covers (see Chapter 7).

4 Remove the fuel tank to provide access to the carburettors (see Chapter 3). Position the fuel tank on a bench alongside the motorcycle (at the same height as normal) and run long fuel and vacuum lines from the tank to the carburettors.

5 Start the engine and let it run until it reaches normal operating temperature, then shut it off.


6 Detach the screws from the vacuum ports on the intake manifolds and install vacuum fittings (see illustrations), then hook up the vacuum gauge set or the manometer according to the manufacturer's instructions.

6 Carburettor synchronisation - check and adjustment


Warning: Gasoline (petrol) is extremely flammable, so take extra precautions when you work on any part of the fuel system.



6.6a Remove the vacuum fitting screws (arrowed) . . .

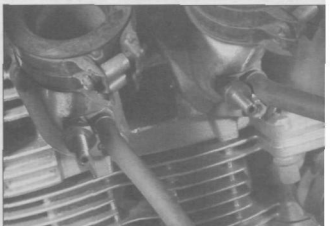

6.6b . . . and install vacuum fittings so a test gauge set-up can be installed (two of four carburettors shown)

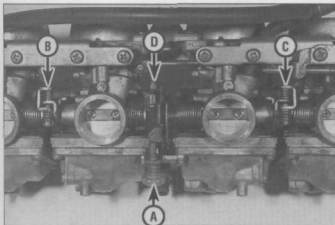

6.9 The throttle stop screw and synchronising screws are accessible from the rear of the carburettor assembly

A Throttle stop screw

B Synchronising screw for no. 1 and 2 carburettors

C Synchronising screw for no. 3 and 4 carburettors

D Centre synchronising screw

Make sure there are no leaks in the set-up, as false readings will result.

7 Start the engine and make sure the idle speed is correct. If it isn't, adjust it (see Section 5).

8 The vacuum readings for all of the cylinders should be the same, or at least within the tolerance listed in this Chapter's Specifications. If the vacuum readings vary, adjust as necessary.

9 To perform the adjustment, synchronise the carburettors for no. 1 and no. 2 cylinders by turning the synchronising screw, as needed, until the vacuum is identical or nearly identical for both cylinders (see illustration). Snap the throttle open and shut 2 or 3 times, then recheck the adjustment and readjust as necessary.

10 Next synchronise the carburettors for

no. 3 and no. 4 cylinders to each other by turning the synchronising screw for those two carburettors (see illustration 6.9).

11 Finally, turn the centre synchronising screw to synchronise the two pairs of carburettors to each other.

12 When the adjustment is complete, recheck the vacuum readings and idle speed, then stop the engine. Remove the vacuum gauge or manometer and attach the hoses or caps to the fittings on the carburettors.

7 Brakes pads – check

Note: In addition to the visual wear checks described in this Section, minimum brake pad


thicknesses are listed in this Chapter's Specifications.

1 The front and rear brake pads should be checked at the recommended intervals and replaced with new ones when worn beyond the limit described in this Section.


2 To check the front brake pads, reach up and operate the brake lever while you look at the wear indicator grooves in the pad friction material (see illustration).

3 If the grooves are nearly worn away, the pads are worn excessively and must be replaced with new ones (see Chapter 6).


4 The rear brake pad wear indicators may be grooves in the friction material or raised corners of the metal backing (see illustrations). Have an assistant press the brake pedal firmly while you look at the pads through the back of the caliper. If the pads are

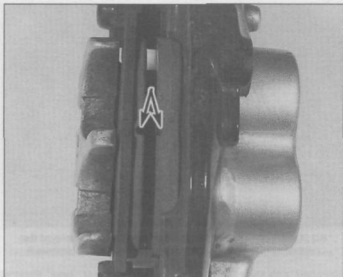


7.2 Front caliper - check to see if the pad grooves (arrowed) are nearly worn away; if they are, the pads are worn

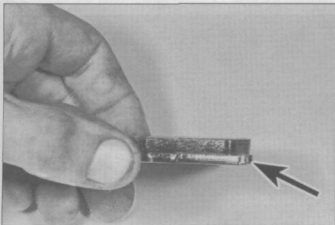


7.4a Rear caliper - if the pad backing metal is equipped with raised corners (arrowed) and the corners are close to the disc, the pads are worn

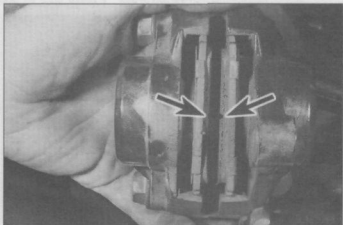

7.4b Rear caliper - if the pads have wear grooves (arrowed), check to see if they are nearly worn away

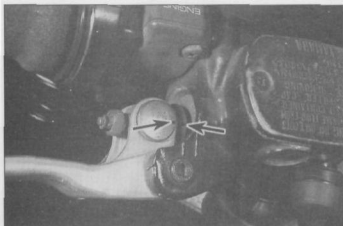

8.2 To adjust the front brake lever position, align one of the adjuster notches with the dot on the lever pivot (arrowed)

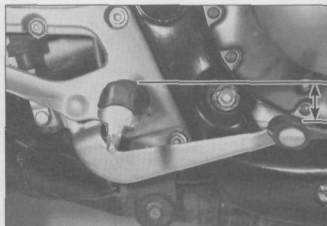

8.3a Measure brake pedal height from the top of the footpeg

equipped with raised corners and they're close to the disc, replace the pads (see Chapter 6). If the pads don't have raised corners, the caliper must be removed so the wear grooves can be inspected (see Chapter 6).

5 On UK models, remove the brake pads and lubricate the edges of the pad backing plates and the pad cavities in the calipers with special lubricants (see *Brake pads - replacement* in Chapter 6).

8 Brake system - checks and adjustment



Front brake lever

1 The front brake lever can be adjusted to vary its distance from the handlebar according to rider preference.

2 Push the lever forward. At the same time, turn the adjuster and align one of the notches on the adjuster with the mark on the top of the

lever (see illustration). There are two notches, directly opposite each other on the adjuster.

Rear brake pedal

3 Check pedal height (measured down from the top of the footpeg to the tip of the pedal) and compare it to the value listed in this Chapter's Specifications (see illustration). Adjust it if necessary by loosening the locknuts on the adjusting bolt, turning the adjusting bolt as needed and tightening the locknuts (see illustration).

4 If necessary, adjust the brake light switch (see Section 8).

General checks

5 A routine general check of the brakes will ensure that any problems are discovered and remedied before the rider's safety is jeopardised.

6 Check the brake lever and pedal for loose connections, excessive play, bends, and other damage. Replace any damaged parts with new ones (see Chapter 6).

7 Make sure all brake fasteners are tight.

Check the brake pads for wear (see Section 6) and make sure the fluid level in the reservoir is correct (see *Daily (pre-ride) checks*). Look for leaks at the hose connections and check for cracks in the hoses. If the lever or pedal is spongy, bleed the brakes as described in Chapter 6.

8 Make sure the brake light operates when the brake lever or pedal is depressed, before the rear brake takes effect.

9 If adjustment is necessary, hold the switch body and turn the adjusting nut on the switch body (see illustration) until the brake light is activated when required. If the switch does not operate the brake lights, check it as described in Chapter 8.

10 The front brake light switch is adjustable. If it fails to operate properly, replace it with a new one (see Chapter 8).

9 Clutch - check


1 Clutch cable freeplay is measured at



8.3b To adjust the brake pedal height, loosen the locknut (arrowed) and turn the adjusting bolt



8.9 Hold the switch body and turn the plastic nut (arrowed) adjust switch position

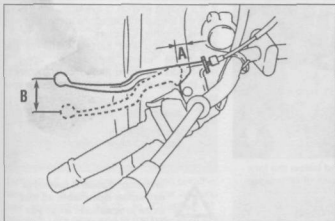

9.1 Clutch cable freeplay measurement point

- A 1992-95 UK models, 1992-96 US models
B 1996-on UK models, 1997-on US models

handlebar lever (see illustration). On 1992-95 UK models and 1992-96 US models, pull the clutch lever gently towards the handlebar until all freeplay is taken up and tension is felt in the cable, then measure the distance from the lever blade to the lever stock. If this is not within the specification, the clutch cable must be adjusted. On 1996-on UK models and 1997-on US models, hold a ruler against the ball end of the clutch lever, then pull the lever gently towards the handlebar until all freeplay is taken up and tension is felt in the cable, and measure the movement of the lever's ball end from its original position.

2 Starting at the lever end of the cable, loosen the locknut and turn the adjuster in or out as required (see illustration).

3 Don't back the adjuster out too far, if you can't adjust freeplay to specifications with the handlebar adjuster, loosen the two nuts on the cable lower adjuster and reposition the adjuster in its bracket. Re-lock the two nuts to secure the housing into its final position (see illustration).

4 Start the bike, release the clutch and ride

off, noting the position of the clutch lever when the clutch begins to engage. If it's too close to the handlebar with freeplay correctly adjusted, check the cable and clutch components for wear and damage (see Chapter 2).

10 Lubrication – general


1 Since the controls, cables and various other components of a motorcycle are exposed to the elements, they should be lubricated periodically to ensure safe and trouble-free operation.

2 The footpegs, clutch and brake levers, brake pedal, shift lever and side and centrestand (if equipped) pivots should be lubricated frequently. In order for the lubricant to be applied where it will do the most good, the component should be disassembled. However, if chain and cable lubricant is being used, it can be applied to the pivot joint gaps


and will usually work its way into the areas where friction occurs. If motor oil or light grease is being used, apply it sparingly as it may attract dirt (which could cause the controls to bind or wear at an accelerated rate). **Note:** One of the best lubricants for the control lever pivots is a dry-film lubricant (available from many sources by different names).

3 To lubricate the throttle cables, clutch cable and choke cable (if equipped), disconnect the cable at the lower end, then lubricate the cable with a pressure lube adapter (see illustration). See Chapter 3 for the throttle and choke cable removal procedure and Chapter 2 for the clutch cable removal procedure. **Note:** Yamaha recommends that the throttle grip be removed and lubricated whenever the throttle cables are lubricated. Refer to the handlebars section of Chapter 5.


4 The speedometer cable should be removed from its housing and lubricated with motor oil or cable lubricant.

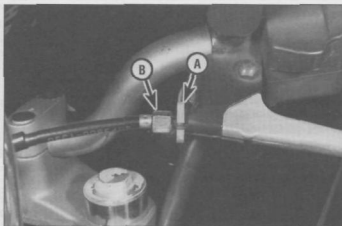

9.2 Pull back the rubber boot to access the upper adjuster; loosen the lock wheel (A) and turn the adjuster (B), then tighten the lock wheel

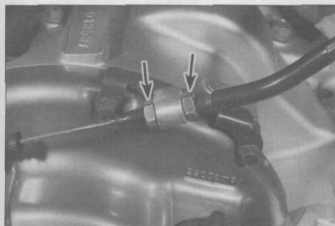

9.3 Clutch cable lower adjuster; loosen the nuts (arrowed) to reposition the cable in its bracket

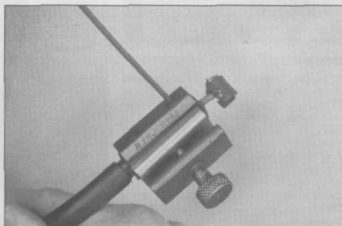

10.3 Lubricating a cable with a pressure lube adapter (make sure the tool seats around the inner cable)

11 Suspension – check

1 The suspension components must be maintained in top operating condition to ensure rider safety. Loose, worn or damaged suspension parts decrease the vehicle's stability and control.

Front suspension

2 While standing alongside the motorcycle, hold the front brake on and push on the handlebars to compress the forks several times. See if they move up-and-down smoothly without binding. If binding is felt, the forks should be disassembled and inspected as described in Chapter 5.

3 Carefully inspect the area around the fork seals for any signs of fork oil leakage (see illustration). If leakage is evident, the seals must be replaced as described in Chapter 5.

4 Check the tightness of all front suspension nuts and bolts to be sure none have worked loose.

Rear suspension

5 Inspect the rear shock for fluid leakage and tightness of the mounting fasteners. If leakage is found, the shock should be replaced.

6 Set the bike on its centrestand (if equipped) or support it securely upright with the rear wheel off the ground. Grab the swingarm on each side, just ahead of the axle. Rock the swingarm from side to side – there should be no discernible movement at the rear. If there's a little movement or a slight clicking can be heard, make sure the pivot shaft nuts are tight. If the pivot nuts are tight but movement is still noticeable, the swingarm will have to be removed and the bearings replaced as described in Chapter 5.

7 Inspect the tightness of the rear suspension nuts and bolts.

12 Wheels and tyres – general check

Wheels

1 The cast wheels used on these machines are virtually maintenance free, but they should be kept clean and checked periodically for cracks and other damage. Never attempt to repair damaged cast wheels; they must be replaced with new ones.

2 Check the valve stem locknuts to make sure they are tight. Also, make sure the valve stem cap is in place and tight. If it is missing, install a new one made of metal or hard plastic.

Tyres

3 Check tyre condition and tread depth thoroughly – see *Daily (pre-ride) checks*.



11.3 Check above and below the fork seals (arrowed) for signs of oil leakage

13 Exhaust system – check

1 Periodically check all of the exhaust system joints for leaks and loose fasteners. The lower fairing (if equipped) will have to be removed to do this properly (see Chapter 7). If tightening the clamp bolts fails to stop any leaks, replace the gaskets with new ones (a procedure which requires disassembly of the system).

2 The exhaust pipe flange nuts at the cylinder heads are especially prone to loosening, which could cause damage to the head. Check them frequently and keep them tight (see Chapter 3).

14 Fasteners – check

1 Since vibration of the machine tends to loosen fasteners, all nuts, bolts, screws, etc. should be periodically checked for proper tightness.

2 Pay particular attention to the following:

- Spark plugs
- Engine oil drain plug
- Oil filter
- Gearshift lever
- Footpegs, sidestand and centrestand (if equipped)
- Engine mount bolts
- Shock absorber mount bolts
- Front axle and clamp bolt
- Rear axle nut
- Swingarm pivot shaft nut



15.6a Fuel filter location (arrowed) – 1992-95 UK and all US models

3 If a torque wrench is available, use it with the torque specifications at the beginning of this, or other, Chapters.

4 Should you find certain fasteners do come loose periodically, apply a non-hardening liquid thread locking agent to the threads and reassemble to the proper torque.

15 Fuel system – check and filter replacement



Warning: Gasoline (petrol) is extremely flammable, so take extra precautions when you work on any part of the fuel system. Don't smoke or allow open flames or bare light bulbs near the work area, don't work in a garage where a natural gas-type appliance (such as a water heater or clothes dryer) is present. Since gasoline is carcinogenic, wear latex gloves when there's a possibility of being exposed to fuel, and, if you spill any fuel on your skin, rinse it off immediately with soap and water. When you perform a kind of work on the fuel system, wear safety glasses and have a fire extinguisher suitable for a Class B type fire (flammable liquids) on hand.

1 Check the fuel tank, the tank breather, the fuel tap, the lines and the carburettor for leaks and evidence of damage.


2 If carburettor gaskets are leaking, carburettors should be disassembled and rebuilt by referring to Chapter 3.

3 If the fuel tap is leaking, tighten the screws may help. If leakage persists, the tap should be disassembled and repaired or replaced with a new one (see Chapter 3).

4 If the fuel lines are cracked or otherwise deteriorated, replace them with new ones.

5 Check the vacuum hose connected to the fuel tap. If it is cracked or otherwise damaged, replace it with a new one.

6 The fuel filter should be replaced periodically. To do so, loosen the hose clamps and slide them down the hoses from the filter. Pry the hoses off each side of the filter and connect a new filter in its place (see illustrations).

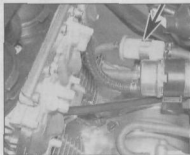

15.6b Fuel filter location (arrowed) – 1996-on UK models

7 Check that there is no sign of leakage from the fuel pump. Check that the fuel pump line connections are secure and on early models with a vacuum type fuel pump check the condition of the vacuum hose.

16 Crankcase breather system – inspection

1 Remove the fuel tank (see Chapter 3) and disconnect the large-bore crankcase breather hose from the rear of the air cleaner housing (see illustration 12.2c in Chapter 3). Disconnect the other end of the hose from the top of the crankcase on the right side (see illustration 5.8 in Chapter 2).

2 Blow through the hose to clear any emulsified oil or sludge present and check that the hose is not pinched at any point nor perished. If necessary renew the hose. Reconnect the hose and secure it with the spring clips.

3 Trace the drain hose from the base of the air cleaner housing on the left side (see illustration 12.2a in Chapter 3) and make sure the hose is clear. Some models have an in-line filter in the hose – ensure that this is not blocked.

17 Sidestand switch – operation check

1 The sidestand switch is a safety

component, designed to prevent the motorcycle being ridden with the sidestand in the down (extended) position. Conduct the following test to determine if the side stand and clutch switches are working correctly.

2 Make sure that the engine kill switch is in the RUN position and turn the Ignition (main) switch ON. Shift the transmission into a gear. Ensure that the sidestand is UP, then pull in the clutch lever and press the starter button – the engine should start. If it doesn't, the clutch switch should be checked as described in Chapter 8. With the engine idling and the clutch lever still held in, extend the sidestand – the engine should stop. If it doesn't the sidestand switch should be checked as described in Chapter 8.

Every 8000 miles (12,000 km) or 12 months

18 Engine/transmission oil and filter – change

1 Consistent routine oil and filter changes are the single most important maintenance procedure you can perform on a motorcycle. The oil not only lubricates the internal parts of the engine, transmission and clutch, but it also acts as a coolant, a cleaner, a sealant, and a protectant. Because of these demands, the oil takes a terrific amount of abuse and should be replaced often with new oil of the recommended grade and type. Saving a little money on the difference in cost between a good oil and a cheap oil won't pay off if the engine is damaged.

2 Before changing the oil and filter, warm up the engine so the oil will drain easily.



Warning: Be careful when draining the oil, as the exhaust pipes, the engine, and the oil itself can cause severe burns.

3 Put the motorcycle on the centrestand (if equipped) or prop it securely upright. Place a

clean drain pan beneath the crankcase drain plug and filter housing. Remove the oil filter cap to vent the crankcase and to serve as a reminder that there is no oil in the engine.

4 If the bike has a lower fairing, remove it (see Chapter 7).

5 Next, remove the drain plug from the engine (see illustration 2.5) and allow the oil to drain into the pan. Discard the sealing washer on the drain plug; it should be replaced whenever the plug is removed.

6 Make sure the oil drain pan is under the oil filter, then unscrew the filter element with a ratchet and filter wrench (see illustrations). If additional maintenance is planned for this time period, check or service another component while the oil is allowed to drain completely.

7 Apply a film of oil to the gasket on the new filter (see illustration). Thread the filter onto the adapter and tighten it to the torque listed in this Chapter's Specifications.

8 Slip a new sealing washer over the oil drain plug, then install and tighten it to the torque listed in this Chapter's Specifications. Avoid overtightening, as damage to the engine case will result.

9 Before refilling the engine, check the old oil carefully (see Section 2).

10 If the inspection of the oil turns up nothing unusual, refill the crankcase to the proper level with the recommended oil and install the filler cap. Start the engine and let it run for two or three minutes. Shut it off, wait a few minutes, then check the oil level. If necessary, add more oil to bring the level up to the Maximum mark. Check around the drain plug and filter housing for leaks.

11 The old oil drained from the engine cannot be reused in its present state and should be disposed of (see Section 2).

19 Steering head bearings – check and adjustment


1 This vehicle is equipped with caged-ball type steering head bearings which can become dented, rough or loose during normal use of the machine. In extreme cases, worn or loose steering head bearings can cause steering wobble that is potentially dangerous.



18.6a This tool is used to remove the oil filter . . .



18.6b . . . you'll need an extension, and possibly a universal joint adapter, to reach between the exhaust pipes

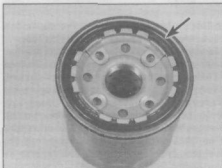

18.7 Apply a film of clean engine oil to the filter gasket (arrowed)

1•16 Every 8000 miles (12,000 km) or 12 months



19.4 Grasp the front wheel and try to pull it back and forth; if it moves, the steering head bearings are loose and in need of adjustment

Check

2 To check the bearings, place the motorcycle on the centrestand and block the machine so the front wheel is in the air.

3 Point the wheel straight ahead and slowly move the handlebars from side-to-side. Dents or roughness in the bearing races will be felt and the bars will not move smoothly.

4 Next, grasp the wheel and try to move it forward and backward (see illustration). Any looseness in the steering head bearings will be felt as front-to-rear movement of the fork legs. If play is felt in the bearings, adjust the steering head as follows:

Adjustment

5 Loosen the lower triple clamp bolts (see illustration). This allows the necessary vertical movement of the steering stem in relation to the fork tubes.

6 Remove the handlebars, steering stem nut (and washer – later models), upper triple clamp, ring nut lockwasher, upper ring nut



19.5 Loosen the lower triple clamp bolts on each fork

and rubber washer (see illustration 7.4a in Chapter 5, components 12, 11, 3, 4 and 5). Adjust freeplay as described in Step 7 or 8 below.

7 Carefully tighten the lower ring nut to eliminate any freeplay, but not so much that there is any loading on the bearings (see illustration). After adjustment make sure that the steering is still able to swing smoothly from lock-to-lock and all freeplay has been removed.

8 If the Yamaha service tool (pt no. YU-33975 or 90890-01403) is available this can be attached to the lower ring nut and a torque wrench applied to its square hole; the torque wrench handle must be at 90° to the service tool and the initial torque figure applied. The lower ring nut is then slackened one full turn and retightened to the final torque setting using the service tool. After adjustment make sure that the steering is still able to swing smoothly from lock-to-lock and all freeplay has been removed.

9 Turn the steering from lock to lock and



19.7 The ring nut can be tightened with spanner wrench (C-spanner)

check for binding. If there is any, remove bearings for inspection (see Chapter 5).

10 Install the rubber washer and upper nut, tightening the nut by hand so that its slots align with those of the lower ring nut. If it doesn't align, hold the lower ring nut with C-spanner and tighten the upper nut again until the slots align – be careful not to disturb the bearing freeplay setting. Fit lockwasher tangs into the nuts slots (see illustration 7.5a in Chapter 5), then fit upper triple clamp, steering head nut (and washer – later models) and handlebars (Chapter 5).

11 Recheck the steering head bearing freeplay again (see Step 4). The handlebars should move from a full turn to the opposite turn with just a tap on the end of the handlebar. If necessary, repeat adjustment procedure. Reinstall all previously removed. Tighten the steering stem nut, triple clamp bolts and handlebar bolts to the torques listed in the Chapter 5 Specifications.

Every 12,000 miles (18,000 km) or 18 months

20 Evaporative emission control system (California models only) – check




1 This system, installed on California models to conform to stringent emission control standards, routes fuel vapours from the fuel system into the engine to be burned, instead of letting them evaporate into the atmosphere. When the engine isn't running, vapours are stored in a carbon canister.

2 To begin the inspection of the system, remove the seat (see Chapter 7) and fuel tank (see Chapter 3). Inspect the hoses from the fuel tank and carburetors to the canister for cracking, kinks or other signs of deterioration (see illustration).

3 Label and disconnect the hoses, then remove the canisters from the machine.

4 Inspect the canister for cracks or other signs of damage. Tip the canister so the nozzle points down. If fuel runs out

of the canister, it is probably damaged internally, so it would be a good idea to replace it.

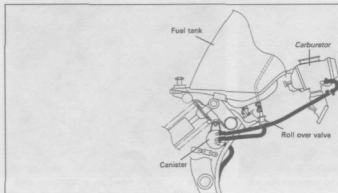


20.2 Evaporative emission control system details



24.1 Lubricate the swingarm through the grease fittings (arrowed)



25.5 Remove the bolts and detach the signal generator cover from the left side of the engine . . .

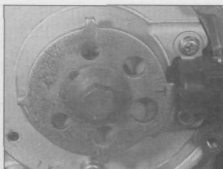

25.6 . . . and turn the crankshaft with a wrench on the turning bolt to align the T mark on the timing rotor with the protrusion on the pick-up coil

Every 16,000 miles (24,000 km) or two years

21 Brake fluid – change



1 Refer to the brake bleeding section in Chapter 6, noting that all old fluid must be pumped from the fluid reservoir and hydraulic line before filling with new fluid.



Old brake fluid is invariably much darker in colour than new fluid, making it easy to see when all old fluid has been expelled from the system.

22 Brake master cylinders and calipers – overhaul



1 Refer to Chapter 6 and dismantle the front and rear brake calipers and master cylinders. Inspect the components for wear and contamination and then rebuild each

assembly using new seals. Renew the dust and fluids seals which seal the piston in the caliper and the piston/seal assembly in the master cylinder.

23 Steering head bearings – lubrication



1 Periodic cleaning and repacking of the steering head bearings is recommended by the manufacturer. Refer to Chapter 5 for steering head bearing lubrication and replacement procedures.

24 Swingarm bearings and rear suspension pivot points – lubrication




1 Lubricate the swingarm bearings through the grease fittings, using a grease gun (**see illustration**). Note that some models may not be fitted with grease fittings, in which case the swingarm must be removed for greasing of the bearings (**see Chapter 5**).

25 Valve clearances – check and adjustment



Checking

- The engine must be completely cool for this maintenance procedure, so let the machine sit overnight before beginning.
- Disconnect the cable from the negative terminal of the battery.
- Remove the seat (**see Chapter 7**) and the fuel tank (**see Chapter 3**).
- Remove the valve cover (**see Chapter 2**).
- Remove the signal generator cover to provide access to the crankshaft rotation bolt (**see illustration**).
- Position the no. 1 piston (at the left side of the engine) at Top Dead Centre (TDC) on the compression stroke. Rotate the engine with a wrench placed on the timing rotor bolt or by pushing the bike with the transmission in high gear until the no. 1 and no. 4 cylinder TDC mark on the timing rotor aligns with the line on the pick-up coil (**see illustration**).
- Now, check the position of the no. 1 cylinder cam lobes – they should be pointing away from each other (**see illustration**). Piston no. 1 is now at TDC compression. If the cam lobes are pointing toward each other, no. 1 cylinder is at TDC exhaust, in which case turn the crankshaft one full turn.
- Start with the no. 1 intake valve clearance (the intake valve is on the carburettor side of the engine). Insert a feeler gauge of the thickness listed in this Chapter's Specifications between the cam lobe and valve adjusting shim (**see illustration**). Pull the feeler gauge out slowly – you should feel a slight drag. If there's no drag, the clearance is too loose. If there's a heavy drag, the clearance is too tight.
- If the clearance is incorrect, write down the actual measured clearance. You'll need this

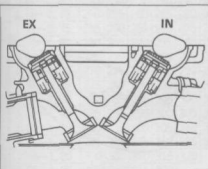

25.7 Make sure the cam lobes for no. 1 cylinder point away from each other as shown (the no. 4 cylinder cam lobes will point toward each other)




25.8 Slip a feeler gauge between the cam lobe and valve adjusting shim – it should pull out with a slight drag



25.11 When the signal generator rotor tab opposite the T mark is aligned with the pick-up coil protrusion, no. 2 and 3 cylinders are at TDC; the valves for the cylinder which is on its compression stroke can be adjusted



25.17 The valve lifter notch (arrowed) should be toward the centre of the engine

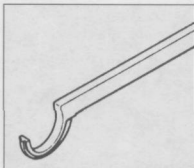

25.18 The Yamaha valve adjusting shim

information later to select a new valve adjusting shim.

10 Now measure the no. 1 exhaust valve clearance, following the same procedure you used for the intake valve. Be sure to use a feeler gauge of the specified thickness and write down the actual clearances of any valves that aren't within the Specifications.

11 Rotate the crankshaft exactly one-half turn to place piston no. 2 at TDC compression. The no. 2 and 3 cylinder TDC mark on the timing rotor should now be aligned with the line on the pick-up coil (see illustration). Also, the cam lobes for no. 2 cylinder should now point away from each other (see illustration 25.7).

12 Measure the clearances of both valves on cylinder no. 2 and write down any that aren't within the Specifications.

13 Rotate the crankshaft another half turn to place cylinder no. 4 at TDC (no. 1 and 4 cylinder TDC mark lined up with the pick-up coil; no. 4 cam lobes pointing away from each other). Measure its valve clearances.

14 Rotate the engine another half turn to place cylinder no. 3 at TDC and measure its valve clearances.

15 If any of the clearances need to be adjusted, go to Step 18 or Step 20.

16 If all the clearances were within the Specifications, go to Step 28.



25.19 Lift the shim out with a magnet

17 Check the positions of the valve lifter notches. They should be turned so the intake and exhaust notches are facing each other (see illustration).

Adjustment with the Yamaha valve adjusting tool

18 If you're using the Yamaha valve adjusting tool (US part no. YM-04125, UK part no. 90890-04125), install the tool on the valve lifter and press it down so there's a gap between the shim and cam lobe (see illustration). **Note:** Be sure the tool bears against the lifter only, not the adjusting shim.

19 Take the shim out with a magnet (see illustration). If necessary, slip a small screwdriver into the lifter notch, under the shim, and pry the shim up out of the lifter.


Adjustment with a universal valve adjusting tool

20 If you don't have access to the special Yamaha tool, you can use a universal valve adjusting tool (see illustration).

21 Push the wedge of the valve adjusting tool between the cam lobe and adjusting shim so it pushes the lifter down slightly. Slip the holder between the camshaft and lifter, then pull out the wedge.

22 Slip the wedge tool between the adjusting shim and the lifter. This will dislodge the adjusting shim.

23 Take the shim out with a magnet (see illustration 25.19).

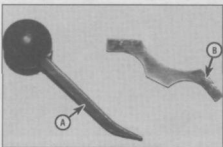

25.20 A universal adjusting tool (A - wedge, B - holder) can be used to change the shims

Shim selection

24 Determine the thickness of the shim removed. It should be marked on the bottom of the shim (see illustration), but the way is to measure it with a micrometer. Shim are available in increments of 0.05 mm (0.002 inch); ie a number 200 shim is 2.00 mm (0.130 inch) thick and a number 320 shim is 3.20 mm (0.126 inch) thick. **Note:** If the number on the shim does not end in 0 or 5, round it off to the nearest zero or 5. For example, if the number on the shim is 258, round it off to 260. If the number is 254, round it off to 255.

25 If the clearance (measured and written down earlier) was too large, you need a thicker shim. If the clearance was too small, you need a thinner shim. Calculate the thickness of the replacement shim by referring to the accompanying charts (see illustrations).

26 Install the new shim and recheck the clearance. If it's within the Specifications, the valve is properly adjusted. **Note:** Always install the shim with the number down at the valve lifter.

27 Adjust any remaining valves that were not within the Specifications. Perform adjustments in the same order as the cylinder firing order (1-2-4-3).

28 Install the valve cover.

29 Reconnect the negative cable to the battery.

30 Install all components removed for access.



25.24 There's a thickness mark on the underside of each valve shim (be sure to place the marked side of the shim down during installation)

25.25a Intake valve shim selection chart

Valve clearance (cold): 0.11 to 0.15 mm (0.004 to 0.006 inch)

Example: Installed pad is 250

Measured clearance is 0.23 mm (0.009 inch)

Replace 250 pad with 260 pad

Pad numbers (example)

250 is 2.50 mm (0.098 inch) thick

255 is 2.55 mm (0.100 inch) thick

25.25b Exhaust valve shim selection chart

Valve clearance (cold): 0.21 to 0.25 mm (0.008 to 0.010 inch)

Example: Installed pad is 250

Measured clearance is 0.32 mm (0.013 inch)

Replace 250 pad with 265 pad

Pad numbers (example)

250 is 2.50 mm (0.098 inch) thick

255 is 2.55 mm (0.100 inch) thick



26.2 Battery positive terminal (left arrow) and negative terminal (right arrow)



27.2 Check cylinder compression with a compression gauge and screw-in type adapter



28.5 Unscrew the fork cap bolt

26 Battery – check

Note: The battery fitted as original equipment is of the maintenance-free type and therefore does not require electrolyte level or specific gravity checks like a conventional battery. It is, however, advised that you periodically check that the battery leads are secure and free of corrosion.

- 1 Remove the seat (see Chapter 7).
- 2 Brush off any corrosion from the battery terminals and tighten them if their connecting bolts are loose. Smear petroleum jelly over the metal terminals (with the leads connected) to prevent future corrosion and fit the plastic cover over the positive terminal (see illustration).
- 3 If the motorcycle will be stored for an extended time, fully charge the battery and leave the negative cable disconnected after the battery is reinstalled.

if performed regularly, can give warning of trouble before any other symptoms become apparent.

2 Refer to the procedure under the *Fault Finding Equipment* heading in the Reference section of this manual (see illustration). The cylinder compression figure is given in the Specifications at the beginning of this Chapter.

28 Fork oil – replacement

Note: On 1992-94 models the forks are equipped with drain screws in the bottom outer face of each fork slider. On later models the drain screws are omitted, and the forks must be removed from the triple clamps to drain the oil.

- 1 Move the machine onto the centrestand (if equipped) or prop it securely upright.
- 2 On 1992-94 models place a drain pan under each fork. Remove the fork drain screw from the bottom of each fork (see illustration 6.2 in Chapter 5). Be prepared for the oil to shoot out forcefully and position the drain pan accordingly.
- 3 Carefully pump the front-end up and down to remove the remaining oil from the fork. Return the drain screws to their respective

holes, using new sealing washers if necessary. Tighten them securely.

- 4 For 1995-on models, slacken off the cap bolts at the top of the fork legs turns, then remove the forks from the clamps as described in Chapter 5.
- 5 On all models, remove the cap bolt at the top of the fork tube (see illustration). The spring will be under a moderate amount of pressure, so be careful!
- 6 Remove the spacer, spring seat and spring from the fork tube (see illustration in Chapter 5).
- 7 On 1995-on models, invert the fork and pour the oil out; pump the leg to extend as much oil as possible.
- 8 On all models pour in the specified amount of approved fork oil. Slowly pump the fork up and down several times to distribute the oil.
- 9 Fully compress the forks and use a measuring length of welding rod to measure the distance from the top of the fork tube to the oil. Compare this with the fork oil level specified at the beginning of this Chapter and add or remove oil until the level is correct; it is important that the level is the same in each fork tube.
- 10 Install the spring, spring seat, spacer and cap bolt. Tighten the cap to the torque specified in this Chapter's Specifications, noting that on 1995-on models this is easier once the forks have been installed in the triple clamps.
- 11 On 1995-on models install the fork triple clamps (see Chapter 5).

27 Cylinder compression – check

- 1 A compression test will provide useful information about an engine's condition, and

Chapter 2

Engine, clutch and transmission

Contents

Camshaft chain tensioner – removal and installation	8	Main and connecting rod bearings – general note	24
Camshafts and lifters – removal, inspection and installation	9	Major engine repair – general note	4
Clutch – removal, inspection and installation	18	Oil cooler – removal and installation (1996-on UK models)	32
Clutch cable – removal and installation	19	Oil pan and relief valves – removal, relief valve inspection and installation	16
Compression check	see Chapter 1	Oil pump – removal, inspection and installation	17
Connecting rods and bearings – removal, inspection and installation	26	Operations possible with the engine in the frame	2
Crankcase – disassembly and reassembly	22	Operations requiring engine removal	3
Crankcase components – inspection and servicing	23	Piston rings – installation	15
Crankshaft and main bearings – removal, inspection and installation	25	Pistons – removal, inspection and installation	14
Cylinder block – removal, inspection and installation	13	Recommended break-in procedure	34
Cylinder head – removal and installation	10	Shift cam and forks – removal, inspection and installation	30
Cylinder head and valves – disassembly, inspection and reassembly	12	Shift pedal and linkage – removal and installation	20
Engine – removal and installation	5	Spark plugs	see Chapter 1
Engine disassembly and reassembly – general information	6	Starter chain, camshaft chain and guides – removal, inspection and installation	27
Engine/transmission oil and filter change	see Chapter 1	Starter clutch assembly – removal, inspection and installation	31
Engine/transmission oil level check	see Daily (pre-ride) checks	Transmission shafts – disassembly, inspection and reassembly	29
External shift mechanism – removal, inspection and installation	21	Transmission shafts – removal and installation	28
General information	1	Valve adjustment	see Chapter 1
Initial start-up after overhaul	33	Valve cover – removal and installation	7
		Valves/valve seats/valve guides – servicing	11

Degrees of difficulty

Easy, suitable for novice with little experience



Fairly easy, suitable for beginner with some experience



Fairly difficult, suitable for competent DIY mechanic



Difficult, suitable for experienced DIY mechanic



Very difficult, suitable for expert DIY or professional



Specifications

General

Bore	58.5 mm (2.30 inches)
Stroke	55.7 mm (2.19 inches)
Displacement	598.8 cc
Compression ratio	10 to 1

Camshaft

Lobe height (intake)	
Standard	35.75 to 35.85 mm (1.404 to 1.411 inches)
Minimum	35.7 mm (1.4 inches)
Lobe height (exhaust)	
Standard	35.45 to 35.55 mm (1.396 to 1.400 inches)
Minimum	35.4 mm (1.4 inches)
Base circle (intake and exhaust)	
Standard	27.95 to 28.05 mm (1.100 to 1.104 inches)
Minimum	27.9 mm (1.1 inches)
Bearing oil clearance	0.020 to 0.054 mm (0.0008 to 0.0021 inch)
Journal diameter	24.967 to 24.980 mm (0.9830 to 0.9835 inch)
Bearing bore	25.000 to 25.021 mm (0.9843 to 0.9859 inch)
Camshaft runout limit	0.05 mm (0.002 inch)

Cylinder head, valves and valve springs

Cylinder head warpage limit	0.03 mm (0.0012 inch)
Valve stem bend limit	0.03 mm (0.0012 inch)
Valve head diameter	
Intake	29.9 to 30.1 mm (1.177 to 1.185 inches)
Exhaust	25.9 to 26.1 mm (1.020 to 1.028 inches)
Valve stem diameter	
Standard	
Intake	4.975 to 4.990 mm (0.1959 to 0.1965 inches)
Exhaust	4.960 to 4.975 mm (0.1953 to 0.1959 inches)
Minimum	
Intake	4.945 mm (0.195 inch)
Exhaust	4.920 mm (0.194 inch)
Valve stem clearance	
Standard	
Intake	0.010 to 0.037 mm (0.0004 to 0.0015 inch)
Exhaust	0.025 to 0.052 mm (0.0010 to 0.0020 inch)
Maximum	0.10 mm (0.004 inch)
Valve margin thickness (intake and exhaust)	1.0 mm (0.039 inch)
Valve guide inside diameter (intake and exhaust)	
Standard	5.000 to 5.012 mm (0.1969 to 0.1973 inch)
Maximum	
Intake	5.045 mm (0.199 inch)
Exhaust	5.020 mm (0.198 inch)
Valve seat width (intake and exhaust)	0.9 to 1.1 mm (0.035 to 0.043 inch)
Valve face width (intake and exhaust)	2.26 mm (0.089 inch)
Valve seat angles	45, 60, 75-degrees
Valve spring free length (intake and exhaust)	
Outer spring	38.52 mm (1.52 inches)
Inner spring	38.33 mm (1.51 inches)
Valve spring installed height (intake and exhaust)	
Outer spring	33.4 mm (1.31 inches)
Inner spring	32.5 mm (1.28 inches)
Valve spring bend limit	1.7 mm (0.067 inch)
Valve clearances	see Chapter 1

Crankshaft, connecting rods and bearings

Main bearing oil clearance	0.014 to 0.053 mm (0.0006 to 0.0021 inch)
Connecting rod side clearance	
Standard	0.160 to 0.262 mm (0.0063 to 0.0103 inch)
Maximum	0.5 mm (0.020 inch)
Connecting rod bearing oil clearance	
Standard	0.026 to 0.060 mm (0.0010 to 0.0024 inch)
Maximum	0.08 mm (0.003 inch)
Crankshaft runout limit	0.03 mm (0.0012 inch)

Cylinder block

Bore diameter	58.505 to 58.545 mm (2.3033 to 2.3049 inches)
Taper limit	0.05 mm (0.002 inches)
Out of round limit	0.01 mm (0.0004 inch)
Bore measuring points	Top, centre and bottom

Pistons

Piston diameter	58.47 to 58.51 mm (2.302 to 2.304 inches)
Diameter measuring point	4.0 mm (5/32 inch) from bottom of skirt
Piston-to-cylinder clearance	
Standard	0.025 to 0.045 mm (0.0010 to 0.0018 inch)
Maximum	0.15 mm (0.006 inch)
Ring side clearance	
Top ring	0.035 to 0.070 mm (0.0014 to 0.0028 inch)
Standard	0.15 mm (0.006 inch)
Maximum	
Second ring	
Standard	0.02 to 0.06 mm (0.0008 to 0.0024 inch)
Maximum	0.15 mm (0.006 inch)
Oil ring	Not specified
Ring thickness	
Top ring	1.0 mm (0.0394 inch)
Second ring	1.2 mm (0.047 inch)
Oil ring (spacer and rails)	2.8 mm (0.11 inch)
Ring end gap	
Top ring	
Standard (1998 UK models)	0.1 to 0.2 mm (0.004 to 0.008 inch)
Standard (all other models)	0.15 to 0.30 mm (0.006 to 0.012 inch)
Maximum	0.7 mm (0.028 inch)
Second ring	
Standard	0.15 to 0.35 mm (0.006 to 0.014 inch)
Maximum	0.7 mm (0.028 inch)
Oil ring	0.20 to 0.70 mm (0.008 to 0.028 inch)

Lubrication system

Oil pump	
Inner to outer rotor clearance	
Standard	0.09 to 0.15 mm (0.0035 to 0.0059 inch)
Maximum	0.2 mm (0.008 inch)
Outer rotor to housing clearance	
Standard	0.03 to 0.08 mm (0.0012 to 0.0031 inch)
Maximum	0.15 mm (0.006 inch)
Bypass valve setting pressure	0.78 to 1.17 Bars (11.4 to 17.1 psi)
Relief valve opening pressure	4.4 to 5.38 Bars (64 to 78.2 psi)
Oil pressure (hot)	0.78 Bars (11.4 psi) at 1200 rpm

Clutch

Friction plate thickness	
Standard	2.9 to 3.1 mm (0.114 to 0.122 inch)
Minimum	2.7 mm (0.106 inch)
Steel plate thickness	1.5 to 1.7 mm (0.060 to 0.067 inch)
Steel plate warpage limit	0.15 mm (0.006 inch)
Spring free length	
Standard	42.8 mm (1.69 inches)
Minimum	41.8 mm (1.65 inches)

Transmission

Driveshaft and mainshaft runout limit	0.08 mm (0.0031 inch)
Shift fork guide bar bend limit	0.08 mm (0.0031 inch)
Primary reduction ratio	23/24 x 65/28 (2.225)
Gear ratios (no. of teeth)	
1st gear	2.733 (41/15T)
2nd gear	1.778 (32/18T)
3rd gear	1.333 (28/21T)
4th gear	1.074 (29/27T)
5th gear	0.913 (21/23T)
6th gear	0.821 (22/28T)

Torque settings

Cam chain tensioner cap bolt	20 Nm (168 in-lbs)
Cam chain tensioner mounting bolts	10 Nm (86 in-lbs)
Camshaft bearing cap bolts	10 Nm (86 in-lbs) (1)
Camshaft sprocket bolts	24 Nm (17 ft-lbs)
Clutch boss nut	70 Nm (50 ft-lbs)
Clutch cover bolts	10 Nm (86 in-lbs)
Clutch pressure plate bolts	8 Nm (70 in-lbs)
Connecting rod cap nuts	25 Nm (18 ft-lbs) (2)
Crankcase bolts	24 Nm (17 ft-lbs) (3)
Crankcase plugs (M10)	12 Nm (105 in-lbs)
Cylinder block to crankcase nut	20 Nm (168 in-lbs)
Cylinder block to cylinder head nuts	10 Nm (86 in-lbs)
Cylinder head cap nuts	22 Nm (16 ft-lbs) (3)
Engine mount bolts	
Front	60 Nm (43 ft-lbs)
Rear	88 Nm (64 ft-lbs)
Oil filter adapter bolt	50 Nm (36 ft-lbs)
Oil pan mounting bolts	10 Nm (86 in-lbs)
Oil pick-up bolts	10 Nm (86 in-lbs)
Oil pump assembly screw	7 Nm (61 in-lbs)
Oil pump mounting screws	7 Nm (61 in-lbs)
Oil pump screws	7 Nm (61 in-lbs)
Primary drive gear nut	50 Nm (36 ft-lbs)
Shift cam retaining plate screws	7 Nm (61 in-lbs) (4)
Shift cam stopper screw	22 Nm (16 ft-lbs) (4)
Shift lever pinch bolt	10 Nm (86 in-lbs) (4)
Shift pedal linkage locknuts	10 Nm (86 in-lbs)
Starter chain guide bolts	8 Nm (70 in-lbs) (4)
Starter chain tensioner bolts	10 Nm (86 in-lbs) (4)
Starter clutch Allen bolts	25 Nm (18 ft-lbs)
Valve cover bolts	10 Nm (86 in-lbs)
Oil cooler adapter central bolt	50 Nm (36 ft-lbs)
Oil cooler banjo bolts (at radiator)	32 Nm (24 ft-lbs)
Oil cooler radiator mounting bolt nut	10 Nm (86 in-lbs)
Oil cooler pipes-to-adapter bolts	10 Nm (86 in-lbs)
Oil cooler clamp plate bolt	10 Nm (86 in-lbs)

- 1 Apply engine oil to the threads and tighten evenly in three stages.
- 2 Apply molybdenum disulphide grease to the threads and tighten in a continuous motion.
- 3 Apply engine oil to the threads and tighten in the specified sequence (see text).
- 4 Apply non-permanent thread locking agent to the threads.

spring, wet multi-plate type and is gear-driven off the crankshaft. The transmission is a six-speed, constant-mesh unit.

Valve cover, camshafts and lifters
Cam chain tensioner
Cylinder head
Cylinder block and pistons

1 General information

The engine/transmission is an air-cooled, in-line four cylinder unit. The valves (one intake and one exhaust per cylinder) are operated by double overhead camshafts which are chain driven off the crankshaft. The engine/transmission assembly is constructed from aluminium alloy. The crankcase is divided horizontally.

The crankcase incorporates a wet sump, pressure-fed lubrication system which uses a gear-driven, single-rotor oil pump, an oil filter, relief valves and an oil level switch. Also contained in the crankcase is the starter motor clutch.

Power from the crankshaft is routed to the transmission via the clutch, which is of the coil

2 Operations possible with the engine in the frame

The components and assemblies listed below can be removed without having to remove the engine from the frame. If, however, a number of areas require attention at the same time, removal of the engine is recommended.

Gear selector mechanism external components
Starter motor
Alternator
Clutch assembly
Oil pump

3 Operations requiring engine removal

It is necessary to remove engine/transmission assembly from the and separate the crankcase halves to access to the following components:

Oil pan and relief valves
Crankshaft, connecting rods and beam
Transmission shafts
Shift cam and forks
Camshaft chain and starter chain
Starter clutch and idle gears

4 Major engine repair – general note

1 It is not always easy to determine when or if an engine should be completely overhauled, as a number of factors must be considered.

2 High mileage is not necessarily an indication that an overhaul is needed, while low mileage, on the other hand, does not preclude the need for an overhaul. Frequency of servicing is probably the single most important consideration. An engine that has regular and frequent oil and filter changes, as well as other required maintenance, will most likely give many miles of reliable service. Conversely, a neglected engine, or one which has not been broken in properly, may require an overhaul very early in its life.

3 Exhaust smoke and excessive oil consumption are both indications that piston rings and/or valve guides are in need of attention. Make sure oil leaks are not responsible before deciding that the rings and guides are bad. Refer to Chapter 1 and perform a cylinder compression check to determine for certain the nature and extent of the work required.

4 If the engine is making obvious knocking or rumbling noises, the connecting rod and/or main bearings are probably at fault.

5 Loss of power, rough running, excessive valve train noise and high fuel consumption rates may also point to the need for an overhaul, especially if they are all present at the same time. If a complete tune-up does not remedy the situation, major mechanical work is the only solution.

6 An engine overhaul generally involves restoring the internal parts to the specifications of a new engine. During an overhaul the piston rings are replaced and the cylinder walls are bored and/or honed. If a rebore is done, then new pistons are also required. The main and connecting rod bearings are generally replaced with new ones and, if necessary, the crankshaft is also replaced. Generally the valves are serviced as well, since they are usually in less than perfect condition at this point. While the

engine is being overhauled, other components such as the carburetors and the starter motor can be rebuilt also. The end result should be a like-new engine that will give as many trouble-free miles as the original.

7 Before beginning the engine overhaul, read through all of the related procedures to familiarise yourself with the scope and requirements of the job. Overhauling an engine is not all that difficult, but it is time consuming. Plan on the motorcycle being tied up for a minimum of two weeks. Check on the availability of parts and make sure that any necessary special tools, equipment and supplies are obtained in advance.

8 Most work can be done with typical shop hand tools, although a number of precision measuring tools are required for inspecting parts to determine if they must be replaced. Often a dealer service department or motorcycle repair shop will handle the inspection of parts and offer advice concerning reconditioning and replacement. As a general rule, time is the primary cost of an overhaul so it doesn't pay to install worn or substandard parts.

9 Any machine shop type operations (valve job, resurfacing, cylinder boring, etc.) should be performed by a specialty shop familiar with motorcycle applications.

10 As a final note, to ensure maximum life and minimum trouble from a rebuilt engine, everything must be assembled with care in a spotlessly clean environment.

5 Engine – removal and installation

Note: Engine removal and installation should be done with the aid of an assistant to avoid damage or injury that could occur if the engine is dropped. A hydraulic floor jack should be used to support and lower the engine if possible (they can be rented at low cost).

Removal

- 1 Set the bike on its centrestand (if equipped) or support it securely upright.
- 2 Remove the upper fairing (and lower fairing, if equipped) (see Chapter 7).

- 3 Remove the fuel tank (see Chapter 3).
- 4 Drain the engine oil and remove the oil filter (see Chapter 1). On 1996-on UK models, disconnect the oil pipes from the cooler unit and remove the oil cooler radiator from the frame (see Section 32).
- 5 Disconnect both battery cables from the battery.



Warning: Always disconnect the negative cable first and reconnect it last to prevent a battery explosion. Remove the battery and battery case (see Chapter 8).

- 6 Remove the exhaust system (see Chapter 3).
- 7 Remove the air cleaner housing, fuel pump, carburetors and intake manifolds (see Chapter 3) and plug the intake openings with rags.
- 8 Remove the crankcase ventilation hose and unbolt the battery ground (earth) cable (see illustration).
- 9 Refer to Chapters 4 and 8 and disconnect the following electrical connectors:

- a) Alternator
- b) Pick-up coil
- c) Neutral switch
- d) Oil level switch
- e) Starter motor
- f) Sidestand switch


- 10 Remove the starter motor (see Chapter 8).
- 11 Remove the oil cooler and lines, if applicable (see Section 32).
- 12 If you're working on a California model, unbolt the evaporative emission canister and secure it with a piece of wire so it's out of the way.

- 13 Remove the clutch cable (see Section 19).
- 14 Remove the shift pedal (see Section 20).
- 15 Remove the engine sprocket cover and engine sprocket (see Chapter 5). It isn't necessary to remove the drive chain completely, but if the engine sprocket is difficult to remove, loosen the rear axle nut and chain adjusters, then push the rear wheel forward to create slack in the chain (see Chapter 1 for details).

- 16 Place a floor jack and a wood block beneath the oil pan and raise the jack just enough to support the oil pan (see illustration). Pad the frame with rags so it won't be scratched when the engine is removed (see illustration).



5.8 Remove the crankcase ventilation hose and disconnect the ground (earth) cable (arrowed)

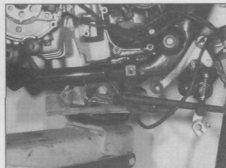


5.16a Support the engine with a jack and a block of wood ...



5.16b ... and pad the frame with a thick layer of rags so it won't be scratched as the engine is removed



5.17a With the engine supported by a jack, remove the engine mounting bolts at the upper front . . .

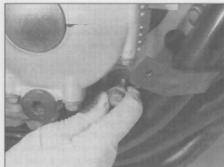

5.17b . . . lower front . . .



5.17c . . . and rear (arrowed)

17 Remove the engine front and rear mounting bolts (see illustrations).

18 Make sure no wires or hoses are still attached to the engine assembly.



Warning: The engine is heavy and may cause injury if it falls. Be sure it's securely supported. Have an assistant help you steady the engine as you remove it.



6.2a A selection of brushes is required for cleaning holes and passages in the engine components

19 Raise the engine so that the oil pan is level with the frame, then slide the engine out through the right side of the frame and set it on the floor.

Installation

20 Installation is the reverse of removal. Note the following points:

- Don't tighten any of the engine mounting bolts until they all have been installed.
- Use new gaskets at all exhaust pipe connections.
- Tighten the engine mount bolts to the torques listed in this Chapter's Specifications.
- Adjust the drive chain, clutch and throttle cables following the procedures in Chapter 1.
- Refill the engine with oil.


6 Engine disassembly and reassembly – general information

1 Before disassembling the engine, clean the exterior with a degreaser and rinse it with water. A clean engine will make the job easier


and prevent the possibility of getting dirt into the internal areas of the engine.

2 In addition to the precision measuring tools mentioned earlier, you will need a torque wrench, a valve spring compressor, a spring compressor adapter, oil gaskets, brushes, a piston ring removal and installation tool, a piston ring compressor and a cylinder holder tool (which is described in Section 2). Some new, clean engine oil of the correct grade and type, some engine assembly (or moly-based grease), a tube of Yanase bond or equivalent, and a tube of (silicone) sealant will also be required. Although it may not be considered a necessity, some Plastigauge (type HPG-1) should be obtained to use for checking bearing clearances (see illustrations).


3 An engine support stand made from short lengths of 2 x 4's bolted together will facilitate the disassembly and reassembly procedure (see illustration). The perimeter of the stand should be just big enough to accommodate the engine oil pan. If you have an automotive type engine stand, an adapter plate can be made from a piece of plate, some angle iron and a few nuts and bolts.

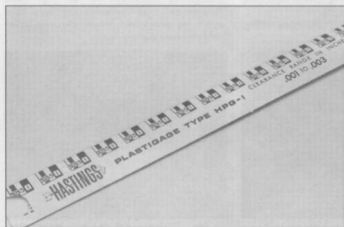

6.2b Type HPG-1 Plastigauge is needed to check the crankshaft, connecting rod and camshaft oil clearances

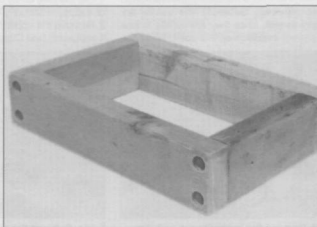

6.3 An engine stand can be made from short lengths of 2 x 4 wood and lag bolts or nails

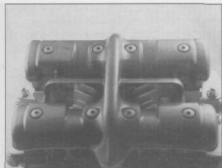

7.5 Remove the valve cover bolts



7.7 Replace the upper cam chain guide inside the valve cover if it's worn or damaged



7.9 Be sure the gasket seats securely in the groove

4 When disassembling the engine, keep 'mated' parts together (including gears, cylinders, pistons, valves, etc. that have been in contact with each other during engine operation). These 'mated' parts must be reused or replaced as an assembly.

5 Engine/transmission disassembly should be done in the following general order with reference to the appropriate Sections.

Remove the camshafts

Remove the cylinder head

Remove the cylinder block

Remove the pistons

Remove the clutch

Remove the oil pan

Remove the external shift mechanism

Remove the alternator and starter (see Chapter 8)

Separate the crankcase halves

Remove the crankshaft and connecting rods

Remove the transmission shafts/gears

Remove the shift cam/forks

Remove the starter clutch and idle gears

6 Reassembly is accomplished by reversing the general disassembly sequence.

7 Valve cover – removal and installation

Note: The valve cover can be removed with the engine in the frame. If the engine has been removed, ignore the steps which don't apply.

Removal

- 1 Set the bike on its centrestand (if equipped) or support it securely upright.
- 2 Remove the seat (see Chapter 7).
- 3 Remove the fuel tank, air cleaner housing and carburettors (see Chapter 3).
- 4 Disconnect the spark plug wires from the plugs (see Chapter 1).
- 5 Remove the valve cover bolts (see illustration). Loosen the bolts in a criss-cross pattern, 1/4 turn at a time, until all of the bolts are loose, then remove the bolts and their rubber seals. If access is difficult with the oil

cooler radiator in place on 1996-on UK models, remove it as described in Section 32.

6 Lift the cover off the cylinder head. If it's stuck, don't attempt to pry it off – tap around the sides with a plastic hammer to dislodge it.

Note: Pay attention to the locating dowels as you remove the cover – if they fall into the engine, major disassembly may be required to get them out.

Installation

7 Peel the rubber gasket from the cover. If it's cracked, hardened, has soft spots or shows signs of general deterioration, replace it with a new one. Inspect the upper cam chain guide inside the valve cover and replace it if it's worn or damaged (see illustration).


8 Clean the mating surfaces of the cylinder head and the valve cover with lacquer thinner, acetone or brake system cleaner.

9 Install the gasket to the cover. Make sure it fits completely into the cover groove (see illustration).

10 Position the cover on the cylinder head, making sure the gasket doesn't slip out of place.

11 Check the rubber seals on the valve cover bolts, replacing them if necessary. Install the bolts with their seals and washers, tightening them evenly to the torque listed in this Chapter's Specifications.

12 The remainder of installation is the reverse of removal.

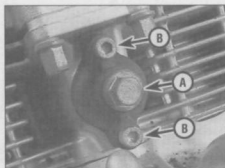

8.1 Loosen the tensioner cap bolt (A) and remove the tensioner mounting bolts (B)

8 Camshaft chain tensioner – removal and installation


Removal

- 1 Loosen the tensioner cap bolt while the tensioner is still installed (see illustration).
- 2 Remove the tensioner mounting bolts and take it off the engine.
- 3 Remove the cap, sealing washer and spring from the tensioner. Check the tensioner parts for wear and damage and replace them as necessary.

Installation

- 4 Check the sealing washer on the adjusting bolt for cracks or hardening. It's a good idea to replace this washer whenever the tensioner cap is removed.
- 5 Lift the tensioner latch, compress the tensioner piston into the body and release the latch to hold the piston in (see illustration).
- 6 Install the tensioner on the cylinder block, using a new gasket. The latch and the ratchet teeth on the tensioner must face down.

Caution: The tensioner will fit into the engine upside down, but the tensioner body will crack if the bolts are tightened in this position.

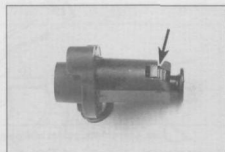


- 8.5 Lift the latch (arrowed), compress the tensioner piston and release the latch – the piston must be retracted like this to prevent damage when the tensioner is installed (also, the latch must face down when installing the tensioner)



9.6 The camshaft bearing end caps are numbered (left arrow), the inner caps have an arrow pointing to the clutch end of the engine (right arrow) and all caps are marked I or E for intake or exhaust ...



9.8a Lift the chain off the sprockets and remove the camshafts

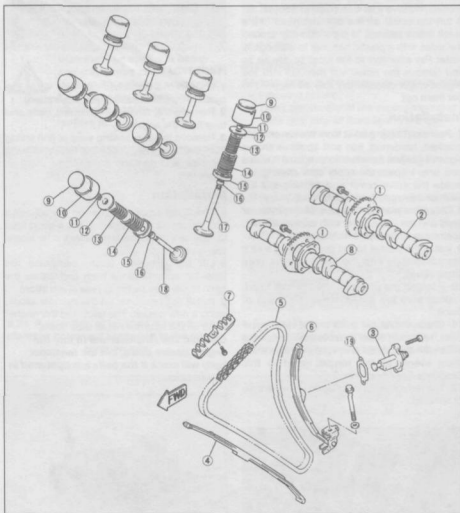

9.8b Camshafts, valves and cam chain tensioner – exploded view

- | | | |
|---------------------------|--------------------------|------------------------|
| 1 Cam sprocket | 8 Exhaust camshaft | 14 Outer valve spring |
| 2 Intake camshaft | 9 Valve adjusting shim | 15 Valve spring seat |
| 3 Cam chain tensioner | 10 Valve lifter | 16 Valve stem oil seal |
| 4 Intake side chain guide | 11 Valve keepers/collets | 17 Intake valve |
| 5 Cam chain | 12 Valve spring retainer | 18 Exhaust valve |
| 6 Intake side chain guide | 13 Inner valve spring | 19 Gasket |
| 7 Upper chain guide | | |

- 7 Tighten the mounting bolts to the torque listed in this Chapter's Specifications.
- 8 Install the tensioner spring, sealing wash and cap. Tighten the cap bolt to the torque listed in this Chapter's Specifications.

9 Camshafts and lifters – removal, inspection and installation

Note: This procedure can be performed with the engine in the frame.

Camshafts

Removal

- 1 Set the bike on its centrestand (if equipped) or support it securely upright.
- 2 Remove the valve cover (see Section 7).
- 3 Turn the engine to position no. 1 cylinder TDC (top dead centre) on the compression stroke (see Chapter 1, *Valve clearances check and adjustment*). To ease reassembly make alignment marks on the sprocket chain and camshafts with a felt pen. The no. 1 cam lobes will face each other when no. 1 cylinder is at TDC (see illustration 25.7 Chapter 1).
- 4 Remove the camshaft chain tensioner (see Section 8).
- 5 If you're planning to remove the sprockets from the camshafts, hold the camshafts from turning with an open-end wrench on the camshaft hex and loosen the sprocket bolts. The sprockets need not be removed unless the sprockets or camshafts are being replaced.
- 6 Loosen the camshaft bearing cap bolts on the intake and exhaust camshafts, a little at a time, working from the outside toward the centre, until all of the bolts are loose (see illustration).
- Caution:** If the bearing cap bolts aren't loosened evenly, the camshaft may bind. Note that each bearing cap is labelled with the letter I for intake or E for exhaust and the no. 1 and no. 4 bearing caps are numbered.

- 7 Remove the bolts and lift off the bearing caps. The dowel pins may come off with the caps or stay in the engine – don't lose them.
- 8 Slip the camshafts out of the chain, then remove them (see illustrations).
- 9 While the camshafts are out, don't allow the chain to go slack – the chain may fall and bind between the crankshaft and case, which could damage these components. Tie the chain up with a piece of wire to prevent it from dropping down into the crankcase. Always cover the top of the cylinder head with a rag to prevent foreign objects from falling into the engine.



9.10 Lift out the exhaust-side cam chain guide

10 Lift out the exhaust side chain guide (see illustration).


Inspection

Note: Before replacing camshafts or the cylinder head and bearing caps because of damage, check with local machine shops specialising in motorcycle engine work. In the case of the camshafts, it may be possible for cam lobes to be welded, reground and hardened, at a cost far lower than that of a new camshaft. If the bearing surfaces in the cylinder head are damaged, it may be possible for them to be bored out to accept bearing inserts. Due to the cost of a new cylinder head it is recommended that all options be explored before condemning it as trash!

11 Inspect the cam bearing surfaces of the head and the bearing caps. Look for score marks, deep scratches and evidence of spalling (a pitted appearance).

12 Check the camshaft bearing surfaces and lobes for heat discoloration (blue appearance), score marks, chipped areas, flat spots and spalling (see illustrations). Measure the height of each lobe with a micrometer (see illustration) and compare the results to the minimum lobe height listed in this Chapter's Specifications. If damage is noted or wear is excessive, the camshaft must be replaced.

13 Next, check the camshaft bearing oil clearances. Clean the camshafts, the bearing surfaces in the cylinder head and the bearing

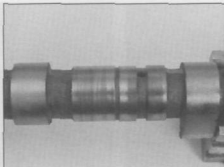

9.12a Check the journal surfaces of the camshaft for scratches or wear

caps with a clean, lint-free cloth, then lay the cams in place in the cylinder head.

14 Cut eight strips of Plastigauge (type HPG-1) and lay one piece on each bearing journal, parallel with the camshaft centreline.

15 Make sure the bearing cap pin dowels are installed. Install the bearing caps in their proper positions. The arrows on the caps must face toward the right side of the engine. The numbers on the cap must correspond with the cylinder number (1 through 4, counting from the left side of the engine). The caps labelled 1 must go on the intake side of the engine and the caps labelled E must go on the exhaust side. Tighten the bolts in three steps to the torque listed in this Chapter's Specifications.

Caution: Tighten the bearing caps evenly to specifications. While tightening, **DO NOT** let the camshafts rotate! Use an open end wrench on the hex to hold them steady.

16 Now unscrew the bolts evenly, a little at a time, and carefully lift off the bearing caps.

17 To determine the oil clearance, compare the crushed Plastigauge (at its widest point) on each journal to the scale printed on the Plastigauge container (see illustration). Compare the results to this Chapter's Specifications. If the oil clearance is greater than specified, measure the diameter of the cam bearing journal with a micrometer (see illustration). If the journal diameter is less



9.12b Check the lobes of the camshaft for wear – here's a good example of damage which will require replacement (or repair) of the camshaft




9.12c Measure the height of the camshaft lobes with a micrometer


than the specified limit, replace the camshaft with a new one and recheck the clearance. If the clearance is still too great, replace the cylinder head and bearing caps with new parts (see the Note that precedes Step 11).

18 Except in cases of oil starvation, the camshaft chain wears very little. If the chain has stretched excessively, which makes it difficult to maintain proper tension, replace it with a new one (see Section 27).


19 Check the sprockets for wear, cracks and other damage, replacing them if necessary. If the sprockets are worn, the chain is also worn, and also the sprocket on the crankshaft (which can only be remedied by replacing the crankshaft). If wear this severe is apparent,

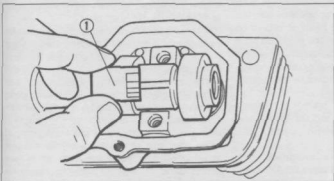


9.17a Compare the width of the crushed Plastigauge to the scale (1) on the Plastigauge container to obtain the clearance

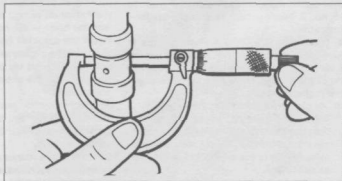

9.17b Measure the camshaft bearing journals with a micrometer

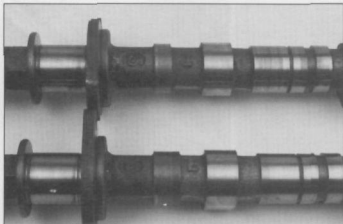

9.24a The camshafts are marked I for intake and E for exhaust

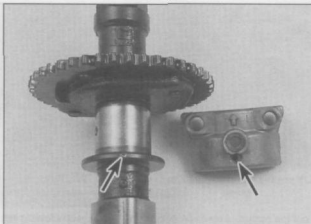

9.24b With the camshaft at TDC, the punch mark (left arrow) be visible through the hole in the bearing cap (right arrow) (camshaft and bearing cap removed for clarity)

the entire engine should be disassembled for inspection.

20 Check the upper chain guide (see Section 27) and exhaust side chain guide for wear or damage. If they're worn or damaged, the chain may be worn out or improperly adjusted. Replacement of the chain requires removal of the crankshaft (see Section 25).

Installation

21 Make sure the crankshaft is still at no. 1 TDC (refer to Chapter 1, *Valve clearances - check and adjustment*).

22 Install the camshaft sprockets if they were removed and tighten the bolts to the torque listed in this Chapter's Specifications.

23 Make sure the bearing surfaces in the cylinder head and the bearing caps are clean, then apply a light coat of engine assembly lube or moly-based grease to each of them.

24 Apply a coat of moly-based grease to the camshaft lobes. Make sure the camshaft bearing journals are clean, then lay the camshafts in the cylinder head. The camshaft with the I mark goes on the intake side (the same side as the carburetors) and the camshaft with the EX mark goes on the exhaust side (see illustration). Make sure the small punch mark on each camshaft (next to the no. 2 bearing cap) is straight up (see illustration).

Place with the small arrowhead cast in the top of each cap pointing toward the right (clutch) end of the engine. Make sure the caps are in their proper positions.

a) All caps are marked with the letter I (intake) or E (exhaust). Intake caps go on the intake side of the engine (closest to the carburetors). Exhaust caps go on the exhaust side of the engine (closest to the exhaust ports).

b) The no. 1 caps (at the left end of the engine) are marked with the number 1 next to the letter I or E.

c) The no. 2 and no. 3 caps are don't have number marks, but can be distinguished from each other by their shapes.

d) The no. 4 caps (at the right end of the engine) are marked with the number 4 next to the letter I or E.

26 Tighten the caps evenly, in three stages, to the torque listed in this Chapter's Specifications.

27 Recheck the camshaft alignment mark (small punch mark) on the exhaust camshaft. It should be aligned with the hole in the top of the no. 2 bearing cap (see illustration 9.24b). Once you've done this, engage the sprocket with the cam chain. The sprocket should rest against its mounting flange on the camshaft, but don't install the sprocket bolts yet.

28 Turn the exhaust sprocket clockwise (viewed from the left end of the engine) to eliminate all slack in the cam chain. While the punch mark on the intake camshaft is aligned with the hole in the no. 2 bearing cap, install the sprocket bolt in the exposed hole and tighten it slightly with a wrench. **Note:** If the sprocket bolt holes don't line up, reposition the sprocket in the cam chain.

29 Rotate the intake sprocket clockwise (viewed from the left side of the engine) to take up all the slack in the chain. Make sure the camshaft punch marks are still aligned with the holes in the no. 2 bearing caps, then install the sprocket bolt in the exposed hole and tighten it slightly with a wrench. If the bolt holes aren't lined up properly, disengage the sprocket from the chain and make the needed adjustment.

30 Recheck to make sure all timing marks - those on the signal generator, camshafts and no. 2 bearing caps - are aligned correctly.

Caution: If the marks are not aligned exactly as described, the valve timing will be incorrect and the valves may contact the pistons, causing extensive damage to the engine. Be sure to recheck the timing

mark on the signal generator to make it hasn't shifted.

31 Pour clean engine oil over the camshaft and along the camshafts. Use enough flows down onto the sprockets and the area.

32 Install the exhaust side cam chain and cam chain tensioner.

33 Turn the engine slowly counterclockwise with a wrench on the crankshaft turning you feel a sudden increase in resistance turning. The valves may be hitting the pistons to incorrect assembly. Find the problem and fix it before turning the engine any further or serious damage may occur. Once you check the alignment of the camshaft marks with the holes in the no. 2 bearing and the crankshaft timing marks.

34 Continue turning until the remaining camshaft sprocket bolt holes are exposed. Install the remaining two sprocket bolts, tighten all four bolts to the torque listed in Chapter's Specifications.

35 The remainder of installation is the removal.


Valve lifters

Removal


36 Remove the camshafts following procedure given above. Be sure to tension on the camshaft chain.

37 Make a holder with a separate section each lifter and its valve adjusting shim (a carton or box will work). Label the section according to cylinder number (1, 2, 3 or 4) whether the lifter belongs with an intake or exhaust valve. The lifters form a wear pair with their bores and must be returned to original locations if reused.

38 Label each lifter and shim set and each lifter out of the bore with a marker together with its valve adjusting shim (illustration). If the lifters are stuck, spray area around them with carburetor cleaner and let it soak in. Place the lifters in their holder or box.

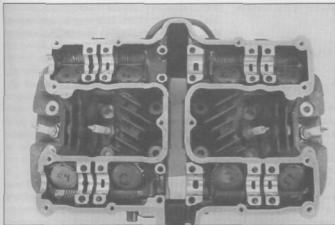

9.38 Mark the lifters and shims with a felt tip pen to identify their locations, then remove the lifters from their bores

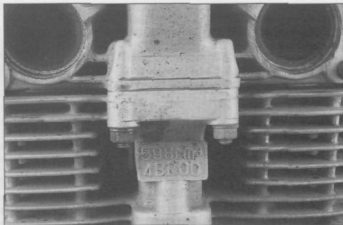

10.8 Remove the nuts and washers attaching the front of the head to the cylinder block (also remove the two nuts on the other side of the head)

Inspection

39 Check the lifters and their bores for wear, scuff marks, scratches or other damage. Yamaha doesn't provide specifications or wear tolerances for the lifters or their bores, but if the bores are seriously out-of-round or tapered, replace the lifters and cylinder head as a set.

Installation

40 Coat the lifters and their bores with clean engine oil. Place a small dab of moly-based grease or assembly lube onto the adjusting shims prior to camshaft reinstallation.

41 The remainder of installation is the reverse of the removal steps.

10 Cylinder head – removal and installation



Caution: The engine must be completely cool before beginning this procedure or the cylinder head may become warped.

Note: This procedure can be performed with the engine in the frame. If the engine has been removed, ignore the steps which don't apply.

Removal

1 Remove the valve cover (see Section 7). On 1996-on UK models remove the oil cooler radiator (see Section 32).

2 Remove the exhaust system (see Chapter 3).

3 Turn the engine to position no. 1 cylinder at TDC compression (see Chapter 1, *Valve clearances – check and adjustment*).

4 Remove the camshaft chain tensioner (see Section 8).

5 Remove the camshafts (see Section 9).

6 The lifters can be left in their bores or removed (see Section 9). If you're planning work that includes turning the head upside down, such as valve service or measuring the gasket surface warpage, remove the lifters.

7 Remove the exhaust-side cam chain guide (see Section 9).

8 Remove the nuts and washers from the front of the cylinder head (see illustration).

9 Remove the nuts and washers from the rear of the cylinder head.

10 Loosen the cylinder head nuts, 1/2 turn at a time, working in the reverse of the tightening sequence (see illustration).


11 Once all of the nuts are loose, remove the nuts and washers. The two washers on the right (clutch) end of the engine are copper. The others are steel.

12 Pull the cylinder head off the cylinder block studs. If the head is stuck, tap up with a rubber mallet to jar it loose, or use two wooden dowels inserted into the intake or exhaust ports to rock the head back and forth slightly (its movement will be limited by the studs). Don't attempt to pry the head off by inserting a screwdriver between the head and the cylinder block – you'll damage the sealing surfaces.


13 Lift the head gasket off the cylinder block. Stuff a clean rag into the cam chain tunnel to prevent the entry of debris.

14 Remove the dowel pins and O-rings (see illustration).

15 Check the cylinder head gasket and the

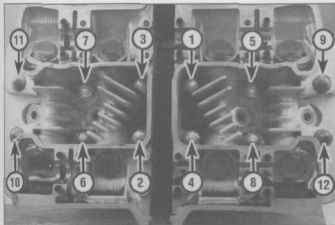

10.10 Cylinder head nut TIGHTENING sequence

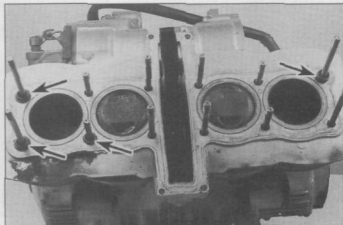

10.14 Remove the dowel pins and O-rings from the corners of the cylinder block (arrowed)

mating surfaces on the cylinder head and block for leakage, which could indicate warpage. Refer to Section 12 and check the flatness of the cylinder head.

16 Clean all traces of old gasket material from the cylinder head and block. Be careful not to let any of the gasket material fall into the crankcase, the cylinder bores or the oil passages.

Installation

17 Install the dowels on the cylinder head studs. Use new O-rings on the two studs at the clutch end of the block (see illustration 10.14).

18 Lay the new head gasket in place on the cylinder block. The gasket only goes one way; if all of the holes don't line up with the holes in the cylinder block, the gasket is upside down. Never re-use the old gasket.

19 Carefully lower the cylinder head over the studs. It's helpful to have an assistant support the camshaft chain with a piece of wire so it doesn't fall and become kinked or detached from the crankshaft. When the head is resting against the cylinder block, wire the cam chain to another component to keep tension on it.

20 Lubricate the threads with engine oil, then install the head washers and nuts. Install new copper washers onto the outer studs on the right side of the engine. Using the proper sequence (see illustration 10.10), tighten the nuts to approximately half of the torque listed in this Chapter's Specifications.

21 Using the same sequence, tighten the nuts to the torque listed in this Chapter's Specifications.

22 Lubricate the threads with engine oil, then install the small cylinder block-to-cylinder head nuts, tightening them to the torque listed in this Chapter's Specifications.

23 Install the exhaust side and upper cam chain guides.

24 Install the camshafts, tensioner and the valve cover (see Sections 9, 8 and 7).

25 Change the engine oil (see Chapter 1).

26 The remainder of installation is the reverse of the removal steps.

11 Valves/valve seats/valve guides – servicing

1 Because of the complex nature of this job and the special tools and equipment required, servicing of the valves, the valve seats and the valve guides (commonly known as a valve job) is best left to a professional.

2 The home mechanic can, however, remove and disassemble the head, do the initial cleaning and inspection, then reassemble and deliver the head to a dealer service department or properly equipped motorcycle repair shop for the actual valve servicing. Refer to Section 12 for those procedures.

3 The dealer service department will remove the valves and springs, recondition or replace the valves and valve seats, replace the valve guides, check and replace the valve springs, spring retainers and keepers/collets (as necessary), replace the valve seals with new ones and reassemble the valve components.

4 After the valve job has been performed, the head will be in like-new condition. When the head is returned, be sure to clean it again very thoroughly before installation on the engine to remove any metal particles or abrasive grit that may still be present from the valve service operations. Use compressed air, if available, to blow out all the holes and passages.

12 Cylinder head and valves – disassembly, inspection and reassembly

1 As mentioned in the previous Section, valve servicing and valve guide replacement should be left to a dealer service department or motorcycle repair shop. However, disassembly, cleaning and inspection of the valves and related components can be done

(if the necessary special tools are available) the home mechanic. This way no expense is incurred if the inspection reveals that some work is not required at this time.

2 To properly disassemble the valve components without the risk of damage to them, a valve spring compressor is absolutely necessary. If your valve spring compressor is not designed to fit inside the lifter bores, you will need a special adapter to compress the springs and retainers in order not to damage the bores (see illustrations).

Disassembly


3 Remove the lifters and their shims if you haven't already done so (see Section 9). Store the components so they can be returned to their original locations without getting mixed up.

4 Before the valves are removed, scrape away any traces of gasket material from the head gasket sealing surface. Work slowly to do not nick or gouge the soft aluminium of the head. Gasket removing solvents, which are very well, are available at most motorcycle shops and auto parts stores.


5 Carefully scrape all carbon deposits out of the combustion chamber area. A hand wire brush or a piece of fine emery cloth can be used once most of the carbon has been scraped away. Do not use a wire brush mounted in a drill motor, or one with extremely stiff bristles, as the head material is soft and may be eroded away or scratched by the wire brush. Be careful not to disturb the head surface finish, any scratches or gouges will require that the head be resurfaced.

6 Before proceeding, arrange to label and store the valves along with their related components so they can be kept separate and reinstalled in the same valve guides (if removed from labelled plastic bags will for this).

7 Compress the valve spring on the first valve with a spring compressor, then remove the keepers/collets and the retainer from the assembly (see illustration 12.2b and

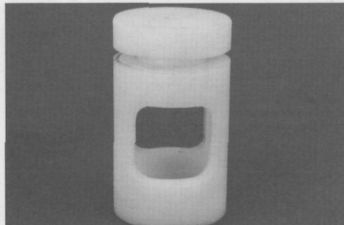

12.2a This is one type of adapter used with a standard valve spring compressor to remove the valves

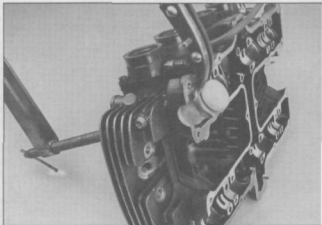

12.2b Attach the compressor like this

accompanying illustration). Don't compress the springs any more than is absolutely necessary. Carefully release the valve spring compressor and remove the springs and the valve from the head. If the valve binds in the guide (won't pull through), push it back into the head and deburr the area around the keeper groove with a very fine file or whetstone (see illustration).


8 Repeat the procedure for the remaining valves. Remember to keep the parts for each valve together so they can be reinstalled in the same location.

9 Once the valves have been removed and labelled, pull off the valve stem seals with pliers and discard them (the old seals should never be reused), then remove the steel valve spring seats.

10 Next, clean the cylinder head with solvent and dry it thoroughly. Compressed air will speed the drying process and ensure that all holes and recessed areas are clean.

11 Clean all of the valve springs, keepers, retainers and spring seats with solvent and dry them thoroughly. Do the parts from one valve at a time so that no mixing of parts between valves occurs.

12 Scrape off any deposits that may have formed on the valve, then use a motorised wire brush to remove deposits from the valve heads. Again, make sure the valves don't get mixed up.

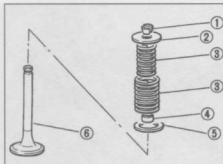


12.7a Valve components – exploded view

- | | |
|---------------------------|-----------------|
| 1 Valve keepers (collets) | 4 Stem oil seal |
| 2 Spring retainer | 5 Spring seat |
| 3 Valve springs | 6 Valve |

Inspection

13 Inspect the head very carefully for cracks and other damage. If cracks are found, a new head will be required. Check the cam bearing surfaces for wear and evidence of seizure. Check the camshafts and lifters for wear as well (see Section 9).

14 Using a precision straight-edge and a feeler gauge, check the head gasket mating surface for warpage. Lay the straight-edge lengthways, across the head and diagonally (corner-to-corner), intersecting the head stud holes, and try to slip a feeler gauge under it, on either side of each combustion chamber (see illustrations). The gauge should be the

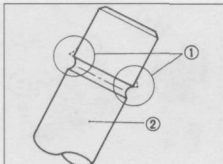


12.7b Check the area around the keeper groove for burrs and remove any that you find

- 1 Burrs (remove with a file)
- 2 Valve stem


same thickness as the cylinder head warpage limit listed in this Chapter's Specifications. If the feeler gauge can be inserted between the head and the straight-edge, the head is warped and must either be machined or, if warpage is excessive, replaced with a new one.

15 Examine the valve seats in each of the combustion chambers. If they are pitted, cracked or burned, the head will require valve service that's beyond the scope of the home mechanic. Measure the valve seat width (see illustration) and compare it to this Chapter's Specifications. If it is not within the specified range, or if it varies around its circumference, valve service work is required.


16 Clean the valve guides to remove any carbon build-up, then measure the inside diameters of the guides (at both ends and the centre of the guide) with a small hole gauge and a 0-to-1-inch micrometer (see illustrations). Record the measurements for future reference. These measurements, along with the valve stem diameter measurements, will enable you to compute the valve stem-to-guide clearance. This clearance, when compared to the Specifications, will be one factor that will determine the extent of the valve service work required. The guides are measured at the ends and at the centre to determine if they are worn in a bell-mouth

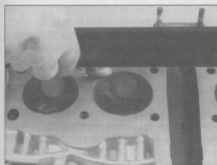


12.14a Lay a precision straight-edge across the cylinder head and try to slide a feeler gauge of the specified thickness (equal to the maximum allowable warpage) under it

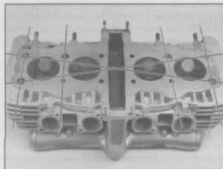

12.14b Measure along these lines

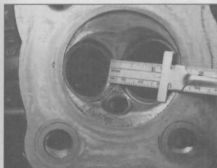


12.15 Measure the valve seat width with a ruler (or for greater precision use a vernier caliper)

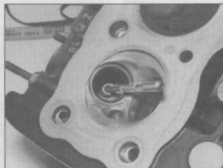

12.16a Insert a small hole gauge into the valve guide and expand it so there's a slight drag when it's pulled out




12.16b Measure the small hole gauge with a micrometer

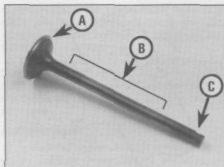

12.17 Check the valve face (A), stem (B) and keeper/collet groove (C) for signs of wear and damage



12.18a Measure the valve stem diameter with a micrometer

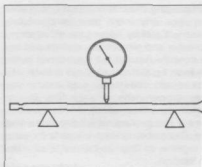

12.18b Check the valve stem for bend with a V-block (or blocks, as shown here) and a dial gauge

pattern (more wear at the ends). If they are, guide replacement is an absolute must.

17 Carefully inspect each valve face for cracks, pits and burned spots. Check the valve stem and the keeper groove area for cracks (see illustration). Rotate the valve and check for any obvious indication that it is bent. Check the end of the stem for pitting and excessive wear and make sure the bevel is the specified width. The presence of any of the above conditions indicates the need for valve servicing.

18 Measure the valve stem diameter (see illustration). By subtracting the stem diameter from the valve guide diameter, the valve stem-to-guide clearance is obtained. If the stem-to-guide clearance is greater than listed in this Chapter's Specifications, the guides and valves will have to be replaced with new ones. Also check the valve stem for bending. Set the valve in a V-block with a dial gauge touching the middle of the stem (see illustration). Rotate the valve and note the reading on the gauge. If the stem runout exceeds the value listed in this Chapter's Specifications, replace the valve.

19 Check the end of each valve spring for wear and pitting. Measure the free length (see illustration) and compare it to this Chapter's Specifications. Any springs that are shorter than specified have sagged and should not be reused. Stand the spring on a flat surface and check it for squareness (see illustration).

20 Check the spring retainers and keepers/collets for obvious wear and cracks. Any questionable parts should not be reused, as extensive damage will occur in the event of failure during engine operation.

21 If the inspection indicates that no service


work is required, the valve components be reinstalled in the head.

Reassembly


22 Before installing the valves in the head, they should be lapped to ensure a positive seal between the valves and seats. This procedure requires coarse and fine lapping compound (available at auto parts stores) and a valve lapping tool. If a lapping tool is not available, a piece of rubber plastic hose can be slipped over the valve stem (after the valve has been installed in the guide) and used to turn the valve.

23 Apply a small amount of coarse lapping compound to the valve face (see illustration) and slip the valve into the guide. **Note:** Make sure the valve is installed in the correct guide and be careful not to get any lapping compound on the valve stem.


24 Attach the lapping tool (or hose) to the valve and rotate the tool between the palm of your hands. Use a back-and-forth motion rather than a circular motion. Lift the valve from the seat and turn it at regular intervals to distribute the lapping compound properly. Continue the lapping procedure until the valve face and seat contact area is of uniform

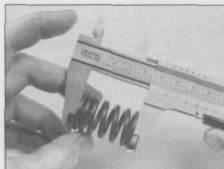

12.19a Measure the free length of the valve springs

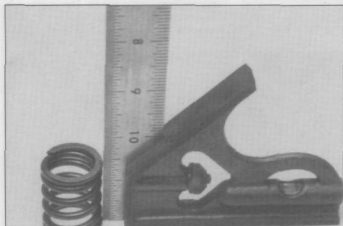

12.19b Check the valve springs for squareness

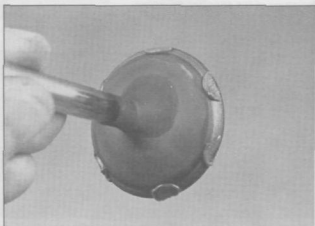

12.23 Apply the lapping compound very sparingly, in small dots to the valve face only



12.24a After lapping, the valve face should exhibit a uniform, unbroken pattern . . .


and unbroken around the entire circumference of the valve face and seat (see illustrations).

25 Carefully remove the valve from the guide and wipe off all traces of lapping compound. Use solvent to clean the valve and wipe the seat area thoroughly with a solvent-soaked cloth.


26 Repeat the procedure with fine valve lapping compound, then repeat the entire procedure for the remaining valves.

27 Lay the spring seats in place in the cylinder head, then install new valve stem seals on each of the guides. Use an appropriate size deep socket to push the seals into place until they are properly seated. don't twist or cock them, or they will not seal properly against the valve stems. Also, don't remove them again or they will be damaged.

28 Coat the valve stems and valve face with assembly lube or moly-based grease, then install one of them into its guide. Next, install the springs and retainers, compress the springs and install the keepers. **Note:** Install the springs with the tightly wound coils at the bottom (next to the spring seat) (see illustration); Yamaha advise installing the inner spring so that its coils run in a counterclockwise direction and the outer spring with its coils running in a clockwise direction (both as viewed from above). When compressing the springs with the valve spring compressor, depress them only as far as is absolutely necessary to

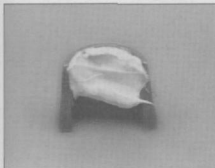

12.28b A small dab of grease will help hold the keepers (collets) in place on the valve spring while the valve is released

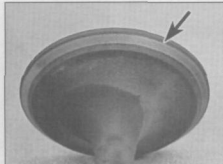

12.24b . . . and the seat should be the specified width (arrowed) with a smooth, unbroken appearance

slip the keepers/collets into place. Apply a small amount of grease to the keepers (collets) (see illustration) to help hold them in place as the pressure is released from the springs. Make certain that the keepers/collets are securely locked in their retaining grooves.

29 Support the cylinder head on blocks so the valves can't contact the workbench top, then very gently tap each of the valve stems with a soft-faced hammer. This will help seat the keepers/collets in their grooves.



Check for proper valve sealing by pouring a small amount of solvent into each of the valve ports. If the solvent leaks past the valve(s) into the combustion chamber area, disassemble the valve(s) and repeat the lapping procedure, then reinstall the valve(s) and repeat the check.


13 Cylinder block – removal, inspection and installation

Removal

1 Following the procedure given in Section 10, remove the cylinder head. Make sure the crankshaft is positioned at Top Dead Centre (TDC) for cylinder no. 1.



13.2 Remove the nut from the single stud at the front of the cylinder block

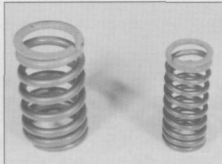

12.28a Install the springs with their closely spaced coils down (against the cylinder head)

2 Remove the nut from the stud that secures the block to the crankcase (see illustration).

3 Lift the cylinder block straight up to remove it. If it's stuck, tap around its perimeter with a soft-faced hammer. Don't attempt to pry between the block and the crankcase, as you will ruin the sealing surfaces. As you lift, note the location of the dowel pins. Be careful not to let these drop into the engine.


4 Stuff clean shop towels around the pistons and remove the gasket and all traces of old gasket material from the surfaces of the cylinder block and the cylinder head.

Inspection


5 Don't attempt to separate the liners from the cylinder block.

6 Check the cylinder walls carefully for scratches and score marks.

7 Using the appropriate precision measuring tools, check each cylinder's diameter. Measure near the top, centre and bottom of the cylinder bore, parallel to the crankshaft axis (see illustration). Next, measure each cylinder's diameter at the same three locations across the crankshaft axis. Compare the results to this Chapter's

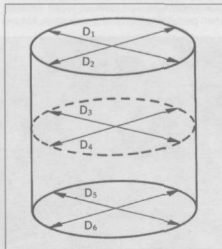

13.7 Measure the cylinder bore with a telescoping gauge at these six points (then measure the gauge with a micrometer)

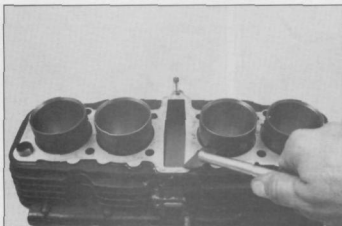

13.12 Use a scraper to remove any remaining gasket material from the bottom of the cylinder block



13.13a Install a new O-ring around the base of each cylinder press it completely into its groove. . .

Specifications. If the cylinder walls are tapered, out-of-round, worn beyond the specified limits, or badly scuffed or scored, have them rebored or honed by a dealer service department or a motorcycle repair shop. If a rebore is done, oversize pistons and rings will be required as well.

8 As an alternative, if the precision measuring tools are not available, a dealer service department or motorcycle repair shop will make the measurements and offer advice concerning servicing of the cylinders.

9 If they are in reasonably good condition and not worn to the outside of the limits, and if the piston-to-cylinder clearances can be maintained properly (see Section 14), then the cylinders do not have to be rebored; honing is all that is necessary.

10 To perform the honing operation you will need the proper size flexible hone with fine stones, or a bottle-brush type hone, plenty of light oil or honing oil, some shop towels and an electric drill motor. Hold the cylinder block sideways (bore 90° to the vice jaws) in a vice (cushioned with soft jaws or wood blocks) when performing the honing operation. Mount

the hone in the drill motor, compress the stones and slip the hone into the cylinder. Lubricate the cylinder thoroughly, turn on the drill and move the hone up and down in the cylinder at a pace which will produce a fine crosshatch pattern on the cylinder wall with the crosshatch lines intersecting at approximately a 60° angle. Be sure to use plenty of lubricant and do not take off any more material than is absolutely necessary to produce the desired effect. Do not withdraw the hone from the cylinder while it is running. Instead, shut off the drill and continue moving the hone up and down in the cylinder until it comes to a complete stop, then compress the stones and withdraw the hone. Wipe the oil out of the cylinder and repeat the procedure on the other cylinders. Remember, do not remove too much material from the cylinder wall. If you do not have the tools, or do not desire to perform the honing operation, a dealer service department or motorcycle repair shop will generally do it for a reasonable fee.

11 Next, the cylinders must be thoroughly washed with warm soapy water to remove all traces of the abrasive grit produced during the

honing operation. Be sure to run a brush through the bolt holes and flush them with running water. After rinsing, dry the cylinder thoroughly and apply a coat of light, preventative oil to all machined surfaces.

Installation

12 Ensure that the bottom gasket surface is clean (see illustration) before you lubricate the cylinder bores with clean engine oil. Apply a thin film of engine oil to the piston skirts.


13 Install the dowel pins, then place a cylinder base gasket on the cylinder block. Install new O-rings on the base of each cylinder. Install new O-rings around the cylinder block dowels at the right end of the engine (see illustrations).

14 Slowly rotate the crankshaft until the pistons are up and two down. Be extremely careful not to jam the timing chain in the case.


15 Attach four piston ring compressors to the pistons and compress the piston rings. Hose clamps can be used instead – just be sure they don't scratch the pistons, and tighten them too much.



13.13b . . . then, install the new gasket between the block and cylinder assembly, making sure the UP mark is up . . .

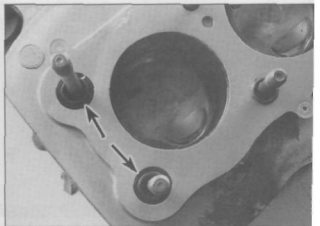

13.13c . . . and new O-rings at the clutch end of the engine

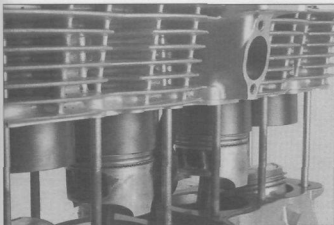

13.16 If you're very careful, you can install the cylinder block over the pistons without using ring compressors, but it's advised to use them

16 Install the cylinder block over the pistons and carefully lower it down until the piston crowns fit into the cylinder liners (see illustration). While doing this, pull the camshaft chain up, using a hooked tool or a piece of coat hanger or previously attached piece of wire. Also keep an eye on the cam chain guide to make sure it doesn't wedge against the block. Push down on the cylinder block, making sure the pistons don't get cocked sideways, until the bottoms of the cylinder liners slide down past the piston rings. A wood or plastic hammer handle can be used to gently tap the block down, but don't use too much force or the pistons will be damaged.


17 Once the cylinders have passed over the rings of the two pistons, rotate the crankshaft so the remaining pistons are up and install the cylinder block over them.

18 Remove the piston ring compressors or hose clamps (if used), being careful not to scratch the pistons. Remove the rods from under the pistons.

19 The remainder of installation is the reverse of removal.



14.4a Push the piston pin out until you can grasp it, then pull it out the rest of the way

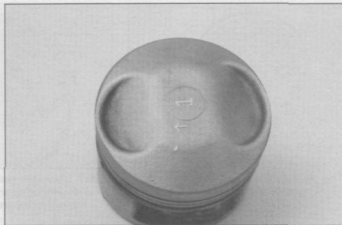

14.3a Mark the cylinder numbers on the piston crowns – also note the arrow, which must point to the front

14 Pistons – removal, inspection and installation

1 The pistons are attached to the connecting rods with piston pins that are a slip fit in the pistons and rods.

2 Before removing the pistons from the rods, stuff a clean shop towel into each crankcase hole, around the connecting rods. This will prevent the circlips from falling into the crankcase if they are inadvertently dropped.

Removal


3 Using a sharp scribe, scratch the number of each piston into its crown (or use a felt pen if the piston is clean enough). Each piston should also have an arrow pointing toward the front of the engine (see illustration). If not, scribe an arrow into the piston crown before removal. Support the first piston, grasp the circlip with needle-nose pliers and remove it from the groove (see illustration).

4 Push the piston pin out from the opposite



14.3b Remove the circlip from one side of the piston – wear eye protection and be careful not to let it fly out

end to free the piston from the rod (see illustration). You may have to deburr the area around the groove to enable the pin to slide out (use a triangular file for this procedure). If the pin won't come out, remove the remaining circlip. Fabricate a piston pin removal tool from threaded stock, nuts, washers and a piece of pipe (see illustration). Repeat the procedure for the other pistons.

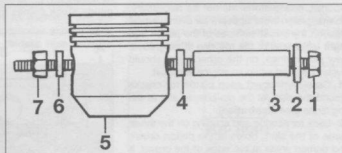


14.4b The piston pin should come out with hand pressure, but if not this removal tool can be fabricated from readily available parts

- | | | |
|----------------------|--|--|
| 1 Bolt | 6 Washer (B) | B Small enough to fit through pin bore in piston |
| 2 Washer | 7 Nut (B) | |
| 3 Tubing or pipe (A) | A Large enough for piston pin to fit through | |
| 4 Padding (A) | | |
| 5 Piston | | |



14.6 Remove the piston rings with a ring removal and installation tool

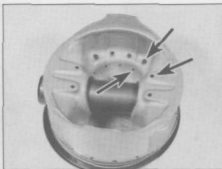

14.11 Check the piston pin bore and the piston skirt for wear, and make sure the internal holes are clear (arrowed)



14.13 Measure the piston ring-to-groove clearance with a feeler gauge

Inspection

5 Before the inspection process can be carried out, the pistons must be cleaned and the old piston rings removed.

6 Using a piston ring removal and installation tool, carefully remove the rings from the pistons (see illustration). Do not nick or gouge the pistons in the process.

7 Scrape all traces of carbon from the tops of the pistons. A hand-held wire brush can be used once most of the deposits have been scraped away. Do not, under any circumstances, use a wire brush mounted in a drill motor to remove deposits from the pistons; the piston material is soft and will be eroded away by the wire brush.

8 Use a piston ring groove cleaning tool to remove any carbon deposits from the ring grooves. If a tool is not available, a piece broken off the old ring will do the job. Be very careful to remove only the carbon deposits. Do not remove any metal and do not nick or gouge the top and bottom of the ring lands (the metal ridges between the ring grooves).

9 Once the deposits have been removed, clean the pistons with solvent and dry them thoroughly. Make sure the oil return holes below the oil ring grooves are clear.

10 If the pistons are not damaged or worn excessively and if the cylinders are not rebored, new pistons will not be necessary. Normal piston wear appears as even, vertical wear on the thrust surfaces of the piston and slight looseness of the top ring in its groove. New piston rings, on the other hand, should always be used when an engine is rebuilt.

11 Carefully inspect each piston for cracks around the skirt, at the pin bosses and at the ring lands (see illustration).

12 Look for scoring and scuffing on the thrust faces of the skirt, holes in the piston crown and burned areas at the edge of the crown. If the skirt is scored or scuffed, the engine may have been suffering from overheating and/or abnormal combustion, which caused excessively high operating temperatures. The oil pump and oil cooler (if equipped) should be checked thoroughly. A hole in the piston crown, an extreme to be sure, is an indication that abnormal combustion (pre-ignition) was

occurring. Burned areas at the edge of the piston crown are usually evidence of spark knock (detonation). If any of the above problems exist, the causes must be corrected or the damage will occur again.

13 Measure the piston ring-to-groove clearance by laying a new piston ring in the ring groove and slipping a feeler gauge in beside it (see illustration). Check the clearance at three or four locations around the groove. Be sure to use the correct ring for each groove; they are different. If the clearance is greater than specified, new pistons will have to be used when the engine is reassembled.


14 Check the piston-to-bore clearance by measuring the bore (see Section 13) and the piston diameter. Make sure that the pistons and cylinders are correctly matched. Measure the piston across the skirt on the thrust faces at a 90° angle to the piston pin, at the distance from the bottom of the skirt listed in this Chapter's Specifications (see illustration). Subtract the piston diameter from the bore diameter to obtain the clearance. If it is greater than specified, the cylinders will have to be rebored and new oversized pistons and rings installed.

15 If the appropriate precision measuring tools are not available, the piston-to-cylinder clearances can be obtained, though not quite as accurately, using feeler gauge stock. Feeler gauge stock comes in 12-inch lengths and

various thicknesses and is generally available at auto parts stores. To check the clearance select a feeler gauge of the same thickness as the piston clearance listed in this Chapter Specifications and slip it into the cylinder along with the appropriate piston. The cylinder should be upside down and the piston must be positioned exactly as it normally would be. Place the feeler gauge between the piston and cylinder on one of the thrust faces (90° to the piston pin bore); the piston should slip through the cylinder. If the feeler gauge is placed with moderate pressure, if it falls through, or slides through easily, the clearance is excessive and a piston will be required. If the piston binds at the lower end of the cylinder and is loose toward the top, the cylinder is tapered, as tight spots are encountered as the feeler gauge is placed at different points around the cylinder, the cylinder is out-of-round.


16 Repeat the procedure for the remaining pistons and cylinders. Be sure to have cylinders and pistons checked by a service department or a motorcycle repair shop to confirm your findings and purchasing new parts.

17 Apply clean engine oil to the pin, insert it into the piston and check for freeplay by rocking the pin back-and-forth (see illustration). If the pin is loose, new pins and pistons must be installed.

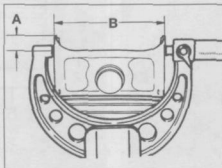


14.14 Measure the piston diameter with a micrometer

A Specified distance from bottom of piston
B Piston diameter

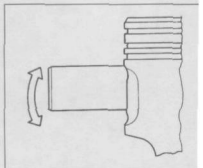

14.17 Slip the pin into the piston and rock it back-and-forth; if it's loose, replace the piston and pin

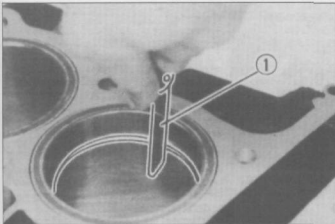

15.3 Square the ring in the bore by turning the piston upside down and tapping on the ring, then check the piston ring end gap with a feeler gauge (1)

18 Refer to Section 15 and install the rings on the pistons.

Installation

19 Install the pistons in their original locations with the arrows pointing to the front of the engine. Lubricate the pins and the rod bores with clean engine oil. Install new circlips in the grooves in the inner sides of the pistons (don't reuse the old circlips). Push the pins into position from the opposite side and install new circlips. Compress the circlips only enough for them to fit in the piston. Make sure the clips are properly seated in the grooves and that the open of the circlip is away from the removal notch.

15 Piston rings – installation



1 Before installing the new piston rings, the ring end gaps must be checked.

2 Lay out the pistons and the new ring sets so the rings will be matched with the same piston and cylinder during the end gap measurement procedure and engine assembly.

3 Insert the top (No. 1) ring into the bottom of the first cylinder and square it up with the cylinder walls by pushing it in with the top of the piston. Since the bottom of the cylinder experiences the least amount of wear, the ring should be about one inch above the bottom edge of the cylinder. To measure the end gap, slip a feeler gauge between the ends of the ring (see illustration) and compare the measurement to this Chapter's Specifications.

4 If the gap is larger or smaller than specified, double check to make sure that you have the correct rings before proceeding.

5 If the gap is too small, it must be enlarged or the ring ends may come in contact with each other during engine operation, which can cause serious damage. The end gap can be increased by filing the ring ends very carefully with a fine file (see illustration). When performing this operation, file only from the outside in.

6 Excess end gap is not critical unless it is greater than 0.040 in (1 mm). Again, double check to make sure you have the correct rings for your engine. Too little end gap can cause the rings to seize to the cylinder walls.

7 Repeat the procedure for each ring that will be installed in the first cylinder and for each ring in the remaining cylinders. Remember to

keep the rings, pistons and cylinders matched up.


8 Once the ring end gaps have been checked/corrected, the rings can be installed on the pistons.

9 The oil control ring (lowest on the piston) is installed first. It is composed of three separate components. Slip the expander into the groove, then install the upper side rail (see illustrations). Don't use a piston ring installation tool on the oil ring side rails as they may be damaged. Instead, place one end of the side rail into the groove between the spacer expander and the ring land. Hold it firmly in place and slide a finger around the piston while pushing the rail into the groove. Next, install the lower side rail in the same manner.

10 After the three oil ring components have been installed, check to make sure that both the upper and lower side rails can be turned smoothly in the ring groove.

11 Install the second (middle) ring next. It can be readily distinguished from the top ring by its cross-section shape (see illustration). Do not mix the top and middle rings.


12 To avoid breaking the ring, use a piston ring installation tool and make sure that the identification mark is facing up (see

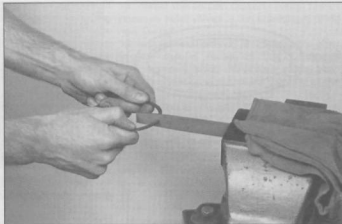


15.5 If the end gap is too small, clamp a file in a vice and file the ring ends (from the outside in only) to enlarge the gap slightly




15.9a Installing the oil ring expander – make sure the ends don't overlap

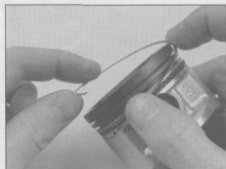


15.9b Installing an oil ring side rail – don't use a ring installation tool to do this

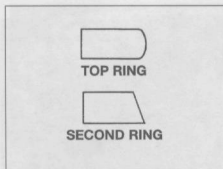

15.11 Don't confuse the top ring with the second ring

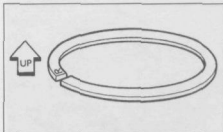

15.12 Make sure the marks on the rings face up when the rings are installed on the pistons

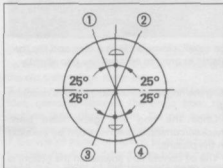

15.15 Arrange the ring gaps like this

- 1 Top compression ring
- 2 Oil ring lower rail
- 3 Oil ring upper rail
- 4 Second compression ring




16.2 Remove the oil pan bolts around the edge of the pan



16.7a Pull the main oil relief valve out of the crankcase ...




16.4 Remove the oil strainer from the pick-up; the arrow on the strainer points toward the rear of the engine

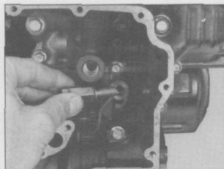

16.7b ... and unscrew the starter chain relief valve



16.5 Remove the pick-up bolts and detach the pick-up from the engine

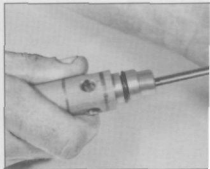

16.8 Push in on the relief valve plunger make sure it moves freely

illustration). Fit the ring into the middle groove on the piston. Do not expand the ring any more than is necessary to slide it into place.

13 Finally, install the top ring in the same manner. Make sure the identifying mark is facing up.

14 Repeat the procedure for the remaining pistons and rings. Be very careful not to confuse the top and second rings.

15 Once the rings have been properly installed, stagger the end gaps, including those of the oil ring side rails (see illustration).

16 Apply a liberal coating of engine oil on the pistons prior to installation.

16 Oil pan and relief valves – removal, relief valve inspection and installation

Removal

- 1 Remove the engine (see Section 5).
- 2 Remove the oil pan bolts and detach the pan from the crankcase (see illustration 17.2b and the accompanying illustration).
- 3 Remove all traces of old gasket material from the mating surfaces of the oil pan and crankcase.
- 4 Remove the strainer from the oil pick-up and inspect for debris (see illustration).

5 Unbolt the pick-up from the crankcase (see illustration).

6 Remove all traces of old gasket material from the pick-up and crankcase.

7 Remove the pressure relief valves from the crankcase (see illustrations). The oil pressure valve should pull out with light hand pressure. If it's stuck, rock it back and forth slightly while you pull on it. The starter chain tensioner relief valve should be unscrewed with a wrench or socket.

Relief valve inspection

8 Push the plunger into the relief valve and check for free movement (see illustration). If the valve sticks, perform the following steps to disassemble and inspect it.

9 Straighten the cotter pin and pull it out (see illustration).

10 Remove the spring retainer, spring and plunger.


11 Check all parts for wear and damage. Clean the parts thoroughly, reassemble the valve and recheck its movement. If the valve still sticks, replace it.

Caution: If you reuse the relief valve, install a new cotter pin before reinstalling the relief valve in the engine.

12 Repeat the same steps for the starter chain tensioner relief valve.

Installation


13 Install the starter chain tensioner relief valve with a new sealing washer.

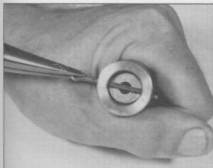

16.3 Straighten the ends of the cotter pin and pull it out



17.2a Remove the snap-ring and the oil pump drive gear

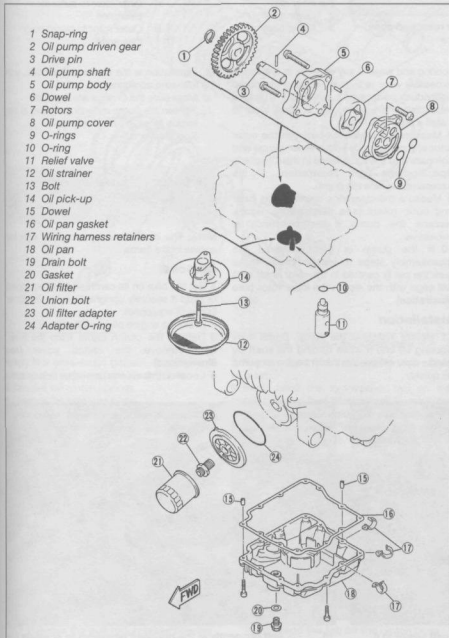

17.2b Oil pump and pan (exploded view)

14 Install the oil pan dowels. Install the oil pressure relief valves in the crankcase, using new O-rings.

15 Install the oil pick-up and tighten the bolts to the torque listed in this Chapter's Specifications. Install the strainer on the pick-up with its open end toward the rear of the engine.

16 Position a new gasket on the oil pan. A thin film of sealant can be used to hold the gasket in place. Install the oil pan and bolts, tightening the bolts to the torque listed in this Chapter's Specifications, using a criss-cross pattern. Reinstall the wiring harness clips on the appropriate bolts.


17 The remainder of installation is the reverse of removal. Install a new oil filter and fill the crankcase with oil (see Chapter 1), then run the engine and check for leaks.

17 Oil pump – removal, inspection and installation

Note: The oil pump can be removed with the engine in the frame.

Removal


- 1 Remove the clutch (see Section 18).
- 2 Remove the snap-ring and take off the oil pump driven gear (see illustrations).
- 3 Remove the oil pump mounting screws and lift the pump away from the engine (see illustration). Remove the O-rings (see illustration).

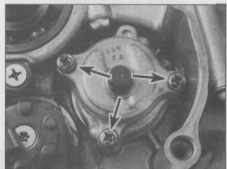


17.3a Remove the three mounting screws (arrowed) and take the pump off



17.3b Remove the O-rings (arrowed)

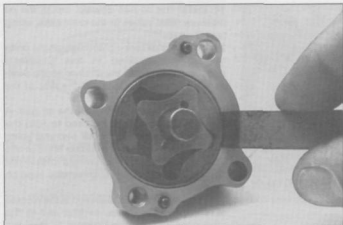

17.8 Insert a feeler gauge between the outer rotor and pump body to measure the clearance

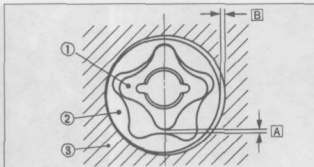

17.9 Measure the clearance between the outer rotor tip and inner rotor with a feeler gauge

- 1 Inner rotor
- 2 Outer rotor
- 3 Pump body

- A Inner rotor to outer rotor clearance
B Outer rotor to pump body clearance

Inspection

- 4 Wash the oil pump in solvent, then dry it off.
- 5 Remove the pump cover screw (use an impact driver if it's tight).
- 6 Lift off the cover.
- 7 Check the pump body and rotors for

scoring and wear. If any damage or uneven or excessive wear is evident, replace the pump (individual parts aren't available). If you're rebuilding the engine, it's a good idea to install a new oil pump.

8 Measure the clearance between the outer rotor and pump body with a feeler gauge and compare it to the value listed in this Chapter's Specifications (see illustration). If it's excessive, replace the pump.

9 Measure the clearance between the inner and outer rotors (see illustration). Again, replace the pump if the clearance is excessive.

10 If the pump is good, reverse the disassembly steps to reassemble it. Make sure the pin is centred in the rotor shaft so it will align with the slot in the inner rotor (see illustration).

Installation

11 Before installing the pump, prime it by pouring oil into it while turning the shaft by hand – this will ensure that it begins to pump oil quickly.

12 Installation is the reverse of removal; the following additions:

- a) Make sure the O-rings are in place.
- b) Tighten the pump mounting screws to torque listed in this Chapter's Specifications.

18 Clutch – removal, inspection and installation


Note: The clutch can be removed with engine in the frame.

Removal


- 1 Set the bike on its centrestand (if equipped) or prop it securely upright. Remove the fairing (if equipped).
- 2 Drain the engine oil (see Chapter 1).
- 3 Detach the clutch cable from the then remove the clutch cover (illustrations).
- 4 Loosen the clutch pressure plate




17.10 Insert the pin in the shaft and make sure it's centred

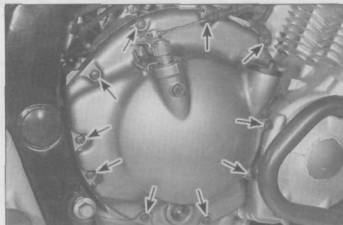

18.3a Loosen the clutch cover bolts (arrowed) evenly in a criss-cross pattern ...

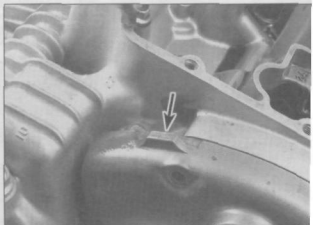

18.3b ... and pry gently at the pry point (arrowed) to separate cover from the engine

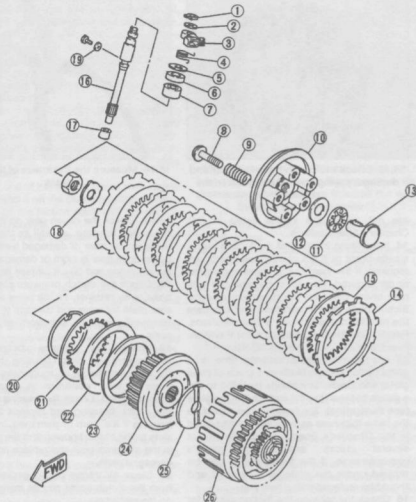

- 1 Snap-ring
- 2 Plate washer
- 3 Release lever
- 4 Spring
- 5 Plate washer
- 6 Oil seal
- 7 Bearing
- 8 Pressure plate bolt
- 9 Spring
- 10 Pressure plate
- 11 Thrust bearing
- 12 Plate washer
- 13 Pull rod
- 14 Friction plate
- 15 Metal plate
- 16 Release lever pivot shaft
- 17 Bearing
- 18 Lockwasher
- 19 Gasket
- 20 Wire circlip (part of clutch damper)
- 21 Metal plate (part of clutch damper)
- 22 Clutch boss spring (part of clutch damper)
- 23 Seat plate (part of clutch damper)
- 24 Clutch boss
- 25 Thrust plate
- 26 Clutch housing

18.4 Clutch – exploded view

evenly in a criss-cross pattern, then remove the bolts and washers (see illustration).

5 Remove the clutch springs.

6 Remove the pressure plate.


7 Remove the pull rod, thrust bearing and plate washer from the pressure plate (see illustration).

8 Remove the friction plates and steel plates as a set.


9 Bend back the lockwasher tab on the clutch boss nut (see illustration). Remove the nut, using a special holding tool or equivalent (Yamaha tool no. YM-91402 in the US; 90890-04086 in the UK) to prevent the clutch

housing from turning. An alternative to this tool can be fabricated from some steel strap, bent at the ends and bolted together in the middle (see Tool Tip). Remove the lockwasher and discard it. Use a new one during installation.


10 Remove the clutch boss, clutch

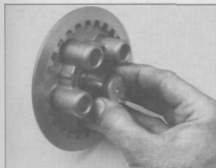

18.7 Remove the pull rod, release bearing and washer from the pressure plate

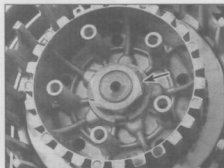


18.9a Bend the tab on the clutch boss lockwasher (arrowed) away from the nut, then remove the nut

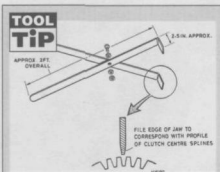

You can make your own clutch holding tool from steel strap



18.10 Slide the clutch housing off and remove the thrust washer

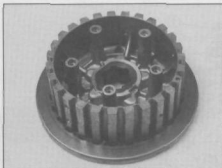

18.12 Check the clutch boss for wear and damage, paying special attention to the splines



18.14 Measure the thickness of the friction plates

housing and rear thrust washer (see illustration).

11 The clutch damper can be left in position unless the clutch has been experiencing severe chattering (juddering). If it's necessary to remove it, remove the wire retainer ring, metal plate, clutch boss spring and seat plate (see illustration 18.4).

Inspection

12 Examine the splines on both the inside and the outside of the clutch boss (see illustration). If any wear is evident, replace the clutch hub with a new one.

13 Measure the free length of the clutch springs. Replace the springs as a set if any

are not within the values listed in this Chapter's Specifications.

14 If the lining material of the friction plates smells burnt or if it's glazed, new parts are required. If the steel clutch plates are scored or discoloured, they must be replaced with new ones. Measure the thickness of each friction plate (see illustration) and compare the results to this Chapter's Specifications. Replace the friction plates as a set if any are near the wear limit.

15 Lay the metal plates, one at a time, on a perfectly flat surface (such as a piece of plate glass) and check for warpage by trying to slip a gauge between the flat surface and the plate (see illustration). The feeler gauge should be the same thickness as the warpage limit listed in this Chapter's Specifications. Do this at several places around the plate's circumference. If the feeler gauge can be slipped under the plate, it is warped and should be replaced with a new one.

16 Check the tabs on the friction plates for excessive wear and mushroomed edges. They can be cleaned up with a file if the deformation is not severe.

17 Check the edges of the slots in the clutch housing for indentations made by the friction plate tabs. If the indentations are deep they can prevent clutch release, so the housing should be replaced with a new one. If the indentations can be removed easily with a file, the life of the housing can be prolonged to an

extent. Check the driven gear on the input shaft, the clutch housing, as well as the oil pump drive gear, for wear or damaged teeth. If the pump drive gear is worn or damaged, replace it, the snap-ring and take it off (see illustration).

18 Check the clutch pressure plate, release bearing, boss, wire retainer, clutch boss spring, seat plate for wear and damage (if the release bearing is worn or damaged, replace it). Replace any worn or damaged parts.

19 Check the release bearing (see illustration) and clutch housing thrust plate for wear, damage or roughness. Replace them if their condition is uncertain or obviously bad. Check the bearing surface of the clutch housing and replace the housing if it's worn or damaged. Inspect the slots in the clutch housing and the driven gear in the oil pump gear and replace any worn or damaged parts.


20 Clean all traces of old gasket material from the clutch cover and its mating surface on the crankcase.

21 Check the clutch release mechanism. Clean the clutch cover for smooth operation. Disassemble it to clean and lubricate. Replace components as necessary (see illustration).

Installation

22 Install the oil pump drive gear on the clutch housing, using a new snap-ring.

23 Coat the inside of the clutch housing

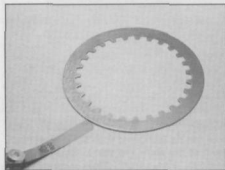


18.15 Check the metal plates for warpage



18.17 Remove the snap-ring (arrowed) and take off the oil pump drive gear if its damaged



18.19 Check the release bearing for worn or damaged rollers

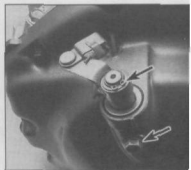

18.21 If necessary, remove the snap-ring and retaining bolt (arrowed) to remove the release mechanism from the clutch

engine oil and install it on the transmission shaft. Coat the thrust washer with engine oil, then install the thrust washer and clutch boss. Install a **new** clutch boss lockwasher and the nut. Hold the clutch boss with one of the methods used in Step 9, then tighten the nut to the torque listed in this Chapter's Specifications. Bend the lockwasher against the nut to secure it.

24 Install the clutch damper components (seat, clutch boss spring, clutch plate and wire retainer) if they were removed. Be sure both ends of the wire retainer fit into the hole in the clutch hub (see illustration).

25 Coat one of the friction plates with engine oil and install it on the clutch housing. Engage the tabs on the friction plate with the slots in the clutch housing.

26 Install a metal plate on top of the friction plate.

27 Coat the remaining friction plates with engine oil, then install alternating friction plates and metal plates until they're all installed (don't forget to stagger the metal plate tabs).


28 Coat the release bearing with oil and install the plate washer, bearing and pull rod in the pressure plate (see illustration 18.7). Make sure the gear teeth on the pull rod will face the rear of the engine when the pressure plate is installed.

29 Install the pressure plate, aligning the marks on pressure plate and clutch boss (see illustration).

30 Install the clutch springs, washers and pressure plate bolts, then tighten the bolts evenly in a criss-cross pattern to the torque listed in this Chapter's Specifications.

31 Make sure the clutch cover dowels are in position and install a new gasket. Make sure the gear teeth on the pull rod face the rear of the engine (see illustration), then install the clutch cover and push the release lever in to position the cover for tightening.

32 Tighten the clutch cover bolts evenly to

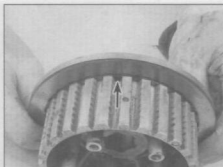

18.24 If you removed the clutch damper, be sure the wire retainer fits securely in its groove and both ends are fitted all the way through the hole (arrowed)

the torque listed in this Chapter's Specifications.

33 Fill the crankcase with the recommended type and amount of engine oil (see Chapter 1 and *Daily (pre-ride) checks*).

34 The remainder of installation is the reverse of the removal steps.

19 Clutch cable – removal and installation

1 Loosen the clutch cable nuts on the right side of the engine (see illustration 9.3 in Chapter 1). Disconnect the lower end of the cable from the release lever and the bracket on the engine.

2 Pull back the rubber cover from the clutch adjuster at the handlebar (see illustration 9.2 in Chapter 1). Loosen the lockwheel and the adjusting nut to create slack in the cable.

3 Pull the adjuster out of its slot in the clutch lever bracket, then rotate the cable to align it with the slot in the clutch lever and lower the cable end out of the clutch lever.

4 Installation is the reverse of the removal



18.29 Align the dots on the pressure plate and clutch boss (arrowed)

steps. Adjust the clutch lever freeplay (see Chapter 1).

20 Shift pedal and linkage – removal and installation

1 These models use a shift pedal and linkage rod connected to the shift shaft.

2 Set the bike on its centrestand (if equipped) or prop it securely upright.


3 Where necessary for access, remove the left footpeg bracket.

4 Look for an alignment mark on the end of the shift shaft next to the gap in the lever (see illustration). If it isn't visible, make your own.


5 Remove the pinch bolt and detach the shift lever from the shift shaft. Remove the shift pedal Allen bolt and take the pedal off.

6 Installation is the reverse of the removal steps. Tighten the bolt to the torque listed in this Chapter's Specifications.

7 To adjust the shift pedal height, loosen the locknuts, turn the knurled adjuster on the shaft and tighten the locknuts (see illustration 20.4). **Note:** The rear locknut has left-hand threads (loosens clockwise).

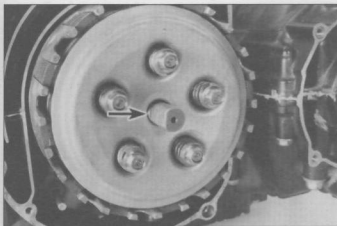

18.31 Before installing the clutch cover, make sure the pull rod gear teeth face the rear of the engine (arrowed)

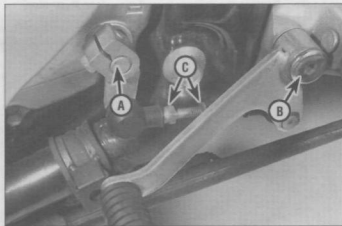

20.4 There should be a punch mark on the end of the shift shaft aligned with the lever gap (A); the shift pedal is secured by an Allen bolt (B); adjust the linkage with the adjusting nuts (C)



21.3 Remove the plastic spacer and check the condition of the seal (arrowed)

21 External shift mechanism – removal, inspection and installation

Removal


- 1 Remove the shift pedal and linkage (see Section 20).
- 2 Remove the engine sprocket cover (see Chapter 5).
- 3 Remove the plastic spacer from the shift shaft (see illustration).
- 4 Remove the clutch (see Section 18).
- 5 Pull the change lever away from the shift cam and slide the shift shaft and washer out of the crankcase (see illustrations).

Inspection

- 6 Inspect the shift shaft return springs. If they are worn or damaged, replace them.
- 7 Check the change shaft for bends and damage to the splines. If the shaft is bent, you can attempt to straighten it, but if the splines are damaged it will have to be replaced. Inspect the pawl and springs on the change shaft and replace the shaft if they're worn or damaged.
- 8 Check the condition of the stopper lever and spring. Replace the stopper lever if it's



21.5a Pull the change lever away from the shift cam and slide the shift shaft (arrowed) out of the crankcase ...

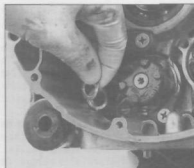

21.5b ... and remove the washer

worn where it contacts the shift cam. Replace the spring if it's distorted.

9 Inspect the straight detent pins on the end of the shift cam. If they're worn or damaged, you'll have to disassemble the crankcase to replace the shift cam.

10 Check the condition of the seal on the right side of the engine case. If it has been leaking, pry it out (see illustration 21.3). It's a good idea to replace it regardless of its condition, since gaining access to it requires a fair amount of work. Install a new seal with its closed side facing out. It should be possible to install the seal with thumb pressure, but if necessary, drive it in with a socket or piece of tubing the same diameter as the seal.

Installation

- 11 Remove the circlip and flat washer from the end of the shift shaft. Make sure the large washer is still on the shaft, positioned against the change lever.
- 12 Apply high-temperature grease to the lip of the seal. Wrap the splines of the shift shaft with electrical tape, so the splines won't damage the seal as the shaft is installed.
- 13 Slide the shaft into the crankcase. Engage the pawls with the pins on the shift cam and position the return spring over its guide bar (see illustration).

14 The remainder of installation is the reverse of the removal steps.

15 Refill the engine oil (see Chapter 1, *Daily (pre-ride) checks*).


22 Crankcase – disassembly and reassembly

1 To examine and repair or replace the crankshaft, starter chain and camshaft, connecting rods, bearings, transmission components, starter idler gears or motor clutch, the crankcase must be separated into two parts.


Disassembly

2 If the crankcase is being separated, remove the crankshaft, remove the cylinder head, cylinder block and pistons (see Sections 10, 13 and 14). If you're only separating the crankcase halves to disassemble the transmission shafts or remove the shift linkage, there's no need to remove top-end components. In all cases, remove the clutch (see Section 18).


3 Remove the oil pan and remove the pressure relief valves from the crankcase (Section 16). Unbolt the oil filter adapter to access to one of the case bolts (see illustration 22.3).

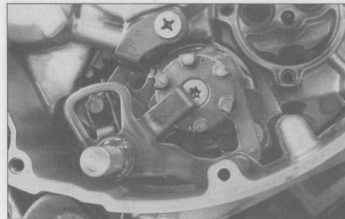

21.13 The shift mechanism should look like this when it's assembled

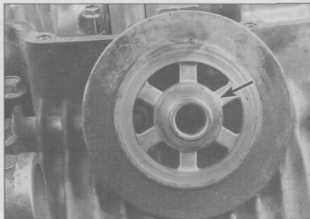


22.3 Remove the oil filter adapter bolt (arrowed) – you'll find it behind the adapter

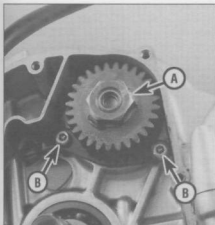

22.5 Bend back the lockwasher (A) and remove the primary drive gear nut.

Remove the bearing retainer by unscrewing the two Allen bolts (B), then pull off the gear and spacer

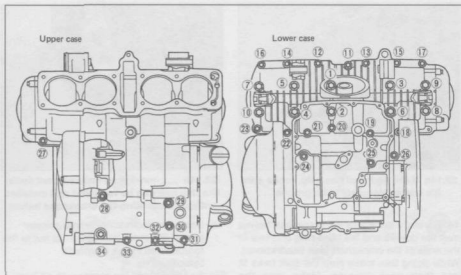

22.6 Crankcase bolt TIGHTENING sequence

on later UK models which have an oil cooler, remove the cooler assembly as described in Section 32.

4 Remove the timing plate and rotor (see Chapter 4) and alternator rotor (see Chapter 8).

5 Check the primary drive gear for wear or damage (see illustrations). If necessary, bend back the tabs of the lockwasher and remove the nut, then slide the gear off.

6 Remove the upper crankcase bolts, then the lower crankcase bolts, working in a sequence *opposite* that of the tightening sequence (see illustration).

7 Carefully separate the crankcase halves. Pry slowly at the single prying point (see illustration). If the halves won't come apart easily, make sure all fasteners have been removed. Don't use force or the cases will break. Don't pry against the crankcase mating surfaces or they will leak after reassembly.

8 Refer to Sections 23 through 29 for

information on the internal components of the crankcase.

Reassembly

9 Remove all traces of sealant from the crankcase mating surfaces. Be careful not to let any fall into the case as this is done. Check to make sure the O-rings and dowel pins are in place in their holes in the mating surface of the lower crankcase half (see illustration).

10 A common method of assembling motorcycle crankcases is to position the engine upside down and install the crankshaft and transmission shafts in it, then install the lower crankcase half on top of the upper crankcase half. Yamaha recommends that on these models, the shift forks and transmission shafts be installed in the upper case half and the crankshaft and connecting rods in the lower case half, then the upper case half be lowered onto the lower case half. This means that the transmission shafts will have to be


held in position until the upper case half is installed.

11 Pour some engine oil over the transmission gears, the crankshaft main bearings and the shift drum. Don't get any oil on the crankcase mating surfaces.

12 Apply a thin, even bead of Yamaha bond sealant or equivalent to the crankcase mating surfaces.

Caution: Don't apply an excessive amount of sealant. Don't let it contact the oil gallery O-ring. Don't apply it within 2 to 3 mm (5/64 to 1/8 inch) of the bearing inserts, as it will ooze out when the case halves are assembled and may obstruct oil passages and prevent the bearings from seating.

13 Check the position of the shift cam, shift forks and transmission shafts – make sure they're in the neutral position. In this condition it will be possible to rotate each pair of gears independently of the other gears on the shafts.

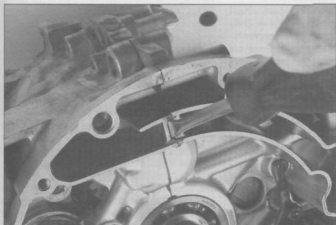


22.7 Pry slowly at the prying point




22.9 The dowel inside the case has an O-ring (arrowed)



22.14a If the end seal has a lip, make sure it's seated securely in its groove . . .

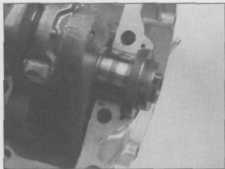

22.14b . . . non-lipped replacement seals like this one can be removed and installed without separating the crankcase halves

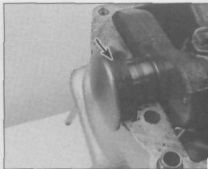

22.14c Coat the outer circumference of the end plug with a thin layer of sealer (arrowed)

14 Carefully assemble the crankcase halves over the dowels and the blind plug and seal at the ends of the crankshaft (see illustrations). While doing this, make sure the shift forks fit into their gear grooves. Make sure the crankshaft blind plug and seal are positioned correctly in the case grooves. Check the input and output shaft bearings to ensure that the bearing retainers are installed correctly.

Caution: The crankcase halves should fit together completely without being forced. If they're slightly apart, **DO NOT** force them together by tightening the crankcase bolts. The most likely reason they're apart is that the transmission bearing pins aren't aligned with their holes. If the pins are forced against the crankcase halves, the cases will crack and have to be replaced.

15 Install the crankcase bolts (and washers, if equipped) in the correct holes (see illustration 22.6). Bolt 32 secures a wiring harness retainer. Tighten the bolts in two or three steps, in the correct sequence, to the torque listed in this Chapter's Specifications.

16 Install the oil pan (see Section 16).

17 Turn the transmission shafts to make sure they turn freely. Also make sure the crankshaft turns freely.

18 The remainder of installation is the reverse of removal, with the following additions:

- a) Once the external shift linkage is installed, shift the transmission through all the gear positions and back to Neutral.



23.3 Small burrs can be removed from the gasket surfaces with a fine file or sharpening stone (be sure to remove any grit or metal particles when you're done)

23 Crankcase components – inspection and servicing

1 After the crankcases have been separated and the crankshaft, shift cam and forks and transmission components removed, the crankcases should be cleaned thoroughly with new solvent and dried with compressed air.

2 Remove any oil passage plugs that haven't already been removed. All oil passages should be blown out with compressed air.

3 All traces of old gasket sealant should be removed from the mating surfaces. Minor damage to the surfaces can be cleaned up with a fine file or sharpening stone (see illustration).

Caution: Be very careful not to nick or gouge the crankcase mating surfaces or leaks will result. Check both crankcase halves very carefully for cracks and other damage.

4 Check the starter chain and cam chain guides for wear (see Section 27). If they appear to be worn excessively, replace them.

5 If any damage is found that cannot be repaired, replace the crankcase halves as a set.

24 Main and connecting rod bearings – general note

1 Even though main and connecting rod bearings are generally replaced with new ones during the engine overhaul, the old bearings should be retained for close examination as they may reveal valuable information about the condition of the engine.

2 Bearing failure occurs mainly because of lack of lubrication, the presence of dirt or

other foreign particles, overloading the engine and/or corrosion. Regardless of the cause of bearing failure, it must be corrected before the engine is reassembled to prevent it from happening again.

3 When examining the bearings, remove main bearings from the case halves and rod bearings from the connecting rods. Caps and lay them out on a clean surface in the same general position as their location in the crankshaft journals. This will enable you to match any noted bearing problems with corresponding crankshaft journal.

4 Dirt and other foreign particles get into the engine in a variety of ways. It may be the engine during assembly or it may get through filters or breathers. It may get into the oil and from there into the bearings. No chips from machining operations and no engine wear are often present. Abrasives sometimes left in engine components in reconditioning operations such as cylinder honing, especially when parts are thoroughly cleaned using the proper cleaning methods. Whatever the source, these foreign objects often end up imbedded in the bearing material and are easily recognized. Large particles will be imbedded in the bearing will score or gouge the bearing and journal. The best prevention for this cause of bearing failure is to clean all parts thoroughly keep everything spotlessly clean during engine reassembly. Frequent and regular filter changes are also recommended.

5 Lack of lubrication or lubrication breakdown has a number of interrelated causes. Excessive heat (which thins the oil, overloading (which squeezes the oil from the bearing face) and oil leakage or throw-off (from excessive bearing clearances, low pump or high engine speeds) all contribute to lubrication breakdown. Blocked oil passages will also starve a bearing and destroy it. Lack of lubrication is the cause of bearing failure, the bearing material is wiped off the journal by the steel backing of the bearing. Temperatures may increase at the point where the steel backing and the journal turn blue from overheating.

6 Riding habits can have a definite effect on bearing life. Full throttle low speed operation

or lugging (labouring) the engine, puts very high loads on bearings, which tend to squeeze out the oil film. These loads cause the bearings to flex, which produces fine cracks in the bearing face (fatigue failure). Eventually the bearing material will loosen in pieces and tear away from the steel backing. Short trip driving leads to corrosion of bearings, as the engine doesn't have a chance to reach temperatures sufficient to drive off the condensed water and corrosive gases that are produced. These products collect in the engine oil, forming acid and sludge. As the oil is carried to the engine bearings, the acid attacks and corrodes the bearing material.

7 Incorrect bearing installation during engine assembly will lead to bearing failure as well. Tight fitting bearings which leave insufficient bearing oil clearances result in oil starvation. Dirt or foreign particles trapped behind a bearing insert result in high spots on the bearing which lead to failure.

8 To avoid bearing problems caused during initial start-up, clean all parts thoroughly before reassembly, double check all bearing clearance measurements and lubricate the new bearings with engine assembly lube or moly-based grease during installation.

25 Crankshaft and main bearings – removal, inspection and installation

Crankshaft removal

1 Before removing the crankshaft check the endplay, using a dial gauge mounted in line with the crankshaft. Yamaha doesn't provide endplay specifications, but if the endplay is excessive (more than about 0.15 mm or 0.006 inch), consider replacing the case halves.


2 Remove the starter clutch (see Section 31).
3 Lift the crankshaft out, together with the connecting rods, cam chain and starter chain and set them on a clean surface (see illustration).

4 The main bearing inserts can be removed from their saddles by pushing their centres to the side, then lifting them out (see illustration). Keep the bearing inserts in order. The main bearing oil clearance should be checked, however, before removing the inserts.

Inspection

5 If you haven't already done so, mark and remove the connecting rods from the crankshaft (see Section 26).

6 Clean the crankshaft with solvent, using a rifle-cleaning brush to scrub out the oil passages. If available, blow the crank dry with compressed air. Check the main and connecting rod journals for uneven wear, scoring and pits. Rub a copper coin across the journal several times – if a journal picks up copper from the coin, it's too rough. Replace the crankshaft.

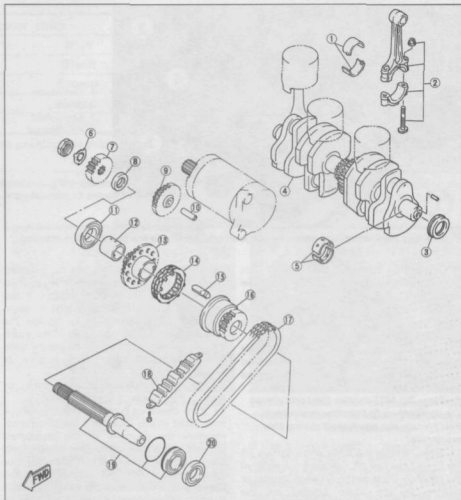

25.3 Crankshaft and connecting rod details

- | | | |
|---------------------------|------------------------|------------------------------|
| 1 Connecting rod bearings | 8 Spacer | 15 Damper segment |
| 2 Connecting rod | 9 Idle gear | 16 Driven gear |
| 3 Oil seal | 10 Idle gear shaft | 17 Starter chain |
| 4 Crankshaft | 11 Bearing | 18 Starter chain upper guide |
| 5 Main bearings | 12 Spacer | 19 Starter clutch shaft |
| 6 Lockwasher | 13 Starter clutch gear | 20 Oil seal |
| 7 Primary drive gear | 14 Starter clutch | |


7 Check the camshaft chain sprocket and starter chain sprocket on the crankshaft for chipped teeth and other wear. If any undesirable conditions are found, replace the crankshaft. Check the chains as described in Section 27. Check the rest of the crankshaft for cracks and other damage. It should be Magnafloxed to reveal hidden cracks – a dealer service department or motorcycle machine shop should handle this procedure.

8 Set the crankshaft on V-blocks and check the runout with a dial gauge touching each of the main journals, comparing your findings with this Chapter's Specifications. If the runout exceeds the limit, replace the crank.


Main bearing selection

9 To check the main bearing oil clearance, clean off the bearing inserts (and reinstall

them, if they've been removed from the case) and lower the crankshaft into the upper half of the case. Cut four pieces of Plastigauge (type

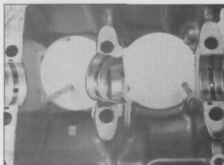

25.4 Push the centres of the bearing inserts to the side to tilt them out of their saddles

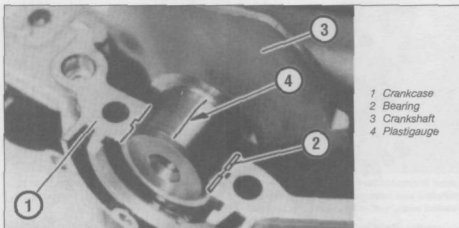

25.9 Lay the Plastigauge strips on the journals, parallel to the crankshaft centreline

HPG-1) and lay them on the crankshaft main journals, parallel with the journal axis (see illustration).

10 Very carefully, guide the lower case half down onto the upper case half. Install the crankshaft retaining bolts (case bolts 1 through 10) and tighten them, using the recommended sequence, to the torque listed in this Chapter's Specifications (see Section 22 and illustration 22.6).

Caution: DO NOT tighten the bolts unless the case halves fit together completely. Don't rotate the crankshaft during this procedure!

11 Now, remove the bolts and carefully lift the lower case half off. Compare the width of the crushed Plastigauge on each journal or bearing to the scale printed on the Plastigauge envelope to obtain the main bearing oil clearance (see illustration). Write down your findings, then remove all traces of Plastigauge from the journals or bearings, using your fingernail or the edge of a credit card.




25.16a These numbers on the crankshaft indicate journal thickness; reading from left to right, the first five numbers correspond with main bearing journals no. 1 through 5 – the next four numbers correspond with connecting rod journals no. 1 through 4

12 If the oil clearance falls into the specified range, no bearing replacement is required (provided they are in good shape). If the clearance is more than the standard range, but within the service limit, replace the bearing inserts with new ones of the same thickness and check the oil clearance once again. Replace all of the inserts, as a set, at the same time.

13 The clearance should be within the range listed in this Chapter's Specifications.

14 If the clearance is greater than the service limit listed in this Chapter's Specifications, measure the diameter of the crankshaft journals with a micrometer (see illustration). Yamaha doesn't provide journal diameter or wear specifications, but by measuring the diameter at a number of points around each journal's circumference, you'll be able to determine whether or not the journal is out-of-round. Take the measurement at each end of the journal, near the crank throws, to determine if the journal is tapered. Out-of-round and taper should not exceed 0.04 millimetres (0.001 inch).


15 If any crank journal is out-of-round or tapered or the bearing clearance is beyond the limit listed in this Chapter's Specifications with new bearings, replace the crankshaft and bearings as a complete set.

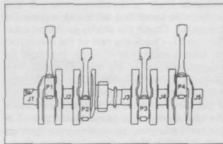

25.16b The main and rod journals are numbered from the left to the right side of the engine (J = main bearing journal; P = pin – crankpin or connecting rod journal)




25.11 Measuring the width of the crushed Plastigauge (be sure to use the correct scale – standard and metric are included)

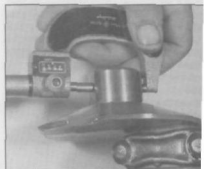

25.14 Measure the diameter of each crankshaft journal at several points to detect taper and out-of-round conditions

16 Use the number marks on the crank and on the case to determine the bearing sizes required. The first five numbers on crankshaft web are the main journal numbers starting with the left journal (see illustrations). These correspond with numbers at the rear of the upper crank half (see illustration). **Note:** Where only one size code number is found on the crankcase half this indicates that all bearings are the same code. To determine bearing number for each bearing, subtract crankshaft number from the case number. For example, the crankshaft number for journal 1 is 2 and the case number for journal 1 is 4. Subtracting 2 from 4 produces 2,

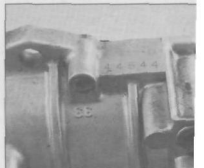

25.16c The numbers on the crankshaft correspond with the crankshaft main journals no. 1 through 5

Bearing color code	
No. 1	Blue
No. 2	Black
No. 3	Brown
No. 4	Green
* No. 5	Yellow

* No. 5 applies only to the crankshaft main bearing selection.

25.16d Calculate the bearing number by subtracting the crankshaft number from the crankcase number, then use the bearing number to select a colour code

is the bearing number for journal no. 1. According to the accompanying chart, bearing no. 2 is colour-coded black (see illustration). The colour codes are painted on the edges of the bearings (see illustration).

Installation

17 Clean the bearing saddles in the case halves, then install the bearing inserts in their saddles in the case (see illustrations). When installing the bearings, use your hands only – don't tap them into place with a hammer! Do not get fingerprints on the front or rear of the bearings.

18 Lubricate the bearing inserts with engine assembly lube or moly-based grease.


19 You can install the connecting rods on the crankshaft at this point if the top end was removed from the engine (see Section 26).

20 Loop the camshaft chain and the starter chain over the crankshaft and lay them onto their sprockets.

21 If the connecting rods are in the engine, place short pieces of hose over the studs to protect the crankshaft as you remove them.

22 Carefully lower the crankshaft into place. If the connecting rods are in the engine, guide them onto the crankshaft journals and refit their caps (see Section 26).

23 Assemble the case halves (see Section 22) and check to make sure the crankshaft and the transmission shafts turn freely.

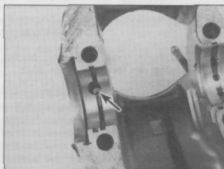


25.17a Make sure the oil holes are clear (arrowed) . . .


26 Connecting rods and bearings – removal, inspection and installation

Removal

1 Before removing the connecting rods from the crankshaft, measure the side clearance of each rod with a feeler gauge (see illustration). If the clearance on any rod is greater than that listed in this Chapter's Specifications, that rod may have to be replaced with a new one. Check the crankshaft journal for excessive, if excessive wear is evident, replace the crankshaft and/or the connecting rods as a set.

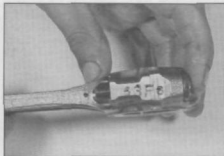

26.2a Make a cylinder number mark on the connecting rod; the letter stamped across the rod cap is a guide for reassembly; the number is used in bearing selection

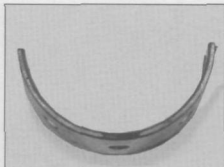

25.16e The colour codes painted on the sides of the bearings identify bearing thickness



25.17b . . . then install the bearings in their saddles – engage the locating tab securely in its slot (arrowed)

2 Use a centre punch or number stamp to mark the position of each rod and cap, relative to its position on the crankshaft (see illustration). The printed numbers on the rods don't indicate cylinder number; they're used for bearing selection. Yamaha specifies that the letter 'A' cast in the side of each connecting rod face the right side of the engine. If you find another mark, such as the letter 'C' (see illustration), carefully note which end of the crankshaft it faces before removing the connecting rod cap.


3 Unscrew the bearing cap nuts, separate the cap from the rod, then detach the rod from the crankshaft. If the cap is stuck, tap on the




26.2b If there's an A mark on the side of the connecting rod, it faces the right side of the engine; if there's any other mark, carefully note which way it faces before removing the connecting rod



26.1 Measure the clearance between the crankshaft and the connecting rod with a feeler gauge

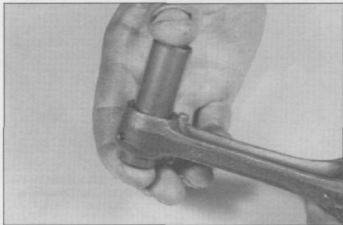

26.5 Slip the piston pin into the rod and rock it back-and-forth to check for looseness

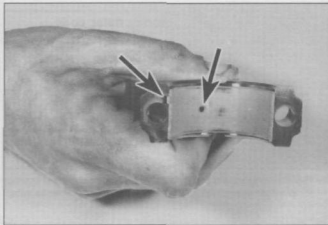

26.20 Be sure the tab fits in the notch and the oil hole in the upper bearing aligns with the hole in the connecting rod (arrows)

ends of the rod bolts with a soft-faced hammer to free them.

4 Separate the bearing inserts from the rods and caps, keeping them in order so they can be reinstalled in their original locations. Wash the parts in solvent and dry them with compressed air, if available.

Inspection

5 Check the connecting rods for cracks (this may require taking the rods to a machine shop) and other obvious damage. Lubricate the piston pin for each rod, install it in the proper rod and check for play (see illustration). If it wobbles, replace the connecting rod and/or the pin.

6 Refer to Section 24 and examine the connecting rod bearing inserts. If they are scored, badly scuffed or appear to have been seized, new bearings must be installed. Always replace the bearings in the connecting rods as a set. If they're badly damaged, check the corresponding crankshaft journal. Evidence of extreme heat, such as discoloration, indicates that lubrication failure has occurred. Be sure to thoroughly check the oil passages, oil pump and pressure relief valves as well as all oil holes and passages for debris before reassembling the engine.

7 Have the rods checked for twist and bend at a dealer service department or motorcycle repair shop.

Connecting rod bearing selection

8 If the bearings and journals appear to be in good condition, check the oil clearances as follows:

9 Start with the rod for the no. 1 cylinder. Wipe the bearing inserts and the connecting rod and cap clean, using a lint-free cloth.

10 Install the bearing inserts in the connecting rod and cap. Make sure the tab on the bearing engages with the notch in the rod or cap.

11 Wipe off the connecting rod journal with a lint-free cloth. Lay a strip of Plastigauge (type

HPG-1) across the top of the journal, parallel with the journal axis (see illustration 25.9).

12 Position the connecting rod on the bottom of the journal, then install the rod cap and nuts. Tighten the nuts to the torque listed in this Chapter's Specifications, but don't allow the connecting rod to rotate at all.

13 Unscrew the nuts and remove the connecting rod and cap from the journal, being very careful not to disturb the Plastigauge. Compare the width of the crushed Plastigauge to the scale printed in the Plastigauge envelope (see illustration 25.11) to determine the bearing oil clearance.

14 If the clearance is within the range listed in this Chapter's Specifications and the bearings are in perfect condition, they can be reused. If the clearance is beyond the standard range, replace the bearing inserts with new inserts that have the same colour code, then check the oil clearance once again. Always replace all of the inserts at the same time.

15 The clearance should be within the range listed in this Chapter's Specifications.

16 If the clearance is greater than the maximum clearance listed in this Chapter's Specifications, measure the diameter of the connecting rod journal with a micrometer. As with the main bearing journals, Yamaha doesn't provide diameter or wear limit specifications, but by measuring the diameter at a number of points around the journal's circumference, you'll be able to determine whether or not the journal is out-of-round. Take the measurement at each end of the journal to determine if the journal is tapered.

17 If any journal is tapered or out-of-round or bearing clearance is beyond the maximum listed in this Chapter's Specifications, replace the crankshaft.

18 Each connecting rod has a 3 or 4 stamped on it in ink (see illustration 26.2a). Subtract this number from the connecting rod journal number on the crankshaft to get a bearing number (see illustrations 25.16a and 25.16b). For example, the number on the connecting rod shown in illustration 26.2a is 3.

The corresponding number for the connecting rod's journal, stamped into the crankshaft, is 2. Subtracting 2 from produces 1, which is the bearing number that journal. According to the chart in illustration 25.16d, bearing no. 1 is colour coded blue. The colour codes are painted the edges of the bearings (see illustration 25.16e).

19 Repeat the bearing selection procedure for the remaining connecting rods.

Installation

20 Wipe off the bearing inserts, connecting rods and caps. Install the inserts into the rods and caps, using your hands only, making sure the tabs on the inserts engage with the notches in the rods and caps and the oil hole in rod and bearing line up (see illustration). When all the inserts are installed, lubricate them with engine assembly lube or moly-based grease, don't get any lubricant on the back side of the bearings in the rod or cap.

21 Assemble each connecting rod to the proper journal, referring to the previously applied cylinder numbers. Make sure the letter on the rod is facing the proper direction (see Step 2). Also, the letter present at the rod/cap seam on one side of the connecting rod should fit together perfectly when the rod and cap are assembled (see illustration 26.2a). If it doesn't, the wrong cap is on the rod. Fix this problem before assembling the engine any further.

22 When you're sure the rods are positioned correctly, lubricate the threads of the rod bolts with moly-based grease and tighten the nuts to the torque listed in this Chapter's Specifications. **Note:** Tighten the nuts in continuous motion. If you must stop before the nuts are fully tightened, loosen them completely, then retighten them to the specified torque.

23 Turn the rods on the crankshaft. If any of them feel tight, tap on the bottom of the connecting rod caps with a soft-faced hammer – this should relieve stress and free



27.7 This bolt secures the cam chain rear (intake side) guide; don't remove it unless you plan to separate the case halves

them up. If it doesn't, recheck the bearing clearance.

24 As a final step, recheck the connecting rod side clearances (see Step 1). If the clearances aren't correct, find out why before proceeding with engine assembly.

27 Starter chain, camshaft chain and guides – removal, inspection and installation

Removal

Starter chain and camshaft chain


- 1 Remove the engine (see Section 5).
- 2 Separate the crankcase halves (see Section 22).
- 3 Remove the starter clutch shaft (see Section 31).
- 4 Remove the crankshaft (see Section 25).
- 5 Remove the chains from the crankshaft.

Chain guides

- 6 The exhaust side (front) cam chain guide can be lifted from the cylinder head (see illustration 9.8b).
- 7 The cam chain rear guide is held in position by a bolt that's accessible from outside the crankcase (see illustration). **Note:** Don't remove this bolt unless you plan to disassemble the crankcase; there's no way to



27.9 The starter chain tensioner piston is secured to the crankcase by two Allen bolts

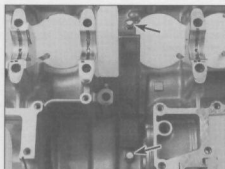

27.8a The starter chain upper guide is secured by two bolts (arrowed); use non-permanent thread locking agent on the bolts during installation

install it unless the crankcase halves are separated.

8 The starter chain guides in the upper and lower case halves are secured by two bolts each (see illustrations).

Starter chain tensioner

9 Remove the Allen bolts and lift off the starter chain upper guide (see illustration 27.8b). Remove the piston and spring from the tensioner (see illustration). Remove the tensioner Allen bolts and detach the tensioner from the crankcase.

Inspection

Starter chain and camshaft chain


10 Check the chains for binding and obvious damage. Lay the starter drive chain onto a flat surface. The inner edges of the chain should not touch (see illustration). If they do, or if the chain appears worn, replace it. The camshaft drive chain should be checked for cracks and stiff links and to see if the rollers are in good working order.

Starter chain tensioner

11 Check the tensioner piston for wear and the spring for weakness or breakage, replacing them as necessary. Blow air through the metal oil tube to make sure it's clear.

Chain guides

12 Check the guides for deep grooves,

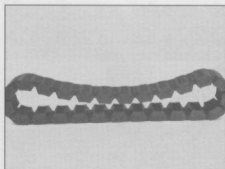

27.10 Replace the starter chain if it's worn or damaged – when it's in this position the inner edges shouldn't touch



27.8b The starter chain lower guide is secured to its bracket by a clip and pivot pin; the bracket is secured to the case by two Allen bolts

cracking and other obvious damage, replacing them if necessary.

Installation


13 Installation of these components is the reverse of the removal procedure, with the following additions:

- a) When installing the starter chain guide, apply a non-hardening thread locking compound to the threads of the bolts. Tighten the bolts to the torque listed in this Chapter's Specifications.
- b) Apply engine oil to the faces of the guides and to the chains.
- c) Use a new sealing washer on the exhaust side cam chain guide bolt. Tighten the bolt securely, but take care not to strip out the threads in the case.


28 Transmission shafts – removal and installation

Removal

- 1 Remove the engine and clutch, then separate the case halves (see Sections 5, 18 and 22).
- 2 Lift out the mainshaft, then the driveshaft (see illustration). If they are stuck, use a soft-faced hammer and gently tap on the bearings

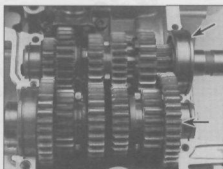

28.2 Lift out the mainshaft (upper arrow) and the driveshaft (lower arrow)

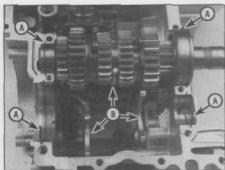

28.4 Be sure the bearing retainer half-rings (A) are pushed down into their slots; there's one at the end of each shaft – engage the shift forks (B) with the sliding gear grooves as the transmission shafts are installed

on the ends of the shafts to free them. Be careful not to lose the bearing end caps and bearing retainer half-rings.

3 Refer to Section 29 for information pertaining to transmission shaft service and Section 30 for information pertaining to the shift cam and forks.

Installation

4 Carefully lower each shaft into place, making sure the shift forks engage the grooves in the gears (see illustration 28.2). The bearing end caps should be held in place with a little moly lube. The bearing retainer half-rings should fit into the locating grooves in the crankcase and the ball bearing outer races (see illustration).

Caution: If the rings are out of position and you try to force the crankcase halves together by tightening the bolts, the crankcase halves will crack and will have to be replaced.

5 The remainder of installation is the reverse of removal.

6 Make sure the gears are in the neutral

position. When this occurs, each pair of gears can be rotated independently of the others.


29 Transmission shafts – disassembly, inspection and reassembly



When disassembling the transmission shafts, place the parts on a long rod or thread a wire through them to keep them in order and facing the proper direction.

1 Remove the shafts from the case (see Section 28).

2 A hydraulic press is required at several points to disassemble and reassemble the shafts. If you don't have one, it may be more

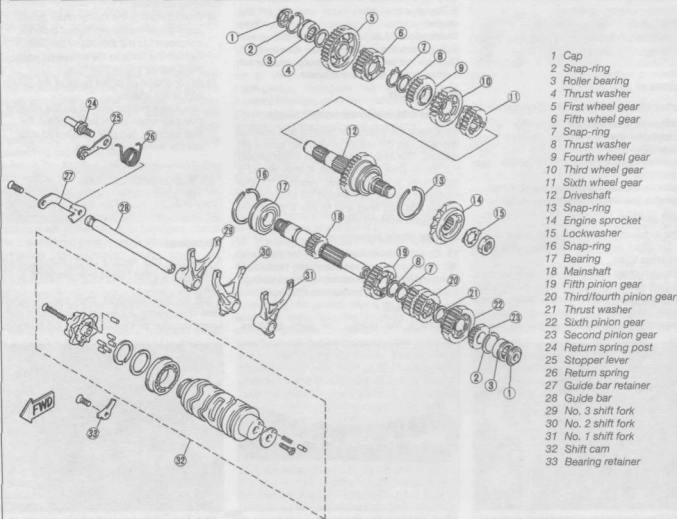


- 1 Cap
- 2 Snap-ring
- 3 Roller bearing
- 4 Thrust washer
- 5 First wheel gear
- 6 Fifth wheel gear
- 7 Snap-ring
- 8 Thrust washer
- 9 Fourth wheel gear
- 10 Third wheel gear
- 11 Sixth wheel gear
- 12 Driveshaft
- 13 Snap-ring
- 14 Engine sprocket
- 15 Lockwasher
- 16 Snap-ring
- 17 Bearing
- 18 Mainshaft
- 19 Fifth pinion gear
- 20 Third/fourth pinion gear
- 21 Thrust washer
- 22 Sixth pinion gear
- 23 Second pinion gear
- 24 Return spring post
- 25 Stopper lever
- 26 Return spring
- 27 Guide bar retainer
- 28 Guide bar
- 29 No. 3 shift fork
- 30 No. 2 shift fork
- 31 No. 1 shift fork
- 32 Shift cam
- 33 Bearing retainer


29.3a Transmission gears and shafts – exploded view



29.3b Remove the bearing and snap-ring from the end of the shaft

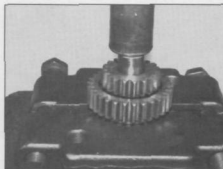

29.4 Press the shaft out of the sixth and second gears

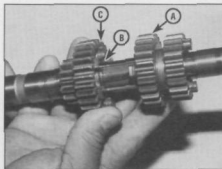

29.5 Remove the third-fourth pinion gear (A), snap-ring and thrust washer (B) and the fifth pinion gear (C)

convenient to have a dealer do the disassembly and reassembly.


Mainshaft

Disassembly


- 3 Slide the bearing off the mainshaft and remove the snap-ring (see illustrations).
- 4 Press the second and sixth pinion gears loose from the shaft together, then remove them from the shaft (see illustration).
- 5 Slide the third and fourth gear off the shaft (see illustration). Remove the snap-ring and thrust washer, then slide the fifth pinion gear off the shaft.

Inspection

- 6 Wash all of the components in clean solvent and dry them off. Rotate the ball bearing on the shaft, feeling for tightness, rough spots and excessive looseness and listening for noises. If the bearing is defective, press it off the shaft (see illustration).
- 7 Inspect the roller bearings for pitting and scoring and replace it if its condition seems at all doubtful.
- 8 Check the gear teeth for cracking and other obvious damage. Check the gear bushings and the surface in the inner diameter of each gear for scoring or heat discoloration (see illustration). If the gear or bushing is damaged, replace it. First pinion gear is integral with the mainshaft; the mainshaft must be replaced if the gear is defective.

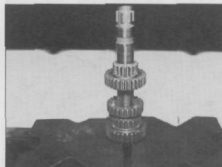

29.11a With fifth gear, its thrust washer and snap-ring and third-fourth gear on the shaft, press on sixth and second gears

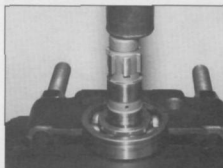

29.6 If the bearing needs to be replaced, press it off the shaft


- 9 Inspect the dogs and the dog holes in the gears for excessive wear. Replace the paired gears as a set if necessary.

- 10 Place the shaft in V-blocks and check runout with a dial gauge. Replace the shaft if runout exceeds the value listed in this Chapter's Specifications.


Reassembly

- 11 Reassembly of the mainshaft is the reverse of disassembly, with the following additions:

- a) Always use new snap-rings. The sharp side of the snap-ring faces away from the thrust washer; the rounded side faces towards the thrust washer.
- b) With fifth pinion gear, the thrust washer and snap-ring and third-fourth pinion gear

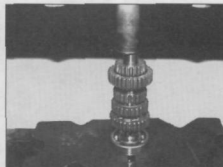

29.11b Position the bearing so its snap-ring groove is away from the gears, then press it onto the shaft

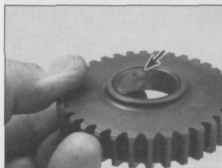

29.8 Replace the gears if their internal bushings (arrowed) are worn or damaged


on the mainshaft, press sixth and second gears onto the mainshaft together (see illustration). Check the side clearance between the gears to be sure they aren't pressed against each other.

- c) If the ball bearing was pressed off, press it on with the snap-ring groove away from the gears (see illustration).
- d) Check the positions of the gears on the assembled shaft to make sure they are correct (see illustration 28.2).


Driveshaft

Disassembly


- 12 To disassemble the driveshaft, refer to illustration 29.3a and the accompanying illustrations.

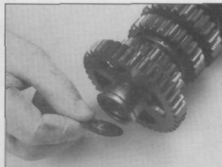


29.12a Remove the cup, bearing and thrust washer from the end of the shaft . . .

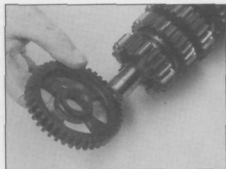


29.12b ... slide off first wheel gear ...

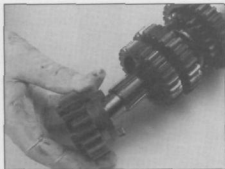


29.12c ... fifth wheel gear ...

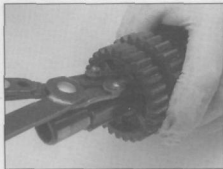

29.12d ... remove the snap-ring and thrust washer ...

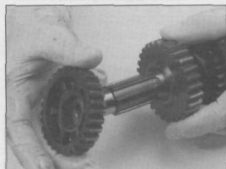

29.12e ... slide off fourth wheel gear ...

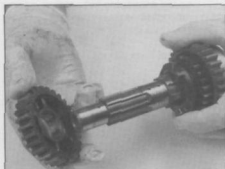

29.12f ... third wheel gear ...



29.12g ... and sixth wheel gear

Inspection

13 Refer to Steps 6 through 10 above to inspect the driveshaft components. If the ball bearing and seal collar need to be replaced, remove them with a press; otherwise, they can be left on the shaft.

Reassembly

14 Assembly is the reverse of the disassembly procedure. Use new snap-rings and lubricate the components with engine oil before assembling them. Check the assembled shaft to make sure the gears are in the correct positions (see illustration 28.2).

30 Shift cam and forks – removal, inspection and installation



Removal

- 1 Remove the engine, separate the crankcase halves and remove the transmission shafts (see Sections 5, 22 and 28).
- 2 Support the shift forks and pull the guide bar out.
- 3 Lift out the shift forks and place them in

their installed positions on the guide bar so they can be reinstalled correctly (see illustration).


- 4 Remove the shift cam retainers from the left side of the case (see illustration). Remove the neutral switch from the right side of the case (see Chapter 8).
- 5 Pull the shift cam out of the case.

Inspection


- 6 Check the edges of the grooves in the shift cam for signs of excessive wear. Check the pins on each end of the shift cam for wear and damage. If undesirable conditions are found,



30.3 Reassemble the forks onto the guide bar so they don't get mixed up; the number on each fork faces the right side of the engine when the forks are installed

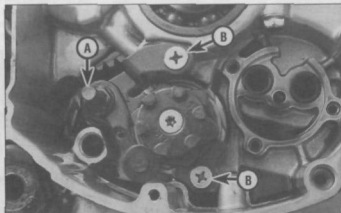

30.4 Bend back the lockwasher tabs and unscrew the return spring post (A); you'll probably need an impact driver to remove the screws (B)

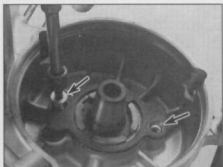

31.3a Remove the Torx screws (arrowed) and bearing retainer



31.3b Remove the oil nozzle (arrowed)



31.4 Remove the bearing housing, together with the oil seal

replace the shift cam and pins as an assembly.

7 Check the shift forks for distortion and wear, especially at the fork tips. If they are discoloured or severely worn they are probably bent. If damage or wear is evident, check the shift fork groove in the corresponding gear as well. Inspect the guide pins and the shaft bore for excessive wear and distortion and replace any defective parts with new ones.

8 Check the shift fork guide bar for evidence of wear, galling and other damage. Make sure the shift forks move smoothly on the bar. If the bar is worn or bent, replace it with a new one.

Installation

9 Installation is the reverse of removal, noting the following points:

- a) Lubricate all parts with engine oil before installing them.
- b) The shift forks are numbered 1 through 3, starting from the right side of the engine. The numbers cast in the forks face the right side of the engine.
- c) Engage the follower pin on each shift fork with the shift cam as you pass the guide bar through the fork.
- d) Apply a non-permanent locking agent to the threads of the shift cam retainer screws and tighten them to the torque listed in this Chapter's Specifications.




31.9a The idler gear should look like this when it's installed . . .


31 Starter clutch assembly – removal, inspection and installation

Removal

- 1 Remove the engine, separate the crankcase halves and remove the transmission shafts (see Sections 5, 22 and 28).
- 2 Refer to Section 22 and remove the primary drive gear, then remove the bearing retainer from behind the gear (see illustration 22.5).
- 3 On the other side of the engine, remove the bearing retainer bolts with a T30 Torx bit, then remove the retainer and oil spray nozzle (see illustrations).
- 4 Remove the bearing housing from the case. Hold the starter clutch with one hand and pull out the starter clutch shaft (see illustration).
- 5 Lift the starter idler gear from the case.
- 6 Lift the starter clutch from the chain and lift it out (see illustration).
- 7 Remove the Allen bolts that hold the starter chain tensioner pad to the case and remove the tensioner pad (see illustration 27.8b).
- 8 Remove the Allen bolts that hold the starter chain tensioner piston (see illustration 27.9) and unscrew the oil pressure relief valve used to secure the oil supply line (see Section 16).
- 9 Note how the starter idler gear is installed, then pull out its shaft with a magnet and remove the gear (see illustrations).

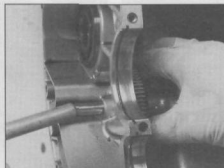


31.9b . . . pull its shaft out of the case with a magnet and lift out the gear

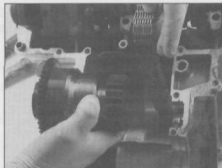


31.6 Lift the starter clutch out of the crankcase

Inspection

- 10 Separate the starter clutch components (see illustration 25.3). Check all parts for wear and damage and replace as necessary.
- 11 Inspect the rollers and replace any that show wear or damage (see illustration). Place the wheel gear in the starter clutch and try to turn it in both directions. It should only turn in one direction. If it turns both ways or neither way, remove the starter clutch snap-ring, then install a new starter clutch and snap-ring. Note the direction the rollers face and be sure to install the new starter clutch the same way. After installation, try to turn the wheel gear again; if it turns the wrong way, the starter clutch is installed backwards.
- 12 Rotate the bearing on the starter clutch shaft and check for roughness, looseness or

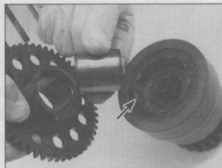

31.11 Lift the gear and spacer out of the starter clutch and inspect the rollers (arrowed)

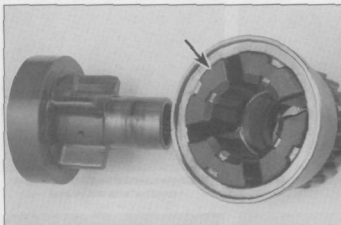

31.16 Check the starter clutch damper (arrowed) for damage

noise. If the bearing is bad, have it pressed off the shaft and a new one pressed on by a Yamaha dealer or machine shop.

13 The oil seal in the bearing housing should be replaced if it's worn. Since the seal is inexpensive and a good deal of work is required to get to it, it's a good idea to replace the seal as a matter of course. Tap the seal out of the housing with a hammer and a



32.4a Oil pipe clamp bolt (arrowed)

bearing driver or socket, then install a new one with the same tools.

14 Pull the piston and spring assembly from the starter drive chain tensioner housing.

15 Use a pair of pliers to remove the oil pipe from the bottom of the tensioner housing. Be sure to replace the O-ring whenever the oil pipe is removed.

16 Check the damper for wear or damage and replace it if problems are found (see illustration).


Installation

17 Installation is the reverse of the removal steps. Use non-permanent thread locking agent on the threads of the starter chain guide bolts, starter chain tensioner bolts and the bearing housing screws.

32 Oil cooler – removal and installation (1996-on UK models)



1 The engine/transmission oil is cooled by

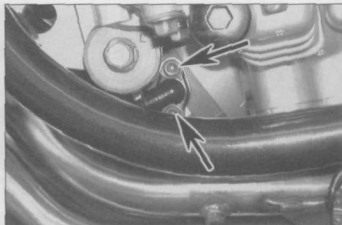

32.3 The oil pipes are secured to the cooler by two bolts on each side (arrowed)

routing it from the oil filter adapter on the front of the crankcase to a cooler radiator mounted on the frame. The oil is cooled by air flow through the radiator and returned to the other side of the filter adapter.


Removal

2 Drain the engine/transmission oil as described in Chapter 1. Remove the upper fairing as described in Chapter 7.

3 Remove the two bolts from each side of the oil filter adapter to free the oil pipes, noting the O-ring on each side (see illustration). It was necessary to remove one of the engine mounting bolt nuts on the right side to provide clearance for the oil pipe bolts to be withdrawn.

4 Remove the single bolt and spacer to free the pipe clamp (see illustration). Remove the two mounting bolts which retain the oil cooler radiator to the frame, then free the peg from its lug in the frame and carefully withdraw the oil cooler complete with pipes (see illustrations).


5 If required, the oil cooler pipes can be

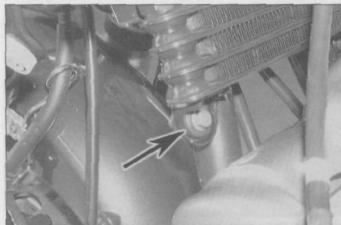

32.4b The oil cooler is retained to the frame by a bolt on each side (arrowed) ...




32.4c ... and by a peg on the top edge

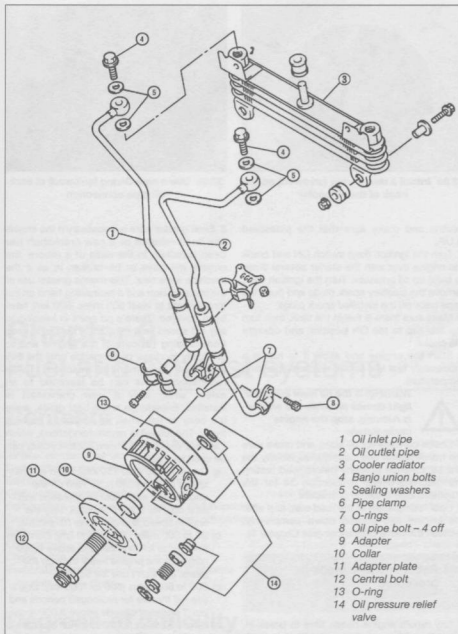

32.5 Oil cooler



32.6a Unscrew the oil filter

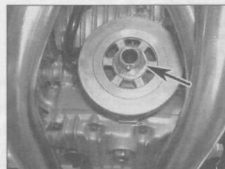

32.6b Remove the central bolt ...

disconnected from the radiator by removing their banjo union bolts (see illustration).

6 To remove the oil cooler adapter from the engine first unscrew the oil filter (see Chapter 1) (see illustration). Remove the central bolt and the cooler assembly (see illustrations).

7 To dismantle the cooler, lift off the adapter plate and collar (see illustrations). Remove the O-ring from the back of the adapter; a new one should be obtained for installation.

8 The cooler contains a pressure relief valve (see illustration). To dismantle the valve, remove the circlip from each side of the cooler and taken careful note of the fitted position of all components (see illustration 32.5).




32.6c ... to free the oil cooler assembly




32.7a Lift off the adapter plate ...




32.7b ... and remove the collar

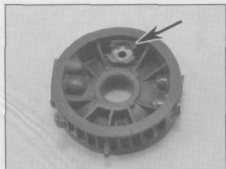

32.8 Pressure relief valve location (arrowed)

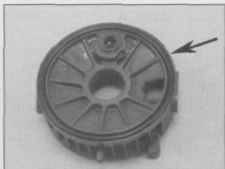

32.9a Install a new O-ring (arrowed) on the back of the oil cooler

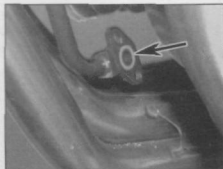

32.9b Use a new O-ring (arrowed) at each oil pipe connection

Installation

9 Installation is a reverse of the removal procedure, noting the following points:

- a) Ensure that the pressure relief valve components are assembled correctly.
- b) Use a new O-ring on the back of the cooler (see illustration) and on the back of the adapter plate.
- c) Assemble the cooler, collar and adapter plate, meshing the tab on the adapter plate against the triangular lug on the front of the cooler. Install the cooler assembly on the engine so that the tab on its finned section is approximately in the 12 o'clock position and engages the crankcase fins.
- d) Tighten all bolts to the specified torque.
- e) Use new O-rings between the oil pipes and adapter (see illustration).
- f) Use new sealing washers on each side of the oil pipe unions at the radiator connections.
- g) Refill the engine with oil as described in Chapter 1 and 'Daily (pre-ride) checks'.

neutral and make sure that the sidestand is UP.

2 Turn the ignition (key) switch ON and crank the engine over with the starter several times to build up oil pressure. Turn the Ignition OFF, remove the auxiliary spark plugs and push the caps back on the installed spark plugs.

3 Make sure there is fuel in the tank, then turn the fuel tap to the ON position and operate the choke.

4 Start the engine and allow it to run at a moderately fast idle until it reaches operating temperature.



Warning: If the oil level indicator light comes on while the engine is running, stop the engine immediately.

5 Check carefully for oil leaks and make sure the transmission and controls, especially the brakes, function properly before road testing the machine. Refer to Section 34 for the recommended break-in procedure.

6 Upon completion of the road test, and after the engine has cooled down completely, recheck the valve clearances (see Chapter 1).

2 Even greater care is necessary if the engine has been rebored or a new crankshaft has been installed. In the case of a rebore, the engine will have to be broken in as if the machine were new. This means greater use of the transmission and a restraining hand on the throttle until at least 500 miles (800 km) have been covered. There's no point in keeping to any set speed limit – the main idea is to keep from lugging (labouring) the engine and to gradually increase performance until the 500 mile (800 km) mark is reached. These recommendations can be lessened to an extent when only a new crankshaft is installed. Experience is the best guide, since It's easy to tell when an engine is running freely. The following recommendations, which Yamaha provides for new motorcycles, can be used as a guide:

- a) 0 to 90 miles (0 to 150 km): Keep engine speed below 5,000 rpm. Turn off the engine after each hour of operation and let it cool for 5 to 10 minutes. Vary the engine speed and don't use full throttle.
- b) 90 to 300 miles (150 to 500 km): Don't run the engine for long periods above 6,500 rpm. Rev the engine freely through the gears, but don't use full throttle.
- c) 300 to 600 miles (500 to 1000 km): Don't use full throttle for prolonged periods and don't cruise at speeds above 8,000 rpm.
- d) After 600 miles (1,000 km): Full throttle can be used. Don't exceed maximum recommended engine speed (redline).

3 If a lubrication failure is suspected, stop the engine immediately and try to find the cause. If an engine is run without oil, even for a short period of time, severe damage will occur.

33 Initial start-up after overhaul

1 Make sure the engine oil level is correct. Pull the caps off the spark plugs and connect four auxiliary spark plugs into the caps; rest the metal plug bodies on the cylinder head – it is important that they make good ground (earth) contact. Place the engine kill switch in the RUN position, shift the transmission into

34 Recommended break-in procedure

1 Any rebuilt engine needs time to break-in, even if parts have been installed in their original locations. For this reason, treat the machine gently for the first few miles to make sure oil has circulated throughout the engine and any new parts installed have started to seat.

Chapter 3

Fuel and exhaust systems

Contents

Air cleaner housing – removal and installation	12	Exhaust system – check	see Chapter 1
Air filter element – servicing	see Chapter 1	Exhaust system – removal and installation	13
Carburettor heater system – testing	15	Fuel pump – removal and installation	14
Carburettor overhaul – general information	5	Fuel system – check	see Chapter 1
Carburettor synchronisation	see Chapter 1	Fuel tank – cleaning and repair	3
Carburettors – disassembly, cleaning and inspection	7	Fuel tank and tap – removal and installation	2
Carburettors – float height and fuel level adjustment	9	General information	1
Carburettors – removal and installation	6	Idle fuel/air mixture adjustment – general information	4
Carburettors – separation and joining	8	Idle speed – check and adjustment	see Chapter 1
Choke cable – removal and installation	11	Throttle cable and grip – removal, installation and adjustment	10
Evaporative emission control system (California models only) – check	see Chapter 1	Throttle position sensor	see Chapter 4

Degrees of difficulty

Easy, suitable for novice with little experience



Fairly easy, suitable for beginner with some experience



Fairly difficult, suitable for competent DIY mechanic



Difficult, suitable for experienced DIY mechanic



Very difficult, suitable for expert DIY or professional



Specifications

Fuel tank

Fuel grade	Unleaded regular gasoline (petrol)
Tank capacity	17 litres (4.49 gal, 3.74 Imp gal)
Tank reserve capacity	3.5 litres (0.9 gal, 0.8 Imp gal)

Carburettor type

US	Mikuni BDS26 (four)
UK (1992-95), Canada	Mikuni BDST28 (four)
UK (1996-on)	Mikuni BDS28 (four)

Jet sizes

US

Main jet	102.5
Jet needle (clip position)	
1992 and 1993	4B10 (fixed)
1994-on	4B10-1 (fixed)
Needle jet	No. 1 and 4, O-4; no. 2 and 3, O-2
Pilot jet	17.5
Pilot screw	
1992 through 1996	Preset
1997-on	2 turns out

UK (1992-95), Canada

Main jet	No. 1 and 4, 105; no. 2 and 3, 102.5
Main air jet	70
Jet needle (clip position)	5CT (3.5)
Needle jet	0.4
Pilot jet	15
Pilot air jet	145
Pilot screw	2 turns out
Valve seat size	1.5
Starter (choke) jet	47.5 (see Note 1)

UK (1996-on)

Main jet	100
Main air jet	1.4
Jet needle (clip position) – 1996 and 1997 models	4BC12 (3)
Jet needle (clip position) – 1998-on models	4BC14 (3)
Needle jet	O-0
Pilot jet – 1996 and 1997 models	17.5
Pilot jet – 1998-on models	15
Pilot air jet – 1996 and 1997 models	140
Pilot air jet – 1998-on models	135
Pilot screw	3 turns out
Starter (choke) jet	20

Carburettor adjustments

US

Float height	7.2 mm (0.28 inch)
Fuel level	4 to 6 mm (0.16 to 0.24 inch)

UK (1992-95), Canada

Float height	11 to 13 mm (0.43 to 0.51 inch)
Fuel level	3 to 5 mm (0.12 to 0.20 inch)

UK (1996-on)

Float height	8.8 to 10.8 mm (0.35 to 0.43 inch)
Fuel level	8.5 to 9.5 mm (0.33 to 0.37 inch)

Torque settings

Exhaust pipe flange nuts	15 Nm (132 in-lbs) (see Note 2)
Exhaust pipe nuts	20 Nm (168 in-lbs)
Muffler/silencer bolts	
M8	20 Nm (168 in-lbs) (see Note 2)
M10	25 Nm (18 ft-lbs) (see Note 2)
Exhaust pipe joint bolts	20 Nm (168 in-lbs) (see Note 2)
Carburettor heater system thermostatswitch – 1992-95 models	14 Nm (124 in-lbs)

Notes

- 1993 and early 1994 UK and Canada models may be equipped with a 52.5 starter jet. See Section 7, Step 13.
- Lubricate the threads with anti-seize compound.

1 General information

The fuel system consists of the fuel tank, the fuel tap, a fuel pump, an in-line filter, the carburettors and the connecting lines, hoses

and control cables. A vacuum type fuel tap is fitted to all US models and 1992 to 1995 UK models; all later UK models use an electric fuel pump.

The carburettors used on these motorcycles are four constant vacuum Mikunis with butterfly-type throttle valves. For cold starting, an enrichment circuit is provided. The enrichment circuit is actuated

by the choke knob mounted on the carburettor assembly on early models and by a cable controlled by a handlebar lever on later models.

The exhaust system is a four-into-two design.

Many of the fuel system service procedures are considered routine maintenance items and for that reason are included in Chapter 1



2.3 Remove the screw and detach the fuel tap lever



2.4a Pull the fuel line off the tap stub ...



2.4b ... and the vacuum line off the intake manifold stub

2 Fuel tank and tap – removal and installation



Warning: Gasoline (petrol) is extremely flammable, so take extra precautions when you work on any part of the fuel system. Don't smoke or allow open flames or bare light bulbs near the work area, and don't work in a garage where a natural gas-type appliance (such as a water heater or clothes dryer) with a pilot light is present. Since gasoline is carcinogenic, wear latex gloves when there's a possibility of being exposed to fuel, and, if you spill any fuel on your skin, rinse it off immediately with soap and water. Mop up any spills immediately and do not store fuel-soaked rags where they could ignite. When you perform any kind of work on the fuel system, wear safety glasses and have a fire extinguisher suitable for a class B type fire (flammable liquids) on hand.

Fuel tank

- 1 Remove the seat (see Chapter 7).
- 2 Disconnect the cable from the negative terminal of the battery.
- 3 Remove the fuel tap lever (see illustration). This is necessary to prevent it from being broken off when the tank is removed.
- 4 Detach the fuel line from the tank and the

vacuum line from the intake manifold (see illustrations). On all except California models, detach the breather hose (see illustration). On California models, detach the canister hose.

5 The fuel tank is held in place at the forward end by a single bolt that secures it to the frame. The rear of the tank is fastened to a bracket by one bolt and a rubber insulator which fits through a flange projecting from the tank.

6 Remove the tank mounting bolts (see illustrations).

7 Lift the rear of the tank up, then carefully lift it away from the machine.

8 Before installing the tank, check the condition of the rubber mounting damper (see illustration) – if it's hardened, cracked, or shows any other signs of deterioration, replace it.

9 When replacing the tank, reverse the above procedure. Make sure the tank seats properly and does not pinch any control cables or wires.

Fuel tap

- 10 Remove the fuel tank as described above.
- 11 To detach the tap from the fuel tank, remove the two bolts with washers and carefully withdraw the tap, noting its oval sealing ring.
- 12 Replacement parts are available for the tap lever assembly. Remove the two screws to detach the lever plate from the front of the



2.4c Pull the breather line off the tank stub

tap and pick out the sealing ring and valve; take careful note of the valve position in the tap body before disturbing it. No parts are available for the diaphragm unit on the rear of the tap.

13 When refitting the tap into the tank, clean its sealing face and install a new oval sealing ring. Inspect the washers on the two mounting bolts and renew them if they are damaged.

3 Fuel tank – cleaning and repair

- 1 All repairs to the fuel tank should be carried out by a professional who has experience in this critical and potentially dangerous work.



2.6a Remove the mounting bolt at the rear of the tank ...



2.6b ... and at the front



2.8 Inspect the rubber mount at the rear of the tank

Even after cleaning and flushing of the fuel system, explosive fumes can remain and ignite during repair of the tank.

2 If the fuel tank is removed from the machine, it should not be placed in an area where sparks or open flames could ignite the fumes coming out of the tank. Be especially careful inside garages where a natural gas-type appliance is located, because the pilot light could cause an explosion.

4 Idle fuel/air mixture adjustment – general information

1 Due to the increased emphasis on controlling motorcycle exhaust emissions, certain governmental regulations have been formulated which directly affect the carburetion of this machine. In order to comply with the regulations, the carburetors on some models have a metal cover over the access hole for the pilot screw (which controls the idle fuel/air mixture) on each carburettor, so they can't be tampered with. These should only be removed in the event of a complete carburettor overhaul, and even then the screws should be returned to their original settings. The pilot screws on other models are accessible, but the use of an exhaust gas analyser is the only accurate way to adjust the idle fuel/air mixture and be sure the machine doesn't exceed the emissions regulations.

2 If the engine runs extremely rough at idle or continually stalls, and if a carburettor overhaul does not cure the problem, take the motorcycle to a Yamaha dealer service department or other repair shop equipped with an exhaust gas analyser. They will be able to properly adjust the idle fuel/air mixture to achieve a smooth idle and restore low speed performance.

5 Carburettor overhaul – general information

1 Poor engine performance, hesitation, hard starting, stalling, flooding and backfiring are all signs that major carburettor maintenance may be required.

2 Keep in mind that many so-called carburettor problems are really not carburettor problems at all, but mechanical problems within the engine or ignition system malfunctions. Try to establish for certain that the carburetors are in need of maintenance before beginning a major overhaul.

3 Check the fuel filter, the fuel lines, the tank breather line (except California models), the intake manifold hose clamps, the vacuum hoses, the air filter element, the cylinder compression, the spark plugs, and the

carburettor synchronisation before assuming that a carburettor overhaul is required.

4 Most carburettor problems are caused by dirt particles, varnish and other deposits which build up in and block the fuel and air passages. Also, in time, gaskets and O-rings shrink or deteriorate and cause fuel and air leaks which lead to poor performance.

5 When the carburettor is overhauled, it is generally disassembled completely and the parts are cleaned thoroughly with a carburettor cleaning solvent and dried with filtered, un lubricated compressed air. The fuel and air passages are also blown through with compressed air to force out any dirt that may have been loosened but not removed by the solvent. Once the cleaning process is complete, the carburettor is reassembled using new gaskets, O-rings and, generally, a new inlet needle valve and seat.

6 Before disassembling the carburetors, make sure you obtain new O-rings, some carburettor cleaner, a supply of rags, some means of blowing out the carburettor passages and a clean place to work. It is recommended that only one carburettor be overhauled at a time to avoid mixing up parts.

6 Carburetors and intake manifolds – removal and installation



Warning: Gasoline (petrol) is extremely flammable, so take extra precautions when you work on any part of the fuel system. Don't smoke or allow open flames or bare light bulbs near the work area, and don't work in a garage where a natural gas-type appliance (such as a water heater or clothes dryer) with a pilot light is present. Since gasoline is carcinogenic, wear latex gloves when there's a possibility of being exposed to fuel, and, if you spill any fuel on your skin, rinse it off immediately with soap and water. Mop up any spills immediately and do not store fuel-soaked rags where they could ignite. When you perform any kind of work

on the fuel system, wear safety glasses and have a fire extinguisher suitable for a class B type fire (flammable liquids) on hand.

Carburetors

Removal

1 Remove the fuel tank (see Section 2). Disconnect the negative cable from the battery.

2 Remove the air cleaner housing and disconnect the throttle cables (see Section 12 and 10). On 1996-on UK models and 1997-on US models, also disconnect the choke cable from the carburetors (see Section 11).

3 If you're working on a UK 1992 to 199 model or Canada model, label and disconnect the heater hoses and clamp their ends to prevent oil loss (see illustration 15.2). Also disconnect the wiring from the heater thermostat on no. 4 carburettor. On 1996-on UK models, disconnect the wire from each carburettor heater (see illustration 15.15a), including the earth (ground) wire connector, and unplug the wiring connector from the throttle position sensor (see illustration).

4 Lift the rubber heat shield off the carburettor assembly.

5 Loosen the clamping bands on the intake manifolds. Lift the carburettor assembly to disengage the carburetors from the intake manifolds (see illustration), then remove the carburettor assembly.

6 After the carburetors have been removed, stuff clean rags into the intake manifolds to prevent the entry of dirt or other objects.

7 Inspect the rubber clamps. If they're cracked or brittle, replace them.

Installation

8 Installation is the reverse of the removal. Steps, with the following additions:

- When connecting the oil hoses (where applicable), make sure the hoses are primed with engine oil to prevent air locks. Secure each hose with the spring clips.
- Adjust the throttle grip freeplay (see Chapter 1).



6.3 Disconnecting the TPS on 1996-on UK models



6.5 Loosen the clamping bands and lift the carburettor assembly away from the machine

- c) Check and, if necessary, adjust the idle speed and carburettor synchronisation (see Chapter 1).

Intake manifolds

9 Remove the carburettors.

10 Label any vacuum hoses connected to the intake manifolds, then disconnect them. Remove the two bolts which retain each intake manifold to the cylinder head to free the manifolds.

11 Installation is a reverse of the removal procedure, noting that new O-rings should be used at the manifold-to-cylinder head joint. Make sure that the vacuum hoses are a good fit on their unions and secured by the hose clips.

7 Carburettors – disassembly, cleaning and inspection




Warning: Gasoline (petrol) is extremely flammable, so take extra precautions when you work on any part of the fuel system. Don't smoke or allow open flames or bare light bulbs near the work area, and don't work in a garage where a natural gas-type appliance (such as a water heater or clothes dryer) with a pilot light is present. Since gasoline is carcinogenic, wear latex gloves when there's a possibility of being exposed to

fuel, and, if you spill any fuel on your skin, rinse it off immediately with soap and water. Mop up any spills immediately and do not store fuel-soaked rags where they could ignite. When you perform any kind of work on the fuel system, wear safety glasses and have a fire extinguisher suitable for a class B type fire (flammable liquids) on hand.

Disassembly


1 Remove the carburettors from the machine as described in Section 6. Set the assembly on a clean working surface. **Note:** Unless the O-rings on the fuel and vent fittings between the carburettors are leaking, don't detach the carburettors from their mounting brackets.

- 1 Heater thermoswitch
- 2 Overflow joint
- 3 Ventilation joint
- 4 Gasket
- 5 Fuel hose joint
- 6 Throttle stop screw
- 7 Stop screw
- 8 Float pivot pin
- 9 Float
- 10 Gasket
- 11 Drain screw
- 12 Main jet
- 13 Starter jet
- 14 Holder
- 15 Jet housing
- 16 Pilot air jet
- 17 Needle valve seat
- 18 O-ring
- 19 Pilot screw
- 20 Choke plunger
- 21 O-ring
- 22 Throttle piston support
- 23 Needle jet
- 24 Throttle piston assembly
- 25 O-ring
- 26 Jet needle components
- 27 Spring
- 28 Choke knob
- 29 No. 4 carburettor
- 30 No. 3 carburettor
- 31 No. 2 carburettor
- 32 No. 1 carburettor
- 33 Carburettor assembly

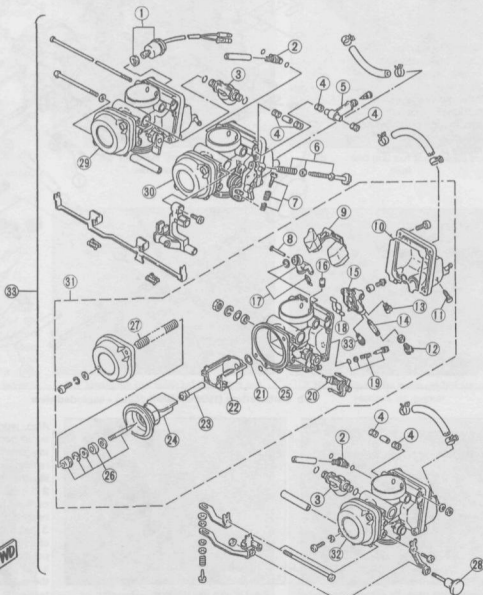


7.1a Carburettors (UK 1992 to 1995 and Canada models) - exploded view


- 1 Vacuum chamber cover
- 2 Spring
- 3 Jet needle assembly
- 4 Piston and diaphragm
- 5 Pilot screw assembly
- 6 Pilot air jet
- 7 Heater element
- 8 Needle jet
- 9 Washer
- 10 Plug
- 11 Gasket
- 12 Main jet holder
- 13 Main jet
- 14 Pilot jet
- 15 Float needle valve and seat
- 16 Float chamber gasket
- 17 Float chamber
- 18 Drain screw
- 19 Float
- 20 Float pivot pin
- 21 Throttle stop screw
- 22 Synchronising screw
- 23 Throttle cable bracket
- 24 Choke shaft
- 25 Choke plunger assembly
- 26 Choke cable bracket
- 27 Carburettor mounting brackets
- 28 Carburettor mounting bracket
- 29 Throttle position sensor

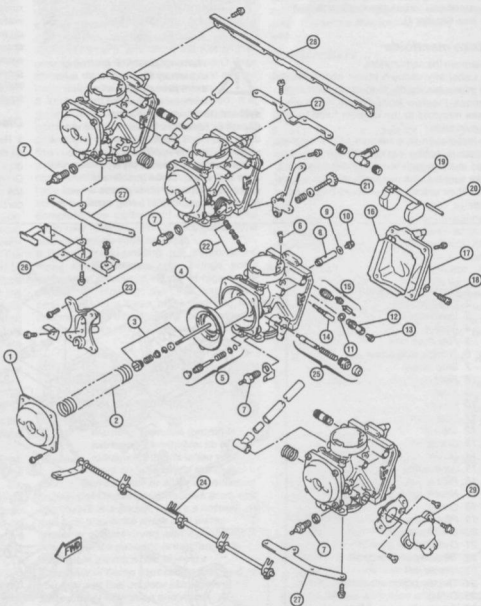

7.1b Carburetors (1996-on UK models) - exploded view

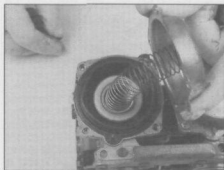

7.3 Remove the vacuum chamber cover screws and lift off the cover and spring; note the location of the diaphragm tab

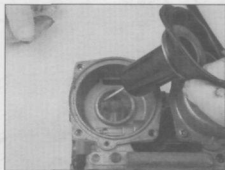

7.4 Lift out the throttle piston and jet needle


Also, work on one carburettor at a time to avoid getting parts mixed up. It's possible to overhaul the carburetors without removing them from the brackets (see illustrations).

2 If you're working on either of the centre carburetors, remove the throttle cable bracket.


3 Remove the screws and lift off the vacuum chamber cover (see illustration). Note the position of the rubber diaphragm.

4 Lift out the spring, then carefully separate the diaphragm from the carburettor without tearing it and lift out the throttle piston (see illustration).


5 Remove the float chamber screws and lift

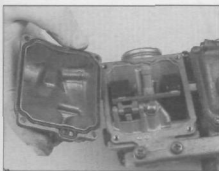

7.5 Remove the float chamber screws and lift off the float chamber and its O-ring

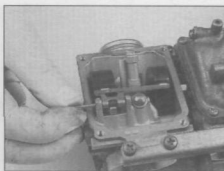

7.6 Remove the float pivot pin

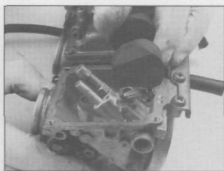

7.7 Lift out the float and unhook the needle valve

off the float chamber (see illustration). On 1992-95 UK models and Canada models disconnect the carburettor warmer system hoses which link the float chambers.

6 Remove the float pivot pin (see illustration). If necessary, push it out with a thin punch.

7 Lift out the float and unhook the needle valve (see illustration).

8 Remove the screw and retainer, then pull out the needle valve seat and remove the filter screen (see illustrations). Remove any dirt build-up on the filter screen.

US models and UK 1996-on models

9 Unscrew the main jet (see illustration). Don't lose the washer.


10 Unscrew the jet holder and remove its gasket (see illustration).

11 Unscrew the pilot jet (see illustration).


12 Remove the plug and washer, then note the position of the pin on the end of the needle jet (see illustrations).

UK 1992 to 1995 models

13 Unscrew the main, pilot and starter jets from the carburettor body (see illustration 7.1a). **Note:** 1993 and early 1994 UK and Canada models may be equipped with a 52.5 starter jet and an S-shaped tube in the carburettor overflow tube. These were installed in cases where the machine was difficult to start after sitting for several days.

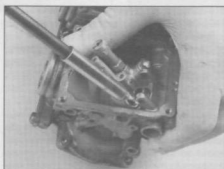


7.8a Remove the screw and retainer ...

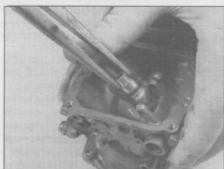

7.8b ... and pull out the needle valve seat




7.9 Unscrew the main jet and lift it out with its washer

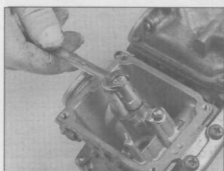

7.10 Unscrew the main jet holder and remove its gasket




7.11 Remove the pilot jet

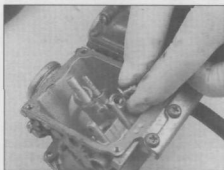

7.12a Remove the plug and washer ...




7.12b ... and note the position of the needle jet alignment pin

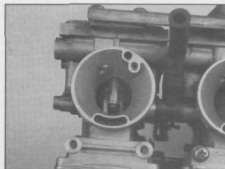

7.15 Removing the needle jet with a pair of needle-nose pliers



7.16a Remove the screw inside the throttle piston ...

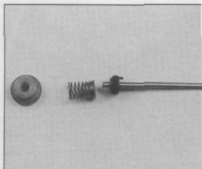

7.16b ... and lift out the spring and needle

14 Remove the jet housing bolt and washer. Take off the jet housing and its gasket.

All models

15 Reach down through the vacuum chamber with needle-nose pliers and lift the needle jet out of its bore (see illustration).

16 Remove the screw from inside the throttle piston and take out the jet needle components (see illustrations). If there's more than one groove on the needle, note which one the clip was fitted to.

17 Unscrew the pilot air jet from the carburettor body (see illustration).


18 On models with the choke operation on

the carburettors (1992-95 UK models and 1992-96 US models) loosen the choke shaft screws and slide the choke shaft out of the brackets (see illustration). Note the detents in the rod used to position the screws in the correct location. Unscrew the choke plungers and pull them out of their bores (see illustrations). On models with the choke operated by cable (1996-on UK models and 1997-on US models), fully slacken the grub screws which clamp the four choke plunger hooks to the choke shaft. Slide the choke shaft out to the right. Unbolt the choke cable bracket from no. 4 carburettor. The individual choke plungers can now be unscrewed from


the carburettor bodies (see illustration 17.18c).

19 The pilot (idle mixture) screw is located at the front of the carburettor body. On models, this screw may be hidden behind a cover which will have to be removed if the screw is to be taken out. On all models, the pilot screw in, counting the number of turns until it bottoms lightly (see illustration). Record that number for use when installing the screw. Now remove the pilot screw with its spring, washer and O-ring (see illustration).

20 1996-on UK models are fitted with a throttle position sensor on no. 1 carburettor.

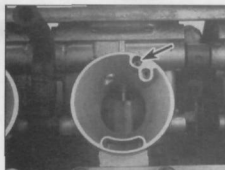

7.17 Unscrew the pilot air jet (arrowed)

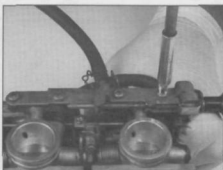


7.18a Remove the bracket screws for access ...




7.18b ... remove the choke rod set screws and slide out the choke rod.




7.18c ... then unscrew the choke plunger cap and pull out the spring and the choke plunger

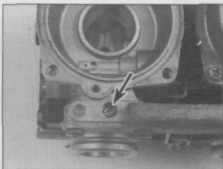

7.19a With the cover (if equipped) removed, turn the pilot screw (arrowed) clockwise until it bottoms lightly - count the number of turns and write it down ...

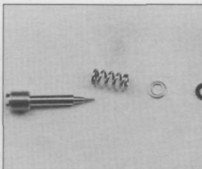

7.19b ... then remove the screw together with the spring, washer and O-ring

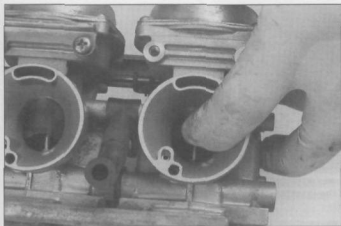

7.26 Lift the throttle piston and make sure it drops smoothly

Do not disturb the TPS unnecessarily – its exact position requires careful setting up. The TPS is secured to its mounting bracket by two screws; it is advisable to mark the position of the TPS in relation to its mounting bracket before disturbing the screws (see Chapter 4).

Cleaning

Caution: Use only a petroleum-based solvent for carburettor cleaning. Never use caustic cleaners. Be sure that all rubber hoses and plastic fittings are removed before the parts are immersed into the cleaning agent.

21 Submerge the metal components in the solvent for approximately thirty minutes (or longer, if the directions recommend it). After the carburettor has soaked long enough for the cleaner to loosen and dissolve most of the varnish and other deposits, use a brush to remove the stubborn deposits. Rinse it again, then dry it with compressed air. Blow out all of the fuel and air passages in the main and upper body.

Caution: Never clean the jets or passages with a piece of wire or a drill bit, as they will be enlarged, changing the fuel and air metering rates to be upset.


Inspection

22 Check the operation of the choke plunger. If it doesn't move smoothly, replace it, along with the return spring. Inspect the needle on the end of the choke plunger and replace it if it's worn.

23 Check the tapered portion of the pilot screw for wear or damage.

24 Check the carburettor body, float chamber and vacuum chamber cover for cracks, distorted sealing surfaces and other damage. If any defects are found, replace the faulty component, although replacement of the entire carburettor will probably be necessary (check with your parts supplier for the availability of separate components).

25 Check the vacuum diaphragm for splits, holes and general deterioration.

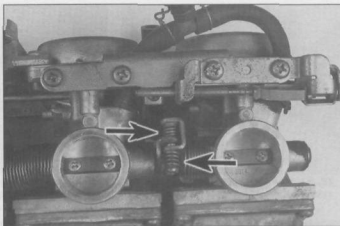

8.4 Note the position of the springs on the synchroniser screws (arrowed) - they should look like this when installed



Holding the diaphragm up to a light will help to reveal problems of this nature.

26 Insert the throttle piston in the carburettor body and see that it moves up-and-down smoothly (see illustration). Check the surface of the valve for wear. If it's worn excessively or doesn't move smoothly in the bore, replace the carburettor.

27 Check the jet needle for straightness by rolling it on a flat surface (such as a piece of glass). Replace it if it's bent or if the tip is worn.

28 Check the tip of the fuel inlet valve needle. If it has grooves or scratches in it, it must be replaced. Push in on the rod in the other end of the needle, then release it – if it doesn't spring back, replace the valve needle. Inspect the filter screen on the needle valve seat and replace it if it's torn or can't be cleaned.

29 Check the O-ring on the float chamber. Replace it if it's damaged.

30 Operate the throttle shaft to make sure the throttle butterfly valve opens and closes smoothly. If it doesn't, replace the carburettor.

31 Check the floats for damage. This will usually be apparent by the presence of fuel inside one of the floats. If the floats are damaged, they must be replaced.

Reassembly

Caution: When installing the jets, be careful not to overtighten them – they're made of soft material and can strip or shear easily.

Note: When reassembling the carburettors be sure to use new O-rings and gaskets.

32 Install the choke plunger in its bore, followed by its spring and cap. Tighten the cap securely.

33 Install the pilot screw (if removed) along with its spring, washer and O-ring, turning it in until it seats lightly. Now, turn the screw out the number of turns that was previously

recorded (or the number listed in this Chapter's Specifications if installing a new screw). On US models install a new metal plug in the hole over the screw. Apply a little bonding agent around the circumference of the plug after it has been seated.

34 The remainder of assembly is the reverse of the disassembly steps, with the following additions:

- Refer to Section 9 and check the float height.
- Install the diaphragm and piston in the carburettor body. Be sure the protrusion on the edge of the diaphragm fits into its groove all the way around and the tab on the diaphragm fits into the notch in the carburettor body.

8 Carburettors – separation and joining




1 The carburettors do not need to be separated for normal overhaul. If you need to separate them (to replace a carburettor body, for example), refer to the following procedure.

2 Remove the choke operating shaft and any associated mounting brackets (see Section 7, Step 18); there is no need to unscrew the choke plungers from the carburettor bodies.

3 Remove the bracket screws that hold the carburettors together. You may need an impact driver.

4 Note how the synchronising screws and springs are assembled (see illustration). As you pull the carburettors apart, keep track of the synchroniser screw springs. They should stay with the adjusting screws, but if they don't, find them and install them as shown in the illustrations so they aren't lost.

5 Assembly is the reverse of the disassembly procedure. Use non-permanent thread locking agent on the bracket screws.

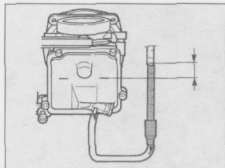

9.4 A gauge like this or a clear tube and ruler can be used to measure fuel level

9 Carburettors – float height and fuel level adjustment



Float height adjustment


1 To check the float height, hold the carburettors upside down (with their float chambers removed), then tilt them back until the float tang contacts the needle valve but the small rod in the end of the needle valve isn't compressed. Work on one carburettor at a time, then go on to check the others.

2 Measure the distance from the carburettor body (without the float chamber gasket) to the top of the float and compare your measurement to the float height listed in this Chapter's Specifications. If it isn't as specified, carefully bend the tang that contacts the needle valve up or down until the float height is correct.

Fuel level adjustment



Warning: Gasoline (petrol) is extremely flammable, so take extra precautions when you work on any part of the fuel system. Don't smoke or allow open flames or bare light bulbs near the work area, and don't work in a garage where a natural gas-type appliance (such as a water heater or clothes dryer) with a pilot light is present. Since gasoline is carcinogenic,

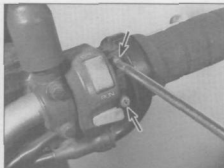

10.3 Remove the screws (arrowed) and separate the halves of the throttle pulley housing

wear latex gloves when there's a possibility of being exposed to fuel, and, if you spill any fuel on your skin, rinse it off immediately with soap and water. Mop up any spills immediately and do not store fuel-soaked rags where they could ignite. When you perform any kind of work on the fuel system, wear safety glasses and have a fire extinguisher suitable for a class B type fire (flammable liquids) on hand.

3 This procedure is done with the carburettors installed on the motorcycle. Place the bike on its centrestand (if equipped) or support it securely upright. Place a floor jack under the engine and raise it just enough so the carburettors are horizontal.

4 Attach Yamaha service tool no. YM-01312 (US) or 90890-01312 (UK) to the drain fitting on the bottom of one of the carburettor float chambers (all four will be checked). This is a clear plastic tube graduated in millimetres (see illustration). An alternative is to use a length of clear plastic tubing and an accurate ruler. Hold the graduated tube (or the free end of the clear plastic tube) against the carburettor body.

5 With the engine off, unscrew the drain screw at the bottom of the float chamber a couple of turns – fuel will flow into the tube. Wait for the fuel level to stabilise, then note how far the fuel level is below the line where the float chamber joins the carburettor body.

6 Measure the distance between the mark on the float chamber and the top of the fuel level in the tube or gauge (see illustration 9.4).

This distance is the fuel level – write it down on a piece of paper, screw in the drain screw then move on to the next carburettor and check it the same way.

7 Compare your fuel level readings to the value listed in this Chapter's Specifications. If the fuel level in any carburettor is not correct remove the float chamber and bend the float tang up or down as necessary, then recheck the fuel level.

10 Throttle cable and grip – removal, installation and adjustment

Removal

- 1 Remove the fuel tank (see Section 2).
- 2 Loosen the accelerator cable (see Throttle operation/grip freplay – check and adjustment in Chapter 1).
- 3 Remove the screws from the throttle pulley housing and separate the halves of the housing (see illustration).
- 4 Detach the accelerator and decelerator cables from the throttle grip pulley.
- 5 Detach the other ends of the cables from the bracket and throttle pulley at the carburettors (see illustrations).
- 6 Remove the cables, noting how they're routed.
- 7 To remove the throttle grip, unscrew the grip end weight (see Chapter 5) and take the throttle grip off the handlebar.

Installation

- 8 If the grip was removed, clean the handlebar and apply a light coat of multi-purpose grease. Push the grip onto the handlebar, install the grip end weight and tighten it to the torque listed in the Chapter 5 Specifications.
- 9 Route the cables into place. Make sure they don't interfere with any other components and aren't kinked or bent sharply.
- 10 Lubricate the ends of the cables with multi-purpose grease and connect them to the throttle pulleys at the carburettors and at the throttle grip. Assemble the throttle pulley housing and tighten the screws securely.



10.5a Pull the accelerator cable back and out of the slot in the retainer (arrowed)



10.5b Loosen the nut and detach the decelerator cable



10.5c Rotate the cables to align them with the slots in the pulley, then slip the cable ends out

Adjustment

- 11 Follow the procedure outlined in Chapter 1, Section 5 to adjust the cables.
- 12 Turn the handlebars back and forth to make sure the cables don't cause the steering to bind. With the engine idling, turn the handlebars back and forth and make sure idle speed doesn't change. If it does, find and fix the cause before riding the motorcycle.



Warning: Don't ride the bike in this dangerous condition.

- 13 Install the fuel tank.

11 Choke cable – removal and installation




Removal


- 1 Remove the two screws from the front of the left handlebar switch and separate the switch halves (**see illustration**). Ease the choke cable trunion out of its location in the choke lever (**see illustration**).
- 2 Remove the fuel tank (see Section 2) and air cleaner housing (see Section 12) to access the carburetor end of the choke cable. Slacken the clamp screw to release the choke cable outer (**see illustration**). Release the choke cable end from choke shaft lever on the right side (**see illustration**). Remove the choke cable having taken note of how it was routed.

Installation


- 3 Route the cable into place. Make sure it doesn't interfere with any other components and isn't kinked or bent sharply.
- 4 Lubricate the ends of the cable with multi-purpose grease and connect it to the choke shaft lever at the carburetors and to the choke operating lever at the handlebar. Assemble the switch halves, making sure that the guide elbow is correctly located (**see illustration**) and tighten the screws securely.

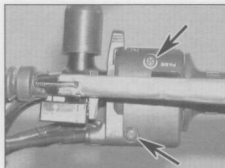

11.1a Remove the two screws to separate the switch halves (arrowed)

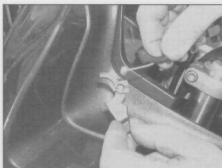

11.1b Separate the cable trunion from the lever

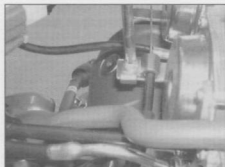

11.2a Slacken off the cable clamp screw . . .



11.2b . . . and disconnect the cable trunion from the choke shaft

Position the choke lever so that the choke is OFF. Secure the lower end of the cable outer with the clamp and screw (**see illustration 11.2a**), noting that the cable must be positioned so that the choke is not activated.

- 5 The is no specified adjustment setting for the choke cable, but an in-line adjuster is set in the cable to allow small adjustments to be made; it is located under the fuel tank front end, next to the horn (**see illustration**). The choke adjustment setting is correct if there is a small amount of freeplay just before the choke lever is activated; ie to ensure that the choke plungers in the carburetors are fully OFF when


the handlebar lever is in the OFF position. To make adjustment, slacken off the small adjuster lockwheel and rotate the body of the adjuster as required; tighten the lockwheel against the adjuster when complete.

- 6 Install the air cleaner housing and fuel tank.


12 Air cleaner housing – removal and installation



- 1 Remove the fuel tank (see Section 2).
- 2 Disconnect the drain and crankcase

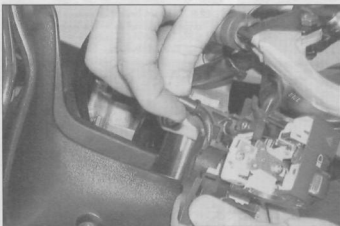

11.4 Locate the guide elbow in the switch channels

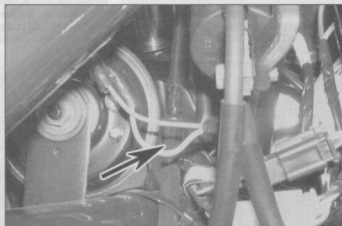

11.5 Choke cable in-line adjuster location (arrowed)



12.2a Disconnect the drain hose from the left side of the air cleaner housing ...



12.2b ... and from the underside



12.2c Disconnect the large-bore crankcase breather hose from the rear

breather hoses from the air cleaner housing (see illustrations).

3 Remove the mounting bolt (see illustration).

4 Loosen the clamp screws that secure the housing to the carburettor intake joints (see illustration). Lift the air cleaner housing out of the intake joints and away from the bike. If you are going to go on to remove the carburettors or work on the cables, carefully remove the rubber dust shield noting how it fits.

5 If necessary, remove the screws from the underside of the air cleaner housing and separate the top and bottom halves. Check the large O-ring between the halves for brittleness or deterioration and replace it if its condition is in doubt.

6 Assembly and installation are the reverse of the removal steps. Where fitted, ensure that the two carburettor breather tubes locate in the holes in the housing (see illustration).

13 Exhaust system – removal and installation



If the engine has been running the exhaust system will be very hot. Allow the system to cool before carrying out any work.




12.3 Remove the mounting bolt at the front



12.4 Loosen the clamp screws (arrowed) and slip the air cleaner housing out of the intake joints



12.6 The two breather hoses (arrowed) engage the holes in the base of the housing

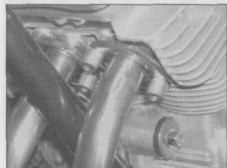

13.5 Each exhaust pipe is retained by two nuts at the cylinder head



13.6a Exhaust system is retained by a bolt to the frame ...



13.6b ... and a bolt to the footpeg bracket

and separate the exhaust system components.

8 Installation is the reverse of removal, with the following additions:

- a) Use new copper gaskets at the cylinder head.
- b) Apply a thin coat of anti-seize compound to the studs and nuts before installation.
- c) Tighten all fasteners to the torque settings listed in this Chapter's Specifications.

14 Fuel pump – removal and installation

Vacuum pump (all US models, 1992-95 UK models)

Note: On UK models if starting problems are experienced due to fuel evaporation from the carburettor float chambers after the motorcycle has been left standing for a number of days, it is possible to fit the electric fuel pump fitted to 1996-on models; refer to a Yamaha dealer for details.

1 The fuel pump is operated by vacuum transmitted through a hose connected to the no. 2 cylinder's intake manifold. Yamaha don't provide test procedures or output specifications for the fuel pump, and parts to rebuild the pump aren't available. If insufficient fuel delivery can't be traced to other causes, such as a clogged filter, lines or carburettor passages, low float level, or lack of fuel in the tank, the pump may be at fault.

2 Remove the fuel tank (see Section 2).

3 Disconnect the hoses from the pump (see illustration). Remove its mounting nuts from the underside of the pump bracket and lift it out. **Note:** You may find it easier to unbolt the bracket from the frame and lift it up for access to the mounting nuts.

4 Installation is the reverse of the removal steps.


Electric pump (1996-on UK models)

Testing

5 The fuel pump circuit consists of the pump, the pump relay (housed in the relay unit), the igniter, the engine kill switch, the ignition switch, fuses, battery and associated wiring.

6 With the engine kill switch in the RUN position, the fuel pump should start and run for about five seconds after the ignition is switched ON. It should shut off once the carburettor float chambers are full, then run again once the engine is started. If the pump does not operate, first check that the main or ignition circuit fuse is not blown, and make sure that the battery is fully charged. If the fuses and battery are in good order, check the fuel pump circuit in a logical order as described below; be prepared to remove bodywork to access some of the components or wire connectors.

7 To check the ignition switch, first disconnect the battery negative lead, then

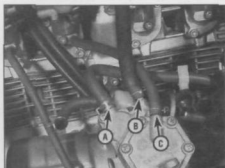


14.3 Fuel pump installation details

- A Inlet line from fuel filter
- B Outlet line to carburettors
- C Vacuum hose

trace the wiring from the ignition switch to its block connector. Separate the connector and using a continuity tester or ohmmeter, check for continuity between the red wire terminal and brown/blue wire terminal on the switch side of the connector with switch key rotated to the ON position. If continuity is indicated the switch is good, whereas no continuity (infinite resistance) indicates an open-circuit inside the switch. Join the connector halves.


8 To check the engine kill switch, trace the wiring from the right handlebar switch and disconnect the block connector. Separate the connector and using a continuity tester or ohmmeter, check for continuity between the red/wire and red/black wire terminals on the switch side of the connector with the kill switch in the RUN position. If continuity is indicated the switch is good, whereas no continuity (infinite resistance) indicates an open-circuit inside the switch. Join the connector halves.

9 Locate the relay assembly (see Chapter 8),

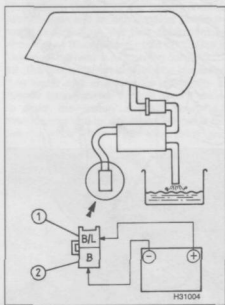

14.10 Fuel pump operation test

- 1 B/L (black/blue) wire terminal
- 2 B (black) wire terminal

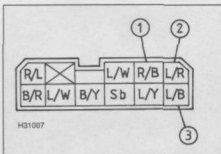

14.9 Relay unit wire terminal identification for fuel pump relay test

- 1 R/B (red/black) wire terminal
- 2 L/R (blue/red) wire terminal
- 3 L/B (blue/black) wire terminal

disconnect its connector and move the relay unit to the bench for testing of the fuel pump relay. Using jumper wires connect the positive terminal of a 12 volt battery to the red/black wire terminal and the battery negative terminal to the blue/red wire terminal (see illustration). Now connect an ohmmeter or continuity tester between the red/black wire terminal and blue/black wire terminal. Continuity should be shown. No continuity indicates a faulty fuel pump relay, and thus a new relay unit will be required. Install the relay on the motorcycle when testing is complete.


10 The fuel pump can be checked for correct operation by disconnecting its output hose (the hose between the pump and carburettor) and directing the hose end into a container suitable for the storage of fuel; note that on early models there is a small filter fitted at the hose joint with the carburettor. Trace the 2-pin wire connection from the fuel pump and disconnect it. Using jumper wires and a 12 volt battery, connect the battery positive terminal to the black/blue wire terminal on the pump side of the connector and the battery negative terminal to the black wire terminal on the pump side of the connector (see illustration). If the fuel pump is good it will be heard to operate and fuel will flow out of the hose. If the pump does not operate as described, it is faulty and must be renewed.

11 If all the above components function correctly, yet the pump doesn't operate in circuit, the igniter unit is probably at fault. There are no test specifications for the igniter unit so it can only be tested by substitution of a known good igniter. Note that fuel pump failure could be due to a wire breakage between any of the components in the fuel pump circuit; check each wire and connector block for continuity before condemning the igniter.


12 When testing is complete, reconnect the battery negative lead.

Removal and installation

13 Remove the fuel tank (see Section 2). Detach the fuel line from the carburettors or pump; note that on early models there is a small filter fitted at the hose joint with the carburettor.

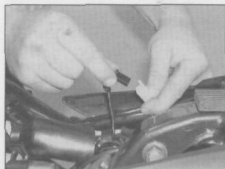

14.14 Disconnect the pump's wiring

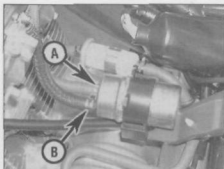

14.15 Pump outlet (B) and inlet (A) line connections

14 Trace the wiring from the fuel pump to the 2-pin connector and disconnect it (see illustration).

15 Take note of the fuel inlet line (from the tank and filter) and outlet line (to the carburetors) locations on the front of the fuel pump so that the lines can be returned to their correct locations on installation (see illustration). Place a rag under the fuel line connections and squeeze the clamp ears together to allow the clamp to be drawn away from the union – the fuel inlet line can be left in place and the pump removed with the fuel filter if desired. Gently ease the fuel pump out of its rubber mounting.

16 Installation is a reverse of the removal procedure. Make sure that you connect the fuel hoses the correct way around and check that there are no fuel leaks.

15 Carburettor heater system – testing

1992-95 models

1 The carburetors are warmed by oil from the engine lubrication system passing through passages in the float chambers. Carburetor

temperature is sensed by a thermostatic switch on no. 4 carburetor which in turn controls the solenoid valve.

2 If the carburetor heater system suspected of failure first check the security of the oil hoses which run from the right side of the cylinder head to the solenoid valve, from the solenoid valve to no. 4 carburetor, the oil hoses between the float chambers and the hose from no. 1 carburetor to the valve cover (see illustration). The hoses should be secured to their unions with spring clips and there should be no sign of oil leakage.


3 To check the electrical side of the circuit begin by checking for battery voltage at the thermostatic switch red/black wire with the Ignition ON. If there is no voltage at this point, refer to the wiring diagram at the end of this manual and check back through the circuit to trace the supply fault.

4 Disconnect the wiring from the thermostatic switch on no. 4 carburetor and unscrew the switch (see illustration 7.1a). The thermostatic switch is tested by immersing it in water and checking for continuity at specific temperatures. You will need a vessel to hold the water, a heat source, a thermometer and an ohmmeter. Connect the ohmmeter probe to the thermostatic wires and immerse the sensing portion of the switch in the water. Place the thermometer in the water so that its bulb is close to the switch and not touching the sides of the vessel (see illustration 15.13b).


5 Continuity should be shown with the water cold. Gently heat the water and note the temperature at which the meter indicates no continuity (switch opens); this should be between 30 and 35°C. After this point turn off the heat source and as the water cools note the temperature at which the meter indicates continuity (switch closes); this should be around 23°C. If the thermostatic switch does not function as described it must be renewed.

6 When installing the switch, ensure that you install its sealing washer and tighten the thermostatic switch to the specified torque setting.

7 The solenoid is held in its bracket by two screws. Disconnect the solenoid black/white wire at the connector and remove the two bolts (noting the ground/earth lead) to free the solenoid from its bracket. Using an ohmmeter connect its probes to the black/white wire and mounting flange to measure the solenoid resistance; this should be 11 to 15 ohm at 20°C (see illustration). If the ohmmeter

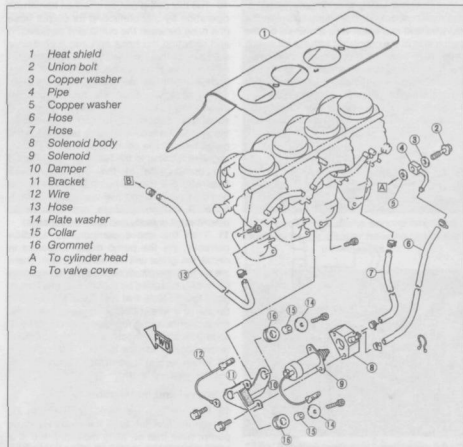

15.2 Carburetor heater system components – 1992-95 UK and Canada models

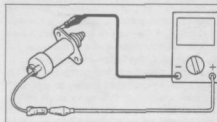


15.7 Measuring the solenoid resistance



15.11a Diode location



15.11b Unplug the diode...

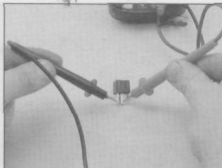

15.11c ...and test it for continuity

shows an open circuit (very high resistance) the solenoid should be renewed.

1996-on models

8 The carburettor heater system consists of the heater relay, thermostatic switch and the carburettor heater unit on each carburettor. The circuit is powered by the battery through the main fuse, ignition main switch and signal fuse. The heaters are energised by a thermostatic switch which closes when the temperature drops below a given level. The circuit is further controlled by a relay; when the heaters are operational this relay turns the heaters OFF if the transmission is in neutral, thus preventing the carburettors from overheating when the machine is stationary. For this reason it is important not to allow the engine to idle with the clutch lever pulled in and the transmission in gear.

9 If the carburettor heaters do not come on, first check that the battery is fully charged and that the main fuse and signal fuse are OK. With the ignition ON, use a voltmeter set on the 0–20 dc volts scale to check for battery voltage between each brown wire of the heater relay and the frame, then turn the ignition OFF. If no voltage is shown, check the wiring between the relay and battery for continuity.

10 Check the neutral switch by tracing its light blue wire up to the connector. Disconnect it and connect an ohmmeter or continuity tester between the disconnected wire on the switch side and the frame. With the gearbox in neutral continuity should be shown. If no continuity is indicated test the neutral switch further as described in Chapter 8.

11 The neutral switch diode should only allow current to flow in one direction. Locate the diode near the right frame top rail under the fuel tank, under the large plastic sleeve. Remove the insulation tape from its connector (see illustration). Unplug the diode from the connector (see illustration). Using an ohmmeter or continuity tester, connect its probes across the two terminals of the diode (see illustration). Continuity should only be shown in one direction, with no continuity shown when the probes are reversed. If the




15.12a Disconnect the heater relay from its mounting tab (arrowed) and disconnect its wiring


diode does not function correctly it must be renewed.

12 To test the heater relay, remove the right side cover (see Chapter 7), disconnect the relay's wiring and remove it from the bike (see illustration). Using a 12 volt battery and two jumper wires and an ohmmeter or continuity tester, connect up the test equipment as shown (see illustration). If no continuity is indicated, the relay is functioning correctly.

13 The thermostatic switch is tested by immersing it in water and checking for continuity at specific temperatures. You will need a vessel to hold the water, a heat source, a thermometer and an ohmmeter. Remove the thermostatic switch from its mounting and

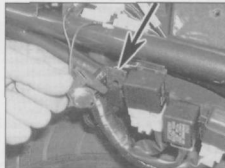

15.13a Disconnect the thermostatic switch from its mounting tab (arrowed) and disconnect its wires

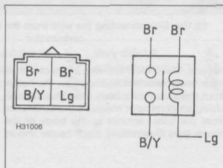


15.12b Heater relay terminal identification and internal circuitry

Br Brown B/Y Black/yellow Lg Light green

disconnect its wires (see illustration). Connect the ohmmeter probes to the thermostatic switch and immerse the switch in the water. Place the thermometer in the water so that its bulb is close to the switch and not touching the sides of the vessel (see illustration).

14 Continuity should be shown with the water cold. Gently heat the water and note the temperature at which the meter indicates no continuity (switch opens); this should be $23 \pm 3^\circ\text{C}$. After this point turn off the heat source and as the water cools note the temperature at which the meter indicates continuity (switch closes); this should be $12 \pm 4^\circ\text{C}$. If the thermostatic switch does not function as described it must be renewed.

15 Finally, check the individual carburettor

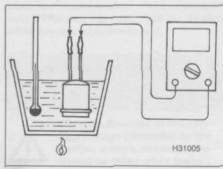


15.13b Thermostatic switch test set-up



15.15a Disconnecting the wire from the heater unit on no. 1 carburettor

heaters. Disconnect the wire connector from each heater element and unscrew the heater from the carburettor body (**see illustration**). Using an ohmmeter measure the resistance from the wire terminal to the body of the heater (**see illustration**). Each heater should

show a resistance of 6 to 10 ohms at 20°C. If the heater element is faulty it will most likely indicate an open circuit (high resistance) and should be renewed. Note that the threads of the heaters are coated with a product called 'Heat Sink'; if this has been removed apply

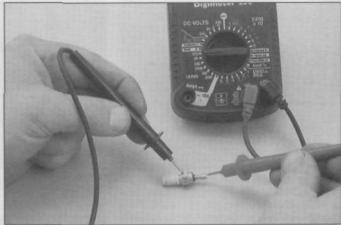

15.15b Heater resistance test

a new coating available from electrical stockists.

16 If the fault cannot be traced to a component in the carburettor heater system, check the wiring between all components for continuity.

Chapter 4

Ignition system

Contents

General information	1	Pick-up coil – check, removal and installation	4
Igniter – check, removal and installation	5	Spark plugs	See Chapter 1
Ignition coils – check, removal and installation	3	Throttle position sensor (1996-on UK models)	6
Ignition system – check	2		

Degrees of difficulty

Easy, suitable for novice with little experience		Fairly easy, suitable for beginner with some experience		Fairly difficult, suitable for competent DIY mechanic		Difficult, suitable for experienced DIY mechanic		Very difficult, suitable for expert DIY or professional	
--	---	---	---	---	---	--	---	---	---

Specifications

General

Firing order	1-2-4-3
Ignition timing	Electronic, not adjustable

Ignition coil

Primary resistance (at 20°C/68°F)	1.92 to 2.88 ohms
Secondary resistance (at 20°C/68°F)	9.5 to 14.3 K ohms

Spark plug caps and spark plugs

Spark plug cap resistance	10,000 ohms
Spark plug arcing distance	6 mm (1/4 inch)
Spark plug type and gap	see Chapter 1

Pickup coil

Resistance (at 20°C/68°F)	304 to 456 ohms
---------------------------------	-----------------

Torque settings

Pick-up coil plate securing screws	8 Nm (70 in-lbs)
Timing rotor bolt	45 Nm (32 ft-lbs)
Signal generator cover screws	10 Nm (86 in-lbs)

1 General information

This motorcycle is equipped with a battery operated, fully transistorised, breakerless ignition system. The system consists of the following components:

- Pick-up coil
- Igniter unit
- Battery and fuse
- Ignition coils
- Spark plugs
- Ignition (main) and engine kill (stop) switches
- Primary and secondary (HT) circuit wiring

The transistorised ignition system functions on the same principle as a breaker point DC ignition system with the pick-up unit and igniter performing the tasks previously associated with the breaker points and mechanical advance system. As a result, adjustment and maintenance of ignition components is eliminated (with the exception of spark plug replacement).

A microprocessor and a single pick-up coil control ignition timing. As a further aid to ignition timing, a throttle position sensor is fitted to 1996-on UK models.

Because of their nature, the individual ignition system components can be checked but not repaired. If ignition system troubles occur, and the faulty component can be isolated, the only

cure for the problem is to replace the part with a new one. Keep in mind that most electrical parts, once purchased, can't be returned. To avoid unnecessary expense, make very sure the faulty component has been positively identified before buying a replacement part.

2 Ignition system – check



Warning: Because of the very high voltage generated by the ignition system, extreme care should be taken when these checks are performed.

1 If the ignition system is the suspected cause of poor engine performance or failure to start, a number of checks can be made to isolate the problem.

2 Make sure the engine kill switch is in the Run position.

Engine will not start

3 Disconnect one of the spark plug wires, connect the wire to a spare spark plug and lay the plug on the engine with the threads contacting the engine. If necessary, hold the spark plug with an insulated tool. Crank the engine over and make sure a well-defined, blue spark occurs between the spark plug electrodes.



Warning: Don't remove one of the spark plugs from the engine to perform this check - atomised fuel being pumped out of the open spark plug hole could ignite, causing severe injury!

4 If no spark occurs, the following checks should be made:

5 Unscrew a spark plug cap from a plug wire. Check the cap resistance with an ohmmeter and compare it to the value listed in this Chapter's Specifications. If the resistance is infinite, replace it with a new one. Repeat this check on the remaining plug caps.

6 Make sure all electrical connectors are clean and tight. Check all wires for shorts, opens and correct installation.

7 Check the battery voltage with a voltmeter (see Chapter 8). If the voltage is less than 12-volts, recharge the battery.


8 Check the ignition fuse and the fuse connections. If the fuse is blown, replace it with a new one; if the connections are loose or corroded, clean or repair them.

9 Refer to Chapter 8 and check the ignition switch, engine kill switch, neutral switch, clutch switch and sidestand switch.

10 Refer to Section 3 and check the ignition coil primary and secondary resistance.

11 Refer to Section 4 and check the pick-up coil resistance.

12 If the preceding checks produce positive

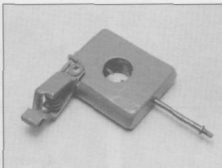

2.14 A simple spark gap testing fixture can be made from a block of wood, a large alligator clip, two nails, a screw and a piece of wire

results but there is still no spark at the plug, remove the igniter and have it checked by a Yamaha dealer service department or other repair shop equipped with the special tester required.

Engine starts but misfires

13 If the engine starts but misfires, make the following checks before deciding that the ignition system is at fault.

14 The ignition system must be able to produce a spark across a six millimetre (1/4-inch) gap (minimum). A simple testing fixture (see illustration) can be constructed to make sure the minimum spark gap can be jumped. Make sure the fixture electrodes are positioned six millimetres apart.

15 Connect one of the spark plug wires to the protruding test fixture electrode, then attach the fixture's alligator clip to a good engine ground (earth).

16 Crank the engine over (it will probably start and run on the remaining cylinders) and see if well-defined, blue sparks occur between the test fixture electrodes. If the minimum spark gap test is positive, the ignition coil for that cylinder (and its companion cylinder) is functioning properly. Repeat the check on one of the spark plug

wires that is connected to the other coil. If the spark will not jump the gap during either test or if it is weak (orange coloured), refer to Steps 5 through 11 of this Section and perform the component checks described.

3 Ignition coils – check, removal and installation

Check


1 In order to determine conclusively that the ignition coils are defective, they should be tested by an authorised Yamaha dealer service department which is equipped with the special electrical tester required for this check.

2 However, the coils can be checked visually (for cracks and other damage) and the primary and secondary coil resistances can be measured with an ohmmeter. If the coils are undamaged, and if the resistances are as specified, they are probably capable of proper operation.


3 To check the coils for physical damage they must be removed (see Step 9). To check the resistances, remove the seat and fuel tank (see Chapters 7 and 3). Unplug the primary circuit electrical connectors from the coil(s) and remove the spark plug wires from the plugs that are connected to the coil being checked. Mark the locations of all wires before disconnecting them.

4 To check the coil primary resistance, first place the ohmmeter selector switch in the ohms (Ω) $\times 1$ position, then attach one ohmmeter lead to one of the primary terminals and the other ohmmeter lead to the other primary terminal (see illustration). Compare the measured resistance to the value listed in this Chapter's Specifications.


5 If the coil primary resistance is as specified, check the coil secondary resistance. Place the ohmmeter selector switch in the K ohms ($K\Omega$) position, then connect the meter leads to the spark plug wire terminals (see illustration).

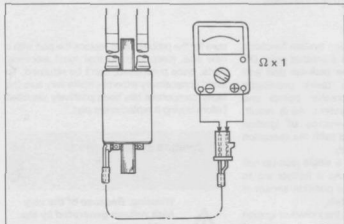

3.4 To test the coil primary resistance, connect the ohmmeter leads between the primary terminals in the coil connector

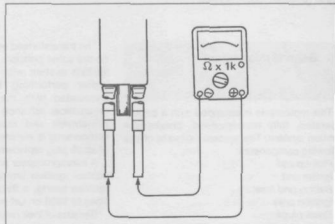

3.5 To test the coil secondary resistance, connect the ohmmeter leads between the spark plug wires

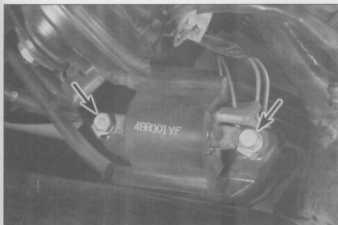

3.9 To detach the coils, remove the mounting bolts (arrowed) - one bolt head may secure a ground (earth) wire



4.2 Follow the pick-up coil harness (arrowed) to its connector

Compare the measured resistance to the values listed in this Chapter's Specifications.

6 If the resistances are not as specified, the coil is probably defective and should be replaced with a new one.

Removal and installation

7 If you haven't already done so, remove the seat and fuel tank (see Chapters 7 and 3).

8 Look for cylinder number markings on the plug wires and make your own if they aren't visible (number the cylinders one through four, working from the left to the right side of the bike). Disconnect the spark plug wires from the plugs. After labelling them with tape to aid in reinstallation, unplug the coil primary circuit electrical connectors.

9 Support the coil with one hand and remove the coil mounting bolts (see illustration), then withdraw the coil from its bracket.

10 Installation is the reverse of removal. Make sure the primary circuit electrical connectors and plug wires are attached to the proper terminals.

4 Pick-up coil - check, removal and installation



Note: The pick-up coil is sometimes referred to as the signal generator.

Check

1 Remove the seat (see Chapter 7).

2 Follow the wiring harness from the pick-up coil on the left side of the engine to the connector, then unplug the connector (see illustration).

3 Probe the terminals in the pick-up coil connector with an ohmmeter and compare the resistance reading with the value listed in this Chapter's Specifications.

4 Set the ohmmeter on the highest resistance range. Measure the resistance between a good ground (earth) and each terminal in the electrical connector. The meter should read infinity.

5 If the pick-up coil fails either of the above tests, it must be replaced.

Removal

6 Remove the pick-up coil cover (see illustration 25.5 in Chapter 1). Remove the pick-up coil mounting screws and detach the pick-up coil from the engine.

7 If necessary, remove the timing rotor bolt and detach the timing rotor from the engine (see illustration). Remove the screws and detach the pick-up coil base. These parts don't have to be removed to remove the pick-up coil.

Installation

8 Installation is the reverse of the removal steps, with the following additions:

- Be sure to seat the grommet on the wiring harness into the notch in the crankcase (see illustration) and route the wiring harness behind the clips on the engine (see illustration 4.2).
- Tighten the pick-up coil screws (and the pick-up coil base screws, if removed) to the torque listed in the Chapter 8 Specifications.
- If the timing rotor was removed, install it, aligning the dowel with the rotor notch (see illustration), and tighten the bolt to the torque listed in this Chapter's Specifications.



4.8a The pick-up coil harness grommet fits into a notch in the crankcase




4.7 If necessary, remove the timing rotor bolt and the timing plate screws (arrowed)

5 Igniter - check, removal and installation



Check

1 The igniter is checked by process of elimination (when all other possible causes have been checked and eliminated, the igniter is at fault). Because the igniter is expensive and can't be returned once purchased, consider having a Yamaha dealer test the ignition system before you buy a new igniter.

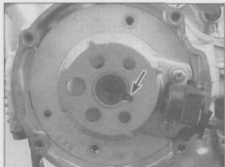

4.8b On installation, align the pin with the timing rotor notch (arrowed)



5.3 The igniter is mounted under the seat



6.2 Disconnecting the TPS wire connector



6.4 TPS adjustment screws (arrowed)

Removal and installation

- 2 Remove the seat.
- 3 Unplug the electrical connector. Remove the mounting screws and take the igniter out (*see illustration*).
- 4 Installation is the reverse of the removal steps.

6 Throttle position sensor (1996-on UK models)

1 The throttle position sensor is located on the side of the no. 1 carburettor and is keyed to the end of the throttle operating shaft. The sensor provides the igniter unit with information relating to throttle opening and the igniter is thus able to set the ignition timing accordingly to produce the best running conditions and cleaner exhaust emissions. Not surprisingly it is essential that the throttle position sensor should be set up correctly. Do not tamper with the sensor's position unless it has been disturbed during carburettor overhaul or poor running problems have been experienced.

TPS set-up and adjustment

Note: Before carrying out TPS adjustment ensure that the engine idle speed is correct.

2 To set up to the throttle position sensor it is first necessary to switch the Igniter unit to TPS set up mode. To do this, turn the Ignition ON, then disconnect its wiring connector and connect it again (*see illustration*). If the tachometer reads 5000 rpm the TPS setting is correct and no adjustment is necessary. If the tachometer reads either 10,000 rpm or 1000 rpm the TPS should be adjusted as described below. Turn the Ignition OFF.

3 Remove the carburettors from their intake stubs (*see Chapter 3*); there is no need to disconnect the cables, just position the carburettors so that access is possible to the two TPS screws. Make sure the TPS wire connector is still connected.

4 Loosen the two screws which retain the TPS and turn the Ignition ON (*see illustration*). The angle of the TPS can be read off the tachometer. Rotate the TPS body so that the tachometer reads 5000 rpm and secure the screws to retain this position. Yamaha advise that if the tachometer reads 10,000 rpm the TPS angle is too wide and if it reads 1,000 rpm the angle is too narrow.

5 Following adjustment, install carburettors and start the engine, or turn Ignition main switch off, then on; this restores the Igniter's TPS function to normal mode.

TPS resistance test

6 If the TPS is suspected of failure, it can be tested as follows. Disconnect the TPS wire connector (*see illustration 6.2*) and make the following tests on the TPS side of the connector.

7 Using an ohmmeter set to the K ohms scale, connect its probes to the blue wire terminal and the black/blue wire terminal. A resistance of 3.5 to 6.5 K ohms should be shown.

8 Leave one probe connected to the black/blue wire terminal and move the other probe to the yellow wire terminal. With the throttle grip slowly moved from closed to fully open a resistance of 0 to 5 ± 1.5 K ohms should be shown.

9 If the TPS doesn't produce the specified resistance readings it should be renewed. Although it is recommended that your findings are confirmed by a Yamaha dealer before purchasing a new TPS unit.

Chapter 5

Frame, suspension and final drive

Contents

Drive chain – removal, cleaning and installation	12	Side and centrestand – maintenance	3
Forks – disassembly, inspection and reassembly	6	Sprockets – check and replacement	13
Forks – oil change	see Chapter 1	Steering head bearings – replacement	7
Forks – removal and installation	5	Suspension – adjustments	15
Frame – inspection and repair	2	Suspension – check	see Chapter 1
General information	1	Swingarm bearings – check	9
Handlebars – removal and installation	4	Swingarm bearings – inspection and replacement	11
Rear shock absorber – removal, inspection and installation	8	Swingarm – removal and installation	10
Rear wheel coupling/rubber damper – check and replacement	14		

Degrees of difficulty

Easy, suitable for novice with little experience		Fairly easy, suitable for beginner with some experience		Fairly difficult, suitable for competent DIY mechanic		Difficult, suitable for experienced DIY mechanic		Very difficult, suitable for expert DIY or professional	
--	---	---	---	---	---	--	---	---	---

Specifications

Front forks

Fork spring length – 1992-97 UK models, all US models	
Standard	476.5 mm (18.8 inches)
Minimum	471.5 mm (18.6 inches)
Fork spring length – 1998-on UK models	
Standard	341 mm (13.4 inches)
Minimum	334 mm (13.1 inches)
Fork oil capacity, grade and level	see Chapter 1

Rear suspension

Rear spring free length – 1992-95 UK models, 1992-96 US models	
Standard	170.5 mm (6.71 inches)
Minimum	165 mm (6.51 inches)
Rear spring free length – 1996-on UK models, 1997-on US models	
Standard	176.5 mm (6.95 inches)
Minimum	173 mm (6.81 inches)
Swingarm endplay and side play limits	1 mm (0.040 inch)

Final drive

Chain size	520
No. of links	110
Chain freeplay and lubricant	see Chapter 1

Torque settings

Front forks	
Cap bolt to fork	23 Nm (17 ft-lbs)
Damper rod bolt*	30 Nm (22 ft-lbs)
Handlebars and steering stem	
Upper triple clamp bolts	23 Nm (17 ft-lbs)
Lower triple clamp bolts	38 Nm (27 ft-lbs)
Handlebar bracket bolts	23 Nm (17 ft-lbs)
Grip end weights	26 Nm (19 ft-lbs)
Steering stem nut	110 Nm (80 ft-lbs)
Steering head bearing ring nut	See Chapter 1
Rear shock absorber bolts and nuts	64 Nm (46 ft-lbs)
Swingarm pivot shaft nut	91 Nm (66 ft-lbs)
Drive chain front sprocket nut	110 Nm (80 ft-lbs)
Drive chain rear sprocket nuts	60 Nm (43 ft-lbs)
Engine sprocket cover bolts	10 Nm (86 in-lbs)

*Use non-permanent thread locking agent on the threads.

1 General information

All motorcycles covered in this manual use a double cradle frame. The frame is a one-piece unit constructed of round-section tubing.

The front forks are of the conventional coil spring, hydraulically-damped telescopic type.

The rear suspension consists of a steel oval-section swingarm supported by a coil spring/shock absorber unit. Rear spring preload is adjustable.

The final drive uses an endless chain (which means it doesn't have a master link). A rubber damper (often called a 'cush drive') is installed between the rear wheel coupling and the wheel.

2 Frame – inspection and repair

1 The frame shouldn't require attention unless accident damage has occurred. In most cases, frame replacement is the only satisfactory remedy for such damage. A few frame specialists have the jigs and other equipment necessary for straightening the frame to the required standard of accuracy, but even then there is no simple way of assessing to what extent the frame may have been over stressed.

2 After the machine has accumulated a lot of miles, the frame should be examined closely for signs of cracking or splitting at the welded joints. Corrosion can also cause weakness at these joints. Loose engine mount bolts can cause ovaling or fracturing of the mounting tabs. Minor damage can often be repaired by welding, depending on the extent and nature

of the damage. Welding should be performed by an expert in the field.


3 Remember that a frame which is out of alignment will cause handling problems. If misalignment is suspected as the result of an accident, it will be necessary to strip the machine completely so the frame can be thoroughly checked.

3 Side and centrestand – maintenance

1 The centrestand (where fitted) pivots on two bolts attached to the frame. Periodically, remove the pivot bolts and grease them thoroughly to avoid excessive wear.

2 Make sure the return spring is in good condition. A broken or weak spring is an obvious safety hazard.

3 The sidestand is attached to a bracket on the frame (see illustration). A pair of springs anchored to the bracket ensures that the stand is held in the retracted or extended position.

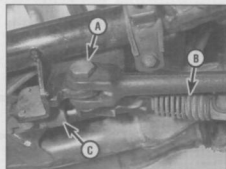

3.3 The sidestand is attached to a bracket on the frame

A Pivot
B Springs
C Sidestand switch

4 Make sure the pivot bolt is tight and springs are in good condition and not stretched. An accident is almost certain to occur if the stand extends while the machine is in motion.

4 Handlebars – removal and installation


1 The handlebar is a one-piece unit held in place by light alloy caps.

2 If the handlebar must be removed to access to other components, such as the forks or the steering head, it's not necessary to disconnect the cables, wires or brake hose, but it's a good idea to support the assembly with a piece of wire or rope, to avoid unnecessary strain on the cables, wires or the brake hose.

3 If the handlebar is to be removed completely, refer to Chapter 6 for the cylinder removal procedures, Chapter 7 for the throttle grip removal procedure, Chapter 8 for the switch removal procedure. It's necessary to remove the grips, unscrew the grip end weights with an Allen wrench (see illustration).



4.3 Unscrew the grip end weights with an Allen wrench

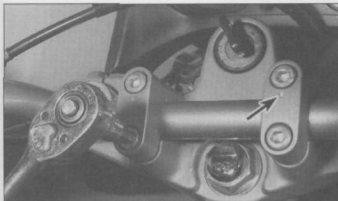

4.4 Pry or lift the trim caps from the Allen bolts, then remove the bolts and lift off the caps to remove the handlebar; the arrow marks (arrowed) point to the front of the bike when the caps are installed

4 Pry the trim caps out of the handlebar clamps, then unbolt the clamps and lift off the handlebar (see illustration).

5 Check the handlebars for cracks and distortion and renew them if any undesirable conditions are found.

6 Installation is the reverse of the removal steps, with the following additions:

- Align the match mark on the handlebar with the gap between the rear of the right mounting bracket in the upper triple clamp and its cap.
 - Position the caps with their arrow marks pointing forward (see illustration 4.4).
 - Tighten the front bolts first, then the rear bolts to the torque listed in this Chapter's Specifications. Don't try to close the gaps between the rear of the caps and the upper triple clamp; over-tightening will only break the clamps or strip out the bolt holes.
- d)** Reinstall the trim caps.

5 Forks – removal and installation




Removal

- Set the bike on its centrestand (if equipped) or support it securely upright.
- Unbolt the brake hose retainer from the fork leg. Remove the caliper mounting bolts and support the caliper out of the way. Don't disconnect the brake hose and don't let the caliper hang by the brake hose.
- Remove the front wheel (see Chapter 6).
- Unbolt the front fender.
- If you're going to remove the fork cap bolts, loosen them now.
- Loosen the upper and lower triple clamp bolts (see illustration). Slide the fork down out of the triple clamps and remove it from the bike.




5.6 Loosen the triple clamp bolts (arrowed) and lower the fork out of the triple clamps

- Cap bolt
- Cap bolt O-ring
- Spacer
- Spring seat
- Spring
- Damper rod and rebound spring
- Oil lock piece
- Fork tube
- Seal protector – 1997-on UK
- Dust seal
- Retaining clip
- Oil seal
- Washer
- Bushing
- Fork slider
- Copper washer
- Damper rod bolt
- Oil drain screw and washer – 1992-94 only

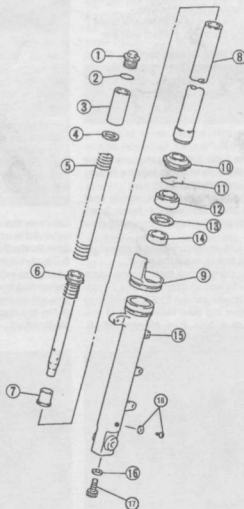

6.2 Front fork – exploded view

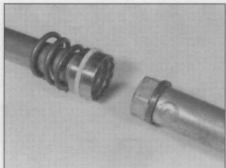

6.4a This is a special tool that's used to hold the damper rod from turning



6.4b Loosen the damper rod bolt with an Allen wrench . . .



6.4c . . . and remove the bolt and its copper washer – use a new copper washer during reassembly

Installation

7 Installation is the reverse of the removal steps, with the following additions:

- Position the ends of the fork tubes flush with the upper triple clamp.
- Tighten all fasteners to the torques listed in this Chapter's Specifications.
- Pump the front brake lever several times to bring the pads into contact with the discs.

 
6 Forks – disassembly, inspection and reassembly



Disassembly

- Remove the forks following the procedure in Section 5. Work on one fork leg at a time to avoid mixing up the parts.
- Remove the fork cap, spacer, spring seat and spring (the cap should have been loosened before the forks were removed) (see illustration).
- Invert the fork assembly over a container and pump the fork to expel the oil.
- Prevent the damper rod from turning using a holding handle and an adapter with a 24 mm hex size; a Yamaha service tool is available to hold the damper rod (see illustration) or you can make up a tool (see *Haynes Hint*).

HAYNES
HINT



A

B



You can fabricate your own damper rod holding tool using a bolt with a head that fits inside the top of the damper rod in the fork, two nuts, a socket (to fit on the nuts), a long extension and a ratchet. Thread the two nuts onto the bolt and tighten them against each other (A). Insert the assembly into the socket and tape it into place (B). Now, insert the tool into the fork tube and engage the bolt head into the hex recess in the damper rod.

Unscrew the Allen bolt at the bottom of the outer tube and retrieve the copper washer (see illustrations).

5 Tip out the damper rod and the rebound spring (see illustration). Don't remove the Teflon ring from the damper rod unless a new one will be installed.

6 Pry the dust seal from the outer tube (see illustration).

7 Pry the retaining ring from its groove in the outer tube (see illustration). Remove the ring.

8 Hold the outer tube and yank the inner tube away from it, repeatedly (like a slide-hammer) until the seal and outer tube guide bushing pop loose (see illustration).

9 Slide the seal, washer and bushing from the inner tube (see illustration).




6.5 Remove the damper rod and the Teflon ring – don't separate the ring from the damper rod unless you plan to replace it




6.6 Pry the dust seal out of the outer tube



6.7 Pry out the retaining ring

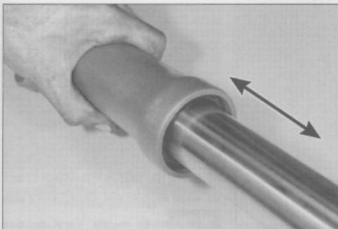

6.8 To separate the inner and outer fork tubes, pull them apart firmly several times – the slide hammer effect will pull the tubes apart

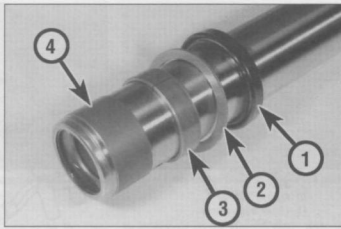

6.9 These parts will come out with the inner fork tube

- 1 Seal
2 Washer

- 3 Outer tube bushing
4 Inner tube bushing

Inspection

10 Clean all parts in solvent and blow them dry with compressed air, if available. Check the inner and outer fork tubes, the bushings and the damper rod for score marks, scratches, flaking of the chrome and excessive or abnormal wear. Look for dents in the tubes and replace them if any are found. Check the fork seal seat for nicks, gouges and scratches. If damage is evident, leaks will occur around the seal-to-outer tube junction. Replace worn or defective parts with new ones.

11 Check the inner tube for runout with a dial gauge and V-blocks (see illustration). If it's necessary to replace the inner guide bushing (the one that won't come off that's on the bottom of the inner tube), pry it apart at the slit and slide it off. Make sure the new one seats properly.



Warning: If a tube is bent, it should not be straightened; replace it with a new one.

12 Measure the overall length of the fork spring and check it for cracks and other damage. Compare the length to the minimum

length listed in this Chapter's Specifications. If it's defective or sagged, replace both fork springs with new ones. Never replace only one spring!

13 All UK models from 1997 on have an oil seal protector fitted to the fork slider. If one of these is damaged, ease it out of its retaining groove in the slider and replace it with a new one; install the new seal protector so that its raised shield faces the front of the motorcycle when the fork is installed.

Reassembly

14 Place the rebound spring over the damper rod, then slide the rod assembly into the inner fork tube until it protrudes from the lower end of the tube. Fit the oil lock piece over the end of the damper rod.


15 Insert the inner tube/damper rod assembly into the outer tube until the Allen bolt (with a new copper washer) can be threaded into the damper rod from the lower end of the outer tube. **Note:** Apply a non-permanent thread locking compound to the threads of the bolt. Using the tool described in Step 4, hold the damper rod and tighten the Allen bolt to the torque listed in this Chapter's

Specifications. **Note:** If you didn't use the tool, tighten the damper rod bolt after the fork spring and cap bolt are installed.

16 Slide the outer guide bushing down the inner tube. Using the Yamaha special bushing driver and a used guide bushing placed on top of the guide bushing being installed, drive the bushing into place until it's fully seated (see illustration). If you don't have access to one of these tools, it is highly recommended that you take the assembly to a Yamaha dealer service department or other motorcycle repair shop to have this done. It is possible, however, to drive the bushing into place using a section of pipe and an old guide bushing (see illustration). Wrap tape around the ends of the pipe to prevent it from scratching the fork tube.

17 Slide the washer down the inner tube, into position over the guide bushing.

18 Lubricate the lips and the outer diameter of the fork seal with the recommended fork oil (see Chapter 1) and slide it down the inner tube, with the lip facing down and the seal markings facing upwards. Drive the seal into

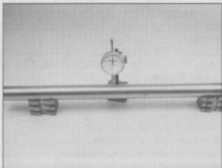

6.11 Check the inner fork tube for runout with a dial gauge and V-blocks




6.16a Drive the bushing into position with a tool like this one if it's available (use the tool like a slide hammer) ...



6.16b ... if you don't have the proper tool, a section of pipe can be used the same way the special tool would be used - as a slide hammer (be sure to tape the ends of the pipe so it doesn't scratch the fork tube)

- 1 Trim plug
- 2 Handlebar bracket
- 3 Lockwasher
- 4 Ring nuts
- 5 Rubber washer
- 6 Bearing cover
- 7 Upper bearing assembly
- 8 Dust seal
- 9 Lower bearing assembly
- 10 Rubber washer
- 11 Upper triple clamp - XJ600S type shown
- 12 Steering stem nut
- 13 Brake hose retainer

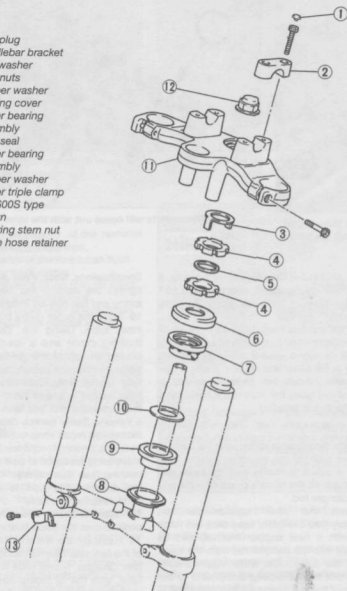

7.4a Steering head bearings



7.4b Unscrew the steering stem nut



7.5a Lift off the lockwasher ...

place with the same tools used to drive in guide bushing. If you don't have access these, it is recommended that you take assembly to a Yamaha dealer service department or other motorcycle repair shop have the seal driven in. If you are very careful the seal can be driven in with a hammer and drift punch. Work around the circumference the seal, tapping gently on the outer edge the seal until it's seated. Be careful - if you distort the seal, you'll have to disassemble the fork again and end up taking it to a dealer anyway!

19 Install the retaining ring, making sure the ring is completely seated in its groove.

20 Install the dust seal, making sure it is seated completely.

21 On 1992-94 models, install the dust cap screw and a new gasket, if it was removed.

22 Add the recommended type and amount of fork oil (see Chapter 1).

23 Install the fork spring, with the closed wound coils at the top.

24 Install the spring seat on top of the spring, followed by the spacer.

25 Extend the fork tube and install the fork cap bolt tightening whilst compressing the spring; it will be tightened to the specified torque after the fork is installed.

26 Install the fork by following the procedure outlined in Section 5. If you won't be installing the fork right away, store it in an upright position.

27 Tighten the fork cap bolt to the torque listed in this Chapter's Specifications.

7 Steering head bearings - replacement

Removal

1 If the steering head bearing check adjustment (see Chapter 1) does not remove excessive play or roughness in the steering head bearings, the entire front end must be disassembled and the bearings and races replaced with new ones.

2 Remove the handlebars (see Section 4), the front wheel (see Chapter 6) and the front fork (see Section 5). On XJ600N models, detach the headlamp bracket from the upper triple clamp.

3 Unbolt the brake hose retainer from the lower triple clamp (see illustration 7.4a in Chapter 6).

4 Remove the steering stem nut (with washer - later UK models), then lift off the upper triple clamp (sometimes called the fork bridge, yoke or crown) (see illustrations).

5 Remove the lockwasher, upper ring nut and rubber washer from the steering stem (see illustrations). Use an adjustable spanner (see illustration 19.7 in Chapter 1) or the Yamaha service tool, which has a square hole in the handle for measuring torque.



7.5b ... unscrew the upper ring nut, lift off the rubber washer and unscrew the lower ring nut (arrowed)



7.7a Lift off the bearing cover ...



7.7b ... the upper bearing inner race and the bearing

6 Remove the lower ring nut (see illustration 7.5b).

7 Remove the bearing cover, upper bearing inner race and the upper bearing (see illustrations).

8 Lower the steering stem out of the steering head, then remove the rubber washer, lower bearing and dust seal (see illustration). If the steering stem is stuck, gently tap on the top end with a plastic mallet or a hammer and wood block.

Inspection

9 Clean all the parts with solvent and dry them thoroughly, using compressed air, if available. Wipe the old grease out of the bearing outer races in the frame.

10 Examine the outer races in the steering head for cracks, dents, and pits. If even the slightest amount of wear or damage is evident, the races should be replaced with new ones.

11 To remove the bearing outer races from the steering head, drive them out with a hammer and punch (see illustration). A slide-hammer with the proper internal-jaw puller will also work.

12 When installing the outer races, tap them gently into place with a hammer and punch or a large socket. Do not strike the race surface or the race will be damaged.

13 Check the bearings for wear. Look for cracks, dents, and pits in the bearing balls and their cage. Also check for loose balls or for any that may have fallen out of the cage. Replace any defective parts with new ones. If a new bearing is required, replace both bearings and their races as a set.

14 Check the dust seal under the lower bearing and replace it with a new one if necessary.

15 Don't remove the lower bearing inner race unless it must be replaced. To remove the inner race, tap between the race and steering stem with a chisel (see illustration).

16 Inspect the steering stem/lower triple clamp for cracks and other damage. Do not attempt to repair any steering components. Replace them with new parts if defects are found.

Installation

17 Pack the lower bearing with medium weight lithium-based grease and install it on

its inner race on the steering stem. **Note:** A small hand-operated grease gun will make this job easier. Coat the top and bottom outer races with grease also.

18 Slip the steering stem/lower triple clamp into the steering head.

19 Pack the upper bearing with grease and install it in its outer race in the top of the steering head.

20 Install the inner race in the upper bearing, then install the bearing cover and lower ring nut (make sure the tapered side of the ring nut faces down). Refer to Chapter 1 and adjust the bearings then install the rubber washer, upper ring nut and lockwasher.

21 Install the upper triple clamp and steering stem nut (with washer, where applicable) and tighten the nut to the specified torque setting. The remainder of installation is the reverse of the removal steps in Steps 2 and 3 of this Section.

8 Rear shock absorber – removal, inspection and installation



Removal

1 Set the bike on its centrestand (if equipped) or support it securely upright.

2 Remove the seat (see Chapter 7) and the fuel tank (see Chapter 3).




Since the outer races are installed with an interference fit in the frame, installation will be easier if the new races are left overnight in a freezer. This will cause them to contract and slip into place in the frame with very little effort.




7.8 Carefully lower the steering stem out of the steering head and remove the rubber washer, lower bearing and dust seal



7.11 Drive the lower bearing outer race out from above; drive the upper bearing outer race out from below

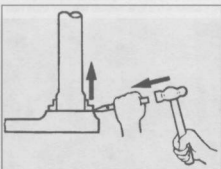

7.15 Tap a chisel between the lower bearing inner race and the lower triple clamp to remove the race

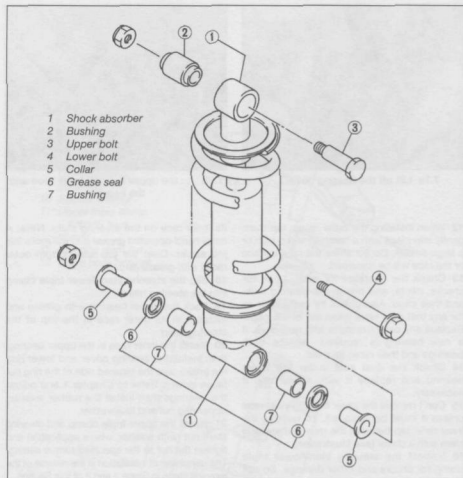

8.3a Rear shock absorber details

3 Support the rear wheel. Remove the shock absorber lower bolt and its dust seals and collars (**see illustrations**).

4 Remove the upper mounting bolt and nut. Remove the shock absorber from the motorcycle.

Inspection

5 Check the shock for signs of oil or gas leaks and replace it if you find any.

6 Inspect the pivot hardware at the top and bottom of the shock and replace any worn or damaged parts.

7 Before you discard a worn shock absorber, release the gas pressure by drilling a 2 to 3 mm (0.08 to 0.12 inch) hole through the top of the shock cylinder wall at the specified location (**see illustration**). You can also take the shock absorber to a Yamaha dealer for safe disposal.



8.3b Remove the upper mounting bolt and nut ...



8.3c ... and the lower mounting bolt and nut and lift the shock absorber out

Caution: Wear eye protection to prevent eye damage from escaping gas and/or metal chips.

Installation

8 Installation is the reverse of the removal steps, with the following additions:

- Apply multi-purpose lithium grease to the collars and pivot bolt shafts.
- Tighten all fasteners to the torques listed in this Chapter's Specifications.

9 Swingarm bearings – check

1 Refer to Chapter 6 and remove the rear wheel, then refer to Section 8 and remove the rear shock absorber.

2 Grasp the rear of the swingarm with one hand and place your other hand at the junction of the swingarm and the frame. Try to move the rear of the swingarm from side-to-side. Any wear (play) in the bearings should be felt as movement between the swingarm and the frame at the front. The swingarm will actually be felt to move forward and backward at the front (not from side-to-side). If any play is noted, the bearings should be replaced with new ones (**see Section 11**).


3 Next, move the swingarm up and down through its full travel. It should move freely, without any binding or rough spots. If it doesn't move freely, refer to Section 10 for servicing procedures.

10 Swingarm – removal and installation

1 Set the bike on its centrestand (if equipped) or prop it securely upright.

2 Remove the chain guard (**see illustration 1.4a in Chapter 1**) and the rear wheel (**see Chapter 6**).

3 Remove any support brackets and detach associated wiring, cables, or hoses from the swingarm.

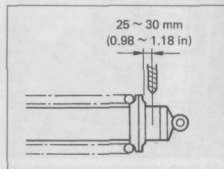

8.7 Wear eye protection and drill a hole at the point shown to release gas from the shock absorber before discarding it



10.8 Remove the nut (arrowed) from the swingarm pivot shaft

4 Detach the rear brake caliper on models so equipped (see Chapter 6).

5 Detach the brake torque link from the swingarm and position it so that its guide loop does not place any strain on the rear brake hose.

6 Detach the shock absorber from the swingarm (see Section 9).

7 Pry the trim caps from the ends of the swingarm pivot shaft.

8 Remove the swingarm pivot nut (see illustration).

9 Support the swingarm and pull the pivot shaft out (see illustration). Remove the swingarm. If necessary, remove the bolts and detach the suspension linkage relay arm from the swingarm.

10 Check the pivot bearings in the swingarm for dryness or deterioration. If they're in need of lubrication or replacement, refer to Section 11.

11 Installation is the reverse of the removal procedure. Be sure the bearing seals are in position before installing the pivot shaft. Tighten all fasteners to the torques listed in this Chapter's Specifications. Adjust the chain as described in Chapter 1.


11 Swingarm bearings - inspection and replacement



1 Remove the swingarm (see Section 11).



11.2 Pry off the thrust cover and remove the washer...

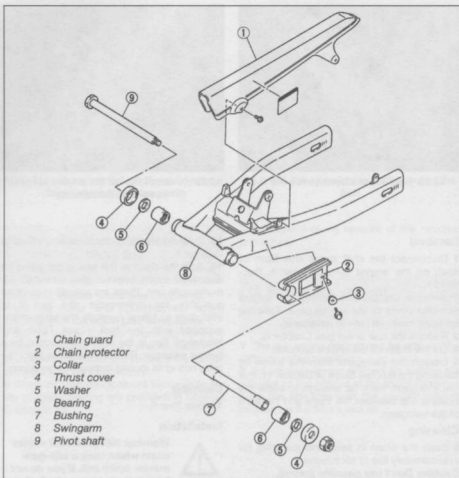

10.9 Swingarm details

2 Remove the dust cap and thrust washer from each side of the swingarm (see illustration).

3 Slide the bushing out (see illustration).

4 Inspect the bearings (see illustration). If they're dry, lubricate them with lithium-based waterproof wheel bearing grease. If they're worn or damaged, take the swingarm to a Yamaha dealer or motorcycle repair shop for bearing replacement.

12 Drive chain - removal, cleaning and installation



Endless type chain


Note: An endless chain has no riveted (soft) link - all links and pins are the same. The chain fitted as original equipment and supplied as a spare part from Yamaha dealers is of the endless type.



11.3 ... then pull out the bushing ...




11.4 ... to expose the bearings

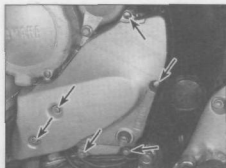

12.2a Remove the bolts (arrowed) . . .



12.2b . . . and take off the engine sprocket cover and bolt spacer

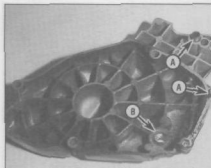

12.2c Note the locations of the dowels (C) to replace the seals (B) if they're worn – the seals are inner and outer seals, with a spacer between them

Removal

- 1 Disconnect the shift pedal arm from its shaft on the engine (see Chapter 2, Section 21).
- 2 Remove the bolts securing the engine sprocket cover to the engine case. Take the sprocket cover off (see illustrations).
- 3 Remove the rear wheel (see Chapter 6).
- 4 Lift the chain off the engine sprocket.
- 5 Detach the swingarm from the frame by following the first few Steps of Section 11. Pull the swingarm back far enough to allow the chain to slip between the frame and the front of the swingarm.

Cleaning

- 6 Soak the chain in kerosene (paraffin) for approximately five or six minutes.
- Caution:** Don't use gasoline (petrol), solvent or other cleaning fluids. Don't use high-pressure water. Remove the chain, wipe it off, then blow dry it with compressed air immediately. The entire process shouldn't take longer than ten minutes - if it does, the O-rings in the chain rollers can be damaged.

Installation

- 7 Installation is the reverse of the removal procedure. Tighten the suspension fasteners and the engine sprocket cover bolts to the torque values listed in this Chapter's Specifications. Tighten the rear axle nut to the torque listed in the Chapter 6 Specifications and secure it with a new cotter pin.
- 8 Lubricate the chain following the procedure described in Chapter 1.

Riveted link type chain

Removal

- Note:** The riveted (soft) link can be identified by its identification markings on the side plate and usually slightly different colour. Also the staked ends of the link's two pins look as if they have been deeply centre-punched, instead of peened over as with all other pins.
- 9 Locate the joining link in a suitable position to work on by rotating the back wheel; midway between the sprockets is ideal.

- 10 Slacken the drive chain as described in Chapter 1.

- 11 Split the chain at the joining link using an approved chain breaker tool intended for motorcycle use. There are a number of types available for motorcycle use and it is important to follow carefully the instructions supplied with the tool - see *Tools and Workshop Tips* in the Reference section for a typical example. Remove the chain from the bike, noting its routing through the swingarm.

Cleaning

- 12 See Step 6.

Installation




Warning: NEVER install a drive chain which uses a clip-type master (split) link. If you do not have access to a chain riveting

tool, have the chain fitted by a Yamaha dealer.

- 13 Remove the engine sprocket cover as described in Steps 1 and 2.
- 14 Thread the chain into position, making sure that it takes the correct route around the swingarm and sprockets and leave the two ends in a convenient place to work on. Obtain a new soft link - never attempt to reuse an old link.
- 15 Install the new soft link complete with an O-ring on each of its pins through the chain ends from the inside of the chain. Install an O-ring over the pin ends and fit the side plate with its identification marks facing out; use the chain tool to press the side plate into position.
- 16 Stake the new link pins using the chain riveting tool, following carefully the instructions of both the chain manufacturer and the tool manufacturer. Refer to *Tools and Workshop Tips* in the Reference section for chain riveting details using a typical commercially available tool.
- 17 After riveting, check the soft link pin ends for any signs of cracking. If there is any evidence of cracking, the soft link, O-rings and side plate must be removed and the procedure repeated with a new soft link.
- 18 Install the sprocket cover in a reverse of the removal procedure.

13 Sprockets - check and replacement

- 1 Set the bike on its centrestand (if equipped) or support it securely upright with the rear wheel off the ground.
- 2 Whenever the drive chain is inspected, the sprockets should be inspected also. If you are renewing the chain, replace the sprockets as well. Likewise, if the sprockets are in need of replacement, install a new chain also.
- 3 Remove the engine sprocket cover (see Chapter 2, Section 21).
- 4 Check the wear pattern on the sprocket (see Chapter 1). If the sprocket teeth are worn excessively, replace the chain and sprockets.
- 5 To remove the rear sprocket, remove the rear wheel (see Chapter 6). Unscrew the seal locking nuts holding the sprocket to the wheel coupling and lift it off. Check the condition of the rubber damper under the rear wheel coupling (see Section 14).
- 6 To remove the engine sprocket, shift the transmission into gear and have an assistant hold the brake on. Bend back the lockwasher and remove the sprocket nut (see illustrations).

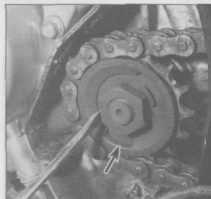

13.6a Bend back the lockwasher and remove the nut; the large lockwasher tab goes in one of the sprocket notches (arrowed) on installation . . .



13.6b . . . the recessed side of the nut faces the sprocket



13.7 Slide the sprocket off the splines and disengage it from the chain



14.2 Lift the sprocket/coupling out of the hub

7 Pull the engine sprocket and chain off the shaft, then separate the sprocket from the chain (**see illustration**).

8 When installing the engine sprocket, engage it with the chain. Install the mounting plate and tighten the nut to the torque listed in this Chapter's Specifications.

9 Install the engine sprocket cover and the shift pedal (**see Chapter 2, Section 21**).

10 Use new rear sprocket nuts if the self-locking material in the nuts is worn. Tighten the nuts to the torque listed in this Chapter's Specifications.

14 Rear wheel coupling/rubber damper – check and replacement



1 Remove the rear wheel (**see Chapter 6**).

2 Lift the collar and sprocket/rear wheel coupling from the wheel (**see illustration**).

3 Lift the rubber damper segments from the wheel and check them for cracks, hardening and general deterioration. Replace the rubber dampers as a set if necessary.

4 Checking and replacement procedures for the coupling bearing are provided in Chapter 6, Section 13.

5 Installation is the reverse of the removal procedure.

15 Suspension – adjustments



1 The rear spring preload can be adjusted for different riding conditions.

2 Adjust rear spring preload by turning the adjuster on the bottom of the shock absorber. Turn the adjuster with the special wrench included in the bike's tool kit.

Chapter 6

Brakes, wheels and tyres

Contents

Brake calipers – removal, overhaul and installation	3	Front wheel – removal and installation	11
Brake check	see Chapter 1	General information	1
Brake disc(s) – inspection, removal and installation	4	Rear brake master cylinder – removal, overhaul and installation	6
Brake fluid level check	see Daily (pre-ride) checks	Rear wheel – removal and installation	12
Brake hoses – inspection and replacement	7	Tyres – general information and fitting	14
Brake light switches – check and adjustment	see Chapter 1	Wheel bearings – inspection and maintenance	13
Brake pads – replacement	2	Wheels – alignment check	10
Brake system bleeding	8	Wheels – inspection and repair	9
Front brake master cylinder – removal, overhaul and installation	5	Wheels and tyres – general check	see Chapter 1

Degrees of difficulty

Easy , suitable for novice with little experience		Fairly easy , suitable for beginner with some experience		Fairly difficult , suitable for competent DIY mechanic		Difficult , suitable for experienced DIY mechanic		Very difficult , suitable for expert DIY or professional	
--	---	---	---	---	---	--	---	---	---

Specifications

Brakes

Brake fluid type	DOT 4 (or as directed on reservoir cap)
Brake pad minimum thickness	see Chapter 1
Brake disc thickness	
Front	
Standard – 1992-97 UK models, all US models	6.0 mm (0.24 inch)
Standard – 1998-on UK models	5.0 mm (0.20 inch)
Minimum	Refer to marks stamped into the disc
Rear	
Standard	5.0 mm (0.20 inch)
Minimum	Refer to marks stamped into the disc
Disc runout limit	
1992-97 UK models, all US models	0.25 mm (0.010 inch)
1998-on UK models	0.15 mm (0.006 inch)

Wheels and tyres

Wheel runout limit – 1992-95 UK models, 1992-96 US models	
Vertical	2.0 mm (0.08 inch)
Lateral	2.0 mm (0.08 inch)
Wheel runout limit – 1996-on UK models, 1997-on US models	
Vertical	1.0 mm (0.04 inch)
Lateral	0.5 mm (0.02 inch)
Tyre pressures and tread depth	see Daily (pre-ride) checks
Tyre sizes**	
Front	110/80-17 57H
Rear	130/70-18 63H

**Refer to the tyre information/fitment label on the motorcycle (it supersedes information printed here).

Torque settings

Caliper bracket mounting bolts

1992 to 1997 UK models, all US models	35 Nm (25 ft-lbs)
1998-on UK models	40 Nm (30 ft-lbs)
Front caliper bracket Allen bolt	23 Nm (17 ft-lbs)
Rear caliper pad retaining bolts	10 Nm (86 in-lbs)
Front axle	59 Nm (43 ft-lbs)
Front axle pinch bolts	20 Nm (168 in-lbs)
Brake disc mounting bolts	20 Nm (168 in-lbs)
Union (banjo fitting) bolts	30 Nm (22 ft-lbs)
Master cylinder mounting bolts	
Front	9 Nm (78 in-lbs)
Rear	23 Nm (17 ft-lbs)
Rear axle nut	105 Nm (75 ft-lbs)
Torque link bolts and nuts	
1992-95 UK models, 1992-96 US models	30 Nm (22 ft-lbs)
1996-on UK models, 1997-on US models	23 Nm (17 ft-lbs)


1 General information

All models covered by this manual use a single (dual on 1998-on UK models), pin-slider front caliper with dual pistons and a single, fixed-mount rear caliper with opposed dual pistons.

All models are equipped with cast aluminium wheels, which require very little maintenance and allow tubeless tyres to be used.



2.1a Remove the nut and detach the reflector from the mount ...

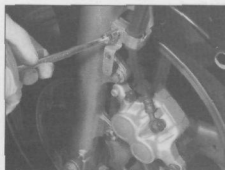

2.1b ... and unbolt the brake hose bracket from the fork (single disc models ...)

Caution: Disc brake components rarely require disassembly. Do not disassemble components unless absolutely necessary. If any hydraulic brake line connection in the system is loosened, the entire system should be disassembled, drained, cleaned and then properly filled and bled upon reassembly. Do not use solvents on internal brake components. Solvents will cause seals to swell and distort. Use only clean brake fluid, brake system cleaner or alcohol for cleaning. Use care when working with brake fluid as it can injure your eyes and it will damage painted surfaces and plastic parts.

2 Brake pads – replacement

Front caliper

Warning: The dust created by the brake system may contain asbestos, which is harmful to your health. Never blow it out with compressed air and don't inhale any of it. An approved filtering mask should be worn when working on the brakes.

1 Set the bike on its centrestand (if equipped) or prop it securely upright. Remove the nut



2.1c ... and twin disc models)


and detach the reflector, then unbolt the reflector mount and brake hose bracket (see illustrations).

2 Loosen the caliper retaining (Allen) bolt (see illustrations). Remove the caliper mounting bolts, slip the caliper off the disc and remove the retaining bolt (see illustration).

3 Loosen the caliper bleed valve. At the end of hose to the valve and place it in a container. This will allow brake fluid to escape when the pistons are pushed into the caliper. Pry the pads apart to make room for the new, thicker pads (see illustration). Push the pistons into the caliper as far as possible, using thumb pressure. If you cannot depress the pistons with thumb pressure, use a G-clamp. If a piston sticks, remove the caliper and overhaul it as described in Section 3. Tighten the bleed valve.


4 Swivel the mounting bracket clear of the caliper and remove the pads (see illustration).

5 Inspect the condition of the pads. If they are worn to the limit listed in the Chapter Specifications (if the wear groove in the friction material is worn away), the pads must be replaced. They must also be replaced

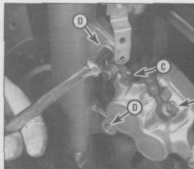


2.2a Loosen the caliper retaining Allen bolt while the caliper is still installed, then remove the caliper mounting bolts


- A Brake hose union bolt
- B Caliper bracket Allen bolt
- C Bleed valve
- D Mounting bolts (lower bolt removed)

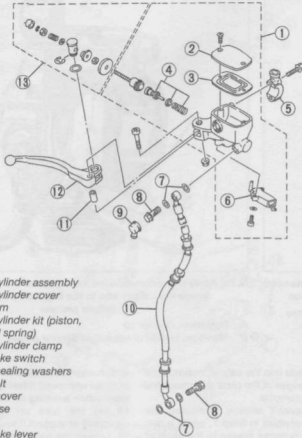


- 1 Master cylinder assembly
- 2 Master cylinder cover
- 3 Diaphragm
- 4 Master cylinder kit (piston, cups and spring)
- 5 Master cylinder clamp
- 6 Front brake switch
- 7 Copper sealing washers
- 8 Union bolt
- 9 Rubber cover
- 10 Brake hose
- 11 Collar
- 12 Front brake lever
- 13 Adjuster mechanism
- 14 Bleed valve
- 15 Caliper retaining bolt
- 16 Caliper assembly
- 17 Pistons and seals
- 18 Pad spring
- 19 Brake pads
- 20 Pad spring
- 21 Pad spring
- 22 Brake disc
- 23 Brake disc Allen bolt

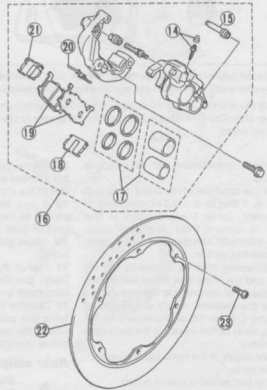

2.2b Front brake – exploded view

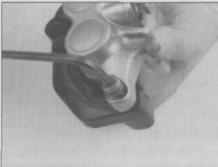


2.2c Remove the caliper retaining bolt (caliper removed from bike for clarity)

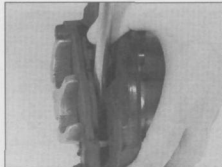

2.3 Pry the pads apart to make room for the new ones (caliper removed from bike for clarity)




2.4 Remove the pads from the caliper bracket (caliper removed from bike for clarity)

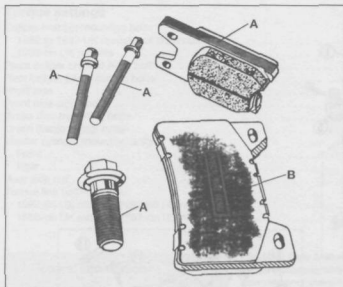

2.7a Special lubricants are required in the UK (and recommended anywhere salt is used on the roads) to prevent corrosion

- A Apply Duckhams Copper 10 or equivalent to the shaded areas
B Apply Shin-Etsu G-40M or equivalent silicone grease to the shaded areas

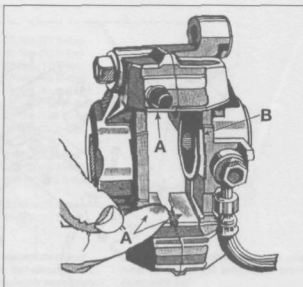

2.7b Apply the recommended lubricants to the pad friction inside the caliper and to the exposed portion of the caliper pistons

- A Duckhams Copper 10
B Shin-Etsu G-40M or equivalent silicone grease

they've been contaminated with oil, grease or brake fluid.

6 Check the condition of the brake discs (see Section 4). If they're in need of machining or replacement, follow the procedure in that Section to remove them. If they're okay, deglaze them with sandpaper or emery cloth, using a swirling motion.

7 The following step is necessary on UK models, and anywhere else where salt is used on the roads, to ensure that the pads move freely in the calipers. Apply a thin film of Duckhams Copper 10 or equivalent to the following areas before installing the pads (see illustrations):

- To the edges of the metal backing on the brake pads.
- To the pad retaining pins or bolt(s).
- To the areas of the caliper where the pads rub.
- To the threads of the caliper mounting bolts.

Caution: Don't use too much Copper 10 and don't apply it to the pad pin retaining bolts (if equipped) or the anti-rattle shim(s). Make sure no Copper 10 contacts the brake discs or the pad friction surfaces.

Apply a thin film of Shin-Etsu G-40M or equivalent silicone grease to the following:

- Exposed areas of the caliper pistons
- The areas of the pad backing plates that contact the pistons.

8 Install the pads in the caliper, making sure the pad springs are installed correctly on the caliper and mounting bracket (see illustration 2.2b and the accompanying illustration).

9 Slide the pads into the caliper, making sure the rounded edges of the pads are toward the rear of the motorcycle.

10 If you haven't already lubricated the caliper as described in Step 7, apply a thin coat of multi-purpose grease to the shaft of the caliper guide pin and to the pad retaining bolt.


11 Top up the master cylinder reservoir (see Daily (pre-ride) checks) and install the diaphragm and cap.

12 Operate the brake lever several times to bring the pads into contact with the disc. Check the operation of the brakes carefully before riding the motorcycle.

Rear caliper



Warning: The dust created by the brake system may contain asbestos, which is harmful to your health. Never blow it out

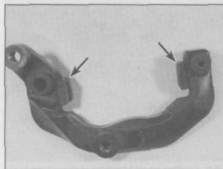

2.8 Make sure the upper and lower springs are installed on the caliper bracket

with compressed air and don't inhale of it. An approved filtering mask should be worn when working on the brakes.


13 Set the bike on its centrestand (equipped) or support it securely upright.

14 Loosen the pad retaining bolts, but remove them yet (see illustrations).

15 Remove the cotter pin and nut from the torque link bolt and pull out the bolt (illustration 2.14a).


16 Remove the caliper mounting bolts from the caliper off the disc.

17 Unscrew the pad retaining bolts and

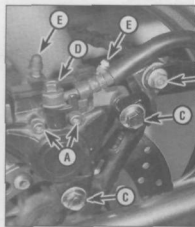

2.14a Rear caliper mounting details

- A Pad retaining bolts
B Torque link bolt
C Mounting bolts
D Brake hose bolt
E Bleed valves

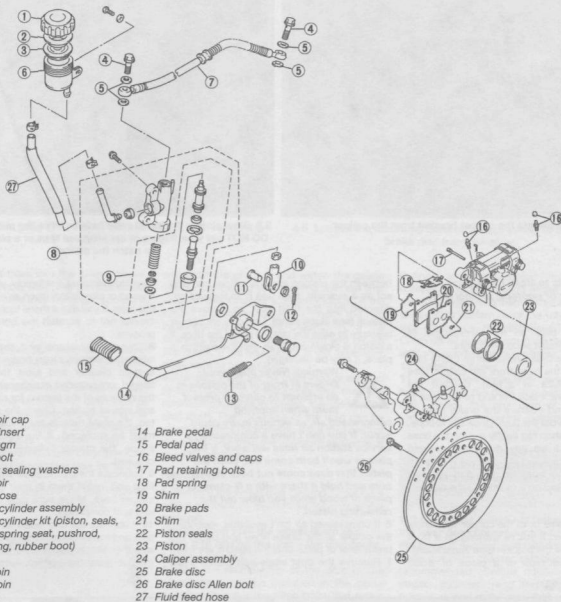

2.14b Rear brake – exploded view

them out. Remove the pads, shims and pad spring from the caliper (see illustration).

18 Perform Steps 5 through 7 to inspect the pads and disc and prepare the caliper for pad installation.

19 Install the spring, pads and shims in the caliper (see illustration 2.14b). Be sure the spring and shims face in the proper direction.

20 Install the pad retaining bolts and tighten them finger-tight.

21 Install the caliper and tighten its mounting bolts to the torque listed in this Chapter's Specifications. Tighten the pad retaining bolts securely.


22 Install the torque link nut and bolt and tighten them to the torque listed in this

Chapter's Specifications. Secure the nut with a new cotter pin.


3 Brake calipers – removal, overhaul and installation



Warning: The dust created by the brake system may contain asbestos, which is harmful to your health. Never blow it out with compressed air and don't inhale any of it. An approved filtering mask should be worn when working on the brakes. Do not, under any circumstances, use petroleum-

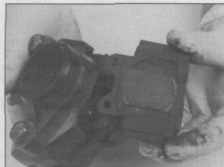

2.17 Slide the pads out of the bottom of the caliper

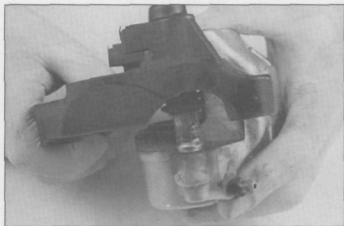

3.4 Separate the caliper bracket from the caliper



3.5 Blow air into the bleed valve hole to force the pistons out, DO NOT get your fingers in the way; use rags or a piece of wood to catch the pistons

based solvents to clean brake parts. Use brake cleaner or isopropyl alcohol only!

Removal

- 1 Place the bike on its centrestand (if equipped) or prop it securely upright.
- 2 Remove the brake hose banjo fitting bolt and separate the hose from the caliper (see illustration 2.2a or 2.14a). Discard the sealing washers. Place the end of the hose in a container and operate the brake lever or pedal to pump out the fluid. Once this is done, wrap a clean shop rag tightly around the hose fitting to soak up any drips and prevent contamination.
- 3 Refer to the front or rear pad removal procedure in Section 2 to remove the caliper.

Overhaul

- 4 Clean the exterior of the caliper with brake system cleaner. If you're working on a front caliper, remove the bracket (see illustration).
- 5 Place a few rags or a piece of wood

between the pistons and the caliper frame to act as a cushion, then use compressed air, directed into the fluid inlet, to remove the pistons (see illustration). Use only enough air pressure to ease the pistons out of the bore. If a piston is blown out, even with the cushion in place, it may be damaged.



Warning: Never place your fingers in front of the pistons in an attempt to catch or protect them when applying

compressed air, as serious injury could occur. If you don't have a compressor, a service station air hose will work. If the pistons won't both come out, push the piston that does come out back into its bore and hold it there with a G-clamp or piece of wood while you blow out the remaining piston.

- 6 If compressed air isn't available, reconnect the caliper to the brake hose and pump the brake lever or pedal until the pistons are free.
- 7 Remove the dust seals and piston seals

(see illustrations). Preferably, you should use a wood or plastic tool (such as a toothpick) for this step. If you use a metal tool, be extremely careful not to scratch the bore or nick the grooves.

8 Clean the pistons and the bores with isopropyl alcohol, clean brake fluid or brake system cleaner and blow them dry with filtered, unlubricated compressed air. Inspect the surfaces of the pistons for nicks and loss of plating. Check the caliper bore too. If surface defects are present, the caliper must be replaced. If the caliper is in good shape, the master cylinder should also be checked.


9 Lubricate the piston seals with clean brake fluid and install them in their grooves in the caliper bore. Make sure they aren't twisted and seat completely.

10 Lubricate the dust seals with clean brake fluid and install them in their grooves, making sure they seat correctly.

11 Lubricate the pistons with clean brake




3.7a Remove the dust seal and piston seal from each bore with a pointed tool; this is a front caliper ...

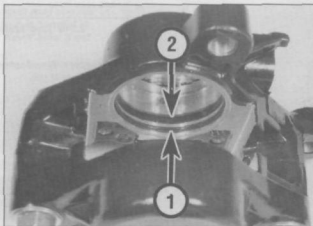


3.7b ... and this is a rear caliper

1 Dust seal 2 Piston seal

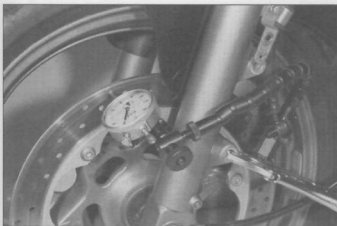

4.3 Set up a dial gauge to contact the brake disc, then rotate the wheel to check for runout

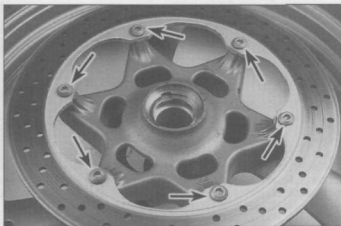

4.6 Loosen the mounting bolts (arrowed) evenly to detach the brake disc from the wheel

fluid and install them into the caliper bores. Using your thumbs, push the pistons all the way in, making sure they don't get cocked in the bores.

Installation

12 Install the caliper, tightening the mounting bolts to the torque listed in this Chapter's Specifications.

13 Connect the brake hose to the caliper, using new sealing washers on each side of the fitting. Tighten the banjo fitting bolt to the torque listed in this Chapter's Specifications.

14 Fill the master cylinder with the recommended brake fluid (see *Daily (pre-ride) checks*) and bleed the system (see Section 8). Check for leaks.

15 Check the operation of the brakes carefully before riding the motorcycle.

wheel off the ground) and watch the gauge needle, comparing your reading with the limit listed in this Chapter's Specifications. If the runout is greater than listed, check the hub bearings for play (see Chapter 1). If the bearings are worn, replace them and repeat this check. If the disc runout is still excessive, it will have to be replaced.

4 The disc must not be machined or allowed to wear down to a thickness less than the minimum allowable thickness, stamped on the disc itself. The thickness of the disc can be checked with a micrometer. If the thickness of the disc is less than the minimum allowable, it must be replaced.

Removal

5 Remove the wheel (see Section 12 for front wheel removal or Section 13 for rear wheel removal).

Caution: *Don't lay the wheel down and allow it to rest on the disc – the disc could become warped.*

6 Mark the relationship of the disc to the wheel, so it can be installed in the same position. Remove the Allen bolts that retain the disc to the wheel (see *illustration*). Loosen the bolts a little at a time, in a criss-cross pattern, to avoid distorting the disc.

Caution: *The bolts are secured with thread locking agent and can be very difficult to remove. Be careful not to round out the bolt sockets.*

7 Take note of any paper shims that may be present where the disc mates to the wheel. If there are any, mark their position and be sure to include them when installing the disc.

Installation

8 Position the disc on the wheel, aligning the previously applied matchmarks (if you're reinstalling the original disc). Make sure the arrow (stamped on the disc) marking the direction of rotation is pointing in the proper direction.

9 Apply a non-hardening thread locking compound to the threads of the bolts. Install the bolts, tightening them a little at a time, in a criss-cross pattern, until the torque listed in this Chapter's Specifications is reached. Clean off all grease from the brake disc using acetone or brake system cleaner.

10 Install the wheel.

11 Operate the brake lever or pedal several times to bring the pads into contact with the disc. Check the operation of the brakes carefully before riding the motorcycle.

5 Front brake master cylinder – removal, overhaul and installation



1 If the master cylinder is leaking fluid, or if the lever does not produce a firm feel when the brake is applied, and bleeding the brakes does not help, master cylinder overhaul is recommended. Before disassembling the master cylinder, read through the entire procedure and make sure that you have the correct rebuild kit. Also, you will need some new, clean brake fluid of the recommended type, some clean rags and internal snap-ring pliers. **Note:** *To prevent damage to the paint from spilled brake fluid, always cover the fuel tank when working on the master cylinder.*

2 Disassembly, overhaul and reassembly of the brake master cylinder must be done in a spotlessly clean work area to avoid contamination and possible failure of the brake hydraulic system components.

Removal

3 Loosen, but do not remove, the screws holding the reservoir cover in place (see *Daily (pre-ride) checks*).

4 Disconnect the electrical connectors from the brake light switch.

5 Pull back the rubber boot, loosen the union bolt and separate the brake hose from the

4 Brake discs – inspection, removal and installation



Inspection

1 Set the bike on its centrestand (if equipped) or prop it securely upright.

2 Visually inspect the surface of the disc(s) for score marks and other damage. Light scratches are normal after use and won't affect brake operation, but deep grooves and heavy score marks will reduce braking efficiency and accelerate pad wear. If the discs are badly grooved they must be machined or replaced.

3 To check disc runout, mount a dial gauge to the fork leg or the swingarm, with the plunger touching the surface of the disc near the outer edge (see *illustration*). Support the wheel being checked off the ground and slowly turn the wheel (if you're checking the front disc on a model equipped with a centrestand, have an assistant sit on the seat to raise the front



5.5a Pull back the rubber cover, place rags under the fitting to catch brake fluid spills and remove the union bolt ...



5.5b ... note that there are two hoses on 1988-on UK models



5.6 Remove the master cylinder mounting bolts (arrowed)

master cylinder (see illustration). On 1998-on UK models (with twin disc brakes) there will be two hoses connected to the master cylinder (see illustration). Wrap the end of the hose in a clean rag and suspend the hose in an upright position or bend it down carefully and place the open end in a clean container. The objective is to prevent excessive loss of brake fluid, fluid spills and system contamination.

6 Remove the master cylinder mounting bolts (see illustration) and separate the master cylinder from the handlebar.

Caution: Do not tip the master cylinder upside down or brake fluid will run out.

Overhaul

7 Remove the locknut and lever pivot bolt, then remove the brake lever (see illustration). Remove the small snap-ring and take the adjuster components off the master cylinder pushrod.

8 Detach the reservoir cover and the rubber diaphragm, then drain the brake fluid into a suitable container. Remove the splash plate

from the bottom of the reservoir (if equipped (see illustration)), then wipe any remaining fluid out of the reservoir with a clean rag.

9 Prevent the pushrod from turning by holding it with a wrench, then unscrew the pushrod nut and remove the washer (see illustration). Carefully remove the rubber boot from the end of the piston (see illustration).

10 Using snap-ring pliers, remove the ring and master cylinder pushrod (see illustrations).

11 Slide out the piston assembly, spring




5.7 Remove the snap-ring (left arrow); undo the locknut (right arrow) and unscrew the pivot bolt




5.8 Lift the splash plate (if equipped) out of the cylinder body so you can clean the fluid ports in the bottom



5.9a Hold the pushrod and remove the nut and washer ...

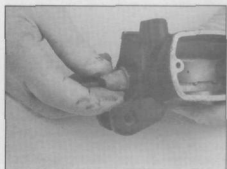


5.9b ... and remove the rubber boot

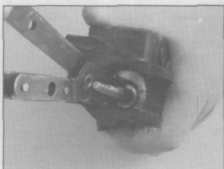

5.10a Remove the snap-ring from the cylinder bore ...



5.10b ... then pull out the pushrod

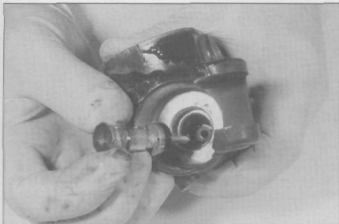

5.11a ... the piston assembly ...



5.11b ... the spring and spring seat

and spring (see illustrations). Lay the parts out in the proper order to prevent confusion during reassembly.

12 Clean all of the parts with brake system cleaner (available at auto parts stores), isopropyl alcohol or clean brake fluid.

Caution: Do not, under any circumstances, use a petroleum-based solvent to clean brake parts. If compressed air is available, use it to dry the parts thoroughly (make sure it's filtered and unlubricated). Check the master cylinder bore for corrosion, scratches, nicks and score marks. If damage is evident, the master cylinder must be replaced with a new one. If the master cylinder is in poor condition, then the caliper should be checked as well.

13 Use all of the new parts in the rebuild kit, regardless of the apparent condition of the old ones.

14 Before reassembling the master cylinder, soak the piston and the rubber cup seals in clean brake fluid for ten or fifteen minutes. Lubricate the master cylinder bore with the lubricant supplied in the rebuild kit or with clean brake fluid, then carefully insert the piston and related parts in the reverse order of disassembly. Make sure the lips on the cup seals do not turn inside out when they are slipped into the bore.

15 Depress the piston, then install the snap-ring (make sure the snap-ring is properly seated in the groove). Install the rubber dust boot (make sure the lip is seated properly in the piston groove).

Installation

16 Attach the master cylinder to the handlebar and tighten the bolts to the torque listed in this Chapter's Specifications. Tighten the upper bolt first, then the lower bolt, and don't try to close the gap between the lower end of the bracket and the master cylinder. Overtightening will only break the master cylinder or bracket casting.

17 Connect the brake hose to the master

cylinder, using new sealing washers on each side of the union; on 1988-on UK models also use a new sealing washer between the two unions. Tighten the banjo fitting bolt to the torque listed in this Chapter's Specifications. Refer to Section 8 and bleed the air from the system.

6 Rear brake master cylinder - removal, overhaul and installation

1 If the master cylinder is leaking fluid, or if the pedal does not produce a firm feel when the brake is applied, and bleeding the brakes does not help, master cylinder overhaul is recommended. Before disassembling the master cylinder, read through the entire procedure and make sure that you have the correct rebuild kit. Also, you will need some new, clean brake fluid of the recommended type, some clean rags and internal snap-ring pliers.

2 Disassembly, overhaul and reassembly of

the brake master cylinder must be done in a spotlessly clean work area to avoid contamination and possible failure of the brake hydraulic system components.

Removal

3 Set the bike on its centrestand (if equipped) or prop it securely upright.

4 Remove the cotter pin from the clevis pin on the master cylinder pushrod (see illustration 2.14b and the accompanying illustration). Remove the clevis pin and washer.


5 Loosen the brake hose union bolt, then remove the Allen bolts that secure the master cylinder to the footpeg bracket (see illustration).

6 If you plan to remove the reservoir, remove its mounting screw.

7 If you don't plan to remove the reservoir, have a container and some rags ready to catch spilling brake fluid. Using a pair of pliers, slide the clamp up the fluid feed hose and detach the hose from the master cylinder. Direct the end of the hose into the container,



6.4 Pull out the cotter pin (arrowed) and remove the washer and clevis pin

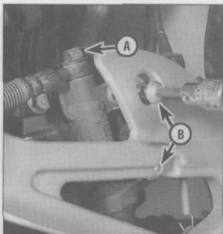


6.5 Loosen the union bolt (A) and remove the mounting bolts (B)




6.8 Lift the master cylinder up and over the footpeg bracket, then undo the union bolt




6.10a Pry the fluid feed hose fitting out of the grommet ...

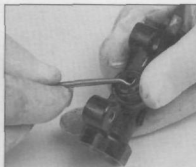

6.10b ... and pry the grommet out of master cylinder bore

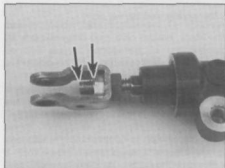

6.11a Measure the length of exposed threads (arrowed) and write it down for use on assembly; this affects brake pedal height

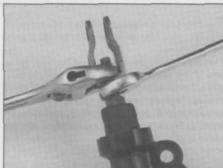

6.11b Hold the clevis, loosen the locknut and unscrew the clevis and nuts from the pushrod ...



6.11c ... then remove the rubber boot

unscrew the cap on the master cylinder reservoir and allow the fluid to drain.

8 Lift the master cylinder up to clear the footpeg bracket, then lift it away from the motorcycle (together with the reservoir if it's being removed) (see illustration). Unscrew the union bolt from the master cylinder and discard the sealing washers on each side of the fitting.

9 Remove the master cylinder from the motorcycle.

Overhaul

10 Check for brake fluid leaks at the fluid inlet fitting. If there are signs of leakage, the inlet seal must be replaced. The seal isn't included in the rebuild kit and is not especially easy to replace. To do so, carefully pry the inlet fitting from the master cylinder body, then remove the seal from the fitting bore (see illustration 2.14b and the accompanying illustrations). Install the new seal after the master cylinder body has been cleaned.

11 Note how far onto the pushrod the clevis threaded (see illustration). This affects brake pedal height adjustment. Hold the clevis with a wrench and loosen the locknut and clevis from the pushrod and carefully remove rubber dust boot (see illustration).


12 Depress the pushrod and, using snappliers, remove the snap-ring. Slide out piston assembly and spring (see illustrations). Lay the parts out in the pro-



6.12a Remove the snap-ring from the bore ...



6.12b ... then remove the piston and spring

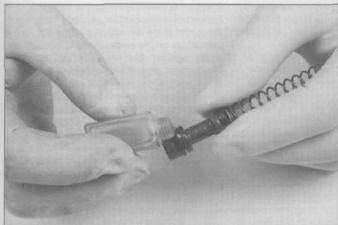

6.15 Lubricate the piston cups with brake fluid or the lubricant supplied in the rebuild kit



6.16 Push the rubber boot into its groove

order to prevent confusion during reassembly.
13 Clean all of the parts with brake system cleaner (available at auto parts stores), isopropyl alcohol or clean brake fluid.

Caution: Do not, under any circumstances, use a petroleum-based solvent to clean brake parts. If compressed air is available, use it to dry the parts thoroughly (make sure it's filtered and unlubricated). Check the master cylinder bore for corrosion, scratches, nicks and score marks. If damage is evident, the master cylinder must be replaced with a new one. If the master cylinder bore is in poor condition, then the caliper should be checked as well.

14 A new piston and spring are included in the rebuild kit. Use them regardless of the condition of the old ones.

15 Before reassembling the master cylinder, soak the piston and the rubber cup seals in clean brake fluid for ten or fifteen minutes. Lubricate the master cylinder bore and the piston seals with the lubricant supplied in the rebuild kit (see illustration) or with clean brake fluid, then carefully insert the parts in the reverse order of disassembly. Make sure the lips on the cup seals do not turn inside-out when they are slipped into the bore.

16 Depress the pushrod, then install the snap-ring (make sure the snap-ring is properly seated in the groove). Install the rubber dust boot (make sure the lip is seated properly in the groove) (see illustration).

17 Install the clevis to the end of the pushrod, threading it on the same distance as it was before removal, then tighten the locknut.

18 If the fluid inlet seal was removed, coat a new one with the lubricant supplied in the rebuild kit or with clean brake fluid. Install the seal in the bore, wide end first. Push the inlet fitting into the seal, making sure it seats securely.

Installation

19 Position the master cylinder on the footpeg bracket and tighten its mounting bolts.

20 Connect the banjo fitting to the top of the master cylinder, using a new sealing washer on each side of the fitting. Tighten the banjo fitting bolt to the torque listed in this Chapter's Specifications.

21 Connect the fluid feed hose to the inlet fitting and install the hose clamp.

22 Connect the clevis to the brake pedal and secure the clevis pin with a new cotter pin.

23 Attach the reservoir and tighten its mounting screw (if it was removed). Fill the fluid reservoir with the specified fluid (see Daily (pre-ride) checks) and bleed the system following the procedure in Section 8.

24 Check the position of the brake pedal (see Chapter 1) and adjust it if necessary. Check the operation of the brakes carefully before riding the motorcycle.

7 Brake hoses – inspection and replacement

Inspection

1 Once a week, or if the motorcycle is used less frequently, before every ride, check the condition of the brake hoses.

2 Twist and flex the rubber hoses while

looking for cracks, bulges and seeping fluid. Check extra carefully around the areas where the hoses connect with the banjo fittings, as these are common areas for hose failure.

3 Inspect the metal banjo fittings connected to brake hoses. If the plating on the metal tubes is chipped or scratched, the lines may rust. If the fittings are rusted, scratched or cracked, replace them.

Replacement

4 The brake hoses have banjo fittings on each end of the hose. Cover the surrounding area with plenty of rags and unscrew the banjo bolt on each end of the hose. If you're working on the front brake hose, detach the hose bracket from the lower triple clamp (see illustrations), as well as from the retainer on the front fork. Note that the rear brake hose passes through a guide on the brake torque link.

5 Position the new hose, making sure it isn't twisted or otherwise strained, between the two components, routing it through any guides provided. Make sure the metal tube portion of the banjo fitting is located between the protrusions on the component it's connected to, if equipped. In some cases, there's a cast lug (on caliper bodies, for example) that keeps the brake hose from



7.4a Unbolt the brake hose retainer from the lower triple clamp (single disc models ...



7.4b ... and twin disc models)

spinning clockwise as the banjo bolt is tightened. Install the banjo bolts, using new sealing washers on both sides of the fittings, and tighten them to the torque listed in this Chapter's Specifications.

6 Flush the old brake fluid from the system, refill the system with the recommended fluid (see Specifications) and bleed the air from the system (see Section 8). Check the operation of the brakes carefully before riding the motorcycle.

8 Brake system - bleeding



1 Bleeding the brake is simply the process of removing the air bubbles from the brake fluid reservoirs, the lines and the brake calipers. Bleeding is necessary whenever a brake system hydraulic connection is loosened, when a component or hose is replaced, or when the master cylinder or caliper is overhauled. Leaks in the system may also allow air to enter, but leaking brake fluid will reveal their presence and warn you of the need for repair.

2 To bleed the brakes, you will need some new, clean brake fluid of the recommended type (see Specifications), a length of clear vinyl or plastic tubing, a small container partially filled with clean brake fluid, some rags and a wrench to fit the brake caliper bleeder valves.

3 Cover the fuel tank and other painted components to prevent damage in the event that brake fluid is spilled.

4 Remove the reservoir cap or cover and slowly pump the brake lever or pedal a few times, until no air bubbles can be seen floating up from the holes at the bottom of the reservoir.

5 Slip a box-end wrench (ring spanner) over the caliper bleed valve. Attach one end of the clear vinyl or plastic tubing to the bleeder valve and submerge the other end in the brake fluid in the container (see illustration).

6 Remove the reservoir cap or cover and check the fluid level. Do not allow the fluid level to drop below the lower mark during the bleeding process.

7 Carefully pump the brake lever or pedal three or four times and hold it. Open the caliper bleed valve. When the valve is opened, brake fluid will flow out of the caliper into the clear tubing and the lever will move toward the handlebar or the pedal will move down.

8 Retighten the bleeder valve, then release the brake lever or pedal gradually. Repeat the process until no air bubbles are visible in the brake fluid leaving the caliper and the lever or pedal is firm when applied. **Note:** On rear calipers with two bleed valves or dual front brake calipers, air must be bled from both, one after the other. Remember to add fluid to the reservoir as the level drops. Use only new, clean brake fluid of the recommended type. Never reuse the fluid lost during bleeding.

9 Replace the reservoir cover or cap, wipe up any spilled brake fluid and check the entire system for leaks.



HINT If bleeding is difficult, it may be necessary to let the brake fluid in the system stabilise for a few hours (it may be aerated). Repeat the bleeding procedure when the tiny bubbles in the system have floated out.

9 Wheels - inspection and repair



1 Place the motorcycle on the centrestand, then clean the wheels thoroughly to remove mud and dirt that may interfere with the inspection procedure or mask defects. Make a general check of the wheels and tyres as described in Chapter 1 and Daily (pre-ride) checks.

2 With the motorcycle on the centrestand (equipped) or supported securely upright the wheel in the air, attach a dial gauge to the fork slider or the swingarm and position the stem against the side of the rim (see illustration). Spin the wheel slowly and check the side-to-side (lateral) runout of the wheel. Then compare your readings with the values listed in this Chapter's Specifications. In order to accurately check radial runout with the gauge, the wheel would have to be removed from the machine and the tyre removed.


3 An easier, though slightly less accurate method is to attach a stiff wire pointer to the fork slider or the swingarm and position the end a fraction of an inch from the tyre (where the wheel and tyre join). If the wire is true, the distance from the pointer to the tyre will be constant as the wheel is rotated. Repeat the procedure to check the runout of the rear wheel. **Note:** If wheel runout is excessive, check the wheel bearings carefully before replacing the wheel.

4 The wheels should also be visually inspected for cracks, flat spots on the rim or other damage. Since tubeless tyres are fitted very closely for dents in the area where the tyre bead contacts the rim, dents in this area may prevent complete sealing of the tyre against the rim, which leads to deflation over a period of time.


5 If damage is evident, or if runout in one direction is excessive, the wheel may have to be replaced with a new one. Never attempt to repair a damaged cast aluminium wheel.

10 Wheels - alignment check


1 Misalignment of the wheels, which may be due to a cocked rear wheel or a bent front triple clamps, can cause strange and possi-

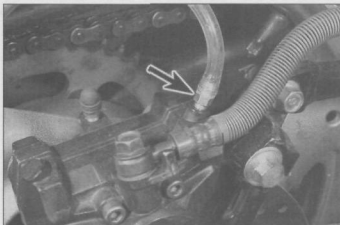

8.5 Loosen the bleed valve to release fluid

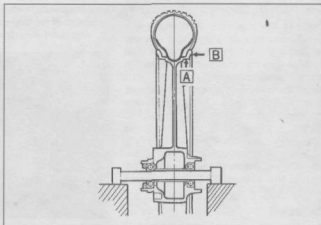

9.2 Check the wheel for out-of-round (A) and lateral movement (B)

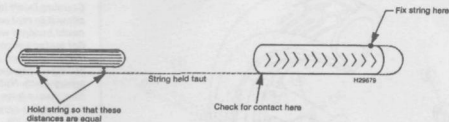

10.5 Wheel alignment check using string

serious handling problems. If the frame or triple clamps are at fault, repair by a frame specialist or replacement with new parts are the only alternatives.

2 To check the alignment you will need an assistant, a length of string or a perfectly straight piece of wood and a ruler graduated

in 1/64 inch increments. A plumb bob or other suitable weight will also be required.

3 Place the motorcycle on the centrestand, then measure the width of both tyres at their widest points. Subtract the smaller measurement from the larger measurement, then divide the difference by two. The result is the amount of offset that should exist between the front and rear tyres on both sides.

4 If a string is used, have your assistant hold one end of it about half way between the floor and the rear axle, touching the rear sidewall of the tyre.

5 Run the other end of the string forward and pull it tight so that it is roughly parallel to the floor. Slowly bring the string into contact with the front sidewall of the rear tyre, then turn the front wheel until it is parallel with the string. Measure the distance from the front tyre sidewall to the string (**see illustration**).

6 Repeat the procedure on the other side of the motorcycle. The distance from the front tyre sidewall to the string should be equal on both sides.

7 As was previously pointed out, a perfectly straight length of wood can be substituted for the string (**see illustration**). The procedure is the same.

8 If the distance between the string and tyre is greater on one side, or if the rear wheel appears to be cocked, refer to Chapter 5, *Swingarm bearings* – check, and make sure the swingarm is tight.

9 If the front-to-back alignment is correct, the

wheels still may be out of alignment vertically.

10 Using the plumb bob, or other suitable weight, and a length of string, check the rear wheel to make sure it is vertical. To do this, hold the string against the tyre upper sidewall and allow the weight to settle just off the floor. When the string touches both the upper and lower tyre sidewalls and is perfectly straight, the wheel is vertical. If it isn't, place thin spacers under one leg of the centrestand.

11 Once the rear wheel is vertical, check the front wheel in the same manner. If both wheels are not perfectly vertical, the frame and/or major suspension components are bent.

11 Front wheel – removal and installation


Removal

1 Place the motorcycle on the centrestand (if equipped) or support it securely upright, then raise the front wheel off the ground by placing a floor jack, with a wood block on the jack head, under the engine.


2 Disconnect the speedometer cable from the drive unit (**see Chapter 8**).

3 Remove the brake caliper(s) and support it with a piece of wire. Don't disconnect the brake hose from the caliper.

4 Remove the axle clamp bolts (**see illustrations**). On 1992 to 1997 UK models

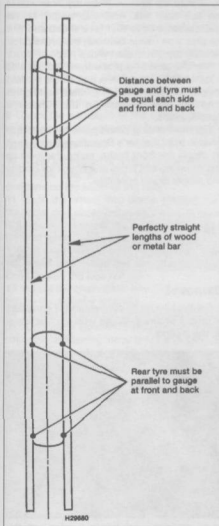


10.7 Wheel alignment check using a straight-edge

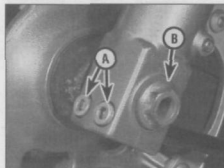

11.4a Axle clamp bolts (A) and axle head (B) – 1992-97 UK models and all US models



11.4b Axle clamp bolt and axle head – 1998-on UK models

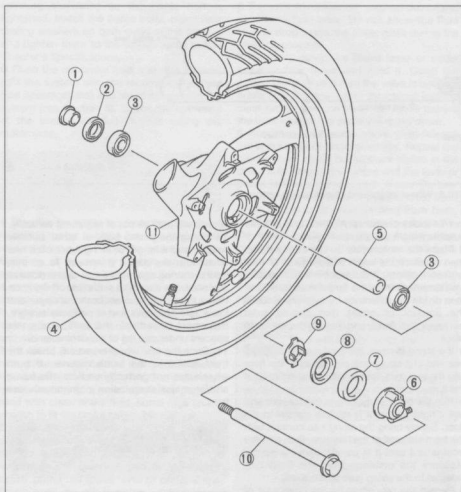

11.5 Front wheel details

- | | |
|--------------------------|-------------------------------|
| 1 Collar | 7 Grease seal |
| 2 Grease seal | 8 Speedometer clutch retainer |
| 3 Wheel bearing | 9 Speedometer clutch |
| 4 Tire | 10 Axle* |
| 5 Spacer | 11 Front wheel |
| 6 Speedometer drive unit | |

*Note that the axle passes through the hub from the other side on 1998-on UK models

and all US models, there are two axle clamp bolts in the left fork leg; 1998-on UK models have a single clamp bolt in the right fork leg.

5 Support the wheel, then unscrew the axle and pull it out and carefully lower the wheel (see illustration). On 1992 to 1997 UK models and all US models the axle is

unscrewed from the left side, and on 1998-on UK models from the right side.

Caution: Don't lay the wheel down and allow it to rest on the brake disc – the disc could become warped. Roll the axle on a flat surface such as a piece of plate glass. If it's bent at all, replace it. If the axle is corroded, remove the corrosion with fine emery cloth. **Note:** Do not operate the front brake lever with the wheel removed.

6 Check the condition of the wheel bearing (see Section 13).

Installation

7 Installation is the reverse of removal. Make sure the collar is in place on the right side of the wheel (see illustration). Apply a thin layer of grease to the seal lip, then slide it into the hub. Position the speedometer drive unit in the left side of the hub (if it is removed), then slide the wheel into place. Make sure the lugs in the speedometer drive unit line up with the notches in the speedometer drive unit (see illustration). Make sure the protrusion on the inner side of the left fork fits into the notch in the speedometer drive unit (see illustration). The disc won't slide between the brake pads, so carefully pry them apart with a piece of wood. 8 Slip the axle into place from the left (1992 to 1997 UK models and all US models) or right side (1998-on UK models) and tighten it to the torque listed in this Chapter's Specifications.

9 Tighten the axle pinch bolts to the torque listed in this Chapter's Specifications.

10 Apply the front brake, pump the fork up and down several times and check for binding and proper brake operation.


12 Rear wheel – removal and installation

Removal

1 Set the bike on its centrestand (if equipped) or prop it securely upright with the rear wheel off the ground.



11.7a There's a collar in the right side grease seal

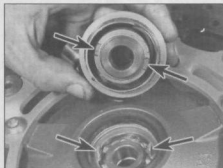

11.7b Align the lugs on the speedometer clutch with the slots in the drive unit (arrowed)



11.7c Align the fork leg protrusion with the notch in the speedometer drive unit (arrowed)

- 2 Remove the chain guard (see Chapter 1 if necessary).
- 3 Remove the cotter pin from the axle nut and loosen the nut (see the chain adjustment section of Chapter 1).
- 4 Fully loosen both drive chain adjusters.
- 5 Push the rear wheel as far forward as possible. Lift the top of the chain up off the rear sprocket and pull it to the left while rotating the wheel backwards. This will disengage the chain from the sprocket.



Warning: Don't let your fingers slip between the chain and the sprocket.

- 6 Unscrew the axle nut (see illustration).
- 7 Support the wheel and slide the axle out. Lower the wheel and remove it from the swingarm, being careful not to lose the spacers on either side of the hub. Slide the disc out from between the brake pads.

Caution: Don't lay the wheel down and allow it to rest on the disc or the sprocket – they could become warped. Set the wheel on wood blocks so the disc or the sprocket doesn't support the weight of the wheel. Don't operate the brake pedal with the wheel removed.

- 8 Before installing the wheel, check the axle for straightness by rolling it on a flat surface such as a piece of plate glass (if the axle is corroded, first remove the corrosion with fine emery cloth). If the axle is bent at all, replace it.
- 9 Check the condition of the wheel bearings and renew them if necessary (see Section 13).


Installation

- 10 Apply a thin coat of grease to the seal lips, then slide the spacers into their proper positions on the sides of the hub.
- 11 Slide the wheel into place, making sure the brake disc slides between the brake pads. If it doesn't, spread the pads apart with a piece of wood.
- 12 Pull the chain up over the sprocket, raise the wheel and install the axle and axle nut. Don't tighten the axle nut yet.
- 13 Adjust the chain slack (see Chapter 1) and tighten the adjuster locknuts.
- 14 Tighten the axle nut to the torque listed in this Chapter's Specifications. Install a new cotter pin, tightening the axle nut an additional amount, if necessary, to align the hole in the axle with the castellations on the nut. Be sure to bend the cotter pin correctly (see Drive chain and sprockets – check, adjustment and lubrication in Chapter 1).
- 15 Check the operation of the rear brake carefully before riding the motorcycle.

13 Wheel bearings – inspection and maintenance



- 1 Remove the wheel. See Section 11 (front wheel) or Section 12 (rear wheel).
- 2 Set the wheel down on wood blocks so it doesn't rest on the brake disc(s) or sprocket.

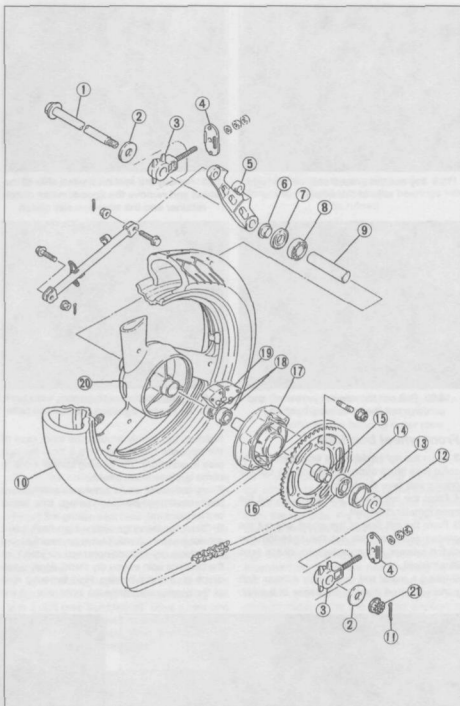

12.6 Rear wheel details


- | | |
|-----------------------------------|------------------------------------|
| 1 Axle | 12 Collar |
| 2 Plate washer | 13 Grease seal |
| 3 Chain adjuster | 14 Coupling bearing |
| 4 End plate | 15 Collar |
| 5 Caliper bracket | 16 Rear sprocket |
| 6 Collar | 17 Rear wheel coupling |
| 7 Grease seal | 18 Rear wheel bearings (left side) |
| 8 Rear wheel bearing (right side) | 19 Damper segments |
| 9 Spacer | 20 Rear wheel |
| 10 Tire | 21 Axle nut |
| 11 Cotter pin | |




13.3 Pry out the grease seal on the right side of the wheel



13.5 Pry out the seal on the left side of the wheel and remove the speedometer clutch retainer and the speedometer clutch

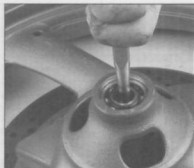

13.6a Tap out the bearing on the opposite side with a drift

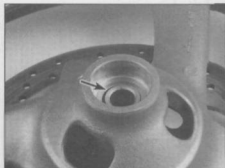

13.6b Pull out the spacer (arrowed) and drive out the remaining bearing



13.9 Fill the bearing with grease, working it into the spaces between the bearing balls



13.10a Place the bearing in position with the sealed side facing out . . .

Front wheel bearings

3 From the right side of the wheel, lift out the collar (see illustration 11.7a) and pry out the grease seal (see illustration).

4 From the left side of the wheel, lift out the speedometer drive unit.

5 From the left side of the wheel, pry out the grease seal, then lift out the speedometer clutch retainer and speedometer clutch (see illustration).

6 Using a metal rod (preferably a brass drift punch) inserted through the centre of the hub

bearing, tap evenly around the inner race of the opposite bearing to drive it from the hub (see illustration). The bearing spacer will also come out (see illustration).


7 Lay the wheel on its other side and remove the remaining bearing using the same technique.

8 Clean the bearings with a high flash-point solvent (one which won't leave any residue) and blow them dry with compressed air (don't let the bearings spin as you dry them). Apply a few drops of oil to the bearing. Hold the outer race of the bearing and rotate the inner race – if the


bearing doesn't turn smoothly, has rough spots or is noisy, replace it with a new assembly.

9 If the bearing checks out okay and isn't reused, wash it in solvent once again and, if it's reused, wash it in solvent once again and then pack the bearing with high-quality bearing grease (see illustration).

10 Thoroughly clean the hub area on the wheel. Install one of the bearings in the recess in the hub, with the marked or 'O' side facing out (see illustration). Use a bearing driver or a socket large enough to contact the outer race of the bearing, drive it until it's completely seated (see illustration).

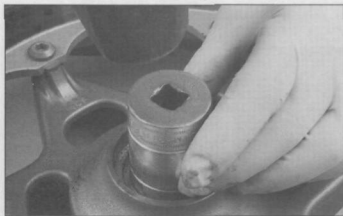


13.10b . . . and drive it in with a socket or bearing driver the same diameter as the bearing outer race; if pressure is applied to the sealed area or inner race, the bearing will be ruined

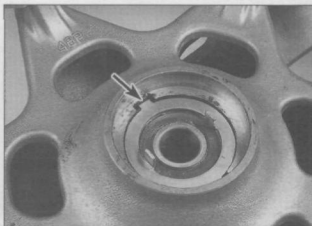

13.11 Position the speedometer clutch inner tab in the slot of the wheel (arrowed)




13.15a Remove the collar from the coupling ...

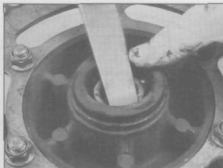


13.15b ... and pry out the grease seal



13.16 Remove the coupling collar; don't forget to install it later or the bearings will be ruined

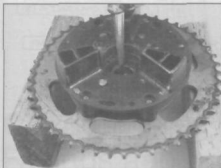

13.17a Tap the old bearing out of the coupling ...

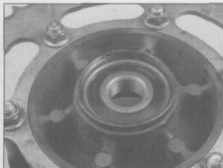

13.17b ... place the new bearing in the coupling ...



13.17c ... and install the bearing with a bearing driver or a socket the same diameter as the bearing outer race

11 Turn the wheel over and install the bearing spacer and bearing, driving the bearing into place as described in Step 10. Install the speedometer clutch and retainer on the left side of the wheel (see illustration).

12 Install new grease seals, using a seal driver, large socket or a flat piece of wood to drive them into place.

13 Install the speedometer drive unit, making sure the lugs in the speedometer clutch align with the notches in the gear (see illustration 11.7b).

14 Clean off all grease from the brake disc(s) using acetone or brake system cleaner. Install the wheel.

Rear coupling bearing

15 Lift the collar from the coupling on the sprocket side of the wheel (see illustration 12.6 and the accompanying illustration). Pry out the grease seal (see illustration).

16 Lift the sprocket and coupling out of the wheel and turn them over. Remove the coupling collar (tap it out if necessary) (see illustration).

17 Spin the coupling bearing inner race. If it's rough, loose or noisy, drive the bearing out with a drift (see illustration). Drive a new one in with a bearing driver or socket that bears against the outer race, then drive in a new grease seal (see illustrations).


Rear wheel bearings

18 If you haven't already done so, remove the collar from the right side of the wheel (see illustration) and the sprocket and coupling from the left side. Pry the grease seal out of the right side (see illustration 13.3).

19 Insert a drift through the right bearing and tap out the bearings on the left side (see illustrations). There are two bearings on the left side of the wheel and one on the right. Remove the spacer. **Note:** There's just enough room to tilt the drift far enough to catch the edge of the inner left bearing when you're driving the bearings out. If the drift keeps glancing off the edge of the bearing, try




13.18 Lift the collar out of the brake disc side of the wheel

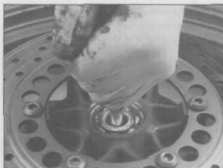

13.19a Drive out the bearings with a drift ...



13.19b ... and take out the spacer

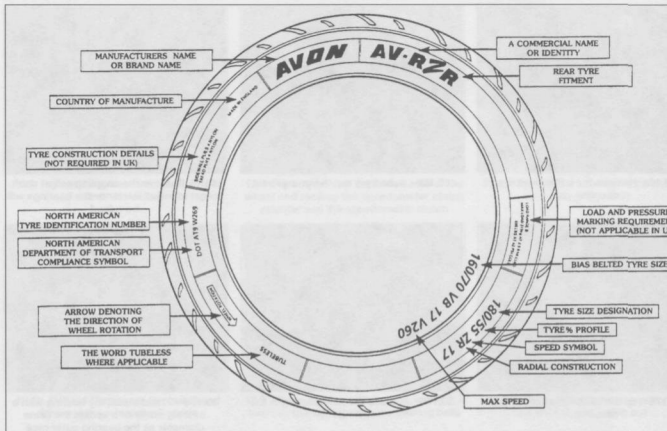

14.3 Common tyre sidewall markings

grinding its end so it has sharp corners. Another method is to use a slide-hammer with blind hole puller to pull the bearings out.

20 Turn the wheel over and tap out the bearing(s) on the opposite side.

21 Perform Steps 8 and 9 to inspect the bearings.

22 Install the bearings with their sealed sides facing out. Use a bearing driver or socket the same diameter as the outer race of the bearing.

23 Install the grease seals and collars.

24 Install the coupling to the wheel, making sure the coupling collar is in place.

Caution: If the coupling collar is left out, the rear wheel bearings will be damaged when the axle nut is tightened.

14 Tyres – general information and fitting

General information

1 The wheels fitted to all models are designed to take tubeless tyres.

2 Refer to the 'Daily (pre-ride) checks' at the beginning of this manual, and to the scheduled checks in Chapter 1 for tyre and wheel maintenance. Tyre sizes are given in the Specifications at the beginning of this Chapter.

Fitting new tyres

3 When selecting new tyres, refer to the tyre options listed in the owners handbook or on tyre information sticker on the motorcycle.

Ensure that front and rear tyre type compatible, the correct size and speed rating; if necessary seek advice from a Yamaha dealer or tyre fitting specialist (illustration).

4 It is recommended that tyres are fitted by a motorcycle tyre specialist rather than attempted in the home workshop. The required to break the seal between the rim and tyre bead is substantial, and is beyond the capabilities of an individual with normal tyre levers. Additional specialist will be able to balance the tyre after fitting and provide new valves.

5 Only certain types of puncture repair suitable for tubeless motorcycle tyres. Consult a tyre fitting specialist for advice. See your owner's manual for details of reduced speeds advised for a repaired

Chapter 7

Fairings and bodywork

Contents

General information	1	Tail cover, grab bars and side covers - removal and installation	3
Lower fairing (belly pan) - removal and installation (XJ600S)	4	Upper fairing - removal and installation (XJ600S)	5
Seat - removal and installation	2		

Degrees of difficulty

Easy, suitable for novice with little experience



Fairly easy, suitable for beginner with some experience



Fairly difficult, suitable for competent DIY mechanic



Difficult, suitable for experienced DIY mechanic



Very difficult, suitable for expert DIY or professional



1 General information

This Chapter covers the procedures necessary to remove and install the fairings and other body parts for service access. Since many service and repair operations on these motorcycles require removal of the fairings or other body parts, the procedures are grouped here and referred to from other Chapters.

In the event of damage to the fairings or other body parts, it is usually necessary to remove the broken component and replace it with a new (or used) one. The material that the fairings are composed of doesn't lend itself to

conventional repair techniques. There are, however, some shops that specialise in 'plastic welding', so it would be advantageous to check around first before throwing the damaged part away.


2 Seat - removal and installation



1 Turn the seat lock counterclockwise (anticlockwise) with the key.

2 Pull the seat back and up to disengage its mounting tabs (see illustration). Lift the seat out.

3 Installation is the reverse of the removal steps.

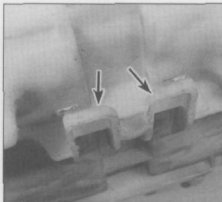

2.2 Pull the seat back and up to disengage the tab at the front of the seat



3.3a Remove the tail cover screws ...



3.3b ... and disengage the tabs at the rear

3 Tail cover, grab bars and side covers - removal and installation



1992-95 UK models, 1992-96 US models

- 1 Set the bike on its centrestand (if equipped) or prop it securely upright.
- 2 Remove the seat (see Section 2).

3 Remove the tail cover screws (see illustration). Lift the tail cover slightly up at the front and pull it back to remove it (see illustration).

4 Unbolt the grab bars (see illustration).

5 Lift the lower edges of the side covers to disengage the tabs and pull gently to disengage the post from the grommet (see illustrations), then remove the side cover.

6 Installation is the reverse of the removal steps.

1996-on UK models, 1997-models

- 7 Set the bike on its stand.
- 8 Remove the seat (see Section 2).
- 9 Remove its two screws and detach the cover, disengaging its tabs with the side covers and easing it rearward (see illustrations).
- 10 At this point either side cover removed independently from the other the grab bars (see illustrations).



3.4 Remove the grab bar bolts




3.5a Disengage the side cover tabs ...



3.5b ... and posts (arrowed)



3.9a The tail cover is retained by two screws (arrowed)

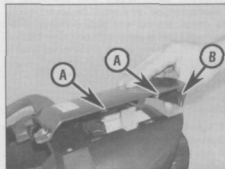

3.9b The hooks (A) engage the side cover slots and the cutout (B) engages the screw head



3.10a Remove the grab bar two (arrowed) ...



3.10b ... and remove it from the side cover



3.11a Side cover retaining screws (arrowed)



3.11b Front fillet is held by two grommets (arrowed) ...

11 Each side cover is retained by two screws (see illustration). The side cover front fillets are retained by two grommets and a hook (see illustrations).

12 Installation is the reverse of the removal steps.

4 Lower fairing (belly pan) - removal and installation (XJ600S)



Note: A lower fairing is optional on XJ600S models.

1 Support the motorcycle securely upright.

2 Support the fairing from below so it won't fall on the ground and be scratched.

3 Remove the fairing mounting screws and rubber washers (see illustrations). Lower the fairing away from the motorcycle.

4 Installation is the reverse of the removal steps.

5 Upper fairing - removal and installation (XJ600S)



1992-95 UK models, 1992-96 US models

1 Remove the fairing fasteners; there are two that also secure the base of the windshield,

one below the headlight assembly and two on each side of the fairing (see illustrations). Note the positions of the mounting grommets. If you're working on a 1993-95 UK model, remove the windscreen and the inner fairing.

2 Installation is the reverse of the removal steps.

1996-on UK models, 1997-on US models

3 Remove the fuel tank (see Chapter 3). Although fuel tank removal is not absolutely necessary, it is advised in case of damage to its paintwork.

4 Remove the six screws retaining the



3.11c ... and a hook on the inside



4.3a With the fairing supported from below, remove the mounting fasteners on each side (arrowed) ...



4.3b ... and remove the rubber washers




5.1a Remove the two screws below the windshield ...



5.1b ... an Allen bolt at each side of the fairing near the front ...



5.1c ... and one on each side at the rear

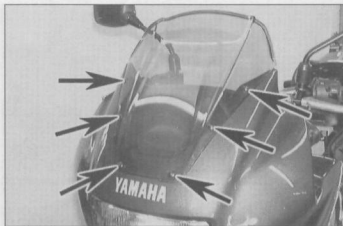


5.4a Remove the six screws (arrowed) ...



5.4b ... and remove the windshield



5.5a Ease the rubber expanders out of the fairing

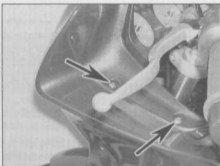

5.5b The inner section is retained by two screws (arrowed) on each side



5.5c Remove the inner section from the fairing

windshield and carefully lift the windshield off the fairing (see illustrations).

5 Ease the six rubber expanders out of the windshield mounting points in the fairing (see illustration). Remove the four bolts which retain the fairing inner section (two on each side) and manoeuvre the inner section free from the fairing (see illustrations).


6 Reach inside the fairing and trace the turn

signal wiring to the bullet connectors. Disconnect them and unscrew the nuts which retain the turn signals to the fairing. Thread the nut off the wires and remove each turn signal assembly (see illustrations).

7 The fairing is retained to its stay by six bolts (see illustrations). Have an assistant hold the fairing as the mounting bolts are removed, then extend the fairing forwards slightly to allow the

wiring from the headlight and parking light (models) to be disconnected (see illustrations). **8** Installation is the reverse of the removal steps.

9 If required, the fairing stay can be detached from the frame after the instruments have been removed. It is retained to the headlight by two bolts and to the frame top tube by a bolt on each side (see illustrations).

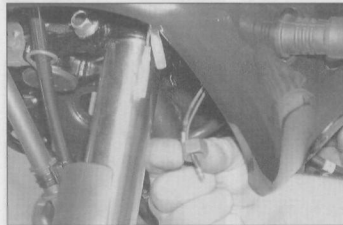

5.6a Thread the nut off the turn signal wiring ...




5.6b ... and withdraw the turn signal from the fairing



5.7a The fairing is retained at the front by two screws (arrowed) ...




5.7b ... a screw on each side (arrowed) ...

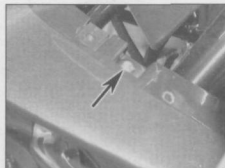

5.7c ... and a screw on each top edge (arrowed)



5.7d Manoeuvre the fairing forwards, splying its sides out to clear the turn signal mounts

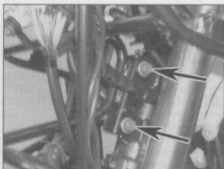

5.9a Fairing stay is mounted by two bolts at the headstock (arrowed) ...



5.9b ... and by a bolt to the frame top tube on each side (arrowed)

Chapter 8

Electrical system

Contents

Alternator – removal and installation	28	Ignition main (key) switch – check and replacement	15
Battery – charging	4	Instrument and warning light bulbs – replacement	13
Battery – inspection and maintenance	3	Instruments and speedometer cable – removal, cluster disassembly and installation	12
Brake light switches – check and replacement	11	Lighting system – check	6
Carburettor heater system components	see Chapter 3	Neutral switch – check and replacement	18
Charging system – stator coil test	27	Oil level sender – removal, check and installation	14
Charging system – output test	26	Regulator/rectifier – removal and installation	29
Charging system testing – general information and precautions	25	Relay assembly and diode	30
Clutch switch – check and replacement	20	Sidestand switch – check and replacement	19
Electrical fault finding	2	Starter motor – disassembly, inspection and reassembly	24
Fuel pump and relay	see Chapter 3	Starter motor – removal and installation	23
Fuses – check and replacement	5	Starter relays – check and replacement	22
General information	1	Throttle position sensor	see Chapter 4
Handlebar switches – check	16	Turn signal and tail light bulbs – replacement	9
Handlebar switches – removal and installation	17	Turn signal circuit – check	10
Headlight aim – check and adjustment	8	Wiring diagrams	31
Headlight bulb – replacement	7		
Horn – check and replacement	21		

Degrees of difficulty

**Easy, suitable for
novice with little
experience**



**Fairly easy, suitable
for beginner with
some experience**



**Fairly difficult,
suitable for competent
DIY mechanic**



**Difficult, suitable for
experienced DIY
mechanic**



**Very difficult,
suitable for expert DIY
or professional**



Specifications

Battery	
Type	Maintenance free
Capacity	12V, 8Ah
Fuses	
Main	30 amps
Headlight	15 amps
Signal	15 amps (1992-96 UK, all US), 10 amp (1997-on UK)
Hazard (1997-on UK models)	10 amps
Ignition	10 amps
Spares	one 30-amp, one 15-amp, one 10-amp
Starter motor	
Starter commutator diameter	
Standard	28 mm (1.1 inch)
Minimum	27 mm (1.06 inch)
Starter brush length	
Standard	12.5 mm (0.49 inch)
Minimum	4.0 mm (0.16 inch)
Starter relay resistance	3.9 to 4.7 ohms at 20°C (68°F)

Alternator

No-load regulated voltage

1992-95 UK models, all US models	14.3 to 15.3 volts at 5000 rpm
1996-97 UK models	14.2 to 15.2 volts at 5000 rpm
1998-on UK models	14.1 to 14.9 volts at 5000 rpm

Nominal output

1992-95 UK models, all US models	14 volts, 21 amps at 5000 rpm
1996-on UK models	14 volts, 20 amps at 5000 rpm

Stator coil resistance

1992-95 UK models, all US models	0.32 to 0.48 ohms at 20°C (68°F)
1996-on UK models	0.24 to 0.36 ohms at 20°C (68°F)

Bulbs

Headlight	60/55W
Parking (auxiliary) light – UK only	4W
Tail/stop light	5/21W
Licence plate light – UK only	5W
Turn signal lights	
US	
Front (with running light)	27/8W
Rear	27W
UK	21W
Meter lights	1.7W
Neutral, oil level, turn signal and high beam lights	3.4W

Torque settings

Neutral switch screws	3.5 Nm (35 in-lbs)*
Alternator	
Rotor bolt	80 Nm (58 ft-lbs)
Cover Allen bolts	10 Nm (86 in-lbs)
Starter mounting bolts	10 Nm (86 in-lbs)
Regulator/rectifier Allen bolts	7 Nm (61 in-lbs)

*Apply non-permanent thread locking agent to the threads.

1 General information

The machines covered by this manual are equipped with a 12-volt electrical system.

The regulator/rectifier maintains the charging system output within the specified range to prevent overcharging and converts the AC (alternating current) output of the alternator to DC (direct current) to power the lights and other components and to charge the battery.

The alternator uses permanent magnets mounted in the rotor; the rotor, mounted at the top of the engine case, is turned by the starter clutch shaft.

An electric starter mounted to the engine case behind the cylinders is standard equipment. The starting system includes the motor, the battery, the solenoid and the various wires and switches. On models equipped with a sidestand switch and clutch switch, if the engine kill switch and the main key switch are both in the On position, the circuit relay allows the starter motor to operate only if the transmission is in Neutral (Neutral switch on) or the clutch lever is pulled to the handlebar (clutch switch on) and the sidestand is up (sidestand switch on).

Note: Keep in mind that electrical parts, once purchased, can't be returned. To avoid unnecessary expense, make very sure the faulty component has been positively identified before buying a replacement part.

2 Electrical fault finding



Warning: To prevent the risk of short circuits, the ignition (main) switch must always be 'OFF' and the battery negative (-ve) terminal should be disconnected before any of the bike's other electrical components are disturbed. Do not forget to reconnect the terminal securely once work is finished or if battery power is needed for circuit testing.

A typical electrical circuit consists of an electrical component, the switches, relays, etc. related to that component and the wiring and connectors that hook the component to both the battery and the frame. To aid in locating a problem in any electrical circuit, complete wiring diagrams of each model are included at the end of this Chapter.

Before tackling any troublesome electrical circuit, first study the appropriate diagrams

thoroughly to get a complete picture of what makes up that individual circuit. Troubleshooting spots, for instance, can often be narrowed down by noting if other components related to that circuit are operating properly or not. If several components or circuits fail at the same time, chances are the fault lies in the fuse, ground (earth) connection, as several circuits often are routed through the same fuse, or ground (earth) connections.

Electrical problems often stem from simple causes, such as loose or corroded connections or a blown fuse. Prior to any electrical troubleshooting, always visually check the condition of the fuse, wires and connections in the problem circuit. Intermittent failures can be especially frustrating, since you can't always duplicate the failure when it's convenient to test. In such situations, a good practice is to clean all connections in the affected circuit, whether they appear to be good. All of the electrical connections and wires should also be wiggle-checked for looseness which can cause intermittent failure.

If testing instruments are going to be utilised, use the diagrams to plan where you will make the necessary connections in order to accurately pinpoint the trouble spot.

The basic tools needed for electrical fault finding include a battery and bulb test circuit.

a continuity tester, a test light, and a jumper wire. A multimeter capable of reading volts, ohms and amps is also very useful as an alternative to the above, and is necessary for performing more extensive tests and checks.



Refer to Fault Finding Equipment in the Reference section for details of how to use electrical test equipment.

3 Battery – inspection and maintenance



1 Most battery damage is caused by heat, vibration, and/or low electrolyte levels. The battery used on these vehicles is a maintenance free (sealed) type and therefore doesn't require the addition of water. However, the following checks should still be regularly performed.



Warning: Always disconnect the negative cable first and connect it last to prevent sparks which could lead the battery to explode.

2 Check around the base inside of the battery for sediment, which is the result of sulphation caused by low electrolyte levels. These deposits will cause internal short circuits, which can quickly discharge the battery. Look for cracks in the case and replace the battery if either of these conditions is found.

3 Check the battery terminals and cable ends for tightness and corrosion. If corrosion is evident, disconnect the cables from the battery, disconnecting the negative (-) terminal first, and clean the terminals and cable ends with a wire brush or knife and emery paper. Reconnect the cables, connecting the negative cable last, and apply

a thin coat of petroleum jelly to the cables to slow further corrosion.

4 The battery case should be kept clean to prevent current leakage, which can discharge the battery over a period of time (especially when it sits unused). Wash the outside of the case with a solution of baking soda and water. Do not get any baking soda solution in the battery cells. Rinse the battery thoroughly, then dry it.

5 If acid has been spilled on the frame or battery box, neutralise it with a baking soda and water solution, then touch up any damaged paint.

6 If the motorcycle sits unused for long periods of time, disconnect the cables from the battery terminals. Refer to Section 4 and charge the battery approximately once every month.

4 Battery – charging



1 If the motorcycle sits idle for extended periods or if the charging system malfunctions, the battery can be charged from an external source.

2 Do not allow the battery to be subjected to a so-called quick charge (high rate of charge over a short period of time) unless you are prepared to buy a new battery. When charging the battery, always remove it from the machine.

3 Yamaha recommends different charging techniques, depending on the type of battery charger. Since a hydrometer can't be used to check battery condition (there's no way to insert it into the cells), a voltmeter is used instead to measure the voltage between the positive and negative terminals (open-circuit voltage). Before taking the measurement, wait at least 30 minutes after any charging has taken place (including running the engine).

4 To check open-circuit voltage, disconnect

the negative cable from the battery, then the positive cable. Make sure the battery terminals are clean, then connect the positive terminal of the voltmeter to the battery positive terminal and the negative terminal to the voltmeter to the battery negative terminal. If battery voltage reads 12.8V no charging is necessary. If voltage is below this figure, charge time can be established by reference to the graph (see illustration).

Variable current (adjustable voltage) charger

5 Connect the charger to the battery. If the charger doesn't have an ammeter built in, connect one in series with the charger (see illustration).


6 Plug in the charger, set the voltage at 16 to 17 volts and note the charging current. If it's less than the standard charging current printed on the battery, go to Step 7. If it's more than the standard charging current, skip to Step 8.

7 Set the charging voltage at 20 to 25 volts then watch the charging current for three to five minutes. If it reaches one amp or more, reset the voltage at 16 to 17 volts and continue charging. If the current isn't higher than the standard charging current after five minutes, replace the battery.

8 Adjust the voltage so the charging current is at the standard charging level. Set the timer on the charger according to the charging time determined in Step 4.


9 After the battery has charged, unplug the charger and disconnect it from the battery. Wait 30 minutes, then connect a voltmeter between the battery terminals and measure the open-circuit voltage (the battery needs this time to stabilise).

- If the reading is 12.8 volts or more, the battery is charged.
- If the reading is 12.0 to 12.7 volts, continue charging the battery.
- If the reading is less than 12.0 volts, replace the battery.

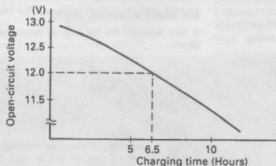


4.4 Battery open-circuit voltage and charge time relationship

Figures apply to an ambient temperature of 20°C (68°F) and a battery which is in good condition.

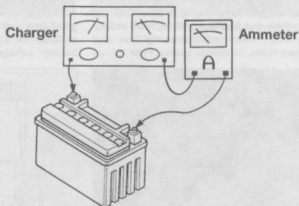

4.5 If the charger doesn't have an ammeter built in, connect one in series with the charger like this; DO NOT connect the ammeter between the battery terminals or it will be ruined

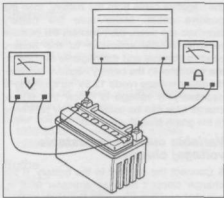

4.10 Connect the charger, ammeter and voltmeter to the battery like this; DO NOT connect the ammeter between the battery terminals or it will be ruined

Constant voltage charger

10 Connect the charger, a voltmeter and an ammeter to the battery (see illustration).

11 Plug in the charger and check the ammeter reading.

a) If it's less than the standard charging current printed on the battery, the charger won't work with a maintenance free battery. Use a variable voltage charger instead.

b) If the current flow is at the standard charging current, set charging time to a maximum of 20 hours and continue charging until charging voltage reaches 15 volts.

12 Once charging voltage has reached 15 volts, unplug the charger. Disconnect the charger from the battery and refer to Step 9 to check open-circuit voltage.

5 Fuses – check and replacement

1 All models have one fuse block located under the seat (see illustration). They include the main, headlight, signal, ignition and hazard fuses, as well as spares. Fuse ratings



5.1 The fuse block is located under the seat; lift the cover for access to the fuses

are listed in this Chapter's Specifications and inside the fuse block cover. Lift the cover from the fuse block for access to the fuses.

2 If you have a test light, all of the fuses can be checked without removing them. Turn the ignition to the ON position, connect one end of the test light to a good ground (earth), then probe each terminal on top of the fuse. If the fuse is good, there will be voltage available at both terminals. If the fuse is blown, there will only be voltage present at one of the terminals.

3 The fuses can also be tested with an ohmmeter or self-powered test light. Remove the fuse and connect the tester to the ends of the fuse. If the ohmmeter shows continuity or the test lamp lights, the fuse is good. If the ohmmeter shows infinite resistance or the test lamp stays out, the fuse is blown.

4 The fuses can be checked visually. A blown fuse is easily identified by a break in the element (see illustration).


5 If a fuse blows, be sure to check the wiring harnesses very carefully for evidence of a short-circuit. Look for bare wires and chafed, melted or burned insulation. If a fuse is replaced before the cause is located, the new fuse will blow immediately.

Caution: Never, under any circumstances, use a higher rated fuse or bridge the fuse block terminals, as damage to the electrical system could result.

6 Occasionally a fuse will blow or cause an open-circuit for no obvious reason. Corrosion of the fuse ends and fuse block terminals may occur and cause poor fuse contact. If this happens, remove the corrosion with a wire brush or emery paper, then spray the fuse end and terminals with electrical contact cleaner.

6 Lighting system – check

1 The battery provides power for operation of the headlight, tail light, brake light, licence plate light and instrument cluster lights. If none of the lights operate, always check battery voltage before proceeding. Low

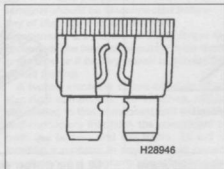

5.4 A blown fuse can be identified by a break in its element

battery voltage indicates either a faulty battery or a defective charging system. Refer to Section 4 for the battery open-circuit check and Sections 26 and 27 for charging system tests. Also, check the condition of the fuses and replace any blown fuses with new ones.

Headlight

2 If the headlight is out when the engine is running (US models) or it won't switch on (other models), check the fuse first with the key (see Section 5), then unplug the electrical connector for the headlight and use jump wires to connect the bulb directly to battery terminals. If the light comes on, the problem lies in the wiring or one of the switches in the circuit. Refer to Section 15 for the switch testing procedures, and also the wiring diagrams at the end of this Chapter.

Tail light/licence plate light

3 If the tail light fails to work, check the bulb and the bulb terminals first, then check the battery voltage at the tail light electrical connector. If voltage is present, check the ground (earth) circuit for an open or poor connection.

4 If no voltage is indicated, check the wiring between the tail light and the ignition switch, then check the switch. On UK models, check the lighting switch as well.

Brake light

5 See Section 11 for the brake light switch checking procedure.

Neutral indicator light

6 If the neutral light fails to operate when the transmission is in Neutral, check the fuse and the bulb (see Section 13 for bulb removal procedures). If the bulb and fuses are in good condition, check for battery voltage at the connector attached to the neutral switch on the left side of the engine. If battery voltage is present, refer to Section 18 for the neutral switch check and replacement procedures.

7 If no voltage is indicated, check the wiring between the switch and the bulb for open circuits and poor connections.

Oil level warning light

8 See Section 14 for the oil level sensor check.

7 Headlight bulb – replacement



Warning: If the bulb has just burned out, allow it to cool. It will be hot enough to burn your fingers.


Headlight bulb

XJ600S models

1 Reach inside the fairing, disconnect



7.1a Disconnect the electrical connector from the headlight ...

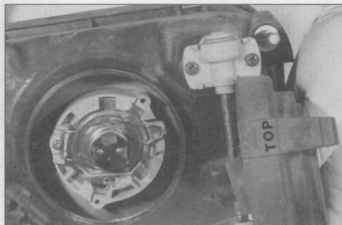

7.1b ... and pull the cover off; the TOP mark must be up on installation

electrical connector and pull off the headlight cover (see illustrations).

2 Unhook the retainer spring and remove the bulb (see illustrations). If you find bulb removal too difficult due to limited access remove the fairing as described in Chapter 7.

3 Installation is the reverse of the removal steps, with the following additions:

a) Be sure not to touch the glass portion of the bulb with your fingers – oil from your skin will cause the bulb to overheat and

fail prematurely. If you do touch the bulb, wipe it off with a clean rag dampened with rubbing alcohol.

b) Be sure the TOP mark on the headlight cover is up.

XJ600N models

4 Remove the headlight assembly securing screws and pull the assembly out of the housing (see illustration).

5 Disconnect the headlight electrical

connectors and remove the cover (see illustration).

6 Turn the bulb retainer counterclockwise (anti-clockwise) and pull the bulb out of the of the headlight assembly (see illustration).

7 Refer to Step 3 for installation procedures.

Parking light bulb (UK models)

XJ600S models


8 Reach inside the fairing and disconnect the electrical connector from the parking light.




7.2a Lift the retaining clip to free the bulb ...




7.2b ... and pull the bulb out; be careful not to touch the bulb glass with your fingers

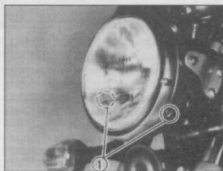


7.4 Remove the headlight assembly retaining screws (1) ...

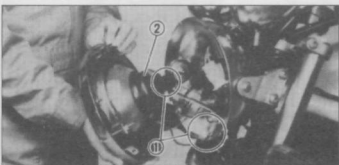


7.5 ... disconnect the electrical connectors (1), remove the bulb cover (2) ...

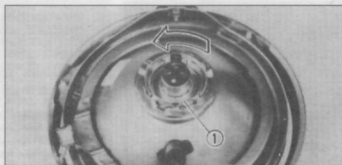


7.6 ... and rotate the retainer ring (1) counterclockwise to free the bulb

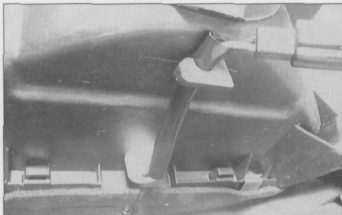

7.8a Parking light bulbholder is a push fit in headlight unit

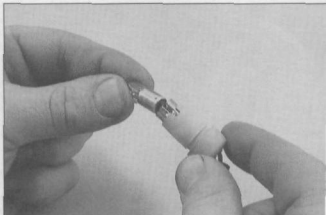


7.8b Press in and twist anticlockwise to release parking light b

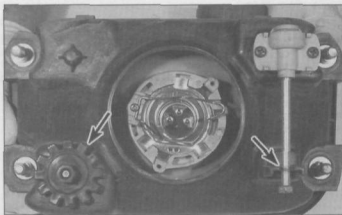

8.3a Beam adjuster screws – 1992-95 (UK) and 1992-96 (US) XJ600S models (arrowed)

Left arrow – vertical adjuster Right arrow – horizontal adjuster

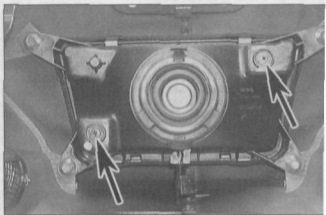

8.3b Beam adjuster screws – 1996-on (UK) and 1997-on (US) XJ600S models (arrowed)

Gently ease the bulbholder from the base of the headlight unit (see illustration). Press the bulb in and twist it anticlockwise to remove it from the bulbholder (see illustration).

9 Installation is the reverse of the removal steps.

XJ600N models

10 Remove the headlight assembly securing screws and pull the assembly out of the

housing (see illustration 7.4). Disconnect the headlight and parking light electrical connectors.

11 Ease the parking light bulbholder out of its location in the base of the headlight. Press the bulb in and twist it anticlockwise to remove it from the bulbholder.

12 Installation is the reverse of the removal steps.

least half full, and have an assistant sit on seat.

XJ600S models

3 To make vertical and horizontal adjustments, reach inside the fairing and the adjusting screws (see illustrations).

XJ600N models

4 Horizontal adjustment is carried out by turning the single adjusting screw. Vertical adjustment is made by loosening headlight mounting bolts and moving the up or down, as necessary.

8 Headlight aim – check and adjustment

1 An improperly adjusted headlight may cause problems for oncoming traffic or provide poor, unsafe illumination of the road ahead. Before adjusting the headlight, be sure to consult with local traffic laws and regulations. In the UK refer to *MOT Test Checks* in the Reference section.

2 The headlight beam can be adjusted both vertically and horizontally. Before performing the adjustment, make sure the fuel tank is at

9 Turn signal and tail light bulbs – replacement

Turn signal bulbs


1 The turn signals are contained in a plastic lens attached to the body panels or the frame. To replace a bulb, remove the lens section (see illustration).



9.1 To replace a turn signal bulb, remove the screws and take off the lens



9.2 Press the bulb into its socket, turn counterclockwise (anti-clockwise) to release the pins (arrowed) and pull it out

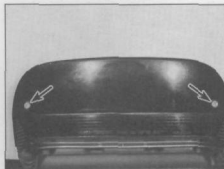

9.3 To replace tail light bulb, remove the lens securing screws (arrowed) . . .



9.4 . . . turn the bulb socket counterclockwise (anti-clockwise) and pull it out; replace the lens gasket (arrowed) if it's brittle or cracked

2 Push the bulb in and turn it counterclockwise (anti-clockwise) to remove it (see illustration). Check the socket terminals for corrosion and clean them if necessary. Line up the pins on the new bulb with the slots in the socket, push in and turn the bulb clockwise until it locks in place. **Note:** The front turn signal bulbs on certain US models double as running lights and therefore have double pins – take care to fit them correctly.


Tail/brake light bulbs

3 Remove the lens securing screws (see illustration) and take off the lens.

4 Press the bulb into its socket and turn it counterclockwise (anti-clockwise) to disengage the pins, then pull it out (see illustration). Check the socket terminals for corrosion and clean them if necessary. Replace the lens gasket if it's brittle or cracked.

5 Line up the pins on the new bulb with the slots in the socket, push in and turn the bulb clockwise until it locks in place. **Note:** The pins on the bulb are offset so it can only be installed one way. It is a good idea to use a paper towel or dry cloth when handling the new bulb to prevent injury if the bulb should break and to increase bulb life.

6 Install the lens and tighten the screws securely, but not tight enough to crack the lens.

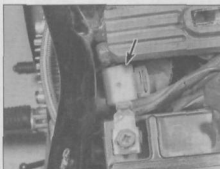

10.3 The flasher relay (arrowed) is mounted on the left side of the bike forward of the battery on early models

10 Turn signal circuit – check

1 The battery provides power for operation of the signal lights, so if they do not operate, always check the battery open-circuit voltage first. Low battery voltage indicates either a faulty battery or a defective charging system. Refer to Section 4 for the battery open-circuit check and charging procedures and Sections 26 and 27 for charging system tests. Also, check the fuses (see Section 5) and the switch (see Section 16).

2 Most turn signal problems are the result of a burned out bulb or corroded socket. This is especially true when the turn signals function properly in one direction, but fail to flash in the other direction. Check the bulbs and the sockets (see Section 9).

Flasher relay

3 The flasher relay is mounted just in front of the battery on the left side on early models (1992 to 1996 US, 1992 to 1995 UK) (see illustration); remove the seat for access. On later models, the flasher relay is mounted on the rear of the frame, behind the right side cover (see illustrations 30.2b, c or d).

4 If the bulbs and sockets check out okay, turn the ignition switch ON and check for voltage at the brown (brown/red on 1997-on UK models) wire terminal on the relay assembly (connect the voltmeter positive lead to the brown wire terminal and the negative lead to the black wire terminal). If there's no voltage at the terminal, check the wiring from the signal fuse to the flasher relay terminal for a break or bad connection. On 1997-on UK models, if there's no voltage check the hazard relay as described below.

5 If there's voltage at the brown wire terminal, move the voltmeter positive lead to the brown/white wire terminal at the relay assembly and check for voltage again (the ignition switch should still be ON). If there's no voltage, the flasher relay is probably defective and should be renewed.

6 If there's voltage when there should be in Steps 4 and 5, and if the turn signal switch tested OK, the most likely problem is a poor contact in a turn signal bulb socket. Check the sockets for corrosion or damage. Another possible cause is a worn contact at the base of the bulb. Try a known good bulb in the socket that won't work.

7 If the flasher is okay, check the wiring between the turn signal flasher and the turn signal light sockets (see the Wiring diagrams at the end of this Chapter).

Hazard relay (1997-on UK models)

8 The hazard relay is mounted on the rear of the frame, behind the right side cover (see illustration 30.2c).

9 If there's no voltage at the flasher relay brown/red wire (see Step 4) check for voltage at the hazard relay brown wires. If no voltage is shown check the signal fuse and the wiring between the fuse and hazard relay for a break or bad connection. Also check for voltage at the blue/red wire; if no voltage is shown check the hazard fuse and the wiring between the hazard fuse and hazard relay. Finally check the brown/red wire from the hazard relay to the flasher relay for a break or bad connection. If the fault still exists, renew the hazard relay.


11 Brake light switches – check and replacement

Circuit check

1 Before checking any electrical circuit, check the fuses (see Section 5).

2 Using a test light connected to a good ground (earth), check for voltage at the brake light switch. If there's no voltage present, check the wire between the switch and the fuse block (see the Wiring diagrams at the end of this Chapter).

3 If voltage is available, touch the probe of the test light to the other terminal of the

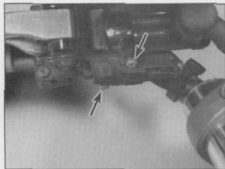

11.5 Disconnect the wires and remove the screws (arrowed) to remove the front brake light switch



12.6b ... and 1996-on (UK), 1997-on (US) models (arrowed)

switch, then pull the brake lever or depress the brake pedal – if the test light doesn't light up, replace the switch.

4 If the test light does light, check the wiring between the switch and the brake lights (see the *Wiring diagrams* at the end of this Chapter).

Switch replacement

Front brake lever switch

5 Remove the mounting screws and unplug the electrical connector from the switch (see *illustration*).

6 Detach the switch from the brake lever bracket/front master cylinder.

7 Installation is the reverse of the removal procedure. The brake lever switch isn't adjustable.

Rear brake pedal switch

8 Follow the wiring harness from the switch to the connector and disconnect it.


9 Disconnect the lower end of the switch spring from the brake pedal.

10 Hold the plastic nut to prevent it from turning with a small screwdriver or similar tool (the nut is recessed into the casting of the brake pedal bracket). Rotate the switch body until the switch threads separate from the plastic nut. Pull the spring through the nut and lift the switch out.

11 Install the switch by reversing the removal procedure, then adjust the switch by following the procedure described in Chapter 1.



12.3 Unscrew the knurled nut and pull the speedometer cable out of the speedometer

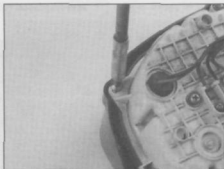

12.8a Remove the four screws (one from each corner) ...


12 Instruments and speedometer cable – removal, cluster disassembly and installation

1 This section describes removal, disassembly and installation procedures for the XJ600S instrument cluster. The XJ600N uses separate gauges.

Instruments

Removal

- 2** Remove the upper fairing (see Chapter 7).
- 3** Detach the speedometer cable from the speedometer (see *illustration*).
- 4** Disconnect the left and right turn signal connectors. Label the wires for left and right sides to make connection easier.

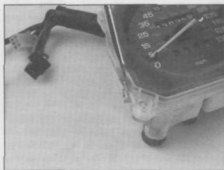

12.8c Carefully pry back the clips and lift off the cluster lens



12.6a Instrument cluster mounting nuts and washers (arrowed) – 1992-95 (UK) 1992-96 (US) models ...



12.8b ... and detach the instrument casing


5 Follow the wiring harness down from the instrument cluster to the two cluster connectors and disconnect them.

6 Remove the cluster mounting nuts and washers and lift the cluster out (see *illustrations*).

Disassembly and reassembly

7 The cluster can be disassembled as far as the speedometer/tachometer sub-assembly. The speedometer and tachometer are available separately.

8 To disassemble the XJ600S cluster, refer to the accompanying photographs (see *illustrations*).

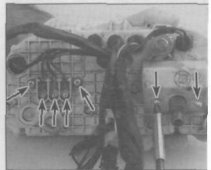

12.8d Remove the speedometer and tachometer mounting screws and the wiring screws (arrowed) (label the wires for reconnection if the wire colours or colour codes cast in the cluster housing aren't visible) ...

trations). For the XJ600N refer to the line drawing (see illustration).

9 Assembly is the reverse of the disassembly steps. Tighten the screws securely, but not tightly enough to crack the plastic.

Speedometer cable

Removal

10 Disconnect the speedometer cable from the speedometer (see illustration 12.3).

11 Note how it's routed, then disconnect the speedometer cable from the drive unit at the left front fork.

Installation

12 Installation is the reverse of the removal procedure. Be sure the speedometer cable is routed through the retainers on the fender and

left fork leg. Be sure it doesn't cause the steering to bind or interfere with other components.

13 Instrument and warning light bulbs – replacement


1 If you're working on an XJ600S, remove the upper fairing (see Chapter 7). If you need to access the instrument illumination bulbs on the XJ600N, remove the single screw from the base of the chrome pod and withdraw the pod.


2 Pull the appropriate rubber socket out of the back of the instrument cluster or gauge,



12.8e ... and lift the speedometer/tachometer subassembly out of the cluster housing; don't try to remove the speedometer or tachometer from the subassembly

- 1 Speedometer
- 2 Tachometer
- 3 Warning light console
- 4 Mounting bracket
- 5 Meter pod
- 6 Pod retaining screw
- 7 Grommet
- 8 Washer
- 9 Nut
- 10 Instrument wiring and bulbs
- 11 Speedometer cable

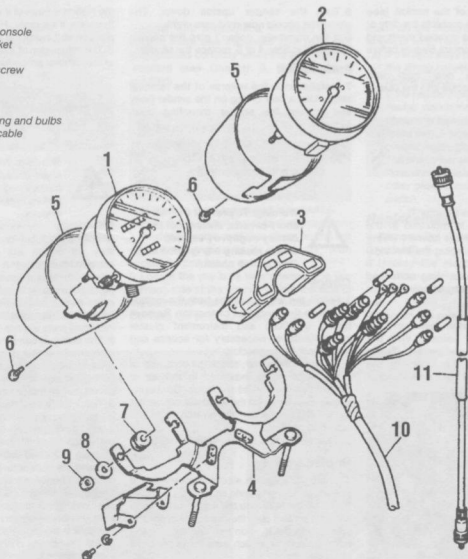

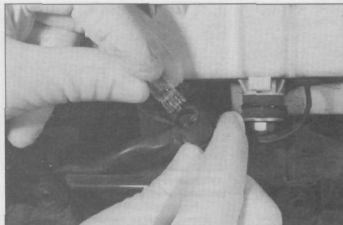

13.2 Pull the bulb socket out of the cluster, then pull the bulb out of the socket

then pull the bulb out of the socket (see illustration). If the socket contacts are dirty or corroded, they should be scraped clean and sprayed with electrical contact cleaner before new bulbs are installed.

3 Carefully push the new bulb into position, then push the socket into the cluster housing.

14 Oil level sender – removal, check and installation

Removal

- 1 Drain the engine oil (see Chapter 1).
- 2 The oil level sender is mounted in the bottom of the oil pan. Note how its wiring harness is routed, then unplug the electrical connector.
- 3 Remove the sender mounting bolts and remove the sender (see illustration).

Check

- 4 Connect an ohmmeter between the terminals of the sender harness. With the sender in its normal installed position (flange and wiring harness at the bottom), the ohmmeter should indicate infinite resistance.



15.5 Remove the mounting screws (arrowed) to detach the ignition main (key) switch

- 5 Turn the sender upside down. The ohmmeter should now read zero ohms.
- 6 If the ohmmeter doesn't give the correct indication in Step 4 or 5, replace the sender.

Installation

- 7 Installation is the reverse of the removal steps. Use a new O-ring on the sender body and tighten the sender mounting bolts securely.

15 Ignition main (key) switch – check and replacement




Warning: To prevent the risk of short-circuits, disconnect the battery negative (-ve) lead before making any ignition main (key) switch checks.

Check

- 1 Follow the wiring harness from the ignition switch to the electrical connector. Remove fairing (XJ600S) and instrument cluster components as necessary for access and disconnect the connector.
- 2 Using an ohmmeter, check the continuity of the terminal pairs indicated in the wiring diagram at the end of the book. Continuity should exist between the terminals connected by a solid line when the switch is in the indicated position.
- 3 If the switch fails any of the tests, replace it.

Replacement

- 4 Unplug the switch electrical connector if you haven't already done so.
- 5 The switch is held to the upper triple clamp with two screws (see illustration). Unlock the switch with the ignition key and remove the bolts. Detach the switch from the upper triple clamp.
- 6 If necessary, remove the Phillips screws and separate the switch from the bracket.
- 7 Attach the new switch to the bracket with

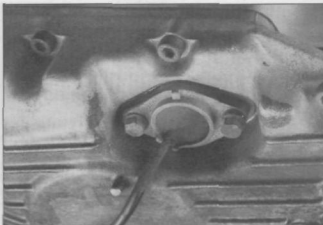

14.3 Remove the bolts and pull the oil level sender out of the pan; use a new O-ring on installation

the Phillips screws (if it was removed). Tighten the screws securely. Hold the new switch in position and install the bolts.


- 8 The remainder of installation is the reverse of the removal procedure.

16 Handlebar switches – check




Warning: To prevent the risk of short-circuits, disconnect the battery negative (-ve) lead before making any switch checks.

- 1 Generally speaking, the switches are reliable and trouble-free. Most troubles, when they do occur, are caused by dirty corroded contacts, but wear and breakage of internal parts is a possibility that should be overlooked. If breakage does occur, the entire switch and related wiring harness have to be replaced with a new one, since individual parts are not usually available.
- 2 The switches can be checked for continuity with an ohmmeter or a continuity test light. Always disconnect the battery negative cable which will prevent the possibility of a short circuit, before making the checks.
- 3 Trace the wiring harness of the switch to the question and unplug the electrical connector.
- 4 Find the continuity diagram for the switch being checked in the appropriate wiring diagram at the end of this Chapter.
- 5 Using the ohmmeter or test light, check continuity between the terminals of the switch harness with the switch in the various positions. Continuity should exist between terminals connected by a solid line when the switch is in the indicated position.
- 6 If the continuity check indicates a problem exists, refer to Section 17, remove the switch and spray the switch contacts with electrical contact cleaner. If they are accessible, the contacts can be scraped clean with a knife.

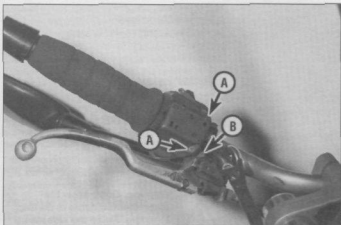

17.1a Left handlebar switch screws (A) and clutch switch screw (B) – early models

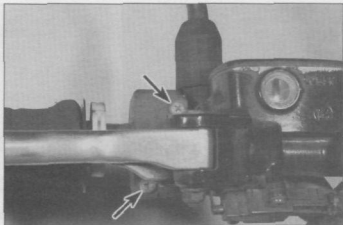

17.1b Right handlebar switch screws (arrowed) – early models

polished with crocus cloth. If switch components are damaged or broken, it will be obvious when the switch is disassembled.

17 Handlebar switches – removal and installation

1 The handlebar switches are composed of two halves that clamp around the bars. They are easily removed for cleaning or inspection by taking out the clamp screws and pulling the switch halves away from the handlebars (see illustrations).

2 To completely remove the switches, the electrical connectors in the wiring harness must be unplugged.

3 When installing the switches, make sure the wiring harnesses are properly routed to avoid pinching or stretching the wires. Align the protrusion on the switch with the corresponding hole in the handlebar. On later

models, with a handlebar-mounted choke control, make sure the choke lever assembly is positioned correctly when the left switch is installed (see Chapter 3, Section 11 if required).

18 Neutral switch – check and replacement

Check

- 1 Make sure the transmission is in neutral.
- 2 Follow the switch harness (it comes from behind the engine sprocket cover on the left side of the engine) to its connector, then unplug the connector.
- 3 Locate the sky blue wire's terminal in the harness side of the connector (not the side of the connector that goes to the neutral switch). Connect the terminal to ground (earth) (bare


metal on the motorcycle frame) with a short length of wire. Turn the ignition switch On.

a) *If the light stays out, check the bulb and the wiring between the ignition switch and neutral switch.*


b) *If the neutral indicator light comes on, the neutral switch may be bad. Connect an ohmmeter between the sky blue terminal in the switch side of the connector and ground (earth). Shift through the gears. The ohmmeter should indicate continuity in neutral and infinite resistance in all other gears. If not, replace the neutral switch.*

Replacement


- 4 Remove the engine sprocket cover (see Chapter 6).
- 5 Unplug the electrical connector (if you haven't already done so). Unbolt the wiring harness retainers from the crankcase and oil pan.
- 6 Loosen the screw and disconnect the wire

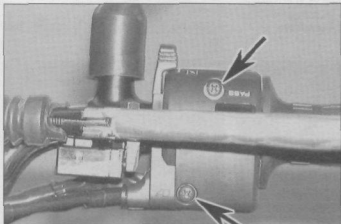

17.1c Left handlebar switch screws (arrowed) – later models

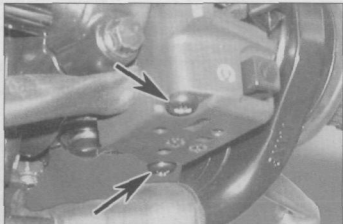

17.1d Right handlebar switch screws (arrowed) – later models

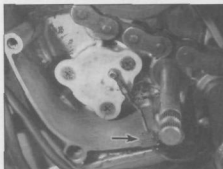

18.6 Remove the small screw to disconnect the switch wire and remove the three mounting screws; the grommet (arrowed) fits into a notch in the crankcase

from the switch (see illustration). Remove the switch mounting screws and detach the switch from the crankcase.

7 Installation is the reverse of the removal steps. Be sure to install a new O-ring and/or gasket when you reinstall the switch.

19 Sidestand switch – check and replacement

Check

1 Follow the wiring harness from the switch to the connector, then unplug the connector. Connect the leads of an ohmmeter to the wire terminals. With the sidestand in the up position, there should be continuity through the switch (0 ohms).


2 With the sidestand in the down position, the meter should indicate infinite resistance.

3 If the switch fails either of these tests, replace it.

Replacement

4 With the sidestand in the up position, unscrew the two screws and remove the switch (see illustration). Disconnect the switch electrical connector.

5 Installation is the reverse of the removal procedure.

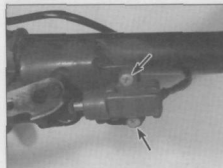

19.4 The sidestand switch is secured by two screws (arrowed)

20 Clutch switch – check and replacement

Check

1 Disconnect the electrical connector from the clutch switch (see illustration 17.1a).

2 Connect an ohmmeter between the terminals in the clutch switch. With the clutch lever pulled in, the ohmmeter should show continuity (little or no resistance). With the lever out, the ohmmeter should show infinite resistance.

3 If the switch doesn't check out as described, replace it.

Replacement

4 If you haven't already done so, unplug the wiring connector. Remove the mounting screw and take the switch off (see illustration 17.1a).

5 Installation is the reverse of removal.

21 Horn – check and replacement

Check

1 Unplug the electrical connectors from the horn (see illustration). Using two jumper wires, apply battery voltage directly to the terminals on the horn. If the horn sounds, check the switch and the wiring between the switch and the horn (see the Wiring diagrams at the end of this Chapter).

2 If the horn doesn't sound, replace it.

Replacement

3 Unbolt the horn bracket from the lower triple clamp (see illustration 21.1) and detach the electrical connectors.

4 Installation is the reverse of removal.



21.1 Disconnect the wires and remove the mounting nut (arrowed) to detach the horn

22 Starter relays – check and replacement

Starter relay

Check

1 Remove the seat (see Chapter 7) and fuel tank (see Chapter 3). Remove the cover on the right side of the motorcycle (Chapter 7).

2 Disconnect the starter cable from starter motor (see illustration 23.2).

Warning: Don't allow the disconnected cable to contact anything. Raise the sidestand. With the ignition switch ON, engine kill switch in RUN and the transmission in neutral, press the starter switch. The relay should be heard to click.

3 If the relay doesn't click, disconnect negative cable from the battery, disconnect the positive cable from the battery and the relay. Disconnect the thin wire. Connect one lead of the ohmmeter to the terminal stud that the battery positive cable was connected to. Connect the other lead to the terminal of the thin wire. If the reading isn't within the range listed in this Chapter's Specifications, replace the relay.

Replacement

4 Disconnect the cable from the negative terminal of the battery.

5 Detach the battery positive cable starter cable and electrical connector from the relay (see illustration).

6 Slide the relay off its mounting tabs.

7 Remove the relay from its rubber mount.

8 Installation is the reverse of removal. Reconnect the negative battery cable and the other electrical connections are made.

Starter cut-off relay

Check

9 Remove the relay assembly from the



22.5 Detach the wires from the starter cut-off relay

and conduct the following test on the bench (see Section 30). Connector an ohmmeter or continuity tester between the two blue/white wire terminals of the relay. Using a 12 volt battery and two jumper leads, connect the positive lead to the red/black wire terminal on the relay and the negative lead to the black/yellow relay terminal; continuity should be shown. Now transfer the battery negative lead to the light blue wire terminal and check whether continuity is shown.

10 If no continuity is indicated in either test, the starter cut-off relay is faulty and the relay assembly should be renewed.

Removal and installation

11 The starter cut-off relay is contained within the relay assembly. Refer to Section 30.

23 Starter motor – removal and installation



Removal

1 Remove the seat (see Chapter 7). Disconnect the cable from the negative terminal of the battery.

2 Pull back the rubber boot from the nut retaining the starter cable to the starter (see illustration). Remove the nut and the starter mounting bolts.

3 Pull the starter up slightly and slide it out of the engine case.

4 Check the condition of the O-ring on the end of the starter and replace it if necessary.

Installation

5 Apply a little engine oil to the O-ring and install the starter by reversing the removal procedure. Tighten the two mounting bolts to the torque listed in this Chapter's Specifications.

24 Starter motor – disassembly, inspection and reassembly




Disassembly


1 Look for marks indicating the position of the housing to each end cover; if they aren't visible, make your own (see illustration). Remove the two long screws and detach both end covers, noting the location and number of the shims on each end of the armature (see illustration).

2 Pull the armature out of the housing.


3 Carefully note how the washers are arranged on the terminal bolt. Remove the nut and washers and push the terminal bolt through the starter housing, then reinstall the washers and nut on the bolt so you don't

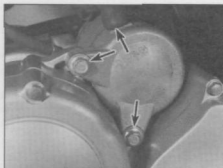

23.2 Starter mounting details

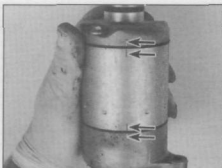


24.1a There should be alignment marks on the housing and end covers (arrowed)

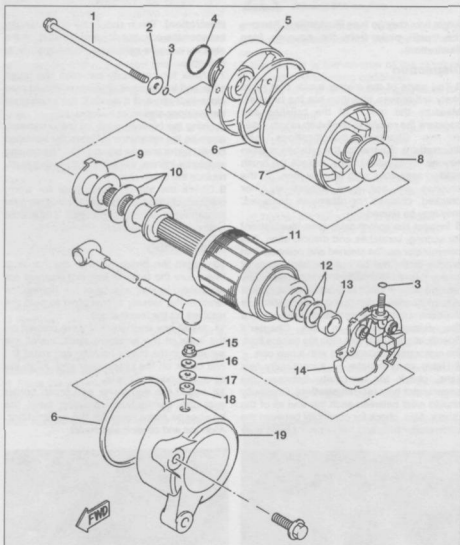


24.1b Starter motor - exploded view

- | | | |
|-------------------|--------------------|--------------------|
| 1 Through-bolt | 8 Bearing and seal | 14 Brush plate |
| 2 Washer | 9 Seal retainer | 15 Nut |
| 3 O-ring | 10 Shims | 16 Metal washer |
| 4 O-ring | 11 Armature | 17 Washer |
| 5 End cover | 12 Shims | 18 Rubber washer |
| 6 O-ring | 13 Bushing | 19 Brush end cover |
| 7 Starter housing | | |

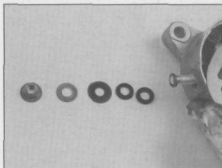

24.3a Remove the nut and washers from the terminal bolt

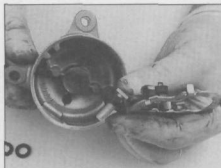

24.3b Push the terminal bolt through its hole and remove the brush plate from the housing



24.4 Measure the length of the brush

forget how they go (see illustration). Remove the brush plate from the housing (see illustration).

Inspection

4 The parts of the starter motor that most likely will require attention are the brushes. Measure the length of the brushes and compare the results to the brush length listed in this Chapter's Specifications (see illustration). If either of the brushes is worn beyond the specified limits, replace the brush holder assembly with a new one. If the brushes are not worn excessively, nor cracked, chipped, or otherwise damaged, they may be reused.

5 Inspect the commutator (see illustration) for scoring, scratches and discoloration. The commutator can be cleaned and polished with crocus cloth, but do not use sandpaper or emery paper. After cleaning, wipe away any residue with a cloth soaked in an electrical system cleaner or denatured alcohol. Measure the commutator diameter and compare it to the diameter listed in this Chapter's Specifications. If it is less than the service limit, the motor must be replaced with a new one.

6 Using an ohmmeter or a continuity test light, check for continuity between the commutator bars (see illustration). Continuity should exist between each bar and all of the others. Also, check for continuity between the commutator bars and the armature shaft (see

illustration). There should be no continuity between the commutator and the shaft. If the checks indicate otherwise, the armature is defective.

7 Check for continuity between the brush plate and the brushes. The meter should read close to 0 ohms. If it doesn't, the brush plate has an open and must be replaced.

8 Using the highest range on the ohmmeter, measure the resistance between the insulated brush holder and the brush plate. The reading should be infinite. If there is any reading at all, replace the brush plate.

9 Check the starter pinion gear for worn, cracked, chipped and broken teeth. If the gear is damaged or worn, replace the starter motor.

Reassembly

10 Install the brush plate in the housing. Make sure the terminal bolt and washers are assembled in their original order. Tighten the terminal nut loosely at this point to hold the washers on the terminal bolt.

11 Install any washers that were present on the ends of the armature shaft. Install the armature in the starter housing and install the end cover on the pinion gear end. Align the cover and housing marks.

12 Install the end cover and brush holder over the commutator, pushing back the brushes to make room for the commutator. Align the end cover matchmarks.

13 Install the two long screws with washers and O-rings and tighten them securely.

25 Charging system testing – general information and precautions

1 If the performance of the charging system is suspect, the system as a whole should be checked first, followed by testing of individual components (the alternator and voltage regulator/rectifier). **Note:** Before beginning the checks, make sure the battery is fully charged and that all system connections are clean and tight.

2 Checking the output of the charging system and the performance of the various components within the charging system requires the use of special electrical equipment. A voltmeter or a multimeter is the absolute minimum tools required. In addition, an ohmmeter is required for checking the remainder of the system.

3 When making the checks, follow procedures carefully to prevent incorrect connections or short circuits, as irreparable damage to electrical system components can result if short circuits occur. Because of the special tools and expertise required, it is recommended that the job of checking



 
24.5 Check the commutator for cracks and discoloration, then measure its diameter



24.6a Continuity should exist between the commutator bars



24.6b There should be no continuity between the commutator bars and the armature shaft



- 27.2 Connect the ohmmeter between all three pairs of terminals (connect it between terminal 1 and terminals 2 and 3 in turn, then between terminals 2 and 3)**

charging system be left to a dealer service department or other reputable motorcycle repair shop.

26 Charging system – output test

Caution: Never disconnect the battery cables from the battery while the engine is running. If the battery is disconnected, the alternator and regulator/rectifier will be damaged.

- 1 To check the charging system output, you will need a voltmeter or a multimeter with a voltmeter function.
- 2 The battery must be fully charged (charge it from an external source if necessary) and the engine must be at normal operating temperature to obtain an accurate reading.
- 3 Attach the positive (red) voltmeter lead to the positive (+) battery terminal and the negative (black) lead to the battery negative (-) terminal. The voltmeter selector switch (if equipped) must be in the 0 to 20 dc volt range.
- 4 Start the engine.
- 5 The charging system output should be within the no-load regulated voltage range listed in this Chapter's Specifications.
- 6 If the output is as specified, the alternator is functioning properly. If the charging system as

a whole is not performing as it should, refer to Section 27 and test the system further.

7 Low voltage output may be the result of wiring problems or of damaged windings in the alternator stator coils. Make sure all electrical connections are clean and tight, then refer to Section 27 for stator coil tests.

8 High voltage output (above the specified range) indicates a defective voltage regulator/rectifier.

27 Charging system – stator coil test

Note: This test is made with the ignition OFF and the battery negative (-) lead disconnected.

- 1 Follow the stator coil wiring harness (three white wires) from the alternator on the left side of the engine to the connector and unplug the connector.
- 2 Connect an ohmmeter to all three pairs of terminals in the connector (the alternator side of the connector, not the wiring harness side) and compare the resistance readings to those listed in this Chapter's Specifications (**see illustration**). If the readings are not within specifications, the stator coil is defective. Replace it.

28 Alternator – removal and installation

- 1 Disconnect the cable from the negative terminal of the battery.
- 2 Remove the seat and left side cover for access (see Chapter 7).
- 3 Remove the alternator wiring harness retainers on the left side of the engine. Remove the alternator cover bolts and remove the alternator cover, together with the stator coil (**see illustration**).
- 4 Place the transmission in gear and have an assistant hold the rear brake on to keep the engine from turning. Loosen the rotor bolt, then remove the bolt and washer. **Note:** You

can also hold the rotor with a strap wrench of the type used for removing large oil filters.

5 Thread a rotor puller into the rotor and remove the rotor from the end of the crankshaft (**see illustration**). The rotor used on these models doesn't have a Woodruff key. **Note:** If you use an aftermarket rotor puller with multiple thread sizes, there may not be enough room to rotate it and thread it into the rotor because the engine case is in the way. In this case, hold the puller against the rotor and turn the rotor, either with a strap wrench or by turning the back wheel with the transmission in gear.




Warning: Make sure the ignition (main key) switch is OFF when turning the engine.

- 6 To remove the stator coil, remove the screws and detach the coil from the alternator cover.
- 7 Installation is the reverse of the removal steps, with the following additions:
 - a) Make sure no metal objects have stuck to the magnets inside the rotor (**see illustration**).
 - b) Tighten the rotor bolt to the torque listed in this Chapter's Specifications.
 - c) Apply non-permanent thread locking agent to the threads of the stator coil Allen bolts (if they were removed). Tighten the bolts securely, but be careful not to strip out the threads.
 - d) Tighten the cover bolts to the torque listed in this Chapter's Specifications.

29 Regulator/rectifier – removal and installation

- 1 The regulator is mounted on the left side of the motorcycle under the side cover.
- 2 To remove the regulator/rectifier, remove the side cover (see Chapter 7). Disconnect the electrical connector, remove the mounting screws and take the unit out (**see**

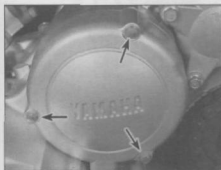


- 28.3 Remove the alternator cover bolts (arrowed) and take off the cover together with the stator coil**




- 28.5 Remove the rotor bolt (arrowed) and use a tool like this one to separate the rotor from the crankshaft**



- 28.7 Be sure there aren't any metal objects stuck to the rotor magnets; an inconspicuous item like this screw (arrowed) can ruin the rotor and stator if the engine is run**

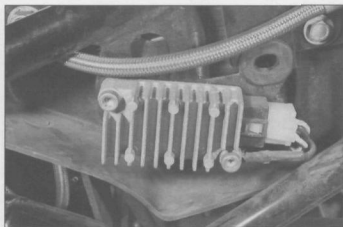

29.2a Regulator/rectifier unit - early models

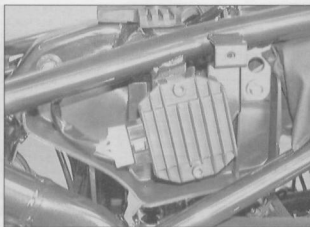

29.2b Regulator/rectifier unit - later models

illustrations). Note that a different regulator/rectifier unit was fitted from 1997 in the US and from 1996 in the UK.

3 Installation is the reverse of the removal steps.

1995 UK models, the relay assembly is located under the seat on the left side (behind the regulator/rectifier unit) (see illustration).


On all later models the relay assembly is located under the right side cover (see illustrations).

30 Relay assembly and diode

Relay assembly


1 The relay assembly houses the starter circuit cut-off relay and diodes, and on 1996-on UK models it also houses the fuel pump relay. Refer to the wiring diagrams at the end of this Chapter for details of the relay's internal connections. Where test procedures are possible these are included with the starter relay check in this Chapter or the fuel pump circuit checks in Chapter 3.

2 On 1992 to 1996 US models and 1992 to

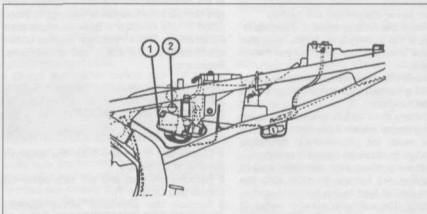

30.2a Relay assembly location on 1992-95 UK models and 1992-96 US models


1 Regulator/rectifier 2 Relay assembly

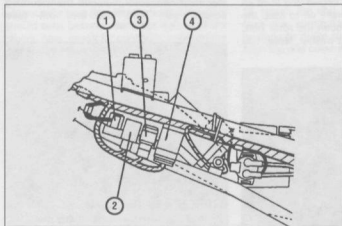

30.2b Relay assembly location on 1996 UK models

1 Thermoswitch
2 Flasher relay

3 Heater relay
4 Relay assembly

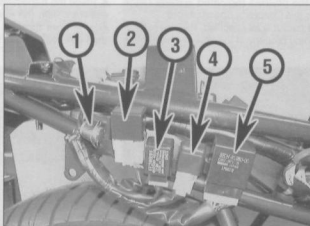


30.2c Relay assembly location on 1997-on UK models

1 Thermoswitch
2 Hazard relay

3 Flasher relay
4 Heater relay

5 Relay assembly

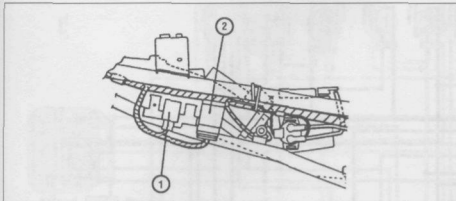

30.2d Relay assembly location on 1997-on US models

1 Flasher relay 2 Relay assembly

Diode


3 1996-on UK models are equipped with a diode in the neutral switch wiring. The diode

should only allow current to flow in one direction and can be tested as follows.


4 Locate the diode on the left side of the frame top rail, under the large plastic sleeve



30.3a Diode location

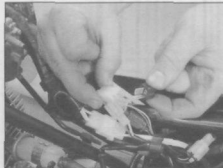

30.3b Unplug the diode . . .

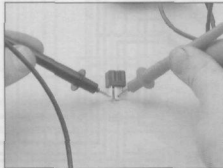


30.3c . . . and test it for continuity


remove the insulation tape from its connector (see illustration). Unplug the diode from the connector (see illustration). Using an ohmmeter or continuity tester, connect its probes across the two terminals on the diode side of the connector (see illustration). Continuity should only be shown in one direction, with no continuity shown when the probes are reversed. If the diode does not function correctly it must be renewed.

31 Wiring diagrams


Prior to troubleshooting a circuit, check the fuses to make sure they're in good condition. Make sure the battery is fully charged and check the cable connections.


When checking a circuit, make sure all connectors are clean, with no broken or loose terminals or wires. When unplugging a connector, don't pull on the wires – pull only on the connector housings themselves.

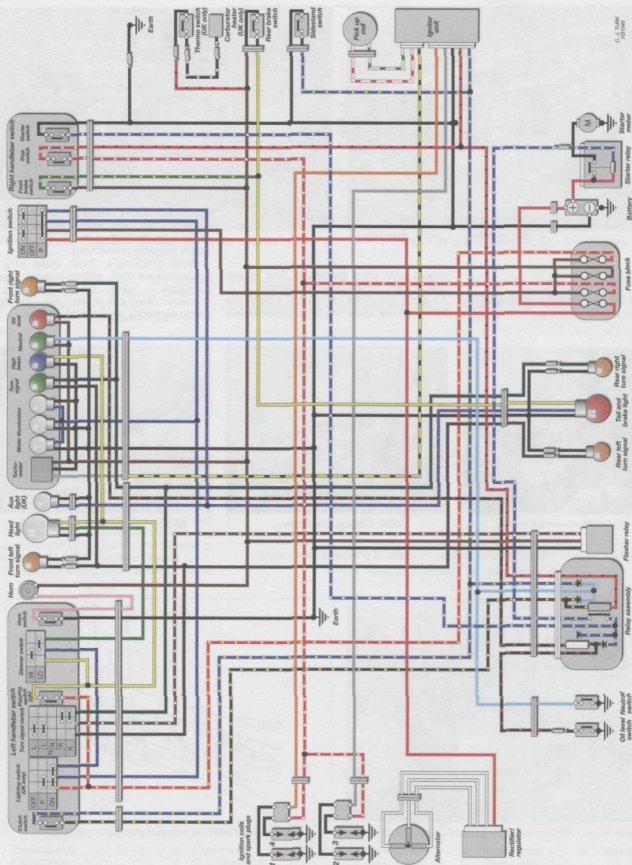

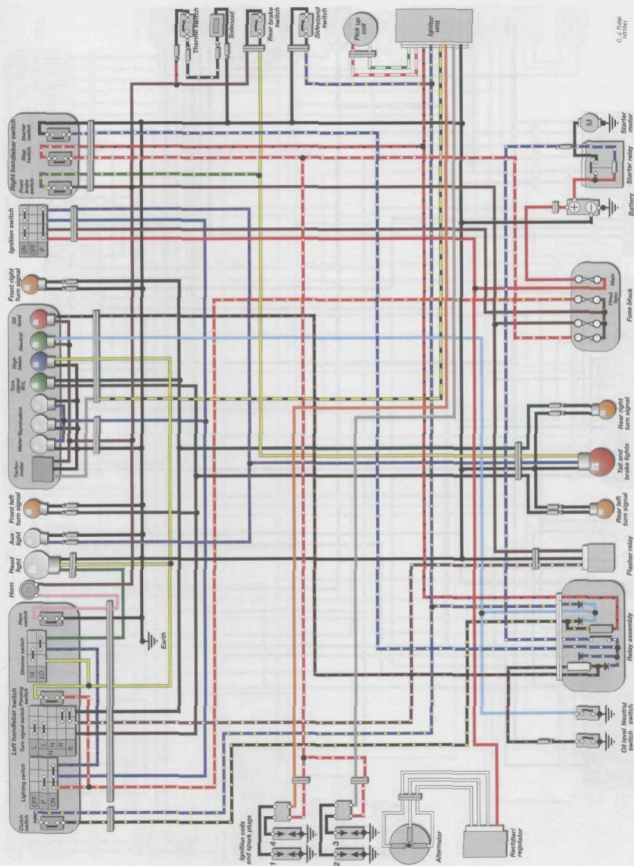

XJ600 N UK model 1995

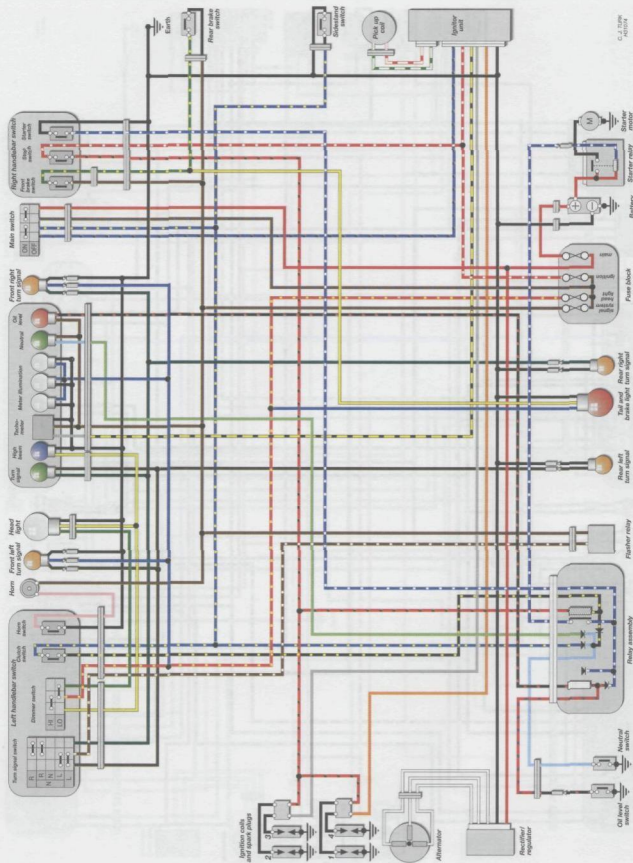

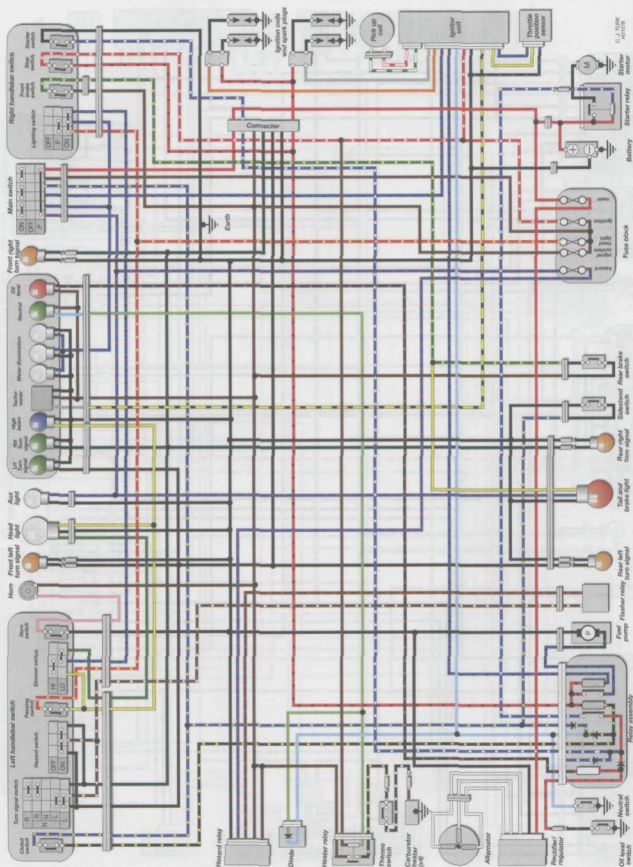

Jx600 S and N UK models 1997 onwards

Dimensions and Weights	REF•1	Motorcycle chemicals and lubricants	REF•30
Conversion Factors	REF•3	Fault Finding	REF•39
Tools and Workshop Tips	REF•4	Fault Finding Equipment	REF•40
MOT Test Checks	REF•22	Technical Terms Explained	REF•44
Storage	REF•27	Index	REF•48

Dimensions and Weights



Wheelbase

All models	1445 mm (56.9 inches)
------------------	-----------------------

Overall length

XJ600S	2095 mm (82.5 inches)
US models	2170 mm (84.5 inches)
UK models	2170 mm (84.5 inches)
XJ600N	2170 mm (84.5 inches)

Overall width

US 1992-96 models, UK 1992-95 models	750 mm (29.5 inches)
US 1997-on models, UK 1996-on models	735 mm (28.9 inches)

Overall height

XJ600S	1170 mm (46.1 inches)
US 1992-93 models	1220 mm (48.0 inches)
US 1994-96 models, UK 1992-95 models	1205 mm (47.4 inches)
US 1997-on models, UK 1996-on models	1090 mm (42.9 inches)
XJ600N	1090 mm (42.9 inches)

REF•2 Dimensions and weights

Seat height

All models	770 mm (30.3 inches)
------------------	----------------------

Ground clearance (minimum)

All models	150 mm (5.9 inches)
------------------	---------------------

Weight (with oil and full fuel tank)

XJ600S

US 1992-93 models*	197 kg (434 lbs)
US 1994-96 models*	200 kg (441 lbs)
US 1997-on models*	205 kg (452 lbs)
UK 1992-95 models	202 kg (445 lbs)
UK 1996-97 models	208 kg (459 lbs)
UK 1998-on models	213 kg (470 lbs)

XJ600N

1995 models	202 kg (445 lbs)
1996-on models	205 kg (452 lbs)

**Add 1 kg for California models*

This Section provides an easy reference-guide to the more common faults that are likely to afflict your machine. Obviously, the opportunities are almost limitless for faults to occur as a result of obscure failures, and to try and cover all eventualities would require a book. Indeed, a number have been written on the subject.

Successful troubleshooting is not a mysterious 'black art' but the application of a bit of knowledge combined with a systematic and logical approach to the problem. Approach any troubleshooting by first accurately identifying the symptom and then checking through the list

of possible causes, starting with the simplest or most obvious and progressing in stages to the most complex.

Take nothing for granted, but above all apply liberal quantities of common sense.

The main symptom of a fault is given in the text as a major heading below which are listed the various systems or areas which may contain the fault. Details of each possible cause for a fault and the remedial action to be taken are given, in brief, in the paragraphs below each heading. Further information should be sought in the relevant Chapter.

1 Engine doesn't start or is difficult to start

- ☐ Starter motor doesn't rotate
- ☐ Starter motor rotates but engine does not turn over
- ☐ Starter works but engine won't turn over (seized)
- ☐ No fuel flow
- ☐ Engine flooded
- ☐ No spark or weak spark
- ☐ Compression low
- ☐ Stalls after starting
- ☐ Rough idle

2 Poor running at low speeds

- ☐ Spark weak
- ☐ Fuel/air mixture incorrect
- ☐ Compression low
- ☐ Poor acceleration

3 Poor running or no power at high speed

- ☐ Firing incorrect
- ☐ Fuel/air mixture incorrect
- ☐ Compression low
- ☐ Knocking or pinking
- ☐ Miscellaneous causes

4 Overheating

- ☐ Engine overheats
- ☐ Firing incorrect
- ☐ Fuel/air mixture incorrect
- ☐ Compression too high
- ☐ Engine load excessive
- ☐ Lubrication inadequate
- ☐ Miscellaneous causes

5 Clutch problems

- ☐ Clutch slipping
- ☐ Clutch not disengaging completely

6 Gear shifting problems

- ☐ Doesn't go into gear, or lever doesn't return
- ☐ Jumps out of gear
- ☐ Overshifts

7 Abnormal engine noise

- ☐ Knocking or pinking
- ☐ Piston slap or rattling
- ☐ Valve noise
- ☐ Other noise

8 Abnormal driveline noise

- ☐ Clutch noise
- ☐ Transmission noise
- ☐ Final drive noise

9 Abnormal frame and suspension noise

- ☐ Front end noise
- ☐ Shock absorber noise
- ☐ Brake noise

10 Oil level indicator light comes on

- ☐ Engine lubrication system
- ☐ Electrical system

11 Excessive exhaust smoke

- ☐ White smoke
- ☐ Black smoke
- ☐ Brown smoke

12 Poor handling or stability

- ☐ Handlebar hard to turn
- ☐ Handlebar shakes or vibrates excessively
- ☐ Handlebar pulls to one side
- ☐ Poor shock absorbing qualities

13 Braking problems

- ☐ Brakes are spongy, don't hold
- ☐ Brake lever or pedal pulsates
- ☐ Brakes drag

14 Electrical problems

- ☐ Battery dead or weak
- ☐ Battery overcharged

1 Engine doesn't start or is difficult to start

Starter motor does not rotate

- ☐ Engine kill switch Off.
- ☐ Fuse blown. Check fuse block (Chapter 8).
- ☐ Battery voltage low. Check and recharge battery (Chapter 8).
- ☐ Starter motor defective. Make sure the wiring to the starter is secure. Make sure the starter relay clicks when the start button is pushed. If the relay clicks, then the fault is in the wiring or motor.
- ☐ Starter relay faulty. Check it according to the procedure in Chapter 8.
- ☐ Starter button not contacting. The contacts could be wet, corroded or dirty. Disassemble and clean the switch (Chapter 8).
- ☐ Wiring open or shorted. Check all wiring connections and harnesses to make sure they are dry, tight and not corroded. Also check for broken or frayed wires that can cause a short to ground (see wiring diagrams, Chapter 8).
- ☐ Ignition switch defective. Check the switch according to the procedure in Chapter 8. Replace the switch with a new one if it is defective.
- ☐ Engine kill switch defective. Check for wet, dirty or corroded contacts. Clean or replace the switch as necessary (Chapter 8).
- ☐ Faulty sidestand or clutch switch. Check the wiring to the switch and the switch itself according to the procedures in Chapter 8.

Starter motor rotates but engine does not turn over

- ☐ Starter motor clutch defective. Inspect and repair or replace (Chapter 2).
- ☐ Damaged idler or starter gears. Inspect and replace the damaged parts (Chapter 2).

Starter works but engine won't turn over (seized)

- ☐ Seized engine caused by one or more internally damaged components. Failure due to wear, abuse or lack of lubrication. Damage can include seized valves, valve lifters, camshaft, pistons, crankshaft, connecting rod bearings, or transmission gears or bearings. Refer to Chapter 2 for engine disassembly.

No fuel flow

- ☐ No fuel in tank.
- ☐ Inlet fuel filter clogged (see Chapter 1).
- ☐ Tank cap air vent obstructed (except California models). Usually caused by dirt or water. Remove it and clean the cap vent hole.
- ☐ Fuel tap clogged. Remove the tap and clean it (Chapter 3).
- ☐ Fuel pump failure. Test the pump (Chapter 3).
- ☐ Fuel line clogged. Pull the fuel line loose and carefully blow through it.
- ☐ Inlet needle valve clogged. For all of the valves to be clogged, either a very bad batch of fuel with an unusual additive has been used, or some other foreign material has entered the tank. Many times after a machine has been stored for many months without running, the fuel turns to a varnish-like liquid and forms deposits on the inlet needle valves and jets. The carburettors should be removed and overhauled if draining the float bowls doesn't solve the problem.

Engine flooded

- ☐ Float level too high. Check and adjust as described in Chapter 3.
- ☐ Inlet needle valve worn or stuck open. A piece of dirt, rust or other debris can cause the inlet needle to seat improperly, causing excess fuel to be admitted to the float bowl. In this case, the float chamber should be cleaned and the needle and seat inspected. If the needle and seat are worn, then the leaking will persist and the parts should be replaced with new ones (Chapter 3).
- ☐ Starting technique incorrect. Under normal circumstances (ie, if all the carburettor functions are sound) the machine should start with little or no throttle. When the engine is cold, the choke should be

operated and the engine started without opening the throttle. When the engine is at operating temperature, only a very slight amount of throttle should be necessary. If the engine is flooded, turn the fuel tap off and hold the throttle open while cranking the engine. This will allow additional air to reach the cylinders. Remember to turn the fuel tap back on after the engine starts.

No spark or weak spark

- ☐ Ignition switch Off.
- ☐ Engine kill switch turned to the Off position.
- ☐ Battery voltage low. Check and recharge battery as necessary (Chapter 8).
- ☐ Spark plug dirty, defective or worn out. Locate reason for fouled plug(s) using spark plug condition chart on the inside rear cover and follow the plug maintenance procedures in Chapter 1.
- ☐ Spark plug cap or secondary (HT) wiring faulty. Check condition. Replace either or both components if cracks or deterioration are evident (Chapter 4).
- ☐ Spark plug cap not making good contact. Make sure that the plug cap fits snugly over the plug end.
- ☐ Igniter defective. Check the unit, referring to Chapter 4 for details.
- ☐ Pick-up coil defective. Check the unit, referring to Chapter 4 for details.
- ☐ Ignition coil(s) defective. Check the coils, referring to Chapter 4.
- ☐ Ignition or kill switch shorted. This is usually caused by water, corrosion, damage or excessive wear. The switches can be disassembled and cleaned with electrical contact cleaner. If cleaning does not help, replace the switches (Chapter 8).
- ☐ Wiring shorted or broken between:
 - a) Ignition switch and engine kill switch (or blown fuse)
 - b) Igniter and engine kill switch
 - c) Igniter and ignition coil
 - d) Ignition coil and plug
 - e) Igniter and pick-up coil
- ☐ Make sure that all wiring connections are clean, dry and tight. Look for chafed and broken wires (Chapters 4 and 8).

Compression low

- ☐ Spark plug loose. Remove the plug and inspect the threads. Reinstall and tighten to the specified torque (Chapter 1).
- ☐ Cylinder head not sufficiently tightened down. If the cylinder head is suspected of being loose, then there's a chance that the gasket or head is damaged if the problem has persisted for any length of time. The head nuts should be tightened to the proper torque in the correct sequence (Chapter 2).
- ☐ Improper valve clearance. This means that the valve is not closing completely and compression pressure is leaking past the valve. Check and adjust the valve clearances (Chapter 1).
- ☐ Cylinder and/or piston worn. Excessive wear will cause compression pressure to leak past the rings. This is usually accompanied by worn rings as well. A top end overhaul is necessary (Chapter 2).
- ☐ Piston rings worn, weak, broken, or sticking. Broken or sticking piston rings usually indicate a lubrication or carburetion problem that causes excess carbon deposits or seizures to form on the pistons and rings. Top end overhaul is necessary (Chapter 2).
- ☐ Piston ring-to-groove clearance excessive. This is caused by excessive wear of the piston ring lands. Piston replacement is necessary (Chapter 2).
- ☐ Cylinder head gasket damaged. If the head is allowed to become loose, or if excessive carbon build-up on the piston crown and combustion chamber causes extremely high compression, the head gasket may leak. Retorquing the head is not always sufficient to restore the seal, so gasket replacement is necessary (Chapter 2).

- ☐ Cylinder head warped. This is caused by overheating or improperly tightened head nuts. Machine shop resurfacing or head replacement is necessary (Chapter 2).
- ☐ Valve spring broken or weak. Caused by component failure or wear; the spring(s) must be replaced (Chapter 2).
- ☐ Valve not seating properly. This is caused by a bent valve (from over-revving or improper valve adjustment), burned valve or seat (improper carburetion) or an accumulation of carbon deposits on the seat (from carburetion or lubrication problems). The valves must be cleaned and/or replaced and the seats serviced if possible (Chapter 2).

Stalls after starting

- ☐ Improper choke action. Make sure the choke rod is getting a full stroke and staying in the out position. On later models make sure that the choke cable is correctly adjusted. (Chapter 3).
- ☐ Ignition malfunction. See Chapter 4.
- ☐ Carburettor malfunction. See Chapter 3.
- ☐ Fuel contaminated. The fuel can be contaminated with either dirt or water, or can change chemically if the machine is allowed to sit for several months or more. Drain the tank and float chambers (Chapter 3).

- ☐ Intake air leak. Check for loose carburettor-to-intake manifold connections, loose or missing vacuum gauge access port plug or hose, or loose carburettor top (Chapter 3).
- ☐ Engine idle speed incorrect. Turn throttle stop screw until the engine idles at the specified rpm (Chapters 1 and 3).

Rough idle

- ☐ Ignition malfunction. See Chapter 4.
- ☐ Idle speed incorrect. See Chapter 1.
- ☐ Carburettors not synchronised. Adjust carburettors with vacuum gauge or manometer set as described in Chapter 1.
- ☐ Carburettor malfunction. See Chapter 3.
- ☐ Fuel contaminated. The fuel can be contaminated with either dirt or water, or can change chemically if the machine is allowed to sit for several months or more. Drain the tank and float chambers (Chapter 3).
- ☐ Intake air leak. Check for loose carburettor-to-intake manifold connections, loose or missing vacuum gauge access port cap or hose, or loose carburettor top (Chapter 3).
- ☐ Air cleaner clogged. Service or replace air filter element (Chapter 1).

2 Poor running at low speeds

Spark weak

- ☐ Battery voltage low. Check and recharge battery (Chapter 8).
- ☐ Spark plug fouled, defective or worn out. Refer to Chapter 1 for spark plug maintenance.
- ☐ Spark plug cap or high tension wiring defective. Refer to Chapters 1 and 5 for details of the ignition system.
- ☐ Spark plug cap not making contact.
- ☐ Incorrect spark plug. Wrong type, heat range or cap configuration. Check and install correct plugs listed in Chapter 1. A cold plug or one with a recessed firing electrode will not operate at low speeds without fouling.
- ☐ Igniter defective. See Chapter 4.
- ☐ Signal generator defective. See Chapter 4.
- ☐ Ignition coil(s) defective. See Chapter 4.

Fuel/air mixture incorrect

- ☐ Pilot screw(s) out of adjustment (Chapter 3).
- ☐ Pilot jet or air passage clogged. Remove and overhaul the carburettors (Chapter 3).
- ☐ Air bleed holes clogged. Remove carburettor and blow out all passages (Chapter 3).
- ☐ Air cleaner clogged, poorly sealed or missing.
- ☐ Air cleaner-to-carburettor boot poorly sealed. Look for cracks, holes or loose clamps and replace or repair defective parts.
- ☐ Fuel level too high or too low. Adjust the floats (Chapter 3).
- ☐ Fuel tank air vent obstructed. Make sure that the air vent passage in the filler cap is open.
- ☐ Carburettor intake manifolds loose. Check for cracks, breaks, tears or loose clamps or bolts. Repair or replace the rubber boots.

Compression low

- ☐ Spark plug loose. Remove the plugs and inspect their threads. Reinstall and tighten to the specified torque (Chapter 1).
- ☐ Cylinder head not sufficiently tightened down. If the cylinder head is suspected of being loose, then there's a chance that the gasket and head are damaged if the problem has persisted for any length of time. The head nuts should be tightened to the proper torque in the correct sequence (Chapter 2).
- ☐ Improper valve clearance. This means that the valve is not closing completely and compression pressure is leaking past the valve. Check and adjust the valve clearances (Chapter 1).

- ☐ Cylinder and/or piston worn. Excessive wear will cause compression pressure to leak past the rings. This is usually accompanied by worn rings as well. A top end overhaul is necessary (Chapter 2).
- ☐ Piston rings worn, weak, broken, or sticking. Broken or sticking piston rings usually indicate a lubrication or carburetion problem that causes excess carbon deposits or seizures to form on the pistons and rings. Top end overhaul is necessary (Chapter 2).
- ☐ Piston ring-to-groove clearance excessive. This is caused by excessive wear of the piston ring lands. Piston replacement is necessary (Chapter 2).
- ☐ Cylinder head gasket damaged. If the head is allowed to become loose, or if excessive carbon build-up on the piston crown and combustion chamber causes extremely high compression, the head gasket may leak. Retorquing the head is not always sufficient to restore the seal, so gasket replacement is necessary (Chapter 2).
- ☐ Cylinder head warped. This is caused by overheating or improperly tightened head nuts. Machine shop resurfacing or head replacement is necessary (Chapter 2).
- ☐ Valve spring broken or weak. Caused by component failure or wear; the spring(s) must be replaced (Chapter 2).
- ☐ Valve not seating properly. This is caused by a bent valve (from over-revving or improper valve adjustment), burned valve or seat (improper carburetion) or an accumulation of carbon deposits on the seat (from carburetion, lubrication problems). The valves must be cleaned and/or replaced and the seats serviced if possible (Chapter 2).

Poor acceleration

- ☐ Carburettors leaking or dirty. Overhaul the carburettors (Chapter 3).
- ☐ Timing not advancing. The pick-up coil(s) or the igniter may be defective. If so, they must be replaced with new ones, as they can't be repaired.
- ☐ Carburettors not synchronised. Adjust them with a vacuum gauge set or manometer (Chapter 1).
- ☐ Engine oil viscosity too high. Using a heavier oil than that recommended in Chapter 1 can damage the oil pump or lubrication system and cause drag on the engine.
- ☐ Brakes dragging. Usually caused by debris which has entered the brake piston sealing boot (disc brakes) or from a warped disc or bent axle. Repair as necessary (Chapter 6).

3 Poor running or no power at high speed

Firing incorrect

- ☐ Air filter restricted. Clean or replace filter (Chapter 1).
- ☐ Spark plug fouled, defective or worn out. See Chapter 1 for spark plug maintenance.
- ☐ Spark plug cap or secondary (HT) wiring defective. See Chapters 1 and 4 for details of the ignition system.
- ☐ Spark plug cap not in good contact. See Chapter 4.
- ☐ Incorrect spark plug. Wrong type, heat range or cap configuration. Check and install correct plugs listed in Chapter 1. A cold plug or one with a recessed firing electrode will not operate at low speeds without fouling.
- ☐ Igniter defective. See Chapter 4.
- ☐ Ignition coil(s) defective. See Chapter 4.
- ☐ Spark plug wires crossed (see Chapters 1 and 4).

Fuel/air mixture incorrect

- ☐ Main jet clogged. Dirt, water or other contaminants can clog the main jets. Clean the fuel tap filter, the float chamber area, and the jets and carburettor orifices (Chapter 3).
- ☐ Main jet wrong size. The standard jetting is for sea level atmospheric pressure and oxygen content.
- ☐ Throttle shaft-to-carburettor body clearance excessive. Refer to Chapter 3 for inspection and part replacement procedures.
- ☐ Air bleed holes clogged. Remove and overhaul carburettors (Chapter 3).
- ☐ Air cleaner clogged, poorly sealed, or missing.
- ☐ Air cleaner-to-carburettor boot poorly sealed. Look for cracks, holes or loose clamps, and replace or repair defective parts.
- ☐ Fuel level too high or too low. Adjust the float(s) (Chapter 3).
- ☐ Fuel tank air vent obstructed. Make sure the air vent passage in the filler cap is open.
- ☐ Carburettor intake manifolds loose. Check for cracks, breaks, tears or loose clamps or bolts. Repair or replace the rubber boots (Chapter 2).
- ☐ Fuel filter clogged. Renew the in-line fuel filter (Chapter 1) and clean the fuel tap filter (Chapter 3).
- ☐ Fuel line clogged. Pull the fuel line loose and carefully blow through it.

Compression low

- ☐ Spark plug loose. Remove the plugs and inspect their threads. Reinstall and tighten to the specified torque (Chapter 1).
- ☐ Cylinder head not sufficiently tightened down. If the cylinder head is suspected of being loose, then there's a chance that the gasket and head are damaged if the problem has persisted for any length of time. The head nuts should be tightened to the proper torque in the correct sequence (Chapter 2).
- ☐ Improper valve clearance. This means that the valve is not closing completely and compression pressure is leaking past the valve. Check and adjust the valve clearances (Chapter 1).
- ☐ Cylinder and/or piston worn. Excessive wear will cause compression pressure to leak past the rings. This is usually accompanied by worn rings as well. A top end overhaul is necessary (Chapter 2).
- ☐ Piston rings worn, weak, broken, or sticking. Broken or sticking piston rings usually indicate a lubrication or carburetion problem

that causes excess carbon deposits or seizures to form on the pistons and rings. Top end overhaul is necessary (Chapter 2).

- ☐ Piston ring-to-groove clearance excessive. This is caused by excessive wear of the piston ring lands. Piston replacement is necessary (Chapter 2).
- ☐ Cylinder head gasket damaged. If the head is allowed to become loose, or if excessive carbon build-up on the piston crown and combustion chamber causes extremely high compression, the head gasket may leak. Retorquing the head is not always sufficient to restore the seal, so gasket replacement is necessary (Chapter 2).
- ☐ Cylinder head warped. This is caused by overheating or improperly tightened head nuts. Machine shop resurfacing or head replacement is necessary (Chapter 2).
- ☐ Valve spring broken or weak. Caused by component failure or wear; the spring(s) must be replaced (Chapter 2).
- ☐ Valve not seating properly. This is caused by a bent valve (from over-revving or improper valve adjustment), burned valve or seat (improper carburetion) or an accumulation of carbon deposits on the seat (from carburetion or lubrication problems). The valves must be cleaned and/or replaced and the seats serviced if possible (Chapter 2).

Knocking or pinking

- ☐ Carbon build-up in combustion chamber. Use of a fuel additive that will dissolve the adhesive bonding the carbon particles to the crown and chamber is the easiest way to remove the build-up. Otherwise, the cylinder head will have to be removed and decarbonised (Chapter 2).
- ☐ Incorrect or poor quality fuel. Old or improper grades of fuel can cause detonation. This causes the piston to rattle, thus the knocking or pinking sound. Drain old fuel and always use the recommended fuel grade.
- ☐ Spark plug heat range incorrect. Uncontrolled detonation indicates the plug heat range is too hot. The plug in effect becomes a glow plug, raising cylinder temperatures. Install the proper heat range plug (Chapter 1).
- ☐ Improper air/fuel mixture. This will cause the cylinder to run hot, which leads to detonation. Clogged jets or an air leak can cause this imbalance. See Chapter 3.

Miscellaneous causes

- ☐ Throttle valve doesn't open fully. Adjust the cable slack (Chapter 1).
- ☐ Maladjusted throttle position sensor – later models (Chapter 4).
- ☐ Clutch slipping. May be caused by loose or worn clutch components. Refer to Chapter 2 for clutch overhaul procedures.
- ☐ Timing not advancing.
- ☐ Engine oil viscosity too high. Using a heavier oil than the one recommended in Chapter 1 can damage the oil pump or lubrication system and cause drag on the engine.
- ☐ Brakes dragging. Usually caused by debris which has entered the brake piston sealing boot, or from a warped disc or bent axle. Repair as necessary.

4 Overheating

Engine overheats

- ☐ Engine oil level low. Check and add oil (Daily (pre-ride) checks).
- ☐ Wrong type of oil. If you're not sure what type of oil is in the engine, drain it and fill with the correct type (Chapter 1).
- ☐ Air leak at carburettor intake boots. Check and tighten or replace as necessary (Chapter 3).
- ☐ Fuel level low. Check and adjust if necessary (Chapter 3).
- ☐ Worn oil pump or clogged oil passages. Check oil pressure (Chapter 2). Replace pump or clean passages as necessary.
- ☐ Carbon build-up in combustion chambers. Use of a fuel additive that will dissolve the adhesive bonding the carbon particles to the piston crowns and chambers is the easiest way to remove the build-up. Otherwise, the cylinder head will have to be removed and decarbonised (Chapter 2).

Firing incorrect

- ☐ Spark plugs fouled, defective or worn out. See Chapter 1 for spark plug maintenance.
- ☐ Incorrect spark plugs.
- ☐ Faulty ignition coil(s) (Chapter 4).

Fuel/air mixture incorrect

- ☐ Main jet clogged. Dirt, water and other contaminants can clog the main jets. Clean the fuel tap filter, the float chamber area and the jets and carburettor orifices (Chapter 3). Renew the in-line fuel filter (Chapter 1).
- ☐ Main jet wrong size. The standard jetting is for sea level atmospheric pressure and oxygen content.
- ☐ Air cleaner poorly sealed or missing.
- ☐ Air cleaner-to-carburettor boot poorly sealed. Look for cracks, holes or loose clamps and replace or repair.
- ☐ Fuel level too low. Adjust the float(s) (Chapter 3).
- ☐ Fuel tank air vent obstructed. Make sure that the air vent passage in the filler cap is open.
- ☐ Carburettor intake manifolds loose. Check for cracks, breaks, tears or loose clamps or bolts. Repair or replace the rubber boots (Chapter 3). Remove the manifolds and inspect the O-rings (see Chapter 3).

5 Clutch problems

Clutch slipping

- ☐ Friction plates worn or warped. Overhaul the clutch assembly (Chapter 2).
- ☐ Steel plates worn or warped (Chapter 2).
- ☐ Clutch springs broken or weak. Old or heat-damaged (from slipping clutch) springs should be replaced with new ones (Chapter 2).
- ☐ Worn or warped clutch plates. Replace (Chapter 2).
- ☐ Clutch release mechanism defective. Replace any defective parts (Chapter 2).
- ☐ Clutch hub or housing unevenly worn. This causes improper engagement of the discs. Replace the damaged or worn parts (Chapter 2).

Clutch not disengaging completely

- ☐ Sticking cable. Inspect and lubricate or replace (Chapter 2).
- ☐ Clutch plates warped or damaged. This will cause clutch drag, which in turn will cause the machine to creep. Overhaul the clutch assembly (Chapter 2).

Compression too high

- ☐ Carbon build-up in combustion chamber. Use of a fuel additive that will dissolve the adhesive bonding the carbon particles to the piston crown and chamber is the easiest way to remove the build-up. Otherwise, the cylinder head will have to be removed and decarbonised (Chapter 2).
- ☐ Improperly machined head surface or installation of incorrect gasket during engine assembly. Check Specifications (Chapter 2).

Engine load excessive

- ☐ Clutch slipping. Can be caused by damaged, loose or worn clutch components. Refer to Chapter 2 for overhaul procedures.
- ☐ Engine oil level too high. The addition of too much oil will cause pressurisation of the crankcase and inefficient engine operation. Check Specifications and drain to proper level (Daily (pre-ride) checks).
- ☐ Engine oil viscosity too high. Using a heavier oil than the one recommended in Chapter 1 can damage the oil pump or lubrication system as well as cause drag on the engine.
- ☐ Brakes dragging. Usually caused by debris which has entered the brake piston sealing boot, or from a warped disc or bent axle. Repair as necessary.

Lubrication inadequate

- ☐ Engine oil level too low. Friction caused by intermittent lack of lubrication or from oil that is overworked can cause overheating. The oil provides a definite cooling function in the engine. Check the oil level (Daily (pre-ride) checks).

Miscellaneous causes

- ☐ Modification to exhaust system. Most aftermarket exhaust systems cause the engine to run leaner, which makes it run hotter. When installing an accessory exhaust system, always reject the carburettors.

- ☐ Clutch spring tension uneven. Usually caused by a sagged or broken spring. Check and replace the spring (Chapter 2).
- ☐ Engine oil deteriorated. Old, thin, worn out oil will not provide proper lubrication for the discs, causing the clutch to drag. Replace the oil and filter (Chapter 1).
- ☐ Engine oil viscosity too high. Using a heavier oil than recommended in Chapter 1 can cause the plates to stick together, putting a drag on the engine. Change to the correct weight oil (Chapter 1).
- ☐ Clutch housing seized on shaft. Lack of lubrication, severe wear or damage can cause the housing to seize on the shaft. Overhaul of the clutch, and perhaps transmission, may be necessary to repair the damage (Chapter 2).
- ☐ Clutch release mechanism defective. Worn or damaged release mechanism parts can stick and fail to apply force to the pressure plate. Overhaul the release mechanism components (Chapter 2).
- ☐ Loose clutch hub nut. Causes housing and hub misalignment putting a drag on the engine. Engagement adjustment continually varies. Overhaul the clutch assembly (Chapter 2).

6 Gear shifting problems

Doesn't go into gear or lever doesn't return

- ☐ Clutch not disengaging. See Section 5.
- ☐ Shift fork(s) bent or seized. Often caused by dropping the machine or from lack of lubrication. Overhaul the transmission (Chapter 2).
- ☐ Gear(s) stuck on shaft. Most often caused by a lack of lubrication or excessive wear in transmission bearings and bushings. Overhaul the transmission (Chapter 2).
- ☐ Shift cam binding. Caused by lubrication failure or excessive wear. Replace the cam and bearings (Chapter 2).
- ☐ Shift lever return spring weak or broken (Chapter 2).
- ☐ Shift lever broken. Splines stripped out of lever or shaft, caused by allowing the lever to get loose or from dropping the machine. Replace necessary parts (Chapter 2).
- ☐ Shift mechanism pawl broken or worn. Full engagement and rotary movement of shift cam results. Replace shaft assembly (Chapter 2).

- ☐ Pawl spring broken. Allows pawl to float, causing sporadic shift operation. Replace spring (Chapter 2).

Jumps out of gear

- ☐ Shift fork(s) worn. Overhaul the transmission (Chapter 2).
- ☐ Gear groove(s) worn. Overhaul the transmission (Chapter 2).
- ☐ Gear dogs or dog slots worn or damaged. The gears should be inspected and replaced. No attempt should be made to service worn parts.

Overshifts

- ☐ Pawl spring weak or broken (Chapter 2).
- ☐ Shift cam stopper lever not functioning (Chapter 2).
- ☐ Overshift limiter broken or distorted (Chapter 2).

7 Abnormal engine noise

Knocking or pinking

- ☐ Carbon build-up in combustion chamber. Use of a fuel additive that will dissolve the adhesive bonding the carbon particles to the piston crown and chamber is the easiest way to remove the build-up. Otherwise, the cylinder head will have to be removed and decarbonised (Chapter 2).
- ☐ Incorrect or poor quality fuel. Old or improper fuel can cause detonation. This causes the pistons to rattle, thus the knocking or pinking sound. Drain the old fuel and always use the recommended grade fuel (Chapter 3).
- ☐ Spark plug heat range incorrect. Uncontrolled detonation indicates that the plug heat range is too hot. The plug in effect becomes a glow plug, raising cylinder temperatures. Install the proper heat range plug (Chapter 1).
- ☐ Improper air/fuel mixture. This will cause the cylinders to run hot and lead to detonation. Clogged jets or an air leak can cause this imbalance. See Chapter 3.

- ☐ Connecting rod upper or lower end clearance excessive. Caused by excessive wear or lack of lubrication. Replace worn parts.

Valve noise

- ☐ Incorrect valve clearances. Adjust the clearances by referring Chapter 1.
- ☐ Valve spring broken or weak. Check and replace weak valve springs (Chapter 2).
- ☐ Camshaft or cylinder head worn or damaged. Lack of lubrication high rpm is usually the cause of damage. Insufficient oil or failure to change the oil at the recommended intervals are the chief causes. Since there are no replaceable bearings in the head, the head itself will have to be replaced if there is excessive wear or damage (Chapter 2).

Other noise

- ☐ Cylinder head gasket leaking.
- ☐ Exhaust pipe leaking at cylinder head connection. Caused by improper fit of pipe(s) or loose exhaust flange. All exhaust fasteners should be tightened evenly and carefully. Failure to do this will lead to a leak.
- ☐ Crankshaft runout excessive. Caused by a bent crankshaft (from over-revving) or damage from an upper cylinder component failure. Can also be attributed to dropping the machine on either of the crankshaft ends.
- ☐ Engine mounting bolts loose. Tighten all engine mount bolts to the specified torque (Chapter 2).
- ☐ Crankshaft bearings worn (Chapter 2).
- ☐ Camshaft chain tensioner defective. Inspect and replace as necessary (Chapter 2).
- ☐ Camshaft chain, sprockets or guides worn (Chapter 2).

Piston slap or rattling

- ☐ Cylinder-to-piston clearance excessive. Caused by improper assembly. Inspect and overhaul top end parts (Chapter 2).
- ☐ Connecting rod bent. Caused by over-revving, trying to start a badly flooded engine or from ingesting a foreign object into the combustion chamber. Replace the damaged parts (Chapter 2).
- ☐ Piston pin or piston pin bore worn or seized from wear or lack of lubrication. Replace damaged parts (Chapter 2).
- ☐ Piston ring(s) worn, broken or sticking. Overhaul the top end (Chapter 2).
- ☐ Piston seizure damage. Usually from lack of lubrication or overheating. Replace the pistons and bore the cylinders, as necessary (Chapter 2).

8 Abnormal driveline noise

Clutch noise

- ☐ Clutch housing/friction plate clearance excessive (Chapter 2).
- ☐ Loose or damaged clutch pressure plate and/or bolts (Chapter 2).

Transmission noise

- ☐ Bearings worn. Also includes the possibility that the shafts are worn. Overhaul the transmission (Chapter 2).
- ☐ Gears worn or chipped (Chapter 2).
- ☐ Metal chips jammed in gear teeth. Probably pieces from a broken clutch, gear or shift mechanism that were picked up by the gears. This will cause early bearing failure (Chapter 2).

- ☐ Engine oil level too low. Causes a howl from transmission. Also affects engine power and clutch operation (Daily (pre-ride) checks).

Final drive noise

- ☐ Chain not adjusted properly (Chapter 1).
- ☐ Engine sprocket or rear sprocket loose. Tighten fasteners (Chapters 2 and 5).
- ☐ Sprocket(s) worn. Replace sprocket(s). (Chapter 5).
- ☐ Rear sprocket warped. Replace (Chapter 5).
- ☐ Wheel coupling (cush drive) worn. Replace coupling (Chapter 5).

9 Abnormal frame and suspension noise

Front end noise

- ☐ Low fluid level or improper viscosity oil in forks. This can sound like spurting and is usually accompanied by irregular fork action (Chapter 5).
- ☐ Spring weak or broken. Makes a clicking or scraping sound. Fork oil, when drained, will have a lot of metal particles in it (Chapter 5).
- ☐ Steering head bearings loose or damaged. Clicks when braking. Check and adjust or replace as necessary (Chapters 1 and 5).
- ☐ Fork clamps loose. Make sure all fork clamp pinch bolts are tight (Chapter 5).
- ☐ Fork tube bent. Good possibility if machine has been dropped. Replace tube with a new one (Chapter 5).
- ☐ Front axle or axle clamp bolt loose. Tighten them to the specified torque (Chapter 6).

Shock absorber noise

- ☐ Fluid level incorrect. Indicates a leak caused by defective seal. Shock will be covered with oil. Replace shock (Chapter 5).
- ☐ Defective shock absorber with internal damage. This is in the body of the shock and can't be remedied. The shock must be replaced with a new one (Chapter 5).

- ☐ Bent or damaged shock body. Replace the shock with a new one (Chapter 5).

Brake noise

- ☐ Squeal caused by pad shim not installed or positioned correctly (Chapter 6).
- ☐ Squeal caused by dust on brake pads. Usually found in combination with glazed pads. Clean using brake cleaning solvent (Chapter 6).
- ☐ Contamination of brake pads. Oil, brake fluid or dirt causing brake to chatter or squeal. Clean or renew pads (Chapter 6).
- ☐ Pads glazed. Caused by excessive heat from prolonged use or from contamination. Do not use sandpaper, emery cloth, carborundum cloth or any other abrasive to roughen the pad surfaces as abrasives will stay in the pad material and damage the disc. A very fine flat file can be used, but pad replacement is suggested as a cure (Chapter 6).
- ☐ Disc warped. Can cause a chattering, clicking or intermittent squeal. Usually accompanied by a pulsating lever and uneven braking. Replace the disc (Chapter 6).
- ☐ Loose or worn wheel bearings. Check and replace as needed (Chapter 6).

10 Oil level indicator light comes on

Engine lubrication system

- ☐ These models use an oil level light rather than an oil pressure light.
- ☐ Engine oil level low. Inspect for leak or other problem causing low oil level and add recommended oil (Daily (pre-ride) checks).

Electrical system

- ☐ Oil level switch defective. Check the switch according to the procedure in Chapter 8. Replace it if it's defective.
- ☐ Oil level indicator light circuit defective. Check for pinched, shorted, disconnected or damaged wiring (Chapter 8).

11 Excessive exhaust smoke

White smoke

- ☐ Piston oil ring worn. The ring may be broken or damaged, causing oil from the crankcase to be pulled past the piston into the combustion chamber. Replace the rings with new ones (Chapter 2).
- ☐ Cylinders worn, cracked, or scored. Caused by overheating or oil starvation. The cylinders will have to be rebored and new pistons installed.
- ☐ Valve oil seal damaged or worn. Replace oil seals with new ones (Chapter 2).
- ☐ Valve guide worn. Perform a complete valve job (Chapter 2).
- ☐ Engine oil level too high, which causes the oil to be forced past the rings. Drain oil to the proper level (Daily (pre-ride) checks).
- ☐ Head gasket broken between oil return and cylinder. Causes oil to be pulled into the combustion chamber. Replace the head gasket and check the head for warpage (Chapter 2).
- ☐ Abnormal crankcase pressurisation, which forces oil past the rings. Clogged breather or hoses usually the cause (Chapter 3).

Black smoke

- ☐ Air cleaner clogged. Clean or replace the element (Chapter 1).
- ☐ Main jet too large or loose. Compare the jet size to the Specifications (Chapter 3).
- ☐ Choke stuck, causing fuel to be pulled through choke circuit (Chapter 3).
- ☐ Fuel level too high. Check and adjust the float level as necessary (Chapter 3).
- ☐ Inlet needle held off needle seat. Clean the float chambers and fuel line and replace the needles and seats if necessary (Chapter 3).

Brown smoke

- ☐ Main jet too small or clogged. Lean condition caused by wrong size main jet or by a restricted orifice. Clean float chamber and jets and compare jet size to Specifications (Chapter 3).
- ☐ Fuel flow insufficient. Fuel inlet needle valve stuck closed due to chemical reaction with old fuel. Fuel level incorrect. Restricted fuel line. Clean line and float chamber and adjust floats if necessary.
- ☐ Carburettor intake manifolds loose (Chapter 3).
- ☐ Air cleaner poorly sealed or not installed (Chapter 1).

12 Poor handling or stability

Handlebar hard to turn

- ☐ Steering stem locknut too tight (Chapter 5).
- ☐ Bearings damaged. Roughness can be felt as the bars are turned from side-to-side. Replace bearings and races (Chapter 5).
- ☐ Races dented or worn. Denting results from wear in only one position (eg, straight ahead), from a collision or hitting a pothole or from dropping the machine. Replace races and bearings (Chapter 5).
- ☐ Steering stem lubrication inadequate. Causes are grease getting hard from age or being washed out by high pressure car washes. Disassemble steering head and repack bearings (Chapter 5).
- ☐ Steering stem bent. Caused by a collision, hitting a pothole or by dropping the machine. Replace damaged part. Don't try to straighten the steering stem (Chapter 5).
- ☐ Front tyre air pressure too low (Chapter 1).

Handlebar shakes or vibrates excessively

- ☐ Tyres worn or out of balance (Chapter 6).
- ☐ Swingarm bearings worn. Replace worn bearings by referring to Chapter 6.
- ☐ Rim(s) warped or damaged. Inspect wheels for runout (Chapter 6).
- ☐ Wheel bearings worn. Worn front or rear wheel bearings can cause poor tracking. Worn front bearings will cause wobble (Chapter 6).
- ☐ Handlebar clamp bolts loose (Chapter 5).
- ☐ Steering stem or fork clamps loose. Tighten them to the specified torque (Chapter 5).
- ☐ Engine mounting bolts loose. Will cause excessive vibration with increased engine rpm (Chapter 2).

Handlebar pulls to one side

- ☐ Frame bent. Definitely suspect this if the machine has been dropped. May or may not be accompanied by cracking near the bend. Replace the frame (Chapter 5).
- ☐ Wheel out of alignment. Caused by improper location of axle spacers or from bent steering stem or frame (Chapter 5).
- ☐ Swingarm bent or twisted. Caused by age (metal fatigue) or impact damage. Replace the arm (Chapter 5).
- ☐ Steering stem bent. Caused by impact damage or by dropping the motorcycle. Replace the steering stem (Chapter 5).
- ☐ Fork leg bent. Disassemble the forks and replace the damaged parts (Chapter 6).
- ☐ Fork oil level uneven. Check and add or drain as necessary (Chapter 1).

Poor shock absorbing qualities

- ☐ Too hard:
 - a) Fork oil level excessive (Chapter 5).
 - b) Fork oil viscosity too high.
 - c) Fork tube bent. Causes a harsh, sticking feeling (Chapter 5).
 - d) Shock shaft or body bent or damaged (Chapter 5).
 - e) Fork internal damage (Chapter 5).
 - f) Shock internal damage.
- ☐ Tyre pressure too high (Chapters 1 and 6).
- ☐ Too soft:
 - a) Fork or shock oil insufficient and/or leaking (Chapter 5).
 - b) Fork oil level too low (Chapter 5).
 - c) Fork oil viscosity too light (Chapter 5).
 - d) Fork springs weak or broken (Chapter 5).

13 Braking problems

Brakes are spongy, don't hold

- ☐ Air in brake line. Caused by inattention to master cylinder fluid level or by leakage. Locate problem and bleed brakes (Chapter 6).
- ☐ Pad or disc worn (Chapters 1 and 6).
- ☐ Brake fluid leak. See paragraph 1.
- ☐ Contaminated pads. Caused by contamination with oil, grease, brake fluid, etc. Clean or replace pads. Clean disc thoroughly with brake cleaner (Chapter 6).
- ☐ Brake fluid deteriorated. Fluid is old or contaminated. Drain system, replenish with new fluid and bleed the system (Chapter 6).
- ☐ Master cylinder internal parts worn or damaged causing fluid to bypass (Chapter 6).
- ☐ Master cylinder bore scratched by foreign material or broken spring. Repair or replace master cylinder (Chapter 6).
- ☐ Disc warped. Replace disc (Chapter 6).

Brake lever or pedal pulsates

- ☐ Disc warped. Replace disc (Chapter 6).
- ☐ Axle bent. Replace axle (Chapter 5).
- ☐ Brake caliper bolts loose (Chapter 6).

- ☐ Brake caliper shafts damaged or sticking, causing caliper to bind. Lube the shafts or replace them if they are corroded or bent (Chapter 6).
- ☐ Wheel warped or otherwise damaged (Chapter 6).
- ☐ Wheel bearings damaged or worn (Chapter 6).

Brakes drag

- ☐ Master cylinder piston seized. Caused by wear or damage to piston or cylinder bore (Chapter 6).
- ☐ Lever balky or stuck. Check pivot and lubricate (Chapter 6).
- ☐ Brake caliper binds (rear caliper). Caused by inadequate lubrication or damage to caliper slider pins (Chapter 6).
- ☐ Brake caliper piston seized in bore. Caused by wear or ingestion of dirt past deteriorated seal (Chapter 6).
- ☐ Brake pad damaged. Pad material separated from backing plate. Usually caused by faulty manufacturing process or from contact with chemicals. Replace pads (Chapter 6).
- ☐ Pads improperly installed (Chapter 6).
- ☐ Rear brake pedal freeplay insufficient (Chapter 1).
- ☐ Corrosion in brake pad cavities. On UK models, refer to the pad replacement procedure in Chapter 6 and apply special lubricants to the recommended areas.

14 Electrical problems

Battery dead or weak

- ☐ Battery faulty. Caused by sulphated plates which are shorted through sedimentation or low electrolyte level. Also, broken battery terminal making only occasional contact (Chapter 8).
- ☐ Battery cables making poor contact (Chapter 8).
- ☐ Load excessive. Caused by addition of high wattage lights or other electrical accessories.
- ☐ Ignition switch defective. Switch either grounds internally or fails to shut off system. Replace the switch (Chapter 8).
- ☐ Regulator/rectifier defective (Chapter 8).

- ☐ Alternator stator coil open or shorted (Chapter 8).
- ☐ Wiring faulty. Wiring grounded or connections loose in ignition, charging or lighting circuits (Chapter 8).

Battery overcharged

- ☐ Regulator/rectifier defective. Overcharging is noticed when battery gets excessively warm or boils over (Chapter 8).
- ☐ Battery defective. Replace battery with a new one (Chapter 8).
- ☐ Battery amperage too low, wrong type or size. Install manufacturer's specified amp-hour battery to handle charging load (Chapter 8).

XJ600S Diversion	598cc	'92 to '99
XJ600S Seca II	598cc	'92 to '99
XJ600N	598cc	'95 to '99

XJ600S Diversion	598cc	'92 to '99
XJ600S Seca II	598cc	'92 to '99
XJ600N	598cc	'95 to '99



A man in a dark jacket is kneeling on the ground next to a black motorcycle. He is focused on the rear wheel, possibly adjusting the chain or a brake component. A white helmet lies on the ground to his right, and a map or document is spread out on the pavement in front of him. The motorcycle is parked on a paved surface, and a building is visible in the background.

clearly linked to hundreds of photos and illustrations guide you through each job.

Spanner ratings grade all tasks by experience level – from simple servicing jobs for beginners through to more difficult tasks for the expert.

Haynes Hints and Tool Tips give you valuable 'inside' information such as ways of removing parts without using special tools.

8000 Miles/12,000 km or 12 months



1. This subassembly is equipped with gear plugs that bleed 10 psi (700 kPa) and a 1/2-in. (12.7-mm) hole. Bleed out your gear plug and install in the carrier and before attempting to remove the plugs, it is highly not to support in the subassembly's body.

2. Remove the bearing inside seal and seal (Fig. 1).

6. For the upper group, all of the upper teeth are cutting a fine, narrow, light-colored, serrated track from the upper hard gum (incisal) edge. Like the stage 5, it is cutting a narrow wedge. I am going down a groove to get to the stage 6, but the incisors are cutting a groove.

• **Identifying** each stage by establishing a sequence, provided you know the group will follow that same sequence.

• **Revising** existing case study, making sure that the overall goal and case design (and the gap between the intervention, if that gap still exists, the main findings, and the case design) within the case, is clear.



- ◆ **Model history** and **Pre-ride Checks** in colour.
- ◆ A complete step-by-step guide to **servicing** and **routine maintenance**.
- ◆ **Engine** and **transmission** – servicing and overhaul.
- ◆ **Fuel** and **ignition systems** explained.
- ◆ **Suspension** and **steering** – adjustment and overhaul.
- ◆ **Braking system** – safety checks and repairs.

- ◆ **Electrical system** – fault finding and repairs.
- ◆ Comprehensive **colour wiring diagrams**.
- ◆ 18 page **Tools & Workshop Tips** section in **colour**.
- ◆ **Fault finding** checklist and equipment to pinpoint specific problems.
- ◆ **Fully indexed** to help you find information easily.



9 781859 605516

Motor Cycle News

"...I couldn't live without my Haynes..."

Superbike

0 38345 02145 9