

Norton
REGD TRADE MARK

MOTOR CYCLE
PARTS

PRICE 1/-

NORTON MOTORS (1926) LTD

BRACEBRIDGE STREET
BIRMINGHAM, ENGLAND

TELEPHONE—
CENTRAL 7351-2352
PRIVATE BRANCH EXCHANGE

TELEGRAMS—
"NORTOMO,
BIRMINGHAM"

A. Gagg & Sons

118-127 Alfreton Road
Nottingham

CONTENTS.

	Page No.	Illustration Page No.
Crankcase, Flywheels, Main Bearings, etc. ...	3	I.
Timing Gear and Tappet Parts, Etc. ...	5	I.
Magneto and Magneto Driving Parts ...	5	I.
Mechanical Oil Pump, With Sight Feed ...	5 and 7	I.
Cylinder, Valves, etc. ...	7	I.
Push Rods and Fittings ...	7	II.
Overhead Rocker Fittings ...	8	II.
Connecting Rod and Piston Assembly ...	8	II.
AMAL Carburetter ...	8 and 9	II.
Lucas M.D.B.I. Magdyno Parts ...	9	II.
Dynamo Portion ...	9	II.
Exhaust Pipes and Silencers ...	9	II.
Norton Druid Forks and Steering Damper ...	11	III.
Norton Webb Forks and Steering Damper ...	11 and 13	IV.
Handlebars and Fittings ...	13	V.
Petrol and Oil Tanks ...	13 and 15	V.
Gear Box ...	15, 17 and 19	VI.
Transmission ...	19	VII.
Wheels and Hubs ...	19 and 20	VII.
Rear Brake Actuating Parts ...	20	VIII.
Footrests and Footboards ...	22	VIII.
Frame, Mudguards, Stands, etc. ...	22 and 24	VIII. and IX.
Tools ...	24	IX.
Legshields ...	24	IX.

INSTRUCTIONS FOR ORDERING SPARE PARTS.

This Spare Parts List deals only with replacement parts for Models subsequent to 1928. For CS1, ES2, CJ and JE Models see separate list.

It is most essential that the Engine and Frame Number of the machine is stated. The Engine Number is to be found on the transmission side of the Crankcase, and the Frame Number is stamped on the Seat Lug of the Frame on the rear side of the machine. It is always advisable to order parts on a separate sheet, and not to include on the same sheet other matter of a different nature; this facilitates prompt despatch.

It is found in a number of instances that money orders and postal orders are sent in parcels containing patterns; this is inadvisable. We strongly recommend parts as patterns being despatched separately, and a covering letter sent containing the remittance for replacement parts.

RETURNING MACHINES FOR OVERHAULING.

When returning machines or parts for repair or overhaul, these should be sent carriage paid, and with the sender's name and address in full **securely** attached. It is also advisable to state on the tally that a letter has been sent respecting the parts, and giving the date. All easily detached fittings should be removed, such as Lamps, Horns, Tool Bags, Speedometers, etc., these are liable to be lost or damaged in transit, and the Company cannot accept any responsibility for them.

ESTIMATES FOR REPAIRING MACHINES.

We are always prepared to give approximate estimates for the cost of repairs; it is quite impossible to give a firm quotation. Additional parts may be found necessary during the process of repair, unforeseen when preparing an estimate. Should our estimate for repair not be accepted, a charge may be made in accordance with work entailed in dismantling and re-assembling. When we give an estimate for the cost of repairs, and this is curtailed by the owner, we cannot accept any responsibility for the performance of the machine, it is always preferable to accept our estimate in full.

TERMS OF BUSINESS.

Our terms are strictly nett cash with order, or cash against repayment invoice. The exact amount, including postage, must be remitted, or when the cost of the parts required is unknown, a sum likely to cover the cost should be enclosed, if the amount remitted is more than the cost of the parts that are ordered, the balance will either be placed to a credit account or returned at our clients' option. Cheques and Postal Orders should be made payable to "Norton Motors (1926) Ltd." and crossed Barclays Bank Ltd. Prices quoted in this list do not include the cost of carriage or fitting. We reserve the right to alter prices or specification of any parts at any time without notice. Where parts are urgently required, remittance may be sent by Telegraphic Money Order, but it is **absolutely essential** that the sender fill in his full name and address in the space provided on the Post Office Money Order Form. Unless this is done the Post Office do not give us the information in the telegram. It is necessary that all orders given by wire or 'phone should be confirmed by letter at the earliest opportunity.

DEPOSIT ACCOUNT.

We strongly recommend riders of our machines to open a deposit account; this can be done by depositing with us not less than £4. This will ensure goods to that value being despatched with the least possible delay. When ordering by 'phone, wire or post, this often avoids great inconvenience, and for the benefit of the depositor a monthly statement of account is rendered, showing credit balance. Under no circumstances whatever can parts be despatched without remittance covering same has been sent, unless a deposit account is opened. Should the machine be disposed of at a later date we are always prepared to remit any amount that may be remaining.

PARTS BY C.O.D. SYSTEM.

Unless remittance is received with order, parts are despatched by C.O.D. System or against pro-forma invoice at our discretion.

CRANKCASE, FLYWHEELS, MAIN BEARINGS, ETC.

For Parts for Dry Sump Lubricated Engine see separate List.

Part No.			£	s.	d.
5000	Crankcase with Timing Cover, Magneto Chain Cover, Bushes, Studs, Bolts and Nuts complete	For all Models	6	6	0
5001	Crankcase Cylinder Stud,	For all Models	0	0	6
5002	" " " " nuts	For all Models each	0	0	10
5003	Crankcase Timing Cover with Bushes	For all Models	1	5	0
5004	Magneto Chain Cover	For all Models	0	8	0
5005	Camshaft Bush (Crankcase)	For all Models	0	2	6
5006	Camshaft Bush (Timing Cover)	For all Models	0	2	6
5007	Rocker Shaft Bush for Crankcase or Timing Cover...	For all Models	0	2	3
5008	Flywheels complete with Shafts, Crank Pin Bearing and Connecting Rod	For Models 1 & 14	5	11	6
5009	Flywheels complete with Shafts, Crank Pin Bearing and Connecting Rod	2 & 16H	5	11	6
5010	Flywheels complete with Shafts, Crank Pin Bearing and Connecting Rod	18	5	11	6
5011	Flywheels complete with Shafts, Crank Pin Bearing and Connecting Rod	19 & 24	5	11	6
5012	Flywheel Timing Side with Shaft only for	1, 14, 19 & 24	1	14	0
5013	Flywheel Timing Side with Shaft only	2, 16H & 18	1	14	0
5014	Flywheel Driving Side with Shaft only	1, 14, 19 & 24	1	14	0
5015	Flywheel Driving Side with Shaft only	2, 16H & 18	1	14	0
5016	Crank Pin Bearing with Nuts	1, 2, 14, 16H, 18, 19, 24	1	8	0
5017	Crank Pin Bearing Nut Locking Washer	For all Models	0	0	3
5018	Crank Pin Bearing Nuts	For all Models each	0	0	8
5019	Crank Pin Bearing Nut Lock Washer Screw	For all Models	0	0	1

NOTE. — CRANK PIN SPARE PARTS CANNOT BE SUPPLIED SEPARATELY, EACH OUTER RACE HAS ITS INDIVIDUAL PIN.


5020	Mainshaft Ball Bearing, Timing Side	For all Models	0	11	0
5021	Mainshaft Roller Bearing, Driving Side	For all Models	0	16	0
5022	Crankcase Drain Plug	For all Models	0	0	6
5023	Bolt for attaching Engine Plate to Frame, $3\frac{1}{2} \times \frac{1}{2}$ "	16H, 18, 19, 21 & 24	0	1	3
5024	Bolt for attaching Engine Plate to Frame, $3\frac{1}{2} \times \frac{1}{2}$ "	1, 2 & 14	0	1	3
5025	Engine Plate Bottom Bolt and Exhaust Pipe attachment Bolt	18, 19, 21 & 24	0	1	9
5026	Engine Plate Bottom Bolt and Exhaust Pipe attachment Bolt	1, 2, 14 & 16H	0	1	6
5027	Engine Plate Bolt, $3\frac{1}{2} \times \frac{7}{16}$ "	For all Models	0	1	3
5028	Gear Bracket Bolt Top, $3\frac{1}{2} \times \frac{7}{16}$ "	For all Models	0	1	3
5029	Footrest Plate Bolt, $3\frac{1}{2} \times \frac{5}{16}$ "	For all Models	0	1	3
5030	Crankcase Front Bottom Bolt, $3\frac{1}{2} \times \frac{5}{16}$ "	For all Models	0	1	3
5031	Crankcase Rear Bottom and Chain Case attach. Bolt	For all Models	0	1	6
5032	Crankcase Front Top Bolt, $5\frac{1}{2} \times \frac{1}{2}$ "	1, 2, 14 & 16H	0	1	3
5033	Crankcase Front Top Bolt, $5\frac{1}{2} \times \frac{1}{2}$ "	18, 19, 21 & 24	0	1	3
5034	Crankcase Rear Top Bolt, $4 \times \frac{1}{2}$ "	1, 2, 14 & 16H	0	1	3
5035	Crankcase Rear Top Bolt, $3\frac{1}{2} \times \frac{1}{2}$ "	18, 19, 21 & 24	0	1	3

NOTE.—PRICES QUOTED ARE WITH NUTS COMPLETE.


5036	Crankcase Front Oil Plug	For all Models	0	0	6
5037	Front Chain Oil Pipe Union	For all Models	0	1	3
5038	Front Chain Oil Pipe Union Nut	For all Models	0	0	8
5039	Front Chain Oil Pipe Union Washer	For all Models	0	0	2
5040	Front Chain Oil Pipe Union Disc	For all Models	0	0	1
5041	Front Chain Oil Pipe Union Disc Spring	For all Models	0	0	1
5042	Front Chain Oil Pipe Union Disc Plunger Spring	For all Models	0	0	1
5043	Front Chain Oil Pipe Union Plunger	For all Models	0	0	3
5044	Front Chain Oil Pipe	For all Models	0	2	0

For CS1, ES2, CJ and JE Models, see separate lists.


CRANKCASE FLYWHEELS, MAIN BEARINGS, ETC.

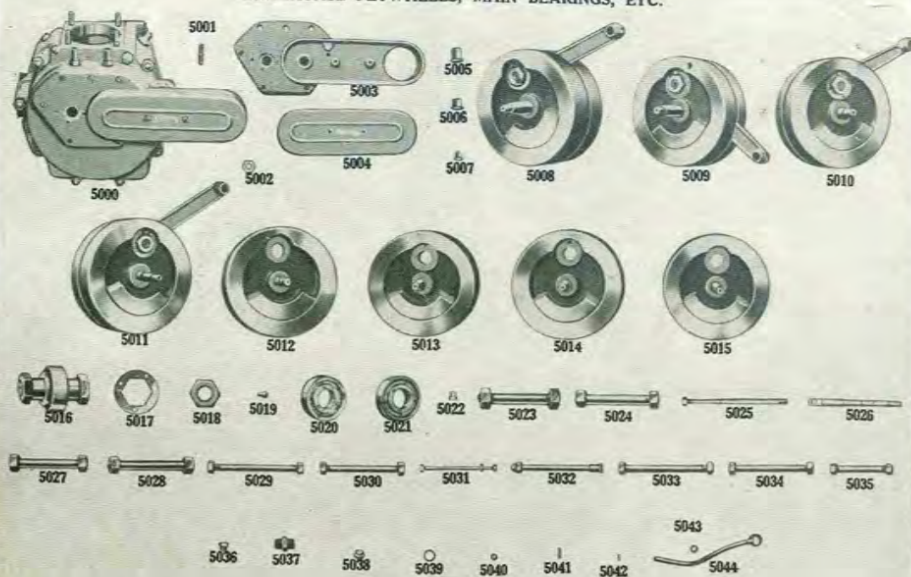


TIMING GEAR AND TAPPET PARTS, ETC.

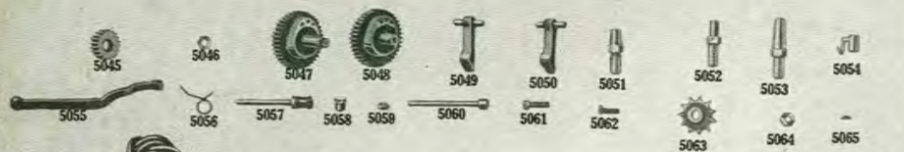

MAGNETO AND MAGNETO DRIVING PARTS.

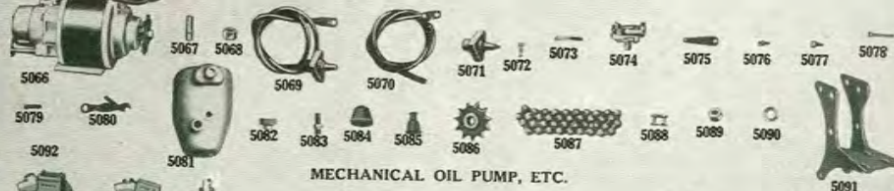

MECHANICAL OIL PUMP, ETC.

 

CYLINDERS, VALVES, ETC.



Part No.

TIMING GEAR & TAPPET PARTS, Etc.

Part No.	Description	For all Models	£	s.	d.
5045	Half Time Pinion	For all Models	0	3	9
5046	Half Time Pinion Lock Nut	For all Models	0	0	4
5047	Exhaust Cam Wheel	For all Models	0	17	6
5048	Inlet Cam Wheel	For all Models	0	17	6
5049	Inlet Rocker Arm (Crankcase)	For all Models	0	4	6
5050	Exhaust Rocker Arm (Crankcase)	For all Models	0	4	6
5051	Tappet Guide Inlet	For all Models	0	2	6
5052	Tappet Guide Exhaust	For all Models	0	2	6
5053	Tappet Guide Inlet or Exhaust	For all Models	0	2	6
5054	Valve Lifter Sleeve	For all Models	0	2	0
5055	Valve Lifter Lever	For all Models	0	3	0
5056	Valve Lifter Lever Return Spring	For all Models	0	0	6
5057	Tappet Adjustable Inlet or Exhaust	For all Models	0	3	6
5058	Tappet Head Inlet or Exhaust	For all Models	0	1	0
5059	Tappet Head Lock Nut, Inlet or Exhaust	For all Models	0	0	3
5060	Tappet Inlet or Exhaust	For all Models	0	2	6
5061	Timing Gear Cover Screw (cheese head)	For all Models	0	0	3
5062	Timing Gear Cover Screw, countersunk (Inside Panel Cover)	For all Models	0	0	3
5063	Camshaft Sprocket	For all Models	0	4	3
5064	Camshaft Sprocket Locking Nut	For all Models	0	0	4
5065	Camshaft Sprocket Key	For all Models	0	0	1


MAGNETO & MAGNETO DRIVING PARTS.

5066	Magneto complete with Base Plate ML CMAK (Norton Type)	For all Models	4	15	0
5067	Magneto Base Studs	For all Models each	0	1	0
5068	Magneto Base Stud Nuts	For all Models each	0	0	3
5069	High Tension Cable, complete with Brush Holder, Brush and Spring	For all Models	0	5	0
5070	High Tension Cable only	For all Models	0	1	0
5071	Carbon Brush Holder with Brush and Spring	For all Models	0	4	0
5072	Carbon Brush Holder Retaining Screws	For all Models each	0	0	1
5073	Carbon Brush with Spring	For all Models	0	0	8
5074	Contact Breaker complete	For all Models	1	0	0
5075	Flat Spring with Contact Point	For all Models	0	5	6
5076	Adjustable Screw with Contact Point	For all Models	0	5	6
5077	Contact Breaker Spring Securing Screw	For all Models	0	0	3
5078	Contact Breaker Locking Screw (for Spindle)	For all Models	0	0	6
5079	Contact Breaker Tappet	For all Models	0	0	10
5080	Magneto Spanner	For all Models	0	0	6
5081	Magneto Shield	For all Models	0	10	6
5082	Magneto Shield Fixing Knurled Nut	For all Models	0	0	9
5083	Magneto Stud (for fixing Shield)	For all Models	0	0	6
5084	High Tension Cable Rubber Cap	For all Models	0	0	6
5085	Control Cable Rubber Cap	For all Models	0	0	6
5086	Magneto Sprocket	For all Models	0	4	3
5087	Magneto or Magdyno Chain	For all Models	0	2	9
5088	Magneto or Magdyno Chain Spring Link	For all Models	0	0	11
5089	Magneto Sprocket Securing Nut	For all Models	0	0	4
5090	Magneto Sprocket Securing Nut Washer	For all Models	0	0	1
5091	Magneto or Magdyno Platform and combined Engine Plates	For all Models	0	11	9

MECHANICAL OIL PUMP, WITH SIGHT FEED.

5092	Mechanical Oil Pump, complete, less Pipe	For all Models	0	19	0
5093	Mechanical Oil Pump Body only	For all Models	0	8	10
5094	Plunger, with Cam Block	For all Models	0	6	7
5095	Driving Worm	For all Models	0	2	9
5096	Driving Worm Bush	For all Models	0	2	3
5097	Gear Wheel	For all Models	0	2	3
5098	Sight Feed Celluloid Disc	For all Models	0	0	5
5099	Sight Feed Celluloid Disc Frame	For all Models	0	0	7

For CS1, ES2, CJ and JE Models, see separate lists.

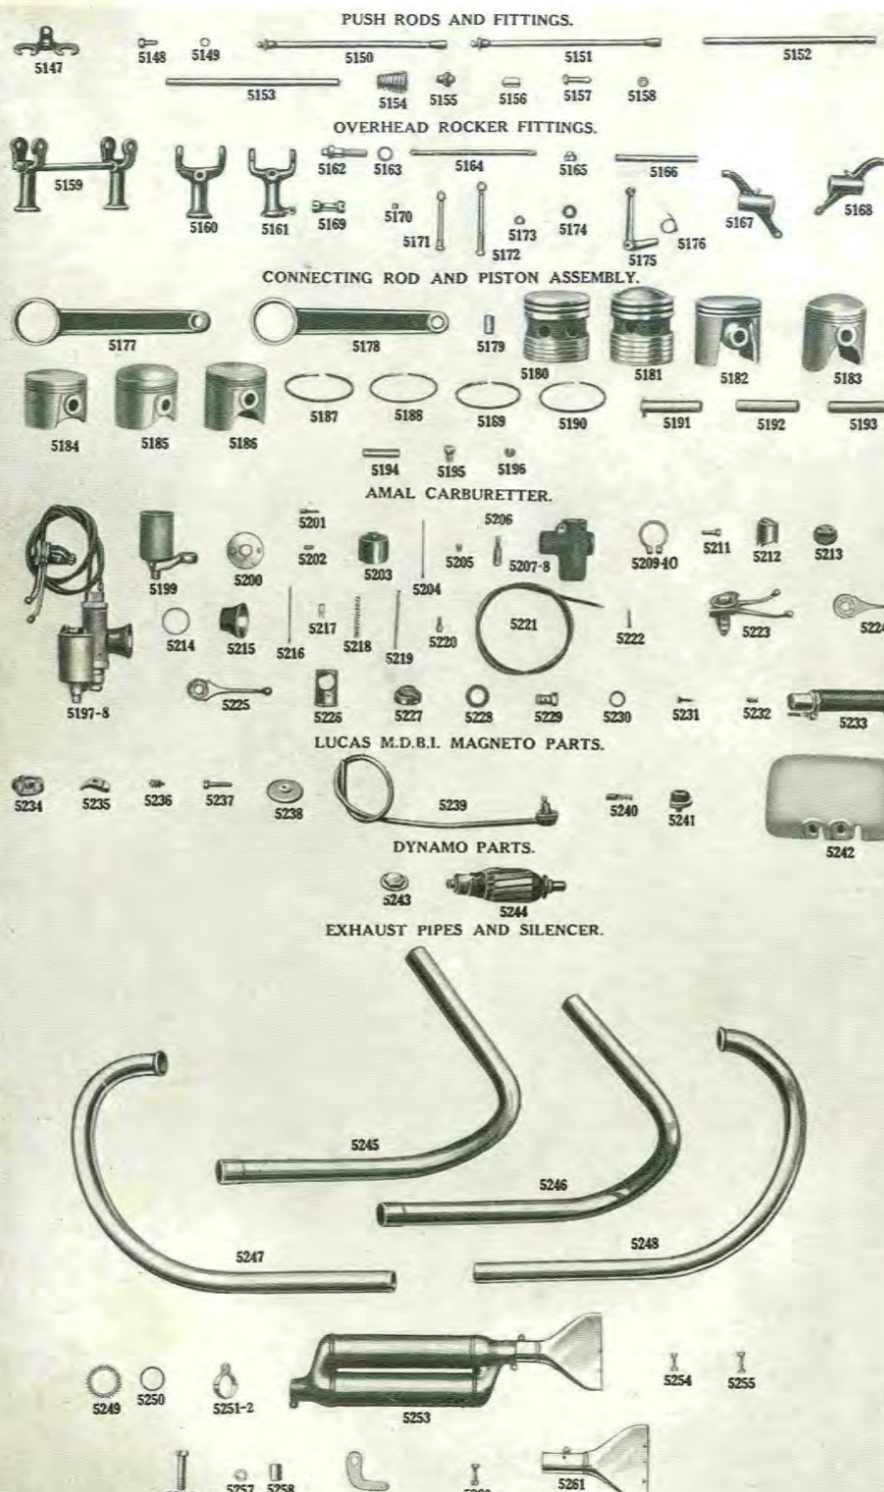

Part No.	MECHANICAL OIL PUMP, WITH SIGHT FEED.—continued.			£	s.	d.
5100	Sight Feed Celluloid Disc Frame Pins	...	For all Models	0	0	1
5101	Top Plug Screw, with Fibre Washer	...	For all Models	0	0	4
5102	Bottom Plug Screw, with Fibre Washer	...	For all Models	0	0	4
5103	Oil Feed Regulator Dial	...	For all Models	0	1	8
5104	Oil Feed Control Bar	...	For all Models	0	1	2
5105	Oil Feed Control Bar Cotter	...	For all Models	0	0	1
5106	Oil Feed Control Bar Pin	...	For all Models	0	0	1
5107	Oil Feed Control Bar Spring and Pin	...	For all Models	0	0	3
5108	Plunger Leather Washer	...	For all Models	0	0	3
5109	Pump Attachment Pin (long)	...	For all Models	0	0	4
5110	Pump Attachment Pin (short)	...	For all Models	0	0	4
5111	Pump Attachment Pin Nuts	...	For all Models each	0	0	1
5112	Pump Body Fibre Packing Washer	...	For all Models	0	1	0

CYLINDER, VALVES, ETC.

		For Models	£	s.	d.
5113	Cylinder with Valve Guides ...	1 & 14	4	12	6
5114	Cylinder with Valve Guides ...	2 & 16H	4	10	0
5115	Cylinder Barrel only ...	18 & 21	2	10	0
5116	Cylinder Barrel only ...	19 & 24	2	15	0
5117	Cylinder Head with Valve Guides ...	18 & 21	3	10	0
5118	Cylinder Head with Valve Guides ...	19 & 24	3	10	0
5119	Valve Guide (Inlet or Exhaust) ...	2 & 16H	0	3	3
5120	Valve Guide (Inlet or Exhaust) ...	1 & 14	0	3	3
5121	Valve Guide (Inlet or Exhaust) ...	18, 19, 21 & 24	0	3	3
5122	Valve only (Inlet or Exhaust) ...	2 & 16H	0	6	0
5123	Valve only (Inlet or Exhaust) ...	1 & 14	0	6	0
5124	Valve only (Inlet or Exhaust) ...	18, 19, 21 & 24	0	6	0
5125	Valve Spring (Inlet or Exhaust) ...	1, 2, 14 & 16H	0	0	6
5126	Valve Spring, small inner (Inlet or Exhaust) ...	18, 19, 21 & 24	0	0	6
5127	Valve Spring Outer (Inlet or Exhaust) ...	18, 19, 21 & 24	0	1	0
5128	Valve Spring Cup Bottom ...	1 & 14	0	1	0
5129	Valve Spring Collar Top ...	1 & 14	0	0	6
5130	Valve Spring Cup Bottom ...	2 & 16H	0	1	0
5131	Valve Spring Collar Top ...	18, 19, 21 & 24	0	2	9
5132	Valve Spring Star Washer ...	18, 19, 21 & 24	0	0	6
5133	Valve Cotter ...	1 & 14	0	0	1
5134	Valve Split Cotter ...	2, 16H, 18, 19, 21 & 24 per valve	0	0	6
5135	Valve Cap (Inlet) ...	1, 2, 14 & 16H	0	4	6
5136	Valve Cap (Exhaust) ...	1, 2, 14 & 16H	0	4	6
5137	Valve Cap Copper Asbestos Washer ...	1, 2, 14 & 16H	0	0	3
5138	Compression Tap ...	1, 2, 14 & 16H	0	2	6
5139	Compression Plug ...	18, 19, 21 & 24	0	2	9
5140	Compression Plug, Copper Asbestos Washer ...	18, 19, 21 & 24	0	0	3
5141	Carburetter Adaptor, 1 1/4" dia. ...	1, 2, 14 & 16H	0	3	0
5142	Carburetter Adaptor, 1 1/4" dia. ...	18, 19, 21 & 24	0	3	6
5143	Cylinder Head Holding Down Stud ...	(State Model when ordering)	0	0	6
5144	Cylinder Head Holding Down Stud Sleeve Nut ...	18 & 21	0	1	0
5145	Cylinder Head Holding Down Stud Sleeve Nut ...	19 & 24	0	1	0
5146	Cylinder Base Paper Washers (Crankcase Joint) ...	For all Models each	0	0	3

PUSH RODS & FITTINGS.

		For Models	£	s.	d.
5147	Push Rod Return Spring Stop ...	18, 19, 21 & 24	0	6	0
5148	Push Rod Return Spring Stop Fixing Screw ...	18, 19, 21 & 24	0	0	2
5149	Push Rod Return Spring Stop Fixing Screw Washers ...	18, 19, 21 & 24	0	0	1
5150	Push Rod complete with Ends (Inlet or Exhaust) ...	18 & 21	0	7	6
5151	Push Rod complete with Ends (Inlet or Exhaust) ...	19 & 24	0	7	6
5152	Push Rod Tube only ...	18 & 21	0	2	9
5153	Push Rod Tube only ...	19 & 24	0	2	9
5154	Push Rod Return Spring (Inlet or Exhaust) ...	18, 19, 21 & 24	0	0	9
5155	Push Rod Bottom ...	18, 19, 21 & 24	0	2	6
5156	Push Rod Top ...	18, 19, 21 & 24	0	2	0
5157	Rocker Adjusting Screw with Lock Nut ...	18, 19, 21 & 24	0	2	0
5158	Rocket Adjusting Screw Lock Nut ...	18, 19, 21 & 24	0	0	4

For CS1, ES2, CJ and JE Models, see separate lists

OVERHEAD ROCKER FITTINGS.

Part No.			£	s.	d.
5159	Rocker Carrier Standards complete with Tie Rod, Distance Tube and Nuts	For Models 18, 19, 21 & 24	1	13	0
5160	Rocker Carrier Standard (Inlet)	18, 19, 21 & 24	0	15	0
5161	Rocker Carrier Standard (Exhaust)	18, 19, 21 & 24	0	16	0
5162	Rocker Carrier Standard Holding Down Bolt (Inlet or Exhaust)	18, 19, 21 & 24	0	2	3
5163	Spring Washer for above	...	0	0	2
5164	Rocker Carrier Standard Tie Rod	18, 19, 21 & 24	0	1	3
5165	Nut for above	...	0	0	2
5166	Distance Piece for above	...	0	0	9
5167	Rocker Overhead Inlet	18, 19, 21 & 24	0	13	0
5168	Rocker Overhead Exhaust	18, 19, 21 & 24	0	13	0
5169	Rocker Overhead Roller Cage	18, 19, 21 & 24	0	8	6
5170	Rocker Overhead Rollers (12 for one Rocker)	18, 19, 21 & 24 doz.	0	2	6
5171	Rocker Overhead Bearing Bolt with Nut (Inlet)	18, 19, 21 & 24	0	3	0
5172	Rocker Overhead Bearing Bolt with Nut (Exhaust)	18, 19, 21 & 24	0	4	6
5173	Rocker Overhead Bearing Bolt Nut, Inlet or Exhaust	18, 19, 21 & 24	0	0	2
5174	Rocker Overhead Roller Retaining Washer	18, 19, 21 & 24	0	0	5
5175	Exhaust Valve Lifter Arm	18, 19, 21 & 24	0	4	9
5176	Exhaust Valve Lifter Arm Return Spring	18, 19, 21 & 24	0	1	3

CONNECTING ROD AND PISTON ASSEMBLY.

5177	Connecting Rod with Small End Bush	For Models 1, 2, 14, 16H, 19 & 24	1	2	0
5178	Connecting Rod with Small End Bush	18 & 21	1	2	0
5179	Connecting Rod, Small End Bush	For all Models	0	3	6
5180	Piston	For Models 1 & 14	0	17	6
5181	Piston	2 & 16H	0	16	0
5182	Piston (Aluminium) 82 m/m	1 & 14	1	9	0
5183	Piston (Aluminium) 79 m/m	2 & 16H	1	7	6
5184	Piston (Aluminium) 79 m/m	18 & 21	1	7	6
5185	Piston (Aluminium) 79 m/m (High Compression)	18 & 21	1	12	6
5186	Piston (Aluminium)	19 & 24	1	7	6
5187	Piston Ring 82 m/m	1 & 14	0	1	8
5188	Piston Ring 82 m/m (Aluminium Piston)	1 & 14	0	1	8
5189	Piston Ring 79 m/m	2 & 16H	0	1	6
5190	Piston Ring 79 m/m (Aluminium Piston) Standard or High Compression	18, 19, 21, 24, 2 & 16H	0	1	6
5191	Gudgeon Pin with Key and Cotter	1, 2, 14 & 16H	0	3	0
5192	Gudgeon Pin with Buttons (for Aluminium Piston)	2, 16H, 18, 19, 21 & 24	0	4	0
5193	Gudgeon Pin with Buttons (for Aluminium Piston)	1 & 14	0	4	0
5194	Gudgeon Pin (Circlip Fixing type) where fitted	...	0	4	6
5195	Gudgeon Pin, Aluminium Button	...	0	0	6
5196	Gudgeon Pin Circlip, where fitted	...	0	0	3

AMAL CARBURETTER.

5197	AMAL Norton Variable Jet Carburetter 1½" In-duction complete	For Models 1, 2, 14, 16H	3	1	0
5198	AMAL Norton Variable Jet Carburetter 1½" In-duction complete	18, 19, 21 & 24	3	1	0
5199	Float Chamber Body	For all Models	0	15	0
5200	Float Chamber Cap, with Tickler	For all Models	0	4	3
5201	Tickler Plunger	For all Models	0	0	7
5202	Plunger Spring and Cotter	For all Models	0	0	3
5203	Float	For all Models	0	3	6
5204	Float Needle	For all Models	0	2	6
5205	Jet	For all Models	0	0	7
5206	Jet Holder	For all Models	0	1	9
5207	Spraying Chamber Body, 1½" Induction	For Models 1, 2, 14 & 16H	0	8	6
5208	Spraying Chamber Body, 1½" Induction	18, 19, 21 & 24	0	8	6

For CS1, ES2, CJ and JE Models, see separate lists.

AMAL CARBURETTER.—continued.

Part No.			£	s.	d.
5209	Spraying Chamber Clip Ring, 1½" Induction	1, 2, 14 & 16H	0	1	8
5210	Spraying Chamber Clip Ring, 1½" Induction	18, 19, 21 & 24	0	1	8
5211	Spraying Chamber Clip Ring Pin	For all Models	0	0	6
5212	Spraying Chamber Slides (per pair)	For all Models	0	6	10
5213	Spraying Chamber Cap	For all Models	0	3	0
5214	Spraying Chamber Cap Ring	For all Models	0	1	9
5215	Extension Pipe (Air)	For all Models	0	2	1
5216	Jet Taper Needle	For all Models	0	1	4
5217	Jet Taper Needle Fixing Clip	For all Models	0	0	3
5218	Valve Spring for Air Slide	For all Models	0	0	6
5219	Valve Spring for Throttle Slide	For all Models	0	0	6
5220	Cable Adjuster	For all Models	0	0	4
5221	Cable complete (air or throttle)	For all Models	0	2	3
5222	Cable Stop (throttle slide)	For all Models	0	0	6
5223	Controls (Two Lever) complete	For all Models	0	12	0
5224	Air Control Lever	For all Models	0	3	5
5225	Throttle Control Lever	For all Models	0	3	5
5226	Jet Block and Barrel	For all Models	0	5	0
5227	Mixing Chamber Union Nut	For all Models	0	1	6
5228	Mixing Chamber Union Nut Fibre Washer	For all Models	0	0	2
5229	Spraying Chamber Holding Bolt	For all Models	0	0	6
5230	Spraying Chamber Holding Bolt Fibre Washer	For all Models	0	0	2
5231	Pilot Jet Adjusting Screw	For all Models	0	0	7
5232	Pilot Jet Adjusting Screw Spring	For all Models	0	0	2
5233	Twist Grip Control, complete with Cable	For all Models	0	13	9

LUCAS M.D.B.I. MAGDYNO PARTS.

5234	Contact Breaker, complete	...	1	5	0
5235	Bell Crank Lever with Platinum Screw	...	0	7	6
5236	Long Platinum Screw with Lock Nut	...	0	6	0
5237	Contact Breaker Centre Screw	...	0	0	6
5238	Contact Breaker Cover	...	0	0	4
5239	H.T. Cable complete with Brush Holder, brush and Spring	...	0	4	0
5240	H.T. Carbon Brush with Spring	...	0	0	8
5241	H.T. Carbon Brush Holder	...	0	2	4
5242	Magdyno Shield	...	0	10	6

DYNAMO PORTION.


5243	End Cover Nut and Washer	...	0	0	10
5244	Dynamo Armature, complete	...	1	4	9

EXHAUST PIPES & SILENCER.

5245	Exhaust Pipe only	For Models 2 & 16H	0	12	6
5246	Exhaust Pipe only	1 & 14	0	12	6
5247	Exhaust Pipe only	18 & 21	0	12	6
5248	Exhaust Pipe only	19 & 24	0	12	6
5249	Exhaust Pipe Flange Locking Nut (Cylinder Head)	18, 19, 21 & 24	0	4	0
5250	Exhaust Pipe Flange Washer (Cylinder Head)	18, 19, 21 & 24	0	0	3
5251	Exhaust Pipe Clip (for Crankcase Bolt Attachment)	18, 19, 21 & 24	0	1	3
5252	Exhaust Pipe Clip (for Crankcase Bolt Attachment)	1, 2, 14 & 16H	0	1	3
5253	Silencer Double Chambered type complete with Fish Tail	For all Models	2	2	0
5254	Silencer Pin and Nut (for Exhaust Pipe attachment)	For all Models	0	0	9
5255	Silencer Pin and Nut (for Fish Tail attachment)	For all Models	0	0	9
5256	Fork End Lug Bolt	For all Models	0	1	6
5257	Fork End Lug Bolt Nut	For all Models	0	0	3
5258	Fork End Lug Bolt Distance Piece	For all Models	0	0	3
5259	Silencer Rear Attachment Arm	For all Models	0	1	6
5260	Silencer Rear Attachment Arm Pin and Nut	For all Models	0	0	3
5261	Fish Tail	For all Models	0	3	9

For CS1, ES2, CJ and JE Models, see separate lists.

NORTON DRUID FORKS AND STEERING DAMPER.

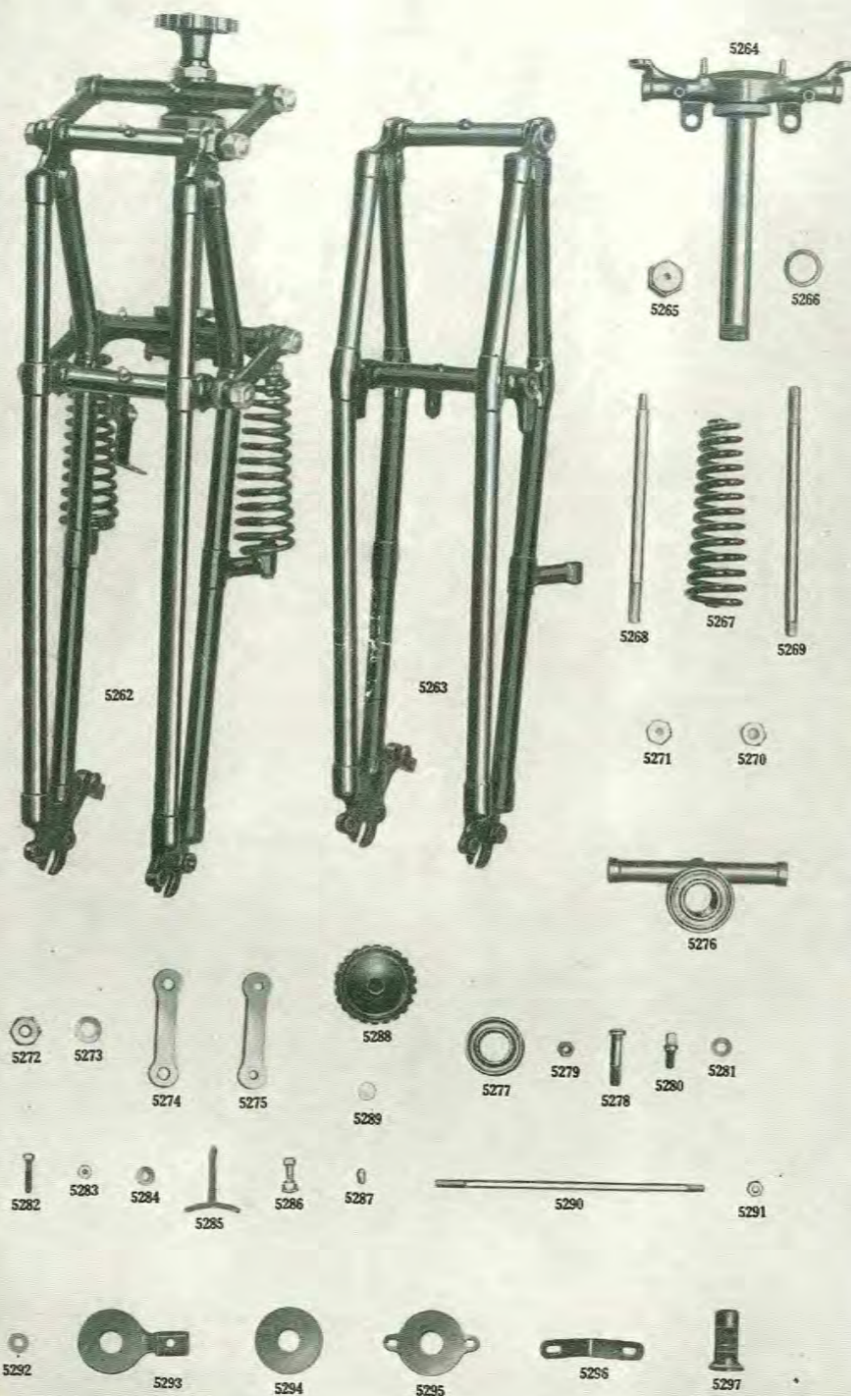


NORTON DRUID FORKS AND STEERING DAMPER.

Part No.	For Models	£	s.	d.
5262	Norton Druid Forks complete, round section with ball race and Steering Damper 1, 2, 16H, 14 & 24 and where fitted	4	17	6
5263	Front Fork Girder 1, 2, 16H, 14 & 24	3	12	0
5264	Front Fork Steering Crown and Column 1, 2, 16H, 14 & 24	0	16	0
5265	Front Fork Steering Crown and Column Lock Nut... 1, 2, 16H, 14 & 24	0	1	0
5266	Front Fork Steering Crown and Column Lock Nut distance piece	0	0	4
5267	Front Fork Spring 1, 2, 16H, 14 & 24	0	4	9
5268	Front Fork Spindle only top 1, 2, 16H, 14 & 24	0	3	6
5269	Front Fork Spindle only, bottom 1, 2, 16H, 14 & 24	0	3	6
5270	Front Fork Spindle Nut, Left Hand 1, 2, 16H, 14 & 24	0	0	3
5271	Front Fork Spindle Nut, Right Hand 1, 2, 16H, 14 & 24	0	0	3
5272	Front Fork Adjusting Nuts (each) 1, 2, 16H, 14 & 24	0	0	3
5273	Front Fork Spindle plain washer 1, 2, 16H, 14 & 24	0	0	1
5274	Front Fork Link, Top (state whether L. or R. hand) 1, 2, 16H, 14 & 24	0	1	9
5275	Front Fork Link, Bottom (state whether L. or R. hand) 1, 2, 16H, 14 & 24	0	1	9
5276	Front Fork Ball Head Clip 1, 2, 16H, 14 & 24	0	12	0
5277	Front Fork Ball Race 1, 2, 16H, 14 & 24	0	1	6
5278	Front Fork Ball Head Clip Bolt 1, 2, 16H, 14 & 24	0	0	6
5279	Front Fork Ball Head Clip Bolt Nut 1, 2, 16H, 14 & 24	0	0	2
5280	Front Fork Spring Attachment Bolt, Top 1, 2, 16H, 14 & 24	0	0	8
5281	Front Fork Spring Attachment Bolt, Top, Washer... 1, 2, 16H, 14 & 24	0	0	2
5282	Front Fork Spring Attachment Bolt, Bottom 1, 2, 16H, 14 & 24	0	0	8
5283	Front Fork Spring Attachment Bolt Nut, Bottom ... 1, 2, 16H, 14 & 24	0	0	2
5284	Front Fork Spring Attachment Bolt, Washer, Bottom 1, 2, 16H, 14 & 24	9	0	2
5285	Front Fork Mudguard Attachment Plate 1, 2, 16H, 14 & 24	0	1	9
5286	Front Fork Mudguard Attachment Plate Fixing Bolt, Nut and Cotter 1, 2, 16H, 14 & 24	0	0	5
5287	Front Fork Greasers (each) 1, 2, 16H, 14 & 24	0	0	7
5288	Front Fork Steering Damper Adjuster Wheel 1, 2, 16H, 14 & 24	0	3	0
5289	Front Fork Steering Damper Adjuster Wheel, Aluminium Cap 1, 2, 16H, 14 & 24	0	0	3
5290	Front Fork Steering Damper Rod 1, 2, 16H, 14 & 24	0	1	1
5291	Front Fork Steering Damper Rod Nut 1, 2, 16H, 14 & 24	0	0	2
5292	Front Fork Steering Damper Rod Washer 1, 2, 16H, 14 & 24	0	0	1
5293	Front Fork Steering Damper Anchor Bracket 1, 2, 16H, 14, & 24	0	1	0
5294	Front Fork Steering Damper Friction Plate... .. 1, 2, 16H, 14 & 24	0	2	3
5295	Front Fork Steering Damper Bottom Plate 1, 2, 16H, 14 & 24	0	1	8
5296	Front Fork Steering Damper Anchor Plate, Frame Attachment Plate 1, 2, 16H, 14 & 24	0	1	0
5297	Front Fork Steering Damper Anchor Bracket Lug (For centre rod) 1, 2, 16H, 14 & 24	0	2	6

NORTON WEBB FORKS AND STEERING DAMPER.

	For Models where fitted.	£	s.	d.
5298	Norton-Webb Forks, complete with Steering Damper 18, 19 & 21	6	7	6
5299	Front Fork Girder 18, 19 & 21	4	10	0
5300	Front Fork Steering Crown and Column 18, 19 & 21	0	17	0
5301	Front Fork Steering Crown and Column Ball Race ... 18, 19 & 21	0	1	6
5302	Front Fork Top Clip 18, 19 & 21	0	12	0
5303	Front Fork Top Clip Ball Race 18, 19 & 21	0	1	6
5304	Front Fork Top Clip Bolt and Nut 18, 19 & 21	0	1	2
5305	Front Fork Spring 18, 19 & 21	0	8	6
5306	Front Fork Spring Lug 18, 19 & 21	0	2	0
5307	Front Fork Spring Attachment Pin 18, 19 & 21	0	0	7
5308	Front Fork Top Spindle 18, 19 & 21	0	1	8
5309	Front Fork Top Spindle Spring Washer 18, 19 & 21	0	0	2
5310	Front Fork Top Spindle Nut (Left Hand) 18, 19 & 21	0	0	7
5311	Front Fork Top Spindle Nut (Right hand) 18, 19 & 21	0	0	7
5312	Front Fork Top Spindle Washer 18, 19 & 21	0	0	3
5313	Front Fork Bottom Spindle 18, 19 & 21	0	2	3
5314	Front Fork Bottom Spindle Nut (Left hand) 18, 19 & 21	0	0	7
5315	Front Fork Bottom Spindle Nut (Right hand) 18, 19 & 21	0	0	7
5316	Front Fork Bottom Spindle Washer 18, 19 & 21	0	0	3

For CS1, ES2, CJ and JE Models, see separate lists.

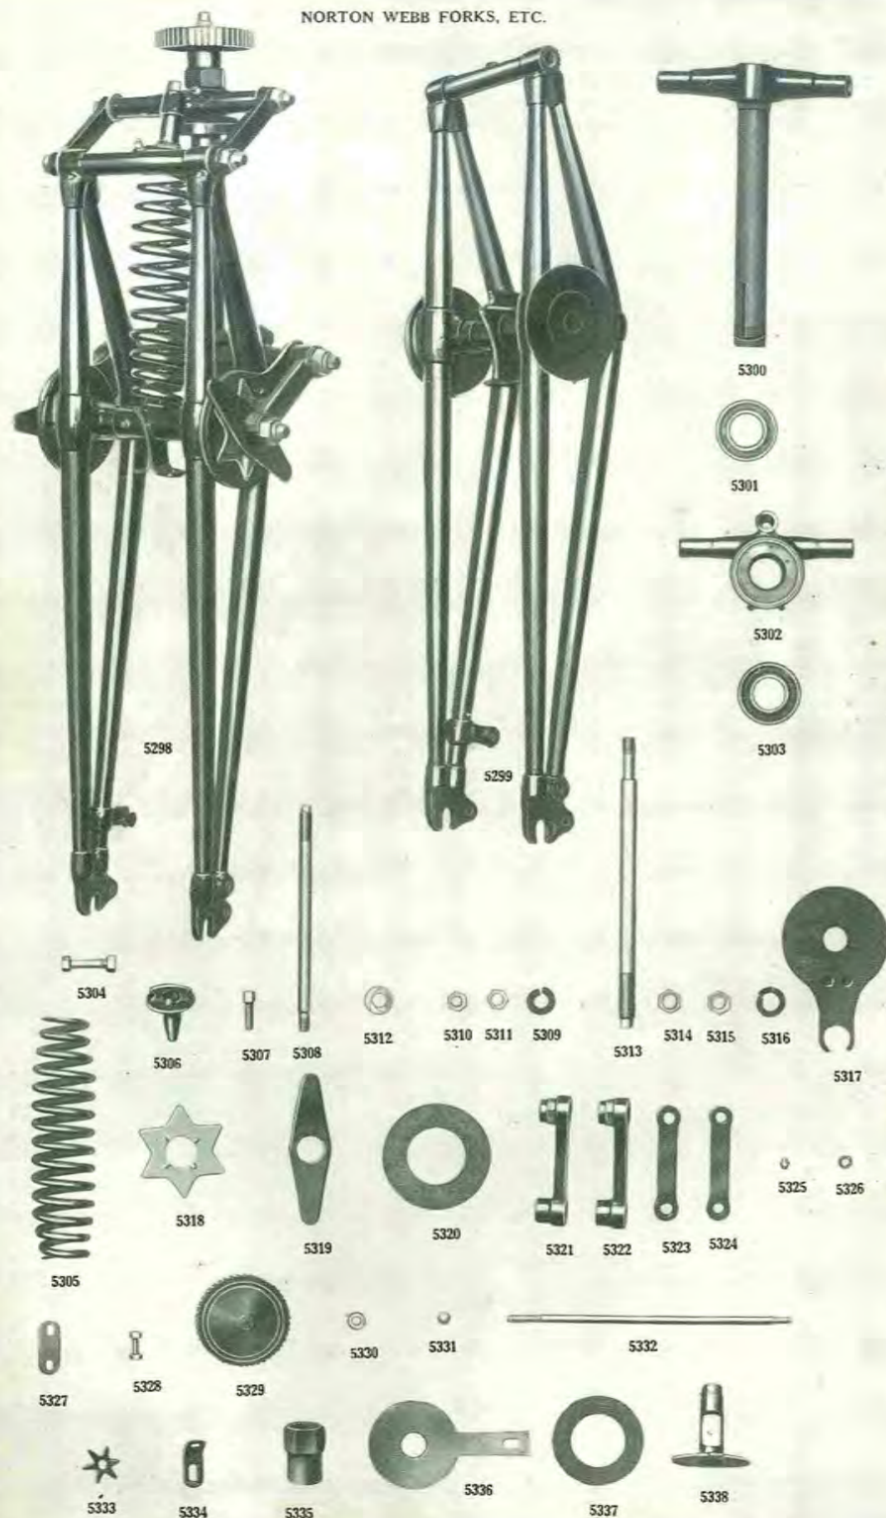

NORTON WEBB FORKS & STEERING DAMPER.—continued.

Part No.		For Models where fitted	£	s.	d.
5317	Front Fork Carrier Plate	18, 19 & 21	0	2	6
5318	Front Fork Star Washer	18, 19 & 21	0	1	8
5319	Front Fork Shock Absorber Hand Adjuster	18, 19 & 21	0	3	9
5320	Front Fork Shock Absorber Friction Disc	18, 19 & 21	0	1	11
5321	Front Fork Bottom Link (Left hand)	18, 19 & 21	0	4	8
5322	Front Fork Bottom Link (Right hand)	18, 19 & 21	0	4	8
5323	Front Fork Top Link (Left hand)	18, 19 & 21	0	2	9
5324	Front Fork Top Link (Right hand)	18, 19 & 21	0	2	9
5325	Front Fork Grease Nipple	18, 19 & 21	0	0	7
5326	Front Fork Spring Washer for Spring Lug Bolt	18, 19 & 21	0	0	3
5327	Front Fork Mudguard Bracket Plate	18, 19 & 21	0	0	7
5328	Front Fork Mudguard Bracket Plate Bolt with Nut	18, 19 & 21	0	0	9
5329	Front Fork Steering Damper Adjuster Wheel	18, 19 & 21	0	3	0
5330	Front Fork Steering Damper Adjuster Wheel Washer	18, 19 & 21	0	0	2
5331	Front Fork Steering Damper Adjuster Wheel Lock Nut	18, 19 & 21	0	0	2
5332	Front Fork Steering Damper Rod	18, 19 & 21	0	1	1
5333	Front Fork Steering Damper Star Washer	18, 19 & 21	0	0	7
5334	Front Fork Steering Damper Anchor Bracket	18, 19 & 21	0	1	0
5335	Front Fork Steering Column Lock Nut	18, 19 & 21	0	1	5
5336	Front Fork Steering Damper Friction Plate	18, 19 & 21	0	2	3
5337	Front Fork Steering Damper Friction Plate Disc	18, 19 & 21	0	1	11
5338	Front Fork Steering Damper Bottom Plate	18, 19 & 21	0	1	8

HANDLEBARS & FITTINGS.


5339	Handlebar Bend only, T.T. Adjustable	For all Models	0	18	0
5440	Handlebar Bend only, Semi-T.T., adjustable	For all Models	0	18	0
5341	Handlebar Grips (per pair)	For all Models	0	4	6
5342	Handlebar Attachment Clips with pins for use with Norton-Druid Forks	For all Models (pair)	0	7	6
5343	Half Clip for above	For all Models	0	3	9
5344	Handlebar Attachment Clips with Pins for use with Norton-Webb Forks	For all Models (pair)	0	7	6
5345	Front Brake or Exhaust Valve Lifter Control, Lever, complete	For all Models	0	5	0
5346	Front Brake or Exhaust Valve Lifter Control Lever only	For all Models	0	2	6
5347	Front Brake or Exhaust Valve Lifter Control Lever body	For all Models	0	2	6
5348	Front Brake or Exhaust Valve Lifter Control Lever Fulcrum Pin and Nut	For all Models	0	0	4
5349	Front Brake Control Cable, Inner and Outer	For all Models	0	4	0
5350	Front Brake Control Cable, Outer	For all Models	0	2	9
5351	Front Brake Control Cable, Inner	For all Models	0	1	3
5352	Front Brake Cable Adjuster	For all Models	0	0	10
5353	Front Brake Cable "U" Clip	For all Models	0	0	3
5354	Front Brake Cable "U" Clip Pin & Split Cotter	For all Models	0	0	1
5355	Exhaust Lifter Cable, Inner and Outer	For all Models	0	3	6
5356	Exhaust Lifter Cable, Outer	For all Models	0	2	6
5357	Exhaust Lifter Cable, Inner	For all Models	0	1	0
5358	Exhaust Lifter Cable, Adjuster	For all Models	0	0	10
5359	Magneto Control Lever, complete	For all Models	0	4	9
5360	Magneto Control Lever only	For all Models	0	2	6
5361	Magneto Control Lever, Body only	For all Models	0	3	0
5362	Magneto Control Lever Cap	For all Models	0	1	3
5363	Magneto Control Lever Cap Spring	For all Models	0	0	1
5364	Magneto Control Lever Clip	For all Models	0	1	6
5365	Magneto Control Lever Clip Pin	For all Models	0	0	1
5366	Magneto Control Cable, Inner and Outer	For all Models	0	3	6
5367	Magneto Control Cable, Outer	For all Models	0	2	6
5368	Magneto Control Cable, Inner	For all Models	0	1	0

PETROL & OIL TANKS.


5369	Petrol Tank only	For all Models	5	5	0
5370	Petrol Tank Filler Cap	For all Models	0	8	6
5371	Petrol Tank Filler Cap Leather Washer	For all Models	0	1	0

For CS1, ES2, CJ and JE Models, see separate lists.

HANDLEBARS AND FITTINGS

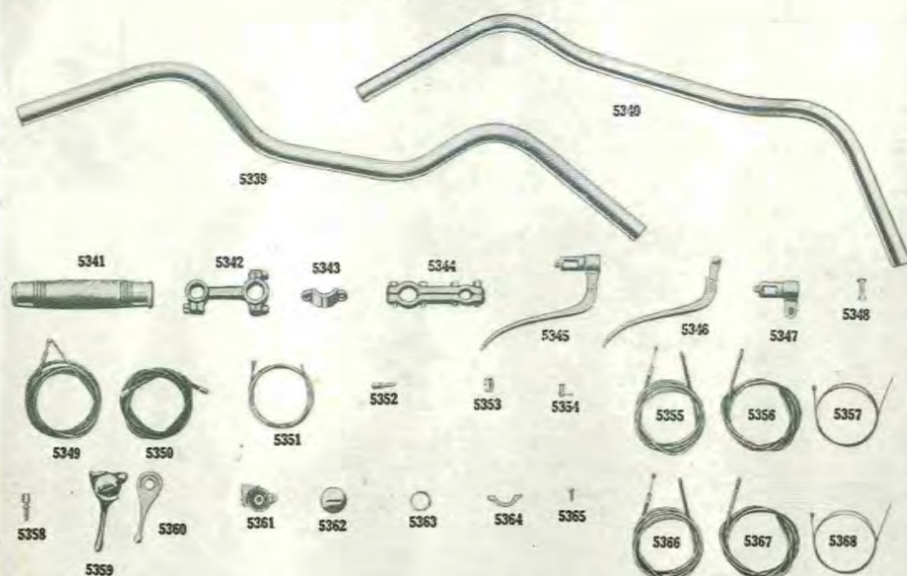

PETROL AND OIL TANKS.

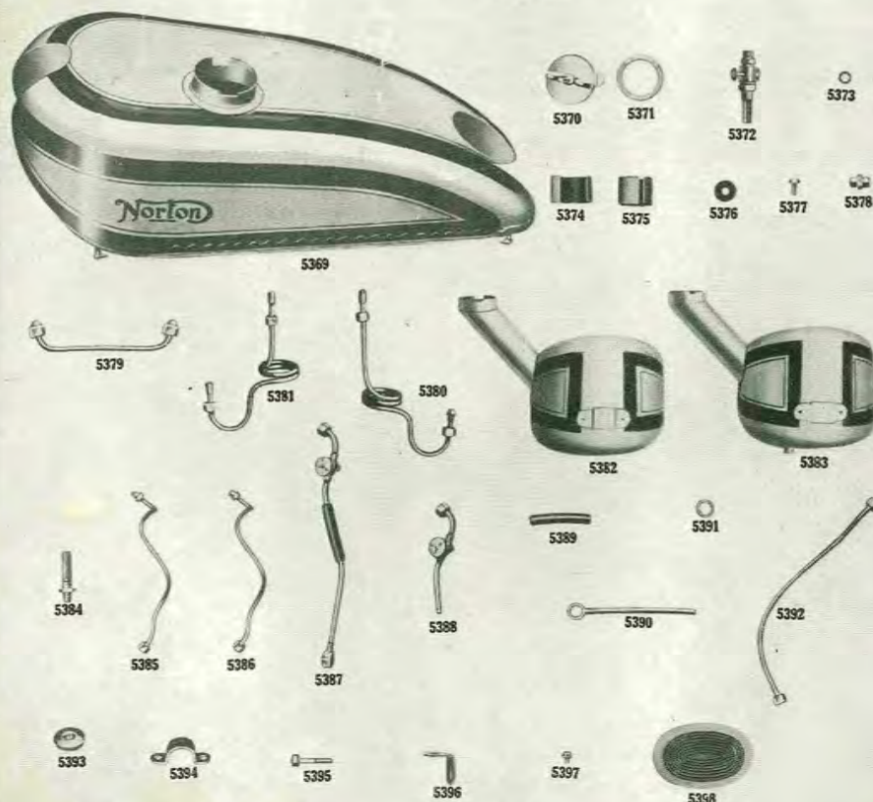

Part No.


PETROL AND OIL TANKS.—continued.

Part No.	Description	For all Models	For Models	For Models	For Models
5372	Petrol Tap	For all Models	0	2	0
5373	Petrol Tap Washer	For all Models	0	0	1
5374	Petrol Tank Packing Rubber Top Tube (thin)	For all Models	0	1	0
5375	Petrol Tank Packing Rubber Top Tube (thick)	For all Models	0	1	3
5376	Petrol Tank Rubber Washers (Platform attach.)	For all Models	each	0	0
5377	Petrol Tank Fixing Pin	For all Models	0	0	4
5378	Petrol Tank Connection Pipe Union	For all Models	0	1	3
5379	Petrol Tank Connection Pipe with Nuts	For all Models	0	2	9
5380	Petrol Feed Pipe, complete with Nuts	For Models 1, 2, 14 & 16H	0	3	3
5381	Petrol Feed Pipe, complete with Nuts	For Models 18, 19, 21 & 24	0	3	3
5382	Oil Tank only	For Models 1, 2, 14, 16H, 18, 19 & 24	1	17	6
5383	Oil Tank only	For Models 21	1	17	6
5384	Oil Tank Filter with Union	For all Models	0	2	3
5385	Oil Delivery Pipe complete	For Models 1, 2, 16H, 18 & 19	0	3	9
5386	Oil Delivery Pipe complete	For Models 14 & 24	0	3	9
5387	Oil Delivery Pipe complete with Regulator	For Model 21	0	8	3
5388	Oil Delivery Regulator	For Model 21	0	4	3
5389	Oil Delivery Rubber Connection	For Model 21	0	0	6
5390	Oil Delivery Pipe from Oil Tank to Rubber Connection	For Model 21	0	3	9
5391	Union Nut for above	For Model 21	0	0	6
5392	Oil Return Pipe with Nuts and Union (Crankcase to Oil Box)	For Model 21	0	3	9
5393	Oil Tank Filler Cap	For all Models	0	4	0
5394	Oil Tank Attachment Clip (Seat Tube)	For all Models	0	0	9
5395	Pins for above	For all Models	each	0	0
5396	Oil Tank Top fixing Bracket	For all Models	0	0	6
5397	Pin for above	For all Models	0	0	5
5398	Knee Grips complete (per pair)	For all Models	0	6	6

GEAR BOX.

Part No.	Description	For all Models	For Models	For Models	For Models
5399	Gear Box, complete with all fittings "Sturmey-Archer" Norton Pattern	For Models 1, 2, 16H, 18, 19 & 21	11	5	0
5400	Gear Box Casing	For Models 1, 2, 16H, 18, 19, & 21	3	9	3
	Gear Box End Cover (supplied only with casing)	For Models 1, 2, 16H, 18, 19 & 21	0	0	10
5401	Gear Box Oil Plug	For Models 1, 2, 16H, 18, 19 & 21	0	14	10
5402	Gear Box Main Axle	For Models 1, 2, 16H, 18, 19 & 21	0	11	6
5403	Gear Box Kick-starter Wheel	For Models 1, 2, 16H, 18, 19 & 21	0	9	4
5404	Gear Box Kick-starter Axle	For Models 1, 2, 16H, 18, 19 & 21	0	1	4
5405	Gear Box Kick-starter Pawl	For Models 1, 2, 16H, 18, 19 & 21	0	0	4
5406	Gear Box Kick-starter Pawl Pin	For Models 1, 2, 16H, 18, 19 & 21	0	0	4
5407	Gear Box Kick-starter Pawl Plunger	For Models 1, 2, 16H, 18, 19 & 21	0	0	2
5408	Gear Box Kick-starter Pawl Plunger Spring	For Models 1, 2, 16H, 18, 19 & 21	0	5	6
5409	Gear Box Kick-starter Cam Bush	For Models 1, 2, 16H, 18, 19 & 21	0	5	0
5410	Gear Box Kick-starter Inner Bush	For Models 1, 2, 16H, 18, 19 & 21	0	1	4
5411	Gear Box Rocking Shaft	For Models 1, 2, 16H, 18, 19 & 21	0	7	2
5412	Gear Box Sliding Gear Fork	For Models 1, 2, 16H, 18, 19 & 21	0	2	9
5413	Gear Box Sliding Gear Plate	For Models 1, 2, 16H, 18, 19 & 21	0	3	3
5414	Gear Box Rocking Shaft Lever	For Models 1, 2, 16H, 18, 19 & 21	0	0	2
5415	Gear Box Rocking Shaft Lever Washer	For Models 1, 2, 16H, 18, 19 & 21	0	1	1
5416	Gear Box Clutch Control Cable Stop Stud	For Models 1, 2, 16H, 18, 19 & 21	0	13	6
5417	Gear Box Kick-starter Crank	For Models 1, 2, 16H, 18, 19 & 21	0	0	9
5418	Gear Box Kick-starter Crank Cotter, with Nut and Washer	For Models 1, 2, 16H, 18, 19 & 21	0	1	2
5419	Gear Box Kick-starter Return Spring	For Models 1, 2, 16H, 18, 19 & 21	0	1	2
5420	Gear Box Kick-starter Return Spring Cover	For Models 1, 2, 16H, 18, 19 & 21	0	0	8
5421	Gear Box Kick-starter Stop Spring	For Models 1, 2, 16H, 18, 19 & 21	0	0	11
5422	Gear Box Cover Stud, with nut and washer	For Models 1, 2, 16H, 18, 19 & 21	0	0	6
5423	Gear Box Stud	For Models 1, 2, 16H, 18, 19 & 21	0	0	8
5424	Gear Box Stud Nut (Domed)	For Models 1, 2, 16H, 18, 19 & 21	0	11	0
5425	Gear Box Axle Sprocket	For Models 1, 2, 16H, 18, 19 & 31	0	0	10
5426	Gear Box Axle Sprocket Lock Nut	For Models 1, 2, 16H, 18, 19 & 21	0	0	7
5427	Gear Box Axle Sprocket Locking Plate and Pin	For Models 1, 2, 16H, 18, 19 & 21	0	17	6
5428	Gear Box Main Gear Wheel	For Models 1, 2, 16H, 18, 19 & 21	0	5	6
5429	Gear Box Lay Shaft Pinion	For Models 1, 2, 16H, 18, 19 & 21	0	5	6

For CS1, ES2, CJ and JE Models, see separate lists.

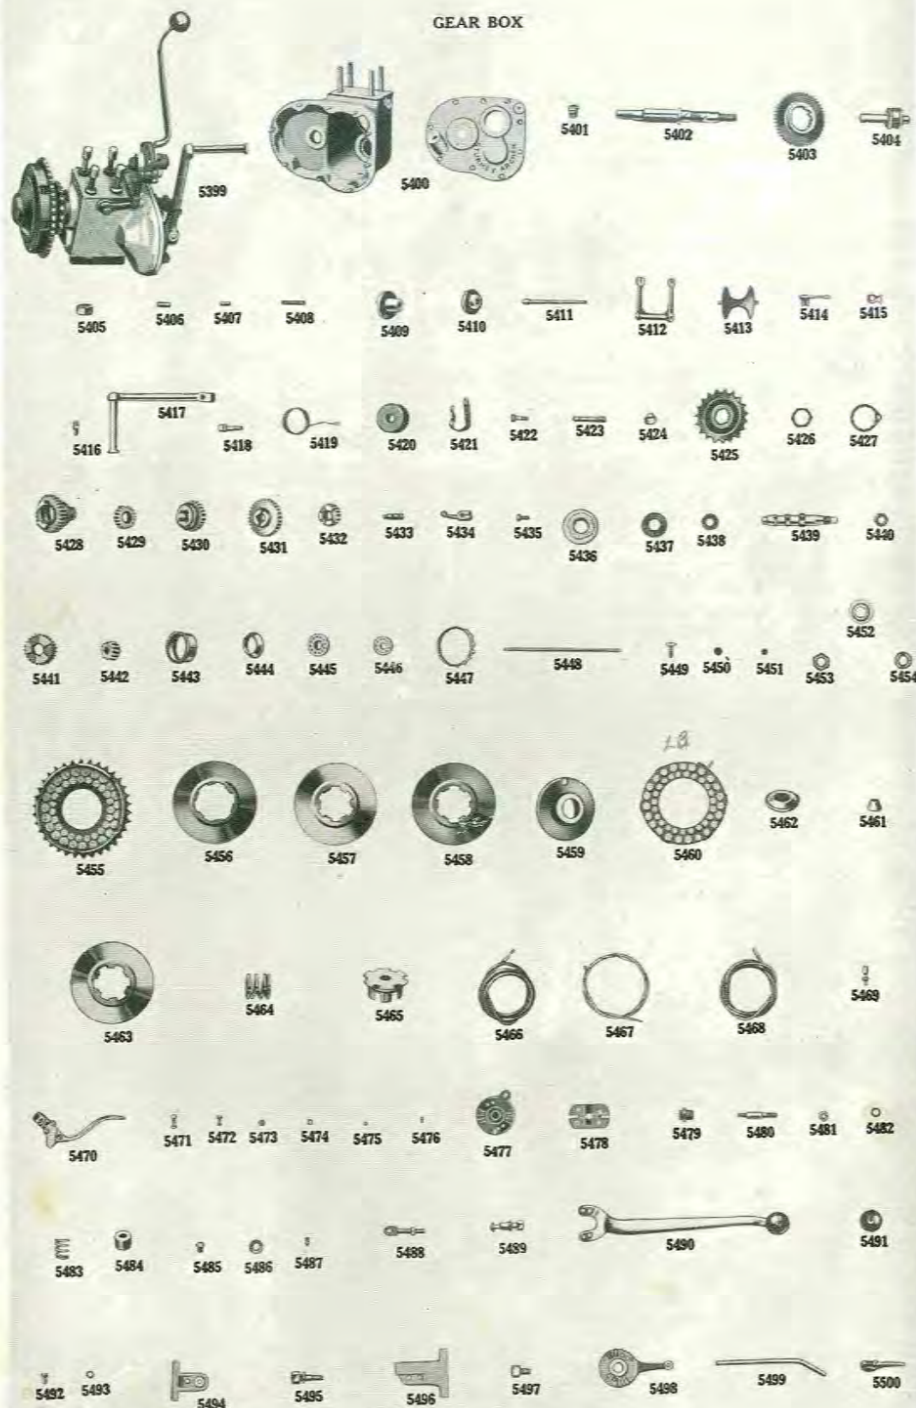

Part No.	GEAR BOX.—continued.	For Models.	ℓ	s.	d.
5430	Gear Box Lay Shaft Sliding Gear ...	...1, 2, 16H, 18, 19 & 21	0	9	4
5431	Gear Box Lay Shaft Low-Gear Wheel ...	...1, 2, 16H, 18, 19 & 21	0	7	9
5432	Gear Box Low Gear Axle Pinion ...	...1, 2, 16H, 18, 19 & 21	0	6	8
5433	Gear Box Clutch Worm ...	...1, 2, 16H, 18, 19 & 21	0	2	0
5434	Gear Box Clutch Worm Lever ...	...1, 2, 16H, 18, 19 & 21	0	2	9
5435	Gear Box Clutch Worm Lever Pin ...	...1, 2, 16H, 18, 19 & 21	0	0	2
5436	Gear Box Clutch Nut ...	...1, 2, 16H, 18, 19 & 21	0	5	6
5437	Gear Box Clutch Nut, Oil Retaining Cap ...	...1, 2, 16H, 18, 19 & 21	0	1	8
5438	Gear Box Clutch Nut, Oil Retaining Cap, Felt Washer	...1, 2, 16H, 18, 19 & 21	0	0	2
5439	Gear Box Lay Shaft ...	...1, 2, 16H, 18, 19 & 21	0	18	9
5440	Gear Box Lay Shaft Nut ...	...1, 2, 16H, 18, 19 & 21	0	0	4
5441	Gear Box Axle Sliding Pinion ...	...1, 2, 16H, 18, 19 & 21	0	11	0
5442	Gear Box Kick-starter Pinion ...	...1, 2, 16H, 18, 19 & 21	0	3	8
5443	Gear Box Left-hand Ball Cup ...	...1, 2, 16H, 18, 19 & 21	0	5	6
5444	Gear Box Left-hand Cone ...	...1, 2, 16H, 18, 19 & 21	0	2	9
5445	Gear Box Bearing RL5 ...	...1, 2, 16H, 18, 19 & 21	0	9	6
5446	Gear Box Bearing RL4 ...	...1, 2, 16H, 18, 19 & 21	0	8	9
5447	Gear Box Clutch Roller Cage, complete ...	...1, 2, 16H, 18, 19 & 21	0	5	3
5448	Gear Box Clutch Rod ...	...1, 2, 16H, 18, 19 & 21	0	0	11
5449	Gear Box Clutch Thrust Pin ...	...1, 2, 16H, 18, 19 & 21	0	0	11
5450	Gear Box Clutch Friction Plug, $\frac{3}{8}$ " dia. (per doz.)	...1, 2, 16H, 18, 19 & 21	0	1	2
5451	Gear Box Clutch Friction Plug, $\frac{1}{2}$ " dia. (per doz.)	...1, 2, 16H, 18, 19 & 21	0	1	2
5452	Gear Box Clutch Spring Collar ...	...1, 2, 16H, 18, 19 & 21	0	0	7
5453	Gear Box Axle Nut ...	...1, 2, 16H, 18, 19 & 21	0	0	10
5454	Gear Box Axle Nut Locking Washer ...	...1, 2, 16H, 18, 19 & 21	0	0	1
5455	Gear Box Clutch Sprocket ...	...1, 2, 16H, 18, 19 & 21	1	13	0
5456	Gear Box Clutch Centre Plate, Dished ...	...1, 2, 16H, 18, 19 & 21	0	2	9
5457	Gear Box Clutch Centre Plate, Flat ...	...1, 2, 16H, 18, 19 & 21	0	2	9
5458	Gear Box Clutch Outer Plate ...	...1, 2, 16H, 18, 19 & 21	0	2	9
5459	Gear Box Clutch Spring Cup ...	...1, 2, 16H, 18, 19 & 21	0	3	4
5460	Gear Box Clutch Friction Ring with Plugs ...	...1, 2, 16H, 18, 19 & 21	0	5	6
5461	Gear Box Clutch Adjusting Nut ...	...1, 2, 16H, 18, 19 & 21	0	0	10
5462	Gear Box Clutch End Cap ...	...1, 2, 16H, 18, 19 & 21	0	1	8
5463	Gear Box Clutch Back Plate ...	...1, 2, 16H, 18, 19 & 21	0	2	9
5464	Gear Box Clutch Spring ...	...1, 2, 16H, 18, 19 & 21	0	1	10
5465	Gear Box Clutch Centre ...	...1, 2, 16H, 18, 19 & 21	0	14	10
5466	Gear Box Clutch Cable (Inner and Outer) complete	...1, 2, 16H, 18, 19 & 21	0	4	3
5467	Gear Box Clutch Control Cable (Inner Wire only)	...1, 2, 16H, 18, 19 & 21	0	1	9
5468	Gear Box Clutch Control (Outer Cable only)	...1, 2, 16H, 18, 19 & 21	0	2	6
5469	Gear Box Clutch Control Cable Adjuster ...	...1, 2, 16H, 18, 19 & 21	0	0	10
5470	Gear Box Clutch Handlebar Control Lever, complete less Cable	...1, 2, 16H, 18, 19 & 21	0	8	9
5471	Gear Box Clutch Handlebar Control Lever Fulcrum Pin and Nut	...1, 2, 16H, 18, 19 & 21	0	0	2
5472	Gear Box Clutch Handlebar Control Clip, Pin and Nut	...1, 2, 16H, 18, 19 & 21	0	0	1
5473	Gear Box Clutch Handlebar Control Cable Stop	...1, 2, 16H, 18, 19 & 21	0	0	4
5474	Gear Box Clutch Handlebar Control Cable Swivel	...1, 2, 16H, 18, 19 & 21	0	0	2
5475	Gear Box Clutch Handlebar Control Cable Swivel Nipple	...1, 2, 16H, 18, 19 & 21	0	0	1
5476	Gear Box Clutch Handlebar Control Cable Nipple	...1, 2, 16H, 18, 19 & 21	0	0	1
5477	Gear Box Control Quadrant ...	...1, 2, 16H, 18, 19 & 21	0	5	6
5478	Gear Box Control Index Plate ...	...1, 2, 16H, 18, 19 & 21	0	7	2
5479	Gear Box Control Quadrant Bush ...	...1, 2, 16H, 18, 19 & 21	0	1	2
5480	Gear Box Control Quadrant Stud ...	...1, 2, 16H, 18, 19 & 21	0	1	8
5481	Gear Box Clutch Control Quadrant Stud Nut	...1, 2, 16H, 18, 19 & 21	0	0	6
5482	Gear Box Clutch Control Quadrant Stud Spring Washer	...1, 2, 16H, 18, 19 & 21	0	0	1
5483	Gear Box Clutch Control Quadrant Spring ...	...1, 2, 16H, 18, 19 & 21	0	0	6
5484	Gear Box Control Quadrant Spring Box ...	...1, 2, 16H, 18, 19 & 21	0	0	6
5485	Gear Box Control Quadrant Spring Nut ...	...1, 2, 16H, 18, 19 & 21	0	0	7
5486	Gear Box Control Quadrant Spring Nut Washer	...1, 2, 16H, 18, 19 & 21	0	0	1
5487	Gear Box Control Quadrant Stop Peg ...	...1, 2, 16H, 18, 19 & 21	0	3	1
5488	Gear Box Control Rod and Nut ...	...1, 2, 16H, 18, 19 & 21	0	1	4
5489	Gear Box Quadrant Top Connection Stud, with Nut Washer, Split Pin	...1, 2, 16H, 18, 19 & 21	0	1	9
5490	Gear Box Control Lever with Knob ...	...1, 2, 16H, 18, 19 & 21	0	6	8

For CS1, ES2, CJ and JE Models, see separate lists.

TRANSMISSION.



Part No.

GEAR BOX:—continued.

		For Models	£	s.	d.
5491	Gear Box Control Lever Knob	... 1, 2, 16H, 18, 19 & 21	0	0	10
5492	Gear Box Control Lever Bolt	... 1, 2, 16H, 18, 19 & 21	0	0	3
5493	Gear Box Control Lever Bolt Spring Washer	... 1, 2, 16H, 18, 19 & 21	0	0	1
5494	Gear Box Control Anchorage	... 1, 2, 16H, 18, 19 & 21	0	4	3
5495	Gear Box Control Anchorage Fixing Stud, Nut and Washer	... 1, 2, 16H, 18, 19 & 21	0	1	3
5496	Gear Box Control Anchorage	... 14 & 24	0	3	6
5497	" " " Stud and Nut...	... 14 & 24	0	1	3
5498	" " " Quadrant	... 14 & 24	0	5	6
5499	" " " Rod	... 14 & 24	0	1	2
5500	" " " Rocking Shaft Lever	... 14 & 24	0	3	3

For other 4-Speed Gear Box Parts see separate list.

TRANSMISSION.

		For Models	£	s.	d.
5501	Engine Sprockets, 17T, 18T, 19T, 20T	... 1, 2, 16H, 18, 19 & 21	0	11	0
5502	Engine Sprockets 21T, 22T, 23T, 24T	... 1, 2, 16H, 18, 19 & 21	0	12	6
5503	Engine Sprockets, 16T, 17T, 18T	... 14 & 24	0	14	6
5504	Engine Sprocket Lock Nuts	For all Models each	0	0	4

The following size Sprockets are fitted as standard equipment when Machines leave our Works:

Models No. 1, 2, 16H.	Solo 21T.	S/Car, 19T.
Models No. 18, 19, 21	Solo 22T.	S/Car, 20T.
Models No. 14 & 24.	Solo 18T.	S/Car, 16T.

		For Models	£	s.	d.
5505	Front Driving Chain	... 1, 2, 16H, 18, 19 & 21	0	12	6
5506	Rear Driving Chain	... 1, 2, 16H, 18, 19 & 21	1	1	6
5507	Front Chain	... 14 & 24	0	12	6
5508	Rear Chain	... 14 & 24	1	1	3
5509	Front Chain Spring Link	... 1, 2, 16H, 18, 19 & 21	0	0	11
5510	Front Chain Cranked Link	... 1, 2, 16H, 18, 19 & 21	0	1	6
5511	Rear Chain Spring Link	... 1, 2, 16H, 18, 19 & 21	0	0	11
5512	Rear Chain Cranked Link	... 1, 2, 16H, 18, 19 & 21	0	1	6
5513	Front or Rear Chain Spring Link	... 14 & 24	0	0	11
5514	Front or Rear Chain Cranked Link	... 14 & 24	0	1	6

State when ordering Spares, whether Renolds or Coventry Chains are fitted.

5515	Front Chain Adjuster Plate	For (1, 2, 14, 16H, 18, 19, 21 & 24	0	1	0
5516	Front Chain Adjuster Bolt	Models (1, 2, 14, 16H, 18, 19, 21 & 24	0	1	0
5517	Front Chain Case Complete	For all Models	3	5	0
5518	Front Chain Case Top Portion	For all Models	1	8	0
5519	Front Chain Case Bottom Portion	For all Models	1	14	0
5520	Front Chain Case Clutch Cover	For all Models	0	3	0
5521	Front Chain Case Clutch Cover Screws	For all Models	0	0	1
5522	Front Chain Case Pin, long	For all Models	0	0	5
5523	Front Chain Case Pin, short	For all Models	0	0	4
5524	Front Chain Case or Rear Guard Attachment Pin	For all Models	0	0	3
5525	Rear Chain Guard	For (1, 2, 16H, 18, 19 & 21	0	14	0
5526	Rear Chain Guard (Front Portion)	Models (14 & 24	0	12	6
5527	Rear Chain Guard (Rear Portion)	14 & 24	0	8	6
5528	Rear Chain Guard Mudguard Stay Attachment Pin	For all Models	0	0	3

WHEELS & HUBS.

5529	Front Hub Shell complete with Brake Drum	For all Models	0	17	0
5530	Front Hub Spindle only	For all Models	0	2	2
5531	Front Hub Adjusting Cone	For all Models	0	1	8
5532	Front Hub Fixed Cone	For all Models	0	1	8
5533	Front Hub Cup	For all Models	0	2	3
5534	Front Hub Spindle Nut	For all Models	0	1	1
5535	Front Hub Dust Cap	For all Models	0	0	9
5536	Front Hub Ball Retaining Washer	For all Models	0	0	7
5537	Front Hub Balls, per set	For all Models	0	0	9
5538	Front Hub Greaser Nipple	For all Models	0	0	7
5539	Front Hub Brake Shoes, with Linings (per pair)	For all Models	0	14	0
5540	Front Hub Brake Lining Rivets	For all Models (set)	0	0	6
5541	Front Hub Brake Linings	For all Models	0	6	0
5542	Front Hub Brake Shoe Springs	For all Models	0	0	6
5543	Front Hub Brake Shoe Plate	For all Models	0	7	9

For CS1, ES2, CJ and JE Models, see separate lists:

Part No.

WHEELS AND HUBS.—continued.


			l	s.	d.
5544	Front Hub Cam Pin only	For all Models	0	1	3
5545	Front Hub Cam Lever	For all Models	0	1	1
5546	Front Hub Cam Pin Nut	For all Models	0	0	3
5547	Front Hub Cam Pin Washer	For all Models	0	0	2
5548	Front Wheel Rim 26×3.25	For all Models	0	9	0
5549	Front Wheel Spokes, per set	For all Models	0	4	0
5550	Front Wheel Nipples, per set	For all Models	0	2	3
5551	Front Wheel complete with all fittings, less tyre	For all Models	3	10	0
5552	Rear Hub Shell with cups only	1, 2, 16H, 18, 19 & 21	1	13	6
5553	Rear Hub Shells with cups only	14 & 24	1	13	6
5554	Rear Hub Brake Drum only	For all Models	1	5	0
5555	Rear Hub Spindle	1, 2, 16H, 18, 19 & 21	0	2	6
5556	Rear Hub Spindle	14 & 24	0	3	3
5557	Rear Hub Adjusting Cone	For all Models	0	1	8
5558	Rear Hub Fixed Cone	For all Models	0	1	8
5559	Rear Hub Dust Cap	For all Models	0	1	0
5560	Rear Hub Spindle Nut, closed end	For all Models	0	1	1
5561	Rear Hub Spindle Nut, open end	For all Models	0	0	8
5562	Rear Hub Sprocket	For all Models	1	1	0
5563	Rear Hub Sprocket Studs	For all Models	0	0	6
5564	Rear Hub Sprocket Nuts	For all Models	0	0	3
5565	Rear Hub Sprocket Stud Washers	For all Models	0	0	2
5566	Rear Hub Sprocket Rubber Buffers (per set of 6)	For all Models	0	7	6
5567	Rear Hub Sprocket Plate	For all Models	0	1	9
5568	Rear Hub Brake Plate only	For all Models	0	8	6
5569	Rear Hub Cup	For all Models	0	2	3
5570	Rear Hub Anchor Plate Lock Nut	For all Models	0	1	1
5571	Rear Hub Brake Shoe Spring	For all Models	0	0	6
5572	Rear Hub Brake Shoes with Linings	For all Models pair	0	18	0
5573	Rear Hub Brake Shoe Linings	For all Models pair	0	6	0
5574	Rear Hub Brake Shoe Lining Rivets	For all Models set	0	0	6
5575	Rear Hub Brake Cam with Lever	For all Models	0	3	6
5576	Rear Hub Chain Adjuster complete	For all Models	0	1	9
5577	Rear Hub Chain Adjuster Plate	For all Models	0	0	4
5578	Rear Hub Chain Adjuster Plate Nut	For all Models	0	0	2
5579	Rear Hub Grease Nipple	For all Models	0	0	7
5580	Rear Hub Anchor Arm Plate Bolt with Nuts	For all Models	0	0	6
5581	Rear Hub Ball Retaining Washer	For all Models	0	0	7
5582	Rear Hub Balls (per set)	For all Models	0	1	6
5583	Rear Hub Plate Anchor Arm	For all Models	0	2	9
5584	Rear Wheel Rim, 26×3.25	1, 2, 16H, 18, 19 & 21	0	9	0
5585	Rear Wheel Rim, 26×3.25	14 & 24	0	9	0
5586	Rear Wheel Spokes, per set		0	4	0
5587	Rear Wheel Spoke Nipples, per set		0	2	3
5588	Rear Wheel complete with all fittings, less Tyre	1, 2, 16H, 18, 19 & 21	6	0	0
5589	Real Wheel complete with all fittings, less Tyre	14 & 24	6	6	0

REAR BRAKE ACTUATING PARTS.


			l	s.	d.
5590	Rear Brake Pedal with Spindle	For Models	0	12	0
5591	Rear Brake Pedal with Spindle	1, 2, 16H, 18, 19 & 21	0	12	0
5592	Rear Brake Pedal Spindle Nut	14 & 24	0	0	3
5593	Rear Brake Rod	For all Models	0	0	3
5594	Rear Brake Rod	1, 2, 16H, 18, 19 & 21	0	2	6
5595	Rear Brake Jaw Joint	14 & 24	0	2	6
5596	Rear Brake Jaw Joint	1, 2, 16H, 18, 19 & 21	0	2	0
5597	Rear Brake Jaw Joint Pin with Split Cotter	14 and 24	0	2	0
5598	Rear Brake Pedal Arm	For all Models	0	0	1
5599	Rear Brake Arm Eye Bolt	1, 2, 16H, 18, 19 & 21	0	4	6
5600	Rear Brake Arm Eye Bolt Nut	For all Models	0	0	9
5601	Rear Brake Arm Eye Bolt Washer	For all Models	0	0	3
5602	Rear Brake Pedal Arm Adjuster and Stop	For all Models	0	0	1
5603	Rear Brake Knurled Hand Adjuster	For all Models	0	0	9
5604	Rear Brake Anchor Arm Frame Bolt	For all Models	0	1	6
5605	Rear Brake Anchor Arm Frame Bolt Spring Washer	For all Models	0	0	3
5606	Rear Brake Return Spring	For all Models	0	0	1
		1, 2, 16H, 18, 19 & 21	0	1	0

For CS1, ES2, CJ and JE Models, see separate lists.


REAR BRAKE ACTUATING PARTS.

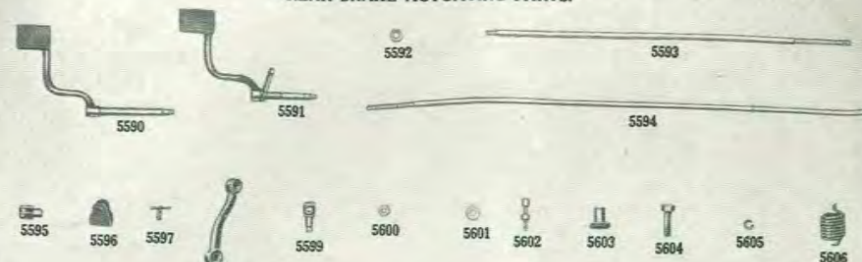

FOOTRESTS AND FOOTBOARDS.

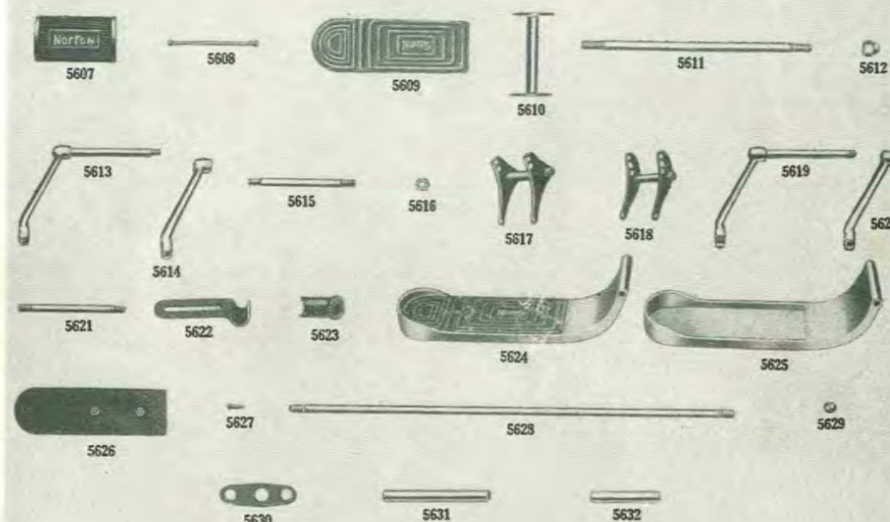

FRAMES, MUDGUARDS, STANDS, ETC.

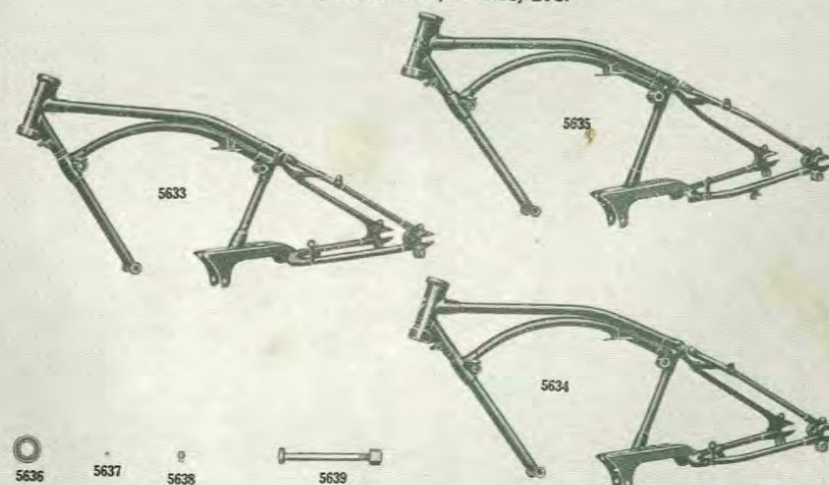

FOOTRESTS & FOOTBOARDS.


Part No.		For Models	£	s.	d.
5607	Footrest Rubber	...16H, 18, 19, 21 & 24	0	1	3
5608	Footrest Rubber Securing Bolt and Nuts	...16H, 18, 19, 21 & 24	0	0	5
5609	Footboard Rubber Mat (state left or right hand)	...1, 2, & 14	0	4	6
5610	Footrest Pad Holder	...16H, 18, 19, 21 & 24	0	2	9
5611	Footrest Tube Centre Bolt	...For all Models	0	2	0
5612	Footrest Tube Centre Bolt Nut	...For all Models	0	0	5
5613	Footrest Serrated Hanger with Pad Holder Spindle	...16H, 18, 19, 21 & 24	0	6	0
5614	Footrest Serrated Hanger only	...16H, 18, 19, 21 & 24	0	4	10
5615	Footrest Serrated Hanger Spindle only	...16H, 18, 19, 21 & 24	0	1	2
5616	Footrest Serrated Hanger Spindle Nut	...16H, 18, 19, 21 & 24	0	0	3
5617	Footrest or Footboard Hanger Plates with Support Tube and Brake Pedal Bearing	...14 & 24	0	13	0
5618	Footrest or Footboard Hanger Plates with Support Tube and Brake Pedal Bearing	...1, 2, 16H, 18, 19 & 21	0	13	0
5619	Footboard Serrated Hanger with Spindle	...1, 2 & 14	0	6	0
5620	Footboard Serrated Hanger only	...	0	4	10
5621	Footboard Serrated Hanger Spindle only	...1, 2 & 14	0	1	2
5622	Footboard Attachment Plate	...1, 2 & 14	0	2	6
5623	Footrest or Footboard Hanger Tube Slotted Distance piece	...For all Models	0	3	0
5624	Footboard complete with Pneumatic Mat	...1, 2 & 14	0	15	0
5625	Footboard only less Mat	...1, 2 & 14	0	10	6
5626	Footboard Pneumatic Mat Plate	...1, 2 & 14	0	1	0
5627	Footboard Pneumatic Mat Plate Attachment Screws	...1, 2 & 14	0	0	3
5628	Footboard Front Support Rod	...1, 2 & 14	0	3	6
5629	Footboard Front Support Rod Nuts	...1, 2 & 14 each	0	0	5
5630	Footboard Front Support Rod Attachment Plates	...1, 2 & 14 each	0	1	0
5631	Footboard Front Support Rod Distance Tube, long	...1, 2 & 14	0	1	2
5632	Footboard Front Support Rod Distance Tube, short	...1, 2 & 14	0	1	0

FRAME, MUDGUARDS, STANDS, Etc.

		For Models			
5633	Frame only with Ball Races	1, 2, 16H, 18 & 21	12	0	0
5634	Frame only with Ball Races	19	12	0	0
5635	Frame only with Ball Races	14 & 24	12	0	0
5636	Frame Head Race	For all Models	0	1	6
5637	Frame Head Balls (per set)	For all Models	0	2	0
5638	Frame Head Lug Fork Stop	For all Models	0	0	6
5639	Frame Seat Lug Bolt with Nut	For all Models	0	0	9
5640	Front Mudguard only with Front Number Plate Studs	1, 2, 16H, 14 & 24	0	10	0
5641	Front Mudguard only with Front Number Plate Studs	18, 19 & 21	0	10	0
5642	Front Mudguard Stay	1, 2, 14, 16H & 24	0	3	6
5643	Front Mudguard Stay	18, 19 & 24	0	3	6
5644	Front Mudguard Stay Mudguard Attachment Pin with Nut and Washers	For all Models	0	0	5
5645	Front Mudguard Stay Fork Attachment Pin ...	For all Models	0	0	3
5646	Front Mudguard Stand Attachment Stud with Nut	For all Models	0	0	9
5647	Front Number Plate	For all Models	0	1	0
5648	Rear Number Plate	For all Models	0	1	6
5649	Rear Number Plate for Lucas Electric Rear Lamp	For all Models	0	1	6
5650	Front Number Plate Attachment Pins (each) ...	For all Models	0	0	2
5651	Rear Number Plate Attachment Pins and Nuts ...	For all Models	0	0	2
5652	Rear Mudguard only	1, 2, 16H, 18, 19 & 21	0	10	0
5653	Rear Mudguard only	14 & 24	0	10	0
5654	Rear Mudguard Stays	1, 2, 16H, 18, 19 & 21	0	10	0
5655	Rear Mudguard Stays	14 & 24	0	10	0
5656	Rear Mudguard Stay Pins and Nuts (each) ...	For all Models	0	0	5
5657	Rear Mudguard Stay Bridge Strap	For all Models	0	1	3
5658	Carrier only	For all Models	0	12	6
5659	Carrier Attachment Pins and Nuts (each) ...	For all Models	0	0	5

For CS1, ES2, CJ and JE Models, see separate lists.

FRAMES, MUDGUARDS, STANDS, ETC. (continued).

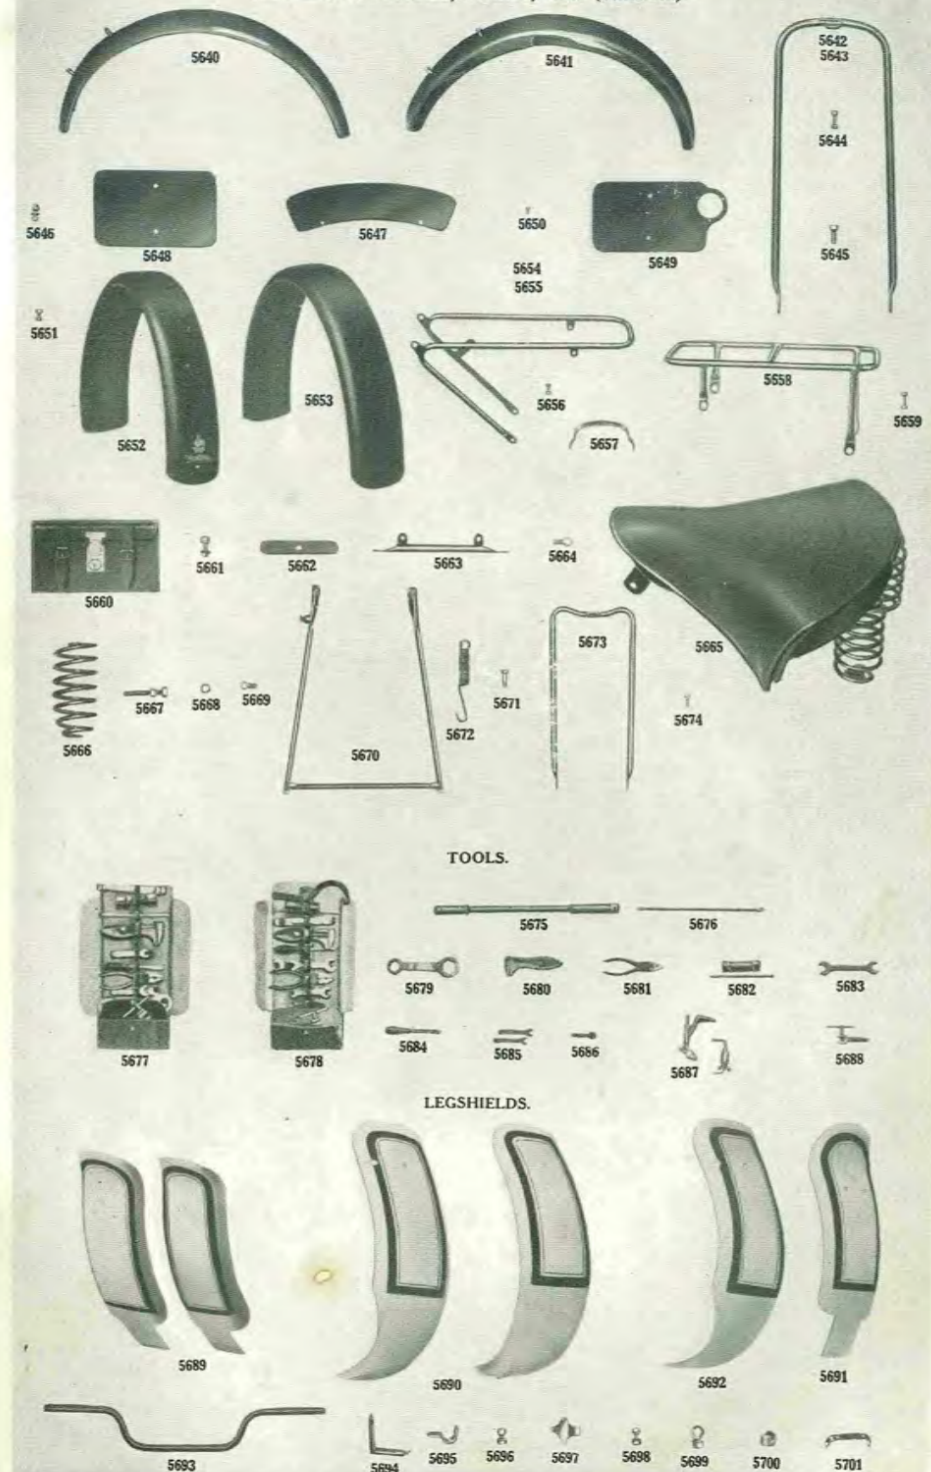

FRAME, MUDGUARDS, STANDS, ETC.—*continued.*

Part No.				£	s.	d.
5660	Pannier Bag, left or right hand	...	For all Models	0	9	0
5661	Pannier Bag Attachment Pins and Nuts (each)	...	For all Models	0	0	4
5662	Pannier Bag Attachment Pin Plate	...	For all Models	0	1	3
5663	Pannier Bag Carrier Stay	...	For all Models	0	2	0
5664	Pannier Bag Carrier Stay Clip	...	For all Models	0	0	3
5665	Saddle	...	For all Models	2	7	0
5666	Saddle Spring	...	For all Models	0	4	6
5667	Saddle Spring Stud with Nuts	...	For all Models	0	0	7
5668	Saddle Spring Pin Plain Washer	...	For all Models	0	0	1
5669	Saddle Front Anchor Bolt	...	For all Models	0	0	4
5670	Rear Stand	...	For all Models	1	1	0
5671	Rear Stand Attachment Bolts (each)	...	For all Models	0	0	8
5672	Rear Stand Spring	...	For all Models	0	1	6
5673	Front Stand	...	For all Models	0	10	0
5674	Front Stand Attachment Pins (each)	...	For all Models	0	0	5

TOOLS.

5675	Tyre Inflator with Connection	...	For all Models	0	4	0
5676	Tyre Inflator Connection	...	For all Models	0	1	9
5677	Tool Roll complete with Tools	...	1, 2, 14 & 16H	1	5	3
5678	Tool Roll complete with Tools	...	18, 19, 21 & 24	1	8	9
5679	Valve Cap & Sparking Plug Spanner	...	1, 2, 14 & 16H	0	2	3
5680	6 in. Adjustable Spanner	...	For all Models	0	3	6
5681	Combination Pliers	...	For all Models	0	2	6
5682	3/4" Box Spanner and Tommy Bar	...	For all Models	0	1	4
5683	Double Ended Spanner	...	For all Models	0	1	0
5684	Screwdriver	...	For all Models	0	1	3
5685	Tappet Adjusting Spanners (per pair)	...	1, 2, 14 & 16H	0	1	0
5686	Rocker Adjusting Spanner (for arched type rockers)	...	18, 19, 21 & 24	0	0	6
5687	O.H.V. Valve Removing Tool	...	18, 19, 21 & 24	0	7	6
5688	Chain Rivet Extractor	...	For all Models	0	3	3

LEGSHIELDS.

			For Models			
5689	Legshields enamelled to match Tank, complete with fittings (per set)	...	1, 2, & 14	1	1	0
5690	Legshields enamelled to match Tank, complete with fittings (per set)	...	...16H, 18, 19, 21 & 24	1	1	0
5691	Legshield Blade only (state left or right hand), enamelled to match Tank	...	1, 2 & 14	0	7	6
5692	Legshield Blade only (state left or right hand), enamelled to match Tank	...	...16H, 18, 19, 21 & 24	0	7	6
5693	Legshield Stay Rod only	...	For all Models	0	3	6
5694	Legshield Stay Rod Tank Attachment Plate	...	For all Models	0	1	0
5695	Legshield Stay Rod Tank Attachment Clip	...	For all Models	0	0	9
5696	Legshield Stay Rod Tank Attachment Clip, Pin & Nut	...	For all Models	0	0	5
5697	Legshield Stay Rod Clip	...	1, 2 & 14	0	1	3
5698	Legshield Stay Rod Clip, Bolt and Nut	...	1, 2 & 14	0	0	6
5699	Legshield Stay Rod Eye Bolt with Nut and Washer	...	...16H, 18, 19, 21 & 24	0	0	9
5700	Legshield Stay Rod Eye Bolt Distance Piece	...	...16H, 18, 19, 21 & 24	0	0	2
5701	Legshield Footrest Attachment Clip	...	...16H, 18, 19, 21 & 24	0	0	9

For CS1, ES2, CJ and JE Models, see separate lists