



Kawasaki

KE100



Motorcycle Service Manual

Decimal Equivalents

INCH					MM INCH	INCH					MM INCH
$\frac{1}{64}$				.015625	1 mm= .03937 inch	$\frac{33}{64}$				.515625	14 mm= .55118 inch
	$\frac{1}{32}$			.3125			$\frac{17}{32}$			.53125	
$\frac{3}{64}$				.046875		$\frac{35}{64}$				.546875	
		$\frac{1}{16}$		.0625				$\frac{9}{16}$		.5625	
$\frac{5}{64}$				.078125	2 mm= .07874 inch	$\frac{37}{64}$				.578125	15 mm= .59055 inch
	$\frac{3}{32}$			.09375	3 mm= .11811 inch		$\frac{19}{32}$			.59375	16 mm= .62992 inch
$\frac{7}{64}$				.109375		$\frac{39}{64}$				.609375	
			$\frac{1}{8}$	.125				$\frac{5}{8}$		.625	
$\frac{9}{64}$				.140625		$\frac{41}{64}$				.640625	
	$\frac{5}{32}$			.15625	4 mm= .15748 inch		$\frac{21}{32}$			.65625	17 mm= .66929 inch
$\frac{11}{64}$				.171875	5 mm= .19685 inch	$\frac{43}{64}$				.671875	18 mm= .70866 inch
		$\frac{3}{16}$		.1875				$\frac{11}{16}$		.6875	
$\frac{13}{64}$				.203125		$\frac{45}{64}$				.703125	
	$\frac{7}{32}$			.21875			$\frac{23}{32}$			.71875	
$\frac{15}{64}$				.234375	6 mm= .23622 inch	$\frac{47}{64}$				.734375	19 mm= .74803 inch
			$\frac{1}{4}$	.25	7 mm= .27559 inch			$\frac{3}{4}$		.75	20 mm= .78740 inch
$\frac{17}{64}$				.265625		$\frac{49}{64}$				.765625	
	$\frac{9}{32}$			.28125			$\frac{25}{32}$			.78125	
$\frac{19}{64}$				.296875		$\frac{51}{64}$				.796875	
		$\frac{5}{16}$		.3125	8 mm= .31496 inch			$\frac{13}{16}$		.8125	21 mm= .82677 inch
$\frac{21}{64}$				.328125	9 mm= .35433 inch	$\frac{53}{64}$				.828125	22 mm= .86614 inch
	$\frac{11}{32}$			.34375			$\frac{27}{32}$			.84375	
$\frac{23}{64}$				.359375		$\frac{55}{64}$				.859375	
			$\frac{3}{8}$	.375				$\frac{7}{8}$		.875	
$\frac{25}{64}$				.390625	10 mm= .39370 inch	$\frac{57}{64}$				.890625	23 mm= .90551 inch
	$\frac{13}{32}$			.40625	11 mm= .43307 inch		$\frac{29}{32}$			.90625	24 mm= .94488 inch
$\frac{27}{64}$				.421875		$\frac{59}{64}$				.921875	
		$\frac{7}{16}$		.4375				$\frac{15}{16}$		.9375	
$\frac{29}{64}$				.453125		$\frac{61}{64}$				.953125	
	$\frac{15}{32}$			.46875	12 mm= .47244 inch		$\frac{31}{32}$			.96875	25 mm= .98425 inch
$\frac{31}{64}$				.484375	13 mm= .51181 inch	$\frac{63}{64}$				.984375	
			$\frac{1}{2}$	.5						1	1.

Unit Conversion Table

cc	x	.0610	=	cu in
cc	x	.02816	=	oz (imp)
cc	x	.03381	=	oz (US)
cu in	x	16.39	=	cc
ft-lbs	x	12	=	in lbs
ft-lbs	x	.1383	=	kg-m
gal (imp)	x	4.546	=	litres
gal (imp)	x	1.201	=	gal (US)
gal (US)	x	3.7853	=	liters
gal (US)	x	.8326	=	gal (Imp)
grams	x	.03527	=	oz
in	x	25.40	=	mm
in lbs	x	.0833	=	ft-lbs
in lbs	x	.0115	=	kg-m
kg	x	2.2046	=	lbs
kg	x	35.274	=	oz
kg-m	x	7.233	=	ft-lbs
kg-m	x	86.796	=	in-lbs
kg/cm ²	x	14.22	=	lbs/in ²
km	x	.6214	=	mile
lb	x	.4536	=	kg
lb/in ²	x	.0703	=	kg/cm ²
litre	x	28.16	=	oz (imp)
litre	x	33.81	=	oz (US)
litre	x	.8799	=	qt (imp)
litre	x	1.0567	=	qt (US)
metre	x	3.281	=	ft
mile	x	1.6093	=	km
mm	x	.03937	=	in
oz (imp)	x	35.51	=	cc
oz (US)	x	29.57	=	cc
oz (weight)	x	28.35	=	grams
qt (imp)	x	1.1365	=	litre
qt (imp)	x	1.201	=	qt (US)
qt (US)	x	.9463	=	litre
qt (US)	x	.8326	=	qt (imp)
kg/cm ²	x	98.07	=	kPa
lbs/in ²	x	6.896	=	kPa
kPa	x	.1450	=	lbs/in ²

$$^{\circ}\text{C} \rightarrow ^{\circ}\text{F}: \frac{9 (^{\circ}\text{C} + 40)}{5} - 40 = ^{\circ}\text{F}$$

$$^{\circ}\text{F} \rightarrow ^{\circ}\text{C}: \frac{5 (^{\circ}\text{F} + 40)}{9} - 40 = ^{\circ}\text{C}$$

List of Abbreviations

ABDC	after bottom dead center
ATDC	after top dead center
BBDC	before bottom dead center
BDC	bottom dead center
BTDC	before top dead center
cc	cubic centimeters
cu in	cubic inches
ft	foot, feet
ft-lbs	foot-pounds
gal	gallon, gallons
hp	horsepower
in	inch, inches
in-lb	inch-pounds
kg	kilogram, kilograms
kg/cm ²	kilograms per square centimeter
kg-m	kilogram meters
km	kilometer
kph	kilometers per hour
lb, lbs	pound, pounds
lbs/in ²	pounds per square inch
ltr	liter, litre
m	meter, meters
mi	mile, miles
mm	millimeters
mph	miles per hour
oz	ounce, ounces
psi	pounds per square inch
qt	quart, quarts
rpm	revolutions per minute
sec	second, seconds
SS	standing start
TDC	top dead center
"	inch, inches
r/min	revolutions per minute
ℓ	liter, litre
kPa	kilo-Pascals



KE100



Motorcycle Service Manual

Kawasaki Heavy Industries, Ltd. accepts no liability for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible. All procedures and specifications subject to change without prior notice.

Emission Control Information

DESCRIPTION OF EMISSION CONTROL SYSTEM

To protect the environment in which we all live, Kawasaki has incorporated into your motorcycle an emission control system in compliance with applicable regulations of the United States Environmental Protection Agency.

This system reduces the amount of pollutants discharged into the atmosphere by the exhaust of this motorcycle. The fuel system and cylinder of this motorcycle have been carefully designed and constructed to ensure an efficient engine with low exhaust pollutant levels.

The Clean Air Act, which is the Federal law covering motor vehicle pollution, contains what is commonly referred to as the Act's "tampering provisions."

"Sec. 203(a) The following acts and the causing thereof are prohibited...

- (3)(A) for any person to remove or render inoperative any device or element of design installed on or in a motor vehicle or motor vehicle engine in compliance with regulations under this title prior to its sale and delivery to the ultimate purchaser, or for any manufacturer or dealer knowingly to remove or render inoperative any such device or element of design after such sale and delivery to the ultimate purchaser.
- (3)(B) for any person engaged in the business of repairing, servicing, selling, leasing, or trading motor vehicles or motor vehicle engines, or who operates a fleet of motor vehicles knowingly to remove or render inoperative any device or element of design installed on or in a motor vehicle or motor vehicle engine in compliance with regulations under this title following its sale and delivery to the ultimate purchaser..."

NOTE

o *The phrase "remove or render inoperative any device or element of design" has been generally interpreted as follows:*

1. *Tampering does not include the temporary or rendering inoperative of devices or elements of design in order to perform maintenance.*
2. *Tampering could include:*
 - a. *Maladjustment of vehicle components such that the emission standards are exceeded.*
 - b. *Use of replacement parts or accessories which adversely affect the performance or durability of the motorcycle.*
 - c. *Addition of components or accessories that result in the vehicle exceeding the standards.*
 - d. *Permanently removing, disconnecting, or rendering inoperative any component or element of design of the emission control systems.*

WE RECOMMEND THAT ALL DEALERS OBSERVE THESE PROVISIONS OF FEDERAL LAW, THE VIOLATION OF WHICH IS PUNISHABLE BY CIVIL PENALTIES NOT EXCEEDING \$10,000 PER VIOLATION.

TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED

Federal law prohibits the following acts or the causing thereof:

- (1) The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

- Replacement of the original exhaust system or muffler with a component not in compliance with Federal regulations.
- Removal of the muffler(s) or any internal portion of the muffler(s).
- Removal of the air box or air box cover.
- Modifications to the muffler(s) or air intake system by cutting, drilling, or other means if such modifications result in increased noise levels.

Foreword

This manual is designed primarily for use by motorcycle mechanics in a properly equipped shop although it contains enough detail and basic information to make it useful to the motorcycle user who desires to carry out his own basic maintenance and repair work. Since a certain basic knowledge of mechanics, the proper use of tools, and workshop procedures must be understood in order to carry out maintenance and repair satisfactorily, the adjustments, maintenance, and repair should be carried out only by qualified mechanics whenever the owner has insufficient experience or has doubts as to his ability to do the work so that the motorcycle can be operated safely.

In order to perform the work efficiently and to avoid costly mistakes, the mechanic should read the text, thoroughly familiarizing himself with the procedures before starting work, and then do the work carefully in a clean area. Whenever special tools to equipment is specified, makeshift tools or equipment should not be used. Precision measurements can only be made if the proper instruments are used, and the use of the substitute tools may adversely affect safe operation of the motorcycle.

This manual is divided into the following four sections:

(1) Adjustment

The adjustment section gives the procedure for all adjustments which may become necessary periodically and which do not involve major disassembly.

(2) Disassembly

This section shows the best method for the removal, disassembly, assembly, and installation which are necessary for maintenance and repair. Since assembly and installation are usually the reverse of disassembly and removal, assembly and installation are not explained in detail in some cases. Instead, assembly notes and installation notes are provided to explain special points.

(3) Maintenance and Theory of Operation

The procedures for inspection and repair are described in detail in this section. An explanation on the structure and functioning of each of the major parts and assemblies is given to enable the mechanic to understand better what he is doing.

(4) Appendix

The appendix in the back of this manual contains miscellaneous information, including a special tool list, a torque table, a table for periodic maintenance, and a troubleshooting guide.

(5) Supplement

The maintenance and repair procedures, that are unique to later year units since the first publication of the Service Manual, are explained in this section.

Since this Service Manual is based on the first production units of KE100, there may be minor discrepancies between the some vehicles and the illustrations and text in this manual.

Table of Contents

Model Identification	4	FUEL TANK	44
Specifications	5	FRONT WHEEL	44
Engine Performance Curves	7	REAR WHEEL	46
Running Performance Curves	8	TIRE, TUBE	48
Adjustment		RIM	48
THROTTLE CONTROL CABLE	9	SPOKE	49
Throttle Cable	9	HANDLEBAR	49
Oil Pump Cable	10	CLUTCH CABLE	50
CARBURETOR	10	THROTTLE CONTROL CABLE	51
SPARK PLUG	11	FRONT BRAKE CABLE	52
IGNITION TIMING	11	SPEEDOMETER CABLE	53
CLUTCH	13	HEADLIGHT	53
STEERING	14	SPEEDOMETER	54
BRAKES	14	IGNITION SWITCH	54
Front and Rear Brake Cam Lever Angle	15	FRONT BRAKE LIGHT SWITCH	55
Front Brake Lever	15	REAR BRAKE LIGHT SWITCH	55
Rear Brake Pedal	15	FRONT FORK	55
BRAKE LIGHT SWITCH	16	STEERING STEM	57
DRIVE CHAIN	16	STEERING STEM BEARINGS	59
REAR SHOCK ABSORBERS	17	SWING ARM	60
HEADLIGHT	17	REAR SHOCK ABSORBERS	60
HORN	17	Maintenance and Theory of Operation	
Disassembly		AIR CLEANER	61
ENGINE	19	CARBURETOR	61
ENGINE OIL TANK	23	Starter System	62
AIR CLEANER ELEMENT	23	Pilot System	63
MUFFLER	23	Main System	64
CYLINDER HEAD, CYLINDER	24	Float System	65
PISTON, PISTON RINGS	24	CYLINDER, PISTON	66
OIL PUMP	25	CYLINDER HEAD	71
CARBURETOR	26	CRANKSHAFT	71
RIGHT ENGINE COVER	28	CLUTCH	73
CLUTCH	29	TRANSMISSION	76
ROTARY DISC VALVE	30	KICKSTARTER	80
DRIVE CHAIN	31	ENGINE LUBRICATION SYSTEM	82
ENGINE SPROCKET	32	Oil Pump	82
IGNITION COIL	32	ROTARY VALVE	84
NEUTRAL SWITCH	33	ENGINE BEARING, BUSHINGS,	
MAGNETO FLYWHEEL	33	OIL SEALS	85
MAGNETO STATOR	33	FUEL TANK	86
CONTACT BREAKER	34		
CONDENSER	34	WHEELS	86
EXTERNAL SHIFT MECHANISM	34	TIRES	88
TRANSMISSION	35	RIM, SPOKES	89
CRANKSHAFT	41	AXLE	90
CRANKCASE	42	GREASE SEALS, WHEEL BEARINGS	90
		BRAKES	91

DRIVE CHAIN	93
SPROCKETS	94
REAR WHEEL COUPLING	95
STEERING STEM	95
FRONT FORK	96
REAR SHOCK ABSORBERS	99
SWING ARM	99
MUFFLER	100
IGNITION SYSTEM	100
CHARGING SYSTEM	103
BATTERY	107
SPARK PLUG	109
IGNITION SWITCH	110
HEADLIGHT CIRCUIT	110
BRAKE, TAIL LIGHT CIRCUIT	111
TURN SIGNAL	112
HORN CIRCUIT	114
SPEEDOMETER	114
Appendix	
ADDITIONAL CONSIDERATIONS FOR	
RACING	115
SPECIAL TOOLS	117
PERIODIC MAINTENANCE CHART	119
TORQUE TABLE	122
TROUBLESHOOTING GUIDE	124
WIRING DIAGRAM	129
Supplement	131
FOR 1980, 1981 MODELS	132
FOR 1982 THROUGH 1996 MODELS	136
Index	163

Model Identification



Specifications

Dimensions		KE100-A8	
Overall length		1,980 mm	
Overall width		860 mm	
Overall height		1,070 mm	
Wheelbase		1,260 mm	
Road clearance		240 mm	
Dry weight		92 kg	
Fuel tank capacity		8.0 ℓ	
Oil tank capacity		1.2 ℓ	
Performance			
Climbing ability		33°	
Braking distance		6.5 m @35 kph	
Minimum turning radius		2 m	
Engine			
Type		2-stroke single cylinder rotary disc valve	
Bore and stroke		49.5 x 51.8 mm	
Displacement		99 cc	
Compression ratio		6.9:1	
Maximum horsepower		11 HP/7,500 rpm	
Maximum torque		1.1 kg-m/7,000 rpm	
Port timing			
Intake	Open	120°	BTDC
	Close	55°	ATDC
Scavenging	Open	59°	BBDC
	Close	59°	ABDC
Exhaust	Open	84°30'	BBDC
	Close	84°30'	ABDC
Carburetor type		Mikuni VM19SC	
Lubrication system		Superlube (Oil injection)	
Engine oil		2-stroke oil for air-cooled engines	
Starting system		Primary kick	
Ignition system		Magneto	
Ignition timing		23° (2.58 mm) BTDC 1,300 rpm	
Spark Plug		NGK B8ES	
Transmission			
Type		5-speed constant mesh return shift	
Clutch		Wet, multi disc	

6 SPECIFICATIONS

Gear ratios:

1st	2.92 (35/12)
2nd	1.76 (30/17)
3rd	1.30 (26/20)
4th	1.09 (24/22)
5th	0.96 (23/24)
Primary reduction ratio	3.52 (74/21)
Final reduction ratio	2.80 (42/15)
Overall drive ratio (top gear)	9.46
Transmission oil capacity	0.6 ℓ
Transmission oil	SE class SAE 10W30 or SAE 10W40

Electrical equipment

Flywheel magneto	Kokusan FP6139
Regulator/Rectifier	Kokusan RS2141
Ignition coil	Kokusan IG3122AC
Battery	Furukawa 6N6-1D-2 (K1) (6V 6AH)
Headlight type	Sealed Beam
Headlight	6V 30/30W
Tail/Brake light	6V 5.3/25W (3/32 CP)
Speedometer light	6V 3W
Neutral indicator light	6V 3.4W
High beam indicator light	6V 1.7W
Turn signal lights	6V 17W
Horn	6V 1.2A

Frame

Type	Tubular, double cradle
Steering angle	Left 45°, Right 44°
Castor	29.5°
Trail	120 mm
Tire size	Front 2.75-19 4PR
	Rear 3.00-18 4PR
Suspension	Front Telescopic fork
	Rear Swing arm
Suspension stroke	Front 145 mm
	Rear 90 mm
Front fork oil capacity (per shock absorber)	158 ~ 166 cc
Front fork oil	SAE 10W

Brake

Type	Internal expansion leading trailing
Inside diameter	Front 110 x 30 mm
	Rear 110 x 30 mm

Specifications subject to change without notice.

Adjustment

THROTTLE CONTROL CABLE

The throttle control cable is actually an assembly of three cables: the throttle cable, the carburetor cable, and the oil pump cable. The throttle cable runs from the throttle grip to the cable assembly junction where it connects to both the carburetor cable which leads to the carburetor, and the oil pump cable which leads to the oil pump.

The throttle cable, connecting to the carburetor cable and the oil pump cable, controls both the carburetor throttle valve and the oil pump lever simultaneously. If there is too much play in the cable, neither the carburetor nor the oil pump will respond immediately when the grip is turned. Most of this excess play must be adjusted out. However, a small amount has to be left so that the steering movement will have no effect on the throttle valve or oil pump lever.


It is important that oil pump lever opening synchronize with the carburetor throttle valve opening so that the oil and fuel/air mixture reach the engine in the correct proportion at all throttle openings. If the oil pump synchronization is out of adjustment, the oil supply to the engine will become too low or too high, resulting in piston seizure from underlubrication or poor performance and spark plug trouble from overlubrication.

Cable stretch will cause delayed engine response and upset the oil pump synchronization, necessitating periodic adjustment. To compensate for cable stretch adjust the throttle cable and the oil pump cable in accordance with Periodic Maintenance Chart (Pg. 119).

Throttle Cable

To check the throttle cable:

- Warm up the engine, and check the engine idling.
- Check to see that the outer cable ends of the throttle cable and the carburetor cable are fully seated in each cable adjuster or adjusting nut. These checks are necessary to perform following procedures properly.

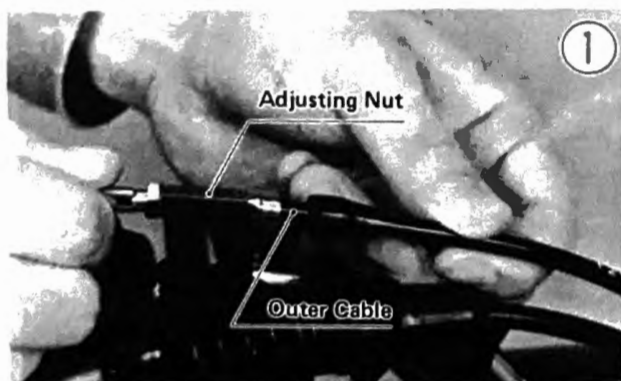


- Check the throttle cable play. When lightly turning the throttle grip back and forth, the grip should have 2 ~ 3 mm of play.




If the throttle cable has improper play, adjust it as follows.

To adjust the throttle cable:

- Loosen the lock nut at the throttle grip, and turn the adjusting nut until the proper amount of throttle grip play is obtained. Tighten the lock nut.

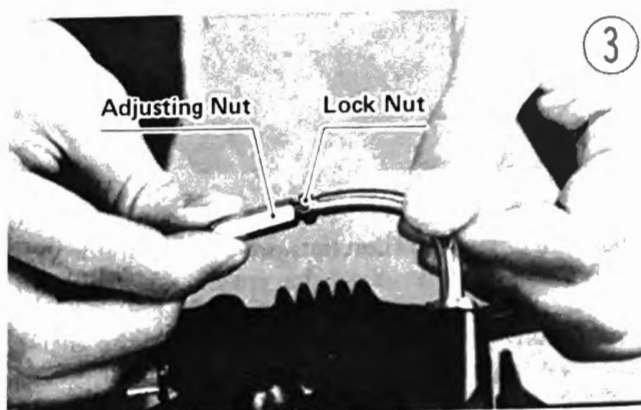

NOTE: If the throttle grip play cannot be adjusted with the adjusting nut at the grip, use the carburetor cable adjuster at the carburetor. After completion of the adjustment, tighten the locknut. In this case, be sure to adjust synchronization between the carburetor and the oil pump.

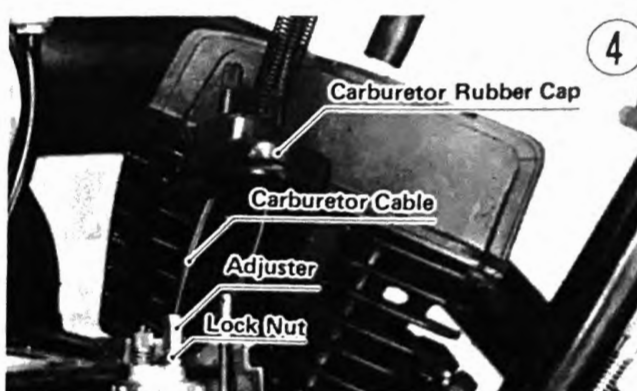

10 ADJUSTMENT

- Turn the handlebar from side to side while idling the engine. If idle speed varies, the throttle control cable assembly may be poorly routed or it may be damaged.


WARNING Operation with improperly adjusted, incorrectly routed, or damaged cables could result in an unsafe riding condition.

- Check the carburetor and oil pump synchronization.
- Install the oil pump cover.


Oil Pump Cable

To check the oil pump cable:

- Warm up the engine, and check the engine idling.
- Remove the oil pump cover, and check to see that the outer cable end of the oil pump cable is fully seated in the cable adjuster. Make sure the tang on the oil pump lever is bent to hold the oil pump cable securely. These checks are necessary to perform following procedures properly.

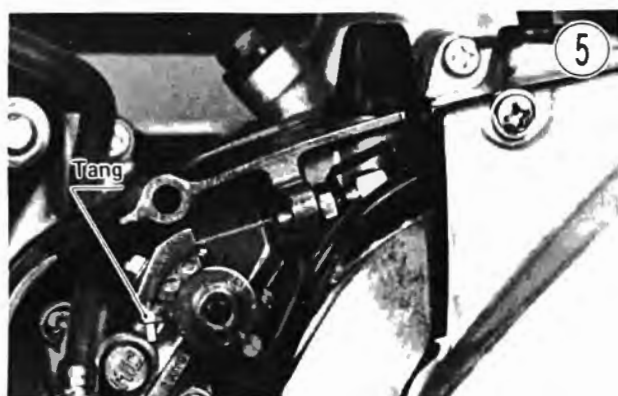

- Check the synchronization between the carburetor and the oil pump while idling the engine. Listening to exhaust noise, gradually open the throttle grip, and stop turning the grip at the point where the engine speed just begins to increase from the idle speed.
- Without changing the position of the throttle grip, check whether or not the mark on the oil pump lever lines up with the mark on the lever stop.

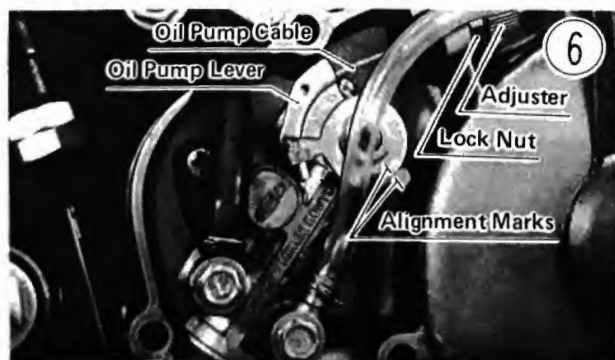

If the oil pump does not synchronize with the carburetor, adjust it as follows.

To adjust the oil pump cable:

- Start the engine.
- Loosen the lock nut at the oil pump cable adjuster, and turn the adjuster so that the marks on the pump lever and the lever stop line up when the idle speed is at the point of increasing.



- Tighten the lock nut.
- Check that the throttle grip has the proper amount of play.
- Install the oil pump cover.

CARBURETOR

Although some internal carburetor parts can be adjusted by replacement, repositioning etc., these adjustments are covered in the Maintenance Section of this manual. The following procedure covers the idling adjustment, which is the adjustment required during periodic maintenance and whenever the idle setting has been disturbed.

When the idle speed is too low, the engine may stall, and when the idle speed is too high, the fuel consumption becomes excessive, and the resulting lack of engine braking may make the motorcycle difficult to control. For a proper fuel/air mixture at idle and low speed, it is important to set the air screw properly when adjusting the idle.

NOTE: The ignition timing must be correct for proper idling adjustment (Pg. 11).


- Turn in the air screw until it seats lightly, and then back it out 1½ turns. This sets the low speed mixture.



- Warm up the engine.
- Adjust the idle speed with the idle adjusting screw to the lowest stable speed obtainable, which will normally be 1,200~1,400 rpm. Turning the idle adjusting screw clockwise lowers engine speed, while turning it counter-clockwise raises it.



NOTE: If the idle speed cannot be lowered by turning the idle adjusting screw, there may be no play in the carburetor cable. Loosen the lock nut on the carburetor cap, and turn the cable adjuster into the cap as necessary. Tighten the lock nut. In this case, be sure to adjust the throttle control cable later.

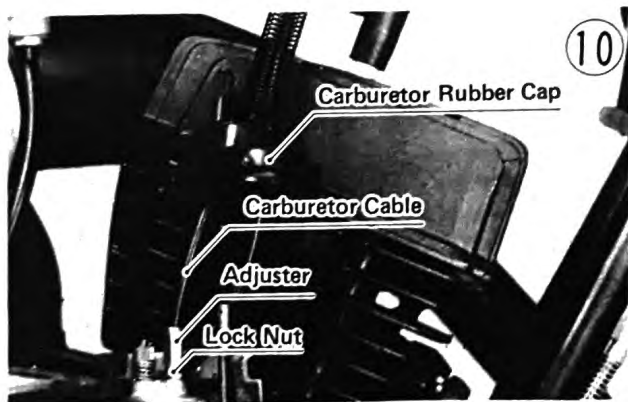

- Open and close the throttle a few times to make sure that the idle speed does not change. Readjust if necessary.

NOTE: With the engine idling, turn the handlebar to each side. If handlebar movement changes the idle speed, the throttle control cable may be improperly adjusted, incorrectly routed, or damaged.


WARNING Operation with an improperly adjusted, incorrectly routed, or damaged cable could result in an unsafe riding condition.

- Adjust the throttle control cable (Pg. 9).

SPARK PLUG

Spark plug electrode wear will widen the plug gap and cause missing and difficulty in starting. Too narrow a gap as a result of maladjustment will also result in poor performance since the small gap will produce only a weak spark.

- Remove the spark plug using a spark plug wrench.
- If the plug is oily or has carbon built up on it, have it cleaned, preferably in a sand-blasting device, and then clean off any abrasive particles. The plug may also be cleaned using a high flash-point solvent and wire brush or other suitable tool. If the spark plug electrodes are corroded or damaged, or if the insulator is cracked, replace the plug. Use the standard spark plug or its equivalent.
- Measure the gap with a wire-type thickness gauge. The gap should be 0.7~0.8 mm; if it is not, bend the outer electrode with a suitable tool to obtain the correct gap.

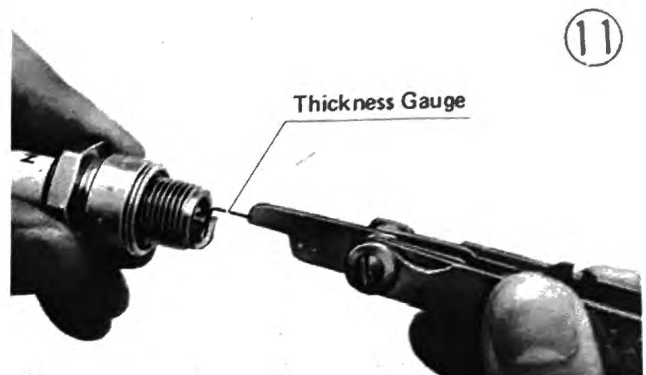

- The spark plug should be tightened with 2.5~3.0 kg-m (18~22 ft-lbs) of torque.

IGNITION TIMING

Incorrect ignition timing can cause poor performance, knocking, overheating, and serious engine damage. Periodic adjustment will be necessary to compensate for wear of parts, and the ignition timing must be checked whenever ignition related parts have been disassembled or replaced.

Correct ignition timing is achieved by adjusting the position of the contact breaker base through the


12 ADJUSTMENT

inspection window of the magneto flywheel. The points should just begin to open when the timing mark on the outer circumference of the flywheel aligns with the timing mark on the left engine cover, or when the piston is positioned 2.58 mm BTDC as measured with a dial gauge. Best performance is achieved by having ignition take place as close as possible to 2.58 mm BTDC, and when precise ignition timing is desired, the dial gauge method should be used. Once the timing has been adjusted, a strobe light may be used to check timing accuracy. There is no adjustment for maximum point gap.


- Remove the left engine cover.
- Inspect the contact breaker points. If they are pitted or dirty repair and clean them.
- Disconnect the white socket and plug from where they connect under the fuel tank. It should not be necessary to remove the fuel tank to reach these leads.
- Rotate the magneto flywheel counterclockwise until the timing mark on the flywheel lines up with the timing mark on the crankcase.




- Connect an ohmmeter (or buzzbox) set to the R x 1 range across the contact points, securing one lead to chassis ground (such as the crankcase) and connecting the other lead to the black magneto lead. Be sure that the ohmmeter leads make good electrical contact.
- Loosen the contact breaker base screw just enough to allow the base to move.

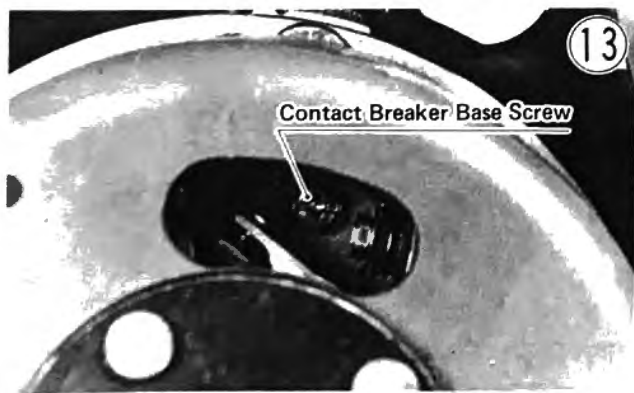

- Use a screwdriver in the pry points to adjust the position of the contact breaker base until the contact breaker points are just at the point of opening. The ohmmeter needle starts to rise when the points just begin to open. Note that total needle travel as the points open is only about 3 Ω .

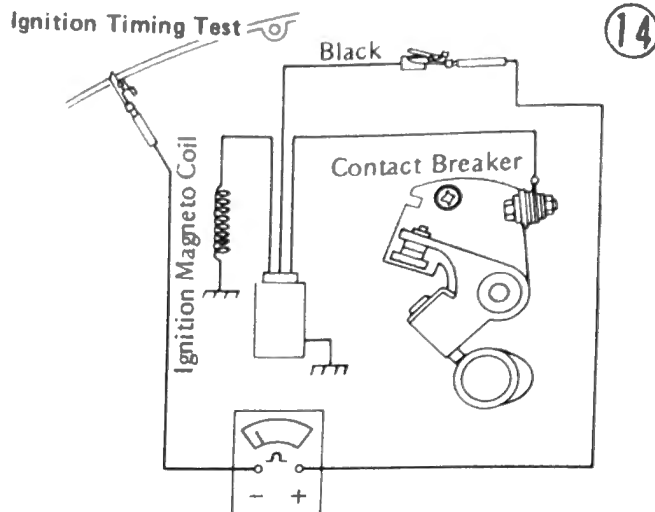

- Once the base seems properly positioned, tighten the base screw, rotate the flywheel a little clockwise, and then slowly rotate it counterclockwise. When the needle starts to rise, the timing marks should be aligned. If they are not, readjust and recheck until the correct contact breaker base position is reached.
- Disconnect the ohmmeter, and reconnect the leads that were disconnected. A strobe light may be used to check whether or not the ignition timing is correctly set.
- Connect the light in the manner prescribed by the manufacturer. One example is shown below.

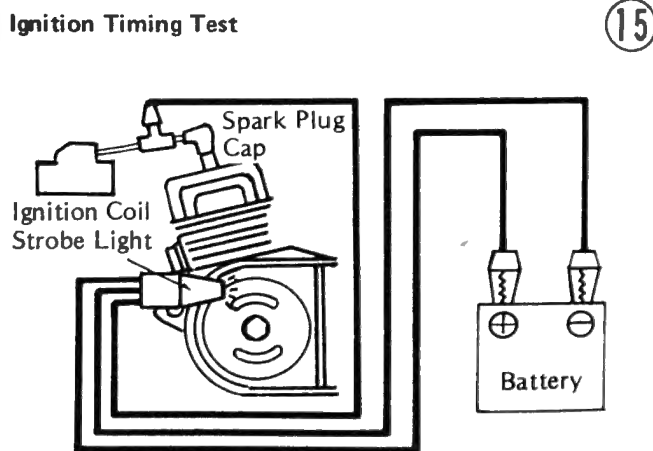

- With the engine idling, direct the light at the timing mark on the left engine cover. If the marks are aligned when the light flashes, the ignition timing is correctly set.

NOTE: For even better accuracy, a dial gauge can be used to set the position of the piston. Instead of aligning the timing marks, the following steps can be substituted.

- Remove the spark plug from the cylinder head, and mount a dial gauge and TDC finder "A" (special tool) in the spark plug hole.
- Rotate the flywheel to set the piston at exact TDC, and set the dial to zero.



- Rotate the flywheel clockwise until the dial gauge reads about 3 mm and then counterclockwise until the dial gauge reads 2.58 mm. At this point the piston is properly positioned so that the contact breaker base can be adjusted to set the timing using an ohmmeter or another timing device.

- When replacing the spark plug, tighten it with 2.5~3.0 kg-m (18~22 ft-lbs) of torque.

NOTE: When setting the ignition timing using a dial gauge to determine piston position, the flywheel timing marks cannot be relied upon to check the timing and the dial gauge reading instead of the timing marks is referred to throughout the adjustment. Before checking with a strobe light, first make a new timing mark on the flywheel directly under the mark on the left engine cover when the piston has been set to 2.58 mm BTDC.

CLUTCH


Stretching of the clutch cable and wear of the clutch plates and push rod cause the clutch lever to develop excessive play. Too much play will prevent the lever from fully disengaging the clutch and will result in shifting difficulty and possible clutch or transmission damage. Most of the play must be adjusted out, but a small amount has to be left to ensure that the clutch will engage fully without slipping.

Wear of the clutch plates and push rod also increases the angle between the clutch release lever and the clutch cable. Since it is important that this angle be 80° to obtain the most effective stroke for disengaging the clutch, check the angle in accordance with the periodic maintenance chart (Pg. 118), and adjust if necessary.

- Remove the choke knob, and slide the carburetor rubber cap up out of place.
 - Remove the carburetor cover.
 - To determine whether or not the clutch requires adjustments, first check that the mark on the clutch release lever aligns with the mark on the outer gear.
 - Next check that the clutch lever has 2~3 mm of play.
- If any one of the above checks reveals improper adjustments, adjust the clutch as follows:
- Loosen the clutch release lever lock nut, and back out the adjusting screw 3 or 4 turns.



- Slide the clutch lever dust cover out of place.
- Loosen the lock nut just enough so that the adjuster will turn freely, and then turn the adjuster to make a 5 ~ 6 mm gap between the adjuster and lock nut.

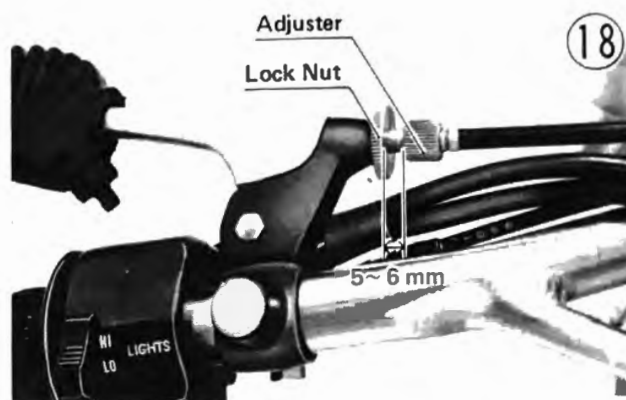


- Loosen the lock nut at the middle of the clutch cable.



- Check that the mark on the clutch release lever is aligned with the mark on the outer gear.
- If necessary, align the marks by turning the adjusting nut at the middle of the clutch cable, and tighten the lock nut.
- Turn the clutch adjusting screw in to where it suddenly becomes hard to turn, and then tighten the lock nut.
- Turn the adjuster at the clutch lever so that the clutch lever will have 2 ~ 3 mm of play, and tighten the lock nut.

14 ADJUSTMENT

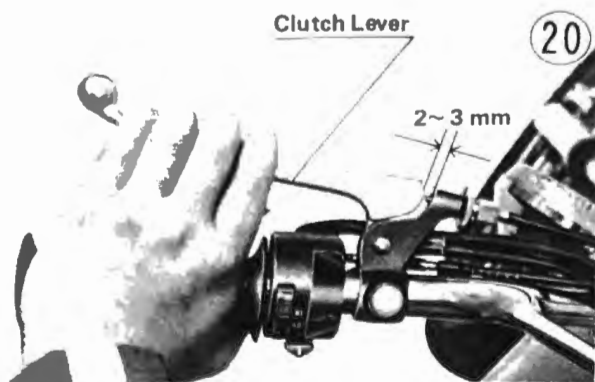

- Replace the carburetor rubber cap and carburetor cover.
- When adjustment is finished, start the engine and check that the clutch does not slip and that it releases properly.
- For minor corrections while riding, use the adjuster at the clutch lever.
- Replace the clutch lever dust cover.

STEERING

For safety, the steering should always be kept adjusted so that the handlebar will turn freely but not have excessive play.

If the steering is too tight, it will be difficult to turn the handlebar quickly, the motorcycle may pull to one side, and the steering stem bearings may be damaged. If the steering is too loose, the handlebar will vibrate and the motorcycle will be unstable and difficult to steer in a straight line.

To check the steering adjustment, first support the motorcycle so that the front wheel is raised off the ground. Push the handlebar lightly to either side; if it continues moving under its own momentum the steering is not too tight. Squatting in front of the motorcycle, grasp the lower ends of the front fork at the axle and shake it back and forth; if no play is felt, the steering is not too loose.




- Loosen the steering stem head bolt and the stem clamp bolt.



- Using the stem wrench, tighten the steering stem lock nut with 1.8 ~ 2.2 kg-m (13 ~ 16 ft-lbs) of torque.



- Tighten down the steering stem head bolt to 3.0 ~ 5.0 kg-m (22 ~ 36 ft-lbs) of torque.
- Tighten the stem clamp bolt with 1.6 ~ 2.2 kg-m (11.5 ~ 16 ft-lbs) of torque.
- Loosen the lower clamp bolts (2) on the left and right shock absorbers to let the tubes reseal themselves and then retighten the bolts with 2.6 ~ 3.5 kg-m (19 ~ 25 ft-lbs) of torque.

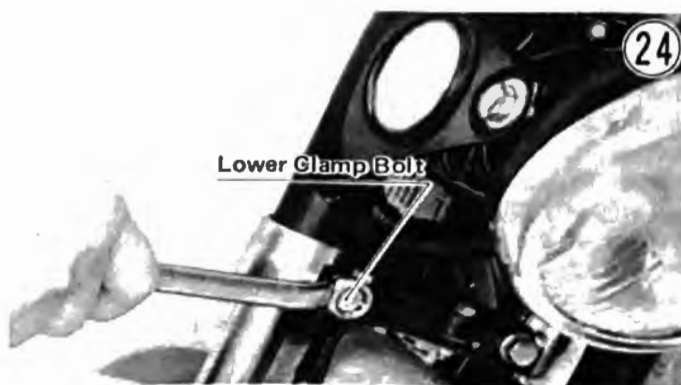


- Check the steering again and readjust it if necessary.

BRAKES

Brake lining wear, drum wear, and cable stretch cause the brakes to go out of adjustment, increasing lever and pedal play and decreasing braking effectiveness. Brake adjustment to compensate for this consists of correcting the cam lever angle and adjusting the front brake lever and rear brake pedal travel.


Once the brakes have been adjusted, spin or turn the wheels to check for drag. If any drag is heard or felt, disassemble the brake (Pg. 44 and 46), and inspect for wear or damage (Pg. 91). Also, if the brake lever or pedal does not return to its rest position quickly upon being released, inspect the brake for wear or damage.

On the outside of both the front and rear brake panels there is a brake lining wear indicator. Whenever the indicator has gone past **USABLE RANGE**, the brake shoes must be replaced immediately and the other brake parts examined. Adjustment alone cannot compensate for the wear of a brake worn.

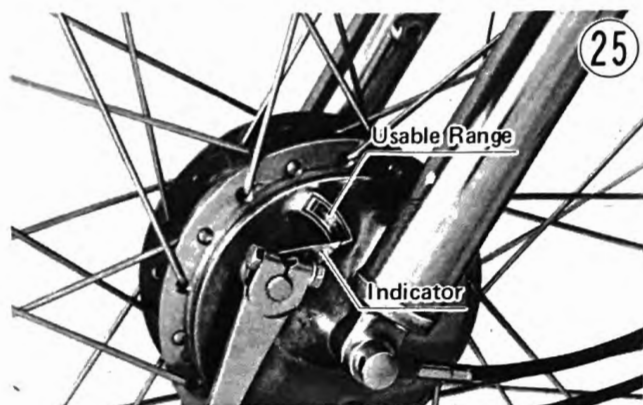

Front and Rear Brake Cam Lever Angle


•When the brake is fully applied, the brake cam lever should come to an $80^{\circ} \sim 90^{\circ}$ angle with the threaded extension of the brake cable or rod. If it does not, loosen the cable adjusting nut, remount the cam lever at a new position on the shaft for the proper angle, and then adjust cable play.

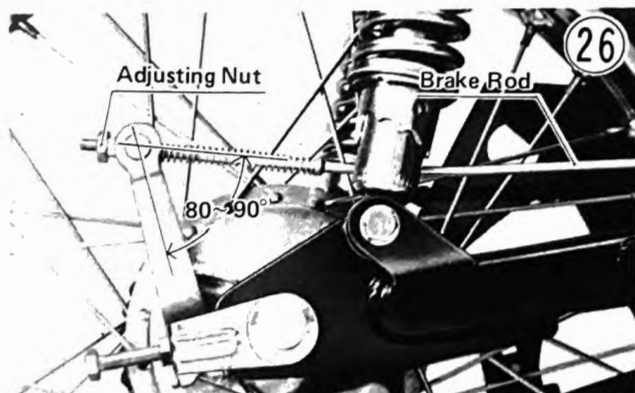



CAUTION: Since a cam lever angle greater than 90° reduces braking effectiveness, this adjustment should not be neglected. When remounting the cam, be sure that the position of the indicator on the serrated shaft is not altered. The change in cam lever angle is caused by wear of internal brake parts. Whenever the cam lever angle is adjusted, also check for drag and proper lever or pedal operation, taking particular note of the brake lining wear indicator position. In case of doubt as to braking effectiveness, disassemble and inspect all internal brake parts. Worn parts could cause the brake to lock or fail.

Front Brake Lever

•Loosen the lock nut at the front brake lever, screw the adjuster fully in, and tighten the lock nut.

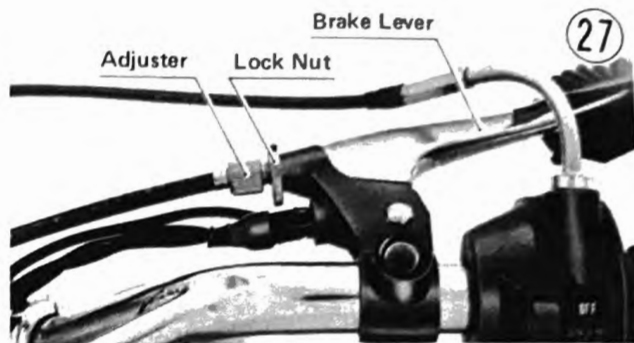


•Turn the adjuster on the lower end of the front brake cable so that the brake lever has 4 ~ 5 mm of play.

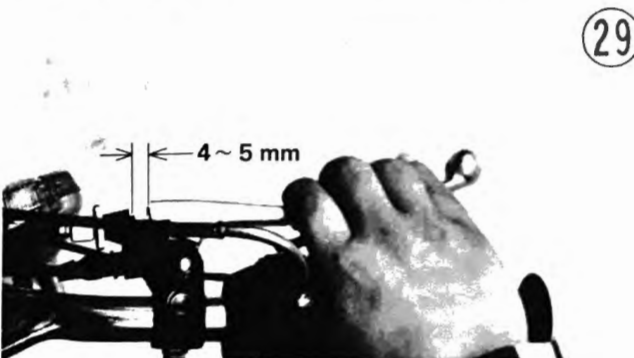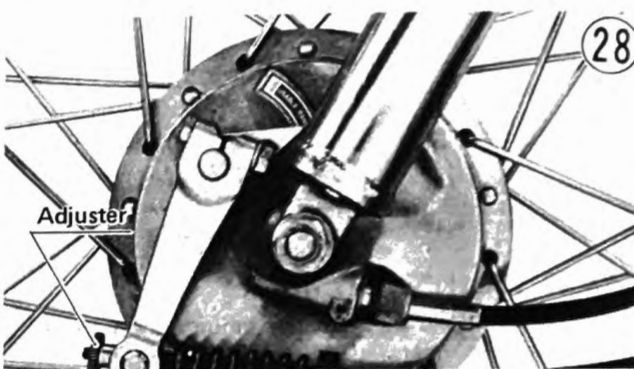


•Check for brake drag.
•For additional adjustment or minor corrections, use the adjuster at the front brake lever.

Rear Brake Pedal

•Screw in the adjusting nut on the end of the brake rod so that the brake pedal has about 20~30 mm of travel from the rest position to the fully applied position.

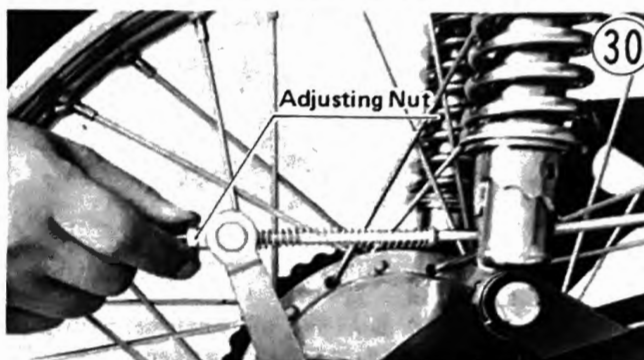

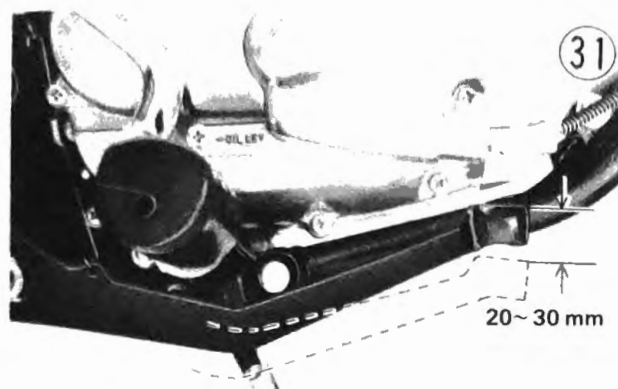


- Check for brake drag.
- Check the brake light switch adjustment.

BRAKE LIGHT SWITCH

The front brake light switch mounted on the front brake lever, is operated by simple electrical contact and does not require adjustment. However, the rear brake light switch, activated by a wire spring attached to the brake pedal, will require adjustment if the spring has stretched or if the spring or brake pedal has gotten bent or warped.

Check the operation of the switch by turning on the ignition switch and depressing the brake pedal. The brake light should go on after 15 mm of pedal travel, or shortly before the brake pedal reaches the fully applied position.

- Loosen the two switch mounting nuts.
- Move the switch up or down so that the brake light will go on after the correct amount of brake pedal travel. A higher switch position will make the light go on after less travel.

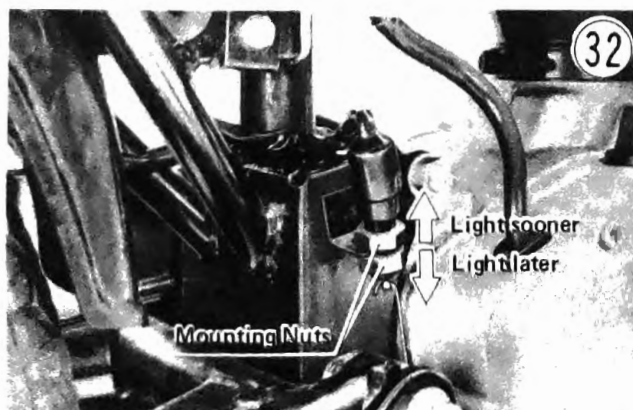


- Tighten the two mounting nuts when the switch is in the correct position.

CAUTION: To avoid damaging the electrical wiring, do not turn the switch body during adjustment.

DRIVE CHAIN


Chain and sprocket wear causes the chain to become loose and results in power loss, increased wear, and noise. A loose chain may break or slip off the sprockets during operation. A chain that is too tight will also wear quickly and may possibly break.

First turn the rear wheel to find the position where the chain is tightest, and make the adjustment using this position. With the motorcycle on its side stand, the chain should have a maximum of about 15~20 mm of vertical movement at its greatest point. If there is less than 15 mm or more than 25 mm slack, adjust the chain.

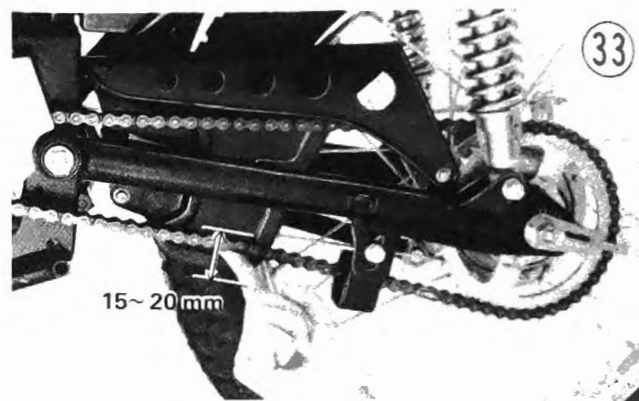


CAUTION: A chain worn past the service limit should be replaced. Such wear cannot be adequately compensated for by adjustment.


- Loosen the torque link nut.

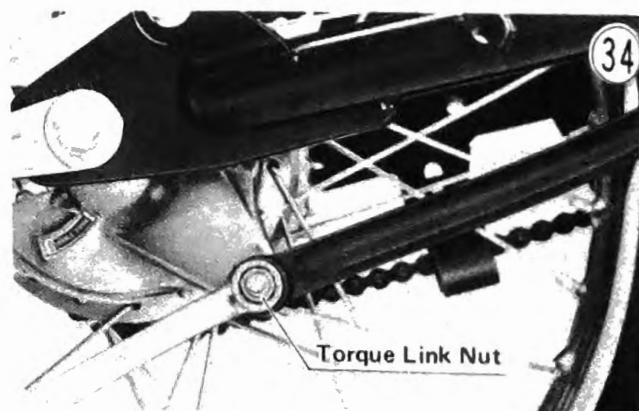

- Loosen the rear axle nut and sleeve nut.

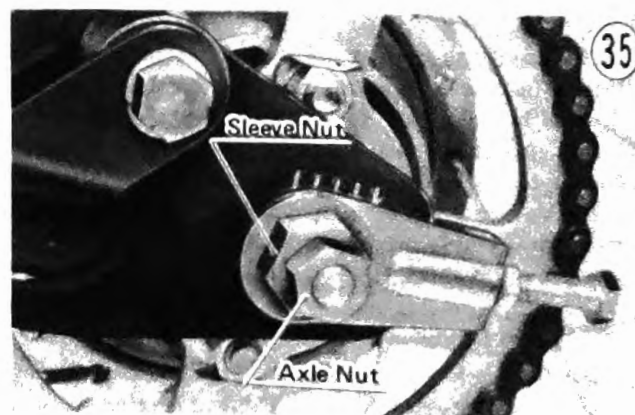

- If the chain is too tight, first back out the right and left chain adjusting bolts or nuts and then kick the wheel forward until the chain becomes overly loose.
- Turn in the right and left chain adjusting bolts evenly until the chain has the correct amount of slack. To keep the chain and wheel aligned, the notch in the left chain adjuster must come to the same swing arm mark that the right chain adjuster notch comes to.

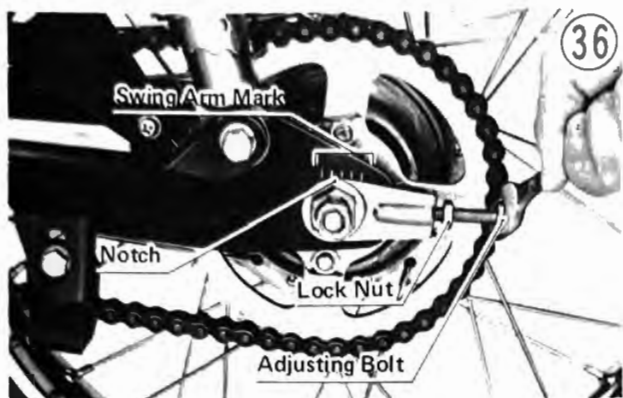


- Tighten both chain adjuster lock nuts, and then tighten the coupling sleeve nut securely.
- Tighten the axle nut with 3.4~4.6 kg-m (25~33 ft-lbs) of torque. Rotate the wheel, measure the amount of slack, and readjust if necessary.
- Tighten the torque link nut with 2.6~3.5 kg-m (19~25 ft-lbs) of torque.
- Check the rear brake (Pg. 14) and rear brake light switch (Pg. 16) adjustments.

REAR SHOCK ABSORBERS

The rear shock absorbers can be adjusted to one of 5 positions, to suit riding conditions. They can be left soft for average riding but should be adjusted slightly harder for high speed riding or for riding on bad roads.

Adjustment is made by turning the adjusting sleeve with a hook spanner. The higher the adjusting sleeve is positioned, the harder the shock absorber. Be sure to turn both left and right shock absorbers to the same position in order to maintain stability.

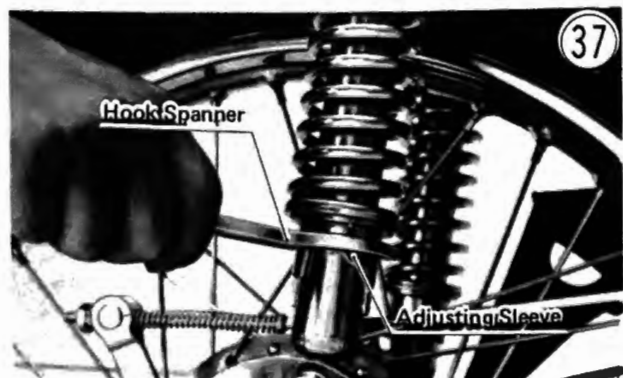

HEADLIGHT

The headlight beam is adjustable both horizontally and vertically. If not properly adjusted horizontally, the beam will point to one side rather than straight ahead. If adjusted too low vertically, neither low nor high beam will illuminate the road far enough ahead. If adjusted too high vertically, high beam will fail to illuminate the road close ahead, and low beam will blind oncoming drivers.

Horizontal Adjustment:

- Turn in or out the small screw on the headlight rim until the beam points straight ahead.



Vertical Adjustment:

- Loosen the headlight housing mounting bolts just enough so that the headlight can be moved.



- Move the headlight up or down by hand to where the vertical aim is correct.
- Tighten the headlight housing mounting bolts.

HORN

The horn contacts wear down after long use and will need to be adjusted from time to time. Turning out the adjusting screw compensates for contact wear. If satisfactory horn performance cannot be obtained by this

18 ADJUSTMENT

adjustment when the rest of the electrical system is functioning properly, the horn must be replaced as it cannot be disassembled.


CAUTION: Do not turn the adjusting screw out too far since doing so will damage the horn spring and increase the horn current, possibly burning out the horn coil.

- Disconnect the brown lead from the horn and connect an ammeter into the circuit in series. The + ammeter lead goes to the brown lead, and the – ammeter lead goes to the horn terminal.
- Turn on the ignition key, and keep the horn button pressed while turning the horn adjusting screw. Adjust for a healthy horn sound while keeping the current as close as possible to 1.5 amperes. In no event should the current be allowed to exceed 2.2 amperes since at higher amperage the horn life is seriously shortened.



NOTE: The horn will not sound properly if it is mounted incorrectly or if any cables or other parts are touching it.

Horn Current Measurement

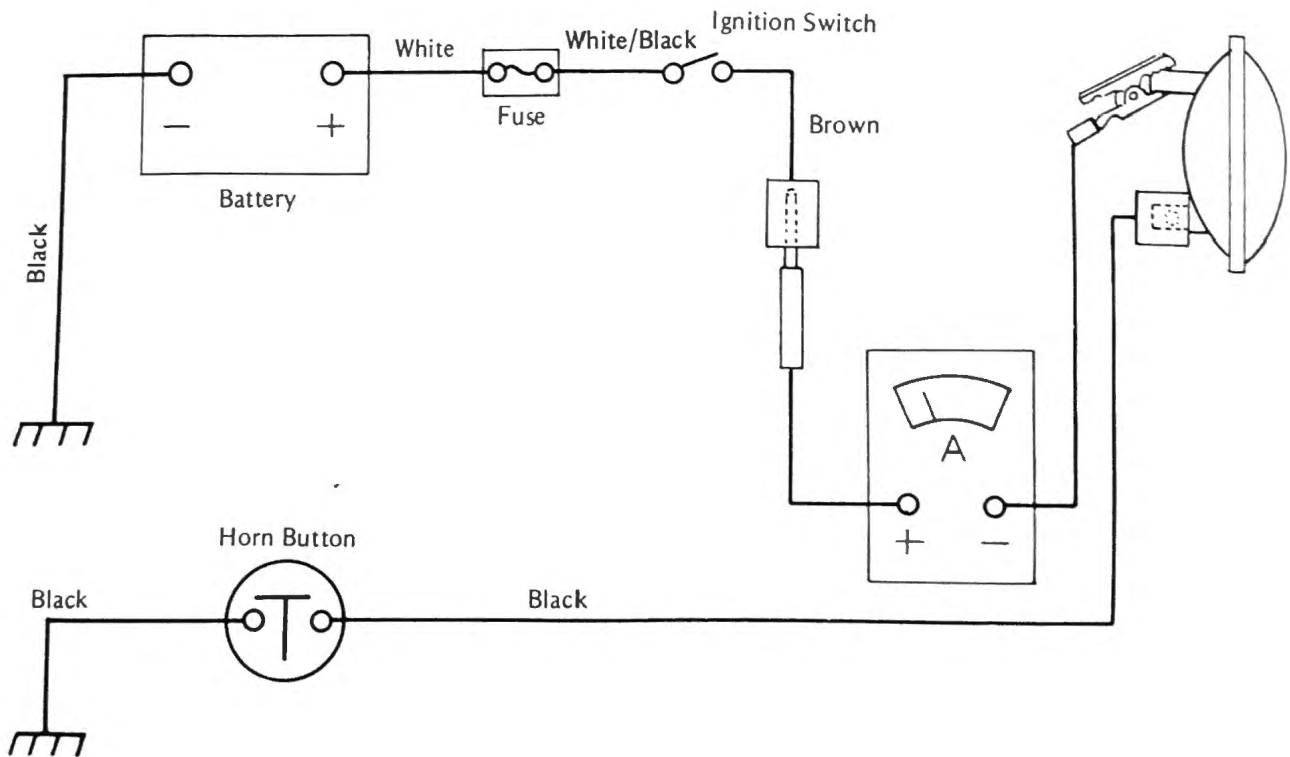

Disassembly

INTRODUCTION TO DISASSEMBLY

Detail has not been spared in this section so that the motorcycle can not only be taken apart but also put back together properly as well. Photographs, diagrams, notes, cautions, and detailed descriptions have been included wherever felt necessary. Nevertheless, even a detailed account has limitations; a certain amount of basic knowledge is also required for successful work.

Especially note the following:

(1) Force

Common sense should dictate how much force is necessary in assembly and disassembly. If a part seems especially difficult to remove or install, stop and examine what may be causing the problem. Whenever tapping is necessary, tap lightly using a plastic hammer. Use an impact driver for screws — particularly for the removal of screws held by a locking agent in order to avoid damaging the screw heads.

(2) Torque

The torque values given in this Service Manual should always be adhered to. Either too little or too much torque may lead to serious damage. Use a good quality, reliable torque wrench.

(3) Lubricant

Don't use just any oil or grease. Some oils and greases in particular should be used only in certain applications and may be harmful if used in an application for which they are not intended.

(4) Lubrication

Engine wear is generally at its maximum while the engine is warming up and before all the rubbing surfaces have an adequate lubricative film. During assembly oil should be applied to any bearing surface which has lost its lubricative film. Old grease and dirty oil should be cleaned off. Deteriorated grease has lost its lubricative quality and may contain abrasive foreign particles.

(5) Press

A part installed using a press or driver, such as a wheel bearing, should first be coated with oil on its outer or inner circumference so that it will go into place smoothly.

(6) Oil Seals

An oil seal guide is required for certain oil seals during installation to avoid damage to the oil seal lips. Before a shaft passes through an oil seal, apply a little oil on the lips to reduce rubber to metal friction.

(7) Gasket

When in doubt as to the condition of a gasket, replace it with a new one. The fitting surfaces around the gasket should be free of foreign matter and perfectly smooth to avoid oil or compression leaks.

(8) Edges

Watch for sharp edges, especially during major engine disassembly and assembly. Use a clean piece of thick cloth when lifting the engine or turning it over.

ENGINE


Removal:

- With the motorcycle fully perpendicular to the ground, place an oil pan beneath the engine, and remove the engine drain plug so that all the transmission oil drains out. The drain plug may be replaced later either after all the oil is drained and before the engine is removed, or during engine installation.



20 DISASSEMBLY


- Turn the fuel tap to the "OFF" position, slide down the hose clamp, and pull the fuel hose off the tap.
- Release the seat catch, and open the seat. Unhook the rubber retaining band, and pull the fuel tank off toward the rear.
- Remove the bolts (2) from the muffler exhaust collar.
- Remove the bolts (2) that connect the muffler to the frame and then remove the muffler and gasket.

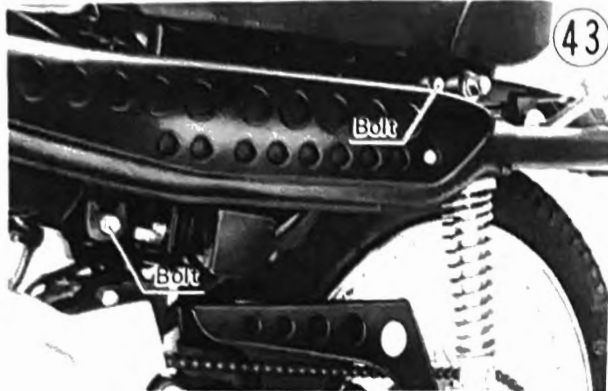

- Check to see that the transmission is in neutral.
- Mark the position of the shift pedal so that it can later be replaced on the shaft in the same position (normally about 10° below the horizontal).




- Take out the shift pedal bolt and remove the shift pedal.
- Remove the left engine cover, being careful not to damage the oil seal.
- Pull off the oil tank cover, remove the engine oil tank screws, and take off the oil tank.
- Disconnect the magneto output leads from where they connect under the frame top tube, first noting whether it is the light blue lead or the yellow/green lead that is not being used.

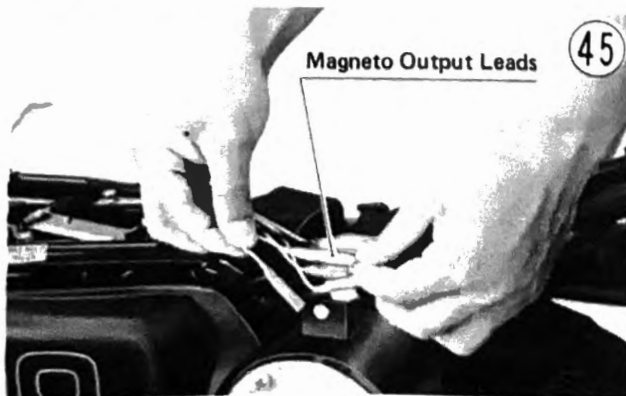

- Undo the strap that holds the wiring to the frame.
- With a screwdriver or some other suitable tool, undo the clip carefully from the drive chain master link, and remove the master link.



- Free the drive chain from the sprockets, being careful that the chain does not get dirty from contact with the ground.
- Remove the air cleaner mounting screw.
- Loosen the air cleaner duct clamp screw and remove the air cleaner assembly.
- Disconnect the spark plug lead.
- Prop the kick pedal out of the way with a screwdriver to facilitate removal of the oil pump cover.

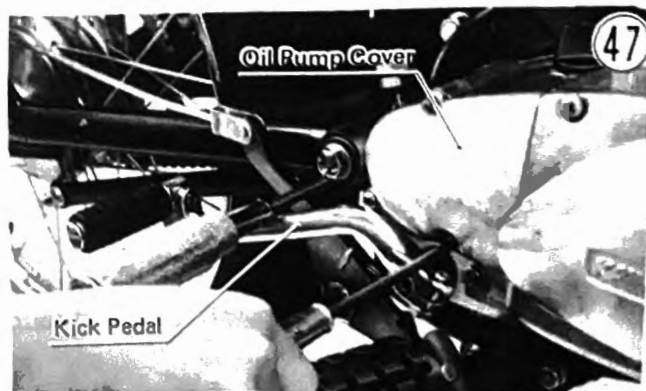


- Take off the screws (3) and remove the oil pump cover.
- Slide up the hose clamp and pull off the oil pump inlet hose. Use one of the oil pump cover screws to plug the hose, and pull the hose and its rubber fitting free from the right engine cover.



- Remove the choke knob, and slide the carburetor rubber cap up out of place.




- Remove the carburetor cover and its gasket.
- Bend out the tab on the oil pump lever and free the end of the oil pump cable from the oil pump lever.

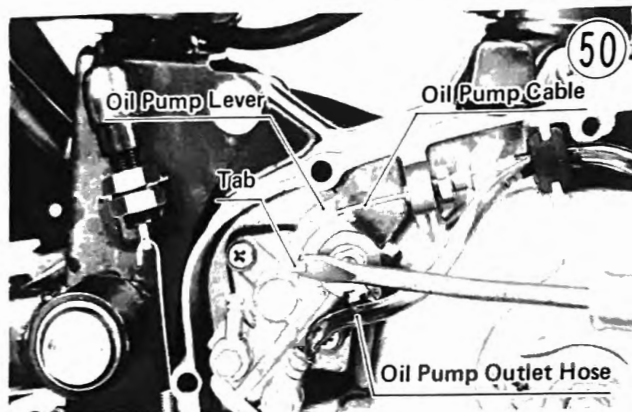


- Free the oil pump outlet hose from the rubber fitting.
- Unlock the lock nut and screw in the oil pump adjuster.
- Pull the oil pump cable with the rubber fitting free from the right engine cover.
- Slide the hose clamp up on the fuel hose, and disconnect the hose from the carburetor.
- Remove the rubber grommet from the front of the right engine cover, and insert a screwdriver through the hole to loosen the carburetor mounting bolt.




- Pull off the carburetor and let it hang free.
- Remove the carburetor overflow drain from the bottom of the right engine cover.

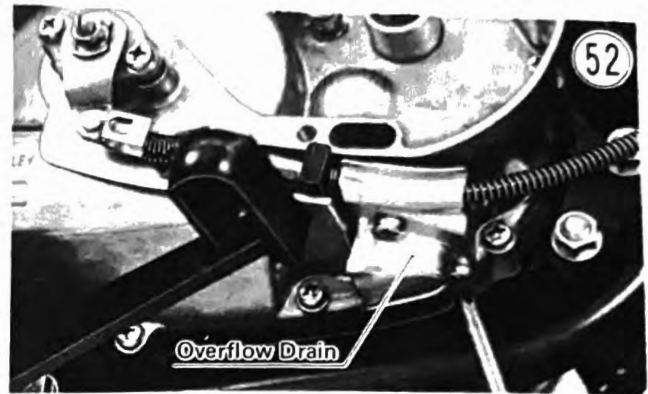

- Pry open the tab that holds the tip of the clutch cable in place.

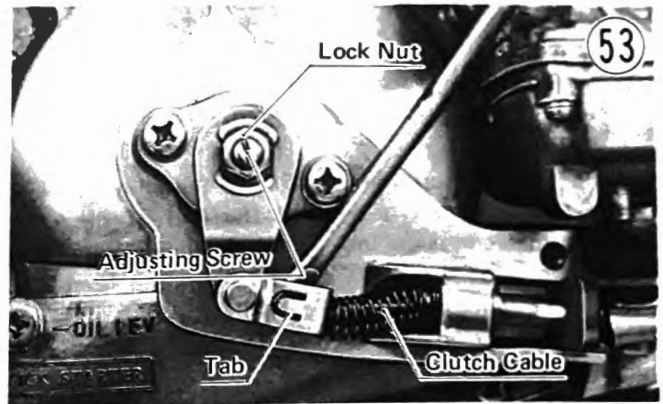

- Loosen the clutch release lock nut, back out the screw a couple of turns, and free the tip of the clutch cable from the clutch release lever.
- Remove the spring from the clutch cable and pull the cable free from the right engine cover.
- Take the nuts (4) off the engine mounting bolts.
- Remove the engine mounting bolts, raising the engine up a little as necessary to keep from damaging the bolt threads.

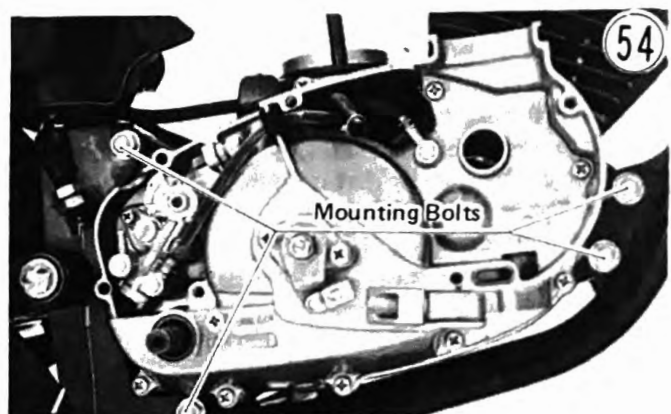

- Remove the engine from the frame through the right side, first lifting up on the front so that it clears the front bracket and then lifting up on the rear.


Installation

- Put the engine back into the frame from the right side.
- Lifting the engine as necessary so that the mounting bolt threads are not damaged, insert the engine mounting

22 DISASSEMBLY

bolts (4) from the left side. Replace the lock washers and nuts, and tighten each nut with 2.6 ~ 3.5 kg-m (19 ~ 25 ft-lbs) of torque.

- Slip the oil pump outlet hose into the rubber fitting. Insert the oil pump inner cable into the adjuster and push the rubber fitting back into place.

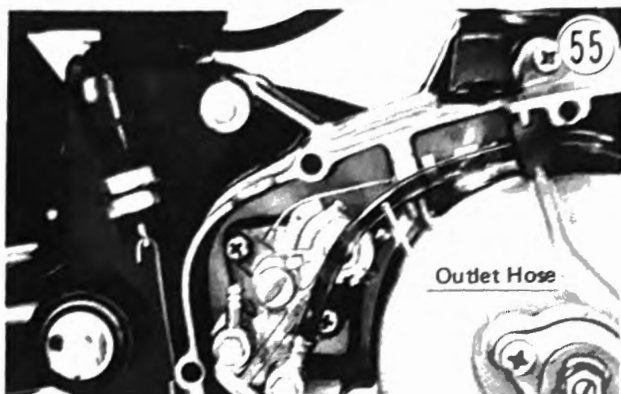


- Attach the oil pump inner cable to the oil pump lever, and bend the tab back onto the end of the cable.
- Check to see that the lower mark on the oil pump lever lines up with the mark on the oil pump lever stop, adjusting it if necessary (Pg. 10).



- Run the clutch cable through the right engine cover. Replace the spring and connect the tip of the clutch cable to the clutch release lever.
- Bend back the tab so that it holds the tip of the clutch cable.
- Adjust the clutch (Pg. 13).
- Replace the carburetor overflow drain at the bottom of the right engine cover.
- Replace the carburetor. Tighten the mounting bolt and put the rubber grommet back into the front of the right engine cover.
- Fit the fuel hose back onto the carburetor, and slide down the clamp.
- Using a new carburetor cover gasket, replace the carburetor cover and tighten the screws.
- Slide the carburetor rubber cap down, and install the choke knob.
- Run the magneto output leads and hold it with a clamp. Reconnect the magneto output leads that were disconnected.

- Note that the light blue lead or the yellow/green lead is not connected.
- Replace the oil tank and route the oil tank breather tube, taking care not to pinch or twist the tube.
- Remove any plug used to close the oil pump inlet hose, and connect the hose to the oil pump and slide back the hose clamp.
- Replace the air cleaner assembly. Tighten the air cleaner mounting bolt and the air cleaner duct clamp screw. The bolt has a lock washer and flat washer.
- Fit the drive chain back onto the sprockets with the ends at the rear sprocket.

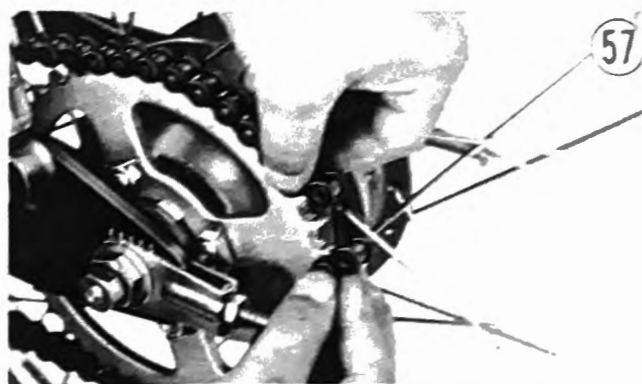

- Replace the chain master link with pliers. The direction of the master link clip should be as shown in Fig. 58.



- Replace the left engine cover using the shift shaft oil seal guide (special tool), to protect the oil seal in the cover, and tighten the screws (3).



- Mount the shift pedal in the position marked during disassembly, and then tighten the bolt.
- Fit the gasket and the end of the muffler into the exhaust port, and attach the muffler to the frame tightening the muffler mounting bolts (2) loosely. The bolts have lock washers.

- Fit the exhaust collar into place and tighten the bolts (2) evenly to avoid exhaust leakage.
- Tighten the muffler mounting bolts (2).
- Replace the fuel tank.
- Attach the fuel hose to the fuel tap and slide the clamp into place.
- Replace the seat.
- Replace the oil tank cover.
- Connect the spark plug lead.
- Adjust the chain (Pg. 16).
- Bleed the oil pump (Pg. 10).
- Replace the oil pump cover and tighten the screws (3).

ENGINE OIL TANK

Removal:

- Replace the seat catch, and open the seat.
- Pull off the oil tank cover.
- Remove the engine oil tank mounting screws (3) and free the oil tank and its breather tube from the frame. With the tank upside down and the breather tube elevated, pull off the oil tank outlet tube. Fit the end of the breather tube onto the oil tank outlet to close it.



Installation:

- With the oil tank positioned to avoid spillage, pull the breather tube off the oil tank outlet, connect the outlet tube to the outlet, and fit the oil tank back into the frame.
- Route the oil tank breather tube through the bracket on the outside front of the rear fender, taking care not to pinch or twist the tube.
- Replace the oil tank mounting screws. Each screw has a lock washer and flat washer.
- Push the seat into place.
- If any air has gotten trapped in the outlet hose, bleed the oil pump (Pg. 84).
- Replace the oil tank cover.

AIR CLEANER ELEMENT

Removal:

- Remove the air cleaner cap screws (2) and take off the air cleaner cap.
- Pull out the air cleaner element.



Separate the spring filter and the paper filter.

Installation:

- Fit the spring filter over the paper filter.
- Insert the element into the air cleaner housing.
- Replace the air cleaner cap, and tighten the screws. Each screw has a flat washer.


MUFFLER

Removal:

- Remove the nuts (2) from the muffler exhaust collar.
- Remove the bolts (2) that connect the muffler to the frame and then remove the muffler and gasket.



NOTE: If it should be necessary to remove the exhaust collar from the muffler, the collar insert must be first gripped in a vice grip or with pliers, and then freed from the collar. Next, broaden the gap on the insert, and remove the insert and the collar.

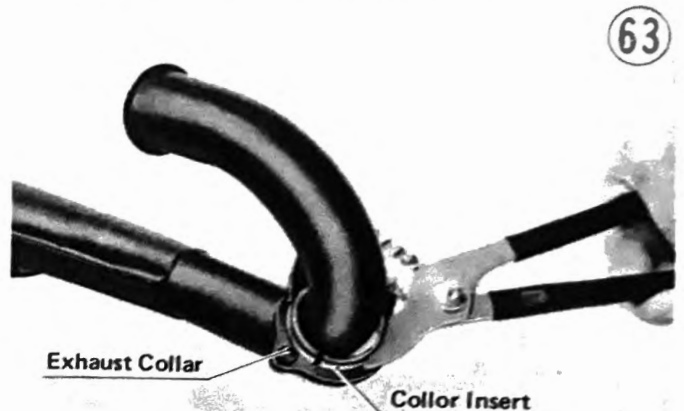

24 DISASSEMBLY

Installation:

- Fit the gasket and muffler into the cylinder exhaust port, and loosely tighten the bolts that connect the muffler to the frame. Each bolt has a lock washer and flat washer.
- Replace the muffler exhaust collar nuts, tightening them evenly together to avoid exhaust leakage.
- Tighten the muffler mounting bolts.

CYLINDER HEAD, CYLINDER

Removal:

- Remove the muffler (Pg. 23).
- Disconnect the spark plug lead from the spark plug.
- Remove the cylinder head nuts (4), and remove the cylinder head and gasket.
- Lift off the cylinder and the cylinder base gasket. If necessary, lightly tap around the base of the cylinder with a plastic mallet, taking care not to damage the cooling fins.



- If there will be a time lapse before reinstallation, cover the cylinder base hole with a clean cloth to prevent dirt or moisture from entering.

Installation:

- Replace the cylinder base gasket with a new one.
- Apply a little 2-stroke oil to the piston rings and the inside surface of the cylinder.
- Set the piston at BDC and fit the base of the cylinder over the rings, pressing in on opposite sides of the rings as necessary. Be certain that the rings do not slip out of their proper positions. The pin in each piston groove must be between the ends of the piston ring.




- Replace the cylinder head gasket on the cylinder so that the gasket holes perfectly match the cylinder bore and stud holes. Only one of the four possible positions is correct.
- Put on the cylinder head, and put on first the flat washers (4), next the lock washers (4), and then the cylinder head nuts. Cross tighten the cylinder head nuts evenly with 2.2 kg-m (16 ft-lbs) of torque.
- Attach the spark plug lead to the spark plug.
- Mount the muffler on the frame (Pg. 23).

PISTON, PISTON RINGS

Removal:

- Remove the cylinder head and cylinder (Pg. 24).
- Wrap a clean cloth around the base of the piston to secure it in position for removal and so that no parts fall into the crankcase.
- Remove one of the piston pin snap rings.

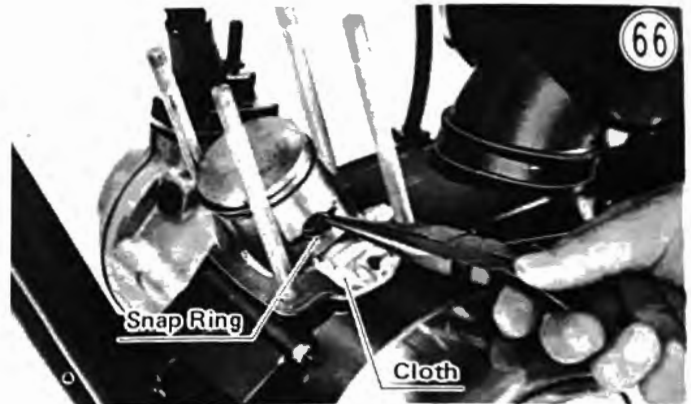

- Using the piston pin puller and adapter "A" (special tools), remove the piston pin from the side the snap ring was removed.



An alternate means of removing the piston pin is as follows: insert a bolt of appropriate size through the pin, screw a nut on the end, and then pull on the head of the bolt.

- Remove the piston and the connecting rod small end needle bearing.
- Remove both piston rings with the piston ring pliers (special tool). If the special tool is not available, spread the ring open with the thumbs and then push up on the opposite side of the ring to remove it.




68

6. Apply a little oil to the piston pin before inserting it.
7. Use a new piston pin snap ring in place of every one that is removed since removal weakens and deforms the ring. After installation, turn the snap ring so that its opening does not coincide with either groove in the side of the piston.

OIL PUMP

Removal:

- Hold the kick pedal out of the way with a screwdriver to facilitate removal of the oil pump cover (Fig. 47).
- Remove the oil pump cover.
- Slide up the hose clamp, and pull off the oil pump inlet hose. Use one of the oil pump cover screws to plug the hose and keep oil from leaking out.

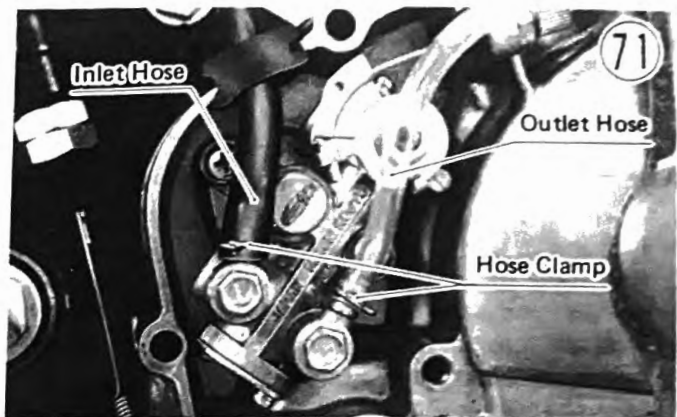

- Bend out the tab on the oil pump lever and free the end of the oil pump cable from the oil pump lever.
- Slide up the hose clamp, and pull off the oil pump outlet hose.
- Remove the screws (2) which hold the oil pump onto the right engine cover, and remove the oil pump and the oil pump gasket.

Installation Notes:

1. Apply oil to the connecting rod small end needle bearing before insertion.
2. If a new piston is used, piston to cylinder clearance changes (Pg. 69). Also, when a new piston or piston pin is used, check that the piston to pin clearance is 0.002 ~ 0.011 mm.
3. Install the piston rings so that the correct side (marked "N") faces up (Fig. 69).

69



4. When replacing the piston rings by hand, first fit one end of the piston ring against the pin in the piston groove, spread the ring opening with the other hand, and then slip the ring into the groove.
5. The arrow on the top of the piston must point toward the front.

70



Installation:

- When mounting the oil pump, note the position of the notch on the oil pump gear shaft, and then turn the oil pump shaft so that it will fit into the notch.
- Put the oil pump and gasket back into place and tighten the mounting screws. There is a copper washer for each screw.
- Connect both inlet and outlet hoses back onto the oil pump. Be sure that the hoses do not get mixed up (Fig. 71).
- Attach the oil pump inner cable on the oil pump lever, and bend the tab back onto the end of the cable.
- Check to see that the lower mark on the oil pump lever lines up with the mark on the oil pump lever stopper, adjusting it if necessary (Pg. 10).
- Bleed the oil pump (Pg. 84).
- Fit the oil pump cover back into its proper position, and replace the screws (3).

26 DISASSEMBLY

Disassembly:

- Wrap a piece of cloth around the end of the oil pump shaft (17) to protect it, and pull it out with pliers. A copper spacer (16) will also come out.
- Pull the bushing (19) off the pump shaft. The O ring (18) and oil seal (20), if worn or damaged, can be removed for replacement with a small hook.
- Pressing down on the plunger cap (8) so that the cap will not be thrown off by the spring inside, remove the two plunger cap screws (10), lock washer (9) and the cap.
- Remove the spring seat (6), spring (5), valve sleeve stopper (7), and O ring (11).
- Remove the cap (13) on the other side. If the O ring (12) needs to be replaced, it may be pulled out with a small hook.
- Insert a thin rod past the control cam (22), and push out the plunger follower (4), plunger (2), and valve sleeve (3).
- Remove the control lever nut (27) and remove the lever (24), washer (25), and spring (23).
- Pull out the control cam (22). If the V ring (21) on the control cam needs to be replaced, it may be pulled off with a small hook.

Assembly Notes:

1. When replacing the oil seal with a new one, apply oil to it and fit it in using a press.
2. Apply oil to the O and V rings, plunger follower, plunger, and valve sleeve before assembly.
3. Note that there is a washer on each side of each connector. Maximum banjo bolt torque is 0.4~0.5 kg-m (35~43 in-lbs).


CARBURETOR

Removal:

- Remove the choke knob, and slide the carburetor rubber cap up out of place.
- Remove the carburetor cover and gasket.
- Turn the fuel tap to the OFF position, slide up the clamp that holds the fuel hose on the carburetor intake, and disconnect the fuel hose from the carburetor.
- Remove the rubber grommet from the front of the right engine cover, and insert a screwdriver through the hole to loosen the carburetor mounting bolt (Fig. 51).
- Pull off the carburetor.


Installation Notes:

1. Be sure that the carburetor mounting bolt is screwed in securely to avoid any air leak.
2. When replacing the carburetor rubber cap, be sure that the rubber extender fits properly on the idle adjusting screw.

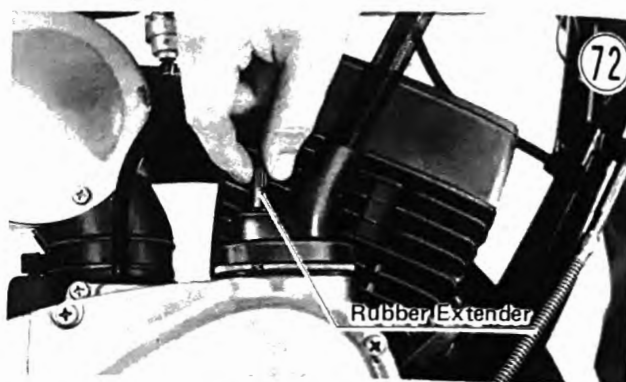


3. Adjust the carburetor cable (Pg. 7).

Oil Pump

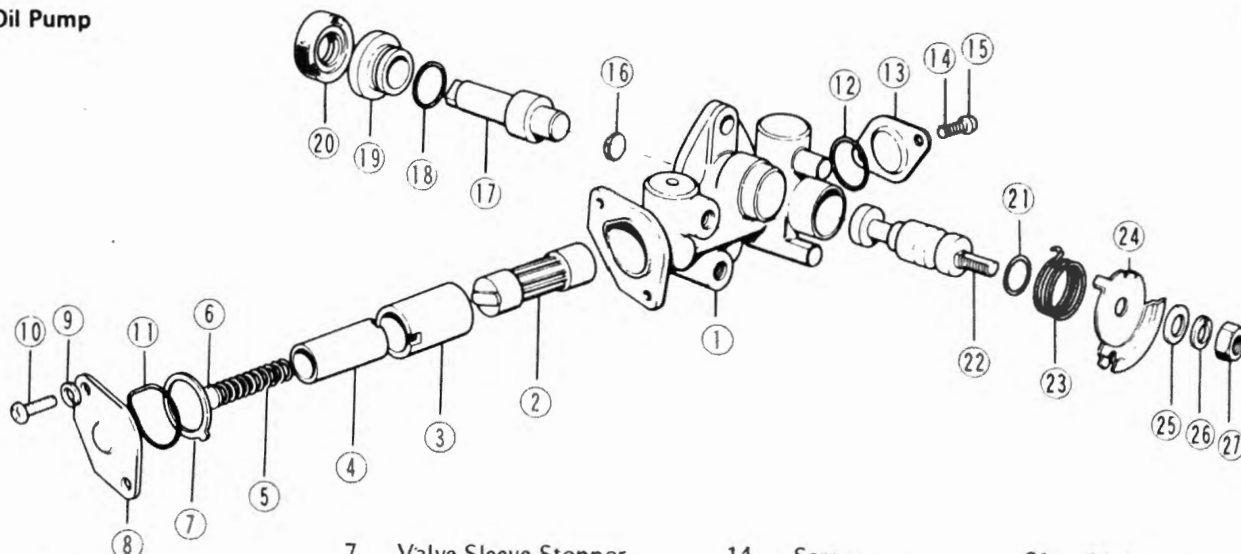

- | | | | |
|---------------------|-------------------------|-----------------|-----------------------|
| 1. Pump Body | 7. Valve Sleeve Stopper | 14. Screw | 21. V ring |
| 2. Plunger | 8. Cap | 15. Lock Washer | 22. Control Cam |
| 3. Valve Sleeve | 9. Lock Washer | 16. Spacer | 23. Pump Lever Spring |
| 4. Plunger Follower | 10. Screw | 17. Pump Shaft | 24. Pump Lever |
| 5. Plunger Spring | 11. O ring | 18. O ring | 25. Washer |
| 6. Spring Seat | 12. O ring | 19. Bushing | 26. Lock Washer |
| | 13. Cap | 20. Oil Seal | 27. Nut |

Carburetor

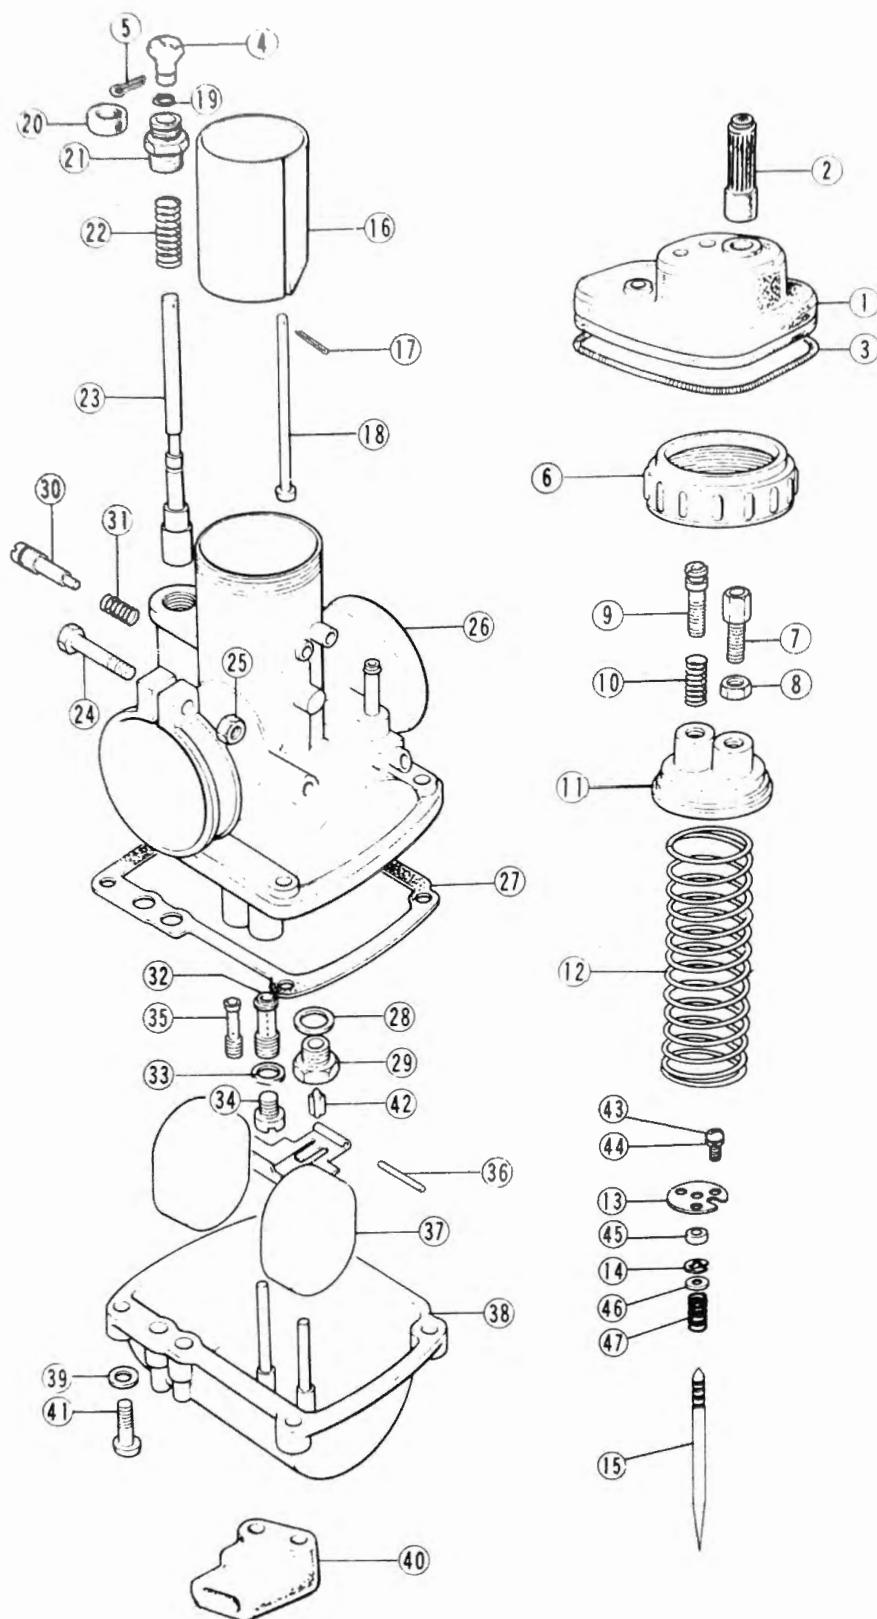


1. Carburetor Rubber Cap
2. Rubber Extender
3. Spring Coil
4. Knob
5. Cotter Pin
6. Carburetor Cap
7. Throttle Cable Guide
8. Lock Nut
9. Idle Adjusting Screw
10. Spring
11. Mixing Chamber Top
12. Spring
13. Holding Plate
14. Circlip
15. Jet Needle
16. Throttle Valve
17. Cotter Pin
18. Throttle Valve Rod
19. Circlip
20. Starter Plunger Rubber Cap
21. Starter Plunger Cap
22. Spring
23. Starter Plunger
24. Bolt
25. Nut
26. Carburetor Body
27. Gasket
28. Washer
29. Valve Seat
30. Air Screw
31. Spring
32. Needle Jet
33. Washer
34. Main Jet
35. Pilot Jet
36. Float Pin
37. Float
38. Float Bowl
39. Lock Washer
40. Overflow Grommet
41. Screw
42. Valve Needle
43. Screw
44. Lockwasher
45. Spacer
46. Spring Seat
47. Spring


28 DISASSEMBLY

Disassembly:

- Unscrew the carburetor cap ⑥, and pull out the carburetor throttle valve assembly.
- Remove the starter plunger rubber cap 20, and circlip 19.
- Unscrew the starter plunger cap 21 and remove the starter plunger 23.
- Remove the cotter pin 17 at the top of the idle adjusting screw 9.
- Pull out the throttle valve rod 18. The idle adjusting screw 9 and its spring 16 can also be removed if necessary.
- To remove the jet needle 15, free the cable from the valve, and remove the screw 43 and lockwasher 44 from the bottom of the valve. The holding plate 13, spacer 45, spring seat 46, spring 47, and jet needle 15 with its clip 14 can now be removed.

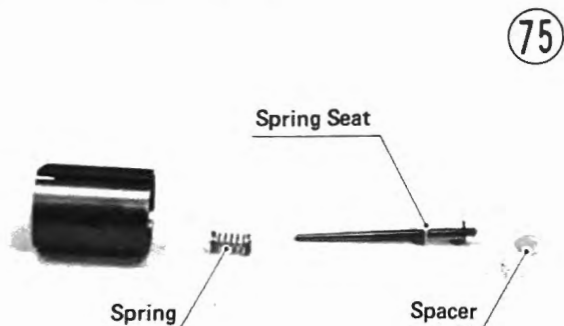

- Take off the overflow grommet 40.
- Remove the 4 screws 41 at the base of the carburetor, and remove the float bowl 38 and gasket 27.
- Push out the float pin 36 and remove the float 37.

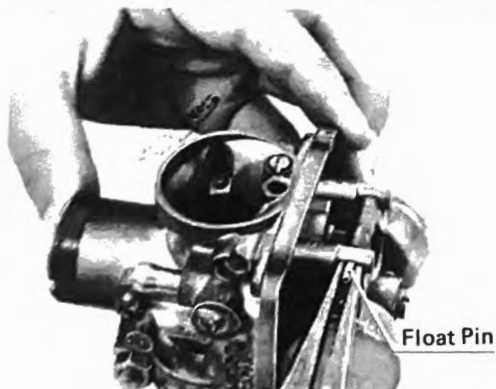

- Remove the float valve needle 42. The float and float valve needle should always be removed before any further disassembly so that they will not get damaged.
- Remove the float valve seat 29 with a socket wrench.
- Unscrew the main jet 34 and remove its washer 33.
- Remove the pilot jet 35 with a narrow bladed screwdriver.
- Using a soft rod such as a pencil, push the needle jet 32 out from the bottom.
- Remove the air screw 30 and air screw spring 31.
- Remove the starter plunger assembly with a wrench.

Assembly Notes:

1. See Pg. 62 for carburetor specifications to be sure that the correct carburetor parts are being used.

2. CAUTION: Be careful that the throttle stop rod is not be during reassembly. Abent throttle stop rod can cause the throttle to stick open.


RIGHT ENGINE COVER

Removal:

- With the motorcycle fully perpendicular to the ground, place an oil pan beneath the engine and remove the engine drain plug so that all the transmission oil drains out.



- Mark the position of the kick pedal on the shaft so that it can be returned to the same position later.

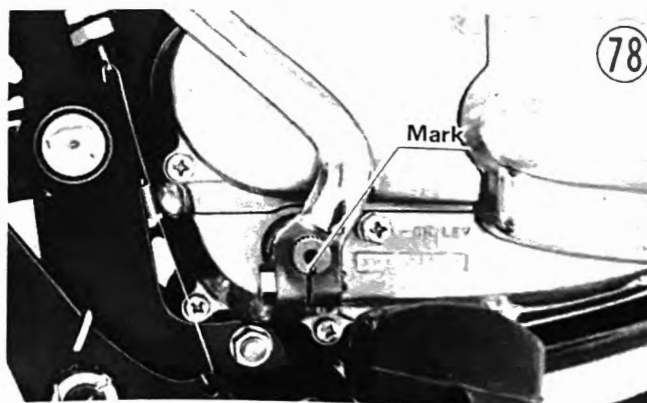


- Remove the kick pedal bolt, widen slightly the gap on the kick pedal with a screwdriver, and then pull off the kick pedal.
- Remove the carburetor (Pg. 26).
- Remove the carburetor overflow drain from the bottom of the right engine cover (Fig. 52).
- Pry open the tab that holds the tip of the clutch cable in place (Fig. 53).
- Loosen the clutch release lever lock nut, back out the screw a couple of turns, and free the tip of the clutch cable from the clutch release lever (Fig. 58).
- Remove the spring from the clutch cable, and pull the cable free from the right engine cover.
- Remove the oil pump (Pg. 25).
- Slide back the rubber fitting from where the oil pump inlet hose (black) runs through the right engine cover.
- Loosen the lock nut, and screw the oil pump adjuster in the right engine cover all the way in.



- Slide off the rubber fitting that holds the oil pump outlet hose and oil pump cable to the right engine cover, and separate the hose from the rubber fitting (Fig. 79).
- Remove the bolt (3) and take off the right footpeg.
- Using an impact driver, take out the screws (8) and remove the right engine cover and its gasket from the crankcase.

Installation:

- Replace the right engine cover gasket with a new one.
- Check to see that the clutch push pin is in its place in the right engine cover.

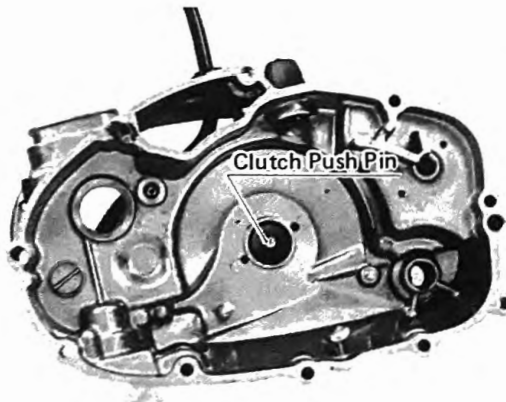

- Fit the right engine cover back onto the crankcase, using a kick shaft oil seal guide (special tool) so that the oil seal does not get damaged.
- Tighten the right engine cover screws.
- Put the oil pump and gasket into place and tighten the mounting screws. There is a copper washer for each screw.
- Slip the oil pump outlet hose into the rubber fitting. Insert the oil pump inner cable into the adjuster and push the rubber fitting back into place.
- Fit the oil pump inner cable on the oil pump lever, and bend the tab back onto the end of the cable.
- Check to see that the lower mark on the oil pump lever lines up with the mark on the oil pump lever stopper.
- Fit the oil pump outlet hose onto the connector and slide down the clamp.
- Fit the oil pump inlet hose (black) onto the connector, and slide down the clamp. Push the rubber fitting back into place.

- Run the clutch cable through the right engine cover. Replace the spring and connect the tip of the clutch cable to the clutch release lever.
- Bend back the tab so that it holds the tip of the clutch cable.
- Adjust the clutch (Pg. 13).
- Replace the carburetor overflow drain at the bottom of the right engine cover.
- Replace the carburetor. Tighten the mounting bolt and put the rubber grommet back into the front of the right engine cover.
- Fit the fuel hose back onto the carburetor, and slide down the clamp.
- Using a new carburetor cover gasket, replace the carburetor cover, and tighten the screws.
- Slide the carburetor rubber cap down.
- Replace the footpeg, and tighten the bolts.
- If any air has gotten trapped in the outlet hose, bleed the oil pump (Pg. 84).
- Replace the oil pump cover and tighten the screws.
- Replace the kick pedal and tighten the bolt.

CLUTCH

Removal:

- Be sure that the transmission is in neutral in order to facilitate clutch reinstallation later.
- Remove the right engine cover (Pg. 28).
- Remove the clutch spring plate disc.




- Remove the circlip from the drive shaft with circlip pliers, and remove the washer from the clutch wheel.
- Pull the clutch plate assembly out of the clutch housing. There is a thrust washer between the assembly and the housing.
- Pull out the clutch housing and its spring, and remove the thrust washer.
- To disassemble the clutch plate assembly, first take out the bolts (6) on the clutch spring plate, and remove the spring plate and springs (6). Now the clutch wheel, friction plates (4), steel plates (3), a steel outer plate, and clutch hub can be separated.

30 DISASSEMBLY

Clutch

82

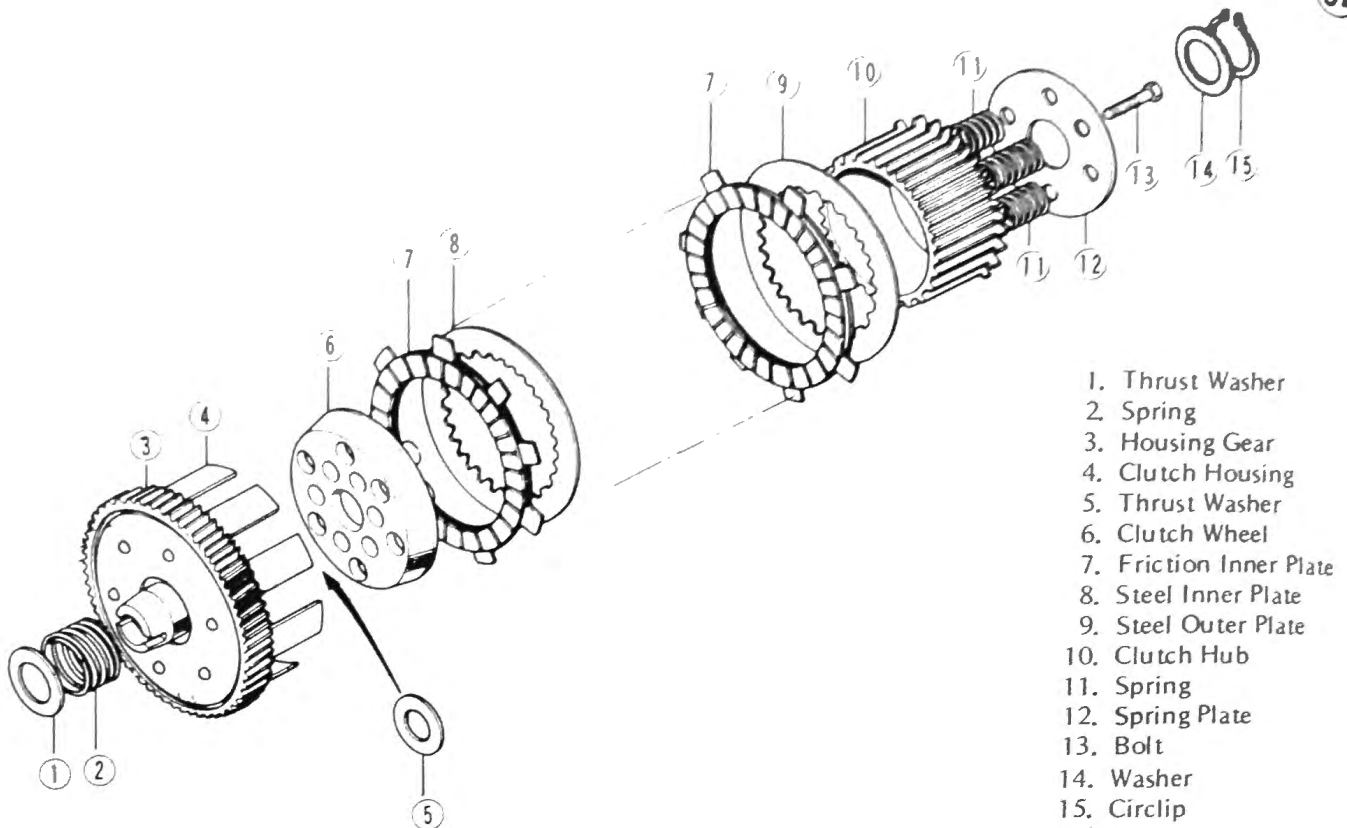

Installation:

- Check to see that the thrust washer is on the drive shaft and fit the spring onto the drive shaft.
- To reassemble the clutch plate assembly, first put the steel outer plate onto the clutch hub. Next, alternate the friction and steel plates, and then put on the clutch wheel. Install the clutch springs and spring plate, and lightly screw in the bolts.
- Apply grease to the washer and fit the washer into the clutch housing. Fit the clutch plate assembly into the clutch housing.
- Replace the clutch housing on the drive shaft while turning the kick shaft by hand so that the rear of the housing will fit into the side of the drive shaft idle gear.

- Cross tighten the bolts evenly with 0.4 ~ 0.5 kg-m (35 ~ 43 in-lbs) of torque if they are loose. Do not use compressed air, which might make spring pressure uneven.
- Replace the clutch spring plate disc. Apply grease to the disc if necessary to keep it from dropping out.
- Check to see that the clutch push pin is in its place in the cover.
- Replace the right engine cover (Pg. 28).




- Put the washer and the circlip back onto the drive shaft.

ROTARY DISC VALVE


Removal:

- Be sure that the transmission is in neutral in order to facilitate clutch reinstallation later.
- Mark the position of the shift pedal so that it can later be replaced on the shaft in the same position (normally about 10° below the horizontal).
- Take out the shift pedal bolt and remove the shift pedal.
- Take out the screws (3) and remove the left engine cover, being careful not to damage the oil seal.
- Remove the right engine cover (Pg. 28).
- Remove the oil passage pipe and the O ring.
- Remove the clutch spring plate disc.
- Straighten the bent portion of the primary gear washer.
- Hold the magneto flywheel stationary with the magneto flywheel holder (special tool), and loosen the primary gear nut.

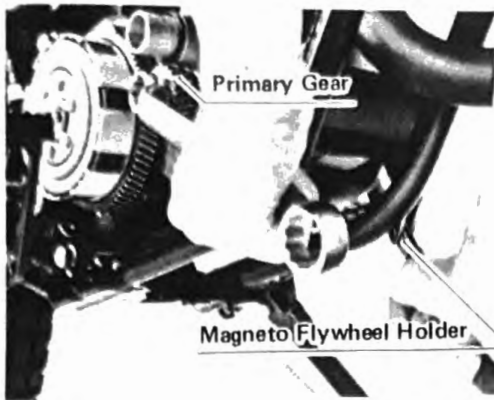


84

- Remove the circlip from the drive shaft with circlip pliers, and remove the washer.
- Pull the clutch plate assembly out of the clutch housing and remove the thrust washer.
- Pull out the clutch housing and its spring and remove the thrust washer.
- Take off the nut, the primary gear washer and the primary gear.
- Remove the woodruff key from the crankshaft.
- Undo the rotary disc cover screws with an impact driver, and remove the rotary disc cover.

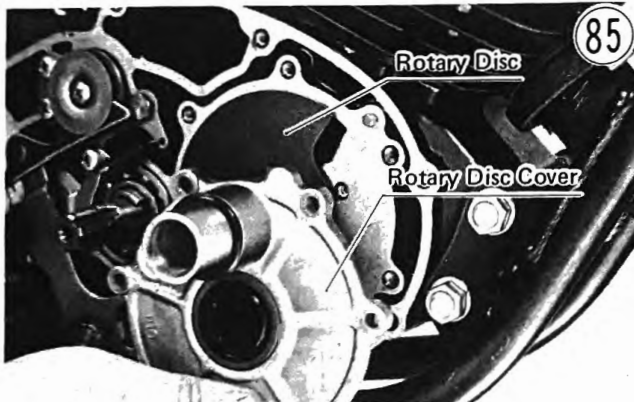

85

- Remove the rotary disc sleeve and O ring.
- Mark the side of the rotary disc so that it can later be installed on the crankshaft with the correct side facing out.
- Remove the rotary disc, taking care not to bend it. It should come off easily.
- Remove the splined collar and pin from the crankshaft.

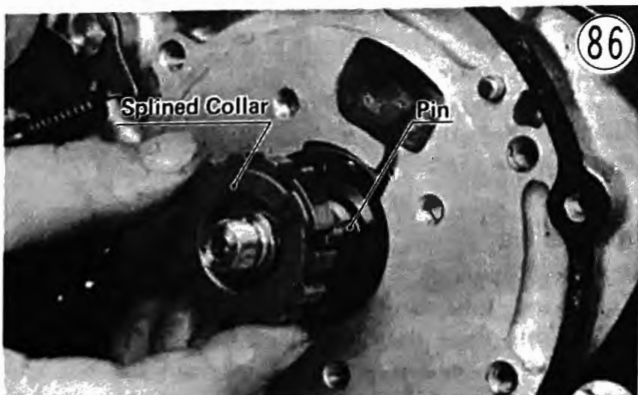

86

- If the disc cover oil seal requires replacement, pull it out with a hook. The large O ring in the disc cover may also be removed with a hook.

Installation:

- Install the pin and splined collar to the crankshaft.
- Apply a thin coat of 2-stroke engine oil to both sides of the rotary disc, and install it with the marked side facing out.
- Install the sleeve and O ring.
- Be sure that the large O ring is properly in place in the valve cover and replace the cover, tightening the screws with an impact driver. Be careful not to damage the oil seal inside the cover.
- Check to see that the woodruff key is properly positioned on the crankshaft.
- Replace the primary gear with the hole facing outward to accommodate the primary gear washer. If the primary gear must be tapped into place, crankcase/crankshaft clearance has to be checked.
- Replace the primary gear washer with the tooth fitted in the primary gear hole. Hold the magneto flywheel stationary with the magneto flywheel holder (special tool), and tighten the primary gear nut with 7.0~7.5 kg-m (51~54 ft-lbs) of torque.
- Bend back part of the primary gear washer over the side of the primary gear nut.
- Replace the oil passage pipe and its O ring.
- Put the thrust washer and then the clutch housing spring onto the drive shaft.
- Apply grease to the thrust washer and put it in the clutch housing. Put the clutch plate assembly into the clutch housing.
- Fit the clutch housing back onto the drive shaft while turning the kick shaft by hand so that the rear of the housing will fit into the side of the drive shaft idle gear.
- Put the washer and the circlip (with circlip pliers) onto the drive shaft.
- Replace the clutch spring plate disc. Apply grease to the disc if necessary to keep it from dropping out.
- Check to see that the clutch push pin is in its place in the cover.
- Replace the right engine cover (Pg. 28).
- Replace the left engine cover using the shift shaft oil seal guide (special tool) to protect the oil seal in the cover, and tighten the screws (Fig. 59).
- Mount the shift pedal in the position marked during removal, and then tighten the bolt.


DRIVE CHAIN

Removal:

- Check to see that the transmission is in neutral.
- Mark the position of the shift pedal so that it can later be replaced on the shaft in the same position (normally about 10° below the horizontal).
- Take out the shift pedal bolt and remove the shift pedal.
- Take out the screws (3) and remove the left engine cover, being careful not to damage the oil seal.

32 DISASSEMBLY


- Undo the clip carefully from the drive chain master link using pliers, and remove the master link.

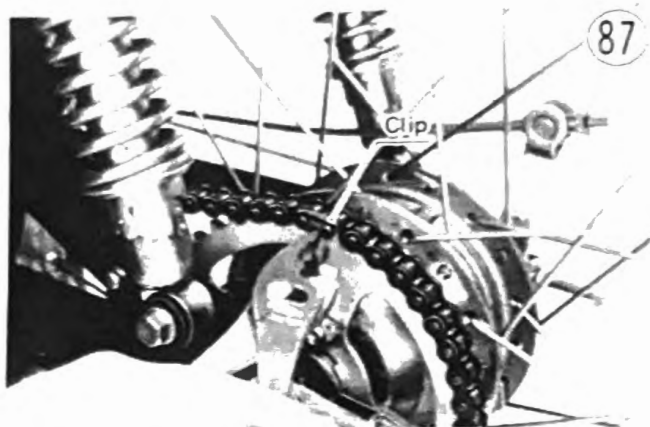

- Free the drive chain from the sprockets, being careful that the chain does not get dirty from contact with the ground.

Installation:

- Fit the drive chain back onto the sprockets with the ends at the rear sprocket.

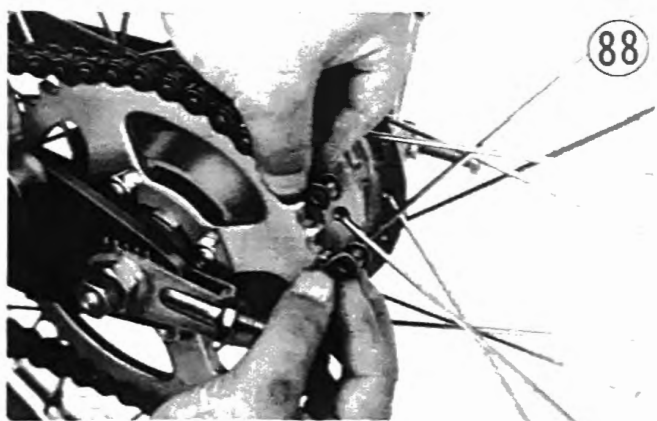

- Replace the chain master link with pliers. The direction of the master link clip should be as follows.




- Replace the left engine cover using the shift shaft oil seal guide (special tool) to protect the oil seal in the cover, and tighten the screws (Fig. 59).

- Mount the shift pedal in the position marked during removal, and tighten the bolt.
- Adjust the drive chain (Pg. 16).

ENGINE SPROCKET

Removal:

- Remove the drive chain and left engine cover (Pg. 31).
- Straighten back the bent portion of the engine sprocket washer.
- Using the engine sprocket holder (special tool) to keep the engine sprocket from turning, remove the engine sprocket bolt or nut, toothed washer and washer.

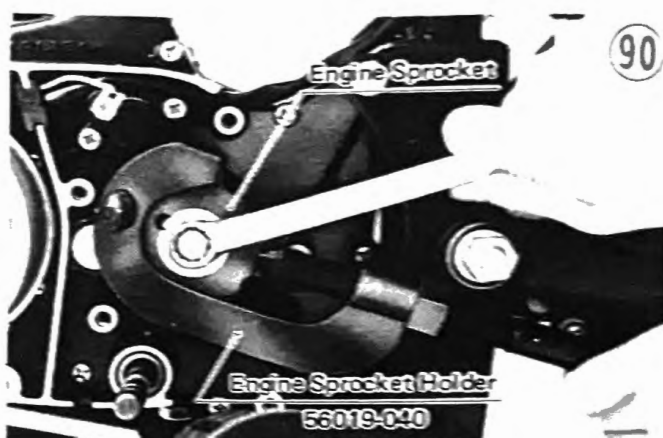

Installation:

- Put the engine sprocket back onto the output shaft. Replace the washer and the toothed washer so that the tooth fits into a hole in the engine sprocket.
- Using the engine sprocket holder (special tool) to hold the engine sprocket stationary, tighten the engine sprocket bolt with 2.2 ~ 2.5 kg-m (16 ~ 18 ft-lbs) of torque.
- Bend back one side of the toothed water over the bolt.
- Replace the drive chain (Pg. 31).

IGNITION COIL

Removal:

- Turn the fuel tap to the OFF position, slide down the hose clamp, and pull the fuel hose off the tap.
- Unlock the seat and swing it open. Unhook the rubber retaining band and pull the fuel tank off toward the rear.
- Disconnect the black and black/white ignition coil leads.
- Remove the screws (2) that connect the ignition coil to the frame, and remove the ignition coil.

Installation:

- Run the spark plug lead between the cables and the frame top tube, and fit the ignition coil mounting screws into their place under the frame top tube. The black/yellow lead is grounded between the nut and the frame.

- Tighten the ignition coil mounting nuts (2). There is a lock washer for each nut.
- Connect the black ignition coil lead to the black/white lead.
- Connect the spark plug lead to the spark plug.
- Replace the fuel tank and hook it with the retaining band.
- Fit the fuel hose back onto the fuel tap and slide the clamp back into place.
- Push the seat back into place.

NEUTRAL SWITCH

Removal:

- Remove the shift pedal and left engine cover.
- Disconnect the light green lead from the switch.



- Take out the screws (2) and remove the neutral switch.

MAGNETO FLYWHEEL

Removal:

- Take out the shift pedal bolt and remove the shift pedal.
- Remove the left engine cover, being careful not to damage the oil seal in the cover.
- Using the magneto flywheel holder (special tool) to hold the magneto flywheel stationary, remove the magneto nut with a socket wrench and take off the lock washer.



- Screw the magneto flywheel puller (special tool) counterclockwise into the magneto flywheel, and tighten the bolt on the puller to pull out the flywheel.



CAUTION: If the flywheel is difficult to remove and a hammer is used to tap the flywheel puller, be careful not to strike the flywheel itself. Striking the flywheel can cause the magnets to lose their magnetism.


Installation Notes:

1. Before installing the flywheel, see that the key is fitted in its place on the crankshaft properly, and then align the flywheel so that the key fits in the groove in the hub of the flywheel.
2. Maximum torque for tightening the magneto nut is 5.0 kg-m (36 ft-lbs).
3. To avoid damaging the oil seal when replacing the left engine cover, grease the gear shift shaft lightly and use an oil seal guide (special tool).

MAGNETO STATOR

Removal:

- Remove the magneto flywheel (Pg. 33).
- Turn the fuel tap to the OFF position, slide down the hose clamp, and pull the fuel hose off the tap.
- Unlock the seat and swing it open. Unhook the rubber retaining band and pull the fuel tank off toward the rear.
- Disconnect the magneto outlet lead connectors (2) where they connect under the frame top tube.
- Undo the strap that holds the lead assembly to the frame.
- Disconnect the neutral switch lead.
- Remove the magneto stator plate screws (2) and pull the stator assembly free from the side of the crankcase.

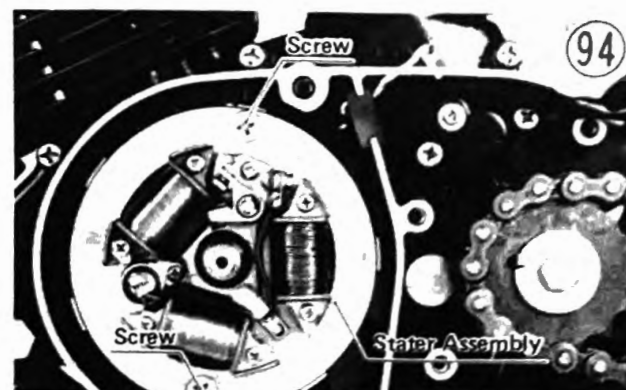

34 DISASSEMBLY


Installation Note:

- Adjust the ignition timing (Pg. 11).

Disassembly:

To remove the ignition magneto coil—

- Remove the screws (2) that mount the ignition magneto coil to the stator plate.

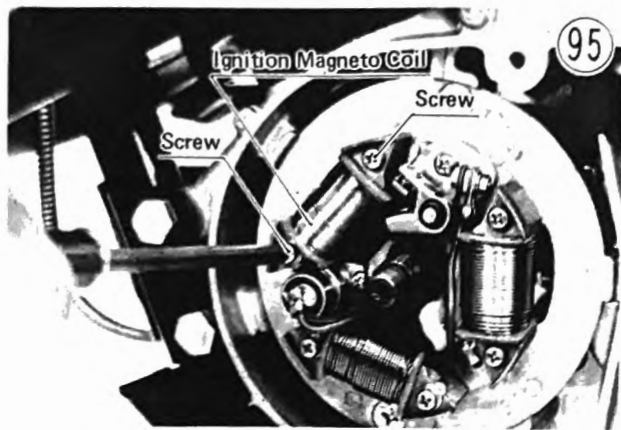

- Unsolder the ignition magneto coil lead from where it connects at the condenser.
- Remove the ignition magneto coil from the stator plate.
To remove the lighting/charging coils—
- Remove the magneto wiring harness clamp screw.
- Remove the screws (2) that mount each coil to the stator plate.
- Slide back or cut off the yellow insulation from where the leads are to be disconnected, and mark all leads so that they can be reconnected correctly.
- Unsolder or cut the leads to free the lighting/charging coils from the magneto output leads. There are two output leads from each coil.


Assembly Notes:

1. Be careful not to strike or damage the coil wires with the soldering iron or screwdriver.
2. Be careful not to mix up the leads for the lighting/charging coils when reconnecting them. The standard connections are: red to red, and yellow to white.
3. After connecting the leads for the lighting/charging coils, be sure that the yellow insulation is slid back into place or new insulation is wrapped around all exposed wire.

CONTACT BREAKER

Removal:

- Remove the magneto flywheel (Pg. 33).
- Remove the contact breaker base screw.

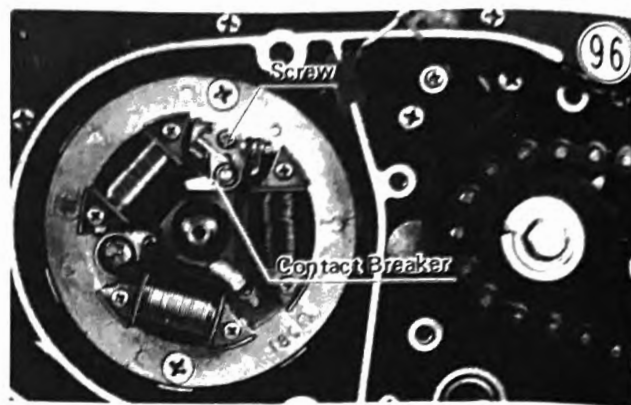

- Loosen the nut on the contact breaker and remove the blue lead, taking note of the exact spot where the lead is attached so that it can be connected properly later.
- Remove the contact breaker from the stator.

Installation Note:

- Adjust the ignition timing after installation (Pg. 11).

CONDENSER

Removal:

- Remove the magneto flywheel (Pg. 33).
- Remove the screw that holds the condenser to the stator plate.
- Unsolder the leads (3) from the condenser with a soldering iron.
- Remove the condenser from the stator.

Installation Note:

- Be careful not to strike or damage the coil wires with the soldering iron or screwdriver.

EXTERNAL SHIFT MECHANISM

Removal:

- Remove the clutch (Pg. 29).
- Remove the shift pedal bolt (3) and remove the shift pedal (2).
- Move the external shift mechanism pawl (15) out of the groove on the shift drum, and pull the external shift mechanism shaft (5) out of the crankcase. Two springs (4) (14) and a sleeve (6) come off with the mechanism.




Installation:

- Fit the spring into the external shift mechanism and check to see that the sleeve is in place.
- Using the shift shaft oil seal guide (special tool) on the crankcase shift shaft oil seal, insert the shaft back through the crankcase, and fit the pawl back onto the end of the shift drum.
- Install the clutch (Pg. 29).


TRANSMISSION**Removal:**

- Remove the engine (Pg. 19).
- Remove the cylinder head nuts (4).
- Take off the cylinder head and cylinder head gasket.
- Lightly tap up opposite sides of the cylinder with a plastic mallet, taking care not to damage the cooling fins, and lift off the cylinder and cylinder base gasket (Fig. 98).

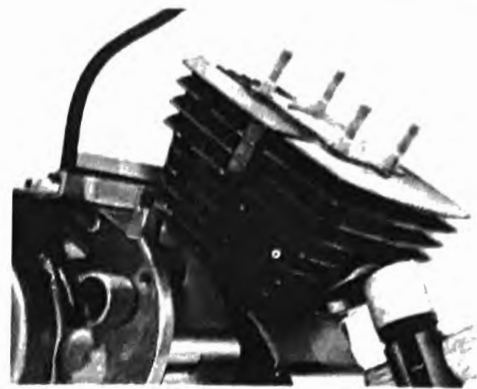

98

- Wrap a clean cloth around the base of the piston to secure it in position for removal and so that no parts fall into the crankcase.
- Remove the piston (Pg. 24).
- Mark the position of the kick pedal on the shaft so that it can be returned to the same position later (Fig. 78).

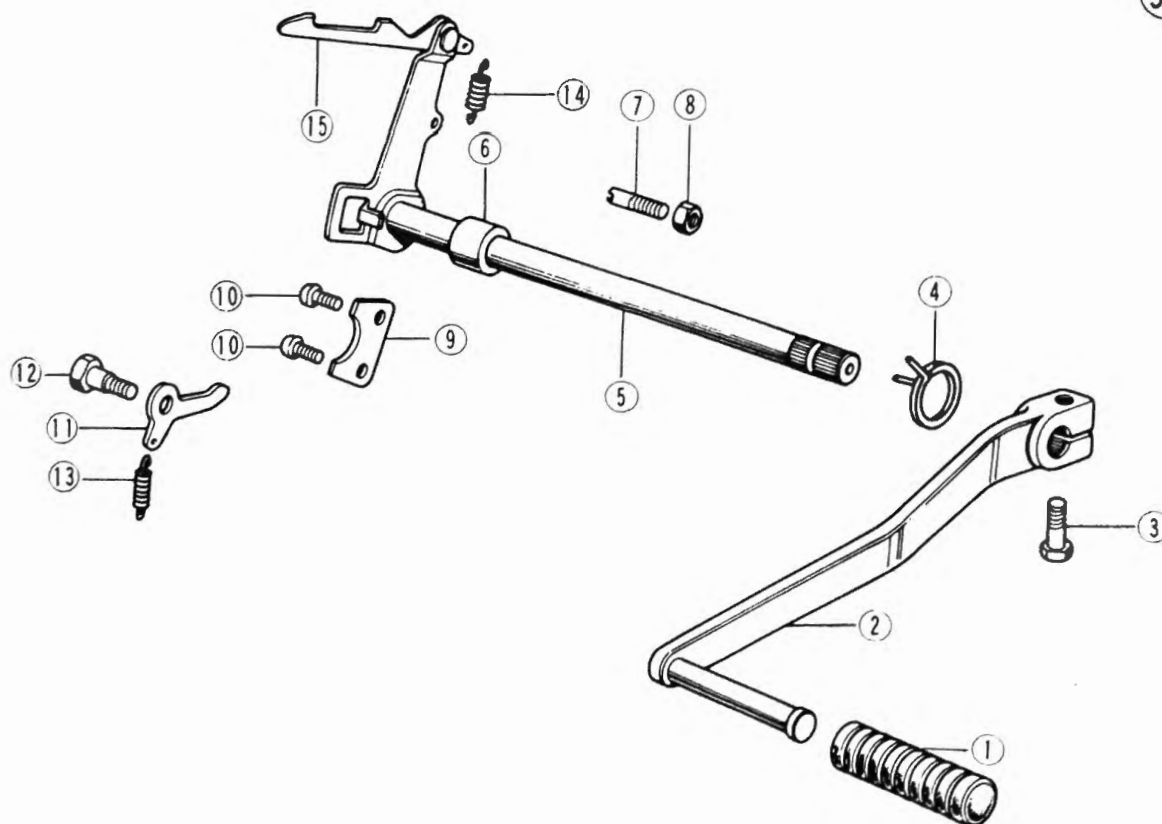External Shift Mechanism


99

1. Shift Pedal Rubber
2. Shift Pedal
3. Bolt
4. Return Spring
5. Shift Shaft
6. Sleeve
7. Return Spring Pin
8. Nut

9. Shift Drum Stopper
10. Screw
11. Detent Arm
12. Bolt
13. Spring
14. Spring
15. Shift Pawl

36 DISASSEMBLY


- Remove the kick pedal bolt, widen slightly the gap on the kick pedal with a screwdriver, and then pull off the kick pedal.
- Slide up the hose clamp and disconnect the oil pump outlet hose from the oil pump.
- Remove the oil pump mounting screws (2) and pull off the oil pump.
- Using an impact driver, remove the screws (8) from the right engine cover, and remove the right engine cover and gasket.
- Remove the oil passage pipe and its O ring.
- Remove the oil pump shaft and gear.

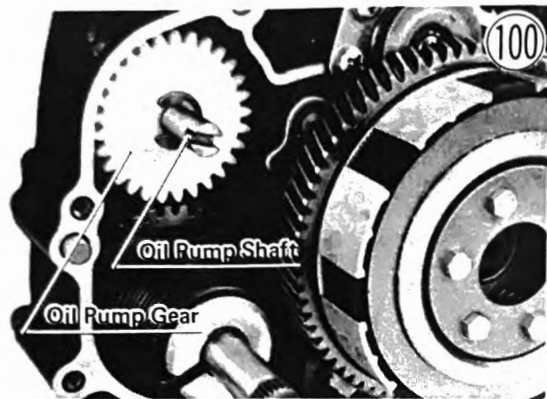


- Pull out the kick spring guide.
- Pull the end of the kick spring from the hole in the kick shaft with pliers, and remove the kick spring.
- Remove the clutch spring plate disc (Fig. 81).
- Straighten the bent portion of the primary gear washer.
- Hold the magneto flywheel stationary with the magneto flywheel holder (special tool), and loosen the primary gear nut.




- Remove the magneto flywheel (Pg. 33).
- Loosen the neutral switch lead mounting screw, and disconnect the light green lead from the switch.
- Remove the magneto stator plate screws (2), and take off the magneto stator assembly (Fig. 94).
- Straighten the bent portion of the engine sprocket washer.
- Using the engine sprocket holder (special tool) to keep the engine sprocket from turning, remove the engine sprocket bolt or nut, toothed washer, flat washer and then engine sprocket.

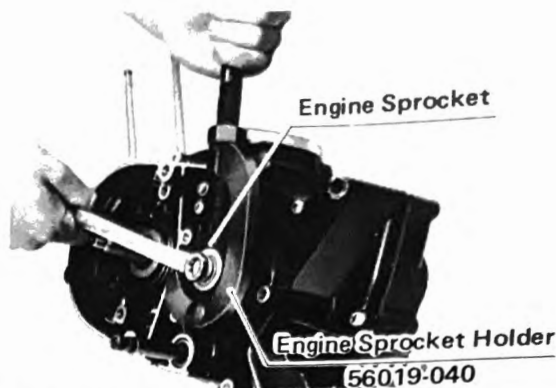

- Take the engine sprocket collar and O ring off the output shaft.
- Remove the screws (2) from the neutral switch housing, and remove the neutral switch housing and gasket.
- Bend up the neutral switch rotor.
- Remove the circlip using a circlip pliers, and remove the washer from the drive shaft.
- Remove the clutch plate assembly and the thrust washer.
- Take off the clutch housing spring and the thrust washer.
- Take off the nut, the primary gear washer and the primary gear.
- Undo the rotor disc cover screws (6) with an impact driver, and remove the rotary disc valve cover.
- Remove the rotary disc sleeve and O ring.
- Mark the side of the rotary disc, and remove the rotary disc, taking care not to bend it. It should come off easily.
- Remove the splined collar and pin from the crankshaft.

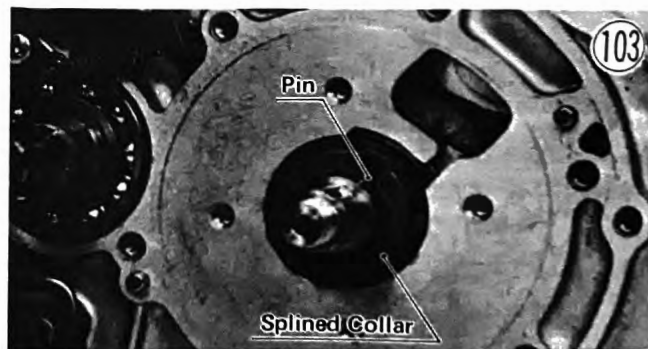


- Move the external shift mechanism pawl out of the groove on the shift drum, and pull the external shift mechanism shaft out of the crankcase.
- Remove the detent arm bolt, undo the detent arm spring, and take off the detent arm.

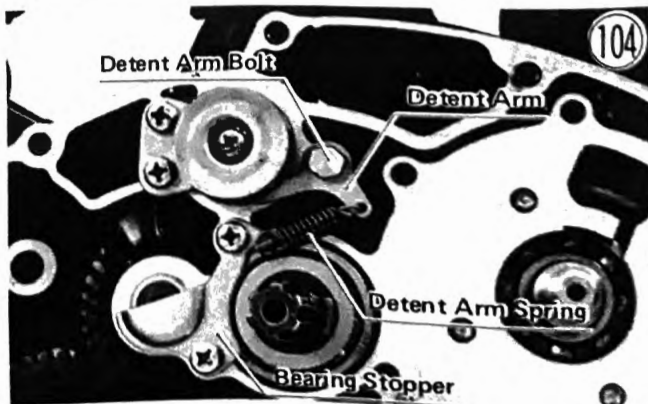

- Remove the transmission bearing stopper.
- Remove the shift drum positioning plate.
- Remove the crankcase screws (13) with an impact driver.
- Screw the crankcase splitting tool (special tool) into the left side of the crankcase.
- Tighten the bolt on the crankcase splitting tool to split the crankcase.




- After the crankcase halves have been split, the crankshaft will remain in the right crankcase half.

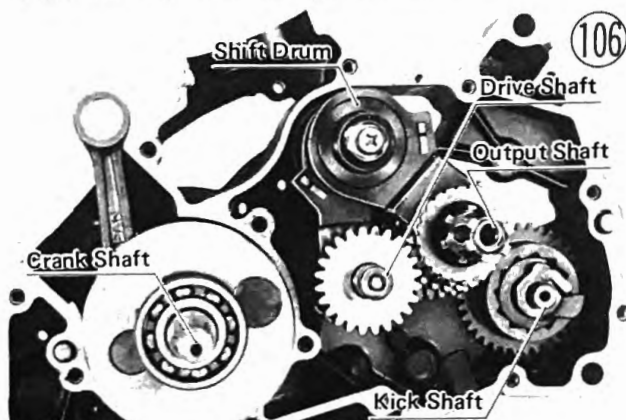


- Remove the kick shaft and gear.
- Remove the drive shaft, output shaft and shift drum assemblies. Note that a ball bearing is located at the end of the drive shaft.

Installation:


- Clean out the crankcase and clean off any grime that is on any of the transmission and crankshaft parts with a high flash-point solvent.
- Put grease on the end of the drive shaft where it fits into the left crankcase half so that the ball bearing will not fall out of place during installation.

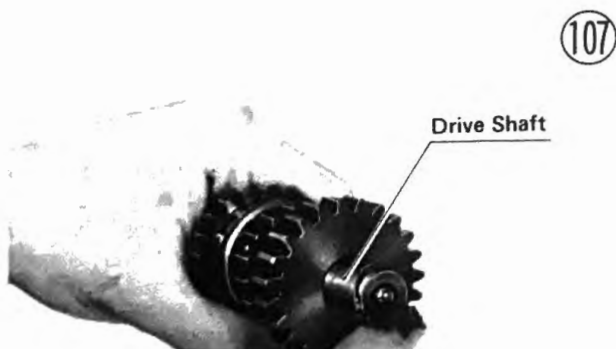

- Fit the shift drum, drive shaft and output shaft assemblies together, and then install them in the left crankcase half.

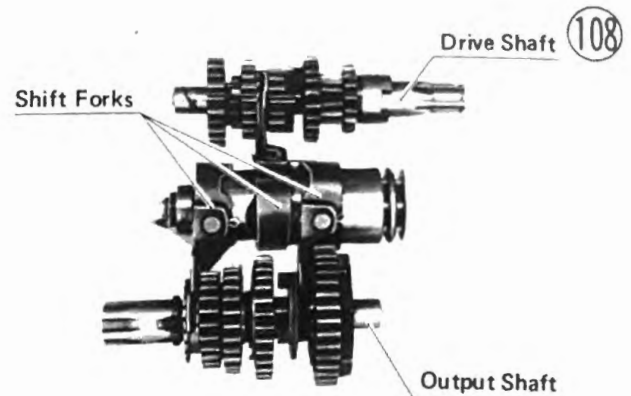

- Replace the kick shaft and gear. Check to see that the kick pawl, spring and kick pawl pin are properly in place on the kick shaft.

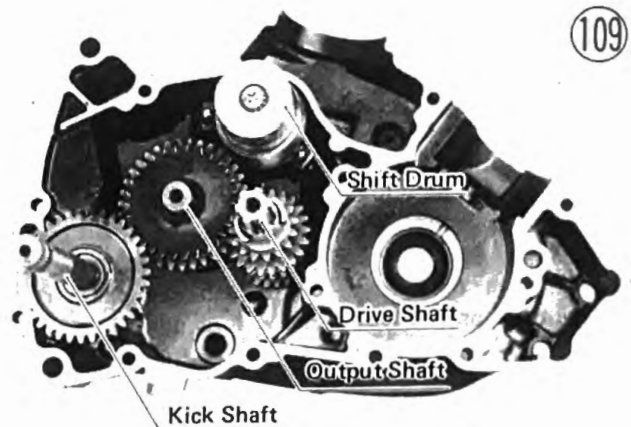


- Apply liquid gasket to the fitting surface of the left crankcase half and then, with a chisel or wedge inserted between the flywheels opposite the connecting rod big end, fit the crankcase halves together by pressing the right end of the crankshaft using a press.




38 DISASSEMBLY

- After the crankcase halves are fitted together, place the crankcase on its right side, and screw in the crankcase screws (13).
- With the crankcase on its right side, lightly tap the end of the crankshaft (again using only a plastic, soft brass or lead hammer) so that the crankshaft will center properly and turn freely.

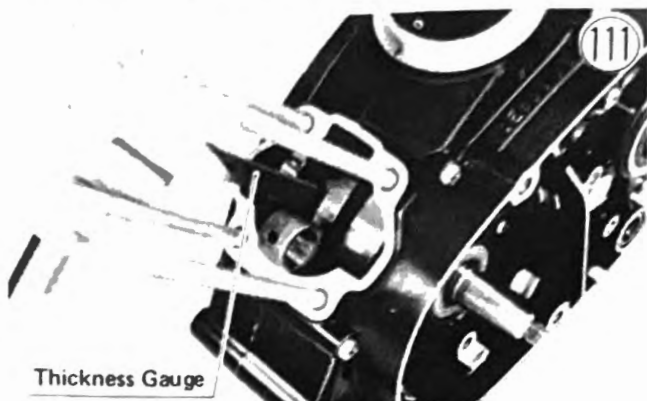


- Check to see that the crankshaft turns freely.
- Check to see that the drive shaft, output shaft and kick gears all turn freely before proceeding.
- Wrap a clean cloth around the connecting rod so that no parts fall into the crankcase.
- Replace the shift drum positioning plate.
- Replace the transmission bearing stopper.
- Replace the detent arm spring, the detent arm and the detent arm bolt. Be certain the bolt is tightened fully into place.
- Fit the spring into the external shift mechanism and check to see that the sleeve is in place.
- Using the shift shaft oil seal guide (special tool) on the crankcase shift shaft oil seal, insert the external shift mechanism back through the crankcase, and fit the pawl back onto the end of the shift drum.

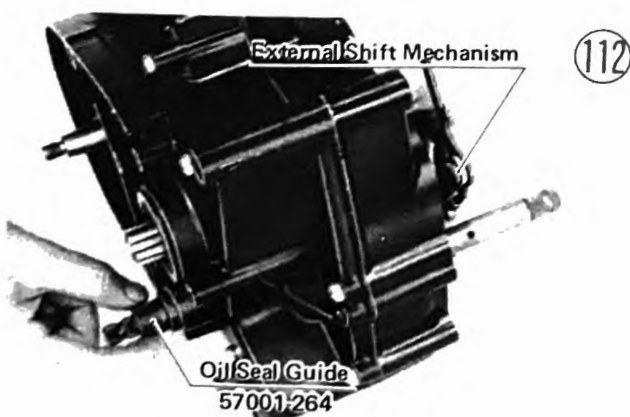


- Install the pin and splined collar to the crankshaft.
- Apply a thin coat of 2-stroke engine oil to both sides of the rotary disc and install it with the marked side facing out.
- Install the sleeve and O ring.
- Be sure that the large O ring is properly in place in the valve cover and replace the cover, tightening the screws with an impact driver. Be careful not to damage the oil seal inside the cover.

- When replacing the engine sprocket, first fit on the O ring and then the engine sprocket collar. Replace the flat washer and the toothed washer so that the tooth fits into the hole in the engine sprocket.
- Using the engine sprocket holder (special tool) to hold the engine sprocket stationary, tighten the engine sprocket bolt with 2.2 ~ 2.5 kg-m (16 ~ 18 ft-lbs) of torque.

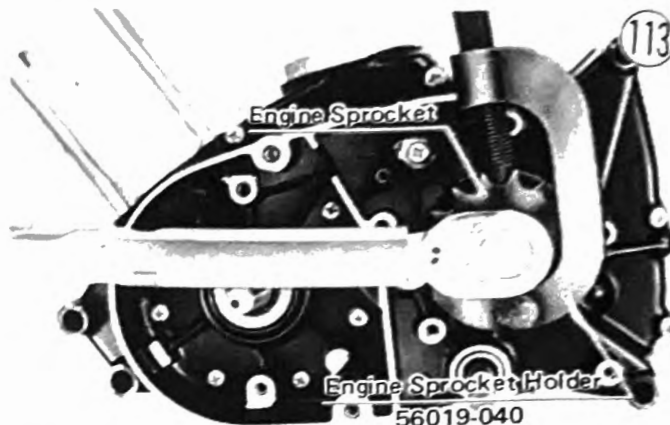


- Bend back one side of the toothed washer over the bolt.
- Replace the neutral switch and tighten the screws (2).
- Replace the magneto stator and tighten the screws (2) with an impact driver.
- Run the magneto output leads through the rubber fitting in the left crankcase.
- Connect the light green neutral switch lead to the neutral switch.
- See that the key is fitted properly into place on the crankshaft, and then install the flywheel so that the key fits in the groove in the flywheel hub. Put the flywheel into place by hand.
- Once the flywheel is all the way back in place, replace the lock washer, and tighten the magneto nut while holding the flywheel stationary with the magneto flywheel holder (special tool). The maximum torque for the magneto nut is 5 kg-m (36 ft-lbs).

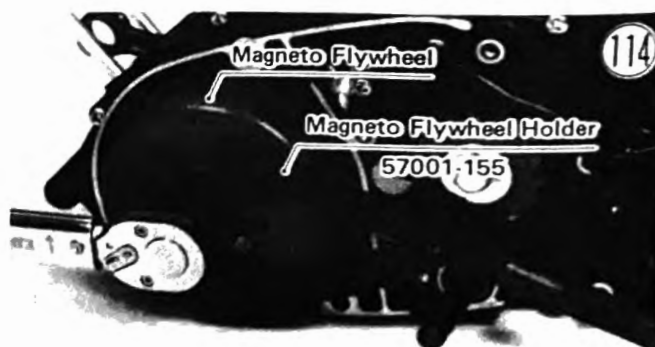


- Check to see that the woodruff key is properly positioned on the crankshaft.
- Replace the primary gear with the hole facing outward to accommodate the primary gear washer. If the primary gear must be tapped into place, recheck the crankcase/crankshaft clearance. Reposition the crankshaft if necessary in the manner already described.

- Once the primary gear is fully in place, replace the primary gear washer with the tooth fitted in the primary gear hole. Hold the magneto flywheel stationary with the magneto flywheel holder (special tool), and tighten the primary gear nut with 7.0 ~ 7.5 kg-m (51 ~ 54 ft-lbs) of torque.
- Bend back part of the primary gear washer over the side of the primary gear nut.
- Put the thrust washer and then the clutch housing spring back onto the drive shaft.
- Apply grease to the thrust washer and put it in the clutch housing. Fit the clutch plate assembly into the clutch housing.
- Fit the clutch housing back onto the drive shaft while turning the kick shaft by hand so that the rear of the housing will fit into the side of the drive shaft idle gear.

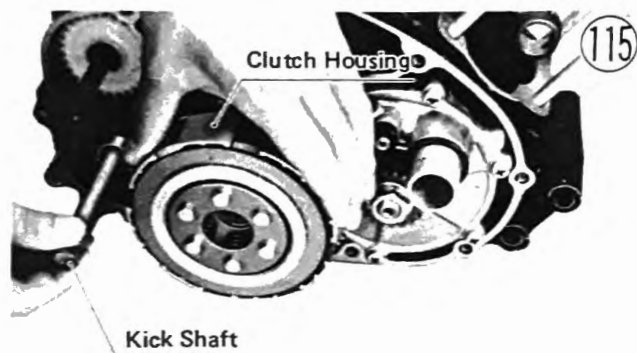

- Replace the washer and the circlip (using circlip pliers) onto the drive shaft.
- Before installing the kick starter spring, first turn the shaft all the way clockwise. Install the kick starter spring while twisting the spring counterclockwise using pliers. Replace the kick spring guide.

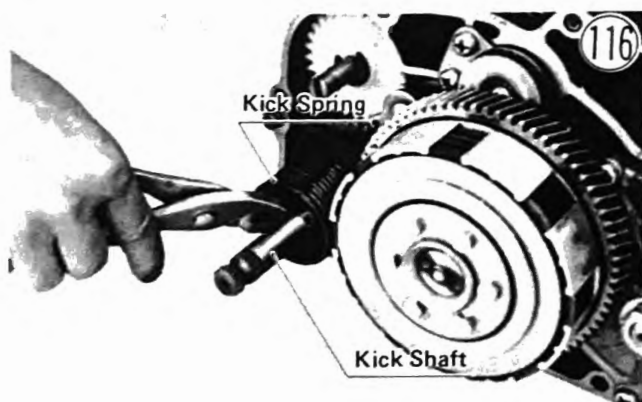

- Replace the oil pump shaft and gear.
- Replace the oil passage pipe and its O ring.
- Replace the clutch spring plate disc. Apply grease to the disc if necessary to keep it from dropping out.
- Using a new right engine cover gasket, fit the right engine cover back onto the crankcase. Use a kick shaft oil seal guide (special tool) to protect the right engine cover oil seal, and see that the O ring does not fall off the rotary valve cover intake port.

- Check to see that the push pin is in its place in the right engine cover before replacing the cover.
- Replace the right engine cover screws (8), and tighten them with an impact driver.
- When installing the oil pump, note the position of the notch on the oil pump gear shaft and then turn the oil pump shaft so that it will fit into the notch.
- Put the oil pump back into place using a new gasket, and tighten the oil pump mounting screws (2). There is a copper washer for each screw.
- Connect the oil pump outlet hose to the oil pump connector and slide back its clamp.
- Replace the kick pedal on the kick shaft and tighten the bolt.
- Apply oil to the connecting rod needle bearing, and fit it onto the connecting rod.
- Apply a little oil to the piston pin, and replace the piston and piston pin. The arrow on the top of the piston must point toward the front.
- Fit a new piston pin snap ring into the side of the piston, and turn it so that its opening does not coincide with either groove in the side of the piston.
- Remove the cloth, and put on a new cylinder base gasket.
- Apply a small amount of 2 stroke oil to the piston rings and the inside surface of the cylinder.
- Set the piston at BDC and fit the base of the cylinder over the rings, pressing in on opposite sides of the rings as necessary. Be certain that the rings do not slip out of position. The pin in each piston groove must be between the ends of the piston ring.
- Replace the cylinder head gasket on the cylinder so that the gasket holes perfectly match the cylinder bore and stud holes. Only one of the four possible positions is correct.
- Put on the cylinder head, and install the flat washers (4), lock washers (4), and cylinder head nuts (4), in that order. Cross tighten the cylinder head nuts evenly with 2.2 kg-m (16 ft-lbs) of torque.
- Install the engine (Pg. 19).
- Adjust the oil pump (Pg. 10).
- Adjust the clutch (Pg. 13).

Shift Drum Disassembly:

- Remove the pin holder screw 30, and pin holder 31.
- Remove the pins (6).
- To remove a shift fork, pull out the cotter pin, shake out the guide pin, and then slide off the fork.

Shift Drum Assembly Notes:


1. Be sure that the screw is securely tightened.
2. The cotter pins should be inserted from the shift drum side (opposite the neutral switch side).

Drive Shaft Disassembly :

- Pull off 5th gear 22 and 2nd & 3rd gear 21.
- Remove the circlip 4, and take off the flat washer 20 and 4th gear 19. 1st gear is part of the drive shaft 18.

40 DISASSEMBLY

Transmission

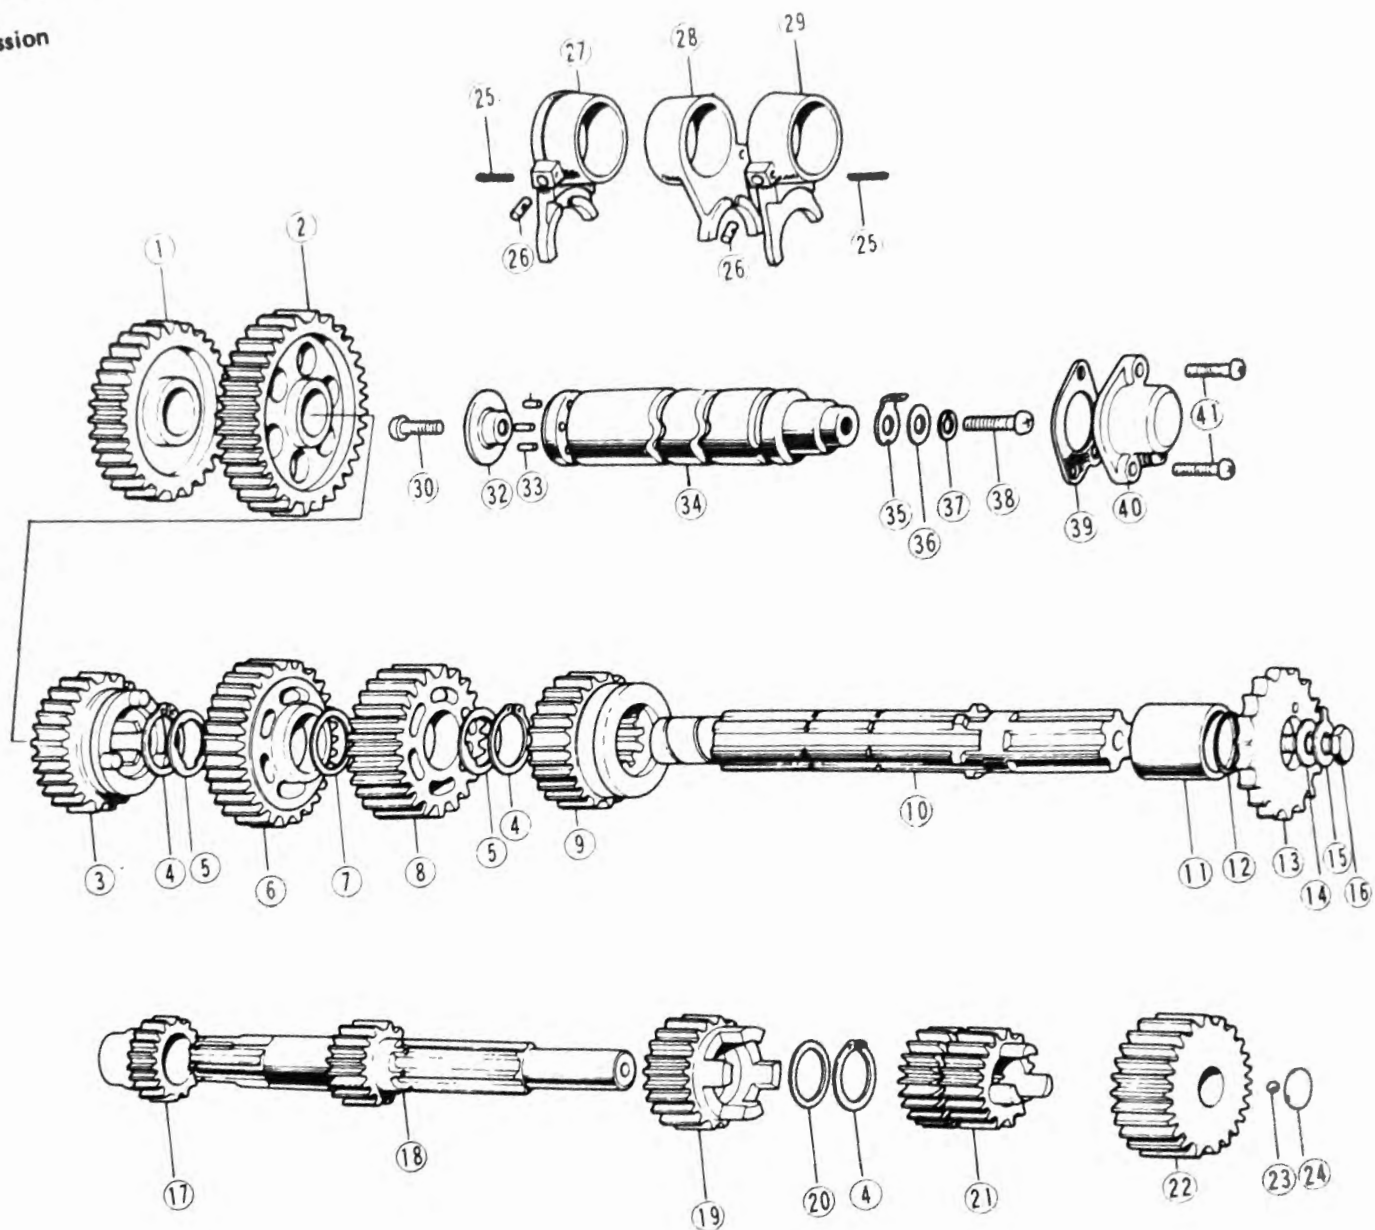

1. Idle Gear (O)
2. 1st Gear (O)
3. 4th Gear (O)
4. Circlip
5. Spline Washer
6. 2nd Gear (O)
7. Plain Washer
8. 3rd Gear (O)
9. 5th Gear (O)
10. Output Shaft
11. Collar
12. O Ring
13. Engine Sprocket
14. Washer

15. Toothed Washer
16. Bolt
17. Idle Gear (D)
18. Drive Shaft & 1st Gear (D)
19. 4th Gear (D)
20. Washer
21. 2nd & 3rd Gear (D)
22. 5th Gear (D)
23. Ball Bearing
24. Washer
25. Cotter Pin
26. Guide Pin
27. 1st & 2nd Shift Fork
28. 4th & 5th Shift Fork

29. 3rd Shift Fork
30. Screw
32. Pin Holder
33. Pin
34. Shift Drum
35. Rotor
36. Washer
37. Lock Washer
38. Screw
39. Gasket
40. Neutral Switch Housing
41. Screw

Drive Shaft Assembly Notes:

1. Be sure that all parts are put back in the correct sequence and that all circlips are properly in place (replace those that are bent or damaged). Proper sequence starting with 1st gear is 1st gear, 4th gear, flat washer, circlip, 2nd & 3rd gear and then 5th gear.
2. Gear identification
 - 1st gear — part of the drive shaft
 - 4th gear — dogs, no dog recesses
 - 2nd & 3rd gear — 2nd gear smaller diameter
 - 5th gear — dog recesses, no dogs, both sides flat

Output Shaft Disassembly:

- Pull off idle gear ①, 1st gear ② and 4th gear ③.
- Remove the circlip ④ and slide off the splined washer ⑤, 2nd gear ⑥, flat washer ⑦, 3rd gear ⑧, and splined washer ⑨.
- Remove the circlip ④ and slide off the 5th gear ⑩.

Output Shaft Assembly Notes:

1. Be sure that all parts are put back in the correct sequence and that all circlips are properly in place

(replace any that are bent or damaged). Proper sequence from the engine sprocket side is 5th gear, circlip, splined washer, 3rd gear, flat washer, 2nd gear, splined washer, circlip, 4th gear, 1st gear and idle gear.

2. Gear identification


- 5th gear — dogs, dog side faces 3rd gear
- 3rd gear — no dogs, dog recesses for 5th gear
- 2nd gear — dog holes, protruding side faces 3rd gear
- 4th gear — double dogged, tooth side dogs fit into 1st gear
- 1st gear — dog holes, side which is sunk further in faces 4th gear
- idle gear — no dogs, no recesses, plain side faces out (engine right side).

CRANKSHAFT**Removal:**

- Remove the transmission (Pg. 35).
- Remove the crankshaft from the right crankcase half using a press.

Crankshaft

118

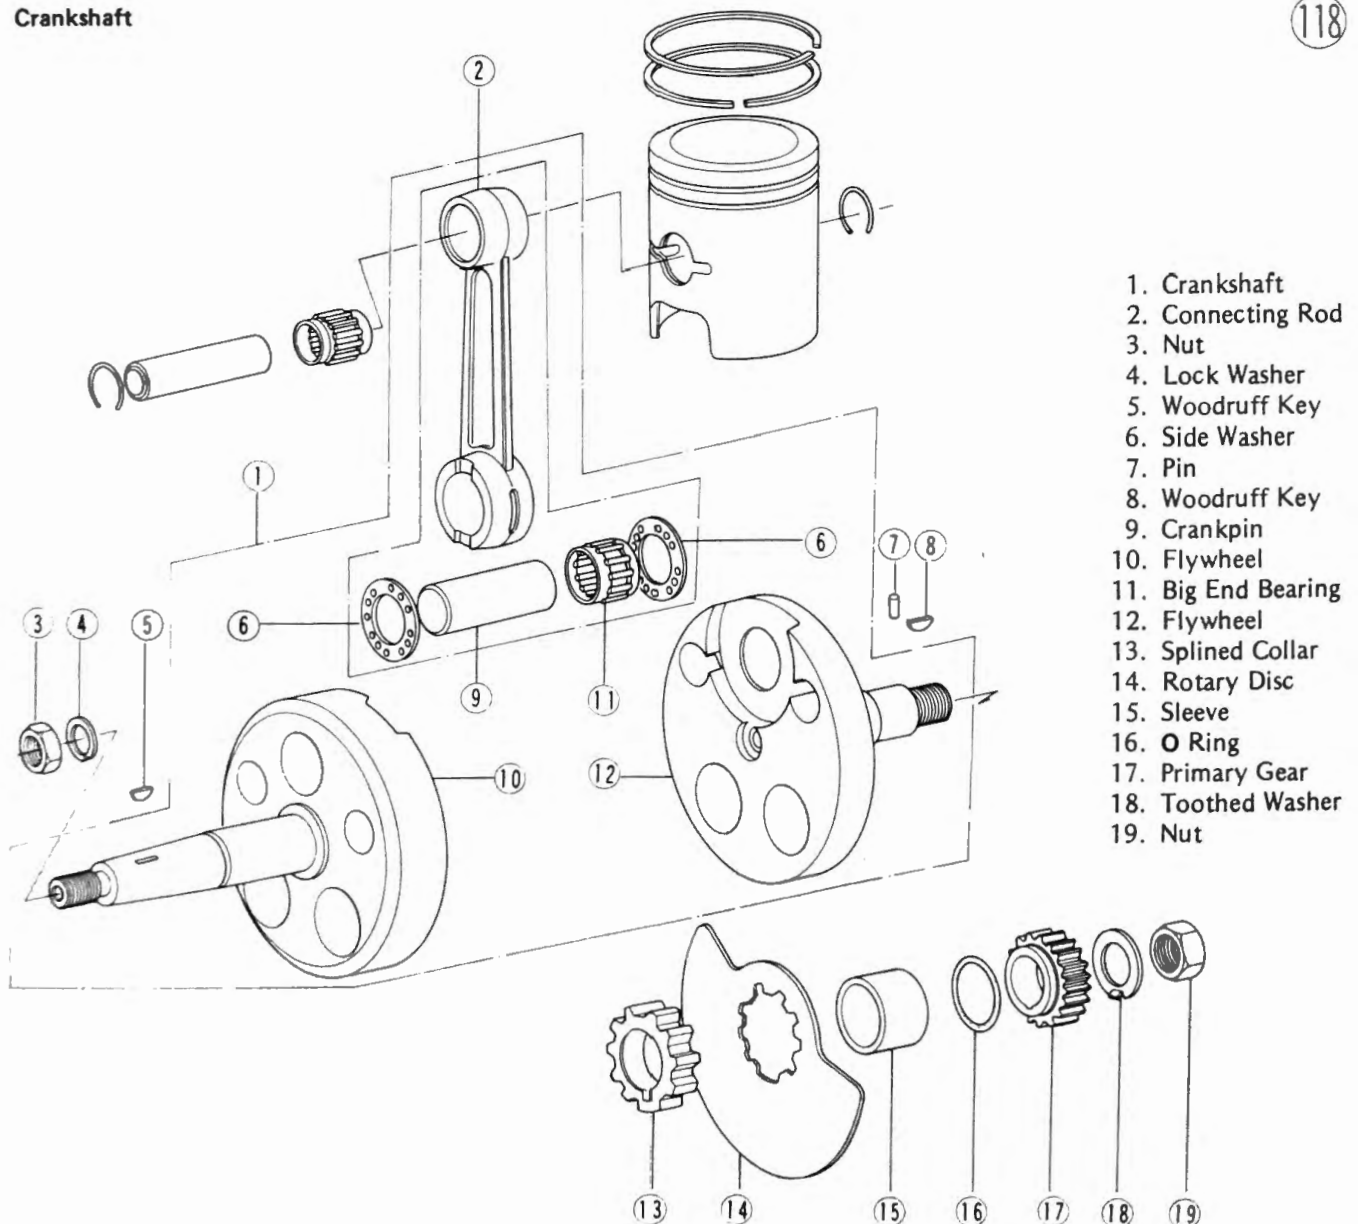

1. Crankshaft
2. Connecting Rod
3. Nut
4. Lock Washer
5. Woodruff Key
6. Side Washer
7. Pin
8. Woodruff Key
9. Crankpin
10. Flywheel
11. Big End Bearing
12. Flywheel
13. Splined Collar
14. Rotary Disc
15. Sleeve
16. O Ring
17. Primary Gear
18. Toothed Washer
19. Nut


42 DISASSEMBLY

- Remove the bearing on the left side of the crankshaft with the bearing puller (special tool).



Installation:

- Install the left crankshaft bearing into the left crankcase half using the bearing driver, bearing driver holder (special tools) and a press.

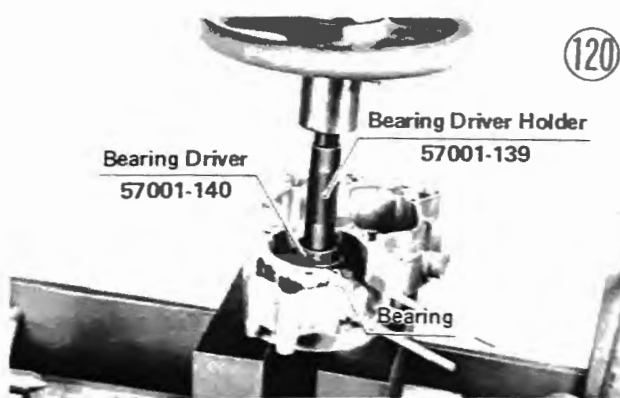

- Install the crankshaft into the right crankcase using a press.
- Install the transmission (Pg. 35).

Disassembly:

- If it should be necessary to disassemble the crankshaft ①, use a press to remove the crankpin ②. Removal of the crankpin separates the flywheels ③ ④, connecting rod ⑤, big end bearing ⑥, crankpin and connecting rod side washers ⑦.

Assembly Notes:

- Since assembly of the crankshaft demands exacting tolerances, the disassembly and reassembly of the crankshaft can only be done by a shop having the necessary tools and equipment. The following information gives the tolerances that are necessary for a properly equipped shop to reassemble the crankshaft.
1. The flywheels and crankpin are cold-fitted to a tolerance of 0.058~0.077 mm.
 2. Select a crankpin, needle bearing and connecting rod such that the radial clearance will be 0.029~0.039 mm.
 3. Press with a thickness gauge inserted between the connecting rod and one of the flywheels so that the side clearance will be 0.35~0.45 mm.

4. Supporting both ends of the crankshaft, check the crankshaft runout using a dial gauge. The flywheels must be aligned so that the runout is under 0.10 mm TIR (Pg. 73).


CRANKCASE

Removal:

- Remove the crankshaft (Pg. 41).

Left Crankcase Half Disassembly:

- Remove the crankshaft, shift shaft and output shaft oil seals with a hook.

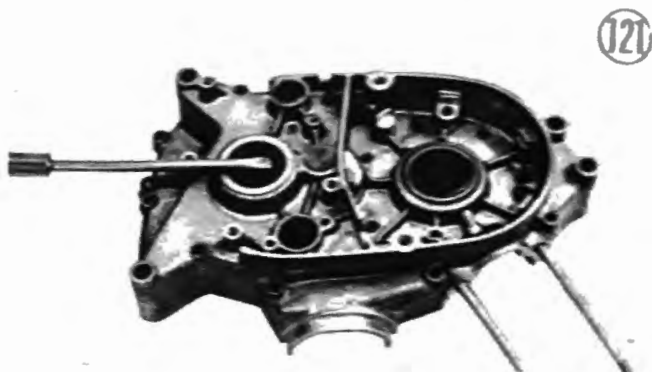


- Using the bearing driver holder (special tool) and a press, take the output shaft bearing out the right side.



Left Crankcase Half Assembly Notes:

1. Any oil seal that is removed must be replaced with a new one.
2. Inspect the bearings and replace if bad (Pg. 85).
3. Apply oil to the bearing and oil seals. Using a press and special tools, install the crankshaft, shift shaft, output shaft oil seals and the output shaft bearing.




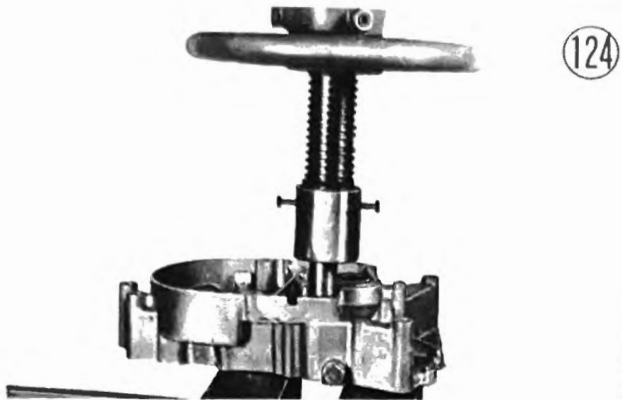

- Using the bearing driver holder (special tool) and a press, take the drive shaft bearing out the right side.



- Remove the kick shaft oil seal with a hook.

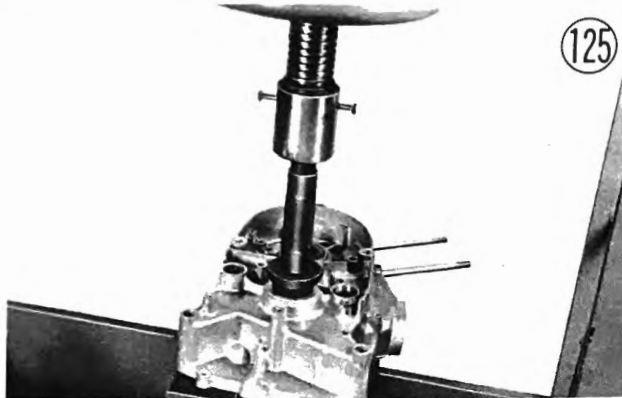

Right Crankcase Half Assembly Notes:

1. Any oil seal that is removed must be replaced with a new one.
2. Inspect the bearings and replace if bad (Pg. 85).
3. Apply oil to the bearings and the oil seal. Using a press and special tools, install the crankshaft bearing, the drive shaft bearing and the kick shaft oil seal.

Right Crankcase Half Disassembly:

- Remove the crankshaft bearing holder screws (4), and then remove the holder.
- Using the bearing driver holder (special tool) and a press, take the crankshaft bearing out the left side.



44 DISASSEMBLY

FUEL TANK

Removal:

- Unlock and open the seat. Unhook the seat stopper and open the seat further.



- Turn the fuel tap to the OFF position, slide down the hose clamp, and pull the fuel hose off the tap.
- Unhook the rubber retaining band.
- Lift up the rear of the fuel tank and pull off the fuel tank.


Installation

- Mount the fuel tank.
- Replace the rubber retaining band. Hook the seat stopper, and replace and lock the seat.
- Fit the fuel hose back onto the fuel tap, and slide the clamp into place.


FRONT WHEEL

Removal:

- Disconnect the lower end of the speedometer cable with pliers.

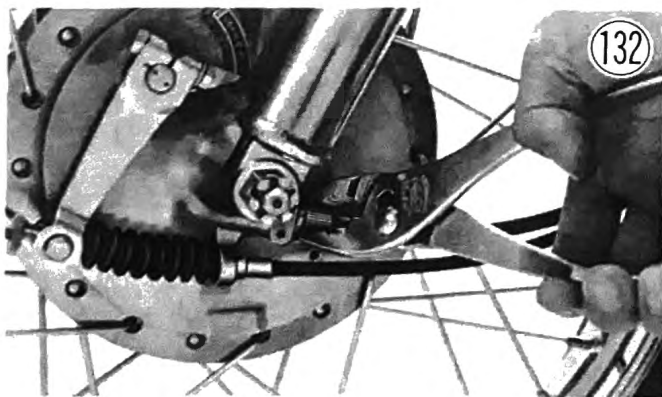


- Remove the adjuster from the lower end of the front brake cable, and pull the cable free from the front brake panel.
- Remove the axle nut and lock washer.
- Using a jack under the engine, take out the axle and remove the front wheel.

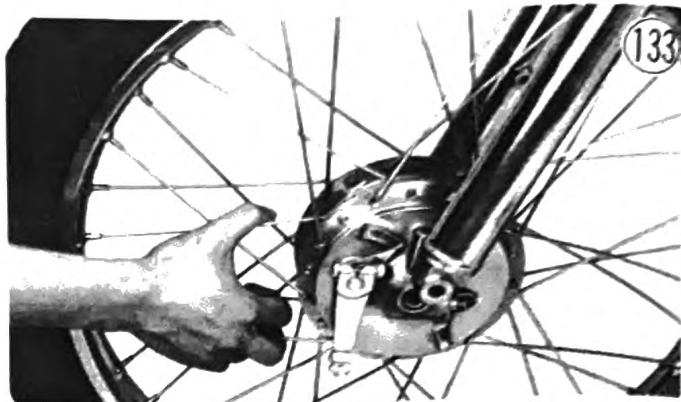

Installation

- Replace the front wheel. Be certain that the ridge on the front fork fits into the slot on the brake panel. Tighten the axle nut with 3.4~4.6 kg-m (25~33 ft-lbs) of torque. The axle has the lock washer.

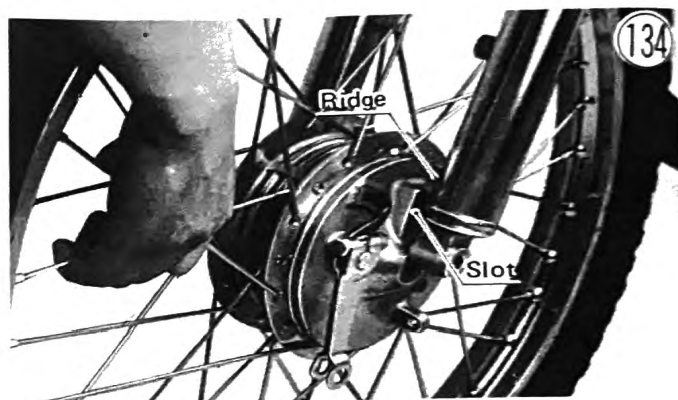

- Turn the front wheel inserting the speedometer cable so that the tongue of the speedometer pinion will seat in the groove in the end of the cable.
- Mount the front brake cable, dust cover, brake cable joint and adjuster onto the brake panel.
- Adjust the front brake (Pg. 14).


Front Brake Disassembly

- Pull off the brake panel.
- Remove the brake shoes by pulling up at the center of the linings.




- Remove the springs to separate the two brake shoes.
- If the front brake panel oil seal is deteriorated or damaged, remove and replace it with a new one.

Remove the speedometer gear receiver and speedometer gear. If the speedometer cable pulling or speedometer pinion needs to be removed, the pin in the brake cable must first be drilled out.

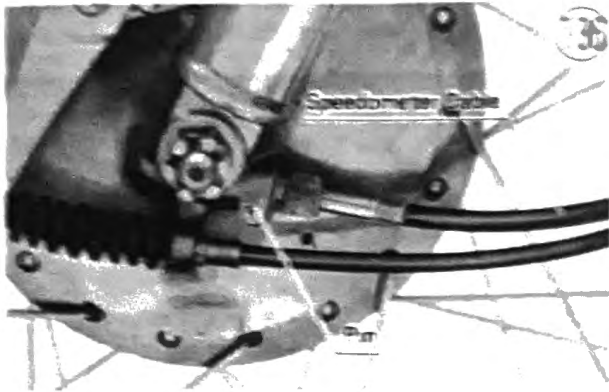

- Mark the position of the cam lever so that it can later be installed at the same angle. The angle between the brake cam lever and the brake cable should be 90° – 30° when the brake is fully applied.
- Unbolt and remove the cam lever, brake lining wear indicator, washer, O ring and camshaft.

Front Hub

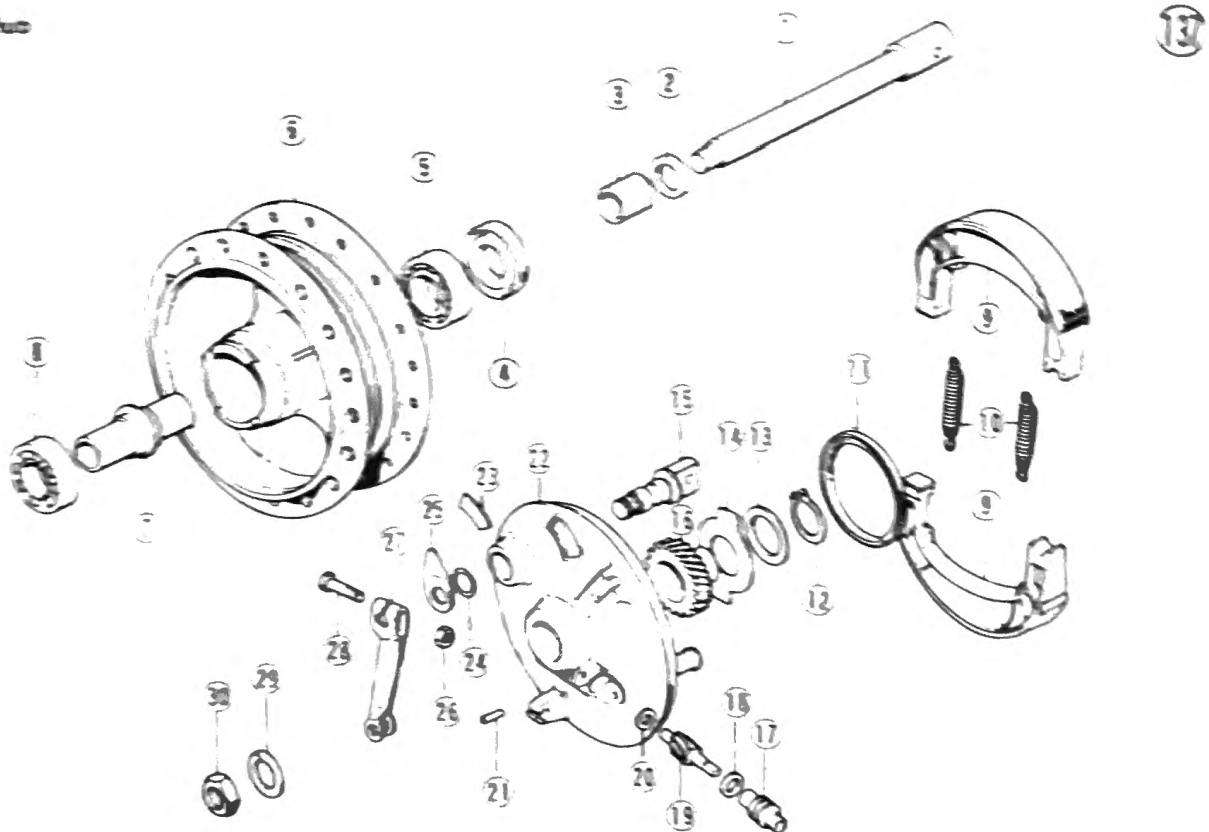

1. Axle
2. Grease Seal Cover
3. Collar
4. Grease Seal
5. Bearing
6. Front Hub
7. Distance Collar
8. Bearing

9. Brake Shoe
10. Spring
11. Grease Seal
12. Circlip
13. Washer
14. Gear Receiver
15. Cam Shaft
16. Speedometer Gear

17. Bushing
18. Washer
19. Speedometer Pinion
20. Washer
21. Pin
22. Brake Panel
23. Label
24. O Ring

25. Indicator
26. Nut
27. Cam Lever
28. Bolt
29. Lock Washer
30. Nut

Front Brake Assembly

See Fig. 17 for location information.

- Fit camshaft not to get oil or grease on the brake drum or brake linings. Any oil that inadvertently gets on the drum or linings should be cleaned off with brachol or solvent.
- Put back the speedometer gear and speedometer receiver, taking care not to damage the oil seal.
- Put the camshaft back into the panel. The camshaft must be installed so that the triangular mark on the cam surface points to the center of the panel. Improper installation will cause ineffective braking.
- Fit the springs onto the brake shoes and install the shoes in the brake panel.
- Once the shoes have been replaced, place the O ring on the camshaft and fit the indicator on the serrations so that it points to the extreme right of the USABLE RANGE mark.
- Put the cam lever back into its original position on the camshaft, and tighten the bolt.
- Replace the front brake panel.

Front Hub Disassembly

- Remove the grease seal cover and hub collar from the right side.

46 DISASSEMBLY

- Pull out the front hub grease seal.
- To remove the right side hub bearing, insert a metal rod through from the brake panel side and catch it on the side of the bearing, and remove the bearing by tapping evenly around the bearing inner race.



- Remove the distance collar, and remove the other bearing by tapping evenly around the bearing inner race.

Front Hub Assembly

- See Pg. 92 for lubrication information.
- Install the left bearing using a press or wheel bearing driver (special tool).



- Replace the distance collar.
- Install the right bearing using a press or wheel bearing driver (special tool).




- Replace the grease seal with a new one using a metal rod or suitable tool.
- Replace the hub collar and grease seal cover.


REAR WHEEL

Removal:

- Prop the motorcycle up by placing a box or some other suitable object under the engine.
- Remove the cotter pin, torque link bolt, nut and lock washer to free the torque link from the brake panel.

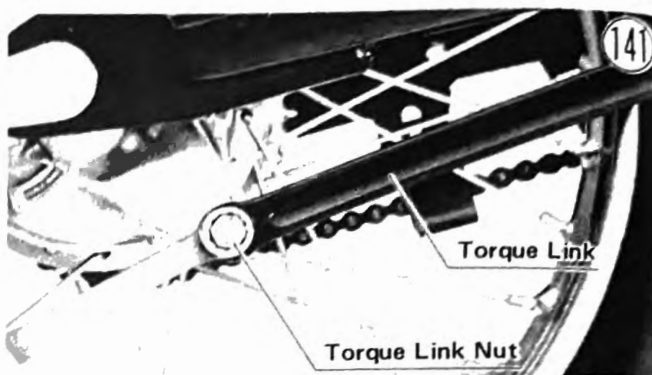

- Take off the adjusting nut on the brake rod to free the brake rod from the brake cam lever.
 - Remove the drive chain (Pg. 31).
 - Remove the axle nut and the sleeve nut.
- NOTE:** If you do not disassemble the rear coupling after, it is not necessary to remove the drive chain and sleeve nut.

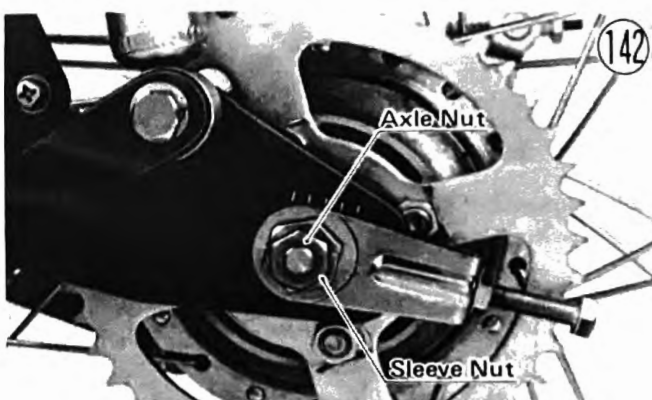

- Pull out the axle, removing the right collar while dropping out the wheel.

Installation

- Replace the rear wheel assembly, making sure that the collar is at the right side of the brake panel.
- Check to see that a chain adjuster is located at each end of the axle.
- Replace the torque link and tighten the nut loosely. The torque link bolt has a nut and lock washer.
- Replace the drive chain (Pg. 31).
- Tighten the axle nut with 3.4 ~ 4.6 kg-m (25 ~ 33 ft-lbs) of torque.
- Tighten the sleeve nut.
- Tighten the torque link nut with 2.6 ~ 3.5 kg-m (19 ~ 25 ft-lbs) of torque. Put the cotter pin through the torque link bolt.
- Mount the brake rod, spring, and adjusting nut on the brake lever.
- Adjust the rear brake (Pg. 14).

Rear Hub Disassembly

- Pull off the coupling.
- Insert a metal rod into the hub from the brake side, and remove the bearing by tapping evenly around the bearing inner race.
- Remove the distance collar.
- Insert a metal rod into the hub from the coupling side, set the rod to the inner race of the bearing, and remove the other bearing by tapping evenly around the bearing inner race.

Rear Hub Assembly

- See Pg. 92 for lubrication information.
- Install the left bearing using a press or wheel bearing driver (special tool).



Rear Hub


- Replace the distance collar.
- Install the right bearing using a press or wheel bearing driver (special tool).
- Replace the coupling.

Rear Coupling Disassembly

- Straighten back the bent portions of the rear sprocket washers.



- Remove the rear sprocket nuts (4) and both sprocket washers.
- Pull off the rear sprocket.

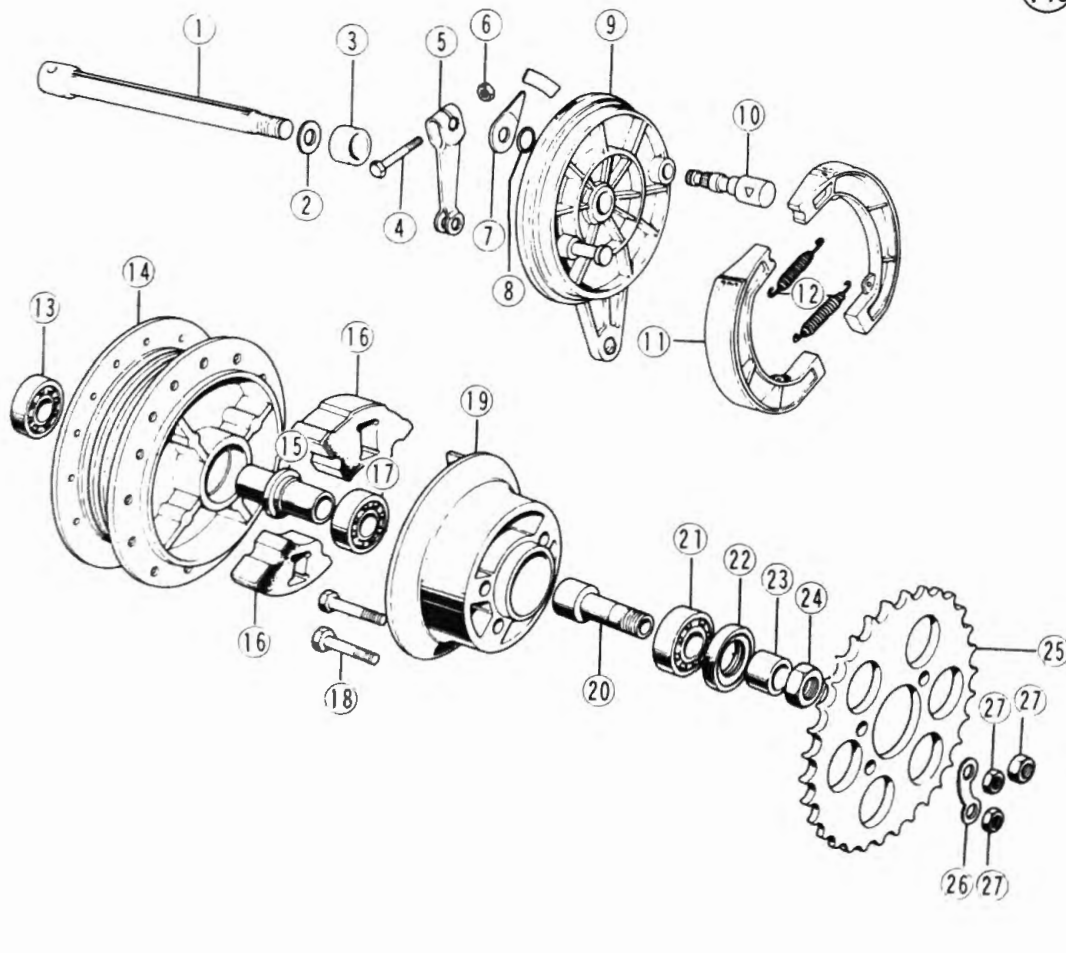

1. Axle
2. Washer
3. Collar
4. Bolt
5. Cam Lever
6. Nut
7. Indicator
8. O Ring
9. Brake Panel
10. Camshaft
11. Brake Shoe
12. Spring
13. Bearing
14. Rear Hub
15. Distance Collar
16. Damper
17. Bearing
18. Bolt
19. Coupling
20. Sleeve
21. Bearing
22. Grease Seal
23. Collar
24. Nut
25. Rear Sprocket
26. Washer
27. Nut

48 DISASSEMBLY

- Pull off the sleeve from the inside of the coupling.
- Pull off the left collar.
- Pull out the rear hub grease seal.
- Insert a metal rod into the hub side of the coupling, set the rod to the inner race of the bearing, and remove the bearing by tapping evenly around the bearing inner race.

Rear Coupling Assembly

- See Pg. 92 for lubrication information.
- Install the bearing using a press or wheel bearing driver (special tool).



- Replace the grease seal with a new one using a press or suitable tool.
- Replace the sprocket, bolts (4), washers (2) and nuts (4), and then tighten the nuts with 2.0 ~ 2.2 kg-m (14.5 ~ 16.0 ft-lbs) of torque.
- Bend back the part of the washer over the side of the nuts.
- Replace the left collar.
- Replace the sleeve.


Rear Brake Disassembly

- Same as for front wheel (Pg. 44).

TIRE, TUBE

Removal:

- Remove the wheel from the motorcycle (Pg. 44, 46).
- Take out the valve core to let out the air.
- Remove the valve stem nut.
- Use a rubber mallet to break the tire beads away from both sides of the rim.
- Step on the side of the tire opposite the valve stem, and start prying the tire off the rim near the valve stem with tire irons. **Take care not to insert the tire irons so deeply that the tube gets damaged.**

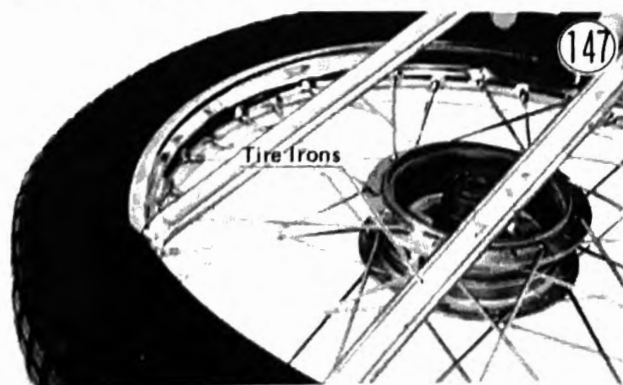

- Remove the tube when one side of the tire is pried off.
- Pry the tire off the rim.

Installation:

- Put just enough air in the tube to keep it from getting caught between the tire and rim, and insert it into the tire at this point, even if the tire was completely removed from the rim. Insert the valve stem into the rim and screw the nut on loosely.
- If the tire was completely removed, pry one side back onto the rim.
- Pry the other side of the tire onto the rim, starting at the side opposite the valve. **Take care not to insert the tire irons so deeply that the tube gets damaged.**
- Check that the tube is not pinched between the tire and rim, and then inflate it to the standard pressure (Pg. 89).
- Tighten the valve stem nuts, and put on the valve cap.
- Mount the wheel on the motorcycle.

RIM


Removal:

- Remove the wheel from the motorcycle (Pg. 44, 46).
- Take the tire and tube off the rim (Pg. 48).
- Tape or wire all the spoke intersections so that the spokes don't get mixed up, and unscrew the nipples from all the spokes with a screwdriver.



Installation:

- Fit all the spokes through the holes, and screw all the nipples onto the spokes, tightening them partially.
- Suspend the wheel by the axle, and set up a dial gauge to measure rim runout.

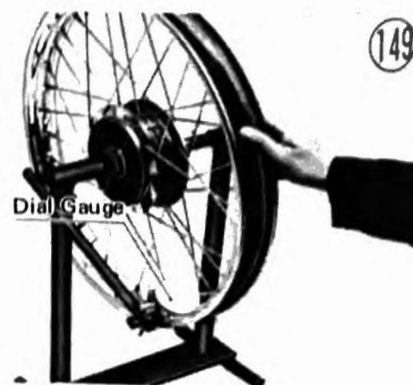

- Tighten the spokes evenly so that the radial (out from the axle) runout is less than 0.8 mm and the axial (side to side) runout is less than 0.5 mm.
- Make sure the spokes are tightened evenly. Standard torque is 0.2~0.4 kg-m (17~35 in-lbs).
- Mount the tube and tire on the rim, and mount the wheel on the motorcycle.

SPOKE (breakage replacement)

- Reduce the tire air pressure by a small amount.
- Insert the new spoke through the hub, and bend it to meet the nipple.
- Tighten it with a spoke wrench. Standard torque is 0.2~0.4 kg-m (17~35 in-lbs).




- Inflate the tire to standard pressure (Pg. 89).


HANDLEBAR

Removal:


- Take off the rear view mirror.
- Slide the clutch lever dust cover out of place.
- Loosen the lock nut on the clutch lever, and screw in the adjuster.
- Line up the slots in the clutch lever, lock nut and adjuster.
- Remove the carburetor cover.
- Loosen the lock nuts, and back out the clutch adjusting screw to give the clutch cable plenty of play. Free the inner cable from the lever.

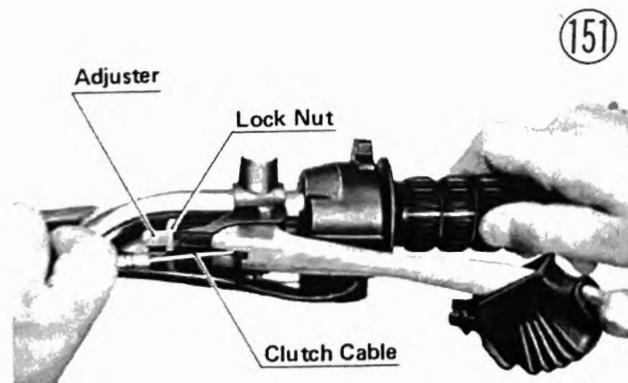


- Remove the straps (2) which hold the wiring to the handlebar.
- Take out the light switch housing screws (2) and remove the light switch housing from the handlebar.

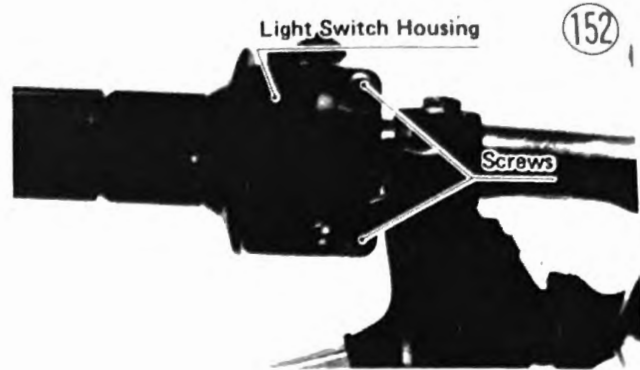

- Take out the mounting bolts (2) from each turn signal clamp and remove both turn signals.
- Loosen the engine stop switch housing screws (2), and loosen the front brake lever bolt.

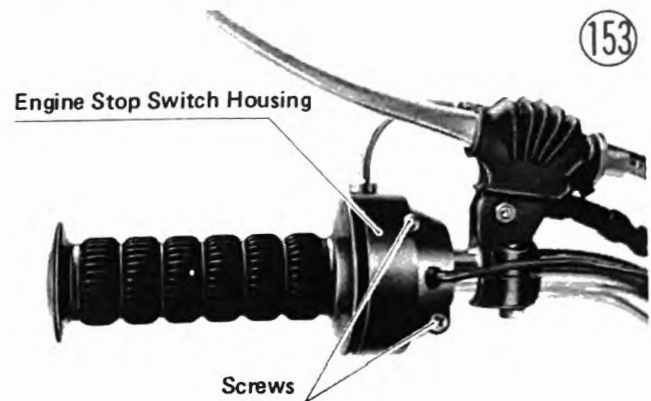

- Undo the handlebar clamp bolts (4), remove the clamps, and slide the handlebar from the front brake lever and the engine stop switch and throttle grip assembly.

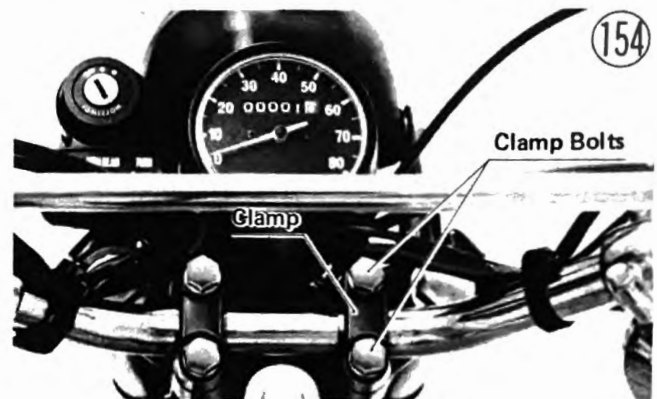


- To remove the clutch lever, loosen the clutch lever bolt, cut off the left handlegrip, which is bonded to the handlebar, and slide off the clutch lever.

Installation:

- If the clutch lever and left handlegrip were removed, slide the clutch lever back on the handlebar, tighten its bolt with the lever at the proper angle, and glue a new left handlegrip onto the handlebar.

50 DISASSEMBLY

- Slide the right side of the handlebar through the front brake lever into the engine stop switch and throttle grip assembly (the throttle grip cable runs above the front brake lever), and mount it in the clamps so that the angle of the handlebar matches the angle of the front fork as shown in Fig. 168. Torque for the handlebar clamp bolts is 1.6 ~ 2.2 kg-m (11.5 ~ 16 ft-lbs). Each bolt has a lock washer.

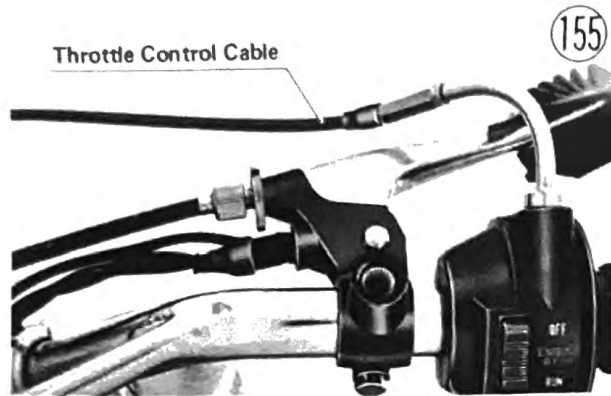


- Tighten the engine stop switch housing screws, and tighten the front brake lever bolt.
- Replace both turn signals. Each bolt has a lock washer and flat washer.
- Replace the light switch housing.
- Replace the straps (2) which hold the wiring to the handlebar.
- Replace the rear view mirror.
- Fit the clutch cable back into the clutch lever.
- Adjust the clutch (Pg. 13).

CLUTCH CABLE

Removal:


- Remove the choke knob, and slide the carburetor rubber cap up out of place.
- Take off the carburetor cover and gasket.
- Remove the carburetor overflow drain (Fig. 52).
- Loosen the clutch release lever lock nut, and back out the adjusting screw a couple of turns.

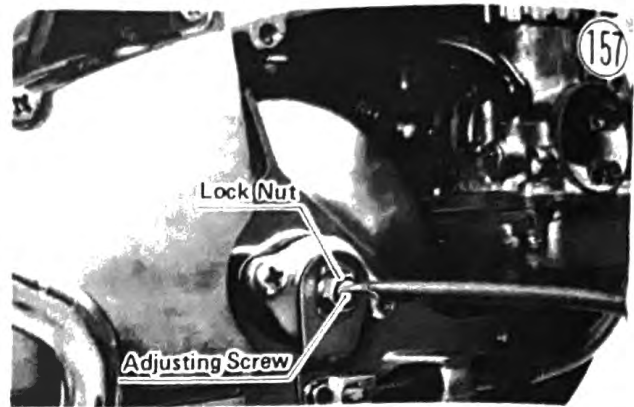

- Pry open the tab that holds the tip of the clutch cable in place, and free the tip of the cable from the clutch release lever (Fig. 53).
- Remove the spring, and pull the clutch cable free from the right engine cover.
- Remove the strap that holds the clutch cable to the down tube.
- Slide back the clutch lever dust cover.
- Loosen the lock nut at the clutch lever.
- Line up the slots on the clutch lever, lock nut, and adjuster, and then slip the cable out.

Installation

- Hook the clutch cable back to the clutch lever.
- Be certain that the clutch cable runs through the cable guide on the handlebar clamp.

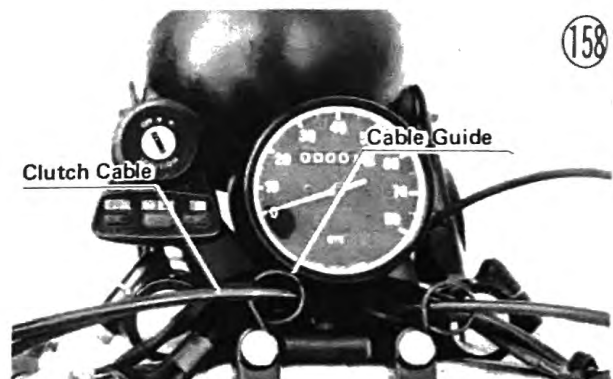

- Route the clutch cable through the right engine cover. Replace the spring and connect the tip of the cable to the clutch release lever.
- Bend back the tab so that it holds the tip of the clutch cable.
- Adjust the clutch (Pg. 13).
- Replace the carburetor overflow drain at the bottom of the right engine cover.
- Replace the carburetor cover and its gasket, and tighten the screws.
- Slide the carburetor rubber cap down. Be sure that the rubber extender fits properly on the idle adjusting screw.
- Install the choke knob.
- Clamp the cable back on the down tube.

THROTTLE CONTROL CABLE (Throttle, Carburetor, and Oil Pump Cable Unit)

Removal:

- Remove the choke knob, and slide the carburetor rubber cap up out of place.
- Take off the carburetor cover and gasket.
- Hold the kick pedal out of the way with a screwdriver to facilitate removal of the oil pump cover.




- Remove the oil pump cover.
- Bend out the tab on the oil pump lever, and free the end of the oil pump cable from the lever (Fig. 50).
- Slip the oil pump outlet hose out of the rubber fitting.
- Pulling the rubber fitting free, pull the oil pump cable from the right engine cover.
- Turn the fuel tap to the OFF position, slide up the hose clamp and pull the fuel hose from the carburetor.
- Remove the rubber grommet from the front of the right engine cover, insert a screwdriver through the hole, and loosen the carburetor mounting bolt.
- Pull off the carburetor.



- Unscrew the carburetor cap and pull out the throttle valve assembly.
- Pull the spring up from where it seats in the valve, and remove the inner cable free from the base of the throttle valve.




- Take out the engine stop switch housing screws (2), and slide the lower part of the housing a short way down the switch lead. Slide the throttle cable tip out of the groove in the throttle grip. Pull the metal guide retainer out of the housing and free the cable.

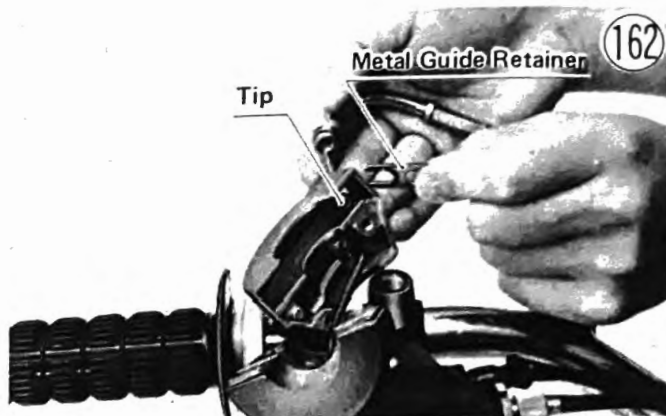

- Pull the carburetor cable and oil pump cable from the carburetor rubber cap, and free the entire throttle control cable from the motorcycle.

Installation


- Run the lower end of the carburetor cable and oil pump cable through the wire coil, and pass the cables through the carburetor rubber cap.

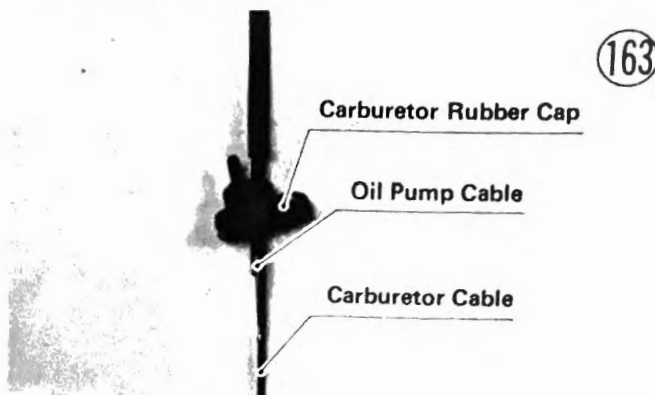

- Seeing that no cable gets twisted with another, clamp the throttle control cable to the top tube.
- Route the throttle cable between the handlebar and the speedometer.

52 DISASSEMBLY

- Fit the throttle grip metal guide back into the engine stop switch housing, and secure it in place with the retainer. The throttle cable runs above the front brake cable. Fit the inner cable back into the groove in the throttle grip. Replace the engine stop switch housing and tighten the screws.
- Insert the cable through the carburetor cap and mixing chamber top. Compress the spring into the cap, insert the tip of the cable into the slot in the base of the throttle valve base, and slip it to its rest position.

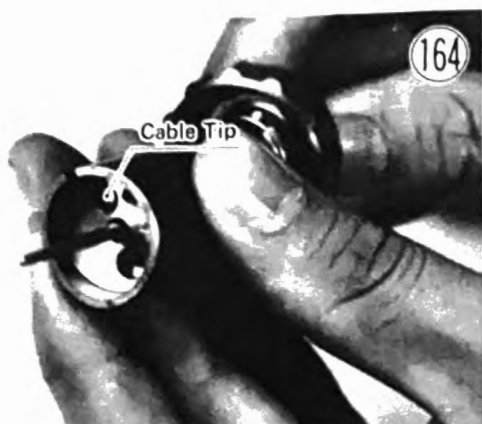

- Fit the throttle valve and the carburetor top back into the carburetor, and screw on the carburetor cap.
- Check to see that the carburetor overflow grommet is properly positioned.
- Replace the carburetor. Tighten the mounting bolt and put the rubber grommet back into the front of the right engine cover.
- Fit the fuel hose back onto the carburetor, and slide down the clamp.
- Route the oil pump inner cable through the oil pump adjuster. Install the rubber fitting with the oil pump outlet hose. Hook the oil pump inner cable onto the oil pump lever, and bend the tab back onto the end of the cable.
- Adjust the throttle control cable (Pg. 9).
- Replace the carburetor cover and gasket and tighten the screws.



- Slide the carburetor rubber cap down, and install the choke knob.
- Replace the oil pump cover and tighten the screws.
- Replace the fuel tank and the seat (Pg. 44).

FRONT BRAKE CABLE

Removal


- Remove the adjuster from the lower end of the front brake cable, and pull the cable free from the front brake panel.
- Free the front brake cable from the plastic mount that holds it to the speedometer cable. Slide back the front brake lever dust cover.



- Loosen the lock nut at the front brake lever, and screw in the adjuster.
- Line up the slots on the brake lever, lock nut, and adjuster, and free the front brake cable from the brake lever.

Installation

- Run the cable through the guide, and then between the handlebar and speedometer. Route the cable with a minimum of bending so that the inner cable will slide smoothly.
- Connect the upper end of the cable back into the brake lever through the slots on the brake lever, lock nut and adjuster.

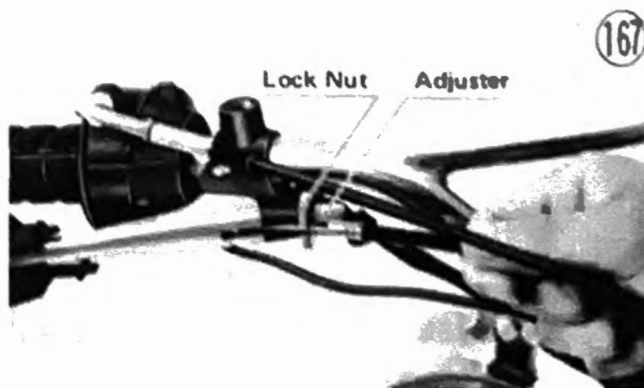

- Slide back the front brake lever dust cover. Route the cable through the wire coil on the handlebar clamp.
- Slide the cable back into the plastic mount to hold it.
- Replace the lower part of the inner cable, spring, dust cover, and joint, and screw in the adjuster.
- Adjust the front brake (Pg. 14).

SPEEDOMETER CABLE**Removal**

- Unscrew the upper and lower ends of the speedometer cable with pliers.



168

- Slide the cable free from the plastic mount that holds it to the front brake cable.
- Pull the cable free from the motorcycle.

Installation

- Run the speedometer cable through the wire coil on the steering stem base to the speedometer.
- Screw the upper end of the cable to the speedometer with pliers.
- Insert the speedometer inner cable into the speedometer gear housing while turning the wheel so that the tongue of the speedometer pinion will seat in the slot in the end of the cable. Tighten the cable nut with pliers.
- Slide the cable back into the plastic mount to hold it.

HEADLIGHT**Removal**

- Take out the retaining screw and pull the headlight unit out of its housing.



169


- Take out the mounting bolts and let the headlight housing and headlight unit hang free.

Installation

- Replace the headlight housing, and tighten the mounting bolts.
- Install the headlight unit in the housing and tighten the retaining screw.
- Adjust the headlight (Pg. 17).


Headlight Unit Disassembly

- Hold one thumb on one end of one of the springs (3) to keep it from flying off while prying the center up to remove the spring.

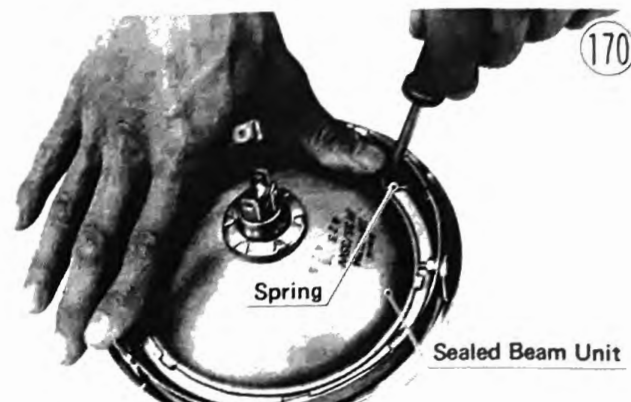

170

- Remove the other springs the same way, and separate the sealed beam unit from the inner rim.
- Remove the pivot screws, nuts, and lockwashers (2 ea), and the horizontal adjusting screw. A nut, spring, spring seat, and collar come off with the adjusting screw.
- Separate the outer rim from the inner rim.

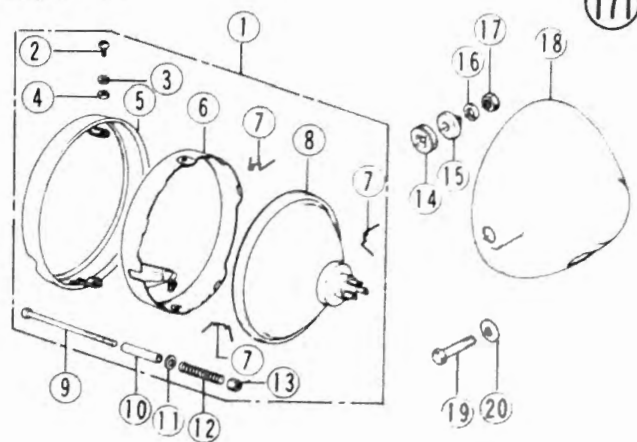Headlight Unit

171

- | | |
|---------------------|-----------------------|
| 1. Headlight Unit | 11. Washer |
| 2. Screw | 12. Spring |
| 3. Lock Washer | 13. Nut |
| 4. Nut | 14. Rubber Damper |
| 5. Outer Rim | 15. Housing Insert |
| 6. Inner Rim | 16. Lock Washer |
| 7. Spring | 17. Nut |
| 8. Sealed Beam Unit | 18. Headlight Housing |
| 9. Adjusting Screw | 19. Mounting Bolt |
| 10. Collar | 20. Washer |

54 DISASSEMBLY

Headlight Unit Assembly Notes

1. Place the sealed beam unit into the inner rim, fitting the raised portion into its holder on the inner rim. This ensures that the part of the sealed beam unit marked "TOP" will be on top after the headlight unit is mounted in the headlight housing.



2. Install each spring. Fit one end of the spring into place with the spring center on the unit edge, and then fit the other end into place using needle nose pliers.



- Take out the screws (2), and remove the ignition switch.
- Put the ignition switch into the place, and tighten the screws.
- Bend the clamp over the ignition switch lead to secure it.
- Route the leads through the straps, and connect them to the main harness.
- Tighten the straps.
- Replace the headlight assembly (Pg. 53).
- Replace the fuel tank and the seat (Pg. 44).
- Check that all the electrical equipment works properly.

SPEEDOMETER

Removal

- Remove the headlight assembly (Pg. 53).
- Unscrew the upper end of the speedometer cable with pliers.
- Remove the nuts (2) from the bottom of the speedometer mounting bracket. A flat washer and rubber damper come off with each nut.
- Pull the speedometer up a little.
- Disconnect the speedometer light lead to free the speedometer.

Installation

- Be certain that the rubber damper is on the speedometer bracket. Replace the speedometer cover over it.
- Run the speedometer light lead up through the cover, and connect it to the speedometer.
- Put a rubber damper, a flat washer, a lock washer and a nut on each stud, and tighten the nuts.
- Fit the cable into the speedometer, and tighten its nut.
- Replace the headlight assembly (Pg. 53).

IGNITION SWITCH


Removal

- Remove the headlight assembly (Pg. 53).
- Remove the fuel tank and the seat (Pg. 44).
- Loosen the straps and disconnect the ignition leads.
- Bend out the clamp that holds the lead to the ignition switch bracket.


FRONT BRAKE LIGHT SWITCH

Removal

- Take out the retaining screw and pull the headlight unit out of its housing.
- Disconnect the switch leads in the headlight housing and pull the leads out of the housing.
- Undo the strap on the right side of the handlebar, and free the leads.

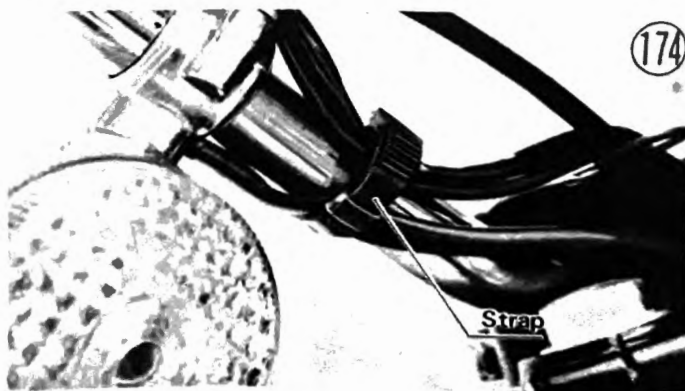

- Using a thin-bladed screwdriver or some other suitable tool, press in the front brake light switch tab which catches in the hole in the underside of the front brake lever body, and then remove the switch.

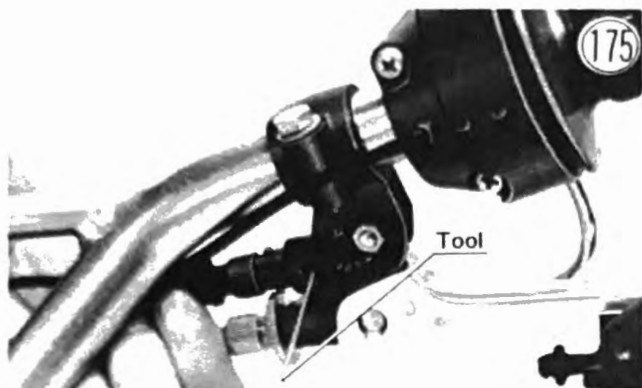


Installation:

- Put the front brake light switch back into the front brake lever body, with its tab side down.
- Tighten the strap.
- Reconnect the leads in the headlight housing.
- Replace the headlight unit, and tighten the retaining screw.

REAR BRAKE LIGHT SWITCH

Removal

- Remove the fuel tank and the seat (Pg. 44).
- Pull off the oil tank cover. Take out the screws (2) and let the oil tank hang free.
- Disconnect the rear brake light switch leads near the top tube. Loosen the straps, and bend out the clamp.
- Unscrew the nut, pull off the switch, and remove the spring.

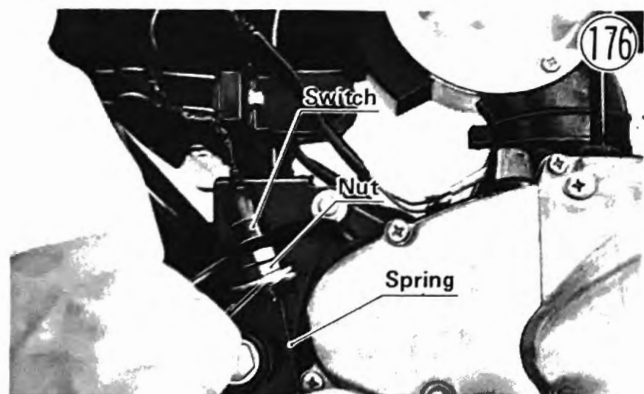


Installation

- Replace the spring, and then replace the rear brake light switch.
- Route the switch leads through the straps and connect them, and tighten the straps. Bend the clamp over the switch leads.
- Replace the oil tank, tighten the screws (3), and replace the oil tank cover.
- Replace the fuel tank and the seat (Pg. 44).
- Adjust the rear brake light switch (Pg. 16).

FRONT FORK

Removal

- Remove the front wheel (Pg. 44).
- If the shock absorber is to be disassembled after removal, loosen the shock absorber top bolt. Loosen the upper clamp bolt.

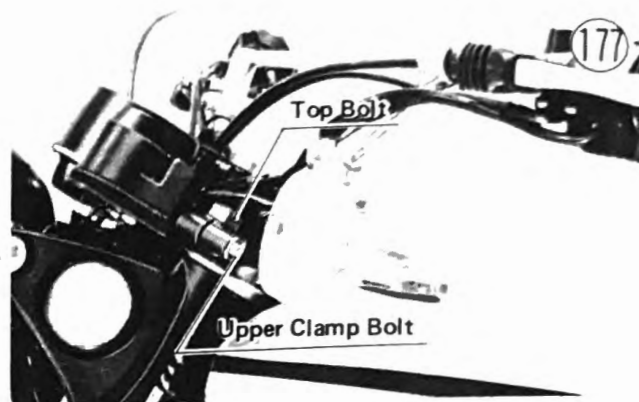

- Loosen the lower clamp bolt.




- With a twisting motion, work the shock absorber down and out.

Installation

- Apply a little oil to the inner tube.
- Slide the shock absorber up through the lower and upper clamps until the upper surface of the top bolt flange is even with the upper surface of the stem head.



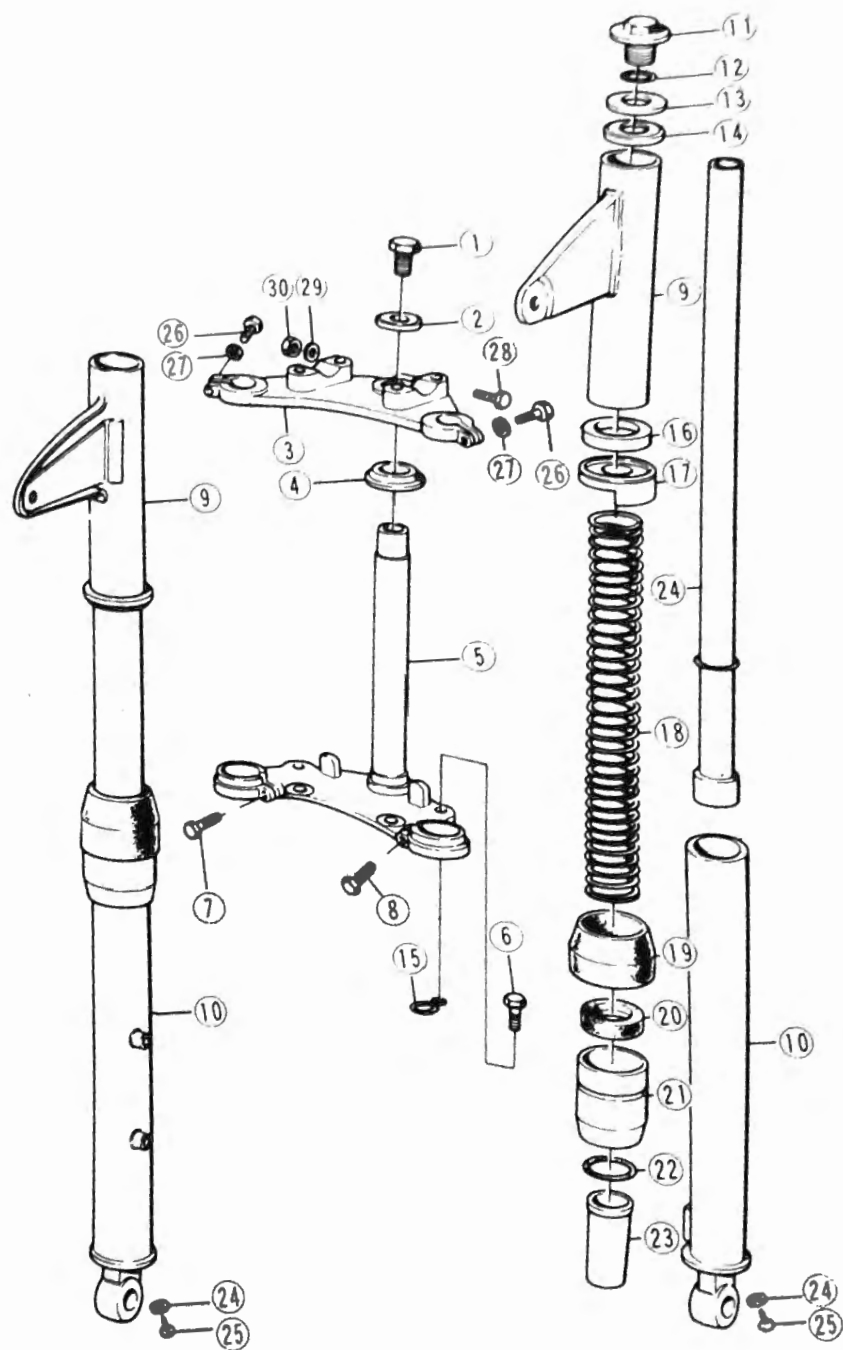

- 1. Stem Head Bolt
- 2. Washer
- 3. Stem Head
- 4. Outer Race
- 5. Steering Stem
- 6. Bolt
- 7. Bolt
- 8. Bolt
- 9. Fork Cover

- 10. Outer Tube
- 11. Top Bolt
- 12. O Ring
- 13. Washer
- 14. Rubber Damper
- 15. Cable Guide
- 16. Rubber Damper
- 17. Fork Cover Guide
- 18. Spring

- 19. Dust Seal
- 20. Oil Seal
- 21. Tube Nut
- 22. Washer
- 23. Slide Metal
- 24. Gasket
- 25. Drain Screw
- 26. Bolt
- 27. Washer

- 28. Bolt
- 29. Washer
- 30. Nut


- Tighten the upper clamp bolt with 1.6 ~ 2.2 kg-m (11.5 ~ 16 ft-lbs) of torque. If the top bolt was loosened during removal, tighten it with 1.5 ~ 2.0 kg-m (11 ~ 14.5 ft-lbs) of torque.
- Tighten the lower clamp bolt with 2.6 ~ 3.5 kg-m (19 ~ 25 ft-lbs) of torque.
- Replace the front wheel (Pg. 44).

Disassembly


- Remove the top bolt, and pull out the spring.



- Take the drain screw from the bottom of the outer tube, and drain the oil into a suitable container, pumping as necessary to empty out all the oil. Replace the drain screw.

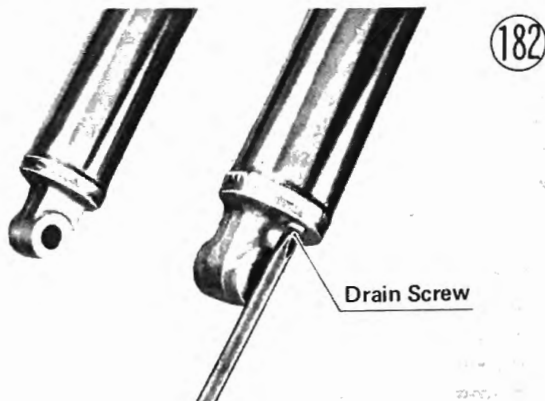


- Slide the dust seal off the inner tube.
- Clamp the lower end of the fork in a vise. Wrap the tube nut with a piece of tire tube or rubber to prevent scratching, and then loosen it with a chain wrench or pipe wrench. Slide off the tube nut.

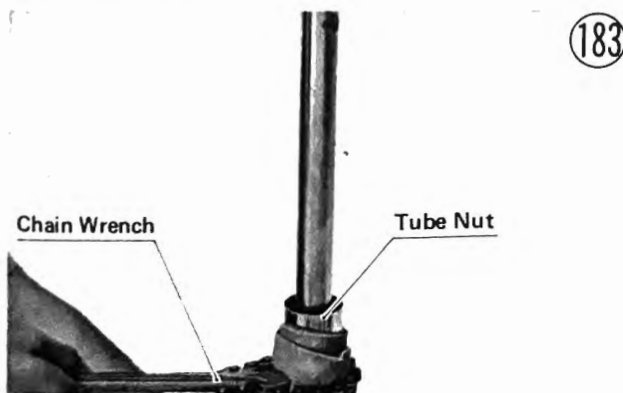

- Pull the inner tube out of outer tube. Pull the inner tube guide and O ring out of the tube nut by hand.
- Remove the oil seal from the tube nut by some means.

Assembly

- Install a new oil seal using the front fork oil seal driver (special tool).

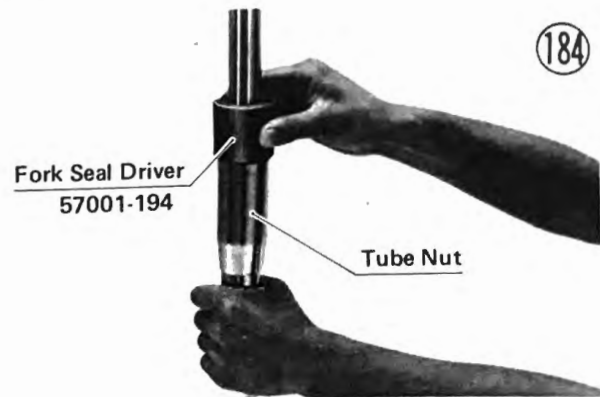


- Put the O ring and the inner tube guide into the tube nut.
- Slide the inner tube back into the outer tube, replace the tube nut, and tighten it fully. Slide the dust seal into place.
- Refill with 170 ~ 178 cc of new SAE 10W oil. Insert the spring with the relatively concentrated end at the top.
- Replace the top bolt.

STEERING STEM


Removal

- Remove the front wheel and front forks (Pg. 44, 55).
- Take out the bolts (4) and remove the front fender from its bracket. Take out the bolts (4) and remove the front fender bracket from the stem base. Each bolt has a nut, lock washer and flat washer.

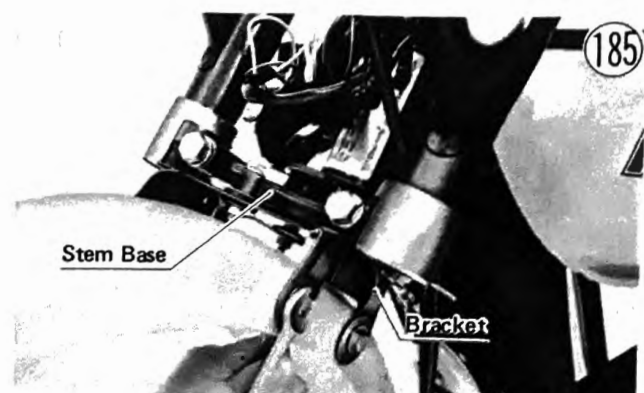

58 DISASSEMBLY

- Remove the headlight assembly (Pg. 53).
- Remove the rear view mirror.
- Loosen the stem clamp bolt

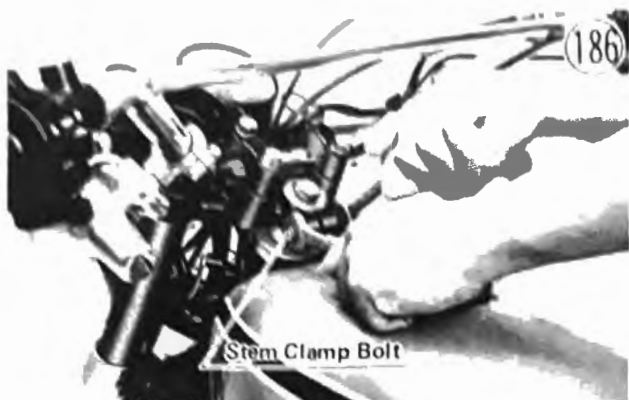


- Take out the stem head bolt and its washer.
- Remove the right and left fork covers, damper rubbers, fork cover guides and fork cover washers.
- Separate the handlebar from the stem together with the steering stem head, and let it hang free.



- Take out the steering stem lock nut using the stem nut wrench (special tool), and then remove the steering stem base. As the stem is removed, some of the steel balls will drop out of the lower inner race. Remove the rest.



- Remove the steering stem cap, upper inner race, and then remove the upper 23 steel balls.

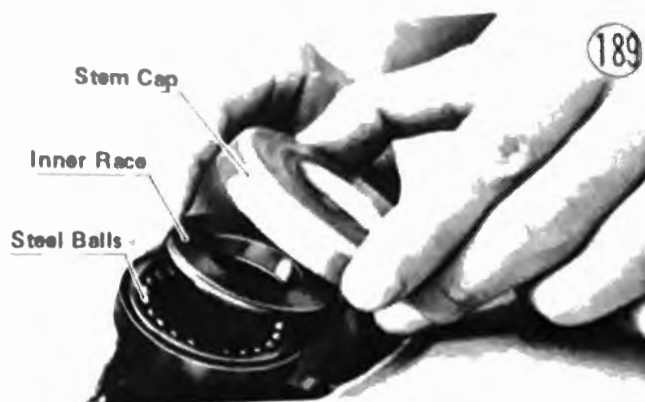

Installation

- Apply grease to the upper and lower outer races in the head pipe so that the steel balls will stick in place during stem insertion, and then replace the 23 upper and 23 lower steel balls.
- Insert the steering stem into the head pipe, replace the upper inner race and steering stem cap, and then tighten the steering stem lock nut.
- Apply a little oil to the inside of the damper rubbers (4).
- Position the handlebar with all the wiring and cables to the front of the stem base.
- Run the inner tube of each shock absorber up through its clamp in the stem base, and replace from the bottom, the rubber damper (smaller one), fork cover guide, fork cover, fork cover washer, and then the rubber damper of each tube. Temporarily tighten the lower clamp bolt on each side to hold each shock absorber in place with its inner tube protruding about 20 mm above the top of its fork cover.



- Note that the shock absorber which has the ridge fitting into the brake panel is the left shock absorber.



- Replace the handlebar with the steering stem head, steering head bolt and its washer in place, and tighten the head bolt to 3.0 ~ 5.0 kg-m (22 ~ 36 ft-lbs) of torque.
- Tighten the stem clamp bolt.
- Replace the headlight assembly (Pg. 53).
- For each shock absorber, loosen the lower clamp bolt that was tightened, and align the upper surface of the top bolt flange with the upper surface of the stem head (Fig. 179). Tighten the lower clamp bolt with 2.6 ~ 3.5 kg-m (19 ~ 25 ft-lbs) of torque, the upper clamp bolt with 1.6 ~ 2.2 kg-m (11.5 ~ 16 ft-lbs) of torque for each side.
- Replace the front fender bracket and tighten the bolts.
- Replace the front fender, and tighten the bolts.
- Replace the front wheel (Pg. 44).
- Adjust the steering (Pg. 14).


STEERING STEM BEARINGS

Removal:

- Remove the steering stem (Pg. 58).
- To remove the outer races pressed into the head pipe, insert a bar into the head pipe and hammer evenly around the circumference of each race to drive it out.



- Turn the steering stem and stem base upside down. Wrap the steering stem with a piece of cloth, and clamp it in a vise. Hammer the lower inner race to drive it out.

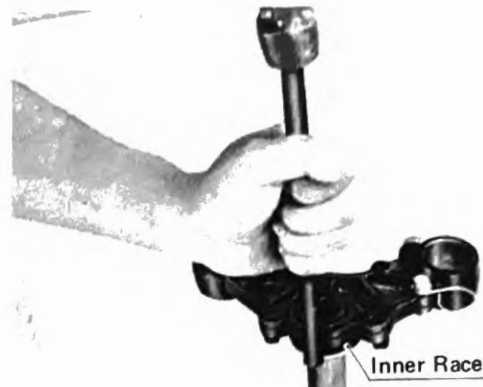

Installation

- Apply oil to the outer races, and drive them into the head pipe using the steering stem cap driver and the bearing driver holder (special tools).



- Apply oil to the lower inner race, and drive it onto the steering stem using the steering stem bearing driver (special tool).



- Replace the steering stem (Pg. 58).

60 DISASSEMBLY

SWING ARM

Removal

- Remove the rear wheel (Pg. 46).
- Remove the rear shock absorber bottom mounting bolts. Each bolt has a lock washer.
- Loosen the rear shock absorber upper mounting nuts.
- Remove the pivot shaft nut and pull out the pivot shaft.




- Pull the swing arm free from the motorcycle.
- Take out the screws (3) and the bolt, and remove the chain guards.
- Remove the cotter pin, nut, lock washer and torque link.

Installation

- Replace the torque link and tighten the nut loosely. The torque link bolt has a lock washer and nut.
- Replace the chain guards, and tighten the screws and the bolt.
- Replace the swing arm, and slide in the pivot shaft, and then tighten the pivot shaft nut with 4.0 ~ 6.0 kg-m (29 ~ 43 ft-lbs) of torque.
- Replace the rear shock absorbers and tighten the bottom mounting bolts with 2.6 ~ 3.5 kg-m (19 ~ 25 ft-lbs) of torque.
- Tighten the rear shock absorber upper mounting nuts which were loosened with 2.6 ~ 3.5 kg-m (19 ~ 25 ft-lbs) of torque.
- Replace the rear wheel (Pg. 46).
- Tighten the torque link nut with 2.6 ~ 3.5 kg-m (19 ~ 25 ft-lbs) of torque. Put the cotter pin through the torque link bolt.

Disassembly

- Using a metal rod and hammer, tap out the bush from each side of the swing arm.

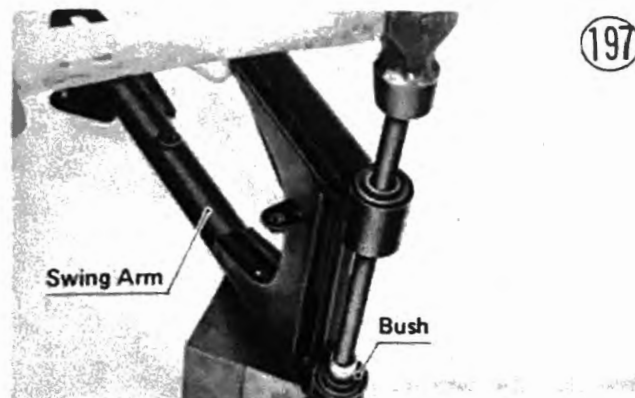

Assembly

- Replace the bushes with new ones if either one is deteriorated or damaged, or if it had to be removed for some reason. First apply oil to the bushes and then, install them with a press.

REAR SHOCK ABSORBER

Removal

- Take off the cap nut from the top and the bolt from the bottom of the rear shock absorber.
- Slide the bottom out of its bracket and then pull off the absorber.

Installation

- Fit the rear shock absorber on its stud.
- Tighten the upper mounting nut with 2.6 ~ 3.5 kg-m (19 ~ 25 ft-lbs) of torque.
- Replace the bottom mounting bolt and lock washer, and tighten the bolt with 2.6 ~ 3.5 kg-m (19 ~ 25 ft-lbs) of torque.


Maintenance

AIR CLEANER

A properly cared for air cleaner ensures that only clean, filtered air is supplied through the carburetor into the engine. If the air is supplied directly without filtering, not only will dirt and dust from the air plug up carburetor passages causing the engine to run poorly, but also the dust that enters the engine will act like grinding compound wearing down the cylinder, piston and rings. If the air cleaner element is damaged or too coarse, the result will be the same as though no element were used.

An air cleaner element clogged with dirt chokes the air supply to the engine, resulting in an overly rich fuel/air mixture and inefficient combustion. This in turn causes overheating from carbon build-up, reducing engine power.

Air Cleaner

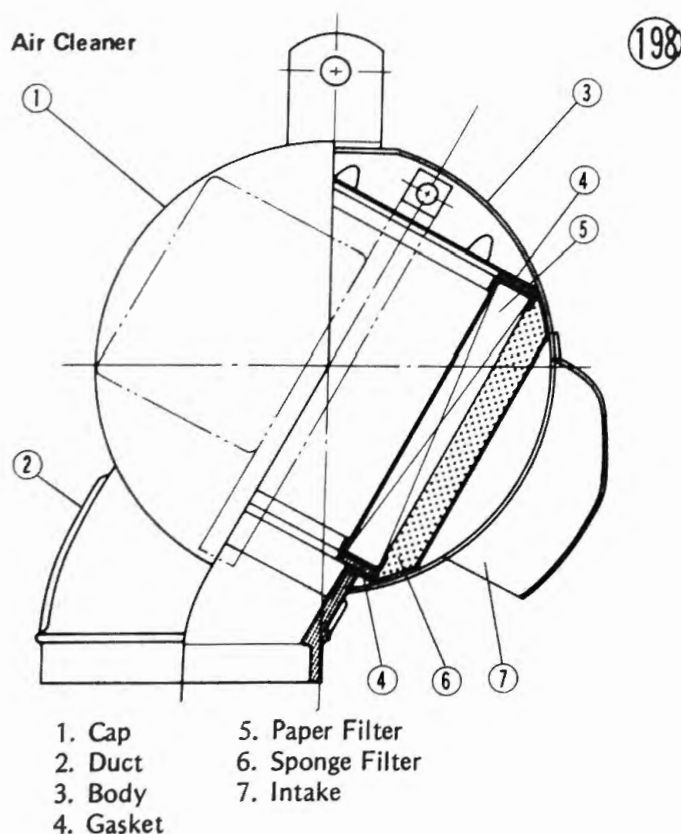

Cleaning and replacement

The air cleaner element must be cleaned periodically (Pg. 118). In extremely dry, dusty areas, the element will need to be cleaned more often. After riding through rain or on muddy roads, the element should be cleaned immediately.


Remove the air cleaner element (Pg. 23), clean the filters in a high flash-point solvent. After the filters are clean, squeeze the sponge filter dry, and shake the paper filter dry or blow it dry with compressed air from the inside.

Since repeated cleaning coarsens the element, replace it with a new one periodically (Pg. 118). Also, if there is a break in the element material or any other damage to the element, replace the element with a new one.

CARBURETOR

The carburetor (Fig. 199) performs the function of mixing the fuel and air in the proportions necessary for good engine performance at varying speeds and loads. In order for it to function satisfactorily, it must be kept well adjusted and maintained. The carburetor cable (Pg. 9) and idle speed (Pg. 10) adjustments are covered in the Adjustment Section. The discussion here concerns the fundamentals of carburetor operation, fuel level adjustment, and the cleaning and replacement of carburetor parts.

Carburetor Cross Section

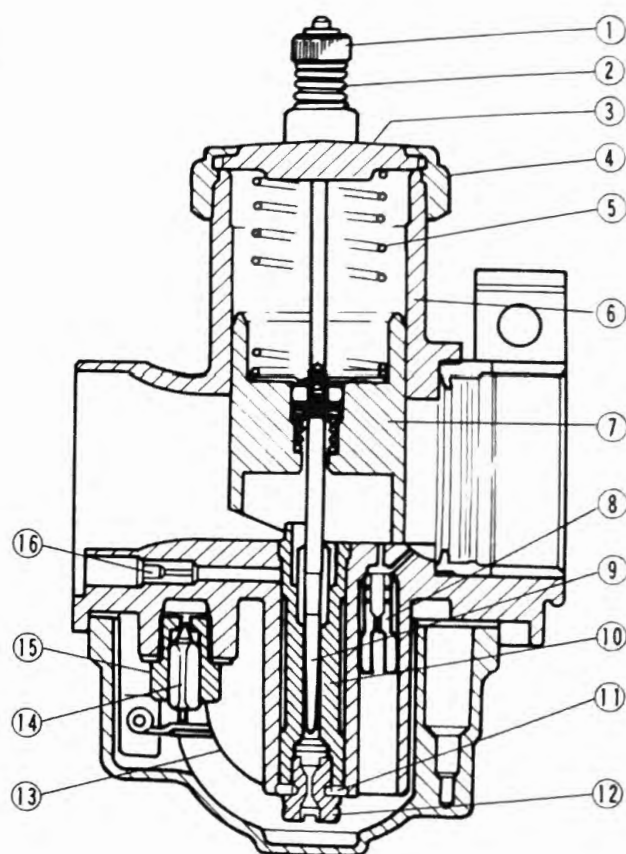

One of the basic principles of carburetor operation is that the pressure exerted by a moving body of air is less than atmospheric pressure. As the engine draws air in through the carburetor bore, the air pressure in

62 MAINTENANCE

the carburetor bore is less than the air pressure in the float chamber, which is at atmospheric pressure. This difference in air pressure forces the fuel up through the passages into the carburetor bore where it is then atomized by the air flowing at high speed to the engine.

Another important principle is the Venturi Principle, which states that when an air passage narrows, moving air flows faster, exerting even less pressure. Especially at lower speeds the amount of the cutaway on the throttle valve makes use of this principle in determining the speed and thus the pressure of the air passing below it.

The amount of fuel passing through a jet depends both on the size of the jet and on the speed of the air flow over the jet. The speed of this air flow is in turn determined both by the engine rpm and by the dimensions of the passage (varied with the throttle valve) just above the jet. The size of the jet openings, the various dimensions of the air passages, and the engine rpm are correlated through carburetor design so that, when properly adjusted, the carburetor meters (measures) the fuel and air in the correct proportions at different throttle openings.

The ratio of the fuel to air at different throttle openings is set through carburetor design by a number of interrelated factors.

0 ~ 1/8 throttle	air screw
1/8 ~ 1/4 throttle	throttle valve cutaway, air screw
1/4 ~ 3/4 throttle	jet needle position
3/4 ~ full throttle	main jet size

The carburetor specifications (Table 2) have been chosen for best all around performance.

Carburetor trouble can be caused by dirt, wear, maladjustment, or improper fuel level in the float chamber. A dirty or damaged air cleaner can also alter the fuel to air ratio.

The following explanation of the functioning and maintenance of the carburetor covers the four main systems for fuel regulation and supply: the starter system, which supplies the necessary rich mixture for starting the engine; the pilot system, which supplies

fuel at idling and low speeds, the main system, which supplies fuel at medium and high speeds; and the float system, which maintains the fuel at a constant level in the float chamber.

Starter System

Fig. 200 shows the starter system, which includes the starter jet ⑦, starter pipe ⑥, and starter plunger ③.

The starter system is used for starting to provide the exceptionally rich fuel/air ratio that is necessary to enable easy starting when the engine is cold. When starting the engine, the throttle valve is left closed, and the starter plunger is pulled fully open by the choke knob. Since the throttle valve is closed, a high intake vacuum (low pressure or suction) is developed at the engine side of the carburetor bore. The starter plunger, when raised, opens up the starter passage and an air hole so that they connect to the engine side of the carburetor bore. The intake vacuum from the engine as it is kicked over draws in air through this air hole and fuel from the float chamber through the starter passage. Fuel metered by the starter jet mixes with a small amount of air drawn in through air bleed holes in the starter pipe as it rises in the starter passage. This small amount of air prepares the fuel for better atomization once it reaches the plunger chamber (the area just below the raised plunger) where the fuel mixes with the air drawn in through the air hole. This mixture is then drawn into the carburetor bore where it, together with a small amount of mixture supplied by the pilot system, is drawn into the engine.

In order for the starter system to work properly, the throttle must be kept closed so that sufficient vacuum can be built up at the starter outlet. Also, the choke knob must be pulled fully up so that the starter plunger will fully open up the air hole and starter passage to the carburetor bore. Clogged starter pipe air bleed holes will cause insufficient atomization, thus impairing starter efficiency. Fuel mixture trouble results if, due to dirt, gum or a defective spring, the plunger does not seat properly in its rest position after the choke knob is returned.


Table 1 Mixture Trouble Symptoms

Poor running Overheating Exhaust smokes excessively

Table 2 Carburetor Specifications

Type	Main Jet	Needle Jet	Jet Needle	Pilot Jet	Throttle Valve Cutaway	Air Screw	Design Fuel Level	Service Fuel Level
VM 19SC	77.5R	0-2	4EJ12-3	15	2.0	1½ turns out	27~29 mm	3~5 mm

Starter System

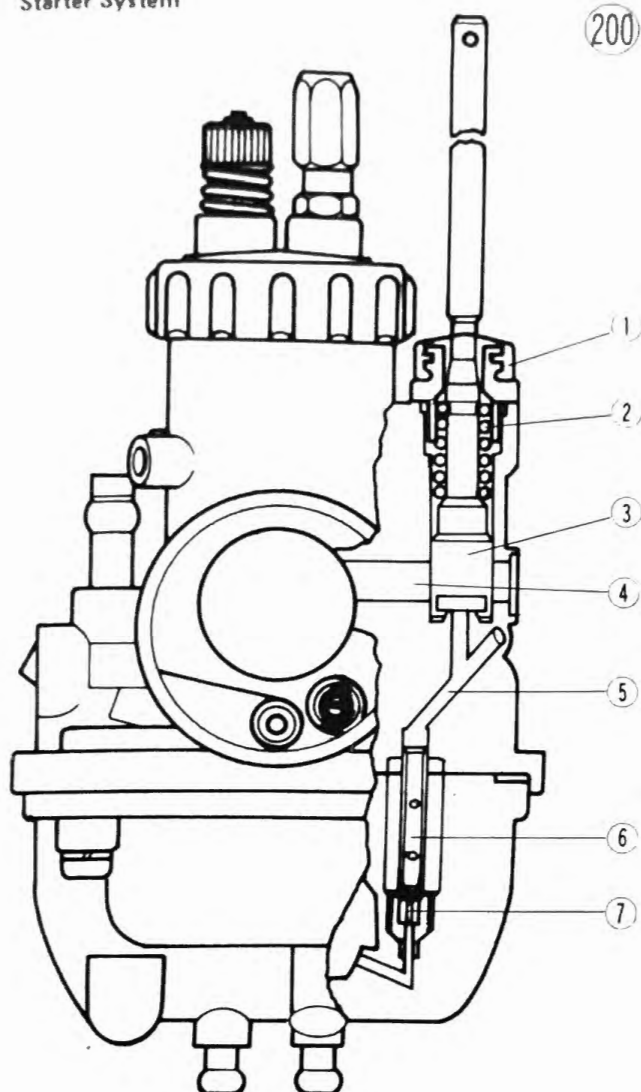

1. Starter Plunger Rubber Cap
2. Spring
3. Starter Plunger
4. Air Hole
5. Starter Passage
6. Starter Pipe
7. Starter Jet

Cleaning


Remove the float bowl, and blow the starter pipe and the starter jet clean with compressed air. Do not clean them with wire or any other hard object which may cause damage.

Remove the starter plunger, and clean it with a high flash-point solvent.

Pilot System

Fig. 201 shows the pilot system, which includes the pilot jet (5), air screw (1), pilot outlet passage (3), and pilot jet passage (4).

Pilot System

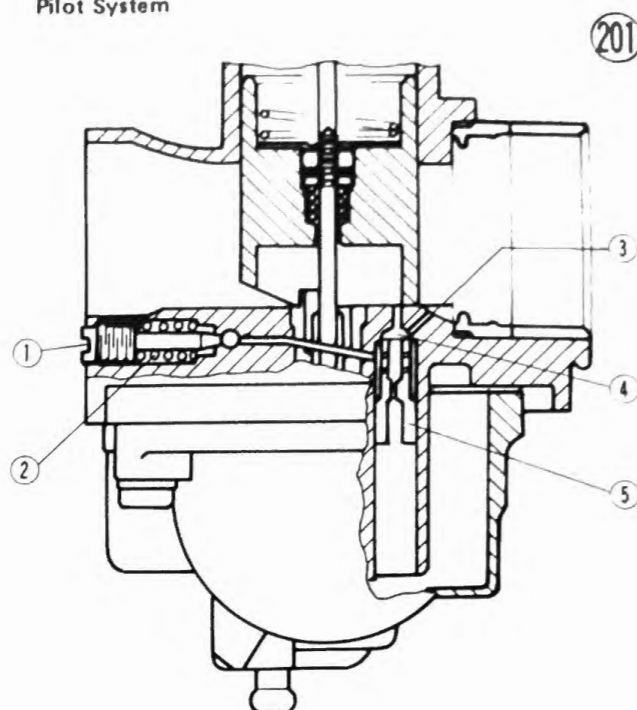

1. Air Screw
2. Spring
3. Pilot Outlet Passage
4. Pilot Jet Passage
5. Pilot Jet

The pilot system determines the operation of the carburetor from 0 to $\frac{1}{4}$ throttle opening. At small throttle openings, almost no fuel is drawn through the main system due to insufficient air flow past the needle jet. Instead, the fuel is drawn through the pilot jet as a result of the low pressure (suction) brought about by the demand for air by the engine and the limited but relatively fast flow of air past the pilot outlet. The low position of the throttle valve restricts the carburetor bore air flow preventing it from relieving the low pressure created by the engine around the pilot outlet while the venturi effect (i.e., the narrower the air passage, the faster the flow of air) at the engine side of the throttle valve further reduces the low pressure.

Up to roughly $\frac{1}{8}$ throttle valve opening, the fuel as it is drawn out of the pilot jet located within the pilot jet passage, mixes with both air drawn in through the air screw controlled air passage and through the part of the pilot jet passage that connects to the carburetor bore. However, as the throttle valve rises further, air to the pilot jet is drawn in only through the air screw controlled air passage, and the fuel exits through both the pilot outlet passage and the pilot jet passage. This change of role for the upper part of the pilot jet passage is caused by the increased carburetor bore air flow, the speed of which at lower speeds is set by the throttle valve cutaway. Once the throttle valve rises, it no longer concentrates the low pressure area around just the pilot outlet.

64 MAINTENANCE

The purpose of the pilot system is to provide the rich fuel/air mixture necessary at low engine speed. The pilot system mixture consists primarily of the fuel measured out by the pilot jet and the air let in past the air screw. Since the size of the pilot jet opening is fixed, the fuel to air ratio is controlled by the position of the air screw.

Flow Characteristic

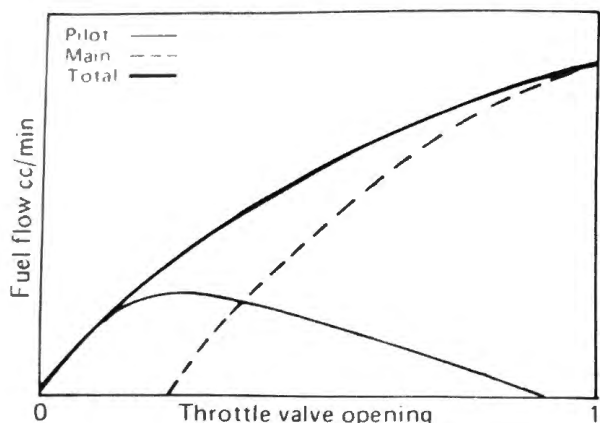


Fig. 202 shows throttle valve opening versus fuel flow for the main and pilot systems. If trouble occurs in the pilot system, not only are starting and low speed running affected, but the transition from pilot to main system is not smooth as the throttle is opened, causing a drop in acceleration efficiency. Pilot system trouble might be due to maladjustment; a dirty or loose pilot jet, or clogging of the pilot outlet passage, pilot jet passage, or air screw air passage.

Cleaning and replacement

Wash the pilot jet with a high flash-point solvent, and blow it clean with compressed air. Also use compressed air to clean the pilot outlet passage, pilot jet passage, and air screw air passage. If necessary, use a bath of automotive type carburetor cleaner. Do not use wire for cleaning as this could damage the jet.

Remove the air screw, and check that the tapered portion is not worn or otherwise deformed. If it is, replace the screw.



Main System


Fig. 204 shows the main system, which consists of the main jet (1), needle jet (3), jet needle (4), throttle valve (5), and air jet (6).

From about $\frac{1}{4}$ throttle opening, the air flow past the needle jet outlet is sufficient to cause most of the engine's fuel supply to be drawn through the main system. Fuel passes through the main jet holder and the main jet, through the space in the needle jet not blocked by the jet needle, and into the carburetor bore, where it is atomized by the air flow to the engine.

On one side of the needle jet is a hole to admit the air measured by the air jet. This air mixes with the fuel in the needle jet to prepare the fuel for better atomization in the carburetor bore.


The lower portion of the jet needle is tapered and extends down into the needle jet. It is fixed to the throttle valve, and thus rises up in the needle jet as the throttle valve rises. At $\frac{1}{4}$ throttle opening, the tapered portion of the needle starts coming up out of the jet, which increases needle to jet clearance and thereby increases the amount of fuel that can pass up through the jet.

Main System

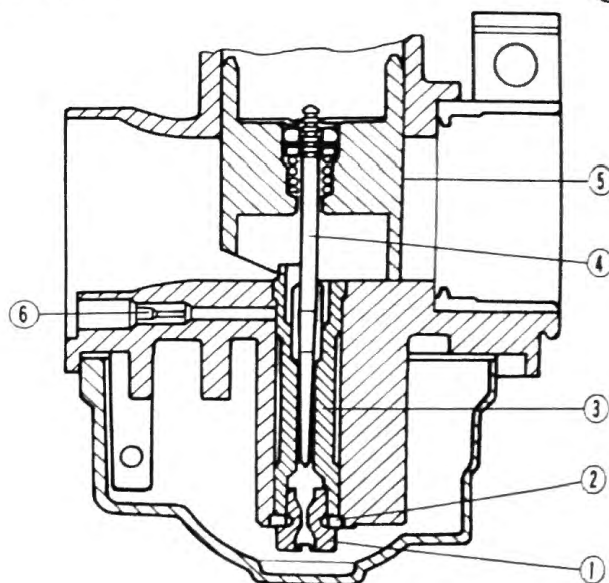

- | | |
|---------------|-------------------|
| 1. Main Jet | 4. Jet Needle |
| 2. Washer | 5. Throttle Valve |
| 3. Needle Jet | 6. Air Jet |

Throttle Valve

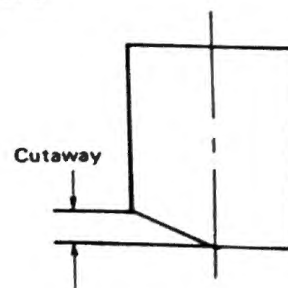

The amount of fuel drawn out of the needle jet is also influenced, particularly at lower speeds, by the amount of cutaway on the throttle valve. The amount of this cutaway, which is on the intake side of the throttle valve, helps define the size of the air passage directly above both the pilot jet passage and needle jet outlets.

At near full throttle openings, the cross-sectional area of the needle to jet clearance becomes greater than the cross-sectional area of the main jet. At these openings, the fuel drawn up into the carburetor bore is limited by the size of the main jet rather than the needle to jet clearance.

Trouble in the main system usually indicated by poor running or lack of power at high speeds. A dirty or clogged main jet will cause the mixture to become too lean. On the other hand, a rich condition will be caused by clogging of the air jet, its air passage, or the air hole in the needle jet; by needle jet or needle wear (increasing clearance); by a loose main jet; or a loose needle jet.


Cleaning and replacement

Disassemble the carburetor and wash the throttle valve, main jet, needle jet, jet needle, air jet, and air passage with a high flash-point solvent, blowing them clean with compressed air. If necessary, use a bath of automotive type carburetor cleaner. Do not use wire for cleaning as this could damage the jets. A worn needle jet or jet needle should be replaced.

NOTE: The last number of the jet needle number ("3" of 4EJ12-3) is not stamped on the needle, but is the number of the groove in which the clip **must** be installed. The groove numbers are counted from the topmost groove, 5 being the lowest groove.

CAUTION If the clip is put in any but the specified groove, exhaust emissions will be increased, and the engine may suffer serious damage which could result in a crash.

Jet Needle

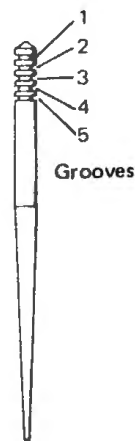


206

Float System

Fig. 207 shows the float system, which consists of the float (3), float valve needle (2), and float valve seat (1).

Float

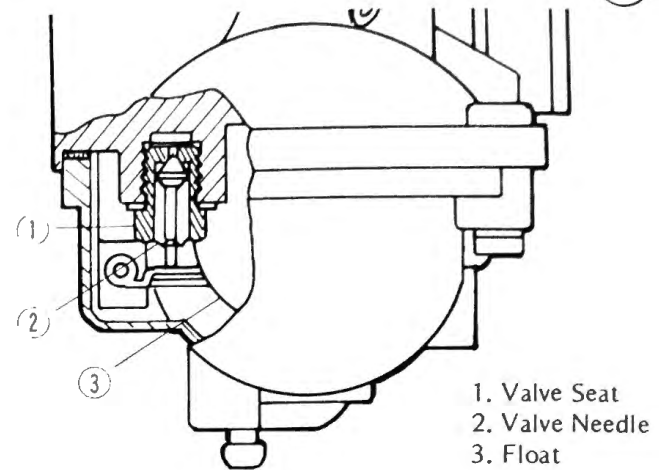

The float system serves to keep a more or less fixed level of fuel in the carburetor float chamber at all times so that the fuel mixture to the engine will be stable. If the fuel level in the float chamber is set too low, it will be more difficult for fuel to be drawn up into the carburetor bore, resulting in too lean a mixture. If the level is set too high, the fuel can be drawn up too easily, resulting in too rich a mixture.

The fuel level is defined as the vertical distance from the center of the carburetor bore to the surface of the fuel in the float chamber. The fuel level is maintained at a constant value by the action of the float valve, which opens and closes according to the fuel level. As fuel flows through the float valve into the chamber, the fuel level rises. The float, rising with the fuel level, pushes up on the needle. When the fuel reaches a certain level, the needle is pushed completely into the valve seat, closing the valve so that no more fuel may enter the chamber. As the fuel is drawn up out of the float chamber, the fuel level drops, lowering the float. The needle no longer blocks the float valve, and fuel once again flows through the float valve into the chamber.

Fuel level measurement and adjustment

If the motorcycle exhibits symptoms of improper fuel mixture, measure the service fuel level.


Turn the fuel tap off, and remove the carburetor cover. Remove the float bowl and install in its place the fuel level measuring device (special tool). Hold the plastic tube against the carburetor body, and turn on the fuel tap. The fuel level in the plastic tube should come up to 3~5 mm below the edge of the carburetor body.

If the fuel level is incorrect, remove the carburetor (Pg. 26), and then remove the float bowl and float.


66 MAINTENANCE

Fuel Level Measurement

208

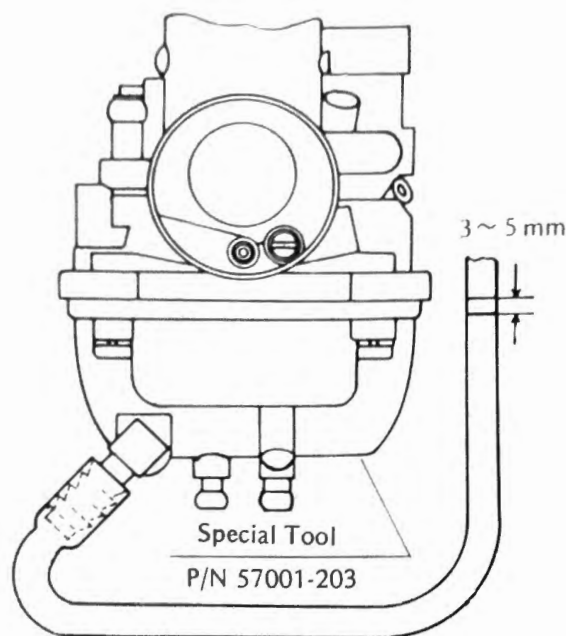

Bend the tang on the float a very slight amount to change the fuel level. Bending it down towards the float valve (see photo) closes the valve sooner and lowers the fuel level. Bending it up away from the float valve raises the level. After adjustment, measure the fuel level again and readjust if necessary.

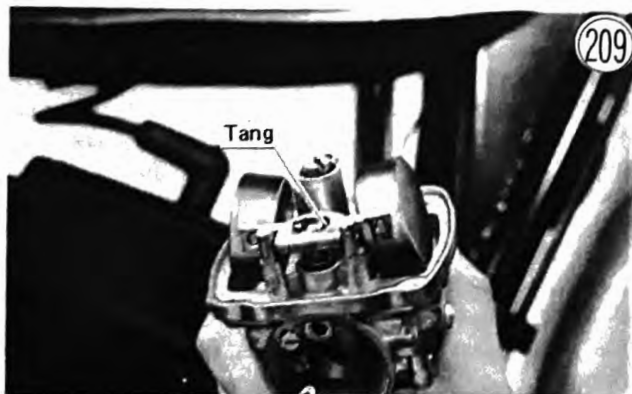

Cleaning and replacement

If dirt gets between the needle and seat, the float valve will not close and fuel will overflow. Overflow can also result if the needle and seat become worn. If the needle sticks closed, no fuel will flow into the carburetor.

Remove the carburetor, and take off the float bowl and float. Wash the bowl and float parts in a high flash-point solvent. Use carburetor cleaner if necessary. Blow out the fuel overflow pipe with compressed air.

Examine the float, and replace it if damaged. If the needle is worn as shown in the diagram, replace the needle and seat as a set.

Needle Valve

210



Good




Bad

CYLINDER, PISTON

The cylinder, being part of the combustion chamber, is subjected to extremely high temperatures. Since excessive heat can seriously distort the shape of the cylinder or cause piston seizure, the cylinder is made of aluminum alloy for good heat conduction, and the outside is finned to increase the heat radiating surface for better cooling efficiency. The ELECTRO FUSE cylinder is used on this engine. This cylinder is better than conventional cylinders in heat conductivity, wear resistance, and light weight.

Cylinder Construction


211

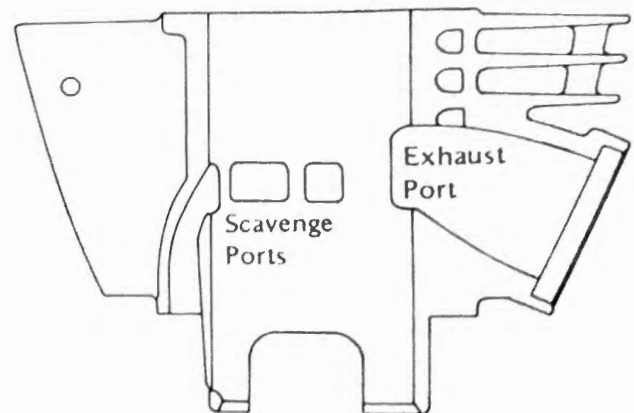

The gas transfer and exhaust are performed by five transfer (scavenge) ports and one exhaust port provided in the cylinder. These ports are opened up to and closed off from the combustion chamber by the piston as it moves up and down inside the cylinder. The port timing, determined by the port size and position in relation to the moving piston, has been chosen so that the transfer of the fuel/air mixture from the crank chamber and the expulsion of the burned gases from the combustion chamber are timed for the most efficient engine performance. The intake process, on the other hand, is not carried out through an intake port in the cylinder, but is performed by a rotary disc, which opens and closes an intake port in the side of the crankcase.


Port Timing

(212)

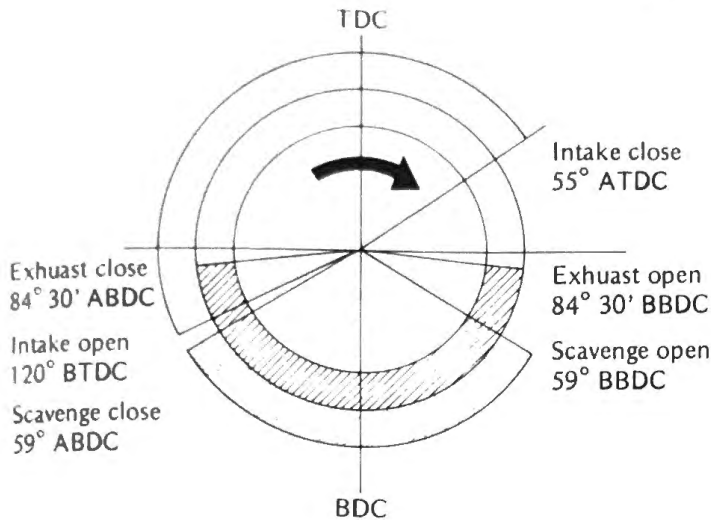

Port Measurement

(213)

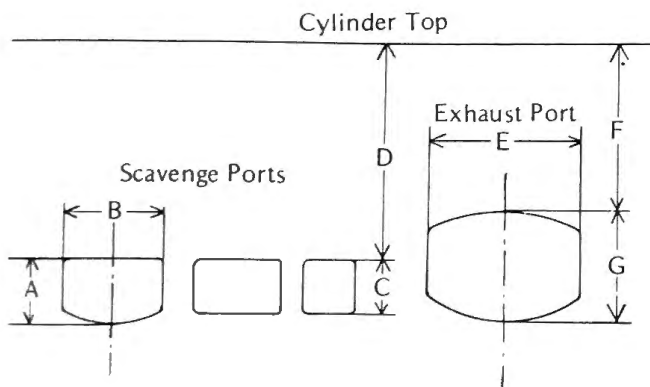


The piston is made from an aluminum alloy, which expands and distorts slightly from heat during engine operation. So that the piston will become cylindrical after heat expansion, it is designed such that, when cold, it is tapered in towards the head and is elliptical rather than perfectly round. The piston diameter is made so that there is enough clearance between the piston and cylinder to allow for expansion.

Two piston rings are fitted into grooves near the top of the piston so that gas does not escape between the piston and the cylinder wall into the crank chamber. The piston rings are the Keystone type, the upper surface of which slants approximately 7°. To accommodate the Keystone ring, the upper surface of the piston ring groove also slants approximately 7°.

The use of the Keystone rather than the standard type provides a better compression seal, reduces the possibility of the rings sticking, and allows for better heat transfer from the piston to the cylinder.

Keystone Ring Grooves


(214)

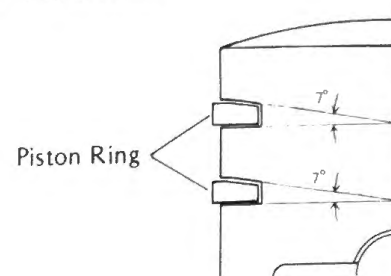

At the time of combustion, combustion gas pressure presses the ring down in its groove and at the same time forces it tightly against the cylinder wall due to its slanted surface. This use of combustion gas pressure minimizes gas combustion blowby which, if excessive, impairs engine efficiency, allows combustion gum residue to accumulate causing the rings to stick, and interferes with heat transfer. Also, as the piston moves up and down, the slanted surfaces cause a rapid fluctuation in ring/land clearance resulting in a cleansing effect which inhibits the accumulation of gum residue.

Ring/Land Clearance

(215)

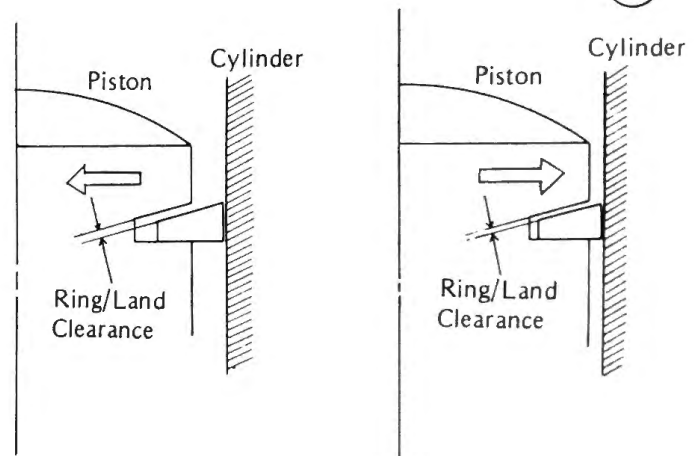

The full floating type of piston pin is used to connect the piston to the connecting rod. The middle part of the piston pin passes through a caged needle bearing fitted into the small end of the connecting rod, and a snap ring is fitted at each end of the piston pin in a groove to prevent the pin from coming out. Since the pin is the full floating type, a small amount of clearance exists between the piston pin and the piston when the engine is at normal operating temperatures.

Table 3 Port Measurement

A	B	C	D	E	F	G
13.1~13.7 mm	20.3~20.9 mm	10.7~11.3 mm	42.1~43.1 mm	31.9~32.5 mm	32.4~32.8 mm	22.3~22.9 mm

Proper inspection and maintenance of the cylinder and piston include checking the compression; removing carbon from the piston head, piston ring grooves, and cylinder exhaust port; and checking for wear and proper clearance during top end overhaul. Heavy carbon deposits in the combustion chamber raises compression, which result in overheating, detonation, and preignition. A worn cylinder, worn piston, or worn or stuck piston rings causes a loss of compression from gas blowby past the rings since the rings will not form a satisfactory seal between the piston and cylinder wall during compression. This gas blowby will result in difficult starting, power loss, excessive fuel consumption, and possibly engine destruction. A worn piston pin causes piston slap, which will result in accelerated piston and cylinder wear.

Engine problems may be caused not only by carbon deposits and wear or damage to the engine itself, but also by poor quality fuel or oil, improper oil, improper fuel/air mixture, improper supply of oil, or incorrect ignition timing. Whenever knocking, pinging, piston slap, or other abnormal engine noise is heard, the cause should be determined as soon as possible. Neglect of proper maintenance will result in reduced engine power and may lead to accelerated wear, overheating, detonation, piston seizure and engine destruction.

Compression measurement

A compression test is very useful as an aid in determining the condition of the engine. Low compression may be due to cylinder wear; worn piston ring grooves; worn, broken, or sticking piston rings; cylinder head leaks; or damage to the engine such as piston seizure. Too high a compression may be due to carbon build-up on the piston head and cylinder head.

Before measuring compression, check that the cylinder head is tightened down with 2.2 kg-m (16 ft-lbs) of torque, and then thoroughly warm up the engine so that engine oil between the piston and cylinder wall will help seal compression as it does during normal running. While the engine is running, check that there is no gas leakage from around the spark plug or the cylinder head gasket.

Stop the engine, remove the spark plug, and screw the compression gauge hose securely into the spark plug hole so that there will be no leakage. With the throttle fully open so that air can flow freely to the engine, turn the engine over sharply with the kick starter several times until the compression gauge stops rising. The compression is the highest reading obtainable.


Table 4 Cylinder Compression

Standard	Service Limit
9.8 kg/cm ² (139.5 psi)	6.9 kg/cm ² (98.1 psi)



Cylinder, piston decarbonization

Carbon readily accumulates around the cylinder exhaust port, which reduces exhaust efficiency. To remove the carbon, take off the cylinder (Pg. 24), and scrape out the carbon from the exhaust port carefully. At this time, the muffler should also be inspected and cleaned out if necessary (Pg. 100).

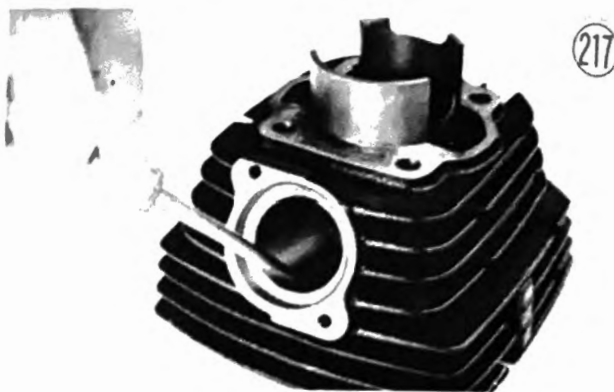

Built-up carbon on the piston head reduces the cooling capability of the piston and raises compression, leading to overheating which could possibly even melt the top of the piston. To decarbonize the piston head, remove the piston (Pg. 24), scrape off the carbon, and then lightly polish the piston with fine emery cloth.

Carbon accumulated in the piston ring grooves can cause the rings to stick. Remove the rings (Pg. 24), and clean out any carbon deposits using the end of a broken piston ring or some other suitable tool.



CAUTION:

- 1) When removing carbon, take ample care not to scratch the cylinder wall, the side of the piston, or the piston ring grooves.
- 2) Never clean the piston head with the engine assembled. If the carbon is scraped from the piston head with the cylinder left in place, carbon particles will unavoidably drop between the piston and cylinder onto the rings and eventually find their way into the crank chamber. Carbon particles, which are very abrasive, drastically shorten the life of the rings, piston, cylinder, crankshaft bearings, and oil seals.

Cylinder, piston wear

Inspect the inside of the cylinder for scratches and abnormal wear. If the cylinder is damaged or badly worn, replace it with a new one.

Take a front-to-back measurement at the location shown in Fig. 219 to check cylinder wear. If the cylinder inside diameter measurement exceeds the service limit, the cylinder must be replaced with a new one since the ELECTRO FUSE cylinder cannot be bored or honed.

NOTE: Whenever the piston or cylinder has been replaced with a new one, the motorcycle must be broken-in the same as with a new machine.

Cylinder Diameter Measurement

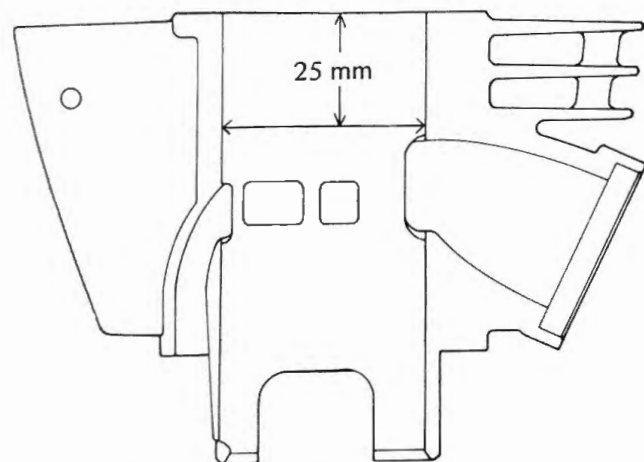


Table 5 Cylinder Inside Diameter

Standard	Service Limit
49.499 ~ 49.514 mm	49.58 mm

Cylinder Gauge



Measure the outside diameter of the piston 5 mm up from the bottom of the piston at a right angle to the direction of the piston pin. If the measurement is under the service limit, replace the piston.

NOTE: Abnormal wear such as a marked diagonal pattern across the piston skirt may mean a bent connecting rod or a misaligned crankshaft.



Table 6 Piston Diameter

Standard	Service Limit
49.477 ~ 49.492 mm	49.37 mm

Piston/cylinder clearance

The piston to cylinder clearance is measured whenever the piston or cylinder is replaced with a new one. The standard piston to cylinder clearance must be adhered to whenever the cylinder is replaced. However, if only the piston is replaced, the clearance may exceed the standard slightly, but it must not be less than the minimum in order to avoid piston seizure.

The most accurate way to find the piston clearance is by making separate piston and cylinder diameter measurements and then computing the difference between the two values. Measure the piston diameter as just described, and measure the cylinder diameter at the very bottom of the cylinder.

Table 7 Piston/Cylinder Clearance

Standard
0.017 ~ 0.027 mm

Piston/cylinder seizure

Remove the cylinder and piston to check the damage. If there is only slight damage, the piston may be smoothed with #400 emery cloth, and any aluminum deposits removed from the cylinder with either #400 emery cloth or light honing.

70 MAINTENANCE

Piston ring, piston ring groove wear

Visually inspect the piston rings and the piston ring grooves. If the rings are worn unevenly or damaged, they must be replaced. If the piston ring grooves are worn unevenly or damaged, the piston must be replaced and fitted with new rings.

When new rings are being fitted into an old piston, check for uneven groove wear by inspecting the ring seating. The rings should fit perfectly parallel to the groove surfaces. If not, the piston must be replaced. Be sure to use the Keystone rings.

Piston ring end gap

Place the piston ring being checked inside the cylinder using the piston to locate the ring squarely in place. Set it close to the bottom of the cylinder, where cylinder wear is low. Measure the gap between the ends of the ring with a thickness gauge. If the gap is wider than the service limit, the ring is worn and must be replaced.

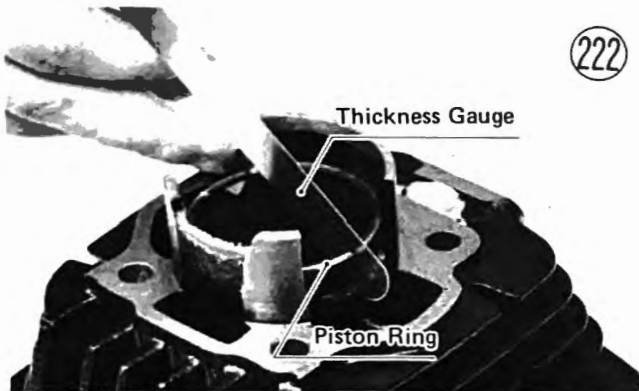


Table 8 Ring End Gap

Standard	Service Limit
0.15 ~ 0.35 mm	0.7 mm

Piston ring tension

Piston ring tension can be evaluated by measuring the gap between the ends of the ring with the ring free of any restraint. If the measured gap is less than the service limit, the ring is weak and must be replaced.



Table 9 Ring Free Gap

Standard	Service Limit
7.0 mm	6.3 mm

Piston, piston pin, connecting rod, needle bearing wear

Measure the diameter of the piston pin with a micrometer, and measure the inside diameter of both piston pin holes in the piston. If the piston pin diameter is less than the service limit at any point, replace the piston pin. If either piston pin hole diameter exceeds the service limit, replace the piston.

Measure the inside diameter of the connecting rod small end. If the diameter exceeds the service limit, replace the connecting rod.

The rollers in the needle bearings wear so little that the wear is difficult to measure. Instead, inspect the needle bearing for abrasions, color change, or other damage. If there is any doubt as to its condition, replace the needle bearing.

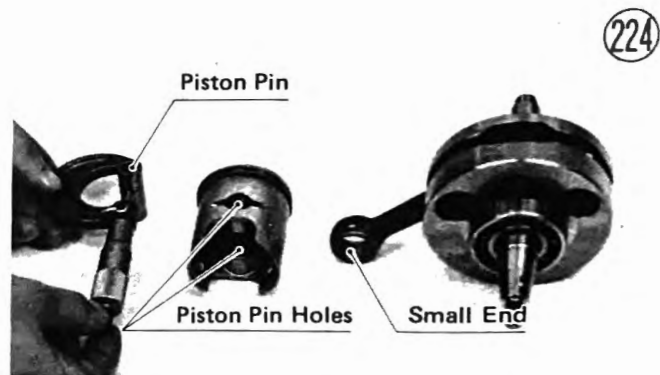


Table 10 Piston Pin, Piston Pin Hole, Small End Dia.

	Standard	Service Limit
Piston Pin	13.994 ~ 14.000 mm	13.96 mm
Piston Pin Hole	13.998 ~ 14.005 mm	14.10 mm
Con-rod Small End	18.003 ~ 18.014 mm	18.05 mm

To the Dealer: When possible, match parts from stock so that a marked pin is assembled with an "A" piston and an unmarked pin with a "B" piston.

NOTE: When a new piston or pin is used, check that piston to pin clearance is 0.0024 ~ 0.0084 mm.


CYLINDER HEAD

The cylinder head is made of aluminum alloy, used for its high heat conductivity, and is finned on the outside to aid dissipation of the heat generated in the combustion chamber. A copper gasket fits between the cylinder head and cylinder to prevent gas leakage.

Carbon built up inside the combustion chamber interferes with heat dissipation and increases the compression ratio, which may result in preignition, detonation and overheating. Compression leakage may be caused by damaged or dirty cylinder or cylinder head gasket surfaces, a damaged or dirty gasket, a loose spark plug, or an improper head mounting or mounting torque. Escaping hot combustion gas not only reduces engine power but could damage the cylinder head and cylinder gasket surfaces beyond repair.

Cleaning and inspection

Remove the cylinder head (Pg. 24). Scrape out any carbon, and clean the head with a high flash-point solvent.

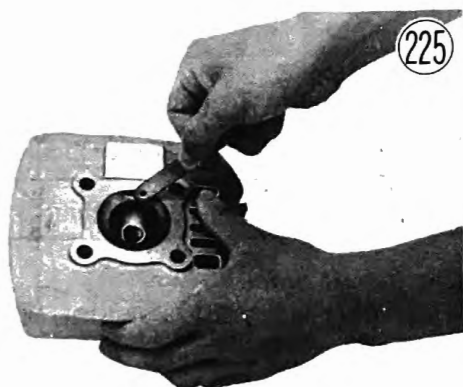

Lay a straightedge across the cylinder head gasket surface at several different points, and measure warp by inserting a thickness gauge between the straightedge and the gasket surface. If warp exceeds the service limit, replace the cylinder head.


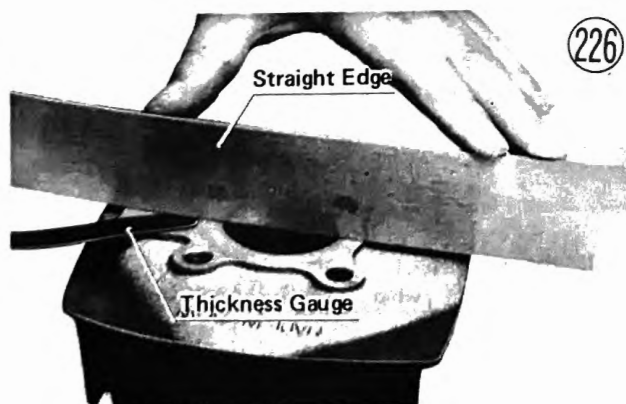


Table 11 Cylinder Head Warp

Service Limit
under 0.05 mm

The cylinder head gasket surface may also be checked for warp or other damage by rubbing it on a surface plate coated with machinist's bluing. Repair light damage by rubbing the gasket surface on emery cloth (first #200, then #400) secured to the surface plate. After smoothing the cylinder head gasket surface, coat it with machinist's bluing, and rub it over the cylinder gasket surface; if necessary, repair the surface in the same manner that the cylinder head was repaired. Severe damage to either of the gasket surfaces necessitates replacement.

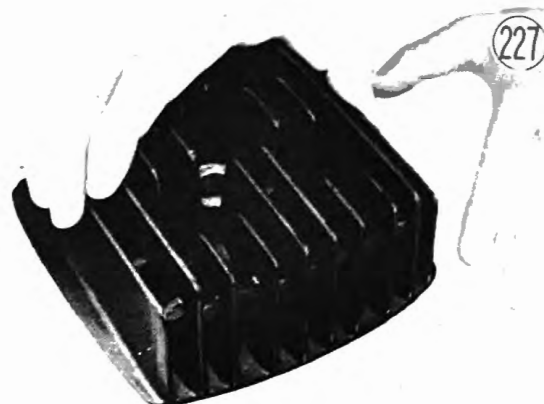

NOTE: Use only the proper gasket for the cylinder head. The use of a gasket of incorrect thickness will change the compression.

CRANKSHAFT

The crankshaft is the part that changes the reciprocating motion of the piston into rotating motion, which is transmitted to the rear wheel when the clutch is engaged. Crankshaft trouble, such as excessive play or runout, will multiply the stress caused by the intermittent force on the piston, and will result in not only rapid crankshaft bearing wear, but also noise, power loss, vibration, and a shortened engine life. A defective crankshaft should always be detected at an early stage and then repaired immediately.

The following explanation concerns the most common crankshaft problems, the method for measuring warp, play and runout, and the method for correcting flywheel misalignment. Since the crankshaft assembly requires a manual or hydraulic press and special tools to attain the precise tolerances that are required, a defective crankshaft should be either rebuilt by a properly equipped shop or replaced as an assembly.

Connecting rod bending, twisting

Set the crankshaft in a flywheel alignment jig or on V blocks on a surface plate. Select an arbor of the same diameter as the piston pin and of optional length, and insert it through the small end of the connecting rod.

Using a height gauge or dial gauge, measure the difference in the height of the rod above the surface plate over a 100 mm length to determine the amount the connecting rod is bent.

Using the arrangement shown in Fig. 229, measure the amount that the arbor varies from being parallel

72 MAINTENANCE

with the crankshaft over a 100 mm length of the arbor to determine the amount the connecting rod is twisted.

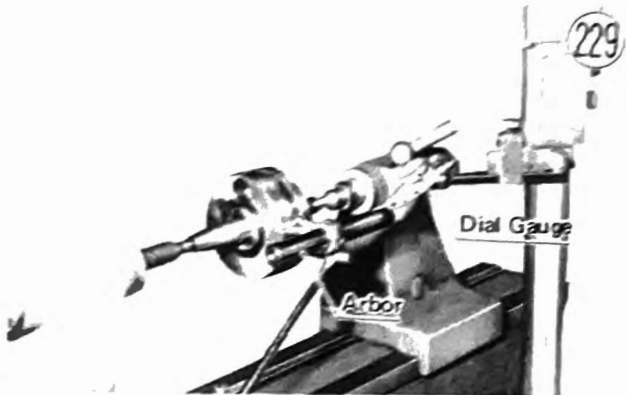
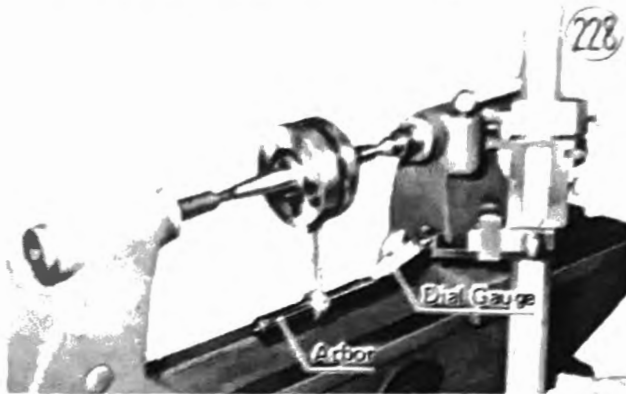



Table 12 Connecting Rod Bend, Twist

Standard	Service Limit
under 0.05 mm/100 mm	0.20 mm/100 mm

If either of the above measurements exceeds the service limit, the connecting rod or the crankshaft assembly must be replaced.

Connecting rod big end radial clearance

Set the crankshaft in a flywheel alignment jig or on V blocks, and place a dial gauge against the big end of the connecting rod. Push the connecting rod first towards the gauge and then in the opposite direction. The difference between the two gauge readings is the radial clearance.

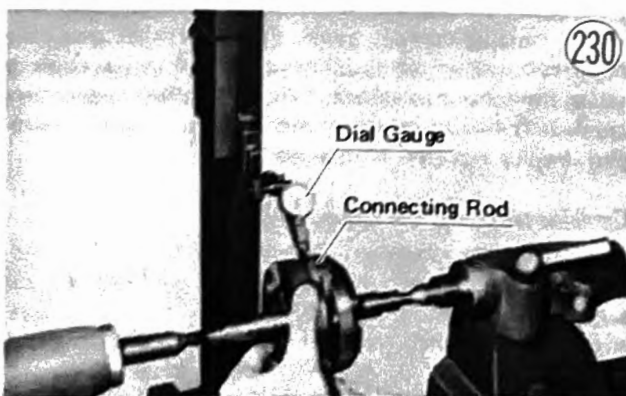

If the radial clearance exceeds the service limit, the crankshaft should be either replaced or disassembled and the crankpin, needle bearing, and connecting rod big end examined for wear.

Table 13 Connecting Rod Radial Clearance

Standard	Service Limit
0.016 ~ 0.039 mm	0.06 mm

Connecting rod side clearance

Measure the side clearance of the connecting rod with a thickness gauge as shown in the figure. If the measured value exceeds the service limit, the crankshaft should be either replaced or disassembled and the side washers examined for wear.

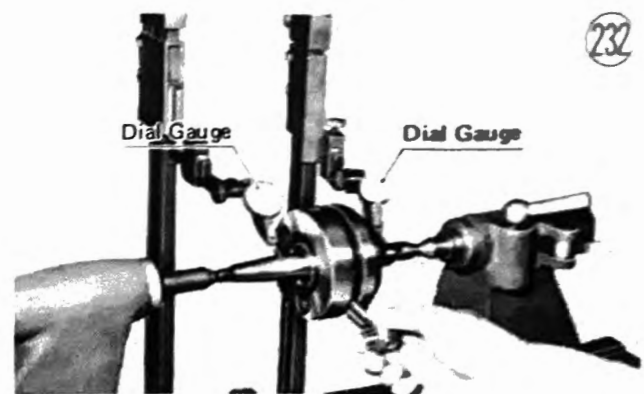


Table 14 Connecting Rod Side Clearance

Standard	Service Limit
0.35 ~ 0.45 mm	0.6 mm

Crankshaft runout


Set the crankshaft in a flywheel alignment jig, and place a dial gauge to the points indicated. Turn the crankshaft slowly. The maximum difference in gauge readings is the crankshaft runout.



If the runout at either point exceeds the service limit, align the flywheels so that the runout falls within the service limit. As shown in Figs. 233, 234, there are three types of flywheel misalignment.


In the case of horizontal misalignment, which is the most common, strike the projecting rim of the flywheel with a plastic, soft lead, or brass hammer as indicated in the figure. Recheck the runout with a dial gauge, repeating the process until the runout falls within the service limit. Vertical misalignment is corrected either

Flywheel Horizontal Misalignment

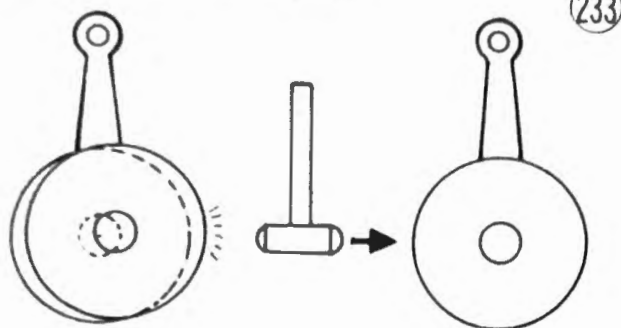

233

Flywheel Vertical Misalignment

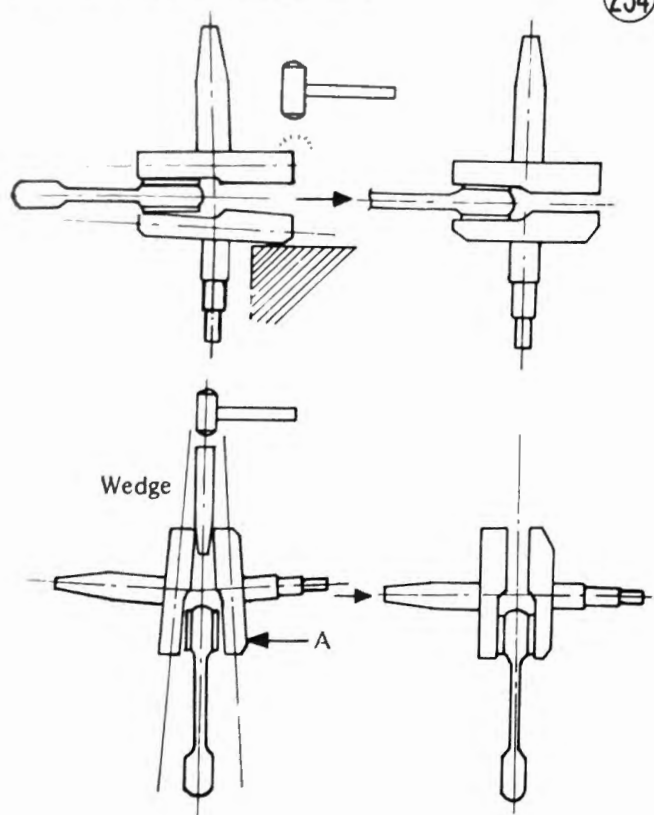

234

by driving a wedge in between the flywheels or by squeezing the flywheel rims in a vise, depending on the nature of the misalignment. In case of both horizontal and vertical misalignment, correct the horizontal misalignment first.

If flywheel misalignment cannot be corrected by the above method, replace the crankpin or the crankshaft itself.

NOTE: Don't hammer the flywheel at part "A".

Table 15 Crankshaft Runout

Standard	Service Limit
under 0,04 mm	0,10 mm

Big end seizure

In case of serious seizure with damaged flywheels, the crankshaft must be replaced. In case of less serious damage, disassemble the crankshaft and replace the

crankpin, needle bearing, side washers, and connecting rod.

CLUTCH

Fig. 235 shows the cross-sectional diagram of the clutch, which is a wet multi-plate type with 4 friction plates 3 alternated with 3 steel inner plates 4, and 1 steel outer plate 5. The friction plates are made from cork, used bakelite core, which provides durability and warp resistance. The clutch housing 2, has a reduction drive gear riveted to one side. At the rear of the clutch housing is the clutch housing spring 24 to control the axial play of the clutch housing, which floats on the drive shaft.

The clutch release mechanism is shown in Fig. 236. The clutch release worm gears 5, 8, made of nylon, have the clutch adjusting screw 10 constructed in the center of the inner gear. The clutch adjusting screw pushes on the push rod 2 when the clutch is disengaged.

The clutch friction plates are connected to the clutch housing by tangs on the outer circumference of each plate, and since the clutch housing is gear-driven directly by the crankshaft, these plates are always turning any time the engine is running. The steel inner and outer plates have a toothed inner circumference which meshes with the splines in the clutch hub on the drive shaft so that the drive shaft and steel plates always turn together. When the clutch is engaged, the force of the springs, pressed in between the clutch hub 21 and the spring plate 19, which is bolted to the clutch wheel 23, forces the clutch hub, the plate assembly, and the clutch wheel together so that the clutch friction plates will drive the steel plates by virtue of their mutual friction, and thereby transmit the power to the transmission drive shaft.


When the clutch lever is pulled to release (disengage) the clutch, the clutch cable turns the clutch release worm gear in towards the clutch. The clutch adjusting screw, constructed inside the clutch release worm gear, then pushes the push rod, which in turn pushes the spring plate and clutch wheel. Since the clutch wheel moves towards the crankcase the same distance that the clutch release worm gear moves, and the clutch hub remains stationary and the pressure is taken off the clutch plates. Because the plates are no longer pressed together, the power transmission from the crankshaft to the transmission drive shaft is interrupted. However, as the clutch lever is released, the clutch springs return the clutch wheel and once again force the clutch hub, the plate assembly, and the clutch wheel tightly together.

A clutch that does not properly disengage will cause shifting difficulty and possible transmission damage. On the other hand, a slipping clutch will reduce power transmission efficiency and may overheat and burn out. A clutch that does not properly disengage may be caused by:

1. Excessive clutch lever play.
2. Clutch plates that are warped or too rough.
3. Uneven clutch spring tension.
4. Deteriorated transmission oil.

74 MAINTENANCE


Clutch Construction

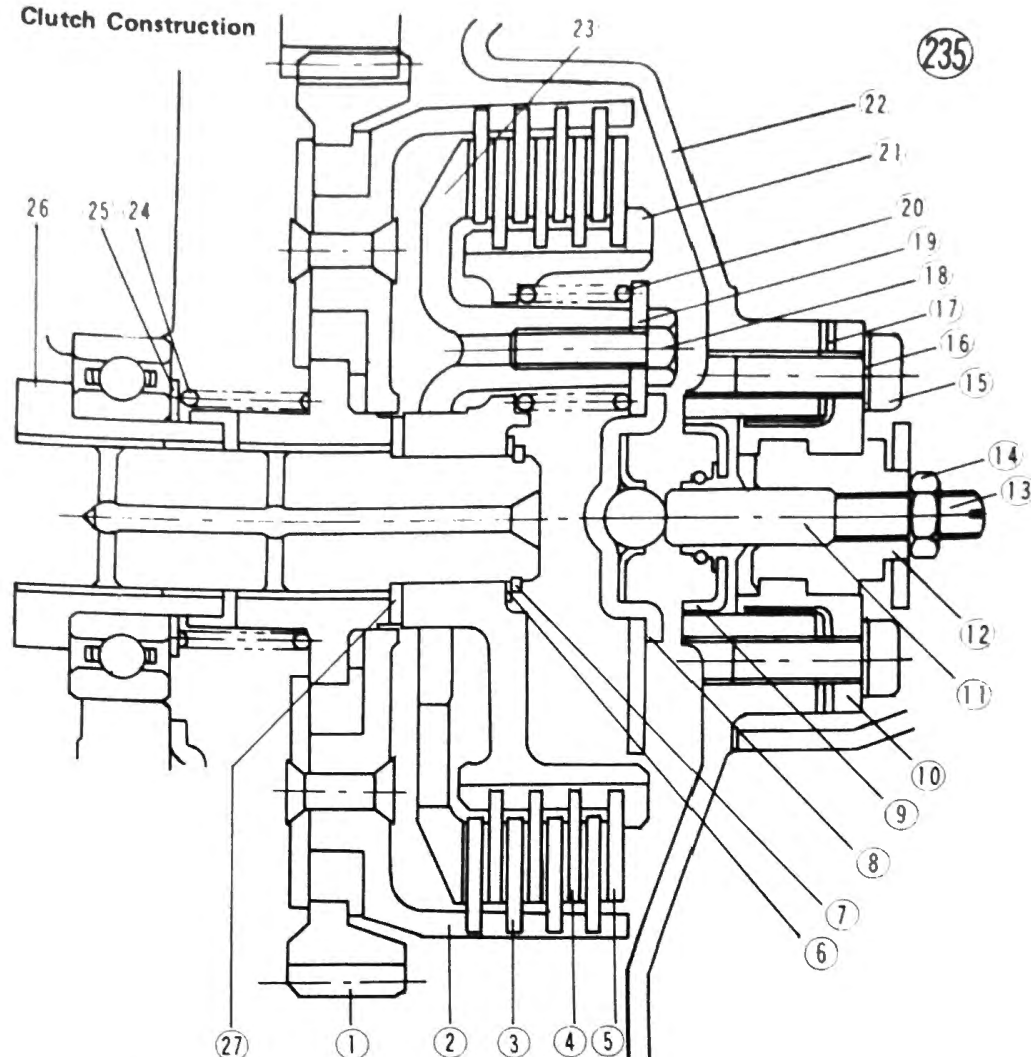

1. Clutch Housing Gear
2. Clutch Housing
3. Friction Plate
4. Steel Inner Plate
5. Steel Outer Plate
6. Thrust Washer
7. Circlip
8. Spring Plate Disc
9. Grease Seal
10. Outer Clutch Release Worm Gear
11. Push Rod
12. Inner Clutch Release Worm Gear
13. Adjusting Screw
14. Lock Nut
15. Screw
16. Flat Washer
17. Gasket
18. Bolt
19. Spring Plate
20. Spring
21. Clutch Hub
22. Right Engine Cover
23. Clutch Wheel
24. Spring
25. Washer
26. Idle Gear
27. Thrust Washer

Clutch Release Mechanism

1. Spring Plate Disc
2. Push Rod
3. Gasket
4. Grease Seal
5. Outer Clutch Release Worm Gear
6. Flat Washer
7. Screw
8. Inner Clutch Release Worm Gear
9. Spring
10. Adjusting Screw
11. Lock Nut

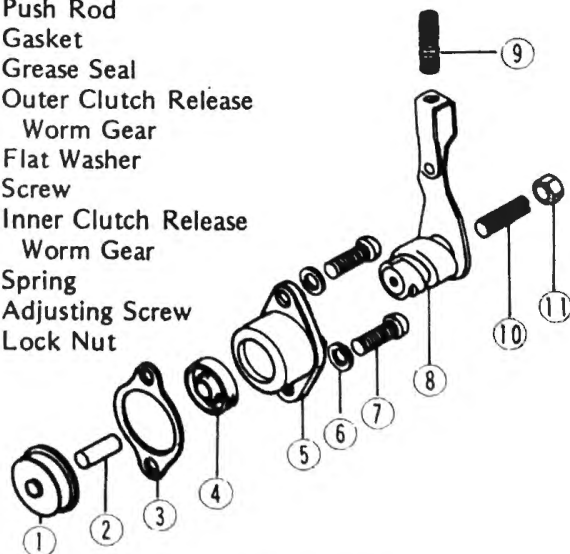

5. Transmission oil viscosity too high.
6. The clutch housing frozen on the drive shaft.
7. A defective clutch release mechanism.
8. Insufficient clutch release lever angle.
9. An unevenly worn clutch hub or housing.
10. Missing parts

A slipping clutch may be caused by:

1. No clutch lever play.
2. Worn friction plates.
3. Weak clutch springs.
4. The clutch cable not sliding smoothly.
5. A defective clutch release mechanism.
6. An unevenly worn clutch hub or housing.

Clutch noise may be caused by:

1. Too much backlash between the primary gear and the clutch gear.
2. Damaged gear teeth.
3. Too much clearance between the friction plate tangs and the clutch housing.
4. Metal chips jammed into the clutch housing gear teeth.

Clutch spring tension

Clutch springs that have become weak will not return to their original length when disassembled from the clutch. Their condition can thereby be determined by measuring the free length with vernier calipers.

If any spring is shorter than the service limit, replace all the springs as a matched set to ensure even tension on the clutch plates.


Table 16 Clutch Spring Free Length


Standard	Service Limit
21.6 mm	20.0 mm

Friction plate wear, damage

Visually inspect the friction plates to see whether or not they show any signs of heat seizure or have become rough or unevenly worn. Measure the thickness of the plates with vernier calipers.

If any plates show signs of damage, or if they have worn past the service limit, replace them with new ones.

Friction Plate Measurement

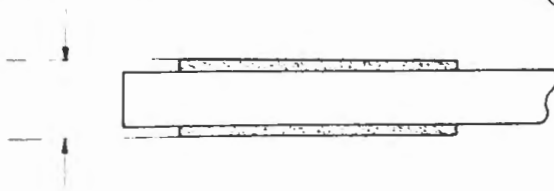

Table 17 Friction Plate Thickness

Standard	Service Limit
3.1 ~ 3.3 mm	2.8 mm

Clutch plate warp

Place each friction plate and each steel plate on a surface plate, and measure the gap between each clutch plate and the surface plate. This gap is the amount of clutch plate warp.

Replace any plates warped over the service limit.

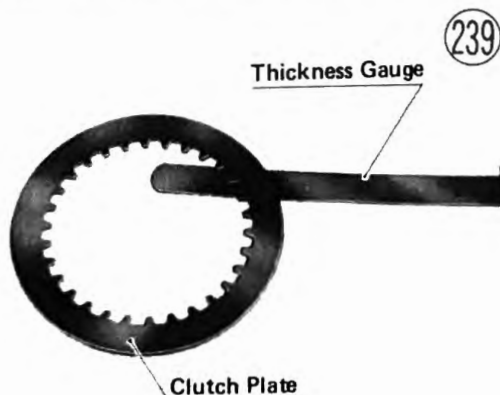
Table 18 Clutch Plate Warp


	Standard	Service Limit
Friction Plate	0.3 mm	0.4 mm
Steel Plate	0.15 mm	0.3 mm

Friction plate/clutch housing clearance

Measure the clearance between the tangs on the friction plates and the fingers of the clutch housing. If this clearance is excessive, the clutch will be noisy.

If the clearance exceeds the service limit, replace the friction plates. Also, replace the clutch housing if it is unevenly or badly worn where the friction plates wear against it.

Friction Plate/Clutch Housing Clearance

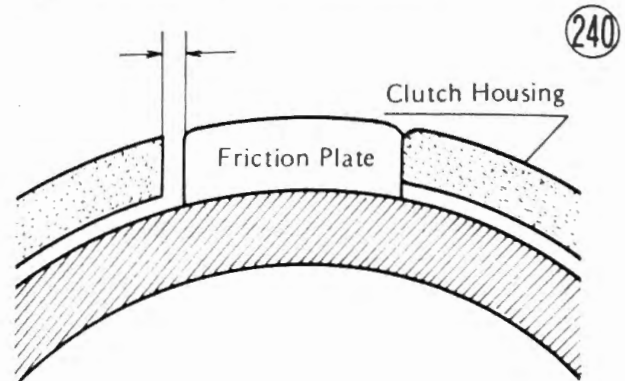
Table 19 Friction Plate/Clutch Housing Clearance

Standard	Service Limit
0.15 ~ 0.40 mm	0.50 mm


Clutch housing gear damage

Inspect the teeth on the clutch gear. Any light damage can be corrected with an oilstone, but the clutch housing must be replaced if the teeth are badly damaged. Damaged teeth on the clutch housing gear indicate that the teeth on the primary gear, by which it is driven, may also be damaged. At the same time that the clutch housing gear is repaired or replaced, the primary gear should be inspected, and then repaired or replaced if necessary.



Clutch housing/primary gear backlash

Measure the backlash between the clutch housing gear and primary gear with a dial gauge. Set the dial gauge against a tooth on the clutch housing gear, and rotate the clutch housing gear back and forth while keeping the primary gear stationary. The difference between the highest and lowest dial reading is the amount of backlash. If the amount of backlash exceeds the service limit, replace both the clutch housing and the primary gear.

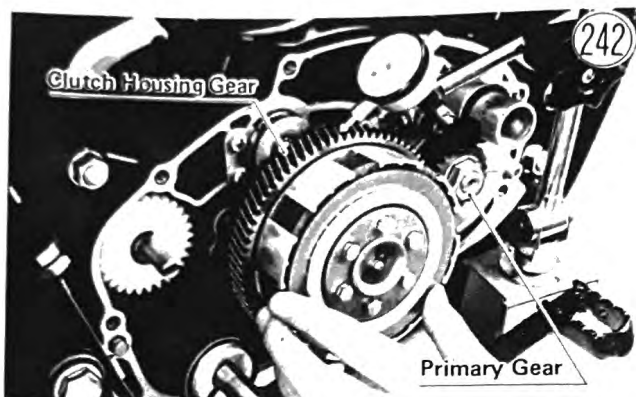**Table 20 Clutch Housing/Primary Gear Backlash**

Standard	Service Limit
0.02~0.10 mm	0.15 mm

Cylinder Gauge**Table 21 Clutch Housing Drive Shaft Wear**

Standard	Service Limit
0.038~0.062 mm	0.162 mm

Clutch hub damage

Inspect where the teeth on the steel plates wear against the splines of the clutch hub. If there are notches worn into the splines, replace the clutch hub.

Clutch release gear wear


Fit the outer and inner clutch release worm gears together, and push them back and forth in the direction of the shaft without turning them. If there is excessive play, replace them both. Also, replace them if either one is visibly damaged.

Lubrication

Lubricate the clutch release worm gears with grease.

Clutch housing, drive shaft wear

Measure the diameter of the drive shaft with a micrometer, and measure the inside diameter of the clutch housing. Find the difference between the two readings to determine the clearance. Replace the clutch housing if the clearance exceeds the service limit.

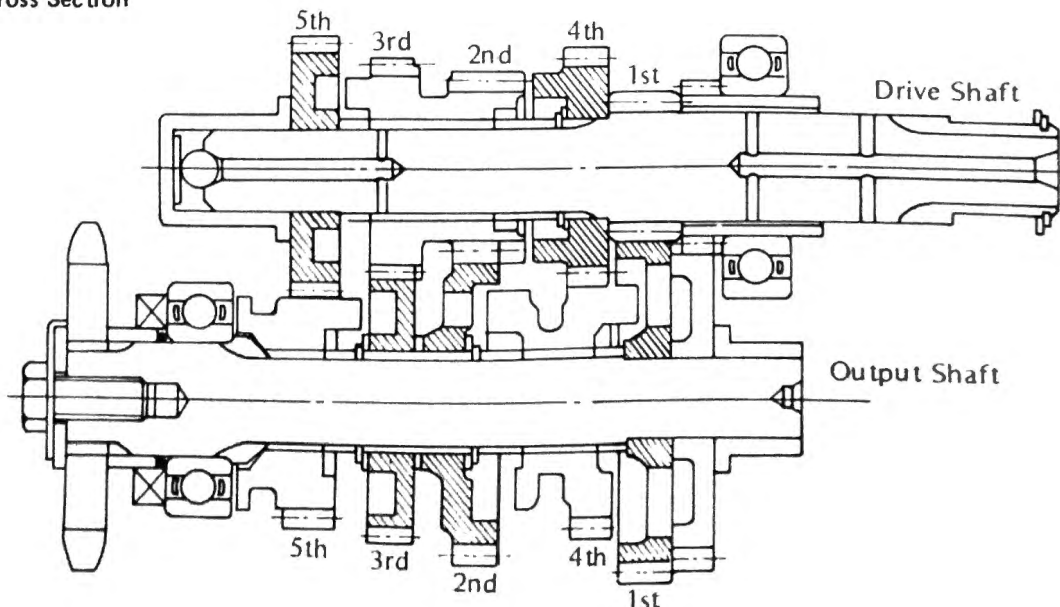Transmission Cross Section**TRANSMISSION**

The transmission is a 5-speed, constant mesh, return shift type. Its cross section is shown in Fig. 244, and the external shift mechanism is shown in Fig. 245. For simplicity, the drive shaft gears in the following explanation will be referred to as "D" (e.g., D1 = drive shaft 1st gear) and the output shaft gears as "O".

Gears D2 & D3 (single unit), O4, and O5 all rotate along with their shaft, but during gear changes are moved sidewise on their shaft by 3 shift forks, one for each of these 3 gears. Gears D4, D5, O1, O2 and O3 rotate free of shaft rotation, but cannot move sidewise. Gear D1 is constructed as part of the drive shaft.

When the shift pedal (1) is raised or lowered, the mechanism arm catches on one of the shift drum pins (15), and the shift drum (17) turns. As the shift drum turns, the shift fork guide pins (3) (18), each riding in a groove in the shift drum, shift the position of one or another of the shift forks (21) in accordance with the winding of the grooves. The shift fork fingers then the position of gears D2, D3, O4, and O5. Refer to Figs. 246 to 251 for the gear train for neutral and each of the 5 gears.

When the shift pedal is released after shifting gear, the return spring (4) returns the shift pedal to its


original position. To keep the shift drum in its new position, a detent arm (14) is held against the shift drum pins by the detent arm spring (8).

The return spring pin (3), fitted in the side of the crankcase, passes through a cutout on the shift mechanism. Each time that the shift pedal is operated, the pin limits the shift mechanism's range of movement, stopping the shift mechanism after the pawl on the shift mechanism arm has rotated the shift drum the proper amount for gear change. The return spring pin thus prevents the drum from being rotated too far.

A neutral indicator light is provided so that the rider can readily determine whether or not the transmission is in neutral. The neutral indicator switch is installed on the crankcase, and the switch rotor inside the switch housing is turned by the shift drum. When the shift drum has shifted the transmission into neutral, the neutral indicator switch lead on the switch housing

Shift Mechanism

245

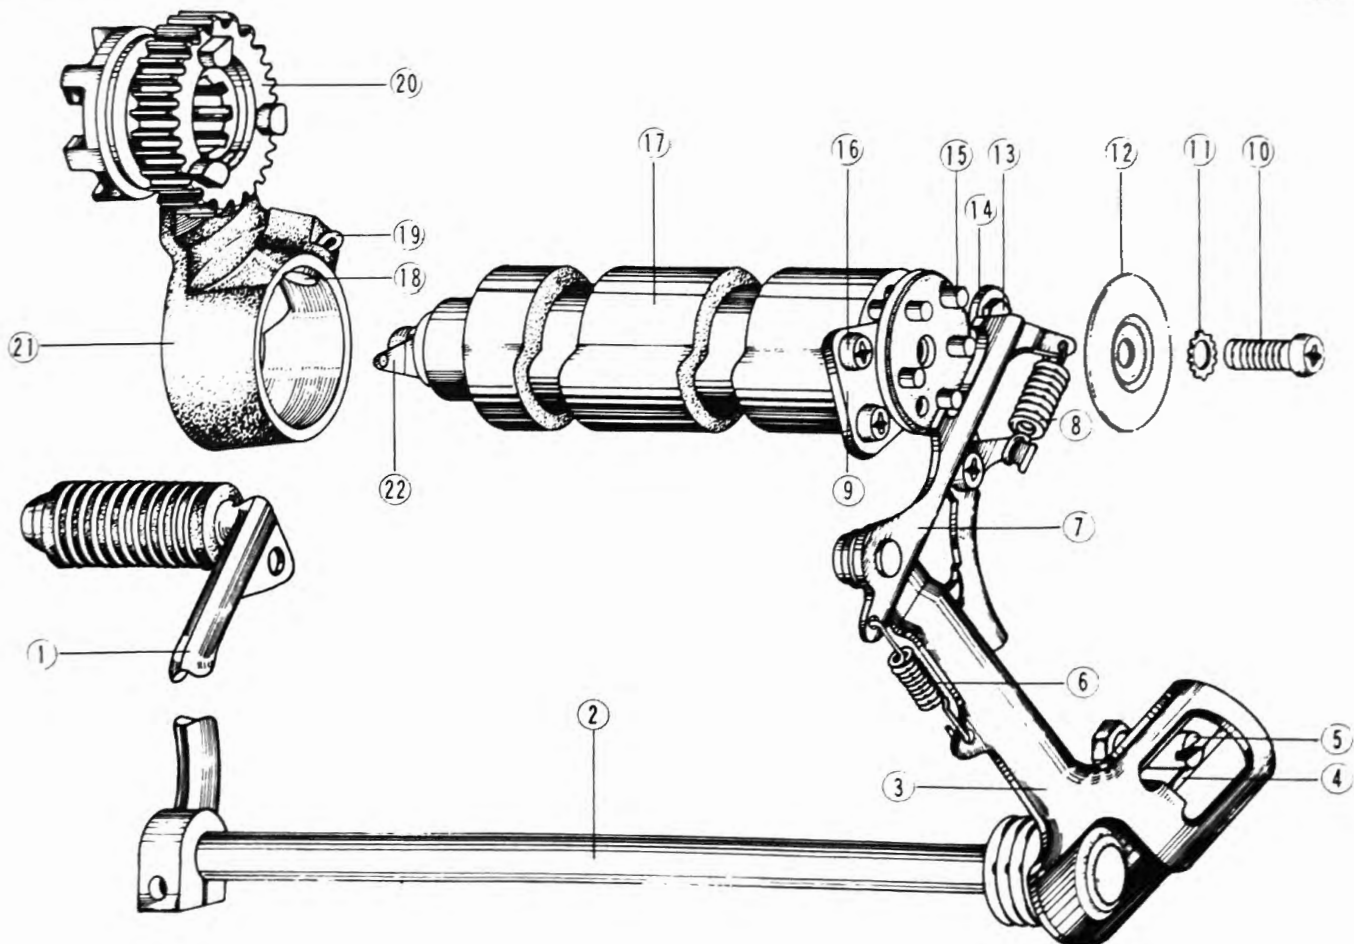

- | | | |
|----------------------|-----------------------|----------------|
| 1. Shift Pedal | 9. Shift Drum Stopper | 17. Shift Drum |
| 2. Shift Shaft | 10. Screw | 18. Guide Pin |
| 3. Arm | 11. Washer | 19. Cotter Pin |
| 4. Return Spring | 12. Pin Holder | 20. Gear |
| 5. Return Spring Pin | 13. Bolt | 21. Shift Fork |
| 6. Spring | 14. Detent Arm | 22. Rotor |
| 7. Shift Pawl | 15. Pin | |
| 8. Spring | 16. Screw | |

78 MAINTENANCE

grounds through the rotor, completing the neutral indicator light circuit, which turns the neutral indicator light on.






When the rotor and the housing do not have good electrical contact, the circuit will not be completed when the transmission shifts into neutral. If the electrical contact becomes insufficient for the light to go on, the rotor should be bent out so that it will brush firmly against the side of the housing.

Transmission damage, causing the transmission to misshift, overshift, and jump out of gear, brings about more damage to the transmission and also overrev damage to the engine itself. An improperly functioning transmission may be caused by the following:

1. Loose return spring pin
2. Broken or weakened return spring or detent arm spring.
3. Broken shift lever pawl spring
4. Damaged shift lever
5. Loose shift drum positioning plate
6. Bent or worn shift fork
7. Worn shift fork groove on gears D2 & D3, O4, and/or O5
8. Worn shift fork pin (s)
9. Worn shift drum groove(s)
10. Worn or damaged gear dogs and/or gear dog recesses
11. Improperly functioning clutch
12. Improper assembly or missing parts

Transmission noise results from worn or damaged gear teeth, gear bushings, shafts, bearings, etc.

The idle gears on the output shaft and drive shaft are constantly meshed, and transmit the rotation of the kick gear through the clutch housing gear to the primary gear when the engine is started. Since these gears are not directly related to the transmission, they are covered in the Kickstarter section (Pg. 81).

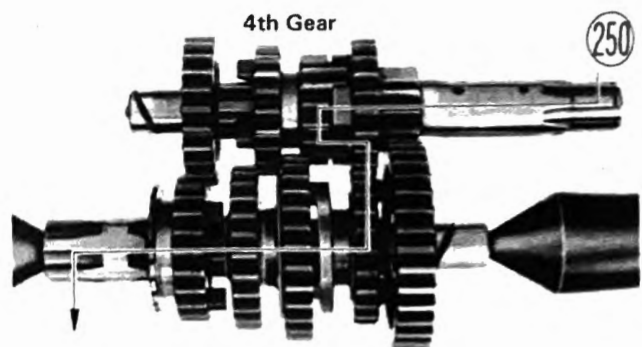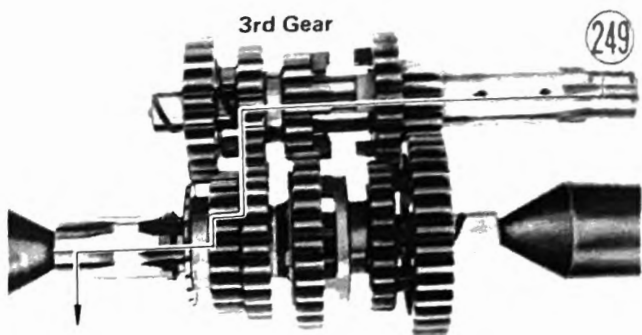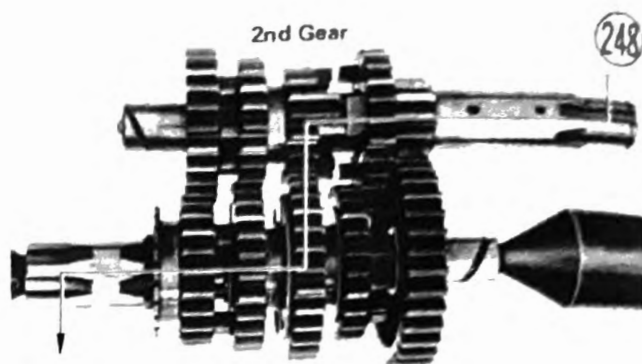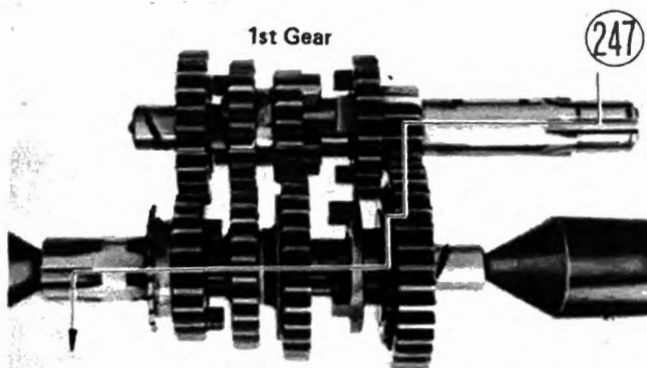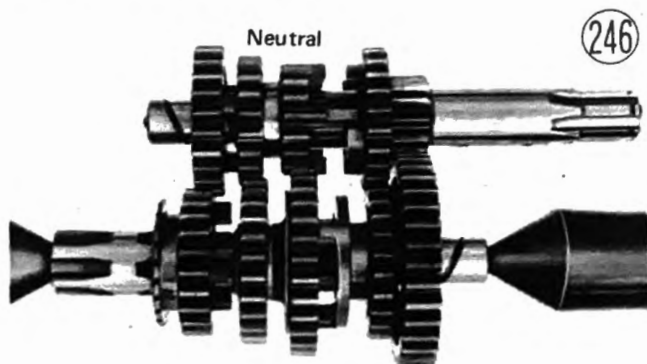

External shift mechanism inspection

Inspect the shift pawl spring, shift pawls and return spring. Replace any broken or otherwise damaged parts.

Check that the drum positioning plate is not loose. If it is loose, tighten the screws.

Measure the free length of the shift pawl spring. If it exceeds the service limit, replace it with a new one.



Table 22 Shift Pawl Spring Free Length

Standard	Service Limit
29.4 mm	31.0 mm

Check to see if the return spring pin is loose or not. If it is loose, remove it and apply a locking agent to the threads. Then screw it back in tightening its lock nut.



Shift fork bending

Visually inspect the shift forks, and replace any fork that is bent. A bent fork could cause difficulty in shifting or allow the transmission to jump out of gear when under power.

Shift fork/gear groove wear

Measure the thickness of the ears of each shift fork, and measure the width of the shift fork groove on gears D2 & D3, O4, and O5. If the thickness of a shift fork finger is under the service limit, the shift fork must be replaced. If a gear shift fork groove is worn over the service limit, the gear must be replaced.



Table 23 Shift Fork Thickness

Standard	Service Limit
4.9 ~ 5.0 mm	4.8 mm

Table 24 Gear Shift Fork Groove Width

Standard	Service Limit
5.05 ~ 5.15 mm	5.25 mm

Shift fork guide pin, shift drum groove wear

Measure the diameter of each shift fork guide pin, and measure the width of each shift drum groove. Replace any shift fork guide pin which has worn past the service limit. If a shift drum groove is worn past the service limit, replace the shift drum.

Table 25 Shift Fork Guide Pin Diameter

Standard	Service Limit
7.985 ~ 8.000 mm	7.94 mm

Table 26 Shift Drum Groove Width

Standard	Service Limit
8.000 ~ 8.015 mm	8.20 mm

Shift fork guide pin/shift drum groove clearance

Measure the clearance between each shift fork guide pin and shift drum groove with a thickness gauge. Replace any shift fork guide pin with which the clearance exceeds the service limit.

80 MAINTENANCE

Table 27 Shift Fork Guide Pin/Shift Drum Groove Clearance

Standard	Service Limit
0.05~0.22 mm	0.30 mm

Gear dog, gear dog hole, gear dog recess damage

Visually inspect the gear dogs, gear dog holes, and gear dog recesses. Replace any gears that have damaged or unevenly or excessively worn dogs, dog holes, or dog recesses.

Gear/shaft Clearance

Measure the diameter of each shaft with a micrometer, and measure the inside diameter of each gear listed below. Find the difference between the two readings to figure clearance, and replace any gear where clearance exceeds the service limit.

Table 28 Gear/Shaft Clearance

	Standard	Service Limit
D5 O1	0.016~0.045 mm	0.145 mm
D4 O3 O2	0.016~0.052 mm	0.152 mm

KICKSTARTER

Kickstarter construction is shown in Fig. 256 and its cross section in Fig. 257. The kick gear is connected to the primary gear on the crankshaft through the idle gear on the output shaft, the idle gear on the drive shaft, and the clutch housing gear. This gear train is free from the drive shaft whenever the clutch is disengaged, thereby allowing the engine to be kicked over even when in

gear. This type of starting arrangement is called the primary kick system.

The kick gear itself turns freely on the kick shaft. A ratchet is built into the inside of the kick gear, which, when the starter is kicked, is caught by a pawl secured to the kick shaft. The pawl is pushed towards the kick gear by the pawl spring. However, when the kick shaft is in its normal position, the pawl is arrested by a stop and cannot catch on the ratchet portion of the kick gear.


Fig. 256 shows the kickstarter when the kick gear is engaged with the kick shaft by the pawl. As the starter is kicked, the kick shaft rotates in the direction of arrow "A" and releases the pawl from the stop. By the force of the pawl spring, the pawl then catches on the ratchet portion of the kick gear and rotates the kick gear. The gear train of the kick starter system then cranks over the engine. As the engine starts, the primary gear through the gear train turns the kick gear. But since the kick gear rotates in the direction of arrow "A", the kick gear does not catch on the pawl.

When the kick pedal is released, the kick shaft is turned by the return spring until the kick shaft lever strikes the stop, whereupon the pawl rides up on the stop, breaking away from the kick gear. The kick gear now turns freely.

If the kick pedal return spring weakens or breaks, the kick pedal will not return completely or at all, and the kick gear and the pawl will stay partially meshed, making noise while the engine is running. Kick mechanism noise may also result when the kick gear, idle gears, kick shaft, drive shaft, or output shaft becomes worn.


If the ratchet, pawl, or pawl spring is worn or damaged, the kick gear will slip, and it will not be possible to kick start the engine.

Kick Starter

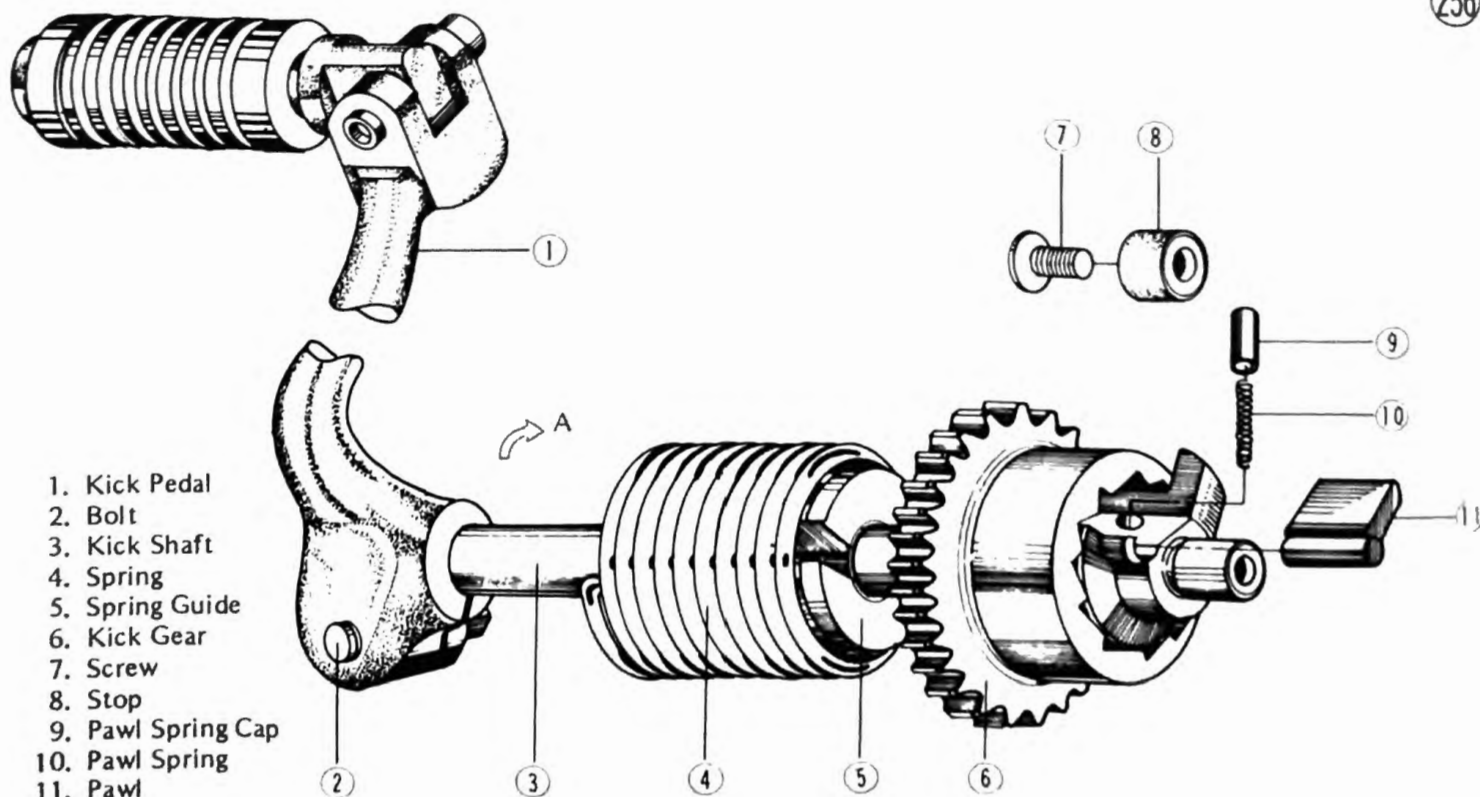

A Cross-sectional Diagram of Primary Kick

(257)

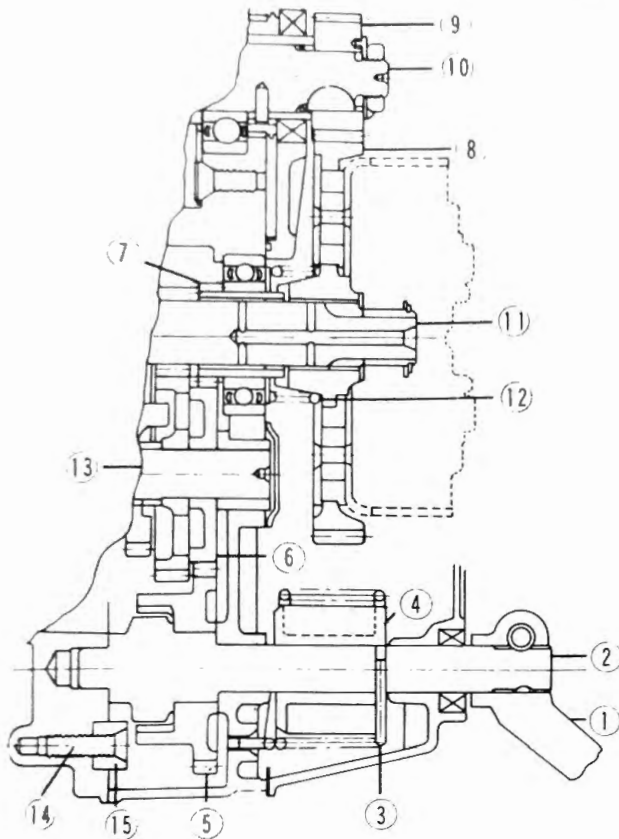

- | | |
|------------------|------------------------|
| 1. Kick Pedal | 8. Clutch Housing Gear |
| 2. Kick Shaft | 9. Primary Gear |
| 3. Return Spring | 10. Crankshaft |
| 4. Spring Guide | 11. Drive Shaft |
| 5. Kick Gear | 12. Spring |
| 6. Idle Gear | 13. Output Shaft |
| 7. Idle Gear | 14. Screw |
| | 15. Stop |

Kick gear, shaft wear

Measure the inside diameter of the kick gear, and replace the gear if the diameter is over the service limit. Visually inspect the ratchet portion of the kick gear. If there is any kind of damage, the kick gear must be replaced.

Measure the outside diameter of the kick shaft, and replace it if it is under the service limit.



(258)

Table 29 Kick Gear Inside Diameter

Standard	Service Limit
20,000~20,021 mm	20,07 mm

Table 30 Kick Shaft Diameter at Kick Gear

Standard	Service Limit
19,959~19,980 mm	19,92 mm



(259)

Drive shaft idle gear/shaft clearance

Measure the inside diameter of the drive shaft idle gear with a cylinder gauge, and measure the diameter of the drive shaft with a micrometer. Find the difference between the two readings to figure the clearance. Replace the gear if the clearance exceeds the service limit.

Table 31 Drive Shaft Idle Gear Cap/Shaft Clearance

Standard	Service Limit
0,040 ~ 0,074 mm	0,174 mm

Output shaft idle gear/shaft clearance

Measure the inside diameter of the output shaft idle gear with a cylinder gauge, and measure the diameter of the output shaft with a micrometer. Find the difference between the two readings to figure the clearance. Replace the gear if the clearance exceeds the service limit.

Table 32 Output Shaft Idle Gear/Shaft Clearance

Standard	Service Limit
0,032 ~ 0,061 mm	0,161 mm

Pawl, pawl spring damage

Visually inspect the pawl and the pawl spring. If either one is damaged or badly worn, it must be replaced.

Put the pawl and pawl spring into place on the kick shaft, and push the pawl by hand. If the pawl will not return smoothly, replace the pawl, pawl spring, and pawl spring cap.

ENGINE LUBRICATION SYSTEM

In the Kawasaki Superlube System, oil is kept in a tank separate from the engine and pumped by an oil pump to the engine where it mixes with the fuel/air mixture from the carburetor. The rate at which the oil is pumped is controlled by both throttle opening and engine speed so that the quantity of oil will vary with engine need. For normal motorcycle operation, this system, as compared to the system whereby the oil is premixed with the fuel, results in better engine lubrication, which means better engine performance and durability.

Fig. 260 shows the engine lubrication system. The oil input to the pump is supplied by a hose from the oil tank, and the output from the pump goes through the outlet hose and then into the non-return check valve at the banjo bolt connection on the right engine cover. The oil pressure, opposing the spring tension on the ball that blocks the valve inlet, causes the oil to flow through the valve and then through the oil pipe that connects to the valve cover where the oil is then ejected through a nozzle into the fuel/air mixture reaches the crank chamber. As this oil and fuel/air mixture reaches the crank chamber, fine droplets of oil lubricate the crankshaft roller

bearings and the connecting rod needle bearings and coat the cylinder wall to minimize friction between the wall and piston rings. So that the oil reaches the big end needle bearing, slits and grooves are provided in the connecting rod big end.


Oil Pump

The oil pump for the engine lubrication system is a plunger type. It supplies oil to lubricate the cylinder, piston, and crank chamber parts by pumping oil from the oil tank to the fuel/air mixture being drawn into the engine from the carburetor. In this type of system the oil pump output is controlled to regulate the ratio of oil to fuel/air mixture so that proper lubrication is achieved at all engine speeds and loads.


The oil pump output is controlled partially by the number of plunger strokes. The number of plunger strokes is determined by the speed of oil pump gear rotation. Since crankshaft rotation is transmitted through the primary gear, clutch housing gear, drive shaft idle gear, and output shaft idle gear to the oil pump gears, the oil pump output changes in direct proportion to engine rpm.

Engine Lubrication System

260

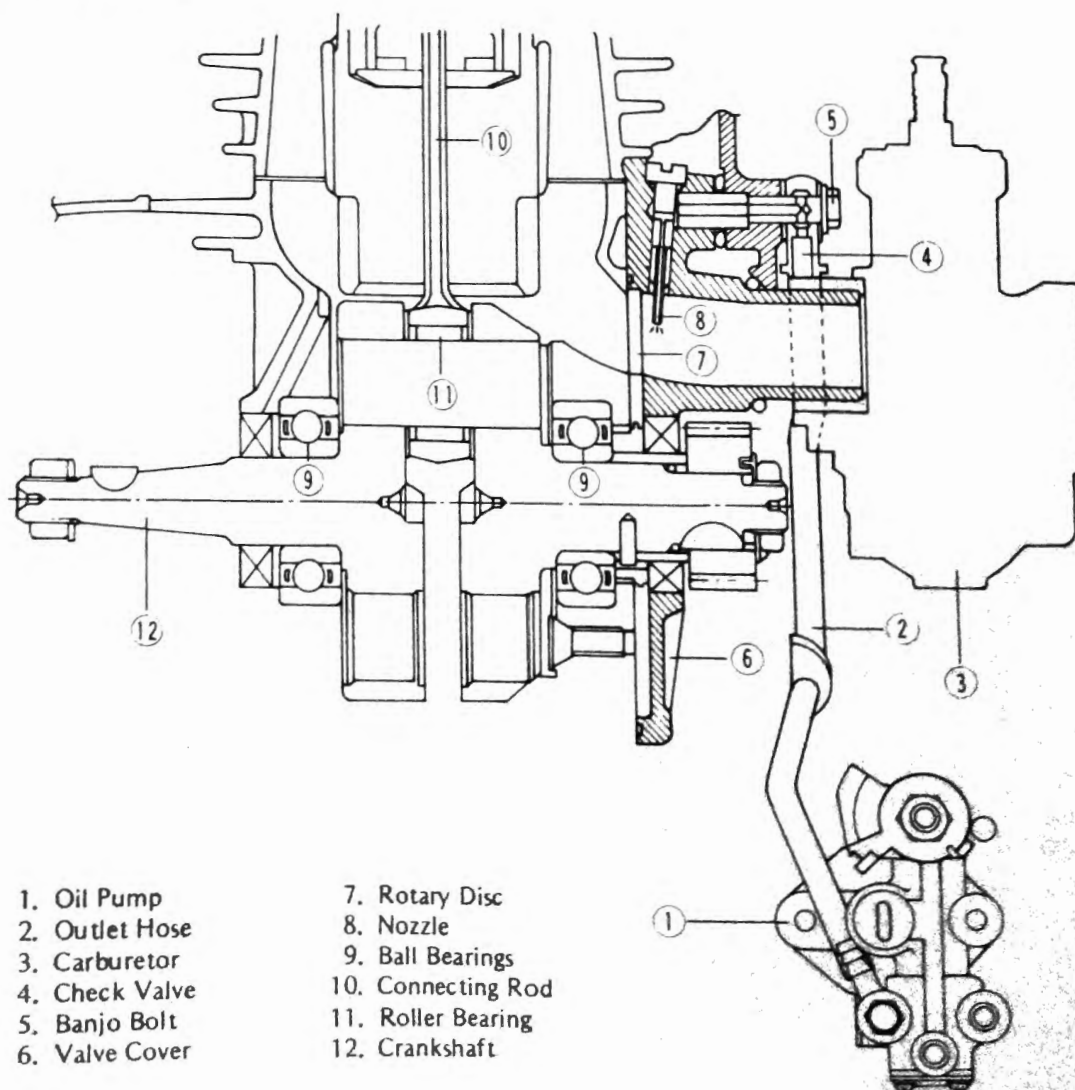

Oil Flow Rate

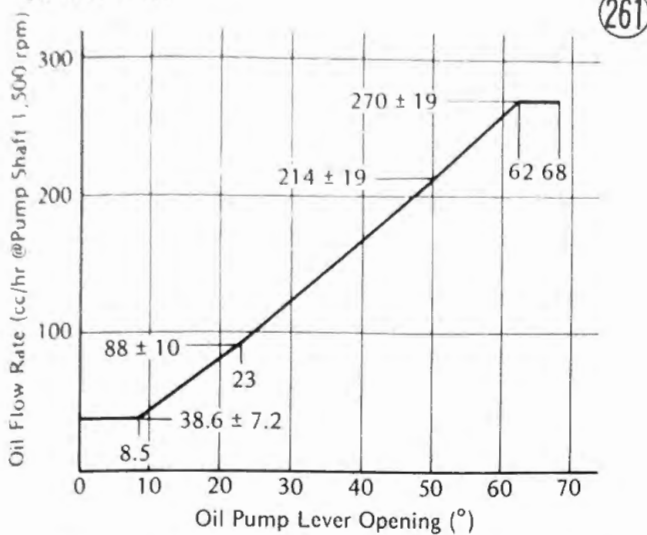


(261)

The other factor that controls oil pump output is the plunger stroke length. This length is determined by the oil pump cam position, which is controlled by the throttle grip through the throttle grip and oil pump cables. As the cam is turned by its cable, the plunger stroke increases. A greater plunger stroke will pump more oil. As shown in Fig. 261, the cam turns increasing the oil pump output from minimum to maximum between 8.5~62° of oil pump lever opening.


Pump operation and the path for oil flow through the pump are shown in Fig. 262. The pump shaft has a worm gear at one end, which meshes with the notches in the plunger. A spring pushes the plunger follower and plunger so that the plunger cam face rests against the camshaft. As the plunger turns, the cam on its face causes it to move back and forth according to the height of the cam. One back and forth movement, in which the plunger makes one complete rotation, makes up one cycle.

Oil flows into **A**, the oil pump inlet, and then in the inlet passage. As the plunger moves in the direction of the camshaft, a chamber **E** is formed between the plunger follower and the cylinder wall. At this time, the plunger follower is turned so that passage **C** in the plunger follower is aligned with the inlet hole in the valve sleeve, and oil flows from the inlet passage through passage **C**, through space **D**, and into the vacuum in chamber **E**. When the plunger moves back in the other direction on the pumping stroke, chamber **E** becomes gradually smaller. This time, however, the plunger follower rotates so that passage **C** is no longer aligned with the inlet hole in the valve sleeve. Instead, passage **C** is aligned with the valve sleeve outlet hole, and the oil forced from chamber **E** flows through passage **C**, through the valve sleeve outlet hole, and into **B**, the oil pump outlet.

Oil Pump

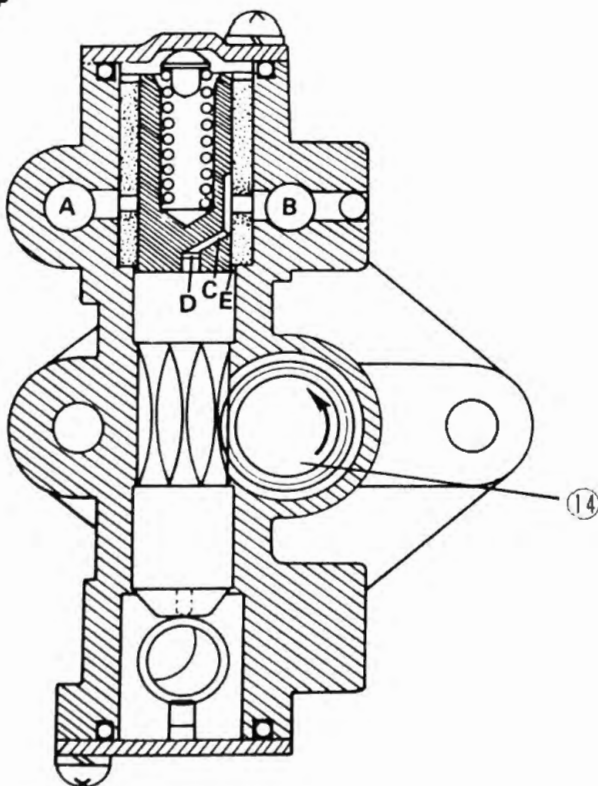

- | | | | |
|---------------------|----------------|----------------|----------------|
| 1. Pump Body | 5. Cap | 9. Plunger | 13. Camshaft |
| 2. Plunger Follower | 6. Washer | 10. Pump Lever | 14. Pump Shaft |
| 3. Valve Sleeve | 7. Spring Seat | 11. O Ring | |
| 4. O Ring | 8. Spring | 12. Cap | |

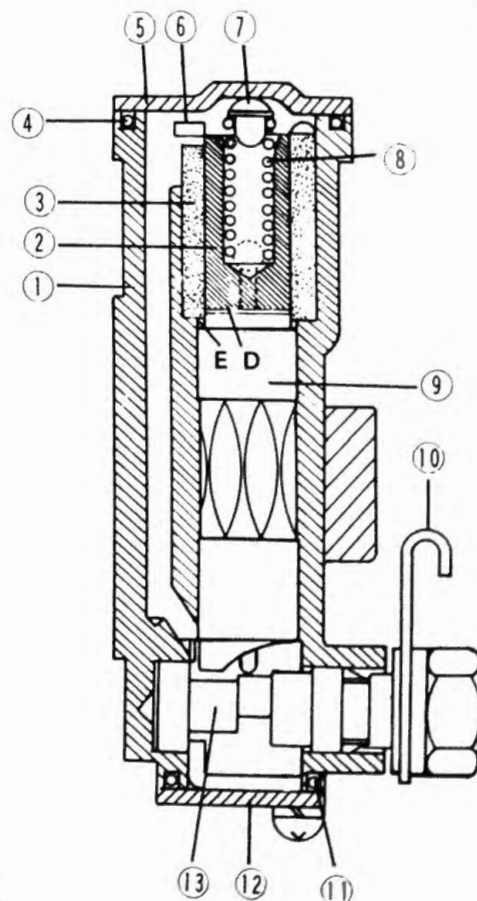

(262)

84 MAINTENANCE


The oil pump is designed so that, at zero throttle when the pump is functioning properly, the oil pump lever lower mark aligns with the mark on the lever stopper, and both the oil pump output that is dependent on the length of the plunger stroke and the throttle valve opening are at their minimum. From this base position the pump lever and the throttle valve move at the same rate as the throttle opens. Any disturbance in this relationship will make the oil pump output too high or too low in relation to the throttle valve opening, resulting in poor performance and spark plug trouble from over-lubrication or piston seizure from under-lubrication.

Pump malfunction is generally caused by a deteriorated or damaged O ring or oil seal since the other oil pump parts, being well lubricated by the oil passing through the pump, wear very little and seldom become damaged. A defective part reduces oil pump performance, resulting in under-lubrication. Also, air trapped in an oil hose or the pump itself or a clogged check valve obstructs the flow of oil and results in under-lubrication.

Any good quality 2-stroke engine oil that is recommended for air cooled engines may be used for the Superlube System. Any other type of oil, such as ordinary motor oil or transmission oil, is not acceptable as a substitute for the proper oil. Poor quality or the wrong type of oil may cause serious engine damage.

Bleeding the oil pump

When either of the oil pump hoses has been removed, air may become trapped inside, which will obstruct oil flow. See that oil flows from the inlet hose before reconnecting it to the pump. Bleed the air from the outlet hose by idling the engine (below 2,000 rpm) while holding the oil pump control lever fully open by hand in order to maximize the plunger stroke. Keep the engine idling until the air is completely pumped out. If air bubbles continue to appear in the outlet hose, check the oil hose connections at the pump.

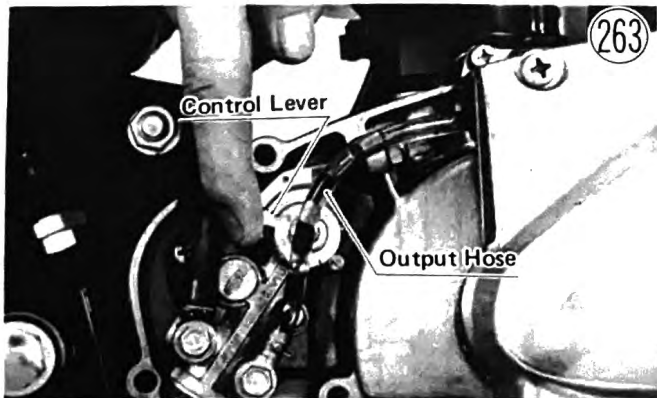

Oil pump performance test

If a drop in oil pump performance is suspected, check the rate that the oil is being pumped.

- Remove the choke knob, and slide the carburetor rubber cap up out of place.
- Remove the oil pump cover and carburetor cover.
- Detach the banjo bolt from the right engine cover, and run the outlet hose into a container.

- USE A 20:1 MIXTURE OF GASOLINE TO OIL IN THE FUEL TANK IN PLACE OF THE GASOLINE NORMALLY USED.

- Attach an instrument for measuring engine rpm to the magneto fly wheel, and start the engine. Set the engine at 2,000 rpm.
- Holding the oil pump lever fully open by hand, collect the oil that is being pumped for 3 minutes. If the quantity of oil collected corresponds with the table, the oil pump is operating properly.

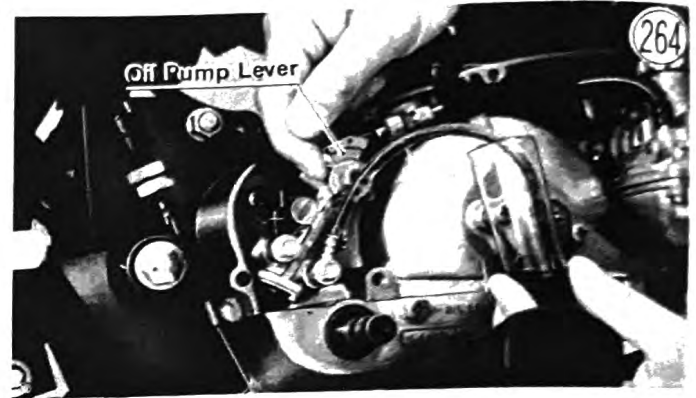


Table 33 Oil Pump Output


Output/3 minutes @2,000 r.p.m.
2.6~3.0 cc

- If the oil pump output is subnormal, disassemble the pump, inspect the O rings and oil seal, and replace if defective. If the trouble is with parts other than the O rings or oil seal, replace the oil pump as an assembly. The pump is precision made with no allowance for replacement of individual parts.

Check valve

If oil will not pass through the check valve, clean the valve out by using a high flash point solvent of some kind in a syringe. Do not use compressed air on the valve since doing so would damage the valve spring. If the check valve does not work properly after being cleaned out, either allowing oil to pass in both directions or not allowing oil to pass at all, replace the check valve.

Check Valve

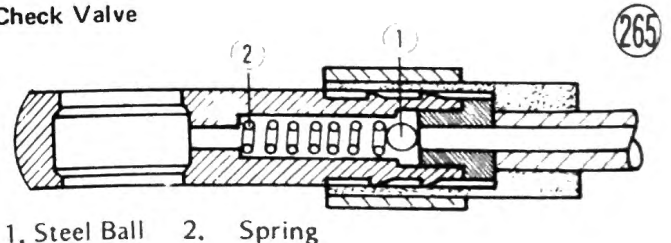

1. Steel Ball 2. Spring

ROTARY VALVE

The rotary valve consists of a rotary disc, valve cover, oil seal, large and small O ring, dowel pin and sleeve. The rotary disc, made of heat hardened phenol resin molded on a steel hub, rotates with the crankshaft by virtue of the dowel pin, fitted in a hole in the crankshaft and riding in a groove in the splined collar. The disc is

constructed so that as the cutaway portion passes by the intake port in the crankcase, the fuel/air mixture from the carburetor is drawn into the crank chamber below the piston. After the cutaway portion has gone past the intake port, the fuel/air mixture to the crank chamber is cut off.

The disc slides freely along the splined collar in the small space between the valve cover and crankcase so that the disc, when the cutaway does not coincide with the intake port, forms a tight seal. It is forced tightly against the crankcase or against intake port in the valve cover, depending on the pressure in the crank chamber. For example, when the crank chamber is pressurized during the downstroke of the piston, the disc is forced tightly against the intake port in the valve cover by the gas pressure, preventing gas blow back through the carburetor.

This method of drawing in the fuel/air mixture through a port at the side of the crankcase is called the rotary valve system. It contrasts with the method whereby an intake port in the cylinder is opened and closed by the piston as it moves up and down inside the cylinder. The rotary valve system is not dependent on the piston for port timing, in which the timing is symmetrical to BDC. Instead, the timing can be determined freely for higher intake efficiency and elimination of gas blow back.

Table 34 Rotary Valve Timing

Intake Open	Intake Close
120° BTDC	55° ATDC

An oil seal and two O rings fitted in the valve cover seal off the crank chamber from the area inside the right engine cover. A damaged oil seal or O ring thereby results not only in fuel/air mixture leaks, but also in transmission oil being drawn into the combustion chamber. This excess oil adversely affects engine performance the same as though the oil pump were pumping too much oil. Also, as this leakage continues, the transmission may seize from insufficient oil.

Whenever the engine is running, the rotary disc and the inner surface of the valve cover wear against each other. As this wear progresses, weakening the disc and increasing the side to side motion of the disc on the shaft, the disc may possibly warp or suffer other damage.

Oil seal, O ring damage

Visually inspect the oil seal and the O ring. If the lip of the oil seal is deformed, hardened, discolored, or otherwise damaged, replace the oil seal. The O ring should be replaced if damaged.

Rotary disc wear, damage

Visually inspect the rotary disc. If it is cracked, warped, or loose on its hub, replace it.

Measure the thickness of the rotary disc. Replace it if it is worn past the service limit.



Table 35 Rotary Disc Thickness

Standard	Service Limit
0.67 ~ 0.73 mm	0.52 mm

Valve cover wear, damage

Visually inspect the valve cover. If it has abrasions or scratches, it should be replaced.

Measure the depth of the inner surface of the valve cover. Replace the valve cover if the inner surface is worn past the service limit.

Valve Cover

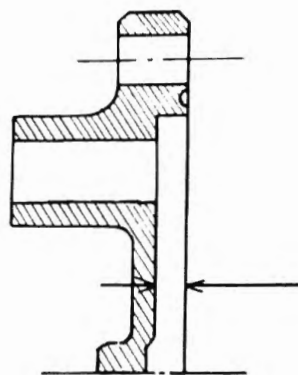


Table 36 Rotary Valve Cover Inner Surface Depth

Standard	Service Limit
1.1 ~ 1.2 mm	1.5 mm

ENGINE BEARING, BUSHINGS, OIL SEALS

The engine bearings, bushings and oil seals are listed in Tables 37 and 38. Worn or damaged bearings and bushes cause engine noise, power loss, and vibration, adversely affect engine and transmission parts, and shorten engine life. The crankshaft oil seals serve to seal the crank chamber, and if damaged will permit leaks to the crank chamber, causing a loss of power. Also, the crankshaft oil seal in the rotary valve cover forms a seal between the crank chamber and the transmission part of the crankcase, and if damaged will allow oil to be drawn into the crank chamber, causing running problems from an overly rich mixture. Any damaged, hardened, or otherwise defective oil seals will allow oil to leak.

86 MAINTENANCE

Table 37 Bearings, Bushings

Crankshaft		Drive Shaft		Output Shaft	
Left	Right	Left	Right	Left	Right
#6204	#6204	Bushing	#6005	#6004	Bushing

Bearing wear, damage

Since the bearings are made to extremely close tolerances, the clearance cannot normally be measured. Therefore, the condition of the bearings must be judged by feel. Wash the bearing with a high flash point solvent of some kind, dry it (**do not spin it while it is dry**), and oil it. Spin it by hand to check its condition. If it is noisy, does not spin smoothly, or has any rough spots, it must be replaced. Before reinstalling the bearing, replace its oil seal with a new one. Press in the bearing so that its face is level with that of the crankcase.

Bushing wear, damage

Since adequate lubrication is provided by an oil groove on each bushing, there ordinarily should be no bushing wear. However, foreign particles in the transmission oil may damage the inner surface of the bushings. If the inner surface of either bushing is scratched, the bushing must be replaced.

Oil seal damage

Inspect the oil seals, and replace any if the lips are misshapen, discolored (indicating the rubber has deteriorated), hardened or otherwise damaged. Since an oil seal is nearly always damaged on removal, any removed oil seals must be replaced. When pressing in an oil seal which is marked, press it in with the mark facing out. Press it in until the oil seal stops.

FUEL TANK


The fuel tank capacity is 8.0 liters. 0.8 liter of which froms the reserve supply. A cap is attached to the top of the tank, and a fuel tap to the bottom at one side. Air vents are provided in the cap so that when the tap is turned on, low pressure will not develop in the tank to hinder or prevent fuel flow to the carburetor.

Fuel tap construction is shown in Fig. 268. The fuel tap has three positions: off, on, and reserve. With the tap in the off position, no fuel will flow through the tap; with the tap in the on position, fuel flows through the tap by way of the main pipe until only the reserve supply is left in the tank; with the tap in the reserve position, fuel flows through the tap from the bottom of the tank. The fuel tap contains a strainer and a sediment cup to filter out dirt and collect water.

Table 38 Oil Seals

Crankcase			Valve Cover	Left Cover	Right Cover
Crankshaft	Output Shaft	Shift Shaft	Crankshaft	Shift Shaft	Kick Shaft
TB20407	SC25376	SB12205	TB25407	VC12185	TB14257

Fuel Tap

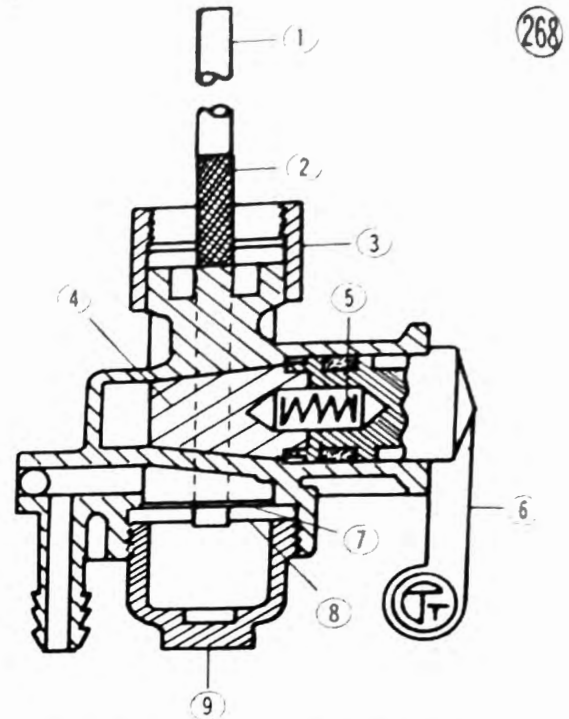

- | | |
|-----------------|-----------------|
| 1. Main Pipe | 6. Tap Lever |
| 2. Reserve Pipe | 7. Filter |
| 3. Nut | 8. Gasket |
| 4. Valve | 9. Sediment Cup |
| 5. Spring | |

Inspection and cleaning

If fuel leaks from the cap or from around the fuel tap, gasket, or O ring may be damaged. Visually inspect these parts, and replace if necessary.


Examine the air vents in the cap to see if any are obstructed. Use compressed air to clear any obstructed vents.

Periodically inspect and clean the fuel tap strainer and the sediment cup, using a high flash-point solvent and a fine brush on the strainer. If the strainer is damaged, it must be replaced. If the sediment cup contains much water or dirt, the fuel tank and the carburetor may also need to be cleaned.

To clean out the fuel tank, disconnect the fuel hose, remove the fuel tap, and flush out the tank with a high flash-point solvent. To clean out the carburetor float bowl, remove the carburetor (Pg. 26), and remove the four screws to take off the bowl. Drain the fuel, and clean out any sediment.

WHEELS


Wheel construction is shown in Fig. 269 and 270. The following sections Pgs. 86 ~ 93 cover the tire, rim and spokes, axle, grease seals, wheel bearings and brakes.

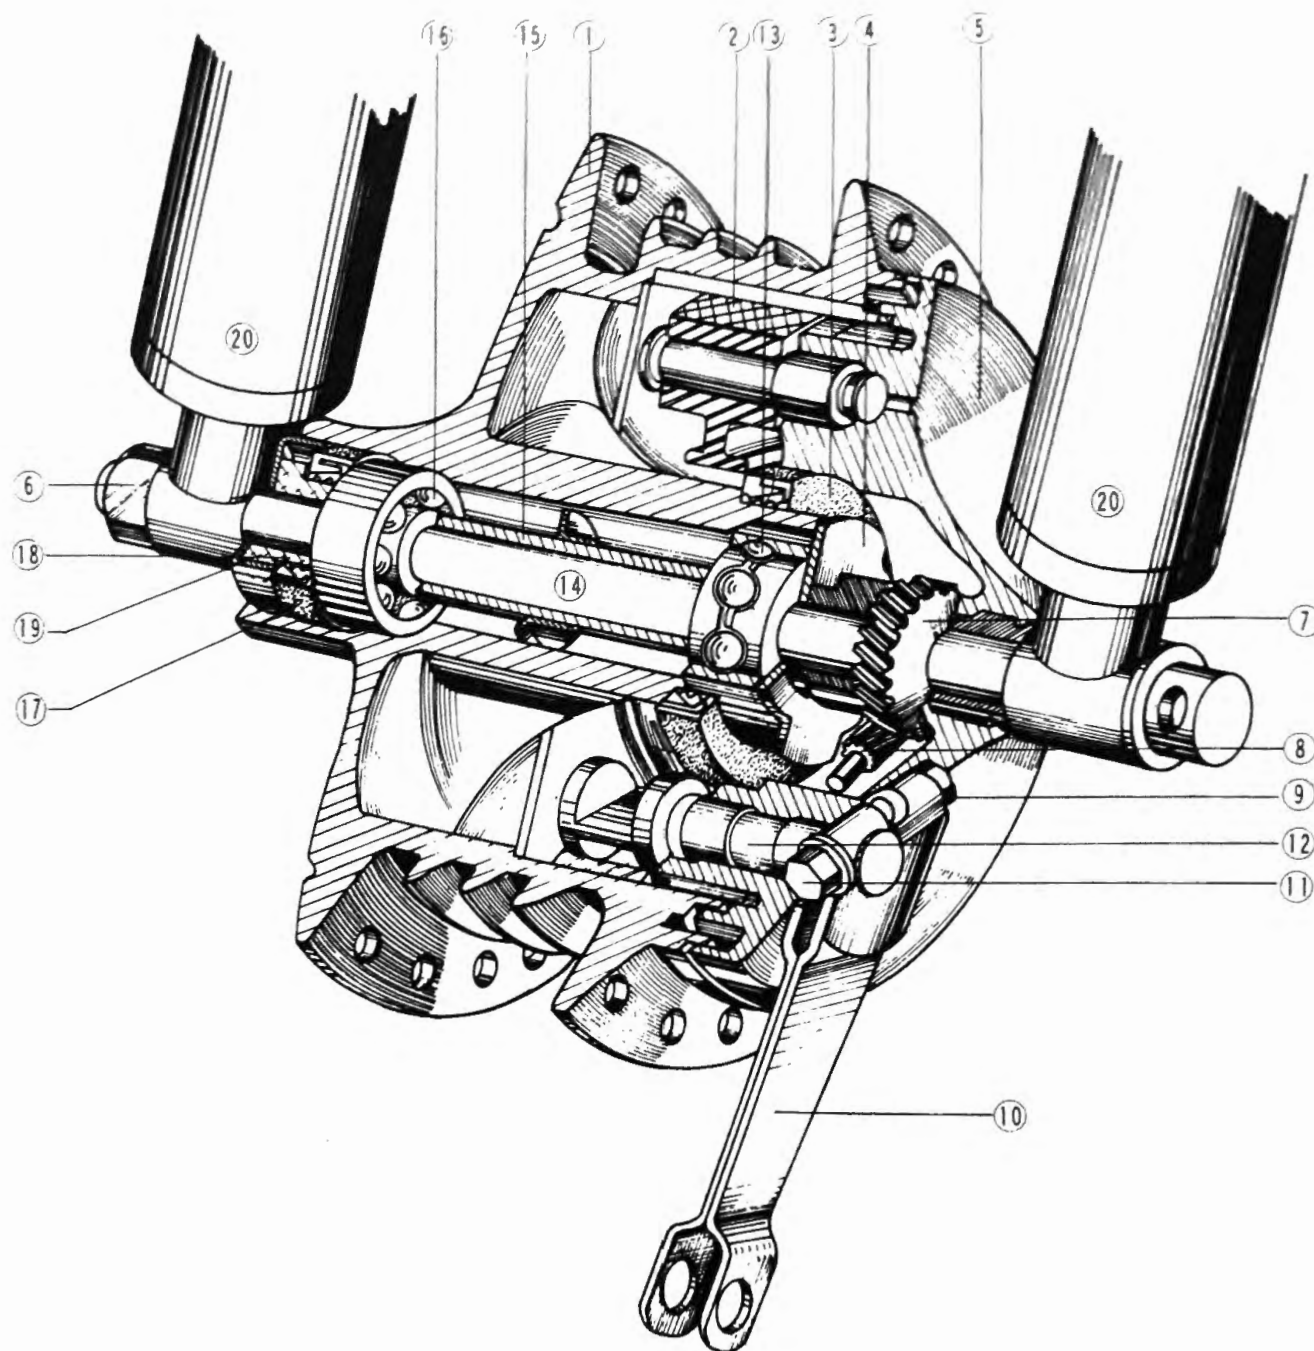

1. Front Hub
2. Brake Shoe
3. Grease Seal
4. Gear Receiver
5. Panel Assembly
6. Nut
7. Speedometer Gear

8. Speedometer Pinion
9. Nut
10. Brake Cam Lever
11. Bolt
12. Camshaft
13. Bearing
14. Axle

15. Distance Collar
16. Bearing
17. Grease Seal
18. Grease Seal Cover
19. Collar
20. Front Fork

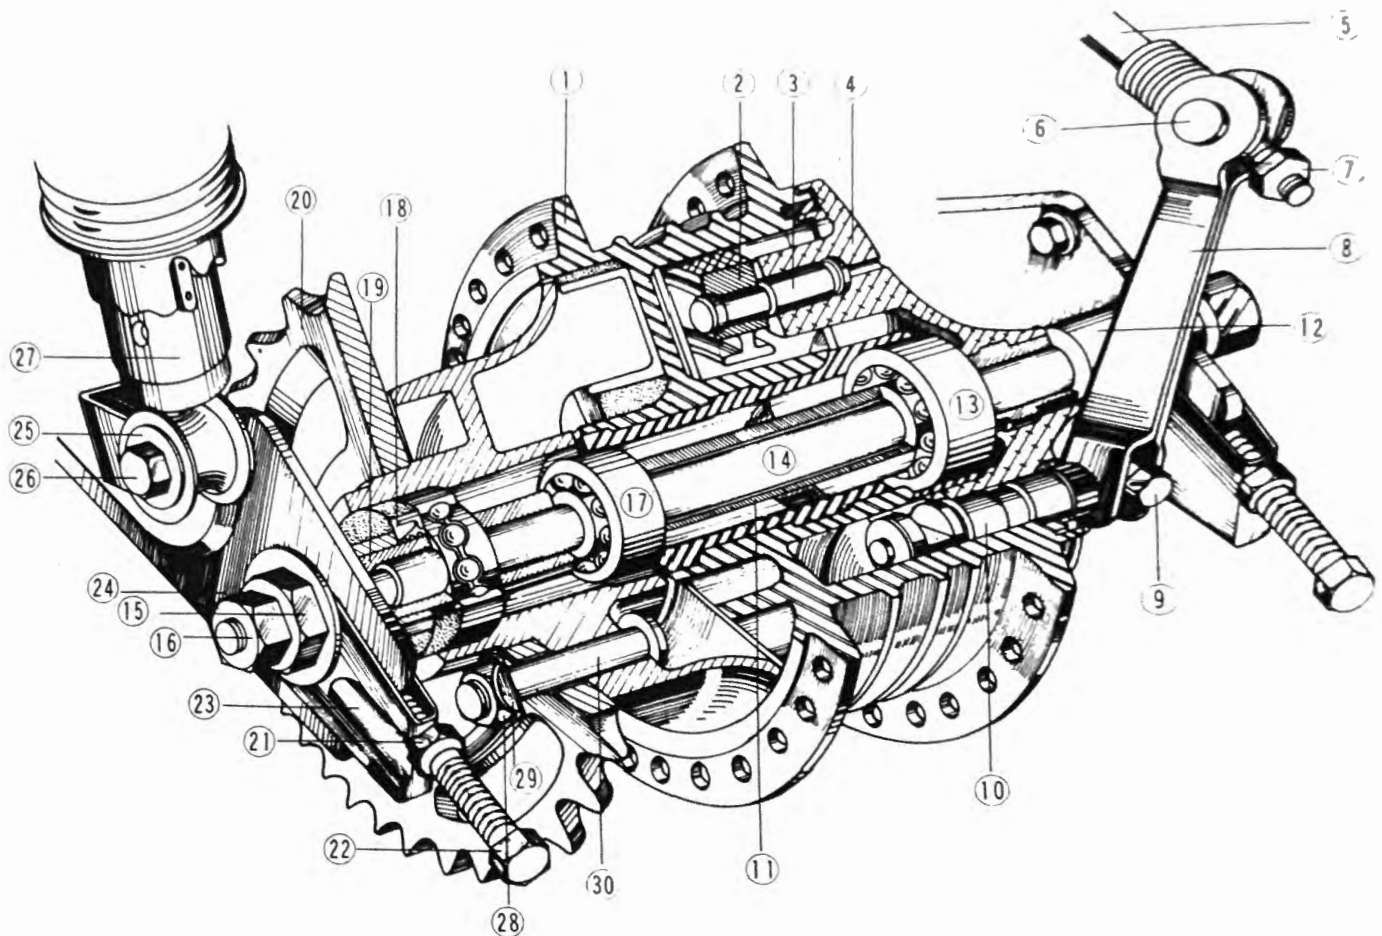

- | | | |
|--------------------|---------------------|-------------------------|
| 1. Rear Hub | 11. Distance Collar | 21. Nut |
| 2. Brake Shoe | 12. Collar | 22. Adjusting Bolt |
| 3. Shoe Anchor Pin | 13. Bearing | 23. Chain Adjuster |
| 4. Panel Assembly | 14. Axle | 24. Swing Arm |
| 5. Brake Rod | 15. Sleeve Nut | 25. Lock Washer |
| 6. Pin | 16. Axle Nut | 26. Bolt |
| 7. Adjusting Nut | 17. Bearing | 27. Rear Shock Absorber |
| 8. Cam Lever | 18. Grease Seal | 28. Nut |
| 9. Bolt | 19. Collar | 29. Lock Washer |
| 10. Camshaft | 20. Rear Sprocket | 30. Bolt |

TIRES

The tires are designed to provide good traction and power transmission during acceleration and braking even under bad surface conditions when they are inflated to the correct pressure and not overloaded. The maximum recommended load in addition to vehicle weight is 150 kg.

If the tires are inflated to too high a pressure, riding becomes rough, the center portion of the tread wears quickly, and the tires are easily damaged.

If inflation pressure is too low, the shoulder portions wear quickly, the cord suffers damage, fuel consumption is high, and handling is poor. In addition, heat builds up at high speeds, and tire life is greatly shortened.

To ensure safe handling and stability, use only the recommended standard tires for replacement, inflating them to the standard pressure. Also, a certain variation from the standard pressure may be desired depending on road surface conditions (rain, ice, rough surface, etc.).

Table 39 Tires, Pressure (measured When Cold)

Wheel	Make	Size	Air Pressure	
Front	Yokohama Y-620	2.75-19 4PR	1.75 kg/cm ² (25 psi)	
Rear	Yokohama Y-620	3.00-18 4PR	Up to 97.5 kg load	1.75 kg/cm ² (25 psi)
			97.5~150 kg load	2.25 kg/cm ² (32 psi)

Tire wear, damage

Tires must not be used until they are bald, or if they are cut or otherwise damaged. As the tire tread wears down, the tire becomes more susceptible to puncture and failure. 90% of tire failures occur during the last 10% of tire life.

Visually inspect the tire for cracks and cuts, replacing the tire in case of bad damage. Remove any imbedded stones or other foreign particles from the tread. Swelling or high spots indicate internal damage, requiring tire replacement unless the damage to the fabric is very minor.

Measure the depth of the tread with a depth gauge, and replace the tire if tread depth is less than the service limit.

Table 40 Tire Tread Depth

	Standard	Service Limit
Front	8 mm	2 mm
Rear	7.5 mm	2 mm

RIM, SPOKES

The rim of each wheel is made of steel and is connected to the hub by the spokes. A rim band around the outside center of the rim keeps the tube from coming into direct contact with the rim and the spoke nipples.

The spokes are connected to the hub at a tangent and in different directions so that different spokes bear the brunt of the load during different conditions. With the spokes doing specialized work, the strength of the spokes can be used more effectively.

When the motorcycle is at rest (Fig. 271 A), the spokes above the axle are stretched and tense, while the

spokes below the axle are slightly loose and do not provide support. During acceleration (B), the spokes running to the hub in the direction of rotation are stretched, while during deceleration or braking (C), the spokes running to the hub opposite to the direction of rotation are the ones that are stretched. In both cases B and C, the spokes that are not stretched (omitted from the diagram) are slightly loose and do not provide support. A damping action to the shock from the ground is achieved by flexing of the spokes since they are arranged in this cross pattern instead of running straight from the hub to the rim.

Since the spokes must withstand this repeated stress, it is important to take sufficient care that the spokes are not allowed to loosen and that they are tightened evenly. Loose or unevenly tightened spokes cause the rim to warp, increase the possibility of spoke breakage, and hasten nipple and spoke metal fatigue.

Table 41 Rim, Spoke Size

	Rim	Spokes	
		Inner	Outer
Front	1.60 x 19	#10 x 185.5 x 99°	#10 x 185.0 x 89°
Rear	1.60A x 18W	#10 x 171.5 x 100°	#10 x 171.0 x 88°


NOTE: The rim size in Table 41 is outer width by diameter, both in inches. The "W" means that the rim is welded. The spoke size is diameter number by length in millimeters. The two numbers for diameter size mean that each spoke has two diameters. To make the spoke more resistant to breakage, the diameter is greater near the hub.

Spoke breakage

If any spoke breaks, it should be replaced immediately. A missing spoke places an additional load on the other spokes, which will eventually cause other spokes to break.

Periodically check that all the spokes are tightened evenly since they stretch a certain amount during use. Standard spoke tightening torque is 0.2 ~ 0.4 kg-m (17 ~ 35 in-lbs). Over or under tightening may cause breakage.


Spoke Force

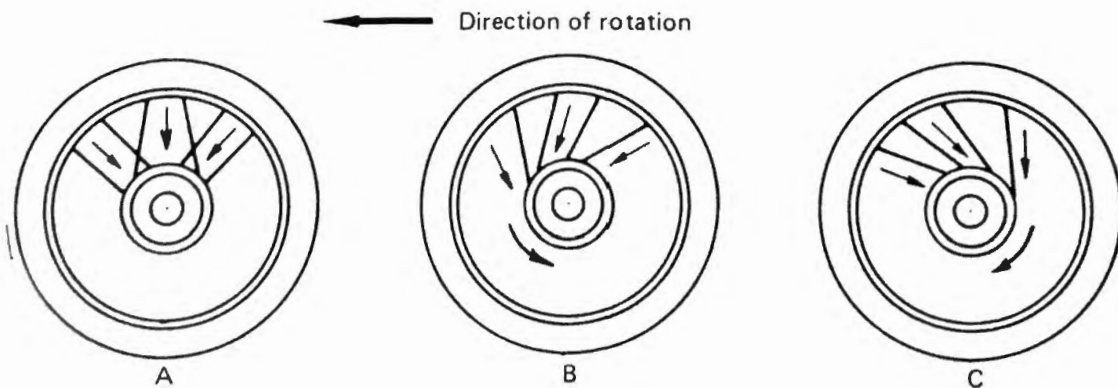

90 MAINTENANCE

Rim runout

Set a dial gauge to the side of the rim, and rotate the wheel to measure axial runout. The difference between the highest and lowest dial reading is the amount of runout.

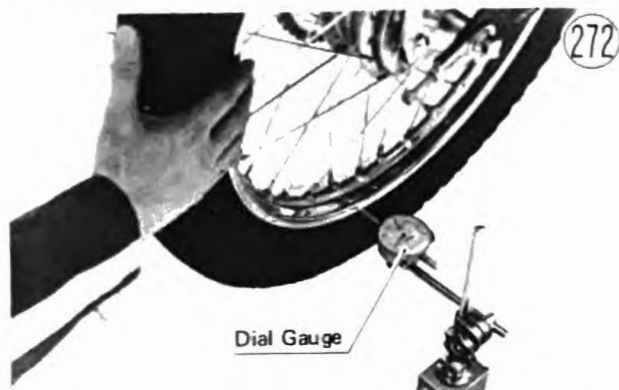

Set the dial gauge to the inner circumference of the rim, and rotate the wheel to measure radial runout. The difference between the highest and lowest dial reading is the amount of runout.

Table 42 Rim Runout

	Standard	Service Limit
Axial	under 0.5 mm	2.0 mm
Radial	under 0.8 mm	2.0 mm

A certain amount of rim warp (runout) can be corrected by recentering the rim, that is, loosening some spokes and tightening others to change the position of different parts of the rim. If the rim is badly bent, however, it should be replaced.

AXLE

A bent axle causes vibration, poor handling and instability.

To measure axle runout, remove the axle, place it in V blocks that are 100 mm (4.0 in) apart, and set a dial gauge to the axle at a point halfway between the blocks. Turn the axle to measure the runout. The amount of runout is the amount of dial variation.

If runout exceeds the service limit, straighten the axle or replace it. If the axle cannot be straightened to within tolerance, or if runout exceeds 0.7 mm replace the axle.

Table 44 Wheel Bearings

	Front Wheel		Rear Wheel		
	Hub Left	Hub Right	Coupling	Hub Left	Hub Right
Bearing	6300Z	6200	6203	6201	6301Z
Grease Seal	92050-002	92050-003	92052-003	—	—

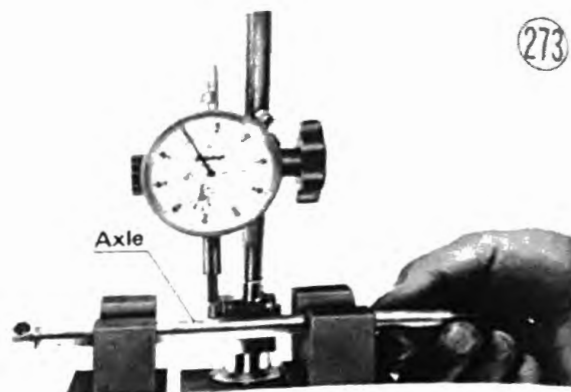



Table 43 Axle Runout/100 mm

	Standard	Service Limit
Front	0.1 mm	0.2 mm
Rear	0.05 mm	0.2 mm

GREASE SEALS, WHEEL BEARINGS

A grease seal is fitted in both sides of the front hub and in the left side of the rear hub. Each grease seal is a rubber ring equipped with a steel band on its outer circumference. The grease seal inner rib is held against the axle collar by a wire spring band. Since the grease seal not only seals in the wheel bearing grease but also keeps dirt and moisture from entering the hub, the use of a damaged grease seal will cause the wheel bearing to wear quickly. A grease seal is also fitted in the front brake panel to keep speedometer gear and bearing grease from getting on the brake linings. Also, this grease seal prevents the minute particles from the brake linings from reaching the speedometer gear and wheel bearings.

A wheel bearing is fitted in both sides of each hub. Since worn wheel bearings will cause play in the wheel, vibration, and instability, they should be cleaned, inspected, and greased periodically.

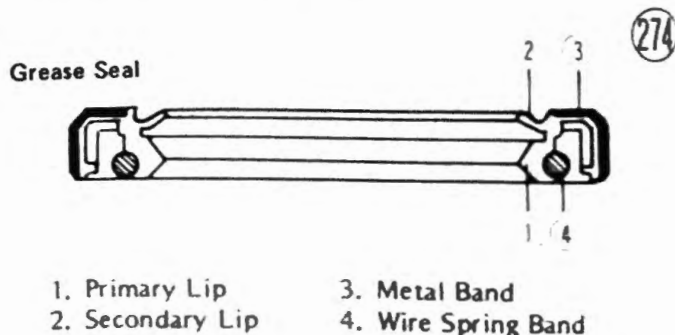

Inspection and lubrication

If the grease seals are examined without removing the seals themselves, look for discoloration (indicating the rubber has deteriorated), hardening, damage to the internal ribbing, or other damage. If the seal or internal ribbing has hardened, the clearance between the seal and the axle sleeve will not be taken up, which will allow dirt and moisture to enter and reach the bearing. Whenever in doubt as to its condition and whenever the seal is removed for greasing the bearing, the seal should be replaced. The seals are generally damaged upon removal.

Since the wheel bearings are made to extremely close tolerances, the clearance cannot normally be measured. Wash the bearing with a high flash-point solvent, dry it (do not spin it while it is dry), and oil it. Spin it by hand to check its condition. If it is noisy, does not spin smoothly, or has any rough spots, it must be replaced. If the same bearing is to be used again, re-wash it with a high flash-point solvent, dry it, and pack it with good quality bearing grease before installation. Turn the bearing around by hand a few times to make sure the grease is distributed uniformly inside the bearing, and wipe the old grease out of the hub before bearing installation. Clean and grease the wheel bearings and the front hub gear box (speedometer gear) in accordance with the periodic maintenance chart (Pg. 118).

BRAKES

The front and rear wheels are both equipped with a leading-trailing type of drum brake. "Leading-trailing" means that one of the two brake shoes leads, expanding against the drum in the direction of drum rotation, and the other shoe trails, expanding in the direction opposite drum rotation.

On both the front and rear brakes, the force applied by the rider upon braking is transmitted into the interior of the brake by a camshaft. The force applied at the brake lever or pedal is transmitted by a cable to the cam lever which then turns the camshaft. When the camshaft rotates, the large portion of the cam is forced between the two brake shoes. Since the shoes are only held together away from the drum by springs, the cam, overcoming spring tension, pushes the shoes outward against the drum. The leading shoe rotates in direction "A", and the trailing shoe in direction "B" as shown in the diagram.


The friction between the linings and the drum, which decelerates the motorcycle, gradually wears down the brake shoe linings. On the outside of each brake panel is a brake lining wear indicator which, as the brake is applied, moves in direct proportion to the distance that the brake shoe linings move to reach the brake drum. As the linings wear down, the lining surface has farther to travel before reaching the drum. The indicator accordingly travels farther until it finally reaches the end of usable range when the lining wear has reached the service limit.

Due to wear of the brake drum, shoe linings, and cam, periodic brake adjustment is required. However, if the brake parts become worn, adjustment will not be sufficient to ensure safe brake operation. Not only can worn parts crack (drum) and otherwise suffer damage

as they lose their braking effectiveness, but, if the cam wears to the point where it turns nearly horizontal when the brake is fully applied, the brake may lock in the operated position, or brake lever or pedal return may be very sluggish. All brake parts should be checked for wear in accordance with the periodic maintenance chart (Pg. 118).

Brake


275

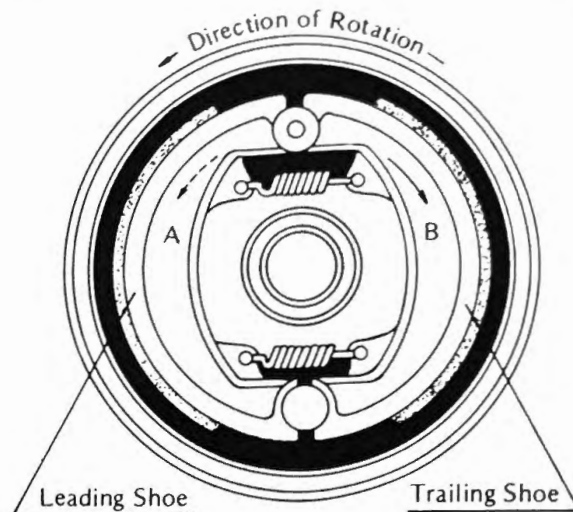

Brake drum wear

It is extremely difficult to find a place that will turn a drum for a motorcycle with the rim spoked up.

Measure the inside diameter of the brake drum with calipers to determine wear. Since uneven drum wear will decrease braking effectiveness, take measurements at a minimum of two places. If the drum is worn unevenly or if it is scored, turn the drum down on a brake drum lathe or replace the hub. (Do not turn it down to the service limit, and do not turn it down if any diameter measurement exceeds the service limit.) If any diameter measurement exceeds the service limit, replace the hub.

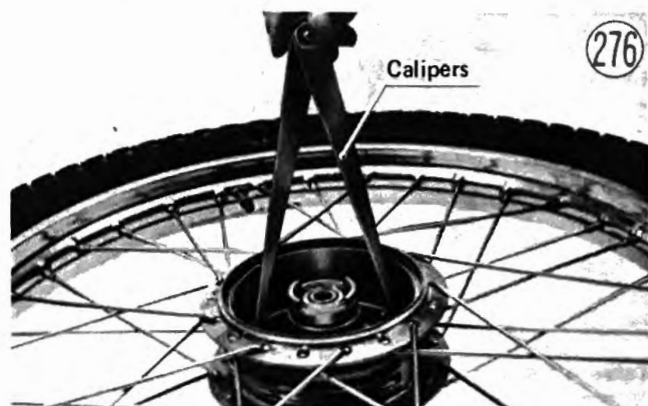

276

Table 45 Brake Drum Inside Diameter

	Standard	Service Limit
Front	110.000~110.087 mm	110.75 mm
Rear	110.000~110.087 mm	110.75 mm

92 MAINTENANCE

Brake shoe lining wear

Check the thickness of the brake linings, and replace both shoes as a set if the thickness at any point is less than the service limit. If the thickness of the brake linings is sufficient, check the linings for uneven wear, and file or sand down any high spots. With a wire brush, remove any foreign particles imbedded in the lining surface. Wash off any oil or grease with a high flash-point solvent. In case the linings are damaged or the surface cannot be restored by sanding and cleaning, the shoes must be replaced.

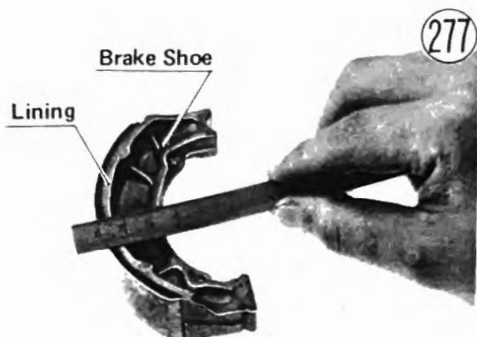


Table 46 Brake Thickness

	Standard	Service Limit
Front	3 mm	1.5 mm
Rear	3 mm	1.5 mm

Brake shoe spring tension

If the brake springs become stretched, they will not pull the shoes back away from the drum after the brake lever or pedal is released, causing the shoes to drag on the drum. Remove the springs, and check their free length with vernier calipers. If either is stretched beyond the service limit, replace both springs.



Table 47 Brake Spring Free Length

Standard	Service Limit
30.8~31.2 mm	34 mm

Camshaft, shaft hole wear

Excessive shaft to hole clearance will increase camshaft play and reduce braking efficiency.

Measure the shaft diameter with a micrometer, and replace it if it is worn down to less than the service limit.

Measure the inside diameter of the camshaft hole, and replace the brake panel if the hole is worn past the service limit.



Table 48 Brake Camshaft, Hole Diameter

	Standard	Service Limit
Camshaft	11.957 ~ 11.984 mm	11.83 mm
Shaft Hole	12.000 ~ 12.027 mm	12.18 mm

Lubrication

Every time that the brakes are disassembled, and in accordance with the periodic maintenance chart (Pg.118), wipe out the old grease, and re-grease the brake pivot points. Apply grease to the brake shoe anchor pins, spring ends, and cam surface of the camshaft, and fill the camshaft groove with grease. Do not get any grease on the brake shoe linings, and wipe off any excess grease so that it will not get on the linings or drum after brake assembly.






Brake Shoe Anchor Pin

282

DRIVE CHAIN

The drive chain used to transmit the engine power to the rear wheel is the Enuma EK428-G (110 link) chain. This chain is provided with a master link to facilitate removal and replacement. To minimize any chance of the master link dislodging, the link is fitted with the closed end of the "U" clip pointed in the direction of chain rotation. See Fig. 283.

Direction of Chain Rotation

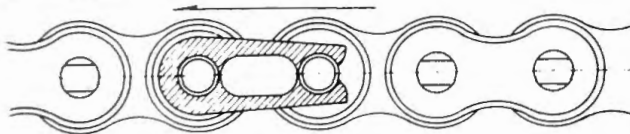


283

Chain construction is shown in Fig. 285. Most chain wear occurs between the pins and bushings, and between the bushings and rollers, rather than on the outside of the rollers. This wear causes the chain to lengthen. If the chain is left unadjusted, the lengthening will lead to noise, excessive wear, breakage, and disengagement from the sprockets. If the chain is allowed to wear too much, the distance from roller to roller is so much greater than the distance between each tooth of the sprocket that the wear rapidly accelerates.

The rate of wear can be greatly reduced, however, by frequent and adequate lubrication, especially between the side plates of the links so that oil can reach the pins and bushings inside the rollers.

Drive Chain

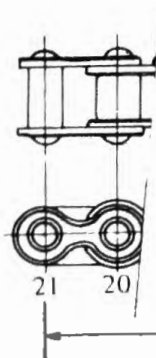


Wear

When the chain has worn so much that it is more than 2 % longer than when new, it is no longer safe for use and should be replaced. Whenever the chain is replaced, inspect both the engine and rear sprockets, and replace them if necessary. Overworn sprockets will cause a new chain to wear quickly.

Since it is impractical to measure the entire length of the chain, determine the degree of wear by measuring a 20 link length of the chain. Stretch the chain taut either using the chain adjusters, or by hanging a 10 kg (20 lb) weight on the chain. Measure the length of 20 links on a straight part of the chain from pin center of the 1st pin to pin center of the 21st pin. Since the chain may wear unevenly, take measurements at several places. If any measurement exceeds the service limit, replace the chain.

NOTE: The drive system was designed for use with the Enuma EK428-G (110 link) chain, and for maximum strength and safety only this chain must be used for replacement.

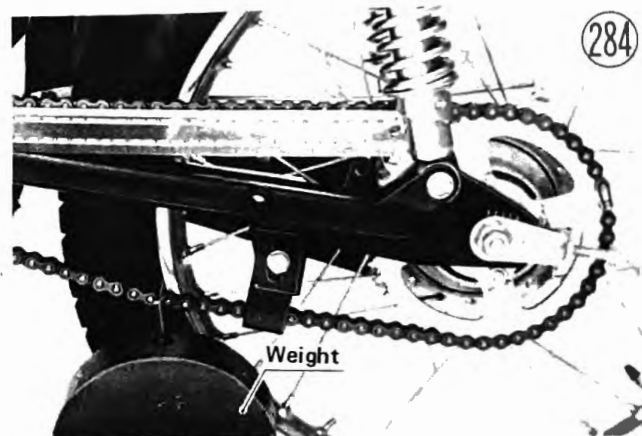

284


Table 49 Drive Chain Length

	Standard	Service Limit
20-link Length	254 mm	259 mm

Lubrication


In order for the chain to function safely and wear slowly, it should be properly lubricated in accordance with the periodic maintenance chart (Pg. 118). Lubrication is also necessary after riding through rain or on wet roads, or any time that the chain appears dry.

285

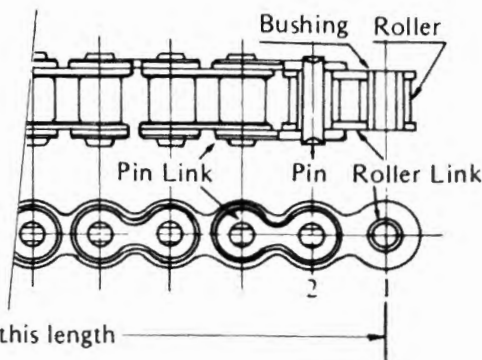

94 MAINTENANCE

Anytime that the motorcycle including the chain has been washed, the chain should be adequately lubricated immediately in order to avoid rust.

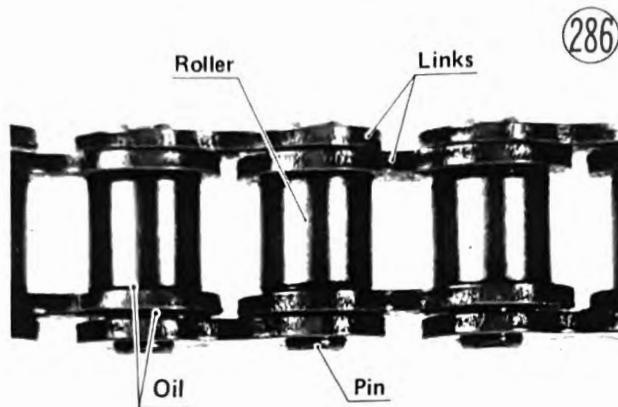

The chain should be lubricated with a lubricant which will both prevent the exterior from rusting and also absorb shock and reduce friction in the interior of the chain. An effective, good quality lubricant specially formulated for chains is best for regular chain lubrication. If a special lubricant is not available, a heavy oil such as SAE 90 is preferable over a lighter oil because it will stay on the chain longer and provide better lubrication. Apply the oil to the sides of the rollers and between the side plates of the links so that oil will penetrate to the pins and bushings where most wear takes place. Wipe off any excess oil.

Dirt will cling to the oil and act as an abrasive, accelerating chain wear. Whenever the chain becomes particularly dirty, it must be cleaned in kerosene and then soaked in a heavy oil. Shake the chain while it is in the oil so that oil will penetrate to the inside of the rollers. Better oil penetration to the interior is achieved by boiling the chain in grease, but care must be taken not to overheat the grease.

SPROCKETS


There are two sprockets for the drive chain. A forward sprocket, or engine sprocket, is mounted on the end of the output shaft and is used to drive the chain. A rear sprocket is connected to the rear wheel hub and is driven by the chain to turn the rear wheel.

Sprockets that have become excessively worn cause noise with the chain and greatly accelerate chain and sprocket wear. The sprockets should be checked for wear any time that the chain is replaced. A warped rear sprocket destroys chain alignment such that the chain may break or jump from the sprockets when traveling at high speed. The sprockets should be checked for wear and the rear sprocket for warp any time that the chain is replaced.

Sprocket wear

Visually inspect the sprocket teeth. If they are worn as illustrated, replace the sprocket.

Engine Sprocket Teeth

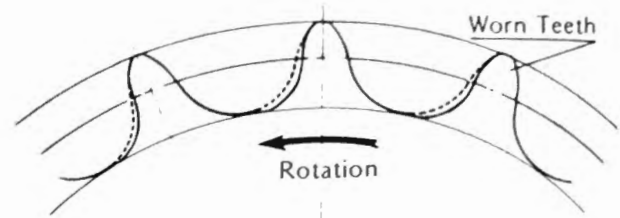

NOTE: If a sprocket requires replacement, the chain is probably worn also. Upon replacing a sprocket, inspect the chain.

Measure the diameter of the sprocket at the base of the teeth. If the sprocket is worn down to less than the service limit, replace the sprocket.



Table 50 Sprocket Diameter

	Standard	Service Limit
Engine	52.05~52.25 mm	51.7 mm
Rear	161.15~161.45 mm	159 mm

Rear sprocket warp

Elevate the rear wheel so that it will turn freely, and set a dial gauge against the rear sprocket near the teeth as shown in Fig. 289. Rotate the rear wheel. This difference between the highest and lowest dial gauge readings is the amount of runout (warp).

If the runout exceeds the service limit, replace the rear sprocket.



Table 51 Rear Sprocket Warp

Standard	Service Limit
under 0,3 mm	0,5 mm

REAR WHEEL COUPLING

The rear wheel coupling connects the rear sprocket to the wheel. The forces that are transmitted between the rear sprocket and the rear hub are transmitted through rubber shock dampers in the coupling to absorb some of the shock resulting from sudden changes in torque due to acceleration or braking.


Damper inspection

Remove the rear wheel coupling (Pg. 47), and inspect the rubber dampers.

Replace the dampers if any appear damaged or deteriorated.



Steering Stem

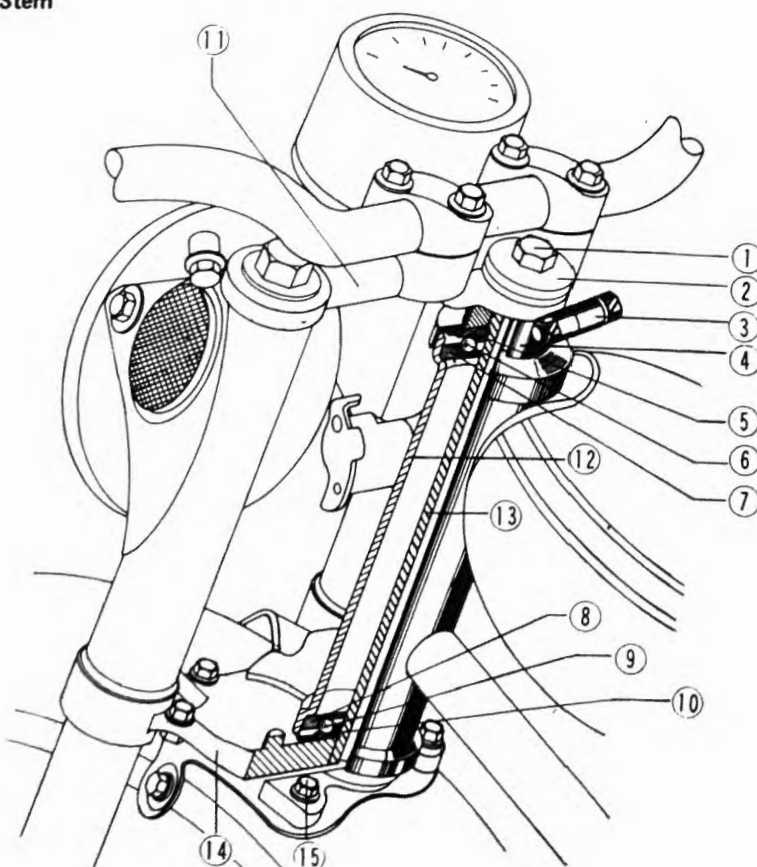

1. Stem Head Bolt
2. Washer
3. Stem Head Clamp
4. Stem Lock Nut
5. Inner Race
6. Bearing Balls
7. Outer Race
8. Outer Race
9. Bearing Balls
10. Inner Race
11. Stem Head
12. Head Pipe
13. Steering Stem Shaft
14. Steering Stem Base
15. Bolt

STEERING STEM

The steering stem supports the handlebar, front fork shock absorbers, and front fender, and turns inside the frame head pipe. Ball bearings in the upper and lower ends of the head pipe enable the steering stem to turn smoothly and easily.

The steering stem itself does not wear, but it may become bent. If it becomes bent, the steering will be stiff, and the bearings may become damaged.

The steering stem will require periodic adjustment as it becomes loose due to bearing wear. Overtightening during adjustment, however, will make the steering stiff and cause accelerated bearing wear. Lack of proper lubrication will also bring about the same results.

From overtightening or from a heavy shock to the steering stem, the bearing race surfaces may become dented. Damaged bearing races will cause the handlebar to jerk or catch when turned.

Table 52 Bearing Specifications

	Size	Number
Upper	$\frac{3}{16}$ "	23
Lower	$\frac{3}{16}$ "	23

Steering stem warp

Examine the steering stem, and replace it if it is bent.

Bearing wear, damage

Wipe the bearings clean of grease and dirt, and examine the races and balls. If the balls or races are worn, or if either race is dented, replace both races and all the balls for that bearing as a set.


291

96 MAINTENANCE

Bearing lubrication

In accordance with the periodic maintenance chart (Pg. 118), and whenever the steering stem is disassembled, the steering stem bearings should be relubricated.

Wipe all the old grease off the races and balls, washing them in a high flash-point solvent if necessary. Replace the bearing parts if they show wear or damage. Apply grease liberally to the upper and lower races, and stick the bearing balls in place with grease.

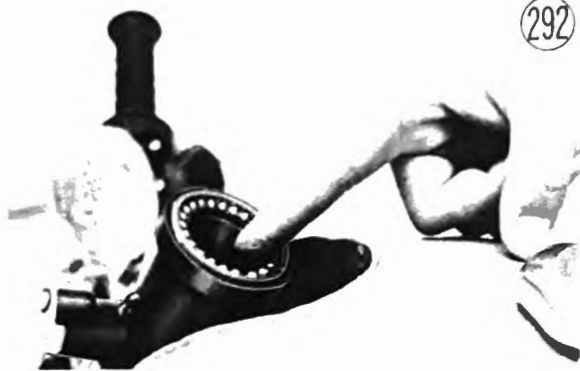

Grease seal deterioration, damage


Inspect the grease seal for any signs of deterioration or damage, and replace it if necessary.

Replace the grease seal with a new one whenever it has been removed. The grease seal comes off whenever the lower bearing inner race is removed.


FRONT FORK

The front fork consists of two shock absorbers connected to the frame head pipe by the steering stem and the stem head bracket. It accomplishes shock damping through spring action, air compressing in the inner tube, and resistance to the flow of the oil forced into the inner tube by tube movement.

Front Spring Force

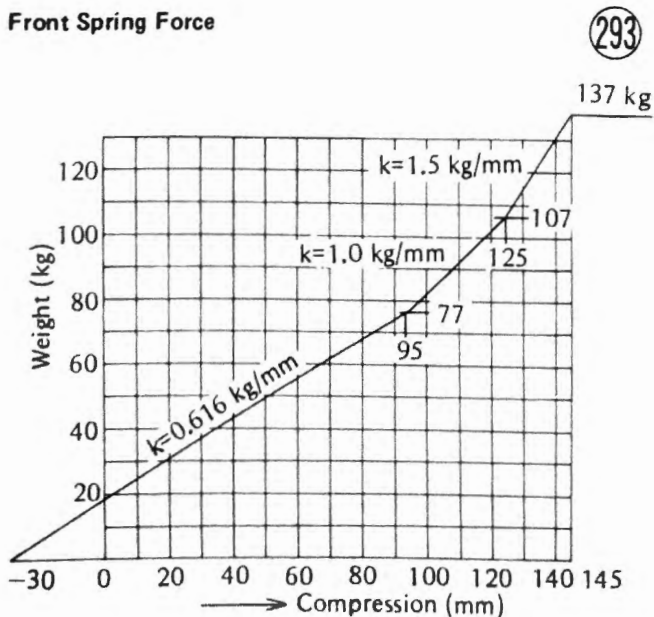

Front Fork

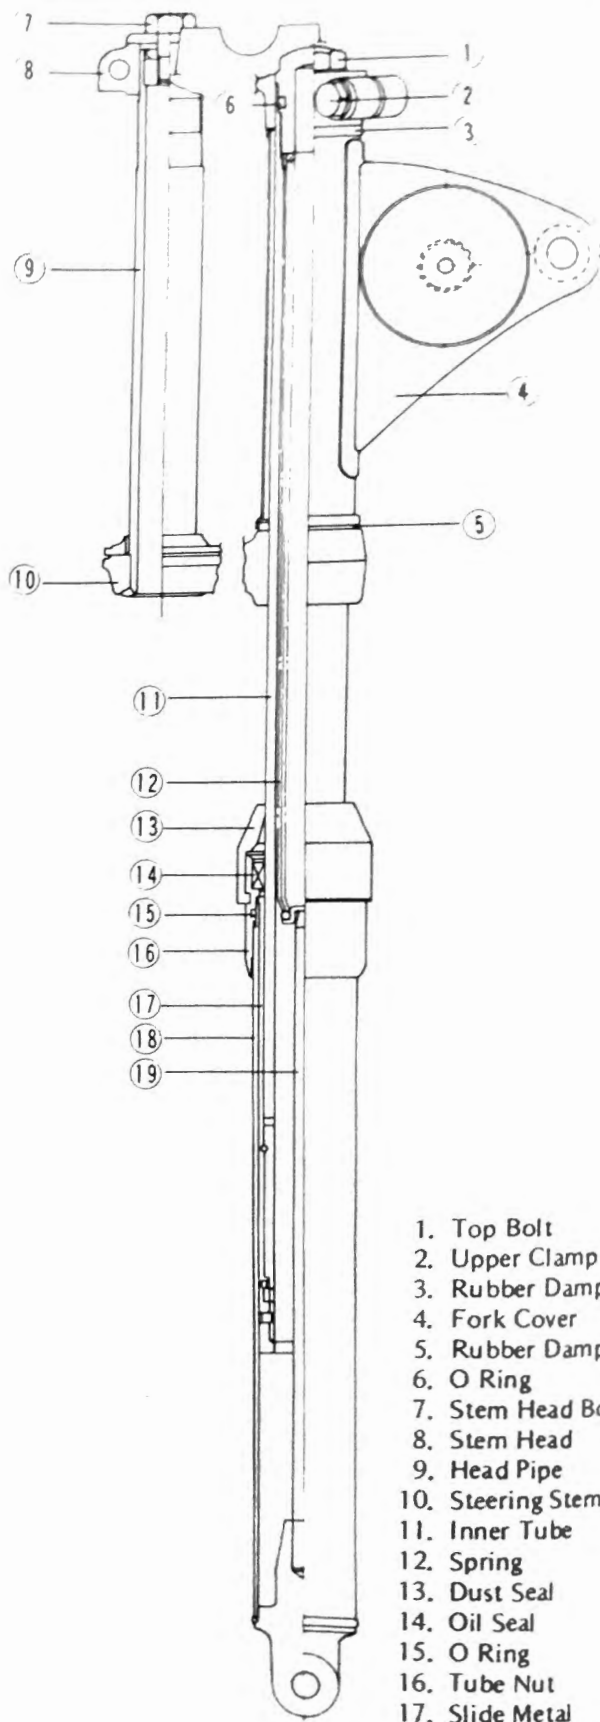

1. Top Bolt
2. Upper Clamp Bolt
3. Rubber Damper
4. Fork Cover
5. Rubber Damper
6. O Ring
7. Stem Head Bolt
8. Stem Head
9. Head Pipe
10. Steering Stem Base
11. Inner Tube
12. Spring
13. Dust Seal
14. Oil Seal
15. O Ring
16. Tube Nut
17. Slide Metal
18. Outer Tube
19. Spring Holder

Each shock absorber is a telescopic tube including an inner tube, outer tube, spring and oil seal. The spring supplies most of the damping during the compression stroke.

A nut containing an oil seal is screwed onto the outer tube.

Oil is prevented from leaking out by the oil seal, which is fitted at the upper end of the tube nut. A dust seal on the outside of the tube keeps dirt and water from entering and damaging the oil seal and tube surface.

Compression stroke

Whenever a load is placed on the front fork and whenever the front wheel receives a shock, the inner tube moves down inside the outer tube, compressing both the spring and the air in the inner tube. At the same time, low pressure (suction) is created in an enlarging chamber (upper chamber) formed between the inner tube and outer tube, and draws in oil from a diminishing chamber (lower chamber) formed in the bottom of the outer tube through the inner tube orifice. Near the end of the compression stroke, the clearance between the lower end of the inner tube and the tapered out bottom of the outer tube approaches zero. The resulting resistance to the flow of oil through this small space slows the downward movement, finally forming an oil lock to finish the compression stroke.

Extension stroke

Following the compression stroke is the extension stroke, in which the inner tube is pushed back out by the compressed spring. As the tubes move apart, the chamber between the outer and inner tubes grows smaller, forcing the oil through the inner tube orifice. This small hole resists the oil flow into the inner tube, damping fork extension.

Near the end of the extension stroke, the orifice slides into the slide metal, which forms an oil lock finishing the extension stroke.

Either too much or too little oil in the shock absorbers will adversely affect shock damping. Too much oil or too heavy an oil makes action too stiff; too little oil or too light an oil makes the action soft, decreases damping potential, and may cause noise during fork movement.

Contaminated or deteriorated oil will also affect shock damping, and, in addition, will accelerate internal wear. The fork oil should be changed in accordance with the periodic maintenance chart (Pg. 118), or sooner if the oil appears dirty.

A bent, dented, scored, or the otherwise damaged inner tube will damage the oil seal, causing oil leakage. A badly bent inner tube may cause poor handling.

Fork oil

To check the fork oil level, first place a jack or stand under the engine so that the front wheel is raised off the ground. Remove the top bolt from the inner tube.

Insert a rod down into the tube, and measure the distance from the top of the tube to the oil level. If the oil is below the correct level, add enough oil to bring it up to the proper level, taking care not to overfill.


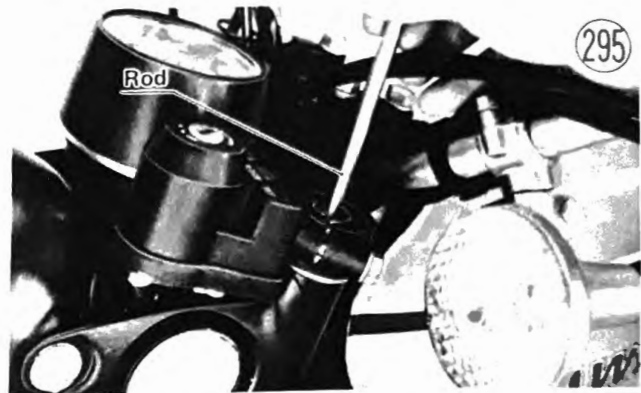


Table 53 Fork Oil

Type	Amount per Side	Oil Level from Top of Inner Tube
SAE 10W	158~166 cc	395 mm

To drain out the old oil, remove the drain screw from the lower end of the outer tube on each side. With the front wheel on the ground, push down on the handlebar a few times to pump out the oil. Replace the drain screws, remove the top bolt from each side, and pour in the specified type and amount of oil. Then replace the top bolts, tightening them with 1.5 ~ 2.0 kg-m (11.0 ~ 14.5 ft-lbs) of torque.

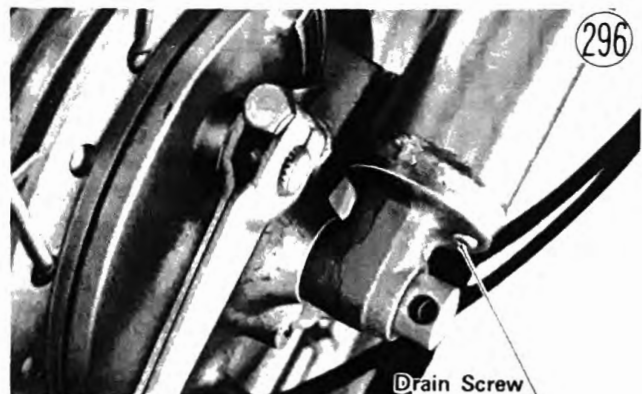


Spring tension

Since the spring becomes shorter as it weakens, check its free length to determine its condition. If the spring of either shock absorber is shorter than the service limit, it must be replaced. If the length of a replacement spring, and that of the remaining spring vary greatly, the remaining spring should also be replaced in order to keep the shock absorbers balanced for motorcycle stability.

98 MAINTENANCE

Compression Stroke


(297)

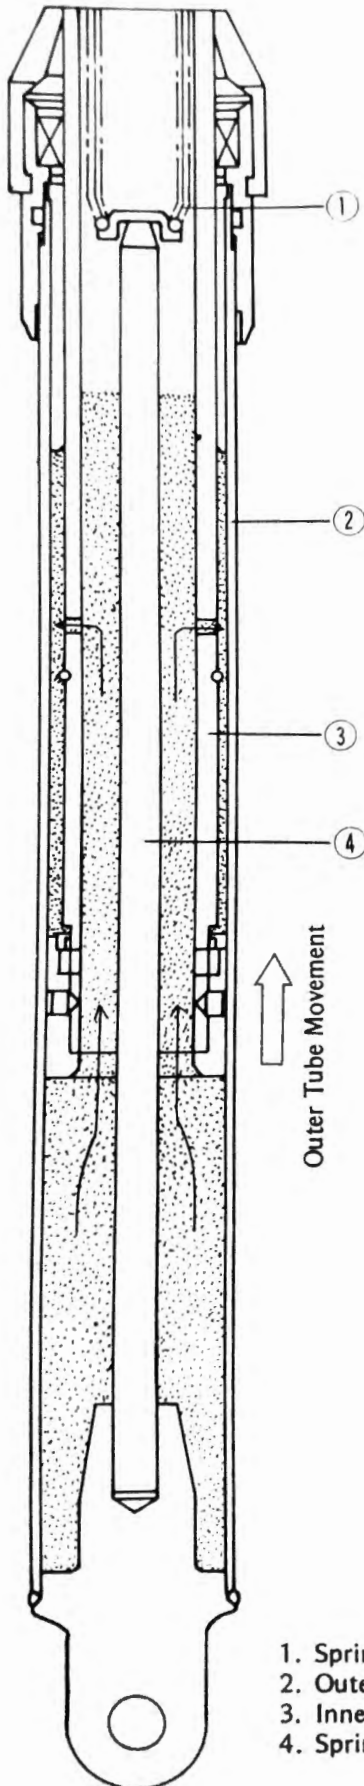

1. Spring
2. Outer Tube
3. Inner Tube
4. Spring Holder

Extension Stroke

(298)

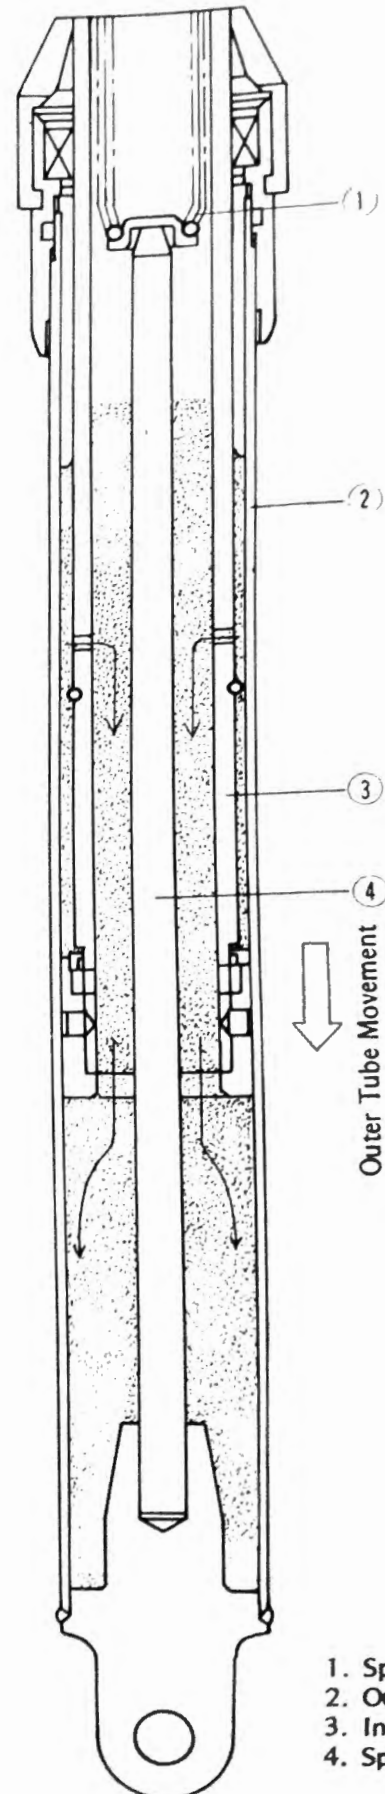

1. Spring
2. Outer Tube
3. Inner Tube
4. Spring Holder

299



Table 54 Fork Spring Free Length

Standard	Service Limit
405 mm	395 mm

Inner tube damage

Visually inspect the inner tube, and repair any damage. If the damage is not repairable, replace the inner tube. Since damage to the inner tube damages the oil seal, replace the oil seal whenever the inner tube is repaired or replaced.


REAR SHOCK ABSORBERS

The rear shock absorbers serve to dampen shock transmitted to the frame and rider from the rear wheel. For this purpose they are connected between the frame and the rear end of the swing arm. Shock absorption is performed by the spring and by the resistance to the flow of oil inside each unit. Shock absorption is further aided by the use of rubber bushings in both the upper and lower shock absorber mountings.

Since the rear shock absorbers are sealed units which cannot be disassembled, only external checks of operation are necessary. With the shocks removed, compress each one and see that the compression stroke is smooth and that there is damping besides spring resistance to compression. When the unit is released, the springs should not suddenly snap it to full length. It should extend smoothly with notable damping. When the shock absorber is operated, there should be no oil leakage. If either shock absorber does not perform all of these operations satisfactorily, or if one unit feels weaker than the other, replace both shock absorbers as a set. If only one unit is replaced and the two are not balanced, motorcycle instability at high speeds may result.

Shock absorber spring force for the 5 different setting is shown in the graph.

Rear Spring Force

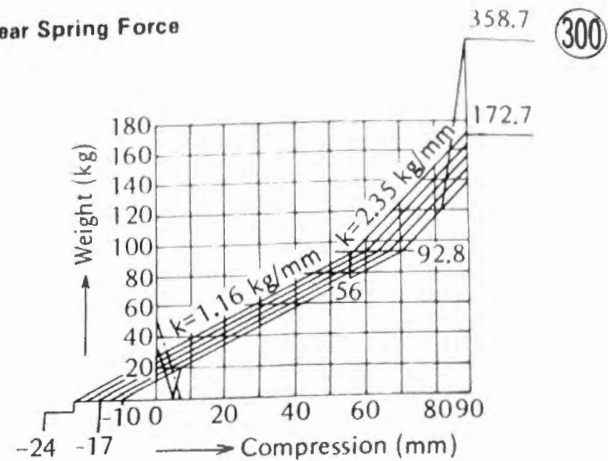

Bushings

Check the rubber bushings, and replace any that are worn, cracked, hardened, or otherwise damaged.

SWING ARM

The swing arm is designed to work with the shock absorbers to dampen the shock to the frame from the rear wheel. The rear of the swing arm is connected to the frame by the rear shock absorbers, while the front end through rubber dampened bushings pivots on a shaft connected to the frame. When the rear wheel receives a shock, the swing arm, pivoting on its shaft, allows the wheel to move up and down in relation to the frame within the limits of the shock absorbers.

Each bushing consists of rubber cemented between steel sleeves. The outer sleeve is press fitted to the swing arm, and the inner sleeve is fitted around the pivot shaft and pressed against the frame. The movement of the swing arm in relation to the frame is permitted by the elasticity of the rubber.

Since the pivoting of the swing arm depends on the bushing rubber, there are no wearing parts requiring lubrication. However, as the rubber deteriorates and loses its resiliency, a resulting looseness between the swing arm and the pivot shaft will adversely affect motorcycle stability.

Bushings

Visually inspect the bushings in the swing arm. If they are deteriorated or damaged, they must be replaced.

Pivot shaft

To measure the pivot shaft runout, set the pivot shaft on V blocks at the ends of the shaft, and set a dial gauge to the shaft halfway between the blocks. Turn the shaft to measure the runout. The amount of runout is the amount of dial variation. If the shaft runout exceeds the service limit, straighten it. If it cannot be straightened, or if the runout exceeds 0.7 mm, replace the shaft.

Table 55 Pivot Shaft Runout

Standard	Service Limit
0.1 mm	0.2 mm



MUFFLER

The muffler reduces exhaust noise and conducts the exhaust gases back away from the rider while keeping power loss to a minimum. If much carbon is built up inside the muffler, exhaust efficiency is reduced, which lowers the engine output power.

To remove built-up carbon, first remove and disassemble the muffler (Pg. 23). Clean the baffle tube

with a wire brush and by striking it gently, or by burning the carbon out. Also, examine the glass wool and remove some of the dirtiest part if it is especially dirty. If it is exceptionally dirty, wash it out in a high flash point solvent of some kind or replace it.


If there is any exhaust leakage where the muffler connects to the cylinder, or if the muffler gasket appears damaged, replace the gasket. If the muffler is badly damaged, dented, cracked or rusted, replace it.

IGNITION SYSTEM

The ignition system shown in Fig. 303, consists of the spark plug (Pg. 109), contact breaker, condenser, ignition coil and ignition magneto coil. The flow of the electrical energy produced in the ignition magneto coil is broken up by the contact breaker and sent as a surge of current or pulse to the ignition coil, which acting as a pulse transformer steps up the voltage so that a spark will jump across the spark plug electrodes. For this system to function properly, all ignition parts must be in good order, the ignition timing correctly set, the ignition and engine stop switches not shorted, all wiring in good condition (no shorts or breaks and no loose or tarnished connections), and the flywheel magnets supplying a satisfactory magnetic field.

When the flywheel rotates, magnetic flux cutting through the ignition magneto coil induces electric

Swing Arm

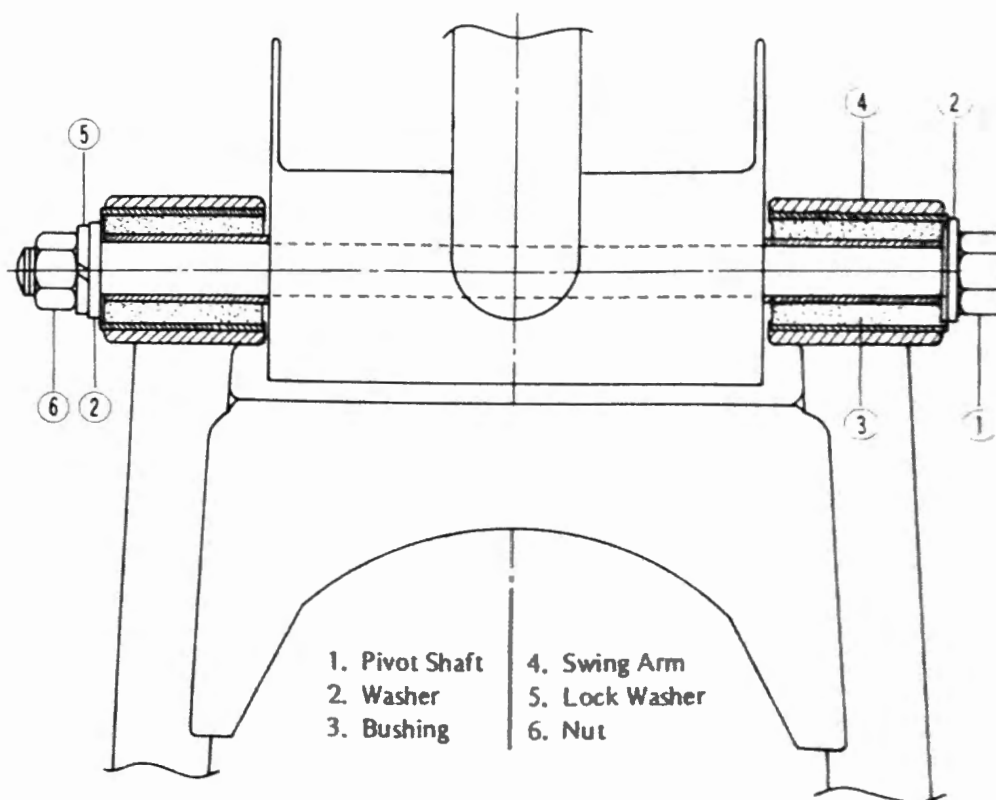

current in the coil. One end of the coil is grounded, while the other end connects both to the ignition coil primary winding and to the contact breaker. When the contact breaker points are closed, the ignition magneto coil current is shorted to the ground. Since the current is shorted to the ground, no appreciable current can flow through the ignition coil primary winding due to the resistance of the winding. However, (assuming correct ignition timing) when the piston reaches a position 23° before top dead center, the contact breaker points open, interrupting the short to the ground and causing the current to flow through the primary winding. Then, as the points close, the current is once again shorted through the points and can no longer flow through the primary winding. This pulse in the primary winding produces a rapid build-up of a magnetic field. The magnetic flux of this field cuts through the secondary winding, inducing current in the winding. The voltage of this current, dependent on the number of turns in the secondary winding and the speed of the rise of primary winding voltage, is much greater than the voltage in the primary winding. It is this high voltage that causes a spark to jump across the spark plug electrodes. Since a greater ratio of secondary winding turns over primary winding turns and a sharper rise of primary winding voltage increases the secondary winding voltage that is produced, a certain ratio of turns in the ignition coil has been chosen and a certain voltage rise sharpness (determined by condenser and breaker point performance) has been designed in the ignition system so that a spark of sufficient but not excessive strength will be produced.


The single phase alternating current that is generated in the ignition magneto coil fluctuates as the flywheel rotates and increases with the rpm. In order to accommodate this current, the ignition system is designed so that, at the flywheel position where ignition takes place, the generated current for both

high and low rpm will be sufficient for good spark plug performance and yet not be excessive. Thus, when the ignition timing is not properly set, not only will there be a loss of power as with the battery ignition system, but also the strength of the current sent to the ignition coil will be inappropriate at certain rpm's. For example, at high rpm if the ignition timing is retarded, the contact breaker points open when the current is too high, resulting in burned points, overheating of the ignition coil, and accelerated spark plug electrode wear. On the other hand, at high rpm if the ignition timing is too far advanced, the contact breaker points open when the current is too low. This current, producing too weak a spark, causes the engine to misfire. Exceptionally retarded timing also results in too weak a spark, causing misfiring and difficult starting.

The contact breaker consists of one fixed and one movable contact point. The movable point is pivoted, and the heel on one end is held against the cam surface on the flywheel hub by a single leaf spring. As the flywheel rotates, the heel rides on the cam surface, and, as the flywheel reaches the position where ignition takes place, the high spot on the cam surface pushes out on the heel, which opens the points. As the heel wears down, the point gap narrows, retarding ignition timing. Consequently, the ignition timing must be periodically adjusted to compensate for heel wear.

The condenser is connected in parallel across the contact breaker points and serves to prevent current from arcing across the points as they open. Arcing across the points would reduce the sharpness of the voltage rise in the primary winding, thus weakening the spark plug spark, and also damage the surface of the points. When the points are first opening, the condenser absorbs a certain amount of current, giving the points time to open far enough apart to where current will not arc across. However, if the condenser shorts, the current will simply be grounded through the

Ignition Circuit

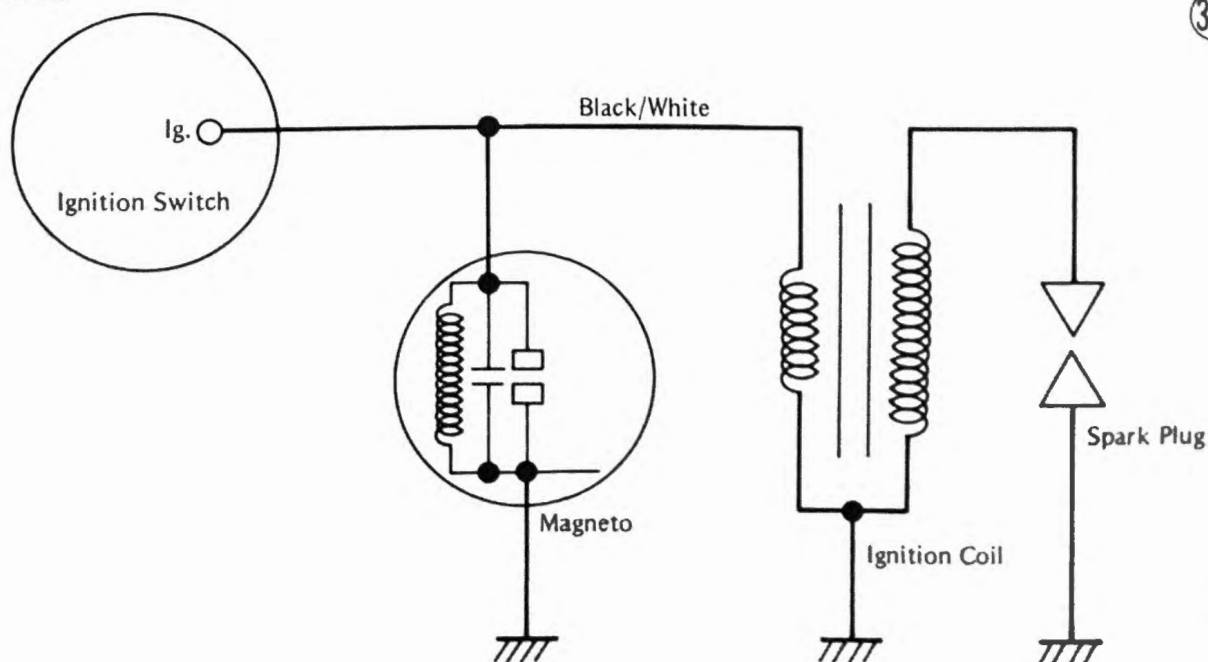


102 MAINTENANCE

condenser whenever the points open. When the condenser is otherwise defective, the current will not be prevented from arcing across the points at the time of ignition, resulting in poor spark plug performance and burned and pitted points.

Ignition Magneto Coil Current

304

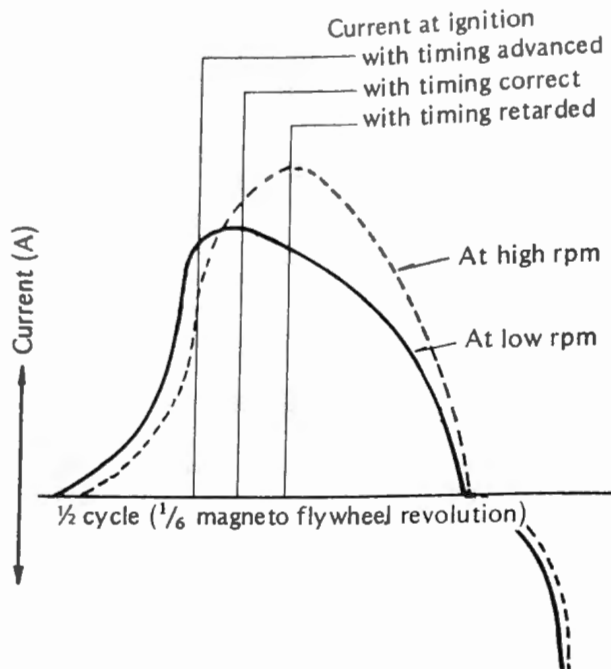

Contact Breaker

When the points become dirty, pitted, or burned, or if the spring weakens, the points will not make the contact necessary to produce a good spark, resulting in unstable idling, misfiring, or the engine not running at all. In accordance with the periodic maintenance chart (Pg. 118), inspect the contact breaker, and repair or replace it if necessary.



305

Clean the points with clean paper or cloth, or using an oil-free solvent. A business card soaked in trichloroethylene can be used to remove traces of oil. To repair light damage, use sandpaper or an oilstone. If the points are badly worn down or damaged, or if the spring is weak, replace the contact breaker.

In accordance with the periodic maintenance chart (Pg. 118), or whenever the contact breaker is inspected or replaced, apply a small amount of grease to the felt to lubricate the cam in order to minimize wear of the contact breaker heel. Be careful not to apply so much grease that it can drop off or be thrown onto the points, which will cause the points to foul and burn.


Condenser

The condenser can usually be considered to be defective if a long spark is seen arcing across the points as they open or if the points are burned or pitted for no apparent reason. Replace the condenser any time it appears defective and whenever the contact breaker is replaced.

NOTE: For checking with a capacitor tester, condenser specifications are: $0.25 \pm 0.03 \mu\text{fd}$, 1,000 WVDC.

Condenser Test

306

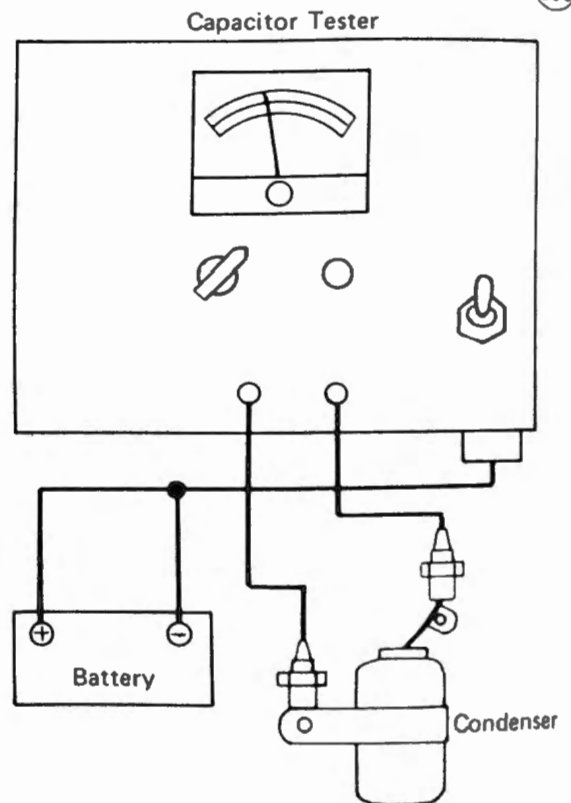


Ignition coil

The most accurate test for determining the condition of the ignition coil is made with the Kawasaki electro-tester. The ignition coil must be connected to the tester in accordance with the tester directions and should produce at least a 5 mm spark. Since an electro-tester other than the Kawasaki electro-tester may produce a different arcing distance, the Kawasaki electro-tester is recommended for a reliable result.

If an electro-tester is not available, the coil can be checked for a broken or a badly shorted winding with an ohmmeter. However, an ohmmeter cannot detect

Ignition Coil Test

307

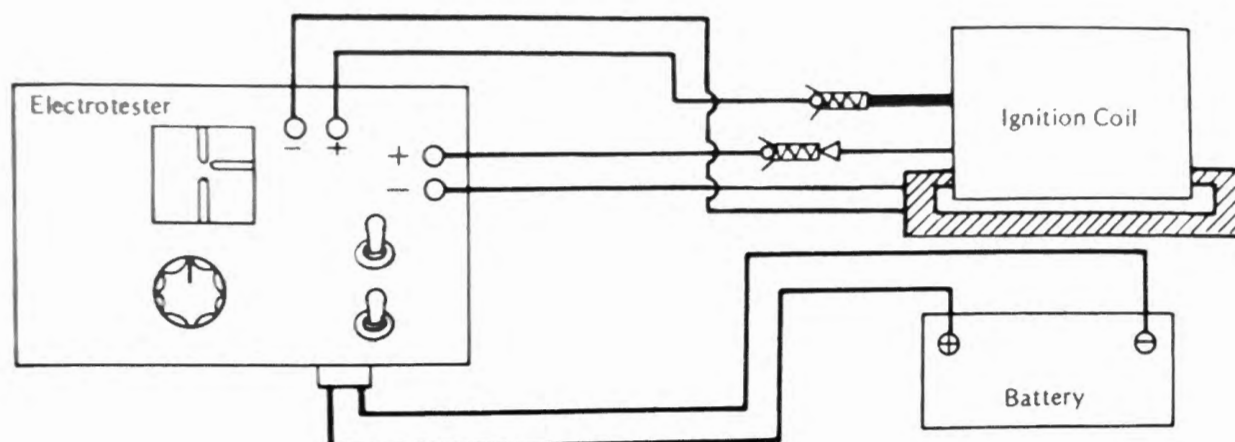

layer shorts and shorts resulting from insulation breakdown under high voltage.

To measure the primary winding resistance, set the ohmmeter to the $R \times 1$ range, and connect one ohmmeter lead to ground and the other to the black lead from the ignition coil. The resistance should be $1.7 \sim 2.5 \Omega$. To measure the secondary winding resistance, set the ohmmeter to the $R \times 100$ range, and connect one ohmmeter lead to ground and the other to the spark plug lead. The resistance should be about $8 \sim 12 \text{ k}\Omega$.

If the coil does not produce an adequate spark, or if either the primary or secondary winding does not have the correct resistance, replace the ignition coil.

Ignition magneto coil

If the spark is weak or non-existent after the spark plug, ignition coil, points and condenser are found to be all functioning properly, the wiring all in good condition and properly connected, and the ignition timing correctly adjusted, the cause may be a short or open in the ignition magneto coil or a loss of magnetism in the flywheel magnets.

- Rotate the magneto flywheel until the points open, and pull out the magneto harness plug from its socket near the fuel tap.
- Set an ohmmeter to the $R \times 1$ range, and measure the resistance between ground and the magneto black lead. The proper value is between $2.0 \sim 3.1 \Omega$.



If the resistance in this test is found to be less than the proper value, there is a short in the ignition magneto coil. No reading indicates an open. In either case, replace the ignition magneto coil. If, however, the coil checks out good, the cause is probably a loss of magnetism in the flywheel, necessitating flywheel replacement.

CHARGING SYSTEM

The charging system consists of a magneto and regulator/rectifier.

The magneto, basically a single phase alternating current (AC) generator, is divided into a moving part called the flywheel, and stationary part called the stator located inside the flywheel. The flywheel has 6 permanent magnets evenly spaced in its circumference to generate an alternating current with 3 cycles per flywheel revolution. The stator consists of an aluminum plate on which are mounted a ignition magneto coil and lighting/charging coils. The lighting/charging coils generate the current required by the electrical circuits.




104 MAINTENANCE

The generated current is a single phase alternating current (AC), which is changed to direct current (DC) and controlled by a solid-state regulator/rectifier to supply an even voltage to the circuit components. The ignition magneto coil produces the electric current to fire the spark plug.

Since the solid-state regulator/rectifier contains no contacts or other moving parts, it does not wear out and never needs to be adjusted. It is therefore manufactured as a sealed unit, and must be replaced as a unit should it become defective. Internal regulator/rectifier operation is explained here only to aid the technician in troubleshooting and in understanding test procedures. Fig. 310 shows the basic circuit of the regulator/rectifier that is referred to in the following explanation.

Regulator/Rectifier Circuit

310

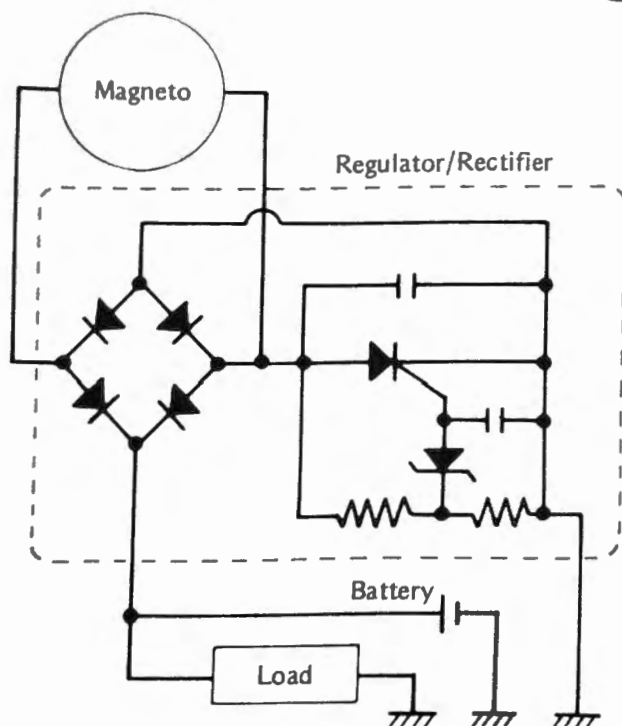


The regulator/rectifier can be separated internally into two parts; one is the rectifier used to change the alternating current (AC) from the magneto to direct current (DC) for battery charging and lighting, and the other is the regulator which keeps the magneto output voltage at the specified value. The main components of the regulator/rectifier unit are diodes, a thyristor (Th) or Silicon Controlled Rectifier (SCR) as it is also called, and a zener diode (ZD). The thyristor (Th) and zener diode (ZD) function as follows:

1. Diode

A current of electrons can flow only from the - to the + side of the diode. However, a defective diode will either conduct in both directions (a short) or not conduct at all (an open). If any of the diodes is shorted or open, the voltage from the regulator/rectifier will be below normal, and the battery may not be charged adequately.

Diode Current Flow

311

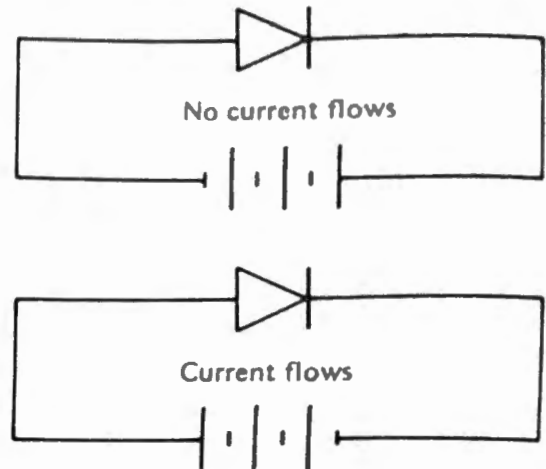

2. Thyristor


A current of electrons can flow from the cathode to the anode but not in the reverse direction. The thyristor differs from a diode in two respects: (a) even though a voltage of the correct polarity (negative to cathode) may be applied, the thyristor will not conduct until a signal is received at the gate input lead; (b) once started, it will not stop conducting (even if the gate lead signal voltage stops) until the anode to cathode voltage is removed or reversed.

3. Zener diode


As in a normal diode, current will flow easily from the cathode to anode, and will not usually flow in the opposite direction. Unlike a normal diode, however, the zener diode will "break down", or conduct in the reverse direction, if enough voltage is applied in the reverse direction. When this voltage is lowered or removed, the diode will stop conducting and return to its normal state. The voltage at which the diode begins reverse conduction, is called the breakdown voltage, and is set at the desired level when the diode is manufactured. This property of the zener diode makes it very useful in voltage regulator circuits.

Thyristor

312

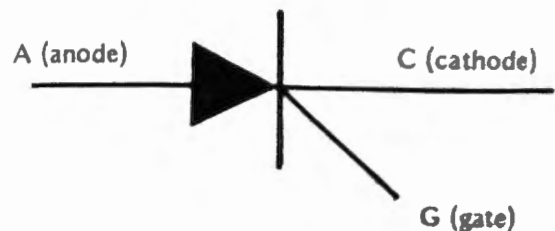

Zener Diode

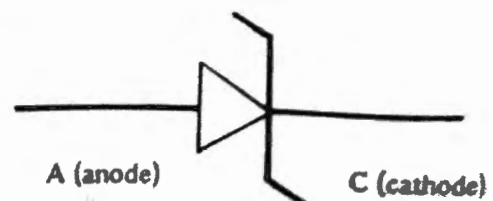

In the regulator/rectifier, the zener diode is connected to the gate lead of the thyristor to signal the thyristor when charging voltage becomes too high. Detailed circuit operation is as follows:

The alternating current from the magneto is changed into direct current in the rectifier, and then it flows through the black lead to ground. From ground it goes up through the battery to charge it, and through the white/red lead and the rectifier up to the magneto. When battery charging voltage gets too high, however, the zener diode conducts and signals the thyristor to start conducting. Then, instead of current going through the battery and overcharging it, it flows from ground up through the thyristor and then back to the magneto.

There are a number of important precautions that are musts when servicing the charging system. Cautions that are applied to the individual parts are listed below. Failure to observe these rules can result in serious system damage. Learn and observe all the rules below.

CAUTION When handling the regulator/rectifier, observe the following to avoid damage to the regulator/rectifier:

1. Do not reverse the battery lead connections. This will burn out the zener diode.
2. Do not disconnect the regulator/rectifier leads with the ignition switch on.
3. Do not disconnect the battery leads while the engine is running.
4. For the regulator/rectifier to function properly, the battery must be charged to near capacity. If the battery is badly discharged, charge it before installing it in the motorcycle.

When handling the magneto flywheel:

5. Do not allow the flywheel to suffer sharp impacts such as striking it with a hammer or letting it fall on a hard surface. Such a shock to the flywheel can cause the magnets to lose their magnetism.

Charging system inspection

Initial inspection:

If there are any problem indications in the charging system, give the system a quick initial inspection or

check before starting a series of time consuming tests, or worse yet, removing parts for repair or replacement. Such a check will often turn up the source of the trouble.

Make sure all connectors in the circuit are clean and tight. Examine wires for signs of burning, fraying, etc. Poor wires and bad connections will affect electrical system operation. Check the magneto and regulator/rectifier for evidence of physical damage.

A worn out or badly sulphated battery will produce numerous problems that cannot be corrected until the battery is replaced. **ALWAYS CHECK BATTERY CONDITION BEFORE CONDEMNING OTHER PARTS OF THE SYSTEM. A FULLY CHARGED BATTERY IS A MUST FOR CONDUCTING ACCURATE CHARGING SYSTEM TESTS.**

Charging system malfunctions can be traced to either the battery, magneto, regulator/rectifier, or the wiring. Troubles may involve one unit or in some cases, all units. Never replace a defective unit without determining what **CAUSED** the failure. If the failure was brought on by some other unit or units, they too must be repaired or replaced, or the new replacement will soon fail.

Operational inspection of charging system:

- Warm up the engine to obtain actual magneto operating conditions.
- Swing the seat open, check that the ignition switch is turned off, and connect the multimeter as shown in Table 56 to test the regulator/rectifier output voltage.



Table 56 Regulator Output Voltage


Meter	Connections	Reading
10V DC	Meter (+) → White/Red Meter (−) → Ground	Battery Voltage ~ 8 V

Table 57 Regulator Output Amperage

Meter Range	Connections	Load Difference	Amperage Difference
20V DC	Meter (+) → White/Red Meter (−) → White	40W	about 5.3A



Regulator Output Voltage Measurement

314

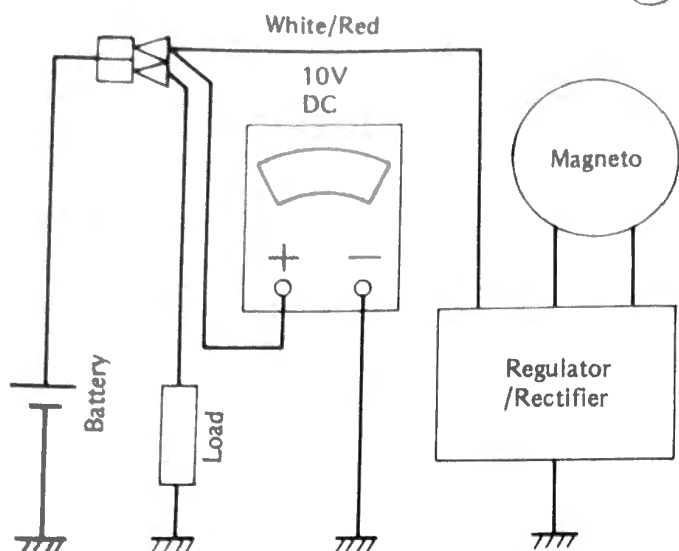

- Start the engine, and note the voltage readings at various engine speeds with the high beam headlight turned on and then turned off. (This is done disconnecting or connecting the white/blue lead from the fuse box.) The readings should show near the battery voltage when the engine speed is low, and, as the engine speed rises, the readings should also rise. But they must be kept under the specified voltage.
- Turn off the ignition switch to stop the engine, and disconnect the multimeter.
- Disconnect the white/red regulator/rectifier lead from the white battery + lead, and connect the multimeter as shown in Table 57. This puts the ammeter in series with the regulator/rectifier output lead so that output amperage can be measured.

Regulator Output Amperage Measurement

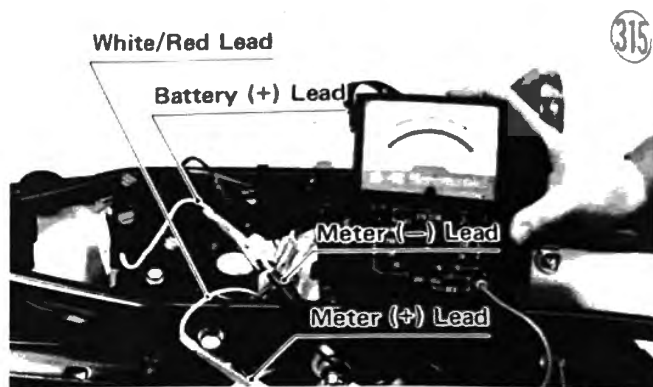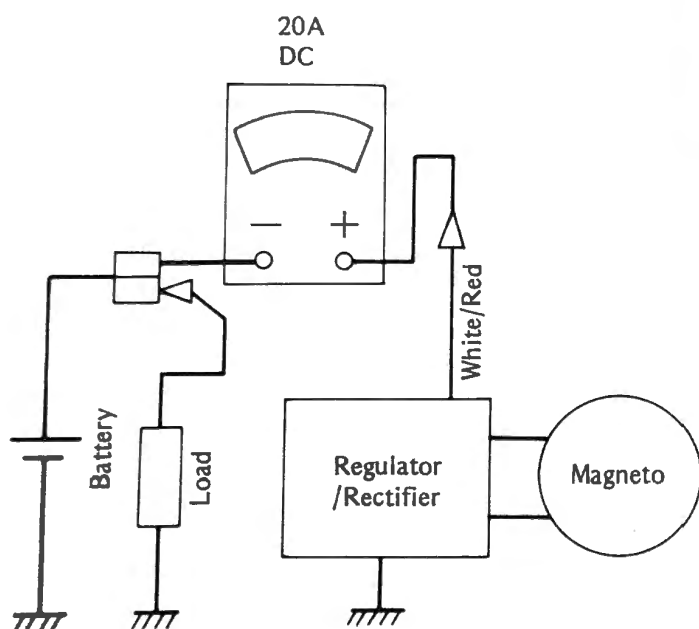

- Start the engine, and run the engine at some speed more than 4,000 rpm. Note the meter readings when the headlight is turned off and then turned on. Compute the difference between the two values. The difference should show the value shown in Table 57.
- NOTE:** A good regulator/rectifier permits only needed current to reach the battery and other electrical loads. In some cases the amperage difference may differ from the values in Table 57, but the regulator/rectifier is considered to work properly if the amperage output increases as load increases, and vice versa.

If the regulator/rectifier output voltages are kept between the values given in Table 56, and the output

Table 58 Magneto Output Voltage

Meter Range	Connections	Reading @4,000 rpm
250V AC	One meter lead → One yellow lead The other meter lead → The other yellow lead	about 25V

Table 59 Lighting/Charging Coil

Meter Range	Connections	Reading
x 1 Ω	One meter lead → One yellow lead The other meter lead → The other yellow lead	0.15 ~ 0.22 Ω

amperage changes corresponding to the load difference, the charging system is considered to work normally.

If the output voltage is much higher than the values specified in the table, the regulator/rectifier is defective or the brown regulator/rectifier lead is loose or open.

If the output amperage does not change when the electrical load changes, the regulator/rectifier is defective or the magneto output is insufficient for the loads. Check the magneto output and lighting/charging coil resistance to determine which part is defective.

Magneto inspection:

There are three types of magneto failures: short, open (wire burned out), or loss in flywheel magnetism. A short or open in the lighting/charging coil will result in either a low output, or no output at all. A loss in flywheel magnetism, which may be caused by dropping or hitting the flywheel, leaving it near an electromagnetics field, or just by aging, will result in low output.

●Disconnect the 2-pin connector (yellow leads) from the magneto.

●Connect the multimeter as shown in Table 58 to check the magneto output voltage with no electrical loads.

●Start the engine, run it at the rpm given in Table 58, and note the voltage reading.

If the output voltage shows the value in Table 58, the magneto operates properly and the regulator/rectifier is damaged. A much lower reading than that given in the table indicates that the magneto is defective. Check the lighting/charging coil resistance as follows:

●Stop the engine, set the multimeter to the $\times 1 \Omega$ range, and measure for continuity between the yellow leads. If there is more resistance than shown in Table 59, or no meter reading, the lighting/charging has an open and must be replaced.

●Using the highest resistance range of the multimeter, measure the resistance between each of the yellow leads and chassis ground. Any meter reading less than infinity (∞) indicates a short, necessitating lighting/charging coil replacement.

If the lighting/charging windings have normal resistance, but the voltage check showed the magneto to be defective; then the flywheel magnets have probably weakened, and the flywheel must be replaced.

too slowly for the magneto to supply sufficient power. However, the battery does not backup the ignition, which is not connected to the battery.

With proper care, the battery can be expected to last a few years, but it may be completely ruined long before that if it is mistreated. Following a few simple rules will greatly extend the life of the battery.

1. When the level of the electrolyte in the battery is low, add only distilled water to each cell until the level is at the upper level line marked on the outside of the battery. Ordinary tap water is not a substitute for distilled water and will shorten the life of the battery. Distilled water comes in a sealed, non-metallic container; any other water is not distilled water.
2. Never add sulphuric acid solution to the battery. This will make the electrolyte solution too strong and will ruin the battery within a very short time.
3. Avoid quick-charging the battery. A quick-charge will damage the battery plates.
4. Never let a good battery stand for more than 30 days without giving it a supplemental charge, and never let a discharged battery stand without charging it. If a battery stands for any length of time, it slowly self-discharges. Once it is discharged, the plates sulphate (turn white), and the battery will no longer take a charge.
5. Keep the battery well charged during cold weather so that the electrolyte does not freeze and crack open the battery. The more discharged the battery becomes, the more easily it freezes.
6. Always keep the battery vent hose free of obstruction, and make sure it does not get pinched or crimped shut. If battery gases cannot escape from this hose, they will explode the battery.
7. DO NOT INSTALL THE BATTERY BACKWARDS. The negative side is grounded.

Electrolyte

The electrolyte is dilute sulphuric acid. The standard specific gravity of the electrolyte used in warm climates in a fully charged battery is 1.260 at 20°C (68°F). In particularly cold regions a solution with a standard specific gravity of 1.280 is used. The water in this solution changes to a gaseous mixture due to chemical action in the battery and escapes, which concentrates the acid in a charged battery. Consequently, when the level of the electrolyte becomes low, only distilled water should be added. If sulphuric acid is added, the solution will become too strong for proper chemical action and will damage the plates. Metal from the damaged plates collects in the bottom of the battery, and this sediment will eventually cause an internal short circuit.


BATTERY

The battery is a back-up source of power to operate the electrical equipment whenever the engine is turning

108 MAINTENANCE

The specific gravity of the electrolyte is measured with a hydrometer and is the most accurate indication of the condition of the battery. When using the hydrometer, read the electrolyte level at the bottom of the meniscus (curved surface of the fluid). Fig. 317 shows the relationship between the specific gravity of the solution at 20°C (68°F) and the percentage of battery charge. Since specific gravity varies with

Hydrometer

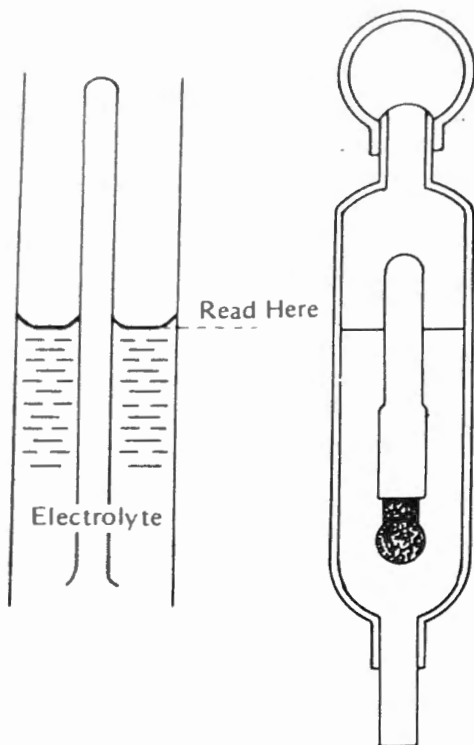

316

temperature, and since the temperature of the solution being checked is likely to be other than 20°C (68°F), the formula given below should be used to compute what the specific gravity would be if the temperature were 20°C (68°F). When the temperature goes up, the specific gravity goes down, and vice versa.

Celsius

$$S_{20} = S_t + [0.0007 (t-20)]$$

Fahrenheit

$$S_{68} = S_t + [0.0004 (t-68)]$$

S_t = specific gravity at the present temperature

S_{20} = specific gravity at 20°C


S_{68} = specific gravity at 68°F

t = present temperature of solution

Generally speaking, a battery should be charged if a specific gravity reading shows it to be discharged to 50% or less of full charge.

Specific Gravity/Battery Charge Relationship

317

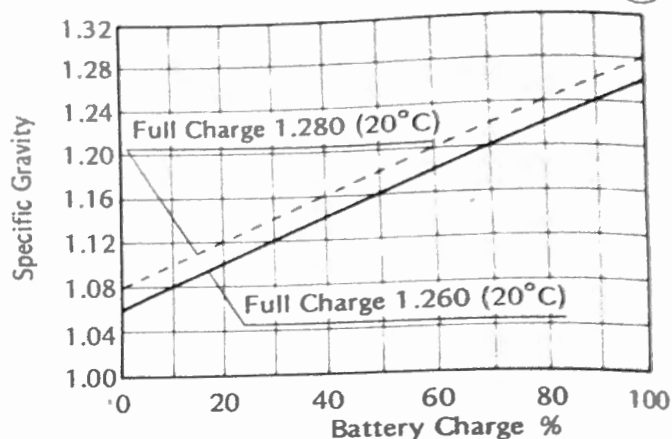

Initial charge

New batteries for Kawasaki motorcycles are dry charged and can be used directly after adding the electrolyte. However, the effect of the dry charge deteriorates somewhat during storage, especially if any air has entered the battery from imperfect sealing. Therefore, it is best to give the battery an initial charge before using it in order to ensure long battery life.

CAUTION: Because the battery gives off an explosive gas mixture of hydrogen and oxygen, keep any sparks or open flame away from the battery during charging.

- Pour a 1.260 (specific gravity at 20°C or 68°F) sulphuric acid solution into each cell of the battery up to the upper line.
- Let the battery stand for 30 minutes, adding more acid if the level drops during this time.

NOTES: 1. If the temperature of the solution is over 30°C (85°F), cool the solution before pouring into it the battery.

2. After pouring the acid into the battery, start charging the battery within 12 hours.

- Leaving the caps off the cells, connect the battery to a charger, set the charging rate at $\frac{1}{10}$ the battery capacity, and charge it for 10 hours. For example, if the battery is rated at 6AH, the charging rate would be 0.6 ampere. If a constant voltage charger is used, the voltage must be adjusted periodically to keep the current at a constant value.

CAUTION: If the temperature of the electrolyte rises above 45°C (115°F) during charging, reduce the charging rate to bring down the temperature, and increase the charging time proportionately.

- After charging, check the electrolyte level in each cell. If the level has dropped, add distilled water to bring it back up to the upper line.
- Check the results of charging by measuring the specific gravity of each cell and by measuring battery voltage. Battery voltage of a 6 volt battery directly after the completion of charging should be 7.5 to 8.0 volts.

Table 60 Battery Troubleshooting Guide

	Good Battery	Suspect Battery	Action
Plates	(+) chocolate color (-) gray	white (sulphated); + plates broken or corroded	Replace
Sediment	none, or small amount	sediment up to plates, causing short	Replace
Voltage	above 6 volts	below 6 volts	Test charge
Electrolyte level	above plates	below top of plates	Fill and Test charge
Specific gravity	above 1.200 in all cells; no two cells more than 0.020 different.	below 1.100, or difference of more than 0.020 between two cells	Test charge

Ordinary charge

CAUTION: Because the battery gives off an explosive gas mixture of hydrogen and oxygen, keep any sparks or open flame away from the battery during charging.

• Clean off the battery using a solution of baking soda and water. Make especially sure that the terminals are clean.

• If the electrolyte level is low in any cell, fill to over the lower line but not up to the upper line since the level rises during charging. Figure the charging rate to be between $\frac{1}{10}$ and $\frac{3}{10}$ of battery capacity. For example, the maximum charging rate for a 6AH battery would be $\frac{3}{10} \times 6$ which equals 1.8 amperes.

CAUTION: Charging the battery at a rate higher than specified above could ruin the battery. Charging at a higher rate causes excess heat, which can warp the plates and cause internal shorting. Higher than normal charging rates also cause the plates to shed active material. Deposits will accumulate, and can cause internal shorting.

• Measure the specific gravity of the electrolyte, and use the graph, Fig. 356, to determine the percentage of discharge. Multiply the capacity of the battery by the percentage of discharge to find the amount of discharge in ampere-hours. Use this figure in the formula below to compute charging time.

$$\text{Charging time (hours)} = \frac{\text{amount of discharge (AH)}}{\text{charging current (A)}} \times 1.2 \sim 1.5$$

• Remove the caps from all the cells, and begin charging the battery at the rate just calculated. If a constant voltage charger is used, the voltage will have to be adjusted periodically to maintain charging current at a constant value.

CAUTION: If the temperature of the electrolyte rises above 45°C (115°F) during charging, reduce the charging rate to bring down the temperature, and increase charging time proportionately.

• After charging, check the electrolyte level in each cell. If the level has dropped, add distilled water to bring it back up to the upper line.

• Check charging results by measuring the specific gravity of each cell and by measuring battery voltage. Battery voltage of a 6 volt battery directly after the

completion of charging should be 7.5 to 8.0 volts, and the specific gravity of electrolyte more than 1.220. If the voltage is lower than this, the battery is not completely charged or can no longer take a full charge. If the specific gravity of any one cell is lower than 1.220, there may be damaged.

Test charging

When the battery is suspected of being defective, first inspect the points noted in the Table 55. The battery can be tested by charging it with an ordinary charge. If it will take a charge so that the voltage and specific gravity come up to normal, it may be considered good except in the following cases:

★ If the voltage suddenly jumps to over 7.0 volts just after the start of charging, the plates are probably sulphated. A good battery will rise to 6 volts immediately and then gradually go up to 6.3 ~ 6.5 volts in about 30 to 60 minutes after charging is started.

★ If one cell produces no gas or has a very low specific gravity, it is probably shorted.

★ If there does not appear to be enough sediment to short the plates, but one cell has a low specific gravity after the battery is fully charged, the trouble may be just that there is insufficient acid in that cell. In this case only, sulphuric acid solution may be added to correct the specific gravity.

★ If a fully charged battery not in use loses its charge after 2 to 7 days, or if the specific gravity drops markedly, the battery is defective. The self-discharge rate of a good battery is only about 1% per day.


SPARK PLUG

The spark plug ignites the fuel/air mixture in the combustion chamber. To do this effectively and at the proper time, the correct spark plug must be used, and the spark plug must be kept clean and adjusted.

Tests have shown the NGK B8ES, set to a 0.7 ~ 0.8 mm gap to be the best plug for general use.

Spark Plug

318

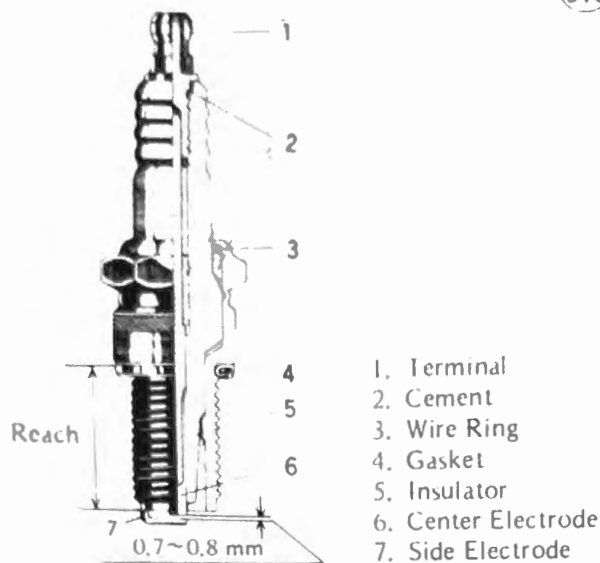

If a plug of the wrong heat range is used, the electrodes may not hot enough to keep all the carbon burned off, but cool enough to keep from damaging the engine and the plug itself — about 400~800°C (750~1,450°F).

CAUTION The carbon on the electrodes conducts electricity, and can short the center electrode to ground by either coating the ceramic insulator or bridging across the gap. Such a short will prevent an effective spark. Carbon build-up on the plug can also cause other troubles. It can heat up red-hot and cause preignition and knocking, which may eventually burn a hole in the top of the piston. The heat range of the spark plug functions like a thermostat for the engine. Using the wrong type of spark plug can make the engine run too hot (resulting in engine damage) or too cold (with poor performance, misfiring, and stalling). The standard plug has been selected to match the normal usage of this motorcycle in combined street and highway riding.

IGNITION SWITCH

The ignition switch has three positions: off, on, and on. In the off position the ignition lead is grounded, preventing the engine from running since current from the ignition magneto coil shorts to ground instead of going to the ignition coil, and the key can be removed from the switch. In the on position the ignition lead is disconnected from ground so that the engine can be started. A lead from the magneto is connected to the regulator/rectifier to charge the battery, and a lead from the battery is connected to the horn, turn signals, brake

light, neutral indicator light circuits, tail light circuit, and headlight circuit. When the key is in the on position, it cannot be removed from the ignition switch.

Testing the switch

Table 61 shows the internal connections of the ignition switch for each switch position. To check the switch, disconnect the lead plug from the switch and use an ohmmeter to verify that there is continuity (zero ohms) between all the connections that are listed in the table for each switch position, and there is no continuity between the leads that are not connected. If the switch has an open or short, it can be disassembled for repair. The contact surfaces may be cleaned, but no internal parts are available for replacement. If any parts are not repairable, the switch must be replaced as a unit.



319

HEADLIGHT CIRCUIT

The headlight circuit is shown in Fig. 320. When the ignition switch is turned to the on position, the headlight circuit is completed, turning on the headlight and speedometer light. The dimmer switch is used to select high or low beam. When the headlight is on high beam, the high beam indicator light also is lit.


Headlight trouble

If the headlight does not light, check to see if the bulb has burned out. If the bulb has burned out, the sealed beam unit must be replaced. If the bulb is good, check the dimmer switch. Table 62 shows the connections in the dimmer switch for both high and low beam. Disconnect the leads to the dimmer switch, and use an ohmmeter to see that only the connections shown in the table have continuity (zero ohms). If the switch has an open or a short, it can be disassembled for repair. The contact surfaces may be cleaned, but

Table 61 Ignition Switch Connections

LEAD	Ignition	Earth	Battery 1	Horn	Battery 2	Headlight	Tail Light
COLOR	Bk/W	Bk/Y	White	Brown	W/Bl	Red	R/W
OFF	●	●					
ON			●	●	●	●	●
ON			●	●	●	●	●

Headlight Circuit

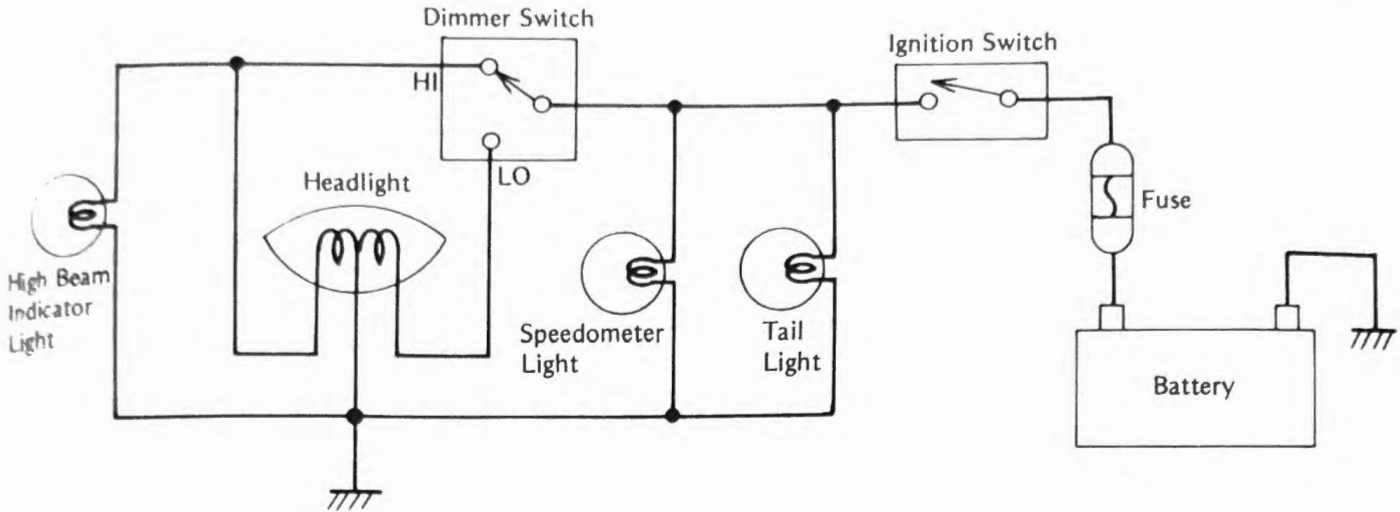

no internal parts are available for replacement. If any parts are not repairable, the switch must be replaced as a unit. However, if the dimmer switch is good, check the ignition switch, the wiring, and the magneto.



Table 62 Dimmer Switch Connections

Color	R/Y	Red	R/Bk
High Beam		●	●
Low Beam	●	●	

If the headlight lights but does not light brightly, the trouble may be that the headlight is of the improper wattage or that the magneto is not putting out sufficient current. However, the trouble may be also caused by a short or a component drawing too much current in some other part of the electrical system.

BRAKE, TAIL LIGHT CIRCUIT

The brake and tail light circuit is shown in Fig. 322. The same bulb is used for both the brake and tail lights, but the bulb has a separate filament for each light. Each filament is controlled by a separate part of the brake and tail light circuit. When the ignition switch is turned to the on position, the brake light goes on whenever the circuit is closed by either the front or rear brake light switch. The tail light is lit whenever the ignition switch is turned to the on position.

The front brake light switch, mounted on the front brake lever body is actuated when pressed by the front brake lever. The rear brake light switch is actuated when pulled on by the rear brake pedal. Both switches are a sealed plunger type of switch, which cannot be disassembled and must be replaced as a unit if defective. The front brake light switch does not require any adjustment, but the rear switch must be adjusted by changing its position higher or lower in the mounting bracket so that the brake light goes on after a certain amount of brake pedal travel when the brake pedal is applied (Pg. 16).


Brake light trouble

If the ignition switch is in the on position and the brake light does not go on when either the front or rear brake is applied, first push the horn button and flip the turn signal switch to see if the fuse, ignition switch, or battery may be defective. If the turn signals and horn work, check for a burned out brake light filament. If the bulb is good, the trouble is either the wiring or the brake light switches.

To check the front brake light switch, first disconnect from under the fuel tank the brown and the blue/red switch leads. Connect an ohmmeter to the switch leads, and pull the front brake

Brake Light Circuit

322

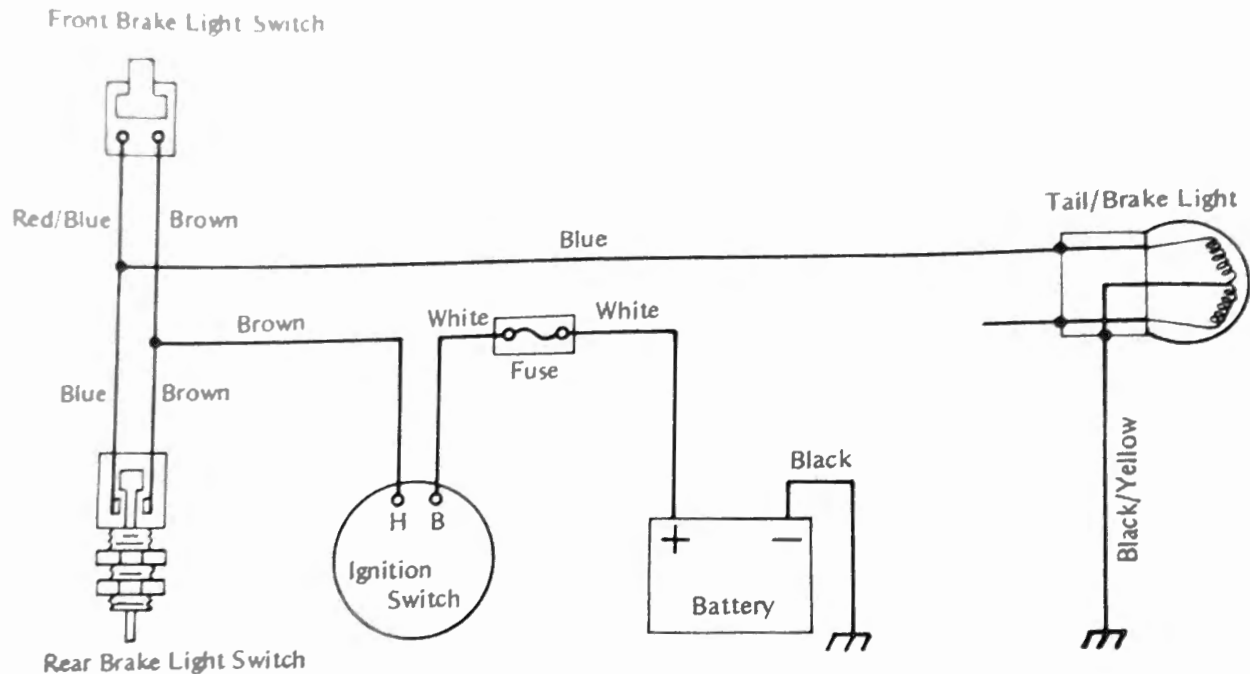

lever. The ohmmeter should read zero ohms. If it does not, replace the switch. If the switch checks out good but the brake light does not light, check the wiring.



To check the rear brake light switch, disconnect from under the fuel tank the brown and the blue/red switch leads. Connect an ohmmeter to the switch leads, and pull the switch plunger. The ohmmeter should read zero ohms. If it does not, replace the switch.

*Tail light trouble*

If the tail light does not go on when the ignition switch is turned to the on position, the filament is probably burned out. However, if the bulb is good, check the wiring, ignition switch, fuse and battery.


TURN SIGNALS

A wiring diagram of the turn signal circuit is shown in Fig. 325. When the ignition switch is in the on position and the turn signal switch is turned to R or L, a ground is provided for the circuit so current can flow. Current to the right or left turn signals flows through the closed contacts and the resistance wire inside the turn signal relay, and the turn signals go on. The resistance wire quickly heats up, expands, and allows a spring to pull the contacts open. When the contacts have opened, the circuit is broken, the turn signals go off, and the resistance wire cools and contracts, closing the contacts so that the cycle can begin again. The indicator light in the turn signal circuit flashes on and off with the turn signals to indicate that they are working properly.

Since the turn signal relay is designed to operate correctly only when two turn signals (one front and one rear) and the turn signal indicator light are properly connected in the circuit, trouble may result from a burned out bulb, a bulb of incorrect wattage, loose wiring, as well as from a defect in the relay itself. In general, if the trouble with the circuit is common to both right and left turn signals, it is probably caused by a defective turn signal relay, although it may be due to a bad switch, wiring, or battery. If the trouble is with only one side — either right or left — then the relay is not at fault since the same relay is used for both sides.

Turn Signal Circuit


325

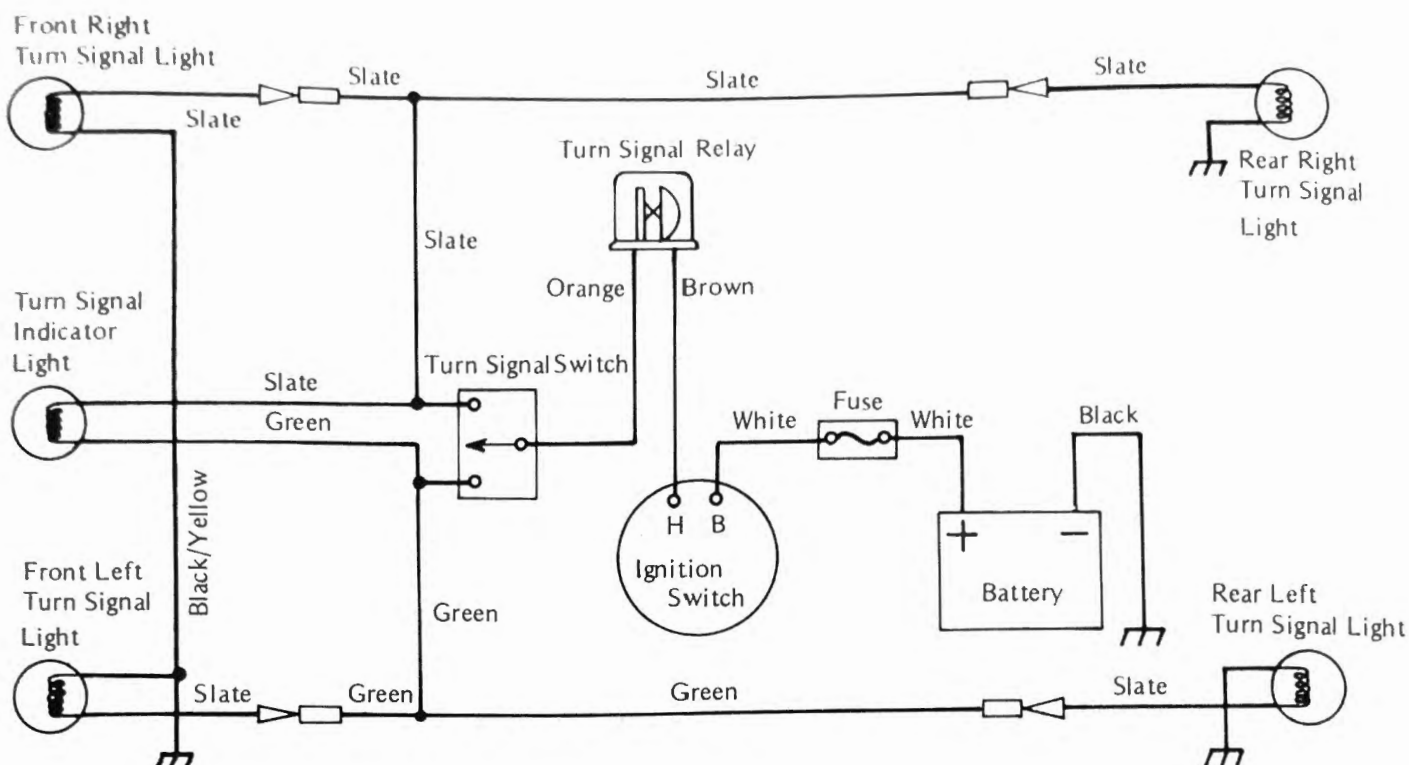

Turn signal trouble

(1) Neither right nor left turn signals come on at all:

- Check that battery voltage is normal.
- Unplug the relay leads and use an ohmmeter to check that there is continuity (close to zero ohms) between the relay terminals. If there is no ohmmeter reading, or if there is several ohms resistance, replace the relay.

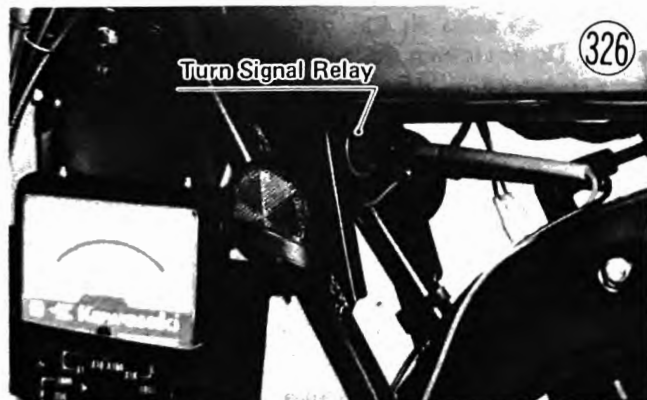

• If the relay checks good, turn the meter to the 10 VDC range, connect the + meter lead to the brown lead that was disconnected from the relay, and connect the - meter lead to the orange lead. With the ignition switch on, first switch the turn signal switch to the R and then to the L position. The meter should register battery voltage at either position. If it does not, the fuse, ignition switch, or wiring is at fault. If battery voltage is read on the

meter but the turn signals will still not work when the relay is reconnected, then recheck all wiring connections.



(2) Both right or both left turn signals come on and stay on or flash too slowly:

- Check that battery voltage is not low.
- Check that all wiring connections are good.
- Check that the turn signal bulbs and indicator bulb are of the correct wattage.
- If all of the above check good, replace the relay.

(3) A single light on one side comes on and stays on:

- Either the light that does not come on is burned out or the wiring is broken or improperly connected.

114 MAINTENANCE

- (4) Neither light on one side comes on:
 - Unless both lights for that side are burned out, the trouble is with the turn signal switch.
- (5) Flashing rate is too fast:
 - If this occurs on both the right and left sides, check that the battery is not being overcharged. If the flywheel magneto and battery voltage are normal, replace the turn signal relay.
 - If this occurs on only one side, one or both of the turn signal bulbs are of too high a wattage.

HORN CIRCUIT

The horn circuit and construction are shown in Fig. 329. When the horn button is pressed with the ignition switch in the on position, the horn is grounded to complete the horn circuit. Current then flows through the horn contacts and horn coil, magnetizing the iron core. The magnetized iron core pulls on the armature and diaphragm assembly, the movement of which pushes open the contacts, interrupting the current flow. Since the core now loses its magnetism, the armature and diaphragm assembly springs back to its original position, closing the contacts. This cycle repeats until the horn button is released. Since each cycle takes only a fraction of a second, the diaphragm moves fast enough to produce sound.


The contacts wear down after long use, requiring adjustment from time to time (Pg. 17). If the horn itself is determined to be at fault and adjustment fails to correct the trouble, the contacts or some other component in the horn is defective. The horn cannot be disassembled and must be replaced if defective.

Horn trouble

- Check that battery voltage is normal.
- Disconnect the leads to the horn, and connect to the horn terminals a multimeter set to the $R \times 1$ range to check for continuity (close to zero ohms). If the reading is several ohms or if there is no reading at all, replace the horn.



Horn Construction

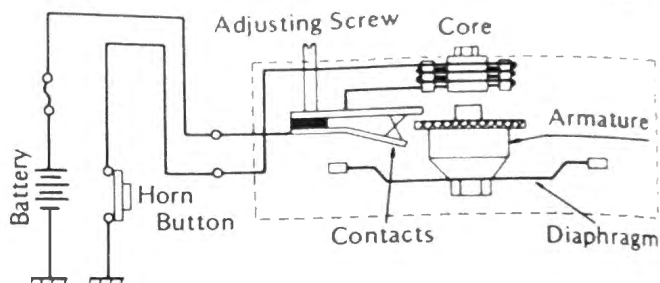

- If the reading is very close to zero, set the multimeter to the 12 VDC range, and connect the meter to the leads that were disconnected from the horn. The + meter lead goes to the brown lead, and the - meter lead goes to the black lead. With the ignition switch on, press the horn button. The meter should register battery voltage. If it does not, the fuse, ignition switch, horn button, or the wiring is at fault.
- If the meter does show battery voltage, indicating that the horn trouble lies within the horn itself, and adjustment fails to correct the trouble, replace the horn.



NOTE: Do not loosen the horn armature mounting since doing so would alter the armature position such that the horn would probably have to be replaced.

SPEEDOMETER

The speedometer is a sealed unit which cannot be disassembled. If it fails to work satisfactorily, it must be replaced as a complete unit.

The speedometer illumination light and the indicator light are independent and can be removed for replacement if necessary.

Appendix

ADDITIONAL CONSIDERATIONS FOR RACING

This motorcycle has been manufactured for use in a reasonable and prudent manner and as a vehicle only. However, some may wish to subject this motorcycle to abnormal operation, such as would be experienced under racing conditions. KAWASAKI STRONGLY RECOMMENDS THAT ALL RIDERS RIDE SAFELY AND OBEY ALL LAWS AND REGULATIONS CONCERNING THEIR MOTORCYCLE AND ITS OPERATION.


Racing should be done under supervised conditions, and recognized sanctioning bodies should be contacted for further details. For those who desire to participate in competitive racing or related use, the following technical information may prove useful. However, please note the following important points.

- You are entirely responsible for the use of your motorcycle under abnormal conditions such as racing, and Kawasaki shall not be liable for any damages which might arise from such use.
- Kawasaki's Limited Motorcycle Warranty and Limited Emission Control Systems Warranty specifically exclude motorcycles which are used in competitive or related uses. Please read the warranty carefully.
- Motorcycle racing is a very sophisticated sport, subject to many variables. The following information is theoretical only, and Kawasaki shall not be liable for any damages which might arise from alterations utilizing this information.
- When the motorcycle is operated on public roads, it **must** be in its original state in order to ensure safety and compliance with applicable emission regulations.

Carburetor

Sometimes an alteration may be desirable for improved performance under special conditions when proper mixture is not obtained after the carburetor has been properly adjusted, and all parts cleaned and found to be functioning properly.

Jet Needle

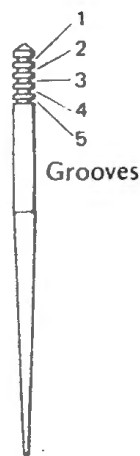

331

A certain amount of adjustment can be made by changing the position of the needle. There are five grooves at the top of the needle. Changing the position of the clip to a groove closer to the bottom raises the needle, which makes the mixture richer at a given position of the throttle valve.

NOTE: The last digit of the jet needle number ("3" of 4EJ12-3) is not stamped on the needle, but is the number of the standard groove in which the clip is set. The groove numbers are counted from the top of the needle, 1 being the topmost groove, and 5 being the lowest groove.

If the engine still exhibits symptoms of overly rich or lean carburetion after all maintenance and adjustments are correctly performed, the main jet can be replaced with a smaller or larger one. A smaller numbered jet gives a leaner mixture and a larger numbered jet a richer mixture.


Spark Plug

The spark plug ignites the fuel/air mixture in the combustion chamber. To do this effectively and at the proper time, the correct spark plugs must be used, and the spark plugs must be kept clean and adjusted.

Test have shown the NGK B8ES set to a 0.7 ~ 0.8 mm gap to be the best plug for general use. But since spark plug requirements change with the ignition and carburetion adjustments and with riding conditions, this plug may have to be replaced with one of the next lower heat range. Whether or not a spark plug of a correct heat range is used should be determined by removing and inspecting the plug.

When a plug of the correct heat range is being used, the electrodes will stay hot enough to keep all the carbon burned off, but cool enough to keep from damaging the engine and the plug itself. This temperature is about 400 ~ 800°C (750 ~ 1,450°F) and can be judged by noting the condition and color of the ceramic insulator around the center electrode.

Spark Plug

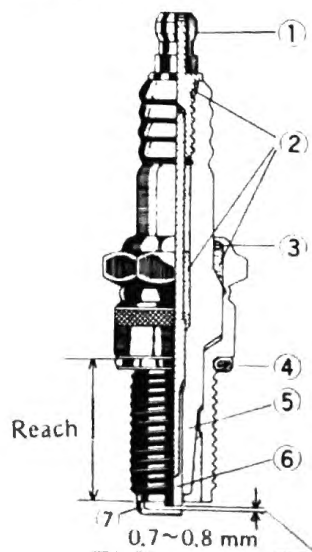

1. Terminal
2. Cement
3. Wire Ring
4. Gasket
5. Insulator
6. Center Electrode
7. Side Electrode

332

Spark Plug Condition

333



Carbon Fouling



Oil Fouling



Normal Operation



Overheating

If the ceramic is clean and of a light brown color, the plug is operating at the right temperature.

A spark plug in the lower heat range is used when engine temperature is comparatively low such as for slow speed trail riding when the motorcycle is not operated at high speed. Such a plug namely, NGK B7ES is designed to hold the heat and thus is often referred to as a "hotter" plug. If a "hot" plug is used for racing, the plug will run too hot, causing engine overheating, preignition and knocking, which may burn a hole in the piston.

- (3)diameter (diameter at threads must be 14 mm),
- (4)electrode configuration (standard, not projected insulator or racing)
- (5)heat range

If a plug with the wrong thread pitch or thread diameter is used, the cylinder head will be damaged. If a plug with too long or short a reach is used, carbon will build up around the plug or plug hole threads, possibly causing engine damage and making the old plug difficult to remove or the new one difficult to install.

To inspect the spark plug:

Remove the plug and inspect the ceramic insulator. If the insulator is clean and has a light brown color, the correct plug is being used. If it is fouled black, change to the "hotter" NGK B7ES. However, if the spark plug still fouls after changing to a hotter, the cause of the trouble may be other than the spark plug such as faulty carburetion or ignition timing.


CAUTION When the type of riding changes — for example, a change to racing after the slow speed trail riding — the spark plug should be inspected and changed if necessary. The NGK B7ES plug in particular can damage the engine if used for racing.

NOTE: If the spark plug is replaced by any other than the recommended NGK B8ES standard plug, make sure that the replacement plug has the same:

- (1)thread pitch
- (2)reach (length of threaded portion must be 19 mm)


Spark Plug Reach

334

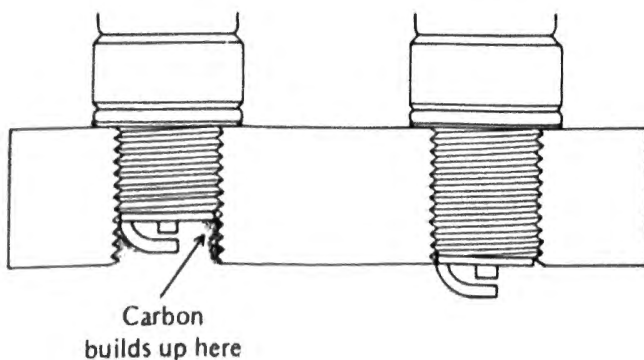
Too short
B8HSCorrect reach
B8ES

Special Tools


Piston Ring Pliers: 57001-115

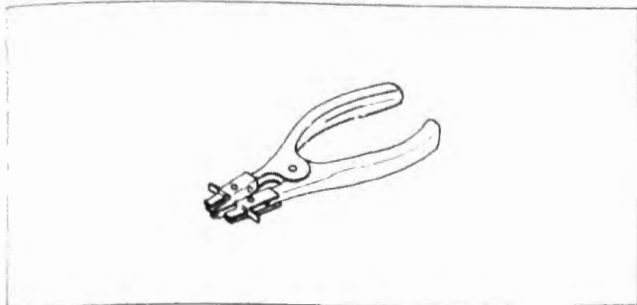


Steering Stem Bearing Driver: 57001-137

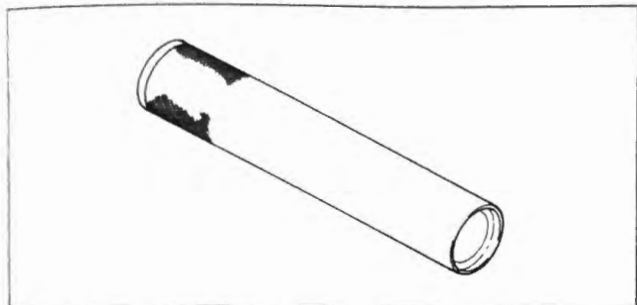


Outside Circlip Pliers: 57001-144

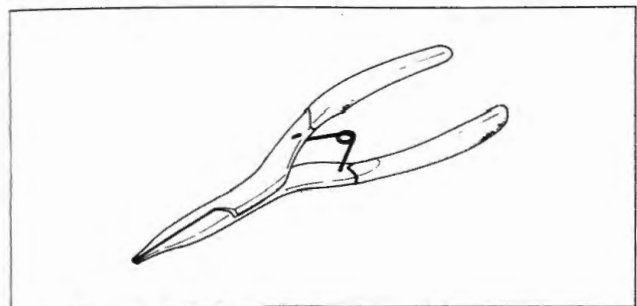


Flywheel Puller: 57001-252

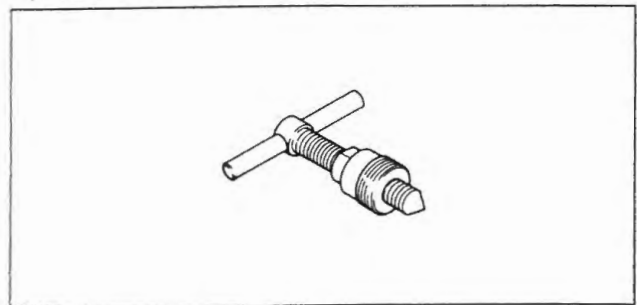


Engine Sprocket Holder: 57001-307

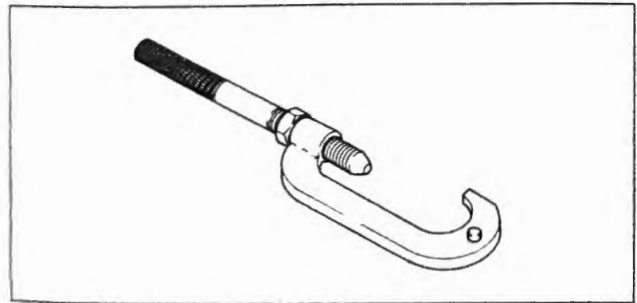


Top Dead Center Finder: 57001-402

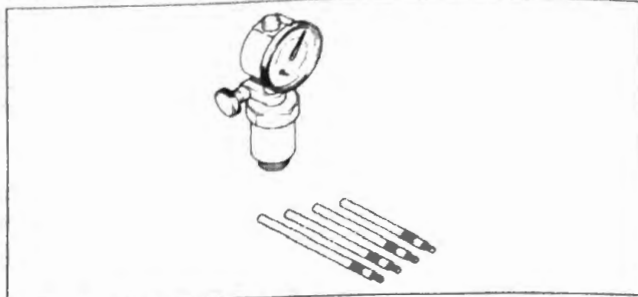


Piston Pin Puller Assembly: 57001-910

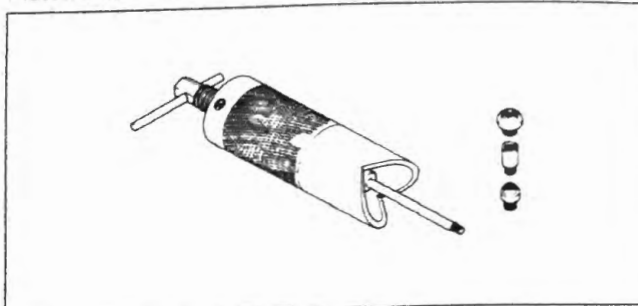


Fuel Level Gauge: 57001-1017

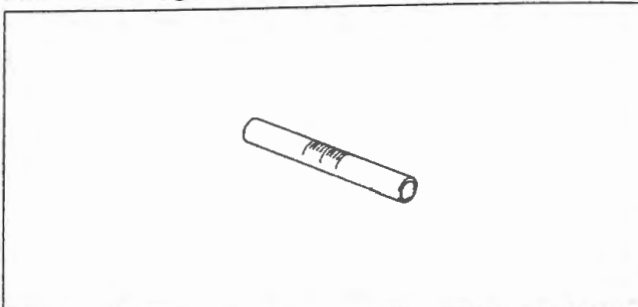

Crankcase Splitting Tool Assembly: 57001-1098

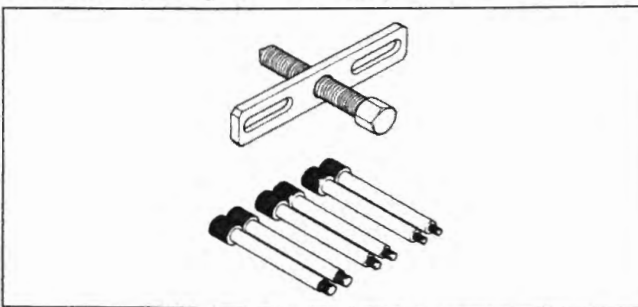


Steering Stem Nut Wrench: 57001-1100

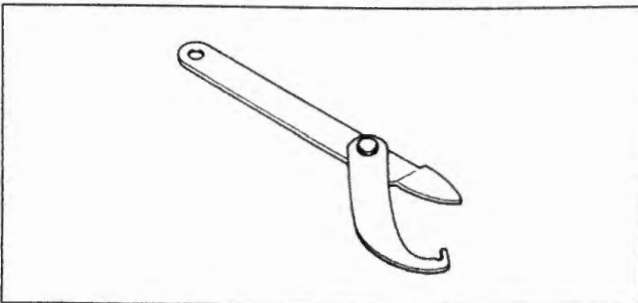


118 APPENDIX


Bearing Driver Set: 57001-1129

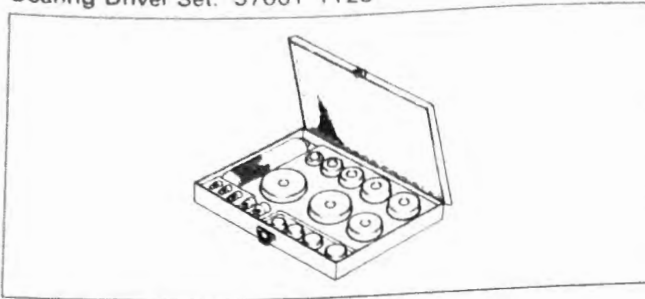

Front Fork Oil Seal Driver: 57001-1219

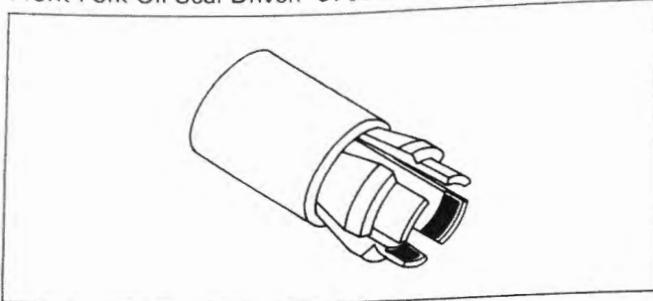

Flywheel Holder: 57001-1313

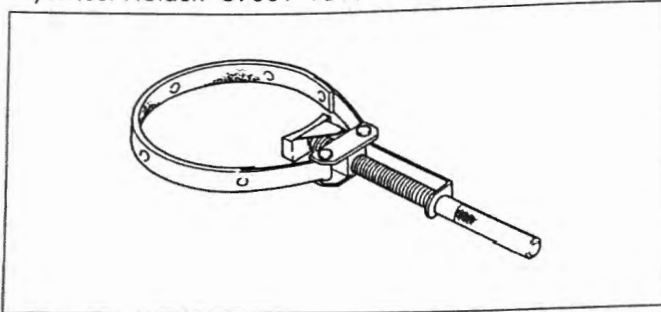

PERIODIC MAINTENANCE CHART (KE100A)

The maintenance and adjustments must be done in accordance with this chart to keep the motorcycle in good running condition. The initial maintenance is vitally important and must not be neglected.

OPERATION	FREQUENCY	ODOMETER READING* km						
		Whichever comes first ↓ Every	800 ± 100	4,000 ± 250	8,000 ± 250	12,000 ± 250	16,000 ± 250	20,000 ± 250
Battery electrolyte level — check †	month	•	•	•	•	•	•	•
Brake adjustment — check †		•	•	•	•	•	•	•
Brake wear — check †			•	•	•	•	•	•
Clutch — adjust		•	•	•	•	•	•	•
Carburetor & Oil pump — adjust		•	•	•	•	•	•	•
Throttle cable — adjust		•	•	•	•	•	•	•
Steering play — check †		•	•	•	•	•	•	•
Spoke tightness and rim runout — check †		•	•	•	•	•	•	•
Drive chain wear — check †			•	•	•	•	•	•
Front fork — inspect/clean		•	•	•	•	•	•	•
Rear shock absorbers — inspect		•	•	•	•	•	•	•
Nuts, Bolts, Fasteners — check and torque		•		•		•		•
Spark plug — clean and gap †		•	•	•	•	•	•	•
Points, timing — check †		•	•	•	•	•	•	•
Air cleaner element — clean			•		•		•	
Air cleaner element — replace	5 cleanings			•		•		•
Fuel system — clean		•	•	•	•	•	•	•
Tire tread wear — check †			•	•	•	•	•	•
Transmission oil — change	year	•		•		•		•
General lubrication — perform			•	•	•	•	•	•
Front fork oil — change				•		•		•
Wheel bearings — grease	2 years					•		
Speedometer gear housing — grease	2 years					•		
Brake camshaft — grease	2 years					•		
Steering stem bearings — grease	2 years					•		
Drive chain — lubricate	Every 300 ± 50 km							93
Drive chain — adjust	Every 800 ± 100 km							16

*For higher odometer readings, repeat at the frequency interval established here.

†Replace, add or adjust if necessary.

Transmission oil

In order for the transmission and clutch to function properly, maintain the transmission oil at the proper level, and change the oil in accordance with the periodic maintenance chart. Motorcycle operation with insufficient, deteriorated, or contaminated transmission oil will cause accelerated wear and may result in transmission seizure.

1) Oil level

- If the motorcycle has just been used, wait 2 to 3 minutes for all the oil to drain down.
- If the oil has been poured in since the motorcycle was last used, kick the motorcycle over 3 or 4 times with the ignition switch left in the off position. This ensures that the oil will "settle".
- Situate the motorcycle so that it is fully perpendicular to the ground (off its side stand).
- Remove the oil level inspection screw from the lower part of the right engine cover.
- The oil level is correct if a small amount of oil comes out of the hole.



- If no oil comes out, add oil slowly through the oil filler opening until the level is up to the screw hole. Fill using the same type and make of oil that already is in the transmission.

2) Oil change

- Warm up the engine thoroughly so that the oil will pick up any sediment and drain easily.
- With the motorcycle fully perpendicular to the ground, place an oil pan beneath the engine, and remove the engine drain plug so that all the transmission oil drains out.



- After the oil has completely drained out, replace the drain plug and gasket, using a new gasket if the old one is deteriorated or damaged. Proper torque for the drain plug is 0.7 ~ 1.0 kg-m (61 ~ 87 in-lbs).
- Pour in through the oil filler opening in the right engine cover 0.6 l of SE class SAE 10W30 or 10W40 motor oil.


General lubrication

Exposed parts subject to rust should be lubricated with either SAE 30 motor oil or regular grease periodically and whenever the vehicle has been operated under wet or rainy conditions. Before lubricating each part, clean off any rusty spots with rust remover. Badly rusted nuts, bolts, etc. should be replaced.

- Slide back the clutch lever dust cover.
- Lubricate the clutch lever pivot and the exposed portion of the clutch inner cable with SAE 30 motor oil.
- Secure the dust cover back into its original position.




- Slide back the front brake lever dust cover.
- Lubricate the brake lever pivot and the exposed portion of the brake inner cable with SAE 30 motor oil.
- Secure the dust cover back into its original position.

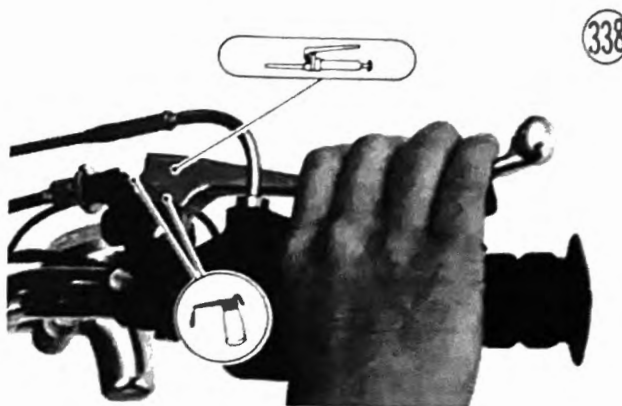


- Remove the engine stop switch assembly screws (2).
- Apply a light coat of grease to the exposed portion of the throttle grip inner cable.

- Replace the engine stop switch assembly screws.

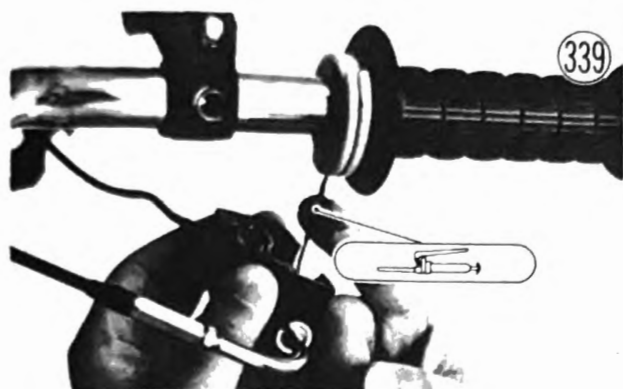


- Wipe off any dirt or grime from around the left footpeg, shift pedal, and side stand.
- Lubricate the exposed metal surfaces around the shift pedal serration and the bolts and nuts for the left footpeg and side stand.
- Wipe off excess lubricant.

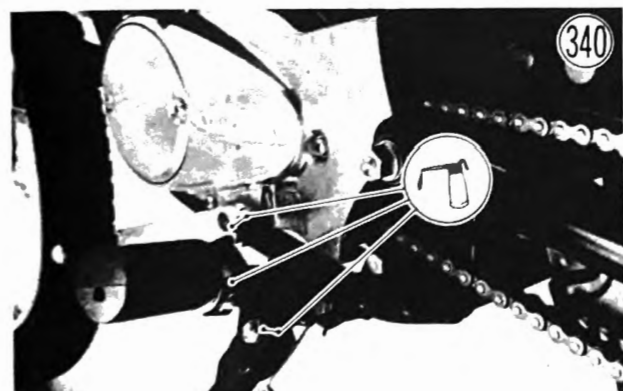


- Wipe off any dirt or grime from around the right footpeg, brake pedal and kick starter pedal.
- Lubricate the exposed metal surfaces around the bolts and nuts for the right footpeg, brake pedal and kick starter pedal.
- Wipe off excess lubricant.



- While pressing down the front brake cable lower dust cover, squirt a few drops of oil onto the front brake inner cable.
- Oil lightly around the camshaft serration and where the cam lever connects to the brake cable.
- Wipe off excess oil.

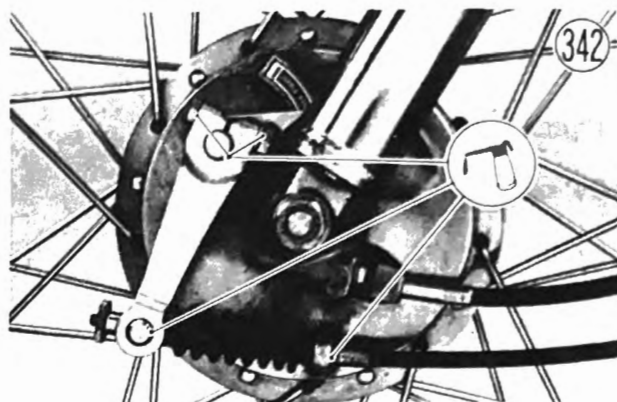

- Oil lightly the end of each drive chain adjuster, the camshaft serration, and the end of the brake rod.
- Wipe off excess oil.

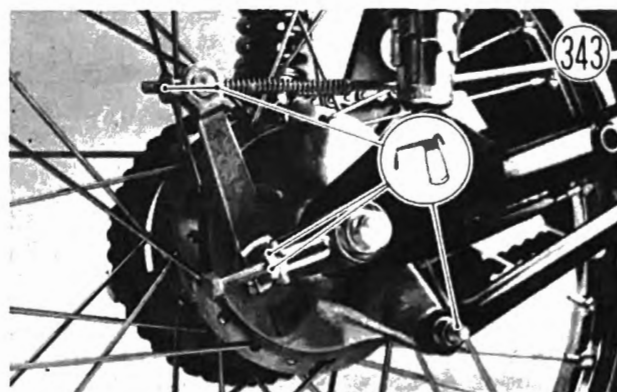

- Lubricate the front brake cable and clutch cable as shown in the figure.



TORQUE TABLE

Tighten all bolts and nuts to the proper torque using an accurate torque wrench. A bolt or nut if insufficiently tightened may become damaged or fall out, possibly resulting in damage to the motor-cycle and injury to the rider. A bolt or nut which is over-tightened may become damaged, strip an internal screw, or break and then fall out.

The following table lists the tightening torque for the major bolts and nuts:

Part Name	Metric	English	See Pg.
Clutch Spring Bolts 5 ϕ	0.4~0.5 kg-m	35~43 in-lbs	30
Cylinder Head Nuts 8 ϕ	2.2 kg-m	16 ft-lbs	24,39,68
Engine Drain Plug	0.7~1.0 kg-m	61~87 in-lbs	119
Engine Mounting Nuts 10 ϕ (4)	2.6~3.5 kg-m	19~25 ft-lbs	22
Engine Sprocket Bolt 8 ϕ	2.2~2.5 kg-m	16~18 ft-lbs	32,38
Front Axle Nut 10 ϕ	3.4~4.6 kg-m	25~33 ft-lbs	44
Front Fork Clamp Bolts 8 ϕ (Upper)	1.6~2.2 kg-m	11.5~16.0 ft-lbs	56,59
Front Fork Clamp Bolts 10 ϕ (Lower)	2.6~3.5 kg-m	19~25 ft-lbs	14,56,59
Front Fork Top Bolts (2)	1.5~2.0 kg-m	11~14.5 ft-lbs	56,97
Handlebar Clamp Bolts 8 ϕ	1.6~2.2 kg-m	11.5~16 ft-lbs	50
Magneto Flywheel Nut 10 ϕ	5 kg-m	36 ft-lbs	33,38
Oil Hose Banjo Bolts (3)	0.4~0.5 kg-m	35~43 in-lbs	26
Primary Gear Nut 12 ϕ	7.0~7.5 kg-m	51~54 ft-lbs	31,39
Rear Axle Nut 10 ϕ	3.4~4.6 kg-m	25~33 ft-lbs	17,46
Rear Shock Absorber Nuts 12 ϕ (Upper)	2.6~3.5 kg-m	19~25 ft-lbs	60
Rear Shock Absorber Bolts 10 ϕ (Bottom)	2.6~3.5 kg-m	19~25 ft-lbs	60
Rear Sprocket Nuts 8 ϕ (4)	2.0~2.2 kg-m	14.5~16 ft-lbs	48
Spark Plug	2.5~3.0 kg-m	18~22 ft-lbs	11,13
Spokes	0.2~0.4 kg-m	17~35 in-lbs	49
Steering Stem Clamp Bolt 8 ϕ	1.6~2.2 kg-m	11.5~16 ft-lbs	14
Steering Stem Head Bolt	3.0~5.0 kg-m	22~36 ft-lbs	14,59
Swing Arm Pivot Shaft Nut 10 ϕ	4.0~6.0 kg-m	29~43 ft-lbs	60
Torque Link Nut 10 ϕ	2.6~3.5 kg-m	19~25 ft-lbs	17,46,60
Steering Stem Nut	1.8~2.2 kg-m	13~16 ft-lbs	14

The table below, relating tightening torque to thread diameter and pitch, lists the basic torque for the bolts and nuts used on Kawasaki Motorcycles. However, the actual torque that is necessary may vary among bolts and nuts with the same thread diameter and pitch. The bolts and nuts listed on Pg. 122 vary to a greater or lesser extent from what is given in this table. Refer to this table for only the bolts and nuts not included in the table on Pg. 122. All of these values are for use with dry solvent cleaned threads.

Coarse threads

dia (mm)	pitch (mm)	kg-m	ft-lbs
5	0.80	0.35 ~ 0.50	2.5 ~ 3.5
6	1.00	0.6 ~ 0.9	4.5 ~ 6.5
8	1.25	1.6 ~ 2.2	11.5 ~ 16.0
10	1.50	3.1 ~ 4.2	22 ~ 30
12	1.75	5.4 ~ 7.5	39 ~ 54
14	2.00	8.3 ~ 11.5	60 ~ 83
16	2.00	13 ~ 18	94 ~ 130
18	2.50	18 ~ 25	130 ~ 181
20	2.50	26 ~ 35	188 ~ 253

Fine threads

dia (mm)	pitch (mm)	kg-m	ft-lbs
5	0.50	0.35 ~ 0.50	2.5 ~ 3.5
6	0.75	0.6 ~ 0.8	4.5 ~ 5.5
8	1.00	1.4 ~ 1.9	10.0 ~ 13.5
10	1.25	2.6 ~ 3.5	19.0 ~ 25
12	1.50	4.5 ~ 6.2	33 ~ 45
14	1.50	7.4 ~ 10.2	54 ~ 74
16	1.50	11.5 ~ 16	83 ~ 116
18	1.50	17 ~ 23	123 ~ 166
20	1.50	23 ~ 33	166 ~ 239

TROUBLESHOOTING GUIDE

Engine Doesn't Start; Starting Difficulty**Engine won't turn over**

- Cylinder, piston seizure
- Connecting rod small end seizure
- Connecting rod big end seizure
- Transmission gear or crankcase bearing seizure
- Kickstarter return spring broken
- Pawl not engaging with ratchet

No fuel flow

- No fuel in tank
- Fuel tap turned off
- Fuel tap clogged
- Tank cap air vents obstructed
- Fuel line clogged
- Float valve clogged

Engine flooded

- Fuel level too high
- Float valve worn or stuck open
- Starting technique faulty
- (When flooded, kick with the throttle fully open to allow more air to reach the engine.)

No spark; spark weak

- Ignition switch not on
- Engine stop switch turned off
- Spark plug dirty, defective, or maladjusted
- Spark plug cap or high tension wiring defective
- Spark plug cap shorted or not in good contact
- Contact breaker points dirty or damaged
- Condenser defective
- Ignition coil defective
- Ignition timing maladjusted
- Flywheel magneto defective
- Ignition or engine stop switch shorted
- Wiring shorted or open

Fuel/air mixture incorrect

- Air screw and/or idle adjusting screw maladjusted
- Pilot jet or air passage clogged
- Air cleaner clogged, poorly sealed, or missing
- Starter jet clogged

Compression low

- Cylinder, piston worn
- Piston rings bad (worn, weak, broken, or sticking)
- Piston ring/land clearance excessive
- Cylinder head gasket damaged
- Cylinder head not sufficiently tightened down
- Cylinder head warped
- Spark plug loose
- Crankshaft oil seal deteriorated or damaged
- Rotary valve sleeve O ring deteriorated or damaged
- Rotary valve cover large O ring deteriorated or damaged

Poor Running at Low Speed**Spark weak**

- Spark plug dirty, defective, or maladjusted

- Spark plug cap or high tension wiring defective
- Spark plug cap shorted or not in good contact
- Contact breaker points dirty or damaged
- Condenser defective
- Ignition timing maladjusted
- Flywheel magneto defective

Fuel/air mixture incorrect

- Air screw and/or idling screw maladjusted
- Pilot jet or air passage clogged
- Air cleaner clogged, poorly sealed, or missing
- Starter plunger stuck open
- Fuel level too high or too low
- Fuel tank air vents obstructed
- Carburetor is attached loosely

Compression low

- Cylinder, piston worn
- Piston rings bad (worn, weak, broken or sticking)
- Piston ring/land clearance excessive
- Cylinder head gasket damaged
- Cylinder head not sufficiently tightened down
- Cylinder head warped
- Spark plug loose
- Crankshaft oil seal deteriorated or damaged
- Rotary valve sleeve O ring deteriorated or damaged
- Rotary valve cover large O ring deteriorated or damaged

Poor Running or No Power at High Speed**Firing incorrect**

- Spark plug dirty, defective, or maladjusted
- Spark plug cap or high tension wiring defective
- Spark plug cap shorted or not in good contact
- Contact breaker points dirty or damaged
- Contact breaker spring weak
- Condenser defective
- Ignition coil defective
- Ignition timing maladjusted

Fuel/air mixture incorrect

- Main jet clogged or wrong size
- Jet needle or needle jet worn
- Jet needle clip in wrong position
- Fuel level too high or too low
- Air jet or air passage clogged
- Air cleaner clogged, poorly sealed, or missing
- Starter plunger stuck open
- Fuel to carburetor insufficient
- Carburetor is attached loosely
- Water or foreign matter in fuel
- Fuel tank air vents obstructed

Compression low

- Cylinder, piston worn
- Piston rings bad (worn, weak, broken, or sticking)
- Piston ring/land clearance excessive
- Cylinder head gasket damaged

Cylinder head not sufficiently tightened down
 Cylinder head warped
 Spark plug loose
 Crankshaft oil seal deteriorated or damaged
 Rotary valve sleeve O ring deteriorated or damaged
 Rotary valve cover large O ring deteriorated or damaged

Oil and fuel/air mixture incorrect

Throttle control cable maladjusted
 Crankshaft oil seal deteriorated or damaged
 Rotary valve sleeve O ring deteriorated or damaged
 Rotary valve cover large O ring deteriorated or damaged
 Oil passage pipe oil seal damaged
 Oil pump defective
 Oil line or check valve clogged
 Air in oil pump or oil line

Engine rpm will not rise properly

Starter plunger stuck open
 Fuel level too high or too low
 Main jet clogged
 Throttle valve does not fully open
 Air cleaner clogged
 Muffler clogged
 Water or foreign matter in fuel
 Cylinder exhaust port clogged
 Brakes dragging
 Clutch slipping
 Overheating
 Transmission oil level too high
 Transmission oil viscosity too high
 Crankshaft bearing worn or damaged

Knocking

Ignition timing maladjusted
 Carbon built up in combustion chamber
 Fuel poor quality or incorrect

Overheating

Firing incorrect

Spark plug dirty, damaged, or maladjusted
 Ignition timing maladjusted

Fuel/air mixture incorrect

Main jet clogged
 Fuel level too low
 Air cleaner clogged

Oil and fuel/air mixture incorrect

Throttle control cable maladjusted
 Oil pump defective
 Oil line or check valve clogged
 Air in oil pump or oil line

Compression high

Carbon built up in combustion chamber

Engine load faulty

Clutch slipping
 Transmission oil level too high
 Brakes dragging

Fuel and Oil Consumption Excessive

Idling too fast

Idle adjusting screw maladjusted
 Throttle control cable catching or poorly adjusted

Fuel/air mixture too rich

Air screw maladjusted
 Jet needle or needle jet worn
 Starter plunger stuck open
 Fuel level too high
 Air cleaner clogged

Compression low

Cylinder, piston worn
 Piston rings bad (worn, weak, broken, or sticking)
 Piston ring/land clearance excessive
 Cylinder head gasket damaged
 Cylinder head not sufficiently tightened down
 Cylinder head warped
 Spark Plug loose
 Crankshaft oil seal deteriorated or damaged
 Rotary valve sleeve O ring deteriorated or damaged
 Rotary valve cover large O ring deteriorated or damaged

Exhaust obstructed

Muffler clogged
 Cylinder exhaust port clogged

Engine load faulty

Clutch slipping
 Brakes dragging

Clutch Operation Faulty

Clutch slipping

No clutch lever play
 Friction plates worn or warped
 Steel plates worn or warped
 Clutch springs weak
 Clutch cable maladjusted
 Clutch inner cable catching
 Clutch release mechanism defective
 Clutch hub or housing unevenly worn

Clutch not disengaging properly

Clutch lever play excessive
 Clutch plates warped or too rough
 Clutch spring tension uneven
 Transmission oil deteriorated
 Transmission oil viscosity too high
 Clutch housing frozen on drive shaft
 Clutch release mechanism defective

Gear Shifting Faulty

Doesn't go into gear; shift pedal doesn't return

Clutch not disengaging
 Shift fork(s) bent or seized
 Shift return spring weak or broken
 Shift lever broken
 Shift return spring pin loose

126 APPENDIX

- Shift lever spring broken
- Shift drum broken

Jumps out of gear

- Shift fork(s) worn
- Gear groove(s) worn
- Gear dogs, dog holes, and/or dog recesses worn
- Shift drum groove(s) worn
- Detent arm spring weak or broken
- Shift fork guide pin(s) worn
- External shift mechanism arm pawl worn
- Drive shaft, output shaft, and/or gear splines worn

Overshifts

- Shift return spring pin loose

Abnormal Engine Noise

Knocking

- Ignition timing maladjusted
- Carbon built up in combustion chamber
- Fuel poor quality or incorrect
- Overheating

Piston slap

- Cylinder/piston clearance excessive
- Cylinder, piston worn
- Connecting rod bent
- Piston pin, piston holes worn

Other noise

- Connecting rod small end clearance excessive
- Connecting rod big end clearance excessive
- Piston ring(s) worn, broken, or stuck
- Piston seizure damage
- Cylinder head gasket leaking
- Exhaust pipe leaking at cylinder connection
- Engine mounts loose
- Crankshaft bearing worn

Abnormal Drive Train Noise

Clutch noise

- Clutch rubber damper deteriorated
- Clutch housing/friction plate clearance excessive
- Clutch housing gear/primary gear backlash
- Metal chips jammed in clutch housing gear teeth

Transmission noise

- Crankcase bearings worn
- Transmission gears worn or chipped
- Metal chips jammed in gear teeth
- Transmission oil insufficient or too thin
- Pawl not properly disengaging from kick gear
- Oil pump gear/pinion gear worn or chipped

Drive chain noise

- Chain worn
- Rear and/or engine sprocket(s) worn
- Chain lubrication insufficient
- Rear wheel misaligned

Abnormal Frame Noise

Front fork shock absorber noise

- Oil insufficient or too thin
- Spring weak or broken

Rear shock absorber noise

- Shock absorber defective

Brake noise

- Brake linings overworn or worn unevenly
- Drum worn unevenly or scored
- Brake spring(s) weak or broken
- Foreign matter in hub
- Brake not properly adjusted

Other noise

- Brackets, nuts, bolts, etc. not properly mounted or tightened

Exhaust smoke

Excessive white smoke

- Throttle control cable maladjusted
- Oil poor quality or incorrect
- Crankshaft oil seal defective
- Rotary valve sleeve O ring deteriorated or damaged
- Rotary valve cover large O ring deteriorated or damaged
- Oil passage pipe O ring damaged

Brownish smoke

- Air cleaner clogged
- Main jet fallen off
- Starter plunger stuck open
- Fuel level too high

Handling and/or Stability Unsatisfactory

Handlebar hard to turn

- Steering stem nut too tight
- Bearing balls damaged
- Race(s) dented or worn
- Steering stem lubrication inadequate
- Steering stem bent
- Tire air pressure too low

Handlebar shakes or excessively vibrates

- Tire(s) worn
- Swing arm bushing damaged
- Rim(s) warped or not balanced
- Front, rear axle runout excessive
- Spokes loose
- Wheel bearing(s) worn
- Handlebar clamps loose

Handlebar pulls to one side

- Frame bent
- Wheel misalignment
- Swing arm bent or twisted
- Swing arm pivot shaft runout excessive
- Steering stem bent
- Front fork shock absorber(s) bent
- Right/left front fork shock absorber oil level uneven
- Right/left rear shock absorbers unbalanced

Shock absorption unsatisfactory

- Too hard:
 - Front fork oil excessive
 - Front fork oil viscosity too high
 - Tire air pressure too high
 - Rear suspension maladjusted
- Too soft:
 - Front fork oil insufficient and/or leaking
 - Front fork oil viscosity too low
 - Front fork, rear shock absorber spring(s) weak

Brake Doesn't Hold

- Brake not properly adjusted
- Linings overworn or worn unevenly
- Drum worn unevenly or scored
- Cam, camshaft, shaft hole worn
- Oil, grease on lining and drum
- Dirt, water between lining and drum
- Overheated

Battery Discharged


- Battery faulty (e.g., plates sulfated, shorted through sedimentation, electrolyte level too low)
- Battery leads making poor contact
- Regulator/rectifier defective
- Ignition switch defective
- Load excessive (e.g., bulb of excessive wattage)
- Flywheel magneto defective

Battery Overcharged

- Regulator/rectifier defective
- Battery defective

NOTE: This is not an exhaustive list, giving every possible cause for each problem listed. It is meant simply as a rough guide to assist in troubleshooting some of the more common difficulties. Electrical troubleshooting is not covered here due to its complexity. For electrical problems, refer to the appropriate heading in the Maintenance Section.

KE100-A8 Wiring Diagram

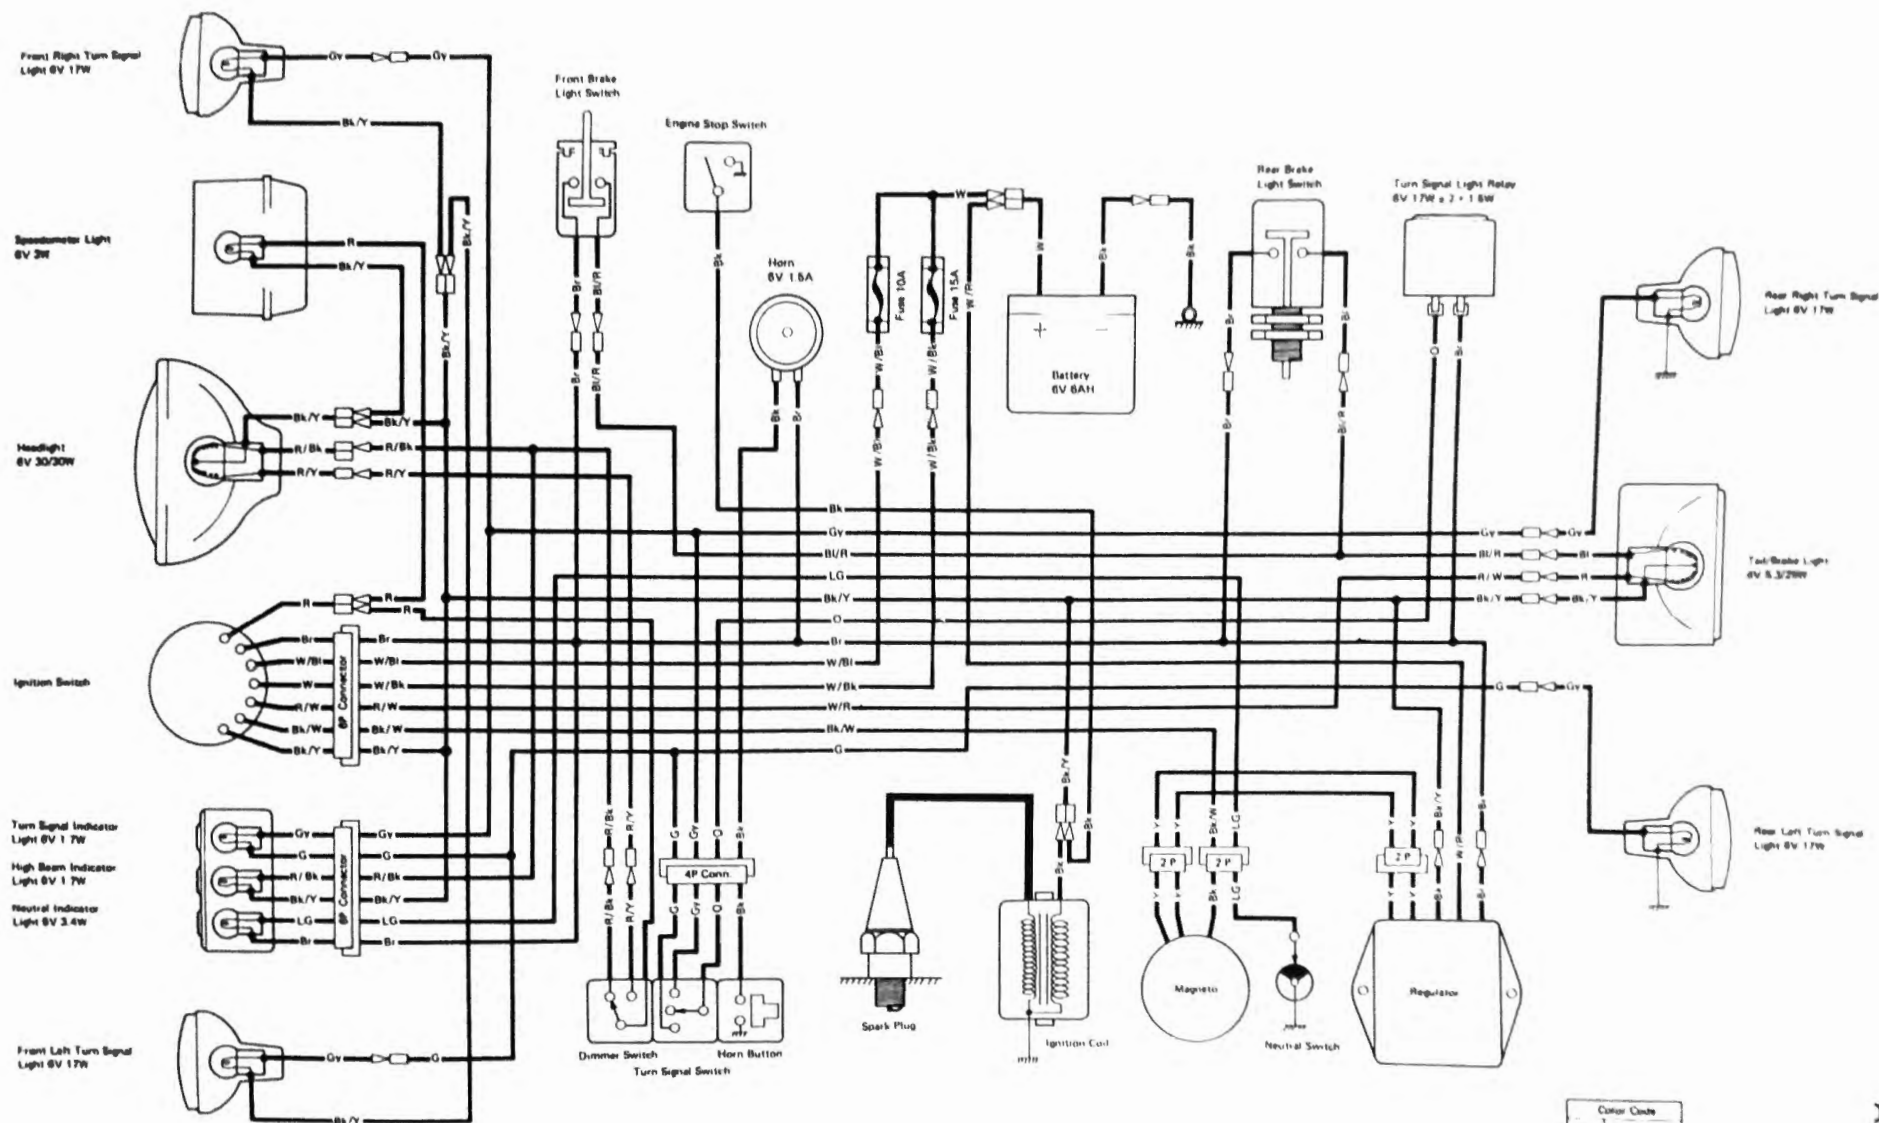

Ignition Switch Connections									
	Ig	Ign	Set	Mag 2	H L	Mag 3	Rel	Horn	Ign
OFF	Bk/W	Bk/Y	Bl/W	Bl/W	R	Y	W	Bl	R/W
ON									

(10 MA)

Color Code	
Bk	Black
Bl	Blue
Br	Brown
G	Green
Gr	Grey
LG	Light Green
O	Orange
R	Red
W	White
Y	Yellow

Supplement

This supplement is designed to be used in conjunction with the front part of this manual (up to Pg. 130). The maintenance and repair procedures described in this Supplement are only those that are unique to later year units since the first publication of this Service Manual. Complete and proper servicing of later year units therefore requires mechanics to read both this Supplement and the text in front of the Supplement.

This Supplement is divided into few sections. Each section is annually added to the preceding section, and explains procedures per one year unit that are unique to the latest year unit. Complete and proper servicing of later year units therefore requires mechanics to read (1) the section corresponding to the year unit they work at, (2) the previous section(s), and (3) the text in front of this Supplement.

Table of Contents

Supplement for 1980, 1981 Models	132
Supplement for 1982 Model through 1996 Models	136

Supplement for 1980·1981 Model

Table of Contents

Specifications	
SPECIFICATIONS	133
Adjustment	
CARBURETOR	133
Disassembly	
CARBURETOR	133
TRANSMISSION	133
Maintenance	
CARBURETOR	134
TRANSMISSION	134
FRONT FORK	135
Appendix	
SPECIAL TOOLS	135

Specifications

SPECIFICATIONS

The specifications are the same as those for the 1979 KE100A with the following exception. Refer to Pg.6.

- The gear ratio of the 5th gear has been changed to 0.93 (26/28).

Adjustment

CARBURETOR


The procedures are the same as those for the 1979 KE100A with the following exception. Refer to Pg. 10.

- The air screw is shielded with a plug, and low speed mixture adjustment is not required.

CAUTION: Do not apply too much bond on the plug to keep the air screw itself from being fixed.

Plug Installation

345

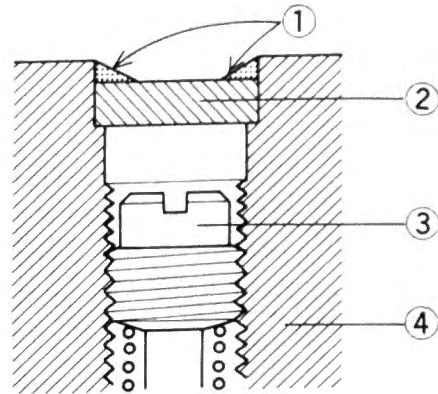

1. Apply a bonding agent.
2. Plug

3. Air Screw
4. Carburetor Body

Disassembly

CARBURETOR

Carburetor Disassembly and Assembly:

The procedures are the same as those for the 1979 KE100A with the following exceptions. See Pgs. 26 ~ 28.


1. To remove the air screw, first punch and pry off the plug with an awl or other suitable tools. Turn in the air screw and count the number of turns until it seats fully but not tightly, and then remove it with its O ring and spring. This is to set the air screw to its original position when assembling.
2. Install the air screw as follows:
 - Turn in the air screw fully but not tightly, and then back it out the same number of turns counted during disassembly.
 - Install a new plug in the pilot screw hole, and apply a small amount of a bonding agent to the circumference of the plug to fix the plug.

TRANSMISSION

Removal and Installation:

The procedures are the same as those for the 1979 KE100A with the following exception. Refer to Pgs. 35 ~ 41.

1. The shift drum and shift forks have been changed as shown in Fig. 347.
2. Identify the three shift forks by guide pin locations. See Fig. 346.

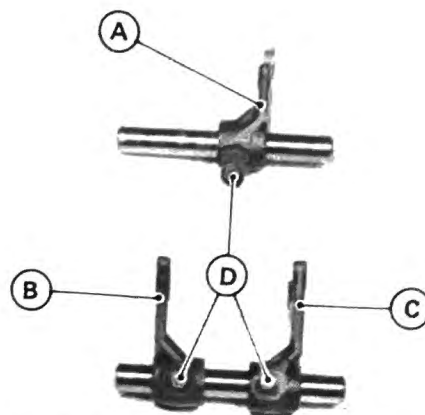


346

- A. 4th & 5th Shift Fork
- B. 3rd Shift Fork

- C. 1st & 2nd Shift Fork
- D. Guide Pins

Shift Drum and Shift Forks

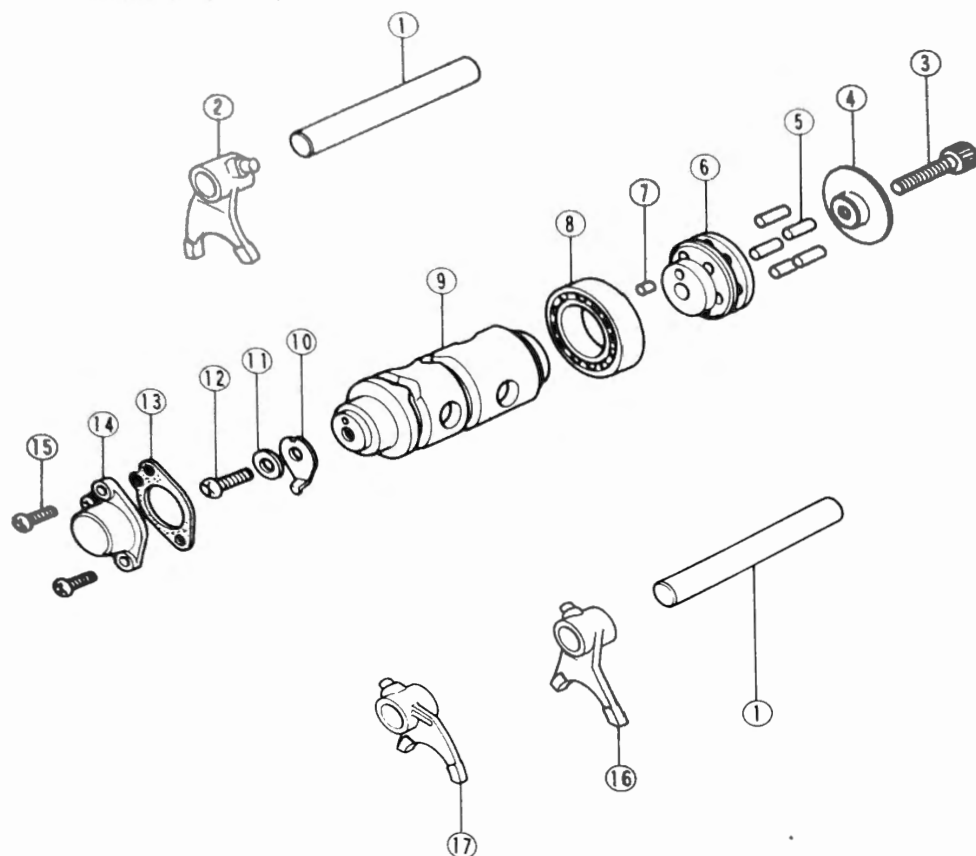

1. Shift Rod
2. Shift Fork (4th & 5th)
3. Bolt
4. Pin Holder
5. Pins
6. Bearing Holder
7. Pin
8. Ball Bearing
9. Shift Drum
10. Rotor
11. Washer
12. Screw
13. Gasket
14. Neutral Switch
15. Screws
16. Shift Fork (1st & 2nd)
17. Shift Fork (3rd)

Maintenance

CARBURETOR

The theory of operation and maintenance procedures are the same as those for the 1979 KE100A with the following exceptions. Refer to Pgs. 61 ~ 66.

1. Table 63 shows the carburetor specifications.

Table 63 Carburetor Specifications

Type	TK E19PK-1A
Main Jet	#82
Needle Jet	φ2.580
Jet Needle	#4D21
Pilot Jet	#38
Throttle Valve Cutaway	3.0
Service Fuel Level	0.5 ± 1 mm

2. Prepare a fuel level measuring tool to measure the service fuel level. Make your fuel level measuring tool as follows:

- Obtain the float bowl of a TK E19PK-1A carburetor. The float bowl is available at your Kawasaki Dealer, P/N 16020-1003.
- Cut off the overflow pipe inside the float bowl, connect one end of a suitable tube to the overflow pipe fitting at the bottom of the bowl, and fit the other end to the fuel level gauge (P/N 57001-1017). Use this assembly as a fuel level measuring tool.

TRANSMISSION

The service informations are the same as those for the 1979 KE100A unless otherwise noted below. Refer to Pgs. 76 ~ 80.

Appendix

Table 64 Shift Fork Guid Pin Diameter


Standard	Service Limit
5.9 ~ 6.0 mm	5.85 mm

Table 65 Shift Drum Groove Width

Standard	Service Limit
6.05 ~ 6.20 mm	6.25 mm

SPECIAL TOOLS

The special tools are the same as those for the 1979 KE100A with the following exception.

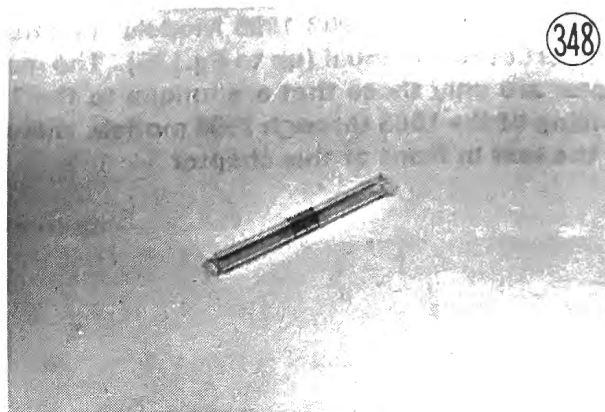

A. Fuel Level Gauge: 57001-1017

FRONT FORK

The service informations are the same as those for the 1979 KE100A unless otherwise noted below. See Pgs. 96 ~ 99.

Fork oil

- Remove the front fork.
- Remove the top bolt from the front fork, and remove the spring from the inner tube.
- Pump out the oil by repeatedly compressing and extending the front fork.
- Pour in the type and amount of oil specified in the table.

Table 66 Fork Oil

Type	Capacity	*Oil Level
SAE 10W20	162 ± 4 cc	408.5 ± 2 mm from the top of the inner tube.

*Measured with the fork tube fully extended and with the spring removed.

- Pump the fork by several times to expel the air from the upper and lower chambers.
- Insert a rod down into the tube, and measure the distance from the top of the inner tube to the oil level.
- If the oil is below the correct level, add enough oil to bring it up to the proper level, taking care not to overfill.
- Assemble and install the front fork.

Spring tension

Table 67 Front Fork Spring Free Length

Standard	Service Limit
410 mm	402 mm

Supplement - 1982 - 1996 Model

This "Supplement-1983-1996 Models" chapter is designed to be used in conjunction with the front part of this manual (up to Pg.135). The maintenance and repair procedures described in this chapter are only those that are unique to the 1983 through 1996 models. Complete and proper servicing of the 1983 through 1996 models, therefore requires mechanics to read both this chapter and the text in front of this chapter.

Table of Contents

Model Identification	137	AIR CLEANER	148
Specification	140	CARBURETOR	148
Adjustment	144	CYLINDER, PISTON	149
AUTOMATIC SIDE STAND RETURN		KICKSTARTER	151
MECHANISM	144	ENGINE LUBRICATION SYSTEM	151
CARBURETOR	144	WHEELS	151
Disassembly	145	DRIVE CHAIN	152
AIR CLEANER ELEMENT	145	SPROCKET	152
CARBURETOR	128	FRONT FORK	152
PISTON, PISTON RINGS	145	REAR SHOCK ABSORBERS	152
CARBURETOR	145	LIGHT/CHANGING SYSTEM	152
CLUTCH	145	CDI IGNITION	156
TRANSMISSION	147	IGNITION COIL	156
CRANKCASE	147	PERIODIC MAINTENANCE CHART	157
REGULATOR	147	WIRING DIAGRAM	159
Maintenance	148		

*The words, General Export Models, include all the models other than US and Canadian models. Explanations which follow the heading with these words are for the models other than USA and Canada.

Model Identification

KE100-B1



KE100-B2



KE100-B3



KE100-B4



138 SUPPLEMENT - 1982 - 1996 MODEL

KE100-B5



KE100-B6/B7/B8/B9



KE100-B10/B11/B12



KE100-B13/B14



KE100-B15



Specifications

Items	KE100-B1
Dimensions:	
Overall length	2 030 mm, (E)(UK) 2 060 mm, (A) 2 100 mm
Overall width	850 mm, (A)(E)(UK) 845 mm
Overall height	1 080 mm, (A)(E)(UK) 1 075 mm
Wheelbase	1 285 mm
Road clearance	240 mm, (A)(E)(UK) 235 mm
Seat height	805 mm
Dry weight	85 kg
Fuel tank capacity	9.0 L
Performance:	
Minimum turning radius	2.0 m
Engine:	
Type	2-stroke, single cylinder, rotary disc valve
Cooling system	Air-cooled
Bore and stroke	49.5 × 51.8 mm
Displacement	99 mL
Compression ratio	6.9,(A)(Co)(E)(UK)7.0,(N)6.8
Maximum horsepower	8.09 kW(11.9 PS), @7 500 r/min(rpm), (A)(UK) 7.36 kW(10.0 PS)@6 500 r/min(rpm), (Co)8.09 kW(11.0 PS)@7 000 r/min(rpm), (E)7.72 kW(10.5 PS)@6 500 r/min(rpm)
Maximum torque	11 N-m(1.1 kg-m, 8.0 ft-lb)@7 000 r/min(rpm), (A)(E)(UK)11 N-m(1.1 kg-m, 8.0 ft-lb)@6 000 r/min(rpm), (Co) 11 N-m (1.13 kg-m,8.17 ft-lb)@6 500 r/min(rpm)
Port timing:	
Intake:	Open
	Close
Scavenging:	Open
	Close
Exhaust:	Open
	Close
Carburetion system	TK E 19 PK-1A,(A)(E)(UK)VM19SC,(Co)SM22SC
Lubrication system	Superlube(oil injection)
Engine oil:	Type
	Capacity
Starting System	Primary kick
Ignition system	Magneto
Ignition timing	23°BTDC @1 300 r/min(rpm), (A)(Co)(E)(N)(UK) 20° @1 300 r/min(rpm)
Spark plug	B8ES

[illegible]

(A) : Australian Model
(Co): Columbian Model
(E) : European Model

(N) : Norwegian Model
(P) : Pakistan Model
(Ph): Philippine Model

(S) : South African Model
(UK) : U.K. Model
(US) : U.S. Model

142 SUPPLEMENT - 1982 - 1996 MODEL

Items	KE100-B1	KE100-B2	KE100-B3	KE100-B4	KE100-B5 through B9
Drive Train:					
Primary reduction system:					
Type	Gear	*	*	*	*
Reduction ratio	3.523 (74/21)	*	*	*	*
Clutch type	Wet multi disc	*	*	*	*
Transmission:					
Type	5-speed, constant mesh, return shift	*	*	*	*
Gear ratios: 1st	2.916 (35/12)	*	*	*	*
2nd	1.764 (30/17), (A) (E) (S) (UK) 1.733 (26/15)	*(N)1.733(26/15)	*	*	*
3rd	1.300 (26/20)	*	*	*	*
4th	1.090 (24/22)	*	*	*	*
5th	0.928 (26/28)	*	*	*	*
Transmission oil:					
Grade	SE class	*	*	*	*
Viscosity	SAE 10W30 or 10W40	*	*	*	*
Capacity	0.6 L	*	*	*	*
Final drive system:					
Type	Chain drive	*(N)3.066(46/15)	*	*(P)2.800(42/15)	*(S)2.800
Reduction ratio	2.666(40/15), (Co)2.800(42/15)				
Overall drive ratio	8.725 @Top gear(Co)9.161, (N)10.034	*(N)10.034	*	*(P)9.161	*(S)9.161
Frame:					
Type	Tubular, double cradle	*	*	*	*
Caster (rake angle)	30.5°	*	*	*	*
Trail	120 mm	*	*	*	*
Front tire: Type	Tube type	*	*	*	*
Size	2.75 - 19 4PR	*	*	*	*
Rear tire: Type	Tube type	*	*	*	*
Size	3.00 - 17 4PR	*	*	*	*
Front suspension:					
Type	Telescopic fork	*	*	*	*
Wheel travel	145 mm	*	*	*	*
Rear suspension: Type	Swingarm	*	*	*	*
Wheel travel	110 mm	*	*	*	*
Brake type: Front and rear	Internal Expansion, leading-trailing	*	*	*	*
Electrical Equipment:					
Battery	6 V 6 Ah, (A) (Co) (E) (UK) 6 V 4 Ah	*(N)6 V 4 Ah	*	*(P)6 V 4 Ah	*(S)6 V 4 Ah
Headlight:	6 V 30/30 W, (A) (Co) (E) (UK) 6 V 25/25W	*(N)6 V 45/40 W	*	*(P)6 V 25/25 W	*(S)6 V 25/25 W
Tail/brake light	6 V 5.3/25 W, (E) (UK) 6 V 5/21 W, (A) (Co) 6 V 5.3/17 W	*(N)6 V 5/21 W	*	*(P)6 V 5.3/17 W	*(S)6 V 5.3/17 W

Specifications are subject to change without notice, and may not apply to every country.

SUPPLEMENT - 1982 - 1996 MODEL 143[illegible]

Specifications are subject to change without notice, and may not apply to every country.

* : Same as previous year model except noted.

(A) : Australian Model
(Co): Columbian Model
(E) : European Model

(N) : Norwegian Model
(P) : Pakistan Model
(Ph): Philippine Model

(S) : South African Model
(UK): U.K. Model
(US): U.S. Model

Adjustment

AUTOMATIC SIDE STAND RETURN MECHANISM (On and after KE100-B3)


Check and adjust the mechanism whenever it does not work satisfactorily.

Inspection

- Situate the motorcycle so that it is perpendicular to the ground.
- Swing down the side stand and pull in the clutch lever. The side stand should return to its rest position when the clutch lever is pulled in.
- ★ If it is not, adjust the mechanism.

Adjustment

- Loosen the mounting nuts at the lower end of the mechanism cable.
- Slide the adjuster so that the proper adjustment is obtained.
- Tighten the nut.

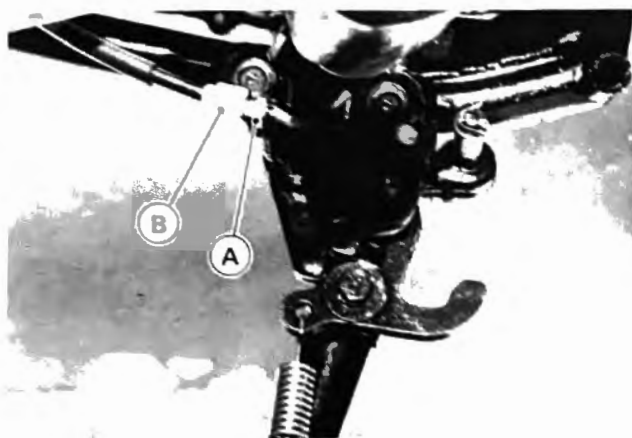

A. Nut

B. Adjuster

- Check the mechanism operation, and readjust if necessary.

CARBURETOR

High Altitude Performance Adjustment

(On and after KE100-B2 : US model)

- To improve the EMISSION CONTROL PERFORMANCE of vehicles operated above **4,000 feet** Kawasaki recommends the the following Environmental Protection Agency(EPA) approved modification.
- Change the main jet and pilot jet for high altitude use.

High Altitude Carburetor Specifications

Main Jet: #80

Pilot Jet: #36

Disassembly

AIR CLEANER ELEMENT (General Export Models)

Removal and Installation:

The procedures are the same as those for the 1979 KE100A with the following exception. Refer to Pg. 23.

- The air cleaner element consists of the sponge filter and the wire frame. The filter can be removed from its wire frame.

PISTON, PISTON RINGS (General Export Models)

Removal and Installation:

The procedures are the same as those for the 1979 KE100A with the following exception. Refer to Pgs. 24 ~ 25.


- The top ring is the Keystone type, and the second ring is the standard type, the cross section of which is rectangular. Both rings have a letter mark, N, near the ring end. Install them so that the N mark faces up.

CARBURETOR (General Export Models) Disassembly and Assembly:

The procedures are the same as those for the 1979 KE100A with the following exception. Refer to Pgs. 26 ~ 28.


- The screw(43), lockwasher(44), spacer(45), spring seat(46), and spring(47) are not used to secure the jet needle in position (Fig.74). The jet needle is simply held in the throttle valve by the spring seat(3) and return spring (2) in the figure below.

Canadian model On and after (KE100-B5)

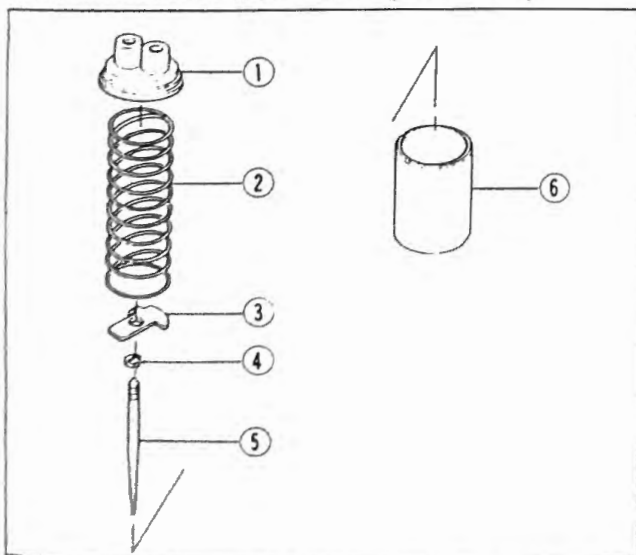

- | | |
|-----------------------|-------------------|
| 1. Mixing Chamber Top | 4. Circlip |
| 2. Return Spring | 5. Jet Needle |
| 3. Spring Seat | 6. Throttle Valve |

US model (On and after KE100-B5)

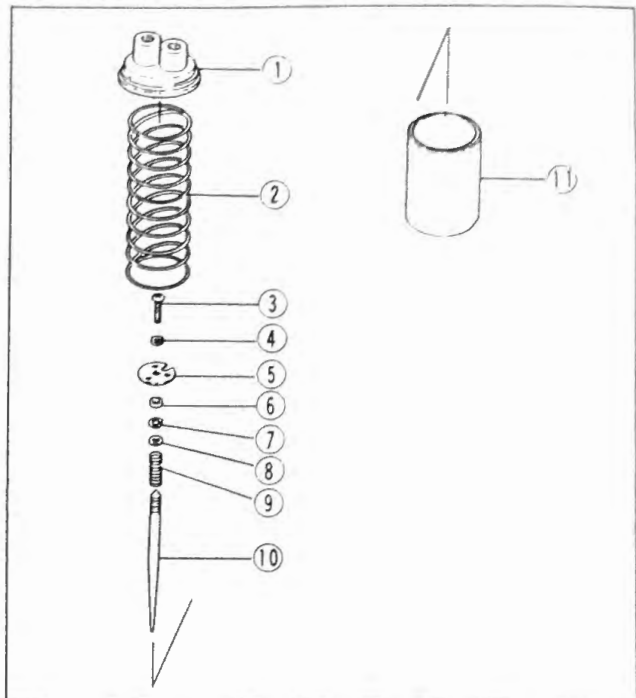

- | | |
|-----------------------|--------------------|
| 1. Mixing Chamber Top | 7. Circlip |
| 2. Return Spring | 8. Spring Seat |
| 3. Screw | 9. Spring |
| 4. Spring Washer | 10. Jet Needle |
| 5. Holding Plate | 11. Throttle Valve |
| 6. Spacer | |

CLUTCH (General Export Models)

Removal and Installation:


The procedures are the same as those for the 1979 KE100A with the following exceptions. Refer to Pgs.29 ~ 30.

1. The clutch and its related parts are shown in Fig.351.
2. When installing the clutch housing(4) on the idle gear sleeve, be sure the key (2) is in position and engage the groove in the clutch housing with the key.
3. The grooves on the friction plate surfaces are cut tangentially and radially; install the friction plates so that the grooves run toward the center in the direction of the clutch housing rotation (counterclockwise viewed from the right side of the engine).

146 SUPPLEMENT - 1982 - 1996 MODEL


Friction Plate Installation

(350)

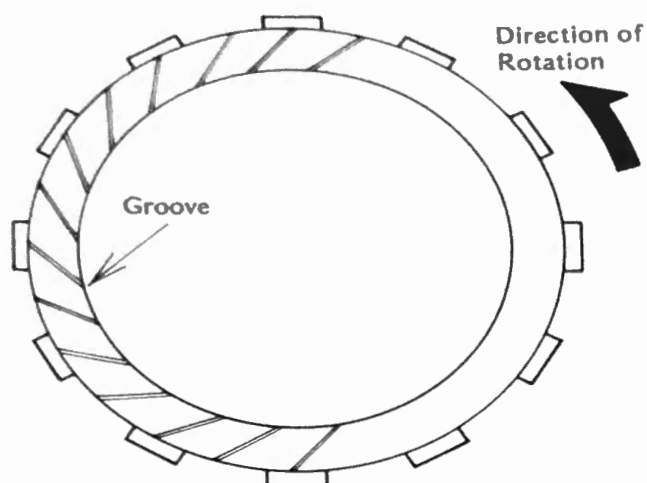

Clutch (General Export Models)

(351)

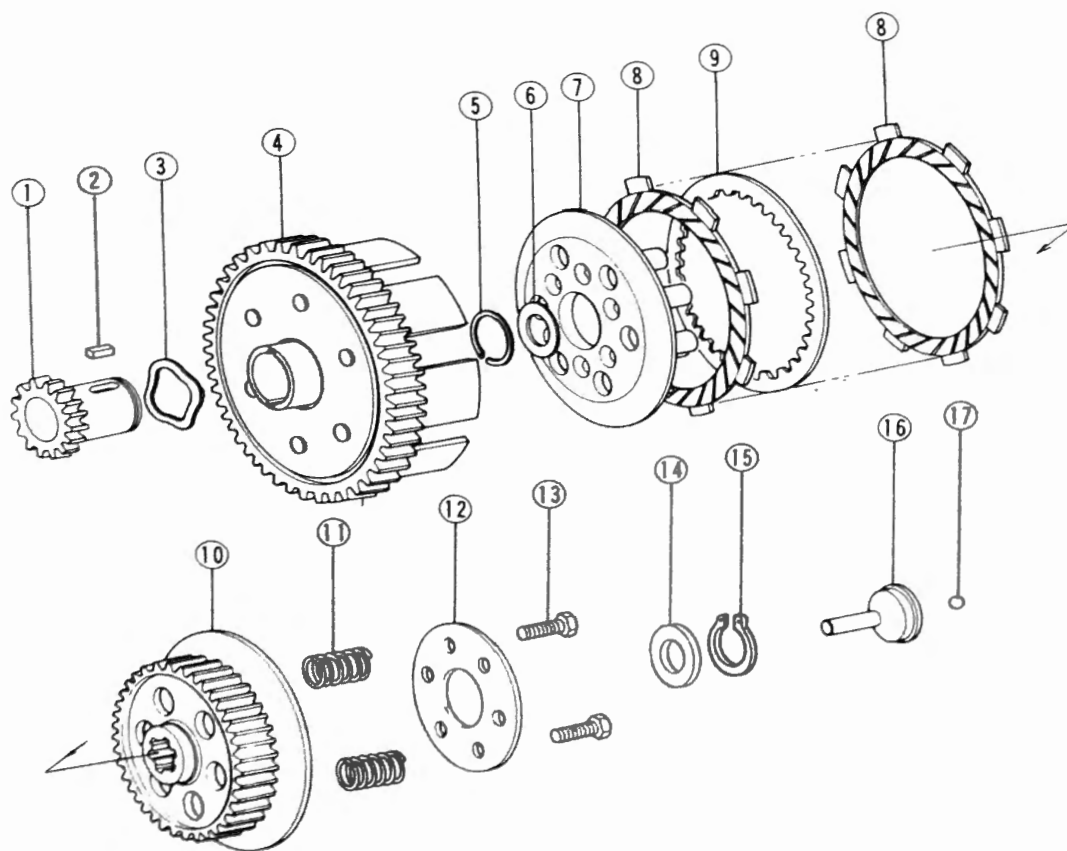

- 1. Drive Shaft Idle Gear
- 2. Key
- 3. Wave Washer
- 4. Clutch Housing
- 5. Circlip
- 6. Thrust Washer

- 7. Clutch Wheel
- 8. Friction Plate
- 9. Steel Plate
- 10. Clutch Hub
- 11. Clutch Spring
- 12. Spring Plate

- 13. Bolt
- 14. Washer
- 15. Circlip
- 16. Pusher
- 17. Steel Ball (fitted in pusher)

TRANSMISSION (General Export Models) Removal and Installation:


The procedures are the same as those for the 1981 KE100A with the following exceptions. Refer to Pgs.133 ~ 134.

1. The left end of the drive shaft is beared with a needle roller bearing.
2. Two thrust washers (copper and steel) are installed on the left side of the D5 gear. The washer (24) has been deleted (Fig.117 on Pg.40):
3. When the left crankcase half is replaced with a new one, adjust the drive shaft axial play as follows:
 - Apply a non-permanent locking agent to the threads of the adjusting plug.
 - Turn in the adjusting plug until it seats lightly on the steel ball and take up all the axial play. Take care not to tighten the plug so strongly that the drive shaft drags to turn.

CRANKCASE (General Export Models) Left Crankcase Half Assembly Notes:

The assembly instructions are the same as those for the 1979 KE100A with the following exceptions. Refer to Pgs.42 ~ 43.

Drive Shaft Axial Play Adjustment

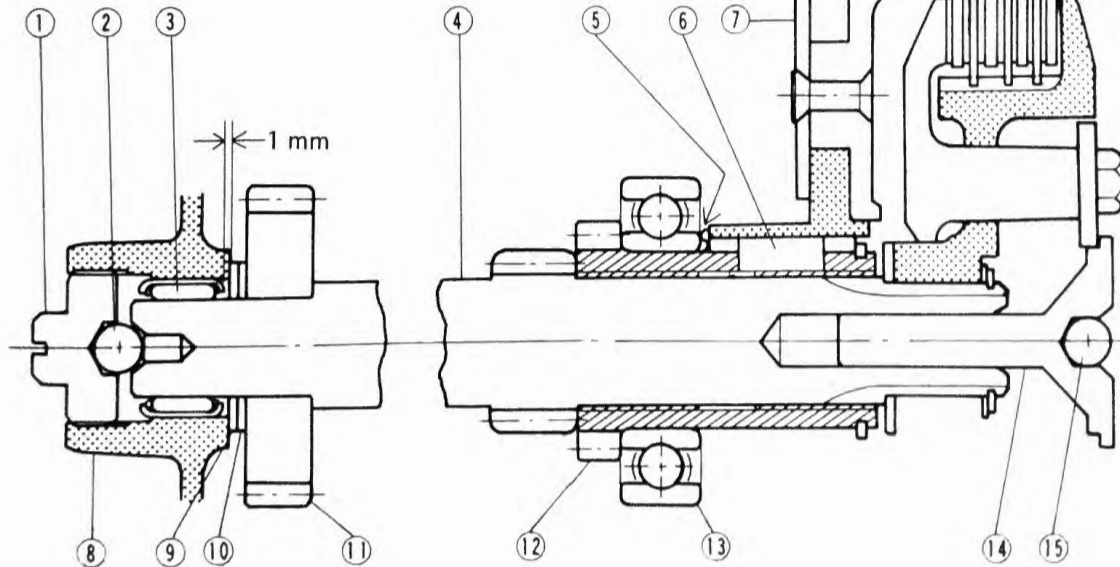


- | | | | |
|-------------------|----------------|-------------------|----------------|
| 1. Adjusting Plug | 5. Wave Washer | 9. Steel Washer | 13. Bearing |
| 2. Steel Ball | 6. Key | 10. Copper Washer | 14. Pusher |
| 3. Bearing | 7. Clutch | 11. D5 Gear | 15. Steel Ball |
| 4. Drive Shaft | 8. Crankcase | 12. Idle Gear | |

- Install the needle roller bearing for the drive shaft left end from the right side of the crankcase using a suitable driver. Press the bearing so that it sinks 1 mm in the hole from the right end. (See Fig.352)

REGULATOR

Assembly:

Locate the regulator, rectifier and fuse case in position.

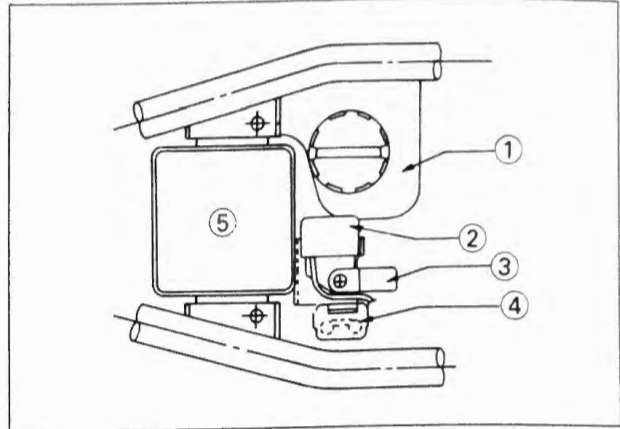

- | | |
|--------------|-----------------|
| 1. Oil Tank | 4. Fuse Case |
| 2. Regulator | 5. Battery Case |
| 3. Rectifier | |

Maintenance

AIR CLEANER (General Export Models)

A properly maintained air cleaner ensures that only clean, filtered air is supplied through the carburetor into the engine. If the air is supplied directly without filtering, not only will dirt and dust from the air plug up carburetor passages causing the engine to run poorly, but also the dust that enters the engine will act like grinding compound wearing down the cylinder, piston, and rings. If the air cleaner element is damaged, the result will be the same as if no element were used.

An air cleaner element clogged with dirt chokes the air supply to the engine, resulting in an overly rich fuel/air mixture and inefficient combustion. This in turn causes overheating from carbon build-up, resulting in reduced engine power.



A. Sponge Filter

⚠ WARNING

1. Clean the element in a well-ventilated area, and take ample care that there are no sparks or flame anywhere near the working area.
2. Because of the danger of highly flammable liquids, do not use gasoline or a low flash-point solvent to clean the element.

Cleaning and replacement

The air cleaner element must be cleaned periodically. In extremely dry, dusty areas, the element will need to be cleaned more often. After riding through rain or on muddy roads, the element should be cleaned immediately.

- Remove the air cleaner element, and remove the sponge filter from the wire frame.
- Clean the element in a bath of a high flash-point solvent, and squeeze it dry.
- After cleaning, saturate the element with SE class SAE 30 oil, squeeze out the excess, then wrap it in a clean rag and squeeze it dry as possible. Be careful not to tear the element.

Since repeated cleaning opens the pores of the element, replace it with a new one in accordance with the Periodic Maintenance Chart (Pg.157 ~ 158) Also, if there is a break in the element material or any other damage to the element, replace it with a new one.

CARBURETOR

Refer to Pg.145 for other service information not specifically mentioned here.

- The following table shows the carburetor specifications.

	US		Canada	Norway UK Australia	Pakistan Philippine South Africa	Colombia
	B1 - B4	B5 - B15	B1 - B15	B1 - B13	B1 - B13	B2 - B5
Type	TKE19PK-1A	VM19SC	VM19SC	VM19SC	VM22SC	VM22SC
Main Jet	82[80]	(A)80	80	90	100	102.5
Needle Jet	-	(A)O-1	O-1	P-0	O-9	←
Jet Needle	4D21	4EJ39	4EJ7-2	4M5-3	4M6-3	←
Pilot Jet	38[36]	(A)15	17.5	←	←	←
Throttle Valve Cutaway	3.0	2.0	←	←	←	←
Air Screw	-	-	1 ½	←	←	←
Service Fuel Level	0.5±1 mm	4±1 mm	←	←	←	←
Float Height	19.0±1 mm	24.9±1 mm	←	←	24.8±1 mm	←

[]: High Altitude

CYLINDER, PISTON**(General Export Models)**

All service information are the same as those for the 1979 KE100A with the following exceptions. Refer to Pgs. 66 ~ 70.


1. A heat durable, wear resistant sleeve is cast in the aluminum cylinder.
2. The 2nd piston ring is regular type. Its cross section is rectangular.

Cylinder, piston wear

Since there is a difference in cylinder wear in different directions, take a side to side and a front to back measurement at each of the 3 locations (total of 6 measurements) shown in the below. If any of the cylinder inside diameter measurements exceeds the service limit, or if there is a difference of more than 0.05 mm between any two measurements, the cylinder will have to be bored to oversize and then honed. However, If the amount of boring necessary would make the inside diameter greater than 50.5 mm, the cylinder must be replaced.

Cylinder Inside Diameter

Standard 49.508 ~ 49.523 mm
Service Limit 49.61 mm

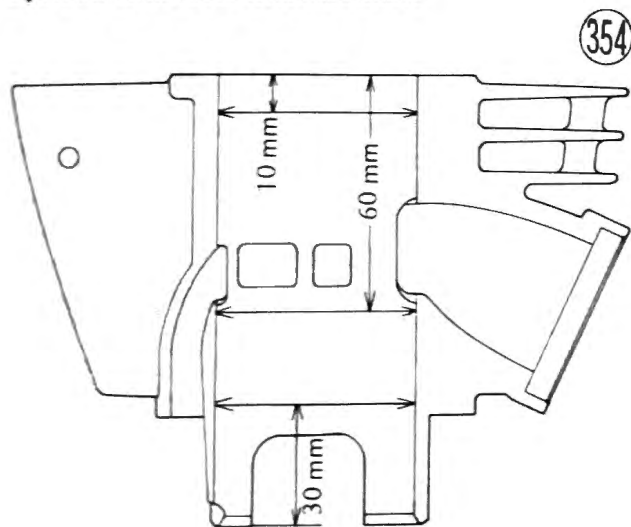Cylinder Diameter Measurement

Measure the outside diameter of the piston 5 mm up from the bottom of the piston at a right angle to the direction of the piston pin. If the measurement is under the service limit, replace the piston.

Piston Diameter

Standard: 49.380 ~ 49.395 mm
Service Limit: 49.25 mm

The cylinder Inside Diameter applies only to cylinder that has not been bored to oversize, and Cylinder Diameter Measurement table applies only to the standard size piston. In the case of rebored cylinder and oversize pistons, the service limit for the piston is the oversize piston original diameter minus 0.15 mm. If the exact figure for the rebored diameter is unknown, it can be roughly determined by measuring the diameter at the base of the cylinder.

NOTE

- Whenever the piston or cylinder has been replaced with a new one, the motorcycle must be broken in the same as with a new machine.

Piston/cylinder clearance

The piston to cylinder clearance is measured whenever the piston or cylinder is replaced with a new one, or whenever the cylinder is rebored and an oversize piston installed. The standard piston to cylinder clearance must be adhered to whenever the cylinder is replaced or rebored. However, if only the piston is replaced, the clearance may exceed the standard slightly, but it must not be less than the minimum in order to avoid piston seizure.

The most accurate way to find the piston clearance is by making separate piston and cylinder diameter measurements and then computing the difference between the two values. Measure the piston diameter as just described, and measure the cylinder diameter at the very bottom of the cylinder.

Piston/Cylinder Clearance

Standard: 0.032 ~ 0.042 mm

Boring, honing

When boring and honing the cylinder, note the following:

1. Before boring the cylinder, first measure the exact diameter of the oversize piston, and then, in accordance with the standard clearance given in Piston/Cylinder Clearance, determine the diameter of the bore.
2. Cylinder inside diameter must not vary more than 0.01 mm at any point.
3. There are two sizes of oversize pistons available: 0.5 mm and 1.0 mm. Oversize pistons require oversize rings.
4. Be wary of measurements taken immediately after boring since the heat affects cylinder diameter.

150 SUPPLEMENT - 1982 - 1996 MODEL

2nd piston ring tension

2nd Ring Free Gap

Standard: about 6 mm

Service Limit: 5.4 mm

- If the clearance exceeds the service limit, remove the piston ring, and measure the thickness of the piston ring and the width of the ring groove. If the ring has worn down to less than the service limit, replace the ring; if the groove width exceeds the service limit, replace the piston.

2nd piston ring, piston ring groove wear

- Check for uneven groove wear by inspecting the ring seating.
- The ring should fit perfectly parallel to the groove surfaces. if not, the piston must be replaced.
- With the piston ring in its groove, make several measurements with a thickness gauge to determine piston ring/groove clearance.

NOTE

- The following specifications apply to oversize pistons and rings as well as standard piston and ring.

2nd Piston Ring/Groove Clearance

Standard: 0.050 mm ~ 0.090 mm

Service Limit: 0.19 mm

2nd Piston Ring Thickness

Standard: 1.470 mm ~ 1.490 mm

Service Limit: 0.40 mm

2nd Piston Ring Groove Width


Standard: 1.54 mm ~ 1.56 mm

Service Limit: 1.62 mm

CLUTCH (General Export Models)

Refer to Pgs.73 ~ 76 for the other information not specifically mentioned below.

Clutch

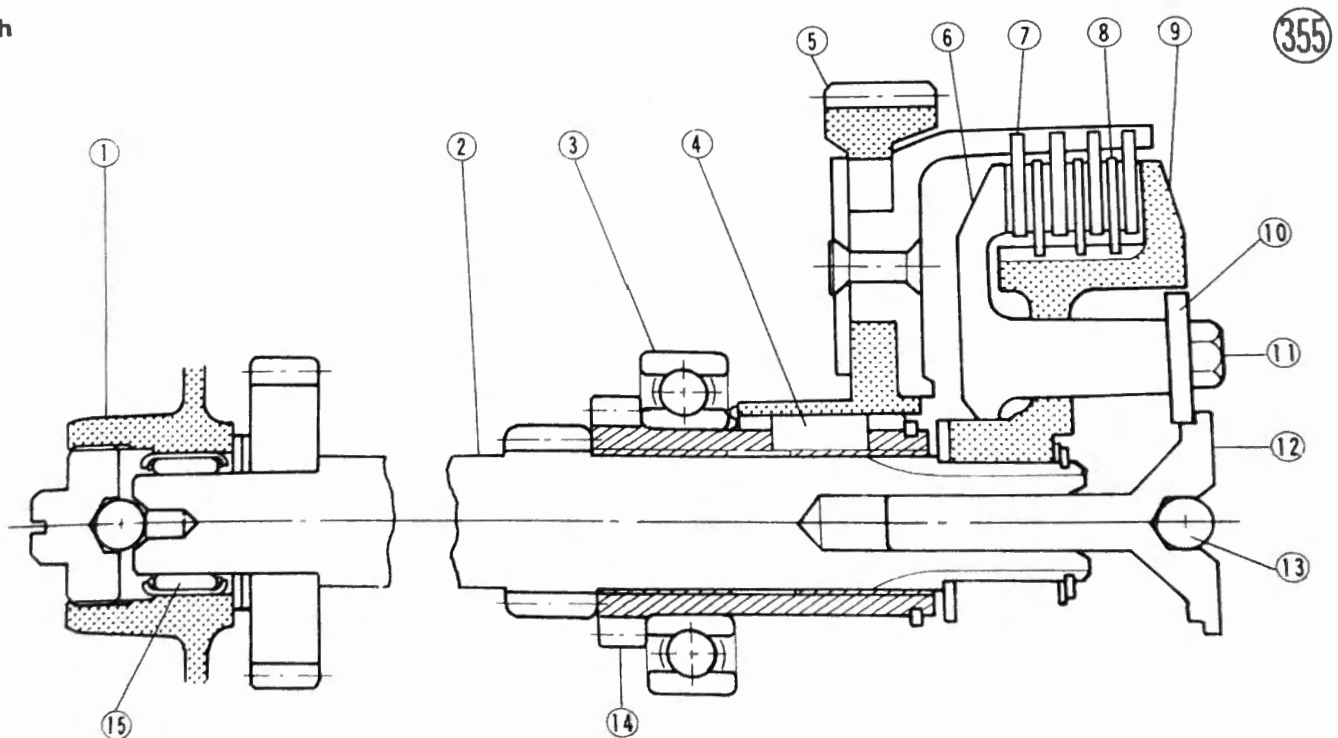

- 1. Crankcase
- 2. Drive Shaft
- 3. Bearing
- 4. Key

- 5. Clutch Housing
- 6. Clutch Wheel
- 7. Friction Plate
- 8. Steel Plate

- 9. Clutch Hub
- 10. Spring Plate
- 11. Bolt
- 12. Pusher

- 13. Steel Ball
- 14. Idle Gear
- 15. Bearing

Clutch Spring Free Length

Standard: 27.5 ~ 28.7 mm
Service Limit: 26.7 mm

Clutch housing, drive shaft idle gear wear

Measure the outside diameter of the drive shaft idle gear with a micrometer, and measure the inside diameter of the clutch housing. Find the difference between the two readings to determine the clearance. Replace the clutch housing if the clearance exceeds the service limit.

Clutch Housing Drive Shaft Wear

Standard: 0.002 ~ 0.041 mm
Service Limit: 0.08 mm

KICKSTARTER(General Export Models)

Refer to Pgs.80 ~ 81 for the other information not specifically mentioned below.

Drive shaft idle gear/shaft clearance

Measure the inside diameter of the drive shaft idle gear with a cylinder gauge, and measure the diameter of the drive shaft with a micrometer. Find the difference between the two readings to figure the clearance. Replace the gear if the clearance exceeds the service limit.

Drive Shaft Idle Gear/Shaft Clearance

Standard: 0.028 ~ 0.058 mm
Service Limit: 0.10 mm

**ENGINE LUBRICATION SYSTEM
(General Export Models)**


The service information are the same as those for the 1979 KE100A unless otherwise noted below.

Oil Pump Output

Output/3 minutes @2,000 rpm 3.6 ~ 4.1 cc

Oil Flow Rate

356

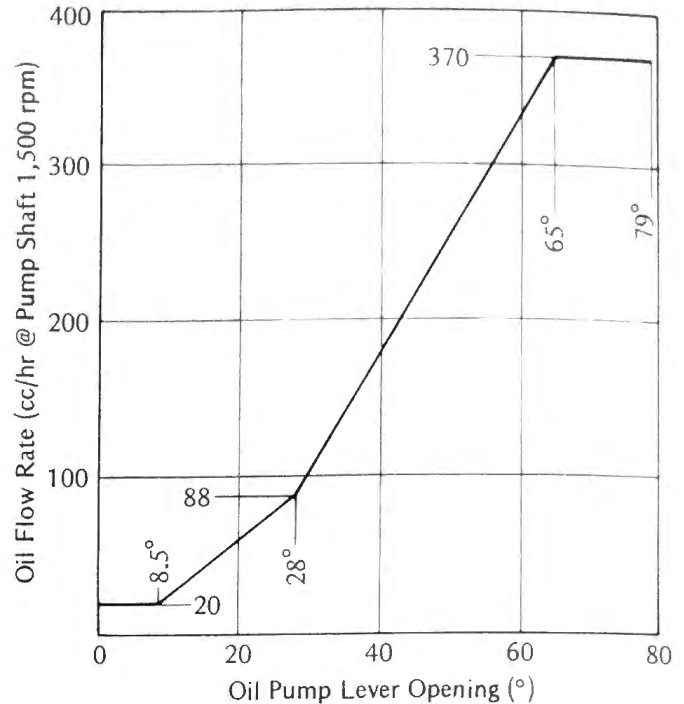

WHEELS

Refer to Pgs. 86 ~ 89 for the other information not specifically mentioned below.

Tires, Pressure (measured when cold)

Front:

Size: 2.75-19 4PR
Make: Yokohama Y962
Air Pressure: 1.5 kg/cm² (150 kpa, 21 psi)

Rear:

Size: 3.00-17 4PR
Make: Yokohama Y962
Air Pressure: Up to 97.5 kg load
2.0 kg/cm² (200 kpa, 28 psi)
97.5 ~ 150 kg load
2.25 kg/sm² (2.25 kpa, 32 psi)

Tire Tread Depth

Wheel	Standard	Service Limit
Front	7.3 mm	2 mm
Rear	8.7 mm	2 mm

DRIVE CHAIN

Refer to Pgs.93 ~ 94 for other information not specifically mentioned below.

- The 112-link Enuma EK428-G chain is used for the 40 tooth rear sprocket, and the 114-link Enuma EK428-G chain for the 42 tooth rear sprocket.

SPROCKETS

See Pgs.94 ~ 95, nothing the following information:


Rear Sprocket Diameter

Teeth No.	Standard	Service Limit
40T	153.92 mm	153.1 mm
42T	161.99 mm	161.1 mm

FRONT FORK

Refer to Pgs.135, noting the following:

Front Fork Spring Force

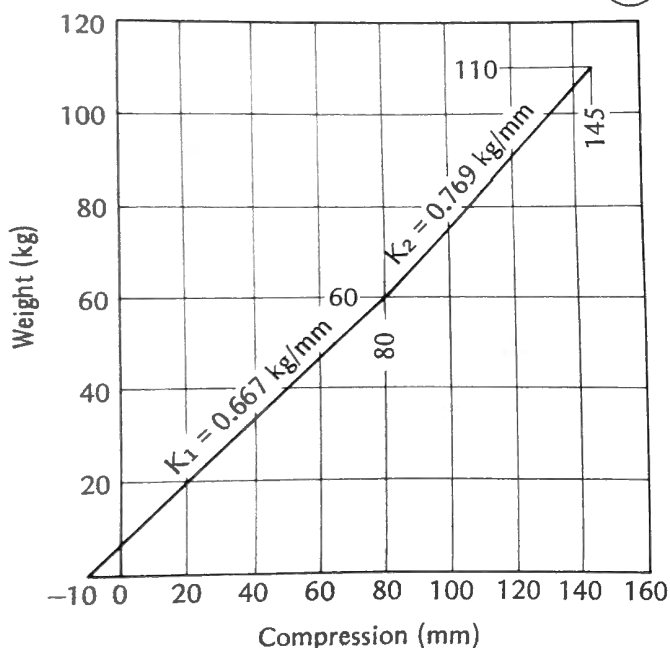

Type	SAE 10W
Capacity	$182 \pm 4 \text{ cc}$
*Oil Level	$408.5 \pm 2 \text{ mm}$ from top of inner tube

*Measured with the fork tube fully extended and with the spring removed.


Fork Spring Free Length

Standard:	420.5 mm
Service Limit:	412 mm

REAR SHOCK ABSORBERS

See Pg.99, nothing the following.

Rear Spring Force

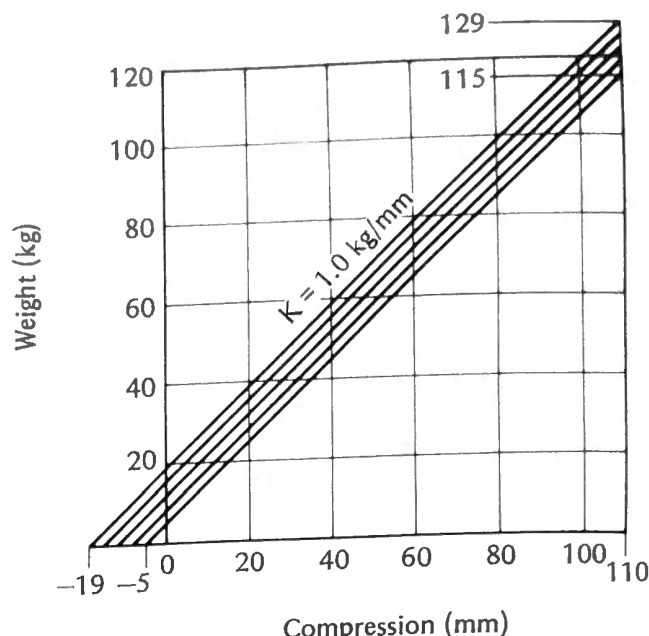

LIGHT/CHARGING SYSTEM

General Export Models

The lighting/charging coil and the lighting coil, which together with the ignition magneto coil make up the 3 coils mounted on the stator plate, are where the current is generated for the lighting/charging system.

Each coil consists of a wire wrapped around a laminated steel core. One end of each wire is grounded at one side of its core, and the other end leaves the core as an output lead-pink for the lighting/charging coil and yellow for the lighting coil. The lighting/charging coil is tapped part way by a light blue lead. The lightning/charging coil pink lead supplies the current for the nighttime DC circuit, while its light blue lead supplies the current for the daytime DC circuit. The lighting coil lead supplies the current for the AC circuit.

To meet safety standards for lighting at low rpm, the lighting/charging system includes a battery in conjunction with the magneto to supply the current to the turn signals; horn; and brake, neutral and tail lights. Since the battery, a DC device, must be charged by the magneto, and AC generator; a rectifier must be included in the DC part of the lighting/charging system so that only direct current will flow in the lighting/charging coil and the DC lighting and charging circuits.

Daytime and nighttime DC	Nighttime lighting AC
1. turn signals 2. horn 3. brake light 4. neutral light 5. tail light (nighttime only)	1. headlight 2. speedometer light 3. high beam indicator light

When the magneto flywheel rotates, magnetic flux cutting through these coils induces a current flow. As the engine speed increases, more magnetic flux cutting through the coils will increase the amount (amperage) and force (voltage) of this flow. But, to prevent an excessive current flow from burning out electrical components and overcharging the battery, the coil windings are designed to limit the amount of magnetic flux from the magneto magnets which may cut through the coils. The magnetic field that accompanies the current flow in the lighting/charging coil and lighting coil sector of the magneto will have sufficient opposition to the flywheel magneto magnetic field at high engine speed that the current flow which can be generated in the windings is limited to the maximum for which the circuit will accommodate.

However, a break (burned out bulb, missing battery, etc.), partial break (loose connection), short rectifier or bare wire touching frame, a bridge across the resistance in a component, etc), or partial short (bulb of too high a wattage) in any part of the lighting circuits will change the flux opposition. For example, if the headlight has burned out and the motorcycle is ridden with the ignition switch turned to the night position, not only will the other bulbs in the AC circuit be overloaded and burn out, but the increased resistance or break in the AC circuit will result in less or no current in the winding for the AC circuit.

The drop in the flux opposition produced by the winding used for the AC circuit allows more flux in the flywheel magnetic field to cut through the winding used for the DC circuit. The resulting excess DC voltage will blow the fuse or overcharge the battery and burn out DC circuit components. A short on the other hand may have the opposite effect, reducing the current for the components in both circuits.

If the voltage produced for the lighting/charging system is insufficient, the lights will not fully light up, and the battery will discharge. If the battery, rectifier, and ignition switch are all functioning properly, the circuit loads (horn and all lights) not defective and of the correct wattage, and the wiring all properly insulated with no loose or tarnished connections, then insufficient voltage means a defective coil or a defective flywheel. A short or break in one of the coil wires may result in either a low output or no output at all. A loss of flywheel magnetism, which may be caused by aging or the flywheel being dropped or struck, will result in a low output.


Lighting/Charging Coil and Lighting Coil:

Lighting/charging coil and lighting coil

The condition of the coils is determined by measuring the voltage of the AC output and the voltage and amperage of the daytime and nighttime DC outputs. Before making this test, check the condition of the battery and the rectifier. The battery must be charged if the voltage is less than 6 volts, and the rectifier replaced if defective. Also, check to see that all circuit loads (headlight, tail light, horn etc.) are of the correct wattage.

Lighting Voltage (AC voltage)


359

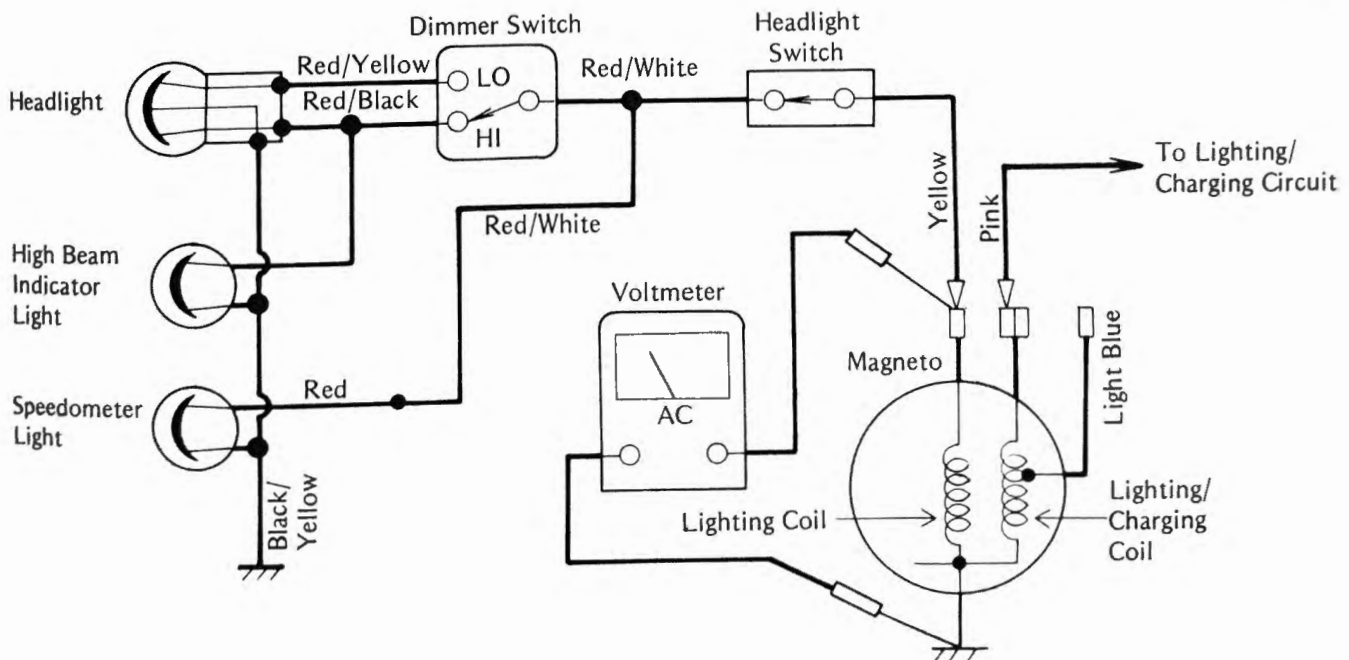

154 SUPPLEMENT - 1982 - 1996 MODEL


Charging Voltage (DC voltage)

360

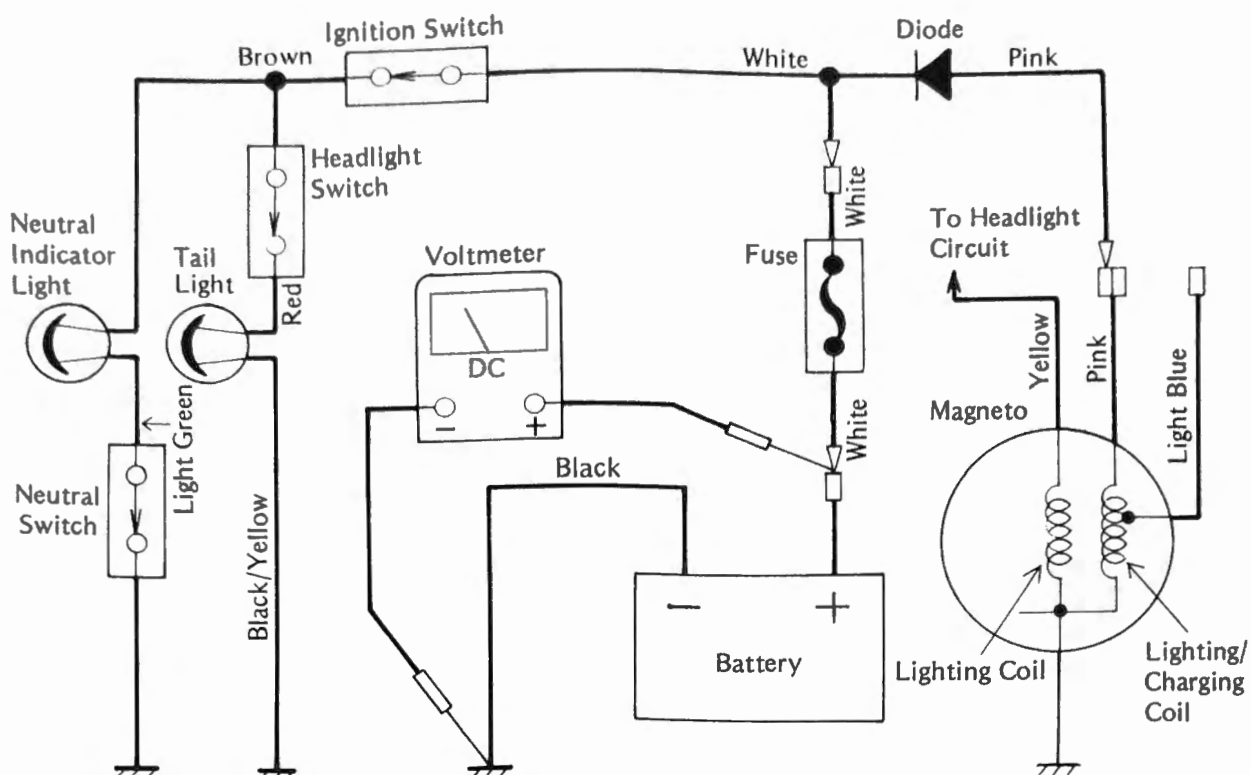

Charging Amperage (DC amperage)

361

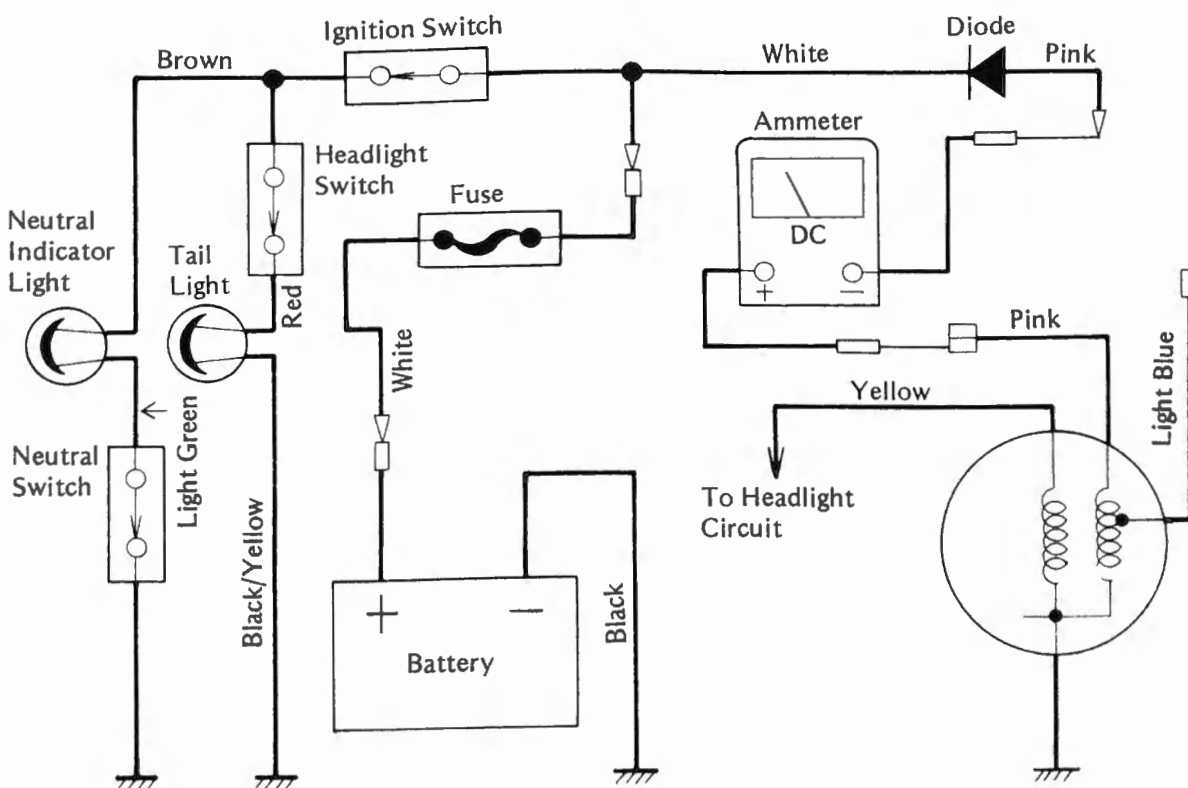

- To measure the AC voltage produced by the lighting coil, first switch on the headlight, tail light, high beam indicator light, and speedometer light by turning the headlight switch to the ON position and the dimmer switch to the high beam position.
- Start the engine, and set the engine speed at 4,000 rpm.
- See that these lights are all lit.
- Connect the multimeter, set to 12 or 30 V AC, in parallel across the AC Circuit load by connecting the + meter lead to the magneto yellow lead under the fuel tank and the - meter lead to ground. The voltage should be 6.5 ~ 7.1 V AC.
- Disconnect the meter leads.
- To measure the nighttime DC voltage produced by the lighting/ charging coil, connect the multimeter, set to 12 or 30 V DC, across the battery by connecting the - meter lead to the battery - terminal and the + lead to the battery + terminal. The voltage should be 7.3 ~ 8.9 V DC.
- Disconnect the meter leads, and turn off the engine.
- Set the multimeter to the 12 Amp DC range.
- Disconnect the magneto pink lead under the fuel tank.
- Connect the - meter lead to the pink lead on the main wiring harness side, and connect the + meter lead to the pink lead on the magneto side. This puts the meter in series with the rectifier and battery so that the battery charging amperage can be measured.
- Turn the ignition switch on with the headlight switch off, and start the engine.
- Set the engine to 4,000 rpm. The reading should be 0.95 ~ 2.0 amps (daytime charging amperage).
- To measure the nighttime charging amperage, first turn the headlight switch to the ON position. Check to see that the headlight, high beam indicator light, speedometer light, and tail light are all lit. The reading should be 0.4 ~ 0.6 amps. Turn off the engine. If any one of the above checks shows a low reading, the lighting/ charging system is not functioning satisfactorily. Since the components outside the magneto itself have been determined to be in proper order, the trouble must be either with the coils or with the magneto flywheel.
- Disconnect the magneto output leads under the fuel tank.


- Setting the multimeter to R $\times$ 1, measure the resistance between ground and each magneto output lead. The resistance between ground and pink should be 1.0 ~ 1.6 Ω and between ground and yellow, 0.4 ~ 0.8 Ω . Less than the proper resistance means a coil short; higher than the proper resistance or no reading at all means a break in the coils. In case of a short or break, replace the lighting/charging coils as a set.

If the coils have normal resistance, but the voltage and amperage checks show the lighting/charging system to be defective, then the permanent magnetos in the flywheel have probably weakened, necessitating flywheel replacement.

Rectifier

The rectifier, consisting of a diode mounted on a plate for heat dissipation, ensures that only direct current goes for charging the battery, lighting the tail light and operating the components of the daytime DC circuit. The reason that the rectifier only permits direct current to flow in the circuit in which it is included is that a diode conducts appreciable current in only one direction. However, a defective diode will conduct in both directions (shorted) or not conduct at all (open).

Diode

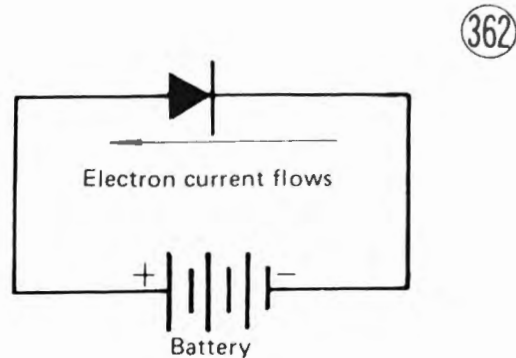

If the rectifier becomes defective, the battery will discharge. A defective rectifier can be readily detected with a resistance check.

NOTE

○ If the motorcycle is operated with the battery left unconnected, the rectifier will become damaged due to excessive inverse voltage.

Rectifier check

With the engine off, disconnect the blue/white rectifier lead from the blue/yellow lead, and disconnect the brown/white rectifier lead from the brown/white lead. Setting an ohmmeter to the R $\times$ 10 or R $\times$ 100 range, check the resistance between the blue/white and the brown/white rectifier leads. The resistance should be low in one direction and more than ten times as much in the other direction.

NOTE

○ The actual meter reading varies with the meter used and with the individual rectifier, but, generally speaking, the lower reading should be within 1/3 scale of zero ohms.

If the meter reads low or high in both directions, the rectifier is defective and must be replaced.

CDI IGNITION

(US and Canadian Models)


- (1) Flywheel Magneto Inspection
(KE100-B15 CDI system)

Tester Range	Connectors		Reading
	Tester(+)	Tester(-)	
$\times 1\Omega$	Black	Earth	89 ~ 135 Ω
$\times 1\Omega$	Yellow	Yellow	0.23 ~ 0.35 Ω

- (2) Regulator/Rectifier Inspection
(KE100-B15 CDI system)

- Turn off the ignition switch.
- Remove the left side cover.
- Disconnect the regulator/rectifier connector.
- Connect the multimeter to the terminals in the regulator/rectifier connector, and check the resistance of each diode in both directions following the table.

Regulator/Rectifier Connector Terminal

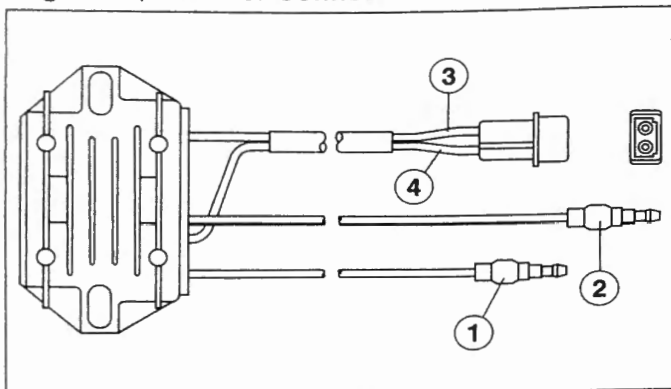

1. White/Black Lead Terminal
2. Black Lead Terminal
3. Yellow 1 Lead Terminal
4. Yellow 2 Lead Terminal

Rectifier Circuit Inspection

Unit: Ω

Range $\times 100\Omega$		Meter (+) Lead Connection				
Terminal		W/BK	Y1	Y2	BK	Body
Meter (-) Lead Connection	W/BK		∞	∞	∞	∞
	Y1	7		∞	∞	∞
	Y2	7	∞		∞	∞
	BK	50	7	7		∞
	Body	∞	∞	∞	∞	

NOTE

○ The actual meter reading varies with the meter used and the individual diode, but, generally speaking, the lower reading should be from zero to the first 1/2 of the scale.

★ If any two leads are low or high in both directions, the rectifier circuit is defective. The regulator/rectifier must be replaced as a set.

IGNITION COIL

Refer to Pg.103, noting the following.

- Remove the spark plug cap from the spark plug lead.
- Zero the ohmmeter, and connect it to the ignition coil.
- ★ If either primary or secondary winding does not have the correct resistance, replace the ignition coil.

Ignition Coil Resistance

- (1) General Export (KE100-B3 through B15)


Meter	Connection	Reading
$\times 1\Omega$	terminal - ground	1.2 ~ 2.2 Ω (Primary)
$\times 1k\Omega$	plug lead - ground	6.5 ~ 10k Ω (secondary)

- (2) US and Canadian models (KE100-B3 through B14)

Meter	Connection	Reading
$\times 1\Omega$	terminal - ground	1.9 ~ 2.5 Ω (Primary)
$\times 1k\Omega$	plug lead - ground	8 ~ 12k Ω (secondary)

- (3) US and Canadian models (KE100-B15 CDI System)

Meter	Connection	Reading
$\times 1k\Omega$	plug lead - ground	5 ~ 7.6 k Ω

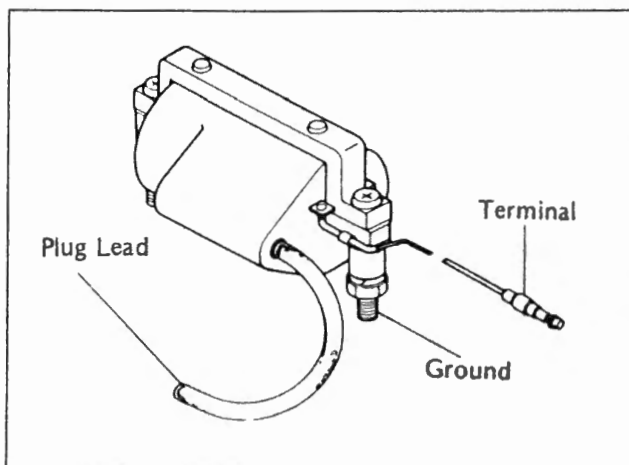

Appendix

PERIODIC MAINTENANCE CHART (KE100-B1 ~ KE100-B14)

The maintenance and adjustments must be done in accordance with this chart to keep the motorcycle in good running condition. The initial maintenance is vitally important and must not be neglected.

OPERATION	FREQUENCY	Which ever comes first ↓	ODOMETER READING* →							See Page
			800 km	4000 km	8000 km	12000 km	16000 km	20000 km	24000 km	
Battery electrolyte level - check †	Every month	•	•	•	•	•	•	•	•	-
Brake play - check †		•	•	•	•	•	•	•	•	14
Brake light switch - check †		•	•	•	•	•	•	•	•	16
Brake lining wear - check †			•	•	•	•	•	•	•	15
Clutch - adjust		•	•	•	•	•	•	•	•	13
Idle speed - check †		•	•	•	•	•	•	•	•	10
Throttle grip play - check †		•	•	•	•	•	•	•	•	9
Oil pump and carburetor cynchromization - check †		•	•	•	•	•	•	•	•	10
Steering play - check †		•	•	•	•	•	•	•	•	14
Spoke tightness and rim runout - check †		•	•	•	•	•	•	•	•	89
Drive chain wear - check †			•	•	•	•	•	•	•	93
Nut, bolt, and fastener - check †		•		•		•		•		122 ~ 123
Spark plug - clean and gap †		•	•	•	•	•	•	•	•	11
Ignition timing - check †		•	•	•	•	•	•	•	•	11
Air cleaner element - clean			•		•		•			61 for (U) and (C) 142 for (O)
Air cleaner element - replace	5 cleanings	•		•		•				61 for (U) and (C) 142 for (O)
Fuel system - clean				•		•		•		86
Tire wear - check †			•	•	•	•	•	•	•	151
Transmission oil - change	year	•		•	•		•	•		120
General lubrication - perform			•	•	•	•	•	•	•	120
Front fork oil seal - clean			•	•	•	•	•	•	•	-
Front fork oil - change				•		•		•		152
Wheel bearing - lubricate	2 years	•		•		•		•		90
Speedometer gear - lubricate	2 years					•				90
Brake camshaft - lubricate	2 years					•				92
Steering stem bearing - lubricate	2 years					•				95
Fuel hose - replace	4 years									-
Brake cable - replace	2 years									-
Drive chain - lubricate	300 km									93
Drive chain slack - check †	800 km									16

* For higher odometer readings repeat the frequency interval, established here.

† Replace, and, adjust or torque if necessary.

(U): US model (C): Canadian model

(O): Models other than US and Canadian models

158 SUPPLEMENT - 1982 - 1996 MODEL

Periodic Maintenance Chart (KE100-B15)

The scheduled maintenance must be done in accordance with this chart to keep the motorcycle in good running condition. **The initial maintenance is vitally important and must not be neglected.**

running condition. The initial maintenance is vitally important and must not be neglected.									
OPERATION	FREQUENCY	Whichever comes first ↓	* ODOMETER READING						
			Every	1 000 km (600 mile)	5 000 km (3 000 mile)	10 000 km (6 000 mile)	15 000 km (9 000 mile)	20 000 km (12 000 mile)	25 000 km (15 000 mile)
Spark plug – clean and gap †			•	•	•	•	•	•	11
Throttle grip play – check †			•	(•)	•	(•)	•	(•)	9
Oil pump and carburetor synchronization –check †			•	(•)	•	(•)	•	(•)	10
Idle speed – check †			•	(•)	•	(•)	•	(•)	10
Fuel System – check									86
Cylinder head bolt or nut tightness – check†			•		(•)		(•)	(•)	–
Spark arrestor – clean(US Regulation)				•	•	•	•	•	–
Transmission oil – change	6 months		•	•	•	•	•	•	120
Clutch – adjust			•	•	•	•	•	•	13
Drive chain wear –check † #				•	•	•	•	•	93
Drive chain –lubricate #	600 km								93
Drive chain slack – check † #	1000 km								16
Brake lining or pad wear – check †#				•	•	•	•	•	15
Brake play – check†			•	•	•	•	•	•	14
Brake light switch – check †			•	•	•	•	•	•	16
Brake cable – replace	2 years						•		–
Steering – check †			•	•	•	•	•	•	–
Steering stem bearing – lubricate	2 years						•		95
Front fork oil – change	2 years						•		152
Front fork oil leak – check †					•		•	•	–
Rear shock absorber oil leak – check †					•		•	•	–
Tire wear – check †				•	•	•	•	•	151
Spork tightness and rim runout – check †			•	•	•	•	•	•	89
Battery electrolyte level – check†	6 months			•	•	•	•	•	–
General lubrication – perform					•		•	•	120
Nut, bolt, and fastener tightness – check †			•		•		•	•	122 ~ 123


: Service more frequently when operating in severe conditions, dusty, wet, muddy, high speed, or frequent starting/stopping.

* : For higher odometer readings, repeat at the frequency interval established here.

† : Replace, add, adjust, clean, or torque if necessary.


(•):For US model and Canadian only

KE100-B1 through-B14 Wiring Diagram
(U.S., Canadian models)

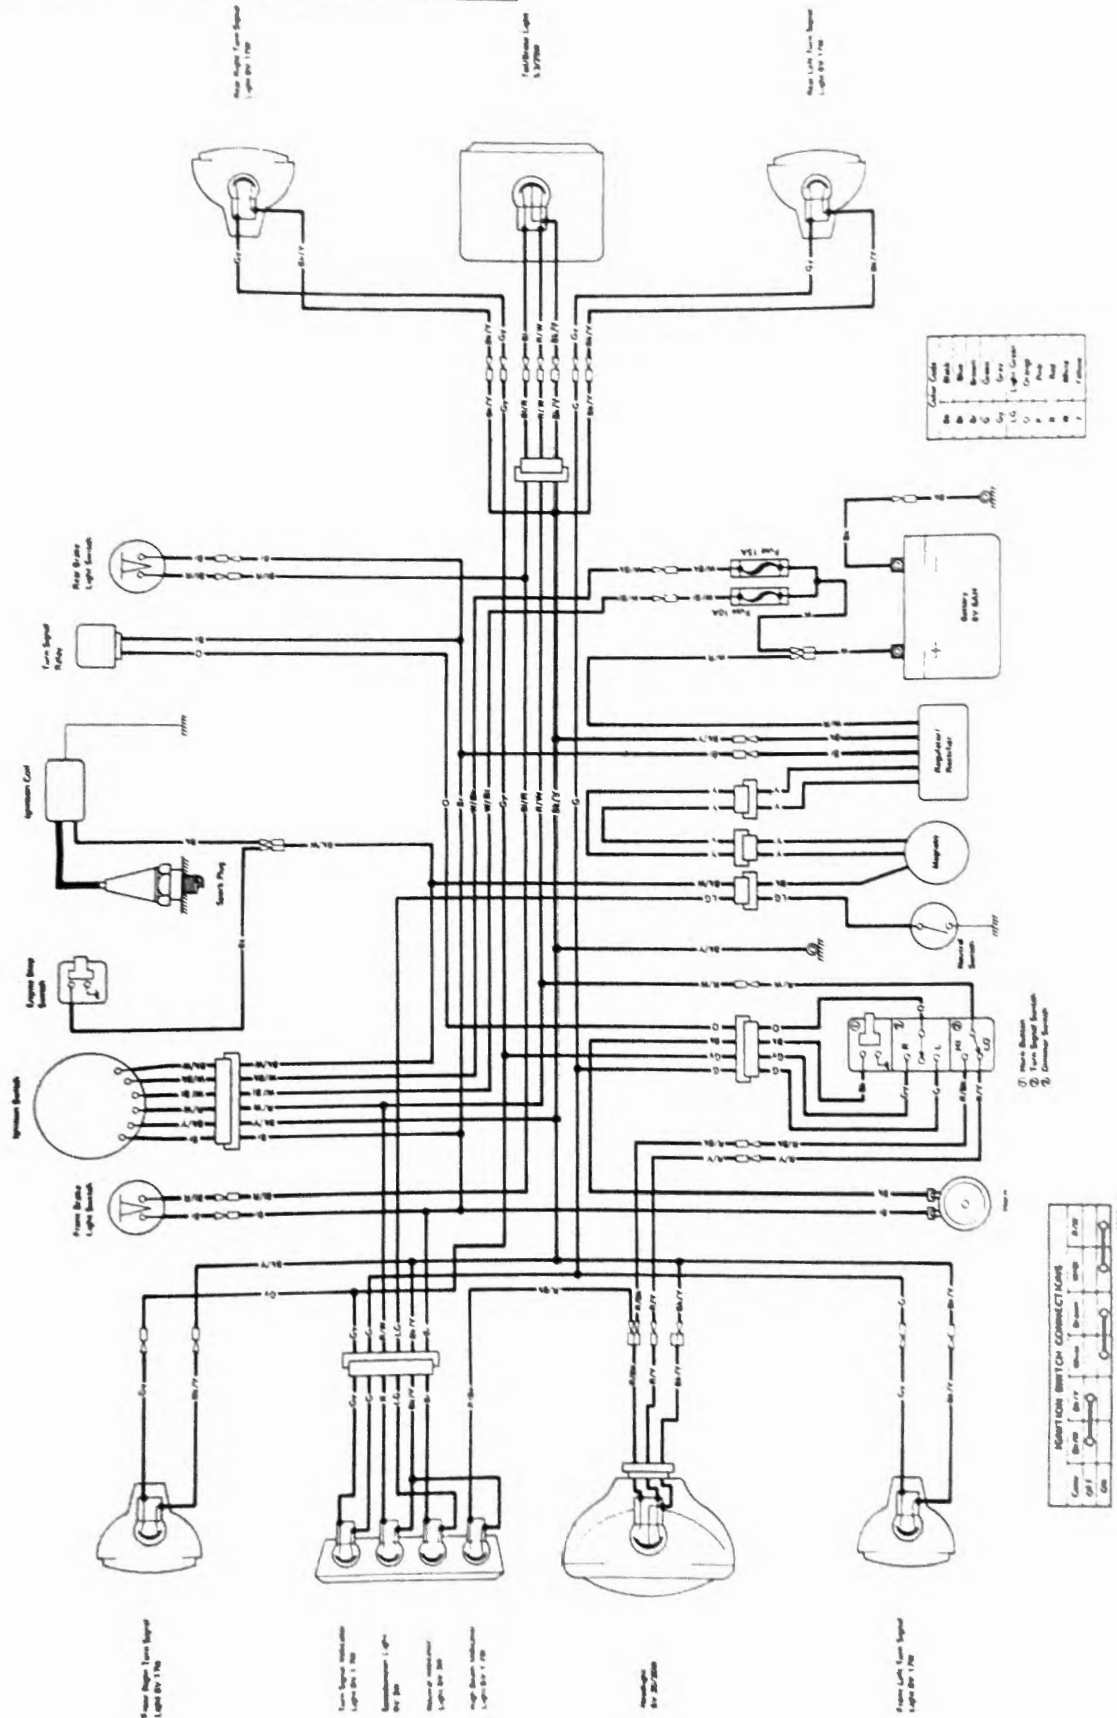

160 SUPPLEMENT - 1982 - 1996 MODEL

KE100-B15 Wiring Diagram (U.S., Canadian models)

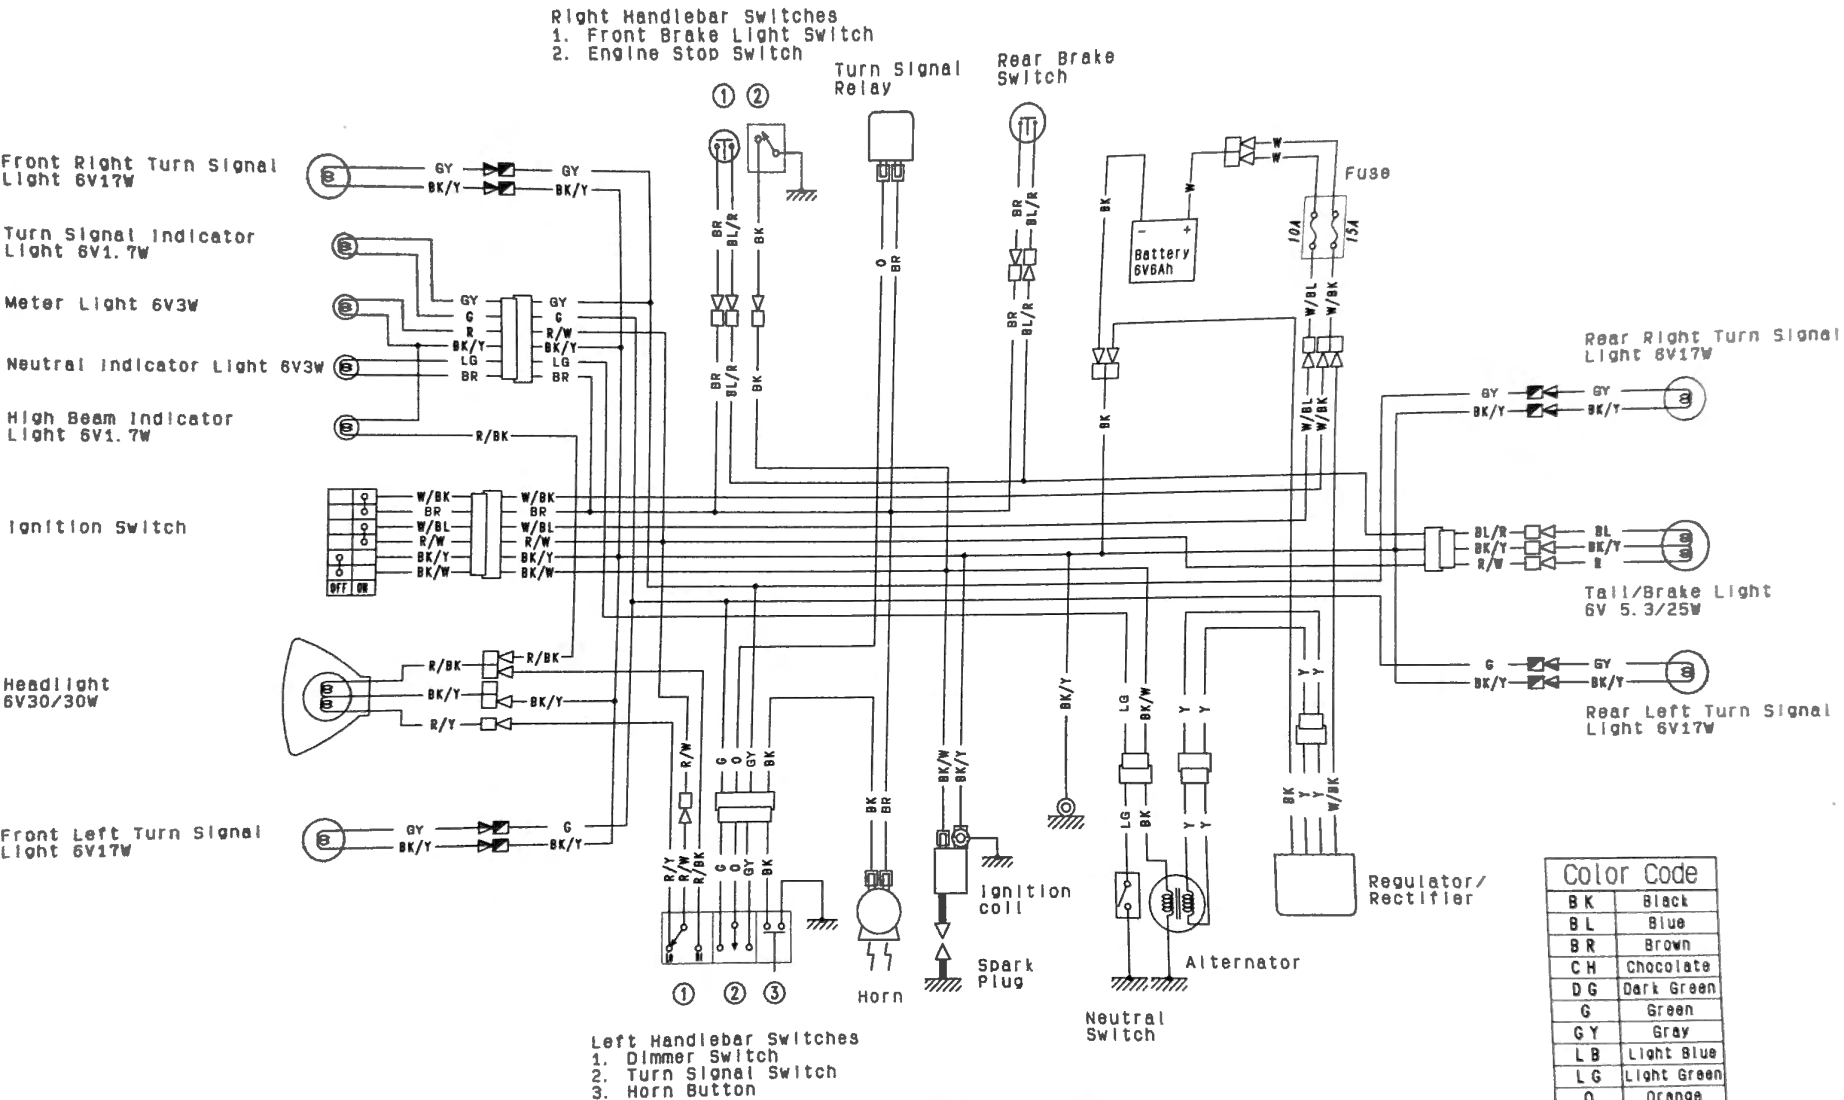

LEFT HANDLEBAR SWITCH CONNECTIONS									
Horn Button		Turn Signal Switch		Dimmer Switch					
Color	BK	Color	G	Color	O	Color	R/Y	R/W	R/BK
Push	Off (Push)	L	On (Push)	HI	On (Push)				
		R		LO					


RIGHT HANDLEBAR SWITCH CONNECTIONS					
Front Brake Light Switch			Engine Stop Switch		
Color	BR	BL/R	Color	BK	
Brake Lever	Off		OFF		
Pulled In	On		RUN		

Color Code	
BK	Black
BL	Blue
BR	Brown
CH	Chocolate
DG	Dark Green
G	Green
GY	Gray
LB	Light Blue
LG	Light Green
O	Orange
P	Pink
PU	Purple
R	Red
W	White
Y	Yellow

(98051-1589B)

160 SUPPLEMENT - 1982 - 1996 MODEL

KE100-B15 Wiring Diagram (U.S., Canadian models)

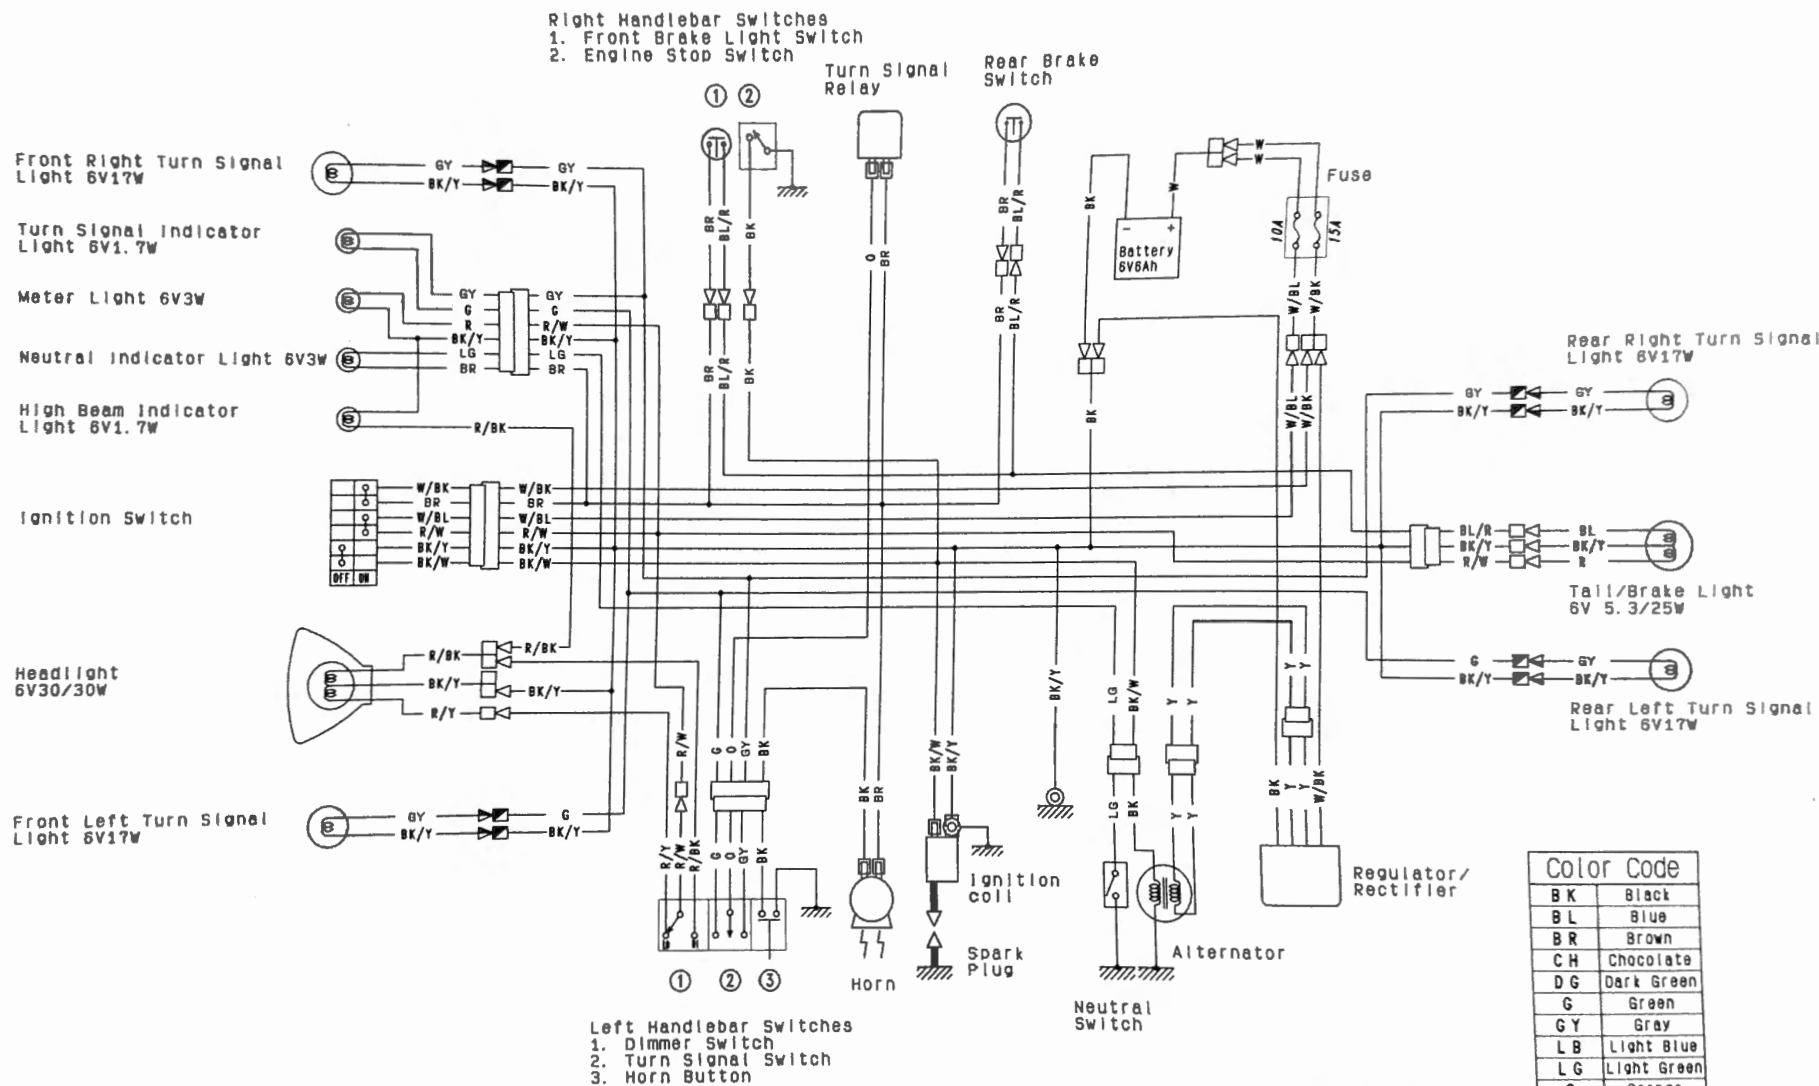


LEFT HANDLEBAR SWITCH CONNECTIONS				
Horn Button	Turn Signal Switch	Dimmer Switch		
Color	BK	Color	G	O
Push	OFF (Push)	L	HI	LO
		R		

RIGHT HANDLEBAR SWITCH CONNECTIONS				
Front Brake Light Switch	Engine Stop Switch			
Color	BR	BL/R	Color	BK
Brake Lever	OFF			
Pulled in	RUN			

Color Code	
BK	Black
BL	Blue
BR	Brown
CH	Chocolate
DG	Dark Green
G	Green
GY	Gray
LB	Light Blue
LG	Light Green
O	Orange
P	Pink
PU	Purple
R	Red
W	White
Y	Yellow


(98051-15898)

KE100-B1 through-B10 Wiring Diagram (U.K., General models)

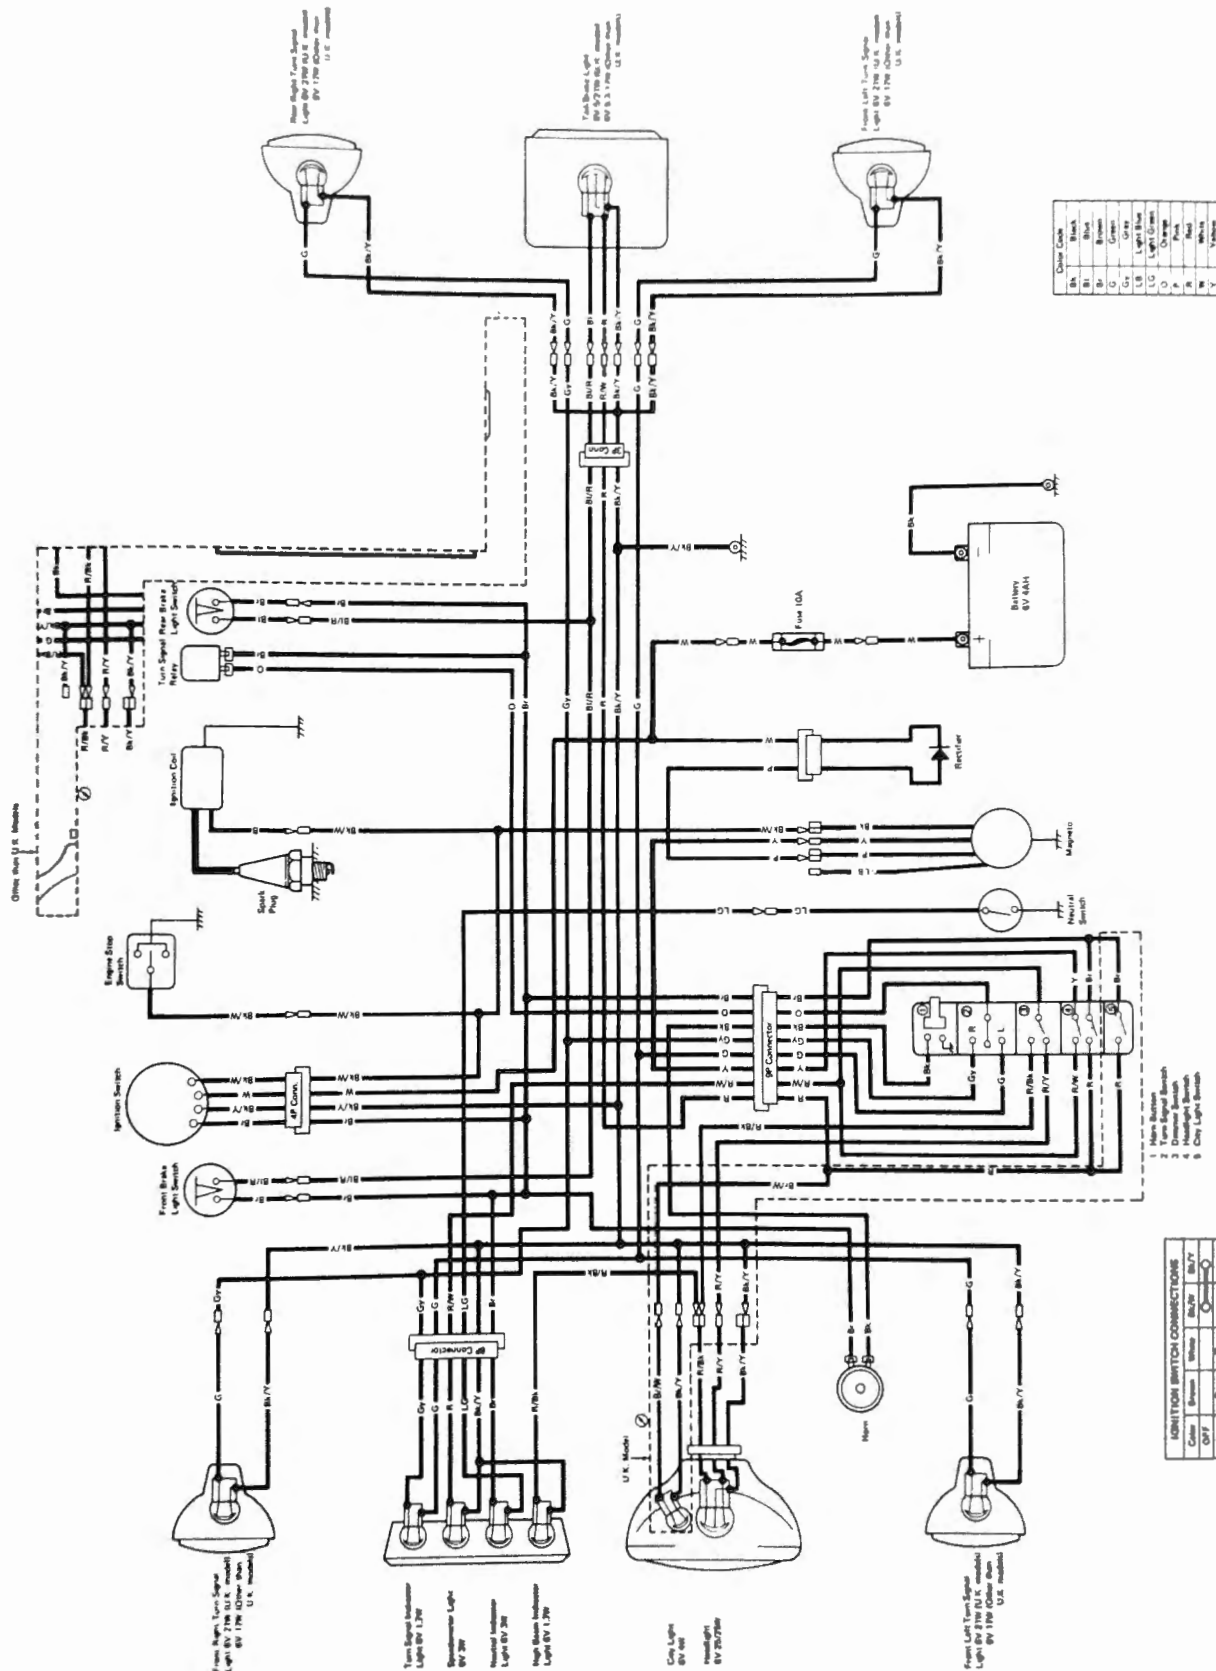

162 SUPPLEMENT - 1982 - 1996 MODEL

KE100-B1, B13 Wiring Diagram (U.K., General models)

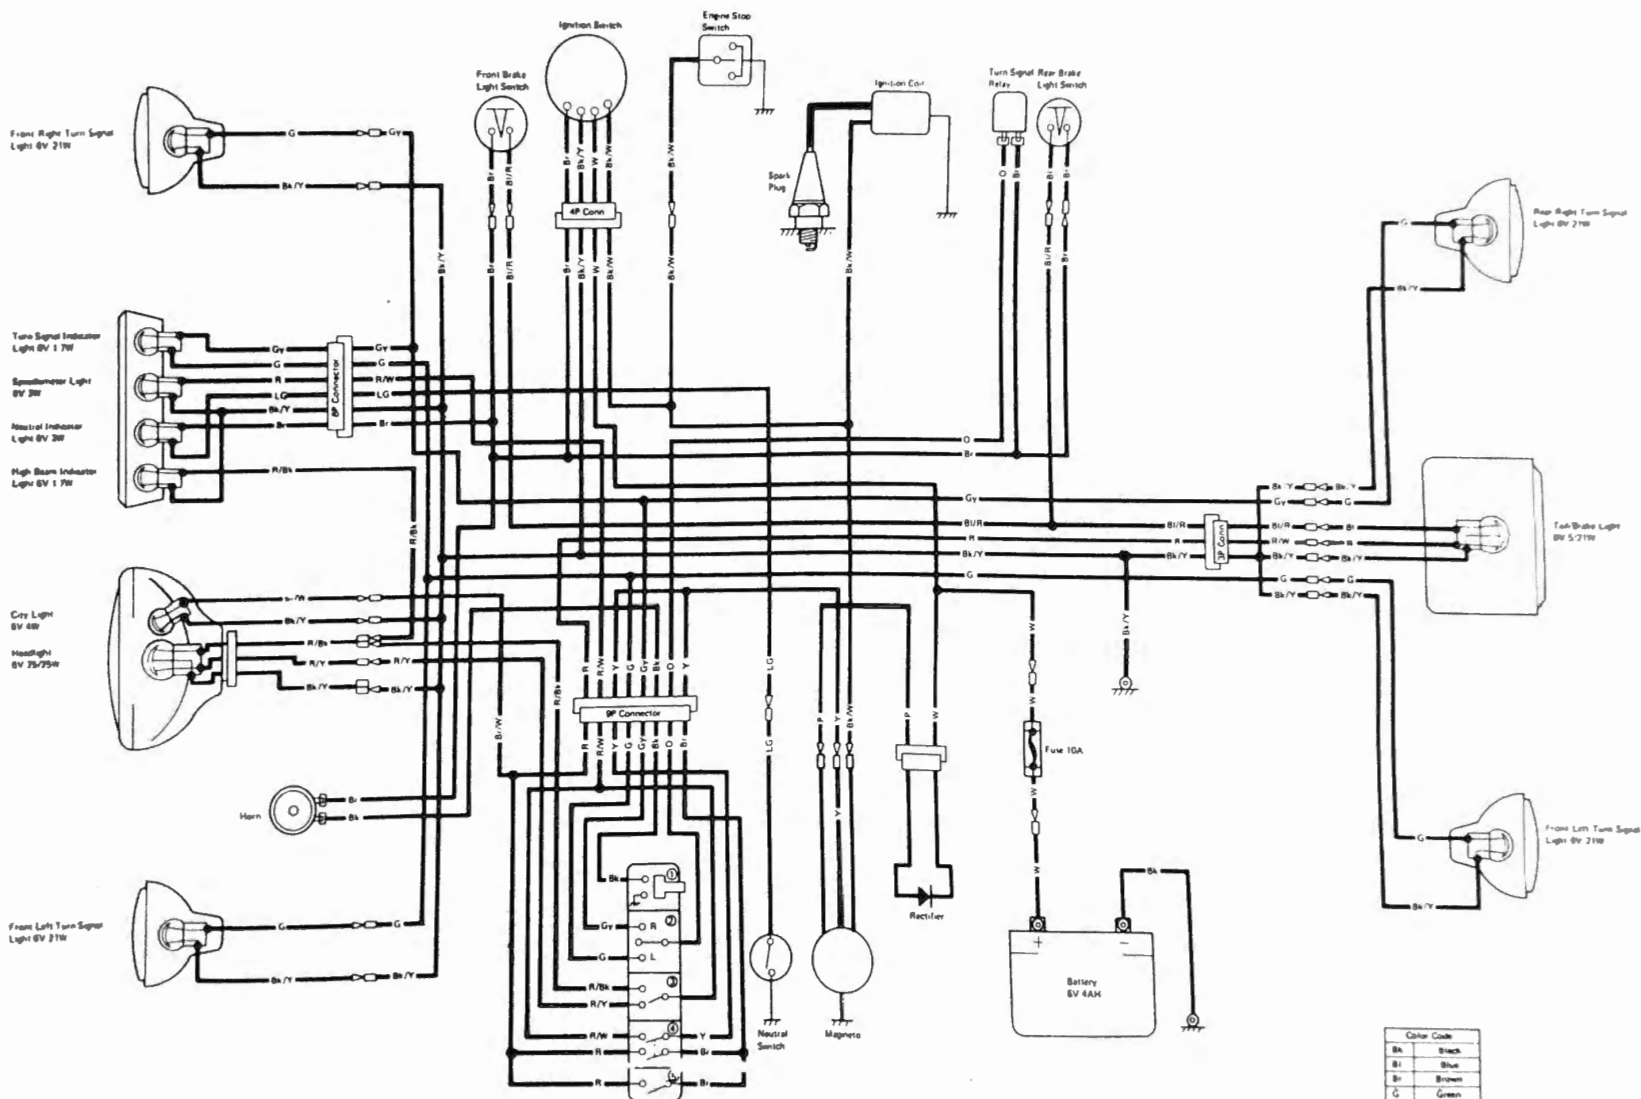

IGNITION SWITCH CONNECTIONS			
Color	Brown	White	Bl/Y
OFF			
ON			

98051-1296

1. Horn Button
2. Turn Signal Switch
3. Clutch Switch
4. Headlight Switch
5. City Light Switch

Color Code	
Bk	Black
Bl	Blue
Br	Brown
G	Green
Gy	Grey
LB	Light Blue
LG	Light Green
O	Orange
P	Pink
R	Red
W	White
Y	Yellow

Index

Additional considerations for racing	115	Front brake	44 ~ 45
Air cleaner	61, 148	Front brake cable	52 ~ 53
Air cleaner element	23	Front brake cam lever	15
Automatic sidestand return mechanism	160	Front brake lever	15
Axle	90	Front brake light switch	55
		Front fork	55 ~ 58, 96 ~ 99, 152
Battery	107 ~ 109	Front hub	45 ~ 46
Bearing - engine	85 ~ 86	Friction plate	75
Bearing - wheel	90 ~ 91	Front wheel	44 ~ 46
Bearing - steering stem	59 ~ 60, 95, 96	Fuel tank	44, 86
Brakes	14 ~ 16, 91 ~ 93		
Brake drum	91	General lubrication	120 ~ 121
Brake light	111	Grease seals	90 ~ 91, 96
Brake light switch	16		
Brake shoe lining	92	Handlebar	49 ~ 50
Brake shoe spring	92	Headlight	17, 53 ~ 54, 110
Brake light circuit	111 ~ 112	Headlight circuit	110 ~ 111
Bushings	85 ~ 86, 99	Horn	17 ~ 18, 114
		Horn circuit	114
Camshaft	92		
Carburetor	11, 26 ~ 28, 51 ~ 52, 61 ~ 66, 115, 145, 148	Ignition coil	32 ~ 33, 103, 162
Carburetor cable	9 ~ 10	Ignition magneto coil	103 ~ 104
CDI Ignition	156	Ignition switch	54 ~ 55, 100
Charging System	103	Ignition system	100 ~ 104
Check valve	84	Ignition timing	11 ~ 13
Clutch	13 ~ 14, 29 ~ 30, 73 ~ 76	Inner tube - front fork	99
Clutch cable	50		
Clutch housing gear	75 ~ 76	Kickstater	80 ~ 81
Clutch hub	76	Kick gear	81
Clutch plate	75		
Clutch release gear	76	Left crankcase	42 ~ 43
Clutch spring	74 ~ 75, 151	Lighting/charging oil	104 ~ 106
Condenser	34, 103		
Connecting rod	70, 71 ~ 72	Magneto flywheel	33
Contact breaker	34, 102 ~ 103	Magneto stator	33 ~ 34
Crankcase	42 ~ 43	Main system	64 ~ 65
Crankshaft	41 ~ 42, 71 ~ 73	Muffler	23 ~ 24, 100
Cylinder	24, 66 ~ 70		
Cylinder head	24, 71	Needle bearing	70
		Neutral switch	33
Damper	95		
Drive chain	16 ~ 17, 31 ~ 32, 93 ~ 94	Oil pump	25 ~ 26, 82 ~ 84
Drive shaft	39 ~ 41, 76	Oil pump cable	10, 51 ~ 52
Drive shaft idle gear	81	Oil seal	85 ~ 86
		Output shaft	41
Electrolyte	107 ~ 108	Output shaft idle gear	81
Engine	19 ~ 23	Periodic Maintenance Chart	119, 157
Engine bearing	85 ~ 86		
Engine lubrication system	82 ~ 84	Pawl	81
Engine oil tank	23	Pawl spring	81
External shift mechanism	34 ~ 35, 79	Pilot system	63 ~ 64
Engine sprocket	32	Piston	24 ~ 25, 66 ~ 70
		Piston pin	70
Float system	65 ~ 66	Piston rings	24 ~ 25, 70, 150
Fork oil	97	Pivot shaft	99 ~ 100

164 SUPPLEMENT - 1982 - 1996 MODEL

Rear brake	48
Rear brake pedal	15 ~ 16
Rear brake cam lever	15
Rear brake light switch	47 ~ 48
Rear coupling	47 ~ 48
Rear hub	47
Rear shock absorbers	17, 60, 99
Rear sprocket	94
Rear wheel	46 ~ 48
Rear wheel coupling	95 ~ 96
Right crankcase	43
Right engine cover	28 ~ 29
Rim	48 ~ 49, 89 ~ 90
Rotary disc valve	30 ~ 31, 84 ~ 85
Shift drum	39
Shift fork	79
Shift fork guide pin	79
Spark plug	11, 109 ~ 110, 115
Speedometer	114
Speedometer cable	53
Spoke	49, 89 ~ 90
Spring-front fork	97
Sprockets	94 ~ 95, 152
Starter system	62 ~ 63
Steering	14
Steering stem	57 ~ 59, 95 ~ 96
Steering stem bearing	59 ~ 60, 95, 96

Supplement	131
For 1980, 1981 Models	132
For 1982 through 1996 Models	136
Swing arm	60, 99 ~ 100
Tail light	112
Tail light circuit	111 ~ 112
Throttle control cable	9 ~ 10, 51 ~ 52
Throttle grip cable	9
Tire	48, 88 ~ 89
Transmission	35 ~ 41, 76 ~ 81
Transmission oil	120
Tube	48
Turn signals	112 ~ 114
Valve cover	85
Wheel	44 ~ 46, 86 ~ 87, 151
Wheel bearing	90 ~ 91
Wiring Diagram	129, 159 ~ 162

MODEL APPLICATION

Year	Model	Beginning Frame No.
1979	KE100-A8 US Model	G5-126001
1980	KE100-A9 US Model	G5-134101
1981	KE100-A10 US Model	G5-144901, or JKAKETA1□BA146431
1982	KE100-B1	JKAKETB1□CA000001, or KE100B-000001
1983	KE100-B2	JKAKETB1□DA004001, or KE100B-004001
1984	KE100-B3	JKAKETB1□EA007101, or KE100B-007101
1985	KE100-B4	JKAKETB1□FA009201, or KE100B-009201
1986	KE100-B5	JKAKETB1□GA010501, or KE100B-010501
1987	KE100-B6	JKAKETB1□HA013301, or KE100B-013301
1988	KE100-B7	JKAKETB1□JA016001, or KE100B-016001
1989	KE100-B8	JKAKETB1□KA019001, or KE100B-019001
1990	KE100-B9	JKAKETB1□LA020501, or KE100B-020501
1991	KE100-B10	JKAKETB1□MA024001, or KE100B-024001
1992	KE100-B11	JKAKETB1□NC030001, or KE100B-030001
1993	KE100-B12	JKAKETB1□PC032002
1994	KE100-B13	JKAKETB1□RC035702, or KE100B-035702
1995	KE100-B14	JKAKETB1□SC039102
1996	KE100-B15	JKAKETB1□TC041602, or KE100B-041602

□: This digit in the frame number changes from one machine to another.



KAWASAKI HEAVY INDUSTRIES, LTD.
Consumer Products Group

Part No. 99924-1011-06

Printed in Japan