 
 


CYLINDER HEAD

Ref No	Part No	Description
1	11100-14A02	Head Assy,cylinder
1	11100-14A03	Head Assy,cylinder
2	11115-37470	• . Guide,valve
3	09381-10003	• . Ring,valve Guide
4	09206-08001	• . Pin
5	01517-06605	• . Bolt (6x60)
6	09103-06040	• . Bolt (6x55)
7	11141-14A01	Gasket,cylinder Head
8	09206-13001	Pin
9	01517-06254	Bolt (6x25)
10	01517-06404	Bolt (6x40)
11	09108-08161	Bolt,stud
12	09108-08162	Bolt,stud (m12/8)
13	09103-06085	Bolt (6x130)
14	01517-06605	Bolt (6x60)
15	09168-06023	Washer
16	09159-10026	Nut
17	08316-16105	Nut
18	08316-16085	Nut
19	09160-10039	Washer
20	09160-10093	Washer
21	09168-10017	Gasket
22	09248-14004	Plug,head Cover
23	09168-14004	Gasket
24	09482-00330	Spark Plug (ngk,dpr9ea-9)
24	09482-00331-111	Spark Plug (nd,x27ep-r-u9)
24	09482-00328	Spark Plug (ngk,dp9ea-9)
24	09482-00329-111	Spark Plug (nd,x27ep-u9)
25	11175-14A00	Cap,inspection
26	09280-60004	O Ring
27	01517-06254	Bolt
28	09241-30004	Plug,head
29	09103-08082	Bolt (8x50)
30	08319-31085	Nut
31	13110-14A02	Pipe,intake
31	13110-14A11	Pipe,intake
31	13110-14A20	Pipe,intake
32	09280-46002	O Ring
33	02152-06205	Screw
34	09402-54208	Clamp
34	09402-58208	Clamp
35	12944-14A00	Holder,decomp Cable,rh
36	07110-08165	Bolt
37	11401-14823	Gasket Set
37	11401-14823-H17	Gasket Set (na)


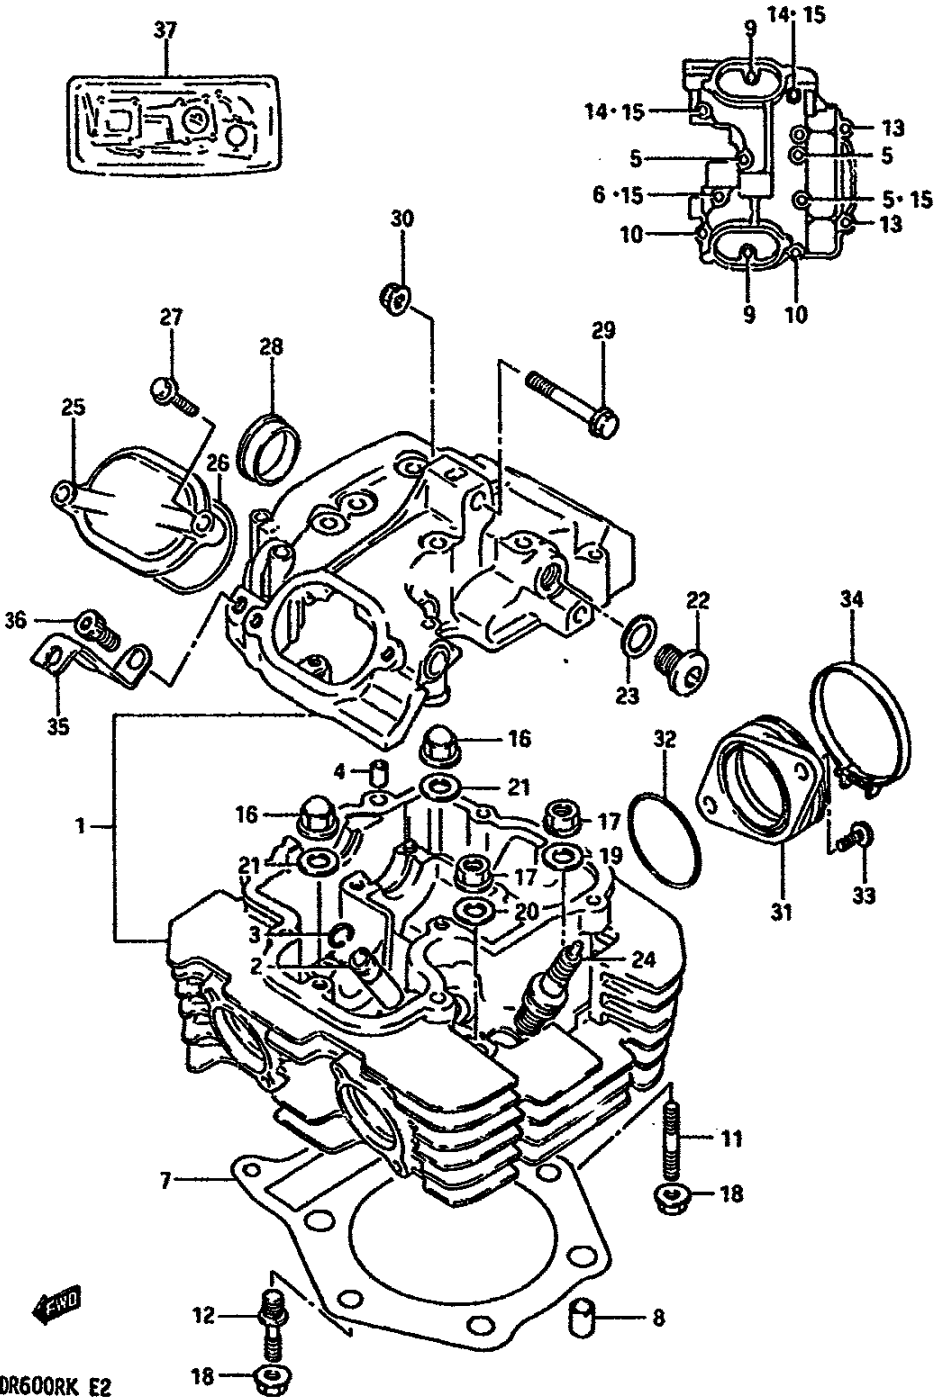


DR600RK E2

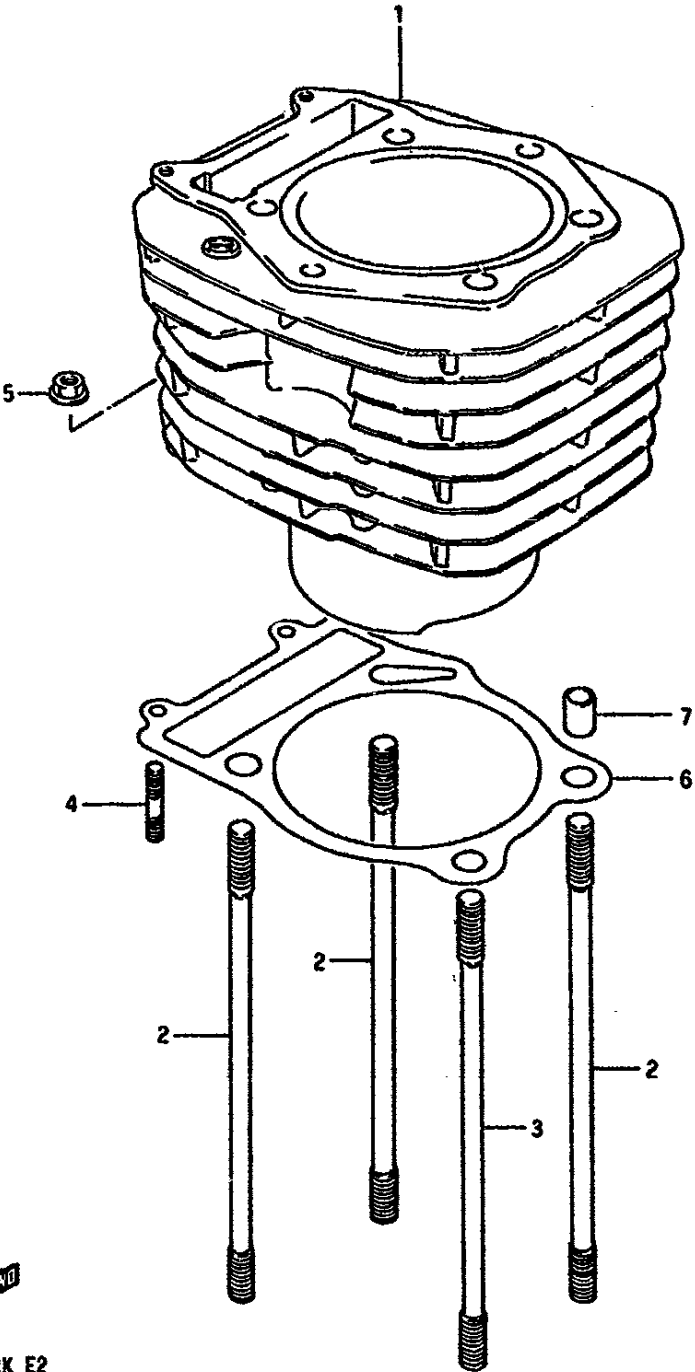


DR600RK E2

Ref No	Part No	Description
1	11210-14A02	Cylinder
2	09108-10039	Stud Bolt (l:178)
3	09108-10075	Stud Bolt (l:180)
4	01421-06205	Stud Bolt (l:20)
5	08316-16064	Nut
6	11241-14A01	Gasket,cylinder
6	11241-14A01-H17	Gasket,cylinder (na)
7	09206-13001	Pin

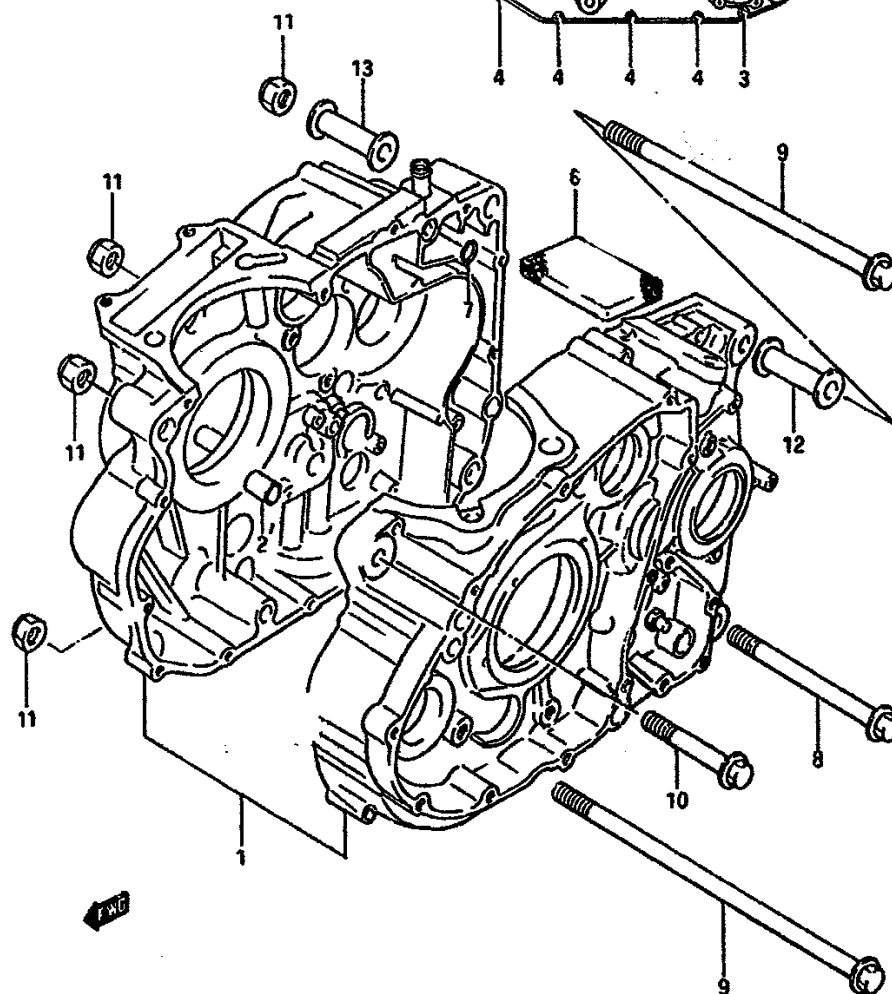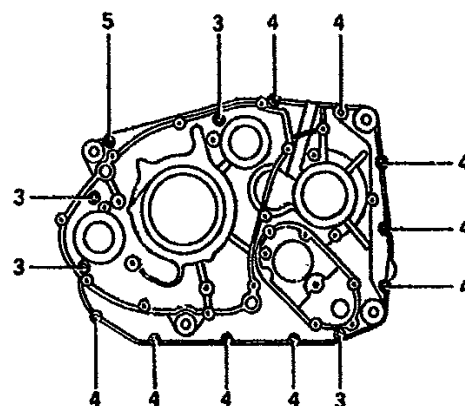  


DR600RK E2

Ref No	Part No	Description
1	11300-14A01	Crankcase Set
1	11300-14A02	Crankcase Set
2	09206-13001	• . Pin
3	01547-06605	• . Bolt (6x60)
4	01547-06404	• . Bolt (6x40)
5	01547-06304	• . Bolt (6x30)
6	11328-14A01	Separator,oil Breather
7	09280-09004	O Ring,oil Gallery
8	09103-10141	Bolt (10x125)
9	09103-10093	Bolt (10x225)
10	09103-10098	Bolt (10x80)
11	09159-10047	Nut
12	11610-14A00	Spacer (l:55)
13	11610-14A10	Spacer (l:60)

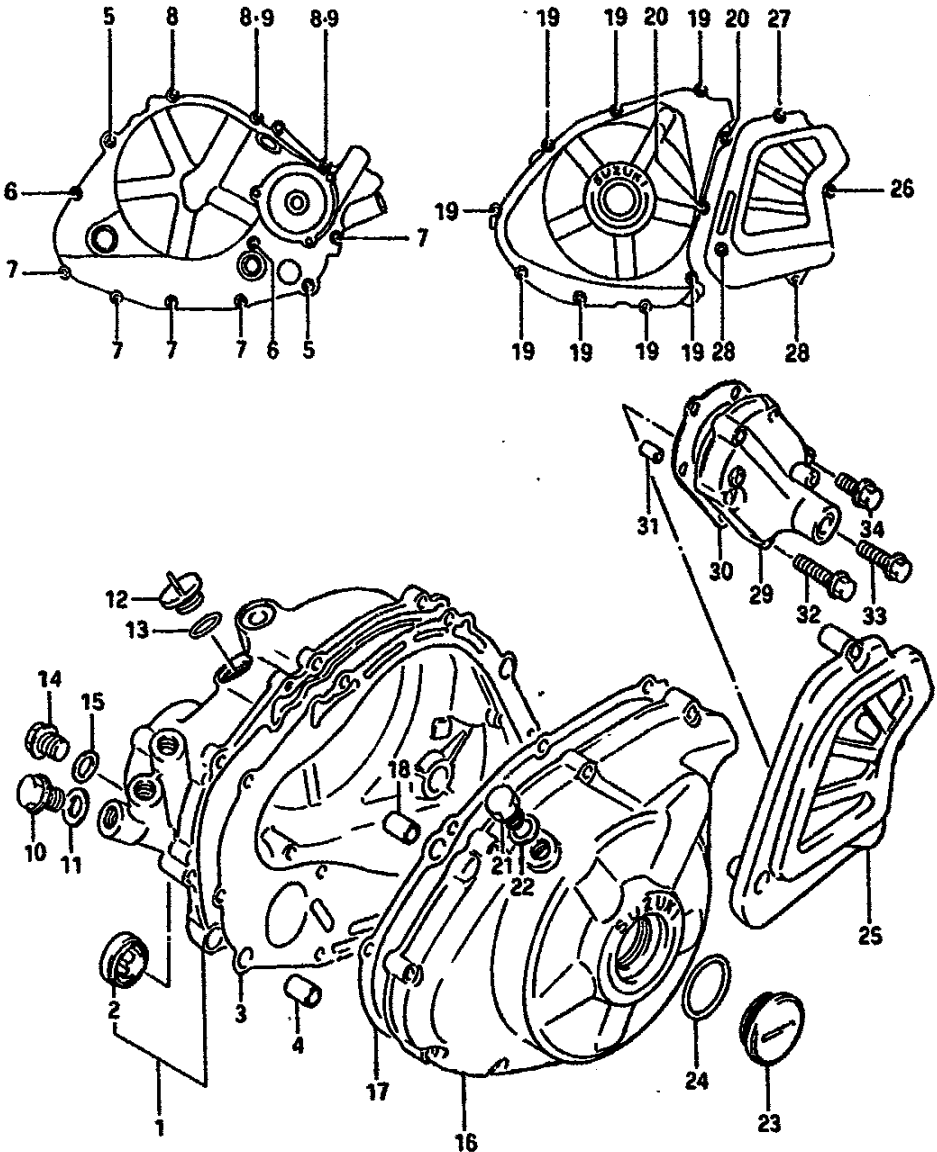 

Ref No	Part No	Description
1	11340-14A03	Cover,clutch
1	11340-14A04	Cover,clutch
2	11971-33210	• . Lens,oil Level
3	11482-14A01	Gasket,clutch Cover
3	11482-14A02	Gasket,clutch Cover
3	11482-14A03	Gasket,clutch Cover
3	11482-14A03-H17	Gasket,clutch Cover (na)
4	09206-13001	Pin
5	01547-06505	Bolt (6x50)
6	01547-06404	Bolt (6x40)
7	01547-06354	Bolt (6x35)
8	01547-06254	Bolt (6x25)
9	09168-06023	Gasket
10	09247-14015	Plug,oil Gallery
11	09168-14004	Gasket
12	09259-20013	Plug,oil Filler
13	09280-17003	O Ring
14	09247-14015	Plug,oil Check
15	09168-14004	Gasket
16	11351-14A10	Cover,magneto
17	11483-14A00	Gasket,magneto Cover
17	11483-14A00-H17	Gasket,magneto Cover (na)
18	09206-13001	Pin
19	01547-06304	Bolt (6x30)
20	01547-06254	Bolt (6x25)
21	09247-12103	Plug,t.d.c
22	09168-12002	Gasket
23	09259-36007	Plug
24	09280-33004	O Ring
25	11361-14A01	Cover,engine Sprocket
26	01547-06454	Bolt (6x45)
27	01547-06354	Bolt (6x35)
28	01547-06205	Bolt (6x20)
29	11371-37400	Cover,gear Shift
30	11485-14A00	Gasket,gear Shift Cover
30	11485-14A00-H17	Gasket,gear Shift Cover (na)
31	04211-09129	Pin
32	01547-06354	Bolt (6x35)
33	01547-06304	Bolt (6x30)
34	01547-06205	Bolt (6x20)

 
DR600RK E2

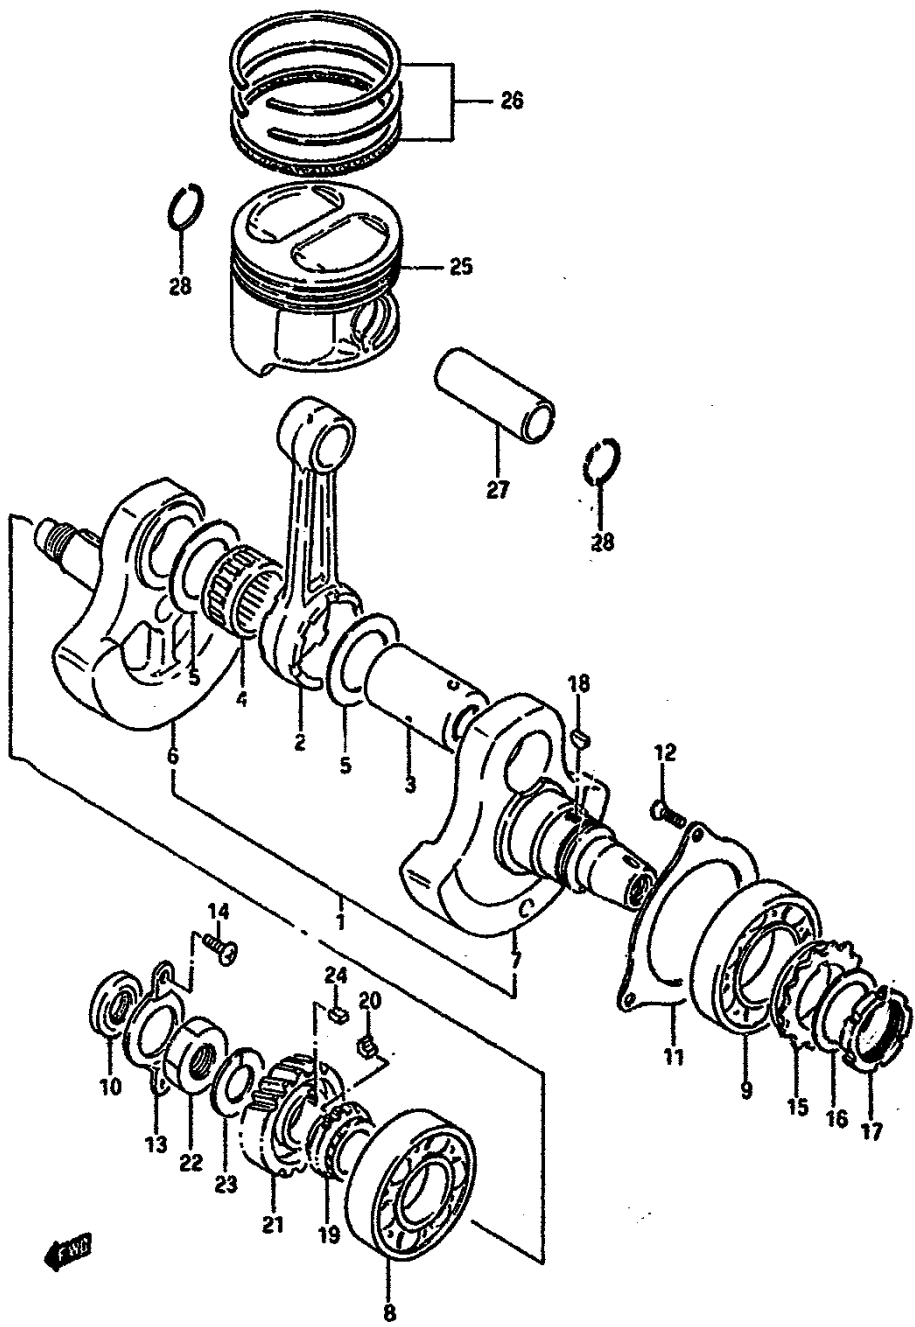


Ref No	Part No	Description
1	12200-14A02	Crankshaft Assy
2	12161-14A11	• . Rod,connecting
3	12210-14A01	• . Pin,crank
4	09263-37002	• . Bearing
5	09160-37006	• . Washer
6	12221-14A01	• . Crankshaft,rh
7	12261-14A02	• . Crankshaft,lh
8	09262-35009	Bearing,rh (35x80x21)
9	09262-45003	Bearing,lh (45x85x19)
10	09282-16002	Oil Seal,rh
11	12541-37400	Plate,lh
12	02122-06167	Screw
13	12548-37400	Plate,rh
14	02112-05088	Screw
15	12662-14A10	Sprocket,balancer Drive
16	09164-40003	Washer
17	12664-37401	Nut
18	08341-31039	Key
19	12731-37400	Sprocket,cam Chain Drive
20	12749-32400	Key
21	21111-14A00	Gear,primary Drive (nt:29)
22	09140-20008	Nut
23	09164-20003	Lock Washer
24	09421-07002	Key,gear
25	12111-14A02	Piston
25	12111-14A02-050	Piston (os:0.5)
25	12111-14A02-100	Piston (os:1.0)
26	12140-14A40	Ring Set,piston
26	12140-14A40-050	Ring Set,piston (os:0.5)
26	12140-14A40-100	Ring Set,piston (os:1.0)
27	12151-14A01	Pin,piston
28	09381-23003	Circlip

DR600RK E2

Ref No	Part No	Description
1	12651-14A01	Balancer,crank
2	09262-20057	Bearing
3	12659-37400	Plate,bearing
4	02112-06126	Screw
5	12665-14A10	Sprocket,front (nt:31)
6	12675-14A10	Sprocket,rear (nt:31)
7	09159-10014	Nut
8	08341-31039	Nut

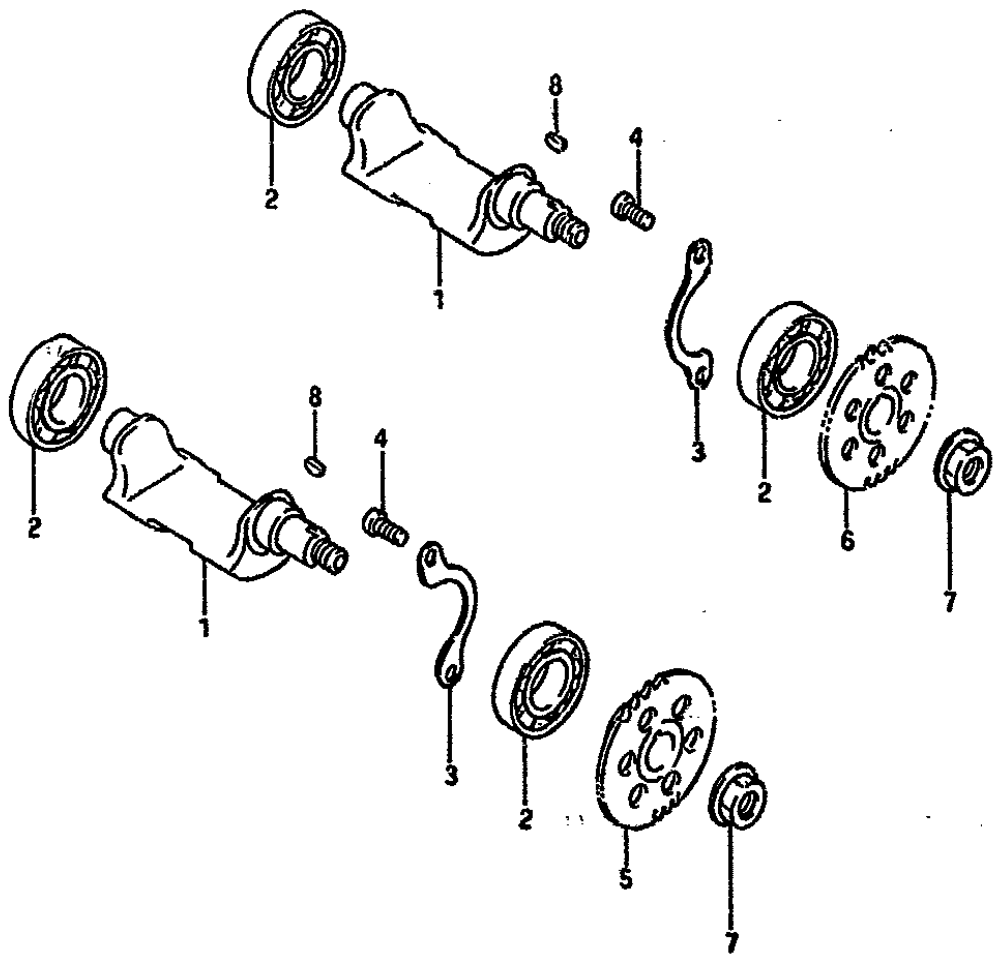 


DR600RK E2

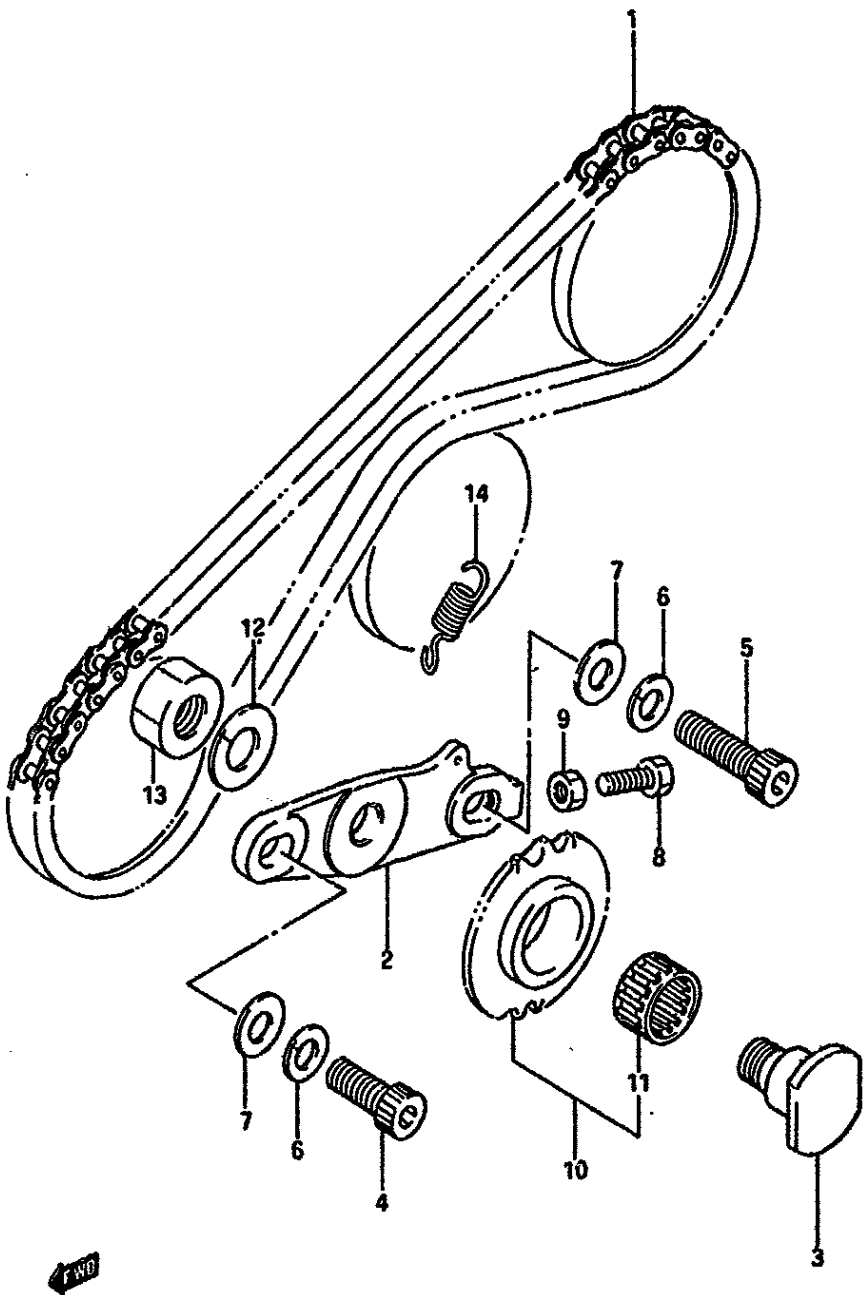 


Ref No	Part No	Description
1	12670-14A00	Chain,balancer
2	12681-14A02	Bracket,chain Tensioner
3	12682-14A01	Shaft,chain Tensioner
4	09106-08005	Bolt,front (8x22)
5	07110-08305	Bolt,rear (8x30)
6	08321-21088	Lock Washer
7	08322-21088	Washer
8	09100-05006	Bolt (5x20)
9	08310-22058	Nut
10	12685-14A10	Sprocket,tensioner (nt:26)
11	09263-17007	• . Bearing
12	08321-21128	Lock Washer
13	09140-12021	Nut
14	09443-10022	Spring

 DR600RK E2

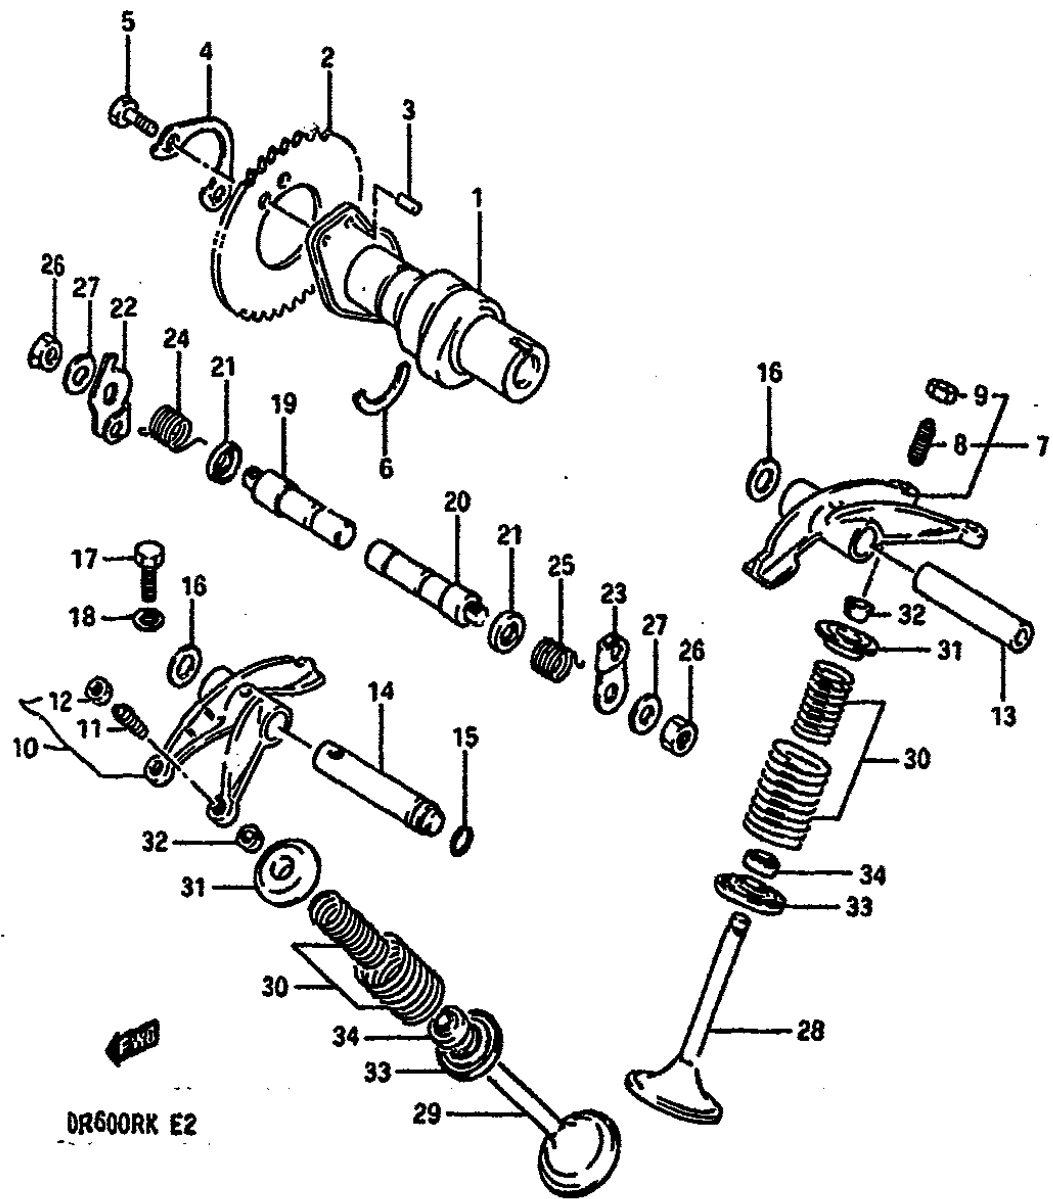


Ref No	Part No	Description
1	12711-14A03	Cam Shaft
2	12741-37400	Sprocket (nt:42)
3	04221-05109	Pin
4	12747-44000	Washer
5	09111-06027	Bolt (6x12.5)
6	09390-25003	C Ring
7	12840-37401	Arm, valve Rocker Intake
8	12842-32411	• . Screw
9	12843-32400	• . Nut
10	12850-37401	Arm, valve Rocker Exhaust
11	12842-32411	• . Screw
12	12843-32400	• . Nut
13	12861-14A01	Shaft, rocker Arm In
14	12871-14A00	Shaft, rocker Arm Ex
15	09280-09005	O Ring
16	09164-12018	Washer
17	01517-06305	Bolt, shaft Ex
18	09168-06023	Gasket
19	12941-37103	Shaft, decomp Rh
20	12941-14A03	Shaft, decomp Lh
21	09284-10008	Oil Seal
21	09282-10014	Oil Seal
22	12942-37101	Lever, shaft Rh
23	12942-14A03	Lever, shaft Lh
24	09448-17014	Spring, rh
25	09448-17018	Spring, lh
26	08310-22085	Nut
27	08322-11084	Washer
28	12911-37400	Valve, intake (od:33)
29	12912-37400	Valve, exhaust (od:28)
30	12920-37400	Spring Set, valve
31	12931-45000	Retainer, spring
32	12932-45010	Cotter, valve
33	12933-37400	Seat, spring
34	09289-07002	Oil Seal

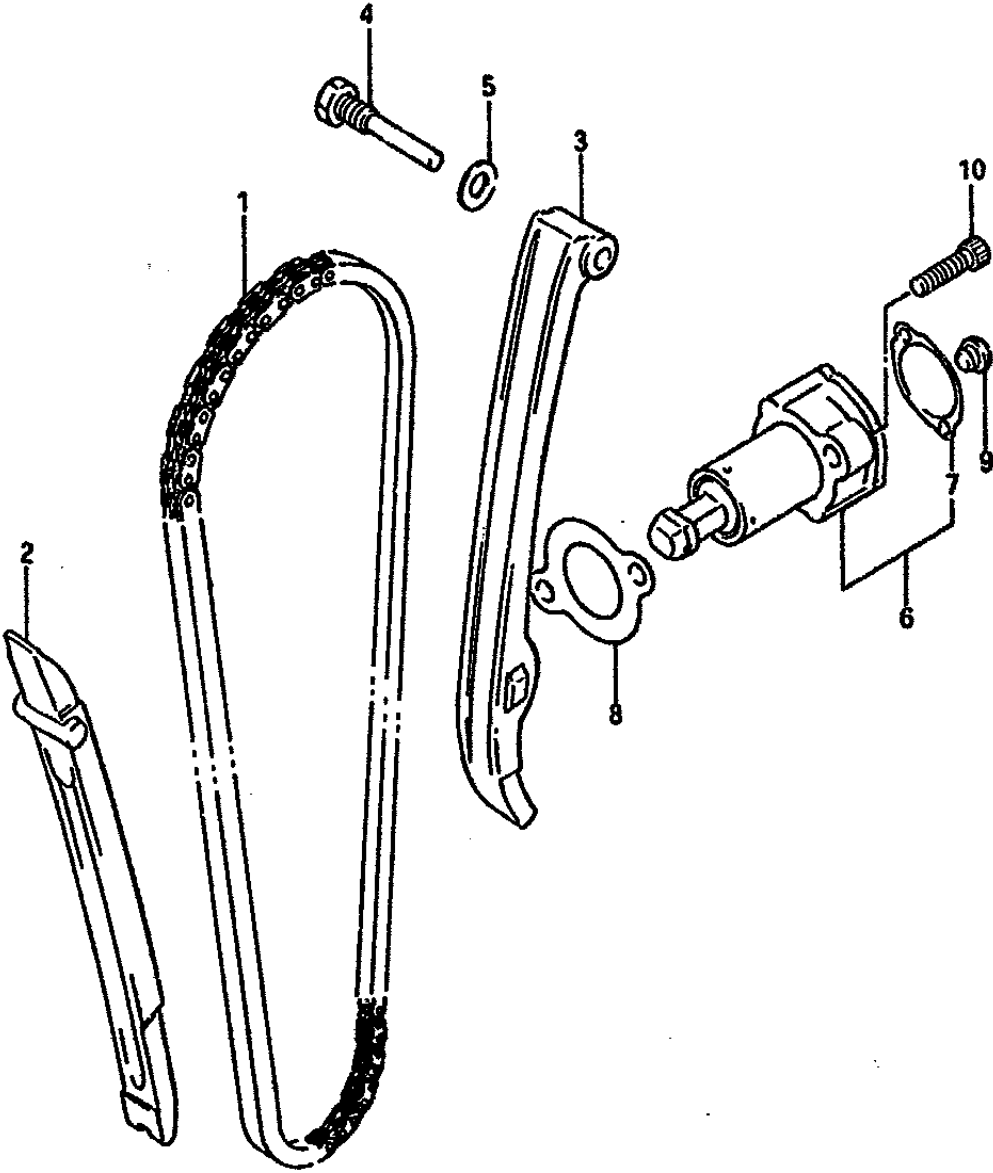 


Ref No	Part No	Description
1	12760-37400	Chain,cam Shaft Drive
2	12771-37400	Guide,cam Chain
3	12811-37401	Tensioner,cam Chain
4	12812-32410	Bolt
5	09168-08008	Washer
6	12830-15500	Adjuster Assy,tensioner
7	12838-38200	. Gasket
7	12838-38200-H17	. Gasket (na)
8	12837-24A00	Gasket,adjuster
8	12837-24A00-H17	Gasket,adjuster (na)
9	12839-38200	Plug
10	07110-06255	Bolt



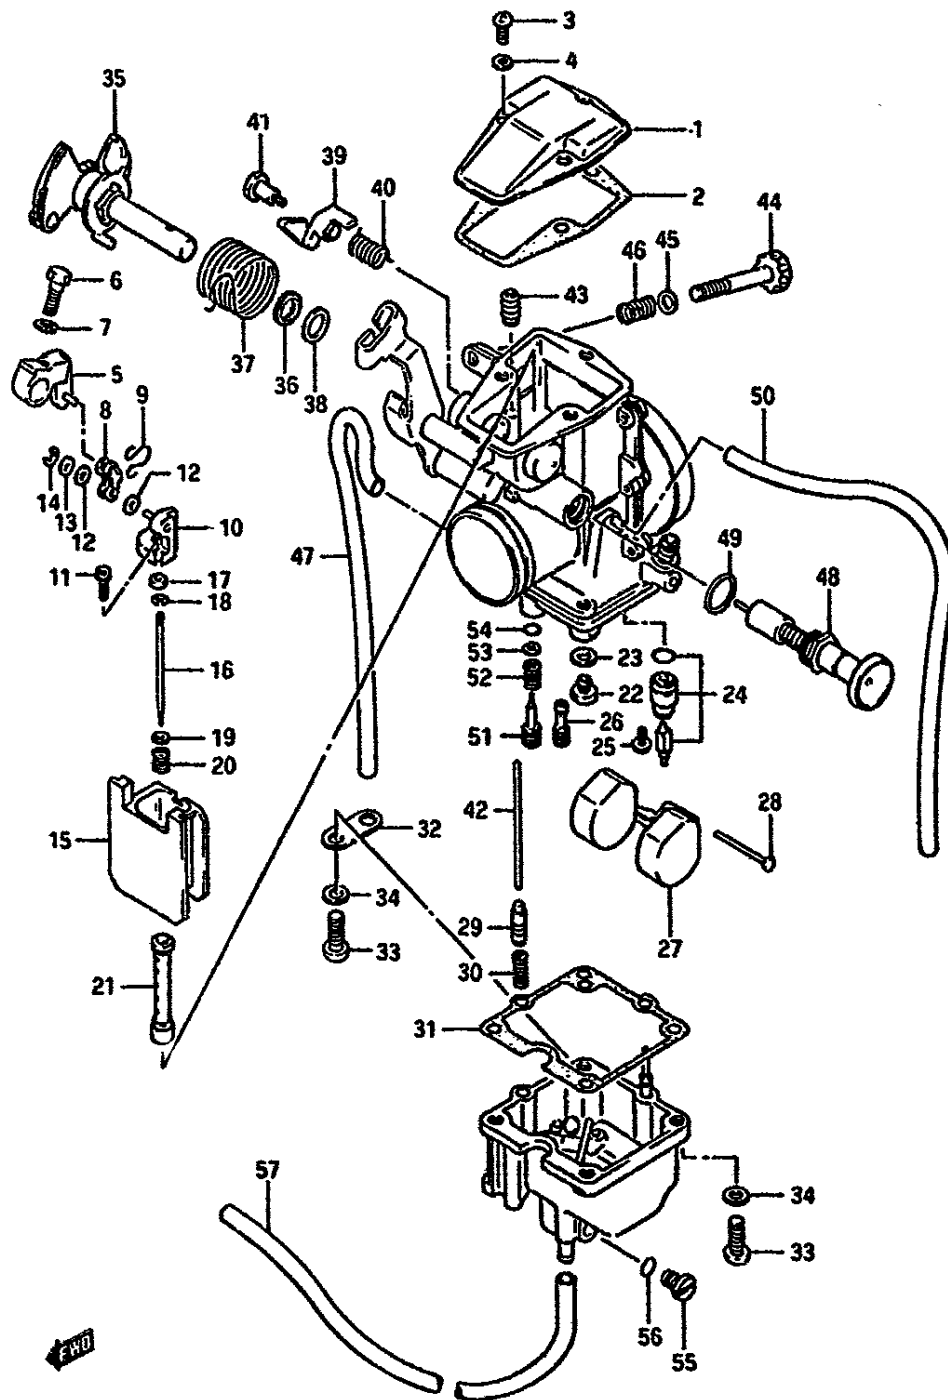 

Ref No	Part No	Description
10	13200-14A01	Carburetor Assy
10	13200-14A60	Carburetor Assy
1	13261-14A00	. Cap,top
2	13266-14A00	. Gasket
3	02112-04106	. Screw
4	08321-31046	. Lock Washer
5	13541-14A00	. Lever,throttle
6	13613-43010	. Bolt
7	08321-31056	. Lock Washer
8	13447-14A00	. Plate
9	13446-14A00	. Spring
10	13398-14A01	. Bracket
11	13566-14A00	. Bolt
12	13445-14A00	. Gasket
13	13449-14A00	. Washer
14	13298-49000	. E Ring
15	13551-14A00	. Valve,piston
16	13383-14A00	. Needle,jet (6cm1-3)
17	13387-47010	. Ring
18	13394-10010	. E Ring
19	13382-47010	. Washer
20	13388-47010	. Spring
21	09494-00489	. Jet,needle (0-0)
22	09491-27009	. Jet,main (135)
23	13332-44080	. Washer
24	13370-14A00	. Valve Assy,needle
25	13602-43410	. Screw
26	09492-20008	. Jet,pilot (20)
27	13252-14A00	. Float
28	13254-92311	. Pin
29	13493-14A00	. Plunger
30	13271-09400	. Spring
31	13251-14A00	. Gasket
32	13693-16600	. Plate
33	02112-05166	. Screw
34	08321-31056	. Lock Washer
35	13553-14A00	. Shaft Assy
36	13556-32410	. Oil Seal
37	13573-14A00	. Spring
38	13574-38200	. Gasket
39	13490-14A00	. Lever
40	13494-14A00	. Spring
41	13613-14A00	. Bolt
42	13487-14A00	. Rod
43	13499-44500	. Cap
44	13267-01400	. Adjuster
45	13427-38300	. Washer
46	13271-93011	. Spring
47	13684-14A00	. Hose (3.5x6.5x200)
48	13400-14A00	. Plunger Assy
49	13278-47090	. O Ring
50	13684-22A00	. Hose (5x8x550)
51	13279-47070	. Screw,pilot
52	13268-47070	. Spring

 DR600RK E2

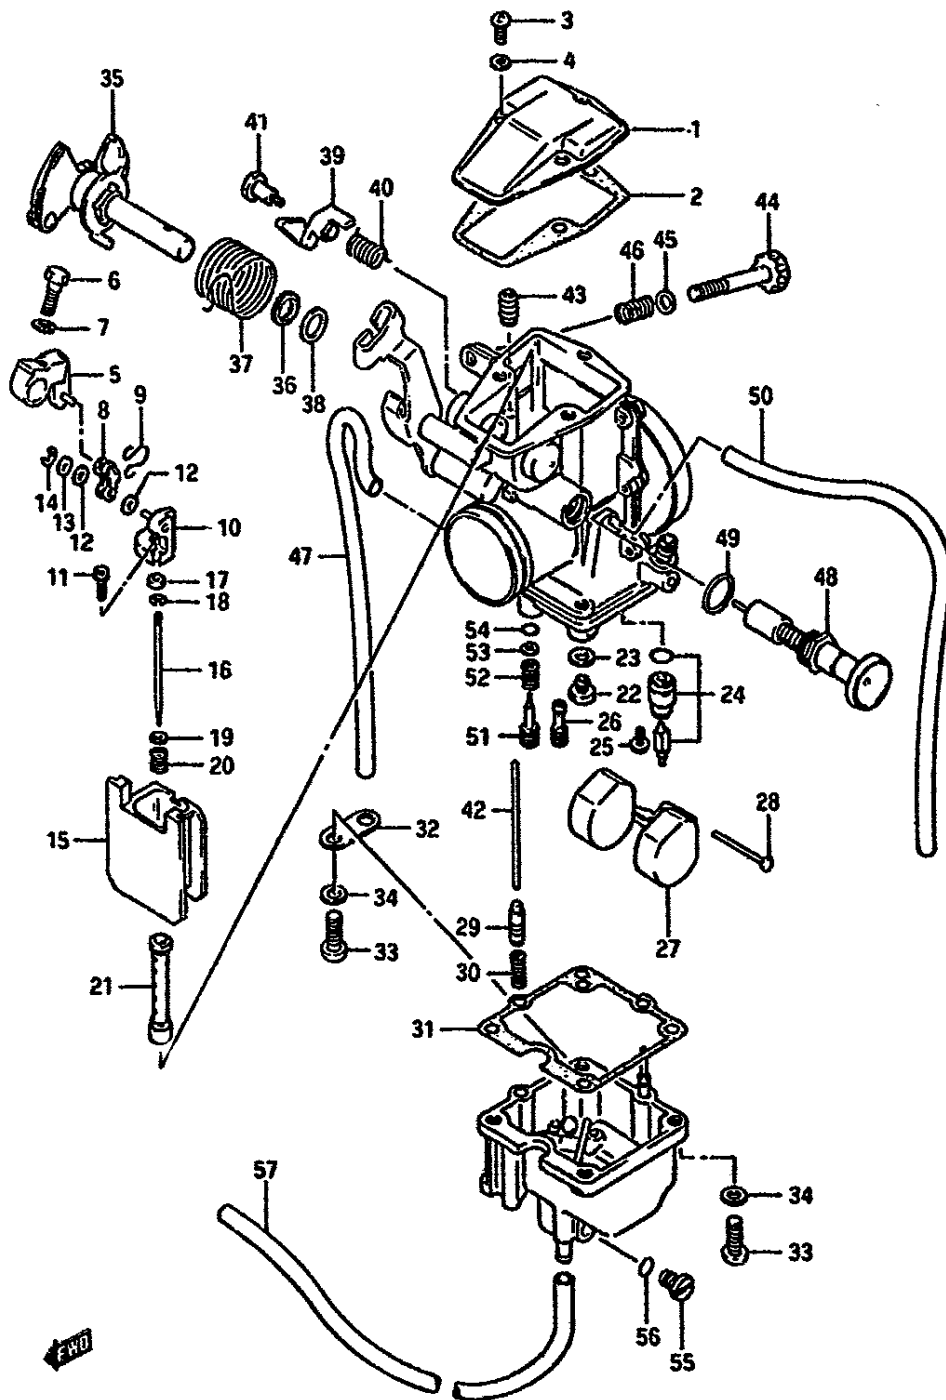


CARBURETOR


Ref No	Part No	Description
53	13291-29900	. Washer
54	13295-29900	. O Ring
55	13247-05010	. Plug
56	13249-05010	. Gasket
57	13683-37420	. Hose (3.5x6.5x500)

FWD

 DR600RK E2

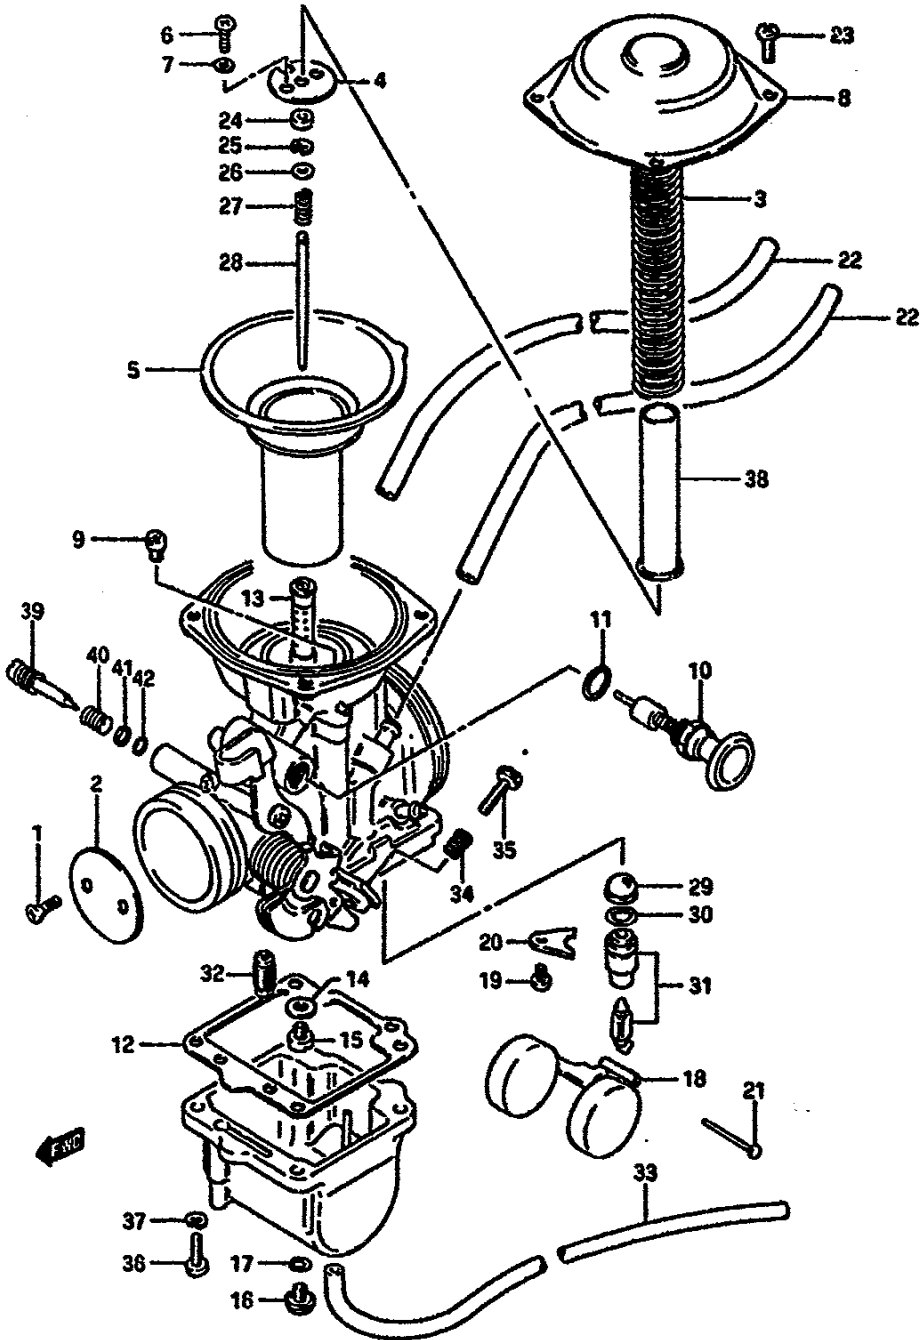


Ref No	Part No	Description
57	13200-14A30	Carburetor Assy
57	13200-14A40	Carburetor Assy
1	13604-44080	. Screw
2	13551-37400	. Valve,throttle (125)
3	13503-14A10	. Spring
4	13389-37400	. Plate
5	13500-14A10	. Diaphragm Assy
5	13500-14A20	. Diaphragm Assy
6	02112-03066	. Screw
7	08321-21036	. Lock Washer
8	13502-37400	. Cover
9	09491-21023	. Jet,pilot Air (105)
9	09491-21020	. Jet,pilot Air (107.5)
10	13411-37400	. Plunger Assy
10	13400-14A00	. Plunger Assy
11	13278-47090	. O Ring
12	13251-37100	. Gasket
13	09494-00273	. Jet,needle (x-7)
14	13332-44080	. Washer
15	09491-28015	. Jet,main (142.5)
16	13247-44080	. Plug,drain
17	13246-44080	. O Ring,drain
18	13250-37400	. Float
19	02112-04066	. Screw
20	13373-39110	. Plate
21	13254-92311	. Pin,float
22	13684-22A00	. Hose (5x8x550)
23	02112-05106	. Screw
24	13387-44030	. Ring
25	13394-31210	. E Ring
26	13382-44030	. Washer
27	13388-44030	. Spring
28	13383-37410	. Needle,jet (5c46-2)
29	13376-84110	. Filter
30	13374-44080	. O Ring
31	13370-37400	. Valve Assy,needle
32	09492-47013	. Jet,pilot (47.5)
33	13683-45070	. Hose (3.5x6.5x600)
34	13271-93011	. Spring
35	13267-37100	. Adjuster
36	02112-05166	. Screw
37	08321-21056	. Lock Washer
38	13485-24B70	. Pipe
39	13269-37410	. Screw,air (2 1/2)
40	13268-47070	. Spring
41	13291-29900	. Washer
42	13295-29900	. O Ring

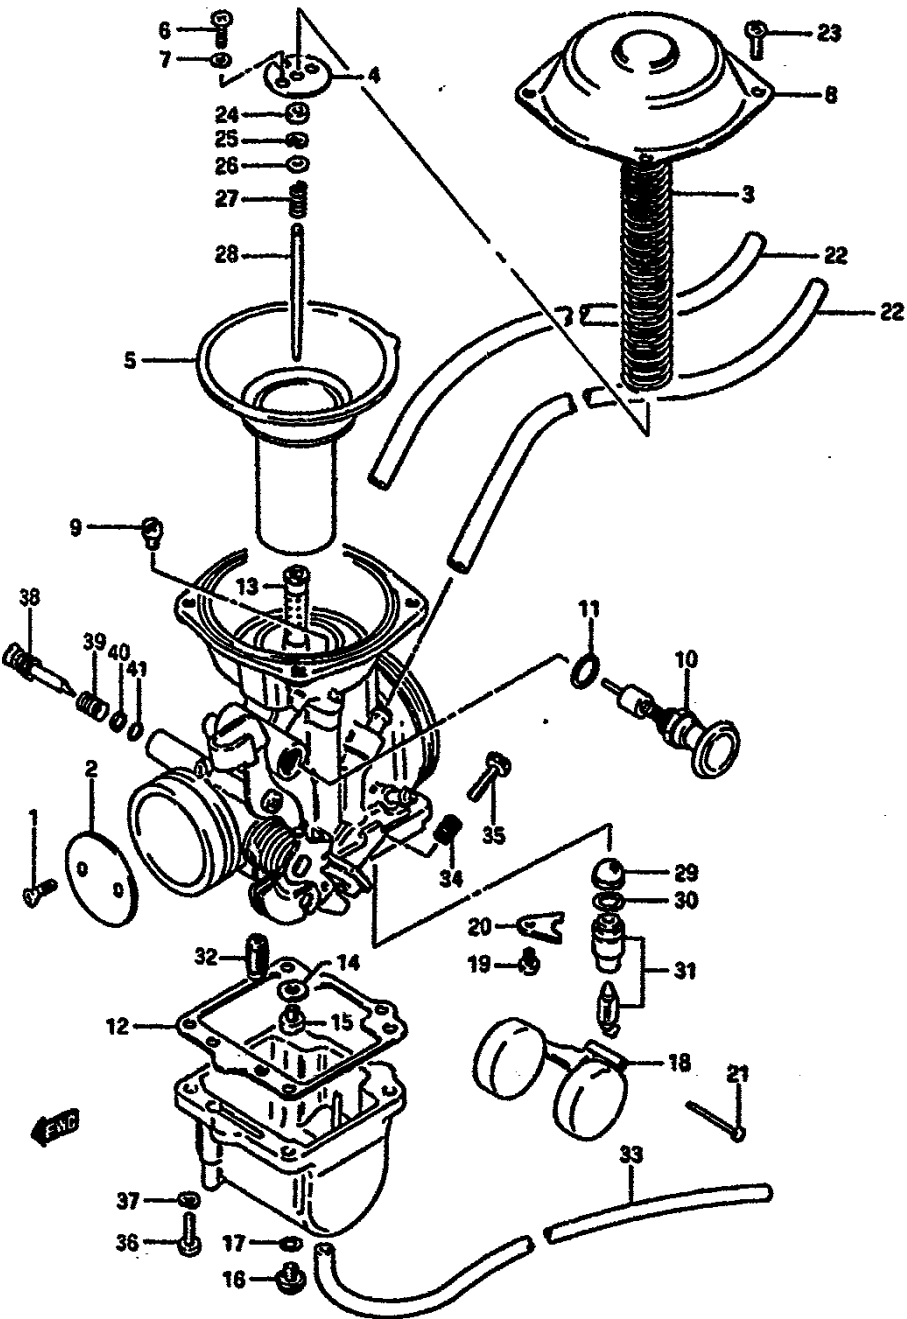 



Ref No	Part No	Description
42	13200-14A50	Carburetor Assy
1	13604-44080	• Screw
2	13551-37400	• Valve,throttle (125)
3	13503-14A10	• Spring
4	13389-37400	• Plate
5	13500-14A20	• Diaphragm Assy
6	02112-03066	• Screw
7	08321-21036	• Lock Washer
8	13502-37400	• Cover
9	09491-21023	• Jet,pilot Air (105)
10	13400-14A00	• Plunger Assy
11	13278-47090	• O Ring
12	13251-37100	• Gasket
13	09494-00273	• Jet,needle (x-7)
14	13332-44080	• Washer
15	09491-28015	• Jet,main (142.5)
16	13247-44080	• Plug,drain
17	13246-44080	• O Ring,drain
18	13250-37400	• Float
19	02112-04066	• Screw
20	13373-39110	• Plate
21	13254-92311	• Pin,float
22	13684-22A00	• Hose (5x8x550)
23	02112-05106	• Screw
24	13387-44030	• Ring
25	13394-31210	• E Ring
26	13382-44030	• Washer
27	13388-44030	• Spring
28	13383-37410	• Needle,jet (5c46-2)
29	13376-84110	• Filter
30	13374-44080	• O Ring
31	13370-37400	• Valve Assy,needle
32	09492-47013	• Jet,pilot (47.5)
33	13683-45070	• Hose (3.5x6.5x600)
34	13271-93011	• Spring
35	13267-37100	• Adjuster
36	02112-05166	• Screw
37	08321-21056	• Lock Washer
38	13269-37410	• Screw,air (2 1/2)
39	13268-47070	• Spring
40	13291-29900	• Washer
41	13295-29900	• O Ring

 DR600RK E2


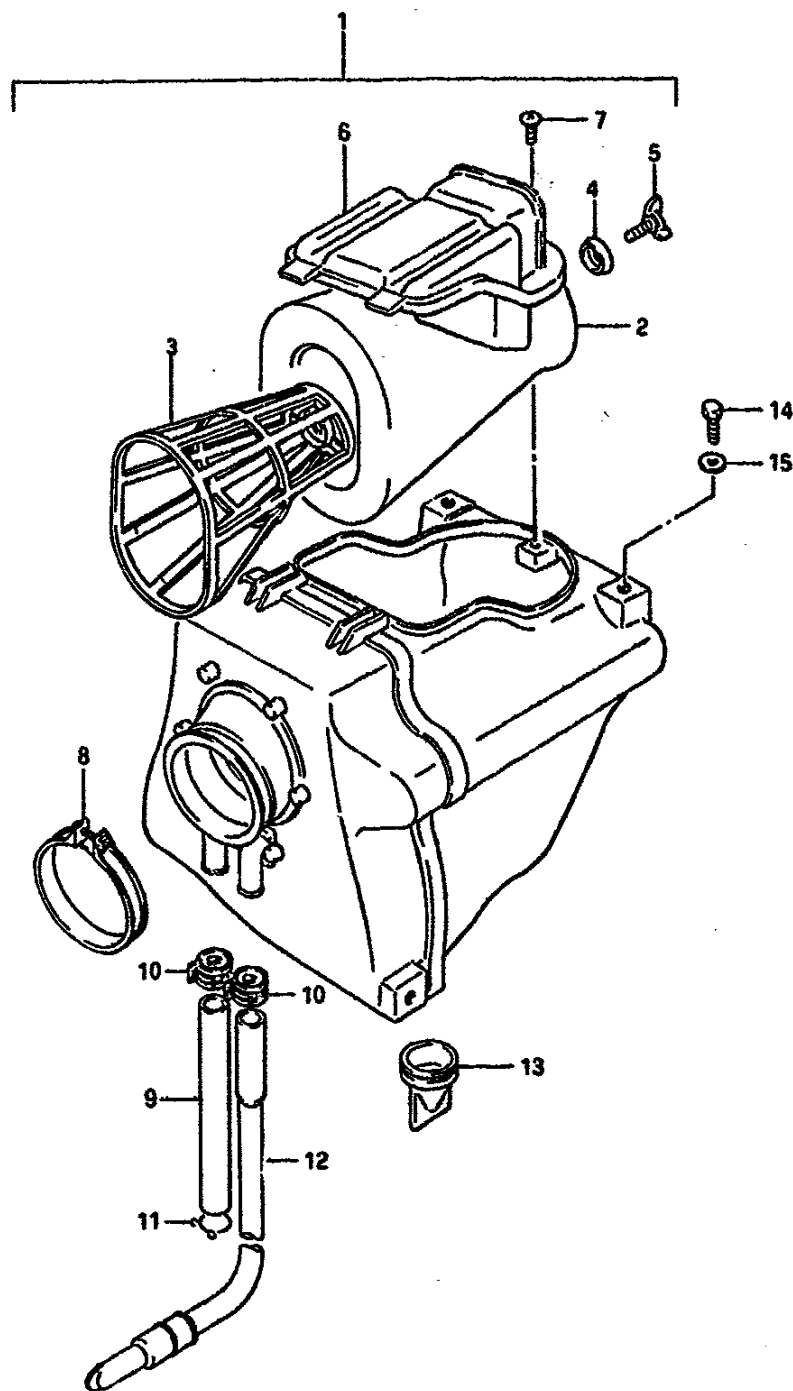


DR600RK E2

Ref No	Part No	Description
1	13700-14A01	Cleaner Assy,air
1	13700-14A02	Cleaner Assy,air
1	13700-14A11	Cleaner Assy,air
2	13781-14A00	• . Filter
3	13791-14A00	• . Holder
4	13796-16700	• . Washer
5	13837-14500	• . Bolt,wing
6	13740-14A00	• . Cap
7	02142-05164	• . Screw
8	09402-68208	• . Clamp
8	09402-64208	• . Clamp
9	13851-00260	• . Tube,breather
10	13825-43400	• . Clip
11	09401-14301	• . Clip
12	13870-11357	• . Tube,drain (l:350)
12	13870-11507	• . Tube,drain (l:500)
13	13873-18900	• . Tube,drain
14	09100-06067	Bolt (6x14)
15	09160-06007	Washer

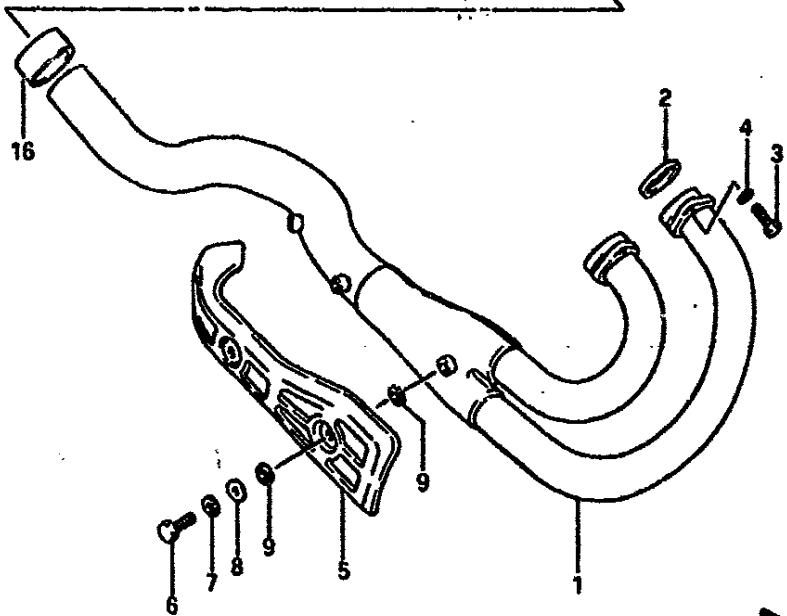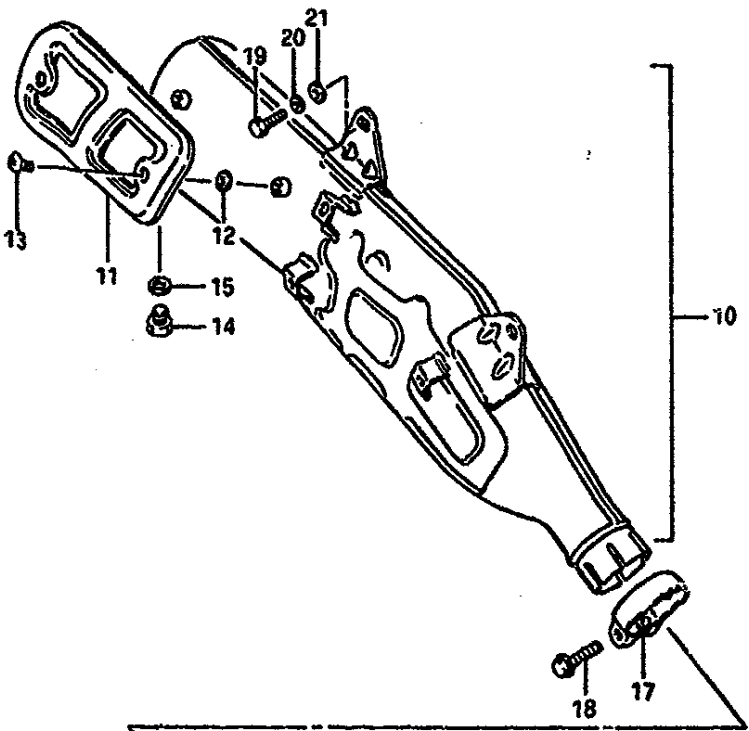  


Ref No	Part No	Description
1	14150-14A00-H01	Pipe,exhaust
1	14150-14A10	Pipe,exhaust
2	14181-35600	Gasket,exhaust Pipe
2	14181-35600-H17	Gasket,exhaust Pipe (na)
3	01107-06255	Bolt
4	08321-21064	Lock Washer
5	14180-14A00	Cover
6	01107-06125	Bolt
7	08321-21064	Lock Washer
8	08322-21064	Washer
9	09168-06021	Gasket
9	09168-06121	Gasket (na)
10	14301-14A61	Muffler Assy
10	14301-14A71	Muffler Assy
11	14781-14A10	• . Cover,muffler
12	14181-14A00	• . Gasket
12	14181-14A00-H17	• . Gasket (na)
13	02142-06104	• . Screw
14	09247-12103	• . Plug,drain
15	09168-12002	• . Gasket
16	14771-14A01	Connector,muffler
16	14771-44B00	Connector,muffler (na)
17	14459-14A10	Clamp
18	01517-08405	Bolt
19	01107-08205	Bolt
20	08321-21084	Lock Washer
21	08322-11084	Washer

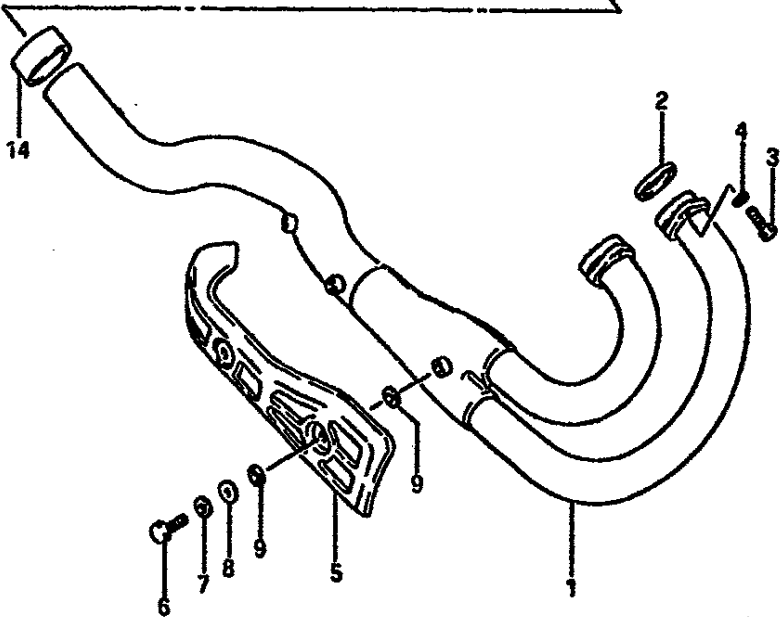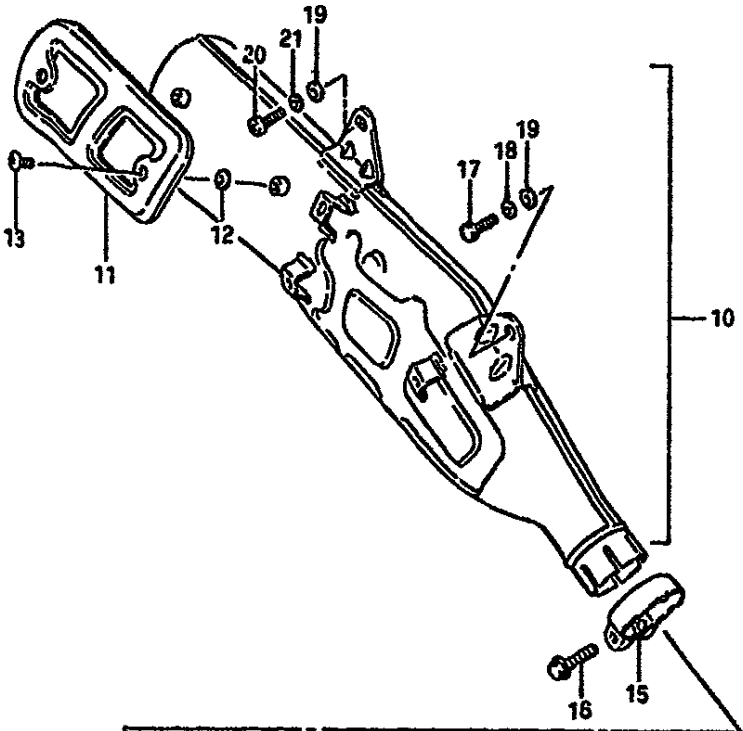  


Ref No	Part No	Description
1	14150-14A00-H01	Pipe,exhaust
1	14150-14A10	Pipe,exhaust
2	14181-35600	Gasket,exhaust Pipe
2	14181-35600-H17	Gasket,exhaust Pipe (na)
3	01107-06255	Bolt
4	08321-21064	Lock Washer
5	14180-14A00	Cover
6	01107-06125	Bolt
7	08321-21064	Lock Washer
8	08322-21064	Washer
9	09168-06021	Gasket
9	09168-06121	Gasket (na)
10	14301-14A80	Muffler Assy
10	14301-14A90	Muffler Assy
11	14781-14A00	• . Cover,muffler
12	14181-14A00	• . Gasket
12	14181-14A00-H17	• . Gasket (na)
13	02142-06108	• . Screw
14	14771-14A01	Connector,muffler
14	14771-44B00	Connector,muffler (na)
15	14459-14A10	Clamp
16	01517-08405	Bolt
17	01107-08205	Bolt
18	08321-21084	Lock Washer
19	08322-11084	Washer
20	07110-08205	Bolt
21	08321-31084	Lock Washer



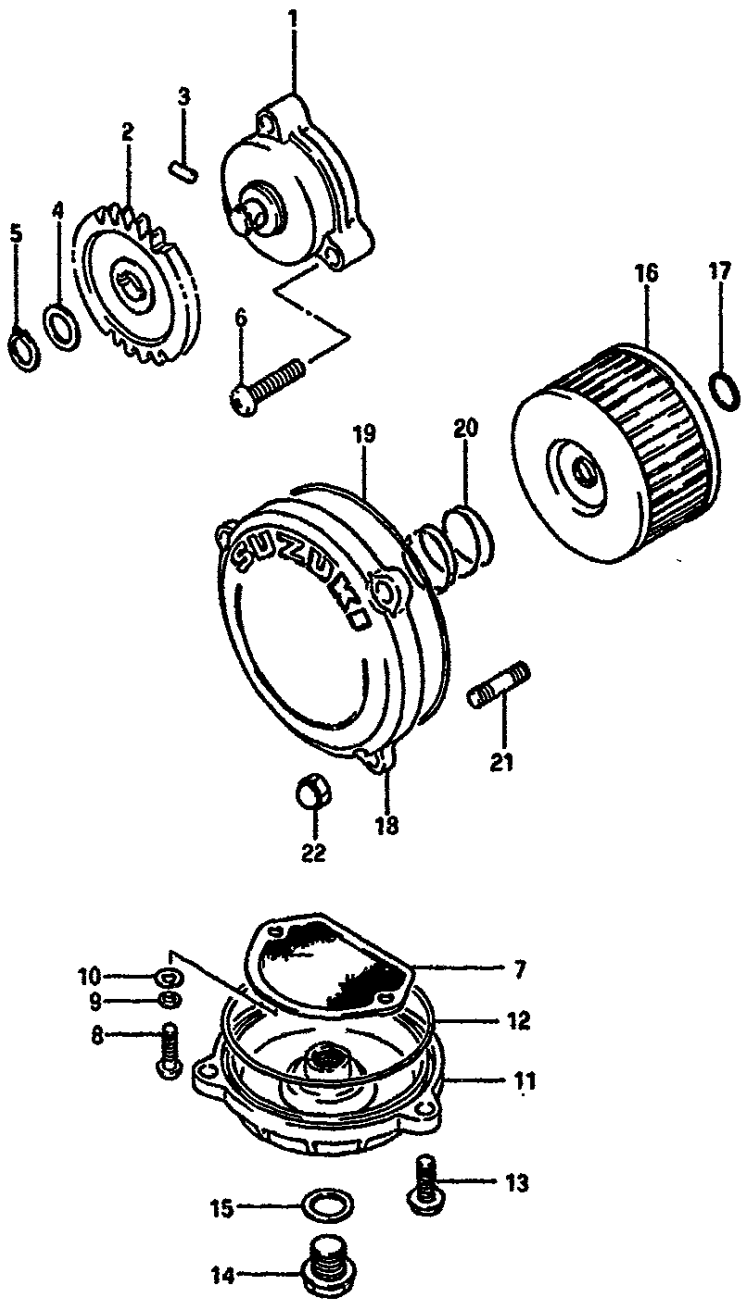 


Ref No	Part No	Description
1	16400-37400	Pump,engine Oil
2	16331-14A00	Gear,driven (nt:22)
3	09261-04009	Pin
4	08221-10185	Washer
5	08331-31109	Circlip
6	02112-06258	Screw
7	16520-14A00	Strainer,engine Oil
8	02112-05126	Screw
9	08321-21056	Lock Washer
10	08322-21056	Washer
11	16523-37401	Cap,oil Strainer
12	09280-82001	O Ring (d:2.4,id:82)
13	01517-06208	Bolt
14	09247-14001	Plug,drain
15	09168-14004	Gasket
16	16510-37440	Filter,engine Oil
17	09280-16005	O Ring (d:2.4,id:15.8)
18	16512-14A01	Cap,oil Filter
19	09280-72001	O Ring (d:2.4,id:73)
20	09440-21004	Spring
21	01421-06128	Bolt,stud
22	08313-11065	Nut

 DR600RK E2

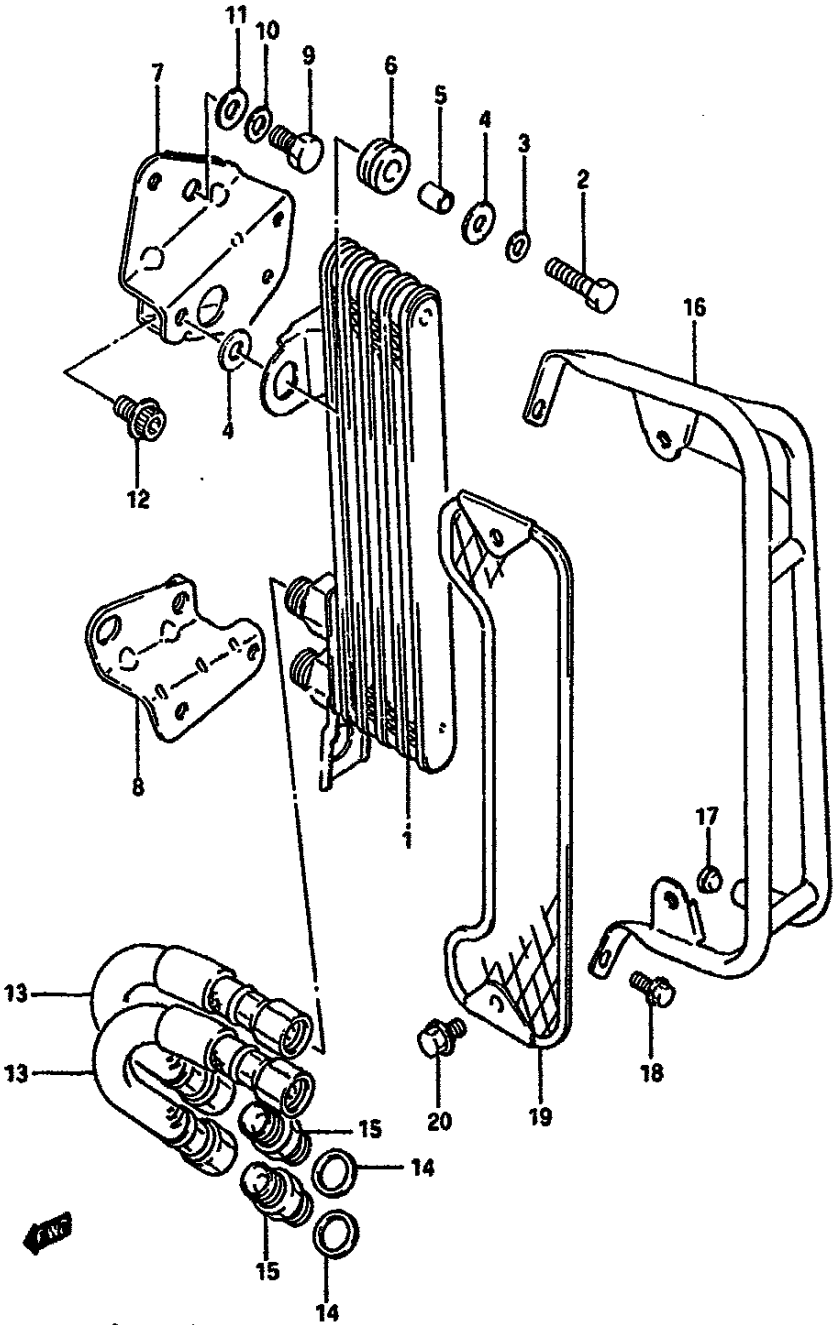


Ref No	Part No	Description
1	16600-14A00	Cooler Assy,oil
2	01107-06255	Bolt
3	08321-21064	Lock Washer
4	09160-06039	Washer (6.5x29x1.6)
5	09180-06030	Spacer (6.8x10x10)
6	09320-10015	Cushion
7	16620-14A01	Bracket,oil Cooler No.1
8	16630-14A00	Bracket,oil Cooler No.2
9	01107-08165	Bolt
10	08321-21084	Lock Washer
11	08322-11084	Washer
12	07120-08125	Bolt
13	16460-14A00	Hose,oil
14	09168-14011	Gasket (14x20x1.5)
15	09360-14006	Union,oil Hose
16	16640-14A02	Guard,oil Cooler
17	09250-07001	• Plug,pipe
18	01547-06127	Bolt
19	16650-14A00	Bumper,oil Cooler
20	01517-06125	Bolt

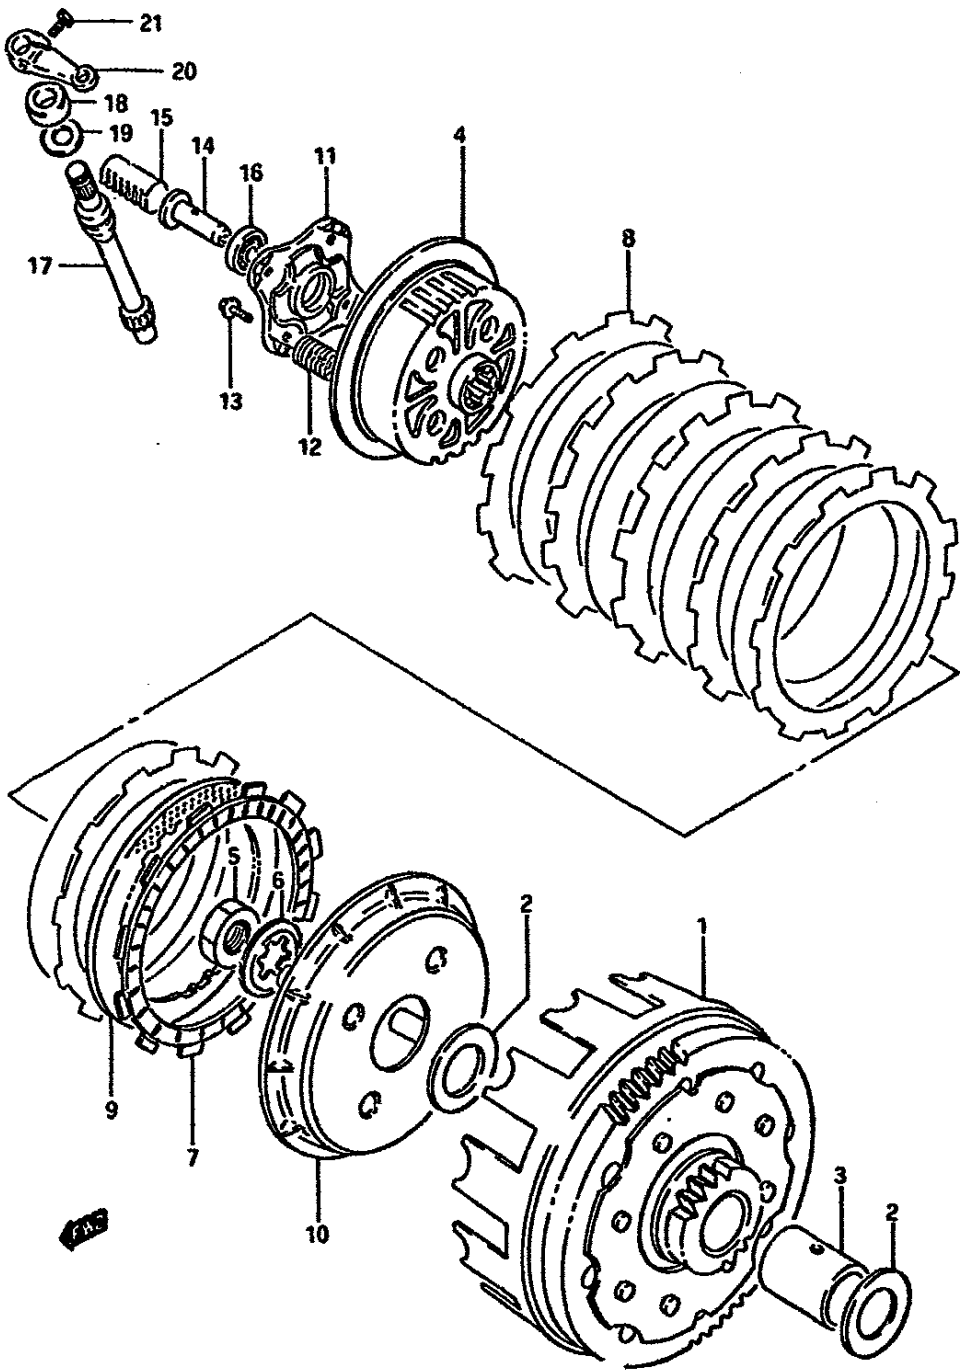 


Ref No	Part No	Description
1	21200-14A01	Gear,primary Driven
2	08211-22383	Washer
3	09180-22023	Spacer
4	21411-37401	Hub,sleeve
5	09140-22003	Nut
6	09167-22005	Lock Washer
7	21441-37400	Plate,drive (id:116)
8	21442-37401	Plate,drive (id:120)
9	21451-14A00	Plate,driven
10	21462-37400	Disk,pressure
11	21465-37400	Plate,release
12	09440-20015	Spring
13	01517-06207	Bolt
14	23121-14A00	Piece,clutch Push
15	23165-37400	Rack,release
16	08110-60010	Bearing
17	23261-16501	Pinion,release
18	09285-12006	Oil Seal (12x22x9)
19	09160-14003	Washer (14.2x22x1)
20	23271-45400	Arm,release
21	01107-06207	Bolt

 DR600RK E2

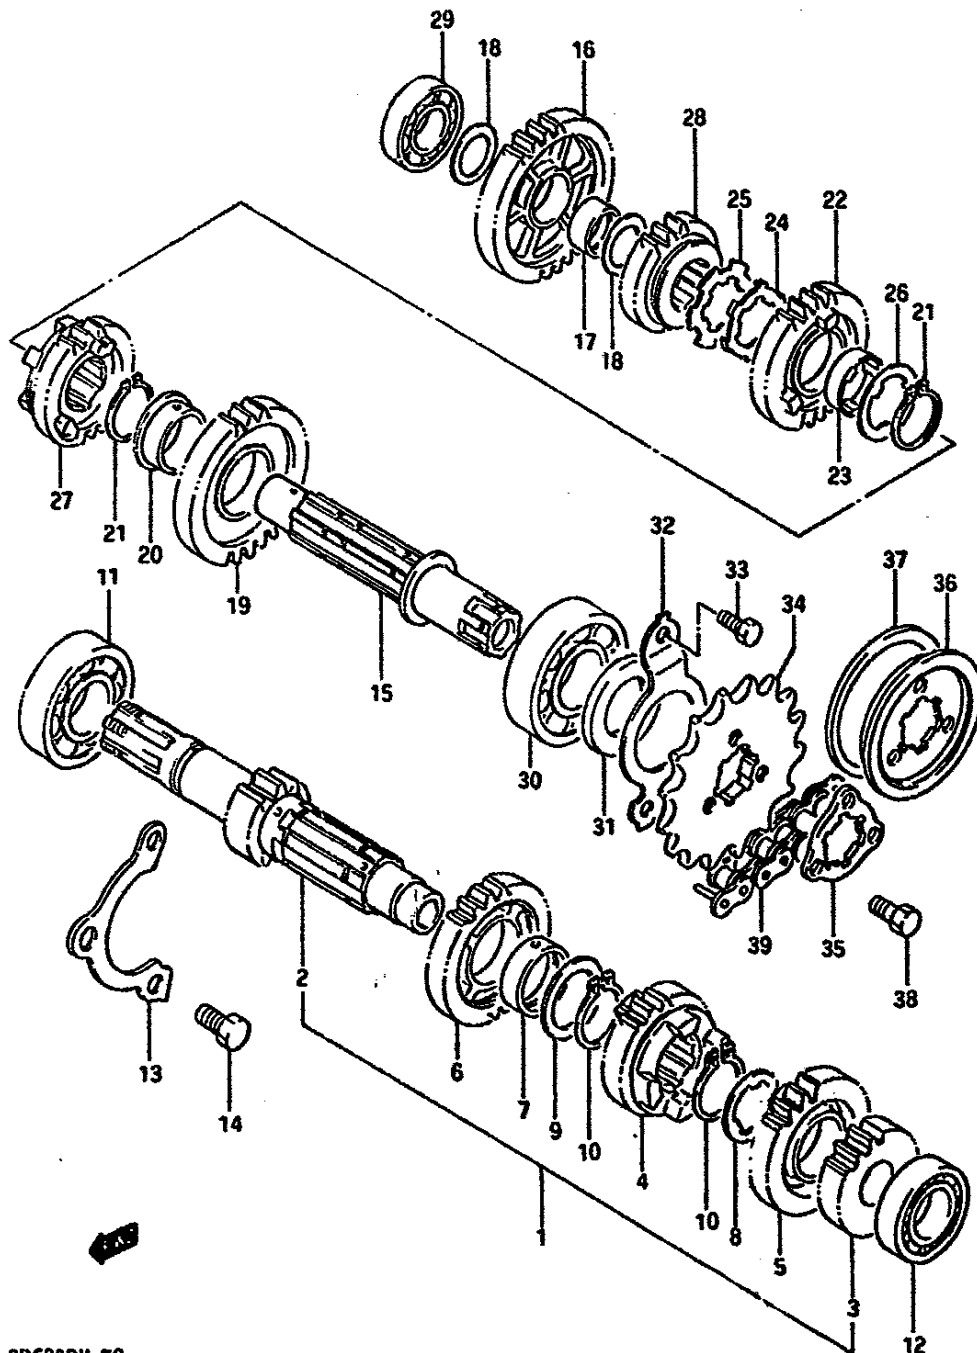


Ref No	Part No	Description
1	24120-14A00	Countershaft
2	24121-14A00	• . Countershaft (nt:12)
3	24221-14A00	• . Gear,2nd Drive (nt:16)
4	24231-14A00	• . Gear,3rd Drive (nt:19)
5	24241-14A00	• . Gear,4th Drive (nt:21)
6	24251-14A00	• . Gear,5th Drive (nt:23)
7	09300-25023	• . Bush
8	09167-25012	• . Washer
9	08211-25341	• . Washer
10	09380-25003	• . Circlip
11	09262-22014	Bearing,rh
12	09262-17018	Bearing,lh
13	24741-14A00	Holder,bearing
14	01107-08166	Bolt
15	24131-14A00	Driveshaft
16	24311-14A00	Gear,1st Driven (nt:29)
17	09300-20032	Bush
18	08211-20301	Washer
19	24321-14A00	Gear,2nd Driven (nt:26)
20	09301-25002	Bush
21	09380-25003	Circlip
22	24331-14A00	Gear,3rd Driven (nt:24)
23	24332-24500	Bush
24	09169-25001	Washer
25	09167-25013	Washer
26	09167-25016	Washer
27	24341-14A01	Gear,4th Driven (nt:21)
28	24351-14A00	Gear,5th Driven (nt:19)
29	09262-20059	Bearing,rh
30	09262-25066	Bearing,lh
31	09283-25076	Oil Seal,lh
32	24751-14A00	Holder,oil Seal
33	01107-06126	Bolt
34	27511-14A01	Sprocket (nt:16)
35	27512-14A00	Plate
38	09111-06039	Bolt
39	27600-38430	Chain,drive (520vcx108le)

 DR600RK E2

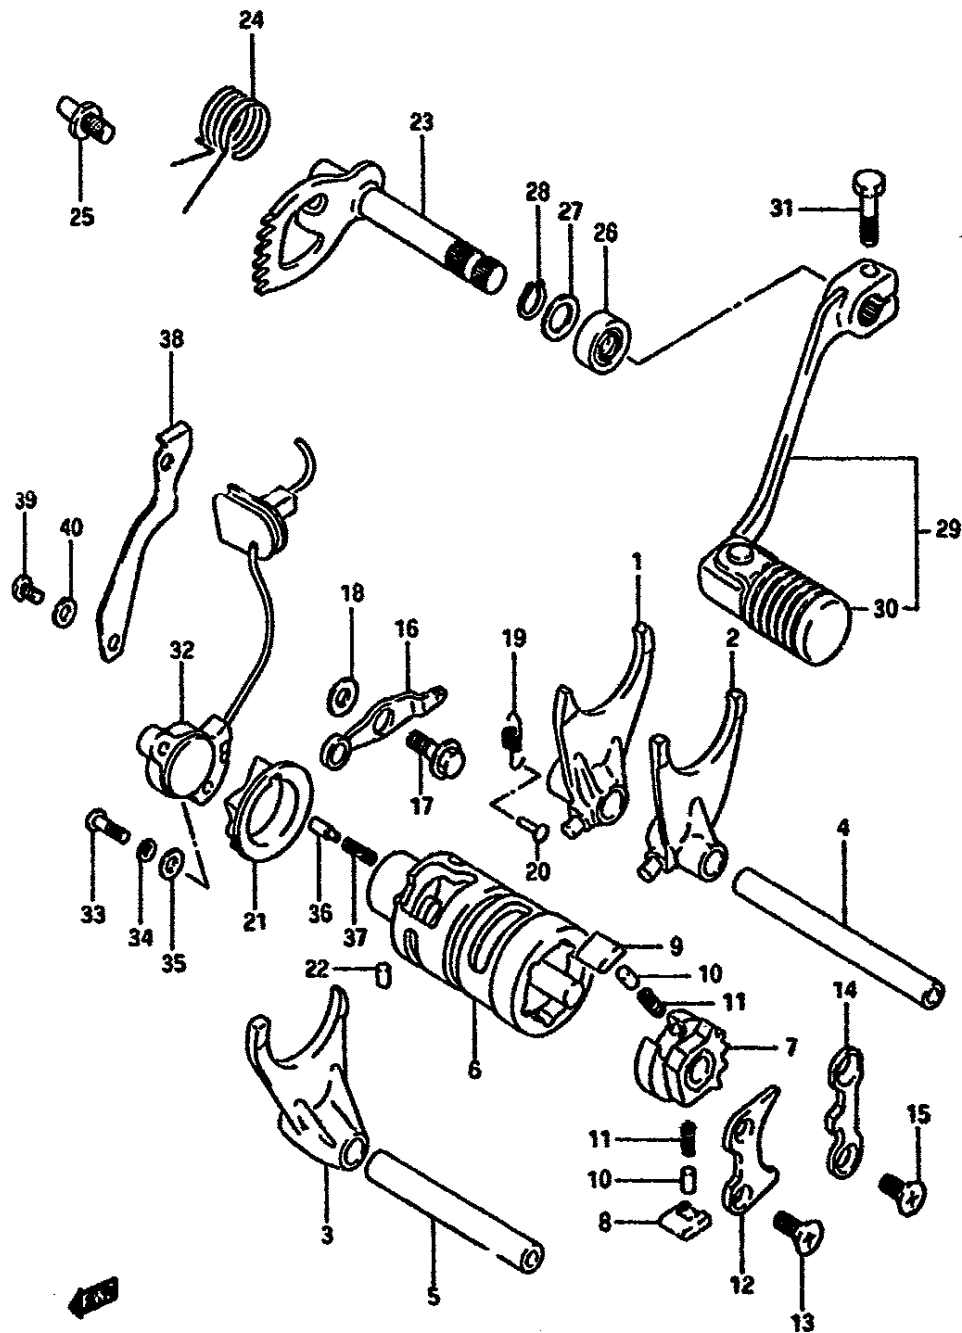


Ref No	Part No	Description
1	25211-37400	Fork,gear Shifting (1)
2	25221-37400	Fork,gear Shifting (2)
3	25231-14A00	Fork,gear Shifting (3)
4	25411-14500	Shaft,fork (1)
5	25421-14A00	Shaft,fork (2)
6	25310-37400	Cam,gear Shifting
7	25322-31301	Gear,cam Driven
8	25323-34201	Pawl, (1)
9	25324-34201	Pawl, (2)
10	09261-05003	Pin
11	09440-04003	Spring
12	25331-14A00	Lifter,pawl
13	02122-06128	Screw
14	25341-40001	Guide,cam
15	02122-06128	Screw
16	25350-37400	Stopper
17	09111-06019	Bolt
18	08211-06141	Washer
19	09443-08040	Spring
20	09223-04001	Hook
21	25381-37400	Plate,stopper
22	06211-04063	Pin
23	25510-14A02	Shaft,gear Shifting
24	09444-26012	Spring
25	25671-01000	Stopper,arm
26	09285-12002	Oil Seal (12x22x9)
27	08212-12201	Washer
28	08331-31128	Circlip
29	25600-14A03	Lever Assy,gear Shifting
30	25652-14A00	• . Cover
31	09100-06100	Bolt
32	37720-14A00	Body,gear Shifting Switch
32	37720-14A10	Body,gear Shifting Switch
33	02112-05166	Screw
34	08321-21056	Lock Washer
35	08322-21056	Washer
36	09209-05011	Contact
37	09440-04010	Spring
38	37721-14A00	Clamp
39	02112-06106	Screw
40	08321-21066	Lock Washer

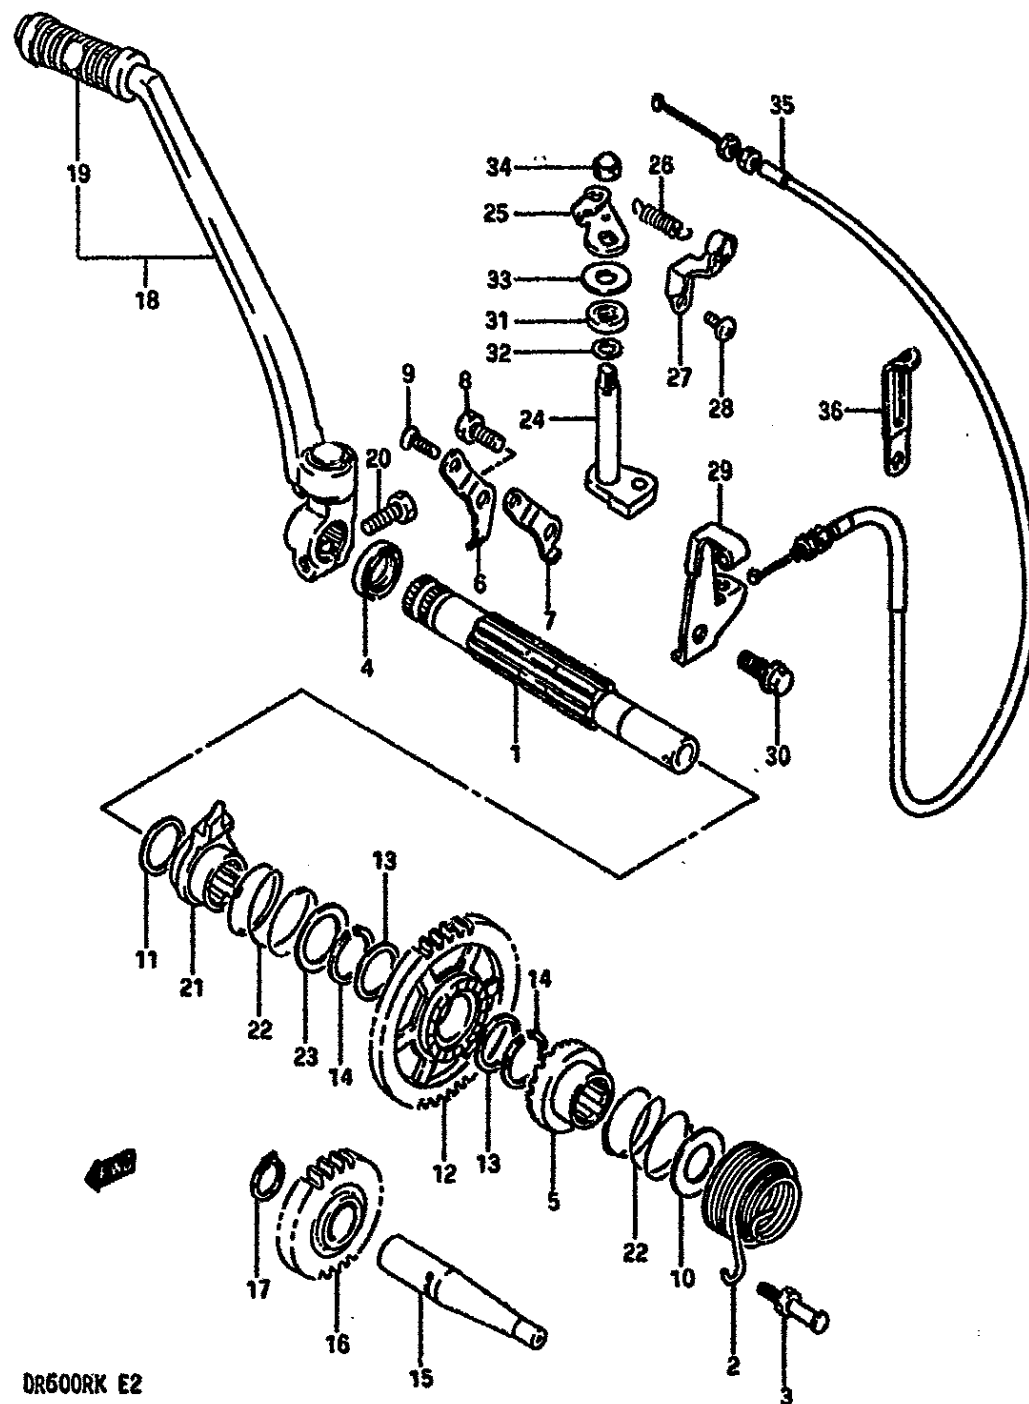 

DR600RK E2

Ref No	Part No	Description
1	26211-14A01	Shaft,kick Starter
2	09448-41003	Spring
3	26237-14500	Bolt
4	09283-20044	Oil Seal (20x27x6)
5	26231-38201	Pawl
6	26232-14A00	Lifter
7	26233-14A01	Stopper
8	01107-08207	Bolt
9	02122-06167	Screw
10	08211-17341	Washer
11	08211-20281	Washer
12	26240-14A00	Gear,drive (nt:40)
13	08211-22281	Washer
14	09380-22006	Circlip
15	26223-14A00	Shaft,idle
16	26260-37400	Gear,starter Idle (nt:24)
17	09380-17001	Circlip
18	26300-14A00	Lever Assy,kick Starter
19	26352-16401	• . Cover
20	09100-08194	Bolt
21	26811-14A04	Cam,decompression
22	09440-32006	Spring
23	08211-22341	Plate
24	26820-14A05	Shaft
25	26824-14A03	Arm
26	09443-06061	Spring
27	26841-14A01	Holder,no.1
28	02112-06106	Screw
29	26842-14A02	Holder,no.2
30	01517-08165	Bolt
31	09282-10007	Oil Seal (10x20x6)
32	08211-10151	Washer
33	09160-10020	Washer (10.5x24x1)
34	08313-11085	Nut
35	26830-14A05	Cable
36	09404-06401	Clamp (l:50)


Ref No	Part No	Description
1	32101-14A10	Stator Assy
2	32102-14A10	Rotor
3	02112-05128	Screw
4	09103-14001	Bolt
5	02112-06308	Screw
6	08341-31049	Key
7	32371-14A00	Clamp
8	32371-37410	Clamp
9	02112-06108	Screw
10	32371-14A10	Clamp
11	32371-14A20	Clamp
12	02112-05107	Screw
13	09404-06402	Clamp

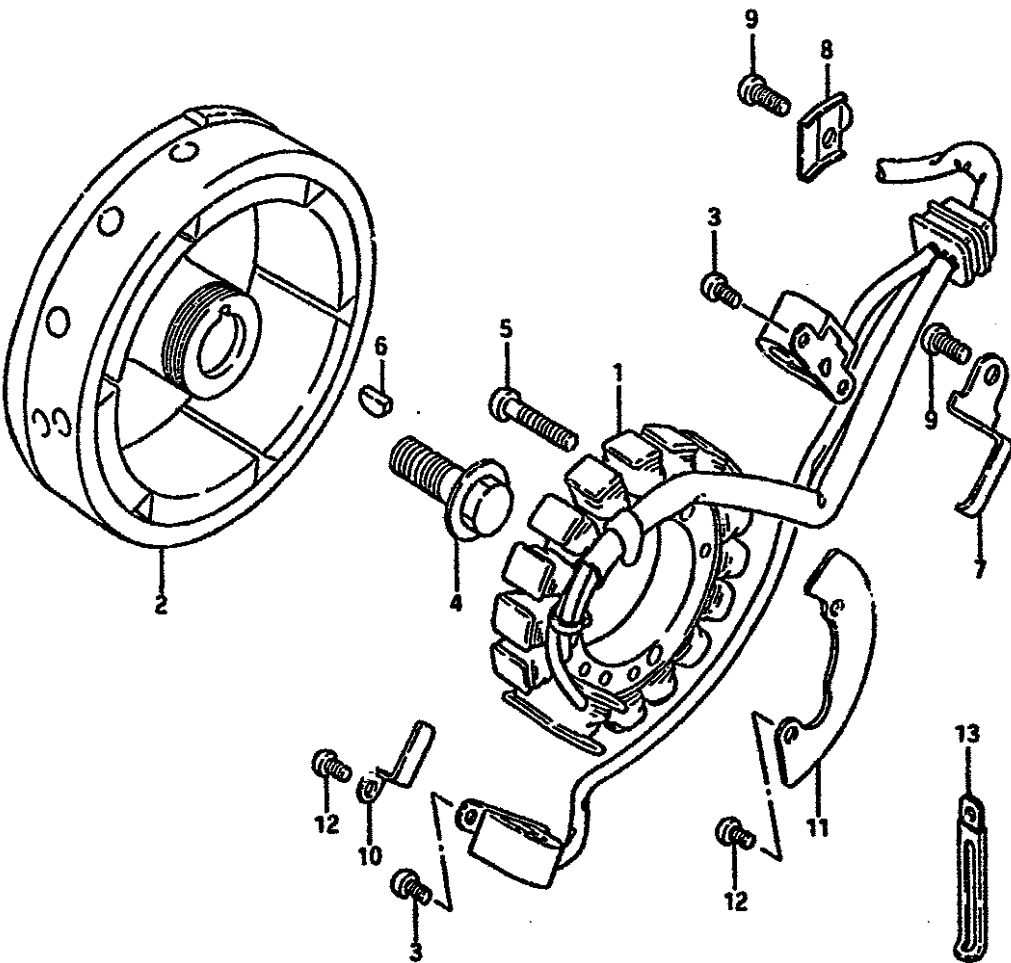 

FWD



DR600RK E2

Ref No	Part No	Description
1	33610-18010	Battery (12v,5ah)
2	33680-14A00	Hose,exhaust
3	41540-14A00	Holder,battery
3	41540-14A10	Holder,battery
4	01107-06206	Bolt
5	09160-06027	Washer (6.5x20x1.2)
6	09180-06038	Spacer (6.1x9x7.5)
7	09320-08007	Cushion
8	33652-29100	Protector (20x90x3)
9	33652-34000	Protector (30x80x2)

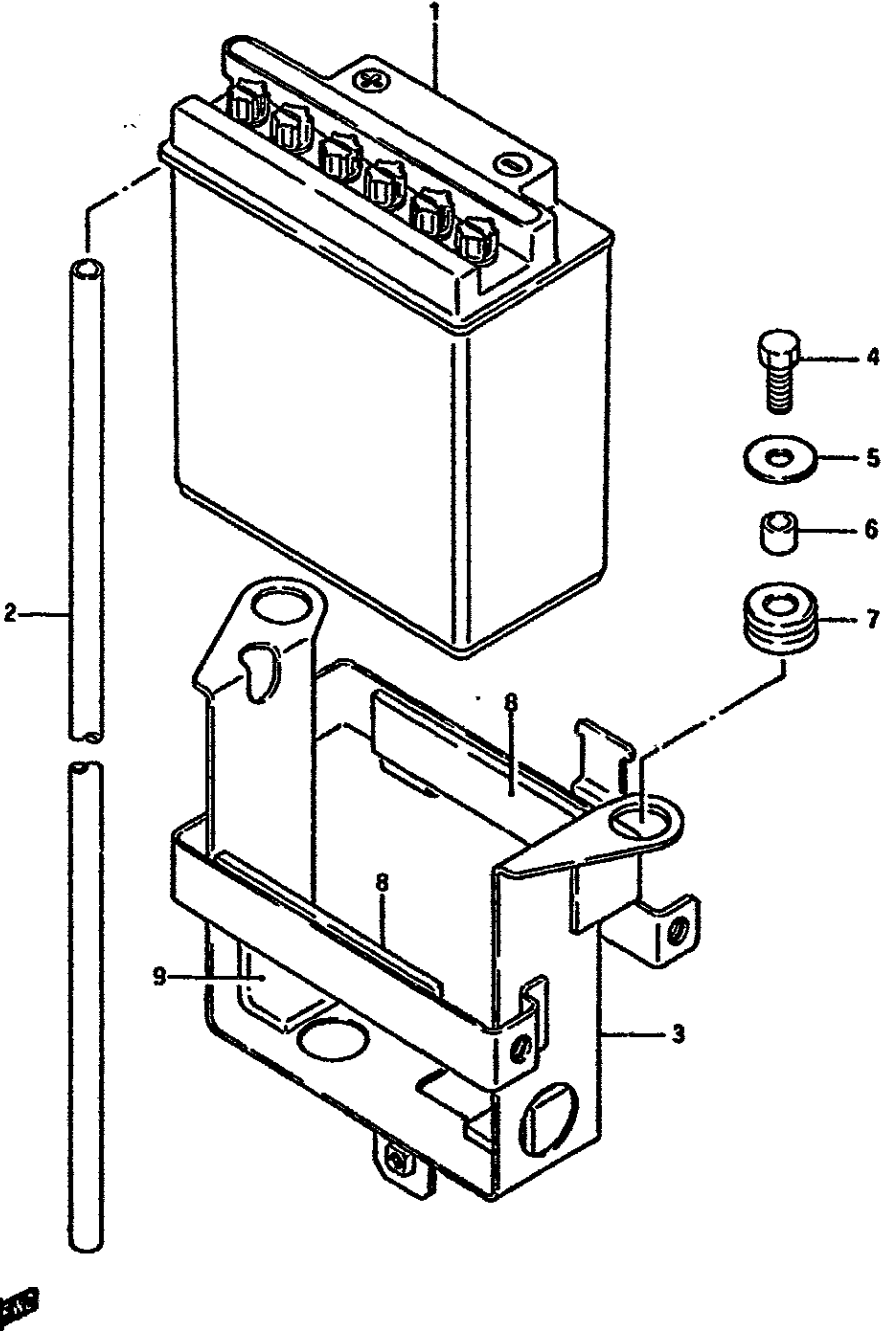 


DR600RK E2

Ref No	Part No	Description
1	33410-14A00	Coil Assy,ignition
2	02112-06256	Screw
3	08322-21066	Lock Washer
4	33510-45010	Cap,spark Plug Inner
5	33510-43010	Cap,spark Plug Outer
6	33510-45411	Cap,spark Inner
7	33510-05210	Cap,spark Plug Outer
8	33541-24510	Seal,plug
9	33542-98000	Seal,hightension Cord
10	32900-14A11	Cdi Unit
10a	32900-14A20	Cdi Unit
11	02112-06166	Screw
11a	09128-06005	Screw
12	08321-21066	Lock Washer
13	08322-21066	Washer
13a	08322-21067	Washer
14	32800-09300	Rectifier,regulate
15	02112-06206	Screw
16	08321-21066	Lock Washer

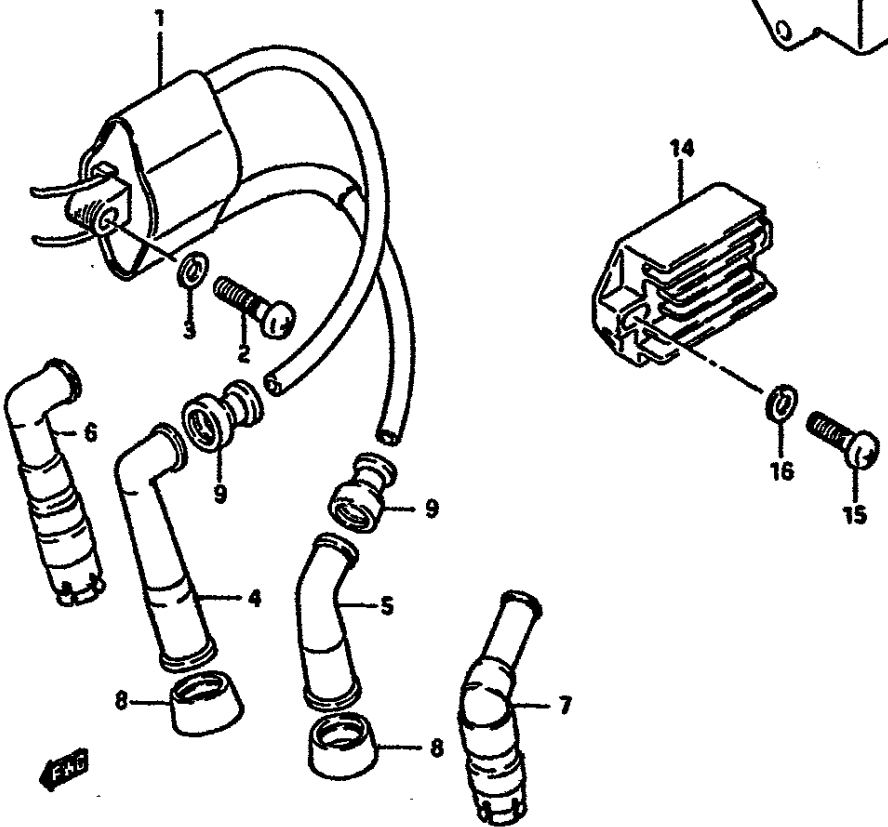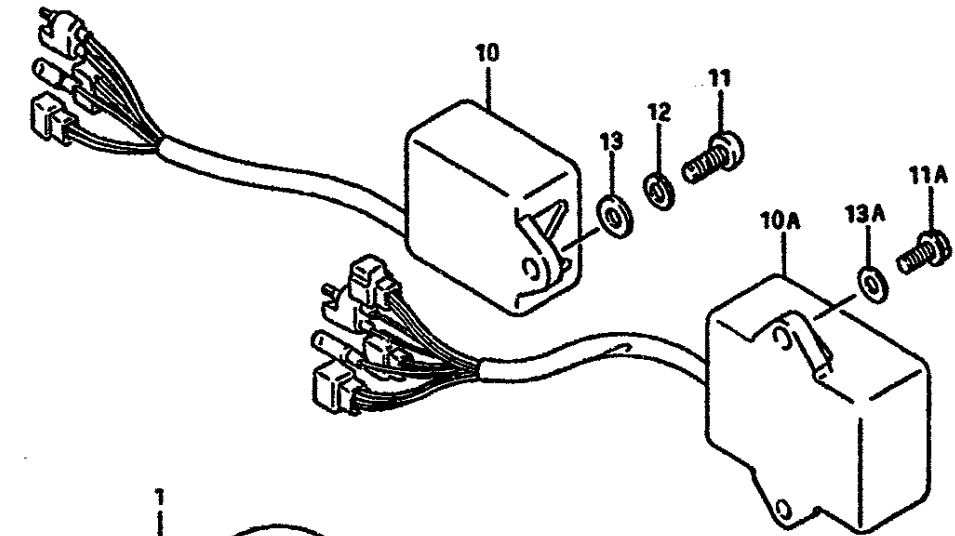  


Ref No	Part No	Description
1	34120-14A20	Speedometer (mile/kilo)
2	02112-04126	Screw
3	08322-21046	Washer
4	08321-21046	Lock Washer
5	34124-14A10	Knob,trip
6	34981-13A00	Screw
7	34150-14A10	Hood,meter
7	34150-14A70	Hood,meter
8	34111-14A10	Case,meter
9	34183-14A00	Screw
10	34173-14A10	Socket,meter
11	09471-12028	Bulb (12v,3.4w)
12	09471-12077	Bulb (12v,1.7w)
13	34950-14A10	Bracket,meter
14	34189-14A10	Cushion
15	09160-05031	Washer (5.5x16x1.2)
16	08313-11055	Nut
17	34956-31001	Cushion
18	09160-08057	Washer (8.5x20x1.6)
19	08321-21084	Lock Washer
20	08310-11085	Nut
21	34910-14A00	Cable Assy,speedometer
22	01107-05167	Bolt
23	34938-14A01	Clamp,meter Cable
24	02112-05208	Screw
25	08310-11058	Nut
26	34200-14A00	Tachometer
27	36859-36590	Connector,lead Wire

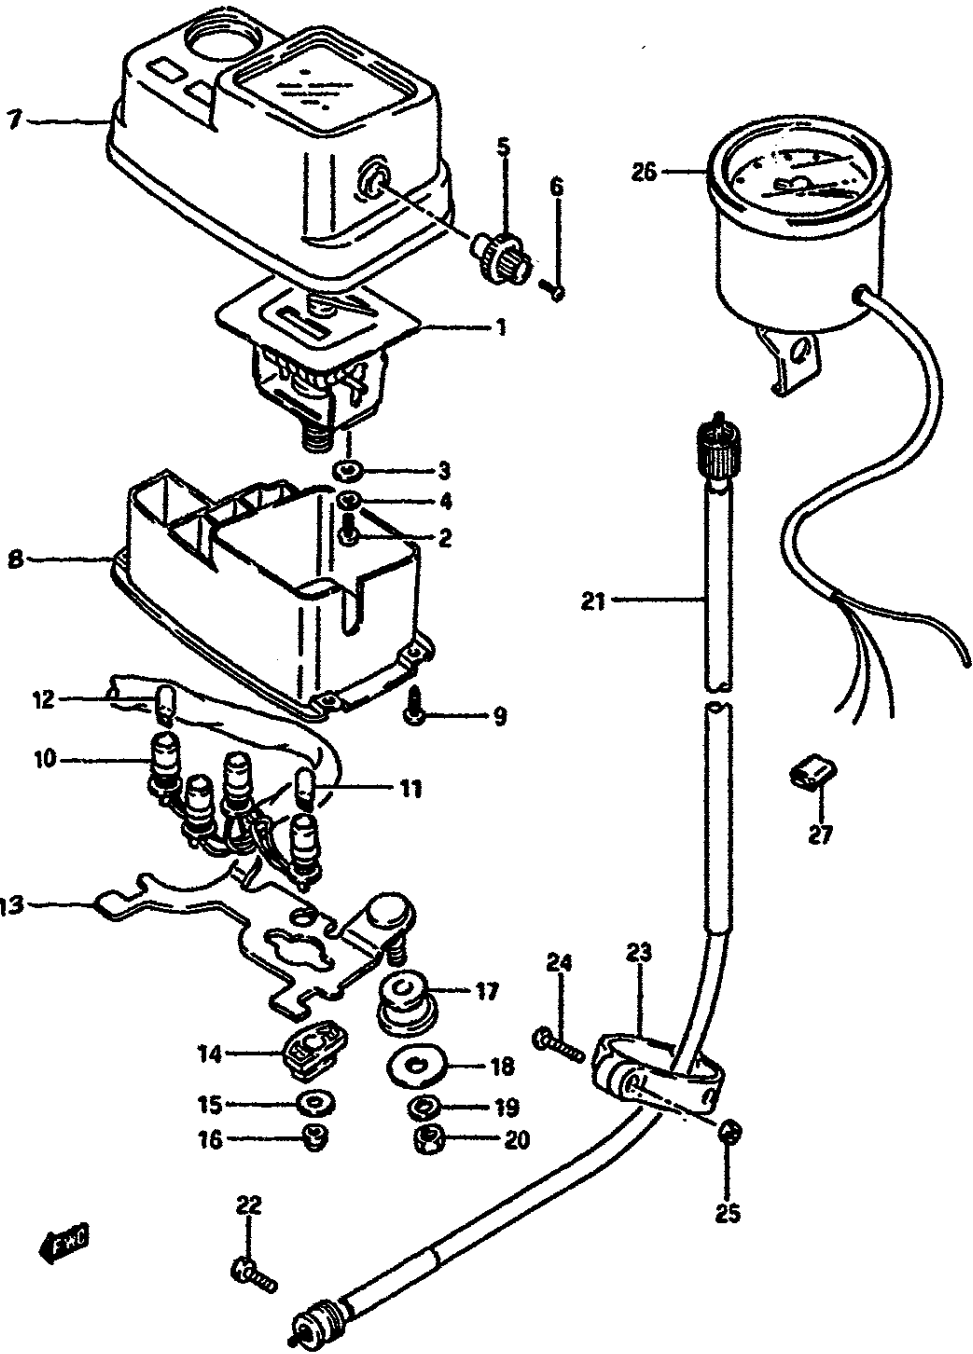 


FWO

 DR600RK E2

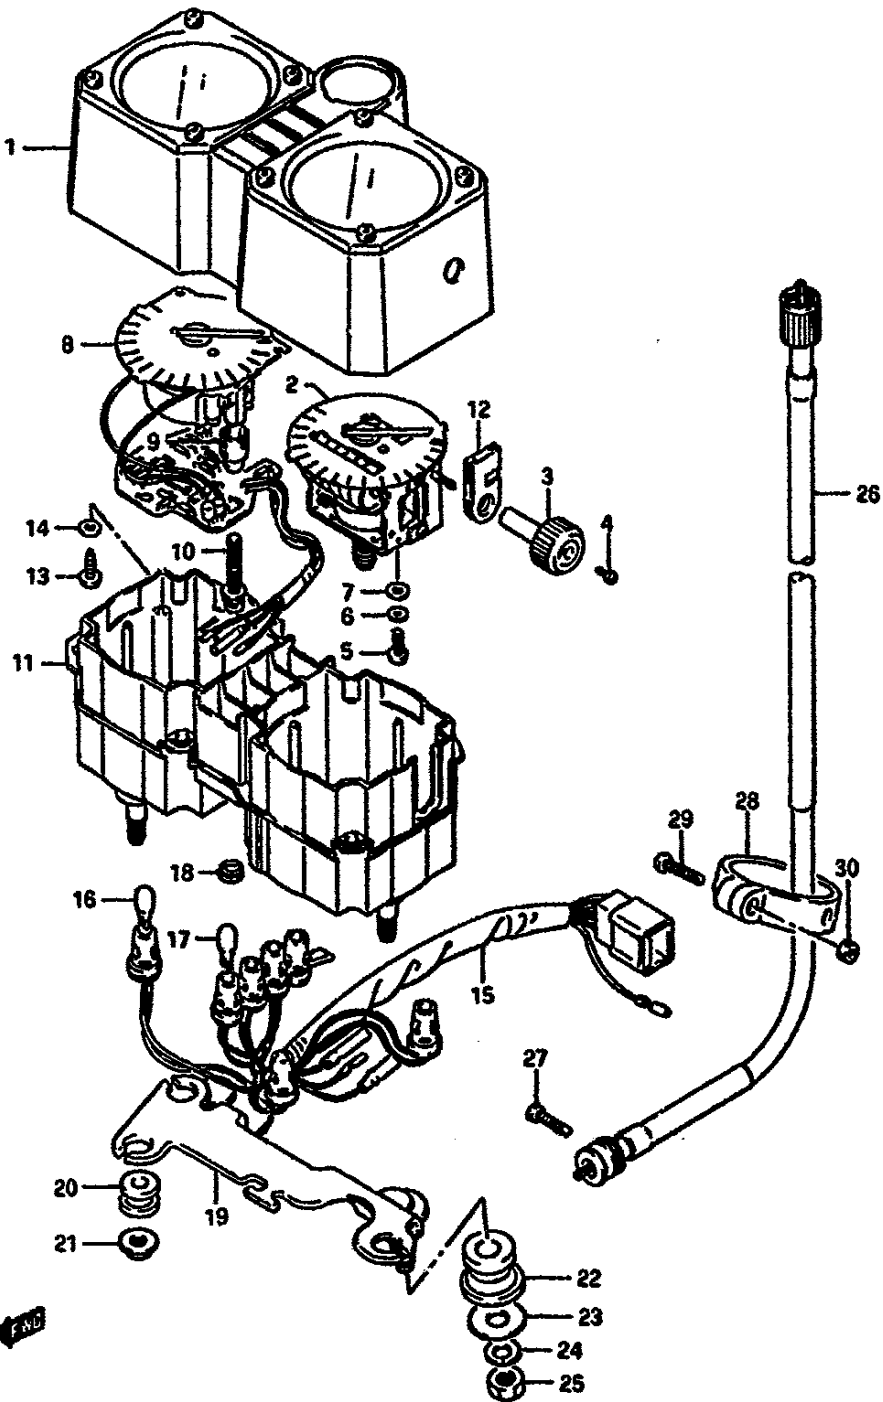


Ref No	Part No	Description
1	34150-14A00	Hood, meter
2	34120-14A50	Speedometer (mile/kilo)
3	34124-14A00	Knob, trip
4	34184-14A00	Screw
5	02112-03106	Screw
6	08321-21036	Lock Washer
7	08322-21036	Washer
8	34220-14A00	Tachometer
8	34220-14A40	Tachometer
9	34187-14A00	Spacer
10	34283-14A00	Screw
11	34111-14A01	Case, meter
12	34196-14A00	Grommet
13	03112-05129	Screw
14	08321-21057	Lock Washer
15	34170-14A00	Socket
16	09471-12100	Bulb (12v,3w)
17	09471-12085	Bulb (12v,1.7w)
18	34194-14A00	Cap
19	34950-14A00	Bracket, meter
20	34996-43410	Cushion
21	34185-14A00	Nut
22	34956-31001	Cushion
23	09160-08057	Washer (8.5x20x1.6)
24	08321-21084	Lock Washer
25	08310-11085	Nut
26	34910-14A10	Cable Assy, speedometer
27	01107-05167	Bolt
28	34938-14A01	Clamp, meter Cable
29	02112-05208	Screw
30	08310-11058	Nut

 DR600RK E2

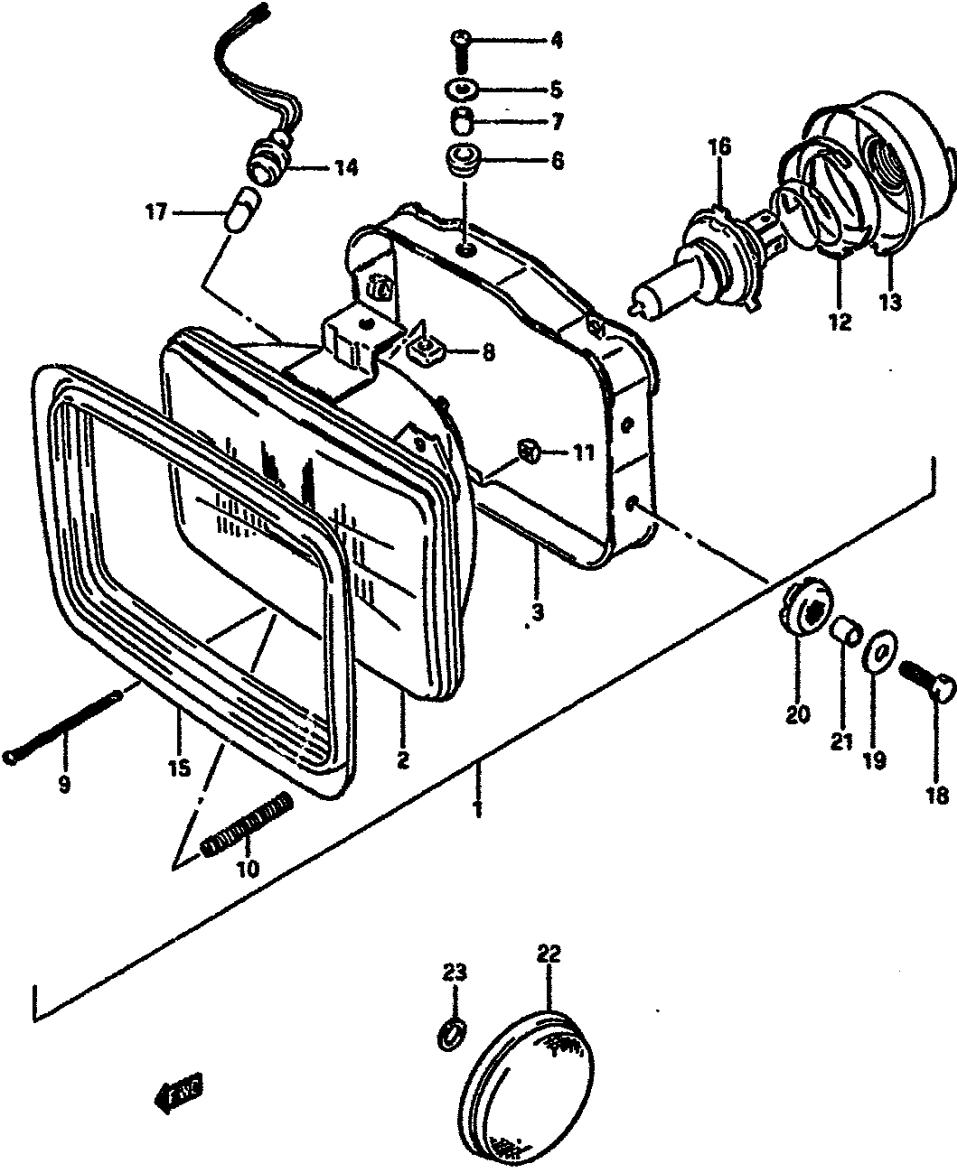


Ref No	Part No	Description
1	35100-14A00-999	Headlamp Assy
1	35100-14C00-999	Headlamp Assy
1	35100-14A30-999	Headlamp Assy
1	35100-14C30-999	Headlamp Assy
2	35121-14A00	• . Unit
2	35121-14C00	• . Unit
2	35121-14A30	• . Unit
2	35121-14C30	• . Unit
3	35141-14A00	• . Housing
4	02112-05208	• . Screw
5	35138-45230	• . Washer
6	35139-45230	• . Cushion
7	35133-14A00	• . Spacer
8	35135-45900	• . Nut
9	35151-49200	• . Screw,adjusting
10	35154-49200	• . Spring
11	35135-45600	• . Nut
12	35136-01A00	• . Holder,bulb
13	35173-01440	• . Cover,socket
14	36118-45900	• . Socket
15	35129-14C00	• . Shade
16	09471-12060	Bulb (12v,60/55w,h4)
16	09471-12061	Bulb (12v,60/55w,ha)
17	09471-12001	Bulb (12v,3.4w)
18	01107-06207	Bolt
19	09160-06027	Washer (6.5x20x1.2)
20	09320-09018	Cushion
21	09180-06030	Spacer (6.8x10x10)
22	35950-14A00	Reflex Reflector,fr Side
23	08321-21057	Lock Washer

Ref No	Part No	Description
1	35601-14A23-999	Lamp Assy,front Turn Signal
1	35601-14A53-999	Lamp Assy,front Turn Signal
1	35601-14A23-999	Lamp Assy,front Turn Signal
2	35612-02181	. . Lens
3	35613-48700	. . Gasket
4	35623-02180	. . Screw (4x38)
5	03211-04308	. . Screw
6	35627-43010	. . Gasket
7	09471-12045	Bulb (12v,21w)
7	09471-12006	Bulb (12v,23w)
8	08316-26105	Nut
9	35670-14A00	Bracket,front Rh
10	35680-14A00	Bracket,front Lh
11	02112-05105	Screw
12	08321-21055	Lock Washer
13	35603-14A22-999	Lamp Assy,rear Turn Signal
13	35603-14A52	Lamp Assy,rear Turn Signal
14	35652-02181	. . Lens
15	35613-48700	. . Gasket
16	35623-02180	. . Screw (4x38)
17	03211-04308	. . Screw
18	35627-43010	. . Gasket
19	09471-12045	Bulb (12v,21w)
19	09471-12006	Bulb (12v,23w)
20	08316-26105	Nut
21	09407-14403	Clamp
22	38610-31310	Relay Assy,turn Signal
23	38610-45091	Relay Assy,turn Signal
24	38621-14A00	Bracket,relay

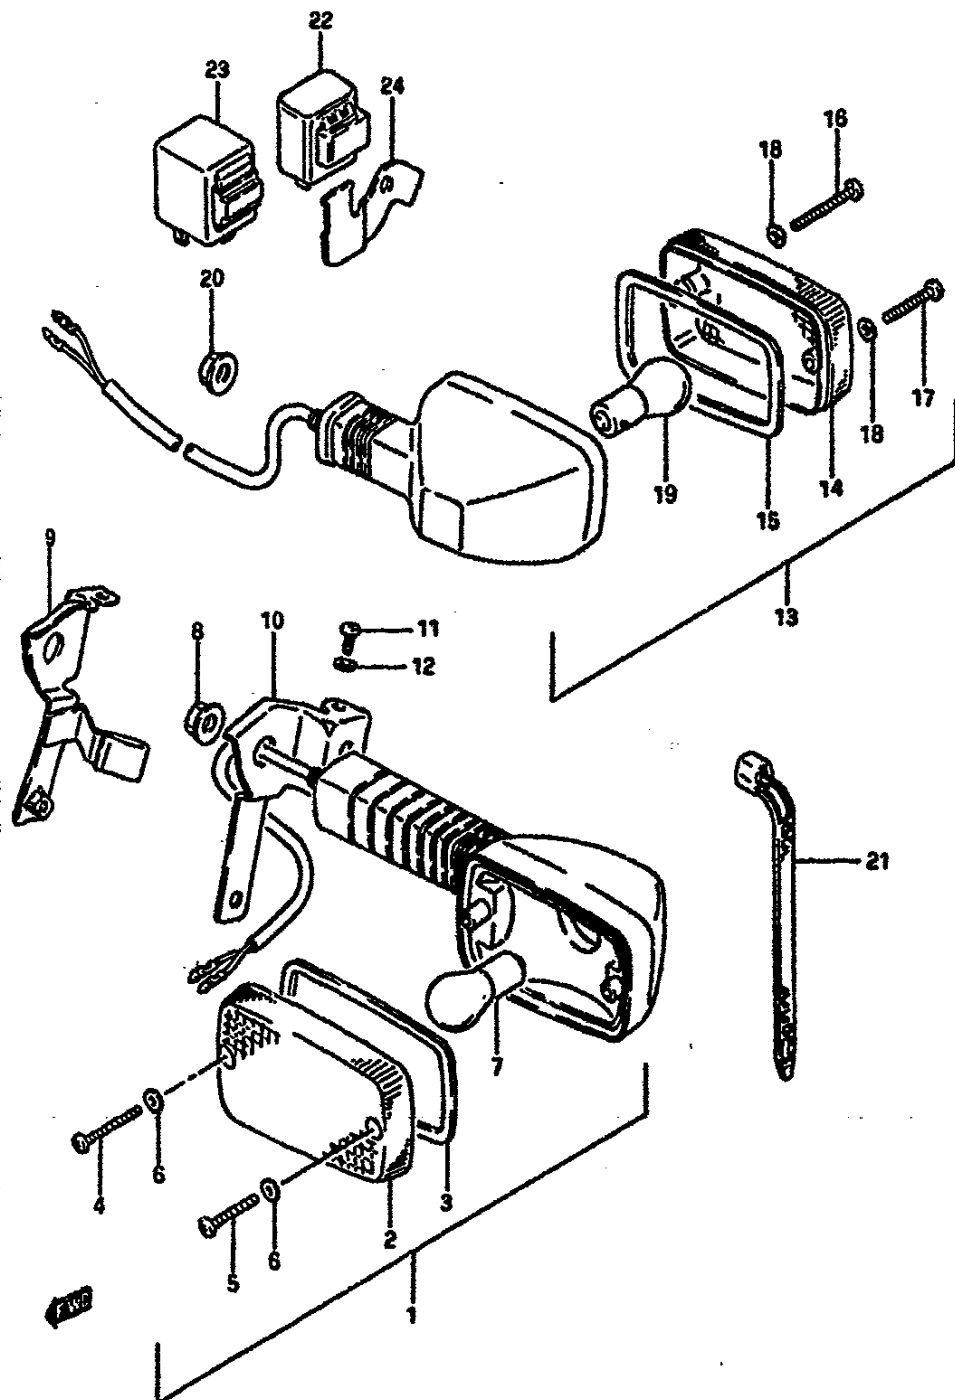 


DR600RK E2

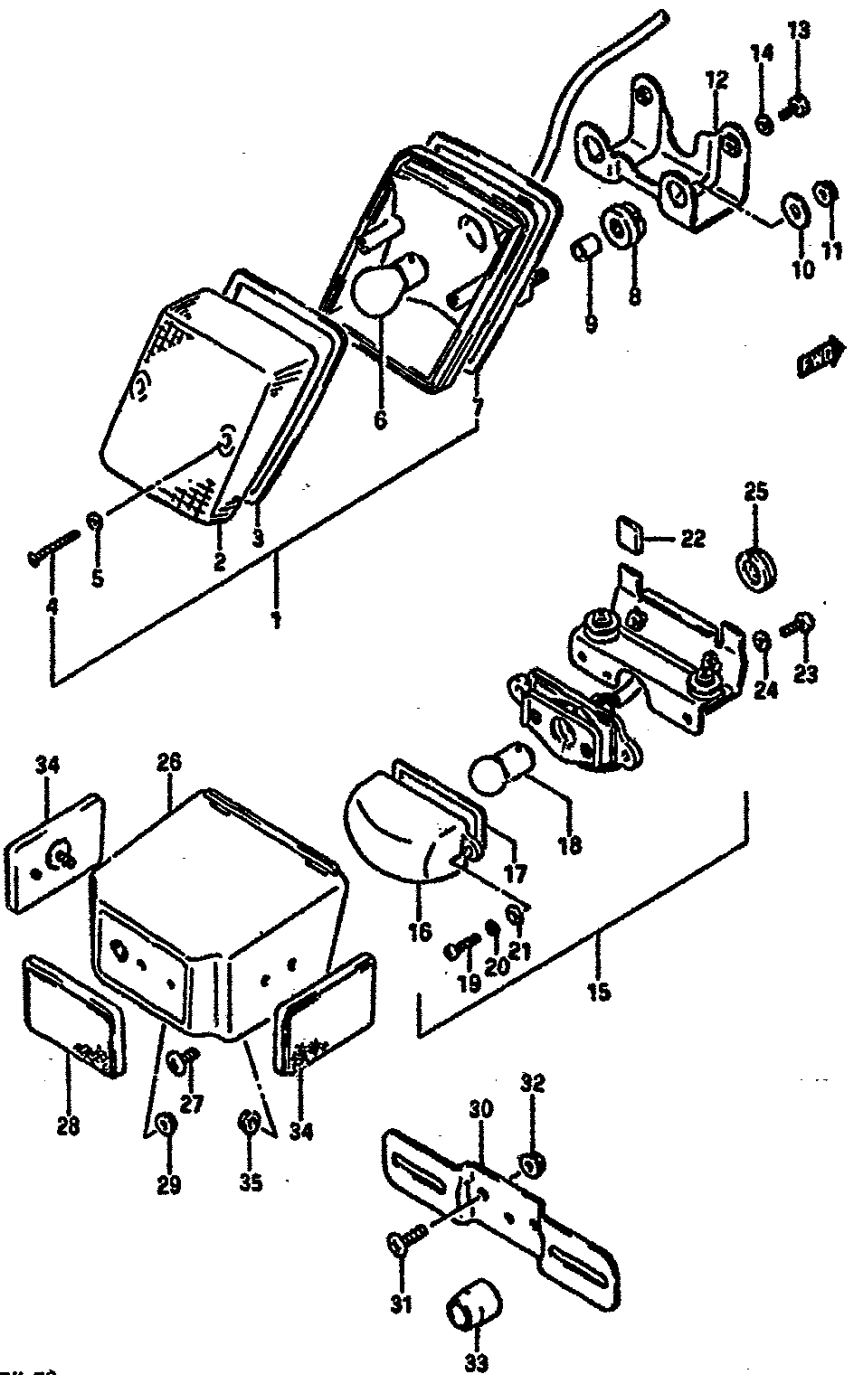 


Ref No	Part No	Description
1	35710-14A50	Lamp Assy,rear Combination
1	35710-14A00-999	Lamp Assy,rear Combination
2	35712-14A00	. Lens
3	35713-14A00	. Gasket
4	03211-04258	. Screw
5	35627-43010	. Gasket
6	09471-12083	. Bulb (12v,21/5w)
6	09471-12084	Bulb (12v,23/8w)
7	35733-14A00	. Gasket
8	09320-09018	Cushion
9	09180-06030	Spacer (6.8x10x10)
10	09160-06027	Washer (6.5x20x1.2)
11	08310-11066	Nut
12	35726-14A00	Bracket,tail Lamp
13	01107-06126	Bolt
14	08321-21066	Lock Washer
15	35910-14A50	Lamp Assy,license
15	35910-14A00	Lamp Assy,license
16	35912-00A20	. Lens
16	35912-00A10	. Lens
17	35913-04A00	. Gasket
18	09471-12140	. Bulb (12v,5w)
18	09471-12037	. Bulb (12,8w)
19	02112-04167	. Screw
20	08321-21047	. Lock Washer
21	08322-21047	. Washer
22	35936-14A00	. Cap
23	02112-06206	Screw
24	08321-21066	Lock Washer
25	09308-07011	Grommet
26	35917-14A00	Cover,license Lamp
26	35917-14A30	Cover,license Lamp
27	02142-05164	Screw
28	35970-14A00	Reflex Reflector,rear
28	35970-17300	Reflex Reflector,rear
29	08316-26055	Nut
30	35927-14A00	Bracket,license Plate
31	02142-06164	Screw
32	08316-16066	Nut
33	09320-08035	Cushion
34	35950-14A50	Reflex Reflector,rear Side
35	08316-26055	Nut

 DR600P E2

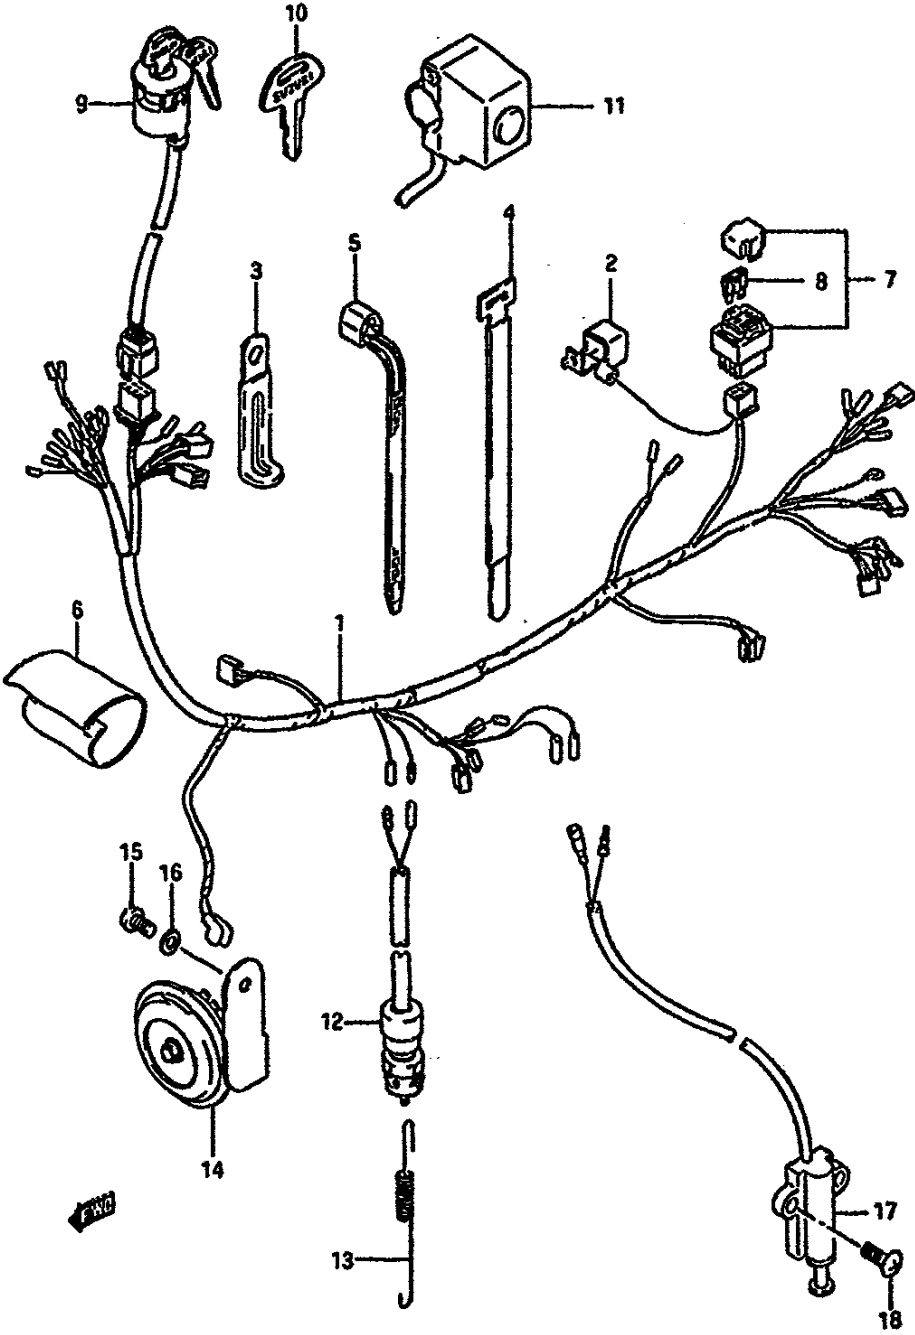



Ref No	Part No	Description
1	36610-14A12	Harness,wiring
1	36610-14A31	Harness,wiring
1	36610-14A52	Harness,wiring
1	36610-14A61	Harness,wiring
2	33624-14A00	• . Cap,battery (+) Terminal
3	09404-06401	Clamp (l:50)
3	09404-08413	Clamp (l:80)
3	09404-06422	Clamp,battery (+) Lead Wire
4	09407-18301	Clamp (l:180)
4	09407-12402	Clamp (l:120)
5	09407-14403	Clamp (l:125)
5	09407-14403	Clamp (l:125)
5	09407-14403	Clamp (l:125)
5	09407-18402	Clamp (l:165)
5	09407-25401	Clamp (l:235)
6	36618-13600	Cover,wiring Harness
7	36740-04701	Fuse Assy
8	09481-15101	• . Fuse (15a)
9	37110-01A01	Switch Assy,ignition
10	37145-02400	Key,blank
11	37830-13A00	Switch Assy,engine Stop
12	37740-14A00	Switch Assy,stop Lamp
13	09443-06058	Spring
13	09443-06079	Spring
14	38500-14A10	Horn Assy
14	38500-14A00	Horn Assy
15	02112-06125	Screw
16	08321-21064	Lock Washer
17	37840-14A20	Switch,side Stand
18	02112-06205	Bolt

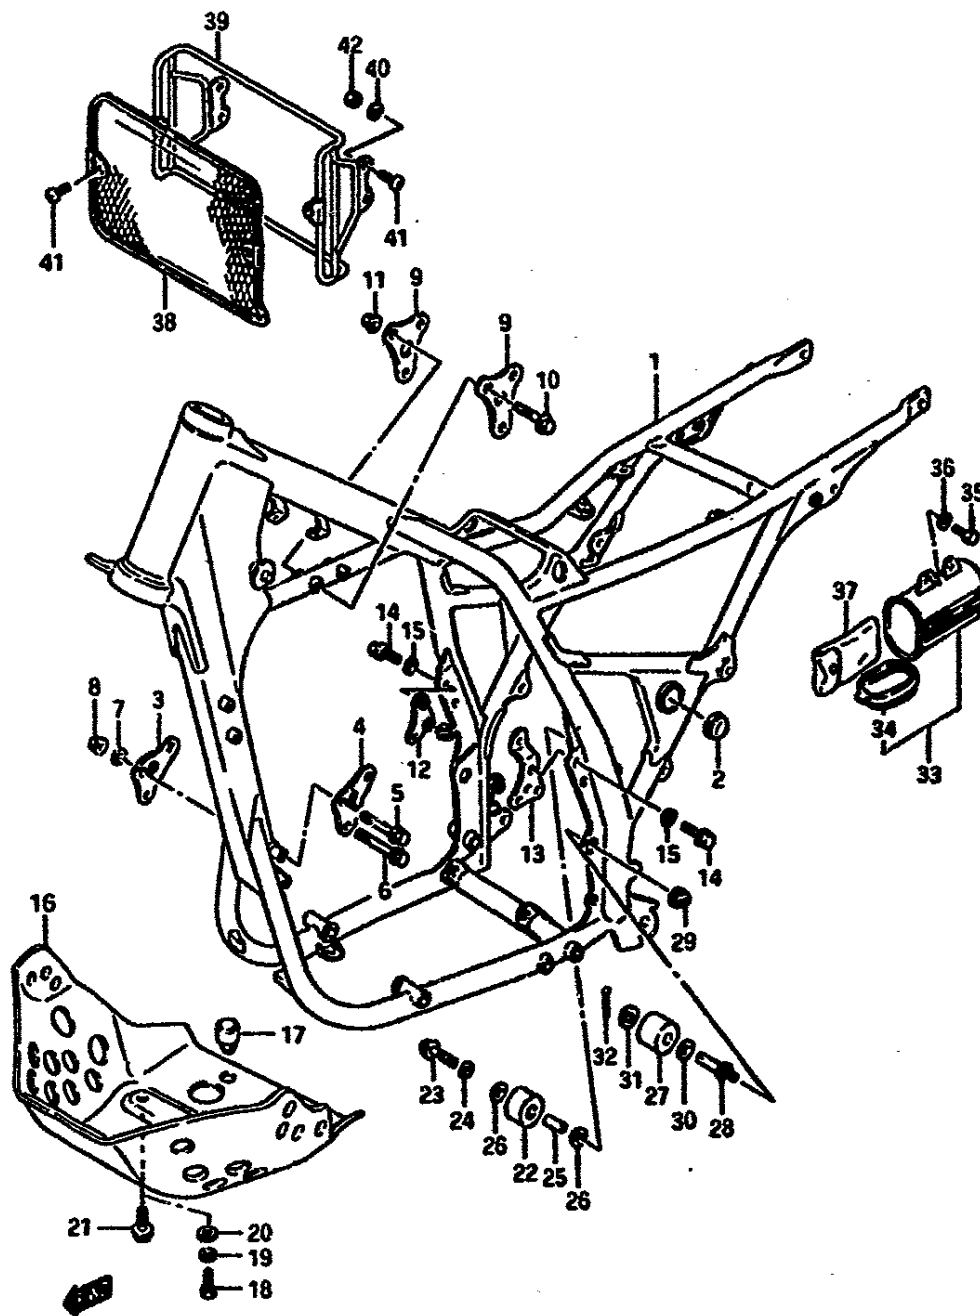 

Ref No	Part No	Description
1	41100-15A00-10V	Frame (white)
1	41100-15A30-10V	Frame (white)
1	41100-15A70-10V	Frame (white)
1	41100-15A30-34S	Frame (blue)
1	41100-15A80-34S	Frame (blue)
1	41100-15A00-34S	Frame (blue)
1	41100-15A70-34S	Frame (blue)
1	41100-15C20-34S	Frame (blue)
1	41100-15A10-34S	Frame (blue)
1	41100-15C10-34S	Frame (blue)
1	41100-14C31-34S	Frame (blue)
1	41100-14C41-34S	Frame (blue)
1	41100-14C51-34S	Frame (blue)
2	41499-14A00-10V	Cap,cushion Lever (white)
2	41499-14A00-34S	Cap,cushion Lever (blue)
3	41911-14A00-291	Plate,front Rh (black)
4	41921-14A00-291	Plate,front Lh (black)
5	09103-08037	Bolt,upper
6	09103-08063	Bolt,lower
7	08321-31087	Lock Washer
8	08319-21088	Nut
9	41991-14A00-291	Plate,upper (black)
10	01517-08508	Bolt
11	08319-31087	Nut
12	41940-14A00-291	Plate,rear Rh (black)
13	41950-14A00-291	Plate,rear Lh (black)
14	01517-08207	Bolt
15	08321-31087	Lock Washer
16	42511-14A10	Protector,engine
16	42511-14A20	Protector,engine
17	09321-10017	Cushion
18	01107-06167	Bolt
19	08321-31067	Lock Washer
20	09160-06002	Washer
21	01517-08167	Bolt
22	43910-01B00	Roller,chain Upper
23	01107-08408	Bolt
24	08321-31087	Lock Washer
25	09180-08119	Spacer
26	08211-08161	Washer
27	43911-14200	Roller,chain Lower
28	43915-14A00	Bolt,lower
29	08319-31107	Nut
30	08322-21128	Washer,inner
31	49317-15A00	Washer,outer
32	04111-25208	Cotter Pin
33	41550-37210	Holder,tool
34	41552-37210	• Cap
35	01107-06165	Bolt
36	09160-06039	Washer
37	09800-00242	Tool Assy
38	48510-14A01	Guard,headlamp
39	48520-14A00	Brace,headlamp Guard
40	09160-06069	Washer


Ref No	Part No	Description
41	02142-06125	Screw
42	08319-21065	Nut

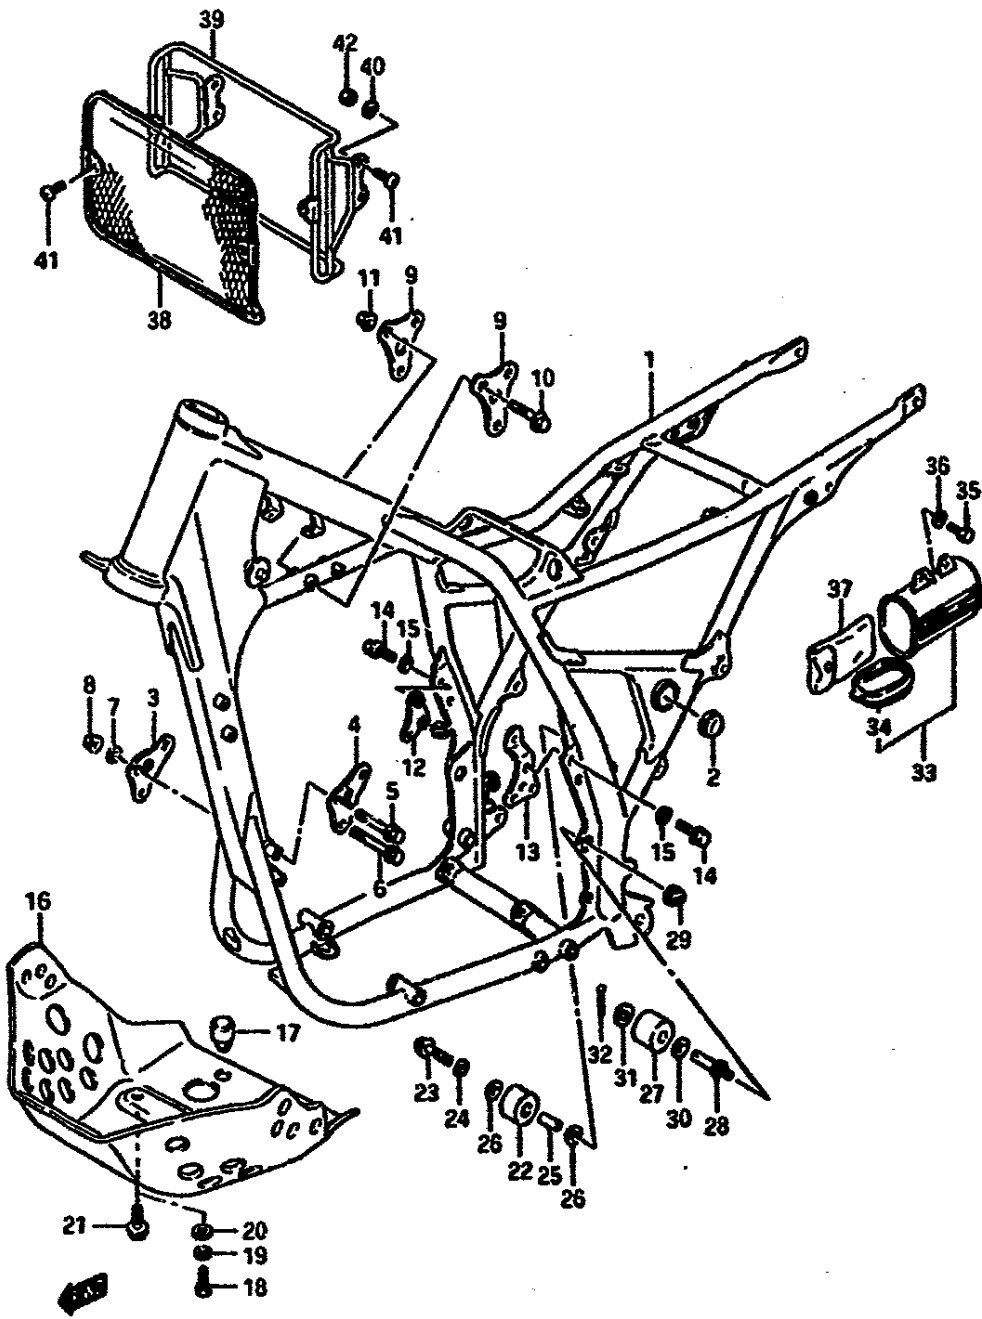 

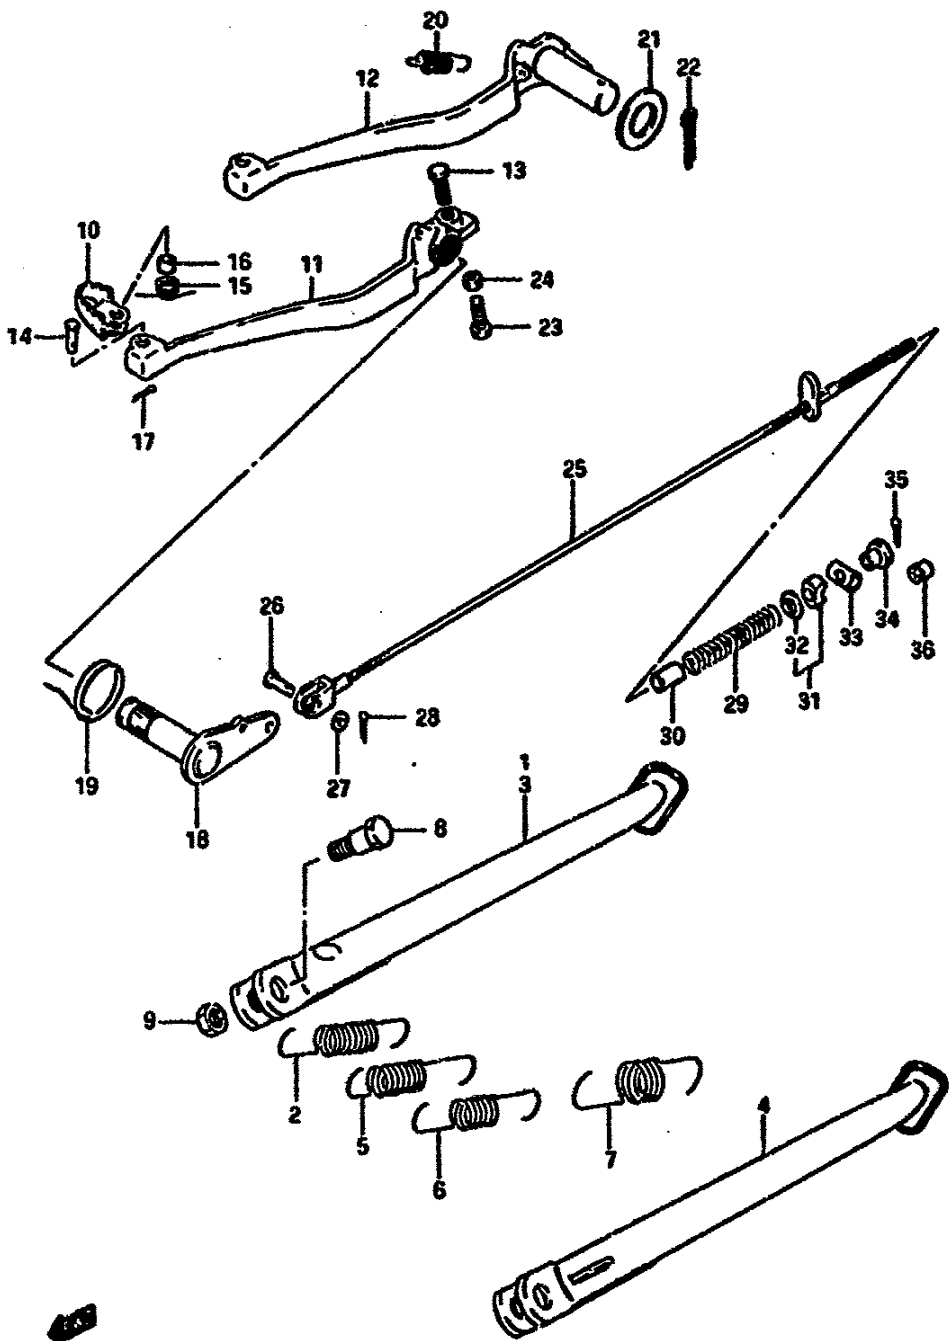 

Ref No	Part No	Description
1	42310-14A00-10V	Stand,prop (white)
1	42310-14A00-34S	Stand,prop (blue)
3	42310-14A10-10V	Stand,prop (white)
3	42310-14A10-34S	Stand,prop (blue)
4	42310-14A20-34S	Stand,prop (blue)
6	09443-18015	Spring
7	09443-14030	Spring,inner
8	09443-22003	Spring,outer
9	09111-10038	Bolt
10	08310-22107	Nut
11	43110-14130	Pedal,brake
10	43120-14A00	Arm,pedal
12	43120-14C00	Arm,pedal
13	01107-06205	Bolt
14	09200-06038	Pin
15	09444-11004	Spring
16	09180-06137	Spacer
17	04111-20158	Cotter Pin
18	43130-14A00	Arm,brake Pedal Rod
19	09448-25005	Spring,return
20	09443-10033	Spring,return
21	09160-17021	Washer
22	04111-30308	Cotter Pin
23	09100-06009	Bolt (6x27)
24	08310-11067	Nut
25	58510-14A00	Cable,rear Brake
26	09200-05001	Pin,front
27	08322-21066	Washer
28	04111-20158	Cotter Pin
29	09440-11012	Spring
30	61155-79000	Cushion
31	43370-37300	Cushion,pin
32	09169-06010	• . Washer
33	43380-37200	Pin
34	09150-06009	Nut
35	04111-20158	Cotter Pin
36	15918-53016	Cap

 
DR600RK E2

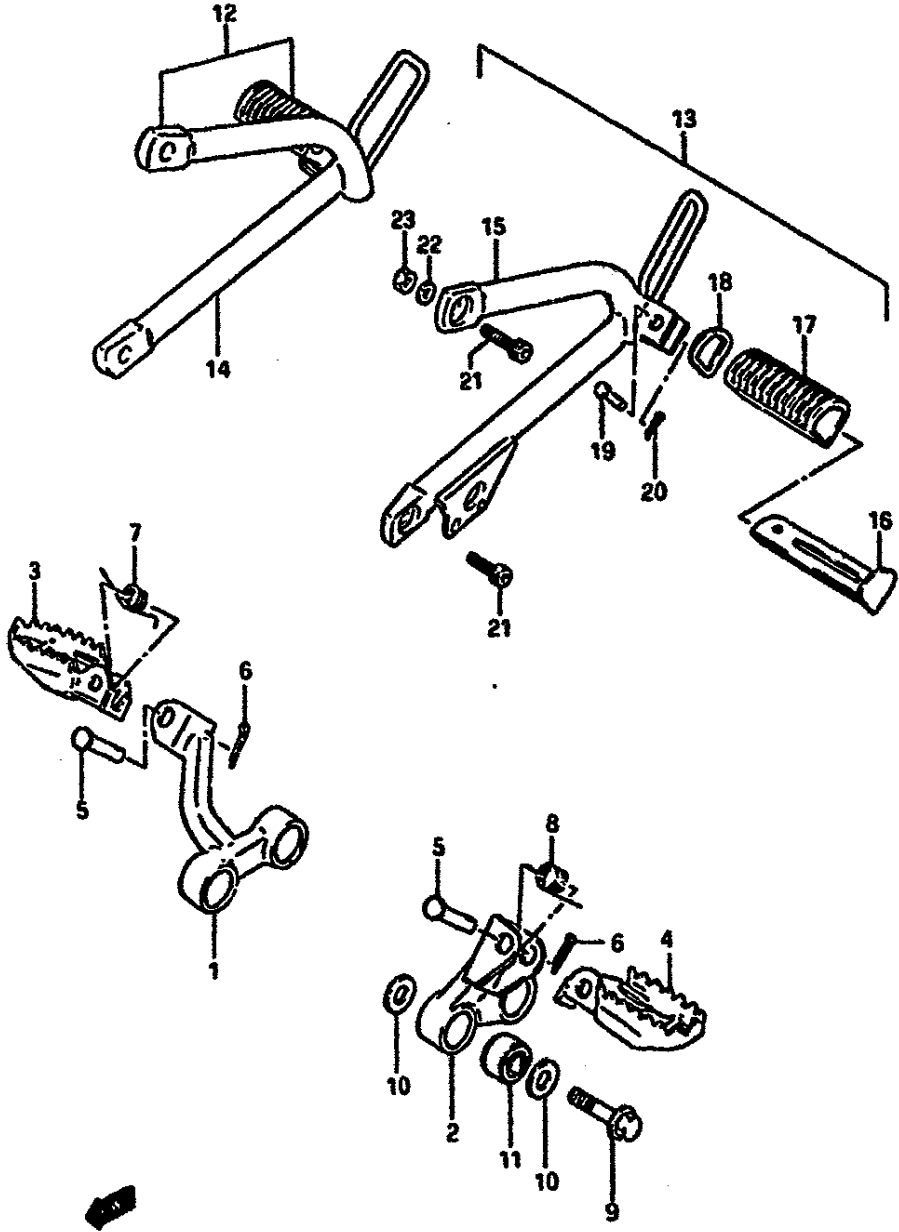


Ref No	Part No	Description
1	43510-14A00-10V	Bar,footrest Rh (white)
1	43510-14A00-34S	Bar,footrest Rh (blue)
2	43520-14A00-10V	Bar,footrest Lh (white)
2	43520-14A00-34S	Bar,footrest Lh (blue)
3	43550-14A00-10V	Footrest,front Rh (white)
3	43550-14A00-34S	Footrest,front Rh (blue)
4	43560-14A00-10V	Footrest,front Lh (white)
4	43560-14A00-34S	Footrest,front Lh (blue)
5	09200-10008	Pin
6	04111-20208	Cotter Pin
7	09448-15008	Spring,rh
8	09448-15004	Spring,lh
9	09103-10045	Bolt
10	09160-10059	Washer
11	09319-10033	Bush
12	43600-14A10-10V	Footrest,pillion Rh (white)
12	43600-14A10-34S	Footrest,pillion Rh (blue)
12	43600-14C00-34S	Footrest,pillion Rh (blue)
13	43700-14A20-10V	Footrest,pillion Lh (white)
13	43700-14A20-34S	Footrest,pillion Lh (blue)
13	43700-15A00-34S	Footrest,pillion Lh (blue)
13	43700-14C00-34S	Footrest,pillion Lh (blue)
14	43650-14A00-10V	. Holder,rh (white)
14	43650-14A00-34S	. Holder,rh (blue)
14	43650-14C00-34S	. Holder,rh (blue)
15	43750-14A00-10V	. Holder,lh (white)
15	43750-14A00-34S	. Holder,lh (blue)
15	43750-15A00-34S	. Holder,lh (blue)
15	43750-14C00-34S	. Holder,lh (blue)
16	43610-14A10	. Bar,rh
16	43620-14A10	. Bar,lh
17	43612-14A00	. Rubber
18	43631-14A10	. Washer
19	09200-06010	. Pin
20	04111-20158	. Cotter Pin
21	07110-08208	Bolt
22	08321-21084	Lock Washer
23	08310-11085	Nut

FUEL TANK (MODEL G/H)

Ref No	Part No	Description
1	44100-14A80-8LB	Tank Assy,fuel
1	44100-14A90-8LB	Tank Assy,fuel
2	68110-14A60-8LC	• . Tape Set,fuel Tank
3	68111-14A00-019	• . Emblem (black)
4	44100-15A20-9LJ	Tank Assy,fuel
4	44100-15A30-9LJ	Tank Assy,fuel
5	68110-14A80-08L	• . Tape Set,fuel Tank (blue)
6	68120-14A00-14L	• . Emblem Set,fuel Tank (white)
7	44200-01890	Cap Set,fuel Tank
8	44248-40400	• . Gasket
9	09343-05129	Hose (l:240-200)
10	44486-32101	Clamp
11	09329-10016	Cushion,front
12	44541-14500	Cushion,upper
13	09407-20401	Clamp
14	44542-14A00	Cushion,rear No.1
15	01107-06306	Bolt
16	09160-06072	Washer
17	09180-06072	Spacer
18	09320-10020	Cushion,rear
19	09320-14013	Cushion,rear
20	86932-73060	Plate,fuel Caution

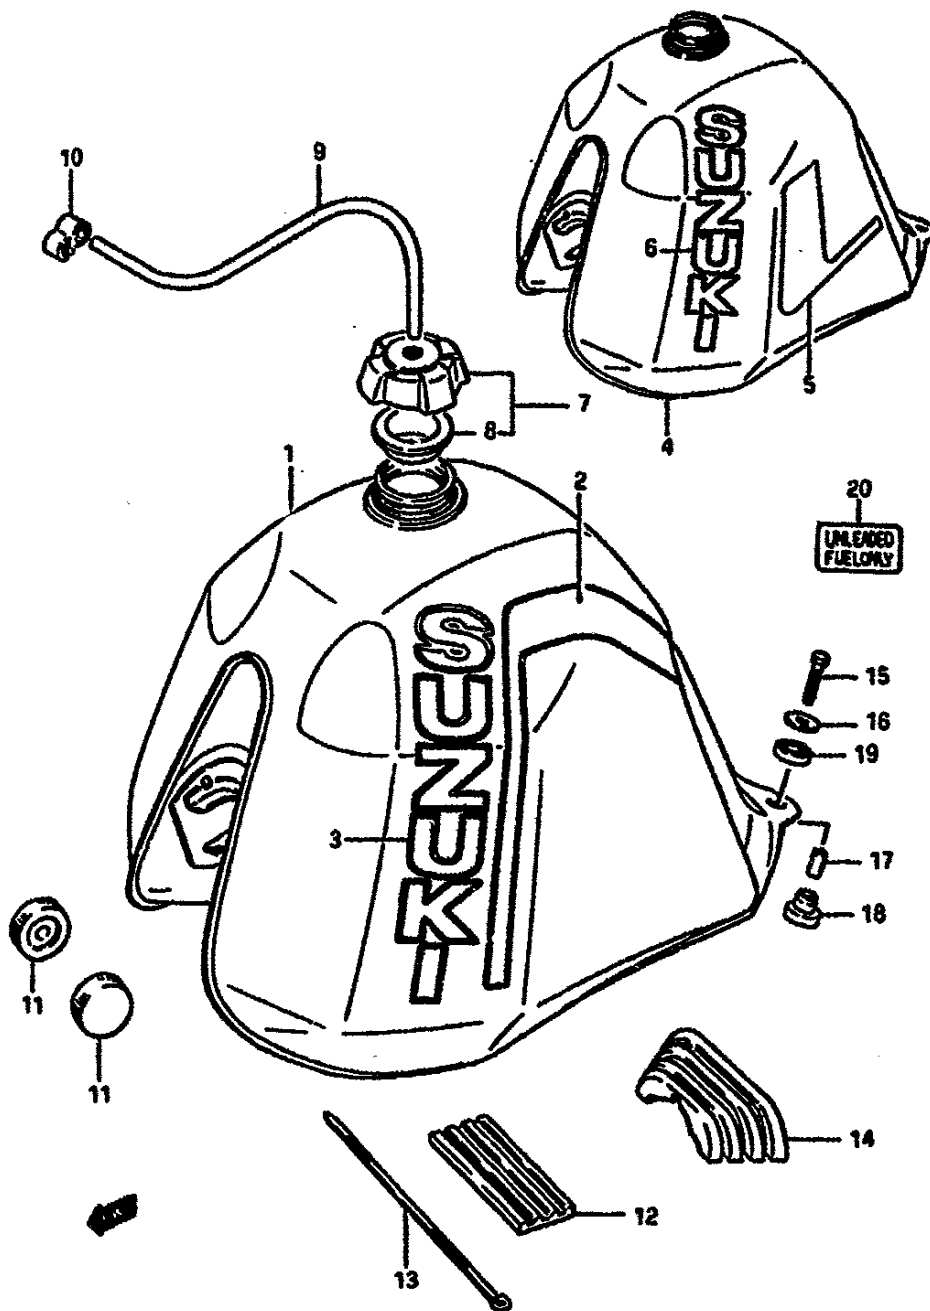 


DR600RK E2

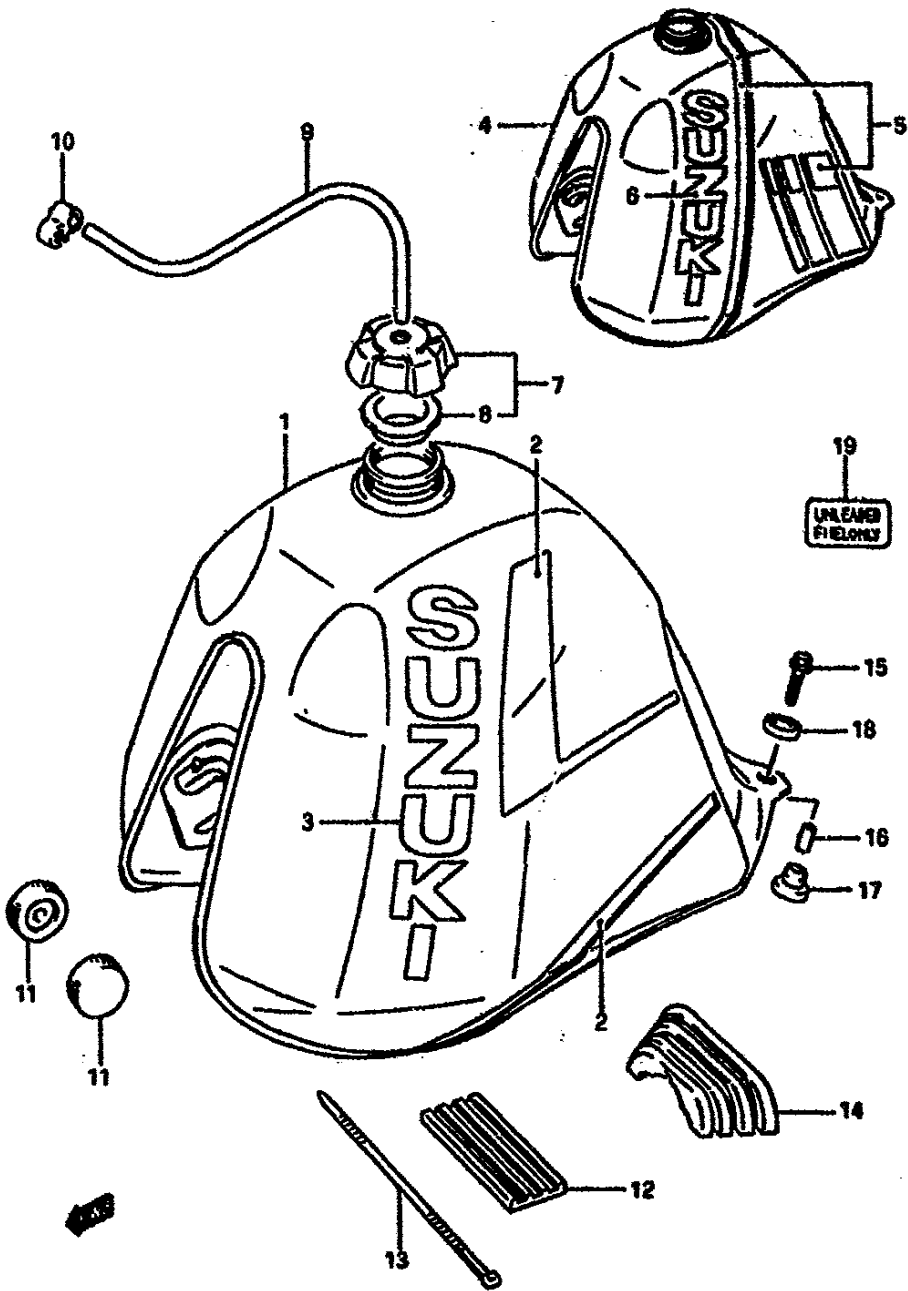 

Ref No	Part No	Description
1	44100-15A60-9LJ	Tank Assy,fuel
1	44100-15A70-9LJ	Tank Assy,fuel
2	68110-15A00-9WF	• . Tape Set,fuel Tank
3	68120-14A00-14L	• . Emblem Set,fuel Tank (white)
4	49100-15A20-9EK	Tank Assy,fuel
4	49100-15A30-9EK	Tank Assy,fuel
5	68110-15A20-9PK	• . Tape Set,fuel Tank
6	68120-14A00-30H	• . Emblem,fuel Tank
7	44200-01890	Cap Set,fuel Tank
8	44248-40400	• . Gasket
9	09352-50823-240	Hose (l:240-200)
10	44486-32101	Clamp
11	09329-10016	Cushion,front
12	44541-14500	Cushion,upper
13	09407-20401	Clamp
14	44542-14A00	Cushion,rear No.1
15	01517-06356	Bolt
16	09180-06072	Spacer
17	09320-10020	Cushion,rear
18	09320-14013	Cushion,rear
19	86932-73060	Plate,fuel Caution


FUEL COCK


Ref No	Part No	Description
1	44300-14A01	Cock Assy,fuel
2	09128-06006	Bolt
3	09168-06010	Gasket
3	09168-06026	Gasket
4	44365-14A00	Spacer
5	44366-14A00	Gasket
6	09343-07073	Hose,fuel (l:380-260)
6	09352-70103-28A	Hose,fuel (l:1280-260)
7	09401-10402	Clip
8	09440-13012	Spring

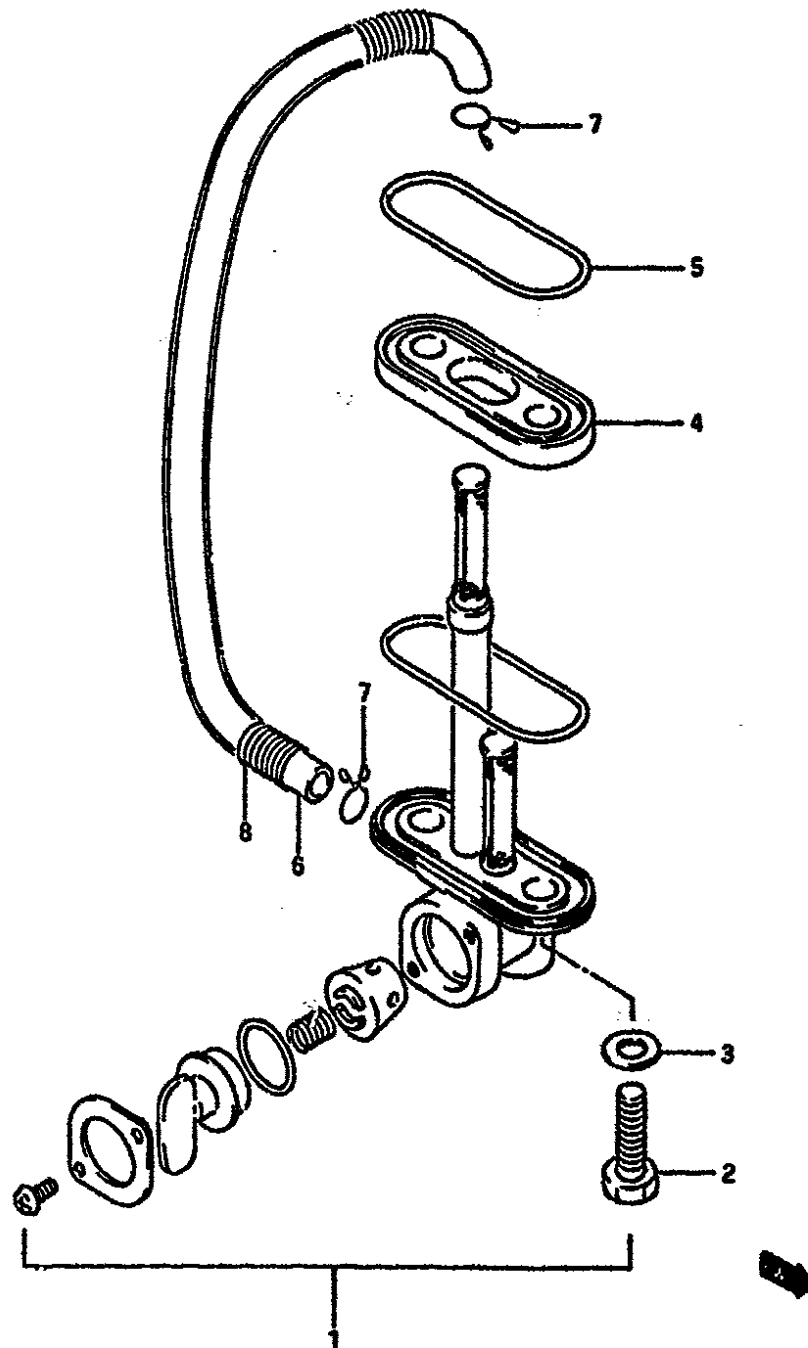 



DR600RK E2

Ref No	Part No	Description
1	45100-15A60-8MW	Seat Set
1	45100-15A50-8MW	Seat Set
1	45100-15A80-8MW	Seat Set
1	45100-15A70-8MW	Seat Set
1	45100-14C50-9LH	Seat Set
1	45100-14C60-9LH	Seat Set
1	45100-14C70-9LH	Seat Set
2	45180-14A00-58D	• . Band,seat (blue)
2	45180-14A00-5AK	• . Band,seat (white)
3	45117-14A10	• . Bracket,seat Rh
4	45118-14A10	• . Bracket,seat Lh
5	45147-23450	• . Cushion,upper
6	45150-23450	• . Cushion,lower
7	45219-23450	• . Spacer
8	08212-06201	• . Washer,upper
9	08322-21066	• . Washer,lower
10	08316-26066	• . Nut
11	45149-31300	• . Cushion
12	09321-08019	• . Cushion
13	09329-08003	• . Grommet,front
14	09320-08018	• . Grommet,rear
15	45255-15510	• . Cushion,battery Stopper
16	45120-14A00	Plate,front Hook
17	09321-08010	• . Cushion
18	01107-08166	Bolt
19	46310-14A20-291	Carrier,sport (black)
19	46310-14A20-34S	Carrier,sport (blue)
19	46310-14A30-291	Carrier,sport (black)
19	46310-14A30-34S	Carrier,sport (blue)
20	01107-08207	Bolt
21	08321-21088	Lock Washer
22	08322-21088	Washer
23	01517-08705	Bolt,rear
24	46300-14A40	Carrier,sport
25	07110-08358	Bolt,front Rh
26	07110-08257	Bolt,front Lh
27	07110-08608	Bolt,rear Rh
28	07110-08508	Bolt,rear Lh
29	46322-14A40	Tube,pillion Handle
30	01517-08167	Bolt
31	95700-31300-KEY	Lock Set,helmet
31	95700-31810	Lock Set,helmet
32	07110-06165	Bolt
33	11967-82000	Label,asbestos Warning

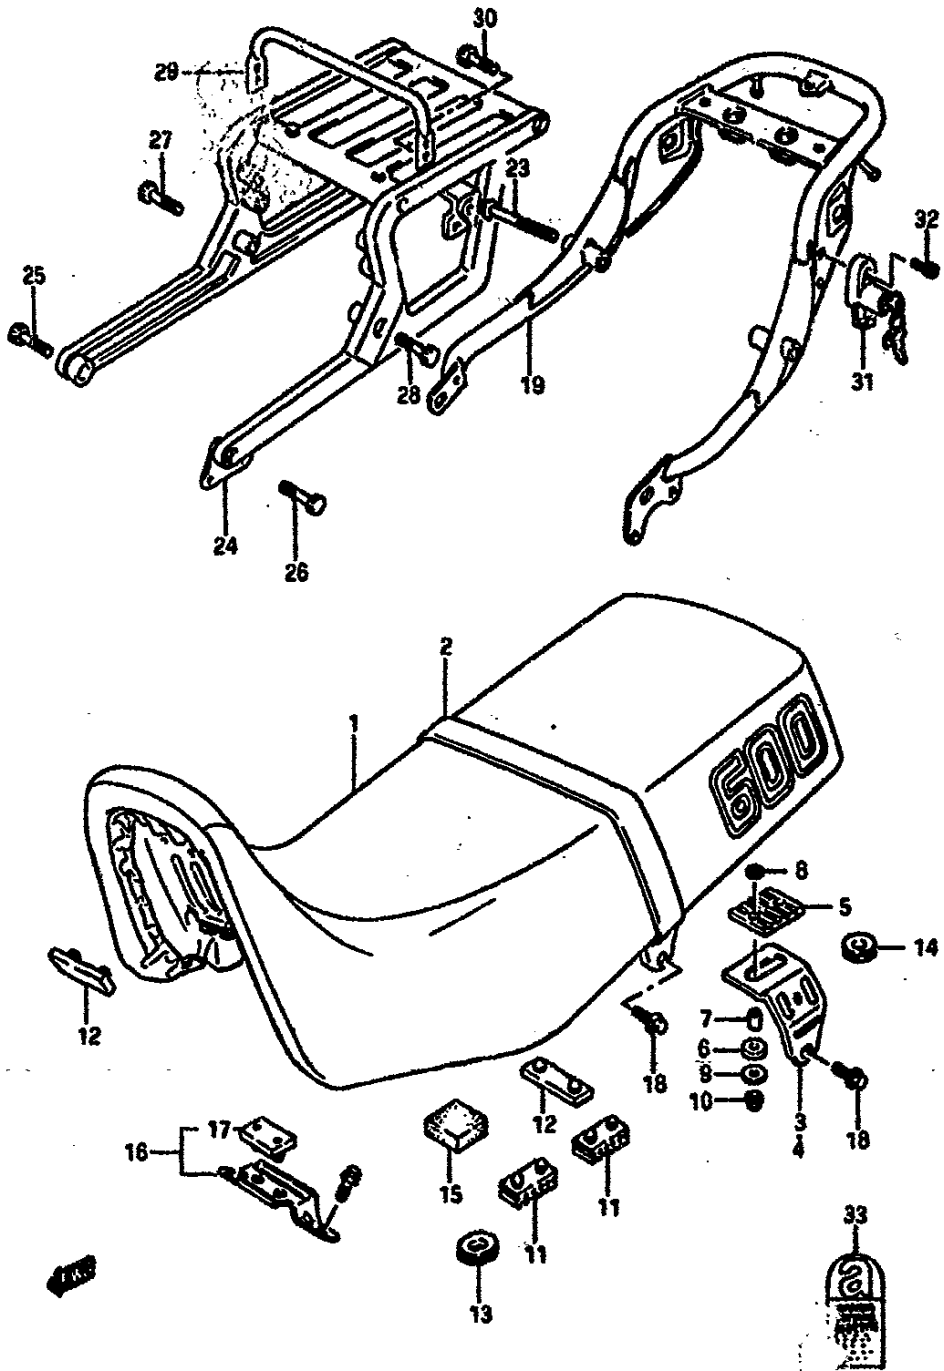 

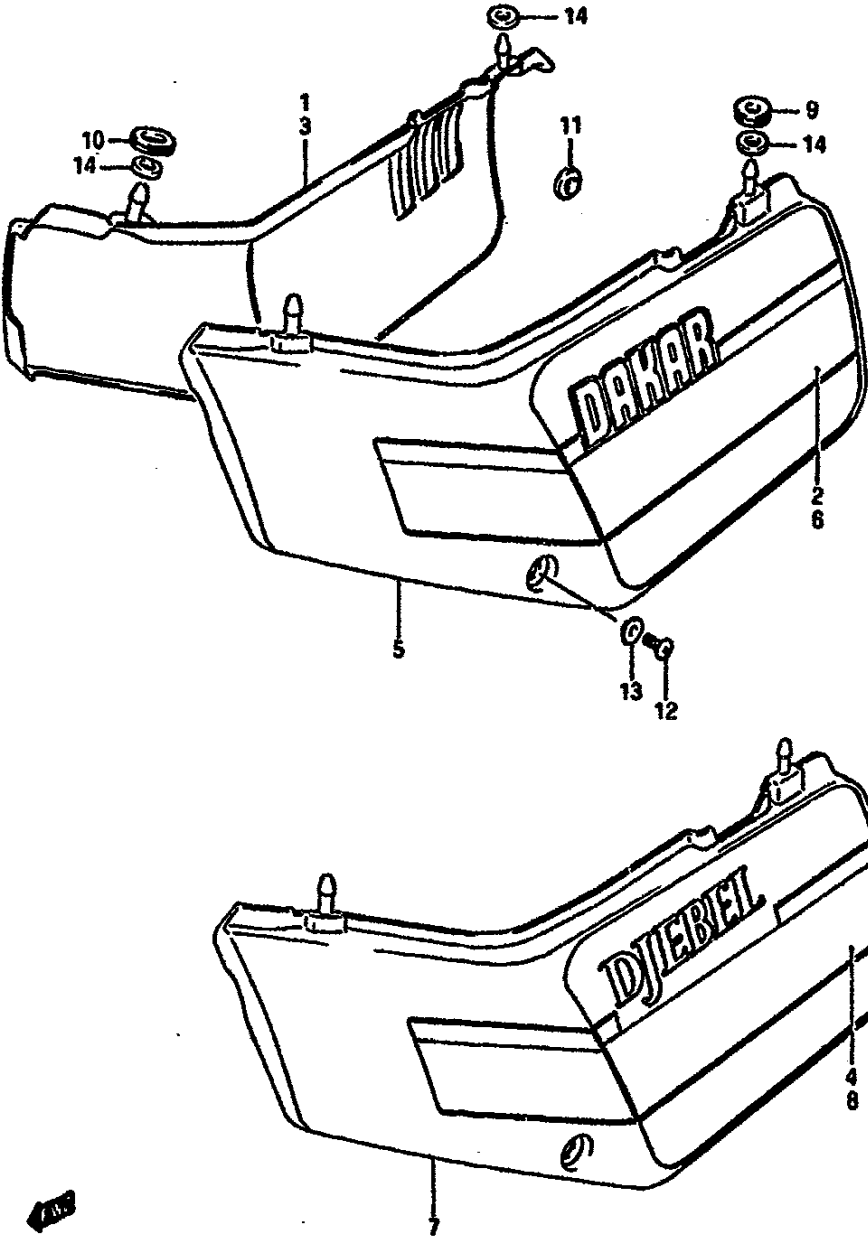 

Ref No	Part No	Description
1	47110-14A00-10V	Cover,frame Rh (white)
2	68130-14A20-8LC	Tape Set,side Cover Rh
3	47110-14A20-10V	Cover,frame Rh (white)
4	68130-14A40-9BJ	• . Tape Set,side Cover Rh
5	47210-14A00-10V	Cover,frame Lh (white)
6	68140-14A20-8LC	Tape Set,side Cover Lh
7	47210-14A20-10V	Cover,frame Lh (white)
8	68140-14A40-9BJ	• . Tape Set,side Cover Lh
9	09320-08018	Cushion,rear
10	09329-08003	Cushion,front
11	09321-10013	Cushion,muffler
12	02142-06125	Screw
13	09169-06041	Washer
14	47161-14A00	Cushion,boss

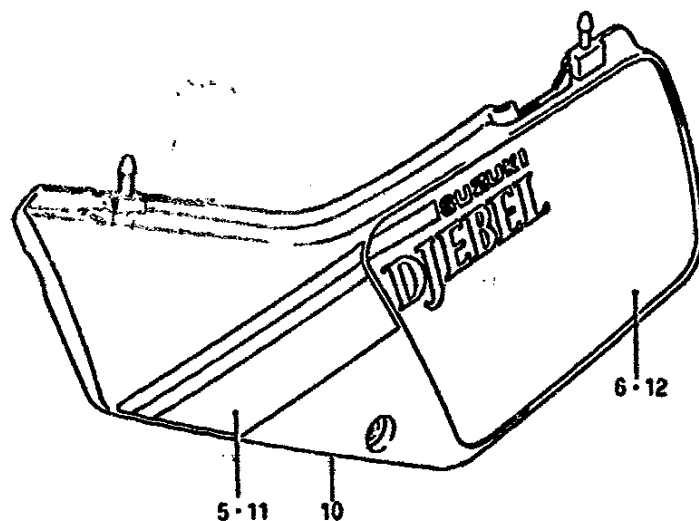 
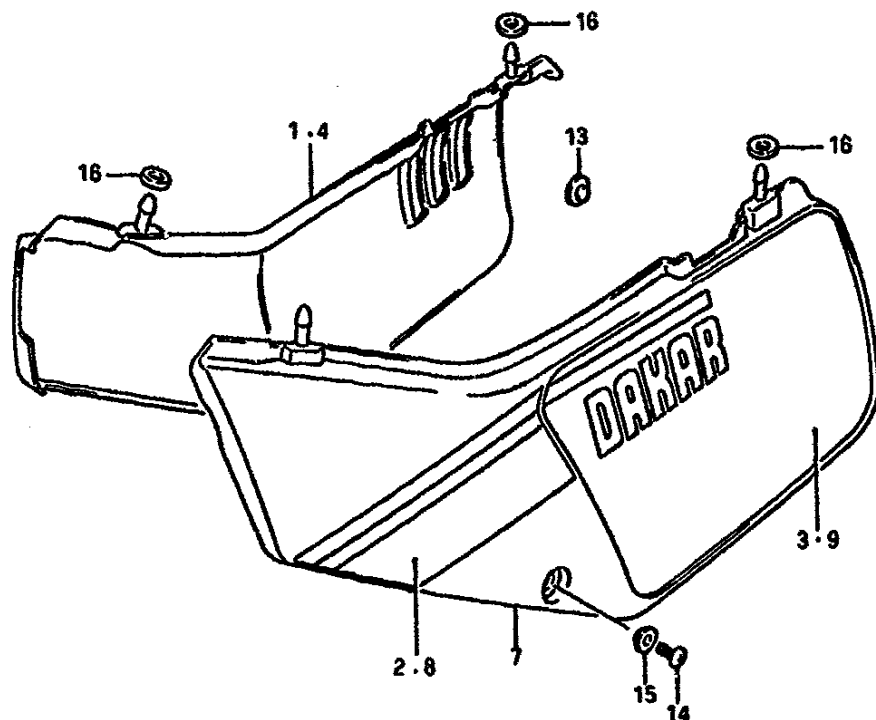 


FRAME COVER (MODEL H)



Ref No	Part No	Description
1	47110-15A20-14L	Cover,frame Rh (white)
2	68135-14A00-9NY	• . Tape,front Rh
3	68135-14A20-9LR	• . Tape,rear Rh
4	47110-15A00-14L	Cover,frame Rh (white)
5	68135-14A00-9NY	• . Tape,front Rh
6	68135-14A10-9LR	• . Tape,rear Rh
7	47210-15A20-14L	Cover,frame Lh (white)
8	68145-14A00-9NY	• . Tape,front Lh
9	68145-14A20-9LR	• . Tape,front Lh
10	47210-15A00-14L	Cover,frame Lh (white)
11	68145-14A00-9NY	• . Tape,front Lh
12	68145-14A10-9LR	• . Tape,rear Lh
13	09321-10013	Cushion,muffler
14	02142-06125	Screw
15	09169-06041	Washer
16	47161-14A00	Cushion,boss

DR600RK E2


Ref No	Part No	Description
1	47110-15A50-14L	Cover,frame Rh (white)
2	68135-14A40-9PL	• . Emblem,rear Rh
3	68135-14A50-9LR	• . Tape,front Rh
4	47110-15A30-14L	Cover,frame Rh (white)
5	68135-14A60-9PL	• . Emblem,rear Rh
6	68135-14A50-9LR	• . Tape,rear Rh
7	47210-15A50-14L	Cover,frame Lh (white)
8	68145-14A40-9PL	• . Emblem,rear Lh
9	68145-14A50-9LR	• . Tape,front Lh
10	47210-15A30-14L	Cover,frame Lh (white)
11	68145-14A60-9PL	• . Emblem,rear Lh
12	68145-14A50-9LR	• . Tape,rear Lh
13	09321-10013	Cushion,muffler
14	02142-06125	Screw
15	09169-06041	Washer
16	47161-14A00	Cushion,boss

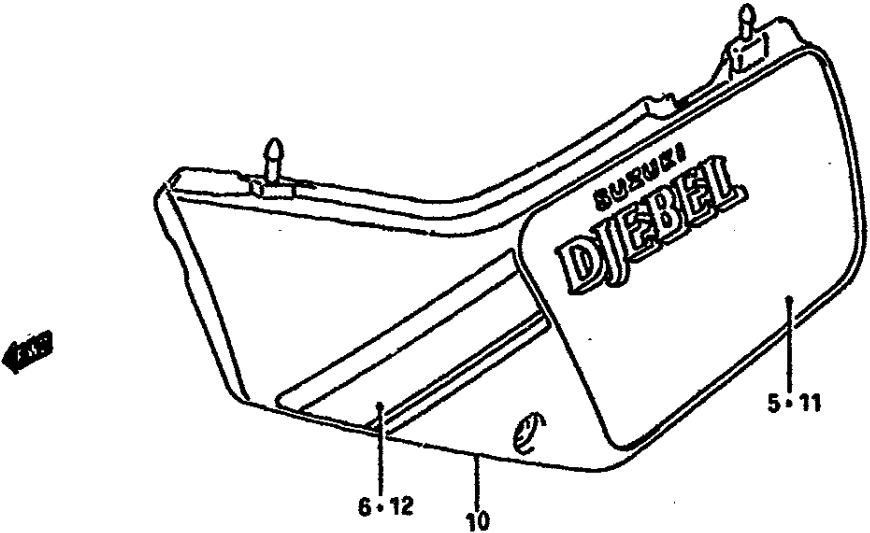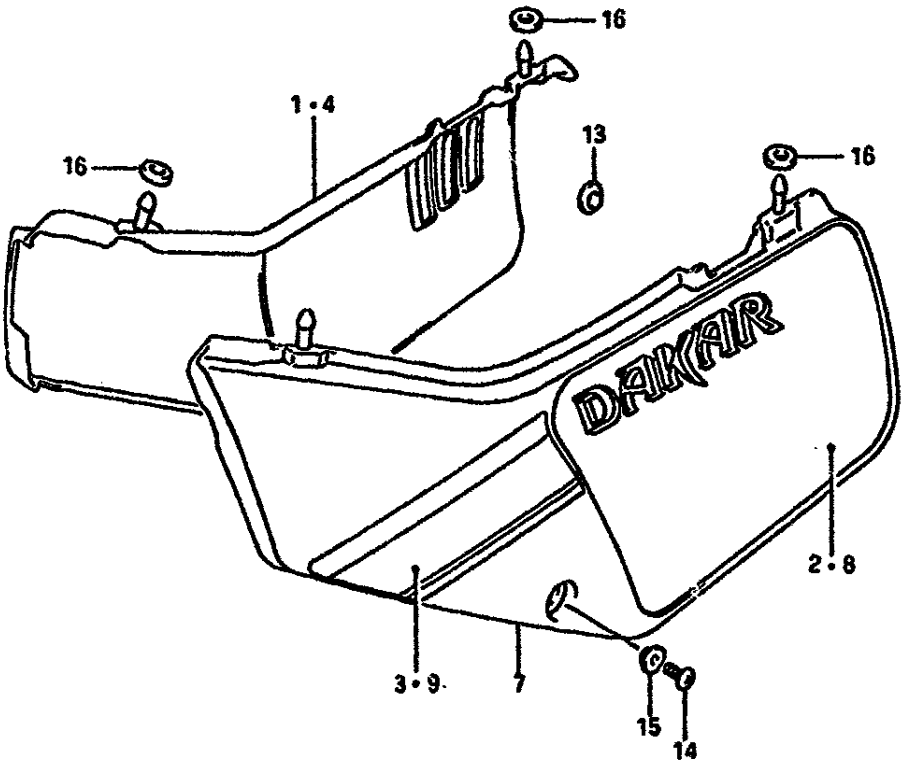  

DR600RK E2

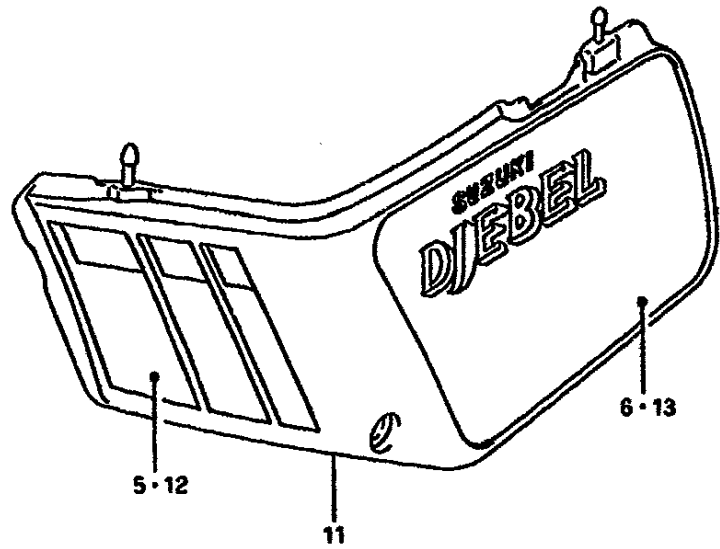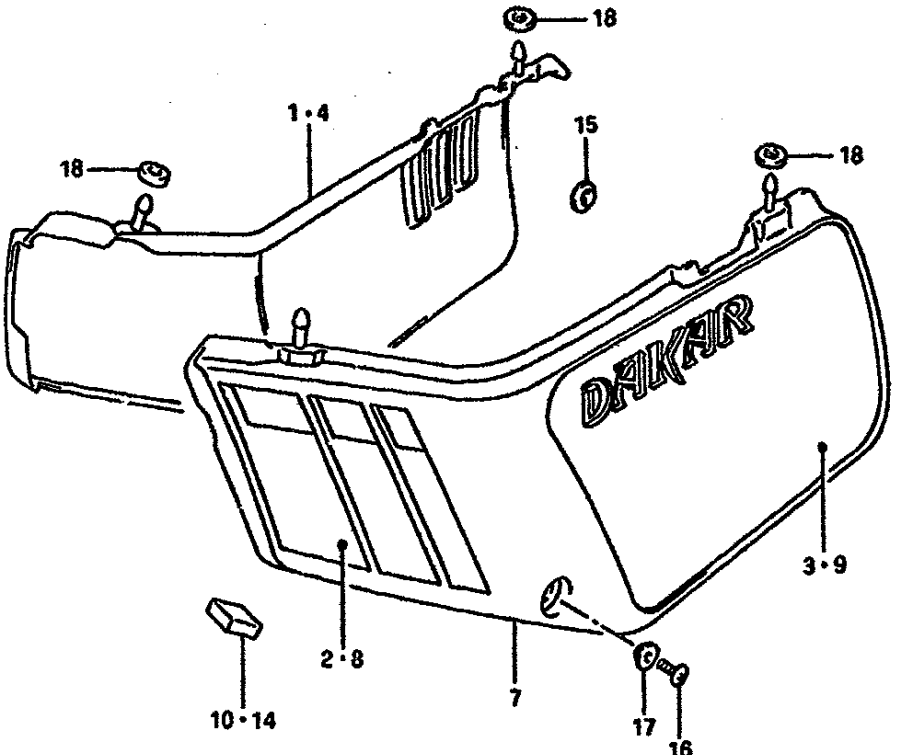  

Ref No	Part No	Description
1	47110-15A80-30H	Cover,frame Rh (white)
2	68135-14A80-9PK	• . Tape,front Rh
3	68136-14A20-9PK	• . Tape,rear Rh
4	47110-15A70-30H	Cover,frame Rh (white)
5	68135-14A80-9PK	• . Tape,front Rh
6	68136-14A10-9PK	• . Tape,rear Rh
7	47210-15A80-30H	Cover,frame Lh (white)
8	68145-14A80-9PK	• . Tape,front Lh
9	68146-14A20-9PK	• . Tape,rear Lh
10	47165-48B10	• . Cushion
11	47210-15A70-30H	Cover,frame Lh (white)
12	68145-14A80-9PK	• . Tape,front Lh
13	68146-14A10-9PK	• . Tape,rear Lh
14	47165-48B10	• . Cushion
15	09321-10013	Cushion,muffler
16	02142-06125	Screw
17	09169-06041	Washer
18	47161-14A00	Cushion,boss

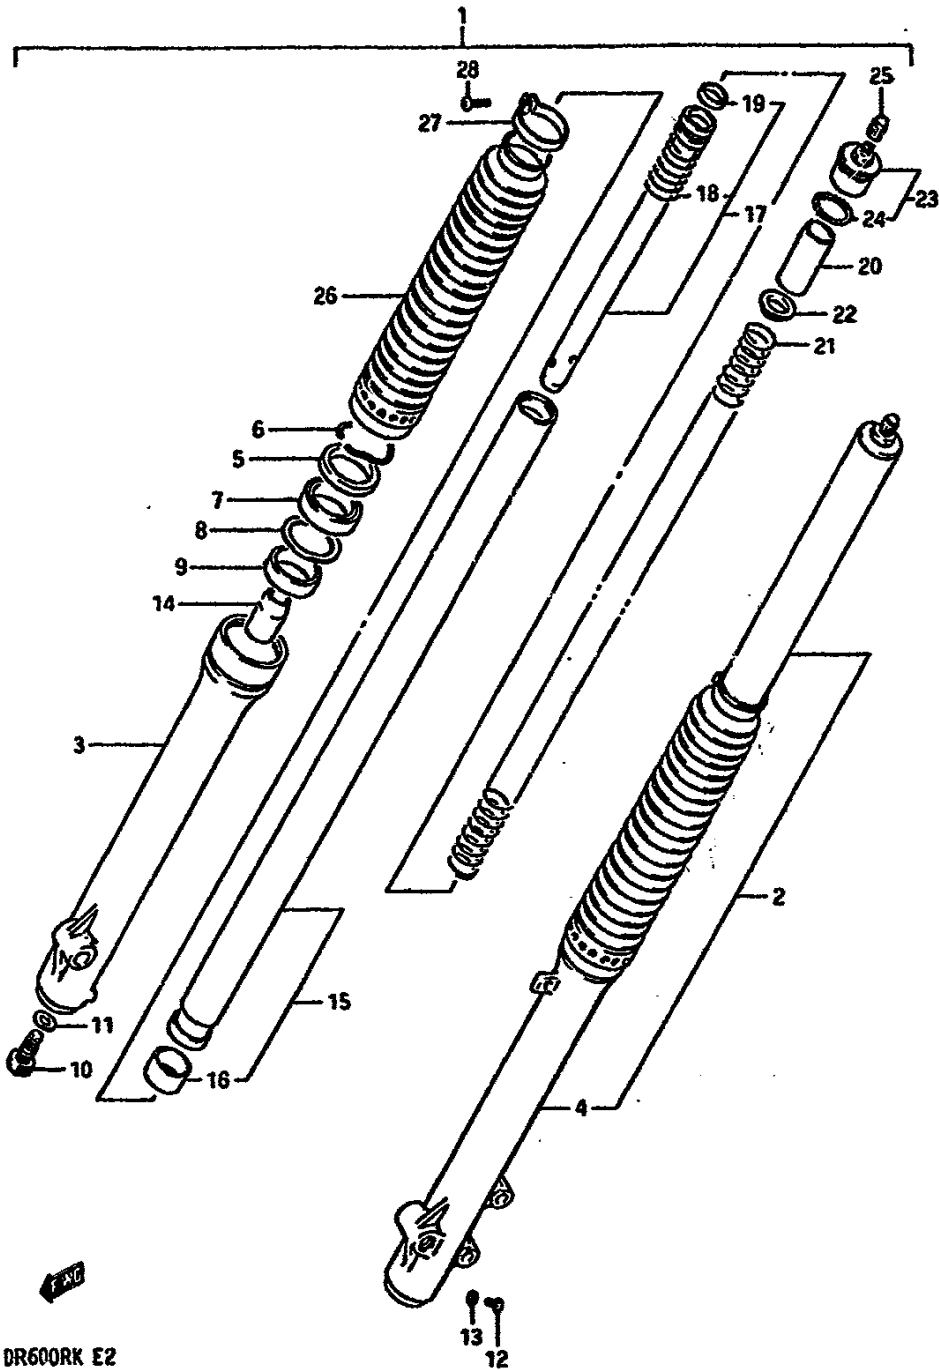 


Ref No	Part No	Description
1	51103-14A00	Damper Assy,rh
2	51104-14A00	Damper Assy,lh
3	51130-14A00	. Outer Tube Rh
4	51140-14A00	. Outer Tube Lh
5	51173-14A00	. Dust Seal
6	51156-49440	. Ring,stopper
7	51153-14A00	. Oil Seal
8	51158-07A00	. Washer
9	51167-07A00	. Slide Metal
10	51147-40300	. Bolt
11	51148-40300	. Gasket
12	02112-04068	. Screw
13	51183-03010	Gasket
14	51195-13A00	. Piece,oil Lock
15	51110-14A00	. Inner Tube
16	51121-07A00	.. Piston
17	51146-14A00	. Cylinder
18	51177-14A00	.. Spring
19	51196-14A00	.. Ring
20	51176-14A00	. Spacer
21	51171-14A00	. Spring
22	51172-14A00	. Guide,spring
23	51351-14A00	. Cap
24	51117-14A00	.. O Ring
25	51294-20400	. Cap
26	51571-14A00-19F	Boot (blue)
26	51571-14A00-34S	Bootl (blue)
27	51575-40300	Band
28	02112-04108	Screw

FAG


DR600RK E2

STEERING STEM

Ref No	Part No	Description
1	51410-14A10	Stem,steering
2	09265-30005	• . Bearing
3	51311-14A00	Stem Head,steering
4	51353-14A00	Bolt
5	51530-14A00	Bracket,headlamp,rh
6	51540-14A00	Bracket,headlamp,lh
7	51553-14A00	Gasket
8	56211-27210-019	Holder,handle Upper (black)
9	01107-08355	Bolt
10	08321-31084	Lock Washer
11	56221-14330-291	Holder,handle Lower (black)
12	51321-14200	Bolt
13	56241-14A00	Damper,upper
14	56242-14200	Damper,lower
15	51356-40400	Washer
16	08319-31107	Nut
17	04111-20308	Cotter Pin
18	01107-08505	Bolt
19	08322-11084	Washer
20	08310-12085	Nut
21	01107-10455	Bolt
22	08321-31105	Lock Washer
23	01107-08455	Bolt
24	08321-31084	Lock Washer
25	51631-40200	Nut,steering Stem
26	51643-40200	Dust Seal
27	51621-40200	Lace,steering Outer Upper
28	06111-08003	Ball
29	51611-40201	Lace,steering Inner Upper
30	51900-30831	Lock Assy,steering
31	02112-05128	Screw
32	08321-21057	Lock Washer
33	51900-30901	Lock Assy,steering (excuted Locally)
34	51915-45000	Label,steering Lock

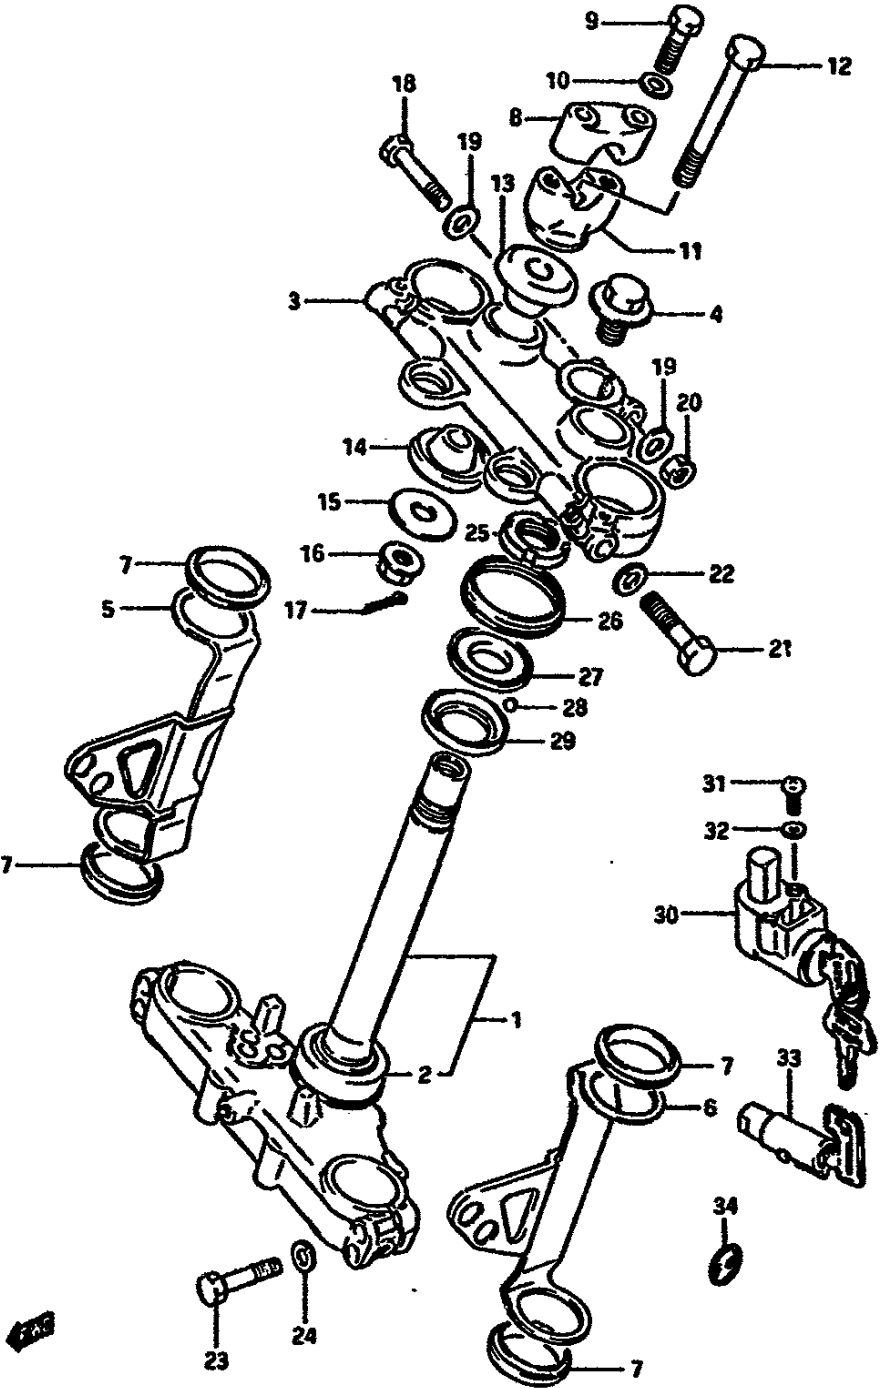 


DR600RK E2

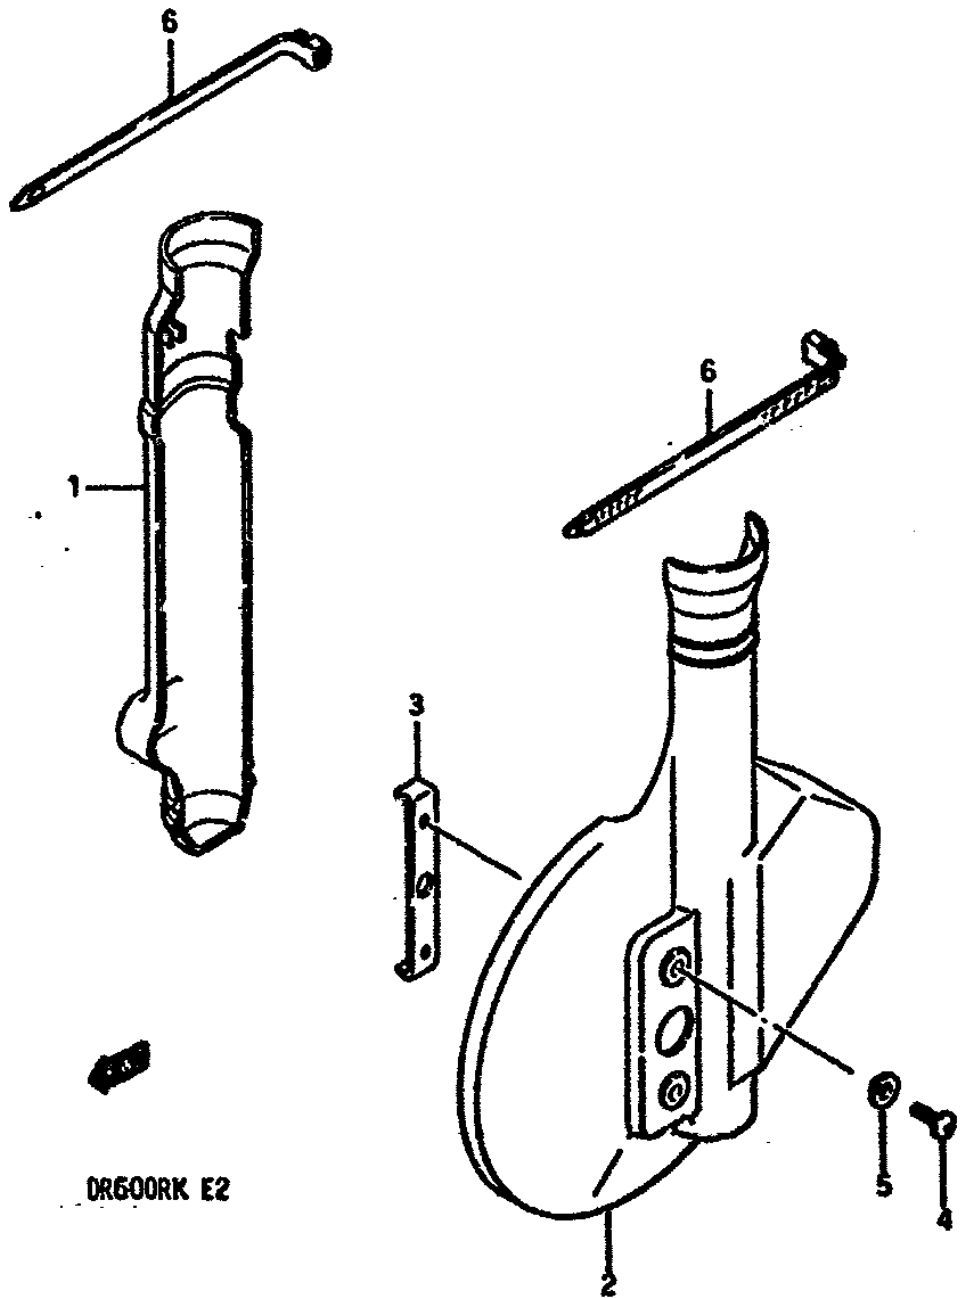 


Ref No	Part No	Description
1	51201-14A00-10V	Protector,front Fork Rh
1	51201-14A10-10V	Protector,front Fork Rh
2	51202-14A00-10V	Protector,front Fork Lh
2	51202-14A10-10V	Protector,front Fork Lh
3	51210-14A00	Plate,protector Set
4	02142-06127	Screw
5	09169-06028	Washer
6	09407-25403	Clamp


Ref No	Part No	Description
1	51201-14A30-14L	Protector,fork Rh (white)
1	51201-14A30-30H	Protector,fork Rh (white)
2	51202-14A30-14L	Protector,fork Lh (white)
2	51202-14A30-30H	Protector,fork Lh (white)
3	68250-14A00-9LR	Tape Set,disc Protector
4	68250-14A70-9NY	Tape Set,disc Protector
5	54770-14A00	Plate,protector Set
6	02142-06127	Screw
7	09169-06028	Washer
8	09407-25403	Clamp

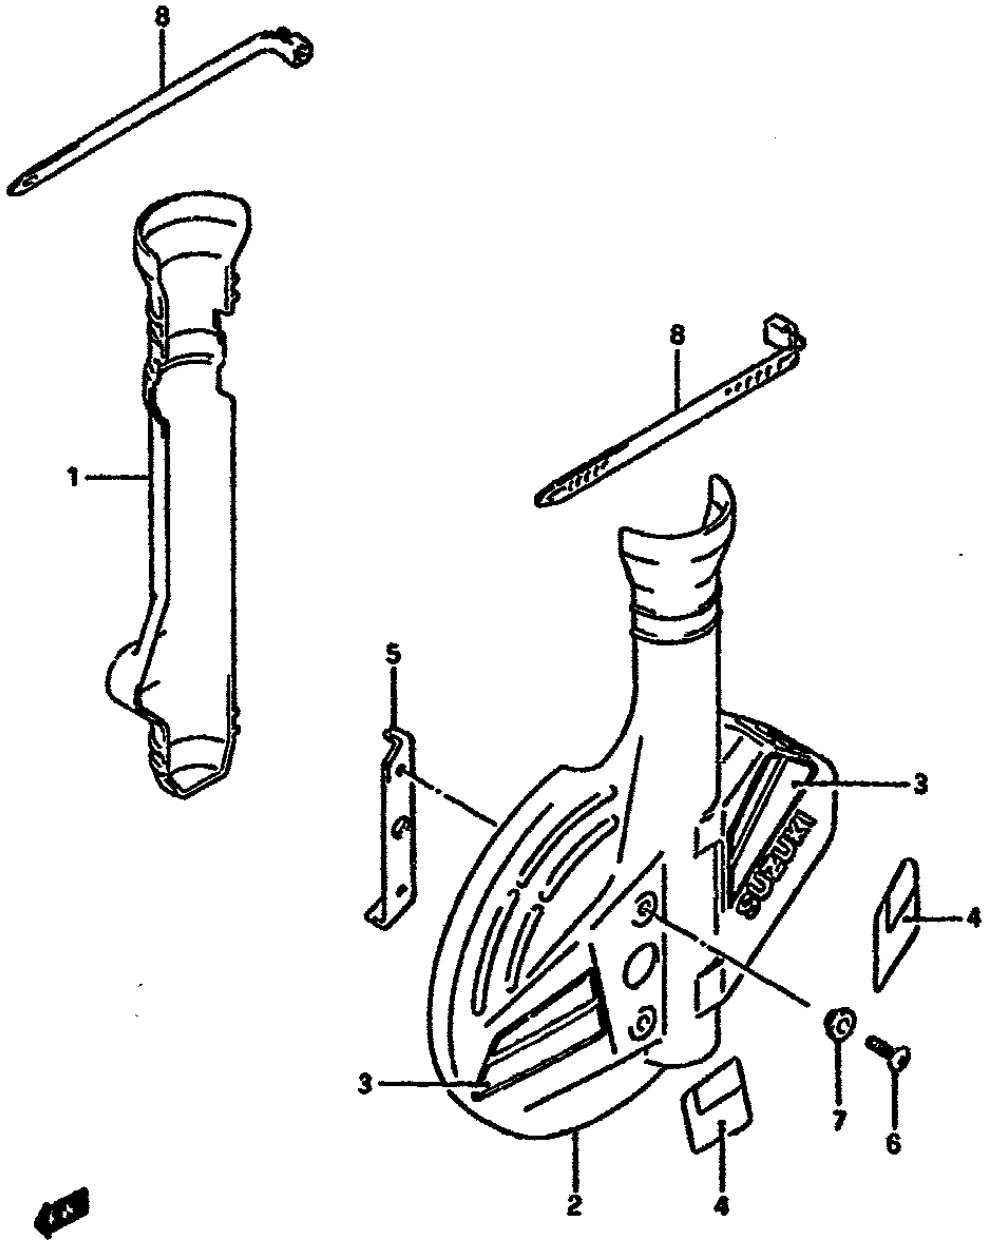 


DR600RK E2

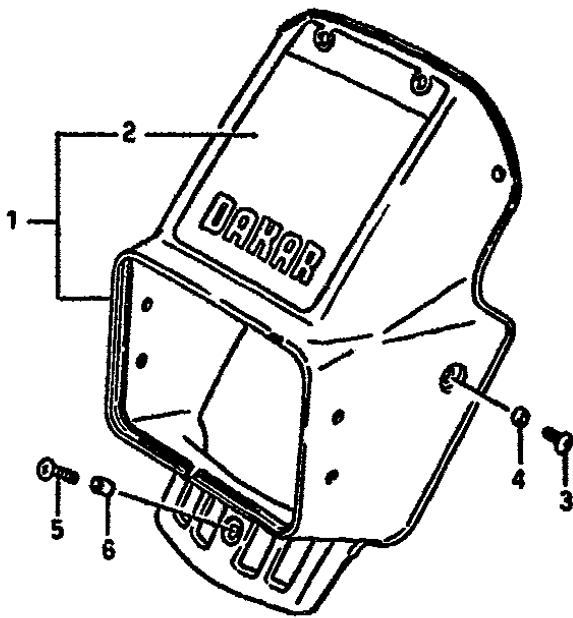 


Ref No	Part No	Description
1	51810-14A20-10V	Cover,headlamp (white)
1	51810-14A30-10V	Cover,headlamp (white)
2	68250-14A20-8LD	• . Tape Set
2	68250-14A30-8GY	• . Tape Set
3	02142-06125	Screw,cover Side
4	09180-06098	Spacer,cover Side (6.1x8x3.5)
5	02142-06205	Screw,cover Lower
6	09180-06035	Spacer,cover Lower (6.1x8x12)
7	53111-14A20-10V	Fender,front (white)
8	09180-06038	Spacer,fender Upper (6.1x9x7.5)
9	09169-06053	Washer
10	08321-21067	Lock Washer
11	01107-06257	Bolt

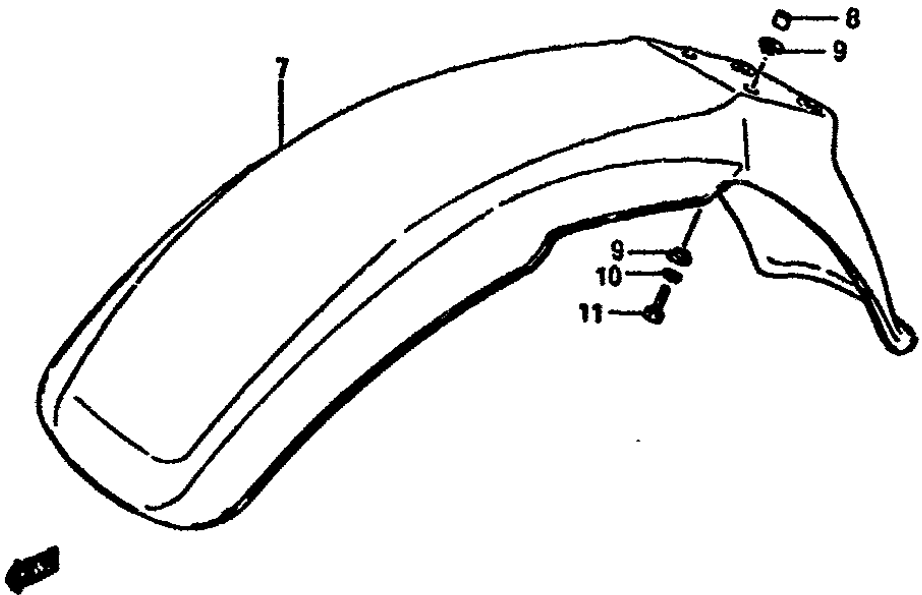 



DR600RK E2

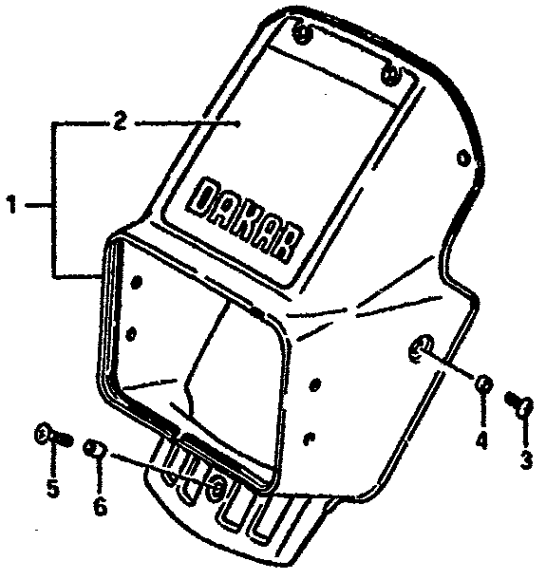 


Ref No	Part No	Description
1	51810-14A20-10V	Cover,headlamp (white)
2	68250-14A20-8LD	• . Tape Set
3	02142-06125	Screw,cover Side
4	09180-06098	Spacer,cover Side (6.1x8x3.5)
5	02142-06205	Screw,cover Lower
6	09180-06035	Spacer,cover Lower (6.1x8x12)
7	53111-14A10-10V	Fender,front (white)
7	53111-14A20-10V	Fender,front (white)
8	09180-06038	Spacer,fender Upper Front (6.1x9x7.5)
9	09180-06030	Spacer,fender Upper Rear (6.8x10x10)
10	09169-06053	Washer
11	08321-21067	Lock Washer
12	01107-06257	Bolt
13	53311-14A00	Mud Flap
13	53311-14A20	Mud Flap
14	53322-14A00	Protector Seat
15	02142-06164	Screw
16	02142-06205	Screw
17	08321-21067	Lock Washer
18	09160-06003	Washer (6.7x16x0.8)
19	08310-22067	Nut

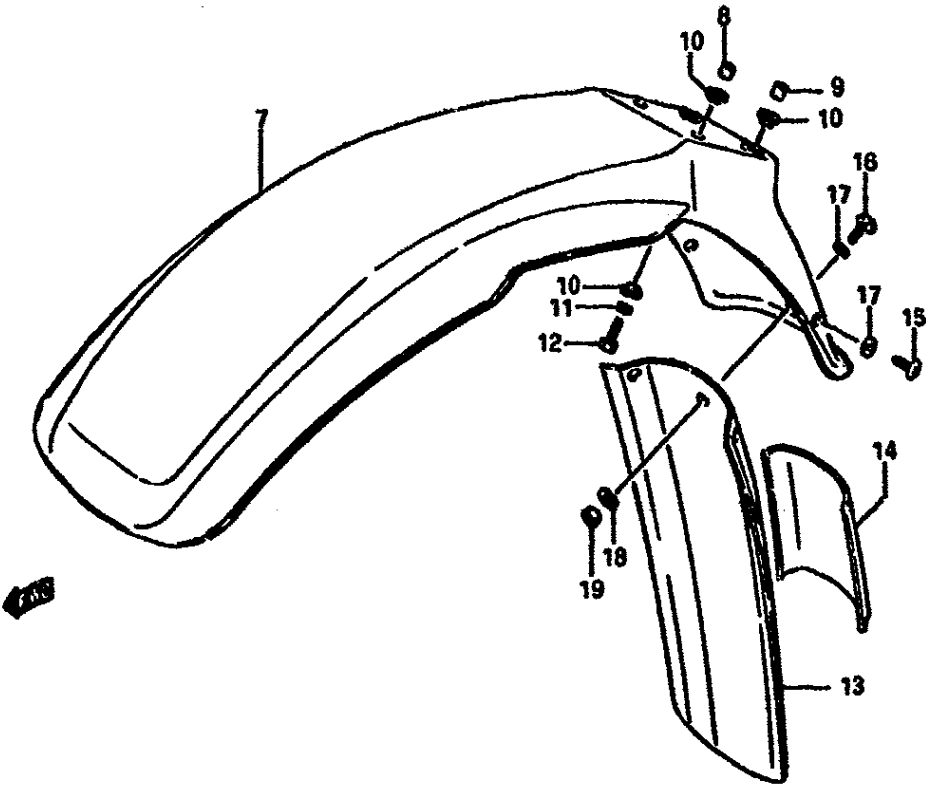 

DR600RK E2

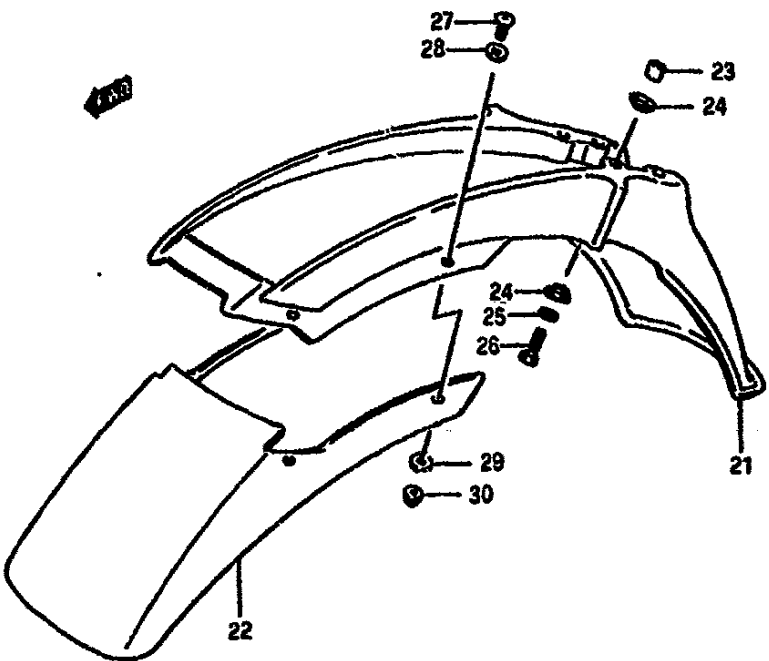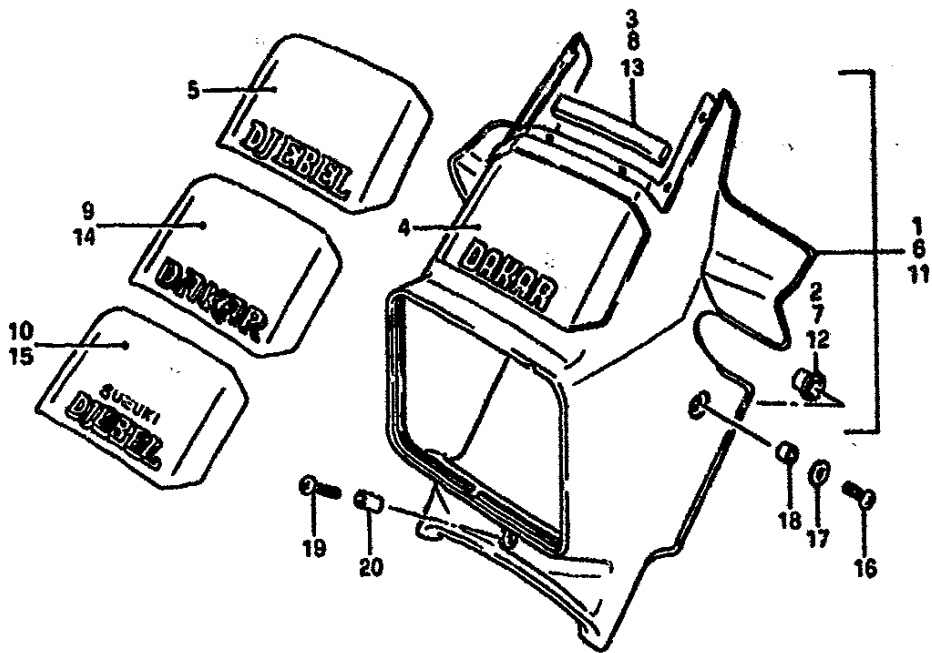  


Ref No	Part No	Description
1	51800-15A20-14L	Cover,headlamp (white)
1	51800-15A00-14L	Cover,headlamp (white)
2	51821-15A00-14L	• . Bush (white)
3	51827-15A00	• . Cushion
4	68250-14A40-9LJ	• . Tape,headlamp Cover
5	68250-14A50-9LR	• . Tape,headlamp Cover
6	51800-15A40-14L	Cover,headlamp (white)
6	51800-15A30-14L	Cover,headlamp (white)
7	51821-15A00-14L	• . Bush (white)
8	51827-15A00	• . Cushion
9	68725-14A10-9PL	• . Tape,headlamp Cover
10	68725-14A00-9PL	• . Tape,headlamp Cover
11	51800-15A60-30H	Cover,headlamp (white)
11	51800-15A50-30H	Cover,headlamp (white)
12	51821-15A00-30H	• . Bush (white)
13	51827-15A00	• . Cushion
14	68725-14A30-9PK	• . Tape,headlamp Cover
15	68725-14A20-9PK	• . Tape,headlamp Cover
16	02142-06164	Screw,cover Side
16	09136-06061	Screw,cover Side
17	09160-06069	Washer,cover Side
18	09180-06152	Spacer,cover Side
19	02142-06405	Screw,cover Lower
20	09180-06170	Spacer,cover Lower
21	53111-15A00-14L	Fender,front Rear (white)
21	53111-15A00-30H	Fender,front Rear (white)
22	53112-15A00-33N	Fender,front (blue)
23	09180-06038	Spacer,upper (6.1x9x7.5)
24	09169-06053	Washer
25	08321-21067	Lock Washer
26	01107-06257	Bolt
27	02142-06164	Screw
27	09136-06062	Screw
28	09160-06039	Washer
29	09160-06003	Washer
30	08319-31065	Nut

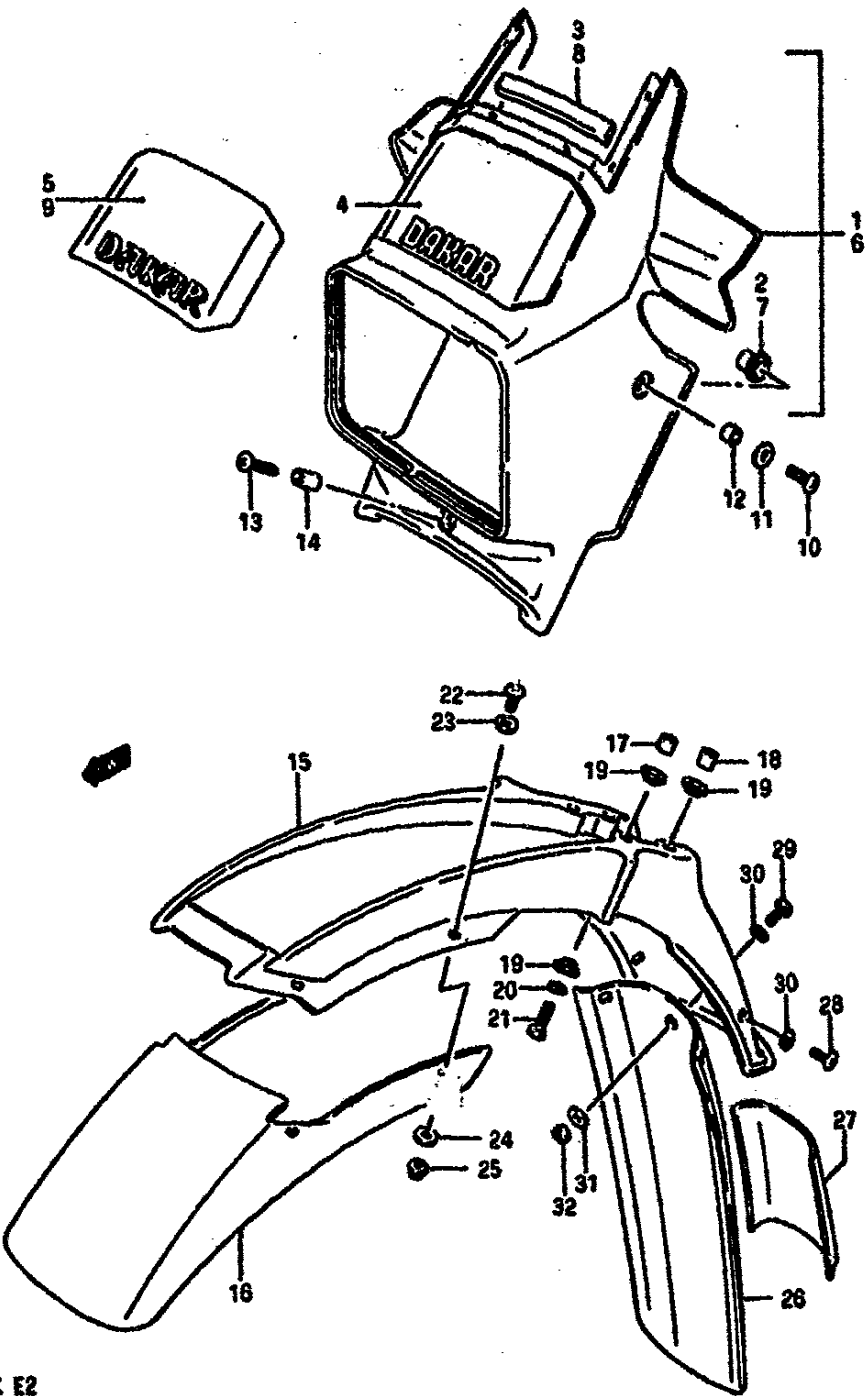 


Ref No	Part No	Description
1	51800-15A20-14L	Cover,headlamp (white)
1	51800-15A40-14L	Cover,headlamp (white)
2	51821-15A00-14L	• . Bush (white)
3	51827-15A00	• . Cushion
4	68250-14A40-9LJ	• . Tape,headlamp Cover
5	68725-14A10-9PL	• . Tape,headlamp Cover
6	51800-15A60-30H	Cover,headlamp (white)
7	51821-15A00-30H	• . Bush (white)
8	51827-15A00	• . Cushion
9	68725-14A30-9PK	• . Tape,headlamp Cover
10	02142-06164	Screw,cover Side
10	09136-06061	Screw,cover,side
11	09160-06069	Washer,cover Side
12	09180-06152	Spacer,cover Side
13	02142-06405	Screw,cover Lower
14	09180-06170	Spacer,cover Lower
15	53111-15A10-14L	Fender,front Rear (white)
15	53111-15A10-30H	Fender,front Rear (white)
15	53111-15A20-14L	Fender,front Rear (white)
15	53111-15A20-30H	Fender,front Rear (white)
16	53112-15A00-33N	Fender,front (blue)
16	53112-15A20-33N	Fender,front (blue)
17	09180-06038	Spacer,front (6.1x9x7.5)
18	09180-06030	Spacer,rear (6.8x10x10)
19	09169-06053	Washer
20	08321-21067	Lock Washer
21	01107-06257	Bolt
22	02142-06164	Screw
22	09136-06062	Screw
23	09160-06039	Washer
24	09160-06003	Washer
25	08319-31065	Nut
26	53310-14A10	Mud Flap
26	53310-14A30	Mud Flap
27	53322-14A00	• . Protector Seat
28	02142-06164	Screw
29	02142-06205	Screw
30	08321-21067	Lock Washer
31	09160-06003	Washer (6.7x16x0.8)
32	08310-22067	Nut

 DR600RK E2

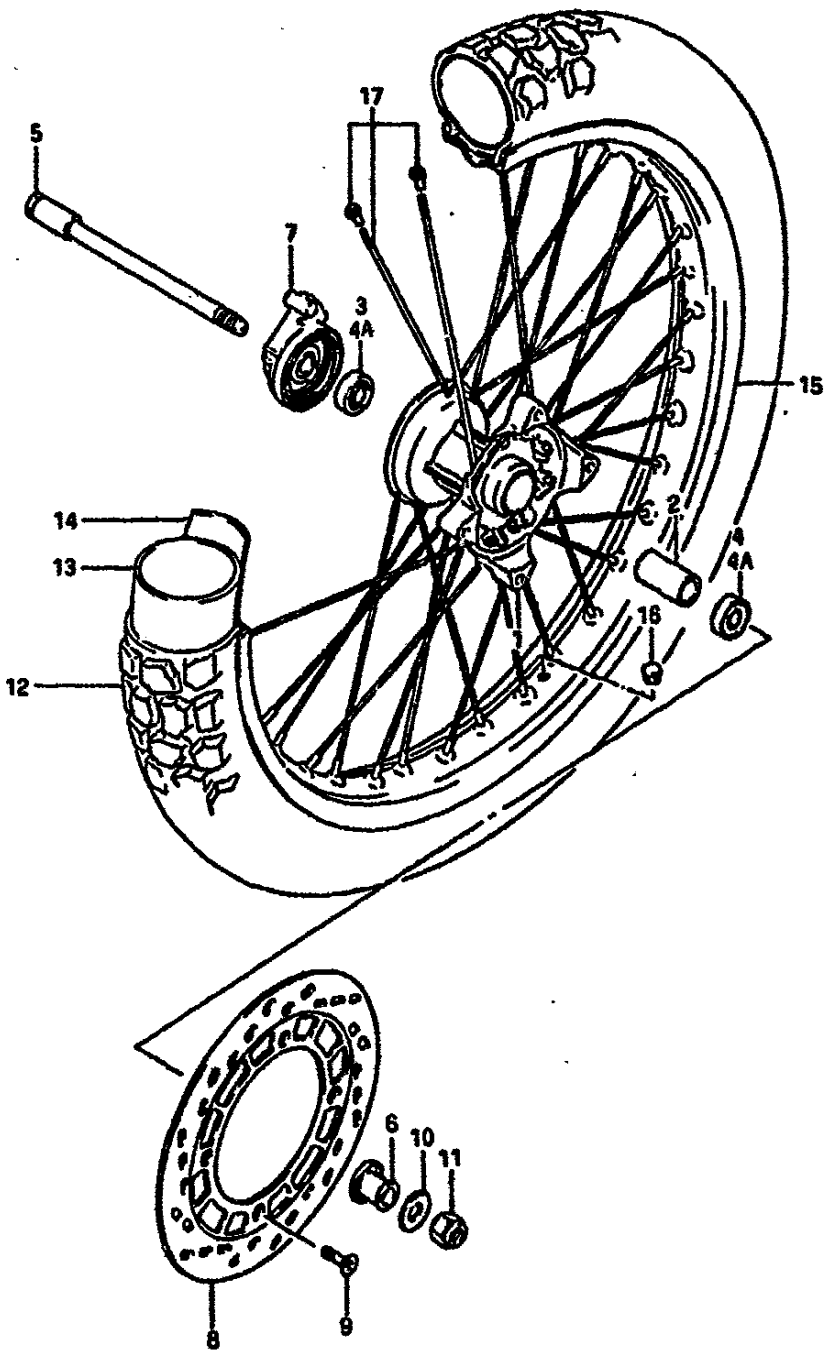


Ref No	Part No	Description
1	54111-14A00	Hub,front Wheel
1	54111-14A02	Hub,front Wheel
2	09180-15074	Spacer,front Hub
3	08113-62027	Bearing,rh
4	08123-62027	Bearing,lh
4a	08123-62027	Bearing
5	54711-14A00	Axle,front
6	54750-14A00	Spacer,axle,lh
7	54600-14A00	Box Assy,speedometer
8	59221-14A00	Disk,front Brake
9	59421-03A01	Bolt
10	08322-11128	Washer
11	09159-12006	Nut
12	55100-14A10	Tire,front (100/80-21)
12	55100-44B00	Tire,front (90/90-21)
13	55200-16520	Tube Assy
14	55261-16510	Protector
15	55311-14A00	Rim,front Wheel (1.85x21a)
15	55311-14A10	Rim,front Wheel (1.85x21a)
16	09250-08013	Cap,bead Stopper
17	55320-14A00	Spoke Set,front Wheel
17	55320-13A00	Spoke Set,front Wheel
17	55320-44B00	Spoke Set,front Wheel

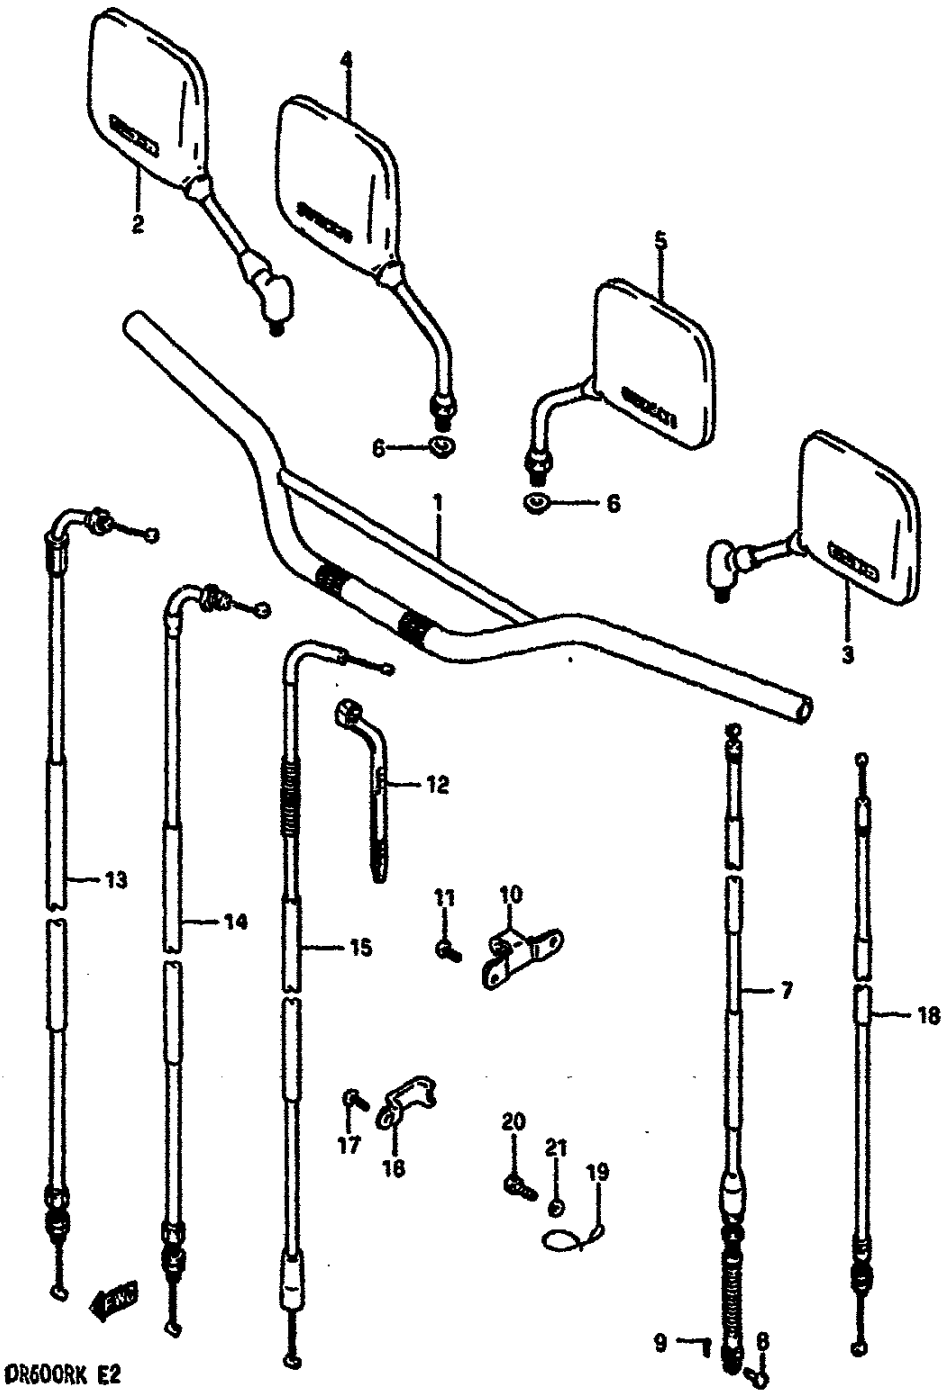 


DR600R E2



Ref No	Part No	Description
1	56110-14A10-291	Handlebar (black)
1	56110-14A30-291	Handlebar (black)
4	56500-01A20	Mirror Assy,rear View,rh
4	56500-01A10	Mirror Assy,rear View,rh
5	56600-01A20	Mirror Assy,rear View,lh
5	56600-01A10	Mirror Assy,rear View,lh
6	09169-10010	Washer
7	58200-14A00	Cable Assy,clutch
8	09200-06004	Pin
9	04111-20158	Cotter Pin
10	58634-37410	Stopper,clutch Cable
11	02112-06125	Screw
12	09407-14403	Clamp,cable Lower
13	58300-14A30	Cable Assy,throttle No.1
14	58300-14A40	Cable Assy,throttle No.2
15	58300-14A20	Cable Assy,throttle
16	09403-07309	Guide
17	02152-06125	Screw,cable Guide
18	58900-14A00	Cable Assy,decomp
19	58621-17200	Guide,clutch/decomp
20	01107-06125	Bolt
21	08321-21064	Lock Washer

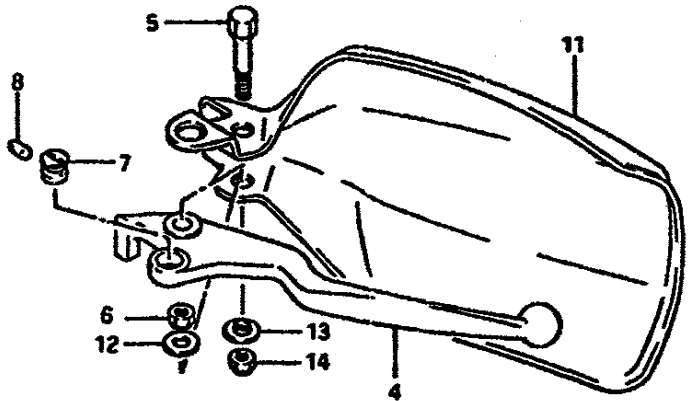 

Ref No	Part No	Description
1	57110-37200	Grip,throttle
2	57100-37230	Case Assy,throttle
3	02112-05208	• . Screw
4	57421-13A10	Lever,brake
5	57431-14A00	Bolt
6	08319-21065	Nut
7	57443-13A00	Adjuster
8	57444-13A00	Rod,push
9	57460-13001	Switch Assy,stop
10	09407-12402	Clamp (l:120)
11	57341-14A00-10V	Guard,knuckle,rh (white)
12	09160-06019	Washer
13	09169-06033	Washer
14	08319-21068	Nut

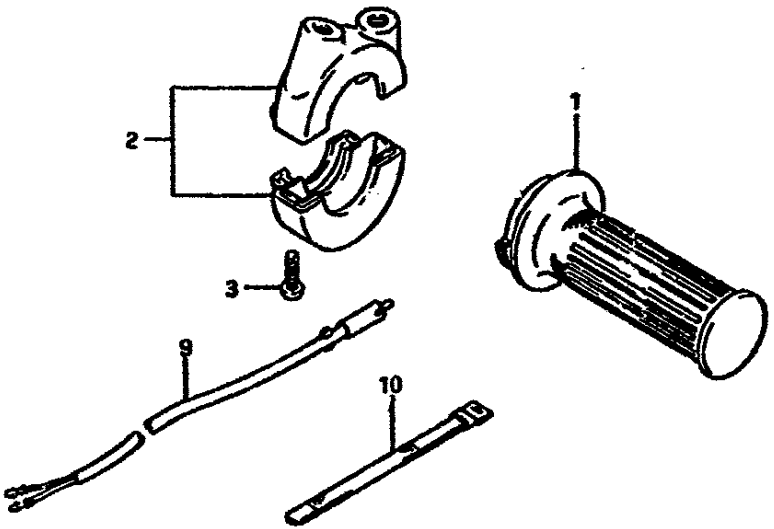 


Ref No	Part No	Description
1	57110-37200	Grip,throttle
2	57100-37230	Case Assy,throttle
3	02112-05208	• . Screw
4	57421-13A10	Lever,brake
5	57431-15A00	Bolt
6	08319-21065	Nut
7	57443-13A00	Adjuster
8	57444-13A00	Rod,push
9	57460-13001	Clutch Assy,stop
10	09407-12402	Clamp (l:120)
11	57341-15A01-14L	Cover,knuckle,rh (white)
11	57341-15A01-30H	Cover,knuckle,rh (white)
12	09160-06102	Washer
13	08313-11065	Nut
14	09160-06019	Washer
15	09169-06040	Washer
16	08319-21068	Nut

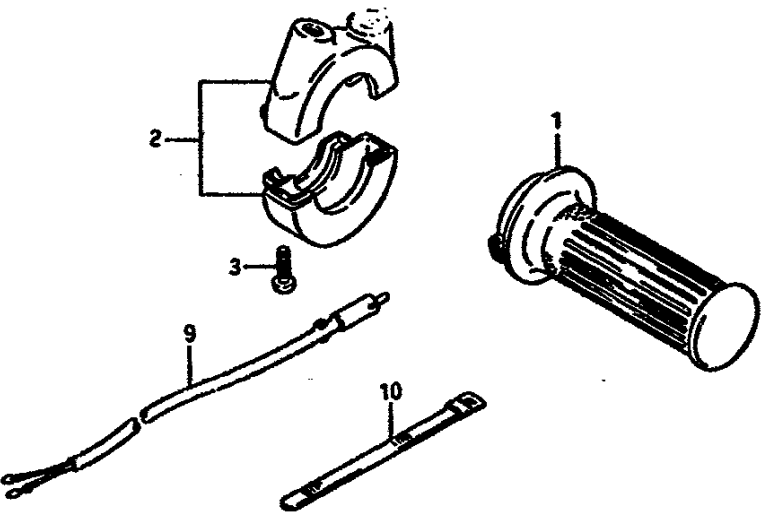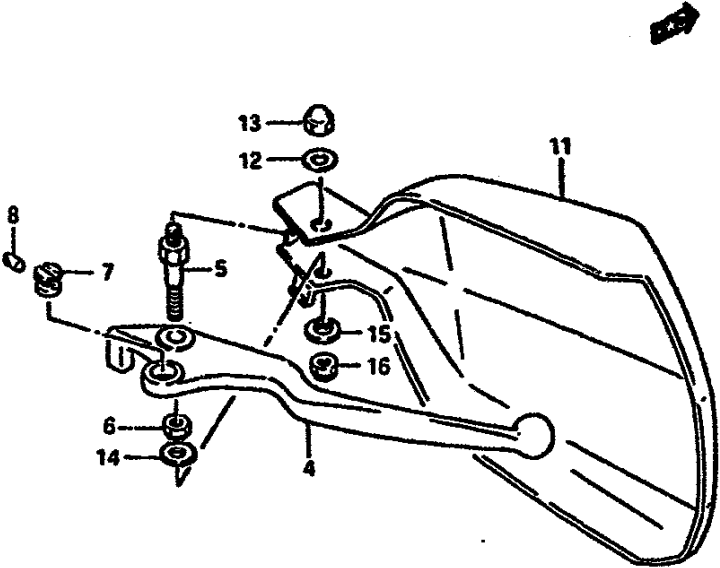  


DR600RK E2

Ref No	Part No	Description
1	57110-14300	Grip,throttle
2	57114-20410	Rotor
3	57100-20411	Case Assy,throttle
4	57122-20410	• . Piece
5	57129-20411	• . Cover
6	02132-04065	• . Screw
7	02112-05168	• . Screw
8	57421-13A10	Lever
9	57431-15A00	Bolt
10	08319-21065	Nut
11	57443-13A00	Adjuster
12	57444-13A00	Rod,push
13	57460-13001	Switch Assy,stop
14	09407-12402	Clamp (l:120)
15	57341-15A01-14L	Cover,knuckle Rh (white)
15	57341-15A01-30H	Cover,knuckle Rh (white)
16	09160-06102	Washer
17	08313-11065	Nut
18	09160-06019	Washer
19	09169-06040	Washer
20	08319-21068	Nut
21	57129-14501	Cover,throttle Case

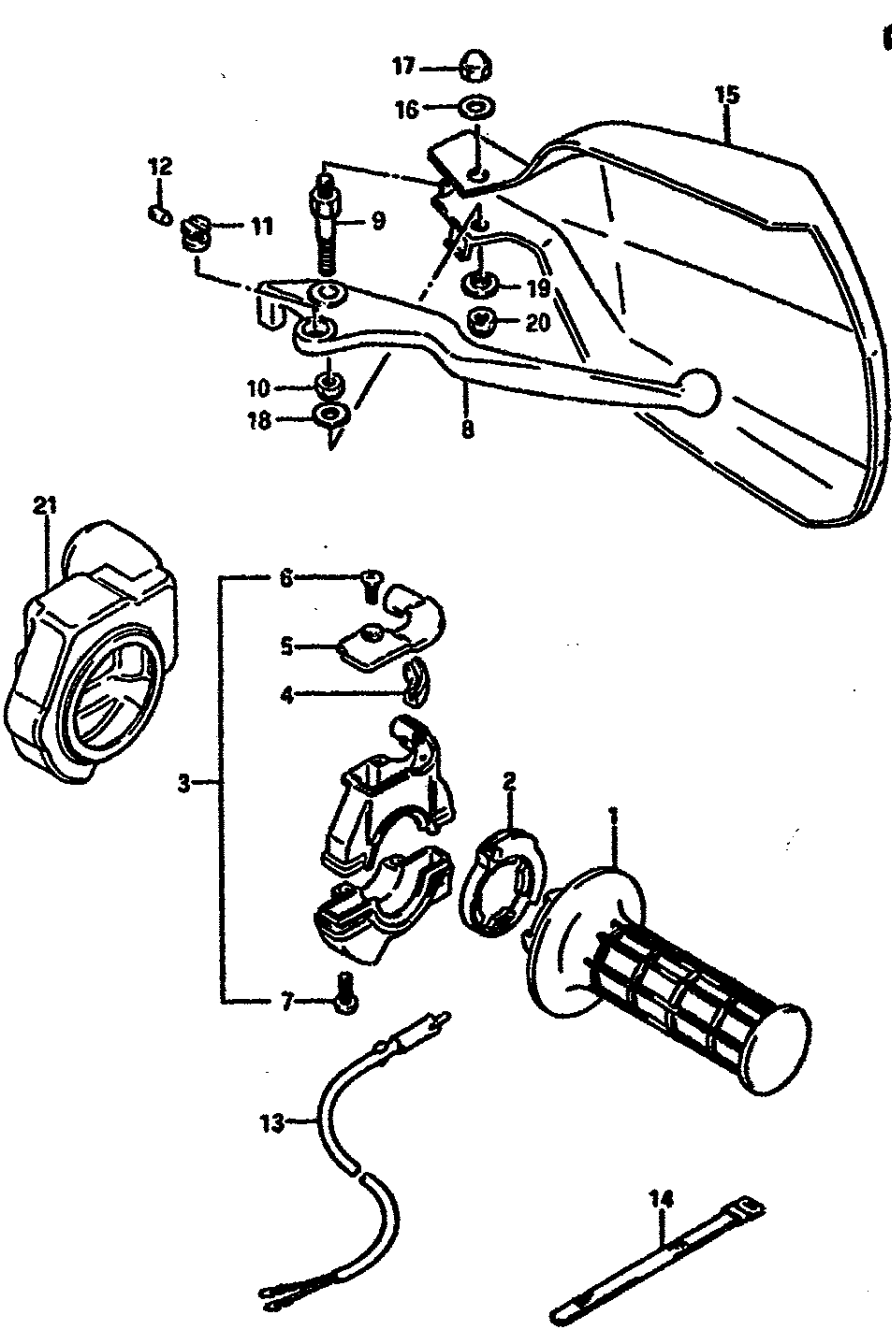 


Ref No	Part No	Description
--------	---------	-------------

1	57211-45020	Grip,lh
2	57500-14A00	Lever Assy,clutch
3	57620-49101	• . Lever,clutch
4	57431-14A00	• . Bolt
5	08319-21065	• . Nut
6	57441-44400	• . Adjuster
7	57442-44400	• . Nut
8	01107-06205	• . Bolt
9	37400-01A00	Switch Assy,handle,lh
9	37400-14A10	Switch Assy,handle,lh
9	37400-14A40	Switch Assy,handle,lh
10	37411-45012	• . Knob,lighting
11	37421-45012	• . Knob,dimmer
12	02122-03068	• . Screw
13	37513-45011	• . Knob,turn Signal
14	57371-45000	• . Button,horn
15	57372-45000	• . Contact
16	57382-45000	• . Spring
17	02112-05257	• . Screw
18	58700-38200	Lever Assy,decomp
19	58731-38200	• . Lever
20	57431-01011	• . Bolt
21	57633-38200	• . Nut
22	02112-06205	• . Screw
23	57342-37101	Cover
24	09407-12402	Clamp (l:120)
25	57541-14A00-10V	Cover,knuckle,lh (white)
26	09160-06019	Washer
27	09169-06033	Washer
28	08319-21068	Nut

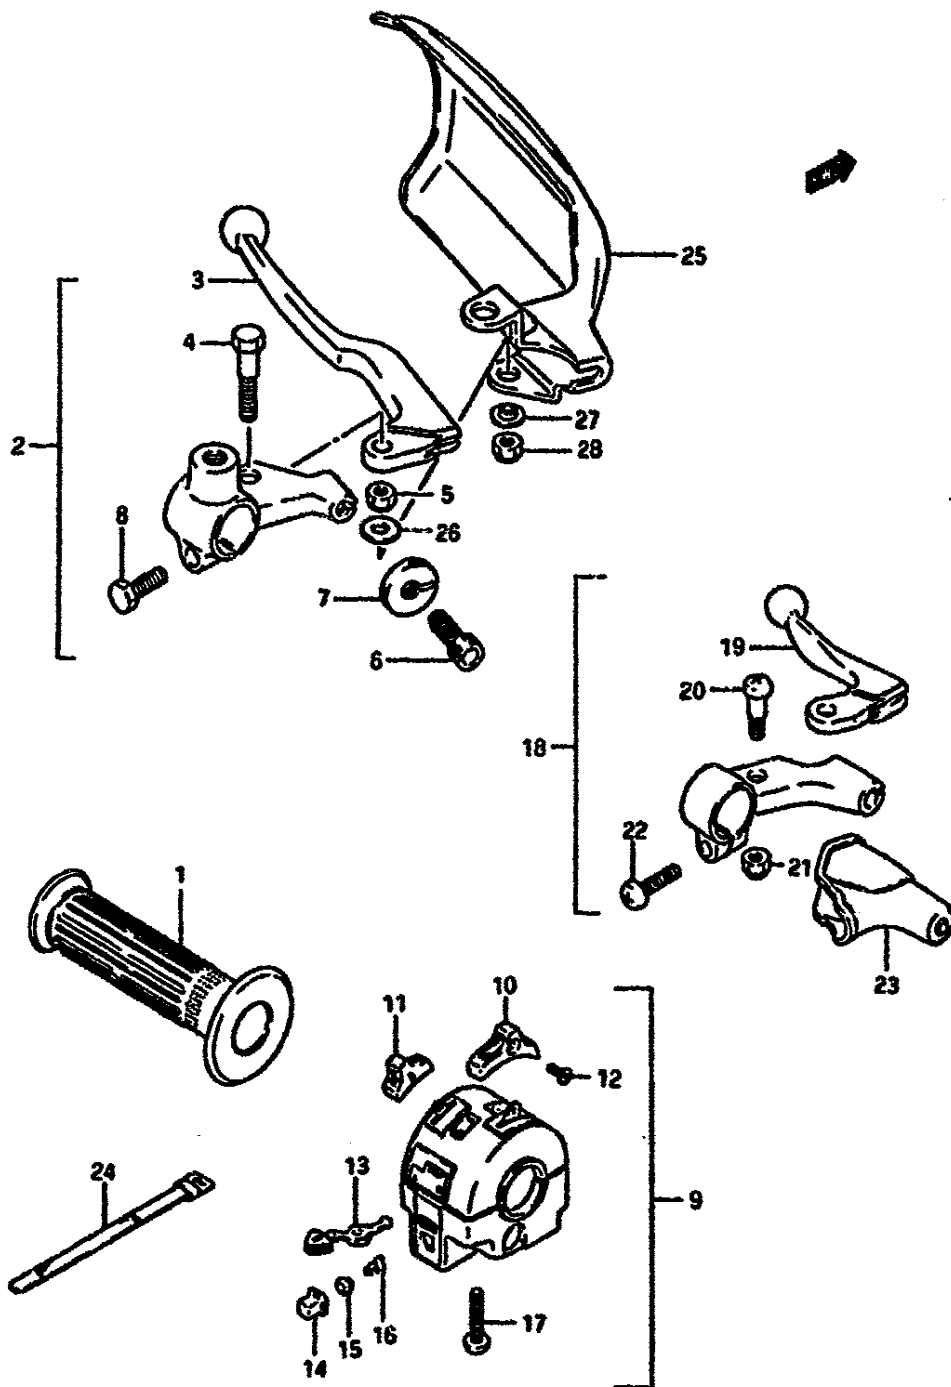 

DR600RK E2

 
LEFT HANDLE SWITCH (MODEL H/J)

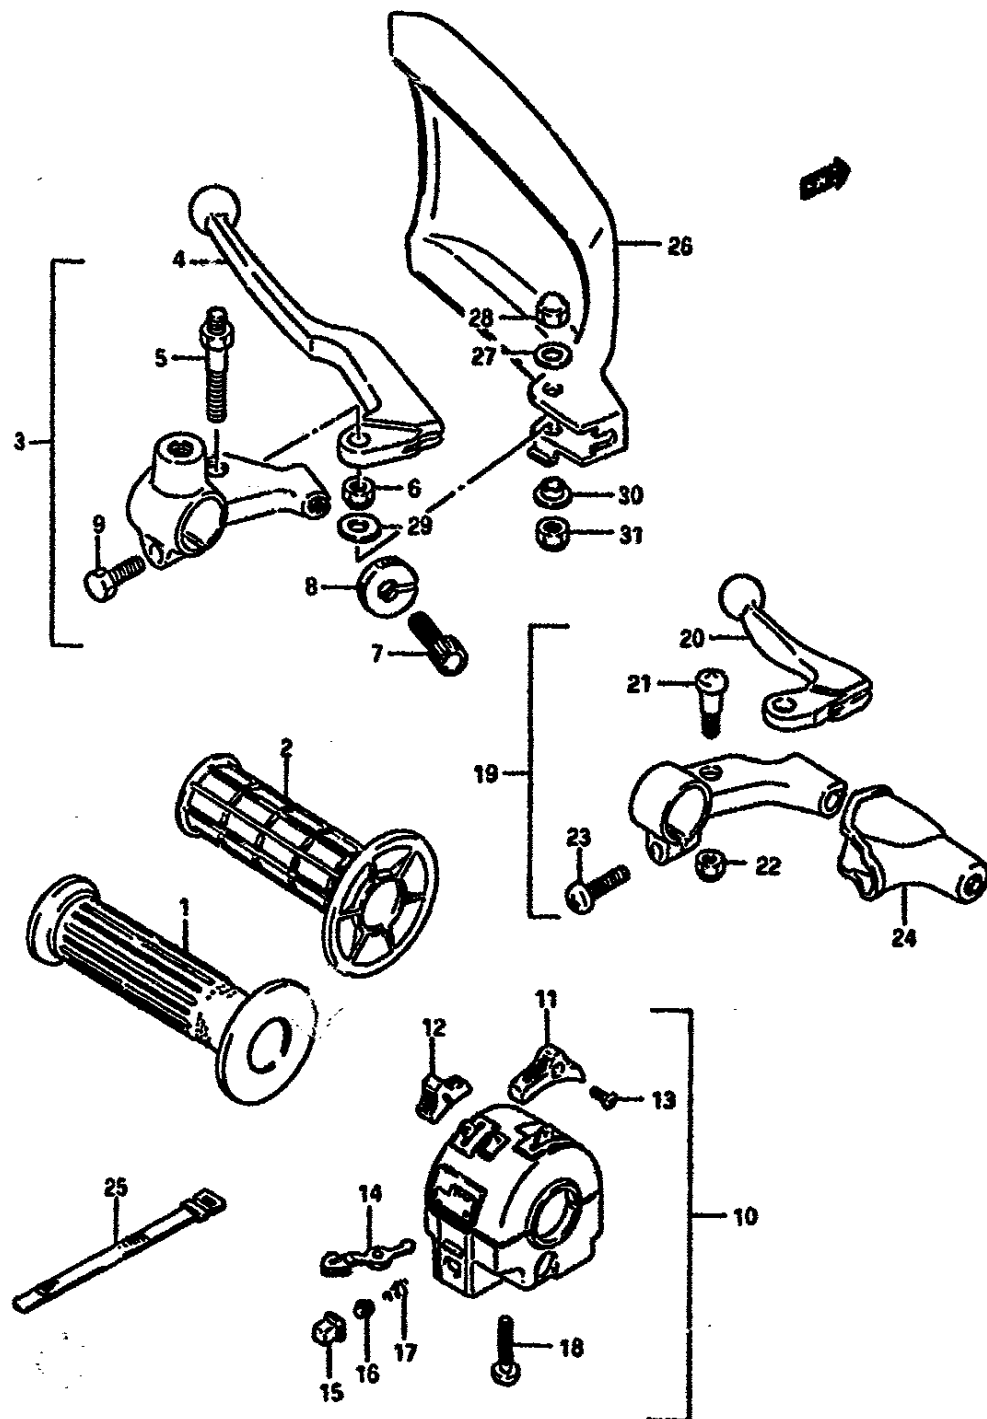


Ref No	Part No	Description
1	57211-45020	Grip,lh
2	57211-40201	Grip,lh
3	57500-15A00	Lever Assy,clutch
4	57620-49101	. . Lever,clutch
5	57531-15A00	. . Bolt
6	08319-21065	. . Nut
7	57441-44400	. . Adjuster
8	57442-44400	. . Nut
9	01107-06205	. . Bolt
10	37400-01A00	Switch Assy,handle,lh
10	37400-14A10	Switch Assy,handle,lh
10	37400-14A40	Switch Assy,handle,lh
11	37411-45012	. . Knob,lighting
12	37421-45012	. . Knob,dimmer
13	02122-03068	. . Screw
14	37513-45011	. . Knob,turn Signal
15	57371-45000	. . Button,horn
16	57372-45000	. . Contact
17	57382-45000	. . Spring
18	02112-05257	. . Screw
19	58700-38200	Lever Assy,decomp
20	58731-38200	. . Lever
21	57431-01011	. . Bolt
22	57633-38200	. . Nut
23	02112-06205	. . Screw
24	57342-37101	Cover
25	09407-12402	Clamp (I:120)
27	09160-06102	Washer
28	08313-11065	Nut
29	09160-06019	Washer
30	09169-06040	Washer
31	08319-21068	Nut

DR600R E2


Ref No	Part No	Description
1	57211-45020	Grip,lh
2	57211-40201	Grip,lh
3	57500-15A10	Lever Assy,clutch
4	57620-49101	. Lever,clutch
5	57531-44B00	. Bolt
6	57533-44B00	. Washer
7	57532-44B00	. Spacer
8	08319-21065	. Nut
9	57441-44400	. Adjuster
10	57442-44400	. Nut
11	01107-06205	. Bolt
12	37400-01A00	Switch Assy,handle,lh
12	37400-14A10	Switch Assy,handle,lh
12	37400-14A40	Switch Assy,handle,lh
13	37411-45012	. Knob,lighting
14	37421-45012	. Knob,dimmer
15	02122-03068	. Screw
16	37513-45011	. Knob,turn Signal
17	57371-45000	. Button,horn
18	57372-45000	. Contact
19	57382-45000	. Spring
20	02112-05257	. Screw
21	58700-38200	Lever Assy,decomp
22	58731-38200	. Lever
23	57431-01011	. Bolt
24	57633-38200	. Nut
25	02112-06205	. Screw
26	57342-37101	Cover
27	09407-12402	Clamp (I:120)
28	57541-15A01-30H	Cover,knuckle,lh (white)
29	09160-06102	Washer
30	08313-11065	Nut
31	09160-06019	Washer
32	09169-06040	Washer
33	08319-21068	Nut

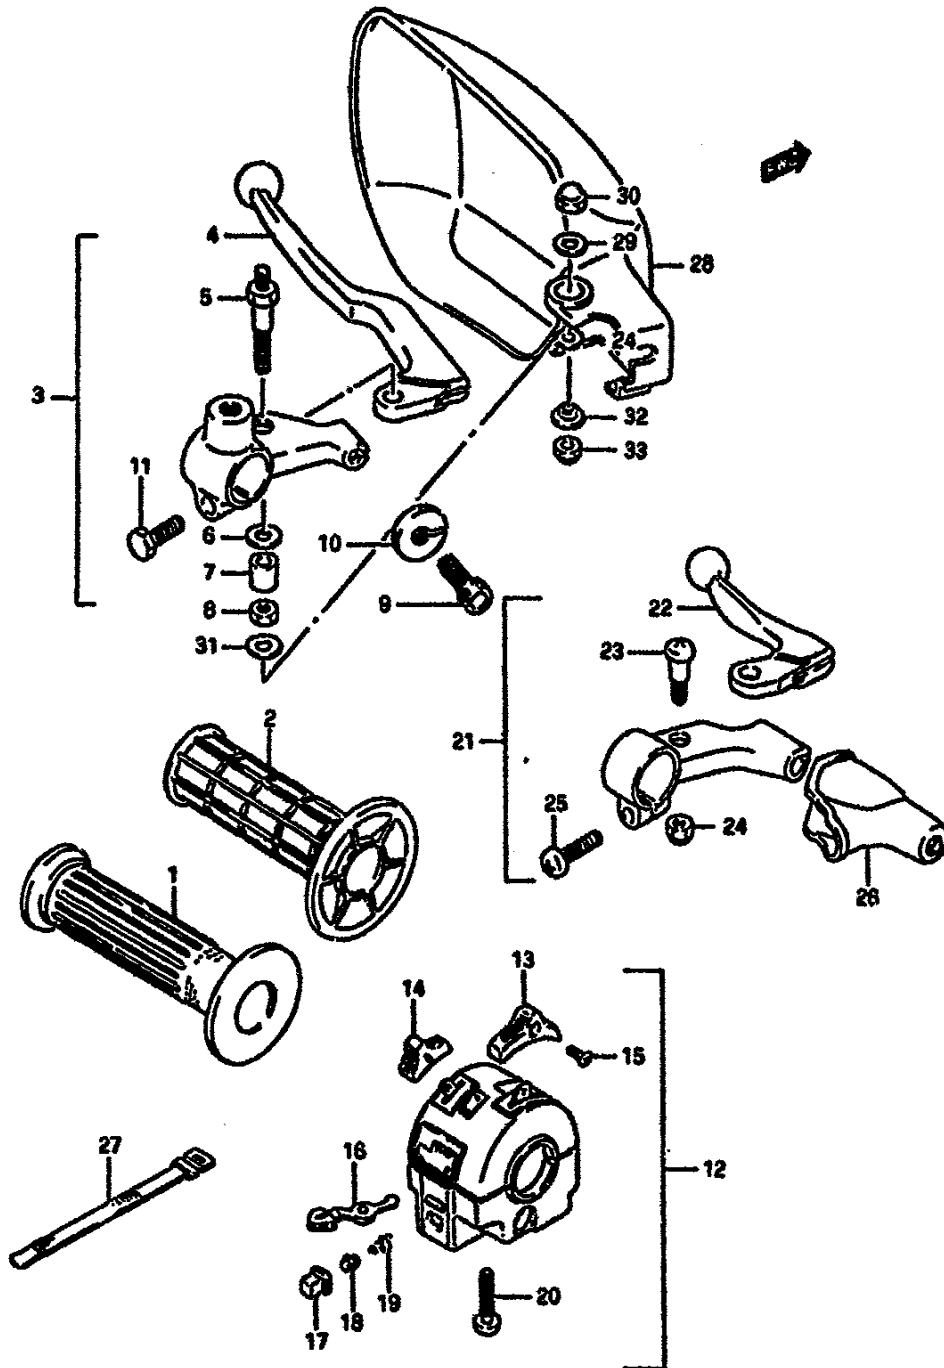 

DR600RK E2

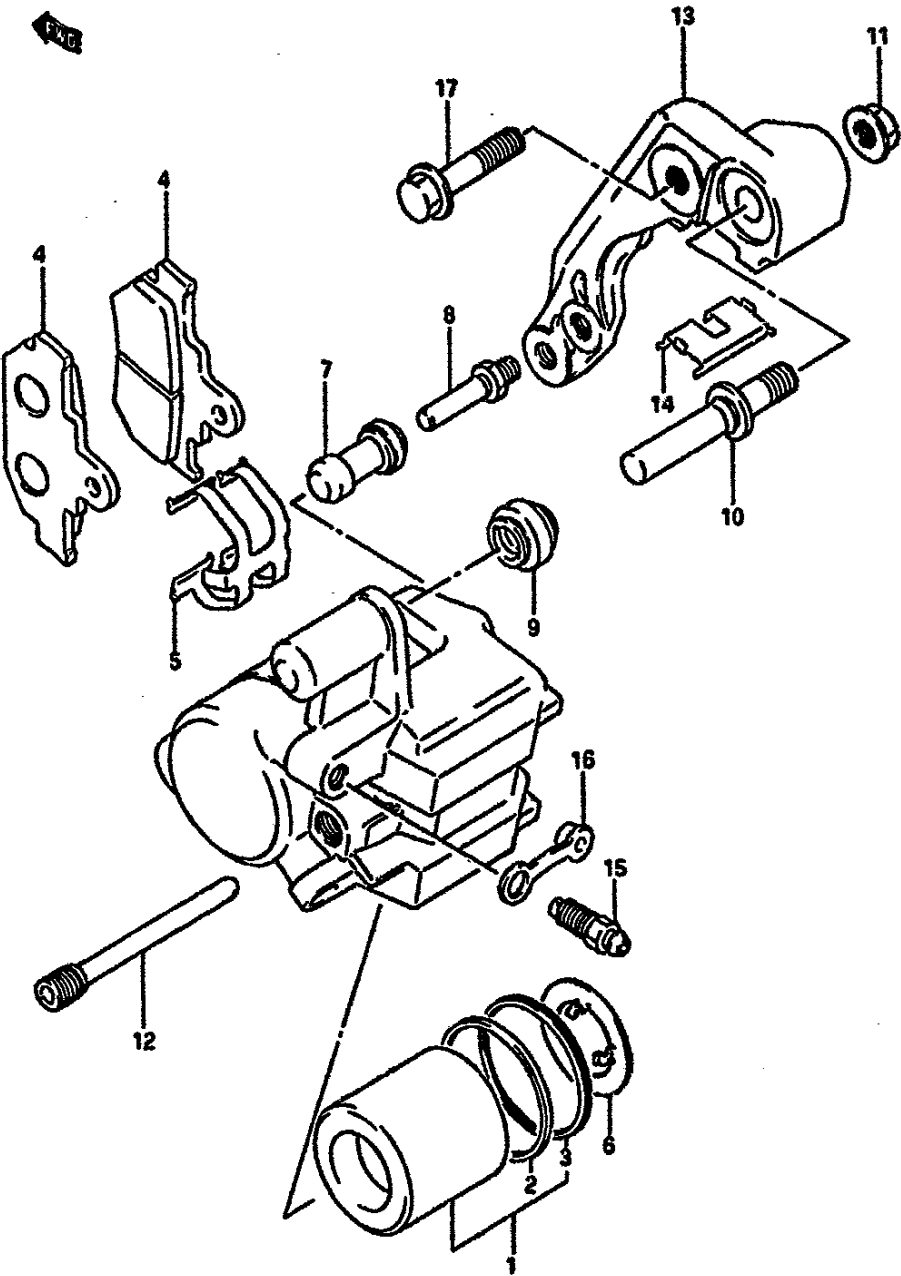 


Ref No	Part No	Description
33	59300-14501	Calipers Assy,lh
33	59300-14510	Calipers Assy,lh
1	59300-14810	• . Piston Set
2	59107-14500	•• .. Seal
3	59108-14500	•• .. Seal,dust
4	59340-14501	• . Pad
4	59340-14510	• . Pad
5	59315-14500	• . Spring
6	59371-14500	• . Shim
7	59386-13A00	• . Boot
8	59382-14500	• . Pin
9	59303-14500	• . Boot
10	59305-14500	• . Bolt
11	59306-14500	• . Nut
12	59345-14500	• . Pin
13	59351-14500	• . Bracket
14	59316-14500	• . Retainer
15	59121-01A00	• . Bleeder
16	59122-01A00	• . Cap
17	09103-08157	Bolt

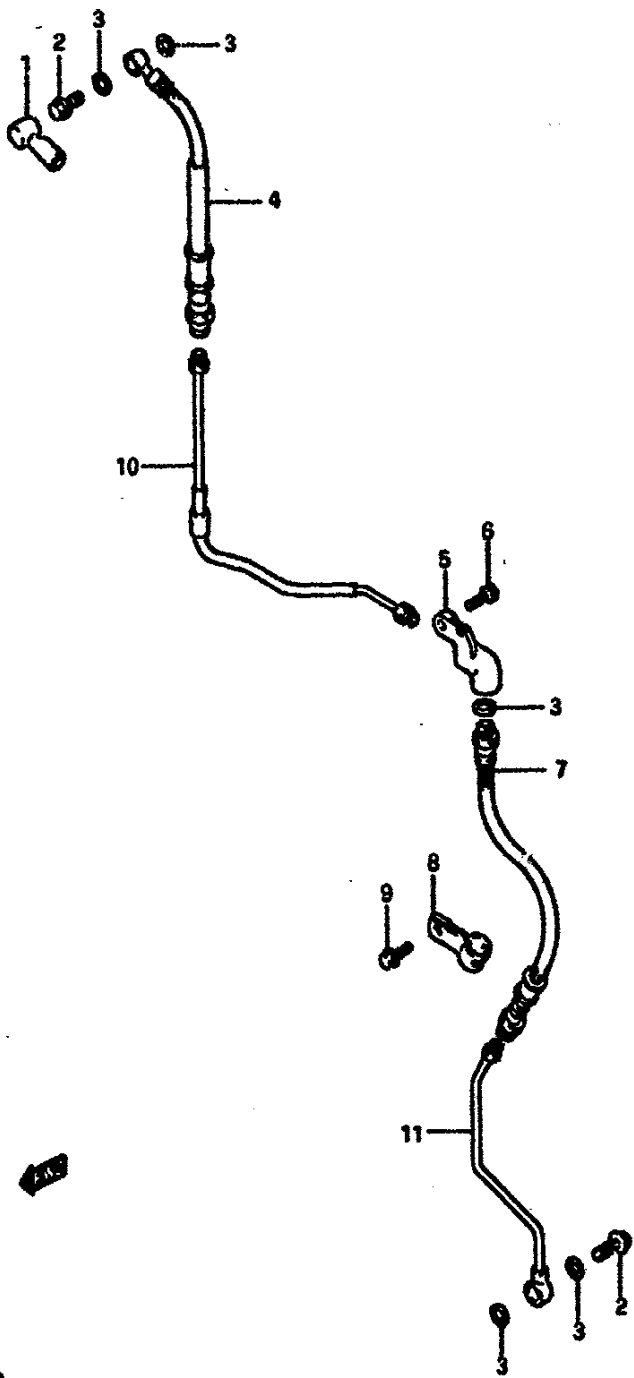 

Ref No	Part No	Description
1	59711-04700	Boot
2	09360-10019	Bolt
3	09161-10009	Washer
4	59480-14A01	Hose,front Brake No.1
4	59480-14A10	Hose,front Brake No.1
4	59480-14A02	Hose,front Brake No.1
5	59490-14A00	Joint
6	09106-06055	Bolt
7	59240-14A00	Hose,front Brake No.2
8	59268-14A00	Clamp,hose No.2
8	59268-14A10	Clamp,hose No.2
9	01547-06127	Bolt
10	59250-14A01	Pipe,front Brake No.1
11	59250-14A11	Pipe,front Brake No.2

DR600RK E2

 
FRONT MASTER CYLINDER

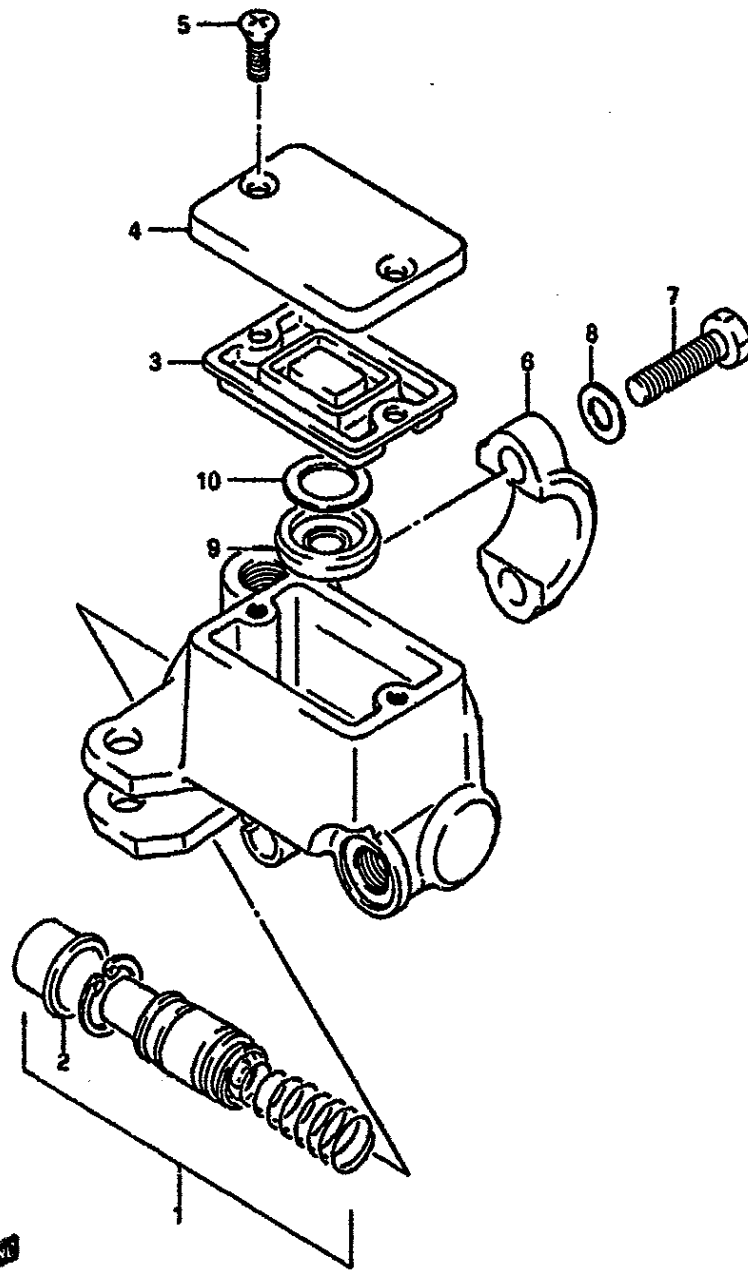

Ref No	Part No	Description
--------	---------	-------------


11	59600-14A01	Cylinder Assy,front Master
11	59600-14A20	Cylinder Assy,front Master
11	59600-13A20	Cylinder Assy,front Master
11	59600-13A60	Cylinder Assy,front Master
1	59600-03810	• . Piston & Cup Set
1	59600-13820	• . Piston & Cup Set
2	59666-44300	•• .. Boot
3	59667-04700	• . Diaphragm
4	59669-04710	• . Cap
4	69669-24A00	• . Cap
5	69689-49300	• . Screw
6	59671-36500	• . Holder
7	01107-06255	• . Bolt
8	08322-21064	• . Washer
9	59748-15400	• . Separator
10	59749-15400	• . Plate

 DR600RK E2

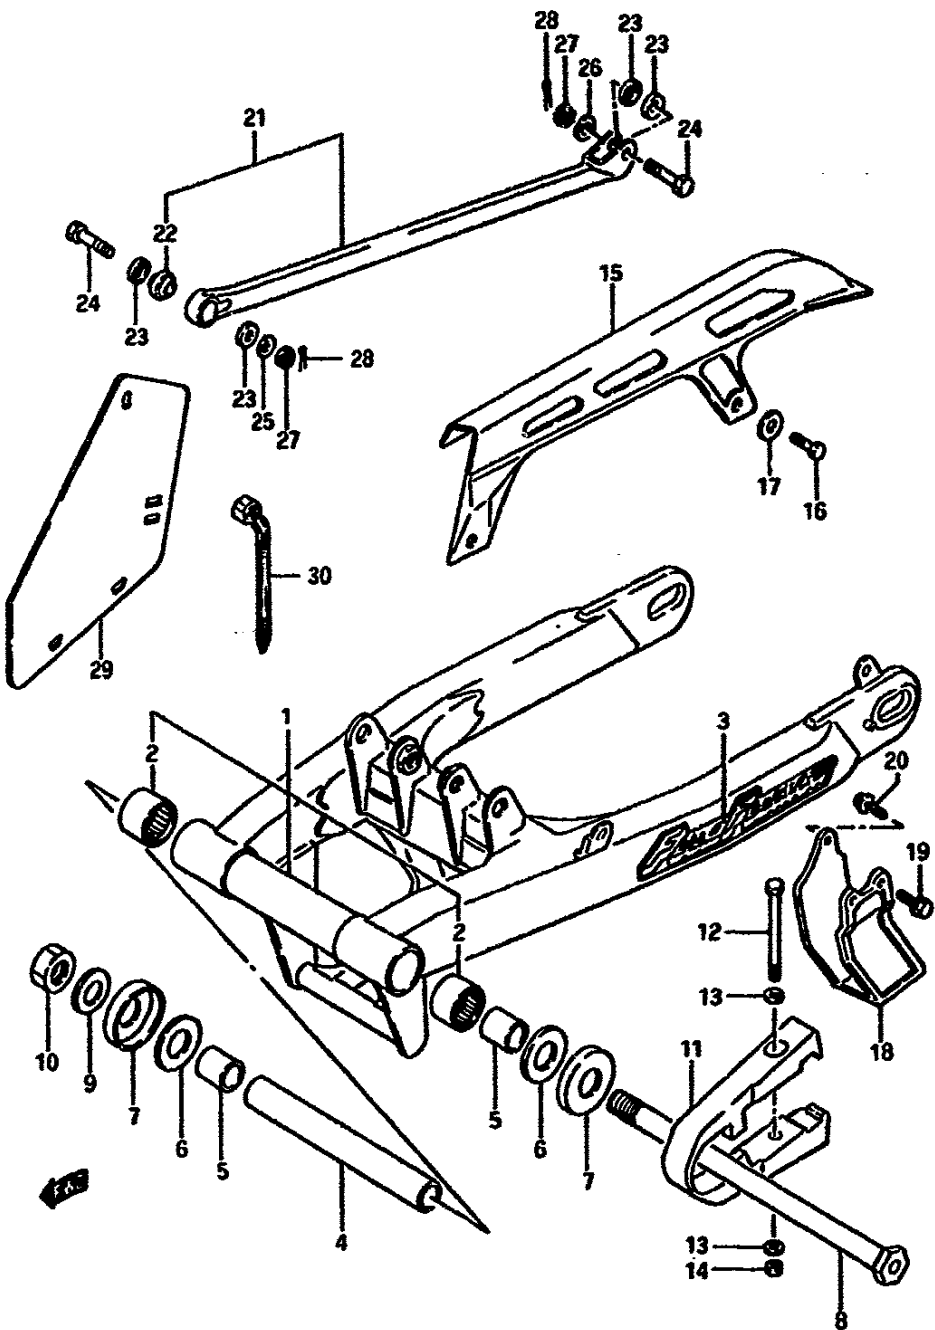

Ref No	Part No	Description
1	61100-14850-13L	Swinging Arm Assy,rear (silver)
1	61000-14A10-13L	Swinging Arm Assy,rear (silver)
2	09263-22022	• . Bearing
3	68381-44A00-95K	• . Emblem (black/blue)
3	68381-44A00-97J	• . Emblem (yellow/blue)
4	61282-14A00	Spacer,center
5	61251-32410	Spacer
6	08211-16341	Washer
7	61262-14A00	Dust Seat
8	61211-14A00	Shaft
9	08322-11168	Washer
10	08319-21168	Nut
11	61273-14A00	Buffer
12	61275-14A00	Bolt
13	09160-05013	Washer
14	08319-21056	Nut
15	61310-14A00	Case,chain
16	01107-06104	Bolt
17	09169-06026	Washer
18	61341-14A03	Guide,chain
19	01517-06128	Bolt,outer
20	01517-06167	Bolt,inner
21	64300-14860-13L	Torque Link Set,rear
22	64352-40411	• . Bearing
23	64339-40410	Dust Seal
24	09101-08017	Bolt
24	09101-08017	Bolt,front
24	09100-08244	Bolt,rear
25	08322-11088	Washer,front
26	09160-08042	Washer,rear
27	08314-4108J	Nut
27	08314-41088	Nut,front
27	08319-21088	Nut,rear
28	04111-20208	Cotter Pin
28	04111-20208	Cotter Pin,front
29	61391-14A00	Guard,chain
30	09407-14403	Clamp

 
DR600RK E2

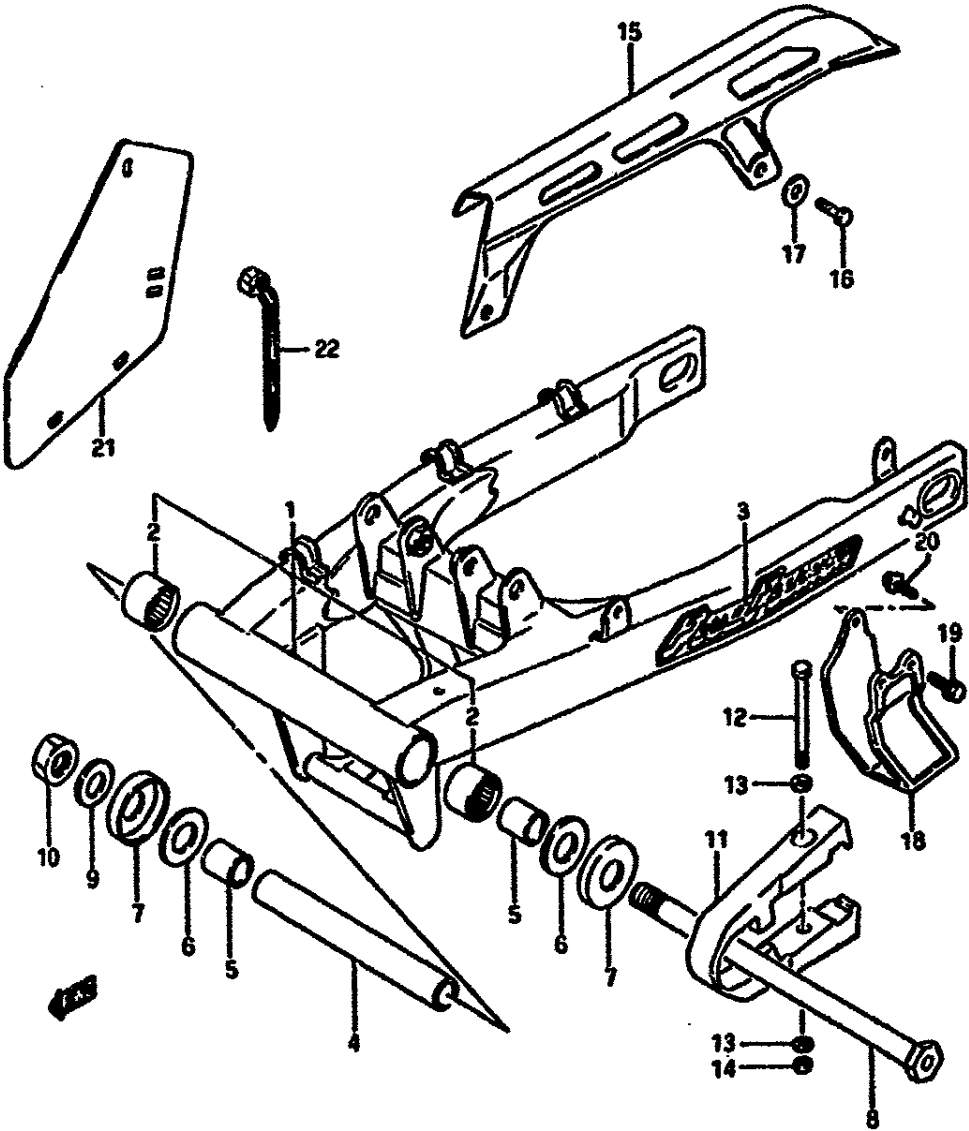

Ref No	Part No	Description
1	61000-14A50-13L	Swinging Arm Assy,rear (silver)
2	09263-22022	• . Bearing
3	68381-44A00-97K	• . Emblem (yellow/blue)
4	61282-14A00	Spacer,center
5	61251-32410	Spacer
6	08211-16341	Washer
7	61262-14A00	Dust Seat
8	61211-14A00	Shaft
9	08322-11168	Washer
10	08319-21168	Nut
11	61273-14A00	Buffer
12	61275-14A00	Bolt
13	09160-05013	Washer
14	08319-21056	Nut
15	61310-14A00	Case,chain
16	01107-06104	Bolt
17	09169-06026	Washer
18	61341-14A03	Guide,chain
19	01517-06128	Bolt,outer
20	01517-06167	Bolt,inner
21	61391-14A00	Guard,chain
22	09407-14403	Clamp


DR600RK E2

Ref No	Part No	Description
1	62100-14A02-19F	Absorber Assy,rear Shock (blue)
1	62100-14A02-34S	Absorber Assy,rear Shock (blue)
2	62175-43400	• . Bearing
3	62277-14200	• . Ring,stop
4	62226-14520	• . Seal,dust
5	62684-14520	• . Collar
6	09103-10040	Bolt,upper
7	09103-10030	Bolt,lower
8	08319-31107	Nut

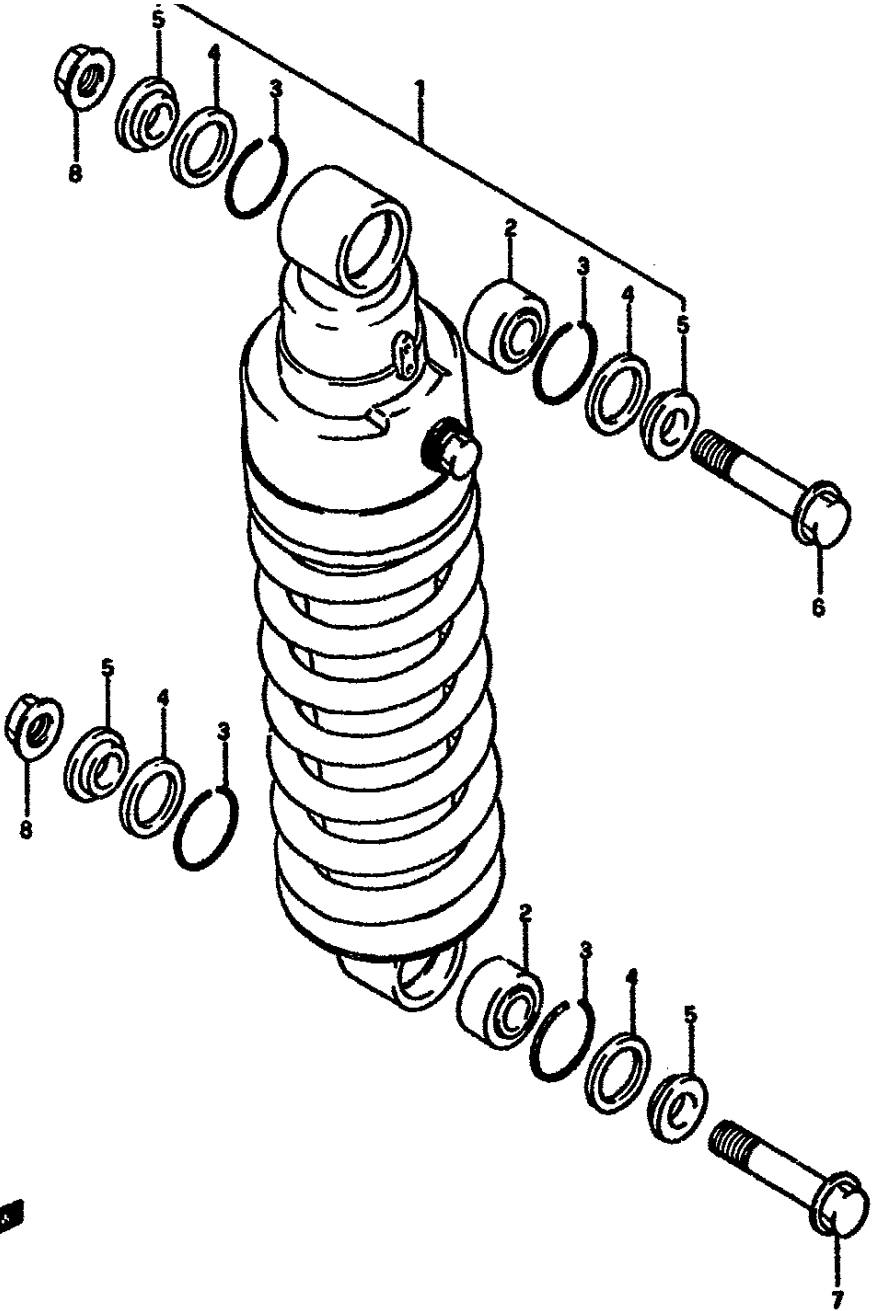 


DR600RK E2

Ref No	Part No	Description
1	62602-14810	Lever Set, rear Cushion
2	09263-20053	• . Bearing
3	09263-17020	• . Bearing, rear
4	08211-14323	Washer
5	62624-14A00	Dust Seal
6	62621-14A00	Shaft
7	62623-14A00	Spacer
8	08319-31128	Nut
9	62602-14820	Rod Set, rear Cushion
10	09263-17020	• . Bearing
11	08211-12283	Washer
12	61262-41500	Dust Seal
13	62648-14A00	Bolt, upper
14	62646-14A00	Spacer
15	08319-31128	Nut
16	62657-14A00	Bolt, lower
17	62656-14A00	Spacer

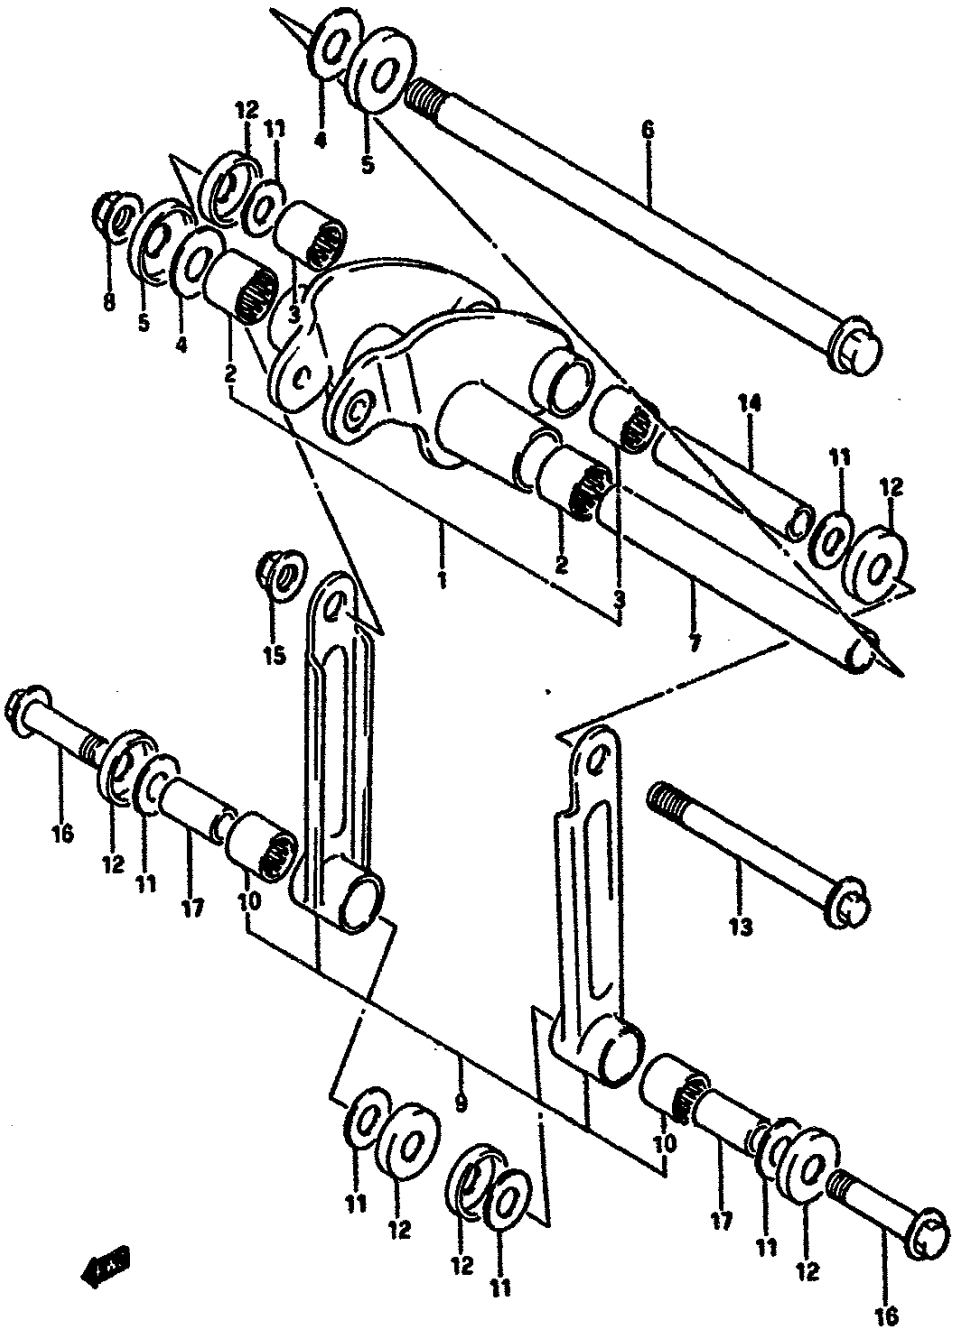 


DR600RK E2

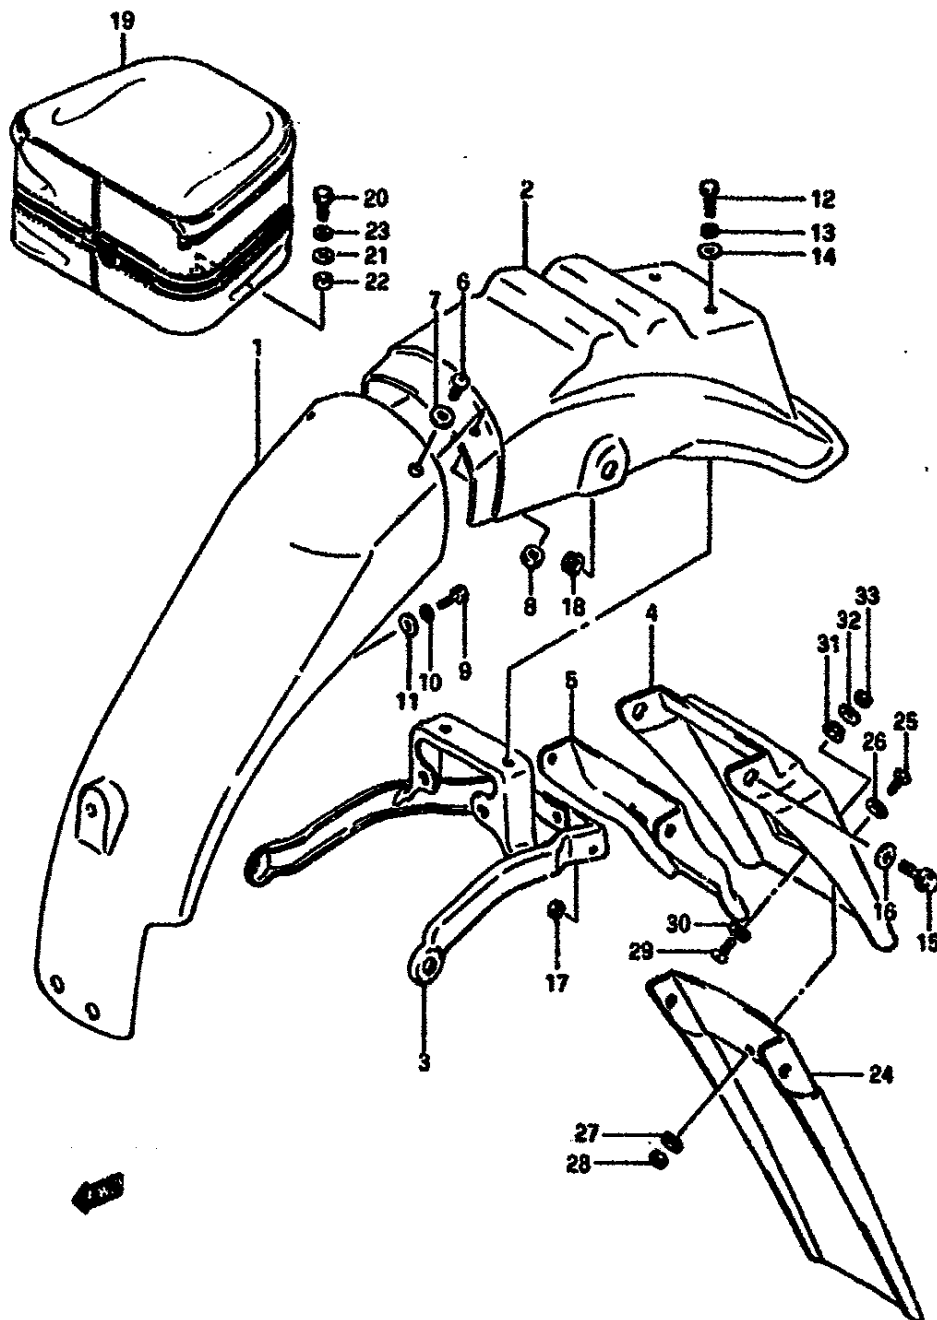 


Ref No	Part No	Description
1	63112-14A00	Body,front
2	63113-14A00-10V	Body,rear (white)
2	63113-14A20-10V	Body,rear (white)
2	63113-14A00-14L	Body,rear (white)
2	63113-14A20-14L	Body,rear (white)
2	63113-14A00-30H	Body,rear (white)
2	63113-14A20-30H	Body,rear (white)
3	63120-14A00	Reinforcement
4	63311-14A00	Extension
4	63311-14A10	Extension
4	63311-14A20	Extension
5	63131-14A00	Reinforcement
6	02142-05124	Screw,front & Rear
7	09160-05031	Washer
8	08319-21055	Nut
9	01107-06165	Bolt,front
10	08321-21064	Lock Washer
11	09169-06026	Washer
12	01107-06205	Bolt,upper
13	08321-21064	Lock Washer
14	08322-21064	Washer
15	01517-06205	Bolt,extension
16	09169-06026	Washer
17	08319-31065	Nut
18	08319-31085	Nut,rear
19	94900-14A00-9LS	Bag Assy,seat Tail (blue/white)
19	94900-14A00-9LL	Bag Assy,seat Tail (white/blue)
20	01107-06166	Bolt
20	09119-06072	Bolt
21	09160-060A6	Washer
22	09180-06073	Spacer
23	08321-21067	Lock Washer
24	63331-14A00	Mud Guard
24	63331-14A20	Mud Guard
25	02142-06125	Screw
26	09160-06019	Washer
27	08321-21066	Lock Washer
28	08310-22066	Nut
29	02142-06125	Screw
29	02142-06164	Screw
30	09160-06020	Washer
31	09169-06041	Washer
32	09160-06069	Washer
33	08310-22065	Nut

Ref No	Part No	Description
1	64110-14A00	Hub,rear
2	09180-17078	Spacer
3	08133-62037	Bearing
4	09250-08013	Cap,bead Stopper
5	64200-14870	Panel Set,rear
6	64352-40401	• . Bearing
7	64213-14A00	Spacer
8	64845-37200	Cover
9	08211-17361	Thrust Washer
10	09285-24001	Oil Seal
11	54410-07003	Shoe,brake
12	09443-07001	Spring
13	64441-14A00	Cam,rear Brake
14	09280-140A3	O Ring (d:2.4,id:13.8)
15	09160-140A1	Washer (14.5x22x1.6)
16	64451-14A00	Lever,rear Brake Cam
17	09448-30006	Spring
18	01107-06257	Bolt
19	64711-14A01	Axle,rear
20	64741-14A01	Spacer,rh
21	09180-17079	Spacer,lh
22	08322-11168	Washer
23	09159-16002	Nut
24	64511-14A00	Sprocket,rear (nt:42)
25	09120-08010	Bolt
26	08322-11088	Washer
27	08319-31087	Nut
28	61411-14A00	Adjuster,chain,rh
29	61421-14A00	Adjuster,chain,lh
30	64611-14A00	Drum
31	64651-14A00	Absorber,rear Hub Shock
32	64733-14A00	Retainer
33	09262-25061	Bearing
34	65311-14A00	Rim,rear Wheel (mt2.50x17al)
34	65311-14A10	Rim,rear Wheel (mt2.50x17al) (gold)
35	65320-14A00	Spoke Set
36	65100-14A10	Tire,rear (130/80-17 65s)
37	65200-44300	Tube
38	65261-49010	Protector

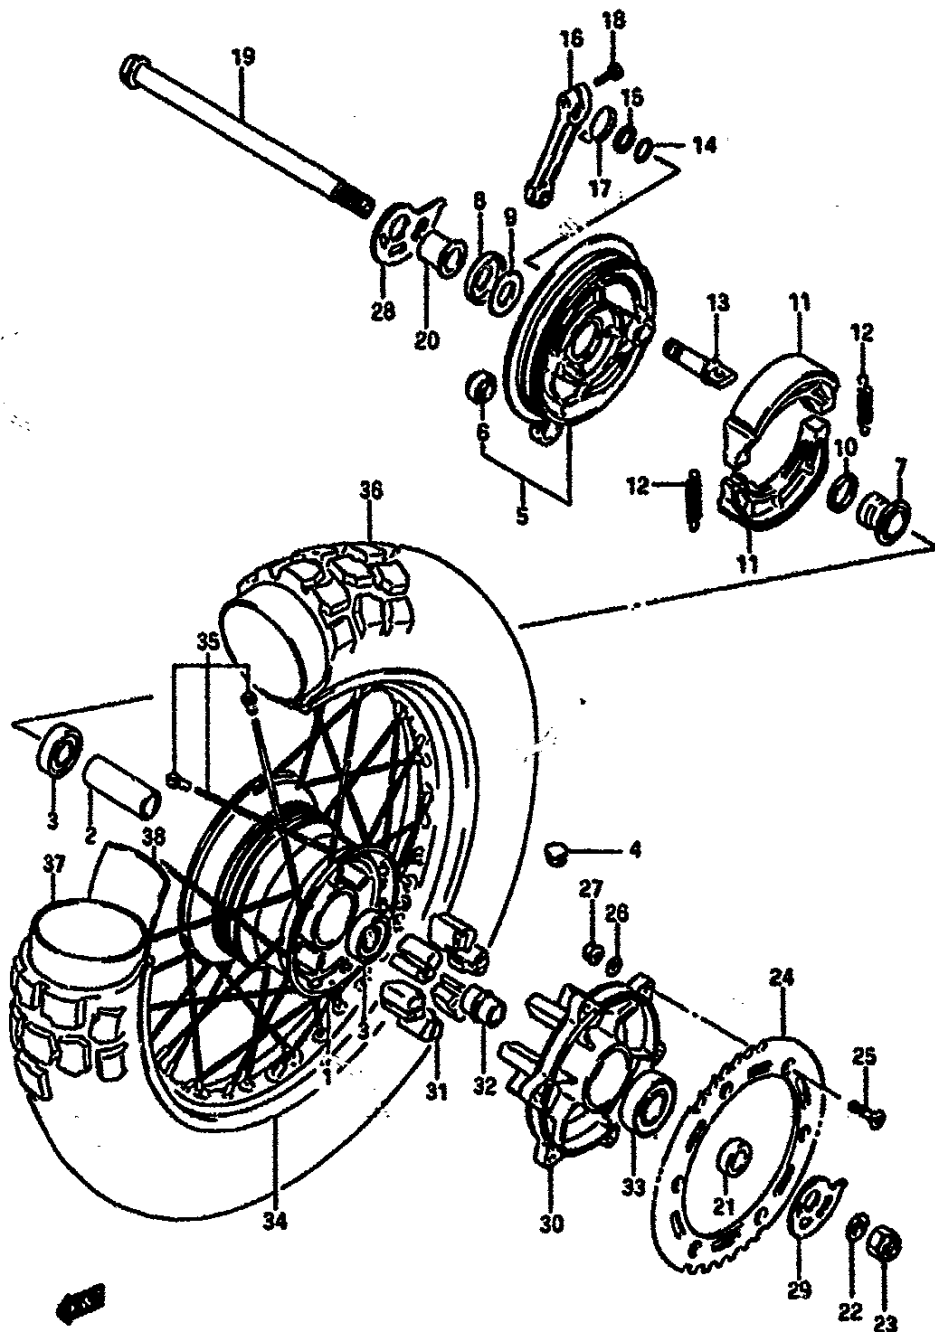 



DR600RK E2

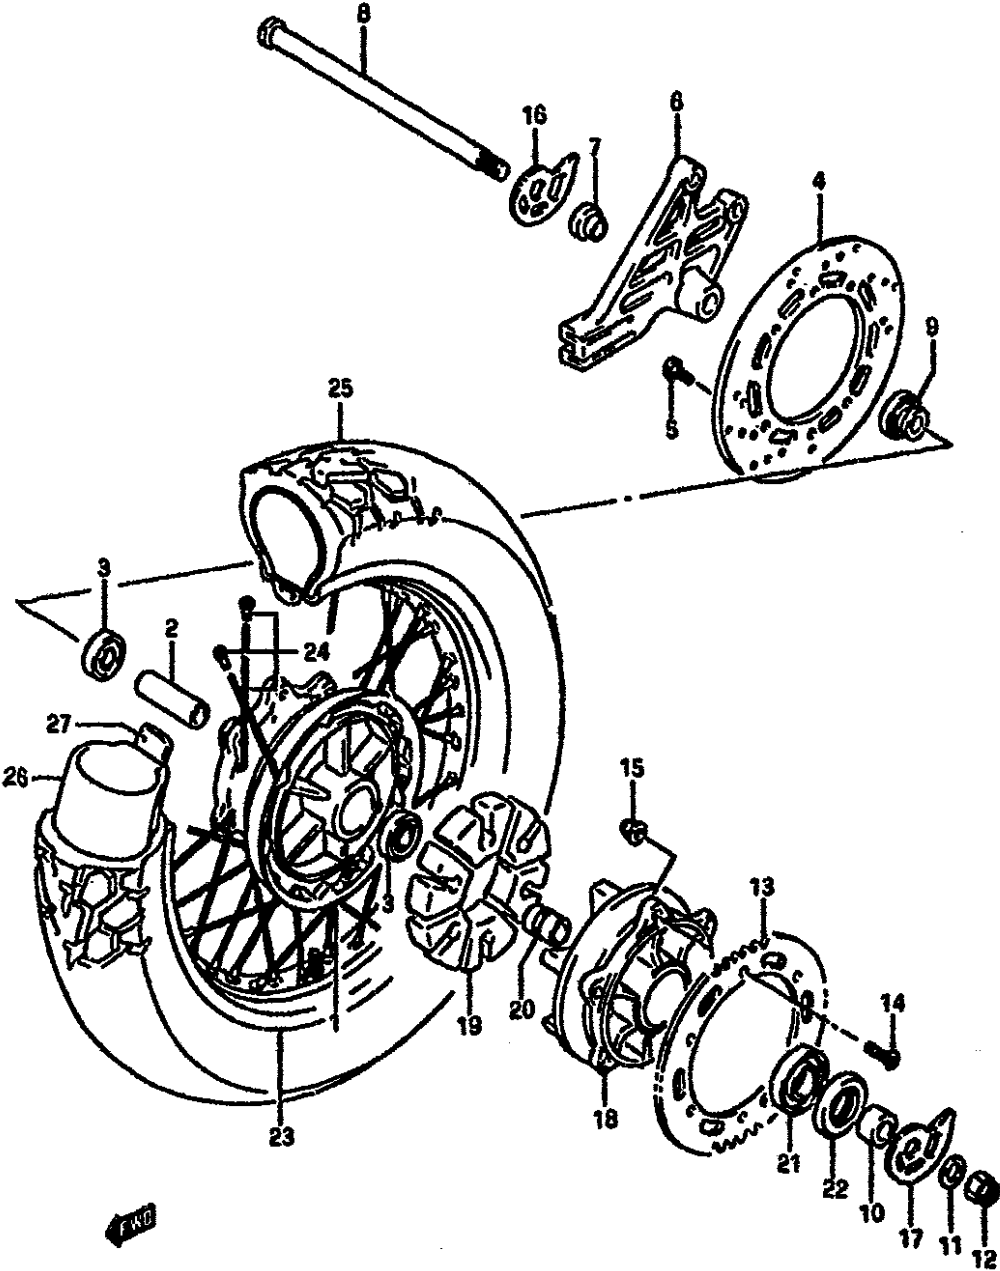 

Ref No	Part No	Description
1	64110-44B10	Hub,rear Wheel
2	09180-17071	Spacer
3	08124-63037	Bearing
4	69211-44B00	Disc,rear Brake
5	59421-03A01	Bolt,disc
6	69721-44B00	Bracket,rear Caliper
7	09180-17096	Spacer,caliper Bracket
8	64711-44B10	Axle,rear
9	64750-38211	Spacer,rh
10	09180-17090	Spacer,lh
11	09160-17013	Washer
12	09159-16002	Nut
13	64511-14A00	Sprocket
14	09120-08010	Bolt
15	08319-31087	Nut
16	61411-44B00	Adjuster,chain,rh
17	61421-44B00	Adjuster,chain,lh
18	64611-44B10	Drum
19	64651-44B01	Absorber,rear Hub Shock
20	64733-31300	Retainer
21	09262-25073	Bearing
22	09285-33001	Seal,dust
23	65311-44B20	Rim,rear Wheel (mt2.50x17) (gold)
24	65320-44B10	Spoke Set
25	65100-44B00	Tire,rear (130/80-17 65s)
26	65200-44300	Tube
27	65261-49010	Protector


Ref No	Part No	Description
27	69100-44B00	Caliper Assy,rear
1	69100-44850	• . Piston Set
2	59107-04A00	• . Seal
3	59108-04A00	• . Seal,wiper
4	69100-44860	• . Pad Set
5	69115-44B00	• . Spring
6	69116-44B00	• . Guide,pad
7	69141-44B00	• . Pin
8	69142-45000	• . Clip
9	59312-36500	• . Boot
10	59313-36500	• . Insulator
11	69150-44B00	• . Bracket
12	59121-18410	• . Bleeder
13	59122-18410	• . Cap
14	09103-08238	Bolt

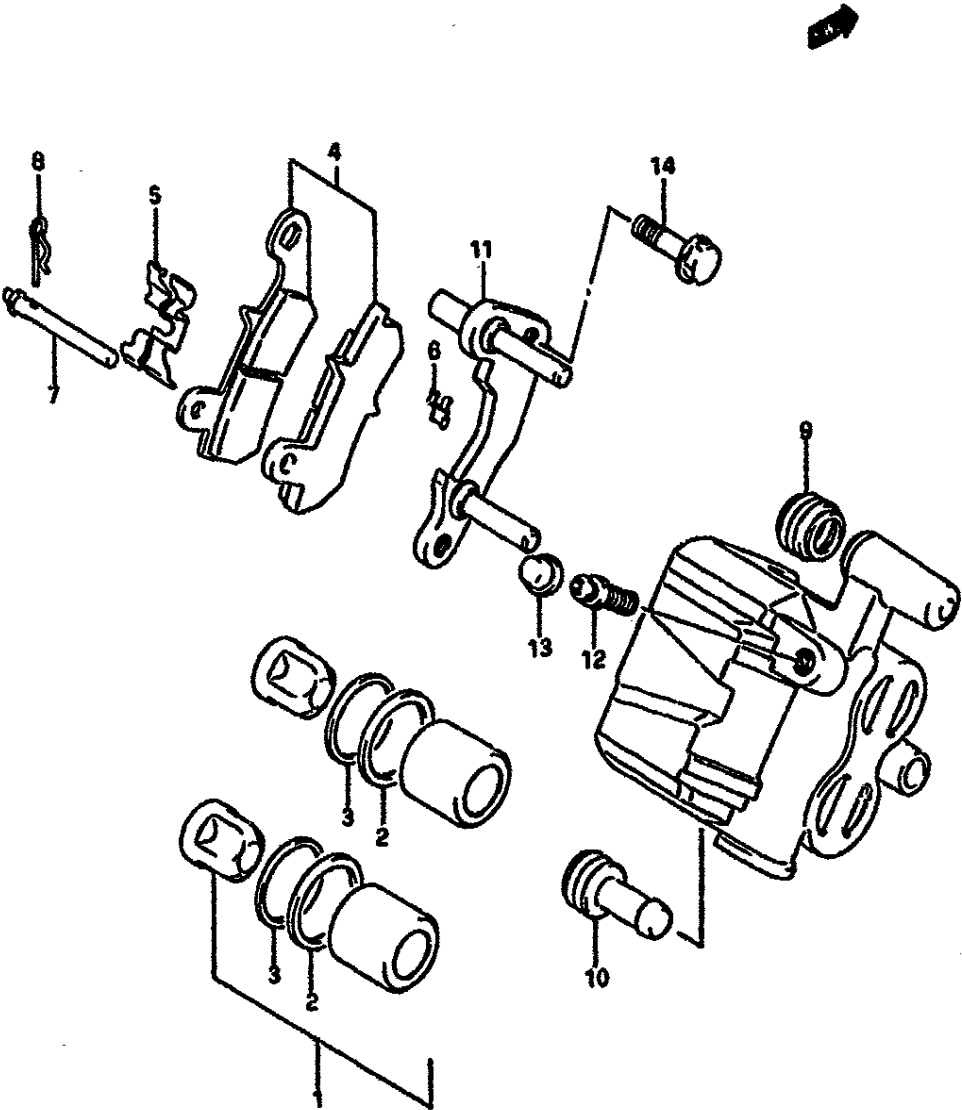 

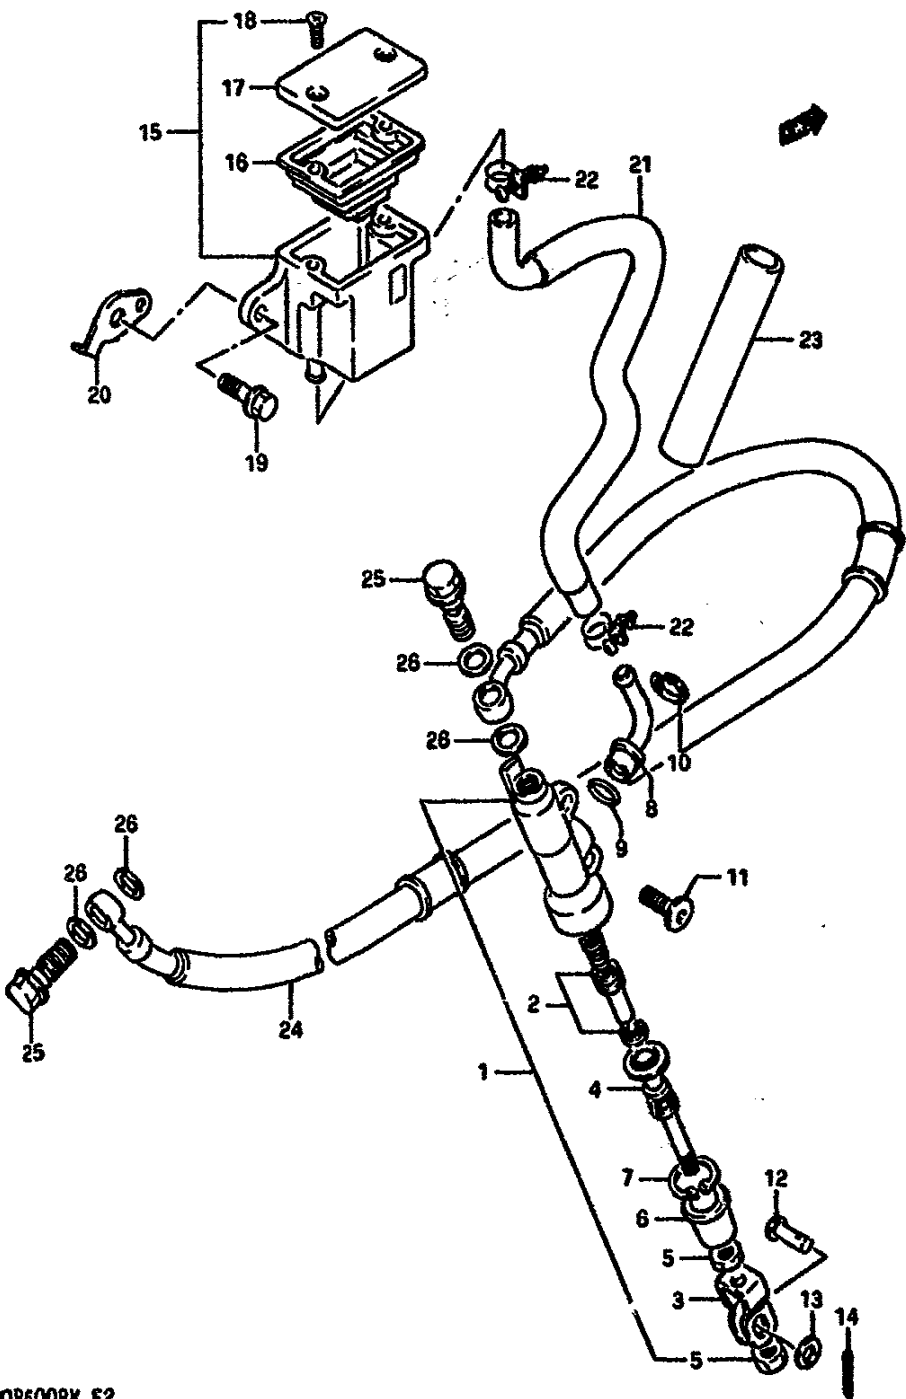 


Ref No	Part No	Description
1	69600-14A51	Cylinder Assy,rear Master
2	69600-34810	. . Piston/cup Set
3	69692-27A30	. . Yoke
4	69670-00B21	. . Rod,push
5	69693-05A00	. . Nut
6	69691-00A00	. . Boot
7	51162-70040	. . Circlip
8	69672-00B20	. . Connector
9	69686-34200	. . O Ring
10	69674-00B20	. . Circlip
11	09106-06064	Bolt
12	09200-06037	Pin
13	08322-21067	Washer
14	04111-20158	Cotter Pin
15	69740-38B20	Tank Assy,rear Reservoir
16	59667-04700	. . Diaphragm
17	69669-24A00	. . Cap
18	69689-04A00	. . Screw
19	01517-06258	Bolt
20	69751-14A01	Plate,reservoir Tank
21	69731-14A01	Hose,reservoir Tank
22	09400-14301	Clamp,hose
23	69732-14A00	Shield,hose
24	69480-14A01	Hose,rear Brake
25	09360-10017	Bolt,union
26	09161-10009	Washer

 
DR600RK E2

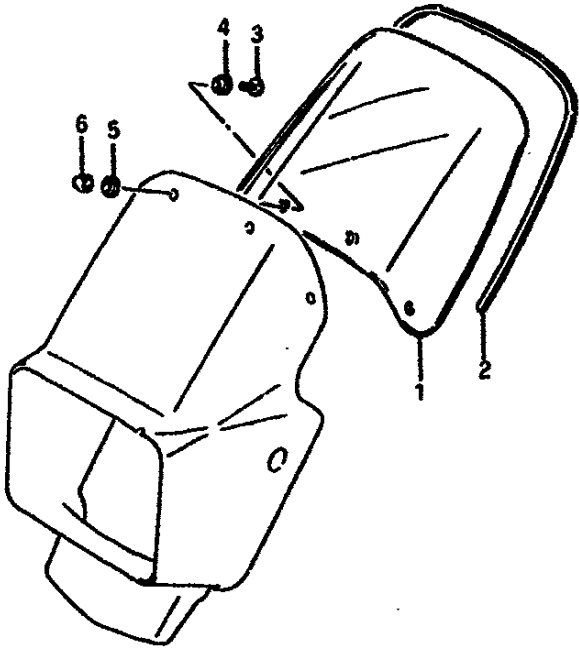

Ref No	Part No	Description
1	94611-14A00	Visor, meter
2	94631-14A00	Molding (l:545)
3	02142-05104	Screw
4	09320-05008	Cushion
5	08322-21055	Washer
6	08313-11055	Nut

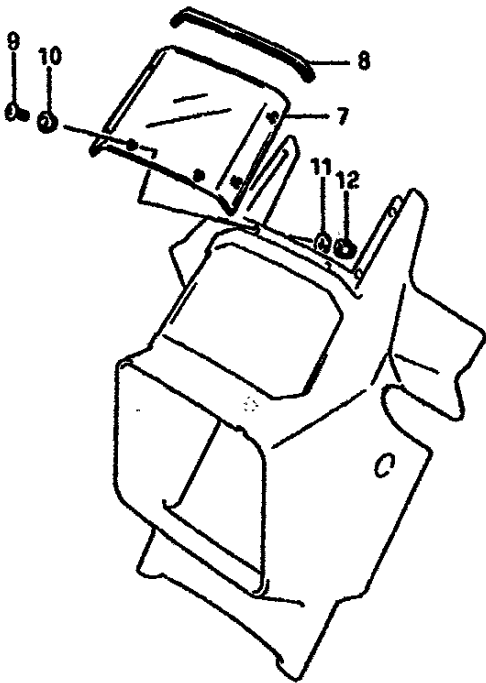 

7	94611-15A00	Visor, meter
8	94631-15A00	Molding (l:210)
9	02142-05104	Screw
10	09320-05008	Cushion
11	08322-21055	Washer
12	08313-11055	Nut

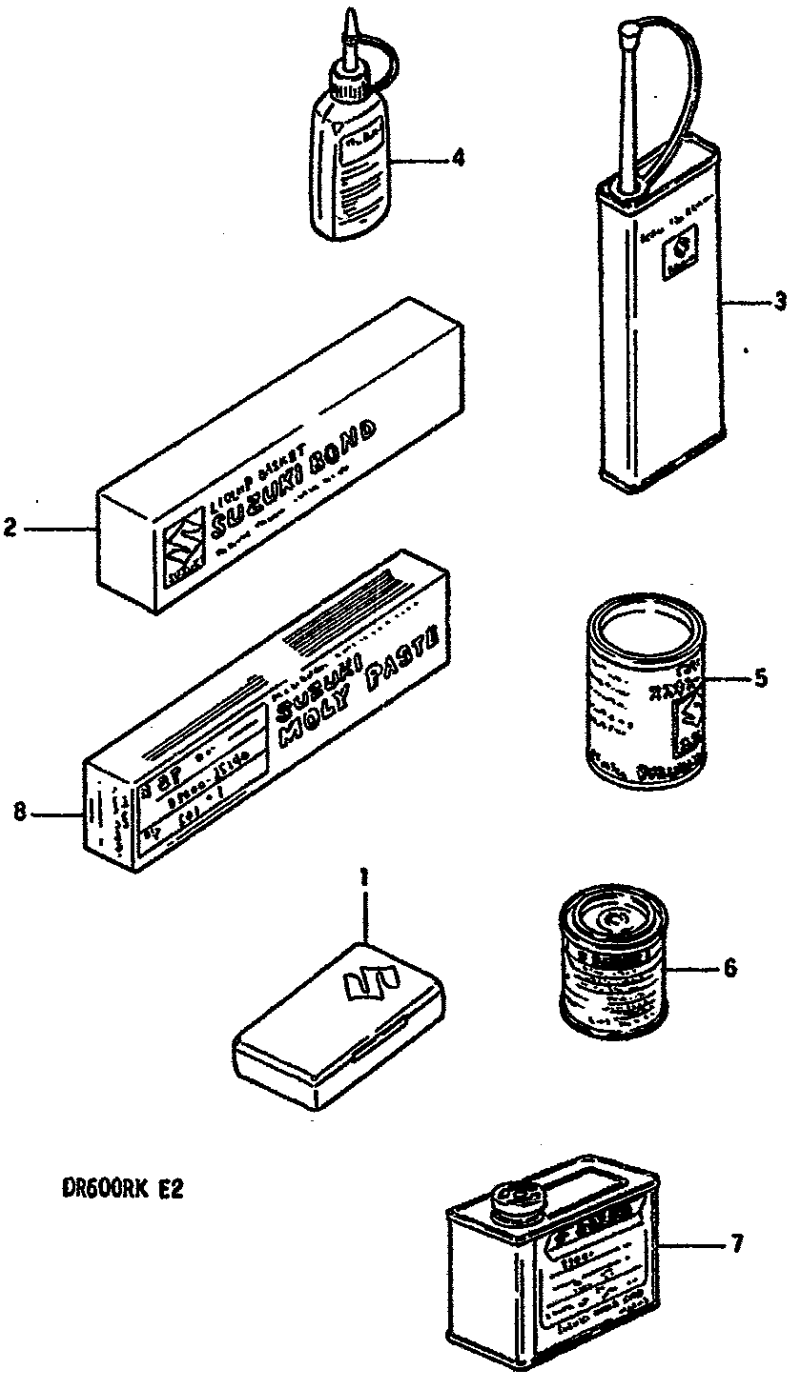 

DR600R E2

Ref No	Part No	Description
1	09826-00001	Tool,tube Repairing
2	99000-31140	Suzuki Bond (1207b)
3	99000-32040	Cement,thread Lock
4	99000-32030	Thread Lock,super (1303b)
4	99000-32050	Thread Lock,super (1342)
4	99000-32020	Thread Lock,super (1333)
4	99000-32100	Thread Lock,super (1305)
4	99000-32130	Thread Lock,super (1360)
5	99000-25030	Grease,super
6	99000-10109-19F	Paint (champion Blue)
6	99000-10109-10V	Paint (rocky White)
6	99000-10109-291	Paint (black Semi-gloss)
6	99000-10209-17P	Paint (marble Fisher Blue)
6	99000-10209-13L	Paint (bright Silver Metallic)
6	99000-10109-14L	Paint (super White)
6	99000-10109-14L	Paint (special White)
6	99000-10209-33N	Paint (marble Parsec Blue)
6	99000-10209-34S	Paint (violent Blue)
6	99000-10109-30H	Paint (special White)
7	99000-10105-19F	Paint (champion Blue)
7	99000-10105-10V	Paint (rocky White)
7	99000-10105-291	Paint (black Semi-gloss)
7	99000-10205-17P	Paint (marble Fisher Blue)
7	99000-10205-13L	Paint (bright Silver Metallic)
7	99000-10105-14L	Paint (super White)
7	99000-10205-33N	Paint (marble Parsec Blue)
7	99000-10205-34S	Paint (violent Blue)
7	99000-10105-30H	Paint (special White)
8	99000-25140	Suzuki Mory Paste