



INSTRUCTION BOOK

MATCHLESS

TWIN CYLINDER MODELS

1956

"SUPER CLUBMAN"



500 c.c. Model G9

600 c.c. Model G11

Issued by:

MATCHLESS MOTOR CYCLES · LONDON S.E.1

Proprietors: ASSOCIATED MOTOR CYCLES LTD.

ERRATA

Page 13

Gear Box Lubrication Table

Extreme Cold Column

For SAE 20 read SAE 30.

Page 42

Front Chain Adjustment

Refer to Illustration 15.

Remove engine plate cover.

Slacken the nut of bolt (5).

Slacken the nut (3).

Screw the bolt (1) into the crosshead (2) to take up slack in the chain.

Pull on the rear chain to move the gear box and tighten the front chain.

Remove the inspection cap from the chaincase and check tension by applying upward pressure, with a finger, to the chain.

The correct amount of whip is $\frac{1}{2}$ inch. Check the adjustment in several positions and adjust for the tightest point.

When the correct adjustment has been obtained, tighten nuts (3) and (5), and replace cover.

If the chain is tight, screw the bolt (1) out of the crosshead (2).

After making adjustments to the front chain always check the adjustment of the rear chain. Slacken or tighten as necessary.

INSTRUCTION BOOK MATCHLESS

500 c.c. TWIN CYLINDER MODELS 600 c.c.

1956

Price

TWO SHILLINGS and SIXPENCE

Factories:

BURRAGE GROVE and MAXEY ROAD
PLUMSTEAD, S.E.18

Telephone:

WOOLWICH 1223 (7 lines)

Telegrams: "MATCHLESS, WOL-LONDON"

Cables: "MATCHLESS, LONDON"

Codes: A.B.C. 5th and 6th Edition; Bentley's; and Private Codes

Registered Offices:

PLUMSTEAD ROAD, PLUMSTEAD
LONDON, S.E.18 .. ENGLAND

Issued by:

MATCHLESS MOTOR CYCLES · LONDON S.E.18

Proprietors: ASSOCIATED MOTOR CYCLES LTD.

CONTENTS

	Page
Carburetter ...	33
Controls ...	8
Data ...	6
Driving ...	10
Electrical Equipment ...	64
Engine ...	23
Forks and Frame ...	44
Free Service ...	80
Guarantee ...	84
Index ...	85
Information ...	74
Lubrication ...	13
Maintenance ...	21
Repairs and Service ...	77
Spare Parts ...	81
Tools and Special Equipment ...	82
Transmission ...	36
Wheels and Brakes ...	53


ILLUSTRATIONS

	Illustrations	Page
A.V.C. unit ...	31	69
Battery ...	32	70
Brake adjustment, front ...	24	59
Brake adjustment, rear ...	25	60
Brake pedal adjustment ...	26	61
Brake shoe adjustment ...	23	58
Carburetter ...	12	34
Clutch ...	14	40
Contact breaker ...	28	64
Controls ...	1	9
Crankshaft ...	11	31
Engine Non-Return Oil Valve ...	5	17
Engine lubrication ...	9	27
Fork exploded view ...	17	48
Fork damper details ...	16	45
Front chain adjustment ...	15	42
Gearbox ...	13	36
Gear lever positions ...	2	10
Head lamp ...	33	71
Hub bearing details, front ...	21	55
" " " rear ...	22	57
Hubs ...	20	55
Lubrication chart ...	6	20
Magneto, exploded view ...	29	65
Oil tank ...	4	15
Oil pumps ...	3	14
Rear Brake Anchorage ...	27	61
Rocker adjustment ...	7	23
Spark plug ...	30	66
Spring frame ...	18	50
Tank fixing details ...	8	24
Teledraulic leg, rear ...	19	51
Tools ...	36	82
Valve timing gear ...	10	30
Wire connector, snap type ...	34	72
Wiring diagram ...	35	73


MATCHLESS

"SUPER CLUBMAN"

VERTICAL TWINS

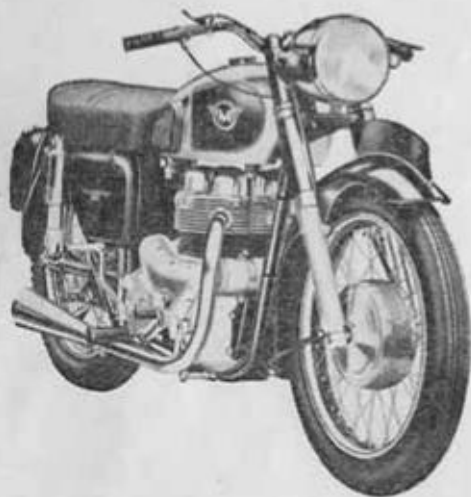

Model G9 498 c.c.

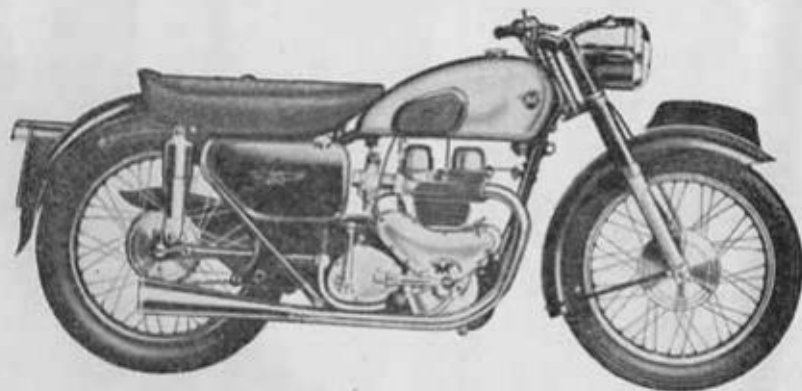

Model G11 592 c.c.

THE MODERN MOTOR CYCLE unquestionably provides on the most healthy, economical and pleasant means of transport. In addition by reason of its superb braking, high power to weight ratio and ease of control it is, if used with due care, one of the safest vehicles on the road.

It is our sincere desire that every owner should obtain from his mount the service, comfort and innumerable miles of low cost travel that we have earnestly endeavoured to build into it.

It must be borne in mind however, that although of simple design and construction, it is nevertheless a highly specialised piece of engineering and must in consequence be intelligently and efficiently maintained in order to provide unfailing reliability.

In this book we provide non-technical instructions for carrying out all the maintenance operations likely to be called for in normal service, together with assisting illustrations.

To owners of long experience we tender apologies for the elementary nature of some of the contents of this handbook, but owners whether novice or expert are advised to read the contents from beginning to end. We are at all times pleased to give owners the full benefit of our wide experience in matters relating to motor cycles of our manufacture and elsewhere will be found details of the particulars required when making enquiries of our Service Department.

Safety on the Road

IN the interest of Safety on the Road a few words of warning will not be out of place.

The outstanding manoeuvrability of a motor cycle over all other vehicles on the road makes it necessary to exercise caution at all times.

There are unfortunately a few motor-cyclists whose reckless driving constitutes a menace not only to themselves but also to other road users resulting in the totally false impression in some quarters that motorcycling is a dangerous pastime.

Take a pride in your riding technique and never rely upon the other fellow doing the right thing.

Your example of careful, courteous and unobtrusive riding will materially contribute to road safety and to the reputation of a fine sporting pastime.

CONTROLS

Refer to Illustration 1

- (1) **Throttle twist grip.** On right handlebar. Twist inwards to open. When fully closed engine should just idle when hot.
- (2) **Air lever.** Small lever on right handlebar. Pull inwards to increase air supply to carburettor. Once set, when engine has warmed up, requires no alteration for different road speeds. Should be fully closed when starting engine from cold.
- (3) **Ignition lever.** Small lever on left handlebar. Advances and retards ignition point. Pull inwards to retard. Retard two-fifths of total movement for starting.
- (4) **Magneto cut-out switch.** Push switch on magneto contact breaker cover. A press action switch which, when operated, short circuits the magneto, thereby stopping the engine from firing. Place gear foot lever in neutral position before using cut-out switch to stop engine.
- (5) **Clutch lever.** Large lever on left handlebar. Grip to release clutch so that drive to rear wheel is disconnected.
- (6) **Front brake lever.** Large lever on right handlebar. Grip to operate front wheel brake and, for normal braking, use in conjunction with rear brake application.
- (7) **Rear brake lever.** Pedal close to left side foot rest. Depress with left foot to apply rear brake. Apply gently and use increasing pressure as the road speed decreases.
- (8) **Gear change lever.** Pedal in horizontal position close to right foot rest. Controls selection of the four speeds, or ratios, between engine and rear wheel revolutions, with a "free," or neutral, position. See illustration 2, page 10.
- (9) **Kick-starter lever.** Vertical pedal on right hand side of gear box.
- (10) **Lighting switch.** In top of head lamp. Controls lamps by a rotating lever which has three positions :
 - (1) "OFF" Lamps not on.
 - (2) "L" Pilot lamps, rear lamp and speedometer lamp on.
 - (3) "H" Main headlamp, rear lamp and speedometer lamp on.
- (11) **Ammeter.** In top of head lamp. Indicates flow of electric current, in, or out, of battery. ("Charge" or "Discharge.") 1 division = approx. 2 amps.
- (12) **Horn switch.** Press switch on left handlebar.
- (13) **Gear box filler cap.** Located on top edge of kick-starter case cover. Allows insertion of lubricant and access to clutch inner wire and internal clutch operating lever.
- (14) **Footrest for rider.**
- (15) **Petrol tank filler cap.** Located in top of fuel tank. To release, slightly depress, turn fully to the left, and then lift away. There are two locking positions. The middle position, between the fully tightened down and "lift away" positions, is in the nature of a "safety" device to prevent loss that might be occasioned by unauthorised meddling.
- (16) **Oil tank filler cap.** Located on top edge of oil tank. To remove, unscrew.
- (17) **Dipping switch.** Trigger switch on left handlebar. Used to select normal or "dipped" beam of head lamp when main lighting switch lever is in the "H" position. (The main head lamp bulb has two filaments.)
- (18) **Dummy grip.** The fixed grip on the left handlebar.
- (19) **Speedometer hand.** The rotating hand in speedometer head. Indicates speed in miles per hour to a maximum of 120 miles per hour. (Certain machines for export have the head calibrated in kilometers per hour to a maximum of 180 k.p.h.)

- (20) **Total mileage recorder.** The top set of figures located in the speedometer dial. Indicates the number of miles (or kilometres) travelled to a total of 100,000 and then automatically re-sets to zero.
- (21) **Trip mileage recorder.** The bottom set of figures located in the speedometer dial. Indicates the number of miles (or kilometres) travelled since the recorder was set to zero. Can be re-set at any time. Used to measure the length of individual trips. The red figures indicate tenths of a mile. Unless re-set, indicates a total of 1,000 miles and then automatically re-sets to zero.
- (22) **Re-set knob.** Protrudes from lower part of speedometer head. Pull and turn to right till "000-0" appears to re-set the trip mileage recorder.
- (23) **Gear indicator.** Disc on gear box with periphery marked 1,N,2,3,4. Moves under the control of the gear change lever and the number registering with a line on gear box indicates gear in engagement (or neutral).
- (24) **Pillion foot rest.** Fold upwards to a vertical position when not in use.
- (25) **Fork top bolt.** One at top of each fork main inner tube. Must be raised to allow insertion of hydraulic fluid.

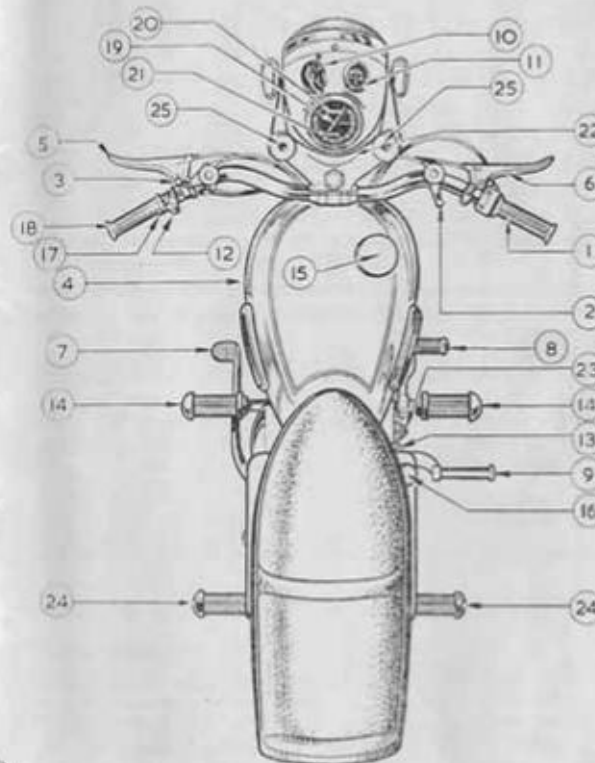


Illustration 1
Controls

- 1 THROTTLE TWIST GRIP
- 2 AIR CONTROL
- 3 IGNITION CONTROL
- 4 MAGNETO CUT OUT
(on magneto contact-breaker)
cover)
- 5 CLUTCH LEVER
- 6 FRONT BRAKE LEVER
- 7 REAR BRAKE PEDAL
- 8 GEAR CHANGE LEVER
- 9 KICK-STARTER PEDAL
- 10 LAMP CONTROL SWITCH
- 11 AMMETER
- 12 HORN BUTTON
- 13 GEAR BOX FILLER CAP
- 14 RIDER'S FOOTREST
- 15 PETROL TANK FILLER CAP
- 16 OIL TANK FILLER CAP
- 17 HEADLAMP DIP SWITCH
- 18 DUMMY GRIP
- 19 SPEEDOMETER, MILES PER
HOUR DIAL
- 20 SPEEDOMETER, TOTAL
MILEAGE
- 21 SPEEDOMETER, TRIP
MILEAGE
- 22 SPEEDOMETER, TRIP
RECORDER RESET KNOB
- 23 GEAR POSITION
INDICATOR
- 24 PILLION FOOTRESTS
- 25 FORK TOP BOLT
(Remove to add oil)

Before using the machine, sit on the saddle and become familiar with the position and operation of the various controls. Pay particular attention to the gear positions.

If any adjustment is made to the rear brake pedal make certain the brake does not bind and also see there is not excessive free pedal movement before the brake comes "on."

DRIVING

FUEL

Although various quality fuels are again available, owners are advised to use only the best. The small economy that might be considered to accrue by using the cheaper grades is more than offset by the advantages obtained by using only Number One Grades.

FUEL SUPPLY

Two fuel feed taps are situated underneath the rear end of the petrol tank. (One each side). Both must be shut off when the machine is left standing for more than a few minutes.

The tap plungers work horizontally. To open, pull plunger out, push in fully to close.

Normally, only use the tap on the right hand side of the machine and then the other side will act as a reserve supply. Always re-fuel as soon as possible after being forced to call upon the reserve (approx. $\frac{1}{2}$ gallon) and then, at once, close the "reserve" tap. It will be noted that, by fitting two petrol feed taps, it is possible to remove the petrol tank from the machine without the necessity of first draining it of fuel.

STARTING THE ENGINE FROM COLD

- Check that there is sufficient fuel in the petrol tank.
- Check that there is sufficient oil in the oil tank.
- Check that the gear pedal is in the neutral position.
- Pull outward the plunger of the off side petrol tap.
- Check that the air control lever is in the fully closed position.
- Fully advance the ignition and then pull inwards the control lever two-fifths of its total movement.
- Open the throttle not more than one-sixth of the total movement of the twist grip.
- Depress the plunger on the top of the carburettor float chamber until it can be felt the chamber is full of petrol.
- Operate the kick-starter by giving it a long swinging kick and the engine should immediately fire.

The kick-starter mechanism must be allowed to engage properly before putting heavy pressure on the kick-starter crank pedal pin. That means there are two definite and separate movements when operating the mechanism by depressing the crank.

The first is a slow and gentle movement which ends when it is felt the quadrant has engaged with the teeth on the ratchet pinion.

The first slow and gentle movement is essential to avoid damage to the teeth of the kick-starter quadrant.

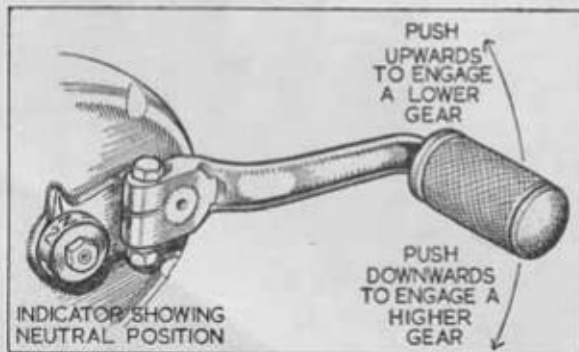


Illustration 2

The gear indicator drum which upon assembly is set to record the various gears and neutral position, as the respective figure or letter N registers with index mark on the gearbox shell.

Upon re-assembly, after dismantling for any purpose, the index disc should be correctly re-set for future reference.

After the engine has started, slowly open the air lever until it runs evenly. Then set the throttle so that the engine is running at a moderate speed (neither racing nor ticking over) and allow to warm up. While doing this, check the oil circulation as detailed in page 15. The machine can then be taken on the road.

NOTE—Do not race up the engine from cold and do not flood the carburettor to such an extent that petrol is dripping, because then, in the event of a backfire, there is a danger of such loose petrol igniting. This cannot possibly happen if the starting instructions are carefully followed, but, in the event of a fire, there is no cause for panic. Merely turn off the petrol tap to isolate the main supply, open wide the throttle and turn over the engine by operating the kick-starter pedal when suction will extinguish the fire.

STOPPING THE ENGINE

To stop the engine, close the throttle, depress the magneto cut-out press switch on the contact breaker cover and keep it depressed until the engine has ceased to revolve.

ON THE ROAD

Having started and warmed up the engine, take the machine off the stand, sit astride it, free the clutch by pulling up the large lever on the left bar and engage lowest gear. Next, slowly release the clutch lever and the machine will commence to move forward. As it does this, the engine speed will tend to drop as it picks up the load so it will be necessary to increase the throttle opening, gradually, to keep the engine speed gently rising.

When well under way, disengage the clutch, slightly close the throttle, engage second gear and release the clutch lever, then open up the throttle to increase the speed of the machine. Repeat these operations in order to engage third and top gears.

To engage a higher gear the pedal is pressed downward with the toe and a lower gear is obtained by raising the pedal with the instep. To engage first gear, from the neutral position, the pedal is therefore raised. After each pedal movement, internal springs return the pedal to its normal horizontal position.

The pedal must be moved to the full extent of its travel when selecting a gear, either up or down. It must not be "stamped down" or jabbed, but firmly and decisively moved till it stops. A half-hearted movement may not give full engagement. Keep the foot off the pedal when driving and between each gear change because, unless the lever can freely return to its normal central position, the next gear cannot be engaged. Finally, fully advance the ignition and leave it in that position unless it is necessary to retard in order to ease the engine and so prevent "pinking" when pulling hard on a gradient.

STOPPING THE MACHINE

To stop the machine, close the throttle, declutch by lifting the large lever on the left handlebar, and gently apply both brakes, increasing the pressure on them as the road speed of the machine decreases. Place the gear change foot pedal in the neutral position and stop the engine.

Before leaving the machine, turn off the fuel supply.

Important

Never drive away at high speed when starting a run with a cold engine. Give the oil a chance to warm up and thin out, particularly when the engine is cold. Until the oil reaches its normal running temperature the circulation is restricted. Seizures can be avoided by taking this simple essential precaution.

RUNNING IN

Although it is customary to quote permitted maximum speeds on the various gears during the period of running in, these are really no guide to overdriving, the only essential thing to avoid being the use of large throttle opening.

If the precaution is taken of limiting the use of the throttle to about one third of its opening during the first 1,000 miles, irrespective of the road speed, and whether on the level or climbing, the necessary conditions for running in will have been observed.

Special attention must be given, during the running in period, to such details as valve rocker adjustment, chains, brakes, contact breaker points, and steering head bearings, all of which tend to bed down in the first hundred miles or so. Particular note must be made of the adjustment of steering head bearings, which, if run in a slack condition, will be quickly ruined. After this bedding down process has taken place, adjustments to such details will only be necessary at lengthy intervals.

After about 1,000 miles has been covered larger throttle openings may be gradually indulged in for short bursts only.

Until at least 2,000 miles have been covered the owner of a new machine is strongly advised to curb his natural desire to learn the mount's maximum capabilities. Restraint in this direction will be amply repaid later.

NOTES ON DRIVING

If, at first, the lowest gear will not engage, release the clutch lever and after a second or two, make another attempt. This condition may exist in a new machine, but it tends to disappear after a little use.

Always endeavour to make the movements of hand (on the clutch) and foot (on the gear pedal) as simultaneous as possible, and remember, in all gear changes, a steady pressure of the foot is desirable. This pressure should be maintained until the clutch is fully released. It is not sufficient just to jab the foot pedal and then release the clutch lever. When actually in motion, it will be found sufficient to merely free the clutch a trifle, to ease the drive when changing gear and, with reasonable care, changes of gear then can be made without a sound.

Do not unnecessarily race the engine or let in the clutch sufficiently suddenly to cause the rear wheel to spin. Take a pride in making a smooth silent get-away.

When changing up to a higher gear, as the clutch is freed, the throttle should be slightly closed so that the engine speed is reduced to keep in step with the higher gear ratio. Conversely, when changing down to a lower gear, the throttle should be regulated so that the engine speed is increased to keep in step with the lower gear ratio.

Do not slip the clutch to control the road speed.

The clutch is intended to be used only when starting from a standstill and when changing gear. It must **NOT** be operated to ease the engine, instead of changing gear, or be held out, in order to "free-wheel."

When travelling slowly, such as may occur in traffic or on a hill, and the engine commences to labour, it is then necessary to change to a lower gear. Engine "knocking" or "pinking" and a harshness in the transmission are symptoms of such labour and although relief can sometimes be found by retarding the ignition, it is generally much better to change down. A good driver is able to sense such conditions and will make the change before the engine has reached the stage of distress. The gear box is provided to be used and consequently full use should be made of the intermediate gears to obtain effortless running and smooth hill climbing.

Keep the feet clear of the brake and gear pedals when not actually using them and keep the hand off the clutch lever when not in use.

Drive as much as possible on the throttle, making the minimum use of the brakes.

When using the machine on wet or greasy roads, it is generally better to apply **BOTH** brakes together, because sudden or harsh application of either brake only, under such conditions, may result in a skid.

In all conditions, it is advisable to make a habit of always using both brakes together rather than habitually using the rear brake and reserving the front brake for emergency.

LUBRICATION

LUBRICANTS TO USE

Efficient lubrication is of vital importance and it is false economy to use cheap oils and greases.

We recommend the following lubricants to use in machines of our make.

FOR ENGINE LUBRICATION

HOT above 50° F	COLD 32° F to 50° F	EXTREME COLD below freezing point (32° F)
SAE 50	SAE 30	SAE 20
Mobiloil D Castrol Grand Prix Energol SAE 50 Essolube 50 Shell X-100 Motor Oil 50	Mobiloil A Castrol XL Energol SAE 30 Essolube 30 Shell X-100 Motor Oil 30	Mobiloil Arctic Castrolite Energol SAE 20 Essolube 20 Shell X-100 Motor Oil 20/20W

NOTE—For the British Isles and much of Europe the **Cold** and **Hot** recommendations approximate to **Winter** and **Summer** conditions respectively. The **Extreme Cold** recommendations refer to wintry conditions in parts of Northern Europe, Canada, the Baltic and Scandinavian countries, and high mountainous districts where extreme cold is the average condition.

FOR GEAR BOX LUBRICATION

HOT above 50° F	COLD 32° F to 50° F	EXTREME COLD below freezing point (32° F)
SAE 50	SAE 50	SAE 20
Mobiloil D Castrol Grand Prix Energol SAE 50 Essolube 50 Shell X-100 Motor Oil 50	Mobiloil D Castrol Grand Prix Energol SAE 50 Essolube 50 Shell X-100 Motor Oil 50	Mobiloil A Castrol XL Energol SAE 30 Essolube 30 Shell X-100 Motor Oil 30

NOTE—For the British Isles and much of Europe the **Cold** and **Hot** recommendations approximate to **Winter** and **Summer** conditions respectively. The **Extreme Cold** recommendations refer to wintry conditions in parts of Northern Europe, Canada, the Baltic and Scandinavian countries, and high mountainous districts where extreme cold is the average condition.

FOR HUB LUBRICATION AND ALL FRAME PARTS USING GREASE

Mobilgrease No. 4 Castrolase Heavy Energlease C3
Esso Pressure Gun Grease Shell Retinax A. or C.D.

FOR TELEDRAULIC FRONT FORKS AND TELEDRAULIC REAR LEGS

Mobiloil Arctic (SAE-20) Castrolite (SAE-20) Energol SAE 20
Essolube 20 (SAE-20) Shell X-100 Motor Oil 20/20W (SAE-20)

FOR REAR CHAINS

Mobilgrease No. 2 Esso Fluid Grease Energlease A.O.
Castrolase Grease Graphited
Heated Until Just Fluid

See Application Instructions, page 19.

When buying oils and greases it is advisable to specify the **Brand** as well as the grade and, as an additional precaution, to buy only in sealed containers or from branded cabinets.

ENGINE LUBRICATION SYSTEM

This is of the dry sump type. Two separate gear type oil pumps are used, one for delivery and the other for returning oil to the tank. Oil feeds by gravity to the delivery pump, by which it is forced, under pressure, to various parts of the engine, from whence it drains back to the crankcase sump to be collected by the return pump and returned to the tank. The return pump has a much larger capacity than the delivery pump to ensure that the crankcase is kept clear of excess oil.

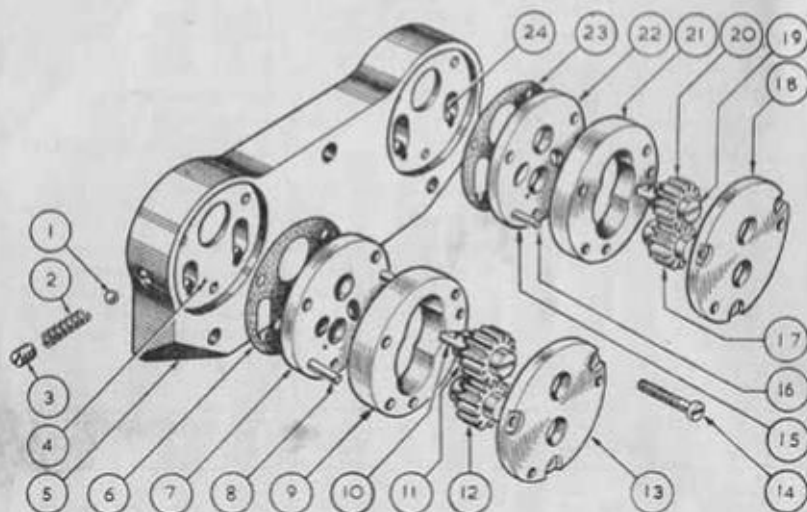


Illustration 3

Delivery Oil Pump (on the right)

Return Oil Pump (on the left)

- 1 BALL, FOR NON-RETURN VALVE.
- 2 SPRING, FOR NON-RETURN VALVE.
- 3 PLUG, RETAINING NON-RETURN VALVE SPRING AND BALL.
- 4 BLEED HOLE.
- 5 PLATE, CARRYING OIL FEED AND RETURN PUMPS.
- 6 PAPER WASHER FOR OIL RETURN PUMP.
- 7 BACK PLATE OF OIL RETURN PUMP.
- 8 DOWEL PIN, LOCATING PUMP PLATES AND BODY.
- 9 BODY OF OIL RETURN PUMP.
- 10 DOG END OF PUMP GEAR TO ENGAGE IN END OF CAMSHAFT.
- 11 DRIVING GEAR, FOR OIL RETURN PUMP.
- 12 DRIVEN GEAR, FOR OIL RETURN PUMP.

- 13 FRONT PLATE OF OIL RETURN PUMP.
- 14 SCREW (1 OF 6) USED TO RETAIN PLATES AND BODIES OF OIL PUMPS TO THE CARRYING PLATE.
- 15 BACK PLATE OF OIL FEED PUMP.
- 16 DOWEL PIN, LOCATING PUMP PLATES AND BODY.
- 17 DRIVEN GEAR, FOR OIL FEED PUMP.
- 18 FRONT PLATE OF OIL FEED PUMP.
- 19 SCREWDRIVER SLOT, TO ENABLE DRIVING GEAR TO BE CORRECTLY POSITIONED DURING ASSEMBLY.
- 20 DRIVING GEAR, FOR OIL FEED PUMP.
- 21 BODY OF OIL FEED PUMP.
- 22 BACK PLATE OF OIL FEED PUMP.
- 23 PAPER WASHER FOR OIL FEED PUMP.
- 24 BLEED HOLE.

ENGINE OIL PUMPS

Each pump is independently driven, at half engine speed, from the ends of the two camshafts. They each consist of a pair of close fitting gear wheels in a cast iron body. The gears of the delivery pump are considerably narrower than those of the return pump, giving the latter the necessary extra capacity to ensure efficient scavenging.

CHECKING OIL CIRCULATION

Provision is made to observe the oil in circulation and it is advisable to do this before each run.

If the filler cap on the oil tank is removed the end of the oil return pipe will be noticed below the level of the filler cap orifice and the returning oil can be seen running from it. This check should be made immediately after starting the engine from cold. This is because while the engine is stationary, oil from all parts of the interior of the engine drains back into the crankcase sump, so that, until this surplus is cleared, the return flow is very positive and continuous. Therefore, if the oil circulation is deranged, the fact is apparent at once by the lack of a steady return flow.

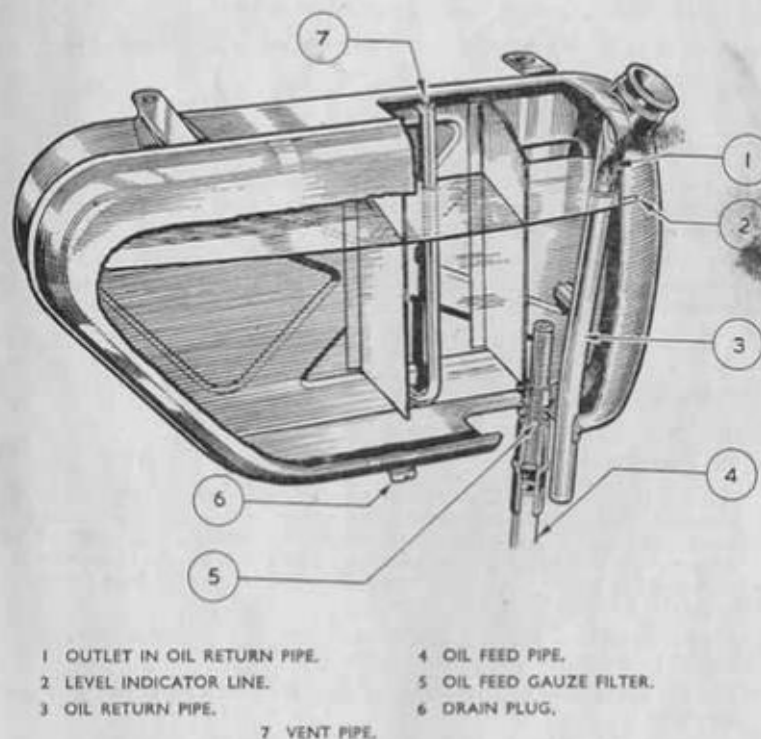


Illustration 4

Interior view of the oil tank showing the metal strainer mounted on the entry end of the feed pipe union, the return flow pipe from the engine to tank via the small spout, located so that it can be inspected by removing the tank filler cap, and air vent pipe, provided to ensure freedom from air-locks.

ENGINE OIL CIRCULATION

Oil, from the oil tank, is fed by gravity, through a coarse mesh metal filter, via an external pipe, to the suction side of the delivery pump, from whence it is discharged, under pressure, to a large and easily detachable felt filter that is housed in the crankcase.

After passing through the felt filter the main supply is directed to the crankshaft centre bearing and thence, through passages in the crankshaft, to each big-end, the splash from which provides adequate cylinder lubrication.

A metered by-pass provides an oil supply to the overhead rockers and push rod ball ends which then drains into the camshaft tunnels where upon reaching a pre-determined level the surplus overflows into the timing gear case. The four drilled oilways in the cylinder heads are also intentionally metered.

A predetermined level of oil is allowed to build up in the timing case to ensure adequate lubrication of the gears, and also in the camshaft tunnels, to ensure adequate lubrication of the cams and cam levers. Upon reaching these determined levels, the surplus overflows into the crankcase, and so to the sump.

The return pump collects all surplus oil from the crankcase sump and returns it, via another external pipe, to the oil tank. (See illustration 4.)

The stream of oil flowing into the tank is instantly visible upon removal of the tank filler cap.

THE OIL TANK

The level of oil in the supply tank should never be allowed to fall below the low level mark and, upon replenishment, should not be higher than the upper mark line, at which level the oil content is $4\frac{1}{2}$ pints.

After the first 500 miles, again at 1,000 miles, and subsequently at 5,000 mile intervals, it is recommended that the oil tank is drained, the oil filter cleaned in petrol and the tank replenished with new oil.

THE OIL FILTERS

There are three filters for the oil.

- (A) The metal filter located in the feed pipe in the bottom of the oil tank.

This is a thimble shaped filter of coarse metal mesh inserted, from the exterior, in the short metal feed pipe located in the bottom of the oil tank. It has an open end finished with a turned over metal ring, which, upon the fitting of the tubular rubber sleeve connecting the oil feed pipe to the end of the rigid feed pipe to the engine, is gripped by the rubber sleeve, thereby preventing it from moving from its correct location.

- (B) The felt fabric filter located in a chamber in the front part of the crankcase and parallel to the exhaust camshaft.

This is a cylindrical filter made of close grain felt that is supported by a tubular wire cage.

On the inner end is fitted a steel cup which effectively seals that end of the cylindrical filter. This cup is a push on fit.

In the outer end is inserted an aluminium plug, or valve, which acts as a relief valve, allowing the oil to escape if, for any reason, it cannot percolate through the felt fabric. In normal conditions this valve does not operate but, if for example, the cleaning of the filter had been neglected to such an extent that it was so clogged the oil could not pass through it in the volume supplied by the pump, then the valve would lift to give immediate temporary, or permanent, relief, as may be necessary.

- (C) The magnetic filter in the crankcase oil sump.

CLEANING OIL FILTERS

To remove and clean the feed pipe metal filter :

Drain Tank.

Release the engine end of the oil feed pipe. (This leads from the rear outlet in the base of the oil tank to the forward banjo connection on the timing side of the crankcase.) Then remove the oil feed pipe by withdrawing the rubber connecting sleeve from the metal feed pipe protruding from the bottom of the oil tank.

The metal filter may come away with the rubber sleeve, in which case there is no need to disturb it. On the other hand it may remain in the oil tank bottom pipe, in which case it may be withdrawn by grasping the ringed open end and pulling away.

After removal the filter should be cleaned in petrol and allowed to dry before re-fitting.

Reverse the above procedure to re-fit the filter and pipes.

- 1 NON-RETURN VALVE ASSEMBLY ORDER.
- 2 BALL AND SCREWED PLUG 013332.
- 3 NON-RETURN VALVE COMPLETE 016179.

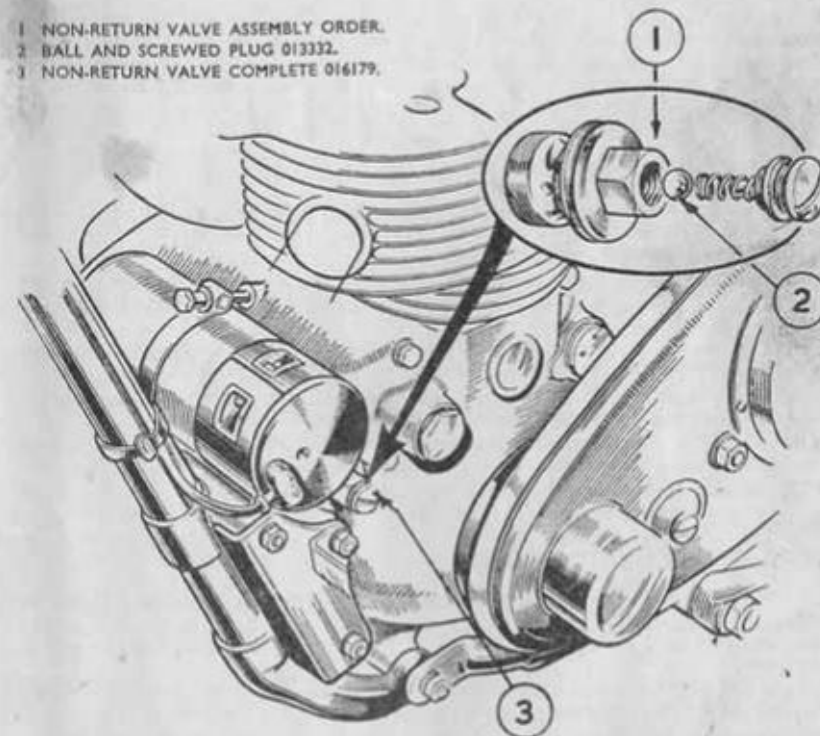


Illustration 5

Location and exploded view of oil non-return valve.
Remove the valve complete to gain access to oil filter.

Body 016179 screws into the housing for the oil felt filter. This body contains the oil non-return ball valve, and the complete assembly, as shown in the small inset picture, must be removed to obtain access to the oil felt filter. The screwed plug 013332 must be removed in order to apply the oil pressure gauge mentioned on page 18.

To remove and clean the felt crankcase filter :

Unscrew and remove the non return valve complete (016179) (See illustration 5). Withdraw the spring which removal of the non return valve will expose also withdraw the aluminium cap into which this spring is recessed.

This will expose the felt fabric filter which can be withdrawn by inserting a finger in the open end. In the other end of the filter is a steel cup which should be pulled away from the filter.

The filter should be cleaned in petrol and allowed to dry before re-insertion.

The housing tunnel for the filter should also be thoroughly cleaned out with a fluff-free rag moistened in petrol.

Reverse the above procedure to re-fit the felt filter and, when doing so, do not forget to replace the steel cup on the open end of the filter before inserting it in its housing tunnel.

To remove the magnetic filter located in the crankcase :

Incorporated with the crankcase drain plug is a powerful magnetic filter. To remove the filter merely unscrew the plug.

As the metal particles will adhere very strongly to the magnet they must be forcibly removed by wiping the magnet with a greased rag. The grease will help to retain the metal particles on the rag. Keep the magnet away from iron filings, etc., that may litter the bench, and do not bring the magnet into contact with large pieces of iron and steel, such as a bench vice, for this will impair the efficiency of the magnet and consequently its action as a filter.

OIL PRESSURE GAUGE (Workshop service only)

Upon the removal of screwed plug 013332 (see illustration 5) a suitable oil pressure gauge can be applied to enable a check to be made of oil pump efficiency and operation, subsequent to an overhaul or dismantling.

The pressure gauge should be graduated in pounds and must have a shank threaded .518 inch by 19 T.P.I. ($\frac{1}{2}$ B.S.P.). We can supply a suitable gauge, graduated to 250 lbs. The Part Number is B4108.

The gauge should be screwed into the valve body 016179, and the pressure checked when the engine is hot, that is, has reached its normal running temperature.

When the oil is warm and thin, the recorded pressure at idling speed should be between 20 to 40 lbs., rising somewhat when the engine revolutions are increased.

As indicated, the important check is at idling speed, and, if the mentioned pressures are obtained, the oil delivery pump is operating as intended.

NOTE—Beware loss of non return valve spring and ball which flow of oil may dislodge upon removal of screwed plug 013332.

GEAR BOX LUBRICATION

Use one of the grades of Oils specified. In no circumstances must heavy grease be used.

Lubricant is inserted through the filler cap orifice mounted on top edge of kick-starter case cover.

The gearbox must not be entirely filled with oil. An excess will cause leakage. Check the level every 1,000 miles and top-up if necessary.

A screwed drain plug in gear box shell, low down at rear, facilitates gear box flushing and change of lubricant.

An oil level plug, adjacent to K.S spindle, indicates maximum permissible oil level (content 1 pint).

CHAIN LUBRICATION

Front driving chain runs in an oil bath. (Front chaincase). Use engine oil. Maintain level to height of the inspection cap opening.

Oil in front chaincase also lubricates the engine shock absorber. Transmission harshness generally indicates level of oil in chaincase is too low.

Remove chaincase inspection cap each week, inspect level of oil, top up as necessary.

To remove inspection cap :

Unscrew knurled screw about four turns.

Slide cap sideways till the back plate can be slipped through the opening, and take away the complete cap assembly.

When replacing inspection cap, centralise cork washer and then fully tighten knurled screw. Essential this is kept tight otherwise cap assembly will be lost.

Rear driving chain should be removed occasionally for lubrication particularly under Winter conditions.

Clean chain in paraffin, allow to drain and wipe. Then immerse in one of the greases recommended, heated to just fluid state. Leave in soak for at least ten minutes while maintaining grease fluidity. Then hang to drain off surplus and replace.

Engine oil is a poor substitute for one of the recommended greases and if used the chain should be allowed to soak for several hours to ensure penetration to all joints, hanging to drain off surplus before refitting.

See chain removal and refitting instructions Page 43.

HUB LUBRICATION

Keep hubs packed with grease. This prevents entry of water and dirt. Grease nipple accessible through hole in side hub disc. Inject small quantity of grease. Excessive grease may impair efficiency of brakes.

BRAKE DRUM BEARING

The independent ball bearing upon which the rear brake drum is mounted, is packed with grease upon assembly and requires no further attention for a considerable time.

During a general overhaul however it is recommended that the bearing is dismantled and re-packed with fresh hub grease.

BRAKE EXPANDER LUBRICATION

Grease nipple on each brake expander bush. (One on each brake cover plate). Use grease sparingly. Excessive grease may impair efficiency of brakes.

BRAKE ROD JOINT LUBRICATION

A few drops of engine oil on each brake rod yoke end pin and on the threaded portion of brake rod. (One pin on yoke each end of brake rod and on bottom of foot brake cable).

BRAKE PEDAL LUBRICATION

Grease nipple in heel of foot brake pedal.

SPEEDOMETER LUBRICATION

One grease nipple on top of speedometer gear box attached to right side of rear wheel spindle. (No other part of the speedometer requires lubrication).

STEERING HEAD BEARING LUBRICATION

One grease nipple on Front Frame Head Lug and another on right hand side of Handlebar Lug.

CONTROL CABLE LUBRICATION

To ensure free smooth action the clutch and throttle cables are fitted with a conveniently situated grease nipple. Use engine oil and hold the grease gun as near vertical as possible (spout downward) to obtain efficient ejection of oil, the gun being primarily intended for grease. Lubricate at the first sign of stiff or jerky action.

CONTROL LEVER LUBRICATION

Occasionally a drop of engine oil on all moving parts of the handlebar control levers. If twist grip is too stiff : remove two screws binding the two halves of the clip. This releases the grip which may be pulled off the handlebar. Smear handlebar, the drum on which the inner wire is wound and the friction spring on the half clip with grease and replace.

REAR FORK HINGE

Heavy Gear Oil. (See pages 20 and 50.) SAE-140.

LUBRICATION CHART

The figures in diamond frames refer to parts located on the left hand side of the machine and those in circles refer to parts located on the right hand side.

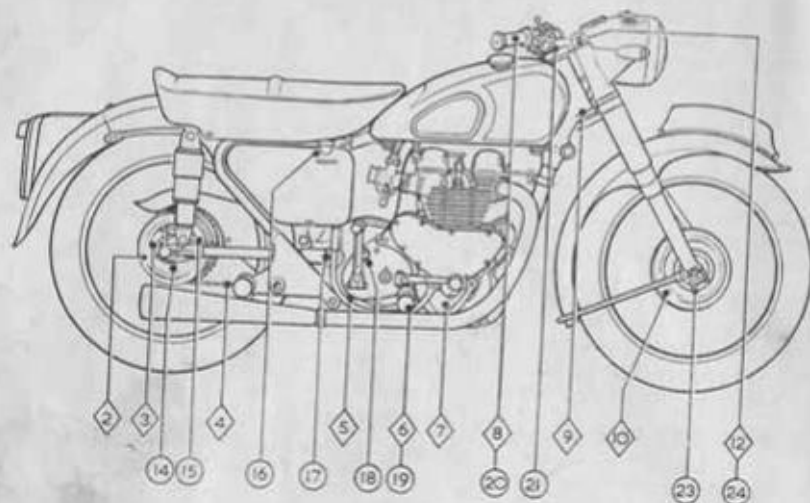


Illustration 6

Lubrication Chart

Engine Oil Locations

- 16 MAIN OIL TANK.
- 7 FRONT CHAINCASE.
- 8 } CONTROL LEVER MOVING PARTS.
- 20 }
- 2 BRAKE ROD JOINTS.
- 6 } CENTRE AND PROP STAND HINGE PINS
- 19 }

Hydraulic Fluid Locations

- 12 } FRONT TELEHYDRAULIC FORKS.
- 24 }

Heavy Engine Oil Location

- 18 GEAR BOX.

Grease Locations

- 23 FRONT HUB.
- 14 REAR HUB.
- 21 STEERING HEAD TOP BEARING.
- 9 STEERING HEAD BOTTOM BEARING.
- 15 SPEEDOMETER GEAR BOX.
- 10 FRONT BRAKE EXPANDER.
- 3 REAR BRAKE EXPANDER.
- 5 BRAKE PEDAL SPINDLE.

Heavy Gear Oil Location SAE-140

- 17 REAR FORK HINGE.

Molten Grease Location

- 4 REAR CHAIN.

When buying oils and greases it is advisable to specify the **Brand** as well as the grade and, as an additional precaution, to only buy in sealed containers or from branded cabinets.

MAINTENANCE

PERIODICAL MAINTENANCE

Regular maintenance attention to lubrication and certain adjustments must be made to ensure unfailing reliability and satisfactory service. This necessary attention is detailed below and owners are strongly recommended to carefully follow these suggestions and to make a regular practice of doing so from the first.

The reference numbers, in brackets, refer to the locations specified on the Lubrication Chart, illustration 6, page 20.

DAILY

- Oil tank** Inspect oil level (16) and top-up to top line level if necessary. Check oil circulation.
- Petrol tank** Check level and re-fill if necessary.

WEEKLY

- Oil tank** Check level and re-fill to top line level if necessary. (16).
- Tyres** Check pressures and inflate if necessary.

EVERY 500 MILES

- Oil tank** Drain at first 500 miles and re-fill to top line level with new oil, and clean filter. (16).
- Gear Box** Drain at first 500 miles and refill (18) 1 pint.
- Chaincase** Check level of oil when machine is standing vertically on level ground when level of oil should not be less than $\frac{1}{2}$ " below bottom edge of inspection orifice. (7). Fill up to orifice if level is low.
- Battery** Inspect each cell for level of electrolyte and top up with distilled water if necessary. (See pages 69 and 70). Level of electrolyte should just be over top of plates. Beware of overfilling.

EVERY 1,000 MILES

- Oil tank** Drain at first 1,000 miles and re-fill with new oil. (16).
- Rear chain** In wet weather remove and soak in molten grease. See page 13. (4)
- Gear box** Add 2 fluid ounces of specified oil. (18).
- Hubs** Inject small amount of grease. (14-23).
- Expanders** Inject small amount of grease. (3-10).
- Steering head** Inject small amount of grease. (9-21).
- Small parts** Smear all moving parts with engine oil and wipe off surplus. (2-6-8-19-20).

EVERY 2,000 to 5,000 MILES (according to road conditions.)

Air Filter (If fitted) clean and re-oil filter element.

EVERY 3,000 MILES

- Rear chain** In dry weather remove and soak in molten grease. (4).
- Brake pedal** Inject small amount of grease. (5).
- Speedometer** Inject small amount of grease into speedometer gear box. (15).
- Magneto** Clean contact breaker points and re-set if necessary.
- Plugs** Clean sparking plugs and re-set points as necessary. When refitting reverse respective positions.
- Steering head** Test steering head for up and down movement and adjust if necessary.
- Bolts and nuts** Check all nuts and bolts for tightness and tighten if necessary but beware of over-tightening.
- Rockers** Check O.H.V. rocker adjustment and correct if necessary.

EVERY 5,000 MILES

- Oil tank** Drain and re-fill with new oil. (16). If machine is only used for short runs renew oil every three months instead of mileage interval.
- Filters** Clean metal mesh filter in oil tank (Illustration 4), and felt fabric filter in crankcase.
- Magneto** Clean and adjust as detailed in Electrical section.
- Dynamo** Clean as detailed in Electrical section.
- Front fork** Check each side of front fork for hydraulic fluid content and, if necessary, top up. (12-24).
Insufficient oil content is indicated by abnormally lively action.
- Rear legs** Check each leg for hydraulic fluid content and, if necessary, top up.
Insufficient oil content is indicated by abnormally lively action.
(Dealers' Service only).
- Carburettor** Remove carburettor float chamber side cover and clean interior.
Also detach petrol pipe banjo and clean gauze strainer.

EVERY 10,000 MILES

- Magneto and Dynamo** Get a **Lucas Service Station** to dismantle, clean, lubricate and generally service.
- Air Filter** (If fitted) renew filter element.

ENGINE SERVICE

TO ADJUST OVERHEAD ROCKERS (Tappet clearance)

Using key bar 018055 remove screws securing a rocker cover. (It is desirable to deal only with one cover at a time).

Lift off the cover, exposing the rocker.

Using single ended spanner 015264, slightly slack off the nut of the bolt clamping the disc headed end of the rocker spindle. (See note below).

Then slowly revolve the engine, by means of the kick-starter pedal, till well past the position at which the valve closes and then proceed to revolve the rocker spindle until the correct clearance is obtained, whereupon, re-tighten the locking nut and replace the cover. (Inspect gasket under rocker cover and, if damaged, replace with new.)

The correct rocker clearance, with cold engine, is .006" for both inlet and exhaust.

It is best to ensure that each piston, in turn, is at the top of its firing stroke when adjusting rocker clearances. The method of obtaining that position is explained in the paragraph dealing with **Timing the Ignition**. This piston position is essential to ensure the cam levers are well clear of the cam quietening curves when adjusting rocker clearance.

It should, perhaps, be explained here that these quietening curves, as they are called, are actually slight inclines from the base circles of the cams to the foot of each hump and their object is to slowly take up the clearance between the cam levers and valve push rods as the valves open and close thus reducing noise.

NOTE—If the rocker spindle clamping bolt nut is unscrewed to an unnecessary extent the rocker spindle will then move sideways, under the influence of the spring washer, and then the thrust washer at the end of the rocker spindle may drop out of exact location and, unless noticed and re-positioned, damage to the flanged end of the rocker spindle may result upon re-tightening the clamping bolt nut. Care to avoid this is necessary. (See illustration 7.)

1. PLAIN WASHER-MENTIONED ABOVE.
2. SPRING WASHER.
3. PLAIN WASHER.
4. ROCKER.
5. CYLINDER HEAD.
6. ROCKER CLEARANCE .006
7. VALVE SPRING CAP.
8. CLAMPING BOLT NUT
9. CLAMPING BOLT WASHER
10. CLAMPING BOLT
11. CUTAWAY ON ROCKER SPINDLE
12. ECCENTRIC ROCKER SPINDLE

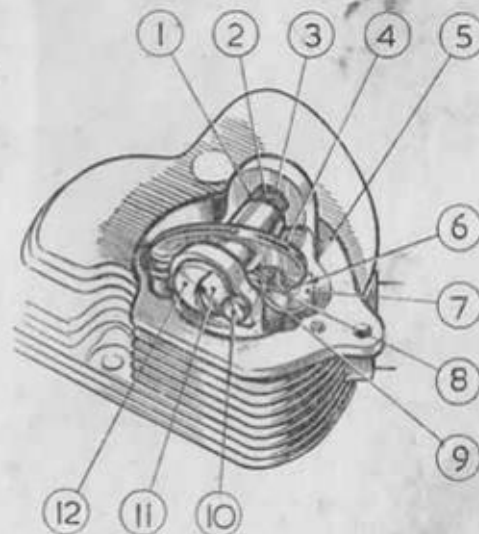


Illustration 7

Rocker Adjustment

ACCESS

For all service work to the upper part of the engine, other than adjustment of the rockers, it is necessary, in order to obtain accessibility, to first remove the petrol tank. The two petrol taps facilitate this operation by removing the need to drain the tank of petrol.

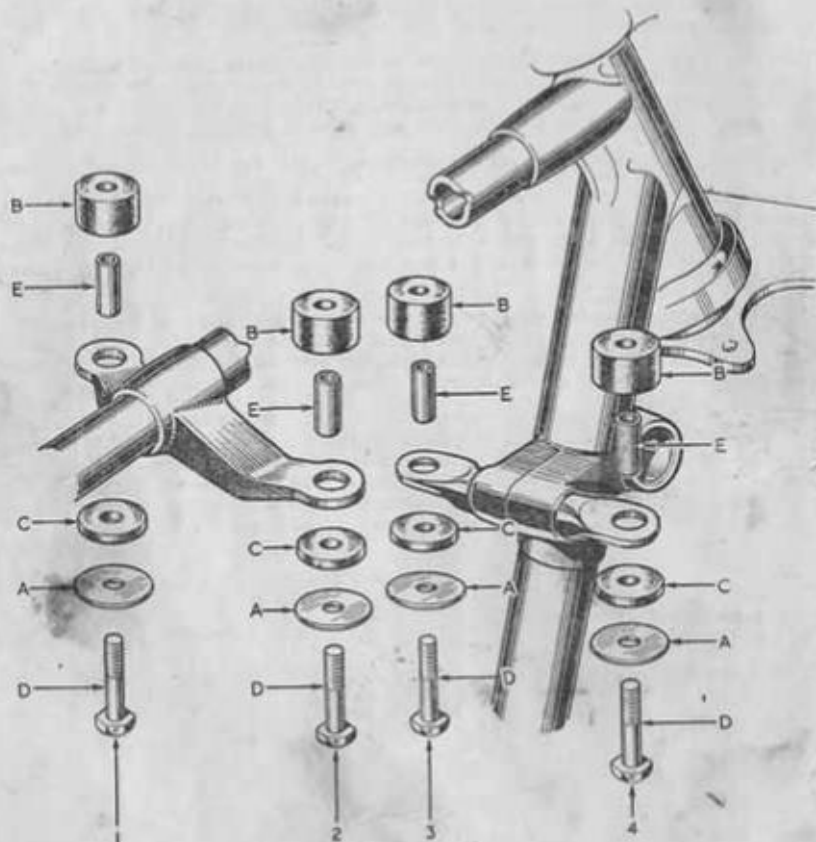


Illustration 8

Details and order of assembly, of the fuel tank fixing bolts and components

		Part Number	
A	METAL WASHER	014999	1 1/2" diameter.
B	THICK RUBBER PAD	014995	3/8" high.
C	THIN RUBBER PAD	014996	1/8" high.
D	TANK FIXING BOLT	014997	1 1/2" x 1/4" x 26.
E	SLEEVE FOR FIXING BOLT	014998	1 1/2" long.

TO REMOVE THE PETROL TANK

Remove the twin seat.

Close both petrol taps and remove the cap nut securing each petrol pipe banjo connector. Use two spanners, one to hold the tap and the other to unscrew the cap nut.

Beware losing the fibre washers (4 in all) fitted one each side of each banjo connection.

Cut the wires interlacing the four fixing bolts.

Unscrew the tank fixing bolts and the tank is then free to be taken away.

NOTE—The disposition of the various rubber and metal washers should be specially observed so that they may be correctly replaced.

TO REPLACE THE PETROL TANK

Proceed in reverse order to removal. Firmly screw home the four fixing bolts and interlace them, in pairs, with 22 gauge copper wire.

DECARBONISATION

Instead of the usual stipulated mileage interval between periods of decarbonisation it is recommended that this is undertaken only when the need for same becomes apparent because of excessive pinking, loss of power or generally reduced performance. When undertaken, unless it is thought necessary to inspect the pistons and rings, the cylinder barrels are best left undisturbed. The various stages in decarbonisation are described below.

TO REMOVE CYLINDER HEADS FOR DECARBONISATION

To ensure the various parts of each head are not intermixed it is recommended that only one head is removed at a time.

Remove the petrol tank, as already described.

Remove the rocker box covers, as already described.

Remove the sparking plugs.

Remove the exhaust pipes and silencers (no need to separate pipes and silencers) by taking away nuts and washers holding pipes to stays and silencers to rear frame, pulling silencer end of each assembly outwards far enough to allow fixing studs to disengage and then pulling each assembly forwards till disengaged from the cylinder head.

Remove air filter (if fitted).

Remove carburettor by taking away the two fixing bolts and withdrawing to the rear. Lay carburettor aside.

Remove inlet manifold by taking away the four fixing nuts and washers and withdrawing to the rear. Take care not to damage the gaskets between manifold and heads or rubber ring insert.

Remove cylinder head steady plate (secured by 3 bolts and nuts).

Remove heads by using box spanner 015213 to remove the four domed nuts that retain each head.

After removal invert each head to dislodge the spacers under the domed nuts and lay aside to await re-assembly.

The cylinder head gaskets will generally adhere to the tops of the barrels but care must be taken not to damage them.

TO REMOVE THE VALVES

Remove rockers.

Assuming that a valve spring compressor is not available :

Prepare a block of wood about 2" cube, lay same on a bench, place cylinder head over it so that the heads of both valves are supported on the block.

Apply pressure to each valve spring cap, in turn, to sufficiently compress the springs to permit the extraction of the split collet. The collets are a taper fit in the valve spring collar and it may be necessary to give the collar a sharp tap to release them. (A stout screwdriver is a handy tool with which to apply the pressure).

Lift away valve spring collar, springs and spring seat from each valve.

Lift head off the wood block and valves will drop out.

TO REMOVE VALVE GUIDES

Apply gentle heat to cylinder head and press upward guide to be removed just sufficiently to permit removal of external circlip. Then thoroughly clean protruding top end of guide re-heat and press downward to extract.

Re-heat when replacing.

REMOVING CARBON DEPOSIT

Do not use a sharp implement for removing carbon deposit from the interior of the aluminium cylinder head and the piston crown. A blunt piece of soft brass will be found quite suitable and the use of such will obviate the risk of making deep scratches. Care is necessary to avoid damaging the inserted valve seatings and in no circumstances should any abrasive material, such as emery cloth, be used for cleaning and polishing.

VALVE GRINDING

Before commencing valve grinding, carefully examine the face of each valve and, if any are found to be deeply pitted, have them refaced. (Most garages have suitable equipment for that purpose). Any attempt to remove deep pit marks by grinding will inevitably cause undue and undesirable widening of the seats.

As a rule, inlet valves require very little attention and one light application of fine grinding paste should be sufficient to restore an even matt finish to both valve face and seat. The exhaust valves may require two, or even three, applications but, as already mentioned, excessive grinding is both unnecessary and harmful.

The grinding is accomplished by smearing a thin layer of fine grinding paste (obtainable ready for use at any garage) on the valve face and then, after inserting the valve in the head, partially revolve, forwards and backwards, while applying light finger pressure to the head, raising the valve off its seat and turning to another position after every few movements. (Never revolve the valve continuously in one direction).

The grinding may be considered to be satisfactorily completed when a continuous matt ring is observed on both valve face and seat.

After grinding, all traces of abrasive must be carefully washed off with petrol and a piece of rag, moistened in petrol, should be pulled through the bore of each valve guide to remove any abrasive that may have collected.

NOTE—A piece of oil resisting rubber tube having a bore of $\frac{1}{8}$ " slipped over the valve end will be found a suitable device for revolving the valves during grinding in. This is not included in the standard tool kit. The Part number is 011381.

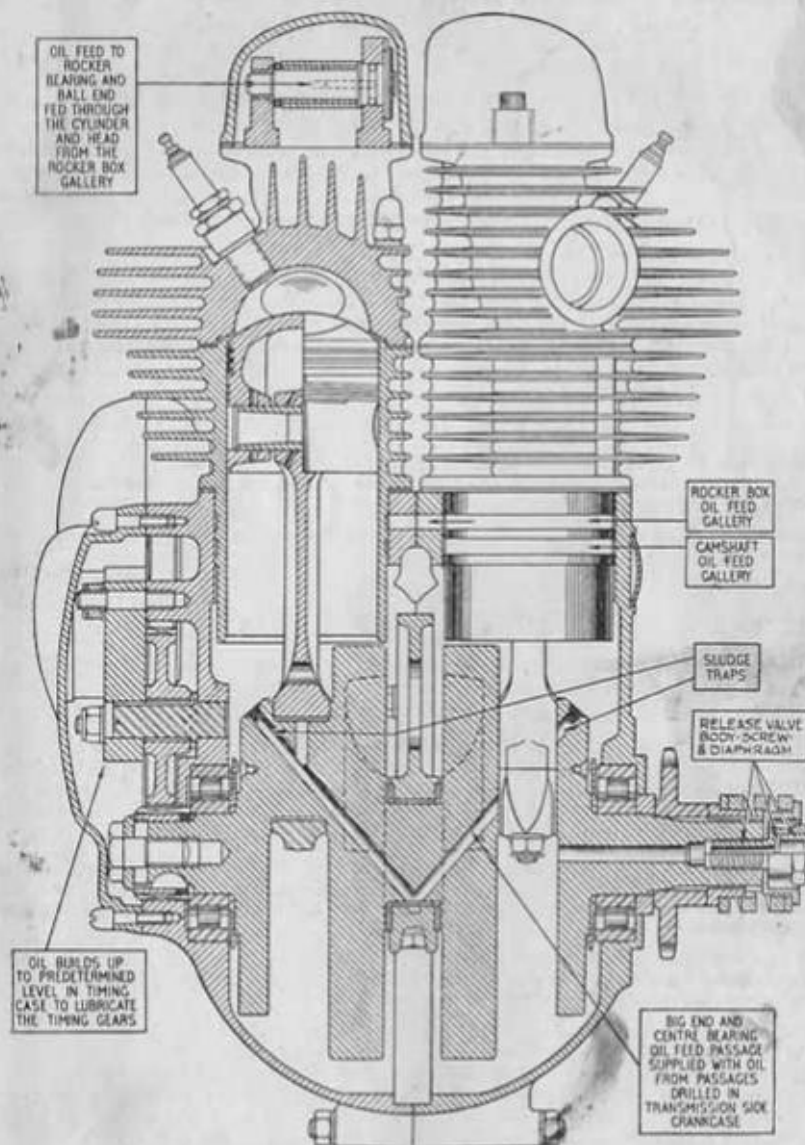


Illustration 9

Cross section of engine showing oil galleries, oil passages, and release valve.

REMOVING CYLINDER BARRELS AND PISTONS

Unless it is desired to inspect the pistons and rings, during decarbonisation, they are, as already advised, best left undisturbed.

Having removed the cylinder heads **withdraw the cylinder barrels** by:

Lift away the four push rods, identify them for re-fitting and lay aside.

Dealing with one barrel at a time, exert upward pressure on a barrel, slightly rocking to and fro while doing so, and steady the piston with one hand as it emerges from the barrel.

Cover the crankcase throat with clean rag to prevent the entry of foreign matter.

To remove a piston

Using 01188 circlip pliers, contract one of the gudgeon pin circlips and, with a rotary motion, gently withdraw the circlip from its housing. The gudgeon pin may then be pushed out of the piston which action frees the piston from the connecting rod. (Being a parallel, floating fit in the piston and connecting rod small end it is immaterial from which side the gudgeon pin is withdrawn.)

NOTE—It may be necessary to apply a little heat to the piston to permit free gudgeon pin removal and replacement.

Rings may be removed from a piston by peeling off or by introducing behind them three thin and narrow metal strips, equally spaced round the piston, and then sliding them off, taking care not to scratch the piston.

Carefully examine the contact edge of each piston ring and replace any which do not show a bright surface over the whole circumference.

FITTING PISTONS AND CYLINDER BARRELS

Pistons to be free of carbon on their crowns and all piston ring grooves to be clean. Piston rings to be clean and on pistons.

Fit a piston to its connecting rod by: Smear gudgeon pin with clean engine oil.

Place piston over connecting rod so that the slotted side faces to the front of the machine. Introduce gudgeon pin to piston and pass through connecting rod, press right home against the circlip still in situ. Then again, using pliers 01188, contract the other circlip. Introduce same into its groove in the piston, using a rotary movement. Make quite certain that the circlip lies snugly in its groove because failure to do so will inevitably lead to serious damage.

(See "NOTE" above).

Before fitting the cylinders, make sure they are clean and examine the base washers and renew same if not perfect.

To fit a new cylinder base washer: first clean off the old washer and all traces of jointing compound. Then smear one side of the new washer with jointing compound and, when that is nearly dry ("tacky") apply to the cylinder.

Place rings on piston, scraper first, then the two compression rings. On all models the top compression ring is chromium plated. These chrome plated rings have a slightly tapered exterior and when new are clearly marked with the word TOP on one side to indicate assembly position. After use this word tends to become indiscernible, but over a large mileage the assembly position can be determined by brightness of the edge contacting cylinder wall. This bright edge is the lower one. When as the result of wear, contact with the cylinder wall appears uniform over the whole width of the ring, it is then immaterial which way round it is refitted.

Space the piston rings so that the gaps are 120° to each other, smear piston and rings and bore of barrel with clean engine oil and, supporting the piston with one hand, gently pass over the barrel, compressing each piston ring with the fingers, as it enters the barrel.

Press the cylinder barrel right down into the throat of the crankcase.

Fit the second piston, gudgeon pin, rings and barrel in a like manner.

Revolve the engine till the pistons are at the top of their strokes and then, with a clean rag, wipe off all surplus oil. All is now ready to re-fit the cylinder heads.

TO RE-FIT THE CYLINDER HEADS

Clean the valve stems and the bores of the valve guides with rag moistened with petrol, make sure all other parts are clean, then smear each valve stem with clean engine oil and proceed to re-fit the valve stems by reversing the procedure taken to dismantle them.

Insert the four valve push rods into their original positions and, after making sure that the cylinder head gaskets are undamaged and in position, proceed to fit the two heads and leave the two sets of four cylinder head retaining nuts finger tight.

Now re-fit the inlet manifold, making sure the two paper gaskets are undamaged, and leave the four retaining nuts only just tight enough to ensure correct alignment.

Next, fully tighten down the four retaining nuts on each head, treating each, diagonally, bit by bit, till all are fully down.

Then, fully tighten the inlet manifold retaining nuts and re-fit the carburetter.

Next, carefully check each rocker clearance, as previously described, and re-set if necessary. (The correct rocker clearance with cold engine is .006" for inlet and exhaust).

The gaskets under each rocker cover should be inspected and, if not sound, should be replaced after which the rocker covers can be refitted.

Next re-fit the cylinder head steady plate and securely tighten the three fixing bolts.

NOTE—Before re-fitting carburetter make sure the rubber ring in manifold joint face is in position and undamaged.

VALVE TIMING

Inlet valve opens	35° before top dead centre
Inlet valve closes	65° after bottom dead centre
Exhaust valve opens	65° before bottom dead centre
Exhaust valve closes	35° after top dead centre

(Check valve timing with .012" rocker clearance)

Upon removing the timing gear cover (secured by 10 screws and 1 nut) and the pump plate assembly it will be observed the valve timing gears are marked to facilitate correct assembly.

One tooth of the mainshaft small pinion is marked with one centre punch dot and a tooth gap of the idle pinion, into which it meshes, is similarly marked. With these two marks coinciding it will be seen that a tooth gap on each side of the intermediate pinion is marked with two centre punch dots which also coincide with a similarly marked tooth on each of the camshaft driving gear wheels.

During assembly it is only necessary to mesh the gears with these various marks coinciding to ensure correct valve timing.

The dynamo and magneto drive pinions are not marked. The dynamo does not need "timing" and if, for any reason, the magneto timing has been disturbed, it is re-set as described later.

Removal of gears

When completely dismantling the engine there is no necessity to remove the small timing pinion from the crankshaft before splitting the crankcase because the complete crankshaft can be taken away with the pinion still in position.

If, however, it is desired to remove the pinion without completely dismantling the engine a special extractor is required (part number 015273). This consists of a nut, threaded externally and internally. The external threads enable it to be screwed into the threaded centre of the pinion and the internal threads accommodate a specially designed and hardened bolt which, upon screwing down, pulls off the pinion. This same tool is used for the removal of the magneto gear.

The intermediate gear needs no extractor.

The gears on the two camshafts (secured by nuts having left-hand threads) have to be mechanically withdrawn and each has two holes drilled and threaded to accommodate the two bolts of a bridge type extractor (part number 015374) which has a central bolt threaded in the bridge. The two outside bolts are screwed into the holes in the gears whereupon application of the centre bolt being screwed into the bridge bears on the end of the shaft thereby causing the gear to be withdrawn.

The gear on the dynamo needs no extractor because the dynamo, complete with gear assembled, is easily and quickly removed from the engine and the subsequent removal of the gear from the dynamo shaft is a simple workshop operation.

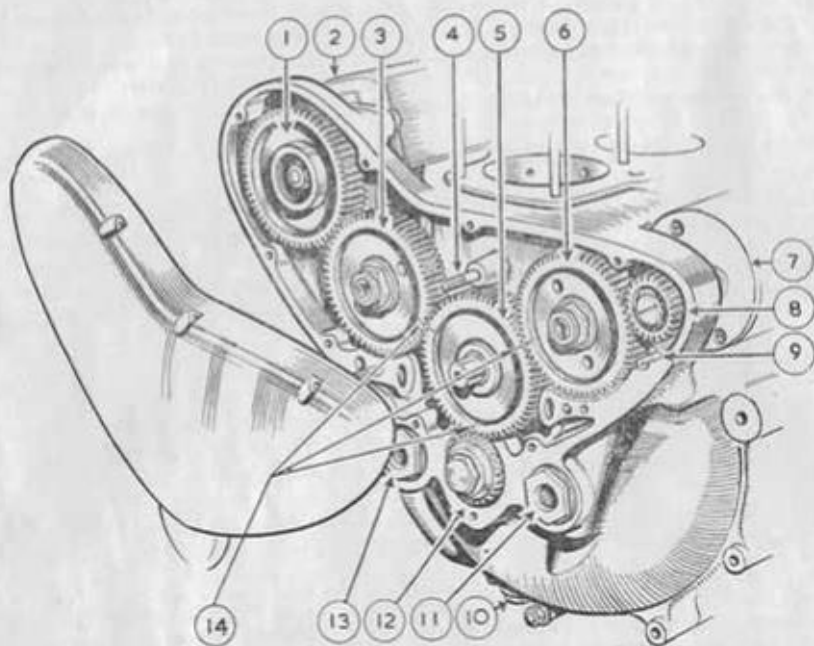


Illustration 10

Valve timing gear

See page 82 for particulars of special timing disc graduated in degrees.

- | | |
|--|---|
| 1 GEAR WHEEL ON MAGNETO ARMATURE SHAFT. | 9 STUD, IN DYNAMO BODY AND PASSING THROUGH CRANKCASE AND TIMING GEAR COVER. |
| 2 MAGNETO. | 10 CRANKCASE DRAIN PLUG. |
| 3 GEAR WHEEL ON INLET CAMSHAFT. | 11 ADAPTOR TO ACCOMMODATE OIL FEED PIPE BANJO PIN. |
| 4 ONE OF THE THREE STUDS RETAINING THE OIL PUMPS ASSEMBLY. | 12 TIMING PINION ON CRANKSHAFT. |
| 5 INTERMEDIATE (OR IDLE) GEAR. | 13 ADAPTOR TO ACCOMMODATE OIL RETURN PIPE BANJO PIN. |
| 6 GEAR WHEEL ON EXHAUST CAMSHAFT. | 14 MARKS TO SET TIMING. |
| 7 DYNAMO. | |
| 8 GEAR WHEEL ON DYNAMO ARMATURE SHAFT. | |

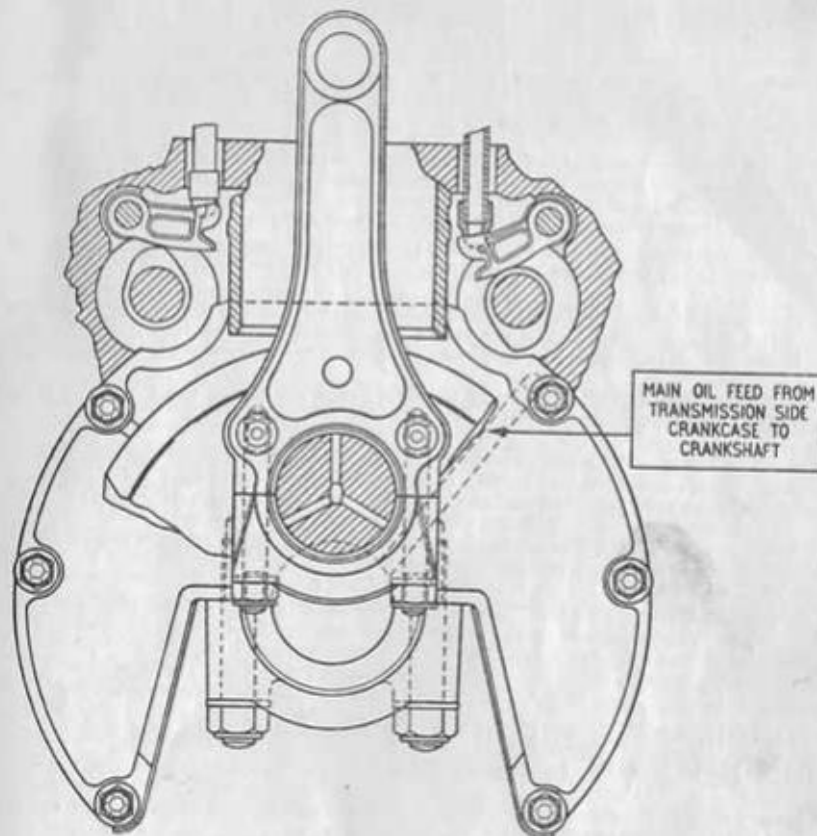


Illustration 11

Mounting for centre bearing for crankshaft, and a connecting rod with big-end bearing

TO RE-TIME THE IGNITION

Before proceeding to time the ignition it is advisable first to check the contact breaker point gap, which should be from .010" to .012", and correct it if necessary.

Having loosened the nut securing the magneto driving pinion, release same from the tapered end of the magneto shaft by means of a special extractor, as described on page 29. Remove the inlet rocker cover from the off-side cylinder head.

Remove the sparking plug from the off-side cylinder.

Insert a small rod into the sparking plug hole and, feeling the piston with the end of this rod, carefully turn the engine in its normal direction of rotation until the piston is exactly at the top of the stroke after the inlet valve has closed.

Hold the rod as vertical as the angular sparking plug hole will permit, make a mark on same exactly coinciding with the top edge of the sparking plug hole boss. Then withdraw the rod and make another mark exactly $\frac{3}{8}$ " higher up. Re-insert the rod and turn the engine backward until the higher mark coincides with the top edge of the sparking plug hole boss.

Place the ignition control lever in the fully advanced position.

Next, taking care not to disturb the piston position, turn the magneto in a clockwise direction (looking at the contact breaker end of the magneto) until the contact breaker points are just about to separate by reason of the fibre block on the bell crank lever commencing to mount the lower cam hump.

The exact point of separation is best found by inserting between the contact points a strip of thin tissue paper when the separation point can be determined by the paper just being released with a light pull.

Having obtained this position, press the magneto driving gear on to its taper with the fingers and lightly tighten the securing nut.

It is next advisable to re-check the setting by again turning the engine to the position at which the piston is $\frac{1}{8}$ " before the top of the firing stroke, re-inserting tissue paper between the contact points and confirming that same can be released with a light pull.

Upon being satisfied that the setting is correct securely tighten down the nut fixing the magneto driving gear.

Thoroughly clean off all traces of jointing compound from face edges of the timing cover and crankcase and then smear both faces with new jointing compound, which leave till tacky and then re-fit the cover to the crankcase. ("Wellseal" recommended.)

The whole operation of timing the Ignition will be found quite simple if the foregoing instructions are carefully followed.

NOTE—The sparking plug High Tension cable for the off-side cylinder is that connected to the rear pick-up on the magneto.

TO DISMANTLE AND REFIT CRANKCASE RELEASE VALVE IN CRANKSHAFT (see Illustration 9)

Upon removal of the outer portion of front chaincase as described elsewhere, the release valve will be observed on the end of the engine shaft.

The larger hexagon, is the release valve body, which also secures the shock absorber spring cap.

The smaller hexagon is the release valve screw, which retains the spring and diaphragm.

To inspect release valve and ensure correct re-assembly it is essential to remove the valve body from the engine shaft, then the valve screw can be removed.

When re-fitting diaphragm, hold the valve body vertical with large hole uppermost, and correctly locate spring when the valve screw is assembled.

REMOVING SPARKING PLUG

Always exercise the greatest care to avoid thread seizure when removing a sparking plug. If any resistance is felt, apply paraffin. Before replacing plug, it is desirable to coat the thread with "Oil Dag" or Graphite paste. This will guard against seizure upon subsequent removal.

CARBURETTER SERVICE

The information given in this section includes all that will normally be required by the average rider. For further details, particularly those connected with racing and the use of special fuels, we refer the enquirer to the manufacturers of the carburetter, Amal Ltd., Holford Road, Witton, Birmingham, 6.

Our Spare Parts Department does not stock every part of the carburetter but confines its stock to those parts that, from time to time, may be required. Those parts include floats and float needles, jet taper needles, pilot jets, main jets, needle jets and washers.

CARBURETTER FUNCTION

The petrol level is maintained by a float and needle valve and, in no circumstances, should any alteration be made to these parts. In the event of a leaky float, or a worn needle valve, the part should be replaced with new. (Do not attempt to grind a needle to its seat).

The petrol supply to the engine is controlled, firstly, by the main jet and, secondly, by means of a taper needle (see illustration 12) which is attached to the throttle valve and operates in a tubular extension of the main jet.

The main jet controls the mixture from three-quarters to full throttle, the adjustable taper needle from three-quarters down to one-quarter throttle, the cut-away portion of the intake side of the throttle valve from one-quarter down to about one-eighth throttle, and a pilot jet, having an independently adjusted air supply, takes care of the idling from one-eighth throttle down to the almost closed position. These various stages of control must be kept in mind when any adjustment is contemplated. (See illustration 12, for location of the pilot jet air adjustment screw). The pilot jet unlike on earlier models is now detachable for cleaning.

The size of the main jet should not be altered save for some very good reason. See "DATA" for details of standard sizes of jet, throttle valve, and jet taper needle. With the standard setting it is possible to use nearly full air in all conditions, except, perhaps, when the engine is pulling hard up hill or is on full throttle, when some benefit may be obtained by slightly closing the air control.

Weak mixture is always indicated by popping, or spitting, at the air intake.

A rich mixture usually causes bumpy, or jerky, running and, in cases of extreme richness, is accompanied by the emission of black smoke from the exhaust.

CARBURETTER ADJUSTMENT

With the taper needle projection, main jet size, and type of throttle slide specified (See Page 6) correct carburation except at idling speed is assured.

In the event of difficulty being experienced look for cause under heading Useful Information (Pages 74 and 75.)

To check for correct idling mixture, first run the engine until it is just warm but not hot when with the throttle nearly closed and air fully open it should fire evenly and slowly. If it fails to do so, first of all make certain that the sparking plug is clean and the point setting correct. Having done this and idling is still uneven try resetting the pilot jet air screw.

Adjustment of this air screw is not unduly sensitive and it should be possible to obtain the correct setting for even firing in a few seconds.

In the event of even firing at idling speed being unobtainable by adjustment of the air screw look for obstruction in the pilot jet.

Having obtained even firing all that remains is to adjust if necessary the position of the throttle stop screw until the desired idling speed is obtained.

TWIST GRIP ADJUSTMENT

A screw is provided in one of the halves of the twist grip body to regulate the spring tension on the grip rotating sleeve. This screw, which is locked by a nut, must be screwed into the body to increase the tension.

The most desirable state of adjustment is that when the grip is quite free and easy to operate but, at the same time, will stay in the position in which it is placed.

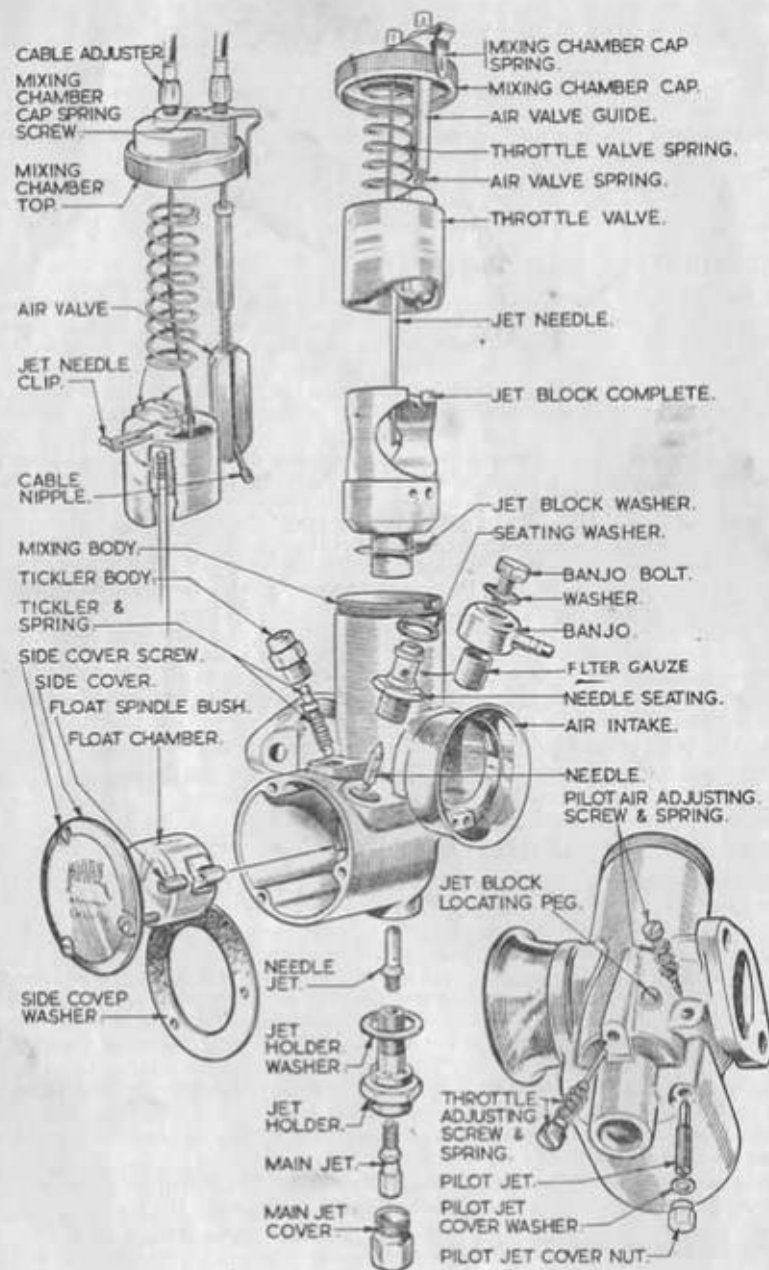


Illustration #2

Carburettor details in assembly order

TWIST GRIP ADJUSTMENT CONT.

The complete twist grip can be moved on the handlebar by slackening the two screws that clamp together the two halves of the body. The most desirable position is that in which the throttle cable makes the cleanest and most straight path to the under-side of the petrol tank.

Smooth throttle operation is assured by the provision of a cable oil nipple. At the first signs of jerky action a little engine oil should be injected applying the gun as near vertical as possible (nozzle downward).

AIR FILTER

In locations, such as the United Kingdom, where the roads and atmosphere are particularly free from dust, it is not considered necessary to have an air filter fitted to the carburettor, but in countries where the atmosphere contains a very heavy dust content, an air filter is essential in order to prevent abrasive wear.

The filter available (optional extra) for the conditions mentioned above is of the "Oil Wetted" type, and this requires periodical servicing.

When servicing the air filter, withdraw the filter element. Thoroughly wash this in petrol, paraffin or other suitable solvent and allow to dry. Then re-oil, using one of the light oils (SAE-20), enumerated in the final table on page 13, and allow to drain before replacing in the filter case. Clean at intervals of 2,500 to 5,000 miles according to road conditions, and renew the element every 10,000 miles.

TO REMOVE THE AIR FILTER ELEMENT

Pull the rubber hose off the carburettor air intake.

Remove the frame cover and pull off the hose end from the air filter.

Remove the bolts securing the filter to the oil tank and withdraw the entire filter unit.

The filter element is held in its cage by bolts and nuts and lock washers. After cleaning, replace the filter. When the hose is replaced on the filter make sure that it is properly located. The end of the hose is split along the edge of the lip, and the neck of the filter unit slips into this groove.

CARBURETTOR TUNING INFORMATION

Poor idling may be due to :

- Air leaks. Either at junction of carburettor and inlet manifold, or by reason of badly worn inlet valve stems or guides.
- Faulty engine valve seatings.
- Spark plug faulty, or its points set too closely.
- Ignition advanced too much.
- Contact breaker points dirty, pitted, loose, or set too closely.
- High-tension wire defective.
- Pilot jet not operating correctly. Partially choked or incorrect air supply.
- Rockers adjusted too closely.

Heavy petrol consumption may be due to :

- Late ignition setting.
- Bad air leaks. Probably at carburettor or manifold joints.
- Weakened valve springs.
- Leaky float. (Causing flooding).
- Taper needle extension insufficient.
- Poor compression, due to worn piston rings or defective valve seatings. (Test compression with throttle wide open).


TRANSMISSION SERVICE

THE GEAR BOX

The gear box provides four speeds and has a positive foot change, operated by the right foot and a kick-starter.

It is retained to the frame by being clamped between the two engine rear plates by two bolts. The bottom fixing bolt acts as a pivot. The top fixing bolt passes through the gear box top lug and the rear plates, which are slotted, thereby allowing a swinging fore and aft movement of the gear box to enable the front driving chain to be adjusted. That movement is controlled by an adjusting bolt (marked 1 in illustration 15) secured in an eye bolt (marked 2 in illustration 15) and locked in the required position by a nut (marked 3 in illustration 15).

Illustration 13 clearly shows the general internal gearbox layout, the simple gear selection and kickstarter mechanism. It will be seen that movement of the foot change lever causes movement of the cam barrel through the medium of an ingenious trip fork to which the lever is attached.

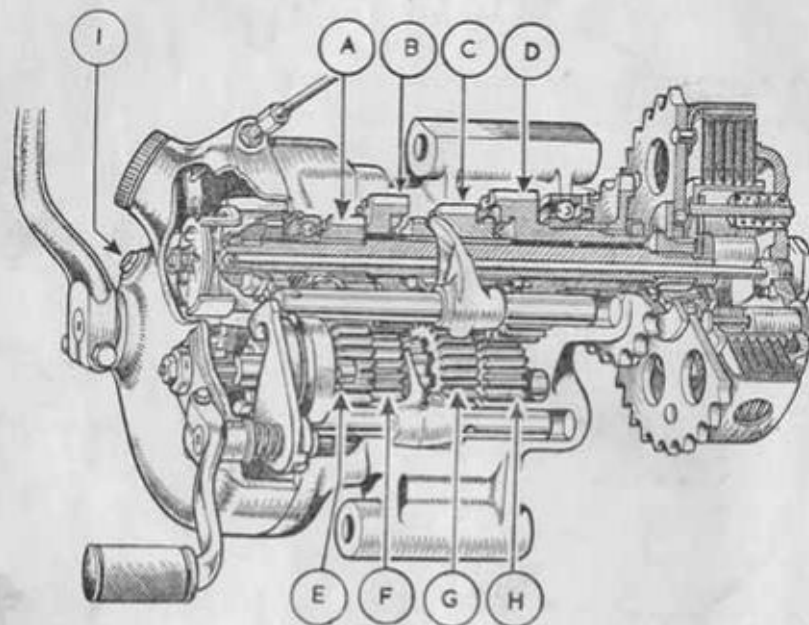

- A LOW GEAR ON MAINSHAFT.
- B THIRD GEAR ON MAINSHAFT.
- C SECOND GEAR ON MAINSHAFT.
- D MAIN DRIVING GEAR.
- E LOW GEAR ON LAYSHAFT.

- F THIRD GEAR ON LAYSHAFT.
- G SECOND GEAR ON LAYSHAFT.
- H SMALL PINION ON LAYSHAFT.
- I OIL LEVEL PLUG.

Section through gearbox showing gears and clutch with actuating mechanism

Illustration 13

This cam movement actuates the sliding gear striker forks causing movement of the sliding gears which engage the stationary gears by dogs. As each gear is selected it is held in engagement by means of a spring loaded conical ended plunger operating in depressions on the end of the cam barrel.

The trip mechanism referred to allows the foot change lever to return to its normal position, upon foot pressure being released, in readiness for the next change of gear. Downward direction of movement causes engagement of higher gears and upward movement with the toes causes a lower gear to become engaged.

As mentioned elsewhere an external marked disc shows at a glance which gear (or neutral), is engaged.

The unusual method of clutch operation should be noted, the necessary thrust rod movement to free being obtained through the medium of three balls operating on inclined planes. (See illustration 14.)

Operation of the clutch handlebar lever moves clutch operating lever B causing inward movement of the thrust rod by reason of the three balls mounting the inclined planes in which they are located. The resulting inward movement of the clutch thrust rod forces out the pressure plate, normally maintained in contact with the friction plates by the springs E, thereby allowing the engine to drive the clutch sprocket D without imparting drive to the mainshaft C.

Consequently no power is transmitted to the rear wheel, the clutch is said to be "out" or "free." Upon releasing the clutch handlebar lever the clutch operating lever returns to its normal position by the pressure of the spring forcing the balls down these inclined planes thereby allowing the spring pressure through the medium of the pressure plate to be transferred to the friction plates which causes the gear box mainshaft to revolve and impart driving power to the rear wheel.

TO REMOVE KICK-STARTER CASE COVER FOR EXPOSURE OF K.S., GEAR CHANGE, AND INTERNAL CLUTCH ACTUATING MECHANISM

Remove oil drain plug and drain off oil contents of the gear box. Remove the large oil filler plug and slack off the clutch cable adjuster sufficiently to permit the cable end to be detached from the slotted end of the internal clutch operating lever which is exposed by the removal of filler cap.

Unscrew the clutch cable adjuster until it is free from the K.S. case cover and withdraw the cable nipple through the adjuster hole.

Remove the nut and small spiral spring securing small gear indicator disc from the cam barrel spindle.

Next remove the five cheese head screws by which the K.S. case cover is secured to the gear box end plate.

Withdraw the cover about $\frac{1}{2}$ inch, holding the K.S. pedal firmly while doing so.

Now swing the K.S. crank round until it can be tied to the foot change lever. This prevents the K.S. return spring unwinding and facilitates re-assembly.

The entire cover can now be removed.

Re-assemble in exactly reverse order, taking care to avoid damage to the paper joint gasket.

Fill to correct level with one of the recommended oils and lastly refit the gear indicator disc and adjust its position to give correct indication of gears.

NOTE—The position of the various cheese head screws securing the K.S. case cover are as follows :—

- In the top position, screw measuring $3\frac{1}{2}$ inches under head.
- In the bottom position, screw measuring $2\frac{1}{2}$ inches under head.
- In the rear position, screw measuring $\frac{3}{4}$ inch under head.
- In the front position, top screw measuring $1\frac{1}{2}$ inches under head.
- In the front position, bottom screw measuring $1\frac{3}{4}$ inches under head.

TO REMOVE GEAR BOX END PLATE FOR EXAMINATION OF GEARS

Remove K.S. case cover as already described.

Remove split pin securing both gear striker shaft pins and withdraw the pins and also the cam barrel in which they operate together, with the spring ball ended plunger which engages depressions on the underside of the cam barrel.

Remove the mainshaft end nut and draw off the K.S. ratchet driver, pinion, spring and bush upon which the pinion is mounted.

Remove the three cheese head screws by which the end plate is secured to the gear box shell and the end plate is then free to be withdrawn leaving the gears and gear striker shafts in situ.

Take care to avoid losing the steel ball fitted in the end of the mainshaft and interposed between the clutch actuating lever and the clutch thrust rod.

TO RE-ASSEMBLE

If gears have been disturbed insert them in their proper order with slider shafts in correct location and apply end plate with paper joint gasket in position.

Re-fit the three cheese head screws and firmly tighten down with a stout screwdriver. Then insert ball ended plunger and spring and apply the gear selection cam barrel with any one of the depressions on its underside engaging with the ball end of the spring loaded plunger.

Next insert the selector shaft pins and secure each in position with its split pin.

Complete the assembly in reverse order of dismantling ascertaining, before applying the K.S. case cover, that the ball is inserted in the end of the mainshaft.

Fill to correct level with one of the recommended oils and lastly re-fit the gear indicator disc and adjust its position to give correct indication of gears.

TO REMOVE FRONT CHAINCASE AND CLUTCH ASSEMBLY

To remove outer half of front chaincase

Remove left side exhaust pipe and silencer (the pipe with its silencer is taken away as a unit).

Remove the left side footrest arm.

Place tray under chaincase to catch oil.

Remove screw binding chaincase metal band at its rear.

Remove metal band and endless rubber band.

Remove nut and washers in centre of chaincase front.

Take away outer half of chaincase.

TO REMOVE FRONT DRIVING CHAIN, SHOCK ABSORBER & CLUTCH

Engage top gear, apply the rear brake and unscrew engine shock absorber retaining bolt. Unscrew the five nuts retaining the five clutch springs.

Take away the clutch spring pressure plate with the clutch springs and clutch spring cups.

Remove front chain connecting link and take away chain.

Withdraw shock absorber assembly consisting of cap, spring, cam and sprocket.

Flatten the turned up edge of the lock plate under the clutch centre retaining nut.

Engage top gear, apply the rear brake, and unscrew the nut retaining the clutch centre to the gear box main shaft sleeve.

Lift away the plain and lock washers under the retaining nut.

Remove the remainder of the clutch assembly by pulling it away, as one unit, from the gear box main shaft. Take care not to lose any of the twenty-four clutch sprocket bearing rollers which will be displaced during withdrawal. (The clutch centre is a sliding fit on the splined main shaft sleeve and an extractor should not be required).

TO REMOVE BACK HALF OF CHAINCASE

Flatten turned up ends of tab lock washers under the three bolts retaining the back half of the chaincase to the boss of the crankcase and remove the three bolts and the lock washers.

Remove the wide nut on the centre fixing bolt and also the washer under it.

Back half of front chaincase is now free to be lifted away.

TO RE-FIT THE FRONT CHAINCASE AND CLUTCH

Check truth of faces of both chaincase halves. (See note at end of these instructions.)

Fit back half of front chaincase by :

Place on face of crankcase boss and back of chaincase some liquid jointing compound, and leave till tacky. ("Wellseal" recommended.)

Ensure the spacer is in position on the centre bolt. This is located between the engine plate and the chaincase.

Place in position rear half of front chaincase.

Fit to crankcase boss the three lock washers and bolts retaining case to boss.

Fully tighten the three bolts and turn up the tabs of the three lock washers.

Fit spacer nut (inside chaincase, $\frac{1}{2}$ " long) and washer to the centre fixing bolt and fully tighten.

Fit engine shock absorber by :

Ensure the spacing collar, which fits between crankcase roller bearing and the back of the engine sprocket, is in position on the driving side flywheel axle.

Then place in position, on the flywheel axle, in the order specified, the engine sprocket, the shock absorber cam, the spring and cap washer and, finally, the shock absorber retaining bolt. Do not attempt to fully tighten the bolt.

Fit the clutch centre and sprocket by :

Place on the gear box main shaft splined sleeve the thicker of the two clutch sprocket roller bearing retaining washers.

Place on the gear box main shaft splined sleeve the clutch sprocket roller bearing ring. With grease, stick in place on the bearing ring the twenty-four clutch sprocket bearing rollers.

Introduce clutch sprocket over the rollers.

Place on the gear box main shaft splined sleeve the thin clutch bearing retaining washer.

Push on the splined end of the gear box main shaft splined sleeve the clutch centre.

Fit the lock plate plain washer and nut that retain the clutch centre but do not attempt to fully tighten the nut.

Fit the front chain and lock centre nut by :

Replace the front driving chain. (Connecting link adjacent to engine sprocket on bottom run is most convenient position). Ensure the spring connecting link is fitted so that the closed end of the spring clip faces the direction of rotation.

Engage top gear, apply the rear brake and then fully tighten the nut that retains the clutch centre to the gear box main shaft.

Finally, turn up one edge of the lock plate so that it is firmly against one of the faces of the nut.

Fit the clutch plates and springs by :

Slide into position, in the clutch case attached to the clutch sprocket, one of the steel plain clutch plates.

Slide into position a clutch friction plate (plate with fabric inserts) and follow with a steel plain plate, then another friction plate and so on, alternatively, till all plates are fitted. (Six plain and five friction plates).

Drop into the spring pressure plate the five cups for the clutch springs.

Show up the spring pressure plate and insert, over the studs, the five clutch springs, retaining each one a few turns, as fitted, with a clutch spring adjusting nut.

Fully tighten the five clutch spring adjusting nuts using end of spanner part number 017254.

Slacken back, four complete turns, each clutch spring adjusting nut.

Engage top gear, apply the rear brake and then fully tighten the engine shock absorber retaining bolt.

Check front driving chain for adjustment.

Check clutch operating lever for correct free movement as detailed elsewhere.

Fit outer half of front chaincase by :

Ensure faces of both halves of chaincase are clean.

Ensure the rubber and metal bands are clean and undamaged.

After carefully positioning the outer half so that its exterior edge exactly coincides with that of the inner half, apply the endless rubber band.

Fit the metal band, starting at the front end of the chaincase and drawing together the two free ends with the fingers of one hand while with the other hand insert the binding screw.

Whilst slowly tightening this binding screw apply at the same time light taps all round the band exterior using a small rubber mallet.

These light taps will cause the metal band to creep on the rubber to ensure an even all-round pressure.

Remove the inspection cap from the chaincase and pour in engine oil to the level of the bottom edge of the inspection cap orifice and then replace the cap.


Replace the left side footrest arm.

Replace and fully tighten the nut on the left side of the footrest rod.

Replace the exhaust pipe and silencer unit.

NOTE—If, after replacing a front chaincase, it is found not to be oil tight, the general reason is distortion of the two joint faces or incorrect position of the rubber band. These faces must be undamaged and, on test, should closely fit to a surface plate. They must also be absolutely clean before replacement and the edges must be in exact register, one with the other. Any distortion caused by accidental impact must be remedied before refitting.

If any doubt exists, **CHECK for DISTORTION BEFORE ASSEMBLY.**

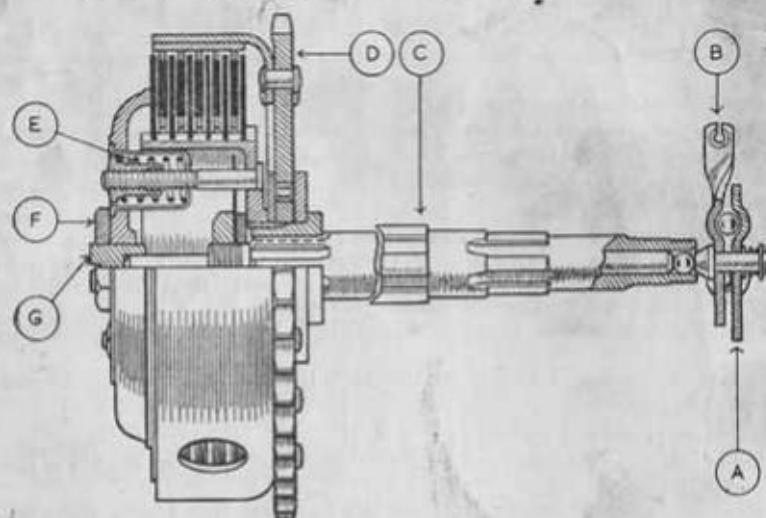

A FIXED CLUTCH INTERNAL ACTUATING PLATE.

B CLUTCH INTERNAL OPERATING LEVER.

C GEAR BOX MAINSHAFT.

D CLUTCH SPROCKET.

E CLUTCH SPRING.

F LOCK NUT FOR CLUTCH ROD THRUST CUP.

G THRUST CUP (in clutch pressure plate) FOR CLUTCH ROD.

Clutch, gear box main shaft and clutch operating mechanism

Illustration 14

CLUTCH SPRING ADJUSTMENT

If clutch slip occurs the most probable cause is either incorrect cable adjustment or absence of free movement of the internal clutch lever. If both are found to be correct the clutch spring adjusting nuts may require adjustment.

To obtain access to clutch spring adjusting nuts, remove the domed clutch cover (secured by eight screws).

With the slotted driver provided on one of the thin spanners in the tool kit, screw each nut, in turn, fully home, then unscrew exactly four complete turns.

Before replacing the domed clutch cover, test for slip by starting up the engine, engaging top gear, and applying the rear brake when it should be possible to pull up the engine on full throttle without slip occurring.

If to cure slip it is found necessary to further tighten the adjusting nuts this is a clear indication that either the clutch springs have lost their tension, the inserts are so worn that they require renewal or that they have become impregnated with oil.

In the two former instances renewals are necessary, but if oil is the cause of slip this may be rectified by soaking the plates in petrol and allowing to dry off. If inserts are glazed roughen with sand paper.

CLUTCH OPERATING MECHANISM ADJUSTMENT

Correct adjustment of the clutch operating mechanism is of the utmost importance and the following instructions must be carefully observed.

In order to understand the method of clutch withdrawal a study of illustrations 14 and 15 should be made. See also paragraphs 7 and 8, Page 36 (Transmission Service).

To enable the clutch to function satisfactorily $\frac{1}{8}$ " to $\frac{1}{4}$ " free movement of the operating cable is essential. This is checked by lifting the outer casing of the clutch cable at the position where it enters the screwed adjuster on the kick starter case cover. If the adjustment is correct it should be possible to freely move the casing up and down with the fingers $\frac{1}{8}$ " to $\frac{1}{4}$ ".

If the free movement is excessive causing clutch drag or noisy gear changing, adjustment should be made as follows.

Release the clutch cable adjuster lock nut and then screw in the adjuster as far as it will go to ensure that the operating lever B (illustration 14) is in its normal position.

Now turn to the opposite side of the cycle and remove the domed clutch cover secured by eight screws.

Then using the sparking plug box key supplied in tool kit, loosen lock nut F.

Then with a screw driver gently screw in the thrust cup G until contact with the thrust rod can be felt, after which unscrew exactly one half turn and then securely retighten the lock nut F taking care to observe that the screwed thrust cup does not also turn while doing so.

Replace the clutch cover and then make the final adjustment by unscrewing the cable adjuster until the recommended free movement of the casing is obtained after which retighten the cable adjuster lock nut.

As a result of wear of the clutch friction plate inserts after prolonged use, the plates tend to close up towards each other. This will have the effect of reducing the free movement in the operating mechanism referred to above.

Clutch slip resulting from lack of free movement will rapidly ruin the inserts and may generate sufficient heat to soften the clutch springs. Therefore should clutch slip develop an immediate check of free movement must be made.

In this case after slacking off the cable adjuster, unscrew the cup G a turn or two and then gently screw in until contact with the thrust rod is felt, after which as already detailed it should be unscrewed exactly one half turn before retightening the lock nut F. Lastly adjust the cable for the specified free movement.

To remove a clutch control cable

Remove the oil filler cap from the kick-starter case cover.

Screw right home the clutch cable adjuster that is located in the top of the kick-starter case cover.

Disengage, from the operating lever, the clutch cable inner wire by operating through the oil filler cap opening.

Completely unscrew the clutch cable adjuster.

Disengage, from the handlebar operating control lever, the clutch inner wire.

Pull cable, by its lower end, till removed from the machine, easing it through the frame cable clips while doing so.

To replace a clutch control cable

Reverse the above instructions and, finally, adjust as detailed earlier.

FRONT CHAIN ADJUSTMENT

Refer to Illustration 15

Remove engine plate cover.

Slacken the nut of bolt (5).

Slacken the nut (3).

Screw bolt (1) clockwise to take up slack in the chain.

Remove inspection cap from chaincase and check tension by applying upward pressure, with finger, to the chain.

The correct amount of whip is $\frac{3}{8}$ inch.

Check the adjustment in several positions and adjust for the tightest point.

When the correct adjustment has been obtained, tighten nuts (3) and (5), replace covers.

If the chain is tight, screw the bolt (1) in an anti-clockwise direction.

Pull on the rear chain to move the gearbox and slacken the primary chain.

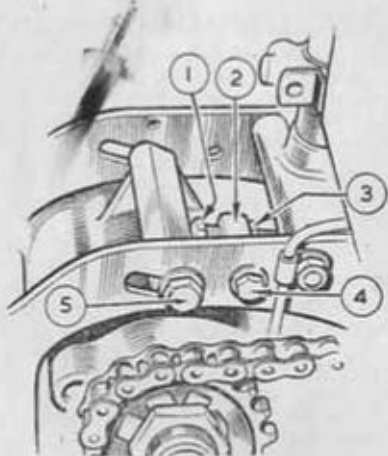


Illustration 15

Front chain adjustment

1. ADJUSTING BOLT. 2. ADJUSTING BOLT LOCK NUT. 3. ADJUSTING BOLT LOCK NUT. 4. CHAIN TENSION ADJUSTMENT. 5. ENGINE PLATE BOLT.

REAR CHAIN ADJUSTMENT

To obtain rear chain adjustment the rear wheel is bodily moved in the rear frame fork ends, which are slotted for the purpose. Adjusting screws with lock nuts are provided on the forward side of each slotted end.

To adjust the chain place cycle on the stand and slightly slacken the spindle end nut and also slightly slacken the brake drum dummy spindle locknut the hexagon of which is adjacent to the spindle end nut. Then slacken back the adjuster screw lock nut on each side and unscrew each adjuster bolt in turn to exactly the same extent until the correct chain tension is obtained. While on the stand the chain whip should be $1\frac{1}{8}$ " (see note below). Then fully retighten spindle nuts and also the adjuster screw locknuts. Chain whip must always be checked midway between the two sprockets and the rear wheel should always be turned to obtain the position of least slackness. This is because chains rarely wear evenly and there is usually one position at which the chain is tighter than at any other. It is at this position that the adjustment check should be made.

NOTE—The chain adjustment specified while cycle is on the stand is reduced to $\frac{3}{8}$ " when the wheel is on the ground and the rider seated. This is due to chain sprocket centres varying slightly as the result of movement of the rear swinging arm.

NOTES ON REAR CHAIN ADJUSTMENT

Before tightening the rear chain always first check front chain adjustment and if attention is necessary adjust the front chain first. This is because adjustment of the front chain disturbs that of the rear chain.

Therefore after making adjustment to the tension of the front chain always afterwards check that of the rear chain.

It should also be noted that adjusting the rear chain will disturb rear brake adjustment which should therefore always be checked subsequently.

REMOVING AND REFITTING REAR CHAIN

To protect the rear chain from mud and water it is very closely shrouded by the chain guard and removing the chain without first detaching the chain guard can present considerable difficulty. A simple procedure however is as follows.

First obtain a piece of thin string about ten feet long.

With cycle on the stand turn the rear wheel until the chain connecting link is at a position near the rear sprocket and remove the connecting link.

Now pass the string through the centre hole of the end link of the top run, draw the two ends of the string level and tie together.

Then pull the bottom run of the chain backwards with one hand while keeping the string taut at the rear end with the other hand.

As the end of the top run of the chain disengages with the gear box sprocket it will leave the string attached lying one strand each side of the sprocket teeth.

When the chain is well clear cut the string on one side only at a point about one foot from where it is looped through the chain link.

Leave the string then in situ awaiting chain refitting.

To refit the chain.

Pass the longer cut end of the string through the centre hole of the end chain link and then tie the two loose ends of the string together.

Then pull the string from the rear end at the same time guiding the chain up to engage with the gear box sprocket.

Continue pulling until the chain encircles the rear wheel sprocket when remove the string and refit the connecting link taking care while doing so to attach the spring clip with its closed end facing the direction of rotation.

ENGINE SHOCK ABSORBER

The engine shock absorber is a spring device for smoothing out the engine impulses.

The engine sprocket is a free fit on the driving side axle. It has, integral with it, a face cam that engages with a similar face cam ("shock absorber cam") which is keyed to the driving side flywheel axle by splines. A spring keeps the shock absorber cam in close engagement with the cam on the sprocket, and, the shock absorber cam being driven by the engine, over-rides the sprocket cam under the influence of the engine impulses. The shock absorber spring is compressed by the over-riding of the cams, thereby absorbing the shocks.

It is essential the faces of the cams are adequately lubricated otherwise the shock absorbing action will be nullified and this is automatically taken care of, providing the level of the oil in the front chaincase is maintained according to the instructions given in the "Lubrication Section." This bolt also houses the crankcase breather valve.

The shock absorber spring is retained by a cap washer and a retaining bolt which must be fully tightened.

Behind the engine sprocket (between the sprocket and the crankshaft roller bearing) is a spacing collar which is a sliding fit on the driving side flywheel axle and in no circumstances must this be omitted.

NOTE—At the first sign of transmission harshness examine front chaincase for correct oil level, and dismantle and lubricate the shock absorber parts if the harshness continues. For access to the shock absorber parts it is necessary to remove the outer half of the front chaincase.

The order of assembly of the engine shock absorber is

- 1 The spacing collar between the crankshaft roller bearing and the engine sprocket.
- 2 The engine sprocket.
- 3 The shock absorber cam.
- 4 The shock absorber spring.
- 5 The cap washer.
- 6 The retaining bolt incorporating crankcase breather.

FORK & FRAME SERVICE

STEERING HEAD ADJUSTMENT

The steering head frame races are of the floating self-aligning type and have spherical seats. Therefore they do not fit tightly in the head lug.

Occasionally test the steering head for correct adjustment by exerting pressure upwards from the extreme ends of the handlebars.

It is particularly important that the adjustment is tested after the first one hundred miles because of the initial settling down that always occurs in that period.

Should any shake be apparent, adjust the steering head bearings.

Adjust steering head bearings by:

Jack up the front of the machine so that all weight is taken off the front wheel. (A box under each footrest serves that purpose).

Slacken the two fork crown pinch screws.

Slacken the domed nut at top of the steering column.

Screw down the nut underneath the domed nut a little at a time (using adjustable spanner 017249) and, while doing so, test the head assembly for slackness by placing the fingers over the gap between handlebar lug and frame top lug, at the same time exerting upward pressure by lifting from the front edge of the front mudguard. Tested in this manner the slightest slackness is discernable.

Continue to tighten the lower adjusting nut until no perceptible movement can be felt and yet the steering head is perfectly free to turn, then tighten down the domed nut in order to lock the adjustment.

Securely tighten the two fork crown pinch screws (this is very important.)

Remove packing from under footrest.

FRONT FORKS (TELEDRAULIC)

Owing to the unusual construction of the "TELEDRAULIC" fork it is desirable to understand what happens in use and, in order to clearly follow the descriptions and subsequent assembly and adjustment instructions, reference to Illustrations 16 and 17 will be necessary.

As will be seen from the general arrangement drawing, Illustration 17, the main members of the forks are two long tubes. These are of heavy gauge and are externally ground to very fine limits. These fork main, inner, tubes are firmly fixed to the handlebar clip lug by the top bolts 021830 and are clamped to the fork crown by the clamping screws. Upon the external of these tubes are mounted the springs and sliding members, to which latter the front wheel, mudguards and front stand are fixed.

The telescopic action of the sliders, combined with the hydraulic dampers, described later, explain the word "Teledraulic," coined for the description of the fork.

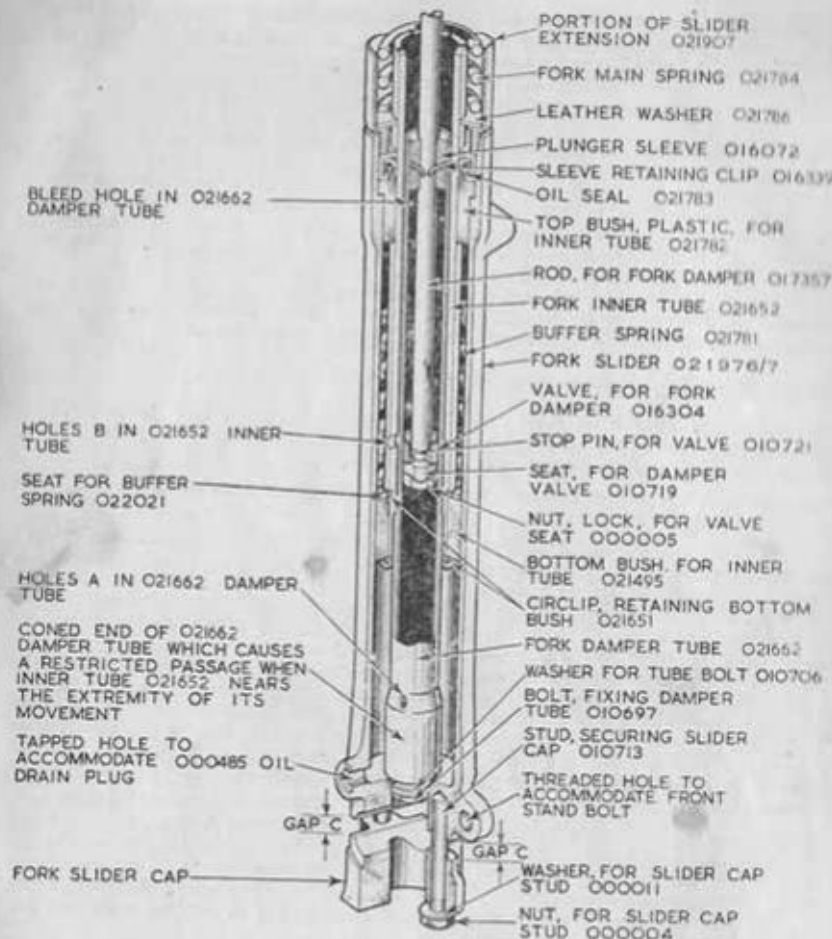


Illustration 16

Introduced in early 1941 for use under strenuous war conditions by all the allied armies, it remains unaltered, except in detail, to this day, and copied practically universally. The hydraulic dampers operate in tubular members located inside the main tubes. As will be seen the aluminium sliding members operate upon steel bushes attached to the bottom ends of the main tubes and also upon bakelite bushes, secured to the top end of the sliders themselves. Above these bushes, an oil seal is fitted, the object of which is to prevent leakage of oil from below into the main spring chamber. The normal level of oil is well above the bottom extremity of the main inner tubes and bearing this in mind, it is at once clear that upward movement of the sliders resulting from impact with road bumps in addition to meeting resistance from the main springs also causes oil to be ejected by the close fitting steel bushes. This oil is forced upward through the open ends of the main inner tubes and also through the holes A (Illustration 16) in the bottom of the damper tubes, then past the damper disc valve which the passing oil raises off its seat. As the oil level rises inside the main inner tubes, air trapped is compressed, thereby forming an air buffer acting as auxiliary to the main springs. This displacement of oil upon impact imposes a certain amount of damper effect, the extent of which increases with the violence of the shock, or in other words, the bigger the bump the greater the damping effect. Upon the recoil movement, the damper disc valve returns to its seat and the oil trapped between this valve and the plunger sleeve above

has no other source of escape but past this sleeve and the adjacent small metered bleed hole. This intentionally restricted passage causes a considerable damper effect to the recoil action. It will thus be gathered that on the shock movement of the fork, slight damper action occurs, with a greatly increased damper action on the reverse movement, both actions automatically increasing in effect the more violent the movement. Before concluding this description, it should be mentioned that upon a very violent impact, as a result of which the main springs are almost fully compressed, the damping of the upward movement of the sliders is intentionally increased by the automatically greatly restricted passage for the displaced oil, brought about by the lower ends of the main tubes encircling the tapered enlarged ends of the damper tubes as the sliders near the limit of their upward movement. Thus bottoming is prevented, no matter how violent the impact. For ordinary purposes the recommended oil content is $6\frac{1}{2}$ ozs. (184.6 c.c.) each leg of one of the S.A.E. 20 oils specified. To deal with heavier loads than normal, the oil content may be increased to a permissible maximum of 10 fluid ozs. (284 c.c.) per leg. To increase damping oil of heavier grade may be used. It will be found, however, that for normal purposes the recommended grade and quantity of oil will give the most comfortable ride.

FRONT FORK "TOPPING UP"

No part of the **TELEHYDRAULIC** Front Fork requires individual lubrication, but it is advisable to check the oil content, once every five thousand miles. The normal content as already stated, is $6\frac{1}{2}$ fluid ounces (184.6 c.c.) each side.

Support motor cycle vertically with weight on both wheels. A steady under each footrest is the best method.

Remove the rubber grommet and unscrew the top bolts. These are on level with handlebars and attached to them are the damper rods. Have a graduated measure of not less than 10 fluid ozs. capacity available in which to catch and measure the oil. Remove the drain plug from the bottom of a slider and catch the oil which drains out. Then reinsert drain plug and work the top plugs to which damper rods are attached up and down (pumping action), making upward strokes as violent as possible but using only fingers to do so. This pumping action is to eject any oil trapped in the damper tubes above the damper disc valve. Wait two minutes and again remove drain plug. Repeat the action until no further oil can be drained off when, if the fork had the correct oil content, about 6 fluid ozs. (170.4 c.c.) will have been drained off. If less, add to make this quantity, or reduce if an excess quantity has been drained off. Next refit drain plug and carefully pour into the top of the tube being checked exactly 6 fluid ozs. (170.4 c.c.) after which the top plug may be replaced.

NOTE—Although the normal oil content of each side is specified as $6\frac{1}{2}$ fluid ozs., it is not possible to drain all the oil via the drain plug. This explains the lesser quantity of 6 fluid ozs. (170.4 c.c.) referred to above. However, if the fork is at any time completely dismantled and then reassembled in a dry state, it should be noted that in that event the correct quantity of oil to add to each leg is $6\frac{1}{2}$ fluid ozs. (184.6 c.c.).

TO REMOVE THE COMPLETE FRONT FORK ASSEMBLY

Support the machine with the front wheel clear of the ground. (A box, of suitable height, under each footrest is the best method.)

Remove the front wheel as described in Wheel Section.

Remove the front mudguard and stay.

Slacken the screw on head lamp top, gently prise out the rim and reflector assembly, detach with a slight rotary and lifting movement the cap to which head lamp wires are attached and take away rim and reflector assembly.

Gently ease back the rubber sleeves covering the pilot lamp wire snap connectors and pull latter apart.

Disconnect the driving cable from the speedometer head and draw same down through fork crown.

Remove the nuts on the tubular bolts through which the pilot lamp wires pass, which enables the pilot lamps to be taken away, leaving the head lamp shell, etc., free to be gently suspended by the wiring loom.

Remove the two nuts securing speedometer head and take same away.

Remove the handlebar half clip and lay the handlebars, complete with controls, upon a pad on top of the petrol tank.

Detach the front brake cable from the forks. (First remove the slotted yoke end and then completely unscrew the cable adjuster.)

Remove the rubber grommet and unscrew the top bolt on each inner tube, raise same and slacken the lock nuts securing the damper rods attached. Then, before removing the top bolts, attach a piece of wire about 18 inches long underneath each damper rod lock nut, to enable the damper rods to be raised for reassembly.

Remove domed nut at top of steering column.

Remove lock nut on steering column.

Use a soft mallet to tap upward the handlebar lug until it disengages with the fork stem (steering column) and main tubes. The fork assembly can then be withdrawn. (Take care to avoid loss of any of the 56 steering head steel balls.)

To re-fit a complete front fork assembly

Secure, with grease, 28 balls in fork crown ball race.

Secure, with grease, 28 balls in main frame top ball race.

Proceed to fit fork assembly by reversing the instructions given above to dismantle, carefully retightening the damper rod locknuts before inserting the hexagonal headed plugs to which they are attached.

TO REMOVE A FORK SLIDER (either side) (Dealers' service only)

Support the motor cycle with the front wheel clear of the ground, and unscrew the tubular slider extension from the slider which it is intended to remove. Special articulated clamp tool required. (Available in workshop tools.)

Next remove the front wheel, front stay and mudguard as detailed above. Then with a thin tubular box key, remove the bolt securing the damper tube. The hexagonal head of the bolt is sunk in the upper half of the wheel spindle clamp. Place a receptacle underneath to catch the oil which will drain out upon removing the bolt, and take care of the fibre washer located under the head. A sharp jerk downward should now enable the slider to be withdrawn, but should difficulty be experienced, apply a little heat to the enlarged top end of the slider. This will cause sufficient expansion to release the oil seal which is normally a snug push-in fit, in the top of the slider. The re-assembly is carried out in exactly the reverse order, again if necessary applying a little heat to enable the oil seal to be pushed down into the slider top before screwing in the slider extension. After completion, the oil which has escaped **MUST** be returned via the top. (See Front Fork "Topping up.")

TO REMOVE A FORK INNER TUBE ASSEMBLY (either side) (Dealers' service only)

Remove the rubber grommet, then with the spanner 018667 unscrew the top bolt of the inner tube it is intended to remove. The damper rod will now be partially withdrawn. Slacken the lock nut by which the damper rod is secured to the top bolt, unscrew the bolt and allow the damper rod to fall. It is not necessary to remove the adaptor. Next proceed to remove the slider as already detailed, except do not disturb the bolt securing the damper tube. This damper tube and protruding rod can be removed intact with the slider. Now loosen the fork crown clamping screw when it should be possible to draw the entire inner tube assembly down through the crown lug. Upon re-assembly, the inner tube is first pushed home as far as possible by hand and then pulled right home by screwing down the top hexagonal plug. With this plug tightened down, then proceed to tighten the crown clamping screw, after which the hexagonal plug may be removed and a piece of wire passed down through the inner tube. Loop the bottom end of this wire underneath the damper rod lock nut. The slider is then carefully pushed upward while at the same time pulling on the wire until the top end of the damper rod projects sufficiently to permit the screwed plug to be attached and secured with the lock nut, after which the wire may be removed. It may be found necessary to apply a little heat to enable the oil seal to be pressed home with the fingers before screwing on the tubular extension.

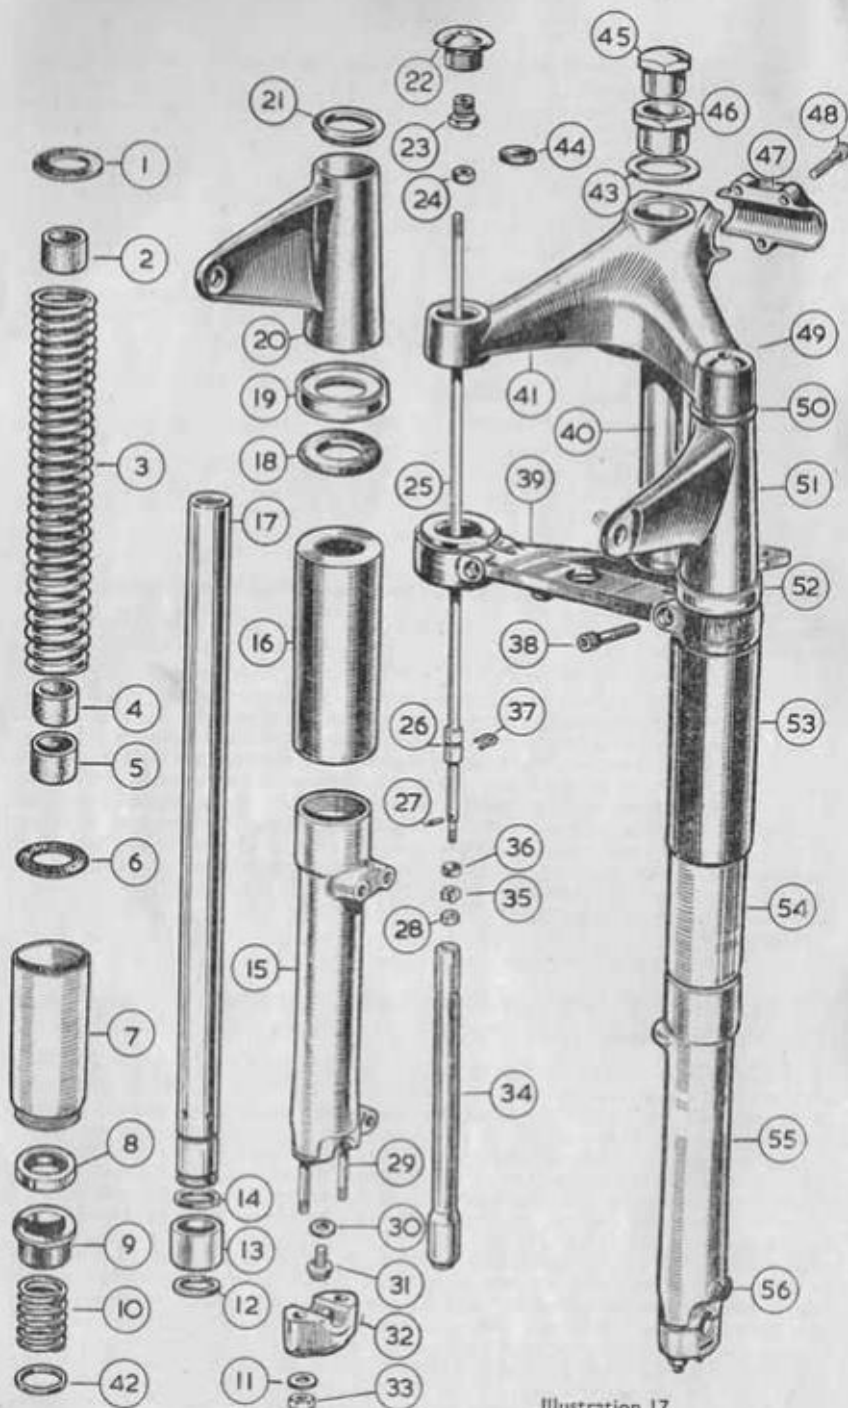


Illustration 17
Exploded view of Teledraulic Forks

REF.
NO.

DESCRIPTION

- 1 WASHER, LEATHER, FOR FORK SPRING TOP SEATING.
- 2 BUFFER, RUBBER, FOR FORK INNER TUBE.
- 3 SPRING, MAIN, FOR FRONT FORK.
- 4 BUFFER, RUBBER, FOR FORK INNER TUBE.
- 5 BUFFER, RUBBER, FOR FORK INNER TUBE.
- 6 WASHER, LEATHER, FOR FORK SPRING BOTTOM SEATING.
- 7 EXTENSION, FOR FORK SLIDER.
- 8 OIL SEAL, FOR FORK INNER TUBE.
- 9 BUSH, TOP, PLASTIC, FOR INNER TUBE.
- 10 SPRING, BUFFER, FOR FRONT FORK.
- 11 WASHER, PLAIN, FOR FORK SLIDER CAP SECURING STUD.
- 12 CIRCLIP, LOCATING FORK INNER TUBE BOTTOM BUSH.
- 13 BUSH, BOTTOM, STEEL, FOR FORK INNER TUBE.
- 14 CIRCLIP, LOCATING, FORK INNER TUBE BOTTOM BUSH.
- 15 SLIDER, FOR FORK, WITH STUDS (RIGHT SIDE).
- 16 TUBE, FORK COVER, BOTTOM.
- 17 TUBE, FORK, INNER.
- 18 RUBBER RING FOR TOP COVER TUBE HOUSING RING.
- 19 HOUSING RING, TOP COVER TUBE.
- 20 TUBE, FORK COVER, TOP, RIGHT, WITH LAMP LUG.
- 21 SPIGOT RING TOP COVER TUBE.
- 22 BOLT, TOP, FOR FORK INNER TUBE.
- 23 ADAPTOR.
- 24 NUT, LOCK, FOR TOP END OF DAMPER ROD.
- 25 ROD, FOR FORK DAMPER.
- 26 SLEEVE, PLUNGER, ON FORK DAMPER ROD.
- 27 PIN, STOP, FOR FORK DAMPER VALVE.
- 28 NUT, LOCK, FOR DAMPER VALVE SEAT.
- 29 STUD, SECURING CAP TO FORK SLIDER.
- 30 WASHER, FIBRE, FOR DAMPER TUBE BOLT.
- 31 BOLT, FIXING DAMPER TUBE TO SLIDER.
- 32 CAP, FOR FORK SLIDER.
- 33 NUT, FOR FORK SLIDER CAP SECURING STUD.
- 34 TUBE, FOR FORK DAMPER.
- 35 SEAT, FOR FORK DAMPER VALVE.
- 36 VALVE, FOR FORK DAMPER.
- 37 CLIP RETAINING DAMPER ROD SLEEVE.
- 38 SCREW, PINCH, FOR FORK CROWN.
- 39 FORK CROWN.
- 40 STEM, FOR FORK CROWN. | NOT SOLD SEPARATELY.
- 41 LUG, FOR HANDLEBAR AND STEERING HEAD.
- 42 COLLAR FOR BUFFER SPRING.
- 43 WASHER FOR FORK STEM ADJUSTING NUT.
- 44 RING, RUBBER, SEALING, FOR INNER TUBE TOP BOLT.
- 45 NUT, LOCK, FOR FORK STEM.
- 46 NUT, ADJUSTING, FOR FORK STEM.
- 47 CLIP (HALF ONLY), FOR HANDLEBAR LUG.
- 48 SCREW, PINCH, FOR HANDLEBAR CLIP.
- 49 BOLT, TOP, FOR FORK INNER TUBE.
- 50 SPIGOT RING TOP COVER TUBE.
- 51 TUBE, FORK COVER, TOP, LEFT, WITH LAMP LUG.
- 52 HOUSING RING TOP COVER TUBE.
- 53 TUBE, FORK COVER, BOTTOM.
- 54 EXTENSION, FOR FORK SLIDER.
- 55 SLIDER FOR FORK WITH STUDS (LEFT SIDE).
- 56 SCREW, PLUG, WITH FIBRE WASHER, FOR FORK SLIDER OIL DRAIN HOLE.

REAR SUSPENSION

The rear wheel is mounted in a fork that is hinged just behind the gear box. The hinge has robust plain bearings lubricated from a reservoir of $1\frac{1}{2}$ fluid ounces (42.6 c.c.) of heavy gear oil which is sufficient to last almost indefinitely. Provision is, however, made for replenishment should same be required. A small screw will be observed in the right-hand end cap of the hinge bearing, upon removal of this screw, oil can be injected into the reservoir, the screw orifice operating as a level control.

On a new machine, or after replenishment, oil may leak from this bearing. This is of no consequence and the leakage will cease after a few hundred miles have been covered.

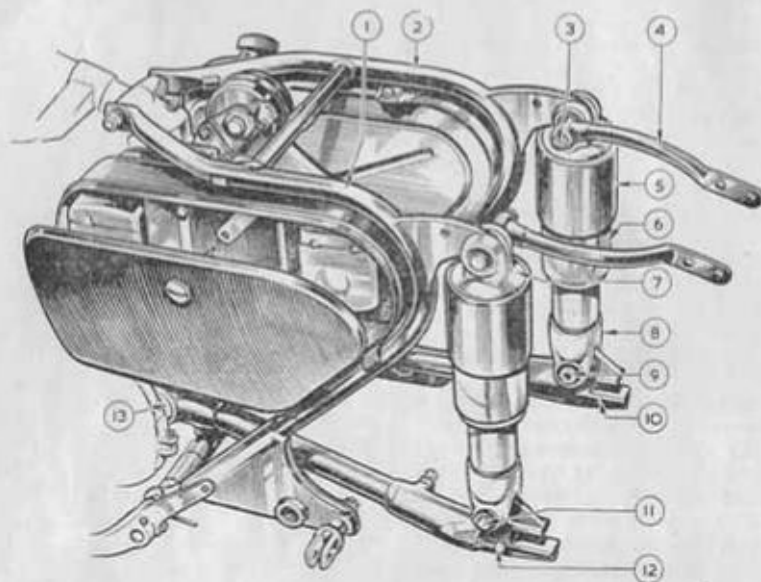


Illustration 18

Rear sprung frame and "TELEDRAULIC" legs

- | | |
|------------------------------|-------------------------|
| 1. MAIN FRAME LEFT LOOP. | 8. BOTTOM PIVOT BODY. |
| 2. MAIN FRAME RIGHT LOOP. | 9. BOTTOM PIVOT NUT. |
| 3. TOP PIVOT BOLT AND NUT. | 10. FORK END. |
| 4. TUBULAR MUDGUARD SUPPORT. | 11. BOTTOM PIVOT BOLT. |
| 5. TOP COVER TUBE. | 12. CHAIN ADJUSTER. |
| 6. BOTTOM COVER TUBE. | 13. FORK HINGE BEARING. |
| 7. TOP PIVOT BODY. | |

The rear wheel fork is suspended on springs located in the two "TELEDRAULIC" legs joining the rear of the fork to the main frame rear loops, and the spring action is damped by hydraulic dampers identical in design to those used in the "TELEDRAULIC" Front Fork Assembly.

The hydraulic fluid used is one of the grades of oil specified in the Lubrication Section for use in the "TELEDRAULIC" Front Forks.

The recommended quantity for each leg is 85 c.c. or a trifle under 3 fluid ozs. of S.A.E. 20 grade of one of the brands specified. For abnormal loads, the next heavier S.A.E. grade may be used, but unlike the front fork, recoil damping as well as maximum load capacity is increased by this alteration of grade alone, and under no circumstances should the oil content of each leg exceed 90 c.c. or roughly $3\frac{1}{2}$ fluid ozs. Unless serious doubt exists as to correct functioning of the rear legs, owners are advised to leave well alone. Should the need arise, however, the oil content of each leg should be separately checked as follows:

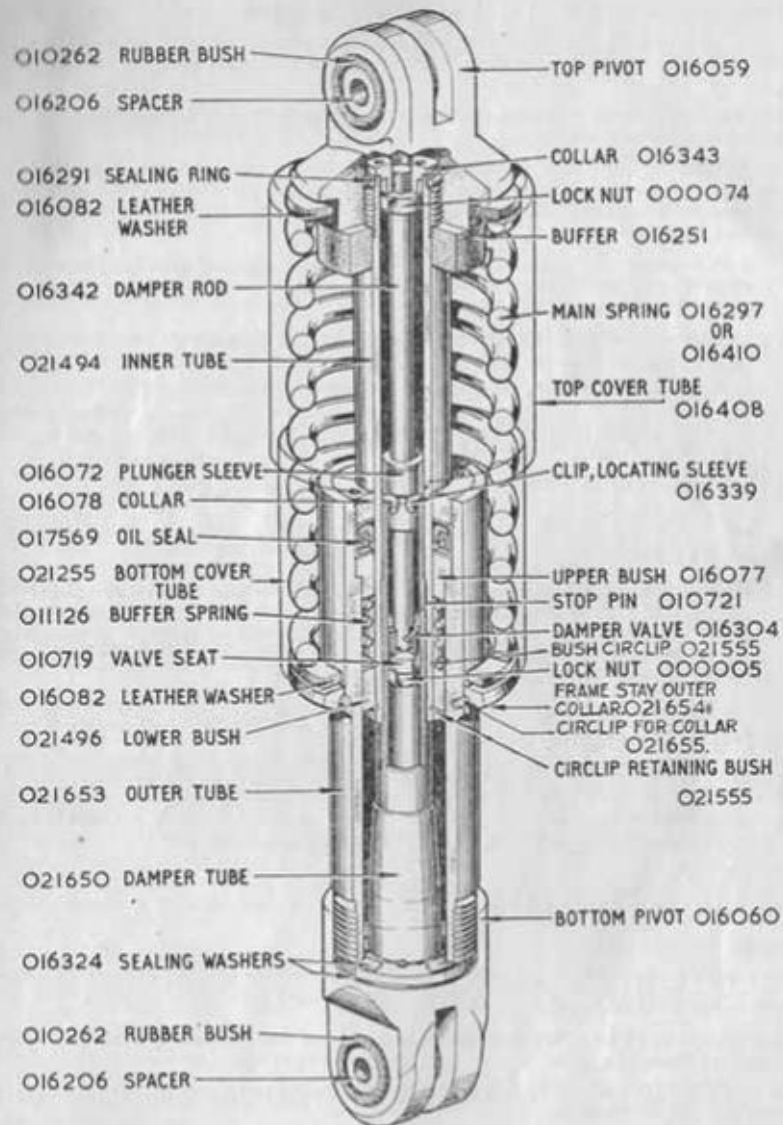


Illustration 19

"Ghost" view of "TELEDRAULIC" leg

To check oil content of "TELEDRAULIC" leg and top-up :

Dealing with one leg at a time, remove top securing bolt, taking care to observe the location of the spacing washers on it. Remove bottom securing bolt and take away the leg.

Using a suitable clamp encircling the outer tube adjacent to the bottom pivot lug, grip in a vice and loosen the pivot lug.

Then holding leg vertically, bottom end uppermost, carefully remove the loosened pivot lug, and gripping the exposed end of the damper tube with the fingers, raise and lower several times (pumping action) after which pour the oil contents into a graduated measure.

It may be necessary to repeat the pumping action to eject oil from underneath the damper valve, and finally the open end of tube should be supported above the measure and left to drain for several minutes.

If the leg contained the correct amount of oil, 75 c.c. (2½ ozs.) should have been drained out into the graduated measure, leaving 10 c.c. (½ oz.) which cannot be withdrawn.

All that now remains is to pour carefully back into the leg exactly 75 c.c. (2½ ozs.) of oil, after which the pivot lug may again be screwed on and securely tightened down to prevent oil leakage when the leg is re-fitted, after which the other leg may be dealt with in a similar manner.

NOTE.—Shortage of oil is evidenced by very lively action.

PROP STAND

The prop stand hinges on a bolt which passes through a lug brazed to the frame and screws into the jaw of the stand leg. It is then locked by a nut and split pin. Care in tightening this bolt is necessary to avoid pinching, and it is essential to observe after securely tightening the lock nut that the stand is perfectly free. Smear the hinge bolt with engine oil before replacing it.

CENTRE STAND

The centre stand is mounted on a bolt set across the bottom rear of the main frame and is removed by taking off a nut of the centre bolt and pushing bolt through the frame. During removal and replacement the stand should be in a horizontal position in order to take off as much of the tension off the return spring as is possible.

TO REMOVE OIL TANK

Remove the twinseat.

Remove the frame cover. It is held in position by two large knurled and slotted screws.

Remove the oil tank drain plug and empty the tank.

Disconnect the oil feed and return pipes from the bottom of the tank by sliding the rubber connectors down the pipes.

The tank is held in position by four brackets and nuts and bolts, two at the top, one at the front, and one at the back.

Remove the nuts, bolts and washers, lift the tank away from the frame a few inches, and disconnect the vent pipe. The tank is now free. To refit, reverse the foregoing instructions.

TO REMOVE THE REAR CHAIN GUARD

Remove the rear wheel. (See Wheel Section).

Remove the bolt retaining the front end of the chain guard to the rear fork.

Remove the bolt retaining the rear end of the chain guard to the rear fork. (There is one spacer on this bolt, between the two sides of guard.)

WHEELS AND BRAKES

TO REMOVE FRONT WHEEL

Place machine on centre stand.

Remove the split pin, and pin, retaining yoke end of front brake cable to the brake expander lever.

Remove bolt retaining brake anchor stay to brake cover plate.

Slacken the nut on the left-hand end of front wheel spindle.

Remove the four nuts retaining the caps to the fork sliders, which will permit the removal of the two caps and, putting pressure on the front wheel (in order to decrease the effective height of the wheel spindle) the wheel can be withdrawn towards the front.

NOTE—The two caps **MUST** be re-fitted in same order and position as originally. Therefore, lay them aside so that the order and position of assembly will be correctly made.

TO RE-FIT FRONT WHEEL

Holding the left side cap on the wheel spindle, offer wheel up so as to engage the cap with its securing studs. Then apply fixing nuts and washers but only loosely tighten.

NOTE—To pass the wheel spindle into position it may be necessary to apply pressure to flatten the tyre so as to enable the spindle to pass the forward fixing studs.

Next fit the right side cap and again only loosely tighten the securing nuts. Now attach the brake anchor arm and refit the yoke end pin.

Next fully tighten the nuts securing the left side cap, taking care to keep the gap fore and aft approximately equal. Then tighten the left side spindle nut and lastly the nuts securing the right side cap.

Should any fork stiffness be apparent after refixing the front wheel, loosen the nuts securing the right side cap and after working the fork up and down violently, retighten. This action will ensure that the wheel clamp occupies its natural position on the spindle end on which it is intentionally not positioned.

TO REMOVE QUICKLY DETACHABLE REAR WHEEL

Place the machine on the centre stand. Loosen the bolt in the rear most position on each tubular member to which the detachable rear portion of the mudguard is secured. Also slacken off the two bolts securing the two portions of mudguard together. Disconnect the snap connectors of the rear lamp wire when the rear portion of mudguard is free to be taken away.

Disconnect speedometer drive by unscrewing the cable gland nut and withdrawing drive cable end from the speedometer gear box. Then remove the wheel spindle end nut and washer and withdraw spindle together with distance collar which will fall as spindle is withdrawn. The wheel is now free to be removed.

In refitting it will be found best to offer up the wheel, insert spindle without the distance collar and after engaging the driving pegs hold wheel in situ, withdraw the spindle and insert the distance collar.

Upon tightening the spindle end nut make certain the collar end of the spindle is in contact with the chain adjusting screw to ensure correct wheel alignment. Also see that the speedometer gear box is positioned correctly.

WHEEL BEARINGS AND ADJUSTMENT

The wheel bearings are of taper roller type. See illustrations. The outer cups for the rollers are pressed into the hub shell. They have a fixed location one side and an adjustable location on the other. The fixed location is provided by a circlip in a groove cut in one end of the hub shell, while the adjustable location is regulated by a screwed ring that is threaded into the opposite end of the hub and the position of which can be locked by an encircling nut.

On each wheel the adjusting ring is located on the right-hand side.

It is rarely necessary to make adjustment to wheel bearings. It is most important they are not adjusted too tightly as this would quickly ruin them. There must always be a slight amount of end play. This should be about .002", which represents a just perceptible rim rock.

A service method of ensuring correct adjustment is:

Slacken the lock nut.

Tighten the adjusting ring until all slackness has been taken up.

Slacken back the adjusting ring exactly one-half turn.

Tighten the lock nut, making sure that, when doing so, the adjusting ring does not creep round, and the cover disc positioned to permit grease gun application to the nipple.

TO DISMANTLE FRONT WHEEL BEARINGS

Refer to Illustration 21, page 55.

Remove wheel from machine.

Remove nut securing brake cover plate, withdraw cover plate with brake shoes, etc.

Then remove brake cover positioning nut and washer.

Then turn to the right hand side of wheel, remove adjusting ring lock nut and lift off cover disc.


Then completely unscrew the adjusting ring.

Now carefully apply pressure to the threaded end of the wheel spindle which will eject from the opposite end of the hub, the washer (7) oil seal (8) and oil seal cup (9) together with the bearing outer ring (6). The wheel spindle with its two sets of rollers in cages may now be lifted out leaving in situ only the fixed bearing ring together with the oil seal, washer and cup for that side bearing.

If it is desired to remove these pressure is first applied to the visible washer, by which the assembly is forced inward sufficiently to permit extraction of the retaining circlip after which through the medium of a mandrel or a piece of tubing of external diameter a trifle smaller than the hub bore apply pressure to the inner edge of the fixed bearing ring so that it is forced out of the hub end. As it emerges it will push out the end washer (2) the oil seal (3) and the oil seal encircling collar (4) and the inner washer (5).


To refit reverse the above procedure remembering that after bearing ring (6) washer (5) spacer (4) oil seal (3) and washer (2) have been inserted, to refit the circlip (1) snugly in its groove and to then apply pressure to the inner edge of the bearing ring to force the assembly tightly back against the retaining circlip.

Finally position the disc when tightening the adjusting ring lock nut so that access to the grease nipple is possible.

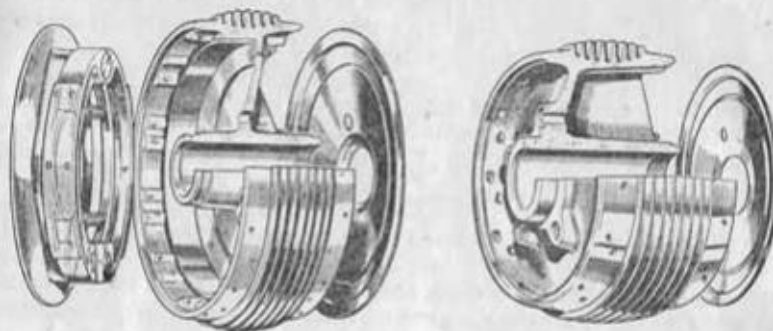

Front and rear hubs

Illustration 20

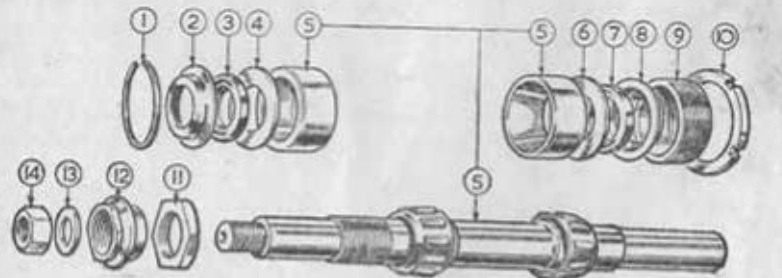

1. CIRCLIP
2. OIL SEAL CUP
3. OIL SEAL
4. WASHER RETAINING SEAL
5. WHEEL SPINDLE COMPLETE

6. WASHER RETAINING SEAL
7. OIL SEAL
8. OIL SEAL CUP
9. ADJUSTING RING

10. ADJUSTING RING LOCKNUT
11. NUT LOCATING BRAKE COVER PLATE
12. NUT SECURING BRAKE COVER PLATE
13. SPINDLE END WASHER
14. SPINDLE END NUT

Front wheel bearings

Illustration 21

TO DISMANTLE REAR WHEEL BEARINGS

Refer to Illustration 22, page 57.

With wheel still in situ first of all slacken the nut (16) securing the speedometer drive gear box. Then remove the wheel from cycle when the above nut should be removed and the speedometer gear box withdrawn.

Next, slacken the adjuster sleeve lock nut (13) and completely unscrew the adjuster sleeve (14) which will come away together with the sleeve upon which speedometer drive is mounted and also the cover disc. Then withdraw the washer (3) the oil seal (4) and the oil seal cup (5).

Now turn to the brake side of wheel and using a short bar of $\frac{3}{4}$ " external diameter apply pressure to the end of the projecting sleeve, which pressure will force out wheel bearing ring (7) together with the two taper roller bearings (7) and the spacing sleeve (8), leaving in situ only the bearing ring on the brake side together with oil seal, washers and retaining circlip.

If it is desired to remove this spacer bearing ring pressure must be applied to the cup washer immediately under the circlip until it is possible to extract the circlip. The outer cup washer (5) the oil seal (4) and the spacer (6), etc., are then free to be withdrawn. The bearing ring may then be forced out of the end of the hub bore by applying pressure to its inner edge through the medium of a bar or tube of suitable diameter passed through the hub bore.

Re-assembly is carried out in exactly reverse order, care being necessary after pressing in the brake side bearing ring sufficiently far to permit fitting the circlip, to then force the ring back until cup washer (5) is tightly in contact with the retaining circlip before proceeding with further assembly.

Final adjustment of the bearings should allow the slightest possible degree of end play and when correctly adjusted just perceptible rim rock upon refitting the wheel should be observable.

NOTE—Upon tightening the adjusting ring nut (13) the cover disc must be positioned to permit application of the gun to the grease nipple, the hole in disc being provided for that purpose.


FRONT BRAKE COVER PLATE

It is most important the front brake cover plate is correctly positioned.

It is retained to the front wheel spindle by an inside nut (part number 021931) and an outside nut (part number 018171).

The inside nut must be positioned so that, when the cover plate is applied, the outer face of the latter lies flush with the hub shell edge.

The outside nut is fitted so that its hexagonal side is against the brake cover plate.

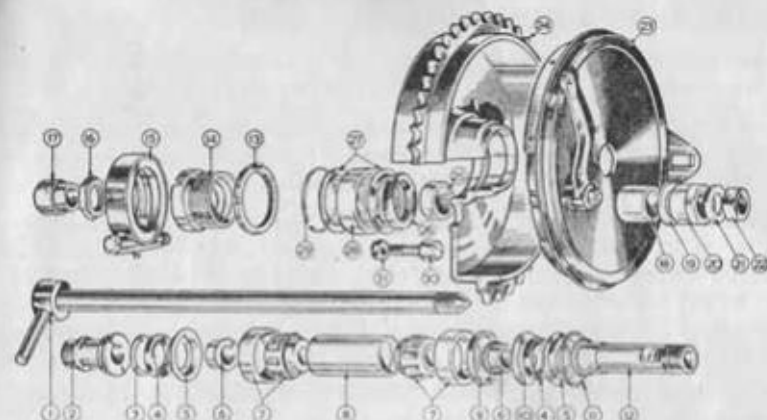

Rear brake and wheel bearings

Illustration 22

- | | |
|--|--|
| 1 WITHDRAWABLE WHEEL SPINDLE | 17 SPACER FOR WITHDRAWABLE SPINDLE. |
| 2 SPEEDOMETER GEAR BOX SLEEVE. | 18 OUTER SPACER FOR BRAKE COVER PLATE. |
| 3 RING RETAINING OIL SEAL (Small). | 19 WASHER FOR COVER PLATE FIXING NUT. |
| 4 OIL SEAL. | 20 BRAKE COVER PLATE FIXING NUT. |
| 5 CUP FOR OIL SEAL. | 21 SPINDLE END WASHER. |
| 6 OIL SEAL DISTANCE PIECE. | 22 SPINDLE END NUT. |
| 7 TAPER ROLLER BEARING COMPLETE. | 23 BRAKE COVER PLATE COMPLETE. |
| 8 SPACER BETWEEN BEARINGS. | 24 REAR BRAKE DRUM. |
| 9 BEARING SPACING COLLAR (Brake Side). | 25 INNER SPACER FOR BRAKE COVER PLATE. |
| 10 RING RETAINING OIL SEAL (Large). | 26 BRAKE DRUM BEARING OIL SEAL. |
| 11 CIRCLIP. | 27 BRAKE DRUM OIL SEAL WASHERS. |
| 12 BRAKE DRUM DUMMY SPINDLE. | 28 BRAKE DRUM BALL BEARING. |
| 13 LOCK NUT FOR ADJUSTING RING. | 29 CIRCLIP RETAINING BEARING. |
| 14 ADJUSTING RING. | 30 DRIVING PEG (5 OH). |
| 15 SPEEDOMETER GEAR BOX COMPLETE. | 31 NUT SECURING DRIVING PEG (5 OH). |
| 16 SPEEDOMETER GEAR BOX FIXING NUT | |

BRAKE DRUMS

The front wheel brake drum is a shrunk in fit in the hub shell (assembled under heat) and secured additionally by five screws.

The rear brake drum is mounted on a separate ball bearing and the drive to rear wheel is by means of five studs projecting from the hub face which engage with holes in the drum back face, thereby permitting removal of the rear wheel with the brake drum still in situ.

BRAKE SHOES

The front and rear brake shoes, springs and expanders are interchangeable. The two shoes in each brake are **NOT** identical, they are "handed."

One end of each shoe bears on a fulcrum fixed in the brake cover plate. The other end accommodates a detachable thrust pin. By inserting washers under a thrust pin its effective height can be increased, thereby compensating for wear on the brake linings.

BRAKE SHOE ADJUSTMENT

Brake adjustment, to compensate for lining wear, is normally made by means of a finger adjuster on the rear brake rod and a cable adjuster for the front brake cable.

After a very considerable mileage this continual adjustment causes the brake cam to occupy a position whereby the available leverage is considerably reduced and, as a result, the brake loses efficiency. See illustrations 24 and 25.

To overcome this a hardened headed thrust pin is fitted to each shoe to enable a packing washer to be fitted under the head as, and when, required. Eight of these washers (000174) are provided in the tool kit. When wear of the brake linings is taken up in this manner it is then necessary to unscrew considerably the adjusting nut on the rear brake rod, or screw in the cable adjuster of the front brake cable, and afterwards adjust the brake, as described afterwards.

When a brake cover plate has been disturbed, it is advisable, upon re-assembly, to centralise the shoes in the brake drum to ensure equal pressure to each. In the case of the front wheel this is best done before re-fitting the wheel to the machine, but in the case of the rear wheel it is best done after re-fitting.

If brake shoes tend to squeak, when the brake is applied it is generally an indication the brake shoes are not centralised in the drum.

Centralise brake shoes by:

Ensure the nut securing the cover plate to the wheel spindle and also the fulcrum stud nut (front only) are slightly slackened off.

Place on the brake expander lever a tubular spanner (to increase the leverage), and, while maintaining pressure on the tubular spanner (to expand fully the brake shoes), fully tighten the spindle nut binding the cover plate to the spindle and also the nut on fulcrum stud.

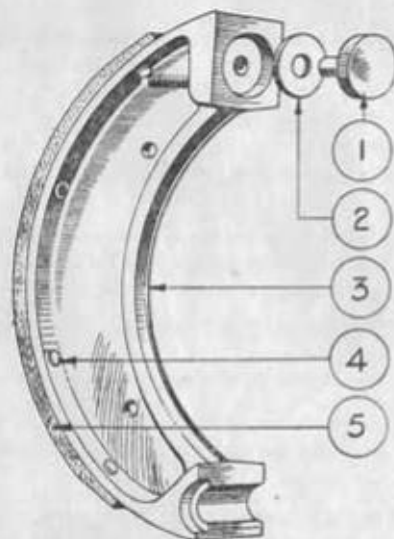


Illustration 23

- (1) Brake shoe thrust pin.
- (2) Thrust pin packing washer.
- (3) Brake shoe.
- (4) Rivet, securing brake shoe lining.
- (5) Brake Shoe Lining.

FRONT BRAKE ADJUSTMENT

Major adjustment of the front brake shoes is made on the brake thrust pins, by fitting packing washers under the pins, as already described.

Minor adjustment of the front brake shoes is made by altering the position of the brake cable adjuster on the fork assembly. Unscrew the adjuster to "take up" the front brake.

The adjuster is locked in position by a nut.

Adjust front brake by:

Place machine on centre stand.

Slacken lock nut on cable adjuster.

Unscrew the cable adjuster till, by rotating the front wheel, it can be felt the brake shoes are just touching the brake drum.

Then screw back the adjuster two complete turns and tighten the lock nut.

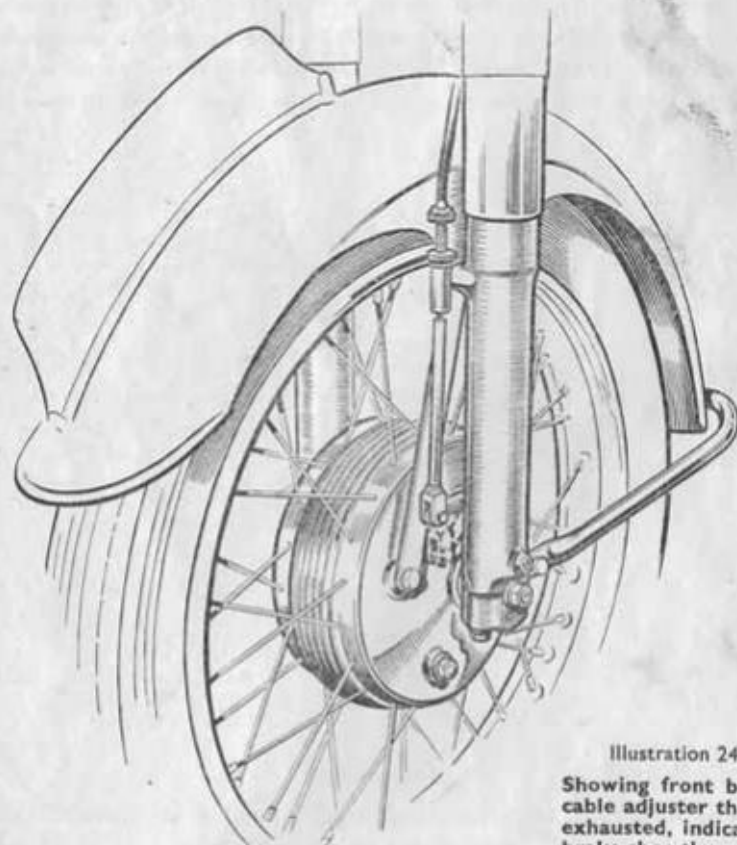


Illustration 24

Showing front brake cable adjuster thread exhausted, indicating brake shoe thrust pin adjustment is necessary.

REAR BRAKE ADJUSTMENT

Major adjustment of the rear brake shoes is made on the brake thrust pins, by fitting packing washers under the pins, as already described.

Minor adjustment of the rear brake shoes is made by altering the position, on the brake rod, of the knurled adjusting nut. Screw the nut further on the rod to "take up" the rear brake.

Adjust rear brake by :

Place machine on centre stand.

Screw further on the brake rod the knurled adjusting nut till, by rotating the wheel, it can be felt the brake shoes are just touching the brake drum.

Then unscrew the adjusting nut two complete turns. (The adjusting nut is automatically locked in position in virtue of the two projecting noses on it engaging in accommodating slots cut in the clip which connects the brake rod and brake expander lever and being retained in that position by the spring which encircles the rear end of the brake rod).

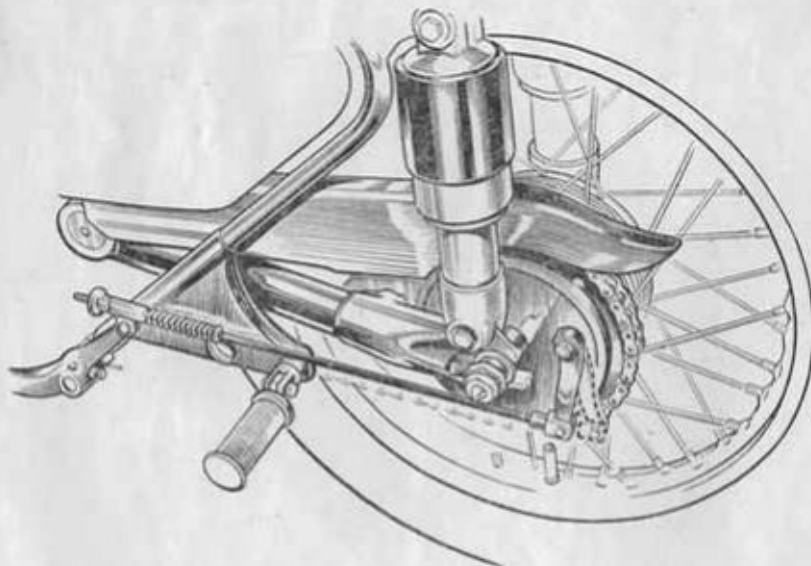


Illustration 25

Showing brake rod adjustment exhausted, indicating the need for brake thrust pin adjustment.

BRAKE PEDAL ADJUSTMENT


Refer to Illustration 26.

The Pedal is located by a spring-loaded sprag which lies between the stop on the pedal and the leg of hair pin spring.

To adjust the position of the pedal: slacken the spindle nut on the right hand side of the machine; move the pedal to the desired position; hold the pedal in this position and tighten the spindle nut.


The most suitable position for normal use is, with the brake "OFF", for the pedal just to be clear of the footrest rubber.

After altering the pedal position, check the rear brake adjustment.

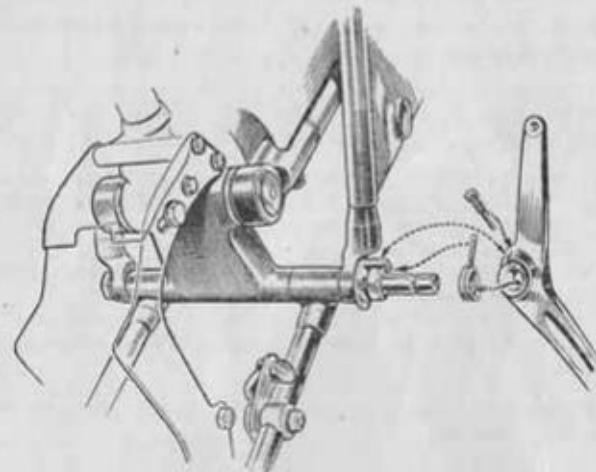

Pedal Position Adjustment

Illustration 26

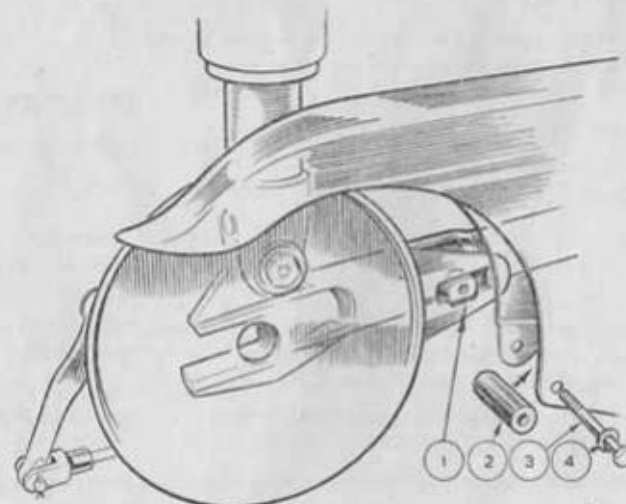

Brake Anchorage

Illustration 27

- 1 BRAKE ANCHORAGE BOSS.
- 2 SPACER.

- 3 FIXING BOLT.
- 4 WASHER.

TYRES AND SERVICE

Obtaining satisfactory life and service from the tyres is largely a matter within the user's control because the first essential is correct inflation. Check tyre pressures with a low pressure gauge at least once a week. Inflate as may be necessary.

Avoid unnecessary, or "stunt," acceleration and fierce braking, which wear out tyres by causing wheel spin and skid.

Do not drive in tram lines. It is dangerous, especially when wet, and the uprisings of worn rails will damage the tyres.

Remove flints, etc., that become embedded in the tread and, if any oil gets on the tyres or spokes, clean it off with petrol.

Make sure the front and rear wheels are in track. When the wheel alignment is correct, a piece of thin string stretched taut across both wheels, about four inches from, and parallel to, the ground, should just touch each tyre at both sides of the wheel centres.

Alternatively, a straight wooden batten, about seven feet long, is handy to use for checking wheel alignment. This should be applied, as in the case of string, parallel to and about four inches from the ground.

Always check the rear chain adjustment, and the rear brake adjustment, after making an alteration to the rear wheel position.

NOTE.—Above remarks on wheel alignment apply only to similar width tyres back and front.

On Models with larger rear tyre than front observe equal gap each side of latter when checking.

TYRE REMOVAL

It is not essential to remove a wheel from the machine to repair a puncture but it will usually be found desirable and more convenient to do so.

Take off outer cover and remove inner tube by :

Remove cap from tyre valve.

Remove nut from tyre valve.

Remove the "inside" from tyre valve. This allows inner tube to deflate. Most valve caps have a reduced and slotted top to engage with the valve "inside" in order to unscrew it.

Push edge of cover, that is diametrically opposite to the valve, **RIGHT INTO WELL OF RIM** and, using tyre levers 017007, pick up edge of cover **NEAR VALVE** so that it comes off over the edge of the rim.

Work off the remaining edge of the cover till it is clear of the rim. This is quite easy and there is no reason to use force.

Push upwards **valve stem** through its hole in the rim, and the inner tube is then free to be taken away.

Remove cover from rim by pushing it right into well of rim and, diametrically opposite, picking it up with the tyre lever and then working it off all the way round.

TYRE FITTING

Re-fit inner tube and outer cover by :

Place one edge of cover right into well of rim, with the three white dots on the cover side **adjacent to the valve hole**, and, commencing diametrically opposite, and using the hands only, work the cover over the edge of the rim.

Replace the valve "inside" and slightly inflate the inner tube. (Do not distend the tube).

Fit the valve into its hole in the rim and replace its nut, only screwing it on the valve stem about half an inch.

Tuck in the inner tube so that it lies snugly in the cover. Ensure it is not twisted.

Smear some soapy water round the free edge of the cover. This is a great help in fitting and in ensuring the cover centralises itself on the rim and should always be employed if at all possible.

Introduce the free edge of the cover into the rim at the spot diametrically opposite to the valve. Get this edge right into the well of the rim and then, by working round the cover, equally on either side of the valve position, the cover will slip into place without excessive exertion, fitting the part nearest to the valve last of all.

Slightly inflate the inner tube and inspect for the inner tube being trapped between the outside edge of the cover and the rim at the spots where the valve is located.

Half inflate tyre, spin wheel and test for trueness because it is essential the pattern of the tread runs evenly and the cover must be manipulated till that occurs. **This centralisation of the cover is most important.**

Inflate to required pressure.

Screw fully home the nut on the valve.

Replace the valve cap.

TYRE PRESSURES

The following are correct minimum inflation pressures for specified loads per tyre :

Load per tyre, 200 lb.	Pressure 16 lb. per square inch
do. 240 lb.	do. 18 lb. do.
do. 280 lb.	do. 20 lb. do.
do. 350 lb.	do. 24 lb. do.
do. 400 lb.	do. 28 lb. do.
do. 440 lb.	do. 32 lb. do.

The best method of ascertaining the correct pressure is to actually weigh the loads on the front and rear tyres. This should be done on a weighbridge and is a service that can usually be provided by British Railways at a Goods Depot or by a Corporation at its Depot.

When the weights are known the table above can then be used.

As a rough guide it may be stated that, with a rider of average weight and with normal equipment, solo, the pressures should be 18 lb. for the front tyre and 22 lb. for the rear.

ELECTRICAL SERVICE

ELECTRICAL EQUIPMENT

LUCAS electrical equipment is fitted and this comprises three independent electrical circuits, as follows:

- (1) **IGNITION**—Magnet, High-tension wires, Sparking plugs and Cut-out switch.
- (2) **CHARGING**—Dynamo Automatic Voltage Control Unit and Battery.
- (3) **LIGHTING AND ACCESSORIES**—Lamps, Horn, Switches and wiring.

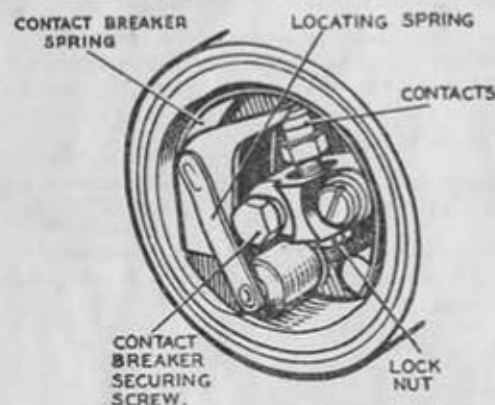


Illustration 28
Contact Breaker

IGNITION

A LUCAS type K2F magneto is fitted. The replacement part number is 42230-A and the part number of the complete contact breaker is 470534.

Lubrication and adjustment is required every 3,000 miles, cleaning is required every 5,000 miles and every 10,000 miles the complete unit should be handed to a Lucas Service Station for dismantling, replacement of worn parts, cleaning and lubrication.

Lubrication every 3,000 miles

(a) The cam is supplied with lubricant from a felt pad contained in a pocket in the contact breaker housing. A small hole in the cam fitted with a wick, enables the oil to find its way on to the surface of the cam. Remove the contact breaker cover and turn over the engine until the hole in the cam can be clearly seen and then carefully add a few drops of thin machine oil. (The hole is located in the lowermost part of the cam ring). Do not allow any oil to get on the contact points.

(b) The contact breaker rocker arm also requires lubrication and the complete contact breaker must be removed for this purpose. Take out the hexagon headed screw from the centre of the contact breaker and pull the contact breaker off the tapered shaft on which it fits. Then push aside the rocker arm retaining spring, prise the rocker arm off its bearing and lightly smear the bearing with clean engine oil. When replacing the contact breaker, take care to ensure that the projecting key, on the tapered portion of the contact breaker base, engages with the keyway cut in the magneto spindle, otherwise the timing of the magneto will be upset. Tighten the hexagon-headed screw with care; it must not be too slack, nor must undue force be used.

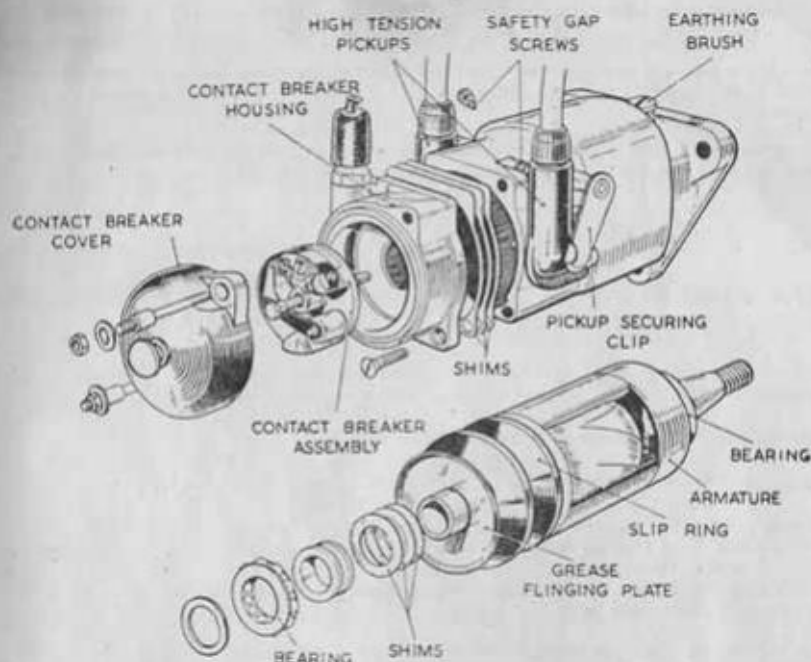


Illustration 29

Dismantled components of magneto

Adjustment every 3,000 miles

Remove the contact breaker cover and turn the engine until the contact points are fully opened. Check the gap with a gauge having a thickness of .012" (Spanner 015023 has a gauge of this thickness as an integral part of it). If the setting is correct the gauge should be a sliding fit, but if the gap varies appreciably from the gauge it should be adjusted.

Keep the engine in the position to give maximum opening of the contact points, slacken the lock nut on the fixed contact point and turn the contact screw, by its hexagon head (use spanner 015023) until the gap is set to the gauge. Finally, tighten the lock nut and re-check the setting.

Cleaning every 5,000 to 6,000 miles

Take off the contact breaker cover and remove the contact breaker. If the contact points are burned or blackened, clean them with a fine carborundum stone or with very fine emery cloth, and afterwards wipe away any dust or dirt with a petrol moistened cloth. After replacing the contact breaker check the point gap and, if necessary, re-set it.

Remove the high tension pick-ups (held by swinging spring clips), wipe clean and polish with a fine dry cloth. The high tension pick-up brush must move freely in its holder.

If it is dirty, clean with a cloth moistened with petrol. If the brush is worn to within $\frac{1}{8}$ " of the shoulder it must be renewed. Treat both pick-ups and their brushes.

While the pick-ups are removed, clean the slip ring track and flanges by holding a soft cloth on the ring by means of a suitably shaped piece of wood, while the engine is slowly turned.

If, on inspection, the high tension cable shows signs of perishing or cracking, it must be replaced by a suitable length of 7 mm. rubber covered ignition wire.

SPARKING PLUG

The K.L.G. Type FE80 "Corundite" Plug is fitted to all models.

It has a thread of 14 mm. and the reach is $\frac{3}{4}$ ". The point gap is .020-.022". Check the point gaps every time the engine is decarbonised and, if necessary, re-set the points.

See the plug is fitted with its external seating washer.

Coat the thread with "Oil Dag" or Graphite paste. (See page 32).

Firmly tighten the plug by using the standard box spanner and tommy bar (Part No. 017252.) All that is required is a GAS-TIGHT joint. Therefore do not over tighten, which will not make a gas-tight joint more gas-tight, but can, and possibly will, distort and damage the body of the plug.

Set the gaps to .020-.022". NEVER TRY TO MOVE THE CENTRAL ELECTRODE. To widen, or narrow, the gap between the electrodes, only move the earth (side electrodes). Check the gaps first with a gap gauge. If they are too wide, tap the earth (side electrodes) towards the central electrodes using preferably a small copper drift and light hammer. Check the gaps between each tap and stop when the gauge is a nice sliding fit between the central electrode and the three earth side electrodes.

If the gaps are too small to start with, gently lever the earth electrodes away from the centre electrode, using a small screwdriver, and then tap them back as described above. Avoid damaging the centre electrode and do not attempt to move the electrodes apart by forcing anything between them.

For maximum efficiency, plugs should be cleaned at every 3,000 miles. To take the plug to pieces for cleaning, unscrew the gland nut by holding the smaller hexagon on the gland nut upside down in a vice and then using the box spanner to unscrew the larger hexagon on the body.

Then lift away the central electrode assembly which should be washed in petrol or paraffin. Then, using fairly coarse glass paper, remove the carbon deposit and wash again.

The central firing point should be cleaned with fine emery cloth. The inside of the body should be scraped clean with a knife and finally rinsed in petrol.

There is an internal washer, between the insulator and its seating in the body. On re-assembly lightly smear this with thin oil and then screw up the gland nut sufficiently tight to give a gas-tight joint.

Finally adjust the gap to .020"—.022".



Illustration 30

Magneto removal and fitting

The magneto is "spigot fitting" and is retained to the crankcase by two studs and one bolt.

To remove the magneto it is necessary to :

Take away the timing gear cover.

Withdraw the driving gear from the magneto shaft. (Already described in the Engine Section).

Disconnect the high tension wires from the sparking plugs.

Disconnect the ignition control cable.

Remove the nuts from the two studs and one bolt that secure the magneto body to the crankcase and the unit is free to be taken away.

The re-fitting is done by the above procedure reversed and the method of timing has already been described in the Engine Maintenance Section.

DYNAMO

A LUCAS type E3L-LI-0 dynamo is fitted. It is anti-clockwise in rotation. The cutting in speed is 1,050—1,200 r.p.m. at 6.5 volts and at 1,850 to 2,000 revolutions per minute it gives an output of 8.5 amps at 7 volts. The positive brush is earthed. The two exterior terminals are marked "D" and "F," indicating the respective terminals for the Positive and Field wires that lead to similarly marked terminals on the Regulator Unit.

Inspect commutator and brush gear every 5,000 to 6,000 miles (Maker's Recommendation.)

Remove the dynamo (see page 68 for instructions.)

Remove the cover band to inspect commutator and brush gear.

The brushes are held in contact with the commutator by means of springs. Move each brush, see they are free to slide in their holders, if dirty, or if sticking, remove and clean with a cloth moistened with petrol. Take care to replace brushes in their original positions, otherwise they will not "bed" properly on the commutator.

If, after long service, the brushes have become worn to such an extent that the brush flexible wire is exposed on the running face, or if the brushes do not make good contact with the commutator, they must be replaced by genuine LUCAS brushes.

The commutator must be free from any trace of oil or dirt and should have a highly polished appearance. Clean a dirty, or blackened, commutator by pressing a fine dry cloth against it while the engine is slowly turned over by means of the kick-starter. (It is an advantage to remove the sparking plugs before doing this). If the commutator is very dirty, moisten the cloth with petrol.

At every 10,000 miles, the complete dynamo should be handed to a Lucas Service Station for dismantling, replacement of worn parts, cleaning and lubrication.

Electrical breakdown of the dynamo is most unusual and therefore before assuming this unit is defective, it should be tested as follows :

Check that the dynamo, regulator and battery are correctly connected.

Test Dynamo in position by :

- Remove the two wires from the dynamo terminals and connect the two terminals with a short length of wire.
- Start the engine and set to run at normal idling speed.
- Connect the negative lead of a moving coil voltmeter (calibrated not less than 0 to 10 volts) to either of the two dynamo terminals and connect the positive lead to a good earth point on the dynamo or engine.
- Gradually increase the engine speed, when the voltmeter reading should rapidly rise and without fluctuation.

Do not allow the voltmeter reading to rise above 10 volts.

Do not race the engine in an attempt to increase the voltage. It is sufficient to run up the engine to a speed of 1,000 r.p.m.

If the above reading is obtained the dynamo is in order.

If there is no reading, check the brush gear.

If there is a low reading of approximately $\frac{1}{2}$ volt, the field winding may be at fault.

If there is a low reading of approximately $1\frac{1}{2}$ to 2 volts, the armature winding may be at fault.

If the tests, mentioned above, clearly indicate the dynamo is not charging, it is then desirable to remove the dynamo from the machine in order to make further tests and repairs or replacements.

To remove and re-fit dynamo

The dynamo rests on a cradle forming part of the crankcase and is retained by a band having an adjustable clamping action and one stud passing through timing gear case. It is rotated by a gear meshing with the timing gear wheel on the exhaust cam shaft.

Upon merely slackening the clamping strap and removing the sleeve nut on the outside of timing cover, the dynamo, complete with its driving gear, can be withdrawn from the crankcase. The two wires from dynamo to regulator unit are retained by an insulated bridge secured by one screw and, upon removing that screw, the bridge, with the two cables, can be taken away from the dynamo.

A.V.C. UNIT

Although the voltage regulator and the cut-out are combined structurally, they are electrically separate.

The regulator is set to maintain a pre-determined generator voltage at all speeds and regulates the output of the dynamo to the battery according to the state of charge of the battery. The charge rate is at its maximum when the battery is discharged, automatically tapering off to a minimum as the battery becomes charged and its voltage rises.

Normally, during day-time running, when the battery is in good condition, the dynamo gives only a trickle charge, so that the ammeter reading will seldom exceed 1 to 2 amperes, i.e. $\frac{1}{2}$ Half to one division of scale.

The cut-out is an automatic switch which is connected between the dynamo and the battery. When the engine is running fast enough to cause the voltage of the dynamo to exceed that of the battery the cut-out allows the battery to be charged by the dynamo. On the other hand, when the engine speed is low, or the engine is stationary, the cut-out disconnects the battery from the dynamo, thereby preventing current flowing back from the battery to the dynamo, a proceeding that would soon cause the battery to become completely discharged.

The regulator and cut-out are accurately set during manufacture and the cover protecting them is therefore sealed. If, under normal running conditions, it is found that the battery is continually in a low state of charge, or is being constantly overcharged, then the regulator setting should be checked by a qualified electrician and, if necessary, re-set. Whenever possible, this should be carried out by a Lucas Service Depot or Agent.

TO REMOVE A.V.C. UNIT

The A.V.C. unit is held in sponge rubber and housed in a partition at the rear top corner of the tool box. To remove it, open the box lid, grasp the unit between the fingers and thumb of one hand, and gently and firmly pull it out of the rubber envelope.

The four terminals of the A.V.C. Unit are plainly marked by the letters F.A.D.E. Wires from F and D go to similarly marked terminals on the dynamo. The A terminal is connected to one of the ammeter terminals and the E terminal is "earthed."

We specially warn against unskilled meddling with the settings of the regulator and the cut-out contacts.

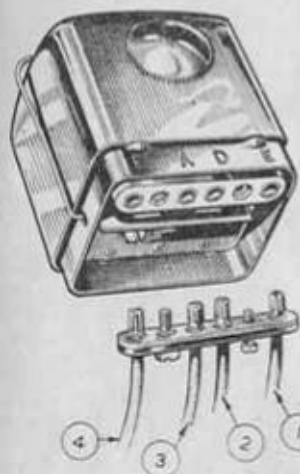


Illustration 31

Connections to regulator and cut-out unit

BATTERY

The battery fitted is LUCAS type. This is a lead-acid battery in which the electrolyte is in free liquid form. The voltage is 6 and the capacity is 12 ampere hours.

BATTERY REMOVAL

The battery is housed in the front portion of the tool box and retained in position on its platform by a stout rubber strap.

To remove the battery, release the strap by grasping the metal loop attached to its lower end, pull downwards until the strap and loop are freed from the retaining clip at the base of the platform, and allow the strap to go slack. The battery can now be lifted out.

Once every fourteen days, remove the battery, lift off the cover and brush away any dirt that may have accumulated. Remove the three vent plugs and check the electrolyte level and the specific gravity.

NOTE—NEVER bring a naked light near a battery when the vent plugs have been removed, or when the battery is being charged, as the gas given off by the electrolyte is highly explosive.

The specific gravity of the electrolyte indicates the state of charge of the battery. With a fully charged battery the specific gravity of the electrolyte should be 1.280 to 1.300. Check the gravity by means of a hydrometer, and if it is below 1.150 the battery should be charged as soon as possible by the normal running of the motor cycle. If this cannot be arranged, the battery should be charged from an external source.

If the level of the electrolyte is so low that a hydrometer reading cannot be taken, no attempt should be made to take a reading after adding distilled water until the battery has been on charge for at least 30 minutes.

NEVER transfer the electrolyte from one cell to another.

NEVER leave a battery in a discharged condition. It must be put on charge as soon as possible.



Illustration 32
Lucas Battery

Check if the electrolyte in each cell is level with the top of the separators. Top-up, is necessary, with distilled water. Do not allow the distilled water to come into contact with metals—always only use a glass or earthenware container and funnel. See filling instructions on underside of battery lid. Beware excessive filling.

If a battery is found to need an excessive amount of topping up, steps should be taken to find out the reason. For example, the battery may be receiving an excessive charge, in which case the regulator setting may need adjustment. If one cell in particular needs topping up more than another, it is likely the case, or container, is cracked, in which event the battery must be replaced and arrangements made to clean up the battery carrier.

Metal parts should be well cleaned and, if possible, washed, with a solution of ammonia, or bicarbonate of soda, in water.

Vent plugs should be kept clean and air passages in them kept free. Re-fix vent plugs tightly.

Keep the battery, and surrounding parts, particularly the tops of the cells, clean and dry. Brush away any sand, dust or road slush.

Battery electrolyte, which contains sulphuric acid in a diluted form, is destructive to practically everything except rubber, lead, glass or earthenware. Therefore, rags used to clean battery tops, etc., should be thrown away afterwards. If put back in the tool box they will cause the tools to rust.

Assuming the temperature of the electrolyte is about 60° F. a test with a hydrometer quickly shows the state of charge, as under :

Reading 1.280 to 1.300 indicates fully charged.

Reading about 1.210 indicates half discharged.

Reading below 1.150 indicates fully discharged.

If the electrolyte exceeds this, .002 must be added to the hydrometer reading for each 5° F. rise to give the specific gravity at 60° F. Similarly, .002 must be subtracted from the hydrometer reading for every 5° F. below 60° F.


LIGHTING AND ACCESSORIES

Headlamp

A LUCAS headlamp is fitted and snugly mounted, on each side is a neat torpedo shaped pilot lamp. These pilot lamps and also the head lamp are secured to the front fork arms by means of tubular bolts through which a wire passes to each pilot lamp. The headlamp bulb has two filaments one of which provides the main driving beam and the other a dipped beam brought into operation as required by the dipping switch on the left handlebar. The headlamp reflector and glass are made up as one assembly and are in consequence not sold separately as spares. The main bulb is of the pre-focus type and the design of its holder is such that the bulb is correctly positioned in the reflector. No focussing is therefore necessary when a replacement bulb is fitted. See Controls page 9 for switch functions.

To remove headlamp rim and light unit

Slacken the screw on the top of the lamp body at the front, pull the rim outward from the top and, as the front comes away, lower slightly to disengage the bottom tag from the lamp shell. Twist the back cap in an anti-clockwise direction and pull it off, the bulb can then be removed. The light unit is secured to the rim by means of spring clips. These can be disengaged from the turned up inner edge of the rim by pressing with a screwdriver blade and, at the same time, working away from the edge.

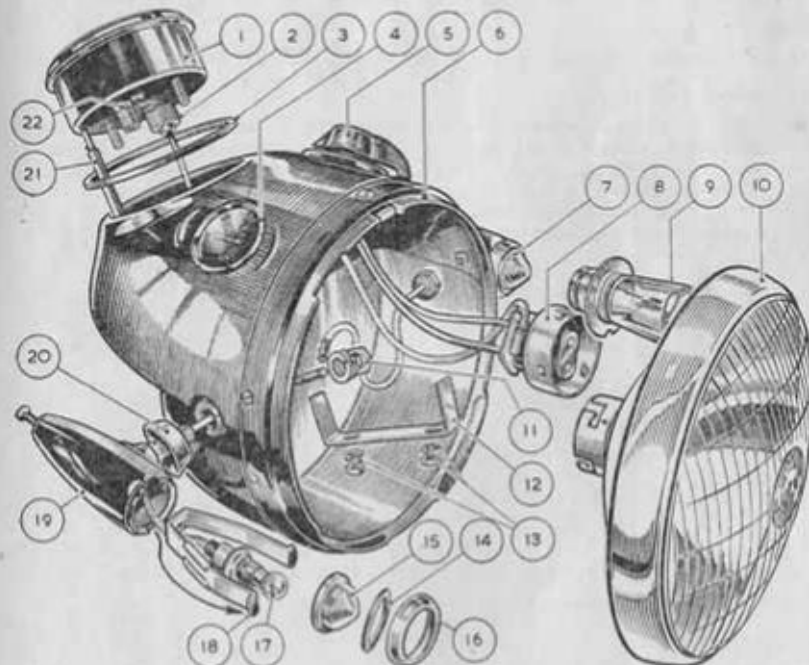

- | | |
|---|-----------------------------------|
| 1 SPEEDOMETER. | 12 SPEEDOMETER SECURING BRACKET. |
| 2 SPEEDOMETER, LAMP. | 13 NUT AND WASHER FOR 12. |
| 3 SPEEDOMETER, SEALING RING. | 14 PILOT LAMP SEALING RING. |
| 4 AMMETER. | 15 PILOT LAMP GLASS. |
| 5 LAMPS, CONTROL SWITCH. | 16 PILOT LAMP RIM. |
| 6 HEADLAMP SHELL. | 17 PILOT LAMP BULB. |
| 7 PILOT LAMP. | 18 PILOT LAMP SECURING CLIP. |
| 8 LAMP CONNECTOR. | 19 PILOT LAMP SHELL. |
| 9 HEADLAMP BULB. | 20 PILOT LAMP RUBBER SEAL. |
| 10 GLASS, REFLECTOR AND BULB HOLDER, SEALED UNIT. | 21 SPEEDOMETER TRIP RESET KNOB. |
| 11 NUT AND WASHER, FIXING PILOT LAMP. | 22 DRIVING CABLE CONNECTOR UNION. |

Illustration 33

To replace headlamp rim and light unit

Lay the light unit in the rim so that the location block on the unit back engages with the forked bracket on the rim. Replace, by springing in, the spring clips so that they are evenly spaced around the rim.

To replace the back cap engage the projections on the inside of the back cap with the slots in the holder, press on and secure by twisting it to the right.

Engage bottom tag on lamp rim with the small slit in the shell and gently force the top of the rim back into the shell, after which re-tighten the locking screw on the top of the lamp body.

Access to the pilot lamps interior for bulb removal is obtained by removing the screw at the rear end and gently pulling forward on the glass rim.

Rear lamp

A LUCAS rear lamp is fitted. The body, with bulb holder, is secured to the rear number plate. (Convertible to stop light at option.)

Details of lamp bulbs are given in "DATA."

Horn

The horn push switch, situated on the right handlebar.

Fuses

There are no detachable fuses in LUCAS motor cycle electrical equipment.

Snap wire connector

The LUCAS snap connector, as shown in illustration 34, is made up of four components. Two are tubular sleeves, having pointed extremities, and which are soldered to the ends of the two wires to be connected. The third part is the centre split ferrule, into which the two sleeves snap and the fourth component is a rubber sleeve which covers the whole connector. That rubber sleeve serves the dual purpose of insulating the various metal parts and also preventing same from separation as the result of vibration.

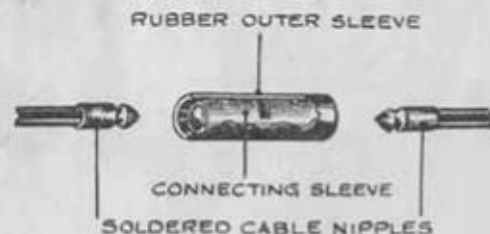


Illustration 34
Lucas snap connector
Part number 900269

One snap connector is used in the rear lamp wire and another is used in the wire connecting the regulator unit to the output side of the ammeter in the head lamp.


Two more are used in the headlamp interior (pilot lamp wires).

Terminals

All models have the POSITIVE battery terminal connected to "EARTH".

The earth wires (two—one from regulator, the other from terminal of battery) and the high-tension wires (two—one on sparking plug end of each wire from magneto to sparking plug) have terminals of the solid sleeve type having an eye at the extreme end. To make such a connection, it is necessary to bare the end of the wire for $\frac{1}{8}$ ", pass the terminal over the wire so that the bared end fully enters the reduced core of the terminal and then flatten that part by either pinching in a vice or by hammering.

The two earth wires, mentioned above, are connected to the "earth" by securing them to the seat lug nut (which is situated just under the saddle) by means of a washer and a screw. It is essential that the connections are kept clean and the screw must be kept fully tight.

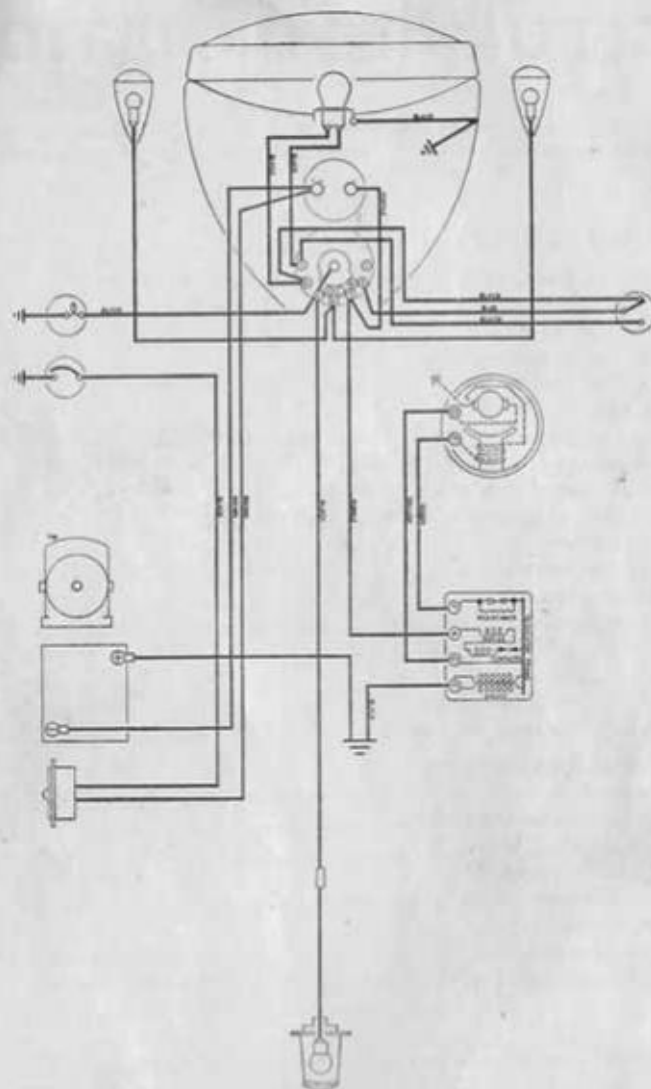

W 97832

KEY TO CABLE COLOURS
1. BATTERY
2. REGULATOR
3. AMMETER
4. HEADLAMP
5. REAR LAMP
6. HORN
7. SWITCHES
8. SPARKING PLUGS
9. MAGNETO
10. EARTH
11. FUEL PUMP
12. WATER PUMP
13. DISTRIBUTOR
14. COIL
15. CONDENSER
16. POINTS
17. SPARKING PLUG
18. SPARKING PLUG WIRE
19. SPARKING PLUG NUT
20. SPARKING PLUG GASKET
21. SPARKING PLUG BUSH
22. SPARKING PLUG CAP
23. SPARKING PLUG BOOT
24. SPARKING PLUG BRACKET
25. SPARKING PLUG HOLDER
26. SPARKING PLUG INSULATOR
27. SPARKING PLUG GROUND
28. SPARKING PLUG WIRE CLIP
29. SPARKING PLUG WIRE CLIP
30. SPARKING PLUG WIRE CLIP
31. SPARKING PLUG WIRE CLIP
32. SPARKING PLUG WIRE CLIP
33. SPARKING PLUG WIRE CLIP
34. SPARKING PLUG WIRE CLIP
35. SPARKING PLUG WIRE CLIP
36. SPARKING PLUG WIRE CLIP
37. SPARKING PLUG WIRE CLIP
38. SPARKING PLUG WIRE CLIP
39. SPARKING PLUG WIRE CLIP
40. SPARKING PLUG WIRE CLIP
41. SPARKING PLUG WIRE CLIP
42. SPARKING PLUG WIRE CLIP
43. SPARKING PLUG WIRE CLIP
44. SPARKING PLUG WIRE CLIP
45. SPARKING PLUG WIRE CLIP
46. SPARKING PLUG WIRE CLIP
47. SPARKING PLUG WIRE CLIP
48. SPARKING PLUG WIRE CLIP
49. SPARKING PLUG WIRE CLIP
50. SPARKING PLUG WIRE CLIP
51. SPARKING PLUG WIRE CLIP
52. SPARKING PLUG WIRE CLIP
53. SPARKING PLUG WIRE CLIP
54. SPARKING PLUG WIRE CLIP
55. SPARKING PLUG WIRE CLIP
56. SPARKING PLUG WIRE CLIP
57. SPARKING PLUG WIRE CLIP
58. SPARKING PLUG WIRE CLIP
59. SPARKING PLUG WIRE CLIP
60. SPARKING PLUG WIRE CLIP
61. SPARKING PLUG WIRE CLIP
62. SPARKING PLUG WIRE CLIP
63. SPARKING PLUG WIRE CLIP
64. SPARKING PLUG WIRE CLIP
65. SPARKING PLUG WIRE CLIP
66. SPARKING PLUG WIRE CLIP
67. SPARKING PLUG WIRE CLIP
68. SPARKING PLUG WIRE CLIP
69. SPARKING PLUG WIRE CLIP
70. SPARKING PLUG WIRE CLIP
71. SPARKING PLUG WIRE CLIP
72. SPARKING PLUG WIRE CLIP
73. SPARKING PLUG WIRE CLIP
74. SPARKING PLUG WIRE CLIP
75. SPARKING PLUG WIRE CLIP
76. SPARKING PLUG WIRE CLIP
77. SPARKING PLUG WIRE CLIP
78. SPARKING PLUG WIRE CLIP
79. SPARKING PLUG WIRE CLIP
80. SPARKING PLUG WIRE CLIP
81. SPARKING PLUG WIRE CLIP
82. SPARKING PLUG WIRE CLIP
83. SPARKING PLUG WIRE CLIP
84. SPARKING PLUG WIRE CLIP
85. SPARKING PLUG WIRE CLIP
86. SPARKING PLUG WIRE CLIP
87. SPARKING PLUG WIRE CLIP
88. SPARKING PLUG WIRE CLIP
89. SPARKING PLUG WIRE CLIP
90. SPARKING PLUG WIRE CLIP
91. SPARKING PLUG WIRE CLIP
92. SPARKING PLUG WIRE CLIP
93. SPARKING PLUG WIRE CLIP
94. SPARKING PLUG WIRE CLIP
95. SPARKING PLUG WIRE CLIP
96. SPARKING PLUG WIRE CLIP
97. SPARKING PLUG WIRE CLIP
98. SPARKING PLUG WIRE CLIP
99. SPARKING PLUG WIRE CLIP
100. SPARKING PLUG WIRE CLIP

Illustration 35

Wiring diagram

USEFUL INFORMATION

In the following five paragraphs are particulars of failures and troubles that can occur, together with the probable reasons. These troubles are arranged in the order of their probability.

TRACING TROUBLES

Engine fails to start, or is difficult to start, may be due to :

Water on high-tension pick-ups.
Moisture on sparking plugs.
Oiled up, or fouled, sparking plugs.
Throttle opening too large.
Pilot jet choked.
Air lever in open position or bad air leak at carburettor joints.
Lack of fuel because of insufficient flooding.
Lack of fuel because of pipe, or tap, obstruction.
Excessive flooding of carburettor (with hot engine only).
Stuck up engine valve.
Weak, or broken, valve spring.
Valve not seating properly.
Contact points dirty.
Incorrect contact point gap.

Engine misses fire may be due to :

Defective, or oiled, sparking plugs.
Incorrect contact point gap.
Contact breaker rocker arm sticking.
Contact breaker points loose.
Rocker adjustment incorrect.
Oil on contact breaker points.
Weak valve springs.
Defective sparking plug wire.
Partially obstructed petrol supply.

Loss of power may be due to :

Faulty sparking plugs.
Lack of oil in tank.
No rocker clearance, or too much clearance.
Weak, or broken, valve spring.
Sticky valve stem.
Valve not seating properly.
Brakes adjusted too closely.
Badly fitting, or broken, piston rings.
Punctured carburettor float.
Engine carbonised.
Choked silencer.
Bad air leak between carburettor and manifold

Engine overheats may be due to :

Lack of proper lubrication. (Quality or quantity of oil).
Faulty sparking plugs.
Air control to carburettor out of order.
Punctured carburettor float.
Engine carbonised.
Weak valve springs.
Pitted valve seats.
Worn piston rings.
Ignition setting incorrect.
Choked silencer.

Engine stops suddenly may be due to :

Stuck up valve.
No petrol in tank, or choked petrol supply.
Choked main jet.
Oiled up, or fouled, sparking plugs.
Water on high-tension pick-up, or sparking plugs.
Water in float chamber.
Vent hole in petrol tank filler cap choked.

EXCESSIVE OIL CONSUMPTION

Excessive oil consumption may be due to :

Stoppage, or partial stoppage, in the pipe returning oil from the engine to the oil tank.
Badly worn, or stuck up, piston rings. (Causing high pressure in the crankcase.)
Air leak in dry sump oiling system.
Worn inlet valve stems.
Improper non-return valve action.

EXCESSIVE PETROL CONSUMPTION

Excessive petrol consumption may be due to :

Leaks in the petrol feed system. (Damaged fibre washers, loose union nuts on piping, defective float needle action).
Incorrect ignition setting. (Ignition not advanced sufficiently).
Defective engine valve action.
Incorrect use of air control lever.
Moving parts of carburettor badly worn. (Only possible after very considerable mileage).
Bad air leak at carburettor junction, or inlet manifold joint.

STEERING UNSATISFACTORY

Incorrect steering head adjustment (too tight or excessively slack).
Pitted steering head ball races resulting from loose adjustment.
Wheels out of alignment.
Front and/or rear tyre tread not correctly manipulated to run true with wheel (causes handlebar oscillation at low road speed).
Damaged front fork main tubes resulting from impact.

ABNORMAL TYRE WEAR

Abnormal tyre wear may be due to :

Incorrect tyre pressure.
Wheels not in alignment.
Harsh driving methods. (Misuse of acceleration and braking)

CLEANING THE MACHINE

Do not attempt to rub, or brush, mud off the enamelled surfaces because this will soon destroy the sheen of the enamel. Mud, and other road dirt, should be soaked off with water.

The best method is to use a small hose, taking care not to direct water on to the engine, carburettor, magneto and other such parts. As a poorer substitute, a pail of water and a sponge may be used.

After washing down with water, the surplus moisture should be removed with a chamois leather, and, when the enamelled surfaces are thoroughly dry, they may be polished with a good wax polish and soft dusters.

Such parts as the engine crankcase and the gear box can be cleaned by applying paraffin with a stiff brush, and, with a final application of petrol, will come up like new.

CHROMIUM PLATING

Under some climatic conditions, a rusty looking deposit may be observed on ferrous parts that are chromium plated. This is not ordinary rust (ferric oxide) but is a salt deposit that, in most cases and in its early stages, can be quickly and easily removed with a damp chamois leather. In stubborn cases it may be necessary to use a special chromium cleaning compound.

The safest precaution during Winter is to wipe over all chromium plated parts with a soft rag soaked in "TEKALL," which is a lanoline base rust preventative marketed in small tins and available at most garages. This material, so applied, leaves an almost invisible film that is impervious to moisture and its use cannot be too highly recommended to owners who value the appearance of their mounts.

In Summer, when those conditions do not prevail, chromium parts should be frequently cleaned with a damp chamois leather and afterwards polished with a soft duster, or, better still, with a polishing cloth of the "Selvyt" type.

If a polish is used it must be one of the special compounds for chromium plating only. Ordinary metal polishing liquids, in particular, must not, on any account, be used because these, almost without exception, contain acids, which attack chromium.

NOTE—"Tekall" is a product of 20th Century Finishes Ltd., 175-177, Kirkgate, Wakefield, and is retailed in $\frac{1}{2}$ pint and 1 pint tins. It can be obtained from our Spare Parts Department, as follows:

$\frac{1}{2}$ pint tin "Tekall," Part number 011957.

1 pint tin "Tekall," Part number 011958.

REPAIRS AND SERVICE

REPAIRS

The instructions regarding repairs should be clear and definite, otherwise the cost may be greater than that expected. We shall be pleased to give estimates for repairs if parts are sent to us for that purpose. If the estimate is accepted, no charge is made for the preliminary examination, but, should it be decided not to have the work carried out, it **MAY** be necessary to make a charge to cover the cost of whatever dismantling and re-assembly may have been done to prepare the estimate.

Customers desiring that old parts which are replaced with new during the course of overhaul or repair be retained must make the fact known prior to the work being put in hand because, normally, such parts, having no further useful life, are scrapped upon removal.

Parts sent to us as patterns, or for repair, should have attached to them a label bearing the sender's full name and address. The instructions regarding such parts should be sent under separate cover.

If it is necessary to bring a machine, or parts, to the Works for an urgent repair, **IT IS ESSENTIAL** you **MAKE AN APPOINTMENT** beforehand to **AVOID DISAPPOINTMENT**. This can be done by letter or telephone.

CORRESPONDENCE AND ORDERS

Our routine is organised into different departments, therefore delay cannot be avoided if matters relating to more than one department are contained in one letter.

Consequently, it is desirable, when communicating with more than one department, to do so on **SEPARATE SHEETS**, each of which should bear your name and address. When writing on a technical matter, or when ordering spares, it is essential to quote the **COMPLETE ENGINE NUMBER**. Some numbers have one, or more, letters incorporated in them and these letters **MUST BE QUOTED**, otherwise model identification is not possible.

Orders should always be sent in list form and not as part of a letter.

Owners are strongly advised to purchase a Spare Parts List so that correct part numbers can be quoted. Most parts are clearly illustrated in this list which makes it very easy to recognize the part or parts required.

PROPRIETARY FITTINGS

No expense is spared to secure and fit the most suitable, and highest quality, instruments and accessories for the standard equipment of our machines.

Nevertheless, our Guarantee does not cover such parts and, in the event of trouble being experienced, the parts in question should be returned to, and claims made, direct on the actual manufacturers who will deal with them on the terms of their respective guarantees.

Those manufacturers are:

Carburettors	Messrs. Amalgamated Carburettors Ltd., Holford Road, Witton, Birmingham, 6
Chains	The Renold and Coventry Chain Co. Ltd., Didsbury, Manchester
Electrical Equipment	Messrs. Joseph Lucas Ltd., Great King Street, Birmingham, 19
Gear Boxes	Messrs. Burman & Sons Ltd., Wychall Lane, King's Norton, Birmingham, 30
Sparking Plugs	K.L.G. Sparking Plugs Ltd., Putney Vale, London, S.W.15
Speedometers	Messrs. S. Smith & Sons (M.A.) Ltd., Cricklewood, London
Tyres	Messrs. Dunlop Rubber Co. Ltd., Forth Dunlop, Birmingham
Air Filter	Messrs. Vokes Ltd., Henley Park, Nr. Guildford, Surrey

All the above manufacturers except S. Smith & Sons (M.A.) Ltd., issue instructive literature regarding their products which is obtainable by writing to them.

SERVICE

The **Service and Repair Department** is situated in **Burrage Grove, Plumstead, London, S.E.18**, and is open on Mondays to Fridays from 8.30 a.m. to 12.55 p.m.—2.0 p.m. to 5.30 p.m. It is closed on Saturdays, Sundays and National Holidays.

It exists for the purposes of :

- Giving technical assistance verbally or through the post.
- Supplying spare parts over the counter or through the post.
- Repairing and re-conditioning machines, or parts of machines, of our make.

Burrage Grove is the first turning on the left from Burrage Road when entering Burrage Road from the Plumstead Road. (See final paragraph below.)

The nearest Railway Station is **WOOLWICH ARSENAL, SOUTHERN REGION RAILWAY**. This Station is five minutes walk from our Service Depot in Burrage Grove. There is an excellent service of electric trains from Charing Cross, Waterloo, Cannon Street and London Bridge Stations, Southern Region Railway.

Bus routes 53, 53a, 54, 99 and 122. Trolleybus routes, 696 and 698 pass the end of Burrage Road (one minute from the Service Depot).

Bus routes 21a, 75 and 161 serve **Beresford Square** which is three minutes walk from the **Service and Repair Department**.

Visitors from the North can pass into Woolwich via the Free Ferry between North Woolwich and Woolwich. North Woolwich is a British Railways terminus and is also served by Bus and Trolleybus routes 101, 569, 669 and 685. There is also a tunnel under the River Thames at this point for foot passengers. The Free Ferry accommodates all types of motor vehicles and there is a very frequent service. The Southern landing stage is less than a mile from the Service Depot.

Visitors arriving by road, if they are strangers to the locality, should enquire for **Beresford Square, Woolwich**. Upon arrival there, the road skirting the Royal Arsenal should be followed in an Easterly direction for about four hundred yards, and Burrage Road is the second turning on the right after leaving the Square. Burrage Grove is then the first turning on the left.

THE DRIVER AND THE LAW

The driver of a motor cycle **MUST** be **INSURED** against Third Party Claims and **MUST** be able to produce an **INSURANCE CERTIFICATE** showing that such an insurance is in force.

If your Insurance Certificate specifies you can only drive one particular machine you **MUST NOT DRIVE** any other machine unless its owner has a current Certificate covering **"ANY DRIVER"** and it is advisable to remember that, in the absence of such a provision the penalties for doing so are very heavy.

The driver of a motor cycle **MUST** hold a current **DRIVING LICENCE**. If you are a learner and hold a Provisional Driving Licence, your machine must show, front and back, the standard **"L"** plates in red and white and you must not take a **PILLION PASSENGER** unless that passenger is the holder of a current **UNRESTRICTED** driving licence.

As soon as you receive your driving licence, sign it in the appropriate place and do so each time it is renewed. It is an offence not to.

Make sure you are well acquainted with the recommendations set down in the **"Highway Code,"** a copy of which can be obtained from any main Post Office.

THE MACHINE AND THE LAW

Every motor cycle used on the public roads must be registered and carry the registration numbers and licence disc allotted to it. The dealer, from whom the machine is bought, will, generally, attend to all matters legally essential before it is used on the public roads.

To register a new machine

Send to the Local Registration Authority the following :

- Form **"RF1/2,"** duly completed.
- The certificate of insurance.
- The invoice you received from your dealer when you purchased the machine.
- The appropriate registration fee.

In due course you will receive :

- A Registration Book. (Commonly called the **"log"** book).
- A Licence Disc.
- Your Insurance Certificate.
- Your Invoice.

The Registration Book and the Licence Disc will bear the registration numbers that have been allotted to your machine and will also show the date the Road Licence expires.

Your number plates must then be painted, in white upon a black background, with the registration numbers in characters of even thickness as follows :

The numbers on the front plate must be $1\frac{1}{2}$ " high, $1\frac{1}{2}$ " wide and $\frac{3}{16}$ " thick with spaces of $\frac{1}{4}$ " between each two characters.

The numbers on the rear plate must be $2\frac{1}{2}$ " high, $1\frac{1}{2}$ " wide and $\frac{3}{16}$ " thick with spaces $\frac{1}{4}$ " between each two characters.

The Licence Disc must be enclosed in a water-tight container, having a transparent front, and this must be fixed to the machine in a conspicuous position, near the front and on the left-hand side.

It is not legally necessary to carry your Driving Licence, Insurance Certificate and Registration Book while driving your machine.

Ignition Suppressors

As required by law all 1956 models for the Home Market are issued with an approved type of radio interference suppressor already installed.

Speedometer

A speedometer **MUST** be fitted and it **MUST BE** so **ILLUMINATED** that it is possible to read the dial after lighting up time.

Lamps

During the official **"LIGHTING UP"** hours the machine must exhibit a white light facing forwards and a red light facing rearwards. The rear number plate must be adequately illuminated by a white light.

Each front electric light bulb **MUST** be marked with its **"Wattage."** (Beware of cheap, imported, bulbs that do not have this marking).

All motor cycles made by us have electric equipment that complies with the law regarding position, size of bulbs, marking on bulbs and the correct illumination of the rear number plate.

FREE SERVICE SCHEME

FREE SERVICE SCHEME

All owners of **NEW MODELS** are entitled to one **FREE SERVICE AND INSPECTION** at 500 miles, or, at latest, three months after taking delivery.

This service is arranged by the supplying dealer to whom the **Free Service Voucher** must be handed. This voucher, together with the Instruction Manual, are supplied by us upon receipt of the signed application card to be found in the tool box upon taking delivery of a new motor cycle.

The **INSPECTION AND SERVICE** consists of :

(a) Check, and, if necessary, adjust :

- | | |
|-----------------------------|-------------------------------------|
| (1) Rocker clearances. | (6) Wheel bearings. |
| (2) Contact breaker points. | (7) Brakes. |
| (3) Sparking plugs. | (8) Forks, legs, and steering head. |
| (4) Clutch. | (9) Alignment of wheels. |
| (5) Chains. | (10) Tyre pressures. |

(b) Tighten all external nuts and bolts, including cylinder head nuts and fork crown pinch screws.

(c) Top-up battery and check all lighting equipment.

(d) Clean out carburettor and check for correct idling.

(e) Adjust and lubricate all cables.

(f) Grease all nipples.

(g) Drain oil system. Clean filter and replenish.

(h) Check oil level in front chaincase.

(i) Top-up gear box.

(j) Test machine on the road.

NOTE—Oils, greases and materials used are chargeable to the customer.

FOR THE CONVENIENCE OF OWNERS,

SPARES STOCKISTS

ARE APPOINTED FOR MOST DISTRICTS. TO SAVE DELAY, AND THE DELIVERY SURCHARGE CUSTOMERS ARE RECOMMENDED TO ALWAYS APPLY TO THEIR NEAREST SPARES STOCKIST.

SPARE PARTS

GENUINE SPARE PARTS purchased from an Authorised Dealer, or from the Factory, are identical with the parts originally built into your motorcycle. By using them you are assured that they will fit accurately and give satisfactory service.

SPARES STOCKISTS

For the convenience of owners Spares Stockists are appointed for most districts. To prevent delay and save the delivery surcharge, customers are recommended always to apply to their nearest Spares Stockist.

CORRESPONDENCE AND SPARES ORDERS

Always quote the complete engine number, including all the letters in it. This will enable us to identify the machine.

Each series of frames is numbered from zero upwards, therefore, the quotation of a frame number only does not facilitate identification.

SPARES LIST

An illustrated spares list covering the models described in this Instruction Book is available on application. Price 2s. 6d. each.

PART NUMBERS

If there is any doubt about the names of parts required, or their part numbers, please send the old parts as patterns.

REMINDER

Do not forget to include your name and full postal address. We do receive orders without this very necessary information.

PAYMENT

- (1) Cash with order.*
- (2) Cash against pro-forma invoice.
- (3) Approved ledger account.

We do not send C.O.D. (Cash on delivery).

*Add 5% of total value for carriage and packing. Minimum 6d.

GUARANTEE

Full details of the guarantee relating to the models described in this book are given on page 84.

INSTRUCTION BOOKS

A copy of this book is issued free of charge to all purchasers of a new machine. Additional copies may be obtained, price 2s. 6d. each.

TOOLS AND SPECIAL EQUIPMENT

TOOLS

The standard tool kit, issued with each new machine, contains :

1	017253	Tool bag.
1	017114	Tyre inflator.
2	017007	Tyre lever.
1	017248	Pliers.
1	011188	Gudgeon pin circlip pliers.
1	017256	Screwdriver.
1	017246	Grease gun.
1	017249	Adjustable wrench.
1	017252	Sparking plug box spanner and tommy bar.
1	018178	Spanner 1-010 in. and 1-200 in.
1	017052	Double end spanner. $\frac{1}{8}$ " x $\frac{1}{4}$ " in.
1	017053	Double end spanner. $\frac{1}{8}$ " x $\frac{3}{8}$ " in.
1	015023	Contact point spanner and gauge.
1	018153	Spanner, for petrol tap (Special Overseas Models only).
1	018055	Key, for handlebar clip screw and rocker cover bolts.
1	017257	Double end spanner. $\frac{1}{2}$ " x .375" in.
1	015264	S.E. spanner. (Rocker clamping bolt nut).
1	015213	Box spanner.
1	017254	Clutch spring stud nut adjuster.
1	018667	Key for fork crown pinch screw.

OPTIONAL EQUIPMENT

The following items of optional equipment are available. They are described and priced in the Spares List.

Stop rear light fittings (see page 72.)

Air cleaner.

Gear extractor 015374. A bridge type extractor, consisting of bridge, central screw and two side bolts, for removing the gears on the camshafts.

Detachable luggage carrier.

Timing disc 022011. A circular timing disc, graduated in degrees and made of ivory. A very useful device.

Pinion extractor 015273. A two piece extractor for removing the timing gear small pinion and the gear on the magneto shaft.

Pannier frames and bags.

Holder for valve grinding. Part number 011381.

Pillion footrests, specially designed fold up type.

GASKET SETS

For convenience in ordering, standard sets of engine washers and gaskets are stocked. Full details of contents and prices are included in the Spares List.

BADGES

Neat monogram badges are now available at a cost of 1/6, plus 6d. postage. They can be supplied as a tie pin, as a brooch or for fitting in a button hole. When ordering state type required.

TOOL KIT

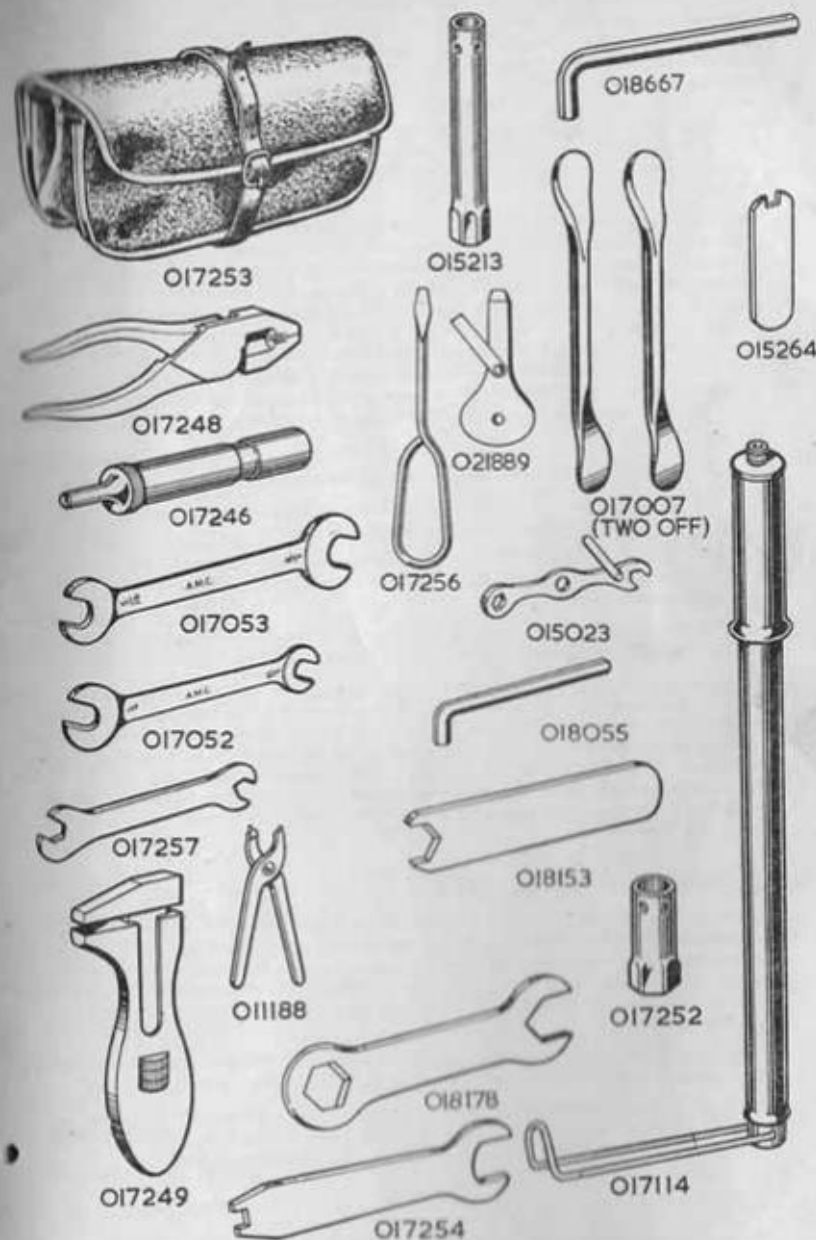


Illustration 36

GUARANTEE

We give the following guarantee with our motorcycles, motorcycle combinations and sidecars, which is given in place of any implied conditions, warranties or liabilities whatsoever, statutory or otherwise, all such implied conditions, warranties and liabilities being in all cases excluded. Any statement, description, condition or representation contained in any catalogue, advertisement, leaflet or other publication shall not be construed as enlarging, varying or overriding this guarantee. In the case of machines (a) which have been used for "hire-out" purposes or (b) any motorcycle and/or sidecar used for any dirt track, cinder track or grass track racing or competitions (or any competition of any kind within an enclosure for which a charge is made for admission to take part in or view the competition) or (c) machines from which the trade mark, name or manufacturing number has been removed, no guarantee, condition or warranty of any kind is given or is to be implied.

We guarantee, subject to the conditions mentioned below, that all precautions which are usual and reasonable have been taken by us to secure excellence of materials and workmanship, but this guarantee is to extend and be in force for six months only from date of purchase, and damages for which we make ourselves responsible under this guarantee are limited to the free supply of a new part in exchange for the part of the motorcycle, motorcycle combination or sidecar which may have proved defective. We do not undertake to replace or refix, or bear the cost of replacing or refixing, such new part in the motorcycle, motorcycle combination or sidecar. We undertake, subject to the conditions mentioned below, to make good at any time within six months any defects in these respects. As motorcycles, motorcycle combinations and sidecars are easily liable to derangement by neglect, or misuse, this guarantee does not apply to defects caused by wear and tear, misuse or neglect.

The term "misuse" shall include amongst others the following acts:—

1. The attaching of a sidecar to a motorcycle in such a manner as to cause damage or calculated to render the latter unsafe when ridden.
2. The use of a motorcycle or of a motorcycle and sidecar combined, when carrying more persons or a greater weight than that for which the machine was designed by the manufacturers.
3. The attaching of a sidecar to a motorcycle by any form of attachment not provided, supplied or approved by us or to a motorcycle which is not designed for such use.

Any motorcycle, motorcycle combination or sidecar sent to us to be plated, enamelled or repaired will be repaired upon the following conditions, i.e., we guarantee that all precautions which are usual and reasonable have been taken by us to secure excellence of materials and workmanship, such guarantee to extend and be in force for three months only from the time such work shall have been executed or until the expiration of the six months above referred to, and this guarantee is in lieu and in exclusion of any common law or statute warranty or condition, and the damages recoverable are limited to the cost of any further work which may be necessary to amend and make good the work found to be defective.

CONDITIONS OF GUARANTEE

If a defective part should be found in our motorcycles, motorcycle combinations or sidecars, or in any part supplied by way of exchange before referred to, it must be sent to us CARRIAGE PAID, and accompanied by an intimation from the owner that he desires to have it repaired or exchanged free of charge under our guarantee, and he must also furnish us at the same time with the number of the machine, the date of the purchase or the date when the alleged defective part was exchanged as the case may be.

Failing compliance with the above, such articles will lie here AT THE RISK OF THE OWNER, and this guarantee and any implied guarantee, warranty or condition shall not be enforceable.

We do not guarantee specialities such as tyres, saddles, chains, electrical equipment, lamps, etc., or any component parts supplied to the order of the Purchaser differing from standard specifications supplied with our motorcycles, motorcycle combinations, sidecars or otherwise.

NOTICE

We do not appoint agents for the sale on our behalf of our motor cycles or other goods, but we assign to motor cycle dealers areas in which we supply to such dealers exclusively for re-sale in such areas. No such Dealer is authorised to transact any business, give any warranty, make any representation or incur any liability on our behalf.

INDEX

	Page		Page
Air filter	35	Data... ..	6, 7
A.V.C.	68	Decarbonisation	25
Badge	82	Driving notes	12
Battery	69	Dynamo, removal	68
Brake controls, lubrication	19	Dynamo, test	68
Brake cover plate, front	56		
Brake drums	57	Electrical equipment	64
Brake, front	59	Engine lubrication... ..	14
Brake, pedal	61	Engine oil pumps	14
Brake, rear	60	Engine shock absorber	38
Brake shoes	57		
Brake shoe adjustment	58	Forks, front	44/49
		Forks, rear lubrication	19
Carbon deposit, removal	26	Free service	80
Carburettor adjustment	33	Fuel	10
Carburettor, function	33	Fuel tank fixing details	24
Carburettor, tuning	35		
Centre stand	52		
Chain adjustment	42	Gasket sets... ..	82
Chain lubrication	18	Gearbox	36
Chain rear, fitting	43	Gearbox end-plate removal	38
Chaincase, front	38	Gearbox lubrication	18
Chainguard, removal	52	Gear change	37
Chrome plating	76		
Cleaning	76	Headlamp	72
Clutch	37, 38	Horn	72
Clutch actuating mechanism	37	Hub lubrication	19
Clutch adjustment	41		
Controls	8, 9	Ignition	64, 65
Correspondence	77	Ignition timing	31
Crankcase release valve	32		
Cylinder barrel, removal	28	Kickstarter	37
Cylinder barrel, replacement	28		
Cylinder head, removal	25		
Cylinder head, replacement	29		

	Page		Page
Law, the	78, 79	Service	78
Lighting	71	Spark plug	66
Lubricants	13	Spark plug removal	32
Lubrication chart	20	Speedometer, lubrication	19
		Starting	10
Magneto adjustment	65	Steering, causes of unsatisfactory	75
Magneto cleaning	65	Steering head adjustment	44
Magneto removal	67	Steering head lubrication	19
		Stopping	11
Oil consumption excessive	75		
Oil circulation	15, 16	Terminals, electrical equipment	72
Oil filter	16	Timing gear removal	29
Oil filter, cleaning	17	Tools and toolkit	82, 83
Oil tank	16	Tracing troubles	74
Oil tank removal	52	Twist grip, adjustment	33
Optional equipment	82	Tyres	62, 63
Overhead rocker adjustment	23	Tyre wear	75
Periodic maintenance	21	Valve grinding	26
Petrol consumption excessive	75	Valve guide removal	26
Petrol tank removal	25	Valve removal	26
Piston removal and re-fitting	28	Valve timing	29
Primary chain	38		
Prop stand	52	Wheel bearing adjustment	54
Proprietary fittings	77	Wheel bearing, front	54
		Wheel bearing, rear	56
Rear lamp	72	Wheel removal, front	53
Rear suspension	50, 52	Wheel removal, rear	53
Repairs	77	Wire connector	72
Running in	11		