2016 Softail Models Parts Catalog

Alphabetical List
Parts
Hardware List
New Parts List
Numerical Index
Component Types and Introduction Dates
Common Service Parts
AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
AIR CLEANER - TWIN CAM 110™ - FLSS
AIR CLEANER - TWIN CAM 110™ - FLSTFBS
ALTERNATOR AND REGULATOR
AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)
AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)
BATTERY
BELT, CHAINS AND SPROCKETS
BRAKE CALIPER, FRONT
BRAKE CALIPER, REAR
BRAKE CONTROL, FRONT
BRAKE CONTROL, REAR
BRAKE LINE AND MODULE, REAR, ABS
BRAKE LINES, FRONT, ABS
BRAKE LINES, FRONT, NON-ABS - FLS
CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™
CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™
CLUTCH - ASSIST AND SLIP - TWIN CAM 110™
CLUTCH - TWIN CAM 103™
CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB
CLUTCH CONTROL - FLSS AND FLSTFBS
CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™
CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™
CYLINDERS, HEADS AND VALVES - TWIN CAM 110™
CYLINDERS, HEADS, VALVES - TWIN CAM 103™
ELECTRONIC CONTROL MODULE (ECM) AND COIL
ENGINE ASSEMBLY - TWIN CAM 103™
ENGINE ASSEMBLY - TWIN CAM 110™
ENGINE BALANCER
ENGINE MOUNTS
EVAPORATIVE EMISSIONS COMPONENTS
EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)
EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)
EXHAUST SYSTEM - FLSTC
EXHAUST SYSTEM - FXSB
FENDER, FRONT
FENDERS AND SUPPORTS, REAR - FLSTN
FENDERS AND SUPPORTS, REAR - FLS AND FLSS
FENDERS AND SUPPORTS, REAR - FLSTC
FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS
FENDERS AND SUPPORTS, REAR - FXSB
FOOTRESTS AND FOOTBOARDS

FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN
FORK BRACKETS, FRONT - FXSB
FORK, FRONT - FXSB
FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)
FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)
FORK, REAR AND SHOCK ABSORBERS
FRAME AND JIFFY STAND
FUEL PUMP
FUEL TANK
FUEL TANK TRIM
GUARDS, SAREE
HANDLEBAR
HEADLAMP (1 OF 2)
HEADLAMP (2 OF 2)
HORN
INDUCTION MODULE, FUEL
INSTRUMENTS - FLS, FLSS AND FLSTC
INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN
INSTRUMENTS - FXSB
LABELS
LICENSE PLATE BRACKETS - FLS AND FLSS
LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS
LICENSE PLATE BRACKETS - FXSB
LOOSE PARTS
MIRRORS
OIL TANK AND LINES - EXCEPT FXSB
OIL TANK AND LINES - FXSB
PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™
PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 110™
PRIMARY HOUSING
REAR BELT GUARD
ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™
ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™
SADDLEBAGS - FLSTC
SEATS
SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™
SENSORS AND SWITCHES, ENGINE - TWIN CAM 110™
SHIFTER, GEAR
STARTER MOTOR
SWITCHES
SWITCHES, HANDLEBAR LEFT, FRONT
SWITCHES, HANDLEBAR RIGHT, FRONT
TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS
TAIL LAMP - FLSTN
THROTTLE CONTROL
TRANSMISSION GEARS
TRANSMISSION HOUSING - FLSS AND FLSTFBS
TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS
TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB
TURN SIGNALS, REAR (1 OF 2)
TURN SIGNALS, REAR (2 OF 2)
WHEELS, FRONT (1 OF 2)
WHEELS, FRONT (2 OF 2)
WHEELS, REAR (1 OF 2)
WHEELS, REAR (2 OF 2)
WINDSHIELD - FLSTC

WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)
WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)
WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)
WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)
WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)
WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)
WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)
WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)
WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)
WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)
WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)
WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)
WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)
WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)
WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)
WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)
WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)
WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)
WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)
WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)
WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)
WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)
WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)
WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)
WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)
Parts

ENGINE ASSEMBLY - TWIN CAM 103™

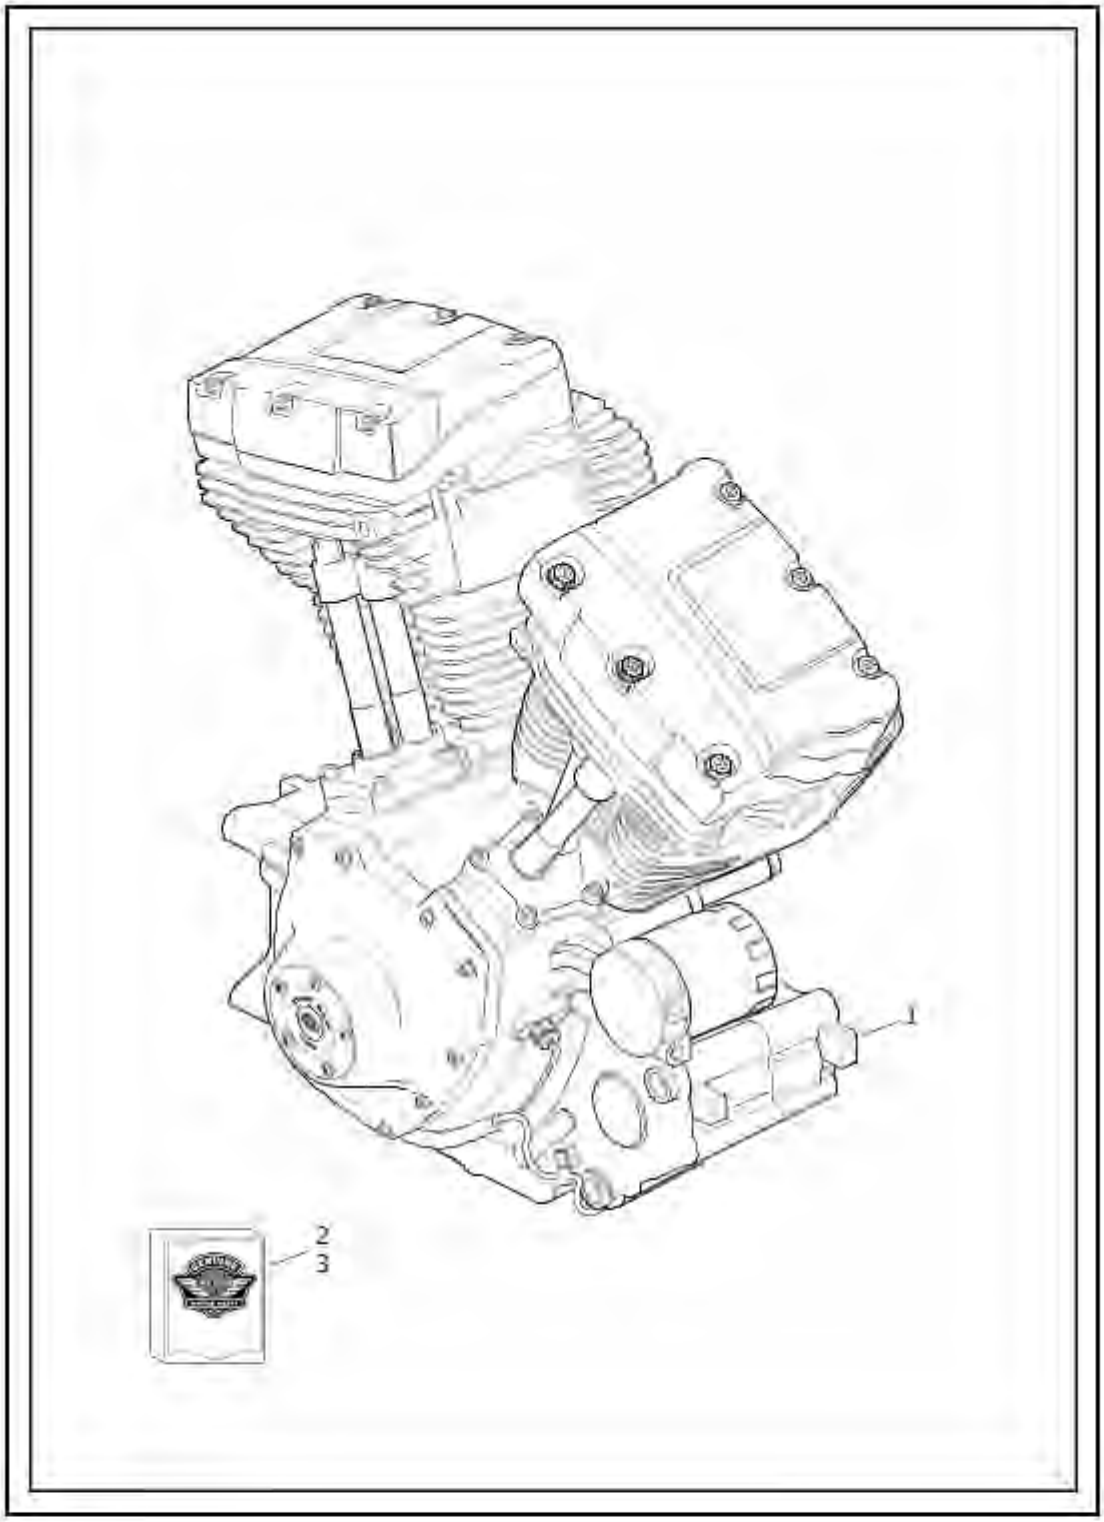

Index No.	Part No.	Description	Model(s)
1	19811-16	ENGINE ASSEMBLY	FLSTC, FLSTF, FLSTN, FXSB
	19816-16	ENGINE ASSEMBLY	FLSTFB
	19818-16	ENGINE ASSEMBLY	FLS
2	16200069	ENGINE ASSEMBLY, shortblock, with 91800042, crankcase, flywheel assembly, camshaft support plate assembly, oil pump, engine balancer and cylinder studs (See Note)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
3	91800042	KIT, shortblock installation, with 17052-99C upper end gasket kit, 25700226	FXSB, FLSTC,

		inner primary gasket kit, camshaft sprockets, camshaft drive chains and camshaft tensioners	FLSTF, FLSTN, FLSTFB, FLS

Note: Cylinders, cylinder heads, rocker arms, pushrods, pushrod covers, camshafts, piston assemblies, tappets, oil filter and cosmetic covers are not included with the shortblock assembly. These parts must be removed from the original engine and installed on the replacement shortblock assembly.

ENGINE ASSEMBLY - TWIN CAM 110™

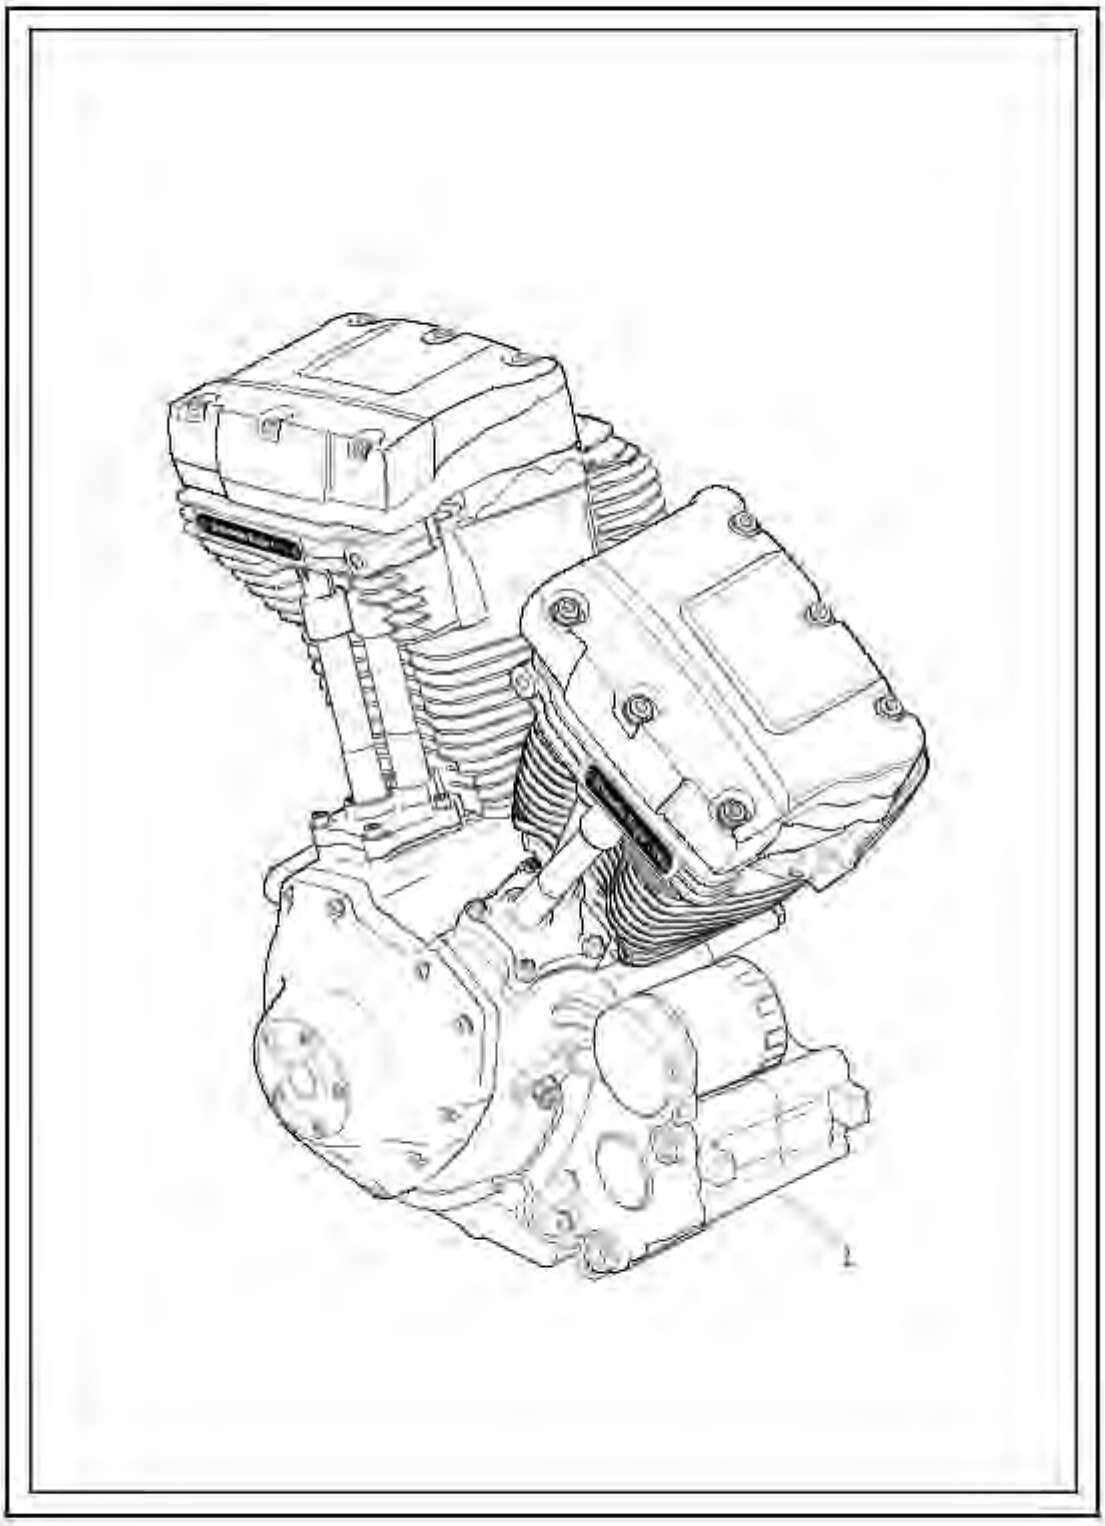

Index No.	Part No.	Description	Model(s)
1	16200175	ENGINE ASSEMBLY, (black)	FLSS, FLSTFBS

CYLINDERS, HEADS, VALVES - TWIN CAM 103™

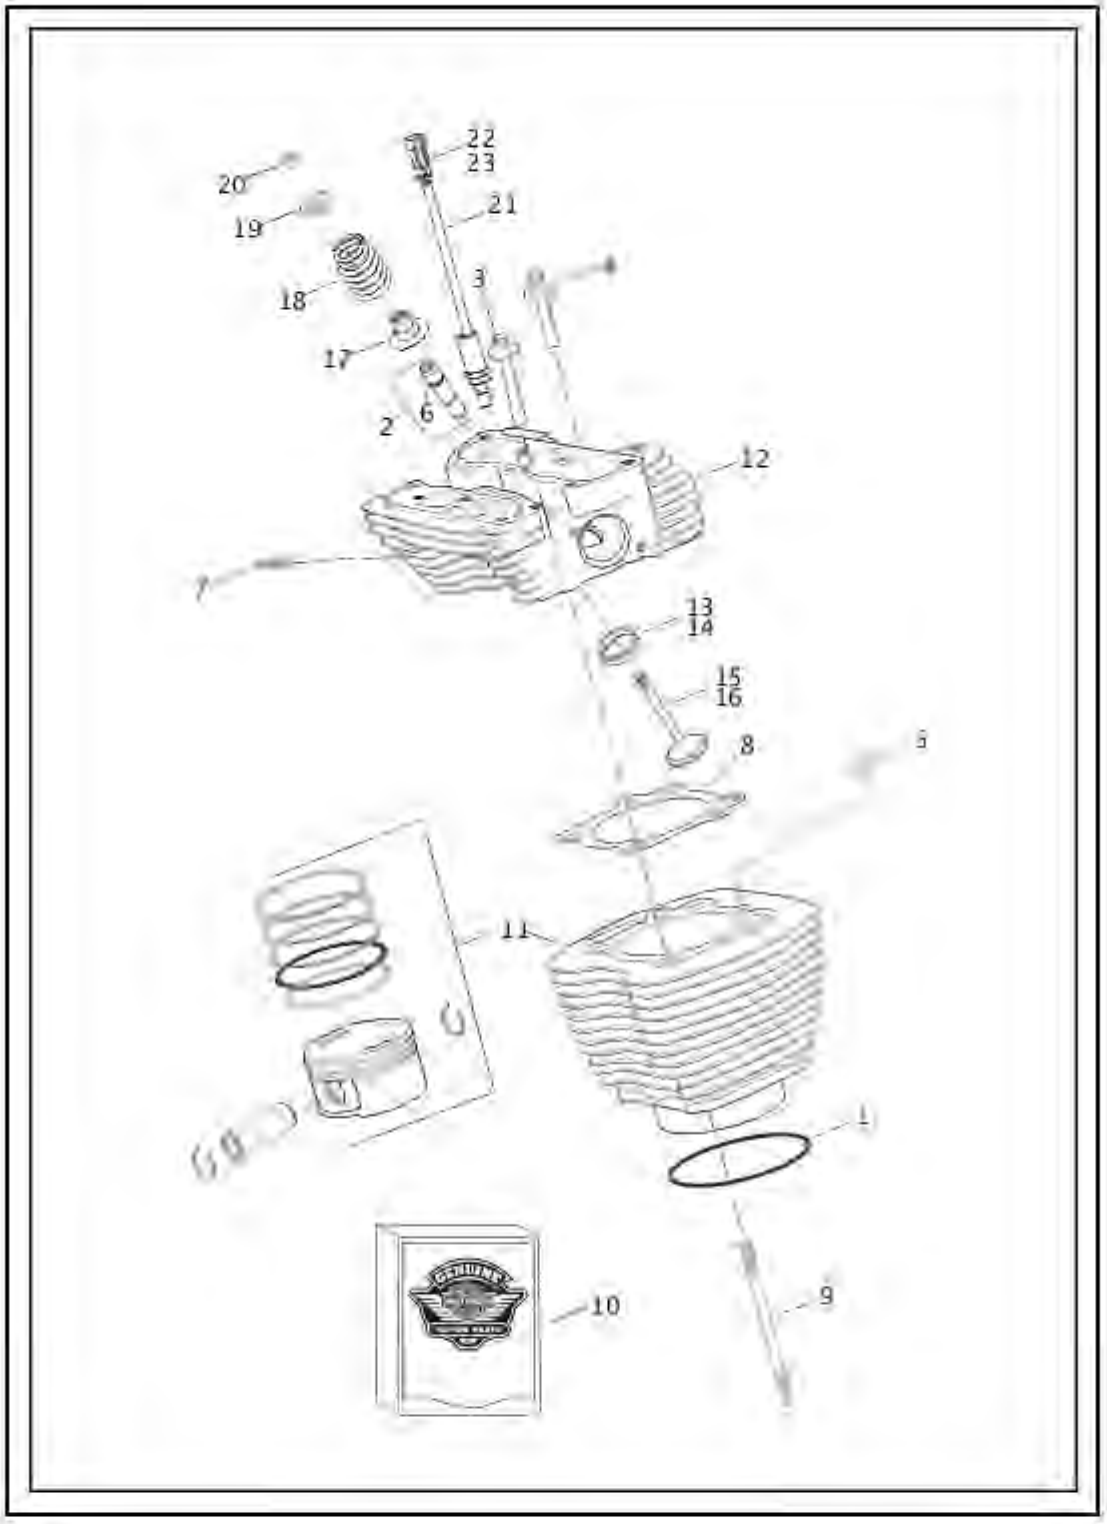

Index No.	Part No.	Description	Model(s)
1	11256	O-RING, cylinder base *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
2	16465-06	VALVE GUIDE, intake and exhaust, with retaining ring *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
3	16478-85A	SCREW, internal thread 3-3/16 in long *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB

4	16480-92A	SCREW, internal thread 1-7/8 in long *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
5	16595-99A	DOWEL PIN, cylinder-to-head *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
6	16699-06	SNAP RING *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
7	16715-83	STUD, exhaust port *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
8	16787-99A	GASKET, cylinder head *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
9	16834-99A	STUD, cylinder *(8)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
10	17052-99C	GASKET KIT, top end	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
	17053-99C	GASKET KIT, engine overhaul	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
11	17460-07A	CYLINDER/PISTON ASSEMBLY KIT, (black highlighted) *(2)*	FLSTC, FLSTF, FLSTFB, FLSTN, FXSB
	16800003A	CYLINDER/PISTON ASSEMBLY KIT, (black non-highlighted) *(2)*	FLS
12	17729-08	CYLINDER HEAD, rear, with guides and seats (black)	FLSTC, FLSTF, FLSTN, FLSTFB, FXSB
	16500023	CYLINDER HEAD, front, with guides and seats (black)	FLSTC, FLSTF, FLSTN, FLSTFB, FXSB
	16500026	CYLINDER HEAD, front, with guides and seats (black)	FLS
	16500027	CYLINDER HEAD, rear, with guides and seats (black)	FLS
13	18011-86	INSERT, exhaust valve seat *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
14	18020-83	INSERT, intake valve seat *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
15	18074-05A	INTAKE VALVE *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
16	18085-05B	EXHAUST VALVE *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
17	18094-02A	SEAL KIT, valve	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
18	18245-02	VALVE SPRING *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
19	18258-02	COLLAR, valve spring *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
20	18260-02	RETAINER, valve collar *(8)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB

21	28861-07A	SOLENOID, auto compression release, with 72009-05 and 72011-05 *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
22	72009-05	HOUSING, two-way, pin *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
23	72011-05	WIRE SEAL, 16-20 AWG (yellow) *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB

CYLINDERS, HEADS AND VALVES - TWIN CAM 110™

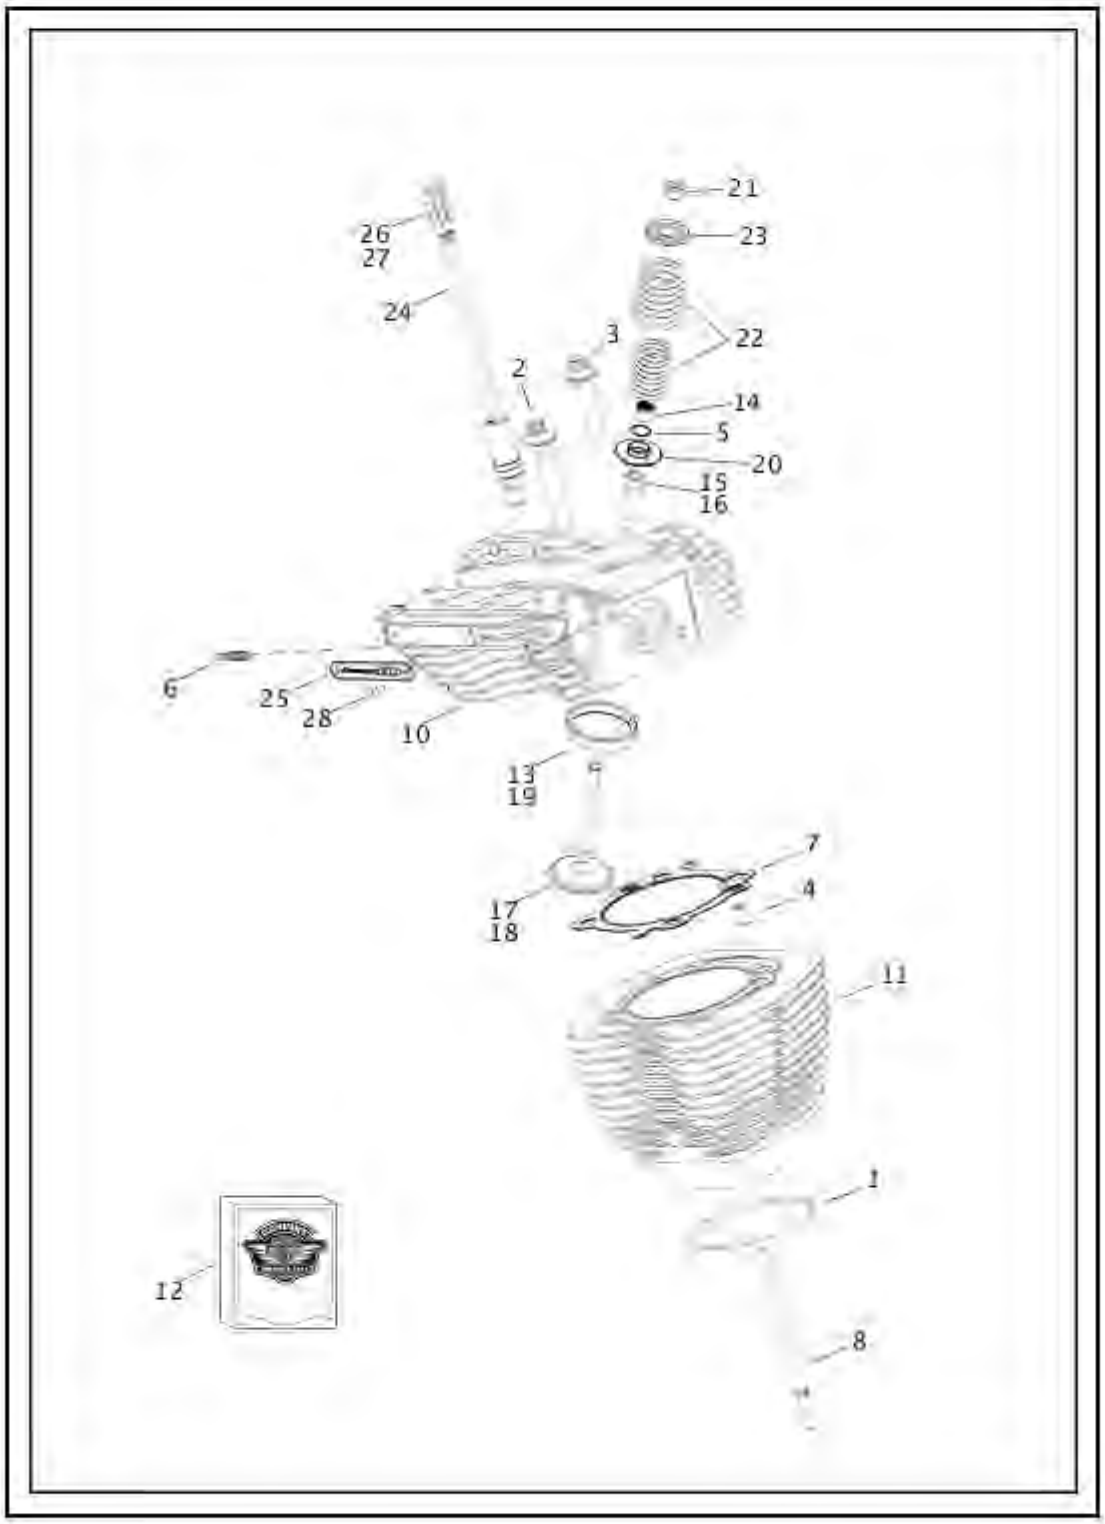

Index	Part No.	Description	Model(s)

No.			
1	11907	O-RING KIT, cylinder-base (set of 2)	FLSS, FLSTFBS
2	16478-85A	SCREW, internal-thread, 3-3/16 in long *(4)*	FLSS, FLSTFBS
3	16480-92A	SCREW, internal-thread, 1-7/8 in long *(4)*	FLSS, FLSTFBS
4	16595-99A	DOWEL, pin *(4)*	FLSS, FLSTFBS
5	16699-06	RETAINING RING *(4)*	FLSS, FLSTFBS
6	16715-83	STUD, exhaust-port *(4)*	FLSS, FLSTFBS
7	16801-07B	GASKET, cylinder-head *(2)*	FLSS, FLSTFBS
8	16834-99A	STUD, cylinder *(8)*	FLSS, FLSTFBS
9	17251-07B	HEAD ASSEMBLY, cylinder, front, with 5, 6, 10, 14, 17, 18, 20, 21 and 22 (black)	FLSS, FLSTFBS
	17252-07A	HEAD ASSEMBLY, cylinder, rear, with 5, 6, 10, 14, 17, 18, 20, 21 and 22 (black)	FLSS, FLSTFBS
10	17253-07B	HEAD, cylinder, front, with 18048-98A, 18161-08, 18168-08 and 18189-07 (black)	FLSS, FLSTFBS
	17257-07A	HEAD, cylinder, rear, with 18048-98A, 18161-08, 18168-08 and 18189-07 (black)	FLSS, FLSTFBS
11	17285-07A	CYLINDER ASSEMBLY, with 16595-99A (black) *(2)*	FLSS, FLSTFBS
12	17349-07B	GASKET KIT, top-end	FLSS, FLSTFBS
	17350-07B	GASKET KIT, engine overhaul	FLSS, FLSTFBS
13	18048-98A	SEAT, exhaust-valve *(2)*	FLSS, FLSTFBS
14	18067-09	SEAL, valve *(4)*	FLSS, FLSTFBS
15	18161-08	GUIDE, intake-valve *(2)*	FLSS, FLSTFBS
16	18168-08	GUIDE, exhaust-valve *(2)*	FLSS, FLSTFBS
17	18183-03	VALVE, exhaust *(2)*	FLSS, FLSTFBS
18	18187-07	VALVE, intake *(2)*	FLSS, FLSTFBS

19	18189-07	SEAT, intake-valve *(2)*	FLSS, FLSTFBS
20	18270-00A	COLLAR, lower, valve-spring *(4)*	FLSS, FLSTFBS
21	18271-00	KEY, collar, valve-spring *(8)*	FLSS, FLSTFBS
22	18272-00	SPRING SET, inner and outer, valve *(4)*	FLSS, FLSTFBS
23	18280-07	COLLAR, upper, valve-spring *(4)*	FLSS, FLSTFBS
24	28861-07A	SOLENOID, auto compression release, with 72009-05 and 72011-05 *(2)*	FLSS, FLSTFBS
25	29517-07A	MEDALLION KIT	FLSS, FLSTFBS
26	72009-05	HOUSING, two-way pin *(2)*	FLSS, FLSTFBS
27	72011-05	WIRE SEAL, 16-20 AWG (yellow) *(4)*	FLSS, FLSTFBS
28	25800017	SCREW, medallion *(4)*	FLSS, FLSTFBS

ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™

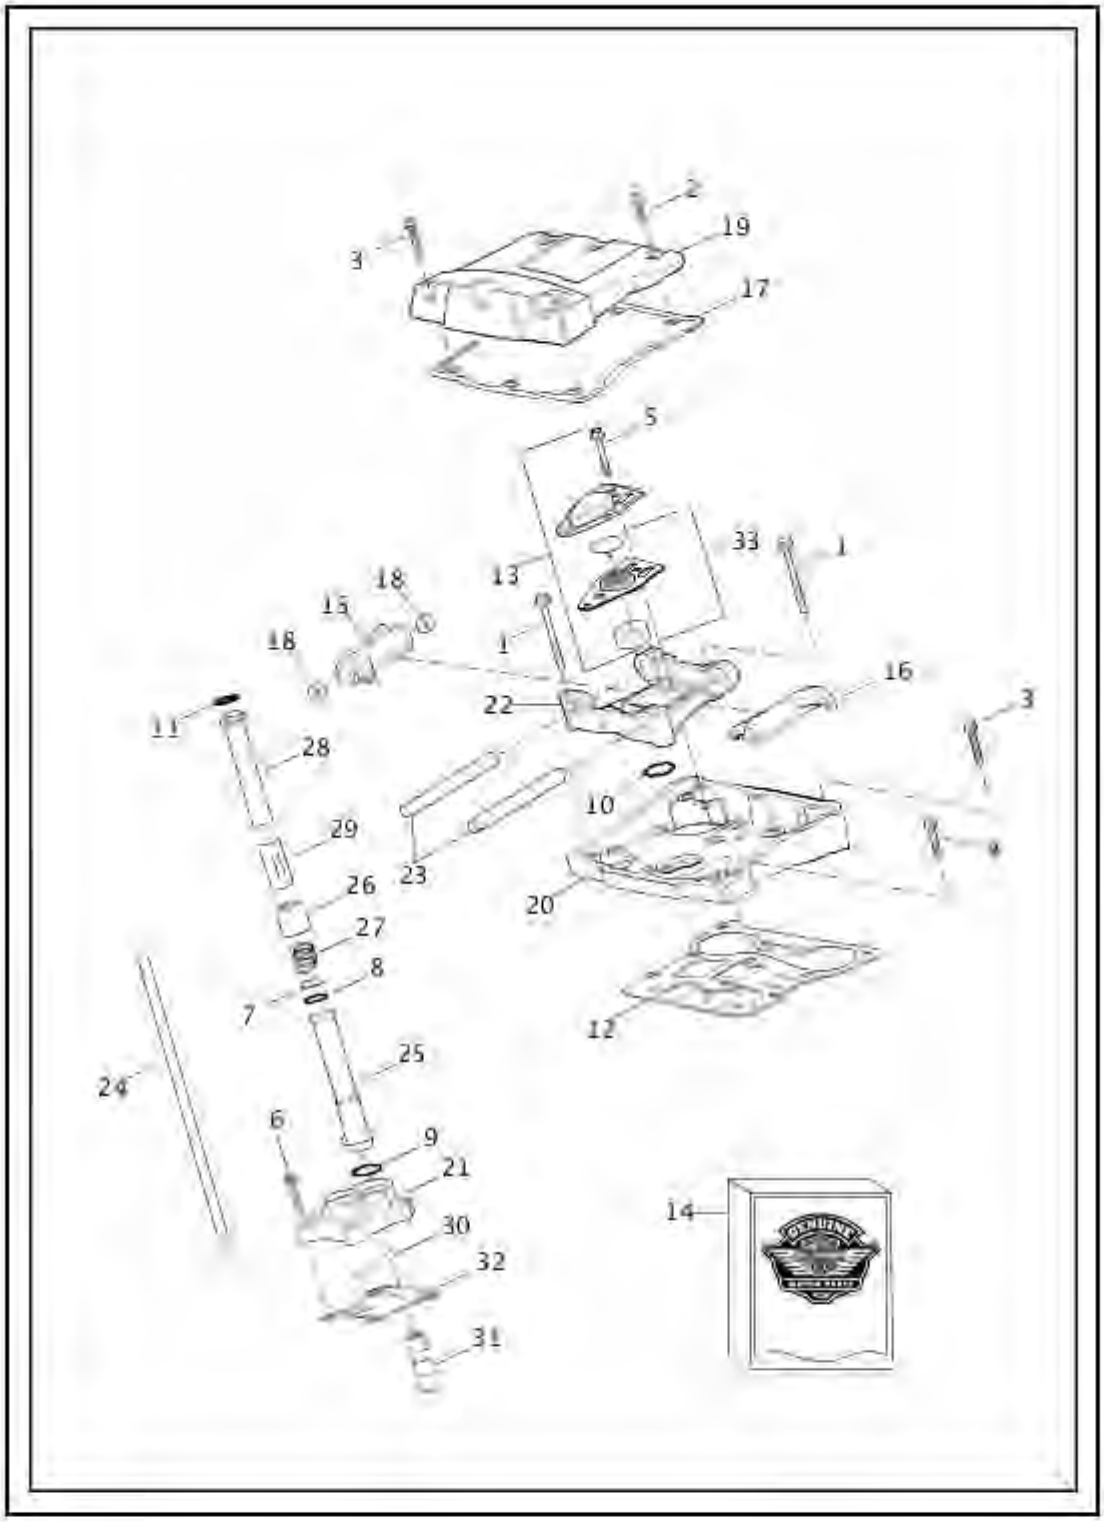

Index No.	Part No.	Description	Model(s)
1	1039	SCREW *(8)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
2	3692A	SCREW *(6)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
3	3693A	SCREW *(10)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
4	3736B	SCREW *(8)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

5	4400	BOLT *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
6	4741A	SCREW *(8)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
7	6762B	WASHER *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
8	11132A	O-RING, pushrod cover *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
9	11145A	O-RING, pushrod cover *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
10	11270	O-RING *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
11	11293	O-RING *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
12	16719-99B	GASKET, rocker housing *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
13	17025-03A	BREATHER ASSEMBLY *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
14	17045-99D	GASKET KIT, camshaft service	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
15	17360-83A	ROCKER ARM, front intake, rear exhaust, with 17429-91 *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
16	17375-83A	ROCKER ARM, rear intake, front exhaust, with 17429-91 *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
17	17386-99A	GASKET, rocker cover *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
18	17429-91	BEARING, rocker arm *(8)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
19	17572-99	ROCKER COVER, (chrome) *(2)*	FLSTC, FLSTF, FLSTN, FXSB
	17575-99	ROCKER COVER, (polished) *(2)*	FLS
	17595-10	ROCKER COVER, (satin chrome) *(2)*	FLSTFB
20	17573-99A	ROCKER HOUSING, (chrome) *(2)*	FLSTC, FLSTF, FLSTN, FXSB
	17574-99A	ROCKER HOUSING, (polished) *(2)*	FLS
	17587-10	ROCKER HOUSING, (satin chrome) *(2)*	FLSTFB
21	17576-99	LIFTER COVER, front (polished)	FLS
	17577-99	LIFTER COVER, rear (polished)	FLS
	17596-10	LIFTER COVER, front (satin chrome)	FLSTFB
	17654-10	LIFTER COVER, rear (satin chrome)	FLSTFB
	17964-99	LIFTER COVER, front (chrome)	FLSTC, FLSTF, FLSTN, FXSB

	17966-99	LIFTER COVER, rear (chrome)	FLSTC, FLSTF, FLSTN, FXSB
22	17594-99	SUPPORT, rocker arm *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
23	17611-83	SHAFT, rocker arm *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
24	17922-99	PUSHROD, exhaust, 10.536 in length (black oxide finish) *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	17923-99	PUSHROD, intake, 10.418 in length (plain finish) *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
25	17939-99	COVER, pushrod (lower) *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
26	17945-36B	CAP, cover spring *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
27	17947-36	SPRING, pushrod cover *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
28	17948-99	COVER, pushrod (upper) *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
29	17968-99	RETAINER, spring cap *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
30	18535-99	PIN, anti-rotation *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
31	18538-99C	HYDRAULIC LIFTER *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
32	18635-99B	GASKET, lifter cover *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
33	26500002	BREATHER, baffle assembly, with gaskets *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™

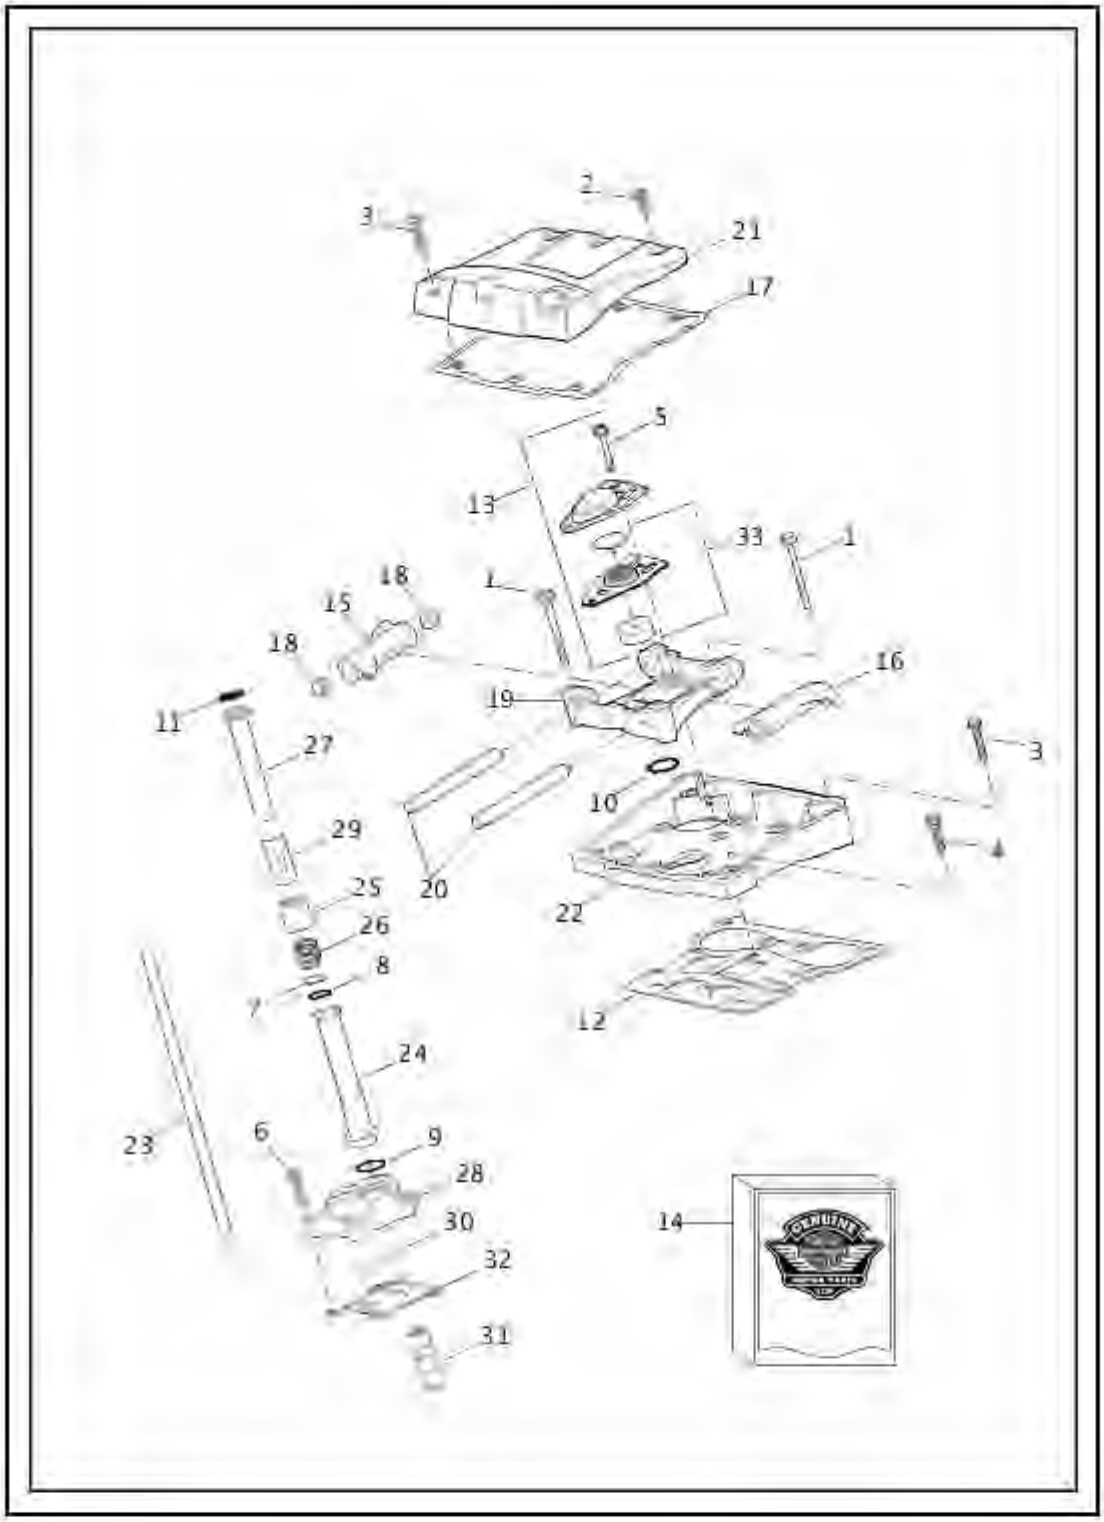

Index No.	Part No.	Description	Model(s)
1	1039	SCREW *(8)*	FLSS, FLSTFBS
2	3692A	SCREW *(6)*	FLSS, FLSTFBS
3	3693A	SCREW *(10)*	FLSS, FLSTFBS
4	3736B	SCREW *(8)*	FLSS, FLSTFBS
5	4400	BOLT *(4)*	FLSS, FLSTFBS
6	4741A	SCREW *(8)*	FLSS, FLSTFBS
7	6762B	WASHER *(4)*	FLSS, FLSTFBS

8	11132A	O-RING, push rod cover *(4)*	FLSS, FLSTFBS
9	11145A	O-RING, push rod cover *(4)*	FLSS, FLSTFBS
10	11270	O-RING *(2)*	FLSS, FLSTFBS
11	11293	O-RING *(4)*	FLSS, FLSTFBS
12	16719-99B	GASKET, rocker housing *(2)*	FLSS, FLSTFBS
13	17025-03A	BREATHER ASSEMBLY *(2)*	FLSS, FLSTFBS
14	17045-99D	GASKET KIT, cam service	FLSS, FLSTFBS
15	17360-83A	ROCKER ARM, front intake, rear exhaust, with bushings *(2)*	FLSS, FLSTFBS
16	17375-83A	ROCKER ARM, rear intake, front exhaust, with bushings *(2)*	FLSS, FLSTFBS
17	17386-99A	GASKET, rocker cover *(2)*	FLSS, FLSTFBS
18	17429-91	BEARING, rocker arm *(8)*	FLSS, FLSTFBS
19	17594-99	SUPPORT, rocker arm *(2)*	FLSS, FLSTFBS
20	17611-83	SHAFT, rocker arm *(4)*	FLSS, FLSTFBS
21	17707-11	ROCKER COVER, (black) *(2)*	FLSS, FLSTFBS
22	17709-11	ROCKER HOUSING, (black) *(2)*	FLSS, FLSTFBS
23	17922-99	PUSH ROD, exhaust, 10.536 in long (black oxide finish) *(2)*	FLSS, FLSTFBS
	17923-99	PUSH ROD, intake, 10.418 in long (plain finish) *(2)*	FLSS, FLSTFBS
24	17939-99	COVER, push rod, lower *(4)*	FLSS, FLSTFBS
25	17945-36B	CAP, cover spring *(4)*	FLSS, FLSTFBS
26	17947-36	SPRING, push rod cover *(4)*	FLSS, FLSTFBS
27	17948-99	COVER, push rod, upper *(4)*	FLSS, FLSTFBS
28	17964-99	LIFTER COVER, front (chrome)	FLSS, FLSTFBS
	17966-99	LIFTER COVER, rear (chrome)	FLSS, FLSTFBS
29	17968-99	RETAINER, spring cap *(4)*	FLSS, FLSTFBS
30	18535-99	PIN, anti-rotation *(2)*	FLSS, FLSTFBS
31	18572-13	KIT-TAPPET	FLSS, FLSTFBS
32	18635-99B	GASKET, lifter cover *(2)*	FLSS, FLSTFBS
33	26500002	BREATHER, baffle assembly, with gaskets *(2)*	FLSS, FLSTFBS

PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™

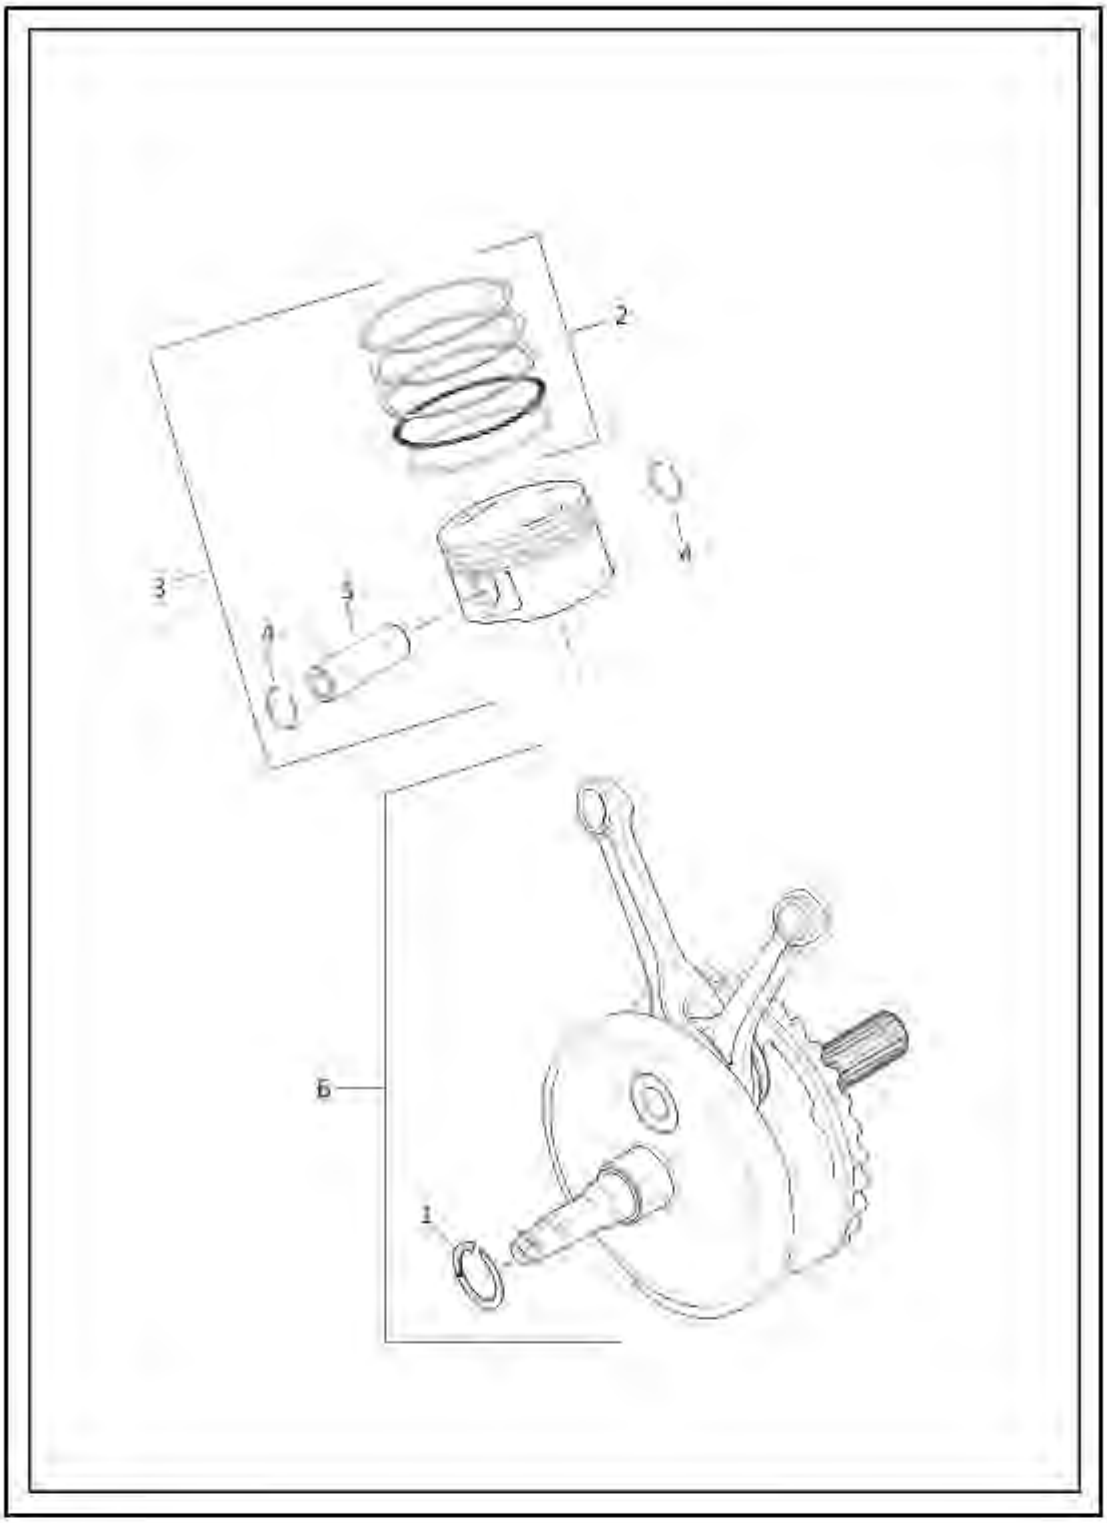

Index No.	Part No.	Description	Model(s)
1	11177A	RETAINING RING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
2	21918-99	PISTON RING SET, standard *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	21919-99	PISTON RING SET, 0.005 in over-size *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	21945-99	PISTON RING SET, 0.010 in over-size *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

3	21962-07	PISTON AND RINGS ASSEMBLY, with piston pin and lock rings, standard *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	21963-07	PISTON AND RINGS ASSEMBLY, with piston pin and lock rings, 0.005 in over-size *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	21964-07	PISTON AND RINGS ASSEMBLY, with piston pin and lock rings, 0.010 in over-size *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
4	22097-99	LOCK RING, piston pin *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
5	22131-05	PISTON PIN *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
6	23912-07B	FLYWHEEL ASSEMBLY KIT	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 110™

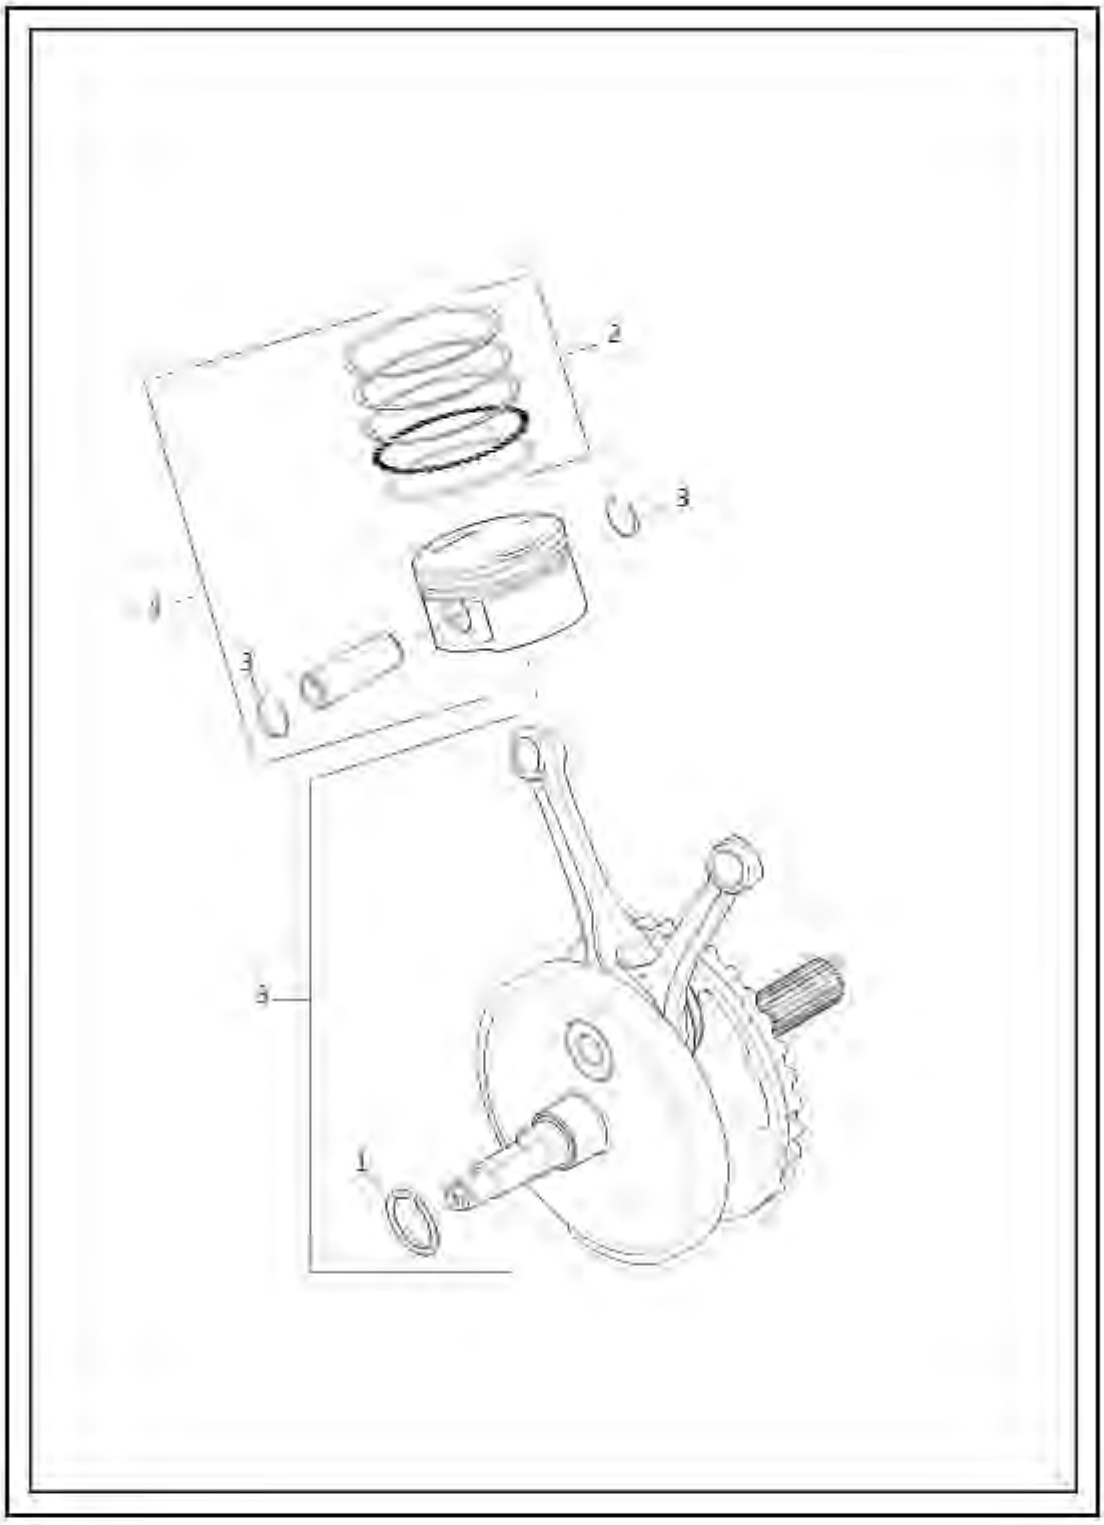

Index No.	Part No.	Description	Model(s)
1	11177A	RETAINING RING	FLSS, FLSTFBS
2	21951-11	KIT PISTON RING SET, standard *(2)*	FLSS, FLSTFBS
	21953-11	KIT PISTON RING SET, 0.010 in OS *(2)*	FLSS, FLSTFBS
3	22097-99	LOCK RING, piston pin *(4)*	FLSS, FLSTFBS

4	22000001	KIT PISTON AND RINGS ASSEMBLY, with piston pin and lock rings - standard *(2)*	FLSS, FLSTFBS
	22000003	KIT PISTON AND RINGS ASSEMBLY, with piston pin and lock rings - 0.010 in over-size *(2)*	FLSS, FLSTFBS
5	24100022	FLYWHEEL, with 11177A, thrust washer, plugs, inner race, connecting rods, flywheels, bearings, crankpin and ring	FLSS, FLSTFBS

CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™

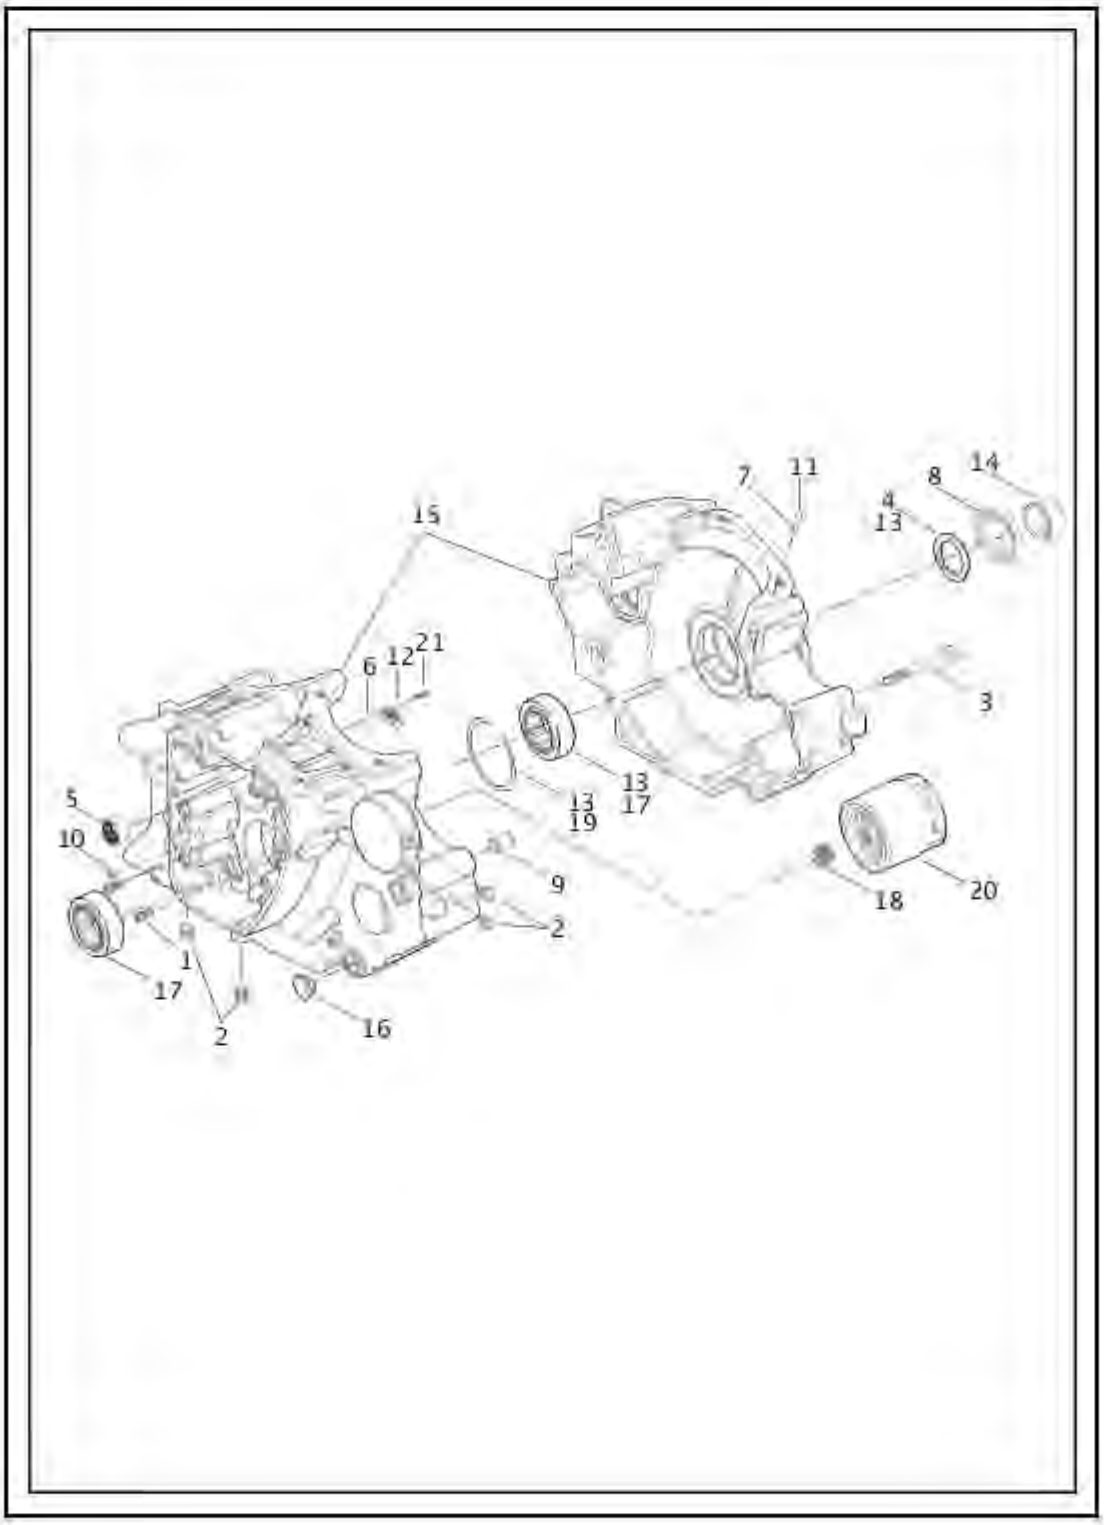

Index	Part	Description	Model(s)

No.	No.		
1	703B	SCREW *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
2	765	PLUG *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
3	895	SCREW *(12)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
4	8972	WASHER *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
5	9215	NEEDLE BEARING, left side of camshafts *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
6	11140	O-RING *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
7	11273	O-RING *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
8	12068	OIL SEAL	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
9	16574-99A	DOWEL PIN *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
10	16589-99A	DOWEL PIN *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
11	16595-99A	DOWEL PIN *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
12	22307-99	PISTON COOLING JET, with 11140 *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
13	24004-03B	BEARING KIT, left side with 8972, 24605-07 and 35114-02	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
14	24009-06	SPACER, sprocket shaft	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
15	24722-07B	SET OF CRANKCASES, with bearings, cooling jets and through bolts (black)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
16	24603-00	SPACER *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
17	24605-07	BEARING, main *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
18	26352-95A	ADAPTER, oil filter	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
19	35114-02	RETAINING RING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
20	63798-99A	OIL FILTER, (chrome)	FLSTC, FLSTF, FLSTN, FXSB
	63731-99A	OIL FILTER, (black)	FLSTFB, FLS

21	68042-99	SCREW *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™

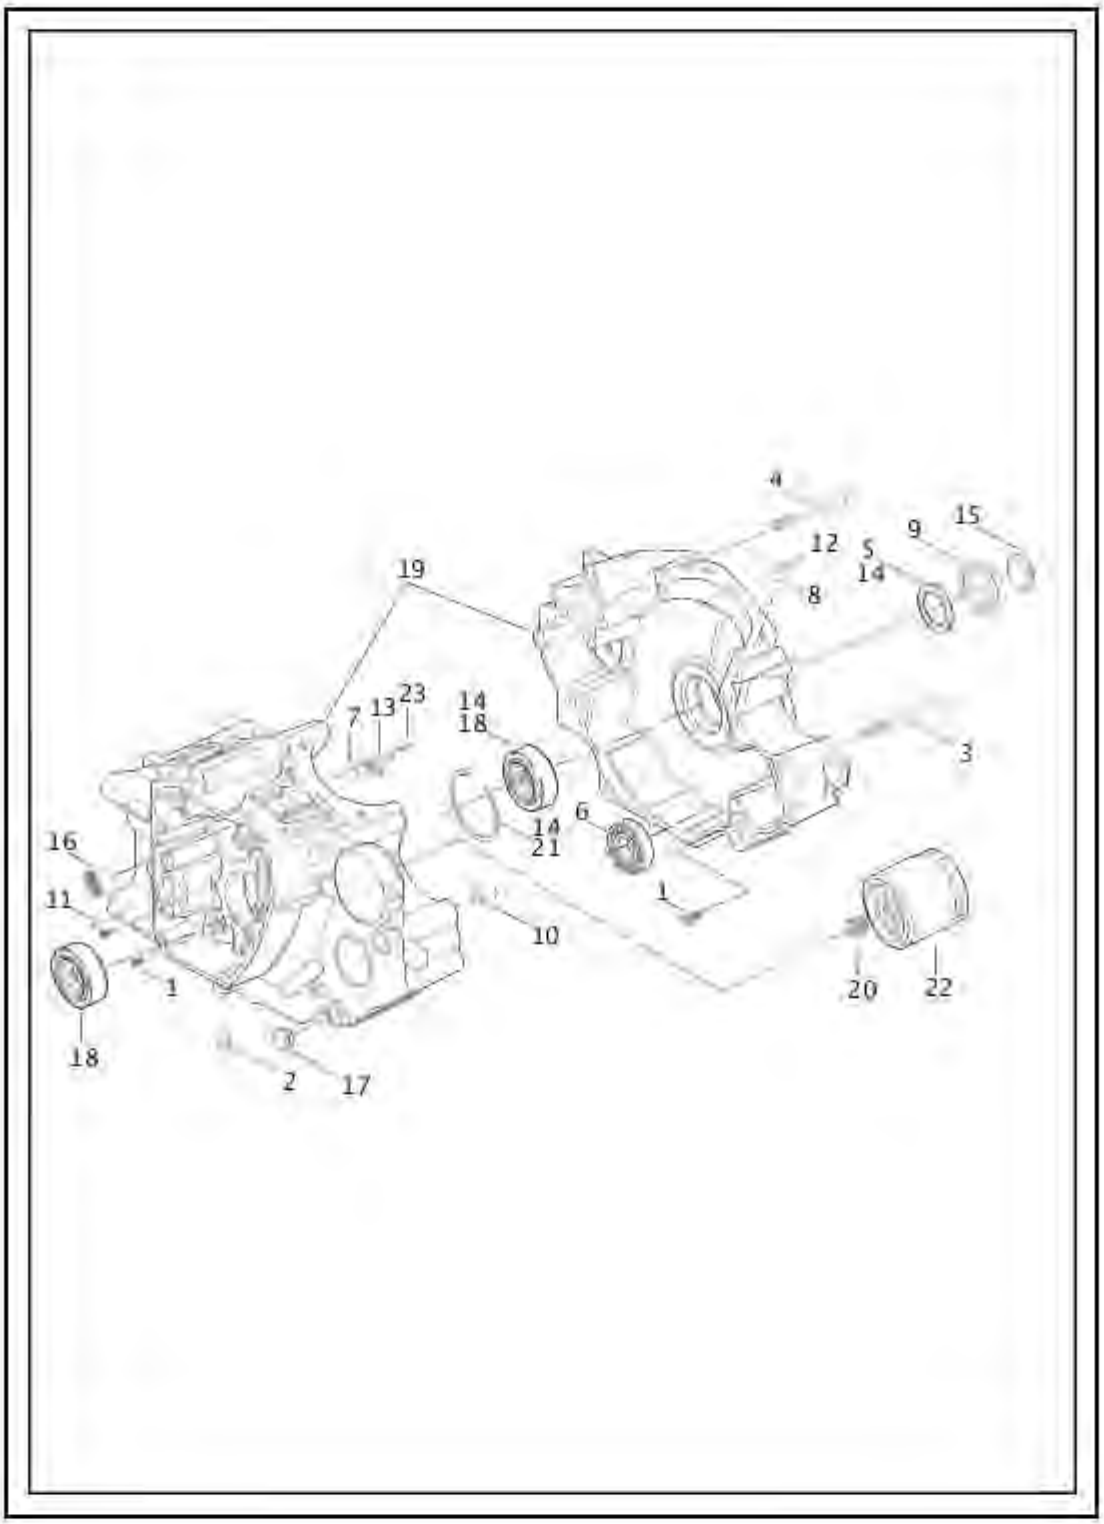

Index No.	Part No.	Description	Model(s)
1	703B	SCREW *(2)*	FLSS, FLSTFBS
2	765	PLUG *(4)*	FLSS, FLSTFBS
3	895	SCREW *(11)*	FLSS, FLSTFBS

4	1090A	SCREW	FLSS, FLSTFBS
5	8972	WASHER *(2)*	FLSS, FLSTFBS
6	8992A	BEARING *(2)*	FLSS, FLSTFBS
7	11140	O-RING *(2)*	FLSS, FLSTFBS
8	11907	O-RING KIT, with cylinder base O-ring	FLSS, FLSTFBS
9	12068	OIL SEAL	FLSS, FLSTFBS
10	16574-99A	DOWEL RING *(2)*	FLSS, FLSTFBS
11	16589-99A	DOWEL RING *(2)*	FLSS, FLSTFBS
12	16595-99A	DOWEL, pin *(4)*	FLSS, FLSTFBS
13	22307-99	PISTON COOLING JET, with 11140 *(2)*	FLSS, FLSTFBS
14	24004-03B	BEARING ASSEMBLY, with 8972, 24605-07 and 35114-02	FLSS, FLSTFBS
15	24009-06	SPACER, sprocket shaft	FLSS, FLSTFBS
16	24018-10	NEEDLE BEARING, left side of camshafts *(2)*	FLSS, FLSTFBS
17	24603-00	SPACER *(4)*	FLSS, FLSTFBS
18	24605-07	BEARING *(2)*	FLSS, FLSTFBS
19	24722-07B	SET OF CRANKCASES, (black)	FLSS, FLSTFBS
20	26352-95A	ADAPTER, oil filter	FLSS, FLSTFBS
21	35114-02	RETAINING RING	FLSS, FLSTFBS
22	63731-99A	OIL FILTER, (black)	FLSS, FLSTFBS
23	68042-99	SCREW *(4)*	FLSS, FLSTFBS

ENGINE BALANCER

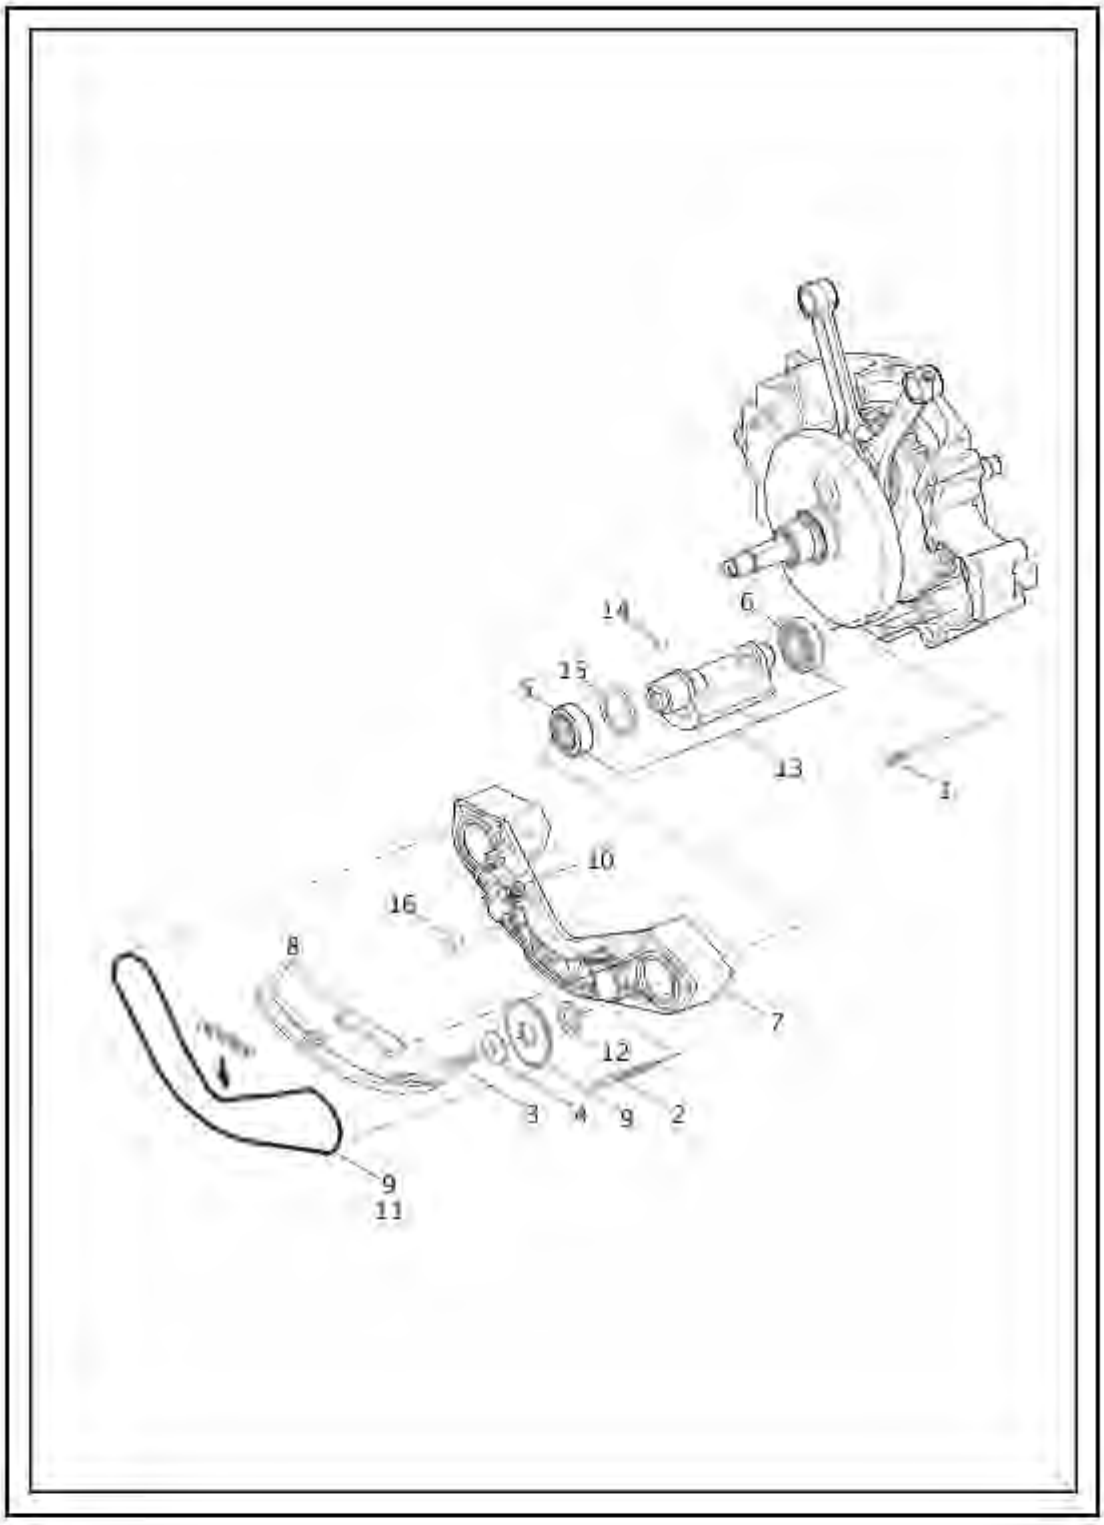

Index No.	Part No.	Description	Model(s)
1	703B	SCREW *(2)*	
2	956	SCREW *(6)*	
3	3110	BOLT, balancer shift bolt *(2)*	
4	6456	WASHER, balancer shift bolt *(2)*	
5	8959	BEARING, shell *(2)*	
6	8992A	BEARING *(2)*	
7	14728-07	SUPPORT ASSEMBLY, chain guide, includes tensioner pistons	

8	14761-00	GUIDE KIT, chain tensioner, includes lower, front and rear guides	
9	14762-00	CHAIN DRIVE KIT, with 14769-00, front and rear sprockets	
10	14764-00	PISTON ASSEMBLY KIT, chain tensioner *(2)*	
11	14769-00	CHAIN, balancer drive	
12	14784-07	SPACER, .039 in thick *(2)*	
13	14789-07	BALANCE SHAFT KIT, with 8959, 8992A and balance shaft *(2)*	
14	16583-00A	BUSHING, dowel *(2)*	
15	35240-07	RETAINING RING, balancer shift bearing *(2)*	
16	45359-00	SEAL, oil interconnect	

CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™

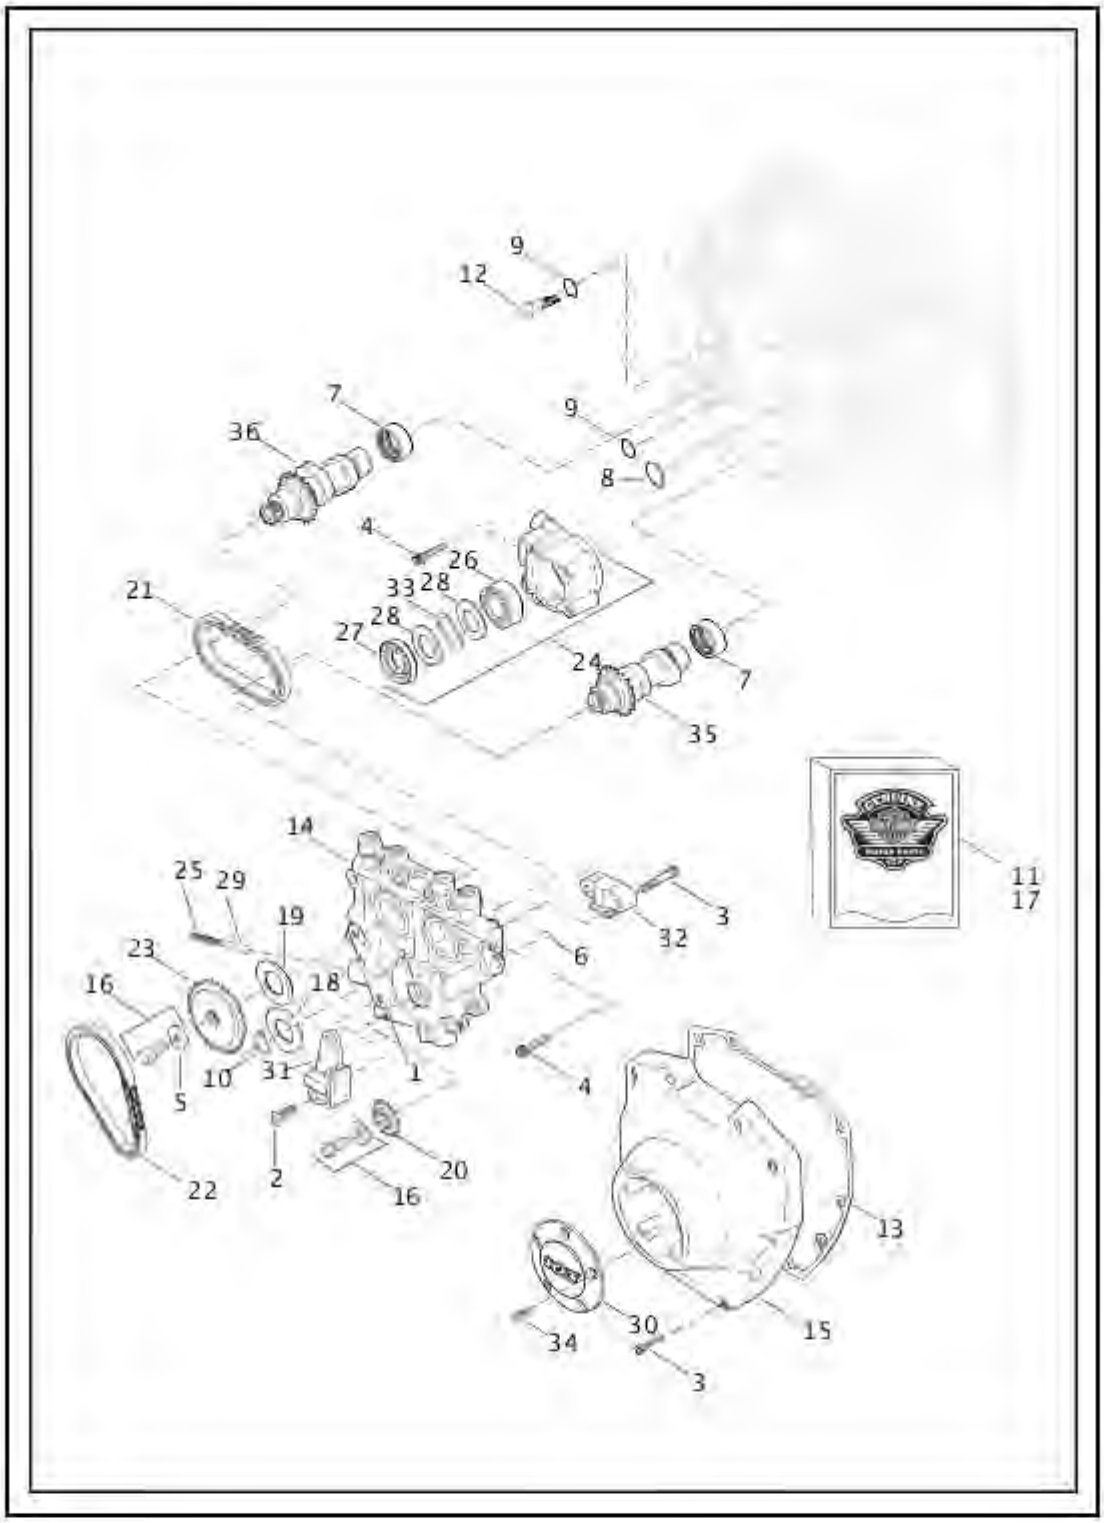

Index No.	Part No.	Description	Model(s)
1	601	ROLL PIN	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
2	942	SCREW, primary camshaft chain tensioner *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
3	4740A	SCREW, camshaft cover *(10)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
3	4740A	SCREW, secondary camshaft tensioner *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

4	4741A	SCREW *(10)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
5	6294	WASHER	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
6	8873	BALL *(14)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
7	9215	NEEDLE BEARING, camshaft *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
8	11293	O-RING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
9	11301	O-RING *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
10	11461	RETAINING RING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
11	17045-99D	GASKET KIT, camshaft service	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
12	24983-00	SCREEN, oil	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
13	25244-99A	GASKET, camshaft cover	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
14	25355-06A	CAMSHAFT SUPPORT PLATE, with bypass valve	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
15	25363-01B	CAMSHAFT COVER, (polished)	FLS
	25369-01B	CAMSHAFT COVER, (chrome)	FLSTC, FLSTF, FLSTN, FXSB
	25395-10	CAMSHAFT COVER, (satin chrome)	FLSTFB
16	25566-06	CAMSHAFT DRIVE SPROCKET RETENTION KIT, with screws and washers	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
17	25585-06	CAMSHAFT CHAIN AND FASTENER KIT	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
18	25729-06	SPACER, camshaft drive sprocket alignment 0.100 in thick	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
19	25729-06	SPACER, camshaft drive sprocket alignment 0.100 in thick (use as required)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	25731-06	SPACER, camshaft drive sprocket alignment 0.110 in thick (use as required)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	25734-06	SPACER, camshaft drive sprocket alignment 0.120 in thick (use as required)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	25736-06	SPACER, camshaft drive sprocket alignment 0.130 in thick (use as required)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	25737-06	SPACER, camshaft drive sprocket alignment 0.140 in thick (use as required)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

	25738-06	SPACER, camshaft drive sprocket alignment 0.150 in thick (use as required)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
20	25673-06	SPROCKET, camshaft drive on crankshaft, 17 teeth	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
21	25683-06	CHAIN, secondary camshaft drive	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
22	25675-06	CHAIN, primary camshaft drive	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
23	25728-06	SPROCKET, camshaft drive, 34 teeth	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
24	26037-06	OIL PUMP ASSEMBLY, with body and internal parts	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
25	26210-99	SPRING, relief valve	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
26	26278-06	GEROTOR ASSEMBLY, scavenge	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
27	26281-06	GEROTOR ASSEMBLY, pressure	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
28	26282-06	SEPARATOR PLATE, gerotor *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
29	26400-82B	RELIEF VALVE, oil pump	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
30	32727-00	TIMER COVER, (chrome)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB
	32543-07	TIMER COVER, (denim black)	FLS
31	39968-06	CHAIN TENSIONER, primary camshaft drive chain	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
32	39969-06	CHAIN TENSIONER, secondary camshaft drive chain	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
33	40323-00	SPRING, separator	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
34	68120-00	SCREW *(5)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
35	25400002	CAMSHAFT, front	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
36	25400003	CAMSHAFT, rear	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™

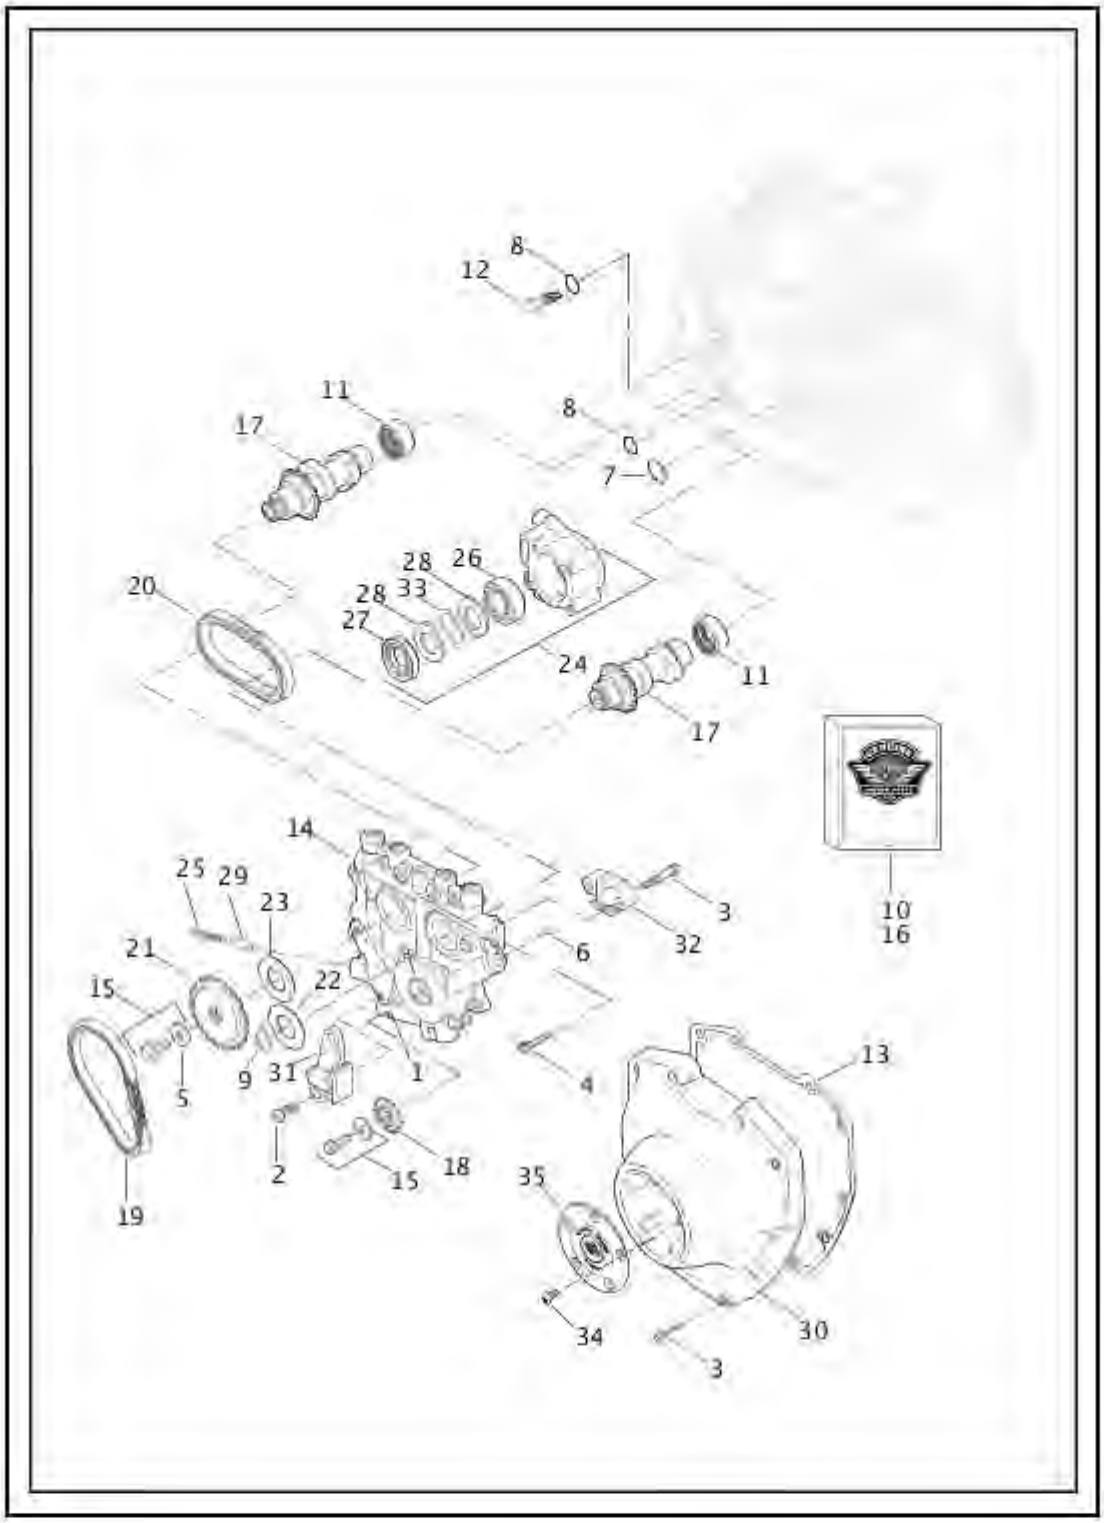

Index No.	Part No.	Description	Model(s)
1	601	ROLL PIN	FLSS, FLSTFBS
2	942	SCREW *(2)*	FLSS, FLSTFBS
3	4740A	SCREW *(12)*	FLSS, FLSTFBS
4	4741A	SCREW *(10)*	FLSS, FLSTFBS
5	6294	WASHER	FLSS, FLSTFBS
6	8873	BALL *(12)*	FLSS, FLSTFBS
7	11293	O-RING	FLSS, FLSTFBS

8	11301	O-RING *(2)*	FLSS, FLSTFBS
9	11461	RETAINING RING	FLSS, FLSTFBS
10	17045-99D	GASKET KIT, cam service	FLSS, FLSTFBS
11	24018-10	NEEDLE BEARING, camshaft	FLSS, FLSTFBS
12	24983-00	SCREEN, oil	FLSS, FLSTFBS
13	25244-99A	GASKET, cam cover	FLSS, FLSTFBS
14	25355-06A	CAM SUPPORT PLATE, with bypass valve	FLSS, FLSTFBS
15	25566-06	CAM DRIVE SPROCKET RETENTION KIT, with screws and washers	FLSS, FLSTFBS
16	25585-06	CAMSHAFT CHAIN AND FASTENER KIT	FLSS, FLSTFBS
17	25638-07	CAMSHAFT KIT	FLSS, FLSTFBS
18	25673-06	SPROCKET, cam drive on crankshaft, 17 T	FLSS, FLSTFBS
19	25675-06	CHAIN, primary cam drive	FLSS, FLSTFBS
20	25683-06	CHAIN, secondary cam drive	FLSS, FLSTFBS
21	25728-06	SPROCKET, cam drive, 34 T	FLSS, FLSTFBS
22	25729-06	SPACER, cam drive sprocket alignment 0.100 in thick	FLSS, FLSTFBS
23	25729-06	SPACER, cam drive sprocket alignment 0.100 in thick (use as required)	FLSS, FLSTFBS
	25731-06	SPACER, cam drive sprocket alignment 0.110 in thick (use as required)	FLSS, FLSTFBS
	25734-06	SPACER, cam drive sprocket alignment 0.120 in thick (use as required)	FLSS, FLSTFBS
	25736-06	SPACER, cam drive sprocket alignment 0.130 in thick (use as required)	FLSS, FLSTFBS
	25737-06	SPACER, cam drive sprocket alignment 0.140 in thick (use as required)	FLSS, FLSTFBS
	25738-06	SPACER, cam drive sprocket alignment 0.150 in thick (use as required)	FLSS, FLSTFBS
24	26037-06	OIL PUMP, with body and internal parts	FLSS, FLSTFBS
25	26210-99	SPRING, relief valve	FLSS, FLSTFBS
26	26278-06	GEROTOR ASSEMBLY, scavenge	FLSS, FLSTFBS
27	26281-06	GEROTOR ASSEMBLY, pressure	FLSS, FLSTFBS
28	26282-06	SEPARATOR PLATE, gerotor *(2)*	FLSS, FLSTFBS
29	26400-82B	RELIEF VALVE, oil pump	FLSS, FLSTFBS
30	37198-11	CAM COVER, (gloss black)	FLSS, FLSTFBS
31	39968-06	CHAIN TENSIONER, primary cam drive chain	FLSS, FLSTFBS
32	39969-06	CHAIN TENSIONER, secondary cam drive chain	FLSS, FLSTFBS
33	40323-00	SPRING, separator	FLSS, FLSTFBS
34	68120-00	SCREW *(5)*	FLSS, FLSTFBS

35	25600012	TIMER COVER, (black)	FLSS, FLSTFBS

ENGINE MOUNTS

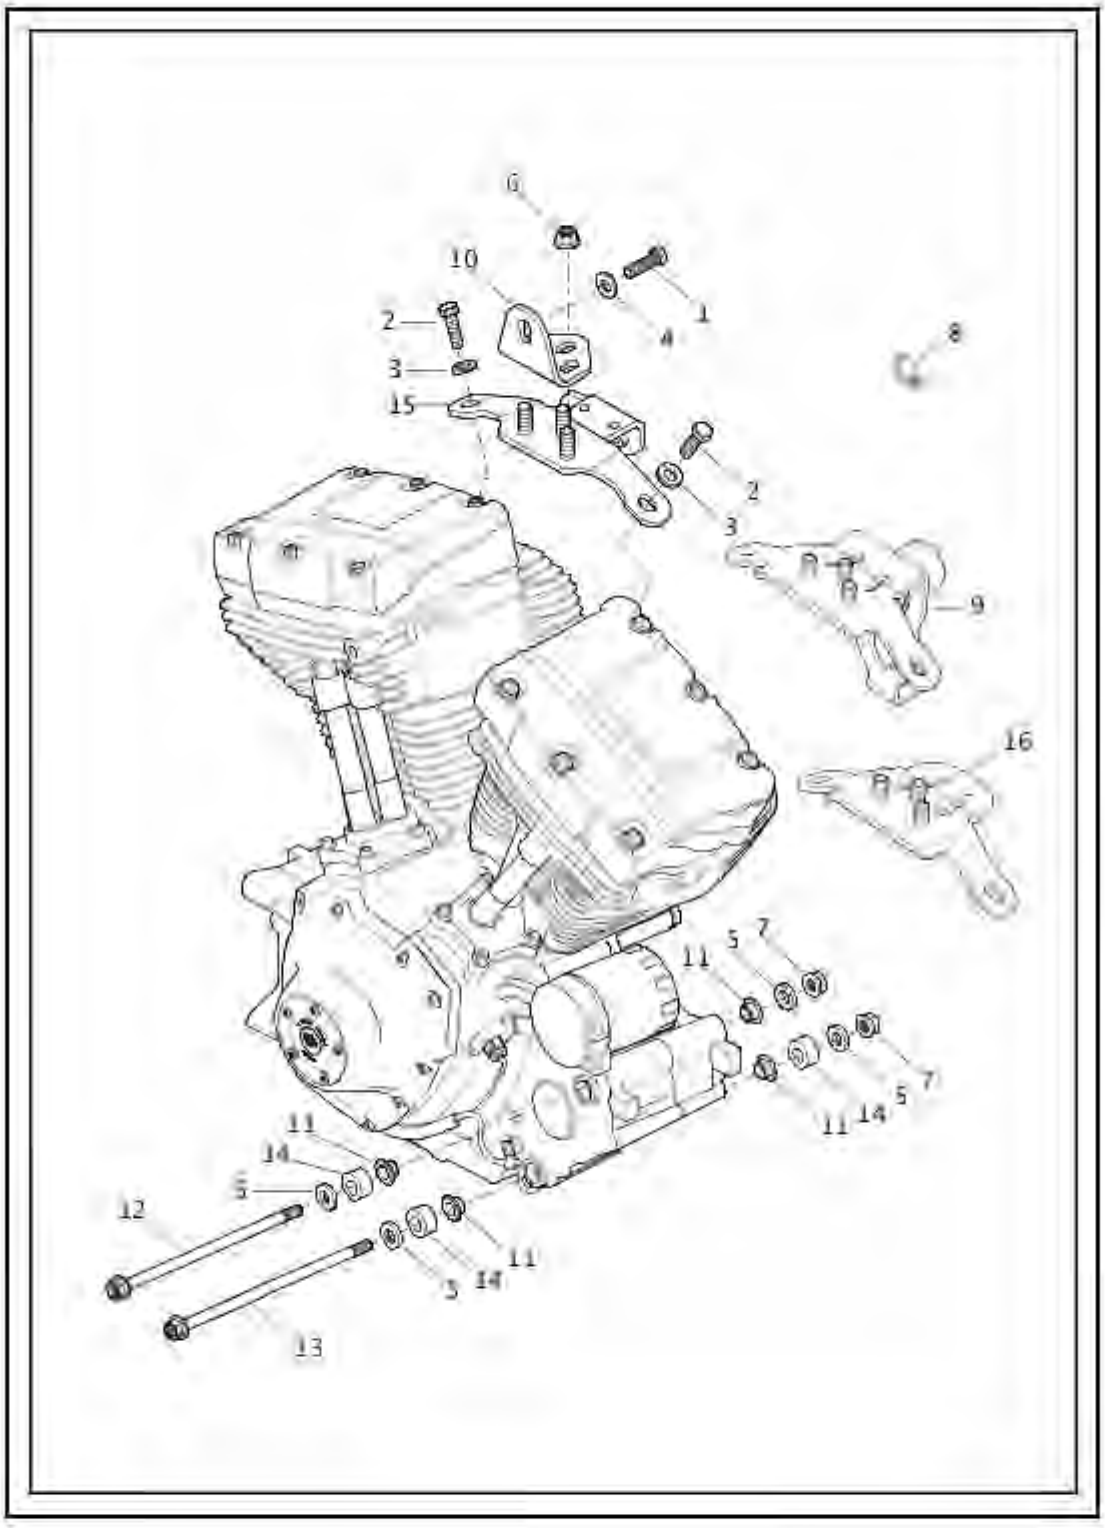

Index No.	Part No.	Description	Model(s)
1	4729	BOLT	
2	4775	SCREW *(2)*	
3	6019	WASHER *(2)*	

4	6516HW	WASHER	
5	6530	WASHER *(4)*	
6	7601	LOCKNUT *(3)*	
7	7879	NUT, flange *(2)*	
8	10177	CABLE STRAP *(2)*	
9	16236-08A	BRACKET ASSEMBLY, engine mount	FXSB
10	16247-06	BRACKET, engine mount	
11	24603-00	SPACER *(4)*	
12	48054-00	BOLT	
13	48093-00	BOLT	
14	48094-00	SPACER, engine mount *(3)*	
15	69046-06A	BRACKET ASSEMBLY, engine mount	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
16	16400017	BRACKET ASSEMBLY, engine mount, without horn (India only)	FLSTC, FLSTF, FLSTFB, FXSB

INDUCTION MODULE, FUEL

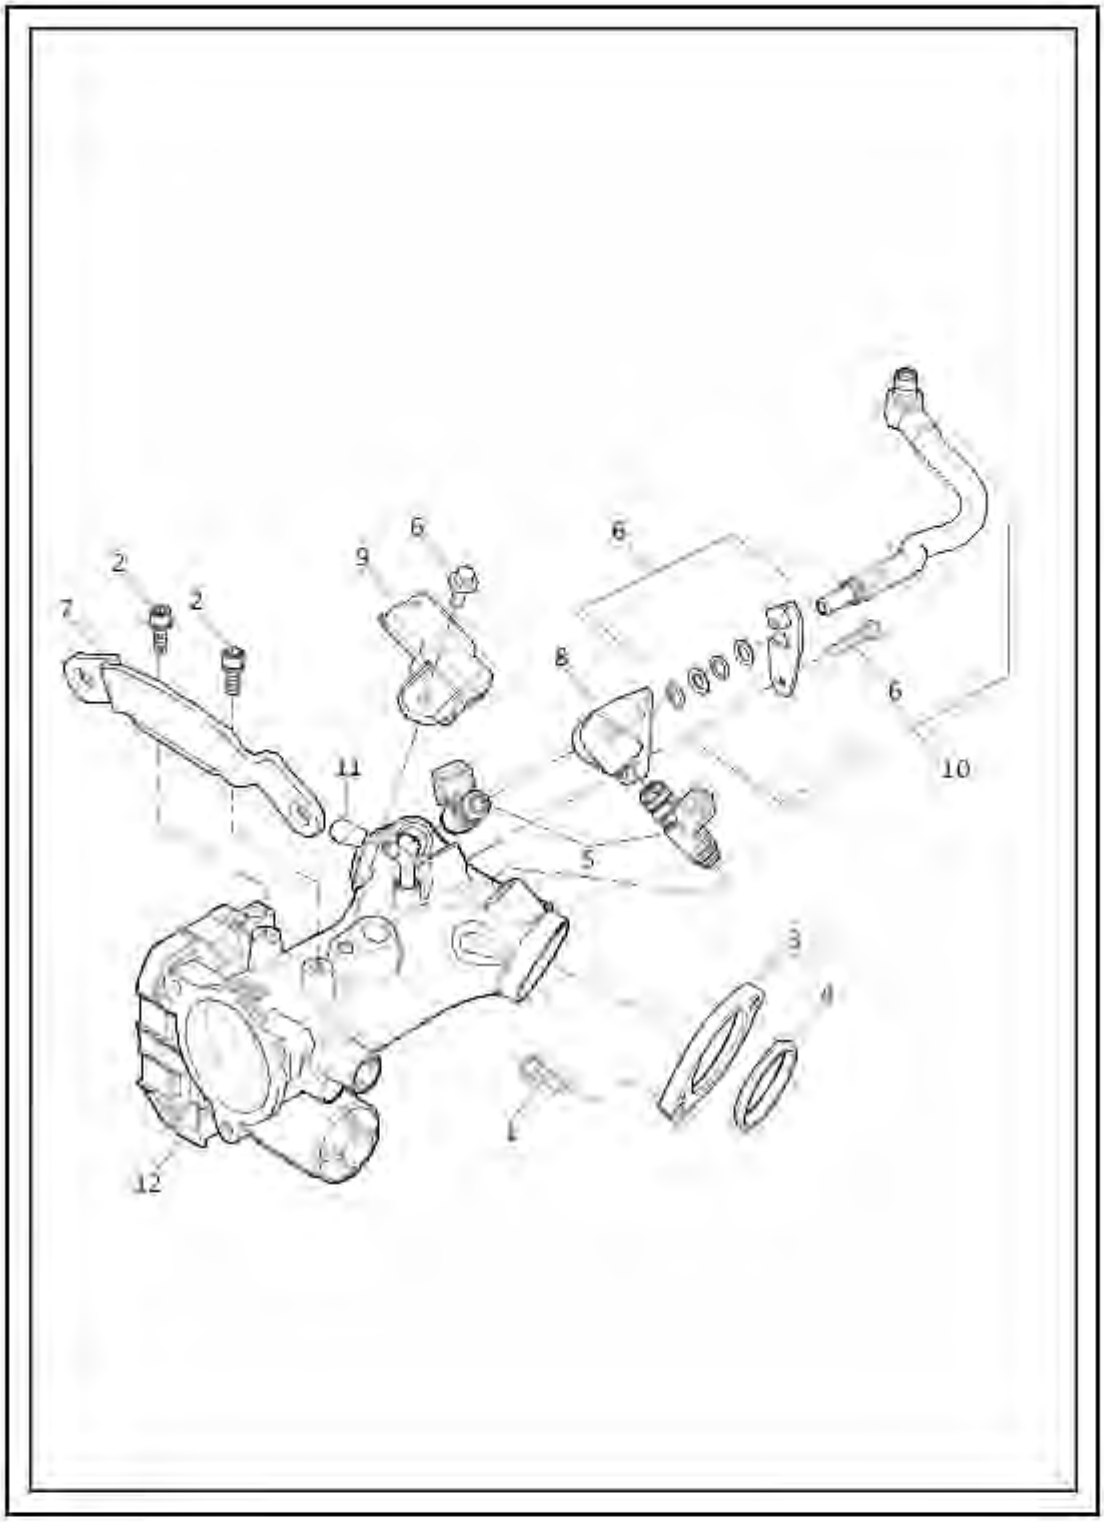

Index No.	Part No.	Description	Model(s)
1	3275	SCREW *(4)*	
2	4705	SCREW *(2)*	
3	26993-06	FLANGE, mounting *(2)*	
4	26995-86B	SEAL, intake manifold *(2)*	
5	27609-01B	FUEL INJECTOR ASSEMBLY, with O-ring *(2)*	
6	27711-08	INDUCTION MODULE SERVICE KIT	
7	27712-08	BRACKET, induction module	

8	27721-08	FUEL RAIL	
9	32319-07A	SENSOR, temperature manifold absolute pressure, with O-ring	
10	61208-10	FUEL LINE KIT	
11	90383-98	CAP, purge tube	
12	27200002	INDUCTION MODULE KIT, with 27711-08 and 90383-98	

AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

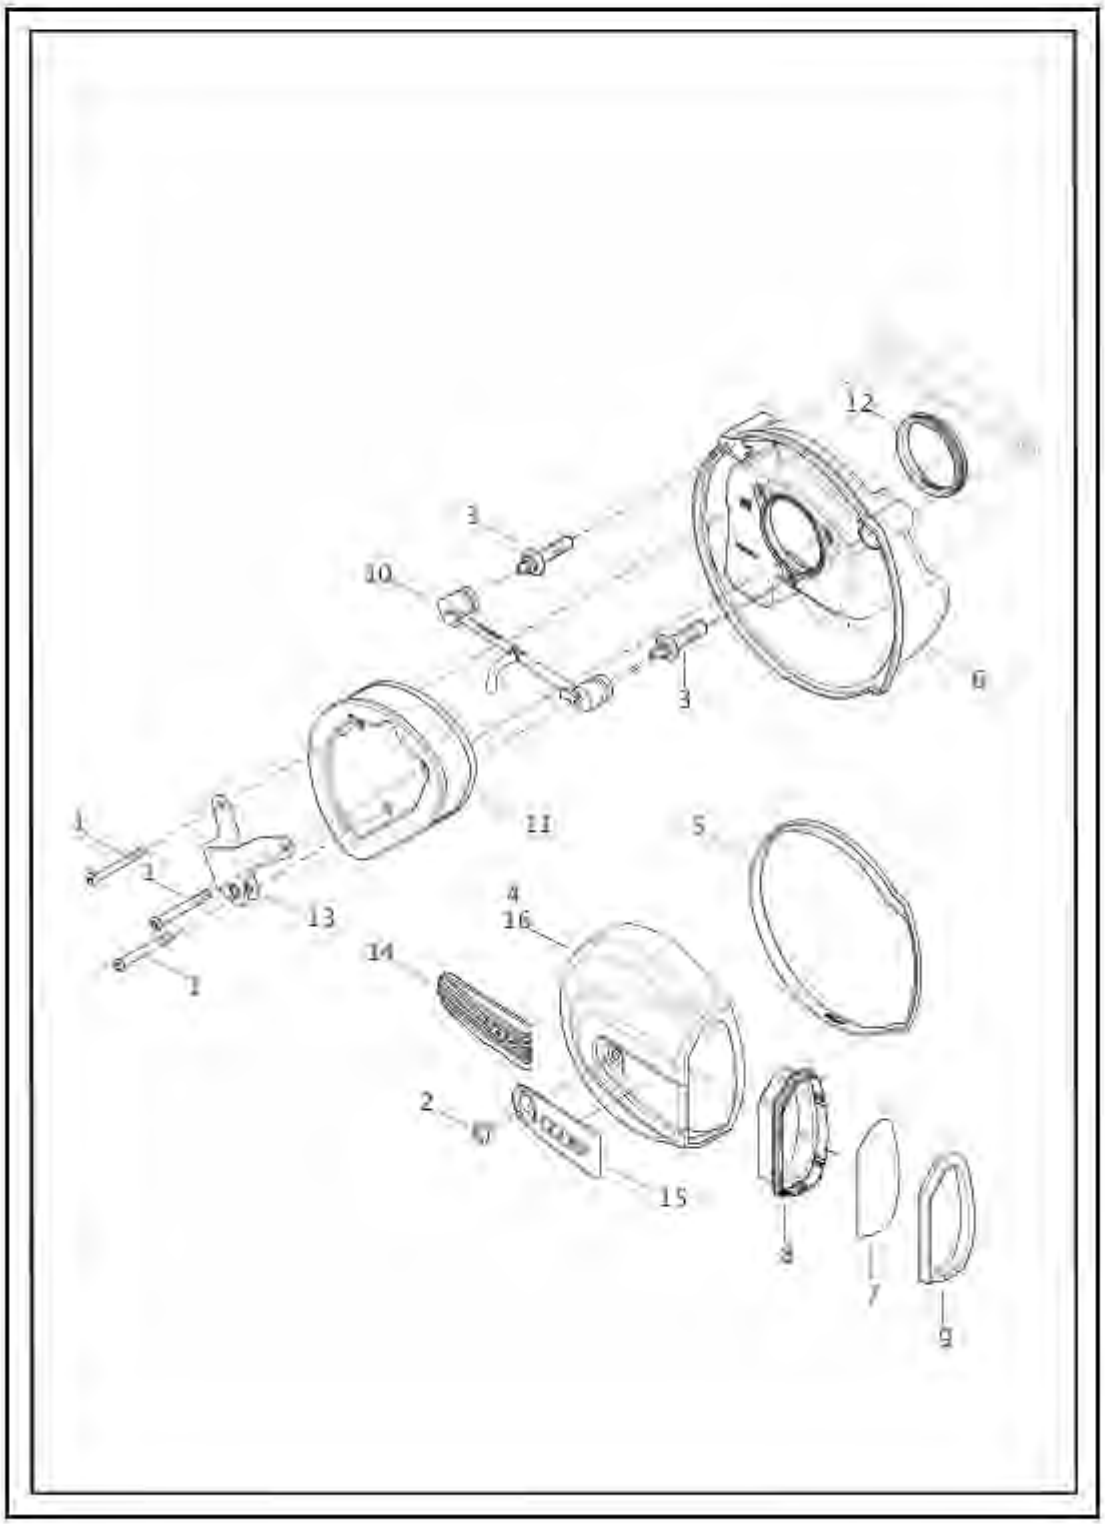

Index No.	Part No.	Description	Model(s)
1	946	SCREW *(3)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
2	29269-83A	SCREW	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
3	29465-08A	BREATHER BOLT *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
4	14000347	WARNING LABEL, air cleaner (chrome) (Domestic, California)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
5	29000026	SEAL, air cleaner cover	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
6	29000033	BACKPLATE ASSEMBLY	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
7	29200014	SCREEN, air cleaner	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
8	29200015	SNORKEL, air cleaner cover (Domestic, California, Canada)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	29200018	SNORKEL, air cleaner cover (HDI)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
9	29200017	BEZEL, air cleaner	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
10	29400043	BREATHER HOSE	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
11	29400045	FILTER ELEMENT	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
12	29400046	GASKET, induction module to backplate	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
13	60900005	BRACKET ASSEMBLY, air cleaner cover	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
14	61300063	INSERT, air cleaner cover	FLSTC, FLSTF, FLSTN, FLSTFB
	61300526	INSERT, air cleaner cover	FLS
15	61300064	INSERT, air cleaner cover	FXSB
16	61300273	COVER KIT, air cleaner, with 14000347	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	61300535	COVER KIT, air cleaner, with 14000347	FLSTFB
	61300536	COVER KIT, air cleaner, with 14000347	FLS

AIR CLEANER - TWIN CAM 110™ - FLSTFBS

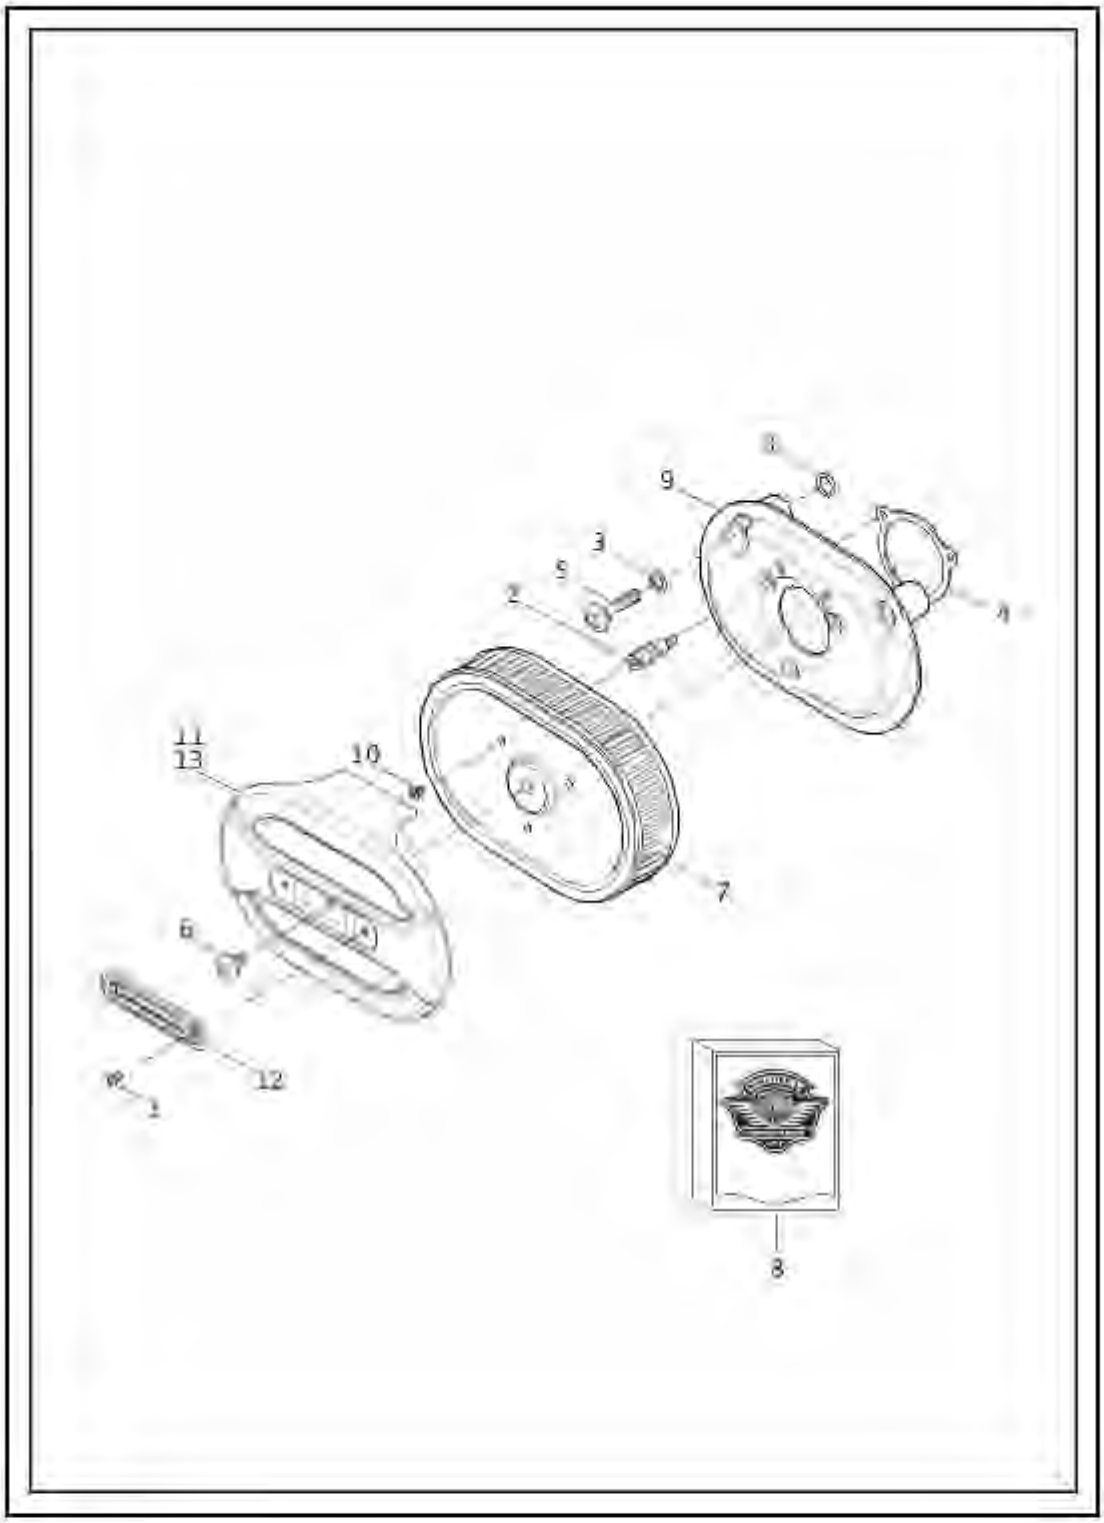

Index No.	Part No.	Description	Model(s)
1	3048	SCREW *(2)*	FLSTFBS
2	8250	STUD, air cleaner *(3)*	FLSTFBS
3	11292	O-RING *(4)*	FLSTFBS
4	29241-08	GASKET	FLSTFBS
5	29267-08A	BOLT, breather *(2)*	FLSTFBS
6	29269-83A	SCREW, air cleaner	FLSTFBS
7	29670-09	ELEMENT, air filter	FLSTFBS

8	29762-09	RAINSOCK	FLSTFBS
9	29763-09	BACKPLATE ASSEMBLY, air cleaner (black)	FLSTFBS
10	10500053	SCREW *(3)*	FLSTFBS
11	14000377	LABEL, air cleaner warning (Domestic, California)	FLSTFBS
12	14100699	INSERT, air cleaner cover	FLSTFBS
13	61300365	COVER, air cleaner, with 14000377 (black)	FLSTFBS

AIR CLEANER - TWIN CAM 110™ - FLSS

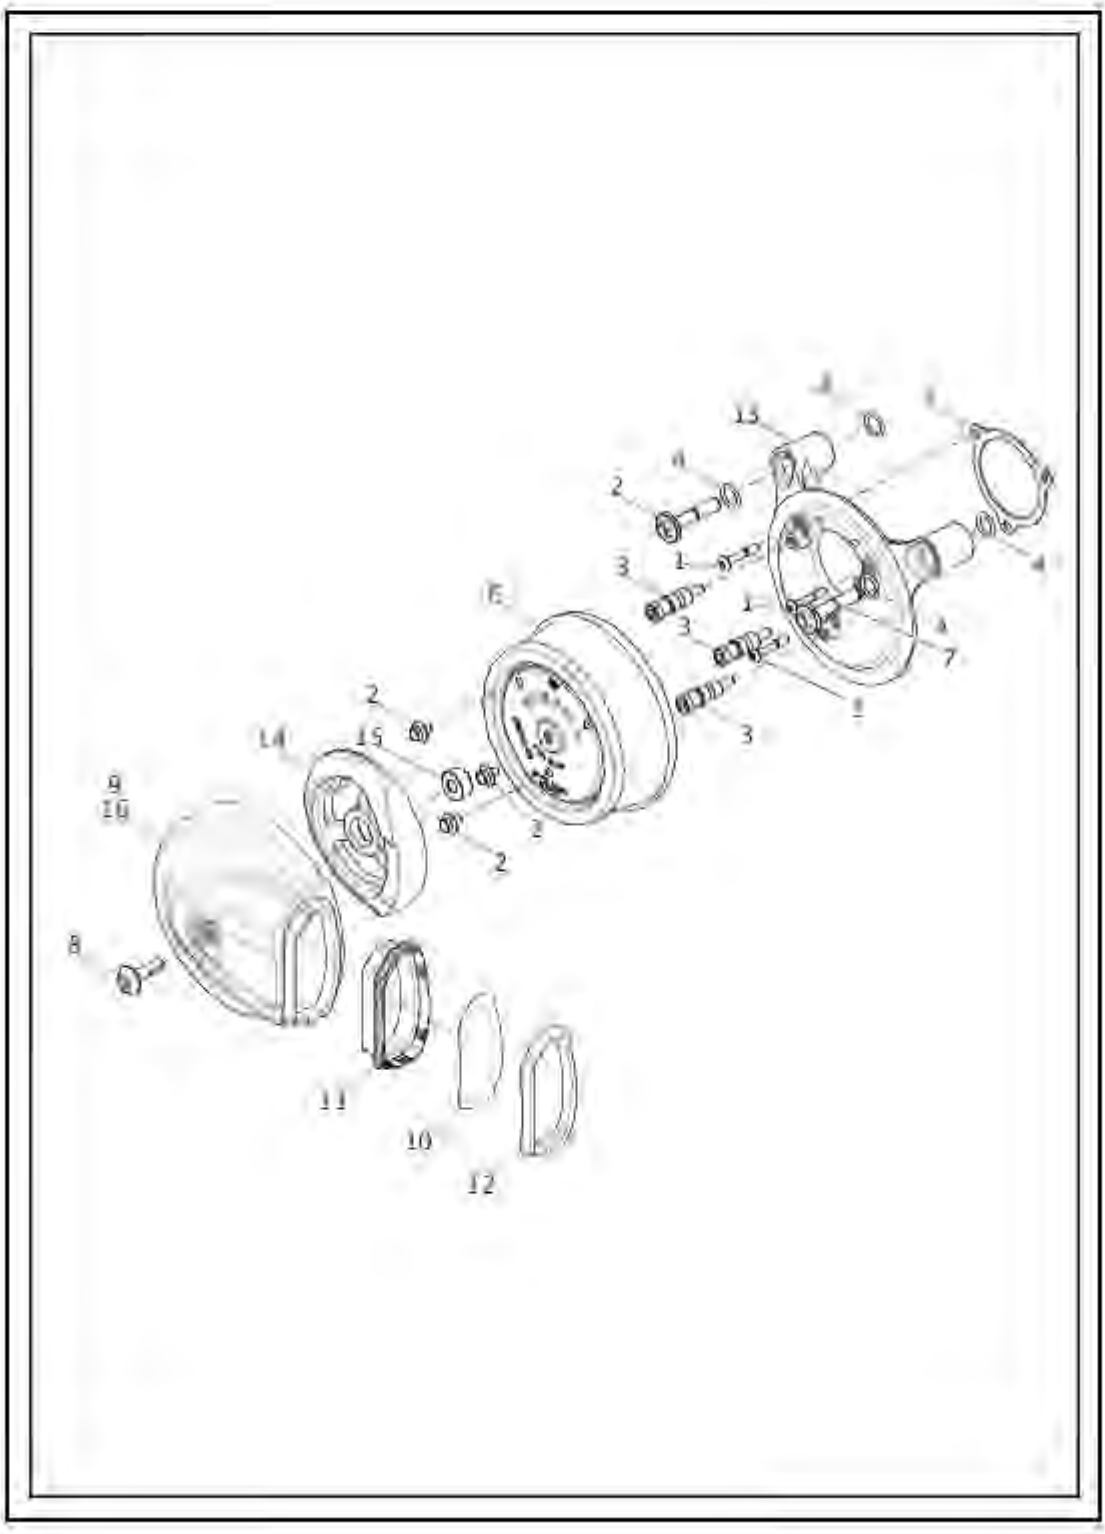

Index No.	Part No.	Description	Model(s)
1	869	SCREW *(3)*	FLSS
2	3563	SCREW *(3)*	FLSS
3	8250	STUD, mounting *(3)*	FLSS
4	11292	O-RING *(4)*	FLSS
5	29241-08	GASKET, throttle body	FLSS
6	29244-08	ELEMENT	FLSS
7	29267-08A	BREATHER BOLT	FLSS
8	29327-94	SCREW	FLSS
9	14000347	WARNING LABEL, air cleaner (chrome) (Domestic, California)	FLSS
10	29200014	SCREEN, air cleaner	FLSS
11	29200015	SNORKEL, air cleaner cover (Domestic, California, Canada)	FLSS
	29200018	SNORKEL, air cleaner cover (HDI)	FLSS
12	29200017	BEZEL, air cleaner	FLSS
13	29000123	BACKPLATE	FLSS
14	29400159	ADAPTER, air cleaner cover	FLSS
15	29400161	SPACER, air cleaner cover adapter	FLSS
16	61300536	COVER KIT, air cleaner, with 14000347	FLSS

ALTERNATOR AND REGULATOR

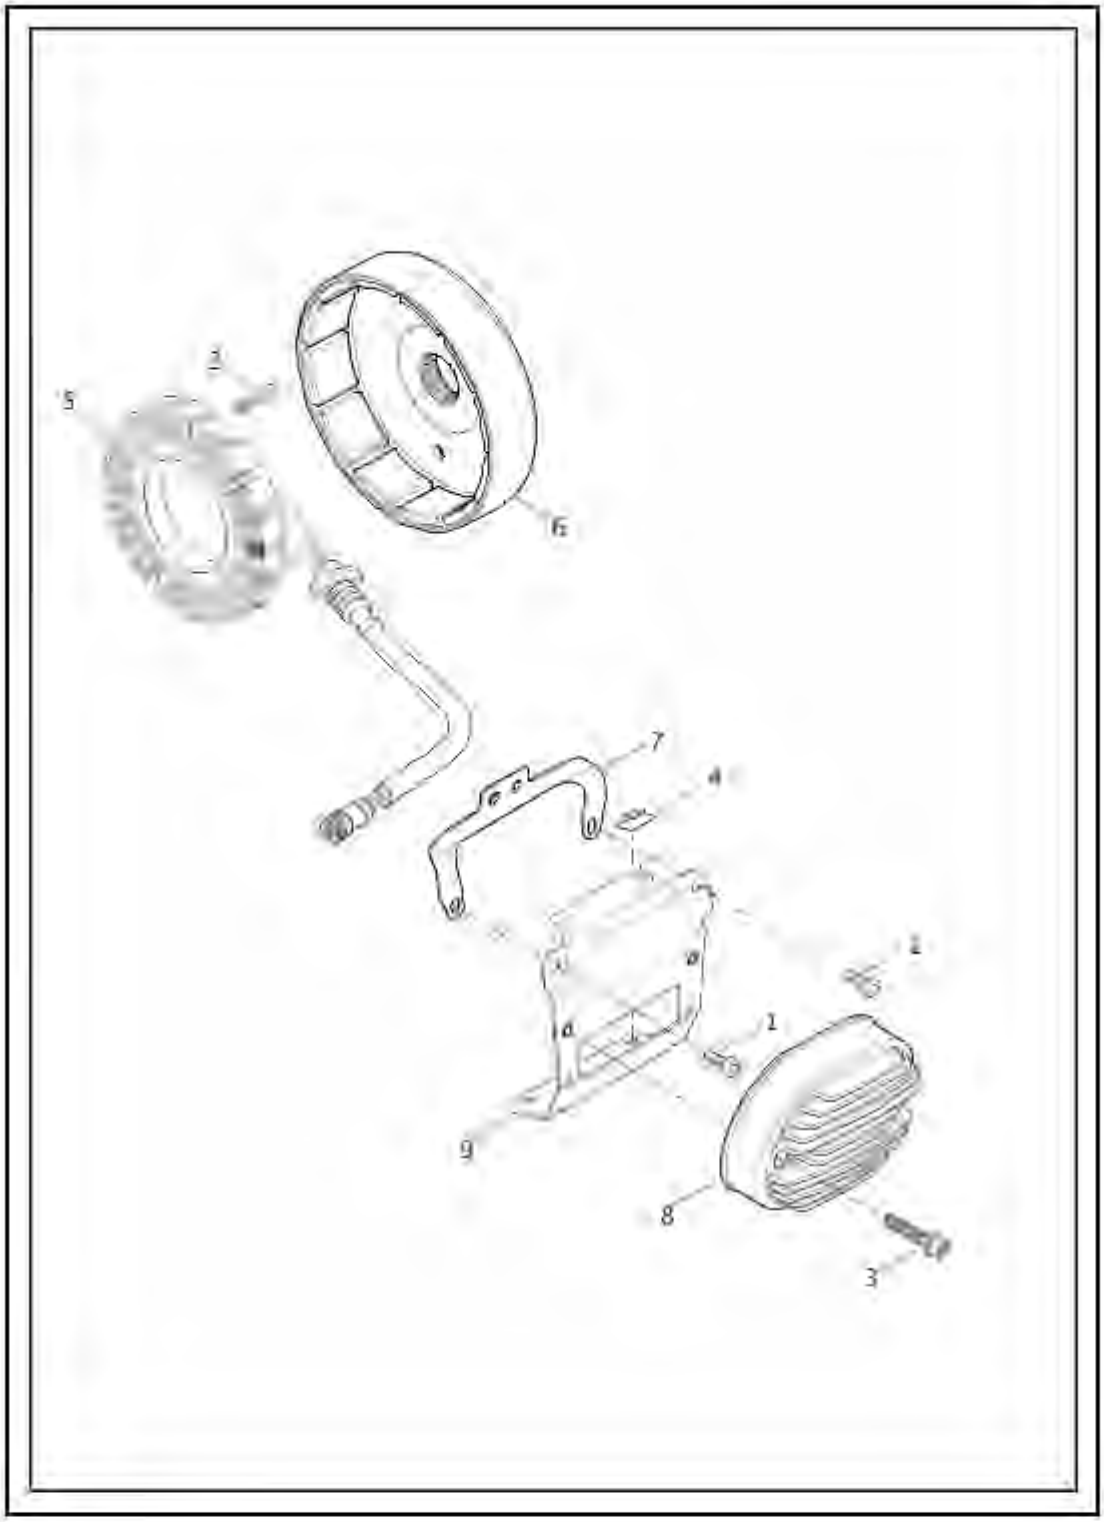

Index No.	Part No.	Description	Model(s)
1	2941	SCREW *(2)*	
2	3050	SCREW, stator to crankcase *(4)*	
3	4814A	SCREW *(2)*	
4	10102	CLIP	
5	30017-08	STATOR	
6	30041-08A	ROTOR ASSEMBLY	
7	46668-11	BRACKET, front HCU	

8	74540-11	VOLTAGE REGULATOR	
9	69200052	BRACKET, regulator mounting	

ELECTRONIC CONTROL MODULE (ECM) AND COIL

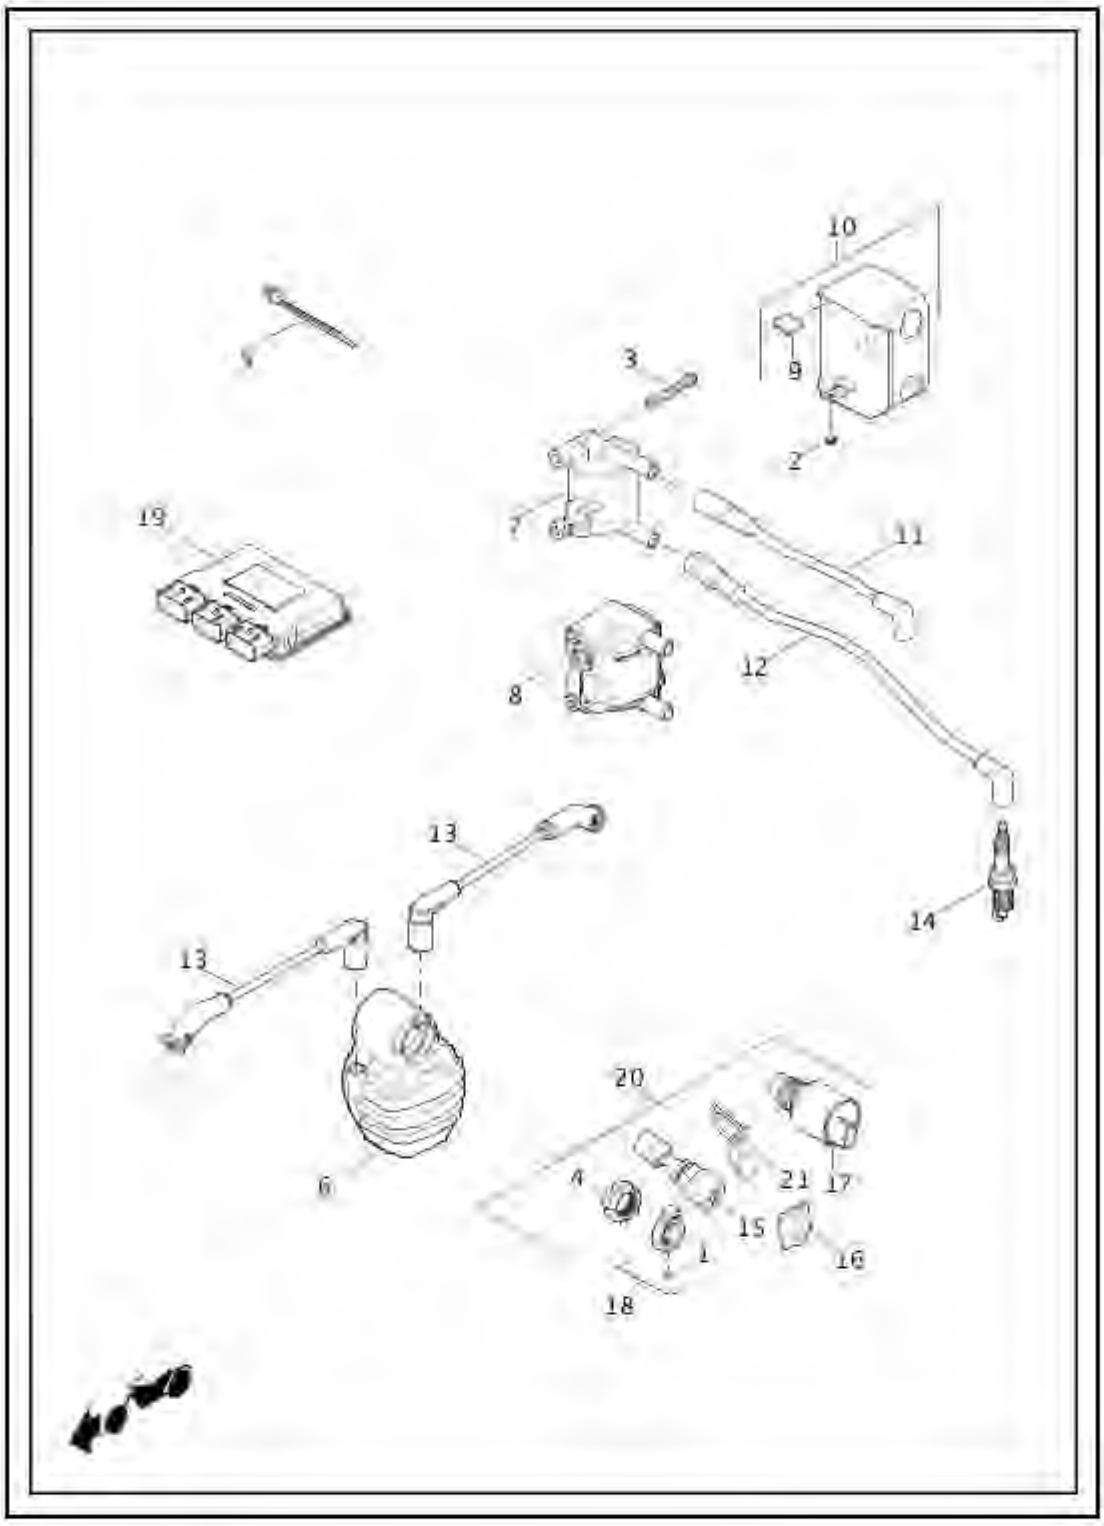

Index No.	Part No.	Description	Model(s)
1	1565	LOCK PIN	FXSB
2	3144	SCREW	FLSTC, FLSTF, FLSTFB, FLSTN,

			FLSTFBS
3	4717A	SCREW *(2)*	FLSTC, FLSTF, FLSTFB, FLSTN, FLS, FLSS, FLSTFBS
4	7343	NUT	FXSB
5	10177	CABLE STRAP, with plug-in retainer *(4)*	
6	31684-11	IGNITION COIL	FXSB
7	31696-07A	IGNITION COIL, dual	FLSTC, FLSTF, FLSTN, FLSTFB, FLSTFBS
8	31743-01	IGNITION COIL	FLS, FLSS
9	31742-00	PAD, coil cover	FLSTC, FLSTF, FLSTN, FLSTFB, FLSTFBS
10	31772-07	COIL COVER ASSEMBLY, with 31742-00 (chrome)	FLSTC, FLSTF, FLSTN
	31802-10	COIL COVER ASSEMBLY, with 31742-00 (black denim)	FLSTFB, FLSTFBS
11	31960-99A	SPARK PLUG CABLE, rear cylinder	FLSTC, FLSTF, FLSTFB, FLSTN, FLS, FLSS, FLSTFBS
12	31981-99C	SPARK PLUG CABLE, front cylinder	FLSTC, FLSTF, FLSTFB, FLSTN, FLS, FLSS, FLSTFBS
13	32001-08A	CABLE ASSEMBLY, spark plug *(2)*	FXSB
14	32362-04A	SPARK PLUG, 6R12 *(2)*	
15	45680-90	FORK LOCK	FXSB
16	61081-92	COVER, key head set	FXSB
17	71794-11	SWITCH ASSEMBLY, ignition	FXSB
18	71796-11	IGNITION SWITCH KNOB KIT, with 1565	FXSB
19	41000057	ELECTRONIC CONTROL MODULE, base level, Requires digital programming.	
20	71400077	IGNITION SWITCH AND FORK LOCKSET, with 90300043 keys, ignition switch and fork lock	FXSB
21	90300043	KEY, with 61081-92 (set of two) (specify key number)	FXSB

SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™

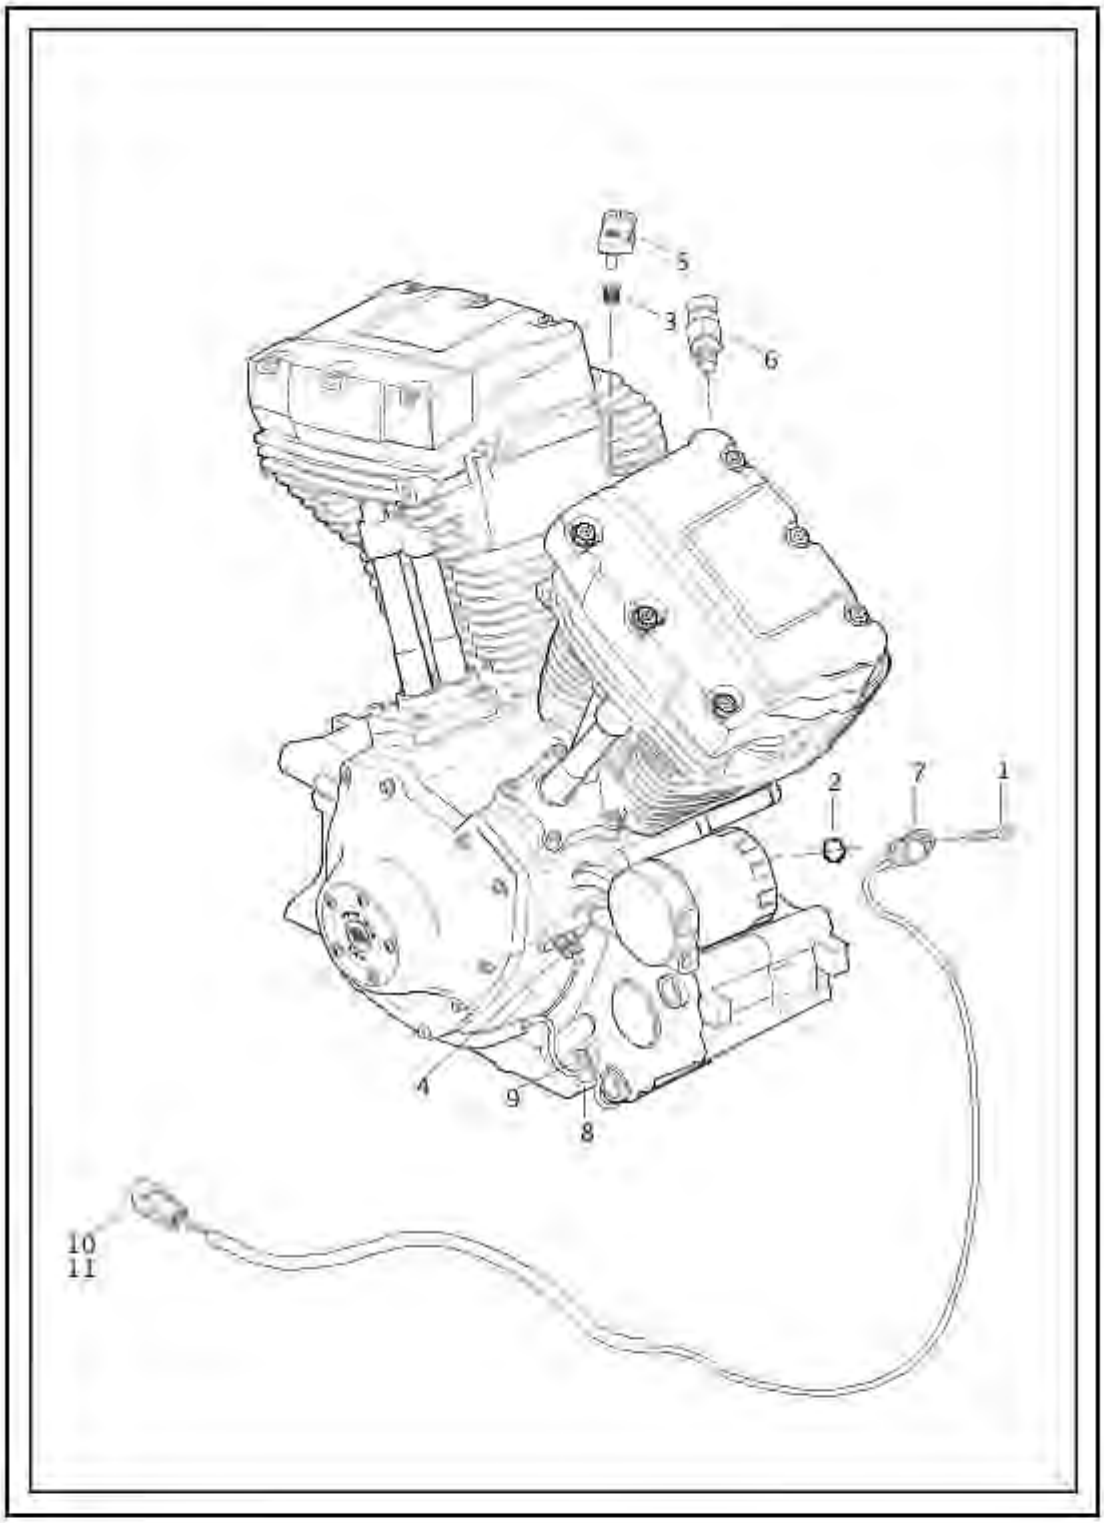

Index No.	Part No.	Description	Model(s)
1	4741A	SCREW	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
2	11289A	O-RING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
3	11291	SEAL, manifold air pressure sensor	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
4	26561-99	OIL PRESSURE SWITCH	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

5	32417-10	SENSOR, manifold air pressure, with 11291	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
6	32446-99	SENSOR, engine temperature	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
7	32707-01C	SENSOR, crankshaft position, with 11289A, 72199-94 and 74194-98	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
8	38769-07A	CLAMP	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
9	68042-99	SCREW	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
10	72199-94	CONNECTOR ANCHOR	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
11	74194-98	TERMINAL, pin, solid *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

SENSORS AND SWITCHES, ENGINE - TWIN CAM 110™

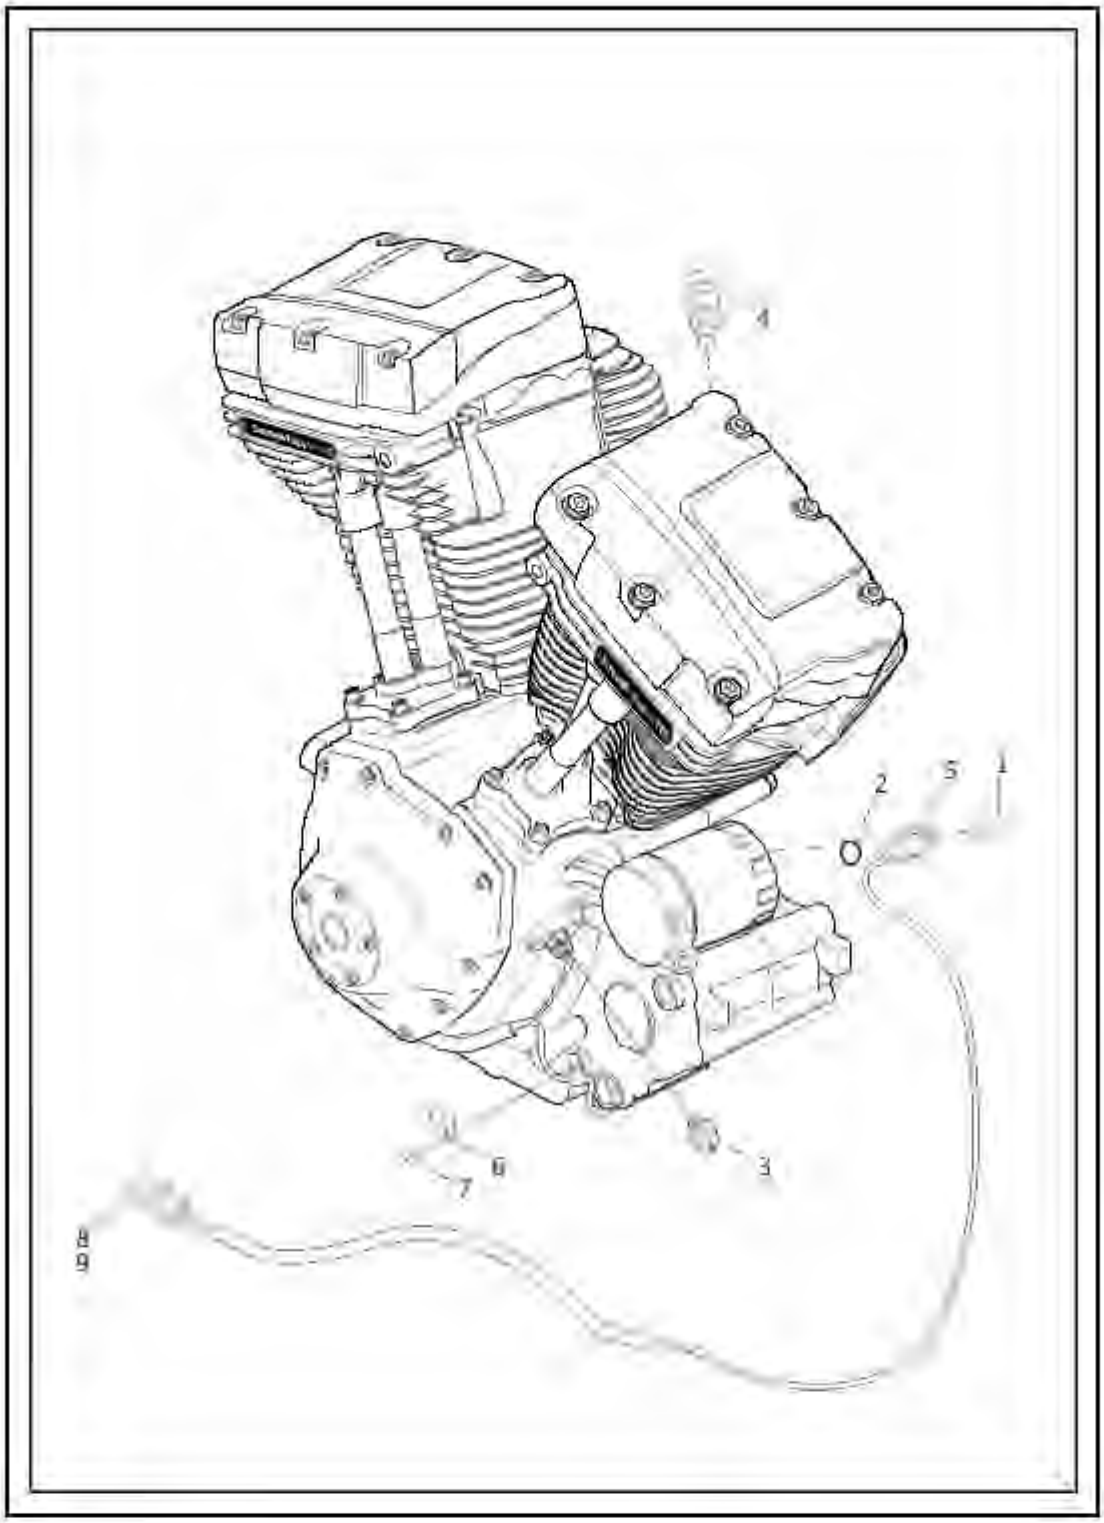

Index No.	Part No.	Description	Model(s)
1	4705	SCREW	FLSS, FLSTFBS
2	11289A	O-RING	FLSS, FLSTFBS
3	26561-99	OIL PRESSURE SWITCH	FLSS, FLSTFBS
4	32446-99	SENSOR, engine temperature	FLSS, FLSTFBS
5	32707-01C	SENSOR, crankshaft position, with 11289A, 72199-94 and 74194-98	FLSS, FLSTFBS
6	38769-07A	CLAMP	FLSS, FLSTFBS
7	68042-99	SCREW	FLSS, FLSTFBS

8	72199-94	CONNECTOR ANCHOR	FLSS, FLSTFBS
9	74194-98	TERMINAL PIN, solid *(2)*	FLSS, FLSTFBS

STARTER MOTOR

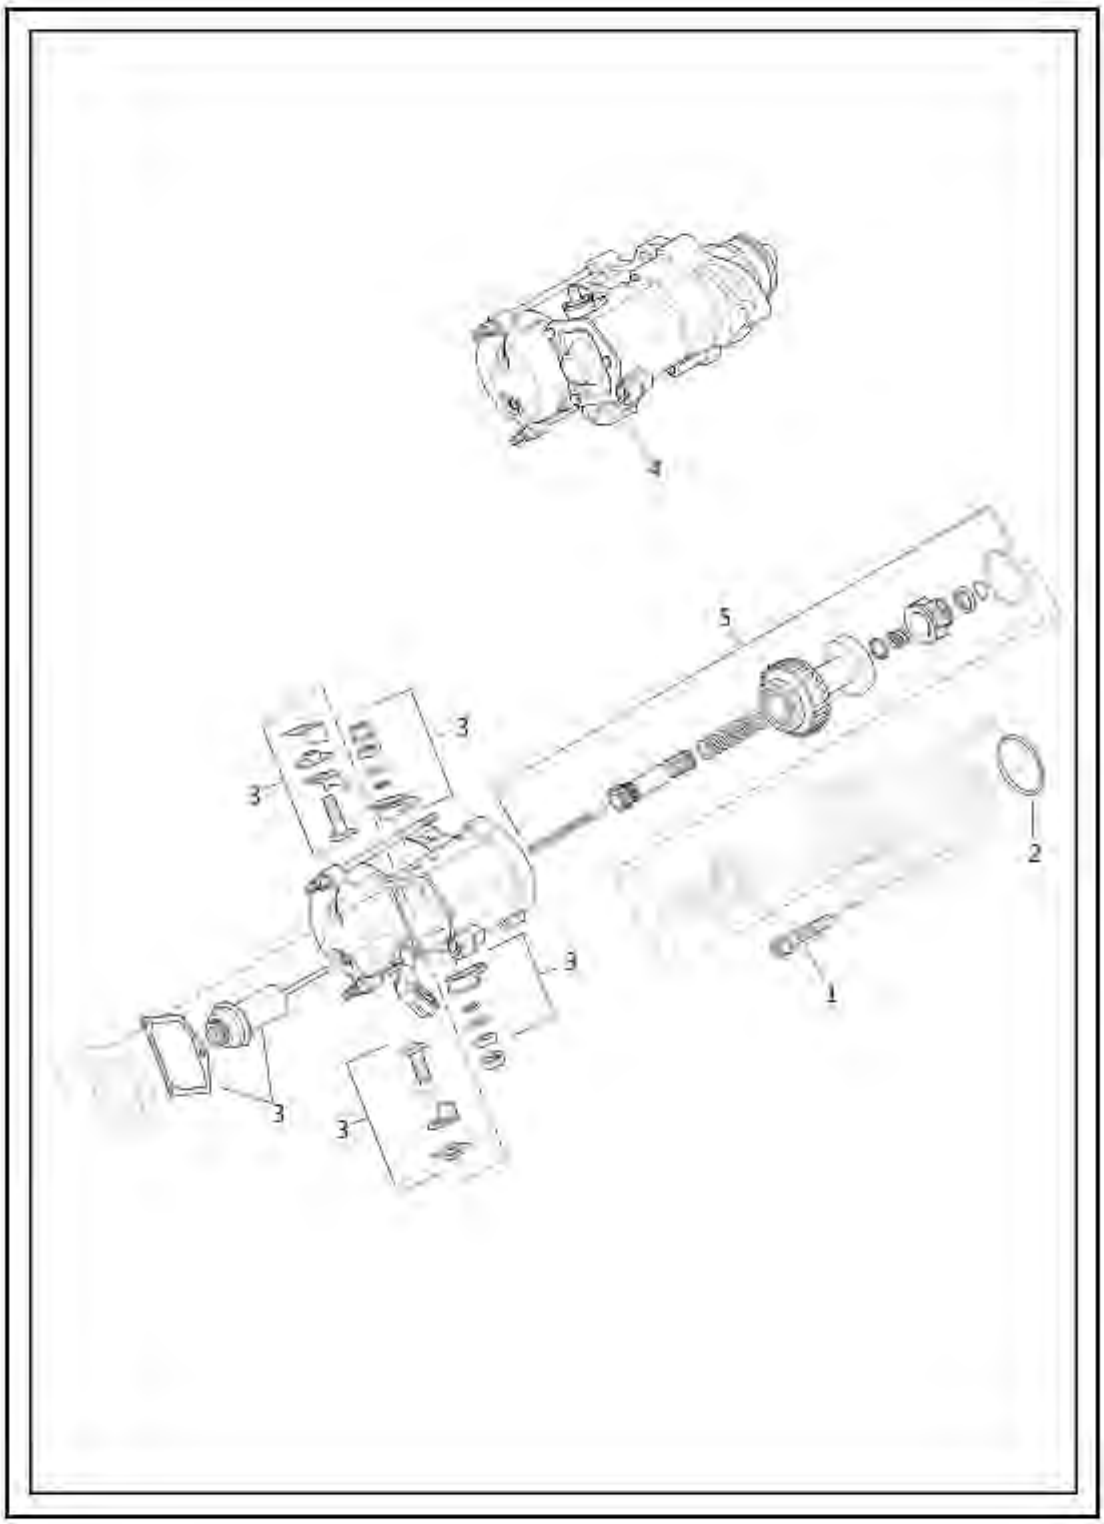

Index No.	Part No.	Description	Model(s)
1	4419	SCREW, starter mount *(2)*	
2	27444-00Y	O-RING, starter-to-case	

3	31604-06	SOLENOID REPAIR KIT	
4	31618-06A	STARTER ASSEMBLY COMPLETE, (black)	
5	31633-07A	CLUTCH SUBASSEMBLY	

SHIFTER, GEAR

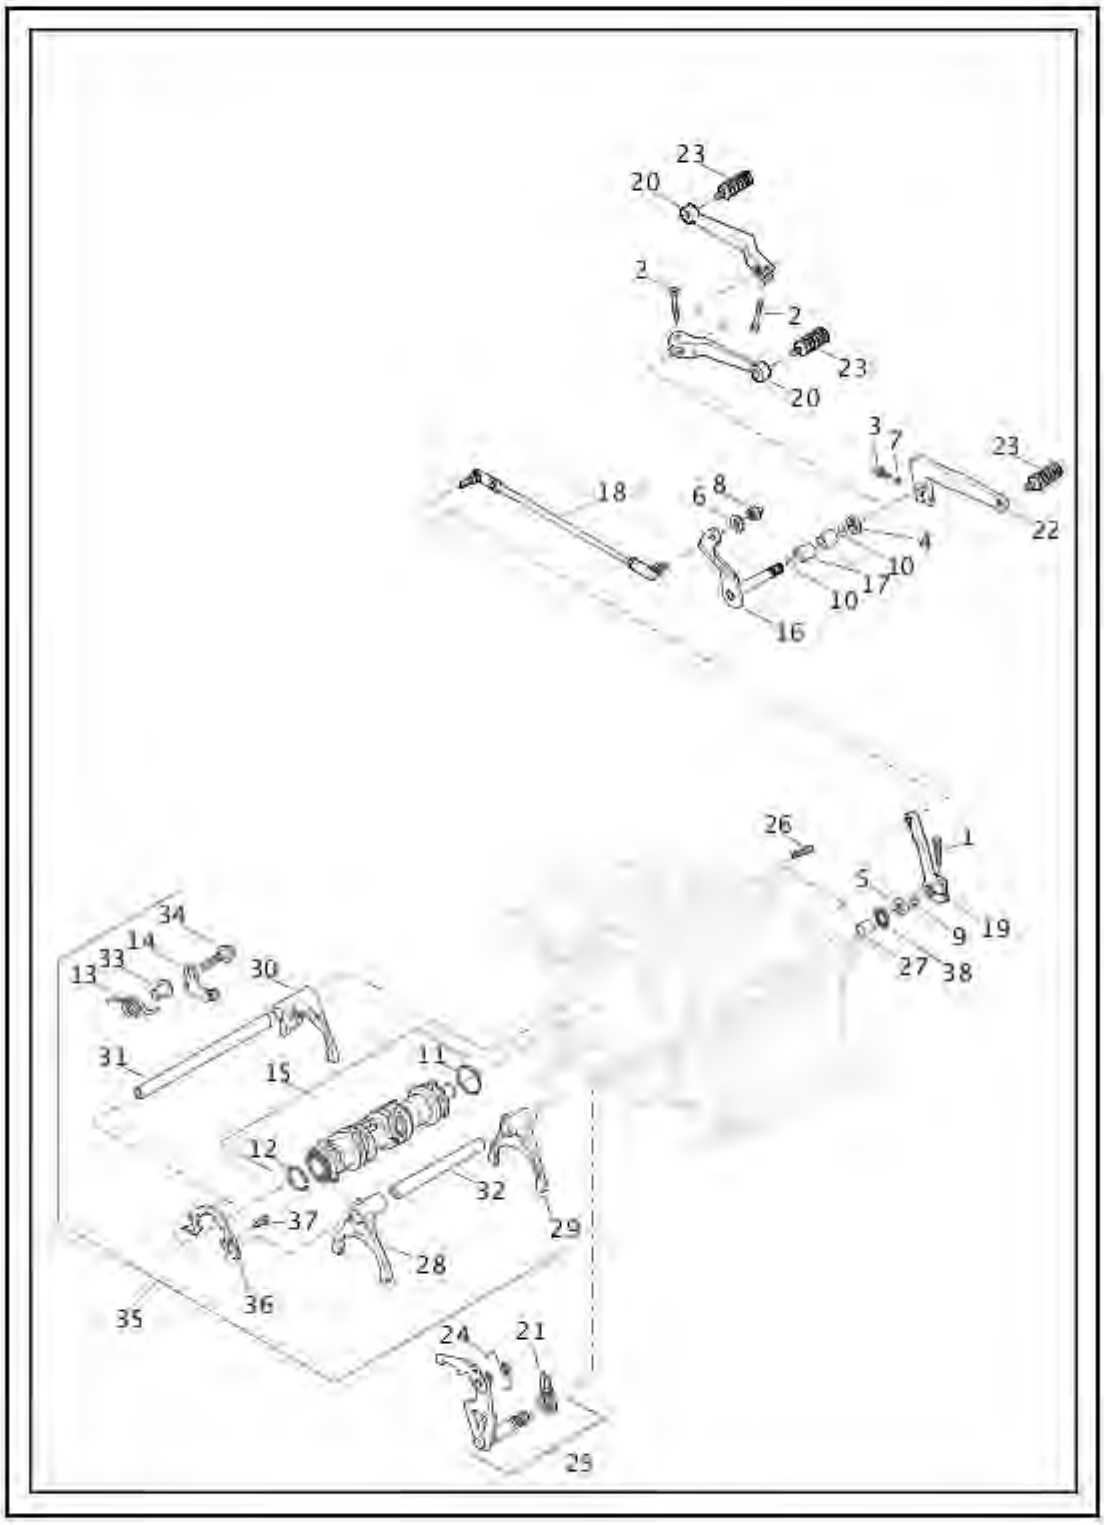

Index No.	Part No.	Description	Model(s)
1	856A	SCREW	

2	3275	SCREW *(2)*	
3	4017	BOLT	FXSB
4	6057	WASHER	
5	6497HW	WASHER	
6	6702	WASHER	
7	7041	LOCKWASHER	FXSB
8	7330	ACORN NUT	
9	11150	RETAINING RING	
10	11191	O-RING *(2)*	
11	11389	RING, shift cam retaining	
12	11575	RING, shift cam retaining	
13	33389-07	SPRING, detent	
14	33409-06B	DETENT ARM ASSEMBLY, with 33389-07	
15	33413-06A	CAM, shift, with 11389, 11575 and bearing	
16	33660-07	SHIFT LEVER, (chrome)	FXSB
	33668-07	SHIFT LEVER, (chrome)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
17	33708-94	BEARING SLEEVE *(2)*	
18	33719-79B	SHIFTER ROD	
19	33849-97	LEVER, shifter rod	
20	33895-82D	SHIFT LEVER KIT, with 3275 and shifter lever *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
21	34064-00C	SPRING, shift lever centering	
22	34564-90B	SHIFT LEVER, (chrome)	FXSB
23	34611-65A	PEG, shift lever	FXSB
23	34611-65A	PEG, shift lever *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
24	34987-06	SPRING, ratchet lever	
25	35081-06	SHIFT MECHANISM, with 34064-00C and 34987-06	
26	35082-07	CENTERING SCREW, shift lever	

27	35186-06	SLEEVE	
28	35187-06	FORK, shift 1 - 2	
29	35210-06	FORK, shift 3 - 4	
30	35217-06	FORK, shift 5 - 6	
31	35222-06	SHAFT, 5 - 6 shift fork	
32	35223-06	SHAFT, 1 - 2 and 3 - 4 shift fork	
33	35243-06	SLEEVE	
34	35244-06	SCREW, detent	
35	35246-10A	GEAR PACK, FORKS AND DRUM SUBASSEMBLY, with 11, 12, 13, 14, 15, 28, 29, 30, 31, 32, 33, 34, 35, 36, 7340, 35260-06, input shaft, countershaft and gears (black)	
36	35249-06A	LOCK PLATE, shift cam	
37	35259-06	SCREW, shift drum support *(2)*	
38	11000101	OIL SEAL	

TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS

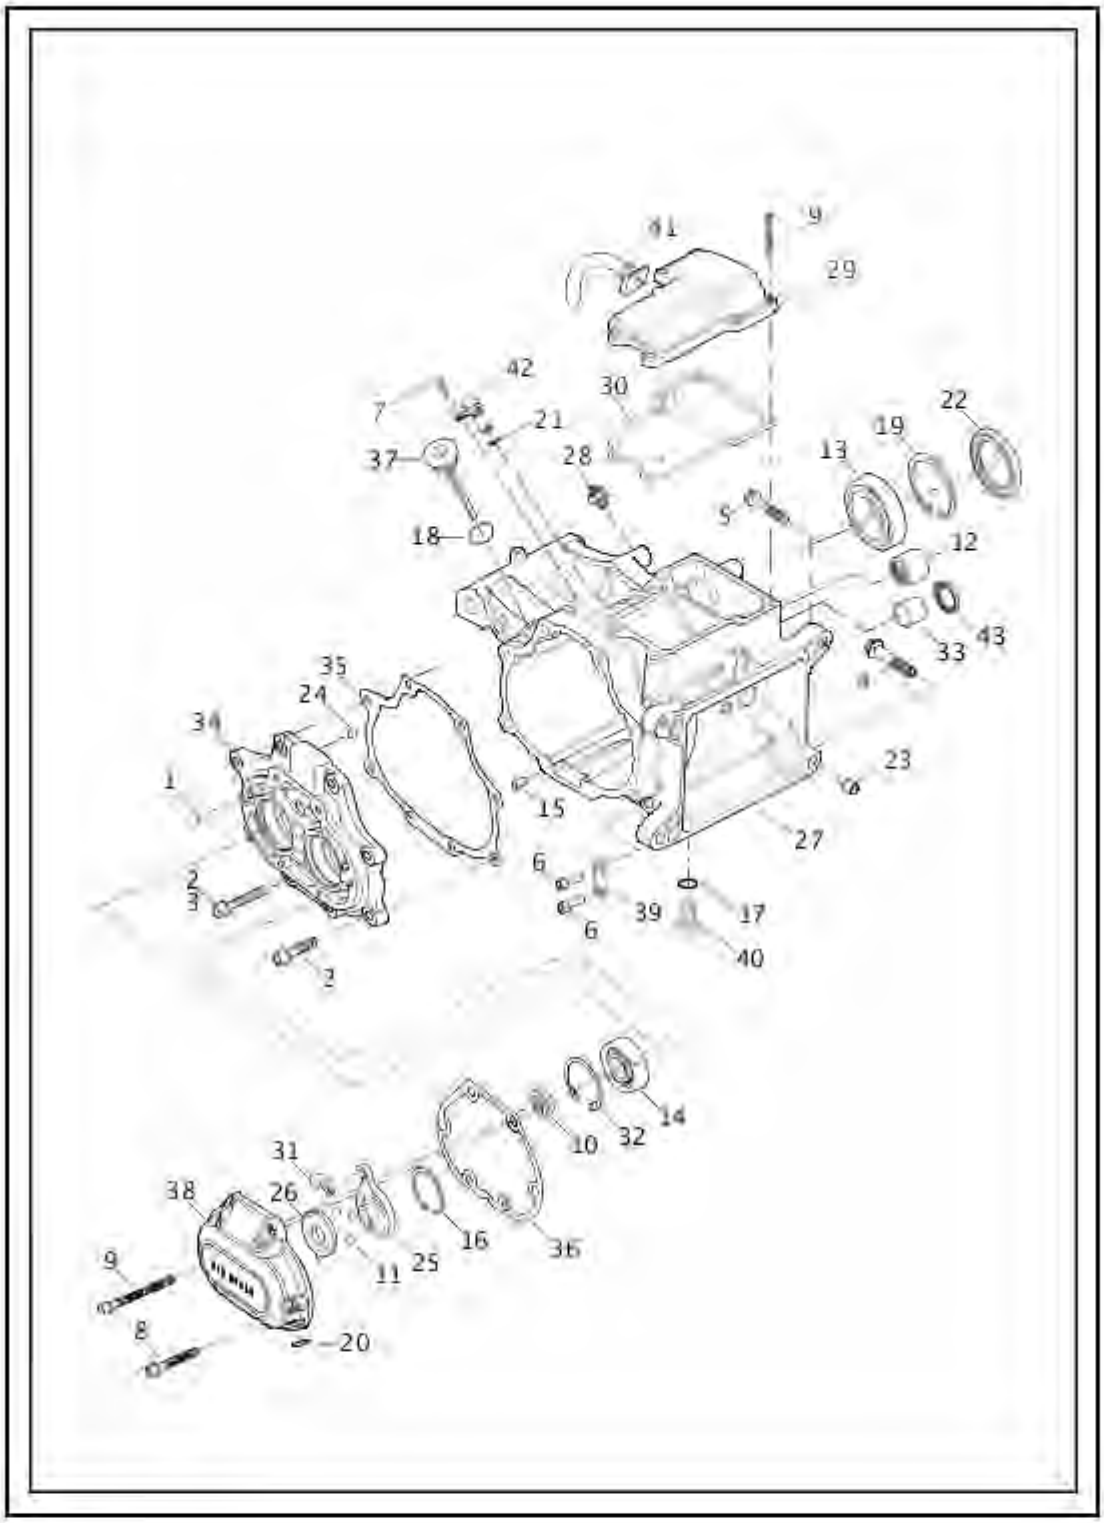

Index No.	Part No.	Description	Model(s)
1	221	PIN *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
2	3249	SCREW *(6)*	FLSTF, FLSTN, FLSTFB, FLS
2	3249	SCREW *(8)*	FLSTC, FXSB
3	3300	SCREW, bottom two holes of bearing housing *(2)*	FLSTF, FLSTN, FLSTFB, FLS
4	3699D	SCREW *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

5	3983	SCREW *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
6	4688	SCREW *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
7	4705	SCREW	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
8	4718A	SCREW, side cover to bearing plate *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
9	4741A	SCREW *(8)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
10	7340	NUT *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
11	8873	BALL *(3)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
12	8963	NEEDLE BEARING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
13	8967	BALL BEARING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
14	8970A	BALL BEARING *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
15	9701A	BUSHING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
16	10998	RETAINING RING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
17	11105	O-RING, drain plug	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
18	11132A	O-RING, filler plug	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
19	11161	RETAINING RING, ball bearing	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
20	11179	O-RING, clutch cable	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
21	11289A	O-RING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
22	12074	OIL SEAL *(4)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
23	16574-99A	DOWEL PIN *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
24	16583-00A	BUSHING, dowel *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
25	25604-00A	INNER RAMP	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
26	25605-00A	OUTER RAMP	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

27	33009-10A	TRANSMISSION REPLACEMENT, wide, without cable, covers and sensors (black)	FXSB
	33012-10A	TRANSMISSION REPLACEMENT, without cable, covers and sensors (black)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	34799-07	TRANSMISSION CASE SUBASSEMBLY, (black)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	34854-08	TRANSMISSION CASE SUBASSEMBLY, (black)	FXSB
28	33926-06B	SWITCH, neutral indicator, with O-ring	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
29	34469-06B	COVER, (upper) (chrome)	FLSTC, FLSTF, FLSTN, FXSB
	34521-06B	COVER, (upper) (black wrinkle)	FLSTFB
	37143-07A	COVER, (upper) (polished)	FLS
30	34917-06	GASKET, upper cover	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
31	34920-86A	COUPLING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
32	35087-99A	RETAINING RING, bearing *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
33	35186-06	SLEEVE	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
34	35260-06A	BEARING HOUSING ASSEMBLY, (black)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
35	35654-06	GASKET, bearing housing	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
36	36805-06	GASKET, right side cover	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
37	37065-06	DIPSTICK, (chrome)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
38	37116-06	CLUTCH RELEASE COVER, (chrome)	FLSTC, FLSTF, FLSTN
	37142-07	CLUTCH RELEASE COVER, (polished)	FLS
	37144-08	CLUTCH RELEASE COVER, (chrome)	FXSB
	37186-10	CLUTCH RELEASE COVER, (satin chrome)	FLSTFB
39	48052-07	BRACKET, transmission mounting (right)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
40	60328-98B	PLUG ASSEMBLY, magnetic drain, with 11105	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
41	62372-09	VENT HOSE	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
42	74402-	SENSOR, speedometer	FXSB, FLSTC, FLSTF, FLSTN,

	05B		FLSTFB, FLS
43	11000101	OIL SEAL	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

TRANSMISSION HOUSING - FLSS AND FLSTFBS

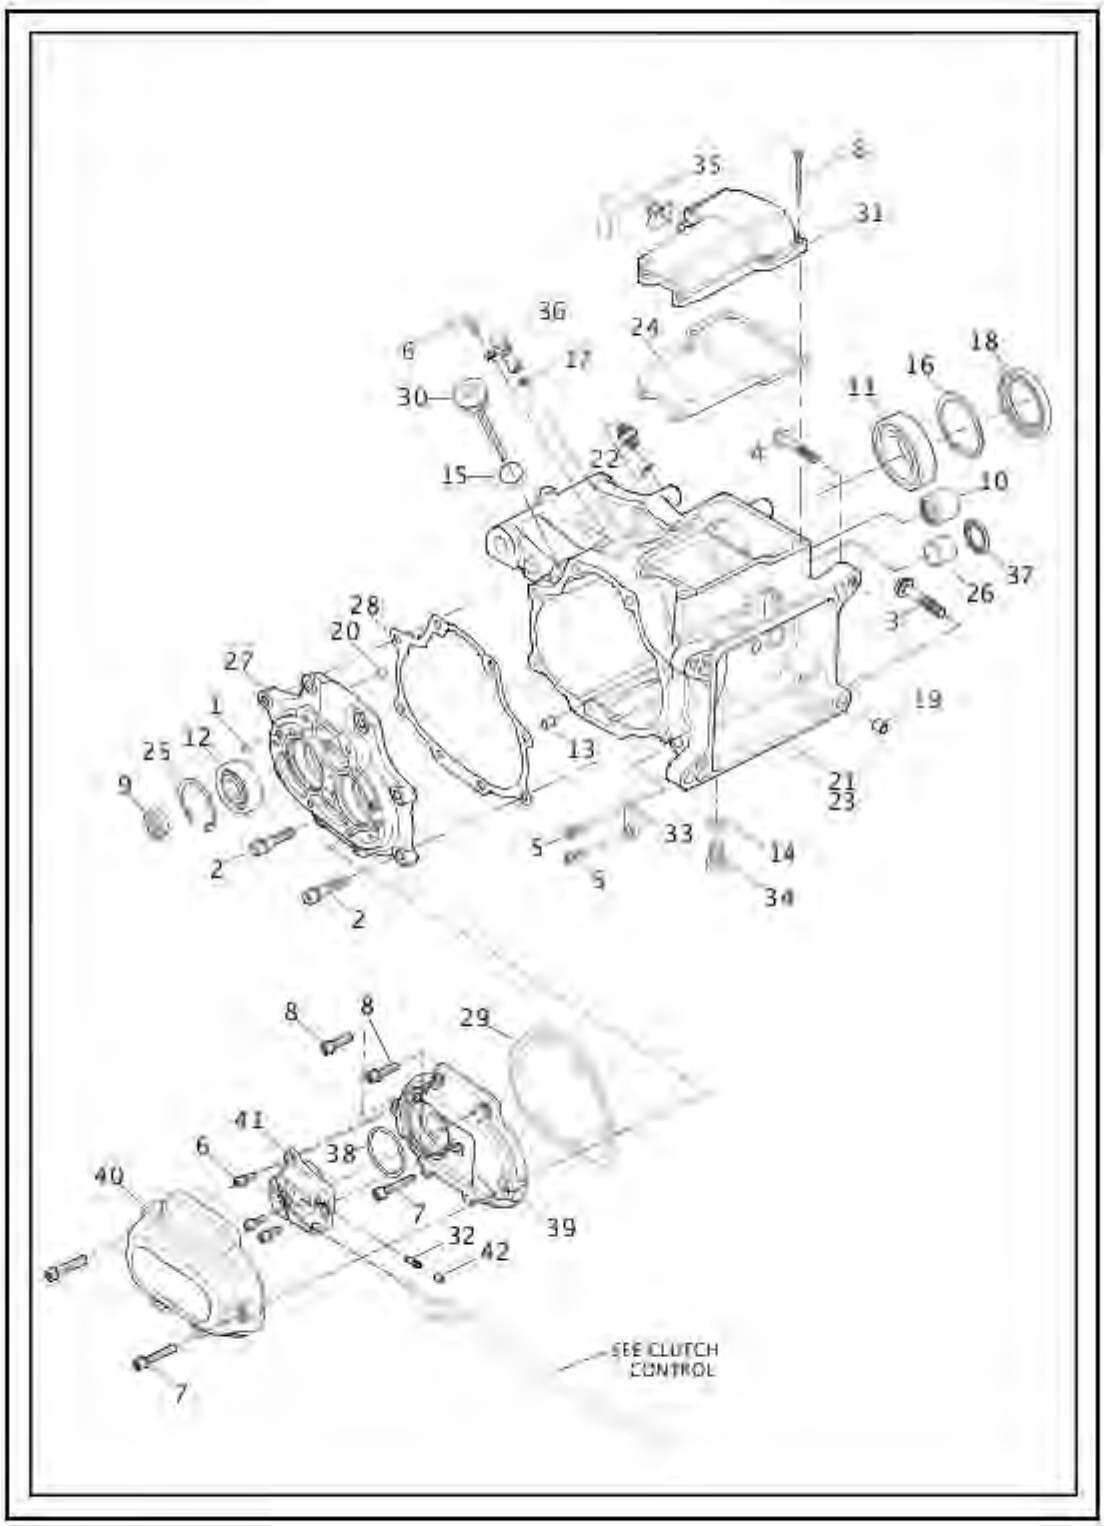

Index No.	Part No.	Description	Model(s)
1	221	PIN *(2)*	FLSS, FLSTFBS

2	3249	SCREW *(8)*	FLSS, FLSTFBS
3	3699D	SCREW *(2)*	FLSS, FLSTFBS
4	3983	SCREW *(2)*	FLSS, FLSTFBS
5	4688	SCREW	FLSS, FLSTFBS
6	4705	SCREW *(4)*	FLSS, FLSTFBS
7	4718A	SCREW *(4)*	FLSS, FLSTFBS
8	4741A	SCREW *(8)*	FLSS, FLSTFBS
9	7340	NUT, mainshaft and countershaft *(2)*	FLSS, FLSTFBS
10	8963	NEEDLE BEARING	FLSS, FLSTFBS
11	8967	BALL BEARING	FLSS, FLSTFBS
12	8970A	BALL BEARING *(2)*	FLSS, FLSTFBS
13	9701A	BUSHING	FLSS, FLSTFBS
14	11105	O-RING, drain plug	FLSS, FLSTFBS
15	11132A	O-RING, filler plug	FLSS, FLSTFBS
16	11161	RETAINING RING, ball bearing	FLSS, FLSTFBS
17	11289A	O-RING	FLSS, FLSTFBS
18	12074	OIL SEAL	FLSS, FLSTFBS
19	16574-99A	DOWEL RING *(2)*	FLSS, FLSTFBS
20	16583-00A	BUSHING, dowel *(2)*	FLSS, FLSTFBS
21	33012-10A	TRANSMISSION REPLACEMENT, without covers and sensors (black)	FLSS, FLSTFBS
22	33926-06B	SWITCH, neutral indicator, with O-ring	FLSS, FLSTFBS
23	34799-07	TRANSMISSION CASE SUBASSEMBLY, with 3594, 8963, 8967, 9701A, 11161, 12074, 16574-99A, 35122-06, 35186-06, 35241-06, 35242-061, 40659-06, 60328-	FLSS, FLSTFBS

		98B, 11000101 and shift lever centering screw (black)	
24	34917-06	GASKET, upper cover	FLSS, FLSTFBS
25	35087-99A	RETAINING RING, bearing *(2)*	FLSS, FLSTFBS
26	35186-06	SLEEVE	FLSS, FLSTFBS
27	35260-06A	BEARING HOUSING ASSEMBLY, with 221, 8970A, 16583-00A and 35087-99A (black)	FLSS, FLSTFBS
28	35654-06	GASKET, bearing housing	FLSS, FLSTFBS
29	36805-06	GASKET, right side cover	FLSS, FLSTFBS
30	37065-06	FILLER PLUG, (chrome)	FLSS, FLSTFBS
31	37195-11	COVER, upper (black)	FLSS, FLSTFBS
32	44613-02	BLEEDER SCREW	FLSS, FLSTFBS
33	48052-07	BRACKET, transmission mounting, right	FLSS, FLSTFBS
34	60328-98B	PLUG ASSEMBLY, magnetic, with 11105	FLSS, FLSTFBS
35	62372-09	VENT HOSE	FLSS, FLSTFBS
36	74402-05B	SENSOR, speedometer	FLSS, FLSTFBS
37	11000101	OIL SEAL	FLSS, FLSTFBS
38	11900035	O-RING	FLSS, FLSTFBS
39	25700178	INNER SIDE COVER	FLSS, FLSTFBS
40	25700180	SIDE COVER, (black)	FLSS, FLSTFBS
41	37200023	SECONDARY CLUTCH ACTUATOR, with 44613-02, 11900035 and 37200034	FLSS, FLSTFBS
42	37200034	CAP, bleeder screw	FLSS, FLSTFBS

TRANSMISSION GEARS

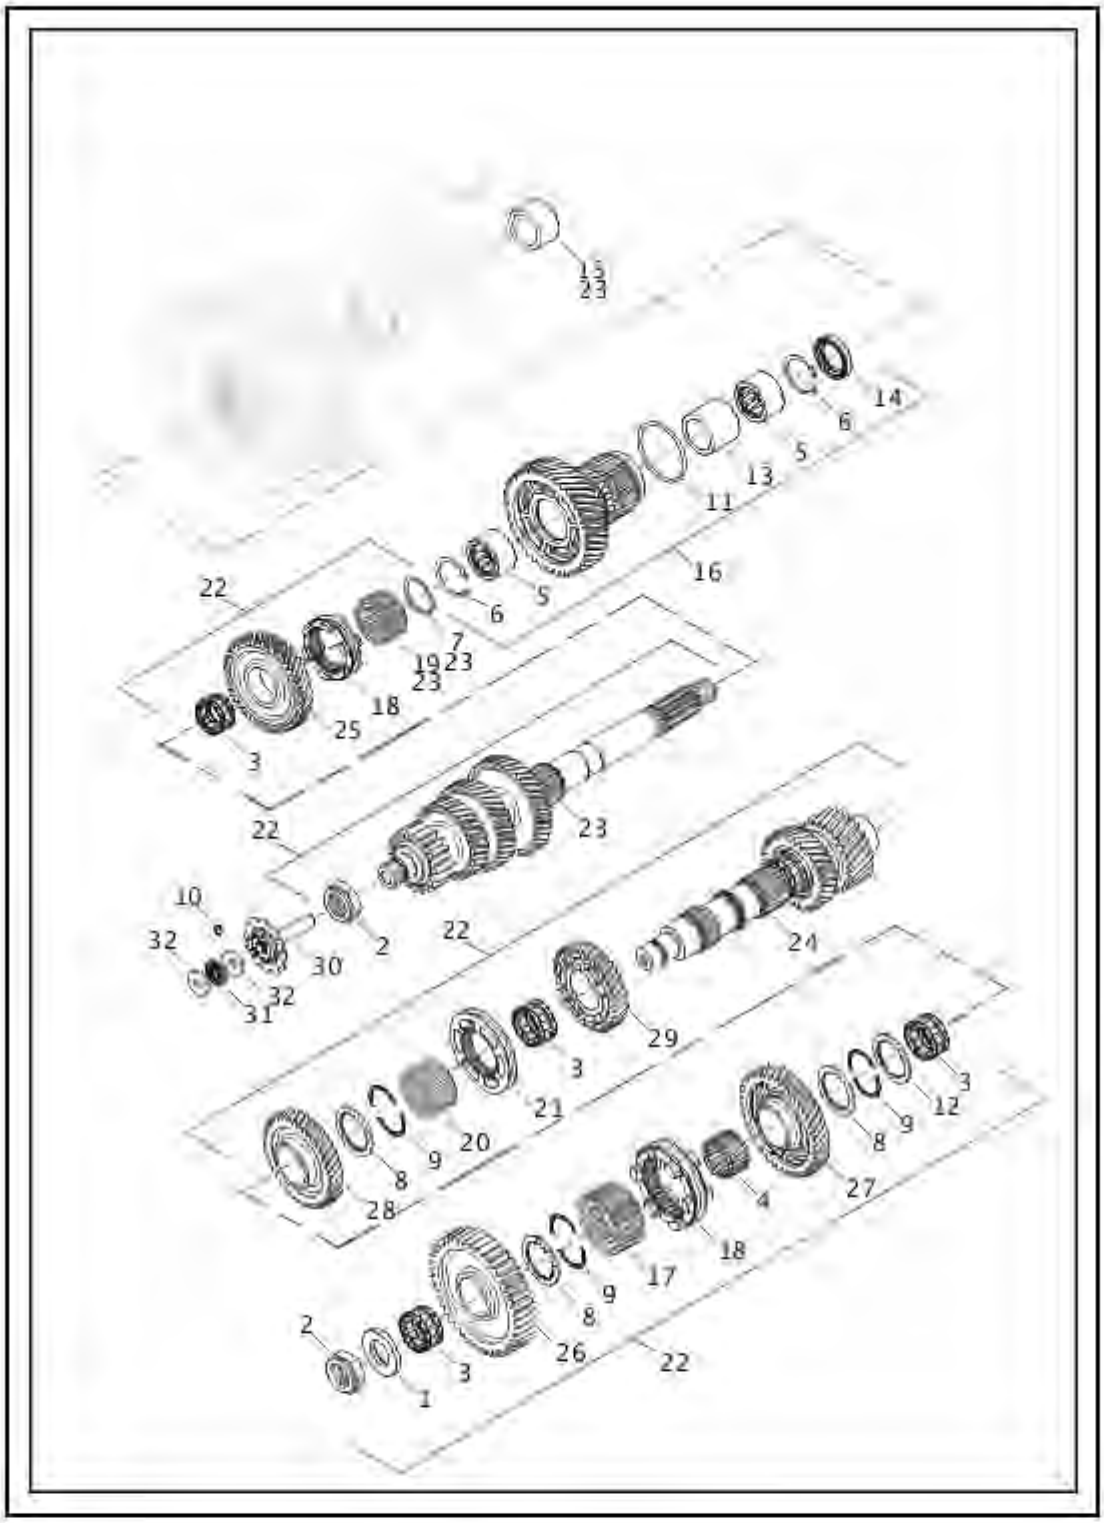

Index No.	Part No.	Description	Model(s)
1	5837A	SPACER	
2	7340	NUT *(2)*	
3	8026K	BEARING, needle *(4)*	
4	8041	BEARING, needle	
5	8042	BEARING, needle *(2)*	
6	10991A	RETAINING RING *(2)*	

7	11061A	RETAINING RING	
8	11081A	RING, lock *(3)*	
9	11082	SECURING SEGMENT *(6)*	
10	11096	RETAINING RING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
11	11201	O-RING	
12	11207A	WASHER, internal spline	
13	11599A	SPACER, bearing	
14	12077	OIL SEAL	
15	34091-08	BEARING, inner race	
16	35122-06	GEAR ASSEMBLY, driven output, with 8042, 10991A, 11201, 11599A and 12077	
17	35124-06	GUIDE HUB, dog ring	
18	35126-06	DOG RING, lugged *(2)*	
19	35201-10	GUIDE HUB, dog ring	
20	35202-06	GUIDE HUB, dog ring	
21	35204-06	DOG RING, pocketed	
22	35246-10A	GEAR PACK, FORKS AND DRUM SUBASSEMBLY, with 1, 2, 3, 4, 7, 8, 9, 12, 17, 18, 19, 20, 21, 23, 24, 25, 26, 27, 28, 29, 35260-06, shifter cam and forks (black)	
23	35467-06B	INPUT SHAFT KIT, with 11061A, 34091-08 and 35201-10	
24	35470-10	COUNTER SHAFT ASSEMBLY	
25	35801-10	GEAR, fifth input	
26	35805-06A	GEAR, countershaft first	
27	35807-06	GEAR, countershaft second	
28	35811-06	GEAR, countershaft third	
29	35814-06	GEAR, countershaft fourth	
30	37069-	ROD ASSEMBLY	FXSB, FLSTC,

	90A		FLSTF, FLSTN, FLSTFB, FLS
31	37312-75	BEARING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
32	37313-80	THRUST RACE BEARING *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

CLUTCH - TWIN CAM 103™

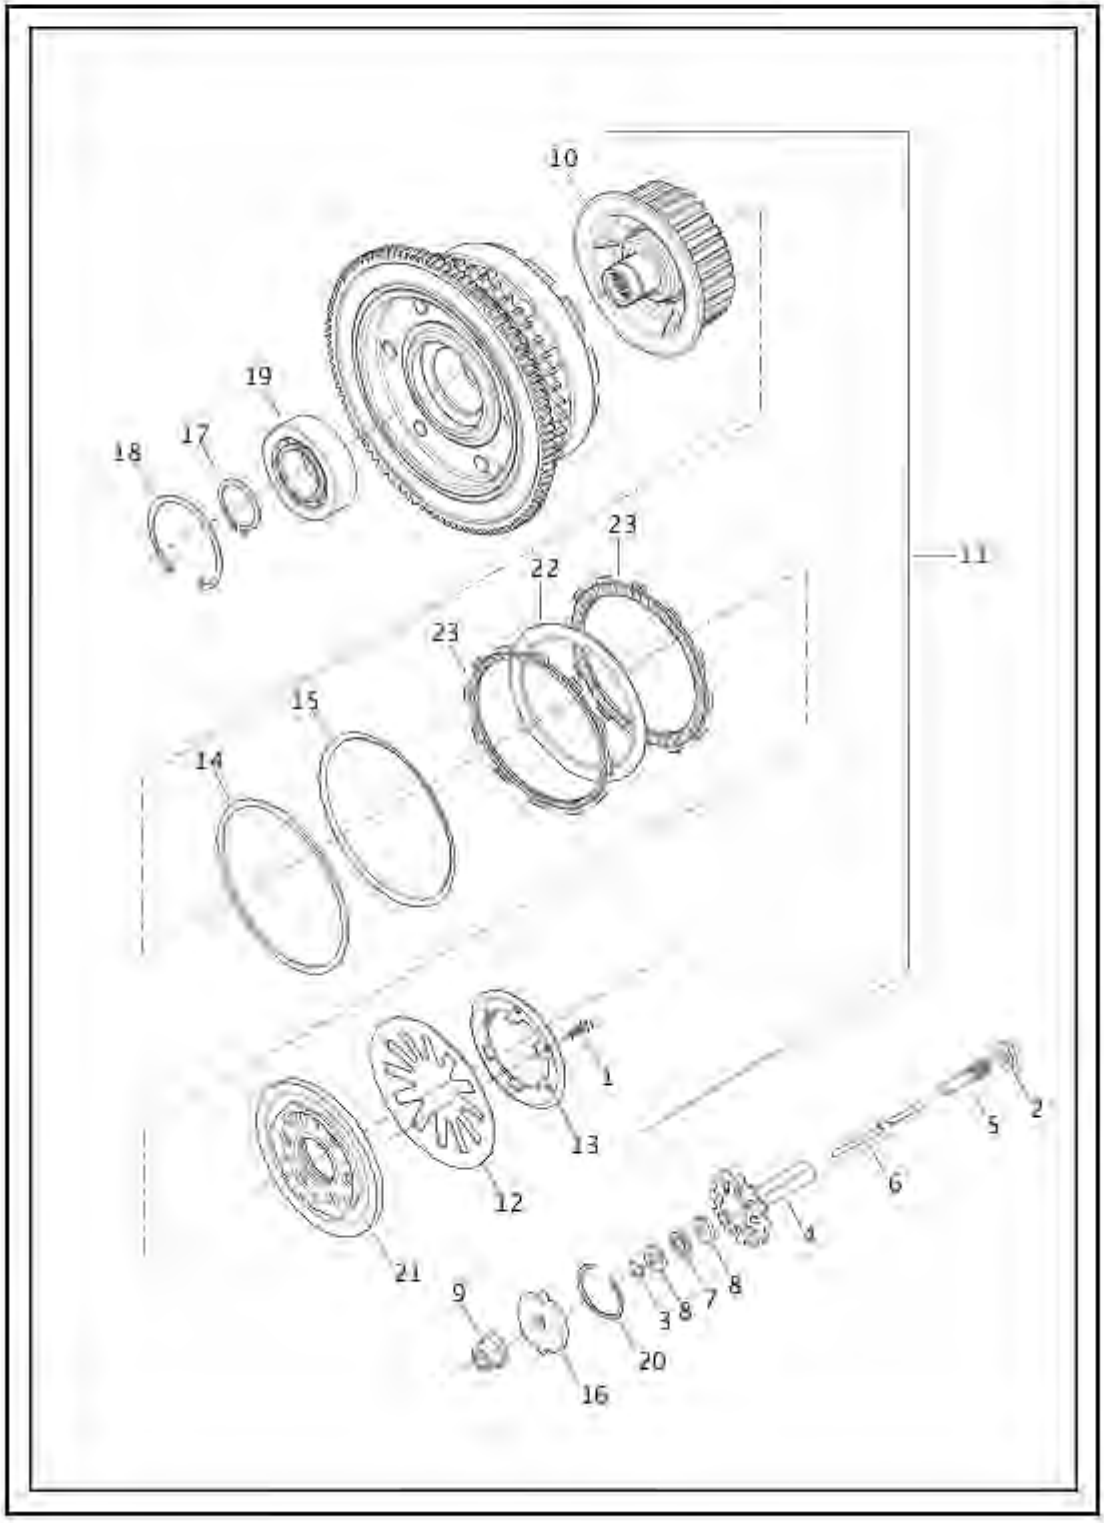

Index No.	Part No.	Description	Model(s)
1	2980	SCREW *(6)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
2	7848W	JAMNUT	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
3	11096	RETAINING RING	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
4	37069-90A	ROD ASSEMBLY	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
5	37090-98A	SCREW, adjuster	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
6	37092-06	PUSHROD, clutch release (through mainshaft)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
7	37312-75	BEARING, pushrod	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
8	37313-80	THRUST RACE BEARING *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
9	37496-90A	NUT, mainshaft	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
10	37554-11	CLUTCH HUB, with hub, thrust washer, spring washer and retaining ring	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
11	37816-11	CLUTCH ASSEMBLY, with 1, 10, 12, 13, 14, 15, 17, 18, 19, 21, 22 and 23	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
12	37871-04	SPRING, diaphragm (yellow)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
	37871-98A	SPRING, diaphragm	FLSTC, FLSTF, FLSTN, FLSTFB, FXSB
13	37872-00	CLUTCH SPRING SEAT	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
14	37883-98	SEAT, damper spring	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
15	37884-98	DAMPER SPRING	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
16	37903-90	RELEASE PLATE	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
17	37904-90	RETAINING RING, internal	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
18	37905-00	RETAINING RING, internal	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
19	37906-11	BEARING, ball - double row	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
20	37909-90	RETAINING RING, internal	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB

21	37912-00	PLATE, clutch, pressure	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
22	37913-98	PLATE CLUTCH *(8)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
23	37932-98	FRICTION PLATE KIT, includes all nine friction plates	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB

CLUTCH - ASSIST AND SLIP - TWIN CAM 110™

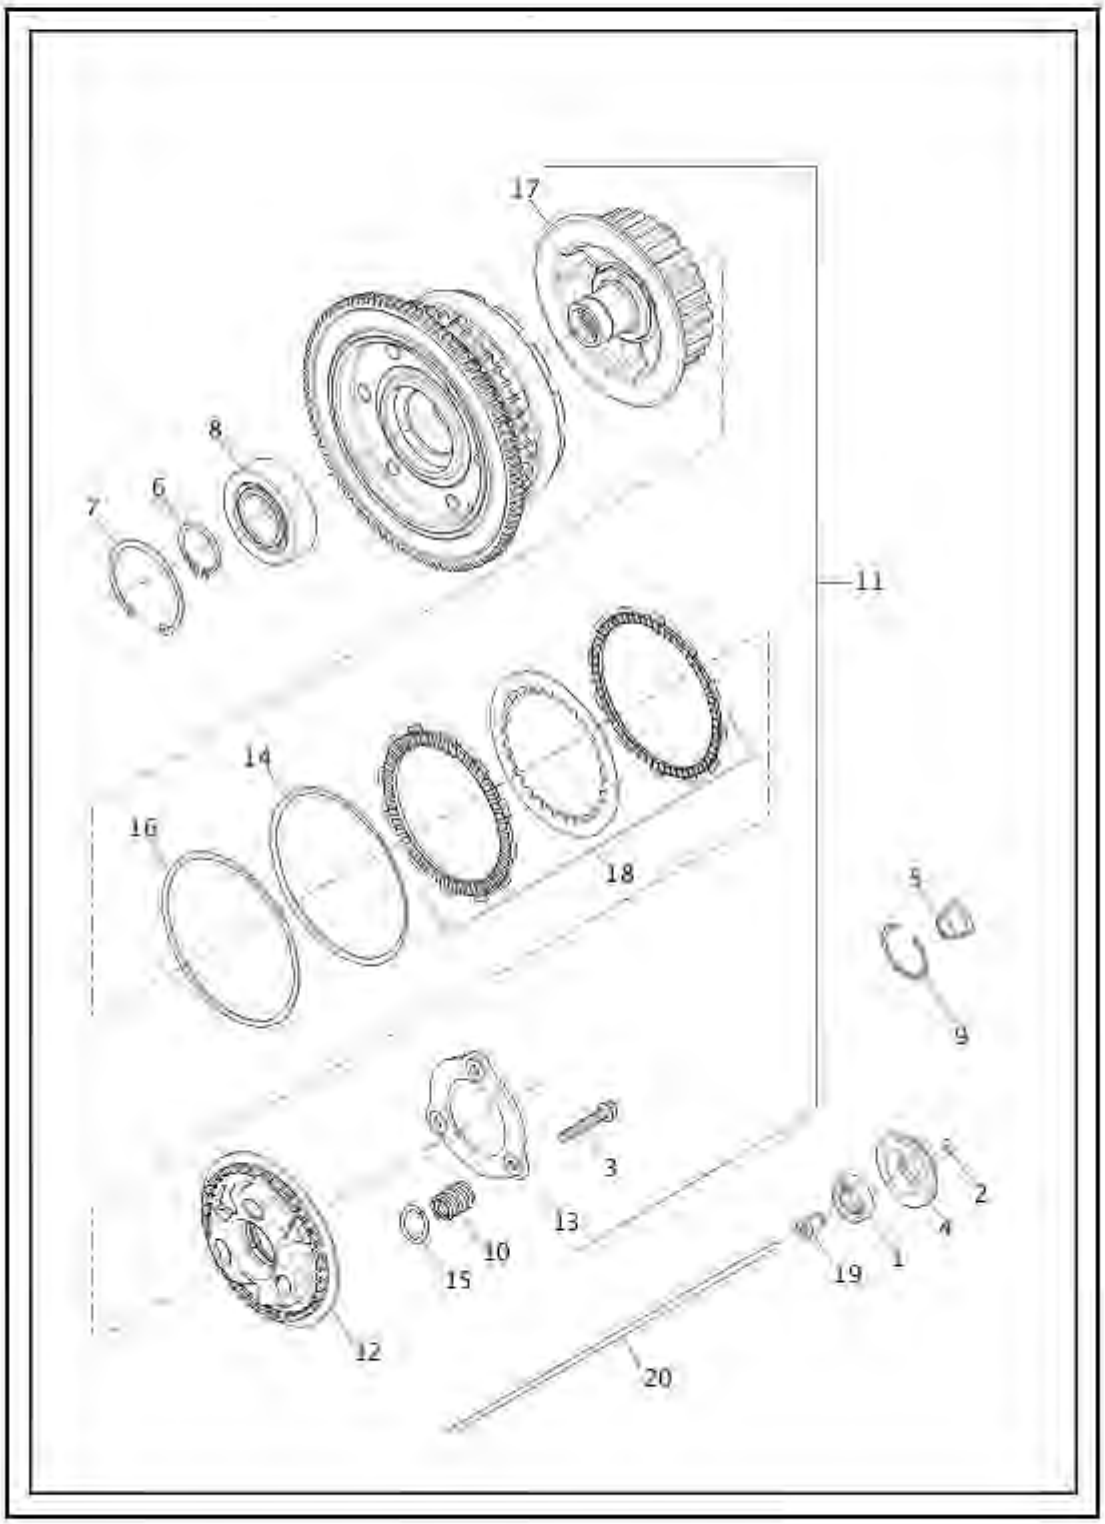

Index	Part No.	Description	Model(s)

No.			
1	8885	BEARING	FLSS, FLSTFBS
2	11143	RETAINING RING, external	FLSS, FLSTFBS
3	36706-01K	BOLT *(3)*	FLSS, FLSTFBS
4	36731-91	PLATE, release, with 8885	FLSS, FLSTFBS
5	37496-90A	NUT, mainshaft	FLSS, FLSTFBS
6	37904-90	RETAINING RING, external	FLSS, FLSTFBS
7	37905-00	RETAINING RING, internal	FLSS, FLSTFBS
8	37906-11	BEARING, ball, double-row	FLSS, FLSTFBS
9	37909-90	RING, retaining, internal	FLSS, FLSTFBS
10	11700002	COIL SPRING *(3)*	FLSS, FLSTFBS
11	37000026	CLUTCH ASSEMBLY, assist and slip, complete, with 3, 6, 7, 8, 10, 12, 13, 14, 15, 16, 17 and 18	FLSS, FLSTFBS
12	37000032	PRESSURE PLATE, clutch	FLSS, FLSTFBS
13	37000033	STOPPER PLATE	FLSS, FLSTFBS
14	37000034	SPRING, damper	FLSS, FLSTFBS
15	37000035	SEAT *(3)*	FLSS, FLSTFBS
16	37000036	SEAT, damper-spring	FLSS, FLSTFBS
17	37000083	HUB ASSEMBLY	FLSS, FLSTFBS
18	37000118	CLUTCH DISKS KIT	FLSS, FLSTFBS
19	37000217	RELEASE ROD, clutch	FLSS, FLSTFBS
20	37000218	PUSHROD, clutch release	FLSS, FLSTFBS

PRIMARY HOUSING

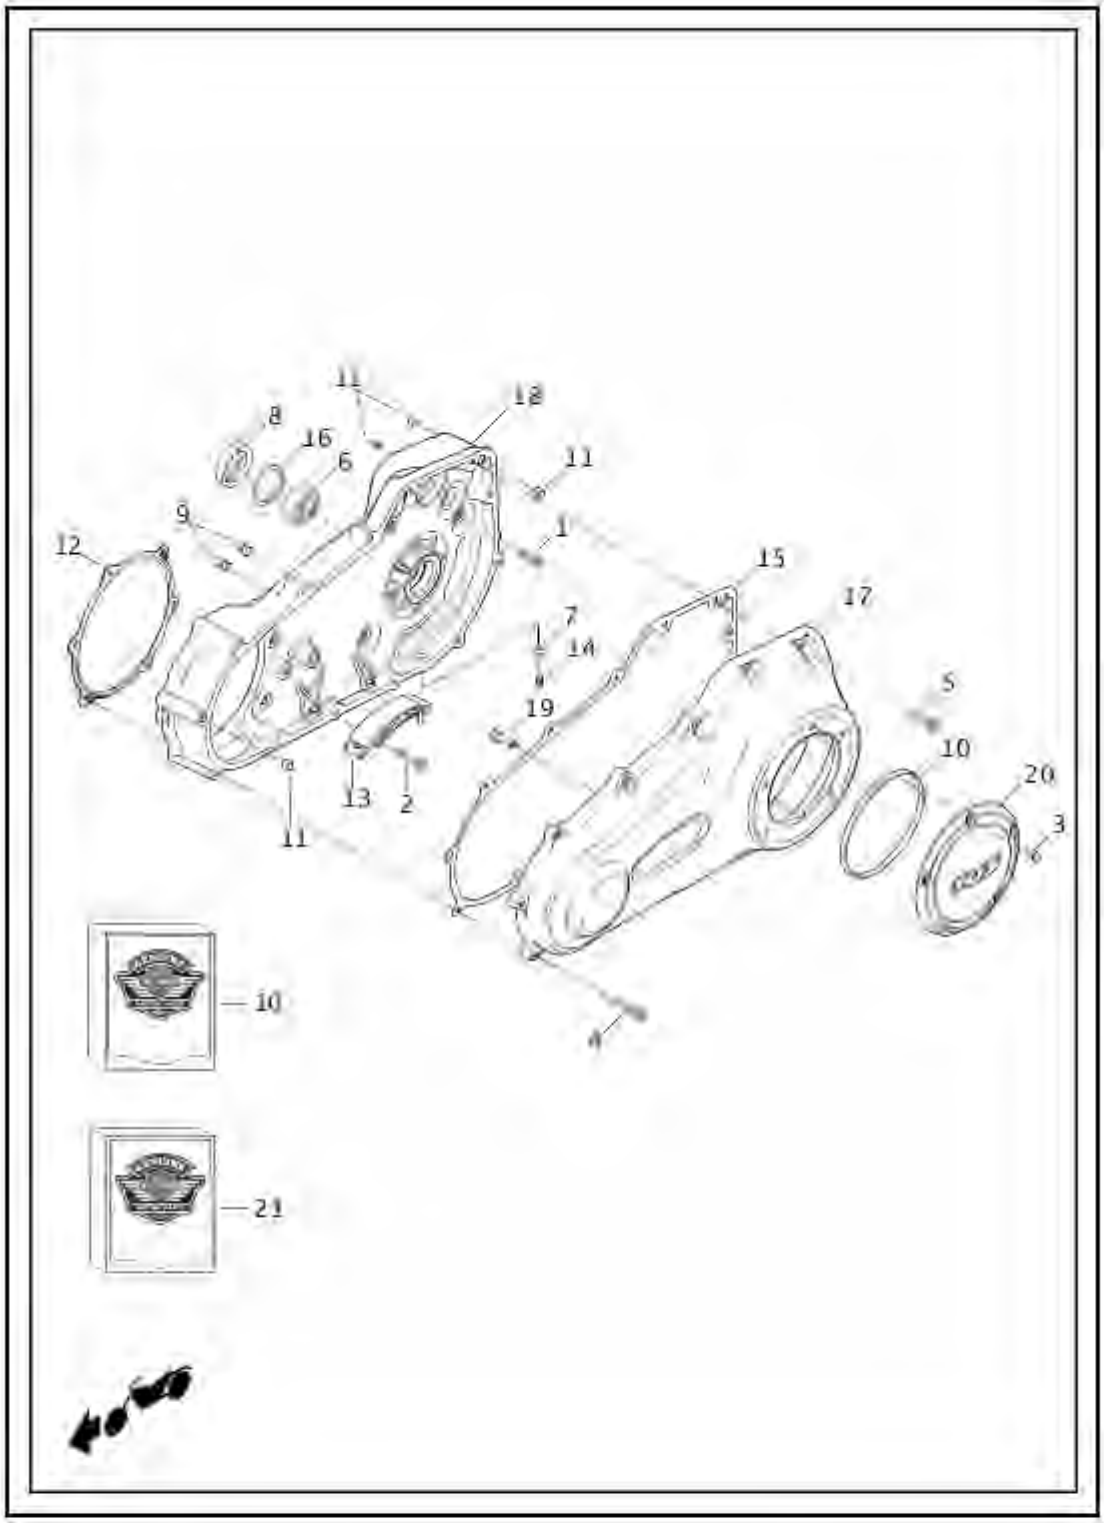

Index No.	Part No.	Description	Model(s)
1	786A	BOLT *(5)*	
2	791A	SCREW *(2)*	
3	1062	SCREW *(5)*	
4	1775	SCREW *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
	1778	SCREW *(4)*	FXSB

5	4813A	SCREW *(9)*	
6	9231	BEARING	
7	11105	O-RING	
8	12052A	OIL SEAL	
9	16583-00A	BUSHING, dowel *(2)*	
10	17369-06	GASKET SERVICE KIT, 1,000 mi (1600 km), 5000 mi (8000 km), 10,000 mi (16,000 km)	
11	24754-75A	DOWEL BUSHING *(4)*	
12	34934-06	GASKET, primary housing	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	34948-08	GASKET, primary housing (black)	FLSS, FLSTFBS
13	39929-06B	CHAIN TENSIONER	
14	60328-98B	PLUG ASSEMBLY, magnetic drain, with 11105	
15	60547-06	GASKET, primary cover	
16	60678-85	RETAINING RING	
17	60782-06A	COVER, primary (chrome)	FLSTC, FLSTF, FLSTN, FXSB
	60563-08A	COVER, primary (polished)	FLS
	60876-11A	COVER, primary (gloss black)	FLSS, FLSTFBS
	60882-10A	COVER, primary (satin chrome)	FLSTFB
18	60776-08A	INNER PRIMARY HOUSING, (wide)(black)	FXSB
	60791-06C	INNER PRIMARY HOUSING, (black)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
19	60813-07	SCREW, primary cover	
20	25700037	COVER, clutch (chrome)	FLSTC, FLSTF, FLSTN
	25700020	COVER, clutch (gloss black) (not illustrated)	FLSS, FLSTFBS
	25700038	COVER, clutch (polished) (not illustrated)	FLS
	25700043	COVER, clutch (black) (not illustrated)	FLSTFB
	25700234	COVER, clutch (gloss black) (not illustrated)	FXSB
21	25700226	GASKET KIT, inner primary, with 1, 7, 8, 10, 12, 11150, 27444-00Y and 37909-90	

BELT, CHAINS AND SPROCKETS

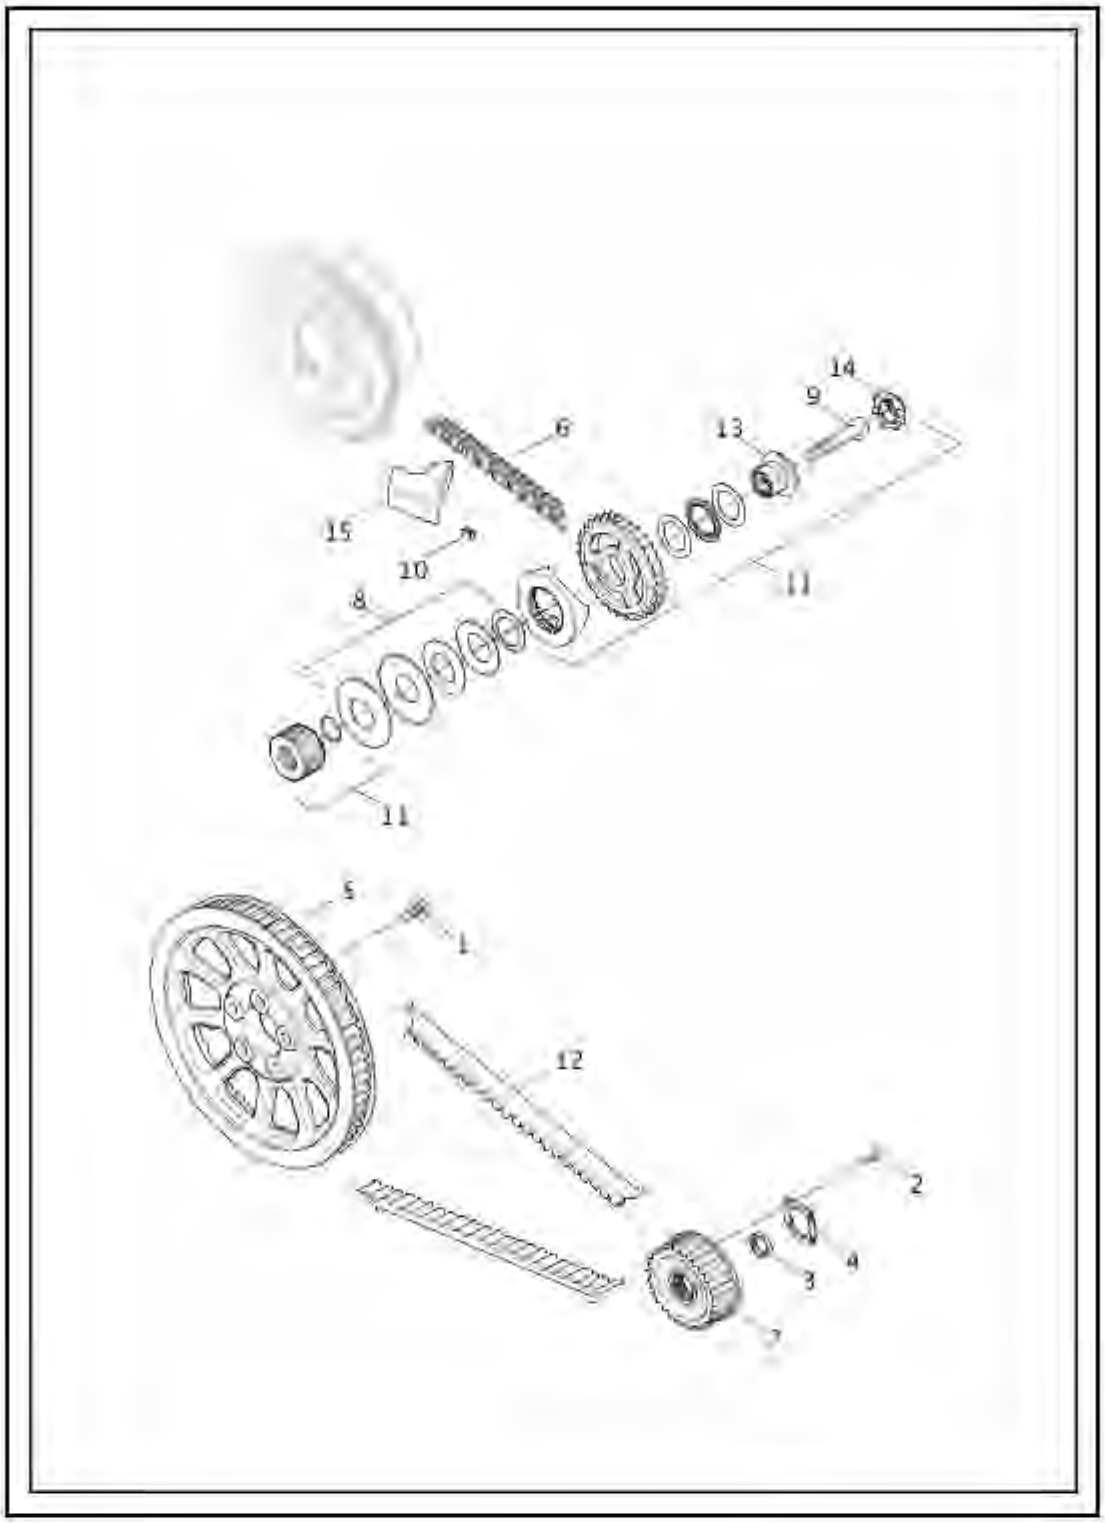

Index No.	Part No.	Description	Model(s)
1	3109	SCREW *(5)*	
2	3594	SCREW *(2)*	
3	35241-06	NUT, sprocket	
4	35242-06	LOCKPLATE, sprocket nut	

5	40325-07	SPROCKET, rear, 66 teeth (black)	
6	40036-06	PRIMARY CHAIN	
7	40659-06	SPROCKET, transmission, 32 teeth	
8	83936-09A	SPRING PACK	
9	10500031	SCREW, compensator to crank	
10	12200065	CLIP, retention	FXSB
11	36500034A	COMPENSATOR ASSEMBLY	FLSTC, FLSTN, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
	36500078A	COMPENSATOR ASSEMBLY, (wide)	FXSB
12	40000001	REAR BELT, 133 teeth, 24 mm wide (blue)	FLSTC, FLSTN, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
	40059-09A	REAR BELT, 132 teeth, 24 mm wide (white)	FXSB
13	40100041	RETAINER, sprocket	
14	62700062	OIL SPINNER	FXSB
15	62700064	OIL DEFLECTOR	FXSB

REAR BELT GUARD

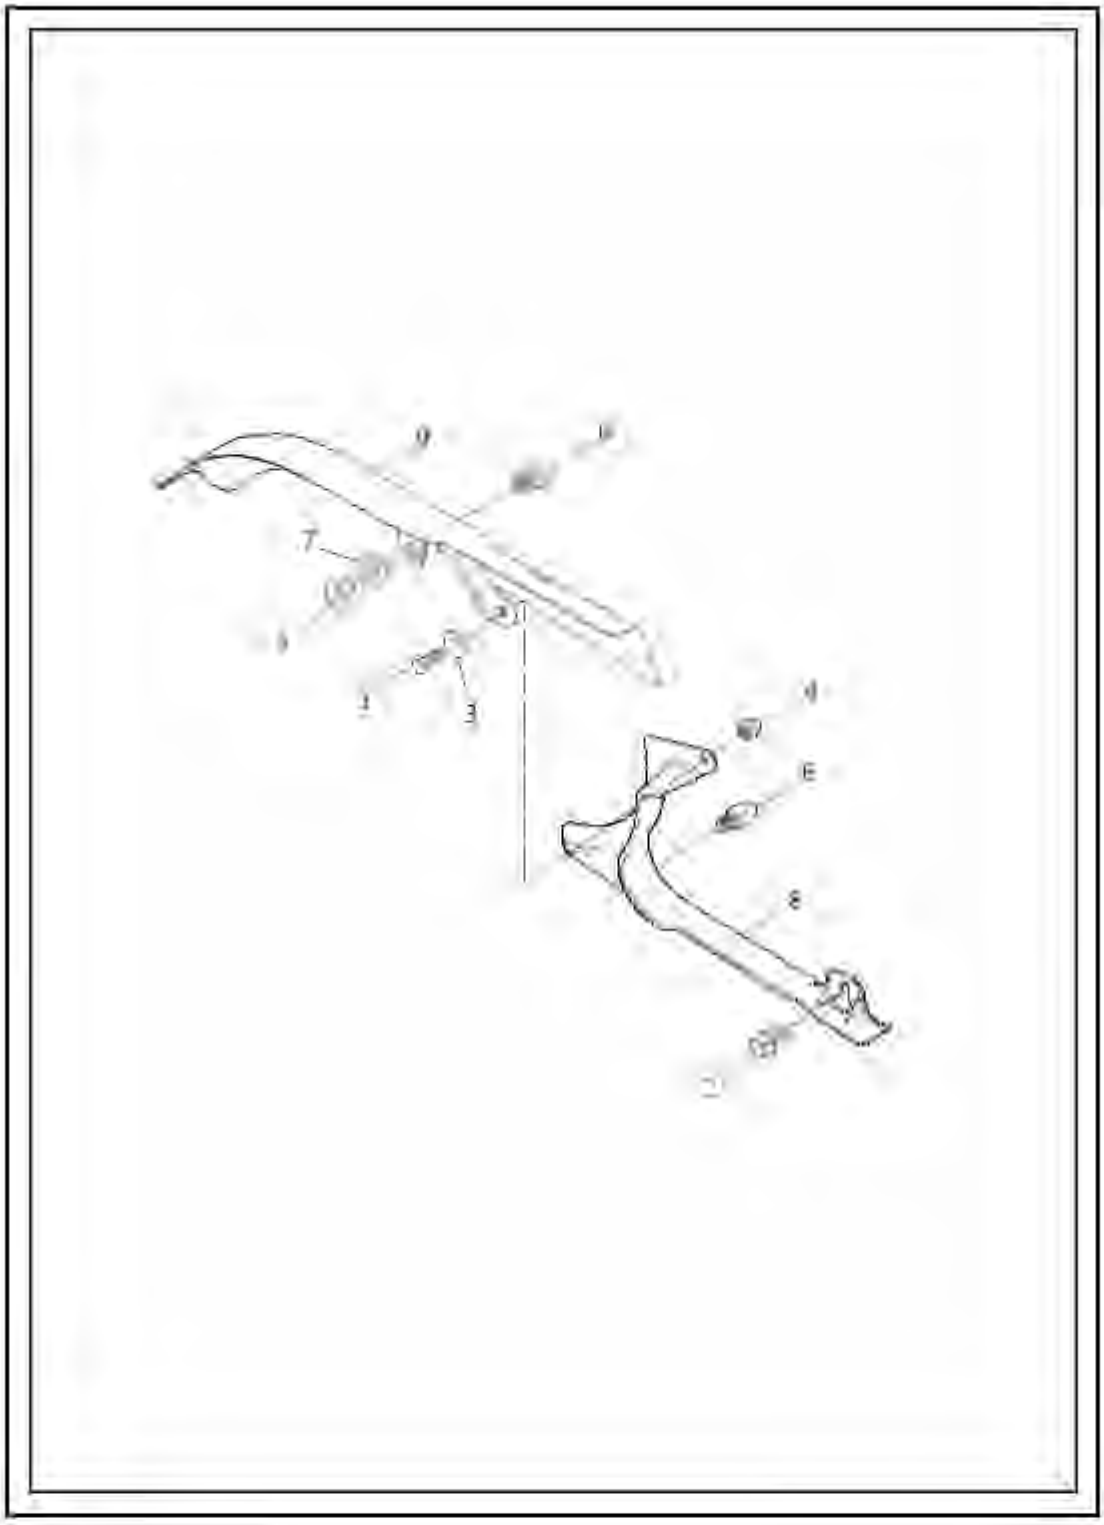

Index No.	Part No.	Description	Model(s)
1	3987	BOLT	
2	4407	SCREW	
3	6702	WASHER	
4	7549A	ACORN NUT	
5	7669	NUT, tee	
6	8201	BOLT, acorn *(2)*	
7	11413	GROMMET	

8	60362-07A	DEBRIS DEFLECTOR, 1 in	FLSTC, FLSTN, FLS, FLSS
	60452-07A	DEBRIS DEFLECTOR, 20 mm	FXSB, FLSTF, FLSTFB, FLSTFBS
9	60570-07B	BELT GUARD, (gloss black)	FLSTFB, FLS, FLSS, FLSTFBS
	60867-08	BELT GUARD, 1 in, with warning label (chrome)	FLSTC, FLSTF, FLSTN, FXSB

CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB

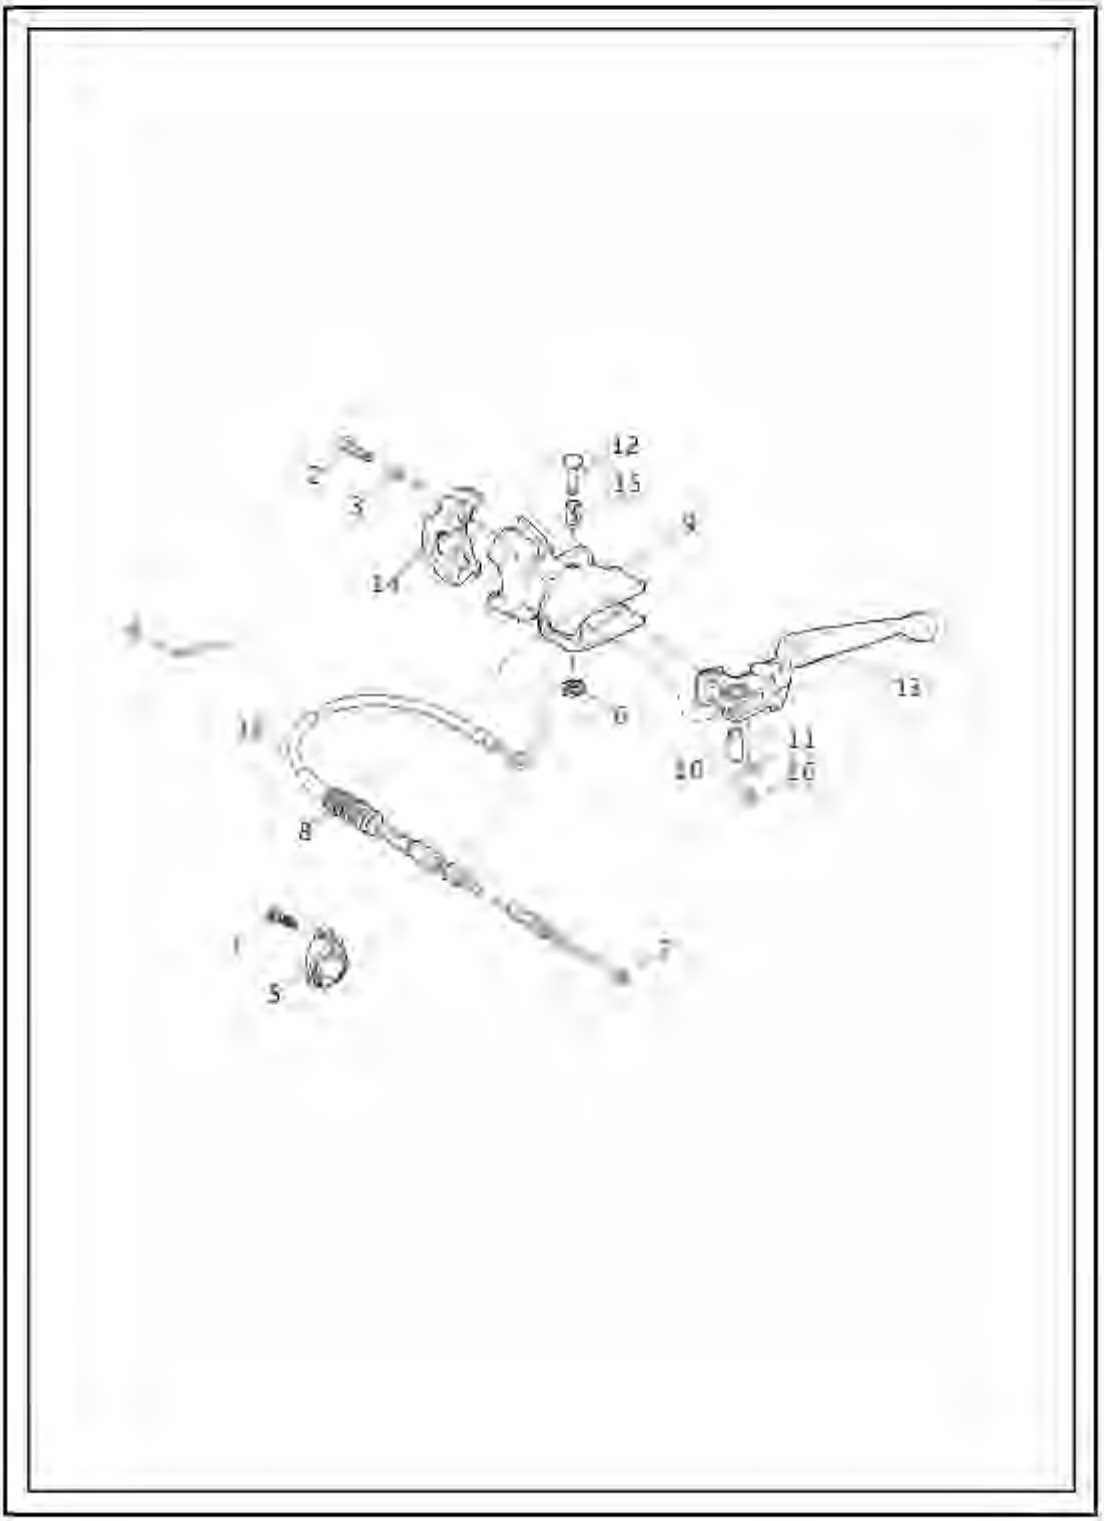

Index	Part No.	Description	Model(s)

No.			
1	2566	SCREW	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
2	4132	SCREW *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
3	6101	WASHER *(2)*	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
4	10039	CABLE STRAP	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
5	10124	CLAMP	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
6	11143	RETAINING RING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
7	11179	O-RING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
8	38630-88	BOOT, clutch cable	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
9	38700-08A	BRACKET, hand lever (gloss black)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
10	38900-08	ANCHOR PIN	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
11	45021-86	SPRING, anti-rattle	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
12	45032-82	PIVOT PIN, hand lever	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
13	45080-08	HAND LEVER, clutch, with 45021-86, 45423-92 and 90770-79	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
14	45138-08A	CLAMP, lever bracket (gloss black)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
15	45423-92	BUSHING	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
16	90770-79	SCREW	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
17	37200115	CABLE, clutch control, includes O-ring, anchor pin and boot	FXSB
	37200117	CABLE, clutch control, includes O-ring, anchor pin and boot	FLSTF, FLSTN, FLSTFB, FLS
	37200119	CABLE, clutch control, includes O-ring, anchor pin and boot	FLSTC

CLUTCH CONTROL - FLSS AND FLSTFBS

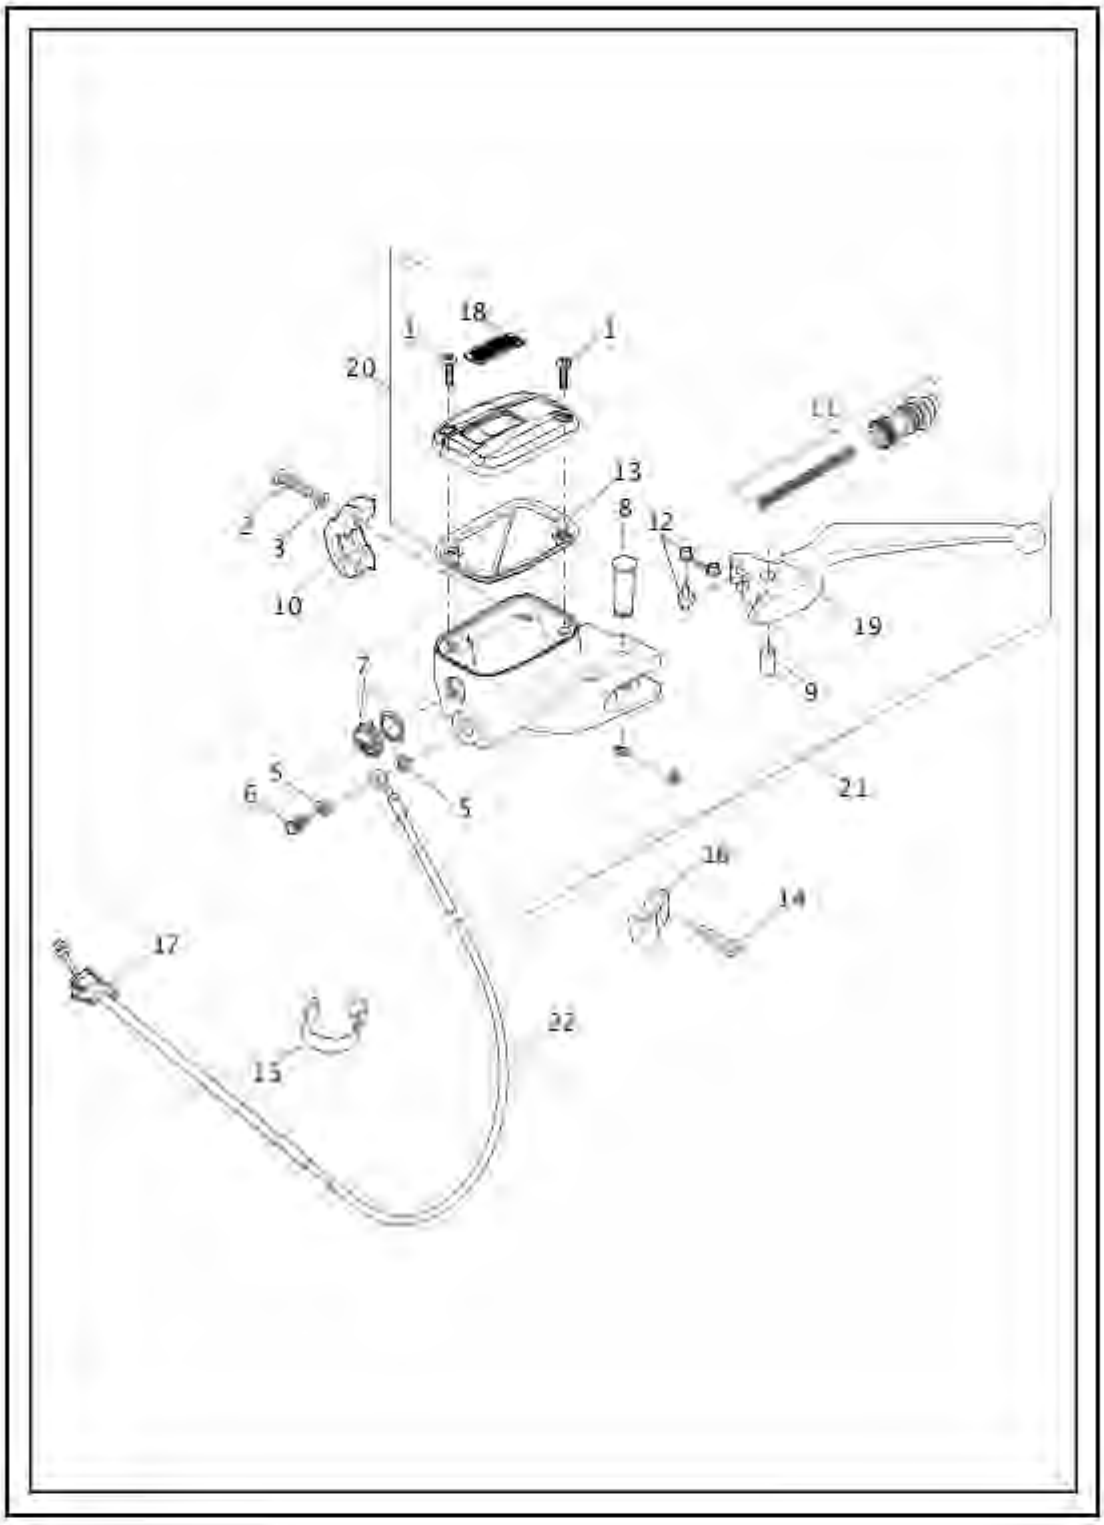

Index No.	Part No.	Description	Model(s)
1	2590	SCREW, (set of two)	FLSS, FLSTFBS
2	4132	SCREW *(2)*	FLSS, FLSTFBS
3	6101	WASHER *(2)*	FLSS, FLSTFBS
4	11143	RETAINING RING	FLSS, FLSTFBS

5	41751-06A	GASKET, banjo bolt *(2)*	FLSS, FLSTFBS
6	42010-06B	BOLT, banjo	FLSS, FLSTFBS
7	42145-06	SIGHT GLASS KIT	FLSS, FLSTFBS
8	45032-82	PIVOT PIN	FLSS, FLSTFBS
9	45423-92	BUSHING, hand lever	FLSS, FLSTFBS
10	45138-08A	CLAMP, master cylinder and clutch (black)	FLSS, FLSTFBS
11	37200096B	REPAIR KIT, with 41751-06A (black)	FLSS, FLSTFBS
12	46246-01	BUSHING AND ROLLER, kit	FLSS, FLSTFBS
13	46322-06	GASKET, cover, master cylinder	FLSS, FLSTFBS
14	68042-99	SCREW	FLSS, FLSTFBS
15	10800060	CLAMP, clutch line	FLSS, FLSTFBS
16	10800102	CLAMP, hose (black)	FLSS, FLSTFBS
17	12100028	GROMMET	FLSS, FLSTFBS
18	14100605	DECAL, master cylinder	FLSS, FLSTFBS
19	36700144	CLUTCH LEVER, with 11143, 45423-92, 46246-01 (black)	FLSS, FLSTFBS
20	36700145	COVER, with 2590, 14100605, 46322-06 (black)	FLSS, FLSTFBS
21	36700186	MASTER CYLINDER, clutch lever, with 36700144, 36700145, 42145-06, 45032-82 (black)	FLSS, FLSTFBS
22	37200186	CLUTCH LINE, (black)	FLSS, FLSTFBS

BRAKE CONTROL, FRONT

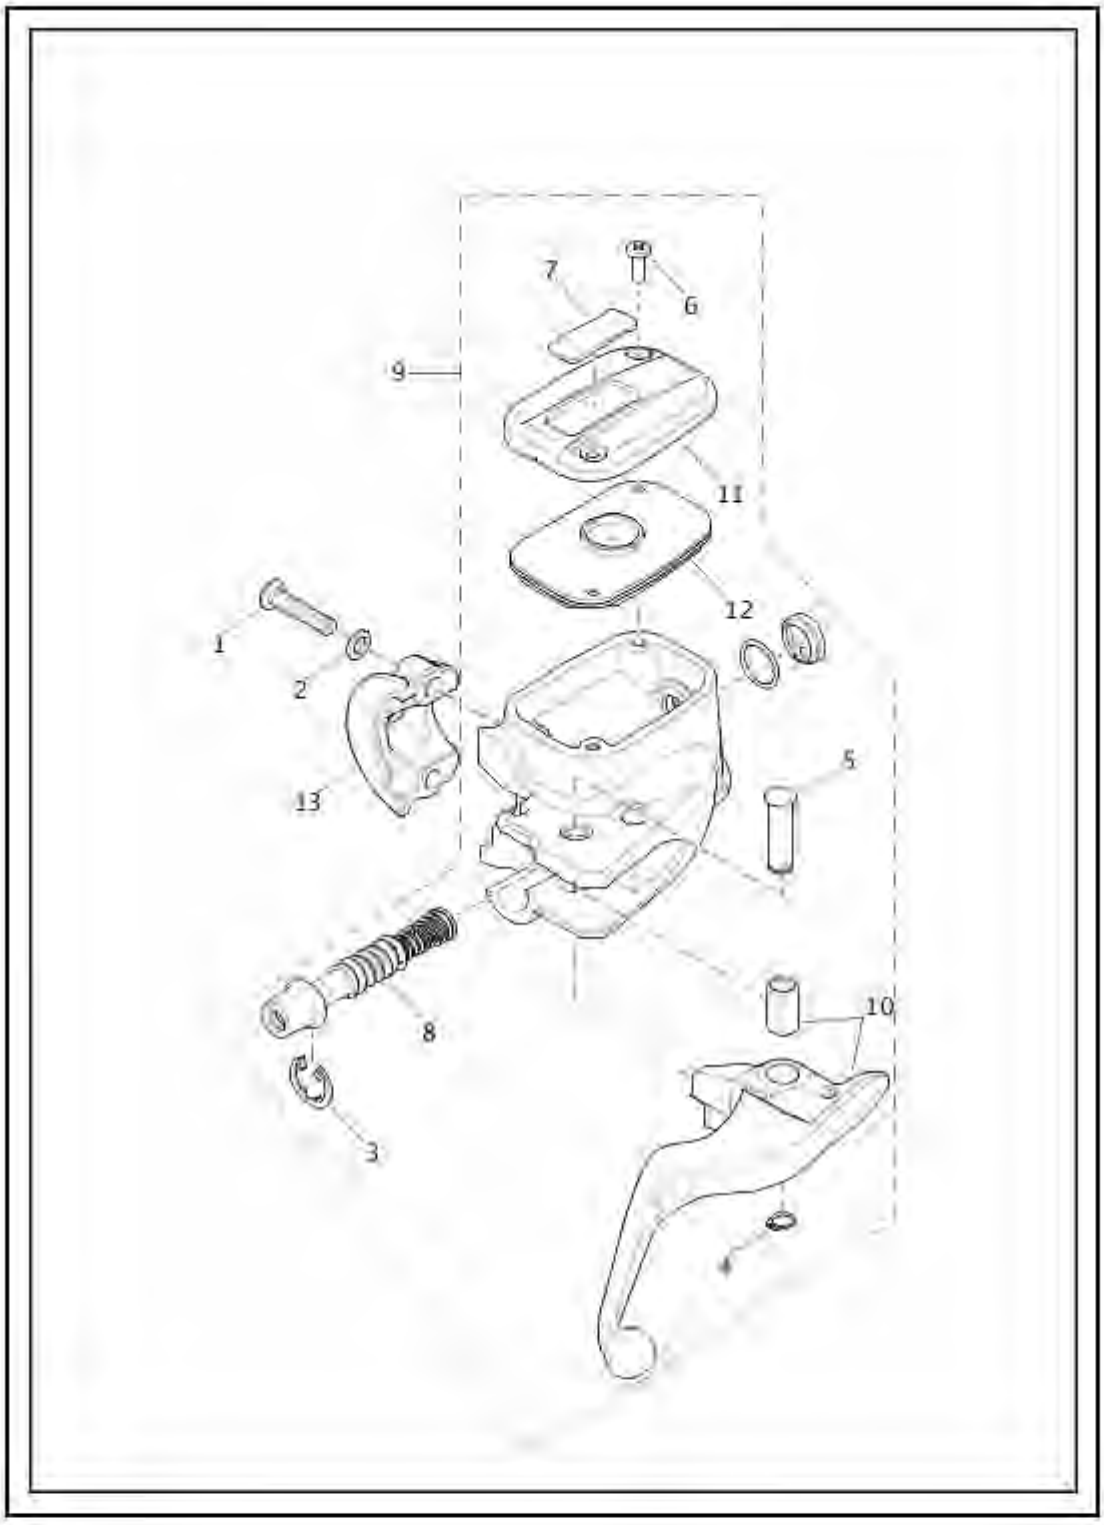

Index No.	Part No.	Description	Model(s)
1	4132	SCREW *(2)*	
2	6101	WASHER *(2)*	
3	11142	RETAINING RING	
4	11379	RETAINING RING	
5	42807-04	PIVOT PIN	
6	10500041	SCREW *(2)*	

7	14100605	DECAL	
8	41700087	REPAIR KIT, master cylinder, with 11142	
9	41700233	MASTER CYLINDER, front, with hand lever	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	41700451	MASTER CYLINDER, front, with hand lever (black)	FLSS, FLSTFBS
10	41700235	HAND LEVER, front brake control	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	41700313	HAND LEVER, front brake control (black)	FLSS, FLSTFBS
11	41700237	COVER KIT, reservoir, with 14100605	
12	41700238	GASKET KIT, master cylinder	
13	41700320	CLAMP, handlebar control	

MIRRORS

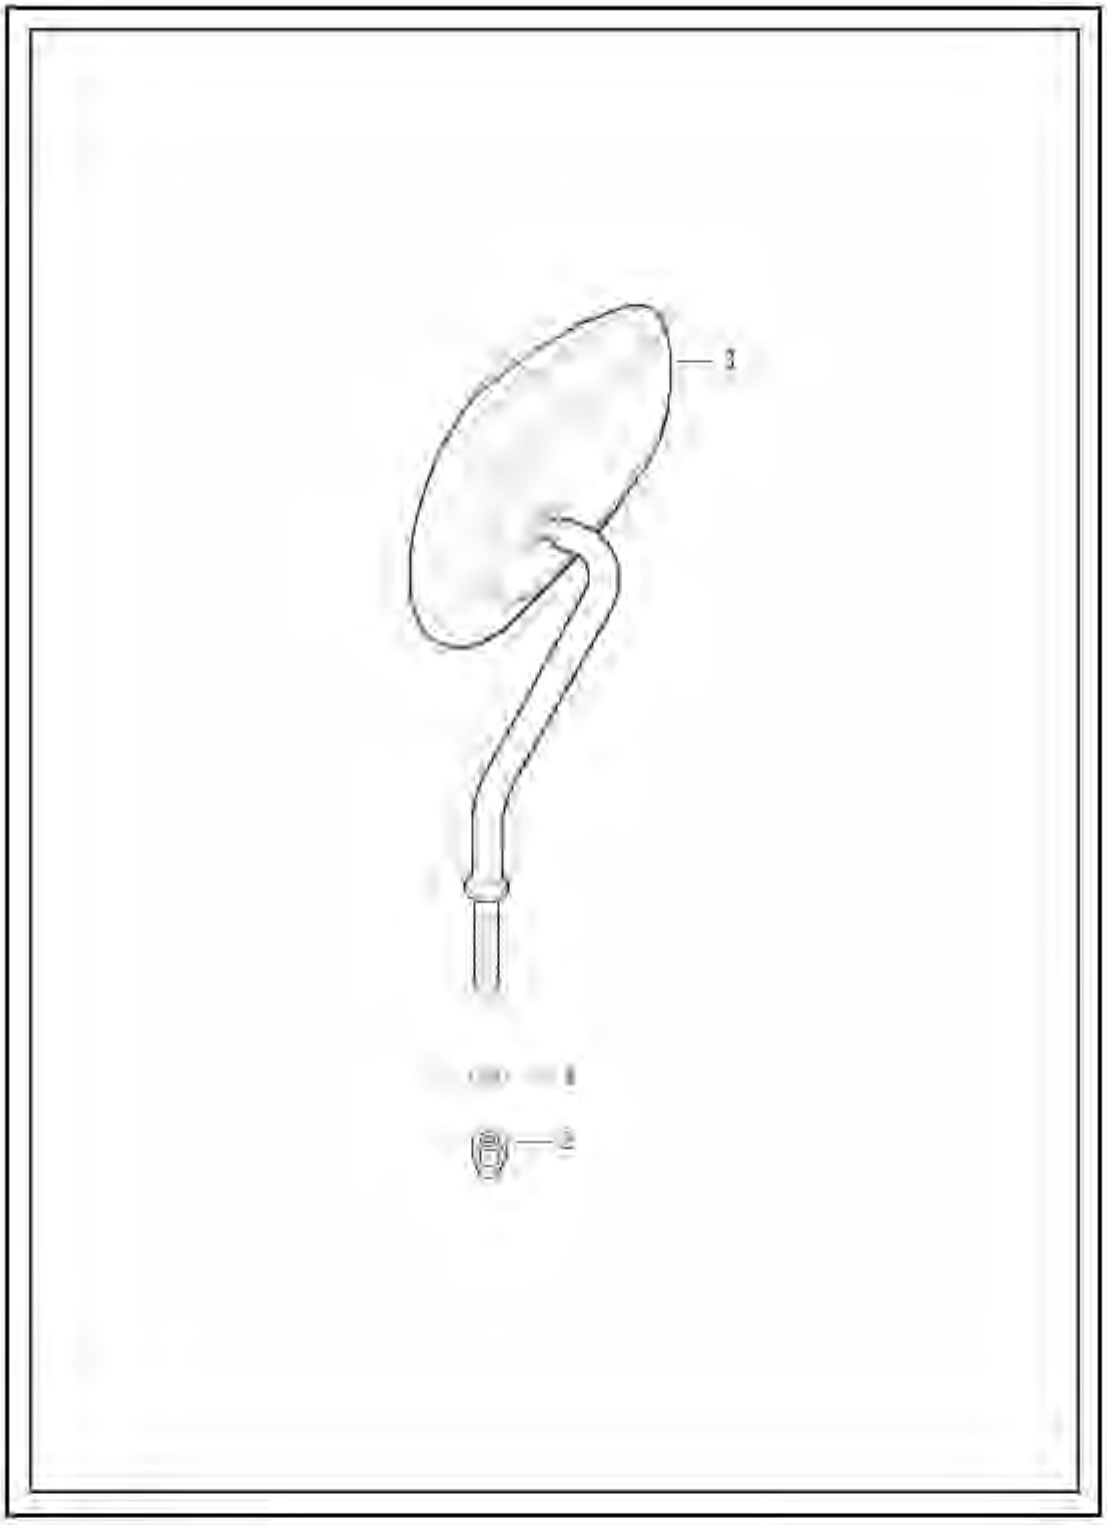

Index No.	Part No.	Description	Model(s)
1	7155	LOCKWASHER *(2)*	
2	7331	ACORN NUT *(2)*	FLSTC, FLSTF, FLSTN, FLS, FLSTFB, FXSB
	7352	ACORN NUT, (black) *(2)*	FLSS, FLSTFBS
3	91840-03B	MIRROR KIT, short, convex (right) (chrome)	FLSTC, FLSTF, FLSTN, FLS, FXSB
	91845-03B	MIRROR KIT, short, convex (left) (chrome)	FLSTC, FLSTF, FLSTN, FLS, FXSB

	91982-03B	MIRROR KIT, short, convex (right) (black)	FLSTFB
	91983-03B	MIRROR KIT, short, convex (left) (black)	FLSTFB
	92614-10	MIRROR KIT, short, convex (right) (black)	FLSS, FLSTFBS
	92615-10	MIRROR KIT, short, convex (left) (black)	FLSS, FLSTFBS

BRAKE LINES, FRONT, NON-ABS - FLS

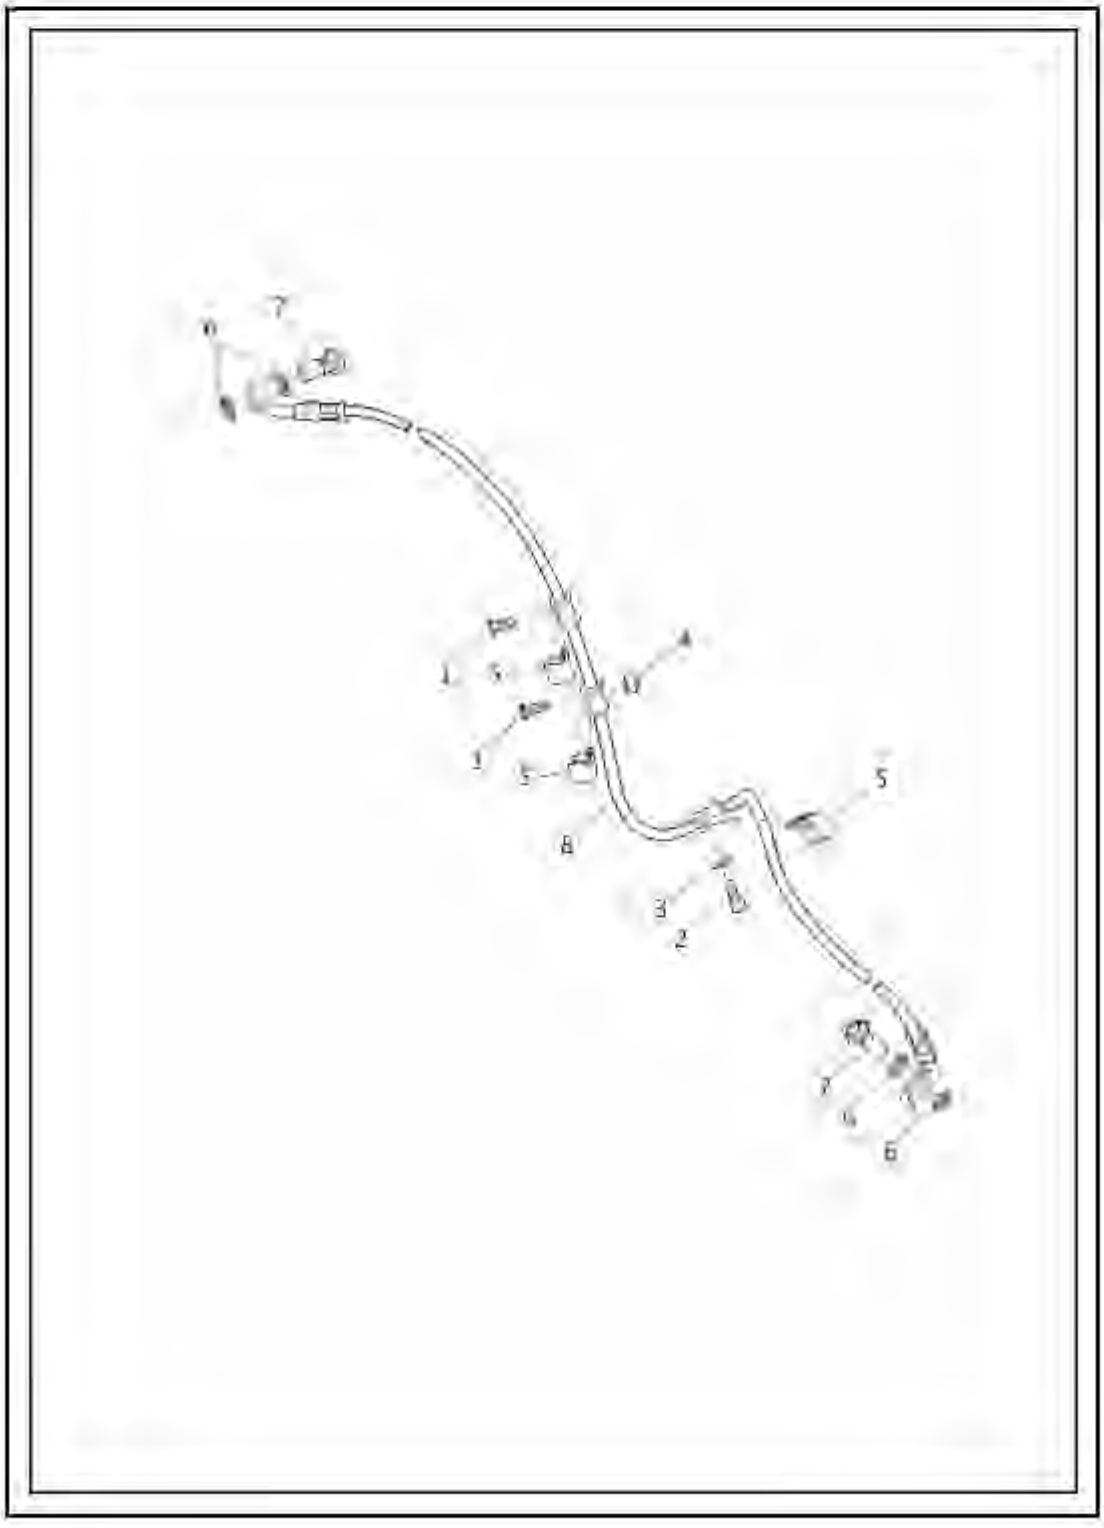

Index No.	Part No.	Description	Model(s)
1	941	SCREW *(2)*	FLS
2	3594	SCREW	FLS
3	6703	WASHER	FLS
4	7686	LOCKNUT	FLS
5	10800096	CLAMP *(3)*	FLS
6	41756-08	GASKET, master cylinder *(4)*	FLS
7	11600001	BOLT, BANJO, master cylinder *(2)*	FLS
8	41800303	BRAKE LINE, front	FLS

BRAKE LINES, FRONT, ABS

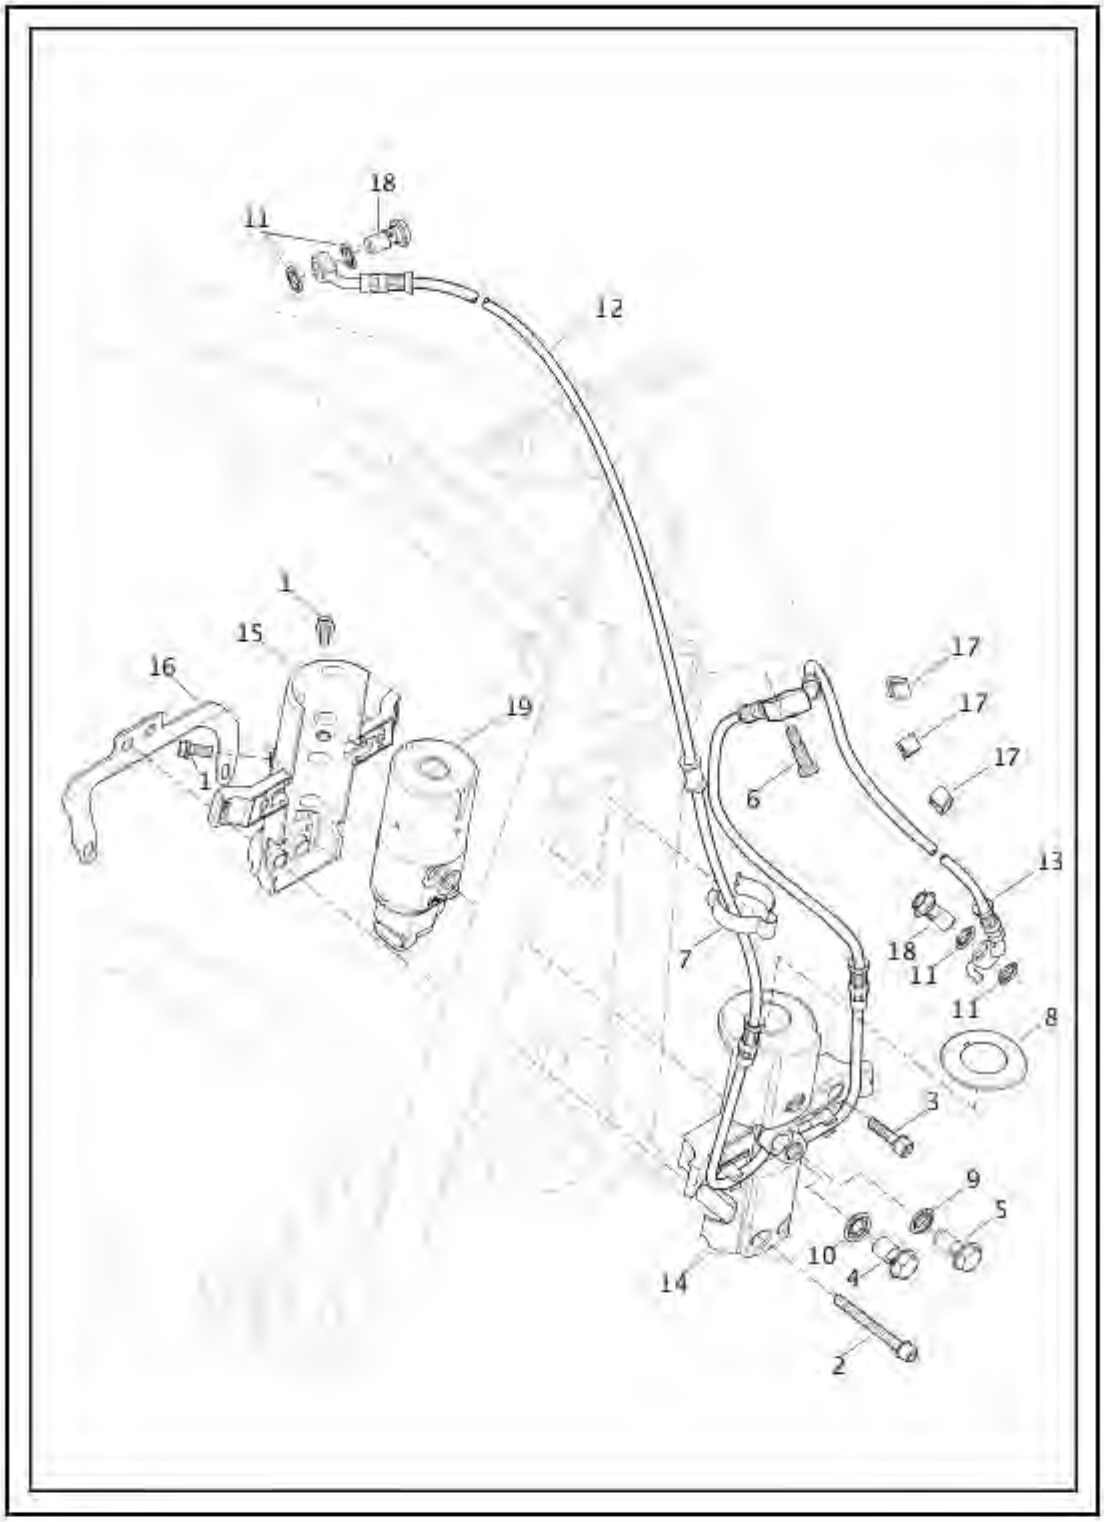

Index No.	Part No.	Description	Model(s)
1	4484M	SCREW *(2)*	
2	4717A	SCREW *(2)*	
3	4741A	SCREW *(2)*	
4	5001	BOLT, BANJO, brake line	
5	5002	BOLT, BANJO, brake line	
6	5004	BOLT, shoulder, bearing	

7	10861	CLIP, brake line *(2)*	
8	32009-11	TRIM RING, HCU	
9	41731-01	GASKET, brake line *(2)*	
10	41733-88	GASKET, bolt, banjo *(2)*	
11	41756-08	GASKET *(4)*	
12	41800299	BRAKE LINE, front, master cylinder to HCU	FLSTC
	41800300	BRAKE LINE, front, master cylinder to HCU	FLSTN
	41800302	BRAKE LINE, front, master cylinder to HCU	FXSB
	41800319	BRAKE LINE, front, master cylinder to HCU	FLSTF, FLSTFB, FLSTFBS
	41800320	BRAKE LINE, front, master cylinder to HCU	FLS, FLSS
13	41800305	BRAKE LINE, front, caliper to HCU	FLSTF, FLSTN, FLSTFB, FLS, FLSTC, FLSS, FLSTFBS
	41800307	BRAKE LINE, front, caliper to HCU	FXSB
14	46663-11	HOLDER, front, HCU	
15	46664-11	CAP, front, HCU holder	
16	46668-11	BRACKET, front, HCU	
17	70631-08	CLIP, conduit *(3)*	FXSB
17	70631-08	CLIP, conduit *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
18	11600001	BOLT, BANJO, brake line *(2)*	
19	41100037	ABS MODULE (HCU)	

BRAKE CONTROL, REAR

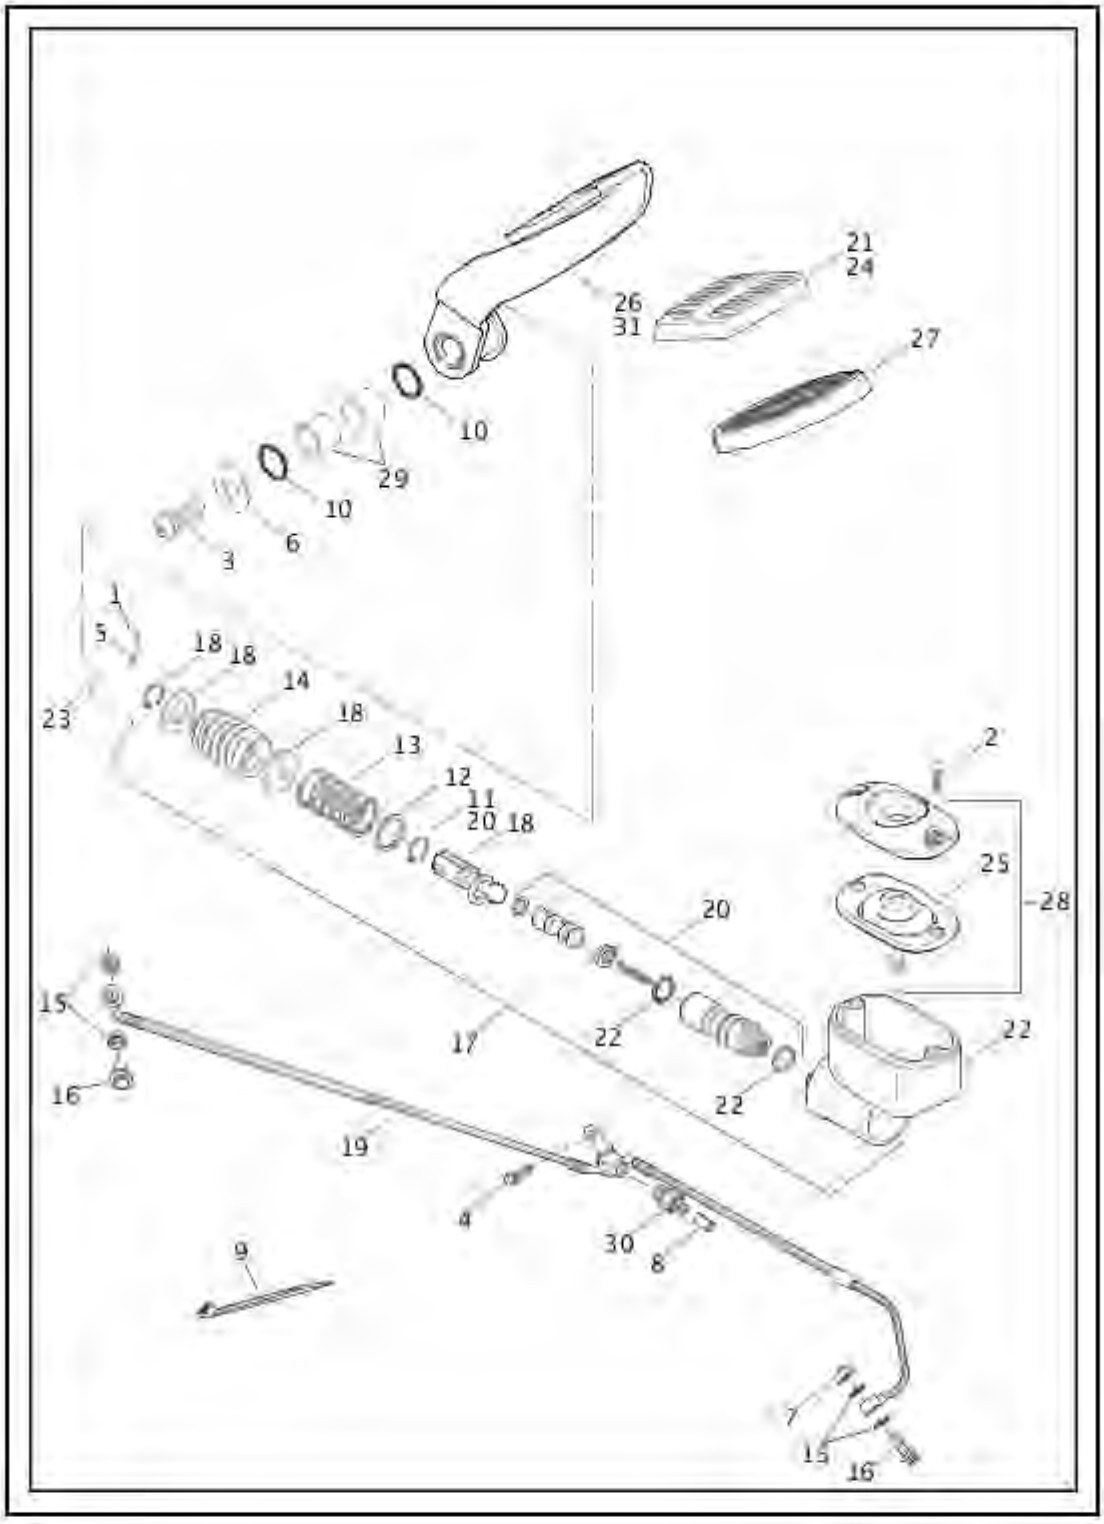

Index No.	Part No.	Description	Model(s)
1	515	COTTER PIN	
2	2579A	SCREW *(2)*	
3	3655A	SCREW	
4	4168A	SCREW	
5	6099	WASHER	
6	6237	WASHER	

7	8405	JAMNUT	
8	9907	WIRE TERMINAL *(2)*	
9	10039	CABLE STRAP	
10	11364	O-RING *(2)*	
11	11688	RETAINING RING	
12	40918-87	RETAINING RING	
13	40920-87	SPRING, brake return	
14	40922-87A	BOOT, pushrod	
15	41731-01	GASKET *(4)*	
16	41747-82A	BOLT, BANJO *(2)*	
17	41767-05E	MASTER CYLINDER ASSEMBLY	
18	41957-97A	PUSHROD KIT	
19	42261-11A	BRAKE LINE ASSEMBLY, rear, NON-ABS	FLS
	43373-11A	BRAKE LINE ASSEMBLY, rear, ABS, HCU to master cylinder	
	43384-11A	BRAKE LINE ASSEMBLY, rear, ABS, HCU to caliper (not shown)	
20	42382-87E	REBUILD KIT, master cylinder	
21	42416-06	PAD, brake lever	FLSTF, FLSTN, FLSTFB, FLSTFBS
22	42454-99A	RESERVOIR, master cylinder, with O-rings	
23	42460-80B	CLEVIS PIN	
24	42532-06	PAD, brake lever	FXSB
25	42568-05A	GASKET, master cylinder reservoir	
26	42597-00A	LEVER, foot brake, includes bushings, with 57217-02A (chrome)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
27	43992-08	PAD, brake lever	FLSTC, FLS, FLSS
28	46457-05B	COVER KIT, reservoir, with 42568-05A	
29	57217-02A	BUSHING, brake lever *(2)*	
30	72023-	STOP LAMP SWITCH, rear, with 9907	

	51E		
31	50600095	LEVER, foot brake, with 57217-02A (chrome)	FXSB

BRAKE LINE AND MODULE, REAR, ABS

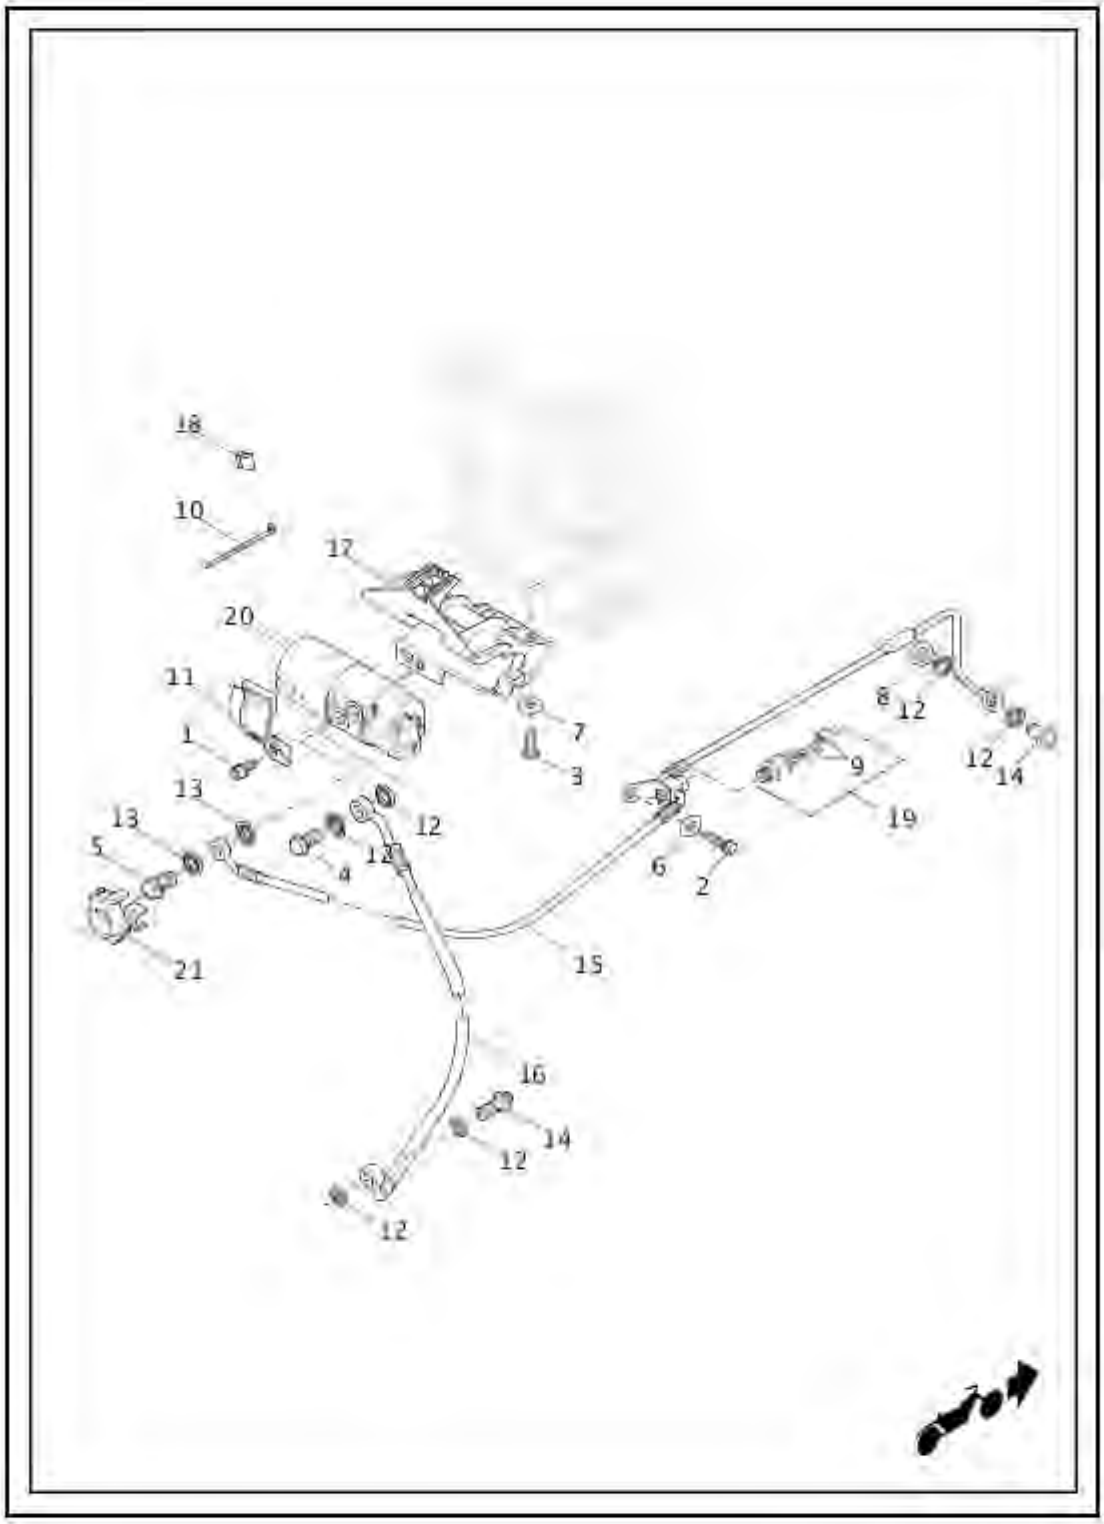

Index No.	Part No.	Description	Model(s)
1	3061	SCREW	
2	4168A	SCREW	

3	4751	SCREW *(2)*	
4	5001	BOLT, BANJO, brake line	
5	5002	BOLT, BANJO, brake line	
6	6532	WASHER *(2)*	
7	6703	WASHER *(2)*	
8	8405	JAMNUT	
9	9907	TERMINAL, 14-16 AWG	
10	10006	CABLE STRAP	
11	10851	CLAMP, rear HCU *(2)*	
12	41731-01	GASKET *(6)*	
13	41733-88	GASKET *(2)*	
14	41747-82A	BOLT, BANJO, brake line *(2)*	
15	43373-11A	BRAKE LINE ASSEMBLY, rear, ABS, HCU to master cylinder	
16	43384-11A	BRAKE LINE ASSEMBLY, rear, ABS, HCU to caliper	
17	46677-11	BRACKET, rear HCU	
18	70635-08	CLIP, conduit *(2)*	
19	72023-51E	STOP LAMP SWITCH, rear, with 9907	
20	41100037	ABS MODULE (HCU)	
21	41600017	BRAKE LINE GUIDE, anti-rotation	

BRAKE CALIPER, FRONT

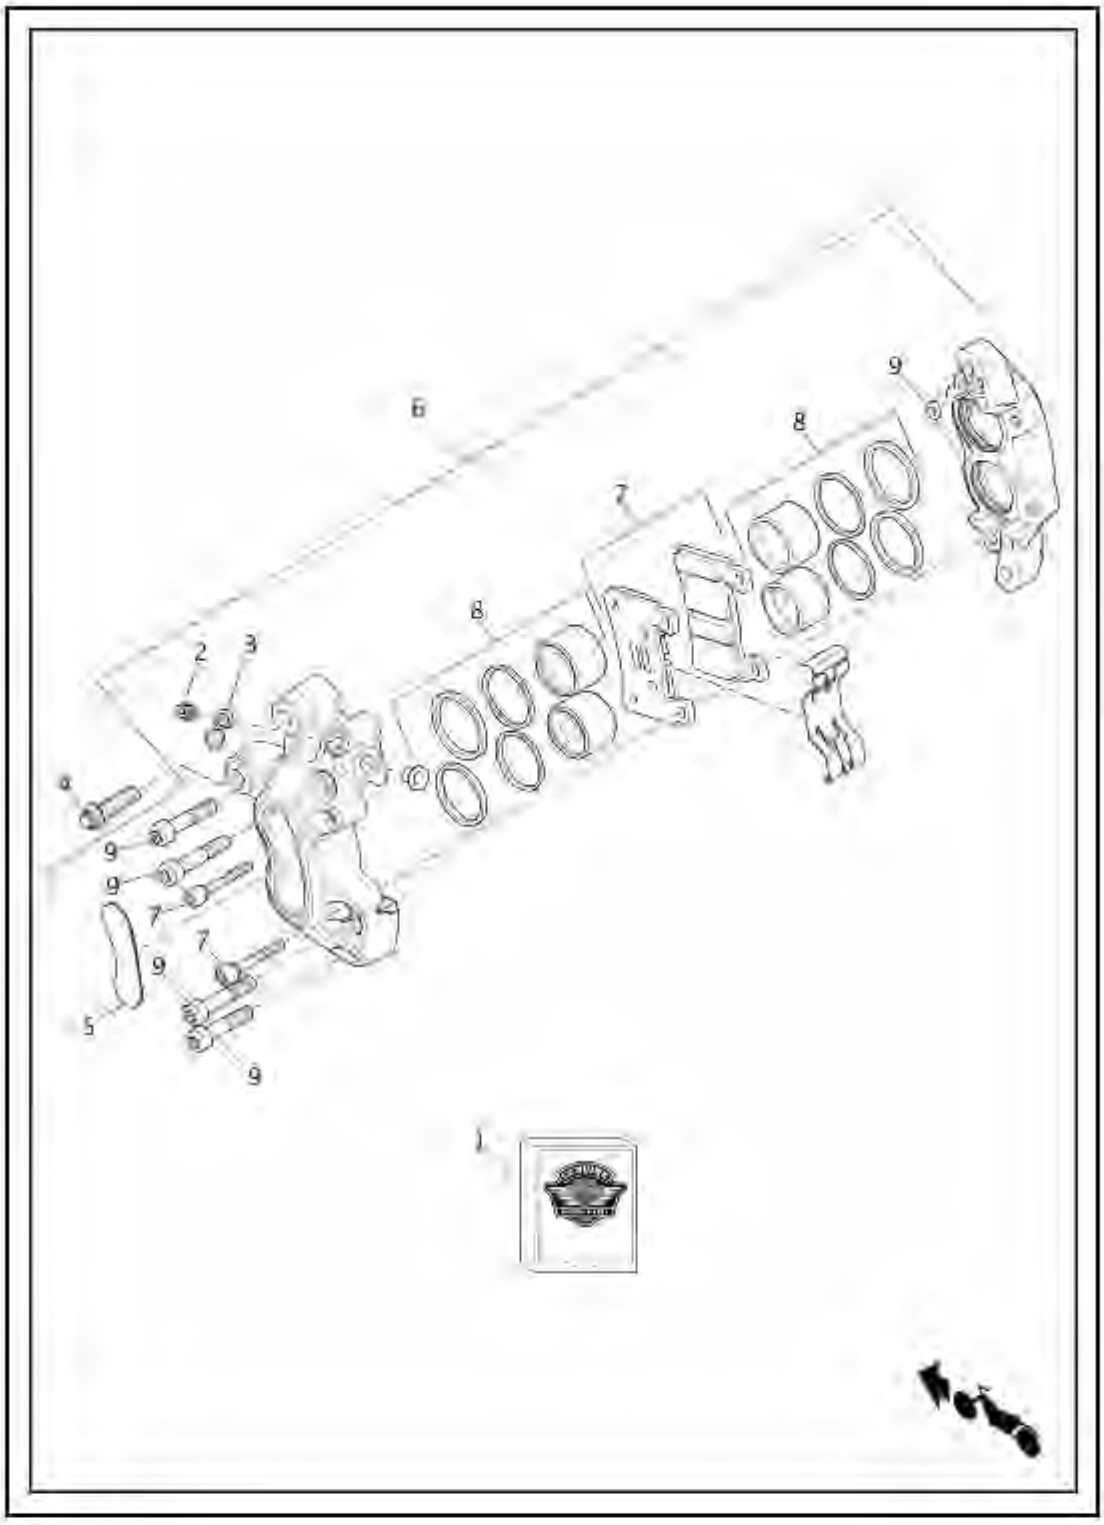

Index No.	Part No.	Description	Model(s)
1	42820-04	GREASE	
2	42827-04	SCREW, bleeder	
3	42828-04	CAP, bleeder	
4	44160-00	BOLT, caliper mounting (lower) *(2)*	
5	14100606	DECAL	
6	41300095	CALIPER ASSEMBLY, (left)	
7	41300102	PAD KIT	

8	41300103	PISTON KIT, with 42820-04	
9	41300104	BOLT KIT, brake caliper	

BRAKE CALIPER, REAR

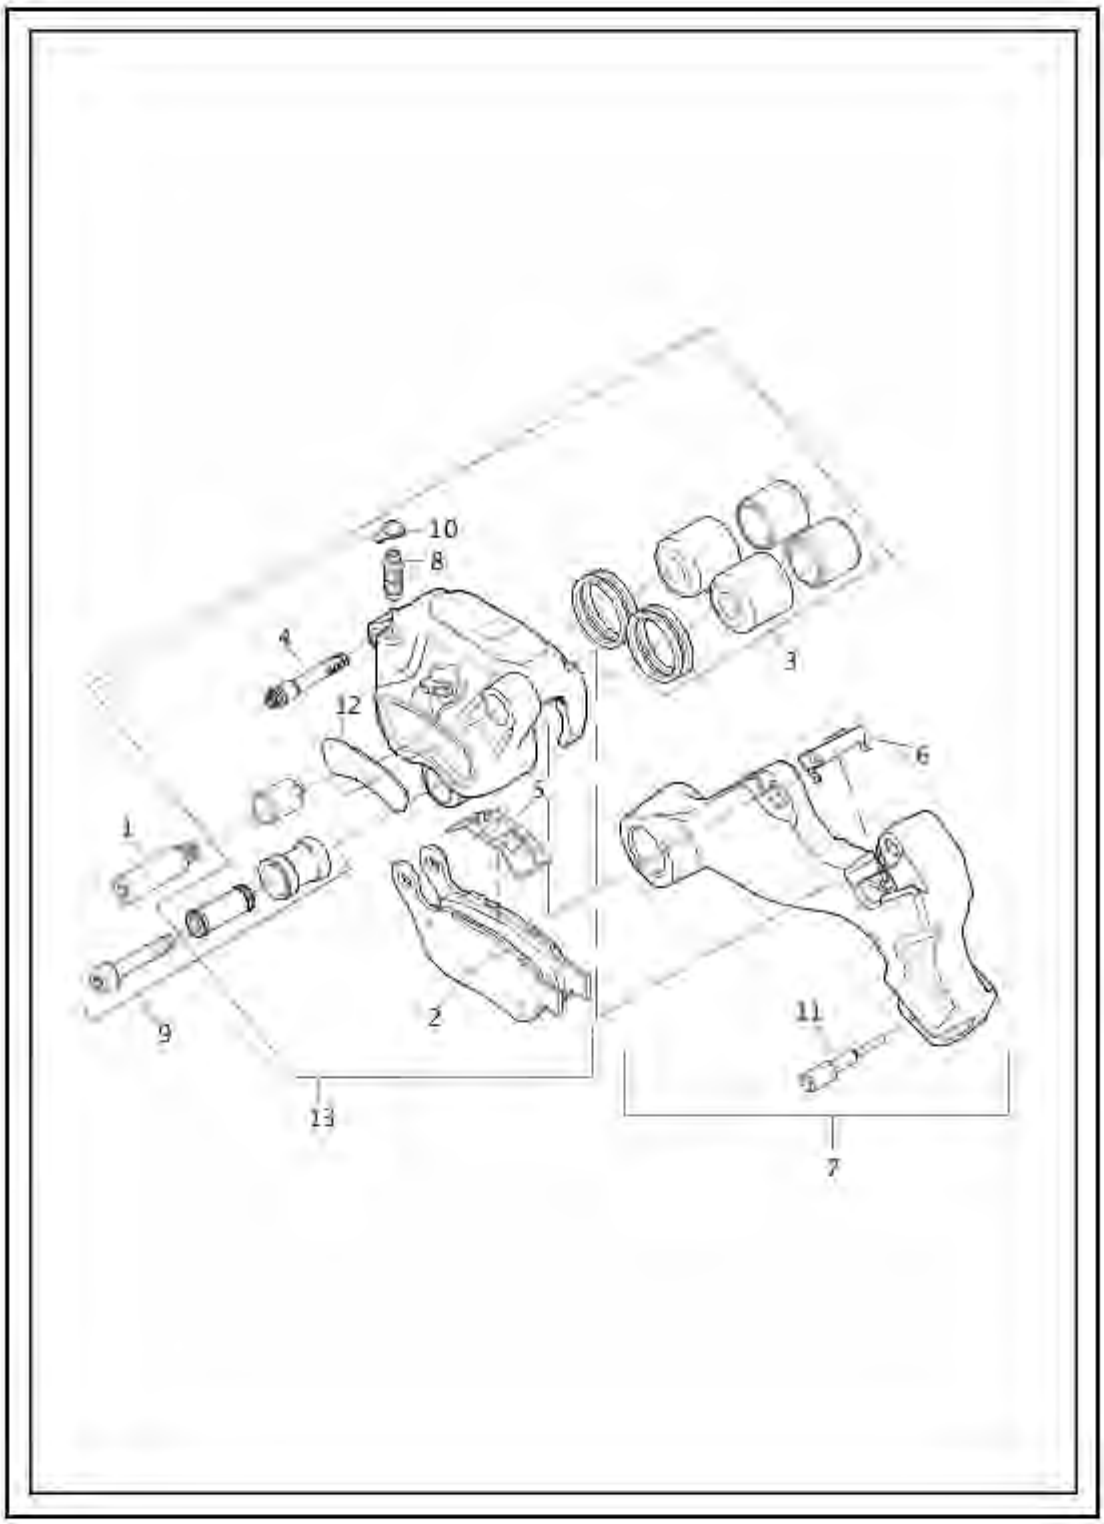

Index No.	Part No.	Description	Model(s)
1	42143-08B	BOLT, (lower)	
2	42298-08	PAD KIT	

3	42344-08A	PISTON KIT	
4	42345-08	PAD PIN KIT	
5	42347-08	BRAKE SPRING KIT	
6	42348-08	TORQUE CLIP KIT	
7	42895-08A	MOUNTING BRACKET, rear	
8	44048-83A	SCREW, bleeder	
9	44066-08A	CALIPER PIN KIT	
10	44147-87A	CAP, bleeder screw	
11	44351-00	BUMPER	
12	14100606	DECAL	
13	41300097	CALIPER ASSEMBLY, rear brake	

WHEELS, FRONT (1 OF 2)

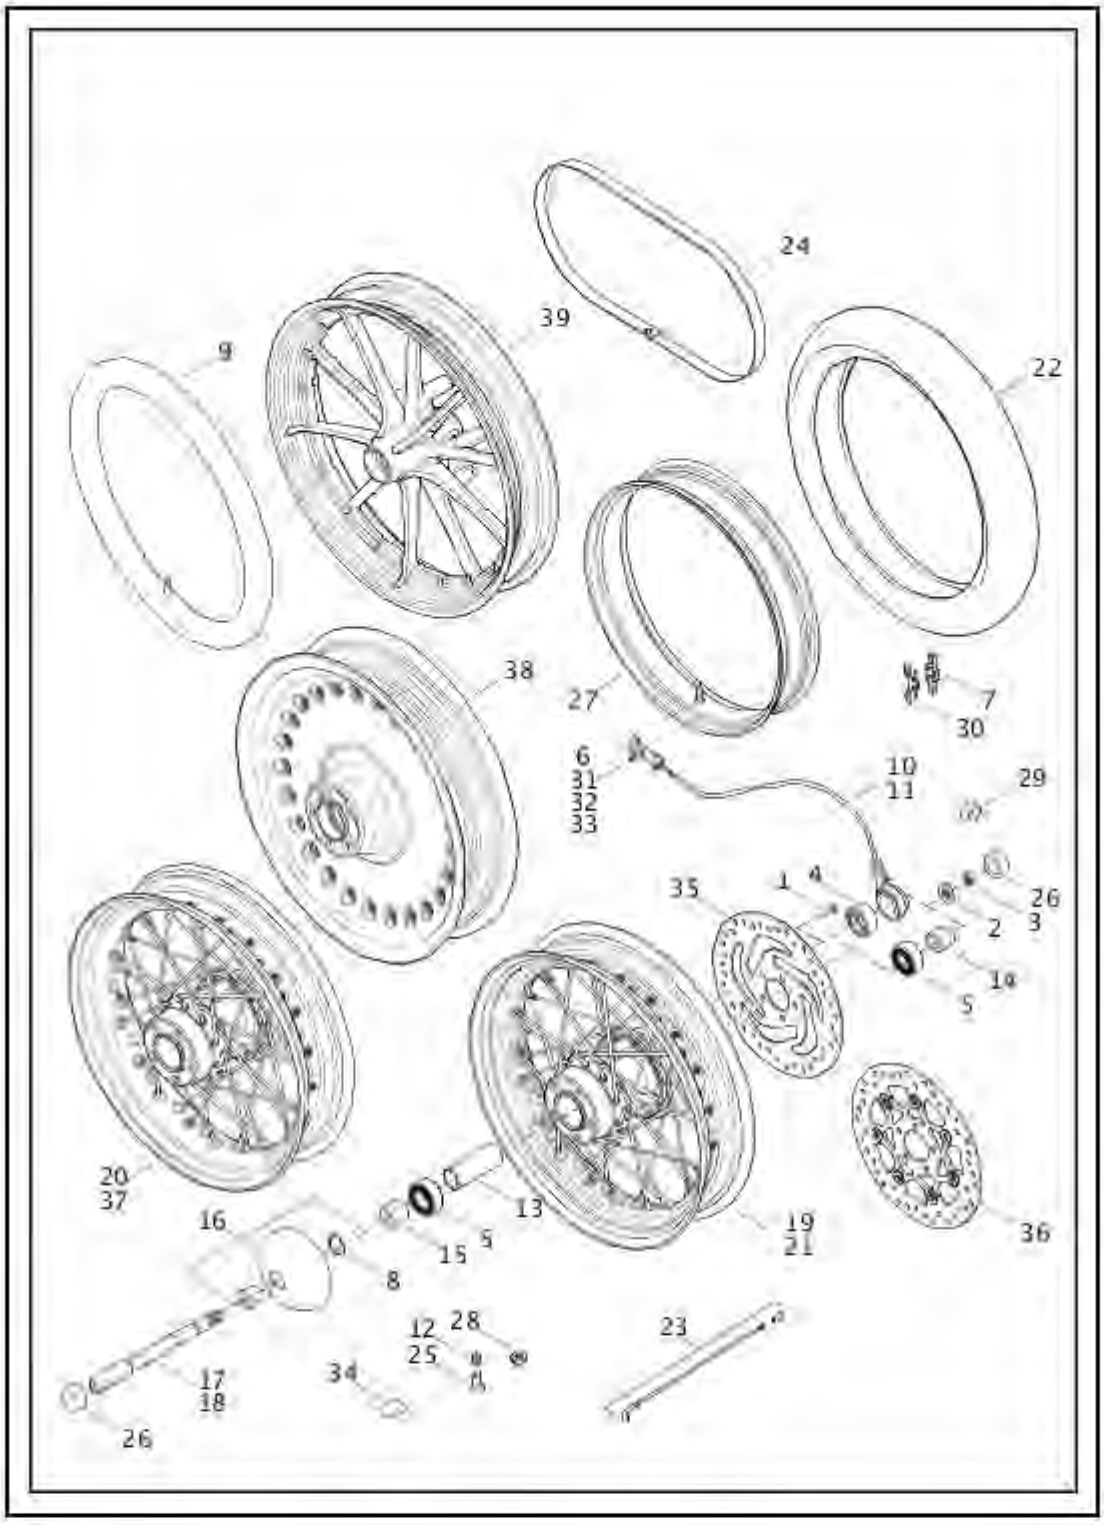

Index No.	Part No.	Description	Model(s)
1	3655A	SCREW *(5)*	
2	6594	WASHER	
3	7813A	NUT	
4	9252	BALL BEARING, with encoder, ABS	
5	9276A	BALL BEARING, 25 mm, NON-ABS *(2)*	FLS
5	9276A	BALL BEARING, 25 mm, ABS	

6	10147	CLIP, connector	
7	10850	CLIP, wheel speed sensor, ABS	
8	11180	RETAINING RING	FLSTC, FLSTN
9	40558-82	INNER TUBE, 16 in, offset valve	FLSTC, FLSTN, FLS, FLSS
10	40716-11	SENSOR, wheel speed, ABS	FXSB
11	40982-11	SENSOR, wheel speed, ABS	FLSTC, FLSTN, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
12	41123-79	VALVE CAP	
13	41349-07	SLEEVE, spacer	
	43300200	SLEEVE, spacer	FXSB
14	41502-07	SPACER, left side of wheel, NON-ABS	FLS
15	41504-07	SPACER, right side of wheel	FXSB
	41695-07	SPACER, right side of wheel	FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
16	41510-07	HUB CAP ASSEMBLY, front (chrome)	FLSTC, FLSTN
17	41545-07A	AXLE, front	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
18	41547-07A	AXLE, front	FXSB
19	41559-08	WHEEL ASSEMBLY, front, 16 in laced, without bearings and sleeve	FLSTC, FLSTN
	55107-12	WHEEL ASSEMBLY, front, 16 in laced, without bearings and sleeve (black)	FLS, FLSS
20	41992-11	RIM, 16 in (used on 43300041 wheel assemblies) (chrome)	FLSTC, FLSTN
21	43017-07	RIM, 16 in (black)	FLS, FLSS
	43085-97	RIM, 16 in (chrome)	FLSTC, FLSTN

WHEELS, FRONT (2 OF 2)

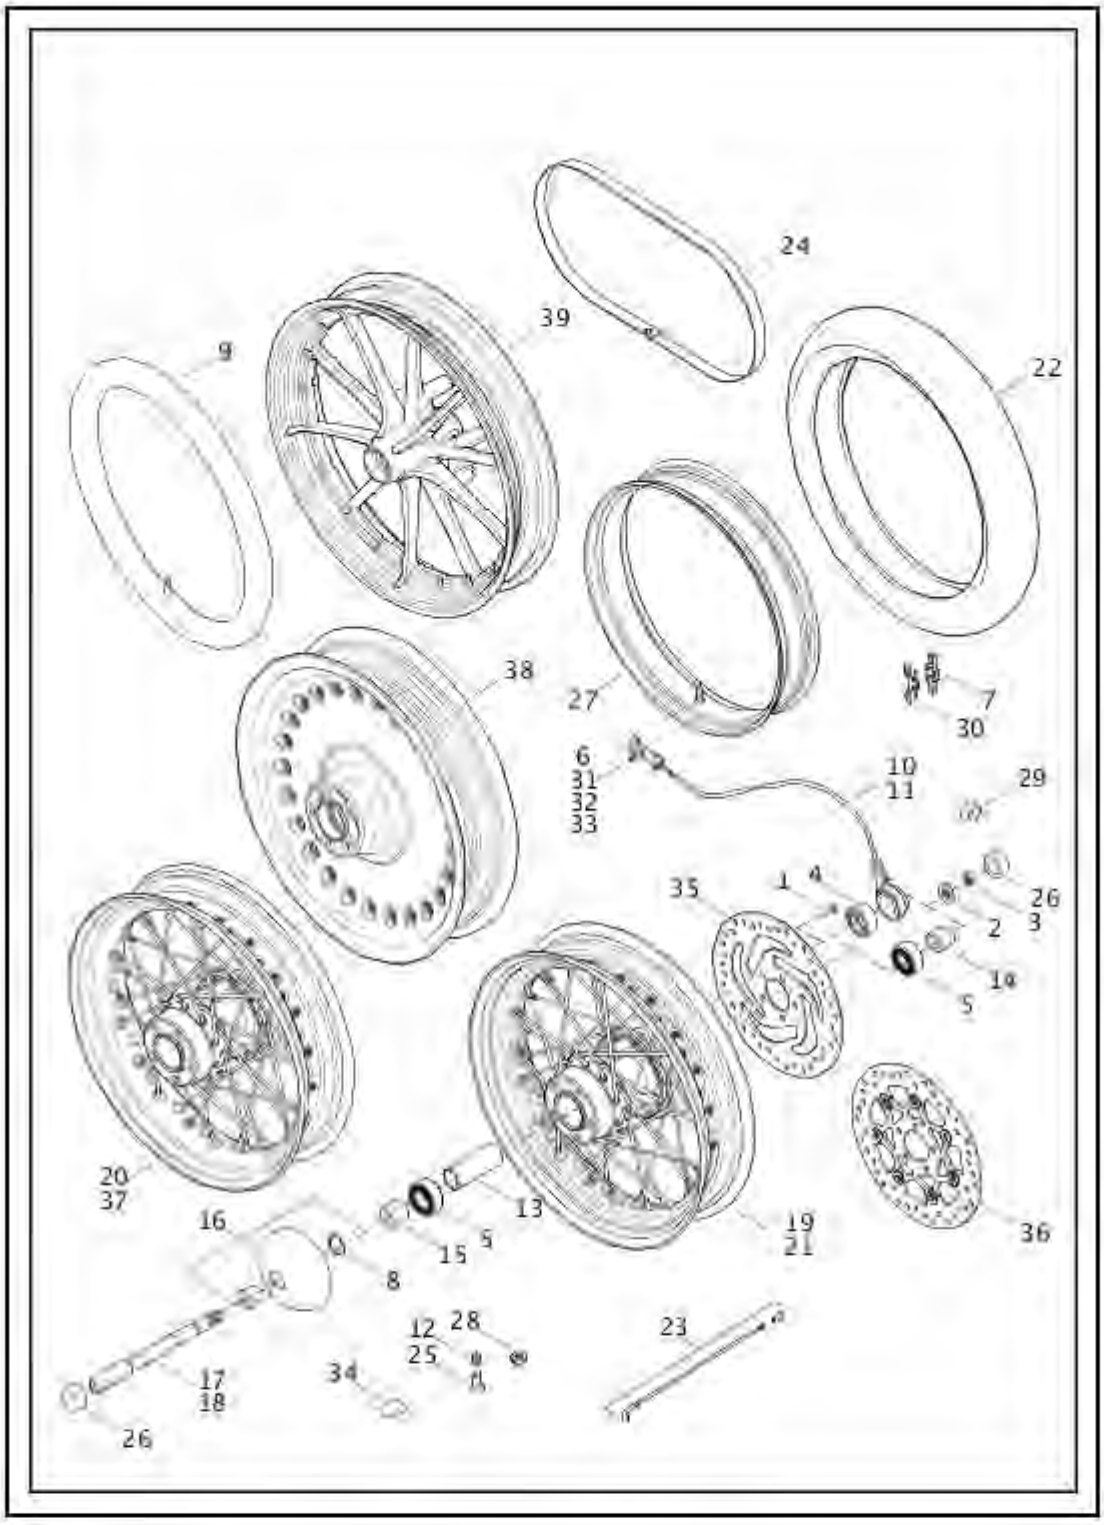

Index No.	Part No.	Description	Model(s)
22	43022-91A	TIRE, 16 in	FLS, FLSS
	43118-92A	TIRE, 16 in, wide white wall	FLSTC, FLSTN
	41474-06B	TIRE, 17 in	FLSTF, FLSTFB, FLSS
	43100008	TIRE, 21 in	FXSB
23	43052-	SPOKE AND NIPPLE SET, 16 in (set of 40) (used on 43300041	FLSTC, FLSTN

	05A	wheel assembly)	
	43241-05	SPOKE AND NIPPLE SET, 16 in (set of 40)	FLSTN, FLSTC, FLS, FLSS
24	43147-40	RIM FLAP, 16 in laced	FLSTN, FLSTC, FLS, FLSS
	43164-05	RIM FLAP, 16 in profile laced, (used on 43300041 wheel assembly)	FLSTN, FLSTC
25	43157-83A	VALVE STEM ASSEMBLY	FLSTF, FLSTFB, FLSTFBS
	40999-87	VALVE STEM	FXSB
26	43583-09	COVER, axle nut (black) *(2)*	FLSS, FLSTFBS
27	44752-11	RIM SEAL KIT, 16 X 3 inch, with 41123-79, 43164-05 and 54321-85 (used on 43300041 wheel assembly)	FLSTC, FLSTN
28	54321-85	NUT, valve stem	
29	70631-08	CLIP, conduit	FXSB
30	70684-11A	BRACKET, wheel speed sensor, ABS	
31	72607-08	HOUSING, two-way pin	
32	72608-08	TERMINAL, pin, 16-20 AWG *(2)*	
33	72639-10	SECONDARY LOCK, two-way	
34	95594-84B	WEIGHT, 5 g (black)	FLS, FXSB, FLSS
	95595-84B	WEIGHT, 5 g (silver)	FLSTC, FLSTF, FLSTN, FLSTFB, FLSTFBS
35	41500022	BRAKE DISC, front	FLSTC, FLSTN, FLS
36	41500088	BRAKE DISC, front	FXSB, FLSS, FLSTFBS
	41500068	BRAKE DISC, front	FLSTF, FLSTFB
37	43300041	WHEEL ASSEMBLY, front, 16 in profile laced, without bearings and sleeve	FLSTC, FLSTN
38	43300171	WHEEL ASSEMBLY, 17 in, without bearings and sleeve (black)	FLSTFB, FLSTFBS
	43590-09	WHEEL ASSEMBLY, 17 in, without bearings and sleeve (chrome)	FLSTF
39	43300210	WHEEL ASSEMBLY, 21 in without bearings and sleeve	FXSB

WHEELS, REAR (1 OF 2)

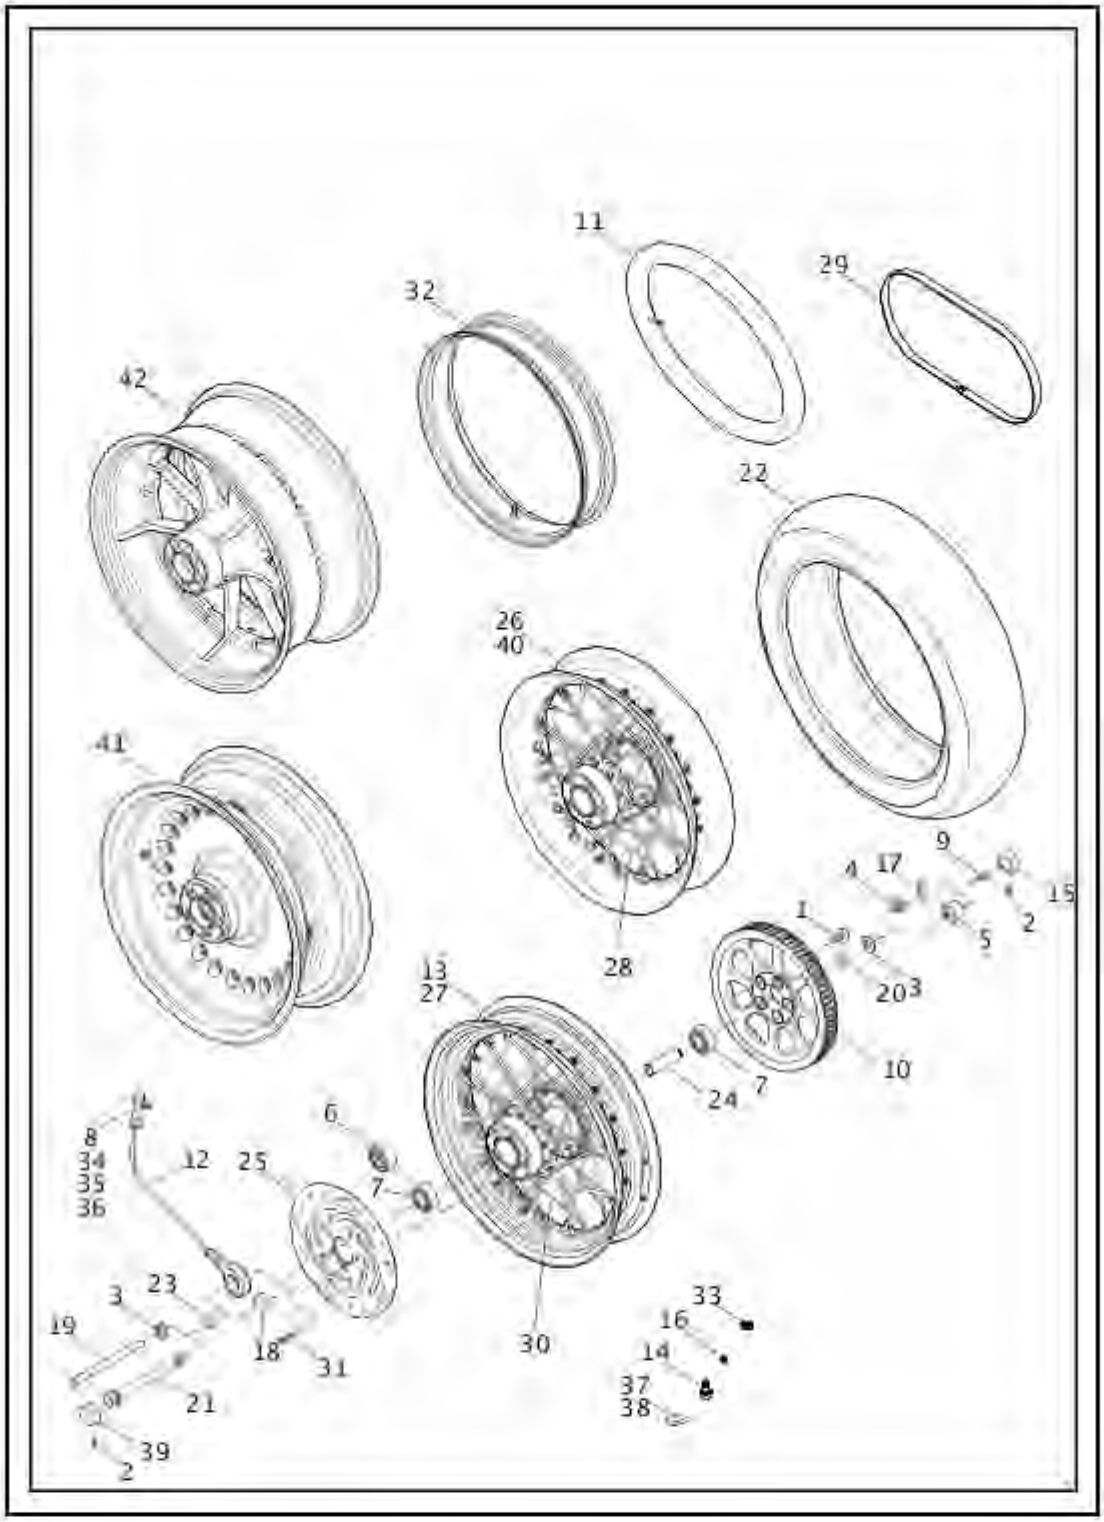

Index No.	Part No.	Description	Model(s)
1	3109	SCREW, with washer *(5)*	
2	4636	SCREW *(2)*	FLSS, FLSTFBS
3	6551	WASHER *(2)*	FXSB
3	6551	WASHER	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
4	8020	NUT	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS

5	8184	NUT	FXSB
6	9252	BALL BEARING, with encoder, ABS	
7	9276A	BALL BEARING, 25 mm, NON-ABS *(2)*	FLS
7	9276A	BALL BEARING, 25 mm, ABS	
8	10147	CLIP, connector, ABS	
9	10326A	PLUNGE CLIP, (HDI)	FXSB, FLSTF, FLSTN, FLSTFB, FLS
9	10326A	PLUNGE CLIP	FXSB
10	40325-07	SPROCKET, rear, 66 T (black)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
11	40558-82	INNER TUBE, 16 in laced, offset valve	FLSTC, FLSTN, FLS, FLSS
12	40615-08	SENSOR, wheel speed, ABS, with 10147, 72607-08, 72608-08 and 72639-10	
13	40700-08A	WHEEL ASSEMBLY, rear, 16 in, laced, without bearings and sleeve (chrome)	FLSTC, FLSTN
	55109-12	WHEEL ASSEMBLY, rear, 16 in, laced, without bearings and sleeve (black)	FLS
14	40999-87	VALVE STEM	FXSB
	43157-83A	VALVE STEM ASSEMBLY	FLSTF, FLSTFB, FLSTFBS
15	41063-09	COVER, nut, left (black)	FLSS, FLSTFBS
16	41123-79	VALVE CAP	
17	41229-08	RETAINING PIN	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
18	41242-08	SPACER, wheel, NON-ABS (right)	FLS
19	41347-08	AXLE ASSEMBLY	FXSB
20	41359-08	SPACER, rear axle (left)	
21	41641-08	AXLE ASSEMBLY	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
22	41688-08A	TIRE, 18 in	FXSB
	43242-06B	TIRE, 17 in	FLSTF, FLSTFB, FLSTFBS
	43264-02	TIRE, 16 in	FLSTC
	43353-03	TIRE, 16 in, wide white wall	FLSTC, FLSTN
	43200001	TIRE, 16 in	FLS, FLSS
23	41694-08	SPACER, rear wheel adjustment	

WHEELS, REAR (2 OF 2)

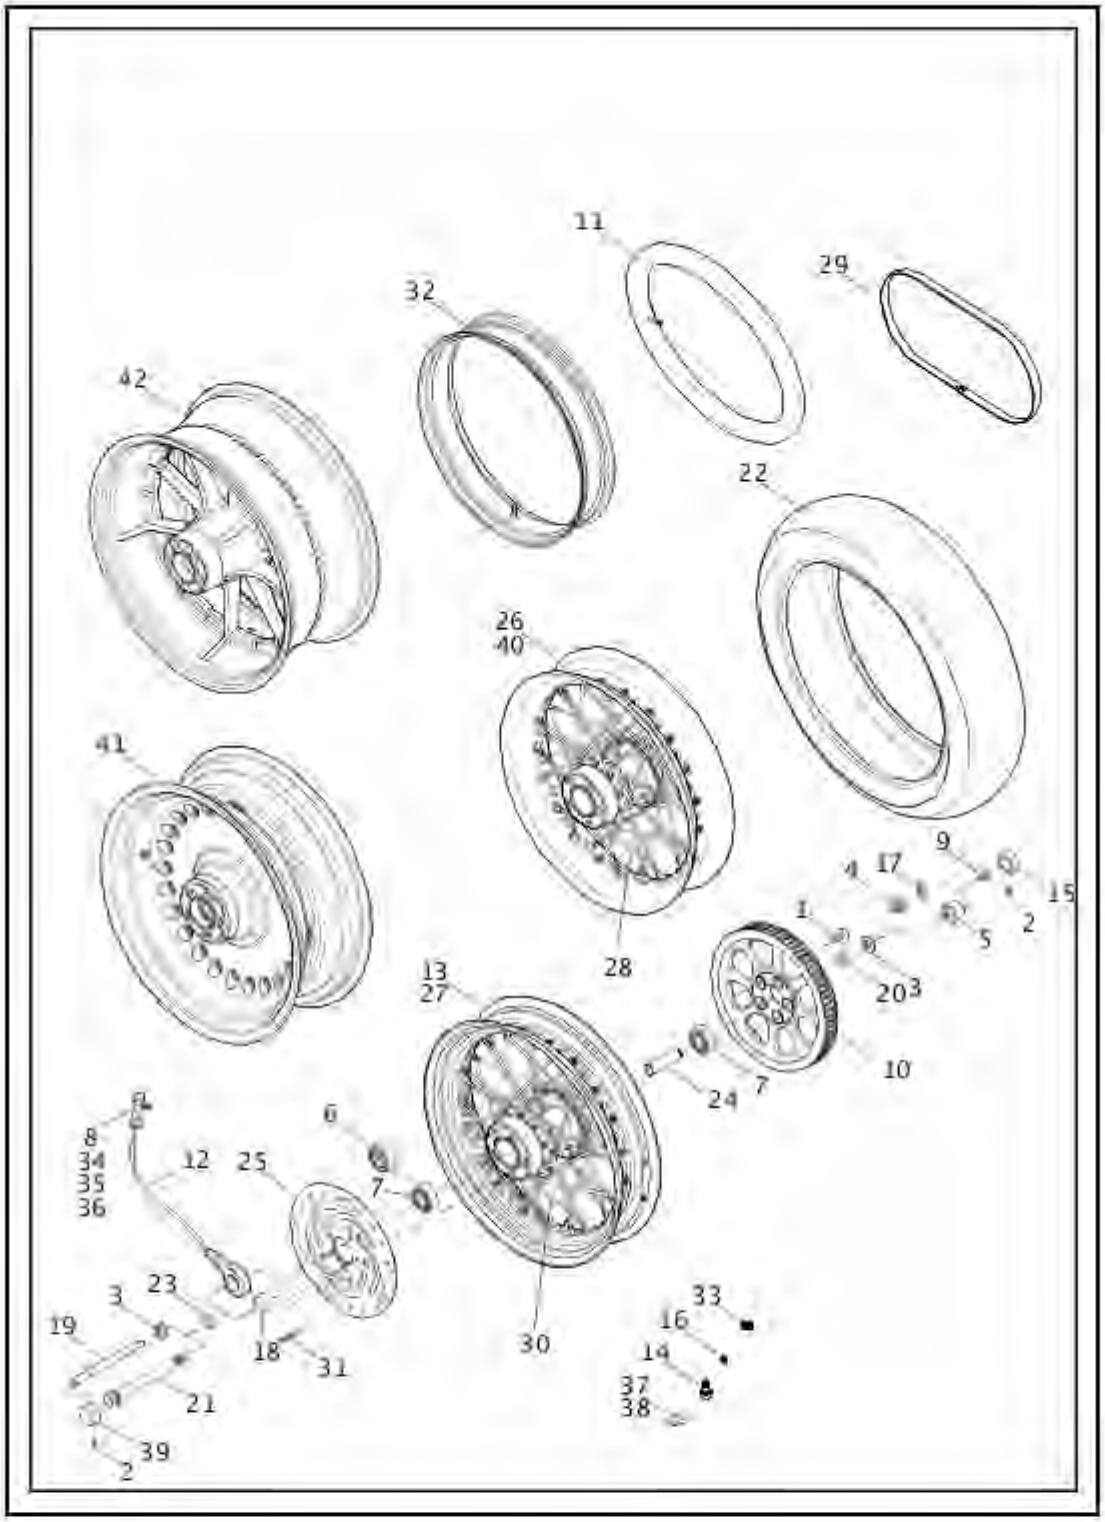

Index No.	Part No.	Description	Model(s)
24	41696-08	SLEEVE, spacer	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
	41358-08	SLEEVE, spacer	FXSB
25	41797-00	BRAKE DISC, rear	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	41500089	BRAKE DISC, rear	FLSS, FLSTFBS, FXSB

26	41992-11	RIM, 16 in (used on 40900050A wheel assembly) (chrome)	FLSTC, FLSTN
27	43017-07	RIM, 16 in (black)	FLS, FLSS
	43085-97	RIM, 16 in (used on 40700-08A wheel assembly) (chrome)	FLSTC, FLSTN
28	43052-05A	SPOKE AND NIPPLE SET, 16/17 in rim (set of 40) (used with 40900050A)	FLSTC, FLSTN
29	43147-40	RIM FLAP, 16 in laced	FLSTC, FLSTN, FLS, FLSS
	43164-05	RIM FLAP, 16 in profile laced	FLSTC, FLSTN
30	43241-05	SPOKE AND NIPPLE SET, 16 in rim (set of 40) (used with 40700-08A and 55109-12)	FLSTC, FLSTN, FLS
31	43567-92	SCREW *(5)*	
32	44752-11	RIM SEAL KIT, 16 X 3 inch, with 41123-79, 43164-05 and 54321-85 (used on 40900050A wheel assembly)	FLSTC, FLSTN
33	54321-85	NUT, valve stem	
34	72607-08	HOUSING, two-way pin	
35	72608-08	TERMINAL, pin, 16-20 AWG *(2)*	
36	72639-10	SECONDARY LOCK, two-way	
37	95594-84B	WEIGHT, 5 g (black)	FLS, FXSB
38	95595-84B	WEIGHT, 5 g (silver)	FLSTC, FLSTF, FLSTN, FLSTFB, FLSTFBS
39	12600177	COVER, nut, right (black)	FLSS, FLSTFBS
40	40900050A	WHEEL ASSEMBLY, rear, 16 in, profile laced, without bearings and sleeve, with rim seal kit 44752-11 (chrome)	FLSTC, FLSTN
41	40900182	WHEEL ASSEMBLY, rear, 17 in disc, without bearings and sleeve (black)	FLSTFBS, FLSTFB
	43596-09	WHEEL ASSEMBLY, rear, 17 in disc, without bearings and sleeve (chrome)	FLSTF
42	40900206	WHEEL ASSEMBLY, rear, 18 in, without bearings and sleeve (black)	FXSB

FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN

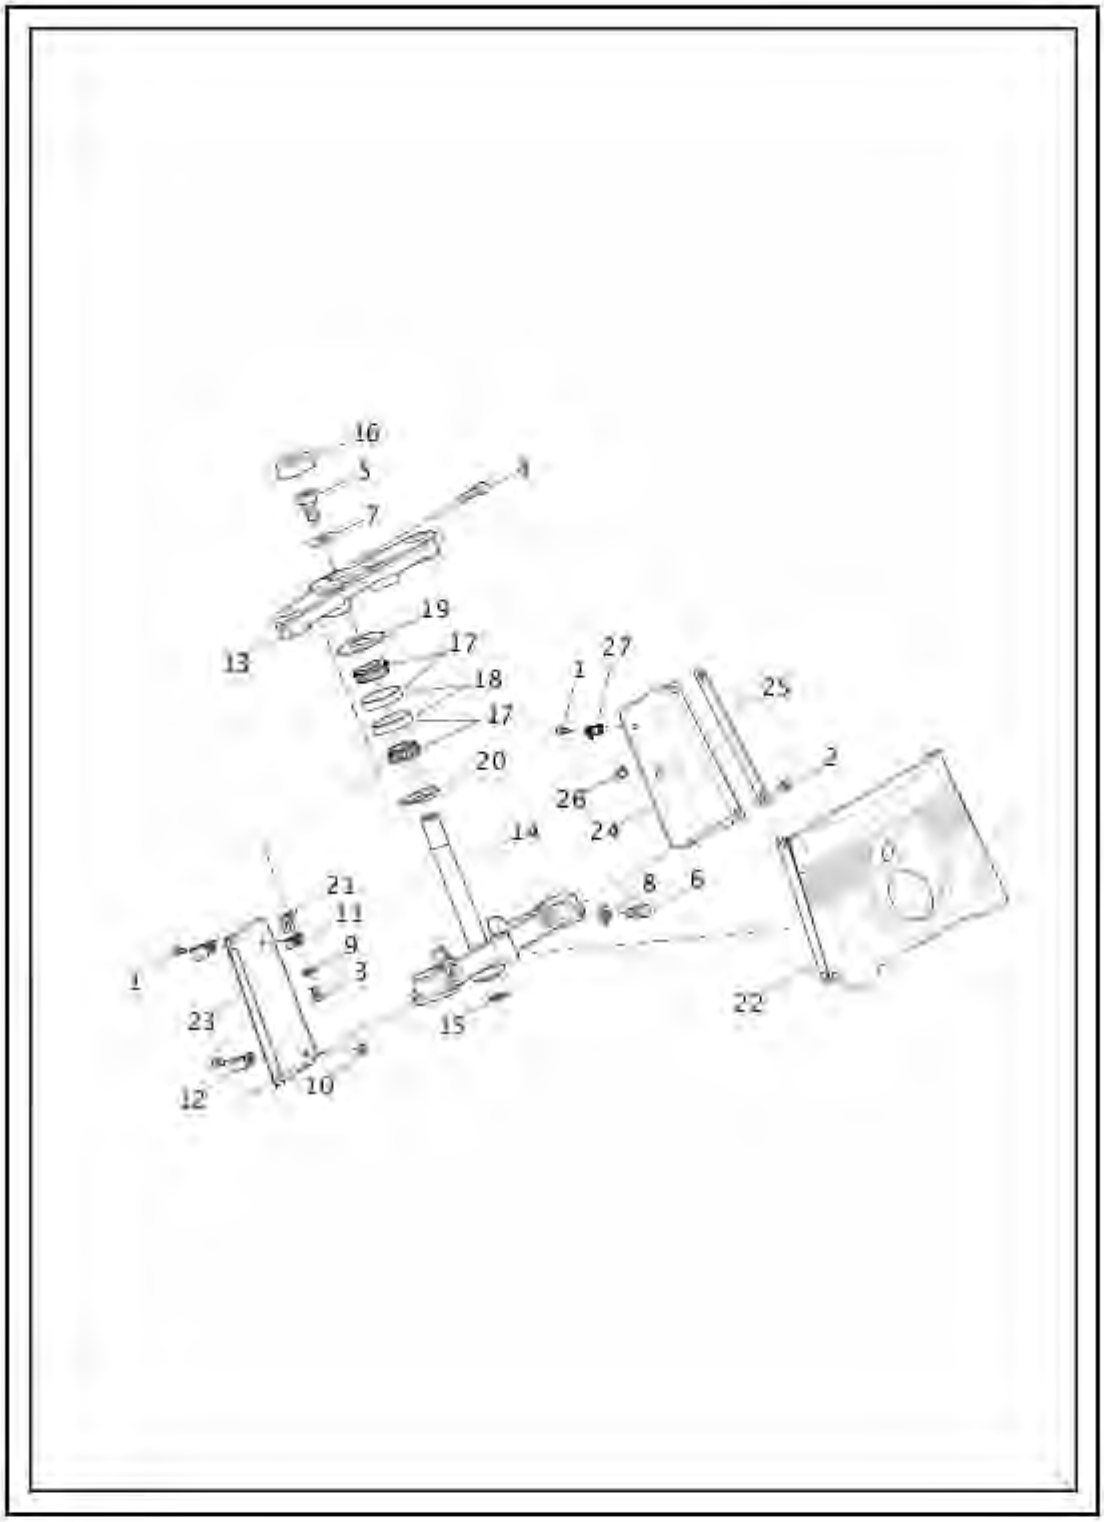

Index No.	Part No.	Description	Model(s)
1	941	SCREW *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
2	3538	SCREW *(4)*	FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
3	3953W	BOLT *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
4	4350A	SCREW	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
5	4453	BOLT	FLSTC, FLSTF, FLSTN, FLSTFB, FLS,

			FLSS, FLSTFBS
6	4945	SCREW *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
7	6655	WASHER	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
8	7039	LOCKWASHER *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
9	7041	LOCKWASHER *(2)*	FLSS, FLSTFBS
	7062	LOCKWASHER *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
10	7686	LOCKNUT *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
11	8108	SPEEDNUT *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
12	10053	CLAMP *(3)*	FLSTC, FLSTF, FLSTN, FLSTFB
12	10800096	CLAMP *(2)*	FLS
13	45456-86B	BRACKET, (upper)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	45900150	BRACKET, (upper)	FLSS, FLSTFBS
14	45605-00A	STEM AND BRACKET ASSEMBLY, including lower bearing cone	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
15	45611-86	RETAINING RING, fork stem	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
16	45670-80A	CAP, fork stem	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	45800081	CAP, fork stem	FLSS, FLSTFBS
17	48300-60	ROLLER BEARING, with cup *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
18	48315-60	BEARING CUP *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
19	48361-80	DUST SHIELD, bearing (upper)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
20	48365-48A	DUST SHIELD, bearing (lower)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
21	50991-86	BRACKET, front panel *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
22	67605-05	FRONT PANEL, (chrome)	FLSTN
	67830-09	FRONT PANEL, (chrome)	FLSTC
	67982-07	FRONT PANEL, (chrome)	FLSTF
	67987-10BHP	FRONT PANEL, (gloss black)	FLSTFB, FLSTFBS

	45900032	FRONT PANEL, (gloss black)	FLS, FLSS
23	67814-86	BACK PANEL, right rear (stainless steel)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	67988-10BHP	BACK PANEL, right rear (gloss black)	FLSTFB, FLS, FLSS, FLSTFBS
24	67821-87	BACK PANEL, left rear with switch hole (stainless steel)	FLSTC, FLSTF, FLSTN
	67993-10BHP	BACK PANEL, left rear with switch hole (gloss black)	FLSTFB, FLS, FLSS, FLSTFBS
25	67891-99	TRIM STRIP KIT, front panel	FLSTF, FLS
	68055-10BHP	TRIM STRIP, front panel *(2)*	FLSTFB, FLSS, FLSTFBS
26	90357-89	PLUG	FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
27	10800101	CLAMP	FLSS, FLSTFBS

FORK BRACKETS, FRONT - FXSB

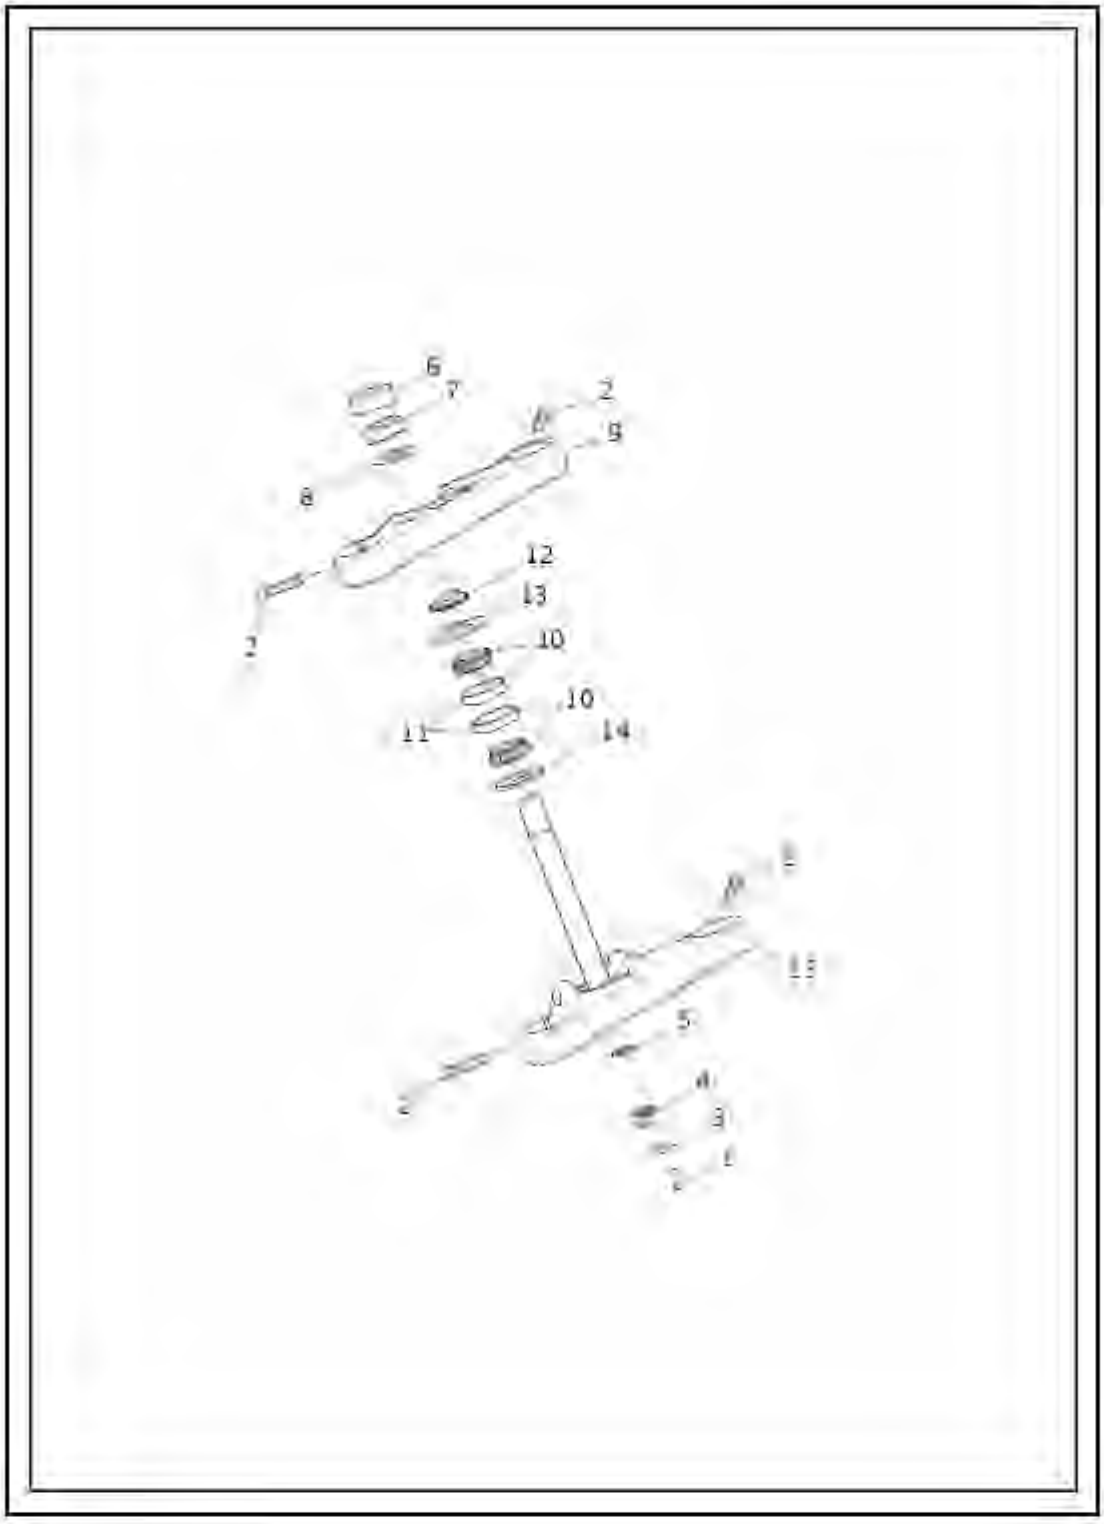

Index No.	Part No.	Description	Model(s)
1	3594	SCREW	FXSB
2	4311	SCREW *(4)*	FXSB
3	6703	WASHER	FXSB
4	10053	CLAMP	FXSB
5	45611-86	RETAINING RING, fork stem	FXSB
6	45670-80A	CAP, fork stem	FXSB
7	45718-60	NUT, fork stem	FXSB

8	45727-08	WASHER	FXSB
9	46700-08	BRACKET, (upper)	FXSB
10	48300-60	ROLLER BEARING, with cup *(2)*	FXSB
11	48315-60	BEARING CUP *(2)*	FXSB
12	48324-00A	NUT	FXSB
13	48361-80	DUST SHIELD, bearing (upper)	FXSB
14	48365-48A	DUST SHIELD, bearing (lower)	FXSB
15	45900073	BRACKET ASSEMBLY, with 45611-86 and 48365-48A	FXSB

FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)

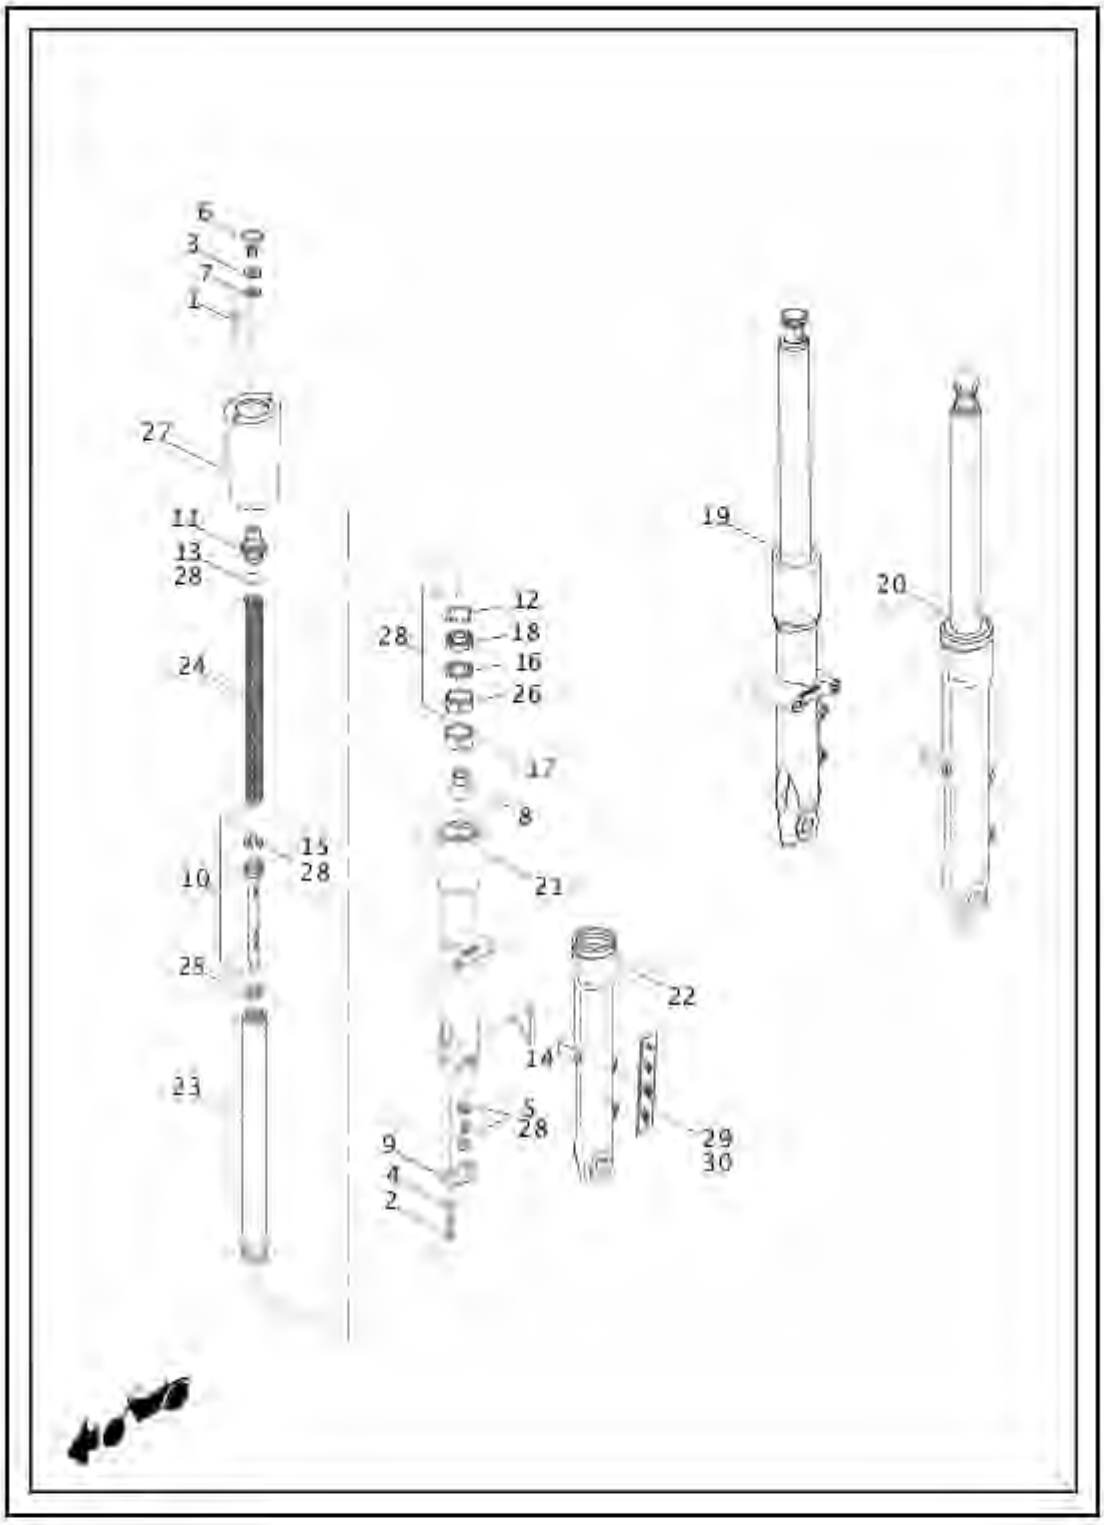

Index No.	Part No.	Description	Model(s)
1	3537	SCREW *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
2	4042	SCREW *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
3	5710	WASHER *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
4	7062	LOCKWASHER *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS

5	45405-75A	SCREW, with washer	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
6	45419-80	CAP, slider tube *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
7	45733-48	OIL SEAL, fork tube plug *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
8	45803-97	OIL LOCK STOP *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
9	45835-00	AXLE CAP, right slider	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	46550-03	AXLE CAP, right slider (black)	FLSS, FLSTFBS
10	45837-07	DAMPER TUBE, with 45859-77A *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
11	45838-77	PLUG, fork tube *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
12	45842-77A	RETAINING RING	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
13	45845-77	O-RING	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
14	45858-77	DRAIN SCREW, with washer and slider *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
15	45859-77A	DAMPER TUBE RING	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS

FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)

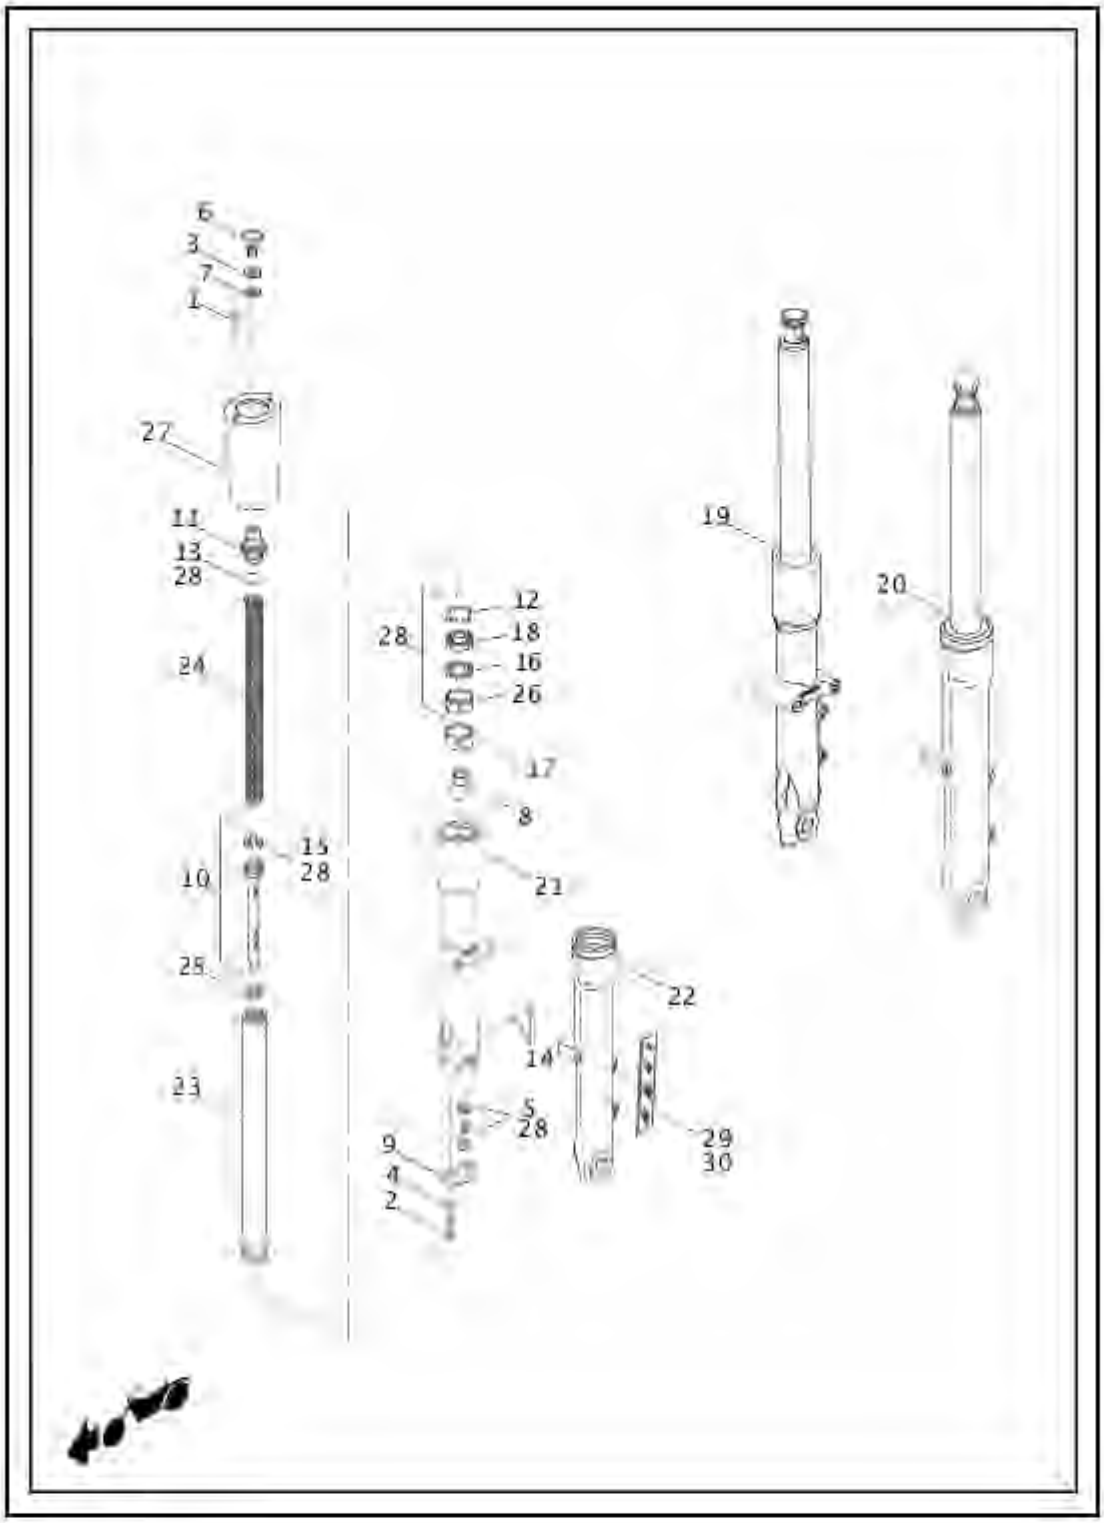

Index No.	Part No.	Description	Model(s)
16	45865-84	SLIDER WASHER	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
17	45866-84	BUSHING, slider	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
18	45875-84A	OIL SEAL	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS
19	45915-08A	FORK SLIDER AND TUBE ASSEMBLY, (right)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	45400147	FORK SLIDER AND TUBE ASSEMBLY,	FLSS, FLSTFBS

		(right) (black)	
20	45916-07A	FORK SLIDER AND TUBE ASSEMBLY, (left)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	45400148	FORK SLIDER AND TUBE ASSEMBLY, (left) (black)	FLSS, FLSTFBS
21	45917-08A	SLIDER ASSEMBLY, (right)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	45500367	SLIDER ASSEMBLY, (right) (black)	FLSS, FLSTFBS
22	45918-07A	SLIDER ASSEMBLY, (left)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	45500366	SLIDER ASSEMBLY, (left) (black)	FLSS, FLSTFBS
23	45930-00	STANCHION TUBE, with 45866-84 *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
24	45931-00	SPRING *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
25	45933-86	SPRING, damper tube *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
26	45940-84	SLIDER BUSHING	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
27	45964-86	COVER, slider *(2)*	FLSTC, FLSTF, FLSTN, FLS
	54673-10BYM	COVER, slider *(2)*	FLSTFB
	46541-02	COVER, slider (black) *(2)*	FLSS, FLSTFBS
28	49377-09A	FORK REBUILD KIT	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
29	60253-07	BRACKET ASSEMBLY, reflector, with 60254-07 *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
30	60254-07	REFLECTOR, amber *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS

FORK, FRONT - FXSB

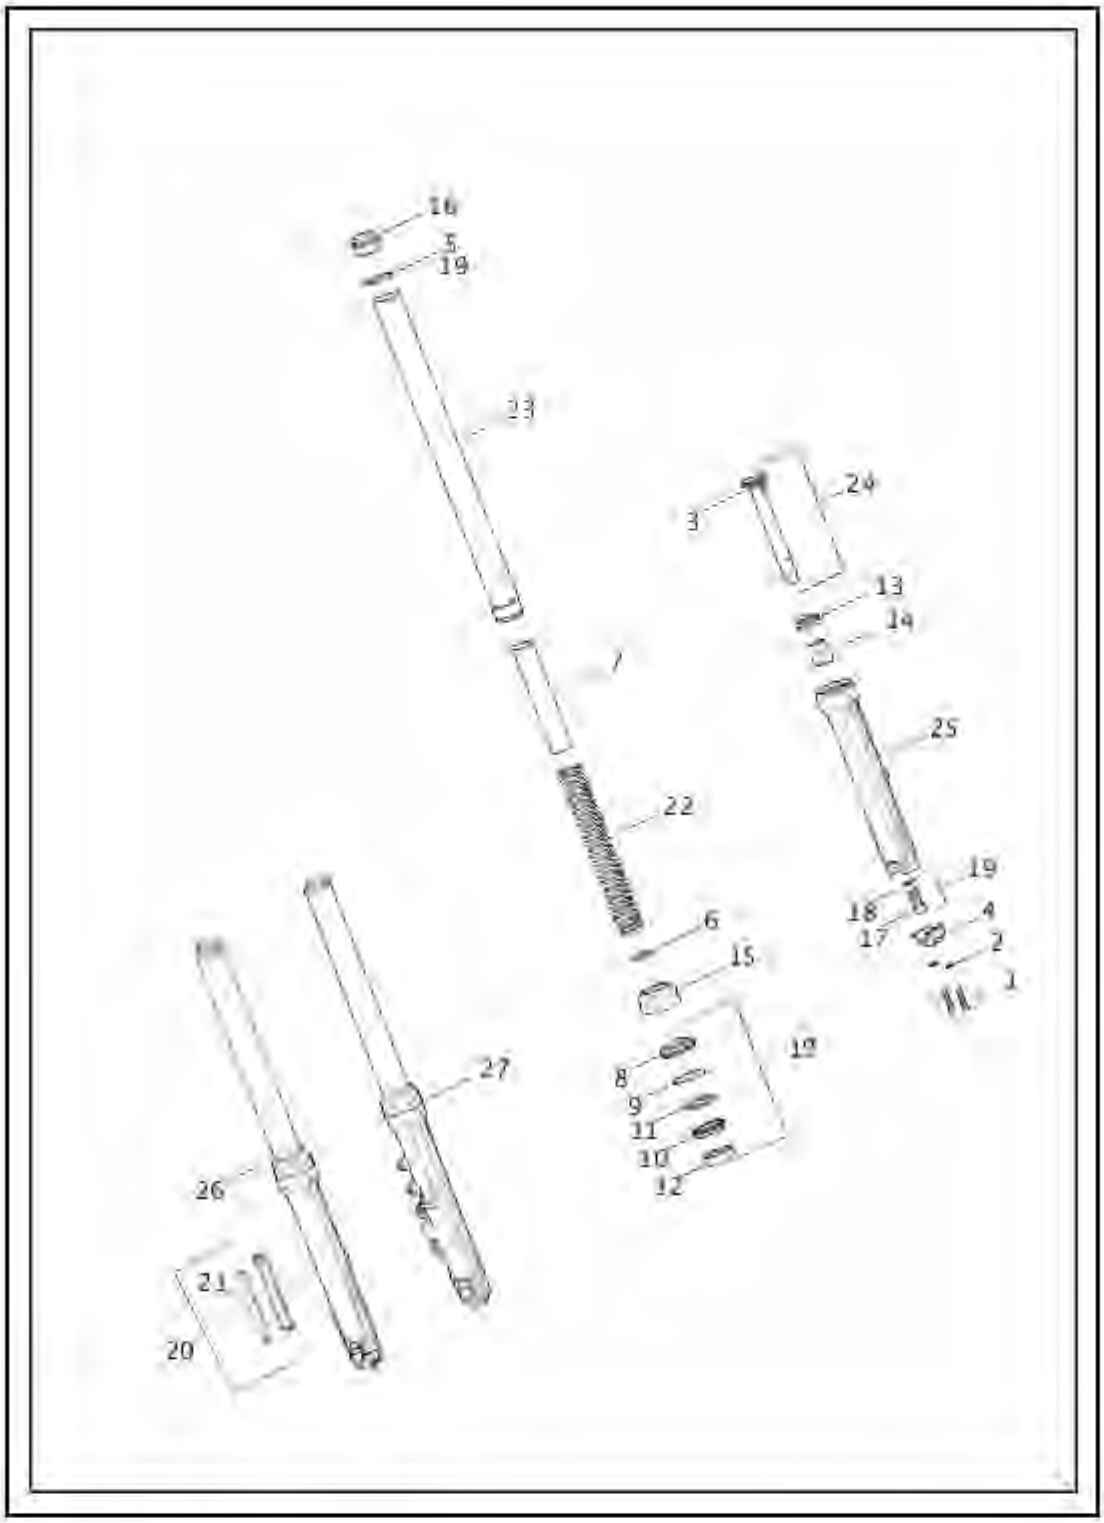

Index No.	Part No.	Description	Model(s)
1	4042	SCREW *(2)*	FXSB
2	7062	LOCKWASHER *(2)*	FXSB
3	11689	PISTON RING *(2)*	FXSB
4	45104-08	AXLE CAP, right side (black)	FXSB
5	46508-01	O-RING *(2)*	FXSB
6	46509-01	WASHER *(2)*	FXSB
7	46510-07	COLLAR SPRING *(2)*	FXSB

8	46512-01A	DUST SEAL	FXSB
9	46513-01	RING STOPPER	FXSB
10	46514-01A	OIL SEAL	FXSB
11	46515-01	SPACER SEAL	FXSB
12	46516-01	BUSHING GUIDE	FXSB
13	46517-01	SPRING, rebound *(2)*	FXSB
14	46609-06	OIL SEAL, fork tube plug *(2)*	FXSB
15	46611-06	COVER, case *(2)*	FXSB
16	46612-06	BOLT *(2)*	FXSB
17	46614-06	BOLT	FXSB
18	46615-06	CU PACKING	FXSB
19	49379-09	FORK REBUILD KIT *(2)*	FXSB
20	60253-07	BRACKET ASSEMBLY, reflector *(2)*	FXSB
21	60254-07	REFLECTOR, amber *(2)*	FXSB
22	45500150	FORK SPRING *(2)*	FXSB
23	45500151	FORK PIPE *(2)*	FXSB
24	45500152	SEAT PIPE, with 11689 *(2)*	FXSB
25	45500159	SLIDER ASSEMBLY, left side (black)	FXSB
	45500161	SLIDER ASSEMBLY, right side (black) (not shown)	FXSB
26	45800026	FORK SLIDER AND TUBE ASSEMBLY, (right)	FXSB
27	45800027	FORK SLIDER AND TUBE ASSEMBLY, (left)	FXSB

FRAME AND JIFFY STAND

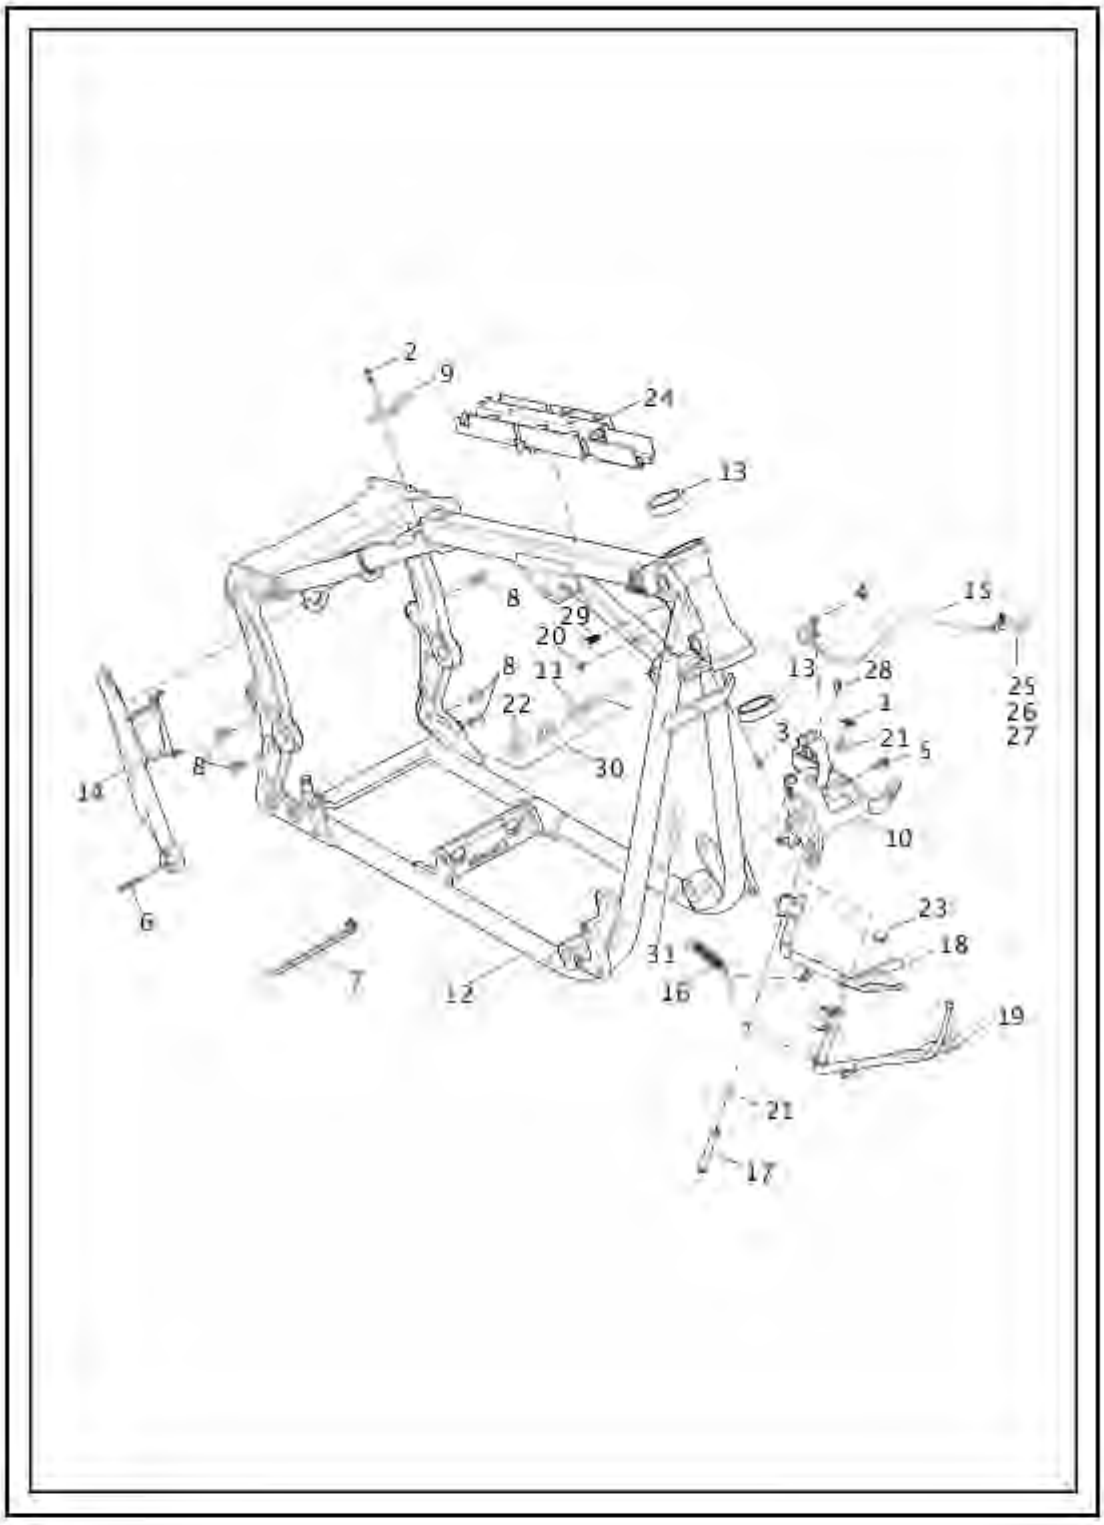

Index No.	Part No.	Description	Model(s)
1	554A	PRETZEL CLIP, jiffy stand	
2	939	SCREW *(2)*	
3	3233	SCREW	
4	3594	SCREW, (HDI, Brazil, England)	FLS, FLSTC, FLSTF, FLSTN, FLSTFB, FXSB, FLSS, FLSTFBS
5	4512A	SCREW *(6)*	
6	4813A	SCREW	FLSTC, FLSTF, FLSTN, FLSTFB,

			FLS, FLSS, FLSTFBS
7	10006	CABLE STRAP *(3)*	
	10065	CABLE STRAP, keys	
8	10040	CLIP *(5)*	FLS
8	10040	CLIP *(4)*	FLSTC, FLSTF, FLSTFB, FLSTFBS
8	10040	CLIP *(3)*	FLSTN
8	10040	CLIP *(2)*	FXSB
9	10193	WIRE CLAMP	
10	33630-07A	BRACKET, jiffy stand, shift lever and footboard, includes shifter bushings	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
	33683-07A	BRACKET, jiffy stand, shift lever and footrest, includes shifter bushings (black)	FXSB
11	45680-90	FORK LOCK, (specify key number)	
12	47173-11BHP	FRAME, (gloss black)	FLSTC, FLSTF, FLSTN, FLS, FLSS
	47173-11BYM	FRAME, (denim black)	FLSTFB, FLSTFBS
	47167-11BHP	FRAME, (gloss black)	FXSB
13	48315-60	BEARING CUP *(2)*	
14	48868-07	POST, seat	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
15	49716-08A	JIFFY STAND SENSOR, with 72169-07, 72511-07BK, 73213-07 (HDI, Brazil, England)	
16	49725-07A	SPRING, jiffy stand leg	
17	50003-89B	CLEVIS PIN, jiffy stand	
18	50087-07A	LEG, jiffy stand (chrome)	FLSTC, FLSTF
19	50103-07B	LEG, jiffy stand	FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
	50000053	LEG, jiffy stand	FXSB
20	50972-75	FITTING, lubrication	
21	53176-08	BUSHING, jiffy stand *(2)*	
22	61081-92	COVER, key head set *(2)*	
23	62123-07	BUMPER	FLS, FLSTC, FLSTF, FLSTN, FLSTFB
23	62123-	BUMPER	FXSB, FLSS, FLSTFBS

	66A		
24	71044-11	WIRE TROUGH	
25	72169-07	TERMINAL, pin 16-20 AWG (HDI, Brazil, England) *(3)*	FLS, FLSTC, FLSTF, FLSTN, FLSTFB, FXSB, FLSS, FLSTFBS
26	72511-07BK	HOUSING, three-way, pin (HDI, Brazil, England)	FLS, FLSTC, FLSTF, FLSTN, FLSTFB, FXSB, FLSS, FLSTFBS
27	73213-07	RETAINER, anchored (HDI, Brazil, England)	FLS, FLSTC, FLSTF, FLSTN, FLSTFB, FLSS, FLSTFBS, FXSB
28	90520-07	PLUG, (Asia-Pacific, Australia, California, Canada, Domestic, India, Japan)	
29	12600015	FASTENER, anchored	
30	71400076	IGNITION SWITCH AND FORK LOCKSET, with 90300043 keys, ignition switch and fork lock	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS

FORK, REAR AND SHOCK ABSORBERS

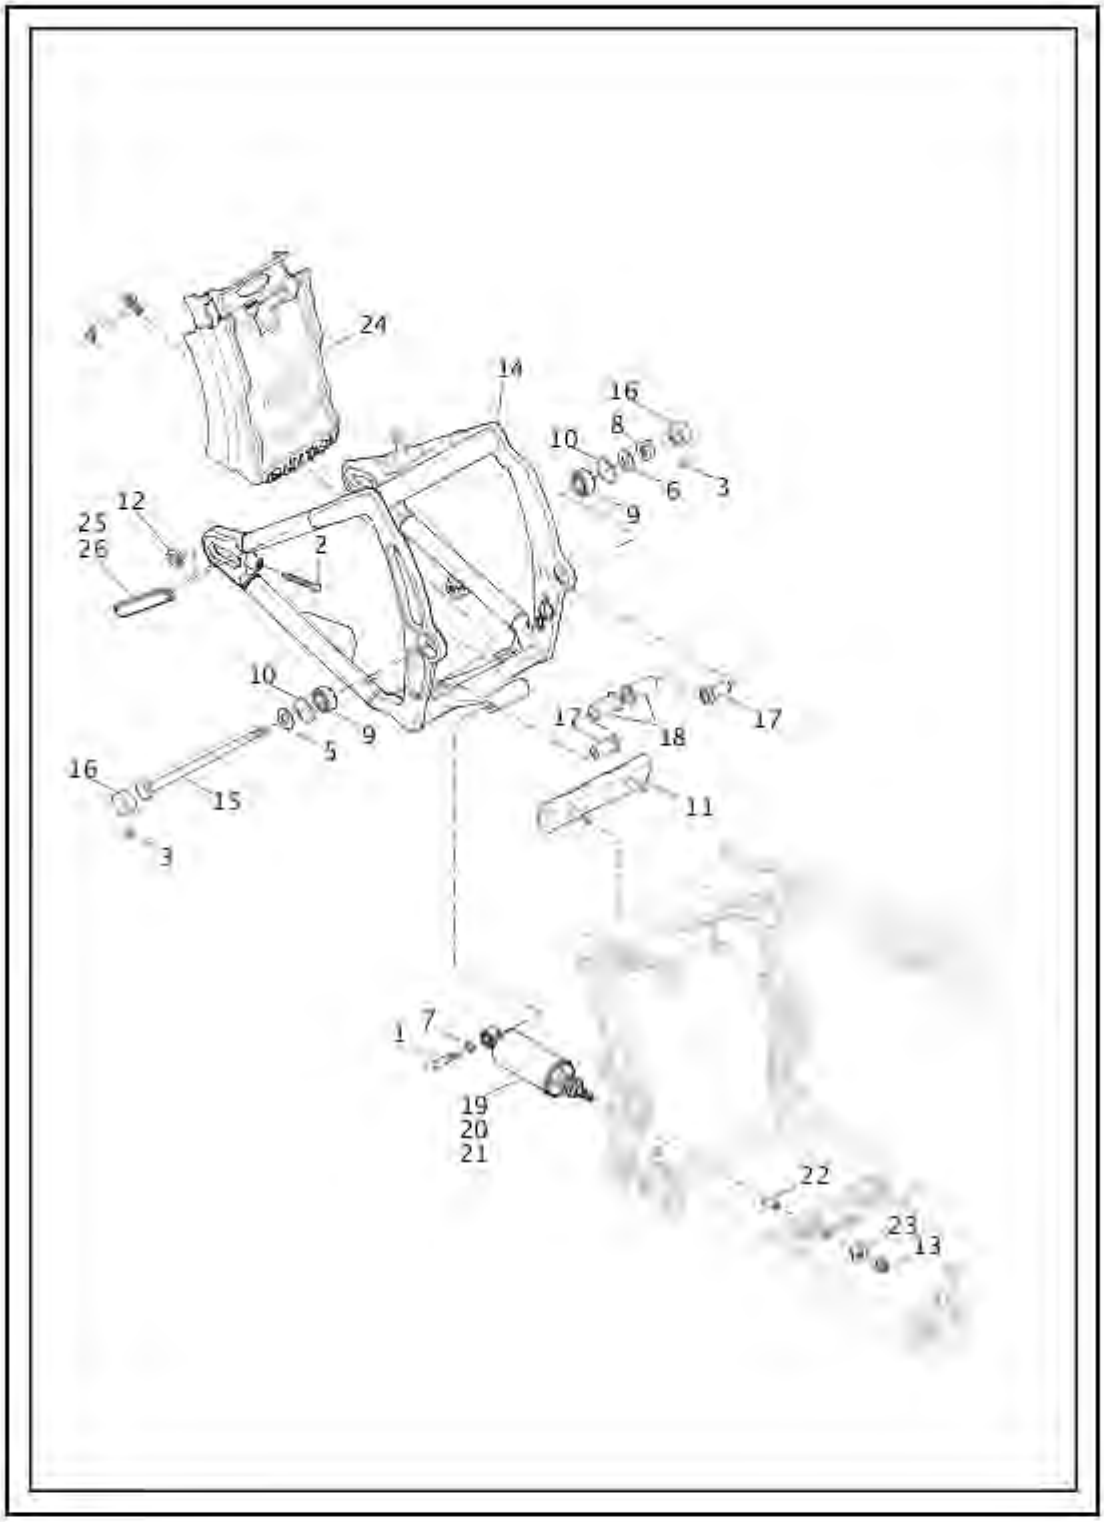

Index No.	Part No.	Description	Model(s)
1	4074A	BOLT *(2)*	
2	4433	ADJUSTING SCREW, rear axle *(2)*	
3	4636	SET SCREW	FLSS, FLSTFBS
4	4867	SCREW	
5	6534	WASHER, hardened, right side	
6	6535	WASHER, hardened, left side	

7	6724	WASHER *(2)*	
8	7479	NUT	
9	9209	BEARING, rear fork pivot *(2)*	
10	11282	RETAINING RING, fork bearing *(2)*	
11	11514	BUMPER, rear fork	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
	11565C	BUMPER, rear fork	FXSB
12	41694-08	SPACER, rear axle adjuster	
13	45764-00	LOCKNUT *(2)*	
14	47573-11BHP	REAR FORK KIT, with 11282 and bearing (gloss black)	FLSTC, FLSTF, FLSTN, FLS, FLSS
	47573-11BYM	REAR FORK KIT, with 11282 and bearing (black denim)	FLSTFB, FLSTFBS
	47694-11BHP	REAR FORK KIT, with 11282 (gloss black)	FXSB
15	47610-08	PIVOT SHAFT	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
	47670-08	PIVOT SHAFT	FXSB
16	47683-09	COVER, bolt (black)	FLSS, FLSTFBS
17	48048-00A	BUSHING, rear fork *(2)*	
18	48619-07A	SPACER, rear fork (right)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
	48104-08	SPACER, rear fork (right)	FXSB
	48076-08	SPACER, rear fork (left)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
	48049-08	SPACER, rear fork (left)	FXSB
19	54508-00B	SHOCK ABSORBER, complete *(2)*	FLSTC, FLSTF
19	54508-00B	SHOCK ABSORBER, complete (Brazil, England, HDI, India) *(2)*	FLSTFB, FLSTFBS
19	54508-00B	SHOCK ABSORBER, complete (Asia-Pacific, Australia) *(2)*	FLS, FLSS
20	54549-04	SHOCK ABSORBER, complete *(2)*	FLSTN
20	54549-04	SHOCK ABSORBER, complete (Asia-Pacific, Australia, Domestic, Canada, Japan) *(2)*	FLSTFB, FLSTFBS
20	54549-04	SHOCK ABSORBER, complete (Canada, Domestic, England, HDI, Japan) *(2)*	FLS, FLSS
21	54000045	SHOCK ABSORBER, complete *(2)*	FXSB

22	56182-00A	BUSHING *(2)*	
23	56183-00	WASHER, with grommet *(4)*	
24	60363-11	SPLASH GUARD	FLSTC, FLSTN, FLS, FLSS
	60456-11	SPLASH GUARD	FLSTF, FLSTFB, FLSTFBS
	49000014	SPLASH GUARD	FXSB
25	60254-07	REFLECTOR, (amber) (HDI)	FXSB
	69490-07	REFLECTOR, (red)	FXSB
26	60271-08	REFLECTOR ASSEMBLY, (red)	FXSB
	59405-09	REFLECTOR ASSEMBLY, (amber) (HDI)	FXSB

SEATS

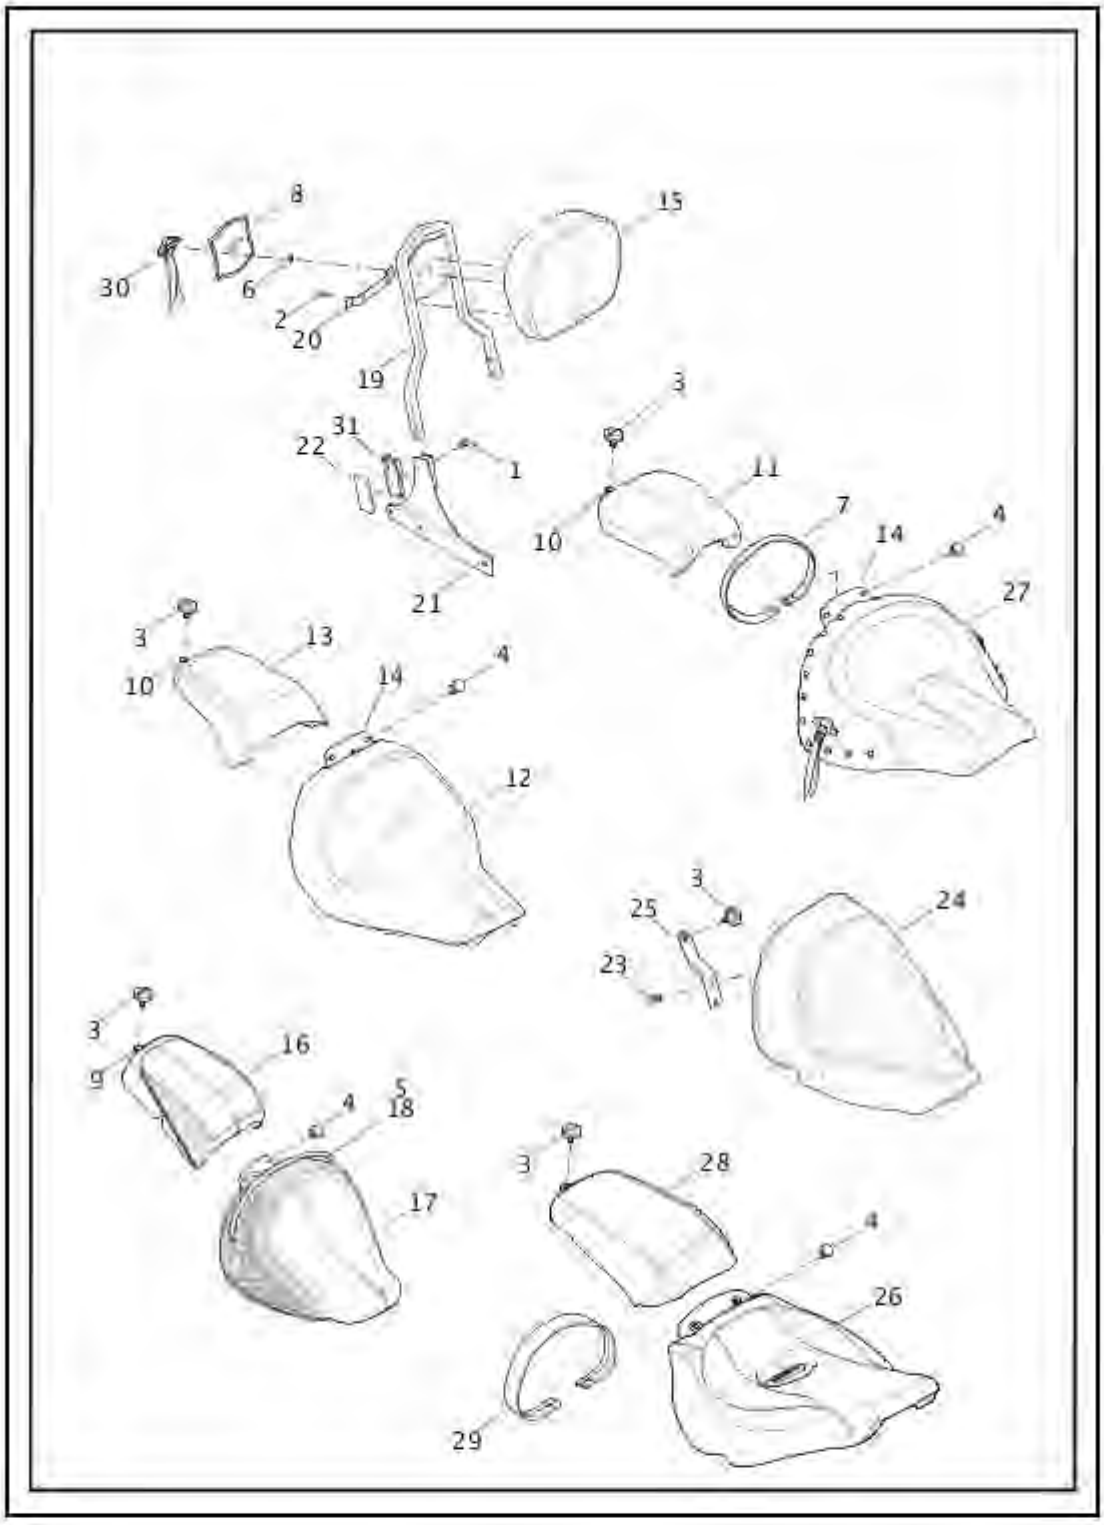

Index No.	Part No.	Description	Model(s)
1	1001	SCREW *(4)*	FLSTC
2	2538	SCREW *(3)*	FLSTC
3	3075	SCREW	FLSTN, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
4	3633	NUT, seat mounting *(2)*	FLSTC, FLSTN, FLSTF, FLSTFB, FLSTFBS
5	6036	WASHER *(2)*	FLSTN

6	8126A	RETAINER CLIP *(2)*	FLSTC
7	51184-00	PASSENGER STRAP	FLSTC, FLSTF, FLSTFB, FLSTFBS
8	51494-11	TRIM PANEL, backrest	FLSTC
9	51669-07	BRACKET	FLSTN
10	51740-10	BRACKET, seat mounting (gloss black)	FLSTF, FLSTFB, FLSTFBS
	51652-97A	BRACKET, seat mounting	FLSTC
11	51812-09	PILLION ASSEMBLY	FLSTC
12	51873-10A	SEAT ASSEMBLY	FLSTF, FLSTFB, FLSTFBS
13	51874-10A	PILLION ASSEMBLY	FLSTF, FLSTFB, FLSTFBS
14	52125-05	BRACKET	FLSTF, FLSTFB, FLSTFBS
15	52189-09	BACKREST	FLSTC
16	52237-07	SEAT, passenger, with 51669-07	FLSTN
17	52502-05C	SEAT ASSEMBLY, front, with 6036 and 52691-05	FLSTN
18	52691-05	GRAB RAIL	FLSTN
19	52731-00	SISSY BAR UPRIGHT	FLSTC
20	52771-82	BRACKET, backrest	FLSTC
21	52787-00	SIDE PLATE, (right)	FLSTC
	52788-00	SIDE PLATE, (left)	FLSTC
22	59259-90	REFLECTOR, (Domestic, Canada) *(2)*	FLSTC
	59256-84A	REFLECTOR, (amber) (HDI, Asia-Pacific, Australia, England, Japan) *(2)*	FLSTC, FLS, FLSS
23	67956-96	SCREW	FLS, FLSS
24	52000031A	SEAT	FLS, FLSS
25	52000032	BRACKET, mounting	FLS, FLSS
26	52000096	SEAT	FXSB
27	52000222	SEAT ASSEMBLY	FLSTC
28	52400065	PILLION	FXSB
29	52400072	PASSENGER STRAP	FXSB
30	61400327	CONCHO	FLSTC
31	67900140	BRACKET, reflector	FLSTC

FOOTRESTS AND FOOTBOARDS

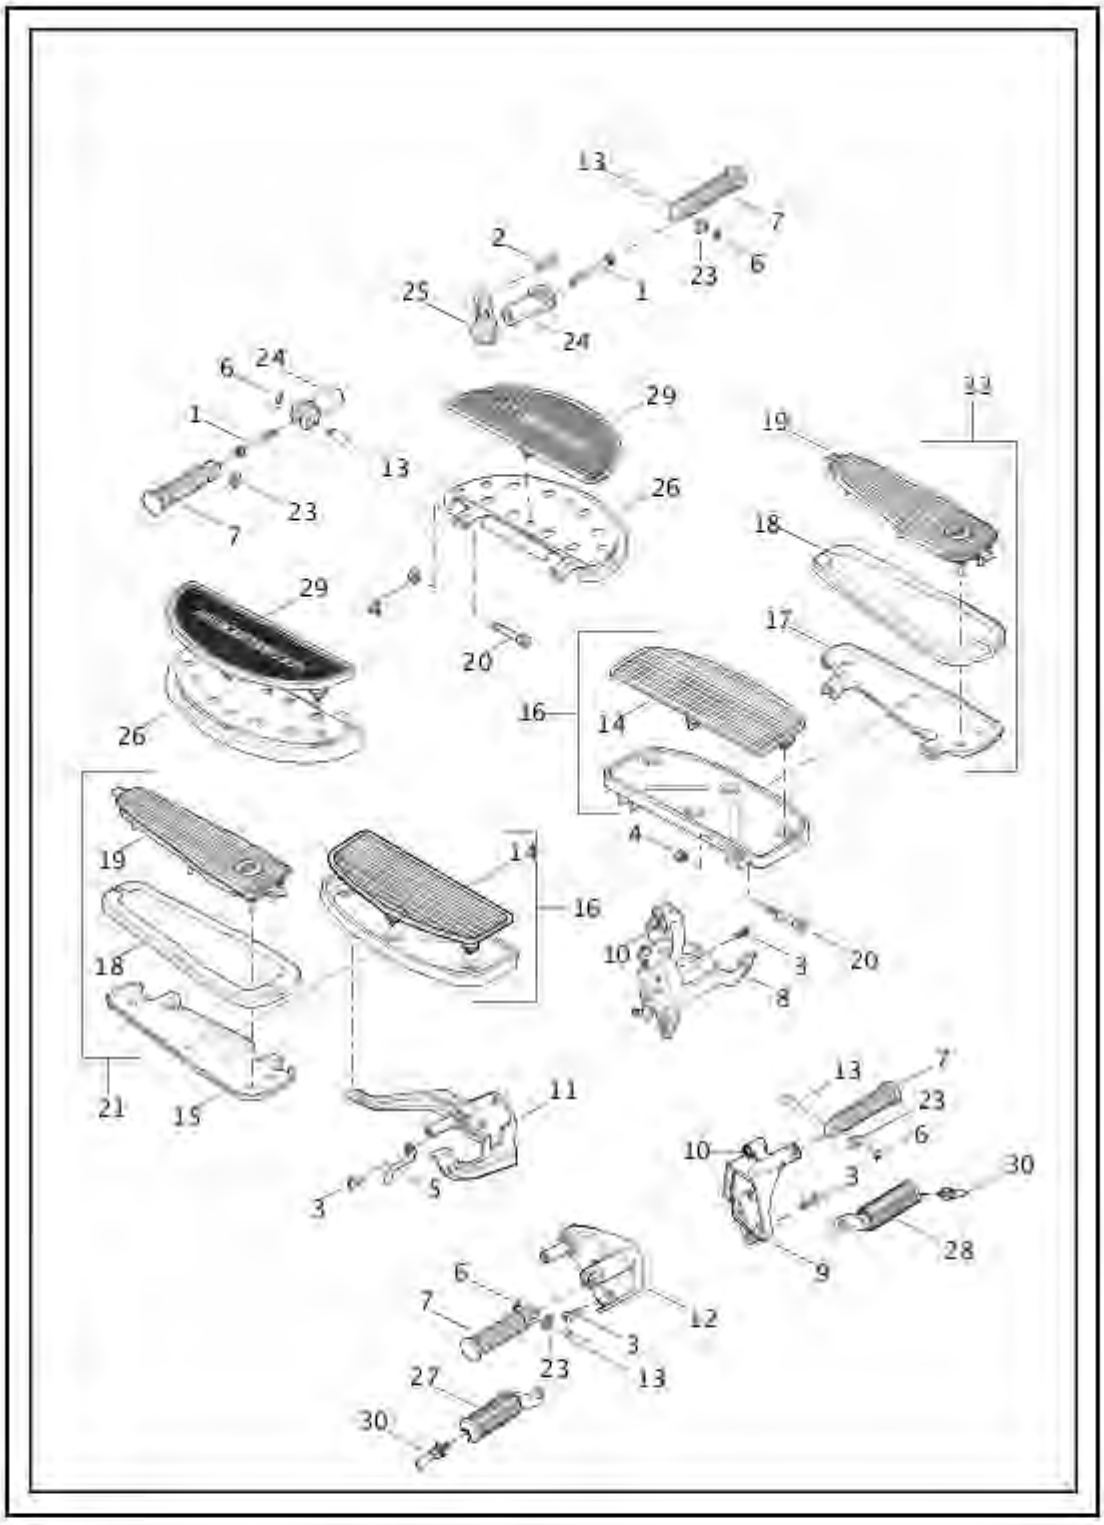

Index No.	Part No.	Description	Model(s)
1	4454	SCREW *(2)*	FLSTC, FXSB
1	4454	SCREW	FLSTF, FLSTN, FLSTFB, FLSTFBS
	4836	SCREW, (right)	FLSTF, FLSTN, FLSTFB, FLSTFBS
2	4390	SCREW *(2)*	FLSTN
3	4512A	SCREW *(6)*	
4	7716	LOCKNUT *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS

5	10866	CLIP, master cylinder retention	
6	11304	RETAINING RING *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FXSB, FLSTFBS
7	33048-72	FOOTREST, with 33189-63 *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FXSB, FLSTFBS
	33189-63	FOOTREST COVER, (black) *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FXSB, FLSTFBS
8	33630-07A	BRACKET, jiffy stand, shift lever, footboard and 33708-94	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
9	33683-07A	BRACKET, jiffy stand, shift lever, footboard and 33708-94 (black)	FXSB
10	33708-94	BEARING SLEEVE *(2)*	
11	42431-11	SUPPORT ASSEMBLY, footboard and brake (right)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
12	42508-11BHP	BRACKET, brake lever and footrest (black)	FXSB
13	45041-01A	PIN, clevis *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLSTFBS
	45041-01A	PIN, clevis *(4)*	FXSB
14	50614-06	PAD *(2)*	FLSTF
15	50617-05	FOOTBOARD BOTTOM, (right)	FLSTN
16	50621-06	FOOTBOARD, includes pad *(2)*	FLSTF
17	50624-05	FOOTBOARD BOTTOM, (left)	FLSTN
18	50625-05	FOOTBOARD COVER *(2)*	FLSTN
19	50630-05	FOOTBOARD PAD *(2)*	FLSTN
20	50674-05	BOLT, footboard hinge *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
21	50698-05	FOOTBOARD ASSEMBLY, with 50617-05, 50625-05 and 50630-05 (right)	FLSTN
22	50699-05	FOOTBOARD ASSEMBLY, with 50624-05, 50625-05 and 50630-05 (left)	FLSTN
23	50912-72	WASHER, SPRING *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLSTFBS
	50912-72	WASHER, SPRING *(4)*	FXSB
24	50943-05A	SUPPORT, passenger footrest (black) *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FXSB, FLSTFBS
25	50944-05	SUPPORT, passenger footrest (left)	FLSTN
26	51218-09A	FOOTBOARD BOTTOM, (polished) *(2)*	FLSTC

	51402-08A	FOOTBOARD BOTTOM, (gloss black) *(2)*	FLSTFB, FLS, FLSS, FLSTFBS
27	51323-08	FOOT PEG, (right)	FXSB
28	51327-08	FOOT PEG, (left)	FXSB
29	51403-08	PAD, footboard *(2)*	FLSTC, FLSTFB, FLS, FLSS, FLSTFBS
30	54204-11	WEAR PEG, footrest *(2)*	FXSB

FENDER, FRONT

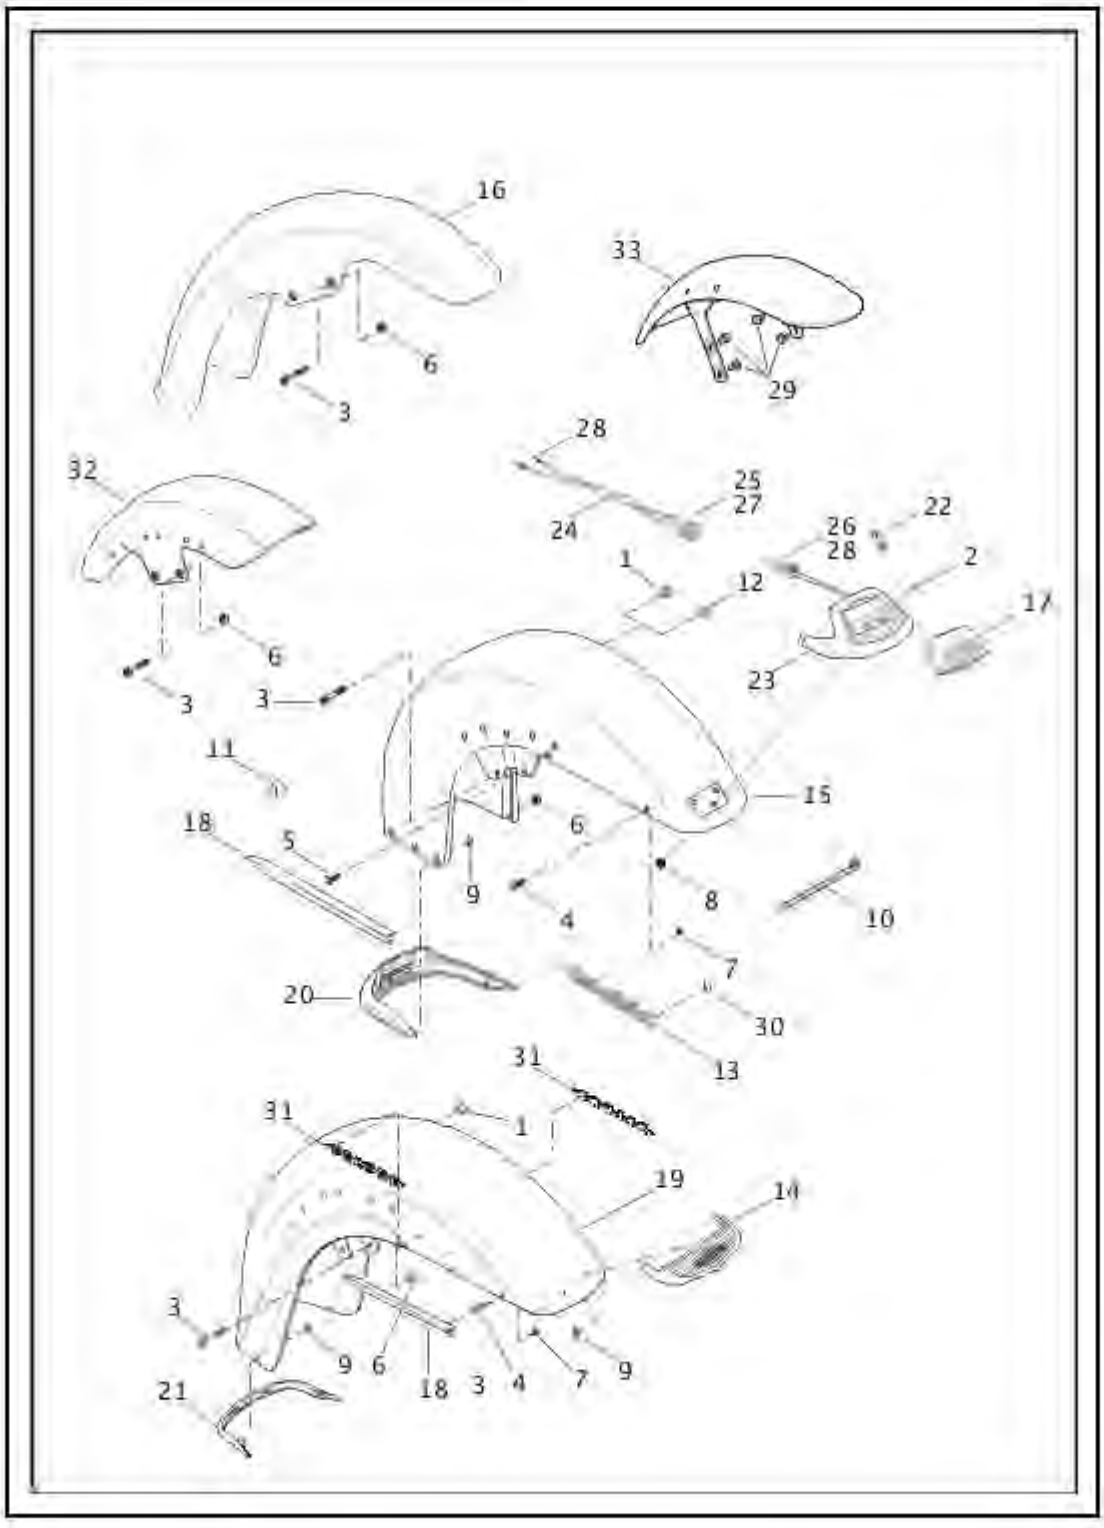

Index No.	Part No.	Description	Model(s)
NOTE: Refer to the Service Section of h-dnet.com for painted part numbers.			
1	755	HOLE PLUG	FLSTN
	755	HOLE PLUG, (HDI) *(2)*	FLSTC
2	2604	SCREW *(2)*	FLSTC
3	3485A	SCREW *(4)*	FLSTC, FLSTN, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
4	3560WA	BOLT, tee *(2)*	FLSTC, FLSTN
5	3561WC	BOLT, tee *(2)*	FLSTC, FLSTN
6	7531	LOCKNUT *(4)*	FLSTC, FLSTN, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
7	7624	LOCKNUT *(4)*	FLSTC, FLSTN
8	7629	NUT *(2)*	FLSTC
9	8037	NUT *(3)*	FLSTC
	8037	NUT *(5)*	FLSTN
10	10065	CABLE STRAP *(2)*	FLSTC
11	10102	CLIP	FLSTC
12	11437	GROMMET	FLSTC
13	14142-09	TRIM, Heritage Softail *(2)*	FLSTC
14	59019-05	FRONT FENDER TIP	FLSTN
15	59129-09	FENDER, (prime)	FLSTC
16	59139-00A	FENDER, (prime)	FLSTF, FLSTFB, FLSTFBS
17	59180-80	LENS, fender tip lamp (amber)	FLSTC
	59201-96	LENS, fender tip (HDI)	FLSTC
18	59211-74A	SIDE TRIM *(2)*	FLSTC, FLSTN
19	59234-05	FENDER, (prime)	FLSTN
20	59235-09	TRIM SKIRT, (lower)	FLSTC
21	59360-05	TRIM SKIRT, (lower)	FLSTN
22	68193-95	BULB, fender tip lamp	FLSTC
23	68706-00	LAMP ASSEMBLY FENDER TIP, with 59180-80, 68193-95, 73152-96BK and 73191-96	FLSTC
	59116-96	LAMP ASSEMBLY FENDER TIP, with 59201-96 (HDI)	FLSTC
24	70196-00	HARNESS ASSEMBLY, fender tip light, with 73102-	FLSTC

		96BK, 73190-96 and 73191-96	
25	73102-96BK	HOUSING, two-way	FLSTC
26	73152-96BK	HOUSING, two-way socket	FLSTC
27	73190-96	TERMINAL, pin, 16-20 AWG *(2)*	FLSTC
28	73191-96	TERMINAL, socket, 16-20 AWG *(4)*	FLSTC
29	10200201	SCREW *(4)*	FXSB
30	12200092	CLIP, retaining *(6)*	FLSTC, FLSTN
31	14100756	NAMEPLATE *(2)*	FLSTN
32	58900021	FENDER, (prime)	FLS, FLSS
33	58900042	FENDER, (prime)	FXSB

FENDERS AND SUPPORTS, REAR - FLSTC

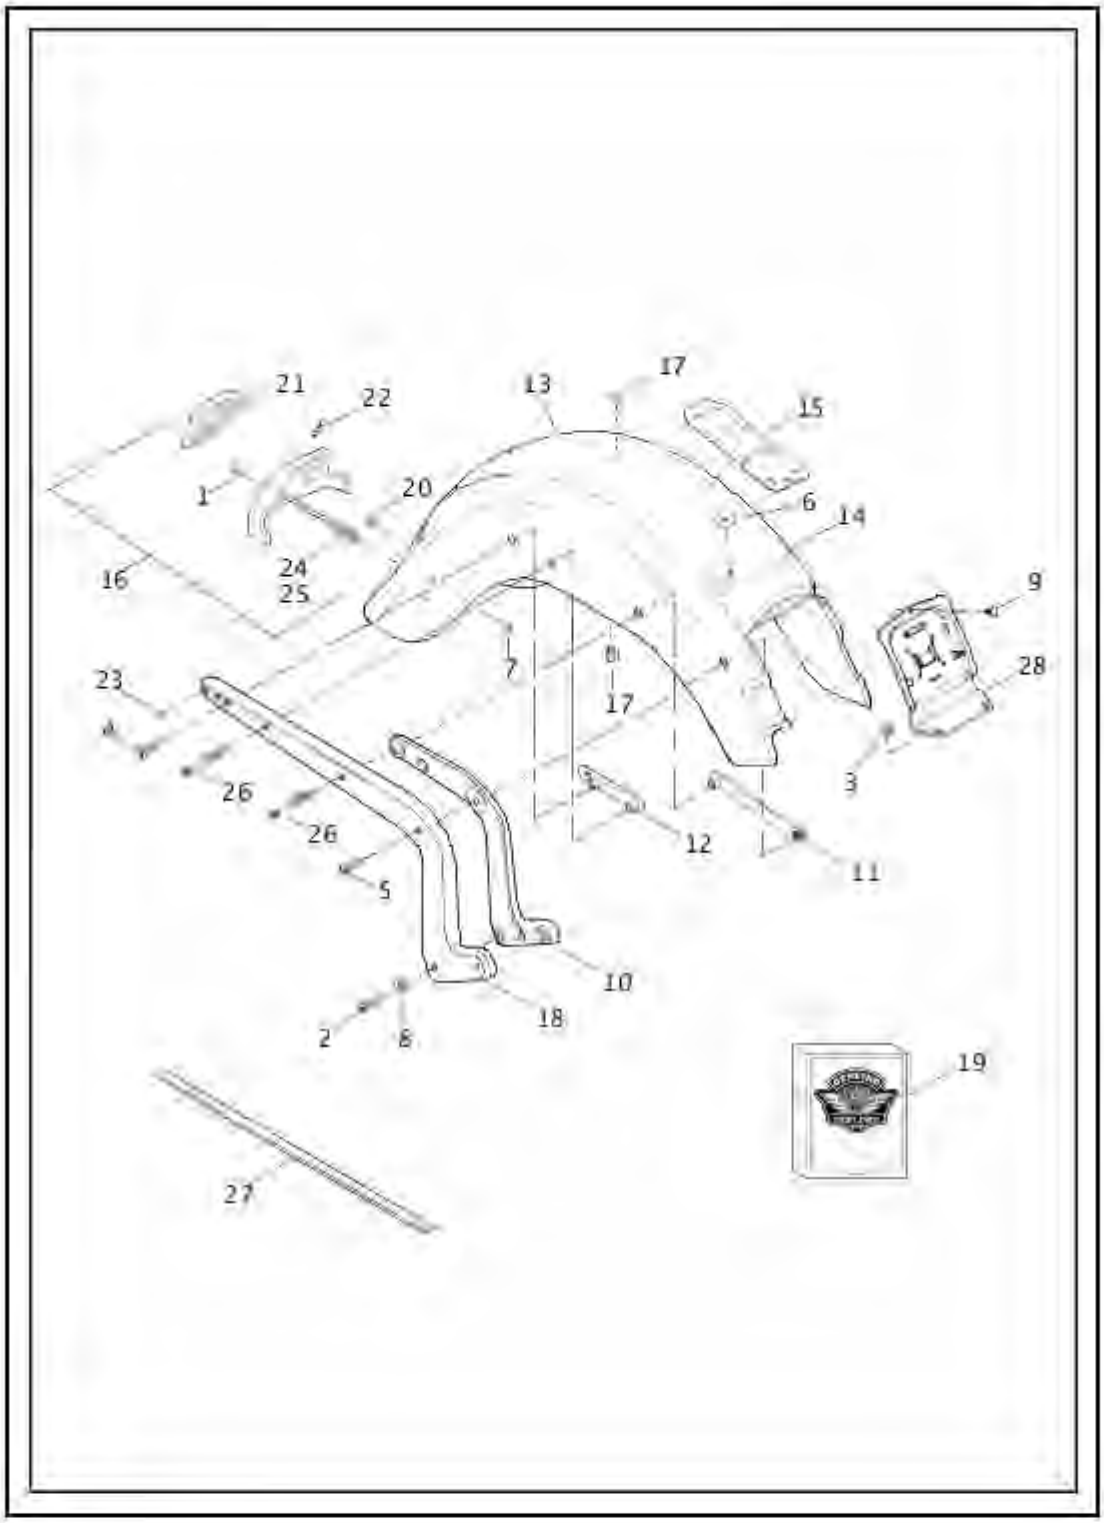

Index No.	Part No.	Description	Model(s)
NOTE: Refer to the Service Section of h-dnet.com for painted part numbers.			
1	2604	SCREW *(2)*	FLSTC
2	3056	SCREW *(4)*	FLSTC
3	3391	SCREW *(2)*	FLSTC
4	4266A	SCREW *(2)*	FLSTC
5	4267	SCREW *(2)*	FLSTC
6	7434	WASHER *(2)*	FLSTC

7	7629	NUT *(2)*	FLSTC
8	6400HB	WASHER *(4)*	FLSTC
9	10226	FASTENER, nylon	FLSTC
10	47798-08BHP	SUPPORT, (left)	FLSTC
	47807-08BHP	SUPPORT, (right)	FLSTC
11	59050-03	BRACKET, fender mounting, front *(2)*	FLSTC
12	59119-03	BRACKET, fender mounting, rear *(2)*	FLSTC
13	59144-06A	REAR FENDER, (prime)	FLSTC
14	59174-99	STUD PLATE	FLSTC
15	59567-00C	PROTECTIVE TAPE	FLSTC
16	59683-03	LAMP ASSEMBLY FENDER TIP, with 68046-79 (Domestic)	FLSTC
	59117-96	LAMP ASSEMBLY FENDER TIP, with lens (HDI)	FLSTC
17	59768-97	FENDER SEAT NUT KIT	FLSTC
18	59954-08	COVER, (left) (chrome)	FLSTC
	59955-08	COVER, (right) (chrome)	FLSTC
19	60832-07	INNER FENDER DAMPING KIT	FLSTC
20	67266-94	GROMMET, turn signal *(2)*	FLSTC
21	68046-79	LENS, rear fender lamp (Domestic)	FLSTC
22	68193-95	BULB, rear fender lamp	FLSTC
23	68446-00	PLUG, button *(2)*	FLSTC
24	73191-96	TERMINAL, socket, 16-20 AWG *(3)*	FLSTC
25	73153-96BK	HOUSING, three-way socket	FLSTC
26	90367-03	STUD, saddlebag *(4)*	FLSTC
27	69200018	CONDUIT	FLSTC
28	69200626	CADDY, ECM	FLSTC

FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS

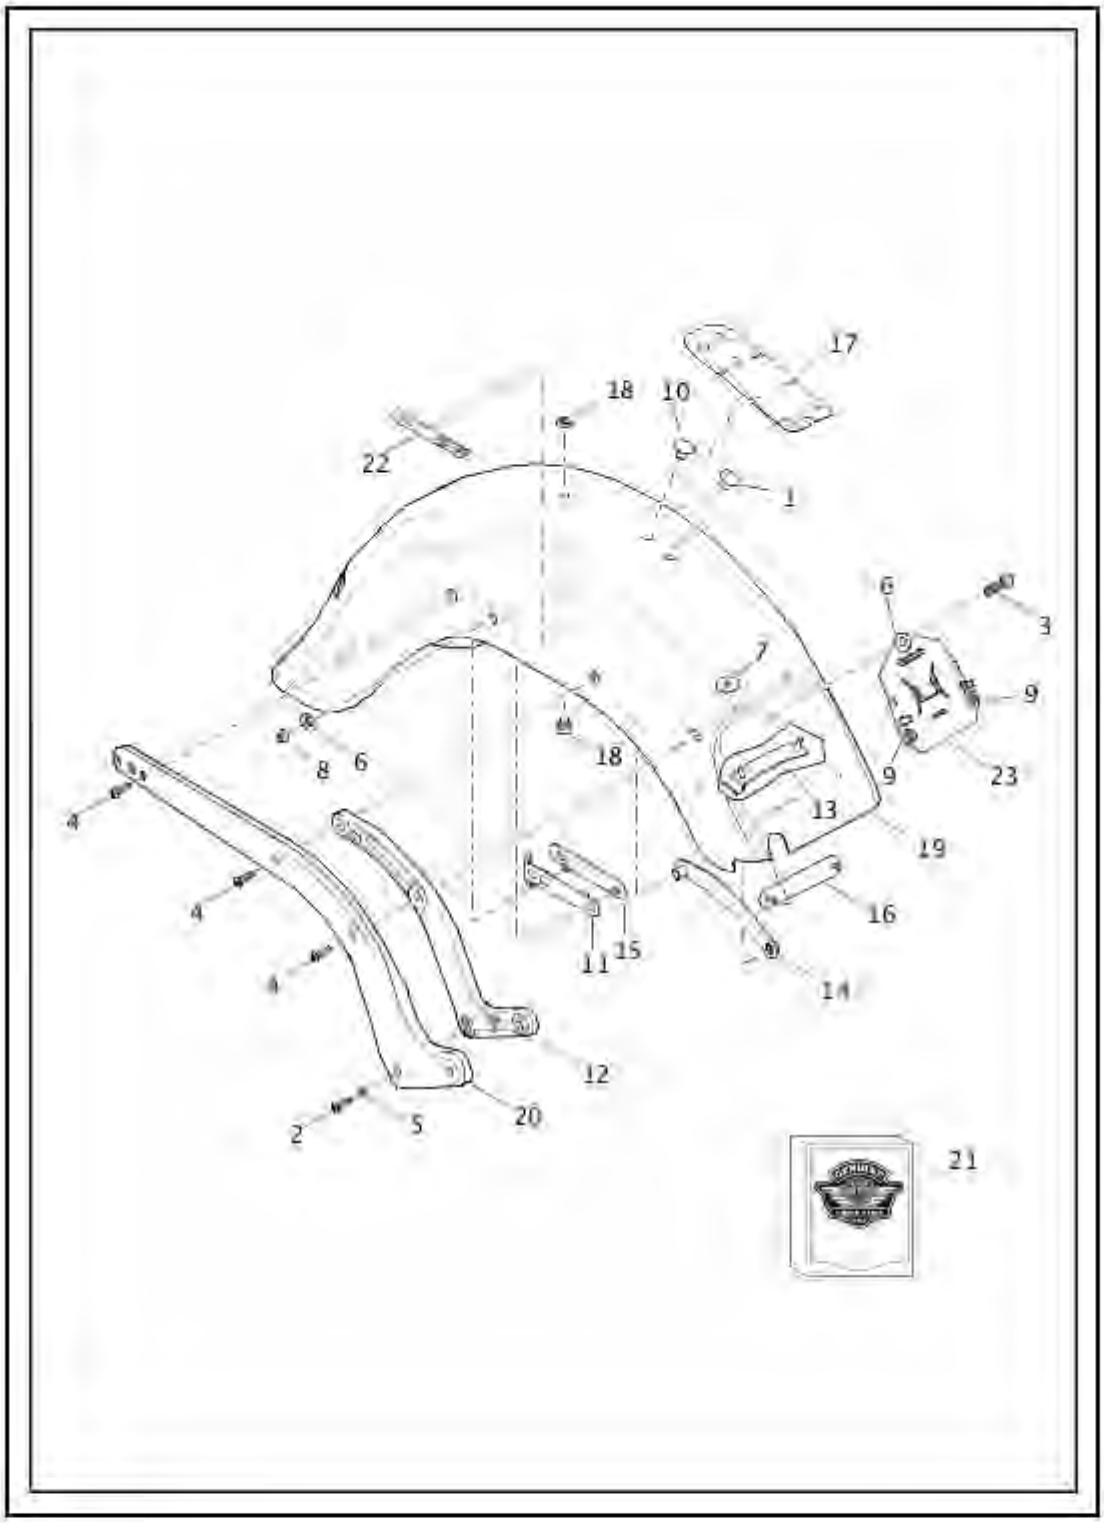

Index No.	Part No.	Description	Model(s)
NOTE: Refer to the Service Section of h-dnet.com for painted part numbers.			
1	761	PLUG	FLSTF, FLSTFB, FLSTFBS
2	3056	SCREW *(4)*	FLSTF, FLSTFB, FLSTFBS
3	3767B	BOLT	FLSTF, FLSTFB, FLSTFBS
4	4266A	SCREW *(6)*	FLSTF, FLSTFB, FLSTFBS
5	6400HB	WASHER *(4)*	FLSTF, FLSTFB, FLSTFBS
6	6701	WASHER *(2)*	FLSTF, FLSTFB, FLSTFBS

7	7434	WASHER *(2)*	FLSTF, FLSTFB, FLSTFBS
8	7601	LOCKNUT *(2)*	FLSTF, FLSTFB, FLSTFBS
9	7792	NUT *(2)*	FLSTF, FLSTFB, FLSTFBS
10	10228	PLUG	FLSTF, FLSTFB, FLSTFBS
11	45550-03	PLATE, wire retainer *(2)*	FLSTF, FLSTFB, FLSTFBS
12	47809-08BHP	SUPPORT, (left) (chrome)	FLSTF, FLSTFB, FLSTFBS
	47813-08BHP	SUPPORT, (right) (chrome)	FLSTF, FLSTFB, FLSTFBS
13	51803-07	STUD PLATE ASSEMBLY	FLSTF, FLSTFB, FLSTFBS
14	59798-06	BRACKET, fender mounting, front *(2)*	FLSTF, FLSTFB, FLSTFBS
15	59088-03	BRACKET, fender mounting, rear *(2)*	FLSTF, FLSTFB, FLSTFBS
16	59438-00	BRACKET ASSEMBLY	FLSTF, FLSTFB, FLSTFBS
17	61008-10	PROTECTIVE TAPE	FLSTF, FLSTFB, FLSTFBS
18	59768-97	FENDER SEAT NUT KIT *(2)*	FLSTF, FLSTFB, FLSTFBS
19	59819-06B	REAR FENDER, (prime)	FLSTF, FLSTFB, FLSTFBS
20	59430-08	COVER, (right) (chrome)	FLSTF
	59434-08	COVER, (left) (chrome)	FLSTF
	59821-08	COVER, (right) (black)	FLSTFB, FLSTFBS
	59824-08	COVER, (left) (black)	FLSTFB, FLSTFBS
21	60832-07	INNER FENDER DAMPING KIT	FLSTF, FLSTFB, FLSTFBS
22	69490-07	REFLECTOR, rear fender *(2)*	FLSTF, FLSTFB, FLSTFBS
	60254-07	REFLECTOR, amber (HDI, Australia, England, Japan) *(2)*	FLSTF, FLSTFB, FLSTFBS
23	69201084	CADDY, ECM	FLSTF, FLSTFB, FLSTFBS

FENDERS AND SUPPORTS, REAR - FLSTN

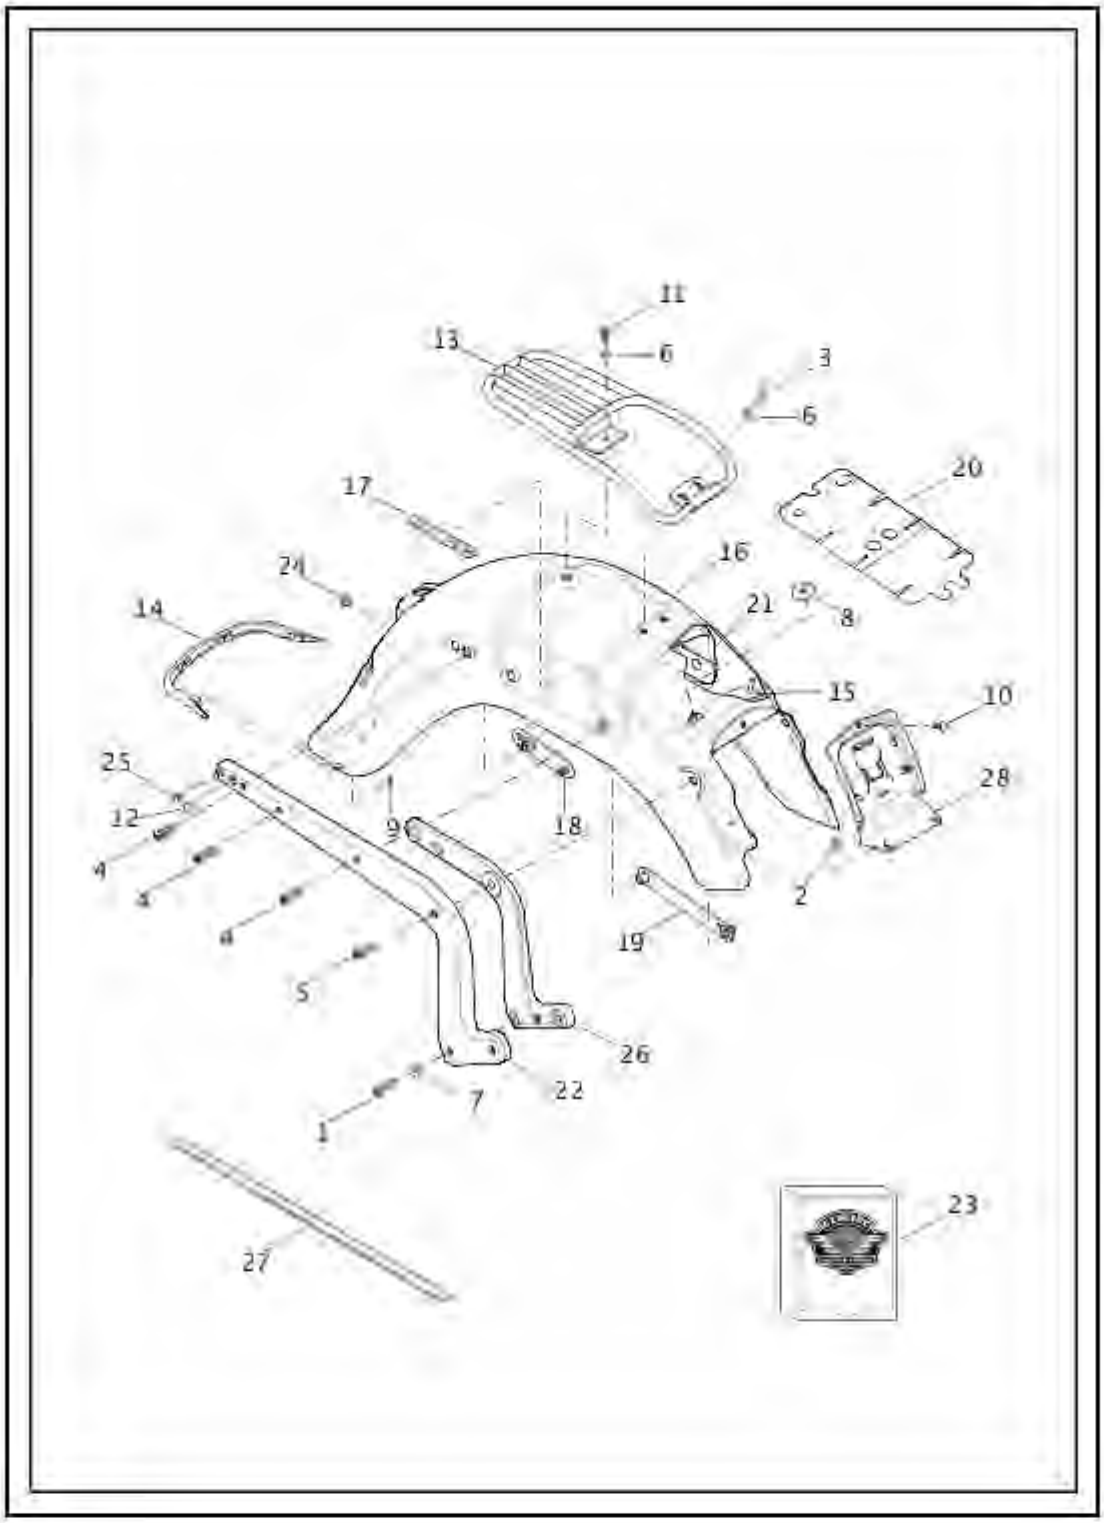

Index No.	Part No.	Description	Model(s)
NOTE: Refer to the Service Section of h-dnet.com for painted part numbers.			
1	3056	SCREW *(4)*	FLSTN
2	3391	SCREW *(2)*	FLSTN
3	3767B	BOLT *(2)*	FLSTN
4	4266A	SCREW *(6)*	FLSTN
5	4267	SCREW *(2)*	FLSTN

6	6110	WASHER *(3)*	FLSTN
7	6400HB	WASHER *(4)*	FLSTN
8	7434	WASHER *(2)*	FLSTN
9	8037	NUT *(3)*	FLSTN
10	10226	FASTENER, nylon	FLSTN
11	53462-05	STUD, rear seat mounting	FLSTN
12	53830-00	PLUG *(2)*	FLSTN
13	53860-05	LUGGAGE RACK	FLSTN
14	59026-05	REAR FENDER TIP	FLSTN
15	59174-99	STUD PLATE	FLSTN
16	59238-05A	REAR FENDER, (prime)	FLSTN
17	69490-07	REFLECTOR, red *(2)*	FLSTN
	60254-07	REFLECTOR, amber (Asia-Pacific, Australia, Brazil, England, HDI, Japan) *(2)*	FLSTN
18	59474-07	BRACKET FENDER MOUNT, rear	FLSTN
19	59475-05	BRACKET FENDER MOUNT, front	FLSTN
20	59572-05	PROTECTIVE TAPE	FLSTN
21	59770-05BEO	COVER, fender	FLSTN
22	59954-08	COVER, (left) (chrome)	FLSTN
	59955-08	COVER, (right) (chrome)	FLSTN
23	60833-07	INNER FENDER DAMPING KIT	FLSTN
24	67267-05	GROMMET, turn signal *(2)*	FLSTN
25	68446-00	PLUG, button *(2)*	FLSTN
26	47798-08BHP	SUPPORT, (left)	FLSTN
	47807-08BHP	SUPPORT, (right)	FLSTN
27	69200018	CONDUIT	FLSTN
28	69200626	CADDY, ECM	FLSTN

FENDERS AND SUPPORTS, REAR - FLS AND FLSS

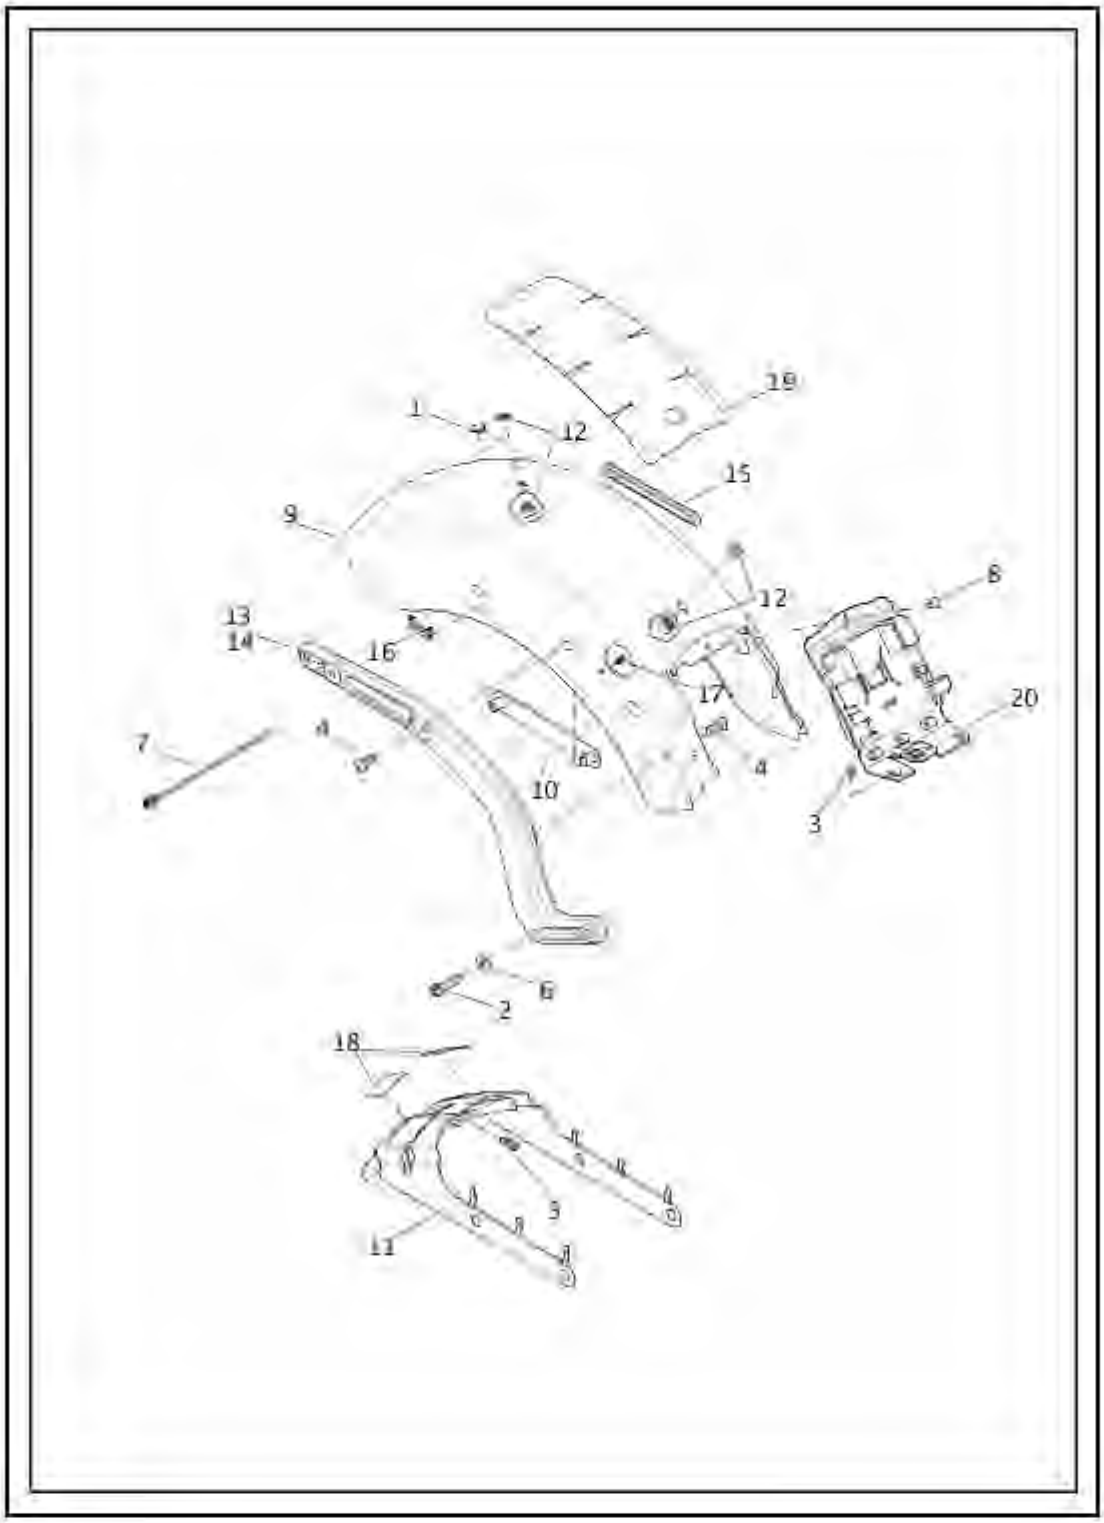

Index No.	Part No.	Description	Model(s)
NOTE: Refer to the Service Section of h-dnet.com for painted part numbers.			
1	761	PLUG	FLS, FLSS
2	3056	SCREW *(4)*	FLS, FLSS
3	3391	SCREW *(2)*	FLS, FLSS
4	4266A	SCREW *(4)*	FLS,

			FLSS
5	4705	SCREW *(2)*	FLS, FLSS
6	6400HB	WASHER *(4)*	FLS, FLSS
7	10177	CABLE STRAP, anchored	FLS, FLSS
8	10226	FASTENER, nylon	FLS, FLSS
9	59500-11	REAR FENDER, (prime)	FLS, FLSS
10	59548-11	BRACKET, fender mount *(2)*	FLS, FLSS
11	59679-11	BRACKET ASSEMBLY, license plate support (HDI, Australia, Canada, England, Japan)	FLS, FLSS
	69200356	BRACKET ASSEMBLY, license plate support (Domestic)	FLS
12	59768-97	FENDER SEAT NUT KIT	FLS, FLSS
13	59904-12BHP	SUPPORT, left side fender (not shown)	FLS, FLSS
14	60187-12BHP	SUPPORT, right side fender	FLS, FLSS
15	69490-07	REFLECTOR *(2)*	FLS, FLSS
	60254-07	REFLECTOR, amber (HDI, Asia-Pacific, Australia, England, Japan) *(2)*	FLS, FLSS
16	73412-11	WIRE GUIDE *(2)*	FLS, FLSS
17	73422-11	WIRE CLIP	FLS, FLSS
18	11100010	TAPE, pad mounting *(2)*	FLS, FLSS
19	11100014	PROTECTIVE TAPE, fender	FLS, FLSS
20	69201085	CADDY, ECM	FLS, FLSS

FENDERS AND SUPPORTS, REAR - FXSB

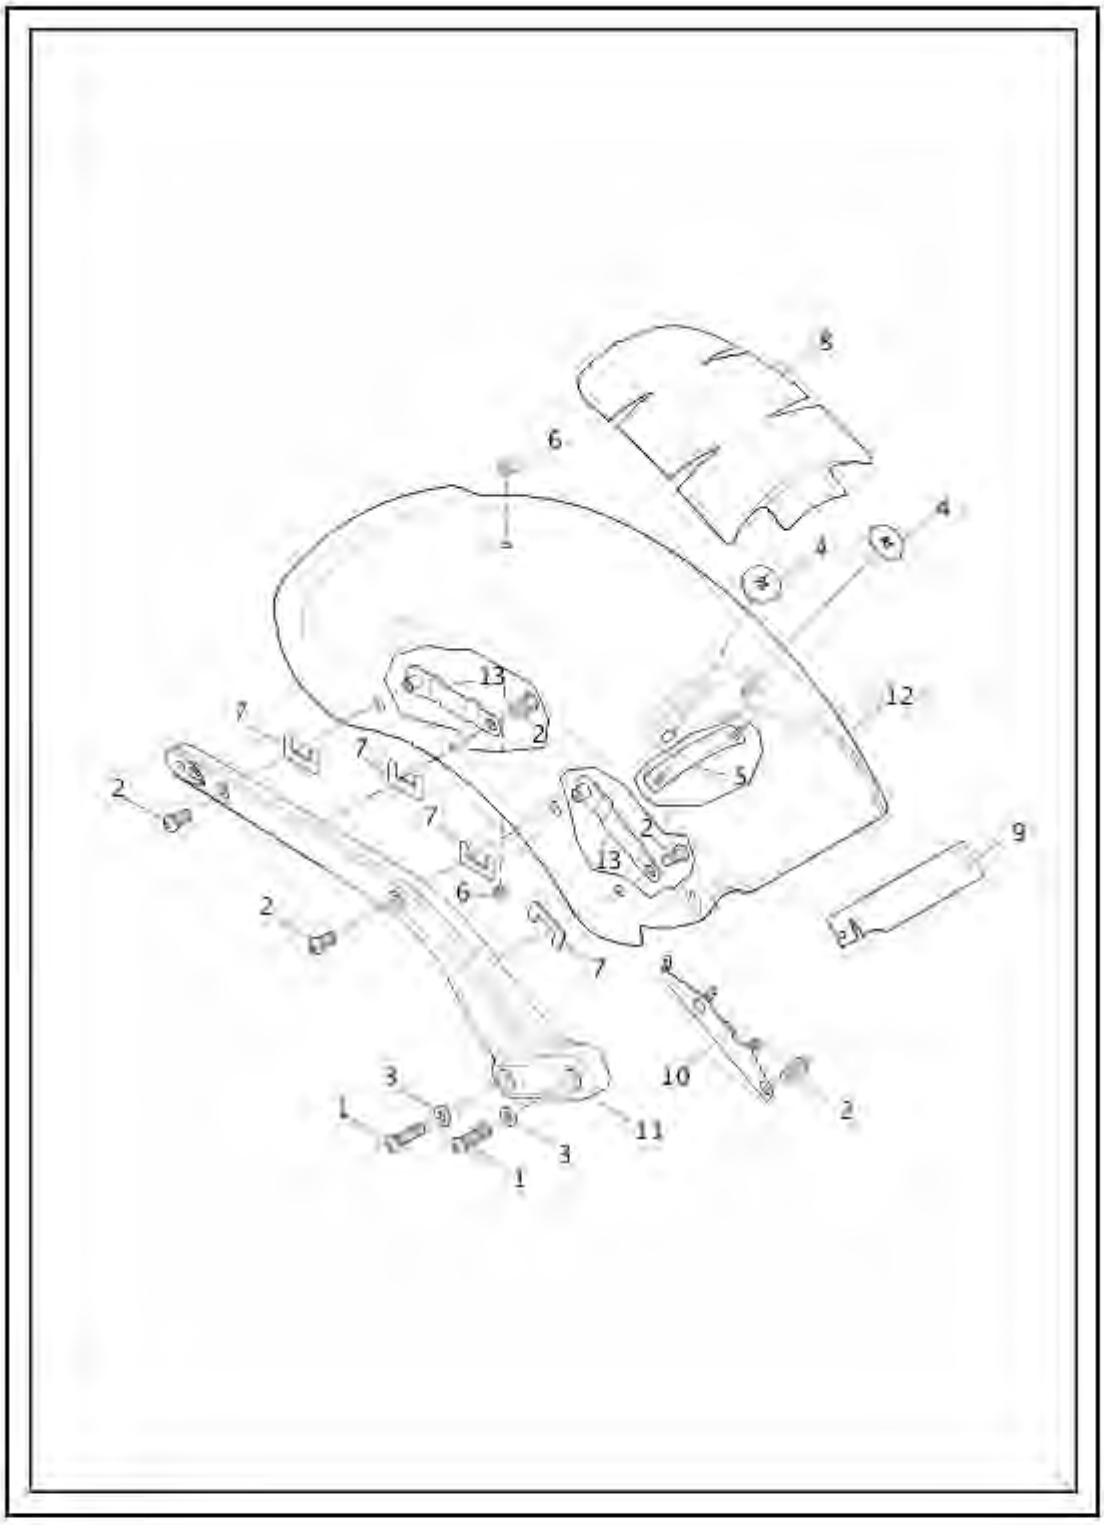

Index No.	Part No.	Description	Model(s)
NOTE: Refer to the Service Section of h-dnet.com for painted part numbers.			
1	3056	SCREW, (Canada) *(4)*	FXSB
2	4266A	SCREW *(2)*	FXSB
3	6400HB	WASHER *(4)*	FXSB
4	7434	WASHER *(2)*	FXSB
5	51803-07	STUD PLATE ASSEMBLY	FXSB
6	59768-97	FENDER SEAT NUT KIT, (Canada)	FXSB

7	11100066	RETENTION PAD *(8)*	FXSB
8	11100069	PROTECTIVE TAPE, (Canada)	FXSB
9	11100106	PROTECTIVE TAPE	FXSB
10	12200060	PLATE, wire retainer (Australia, England, HDI, India, Japan)	FXSB
11	59500103	SUPPORT, (right)	FXSB
	59500101	SUPPORT, (left)	FXSB
12	59500099	REAR FENDER, (prime)	FXSB
13	59500104	BRACKET, mounting *(4)*	FXSB

LICENSE PLATE BRACKETS - FLS AND FLSS

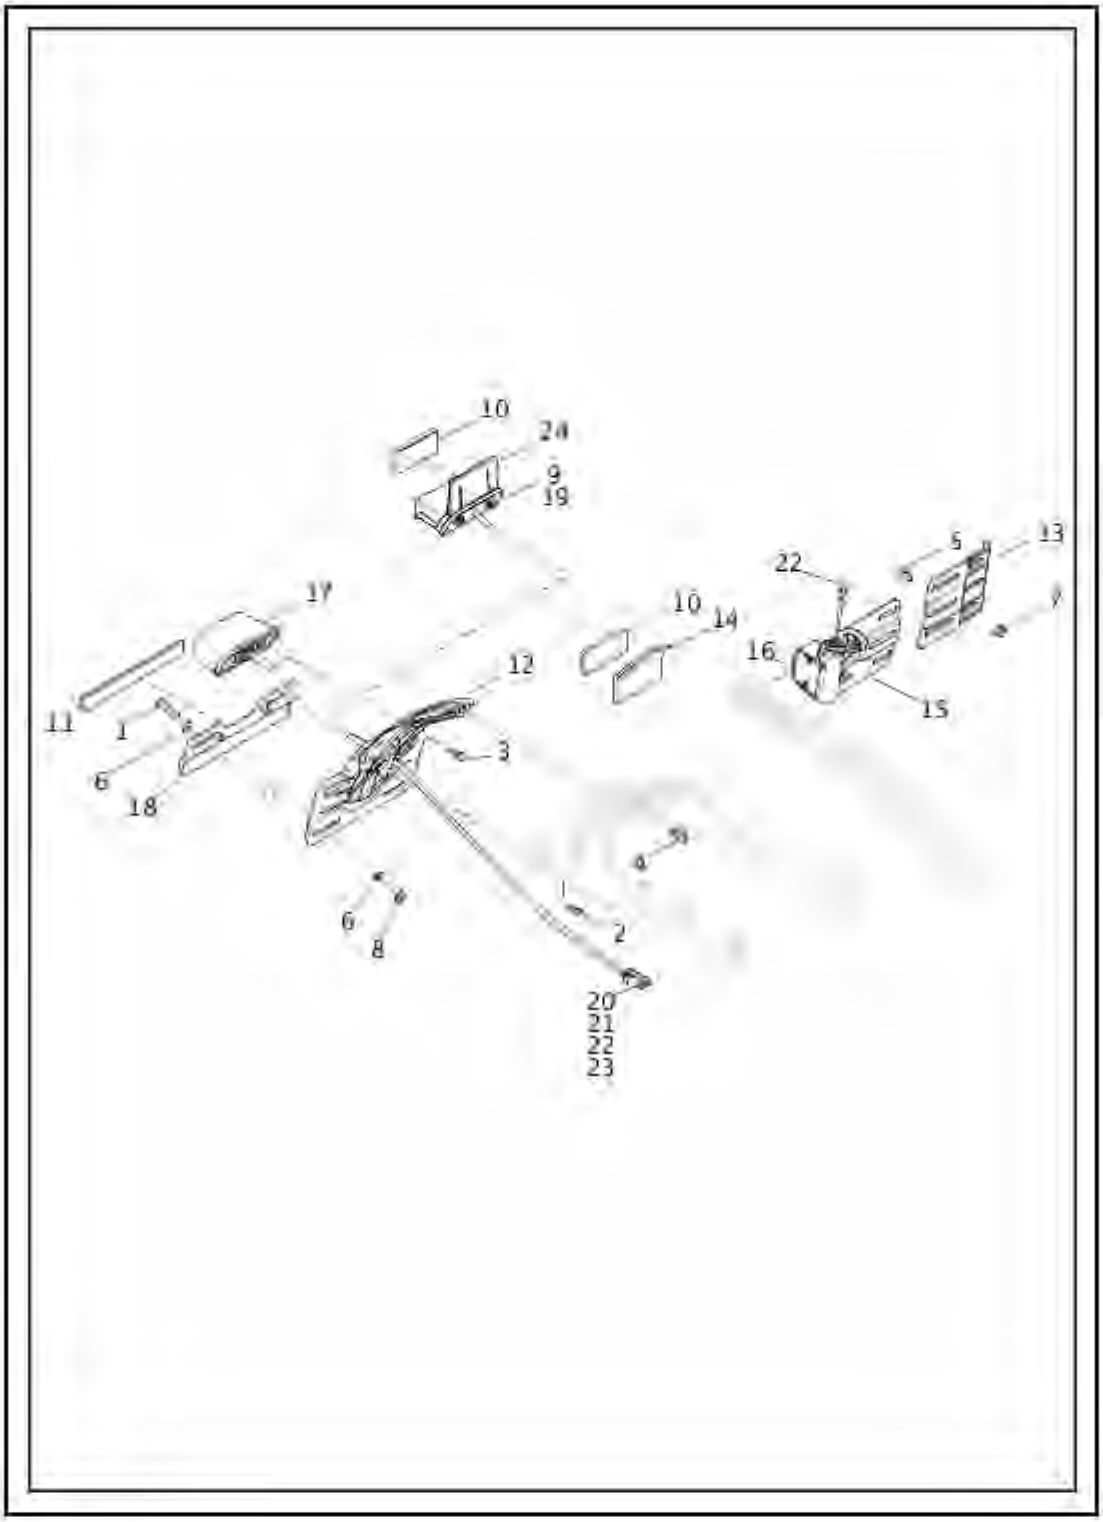

Index No.	Part No.	Description	Model(s)
1	940	SCREW, (Canada) *(2)*	FLS, FLSS
2	3387	SCREW, (Canada) *(2)*	FLS, FLSS
3	3612	SCREW *(2)*	FLS, FLSS
3	3612	SCREW, (Asia-Pacific, Australia, Canada, England, HDI, Japan) *(2)*	FLS, FLSS

4	4705	SCREW, (Asia-Pacific, Australia, Canada, England, HDI, Japan) *(2)*	FLS, FLSS
5	5403B	BOLT	FLS, FLSS
6	6703	WASHER, (Canada) *(4)*	FLS, FLSS
7	7716	LOCKNUT	FLS, FLSS
8	7792	NUT, (Canada) *(2)*	FLS, FLSS
9	52441-95	BULB, illuminator (Asia-Pacific, Australia, England, HDI, Japan) *(2)*	FLS, FLSS
10	59259-90	REFLECTOR, (red)	FLS, FLSS
11	59988-72A	REFLECTOR, (red) (Canada)	FLS, FLSS
12	60154-11	BRACKET, license plate (Asia-Pacific, Australia, Canada, England, HDI, Japan)	FLS, FLSS
13	68702-07	BRACKET, license plate, adjustable	FLS, FLSS
14	69557-10	BLOCK, mounting	FLS, FLSS
15	67900115	LICENSE PLATE ASSEMBLY	FLS, FLSS
16	67900117	ILLUMINATOR	FLS, FLSS
17	73403-11	TAIL LAMP ASSEMBLY, (Canada)	FLS, FLSS
18	73410-11	BRACKET, reflector (Canada)	FLS, FLSS
19	73504-11	ILLUMINATOR, license plate (Asia-Pacific, Australia, England, HDI, Japan)	FLS, FLSS
20	74113-98BK	HOUSING, three-way socket (black) (Asia-Pacific, Australia, Canada, England, HDI, Japan)	FLS, FLSS
21	74153-98	SECONDARY LOCK, three-way socket (black) (Asia-Pacific, Australia, Canada, England, HDI, Japan)	FLS, FLSS
22	74191-98	SOCKET TERMINAL, (Asia-Pacific, Australia, Canada, England, HDI, Japan) *(2)*	FLS, FLSS
23	74195-98	SEAL PIN, (Asia-Pacific, Australia, Canada, England, HDI, Japan) *(2)*	FLS, FLSS
24	67900231	BRACKET, with 59259-90(HDI)	FLS, FLSS

LICENSE PLATE BRACKETS - FXSB

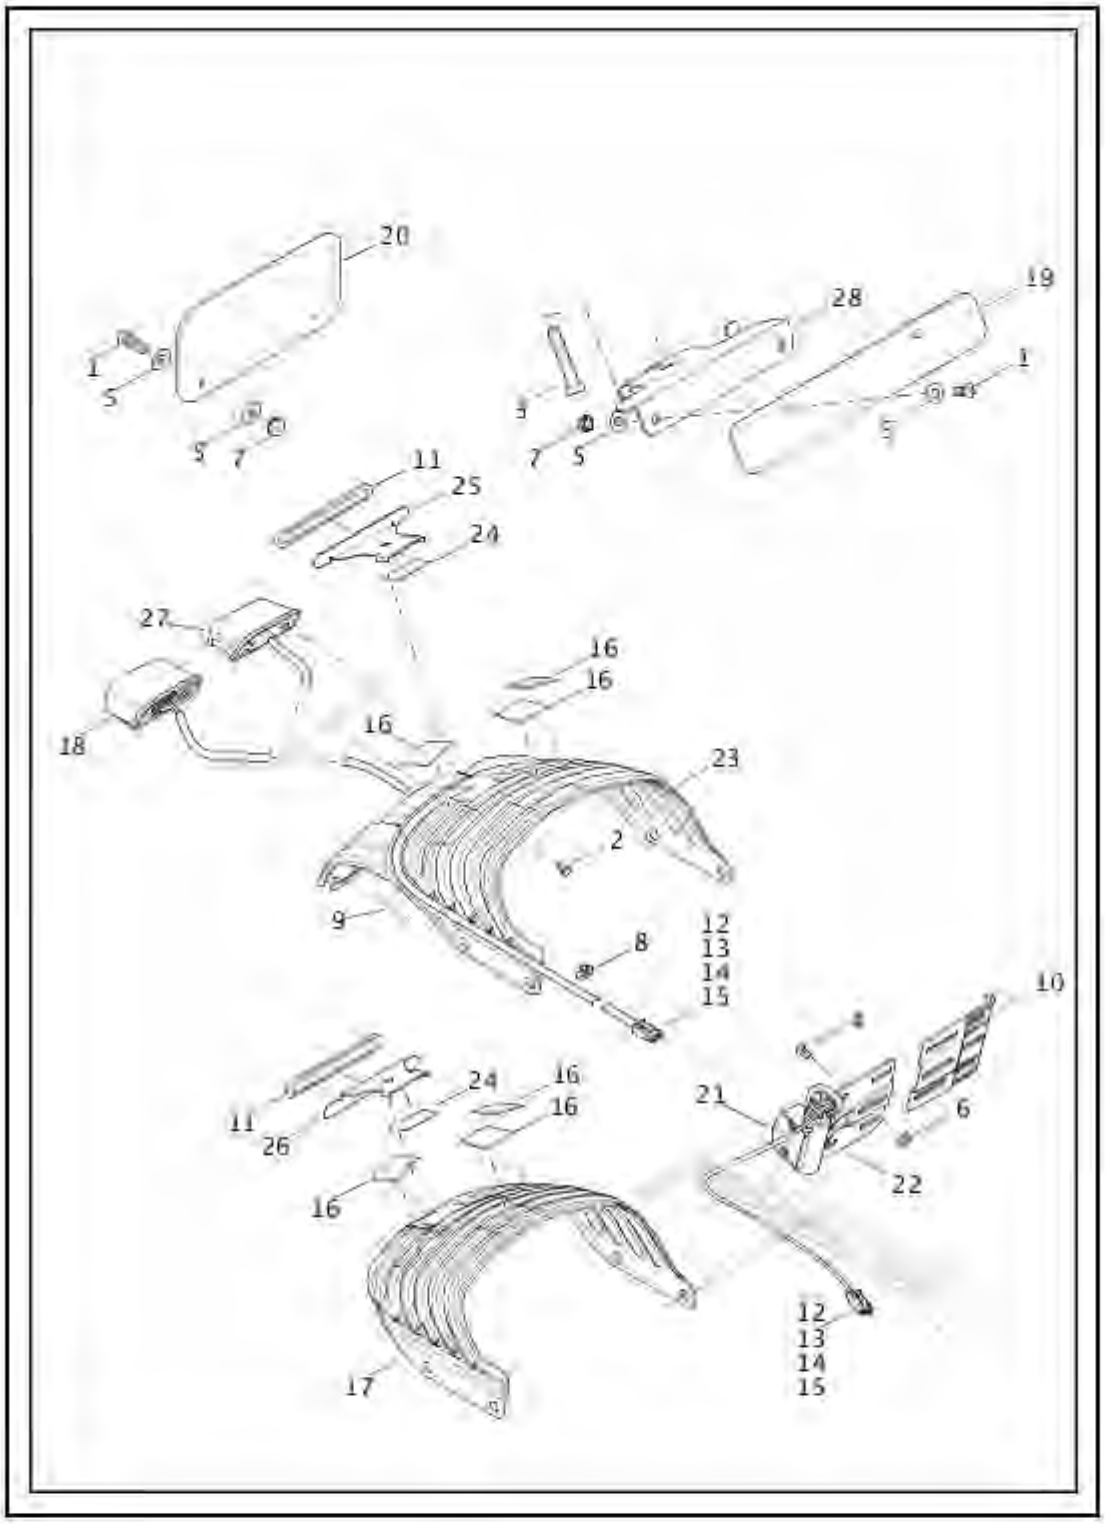

Index No.	Part No.	Description	Model(s)
1	927A	SCREW, (India) *(4)*	FXSB
2	4091	SCREW, (Canada, HDI) *(2)*	FXSB
3	4380W	BOLT, (India)	FXSB
4	5403B	BOLT	FXSB
5	6703	WASHER, (India) *(8)*	FXSB
6	7716	LOCKNUT	FXSB

7	7792	NUT, (India) *(4)*	FXSB
8	10177	CABLE STRAP, with plug-in retainer (Canada, HDI)	FXSB
9	58382-89	SEAL, (Canada, HDI)	FXSB
10	68702-07	BRACKET, license plate, adjustable	FXSB
11	69490-07	REFLECTOR, red	FXSB
12	74113-98BK	HOUSING, three-way socket (black) (Canada, HDI)	FXSB
13	74153-98	SECONDARY LOCK, three-way socket (black) (Canada, HDI)	FXSB
14	74191-98	SOCKET TERMINAL, (Canada, HDI) *(2)*	FXSB
15	74195-98	SEAL PIN, (HDI) *(2)*	FXSB
16	11100103	TAPE, pad mounting *(3)*	FXSB
17	59500108	INNER SUPPORT, (Domestic)	FXSB
18	67800244	TAIL LIGHT ASSEMBLY, (Canada)	FXSB
19	67900089	LICENSE PLATE, front (India)	FXSB
20	67900093	LICENSE PLATE, rear (India)	FXSB
21	67900117	ILLUMINATOR	FXSB
22	67900145	LICENSE PLATE BRACKET, with 67900117	FXSB
23	67900147	BRACKET, license plate support(Canada, HDI)	FXSB
24	67900163	TAPE, reflector	FXSB
25	67900164	REFLECTOR ASSEMBLY, with 67900163 (Canada, HDI)	FXSB
26	67900165	REFLECTOR ASSEMBLY, with 67900163 (Domestic)	FXSB
27	67900166	LIGHT, license plate (HDI)	FXSB
28	67900283	BRACKET, license plate, front (India)	FXSB

LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS

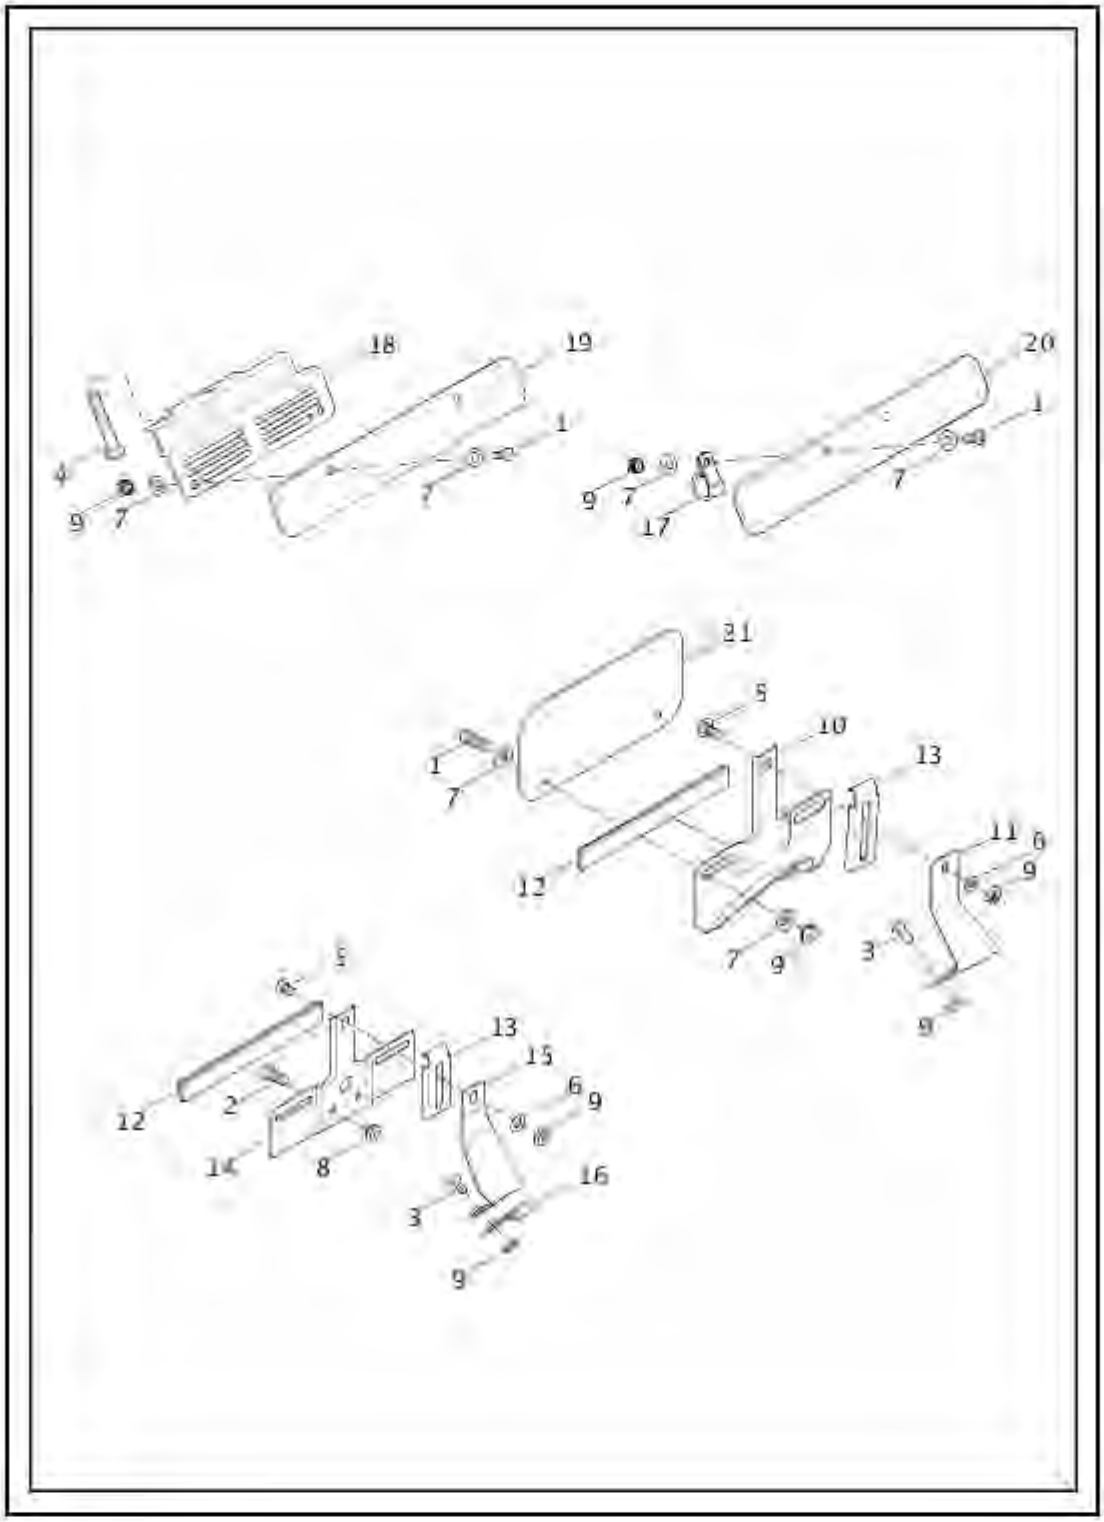

Index No.	Part No.	Description	Model(s)
1	927A	SCREW, (India) *(4)*	FLSTC, FLSTF, FLSTFB
2	2604	SCREW *(2)*	FLSTN
3	2773	SCREW *(3)*	FLSTC, FLSTF, FLSTFB, FLSTFBS
	2773	SCREW *(2)*	FLSTN
4	4380W	BOLT, (India)	FLSTF, FLSTFB
5	5403B	BOLT	FLSTC, FLSTF, FLSTN, FLSTFB, FLSTFBS
6	6110	WASHER	FLSTC, FLSTF, FLSTN, FLSTFB, FLSTFBS

7	6703	WASHER, (India) *(8)*	FLSTC, FLSTF, FLSTFB
8	7629	NUT *(2)*	FLSTN
9	7792	NUT *(3)*	FLSTC, FLSTN, FLSTFBS
	7792	NUT, (India) *(4)*	FLSTC, FLSTF, FLSTFB
10	59984-73	BRACKET, license plate	FLSTC, FLSTF, FLSTFB, FLSTFBS
11	59986-75	SUPPORT, license plate	FLSTC, FLSTF, FLSTFB, FLSTFBS
12	59988-72A	REFLECTOR	FLSTC, FLSTF, FLSTN, FLSTFB, FLSTFBS
13	60001-55	CLAMP	FLSTC, FLSTF, FLSTFB, FLSTFBS
	60003-89	CLAMP	FLSTN
14	60020-97	BRACKET, license plate	FLSTN
15	60021-97	SUPPORT, license plate	FLSTN
16	68004-05	CLIP	FLSTN
17	10800007	P-CLAMP, (India) *(2)*	FLSTC
18	67900016	BRACKET, license plate, front (India)	FLSTF, FLSTFB
19	67900089	LICENSE PLATE, front (India)	FLSTF, FLSTFB
20	67900092	LICENSE PLATE, front (India)	FLSTC
21	67900093	LICENSE PLATE, rear (India)	FLSTC, FLSTF, FLSTFB

FUEL TANK

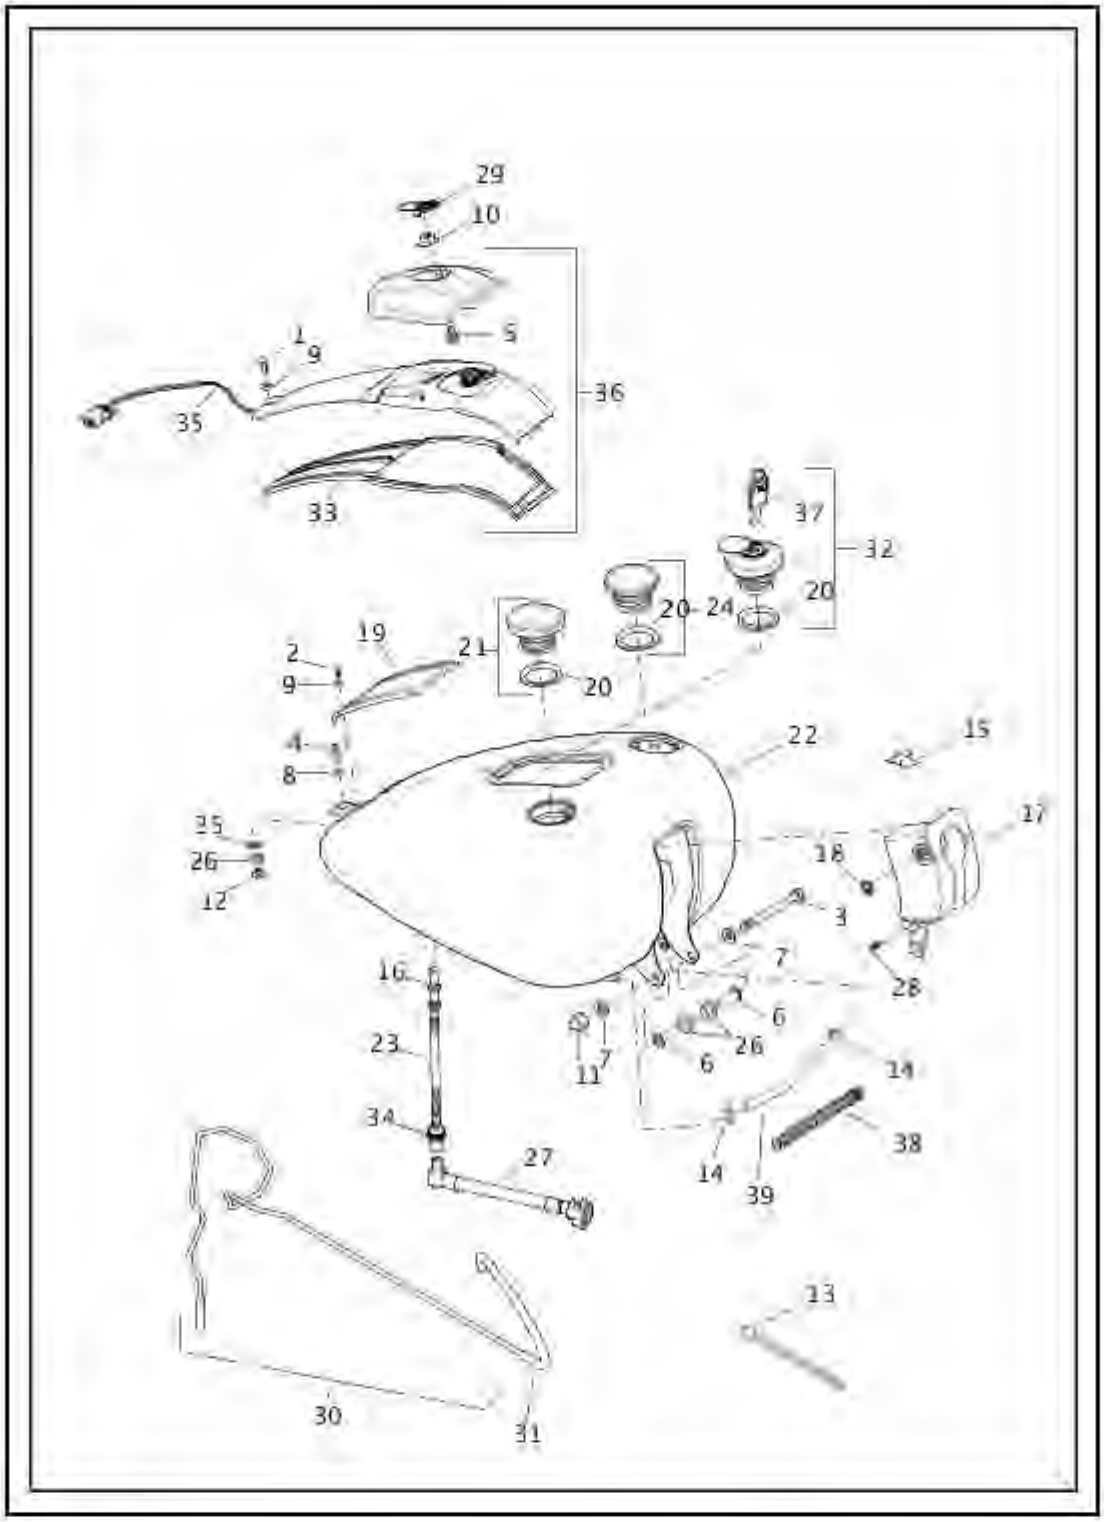

Index No.	Part No.	Description	Model(s)
NOTE: Refer to the Service Section of h-dnet.com for painted part numbers.			
1	2441	SCREW	FXSB
2	3017	SCREW	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
3	4197	BOLT	
4	4763	SCREW	
5	5471	BOLT	FXSB

6	5818A	BUSHING, front tank mount *(2)*	
7	6545	WASHER *(2)*	
8	6702	WASHER	
9	6716	WASHER	
10	7576	NUT	FXSB
11	7862	ACORN NUT	
12	7965	TEE NUT	
13	10006	CABLE STRAP *(2)*	
14	10038A	CLAMP, fuel crossover hose *(2)*	
15	10102	CLIP	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
16	11387A	O-RING	
17	11529	RUBBER TRIM, fuel tank	
18	11533	RETAINING RING *(2)*	
19	61183-10	TRIM PANEL, fuel tank	FLSTFB, FLSTF, FLSTFBS
	61257-05	TRIM PANEL, fuel tank	FLSTN
	61300537	TRIM PANEL, fuel tank	FLSTC
	70900170	TRIM PANEL, fuel tank	FLS, FLSS
20	61109-85D	GASKET	
21	61272-92C	CAP, fuel filler, right, with 61109-85D	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
22	61625-11	FUEL TANK, 5 gallon (prime)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
	62322-11	FUEL TANK, 5 gallon (prime) (not shown)	FXSB
23	62189-08A	CHECK VALVE, out	
24	62543-11	CAP, fuel, low profile with 61109-85D	FXSB
25	62880-00	GROMMET, fuel tank, upper rear	
26	62881-00	GROMMET, fuel tank, lower rear and front *(3)*	
27	62900-01D	FUEL LINE, from tank to intake	
28	12600067	FASTENER, plastic	
29	14100435	MEDALLION, tank console	FXSB
30	61100001	VENT LINE ASSEMBLY, fuel tank to vapor valve (except California and Asia-Pacific)	
31	61100003	VENT HOSE, (except California and Asia-Pacific)	

32	61100055	CAP, fuel, locking with 90300093 (Asia-Pacific, Japan)	FLSS, FLSTFBS
33	61300170A	GASKET	FXSB
34	11323	O-RING, check valve to fuel tank	
35	69200531	WIRING HARNESS, fuel pump	FXSB
36	70900323A	CONSOLE, with 61300170A, 69200531	FXSB
37	90300093	KEY, locking fuel cap (set of two) (Asia-Pacific, Japan)	FLSS, FLSTFBS
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
38	62555-95	INSULATOR, 5/8 in ID (nylon) (8 ft length)	
39	63521-95A	HOSE, 5/16 in ID x 5/8 in OD (rubber) (25 ft length)	

INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN

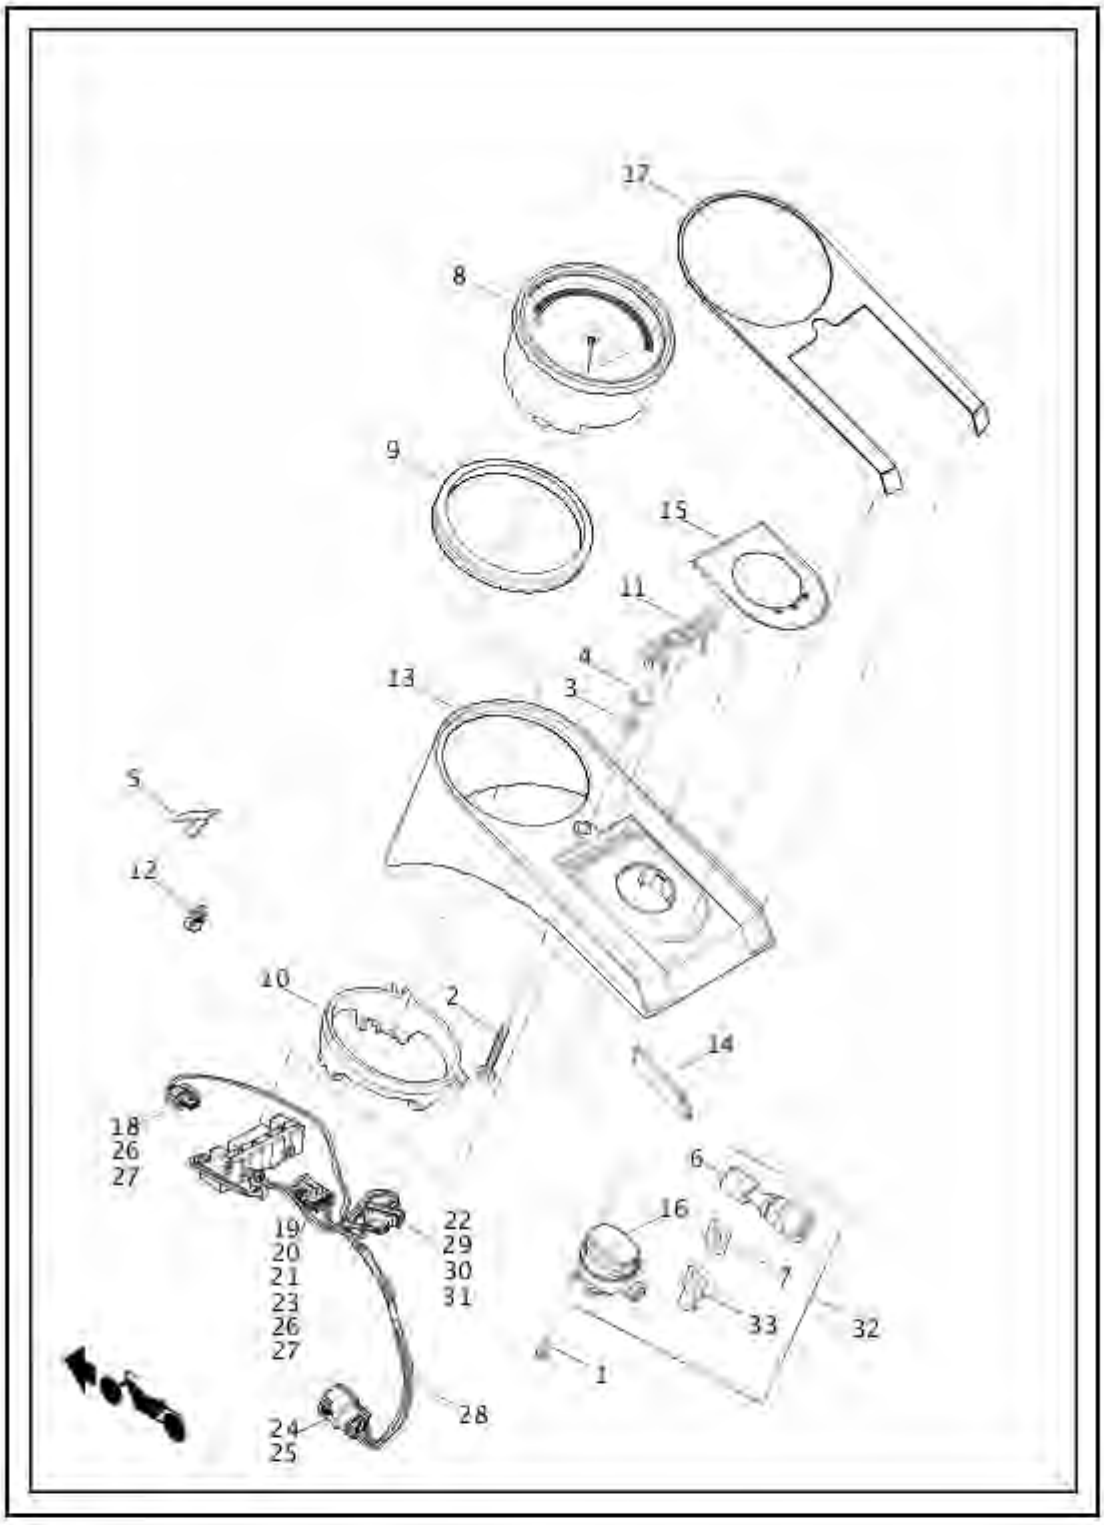

Index No.	Part No.	Description	Model(s)
1	2501A	SCREW *(4)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
2	5419	BOLT	FLSTF, FLSTN, FLSTFB, FLSTFBS
3	6771A	WASHER	FLSTF, FLSTN, FLSTFB, FLSTFBS
4	7549A	ACORN NUT	FLSTF, FLSTN, FLSTFB, FLSTFBS

5	10103	CLIP, adhesive backed	FLSTF, FLSTN, FLSTFB, FLSTFBS
6	45680-90	FORK LOCK	FLSTF, FLSTN, FLSTFB, FLSTFBS
7	61081-92	COVER, key head set *(2)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
8	67033-11B	SPEEDOMETER, mph	FLSTF, FLSTFB, FLSTFBS
	67439-11C	SPEEDOMETER, mph	FLSTN
	67197-11A	SPEEDOMETER, km/h (HDI, Asia-Pacific, Brazil, Australia, Canada, Japan)	FLSTF, FLSTN, FLSTFB, FLSTFBS
	67196-11A	SPEEDOMETER, mph/km/h (England)	FLSTF, FLSTN, FLSTFB, FLSTFBS
9	67190-89	SEAL, speedometer	FLSTF, FLSTN, FLSTFB, FLSTFBS
10	67271-04A	BACKCLAMP	FLSTF, FLSTN, FLSTFB, FLSTFBS
11	68112-99A	BEZEL, indicator lamps	FLSTF, FLSTN, FLSTFB, FLSTFBS
12	70345-84	RETAINER, wiring	FLSTF, FLSTN, FLSTFB, FLSTFBS
13	71250-11	INSTRUMENT PANEL, (chrome)	FLSTF, FLSTN
	71257-11	INSTRUMENT PANEL, (satin chrome)	FLSTFB
	70900622	INSTRUMENT PANEL, (gloss black)	FLSTFBS
14	71265-95	TRIM, instrument panel	FLSTF, FLSTN, FLSTFB, FLSTFBS
15	71302-93A	NAMEPLATE, ignition switch (satin black)	FLSTF, FLSTFB, FLSTFBS
	71669-05	NAMEPLATE, ignition switch (gloss black)	FLSTN
16	71517-11	IGNITION SWITCH, (specify key number)	FLSTF, FLSTN, FLSTFB, FLSTFBS
17	71664-05	NAMEPLATE INLAY, console	FLSTF, FLSTN, FLSTFB
18	72062-06	HOUSING, two-way socket *(2)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
19	72066-06A	HOUSING, four-way socket (black) *(3)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
20	72094-06	TERMINAL, socket, 18 AWG *(2)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
21	72096-06	WIRE SEAL, 18 AWG (yellow) *(2)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
22	72130-04	HOUSING, 12-way socket (black)	FLSTF, FLSTN, FLSTFB,

			FLSTFBS
23	72135-06	SECONDARY LOCK, four-way socket (gray) *(3)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
24	72168-07	TERMINAL, socket, 18-20 AWG *(12)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
25	72479-07BK	HOUSING, eight-way socket (black)	FLSTF, FLSTN, FLSTFB, FLSTFBS
26	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
27	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
28	72657-12	WIRING HARNESS, instrument controls	FLSTF, FLSTN, FLSTFB, FLSTFBS
29	72662-11	TERMINAL, socket, 22 AWG *(5)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
30	74196-04	TERMINAL, socket, 20 AWG *(4)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
31	74197-04	SECONDARY LOCK, 12-way socket	FLSTF, FLSTN, FLSTFB, FLSTFBS
32	71400076	IGNITION SWITCH AND FORK LOCKSET, with 90300043 keys, ignition switch and fork lock	FLSTF, FLSTN, FLSTFB, FLSTFBS
33	90300043	KEY, with 61081-92 (set of two) (specify key number)	FLSTF, FLSTN, FLSTFB, FLSTFBS

INSTRUMENTS - FLS, FLSS AND FLSTC

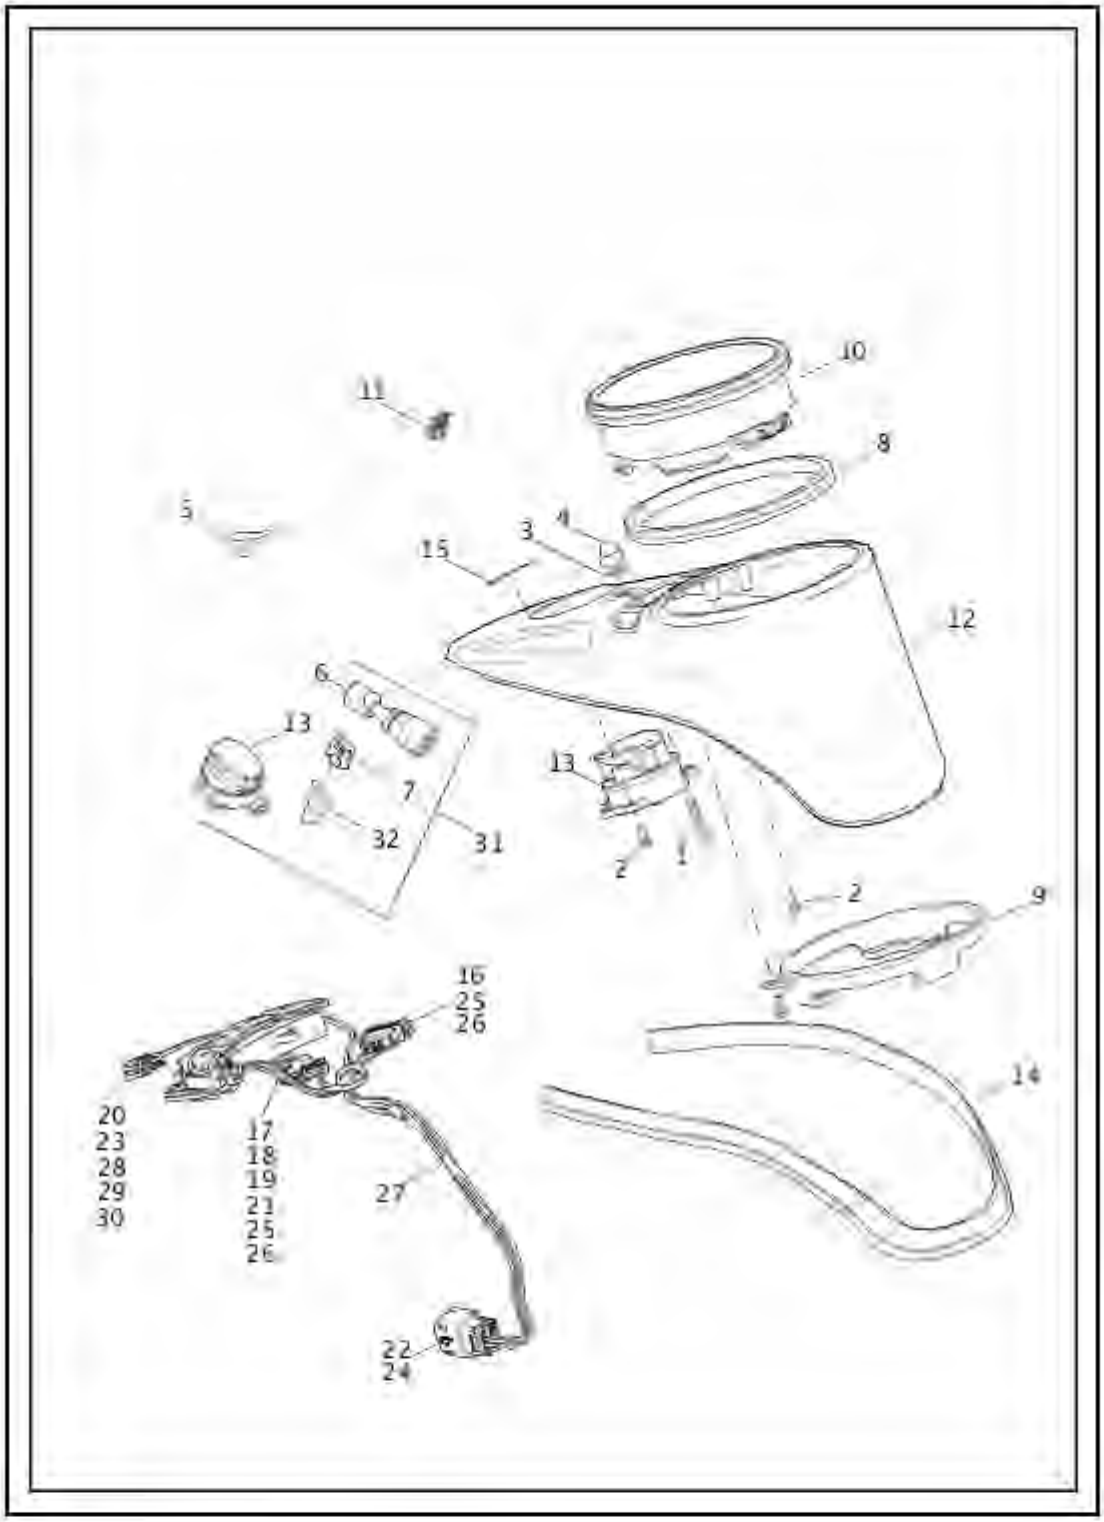

Index No.	Part No.	Description	Model(s)
1	5442	CARRIAGE BOLT	FLSTC, FLS, FLSS
2	2501A	SCREW *(8)*	FLSTC, FLS, FLSS
3	6771A	WASHER	FLSTC, FLS, FLSS
4	7549A	ACORN NUT	FLSTC, FLS, FLSS

5	10103	CLIP, adhesive backed	FLSTC, FLS, FLSS
6	45680-90	FORK LOCK	FLSTC, FLS, FLSS
7	61081-92	COVER, key	FLSTC, FLS, FLSS
8	67190-89	SEAL	FLSTC, FLS, FLSS
9	67341-04B	BACKCLAMP	FLSTC, FLS, FLSS
10	67525-11B	SPEEDOMETER, mph	FLSTC
	70700-11B	SPEEDOMETER, mph	FLS, FLSS
	67196-11A	SPEEDOMETER, mph/km/h (England)	FLSTC, FLS, FLSS
	67197-11A	SPEEDOMETER, km/h (HDI, Asia-Pacific, Australia, Brazil, Canada, India, Japan)	FLSTC, FLS, FLSS
11	70345-84	RETAINER, wiring	FLSTC, FLS, FLSS
12	71512-11	INSTRUMENT PANEL, (chrome)	FLSTC
	71953-11	INSTRUMENT PANEL, (gloss black)	FLS, FLSS
13	71517-11	IGNITION SWITCH, (specify key number)	FLSTC, FLS, FLSS
14	71978-08	TRIM, rubber	FLSTC, FLS, FLSS
15	71990-09	NAMEPLATE, ignition switch	FLSTC
	71989-08	NAMEPLATE, ignition switch	FLS, FLSS
16	72062-06	HOUSING, two-way socket *(2)*	FLSTC, FLS, FLSS
17	72066-06A	HOUSING, four-way socket (black) *(3)*	FLSTC, FLS, FLSS
18	72094-06	TERMINAL, socket, 18 AWG *(2)*	FLSTC, FLS, FLSS
19	72096-06	WIRE SEAL, 18 AWG (yellow) *(2)*	FLSTC, FLS, FLSS
20	72130-04	HOUSING, 12-way socket (black)	FLSTC, FLS, FLSS
21	72135-06	SECONDARY LOCK, four-way socket (gray) *(3)*	FLSTC, FLS, FLSS
22	72168-07	TERMINAL, socket, 18-20 AWG *(12)*	FLSTC, FLS, FLSS

23	72189-04	SEAL PIN *(2)*	FLSTC, FLS, FLSS
24	72479-07BK	HOUSING, eight-way socket (black)	FLSTC, FLS, FLSS
25	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLSTC, FLS, FLSS
26	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLSTC, FLS, FLSS
27	72658-12	HARNESS, instrument console, with LED indicator array	FLSTC, FLS, FLSS
28	72662-11	TERMINAL, socket, 22 AWG *(5)*	FLSTC, FLS, FLSS
29	74196-04	TERMINAL, socket, 20 AWG *(4)*	FLSTC, FLS, FLSS
30	74197-04	SECONDARY LOCK, 12-way socket	FLSTC, FLS, FLSS
31	71400076	IGNITION SWITCH AND FORK LOCKSET, with 90300043 keys, ignition switch and fork lock	FLSTC, FLS, FLSS
32	90300043	KEY, with 61081-92 (set of two) (specify key number)	FLSTC, FLS, FLSS

INSTRUMENTS - FXSB

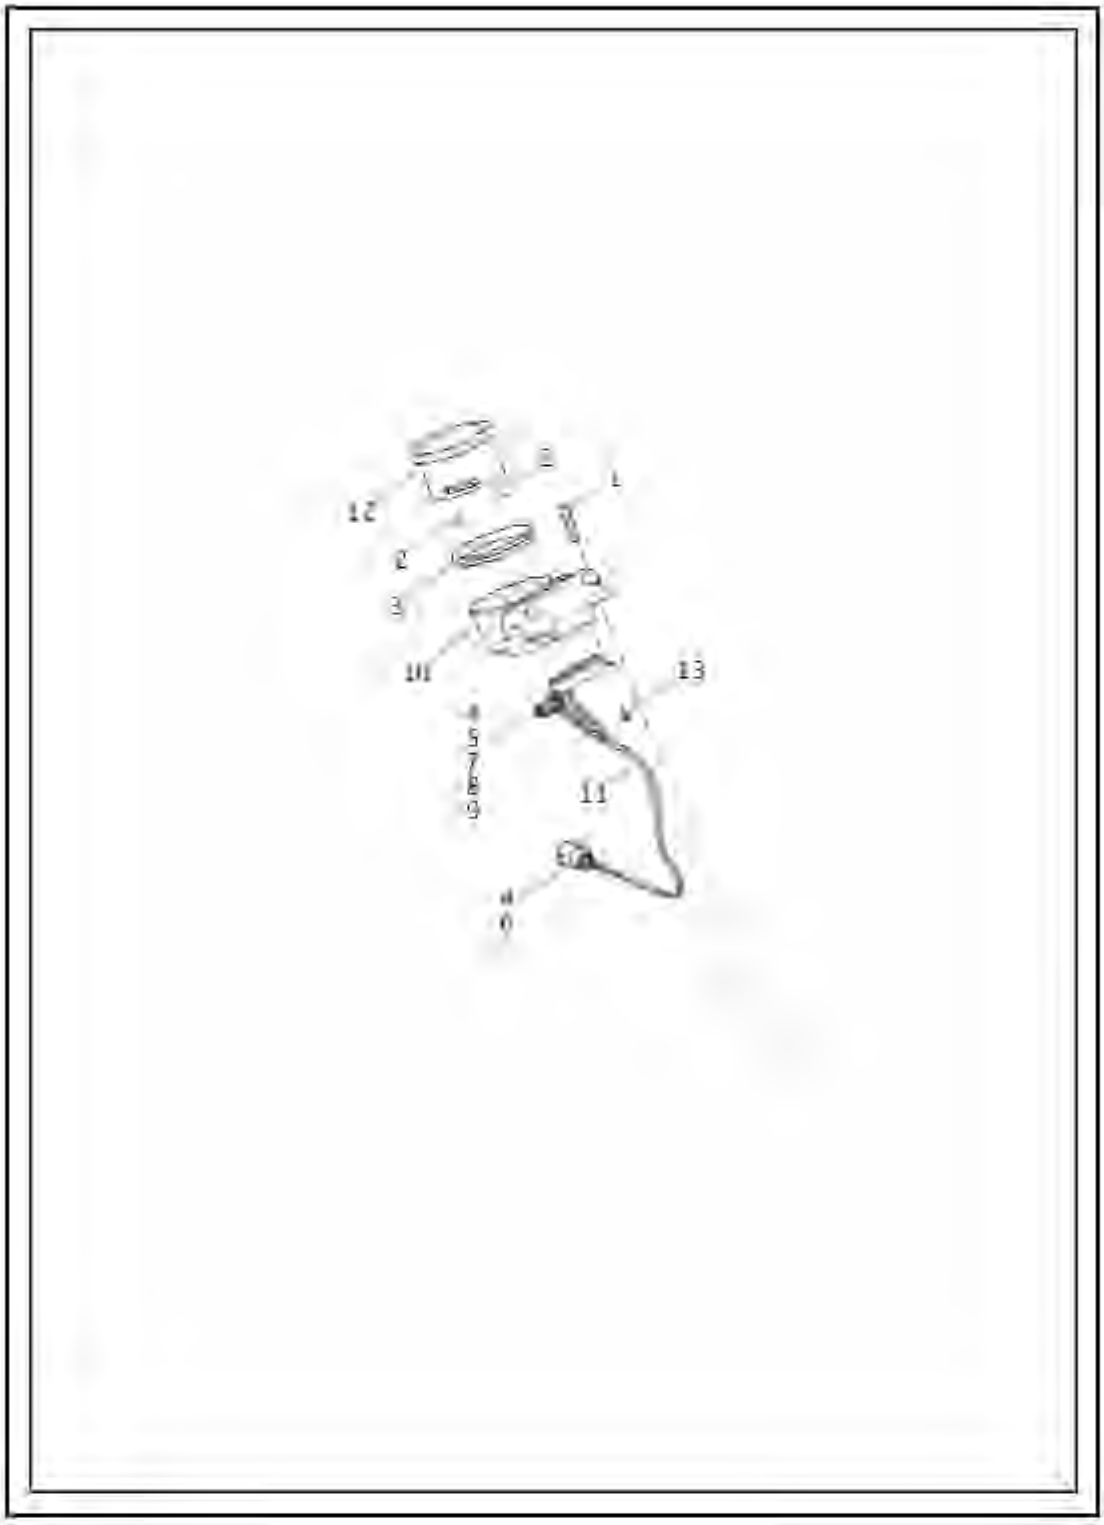

Index No.	Part No.	Description	Model(s)
1	3210A	SCREW *(2)*	FXSB
2	3656	SCREW *(2)*	FXSB
3	67121-95A	GASKET	FXSB
4	72130-04	HOUSING, 12-way, socket (black)	FXSB
5	72189-04	SEAL PIN *(5)*	FXSB
6	72546-09GY	HOUSING, six-way, socket (gray)	FXSB
7	72662-11	TERMINAL, socket, 22 AWG *(5)*	FXSB

8	74196-04	TERMINAL, socket, 20 AWG *(5)*	FXSB
9	74197-04	SECONDARY LOCK, 12-way, socket	FXSB
10	55900043	UPPER CLAMP, with speedometer housing	FXSB
11	69200530	HARNESS, instrument	FXSB
12	70900369C	SPEEDOMETER, mph	FXSB
	70900370A	SPEEDOMETER, km/h (Australia, Brazil, Canada, HDI, Japan)	FXSB
	70900371A	SPEEDOMETER, mph/km/h (England)	FXSB
13	2501A	SCREW *(2)*	FXSB

FUEL PUMP

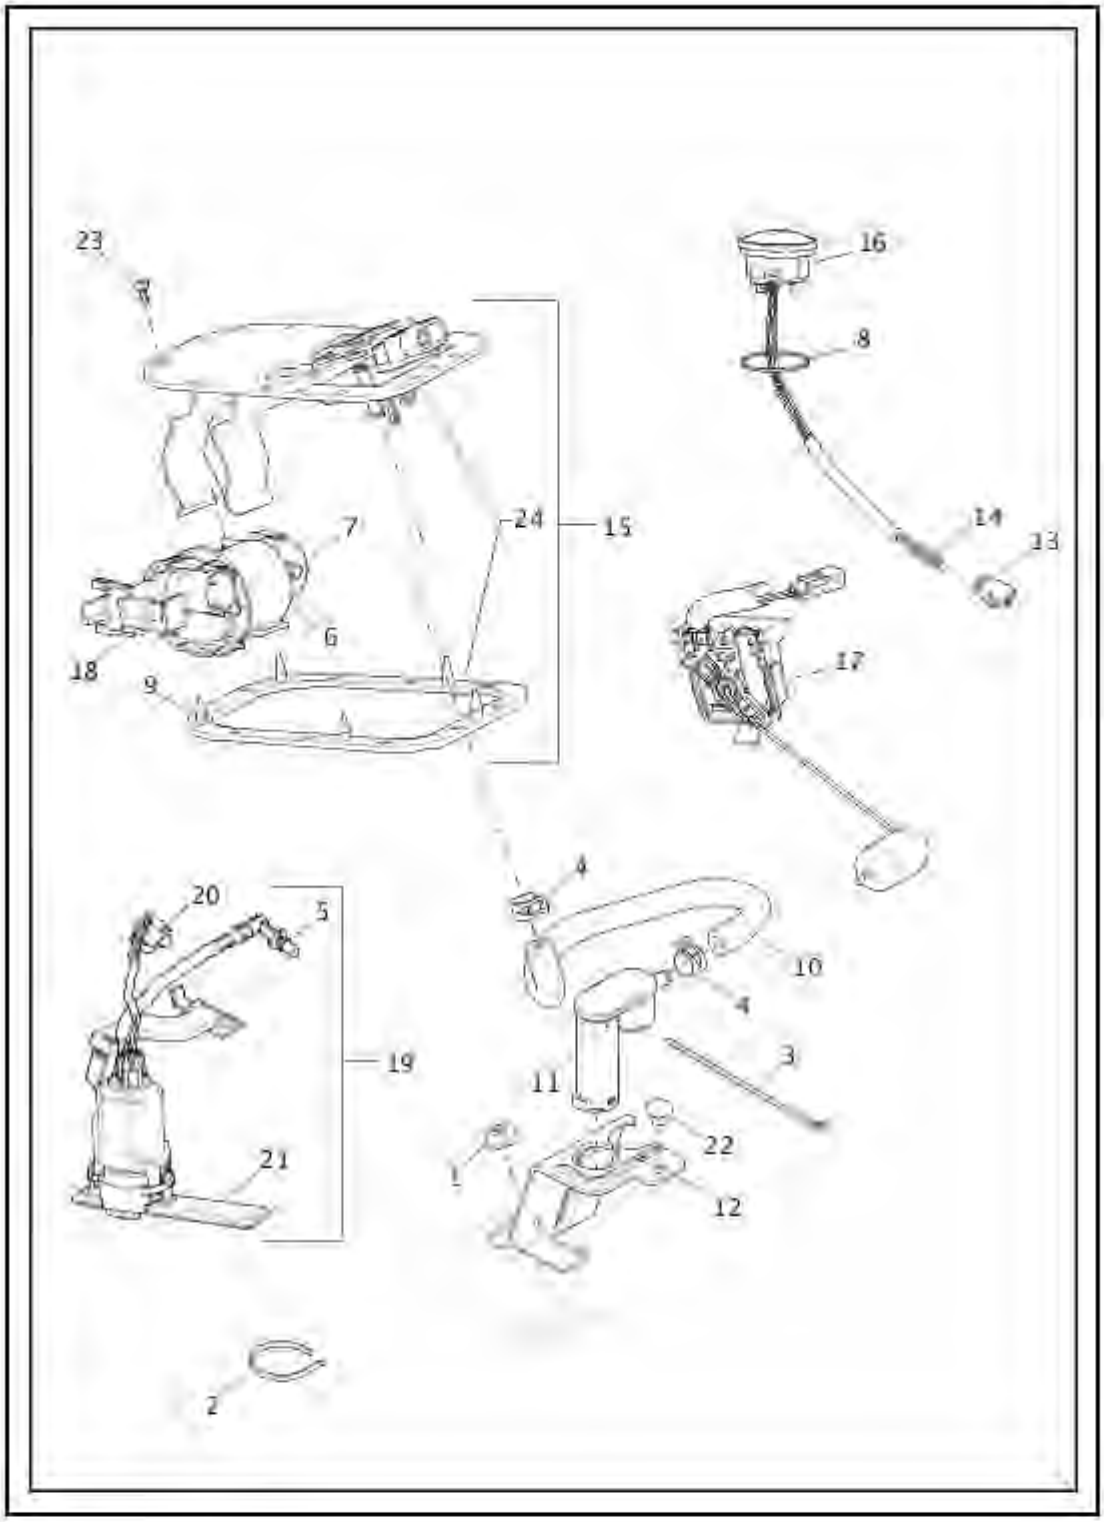

Index No.	Part No.	Description	Model(s)
1	7576	NUT	
2	10006	CABLE STRAP *(2)*	
3	10065	CABLE STRAP	
4	10871	CLAMP *(2)*	
5	11387A	O-RING	
6	61011-04A	FILTER, fuel with O-ring	

7	61015-04A	FUEL REGULATOR KIT, with O-rings, spacer and screen	
8	61192-96A	GASKET, fuel gauge	FLSTF, FLSTFB, FLSTN, FLS, FLSTC, FLSS, FLSTFBS
9	61381-02A	GASKET, top plate	
10	62143-11	TUBE, roll over valve to top plate	
11	62155-11	VALVE, roll over	
12	62158-11	BRACKET, roll over valve	
13	72904-01BK	HOUSING, four-way pin	FLSTF, FLSTFB, FLSTN, FLS, FLSTC, FLSS, FLSTFBS
14	72990-01	TERMINAL, pin *(3)*	FLSTF, FLSTFB, FLSTN, FLS, FLSTC, FLSS, FLSTFBS
15	75141-11A	TOP PLATE ASSEMBLY, with 61381-02A and 75282-08A	FLSTF, FLSTN, FLSTFB, FLSTFBS
	75252-11A	TOP PLATE ASSEMBLY, with 61381-02A and 75282-08A	FLSTC, FLS, FXSB, FLSS
16	75241-08	FUEL GAUGE	FLSTF, FLSTFB, FLSTN, FLS, FLSTC, FLSS, FLSTFBS
17	75276-08A	SENDER, fuel level	
18	75282-08A	FILTER MODULE ASSEMBLY	
19	75284-08A	MODULE ASSEMBLY, fuel pump with 75289-08 and 75290-08	
20	75289-08	KIT-HARNESS ASSEMBLY, fuel pump	
21	75290-08	STRAINER, fuel pump	
22	91072-11	BUMPER, rubber	
23	10200374	SCREW *(10)*	
24	60900001	TOP PLATE, with 61381-02A	FLSTF, FLSTN, FLSTFB, FLSTFBS
	60900003	TOP PLATE, with 61381-02A	FXSB, FLSTC, FLS, FLSS

EVAPORATIVE EMISSIONS COMPONENTS

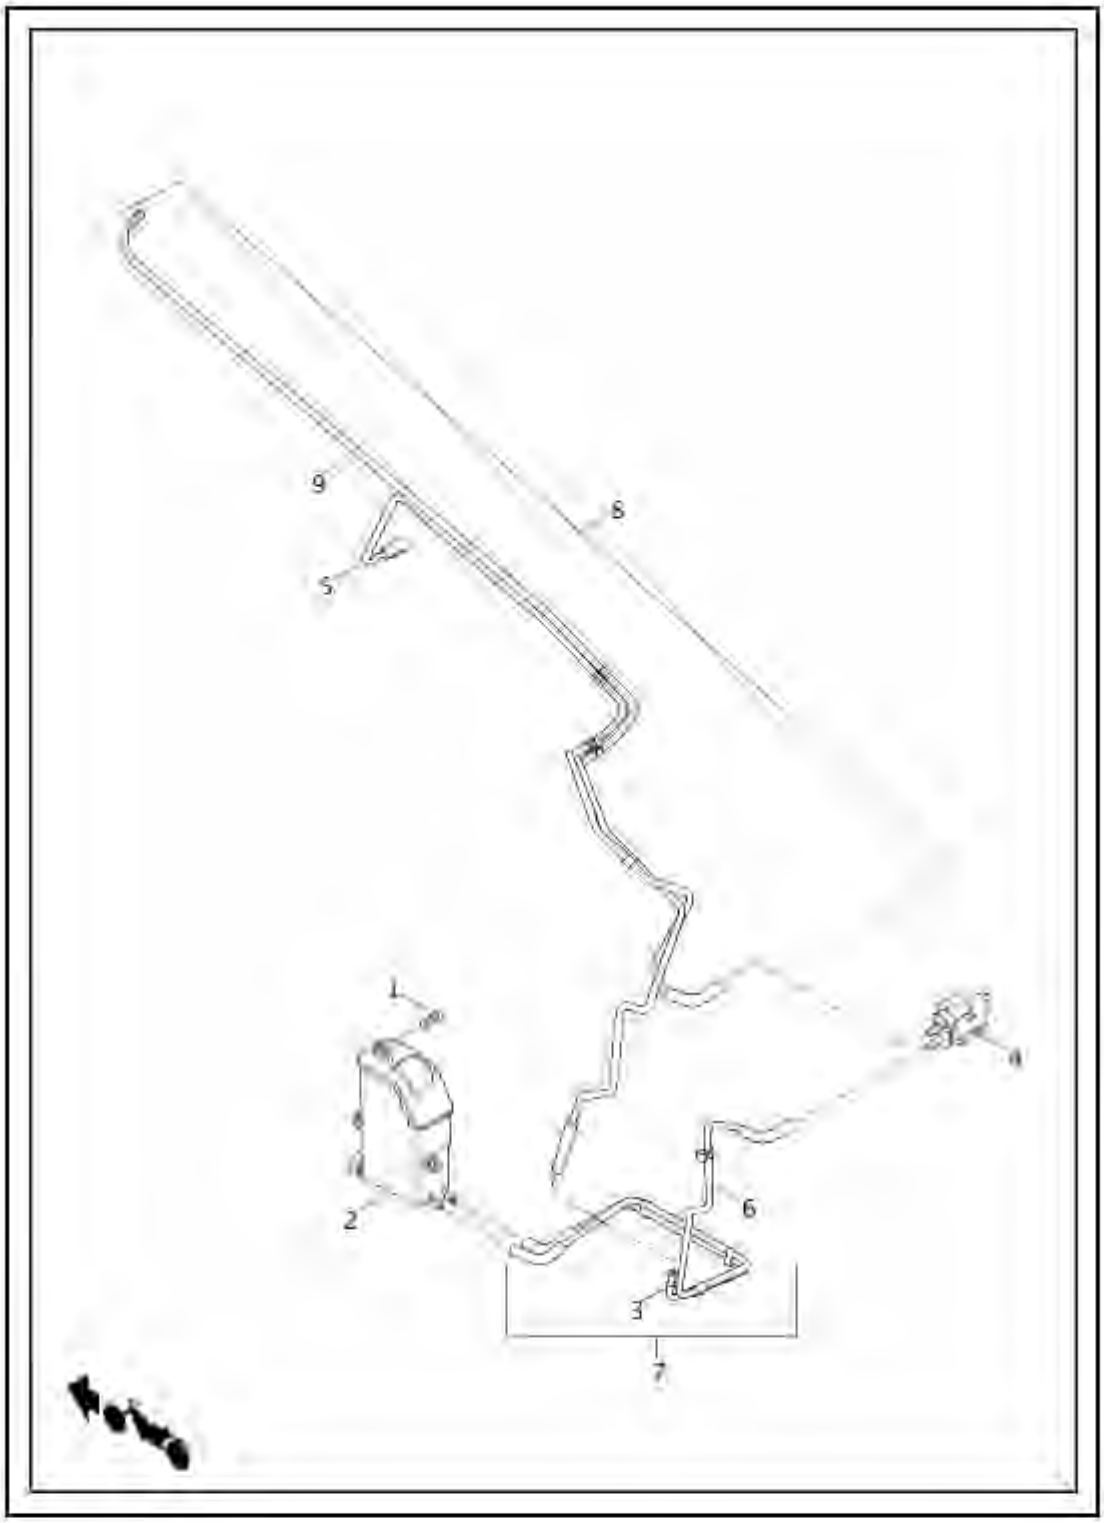

Index No.	Part No.	Description	Model(s)
NOTE: These parts are required for motorcycles sold in the state of California.			
1	940	SCREW *(3)*	
2	27050-11	CARBON CANISTER ASSEMBLY	
3	27246-11	EVAPORATIVE LINE, tank to canister	
4	27715-07	PURGE SOLENOID	
5	28839-11	VENTLINE ASSEMBLY	
6	28860-11	HOSE, canister to purge	

7	28864-11	VENTLINE ASSEMBLY, with 27246-11 and 28860-11 (lower)	
8	60800007	EVAPORATIVE SYSTEM ASSEMBLY, with 28839-11 and 61100001 (upper)	
9	61100001	VENTLINE ASSEMBLY, tank	

FUEL TANK TRIM

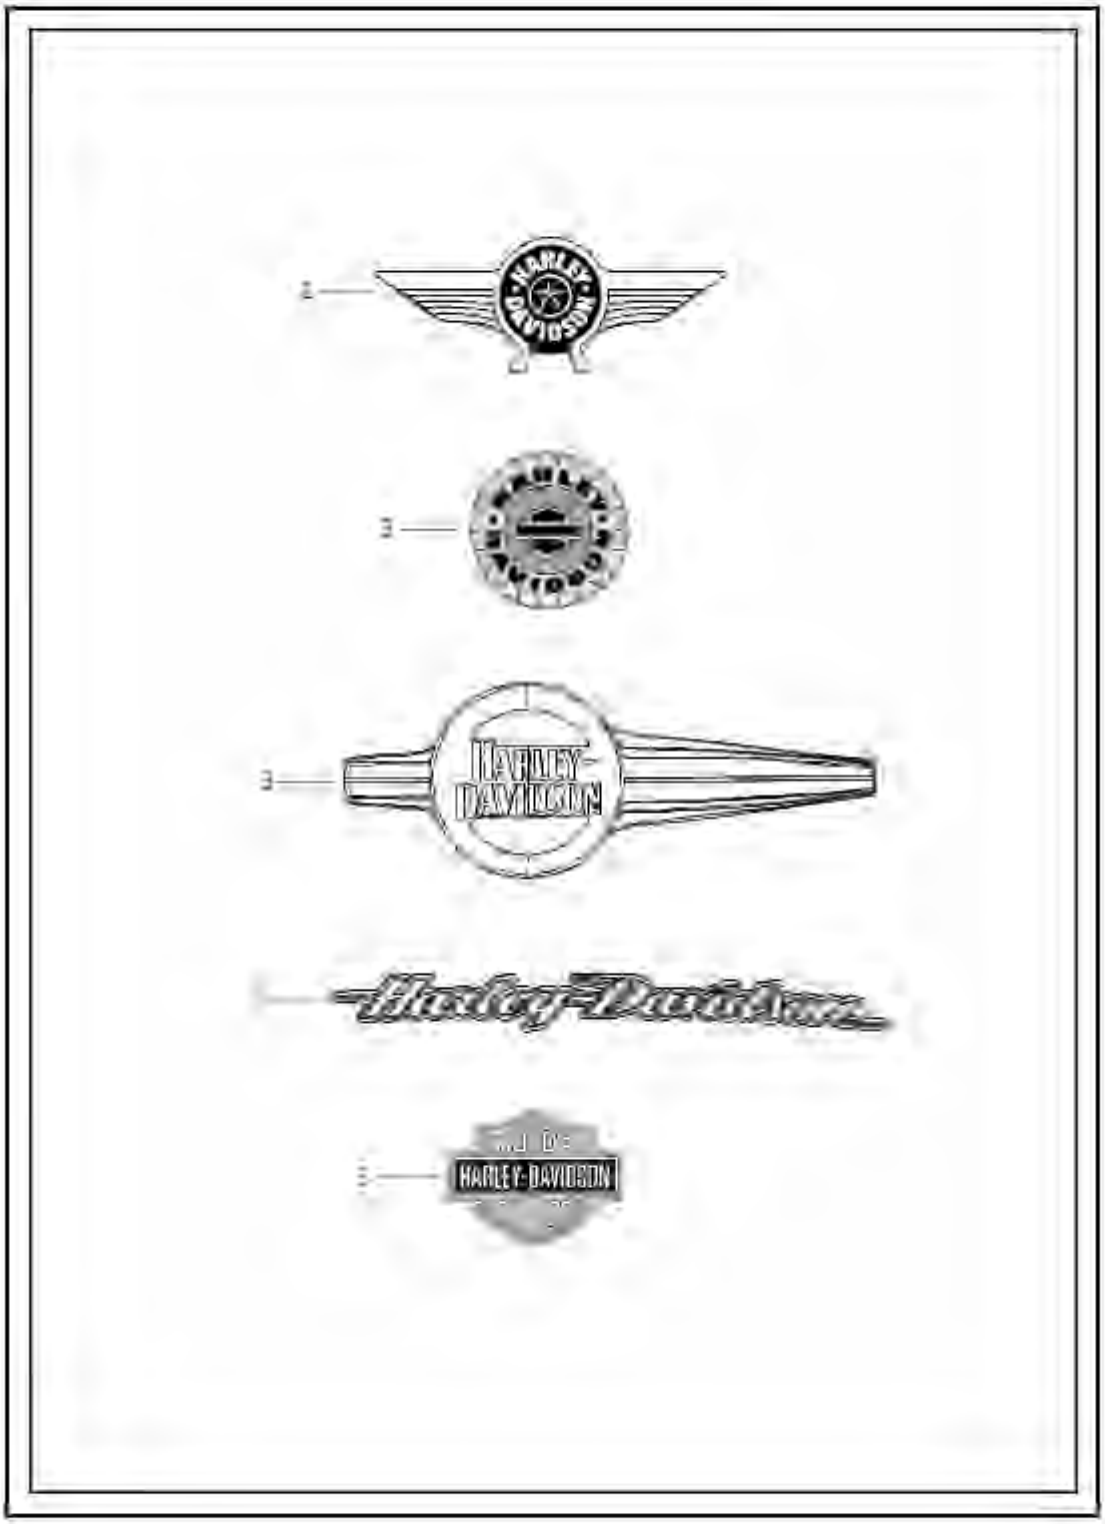

Index No.	Part No.	Description	Model(s)
1	61264-10	MEDALLION, (right) (for vivid black, amber whiskey, black denim, charcoal	FLSTFB,

		denim and crushed ice pearl tanks)	FLSTFBS
	61265-10	MEDALLION, (left) (for vivid black, amber whiskey, black denim, charcoal denim and crushed ice pearl tanks)	FLSTFB, FLSTFBS
	14100035	MEDALLION, (right) (for vivid black, charcoal pearl, velocity red sunglo and 2-tone billet silver/vivid black tanks)	FLSTF
	14100036	MEDALLION, (left) (for vivid black, charcoal pearl, velocity red sunglo and 2-tone billet silver/vivid black tanks)	FLSTF
2	14100628BAAA	MEDALLION, fuel tank (graphite glass) (for vivid black and charcoal denim tanks) *(2)*	FXSB
	14100628BAAB	MEDALLION, fuel tank (blue glass) (for billet silver and crushed ice pearl tanks) *(2)*	FXSB
	14100628BAAC	MEDALLION, fuel tank (red glass) (for velocity red sunglo tanks) *(2)*	FXSB
3	14100750	MEDALLION, (left) (for vivid black, superior blue, billet silver, olive gold and 2-tone amber whiskey/vivid black and crushed ice pearl/frosted teal pearl tanks)	FLSTC
	14100751	MEDALLION, (right) (for vivid black, superior blue, billet silver, olive gold and 2-tone amber whiskey/vivid black and crushed ice pearl/frosted teal pearl tanks)	FLSTC
4	14100754	MEDALLION, fuel tank, (right) (for vivid black, superior blue and 2-tone mysterious red/velocity red sunglo and crushed ice pearl/frosted teal pearl tanks)	FLSTN
	14100755	MEDALLION, fuel tank, (left) (for vivid black, superior blue and 2-tone mysterious red/velocity red sunglo and crushed ice pearl/frosted teal pearl tanks)	FLSTN
5	61400055	MEDALLION, fuel tank, (left) (for vivid black, charcoal pearl, black denim, velocity red sunglo, olive gold, olive gold denim and 2-tone charcoal satin/vivid black satin tanks)	FLS, FLSS
	61400056	MEDALLION, fuel tank, (right) (for vivid black, charcoal pearl, black denim, velocity red sunglo, olive gold, olive gold denim and 2-tone charcoal satin/vivid black satin tanks)	FLS, FLSS

OIL TANK AND LINES - EXCEPT FXSB

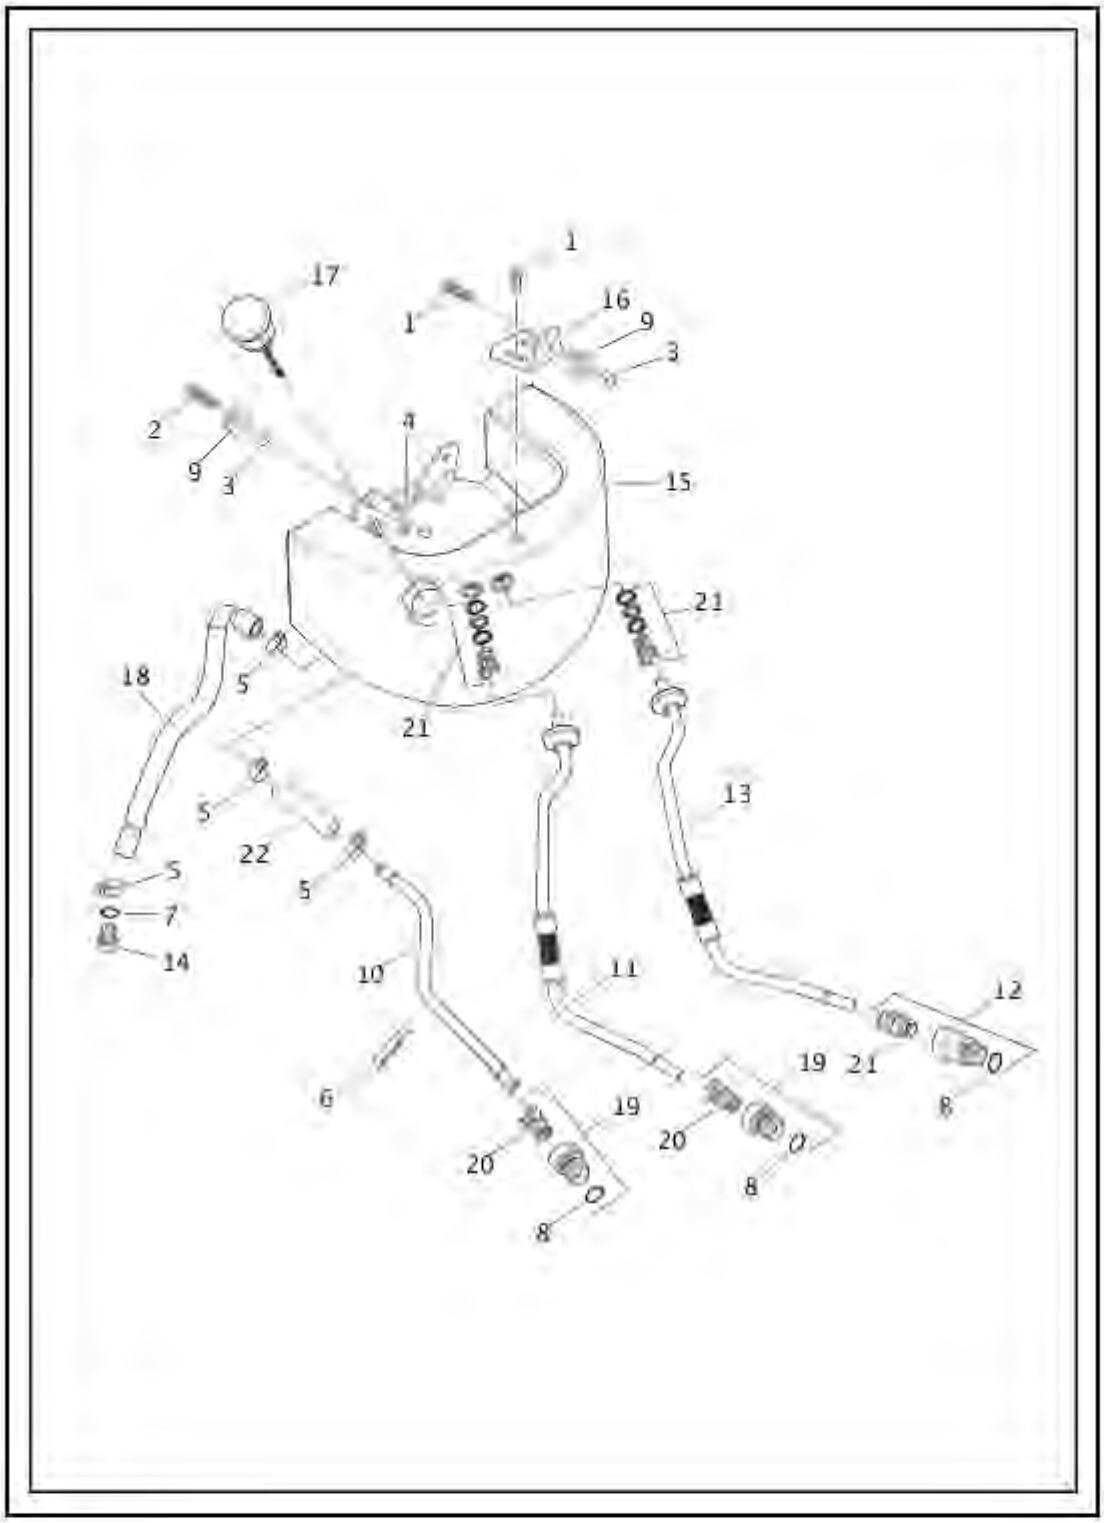

Index No.	Part No.	Description	Model(s)
1	4216	SCREW *(3)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
2	4217	SCREW *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
3	5775	WASHER *(3)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
4	8144	LOCKNUT *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS

5	10208	CLAMP *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
6	10216	CLIP, oil lines	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
7	11105	O-RING	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
8	11326	O-RING *(3)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
9	11447	GROMMET *(3)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
10	33525-07	OIL LINE, feed	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
11	33531-07	OIL LINE, return	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
12	45468-00	CONNECTOR ASSEMBLY, vent, with 11326 and 63783-00	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
13	45806-07	OIL LINE, vent	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
14	60328-98B	PLUG ASSEMBLY, magnetic drain, with 11105	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
15	62498-01A	OIL TANK, (chrome)	FLSTC, FLSTF, FLSTN
	62507-10BYM	OIL TANK, (denim black)	FLSTFB
	62492-01A	OIL TANK, (black)	FLS, FLSS, FLSTFBS
16	62769-00A	BRACKET, oil tank top	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
17	62845-00A	FILLER CAP, with dipstick	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
18	63553-00B	HOSE, oil tank drain	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
19	63601-00	CONNECTOR ASSEMBLY, oil line, with 11326 and 63632-00 *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
20	63632-00	OIL LINE RETAINER ASSEMBLY *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
21	63783-00	OIL LINE RETAINER ASSEMBLY *(3)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
22	63611-00	HOSE, oil feed	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS

OIL TANK AND LINES - FXSB

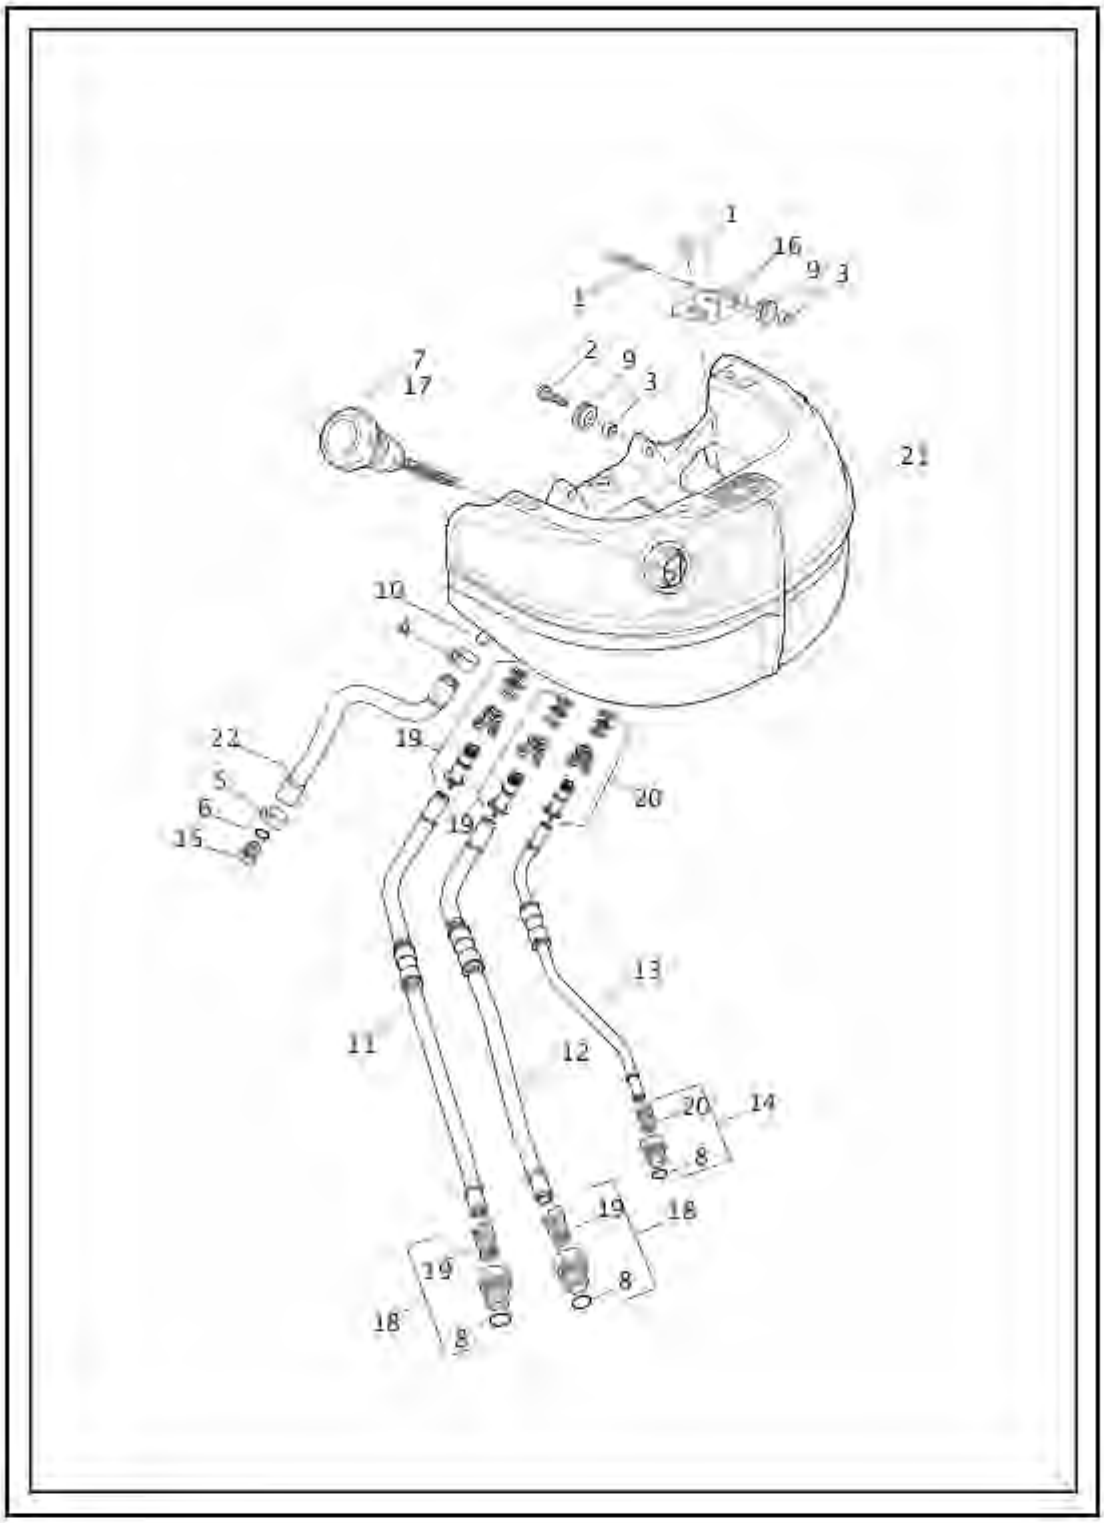

Index No.	Part No.	Description	Model(s)
1	4216	SCREW *(3)*	FXSB
2	4217	SCREW *(2)*	FXSB
3	5775	WASHER *(3)*	FXSB
4	10080	CLAMP, drain hose	FXSB
5	10208	CLAMP	FXSB
6	11105	O-RING	FXSB
7	11120	O-RING	FXSB

8	11326	O-RING *(3)*	FXSB
9	11447	GROMMET *(3)*	FXSB
10	26314-99	FITTING	FXSB
11	33527-08	OIL LINE, feed	FXSB
12	33528-08	OIL LINE, return	FXSB
13	33529-08	OIL LINE, vent	FXSB
14	45468-00	CONNECTOR ASSEMBLY, vent, with 11326, and 63783-00	FXSB
15	60328-98B	PLUG ASSEMBLY, magnetic drain, with 11105	FXSB
16	62769-00A	BRACKET, oil tank top	FXSB
17	63034-08	FILLER CAP, with dipstick (silver)	FXSB
18	63601-00	CONNECTOR ASSEMBLY, oil line, with 11326 and 63632-00 *(2)*	FXSB
19	63632-00	OIL LINE RETAINER ASSEMBLY *(4)*	FXSB
20	63783-00	OIL LINE RETAINER ASSEMBLY	FXSB
21	62500015	OIL TANK, with 26314-99 (gloss black)	FXSB
22	62700056	HOSE, oil tank drain	FXSB

HEADLAMP (1 OF 2)

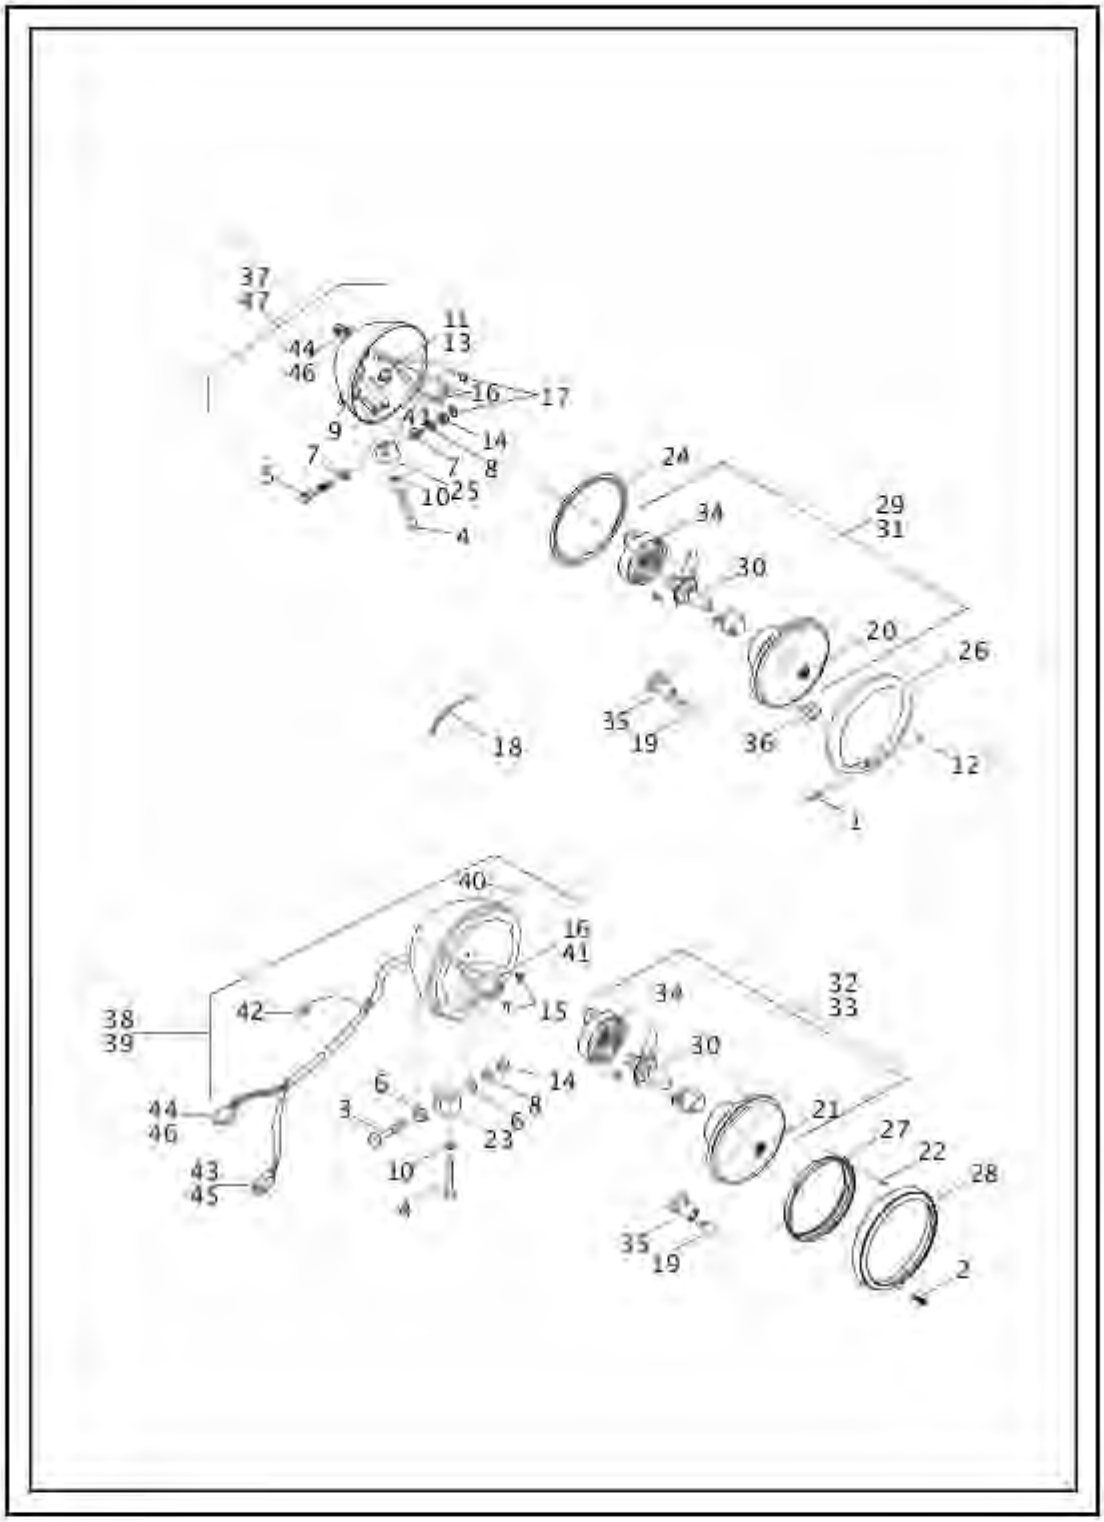

Index No.	Part No.	Description	Model(s)
1	3514	SCREW	FXSB
2	3615	SCREW	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
3	4411	BOLT	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
4	4722	BOLT	
5	4724	BOLT	FXSB

6	6400HB	WASHER *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
7	6701	WASHER *(2)*	FXSB
8	7038	LOCKWASHER	
9	7073	LOCKWASHER *(3)*	FXSB
10	7130W	LOCKWASHER	
11	7230	LOCKWASHER *(3)*	FXSB
12	7606	LOCKNUT	FXSB
13	7716	LOCKNUT	FXSB
14	7800W	NUT	
15	9841	TERMINAL, (HDI) *(2)*	FLSTC, FLSTF, FLSTN
16	9847	WIRE TERMINAL, socket spade, right hand	
	9848	WIRE TERMINAL, socket spade, left hand *(2)*	
17	9898	TERMINAL, socket flag (Asia-Pacific, Australia, Brazil,England, HDI, India, Japan) *(2)*	
18	10065	CABLE STRAP	
19	53436-97	BULB, position lamp (Asia-Pacific, Australia, Brazil, England, HDI, Japan)	
20	67667-05	MEDALLION, lens	FXSB
21	67668-05	MEDALLION, lens	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
22	67721-48	SCREW *(3)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
23	67768-97	MOUNTING BLOCK	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
24	67769-93	ADAPTER RING	FXSB
25	67772-97	MOUNTING BLOCK	FXSB
26	67790-93A	BEZEL RING, (chrome)	FXSB
27	68050-93A	RETAINING RING	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS

HEADLAMP (2 OF 2)

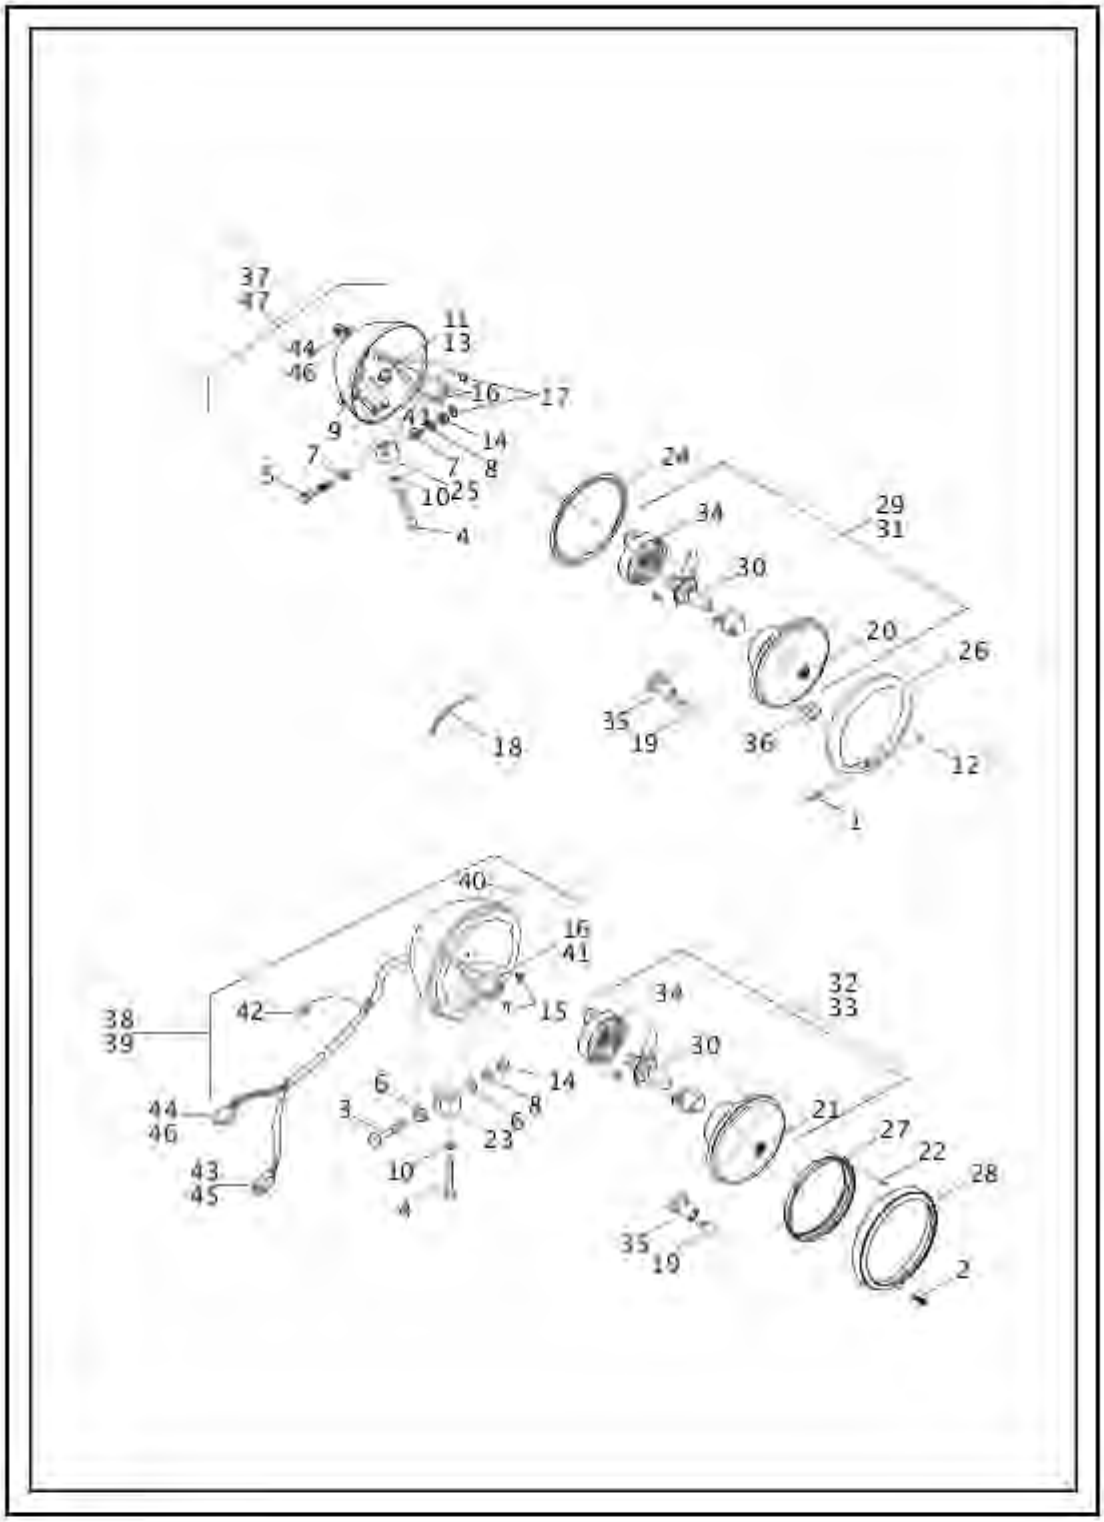

Index No.	Part No.	Description	Model(s)
28	68051-08	TRIM RING, (chrome)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
	67700115	TRIM RING, (black)	FLSS, FLSTFBS
29	68297-05A	REFLECTOR ASSEMBLY, 5-3/4 in	FXSB
30	68329-03	BULB, HB2/H4	
31	68335-05A	REFLECTOR ASSEMBLY, left dip, 5-3/4 in (Australia, Brazil, England, Japan)	FXSB

	68341-05A	REFLECTOR ASSEMBLY, right dip, 5-3/4 in (Asia-Pacific, HDI)	FXSB
32	68342-05A	LENS ASSEMBLY, 7 in	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
33	68344-05A	REFLECTOR ASSEMBLY, left dip, 7 in (Australia, England, India, Japan)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
	68345-05A	REFLECTOR ASSEMBLY, right dip, 7 in (Asia-Pacific, Brazil, HDI)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS
34	68380-05	BOOT	FXSB
	68380-05	BOOT, (HDI, Australia, Brazil, England, India, Japan)	
	68390-05	BOOT	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
35	68653-05	SOCKET, position lamp (Asia-Pacific, Australia, Brazil, England, HDI, India, Japan)	
36	69609-00	BUMPER, rubber	FXSB
37	67700094	SHELL ASSEMBLY, (Australia, England, Japan)	FXSB
	67700029	SHELL ASSEMBLY, (Asia-Pacific, HDI, India)	FXSB
38	69748-05B	SHELL ASSEMBLY, 7.0 in	FLSTC, FLSTF, FLSTN
	73295-10	SHELL ASSEMBLY, 7.0 in (black)	FLS, FLSTFB, FLSS, FLSTFBS
39	69750-05C	SHELL ASSEMBLY, 7 in, left dip (Australia, England, India, Japan)	FLSTC, FLSTF, FLSTN
	69783-08A	SHELL ASSEMBLY, 7 in, right dip (Asia-Pacific, Brazil, HDI)	FLSTC, FLSTF, FLSTN
	73293-10A	SHELL ASSEMBLY, 7 in, left dip (Australia, England, India, Japan)	FLSTFB, FLS, FLSS, FLSTFBS
	73294-10	SHELL ASSEMBLY, 7 in, right dip (HDI, Asia-Pacific, Brazil)	FLSTFB, FLS, FLSS, FLSTFBS, FLSS, FLSTFBS
40	69969-08	SLEEVE *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
41	72056-92	INSULATOR, spade terminal, three-way	
42	72249-94	HEAT SHRINK TUBE, .415 x 1 (black)	FLSTC, FLSTF, FLSTN
43	73101-96BK	HOUSING, pin, two-way	FLSTC, FLSTF, FLSTN
44	73154-96BK	HOUSING, four-way socket	
45	73190-96	TERMINAL, pin, 16-20 AWG *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
46	73191-96	TERMINAL, socket, 16-20 AWG *(4)*	
47	67700029	SHELL ASSEMBLY, (Domestic)	FXSB

AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)

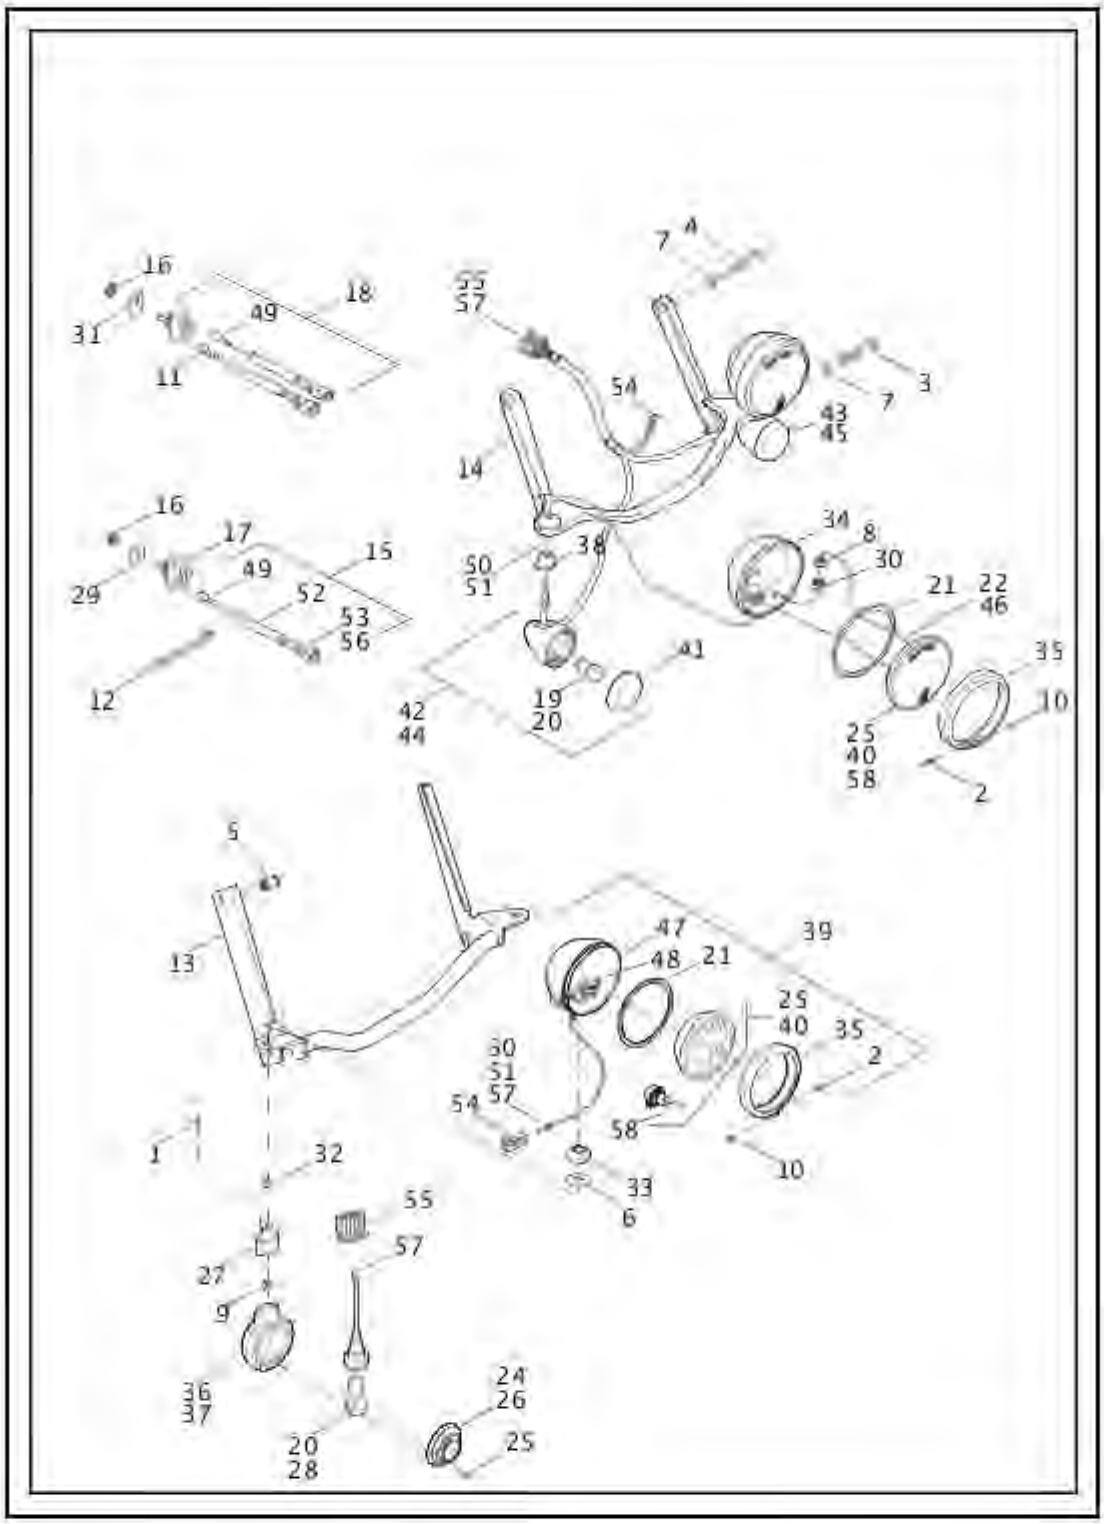

Index No.	Part No.	Description	Model(s)
1	2647B	SCREW *(4)*	FLSTC
2	3383	SCREW *(2)*	FLSTN
	3514	SCREW *(2)*	FLSTC

3	4481	SCREW *(2)*	FLSTN
4	4482	SCREW *(2)*	FLSTC, FLSTN
5	5885	SPACER *(2)*	FLSTC
6	6072	WASHER *(2)*	FLSTC
7	6109	WASHER *(4)*	FLSTN
8	7137	NUT *(2)*	FLSTN
9	7601	LOCKNUT *(2)*	FLSTC
10	7606	LOCKNUT *(2)*	FLSTC, FLSTN
11	9897	TERMINAL, wire (Asia-Pacific, Australia, England, HDI, Japan)	FLSTC, FLSTN
12	10065	CABLE STRAP *(2)*	FLSTC, FLSTN
13	58082-02A	BRACKET, auxiliary/fog lamps	FLSTC
14	58092-05	LIGHT BAR	FLSTN
15	67615-96	WIRING HARNESS, auxiliary/fog lamps	FLSTC, FLSTN
16	67846-70	NUT, toggle switch	FLSTC, FLSTN
17	67858-89	TOGGLE SWITCH, auxiliary/fog lamps, with 67846-70	FLSTC, FLSTN
18	67873-08A	TOGGLE SWITCH, auxiliary/fog lamps, with 9897, 67846-70 and 72290-94 (Australia, England, Japan)	FLSTC, FLSTN
19	68163-84	BULB, turn signal (HDI) *(2)*	FLSTN
20	68168-89A	BULB, turn signal *(2)*	FLSTC, FLSTN
21	68331-02	RING, auxiliary/fog lamps *(2)*	FLSTC, FLSTN
22	68337-05	JUMPER WIRE, auxiliary/fog lamps, with 9839 and 72049-92 (HDI) *(2)*	FLSTN
23	68414-05A	AUXILIARY/FOG LAMP, with 68000056 *(2)*	FLSTC, FLSTN
24	68440-86	LENS, turn signal (amber) *(2)*	FLSTC
25	68452-86	SCREW *(4)*	FLSTC
26	68505-90	LENS, turn signal (amber) (Asia-Pacific, Australia, England, HDI, Japan) *(2)*	FLSTC

27	68519-68A	MOUNTING BRACKET *(2)*	FLSTC
28	68572-64B	BULB, turn signal (Asia-Pacific, Australia, England, HDI, Japan) *(2)*	FLSTC
29	68619-83	LABEL, spotlight	FLSTC, FLSTN
30	68673-05	COLLAR *(2)*	FLSTN

AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)

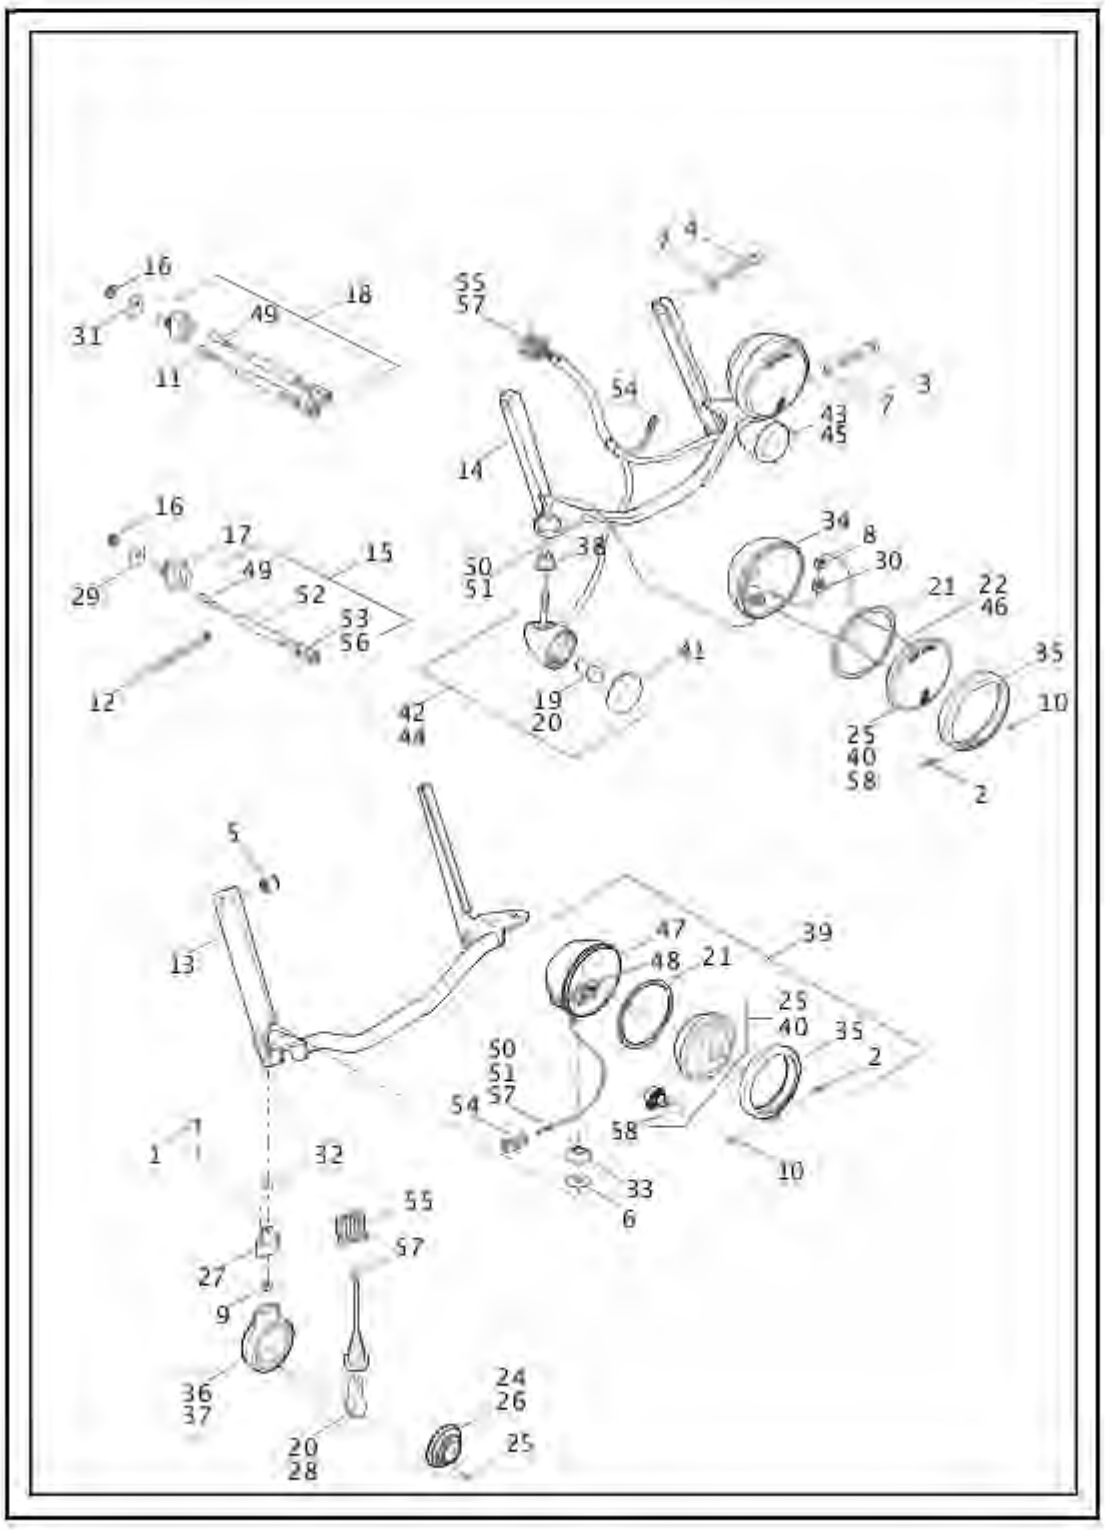

Index No.	Part No.	Description	Model(s)
31	15346-98A	LABEL, spotlight (Asia-Pacific, Australia, Brazil, England, HDI, Japan)	FLSTC, FLSTN
32	68720-62	CLAMP BLOCK, auxiliary/fog lamps *(2)*	FLSTC
33	68721-62	SWIVEL BLOCK, auxiliary/fog lamps *(2)*	FLSTC
34	68722-06	HOUSING, auxiliary/fog lamps, with 72298-95 and 72356-95 *(2)*	FLSTN
35	68725-62A	BEZEL RING, auxiliary/fog lamps *(2)*	FLSTC, FLSTN
36	68766-94	TURN SIGNAL, front, with 68168-89A, 68440-86 and 68452-86 *(2)*	FLSTC
37	68767-94	TURN SIGNAL, (Asia-Pacific, Australia, England, HDI, Japan) *(2)*	FLSTC
38	68840-05	SUPPORT *(2)*	FLSTN
39	68846-09	FOG LAMP ASSEMBLY, with 3514, 7606, 68331-02, 68725-62A, 68847-09 and 72160-06 (Asia-Pacific, Australia, England, HDI, Japan)	FLSTC
40	68847-09	BULB UNIT, auxiliary/fog lamps, with 68000056 (Asia-Pacific, Australia, England, HDI, Japan) *(2)*	FLSTC, FLSTN
41	68973-00	LENS, turn signal *(2)*	FLSTN
42	69220-06	TURN SIGNAL ASSEMBLY, (right)	FLSTN
43	69221-06	TURN SIGNAL ASSEMBLY, (left)	FLSTN
44	69222-09	TURN SIGNAL ASSEMBLY, (right) (Asia-Pacific, Australia, England, HDI, Japan)	FLSTN
45	69223-09	TURN SIGNAL ASSEMBLY, (left) (Asia-Pacific, Australia, England, HDI, Japan)	FLSTN
46	72049-92	HOUSING, jumper wire (HDI) *(2)*	FLSTN
47	72160-06	HOUSING, with 72161-06, 72298-95 and 72356-95 *(2)*	FLSTC
48	72161-06	HOUSING, two-way socket	FLSTC, FLSTN
49	72290-94	TERMINAL	FLSTC, FLSTN
50	72298-95	WIRE SEAL, green *(4)*	FLSTC, FLSTN
51	72356-95	TERMINAL, socket, 18-20 AWG *(4)*	FLSTC, FLSTN
52	72411-97	SHRINK TUBE	FLSTC, FLSTN
53	73102-96BK	HOUSING, two-way pin	FLSTC, FLSTN
54	73152-96BK	HOUSING, two-way socket	FLSTC, FLSTN
55	73156-	HOUSING, six-way socket	FLSTC,

	96BK		FLSTN
56	73190-96	TERMINAL, pin, 16-20 AWG	FLSTC, FLSTN
57	73191-96	TERMINAL, socket, 16-20 AWG *(8)*	FLSTC, FLSTN
58	68000056	BULB	FLSTC, FLSTN

The Wiring Harness Kit for the fog lamps is shown for reference only and must be ordered separately through Parts and Accessories. See a Harley-Davidson dealer.

TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB

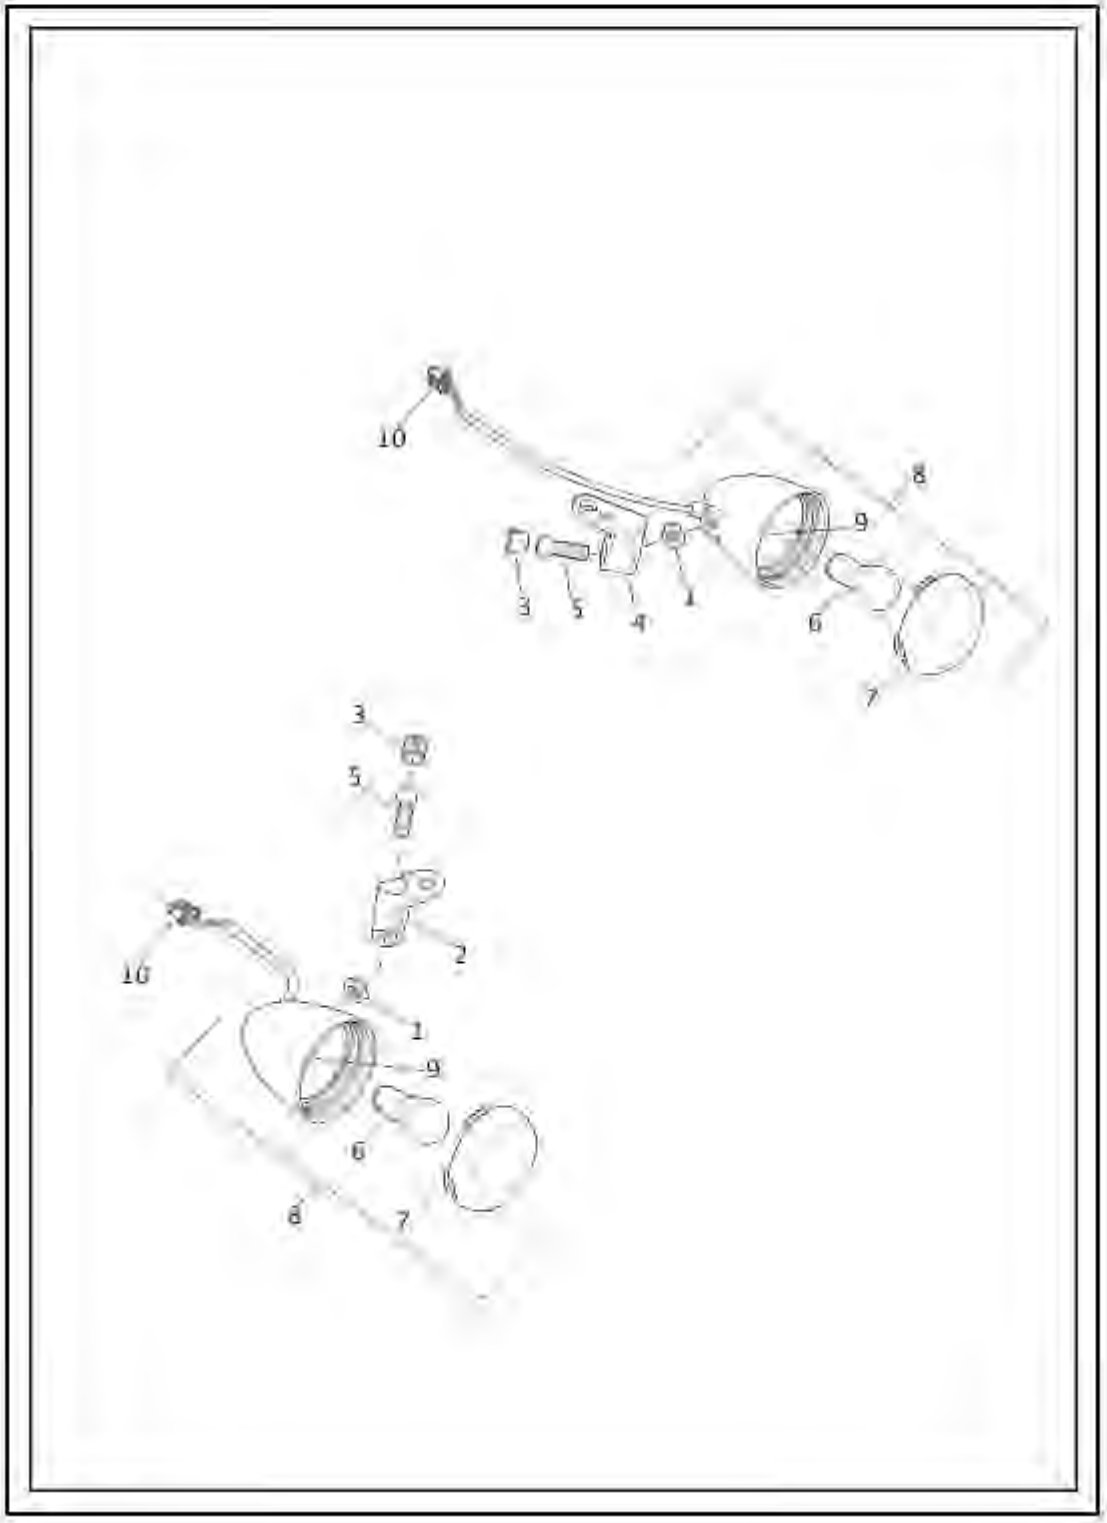

Index No.	Part No.	Description	Model(s)
1	7744	JAMNUT *(2)*	FLSTF, FLSTFB, FLS, FXSB, FLSS, FLSTFBS
2	67013-04A	BRACKET, turn signal mount (right) (chrome)	FLSTF, FLSTFB, FLS, FXSB
	67800630	BRACKET, turn signal mount (right) (black)	FLSS, FLSTFBS
3	67015-02	SCREW LOCK *(2)*	FLSTF, FLSTFB, FLS, FXSB
4	67019-04A	BRACKET, turn signal mount (left) (chrome)	FLSTF, FLSTFB, FLS, FXSB
	67800628	BRACKET, turn signal mount (left) (black)	FLSS, FLSTFBS
5	67822-88	BALL STUD *(2)*	FLSTF, FLSTFB, FLS, FXSB, FLSS, FLSTFBS
6	68168-89A	BULB, front turn signals *(2)*	FLSTF, FLSTFB, FLS, FXSB, FLSS, FLSTFBS
	68163-84	BULB, (Asia-Pacific, Australia, Brazil, England, HDI, Japan) *(2)*	FLSTF, FLSTFB, FLS, FXSB, FLSS, FLSTFBS
7	68973-00	LENS *(2)*	FLSTF, FLSTFB, FLS, FXSB, FLSS, FLSTFBS
8	67800141	TURN SIGNAL, with 68163-84, 68973-00, 67800148 (HDI) *(2)*	FLSTF
	67800519	TURN SIGNAL, with 68168-89A, 68973-00, 67800147 (chrome) *(2)*	FLSTF
	67800520	TURN SIGNAL, with 68168-89A, 68973-00, 67800147 (black) *(2)*	FXSB, FLSTFB, FLSTFBS
	67800521	TURN SIGNAL, with 68163-84, 68973-00, 67800148 (HDI) (black) *(2)*	FXSB, FLSTFB, FLSTFBS
	67800523	TURN SIGNAL, with 68168-89A, 68973-00, 67800147 (gloss black) *(2)*	FLS, FLSS
	67800525	TURN SIGNAL, with 68163-84, 68973-00, 67800148 (HDI) (gloss black) *(2)*	FLS, FLSS
9	67800147	SOCKET ASSEMBLY *(2)*	FXSB, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
	67800148	SOCKET ASSEMBLY, (HDI) *(2)*	FXSB, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
10	69201179	HOUSING, four-way socket (gray) *(2)*	FXSB, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS

SWITCHES, HANDLEBAR LEFT, FRONT

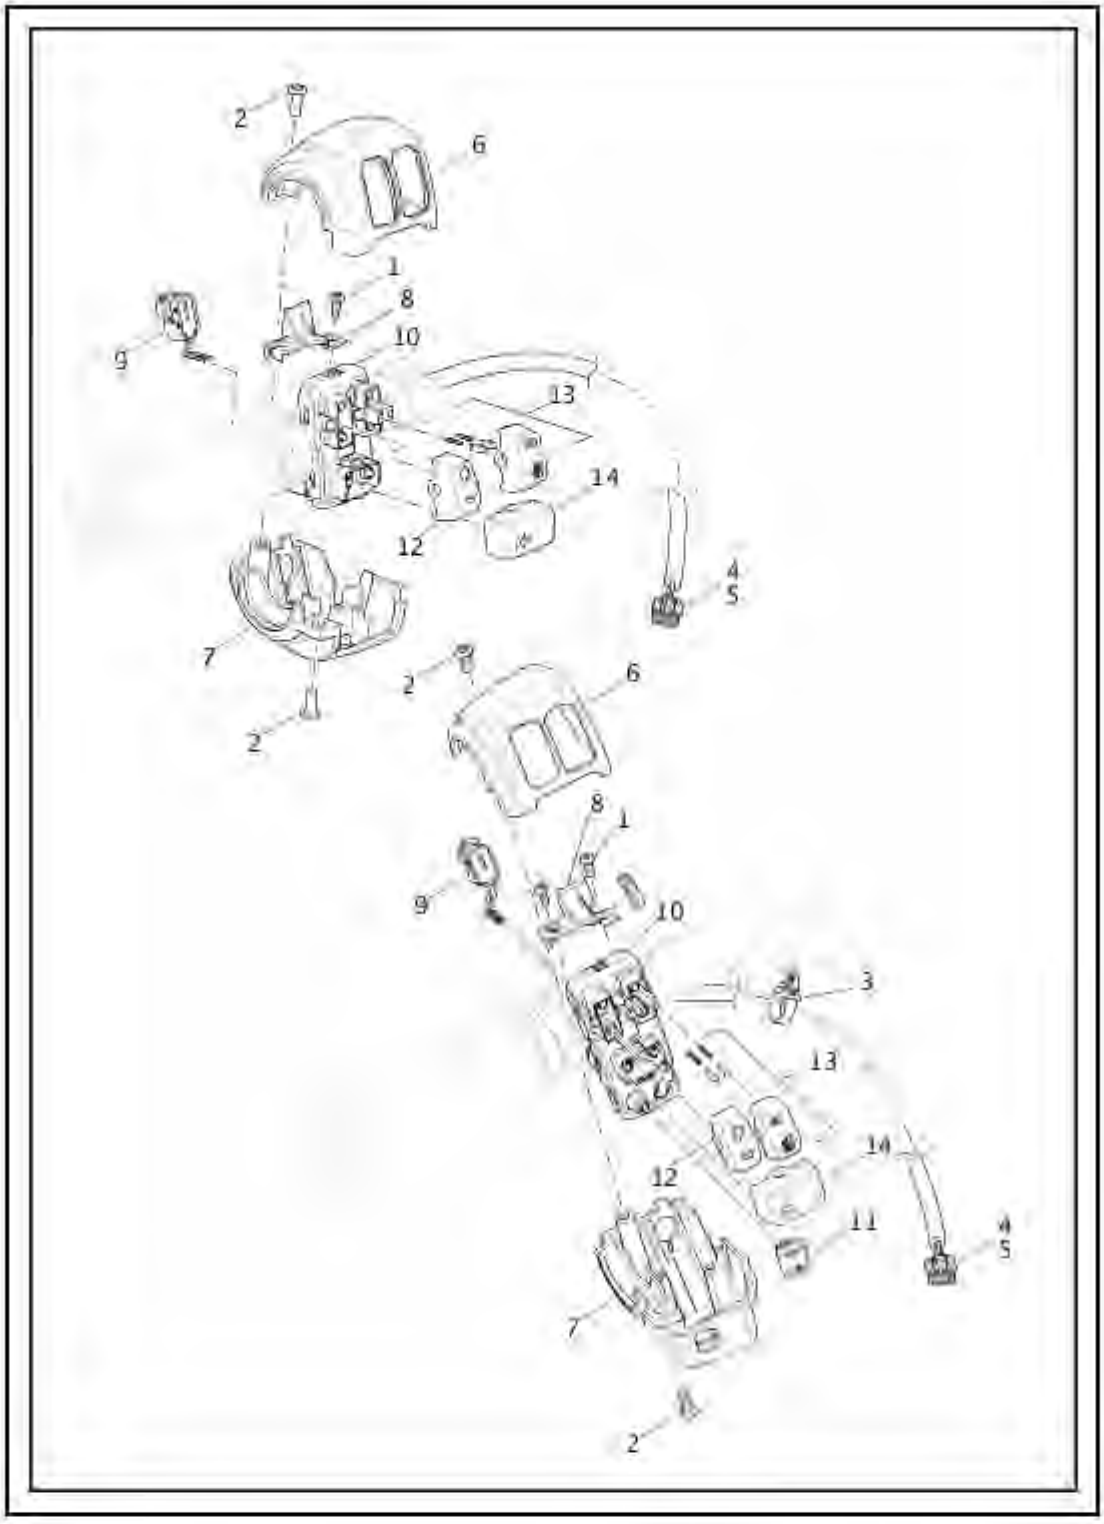

Index No.	Part No.	Description	Model(s)
1	2261	SCREW *(2)*	
2	3658	SCREW *(2)*	
3	70345-84	RETAINER, wire harness	
4	72908-11	HOUSING, four-way socket	
5	72910-11	TERMINAL, socket 20-22 AWG *(4)*	
6	72920-11	HOUSING, (upper) (left) (black)	
7	72922-11	HOUSING, (lower) (left) (black)	FXSB, FLSTF, FLSTFB, FLS

	71500289	HOUSING, (lower) (left) (black)	FLSTC, FLSTN, FLSS, FLSTFBS
8	72941-11	BRACKET, lower switch	
9	71500117	SWITCH, clutch switch	
	71500114	SWITCH, clutch switch	FLSS, FLSTFBS
10	71500288	SWITCH MODULE, left (black)	FLSTC, FLSTN
	71500292	SWITCH MODULE, left (black)	FXSB, FLSTF, FLSTFB, FLS
	71500448	SWITCH MODULE, left (black)	FLSS, FLSTFBS
11	71500290	SWITCH CAP, set/resume	FLSTC, FLSTN
12	71500293	SWITCH CAP, horn/trip switch	
13	71500294	SWITCH CAP, lights switch	
14	71500295	SWITCH CAP, left turn switch	

SWITCHES, HANDLEBAR RIGHT, FRONT

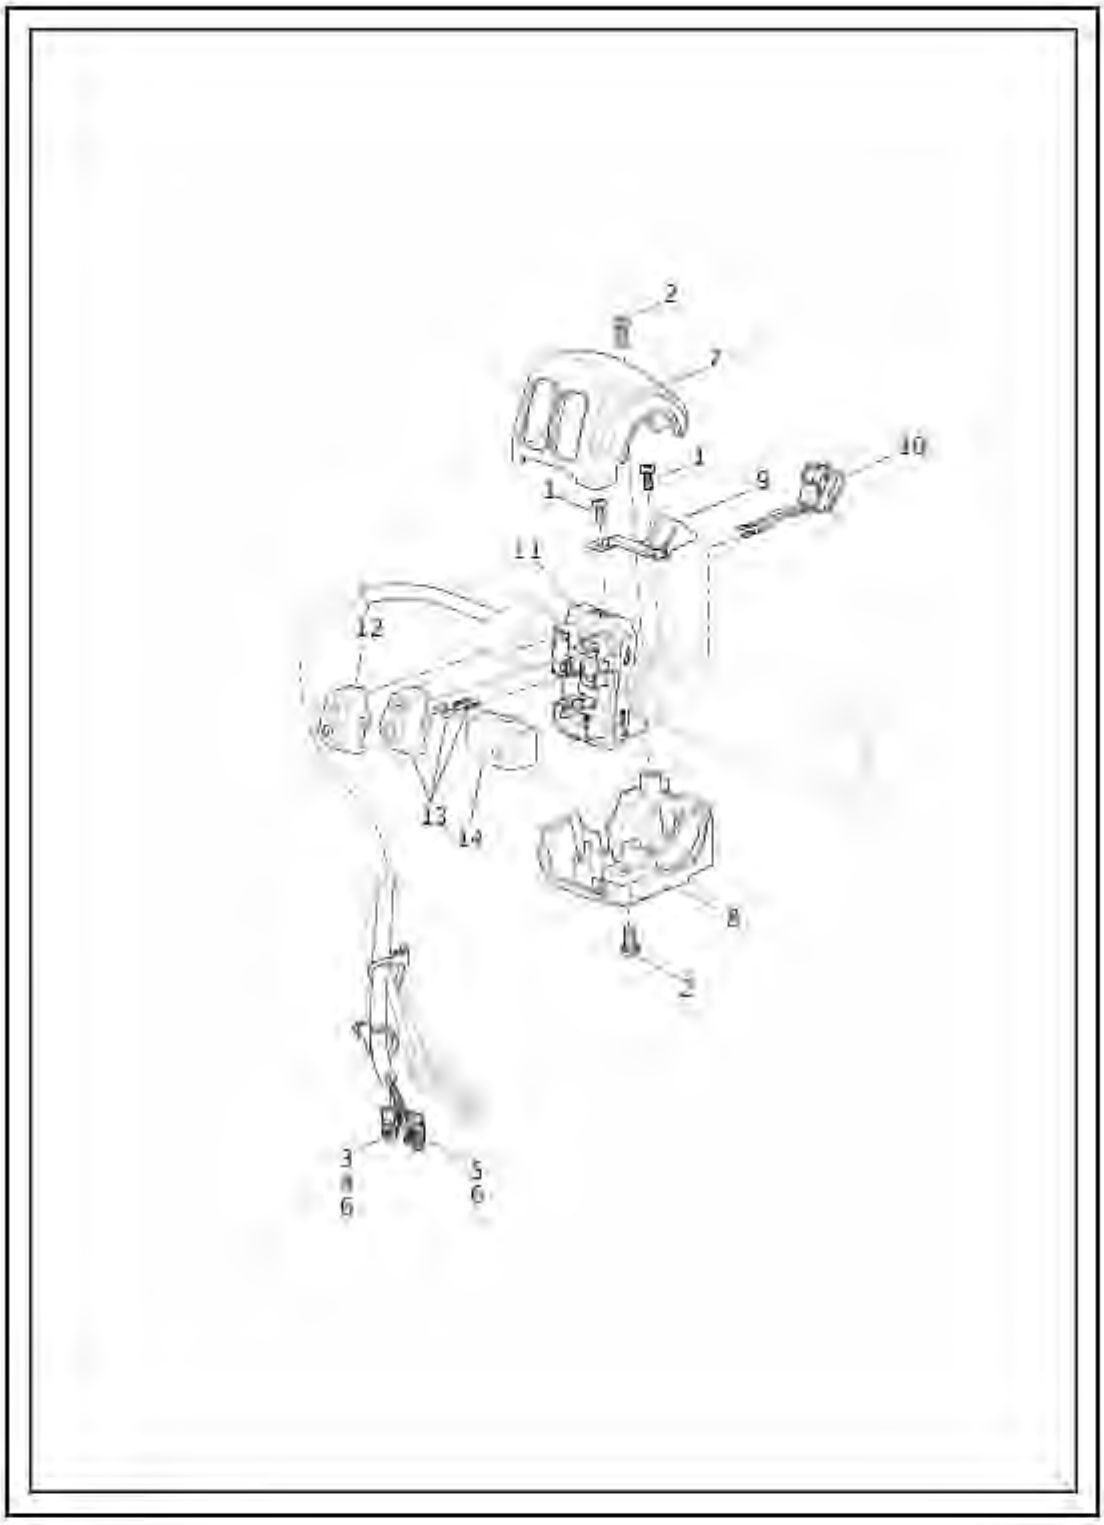

Index No.	Part No.	Description	Model(s)
1	2261	SCREW *(2)*	
2	3658	SCREW *(2)*	
3	5118	SEAL PIN	
4	72906-11	HOUSING, two-way socket	
5	72908-11	HOUSING, four-way socket	
6	72910-11	TERMINAL, socket 20-22 AWG *(5)*	
7	72921-11	HOUSING, (upper) (right) (black)	

8	72923-11	HOUSING, (lower) (right) (black)	
9	72940-11	BRACKET, lower switch	
10	71500118	SWITCH, brake	
11	71500297	SWITCH MODULE, right side	
12	71500298	SWITCH CAP, hazard switch	
13	71500299	SWITCH CAP, off/run switch, with pins and springs	
14	71500300	SWITCH CAP, right turn switch	

WINDSHIELD - FLSTC

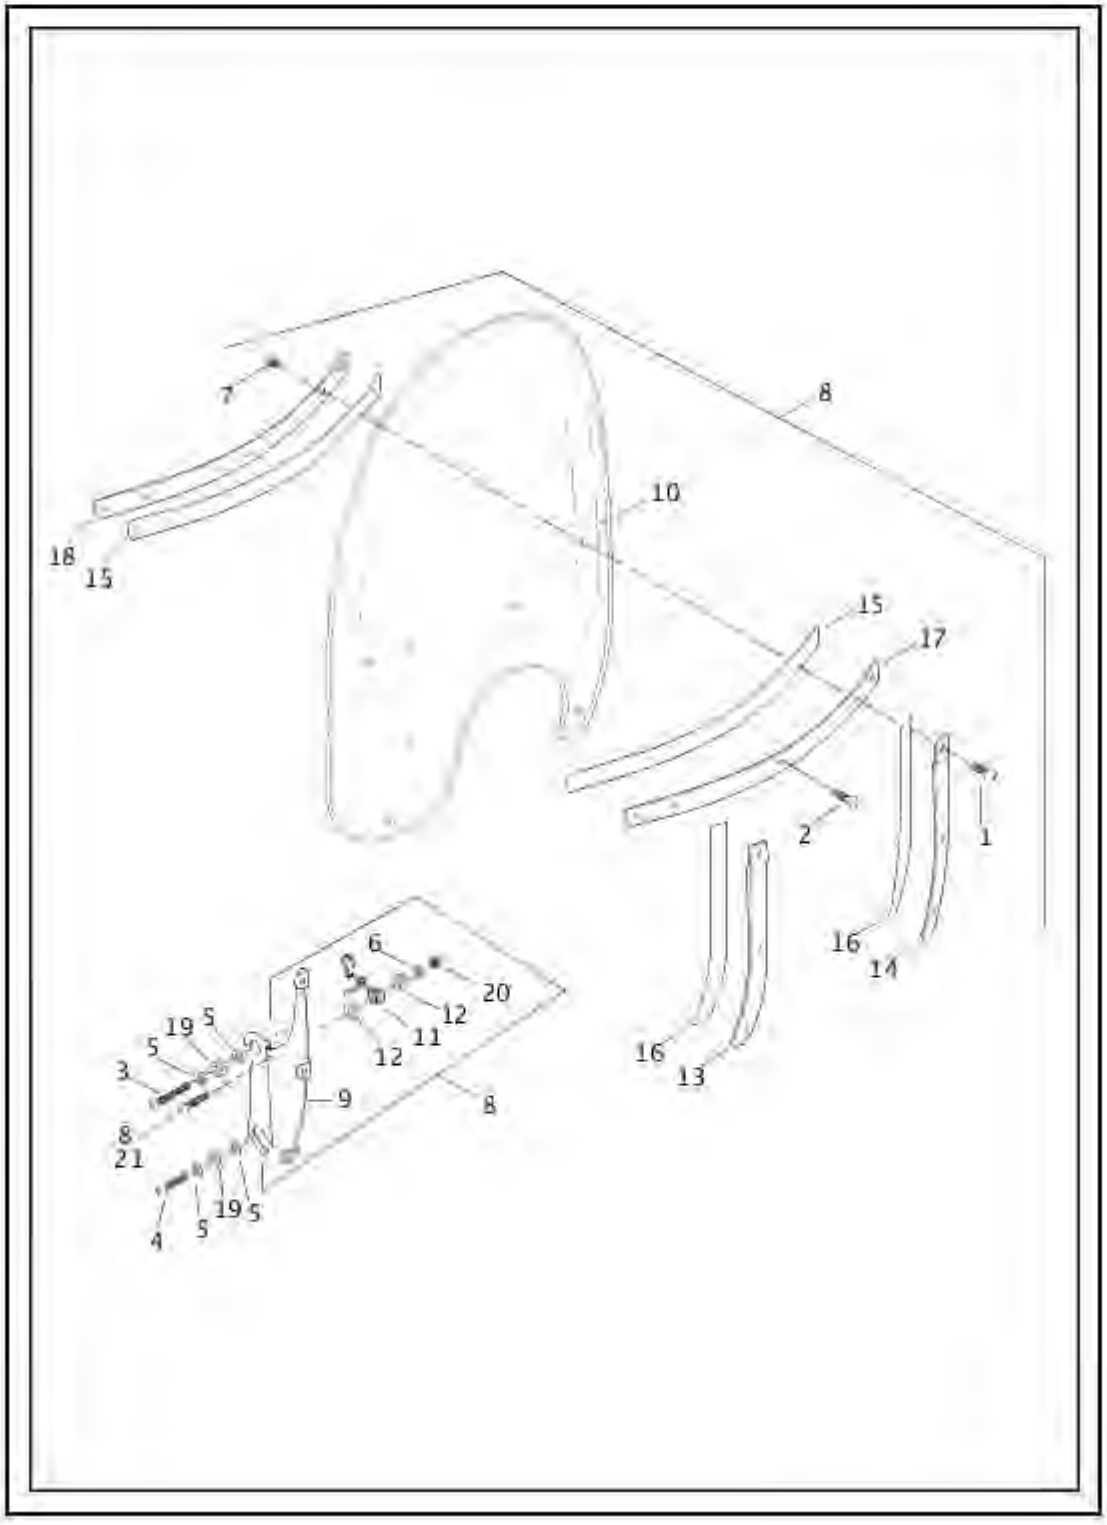

Index No.	Part No.	Description	Model(s)
1	2452	SCREW *(2)*	FLSTC
2	2921	SCREW *(7)*	FLSTC
3	4343	SCREW *(2)*	FLSTC
4	4482	SCREW *(2)*	FLSTC
5	6400HB	WASHER *(8)*	FLSTC
6	6703	WASHER *(2)*	FLSTC
7	7651A	ACORN NUT *(9)*	FLSTC
8	57061-09	WINDSHIELD ASSEMBLY, complete	FLSTC
	57061-09	WINDSHIELD ASSEMBLY, complete (Australia, India)	FLSTC
	57091-06A	WINDSHIELD ASSEMBLY, complete (HDI, England, Japan)	FLSTC
9	57062-00A	BRACKET, windshield (right)	FLSTC
	57063-00A	BRACKET, windshield (left)	FLSTC
10	57250-06	WINDSHIELD KIT, replacement, with 58416-77A and 58417-77 (HDI, Japan)	FLSTC
	57634-07	WINDSHIELD KIT, low, replacement, with 58416-77A and 58417-77 (Asia-Pacific, HDI)	FLSTC
	58294-09	WINDSHIELD KIT, replacement, with 58416-77A and 58417-77	FLSTC
11	58252-95	RETAINER, windshield (left)	FLSTC
	58253-95	RETAINER, windshield (right)	FLSTC
12	58272-95	BUSHING, nylon *(4)*	FLSTC
13	58406-75A	BRACKET, windshield, outer (right)	FLSTC
14	58408-75A	BRACKET, windshield, outer (left)	FLSTC
15	58416-77A	TAPE, windshield, horizontal *(2)*	FLSTC
16	58417-77	TAPE, windshield, vertical *(2)*	FLSTC
17	58428-94	HORIZONTAL BRACE, windshield, outer	FLSTC
18	58431-94	HORIZONTAL BRACE, windshield, inner	FLSTC
19	67621-94	BUSHING *(4)*	FLSTC
20	94004-	ACORN NUT *(2)*	FLSTC

	90T		
21	94426-95	SCREW *(2)*	FLSTC

HANDLEBAR

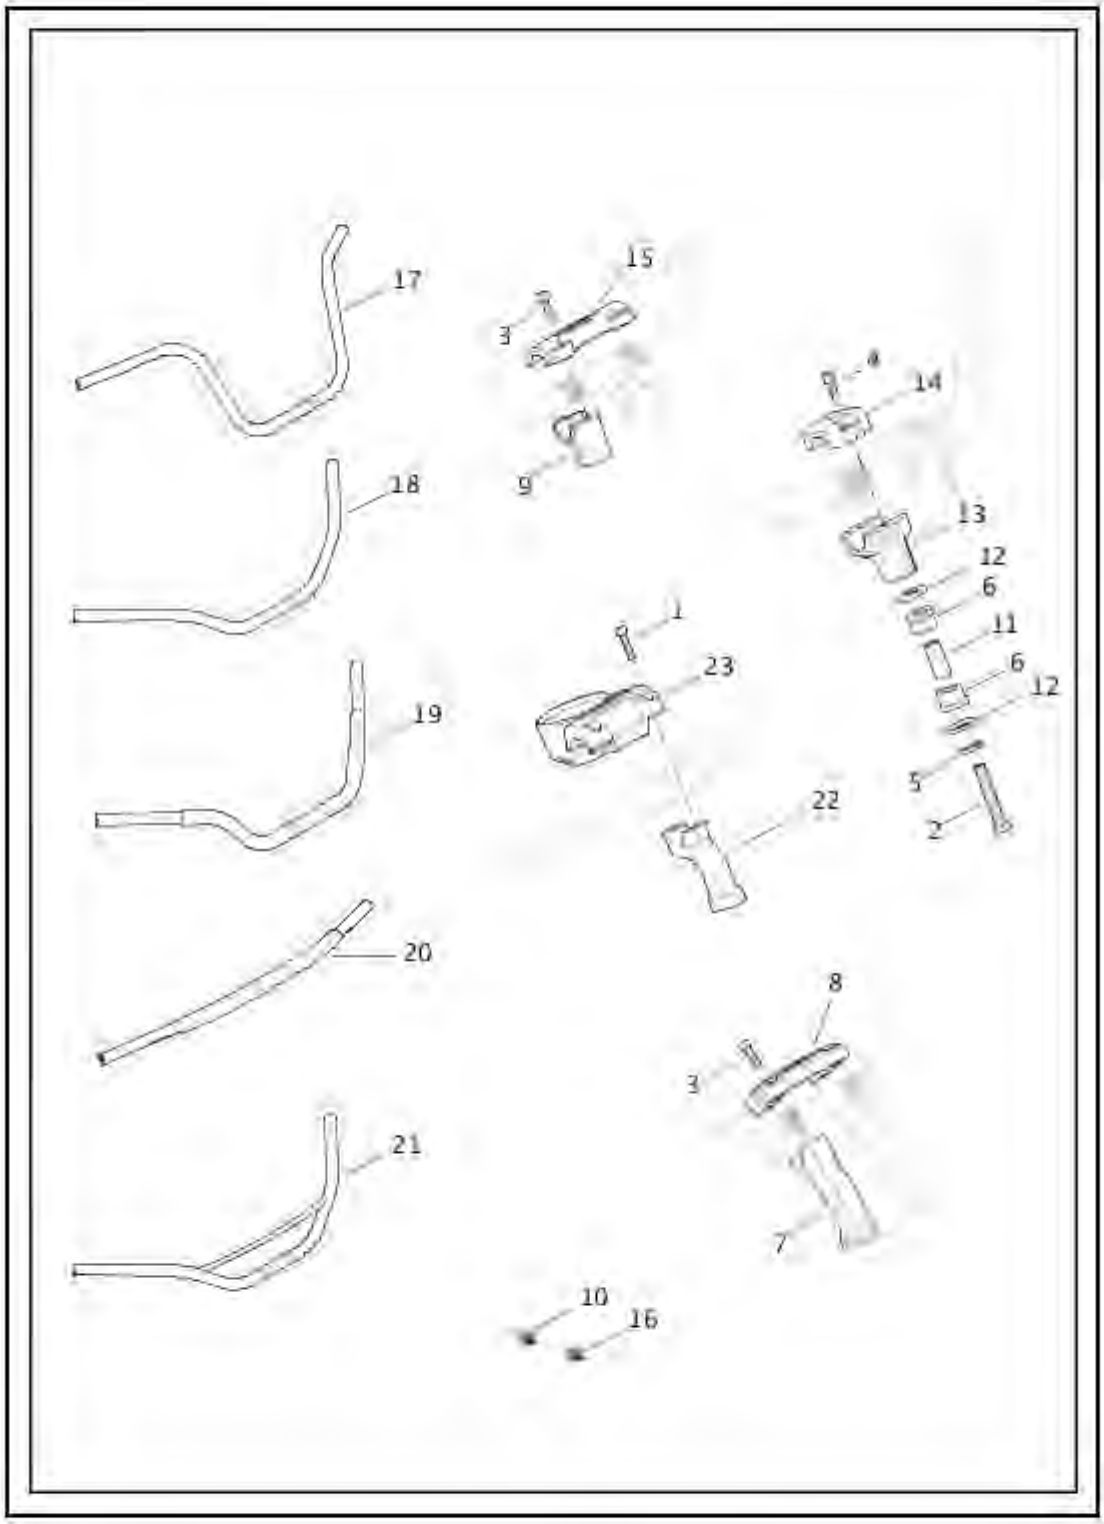

Index No.	Part No.	Description	Model(s)
1	3210A	SCREW *(2)*	FXSB
2	3471	BOLT *(2)*	

3	3494A	BOLT *(4)*	FLSTC, FLSTN, FLS, FLSS
4	4350A	SCREW *(4)*	FLSTF, FLSTFB, FLSTFBS
5	7068	LOCKWASHER *(2)*	
6	53156-86	BUSHING, (rubber) *(4)*	
7	55902-05	CLAMP, (lower) *(2)*	FLSTN
8	55903-05	CLAMP, (upper)	FLSTN
9	55984-07	RISER *(2)*	FLSTC, FLS
	55900098	RISER, (gloss black) *(2)*	FLSS
10	56073-83	RETAINER *(3)*	FLSTC, FLSTN
11	56153-73	SPACER *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB
12	56159-73	CUP WASHER *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB, FLSS, FLSTFBS
13	56887-07	RISER *(2)*	FLSTF, FLSTFB
	55900097	RISER, (gloss black) *(2)*	FLSTFBS
14	56889-07	CAP *(2)*	FLSTF, FLSTFB
	55900096	CAP, (gloss black) *(2)*	FLSTFBS
15	56998-09	CLAMP	FLSTC, FLS
	55900099	CLAMP, (gloss black)	FLSS
16	70345-84	RETAINER *(4)*	
17	55800396	HANDLEBAR	FLSTC
18	55800399	HANDLEBAR	FLSTN
19	55800405	HANDLEBAR	FLSTFB, FLSTF
	55800634	HANDLEBAR, (gloss black)	FLSTFBS
20	55800411	HANDLEBAR	FXSB
21	55800579	HANDLEBAR	FLS, FLSS
22	55900034	CLAMP, riser	FXSB
23	55900043	UPPER CLAMP, with speedometer housing	FXSB

THROTTLE CONTROL

Index No.	Part No.	Description	Model(s)
1	10006	CABLE STRAP	
2	32306-08	SEAL CAP	
3	56248-08	GRIP, (left)	
4	56304-08	THROTTLE SLEEVE AND GRIP	
5	72902-01BK	HOUSING, two-way pin (black)	
6	72990-01	TERMINAL, pin 18-22 AWG *(2)*	
7	12500001	CABLE STRAP	

8	32700050	SENSOR, twist grip	
9	69200307	TERMINAL, socket 22 AWG *(6)*	
10	69201162	CONNECTOR, six-way socket (black)	

TURN SIGNALS, REAR (1 OF 2)

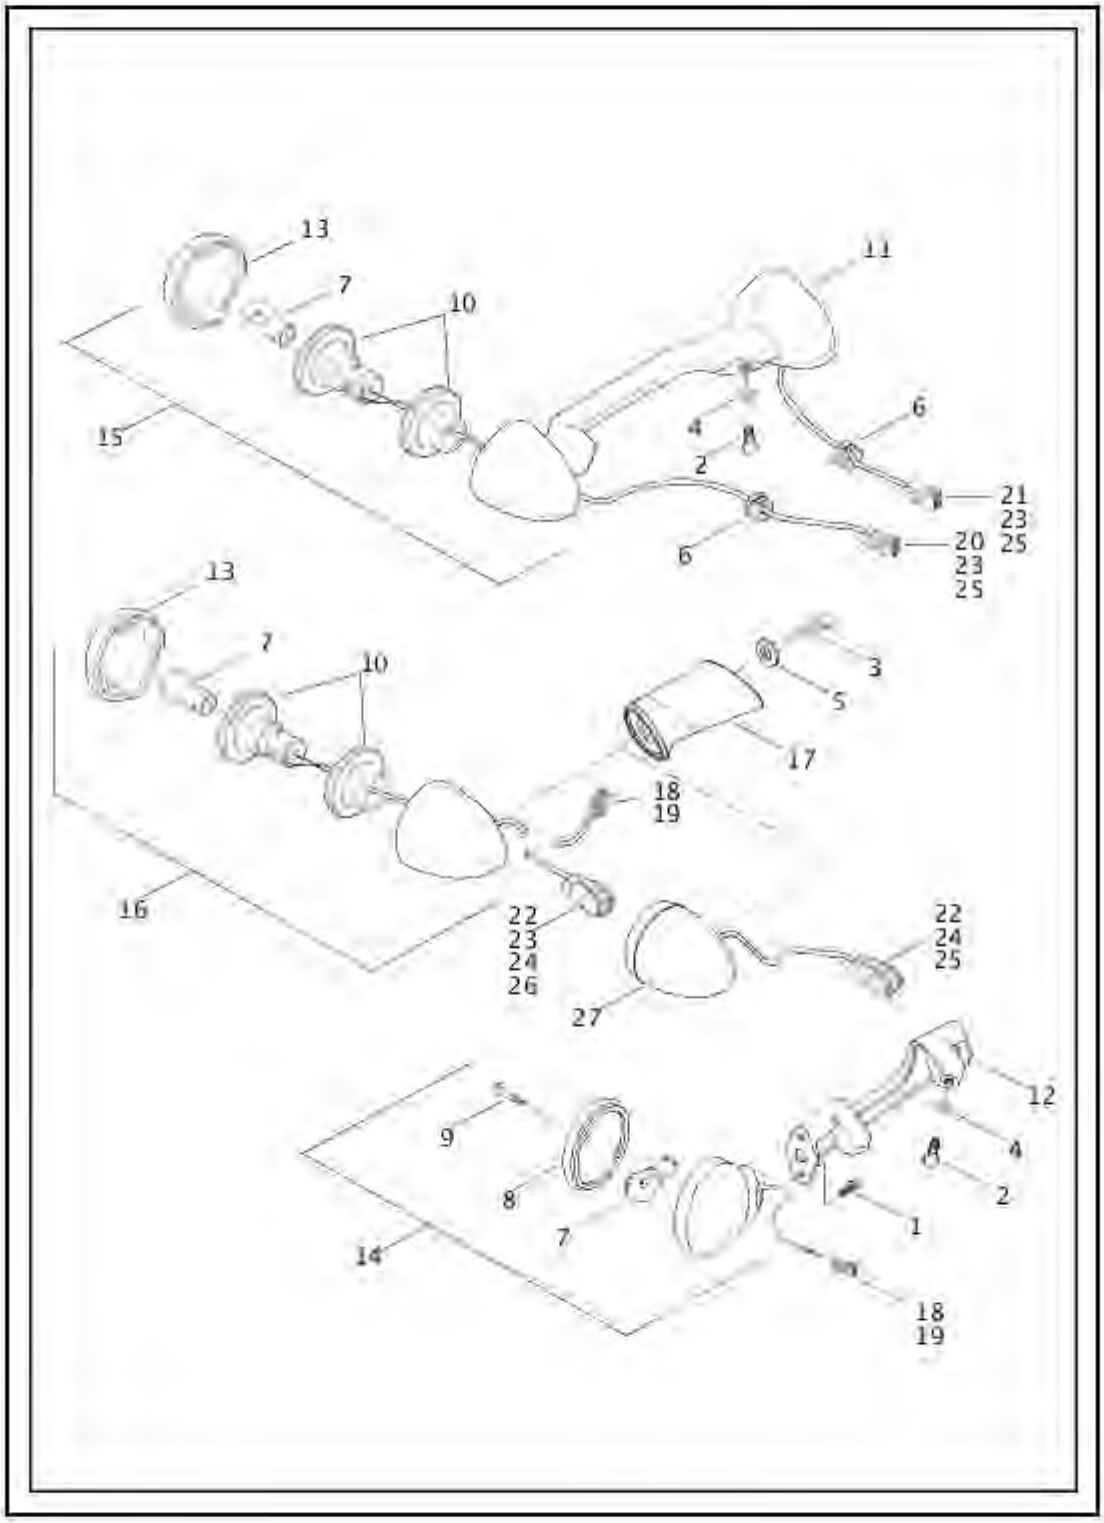

Index No.	Part No.	Description	Model(s)
1	2692WB	SCREW *(4)*	FLSTC

2	3987	BOLT *(2)*	FLSTC, FLSTN
3	4549	SCREW *(2)*	FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
	8329	SCREW *(2)*	FXSB
4	6336B	WASHER *(2)*	FLSTC, FLSTN
5	6771A	WASHER *(2)*	FLSTF, FLSTFB, FLS, FXSB, FLSS, FLSTFBS
6	67267-05	GROMMET *(2)*	FLSTN
7	68163-84	BULB, rear turn signal *(2)*	FLSTF, FLSTN, FLSTFB, FLSTFBS
	68572-64B	BULB, rear turn signal *(2)*	FLSTC
	68168-89A	BULB, rear turn signal *(2)*	FLS, FXSB
8	68440-86	LENS, rear turn signal (amber) *(2)*	FLSTC
	68506-92	LENS, turn signal (amber) (HDI) *(2)*	FLSTC
9	68452-86	SCREW *(4)*	FLSTC
10	68497-07	SOCKET	FXSB
	68905-00	SOCKET	FLSTN, FLSTF, FLSTFB
	67800216	SOCKET	FLS, FLSS
11	68508-04	REAR TURN SIGNAL BAR	FLSTN
12	68510-74C	BRACKET, rear turn signal	FLSTC
13	68559-07	LENS, (red) *(2)*	FLS, FXSB, FLSS
	68973-00	LENS, (amber) *(2)*	FLSTN, FLSTF, FLSTFB, FLSS, FLSTFBS
14	68713-94A	TURN SIGNAL, rear, with 68440-86, 68452-86 and 68572-64B (amber) *(2)*	FLSTC
	68765-94A	TURN SIGNAL, with 68163-84, 68452-86 and 68506-92 (amber) (HDI) *(2)*	FLSTC
15	68969-05	DIRECTIONAL LAMP ASSEMBLY, with 68163-84, 68508-04, 68973-00, 74191-98 and socket	FLSTN
16	68978-00	TURN SIGNAL, rear, with 68163-84, 68973-00 and socket (chrome) *(2)*	FLSTF
	69935-08	TURN SIGNAL, rear, with 68163-84, 68973-00 and socket (black) *(2)*	FLSTFB, FLSTFBS
	67800217	TURN SIGNAL, with 68168-89A, 68559-07 and 67800216 (black) *(2)*	FLS, FLSS
	68461-09	TURN SIGNAL, with 68168-89A, 68497-07 and 68559-07	FXSB

		(chrome) *(2)*	

TURN SIGNALS, REAR (2 OF 2)

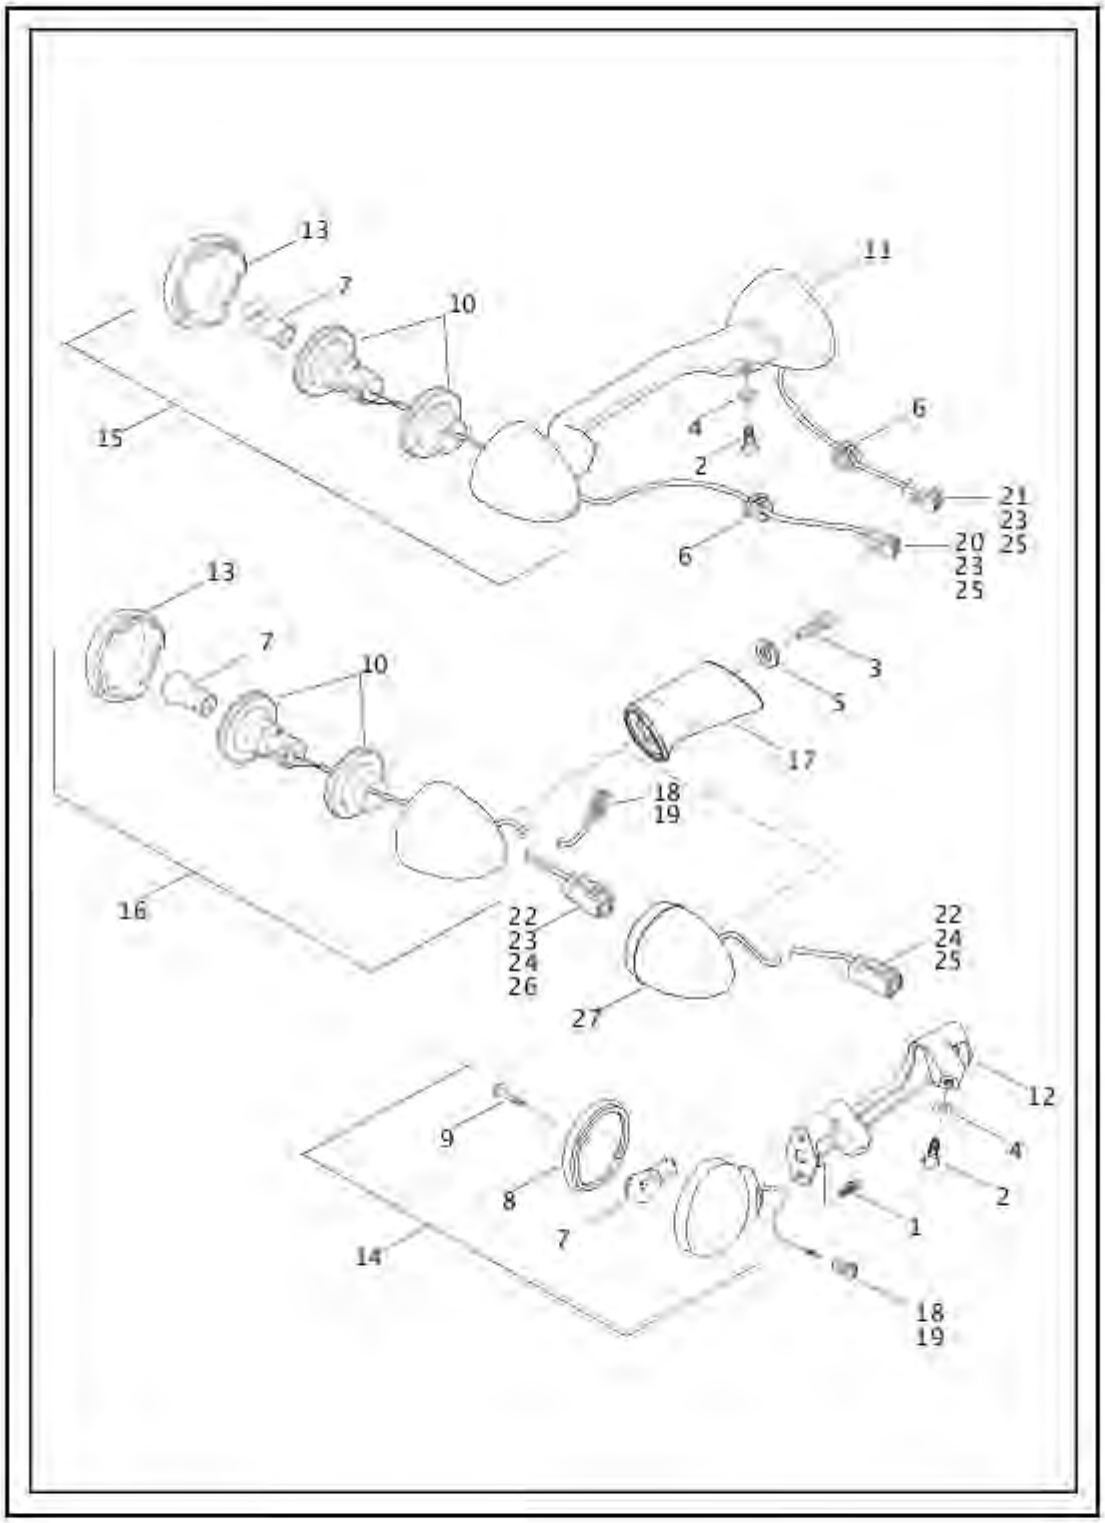

Index No.	Part No.	Description	Model(s)
17	69438-06	SUPPORT, rear lamp mounting *(2)*	FLSTF
	69933-08	SUPPORT, rear lamp mounting (black) (right side only) (Domestic)	FLS, FLSS

	69933-08	SUPPORT, rear lamp mounting (black) *(2)*	FLSTFB, FLSTFBS
	67800184	SUPPORT, rear lamp mounting (black) (left side only) (Domestic)	FLS, FLSS
	67800223	SUPPORT, rear lamp mounting (left side only) (Domestic)	FXSB
	67800224	SUPPORT, rear lamp mounting (Australia, Asia-Pacific, Brazil, Canada, England, HDI, India, Japan) *(2)*	FXSB
	67800224	SUPPORT, rear lamp mounting (right side only) (Domestic)	FXSB
	69933-08	SUPPORT, (black) (Australia, Asia-Pacific, Canada, England, HDI, Japan) *(2)*	FLS, FLSS
18	73152-96BK	HOUSING, two-way socket (black) *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLSS, FLSTFBS
19	73191-96	TERMINAL, socket, 16-20 AWG *(4)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLSS, FLSTFBS
20	74112-98BK	HOUSING, two-way socket, right (black)	FLSTN
21	74112-05GY	HOUSING, two-way socket, left (gray)	FLSTN
22	74114-98BK	HOUSING, four-way socket, left turn signal (black)	FLSTN, FLS, FXSB, FLSS
	69200011	HOUSING, four-way socket, right turn signal (gray)	FLSTN, FLS, FXSB, FLSS
23	74152-98	SECONDARY LOCK, terminal *(2)*	FLSTN
24	74154-98	SECONDARY LOCK, four-way socket *(2)*	FLSTN, FLS, FXSB, FLSS
25	74191-98	TERMINAL, socket *(4)*	FLSTN, FLS, FXSB, FLSS
26	74195-98	SEAL PIN *(2)*	FXSB, FLSS
27	67800171	TURN SIGNAL, rear, with 74191-98 (black) (HDI) *(2)*	FLS, FLSS
	67800238	TURN SIGNAL, rear, with 74191-98 (chrome) (Australia, Asia-Pacific, Brazil, Japan, HDI) *(2)*	FXSB

TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS

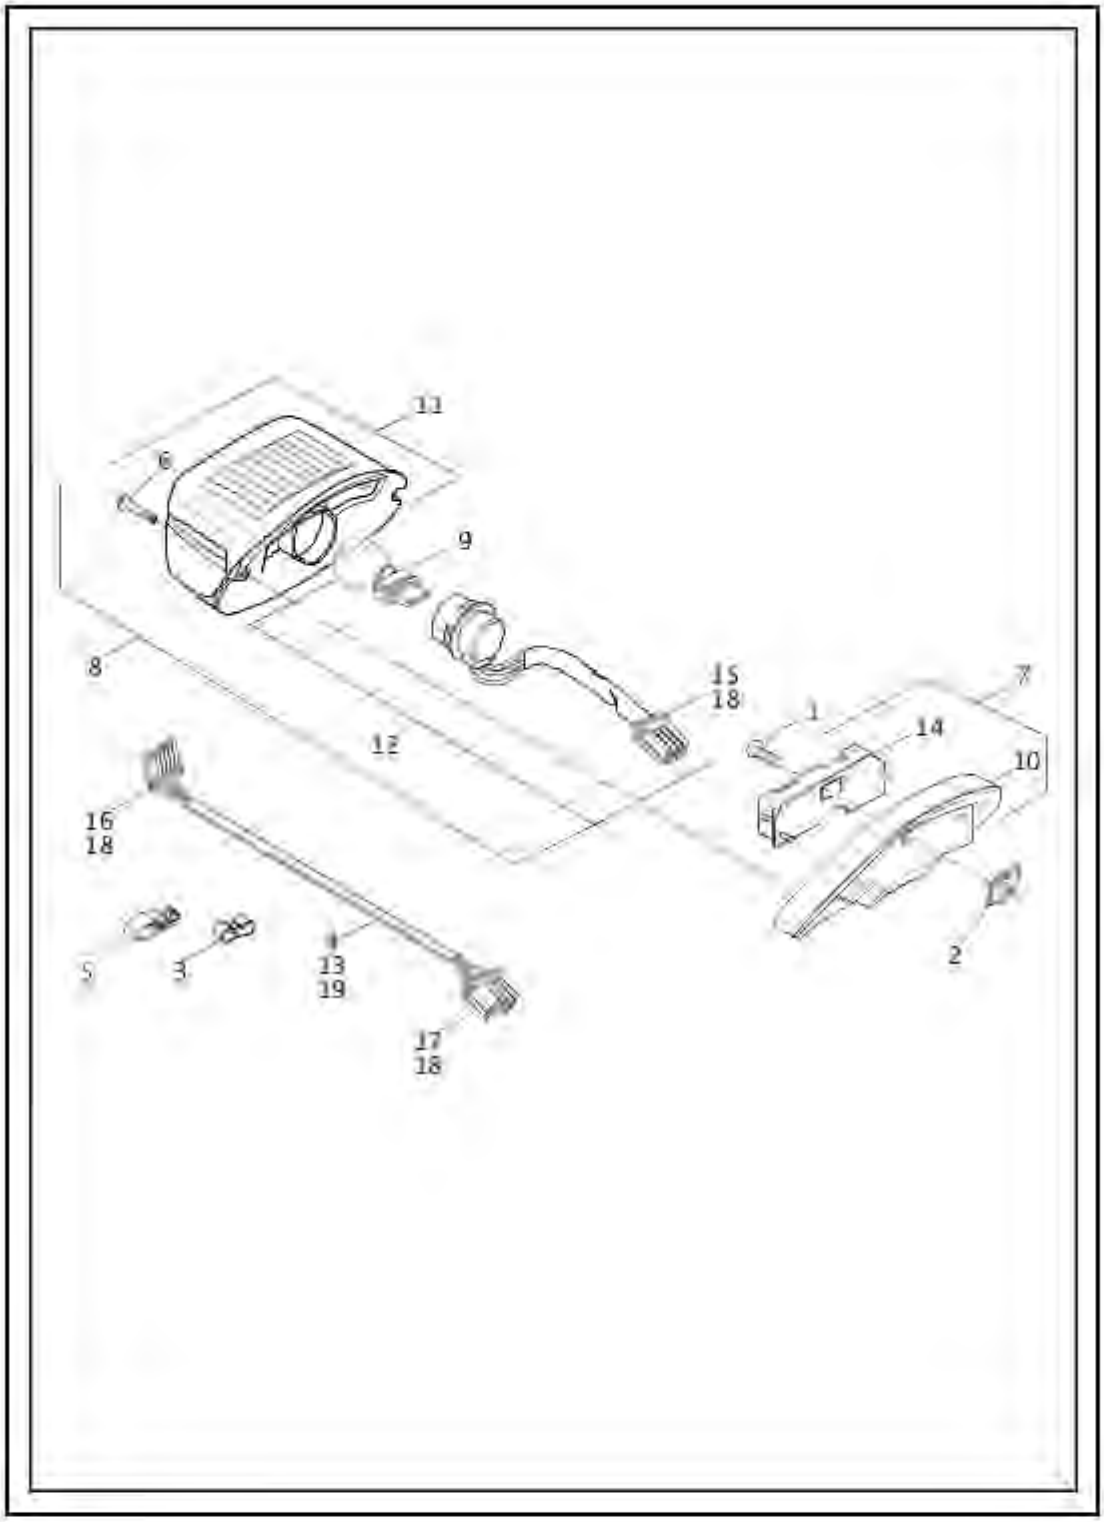

Index No.	Part No.	Description	Model(s)
1	3022A	SCREW	FLSTC, FLSTF, FLSTFB, FLSTFBS
2	7964	J-NUT	FLSTC, FLSTF, FLSTFB, FLSTFBS
3	10113	CLIP, double *(2)*	FLSTC
4	10115	CABLE STRAP	FLSTC, FLSTF
5	10183	CLIP, T-stud	FLSTC

	10183	CLIP, T-stud *(2)*	FLSTF, FLSTFB, FLSTFBS
6	68026-99	SCREW, tail lamp *(2)*	FLSTC, FLSTF, FLSTFB, FLSTFBS
7	68066-99A	BASE ASSEMBLY, tail light, chrome, with 68296-99A and 68830-99A	FLSTC, FLSTF, FLSTFB, FLSTFBS
8	68140-04	LIGHT ASSEMBLY, tail lamp, with 68369-03 and 68370-03A	FLSTC, FLSTF, FLSTFB, FLSTFBS
	68141-04	LIGHT ASSEMBLY, tail lamp, with 68372-03 and 69187-03A (HDI)	FLSTC, FLSTF, FLSTFB, FLSTFBS
9	68167-04	BULB, tail lamp, wedge mount	FLSTC, FLSTF, FLSTFB, FLSTFBS
	68167-04	BULB, tail lamp (HDI), wedge mount (HDI)	FLSTC, FLSTF, FLSTFB, FLSTFBS
10	68296-99A	TAIL LIGHT BASE, chrome	FLSTC, FLSTF, FLSTFB, FLSTFBS
11	68369-03	LENS, tail lamp, with 68026-99	FLSTC, FLSTF, FLSTFB, FLSTFBS
	68372-03	LENS, tail lamp, with 68026-99 (HDI)	FLSTC, FLSTF, FLSTFB, FLSTFBS
12	68370-03A	BULB SOCKET ASSEMBLY, with 68167-04, 73154-96BK and 73191-96	FLSTC, FLSTF, FLSTFB, FLSTFBS
	69187-03A	BULB SOCKET ASSEMBLY, with 68167-04, 73154-96BK and 73191-96 (HDI)	FLSTC, FLSTF, FLSTFB, FLSTFBS
13	68818-03B	HARNESS, rear lamps, with 10115, 70523-06, 73156-96BK, 73158-96BK and 73191-96	FLSTC
	69486-06B	HARNESS, rear lamps, with 73156-96BK, 73158-96BK and 73191-96	FLSTF, FLSTFB, FLSTFBS
14	68830-99A	CIRCUIT BOARD AND COVER	FLSTC, FLSTF, FLSTFB, FLSTFBS
15	73154-96BK	HOUSING, four-way socket	FLSTC, FLSTF, FLSTFB, FLSTFBS
16	73156-96BK	HOUSING, six-way socket	FLSTC, FLSTF, FLSTFB, FLSTFBS
17	73158-96BK	HOUSING, eight-way socket	FLSTC, FLSTF, FLSTFB, FLSTFBS
18	73191-96	TERMINAL, socket, 16-20 AWG *(16)*	FLSTC, FLSTF, FLSTFB, FLSTFBS
19	69200018	CONDUIT, harness	FLSTC

TAIL LAMP - FLSTN

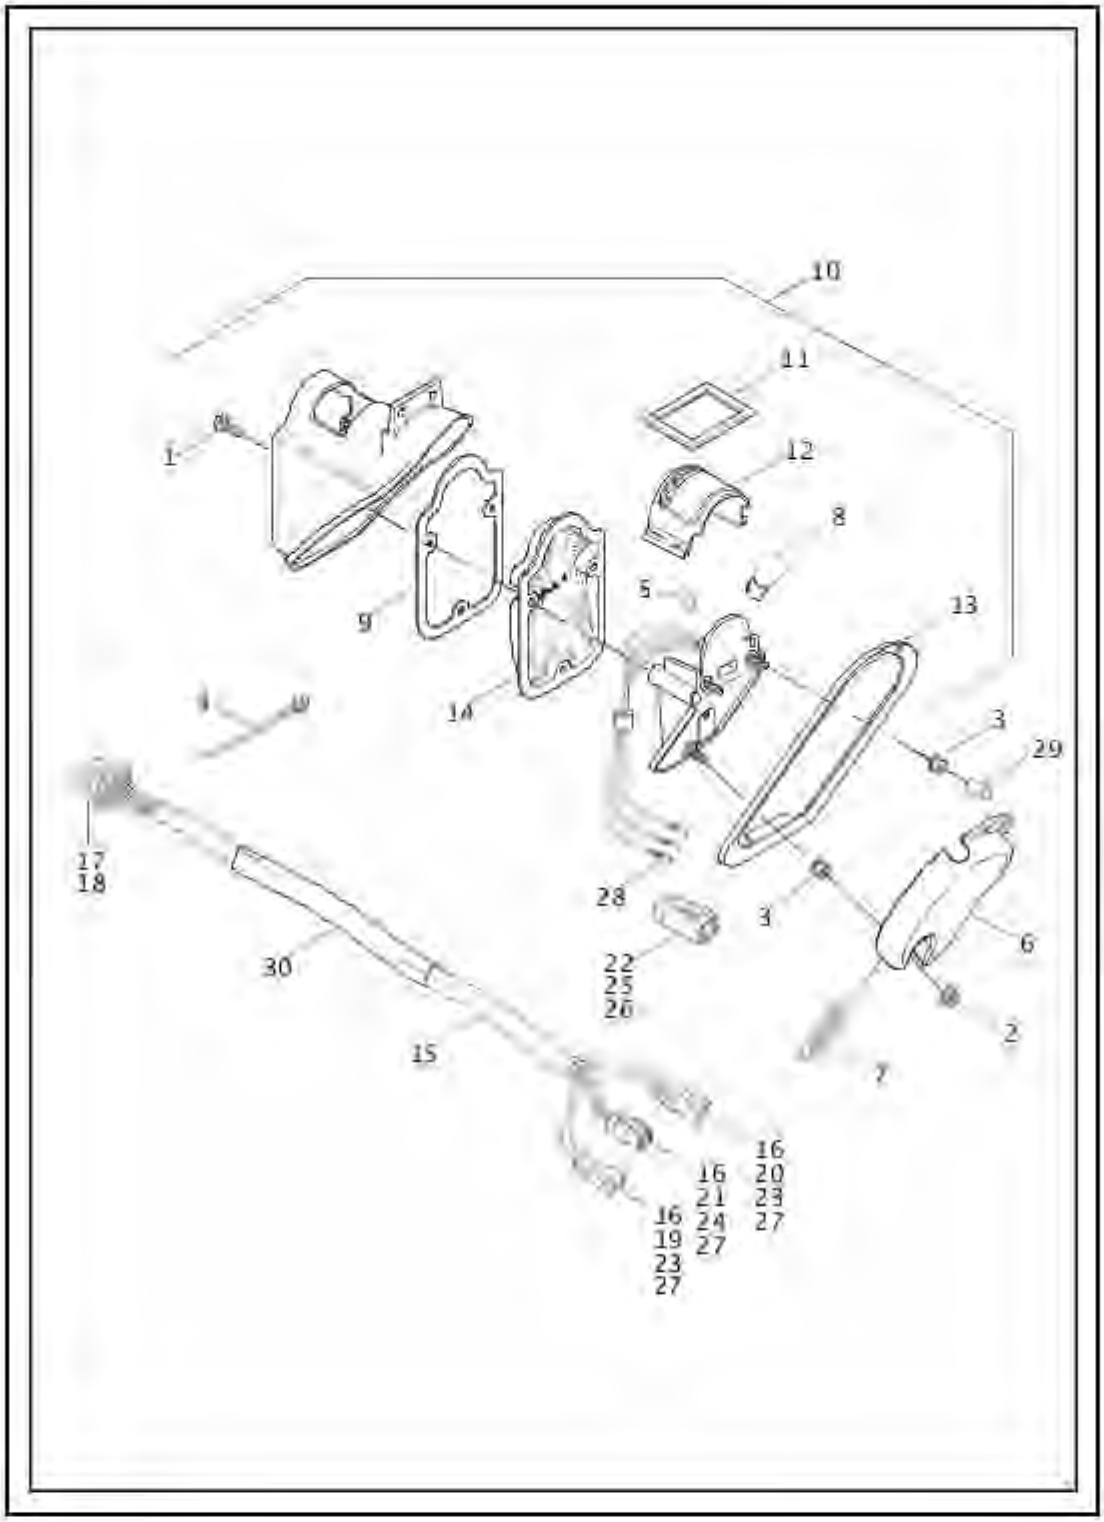

Index No.	Part No.	Description	Model(s)
1	4166	SCREW *(3)*	FLSTN
2	7686	LOCKNUT	FLSTN
3	7792	NUT *(3)*	FLSTN
4	10115	CABLE STRAP	FLSTN
5	52441-95	BULB, license lamp	FLSTN
	53436-97	BULB, license lamp (HDI)	FLSTN
6	68003-05	COVER, tail light connector	FLSTN

7	68089-05	CLIP, tail lamp connector cover	FLSTN
8	68168-89A	BULB, tail lamp	FLSTN
	68169-90A	BULB, tail lamp (Asia-Pacific, Australia, Brazil, HDI, Japan)	FLSTN
9	68226-97	GASKET, lens	FLSTN
10	68280-05	TAIL LAMP ASSEMBLY	FLSTN
	68281-05	TAIL LAMP ASSEMBLY, (Asia-Pacific, Australia, Brazil, HDI, Japan)	FLSTN
11	68235-97	GASKET, license plate lens	FLSTN
12	68236-97	LENS, license plate	FLSTN
13	68237-97	PAD, mounting	FLSTN
14	68238-97	LENS	FLSTN
	68239-97	LENS, tail lamp (red) (Asia-Pacific, Australia, Brazil, HDI, Japan)	FLSTN
15	68834-05A	HARNESS, rear lighting	FLSTN
16	72199-94	CONNECTOR ANCHOR *(3)*	FLSTN
17	73158-96BK	HOUSING, eight-way socket (black)	FLSTN
18	73191-96	TERMINAL, socket, 16-20 AWG *(8)*	FLSTN
19	74102-98BK	HOUSING, two-way pin (black)	FLSTN
20	74102-05GY	HOUSING, two-way pin (gray)	FLSTN
21	74104-98BK	HOUSING, four-way pin (black)	FLSTN
22	74114-98BK	HOUSING, four-way socket (black)	FLSTN
23	74142-98	SECONDARY LOCK, two-way *(2)*	FLSTN
24	74144-98	SECONDARY LOCK, four-way	FLSTN
25	74154-98	SECONDARY LOCK, four-way socket	FLSTN
26	74195-98	SEAL PIN	FLSTN
27	74190-98	TERMINAL, pin *(8)*	FLSTN
28	74191-98	TERMINAL, socket *(3)*	FLSTN
29	89587-05	CAP, thread protector *(2)*	FLSTN
30	69200018	CONDUIT, harness	FLSTN

EXHAUST SYSTEM - FXSB

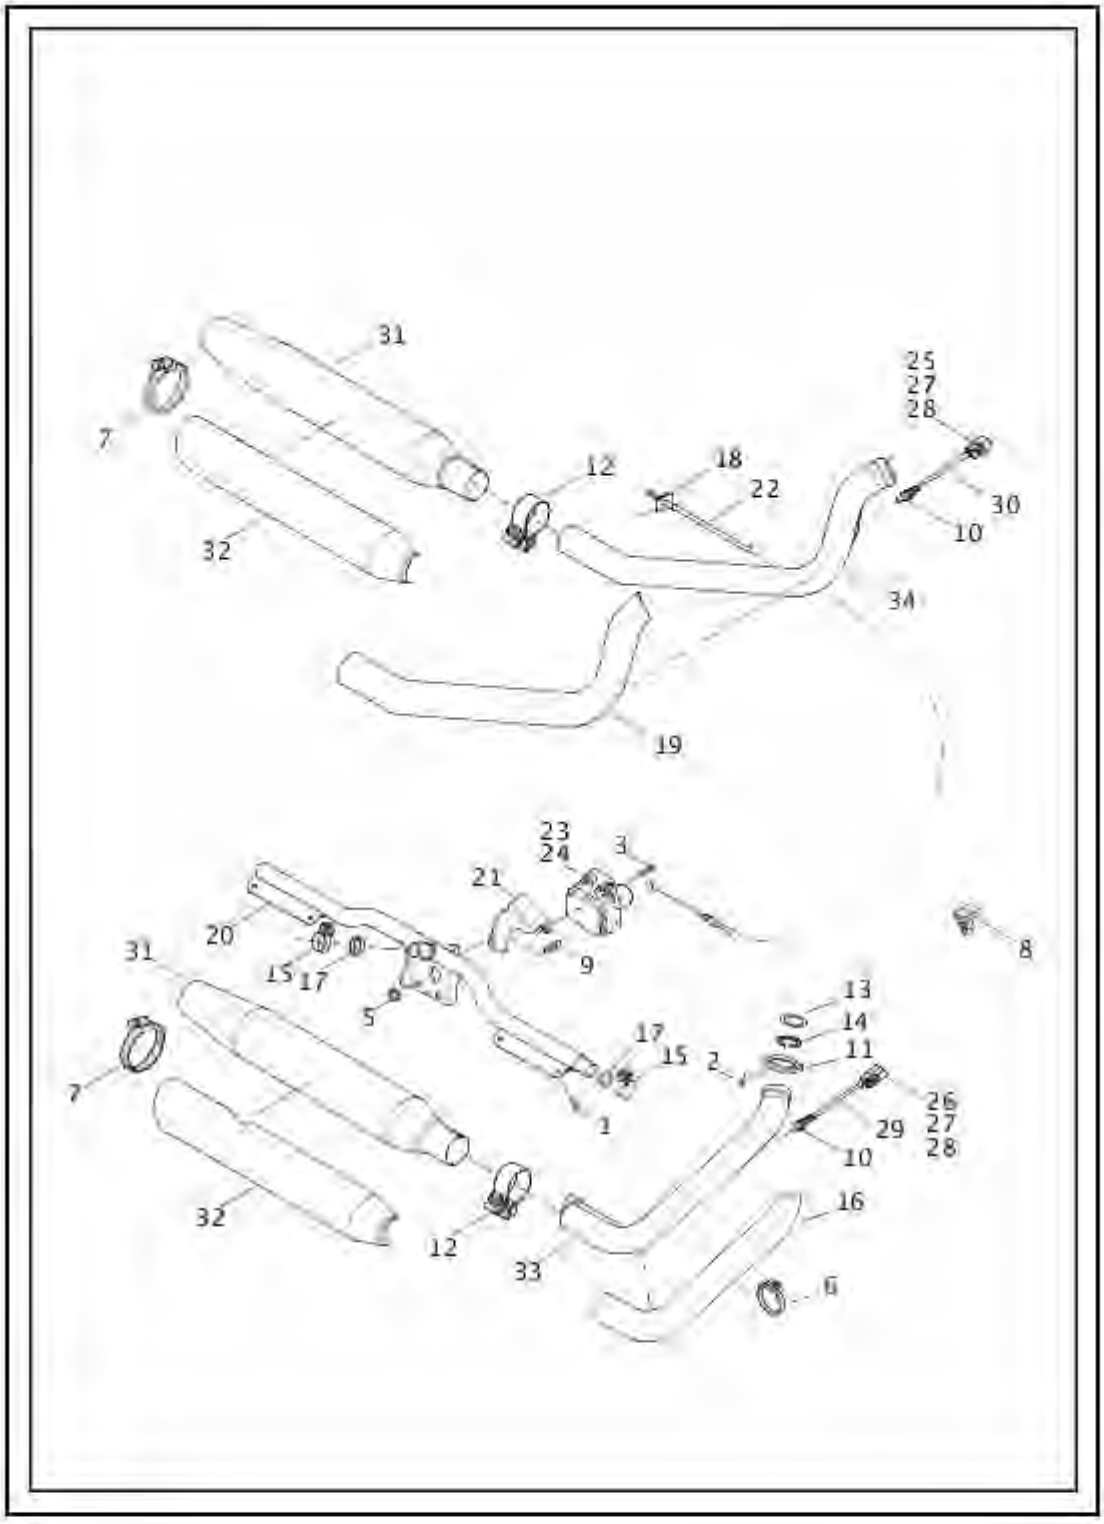

Index No.	Part No.	Description	Model(s)
1	3391	SCREW *(4)*	FXSB
2	3574	SCREW *(2)*	FXSB
3	3799	SCREW, (Australia England, HDI, India) *(2)*	FXSB
4	7593	NUT *(4)*	FXSB
5	7601	LOCKNUT *(2)*	FXSB
6	9955	CLAMP, shield *(4)*	FXSB

7	10074	CLAMP, shield *(4)*	FXSB
8	10147	CLIP, connector oxygen sensor (not illustrated) *(2)*	FXSB
9	11860	STUD, spacer *(2)*	FXSB
10	11936	GASKET, oxygen sensor *(2)*	FXSB
11	65184-02	FLANGE, exhaust pipe *(2)*	FXSB
12	65296-95A	CLAMP, muffler *(2)*	FXSB
13	65324-83B	GASKET, exhaust port *(2)*	FXSB
14	65325-83A	RETAINING RING, exhaust gasket *(2)*	FXSB
15	65521-10	KIT-CLAMP, interconnect, with 65830-10 *(2)*	FXSB
16	65707-10A	SHIELD, front exhaust	FXSB
17	65830-10	GASKET, exhaust interconnect *(2)*	FXSB
18	66767-07	RETAINER, front/rear (Australia, England, HDI)	FXSB
19	66772-08A	SHIELD, rear exhaust	FXSB
20	66773-10	TUBE ASSEMBLY, interconnect	FXSB
21	66797-07	BRACKET ASSEMBLY, actuator support (Australia, England, HDI, India)	FXSB
22	66847-08	CABLE, with 66767-07 (Australia, England, HDI)	FXSB
23	70991-07	EXHAUST ACTUATOR, with 71019-07 (Australia, England, HDI, India)	FXSB
24	71019-07	SHROUD, exhaust actuator (Australia, England, HDI, India)	FXSB
25	72177-07BK	HOUSING, four-way, socket (black)	FXSB
26	72344-10	TERMINAL, socket, 22 AWG (gold) *(4)*	FXSB
27	72444-07GY	HOUSING, four-way, socket (gray)	FXSB
28	73307-10	TERMINAL, socket, 22 AWG *(4)*	FXSB
29	32700005	OXYGEN SENSOR, front, with 11936, 72344-10, 72444-07GY and 73307-10	FXSB
30	32700006	OXYGEN SENSOR, rear, with 11936, 72177-07BK, 72344-10 and 73307-10	FXSB
31	64900168	MUFFLER ASSEMBLY, front (Australia)	FXSB
	64900169	MUFFLER ASSEMBLY, rear (Australia)	FXSB
	64900170	MUFFLER ASSEMBLY, front/rear *(2)*	FXSB
	64900171	MUFFLER ASSEMBLY, rear (England, HDI, India)	FXSB
	64900172	MUFFLER ASSEMBLY, front (England, HDI, India)	FXSB
	64900172	MUFFLER ASSEMBLY, front/rear (Brazil, Japan) *(2)*	FXSB
	65682-07	MUFFLER ASSEMBLY, front/rear (Asia-Pacific) *(2)*	FXSB
32	65400106	SHIELD, muffler, front	FXSB

	65400107	SHIELD, muffler, rear	FXSB
	65463-00	SHIELD, muffler (Asia-Pacific) *(2)*	FXSB
33	65600031	EXHAUST PIPE ASSEMBLY, front	FXSB
34	65600056	EXHAUST PIPE ASSEMBLY, rear (Asia-Pacific, Brazil, Canada, Domestic, Japan)	FXSB
	65600059	EXHAUST PIPE ASSEMBLY, rear (Australia, England, HDI)	FXSB

EXHAUST SYSTEM - FLSTC

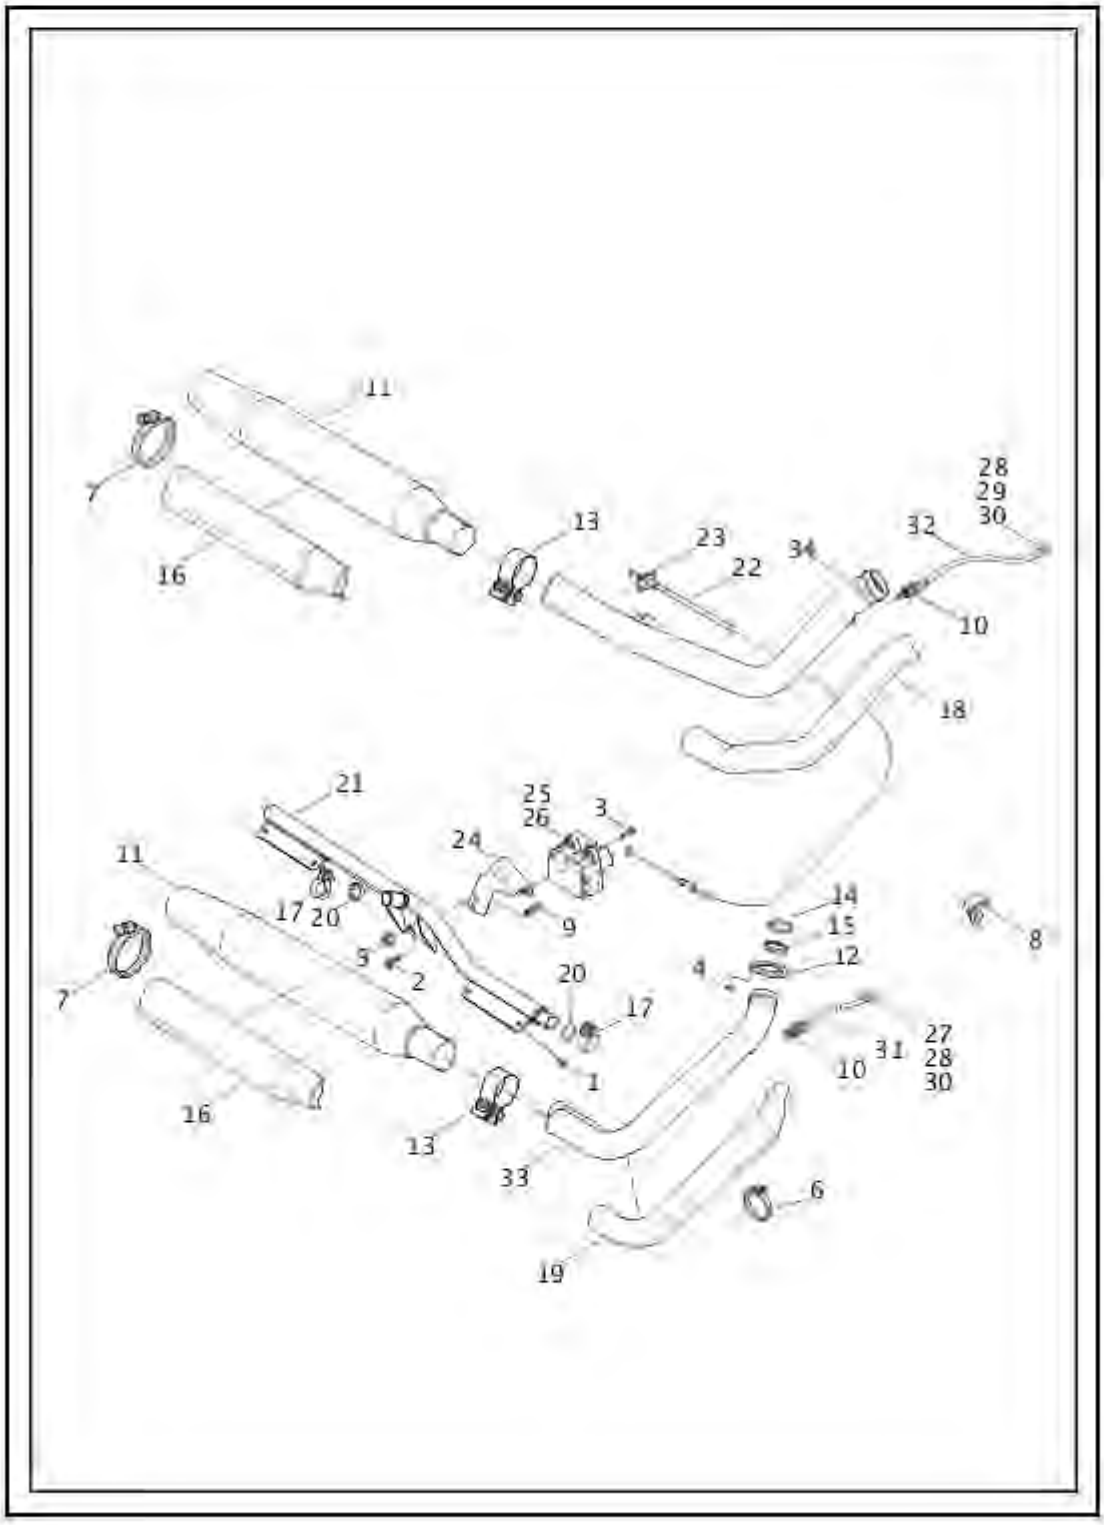

Index No.	Part No.	Description	Model(s)
1	3391	SCREW *(4)*	FLSTC
2	3574	SCREW, (HDI, Australia, England, India) *(2)*	FLSTC
3	3799	SCREW, (HDI, Australia, England, India) *(2)*	FLSTC
4	7593	NUT *(4)*	FLSTC
5	7601	LOCKNUT *(2)*	FLSTC
6	9955	CLAMP, shield *(4)*	FLSTC
7	10074	CLAMP, shield *(4)*	FLSTC
8	10147	CLIP, connector oxygen sensor *(2)*	FLSTC
9	11860	STUD, spacer *(2)*	FLSTC
10	11936	GASKET, oxygen sensor	FLSTC
11	64708-08B	MUFFLER ASSEMBLY, front and rear (California, Canada, Domestic) *(2)*	FLSTC
	65682-07	MUFFLER ASSEMBLY, front and rear (Brazil) *(2)*	FLSTC
	65682-07	MUFFLER ASSEMBLY, front (HDI, England, India)	FLSTC
	65685-07	MUFFLER ASSEMBLY, rear (HDI, England, India)	FLSTC
	64900105	MUFFLER ASSEMBLY, front (Australia)	FLSTC
	64900106	MUFFLER ASSEMBLY, rear (Australia)	FLSTC
12	65184-02	FLANGE, exhaust pipe *(2)*	FLSTC
13	65296-95A	CLAMP, muffler *(2)*	FLSTC
14	65324-83B	GASKET, exhaust port	FLSTC
15	65325-83A	RETAINING RING, exhaust gasket *(2)*	FLSTC
16	65463-00	SHIELD, muffler *(2)*	FLSTC
17	65521-10	KIT-CLAMP, interconnect *(2)*	FLSTC
18	65702-00A	SHIELD, rear exhaust	FLSTC
19	65715-10	SHIELD, front exhaust	FLSTC
20	65830-10	GASKET, exhaust interconnect *(2)*	FLSTC
21	66737-10A	TUBE ASSEMBLY, interconnect	FLSTC
22	66763-07	EXHAUST ACTUATOR CABLE, with 66767-07 (HDI, Australia, England, India)	FLSTC
23	66767-07	RETAINER, cable (HDI, Australia, England, India)	FLSTC
24	66797-07	BRACKET ASSEMBLY, exhaust actuator (HDI, Australia, England, India)	FLSTC
25	70991-07	EXHAUST ACTUATOR, with 71019-07 (HDI, Australia, England, India)	FLSTC

26	71019-07	SHROUD, exhaust actuator (HDI, Australia, England, India)	FLSTC
27	72177-07BK	HOUSING, four-way socket (black)	FLSTC
28	72344-10	TERMINAL, socket 22 AWG (gold) *(2)*	FLSTC
29	72444-07GY	HOUSING, four-way socket (gray)	FLSTC
30	73307-10	TERMINAL, socket 22 AWG *(2)*	FLSTC
31	32700005	OXYGEN SENSOR, front, with 11936, 72344-10, 72444-07GY and 73307-10	FLSTC
32	32700006	OXYGEN SENSOR, rear, with 11936, 72177-07BK, 72344-10 and 73307-10	FLSTC
33	65600031	EXHAUST PIPE ASSEMBLY, front	FLSTC
34	65600035A	EXHAUST PIPE ASSEMBLY, rear (Domestic, California, Canada)	FLSTC
	65600039A	EXHAUST PIPE ASSEMBLY, rear (HDI, Australia, England, India)	FLSTC
	65600035A	EXHAUST PIPE ASSEMBLY, rear (Asia-Pacific, Brazil, Japan)	FLSTC

EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)

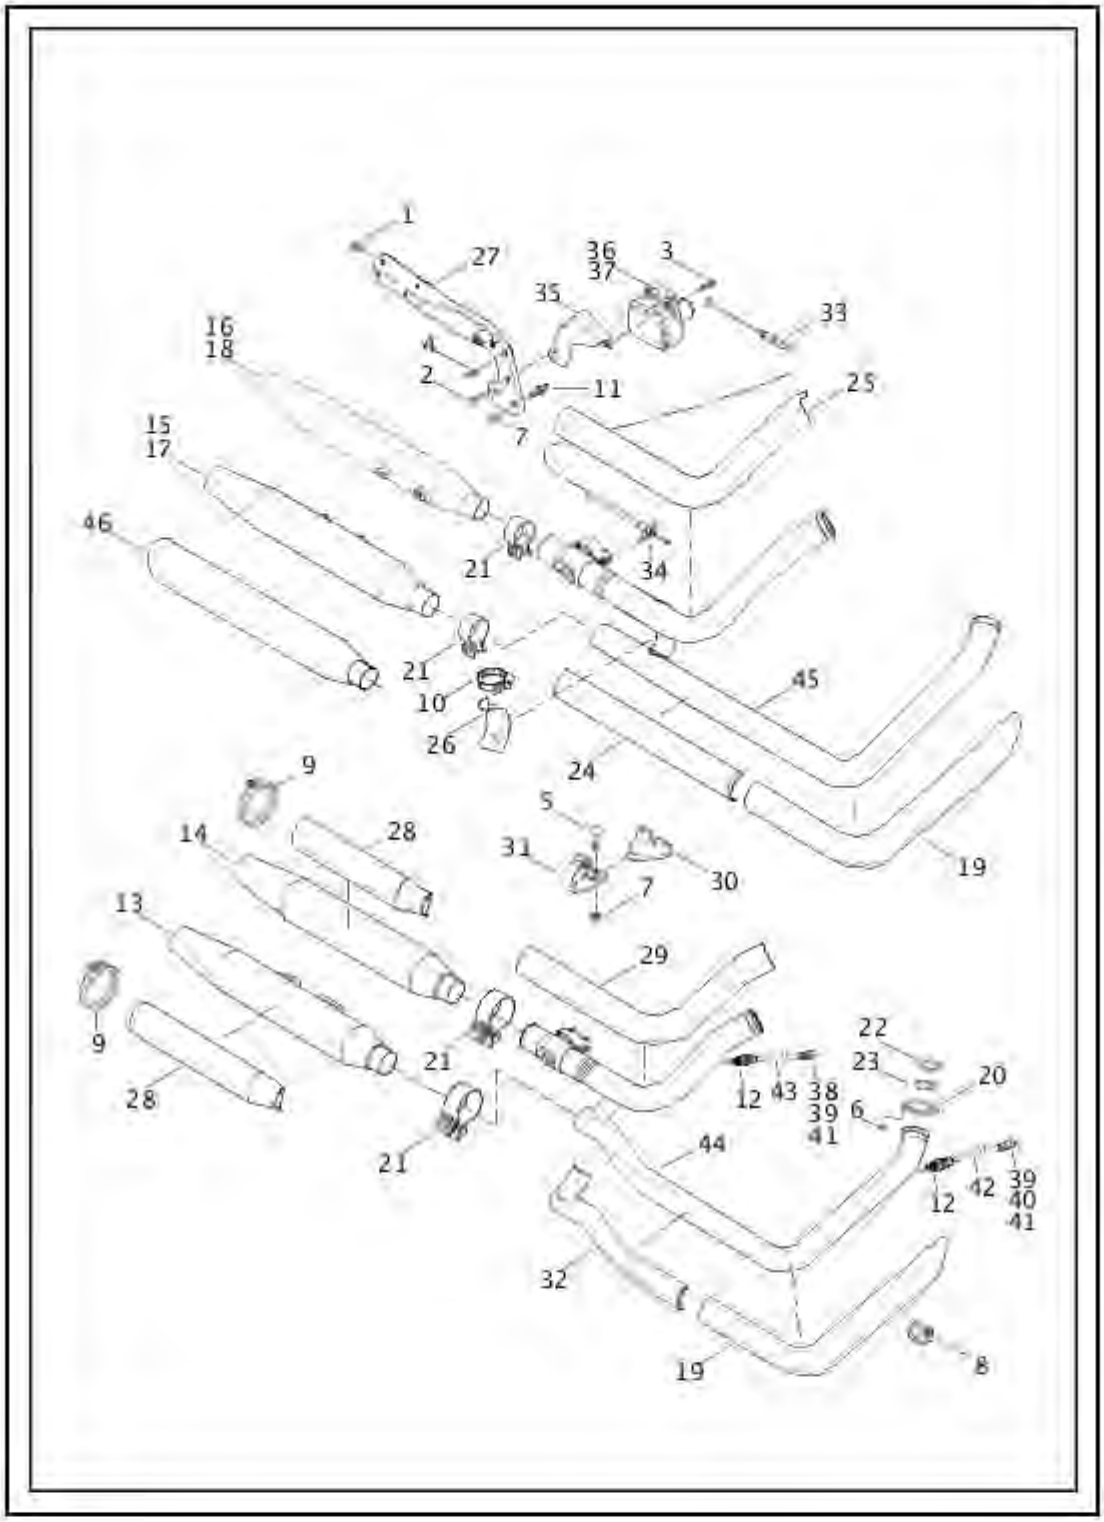

Index No.	Part No.	Description	Model(s)
1	3391	SCREW *(4)*	FLSTN, FLS, FLSS
	3391	SCREW *(6)*	FLSTF, FLSTFB, FLSTFBS
2	3574	SCREW, (HDI, Australia, England, India) *(2)*	FLSTF, FLSTN, FLSTFB, FLS
3	3799	SCREW, (HDI, Australia, England, India) *(2)*	FLSTF, FLSTN, FLSTFB, FLS
4	4190	SCREW	FLSTN, FLS, FLSS
5	5416	BOLT	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS

6	7593	NUT *(4)*	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
7	7601	LOCKNUT *(3)*	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
8	9955	CLAMP *(7)*	FLSTF, FLSTFB, FLSTFBS
	9955	CLAMP *(8)*	FLSTN, FLS, FLSS
9	10074	CLAMP, muffler shield *(4)*	FLSTF, FLSTN, FLSTFB, FLS
	10800010	CLAMP, muffler shield (black) *(4)*	FLSS, FLSTFBS
10	10119	CLAMP	FLSTN, FLS
11	11860	STUD, spacer *(2)*	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
12	11936	GASKET, oxygen sensor	FLSTF, FLSTN, FLSTFB, FLS
13	64709-08B	MUFFLER ASSEMBLY, front (chrome)	FLSTF
	65822-10A	MUFFLER ASSEMBLY, front (satin chrome)	FLSTFB
	65870-10	MUFFLER ASSEMBLY, front (HDI, Asia-Pacific, Brazil, England, India, Japan)	FLSTFB
	65939-07	MUFFLER ASSEMBLY, front (HDI, Asia-Pacific, Brazil, England, India, Japan)	FLSTF
	64900139	MUFFLER ASSEMBLY, front (Australia)	FLSTF
	64900144	MUFFLER ASSEMBLY, front (Australia)	FLSTFB
14	64710-08B	MUFFLER ASSEMBLY, rear (chrome)	FLSTF
	64729-08	MUFFLER ASSEMBLY, rear (chrome) (Asia-Pacific, Japan)	FLS
	64961-07	MUFFLER ASSEMBLY, rear (Asia-Pacific, Brazil, Japan)	FLSTF
	65862-10A	MUFFLER ASSEMBLY, rear (satin chrome)	FLSTFB
	65920-10	MUFFLER ASSEMBLY, rear (chrome) (Asia-Pacific, Brazil, Japan)	FLSTFB
	64900143	MUFFLER ASSEMBLY, rear (Australia)	FLSTF
	64900145	MUFFLER ASSEMBLY, rear (Australia)	FLSTFB
	65880-10	MUFFLER ASSEMBLY, rear (HDI, England, India)	FLSTFB
	65950-07	MUFFLER ASSEMBLY, rear (HDI, England, India)	FLSTF
15	64711-08B	MUFFLER ASSEMBLY, front (chrome)	FLSTN
	65368-07	MUFFLER ASSEMBLY, front (HDI, Asia-Pacific, Brazil, England, Japan)	FLSTN

	64900141	MUFFLER ASSEMBLY, front (Australia)	FLSTN
16	64712-08B	MUFFLER ASSEMBLY, rear (chrome)	FLSTN
	65372-07	MUFFLER ASSEMBLY, rear (HDI, England)	FLSTN
	64960-07	MUFFLER ASSEMBLY, rear (Asia-Pacific, Brazil, Japan)	FLSTN
	64900142	MUFFLER ASSEMBLY, rear (Australia)	FLSTN
17	64734-08A	MUFFLER ASSEMBLY, front, catalytic (chrome)	FLS
	64727-08	MUFFLER ASSEMBLY, front, catalytic (Asia-Pacific, England, HDI, Japan) (chrome)	FLS
	64900140	MUFFLER ASSEMBLY, front (Australia) (chrome)	FLS
18	64735-08A	MUFFLER ASSEMBLY, rear, catalytic (chrome)	FLS
	64728-08	MUFFLER ASSEMBLY, rear, catalytic (England, HDI) (chrome)	FLS
	64900146	MUFFLER ASSEMBLY, rear (Australia) (chrome)	FLS

EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)

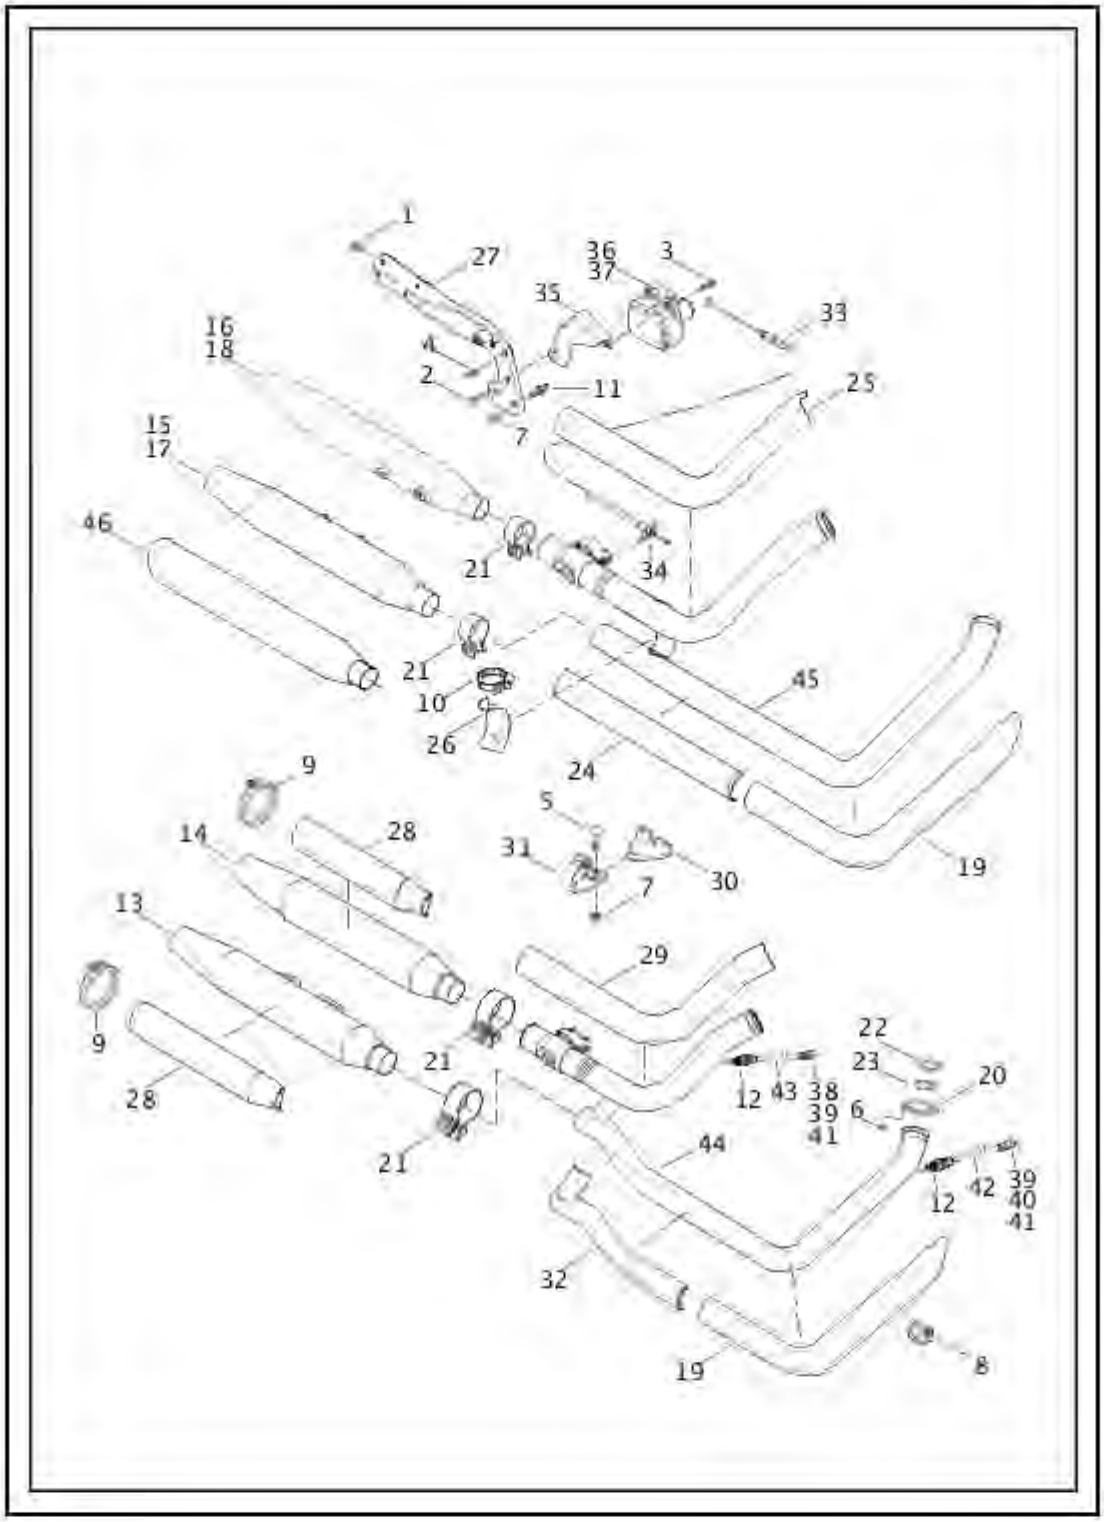

Index No.	Part No.	Description	Model(s)
19	65148-00B	SHIELD, front exhaust	FLSTF, FLSTN, FLS
	66899-10A	SHIELD, front exhaust	FLSTFB, FLSS, FLSTFBS
20	65184-02	FLANGE, exhaust manifold *(2)*	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
21	65296-95A	CLAMP, muffler *(2)*	FLSTF, FLSTN, FLSTFB, FLS, FLSTFBS

22	65324-83B	GASKET, exhaust port *(2)*	FLSTF, FLSTN, FLSTFB, FLS, FLSS
23	65325-83A	RETAINING RING, exhaust gasket *(2)*	FLSTF, FLSTN, FLSTFB, FLS, FLSTFBS
24	65383-05	SHIELD, exhaust pipe	FLSTN, FLS
	80826-10	SHIELD, exhaust pipe (black)	FLSS
25	65389-05B	SHIELD, rear exhaust pipe	FLSTN, FLS
	80830-10A	SHIELD, rear exhaust pipe (black)	FLSS
26	65395-05	SHIELD, interconnect	FLSTN, FLS, FLSS
27	65399-07	MUFFLER SUPPORT	FLSTN, FLS, FLSS
	65435-07BHP	MUFFLER SUPPORT, (gloss black)	FLSTF, FLSTFB
	65688-11BHP	MUFFLER SUPPORT, (gloss black)	FLSTFBS
28	65463-00	SHIELD, muffler *(2)*	FLSTF, FLSTN, FLS, FLSS
	66901-10	SHIELD, muffler *(2)*	FLSTFB
	65400277	SHIELD, muffler *(2)*	FLSS, FLSTFBS
29	65464-07A	SHIELD, rear exhaust pipe	FLSTF
	66897-10A	SHIELD, rear exhaust pipe	FLSTFB, FLSTFBS
30	65652-07	BRACKET, exhaust	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
31	65946-07	EXHAUST CLAMP ASSEMBLY	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
32	66274-07	SHIELD, exhaust pipe	FLSTF
	66882-10	SHIELD, exhaust pipe	FLSTFB, FLSTFBS
33	66764-07	EXHAUST ACTUATOR CABLE, (Australia, England, HDI, India)	FLSTF, FLSTFB, FLSTFBS
	66765-07	EXHAUST ACTUATOR CABLE, (Australia, England, HDI, India)	FLSTN, FLS
34	66767-07	RETAINER, cable (Australia, England, HDI, India)	FLSTF, FLSTN, FLSTFB, FLS
35	66797-07	BRACKET ASSEMBLY, exhaust actuator (Australia, England, HDI, India)	FLSTF, FLSTN, FLSTFB, FLS
36	70991-07	EXHAUST ACTUATOR, with 71019-07 (HDI, Australia, England)	FLSTF, FLSTN, FLSTFB, FLS
37	71019-07	SHROUD, exhaust actuator (Australia, England, HDI, India)	FLSTF, FLSTN, FLSTFB, FLS

38	72177-07BK	HOUSING, four-way socket (black)	FLSTF, FLSTN, FLSTFB, FLS
39	72344-10	TERMINAL, socket 22 AWG (gold) *(2)*	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
40	72444-07GY	HOUSING, four-way socket (gray)	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
41	73307-10	TERMINAL, socket 22 AWG *(2)*	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
42	32700005	OXYGEN SENSOR, front, with 11936, 72344-10, 72444-07GY and 73307-10	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
43	32700006	OXYGEN SENSOR, rear, with 11936, 72177-07BK, 72344-10 and 73307-10	FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
44	65600042	EXHAUST PIPE ASSEMBLY	FLSTF, FLSTFB, FLSTFBS
	65600042	EXHAUST PIPE ASSEMBLY, (Asia-Pacific, Brazil, Japan)	FLSTF, FLSTFB
	65600046	EXHAUST PIPE ASSEMBLY, (HDI, Australia, England, India)	FLSTF, FLSTFB
45	65600049	EXHAUST PIPE ASSEMBLY	FLSTN, FLS, FLSS
	65600049	EXHAUST PIPE ASSEMBLY, (Asia-Pacific, Brazil, Japan)	FLSTN, FLS
	65600053	EXHAUST PIPE ASSEMBLY, (HDI, Australia, England)	FLSTN, FLS
46	64900468	MUFFLER ASSEMBLY, front (black)	FLSS, FLSTFBS
	64900469	MUFFLER ASSEMBLY, rear (black)	FLSS, FLSTFBS
	64900470	MUFFLER ASSEMBLY, front (black) (Japan)	FLSS, FLSTFBS
	64900471	MUFFLER ASSEMBLY, rear (black) (Japan)	FLSS, FLSTFBS
	64900472	MUFFLER ASSEMBLY, front (black) (Australia, England, HDI)	FLSS, FLSTFBS
	64900473	MUFFLER ASSEMBLY, rear (black) (Australia, England, HDI)	FLSS, FLSTFBS

WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)

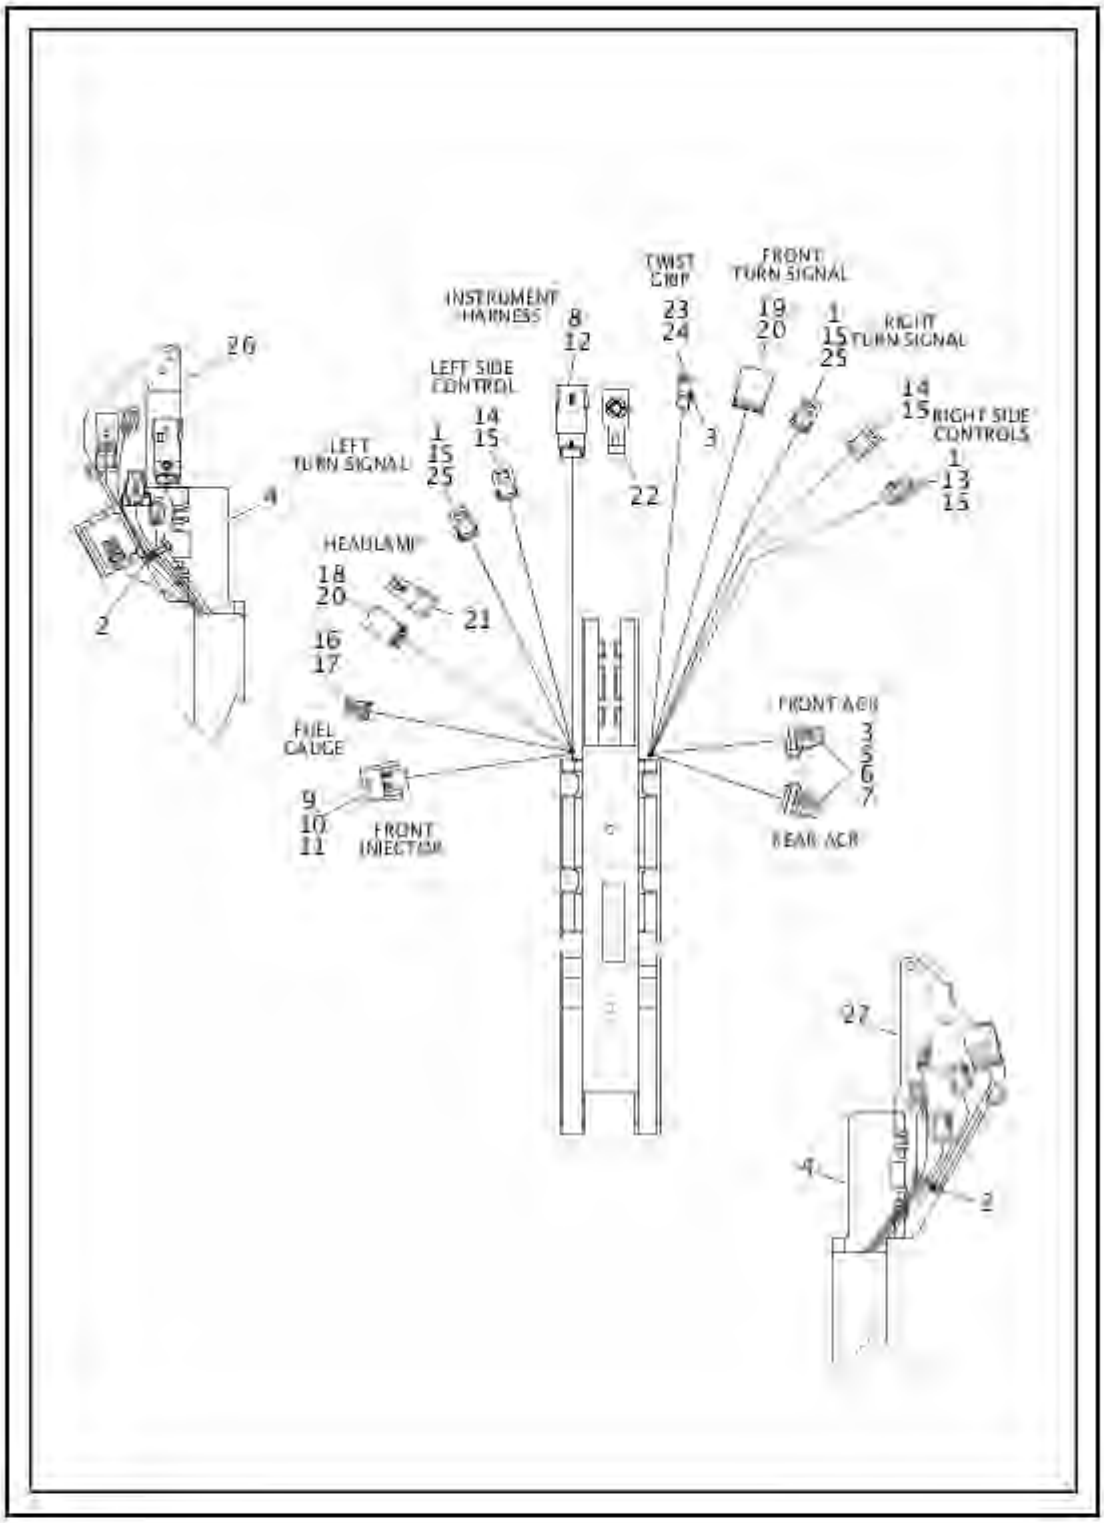

Index No.	Part No.	Description	Model(s)
	69201079	WIRING HARNESS, MAIN	FLS
NOTE: Includes the following parts.			
1	5118	SEAL PIN *(3)*	FLS
2	10065	CABLE STRAP *(2)*	FLS
3	10177	CABLE STRAP *(3)*	FLS
4	71044-11	WIRE TROUGH	FLS
5	72007-05	HOUSING, two-way socket *(2)*	FLS

6	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLS
7	72024-08	TERMINAL, socket, 20-22 AWG *(4)*	FLS
8	72169-07	TERMINAL, pin, 16-20 AWG *(8)*	FLS
9	72251-07	SECONDARY LOCK, two-way socket (yellow) *(2)*	FLS
10	72402-07	HOUSING, two-way socket	FLS
11	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLS
12	72478-07BK	HOUSING, eight-way pin (black)	FLS
13	72905-11	HOUSING, two-way pin	FLS
14	72907-11	HOUSING, four-way pin *(2)*	FLS
15	72909-11	TERMINAL, pin, 20-21 AWG *(15)*	FLS
16	72914-01BK	HOUSING, four-way socket (black)	FLS
17	72991-01	TERMINAL, socket, 18-22 AWG *(3)*	FLS
18	73104-96BK	HOUSING, four-way pin	FLS
19	73106-96BK	HOUSING, six-way pin	FLS
20	73190-96	TERMINAL, pin, 16-20 AWG *(10)*	FLS
21	73198-96	RETAINER, anchored clip	FLS
22	73213-07	RETAINER, anchored clip	FLS
23	69201163	HOUSING, six-way pin	FLS
24	69201164	TERMINAL, pin, 22 AWG *(6)*	FLS
25	69201180	HOUSING, four-way pin (gray) *(2)*	FLS
26	69201296	BRACKET, electrical connector, right	FLS
27	69201297	BRACKET, electrical connector, left	FLS

WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)

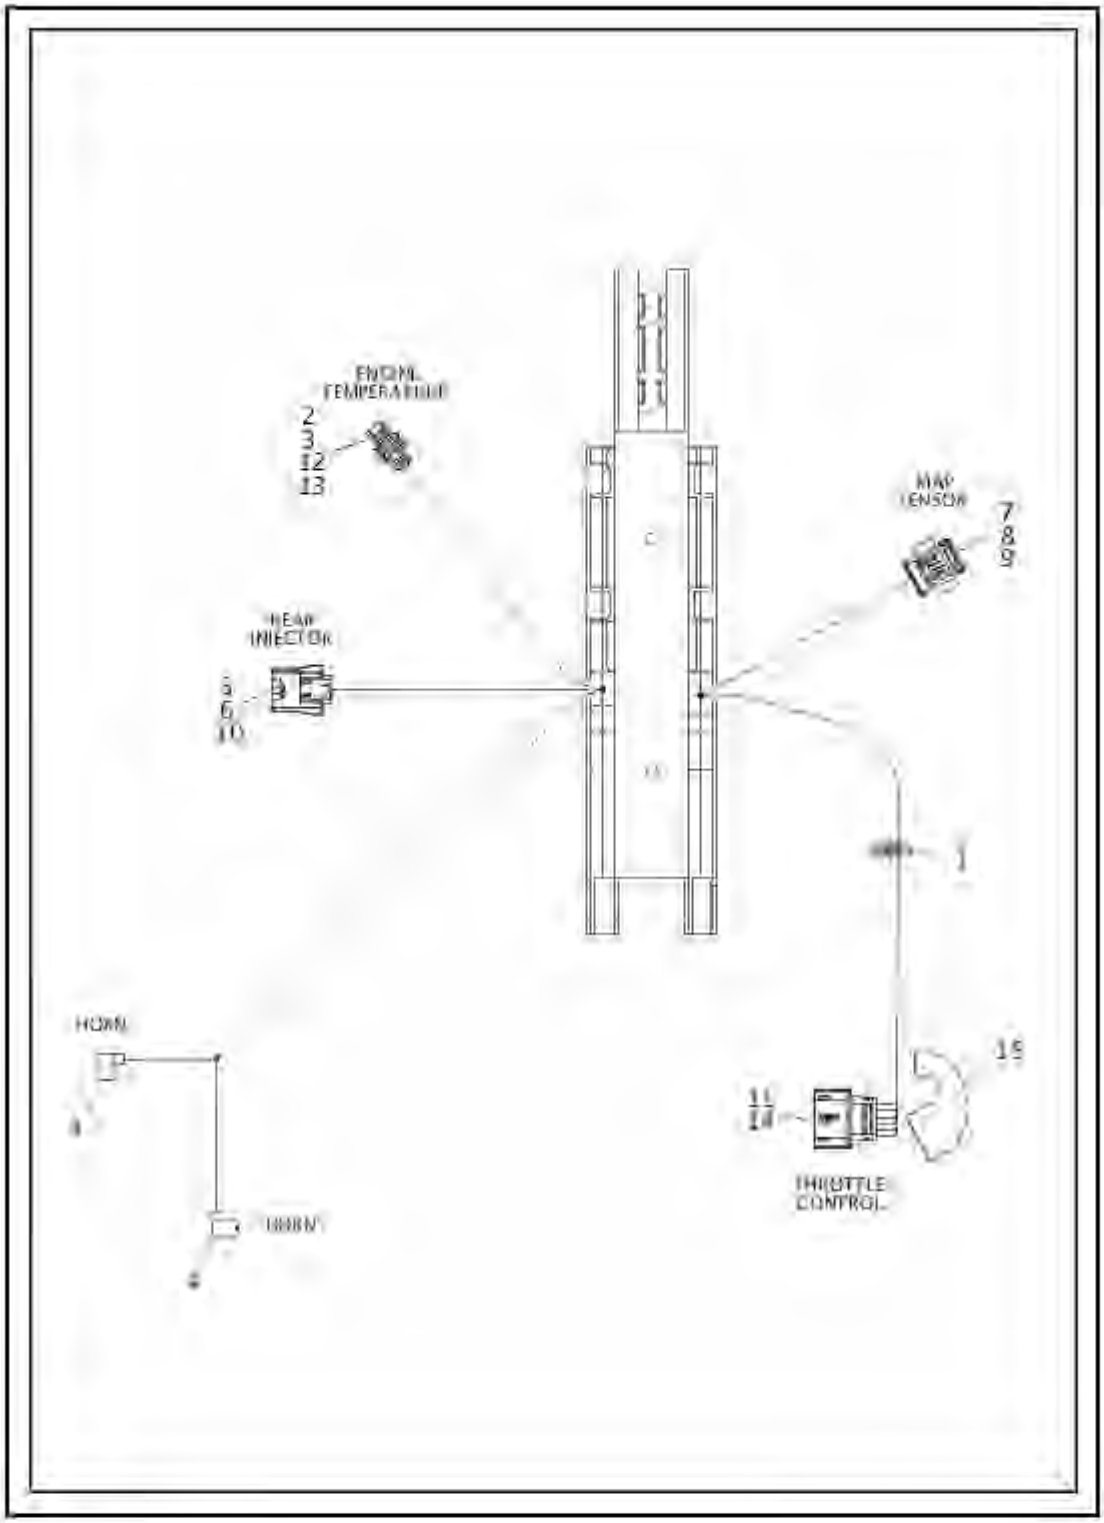

Index No.	Part No.	Description	Model(s)
	69201079	WIRING HARNESS, MAIN	FLS
NOTE: Includes the following parts.			
1	10177	CABLE STRAP	FLS
2	72063-06	HOUSING, two-way socket	FLS
3	72111-06	SECONDARY LOCK, two-way socket (gray)	FLS
4	72283-09	TERMINAL, socket, 14-16 AWG *(2)*	FLS
5	72251-07	SECONDARY LOCK, two-way socket (yellow)	FLS

6	72402-07	HOUSING, two-way socket (black)	FLS
7	72406-07A	HOUSING, four-way socket	FLS
8	72407-07	TERMINAL, socket, 16-20 AWG *(4)*	FLS
9	72408-07	WIRE SEAL, 20 AWG (blue) *(4)*	FLS
10	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLS
11	72483-08BK	HOUSING, six-way socket (black)	FLS
12	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLS
13	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLS
14	72663-11	TERMINAL, socket, 18-20 AWG (silver) *(6)*	FLS
15	69200437	BOOT, rubber	FLS

WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)

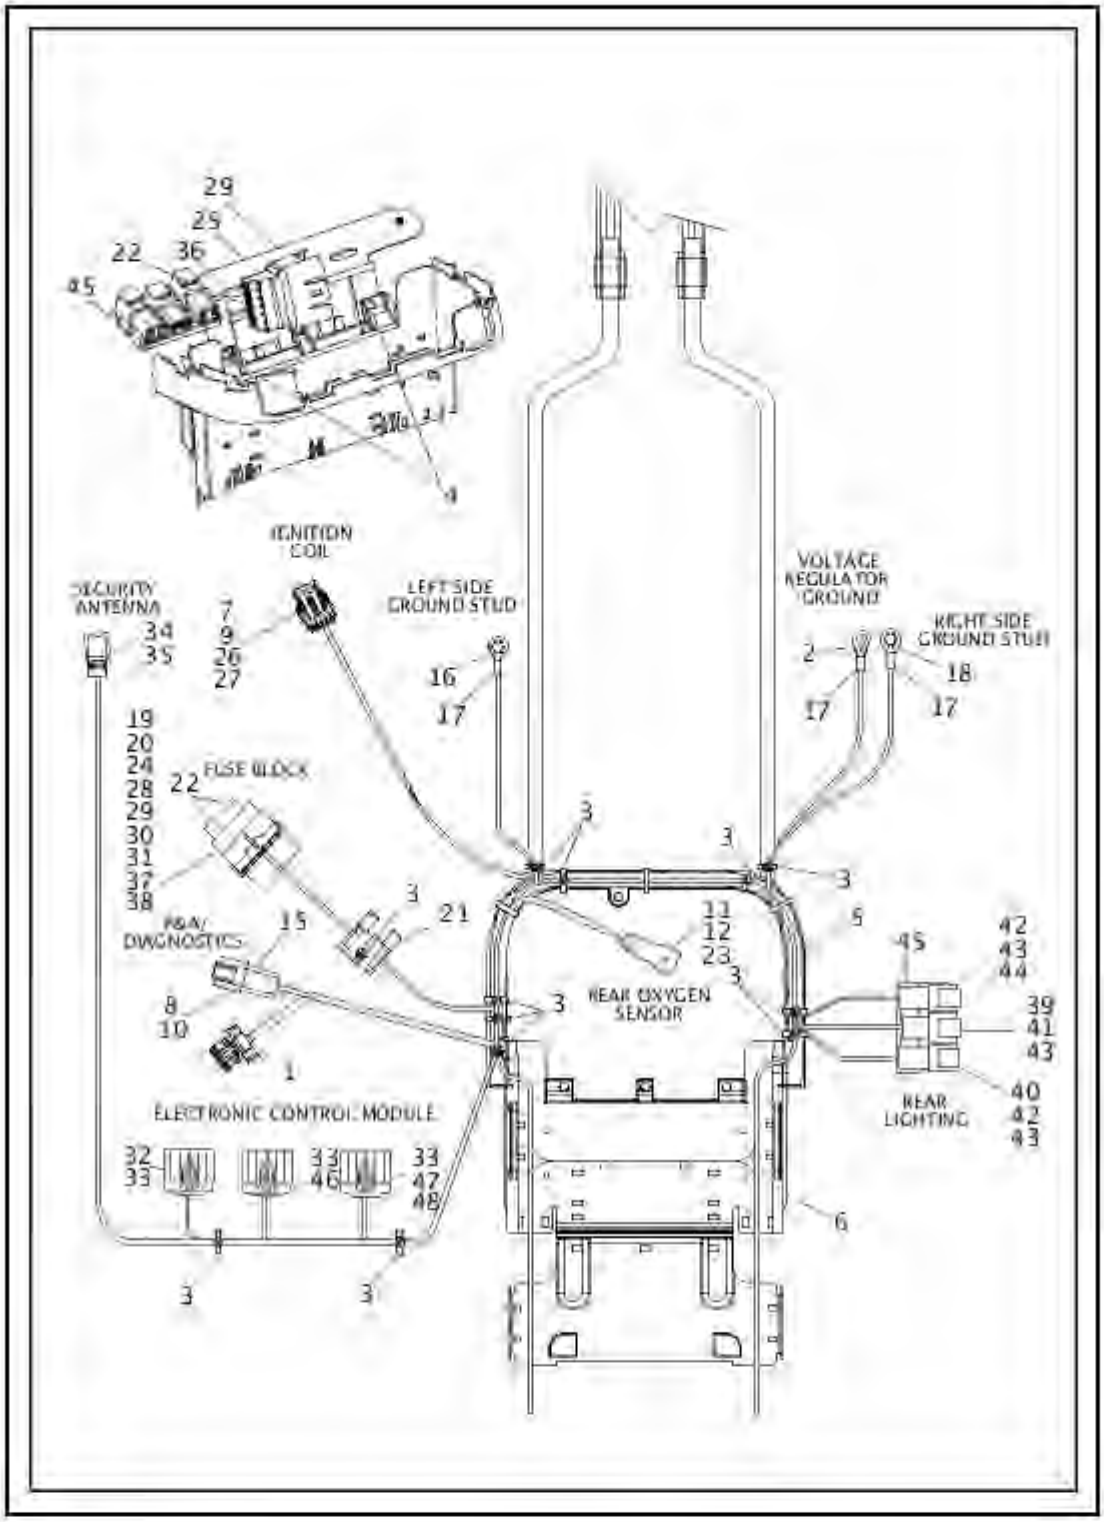

Index No.	Part No.	Description	Model(s)
	69201079	WIRING HARNESS, MAIN	FLS
NOTE: Includes the following parts.			
1	6990	PLUG, weather, six-way pin	FLS
2	9819	TERMINAL RING, .25 stud, 12 AWGX2	FLS
3	10065	CABLE STRAP *(12)*	FLS
4	11785	FASTENER, push-in *(2)*	FLS
5	70974-08A	LOOM SHIELD, wire harness	FLS

6	70982-08	WIRE SHIELD	FLS
7	72066-06A	HOUSING, four-way socket (black)	FLS
8	72106-94BK	HOUSING, six-way (black) (replaces gray connector)	FLS
9	72135-06	SECONDARY LOCK, four-way socket (gray)	FLS
10	72146-94	PIN LOCK, sec 6	FLS
11	72169-07	TERMINAL, pin, 16-20 AWG *(2)*	FLS
12	72175-07BK	HOUSING, four-way, pin (black)	FLS
13	72190-94	TERMINAL, pin, #16-18 AWG *(3)*	FLS
14	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLS
15	72199-94	CONNECTOR ANCHOR	FLS
16	72242-94	TERMINAL, 1/4 ring	FLS
17	72249-94	HEAT SHRINK TUBE, .415 x 1 (black)	FLS
18	72254-94	TERMINAL RING, .25 stud, 14-16 AWG	FLS
19	72298-95	WIRE SEAL, 14-18 AWG (green) *(4)*	FLS
20	72308-97	TERMINAL, socket, #12-14 AWG *(2)*	FLS
21	72314-01	MAIN FUSE, 40 A	FLS
22	72330-95	FUSE, 15 A (blue) *(2)*	FLS
23	72343-10	TERMINAL, pin, 16-20 AWG (gold) *(2)*	FLS
24	72356-95	TERMINAL, socket, 18-20 AWG *(2)*	FLS
25	72369-08A	BRACKET, fuse block holder, (black)	FLS
26	72484-08	TERMINAL, socket, 20 AWG *(4)*	FLS
27	72486-08	WIRE SEAL, 20 AWG (green) *(4)*	FLS
28	72582-11	FUSE BLOCK	FLS
29	72586-11	COVER, fuse block	FLS
30	72587-11	SECONDARY LOCK, fuse block	FLS
31	72595-11	SEAL, fuse block	FLS
32	72664-12A	HOUSING, 18-way, socket, key A (black)	FLS
33	72666-12	TERMINAL, socket, 18-20 AWG (silver) *(36)*	FLS
34	72720-07	HOUSING, two-way socket	FLS
35	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLS
36	73229-11	BRACKET, fuse block mounting	FLS
37	73304-04	TERMINAL, .31 socket, 10 AWG *(2)*	FLS

38	73305-04	SEAL WIRE, 10 AWG (blue) *(2)*	FLS
39	74103-98BK	HOUSING, three-way pin	FLS
40	74104-98BK	HOUSING, four-way pin (black)	FLS
41	74143-98	SECONDARY LOCK, three-way pin	FLS
42	74144-98	SECONDARY LOCK, four-way pin *(2)*	FLS
43	74190-98	TERMINAL, pin, 16-20 AWG *(11)*	FLS
44	69200010	CONNECTOR, four-way pin (gray)	FLS
45	69200012	BRACKET, pin housing	FLS
46	69200267A	HOUSING, 18-way, socket, key B (gray)	FLS
47	69200268A	HOUSING, 18-way, socket, key C (brown)	FLS
48	69201168	TERMINAL, socket, 22 AWG (silver)	FLS

WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)

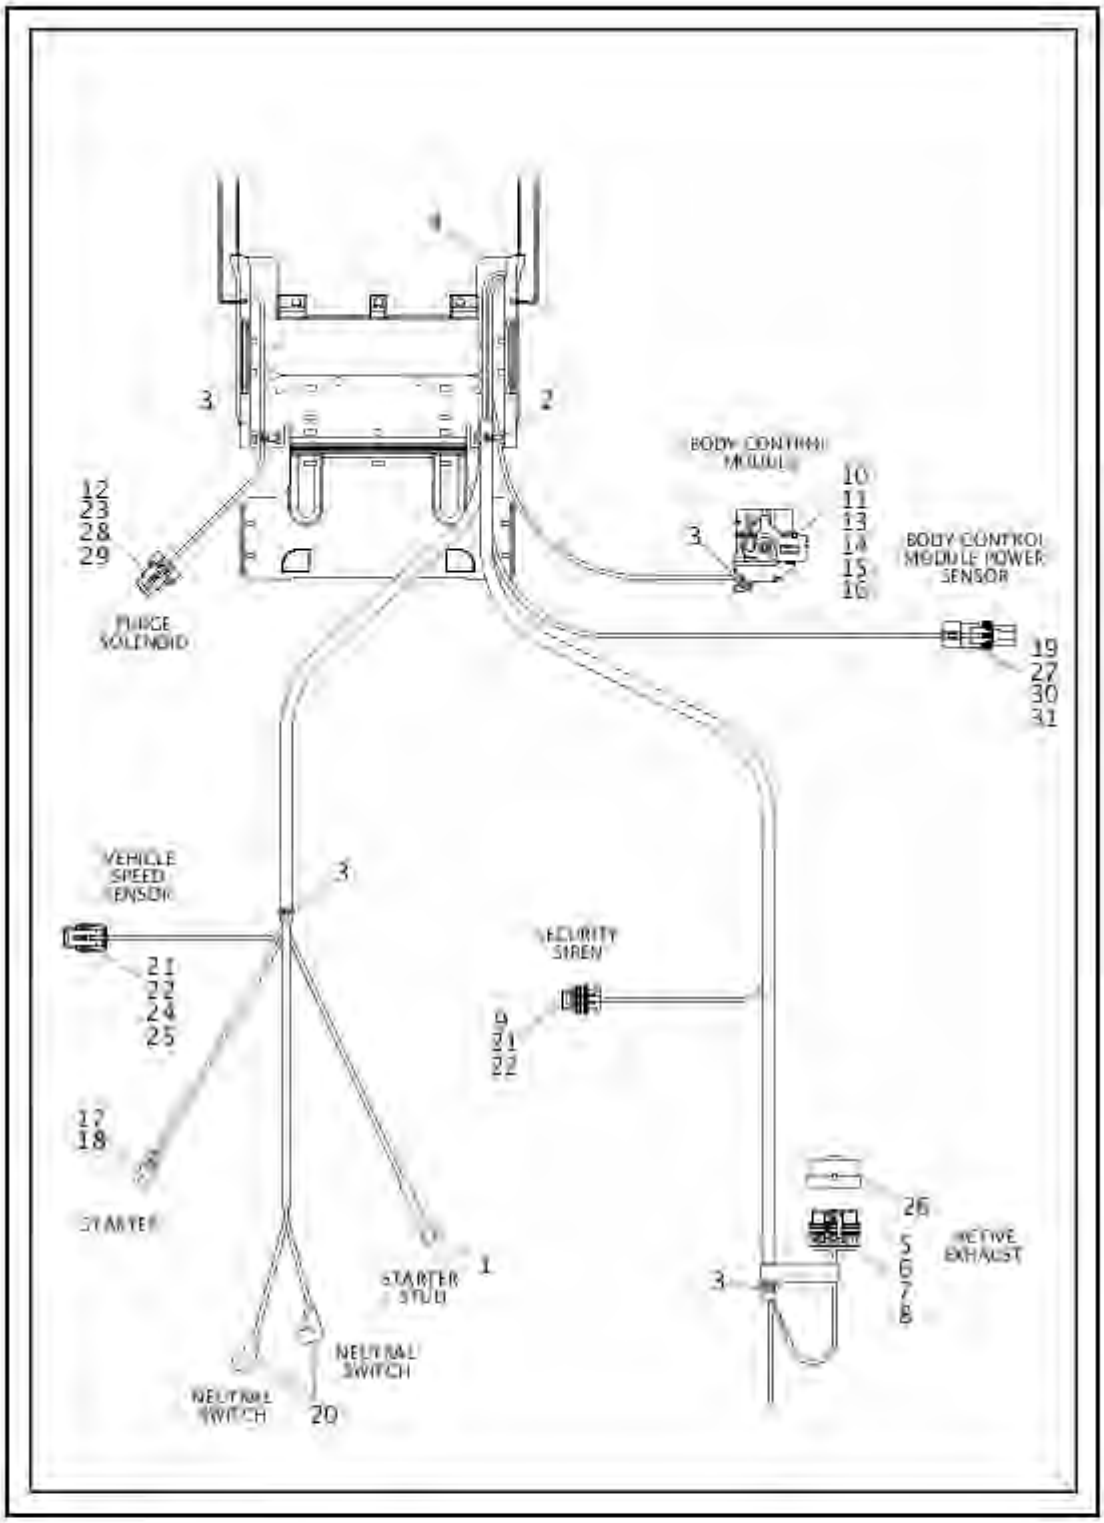

Index No.	Part No.	Description	Model(s)
	69201079	WIRING HARNESS, MAIN	FLS
NOTE: Includes the following parts.			
1	9842	TERMINAL RING, .31 10-12 AWG	FLS
2	10006	CABLE STRAP	FLS
3	10065	CABLE STRAP *(4)*	FLS
4	70982-08	WIRE SHIELD	FLS
5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLS

6	72012-07	HOUSING, five-way socket	FLS
7	72014-07	SEAL PIN	FLS
8	72024-08	TERMINAL, socket, 20-22 AWG *(4)*	FLS
9	72064-06	HOUSING, three-way socket *(2)*	FLS
10	72081-11	HOUSING, 48-way socket	FLS
11	72209-11	COVER, wire	FLS
12	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLS
13	72222-11	TERMINAL SOCKET, 18-20 AWG *(20)*	FLS
14	72226-11	TERMINAL SOCKET, 14-16 AWG	FLS
15	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FLS
16	72256-11	SEAL PIN, .6mm, plug *(10)*	FLS
17	72291-94	TERMINAL, 14-16 AWG	FLS
18	72295-94	HOUSING, starter connection	FLS
19	72350-11	HOUSING, one-way	FLS
20	72405-98BK	PUSH ON 90 DEGREE CONNECTOR *(2)*	FLS
21	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLS
22	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLS
23	72518-01	HOUSING, socket, two-way (red)	FLS
24	72543-07BK	HOUSING, three-way socket (black)	FLS
25	72544-07	SECONDARY LOCK, three-way socket	FLS
26	72553-07	DUST CAP, five-way	FLS
27	72575-11	SECONDARY LOCK	FLS
28	72609-08	SECONDARY LOCK, two-way socket (black)	FLS
29	72610-08	SEAL, cable, 18-20 AWG (white) *(2)*	FLS
30	73304-04	TERMINAL, .31 socket, 10 AWG *(2)*	FLS
31	73305-04	SEAL WIRE, 10 AWG (blue) *(2)*	FLS

WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)

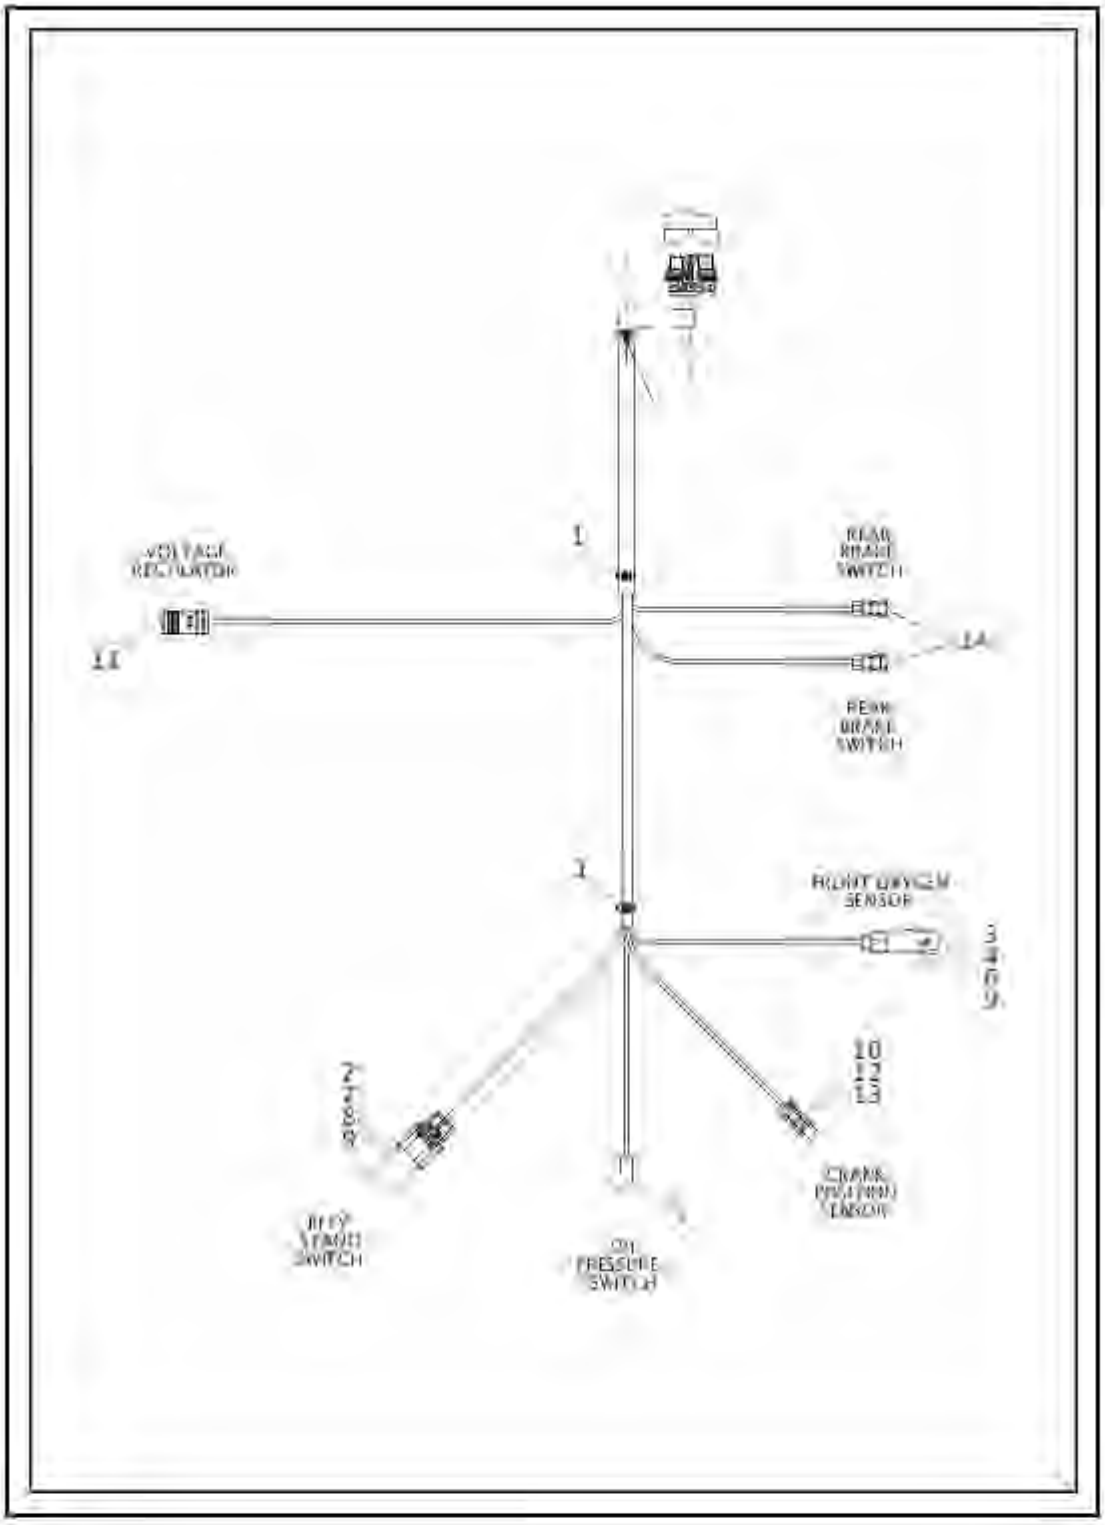

Index No.	Part No.	Description	Model(s)
	69201079	WIRING HARNESS, MAIN	FLS
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(2)*	FLS
2	72168-07	TERMINAL, socket, 18-20 AWG *(3)*	FLS
3	72169-07	TERMINAL, pin, 16-20 AWG *(2)*	FLS
4	72343-10	TERMINAL, pin, 16-20 AWG (gold) *(2)*	FLS
5	72405-98BK	PUSH ON 90 DEGREE CONNECTOR	FLS

6	72415-07GY	HOUSING, four-way pin (gray)	FLS
7	72512-07BK	HOUSING, three-way socket (black)	FLS
8	72519-09BK	DUST CAP, three-way socket	FLS
9	73213-07	RETAINER, anchored clip *(2)*	FLS
10	74112-98BK	HOUSING, two-way socket (black)	FLS
11	74120-08	DC LEAD ASSEMBLY	FLS
12	74152-98	SECONDARY LOCK, two-way socket	FLS
13	74191-98	TERMINAL, socket *(2)*	FLS
14	69200238	TERMINAL, insulated *(2)*	FLS

WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)

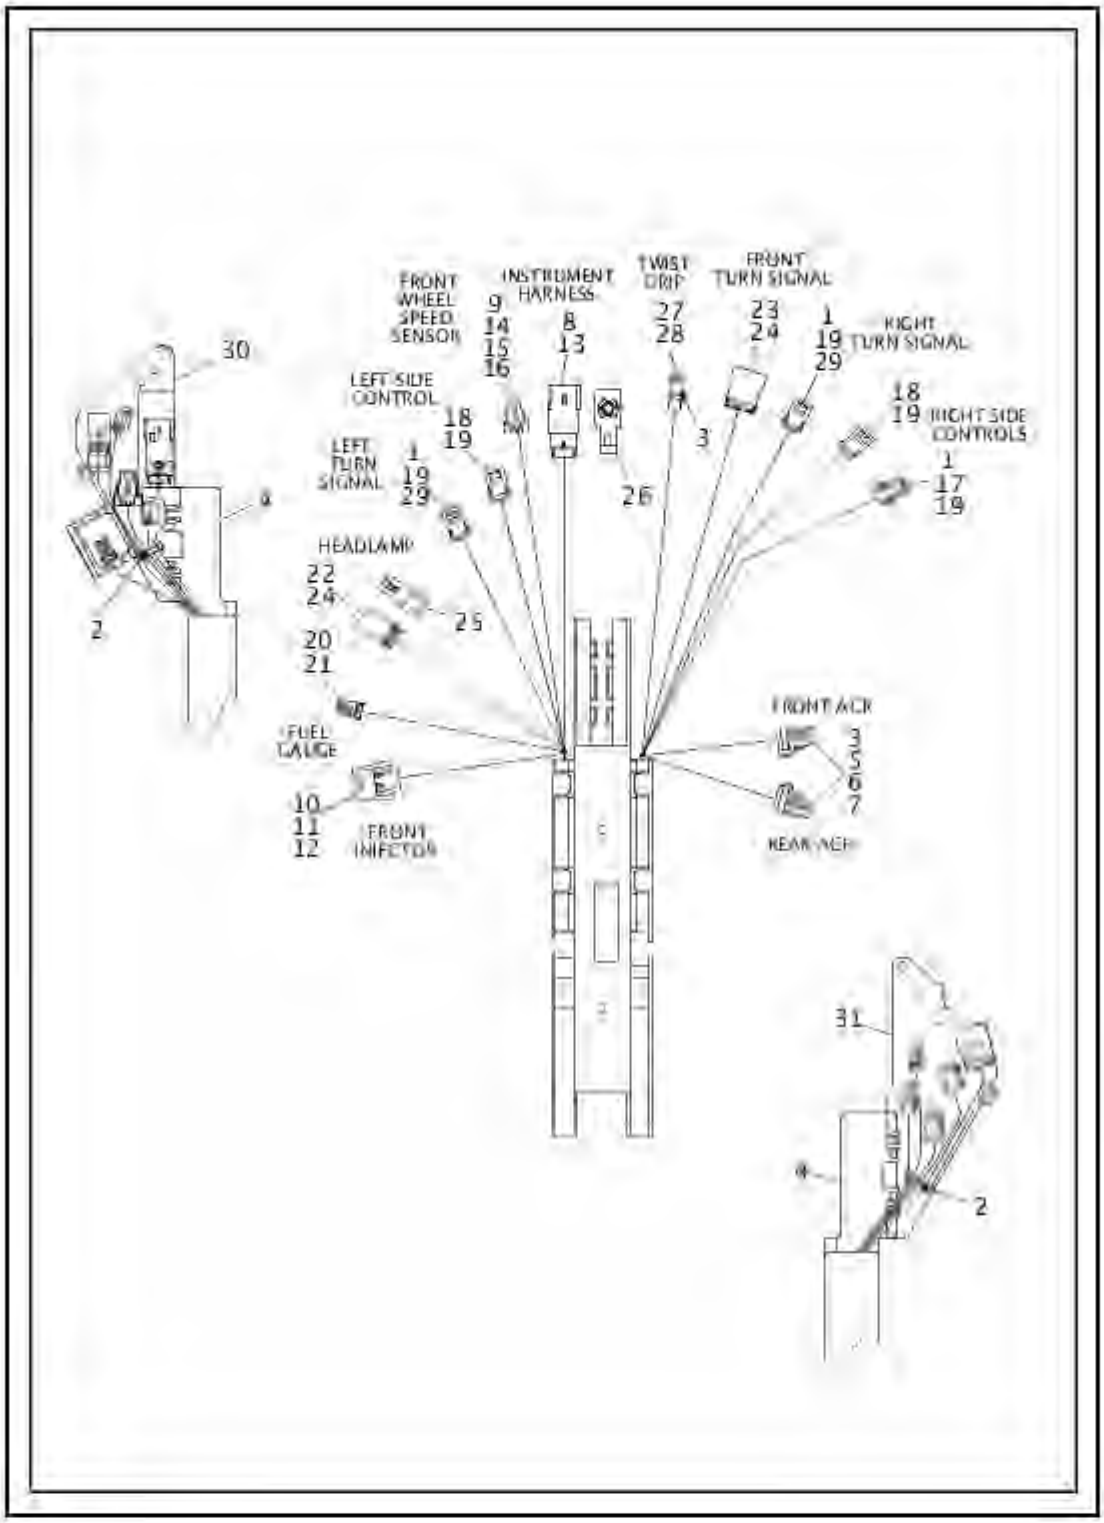

Index No.	Part No.	Description	Model(s)
	69201080	WIRING HARNESS, MAIN	FLS, FLSS
NOTE: Includes the following parts.			
1	5118	SEAL PIN *(3)*	FLS, FLSS
2	10065	CABLE STRAP *(2)*	FLS, FLSS
3	10177	CABLE STRAP *(3)*	FLS, FLSS
4	71044-11	WIRE TROUGH	FLS, FLSS
5	72007-05	HOUSING, two-way socket *(2)*	FLS, FLSS

6	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLS, FLSS
7	72024-08	TERMINAL, socket, 20-22 AWG *(4)*	FLS, FLSS
8	72169-07	TERMINAL, pin, 16-20 AWG *(8)*	FLS, FLSS
9	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLS, FLSS
10	72251-07	SECONDARY LOCK, two-way socket (yellow) *(2)*	FLS, FLSS
11	72402-07	HOUSING, two-way socket	FLS, FLSS
12	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLS, FLSS
13	72478-07BK	HOUSING, eight-way pin (black)	FLS, FLSS
14	72606-08	HOUSING, two-way socket	FLS, FLSS
15	72609-08	SECONDARY LOCK, two-way socket (black)	FLS, FLSS
16	72610-08	SEAL, cable, 18-20 AWG (white) *(2)*	FLS, FLSS
17	72905-11	HOUSING, two-way pin	FLS, FLSS
18	72907-11	HOUSING, four-way pin *(2)*	FLS, FLSS
19	72909-11	TERMINAL, pin, 20-21 AWG *(15)*	FLS, FLSS
20	72914-01BK	HOUSING, four-way socket (black)	FLS, FLSS
21	72991-01	TERMINAL, socket, 18-22 AWG *(3)*	FLS, FLSS
22	73104-96BK	HOUSING, four-way pin	FLS, FLSS
23	73106-96BK	HOUSING, six-way pin	FLS, FLSS
24	73190-96	TERMINAL, pin, 16-20 AWG *(10)*	FLS, FLSS
25	73198-96	RETAINER, anchored clip	FLS, FLSS
26	73213-07	RETAINER, anchored clip	FLS, FLSS
27	69201163	HOUSING, six-way pin	FLS, FLSS
28	69201164	TERMINAL, pin, 22 AWG *(6)*	FLS, FLSS
29	69201180	HOUSING, four-way pin (gray) *(2)*	FLS, FLSS
30	69201296	BRACKET, electrical connector, right	FLS, FLSS
31	69201297	BRACKET, electrical connector, left	FLS, FLSS

WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)

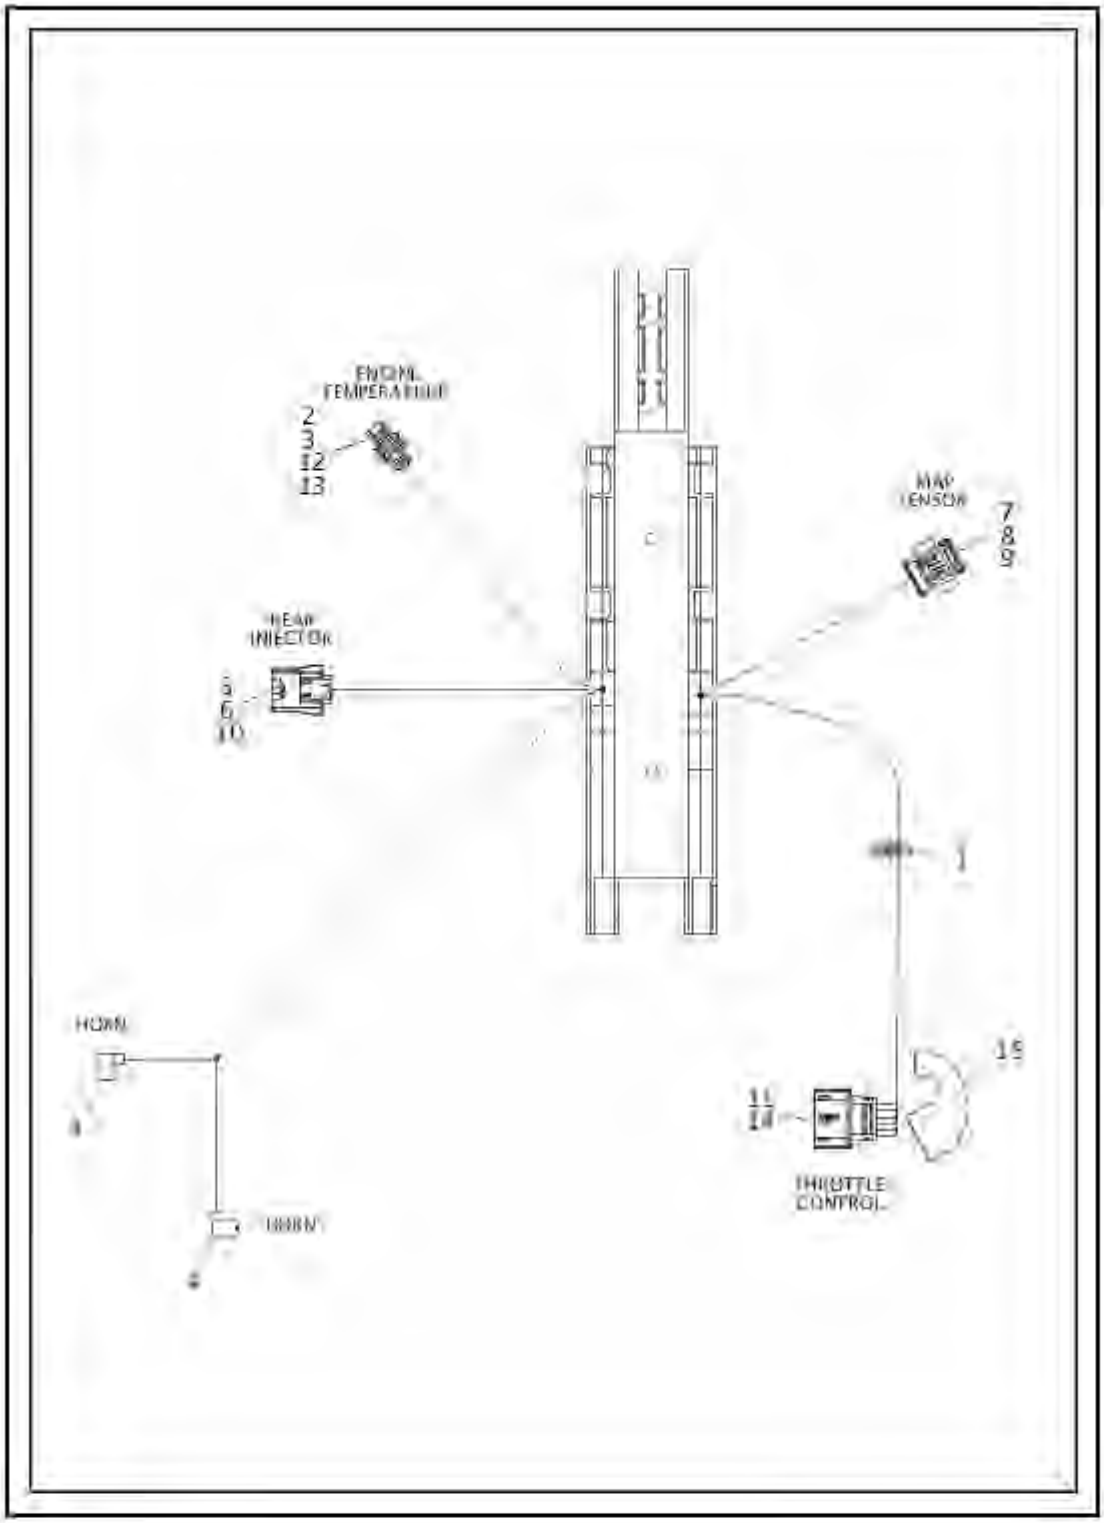

Index No.	Part No.	Description	Model(s)
	69201080	WIRING HARNESS, MAIN	FLS, FLSS
NOTE: Includes the following parts.			
1	10177	CABLE STRAP	FLS, FLSS
2	72063-06	HOUSING, two-way socket	FLS, FLSS
3	72111-06	SECONDARY LOCK, two-way socket (gray)	FLS, FLSS
4	72283-09	TERMINAL, socket, 14-16 AWG *(2)*	FLS, FLSS
5	72251-07	SECONDARY LOCK, two-way socket (yellow)	FLS, FLSS

6	72402-07	HOUSING, two-way socket (black)	FLS, FLSS
7	72406-07A	HOUSING, four-way socket	FLS, FLSS
8	72407-07	TERMINAL, socket, 16-20 AWG *(4)*	FLS, FLSS
9	72408-07	WIRE SEAL, 20 AWG (blue) *(4)*	FLS, FLSS
10	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLS, FLSS
11	72483-08BK	HOUSING, six-way socket (black)	FLS, FLSS
12	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLS, FLSS
13	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLS, FLSS
14	72663-11	TERMINAL, socket, 18-20 AWG (silver) *(6)*	FLS, FLSS
15	69200437	BOOT, rubber	FLS, FLSS

WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)

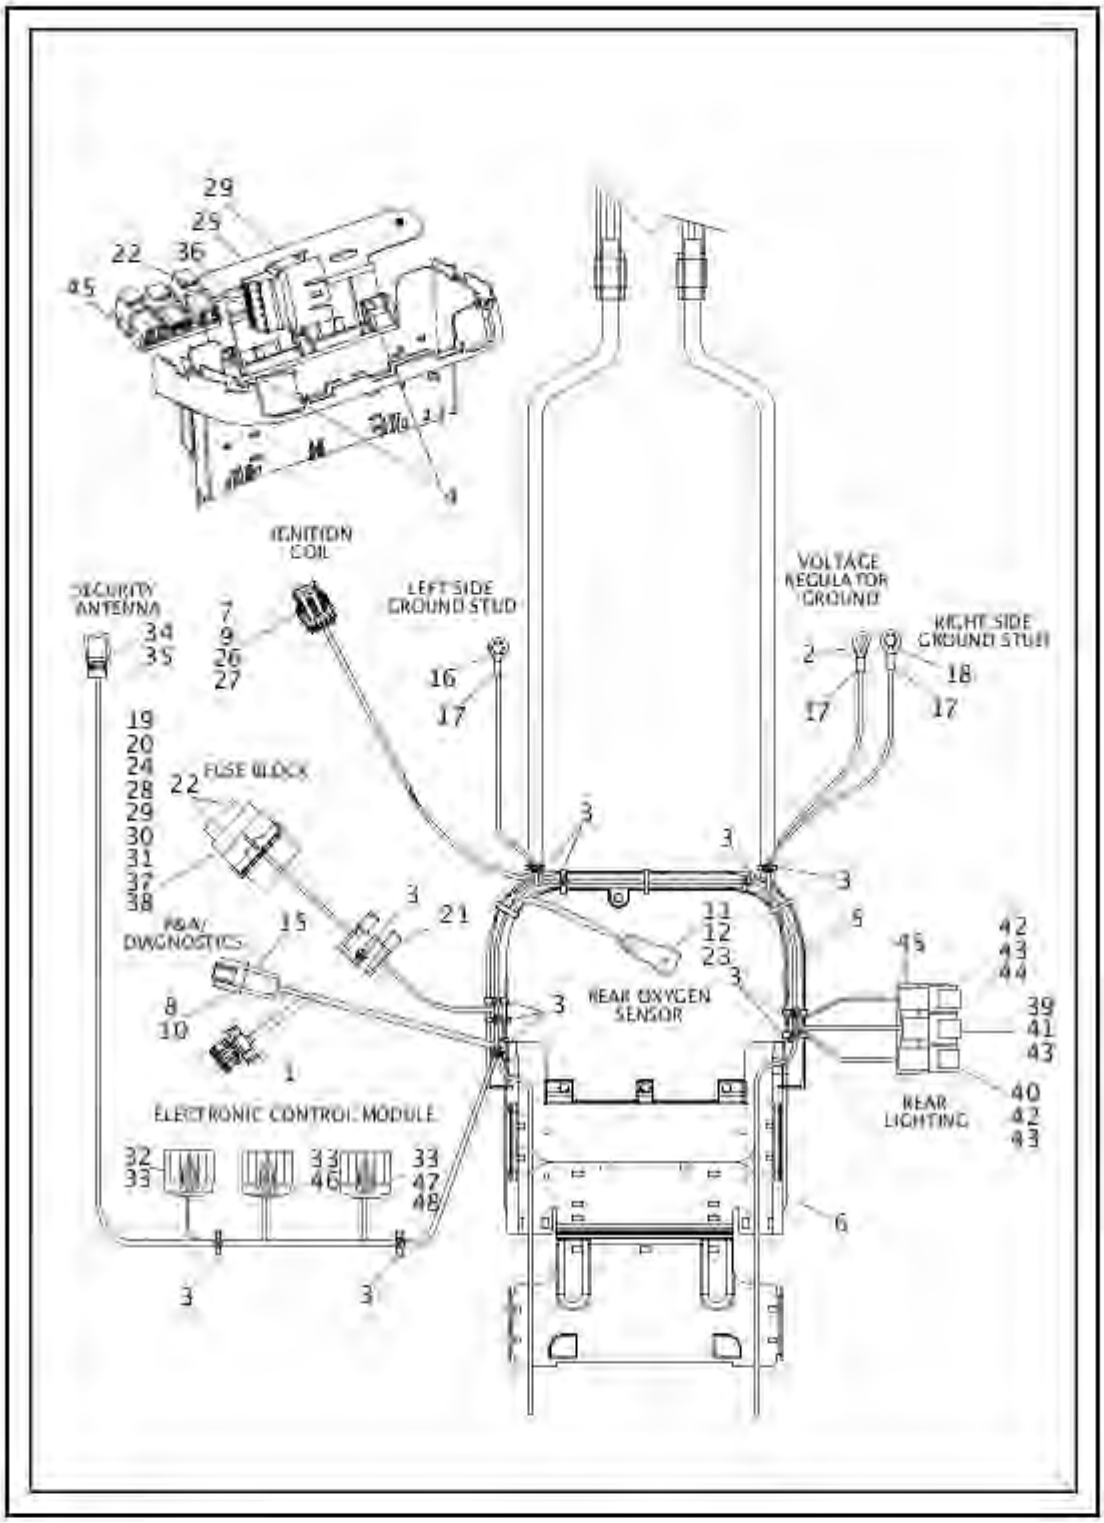

Index No.	Part No.	Description	Model(s)
	69201080	WIRING HARNESS, MAIN	FLS, FLSS
NOTE: Includes the following parts.			
1	6990	PLUG, weather, six-way pin	FLS, FLSS
2	9819	TERMINAL RING, .25 stud, 12 AWGX2	FLS, FLSS
3	10065	CABLE STRAP *(12)*	FLS, FLSS
4	11785	FASTENER, push-in *(2)*	FLS, FLSS
5	70974-08A	LOOM SHIELD, wire harness	FLS, FLSS

6	70982-08	WIRE SHIELD	FLS, FLSS
7	72066-06A	HOUSING, four-way socket (black)	FLS, FLSS
8	72106-94BK	HOUSING, six-way (black) (replaces gray connector)	FLS, FLSS
9	72135-06	SECONDARY LOCK, four-way socket (gray)	FLS, FLSS
10	72146-94	PIN LOCK, sec 6	FLS, FLSS
11	72169-07	TERMINAL, pin, 16-20 AWG *(2)*	FLS, FLSS
12	72175-07BK	HOUSING, four-way, pin (black)	FLS, FLSS
13	72190-94	TERMINAL, pin, 16-18 AWG *(3)*	FLS, FLSS
14	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLS, FLSS
15	72199-94	CONNECTOR ANCHOR	FLS, FLSS
16	72242-94	TERMINAL, 1/4 ring	FLS, FLSS
17	72249-94	HEAT SHRINK TUBE, .415 x 1 (black)	FLS, FLSS
18	72254-94	TERMINAL RING, .25 stud, 14-16 AWG	FLS, FLSS
19	72298-95	WIRE SEAL, 14-18 AWG (green) *(4)*	FLS, FLSS
20	72308-97	TERMINAL, socket, 12-14 AWG *(2)*	FLS, FLSS
21	72314-01	MAIN FUSE, 40 A	FLS, FLSS
22	72330-95	FUSE, 15 A (blue) *(2)*	FLS, FLSS
23	72343-10	TERMINAL, pin, 16-20 AWG (gold) *(2)*	FLS, FLSS
24	72356-95	TERMINAL, socket, 18-20 AWG *(2)*	FLS, FLSS
25	72369-08A	BRACKET, fuse block holder, (black)	FLS, FLSS
26	72484-08	TERMINAL, socket, 20 AWG *(4)*	FLS, FLSS
27	72486-08	WIRE SEAL, 20 AWG (green) *(4)*	FLS, FLSS
28	72582-11	FUSE BLOCK	FLS, FLSS
29	72586-11	COVER, fuse block	FLS, FLSS
30	72587-11	SECONDARY LOCK, fuse block	FLS, FLSS
31	72595-11	SEAL, fuse block	FLS, FLSS
32	72664-12A	HOUSING, 18-way, socket, key A (black)	FLS, FLSS
33	72666-12	TERMINAL, socket, 18-20 AWG (silver) *(36)*	FLS, FLSS
34	72720-07	HOUSING, two-way socket	FLS, FLSS
35	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLS, FLSS
36	73229-11	BRACKET, fuse block mounting	FLS, FLSS
37	73304-04	TERMINAL, .31 socket, 10 AWG *(2)*	FLS, FLSS

38	73305-04	SEAL WIRE, 10 AWG (blue) *(2)*	FLS, FLSS
39	74103-98BK	HOUSING, three-way pin	FLS, FLSS
40	74104-98BK	HOUSING, four-way pin (black)	FLS, FLSS
41	74143-98	SECONDARY LOCK, three-way pin	FLS, FLSS
42	74144-98	SECONDARY LOCK, four-way pin *(2)*	FLS, FLSS
43	74190-98	TERMINAL, pin, 16-20 AWG *(11)*	FLS, FLSS
44	69200010	CONNECTOR, four-way pin (gray)	FLS, FLSS
45	69200012	BRACKET, pin housing	FLS, FLSS
46	69200267A	HOUSING, 18-way, socket, key B (gray)	FLS, FLSS
47	69200268A	HOUSING, 18-way, socket, key C (brown)	FLS, FLSS
48	69201168	TERMINAL, socket, 22 AWG (silver)	FLS, FLSS

WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)

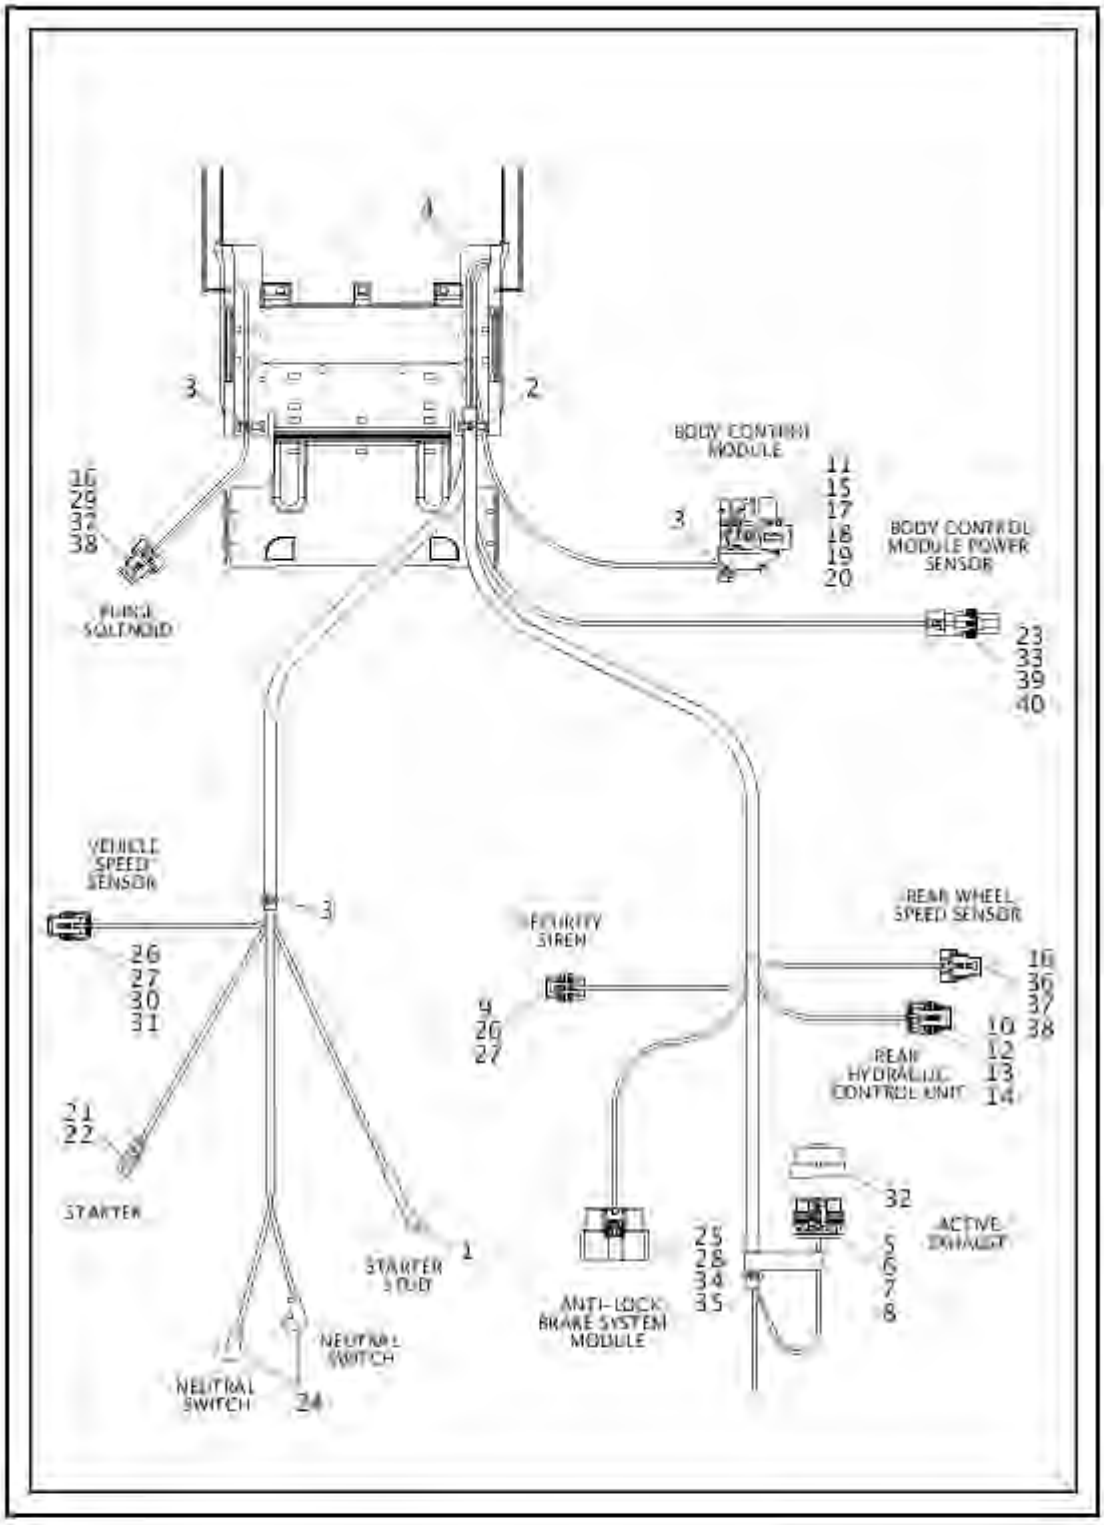

Index No.	Part No.	Description	Model(s)
	69201080	WIRING HARNESS, MAIN	FLS, FLSS
NOTE: Includes the following parts.			
1	9842	TERMINAL RING, .31 10-12 AWG	FLS, FLSS
2	10006	CABLE STRAP	FLS, FLSS
3	10065	CABLE STRAP *(3)*	FLS, FLSS
4	70982-08	WIRE SHIELD	FLS, FLSS
5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLS, FLSS

6	72012-07	HOUSING, five-way socket	FLS, FLSS
7	72014-07	SEAL PIN	FLS, FLSS
8	72024-08	TERMINAL, socket, 20-22 AWG *(4)*	FLS, FLSS
9	72064-06	HOUSING, three-way socket	FLS, FLSS
10	72066-06A	HOUSING, four-way socket (black)	FLS, FLSS
11	72081-11	HOUSING, 48-way socket	FLS, FLSS
12	72094-06	TERMINAL, socket 18 AWG *(4)*	FLS, FLSS
13	72096-06	WIRE SEAL, 18 AWG (yellow) *(4)*	FLS, FLSS
14	72135-06	SECONDARY LOCK, four-way socket (gray)	FLS, FLSS
15	72209-11	COVER, wire	FLS, FLSS
16	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLS, FLSS
17	72222-11	TERMINAL SOCKET, 18-20 AWG *(20)*	FLS, FLSS
18	72226-11	TERMINAL SOCKET, 14-16 AWG	FLS, FLSS
19	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FLS, FLSS
20	72256-11	SEAL PIN, .6mm, plug *(10)*	FLS, FLSS
21	72291-94	TERMINAL, 14-16 AWG	FLS, FLSS
22	72295-94	HOUSING, starter connection	FLS, FLSS
23	72350-11	HOUSING, one-way	FLS, FLSS
24	72405-98BK	PUSH ON 90 DEGREE CONNECTOR *(2)*	FLS, FLSS
25	72473-07	SEAL PIN *(5)*	FLS, FLSS
26	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLS, FLSS
27	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLS, FLSS
28	72500-07ABK	HOUSING, 20-way socket (black)	FLS, FLSS
29	72518-01	HOUSING, socket, two-way (red)	FLS, FLSS
30	72543-07BK	HOUSING, three-way socket (black)	FLS, FLSS
31	72544-07	SECONDARY LOCK, three-way socket	FLS, FLSS
32	72553-07	DUST CAP, five-way	FLS, FLSS
33	72575-11	SECONDARY LOCK	FLS, FLSS
34	72581-11	TERMINAL, socket, 18-20 AWG (gold) *(12)*	FLS, FLSS
35	72593-11	TERMINAL, socket, 14-16 AWG (gold) *(3)*	FLS, FLSS
36	72606-08	HOUSING, two-way socket	FLS, FLSS
37	72609-08	SECONDARY LOCK, two-way socket (black) *(2)*	FLS, FLSS

38	72610-08	SEAL, cable, 18-20 AWG (white) *(4)*	FLS, FLSS
39	73304-04	TERMINAL, .31 socket, 10 AWG	FLS, FLSS
40	73305-04	SEAL WIRE, 10 AWG (blue)	FLS, FLSS

WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)

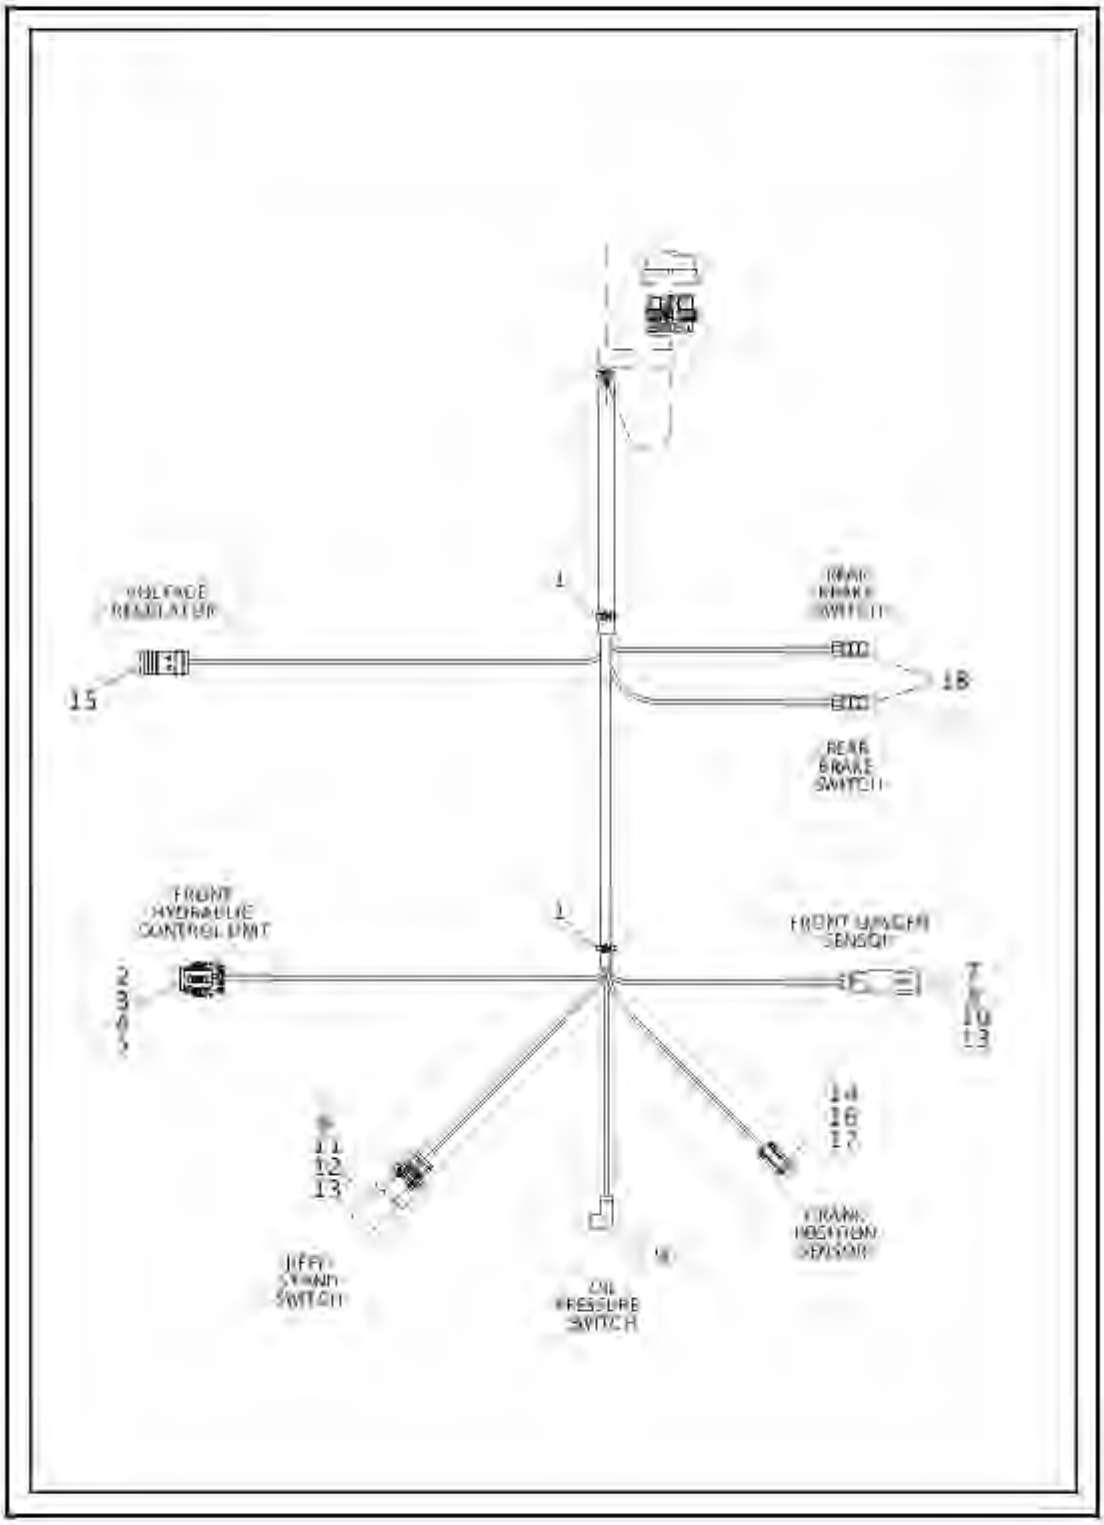

Index No.	Part No.	Description	Model(s)
	69201080	WIRING HARNESS, MAIN	FLS, FLSS

NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(2)*	FLS, FLSS
2	72066-06A	HOUSING, four-way socket (black)	FLS, FLSS
3	72094-06	TERMINAL, socket, socket 18 AWG *(4)*	FLS, FLSS
4	72096-06	WIRE SEAL, 18 AWG (yellow) *(4)*	FLS, FLSS
5	72135-06	SECONDARY LOCK, four-way socket (gray)	FLS, FLSS
6	72168-07	TERMINAL, socket, 18-20 AWG *(3)*	FLS, FLSS
7	72169-07	TERMINAL, pin, 16-20 AWG *(2)*	FLS, FLSS
8	72343-10	TERMINAL, pin, 16-20 AWG (gold) *(2)*	FLS, FLSS
9	72405-98BK	PUSH ON 90 DEGREE CONNECTOR	FLS, FLSS
10	72415-07GY	HOUSING, four-way pin (gray)	FLS, FLSS
11	72512-07BK	HOUSING, three-way socket (black)	FLS, FLSS
12	72519-09BK	DUST CAP, three-way socket	FLS, FLSS
13	73213-07	RETAINER, anchored clip *(2)*	FLS, FLSS
14	74112-98BK	HOUSING, two-way socket (black)	FLS, FLSS
15	74120-08	DC LEAD ASSEMBLY	FLS, FLSS
16	74152-98	SECONDARY LOCK, two-way socket	FLS, FLSS
17	74191-98	TERMINAL, socket *(2)*	FLS, FLSS
18	69200238	TERMINAL, insulated *(2)*	FLS, FLSS

WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)

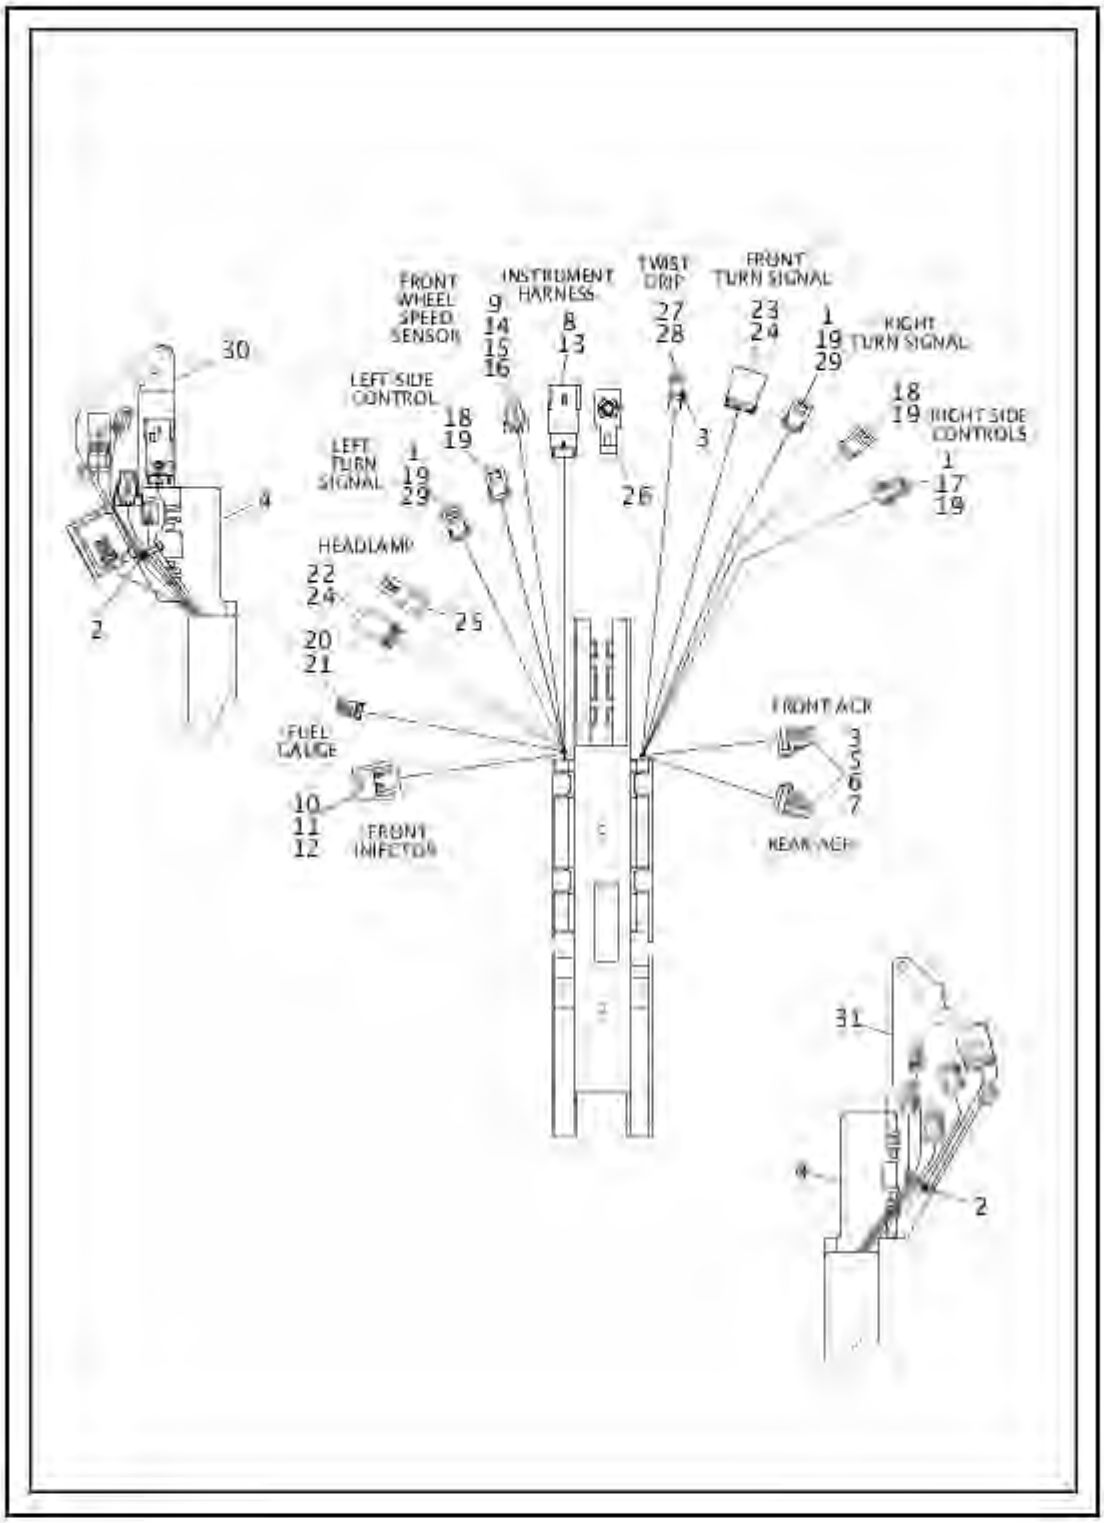

Index No.	Part No.	Description	Model(s)
	69201184	WIRING HARNESS, MAIN	FLSTF, FLSTFB, FLSTFBS
	69201185	WIRING HARNESS, MAIN (Brazil)	FLSTF, FLSTFB
NOTE: Includes the following parts.			
1	5118	SEAL PIN *(3)*	FLSTF, FLSTFB, FLSTFBS
2	10065	CABLE STRAP *(2)*	FLSTF, FLSTFB, FLSTFBS
3	10177	CABLE STRAP *(3)*	FLSTF, FLSTFB, FLSTFBS
4	71044-11	WIRE TROUGH	FLSTF, FLSTFB, FLSTFBS

5	72007-05	HOUSING, two-way socket *(2)*	FLSTF, FLSTFB, FLSTFBS
6	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLSTF, FLSTFB, FLSTFBS
7	72024-08	TERMINAL, socket, 20-22 AWG *(4)*	FLSTF, FLSTFB, FLSTFBS
8	72169-07	TERMINAL, pin, 16-20 AWG *(8)*	FLSTF, FLSTFB, FLSTFBS
9	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS
10	72251-07	SECONDARY LOCK, two-way socket (yellow)	FLSTF, FLSTFB, FLSTFBS
11	72402-07	HOUSING, two-way socket	FLSTF, FLSTFB, FLSTFBS
12	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS
13	72478-07BK	HOUSING, eight-way pin (black)	FLSTF, FLSTFB, FLSTFBS
14	72606-08	HOUSING, two-way socket	FLSTF, FLSTFB, FLSTFBS
15	72609-08	SECONDARY LOCK, two-way socket (black)	FLSTF, FLSTFB, FLSTFBS
16	72610-08	SEAL, cable, 18-20 AWG (white) *(2)*	FLSTF, FLSTFB, FLSTFBS
17	72905-11	HOUSING, two-way pin	FLSTF, FLSTFB, FLSTFBS
18	72907-11	HOUSING, four-way pin *(2)*	FLSTF, FLSTFB, FLSTFBS
19	72909-11	TERMINAL, pin, 20-21 AWG *(15)*	FLSTF, FLSTFB, FLSTFBS
20	72914-01BK	HOUSING, four-way socket (black)	FLSTF, FLSTFB, FLSTFBS
21	72991-01	TERMINAL, socket, 18-22 AWG *(3)*	FLSTF, FLSTFB, FLSTFBS
22	73104-96BK	HOUSING, four-way pin	FLSTF, FLSTFB, FLSTFBS
23	73106-96BK	HOUSING, six-way pin	FLSTF, FLSTFB, FLSTFBS
24	73190-96	TERMINAL, pin, 16-20 AWG *(10)*	FLSTF, FLSTFB, FLSTFBS
25	73198-96	RETAINER, anchored clip	FLSTF, FLSTFB, FLSTFBS
26	73213-07	RETAINER, anchored clip	FLSTF, FLSTFB, FLSTFBS
27	69201163	HOUSING, six-way pin	FLSTF, FLSTFB, FLSTFBS
28	69201164	TERMINAL, pin, 22 AWG *(6)*	FLSTF, FLSTFB, FLSTFBS
29	69201180	HOUSING, four-way pin (gray) *(2)*	FLSTF, FLSTFB, FLSTFBS
30	69201296	BRACKET, electrical connector, right	FLSTF, FLSTFB, FLSTFBS
31	69201297	BRACKET, electrical connector, left	FLSTF, FLSTFB, FLSTFBS

WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)

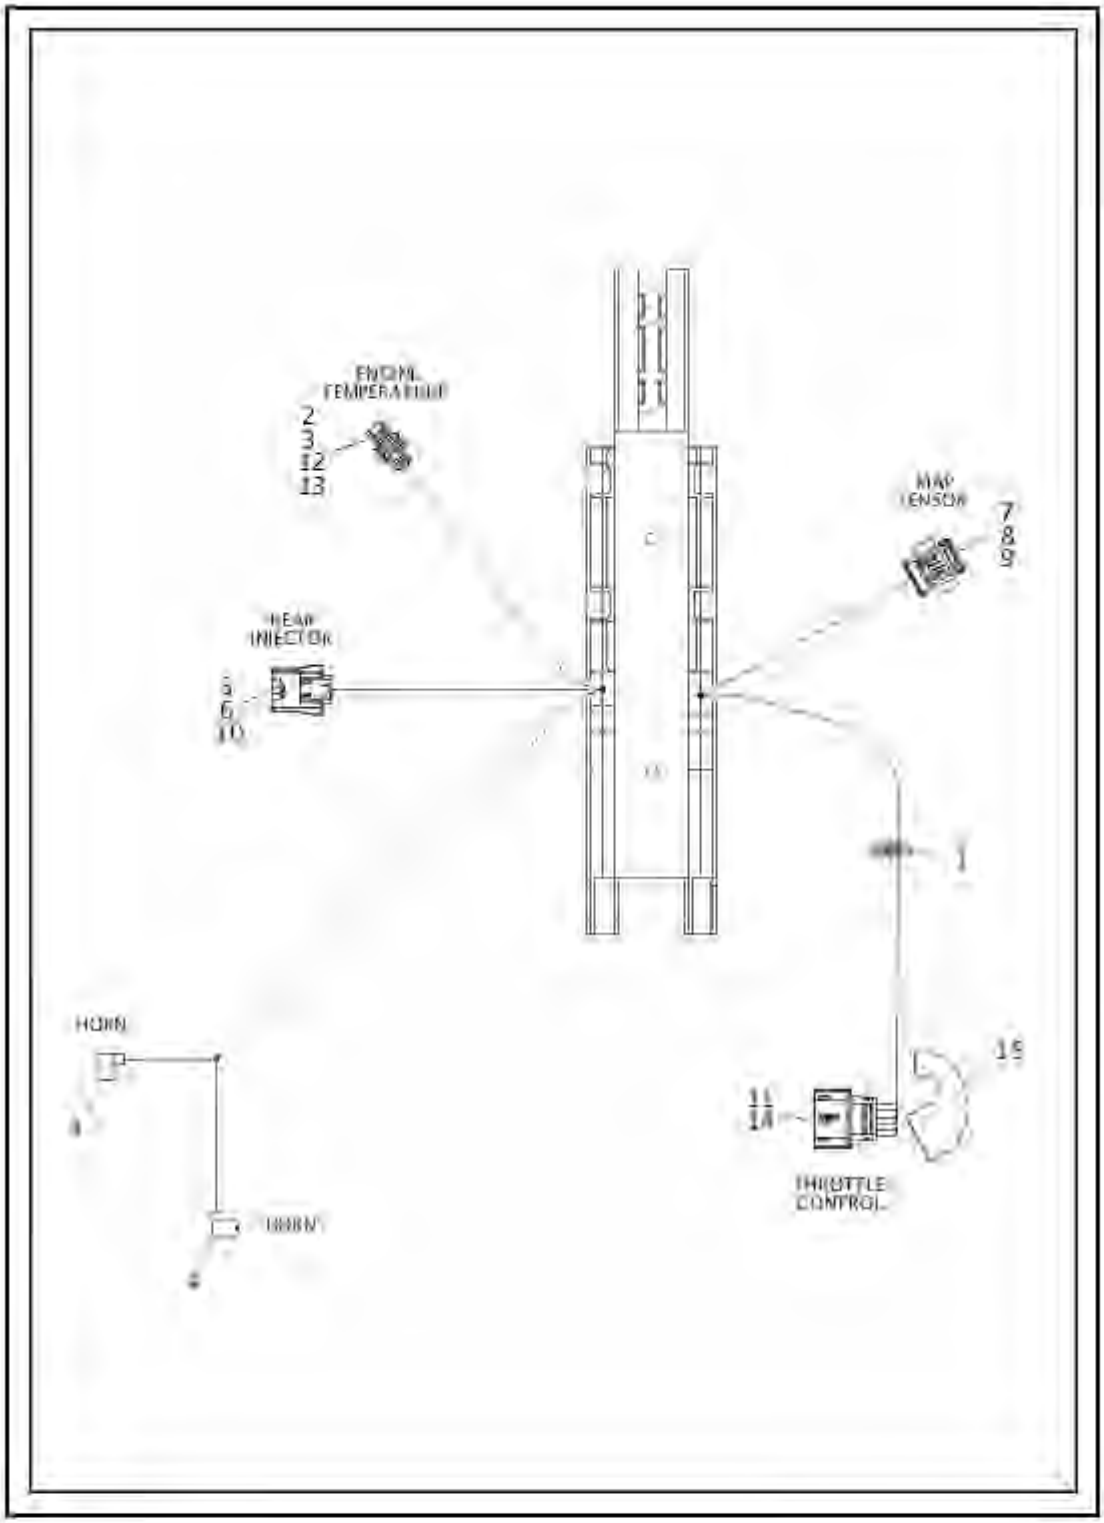

Index No.	Part No.	Description	Model(s)
	69201184	WIRING HARNESS, MAIN	FLSTF, FLSTFB, FLSTFBS
	69201185	WIRING HARNESS, MAIN (Brazil)	FLSTF, FLSTFB
NOTE: Includes the following parts.			
1	10177	CABLE STRAP	FLSTF, FLSTFB, FLSTFBS
2	72063-06	HOUSING, two-way socket	FLSTF, FLSTFB, FLSTFBS
3	72111-06	SECONDARY LOCK, two-way socket (gray)	FLSTF, FLSTFB, FLSTFBS
4	72283-09	TERMINAL, socket, 14-16 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS

5	72251-07	SECONDARY LOCK, two-way socket (yellow)	FLSTF, FLSTFB, FLSTFBS
6	72402-07	HOUSING, two-way socket (black)	FLSTF, FLSTFB, FLSTFBS
7	72406-07A	HOUSING, four-way socket	FLSTF, FLSTFB, FLSTFBS
8	72407-07	TERMINAL, socket, 16-20 AWG *(4)*	FLSTF, FLSTFB, FLSTFBS
9	72408-07	WIRE SEAL, 20 AWG (blue) *(4)*	FLSTF, FLSTFB, FLSTFBS
10	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS
11	72483-08BK	HOUSING, six-way socket (black)	FLSTF, FLSTFB, FLSTFBS
12	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS
13	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLSTF, FLSTFB, FLSTFBS
14	72663-11	TERMINAL, socket, 18-20 AWG (silver) *(6)*	FLSTF, FLSTFB, FLSTFBS
15	69200437	BOOT, rubber	FLSTF, FLSTFB, FLSTFBS

WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)

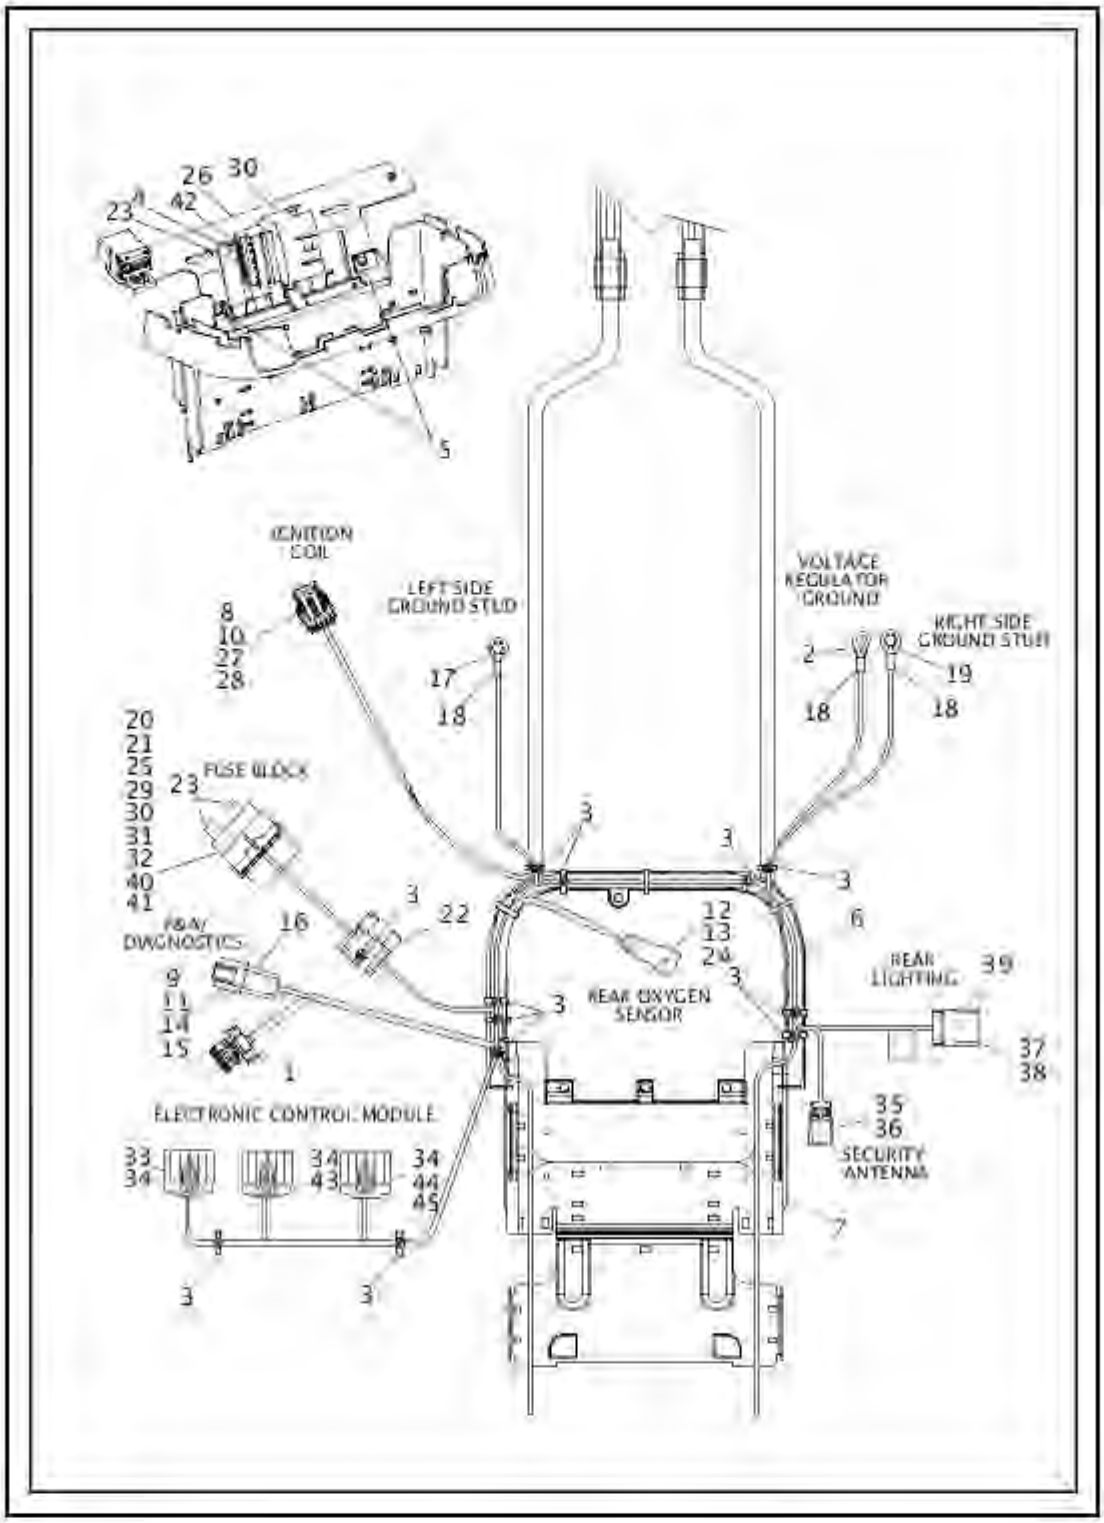

Index No.	Part No.	Description	Model(s)
	69201184	WIRING HARNESS, MAIN	FLSTF, FLSTFB, FLSTFBS
	69201185	WIRING HARNESS, MAIN (Brazil)	FLSTF, FLSTFB
NOTE: Includes the following parts.			
1	6990	PLUG, weather, six-way pin	FLSTF, FLSTFB, FLSTFBS
2	9819	TERMINAL RING, .25 stud, 12 AWGX2	FLSTF, FLSTFB, FLSTFBS
3	10065	CABLE STRAP *(12)*	FLSTF, FLSTFB, FLSTFBS
4	10147	CLIP, connector *(2)*	FLSTF, FLSTFB, FLSTFBS

5	11785	FASTENER, push-in *(2)*	FLSTF, FLSTFB, FLSTFBS
6	70974-08A	LOOM SHIELD, wire harness	FLSTF, FLSTFB, FLSTFBS
7	70982-08	WIRE SHIELD	FLSTF, FLSTFB, FLSTFBS
8	72066-06A	HOUSING, four-way socket (black)	FLSTF, FLSTFB, FLSTFBS
9	72106-94BK	HOUSING, six-way (black) (replaces gray connector)	FLSTF, FLSTFB, FLSTFBS
10	72135-06	SECONDARY LOCK, four-way socket (gray)	FLSTF, FLSTFB, FLSTFBS
11	72146-94	PIN LOCK, sec 6	FLSTF, FLSTFB, FLSTFBS
12	72169-07	TERMINAL, pin, 16-20 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS
13	72175-07BK	HOUSING, four-way, pin (black)	FLSTF, FLSTFB, FLSTFBS
14	72190-94	TERMINAL, pin, 16-18 AWG *(3)*	FLSTF, FLSTFB, FLSTFBS
15	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLSTF, FLSTFB, FLSTFBS
16	72199-94	CONNECTOR ANCHOR	FLSTF, FLSTFB, FLSTFBS
17	72242-94	TERMINAL, 1/4 ring	FLSTF, FLSTFB, FLSTFBS
18	72249-94	HEAT SHRINK TUBE, .415 x 1 (black)	FLSTF, FLSTFB, FLSTFBS
19	72254-94	TERMINAL RING, .25 stud, 14-16 AWG	FLSTF, FLSTFB, FLSTFBS
20	72298-95	WIRE SEAL, 14-18 AWG (green) *(4)*	FLSTF, FLSTFB, FLSTFBS
21	72308-97	TERMINAL, socket, 12-14 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS
22	72314-01	MAIN FUSE, 40 A	FLSTF, FLSTFB, FLSTFBS
23	72330-95	FUSE, 15 A (blue) *(2)*	FLSTF, FLSTFB, FLSTFBS
24	72343-10	TERMINAL, pin, 16-20 AWG (gold) *(2)*	FLSTF, FLSTFB, FLSTFBS
25	72356-95	TERMINAL, socket, 18-20 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS
26	72369-08A	BRACKET, fuse block holder, (black)	FLSTF, FLSTFB, FLSTFBS
27	72484-08	TERMINAL, socket, 20 AWG *(4)*	FLSTF, FLSTFB, FLSTFBS
28	72486-08	WIRE SEAL, 20 AWG (green) *(4)*	FLSTF, FLSTFB, FLSTFBS
29	72582-11	FUSE BLOCK	FLSTF, FLSTFB, FLSTFBS
30	72586-11	COVER, fuse block	FLSTF, FLSTFB, FLSTFBS
31	72587-11	SECONDARY LOCK, fuse block	FLSTF, FLSTFB, FLSTFBS
32	72595-11	SEAL, fuse block	FLSTF, FLSTFB, FLSTFBS
33	72664-12A	HOUSING, 18-way, socket, key A (black)	FLSTF, FLSTFB, FLSTFBS
34	72666-12	TERMINAL, socket, 18-20 AWG (silver) *(36)*	FLSTF, FLSTFB, FLSTFBS
35	72720-07	HOUSING, two-way socket	FLSTF, FLSTFB, FLSTFBS
36	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS

37	73108-96BK	HOUSING, eight-way pin	FLSTF, FLSTFB, FLSTFBS
38	73190-96	TERMINAL, pin, 16-20 AWG *(8)*	FLSTF, FLSTFB, FLSTFBS
39	73196-96	ANCHOR, T-stud	FLSTF, FLSTFB, FLSTFBS
40	73304-04	TERMINAL, .31 socket, 10 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS
41	73305-04	SEAL WIRE, 10 AWG (blue) *(2)*	FLSTF, FLSTFB, FLSTFBS
42	12200044	BRACKET, fuse block mounting	FLSTF, FLSTFB, FLSTFBS
43	69200267A	HOUSING, 18-way, socket, key B (gray)	FLSTF, FLSTFB, FLSTFBS
44	69200268A	HOUSING, 18-way, socket, key C (brown)	FLSTF, FLSTFB, FLSTFBS
45	69201168	TERMINAL, socket, 22 AWG (silver) *(2)*	FLSTF, FLSTFB, FLSTFBS

WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)

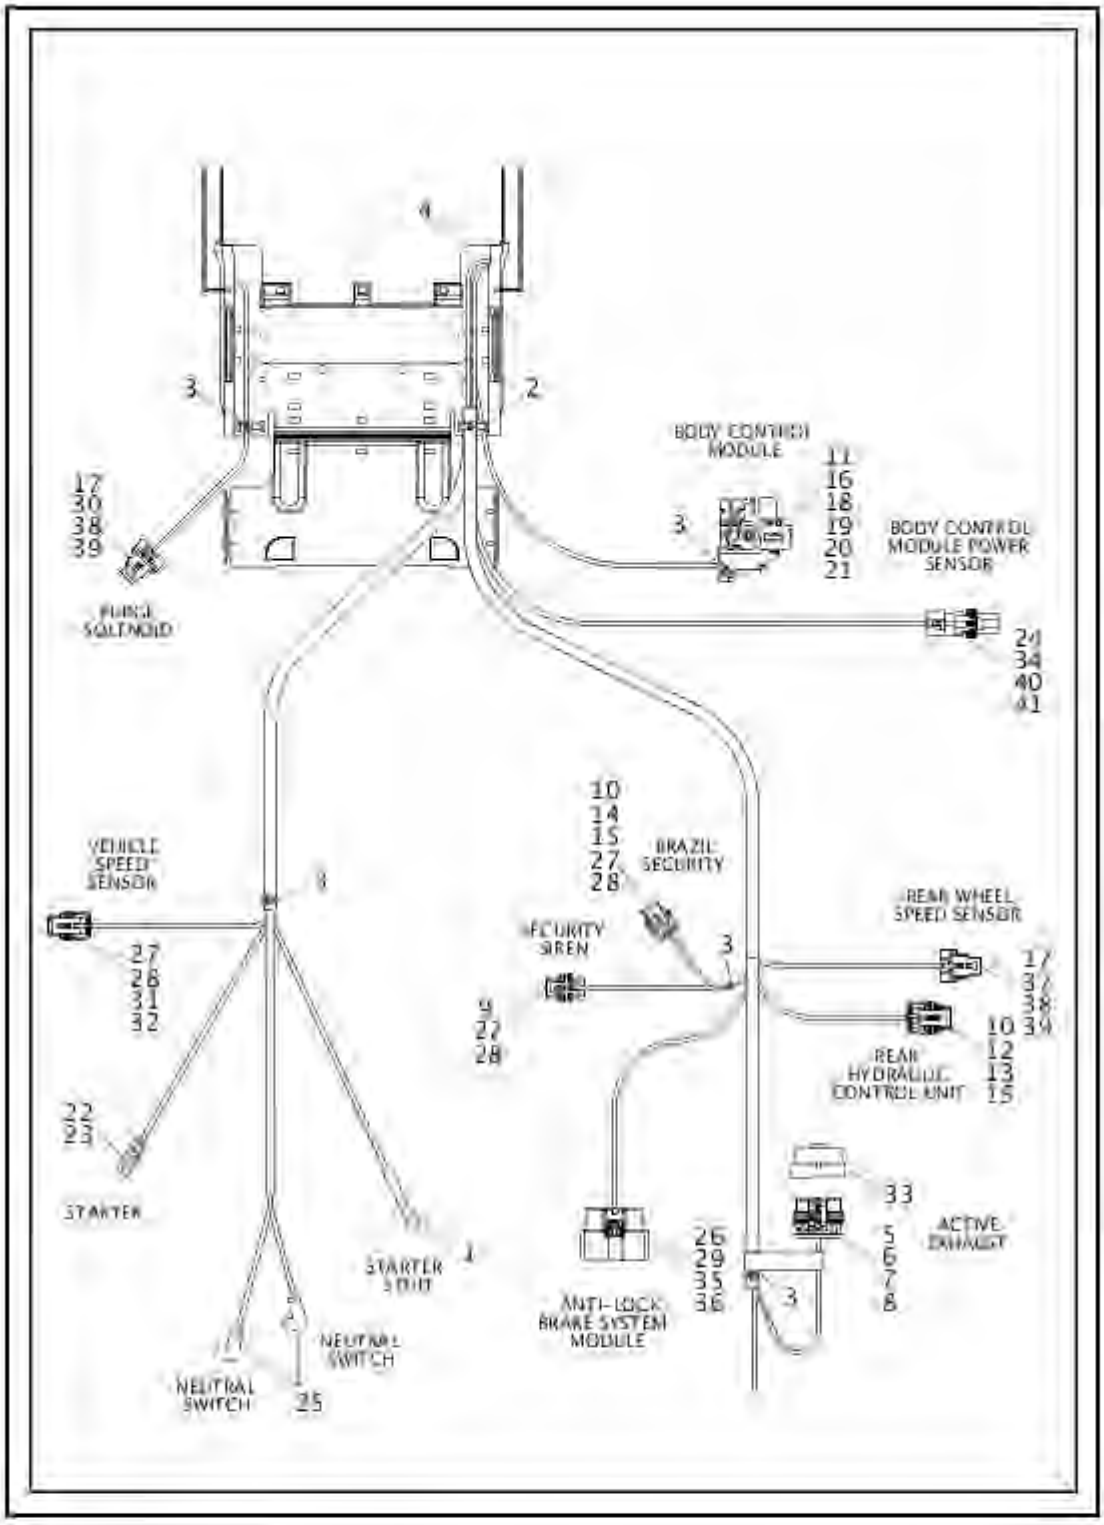

Index No.	Part No.	Description	Model(s)
	69201184	WIRING HARNESS, MAIN	FLSTF, FLSTFB, FLSTFBS
	69201185	WIRING HARNESS, MAIN (Brazil)	FLSTF, FLSTFB
NOTE: Includes the following parts.			
1	9842	TERMINAL RING, .31 10-12 GA	FLSTF, FLSTFB, FLSTFBS
2	10006	CABLE STRAP	FLSTF, FLSTFB, FLSTFBS
3	10065	CABLE STRAP *(5)*	FLSTF, FLSTFB, FLSTFBS
4	70982-08	WIRE SHIELD	FLSTF, FLSTFB, FLSTFBS

5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLSTF, FLSTFB, FLSTFBS
6	72012-07	HOUSING, five-way socket	FLSTF, FLSTFB, FLSTFBS
7	72014-07	SEAL PIN	FLSTF, FLSTFB, FLSTFBS
8	72024-08	TERMINAL, socket, 20-22 AWG *(4)*	FLSTF, FLSTFB, FLSTFBS
9	72064-06	HOUSING, three-way socket	FLSTF, FLSTFB, FLSTFBS
10	72066-06A	HOUSING, four-way socket (black) *(2)*	FLSTF, FLSTFB, FLSTFBS
11	72081-11	HOUSING, 48-way socket	FLSTF, FLSTFB, FLSTFBS
12	72094-06	TERMINAL, socket, socket 18 AWG *(4)*	FLSTF, FLSTFB, FLSTFBS
13	72096-06	WIRE SEAL, 18 AWG (yellow) *(4)*	FLSTF, FLSTFB, FLSTFBS
14	72097-06	PLUG, oval (orange) (Brazil) *(2)*	FLSTF, FLSTFB
15	72135-06	SECONDARY LOCK, four-way socket (gray) *(2)*	FLSTF, FLSTFB, FLSTFBS
16	72209-11	COVER, wire	FLSTF, FLSTFB, FLSTFBS
17	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLSTF, FLSTFB, FLSTFBS
18	72222-11	TERMINAL SOCKET, 18-20 AWG *(20)*	FLSTF, FLSTFB, FLSTFBS
19	72226-11	TERMINAL SOCKET, 14-16 AWG	FLSTF, FLSTFB, FLSTFBS
20	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FLSTF, FLSTFB, FLSTFBS
21	72256-11	SEAL PIN, .6mm, plug *(10)*	FLSTF, FLSTFB, FLSTFBS
22	72291-94	TERMINAL, 14-16 AWG	FLSTF, FLSTFB, FLSTFBS
23	72295-94	HOUSING, starter connection	FLSTF, FLSTFB, FLSTFBS
24	72350-11	HOUSING, one-way	FLSTF, FLSTFB, FLSTFBS
25	72405-98BK	PUSH ON 90 DEGREE CONNECTOR *(2)*	FLSTF, FLSTFB, FLSTFBS
26	72473-07	SEAL PIN *(5)*	FLSTF, FLSTFB, FLSTFBS
27	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLSTF, FLSTFB, FLSTFBS
27	72484-08	TERMINAL, socket, 20 AWG (Brazil) *(8)*	FLSTF, FLSTFB
28	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLSTF, FLSTFB, FLSTFBS
28	72486-08	WIRE SEAL, 20 AWG (green) (Brazil) *(8)*	FLSTF, FLSTFB
29	72500-07ABK	HOUSING, 20-way socket (black)	FLSTF, FLSTFB, FLSTFBS
30	72518-01	HOUSING, socket, two-way (red)	FLSTF, FLSTFB, FLSTFBS
31	72543-07BK	HOUSING, three-way socket (black)	FLSTF, FLSTFB, FLSTFBS
32	72544-07	SECONDARY LOCK, three-way socket	FLSTF, FLSTFB, FLSTFBS
33	72553-07	DUST CAP, five-way	FLSTF, FLSTFB, FLSTFBS
34	72575-11	SECONDARY LOCK	FLSTF, FLSTFB, FLSTFBS

35	72581-11	TERMINAL, socket, 18-20 AWG (gold) *(12)*	FLSTF, FLSTFB, FLSTFBS
36	72593-11	TERMINAL, socket, 14-16 AWG (gold) *(3)*	FLSTF, FLSTFB, FLSTFBS
37	72606-08	HOUSING, two-way socket	FLSTF, FLSTFB, FLSTFBS
38	72609-08	SECONDARY LOCK, two-way socket (black) *(2)*	FLSTF, FLSTFB, FLSTFBS
39	72610-08	SEAL, cable, 18-20 AWG (white) *(4)*	FLSTF, FLSTFB, FLSTFBS
40	73304-04	TERMINAL, .31 socket, 10 AWG	FLSTF, FLSTFB, FLSTFBS
41	73305-04	SEAL WIRE, 10 AWG (blue)	FLSTF, FLSTFB, FLSTFBS

WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)



Index No.	Part No.	Description	Model(s)
	69201184	WIRING HARNESS, MAIN	FLSTF, FLSTFB, FLSTFBS
	69201185	WIRING HARNESS, MAIN (Brazil)	FLSTF, FLSTFB
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(2)*	FLSTF, FLSTFB, FLSTFBS
2	72066-06A	HOUSING, four-way socket (black)	FLSTF, FLSTFB, FLSTFBS
3	72094-06	TERMINAL, socket, socket 18 AWG *(4)*	FLSTF, FLSTFB, FLSTFBS
4	72096-06	WIRE SEAL, 18 AWG (yellow) *(4)*	FLSTF, FLSTFB, FLSTFBS

5	72135-06	SECONDARY LOCK, four-way socket (gray)	FLSTF, FLSTFB, FLSTFBS
6	72168-07	TERMINAL, socket, 18-20 AWG *(3)*	FLSTF, FLSTFB, FLSTFBS
7	72169-07	TERMINAL, pin, 16-20 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS
8	72343-10	TERMINAL, pin, 16-20 AWG (gold) *(2)*	FLSTF, FLSTFB, FLSTFBS
9	72405-98BK	PUSH ON 90 DEGREE CONNECTOR	FLSTF, FLSTFB, FLSTFBS
10	72415-07GY	HOUSING, four-way pin (gray)	FLSTF, FLSTFB, FLSTFBS
11	72512-07BK	HOUSING, three-way socket (black)	FLSTF, FLSTFB, FLSTFBS
12	72519-09BK	DUST CAP, three-way socket	FLSTF, FLSTFB, FLSTFBS
13	73213-07	RETAINER, anchored clip *(2)*	FLSTF, FLSTFB, FLSTFBS
14	74112-98BK	HOUSING, two-way socket (black)	FLSTF, FLSTFB, FLSTFBS
15	74120-08	DC LEAD ASSEMBLY	FLSTF, FLSTFB, FLSTFBS
16	74152-98	SECONDARY LOCK, two-way socket	FLSTF, FLSTFB, FLSTFBS
17	74191-98	TERMINAL, socket *(2)*	FLSTF, FLSTFB, FLSTFBS
18	69200238	TERMINAL, insulated *(2)*	FLSTF, FLSTFB, FLSTFBS

WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)

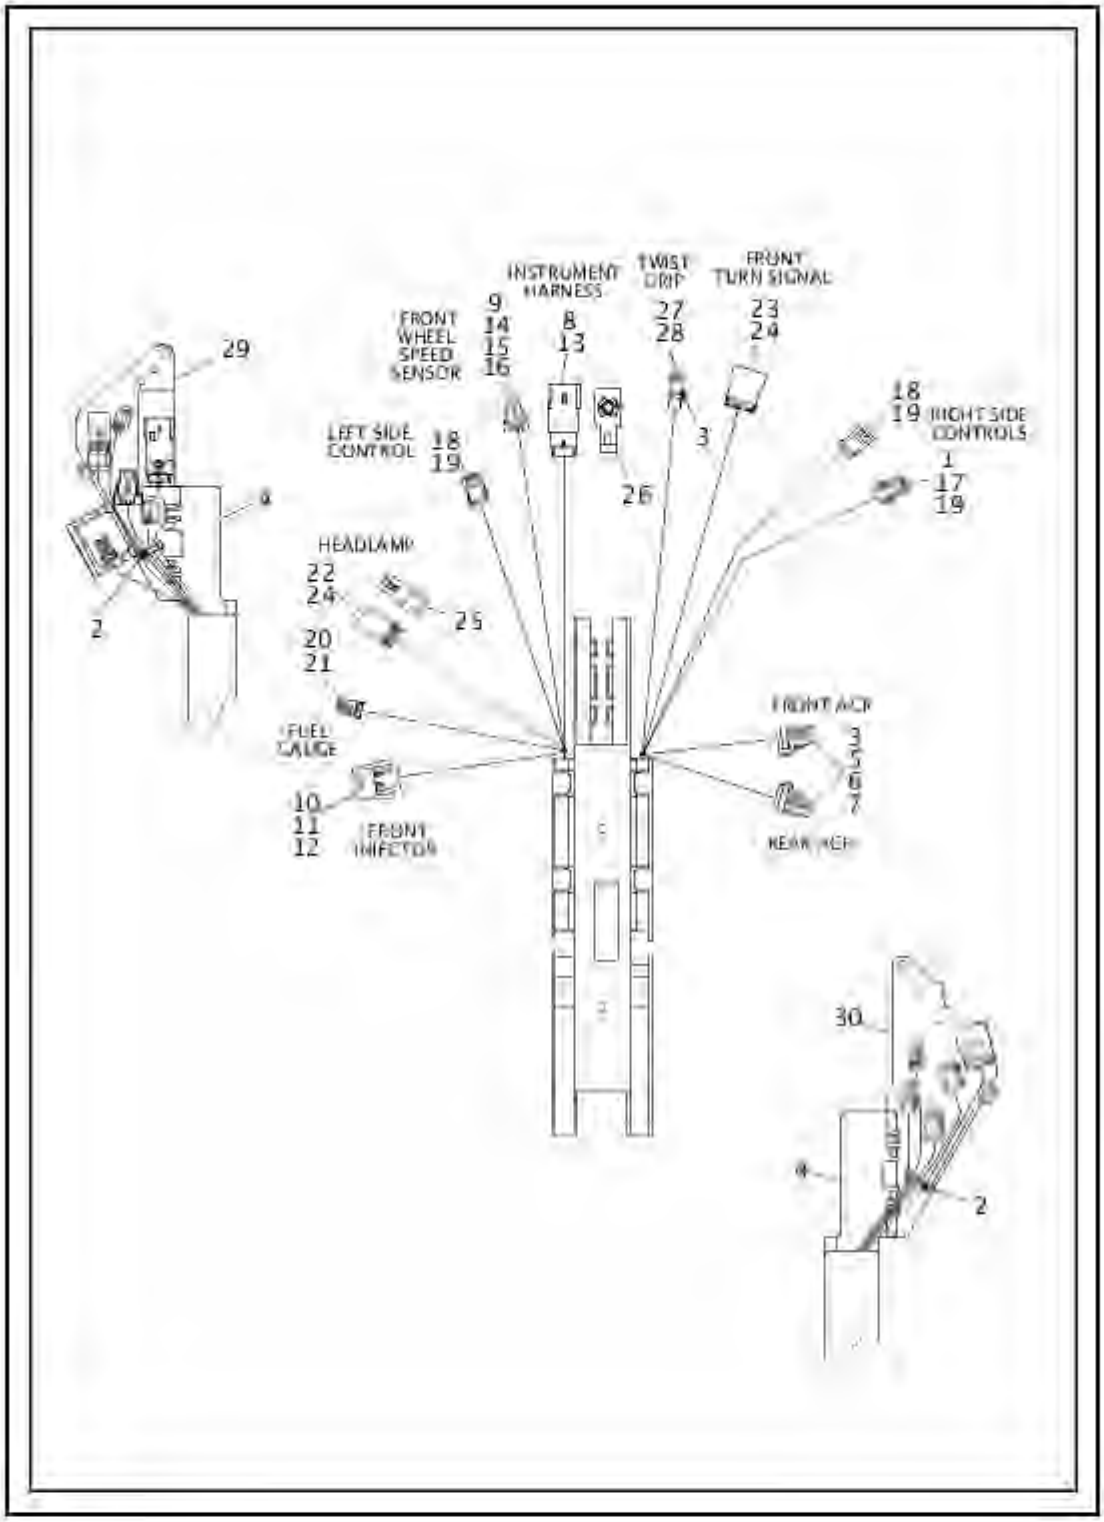

Index No.	Part No.	Description	Model(s)
	69201077	WIRING HARNESS, MAIN	FLSTN, FLSTC
	69201078	WIRING HARNESS, MAIN (Brazil)	FLSTN, FLSTC
NOTE: Includes the following parts.			
1	5118	SEAL PIN	FLSTN, FLSTC
2	10065	CABLE STRAP *(2)*	FLSTN, FLSTC
3	10177	CABLE STRAP *(3)*	FLSTN, FLSTC
4	71044-11	WIRE TROUGH	FLSTN, FLSTC

5	72007-05	HOUSING, two-way socket *(2)*	FLSTN, FLSTC
6	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLSTN, FLSTC
7	72024-08	TERMINAL, socket, 20-22 AWG *(4)*	FLSTN, FLSTC
8	72169-07	TERMINAL, pin, 16-20 AWG *(8)*	FLSTN, FLSTC
9	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FLSTN, FLSTC
10	72251-07	SECONDARY LOCK, two-way socket (yellow)	FLSTN, FLSTC
11	72402-07	HOUSING, two-way socket	FLSTN, FLSTC
12	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLSTN, FLSTC
13	72478-07BK	HOUSING, eight-way pin (black)	FLSTN, FLSTC
14	72606-08	HOUSING, two-way socket	FLSTN, FLSTC
15	72609-08	SECONDARY LOCK, two-way socket (black)	FLSTN, FLSTC
16	72610-08	SEAL, cable, 18-20 AWG (white) *(2)*	FLSTN, FLSTC
17	72905-11	HOUSING, two-way pin	FLSTN, FLSTC
18	72907-11	HOUSING, four-way pin *(2)*	FLSTN, FLSTC
19	72909-11	TERMINAL, pin, 20-21 AWG *(9)*	FLSTN, FLSTC
20	72914-01BK	HOUSING, four-way socket (black)	FLSTN, FLSTC
21	72991-01	TERMINAL, socket, 18-22 AWG *(3)*	FLSTN, FLSTC
22	73104-96BK	HOUSING, four-way pin	FLSTN, FLSTC
23	73106-96BK	HOUSING, six-way pin	FLSTN, FLSTC
24	73190-96	TERMINAL, pin, 16-20 AWG *(10)*	FLSTN, FLSTC
25	73198-96	RETAINER, anchored clip	FLSTN, FLSTC
26	73213-07	RETAINER, anchored clip	FLSTN, FLSTC
27	69201163	HOUSING, six-way pin	FLSTN, FLSTC
28	69201164	TERMINAL, pin, 22 AWG *(6)*	FLSTN, FLSTC
29	69201296	BRACKET, electrical connector, right	FLSTN, FLSTC
30	69201297	BRACKET, electrical connector, left	FLSTN, FLSTC

WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)

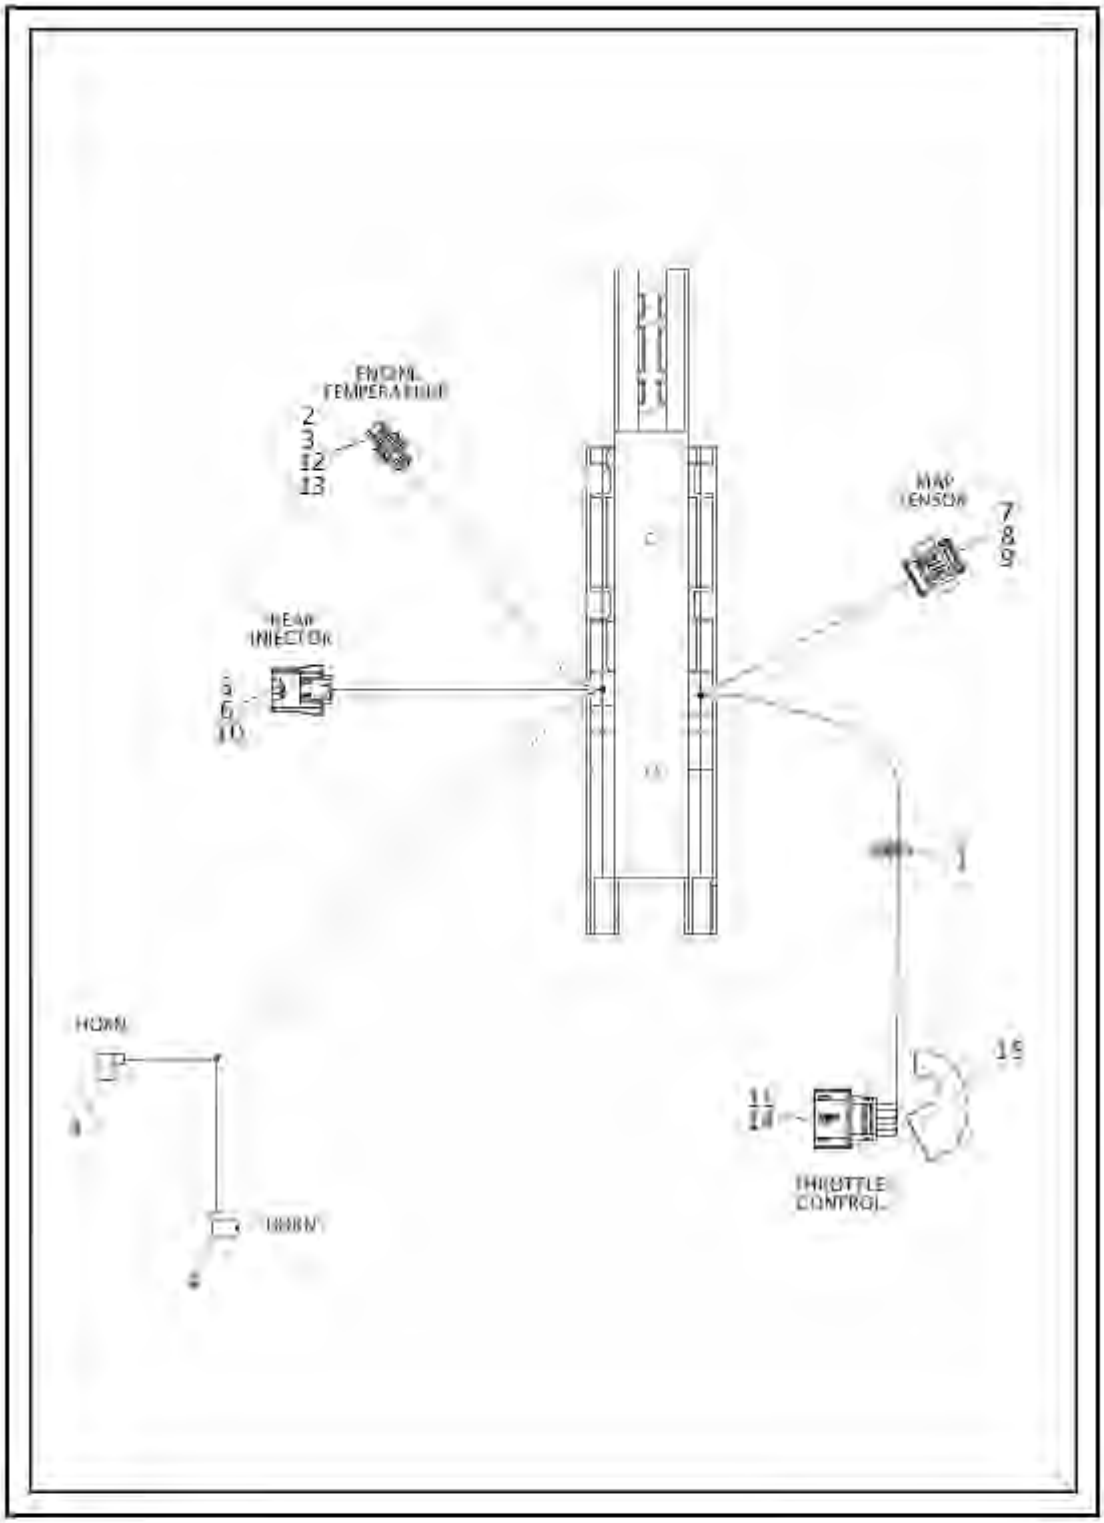

Index No.	Part No.	Description	Model(s)
	69201077	WIRING HARNESS, MAIN	FLSTN, FLSTC
	69201078	WIRING HARNESS, MAIN (Brazil)	FLSTN, FLSTC
NOTE: Includes the following parts.			
1	10177	CABLE STRAP	FLSTN, FLSTC
2	72063-06	HOUSING, two-way socket	FLSTN, FLSTC
3	72111-06	SECONDARY LOCK, two-way socket (gray)	FLSTN, FLSTC
4	72283-09	TERMINAL, socket, 14-16 AWG *(2)*	FLSTN, FLSTC

5	72251-07	SECONDARY LOCK, two-way socket (yellow)	FLSTN, FLSTC
6	72402-07	HOUSING, two-way socket (black)	FLSTN, FLSTC
7	72406-07A	HOUSING, four-way socket	FLSTN, FLSTC
8	72407-07	TERMINAL, socket, 16-20 AWG *(4)*	FLSTN, FLSTC
9	72408-07	WIRE SEAL, 20 AWG (blue) *(4)*	FLSTN, FLSTC
10	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLSTN, FLSTC
11	72483-08BK	HOUSING, six-way socket (black)	FLSTN, FLSTC
12	72484-08	TERMINAL, socket, 20 AWG *(2)*	FLSTN, FLSTC
13	72486-08	WIRE SEAL, 20 AWG (green) *(2)*	FLSTN, FLSTC
14	72663-11	TERMINAL, socket, 18-20 AWG (silver) *(6)*	FLSTN, FLSTC
15	69200437	BOOT, rubber	FLSTN, FLSTC

WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)

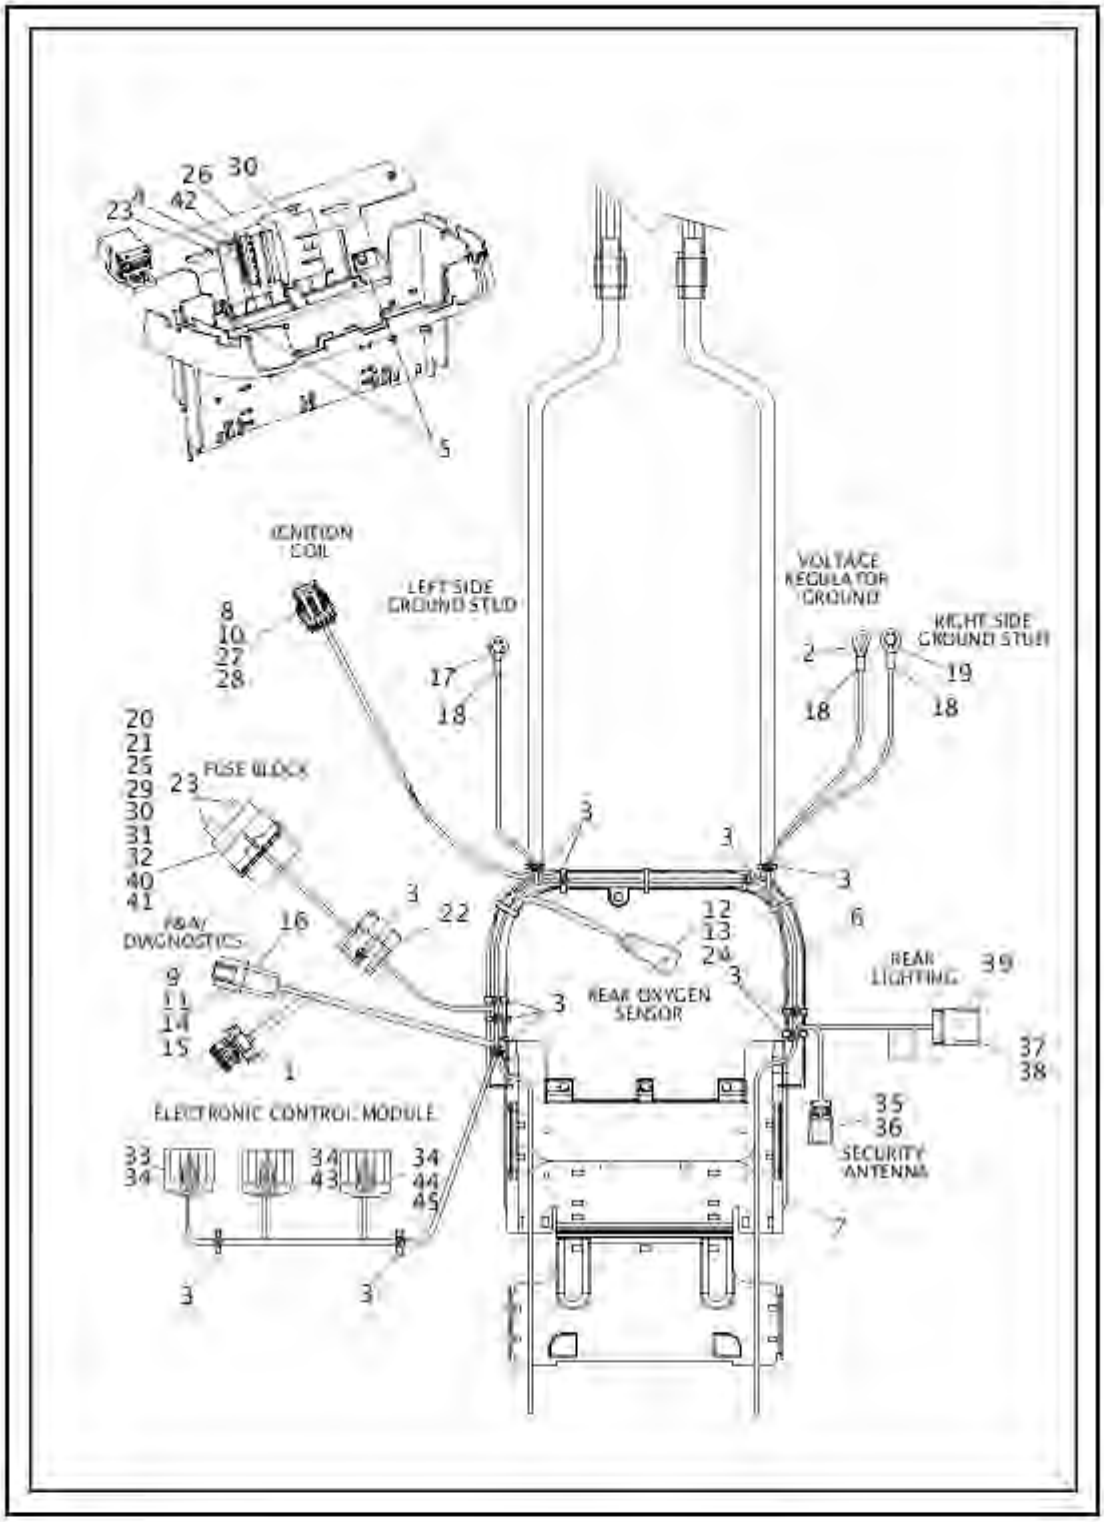

Index No.	Part No.	Description	Model(s)
	69201077	WIRING HARNESS, MAIN	FLSTN, FLSTC
	69201078	WIRING HARNESS, MAIN (Brazil)	FLSTN, FLSTC
NOTE: Includes the following parts.			
1	6990	PLUG, weather, six-way pin	FLSTN, FLSTC
2	9819	TERMINAL RING, .25 stud, 12 AWGX2	FLSTN, FLSTC
3	10065	CABLE STRAP *(12)*	FLSTN, FLSTC
4	10147	CLIP, connector *(2)*	FLSTN, FLSTC

5	11785	FASTENER, push-in *(2)*	FLSTN, FLSTC
6	70974-08A	LOOM SHIELD, wire harness	FLSTN, FLSTC
7	70982-08	WIRE SHIELD	FLSTN, FLSTC
8	72066-06A	HOUSING, four-way socket (black)	FLSTN, FLSTC
9	72106-94BK	HOUSING, six-way (black) (replaces gray connector)	FLSTN, FLSTC
10	72135-06	SECONDARY LOCK, four-way socket (gray)	FLSTN, FLSTC
11	72146-94	PIN LOCK, sec 6	FLSTN, FLSTC
12	72169-07	TERMINAL, pin, 16-20 AWG *(2)*	FLSTN, FLSTC
13	72175-07BK	HOUSING, four-way, pin (black)	FLSTN, FLSTC
14	72190-94	TERMINAL, pin, 16-18 AWG *(3)*	FLSTN, FLSTC
15	72194-94	TERMINAL, pin, 20 AWG *(3)*	FLSTN, FLSTC
16	72199-94	CONNECTOR ANCHOR	FLSTN, FLSTC
17	72242-94	TERMINAL, 1/4 ring	FLSTN, FLSTC
18	72249-94	HEAT SHRINK TUBE, .415 x 1 (black)	FLSTN, FLSTC
19	72254-94	TERMINAL RING, .25 stud, 14-16 AWG	FLSTN, FLSTC
20	72298-95	WIRE SEAL, 14-18 AWG (green) *(4)*	FLSTN, FLSTC
21	72308-97	TERMINAL, socket, 12-14 AWG *(2)*	FLSTN, FLSTC
22	72314-01	MAIN FUSE, 40 A	FLSTN, FLSTC
23	72330-95	FUSE, 15 A (blue) *(2)*	FLSTN, FLSTC
24	72343-10	TERMINAL, pin, 16-20 AWG (gold) *(2)*	FLSTN, FLSTC
25	72356-95	TERMINAL, socket, 18-20 AWG *(2)*	FLSTN, FLSTC
26	72369-08A	BRACKET, fuse block holder, (black)	FLSTN, FLSTC
27	72484-08	TERMINAL, socket, 20 AWG *(4)*	FLSTN, FLSTC
28	72486-08	WIRE SEAL, 20 AWG (green) *(4)*	FLSTN, FLSTC
29	72582-11	FUSE BLOCK	FLSTN, FLSTC
30	72586-11	COVER, fuse block	FLSTN, FLSTC
31	72587-11	SECONDARY LOCK, fuse block	FLSTN, FLSTC
32	72595-11	SEAL, fuse block	FLSTN, FLSTC
33	72664-12A	HOUSING, 18-way, socket, key A (black)	FLSTN, FLSTC
34	72666-12	TERMINAL, socket, 18-20 AWG (silver) *(36)*	FLSTN, FLSTC
35	72720-07	HOUSING, two-way socket	FLSTN, FLSTC
36	72721-07	TERMINAL, socket, 18-20 AWG *(2)*	FLSTN, FLSTC

37	73108-96BK	HOUSING, eight-way pin	FLSTN, FLSTC
38	73190-96	TERMINAL, pin, 16-20 AWG *(8)*	FLSTN, FLSTC
39	73196-96	ANCHOR, T-stud	FLSTN, FLSTC
40	73304-04	TERMINAL, .31 socket, 10 AWG *(2)*	FLSTN, FLSTC
41	73305-04	SEAL WIRE, 10 AWG (blue) *(2)*	FLSTN, FLSTC
42	12200044	BRACKET, fuse block mounting	FLSTN, FLSTC
43	69200267A	HOUSING, 18-way, socket, key B (gray)	FLSTN, FLSTC
44	69200268A	HOUSING, 18-way, socket, key C (brown)	FLSTN, FLSTC
45	69201168	TERMINAL, socket, 22 AWG (silver) *(2)*	FLSTN, FLSTC

WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)

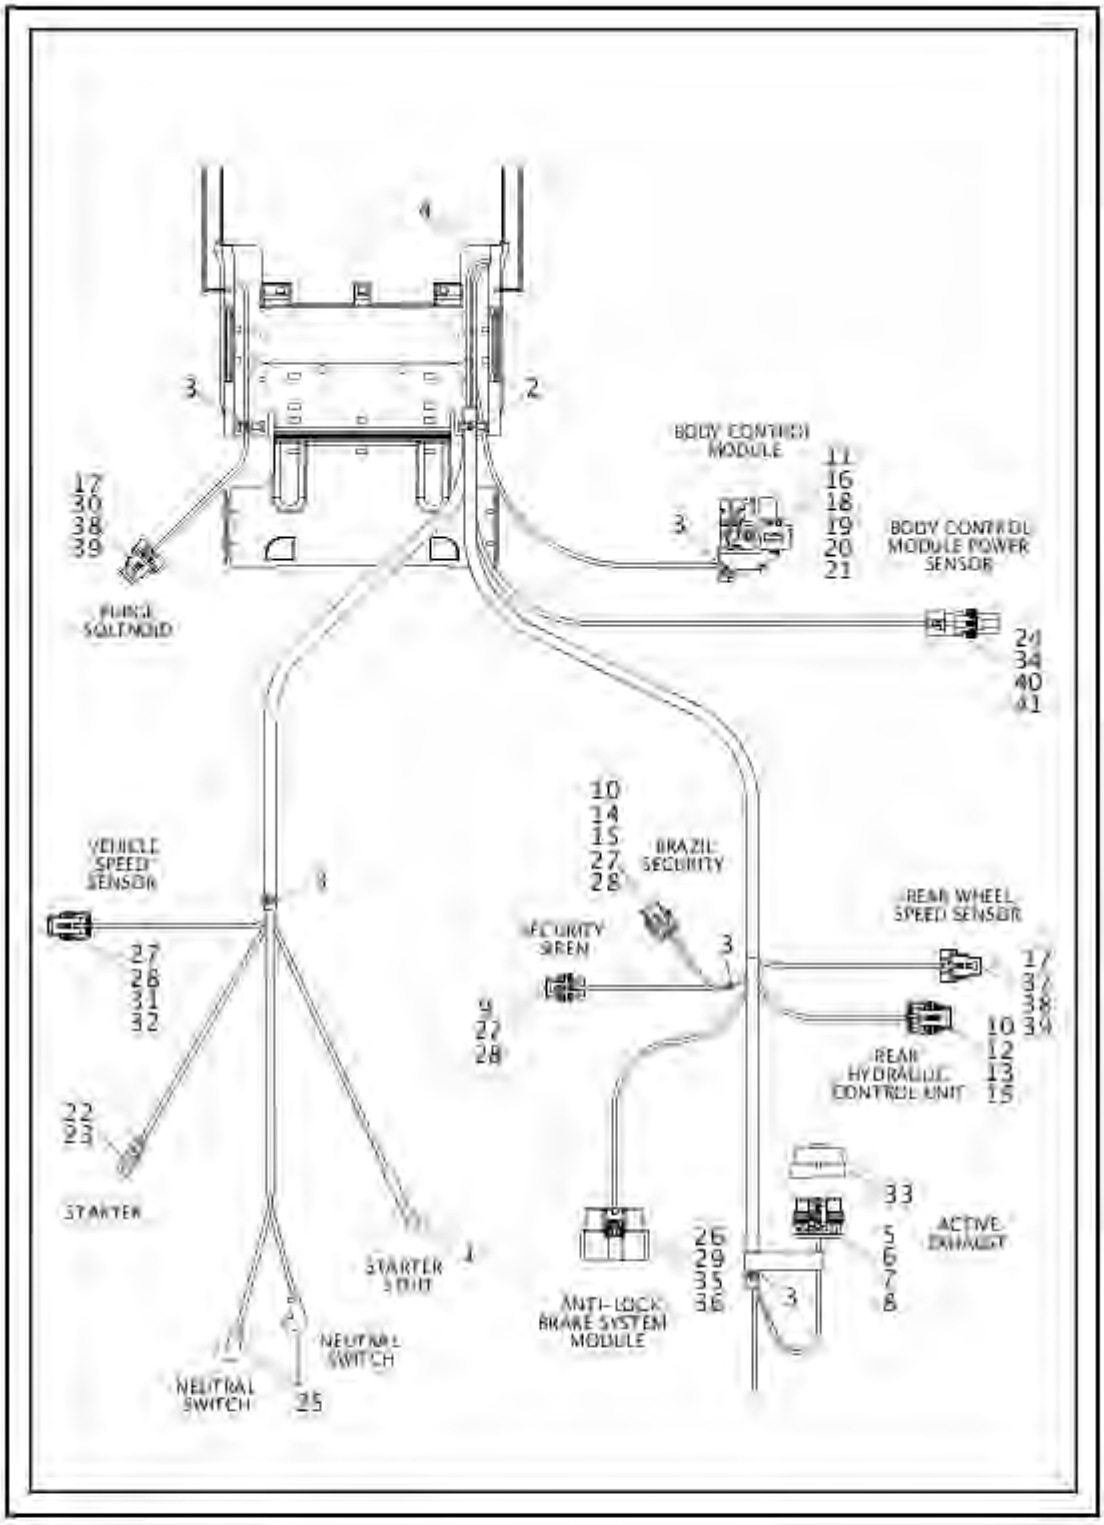

Index No.	Part No.	Description	Model(s)
	69201077	WIRING HARNESS, MAIN	FLSTN, FLSTC
	69201078	WIRING HARNESS, MAIN (Brazil)	FLSTN, FLSTC
NOTE: Includes the following parts.			
1	9842	TERMINAL RING, .31 10-12 GA	FLSTN, FLSTC
2	10006	CABLE STRAP	FLSTN, FLSTC
3	10065	CABLE STRAP *(5)*	FLSTN, FLSTC
4	70982-08	WIRE SHIELD	FLSTN, FLSTC

5	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FLSTN, FLSTC
6	72012-07	HOUSING, five-way socket	FLSTN, FLSTC
7	72014-07	SEAL PIN	FLSTN, FLSTC
8	72024-08	TERMINAL, socket, 20-22 AWG *(4)*	FLSTN, FLSTC
9	72064-06	HOUSING, three-way socket	FLSTN, FLSTC
10	72066-06A	HOUSING, four-way socket (black) *(2)*	FLSTN, FLSTC
11	72081-11	HOUSING, 48-way socket	FLSTN, FLSTC
12	72094-06	TERMINAL, socket, socket 18 AWG *(4)*	FLSTN, FLSTC
13	72096-06	WIRE SEAL, 18 AWG (yellow) *(4)*	FLSTN, FLSTC
14	72097-06	PLUG, oval (orange) (Brazil) *(2)*	FLSTN, FLSTC
15	72135-06	SECONDARY LOCK, four-way socket (gray) *(2)*	FLSTN, FLSTC
16	72209-11	COVER, wire	FLSTN, FLSTC
17	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FLSTN, FLSTC
18	72222-11	TERMINAL SOCKET, 18-20 AWG *(20)*	FLSTN, FLSTC
19	72226-11	TERMINAL SOCKET, 14-16 AWG	FLSTN, FLSTC
20	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FLSTN, FLSTC
21	72256-11	SEAL PIN, .6mm, plug *(10)*	FLSTN, FLSTC
22	72291-94	TERMINAL, 14-16 AWG	FLSTN, FLSTC
23	72295-94	HOUSING, starter connection	FLSTN, FLSTC
24	72350-11	HOUSING, one-way	FLSTN, FLSTC
25	72405-98BK	PUSH ON 90 DEGREE CONNECTOR *(2)*	FLSTN, FLSTC
26	72473-07	SEAL PIN *(5)*	FLSTN, FLSTC
27	72484-08	TERMINAL, socket, 20 AWG *(6)*	FLSTN, FLSTC
27	72484-08	TERMINAL, socket, 20 AWG (Brazil) *(8)*	FLSTN, FLSTC
28	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FLSTN, FLSTC
28	72486-08	WIRE SEAL, 20 AWG (green) (Brazil) *(8)*	FLSTN, FLSTC
29	72500-07ABK	HOUSING, 20-way socket (black)	FLSTN, FLSTC
30	72518-01	HOUSING, socket, two-way (red)	FLSTN, FLSTC
31	72543-07BK	HOUSING, three-way socket (black)	FLSTN, FLSTC
32	72544-07	SECONDARY LOCK, three-way socket	FLSTN, FLSTC
33	72553-07	DUST CAP, five-way	FLSTN, FLSTC
34	72575-11	SECONDARY LOCK	FLSTN, FLSTC

35	72581-11	TERMINAL, socket, 18-20 AWG (gold) *(12)*	FLSTN, FLSTC
36	72593-11	TERMINAL, socket, 14-16 AWG (gold) *(3)*	FLSTN, FLSTC
37	72606-08	HOUSING, two-way socket	FLSTN, FLSTC
38	72609-08	SECONDARY LOCK, two-way socket (black) *(2)*	FLSTN, FLSTC
39	72610-08	SEAL, cable, 18-20 AWG (white) *(4)*	FLSTN, FLSTC
40	73304-04	TERMINAL, .31 socket, 10 AWG	FLSTN, FLSTC
41	73305-04	SEAL WIRE, 10 AWG (blue)	FLSTN, FLSTC

WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)

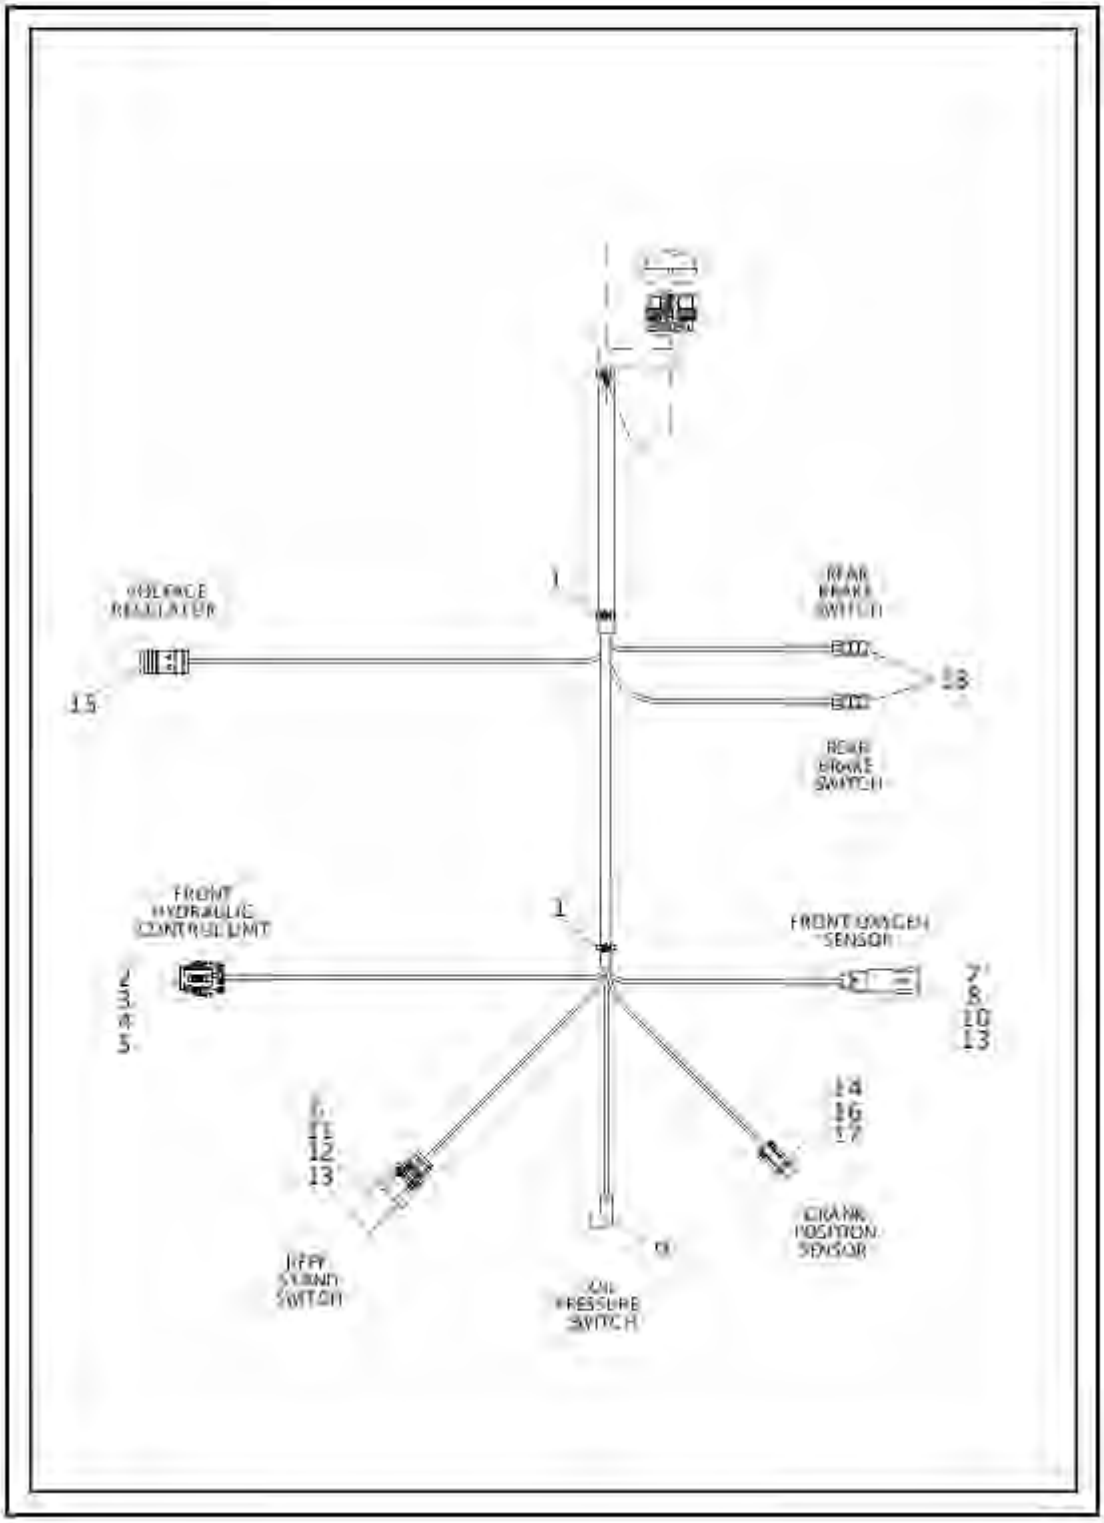

Index No.	Part No.	Description	Model(s)
	69201077	WIRING HARNESS, MAIN	FLSTN, FLSTC
	69201078	WIRING HARNESS, MAIN (Brazil)	FLSTN, FLSTC
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(2)*	FLSTN, FLSTC
2	72066-06A	HOUSING, four-way socket (black)	FLSTN, FLSTC
3	72094-06	TERMINAL, socket, socket 18 AWG *(4)*	FLSTN, FLSTC
4	72096-06	WIRE SEAL, 18 AWG (yellow) *(4)*	FLSTN, FLSTC
5	72135-06	SECONDARY LOCK, four-way socket (gray) *(3)*	FLSTN, FLSTC
6	72168-07	TERMINAL, socket, 18-20 AWG *(3)*	FLSTN, FLSTC
7	72169-07	TERMINAL, pin, 16-20 AWG *(2)*	FLSTN, FLSTC
8	72343-10	TERMINAL, pin, 16-20 AWG (gold) *(2)*	FLSTN, FLSTC
9	72405-98BK	PUSH ON 90 DEGREE CONNECTOR	FLSTN, FLSTC
10	72415-07GY	HOUSING, four-way pin (gray)	FLSTN, FLSTC
11	72512-07BK	HOUSING, three-way socket (black)	FLSTN, FLSTC
12	72519-09BK	DUST CAP, three-way socket	FLSTN, FLSTC
13	73213-07	RETAINER, anchored clip	FLSTN, FLSTC
14	74112-98BK	HOUSING, two-way socket (black)	FLSTN, FLSTC
15	74120-08	DC LEAD ASSEMBLY	FLSTN, FLSTC
16	74152-98	SECONDARY LOCK, two-way socket	FLSTN, FLSTC
17	74191-98	TERMINAL, socket *(2)*	FLSTN, FLSTC
18	69200238	TERMINAL, insulated *(2)*	FLSTN, FLSTC

WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)

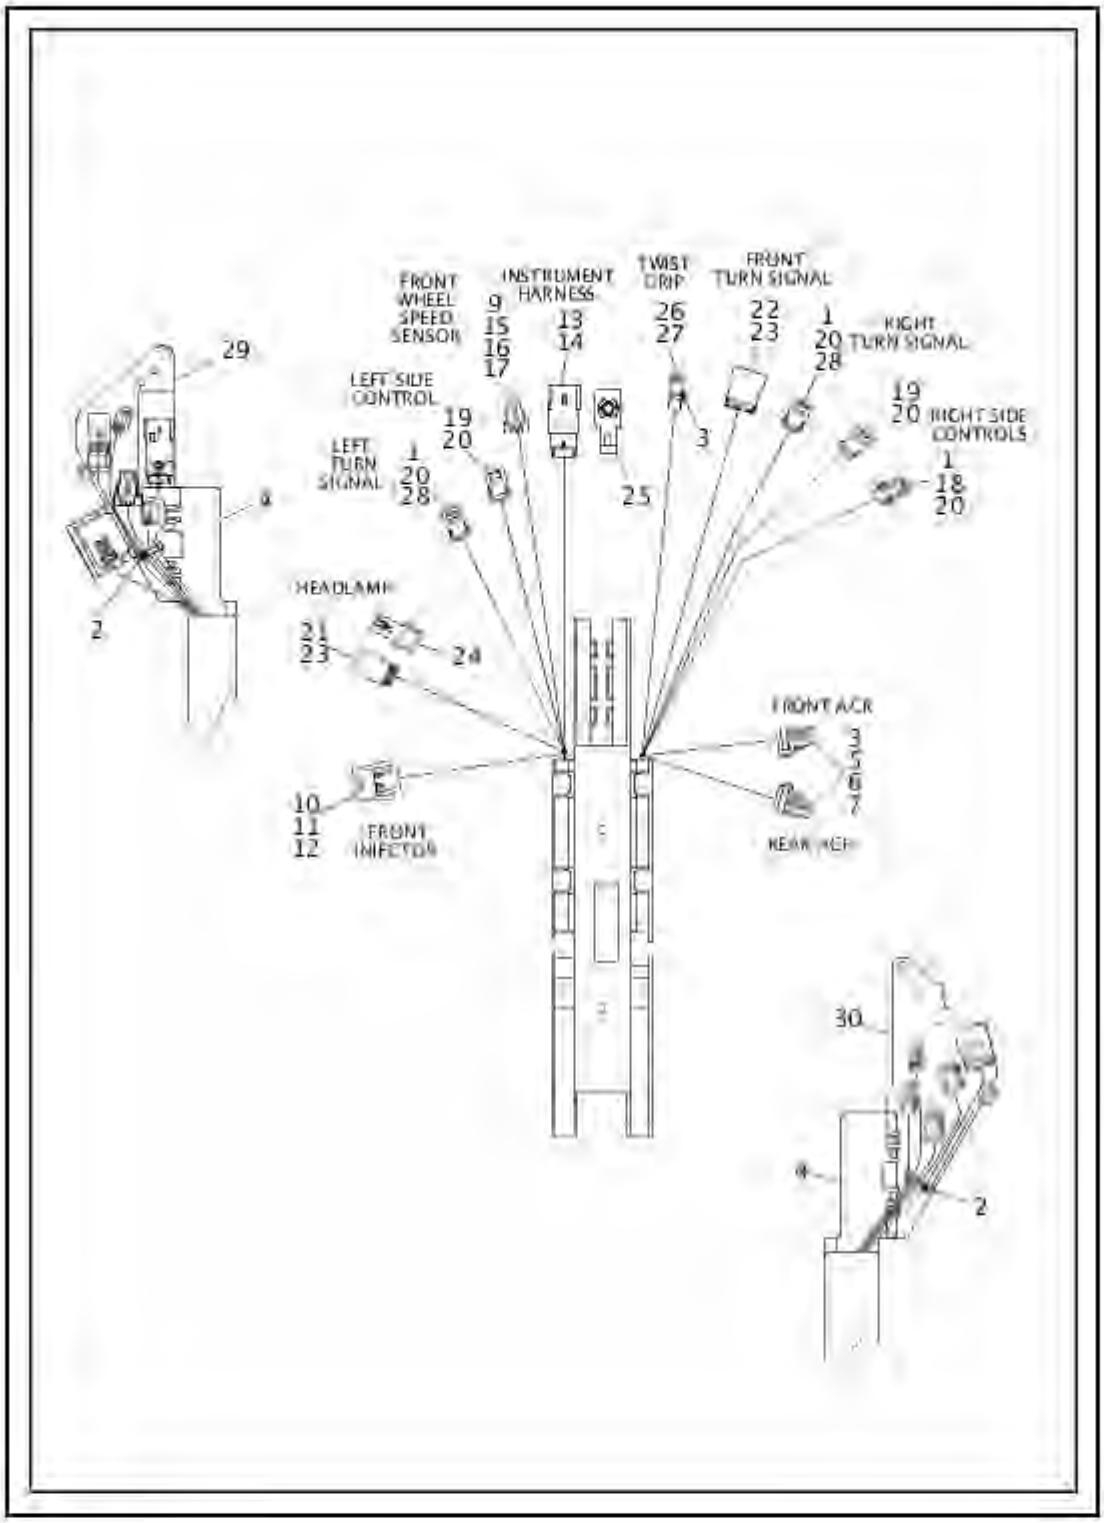

Index No.	Part No.	Description	Model(s)
	69201082	WIRING HARNESS, MAIN	FXSB
	69201083	WIRING HARNESS, MAIN (Brazil)	FXSB
NOTE: Includes the following parts.			
1	5118	SEAL PIN *(3)*	FXSB
2	10065	CABLE STRAP *(2)*	FXSB
3	10177	CABLE STRAP *(3)*	FXSB
4	71044-11	WIRE TROUGH	FXSB

5	72007-05	HOUSING, two-way socket *(2)*	FXSB
6	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FXSB
7	72024-08	TERMINAL, socket, 20-22 AWG *(4)*	FXSB
8	72169-07	TERMINAL, pin, 16-20 AWG *(8)*	FXSB
9	72213-94	TERMINAL, socket, 16-20 AWG *(2)*	FXSB
10	72251-07	SECONDARY LOCK, two-way socket (yellow)	FXSB
11	72402-07	HOUSING, two-way socket	FXSB
12	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FXSB
13	72473-07	SEAL PIN	FXSB
14	72554-09GY	HOUSING, six-way pin	FXSB
15	72606-08	HOUSING, two-way socket	FXSB
16	72609-08	SECONDARY LOCK, two-way socket (black)	FXSB
17	72610-08	SEAL, cable, 18-20 AWG (white) *(2)*	FXSB
18	72905-11	HOUSING, two-way pin	FXSB
19	72907-11	HOUSING, four-way pin *(2)*	FXSB
20	72909-11	TERMINAL, pin, 20-21 AWG *(15)*	FXSB
21	73104-96BK	HOUSING, four-way pin	FXSB
22	73106-96BK	HOUSING, six-way pin	FXSB
23	73190-96	TERMINAL, pin, 16-20 AWG *(10)*	FXSB
24	73198-96	RETAINER, anchored clip	FXSB
25	73213-07	RETAINER, anchored clip	FXSB
26	69201163	HOUSING, six-way pin	FXSB
27	69201164	TERMINAL, pin, 22 AWG *(6)*	FXSB
28	69201180	HOUSING, four-way pin (gray) *(2)*	FXSB
29	69201296	BRACKET, electrical connector, right	FXSB
30	69201297	BRACKET, electrical connector, left	FXSB

WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)

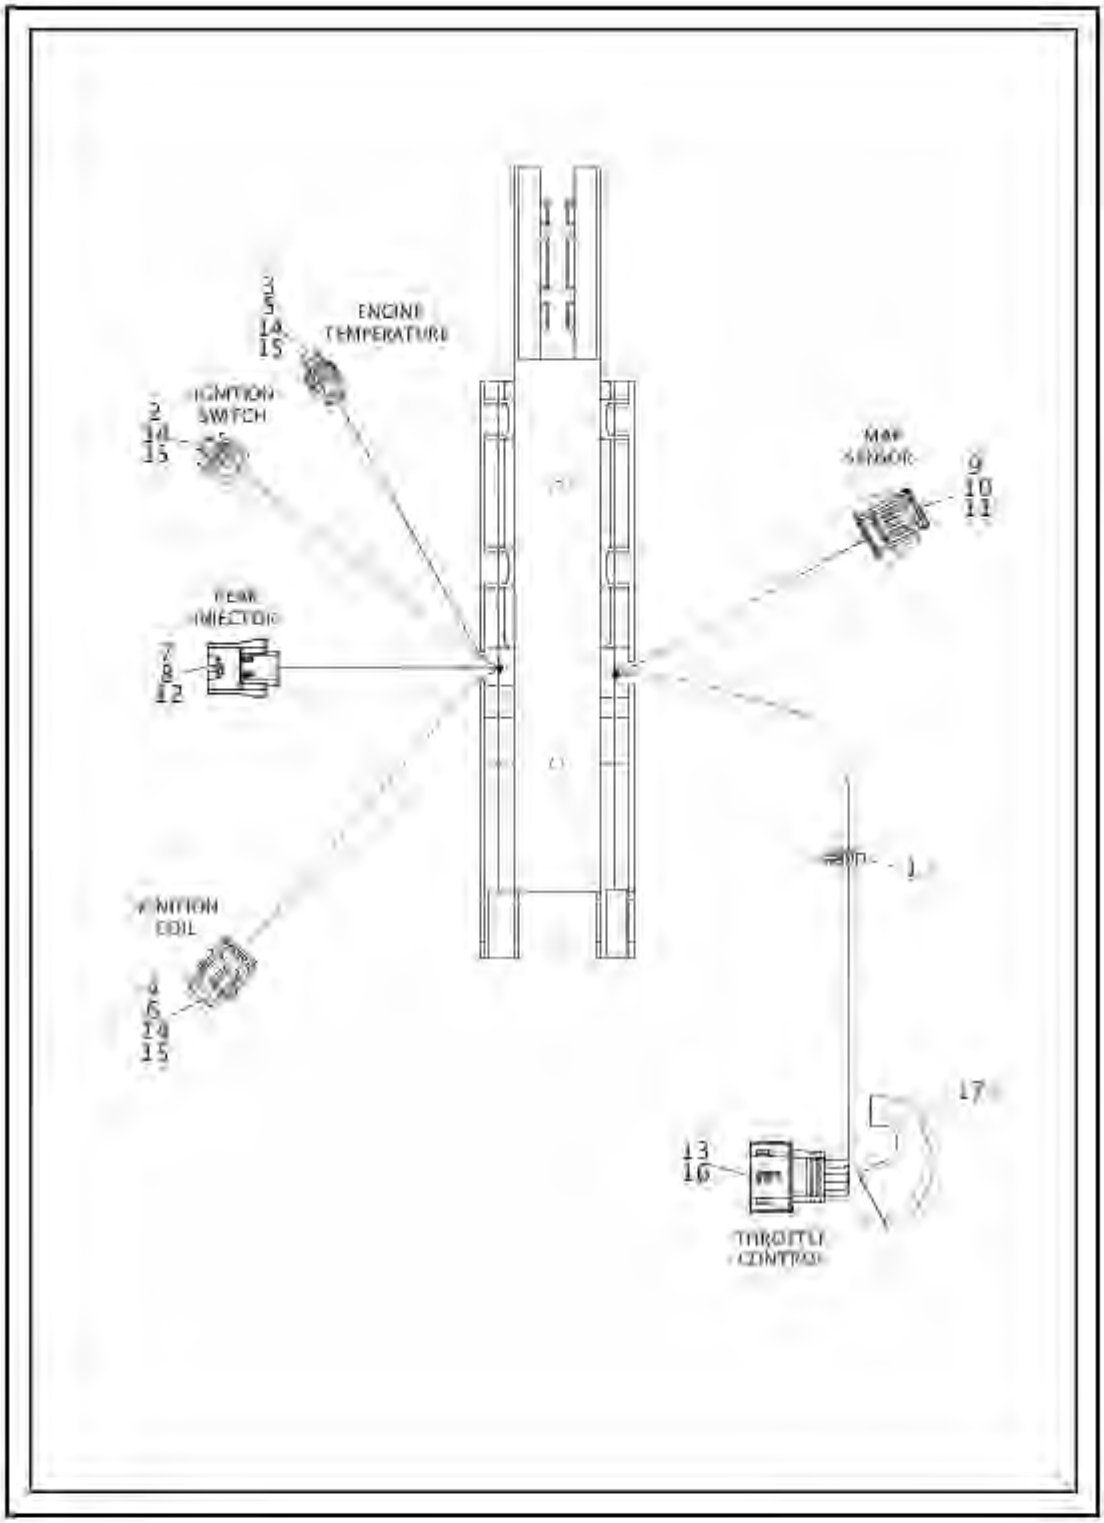

Index No.	Part No.	Description	Model(s)
	69201082	WIRING HARNESS, MAIN	FXSB
	69201083	WIRING HARNESS, MAIN (Brazil)	FXSB
NOTE: Includes the following parts.			
1	10177	CABLE STRAP	FXSB
2	72062-06	HOUSING, two-way socket	FXSB
3	72063-06	HOUSING, two-way socket	FXSB
4	72066-06A	HOUSING, four-way socket (black)	FXSB

5	72111-06	SECONDARY LOCK, two-way socket (gray)	FXSB
6	72135-06	SECONDARY LOCK, four-way socket (gray)	FXSB
7	72251-07	SECONDARY LOCK, two-way socket (yellow)	FXSB
8	72402-07	HOUSING, two-way socket (black)	FXSB
9	72406-07A	HOUSING, four-way socket	FXSB
10	72407-07	TERMINAL, socket, 16-20 AWG *(4)*	FXSB
11	72408-07	WIRE SEAL, 20 AWG (blue) *(4)*	FXSB
12	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FXSB
13	72483-08BK	HOUSING, six-way socket (black)	FXSB
14	72484-08	TERMINAL, socket, 20 AWG *(8)*	FXSB
15	72486-08	WIRE SEAL, 20 AWG (green) *(8)*	FXSB
16	72663-11	TERMINAL, socket, 18-20 AWG (silver) *(6)*	FXSB
17	69200437	BOOT, rubber	FXSB

WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)

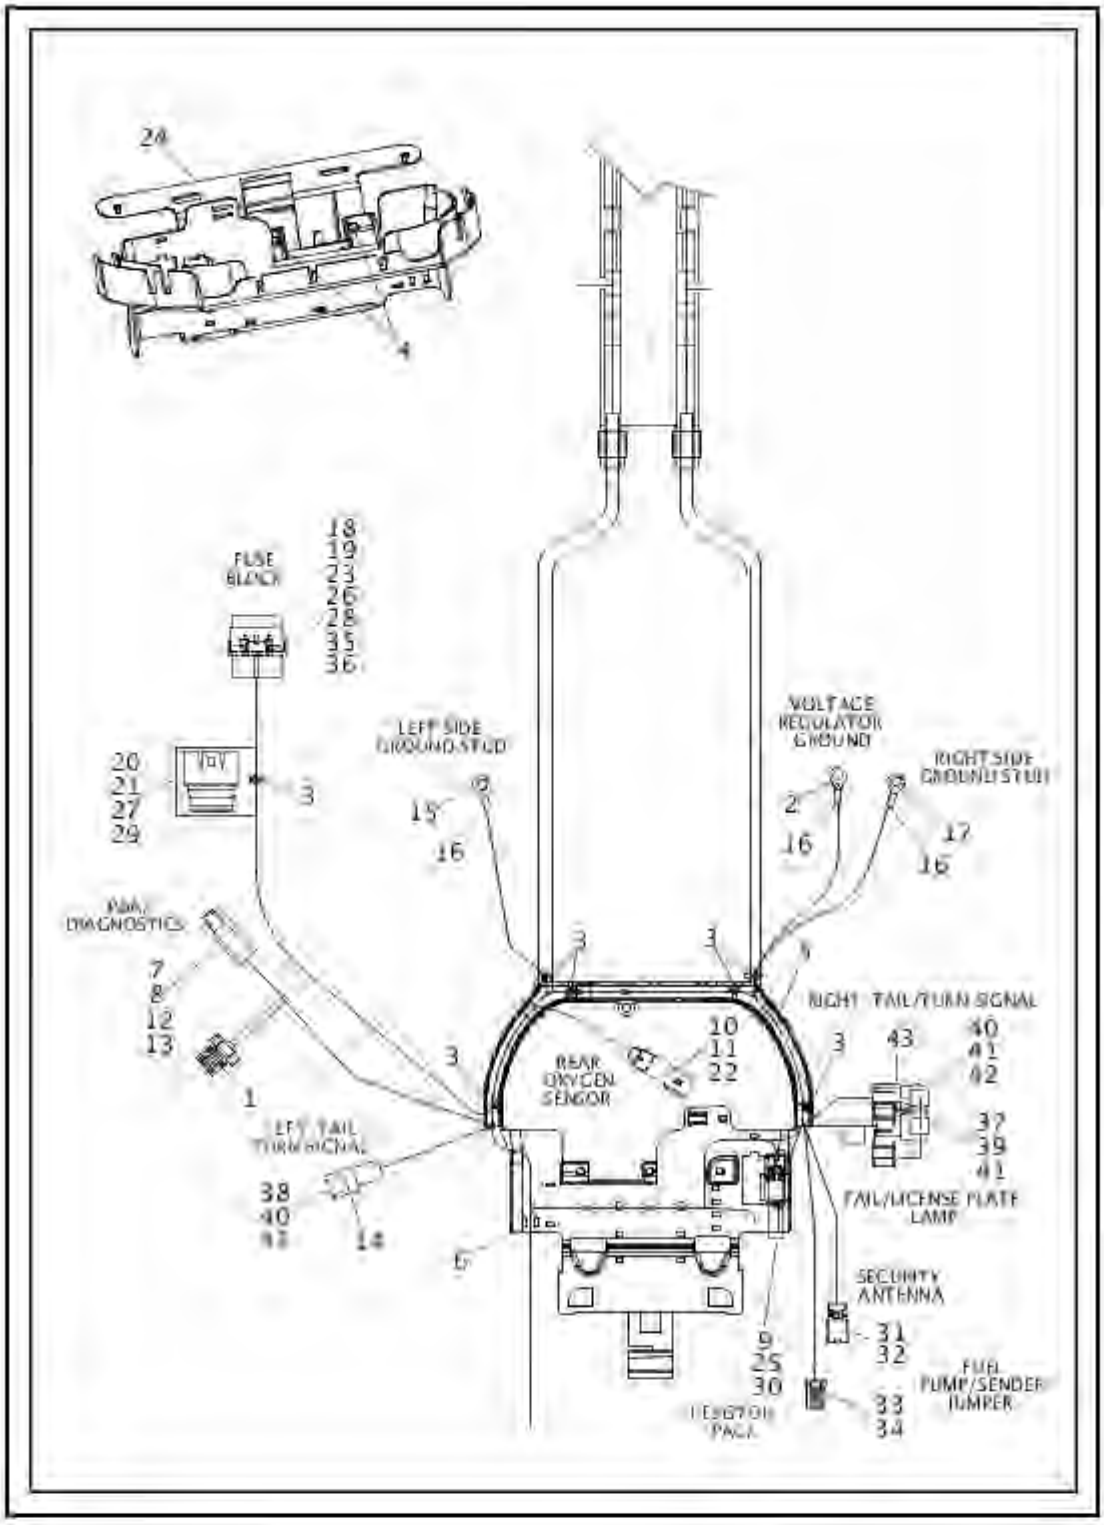

Index No.	Part No.	Description	Model(s)
	69201082	WIRING HARNESS, MAIN	FXSB
	69201083	WIRING HARNESS, MAIN (Brazil)	FXSB
NOTE: Includes the following parts.			
1	6990	PLUG, weather, six-way pin	FXSB
2	9819	TERMINAL RING, .25 stud, 12 AWGX2	FXSB
3	10065	CABLE STRAP *(8)*	FXSB
4	11785	FASTENER, push-in *(2)*	FXSB

5	70996-08	LOOM SHIELD, wire harness	FXSB
6	71060-11A	WIRE SHIELD	FXSB
7	72106-94BK	HOUSING, six-way (black) (replaces gray connector)	FXSB
8	72146-94	PIN LOCK, sec 6	FXSB
9	72168-07	TERMINAL, socket, 18-20 AWG *(3)*	FXSB
10	72169-07	TERMINAL, pin, 16-20 AWG *(2)*	FXSB
11	72175-07BK	HOUSING, four-way, pin (black)	FXSB
12	72190-94	TERMINAL, pin, 16-18 AWG *(3)*	FXSB
13	72194-94	TERMINAL, pin, 20 AWG *(3)*	FXSB
14	72199-94	CONNECTOR ANCHOR	FXSB
15	72242-94	TERMINAL, 1/4 ring *(2)*	FXSB
16	72249-94	HEAT SHRINK TUBE, .415 x 1 (black)	FXSB
17	72254-94	TERMINAL RING, .25 stud, 14-16 AWG	FXSB
18	72298-95	WIRE SEAL, 14-18 AWG (green) *(4)*	FXSB
19	72308-97	TERMINAL, socket, 12-14 AWG *(2)*	FXSB
20	72314-01	MAIN FUSE, 40 A	FXSB
21	72330-95	FUSE, 15 A (blue) *(4)*	FXSB
22	72343-10	TERMINAL, pin, 16-20 AWG (gold) *(2)*	FXSB
23	72356-95	TERMINAL, socket, 18-20 AWG *(2)*	FXSB
24	72369-08A	BRACKET, fuse block holder (black)	FXSB
25	72514-07GY	HOUSING, three-way socket (gray)	FXSB
26	72582-11	FUSE BLOCK	FXSB
27	72586-11	COVER, fuse block	FXSB
28	72587-11	SECONDARY LOCK, fuse block	FXSB
29	72595-11	SEAL, fuse block	FXSB
30	72677-11	RESISTOR ASSEMBLY, fuel sender	FXSB
31	72720-07	HOUSING, two-way socket	FXSB
32	72721-07	TERMINAL, SOCKET, 18-20 AWG *(2)*	FXSB
33	73154-96BK	HOUSING, four-way, socket	FXSB
34	73191-96	TERMINAL, socket, 16-20 AWG *(4)*	FXSB
35	73304-04	TERMINAL, .31 socket, 10 AWG *(2)*	FXSB
36	73305-04	SEAL WIRE, 10 AWG (blue) *(2)*	FXSB

37	74103-98BK	HOUSING, three-way pin	FXSB
38	74104-98BK	HOUSING, four-way pin (black)	FXSB
39	74143-98	SECONDARY LOCK, three-way pin	FXSB
40	74144-98	SECONDARY LOCK, four-way pin *(2)*	FXSB
41	74190-98	TERMINAL, pin, 16-20 AWG *(11)*	FXSB
42	69200010	CONNECTOR, four-way pin (gray)	FXSB
43	69200012	BRACKET, pin housing	FXSB

WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)

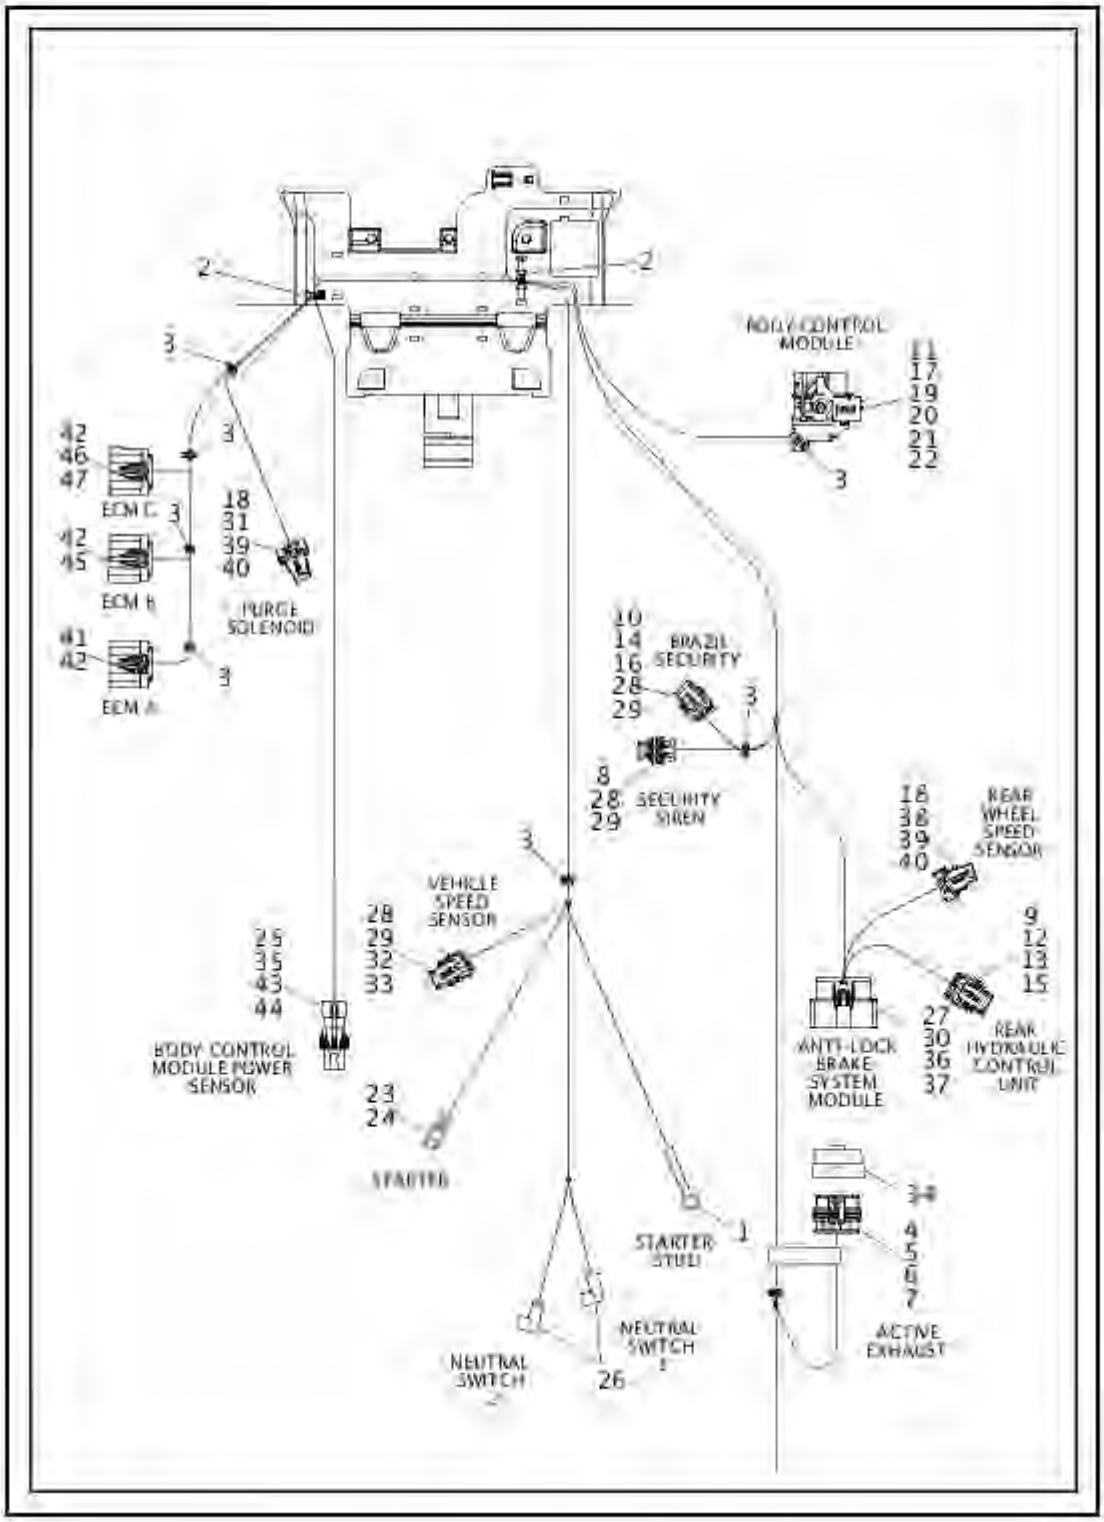

Index No.	Part No.	Description	Model(s)
	69201082	WIRING HARNESS, MAIN	FXSB
	69201083	WIRING HARNESS, MAIN (Brazil)	FXSB
NOTE: Includes the following parts.			
1	9842	TERMINAL RING, .31 10-12 AWG	FXSB
2	10006	CABLE STRAP *(2)*	FXSB
3	10065	CABLE STRAP *(7)*	FXSB
4	72010-05	WIRE SEAL, 22-26 AWG (green) *(4)*	FXSB
5	72012-07	HOUSING, five-way socket	FXSB
6	72014-07	SEAL PIN	FXSB
7	72024-08	TERMINAL, socket, 20-22 AWG *(4)*	FXSB
8	72064-06	HOUSING, three-way socket	FXSB
9	72066-06A	HOUSING, four-way socket (black)	FXSB
10	72066-06A	HOUSING, four-way socket (black) (Brazil)	FXSB
11	72081-11	HOUSING, 48-way socket	FXSB
12	72094-06	TERMINAL, socket, socket 18 AWG *(4)*	FXSB
13	72096-06	WIRE SEAL, 18 AWG (yellow) *(4)*	FXSB
14	72097-06	PLUG, oval (orange) *(2)*	FXSB
15	72135-06	SECONDARY LOCK, four-way socket (gray)	FXSB
16	72135-06	SECONDARY LOCK, four-way socket (gray) (Brazil)	FXSB
17	72209-11	COVER, wire	FXSB
18	72213-94	TERMINAL, socket, 16-20 AWG *(4)*	FXSB
19	72222-11	TERMINAL SOCKET, 18-20 AWG *(20)*	FXSB
20	72226-11	TERMINAL SOCKET, 14-16 AWG	FXSB
21	72227-11	TERMINAL, socket, 18-20 AWG *(5)*	FXSB
22	72256-11	SEAL PIN, .6mm, plug *(9)*	FXSB
23	72291-94	TERMINAL, 14-16 AWG	FXSB
24	72295-94	HOUSING, starter connection	FXSB
25	72350-11	HOUSING, one-way	FXSB
26	72405-98BK	PUSH ON 90 DEGREE CONNECTOR *(2)*	FXSB
27	72473-07	SEAL PIN *(5)*	FXSB

28	72484-08	TERMINAL, socket, 20 AWG *(6)*	FXSB
28	72484-08	TERMINAL, socket, 20 AWG (Brazil) *(8)*	FXSB
29	72486-08	WIRE SEAL, 20 AWG (green) *(6)*	FXSB
29	72486-08	WIRE SEAL, 20 AWG (green) (Brazil) *(8)*	FXSB
30	72500-07ABK	HOUSING, 20-way socket (black)	FXSB
31	72518-01	HOUSING, socket, two-way (red)	FXSB
32	72543-07BK	HOUSING, three-way socket (black)	FXSB
33	72544-07	SECONDARY LOCK, three-way socket	FXSB
34	72553-07	DUST CAP, five-way	FXSB
35	72575-11	SECONDARY LOCK	FXSB
36	72581-11	TERMINAL, socket, 18-20 AWG (gold) *(12)*	FXSB
37	72593-11	TERMINAL, socket, 14-16 AWG (gold) *(3)*	FXSB
38	72606-08	HOUSING, two-way socket	FXSB
39	72609-08	SECONDARY LOCK, two-way socket (black) *(2)*	FXSB
40	72610-08	SEAL, cable, 18-20 AWG (white) *(4)*	FXSB
41	72664-12A	HOUSING, 18-way, socket, key A (black)	FXSB
42	72666-12	TERMINAL, socket, 18-20 AWG (silver) *(36)*	FXSB
43	73304-04	TERMINAL, .31 socket, 10 AWG	FXSB
44	73305-04	SEAL WIRE, 10 AWG (blue)	FXSB
45	69200267A	HOUSING, 18-way, socket, key B (gray)	FXSB
46	69200268A	HOUSING, 18-way, socket, key C (brown)	FXSB
47	69201168	TERMINAL, socket, 22 AWG (silver)	FXSB

WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)

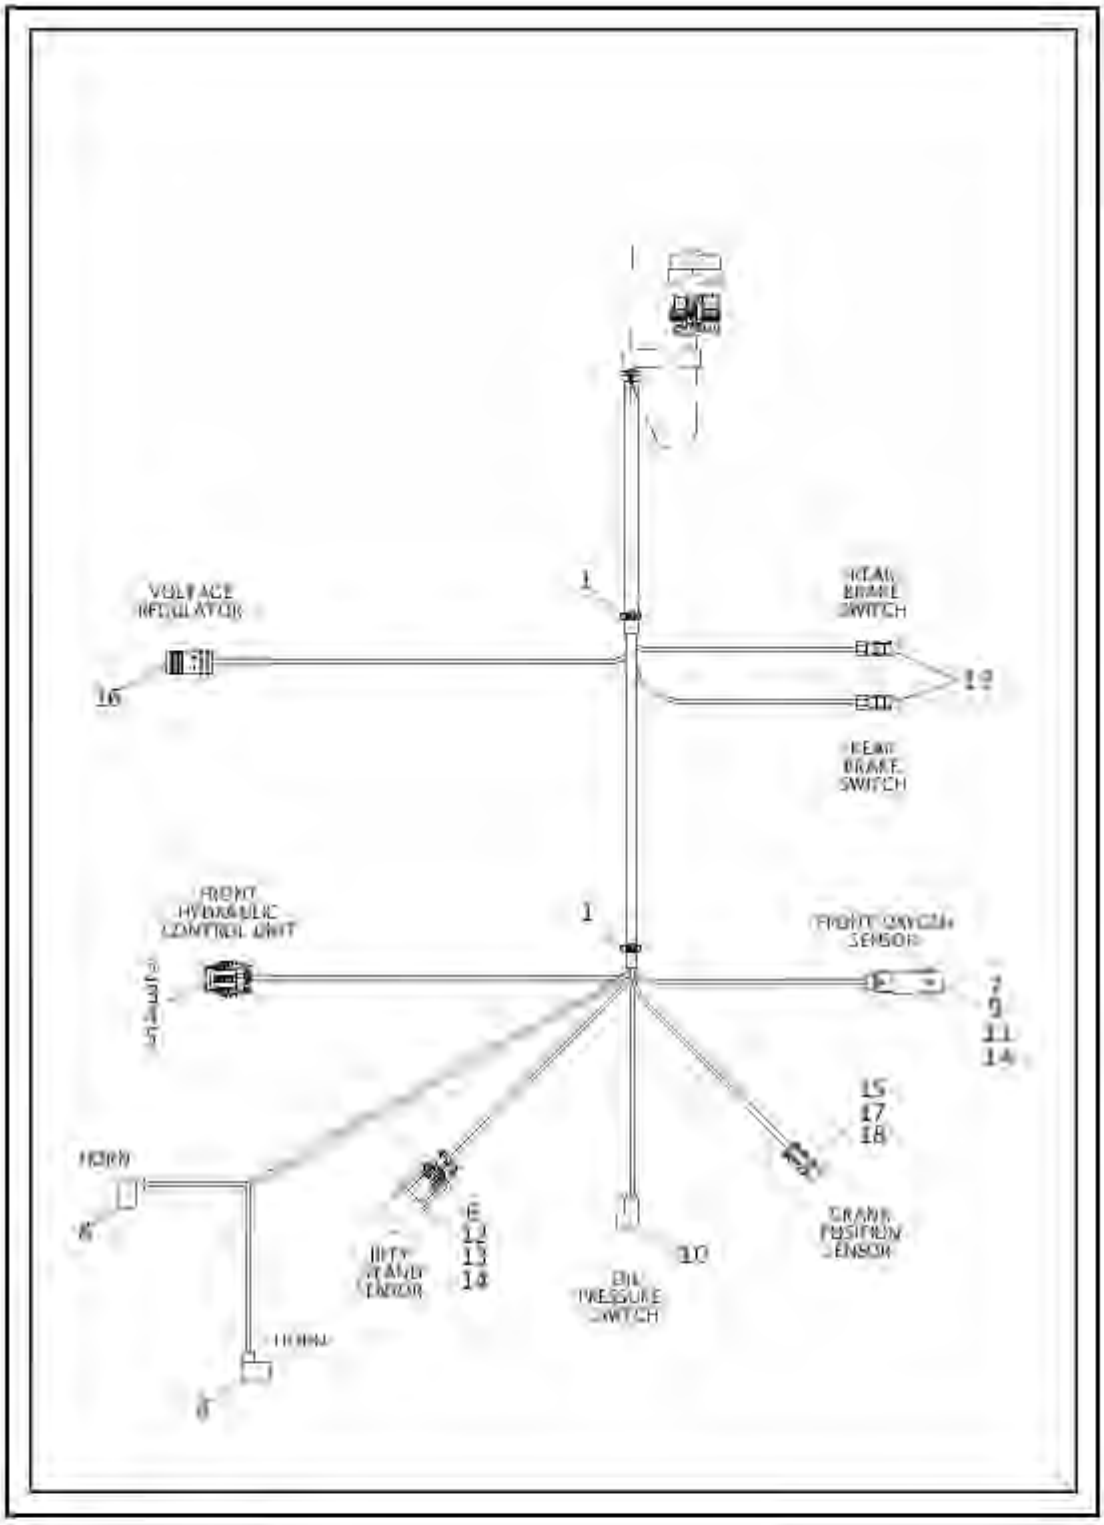

Index No.	Part No.	Description	Model(s)
	69201082	WIRING HARNESS, MAIN	FXSB
	69201083	WIRING HARNESS, MAIN (Brazil)	FXSB
NOTE: Includes the following parts.			
1	10065	CABLE STRAP *(2)*	FXSB
2	72066-06A	HOUSING, four-way socket (black)	FXSB
3	72094-06	TERMINAL, socket, socket 18 AWG *(4)*	FXSB
4	72096-06	WIRE SEAL, 18 AWG (yellow) *(4)*	FXSB

5	72135-06	SECONDARY LOCK, four-way socket (gray)	FXSB
6	72168-07	TERMINAL, socket, 18-20 AWG *(3)*	FXSB
7	72169-07	TERMINAL, pin, 16-20 AWG *(2)*	FXSB
8	72283-09	TERMINAL, socket, 14-16 AWG	FXSB
9	72343-10	TERMINAL, pin, 16-20 AWG (gold) *(2)*	FXSB
10	72405-98BK	PUSH ON 90 DEGREE CONNECTOR	FXSB
11	72415-07GY	HOUSING, four-way pin (gray)	FXSB
12	72512-07BK	HOUSING, three-way socket (black)	FXSB
13	72519-09BK	DUST CAP, three-way socket	FXSB
14	73213-07	RETAINER, anchored clip *(2)*	FXSB
15	74112-98BK	HOUSING, two-way socket (black)	FXSB
16	74120-08	DC LEAD ASSEMBLY	FXSB
17	74152-98	SECONDARY LOCK, two-way socket	FXSB
18	74191-98	TERMINAL, socket *(2)*	FXSB
19	69200238	TERMINAL, insulated *(2)*	FXSB

BATTERY

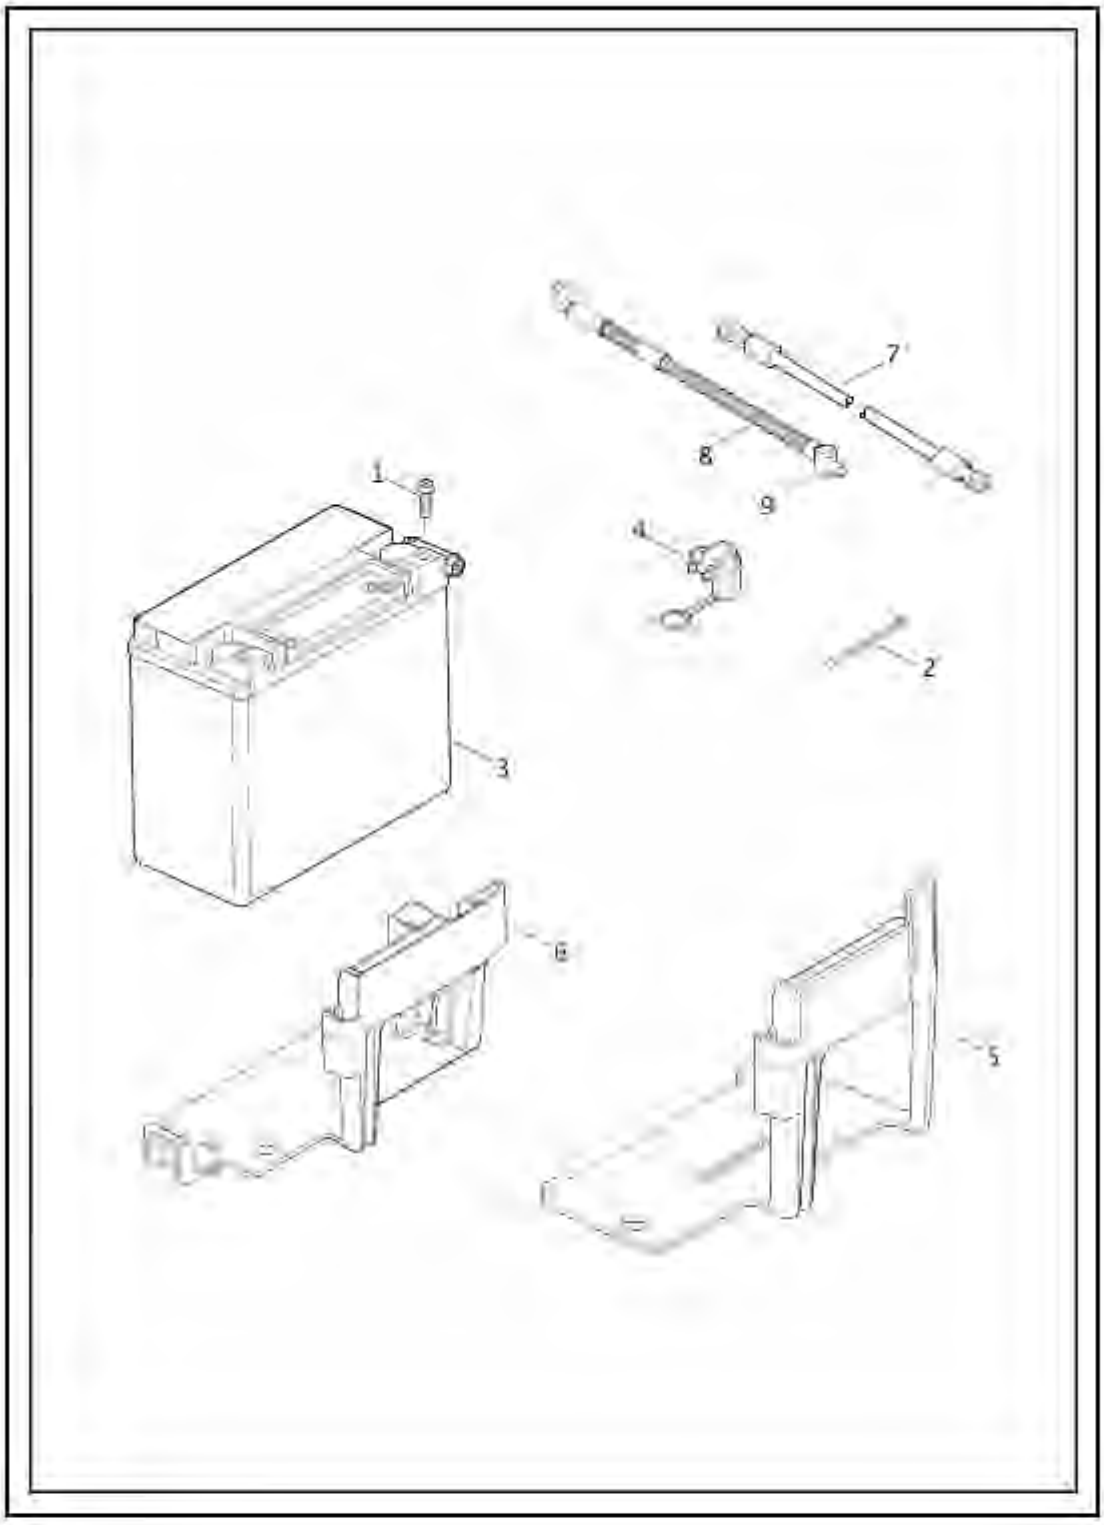

Index No.	Part No.	Description	Model(s)
1	4312C	SCREW *(2)*	
2	10065	CABLE STRAP *(2)*	
3	65989-97C	BATTERY, sealed	
	66000065	BATTERY, sealed (Brazil)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB
4	66415-08A	COVER, battery terminal	

5	70111-07	CADDY	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
6	70112-08	CADDY	FXSB
7	70060-08A	CABLE ASSEMBLY, battery negative	
8	70078-08A	CABLE ASSEMBLY, battery positive, with 70593-08	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
	70082-08A	CABLE ASSEMBLY, battery positive, with 70593-08	FXSB
9	70593-08	BOOT	

HORN

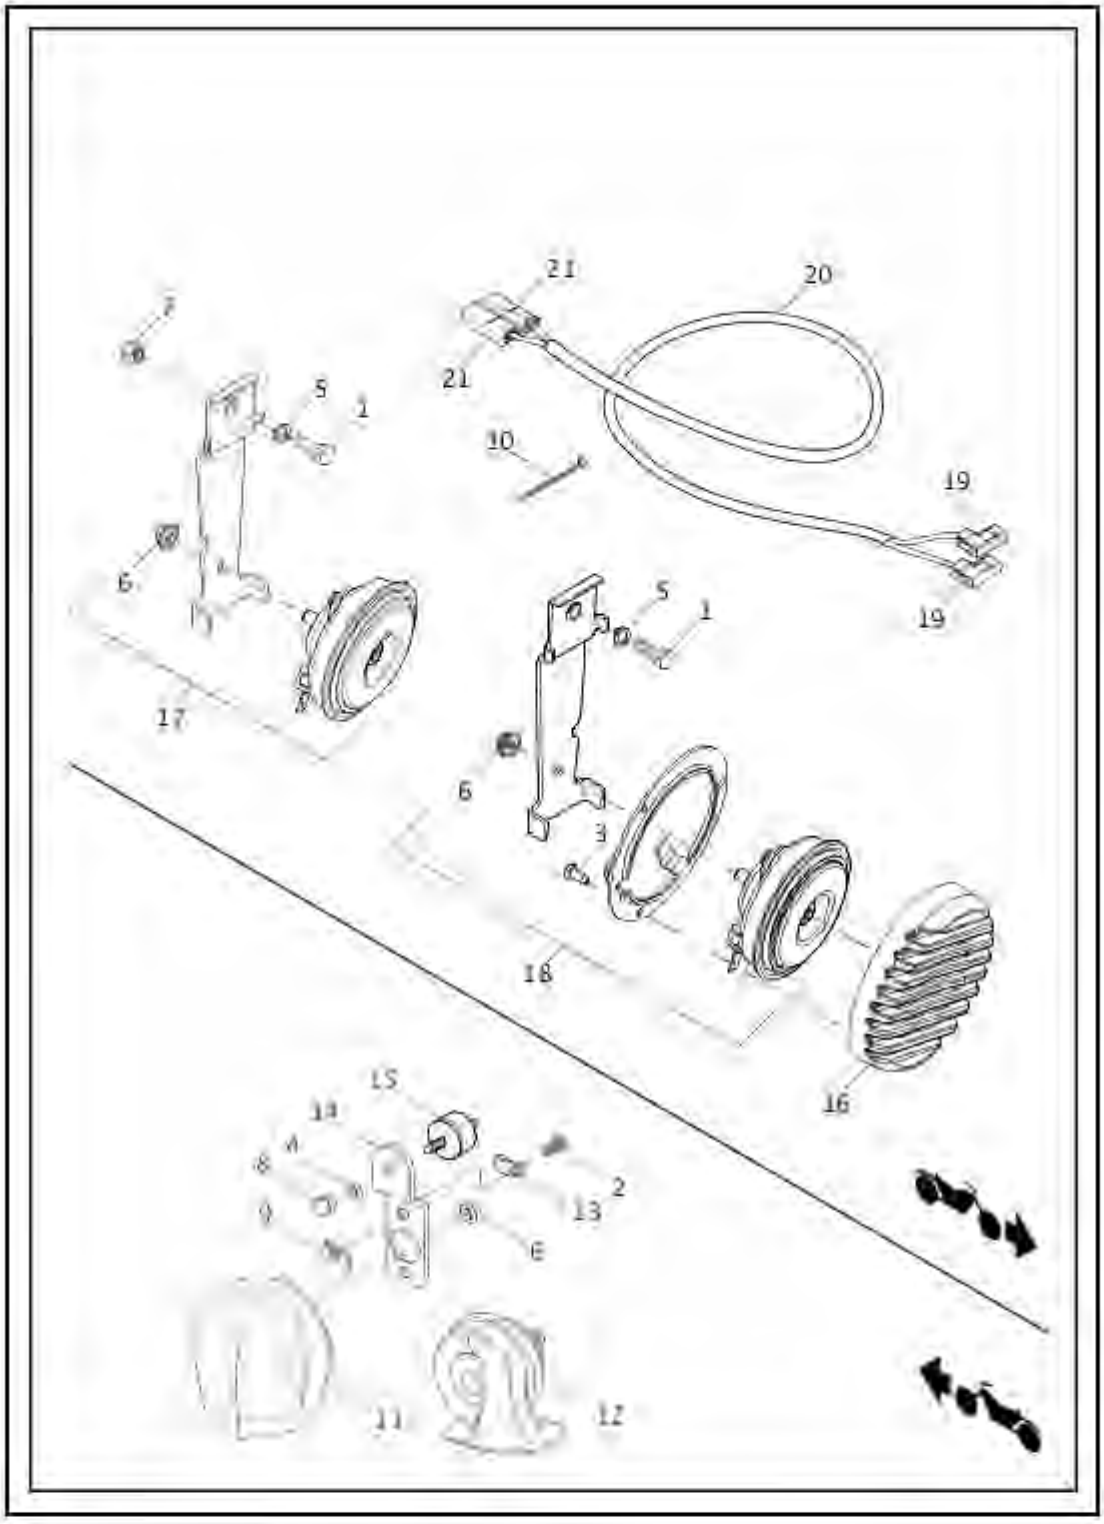

Index No.	Part No.	Description	Model(s)
1	2882W	SCREW	FLSTC, FLSTFB, FLSTF, FXSB
2	3563	SCREW *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
3	4694	SCREW *(2)*	FXSB
4	6109	WASHER	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
5	6702	WASHER	FLSTC, FLSTFB, FLSTF, FXSB

6	7495	NUT	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FXSB, FLSS, FLSTFBS
7	7531	LOCKNUT, (India) *(2)*	FLSTC
8	7549A	ACORN NUT	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
9	8108	SPEEDNUT *(2)*	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
10	10006	CABLE STRAP *(2)*	FXSB
11	61300477	COVER, horn (gloss black)	FLS, FLSS, FLSTFBS
	61300478	COVER, horn (chrome)	FLSTC, FLSTF, FLSTN
	61300481	COVER, horn (black denim)	FLSTFB
12	69060-90H	HORN ASSEMBLY	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
13	69062-91A	CLAMP	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
14	69120-91	BRACKET, horn	FLSTC, FLSTF, FLSTN, FLS, FLSS, FLSTFBS
	69130-10BYM	BRACKET, horn	FLSTFB
15	69123-92A	MOUNT, horn (rubber)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
16	69170-08	COVER, horn	FXSB
17	69000026	HORN ASSEMBLY, with 7495 (India)	FLSTC
	69000033	HORN ASSEMBLY, with 7495 (India)	FLSTFB, FLSTF, FXSB
18	69000006	HORN ASSEMBLY, with 7495	FXSB
19	72283-09	TERMINAL, 14-16 AWG, 90-degree (India) *(2)*	FLSTC, FLSTFB, FLSTF
20	69200282	JUMPER, horn (India)	FLSTC, FLSTFB, FLSTF
21	69200283	TERMINAL, 14-16 AWG (India) *(2)*	FLSTC, FLSTFB, FLSTF

SWITCHES

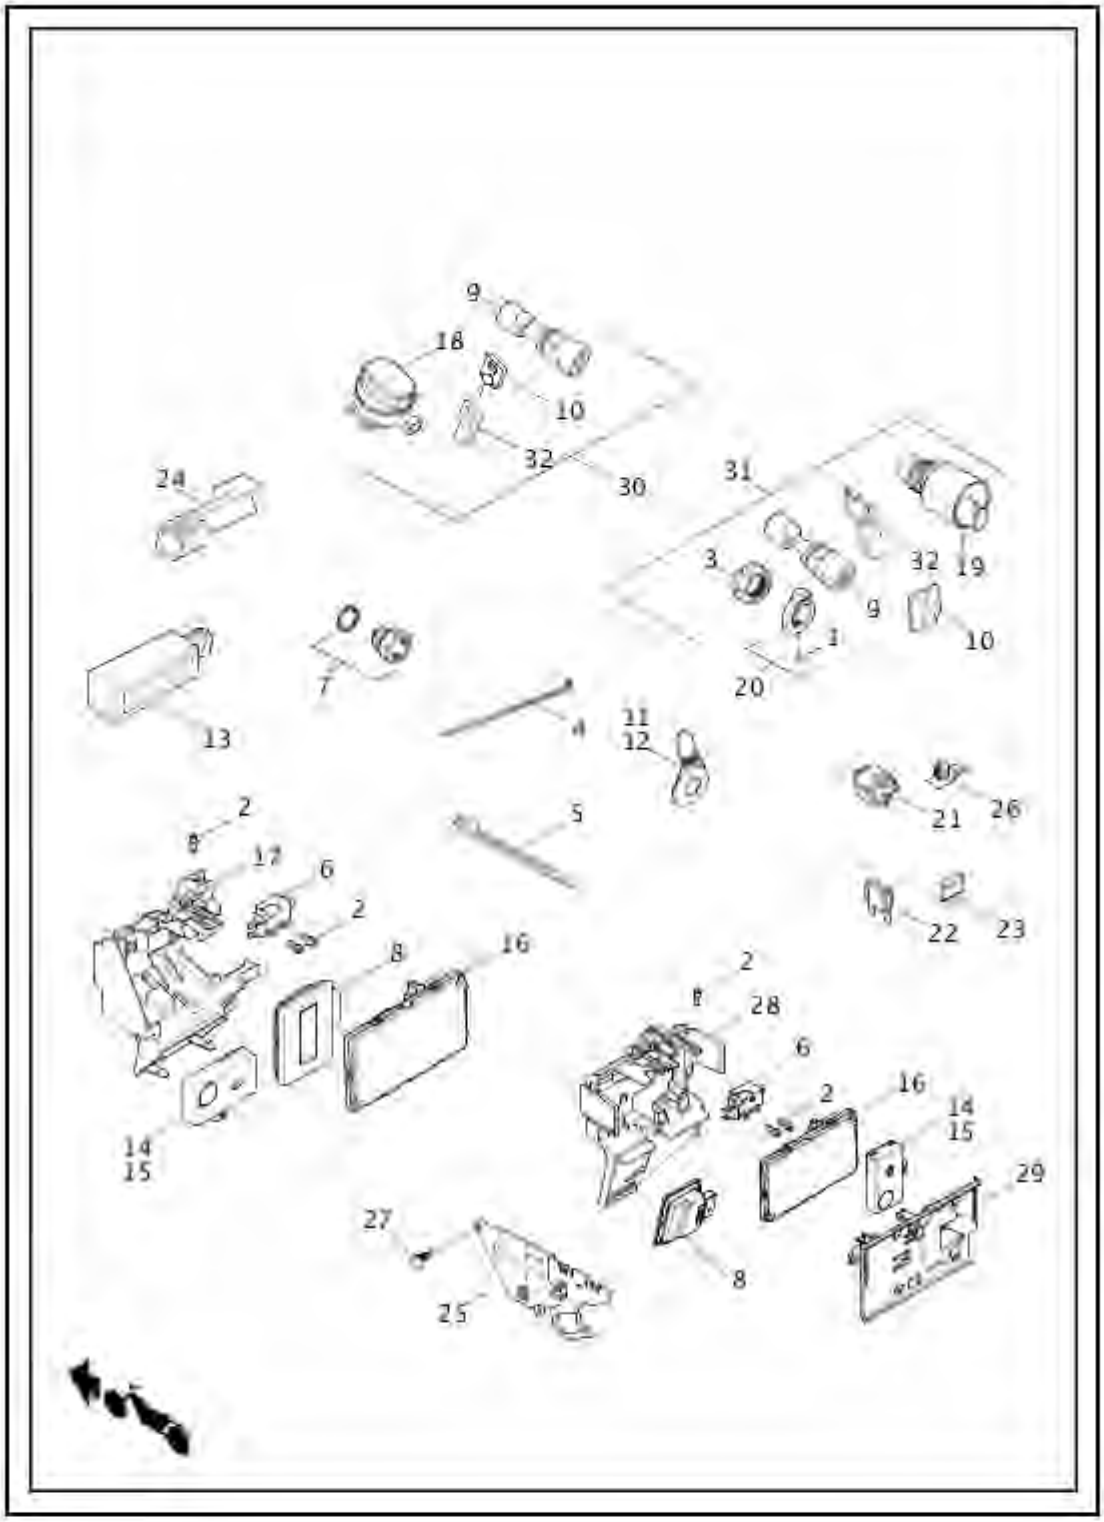

Index No.	Part No.	Description	Model(s)
1	1565	LOCK PIN	FXSB
2	4867	SCREW *(3)*	
3	7343	NUT	FXSB
4	10006	CABLE STRAP	
5	10177	CABLE STRAP, (Japan)	
6	27715-07	PURGE SOLENOID	

7	33926-06B	SWITCH, neutral indicator	
8	41100036	ABS MODULE (ECU)	
9	45680-90	FORK LOCK	
10	61081-92	COVER, key head set	
11	66373-06	BATTERY, remote control fob	
12	68926-07	REMOTE CONTROL FOB, with 66373-06	
	69995-11	REMOTE CONTROL FOB, with 66373-06 (Japan)	
13	68956-07	MODULE, antenna security (except Japan)	
14	68958-07C	SIREN ALARM, for siren vehicles (Asia-Pacific, Australia, Brazil, England, HDI, Japan)	
15	69309-10	BATTERY, siren (Asia-Pacific, Australia, Brazil, England, HDI, Japan)	
16	69991-11C	BODY CONTROL MODULE (BCM), base level	
	69993-11C	BODY CONTROL MODULE (BCM), 434 MHZ, security	
	69997-11C	BODY CONTROL MODULE (BCM), 315 MHZ, security (Japan)	
17	70354-11	BRACKET, electrical	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
18	71517-11	IGNITION SWITCH, (specify key number)	FLSTC, FLSTF, FLSTN, FLSTFB, FLS, FLSS, FLSTFBS
19	71794-11	SWITCH ASSEMBLY, ignition	FXSB
20	71796-11	IGNITION SWITCH KNOB KIT, with 1565	FXSB
21	72023-51E	STOP LAMP SWITCH, rear	
22	72314-01	MAIN FUSE, 40 A	
23	72330-95	FUSE, 15 A *(6)*	
24	72594-11	DUST CAP, two-way socket, non-security	
25	72596-11	BRACKET, electrical connectors (right) (not illustrated)	
	72597-11	BRACKET, electrical connectors (left)	
26	73213-07	RETAINER, anchored	FLSTC, FLSTF, FLSTN, FLS, FLSTFB, FLSS, FLSTFBS
27	12600015	FASTENER, push-in	
28	69200451	CADDY, electrical	FXSB
29	69200452	COVER, electrical caddy	FXSB
30	71400076	IGNITION SWITCH AND FORK LOCKSET, with 90300043	FLSTC, FLSTF, FLSTN, FLSTFB,

		keys, ignition switch and fork lock	FLS, FLSS, FLSTFBS
31	71400077	IGNITION SWITCH AND FORK LOCKSET, with 90300043 keys, ignition switch and fork lock	FXSB
32	90300043	KEY, with 61081-92 (set of two) (specify key number)	

SADDLEBAGS - FLSTC

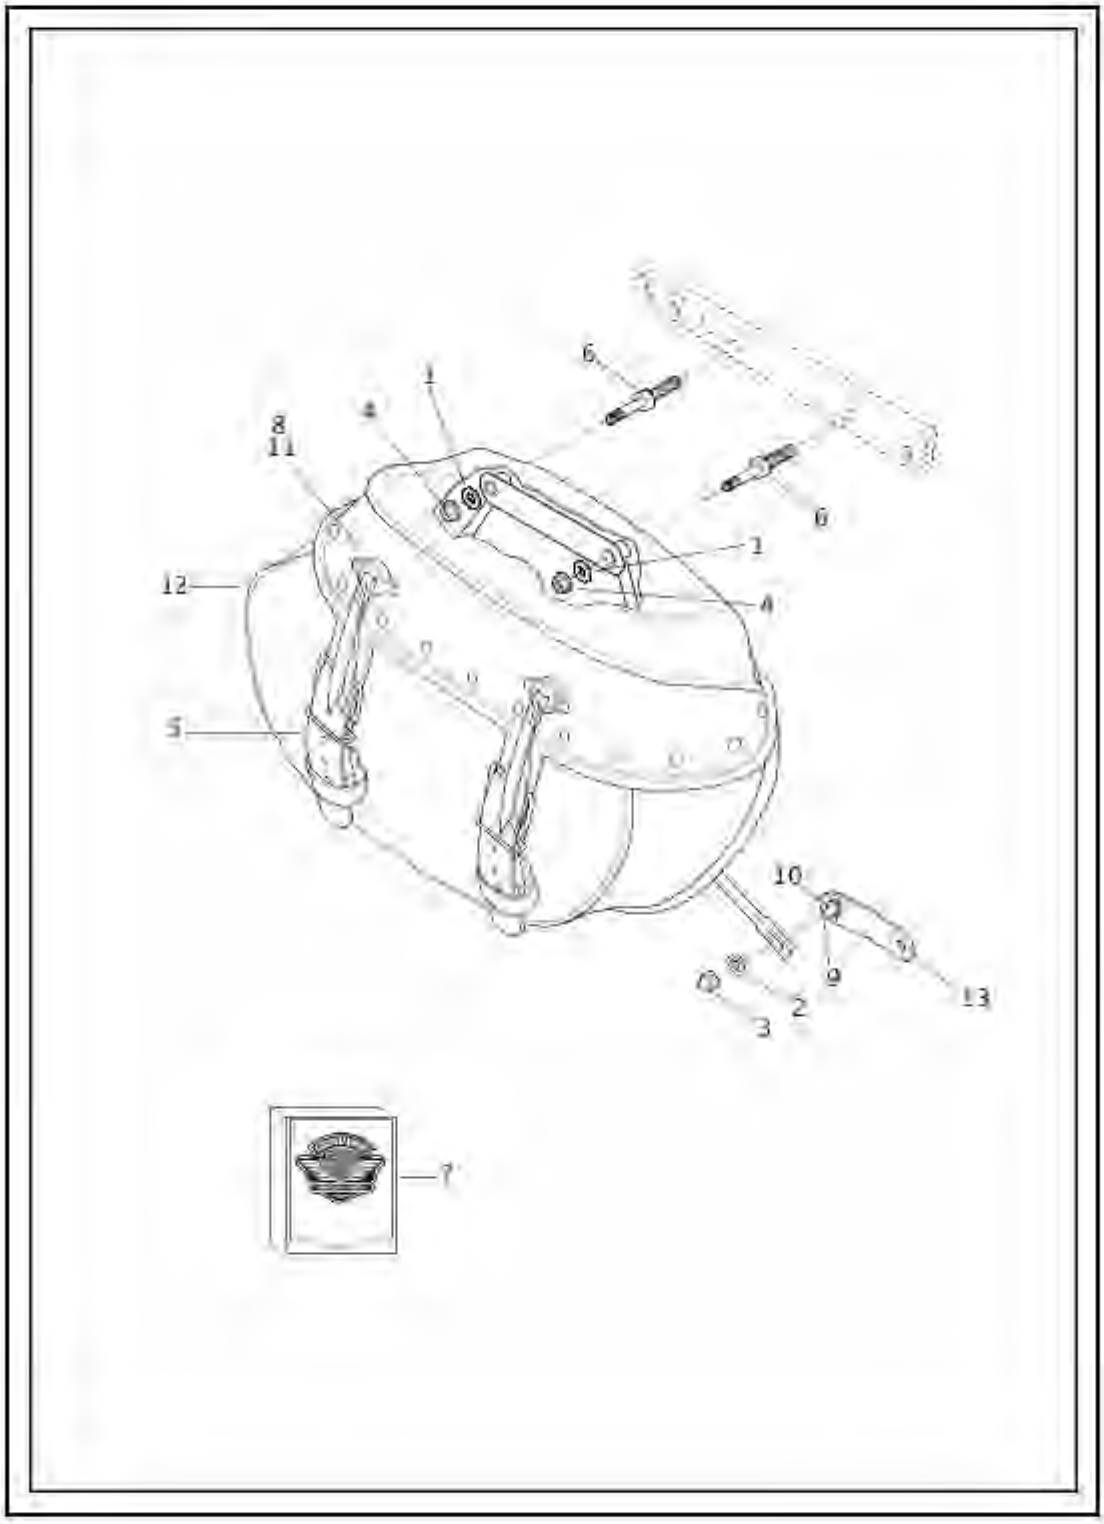

Index No.	Part No.	Description	Model(s)
1	6229W	WASHER *(4)*	FLSTC

2	6702	WASHER *(2)*	FLSTC
3	7549A	ACORN NUT *(2)*	FLSTC
4	7531	LOCKNUT *(4)*	FLSTC
5	90247-00	BUCKLE ASSEMBLY *(4)*	FLSTC
6	90367-03	STUD *(4)*	FLSTC
7	90438-10	SADDLEBAG STRAP REPAIR KIT *(4)*	FLSTC
8	91679-00	BACKPLATE *(4)*	FLSTC
9	10200410	BOLT *(2)*	FLSTC
10	10300100	WASHER, retaining *(2)*	FLSTC
11	61400327	CONCHO *(4)*	FLSTC
12	90201299	SADDLEBAG, (left) (not shown)	FLSTC
	90201300	SADDLEBAG, (right)	FLSTC
13	90201305	SUPPORT BAR, saddlebag	FLSTC

GUARDS, SAREE

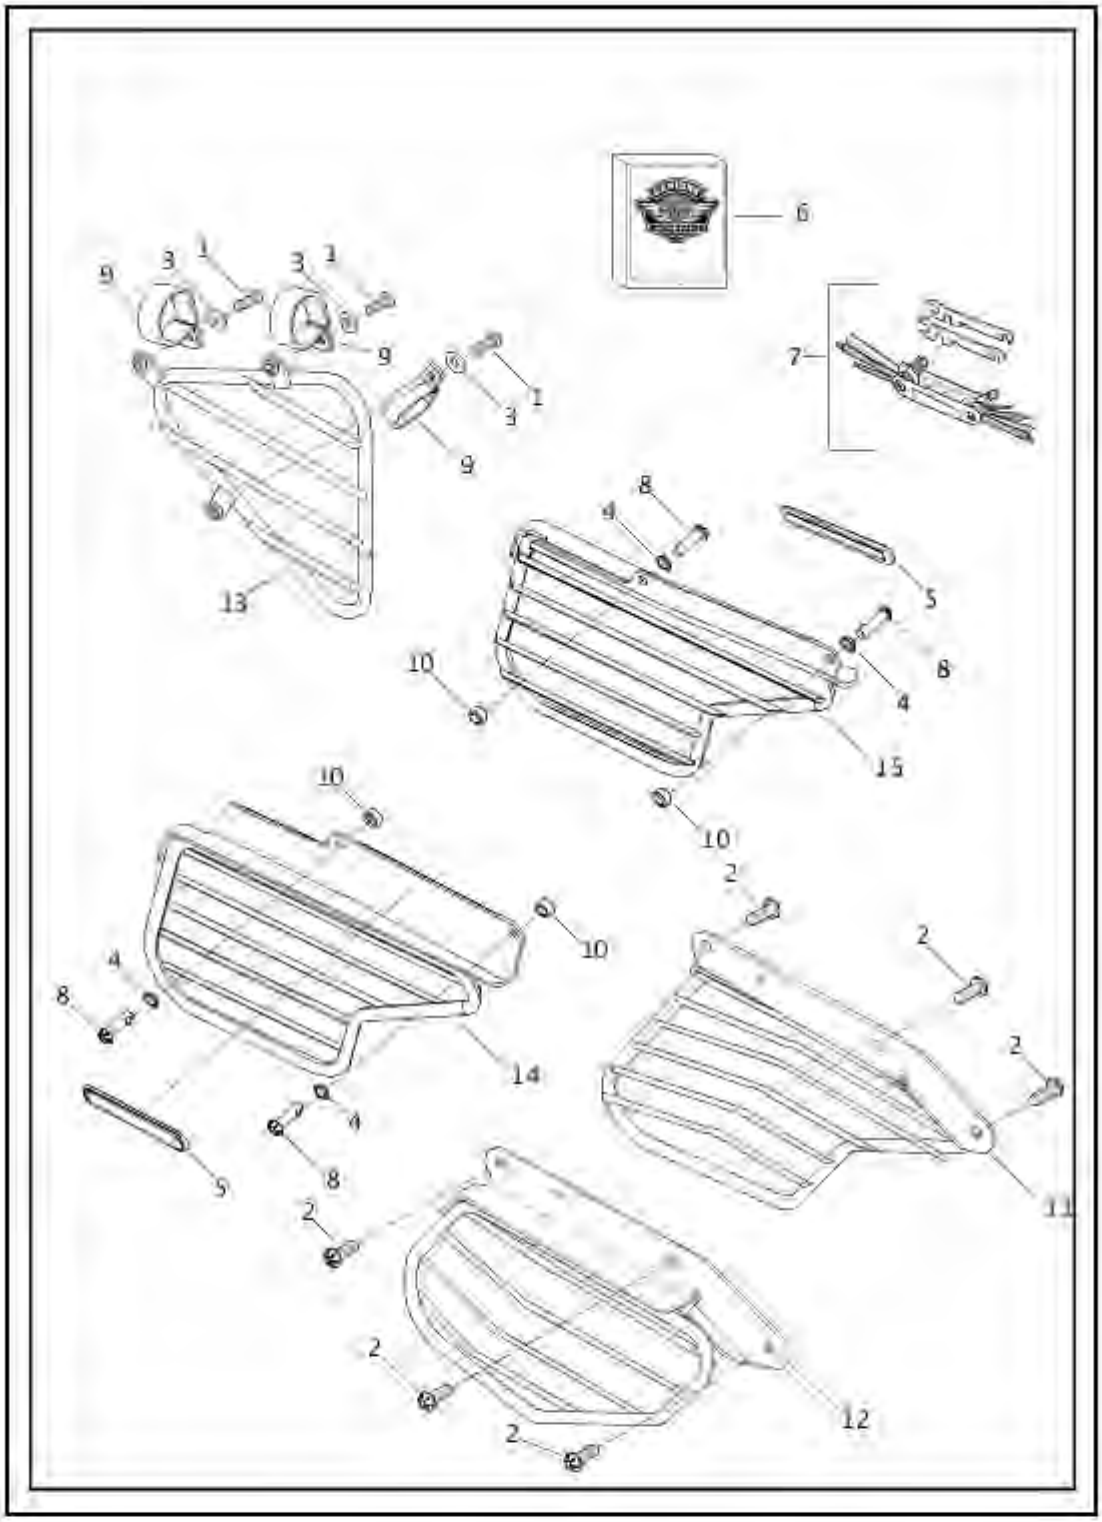

Index No.	Part No.	Description	Model(s)
NOTE: These parts are required for motorcycles sold in the India market.			
1	927A	SCREW *(3)*	FLSTFB, FXSB, FLSTF
2	4512A	SCREW *(6)*	FLSTFB, FLSTF
3	6703	WASHER *(3)*	FLSTFB, FXSB, FLSTF
4	6812	WASHER *(4)*	FXSB
5	60254-07	REFLECTOR *(2)*	FXSB
6	93511-10	FIRST AID KIT	FLSTFB, FXSB, FLSTC, FLSTF

7	94435-10	FOLDING TOOL	FLSTFB, FXSB, FLSTC, FLSTF
8	10200386	SCREW *(4)*	FXSB
9	10800054	P-CLAMP *(3)*	FLSTFB, FLSTF
	10800093	P-CLAMP, (not shown) *(3)*	FXSB
10	12400108	SPACER *(4)*	FXSB
11	60300018	SAREE GUARD, rear (left)	FLSTFB, FLSTF
12	60300019	SAREE GUARD, (right)	FLSTFB, FLSTF
13	60300032A	SAREE GUARD, front (left)	FLSTFB, FXSB, FLSTF
14	60300109	SAREE GUARD, with 60254-07 (right)	FXSB
15	60300110	SAREE GUARD, with 60254-07 (left)	FXSB

LABELS

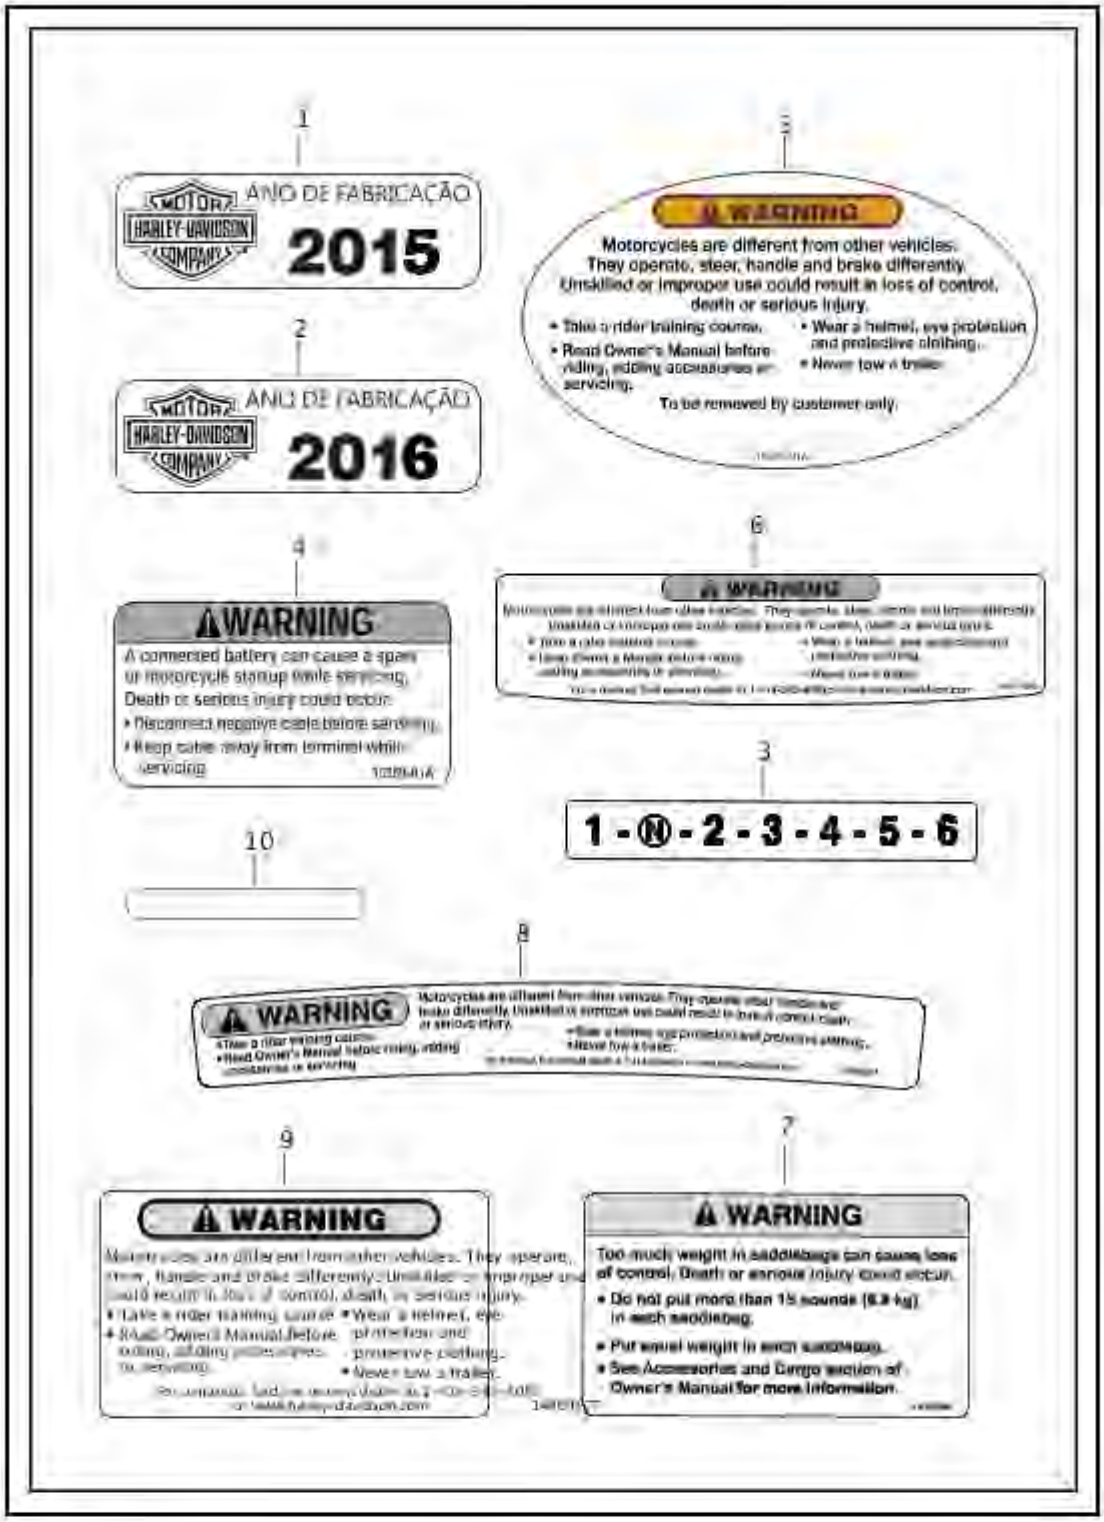

Index No.	Part No.	Description	Model(s)
1	13729-15	YEAR OF MANUFACTURE LABEL, (Brazil)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB
2	13729-16	YEAR OF MANUFACTURE LABEL, (Brazil)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB
3	14272-06	LABEL, shift pattern (Japan)	
4	15368-01A	LABEL, battery warning	
5	15370-	LABEL, mirror/general warning	

	01A		
	15385-08	LABEL, mirror warning, Portugese (Brazil)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB
6	29127-95B	LABEL, air cleaner warning	FLSTC, FLSTF, FLSTN, FXSB
	29404-01A	LABEL, air cleaner warning	FLSTFB, FLS
7	14000069	LABEL, warning, saddlebag	FLSTC
8	14000347	LABEL, air cleaner warning (Domestic, California)	FLSS
9	14000377	LABEL, air cleaner warning (Domestic, California)	FLSTFBS
10	14000827	CLEAR OVERLAY, VIN label (Japan)	

NOTE: When ordering any VIN, Emissions, or Noise Labels you must contact your local dealer with the VIN number and model year of your motorcycle and the label type needed. Replacement VIN and Emissions labels can only be ordered for warranty purposes through h-dnet Service eForm.

LOOSE PARTS

Index No.	Part No.	Description	Model(s)
1	68926-07	REMOTE CONTROL FOB, with 66373-06 (except Japan) *(2)*	
	69995-11	REMOTE CONTROL FOB, with 66373-06 (Japan) *(2)*	
	72314-01	MAIN FUSE, 40 A	
	99469-16	OWNER'S MANUAL, (English)	
	94000326	OWNER'S KIT CONTENT, (Domestic)	
	90300043	KEY, with 61081-92 (set of two) (specify key number)	

	94000084	ABS DVD, (ABS Models)	
	57061-09	WINDSHIELD ASSEMBLY, complete (Australia,Canada, Domestic, India	FLSTC
	57091-06A	WINDSHIELD ASSEMBLY, complete (England, HDI, Japan)	FLSTC
	93511-10	FIRST AID KIT, (India)	FLSTC
	94435-10	FOLDING TOOL, (India)	FLSTC
	93511-10	FIRST AID KIT, (India)	FLSTFB, FXSB, FLSTF
	94435-10	FOLDING TOOL, (India)	FLSTFB, FXSB, FLSTF
	29762-09	RAINSOCK	FLSTFBS

ALL SOFTAILFLSTCFXSB, FLSTF, FLSTFBFLSTFBS

Hardware List

Part No.	Description
1001	SCREW 1/4-20 X 5/8 TORX button hd., self-tapping (Grade 8)
1039	SCREW 5/16-18 X 2-1/2 hex flange hd. (Grade 8)
10500053	SCREW 1/4-20 X 3/8 TORX button hd., w/ lockpatch (zinc)
1062	SCREW 1/4-20 X 5/8 TORX hd. (Grade 8)
1090A	SCREW 5/16-18 X 3-3/4 hex flange hd.w/ seal ring
1775	SCREW 1/4-20 X 4 hex socket hd. (Grade 8)
1778	SCREW 1/4-20 X 4-1/2 hex socket hd. w/lock patch
2441	SCREW No. 10-24 X 1/2 TORX pan hd.
2452	SCREW No. 12-24 X 13/16 pan hd., w/lockpatch
2501A	SCREW No. 8-32 X 3/8 hex hd., self-tapping
2538	SCREW 1/4-20 X 1 Pozidriv pan hd. (Grade 2)
2566	SCREW No. 8-32 X 7/8 self-tapping
2579A	SCREW No. 8-32 X 5/16 Pozidriv oval hd.
2590	SCREW No. 8-32 X 5/8 Phillips hd.
2604	SCREW No. 10-32 X 1/2 Pozidriv pan hd. (Grade 2)
2647B	SCREW No. 10-24 X 3/4 socket hd., self-locking
2692WB	SCREW No. 10-24 X 1/2 socket fillister hd. (Grade 8)
2773	SCREW 1/4-20 X 1/2 Pozidriv pan hd. (Grade 2)
2882W	SCREW 5/16-18 X 5/8 hex hd. (Grade 5)

2921	SCREW No. 12 X 5/8 TORX pan hd.
29269-83A	SCREW 15/16-18 X 5/8 hex button hd., w/lockpatch
29327-94	SCREW 5/16-18 X 1-1/4 lock patch
2941	SCREW 1/4-20 X 35/64 socket hd., self-tapping (Grade 5)
2980	SCREW M6 X 1 X 16mm hex flange hd.
3017	SCREW No. 10-24 X 0.44 TORX pan hd., self-tapping
3022A	SCREW 1/4-20 X 5/8 socket fillister hd., w/lockpatch
3048	SCREW No. 10-24 X 3/8 hex button hd.
3050	SCREW No. 10-24 X 1-3/8 TORX hd.
3056	SCREW 3/8-16 X 1-1/2 TORX button hd.
3061	SCREW 1/4-20 X 5/8 SEMS hex hd.
3075	SCREW 1/4-20 X 11/32 pan hd.
3109	SCREW 7/16-14 X 2-5/8 hex cap w/washer, lock patch
3110	BOLT 3/8-16 X 1-3/4 hex hd.
3210A	SCREW 5/16-18 X 1-1/4 knurled hd.
3233	SCREW 1/4-28 X 1/4 socket hd.
3249	SCREW 5/16-18 X 1-3/16 socket hd. (Grade 8)
3275	SCREW 5/16-18 X 3/4 socket hd. (Grade 8)
3300	SCREW 5/16-18 X 1-1/2 socket hd., w/lockpatch (Grade 8)
3383	SCREW No. 8-32 X 1-1/4 fillister hd. (Grade 2)
3387	SCREW No. 10-16 X 1.0 TORX pan hd., self-tapping
3391	SCREW 1/4-20 X 7/16 hex flange hd.
3471	BOLT 1/2-13 X 2-3/4 hex hd. (Grade 5)
3485A	SCREW 5/16-18 X 1-3/4 knurled hd. (Grade 8)
3494A	BOLT 5/16-18 X 7/8 hex hd.
3514	SCREW No. 8-32 X 1 fillister hd. (Grade 5)
35241-06	NUT 1-3/4-20 X .350 X 2-1/4 hex hd.
35244-06	SCREW 5/16-18 X 1-1/4 hex flange hd.
35259-06	SCREW No. 10-24 X 1/2 hex hd. (Grade 8)
3537	SCREW 1/4-28 X 1/2 flange hd., w/lockpatch
3538	SCREW 5/16-24 X 1/2 socket button hd.
3560WA	BOLT No. 10-24 X 3/8
3561WC	BOLT No. 10-24 X 3/8

3563	SCREW 1/4-20 X 3/8 hex flange hd. (Grade 5)
3574	SCREW 1/4-20 X 3/4 flange
3594	SCREW 1/4-20 X 5/8 knurled hd. (Grade 8)
3612	SCREW No. 10-16 X 1/2 TORX pan hd., self-tapping
3615	SCREW No. 8-32 X 1, pan hd., thread-cutting
3655A	SCREW 5/16-18 X 7/8 TORX pan hd., w/lockpatch (Grade 8)
3656	SCREW No. 8-32 X 3/8 TORX pan hd. (Grade 5)
3658	SCREW No. 10-24 X 1/2 TORX hd. (Grade 5)
36706-01K	BOLT M6 X 1.0 X 30 hex flange hd.
3692A	SCREW 5/16-18 X 1.0 hex hd., w/lockpatch
3693A	SCREW 5/16-18 X 1-3/4 hex hd., w/lockpatch
3699D	SCREW 3/8-16 X 2.0 hex flange hd. (Grade 8)
3736B	SCREW 5/16-18 X 1-1/4 hex flange hd., w/lockpatch
3767B	BOLT 1/4-20 X 5/8 hex hd. (Grade 5)
3799	SCREW 1/4-20 X 3/4 flange hd.
3953W	BOLT 5/16-24 X 1/2 hex hd. (Grade 5)
3983	SCREW 3/8-16 X 1-5/8 hex flange hd., w/washer (Grade 8)
3987	BOLT 5/16-18 X 3/4 hex hd. (Grade 5)
4017	BOLT 5/16-18 X 1 hex hd. (Grade 5)
4042	SCREW M8 X 1.25 X 35 hex button hd.
4074A	BOLT 1/2-13 X 2 hex hd., shoulder
4091	SCREW No. 10-24 X 1/2 hex hd., w/washer, self-tapping (zinc)
4132	SCREW 1/4-20 X 1-1/8 TORX button hd. (Grade 5) (black)
4166	SCREW No. 8-32 X 1/2 socket button hd. (Grade 8) (chrome)
4168A	SCREW 3/8-16 X 1 self-tapping
4190	SCREW 3/8-16 X 3/4 TORX button hd.
4197	BOLT 3/8-16 X 3-3/4 hex hd. (Grade 5)
4216	SCREW 5/16-18 X 7/8 hex flange hd. (Grade 5)
4217	SCREW 5/16-18 X 1.0 hex flange hd. (Grade 5)
4266A	SCREW 3/8-16 X 7/8 button hd. (Grade 5)
4267	SCREW 3/8-16 X 1-1/4 button hd. (Grade 5)
4311	SCREW 3/8-16 X 1-5/8 socket hd.

4312C	SCREW M6 X 1.0 X 14mm, SEMS flange hd. (stainless)
4343	SCREW 5/16-24 X 1-3/4 socket button hd., w/adhesive
4350A	SCREW 3/8-16 X 1-1/2 socket hd.
43567-92	SCREW 3/8-16 X 1 TORX pan hd., w/lockpatch
4380W	BOLT 3/8-24 X 2 hex hd. (Grade 5)
4390	SCREW 1/2-13 X 2 hex hd., shoulder
4400	BOLT 1/4-20 X 1-11/16 hex hd. w/Scotch grip (Grade 8)
4407	SCREW 5/16-18 X 5/8 hex hd., w/washer
4411	BOLT 3/8-24 X 1-3/4 hex hd. (Grade 5)
4419	SCREW 5/16-18 X 1-3/4 SEMS hex hd.
4453	BOLT 1/4-20 X 7/8 hex hd. SPECIAL WITH TAPPED HOLE
4454	SCREW 3/4-16 X 2-1/4 TORX hd. (Grade 8)
4481	SCREW 5/16-24 X 1 socket button hd., w/lockpatch (Grade 8)
4482	SCREW 5/16-24 X 1-3/8 socket button hd., w/lockptach (Grade 8)
4484M	SCREW M5 X 0.8 X 16 SEMS hex hd.
4512A	SCREW 3/8-16 X 1 TORX recessed button hd. (Grade 8)
45405-75A	SCREW M8 X 1.25 x 27 hex socket hd.
4549	SCREW 5/16-18 X 1-3/4 TORX button hd. (Grade 5)
45718-60	NUT 1-24 X 1.5 X 0.47
45727-08	WASHER 1-1/32 X 2.0 X 1/16
46509-01	WASHER 30 X 43 X 2.3
46614-06	BOLT M14 X 1.25 X 30 socket hd.
4688	SCREW 3/8-16 X 1-1/4 SEMS hex socket hd., w/ lock patch
4694	SCREW No. 8-32 X 3/8 TORX pan hd., w/lockpatch
4705	SCREW 1/4-20 X 11/16 SEMS socket hd., w/lockpatch
4717A	SCREW 1/4-20 X 2-1/4 knurled hd., w/lockpatch
4718A	SCREW 1/4-20 X 1-1/2 knurled hd., w/lockpatch
4722	BOLT 3/8-16 X 2-1/4 hex hd. (Grade 5)
4724	BOLT 3/8-24 X 1-1/2 hex hd. (Grade 5)
4729	BOLT 7/16-20 X 1-1/4 hex hd. (Grade 5)
4740A	SCREW 1/4-20 X 1-1/4 knurled hd., w/lockpatch (Grade 8)
4741A	SCREW 1/4-20 X 1 socket hd., w/lockpatch
4751	SCREW 1/4-20 X 3/4 hex hd., w/lockpatch (Grade 8) (zinc)

4763	SCREW 5/16-18 X 1-1/4 TORX button hd. (Grade 5)
4775	SCREW 3/8-16 X 1-1/4 hex hd. (Grade 5)
4813A	SCREW 1/4-20 X 1-3/8 knurled hd., w/lockpatch
4814A	SCREW 1/4-20 X 1-1/8 knurled hd., w/lockpatch
4836	SCREW 3/8-16 X 4 TORX socket hd. (Grade 8)
4867	SCREW hex hd., socket
4945	SCREW 7/16-20 UNRF X 1-1/4 hex hd. (zinc plate)
5403B	BOLT 1/4-20 X 3/8 carriage
5416	BOLT 3/8-16 X 1/8 carriage (Grade 5)
5419	BOLT 5/16-18 X 1-3/4 carriage
54321-85	NUT No. 8-32 X 1/2 X 1/8 (brass)
5471	BOLT 5/16-18 X 5/8 round hd. carriage
5710	WASHER 63/64 X 1-1/2 X 5/64
5775	WASHER 11/32 X 1/2 X 31/64
6019	WASHER 3/8 X 29/32 X 1/16
6036	WASHER 17/64 X 1 X 1/16
6057	WASHER 1/2 X 7/8 X 3/16, nylon
6072	WASHER 3/8 X 1 1/4 X 5/64
6099	WASHER 1/4 X 7/16 X 1/16
6101	WASHER 17/64 X 27/64 X 1/16
6109	WASHER 5/16 X 11/16 X 1/8
6110	WASHER 9/32 X 5/8 X 1/16
6229W	WASHER 5/16 X 1-1/16 X 3/64
6237	WASHER 5/16 X 1-1/8 X 5/64
6294	WASHER 3/8 X 1-1/8 X 7/32
6336B	WASHER 5/16 X 15/16 X 3/16
6400HB	WASHER 5/16 X 13/16 X 3/32
6456	WASHER 13/32 X 1-3/16 X 9/64
6497HW	WASHER 29/64 X 1-1/8 X 1/16
6516HW	WASHER 7/16 X 1-1/8 X 1/8
6530	WASHER 1/2 X 1 X 3/16
6532	WASHER 3/8 X 3/4 X 1/8

6534	WASHER 3/8 X 1-3/4 X 3/32 hardened
6535	WASHER 5/16 X 1-1/4 X 3/32 hardened
6545	WASHER ferrous, heat-treated
6551	WASHER 1 X 1-5/8 X 1/8 hardened
6594	WASHER 5/8 X 1-1/8 X 3/32
6655	WASHER 5/8 X 1-1/2 X 7/64
6701	WASHER 3/8 X 13/16 X 1/16
6702	WASHER 5/16 X 11/16 X 1/16
6703	WASHER 1/4 X 5/8 X 1/16
6716	WASHER No. 10 X 1/2 X 3/64
6724	WASHER 21/32 X 1-1/16 X 1/16
6762B	WASHER 11/16 X 29/32 X 1/32
6771A	WASHER 5/16 X 1/2 X 1/16
67721-48	SCREW headlamp retainer ring
67956-96	SCREW 1/4-20 X 3/4 socket flat hd.
68026-99	SCREW No. 8-32 X 1 Phillips pan hd. (stainless)
68042-99	SCREW No. 8-32 X 3/8 TORX hd.
6812	WASHER 13/32 X 11/16 X 1/16
68120-00	SCREW No. 8-32 x 1-2 TORX hd., self-tapping
7038	LOCKWASHER 3/8
7039	LOCKWASHER 7/16
703B	SCREW 1/4-20 X 7/16 TORX socket button hd.
7041	LOCKWASHER 5/16
7062	LOCKWASHER M8.4 X 13 X 1.2
7068	LOCKWASHER 1/2
7073	LOCKWASHER 1/4 external tooth
7130W	LOCKWASHER 3/8 internal tooth
7137	NUT keps 5/16-18 (Grade 5)
7155	LOCKWASHER 5/16 internal tooth (black)
7230	LOCKWASHER 1/4 external tooth
7330	ACORN NUT 5/16-24 (chrome)
7331	ACORN NUT 5/16-24
7352	ACORN NUT 5/16-24 (black)

7434	WASHER 1/4 X 1-29/64 X 1/16 nylon
7479	NUT 5/8-11 flange (Grade 6)
7495	NUT M6 flange
7531	LOCKNUT 5/16-18 X 9/32 X 1/2 flange
7549A	ACORN NUT 5/16-18 X 9/16 X 1/2
7576	NUT 5/16-18 UNC keps flange
7593	NUT 5/16-24 flange
7601	LOCKNUT 3/8-16 flange
7606	LOCKNUT No. 8-32 X 1/4 X 1/4 hex (chrome)
7624	LOCKNUT No. 10-24 X 1/4 X 3/8
7629	NUT No. 10-32 X 3/8 keps
7651A	ACORN NUT No. 12-24 (Grade 2) (chrome)
7669	NUT 5/16-18
7686	LOCKNUT 1/4-20 X 5/16 X 7/16
7716	LOCKNUT 1/4-20 X 7/16 flange
7744	JAMNUT 5/16-24 X 3/16 X 1/2 (Grade 2)
7792	NUT 1/4-20 X 1/4 (Grade 2)
7800W	NUT 3/8-24 X 5/16 X 9/16 (Grade 2)
7813A	NUT 5/8-18 X 9/16 X 15/16 (Grade 2)
7848W	JAMNUT 7/16-20 X 1/4 X 11/16 (Grade 2)
7862	ACORN NUT 3/8-16 (chrome)
786A	BOLT 5/16-18 X 2-1/4 hex hd. (Grade 5)
7879	NUT 1/2-13 X 1/2 X 3/4 flange (Grade 6)
791A	SCREW 3/8-18 X 2-1/4 hex flange hd. (Grade 5)
8020	NUT M24 X 2.0 X 15
8108	SPEEDNUT 1/4-20
8144	LOCKNUT 5/16-18
8329	SCREW button, TORX
8405	JAMNUT .750-16UNF-2B
856A	SCREW 5/16-24 X 1 socket hd. (Grade 8)
869	SCREW 1/4-20 X 1-1/4 socket button hd. (Grade 8)
895	SCREW 5/16-18 X 3.0 hex flange hd. (Grade 5)

8972	WASHER 1-1/4 X 1-53/64 X 1/8
90770-79	SCREW No. 8-32 X 3/8 Pozidriv hd., self-tapping
927A	SCREW 1/4-20 X 3/4 button hd. (Grade 8)
939	SCREW 1/4-20 X 1 self-tapping, w/washer (Grade 2)
940	SCREW 1/4-20 X 3/4 TORX button hd.
94004-90T	ACORN NUT 1/4-20 X 5/8 X 7/16 (chrome)
941	SCREW 1/4-20 X 5/8 socket button hd. (Grade 8)
942	SCREW 1/4-20 X 3/4 TORX button hd., w/lockpatch (Grade 8)
946	SCREW 1/4-20 X 2-1/4 socket button hd., w/lockpatch (Grade 8)
956	SCREW 5/16-18 X 3-1/4 button hd., w/lockpatch (Grade 8)

New Parts List

ENGINE ASSEMBLY - TWIN CAM 110™

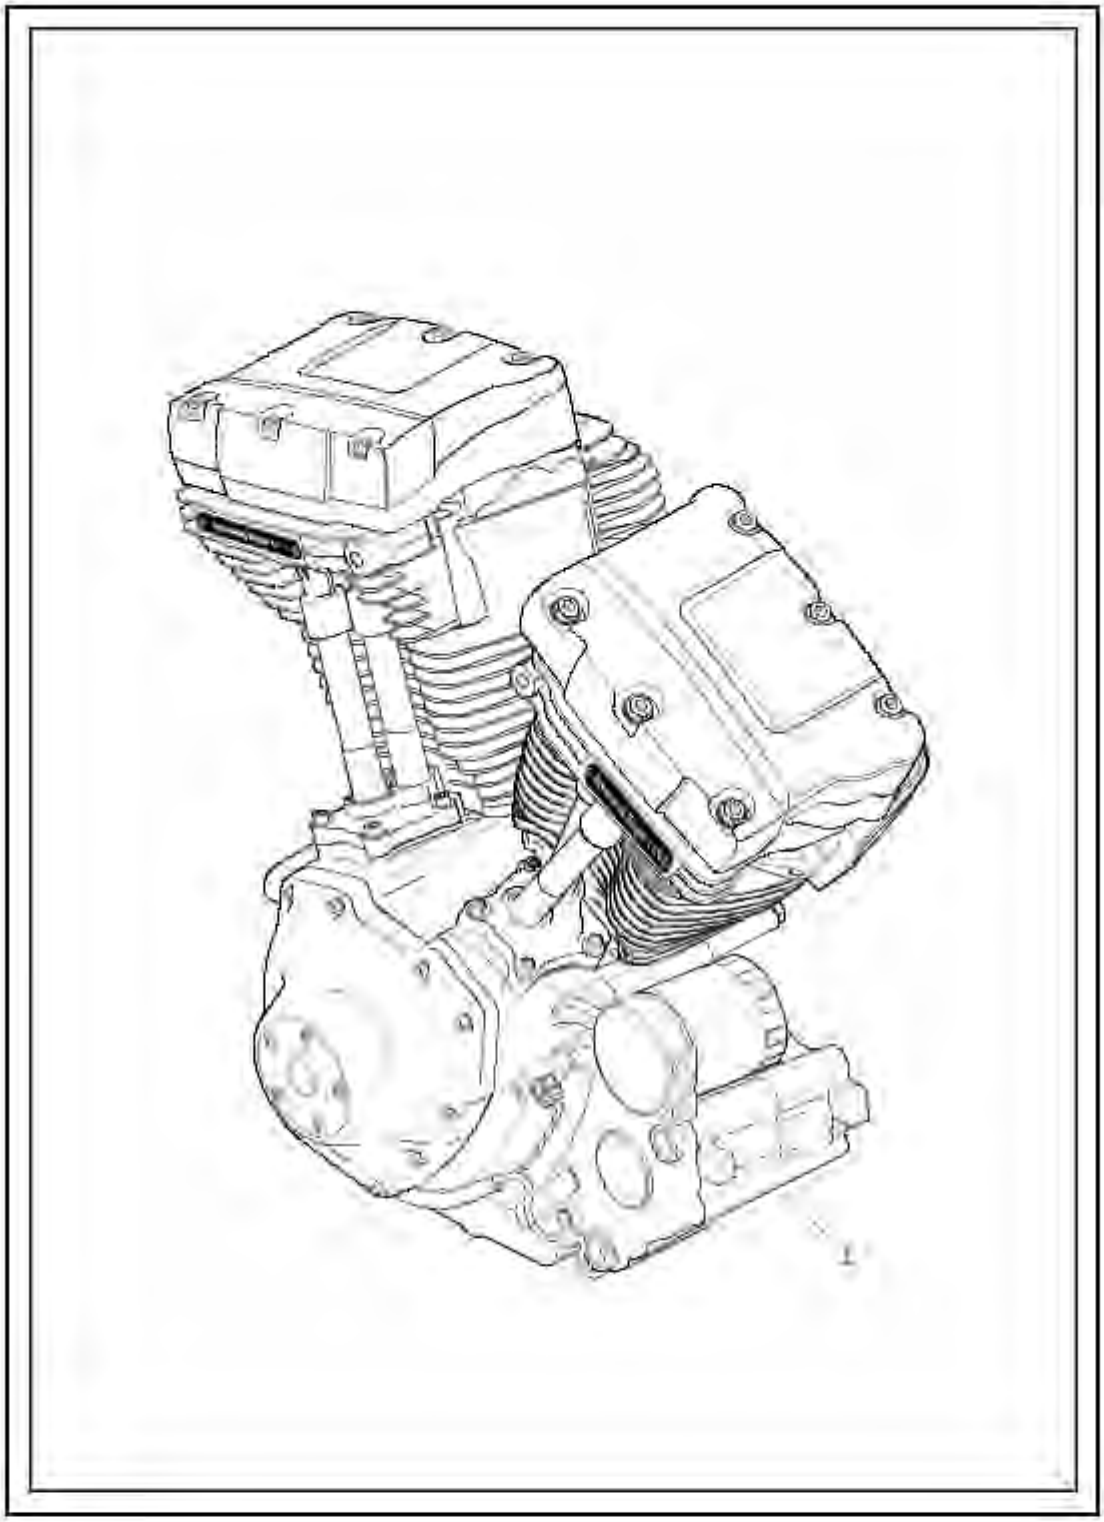

Index No.	Part No.	Description	Model(s)
1	16200175	ENGINE ASSEMBLY, (black)	FLSS, FLSTFBS

CYLINDERS, HEADS AND VALVES - TWIN CAM 110™

Index No.	Part No.	Description	Model(s)
1	11907	O-RING KIT, cylinder-base (set of 2)	FLSS, FLSTFBS
7	16801-07B	GASKET, cylinder-head *(2)*	FLSS, FLSTFBS
9	17251-07B	HEAD ASSEMBLY, cylinder, front, with 5, 6, 10, 14, 17, 18, 20, 21 and 22 (black)	FLSS, FLSTFBS
	17252-07A	HEAD ASSEMBLY, cylinder, rear, with 5, 6, 10, 14, 17, 18, 20, 21 and 22 (black)	FLSS, FLSTFBS

10	17253-07B	HEAD, cylinder, front, with 18048-98A, 18161-08, 18168-08 and 18189-07 (black)	FLSS, FLSTFBS
	17257-07A	HEAD, cylinder, rear, with 18048-98A, 18161-08, 18168-08 and 18189-07 (black)	FLSS, FLSTFBS
11	17285-07A	CYLINDER ASSEMBLY, with 16595-99A (black) *(2)*	FLSS, FLSTFBS
13	18048-98A	SEAT, exhaust-valve *(2)*	FLSS, FLSTFBS
14	18067-09	SEAL, valve *(4)*	FLSS, FLSTFBS
15	18161-08	GUIDE, intake-valve *(2)*	FLSS, FLSTFBS
16	18168-08	GUIDE, exhaust-valve *(2)*	FLSS, FLSTFBS
17	18183-03	VALVE, exhaust *(2)*	FLSS, FLSTFBS
18	18187-07	VALVE, intake *(2)*	FLSS, FLSTFBS
19	18189-07	SEAT, intake-valve *(2)*	FLSS, FLSTFBS
20	18270-00A	COLLAR, lower, valve-spring *(4)*	FLSS, FLSTFBS
21	18271-00	KEY, collar, valve-spring *(8)*	FLSS, FLSTFBS
22	18272-00	SPRING SET, inner and outer, valve *(4)*	FLSS, FLSTFBS
23	18280-07	COLLAR, upper, valve-spring *(4)*	FLSS, FLSTFBS
28	25800017	SCREW, medallion *(4)*	FLSS, FLSTFBS

ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™

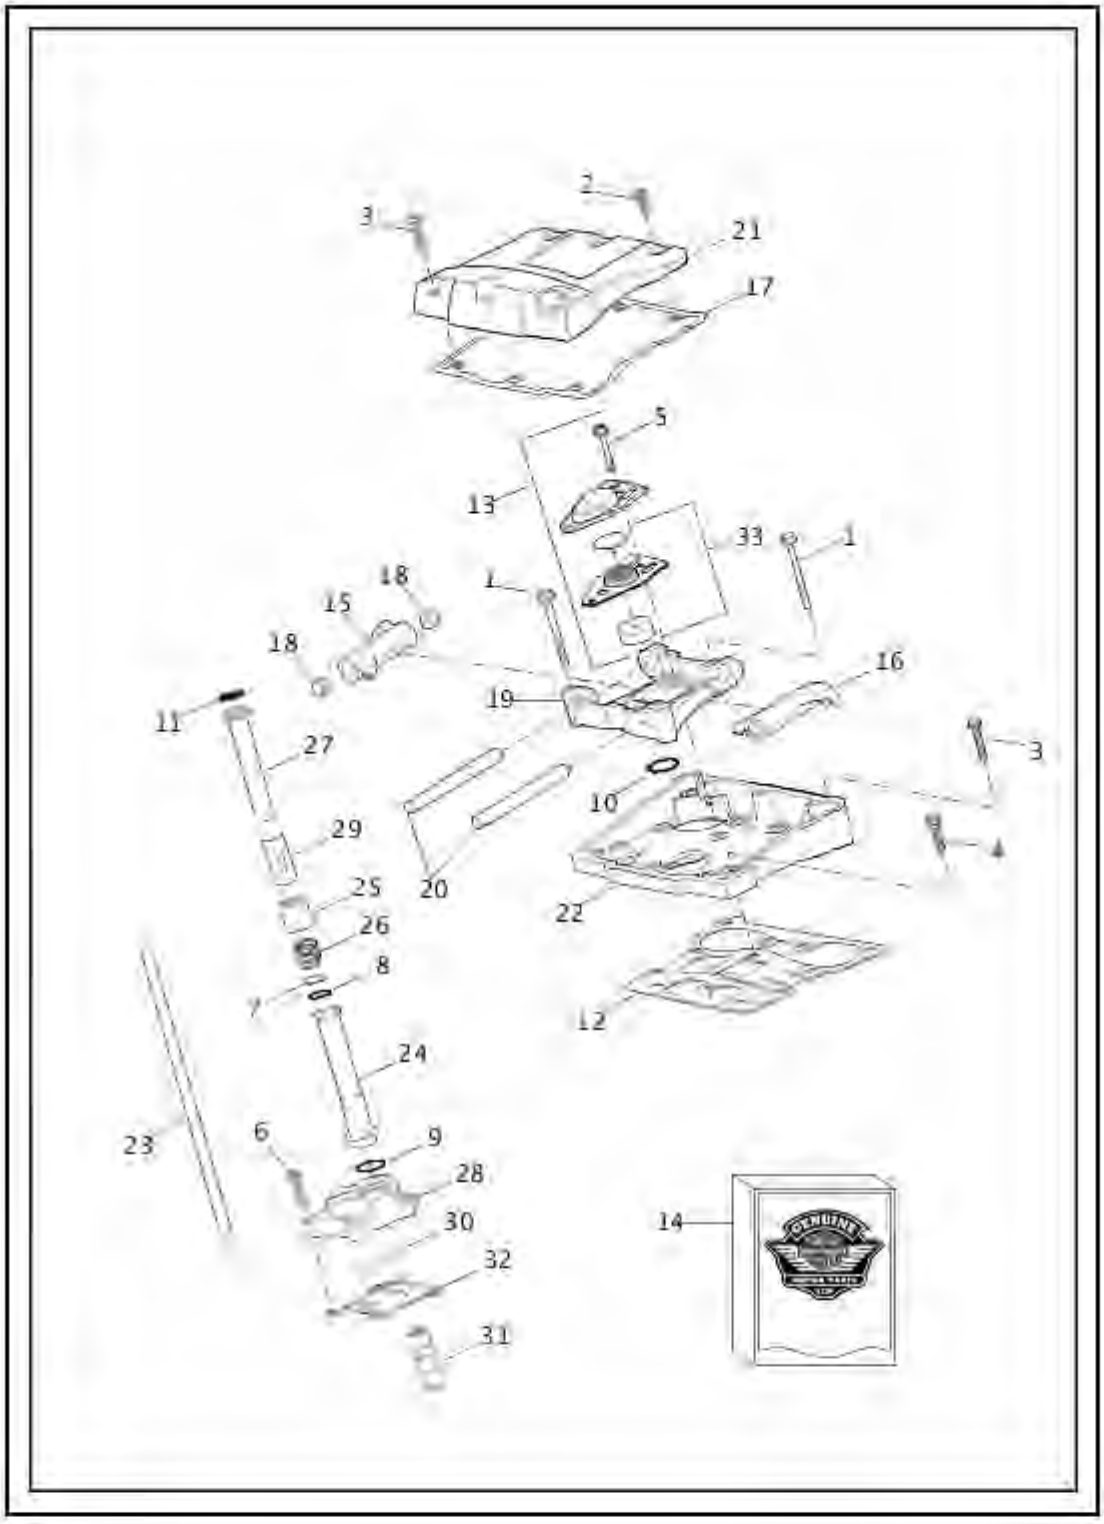

Index No.	Part No.	Description	Model(s)
21	17707-11	ROCKER COVER, (black) *(2)*	FLSS, FLSTFBS
22	17709-11	ROCKER HOUSING, (black) *(2)*	FLSS, FLSTFBS
31	18572-13	KIT-TAPPET	FLSS, FLSTFBS

PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 110™

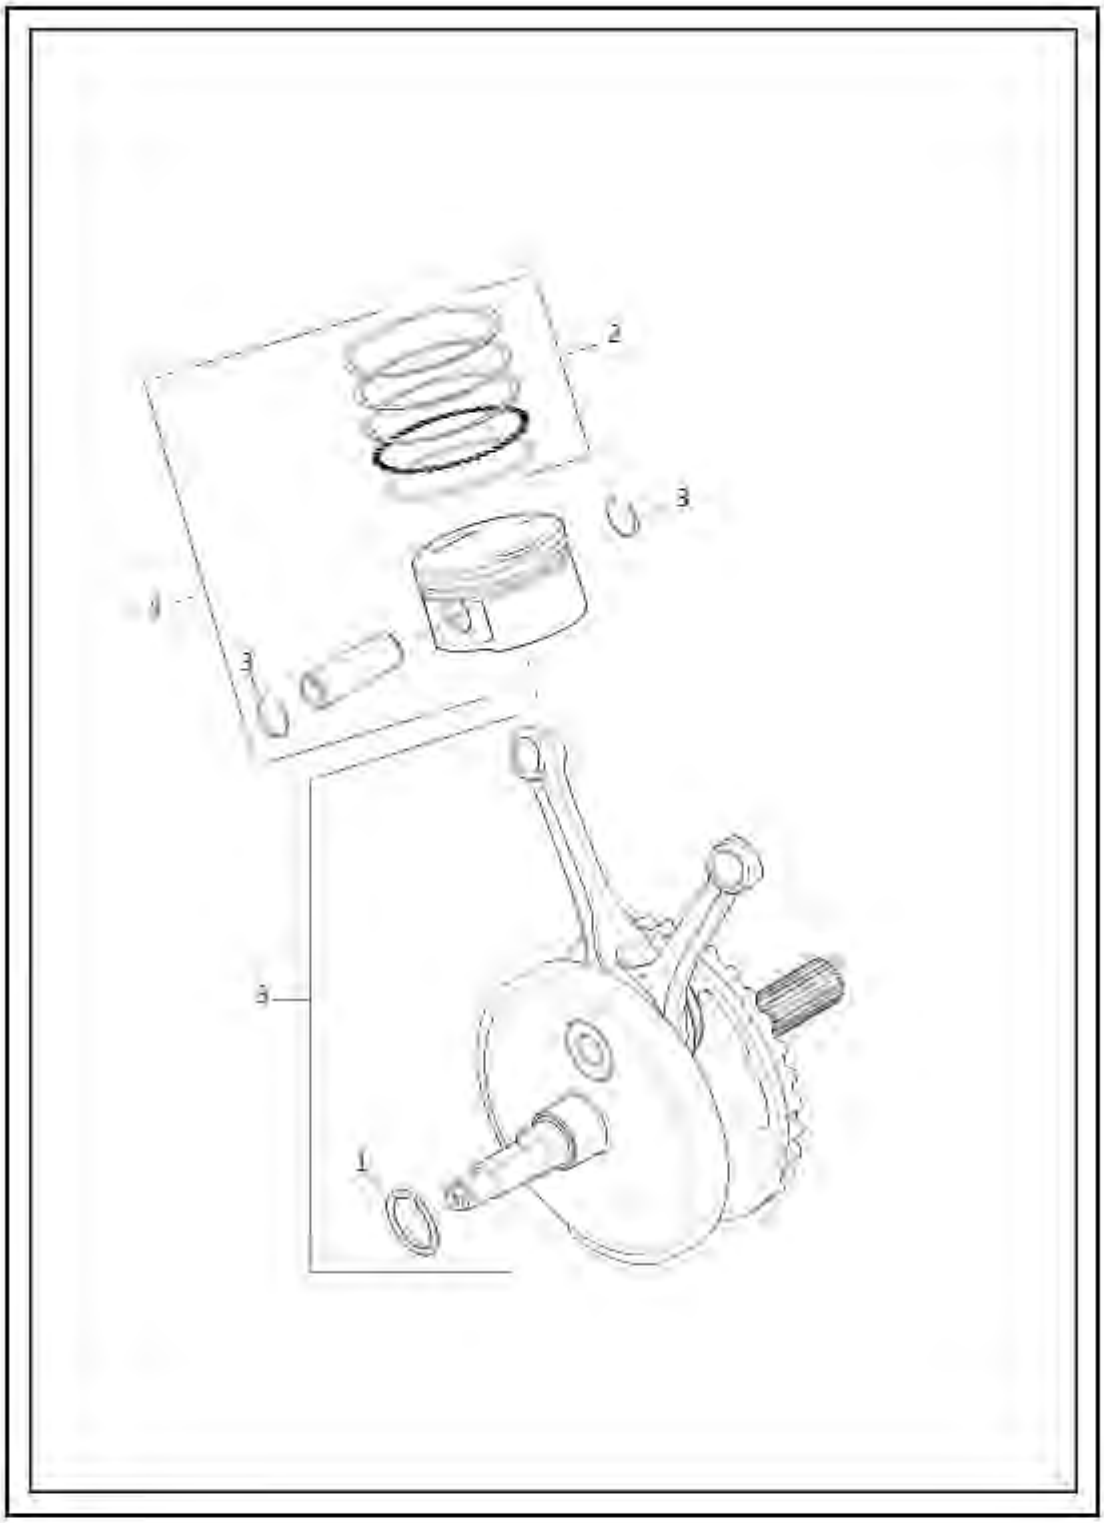

Index No.	Part No.	Description	Model(s)
2	21951-11	KIT PISTON RING SET, standard *(2)*	FLSS, FLSTFBS
	21953-11	KIT PISTON RING SET, 0.010 in OS *(2)*	FLSS, FLSTFBS
4	22000001	KIT PISTON AND RINGS ASSEMBLY, with piston pin and lock rings - standard *(2)*	FLSS, FLSTFBS
	22000003	KIT PISTON AND RINGS ASSEMBLY, with piston pin and lock rings - 0.010 in over-size *(2)*	FLSS, FLSTFBS

5	24100022	FLYWHEEL, with 11177A, thrust washer, plugs, inner race, connecting rods, flywheels, bearings, crankpin and ring	FLSS, FLSTFBS

CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™

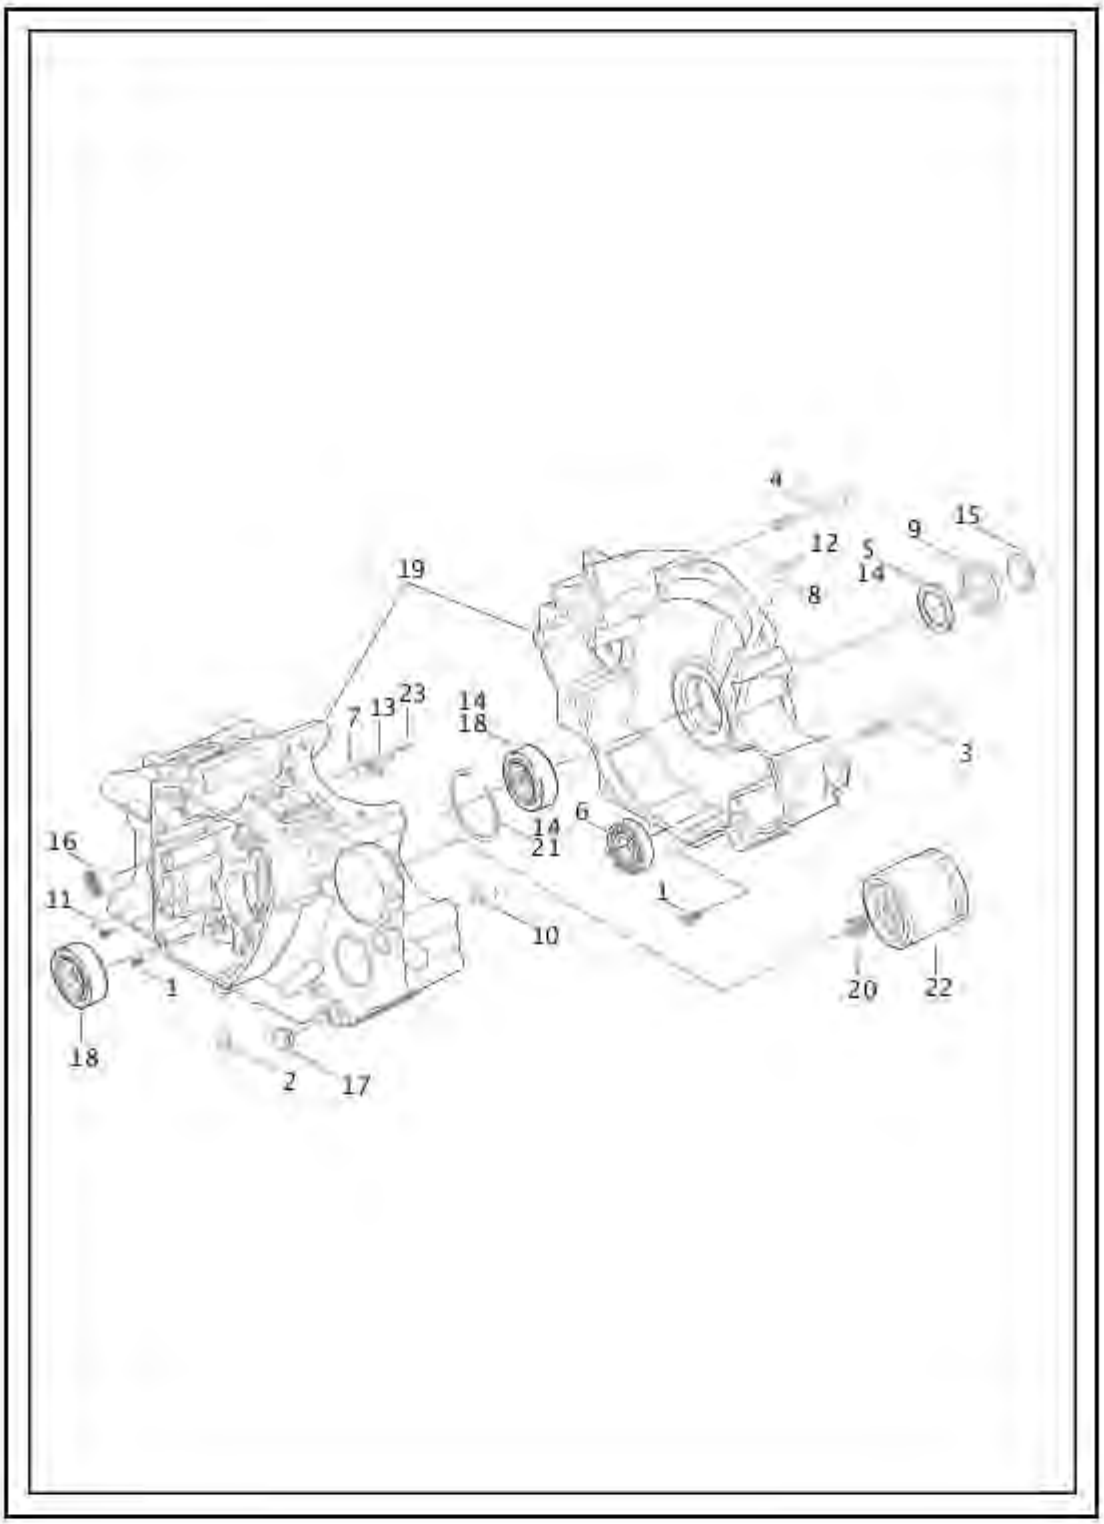

Index No.	Part No.	Description	Model(s)
4	1090A	SCREW	FLSS, FLSTFBS
8	11907	O-RING KIT, with cylinder base O-ring	FLSS, FLSTFBS

CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™

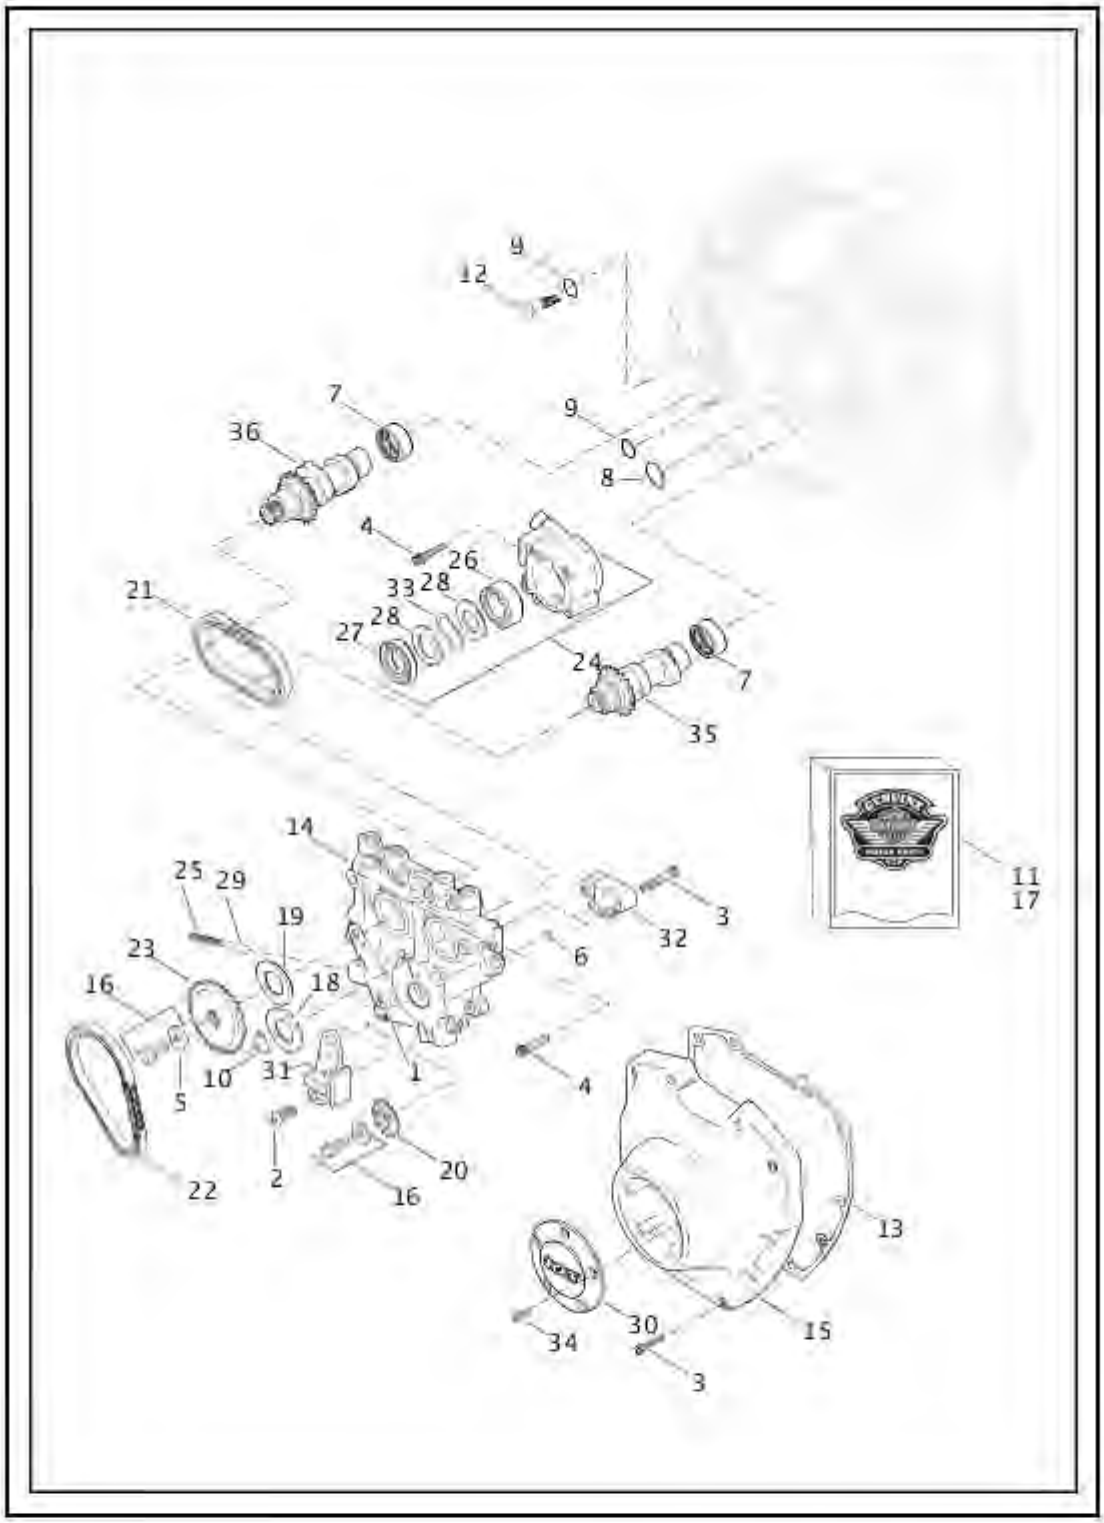

Index No.	Part No.	Description	Model(s)
30	32727-00	TIMER COVER, (chrome)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB
	32543-07	TIMER COVER, (denim black)	FLS
35	25400002	CAMSHAFT, front	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS
36	25400003	CAMSHAFT, rear	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™

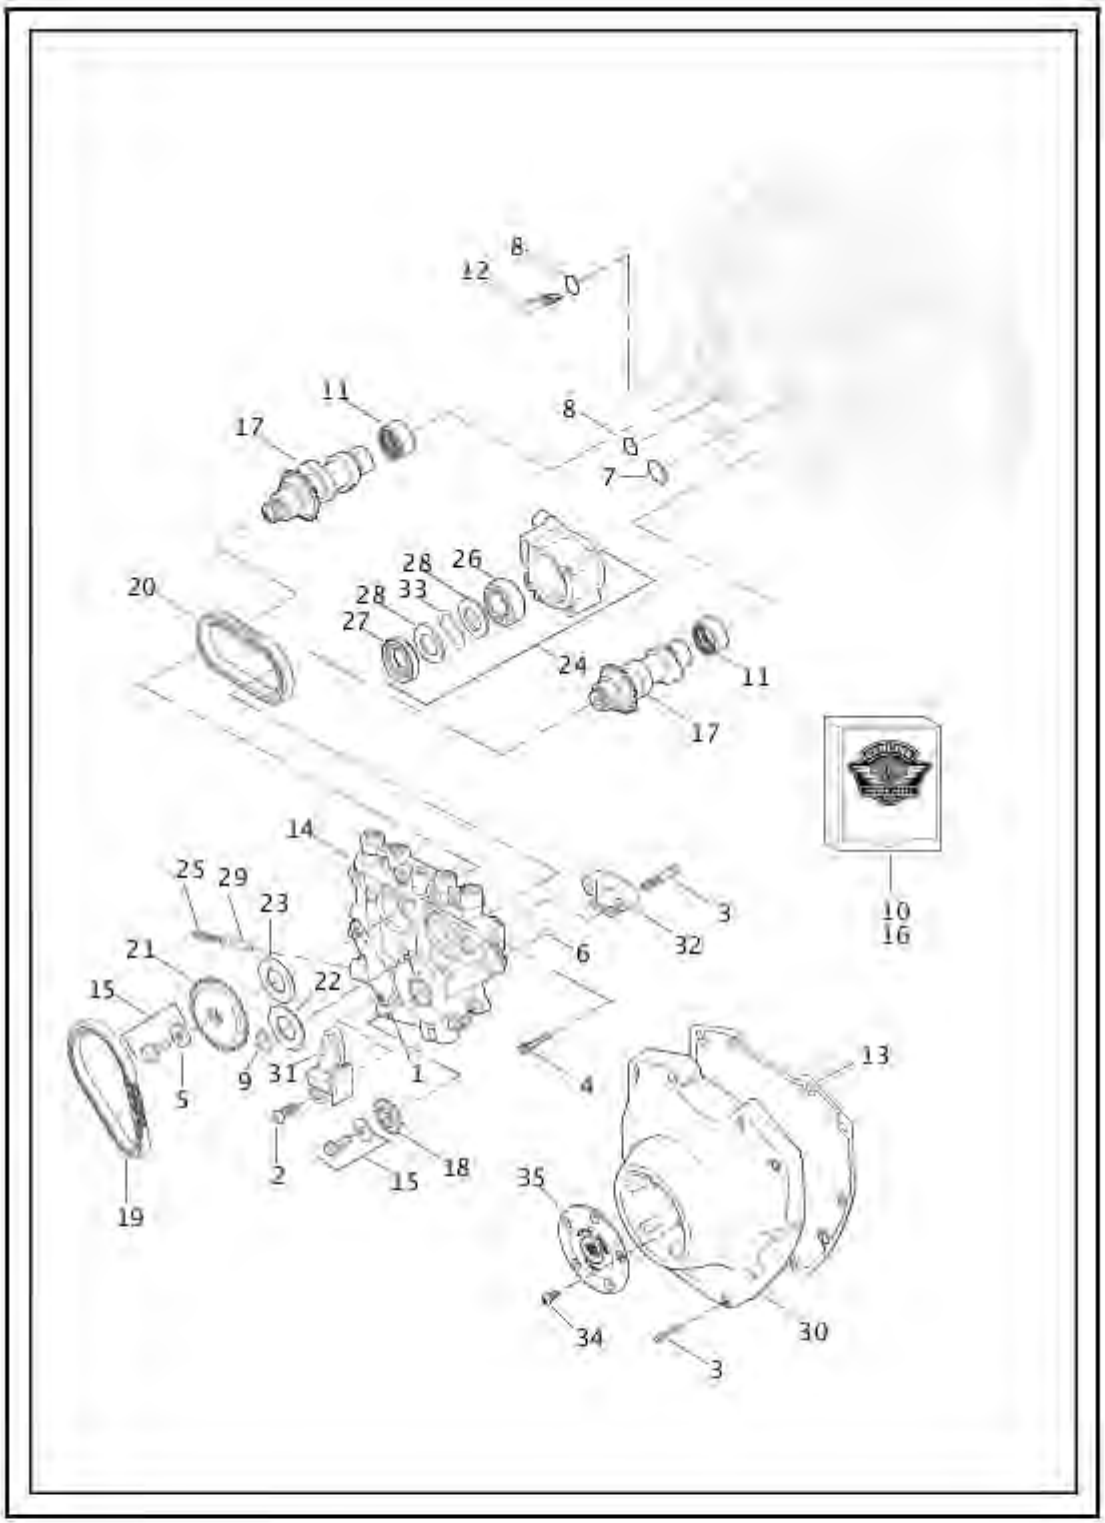

Index No.	Part No.	Description	Model(s)
11	24018-10	NEEDLE BEARING, camshaft	FLSS, FLSTFBS
17	25638-07	CAMSHAFT KIT	FLSS, FLSTFBS
30	37198-11	CAM COVER, (gloss black)	FLSS, FLSTFBS
35	25600012	TIMER COVER, (black)	FLSS, FLSTFBS

INDUCTION MODULE, FUEL

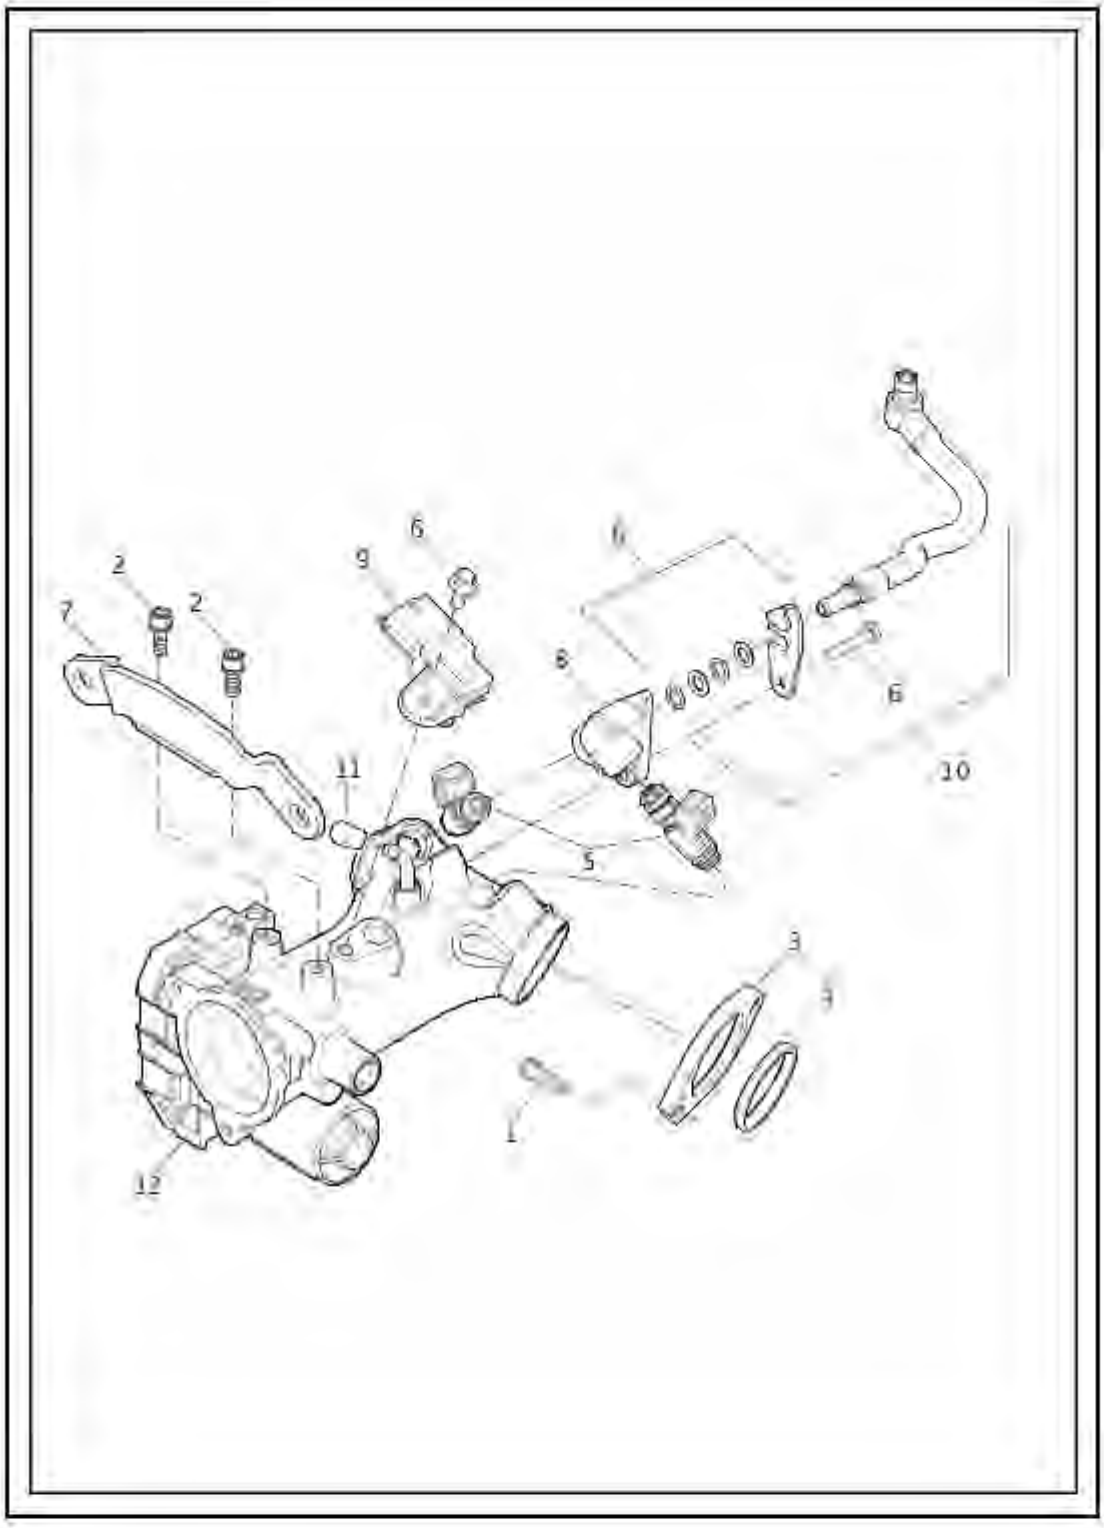

Index No.	Part No.	Description	Model(s)
2	4705	SCREW *(2)*	
5	27609-01B	FUEL INJECTOR ASSEMBLY, with O-ring *(2)*	
6	27711-08	INDUCTION MODULE SERVICE KIT	
7	27712-08	BRACKET, induction module	
8	27721-08	FUEL RAIL	
9	32319-07A	SENSOR, temperature manifold absolute pressure, with O-ring	

AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS

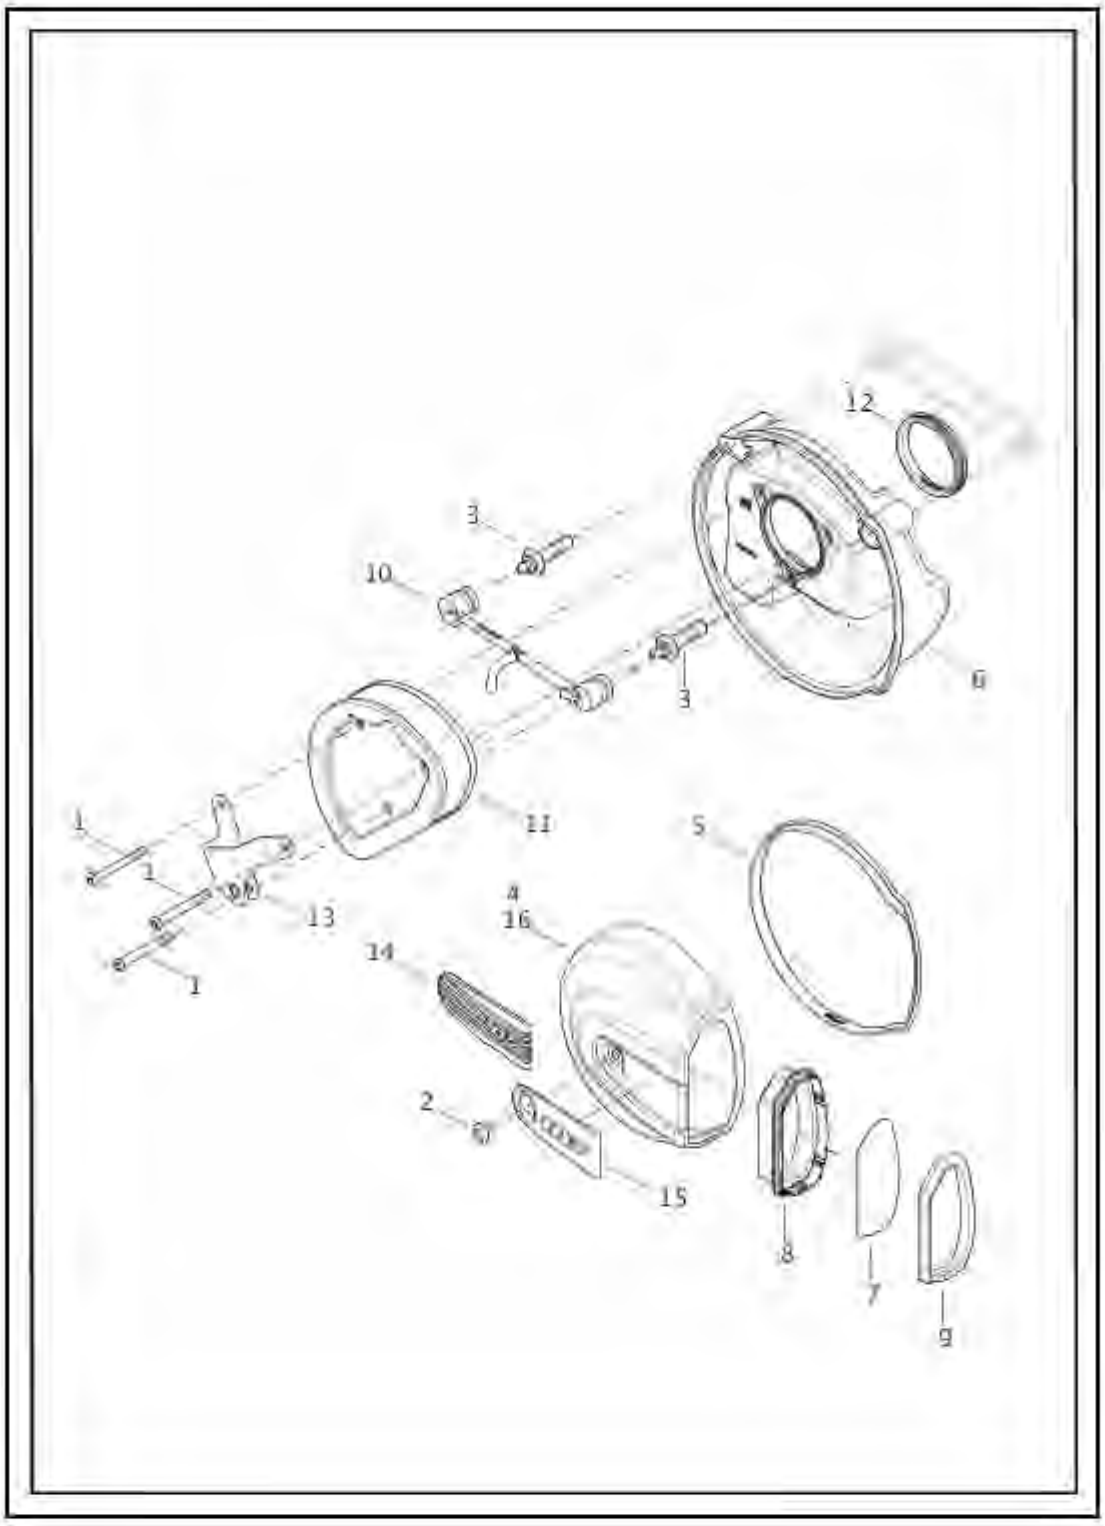

Index No.	Part No.	Description	Model(s)
	61300526	INSERT, air cleaner cover	FLS
	61300535	COVER KIT, air cleaner, with 14000347	FLSTFB
	61300536	COVER KIT, air cleaner, with 14000347	FLS

AIR CLEANER - TWIN CAM 110™ - FLSTFBS

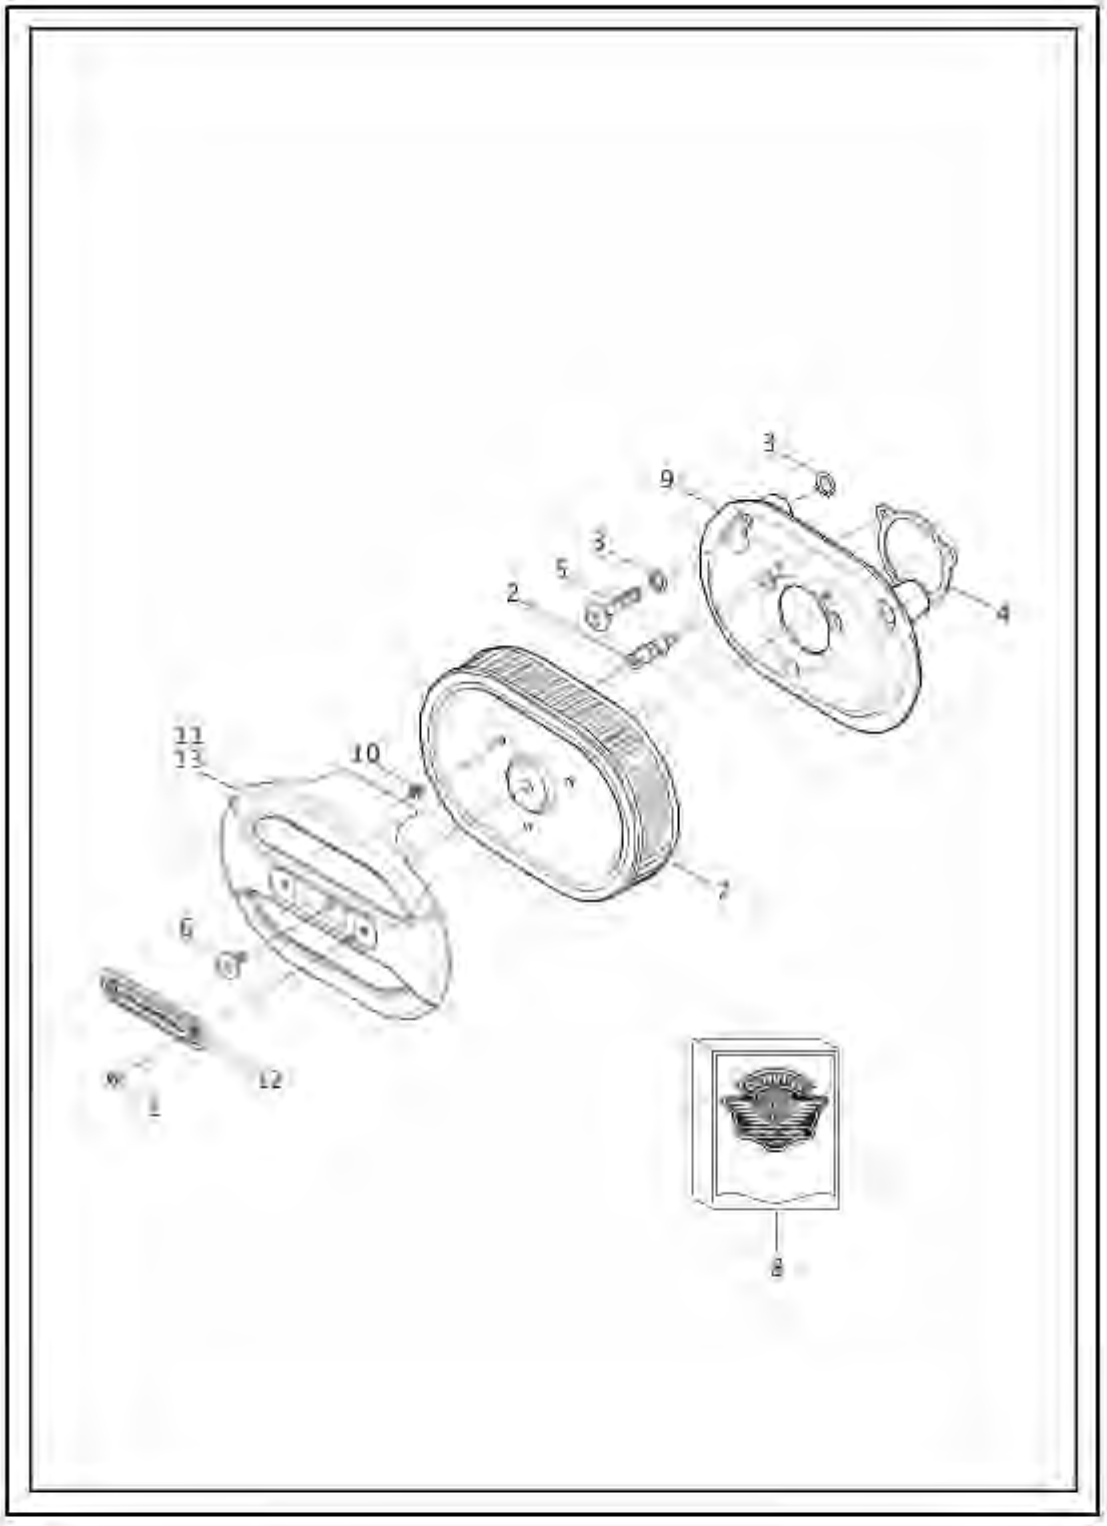

Index No.	Part No.	Description	Model(s)
1	3048	SCREW *(2)*	FLSTFBS
2	8250	STUD, air cleaner *(3)*	FLSTFBS
3	11292	O-RING *(4)*	FLSTFBS
4	29241-08	GASKET	FLSTFBS
5	29267-08A	BOLT, breather *(2)*	FLSTFBS

7	29670-09	ELEMENT, air filter	FLSTFBS
8	29762-09	RAINSOCK	FLSTFBS
9	29763-09	BACKPLATE ASSEMBLY, air cleaner (black)	FLSTFBS
10	10500053	SCREW *(3)*	FLSTFBS
11	14000377	LABEL, air cleaner warning (Domestic, California)	FLSTFBS
12	14100699	INSERT, air cleaner cover	FLSTFBS
13	61300365	COVER, air cleaner, with 14000377 (black)	FLSTFBS

AIR CLEANER - TWIN CAM 110™ - FLSS



Index No.	Part No.	Description	Model(s)
1	869	SCREW *(3)*	FLSS
2	3563	SCREW *(3)*	FLSS
3	8250	STUD, mounting *(3)*	FLSS
4	11292	O-RING *(4)*	FLSS
5	29241-08	GASKET, throttle body	FLSS
6	29244-08	ELEMENT	FLSS
7	29267-08A	BREATHER BOLT	FLSS

8	29327-94	SCREW	FLSS
13	29000123	BACKPLATE	FLSS
14	29400159	ADAPTER, air cleaner cover	FLSS
15	29400161	SPACER, air cleaner cover adapter	FLSS
16	61300536	COVER KIT, air cleaner, with 14000347	FLSS

TRANSMISSION HOUSING - FLSS AND FLSTFBS

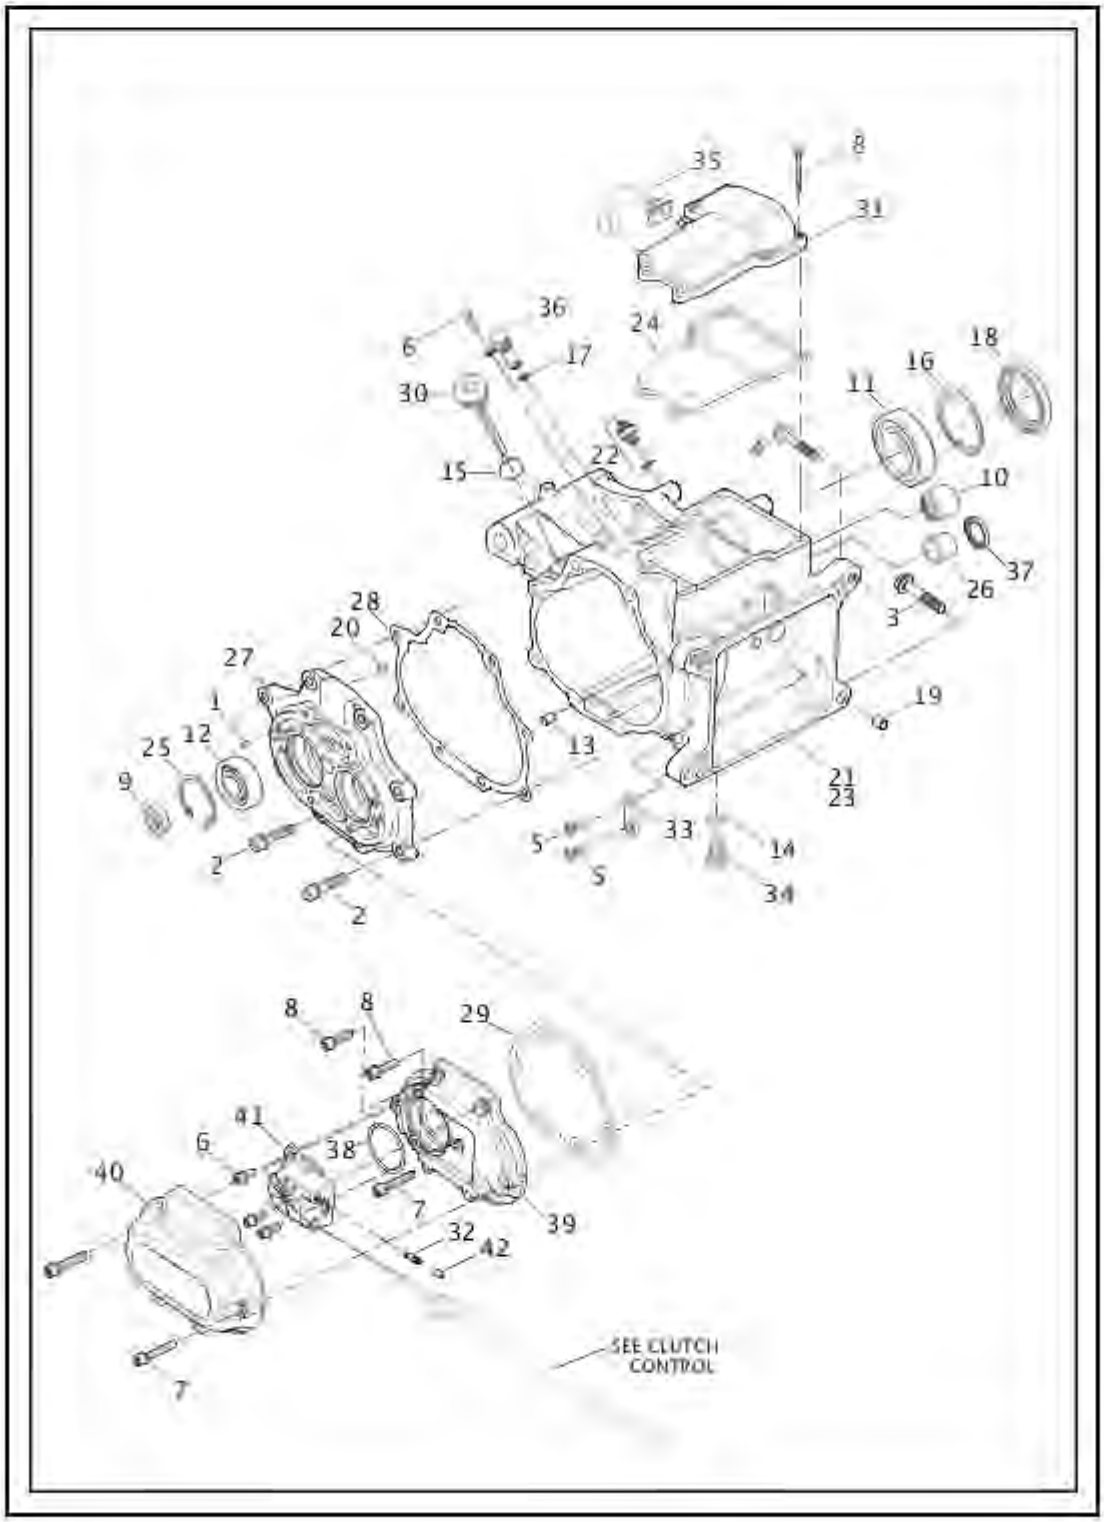

Index No.	Part No.	Description	Model(s)
21	33012-10A	TRANSMISSION REPLACEMENT, without covers and sensors (black)	FLSS, FLSTFBS
23	34799-07	TRANSMISSION CASE SUBASSEMBLY, with 3594, 8963, 8967, 9701A, 11161, 12074, 16574-99A, 35122-06, 35186-06, 35241-06, 35242-061, 40659-06, 60328-98B, 11000101 and shift lever centering screw (black)	FLSS, FLSTFBS
31	37195-11	COVER, upper (black)	FLSS, FLSTFBS
32	44613-02	BLEEDER SCREW	FLSS, FLSTFBS
38	11900035	O-RING	FLSS, FLSTFBS
39	25700178	INNER SIDE COVER	FLSS, FLSTFBS
40	25700180	SIDE COVER, (black)	FLSS, FLSTFBS
41	37200023	SECONDARY CLUTCH ACTUATOR, with 44613-02, 11900035 and 37200034	FLSS, FLSTFBS
42	37200034	CAP, bleeder screw	FLSS, FLSTFBS

PRIMARY HOUSING

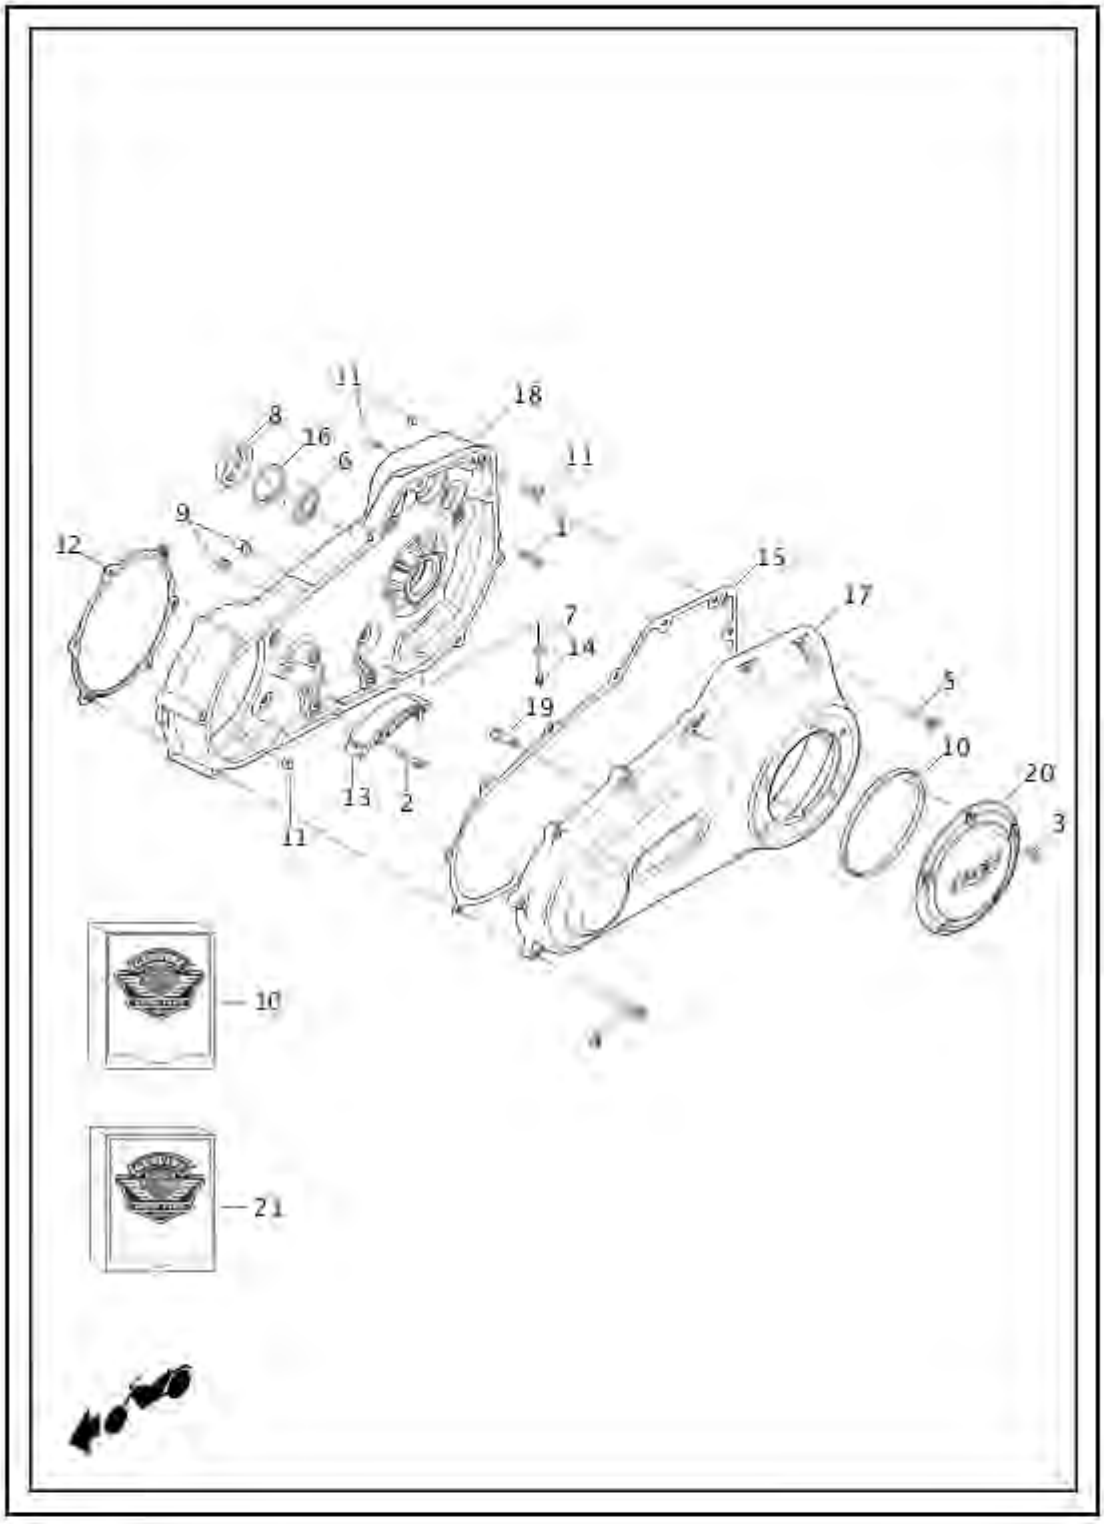

Index No.	Part No.	Description	Model(s)
	34948-08	GASKET, primary housing (black)	FLSS, FLSTFBS
	60876-11A	COVER, primary (gloss black)	FLSS, FLSTFBS
	25700020	COVER, clutch (gloss black) (not illustrated)	FLSS, FLSTFBS

BELT, CHAINS AND SPROCKETS

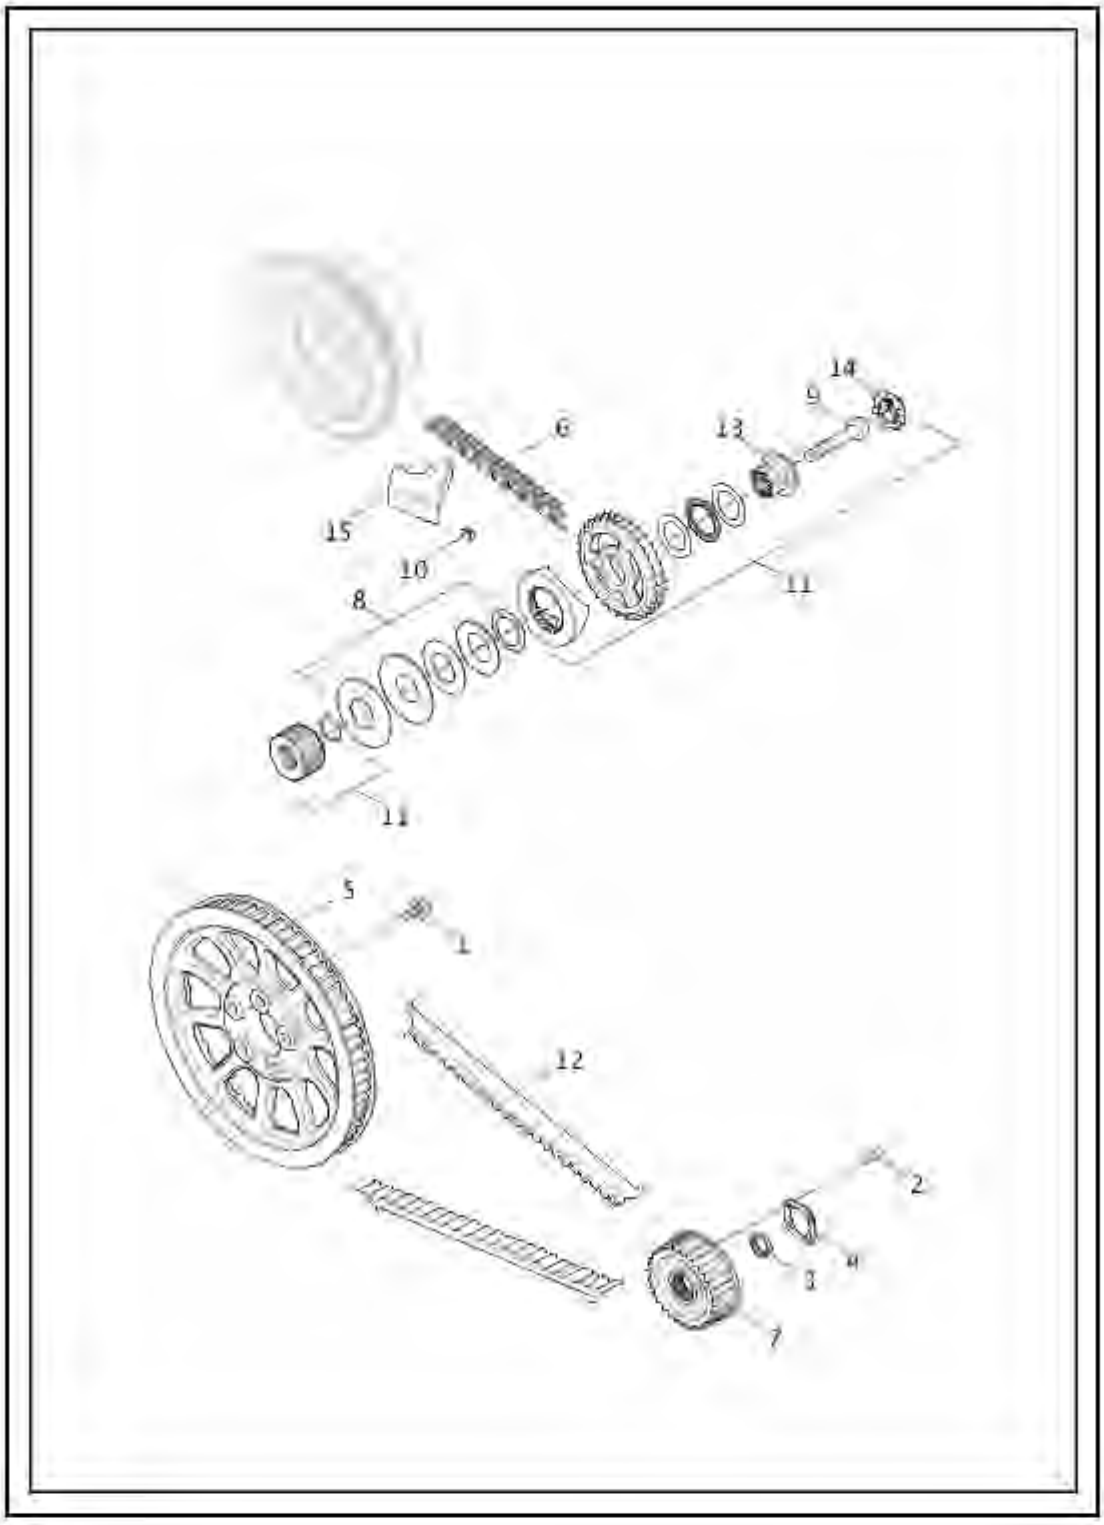

Index No.	Part No.	Description	Model(s)
5	40325-07	SPROCKET, rear, 66 teeth (black)	

CLUTCH CONTROL - FLSS AND FLSTFBS

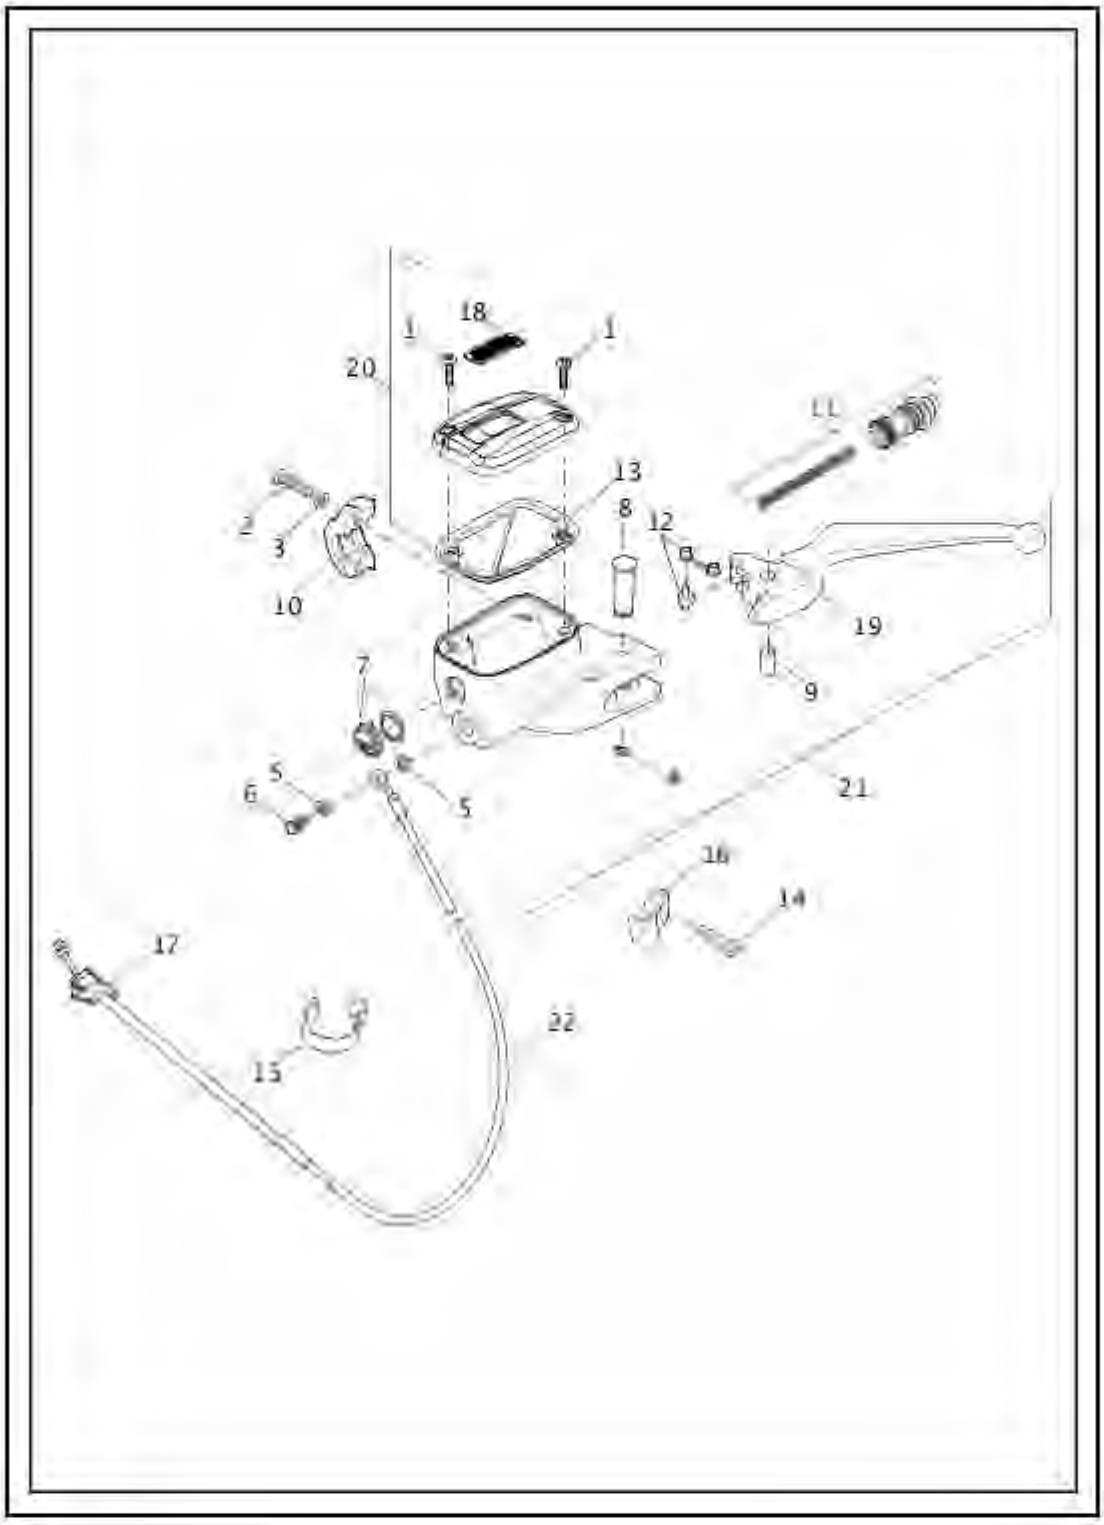

Index No.	Part No.	Description	Model(s)
1	2590	SCREW, (set of two)	FLSS, FLSTFBS
5	41751-06A	GASKET, banjo bolt *(2)*	FLSS, FLSTFBS
6	42010-06B	BOLT, banjo	FLSS, FLSTFBS
7	42145-06	SIGHT GLASS KIT	FLSS, FLSTFBS

8	45032-82	PIVOT PIN	FLSS, FLSTFBS
9	45423-92	BUSHING, hand lever	FLSS, FLSTFBS
10	45138-08A	CLAMP, master cylinder and clutch (black)	FLSS, FLSTFBS
11	37200096B	REPAIR KIT, with 41751-06A (black)	FLSS, FLSTFBS
12	46246-01	BUSHING AND ROLLER, kit	FLSS, FLSTFBS
13	46322-06	GASKET, cover, master cylinder	FLSS, FLSTFBS
14	68042-99	SCREW	FLSS, FLSTFBS
15	10800060	CLAMP, clutch line	FLSS, FLSTFBS
16	10800102	CLAMP, hose (black)	FLSS, FLSTFBS
17	12100028	GROMMET	FLSS, FLSTFBS
18	14100605	DECAL, master cylinder	FLSS, FLSTFBS
19	36700144	CLUTCH LEVER, with 11143, 45423-92, 46246-01 (black)	FLSS, FLSTFBS
20	36700145	COVER, with 2590, 14100605, 46322-06 (black)	FLSS, FLSTFBS
21	36700186	MASTER CYLINDER, clutch lever, with 36700144, 36700145, 42145-06, 45032-82 (black)	FLSS, FLSTFBS
22	37200186	CLUTCH LINE, (black)	FLSS, FLSTFBS

BRAKE CONTROL, FRONT

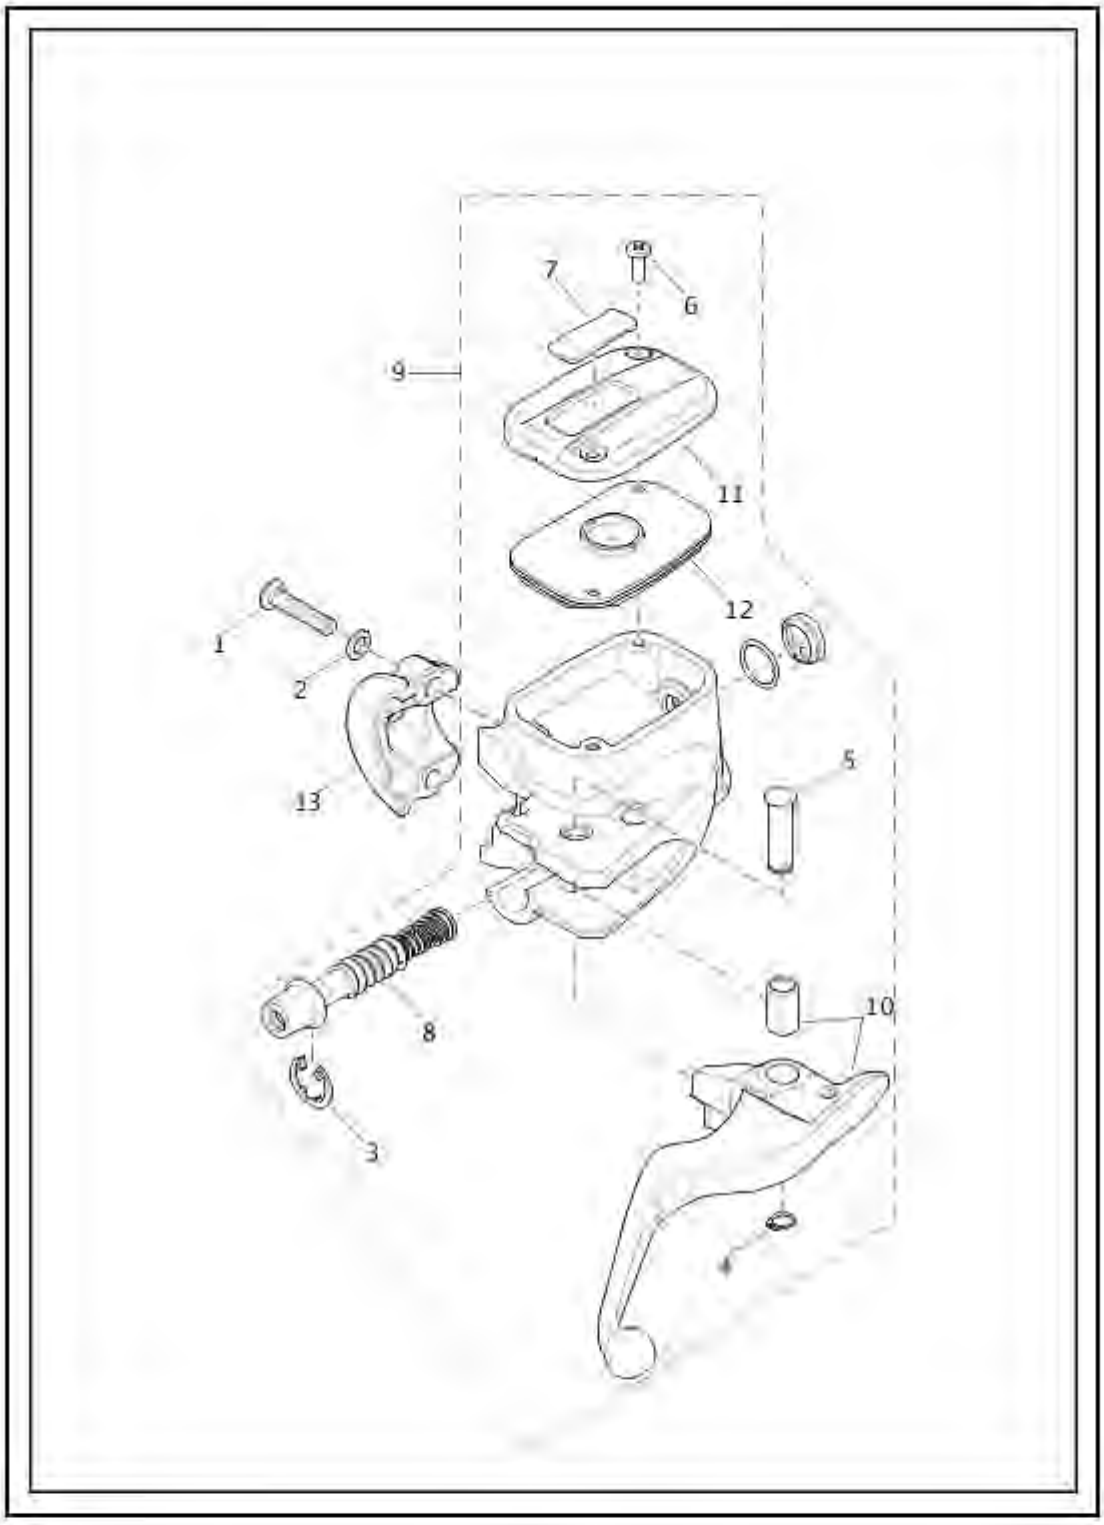

Index No.	Part No.	Description	Model(s)
	41700451	MASTER CYLINDER, front, with hand lever (black)	FLSS, FLSTFBS
	41700313	HAND LEVER, front brake control (black)	FLSS, FLSTFBS

MIRRORS

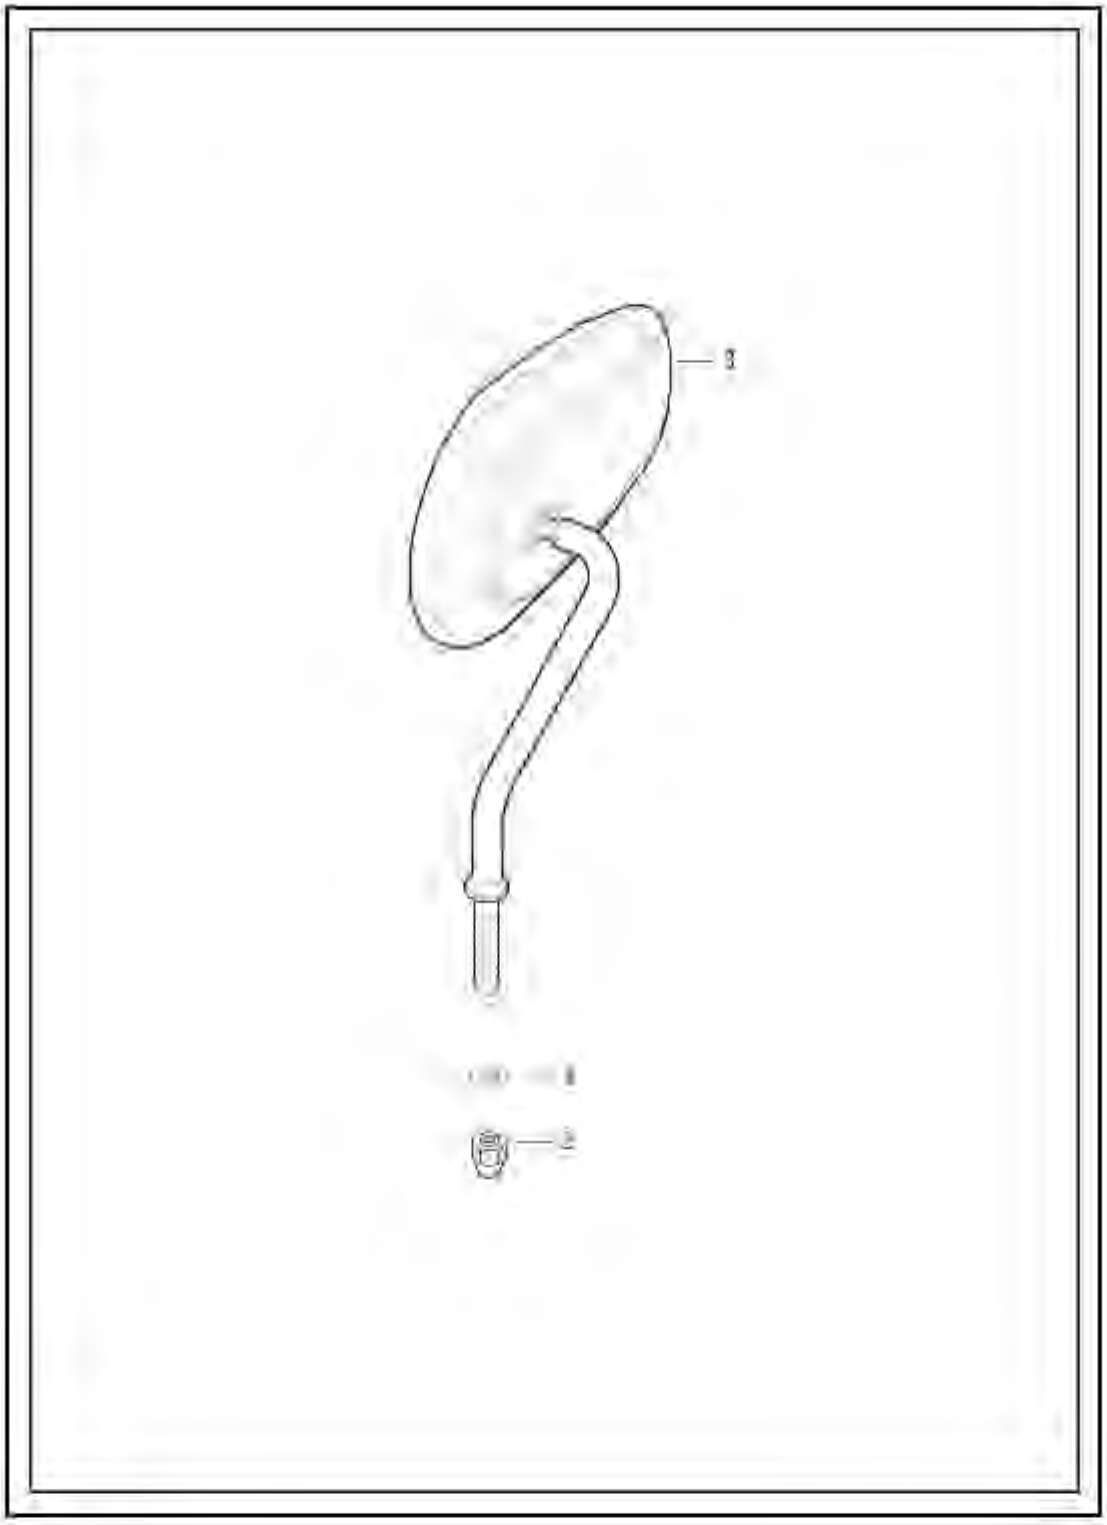

Index No.	Part No.	Description	Model(s)
	7352	ACORN NUT, (black) *(2)*	FLSS, FLSTFBS
	92614-10	MIRROR KIT, short, convex (right) (black)	FLSS, FLSTFBS
	92615-10	MIRROR KIT, short, convex (left) (black)	FLSS, FLSTFBS

BRAKE LINES, FRONT, NON-ABS - FLS

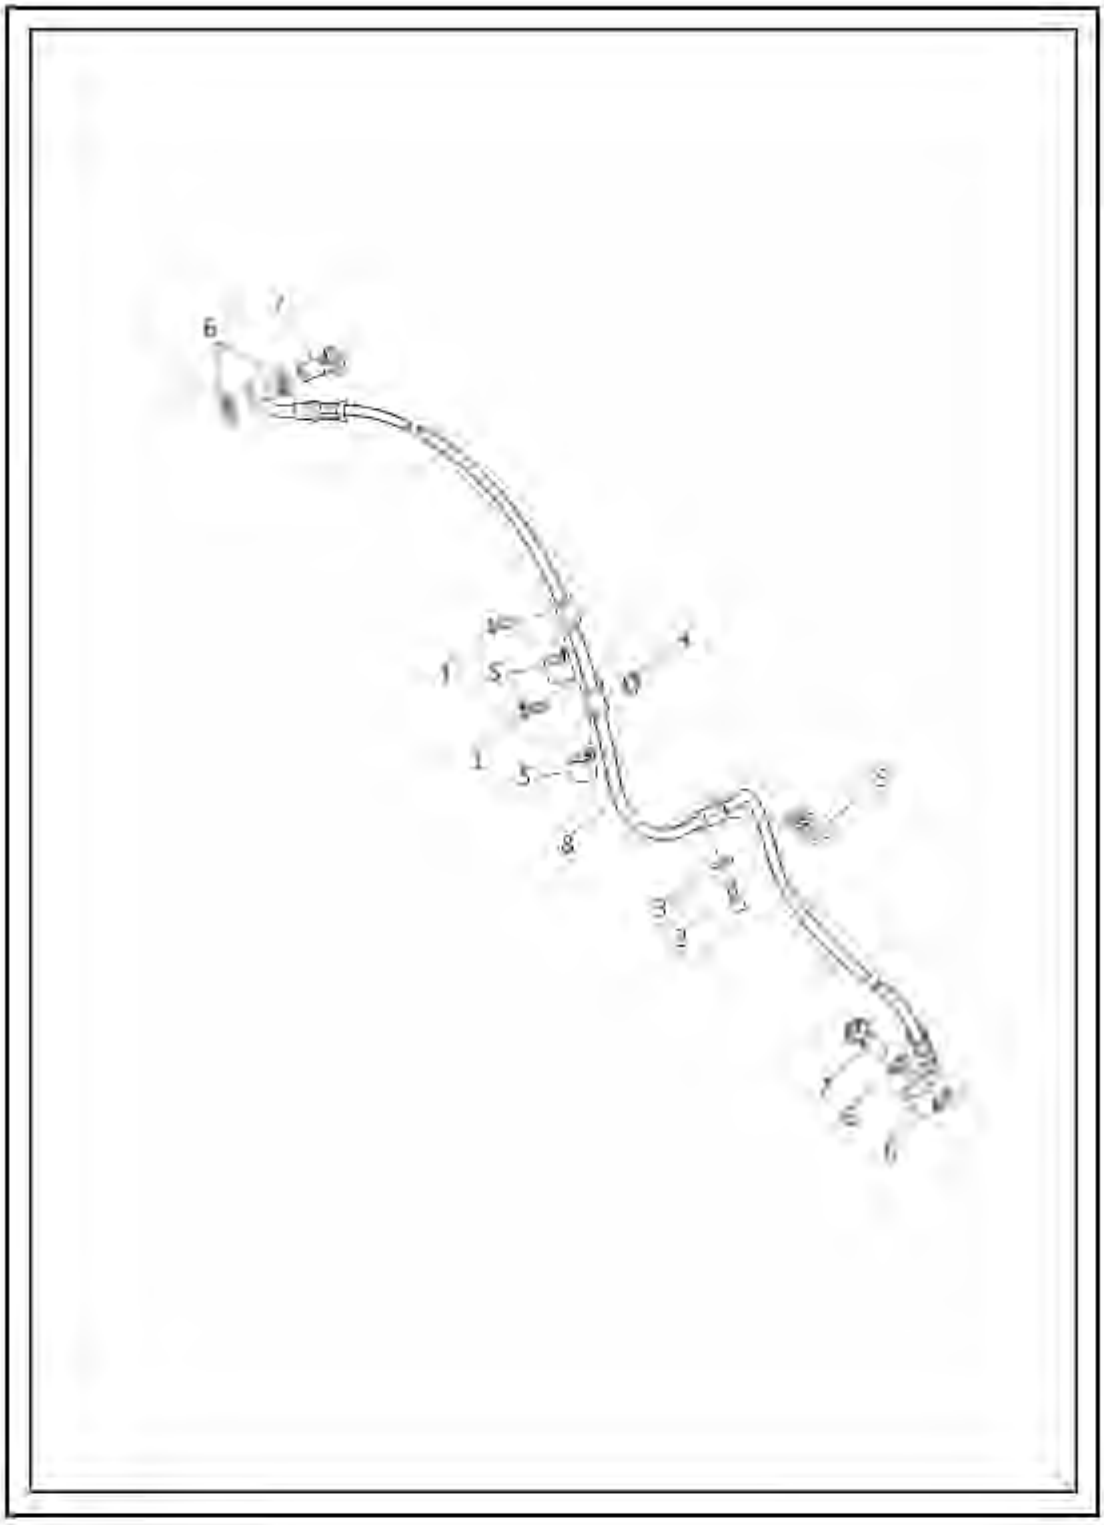

Index No.	Part No.	Description	Model(s)
5	10800096	CLAMP *(3)*	FLS

BRAKE CONTROL, REAR

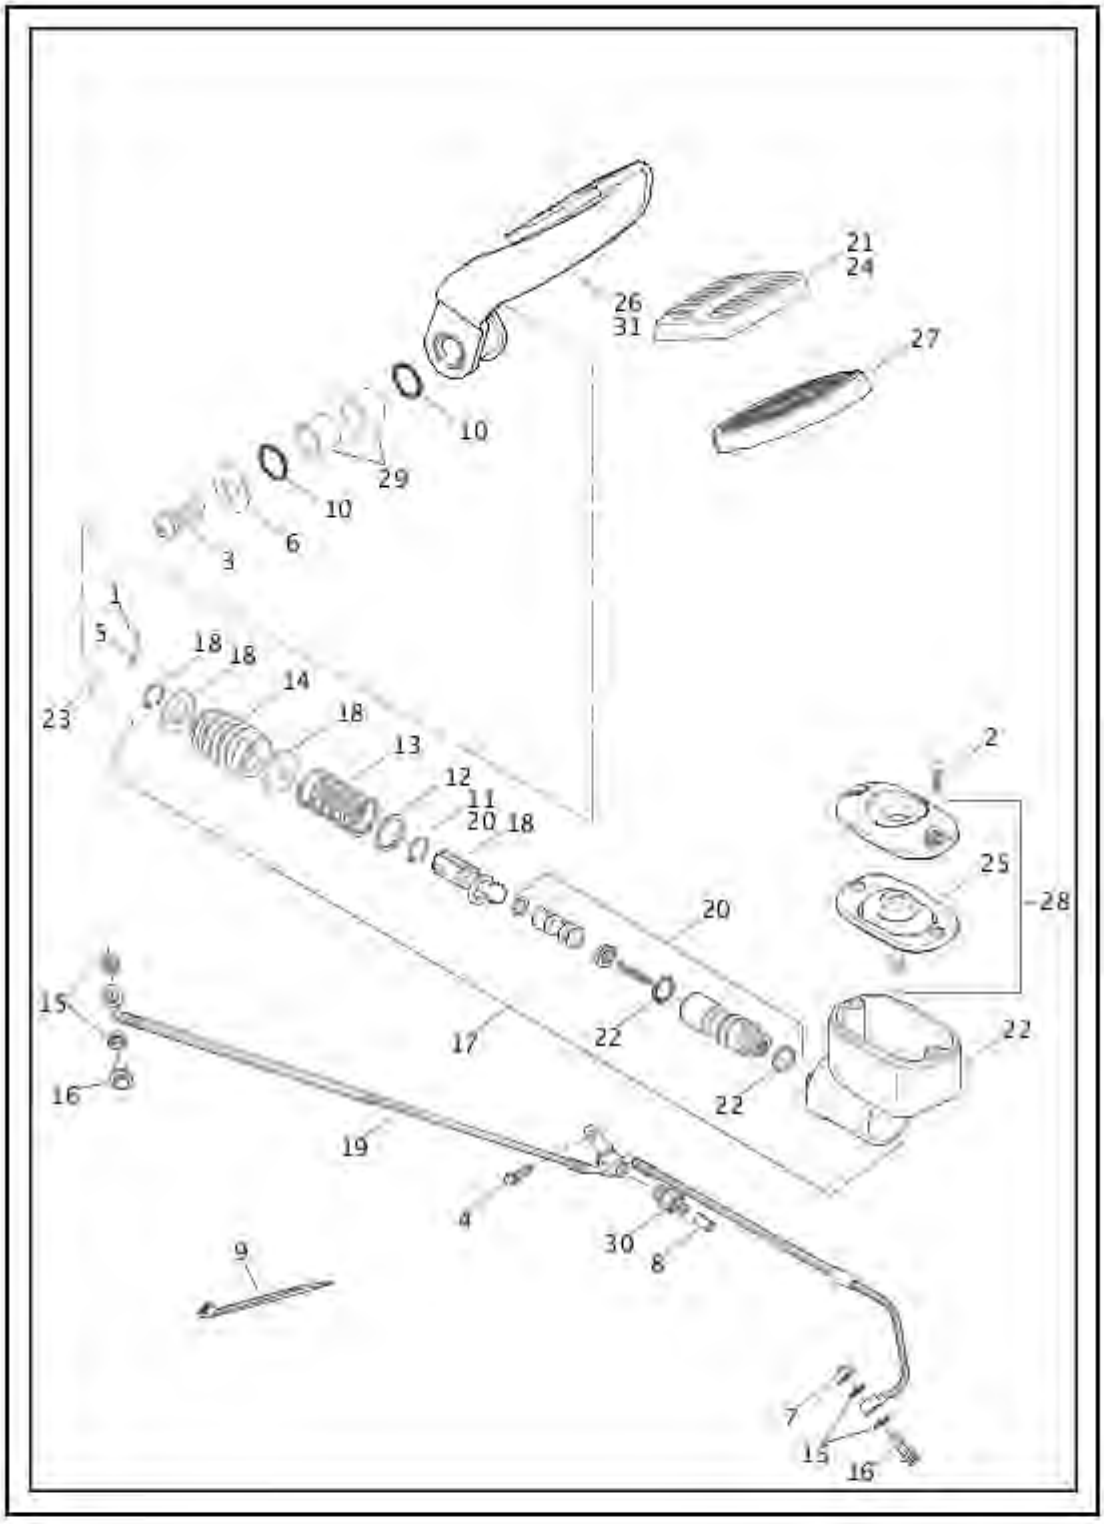

Index No.	Part No.	Description	Model(s)
11	11688	RETAINING RING	

BRAKE LINE AND MODULE, REAR, ABS

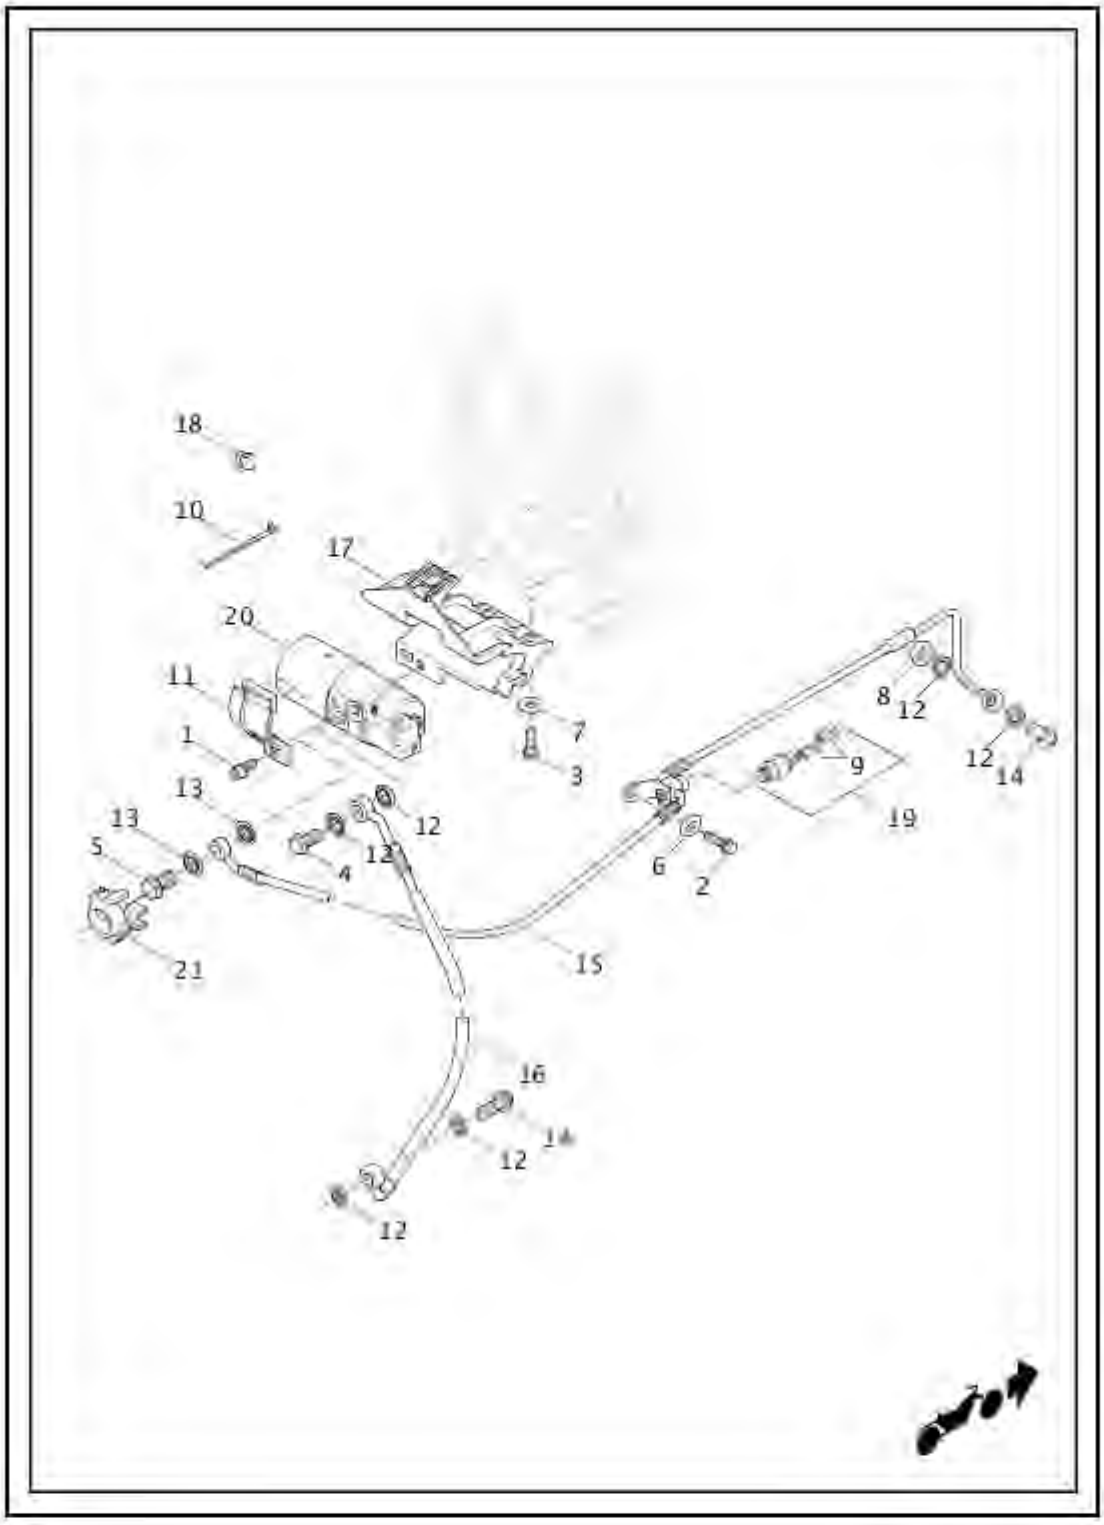

Index No.	Part No.	Description	Model(s)
16	43384-11A	BRAKE LINE ASSEMBLY, rear, ABS, HCU to caliper	

WHEELS, FRONT (2 OF 2)

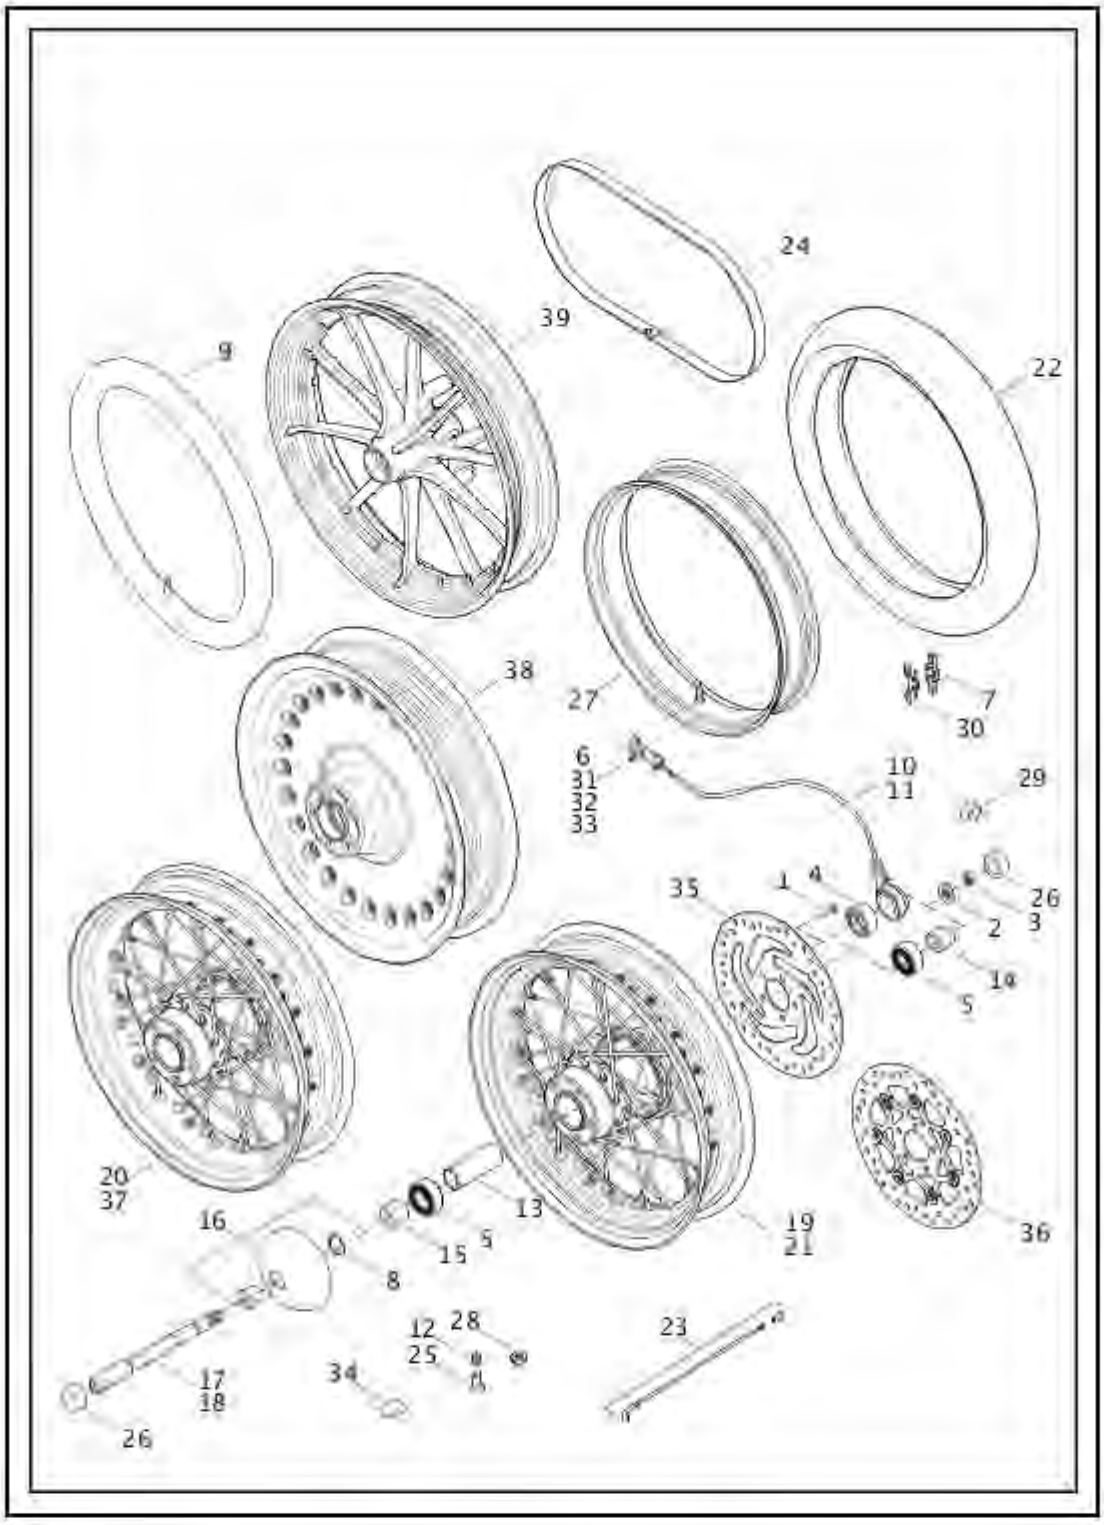

Index No.	Part No.	Description	Model(s)
26	43583-09	COVER, axle nut (black) *(2)*	FLSS, FLSTFBS
34	95594-84B	WEIGHT, 5 g (black)	FLS, FXSB, FLSS
	43590-09	WHEEL ASSEMBLY, 17 in, without bearings and sleeve (chrome)	FLSTF

WHEELS, REAR (1 OF 2)

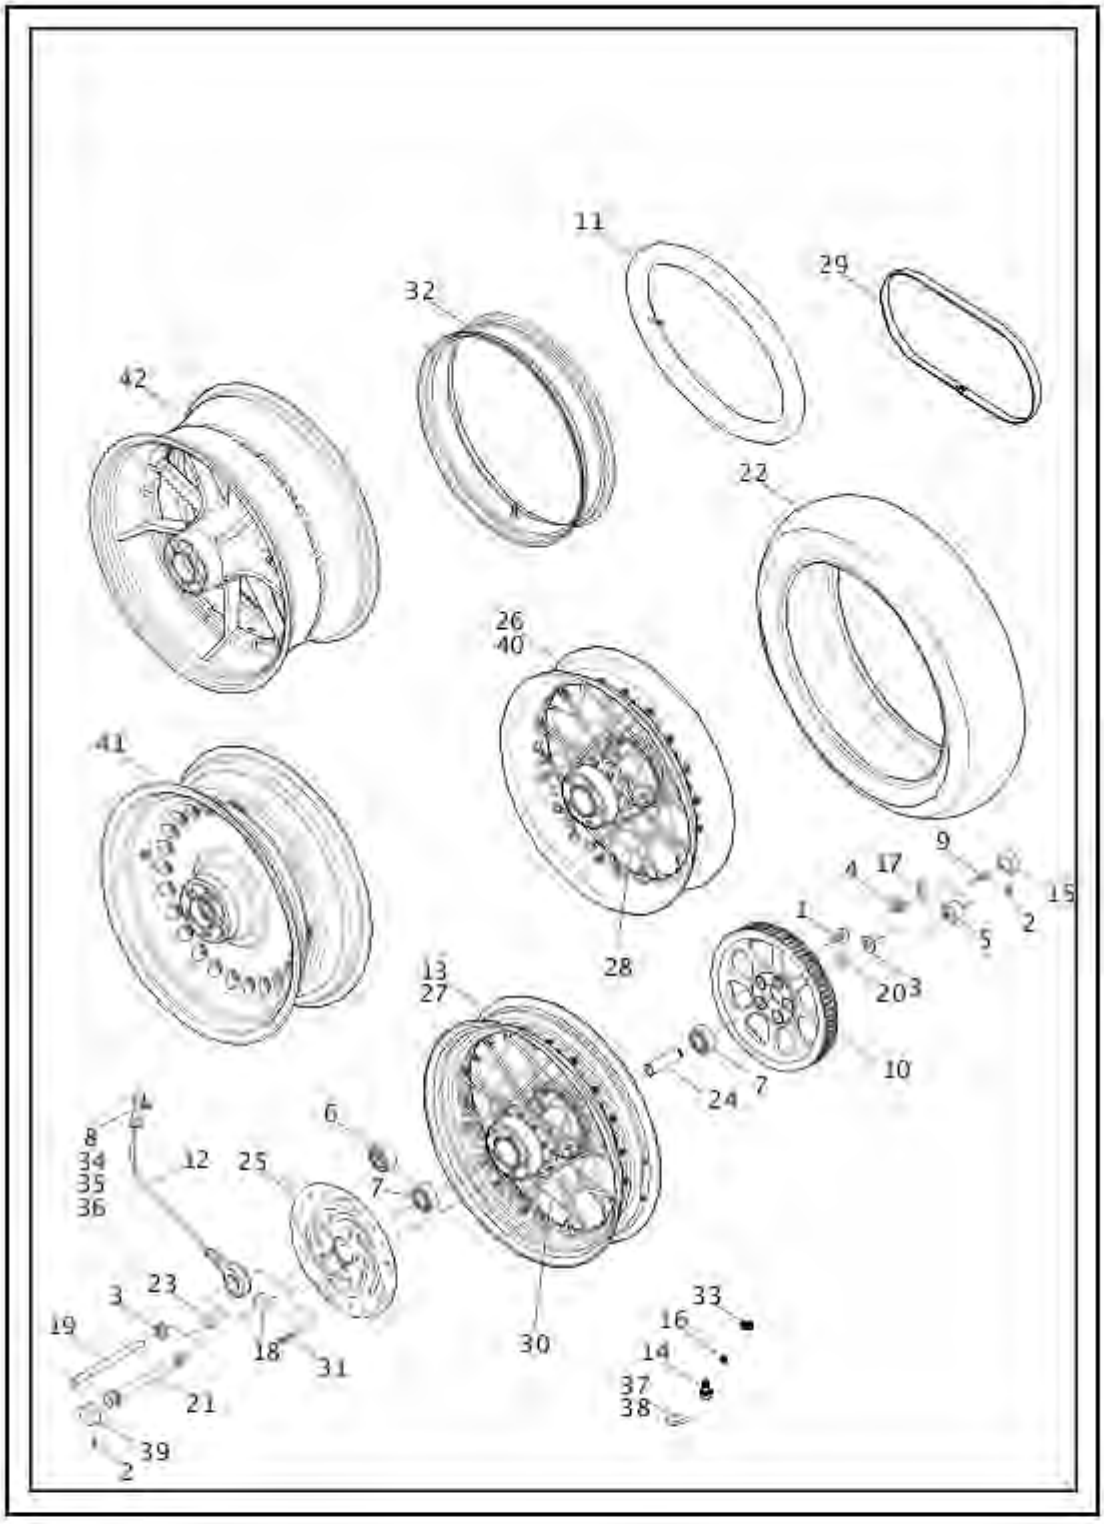

Index No.	Part No.	Description	Model(s)
2	4636	SCREW *(2)*	FLSS, FLSTFBS
15	41063-09	COVER, nut, left (black)	FLSS, FLSTFBS

WHEELS, REAR (2 OF 2)

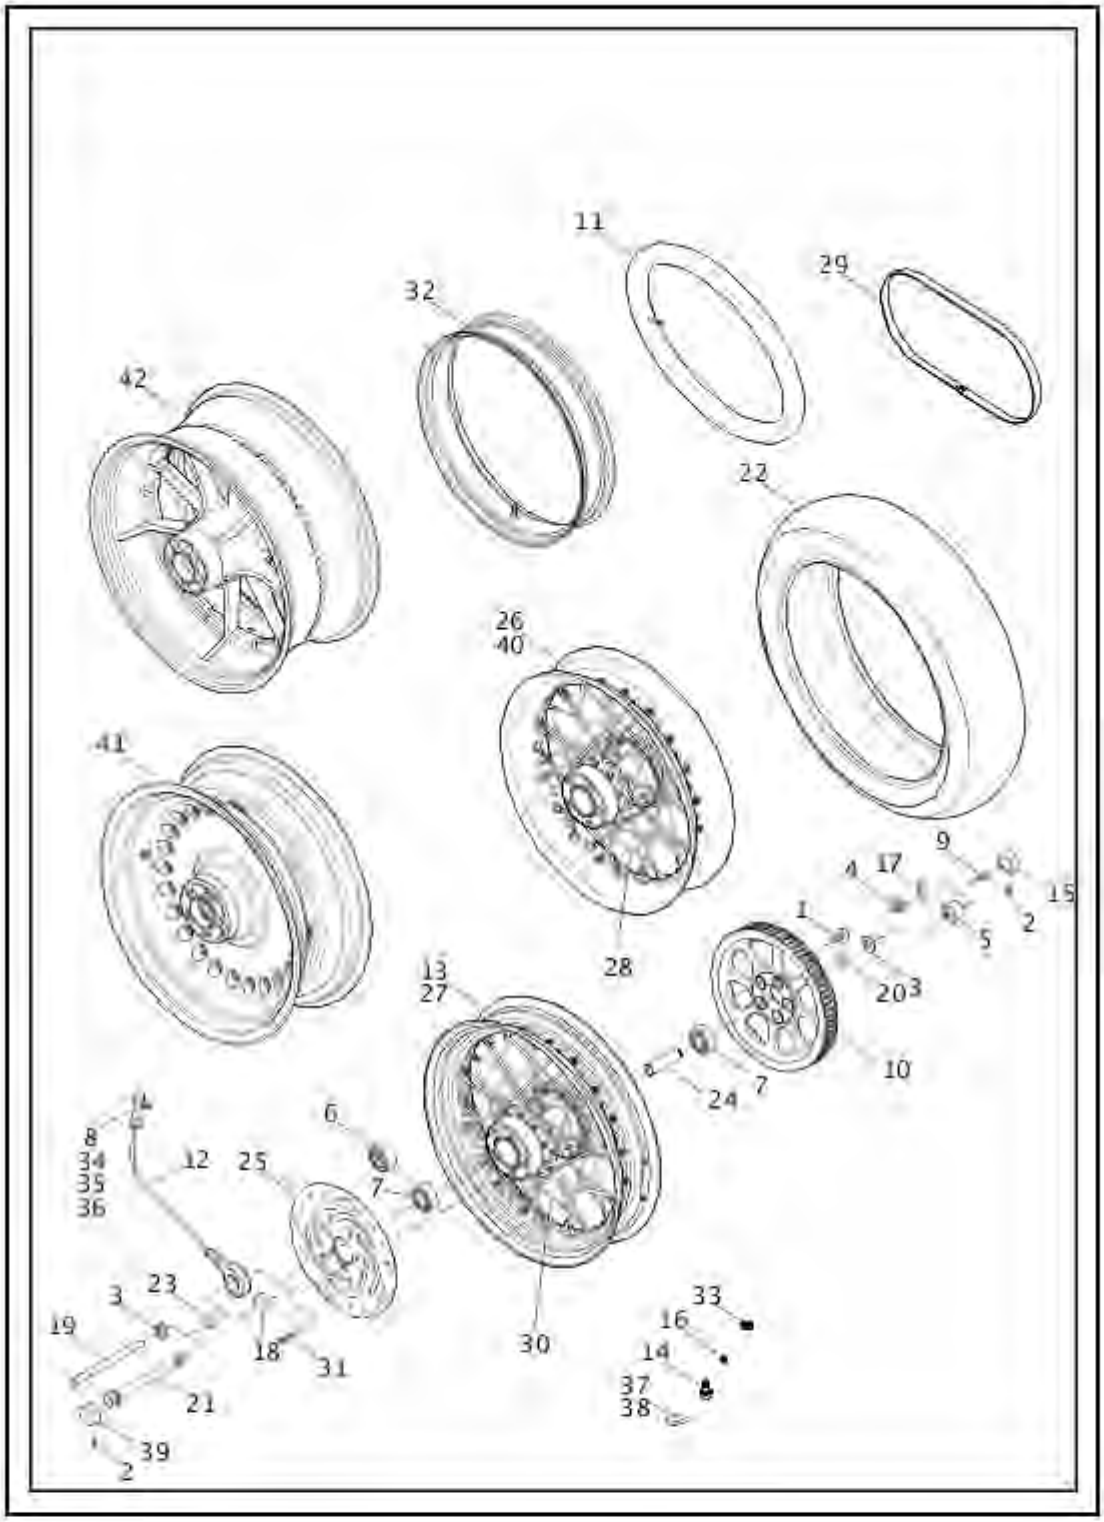

Index No.	Part No.	Description	Model(s)
37	95594-84B	WEIGHT, 5 g (black)	FLS, FXSB
39	12600177	COVER, nut, right (black)	FLSS, FLSTFBS
41	40900182	WHEEL ASSEMBLY, rear, 17 in disc, without bearings and sleeve (black)	FLSTFBS, FLSTFB
	43596-09	WHEEL ASSEMBLY, rear, 17 in disc, without bearings and sleeve (chrome)	FLSTF

FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN

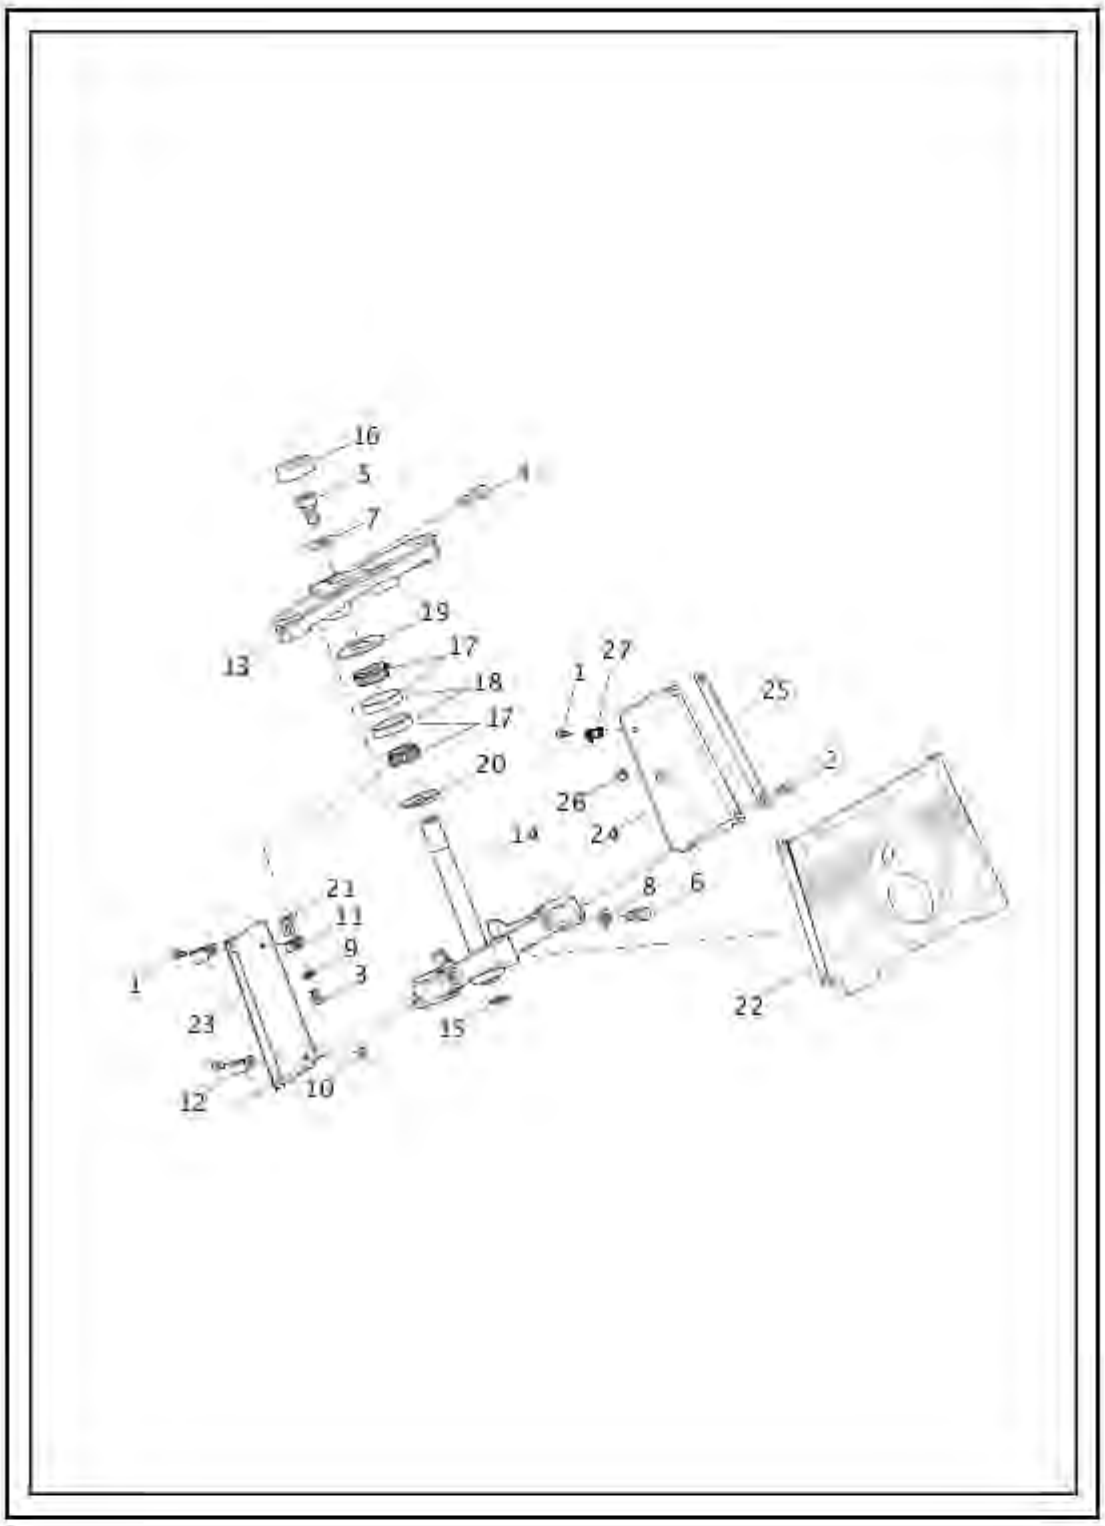

Index No.	Part No.	Description	Model(s)
9	7041	LOCKWASHER *(2)*	FLSS, FLSTFBS
	45900150	BRACKET, (upper)	FLSS, FLSTFBS
	45800081	CAP, fork stem	FLSS, FLSTFBS
27	10800101	CLAMP	FLSS, FLSTFBS

FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)

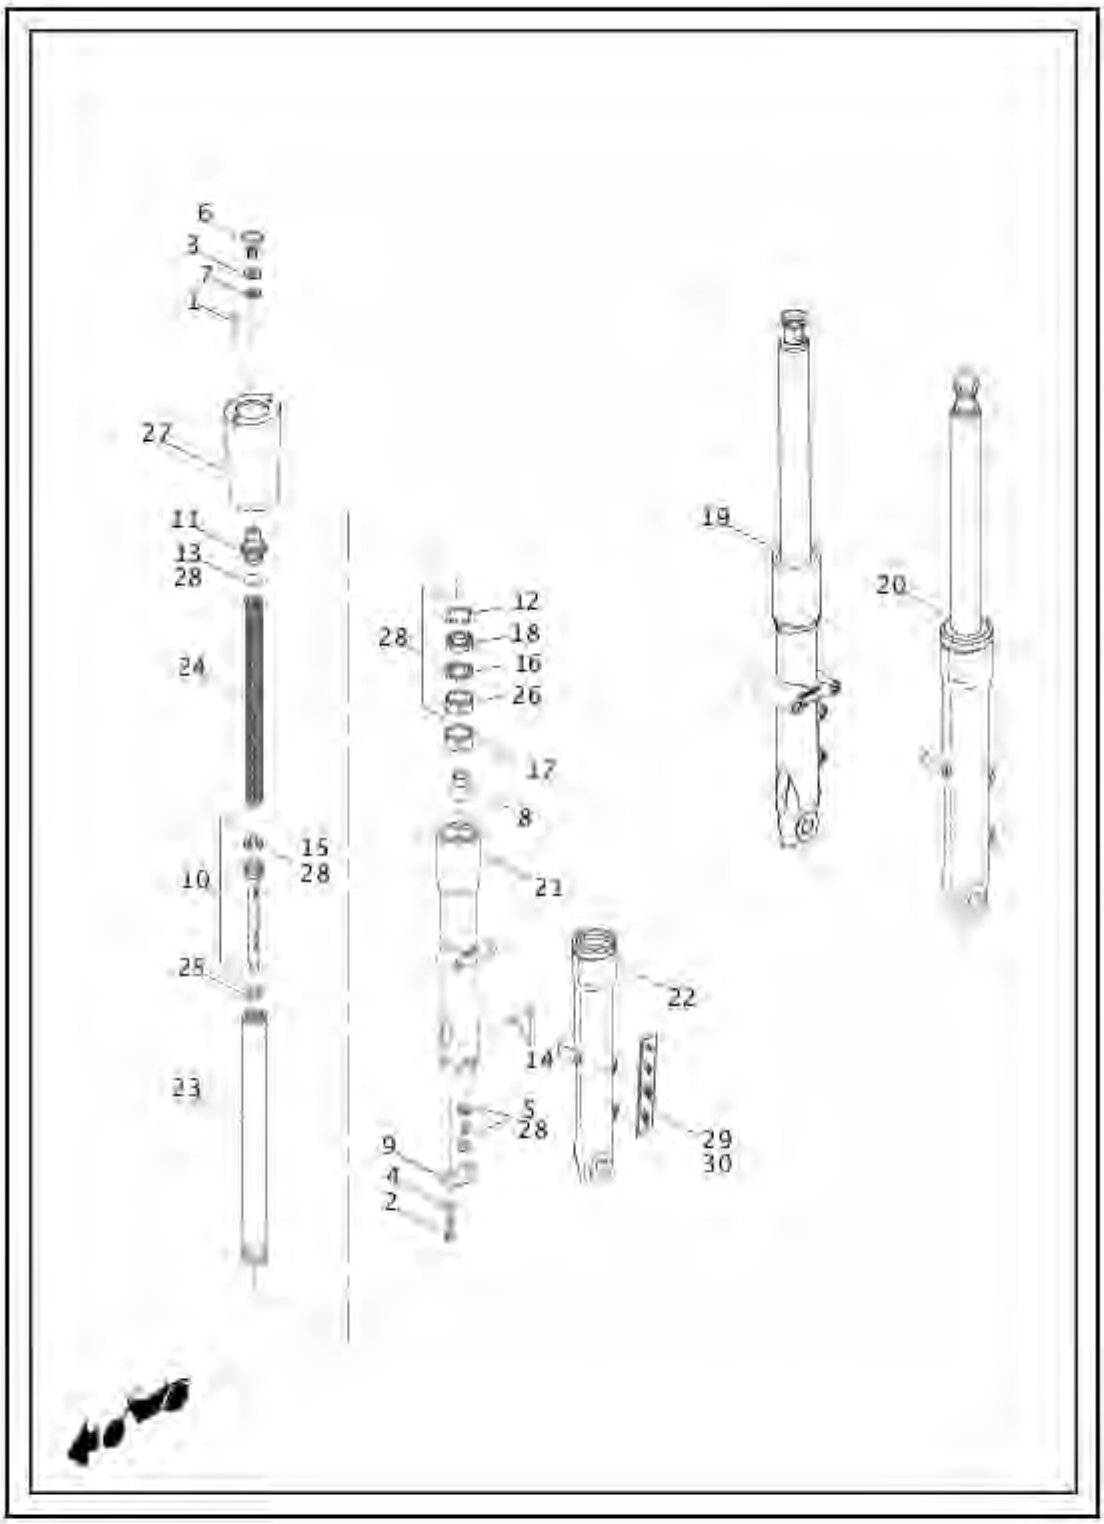

Index No.	Part No.	Description	Model(s)
	46550-03	AXLE CAP, right slider (black)	FLSS, FLSTFBS

FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)

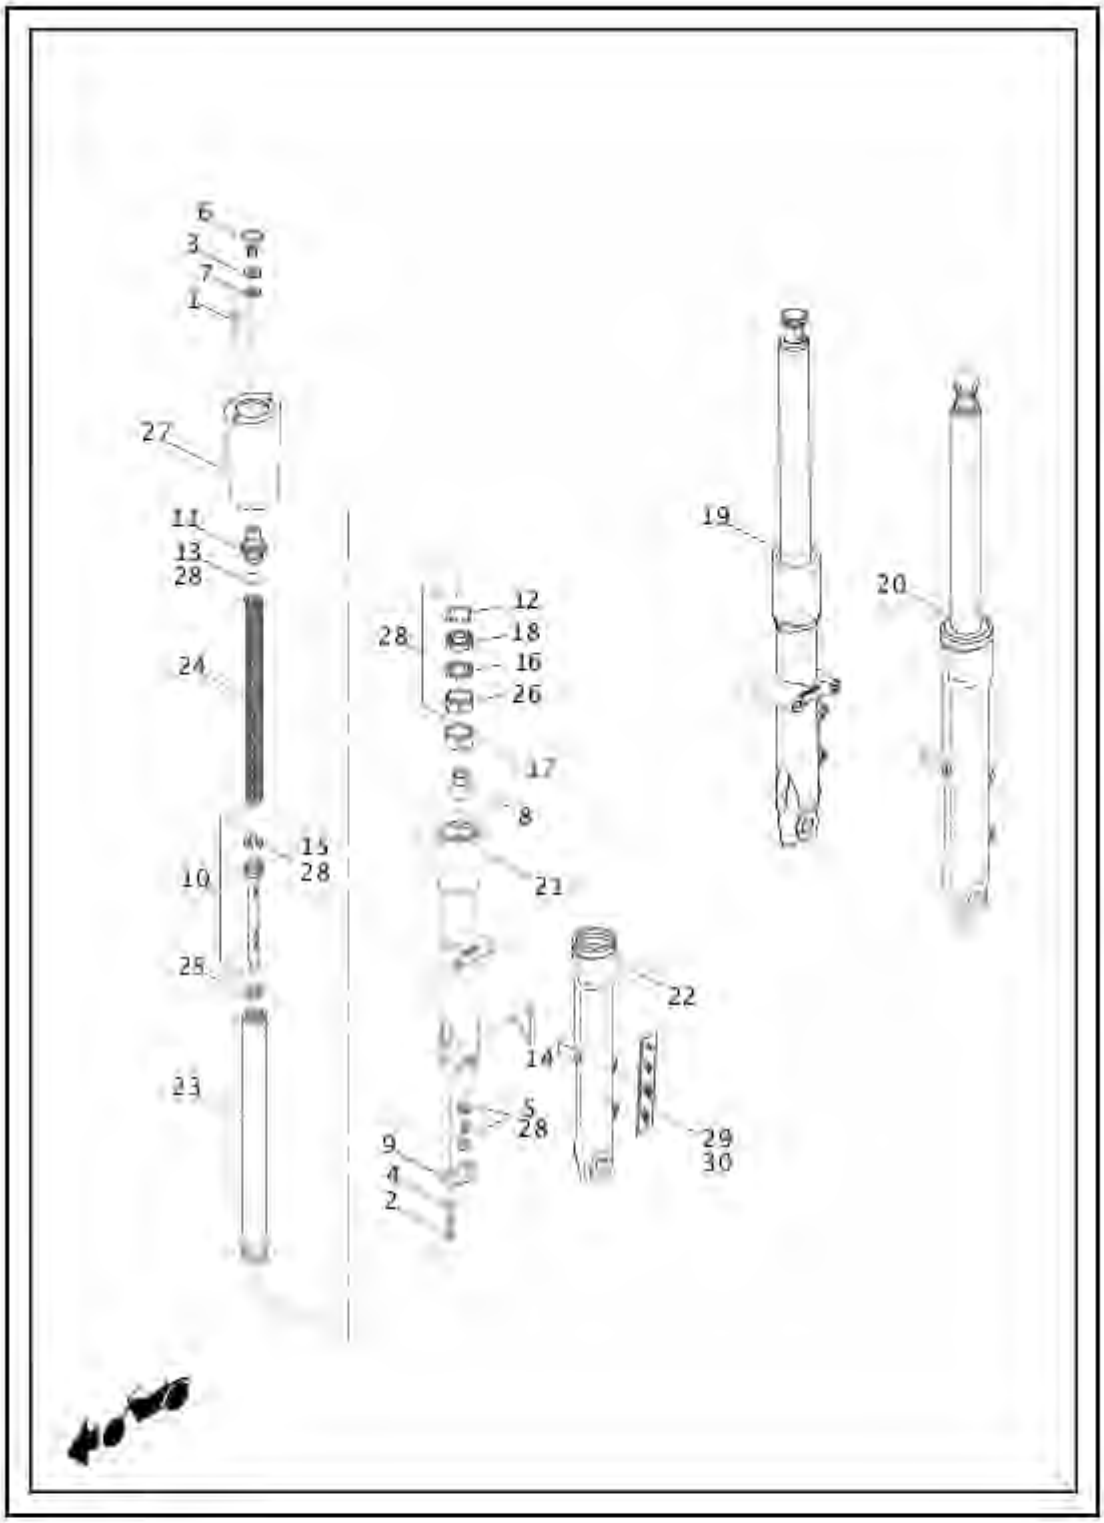

Index No.	Part No.	Description	Model(s)
	45400147	FORK SLIDER AND TUBE ASSEMBLY, (right) (black)	FLSS, FLSTFBS
	45400148	FORK SLIDER AND TUBE ASSEMBLY, (left) (black)	FLSS, FLSTFBS
	45500367	SLIDER ASSEMBLY, (right) (black)	FLSS, FLSTFBS
	46541-02	COVER, slider (black) *(2)*	FLSS, FLSTFBS

FORK, REAR AND SHOCK ABSORBERS

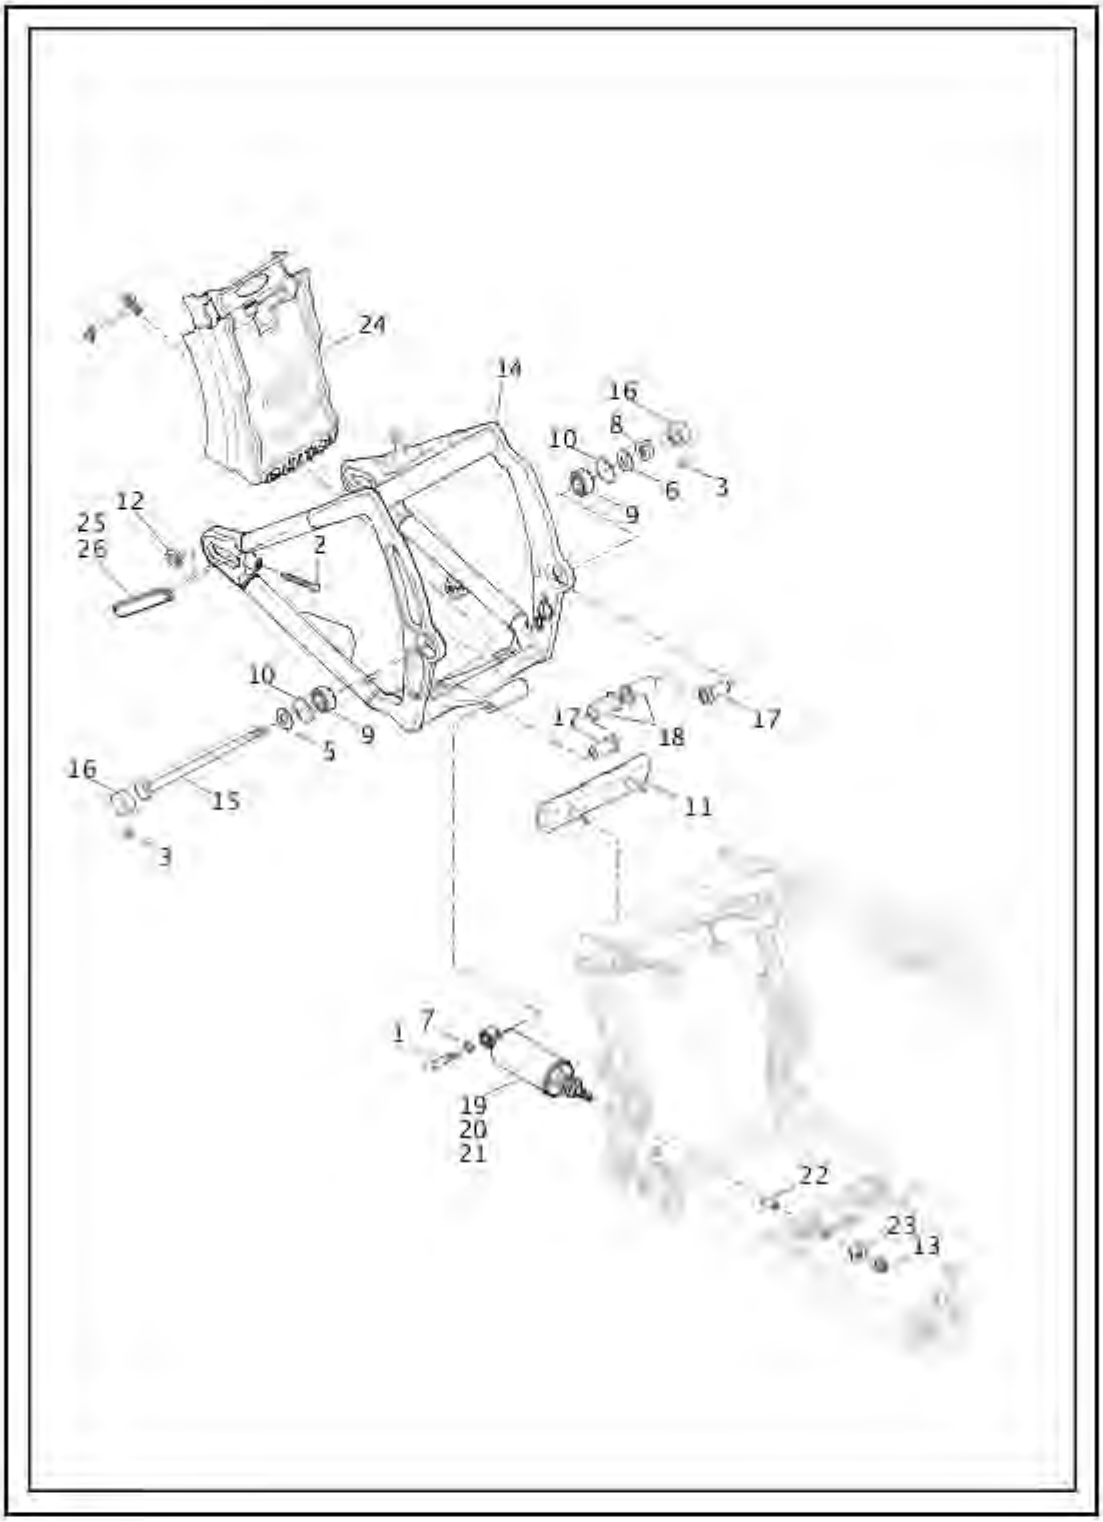

Index No.	Part No.	Description	Model(s)
3	4636	SET SCREW	FLSS, FLSTFBS
16	47683-09	COVER, bolt (black)	FLSS, FLSTFBS

SEATS

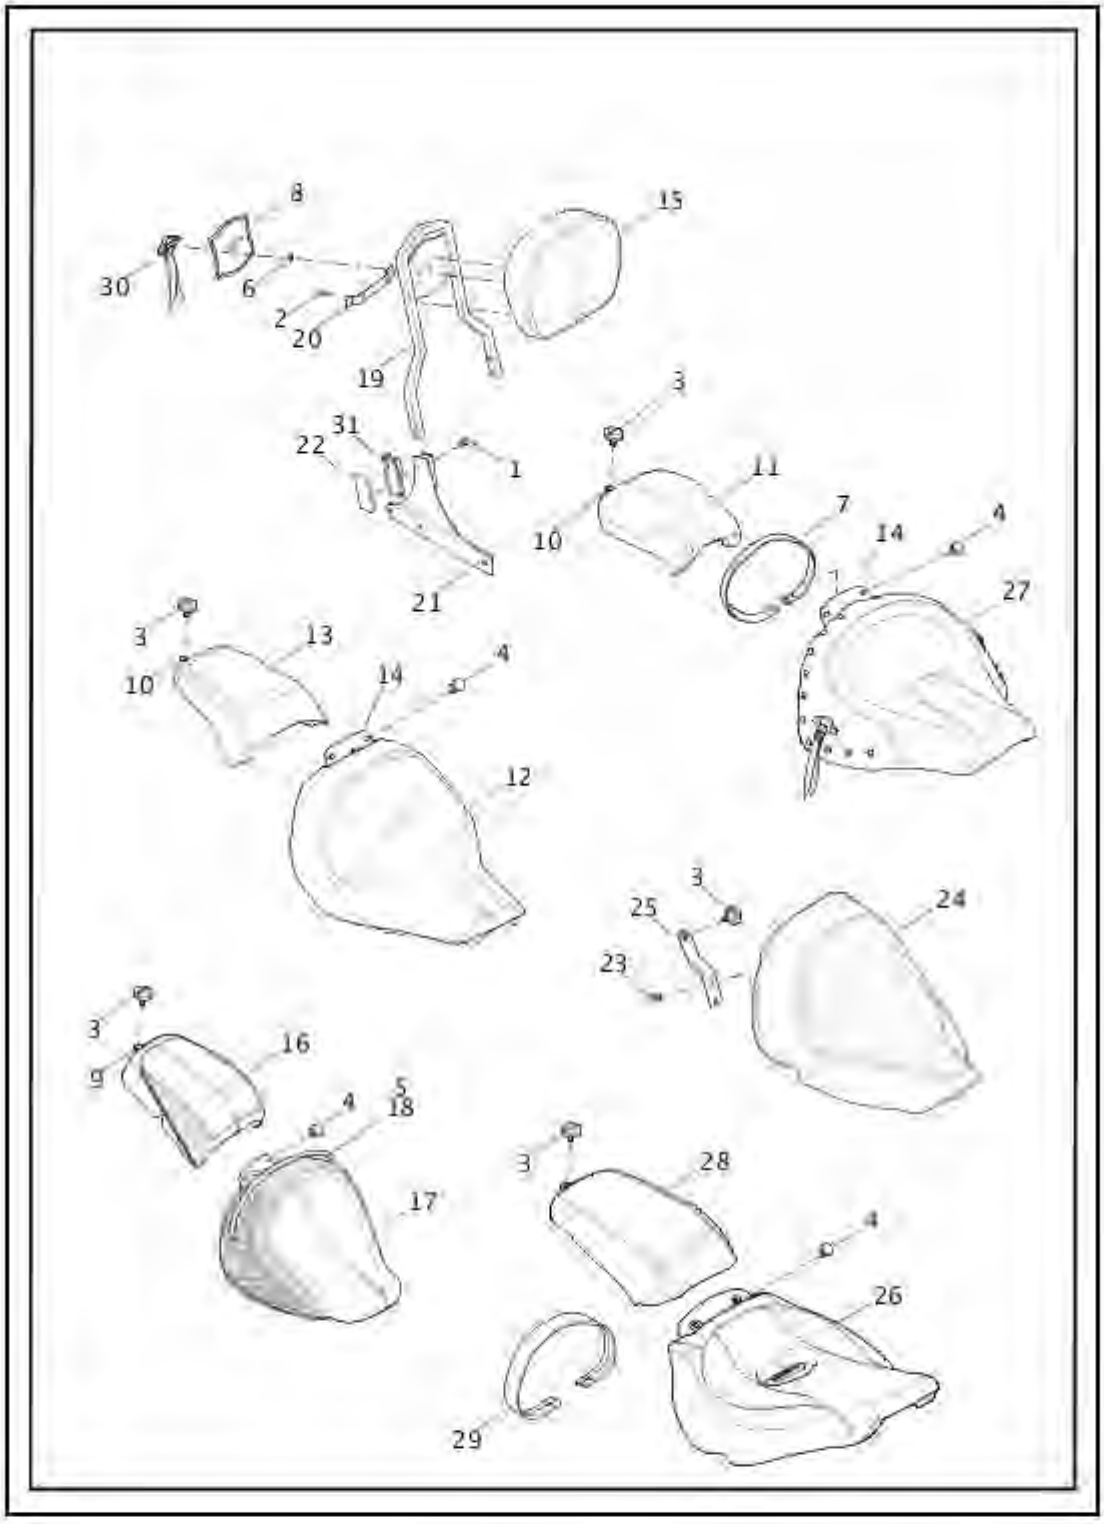

Index No.	Part No.	Description	Model(s)
26	52000096	SEAT	FXSB
27	52000222	SEAT ASSEMBLY	FLSTC
28	52400065	PILLION	FXSB
29	52400072	PASSENGER STRAP	FXSB
30	61400327	CONCHO	FLSTC

FENDER, FRONT

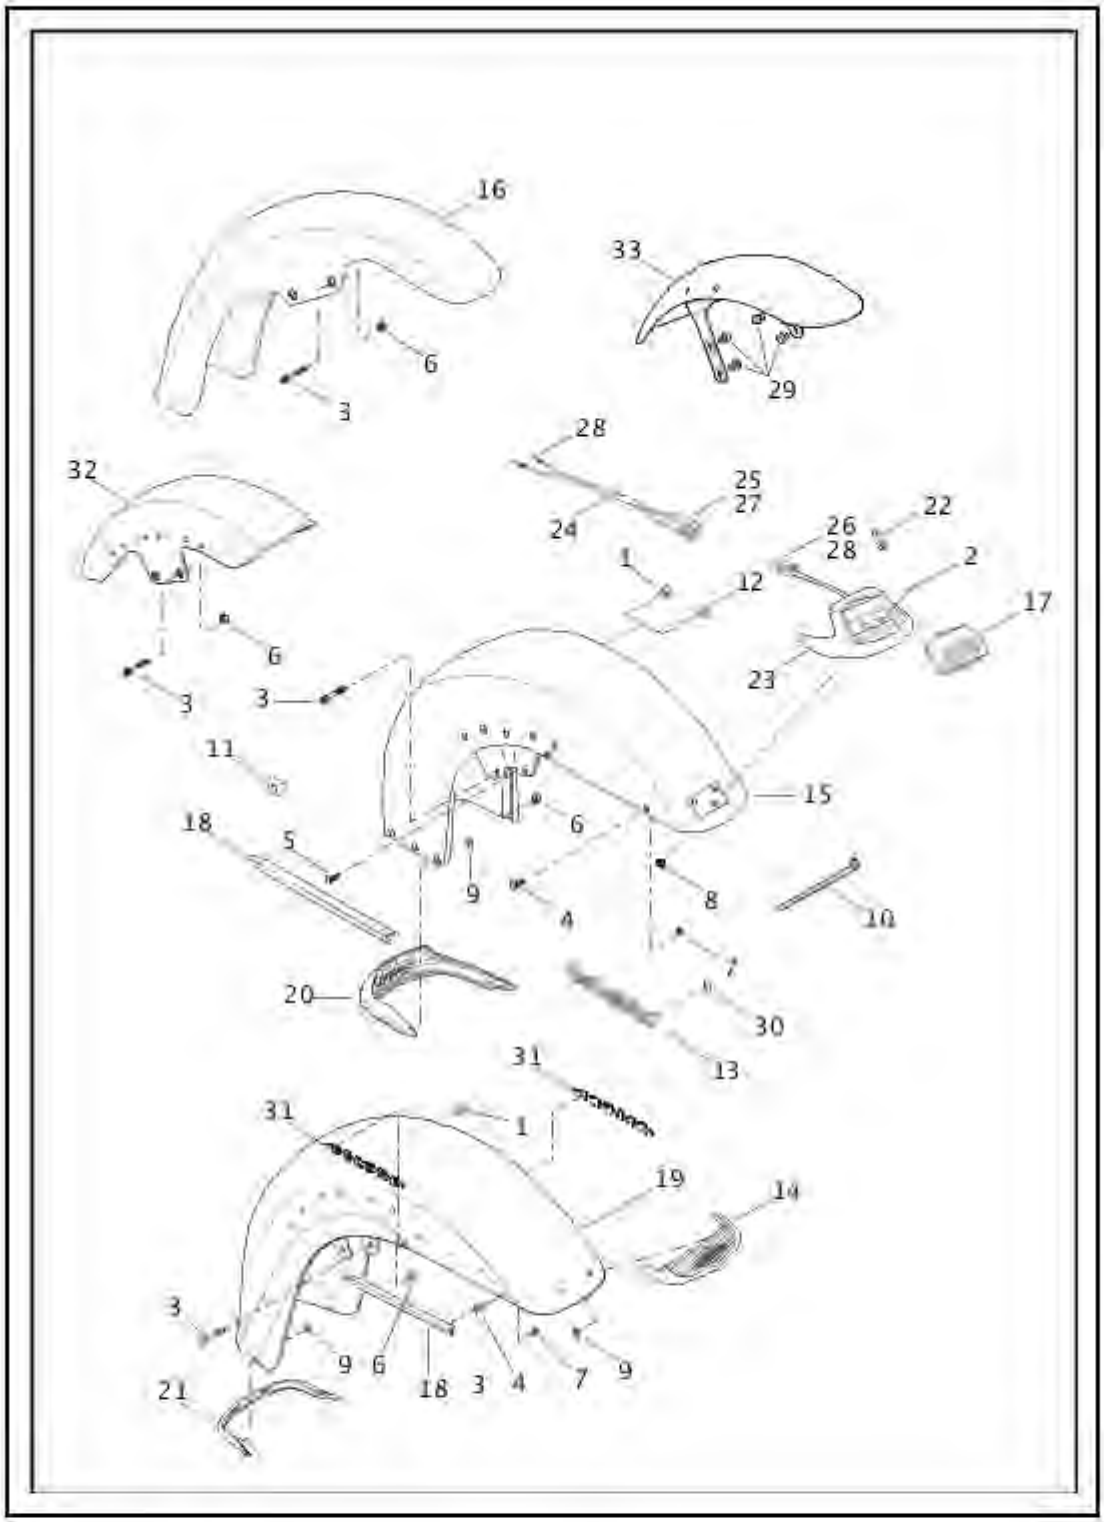

Index No.	Part No.	Description	Model(s)
31	14100756	NAMEPLATE *(2)*	FLSTN

FENDERS AND SUPPORTS, REAR - FLSTC

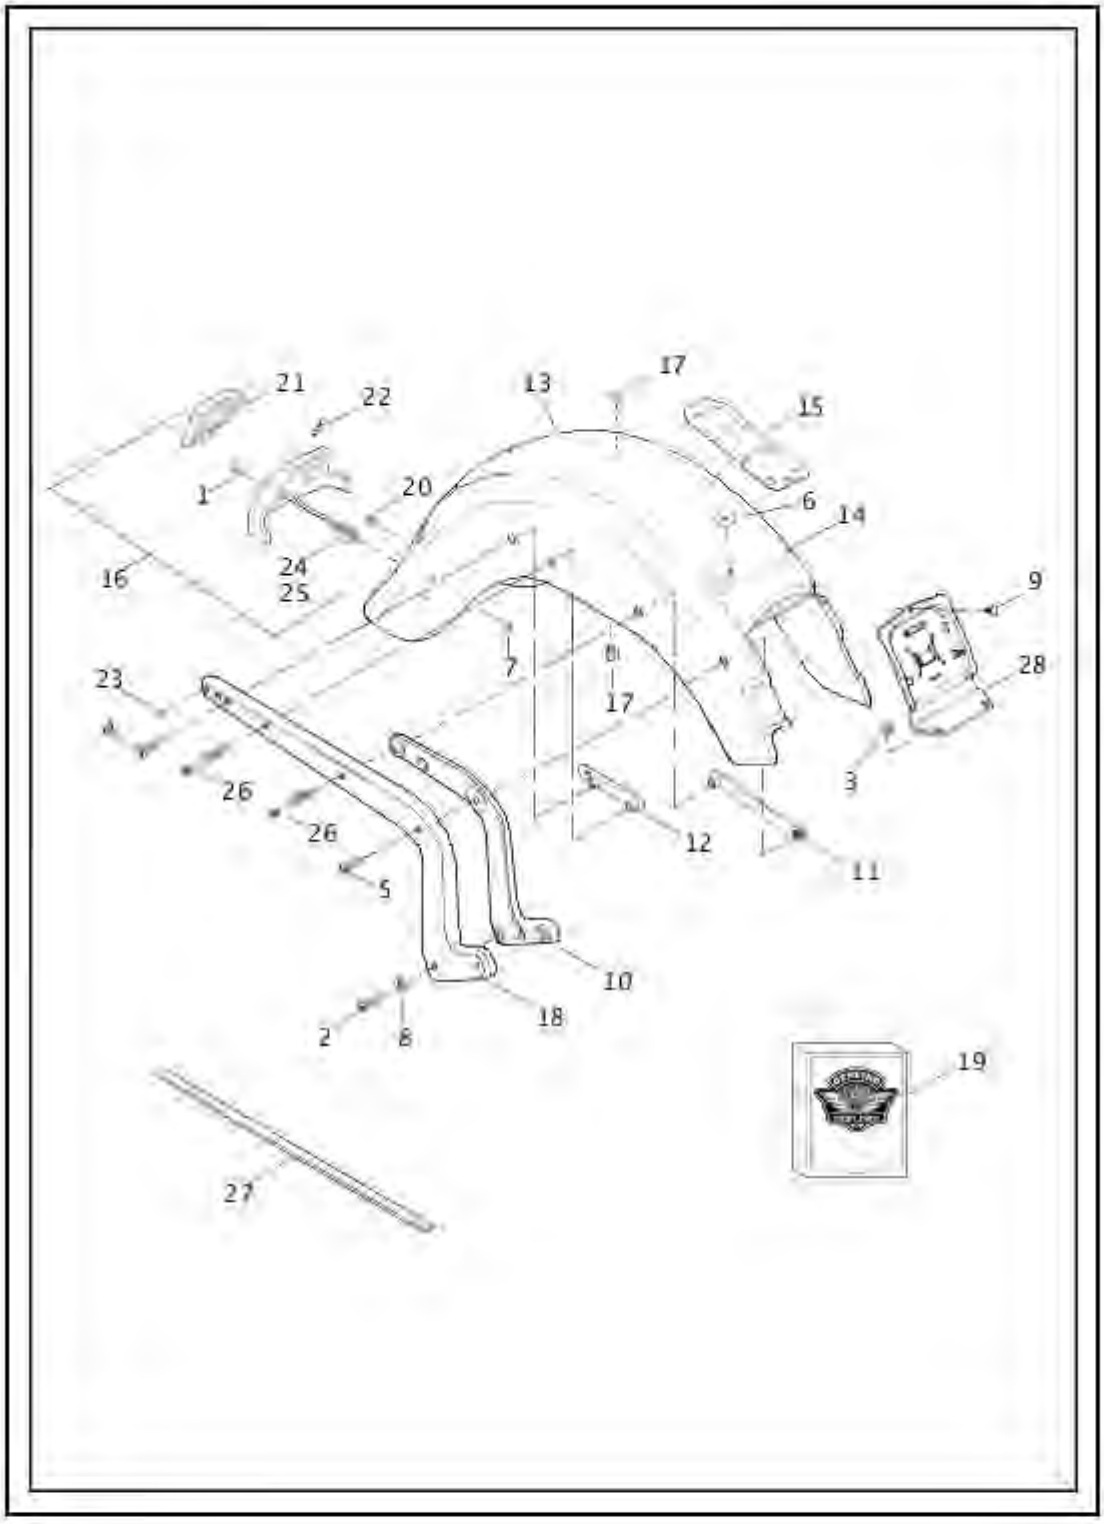

Index No.	Part No.	Description	Model(s)
28	69200626	CADDY, ECM	FLSTC

FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS

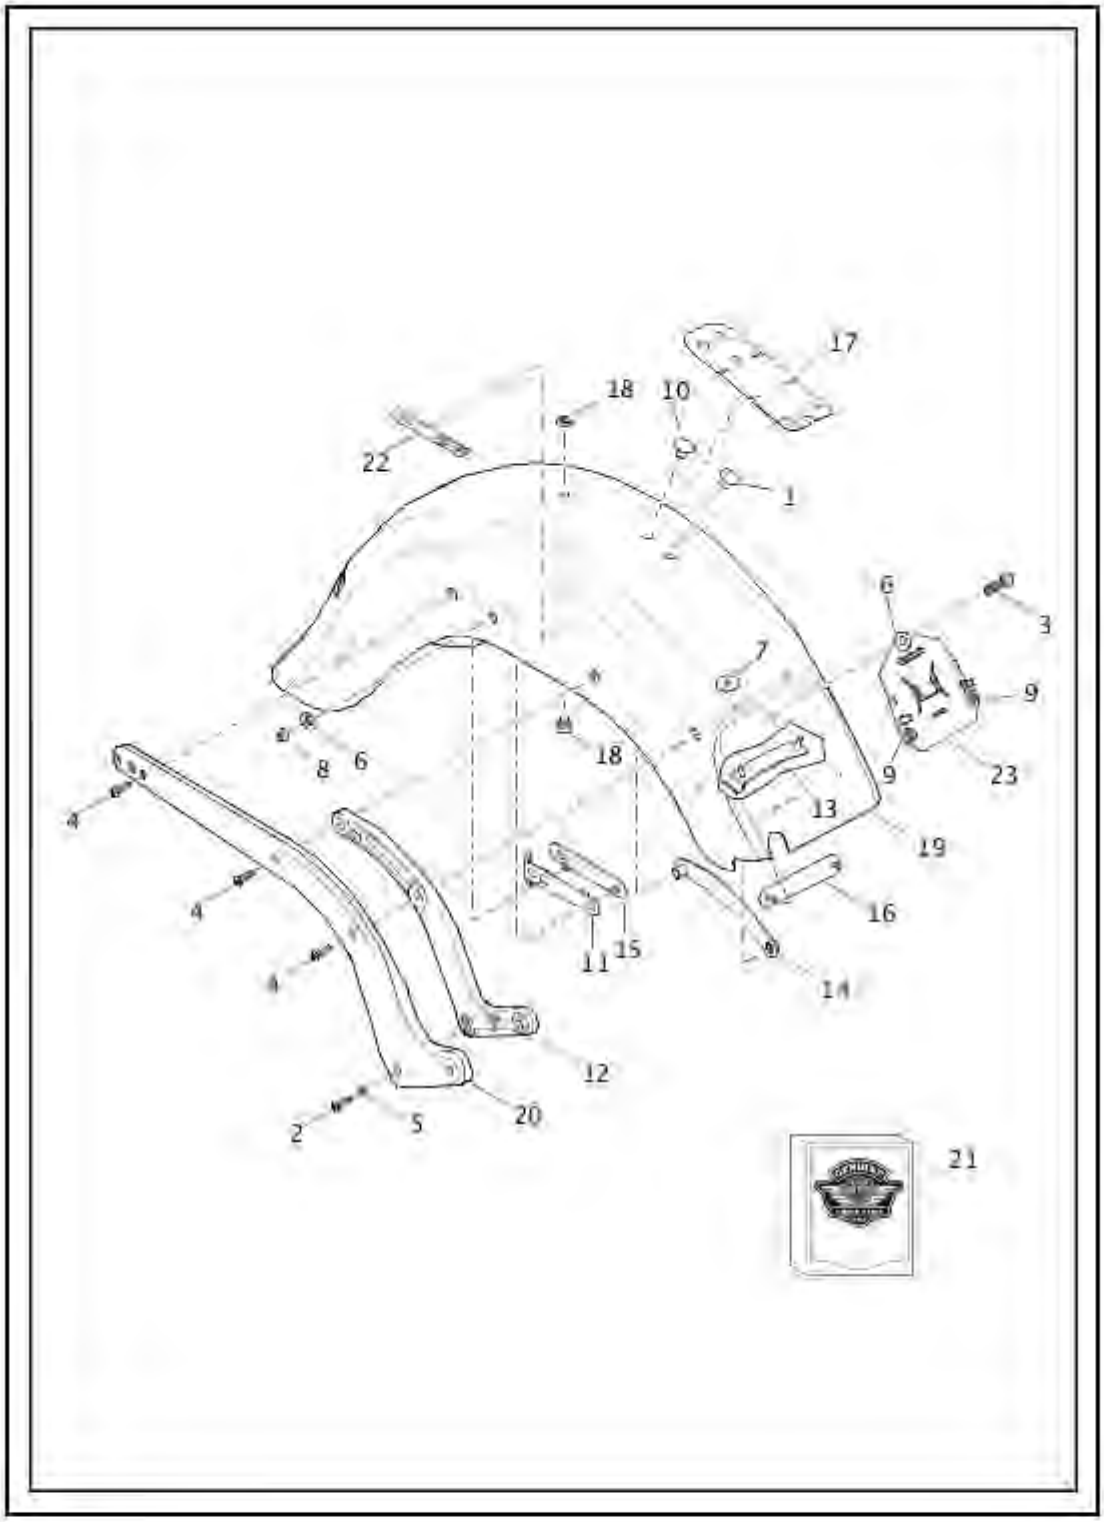

Index No.	Part No.	Description	Model(s)
23	69201084	CADDY, ECM	FLSTF, FLSTFB, FLSTFBS

FENDERS AND SUPPORTS, REAR - FLSTN

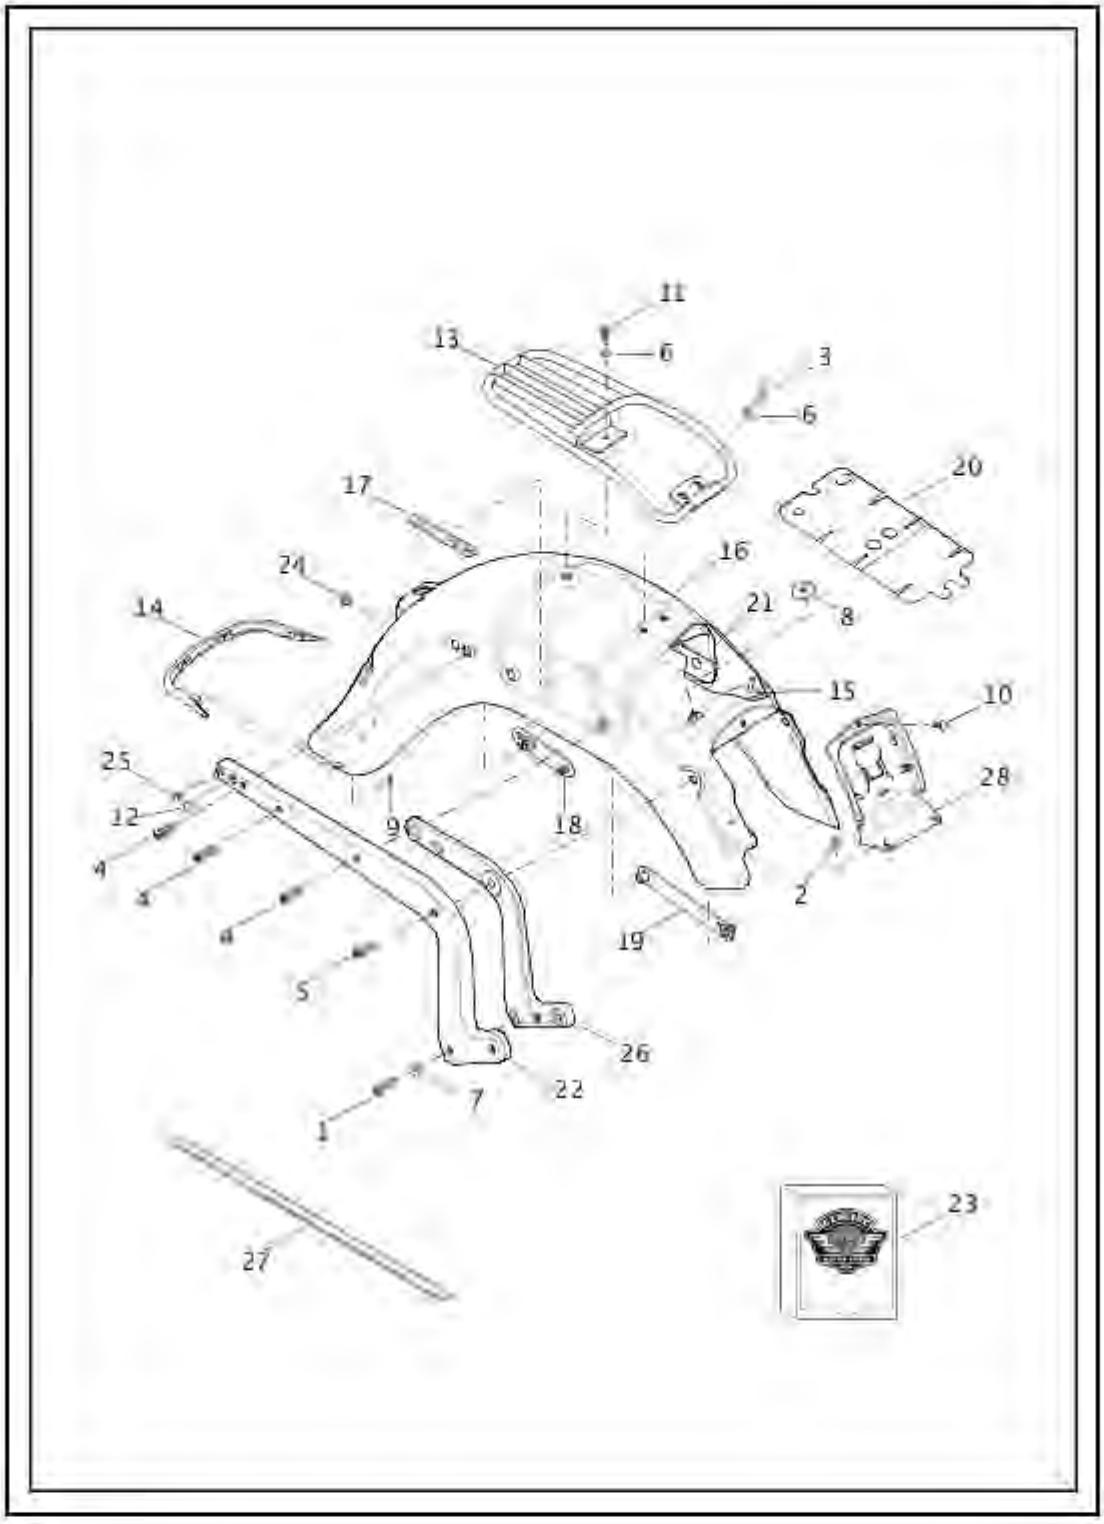

Index No.	Part No.	Description	Model(s)
28	69200626	CADDY, ECM	FLSTN

FENDERS AND SUPPORTS, REAR - FLS AND FLSS

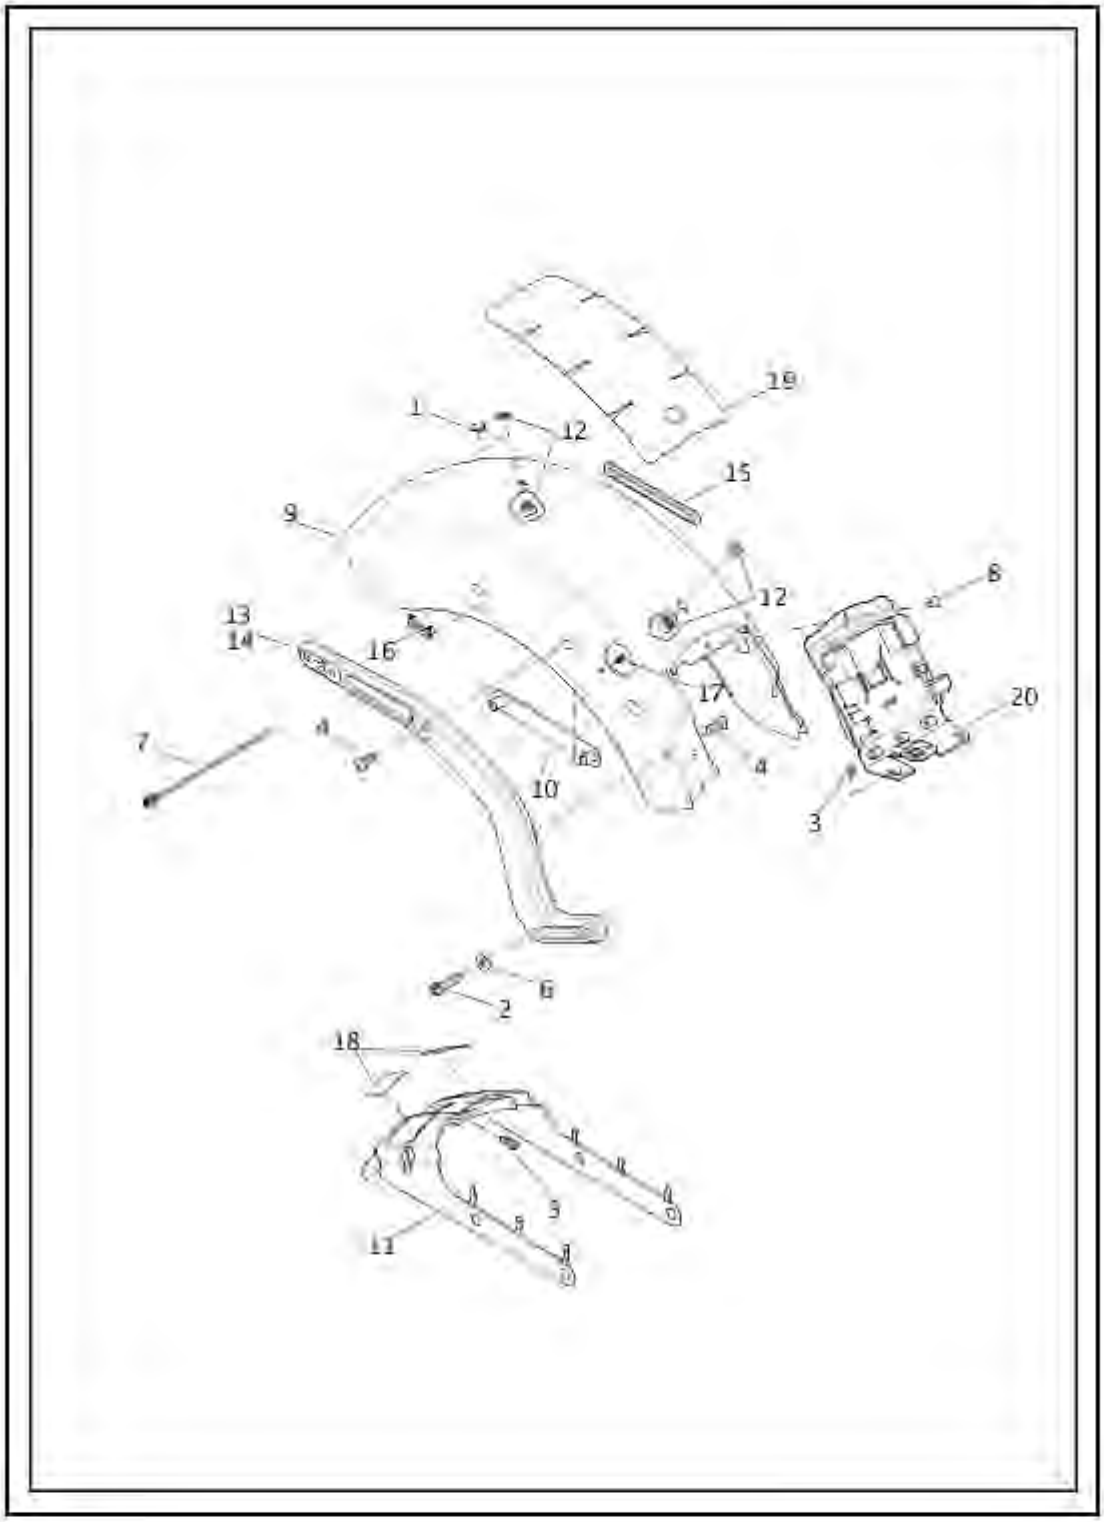

Index No.	Part No.	Description	Model(s)
20	69201085	CADDY, ECM	FLS, FLSS

LICENSE PLATE BRACKETS - FXSB

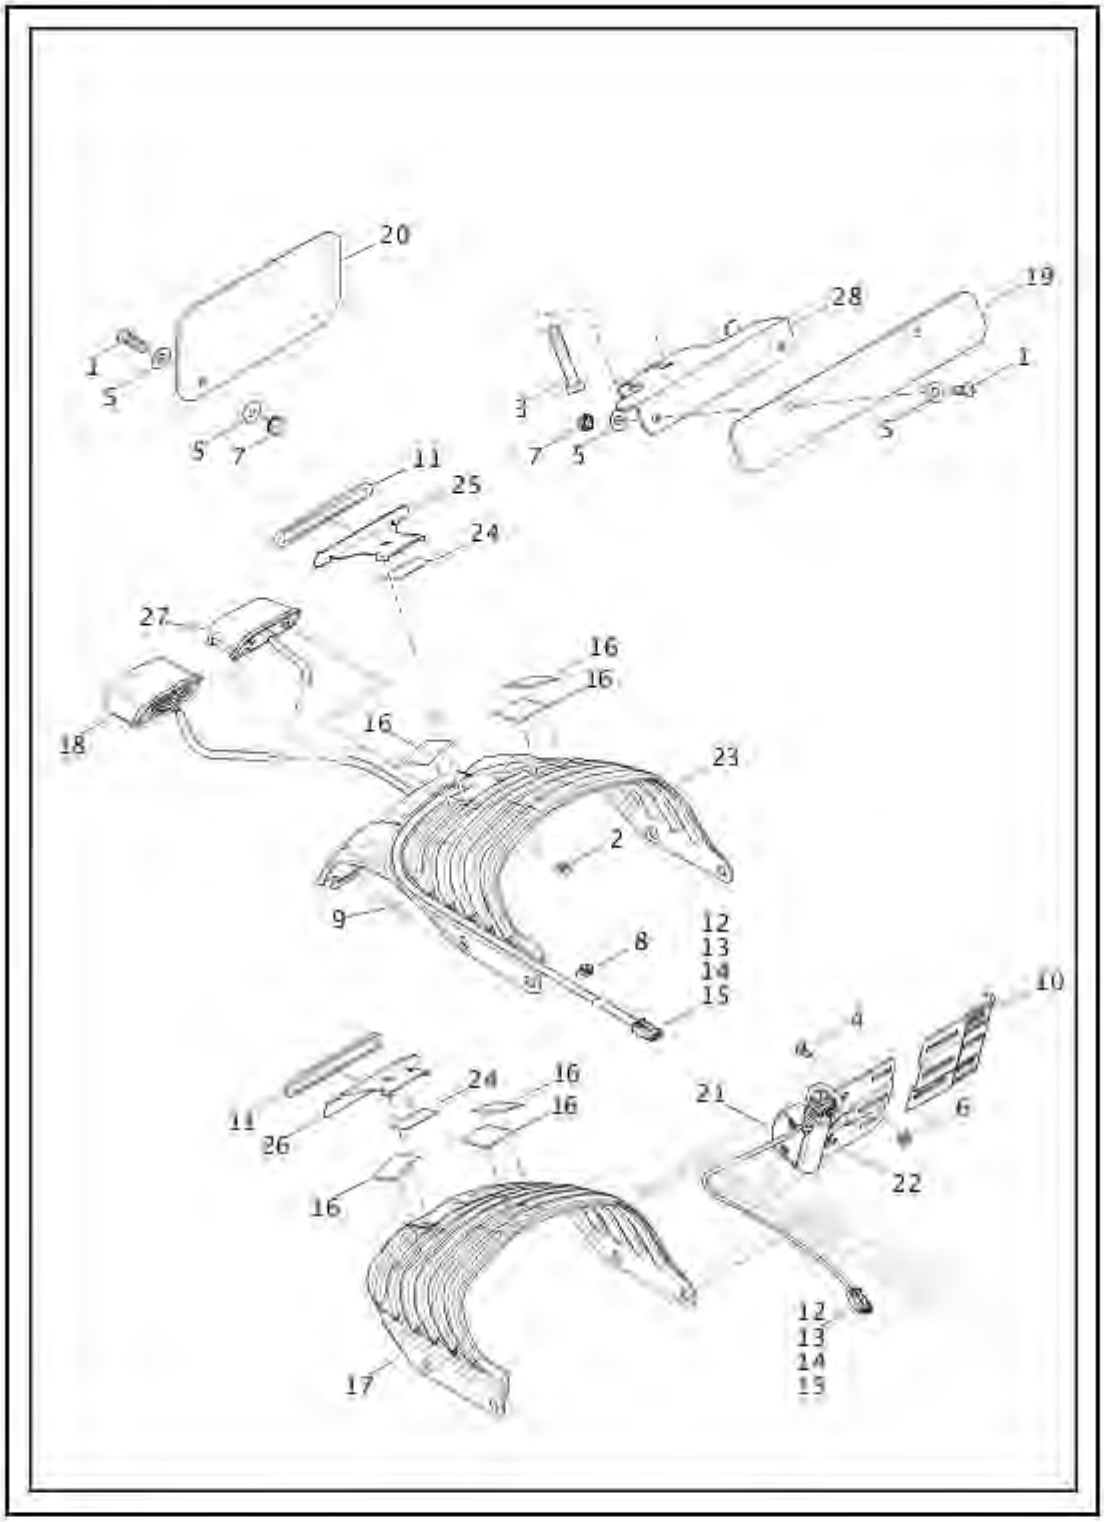

Index No.	Part No.	Description	Model(s)
16	11100103	TAPE, pad mounting *(3)*	FXSB
28	67900283	BRACKET, license plate, front (India)	FXSB

FUEL TANK

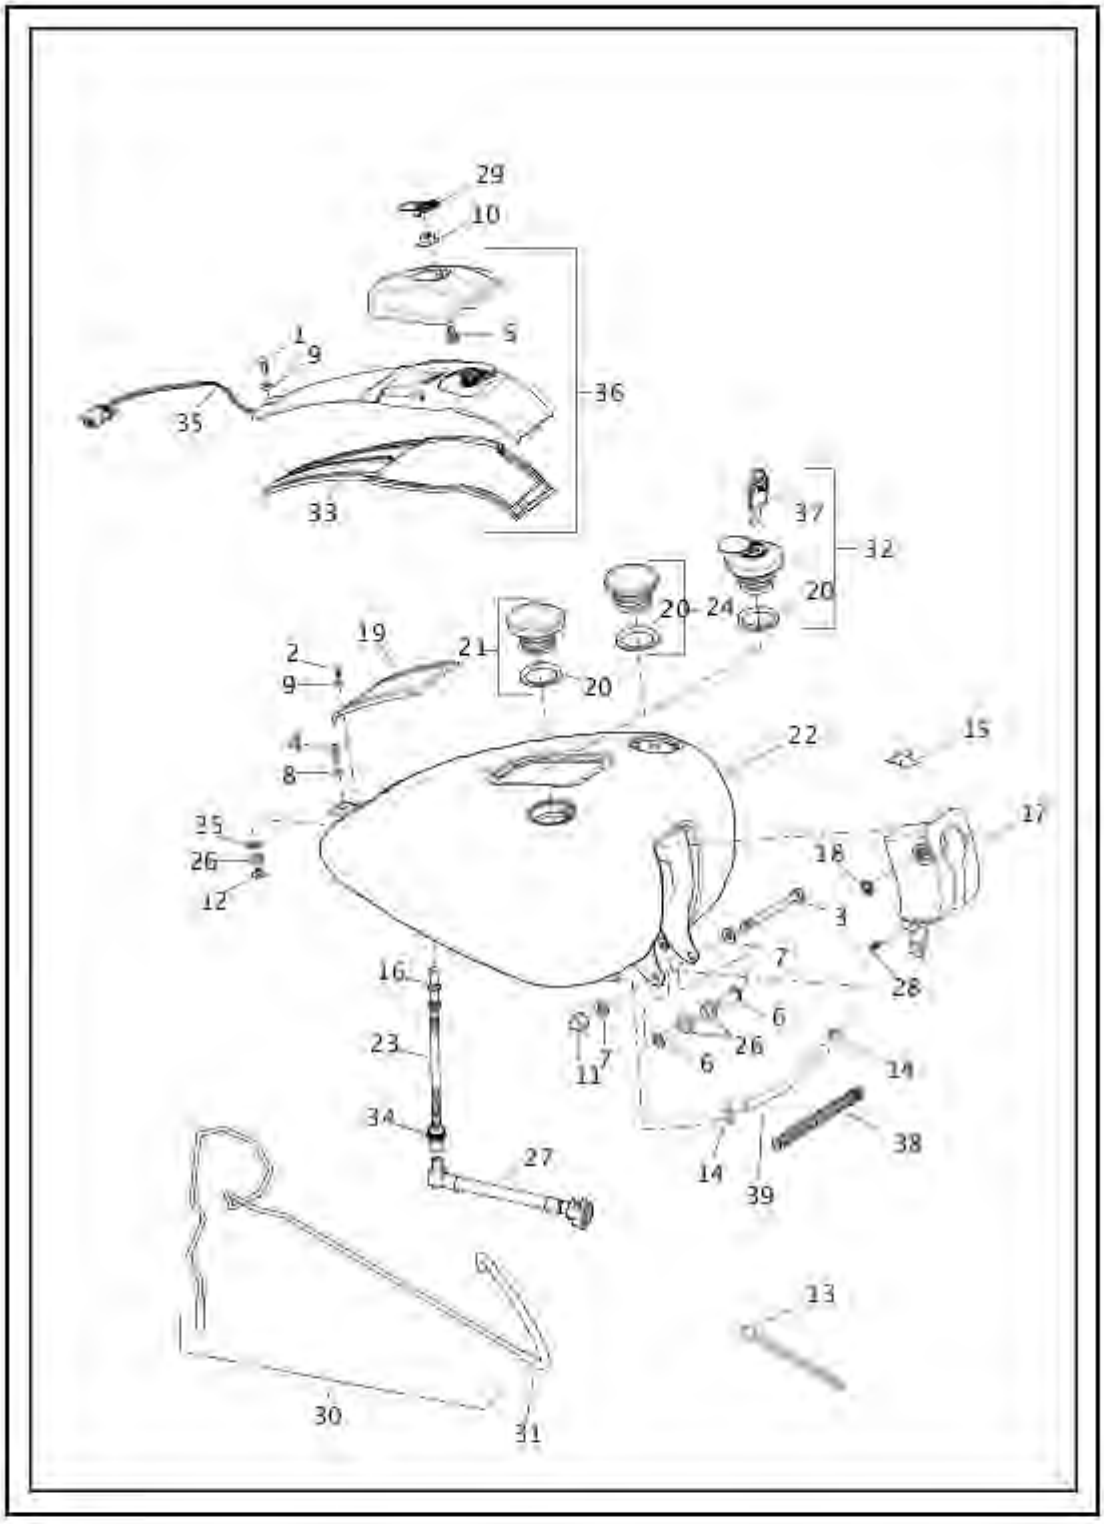

Index No.	Part No.	Description	Model(s)
	61300537	TRIM PANEL, fuel tank	FLSTC

INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN

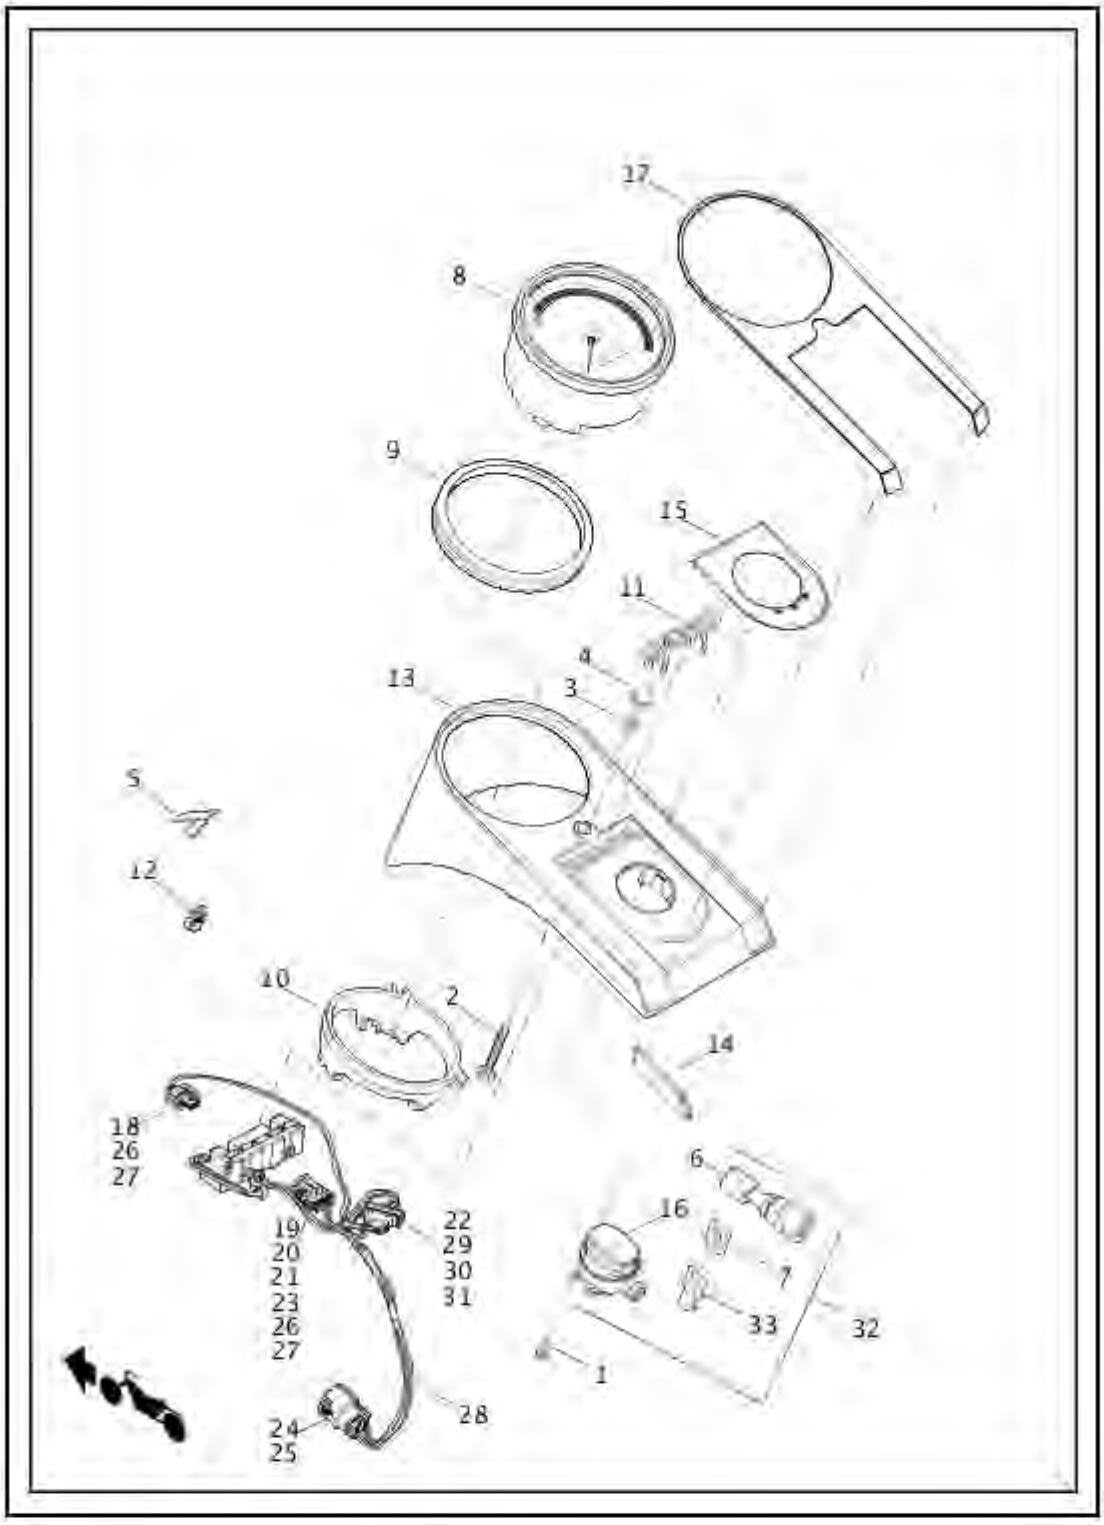

Index No.	Part No.	Description	Model(s)
	67439-11C	SPEEDOMETER, mph	FLSTN
	70900622	INSTRUMENT PANEL, (gloss black)	FLSTFBS

INSTRUMENTS - FXSB

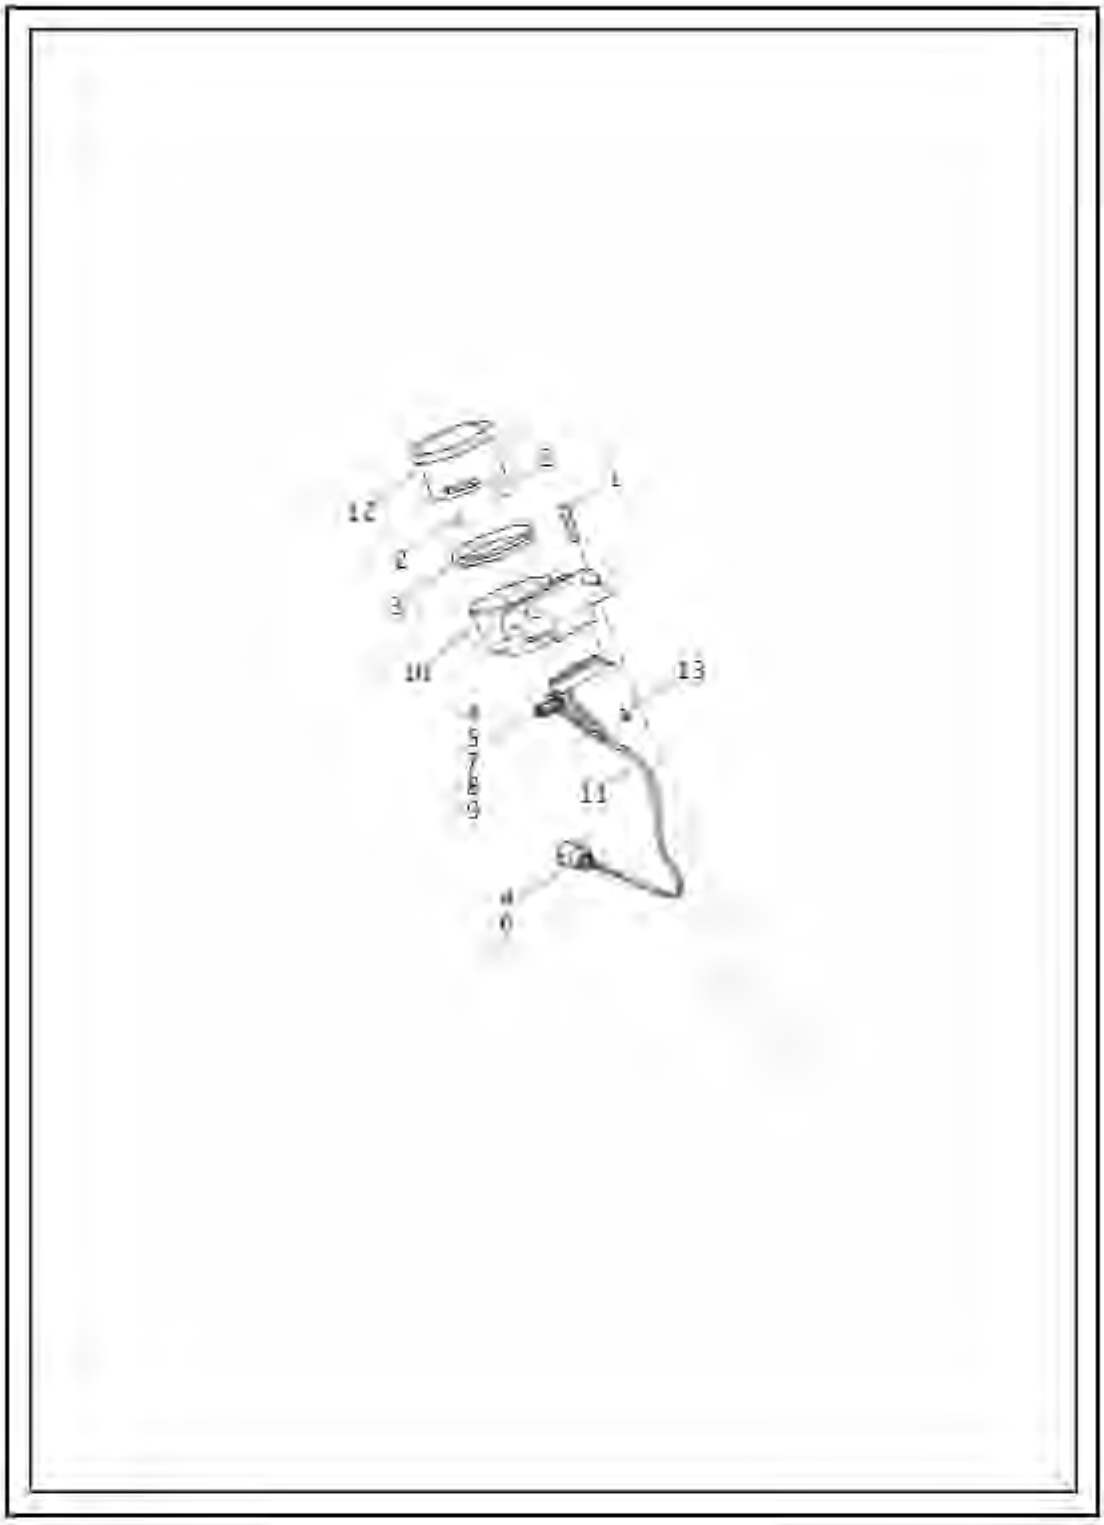

Index No.	Part No.	Description	Model(s)
12	70900369C	SPEEDOMETER, mph	FXSB
	70900371A	SPEEDOMETER, mph/km/h (England)	FXSB

HEADLAMP (2 OF 2)

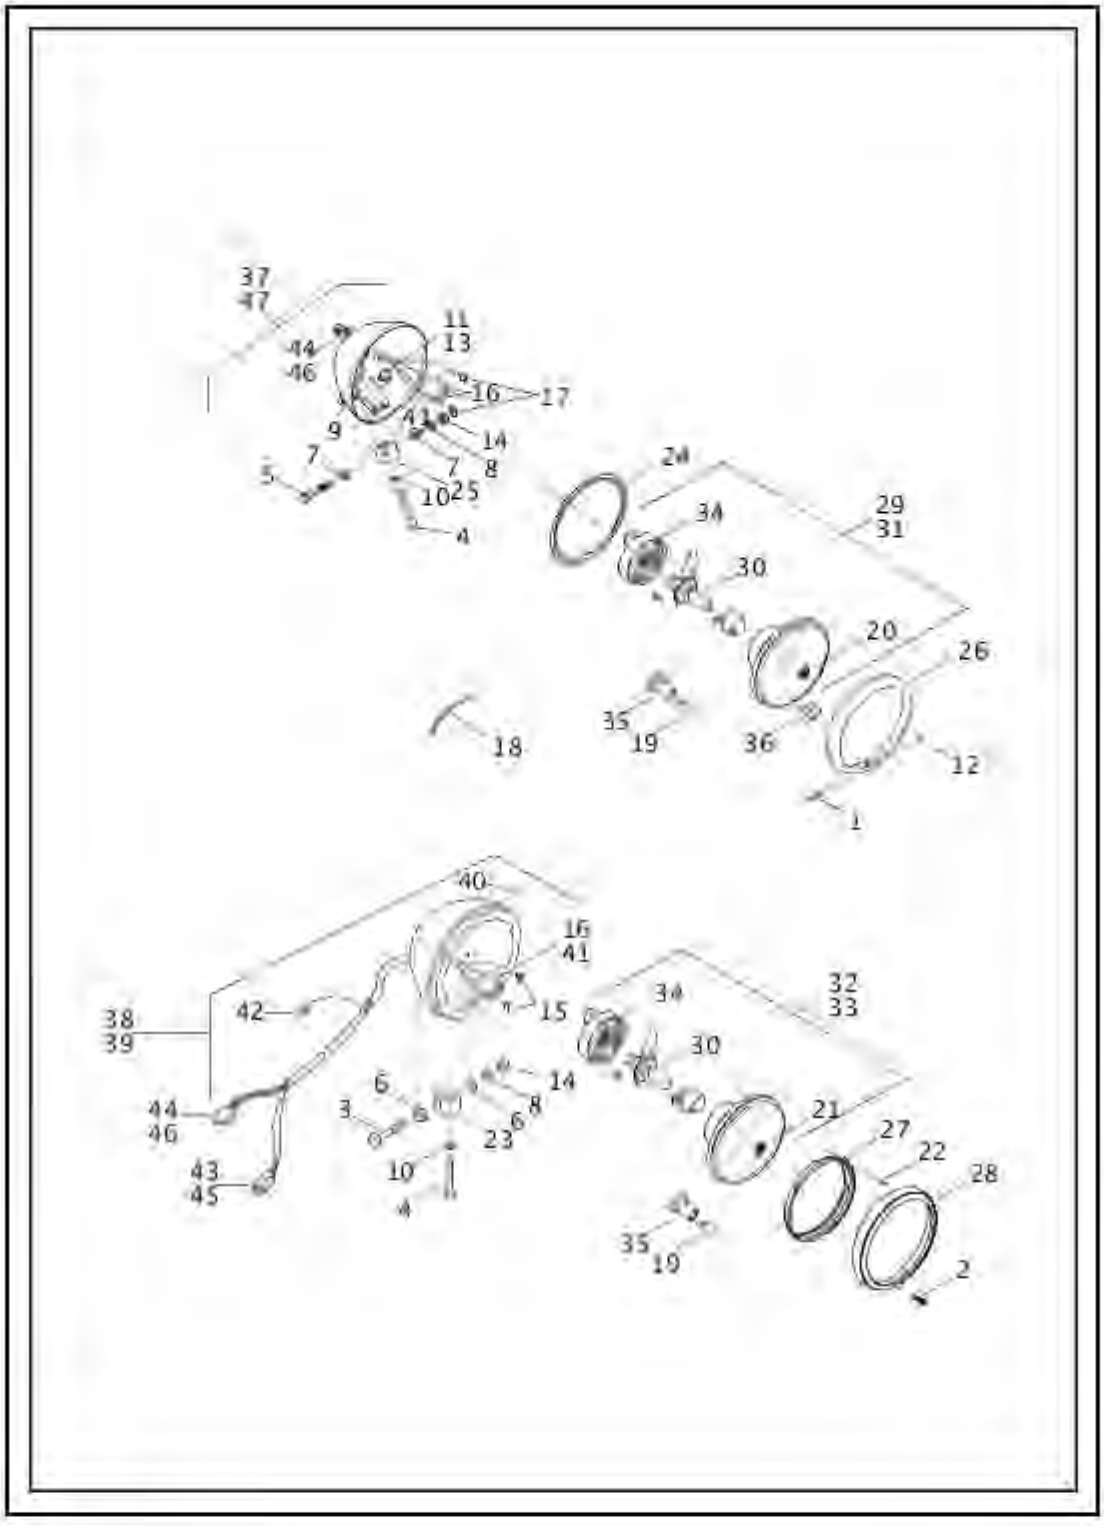

Index No.	Part No.	Description	Model(s)
	67700115	TRIM RING, (black)	FLSS, FLSTFBS
29	68297-05A	REFLECTOR ASSEMBLY, 5-3/4 in	FXSB
31	68335-05A	REFLECTOR ASSEMBLY, left dip, 5-3/4 in (Australia, Brazil, England, Japan)	FXSB
	68341-05A	REFLECTOR ASSEMBLY, right dip, 5-3/4 in (Asia-Pacific, HDI)	FXSB
32	68342-	LENS ASSEMBLY, 7 in	FLSTC, FLSTF, FLSTN, FLSTFB, FLS,

TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB

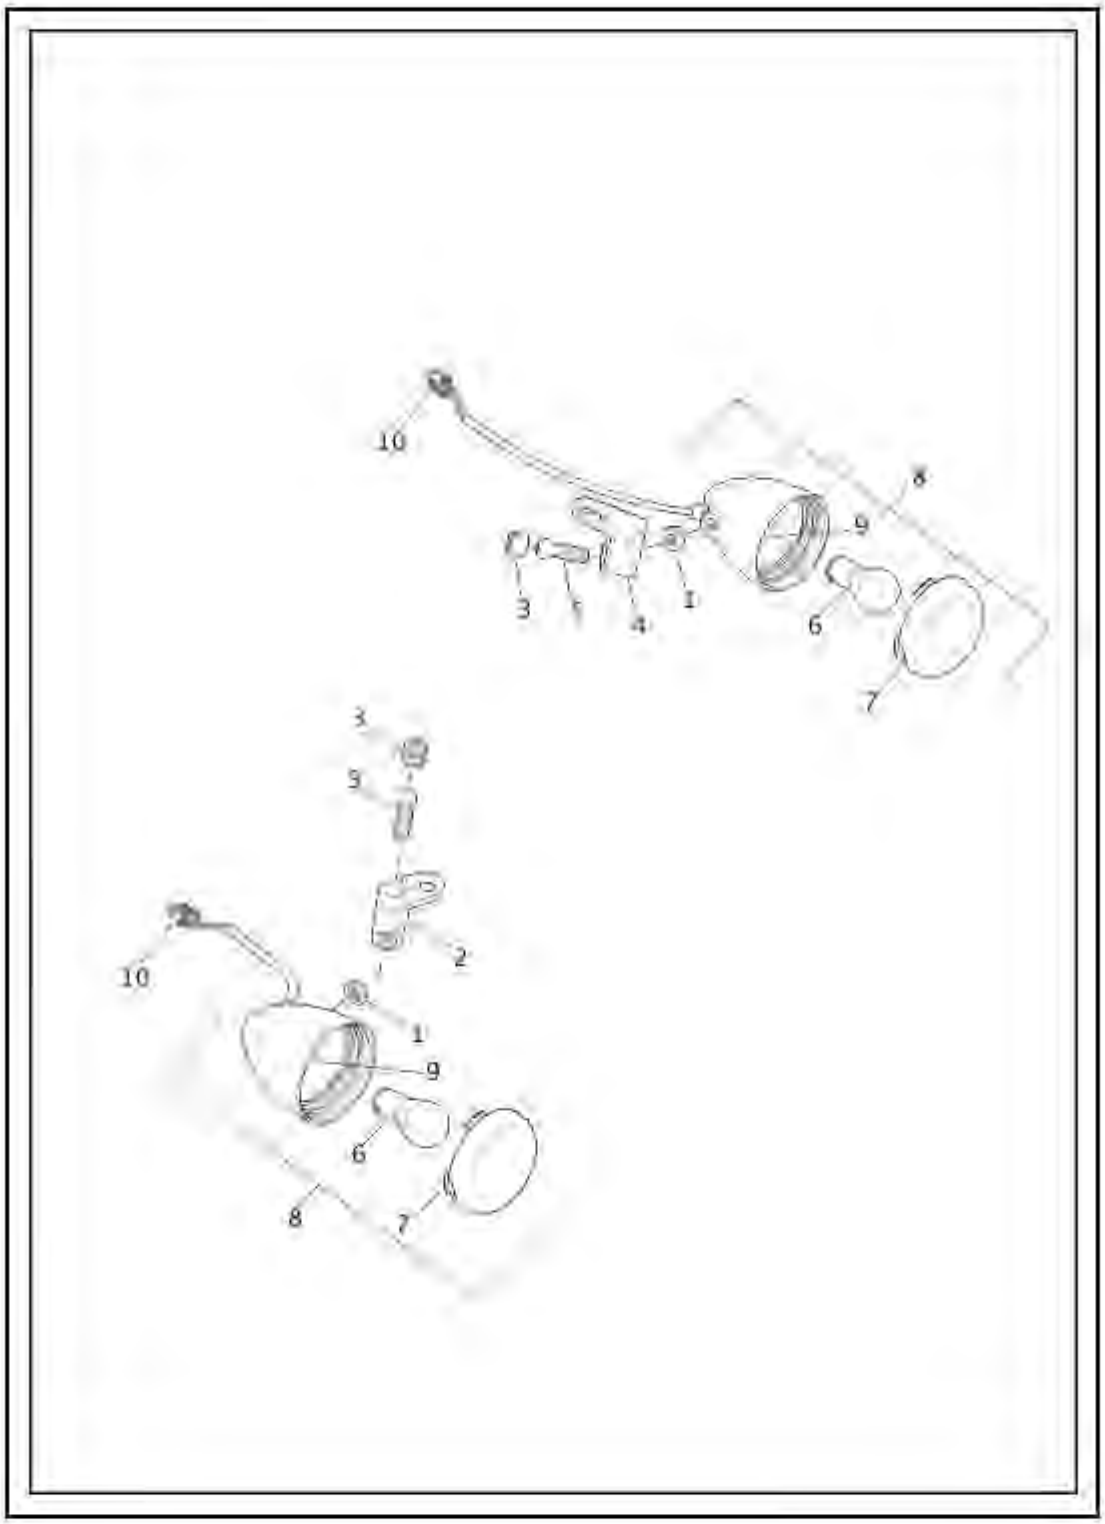

Index No.	Part No.	Description	Model(s)
	67800630	BRACKET, turn signal mount (right) (black)	FLSS, FLSTFBS
	67800628	BRACKET, turn signal mount (left) (black)	FLSS, FLSTFBS

8	67800141	TURN SIGNAL, with 68163-84, 68973-00, 67800148 (HDI) *(2)*	FLSTF
	67800519	TURN SIGNAL, with 68168-89A, 68973-00, 67800147 (chrome) *(2)*	FLSTF
	67800520	TURN SIGNAL, with 68168-89A, 68973-00, 67800147 (black) *(2)*	FXSB, FLSTFB, FLSTFBS
	67800521	TURN SIGNAL, with 68163-84, 68973-00, 67800148 (HDI) (black) *(2)*	FXSB, FLSTFB, FLSTFBS
	67800523	TURN SIGNAL, with 68168-89A, 68973-00, 67800147 (gloss black) *(2)*	FLS, FLSS
	67800525	TURN SIGNAL, with 68163-84, 68973-00, 67800148 (HDI) (gloss black) *(2)*	FLS, FLSS
9	67800147	SOCKET ASSEMBLY *(2)*	FXSB, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
	67800148	SOCKET ASSEMBLY, (HDI) *(2)*	FXSB, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS
10	69201179	HOUSING, four-way socket (gray) *(2)*	FXSB, FLSTF, FLSTFB, FLS, FLSS, FLSTFBS

SWITCHES, HANDLEBAR LEFT, FRONT

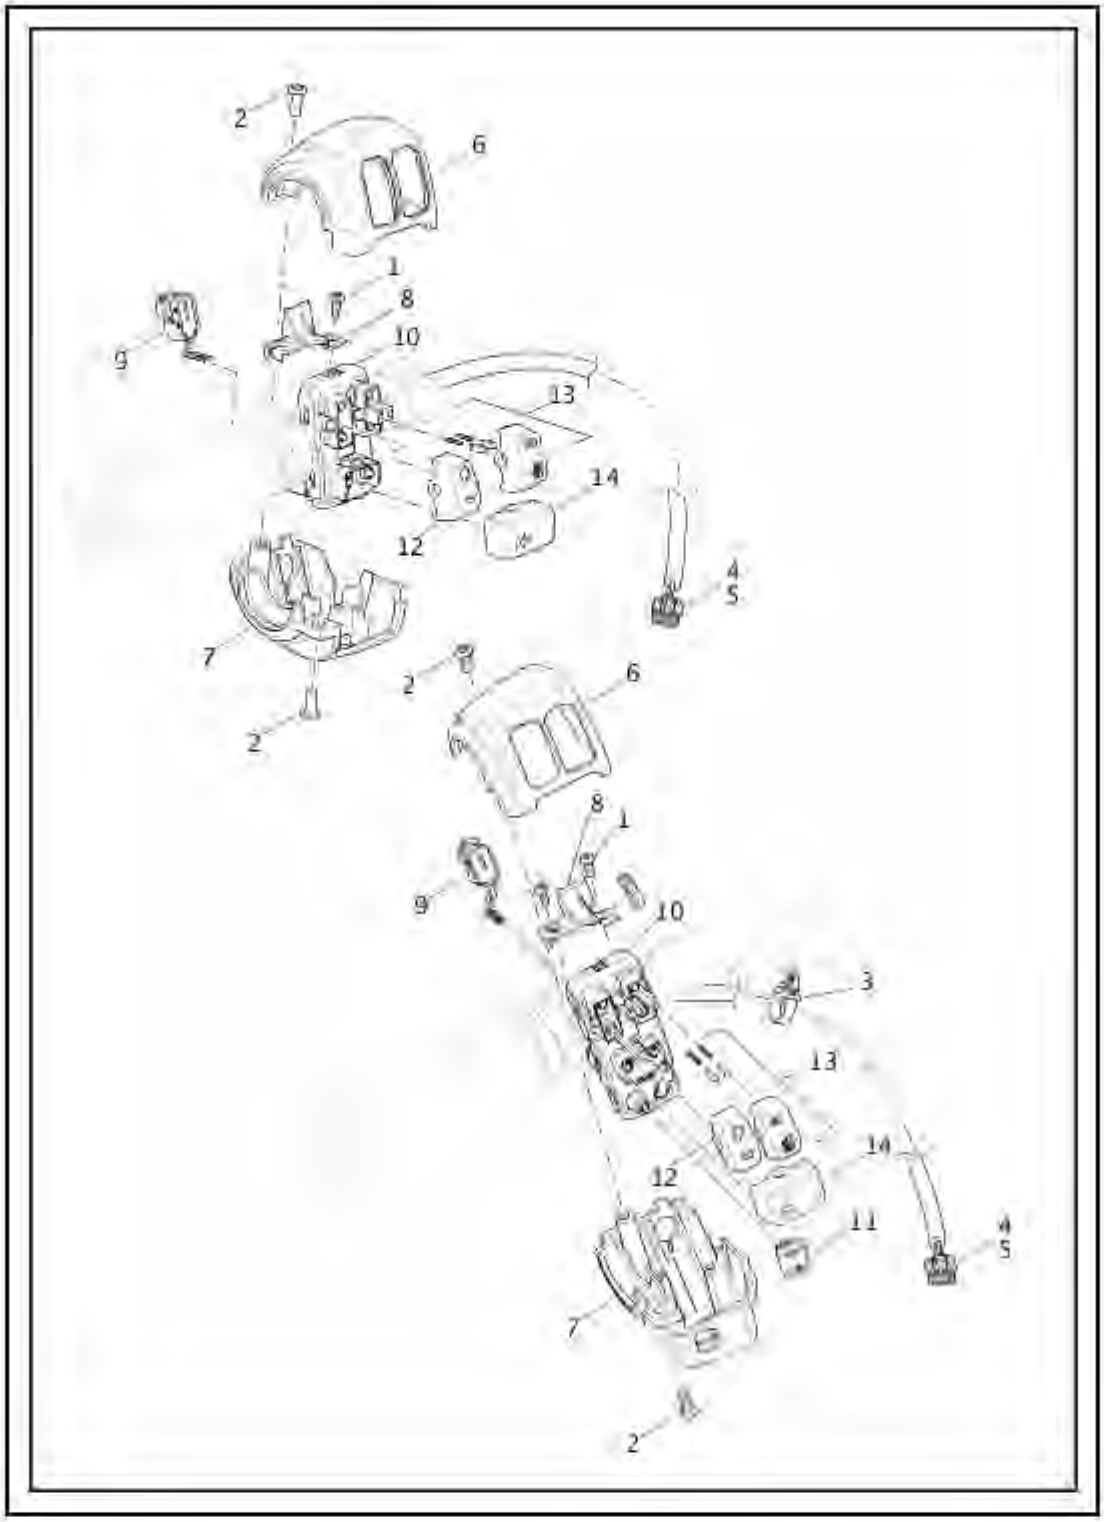

Index No.	Part No.	Description	Model(s)
	71500289	HOUSING, (lower) (left) (black)	FLSTC, FLSTN, FLSS, FLSTFBS
	71500114	SWITCH, clutch switch	FLSS, FLSTFBS
10	71500288	SWITCH MODULE, left (black)	FLSTC, FLSTN
	71500292	SWITCH MODULE, left (black)	FXSB, FLSTF, FLSTFB, FLS
	71500448	SWITCH MODULE, left (black)	FLSS, FLSTFBS
11	71500290	SWITCH CAP, set/resume	FLSTC, FLSTN
12	71500293	SWITCH CAP, horn/trip switch	

13	71500294	SWITCH CAP, lights switch	
14	71500295	SWITCH CAP, left turn switch	

SWITCHES, HANDLEBAR RIGHT, FRONT

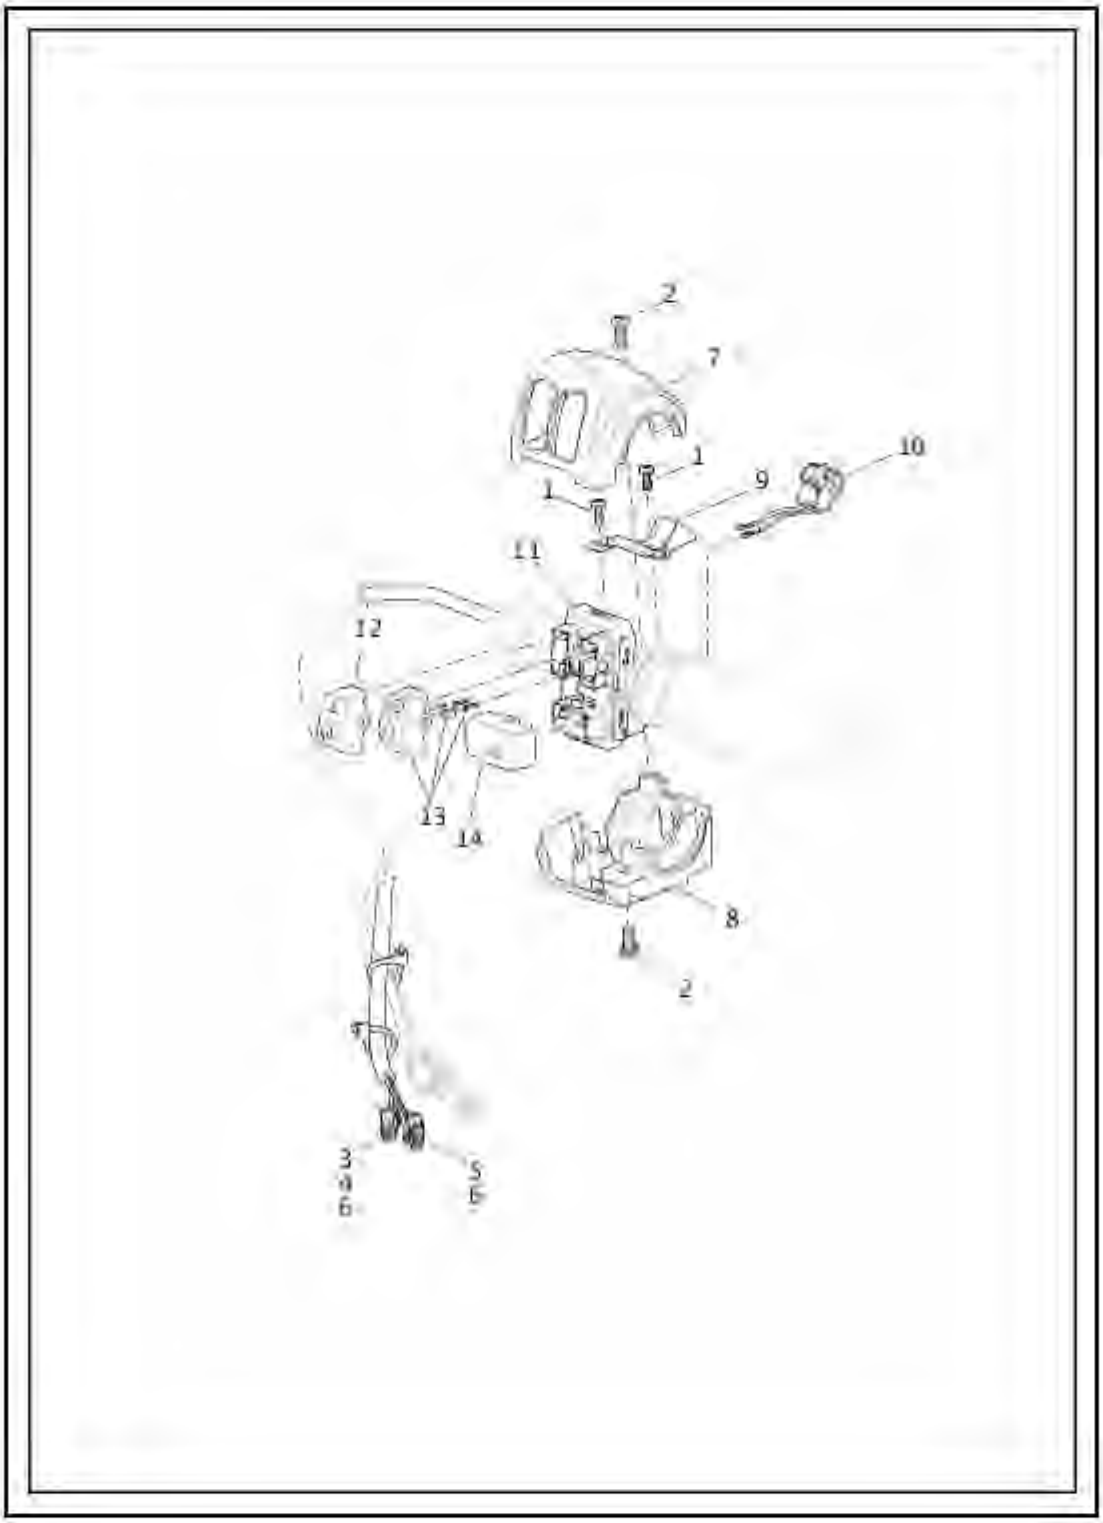

Index No.	Part No.	Description	Model(s)
11	71500297	SWITCH MODULE, right side	
12	71500298	SWITCH CAP, hazard switch	

13	71500299	SWITCH CAP, off/run switch, with pins and springs	
14	71500300	SWITCH CAP, right turn switch	

HANDLEBAR

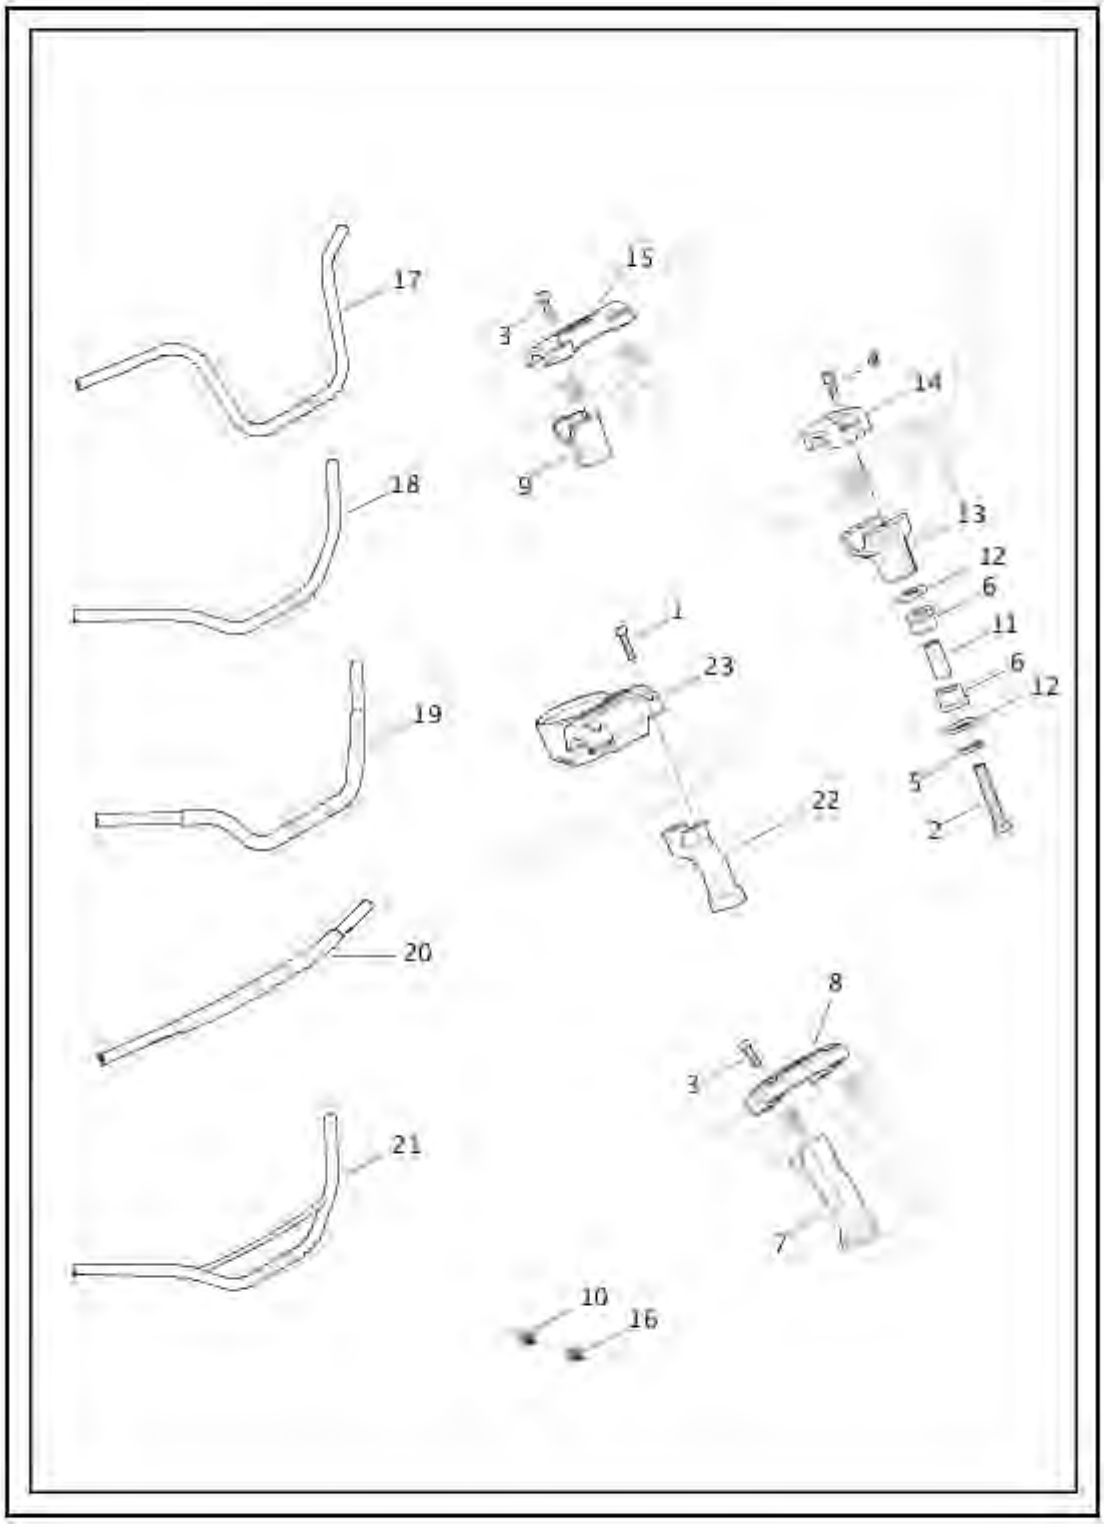

Index No.	Part No.	Description	Model(s)
	55900098	RISER, (gloss black) *(2)*	FLSS
	55900097	RISER, (gloss black) *(2)*	FLSTFBS

	55900096	CAP, (gloss black) *(2)*	FLSTFBS
	55900099	CLAMP, (gloss black)	FLSS
17	55800396	HANDLEBAR	FLSTC
18	55800399	HANDLEBAR	FLSTN
19	55800405	HANDLEBAR	FLSTFB, FLSTF
	55800634	HANDLEBAR, (gloss black)	FLSTFBS
20	55800411	HANDLEBAR	FXSB
21	55800579	HANDLEBAR	FLS, FLSS

THROTTLE CONTROL

Index No.	Part No.	Description	Model(s)
2	32306-08	SEAL CAP	
4	56304-08	THROTTLE SLEEVE AND GRIP	
5	72902-01BK	HOUSING, two-way pin (black)	
6	72990-01	TERMINAL, pin 18-22 AWG *(2)*	
7	12500001	CABLE STRAP	
8	32700050	SENSOR, twist grip	
9	69200307	TERMINAL, socket 22 AWG *(6)*	

10	69201162	CONNECTOR, six-way socket (black)	

EXHAUST SYSTEM - FLSTC

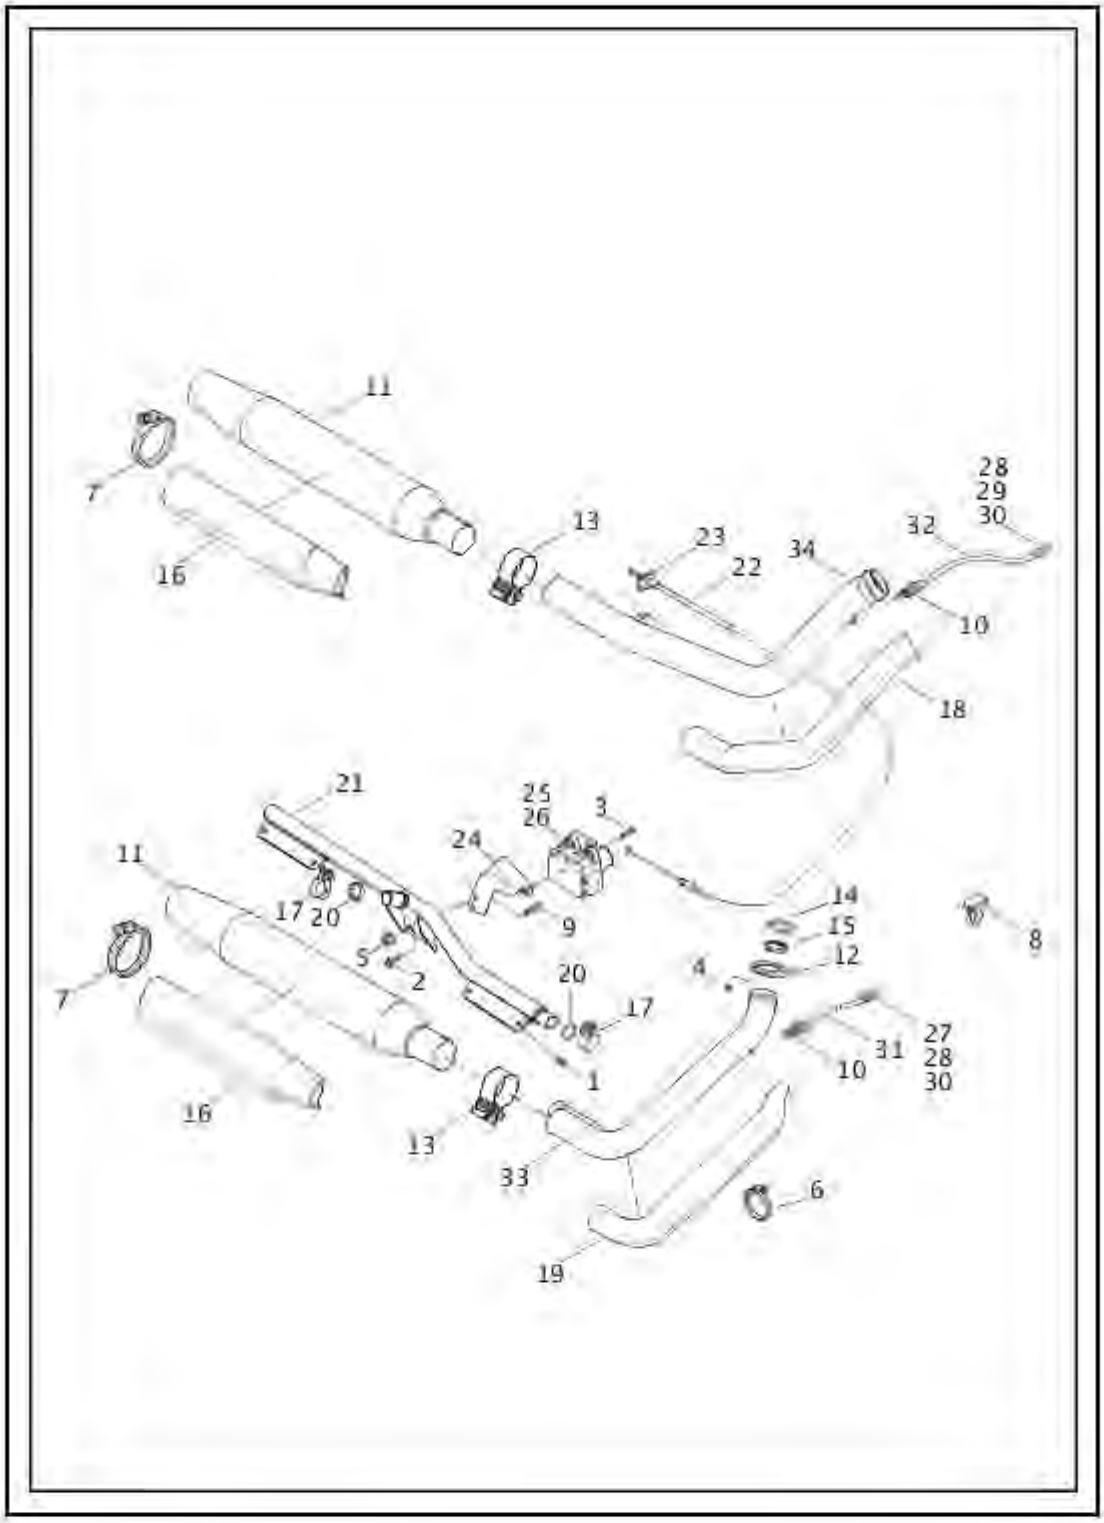

Index No.	Part No.	Description	Model(s)
3	3799	SCREW, (HDI, Australia, England, India) *(2)*	FLSTC

EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)

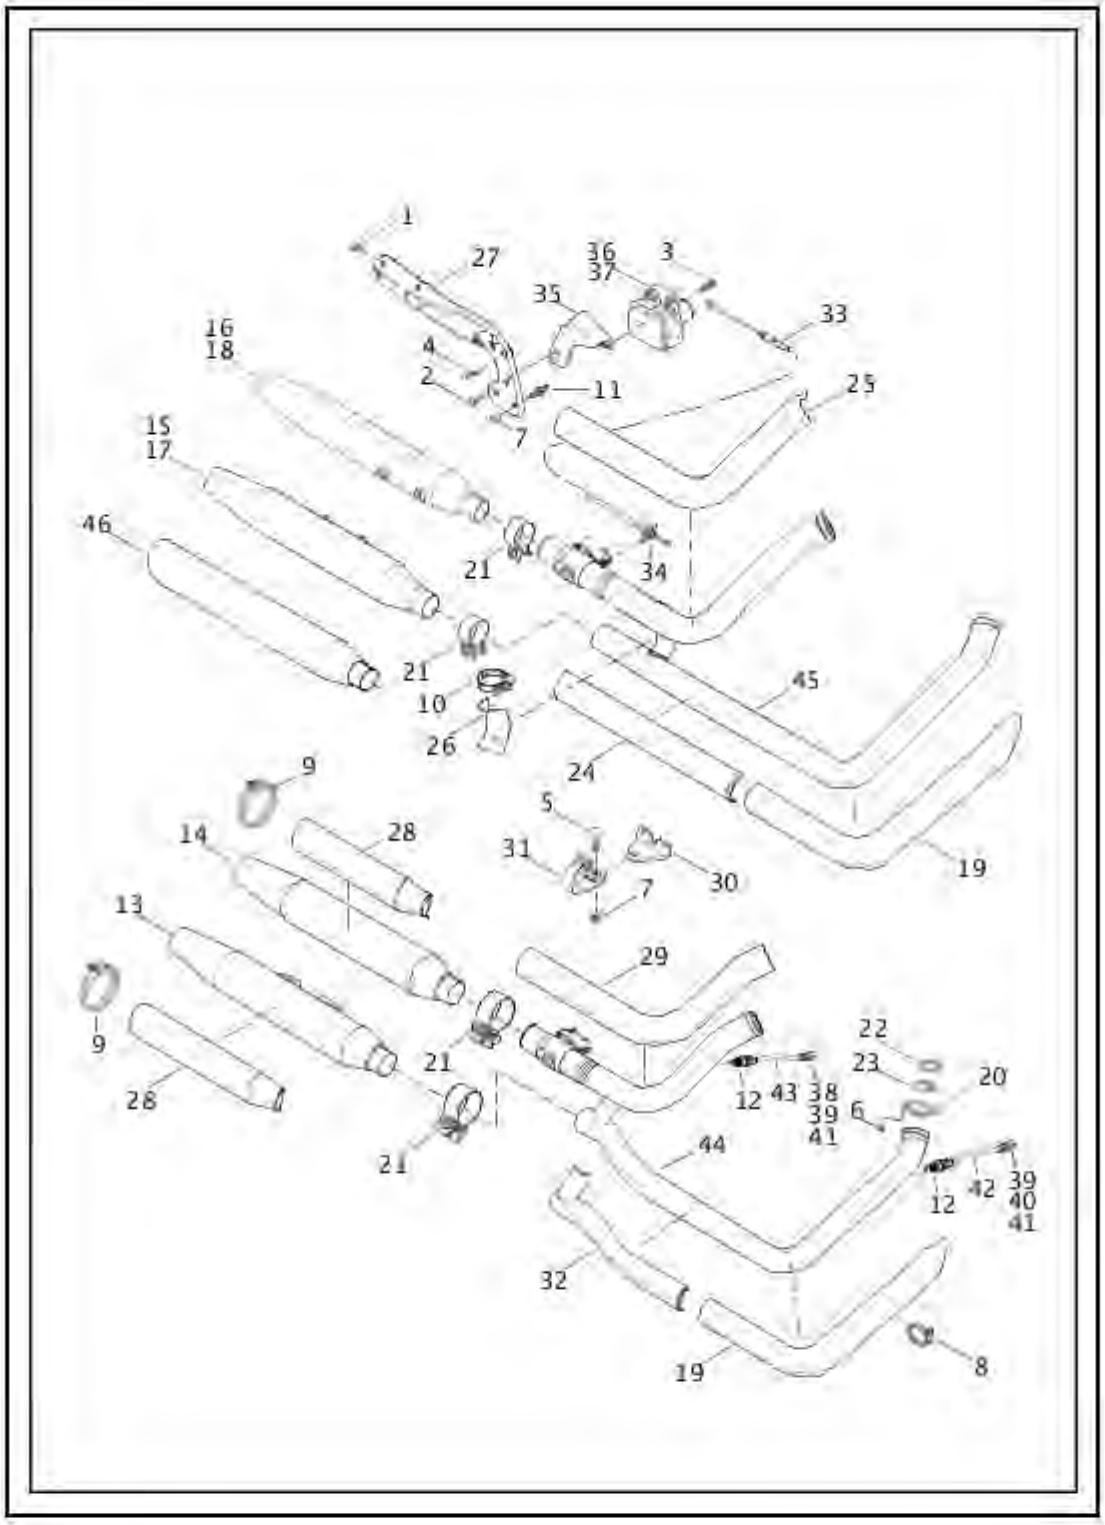

Index No.	Part No.	Description	Model(s)
3	3799	SCREW, (HDI, Australia, England, India) *(2)*	FLSTF, FLSTN, FLSTFB, FLS
	10800010	CLAMP, muffler shield (black) *(4)*	FLSS, FLSTFBS

EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)

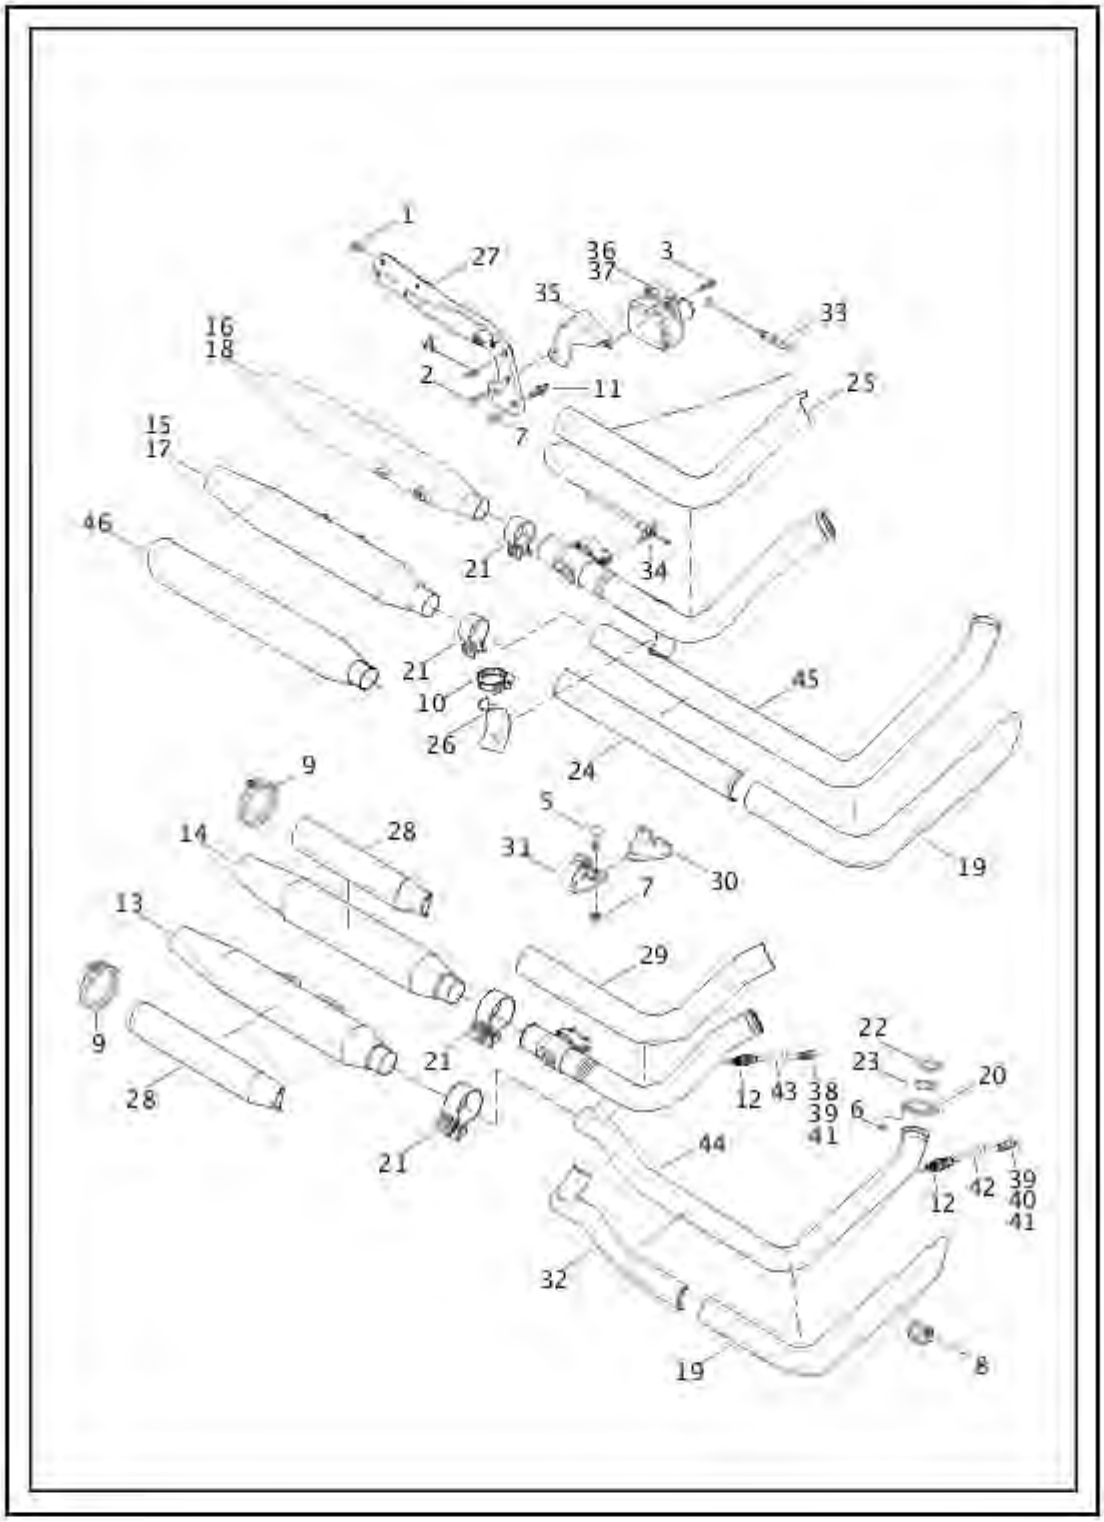

Index No.	Part No.	Description	Model(s)
	80826-10	SHIELD, exhaust pipe (black)	FLSS
	80830-10A	SHIELD, rear exhaust pipe (black)	FLSS
	65688-11BHP	MUFFLER SUPPORT, (gloss black)	FLSTFBS
	65400277	SHIELD, muffler *(2)*	FLSS, FLSTFBS
46	64900468	MUFFLER ASSEMBLY, front (black)	FLSS, FLSTFBS
	64900469	MUFFLER ASSEMBLY, rear (black)	FLSS, FLSTFBS
	64900470	MUFFLER ASSEMBLY, front (black) (Japan)	FLSS, FLSTFBS

	64900471	MUFFLER ASSEMBLY, rear (black) (Japan)	FLSS, FLSTFBS
	64900472	MUFFLER ASSEMBLY, front (black) (Australia, England, HDI)	FLSS, FLSTFBS
	64900473	MUFFLER ASSEMBLY, rear (black) (Australia, England, HDI)	FLSS, FLSTFBS

WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)

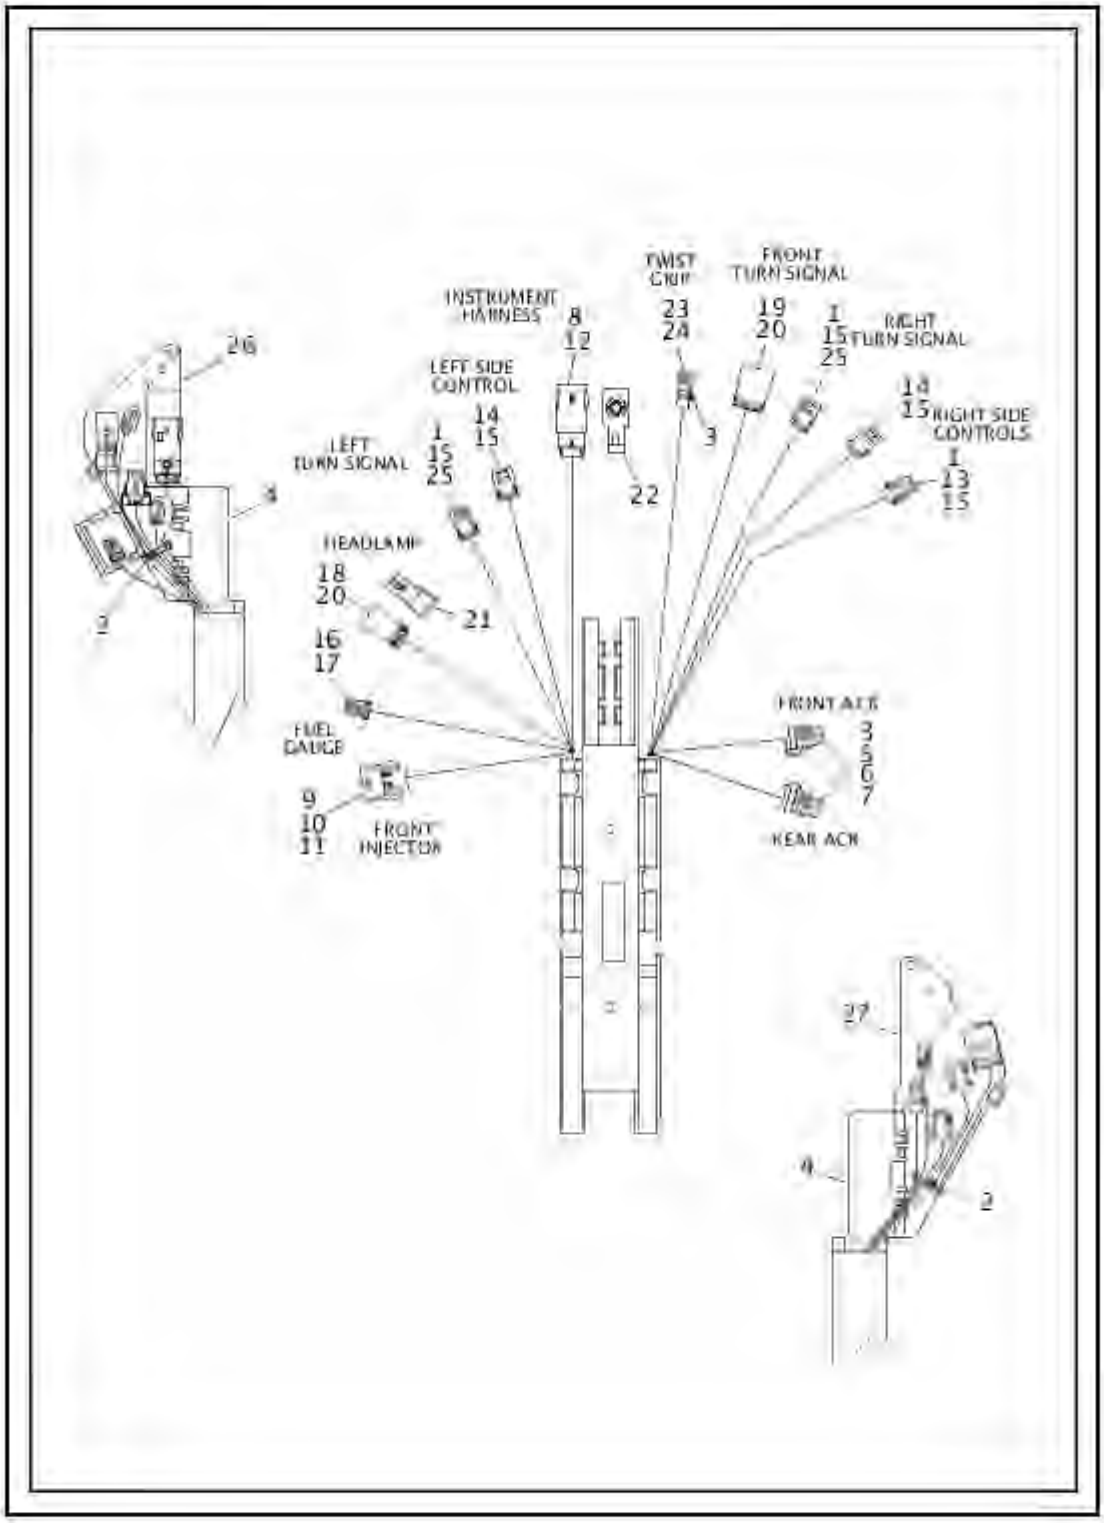

Index No.	Part No.	Description	Model(s)
23	69201163	HOUSING, six-way pin	FLS

24	69201164	TERMINAL, pin, 22 AWG *(6)*	FLS
25	69201180	HOUSING, four-way pin (gray) *(2)*	FLS
26	69201296	BRACKET, electrical connector, right	FLS
27	69201297	BRACKET, electrical connector, left	FLS

WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)

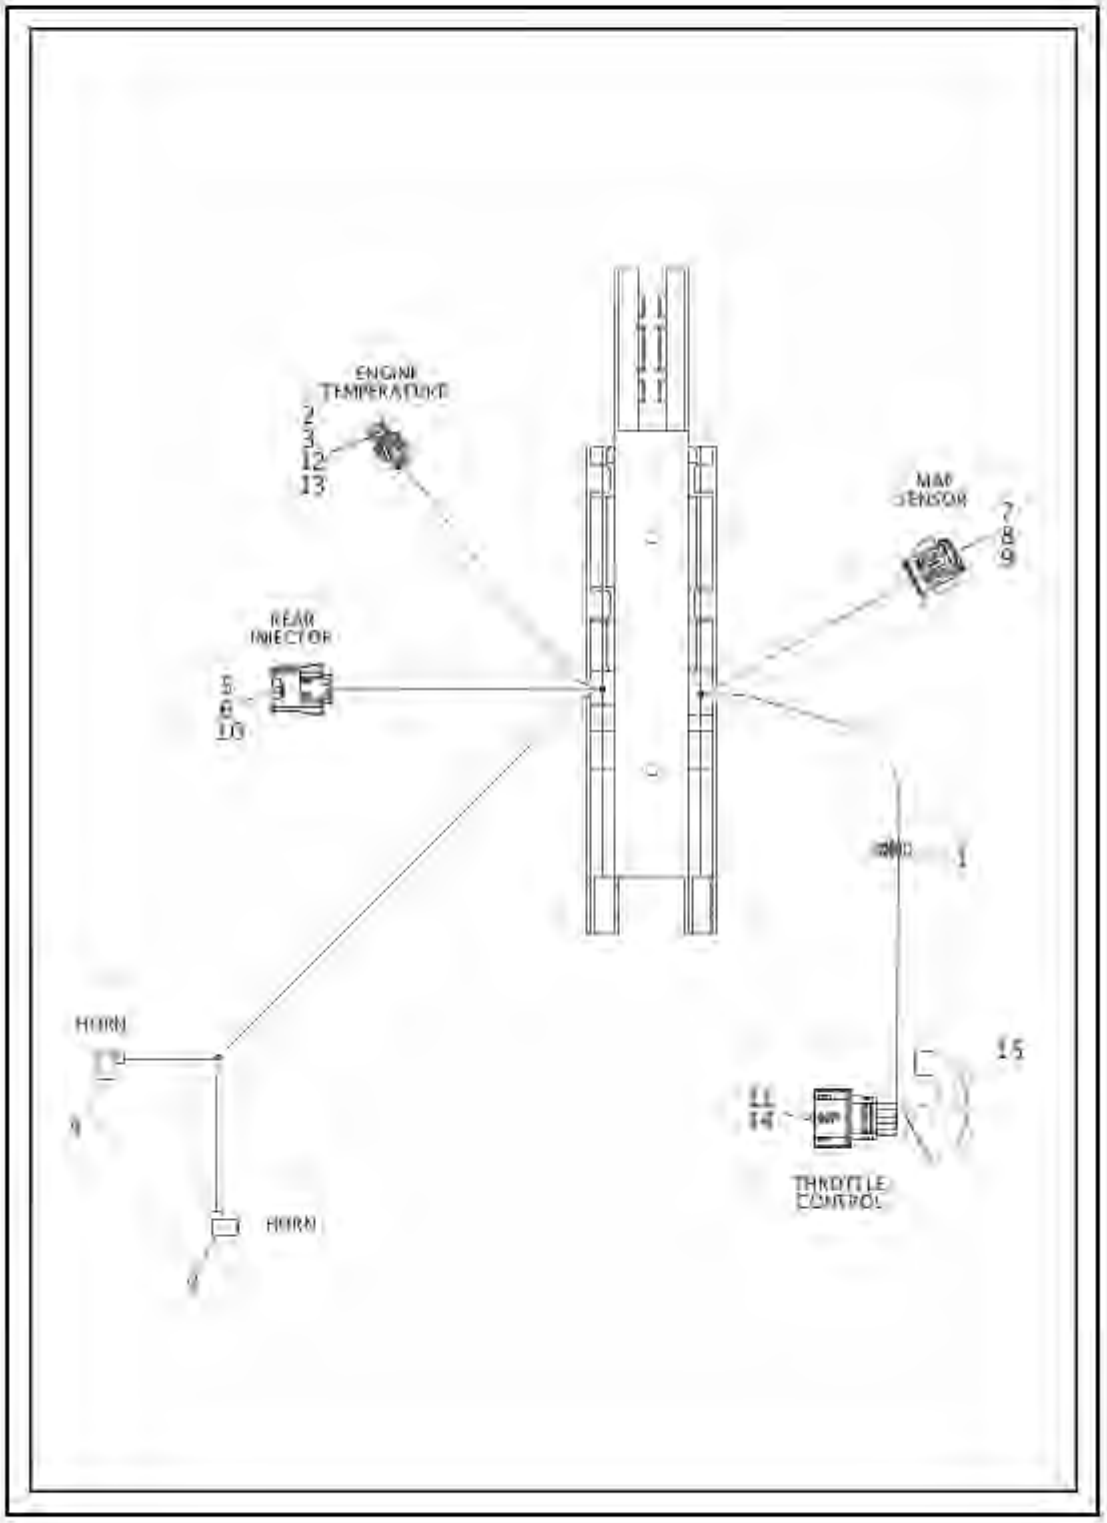

Index No.	Part No.	Description	Model(s)

5	72251-07	SECONDARY LOCK, two-way socket (yellow)	FLS
6	72402-07	HOUSING, two-way socket (black)	FLS
7	72406-07A	HOUSING, four-way socket	FLS
8	72407-07	TERMINAL, socket, 16-20 AWG *(4)*	FLS
9	72408-07	WIRE SEAL, 20 AWG (blue) *(4)*	FLS
10	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLS
11	72483-08BK	HOUSING, six-way socket (black)	FLS
15	69200437	BOOT, rubber	FLS

WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)

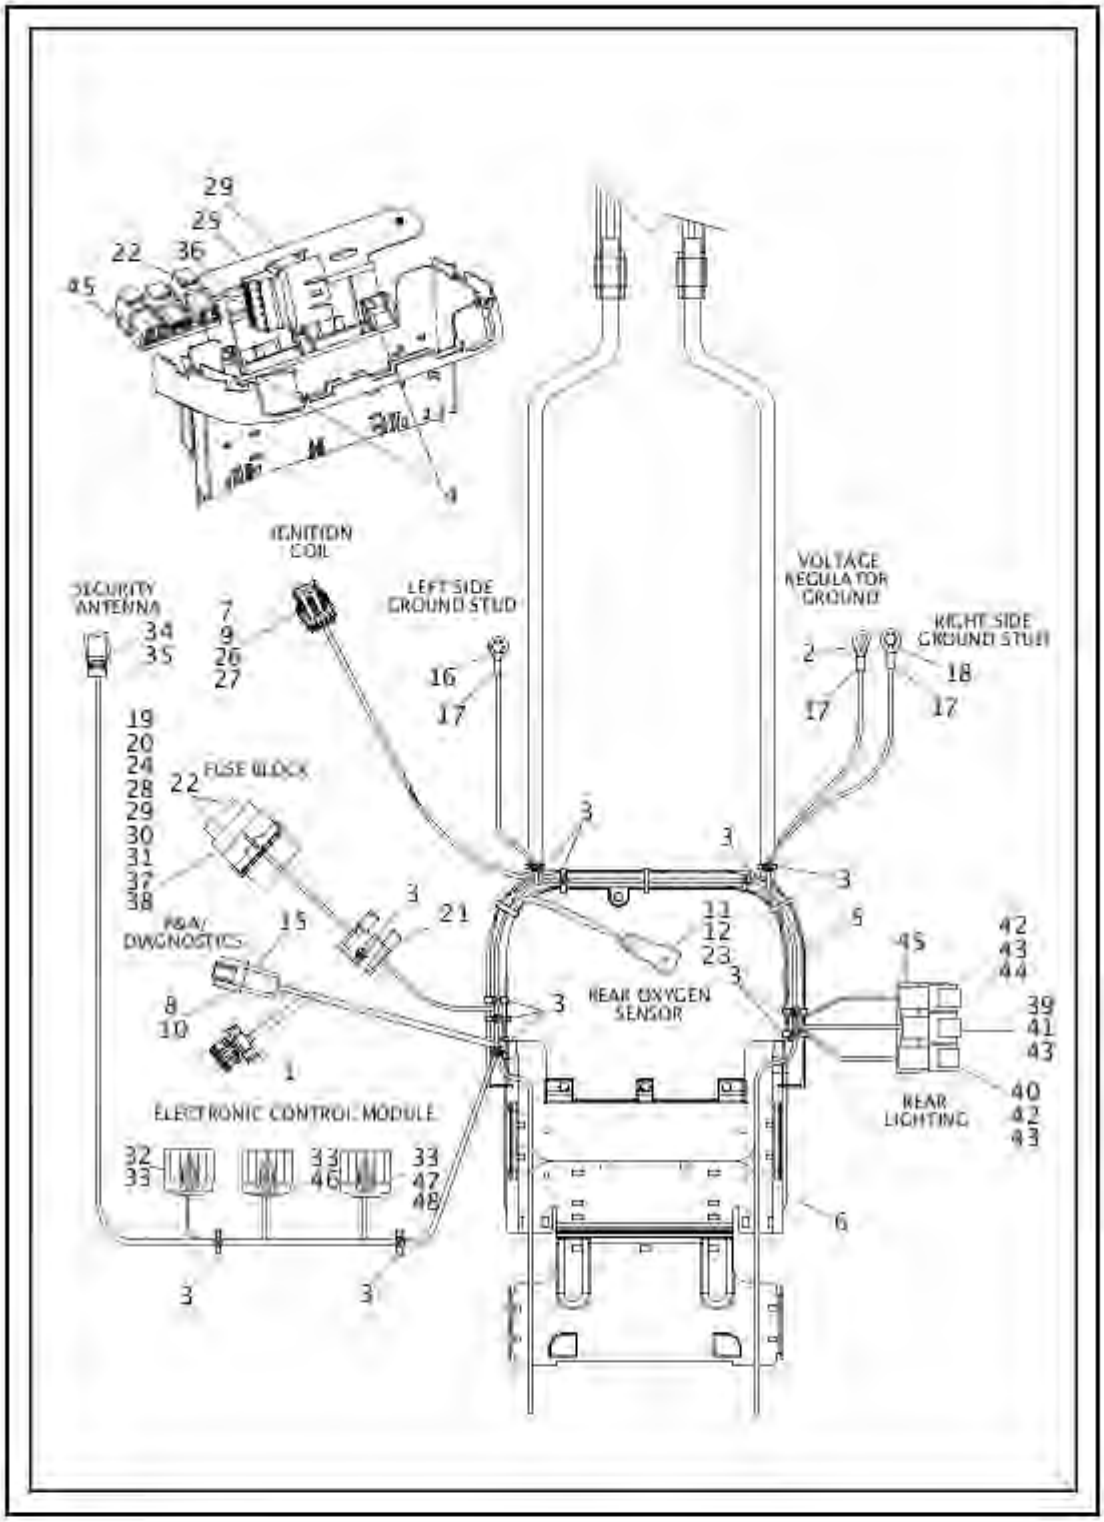

Index No.	Part No.	Description	Model(s)
46	69200267A	HOUSING, 18-way, socket, key B (gray)	FLS
47	69200268A	HOUSING, 18-way, socket, key C (brown)	FLS
48	69201168	TERMINAL, socket, 22 AWG (silver)	FLS

WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)

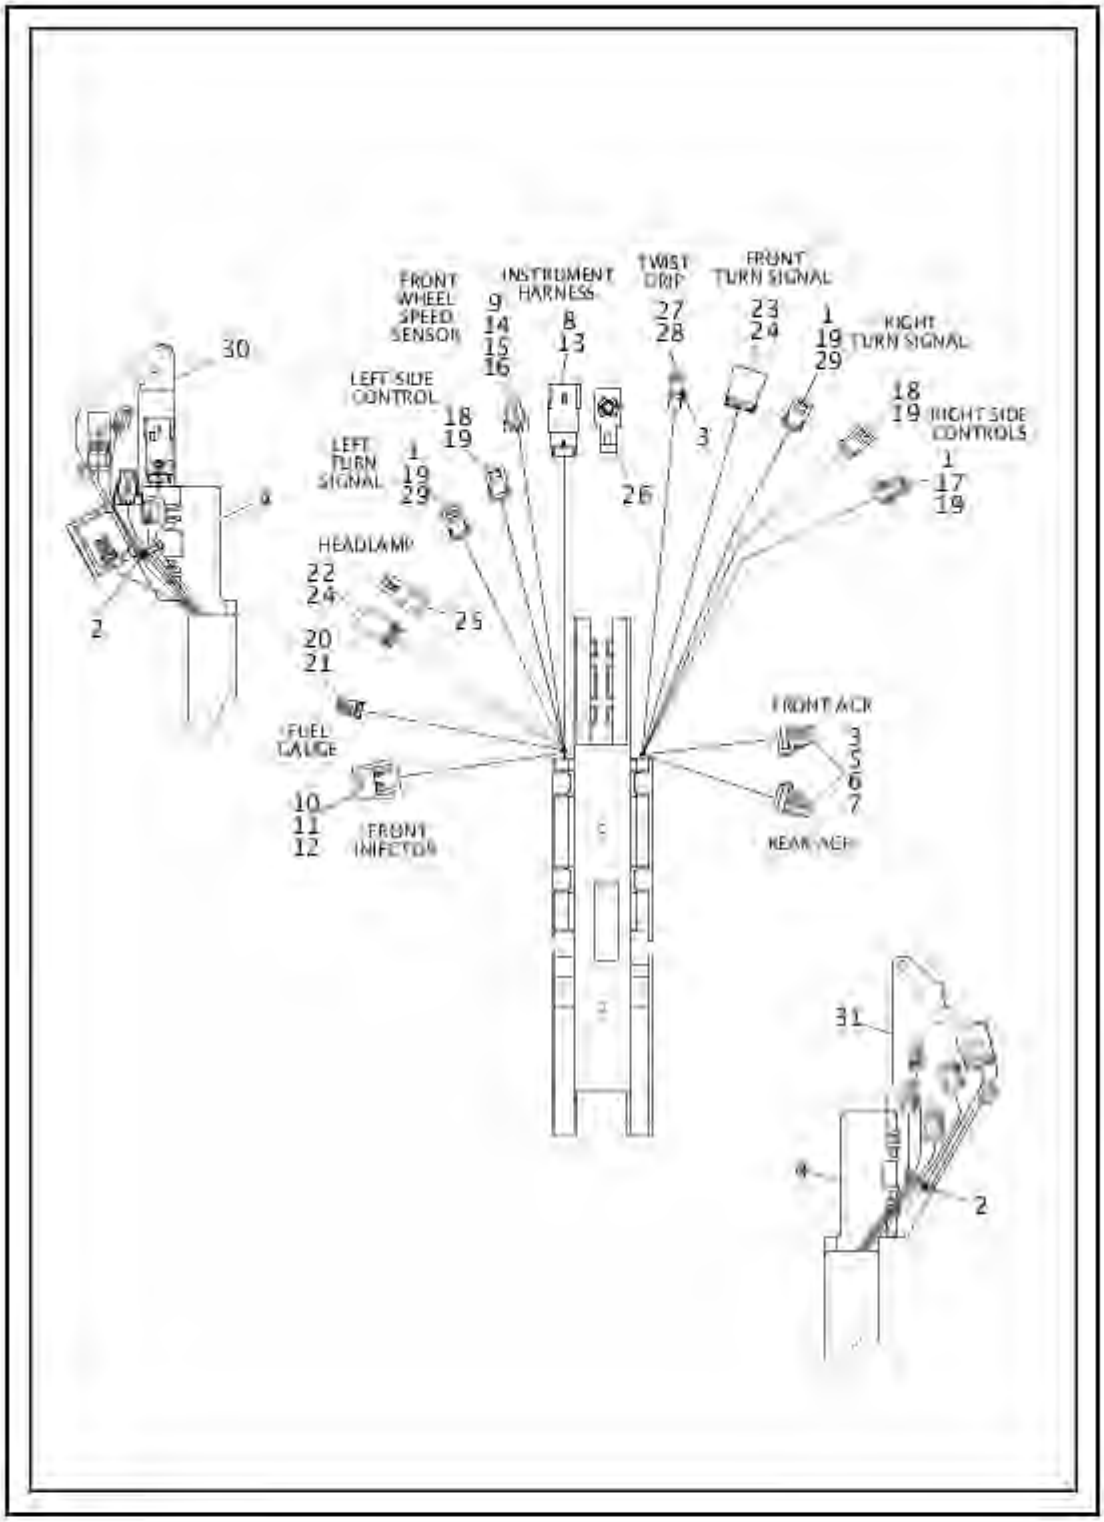

Index No.	Part No.	Description	Model(s)
27	69201163	HOUSING, six-way pin	FLS, FLSS
28	69201164	TERMINAL, pin, 22 AWG *(6)*	FLS, FLSS
29	69201180	HOUSING, four-way pin (gray) *(2)*	FLS, FLSS
30	69201296	BRACKET, electrical connector, right	FLS, FLSS
31	69201297	BRACKET, electrical connector, left	FLS, FLSS

WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)

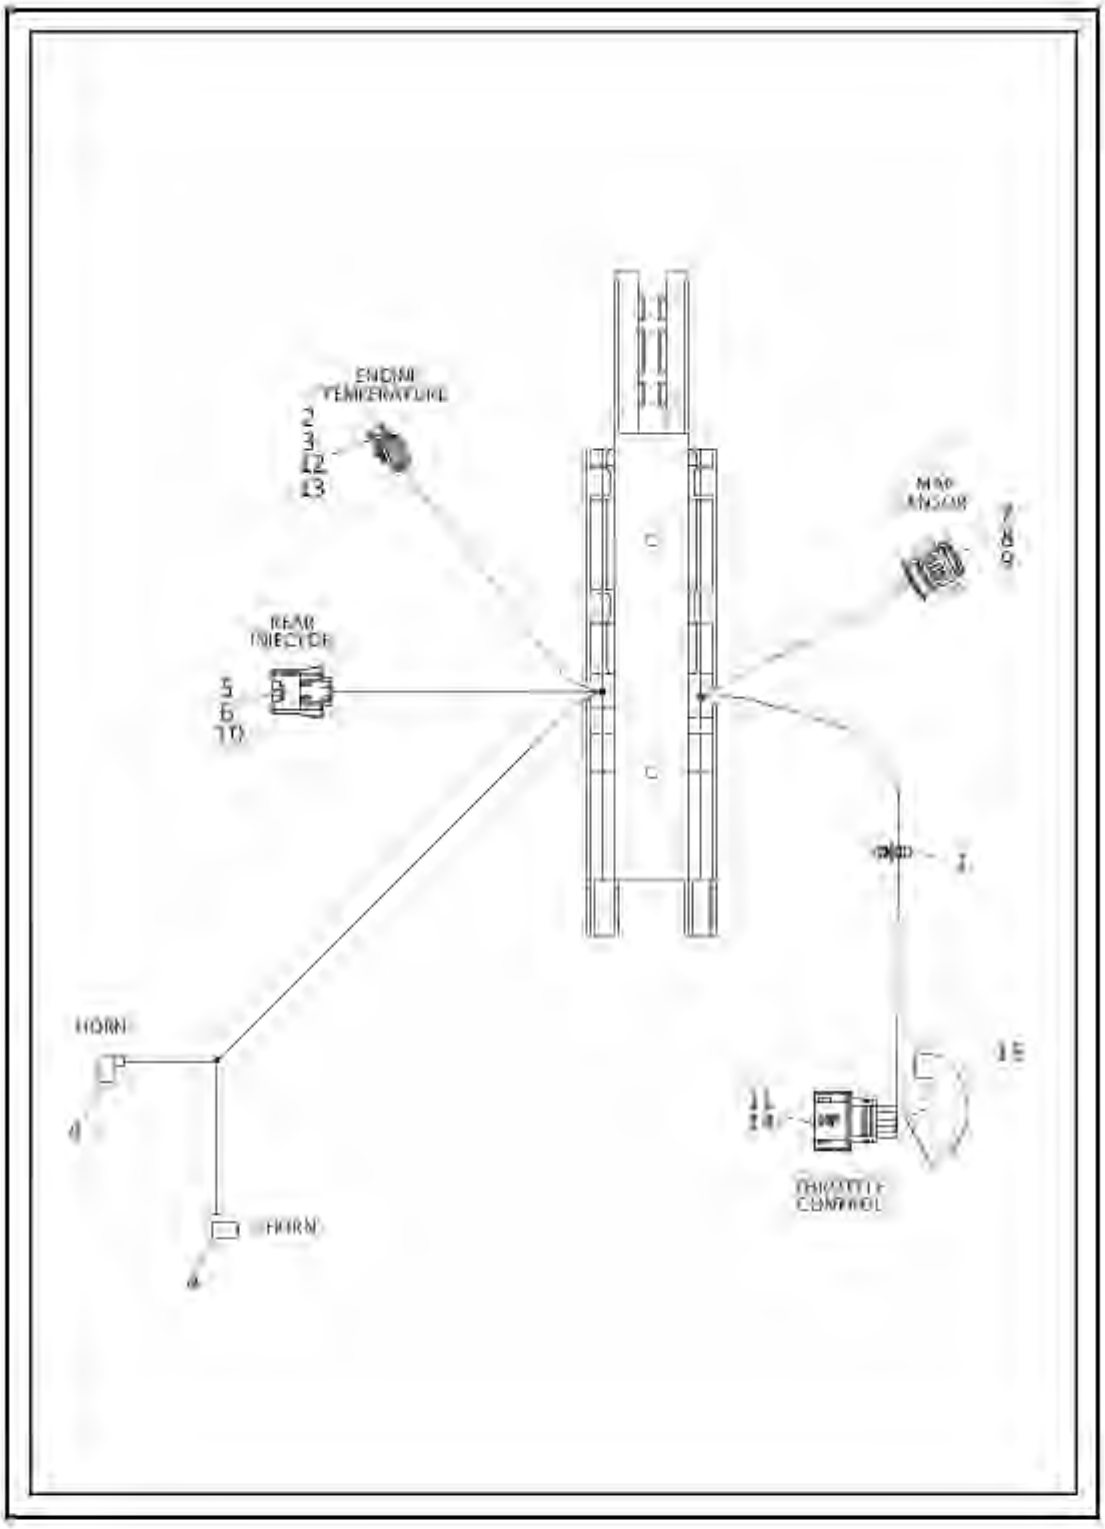

Index No.	Part No.	Description	Model(s)
5	72251-07	SECONDARY LOCK, two-way socket (yellow)	FLS, FLSS
6	72402-07	HOUSING, two-way socket (black)	FLS, FLSS
7	72406-07A	HOUSING, four-way socket	FLS, FLSS
8	72407-07	TERMINAL, socket, 16-20 AWG *(4)*	FLS, FLSS
9	72408-07	WIRE SEAL, 20 AWG (blue) *(4)*	FLS, FLSS
10	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLS, FLSS

11	72483-08BK	HOUSING, six-way socket (black)	FLS, FLSS
15	69200437	BOOT, rubber	FLS, FLSS

WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)

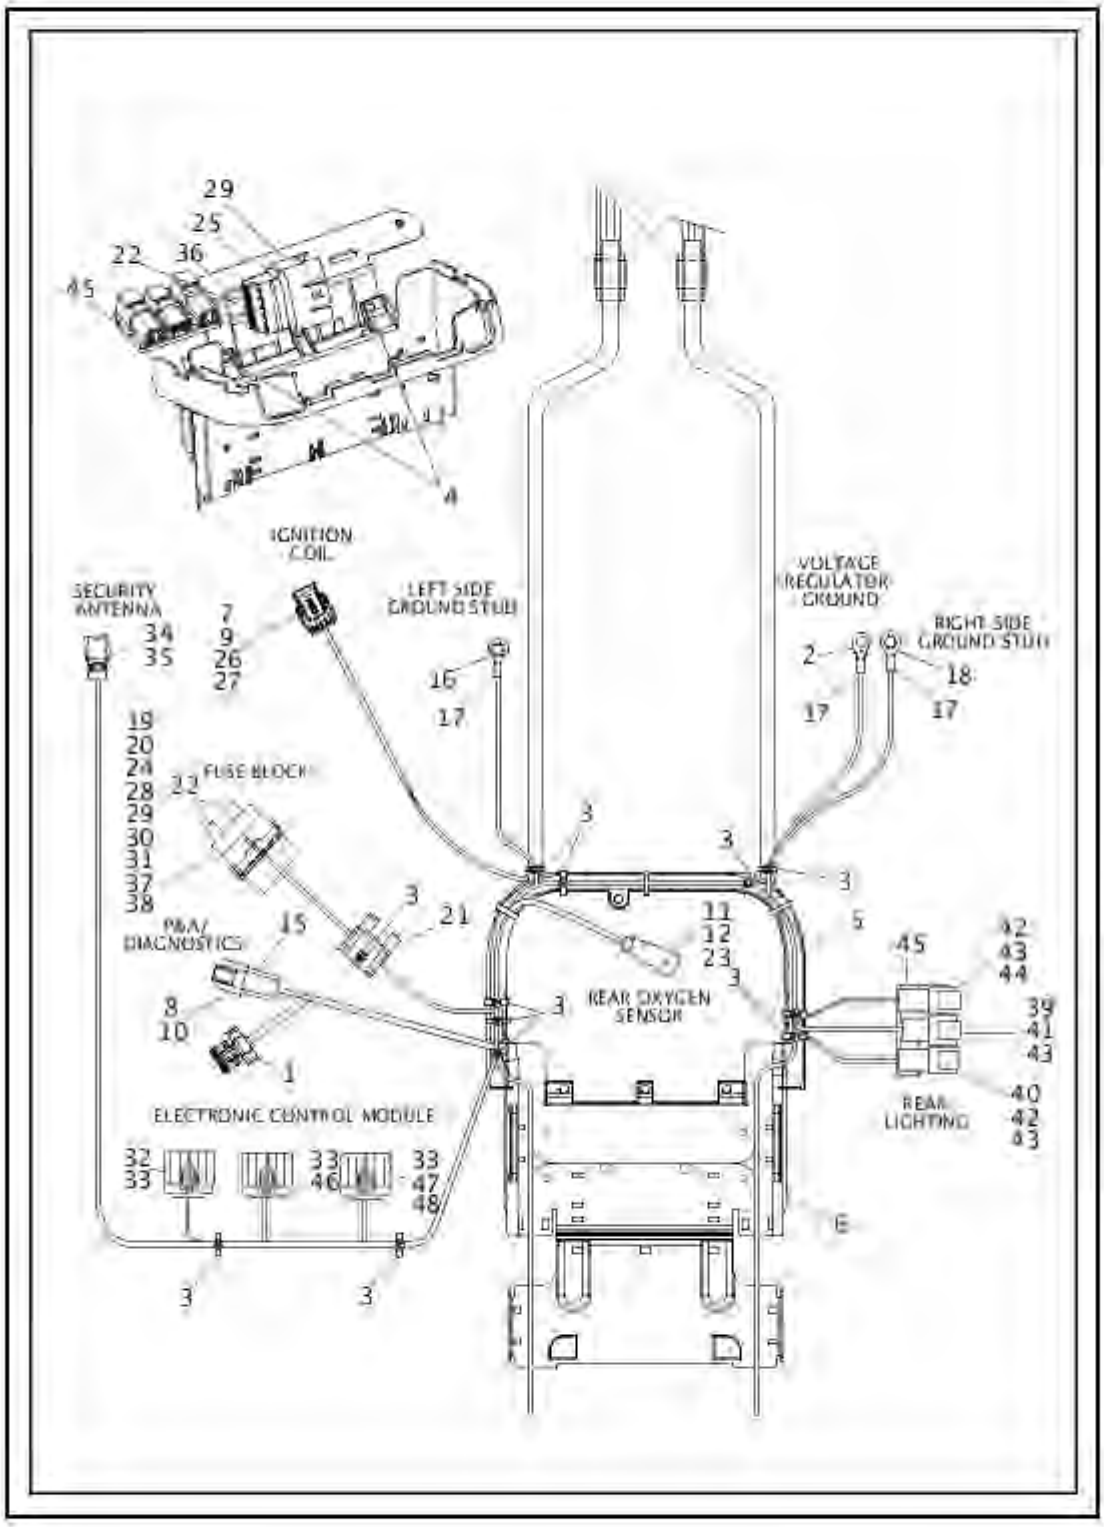

Index No.	Part No.	Description	Model(s)
46	69200267A	HOUSING, 18-way, socket, key B (gray)	FLS, FLSS
47	69200268A	HOUSING, 18-way, socket, key C (brown)	FLS, FLSS

48	69201168	TERMINAL, socket, 22 AWG (silver)	FLS, FLSS

WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)

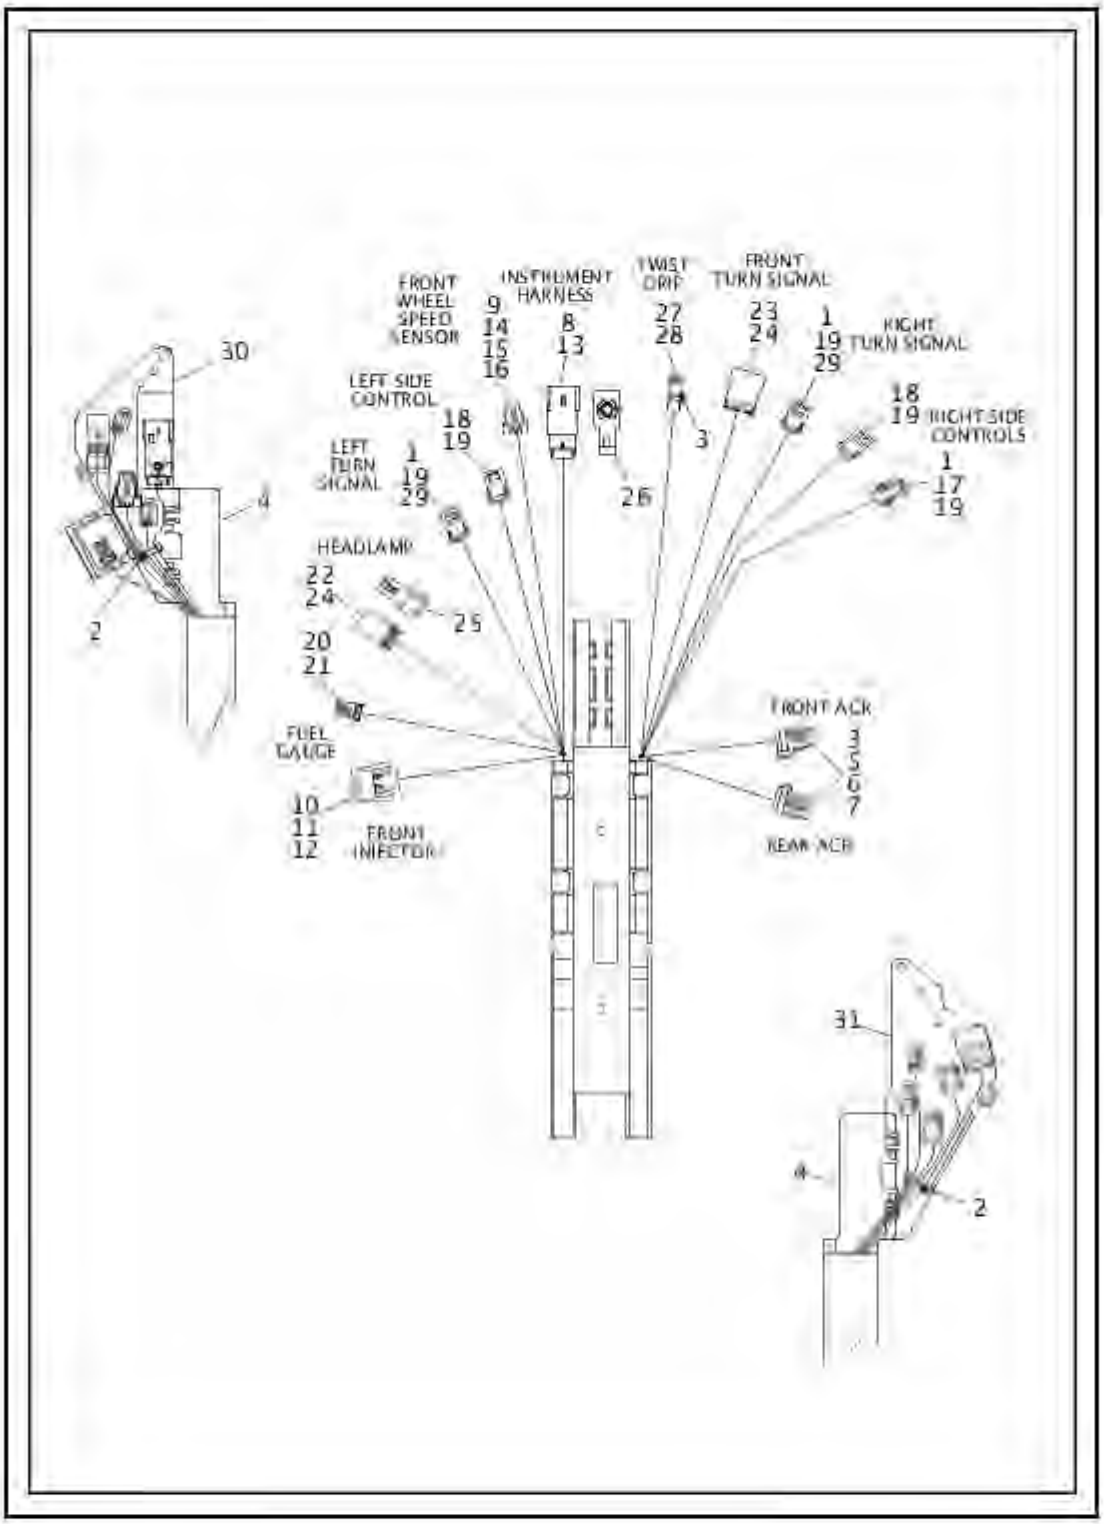

Index No.	Part No.	Description	Model(s)
27	69201163	HOUSING, six-way pin	FLSTF, FLSTFB, FLSTFBS
28	69201164	TERMINAL, pin, 22 AWG *(6)*	FLSTF, FLSTFB, FLSTFBS
29	69201180	HOUSING, four-way pin (gray) *(2)*	FLSTF, FLSTFB, FLSTFBS

30	69201296	BRACKET, electrical connector, right	FLSTF, FLSTFB, FLSTFBS
31	69201297	BRACKET, electrical connector, left	FLSTF, FLSTFB, FLSTFBS

WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)

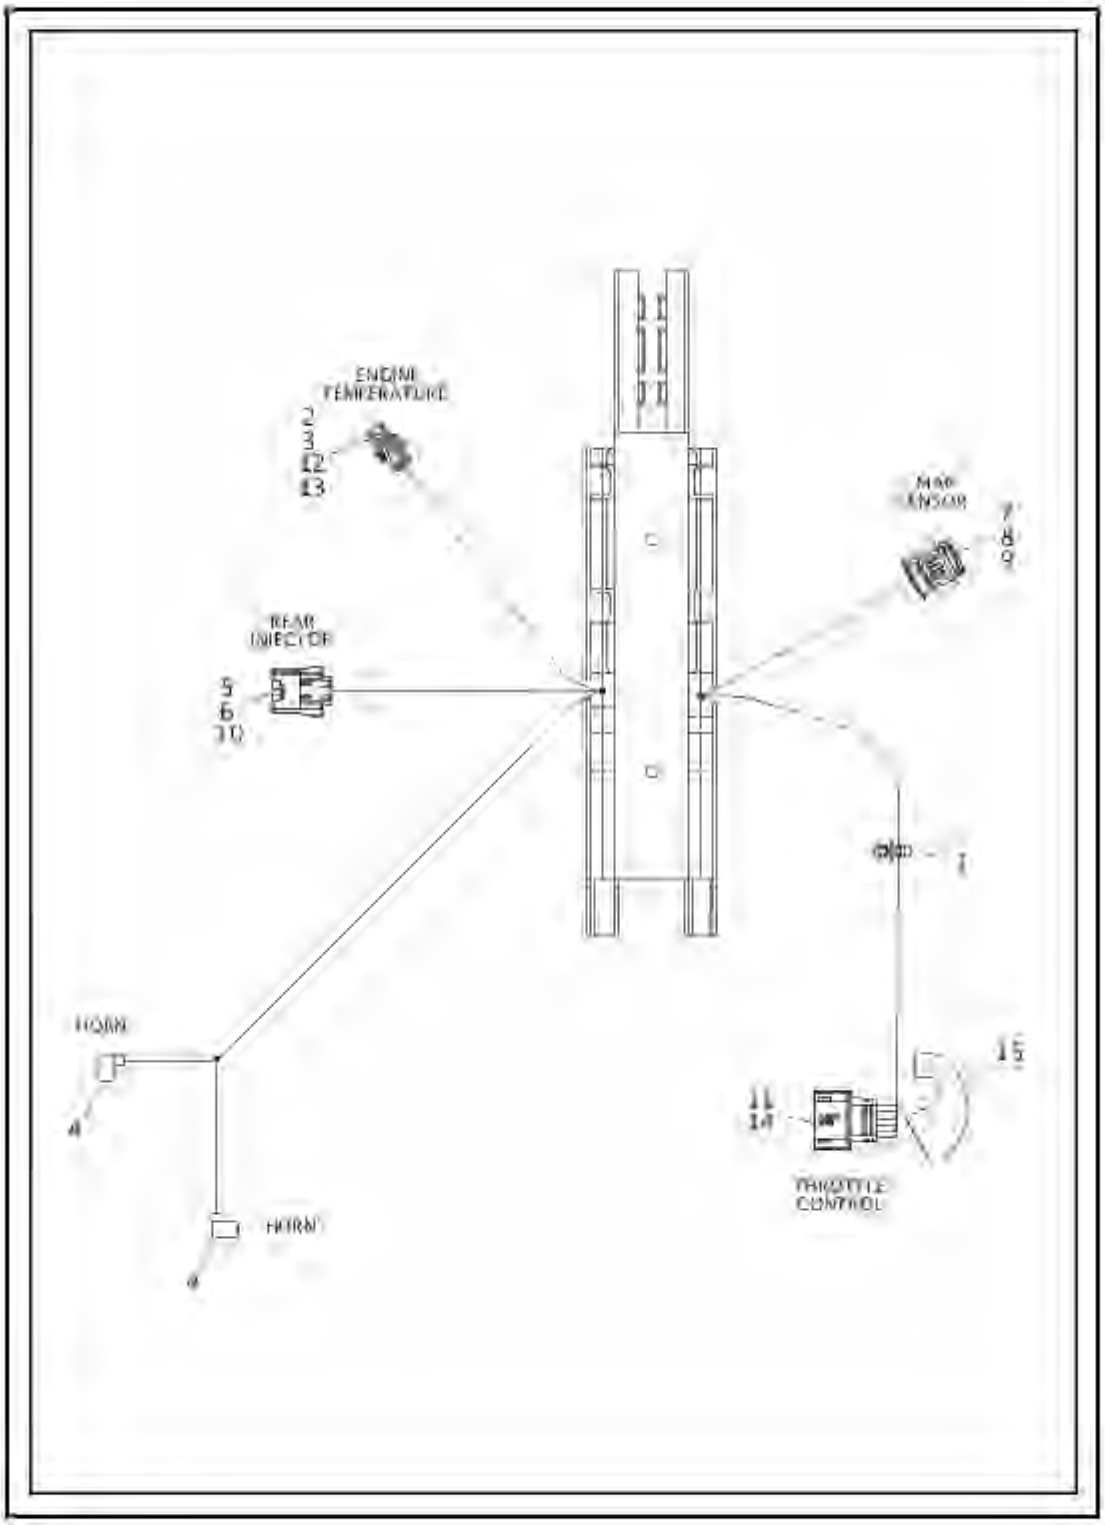

Index No.	Part No.	Description	Model(s)
5	72251-07	SECONDARY LOCK, two-way socket (yellow)	FLSTF, FLSTFB, FLSTFBS
6	72402-07	HOUSING, two-way socket (black)	FLSTF, FLSTFB, FLSTFBS

7	72406-07A	HOUSING, four-way socket	FLSTF, FLSTFB, FLSTFBS
8	72407-07	TERMINAL, socket, 16-20 AWG *(4)*	FLSTF, FLSTFB, FLSTFBS
9	72408-07	WIRE SEAL, 20 AWG (blue) *(4)*	FLSTF, FLSTFB, FLSTFBS
10	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLSTF, FLSTFB, FLSTFBS
11	72483-08BK	HOUSING, six-way socket (black)	FLSTF, FLSTFB, FLSTFBS
15	69200437	BOOT, rubber	FLSTF, FLSTFB, FLSTFBS

WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)

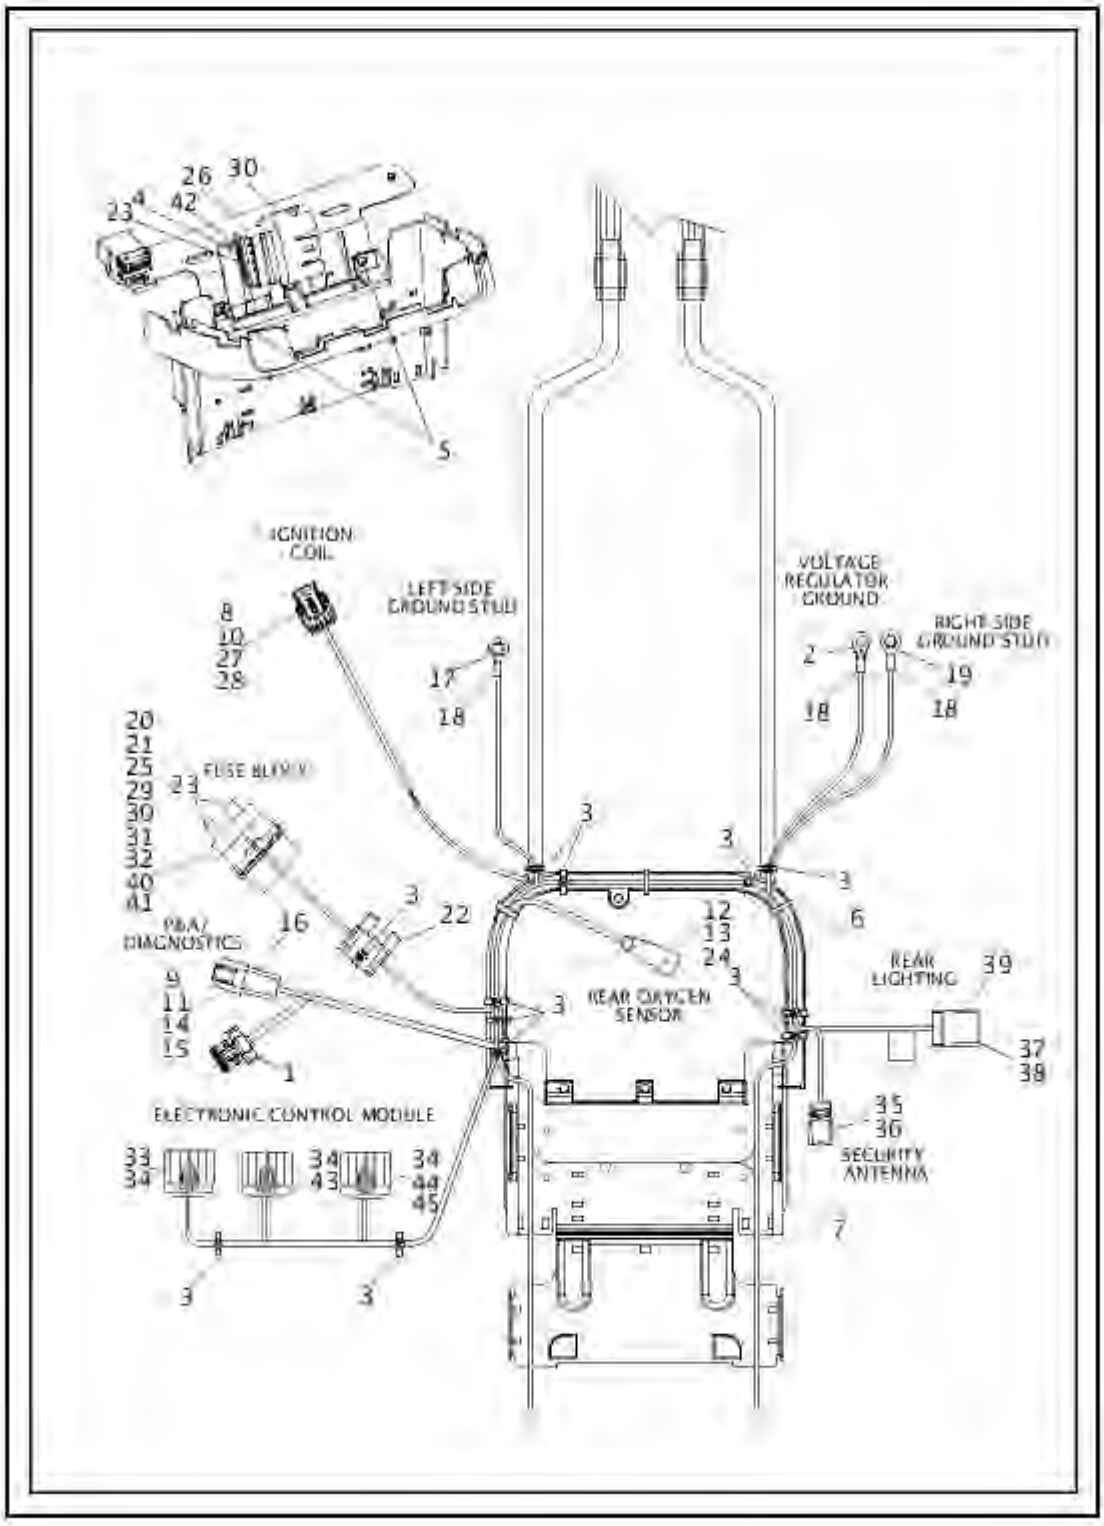

Index No.	Part No.	Description	Model(s)
43	69200267A	HOUSING, 18-way, socket, key B (gray)	FLSTF, FLSTFB, FLSTFBS
44	69200268A	HOUSING, 18-way, socket, key C (brown)	FLSTF, FLSTFB, FLSTFBS
45	69201168	TERMINAL, socket, 22 AWG (silver) *(2)*	FLSTF, FLSTFB, FLSTFBS

WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)

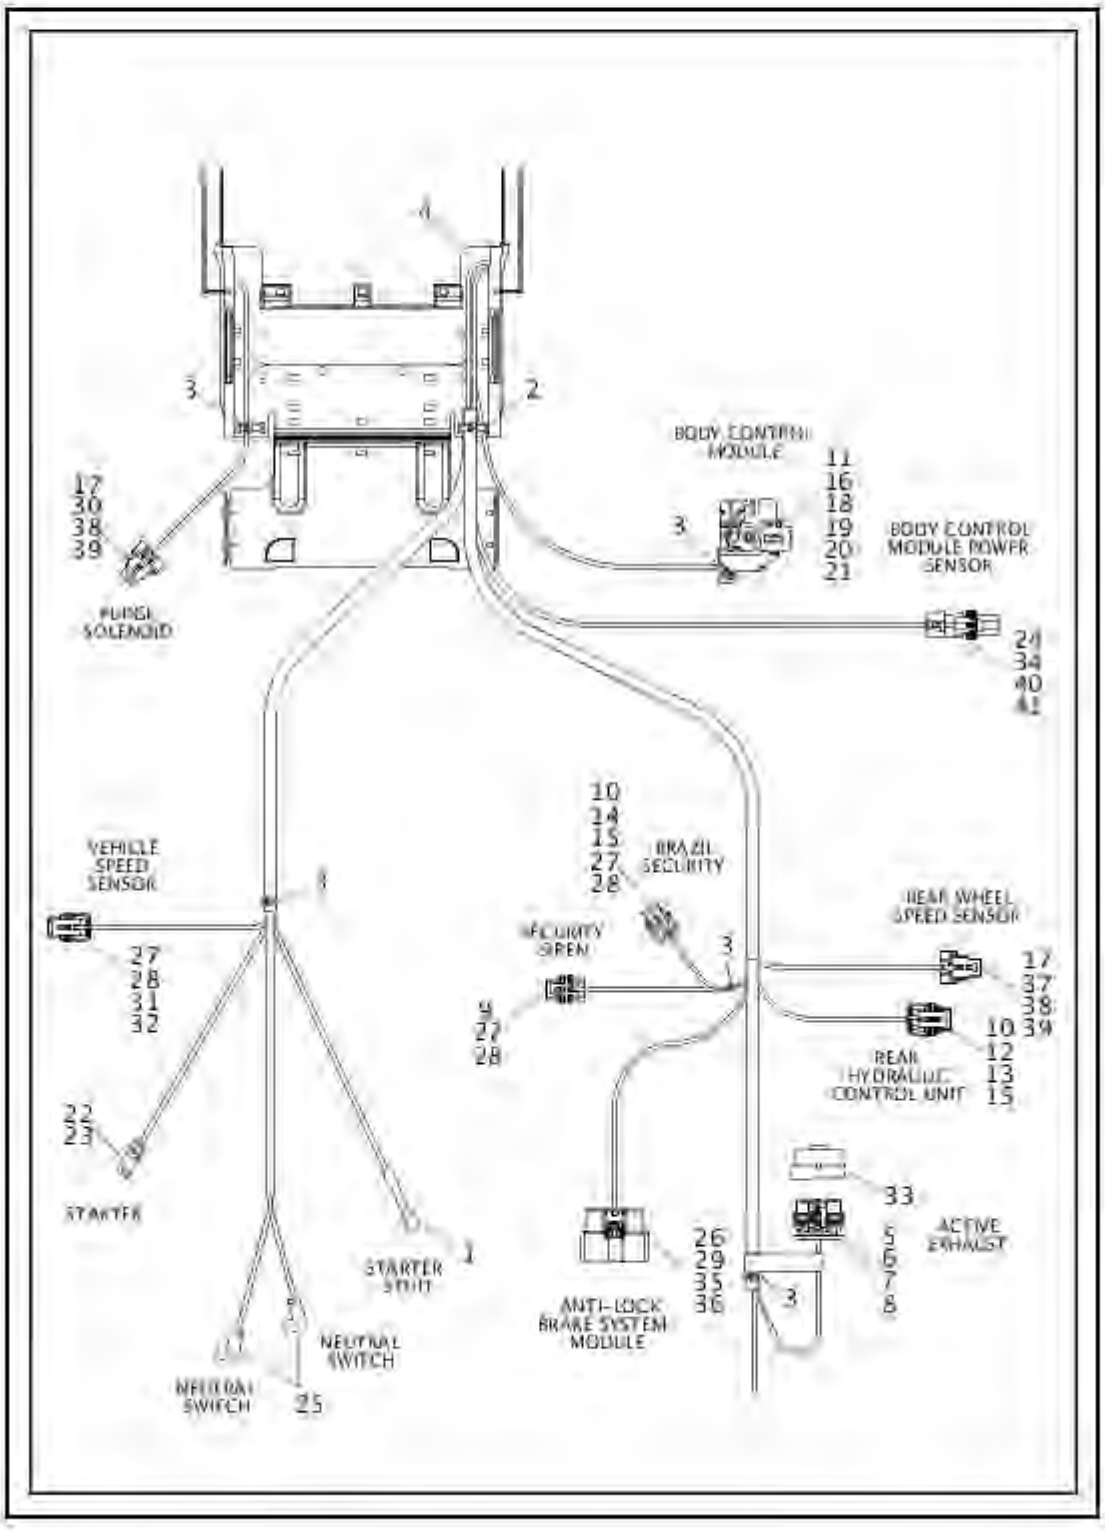

Index No.	Part No.	Description	Model(s)
14	72097-06	PLUG, oval (orange) (Brazil) *(2)*	FLSTF, FLSTFB

WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)

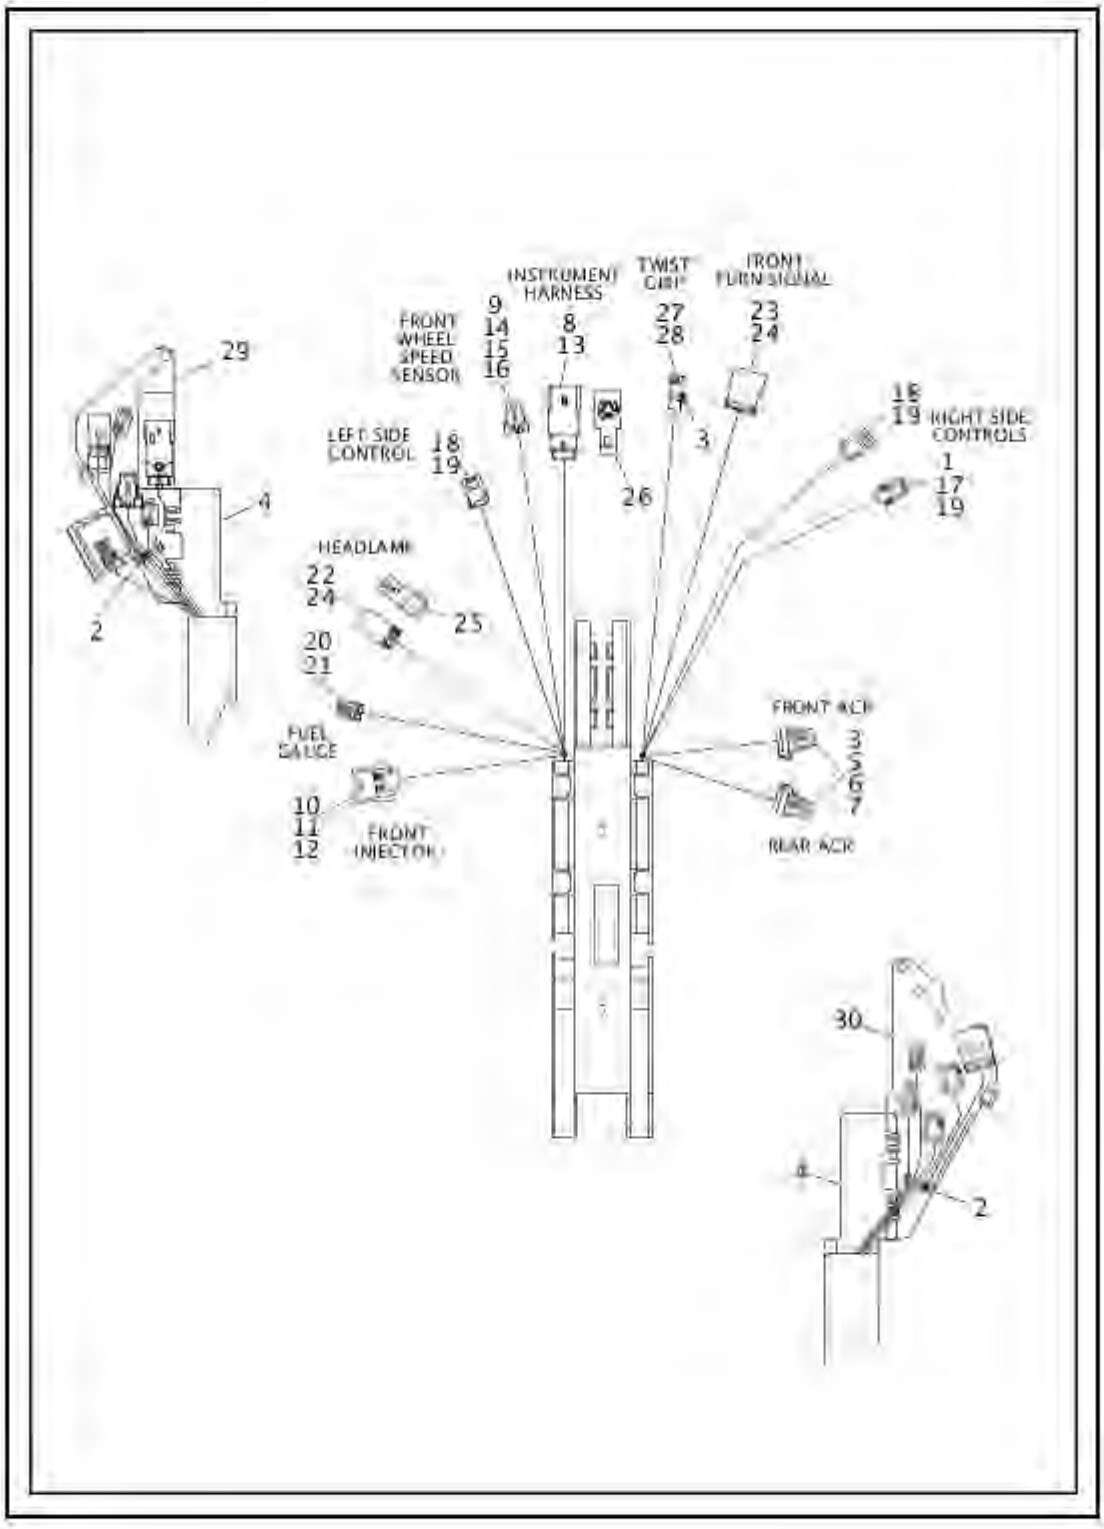

Index No.	Part No.	Description	Model(s)
27	69201163	HOUSING, six-way pin	FLSTN, FLSTC
28	69201164	TERMINAL, pin, 22 AWG *(6)*	FLSTN, FLSTC

29	69201296	BRACKET, electrical connector, right	FLSTN, FLSTC
30	69201297	BRACKET, electrical connector, left	FLSTN, FLSTC

WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)

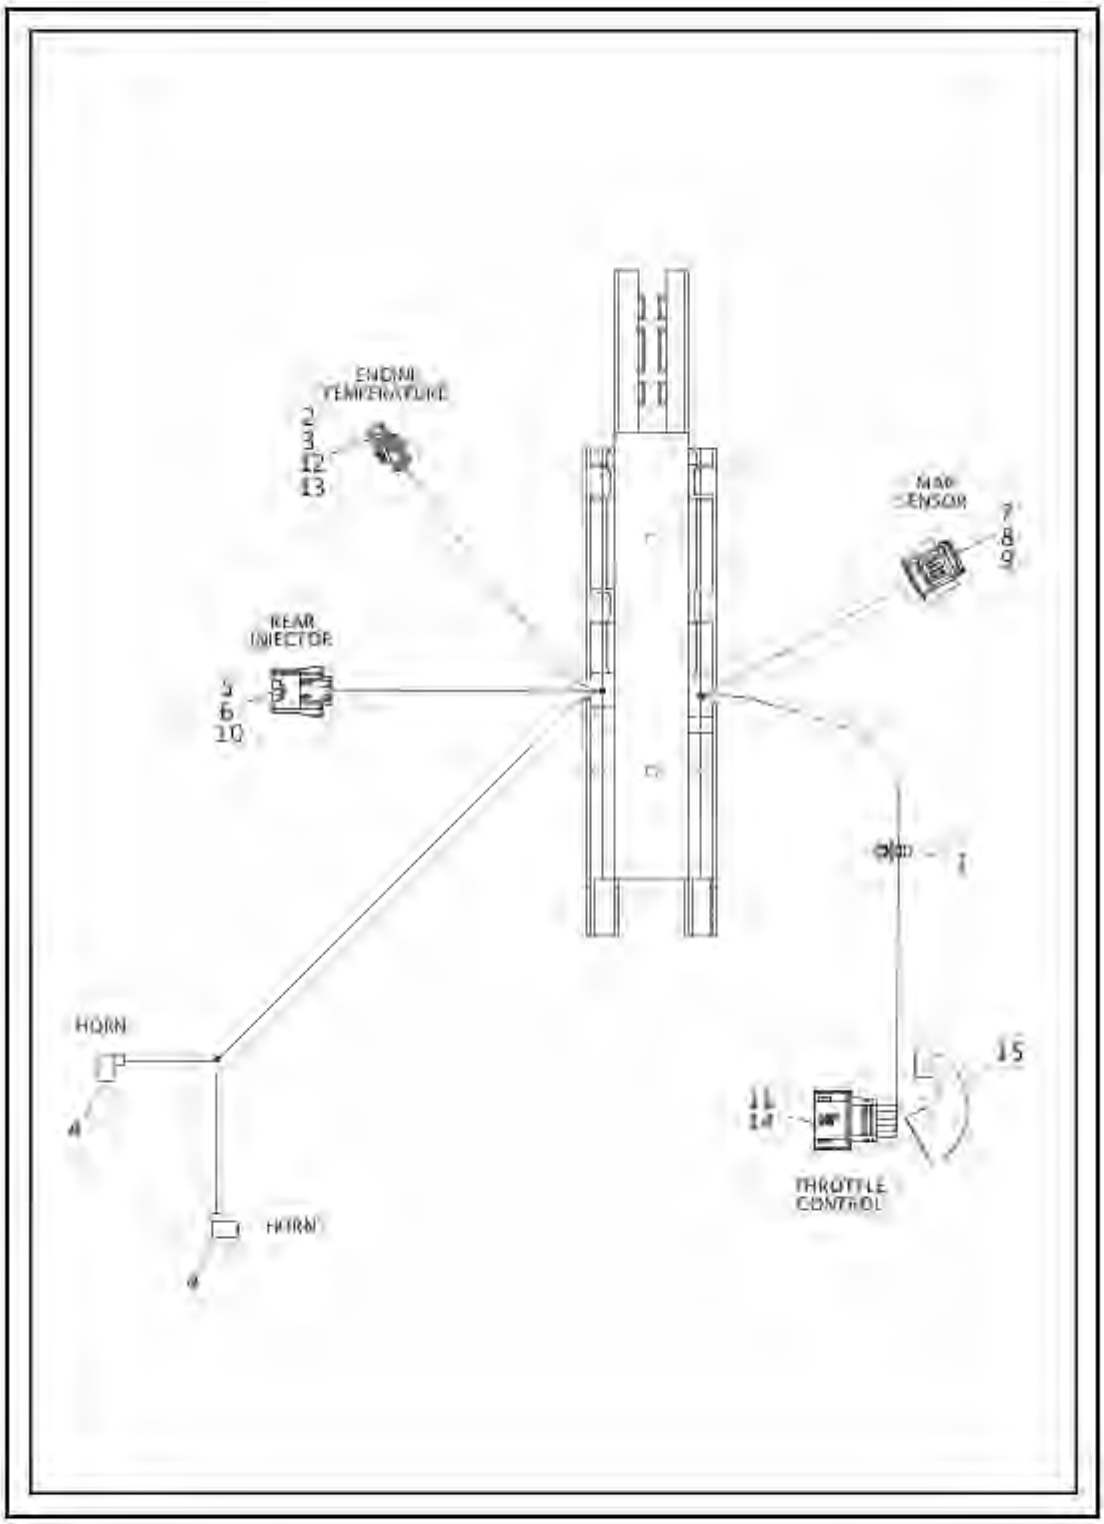

Index No.	Part No.	Description	Model(s)
5	72251-07	SECONDARY LOCK, two-way socket (yellow)	FLSTN, FLSTC
6	72402-07	HOUSING, two-way socket (black)	FLSTN, FLSTC

7	72406-07A	HOUSING, four-way socket	FLSTN, FLSTC
8	72407-07	TERMINAL, socket, 16-20 AWG *(4)*	FLSTN, FLSTC
9	72408-07	WIRE SEAL, 20 AWG (blue) *(4)*	FLSTN, FLSTC
10	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FLSTN, FLSTC
11	72483-08BK	HOUSING, six-way socket (black)	FLSTN, FLSTC
15	69200437	BOOT, rubber	FLSTN, FLSTC

WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)

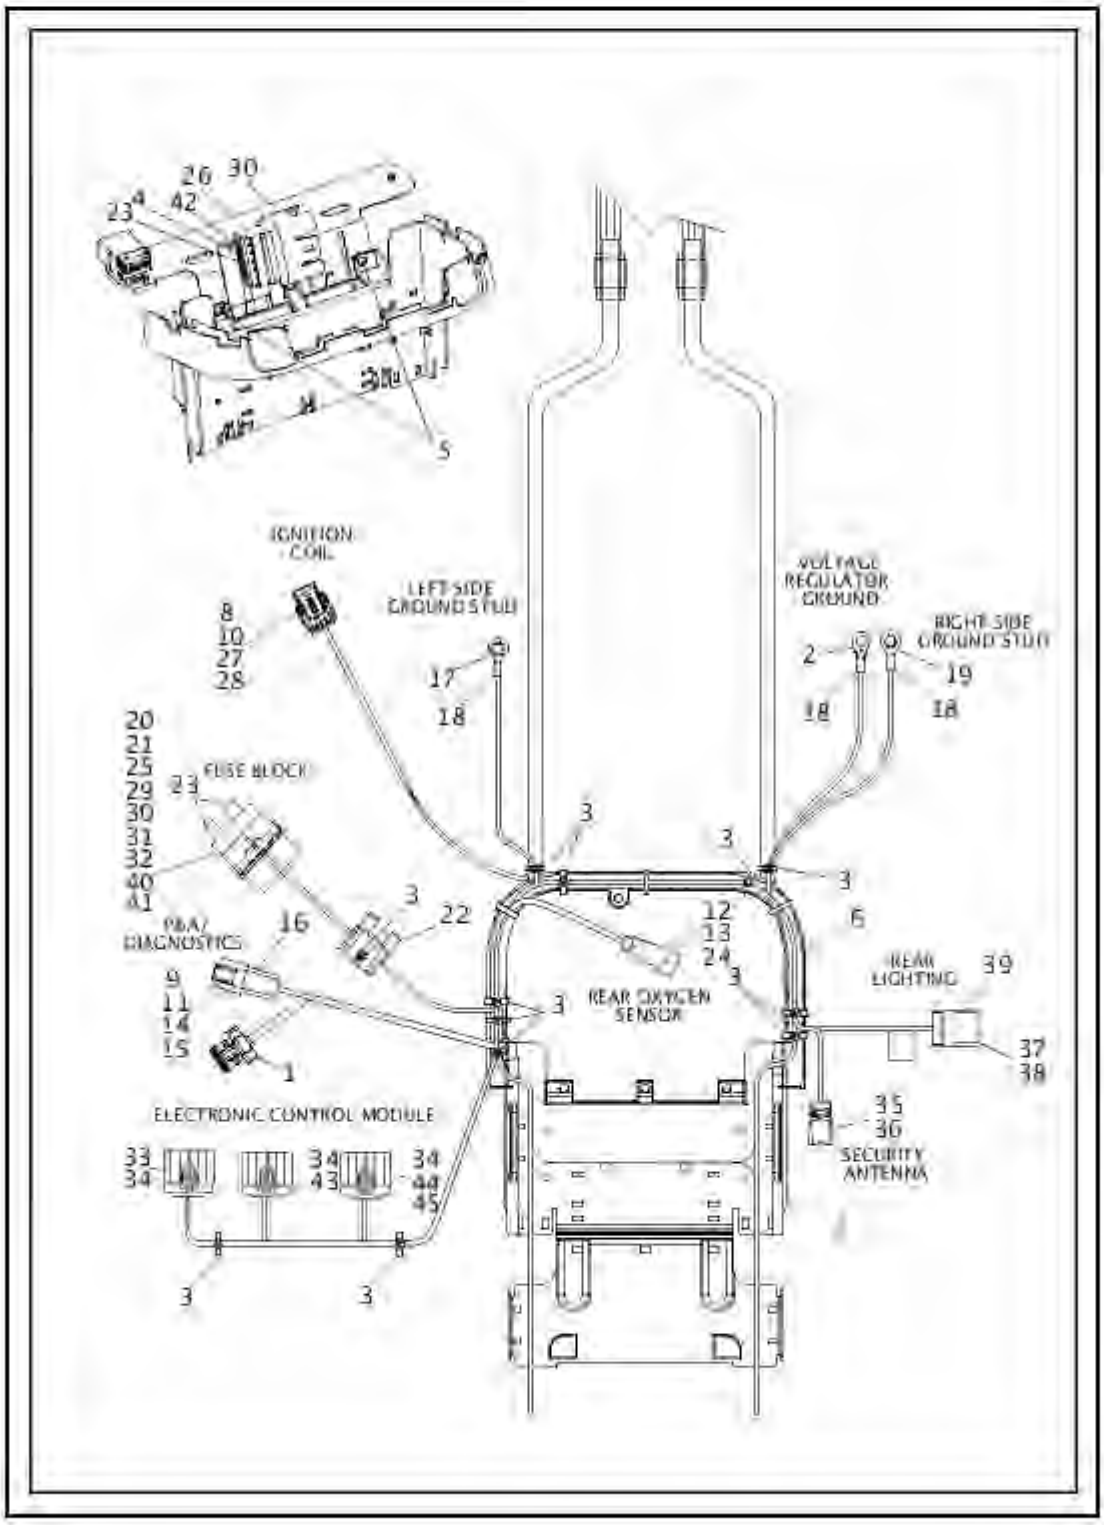

Index No.	Part No.	Description	Model(s)
43	69200267A	HOUSING, 18-way, socket, key B (gray)	FLSTN, FLSTC
44	69200268A	HOUSING, 18-way, socket, key C (brown)	FLSTN, FLSTC
45	69201168	TERMINAL, socket, 22 AWG (silver) *(2)*	FLSTN, FLSTC

WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)

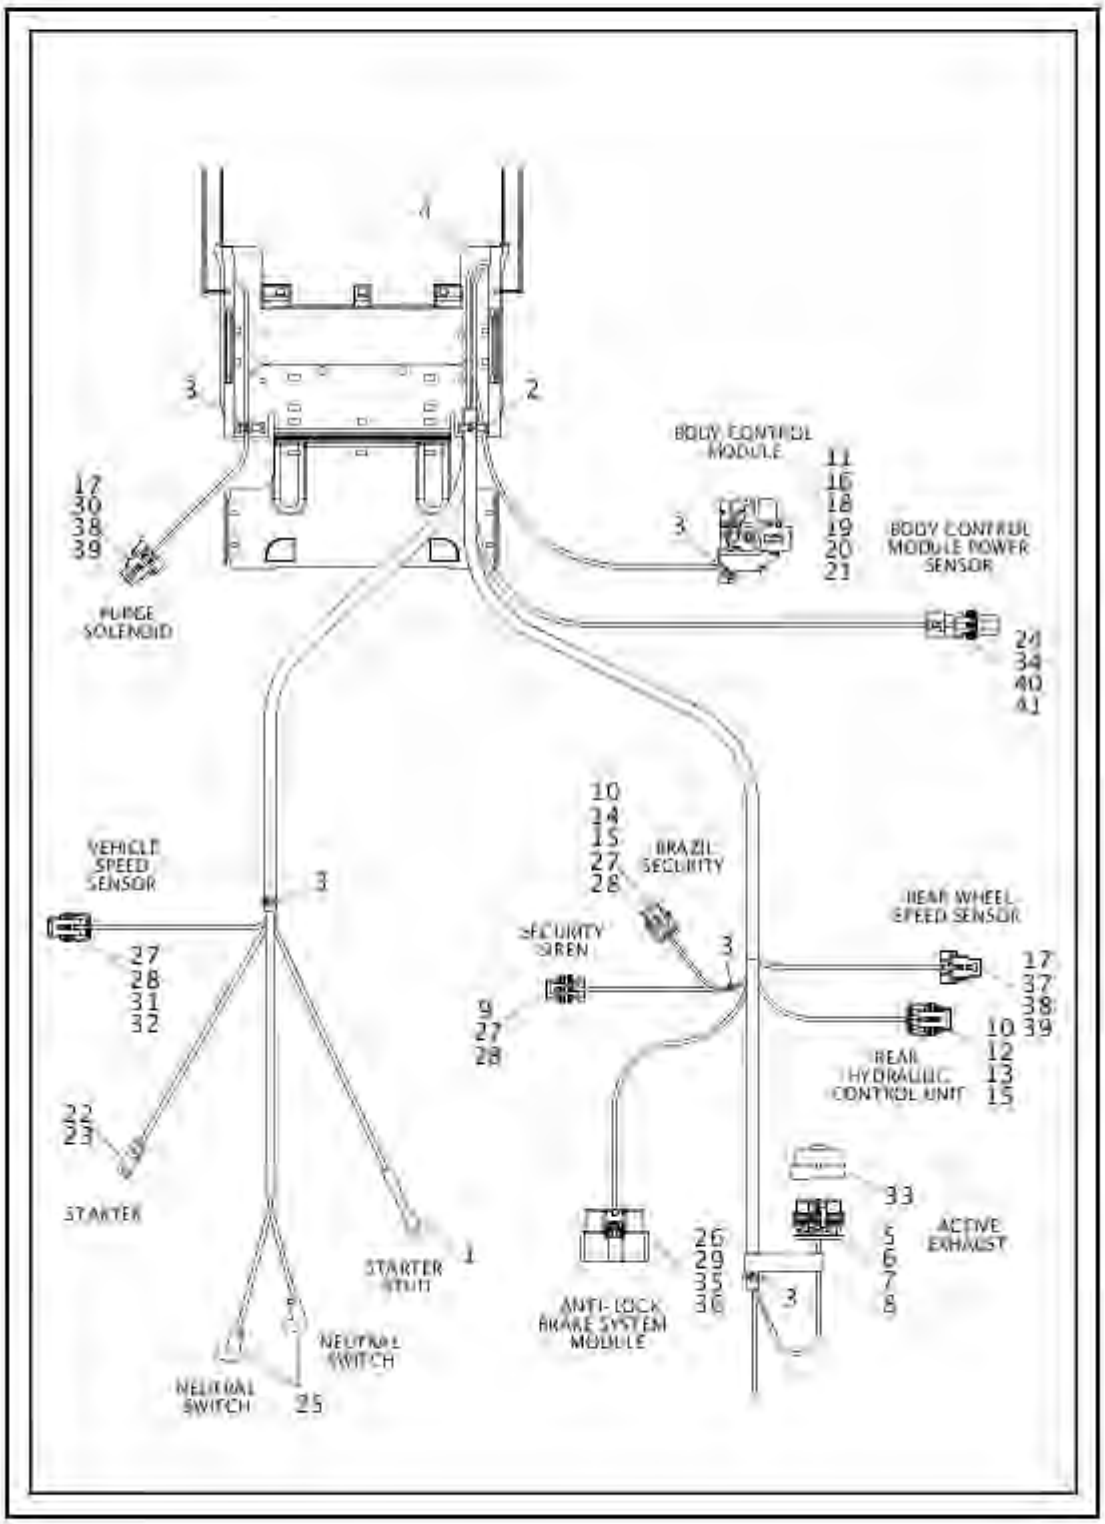

Index No.	Part No.	Description	Model(s)

14	72097-06	PLUG, oval (orange) (Brazil) *(2)*	FLSTN, FLSTC

WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)

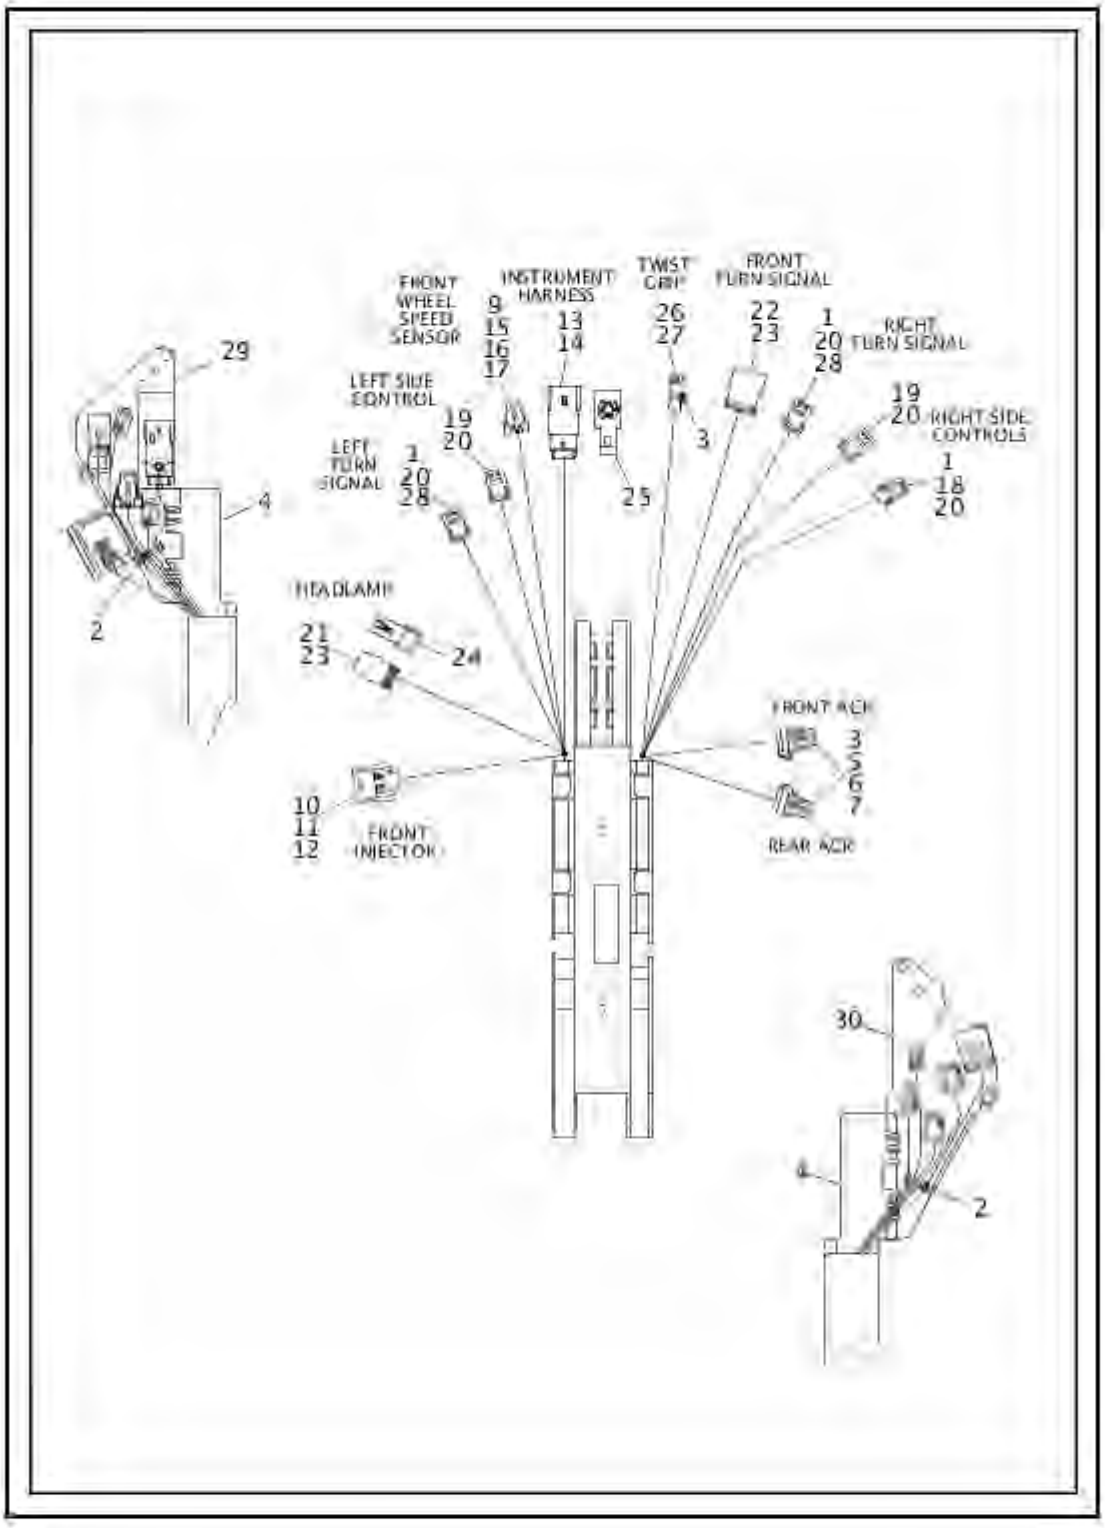

Index No.	Part No.	Description	Model(s)
14	72554-09GY	HOUSING, six-way pin	FXSB
26	69201163	HOUSING, six-way pin	FXSB
27	69201164	TERMINAL, pin, 22 AWG *(6)*	FXSB

28	69201180	HOUSING, four-way pin (gray) *(2)*	FXSB
29	69201296	BRACKET, electrical connector, right	FXSB
30	69201297	BRACKET, electrical connector, left	FXSB

WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)

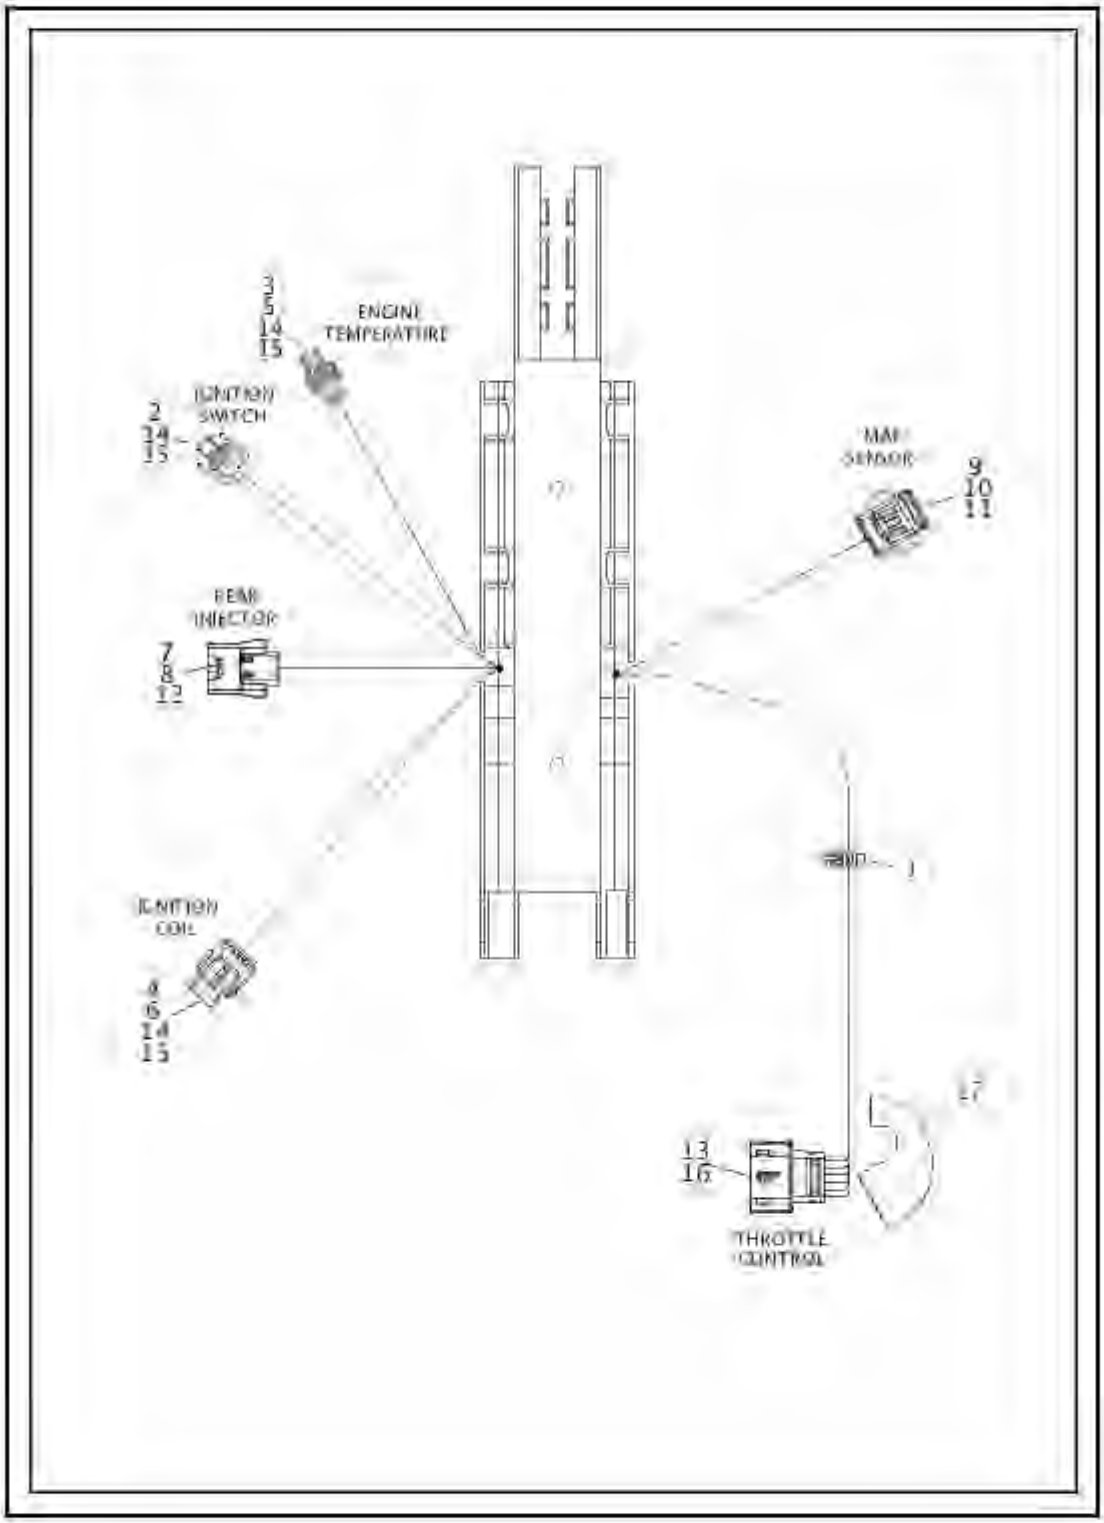

Index No.	Part No.	Description	Model(s)
7	72251-07	SECONDARY LOCK, two-way socket (yellow)	FXSB

8	72402-07	HOUSING, two-way socket (black)	FXSB
9	72406-07A	HOUSING, four-way socket	FXSB
10	72407-07	TERMINAL, socket, 16-20 AWG *(4)*	FXSB
11	72408-07	WIRE SEAL, 20 AWG (blue) *(4)*	FXSB
12	72413-07	TERMINAL, socket, 18-20 AWG *(2)*	FXSB
13	72483-08BK	HOUSING, six-way socket (black)	FXSB
17	69200437	BOOT, rubber	FXSB

WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)

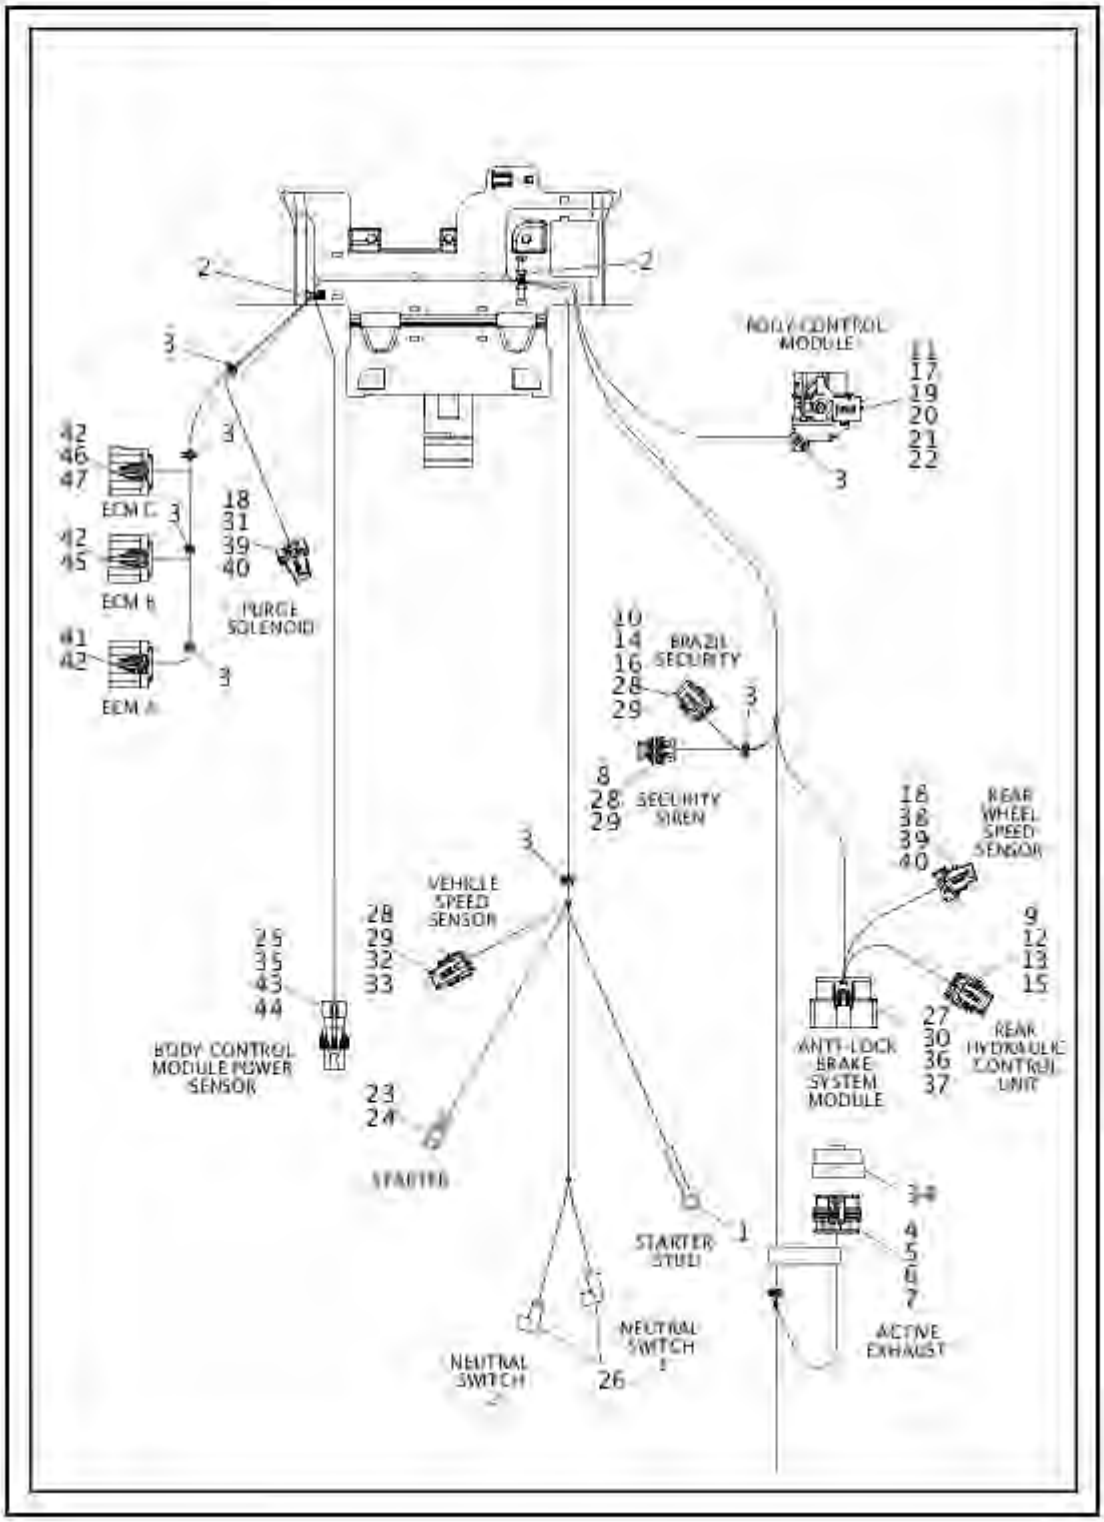

Index No.	Part No.	Description	Model(s)
45	69200267A	HOUSING, 18-way, socket, key B (gray)	FXSB
46	69200268A	HOUSING, 18-way, socket, key C (brown)	FXSB
47	69201168	TERMINAL, socket, 22 AWG (silver)	FXSB

BATTERY

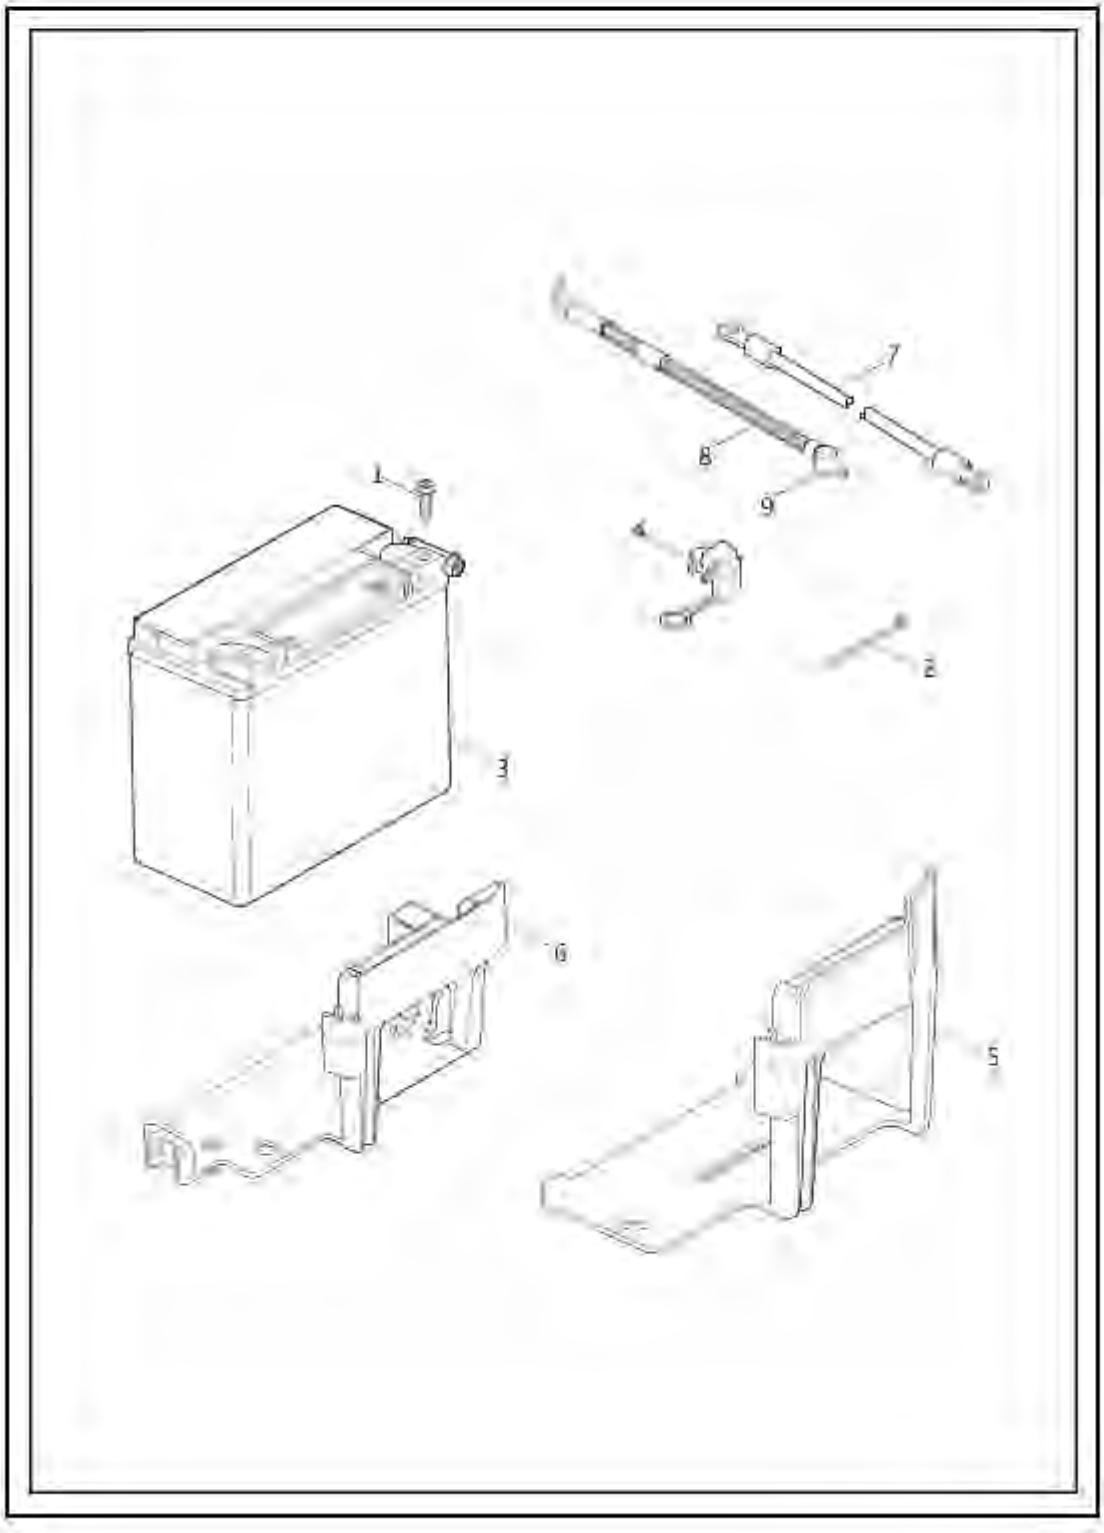

Index No.	Part No.	Description	Model(s)
	66000065	BATTERY, sealed (Brazil)	FXSB, FLSTC, FLSTF, FLSTN, FLSTFB

SWITCHES

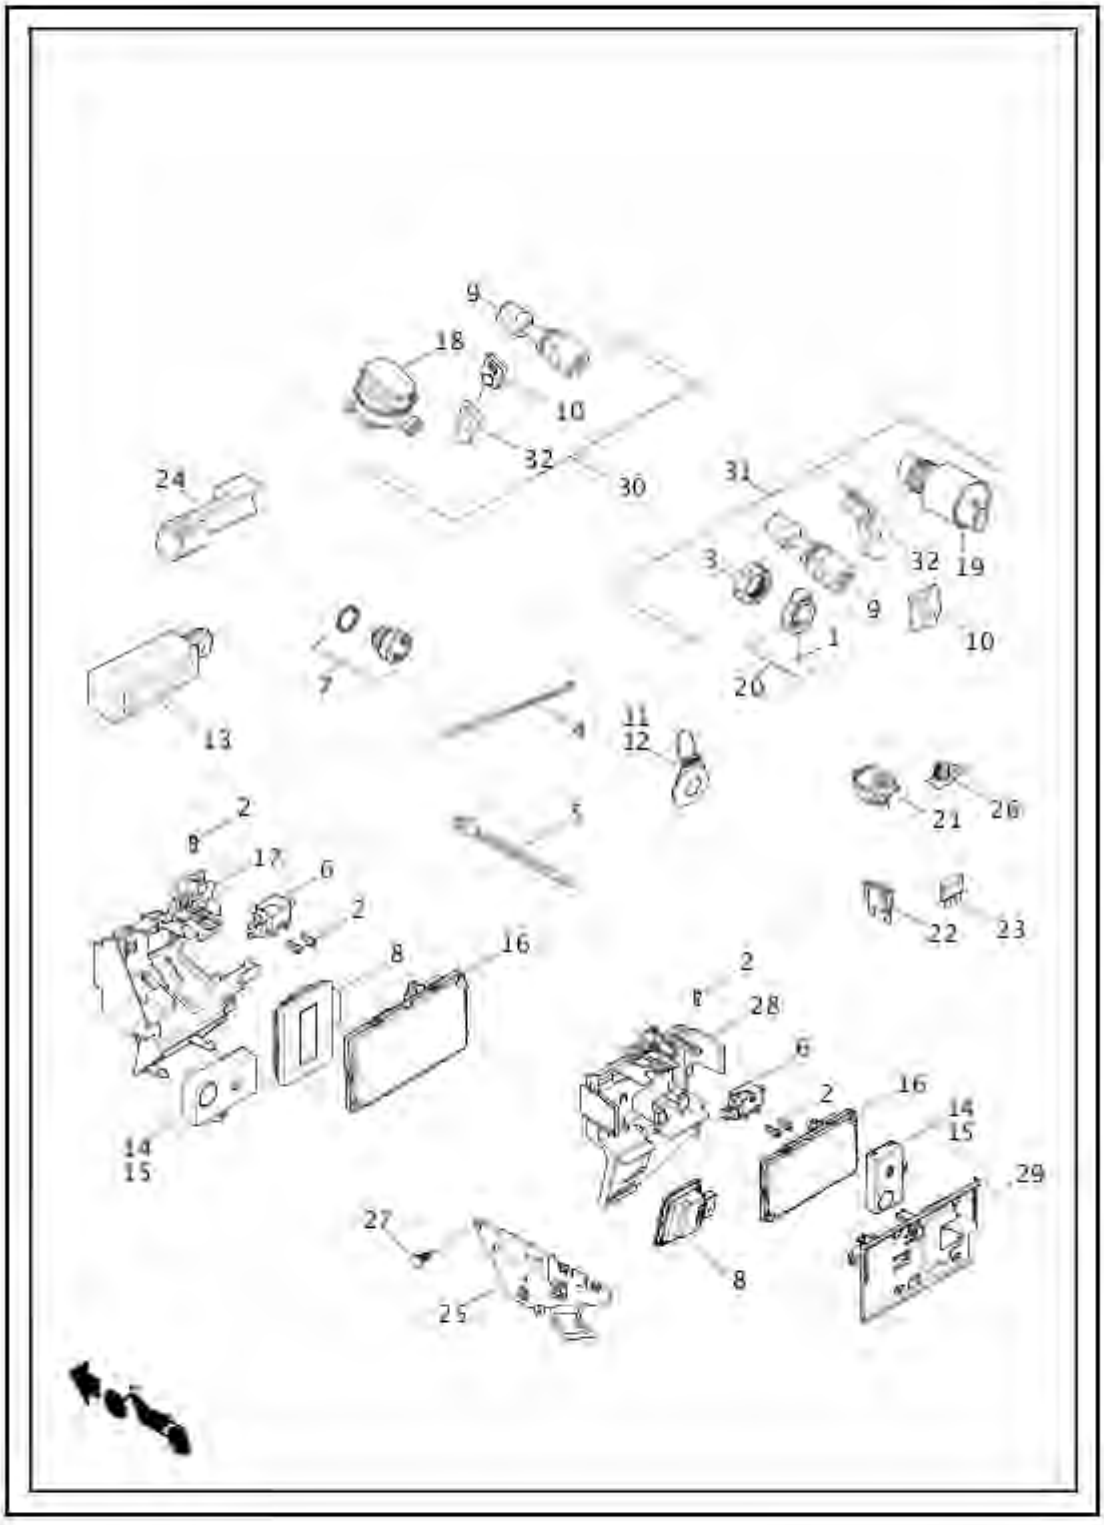

Index No.	Part No.	Description	Model(s)
5	10177	CABLE STRAP, (Japan)	

SADDLEBAGS - FLSTC

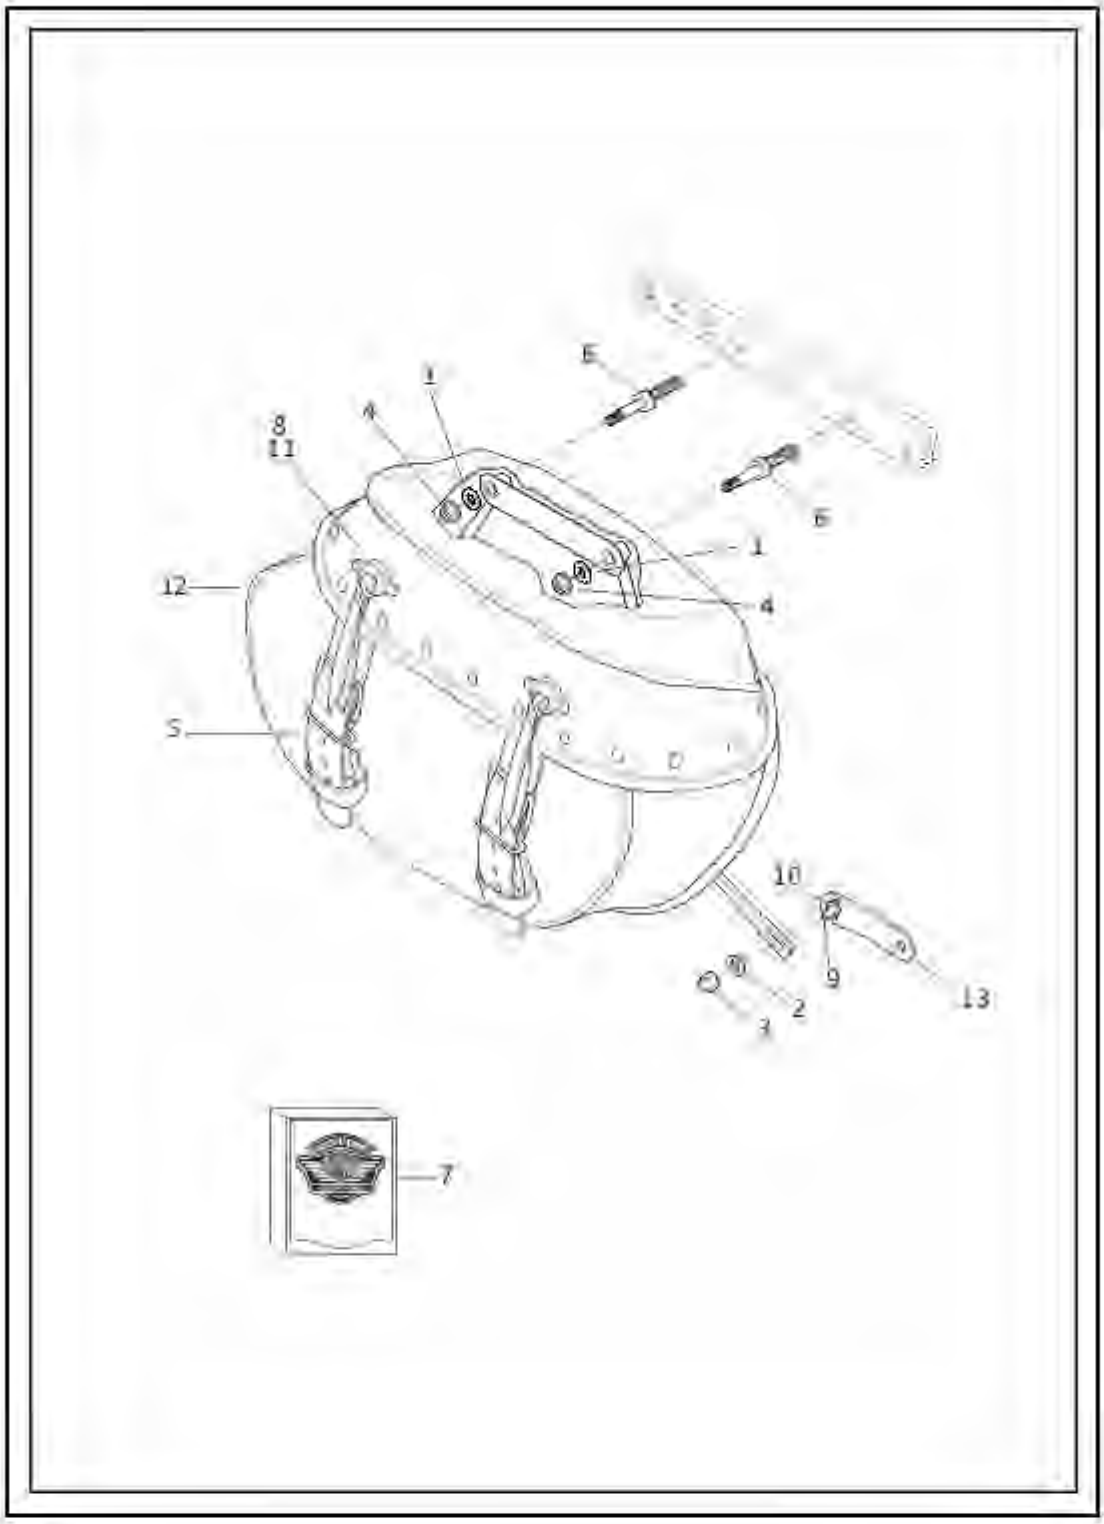

Index No.	Part No.	Description	Model(s)
9	10200410	BOLT *(2)*	FLSTC
10	10300100	WASHER, retaining *(2)*	FLSTC
11	61400327	CONCHO *(4)*	FLSTC
12	90201299	SADDLEBAG, (left) (not shown)	FLSTC
	90201300	SADDLEBAG, (right)	FLSTC
13	90201305	SUPPORT BAR, saddlebag	FLSTC

LABELS

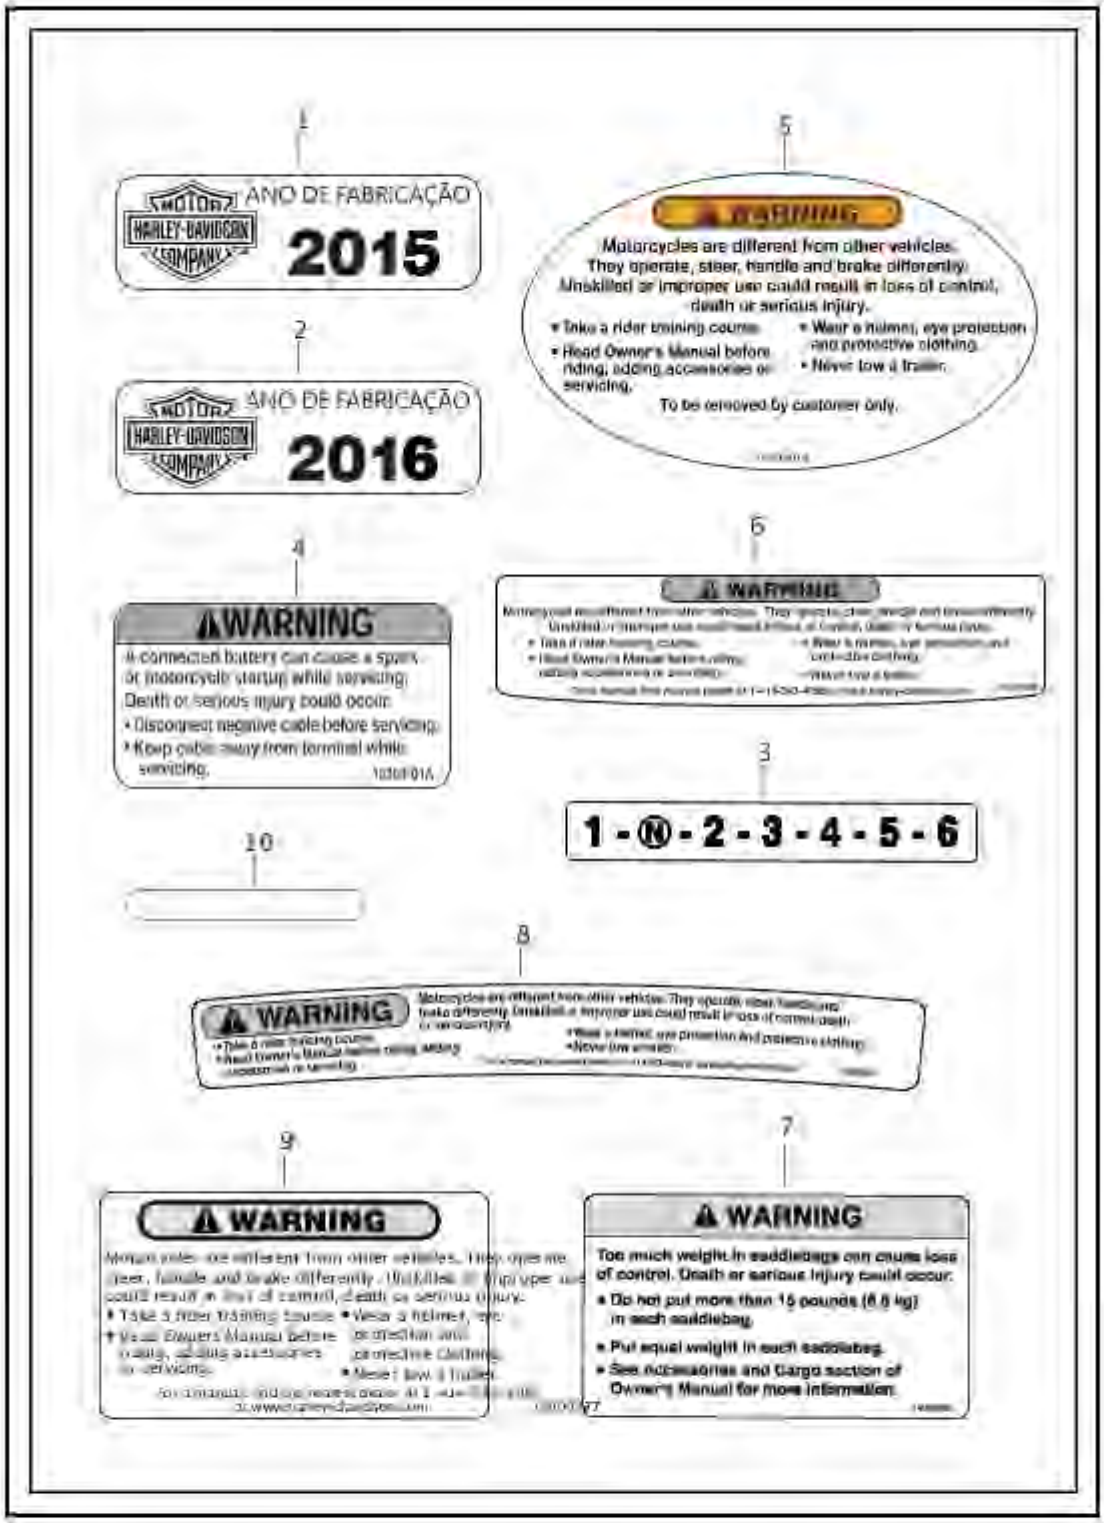

Index No.	Part No.	Description	Model(s)
8	14000347	LABEL, air cleaner warning (Domestic, California)	FLSS
9	14000377	LABEL, air cleaner warning (Domestic, California)	FLSTFBS

LOOSE PARTS

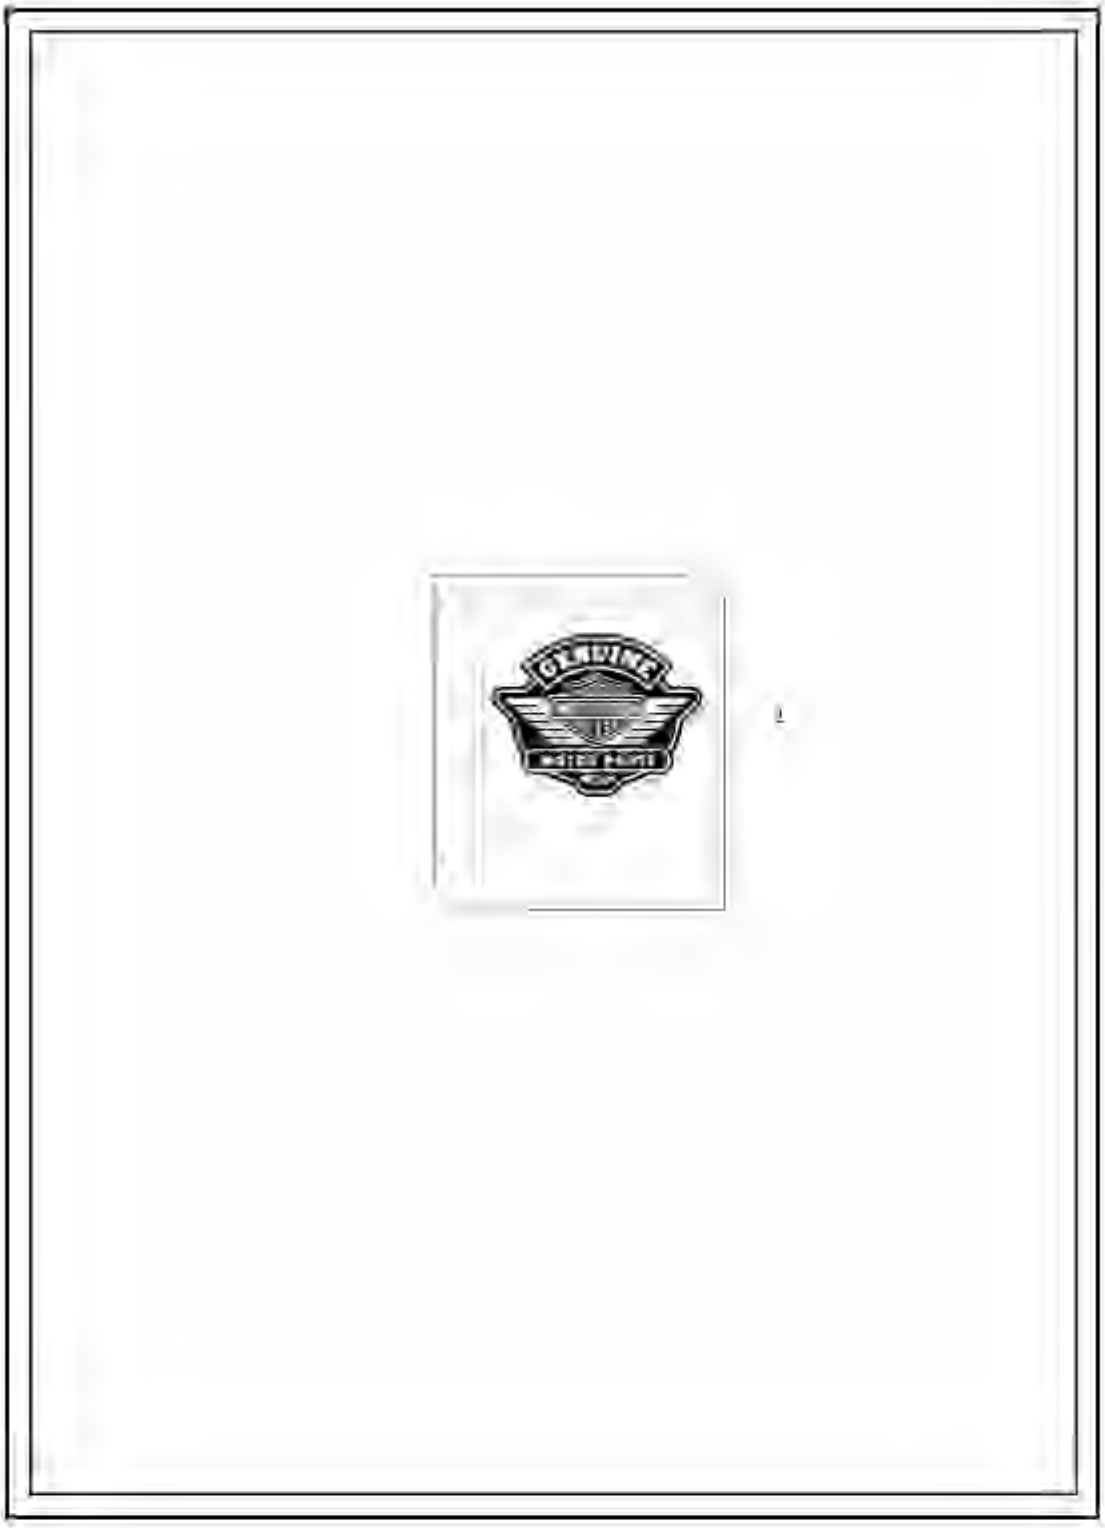

Index No.	Part No.	Description	Model(s)
	99469-16	OWNER'S MANUAL, (English)	
	94000326	OWNER'S KIT CONTENT, (Domestic)	
	29762-09	RAINSOCK	FLSTFBS

Numerical Index

10006	**BRAKE LINE AND MODULE, REAR, ABS** **FRAME AND JIFFY STAND**

	FUEL TANK **FUEL PUMP** **THROTTLE CONTROL** **WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)** **HORN** **SWITCHES**
1001	**SEATS**
10038A	**FUEL TANK**
10039	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB** **BRAKE CONTROL, REAR**
10040	**FRAME AND JIFFY STAND** **FRAME AND JIFFY STAND** **FRAME AND JIFFY STAND** **FRAME AND JIFFY STAND**
10053	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN** **FORK BRACKETS, FRONT - FXSB**
10065	**FRAME AND JIFFY STAND** **FENDER, FRONT** **FUEL PUMP** **HEADLAMP (1 OF 2)** **AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)** **WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)** **BATTERY**
10074	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
10080	**OIL TANK AND LINES - FXSB**
10102	**ALTERNATOR AND REGULATOR** **FENDER, FRONT** **FUEL TANK**
10103	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC**

10113	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
10115	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS** **TAIL LAMP - FLSTN**
10119	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
10124	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
10147	**WHEELS, FRONT (1 OF 2)** **WHEELS, REAR (1 OF 2)** **EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)**
10177	**ENGINE MOUNTS** **ELECTRONIC CONTROL MODULE (ECM) AND COIL** **FENDERS AND SUPPORTS, REAR - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB** **WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)** **SWITCHES**
10183	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS** **TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
10193	**FRAME AND JIFFY STAND**
10200201	**FENDER, FRONT**
10200374	**FUEL PUMP**
10200386	**GUARDS, SAREE**
10200410	**SADDLEBAGS - FLSTC**
10208	**OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
10216	**OIL TANK AND LINES - EXCEPT FXSB**
10226	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTN** **FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
10228	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
10300100	**SADDLEBAGS - FLSTC**
10326A	**WHEELS, REAR (1 OF 2)** **WHEELS, REAR (1 OF 2)**
1039	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
10500031	**BELT, CHAINS AND SPROCKETS**

10500041	**BRAKE CONTROL, FRONT**
10500053	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS**
1062	**PRIMARY HOUSING**
10800007	**LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
10800010	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
10800054	**GUARDS, SAREE**
10800060	**CLUTCH CONTROL - FLSS AND FLSTFBS**
10800093	**GUARDS, SAREE**
10800096	**BRAKE LINES, FRONT, NON-ABS - FLS** **FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
10800101	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
10800102	**CLUTCH CONTROL - FLSS AND FLSTFBS**
10850	**WHEELS, FRONT (1 OF 2)**
10851	**BRAKE LINE AND MODULE, REAR, ABS**
10861	**BRAKE LINES, FRONT, ABS**
10866	**FOOTRESTS AND FOOTBOARDS**
10871	**FUEL PUMP**
1090A	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
10991A	**TRANSMISSION GEARS**
10998	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
11000101	**SHIFTER, GEAR** **TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
11061A	**TRANSMISSION GEARS**
11081A	**TRANSMISSION GEARS**
11082	**TRANSMISSION GEARS**
11096	**TRANSMISSION GEARS** **CLUTCH - TWIN CAM 103™**
11100010	**FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
11100014	**FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
11100066	**FENDERS AND SUPPORTS, REAR - FXSB**
11100069	**FENDERS AND SUPPORTS, REAR - FXSB**
11100103	**LICENSE PLATE BRACKETS - FXSB**
11100106	**FENDERS AND SUPPORTS, REAR - FXSB**
11105	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**

	TRANSMISSION HOUSING - FLSS AND FLSTFBS **PRIMARY HOUSING** **OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
11120	**OIL TANK AND LINES - FXSB**
11132A	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™** **TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
11140	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
11142	**BRAKE CONTROL, FRONT**
11143	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™** **CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB** **CLUTCH CONTROL - FLSS AND FLSTFBS**
11145A	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
11150	**SHIFTER, GEAR**
11161	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
11177A	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™** **PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 110™**
11179	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
11180	**WHEELS, FRONT (1 OF 2)**
11191	**SHIFTER, GEAR**
11201	**TRANSMISSION GEARS**
11207A	**TRANSMISSION GEARS**
11256	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
11270	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
11273	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™**
11282	**FORK, REAR AND SHOCK ABSORBERS**
11289A	**SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™** **SENSORS AND SWITCHES, ENGINE - TWIN CAM 110™** **TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
11291	**SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™**
11292	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS** **AIR CLEANER - TWIN CAM 110™ - FLSS**
11293	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™** **CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™**

	CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™
11301	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
11304	**FOOTRESTS AND FOOTBOARDS**
11323	**FUEL TANK**
11326	**OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
11364	**BRAKE CONTROL, REAR**
11379	**BRAKE CONTROL, FRONT**
11387A	**FUEL TANK** **FUEL PUMP**
11389	**SHIFTER, GEAR**
11413	**REAR BELT GUARD**
11437	**FENDER, FRONT**
11447	**OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
11461	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
11514	**FORK, REAR AND SHOCK ABSORBERS**
11529	**FUEL TANK**
11533	**FUEL TANK**
11565C	**FORK, REAR AND SHOCK ABSORBERS**
11575	**SHIFTER, GEAR**
11599A	**TRANSMISSION GEARS**
11600001	**BRAKE LINES, FRONT, NON-ABS - FLS** **BRAKE LINES, FRONT, ABS**
11688	**BRAKE CONTROL, REAR**
11689	**FORK, FRONT - FXSB**
11700002	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
11785	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
11860	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
11900035	**TRANSMISSION HOUSING - FLSS AND FLSTFBS**
11907	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**

	CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™
11936	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
12052A	**PRIMARY HOUSING**
12068	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
12074	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
12077	**TRANSMISSION GEARS**
12100028	**CLUTCH CONTROL - FLSS AND FLSTFBS**
12200044	**WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)**
12200060	**FENDERS AND SUPPORTS, REAR - FXSB**
12200065	**BELT, CHAINS AND SPROCKETS**
12200092	**FENDER, FRONT**
12400108	**GUARDS, SAREE**
12500001	**THROTTLE CONTROL**
12600015	**FRAME AND JIFFY STAND** **SWITCHES**
12600067	**FUEL TANK**
12600177	**WHEELS, REAR (2 OF 2)**
13729-15	**LABELS**
13729-16	**LABELS**
14000069	**LABELS**
14000347	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS** **AIR CLEANER - TWIN CAM 110™ - FLSS** **LABELS**
14000377	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS** **LABELS**
14000827	**LABELS**
14100035	**FUEL TANK TRIM**
14100036	**FUEL TANK TRIM**
14100435	**FUEL TANK**
14100605	**CLUTCH CONTROL - FLSS AND FLSTFBS** **BRAKE CONTROL, FRONT**
14100606	**BRAKE CALIPER, FRONT** **BRAKE CALIPER, REAR**

14100628BAAA	**FUEL TANK TRIM**
14100628BAAB	**FUEL TANK TRIM**
14100628BAAC	**FUEL TANK TRIM**
14100699	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS**
14100750	**FUEL TANK TRIM**
14100751	**FUEL TANK TRIM**
14100754	**FUEL TANK TRIM**
14100755	**FUEL TANK TRIM**
14100756	**FENDER, FRONT**
14142-09	**FENDER, FRONT**
14272-06	**LABELS**
14728-07	**ENGINE BALANCER**
14761-00	**ENGINE BALANCER**
14762-00	**ENGINE BALANCER**
14764-00	**ENGINE BALANCER**
14769-00	**ENGINE BALANCER**
14784-07	**ENGINE BALANCER**
14789-07	**ENGINE BALANCER**
15346-98A	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
15368-01A	**LABELS**
15370-01A	**LABELS**
15385-08	**LABELS**
1565	**ELECTRONIC CONTROL MODULE (ECM) AND COIL** **SWITCHES**
16200069	**ENGINE ASSEMBLY - TWIN CAM 103™**
16200175	**ENGINE ASSEMBLY - TWIN CAM 110™**
16236-08A	**ENGINE MOUNTS**
16247-06	**ENGINE MOUNTS**
16400017	**ENGINE MOUNTS**
16465-06	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
16478-85A	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™** **CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
16480-92A	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™** **CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**

16500023	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
16500026	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
16500027	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
16574-99A	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™** **TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
16583-00A	**ENGINE BALANCER** **TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS** **PRIMARY HOUSING**
16589-99A	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
16595-99A	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™** **CYLINDERS, HEADS AND VALVES - TWIN CAM 110™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
16699-06	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™** **CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
16715-83	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™** **CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
16719-99B	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
16787-99A	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
16800003A	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
16801-07B	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
16834-99A	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™** **CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
17025-03A	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17045-99D	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™** **CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
17052-99C	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
17053-99C	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
17251-07B	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
17252-07A	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
17253-07B	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
17257-07A	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
17285-07A	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
17349-07B	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**

17350-07B	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
17360-83A	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17369-06	**PRIMARY HOUSING**
17375-83A	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17386-99A	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17429-91	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17460-07A	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
17572-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™**
17573-99A	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™**
17574-99A	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™**
17575-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™**
17576-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™**
17577-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™**
17587-10	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™**
17594-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17595-10	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™**
17596-10	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™**
17611-83	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17654-10	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™**
17707-11	**ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17709-11	**ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17729-08	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
1775	**PRIMARY HOUSING**
1778	**PRIMARY HOUSING**
17922-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17923-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17939-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17945-36B	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**

17947-36	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17948-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17964-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17966-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
17968-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
18011-86	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
18020-83	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
18048-98A	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
18067-09	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
18074-05A	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
18085-05B	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
18094-02A	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
18161-08	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
18168-08	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
18183-03	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
18187-07	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
18189-07	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
18245-02	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
18258-02	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
18260-02	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™**
18270-00A	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
18271-00	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
18272-00	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
18280-07	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
18535-99	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
18538-99C	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™**
18572-13	**ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
18635-99B	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
19811-16	**ENGINE ASSEMBLY - TWIN CAM 103™**

19816-16	**ENGINE ASSEMBLY - TWIN CAM 103™**
19818-16	**ENGINE ASSEMBLY - TWIN CAM 103™**
21918-99	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™**
21919-99	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™**
21945-99	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™**
21951-11	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 110™**
21953-11	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 110™**
21962-07	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™**
21963-07	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™**
21964-07	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™**
22000001	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 110™**
22000003	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 110™**
22097-99	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™** **PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 110™**
221	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
22131-05	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™**
22307-99	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
2261	**SWITCHES, HANDLEBAR LEFT, FRONT** **SWITCHES, HANDLEBAR RIGHT, FRONT**
23912-07B	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 103™**
24004-03B	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
24009-06	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
24018-10	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
24100022	**PISTONS AND FLYWHEEL ASSEMBLY - TWIN CAM 110™**
2441	**FUEL TANK**
2452	**WINDSHIELD - FLSTC**
24603-00	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™** **ENGINE MOUNTS**
24605-07	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
24722-07B	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**

24754-75A	**PRIMARY HOUSING**
24983-00	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
2501A	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **INSTRUMENTS - FXSB**
25244-99A	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25355-06A	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25363-01B	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™**
25369-01B	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™**
2538	**SEATS**
25395-10	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™**
25400002	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™**
25400003	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™**
25566-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25585-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25600012	**CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25604-00A	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
25605-00A	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
25638-07	**CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
2566	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
25673-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25675-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25683-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25700020	**PRIMARY HOUSING**
25700037	**PRIMARY HOUSING**
25700038	**PRIMARY HOUSING**
25700043	**PRIMARY HOUSING**
25700178	**TRANSMISSION HOUSING - FLSS AND FLSTFBS**
25700180	**TRANSMISSION HOUSING - FLSS AND FLSTFBS**
25700226	**PRIMARY HOUSING**

25700234	**PRIMARY HOUSING**
25728-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25729-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25731-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25734-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25736-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25737-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
25738-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
2579A	**BRAKE CONTROL, REAR**
25800017	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
2590	**CLUTCH CONTROL - FLSS AND FLSTFBS**
26037-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
2604	**FENDER, FRONT** **FENDERS AND SUPPORTS, REAR - FLSTC** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
26210-99	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
26278-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
26281-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
26282-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
26314-99	**OIL TANK AND LINES - FXSB**
26352-95A	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
26400-82B	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
2647B	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
26500002	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
26561-99	**SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™**

	SENSORS AND SWITCHES, ENGINE - TWIN CAM 110™
2692WB	**TURN SIGNALS, REAR (1 OF 2)**
26993-06	**INDUCTION MODULE, FUEL**
26995-86B	**INDUCTION MODULE, FUEL**
27050-11	**EVAPORATIVE EMISSIONS COMPONENTS**
27200002	**INDUCTION MODULE, FUEL**
27246-11	**EVAPORATIVE EMISSIONS COMPONENTS**
27444-00Y	**STARTER MOTOR**
27609-01B	**INDUCTION MODULE, FUEL**
27711-08	**INDUCTION MODULE, FUEL**
27712-08	**INDUCTION MODULE, FUEL**
27715-07	**EVAPORATIVE EMISSIONS COMPONENTS** **SWITCHES**
27721-08	**INDUCTION MODULE, FUEL**
2773	**LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
2882W	**HORN**
28839-11	**EVAPORATIVE EMISSIONS COMPONENTS**
28860-11	**EVAPORATIVE EMISSIONS COMPONENTS**
28861-07A	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™** **CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
28864-11	**EVAPORATIVE EMISSIONS COMPONENTS**
29000026	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
29000033	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
29000123	**AIR CLEANER - TWIN CAM 110™ - FLSS**
29127-95B	**LABELS**
29200014	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS** **AIR CLEANER - TWIN CAM 110™ - FLSS**
29200015	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS** **AIR CLEANER - TWIN CAM 110™ - FLSS**
29200017	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS** **AIR CLEANER - TWIN CAM 110™ - FLSS**
29200018	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS** **AIR CLEANER - TWIN CAM 110™ - FLSS**
2921	**WINDSHIELD - FLSTC**
29241-08	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS** **AIR CLEANER - TWIN CAM 110™ - FLSS**

29244-08	**AIR CLEANER - TWIN CAM 110™ - FLSS**
29267-08A	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS** **AIR CLEANER - TWIN CAM 110™ - FLSS**
29269-83A	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS** **AIR CLEANER - TWIN CAM 110™ - FLSTFBS**
29327-94	**AIR CLEANER - TWIN CAM 110™ - FLSS**
29400043	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
29400045	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
29400046	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
29400159	**AIR CLEANER - TWIN CAM 110™ - FLSS**
29400161	**AIR CLEANER - TWIN CAM 110™ - FLSS**
29404-01A	**LABELS**
2941	**ALTERNATOR AND REGULATOR**
29465-08A	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
29517-07A	**CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
29670-09	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS**
29762-09	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS** **LOOSE PARTS**
29763-09	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS**
2980	**CLUTCH - TWIN CAM 103™**
30017-08	**ALTERNATOR AND REGULATOR**
30041-08A	**ALTERNATOR AND REGULATOR**
3017	**FUEL TANK**
3022A	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
3048	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS**
3050	**ALTERNATOR AND REGULATOR**
3056	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **FENDERS AND SUPPORTS, REAR - FLSTN** **FENDERS AND SUPPORTS, REAR - FLS AND FLSS** **FENDERS AND SUPPORTS, REAR - FXSB**
3061	**BRAKE LINE AND MODULE, REAR, ABS**
3075	**SEATS**
3109	**BELT, CHAINS AND SPROCKETS** **WHEELS, REAR (1 OF 2)**
3110	**ENGINE BALANCER**

3144	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
31604-06	**STARTER MOTOR**
31618-06A	**STARTER MOTOR**
31633-07A	**STARTER MOTOR**
31684-11	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
31696-07A	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
31742-00	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
31743-01	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
31772-07	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
31802-10	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
31960-99A	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
31981-99C	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
32001-08A	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
32009-11	**BRAKE LINES, FRONT, ABS**
3210A	**INSTRUMENTS - FXSB** **HANDLEBAR**
32306-08	**THROTTLE CONTROL**
32319-07A	**INDUCTION MODULE, FUEL**
3233	**FRAME AND JIFFY STAND**
32362-04A	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
32417-10	**SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™**
32446-99	**SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™** **SENSORS AND SWITCHES, ENGINE - TWIN CAM 110™**
3249	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
32543-07	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™**
32700005	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
32700006	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
32700050	**THROTTLE CONTROL**
32707-01C	**SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™** **SENSORS AND SWITCHES, ENGINE - TWIN CAM 110™**
32727-00	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™**

3275	**INDUCTION MODULE, FUEL** **SHIFTER, GEAR**
3300	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
33009-10A	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
33012-10A	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
33048-72	**FOOTRESTS AND FOOTBOARDS**
33189-63	**FOOTRESTS AND FOOTBOARDS**
33389-07	**SHIFTER, GEAR**
33409-06B	**SHIFTER, GEAR**
33413-06A	**SHIFTER, GEAR**
33525-07	**OIL TANK AND LINES - EXCEPT FXSB**
33527-08	**OIL TANK AND LINES - FXSB**
33528-08	**OIL TANK AND LINES - FXSB**
33529-08	**OIL TANK AND LINES - FXSB**
33531-07	**OIL TANK AND LINES - EXCEPT FXSB**
33630-07A	**FRAME AND JIFFY STAND** **FOOTRESTS AND FOOTBOARDS**
33660-07	**SHIFTER, GEAR**
33668-07	**SHIFTER, GEAR**
33683-07A	**FRAME AND JIFFY STAND** **FOOTRESTS AND FOOTBOARDS**
33708-94	**SHIFTER, GEAR** **FOOTRESTS AND FOOTBOARDS**
33719-79B	**SHIFTER, GEAR**
3383	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
33849-97	**SHIFTER, GEAR**
3387	**LICENSE PLATE BRACKETS - FLS AND FLSS**
33895-82D	**SHIFTER, GEAR**
3391	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTN** **FENDERS AND SUPPORTS, REAR - FLS AND FLSS** **EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
33926-06B	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS** **SWITCHES**

34064-00C	**SHIFTER, GEAR**
34091-08	**TRANSMISSION GEARS**
34469-06B	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
34521-06B	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
34564-90B	**SHIFTER, GEAR**
34611-65A	**SHIFTER, GEAR** **SHIFTER, GEAR**
3471	**HANDLEBAR**
34799-07	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
34854-08	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
3485A	**FENDER, FRONT**
34917-06	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
34920-86A	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
34934-06	**PRIMARY HOUSING**
34948-08	**PRIMARY HOUSING**
3494A	**HANDLEBAR**
34987-06	**SHIFTER, GEAR**
35081-06	**SHIFTER, GEAR**
35082-07	**SHIFTER, GEAR**
35087-99A	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
35114-02	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
35122-06	**TRANSMISSION GEARS**
35124-06	**TRANSMISSION GEARS**
35126-06	**TRANSMISSION GEARS**
3514	**HEADLAMP (1 OF 2)** **AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
35186-06	**SHIFTER, GEAR** **TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
35187-06	**SHIFTER, GEAR**
35201-10	**TRANSMISSION GEARS**
35202-06	**TRANSMISSION GEARS**
35204-06	**TRANSMISSION GEARS**

35210-06	**SHIFTER, GEAR**
35217-06	**SHIFTER, GEAR**
35222-06	**SHIFTER, GEAR**
35223-06	**SHIFTER, GEAR**
35240-07	**ENGINE BALANCER**
35241-06	**BELT, CHAINS AND SPROCKETS**
35242-06	**BELT, CHAINS AND SPROCKETS**
35243-06	**SHIFTER, GEAR**
35244-06	**SHIFTER, GEAR**
35246-10A	**SHIFTER, GEAR** **TRANSMISSION GEARS**
35249-06A	**SHIFTER, GEAR**
35259-06	**SHIFTER, GEAR**
35260-06A	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
3537	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
3538	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
35467-06B	**TRANSMISSION GEARS**
35470-10	**TRANSMISSION GEARS**
3560WA	**FENDER, FRONT**
3561WC	**FENDER, FRONT**
3563	**AIR CLEANER - TWIN CAM 110™ - FLSS** **HORN**
35654-06	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
3574	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
35801-10	**TRANSMISSION GEARS**
35805-06A	**TRANSMISSION GEARS**
35807-06	**TRANSMISSION GEARS**
35811-06	**TRANSMISSION GEARS**
35814-06	**TRANSMISSION GEARS**
3594	**BELT, CHAINS AND SPROCKETS** **BRAKE LINES, FRONT, NON-ABS - FLS** **FORK BRACKETS, FRONT - FXSB** **FRAME AND JIFFY STAND**

3612	**LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FLS AND FLSS**
3615	**HEADLAMP (1 OF 2)**
3633	**SEATS**
36500034A	**BELT, CHAINS AND SPROCKETS**
36500078A	**BELT, CHAINS AND SPROCKETS**
3655A	**BRAKE CONTROL, REAR** **WHEELS, FRONT (1 OF 2)**
3656	**INSTRUMENTS - FXSB**
3658	**SWITCHES, HANDLEBAR LEFT, FRONT** **SWITCHES, HANDLEBAR RIGHT, FRONT**
36700144	**CLUTCH CONTROL - FLSS AND FLSTFBS**
36700145	**CLUTCH CONTROL - FLSS AND FLSTFBS**
36700186	**CLUTCH CONTROL - FLSS AND FLSTFBS**
36706-01K	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
36731-91	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
36805-06	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
3692A	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
3693A	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
3699D	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
37000026	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37000032	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37000033	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37000034	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37000035	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37000036	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37000083	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37000118	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37000217	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37000218	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37065-06	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
37069-90A	**TRANSMISSION GEARS**

	CLUTCH - TWIN CAM 103™
37090-98A	**CLUTCH - TWIN CAM 103™**
37092-06	**CLUTCH - TWIN CAM 103™**
37116-06	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
37142-07	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
37143-07A	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
37144-08	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
37186-10	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
37195-11	**TRANSMISSION HOUSING - FLSS AND FLSTFBS**
37198-11	**CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
37200023	**TRANSMISSION HOUSING - FLSS AND FLSTFBS**
37200034	**TRANSMISSION HOUSING - FLSS AND FLSTFBS**
37200096B	**CLUTCH CONTROL - FLSS AND FLSTFBS**
37200115	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
37200117	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
37200119	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
37200186	**CLUTCH CONTROL - FLSS AND FLSTFBS**
37312-75	**TRANSMISSION GEARS** **CLUTCH - TWIN CAM 103™**
37313-80	**TRANSMISSION GEARS** **CLUTCH - TWIN CAM 103™**
3736B	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
37496-90A	**CLUTCH - TWIN CAM 103™** **CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37554-11	**CLUTCH - TWIN CAM 103™**
3767B	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **FENDERS AND SUPPORTS, REAR - FLSTN**
37816-11	**CLUTCH - TWIN CAM 103™**
37871-04	**CLUTCH - TWIN CAM 103™**
37871-98A	**CLUTCH - TWIN CAM 103™**
37872-00	**CLUTCH - TWIN CAM 103™**
37883-98	**CLUTCH - TWIN CAM 103™**
37884-98	**CLUTCH - TWIN CAM 103™**
37903-90	**CLUTCH - TWIN CAM 103™**

37904-90	**CLUTCH - TWIN CAM 103™** **CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37905-00	**CLUTCH - TWIN CAM 103™** **CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37906-11	**CLUTCH - TWIN CAM 103™** **CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37909-90	**CLUTCH - TWIN CAM 103™** **CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
37912-00	**CLUTCH - TWIN CAM 103™**
37913-98	**CLUTCH - TWIN CAM 103™**
37932-98	**CLUTCH - TWIN CAM 103™**
3799	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
38630-88	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
38700-08A	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
38769-07A	**SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™** **SENSORS AND SWITCHES, ENGINE - TWIN CAM 110™**
38900-08	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
3953W	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
3983	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
3987	**REAR BELT GUARD** **TURN SIGNALS, REAR (1 OF 2)**
39929-06B	**PRIMARY HOUSING**
39968-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
39969-06	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
40000001	**BELT, CHAINS AND SPROCKETS**
40036-06	**BELT, CHAINS AND SPROCKETS**
40059-09A	**BELT, CHAINS AND SPROCKETS**
40100041	**BELT, CHAINS AND SPROCKETS**
4017	**SHIFTER, GEAR**
40323-00	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
40325-07	**BELT, CHAINS AND SPROCKETS** **WHEELS, REAR (1 OF 2)**
4042	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)** **FORK, FRONT - FXSB**

40558-82	**WHEELS, FRONT (1 OF 2)** **WHEELS, REAR (1 OF 2)**
40615-08	**WHEELS, REAR (1 OF 2)**
40659-06	**BELT, CHAINS AND SPROCKETS**
40700-08A	**WHEELS, REAR (1 OF 2)**
40716-11	**WHEELS, FRONT (1 OF 2)**
4074A	**FORK, REAR AND SHOCK ABSORBERS**
40900050A	**WHEELS, REAR (2 OF 2)**
40900182	**WHEELS, REAR (2 OF 2)**
40900206	**WHEELS, REAR (2 OF 2)**
4091	**LICENSE PLATE BRACKETS - FXSB**
40918-87	**BRAKE CONTROL, REAR**
40920-87	**BRAKE CONTROL, REAR**
40922-87A	**BRAKE CONTROL, REAR**
40982-11	**WHEELS, FRONT (1 OF 2)**
40999-87	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (1 OF 2)**
41000057	**ELECTRONIC CONTROL MODULE (ECM) AND COIL**
41063-09	**WHEELS, REAR (1 OF 2)**
41100036	**SWITCHES**
41100037	**BRAKE LINES, FRONT, ABS** **BRAKE LINE AND MODULE, REAR, ABS**
41123-79	**WHEELS, FRONT (1 OF 2)** **WHEELS, REAR (1 OF 2)**
41229-08	**WHEELS, REAR (1 OF 2)**
41242-08	**WHEELS, REAR (1 OF 2)**
41300095	**BRAKE CALIPER, FRONT**
41300097	**BRAKE CALIPER, REAR**
41300102	**BRAKE CALIPER, FRONT**
41300103	**BRAKE CALIPER, FRONT**
41300104	**BRAKE CALIPER, FRONT**
4132	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB** **CLUTCH CONTROL - FLSS AND FLSTFBS** **BRAKE CONTROL, FRONT**
41347-08	**WHEELS, REAR (1 OF 2)**

41349-07	**WHEELS, FRONT (1 OF 2)**
41358-08	**WHEELS, REAR (2 OF 2)**
41359-08	**WHEELS, REAR (1 OF 2)**
41474-06B	**WHEELS, FRONT (2 OF 2)**
41500022	**WHEELS, FRONT (2 OF 2)**
41500068	**WHEELS, FRONT (2 OF 2)**
41500088	**WHEELS, FRONT (2 OF 2)**
41500089	**WHEELS, REAR (2 OF 2)**
41502-07	**WHEELS, FRONT (1 OF 2)**
41504-07	**WHEELS, FRONT (1 OF 2)**
41510-07	**WHEELS, FRONT (1 OF 2)**
41545-07A	**WHEELS, FRONT (1 OF 2)**
41547-07A	**WHEELS, FRONT (1 OF 2)**
41559-08	**WHEELS, FRONT (1 OF 2)**
41600017	**BRAKE LINE AND MODULE, REAR, ABS**
41641-08	**WHEELS, REAR (1 OF 2)**
4166	**TAIL LAMP - FLSTN**
41688-08A	**WHEELS, REAR (1 OF 2)**
4168A	**BRAKE CONTROL, REAR** **BRAKE LINE AND MODULE, REAR, ABS**
41694-08	**WHEELS, REAR (1 OF 2)** **FORK, REAR AND SHOCK ABSORBERS**
41695-07	**WHEELS, FRONT (1 OF 2)**
41696-08	**WHEELS, REAR (2 OF 2)**
41700087	**BRAKE CONTROL, FRONT**
41700233	**BRAKE CONTROL, FRONT**
41700235	**BRAKE CONTROL, FRONT**
41700237	**BRAKE CONTROL, FRONT**
41700238	**BRAKE CONTROL, FRONT**
41700313	**BRAKE CONTROL, FRONT**
41700320	**BRAKE CONTROL, FRONT**
41700451	**BRAKE CONTROL, FRONT**
41731-01	**BRAKE LINES, FRONT, ABS** **BRAKE CONTROL, REAR** **BRAKE LINE AND MODULE, REAR, ABS**

41733-88	**BRAKE LINES, FRONT, ABS** **BRAKE LINE AND MODULE, REAR, ABS**
41747-82A	**BRAKE CONTROL, REAR** **BRAKE LINE AND MODULE, REAR, ABS**
41751-06A	**CLUTCH CONTROL - FLSS AND FLSTFBS**
41756-08	**BRAKE LINES, FRONT, NON-ABS - FLS** **BRAKE LINES, FRONT, ABS**
41767-05E	**BRAKE CONTROL, REAR**
41797-00	**WHEELS, REAR (2 OF 2)**
41800299	**BRAKE LINES, FRONT, ABS**
41800300	**BRAKE LINES, FRONT, ABS**
41800302	**BRAKE LINES, FRONT, ABS**
41800303	**BRAKE LINES, FRONT, NON-ABS - FLS**
41800305	**BRAKE LINES, FRONT, ABS**
41800307	**BRAKE LINES, FRONT, ABS**
41800319	**BRAKE LINES, FRONT, ABS**
41800320	**BRAKE LINES, FRONT, ABS**
4190	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
41957-97A	**BRAKE CONTROL, REAR**
4197	**FUEL TANK**
41992-11	**WHEELS, FRONT (1 OF 2)** **WHEELS, REAR (2 OF 2)**
42010-06B	**CLUTCH CONTROL - FLSS AND FLSTFBS**
42143-08B	**BRAKE CALIPER, REAR**
42145-06	**CLUTCH CONTROL - FLSS AND FLSTFBS**
4216	**OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
4217	**OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
42261-11A	**BRAKE CONTROL, REAR**
42298-08	**BRAKE CALIPER, REAR**
42344-08A	**BRAKE CALIPER, REAR**
42345-08	**BRAKE CALIPER, REAR**
42347-08	**BRAKE CALIPER, REAR**
42348-08	**BRAKE CALIPER, REAR**

42382-87E	**BRAKE CONTROL, REAR**
42416-06	**BRAKE CONTROL, REAR**
42431-11	**FOOTRESTS AND FOOTBOARDS**
42454-99A	**BRAKE CONTROL, REAR**
42460-80B	**BRAKE CONTROL, REAR**
42508-11BHP	**FOOTRESTS AND FOOTBOARDS**
42532-06	**BRAKE CONTROL, REAR**
42568-05A	**BRAKE CONTROL, REAR**
42597-00A	**BRAKE CONTROL, REAR**
4266A	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **FENDERS AND SUPPORTS, REAR - FLSTN** **FENDERS AND SUPPORTS, REAR - FLS AND FLSS** **FENDERS AND SUPPORTS, REAR - FXSB**
4267	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTN**
42807-04	**BRAKE CONTROL, FRONT**
42820-04	**BRAKE CALIPER, FRONT**
42827-04	**BRAKE CALIPER, FRONT**
42828-04	**BRAKE CALIPER, FRONT**
42895-08A	**BRAKE CALIPER, REAR**
43017-07	**WHEELS, FRONT (1 OF 2)** **WHEELS, REAR (2 OF 2)**
43022-91A	**WHEELS, FRONT (2 OF 2)**
43052-05A	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (2 OF 2)**
43085-97	**WHEELS, FRONT (1 OF 2)** **WHEELS, REAR (2 OF 2)**
43100008	**WHEELS, FRONT (2 OF 2)**
4311	**FORK BRACKETS, FRONT - FXSB**
43118-92A	**WHEELS, FRONT (2 OF 2)**
4312C	**BATTERY**
43147-40	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (2 OF 2)**
43157-83A	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (1 OF 2)**
43164-05	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (2 OF 2)**

43200001	**WHEELS, REAR (1 OF 2)**
43241-05	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (2 OF 2)**
43242-06B	**WHEELS, REAR (1 OF 2)**
43264-02	**WHEELS, REAR (1 OF 2)**
43300041	**WHEELS, FRONT (2 OF 2)**
43300171	**WHEELS, FRONT (2 OF 2)**
43300200	**WHEELS, FRONT (1 OF 2)**
43300210	**WHEELS, FRONT (2 OF 2)**
43353-03	**WHEELS, REAR (1 OF 2)**
43373-11A	**BRAKE CONTROL, REAR** **BRAKE LINE AND MODULE, REAR, ABS**
43384-11A	**BRAKE CONTROL, REAR** **BRAKE LINE AND MODULE, REAR, ABS**
4343	**WINDSHIELD - FLSTC**
4350A	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN** **HANDLEBAR**
43567-92	**WHEELS, REAR (2 OF 2)**
43583-09	**WHEELS, FRONT (2 OF 2)**
43590-09	**WHEELS, FRONT (2 OF 2)**
43596-09	**WHEELS, REAR (2 OF 2)**
4380W	**LICENSE PLATE BRACKETS - FXSB** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
4390	**FOOTRESTS AND FOOTBOARDS**
43992-08	**BRAKE CONTROL, REAR**
4400	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
44048-83A	**BRAKE CALIPER, REAR**
44066-08A	**BRAKE CALIPER, REAR**
4407	**REAR BELT GUARD**
4411	**HEADLAMP (1 OF 2)**
44147-87A	**BRAKE CALIPER, REAR**
44160-00	**BRAKE CALIPER, FRONT**
4419	**STARTER MOTOR**
4433	**FORK, REAR AND SHOCK ABSORBERS**
44351-00	**BRAKE CALIPER, REAR**

4453	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
4454	**FOOTRESTS AND FOOTBOARDS** **FOOTRESTS AND FOOTBOARDS**
44613-02	**TRANSMISSION HOUSING - FLSS AND FLSTFBS**
44752-11	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (2 OF 2)**
4481	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
4482	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)** **WINDSHIELD - FLSTC**
4484M	**BRAKE LINES, FRONT, ABS**
45021-86	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
45032-82	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB** **CLUTCH CONTROL - FLSS AND FLSTFBS**
45041-01A	**FOOTRESTS AND FOOTBOARDS** **FOOTRESTS AND FOOTBOARDS**
45080-08	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
45104-08	**FORK, FRONT - FXSB**
4512A	**FRAME AND JIFFY STAND** **FOOTRESTS AND FOOTBOARDS** **GUARDS, SAREE**
45138-08A	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB** **CLUTCH CONTROL - FLSS AND FLSTFBS**
45359-00	**ENGINE BALANCER**
45400147	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45400148	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45405-75A	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
45419-80	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
45423-92	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB** **CLUTCH CONTROL - FLSS AND FLSTFBS**
45456-86B	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
45468-00	**OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
4549	**TURN SIGNALS, REAR (1 OF 2)**
45500150	**FORK, FRONT - FXSB**
45500151	**FORK, FRONT - FXSB**
45500152	**FORK, FRONT - FXSB**
45500159	**FORK, FRONT - FXSB**

45500161	**FORK, FRONT - FXSB**
45500366	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45500367	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45550-03	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
45605-00A	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
45611-86	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN** **FORK BRACKETS, FRONT - FXSB**
45670-80A	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN** **FORK BRACKETS, FRONT - FXSB**
45680-90	**ELECTRONIC CONTROL MODULE (ECM) AND COIL** **FRAME AND JIFFY STAND** **INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **SWITCHES**
45718-60	**FORK BRACKETS, FRONT - FXSB**
45727-08	**FORK BRACKETS, FRONT - FXSB**
45733-48	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
45764-00	**FORK, REAR AND SHOCK ABSORBERS**
45800026	**FORK, FRONT - FXSB**
45800027	**FORK, FRONT - FXSB**
45800081	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
45803-97	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
45806-07	**OIL TANK AND LINES - EXCEPT FXSB**
45835-00	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
45837-07	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
45838-77	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
45842-77A	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
45845-77	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
45858-77	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
45859-77A	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
45865-84	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45866-84	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45875-84A	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45900032	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
45900073	**FORK BRACKETS, FRONT - FXSB**
45900150	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**

45915-08A	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45916-07A	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45917-08A	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45918-07A	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45930-00	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45931-00	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45933-86	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45940-84	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
45964-86	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
46246-01	**CLUTCH CONTROL - FLSS AND FLSTFBS**
46322-06	**CLUTCH CONTROL - FLSS AND FLSTFBS**
4636	**WHEELS, REAR (1 OF 2)** **FORK, REAR AND SHOCK ABSORBERS**
46457-05B	**BRAKE CONTROL, REAR**
46508-01	**FORK, FRONT - FXSB**
46509-01	**FORK, FRONT - FXSB**
46510-07	**FORK, FRONT - FXSB**
46512-01A	**FORK, FRONT - FXSB**
46513-01	**FORK, FRONT - FXSB**
46514-01A	**FORK, FRONT - FXSB**
46515-01	**FORK, FRONT - FXSB**
46516-01	**FORK, FRONT - FXSB**
46517-01	**FORK, FRONT - FXSB**
46541-02	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
46550-03	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
46609-06	**FORK, FRONT - FXSB**
46611-06	**FORK, FRONT - FXSB**
46612-06	**FORK, FRONT - FXSB**
46614-06	**FORK, FRONT - FXSB**
46615-06	**FORK, FRONT - FXSB**
46663-11	**BRAKE LINES, FRONT, ABS**
46664-11	**BRAKE LINES, FRONT, ABS**
46668-11	**ALTERNATOR AND REGULATOR**

	BRAKE LINES, FRONT, ABS
46677-11	**BRAKE LINE AND MODULE, REAR, ABS**
46700-08	**FORK BRACKETS, FRONT - FXSB**
4688	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
4694	**HORN**
4705	**INDUCTION MODULE, FUEL** **SENSORS AND SWITCHES, ENGINE - TWIN CAM 110™** **TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS** **FENDERS AND SUPPORTS, REAR - FLS AND FLSS** **LICENSE PLATE BRACKETS - FLS AND FLSS**
47167-11BHP	**FRAME AND JIFFY STAND**
47173-11BHP	**FRAME AND JIFFY STAND**
47173-11BYM	**FRAME AND JIFFY STAND**
4717A	**ELECTRONIC CONTROL MODULE (ECM) AND COIL** **BRAKE LINES, FRONT, ABS**
4718A	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
4722	**HEADLAMP (1 OF 2)**
4724	**HEADLAMP (1 OF 2)**
4729	**ENGINE MOUNTS**
4740A	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
4741A	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™** **CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™** **SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™** **TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS** **BRAKE LINES, FRONT, ABS**
4751	**BRAKE LINE AND MODULE, REAR, ABS**
47573-11BHP	**FORK, REAR AND SHOCK ABSORBERS**
47573-11BYM	**FORK, REAR AND SHOCK ABSORBERS**
47610-08	**FORK, REAR AND SHOCK ABSORBERS**
4763	**FUEL TANK**
47670-08	**FORK, REAR AND SHOCK ABSORBERS**
47683-09	**FORK, REAR AND SHOCK ABSORBERS**
47694-11BHP	**FORK, REAR AND SHOCK ABSORBERS**

4775	**ENGINE MOUNTS**
47798-08BHP	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTN**
47807-08BHP	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTN**
47809-08BHP	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
47813-08BHP	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
48048-00A	**FORK, REAR AND SHOCK ABSORBERS**
48049-08	**FORK, REAR AND SHOCK ABSORBERS**
48052-07	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
48054-00	**ENGINE MOUNTS**
48076-08	**FORK, REAR AND SHOCK ABSORBERS**
48093-00	**ENGINE MOUNTS**
48094-00	**ENGINE MOUNTS**
48104-08	**FORK, REAR AND SHOCK ABSORBERS**
4813A	**PRIMARY HOUSING** **FRAME AND JIFFY STAND**
4814A	**ALTERNATOR AND REGULATOR**
48300-60	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN** **FORK BRACKETS, FRONT - FXSB**
48315-60	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN** **FORK BRACKETS, FRONT - FXSB** **FRAME AND JIFFY STAND**
48324-00A	**FORK BRACKETS, FRONT - FXSB**
4836	**FOOTRESTS AND FOOTBOARDS**
48361-80	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN** **FORK BRACKETS, FRONT - FXSB**
48365-48A	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN** **FORK BRACKETS, FRONT - FXSB**
48619-07A	**FORK, REAR AND SHOCK ABSORBERS**
4867	**FORK, REAR AND SHOCK ABSORBERS** **SWITCHES**
48868-07	**FRAME AND JIFFY STAND**
49000014	**FORK, REAR AND SHOCK ABSORBERS**
49377-09A	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
49379-09	**FORK, FRONT - FXSB**
4945	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**

49716-08A	**FRAME AND JIFFY STAND**
49725-07A	**FRAME AND JIFFY STAND**
50000053	**FRAME AND JIFFY STAND**
50003-89B	**FRAME AND JIFFY STAND**
5001	**BRAKE LINES, FRONT, ABS** **BRAKE LINE AND MODULE, REAR, ABS**
5002	**BRAKE LINES, FRONT, ABS** **BRAKE LINE AND MODULE, REAR, ABS**
5004	**BRAKE LINES, FRONT, ABS**
50087-07A	**FRAME AND JIFFY STAND**
50103-07B	**FRAME AND JIFFY STAND**
50600095	**BRAKE CONTROL, REAR**
50614-06	**FOOTRESTS AND FOOTBOARDS**
50617-05	**FOOTRESTS AND FOOTBOARDS**
50621-06	**FOOTRESTS AND FOOTBOARDS**
50624-05	**FOOTRESTS AND FOOTBOARDS**
50625-05	**FOOTRESTS AND FOOTBOARDS**
50630-05	**FOOTRESTS AND FOOTBOARDS**
50674-05	**FOOTRESTS AND FOOTBOARDS**
50698-05	**FOOTRESTS AND FOOTBOARDS**
50699-05	**FOOTRESTS AND FOOTBOARDS**
50912-72	**FOOTRESTS AND FOOTBOARDS** **FOOTRESTS AND FOOTBOARDS**
50943-05A	**FOOTRESTS AND FOOTBOARDS**
50944-05	**FOOTRESTS AND FOOTBOARDS**
50972-75	**FRAME AND JIFFY STAND**
50991-86	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
5118	**SWITCHES, HANDLEBAR RIGHT, FRONT** **WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
51184-00	**SEATS**
51218-09A	**FOOTRESTS AND FOOTBOARDS**
51323-08	**FOOTRESTS AND FOOTBOARDS**

51327-08	**FOOTRESTS AND FOOTBOARDS**
51402-08A	**FOOTRESTS AND FOOTBOARDS**
51403-08	**FOOTRESTS AND FOOTBOARDS**
51494-11	**SEATS**
515	**BRAKE CONTROL, REAR**
51652-97A	**SEATS**
51669-07	**SEATS**
51740-10	**SEATS**
51803-07	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **FENDERS AND SUPPORTS, REAR - FXSB**
51812-09	**SEATS**
51873-10A	**SEATS**
51874-10A	**SEATS**
52000031A	**SEATS**
52000032	**SEATS**
52000096	**SEATS**
52000222	**SEATS**
52125-05	**SEATS**
52189-09	**SEATS**
52237-07	**SEATS**
52400065	**SEATS**
52400072	**SEATS**
52441-95	**LICENSE PLATE BRACKETS - FLS AND FLSS** **TAIL LAMP - FLSTN**
52502-05C	**SEATS**
52691-05	**SEATS**
52731-00	**SEATS**
52771-82	**SEATS**
52787-00	**SEATS**
52788-00	**SEATS**
53156-86	**HANDLEBAR**
53176-08	**FRAME AND JIFFY STAND**
53436-97	**HEADLAMP (1 OF 2)** **TAIL LAMP - FLSTN**

53462-05	**FENDERS AND SUPPORTS, REAR - FLSTN**
53830-00	**FENDERS AND SUPPORTS, REAR - FLSTN**
53860-05	**FENDERS AND SUPPORTS, REAR - FLSTN**
54000045	**FORK, REAR AND SHOCK ABSORBERS**
5403B	**LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
5416	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
5419	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
54204-11	**FOOTRESTS AND FOOTBOARDS**
54321-85	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (2 OF 2)**
5442	**INSTRUMENTS - FLS, FLSS AND FLSTC**
54508-00B	**FORK, REAR AND SHOCK ABSORBERS** **FORK, REAR AND SHOCK ABSORBERS** **FORK, REAR AND SHOCK ABSORBERS**
54549-04	**FORK, REAR AND SHOCK ABSORBERS** **FORK, REAR AND SHOCK ABSORBERS** **FORK, REAR AND SHOCK ABSORBERS**
54673-10BYM	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)**
5471	**FUEL TANK**
55107-12	**WHEELS, FRONT (1 OF 2)**
55109-12	**WHEELS, REAR (1 OF 2)**
554A	**FRAME AND JIFFY STAND**
55800396	**HANDLEBAR**
55800399	**HANDLEBAR**
55800405	**HANDLEBAR**
55800411	**HANDLEBAR**
55800579	**HANDLEBAR**
55800634	**HANDLEBAR**
55900034	**HANDLEBAR**
55900043	**INSTRUMENTS - FXSB** **HANDLEBAR**
55900096	**HANDLEBAR**
55900097	**HANDLEBAR**
55900098	**HANDLEBAR**
55900099	**HANDLEBAR**

55902-05	**HANDLEBAR**
55903-05	**HANDLEBAR**
55984-07	**HANDLEBAR**
56073-83	**HANDLEBAR**
56153-73	**HANDLEBAR**
56159-73	**HANDLEBAR**
56182-00A	**FORK, REAR AND SHOCK ABSORBERS**
56183-00	**FORK, REAR AND SHOCK ABSORBERS**
56248-08	**THROTTLE CONTROL**
56304-08	**THROTTLE CONTROL**
56887-07	**HANDLEBAR**
56889-07	**HANDLEBAR**
56998-09	**HANDLEBAR**
57061-09	**WINDSHIELD - FLSTC** **WINDSHIELD - FLSTC** **LOOSE PARTS**
57062-00A	**WINDSHIELD - FLSTC**
57063-00A	**WINDSHIELD - FLSTC**
57091-06A	**WINDSHIELD - FLSTC** **LOOSE PARTS**
5710	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)**
57217-02A	**BRAKE CONTROL, REAR**
57250-06	**WINDSHIELD - FLSTC**
57634-07	**WINDSHIELD - FLSTC**
5775	**OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
58082-02A	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
58092-05	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
5818A	**FUEL TANK**
58252-95	**WINDSHIELD - FLSTC**
58253-95	**WINDSHIELD - FLSTC**
58272-95	**WINDSHIELD - FLSTC**
58294-09	**WINDSHIELD - FLSTC**
5837A	**TRANSMISSION GEARS**

58382-89	**LICENSE PLATE BRACKETS - FXSB**
58406-75A	**WINDSHIELD - FLSTC**
58408-75A	**WINDSHIELD - FLSTC**
58416-77A	**WINDSHIELD - FLSTC**
58417-77	**WINDSHIELD - FLSTC**
58428-94	**WINDSHIELD - FLSTC**
58431-94	**WINDSHIELD - FLSTC**
5885	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
58900021	**FENDER, FRONT**
58900042	**FENDER, FRONT**
59019-05	**FENDER, FRONT**
59026-05	**FENDERS AND SUPPORTS, REAR - FLSTN**
59050-03	**FENDERS AND SUPPORTS, REAR - FLSTC**
59088-03	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
59116-96	**FENDER, FRONT**
59117-96	**FENDERS AND SUPPORTS, REAR - FLSTC**
59119-03	**FENDERS AND SUPPORTS, REAR - FLSTC**
59129-09	**FENDER, FRONT**
59139-00A	**FENDER, FRONT**
59144-06A	**FENDERS AND SUPPORTS, REAR - FLSTC**
59174-99	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTN**
59180-80	**FENDER, FRONT**
59201-96	**FENDER, FRONT**
59211-74A	**FENDER, FRONT**
59234-05	**FENDER, FRONT**
59235-09	**FENDER, FRONT**
59238-05A	**FENDERS AND SUPPORTS, REAR - FLSTN**
59256-84A	**SEATS**
59259-90	**SEATS** **LICENSE PLATE BRACKETS - FLS AND FLSS**
59360-05	**FENDER, FRONT**
59405-09	**FORK, REAR AND SHOCK ABSORBERS**
59430-08	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**

59434-08	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
59438-00	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
59474-07	**FENDERS AND SUPPORTS, REAR - FLSTN**
59475-05	**FENDERS AND SUPPORTS, REAR - FLSTN**
59500-11	**FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
59500099	**FENDERS AND SUPPORTS, REAR - FXSB**
59500101	**FENDERS AND SUPPORTS, REAR - FXSB**
59500103	**FENDERS AND SUPPORTS, REAR - FXSB**
59500104	**FENDERS AND SUPPORTS, REAR - FXSB**
59500108	**LICENSE PLATE BRACKETS - FXSB**
59548-11	**FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
59567-00C	**FENDERS AND SUPPORTS, REAR - FLSTC**
59572-05	**FENDERS AND SUPPORTS, REAR - FLSTN**
59679-11	**FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
59683-03	**FENDERS AND SUPPORTS, REAR - FLSTC**
59768-97	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **FENDERS AND SUPPORTS, REAR - FLS AND FLSS** **FENDERS AND SUPPORTS, REAR - FXSB**
59770-05BEO	**FENDERS AND SUPPORTS, REAR - FLSTN**
59798-06	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
59819-06B	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
59821-08	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
59824-08	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
59904-12BHP	**FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
59954-08	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTN**
59955-08	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTN**
59984-73	**LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
59986-75	**LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
59988-72A	**LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
60001-55	**LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
60003-89	**LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**

60020-97	**LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
60021-97	**LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
601	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
60154-11	**LICENSE PLATE BRACKETS - FLS AND FLSS**
60187-12BHP	**FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
6019	**ENGINE MOUNTS**
60253-07	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)** **FORK, FRONT - FXSB**
60254-07	**FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2)** **FORK, FRONT - FXSB** **FORK, REAR AND SHOCK ABSORBERS** **FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **FENDERS AND SUPPORTS, REAR - FLSTN** **FENDERS AND SUPPORTS, REAR - FLS AND FLSS** **GUARDS, SAREE**
60271-08	**FORK, REAR AND SHOCK ABSORBERS**
60300018	**GUARDS, SAREE**
60300019	**GUARDS, SAREE**
60300032A	**GUARDS, SAREE**
60300109	**GUARDS, SAREE**
60300110	**GUARDS, SAREE**
60328-98B	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS** **PRIMARY HOUSING** **OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
6036	**SEATS**
60362-07A	**REAR BELT GUARD**
60363-11	**FORK, REAR AND SHOCK ABSORBERS**
60452-07A	**REAR BELT GUARD**
60456-11	**FORK, REAR AND SHOCK ABSORBERS**
60547-06	**PRIMARY HOUSING**
60563-08A	**PRIMARY HOUSING**
6057	**SHIFTER, GEAR**
60570-07B	**REAR BELT GUARD**
60678-85	**PRIMARY HOUSING**
6072	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
60776-08A	**PRIMARY HOUSING**

60782-06A	**PRIMARY HOUSING**
60791-06C	**PRIMARY HOUSING**
60800007	**EVAPORATIVE EMISSIONS COMPONENTS**
60813-07	**PRIMARY HOUSING**
60832-07	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
60833-07	**FENDERS AND SUPPORTS, REAR - FLSTN**
60867-08	**REAR BELT GUARD**
60876-11A	**PRIMARY HOUSING**
60882-10A	**PRIMARY HOUSING**
60900001	**FUEL PUMP**
60900003	**FUEL PUMP**
60900005	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
6099	**BRAKE CONTROL, REAR**
61008-10	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
6101	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB** **CLUTCH CONTROL - FLSS AND FLSTFBS** **BRAKE CONTROL, FRONT**
61011-04A	**FUEL PUMP**
61015-04A	**FUEL PUMP**
61081-92	**ELECTRONIC CONTROL MODULE (ECM) AND COIL** **FRAME AND JIFFY STAND** **INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **SWITCHES**
6109	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)** **HORN**
6110	**FENDERS AND SUPPORTS, REAR - FLSTN** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
61100001	**FUEL TANK** **EVAPORATIVE EMISSIONS COMPONENTS**
61100003	**FUEL TANK**
61100055	**FUEL TANK**
61109-85D	**FUEL TANK**
61183-10	**FUEL TANK**
61192-96A	**FUEL PUMP**
61208-10	**INDUCTION MODULE, FUEL**

61257-05	**FUEL TANK**
61264-10	**FUEL TANK TRIM**
61265-10	**FUEL TANK TRIM**
61272-92C	**FUEL TANK**
61300063	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
61300064	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
61300170A	**FUEL TANK**
61300273	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
61300365	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS**
61300477	**HORN**
61300478	**HORN**
61300481	**HORN**
61300526	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
61300535	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
61300536	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS** **AIR CLEANER - TWIN CAM 110™ - FLSS**
61300537	**FUEL TANK**
61381-02A	**FUEL PUMP**
61400055	**FUEL TANK TRIM**
61400056	**FUEL TANK TRIM**
61400327	**SEATS** **SADDLEBAGS - FLSTC**
61625-11	**FUEL TANK**
62123-07	**FRAME AND JIFFY STAND**
62123-66A	**FRAME AND JIFFY STAND**
62143-11	**FUEL PUMP**
62155-11	**FUEL PUMP**
62158-11	**FUEL PUMP**
62189-08A	**FUEL TANK**
6229W	**SADDLEBAGS - FLSTC**
62322-11	**FUEL TANK**
6237	**BRAKE CONTROL, REAR**
62372-09	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**

62492-01A	**OIL TANK AND LINES - EXCEPT FXSB**
62498-01A	**OIL TANK AND LINES - EXCEPT FXSB**
62500015	**OIL TANK AND LINES - FXSB**
62507-10BYM	**OIL TANK AND LINES - EXCEPT FXSB**
62543-11	**FUEL TANK**
62555-95	**FUEL TANK**
62700056	**OIL TANK AND LINES - FXSB**
62700062	**BELT, CHAINS AND SPROCKETS**
62700064	**BELT, CHAINS AND SPROCKETS**
62769-00A	**OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
62845-00A	**OIL TANK AND LINES - EXCEPT FXSB**
62880-00	**FUEL TANK**
62881-00	**FUEL TANK**
62900-01D	**FUEL TANK**
6294	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
63034-08	**OIL TANK AND LINES - FXSB**
6336B	**TURN SIGNALS, REAR (1 OF 2)**
63521-95A	**FUEL TANK**
63553-00B	**OIL TANK AND LINES - EXCEPT FXSB**
63601-00	**OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
63611-00	**OIL TANK AND LINES - EXCEPT FXSB**
63632-00	**OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
63731-99A	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
63783-00	**OIL TANK AND LINES - EXCEPT FXSB** **OIL TANK AND LINES - FXSB**
63798-99A	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™**
6400HB	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **FENDERS AND SUPPORTS, REAR - FLSTN** **FENDERS AND SUPPORTS, REAR - FLS AND FLSS** **FENDERS AND SUPPORTS, REAR - FXSB** **HEADLAMP (1 OF 2)** **WINDSHIELD - FLSTC**
6456	**ENGINE BALANCER**

64708-08B	**EXHAUST SYSTEM - FLSTC**
64709-08B	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64710-08B	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64711-08B	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64712-08B	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64727-08	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64728-08	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64729-08	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64734-08A	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64735-08A	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64900105	**EXHAUST SYSTEM - FLSTC**
64900106	**EXHAUST SYSTEM - FLSTC**
64900139	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64900140	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64900141	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64900142	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64900143	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64900144	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64900145	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64900146	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
64900168	**EXHAUST SYSTEM - FXSB**
64900169	**EXHAUST SYSTEM - FXSB**
64900170	**EXHAUST SYSTEM - FXSB**
64900171	**EXHAUST SYSTEM - FXSB**
64900172	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FXSB**
64900468	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
64900469	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
64900470	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
64900471	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
64900472	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
64900473	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
64960-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**

64961-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
6497HW	**SHIFTER, GEAR**
65148-00B	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
6516HW	**ENGINE MOUNTS**
65184-02	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65296-95A	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
6530	**ENGINE MOUNTS**
6532	**BRAKE LINE AND MODULE, REAR, ABS**
65324-83B	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65325-83A	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
6534	**FORK, REAR AND SHOCK ABSORBERS**
6535	**FORK, REAR AND SHOCK ABSORBERS**
65368-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
65372-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
65383-05	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65389-05B	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65395-05	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65399-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65400106	**EXHAUST SYSTEM - FXSB**
65400107	**EXHAUST SYSTEM - FXSB**
65400277	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65435-07BHP	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
6545	**FUEL TANK**
65463-00	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65464-07A	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
6551	**WHEELS, REAR (1 OF 2)** **WHEELS, REAR (1 OF 2)**
65521-10	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC**

65600031	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC**
65600035A	**EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLSTC**
65600039A	**EXHAUST SYSTEM - FLSTC**
65600042	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65600046	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65600049	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65600053	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65600056	**EXHAUST SYSTEM - FXSB**
65600059	**EXHAUST SYSTEM - FXSB**
65652-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65682-07	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLSTC**
65685-07	**EXHAUST SYSTEM - FLSTC**
65688-11BHP	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65702-00A	**EXHAUST SYSTEM - FLSTC**
65707-10A	**EXHAUST SYSTEM - FXSB**
65715-10	**EXHAUST SYSTEM - FLSTC**
65822-10A	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
65830-10	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC**
65862-10A	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
65870-10	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
65880-10	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
65920-10	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
65939-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
6594	**WHEELS, FRONT (1 OF 2)**
65946-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
65950-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
65989-97C	**BATTERY**
66000065	**BATTERY**
66274-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**

66373-06	**SWITCHES**
66415-08A	**BATTERY**
6655	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
66737-10A	**EXHAUST SYSTEM - FLSTC**
66763-07	**EXHAUST SYSTEM - FLSTC**
66764-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
66765-07	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
66767-07	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
66772-08A	**EXHAUST SYSTEM - FXSB**
66773-10	**EXHAUST SYSTEM - FXSB**
66797-07	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
66847-08	**EXHAUST SYSTEM - FXSB**
66882-10	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
66897-10A	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
66899-10A	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
66901-10	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
6701	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **HEADLAMP (1 OF 2)**
67013-04A	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67015-02	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67019-04A	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
6702	**SHIFTER, GEAR** **REAR BELT GUARD** **FUEL TANK** **HORN** **SADDLEBAGS - FLSTC**
6703	**BRAKE LINES, FRONT, NON-ABS - FLS** **BRAKE LINE AND MODULE, REAR, ABS** **FORK BRACKETS, FRONT - FXSB** **LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS** **WINDSHIELD - FLSTC** **GUARDS, SAREE**
67033-11B	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
67121-95A	**INSTRUMENTS - FXSB**
6716	**FUEL TANK**

67190-89	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC**
67196-11A	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC**
67197-11A	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC**
6724	**FORK, REAR AND SHOCK ABSORBERS**
67266-94	**FENDERS AND SUPPORTS, REAR - FLSTC**
67267-05	**FENDERS AND SUPPORTS, REAR - FLSTN** **TURN SIGNALS, REAR (1 OF 2)**
67271-04A	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
67341-04B	**INSTRUMENTS - FLS, FLSS AND FLSTC**
67439-11C	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
67525-11B	**INSTRUMENTS - FLS, FLSS AND FLSTC**
67605-05	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
67615-96	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
67621-94	**WINDSHIELD - FLSTC**
6762B	**ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™** **ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™**
67667-05	**HEADLAMP (1 OF 2)**
67668-05	**HEADLAMP (1 OF 2)**
67700029	**HEADLAMP (2 OF 2)** **HEADLAMP (2 OF 2)**
67700094	**HEADLAMP (2 OF 2)**
67700115	**HEADLAMP (2 OF 2)**
6771A	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **TURN SIGNALS, REAR (1 OF 2)**
67721-48	**HEADLAMP (1 OF 2)**
67768-97	**HEADLAMP (1 OF 2)**
67769-93	**HEADLAMP (1 OF 2)**
67772-97	**HEADLAMP (1 OF 2)**
67790-93A	**HEADLAMP (1 OF 2)**
67800141	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67800147	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67800148	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**

67800171	**TURN SIGNALS, REAR (2 OF 2)**
67800184	**TURN SIGNALS, REAR (2 OF 2)**
67800216	**TURN SIGNALS, REAR (1 OF 2)**
67800217	**TURN SIGNALS, REAR (1 OF 2)**
67800223	**TURN SIGNALS, REAR (2 OF 2)**
67800224	**TURN SIGNALS, REAR (2 OF 2)** **TURN SIGNALS, REAR (2 OF 2)**
67800238	**TURN SIGNALS, REAR (2 OF 2)**
67800244	**LICENSE PLATE BRACKETS - FXSB**
67800519	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67800520	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67800521	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67800523	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67800525	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67800628	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67800630	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67814-86	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
67821-87	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
67822-88	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
67830-09	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
67846-70	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
67858-89	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
67873-08A	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
67891-99	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
67900016	**LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
67900089	**LICENSE PLATE BRACKETS - FXSB** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
67900092	**LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
67900093	**LICENSE PLATE BRACKETS - FXSB** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
67900115	**LICENSE PLATE BRACKETS - FLS AND FLSS**
67900117	**LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB**
67900140	**SEATS**
67900145	**LICENSE PLATE BRACKETS - FXSB**

67900147	**LICENSE PLATE BRACKETS - FXSB**
67900163	**LICENSE PLATE BRACKETS - FXSB**
67900164	**LICENSE PLATE BRACKETS - FXSB**
67900165	**LICENSE PLATE BRACKETS - FXSB**
67900166	**LICENSE PLATE BRACKETS - FXSB**
67900231	**LICENSE PLATE BRACKETS - FLS AND FLSS**
67900283	**LICENSE PLATE BRACKETS - FXSB**
67956-96	**SEATS**
67982-07	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
67987-10BHP	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
67988-10BHP	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
67993-10BHP	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
68000056	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
68003-05	**TAIL LAMP - FLSTN**
68004-05	**LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
68026-99	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
68042-99	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™** **SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™** **SENSORS AND SWITCHES, ENGINE - TWIN CAM 110™** **CLUTCH CONTROL - FLSS AND FLSTFBS**
68046-79	**FENDERS AND SUPPORTS, REAR - FLSTC**
68050-93A	**HEADLAMP (1 OF 2)**
68051-08	**HEADLAMP (2 OF 2)**
68055-10BHP	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
68066-99A	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
68089-05	**TAIL LAMP - FLSTN**
68112-99A	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
6812	**GUARDS, SAREE**
68120-00	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
68140-04	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
68141-04	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
68163-84	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)** **TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB** **TURN SIGNALS, REAR (1 OF 2)**

68167-04	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS** **TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
68168-89A	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)** **TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB** **TURN SIGNALS, REAR (1 OF 2)** **TAIL LAMP - FLSTN**
68169-90A	**TAIL LAMP - FLSTN**
68193-95	**FENDER, FRONT** **FENDERS AND SUPPORTS, REAR - FLSTC**
68226-97	**TAIL LAMP - FLSTN**
68235-97	**TAIL LAMP - FLSTN**
68236-97	**TAIL LAMP - FLSTN**
68237-97	**TAIL LAMP - FLSTN**
68238-97	**TAIL LAMP - FLSTN**
68239-97	**TAIL LAMP - FLSTN**
68280-05	**TAIL LAMP - FLSTN**
68281-05	**TAIL LAMP - FLSTN**
68296-99A	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
68297-05A	**HEADLAMP (2 OF 2)**
68329-03	**HEADLAMP (2 OF 2)**
68331-02	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
68335-05A	**HEADLAMP (2 OF 2)**
68337-05	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
68341-05A	**HEADLAMP (2 OF 2)**
68342-05A	**HEADLAMP (2 OF 2)**
68344-05A	**HEADLAMP (2 OF 2)**
68345-05A	**HEADLAMP (2 OF 2)**
68369-03	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
68370-03A	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
68372-03	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
68380-05	**HEADLAMP (2 OF 2)** **HEADLAMP (2 OF 2)**
68390-05	**HEADLAMP (2 OF 2)**
68414-05A	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
68440-86	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)** **TURN SIGNALS, REAR (1 OF 2)**

68446-00	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTN**
68452-86	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)** **TURN SIGNALS, REAR (1 OF 2)**
68461-09	**TURN SIGNALS, REAR (1 OF 2)**
68497-07	**TURN SIGNALS, REAR (1 OF 2)**
68505-90	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
68506-92	**TURN SIGNALS, REAR (1 OF 2)**
68508-04	**TURN SIGNALS, REAR (1 OF 2)**
68510-74C	**TURN SIGNALS, REAR (1 OF 2)**
68519-68A	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
68559-07	**TURN SIGNALS, REAR (1 OF 2)**
68572-64B	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)** **TURN SIGNALS, REAR (1 OF 2)**
68619-83	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
68653-05	**HEADLAMP (2 OF 2)**
68673-05	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
68702-07	**LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB**
68706-00	**FENDER, FRONT**
68713-94A	**TURN SIGNALS, REAR (1 OF 2)**
68720-62	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
68721-62	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
68722-06	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
68725-62A	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
68765-94A	**TURN SIGNALS, REAR (1 OF 2)**
68766-94	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
68767-94	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
68818-03B	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
68830-99A	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
68834-05A	**TAIL LAMP - FLSTN**
68840-05	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
68846-09	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
68847-09	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
68905-00	**TURN SIGNALS, REAR (1 OF 2)**

68926-07	**SWITCHES** **LOOSE PARTS**
68956-07	**SWITCHES**
68958-07C	**SWITCHES**
68969-05	**TURN SIGNALS, REAR (1 OF 2)**
68973-00	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)** **TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB** **TURN SIGNALS, REAR (1 OF 2)**
68978-00	**TURN SIGNALS, REAR (1 OF 2)**
69000006	**HORN**
69000026	**HORN**
69000033	**HORN**
69046-06A	**ENGINE MOUNTS**
69060-90H	**HORN**
69062-91A	**HORN**
69120-91	**HORN**
69123-92A	**HORN**
69130-10BYM	**HORN**
69170-08	**HORN**
69187-03A	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
69200010	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
69200011	**TURN SIGNALS, REAR (2 OF 2)**
69200012	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
69200018	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTN** **TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS** **TAIL LAMP - FLSTN**
69200052	**ALTERNATOR AND REGULATOR**
69200238	**WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
69200267A	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)**

	WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)
69200268A	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
69200282	**HORN**
69200283	**HORN**
69200307	**THROTTLE CONTROL**
69200356	**FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
69200437	**WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
69200451	**SWITCHES**
69200452	**SWITCHES**
69200530	**INSTRUMENTS - FXSB**
69200531	**FUEL TANK**
69200626	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTN**
69201077	**WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)**
69201078	**WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)**
69201079	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)**
69201080	**WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)**
69201082	**WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
69201083	**WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**

	WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5) **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
69201084	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS**
69201085	**FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
69201162	**THROTTLE CONTROL**
69201163	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
69201164	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
69201168	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
69201179	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
69201180	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
69201184	**WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)**
69201185	**WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)**
69201296	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
69201297	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
69220-06	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
69221-06	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
69222-09	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
69223-09	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**

69309-10	**SWITCHES**
69438-06	**TURN SIGNALS, REAR (2 OF 2)**
69486-06B	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
69490-07	**FORK, REAR AND SHOCK ABSORBERS** **FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **FENDERS AND SUPPORTS, REAR - FLSTN** **FENDERS AND SUPPORTS, REAR - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB**
69557-10	**LICENSE PLATE BRACKETS - FLS AND FLSS**
69609-00	**HEADLAMP (2 OF 2)**
69748-05B	**HEADLAMP (2 OF 2)**
69750-05C	**HEADLAMP (2 OF 2)**
69783-08A	**HEADLAMP (2 OF 2)**
6990	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
69933-08	**TURN SIGNALS, REAR (2 OF 2)** **TURN SIGNALS, REAR (2 OF 2)** **TURN SIGNALS, REAR (2 OF 2)**
69935-08	**TURN SIGNALS, REAR (1 OF 2)**
69969-08	**HEADLAMP (2 OF 2)**
69991-11C	**SWITCHES**
69993-11C	**SWITCHES**
69995-11	**SWITCHES** **LOOSE PARTS**
69997-11C	**SWITCHES**
70060-08A	**BATTERY**
70078-08A	**BATTERY**
70082-08A	**BATTERY**
70111-07	**BATTERY**
70112-08	**BATTERY**
70196-00	**FENDER, FRONT**
70345-84	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **SWITCHES, HANDLEBAR LEFT, FRONT** **HANDLEBAR**
70354-11	**SWITCHES**
7038	**HEADLAMP (1 OF 2)**

7039	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
703B	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™** **ENGINE BALANCER**
7041	**SHIFTER, GEAR** **FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
70593-08	**BATTERY**
7062	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN** **FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2)** **FORK, FRONT - FXSB**
70631-08	**BRAKE LINES, FRONT, ABS** **BRAKE LINES, FRONT, ABS** **WHEELS, FRONT (2 OF 2)**
70635-08	**BRAKE LINE AND MODULE, REAR, ABS**
7068	**HANDLEBAR**
70684-11A	**WHEELS, FRONT (2 OF 2)**
70700-11B	**INSTRUMENTS - FLS, FLSS AND FLSTC**
7073	**HEADLAMP (1 OF 2)**
70900170	**FUEL TANK**
70900323A	**FUEL TANK**
70900369C	**INSTRUMENTS - FXSB**
70900370A	**INSTRUMENTS - FXSB**
70900371A	**INSTRUMENTS - FXSB**
70900622	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
70974-08A	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)**
70982-08	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)**
70991-07	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
70996-08	**WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
71019-07	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**

71044-11	**FRAME AND JIFFY STAND** **WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
71060-11A	**WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
71250-11	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
71257-11	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
71265-95	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
71302-93A	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
7130W	**HEADLAMP (1 OF 2)**
7137	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
71400076	**FRAME AND JIFFY STAND** **INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **SWITCHES**
71400077	**ELECTRONIC CONTROL MODULE (ECM) AND COIL** **SWITCHES**
71500114	**SWITCHES, HANDLEBAR LEFT, FRONT**
71500117	**SWITCHES, HANDLEBAR LEFT, FRONT**
71500118	**SWITCHES, HANDLEBAR RIGHT, FRONT**
71500288	**SWITCHES, HANDLEBAR LEFT, FRONT**
71500289	**SWITCHES, HANDLEBAR LEFT, FRONT**
71500290	**SWITCHES, HANDLEBAR LEFT, FRONT**
71500292	**SWITCHES, HANDLEBAR LEFT, FRONT**
71500293	**SWITCHES, HANDLEBAR LEFT, FRONT**
71500294	**SWITCHES, HANDLEBAR LEFT, FRONT**
71500295	**SWITCHES, HANDLEBAR LEFT, FRONT**
71500297	**SWITCHES, HANDLEBAR RIGHT, FRONT**
71500298	**SWITCHES, HANDLEBAR RIGHT, FRONT**
71500299	**SWITCHES, HANDLEBAR RIGHT, FRONT**
71500300	**SWITCHES, HANDLEBAR RIGHT, FRONT**
71500448	**SWITCHES, HANDLEBAR LEFT, FRONT**
71512-11	**INSTRUMENTS - FLS, FLSS AND FLSTC**
71517-11	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **SWITCHES**

7155	**MIRRORS**
71664-05	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
71669-05	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
71794-11	**ELECTRONIC CONTROL MODULE (ECM) AND COIL** **SWITCHES**
71796-11	**ELECTRONIC CONTROL MODULE (ECM) AND COIL** **SWITCHES**
71953-11	**INSTRUMENTS - FLS, FLSS AND FLSTC**
71978-08	**INSTRUMENTS - FLS, FLSS AND FLSTC**
71989-08	**INSTRUMENTS - FLS, FLSS AND FLSTC**
71990-09	**INSTRUMENTS - FLS, FLSS AND FLSTC**
72007-05	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
72009-05	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™** **CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
72010-05	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72011-05	**CYLINDERS, HEADS, VALVES - TWIN CAM 103™** **CYLINDERS, HEADS AND VALVES - TWIN CAM 110™**
72012-07	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72014-07	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72023-51E	**BRAKE CONTROL, REAR** **BRAKE LINE AND MODULE, REAR, ABS** **SWITCHES**
72024-08	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)**

	WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5) **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72049-92	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
72056-92	**HEADLAMP (2 OF 2)**
72062-06	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
72063-06	**WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
72064-06	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72066-06A	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
72081-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72094-06	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
72096-06	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)**

	WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5) **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
72097-06	**WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72106-94BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72111-06	**WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
72130-04	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **INSTRUMENTS - FXSB**
72135-06	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
72146-94	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72160-06	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
72161-06	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
72168-07	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
72169-07	**FRAME AND JIFFY STAND** **WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)**

	WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5) **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
72175-07BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72177-07BK	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
72189-04	**INSTRUMENTS - FLS, FLSS AND FLSTC** **INSTRUMENTS - FXSB**
72190-94	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72194-94	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72199-94	**SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™** **SENSORS AND SWITCHES, ENGINE - TWIN CAM 110™** **TAIL LAMP - FLSTN** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72209-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72213-94	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72222-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**

72226-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72227-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72242-94	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72249-94	**HEADLAMP (2 OF 2)** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72251-07	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
72254-94	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72256-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72283-09	**WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)** **HORN**
72290-94	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
72291-94	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72295-94	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)**

	WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5) **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72298-95	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
7230	**HEADLAMP (1 OF 2)**
72308-97	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72314-01	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)** **SWITCHES** **LOOSE PARTS**
72330-95	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)** **SWITCHES**
72343-10	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
72344-10	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
72350-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72356-95	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72369-08A	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**

72402-07	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
72405-98BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
72406-07A	**WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
72407-07	**WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
72408-07	**WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
72411-97	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
72413-07	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
72415-07GY	**WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
72444-07GY	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
72473-07	**WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)**

	WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5) **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72478-07BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)**
72479-07BK	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC**
72483-08BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
72484-08	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72486-08	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72500-07ABK	**WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72511-07BK	**FRAME AND JIFFY STAND**
72512-07BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)**

	WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5) **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
72514-07GY	**WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72518-01	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72519-09BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
72543-07BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72544-07	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72546-09GY	**INSTRUMENTS - FXSB**
72553-07	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72554-09GY	**WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
72575-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72581-11	**WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72582-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72586-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72587-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)**

	WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5) **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72593-11	**WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72594-11	**SWITCHES**
72595-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72596-11	**SWITCHES**
72597-11	**SWITCHES**
72606-08	**WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72607-08	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (2 OF 2)**
72608-08	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (2 OF 2)**
72609-08	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72610-08	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72639-10	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (2 OF 2)**
72657-12	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN**
72658-12	**INSTRUMENTS - FLS, FLSS AND FLSTC**
72662-11	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **INSTRUMENTS - FXSB**

72663-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (2 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (2 OF 5)**
72664-12A	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72666-12	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
72677-11	**WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72720-07	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72721-07	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
72902-01BK	**THROTTLE CONTROL**
72904-01BK	**FUEL PUMP**
72905-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
72906-11	**SWITCHES, HANDLEBAR RIGHT, FRONT**
72907-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
72908-11	**SWITCHES, HANDLEBAR LEFT, FRONT** **SWITCHES, HANDLEBAR RIGHT, FRONT**
72909-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
72910-11	**SWITCHES, HANDLEBAR LEFT, FRONT** **SWITCHES, HANDLEBAR RIGHT, FRONT**
72914-01BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)**

72920-11	**SWITCHES, HANDLEBAR LEFT, FRONT**
72921-11	**SWITCHES, HANDLEBAR RIGHT, FRONT**
72922-11	**SWITCHES, HANDLEBAR LEFT, FRONT**
72923-11	**SWITCHES, HANDLEBAR RIGHT, FRONT**
72940-11	**SWITCHES, HANDLEBAR RIGHT, FRONT**
72941-11	**SWITCHES, HANDLEBAR LEFT, FRONT**
72990-01	**FUEL PUMP** **THROTTLE CONTROL**
72991-01	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)**
73101-96BK	**HEADLAMP (2 OF 2)**
73102-96BK	**FENDER, FRONT** **AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)**
73104-96BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
73106-96BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
73108-96BK	**WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)**
73152-96BK	**FENDER, FRONT** **AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)** **TURN SIGNALS, REAR (2 OF 2)**
73153-96BK	**FENDERS AND SUPPORTS, REAR - FLSTC**
73154-96BK	**HEADLAMP (2 OF 2)** **TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
73156-96BK	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)** **TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
73158-96BK	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS** **TAIL LAMP - FLSTN**
73190-96	**FENDER, FRONT** **HEADLAMP (2 OF 2)** **AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)** **WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)**

	WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)
73191-96	**FENDER, FRONT** **FENDERS AND SUPPORTS, REAR - FLSTC** **HEADLAMP (2 OF 2)** **AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2)** **TURN SIGNALS, REAR (2 OF 2)** **TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS** **TAIL LAMP - FLSTN** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
73196-96	**WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)**
73198-96	**WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)**
73213-07	**FRAME AND JIFFY STAND** **WIRING HARNESS, MAIN, NON-ABS - FLS (1 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (1 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)** **SWITCHES**
73229-11	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)**
73293-10A	**HEADLAMP (2 OF 2)**
73294-10	**HEADLAMP (2 OF 2)**
73295-10	**HEADLAMP (2 OF 2)**
7330	**SHIFTER, GEAR**
73304-04	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
73305-04	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**

73307-10	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
7331	**MIRRORS**
7340	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS** **TRANSMISSION GEARS**
73403-11	**LICENSE PLATE BRACKETS - FLS AND FLSS**
73410-11	**LICENSE PLATE BRACKETS - FLS AND FLSS**
73412-11	**FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
73422-11	**FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
7343	**ELECTRONIC CONTROL MODULE (ECM) AND COIL** **SWITCHES**
73504-11	**LICENSE PLATE BRACKETS - FLS AND FLSS**
7352	**MIRRORS**
74102-05GY	**TAIL LAMP - FLSTN**
74102-98BK	**TAIL LAMP - FLSTN**
74103-98BK	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
74104-98BK	**TAIL LAMP - FLSTN** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
74112-05GY	**TURN SIGNALS, REAR (2 OF 2)**
74112-98BK	**TURN SIGNALS, REAR (2 OF 2)** **WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
74113-98BK	**LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB**
74114-98BK	**TURN SIGNALS, REAR (2 OF 2)** **TAIL LAMP - FLSTN**
74120-08	**WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
74142-98	**TAIL LAMP - FLSTN**
74143-98	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**

74144-98	**TAIL LAMP - FLSTN** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
74152-98	**TURN SIGNALS, REAR (2 OF 2)** **WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
74153-98	**LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB**
74154-98	**TURN SIGNALS, REAR (2 OF 2)** **TAIL LAMP - FLSTN**
74190-98	**TAIL LAMP - FLSTN** **WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
74191-98	**LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB** **TURN SIGNALS, REAR (2 OF 2)** **TAIL LAMP - FLSTN** **WIRING HARNESS, MAIN, NON-ABS - FLS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (5 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (5 OF 5)**
74194-98	**SENSORS AND SWITCHES, ENGINE - TWIN CAM 103™** **SENSORS AND SWITCHES, ENGINE - TWIN CAM 110™**
74195-98	**LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB** **TURN SIGNALS, REAR (2 OF 2)** **TAIL LAMP - FLSTN**
74196-04	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **INSTRUMENTS - FXSB**
74197-04	**INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **INSTRUMENTS - FXSB**
7434	**FENDERS AND SUPPORTS, REAR - FLSTC** **FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **FENDERS AND SUPPORTS, REAR - FLSTN** **FENDERS AND SUPPORTS, REAR - FXSB**
74402-05B	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
74540-11	**ALTERNATOR AND REGULATOR**
7479	**FORK, REAR AND SHOCK ABSORBERS**
7495	**HORN**
75141-11A	**FUEL PUMP**
75241-08	**FUEL PUMP**

75252-11A	**FUEL PUMP**
75276-08A	**FUEL PUMP**
75282-08A	**FUEL PUMP**
75284-08A	**FUEL PUMP**
75289-08	**FUEL PUMP**
75290-08	**FUEL PUMP**
7531	**FENDER, FRONT** **HORN** **SADDLEBAGS - FLSTC**
7549A	**REAR BELT GUARD** **INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **HORN** **SADDLEBAGS - FLSTC**
755	**FENDER, FRONT** **FENDER, FRONT**
7576	**FUEL TANK** **FUEL PUMP**
7593	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
7601	**ENGINE MOUNTS** **FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)** **EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**
7606	**HEADLAMP (1 OF 2)** **AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
761	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **FENDERS AND SUPPORTS, REAR - FLS AND FLSS**
7624	**FENDER, FRONT**
7629	**FENDER, FRONT** **FENDERS AND SUPPORTS, REAR - FLSTC** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS**
765	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
7651A	**WINDSHIELD - FLSTC**
7669	**REAR BELT GUARD**
7686	**BRAKE LINES, FRONT, NON-ABS - FLS** **FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN** **TAIL LAMP - FLSTN**
7716	**FOOTRESTS AND FOOTBOARDS** **LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB**

	HEADLAMP (1 OF 2)
7744	**TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB**
7792	**FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS** **LICENSE PLATE BRACKETS - FLS AND FLSS** **LICENSE PLATE BRACKETS - FXSB** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS** **TAIL LAMP - FLSTN**
7800W	**HEADLAMP (1 OF 2)**
7813A	**WHEELS, FRONT (1 OF 2)**
7848W	**CLUTCH - TWIN CAM 103™**
7862	**FUEL TANK**
786A	**PRIMARY HOUSING**
7879	**ENGINE MOUNTS**
791A	**PRIMARY HOUSING**
7964	**TAIL LAMP - FLSTC, FLSTF, FLSTFB AND FLSTFBS**
7965	**FUEL TANK**
8020	**WHEELS, REAR (1 OF 2)**
8026K	**TRANSMISSION GEARS**
8037	**FENDER, FRONT** **FENDER, FRONT** **FENDERS AND SUPPORTS, REAR - FLSTN**
8041	**TRANSMISSION GEARS**
8042	**TRANSMISSION GEARS**
80826-10	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
80830-10A	**EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2)**
8108	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN** **HORN**
8126A	**SEATS**
8144	**OIL TANK AND LINES - EXCEPT FXSB**
8184	**WHEELS, REAR (1 OF 2)**
8201	**REAR BELT GUARD**
8250	**AIR CLEANER - TWIN CAM 110™ - FLSTFBS** **AIR CLEANER - TWIN CAM 110™ - FLSS**
8329	**TURN SIGNALS, REAR (1 OF 2)**
83936-09A	**BELT, CHAINS AND SPROCKETS**
8405	**BRAKE CONTROL, REAR** **BRAKE LINE AND MODULE, REAR, ABS**

856A	**SHIFTER, GEAR**
869	**AIR CLEANER - TWIN CAM 110™ - FLSS**
8873	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™** **TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS**
8885	**CLUTCH - ASSIST AND SLIP - TWIN CAM 110™**
895	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
89587-05	**TAIL LAMP - FLSTN**
8959	**ENGINE BALANCER**
8963	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
8967	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
8970A	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
8972	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™**
8992A	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™** **ENGINE BALANCER**
90201299	**SADDLEBAGS - FLSTC**
90201300	**SADDLEBAGS - FLSTC**
90201305	**SADDLEBAGS - FLSTC**
90247-00	**SADDLEBAGS - FLSTC**
90300043	**ELECTRONIC CONTROL MODULE (ECM) AND COIL** **INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN** **INSTRUMENTS - FLS, FLSS AND FLSTC** **SWITCHES** **LOOSE PARTS**
90300093	**FUEL TANK**
90357-89	**FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
90367-03	**FENDERS AND SUPPORTS, REAR - FLSTC** **SADDLEBAGS - FLSTC**
90383-98	**INDUCTION MODULE, FUEL**
90438-10	**SADDLEBAGS - FLSTC**
90520-07	**FRAME AND JIFFY STAND**
90770-79	**CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB**
91072-11	**FUEL PUMP**
91679-00	**SADDLEBAGS - FLSTC**

91800042	**ENGINE ASSEMBLY - TWIN CAM 103™**
91840-03B	**MIRRORS**
91845-03B	**MIRRORS**
91982-03B	**MIRRORS**
91983-03B	**MIRRORS**
9209	**FORK, REAR AND SHOCK ABSORBERS**
9215	**CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™** **CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™**
9231	**PRIMARY HOUSING**
9252	**WHEELS, FRONT (1 OF 2)** **WHEELS, REAR (1 OF 2)**
92614-10	**MIRRORS**
92615-10	**MIRRORS**
9276A	**WHEELS, FRONT (1 OF 2)** **WHEELS, FRONT (1 OF 2)** **WHEELS, REAR (1 OF 2)** **WHEELS, REAR (1 OF 2)**
927A	**LICENSE PLATE BRACKETS - FXSB** **LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTFB AND FLSTFBS** **GUARDS, SAREE**
93511-10	**GUARDS, SAREE** **LOOSE PARTS** **LOOSE PARTS**
939	**FRAME AND JIFFY STAND**
940	**LICENSE PLATE BRACKETS - FLS AND FLSS** **EVAPORATIVE EMISSIONS COMPONENTS**
94000084	**LOOSE PARTS**
94000326	**LOOSE PARTS**
94004-90T	**WINDSHIELD - FLSTC**
941	**BRAKE LINES, FRONT, NON-ABS - FLS** **FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN**
942	**CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™** **CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™**
94426-95	**WINDSHIELD - FLSTC**
94435-10	**GUARDS, SAREE** **LOOSE PARTS** **LOOSE PARTS**
946	**AIR CLEANER - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB, FLS**
95594-84B	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (2 OF 2)**

95595-84B	**WHEELS, FRONT (2 OF 2)** **WHEELS, REAR (2 OF 2)**
956	**ENGINE BALANCER**
9701A	**TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS** **TRANSMISSION HOUSING - FLSS AND FLSTFBS**
9819	**WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5)**
9841	**HEADLAMP (1 OF 2)**
9842	**WIRING HARNESS, MAIN, NON-ABS - FLS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLS AND FLSS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (4 OF 5)** **WIRING HARNESS, MAIN, ABS - FXSB (4 OF 5)**
9847	**HEADLAMP (1 OF 2)**
9848	**HEADLAMP (1 OF 2)**
9897	**AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2)**
9898	**HEADLAMP (1 OF 2)**
9907	**BRAKE CONTROL, REAR** **BRAKE LINE AND MODULE, REAR, ABS**
99469-16	**LOOSE PARTS**
9955	**EXHAUST SYSTEM - FXSB** **EXHAUST SYSTEM - FLSTC** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)** **EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2)**

Component Types and Introduction Dates

Common Service Parts

BEARINGS, SEALS & HARDWARE

Part No.	Description	Part and Model(s)
10038A	CLAMP	***FUEL TANK:*** **All Models**
10080	CLAMP	*OIL TANK AND LINES - FXSB:* **FXSB**
10102	CLIP	***ALTERNATOR AND REGULATOR:*** **All Models** *FENDER, FRONT:* **FLSTC** *FUEL TANK:* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS**

		FLSTFBS
1062	SCREW	***PRIMARY HOUSING:*** **All Models**
11000101	OIL SEAL	***SHIFTER, GEAR:*** **All Models** *TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *TRANSMISSION HOUSING - FLSS AND FLSTFBS:* **FLSS** **FLSTFBS**
11105	O-RING	*TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *TRANSMISSION HOUSING - FLSS AND FLSTFBS:* **FLSS** **FLSTFBS** ***PRIMARY HOUSING:*** **All Models** *OIL TANK AND LINES - EXCEPT FXSB:* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS** **FLSTFBS** *OIL TANK AND LINES - FXSB:* **FXSB**
11132A	O-RING	*ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™:* **FLSS** **FLSTFBS** *TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *TRANSMISSION HOUSING - FLSS AND FLSTFBS:* **FLSS** **FLSTFBS**
11143	RETAINING RING	*CLUTCH - ASSIST AND SLIP - TWIN CAM 110™:* **FLSS**

		FLSTFBS *CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *CLUTCH CONTROL - FLSS AND FLSTFBS:* **FLSS** **FLSTFBS**
11145A	O-RING	*ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™:* **FLSS** **FLSTFBS**
11150	RETAINING RING	***SHIFTER, GEAR:*** **All Models**
11270	O-RING	*ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™:* **FLSS** **FLSTFBS**
11292	O-RING	*AIR CLEANER - TWIN CAM 110™ - FLSTFBS:* **FLSTFBS** *AIR CLEANER - TWIN CAM 110™ - FLSS:* **FLSS**
11293	O-RING	*ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™:* **FLSS** **FLSTFBS** *CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™:*

		FLSS **FLSTFBS**
11301	O-RING	*CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™:* **FLSS** **FLSTFBS**
11304	RETAINING RING	*FOOTRESTS AND FOOTBOARDS:* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FXSB** **FLSTFBS**
11379	RETAINING RING	***BRAKE CONTROL, FRONT:*** **All Models**
11447	GROMMET	*OIL TANK AND LINES - EXCEPT FXSB:* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS** **FLSTFBS** *OIL TANK AND LINES - FXSB:* **FXSB**
12052A	OIL SEAL	***PRIMARY HOUSING:*** **All Models**
12074	OIL SEAL	*TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *TRANSMISSION HOUSING - FLSS AND FLSTFBS:* **FLSS** **FLSTFBS**
16715-83	STUD	*CYLINDERS, HEADS, VALVES - TWIN CAM 103™:* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FXSB** *CYLINDERS, HEADS AND VALVES - TWIN CAM 110™:* **FLSS** **FLSTFBS**
16719-99B	GASKET	*ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN**

		FLSTFB **FLS** *ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™:* **FLSS** **FLSTFBS**
17045-99D	GASKET KIT	*ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™:* **FLSS** **FLSTFBS** *CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™:* **FLSS** **FLSTFBS**
17369-06	GASKET SERVICE KIT	***PRIMARY HOUSING:*** **All Models**
17386-99A	GASKET	*ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™:* **FLSS** **FLSTFBS**
18635-99B	GASKET	*ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™:* **FLSS** **FLSTFBS**
25244-99A	GASKET	*CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™:*

		FLSS **FLSTFBS**
25700226	GASKET KIT	***PRIMARY HOUSING:*** **All Models**
26995-86B	SEAL	***INDUCTION MODULE, FUEL:*** **All Models**
27444-00Y	O-RING	***STARTER MOTOR:*** **All Models**
3050	SCREW	***ALTERNATOR AND REGULATOR:*** **All Models**
3109	SCREW	***BELT, CHAINS AND SPROCKETS:*** **All Models** ***WHEELS, REAR (1 OF 2):*** **All Models**
3275	SCREW	***INDUCTION MODULE, FUEL:*** **All Models** ***SHIFTER, GEAR:*** **All Models**
34091-08	BEARING	***TRANSMISSION GEARS:*** **All Models**
34917-06	GASKET	*TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *TRANSMISSION HOUSING - FLSS AND FLSTFBS:* **FLSS** **FLSTFBS**
34934-06	GASKET	*PRIMARY HOUSING:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS**
35654-06	GASKET	*TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *TRANSMISSION HOUSING - FLSS AND FLSTFBS:* **FLSS** **FLSTFBS**
3655A	SCREW	***BRAKE CONTROL, REAR:*** **All Models** ***WHEELS, FRONT (1 OF 2):*** **All Models**
3656	SCREW	*INSTRUMENTS - FXSB:* **FXSB**
3658	SCREW	***SWITCHES, HANDLEBAR LEFT, FRONT:*** **All Models** ***SWITCHES, HANDLEBAR RIGHT, FRONT:*** **All Models**
36805-06	GASKET	*TRANSMISSION HOUSING - FXSB, FLSTC, FLSTF, FLSTN, FLSTFB AND FLS:* **FXSB** **FLSTC** **FLSTF** **FLSTN**

		FLSTFB **FLS** *TRANSMISSION HOUSING - FLSS AND FLSTFBS:* **FLSS** **FLSTFBS**
4132	SCREW	*CLUTCH CONTROL - FLS, FLSTC, FLSTF, FLSTFB, FLSTN AND FXSB:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *CLUTCH CONTROL - FLSS AND FLSTFBS:* **FLSS** **FLSTFBS** ***BRAKE CONTROL, FRONT:* All Models**
41731-01	GASKET	***BRAKE LINES, FRONT, ABS:* All Models** ***BRAKE CONTROL, REAR:* All Models** ***BRAKE LINE AND MODULE, REAR, ABS:* All Models**
41733-88	GASKET	***BRAKE LINES, FRONT, ABS:* All Models** ***BRAKE LINE AND MODULE, REAR, ABS:* All Models**
41751-06A	GASKET	*CLUTCH CONTROL - FLSS AND FLSTFBS:* **FLSS** **FLSTFBS**
43567-92	SCREW	***WHEELS, REAR (2 OF 2):* All Models**
45405-75A	SCREW	*FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2):* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS** **FLSTFBS**
45733-48	OIL SEAL	*FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2):* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS** **FLSTFBS**
45845-77	O-RING	*FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2):* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS** **FLSTFBS**
45858-77	DRAIN SCREW	*FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (1 OF 2):* **FLSTC** **FLSTF**

		FLSTN **FLSTFB** **FLS** **FLSS** **FLSTFBS**
4740A	SCREW	*CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *CAMSHAFTS AND CAMSHAFT COVER - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *CAMSHAFTS and CAMSHAFT COVER - TWIN CAM 110™:* **FLSS** **FLSTFBS**
48300-60	ROLLER BEARING	*FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN:* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS** **FLSTFBS** *FORK BRACKETS, FRONT - FXSB:* **FXSB**
53156-86	BUSHING	***HANDLEBAR:*** **All Models**
59768-97	FENDER SEAT NUT KIT	*FENDERS AND SUPPORTS, REAR - FLSTC:* **FLSTC** *FENDERS AND SUPPORTS, REAR - FLSTF, FLSTFB AND FLSTFBS:* **FLSTF** **FLSTFB** **FLSTFBS** *FENDERS AND SUPPORTS, REAR - FLS AND FLSS:* **FLS** **FLSS** *FENDERS AND SUPPORTS, REAR - FXSB:* **FXSB**
60547-06	GASKET	***PRIMARY HOUSING:*** **All Models**
60678-85	RETAINING RING	***PRIMARY HOUSING:*** **All Models**
6229W	WASHER	*SADDLEBAGS - FLSTC:* **FLSTC**
6516HW	WASHER	***ENGINE MOUNTS:*** **All Models**
65324-83B	GASKET	*EXHAUST SYSTEM - FXSB:* **FXSB** *EXHAUST SYSTEM - FLSTC:* **FLSTC** *EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2):*

		FLSTF **FLSTN** **FLSTFB** **FLS** **FLSS**
65325-83A	RETAINING RING	*EXHAUST SYSTEM - FXSB:* **FXSB** *EXHAUST SYSTEM - FLSTC:* **FLSTC** *EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2):* **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSTFBS**
6702	WASHER	***SHIFTER, GEAR:*** **All Models** ***REAR BELT GUARD:*** **All Models** ***FUEL TANK:*** **All Models** *HORN:* **FLSTC** **FLSTFB** **FLSTF** **FXSB** *SADDLEBAGS - FLSTC:* **FLSTC**
7041	LOCKWASHER	*SHIFTER, GEAR:* **FXSB** *FORK BRACKETS, FRONT - FLS, FLSS, FLSTC, FLSTF, FLSTFB, FLSTFBS AND FLSTN:* **FLSS** **FLSTFBS**
7593	NUT	*EXHAUST SYSTEM - FXSB:* **FXSB** *EXHAUST SYSTEM - FLSTC:* **FLSTC** *EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2):* **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS** **FLSTFBS**
7716	LOCKNUT	*FOOTRESTS AND FOOTBOARDS:* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS** **FLSTFBS** *LICENSE PLATE BRACKETS - FLS AND FLSS:* **FLS** **FLSS** *LICENSE PLATE BRACKETS - FXSB:* **FXSB** *HEADLAMP (1 OF 2):* **FXSB**
786A	BOLT	***PRIMARY HOUSING:*** **All Models**

8037	NUT	*FENDER, FRONT:* **FLSTC** *FENDER, FRONT:* **FLSTN** *FENDERS AND SUPPORTS, REAR - FLSTN:* **FLSTN**
856A	SCREW	***SHIFTER, GEAR:*** **All Models**
9252	BALL BEARING	***WHEELS, FRONT (1 OF 2):*** **All Models** ***WHEELS, REAR (1 OF 2):*** **All Models**
9276A	BALL BEARING	*WHEELS, FRONT (1 OF 2):* **FLS** ***WHEELS, FRONT (1 OF 2):*** **All Models** *WHEELS, REAR (1 OF 2):* **FLS** ***WHEELS, REAR (1 OF 2):*** **All Models**
9955	CLAMP	*EXHAUST SYSTEM - FXSB:* **FXSB** *EXHAUST SYSTEM - FLSTC:* **FLSTC** *EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2):* **FLSTF** **FLSTFB** **FLSTFBS** *EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (1 OF 2):* **FLSTN** **FLS** **FLSS**

BRAKING & SUSPENSION

Part No.	Description	Part and Model(s)
42298-08	PAD KIT	***BRAKE CALIPER, REAR:*** **All Models**
45875-84A	OIL SEAL	*FORK, FRONT-FLS,FLSS,FLSTC,FLSTF,FLSTFB,FLSTFBS AND FLSTN (2 OF 2):* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS**
46514-01A	OIL SEAL	*FORK, FRONT - FXSB:* **FXSB**
46615-06	CU PACKING	*FORK, FRONT - FXSB:* **FXSB**

CHASSIS & COMPONENTS

Part No.	Description	Part and Model(s)
49725-07A	SPRING	***FRAME AND JIFFY STAND:*** **All Models**

ELECTRICAL

Part No.	Description	Part and Model(s)
70345-84	RETAINER	*INSTRUMENTS - FLSTF, FLSTFB, FLSTFBS AND FLSTN:* **FLSTF** **FLSTN** **FLSTFB** **FLSTFBS** *INSTRUMENTS - FLS, FLSS AND FLSTC:* **FLSTC** **FLS** **FLSS** ***SWITCHES, HANDLEBAR LEFT, FRONT:*** **All Models** ***HANDLEBAR:*** **All Models**
72023-51E	STOP LAMP SWITCH	***BRAKE CONTROL, REAR:*** **All Models** ***BRAKE LINE AND MODULE, REAR, ABS:*** **All Models** ***SWITCHES:*** **All Models**
72330-95	FUSE	*WIRING HARNESS, MAIN, NON-ABS - FLS (3 OF 5):* **FLS** *WIRING HARNESS, MAIN, ABS - FLS AND FLSS (3 OF 5):* **FLS** **FLSS** *WIRING HARNESS, MAIN, ABS - FLSTF, FLSTFB AND FLSTFBS (3 OF 5):* **FLSTF** **FLSTFB** **FLSTFBS** *WIRING HARNESS, MAIN, ABS - FLSTC AND FLSTN (3 OF 5):* **FLSTN** **FLSTC** *WIRING HARNESS, MAIN, ABS - FXSB (3 OF 5):* **FXSB** ***SWITCHES:*** **All Models**

ENGINE, TRANSMISSION & PRIMARY

Part No.	Description	Part and Model(s)
17025-03A	BREATHER ASSEMBLY	*ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** *ROCKER ARM ASSEMBLY AND PUSH RODS - TWIN CAM 110™:* **FLSS** **FLSTFBS**
18538-99C	HYDRAULIC LIFTER	*ROCKER ARM ASSEMBLY AND PUSHRODS - TWIN CAM 103™:* **FXSB** **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS**
37909-90	RETAINING RING	*CLUTCH - TWIN CAM 103™:*

		FLSTC **FLSTF** **FLSTN** **FLSTFB** **FLS** **FXSB** *CLUTCH - ASSIST AND SLIP - TWIN CAM 110™:* **FLSS** **FLSTFBS**
37913-98	PLATE CLUTCH	*CLUTCH - TWIN CAM 103™:* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FXSB**

FOOT CONTROLS

Part No.	Description	Part and Model(s)
33895-82D	SHIFT LEVER KIT	*SHIFTER, GEAR:* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS** **FLSTFBS**
34611-65A	PEG	*SHIFTER, GEAR:* **FXSB** *SHIFTER, GEAR:* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSS** **FLSTFBS**

INTAKE, EXHAUST & FUEL MGMT

Part No.	Description	Part and Model(s)
61011-04A	FILTER	***FUEL PUMP:*** **All Models**
65296-95A	CLAMP	*EXHAUST SYSTEM - FXSB:* **FXSB** *EXHAUST SYSTEM - FLSTC:* **FLSTC** *EXHAUST SYSTEM - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS AND FLSTN (2 OF 2):* **FLSTF** **FLSTN** **FLSTFB** **FLS** **FLSTFBS**

LIGHTING

Part No.	Description	Part and Model(s)
68000056	BULB	*AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2):* **FLSTC** **FLSTN**
68168-89A	BULB	*AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2):* **FLSTC** **FLSTN** *TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB:* **FLSTF** **FLSTFB** **FLS** **FXSB** **FLSS** **FLSTFBS** *TURN SIGNALS, REAR (1 OF 2):* **FLS** **FXSB** *TAIL LAMP - FLSTN:* **FLSTN**
68193-95	BULB	*FENDER, FRONT:* **FLSTC** *FENDERS AND SUPPORTS, REAR - FLSTC:* **FLSTC**
68329-03	BULB	***HEADLAMP (2 OF 2):*** **All Models**
68572-64B	BULB	*AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (1 OF 2):* **FLSTC** *TURN SIGNALS, REAR (1 OF 2):* **FLSTC**
68973-00	LENS	*AUXILIARY/FOG LAMPS AND TURN SIGNALS, FRONT - FLSTC, FLSTN (2 OF 2):* **FLSTN** *TURN SIGNALS, FRONT - FLS, FLSS, FLSTF, FLSTFB, FLSTFBS, FXSB:* **FLSTF** **FLSTFB** **FLS** **FXSB** **FLSS** **FLSTFBS** *TURN SIGNALS, REAR (1 OF 2):* **FLSTN** **FLSTF** **FLSTFB** **FLSS** **FLSTFBS**

MAINTENANCE & TOOLS

Part No.	Description	Part and Model(s)
63731-99A	OIL FILTER	*CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™:* **FLSTFB** **FLS** *CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 110™:*

		FLSS **FLSTFBS**
63798-99A	OIL FILTER	*CRANKCASE AND ENGINE OIL FILTER - TWIN CAM 103™:* **FLSTC** **FLSTF** **FLSTN** **FXSB**
65989-97C	BATTERY	***BATTERY:*** **All Models**
66373-06	BATTERY	***SWITCHES:*** **All Models**
95594-84B	WEIGHT	*WHEELS, FRONT (2 OF 2):* **FLS** **FXSB** **FLSS** *WHEELS, REAR (2 OF 2):* **FLS** **FXSB**
95595-84B	WEIGHT	*WHEELS, FRONT (2 OF 2):* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLSTFBS** *WHEELS, REAR (2 OF 2):* **FLSTC** **FLSTF** **FLSTN** **FLSTFB** **FLSTFBS**

SECURITY & STORAGE

Part No.	Description	Part and Model(s)
68926-07	REMOTE CONTROL FOB	***SWITCHES:*** **All Models** ***LOOSE PARTS:*** **All Models**

TIRES

Part No.	Description	Part and Model(s)
40558-82	INNER TUBE	*WHEELS, FRONT (1 OF 2):* **FLSTC** **FLSTN** **FLS** **FLSS** *WHEELS, REAR (1 OF 2):* **FLSTC** **FLSTN** **FLS** **FLSS**
40999-87	VALVE STEM	*WHEELS, FRONT (2 OF 2):* **FXSB** *WHEELS, REAR (1 OF 2):* **FXSB**
43022-91A	TIRE	*WHEELS, FRONT (2 OF 2):* **FLS**

		FLSS
43118-92A	TIRE	*WHEELS, FRONT (2 OF 2):* **FLSTC** **FLSTN**
43147-40	RIM FLAP	*WHEELS, FRONT (2 OF 2):* **FLSTN** **FLSTC** **FLS** **FLSS** *WHEELS, REAR (2 OF 2):* **FLSTC** **FLSTN** **FLS** **FLSS**
43157-83A	VALVE STEM ASSEMBLY	*WHEELS, FRONT (2 OF 2):* **FLSTF** **FLSTFB** **FLSTFBS** *WHEELS, REAR (1 OF 2):* **FLSTF** **FLSTFB** **FLSTFBS**
43164-05	RIM FLAP	*WHEELS, FRONT (2 OF 2):* **FLSTN** **FLSTC** *WHEELS, REAR (2 OF 2):* **FLSTC** **FLSTN**
43200001	TIRE	*WHEELS, REAR (1 OF 2):* **FLS** **FLSS**
43264-02	TIRE	*WHEELS, REAR (1 OF 2):* **FLSTC**
43353-03	TIRE	*WHEELS, REAR (1 OF 2):* **FLSTC** **FLSTN**

WINDSHIELDS & AIR DEFLECTORS

Part No.	Description	Part and Model(s)
67621-94	BUSHING	*WINDSHIELD - FLSTC:* **FLSTC**