

**HARLEY
DAVIDSON
PARTS CATALOG**
(HARLEY DAVIDSON PART NO. 99456-84B)

**1941-1984
FL MODELS**

**INCLUDES:
FL FL80 FLH FLH1200
POLICE MODELS
SHRINE MODELS**

GENERAL INFORMATION

This Parts Catalog has been prepared for your convenience when ordering parts for ELECTRA GLIDE (FL) Models. Wherever possible, parts are shown in assembly breakdown sequence. Index numbers shown in the illustrations correspond to index numbers in parts lists. Consult the illustrations when ordering parts so you are sure to get what you want. In most cases, only the latest parts are shown in the illustrations, however, parts lists cover some parts used as early as 1941.

Number in parenthesis following description of part is the quantity needed for complete assembly shown in illustration. If there is no number in parenthesis, only one is used.

Prices of parts listed in this catalog are published separately in the latest RETAIL PRICE LIST, and on the microfiche.

NOTE: N/A following description of part indicates part is no longer available from the factory. Do not attempt to order these parts from Harley-Davidson, Inc.

The following instructions should be followed carefully when ordering parts:

- Specify the correct part number for each item. Check the "Used On" column of the parts list which shows the model on which the part fits. Whenever in doubt, refer to the Vehicle Identification Number (V.I.N.) stamped on the engine crankcase.

Three types of serial numbers are used:

1. **1969 and earlier:** Serial number is located on the engine left crankcase. The first four or five digits represent the year and model — the same as shown in the "Used On" column in this catalog.
2. **1970 thru 1980:** Vehicle Identification Number (V.I.N.) is located on the engine right crankcase and is the same as the number located on the frame steering head. (See chart on this page.)
3. **1981 and later:** A 17 digit Vehicle Identification Number is stamped on the frame steering head and frame downtube label. An abbreviated V.I.N. is stamped on the engine crankcase (SEE INSIDE BACK COVER FOR CHART).

The V.I.N. (Vehicle Identification Number) for 1970 thru 1980 Electra Glide models are as follows:

ELECTRA GLIDE (Model)	FIRST TWO DIGITS (Model)	NEXT FIVE DIGITS (Sequential Number)	SECOND LAST DIGIT (Manufacturer)	LAST DIGIT (Model Season)
FL-1200	1A	1970 to Dec. 31, 1977 10000 and up Jan. 1, 1978 thru 1980 80000 and up	H-1970 thru 1979 J-1980	7-1977
FLH-1200	2A			8-1978
FLHS-1200	7E			9-1979
FLH-80	3G			0-1980
1979 Classic	3G			
1980 Classic	3H			
FLHS-80	5H			
FL-80	6H			
FLH-1200 Police	7H			
FLH-1200 Shrine	8H			
FLH-80 Police	9H			
FLH-80 Shrine	1K			
CLE	2H	80000 and up	Examples: 1978 FLH-80 (3G 82152 H9) 1980 Classic (3H 82153 J0) 1980 CLE (2G 82154 J0)	

- An asterisk (*) in the "Used On" column indicates part is used for 1984 models (the latest model year covered by this catalog.)

- Part Numbers are to be used when ordering by TELEGRAM or CABLE.

- When ordering parts use our standard Parts & Accessories order form, Part No. 88511-76, for all parts except engines and crankcases. Order form, Part No. 88514-76, must be used for engines and crankcases. The use of these forms will enable us to fill and ship your order more promptly. These forms are furnished free of charge upon request.

- Do not order motorcycles or advertising material on Parts Order Forms. Write nothing on the order form except the order itself, as any other correspondence will not be answered until the order is shipped and billed.

- Freight, Express and Parcel Post orders should be on separate order forms.

- For your own records, number and date all orders, also keep a carbon copy for future reference.

ALPHABETICAL INDEX


	Page		Page
Air Cleaner	47, 49	Headlamp	209
Alternator - '970 & Later	51	Heritage Edition Parts	255, 266, 287
Axle - Front & Rear	127, 123, 125	Highway Bars	77
Axle - Sidecar	263, 265	Horn	217
Battery	199	Ignition Circuit Breaker	59
Brill - Secondary	99	Ignition, Electronic	55, 57
Brake - Front - 1971 & Earlier	113	Indicator Lamps	216
Brake - Rear	111, 119	Instrument Panel	203, 235
Brake - Sidecar	255, 259	Jiffy Stand	139
Brake Caliper - 1972 to Early 1980	105, 107	Kick Starter - 1969 & Earlier	71
Brake Caliper - Late 1980 & Later	109	Leg Shields	171
Brake Caliper - Rear	111	Liberly Edition Parts	282
Brake Control - Front	102, 103	License Plate Bracket	179
Brake Control - Rear	115, 117	Luggage Carrier & Box	153, 155, 157, 159
Bumpers	173	Master Cylinder	100, 101, 113, 115
Cam Gear	23, 25, 27	Mirror	216
Carburetor - 1967 to '970	45	Mufflers	195, 197
Carburetor - '971 to '975	43	Numerical Index	294
Carburetor - 1976 to Early 1978	39, 41	Oil Cooler	193
Carburetor - Late 1978 to 1980	33, 35	Oil Filter	192
Carburetor - 1981 & Later	37	Oil Pressure Switch	31
Cast Wheel	121	Oil Pump	29, 31
Cast Wheel - Classic Sidecar	263	Oil Tank	191
Center Stand	139	Parking Lamps	210, 215
Chain	99	Passing Lamps	219, 221
Chain & Belt Guard - Rear	185	Pistons & Rings	15, 16
Chain Housing - Front	181, 183	Points - Ignition	59, 61
Chain Oiler	183, 181	Pursuit Lamps	218, 221
Choke	47, 49	Push Rods & Covers	7, 9, 11
Circuit Breaker	59, 235	Rims	121
Clutch - '941 to Early '984	89, 89	Rockers Arms & Covers	7, 9, 11
Clutch - Late 1984 & Later	91	Saddlebags	267, 269
Clutch Foot Control	93	Seat	141, 143, 145, 147, 149, 265
Clutch Hand Control	95	Seat Post	147, 267
Clutch Booster	97	Shifter	72, 73, 75, 77, 79, 81
Connecting Rods	7	Shock Absorbers	161
Crankcase	19, 21, 23, 25, 27	Sidecar Body & Frame	243, 245, 247, 249
Cycle Signal Lamp	203, 205, 207	Sidecar Connection Kit	251, 253
Cylinders & Heads	3, 4, 5	Sire	271, 273, 275
Disc Brake	105, 121	Spark Cables, Coil & Plugs	55, 57, 61
Electrical	223, 225, 227, 228, 229, 231, 233, 235, 236, 237	Speedometer	207
Engine	3	Splash Guards	171
Exhaust Pipes	195, 197	Spotlamps	219, 221
Fairing	169	Sprinklers	85, 99, 101, 121
Fenders	175, 177, 265, 257	Starter Housing	63, 65
Fender Trim	178	Starter Motor	67, 69
FLHS Parts	278, 279, 280, 281, 282, 283	Starter Switches	239
FLHF Parts	289, 291	Switches	229, 230, 231, 236, 239
FLHX Parts	291, 292, 293	Tachometer	201
Flywheels	16	Tail Lamp	211, 257, 260
Footboards & Footrests	150, 151	Tapnuts	9, 13
Fuel Shifter	72, 73, 75, 77	Terminal Plate	233, 235
Fork - Front	127, 129, 131, 133	Throttle Control	163, 165, 167
Frame & Rear Fork	135	Tool Kit	277
Frame - Sidecar	243, 245, 247, 249	Tour Pak	153, 155, 157, 159
Gas Tanks	187	Transmission	82, 83, 85, 87
Gas Tank Trim	180, 180	Tune Up Kits	61
Gaskets - Engine	1, 7, 11, 13	Turn Signals	213, 215, 267
Gear Case & Cover	23, 25, 27	Valves & Guides	5, 11
Generator - 1958 to 1989	53	Voltage Regulator	241
Handlebar	163, 165	Wheels	121, 123, 125, 263, 265
Handlebar Switches	228, 229, 231	Windshield	169, 170
Hand Shifter	79, 81	Wiring	223, 230, 231
		75th Anniversary Parts	284

PATENT NOTICE

Harley-Davidson products are manufactured under one or more of the following: U.S. Patents — 2986162, 2987934, 2998809, 3116088, 3146631, 3148860, 3228982, 3229782, 3434887, 3559773, 3873369, 3880483, 3883716, 3709317, Des. 226 626.

To the best knowledge of Harley-Davidson, Inc., the material contained herein is accurate as of the date this publication was approved for printing. Harley-Davidson, Inc., reserves the right to change specifications, equipment, or designs at any time without notice and without incurring obligation.

HARLEY-DAVIDSON MOTOR COMPANY
Milwaukee, Wisconsin 53201

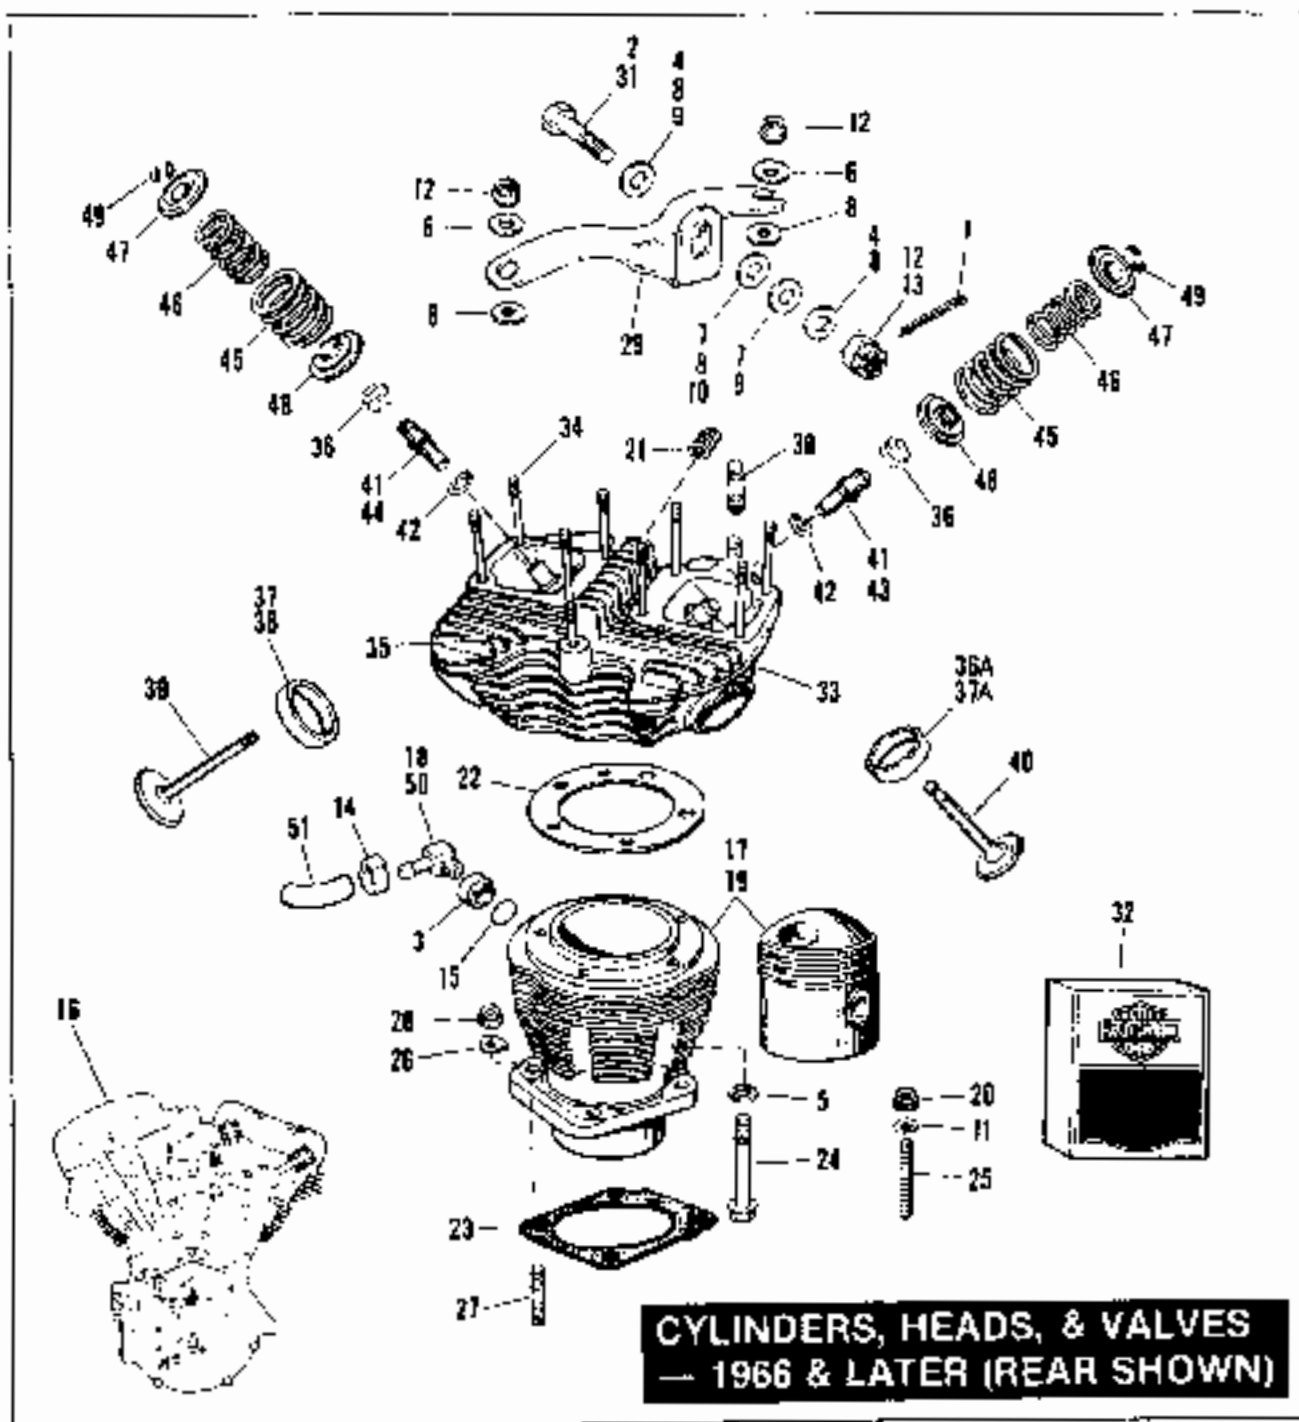


CYLINDERS, HEADS & VALVES — 1966 & LATER

A1-1

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	534	SCREW PIN 3/32 x 7/8	66 to 72 — FL, FLH
	2	4725	COLT 7/16-20 x 1-1/2 hex hd	73 to * — FL, FLH, FLH-80, Classic
	3	5723	SPACER, front cylinder base	Late 61 — FLH-80, Classic
	4	5418	WASHER, 3/8 x 1 x 5/16 (2)	late 71 to 76 — FL, FLH, FLH-80
	5	5469HW	WASHER, 7/16 x 3/4 x 1/8 (5)	66 to Early 77 — FL, FLH
	6	5495HW	WASHER, 7/16 x 15/16 x 1/8 (2 + 76 to 83; as req'd)	66 to * — FL, FLH, FLH-80, Classic

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	7	6497-W	WASHER, 7/16 x 1-1/8 x 1.15 (2-80 & 82 Classic)	Late 71 to * — FL, FLH, FLH-80, Classic
	8	6516-W	WASHER, 7/16 x 1-1/8 x 1.2 (2-79 to 84, 7-94)	55 to * — FL, FLH, FLH-80, Classic
		6521-W	WASHER, 23/64 x 1-1/8 x 3/32	N/A 65 to 80 — FL, FLH
	9	6522-W	WASHER, 23/64 x 1-1/8 x 5/32 (2)	65 to 79 — FL, FLH, FLH-80
	10	6524-W	WASHER, 23/64 x 1-1/8 x 1/64	65 to 69 — FL, FLH
	11	7039	LOCKWASHER, 7/16 (4)	66 to 77 — FL, FLH
	12	7625	LOCKWASHER, 7/16 (23 x 77 to 84 & 86 to 87) (2, 5-79 & 84 to 87)	66 to * — FL, FLH, FLH-80, Classic
	13	766-W	CASTLE NUT, 7/16-20	66 to 72 — FL, FLH
	14	10014	CLAMP, hose (4)	Late 81 — FLH-80, Classic
	15	11137	O-RING front cylinder base (ring)	Late 81 — FLH-80, Classic
	16	16310-81	FITTING, cylinder base (2)	Late 81 to Early 87 — FLH-80, Classic
	17	16484-66B	FRONT CYLINDER WITH PISTON	N/A 66 to 73 — FL
		16484-74A	FRONT CYLINDER WITH PISTON	N/A 74 to 80 — FL
		16485-66B	FRONT CYLINDER WITH PISTON	N/A 66 to 73 — FLH
		16485-74A	FRONT CYLINDER WITH PISTON	74 to 80 — FLH
		16492-66B	REAR CYLINDER WITH PISTON	N/A 66 to 73 — FL
		16492-74A	REAR CYLINDER WITH PISTON	74 to 80 — FLH
		16493-66B	REAR CYLINDER WITH PISTON	N/A 66 to 73 — FL
		16493-74A	REAR CYLINDER WITH PISTON	N/A 74 to 80 — FL
		16494-78	FRONT CYLINDER WITH PISTON	78 to 80 — FLH-80, Classic
		16495-78	REAR CYLINDER WITH PISTON	78 to 80 — FLH-80, Classic
		16496-80A	FRONT CYLINDER WITH PISTON	Early 81, Late 81 to * — FLH-80, Classic
		16508-81	FRONT CYLINDER WITH PISTON	Late 81 & Early 82 — FLH-80, Classic
		16499-80A	REAR CYLINDER WITH PISTON	Early 81, Late 82 to * — FLH-80, Classic
		16509-81	REAR CYLINDER WITH PISTON	Late 81 & Early 82 — FLH-80, Classic
	20	16602-80	NUT, 7/16-20 x 1/2 x 5/8 hex. (4)	66 to 77 — FL, FLH
	21	16725-EEA	HELI-COIL INSERT, spark plug hole	N/A 66 to 74 — FL, FLH
	22	16770-66B	GASKET, cylinder head	66 to * — FL, FLH, FLH-80, Classic
	23	16776-82	GASKET, front cylinder base	66 to * — FL, FLH, FLH-80, Classic
		16777-83	GASKET, rear cylinder base	66 to * — FL, FLH, FLH-80, Classic
	24	16814-77	BOLT, cylinder head (5)	66 to * — FL, FLH, FLH-80, Classic
	25	16831-80	STUD, cylinder base (4)	66 to 77 — FL, FLH
	26	16835-78	SPACER, cylinder base stud (4)	78 to * — FL, FLH, FLH-80, Classic
	27	16837-79	STUD, cylinder base, 2-1/2 (2) (4)	78 to * — FL, FLH, FLH-80, Classic
	28	16838-79	LOCKNUT, 7/16-20 x 3/8 x 9/16 hex. (4)	78 to * — FL, FLH, FLH-80, Classic
	29	16857-57A	BACKET, engine mounting	57 to * — FL, FLH, FLH-80, Classic
		16853-48	BACKET, engine mounting	N/A 66 — FL, FLH
	30	16854-48	STUD, cylinder head motor brace	66 to * — FL, FLH, FLH-80, Classic
	31	16995-52	BOLT, engine bracket - center	N/A 66 to 72 — FL, FLH
	32	17025-66A	SET OF ENGINE GASKETS	66 to 78 — FL, FLH, FLH-80, Classic
		17024-79	SET OF ENGINE GASKETS	79 to * — FL, FLH, FLH-80, Classic
	33	17121-80	HEAD, rear cylinder	N/A 56 to 73 — FL, FLH, FLH-80
		17130-90	HEAD, front cylinder w/studs (34 threaded)	N/A 79 — Classic
		17131-80	HEAD, rear cylinder w/studs (painted)	N/A 79 — Classic

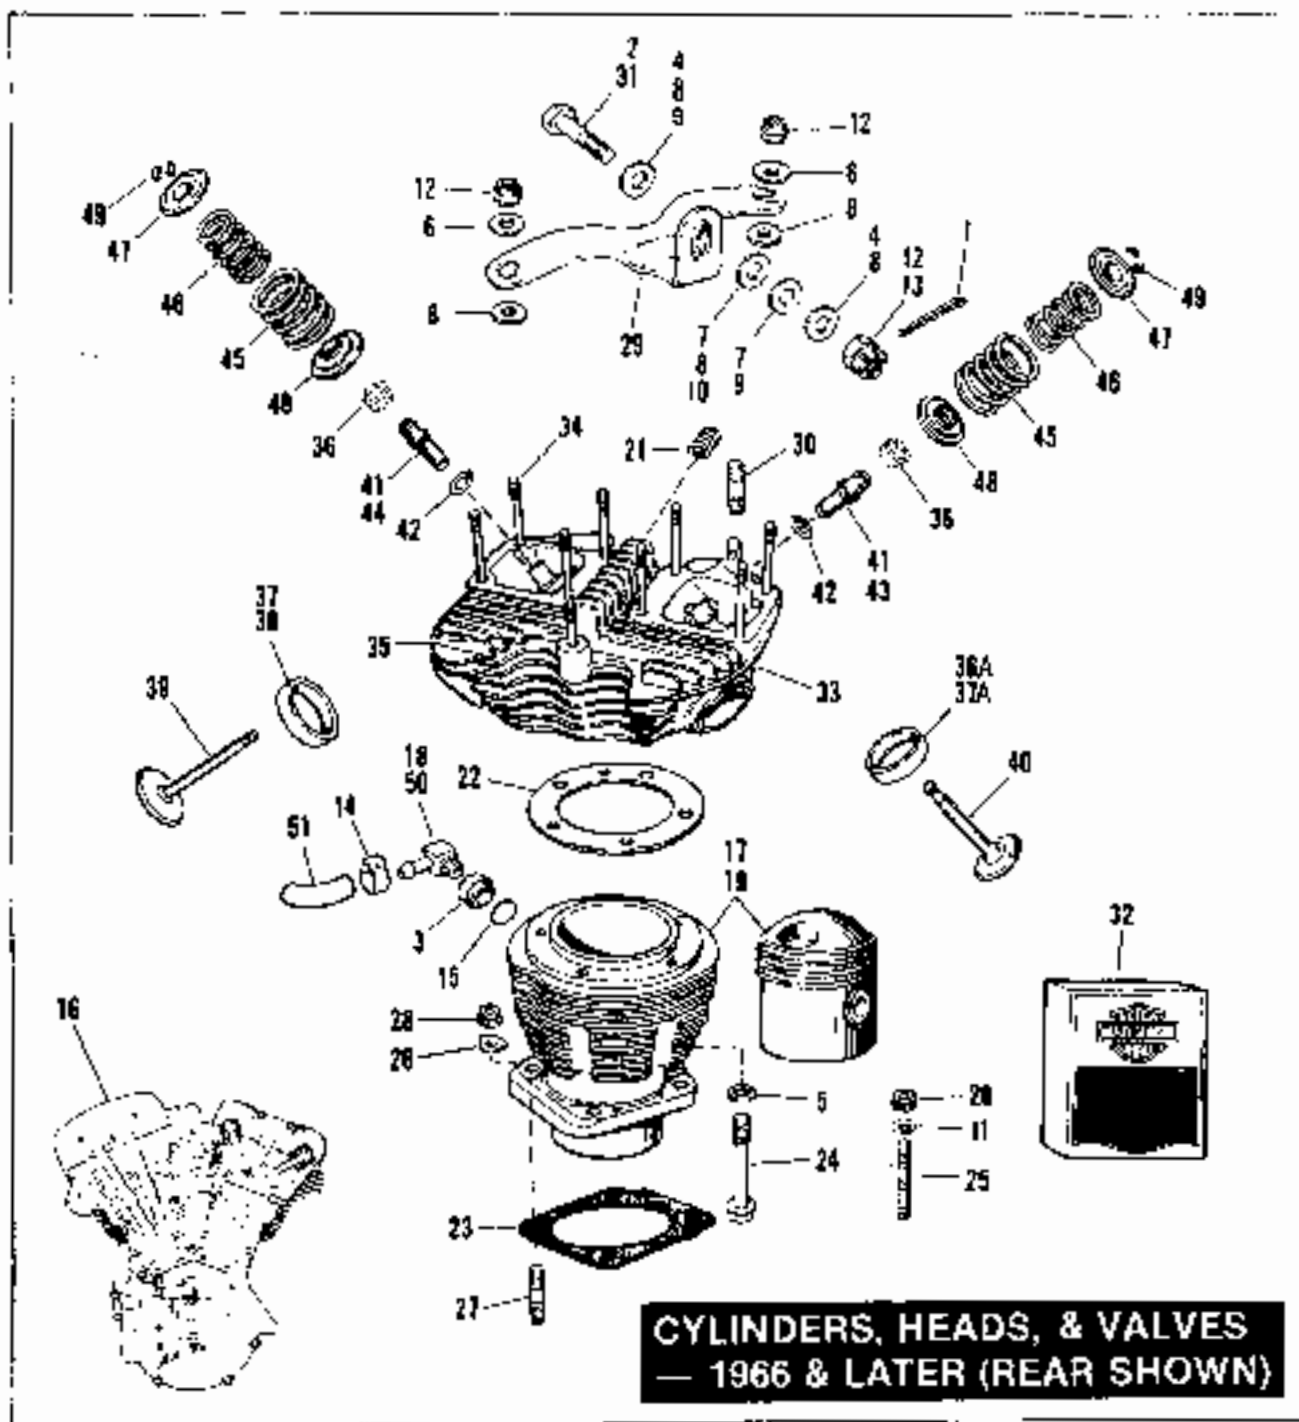

**CYLINDERS, HEADS, & VALVES
— 1966 & LATER (REAR SHOWN)**

CYLINDERS, HEADS & VALVES — 1966 & LATER (CONT'D)

A1-3


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
NOTE: To use the following on Early 81 & earlier vehicles replace exhaust valves with either 19068-81 or 19089-81; replace intake valves with either 12075-81 or 18078-81; replace upper & lower collars with (2) 18219-81 & (2) 18222-81; & use (4) 18000-81 valve seats. For late 1980 models use 18222-75 collar.				
	33	17160-81	HEAD front cylinder (w/studs)	80 to * — FL, FLH, FLH-80
		17161-81	HEAD rear cylinder (w/studs)	80 to * — FL, FLH, FLH-81
		17173-81	HEAD iron cylinder — (w/studs—painted)	80 to 82 — Classic
		17171-81	HEAD rear cylinder — (w/studs—painted)	80 to 82 — Classic
	34	17508-86A	STUD rocker arm cover (long) (R) (7-RC & later)	86 to * — FL, FLH, FLH-80, Classic

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	35	18008-38	SHOCK LOCK ARM Cover (steel) (1967-80-83)	66 to * — FL, FLH, FLH-80, Classic
	36	18009-81	VALVE SEAL (1)	Early 61 to * — FLH-80, Classic
	36A	18010-79	INSCRT, exhaust valve seat	80 to * — FLH-80, Classic
	37	18020-79	INSCRT, intake valve seat	80 to * — FLH-80, Classic
	37A	18015-56B	INSCRT, exhaust valve seat	66 to 79 — FL, FLH, FLH-80, Classic
		18016-56	INSCRT, exhaust valve seat — COOL, DIS, O.D.	N/A 66 to 79 — FL, FLH, FLH-80, Classic
	38	18017-56B	INSCRT, intake valve seat	N/A 66 to 79 — FL, FLH, FLH-80, Classic
	39	18018-80	INTAKE VALVE — steel (iron)	66 to Early 81 — FL, FLH, FLH-80, Classic
		18019-81	INTAKE VALVE — steel (iron)	Late 81 to * — FLH-80, Classic
		18020-80	INTAKE VALVE — steel (iron)	66 to Early 81 — FL, FLH, FLH-80, Classic
		18021-81	INTAKE VALVE — steel (iron)	Late 81 to * — FLH-80, Classic
	40	18022-80	EX-AUST VALVE (special) — 3/16 in. S. head	66 to * — FL, FLH, FLH-80, Classic
		18023-80	EX-AUST VALVE — std. (iron)	66 to Early 81 — FL, FLH, FLH-80, Classic
		18024-81	EX-AUST VALVE — std. (iron)	Late 81 to * — FLH-80, Classic
		18025-81	EX-AUST VALVE — std. (iron)	66 to Early 81 — FL, FLH, FLH-80, Classic
		18026-81	EX-AUST VALVE — std. (iron)	Late 81 to * — FLH-80, Classic
	41	18102-81A	VALVE GUIDE, in. & ex. — 0.0080 S. O. D. (cast iron) (2)	Late 81 to * — FLH-80, Classic
		18104-81A	VALVE GUIDE, in. & ex. — 0.0060 S. O. D. (cast iron) (2)	Late 81 to * — FLH-80, Classic
		18106-81A	VALVE GUIDE, in. & ex. — 0.0040 S. O. D. (cast iron) (2)	Late 81 to * — FLH-80, Classic
		18107-81A	VALVE GUIDE, in. & ex. — 0.0030 S. O. D. (cast iron) (2)	Late 81 to * — FLH-80, Classic
		18108-81A	VALVE GUIDE, in. & ex. — 0.0020 S. O. D. (cast iron) (2)	80 to * — FL, FLH, FLH-80, Classic
		18109-81A	VALVE GUIDE, in. & ex. — 0.0010 S. O. D. (cast iron) (2)	80 to * — FL, FLH, FLH-80, Classic
		18110-79A	VALVE GUIDE, in. & ex. — 0.0010 S. O. D. (cast iron) (2)	66 to 79 — FL, FLH, FLH-80, Classic
		18111-79A	VALVE GUIDE, in. & ex. — 0.0020 S. O. D. (cast iron) (2)	66 to 79 — FL, FLH, FLH-80, Classic
		18112-79A	VALVE GUIDE, in. & ex. — 0.0030 S. O. D. (cast iron) (2)	66 to 79 — FL, FLH, FLH-80, Classic
		18113-79A	VALVE GUIDE, in. & ex. — 0.0040 S. O. D. (cast iron) (2)	66 to 79 — FL, FLH, FLH-80, Classic
		18114-79A	VALVE GUIDE, in. & ex. — 0.0060 S. O. D. (cast iron) (2)	66 to 79 — FL, FLH, FLH-80, Classic
	42	18105-79	RETAINING RING, cast iron valve guides (4)	80 & Early 81 — FL, FLH, FLH-80, Classic
	43	18115-49	VALVE GUIDE, intake — 0.0040 S. O. D. (2)	66 to 75 — FL, FLH, FLH-80, Classic
		18116-49	VALVE GUIDE, intake — 0.0080 S. O. D. (2)	66 to 75 — FL, FLH, FLH-80, Classic
	44	18106-51	VALVE GUIDE, exhaust — 0.0030 S. O. D. (2)	N/A 66 to 79 — FL, FLH, FLH-80, Classic
		18107-51	VALVE GUIDE, exhaust — 0.0040 S. O. D. (2)	N/A 66 to 79 — FL, FLH, FLH-80, Classic
		18108-51	VALVE GUIDE, exhaust — 0.0060 S. O. D. (2)	N/A 66 to 79 — FL, FLH, FLH-80, Classic
	45	18201-82	VALVE SPRING, outer (2)	66 to 80 — FLH, 70 to * — FL, FLH-80, Classic
	46	18202-82	VALVE SPRING, inner (2)	66 to 80 — FLH, 70 to * — FL, FLH-80, Classic
		18204-25A	VALVE SPRING, inner (2)	N/A 66 to 69 — FL
		18205-57	VALVE SPRING K.T. includes inner & outer spring	66 to Early 82 — FL, FLH, FLH-80, Classic
	47	18216-81	COLLAR, valve spring — upper (2)	Late 81 to * — FLH-80, Classic
		18221-25	COLLAR, valve spring — upper (2)	66 to Early 81 — FL, FLH, FLH-80, Classic
	48	18222-48	COLLAR, valve spring — lower (2)	66 to 75 — FL, FLH, FLH-80, Classic
		18222-79	COLLAR, valve spring — lower (2)	66 & Early 81 — FL, FLH, FLH-80, Classic
		18222-81	COLLAR, valve spring — lower (2)	Late 81 to * — FLH-80, Classic
	49	18226-16	VALVE KEY (1)	66 to * — FL, FLH, FLH-80, Classic
	50	62375-57	FITTING, cylinder type (2)	Late 82 — FLH-80, Classic

NOTE: Item 51 sold only in bulk length under the following part number. Cut to required length.


51 62331-18 HOSE, 1/41 in. x 3/8 in. reinforced rubber (25 ft. length) Late 81 — FLH-80, Classic

ROCKER ARMS, COVER & PUSHRODS — 1966 & LATER

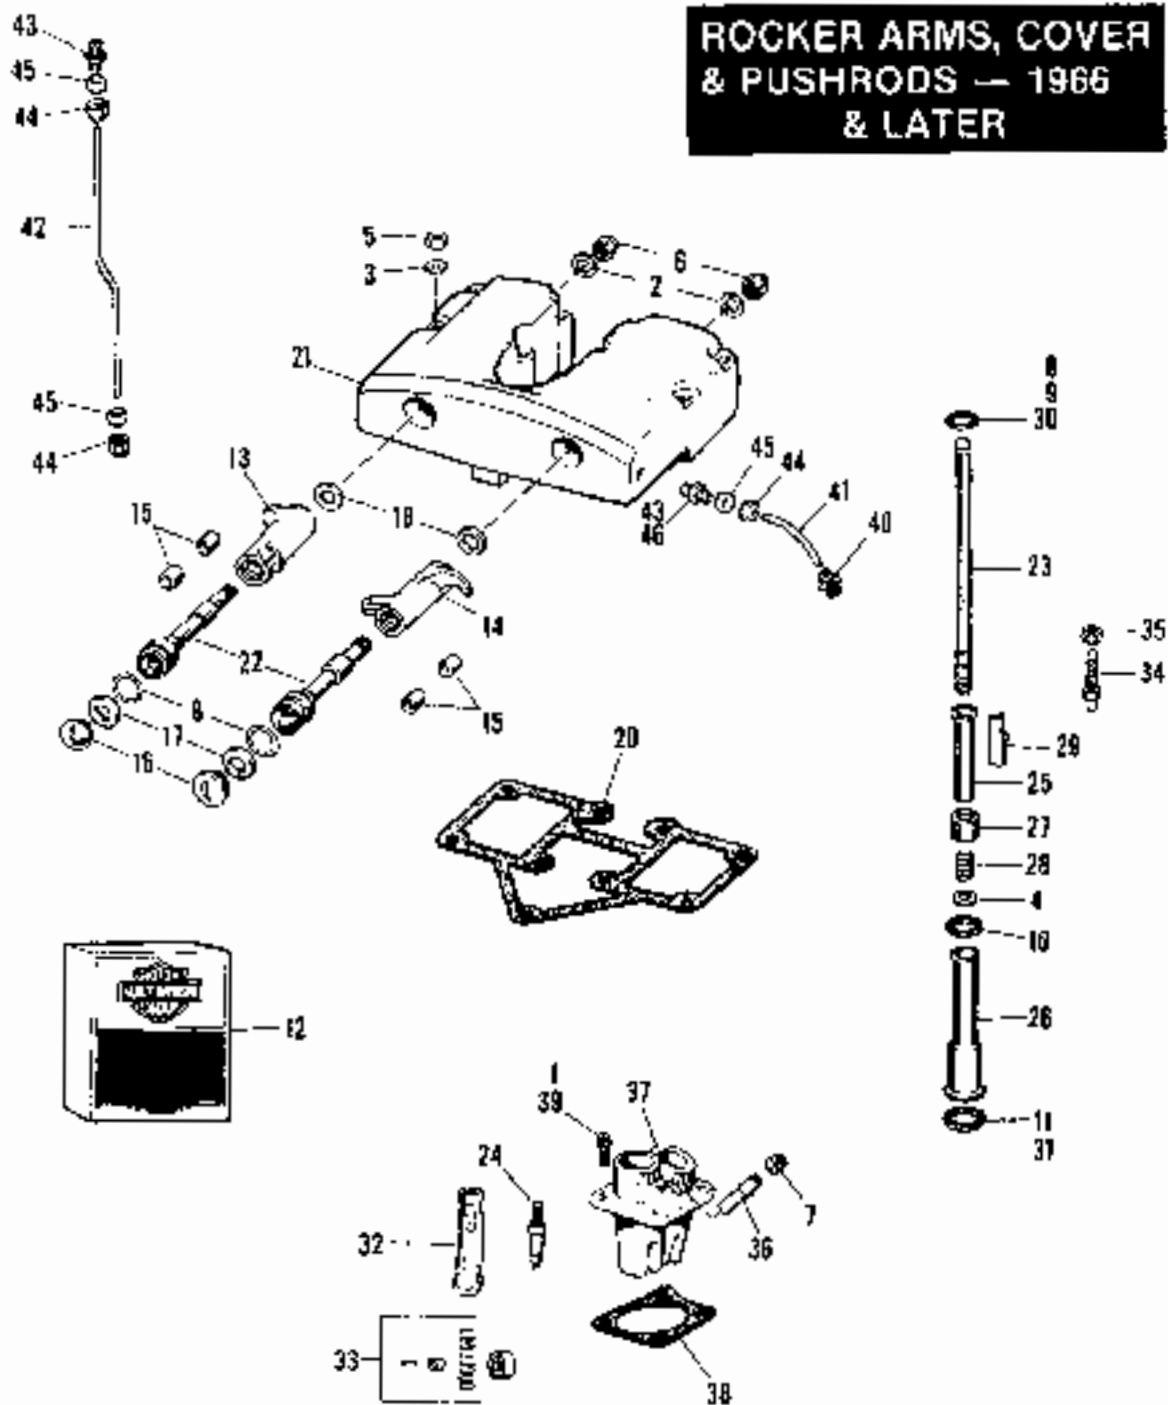


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	908	SCREW, 1/4-20 x 7/8-12 (pl. disk end) (4) (pack)	79 — Classic
		1750	SCREW, 1/4-20 x 7/8 x 12 (pl. disk end)	66 to Early 76 — FL, FLH
		1770	SCREW, 1/4-20 x 7/8-12 (pl. disk end) (4)	Late 76 to * — FL, FLH, FLH-90, Classic
	2	6001	WASHER, 7/16 x 3/4 x 1.32 (black) (4)	79 — Classic
		6450W	WASHER, 7/16 x 3/4 x 1.25 (2)	66 to * — FL, FLH, FLH-90, Classic
	3	6002	WASHER, 5/16 x 5/8 x 1.16 (black) (9)	79 — Classic
		6016	WASHER, 11/32 x 11/16 x 1.16 (9)	Late 80 to * — FLH-80
		6316W	WASHER, 5/16 x 5/8 x 1.16 (9)	81 to Early 83 — FL, FLH, FLH-80, Classic
		6702	WASHER, 5/16 x 11/16 x 1.16 (4)	66 to 79 — FL, FLH, FLH-80, Classic
	4	6762B	WASHER, 11/16 x 5/8 x 1.32 (2)	66 to * — FL, FLH, FLH-80, Classic
	5	7509	NUT, 5/16-24 x 1/2 hex (black) (8)	79 — Classic
		7750	NUT, 5/16-24 x 1/2-64 x 1/2 hex (8)	66 to * — FL, FLH, FLH-80, Classic
	6	1671	ACORN NUT, 7/16-20 x 1/2-16 x 5/8 hex (chrome) (2)	81 to * — FLH-90, Classic
		7875	ACORN NUT, 7/16-20 x 5/8 x 5/8 hex (chrome) (2)	66 to 80 — FL, FLH, FLH-80, Classic
	7	10014	CLAMP, hose (4)	Late 81 & Early 82 — FLH-80, Classic
	8	11101	O-RING, rocker arm shaft (2) (push rod cover - upper) (2) (and 79 to Early 81)	66 to * — FL, FLH, FLH-80, Classic
	9	11112	QUAD SEAL, push rod cover — upper (4)	Late 81 to * — FLH-80, Classic
	10	11132	O-RING, push rod cover — middle (2)	Late 75 to * — FL, FLH, FLH-80, Classic
	11	11133A	QUAD SEAL, push rod cover — lower (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	12	17064-46A	GASKET SET, top overhaul	66 to 78 — FL, FLH, FLH-80, Classic
		17064-90A	GASKET SET, top overhaul	79 to * — FL, FLH, FLH-90, Classic
	13	17260-SEA	ROCKER ARM, rear exhaust and front intake	66 to * — FL, FLH, FLH-80, Classic
	14	17375-86A	ROCKER ARM, front exhaust and rear intake	66 to * — FL, FLH, FLH-80, Classic
	15	17428-57	BLUSHING, rocker arm (4)	66 to * — FL, FLH, FLH-80, Classic
	16	17448-57	SCREW, rocker arm shaft end (2)	66 to Early 71 — FL, FLH
		17448-71A	SCREW, rocker arm shaft end (chrome) (2)	Late 71 to * — FL, FLH, FLH-80, Classic
		17449-77	SCREW, rocker arm shaft end (black) (2)	N/A 79 — Classic
	17	17450-71	WASHER, rocker arm shaft (2)	73 to 81 — FL, FLH, FLH-80, Classic
	18	17452-69	SPACER, rocker arm (2)	66 to * — FL, FLH, FLH-80, Classic
	19	17500-69	GASKET, rocker arm cover (2)	66 to * — FL, FLH, FLH-80, Classic
	21	17500-80	ROCKER ARM COVER KIT, (incl. 17508, 66A STUD)	66 to * — FL, FLH, FLH-80, Classic
		17502-80	ROCKER ARM COVER KIT, (incl. 17508, 66A STUD)	66 to * — FL, FLH, FLH-80, Classic
	22	17511-66B	SHAFT, rocker arm (2)	66 to * — FL, FLH, FLH-80, Classic
	23	17504-66	PUSH ROD ASSEMBLY (2)	66 to * — FL, FLH, FLH-80, Classic
	24	17520-53A	LIFTER, hydraulic — push rod (2)	66 to * — FL, FLH, FLH-80, Classic
	25	17535-79B	COVER, upper push rod	66 to * — FL, FLH, FLH-80, Classic
	26	17539-48B	COVER, lower push rod (2)	66 to Early 79 — FL, FLH, FLH-80, Classic
		17539-79	COVER, lower push rod	Late 79 to * — FL, FLH, FLH-80, Classic
	27	17545-36B	CAP, cover spring (2)	66 to * — FL, FLH, FLH-80, Classic
	28	17547-36	SPRING, push rod cover (2)	66 to * — FL, FLH, FLH-80, Classic
	29	17550-86	RETAINER, spring cap (2)	66 to * — FL, FLH, FLH-80, Classic
	30	17555-90	CORE WASHER, push rod cover (upper) (4)	66 to Early 79 — FL, FLH, FLH-80, Classic
	31	17555-90	CORE WASHER, push rod cover (lower) (2)	66 to Early 79 — FL, FLH, FLH-80, Classic

ROCKER ARMS, COVER & PUSHRODS — 1966 & LATER

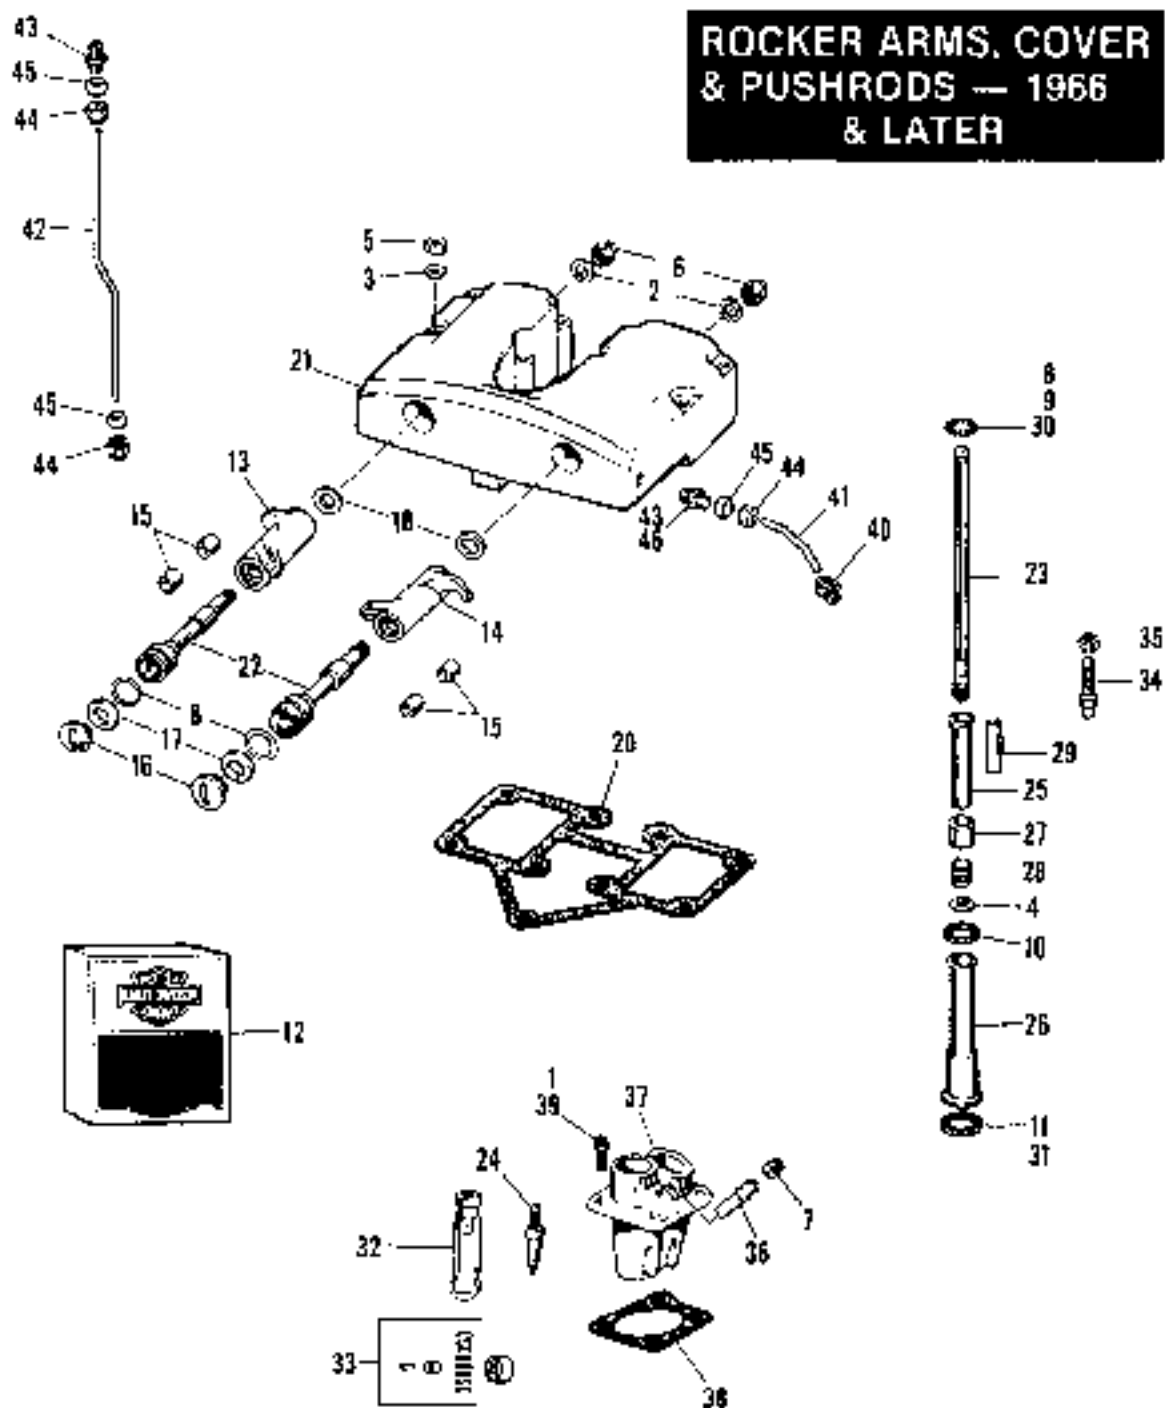


RTA'L PRICE	INDEX NO	PART NO.	NAME	USED ON
	34	18502-5JA	APPL. Airtight (2)	65 to * - FL, FLH, FLH-90, Classic
	35	18504-5JA	APPL. Support (2)	65 to * - FL, FLH, FLH-90, Classic
	36	18506-57	TAPPET ACCESSING SCREW, with oil (2)	65 to * - FL, FLH, FLH-90, Classic
	38	18508-68	APPL. Support, locking device	65 to * - FL, FLH, FLH-90, Classic
	39	18509-81	FL. FLH. Tappet guide	Late 51 & Early 60 - FLH-80, Classic
	40	18510-66C	TAPPET GUIDE, front cylinder	65 to Early 76 - FL, FLH
	41	18603-80A	TAPPI. Guide, rear cylinder	Early 76 to * - FL, FLH, FLH-80, Classic
	42	18507-81	TAPPET GUIDE, front cylinder	Late 81 & Early 82 - FLH-80, Classic
	43	18612-80A	APPL. Guide, rear cylinder	Late 82 to * - FLH-80, Classic
	44	18508-81	TAPPET GUIDE, rear cylinder	Late 81 & Early 82 - FLH-80, Classic
	45	18612-80B	TAPPET GUIDE, rear cylinder	65 to Early 76 - FL, FLH
	46	18612-76A	TAPPET GUIDE, rear cylinder	Late 76 to Early 81 - FL, FLH, FLH-80, Classic
	48	18603-80B	GASEIT Tappet guide, rear cylinder	65 to Early 90 - FL, FLH, FLH-80, Classic
	49	18603-80C	GASEIT Tappet guide, rear cylinder	Late 90 to * - FLH-80
	50	18604-80B	GASEIT Tappet guide, front cylinder	65 to * - FL, FLH, FLH-90, Classic
	51	18605-55	SCREW, tappet guide (2)	65 to Early 76 - FL, FLH
	52	52440-81	OIL LINE FITTING, rocker arm cover (front)	81 to * - FLH-80, Classic
	53	52753-60A	OIL LINE TUBE, top cover, exclusive (front)	65 to * - FL, FLH, FLH-80, Classic
	54	52755-60A	OIL LINE TUBE, crankcase to top cover (front)	65 to * - FL, FLH, FLH-80, Classic
	55	52526-57	OIL LINE FITTING, rocker arm cover (2 - Early 82 & Earlier)	65 to * - FL, FLH, FLH-80, Classic
	56	63517-57A	SCREW, oil (2)	65 to * - FL, FLH, FLH-80, Classic
	57	63528-57	SCREW, oil (2)	65 to * - FL, FLH, FLH-80, Classic
	58	63543-82	OIL LINE FITTING, rocker arm cover	Late 82 to * - FLH-80, Classic

**CYLINDERS, ROCKER ARMS,
VALVES AND GASKETS -
1965 & EARLIER
(REAR SHOWN)**

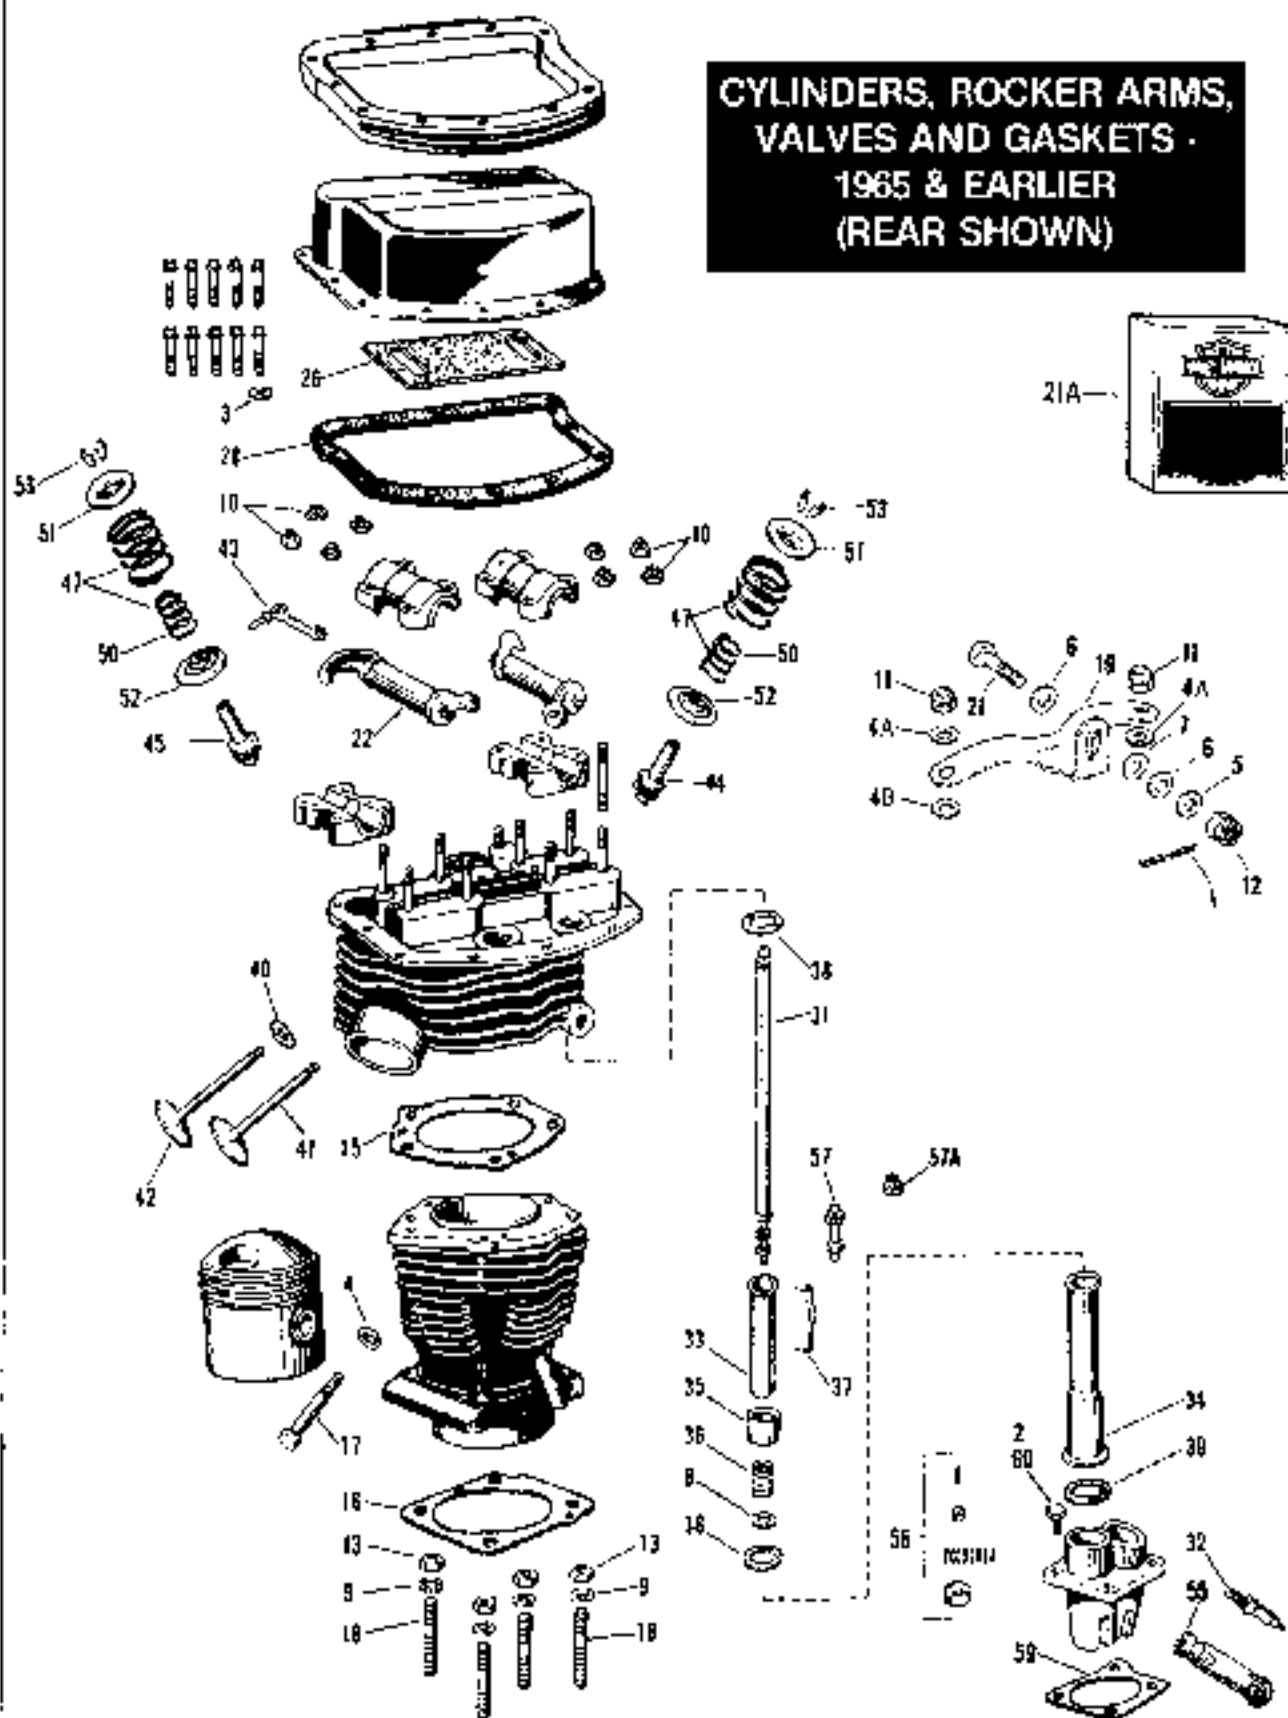


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	924	OUTTER FA, 3/32 x 7/8	40 to 65 — FL, FLH
	2	3750	SCREW, 1/4-24 x 7/8, 12 pt. hd. (4)	40 to 65 — FL, FLH
	3	6150W	WASHER, No. 10 x 3/8 x 1/16, ss (10)	54 to 65 — FL, FLH
	4	6455-W	WASHER, 7/16 x 3/4 x 1/9 (5)	41 to 65 — FL, FLH
	4A	6455-W	WASHER, 7/16 x 15/16 x 1/8, (rear cylinder only)	48 to 65 — FL, FLH
	16	55150W	WASHER, 7/16 x 1/2 x 1/16 (2)	48 to 65 — FL, FLH
	5	5521W	WASHER, 2 1/4 x 1/2 x 3/32	N/A 41 to 65 — FL, FLH
	6	6622H8	WASHER, 25/64 x 1/2 x 3/32 (2)	41 to 65 — FL, FLH
	7	6521W	WASHER, 25/64 x 1/2 x 1/8	41 to 65 — FL, FLH
	8	6762B	WASHER, 1 1/16 x 59/64 x 1/32 (2)	41 to 65 — FL, FLH
	9	703H	LOCK WASHER, 7/16 (4)	41 to 65 — FL, FLH
	10	7127	LOCKWUT, 5/16-24 x 1 1/2 x 7/8 (1)	48 to 65 — FL, FLH
	11	7825	LOCKWUT, 7/16-20 x 2 1/2 x 5/8 (2)	48 to 65 — FL, FLH
	12	7961W	CASTER NUT, 7/16-20	52 to 65 — FL, FLH
	13	16602-30	NUT, 7/16-20 x 1/2 x 5/8 hex (4)	41 to 65 — FL, FLH
	15	16770-49	GASKET, cylinder head	48 to 65 — FL, FLH
	16	16776-49	GASKET, front cylinder base	48 to 65 — FL, FLH
		16776-60	GASKET, front cylinder base	50 to 65 — FL, FLH
		16777-49	GASKET, rear cylinder base	48 to 65 — FL, FLH
		16777-50	GASKET, rear cylinder base	63 to 65 — FL, FLH
	17	15814-77	BOLT, cylinder head (5)	48 to 65 — FL, FLH
	18	16831-30	STUD, cylinder base (4)	41 to 65 — FL, FLH
	19	16853-48	BRACKET, engine mounting	N/A 48 to 65 — FL, FLH
	21	16865-52	BOLT, engine bracket, corner	N/A 52 to 65 — FL, FLH
	21A	17029-58	SET OF MOTOR GASKETS	60 to 65 — FL, FLH
		17024-48A	GASKET SET, top overhaul	60 to 65 — FL, FLH
	22	17300-49	ROCKER ARM, rear exhaust and front intake	N/A 48 to 65 — FL, FLH
	26	17507-49	PAO, rocker arm cover	48 to 65 — FL, FLH
	28	17541-48B	GASKET, rocker arm cover (2)	48 to 65 — FL, FLH
	31	17505-53B	PUSH ROD ASSEMBLY, (2)	N/A 53 to 65 — FL, FLH
	32	17520-50A	P.S. - P.O., hydraulic unit (2)	53 to 65 — FL, FLH
	33	17935-48B	COVER, upper push rod (2)	48 to 65 — FL, FLH
	34	17936-48B	COVER, lower push rod (2)	49 to 65 — FL, FLH
	35	17945-36B	CAP, cover spring (2)	41 to 65 — FL, FLH
	36	17947-35	SPRING, push rod cover (2)	41 to 65 — FL, FLH
	37	17950-48	RETAINER, spring cap	48 to 65 — FL, FLH
	38	17955-56	CORR WASHER, push rod cover - upper (4)	48 to 65 — FL, FLH
	39	17955-48	CORR WASHER, push rod cover - lower (2)	48 to 65 — FL, FLH
	40	18017-48	INSERT, valve seat (2)	48 to 65 — FL, FLH
	41	18071-48	INTAKE VALVE	48 to 65 — FL, FLH
	42	18082-60	EXHAUST VALVE (spec'd) — 0.0005 O.D. (cast iron) (2)	52 to 65 — FL, FLH
		18065-80	EXHAUST VALVE — std. (mild steel)	48 to 65 — FL, FLH
		18029-90	EXHAUST VALVE — std. (aluminum)	48 to 65 — FL, FLH
	43	18130-49	INTAKE VALVE	N/A 40 to 65 — FL, FLH
		18132-49	SEAL, rear intake valve	N/A 49 to 65 — FL, FLH
	44	19138-70A	VALVE GUIDE, in. & ex. — 0.0010 S.O.D. (cast iron) (2)	48 to 65 — FL, FLH
		19139-79A	VALVE GUIDE, in. & ex. — 0.0060 S.O.D. (cast iron) (2)	48 to 65 — FL, FLH
		19140-79A	VALVE GUIDE, in. & ex. — 0.0060 S.O.D. (cast iron) (2)	48 to 65 — FL, FLH
		19141-79A	VALVE GUIDE, in. & ex. — 0.0040 S.O.D. (cast iron) (2)	48 to 65 — FL, FLH
		19142-79A	VALVE GUIDE, in. & ex. — 0.0040 S.O.D. (cast iron) (2)	48 to 65 — FL, FLH
		19167-49	VALVE GUIDE, intake — 0.0040 S.O.D.	48 to 65 — FL, FLH
		19170-49	VALVE GUIDE, intake — 0.0080 S.O.D.	48 to 65 — FL, FLH
	45	18186-51	VALVE GUIDE, exhaust — 0.0005 S.O.D.	N/A 48 to 65 — FL, FLH
		18187-51	VALVE GUIDE, exhaust — 0.0040 S.O.D.	N/A 48 to 65 — FL, FLH
		18194-51	VALVE GUIDE, exhaust — 0.0060 S.O.D.	N/A 48 to 65 — FL, FLH

**CYLINDERS, ROCKER ARMS,
VALVES AND GASKETS ·
1965 & EARLIER
(REAR SHOWN)**

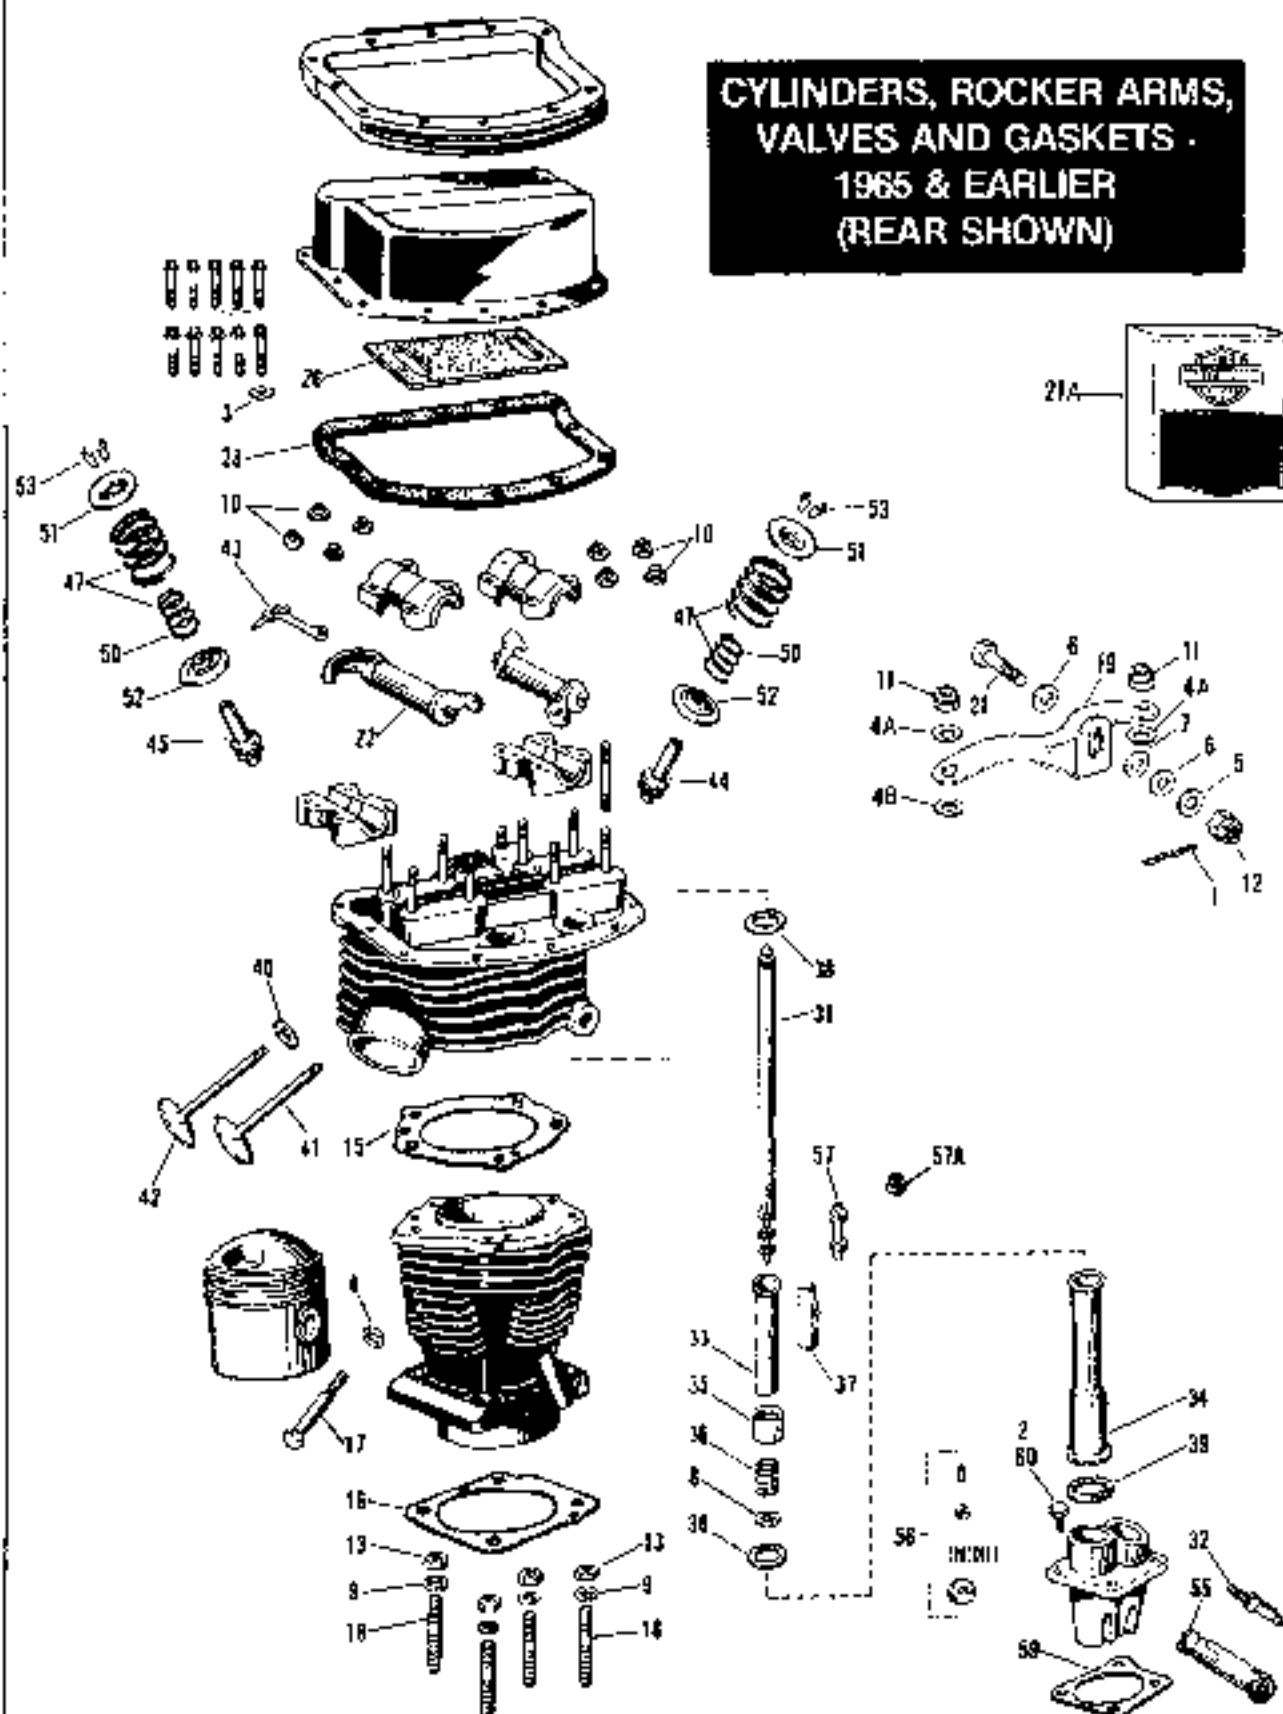

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	17	18206-57	VALVE SPRING KIT, includes inner & outer spring	55 to 65 — FLH
	18	18204-30A	VALVE SPRING, inner (2)	N/A 41 to 65 — FL
	19	18221-36	COLLAR, valve spring, upper (2)	41 to 65 — FL, FLH
	52	18222-48	COLLAR, valve spring, lower (2)	46 to 65 — FL, FLH
	53	18228-36	VALVE KEY (2)	41 to 65 — FL, FLH
	54	18527-53A	TAPPET, with roller (2)	65 to 66 — FL, FLH
	56	18554-29A	K.T., tappet roller (2)	41 to 65 — FL, FLH
	57	18556-57	TAPPET ADJUSTING SCREW, with nut (2)	57 to 66 — FL, FLH
	57A	18573-38	NUT, tappet adjusting screw	57 to 65 — FL, FLH
	59	18633-488	GASKET, tappet guide, rear cylinder	48 to 65 — FL, FLH
		18634-488	GASKET, tappet guide, front cylinder	48 to 65 — FL, FLH
	60	18660-53	SCREW, tappet guide (4)	Late 53 to 66 — FL, FLH

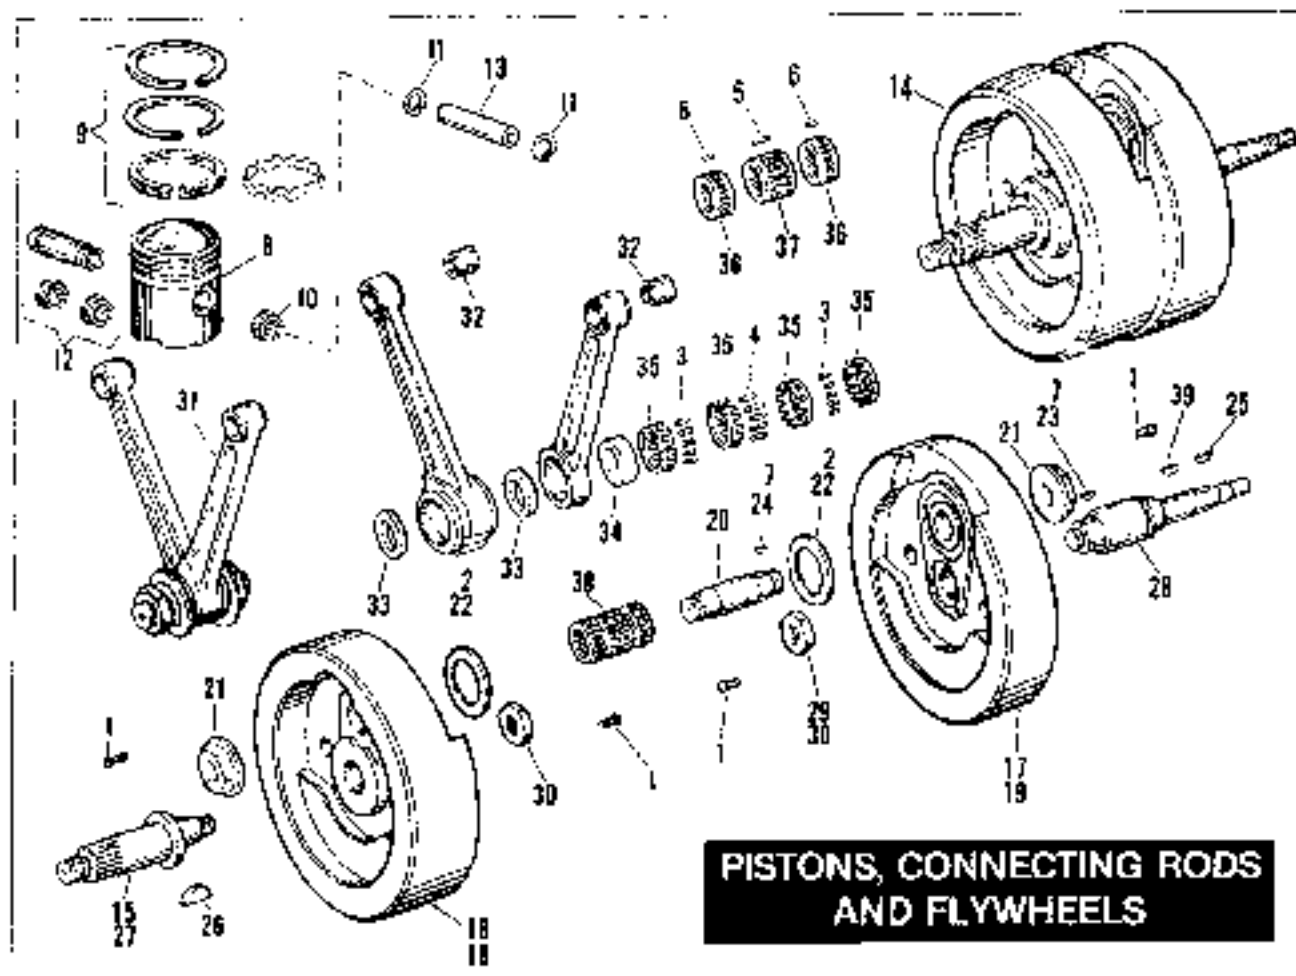


**PISTONS, CONNECTING RODS
AND FLYWHEELS**

PISTONS, CONNECTING RODS AND FLYWHEELS

A3-1

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2660	SCREW, No. 10-24 x 1/8 For drive pin (2)	48 to Early '78 - FL, FLH, FLH 80
	2	8505	WASHER, flywheel - 1/2" (2)	Late '69 to '78 - FL, FLH, FLH 80 Classic
	3	9101A	ROLLER, crank pin - 3.186 x 0.329 - std. (36)	51 to '72 - FL, FLH
		9102A	ROLLER, crank pin - 0.0002 O.S. (36)	51 to '72 - FL, FLH
		9103A	ROLLER, crank pin - 0.0004 O.S. (36)	51 to '72 - FL, FLH
		9104A	ROLLER, crank pin - 0.0006 O.S. (36)	51 to '72 - FL, FLH
		9105A	ROLLER, crank pin - 0.0008 O.S. (36)	N/A 51 to '72 - FL, FLH
		9106A	ROLLER, crank pin - 0.0010 O.S. (36)	51 to '72 - FL, FLH
		9107A	ROLLER, crank pin - 0.0012 O.S. (36)	51 to '72 - FL, FLH
	4	9171A	ROLLER, crank pin - 3.186 x 0.662 - std. (18)	N/A 51 to '72 - FL, FLH
		9172A	ROLLER, crank pin - 0.0002 O.S. (18)	51 to '72 - FL, FLH
		9173A	ROLLER, crank pin - 0.0004 O.S. (18)	N/A 51 to '72 - FL, FLH
		9174A	ROLLER, crank pin - 0.0006 O.S. (18)	51 to '72 - FL, FLH
		9175A	ROLLER, crank pin - 0.0008 O.S. (18)	N/A 51 to '72 - FL, FLH
		9176A	ROLLER, crank pin - 0.0010 O.S. (18)	N/A 51 to '72 - FL, FLH
		9177A	ROLLER, crank pin - 0.0012 O.S. (18)	N/A 51 to '72 - FL, FLH
	5	9180	ROLLER, crank pin - 0.0002 O.S. (17)	73 to '78 - FL, FLH, FLH 80 Classic
		9181	ROLLER, crank pin - 0.0004 O.S. (17)	73 to '78 - FL, FLH, FLH 80 Classic
		9182	ROLLER, crank pin - 0.0006 O.S. (17)	73 to '78 - FL, FLH, FLH 80 Classic
		9183	ROLLER, crank pin - 0.0008 O.S. (17)	73 to '78 - FL, FLH, FLH 80 Classic
		9184	ROLLER, crank pin - 0.0010 O.S. (17)	73 to '78 - FL, FLH, FLH 80 Classic
		9185	ROLLER, crank pin - 0.0012 O.S. (17)	73 to '78 - FL, FLH, FLH 80 Classic
		9186	ROLLER, crank pin - standard (17)	73 to '78 - FL, FLH, FLH 80 Classic

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	6	9441A	ROLLER crank pin - std (34)	73 to * - FL, FLH, FLH-80, Classic
		9442A	ROLLER crank pin - 0.0002 O.S. (34)	73 to * - FL, FLH, FLH-80, Classic
		9443A	ROLLER crank pin - 0.0004 O.S. (34)	73 to * - FL, FLH, FLH-80, Classic
		9444A	ROLLER crank pin - 0.0006 O.S. (34)	73 to * - FL, FLH, FLH-80, Classic
		9445A	ROLLER crank pin - 0.0008 O.S. (34)	73 to * - FL, FLH, FLH-80, Classic
		9446A	ROLLER crank pin - 0.0010 O.S. (34)	73 to * - FL, FLH, FLH-80, Classic
		9450A	ROLLER crank pin - 0.0012 O.S. (34)	73 to * - FL, FLH, FLH-80, Classic
	7	1121B	KEY, crank pin end gearshift (2)	Late 81 to * - FLH-80, Classic
	8	2149A-83	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.000 O.S.	81 to * - FLH-80, Classic
		21551-80A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.01 O.S.	81 to * - FLH-80, Classic
		21552-80A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.02 O.S.	81 to * - FLH-80, Classic
		21553-80A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.03 O.S.	81 to * - FLH-80, Classic
		22101-53C	PISTON, RINGS, PIN & LOCK RING ASSY. - std	53 to 73 - FL
		22101-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - std	74 to 80 - FL
		22103-53C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.01 O.S.	N/A 53 to 73 - FL
		22103-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.01 O.S.	N/A 74 to 80 - FL
		22104-53C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.02 O.S.	N/A 53 to 73 - FL
		22104-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.02 O.S.	N/A 74 to 80 - FL
		22105-53C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.03 O.S.	53 to 73 - FL
		22105-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.03 O.S.	N/A 74 to 80 - FL
		22106-53C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.04 O.S.	53 to 73 - FL
		22106-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.04 O.S.	N/A 74 to 80 - FL
		22107-53C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.05 O.S.	N/A 53 to 73 - FL
		22107-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.05 O.S.	N/A 74 to 80 - FL
		22108-53C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.06 O.S.	N/A 53 to 73 - FL
		22108-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.06 O.S.	74 to 80 - FL
		22109-53C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.07 O.S.	N/A 53 to 73 - FL
		22109-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.07 O.S.	N/A 74 to 80 - FL
		22111-53B	PISTON, RINGS, PIN & LOCK RING ASSY. - std	N/A 53 to 73 - FLH
		22111-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - std	74 to 80 - FLH
		22113-55C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.01 O.S.	55 to 73 - FLH
		22113-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.01 O.S.	N/A 74 to 80 - FLH
		22114-55C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.02 O.S.	55 to 73 - FLH
		22114-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.02 O.S.	74 to 80 - FLH
		22115-55C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.03 O.S.	55 to 73 - FLH
		22115-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.03 O.S.	N/A 74 to 80 - FLH
		22116-55C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.04 O.S.	N/A 55 to 73 - FLH
		22116-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.04 O.S.	N/A 74 to 80 - FLH
		22117-55C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.05 O.S.	N/A 55 to 73 - FLH
		22117-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.05 O.S.	N/A 74 to 80 - FLH
		22118-55C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.06 O.S.	N/A 55 to 73 - FLH
		22118-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.06 O.S.	N/A 74 to 80 - FLH
		22119-55C	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.07 O.S.	N/A 55 to 73 - FLH
		22119-74A	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.07 O.S.	74 to 80 - FLH
		22121-78	PISTON, RINGS, PIN & LOCK RING ASSY. - std	76 to 80 - FLH-80, Classic
		22122-78	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.01 O.S.	78 to 80 - FLH-80, Classic
		22124-78	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.02 O.S.	78 to 80 - FLH-80, Classic
		22125-78	PISTON, RINGS, PIN & LOCK RING ASSY. - 0.03 O.S.	78 to 80 - FLH-80, Classic
	9	22325-55B	PISTON RING SET - std	55 to 83 - FLH; 65 to 80 - FL
		22327-55B	PISTON RING SET - 0.01 O.S.	55 to 83 - FLH; 65 to 80 - FL
		22328-55B	PISTON RING SET - 0.02 O.S.	55 to 83 - FLH; 65 to 80 - FL
		22329-55B	PISTON RING SET - 0.03 O.S.	55 to 83 - FLH; 65 to 80 - FL
		22330-55B	PISTON RING SET - 0.04 O.S.	55 to 83 - FLH; 65 to 80 - FL
		22331-55B	PISTON RING SET - 0.05 O.S.	55 to 83 - FLH; 65 to 80 - FL
		22334-78B	PISTON RING SET - std (0.06 O.S. - FL, FLH)	55 to 83 - FLH; 65 to * - FL, FLH-80, Classic
		22335-78B	PISTON RING SET - 0.07 O.S. (0.08 O.S. - FLH-80, Classic)	55 to 80 - FLH; 65 to Early 83 - FL, FLH-80, Classic

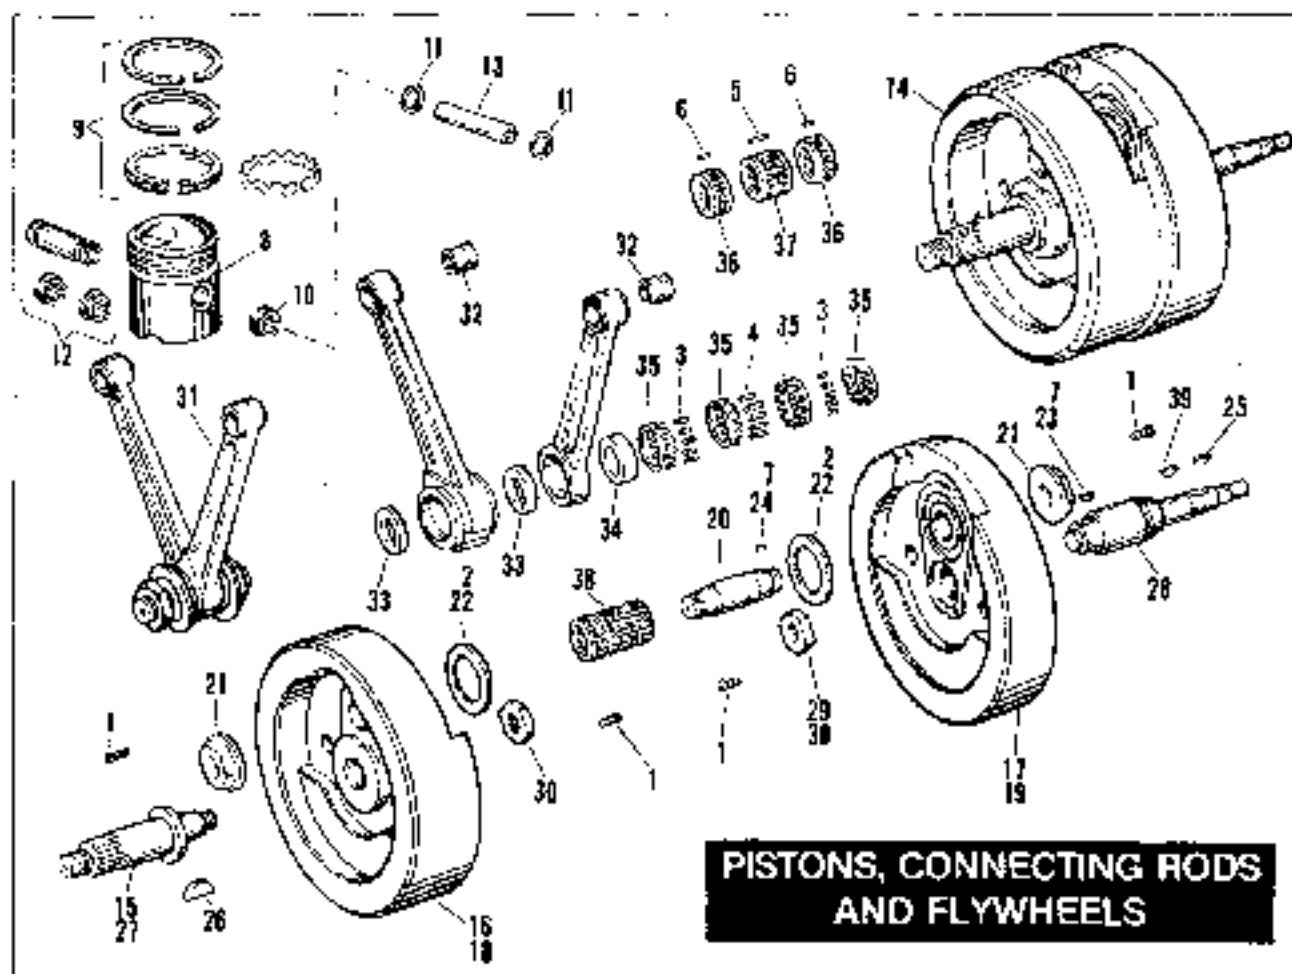


PISTONS, CONNECTING RODS AND FLYWHEELS (CONT'D)

A3-3

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
		21920-83	PISTON RING SET — std	Late 83 to * — FLH-80, Classic
		21921-83	PISTON RING SET — 0.005 O.S.	Late 83 to * — FLH-80, Classic
		21922-83	PISTON RING SET — 0.01 O.S.	Late 83 to * — FLH-80, Classic
		22336-78B	PISTON RING SET — 0.02 O.S.	78 to Early 83 — FLH-80, Classic
		21923-83	PISTON RING SET — 0.02 O.S.	Late 83 to * — FLH-80, Classic
		22337-78B	PISTON RING SET — 0.03 O.S.	78 to Early 83 — FLH-80, Classic
		21924-83	PISTON RING SET — 0.03 O.S.	Late 83 to * — FLH-80, Classic
5		22355-52	PISTON RING SET — std.	N/A 53 to 64 — FL
		22356-53	PISTON RING SET — 0.02 O.S.	N/A 53 to 64 — FL
10		22591-32	LOCK RING, piston pin (2)	N/A 41 to 72 — FL, FLH
11		22592-52	LOCK RING, piston pin (2)	73 to Early 77 — FL, FLH
		22598-78	LOCK RING, piston pin (2)	Late 77 to Early 83 — FL, FLH, FLH-80, Classic
		22599-83	LOCK RING, piston pin (2)	Late 83 to * — FLH-80
12		22735-32	PISTON PIN, with lock rings — std	N/A 41 to 72 — FL, FLH
13		22750-73A	PISTON PIN — std	73 to 82 — FL, FLH, FLH-80, Classic
		22762-73	PISTON PIN — 0.004 O.S.	73 to Early 83 — FL, FLH, FLH-80, Classic
		22764-83	PISTON PIN — std	83 to * — FLH-80
14		20905-74	SET OF FLYWHEELS AND SHAFTS with rods	74 to 83 — FL, FLH
		20906-78F	SET OF FLYWHEELS AND SHAFTS with rods	78 to * — FLH-80, Classic
15		23900-80	SPROCKET SHAFT	Late 81 to * — FLH-80, Classic
16		23919-72	FLYWHEEL, cr	N/A 72 to 83 — FL, FLH

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	17	23822-78	FLYWHEEL, right	78 to Early 81 - FL-80, Classic
		23822-80	FLYWHEEL, right	Late 81 to Early 83 - FLH-80, Classic
	18	23824-78	FLYWHEEL, left	78 to Early 81 - FL-80, Classic
		23824-80A	FLYWHEEL, left	Late 81 to Early 83 - FLH-80, Classic
	19	23840-41A	FLYWHEEL, right	N/A 41 to 83 - FL, FLH
	20	23861-41	CRANK PIN	41 to Early 81 - FL, FLH, FLH-80, Classic
		23861-80A	CRANK PIN	Late 81 to * - FLH-80, Classic
	21	23866-54A	NUIT, crank pin (2)	54 to Early 81 - FL, FLH, FLH-80, Classic
		23866-80	NUIT, crank pin (2)	Late 81 to Early 83 - FLH-80, Classic
		23866-83	NUIT, crank pin (2)	Late 83 to * - FLH-80
	22	23975-41	WASHER, flywheel (2)	41 to Early 70 - FL, FLH
	23	23985-12	KEY, gear shaft	41 to Early 81 - FL, FLH, FLH-80, Classic
	24	23985-18	KEY, crank pin	41 to Early 81 - FL, FLH, FLH-80, Classic
	25	23985-54	KEY, gear shaft pinion (2)	54 to Early 75
	26	23985-55	KEY, sprocket shaft	N/A 56 to 71 - FL, FLH
	27	24001-65	SPROCKET SHAFT	65 to 69 - FL, FLH
		24001-70	SPROCKET SHAFT	N/A 70 & 71 - FL, FLH
		24001-72	SPROCKET SHAFT	72 to Early 81 - FL, FLH, FLH-80, Classic
	28	24006-58	GEAR SHAFT	N/A 58 to 72 - FL, FLH
		24006-73	GEAR SHAFT	73 to Early 81 - FL, FLH, FLH-80, Classic
		24006-80	GEAR SHAFT	Late 81 to Early 83 - FLH-80, Classic
		24006-83	GEAR SHAFT	Late 83 to * - FLH-80
	29	24016-60	NUIT, gear shaft	Late 81 to * - FLH-80, Classic
	30	24017-72	NUIT, sprocket shaft	72 to Early 81 - FL, FLH, FLH-80, Classic
		24017-80	NUIT, sprocket shaft	Late 81 to * - FLH-80, Classic
		24023-36	NUIT, gear and sprocket shafts (2 - 41 to 71)	41 to Early 81 - FL, FLH, FLH-80, Classic
	31	24281-41A	SET OF CONN. RODS WITH BEARINGS & CRANK PIN	41 to 72 - FL, FLH
		24281-74A	SET OF CONN. RODS WITH BEARINGS & CRANK PIN	74 to Early 81 - FL, FLH, FLH-80, Classic
		24281-80	SET OF CONN. RODS WITH BEARINGS & CRANK PIN	Late 81 to Early 83 - FLH-80, Classic
		24281-83	SET OF CONN. RODS WITH BEARINGS & CRANK PIN	Late 83 to * - FLH-80
	32	24334-36	BUSHING, piston pin - 0.0020 S. O.D.	41 to * - FL, FLH, FLH-80, Classic
		24335-36	BUSHING, piston pin - 0.0100 S. O.D. (2)	41 to * - FL, FLH, FLH-80, Classic
	33	24345-36A	BUSHING, rear connecting rod - lower (2)	41 to * - FL, FLH, FLH-80, Classic
	34	24356-36A	BUSHING, front connecting rod - lower	41 to * - FL, FLH, FLH-80, Classic
	35	24366-51	RETAINER, crank pin roller (4)	N/A 51 to 72 - FL, FLH
	36	24366-71	RETAINER, crank pin roller - rear (2)	72 to * - FL, FLH, FLH-80, Classic
	37	24367-71	RETAINER, crank pin roller - front (2)	72 to * - FL, FLH, FLH-80, Classic
	38	24381-40B	SET OF ROLLERS AND RETAINERS - side	41 to * - FL, FLH, FLH-80, Classic
		24387-40B	SET OF ROLLERS AND RETAINERS - 0.0004 O.S.	41 to * - FL, FLH, FLH-80, Classic
		24388-40B	SET OF ROLLERS AND RETAINERS - 0.0006 O.S.	41 to * - FL, FLH, FLH-80, Classic
		24389-40B	SET OF ROLLERS AND RETAINERS - 0.0008 O.S.	41 to * - FL, FLH, FLH-80, Classic
		24390-40B	SET OF ROLLERS AND RETAINERS - 0.0010 O.S.	41 to * - FL, FLH, FLH-80, Classic
		24391-40B	SET OF ROLLERS AND RETAINERS - 0.0012 O.S.	41 to * - FL, FLH, FLH-80, Classic
	39	26348-15	KEY, gear shaft pinion	Late 75 to * - FL, FLH, FLH-80, Classic


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	241	LOWER PLATE on pump mounting (2)	N/A 41 to 73 — FL, FLH
	2	534	COTTER PIN, 3/32 x 5/16 (4)	41 to 66 — FL, FLH
	3	700	DRAIN PLUG	41 to 70 — FL, FLH
	4	704	FLUSH fitting hole	41 to 69 — FL, FLH
		720	FLUSH fitting hole	70 to 77 — FL, FLH, FLH-80, Classic
	5	723	FLUSH on pump vent hole — use with 24019-730 & 24524	70 to 80 — FL, FLH, FLH-80, Classic
	6	3427	BOLT, 5/16-18 x 3-1/2 hex. hd. (2)	79 to 81 — FL, FLH, FLH-80, Classic
	7	3428	BOLT, 5/16-24 x 5-1/2 hex. hd. (3, 5 — later 81)	79 to 81 — FL, FLH, FLH-80, Classic
	8	2430	BOLT, 5/16-24 x 5 hex. hd.	79 to 81 — FL, FLH, FLH-80, Classic
	9	3504	BOLT, 5/8-8 hex. hd. (2)	92 to 94 — FLH-80, Classic
	10	3505	STUD, 5/16-24 x 5 3/16	82 & 92 — FLH-80, Classic
	11	3506	STUD, 5/16-24 x 5-3/4 (2; 3 — 84 & later)	92 to 94 — FLH-80, Classic
	12	3974HW	BOLT, 5/16-24 x 3/4 hex. hd. (2)	41 to Early 81 — FL, FLH, FLH-80, Classic
	13	4401W	BOLT, 3/8-24 x 2-3/4 hex. hd. (2)	73 to 74 — FL, FLH, FLH-80, Classic
	14	4472W	BOLT, 3/8-16 x 2-1/4 hex. hd. (2)	41 to 78 — FL, FLH, FLH-80, Classic
	15	4435W	BOLT, 3/8-24 x 3-1/2 hex. hd. (2)	41 to 81 — FL, FLH, FLH-80, Classic
	16	4806	BOLT, 5/16-24 x 1/2 hex. hd. (3)	N/A 76 to 78 — FL, FLH, FLH-80
	17	5019	WASHER, 11/32 x 11/16 x 1/16 (14)	late 83 to 84 — FLH-80
	18	5400H3	WASHER, 3/8 x 13/16 x 1/16 (4)	83 to 84 — FL, FLH, FLH-80, Classic
	19	5701	WASHER, 3/8 x 13/16 x 1/16 (2)	41 to 73 — FL, FLH
	20	5702	WASHER, 5/16 x 11/16 x 1/16 (10; 14 — 80 & later)	79 to Early 81 — FL, FLH, FLH-80, Classic
	21	5774	WASHER, 3/8 x 5/8 x 1/16 (2)	late 74 to 78 — FL, FLH, FLH-80, Classic
	22	7041	LOCKWASHER, 5/16 (2)	41 to Early 81 — FL, FLH, FLH-80, Classic
	23	7753	NUT, 5/16-24 x 1-1/4 x 1-3/8 hex. (6; 8 — 82 & later)	41 to Early 81 — FL, FLH, FLH-80, Classic
				82 to 84 — FLH-80, Classic
	24	7775	LOCKNUT, 3/8-24 x 7/16 x 5/16 hex. (4)	67 to 77 — FL, FLH, FLH-80, Classic
		7800	NUT, 3/8-24 x 1-3/32 x 9/16 hex. (4)	N/A 41 to 66 — FL, FLH
	25	9028	BEARING, on crankcase (inner)	69 to 71 — FL, FLH, FLH-80, Classic
		9099	BEARING, on crankcase (outer)	55 to 68 — FL, FLH
	26	9120	SHIM, bearing assembly, 0.0525-.0515	69 to 71 — FLH-80, Classic
		9121	SHIM, bearing assembly, 0.0515-.0505	69 to 71 — FLH-80, Classic
		9122	SHIM, bearing assembly, 0.0505-.0495	69 to 71 — FLH-80, Classic
		9123	SHIM, bearing assembly, 0.0495-.0485	69 to 71 — FLH-80, Classic
		9124	SHIM, bearing assembly, 0.1005-.0995	69 to 71 — FLH-80, Classic
		9125	SHIM, bearing assembly, 0.1025-.1015	69 to 71 — FLH-80, Classic
		9126	SHIM, bearing assembly, 0.1045-.1035	69 to 71 — FLH-80, Classic
		9127	SHIM, bearing assembly, 0.1065-.1055	69 to 71 — FLH-80, Classic
		9128	SHIM, bearing assembly, 0.1085-.1075	69 to 71 — FLH-80, Classic
		9129	SHIM, bearing assembly, 0.1105-.1095	69 to 71 — FLH-80, Classic
		9130	SHIM, bearing assembly, 0.1125-.1115	69 to 71 — FLH-80, Classic
		9131	SHIM, bearing assembly, 0.1145-.1135	69 to 71 — FLH-80, Classic
		9132	SHIM, bearing assembly, 0.1165-.1155	69 to 71 — FLH-80, Classic
		9133	SHIM, bearing assembly, 0.1185-.1175	69 to 71 — FLH-80, Classic
		9134	SHIM, bearing assembly, 0.1205-.1195	69 to 71 — FLH-80, Classic
	27	9220A	ROLLER, right bearing — 0.250 x 0.490 id. — std. (28)	58 to 61 — FL, FLH, FLH-80, Classic
		9219	ROLLER, right bearing — 0.0030 O.S. (28)	58 to 61 — FL, FLH, FLH-80, Classic
		9221A	ROLLER, right bearing — 0.0032 O.S. (28)	58 to 61 — FL, FLH, FLH-80, Classic
		9218	ROLLER, right bearing — 0.0030 O.S. (28)	58 to 61 — FL, FLH, FLH-80, Classic
		9222A	ROLLER, right bearing — 0.0094 O.S. (28)	58 to 61 — FL, FLH, FLH-80, Classic
		9217	ROLLER, right bearing — 0.0096 O.S. (28)	58 to 61 — FL, FLH, FLH-80, Classic
		9223A	ROLLER, right bearing — 0.0098 O.S. (28)	58 to 61 — FL, FLH, FLH-80, Classic
		9224A	ROLLER, right bearing — 0.0099 O.S. (28)	58 to 61 — FL, FLH, FLH-80, Classic
		9225A	ROLLER, right bearing — 0.0100 O.S. (28)	58 to 61 — FL, FLH, FLH-80, Classic
		9421	DEARING ROLLER, 5/16 x 0.600 id. — std. (10)	54 to 57 — FL, FLH
	28	9379	CLIP, on cleaner from (headlet)	late 79 to Early 81 — FL, FLH, FLH-80, Classic
	29	11007	BEARING, 8 MIS, right bearing	58 to 61 — FL, FLH, FLH-80, Classic
	30	11150	SNAP RING, bearing	late 83 to 84 — FLH-80
	31	12075B	OIL SEAL	70 to 71 — FL, FLH, FLH-80, Classic
	32	20741-55	SHIM, sprocket shaft bearing — 0.003	N/A 54 to 68 — FL, FLH, FLH-80, Classic
	33	24002-70	SPACER, sprocket shaft	79 to 81 — FL, FLH, FLH-80, Classic
	34	24029-55	SPACER, sprocket shaft — 0.330 inch	55 to 64 — FL, FLH

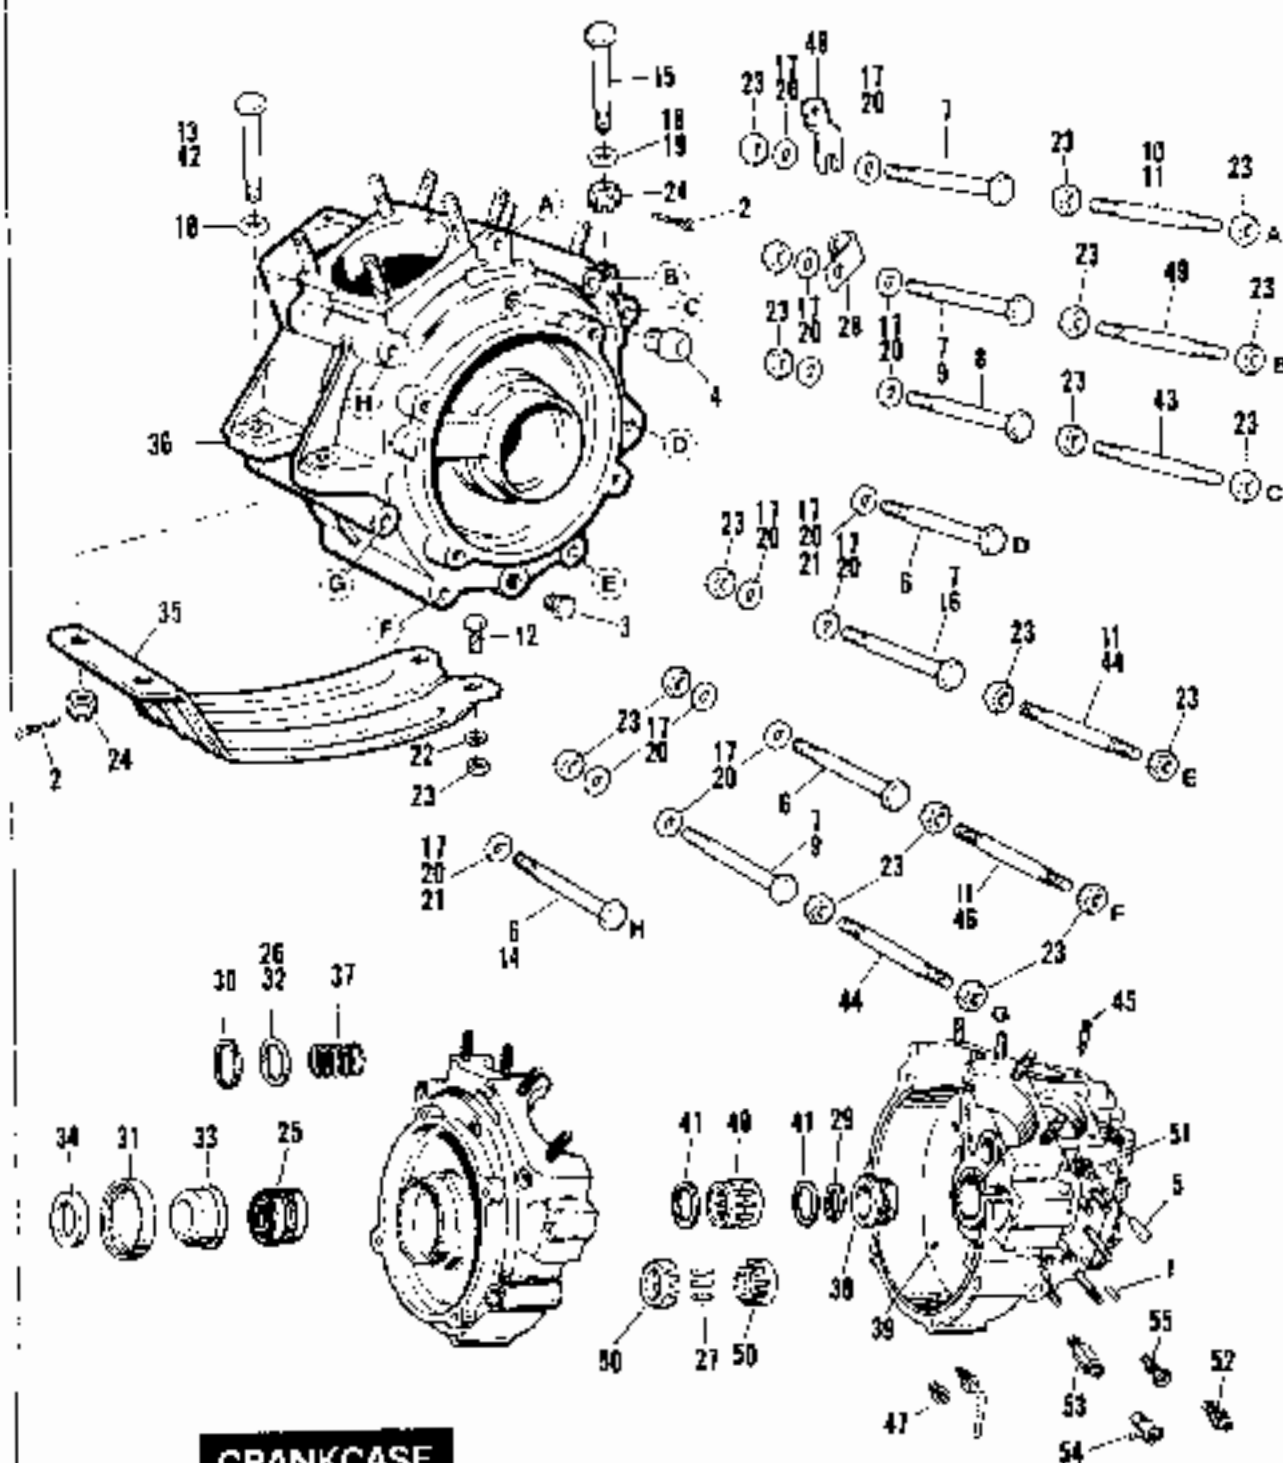

CRANKCASE

ALSO SEE NEXT ILLUSTRATION


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	34	24032-70	SPACER, sprocket shaft - 0.051 inch	70 to * - FL, FLH, FLH-80, Classic
		24033-70	SPACER, sprocket shaft - 0.091 inch	70 to * - FL, FLH, FLH-80, Classic
		24034-70	SPACER, sprocket shaft - 0.121 inch	70 to * - FL, FLH, FLH-80, Classic
		24035-70	SPACER, sprocket shaft - 0.161 inch	70 to * - FL, FLH, FLH-80, Classic
		24036-70	SPACER, sprocket shaft - 0.181 inch	70 to * - FL, FLH, FLH-80, Classic
		24037-70	SPACER, sprocket shaft - 0.211 inch	70 to * - FL, FLH, FLH-80, Classic
	35	24490-30	CRANKCASE GILARD	41 to Early 81 - FL, FLH, FLH-80, Classic
	35	24510-05A	SET OF CRANKCASES	N/A 66 to 69 - FL, FLH
		24519-70	SET OF CRANKCASES	N/A 70 to 72 - FL, FLH
		24519-73F	SET OF CRANKCASES	73 to * - FL, FLH, FLH-80
		24524-77F	SET OF CRANKCASES (pilot)	N/A 79 to 82 - Classic
	37	24523-89	-FL COIL INSERT (4)	94 to * - FLH-90
	38	24599-58A	BUSHING, right crank case - std	58 to * - FL, FLH, FLH-80, Classic
		24600-58A	BUSHING, right crank case - 0.0020 U.S.	58 to * - FL, FLH, FLH-80, Classic
		24601-58A	BUSHING, right crank case - 0.0050 U.S.	58 to * - FL, FLH, FLH-80, Classic
	39	24606-58	SCREW, crankcase gear side bushing (2)	N/A 54 to 76 - FL, FLH
	40	24650-58	RIGHT BEARING - std	58 to 81 - FL, FLH, FLH-80, Classic
		24650-81	RIGHT BEARING - 0.0001 U.S.	58 to * - FL, FLH, FLH-80, Classic
		24651-58	RIGHT BEARING - 0.0002 U.S.	58 to * - FL, FLH, FLH-80, Classic
		24649-81	RIGHT BEARING - 0.0003 U.S.	58 to * - FL, FLH, FLH-80, Classic
		24652-58	RIGHT BEARING - 0.0004 U.S.	58 to * - FL, FLH, FLH-80, Classic
		24648-81	RIGHT BEARING - 0.0005 U.S.	58 to * - FL, FLH, FLH-80, Classic
		24653-58	RIGHT BEARING - 0.0006 U.S.	58 to * - FL, FLH, FLH-80, Classic
		24654-58	RIGHT BEARING - 0.0008 U.S.	58 to * - FL, FLH, FLH-80, Classic
		24655-50	RIGHT BEARING - 0.0010 U.S.	58 to * - FL, FLH, FLH-80, Classic
	41	24637-58	WASHER, right bearing (2)	58 to * - FL, FLH, FLH-80, Classic
	42	24791-38	SCREW, front engine mounting (2)	N/A 41 to 72 - FL, FLH
	43	24805-30	CRANKCASE STUD, 5/16-24 x 5	41 to 78 - FL, FLH, FLH-80
	44	24809-30	CRANKCASE STUD, 5/16 x 6 (3)	N/A 41 to 75 - FL, FLH
	45	24811-80	STUD, clutch bracket mounting clamp	N/A 66 to 69 - FL, FLH
	46	24815-40	CRANKCASE STUD, 1/4-20 x 5-27/32 (2)	48 to 78 - FL, FLH, FLH-80
	47	24918-52A	NUT, breather pipe	65 to 87 - FL, FLH
	48	25405-82	BRACKET, clamp	Late 62 to * - FLH-80, Classic
	49	26390-86	CRANKCASE STUD (2)	76 to 79 - FL, FLH, FLH-80, Classic
	50	43578-35	RETAINER, right roller bearing (2)	58 to * - FL, FLH, FLH-80, Classic
	51	63533-15	FITTING, vent pipe tubing	N/A 41 to 64 - FL, FLH
	52	63533-41	FITTING, vent hose	Late 66 to * - FL, FLH, FLH-80, Classic
	53	63533-85	FITTING, oil return line hose	65 - FL, FLH, 79 to * - FL, FLH, FLH-80, Classic
	54	63541-70	TIE, rear chain roller	70 to 79 - FL, FLH, FLH-80, Classic
	55	63546-52	FITTING, vent hose	65 & Early 66 - FL, FLH, Late 76 to 78 - FL, FLH, FLH-80

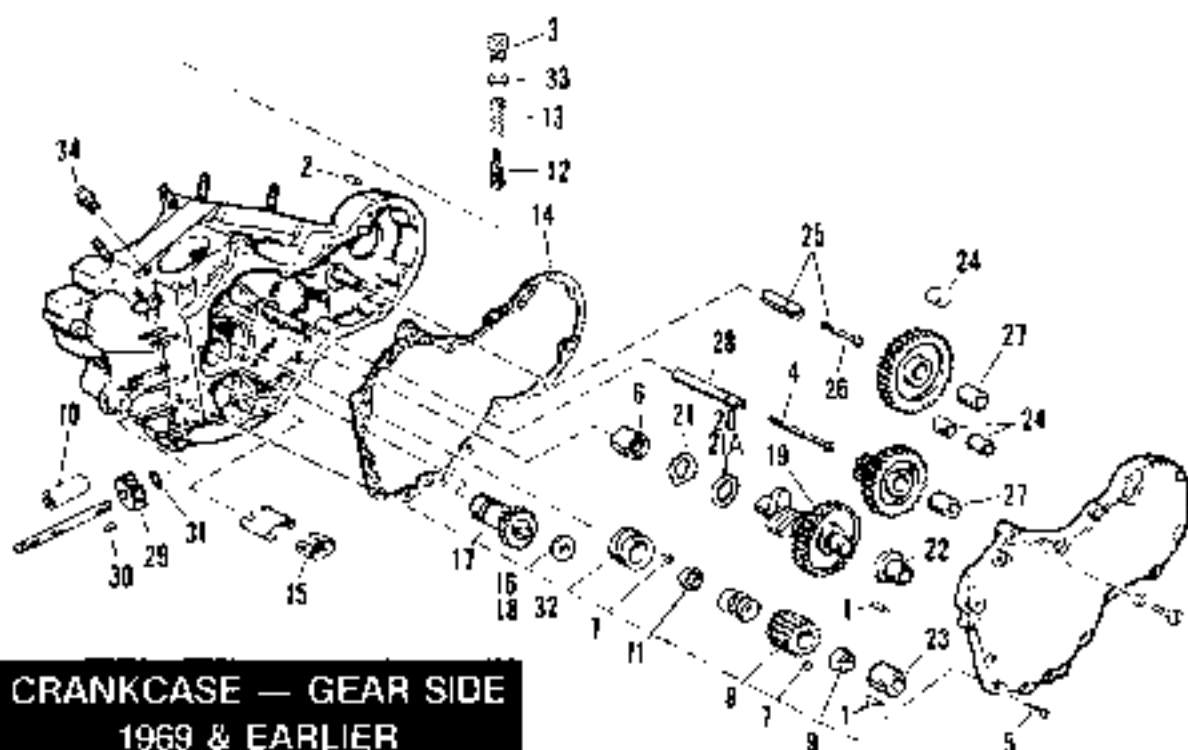

CRANKCASE — GEAR SIDE
1969 & EARLIER

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	215	COVER PLATE, 1/4 x 1-1/4 (2)	41 to 69 — FL, FLH
	2	378	COVER PLATE, gear cover (2)	55 to 69 — FL, FLH
	3	655	PLUG, oil screen	N/A 65 to 69 — FL, FLH
	4	1439	SCREW, left crank thread	N/A 65 to 69 to 69 — FL, FLH
	5	2041179	SCREW, 1/4-24 x 1-1/2 disk top (2)	41 to 69 — FL, FLH
	6	3938	NEEDLE BEAR NG, crankcase cam gear	58 to 69 — FL, FLH, FLH-80
	7	23996-54	KEY, gear shaft (2)	54 to 69 — FL, FLH
	8	24010-54	PISTON BEAR NG	54 to 69 — FL, FLH
	9	24023-54	KEY, gear shaft	54 to 69 — FL, FLH, FLH-80
	10	24641-36	BUSH NG, oil pump shaft	54 to 69 — FL, FLH, FLH-80
	11	24703-54	SPACER, gear shaft pinion	N/A 54 to 69 — FL, FLH, FLH-80
	12	24981-66	OIL SCREEN, crankcase	60 to 69 — FL, FLH
	13	24982-66	OIL SCREEN SPRING	N/A 66 to 69 — FL, FLH
	14	25225-36C	GASKET, gear cover	41 to 69 — FL, FLH
	15	25275-36	BREATHER SCREEN	N/A 41 to 69 — FL, FLH
	16	25313-50	THRUST WASHER, breather valve — 0.115 thick	50 to 69 — FL, FLH, FLH-80
	17	25313-72	BREATHER VALVE with gear	41 to 69 — FL, FLH
	18	25314-50	THRUST WASHER, breather valve — 0.120 thick	50 to 69 — FL, FLH, FLH-80
		25315-50	THRUST WASHER, breather valve — 0.125 thick	50 to 69 — FL, FLH, FLH-80
		25316-52	THRUST WASHER, breather valve — 0.130 thick	52 to 69 — FL, FLH, FLH-80
	19	25523-56	CAM GEAR (velocity)	56 to 69 — FLH
	20	25550-3E	THRUST WASHER, cam gear — 0.050 thick	41 to 69 — FL, FLH, FLH-80
	21	25550-57	LOCK WASHER, cam gear	58 to 69 — FL, FLH, FLH-80
	21A	25551-36	THRUST WASHER, cam gear — 0.055 thick	41 to 69 — FL, FLH, FLH-80
		25552-3E	THRUST WASHER, cam gear — 0.060 thick	41 to 69 — FL, FLH, FLH-80
		25553-3E	THRUST WASHER, cam gear — 0.065 thick	41 to 69 — FL, FLH, FLH-80
		25554-36	THRUST WASHER, cam gear — 0.070 thick	41 to 69 — FL, FLH, FLH-80
		25555-36	THRUST WASHER, cam gear — 0.075 thick	41 to 69 — FL, FLH, FLH-80
		25556-7H	THRUST WASHER, cam gear — 0.080 thick	41 to 69 — FL, FLH, FLH-80
		25557-7H	THRUST WASHER, cam gear — 0.085 thick	41 to 69 — FL, FLH, FLH-80
		25558-7H	THRUST WASHER, cam gear — 0.090 thick	41 to 69 — FL, FLH, FLH-80
		25559-7H	THRUST WASHER, cam gear — 0.095 thick	41 to 69 — FL, FLH, FLH-80
	22	25561-36	PLS-ING, gear cover	41 to 69 — FL, FLH
	23	25562-54	PLS-ING, gear cover pinion shaft	54 to 69 — FL, FLH
	24	25785-30A	PLS-ING, idler gear (2)	41 to 69 — FL, FLH
	25	25791-36	DRIVE GEAR, ST.D	N/A 41 to 69 — FL, FLH
	26	25794-36	SCREW, idler gear stud	N/A 41 to 69 — FL, FLH
	27	25830-36	SPACER, idler and circuit breaker gear (2)	N/A 41 to 69 — FL, FLH
	28	25856-36	STUD, circuit breaker drive gear	N/A 41 to 69 — FL, FLH
	29	26345-34	DRIVE GEAR, oil pump — 75T	41 to 69 — FL, FLH
	30	26346-35	KEY, oil pump gear	41 to 69 — FL, FLH, FLH-80
	31	26348-36	RETAINING RING, drive shaft	41 to 69 — FL, FLH
	32	26349-54	DRIVE GEAR, oil pump	N/A 54 to 69 — FL, FLH
	33	62702-52	GASKET, oil screen plug	65 to 69 — FL, FLH
	34	63525-57	PLATING, locker arm & line	65 to 69 — FL, FLH, FLH-80

CRANKCASE — GEAR SIDE **1970 & LATER**

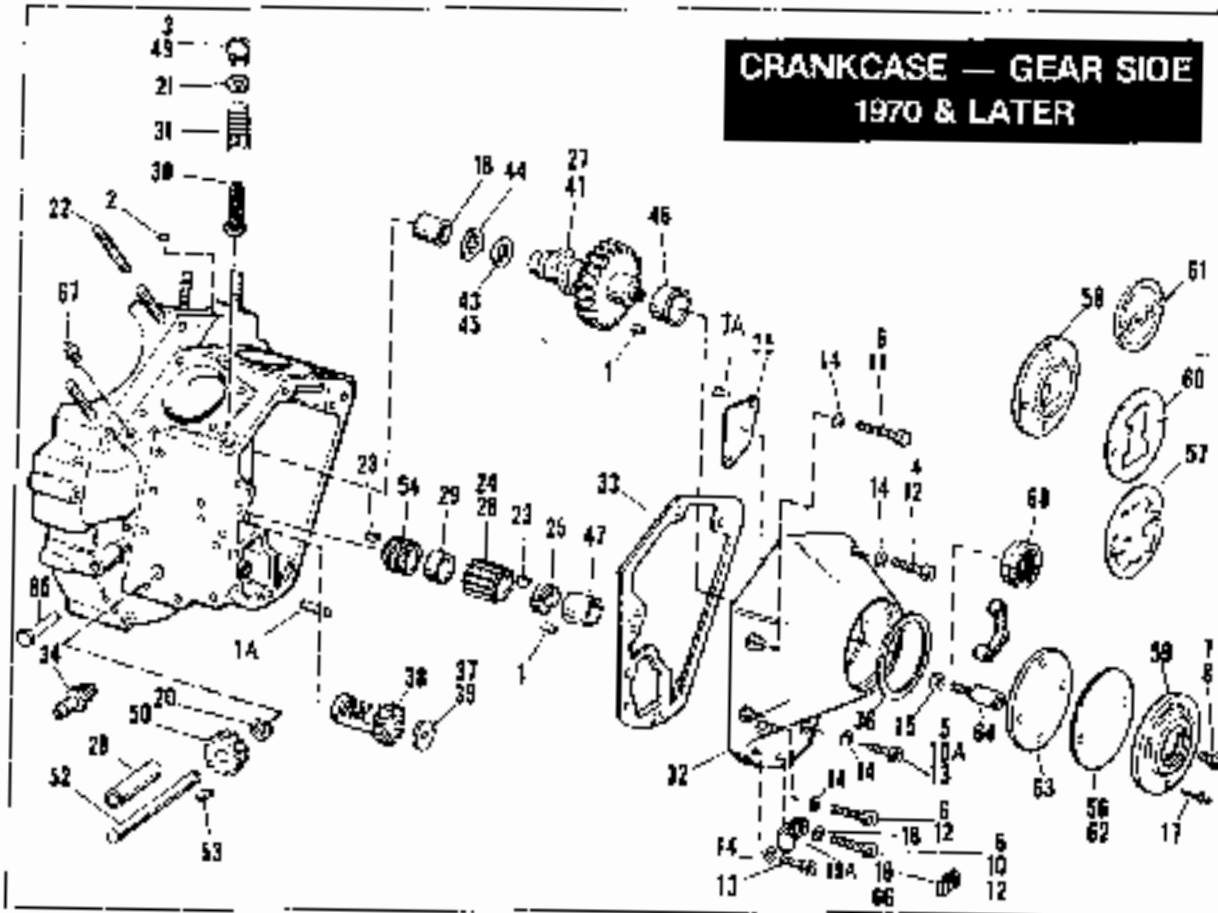

CRANKCASE — GEAR SIDE — 1970 & LATER

A4B-1


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	275	DOWEL PIN (2 — as required)	70 to * — FL, FLH, FLH-80, Classic
	1A	358	DOWEL PIN, (2)	70 to * — FL, FLH, FLH-80, Classic
	2	E53	PLUG, crankcase	70 to * — FL, FLH, FLH-80, Classic
	3	E57	PLUG, oil screen	70 to 80 — FL, FLH, FLH-80, Classic
	4	1201	SCREW, 1/4-20 x 1-1/4 Pozidriv II hd (3)	70 to Early 80 — FL, FLH, FLH-80, Classic
	5	1205	SCREW, 1/4-20 x 1 Pozidriv II hd (2)	70 to Early 80 — FL, FLH, FLH-80, Classic
	6	1209	SCREW, 1/4-20 x 1-3/4 Pozidriv II hd	N/A 70 to Early 80 — FL, FLH, FLH-80, Classic
	7	1601	SCREW, No. 8-32 x 1/2 disk, flat hd (2)	80 to * — FL, FLH, FLH-80, Classic
	7A	2511	SCREW, No. 10-24 x 1/2 self tapping pan hd (2)	Late 82 to * — FLH-80, Classic
	8	2E22	SCREW, No. 8-32 x 7/16 Pozidriv, rd (2)	72 to 79 — FL, FLH, FLH-80, Classic
		2E23	SCREW, No. 8-32 x 7/16 disk hd (2)	70 & 71 — FL, FLH
	10	2E20	SCREW, 1/4-20 x 1-1/4 hex socket hd (self locking)	Late 80 & Early 81 — FL, FLH, FLH-80, Classic
	10A	4740	SCREW, 1/4-20 x 1-1/4 knurled socket hd (2)	84 to * — FL-90
	11	4810	SCREW, 1/4-20 x 1-3/4 hex socket hd (w/locking patch)	Late 80 to * — FL, FLH, FLH-80, Classic
	12	4813	SCREW, 1/4-20 x 1-3/8 hex socket hd (w/locking patch) (2, 3-Late 81 & Later)	Late 80 to * — FL, FLH, FLH-80, Classic
	13	4814	SCREW, 1/4-20 x 1-1/8 hex socket hd (w/locking patch) (2)	Late 80 to 83 — FL, FLH, FLH-80, Classic
	14	E089	WASHER, 1/4 x 7/16 x 1/16 (5)	Late 80 to * — FL, FLH, FLH-80, Classic
	15	E132	WASHER, No. 8 x 7/16 x 3/64 (2)	70 to 80 — FL, FLH, FLH-80, Classic
		E134	WASHER, 12/64 x 7/16 x 1/64 (2)	83 to * — FLH-80
	16	E703	WASHER, 1/4 x 5/8 x 1/16	80 to * — FL, FLH, FLH-80, Classic
	17	8F99	POP RIVET, 5/32 x 3/8 x 5/16 dim hd (2)	80 to * — FL, FLH, FLH-80, Classic
	18	3058	NEEDLE BEARING, crankcase cam gear	70 to * — FL, FLH, FLH-80
	19	3965W	CLAMP, electronic ignition wire	80 & Early 81 — FL, FLH, FLH-80, Classic
	19A	1804E	CLAMP, electronic ignition wire	Late 81 to * — FLH-80, Classic

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	20	11102	RETAINING RING, oil pump drive shaft	70 to * — FL, FLH, FLH-80, Classic
	21	11105	O-RING	Late 70 to * — FL, FLH, FLH-80, Classic
	22	15837-70	STUD, 7/16-20 x 1 1/4 lg. (stl)	70 to * — FL, FLH, FLH-80, Classic
	23	23385-54	KEY, gear shaft (3/8 - Late 75 & 2 1/2)	70 to * — FL, FLH
	24	24010-54	PIVION GEAR	70 to Early 77 — FL, FLH
	25	24023-54	NUT, gear shaft	70 to * — FL, FLH, FLH-80, Classic
	26	24040-70	PIVION GEAR : 4751-56 pitch dia. (orange)	Late 77 to * — FL, FLH, FLH-80, Classic
		24041-70	PIVION GEAR : 4745-51 pitch dia. (white)	Late 77 to * — FL, FLH, FLH-80, Classic
		24042-70	PIVION GEAR : 4737-46 pitch dia. (yellow)	Late 77 to * — FL, FLH, FLH-80, Classic
		24043-70	PIVION GEAR : 4729-52 pitch dia. (red)	Late 77 to * — FL, FLH, FLH-80, Classic
		24044-70	PIVION GEAR : 4721-53 pitch dia. (blue)	Late 77 to * — FL, FLH, FLH-80, Classic
		24045-70	PIVION GEAR : 4715-52 pitch dia. (green)	Late 77 to * — FL, FLH, FLH-80, Classic
		24046-70	PIVION GEAR : 4710-55 pitch dia. (black)	Late 77 to Early 83 — FL, FLH, FLH-80, Classic
	27	24982-77A	CAM AND PIVION GEAR SET	70 to * — FL, FLH, FLH-80
	28	24541-35	BUSHING, oil pump shaft	70 to * — FL, FLH, FLH-80, Classic
	29	24703-54A	SPACER, gear shaft (common)	70 to * — FL, FLH, FLH-80, Classic
	30	24081-70	CLIP SCREEN	70 to * — FL, FLH, FLH-80, Classic
	31	24082-70	CLIP SCREEN SPRING	70 to * — FL, FLH, FLH-80, Classic
	32	25216-73B	GEAR COVER KIT	70 to * — FL, FLH, FLH-80, Classic
			Consists of besides index nos. 10A, 15 & 65:	
		25218-80A	GEAR COVER	
		25212-80	SPACER	
	33	25225-70B	GASKET, gear cover	70 to * — FL, FLH, FLH-80, Classic
	34	25280-78	FITTING, crankcase to air cleaner hose	Late 78 to 83 — FL, FLH, FLH-80, Classic
	35	25275-82	COVER, breather valve	Late 82 to * — FLH-80, Classic
	36	25281-82	SPACER, gear cover	70 to 73 — FLH-80
	37	25313-80	THRUST WASHER, breather valve — 0.115 thick	70 to Early 79 — FL, FLH, FLH-80, Classic
	38	25312-73	BREATHER VALVE, with gear	70 to Early 77 — FL, FLH
		25312-77B	BREATHER VALVE, with gear (plastic)	Late 77 to * — FL, FLH, FLH-80, Classic
	39	25314-80	THRUST WASHER, breather valve — 0.120 thick	70 to Early 79 — FL, FLH, FLH-80, Classic
		25315-80	THRUST WASHER, breather valve — 0.125 thick	70 to Early 79 — FL, FLH, FLH-80, Classic
		25316-82	THRUST WASHER, breather valve — 0.130 thick	70 to Early 79 — FL, FLH, FLH-80, Classic
		25320-79	THRUST WASHER, breather valve — 0.110 thick (steel)	Late 79 to Early 82 — FL, FLH, FLH-80, Classic
		25321-79	THRUST WASHER, breather valve — 0.115 thick (steel)	Late 79 to Early 82 — FL, FLH, FLH-80, Classic
		25322-79	THRUST WASHER, breather valve — 0.120 thick (steel)	Late 79 to Early 82 — FL, FLH, FLH-80, Classic
		25323-79	THRUST WASHER, breather valve — 0.125 thick (steel)	Late 79 to Early 82 — FL, FLH, FLH-80, Classic
		25325-79	THRUST WASHER, breather valve — 0.130 thick (steel)	Late 79 to Early 82 — FL, FLH, FLH-80, Classic
		25326-79	THRUST WASHER, breather valve — 0.135 thick (steel)	Late 79 to Early 82 — FL, FLH, FLH-80, Classic
		25327-79	THRUST WASHER, breather valve — 0.140 thick (steel)	Late 79 to Early 82 — FL, FLH, FLH-80, Classic
		25329-79	THRUST WASHER, breather valve — 0.145 thick (steel)	Late 79 to Early 82 — FL, FLH, FLH-80, Classic



NOTE: Order plastic washers only with plastic breather valve assemblies. Do not intermix steel and plastic parts.

25323-82	THRUST WASHER, breather valve — 0.120 thick (plastic)	Late 82 to * — FLH-80, Classic
25321-82	THRUST WASHER, breather valve — 0.115 thick (plastic)	Late 82 to * — FLH-80, Classic
25322-82	THRUST WASHER, breather valve — 0.120 thick (plastic)	Late 82 to * — FLH-80, Classic
25325-82	THRUST WASHER, breather valve — 0.130 thick (plastic)	Late 82 to * — FLH-80, Classic
25326-82	THRUST WASHER, breather valve — 0.135 thick (plastic)	Late 82 to * — FLH-80, Classic
25327-82	THRUST WASHER, breather valve — 0.140 thick (plastic)	Late 82 to * — FLH-80, Classic
25328-82	THRUST WASHER, breather valve — 0.145 thick (plastic)	Late 82 to * — FLH-80, Classic



CRANKCASE — GEAR SIDE 1970 & LATER

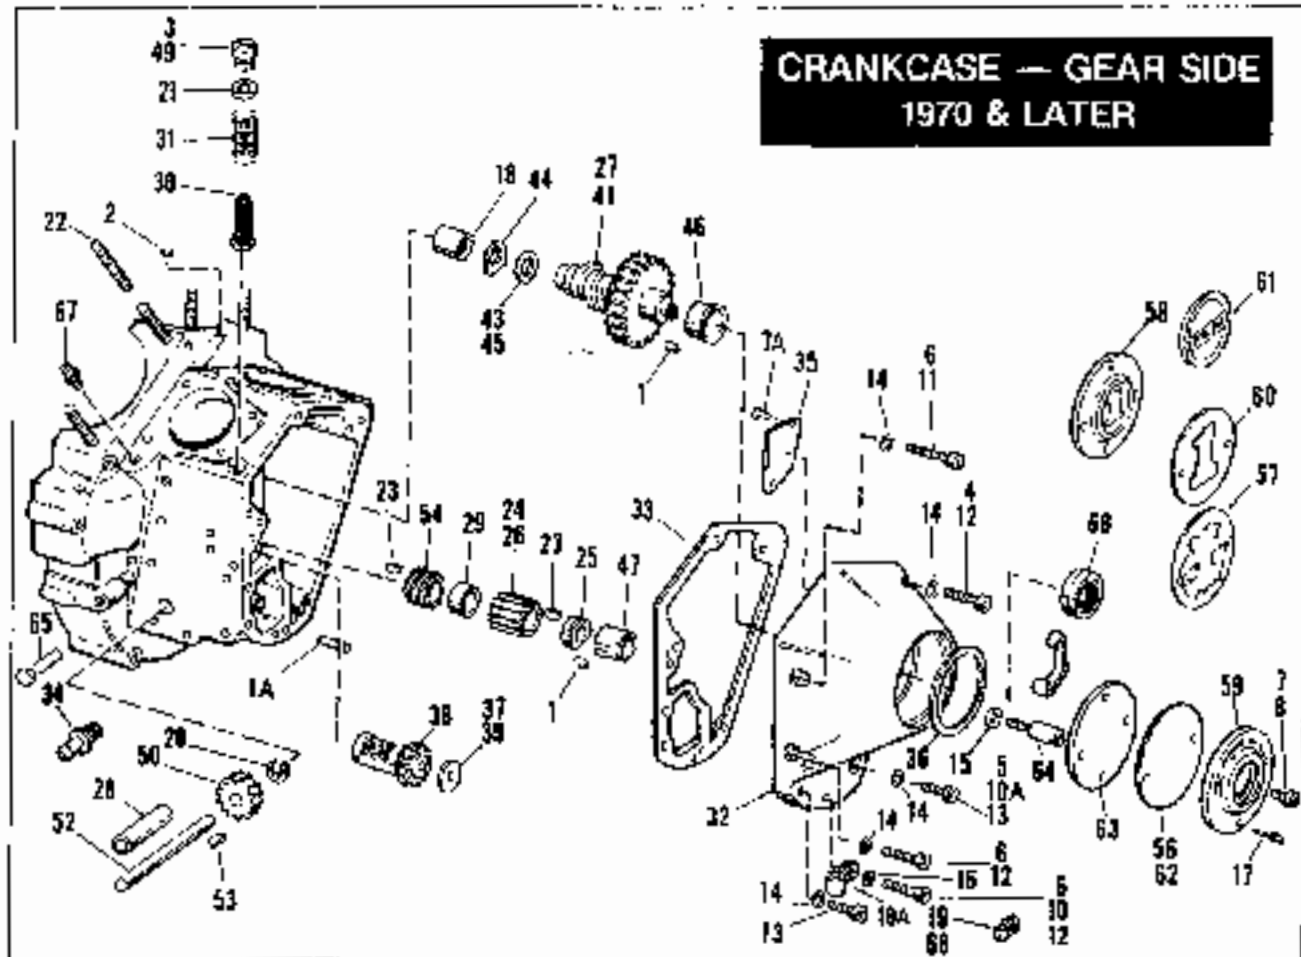


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	41	25523--70	CAM GEAR	70 to Early 77 — FLH
		25527--81A	CAM GEAR, 2 7324 — 2 7334 (white)	Late 77 to * — FL, FLH, FLH-80 Classic
		25528--81A	CAM GEAR, 2 7334 — 2 7344 (white)	Late 77 to * — FL, FLH, FLH-80 Classic
		25529--81A	CAM GEAR, 2 7344 — 2 7354 (yellow)	Late 77 to * — FL, FLH, FLH-80 Classic
		25530--81A	CAM GEAR, 2 7354 — 2 7364 (red)	Late 77 to * — FL, FLH, FLH-80 Classic
		25531--81A	CAM GEAR, 2 7364 — 2 7374 (blue)	Late 77 to * — FL, FLH, FLH-80 Classic
		25532--81A	CAM GEAR, 2 7374 — 2 7384 (green)	Late 77 to * — FL, FLH, FLH-80 Classic
		25534--81A	CAM GEAR, 2 7384 — 2 7394 (black)	Late 77 to * — FL, FLH, FLH-80 Classic
	43	25553--36	THRUST WASHER, cam gear — 0.05 thick	70 to * — FL, FLH, FLH-80 Classic
	44	25554--37	LOC WASHER, cam gear	70 to * — FL, FLH, FLH-80 Classic
	45	25555--36	THRUST WASHER, cam gear — 0.055 thick	70 to * — FL, FLH, FLH-80 Classic
		25556--36	THRUST WASHER, cam gear — 0.060 thick	70 to * — FL, FLH, FLH-80 Classic
		25557--36	THRUST WASHER, cam gear — 0.065 thick	70 to * — FL, FLH, FLH-80 Classic
		25558--36	THRUST WASHER, cam gear — 0.070 thick	70 to * — FL, FLH, FLH-80 Classic
		25559--36	THRUST WASHER, cam gear — 0.075 thick	70 to * — FL, FLH, FLH-80 Classic
		25560--79	THRUST WASHER, cam gear — 0.080 thick	70 to * — FL, FLH, FLH-80 Classic
		25561--79	THRUST WASHER, cam gear — 0.085 thick	70 to * — FL, FLH, FLH-80 Classic
		25562--79	THRUST WASHER, cam gear — 0.090 thick	70 to * — FL, FLH, FLH-80 Classic
		25563--79	THRUST WASHER, cam gear — 0.095 thick	70 to * — FL, FLH, FLH-80 Classic
	46	25581--70	BUS-ING, gear cover	70 to * — FL, FLH, FLH-80 Classic
	47	25582--54	BUS-ING, gear cover p/n on shaft	70 to Early 79 — FL, FLH
		25582--73	BUS-ING, gear cover p/n on shaft	Late 73 to * — FL, FLH, FLH-80 Classic
	49	25623--80	PLUG, oil screen	81 to * — FLH-80 Classic
	50	26345--39	DRIVE GEAR, oil pump — 25 T	70 to 72 — FL, FLH
		26345--73	DRIVE GEAR, oil pump — 24 T	73 to * — FL, FLH, FLH-80 Classic
	52	26346--70	DRIVE SHAFT, oil pump	70 to 79 — FL, FLH, FLH-80 Classic
	53	26348--15	KEY, oil pump gear (2-gear shaft 75 & later)	70 to * — FL, FLH, FLH-80 Classic
	54	26349--54	DRIVE GEAR, oil pump	N/A 70 to 72 — FL, FLH
		26349--73A	DRIVE GEAR, oil pump	73 to * — FL, FLH, FLH-80 Classic
	55	32504--80	INNER COVER, timer	80 to * — FL, FLH, FLH-80 Classic
	57	32508--77	TIMER COVER, EcC Eagle (accy.)	Late 77 to * — FL, FLH, FLH-80 Classic
	58	32511--78	TIMER COVER, "No. 1"	80 to 82 — FL, FLH, FLH-80 Classic
		32509--77	TIMER COVER, "No. 1"	Late 72 & 79 — FL, FLH, FLH-80 Classic
	59	32521--83	TIMER COVER	83 to * — FLH-80
	60	32513--77	TIMER COVER, "No. 1" (accy.)	N/A Late 77 to 75 — FL, FLH, FLH-80 Classic
	61	32584--70	LABEL, timer cover	N/A 70 to 79 — FL, FLH, FLH-80 Classic
	62	32588--70A	COVER, timer	N/A 70 to 79 — FL, FLH, FLH-80 Classic
	63	32591--70	SPASKEI, ignition timer cover	70 to 79 — FL, FLH, FLH-80 Classic
		32591--80	SPASKEI, ignition timer cover	80 to * — FL, FLH, FLH-80 Classic
	54	32601--76	STUD, ignition timer cover (2)	Late 72 to 79 — FL, FLH, FLH-80 Classic
		32606--82	STUD, ignition timer cover (2)	80 to * — FL, FLH, FLH-80 Classic
		32607--70	STUD, ignition timer cover (2)	N/A Early 70 — FL, FLH
		32608--70	STUD, ignition timer cover (2)	Late 70 to Early 72 — FL, FLH
	65	45635--48	PLUG, crankcase oil	Late 84 to * — FLH-80
	66	56639--52	CAMP, circuit breaker wire	70 to 79 — FL, FLH, FLH-80 Classic
	67	61626--57	FITTING, spark plug line	73 to * — FL, FLH, FLH-80 Classic
	68	63162--57	OIL SEAL	73 to * — FL, FLH, FLH-80 Classic

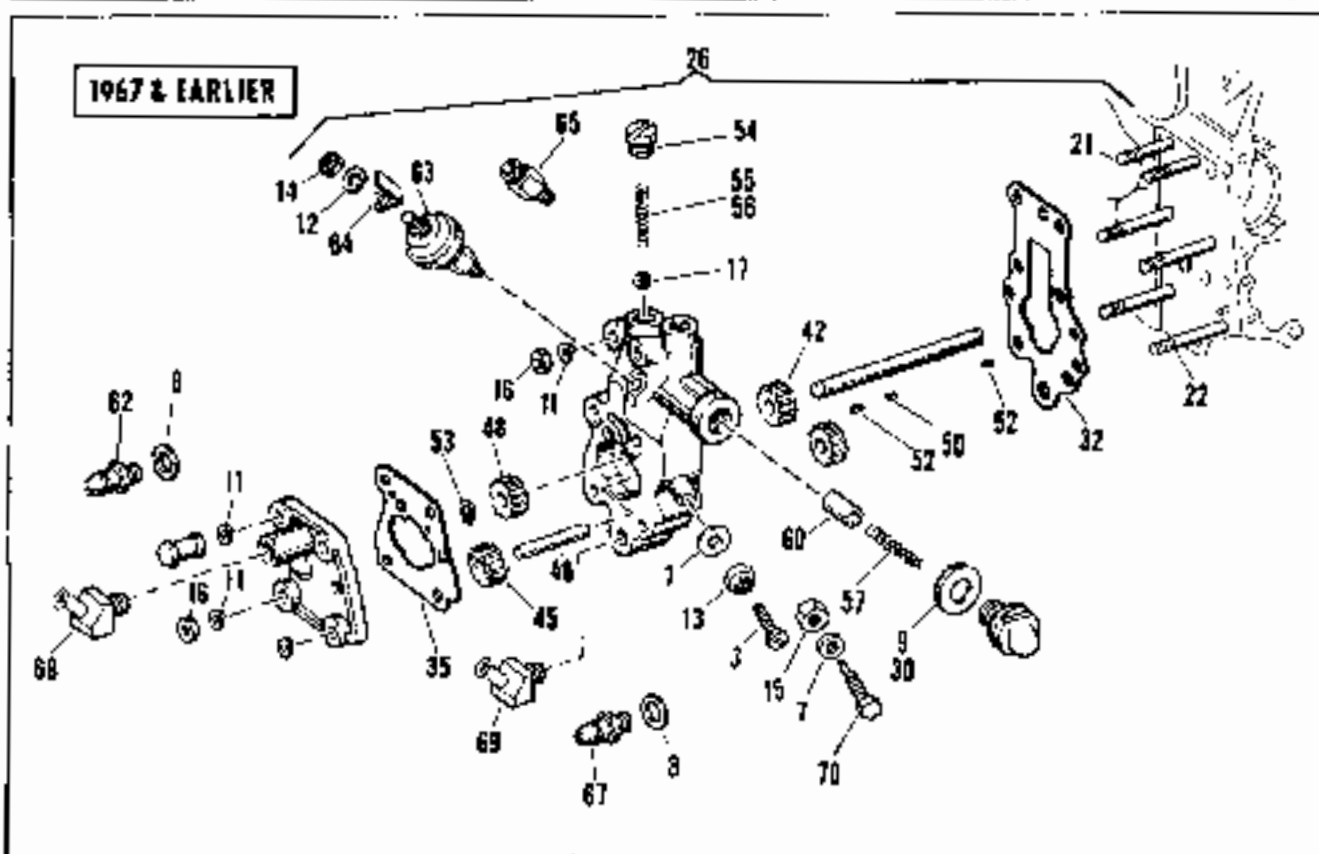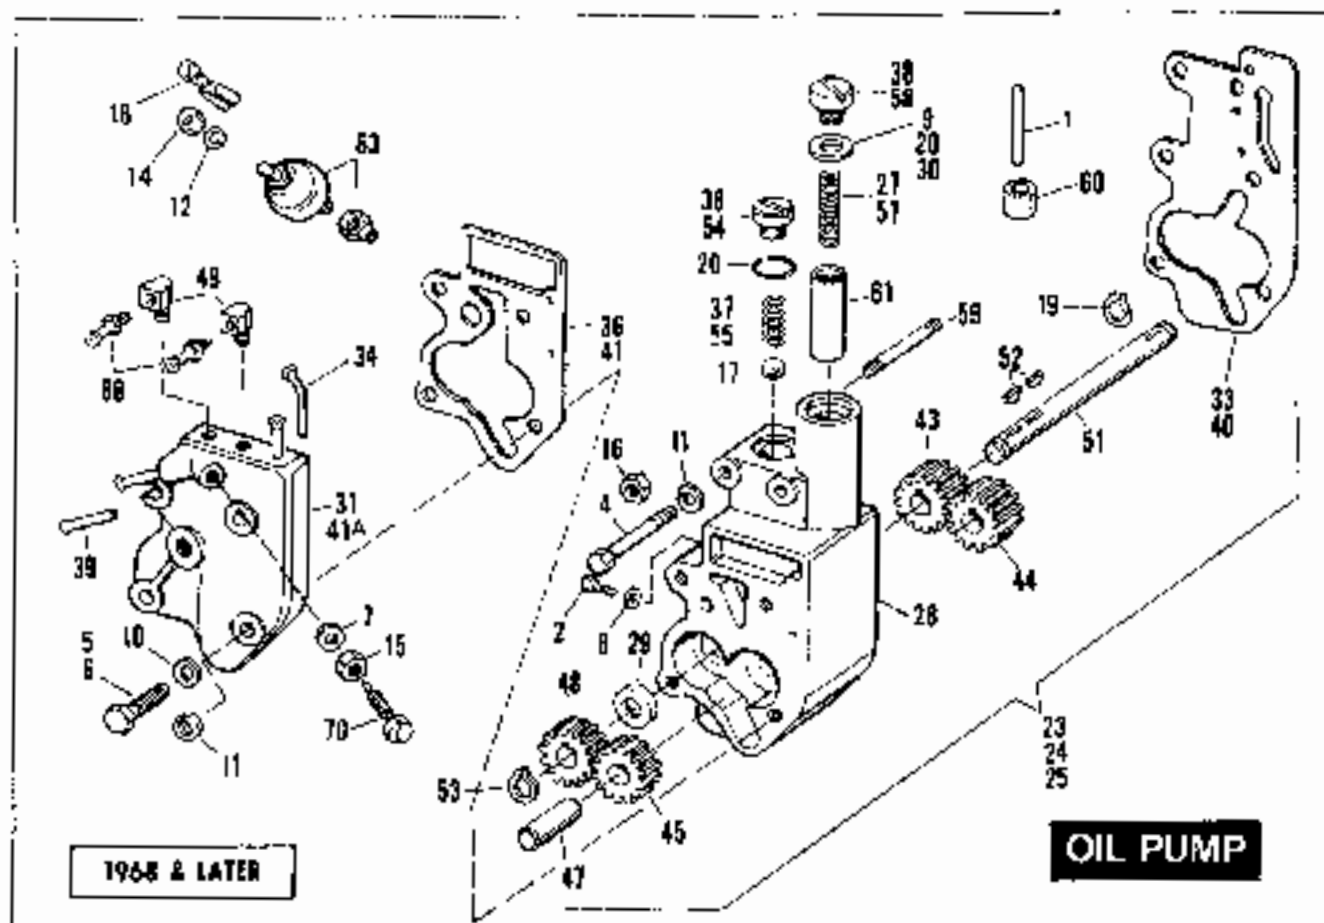


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	223	COVER, oil pump	80 to Early 92 — FL, FLH, FLH-80, Classic
	2	700	FLIGHT pump body	88 to * — FL, FLH, FLH-80, Classic
	3	1193	SCREW, No. 10-32 x 5/16 Phillips hd.	N/A 85 to 87 — FL, FLH
	4	2877W	BOLT, 1/4-20 x 1-1/2 hex. hd. (2)	79 to * — FL, FLH, FLH-80, Classic
	5	3429	BOLT, 1/4-20 x 2-3/4 hex. hd. (4)	79 to * — FL, FLH, FLH-80, Classic
	6	5430W	BOLT, 1/4-24 x 2-3/4 hex. hd. (4)	86 to 78 — FL, FLH, FLH-80
	7	6156	WASHER, 13/64 x 3/8 x 1/32, brass	41 to 69 — FL, FLH
	8	E377	WASHER, 5/8 x 5/8 x 1/32 (2)	Late 50 to * — FL, FLH, FLH-80, Classic
	9	6191	WASHER, 17/32 x 15/16 x 1/64 (brass)	64 to 78 — FL, FLH, FLH-80
	10	6703	WASHER, 1/4 x 5/8 x 1/16 (4)	Late 80 to Early 83 — FL, FLH, FLH-80, Classic
		6736	WASHER, 1/4 x 1/8 x 1/16 (4)	Late 83 to * — FLH-80
	11	7006	LOCKWASHER, 1/4 (7-81 & later)	50 to * — FL, FLH, FLH-80, Classic
	12	7009	LOCKWASHER, No. 10	64 to * — FL, FLH, FLH-80, Classic
	13	7626W	LOCKNUT, No. 10-32 x 3/16 x 3/8 hex.	41 to 67 — FL, FLH
	14	7634	NUT, No. 10-32 x 1/8 x 5/16 hex. (brass)	64 to * — FL, FLH, FLH-80, Classic
	15	7638	NUT, No. 10-32 x 1/8 x 3/8 hex. hd.	41 to 64, 68 & 89 — FL, FLH
	16	7691W	NUT, 1/4-24 x 5/32 x 5/16 hex. (2-69 to 79)	50 to 79 — FL, FLH, FLH-80, Classic
	17	8666	BALL, check valve 3/8 dia.	41 to * — FL, FLH, FLH-80, Classic
	18	8914	WATERMETER, female socket type, 1/4 slot 14-18 wire	41 to 81 — FL, FLH, FLH-80, Classic
	19	11002	RETAINING RING, oil pump	79 to * — FL, FLH, FLH-80, Classic
	20	11105	SPRING, check valve cover screw (2-81 & later)	Late 78 to * — FL, FLH, FLH-80, Classic
	21	24910-30	MOUNTING STUD, 1-11/16 (2)	N/A 41 to 67 — FL, FLH
	22	24920-30	MOUNTING STUD, 2-1/4 (4)	41 to 67 — FL, FLH
	23	26190-70	OIL PUMP KIT	73 to * — FL, FLH, FLH-80, Classic
		26200-60B	OIL PUMP ASSEMBLY	69 to 72 — FL, FLH
	26	26201-40B	OIL PUMP ASSEMBLY	N/A 48 to 64 — FL, FLH
		26202-65	OIL PUMP ASSEMBLY	N/A 65 to 67 — FL, FLH
	27	26207-80	SPRING, relief valve	Late 73 to * — FL, FLH, FLH-80, Classic
	28	26227-58	OIL SEAL	63 to * — FL, FLH, FLH-80, Classic
	29	26231-78	WASHER, relief valve plug (left)	54 to 80 — FL, FLH, FLH-80, Classic
	30	26234-82	COVER, oil pump	Late 82 to Early 84 — FLH-80
		26239-82	COVER, oil pump	Late 82 — Classic
	32	26245-41	BASKET, oil pump body	41 to 67 — FL, FLH
	33	26246-68A	BASKET, oil pump body	68 to Early 80 — FL, FLH, FLH-80, Classic
	34	26247-78	TUBE, cover — upper (metal)	Late 78 to * — FL, FLH, FLH-80, Classic
	35	26257-50A	BASKET, oil pump cover	50 to 67 — FL, FLH
	36	26258-68B	BASKET, oil pump cover	68 to Early 80 — FL, FLH, FLH-80, Classic
	37	26262-80	SPRING, check valve	61 to * — FLH-80, Classic
	38	26263-90	FLIGHT (2)	61 to * — FLH-80, Classic
	39	26265-68A	TUBE, pump & cover (2)	68 to Early 82 — FL, FLH, FLH-80, Classic
	40	26273-90A	BASKET, oil pump body (paper)	Late 83 to * — FL, FLH, FLH-80, Classic
	41	26276-80A	BASKET, oil pump cover (paper)	Late 83 to * — FL, FLH, FLH-80, Classic
	41A	26278-81	COVER ASSEMBLY, oil pump	Late 84 to * — FLH-80
	42	26315-48	DRIVE GEAR	N/A 46 to 57 — FL, FLH
	43	26315-68A	DRIVE GEAR	68 to * — FL, FLH, FLH-80, Classic
	44	26317-68A	IDLE GEAR	68 to * — FL, FLH, FLH-80, Classic

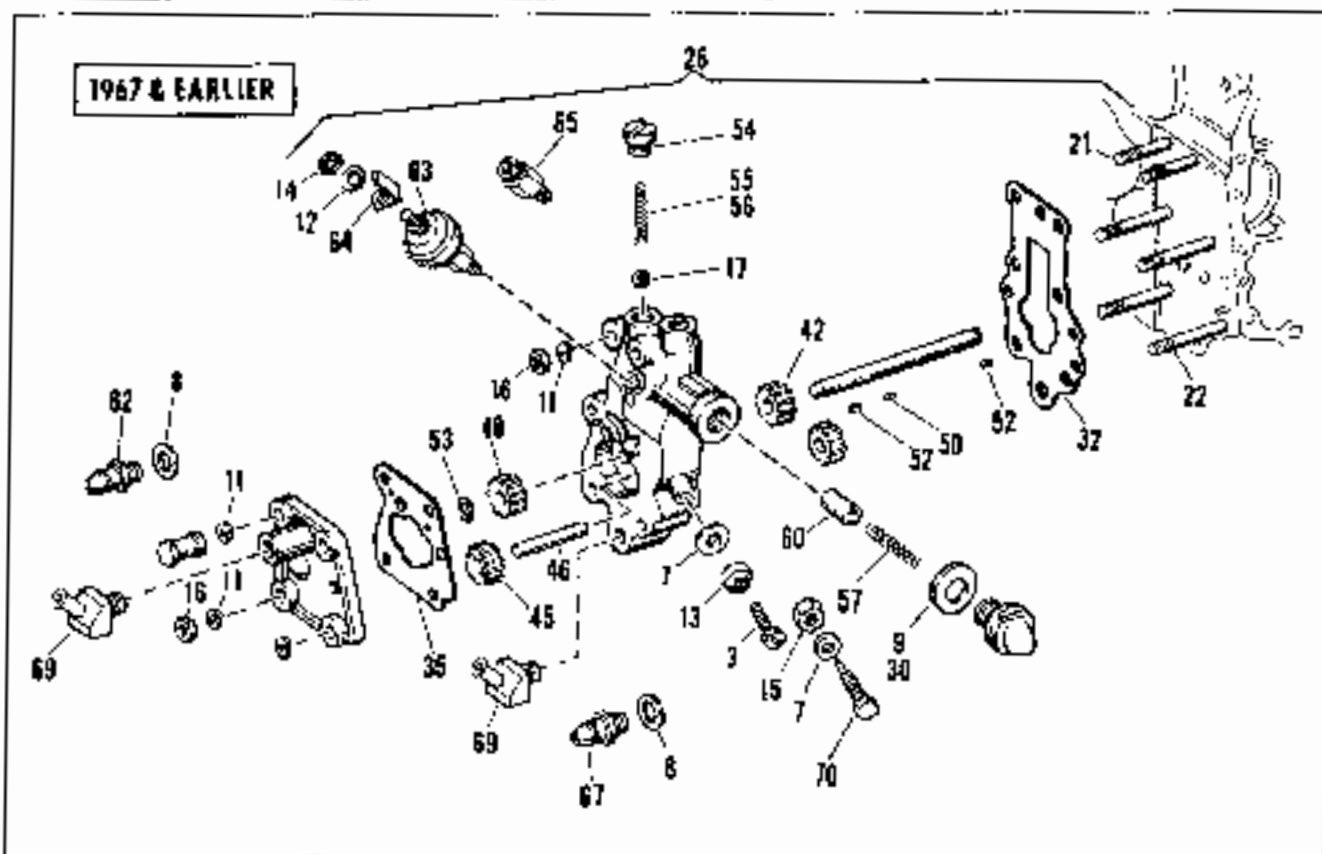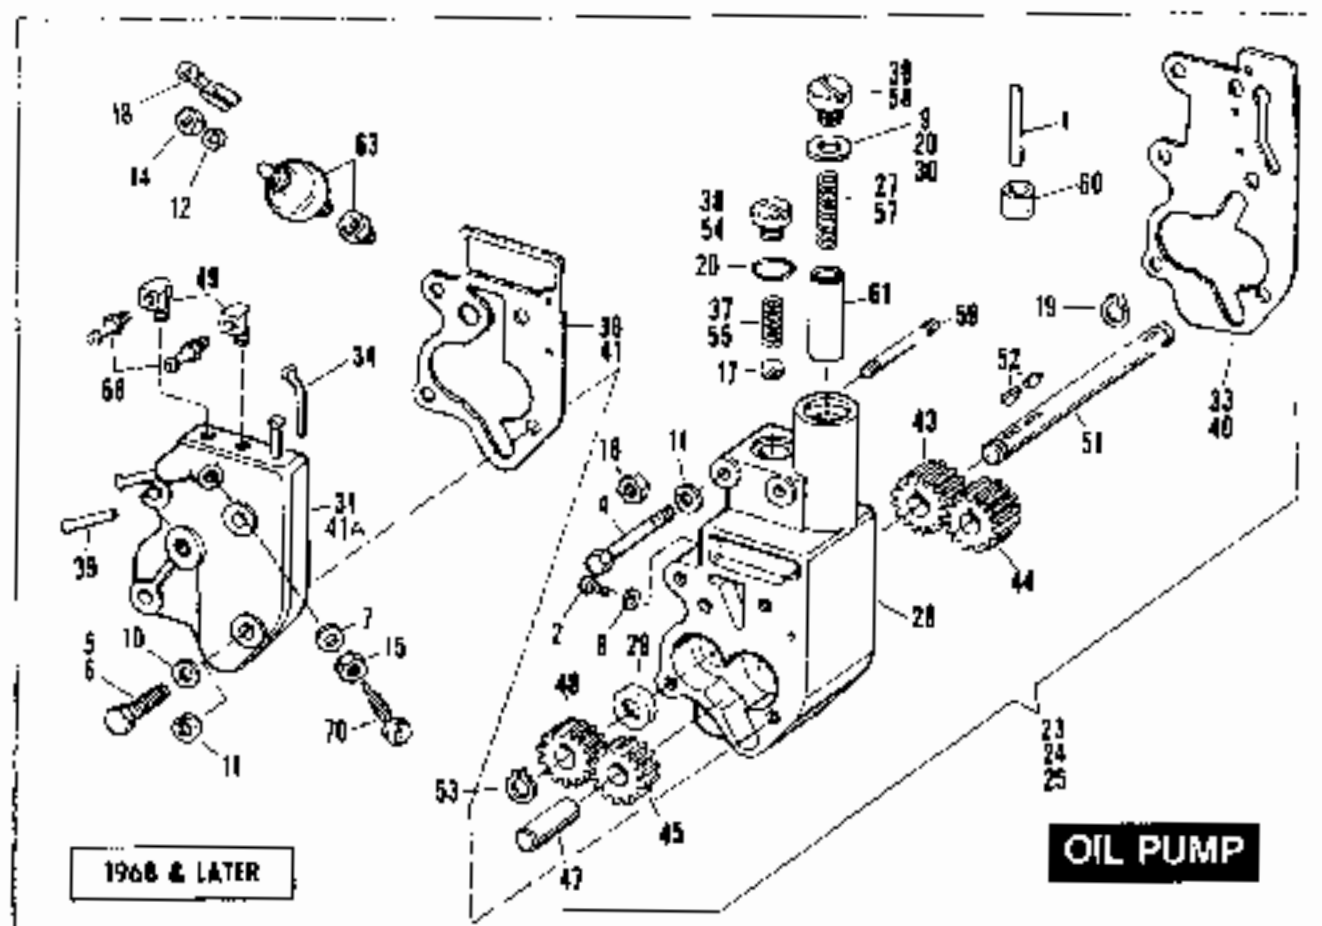

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	45	25325-62A	DRIVE PULLEY GEAR	Late 62 to * - FL, FLH, FLH-80, Classic
	45	25327-52	IDLER SHAFT	Early 62 to 67 - FL, FLH
	47	25327-66	IDLER SHAFT	58 to * - FL, FLH, FLH-80, Classic
	48	25328-74	DRIVE GEAR	41 to * - FL, FLH, FLH-80, Classic
	49	25339-06	ELBOW, oil pump (2)	66 to * - FL, FLH, FLH-80, Classic
	50	25340-06	KEY, oil pump gear	41 to 67 - FL, FLH
	51	25340-70	DRIVE SHAFT	70 to * - FL, FLH, FLH-80, Classic
	52	25348-15	KEY, drive shaft (2)	41 to * - FL, FLH, FLH-80, Classic
	53	25349-06	RETAINING RING, drive shaft	41 to * - FL, FLH, FLH-80, Classic
	54	25362-06	COVER SCREW, check valve spring	41 to 50 - FL, FLH, FLH-80, Classic
	55	25363-06	SPRING, check valve	41 to 55, 66 to 80 - FL, FLH, FLH-80, Classic
	55	25363-56	SPRING, check valve	N/A 56 to 65 - FL, FLH
	57	25374-54	SPRING, relief valve (2)	Late 54 to 72 - FL, FLH
	58	25377-06	PISTON, relief valve	58 to 80 - FL, FLH, FLH-80, Classic
	59	25390-66	MOUNTING STUD, oil pump (2)	56 to 75 - FL, FLH, FLH-80, Classic
	60	25400-54	VALVE, oil pump	Late 54 to Early 62 - FL, FLH, FLH-80, Classic
	61	25400-82	VALVE, oil pump	Late 62 to * - FLH-80, Classic
		25413-82	VALVE KIT	Late 78 to Early 82 - All FL Models
			Consists of:	
		3212	SET SCREW, 3/8 x 15 x 1/4 socket	
		25400-82	VALVE, oil pump	
	62	25424-50	FITTING, pump cover	N/A 50 to 64 - FL, FLH
	63	25552-72	OIL PRESSURE SWITCH, only	41 to * - FL, FLH, FLH-80, Classic
	64	25560-66	TERMINAL, oil pressure switch	N/A Late 66 to 67 - FL, FLH
	65	25569-58	FITTING, oil pressure switch	N/A 50 to 67 - FL, FLH
	67	63533-15	FITTING, oil line (short)	N/A 49 to 64 - FL, FLH
	68	63532-41	FITTING, oil line hose (2)	68 to * - FL, FLH, FLH-80, Classic
	69	63540-62	FITTING, oil line hose (2)	66 to 67 - FL, FLH
	72	63610-70	ADJUSTING SCREW, chamber (hex hd.)	N/A 41 to 64; 68 to Early 72 - FL, FLH
		63614-72	ADJUSTING SCREW, chamber (slotted)	Late 72 to Early 82 - FL, FLH, FLH-80, Classic

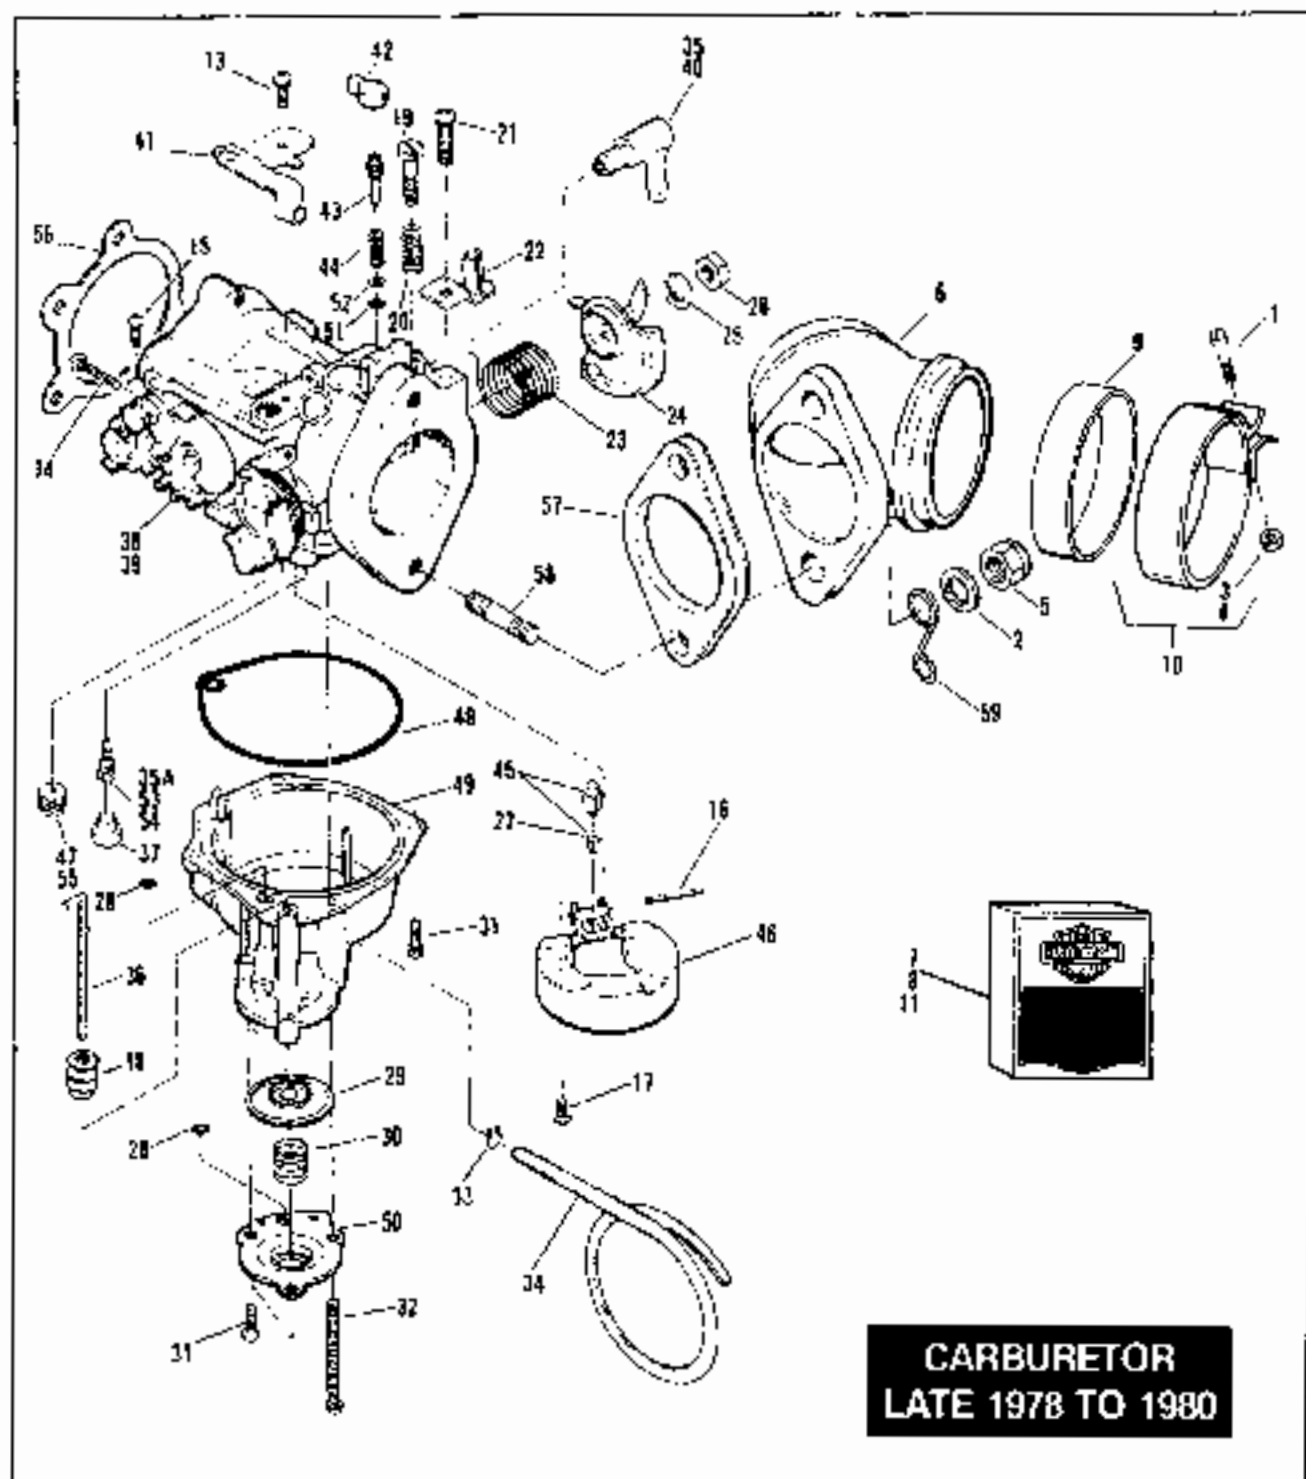


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2700	SCREW, No. 10-24 x 1-1/4 Flat Dr. H. No. 21	Late 78 to 80 — FLH 80 Classic
	2	2702	WASHER, 5/16 x 1/4 x 1/16 (2)	Late 78 to 80 — FLH 80 Classic
	3	2704	CLT, No. 10-24 x 1/8 x 3/16 hex (2)	80 — FL, FLH, FLH 80 Classic
	4	2705W	NUT, No. 10-24 x 1/8 x 3/16 hex (2)	Late 78 & 79 — FL, FLH, FLH 80 Classic
	5	2706	WASHER, 5/16-18 x 1/16 x 1/2 hex (2)	Late 78 to 80 — FL, FLH, FLH 80 Classic
	6	27071-78A 27071-78 27045-78	WASHER WASHER MAIN FLOW CHECK SHAFTHOLE	Late 78 to Early 80 — FL, FLH, FLH 80 Classic Late 80 — FL, FLH, FLH 80 Classic Late 78 to 80 — FL, FLH, FLH 80 Classic
	7	27045-78	CHECK SHAFTHOLE Consists of: Check lever, snap washer, clip screws (2) and disc	
	8	27046-78	PLASTIC PARTS KIT Consists of: Springs (2), clips (2), cam check lever washers, ball and wing	Late 78 to 80 — FL, FLH, FLH 80 Classic
	9	27052-79	SPACER, intake manifold clamp (2)	Late 78 to 80 — FL, FLH, FLH 80 Classic
	10	27053-80	CLAMP, intake manifold — 1000cc screw and nut (2)	Late 80 — FL, FLH, FLH 80 Classic
	11	27076-80	HIGH ALTITUDE KIT (4000-5000 ft.) Consists of besides high altitude label: 27038-78 MAIN JET, 1.60 mm	80 to 80 — FL, FLH, FLH 80 Classic
	12	27053-79	HIGH ALTITUDE KIT Consists of besides high altitude label: 27038-78 MAIN JET, 1.55 mm	N/A Late 78 & 79 — FLH 80 Classic
	12A	27094-78	HIGH ALTITUDE KIT Consists of besides high altitude label: 27038-78 MAIN JET, 1.60 mm 27037-79 LOW SPEED JET, 0.72 mm	N/A Late 78 & 79 — FL, FLH
	13	27034-76	SCREW, choke cable bracket	Late 78 to 80 — FL, FLH, FLH 80 Classic
	14	27036-76	SCREW, high speed air & high air accelerator pump stop N/A	Late 78 to 80 — FL, FLH, FLH 80 Classic
	15	27037-75	SCREW, wire plug	Late 78 to 80 — FL, FLH, FLH 80 Classic
	16	27038-75	P.N. Pass	Late 78 to 80 — FL, FLH, FLH 80 Classic
	17	27039-75	SCREW, float pin	Late 78 to 80 — FL, FLH, FLH 80 Classic
	18	27041-76	RUBBER CAP, accelerator pump	Late 78 to 80 — FL, FLH, FLH 80 Classic
	19	27042-76	SCREW, intake clip	Late 78 to 80 — FL, FLH, FLH 80 Classic
	20	27044-76	SPRING, throttle stop screw	Late 78 to 80 — FL, FLH, FLH 80 Classic
	21	27020-76	SCREW, throttle cable bracket	Late 78 to 80 — FL, FLH, FLH 80 Classic
	22	27021-76	WASHER, throttle cable	Late 78 to 80 — FL, FLH, FLH 80 Classic
	23	27022-76	SPRING, throttle lever	Late 78 to 80 — FL, FLH, FLH 80 Classic
	24	27024-76	THRUSTLE LEVER	Late 78 to 80 — FL, FLH, FLH 80 Classic
	25	27031-76	SCREW, throttle, throttle lever	Late 78 to 80 — FL, FLH, FLH 80 Classic
	26	27035-76	NUT, throttle lever	Late 78 to 80 — FL, FLH, FLH 80 Classic
	27	27038-76	CLIP, fuel valve	Late 78 to 80 — FL, FLH, FLH 80 Classic
	28	27060-76	O-RING	Late 78 to 80 — FL, FLH, FLH 80 Classic
	29	27061-76	DIAPHRAGM, accelerator pump	Late 78 to 80 — FL, FLH, FLH 80 Classic
	30	27062-76	SPRING, diaphragm	Late 78 to 80 — FL, FLH, FLH 80 Classic
	31	27064-76	SCREW (5)	Late 78 to 80 — FL, FLH, FLH 80 Classic
	32	27067-76	SCREW	Late 78 to 80 — FL, FLH, FLH 80 Classic
	33	27068-76	CLIP, overflow tube	Late 78 to 80 — FL, FLH, FLH 80 Classic
	34	27069-76	HOSE, overflow	Late 78 to 80 — FL, FLH, FLH 80 Classic
	35	27071-76	FITTING	Late 78 — FL, FLH, FLH 80
	35A	27072-80	LOW SPEED JET, 0.673 mm	80 — FL, FLH, FLH 80 Classic
	36	27073-76	HUB, accelerator pump, 50 mm	Late 78 to 80 — FL, FLH, FLH 80 Classic
	37	27085-76	PLUG, low speed jet	Late 78 to 80 — FL, FLH, FLH 80 Classic
	38	27095-78A 27096-80A	CARBURETOR (78A) CARBURETOR (80A)	Late 78 & 79 — FLH 80 Classic N/A 80 — FLH 80 Classic
	39	27097-78A 27097-80A	CARBURETOR (78A) CARBURETOR (80A)	N/A Late 78 & 79 — FL, FLH N/A 80 — FL, FLH

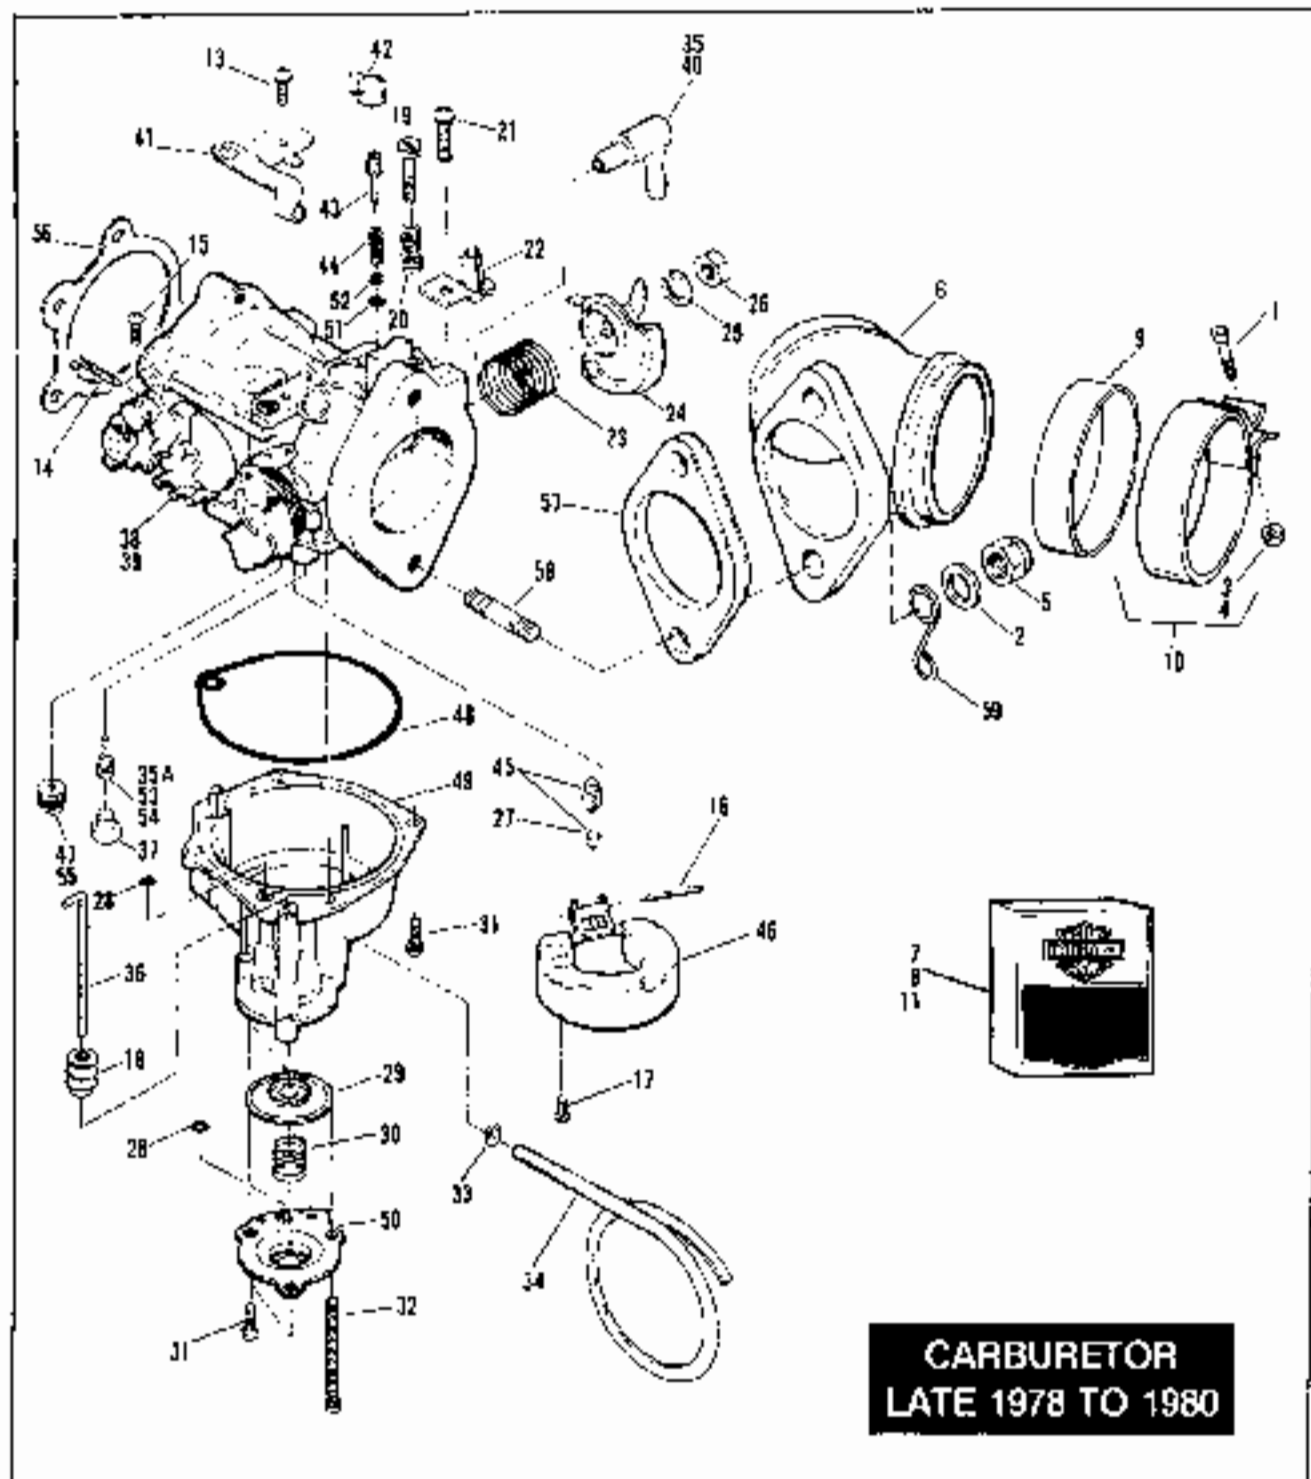


**CARBURETOR
LATE 1978 TO 1980**


RETAIL PRICE	INDEX NO	PART NO.	N A M E	USED ON
	40	27594-78	FITTING	79 to 80 — FL, FLH, FLH-80, Classic
	41	27892-78	BRACKET, choke cable	Late 78 to 80 — FL, FLH, FLH-80, Classic
	42	27893-78	CAJ, low speed mixture screw	Late 78 & 79 — FL, FLH, FLH-80, Classic
	43	27894-79	SCREW, low speed mixture	Late 78 & 79 — FL, FLH, FLH-80, Classic
	44	27895-78	SPRING, low speed mixture adjusting screw	Late 78 & 79 — FL, FLH, FLH-80, Classic
	45	27896-78	FLOAT VALVE, with clip	Late 78 to 80 — FL, FLH, FLH-80, Classic
	46	27897-78	FLOAT	Late 78 to 80 — FL, FLH, FLH-80, Classic
	47	27898-78	MAIN JET, 1.60 mm (Late 78 & 79 FL, FLH — Hi-Altitude)	Late 78 to 80 — FL, FLH, FLH-80, Classic
	48	27899-78	O-RING, ova	Late 78 to 80 — FL, FLH, FLH-80, Classic
	49	27900-79	BOWL	Late 78 to 80 — FL, FLH, FLH-80, Classic
	50	27931-80	HOUSING, accelerator pump	Late 78 to 80 — FL, FLH, FLH-80, Classic
	51	27892-78	O-RING, low speed mixture adjusting screw	Late 78 & 79 — FL, FLH, FLH-80, Classic
	52	27893-78	WASHER, low speed mixture adjusting screw	Late 78 & 79 — FL, FLH, FLH-80, Classic
	53	27894-78	LOW SPEED JET, 0.68 mm	Late 78 to 80 — FL, FLH, FLH-80, Classic
	54	27895-78	LOW SPEED JET, 0.70 mm	Late 78 & 79 — FL, FLH, FLH-80, Classic
	55	27898-78	MAIN JET, 1.60 mm	Late 78 to 80 — FL, FLH, FLH-80, Classic
	56	29050-77	GASKET, air cleaner to carburetor	Late 78 to 80 — FL, FLH, FLH-80, Classic
	57	29250-78	INSULATING SPACER	Late 78 to 80 — FL, FLH, FLH-80, Classic
	58	29253-78	STUD, 5/16-19 x 1-3/4 (2)	Late 78 to 80 — FL, FLH, FLH-80, Classic
	59	45092-80	CABLE GUIDE	Late 78 to 80 — FL, FLH, FLH-80, Classic

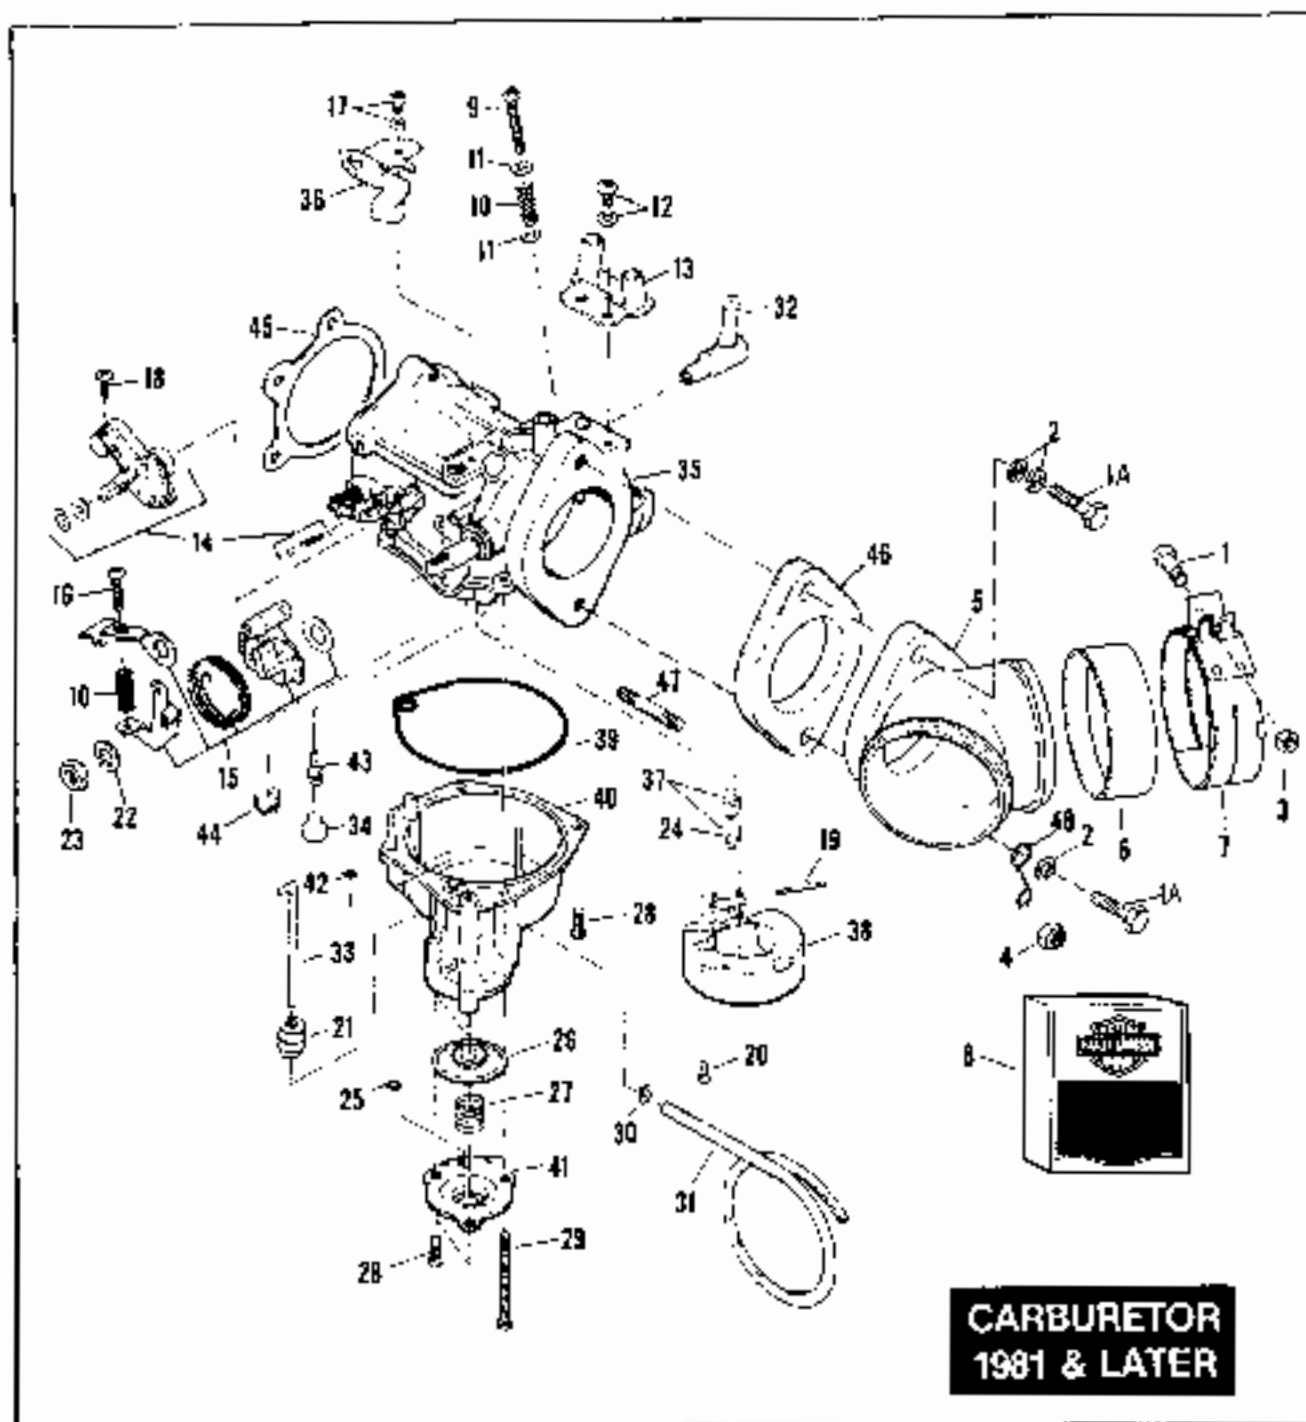


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	450	SCREW, No. 10-24 x 1 1/4 Hex (x 1/2) 12-14	81 to * — FLH-80, Classic
	1A	27076	SCREW, No. 10-24 x 1 1/4 Hex (x 1/2) 21	Like 82 to * — FLH-80, Classic
	2	27072	WASHER, 1/16 x 1 1/4 x 1 1/4 Hex (x 1/2) 12-14	81 to * — FLH-80, Classic
	3	27094	NUT, No. 10-24 x 1 1/4 Hex (x 1/2) 21	81 to * — FLH-80, Classic
	4	27099	LOCKNUT, 1/16-19 x 1 1/4 Hex (x 1/2) 21	81 & Early 82 — FLH-80, Classic
	5	27021-76	INTAKE MANIFOLD	81 to * — FLH-80, Classic
	6	27062-76	SEAL, intake manifold (x 2)	81 to * — FLH-80, Classic
	7	27063-80	CLAMP, intake manifold (x 2) (x 1/2) screw and nut (2)	81 to * — FLH-80, Classic
	8	27078-80	BRACKET, throttle cable (x 2) (x 1/2) screw and nut (2)	81 to * — FLH-80, Classic
			Complete of throttle high altitude (x 2)	
			27085-78 — MAIN JET 1/16 in.	
	9	27100-81	SCREW, throttle stop	81 to * — FLH-80, Classic
	10	27106-81	SCREW, throttle stop screw & throttle screw (2)	81 to * — FLH-80, Classic
	11	27117-81	WASHER, throttle stop screw (2)	81 to * — FLH-80, Classic
	12	27120-81	SCREW WITH WASHER, throttle cable bracket	81 to * — FLH-80, Classic
	13	27111-81	BRACKET, throttle cable	81 to 82 — FLH-80, Classic
	14	27142-81	CHOKER LEVER KIT	81 to * — FLH-80, Classic
	15	27143-81	LEVER, choke accelerator pump	81 to * — FLH-80, Classic
	16	27145-81	SCREW, throttle	81 to * — FLH-80, Classic
	17	27304-76	SCREW WITH WASHER, choke cable bracket	81 to * — FLH-80, Classic
	18	27307-76	SCREW, wire block	81 to * — FLH-80, Classic
	19	27308-76	PLATE, block	81 to * — FLH-80, Classic
	20	27325-76	SCREW, block pin	81 to * — FLH-80, Classic
	21	27311-76	RUBBER CAP, accelerator pump	81 to * — FLH-80, Classic
		27324-83	O-RING, bowl	84 to * — FLH-80
		27325-83	BRACKET, choke cable	84 to * — FLH-80
		27327-83	BRACKET, throttle cable	84 to * — FLH-80
		27329-83	BOWL	84 to * — FLH-80
	22	27337-76	LOCKWASHER, throttle lever	81 to * — FLH-80, Classic
	23	27339-76	NUT, throttle lever	81 to * — FLH-80, Classic
	24	27338-76	CLIP, block valve	81 to * — FLH-80, Classic
	25	27363-76	O-RING	81 to * — FLH-80, Classic
	26	27351-76	DIAPHRAGM, accelerator pump	81 to * — FLH-80, Classic
	27	27352-76	SPRING, diaphragm	81 to * — FLH-80, Classic
	28	27356-76	SCREW (5)	81 to * — FLH-80, Classic
	29	27367-76	SCREW	81 to * — FLH-80, Classic
	30	27368-76	CLIP, valve block	81 to * — FLH-80, Classic
	31	27365-76	O-RING, overflow	81 to * — FLH-80, Classic
	32	27371-76	FITTING	81 to * — FLH-80, Classic
	33	27370-76	NOZ, accelerator pump, 1/16 in.	81 to * — FLH-80, Classic
	34	27385-76	PLUG, low speed jet	81 to * — FLH-80, Classic
	35	27404-81A	CARBURETOR (1738)	81 to * — FLH-80, Classic
	36	27682-76	BRACKET, choke cable	81 to 82 — FLH-80, Classic
	37	27686-76	LOCK VALVE, choke cable	81 to * — FLH-80, Classic
	38	27687-76	SCREW	81 to * — FLH-80, Classic
	39	27839-78	O-RING, bowl	81 to 82 — FLH-80, Classic
	40	27880-78	BOWL	81 to 82 — FLH-80, Classic
	41	27891-80	NOZ, accelerator pump	81 to * — FLH-80, Classic
	42	27892-78	O-RING	81 to * — FLH-80, Classic
	43	27893-78	LOW SPEED JET 1/16 in.	81 to * — FLH-80, Classic
	44	27936-78	MAIN JET 1/16 in. (500)	81 to * — FLH-80, Classic
	45	28056-77	GASKET, air cleaner to carburetor	81 to * — FLH-80, Classic
	46	28250-79	INSULATING SPACER	81 to * — FLH-80, Classic
	47	28253-79	STUD 5/16-18 x 1 3/4 (2)	81 & Early 82 — FLH-80, Classic
	48	45382-80	CABLE GUIDE	81 to * — FLH-80, Classic

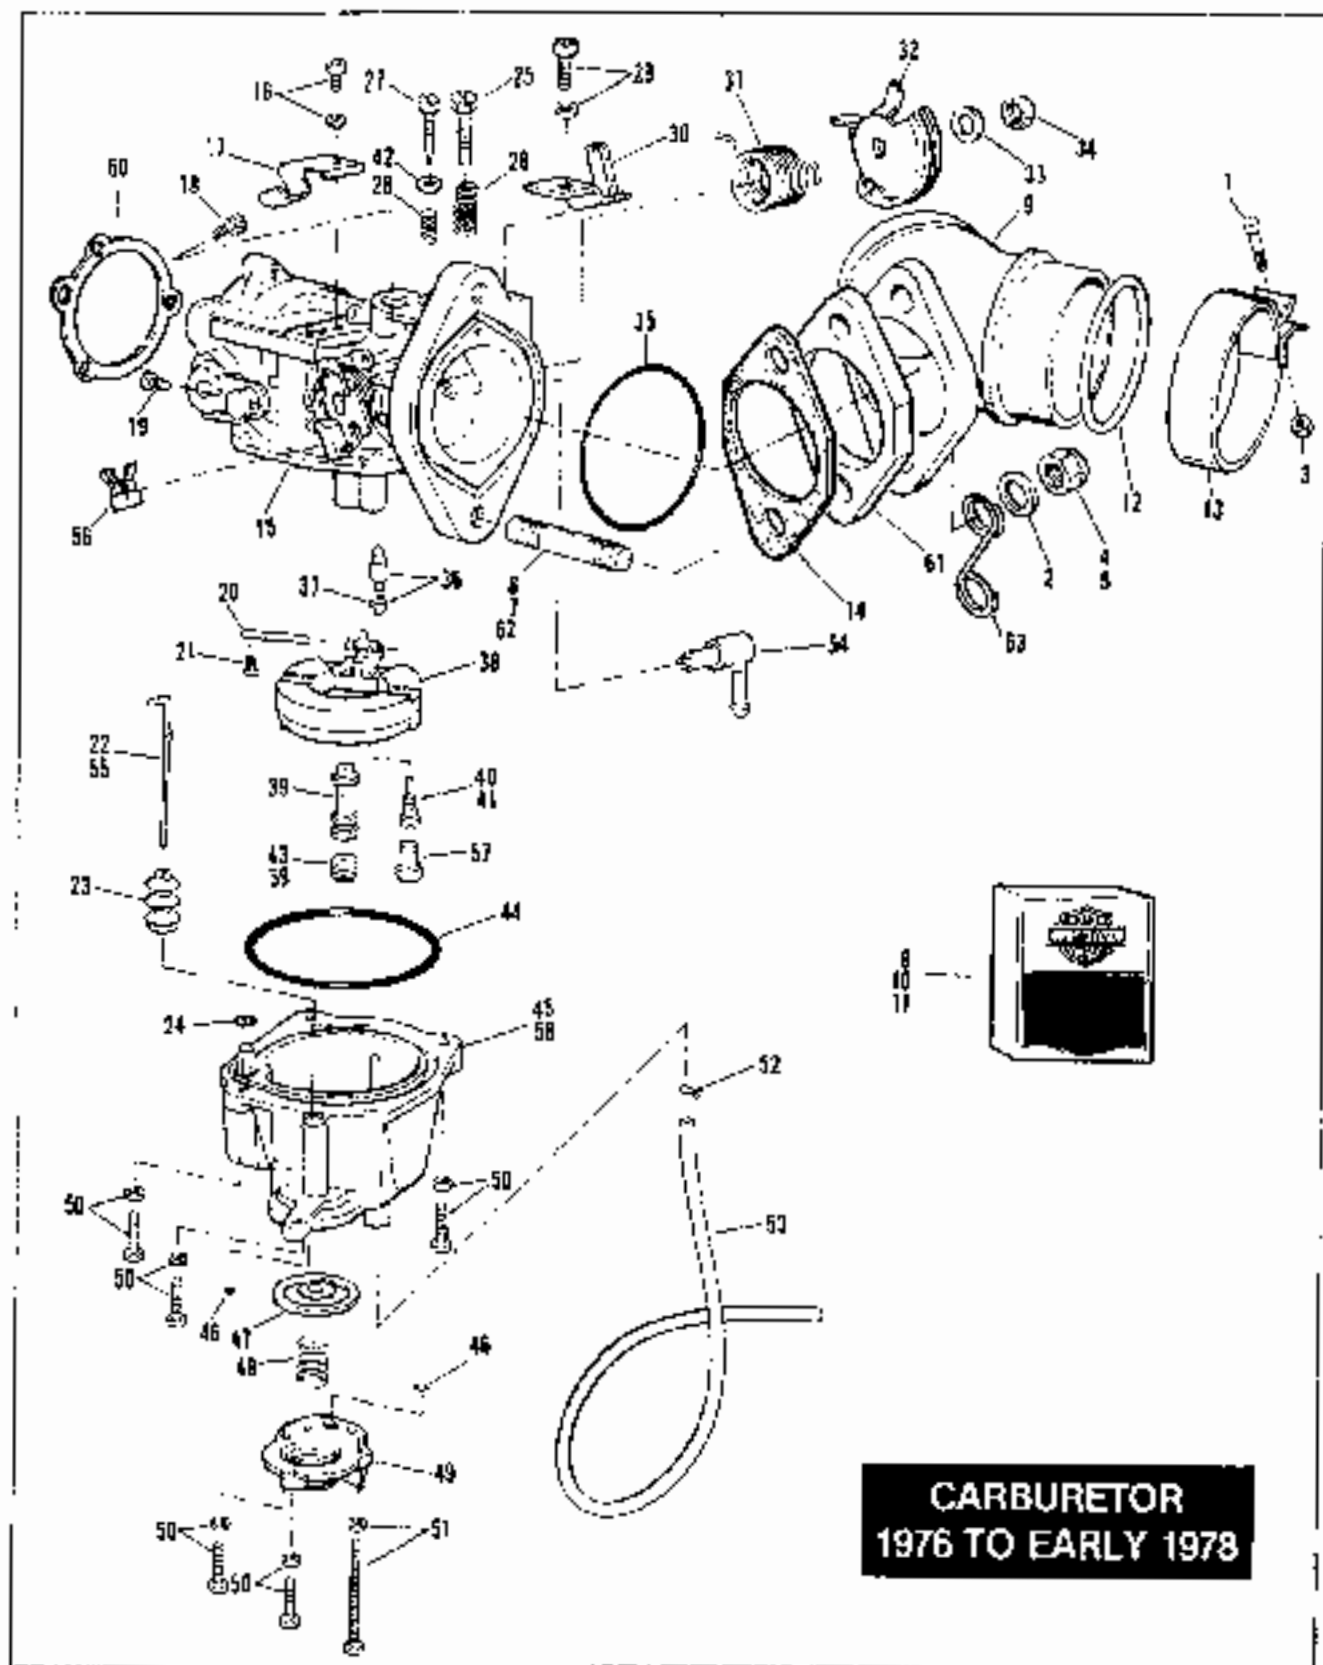


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
-	-	930	SCREW, No. 10-24 x 1/4 Phillips (12)	76 to Early 78 — FL, FLH
2	2	8702	WASHER 5/16 x 11/16 x 1/16 (2)	76 to Early 78 — FL, FLH
2	2	7120W	NUT No. 10-24 x 1/8 x 3/16 (12)	76 to Early 78 — FL, FLH
-	-	7725	LOCKWASHER 5/16-24 x 11/32 x 1/2 (12)	76 to 77 — FL, FLH
5	5	7735	LOCKWASHER 5/16-24 x 11/32 x 1/2 (12)	Early 78 — FL, FLH
7	7	24820-76	STUD 5/16-18 x 1 1/2 (2)	N/A Early 78 — FL, FLH
7	7	24821-8L	STUD 5/16-18 x 1 1/2 (2)	77 — FL, FLH
8	8	27006-76	CARBURETOR REPAIR KIT	76 to Early 78 — FL, FLH
9	9	27021-71A	INTAKE MANIFOLD	76 to Early 78 — FL, FLH
10	10	27045-76	THROTTLE SHAFT KIT	76 to Early 78 — FL, FLH
11	11	27046-78	FLYWHEEL PARTS KIT	76 to Early 78 — FL, FLH
12	12	27090-76	O-RING, intake manifold (2)	76 to Early 78 — FL, FLH
13	13	27093-76	CLAMP, intake manifold — with screw and nut (2)	76 to Early 78 — FL, FLH
14	14	27071-76	GASKET, spacer (2)	Early 78 — FL, FLH
15	15	27155-76A	CAP, REINFOR	76 to Early 78 — FL, FLH
16	16	27304-76	SCREW, choke cable bracket	76 to Early 78 — FL, FLH
17	17	27305-76	BRACKET, choke cable	N/A 76 to Early 78 — FL, FLH
18	18	27306-76	ADJUSTING SCREW, pump stroke	N/A 76 to Early 78 — FL, FLH
19	19	27307-76	SCREW, wire block	76 to Early 78 — FL, FLH
20	20	27308-76	FLY, Nut	76 to Early 78 — FL, FLH
21	21	27309-76	SCREW, pump pin	76 to Early 78 — FL, FLH
22	22	27310-76	ROD, accelerator pump (330A)	N/A 76 to Early 78 — FL, FLH
23	23	27311-76	MURTER, cap, accelerator pump	76 to Early 78 — FL, FLH
24	24	27312-76	O-RING	N/A 76 to Early 78 — FL, FLH
25	25	27313-76	SCREW, throttle stop	76 to Early 78 — FL, FLH
26	26	27314-76	SPRING, throttle stop screw	76 to Early 78 — FL, FLH
27	27	27315-76	ADJUSTING SCREW, low speed mixture	N/A 76 to Early 78 — FL, FLH
28	28	27316-76	SPRING, low speed adjusting screw	76 to Early 78 — FL, FLH
29	29	27320-76	SCREW, throttle cable bracket	76 to Early 78 — FL, FLH
30	30	27321-76	BRACKET, throttle cable	76 to Early 78 — FL, FLH
31	31	27322-76	SPRING, throttle lever	76 to Early 78 — FL, FLH
32	32	27328-76	THROTTLE LEVER	76 to Early 78 — FL, FLH
33	33	27333-76	SPRING WASHER, throttle lever	76 to Early 78 — FL, FLH
34	34	27335-76	NUT, throttle lever	76 to Early 78 — FL, FLH
35	35	27336-76	O-RING	76 to Early 78 — FL, FLH
36	36	27337-76	FLOAT VALVE, with clip	76 to Early 78 — FL, FLH
37	37	27338-76	CLIP, float valve	76 to Early 78 — FL, FLH
38	38	27339-76	FLOAT	N/A 76 to Early 78 — FL, FLH
39	39	27340-76	MAIN NOZZLE	N/A 76 to Early 78 — FL, FLH
40	40	27340-76	LOW SPEED JET, 1.00 mm	76 — FL, FLH
41	41	27348-77	LOW SPEED JET, 0.88 mm	77 to Early 78 — FL, FLH
42	42	27350-76	GASKET, low speed adjusting screw	N/A 76 to Early 78 — FL, FLH
43	43	27356-76	MAIN NOZZLE, 1.85 mm	76 — FL, FLH
44	44	27358-76	O-RING, bowl	76 to Early 78 — FL, FLH
45	45	27359-76	BOWL	N/A 76 to Early 78 — FL, FLH
46	46	27360-76	O-RING (2)	76 to Early 78 — FL, FLH
47	47	27381-76	DIAPHRAGM, accelerator pump	76 to Early 78 — FL, FLH
48	48	27392-76	SPRING, diaphragm	76 to Early 78 — FL, FLH
49	49	27394-76	ACCELERATOR PUMP HOUSING	N/A 76 to Early 78 — FL, FLH
50	50	27396-76	SCREW (1)	76 to Early 78 — FL, FLH
51	51	27397-76	SCREW	76 to Early 78 — FL, FLH
52	52	27398-76	CLIP, overflow hose	76 to Early 78 — FL, FLH
53	53	27399-76	O-RING, overflow	76 to Early 78 — FL, FLH
54	54	27401-76	FITTING	76 to Early 78 — FL, FLH
55	55	27403-76	ROD, accelerator pump, 59.5 mm (230B)	76 to Early 78 — FL, FLH
56	56	27404-76	SPACER (230A)	N/A 76 to Early 78 — FL, FLH
57	57	27395-76	PLUG, low speed jet	76 to Early 78 — FL, FLH
58	58	27395-76A	ROD	N/A 76 to Early 78 — FL, FLH

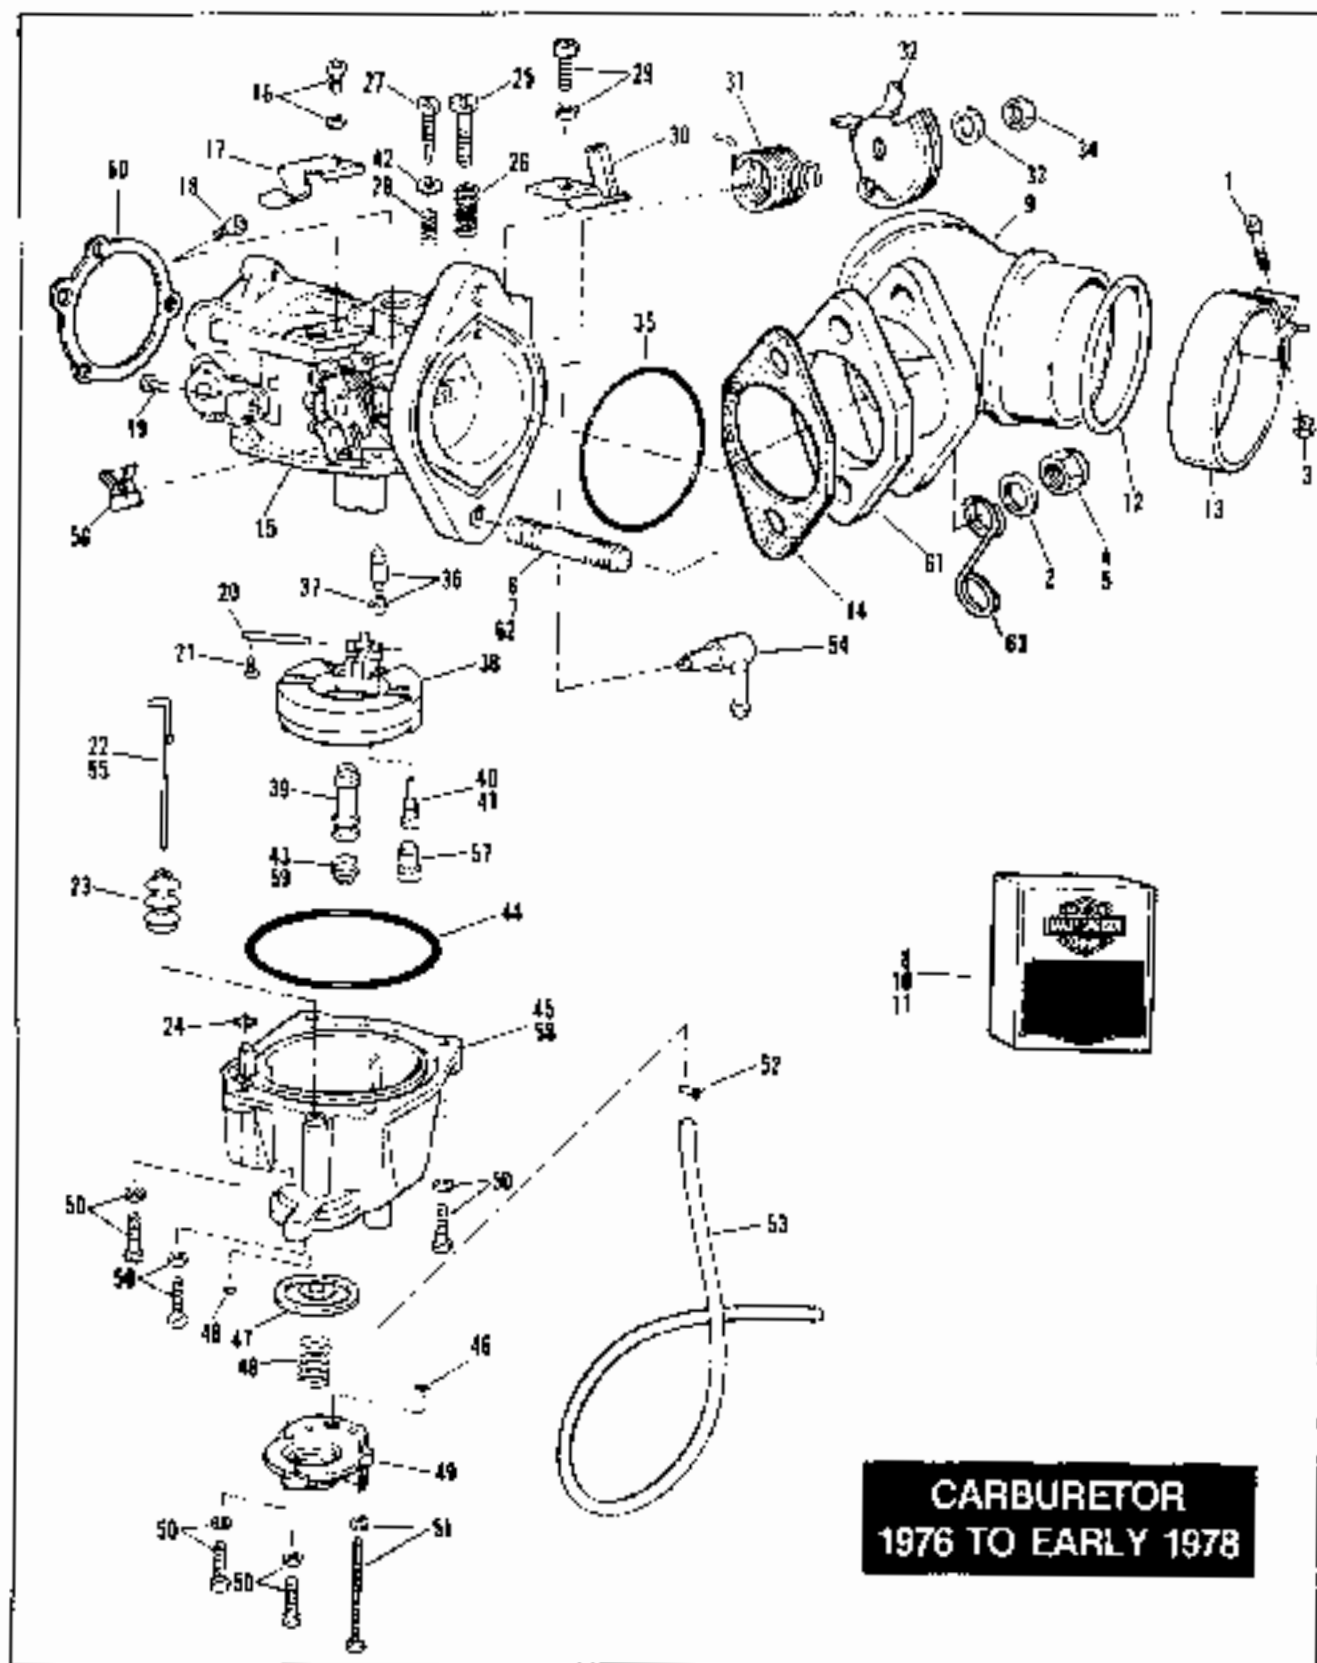

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	55	2741E-76	MAIN JET 1.80 mm.	76 to Early 78 - FL, FLH
		27417-76	MAIN JET 1.75 mm.	78 to Early 78 - FL, FLH
		27418-76	MAIN JET 1.70 mm.	76 to Early 78 - FL, FLH
		27419-76	MAIN JET 1.65 mm.	76 to Early 78 - FL, FLH
		27420-76	MAIN JET 1.60 mm.	76 to Early 78 - FL, FLH
	60	29038-77	GASKET, air cleaner back plate	Late 77 to Early 78 - FL, FLH
	61	29250-78	SPACER, intake manifold to carburetor	Early 78 - FL, FLH
	62	33295-85	STD. carb. to int. man. 5/16" B x 5/8" G 24 x 1-1/2 lg. 121	78 - FL, FLH
	63	45052-86	CABLE GUIDE	76 to Early 78 - FL, FLH

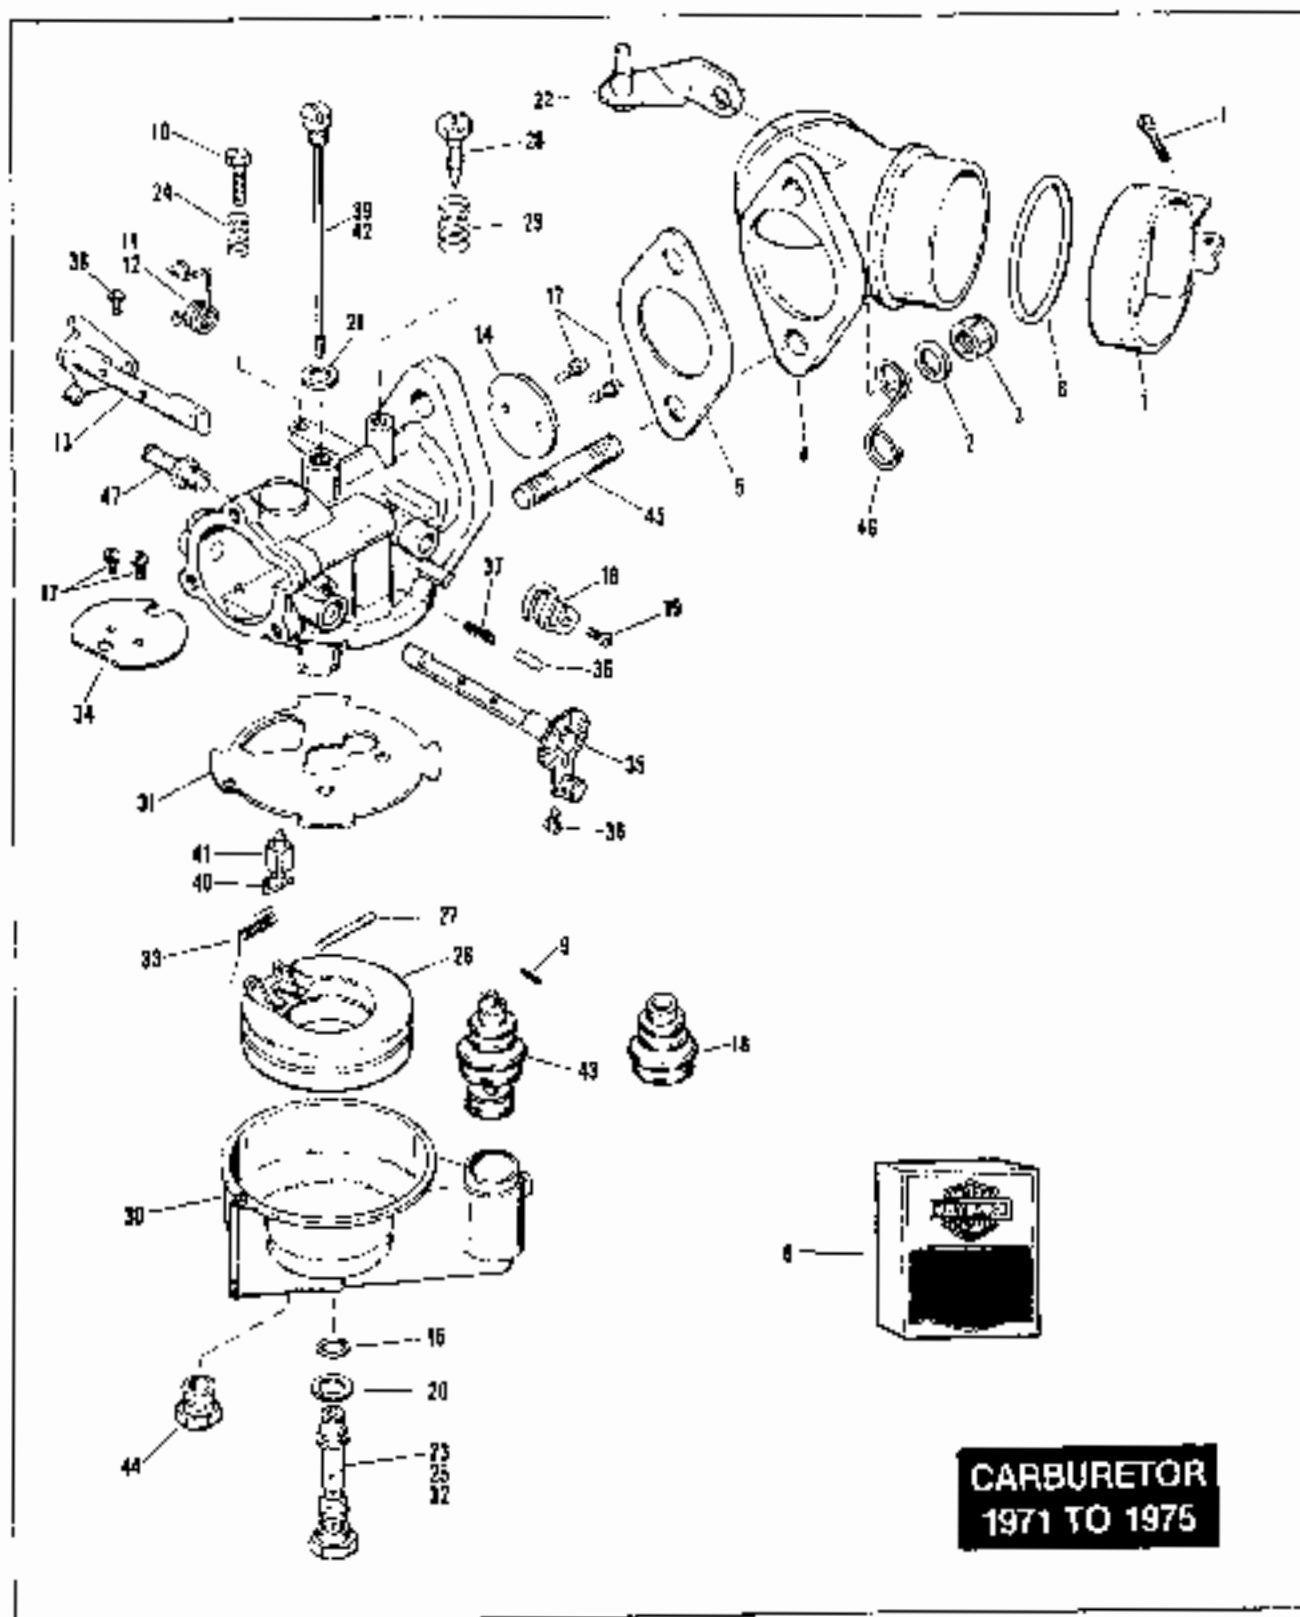


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	930	SCREW, No. 10-24 x 1 1/4 Pz. (2)	71 to 75 — FL, FLH
	2	27015	WASHER, 11-32 x 1 1/16 x 1/8 (2)	71 to 75 — FL, FLH
	3	27025	LOCKWASHER, 1/4 x 11-32 x 1/2 (2)	71 to 75 — FL, FLH
	4	27021-71A	INTAKE MANIFOLD	71 to 75 — FL, FLH
	5	27023-71	GASKET	71 to 75 — FL, FLH
	6	27060-55	O-RING, intake manifold (2)	71 to 75 — FL, FLH
	7	27063-57	CLAMP ASSEMBLY (2)	71 to 75 — FL, FLH
	8	27132-71	REPAIR PAINTS AND GASKET KIT	71 to 75 — FL, FLH
		27155-72B	CARBURETOR	71 to 75 — FL, FLH
	9	27164-71	PISTON, accelerator pump	N/A 71 to 75 — FL, FLH
	10	27271-71	SCREW, throttle rod, No. 11-32 x 1/2 hex. hd.	N/A 71 to 75 — FL, FLH
	11	27272-71	SPRING, throttle return	N/A 71 to 75 — FL, FLH
	12	27272-74	SPRING, throttle return	N/A 74 & 75 — FL, FLH
	13	27281-71A	THROTTLE SHAFT AND LEVER	N/A 71 to 75 — FL, FLH
	14	27282-71	THROTTLE PLATE	N/A 71 to 75 — FL, FLH
	15	27326-71	O-RING	71 to 75 — FL, FLH
	16	27341-71	PISTON, accelerator pump	71 to 75 — FL, FLH
	17	27342-71	SCREW WITH LOCKWASHER, No. 10-24 (4)	N/A 71 to 75 — FL, FLH
	18	27399-71	BOOT, accelerator pump	71 to 75 — FL, FLH
	19	27336-71	SCREW WITH LOCKWASHER, No. 4-40	71 to 75 — FL, FLH
	20	27403-71	WASHER, manifold (fiber)	N/A 71 to 75 — FL, FLH
	21	27434-71	WASHER, die (fiber)	N/A 71 to 75 — FL, FLH
	22	27459-74	BRACKET, throttle cable	75 — FL, FLH
	23	27812-71	MAIN JET, 0.90 mm (C66-173)	N/A 71 to 75 — FL, FLH
	24	27813-71	SPRING, throttle stop screw	N/A 71 to 75 — FL, FLH
	25	27814-71	MAIN JET, 0.95 mm (C66-174)	N/A 71 to 75 — FL, FLH
		27818-71	MAIN JET, 1.00 (C66-155)	N/A 71 to 75 — FL, FLH
		27819-71	MAIN JET, 1.05 (C66-156)	N/A 71 to 75 — FL, FLH
		27820-71	MAIN JET, 1.10 (C66-157)	N/A 71 to 75 — FL, FLH
		27821-71	MAIN JET, 1.15 (C66-143)	N/A 71 to 75 — FL, FLH
		27822-71	MAIN JET, 1.20 (C66-158)	N/A 71 to 75 — FL, FLH
		27823-71	MAIN JET, 1.25 (C66-159)	N/A 71 to 75 — FL, FLH
	26	27830-71	PISTON	N/A 71 to 75 — FL, FLH
	27	27831-71	PISTON	N/A 71 to 75 — FL, FLH
	28	27841-71	IDLE ADJUSTING SCREW	71 to 75 — FL, FLH
	29	27842-71	SPRING, idle adjusting screw	71 to 75 — FL, FLH
	30	27845-71	ODDYL	N/A 71 to 75 — FL, FLH
	31	27846-71	GASKET, box	71 to 75 — FL, FLH
	32	27851-75	MAIN JET, 0.95 mm (C66-183-19)	N/A Late 75 — FL, FLH
		27852-75	MAIN JET, 1.00 mm (C66-183-20)	N/A Late 75 — FL, FLH
		27853-75	MAIN JET, 1.05 mm (C66-183-21)	N/A Late 75 — FL, FLH
		27854-75	MAIN JET, 1.10 mm (C66-183-22)	N/A Late 75 — FL, FLH
		27855-75	MAIN JET, 1.15 mm (C66-183-23)	N/A Late 75 — FL, FLH
		27855-75	MAIN JET, 1.20 mm (C66-183-24)	N/A Late 75 — FL, FLH
	33	27859-71	SPRING, float	N/A 71 to 75 — FL, FLH
	34	27863-71	CHOKE PLATE	N/A 71 to 75 — FL, FLH
	35	27864-71	CHOKE SHAFT AND LEVER	N/A 71 to 75 — FL, FLH
	36	27865-71	PISTON, choke return spring	N/A 71 to 75 — FL, FLH
	37	27866-71	FRUITION SPRING, choke	N/A 71 to 75 — FL, FLH
	38	27888-71	SCREW, wire block, No. 8-36 (2)	N/A 71 to 75 — FL, FLH
	39	27725-71	IDLE JET, .60 mm	N/A 71 to 75 — FL, FLH
	40	27737-71	CLIP, fuel valve	N/A 71 to 75 — FL, FLH
	41	27748-71	FUEL VALVE, with clip	71 to 75 — FL, FLH
	42	27750-72	IDLE JET, .65 mm	N/A 74 & 75 — FL, FLH
	43	27752-71A	ACCELERATION PUMP	71 to 75 — FL, FLH
	44	27753-71	BOWL, MAIN PLUG	N/A 71 to 75 — FL, FLH
	45	33298-65	STUD, 5/16-24 x 1/2 (2)	71 to 75 — FL, FLH
	46	45092-65	CABLE GUIDE	71 to 75 — FL, FLH
	47	63579-62	LEFT TITING	71 to 75 — FL, FLH

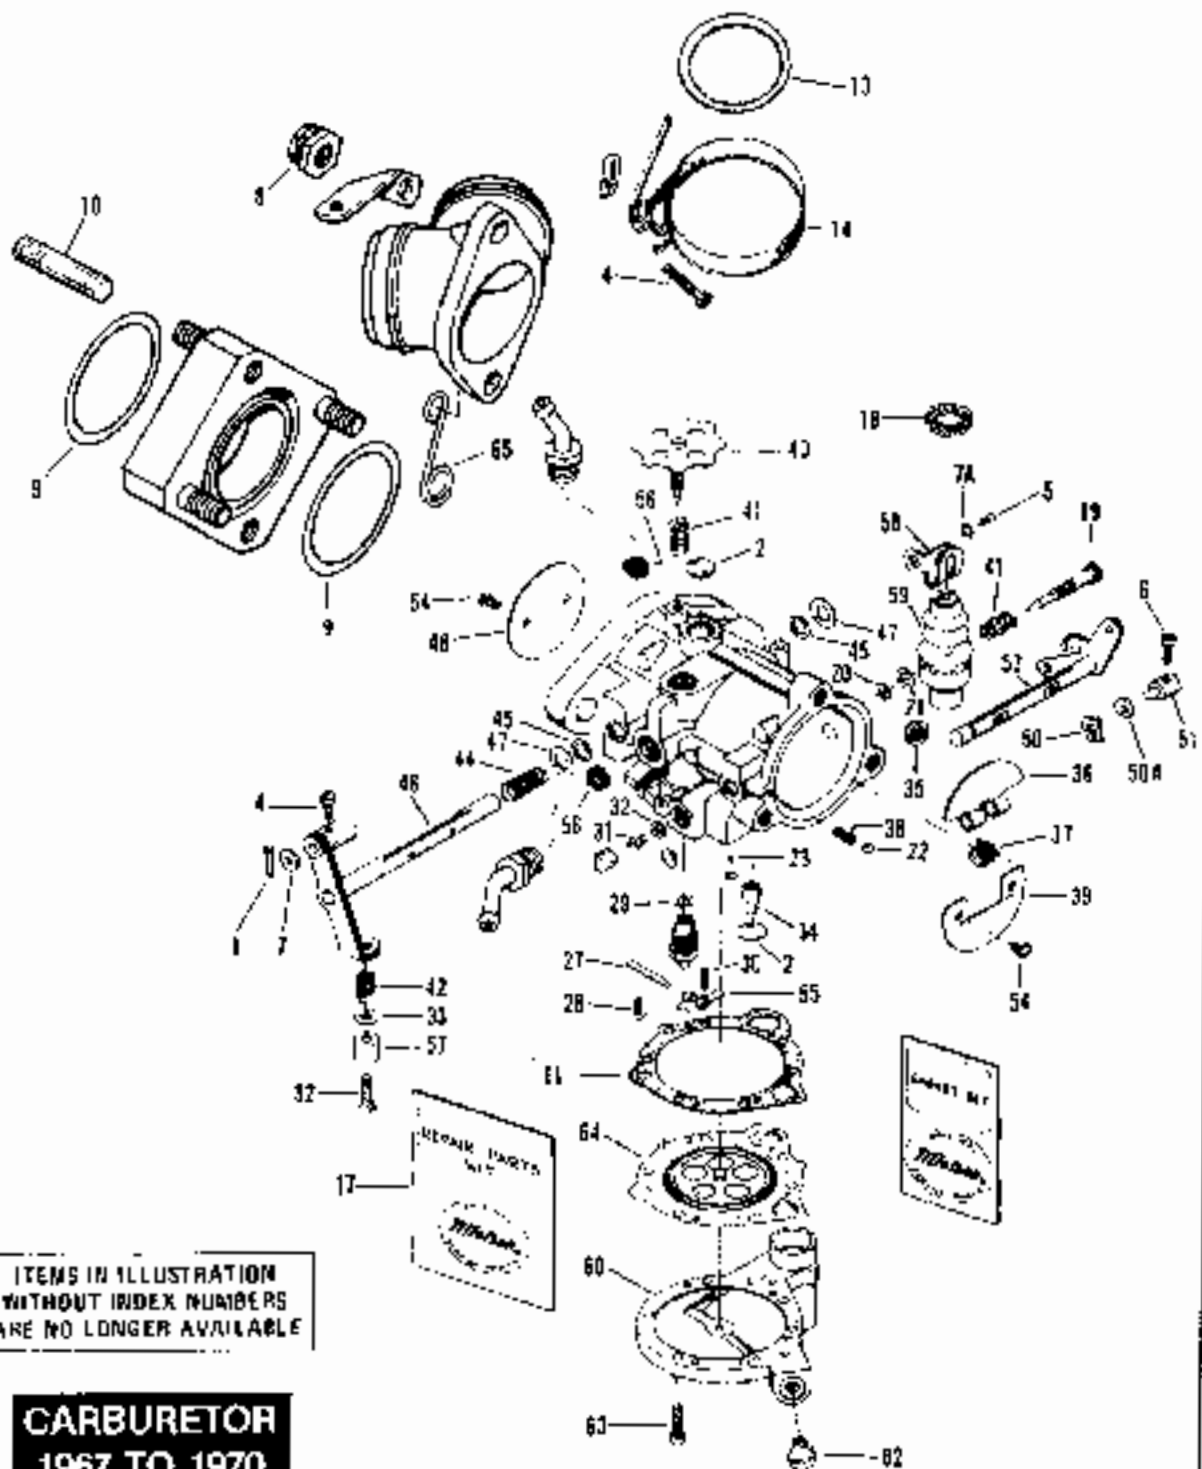

RETAIL PRICE	INDEX NO	PART NO	NAME	USED ON
	1	515	DIFFERENTIAL 1/16 x 3/4	67 to 70 — FI, FLH
	2	711	WELOCH PLUG, body (2)	N/A 67 to 70 — FL, FLH
	3	930	SCREW, No. 10-24 x 1-1/4 Positivite Hd.	67 to 70 — FL, FLH
	4	2540	SCREW, No. 4-30 x 1/4 Positivite Hd.	N/A 67 to 70 — FI, FLH
	5	2539	SCREW, No. 5-32 x 1/4 Positivite Hd. (2)	67 to 70 — FL, FLH
	6	6180W	WASHER, No. 2 x 3/8 x 1/32	67 to 70 — FI, FLH
	7A	6069	LOCKWASHER, No. 4	67 to 70 — FL, FLH
	8	7770W	LOCKNUT, 3/8-24 x 3/32 x 3/16 (3)	67 to 70 — FL, FLH
	9	11107	DRIVING carburetor adapter (2)	67 to 70 — FL, FLH
	10	27024-67	STUD, carburetor adapter — 2"	67 to 70 — FI, FLH
	11	27380-63L	G-RINGS, manifold (2)	67 to 70 — FL, FLH
	12	27093-67	CLAMP ASS'Y KNUX (2)	67 to 70 — FL, FLH
	13	27147-66	REPAIR PARTS KIT	67 to 70 — FL, FLH
	14	27347-62	SPRING, accelerator pump plunger	N/A 67 to 70 — FL, FLH
	15	27357-66	SCREW, intermediate speed mixture adj.	N/A 67 to 70 — FL, FLH
	16	27353-66	PACKING RING, intermediate speed adj. screw	N/A 67 to 70 — FL, FLH
	17	27354-66	WASHER, intermediate speed adj. screw	N/A 67 to 70 — FL, FLH
	18	27406-6E	BALL, choke shaft friction spring	N/A 67 to 70 — FI, FLH
	19	27407-66	CHECK BALL	N/A 67 to 70 — FI, FLH
	20	27585-6E	PIA, inlet valve lever	N/A 67 to 70 — FL, FLH
	21	27586-66	RETAINING SCREW, inlet valve lever pin	N/A 67 to 70 — FL, FLH
	22	27588-66	GASKET, inlet seat	N/A 67 to 70 — FI, FLH
	23	27589-65	SPRING, inlet valve lever	N/A 67 to 70 — FL, FLH
	24	27619-65	MAIN JET — 3 USED	N/A 67 to 70 — FI, FLH
	25	27640-66	GASKET, main jet	N/A 67 to 70 — FL, FLH
	26	27644-66	WASHER, idle speed screw	N/A 67 to 70 — FI, FLH
	27	27658-66	CHECK VALVE ASSEMBLY	N/A 67 to 70 — FL, FLH
	28	27661-66	SEAL, choke shaft	N/A 67 to 70 — FI, FLH
	29	27668-66	CHOKE DISC RELIEF VALVE	N/A 67 to 70 — FI, FLH
	30	27669-66	SPRING, choke relief valve	N/A 67 to 70 — FL, FLH
	31	27671-65	FRICTION SPRING, choke shaft	N/A 67 to 70 — FI, FLH
	32	27673-65	CHECK DISC	67 to 70 — FL, FLH
	33	27686-66	SCREW, idle mixture adjusting	N/A 67 to 70 — FI, FLH
	34	27688-61	SPRING, idle and intermediate adj. screws (2)	N/A 67 to 70 — FL, FLH
	35	27701-69	SPRING, throttle lever stop screw	N/A 67 to 70 — FL, FLH
	36	27703-6E	SPRING, throttle shaft	N/A 67 to 70 — FL, FLH
	37	27707-66	SEAL, throttle shaft	N/A 67 to 70 — FL, FLH
	38	27708-67	THROTTLE SHAFT AND LEVER	N/A 67 to 70 — FI, FLH
	39	27712-66	SEAL WASHER, throttle shaft	N/A 67 to 70 — FL, FLH
	40	27714-66	THROTTLE DISC	N/A 67 to 70 — FL, FLH
	41	27716-65	RETAINING CLIP, choke lever wire hook	N/A 67 to 70 — FL, FLH
	42A	27716-61	SPRING WASHER	N/A 67 to 70 — FI, FLH
	43	27716-67	WIRE BLOK, choke lever	N/A 67 to 70 — FL, FLH
	44	27717-66	SCREW, throttle lever stop	N/A 67 to 70 — FL, FLH
	45	27718-67	CHOKE SHAFT AND LEVER	N/A 67 to 70 — FL, FLH
	46	27720-61	SCREW, with lockwasher — choke & throttle discs (4)	N/A 67 to 70 — FI, FLH
	47	27740-66	LEVER, inlet valve	N/A 67 to 70 — FL, FLH
	48	27746-6E	INLET SCREEN (2)	N/A 67 to 70 — FI, FLH
	49	27747-66	CLIP, idle adj. screw	N/A 67 to 70 — FL, FLH
	50	27755-66	LEVER, accelerating pump	N/A 67 to 70 — FL, FLH
	51	27760-65	ACCELERATING PUMP	N/A 67 to 70 — FI, FLH
	52	27804-66A	DIAPHRAGM COVER	N/A 67 to 70 — FL, FLH
	53	27806-66	GASKET, diaphragm cover	N/A 67 to 70 — FI, FLH
	54	27812-66	PLATE SCREW, diaphragm cover	N/A 67 to 70 — FL, FLH
	55	27814-66	RETAINING SCREW, diaphragm cover (3)	N/A 67 to 70 — FL, FLH
	56	27816-66	DIAPHRAGM	N/A 67 to 70 — FL, FLH
	57	45292-65	HOSE CLIP on manifold stud	67 to 70 — FL, FLH


AIR CLEANER AND CHOKE LATE 1978 & LATER

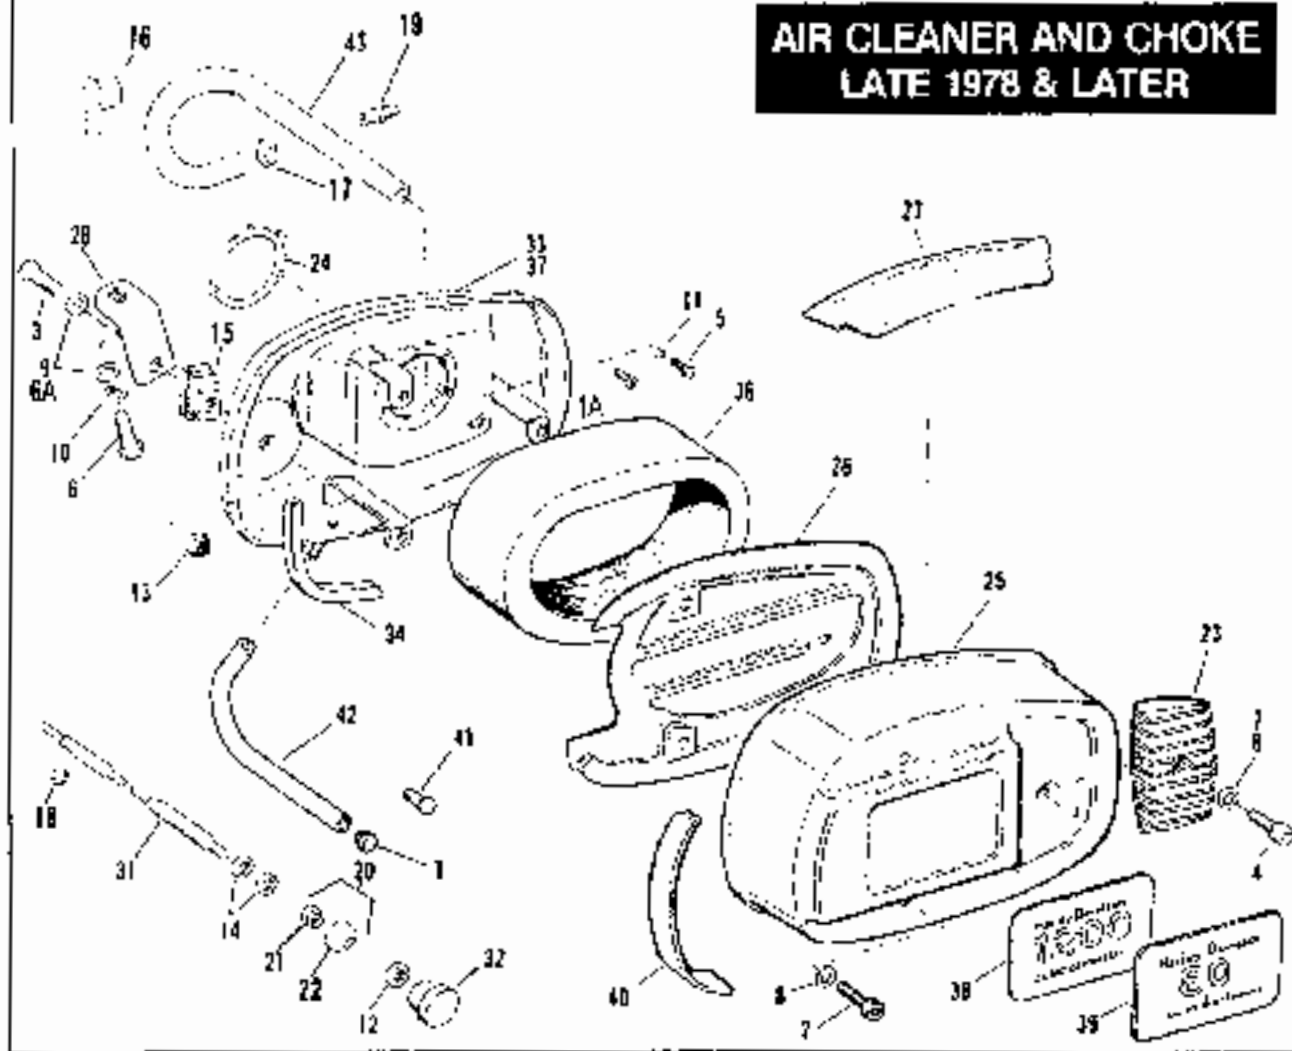

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	725	PLUG, backing plate hose	82 to * FL-80, Classic
	1A	2774	SCREW, 1/4-20 x 5/8 hex. cap. hd. (3)	Late 78 to * FL, FLH, FLH-80, Classic
	2	3413	SCREW, 5/16-18 x 5/8 socket hd. (4)	Late 78 to 83 FL, FLH, FLH-80, Classic
	3	3447	BOLT, 5/16-18 x 2 1/4 hex. hd. (2)	83 to * FL, FLH, FLH-80, Classic
	4	3456	SCREW, 5/16-18 x 1 socket hd.	78 to 82 — Classic 84 to * FLH-80
	5	37673	BOLT, 1/4-20 x 5/8 hex. hd. (2)	78 to * FL, FLH, FLH-80, Classic
	6	2987	BOLT, 5/16 x 3/4 hex. hd. (4) — 1980 & later	Late 78 to * FL, FLH, FLH-80, Classic
	6A	501E	WASHER, 11/32 x 1 1/2 x 1 1/2 (4)	Late 82 to * FLH-80
	7	5045	WASHER, 5/16 x 9/16 x 1 1/2 (2) (jack)	79 to 82 — Classic 84 to * FLH-80
	8	5065	WASHER, 5/16 x 5/8 x 1 1/2 (steel & rubber) (3)	Late 78 to * FL, FLH, FLH-80, Classic
	9	6762	WASHER, 5/16 x 1 1/2 x 1 1/2 (4)	Late 78 to Early 80 — FL, FLH, FLH-80, Classic
	10	7341	LOCKWASHER, 5/16 (2)	Late 78 to * FL, FLH, FLH-80, Classic
	11	7230	LOCKWASHER, 1/4 external. (3)	79 to * FL, FLH, FLH-80, Classic
	12	7638	NUT, No. 10-22 x 1 1/2 x 3/8 hex.	Late 78 to * FL, FLH, FLH-80, Classic
	13	7710W	LOCKWUT, 5/16-18 x 1 1/2 x 1 1/2 hex. (2)	Late 79 to * FL, FLH, FLH-80, Classic
	14	7744	JAMNUT, 5/16-24 x 3/8 x 1 1/2 hex. (2)	Late 78 to * FL, FLH, FLH-80, Classic
	15	9100	CLIP NUT, rear bracket (2)	80 to * FL, FLH, FLH-80, Classic
	16	9979	CLIP, bracket base	Late 78 to * FL, FLH, FLH-80, Classic
	17	10070A	CLAMP, hose	Late 78 to 83 — FL, FLH, FLH-80, Classic
	18	11013	RETAINING RING, choke cable	Late 78 to * FL, FLH, FLH-80, Classic
	19	29260-78	FITTING, crankcase to air cleaner hose	Late 78 to 83 — FL, FLH, FLH-80, Classic
	20	27452-82	NUT KIT, choke cable Consists of:	Late 78 to * FL, FLH, FLH-80, Classic
	21	27450-82	NUT, 5/16-24 hex. machined	
	22	27451-82	WORMWHEEL (black)	
	23	29357-78A	SH LL, air intake	79 to 82 — Classic 84 to * FLH-80
	24	29058-77	GASKET, air cleaner to carburetor	Late 78 to * FL, FLH, FLH-80, Classic
	25	29061-78	COVER, air cleaner	Late 78 to * FL, FLH, FLH-80, Classic
	26	29064-78	BAFFLE	Late 78 to * FL, FLH, FLH-80, Classic
	27	29071-79	SAFETY LABEL, air cleaner	79 to * FL, FLH, FLH-80, Classic
	28	29113-78	BRACKET, rear	Late 78 & 79 — FL, FLH, FLH-80, Classic
		29113-79A	BRACKET, rear	Early 80 to * FL, FLH, FLH-80, Classic
		29114-78	BRACKET, front	Late 78 & 79 — FL, FLH, FLH-80, Classic
		29114-79A	BRACKET, front	80 to * FL, FLH, FLH-80, Classic
	31	29213-79	CONTROL CABLE, choke	Late 78 to * FL, FLH, FLH-80, Classic
	32	29214-79	KNOB, choke wire	Late 78 to * FL, FLH, FLH-80, Classic
	33	29239-78	BACK PLATE, air cleaner	Late 78 to Early 80 — FL, FLH, FLH-80, Classic
	34	29252-78	SEAL STRIP, air cleaner backing plate	Late 78 to Early 80 — FL, FLH, FLH-80, Classic
		29252-79	SEAL STRIP, air cleaner backing plate	Late 80 to * FL, FLH, FLH-80, Classic
	36	29255-79	FILTER ELEMENT	Late 78 to * FL, FLH, FLH-80, Classic
	37	29261-80	BACK PLATE, air cleaner	Late 80 to * FL, FLH, FLH-80, Classic
	38	29270-78	TRIM, air cleaner "1200"	Late 78 to 80 — FL, FLH, FLH-80, Classic
	39	29272-78	TRIM, air cleaner "80"	78 to * FLH-80, Classic
	40	29290-78	TRIM STRIP, air cleaner cover (black)	Late 78 to * FL, FLH, FLH-80, Classic
	41	42269-78	CLEANING, backing plate hose	Late 82 to 87 — FL, FLH, FLH-80, Classic
	42	52591-82	HOSE, air cleaner backing plate	Late 82 to * FL, FLH, FLH-80, Classic


NOTE: hose is sold only in bulk length under the following part number. Cut to required length.

43	6250C-68	HOSE, 3/8" O.D. x 5/8" I.D. reinforced rubber (25' in.)	Late 78 to * FL, FLH, FLH-80, Classic
----	----------	---	---------------------------------------

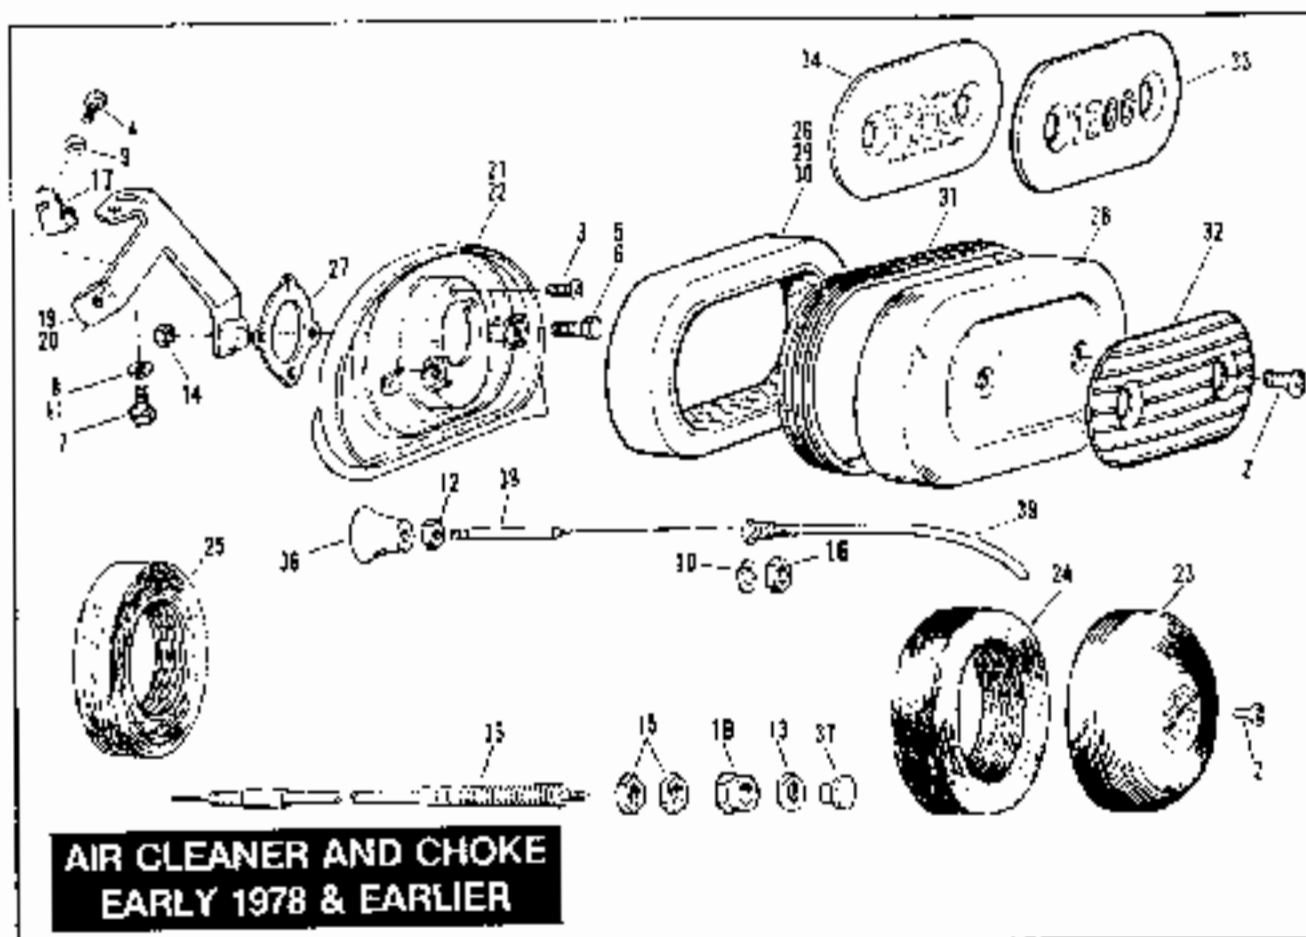


RETAIL PRICE	INDEX NO	PART NO	NAME	USED ON
	2	2402W	SCREW, 5/16-24 x 1 1/2 FH 1-A, hd	56 to Early 78 — FL, FLH
	3	2750	SCREW, 1/4-20 x 1 1/2 Phos hd 1-A	67 to Early 78 — FL, FLH
	4	3729	BOLT, 1/4-28 x 5/8 hex hd	71 to Early 78 — FL, FLH
	5	3765	BOLT, 1/4-28 x 5/8 hex hd	67 to 77 — FL, FLH
	6	3825	BOLT, 1/4-28 x 1 hex hd	Early 78 — FL, FLH
	7	3957	BOLT, 5/16-18 x 3/4 hex hd	Late 77 to Early 78 — FL, FLH
	8	6707	WASHER, 5/16 x 1 1/2 x 1/16	Late 77 to Early 78 — FL, FLH
	9	7056	LOCKWASHER, 1/4	71 to Early 78 — FL, FLH
	10	7058	LOCKWASHER, 3/8	67 to 78 — FL, FLH
	11	7041	LOCKWASHER, 5/16	67 to Early 77 — FL, FLH
	12	7618	NUT, No. 8-32 x 1/8 x 5/16 hex	66 to Early 78 — FL, FLH
	13	7636	NUT, No. 10-32 x 1/8 x 3/8 hex	71 to Early 79 — FL, FLH
	14	7583	LOCKNUT, 1/4-28 x 5/16 x 7/16 hex	57 to Early 78 — FL, FLH
	15	7744	ARMNUT, 5/16-24 x 3/16 x 1-2 hex 121	71 to Early 79 — FL, FLH
	16	7814W	ARMNUT, 3/8-24 x 7/32 x 3/16 hex 121	67 to 78 — FL, FLH
	17	9957	CLIP, choke wire	N/A 71 to Early 78 — FL, FLH
	18	27452-82	NUT KIT, choke cable Consists of: 27450-82 NUT, 5/16-24 hex. 27451-82 SPACWASHER, 5/16	71 to Early 78 — FL, FLH
	19	29018-73A	SUPPORT BRACKET	N/A 71 to 77 — FL, FLH
	20	29018-78	SUPPORT BRACKET	N/A Early 78 — FL, FLH
	21	29020-71	BACK PLATE, air cleaner	N/A 71 to Early 75 — FL, FLH
	22	29024-73	BACK PLATE, air cleaner	N/A Late 75 to Early 78 — FL, FLH
	23	29020-56	COVER, air cleaner	N/A 56 to 66 — FL, FLH
	24	29036-41A	NETS, air cleaner	N/A 41 to 66 — FL, FLH
	25	29036-56	FLTER ELEMENT, wire mesh type	N/A 57 to 71 — FL, FLH
	26	29036-77	FILTER ELEMENT, foam type, w/screen (2-1/8" wide)	67 to Early 78 — FL, FLH
	27	29058-77	BASEBL, air cleaner back plate	Late 77 to Early 78 — FL, FLH
	28	29084-73	COVER, air cleaner	67 to Early 78 — FL, FLH
	29	29086-73	FLTER ELEMENT, foam type, w/screen (3" wide)	Late 75 to 78 — FL, FLH
	30	29086-75	FILTER ELEMENT, foam type, w/screen (3-1/2" wide)	77 to Early 78 — FL, FLH
	31	29144-77	FIBER SEAL, air cleaner cover	Late 77 to Early 78 — FL, FLH
	32	29235-69	TRIM, air cleaner	N/A 67 to 76 — FL, FLH
	33	29235-75	TRIM, air cleaner — 11200 cc	N/A 76 & 77 — FL, FLH
	34	29236-73	TRIM, air cleaner — 11200 cc	N/A Early 78 — FL, FLH
	35	29212-71	CONTROL CABLE, choke	71 to Early 78 — FL, FLH
	36	29214-67A	KNOB, choke wire	67 to 70 — FL, FLH
	37	29214-71	KNOB, choke wire	71 to Early 78 — FL, FLH
	38	29216-67	WIRE, choke control	N/A 67 to 70 — FL, FLH
	39	29220-67	THROTTLE, choke wire	N/A 67 to 70 — FL, FLH

**ALTERNATOR
1970 & LATER**

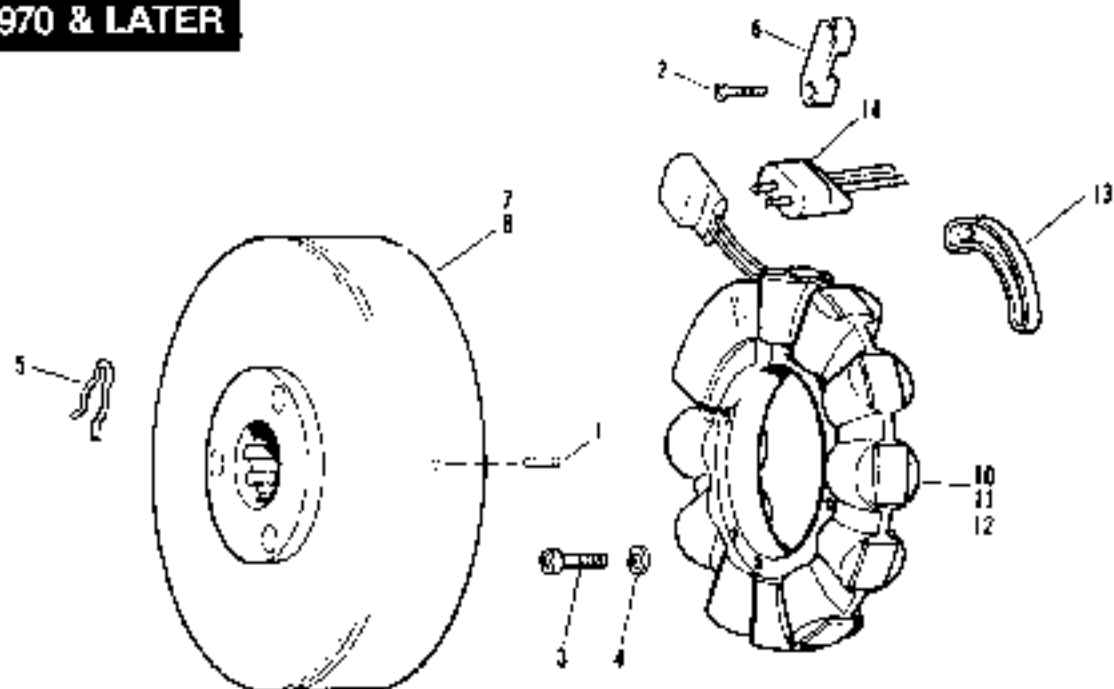


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	013	ROTOR PIN, rotor	76 to 81 — FL, FLH, FLH-80, Classic
	2	2218W	SCREW, No. 4-24 x 1/2 Phillips (2)	71 to * — FL, FLH, FLH-80, Classic
	3	2551	SCREW, No. 10-24 x 7/16 (2) (4)	70 to * — FL, FLH, FLH-80, Classic
	4	7116	LOCKWASHER, No. 10 (intermediate) (4)	Early 70 — FL, FLH
	5	11064	RETAINING SPRING, inter-magnet (2)	76 to 81 — FL, FLH, FLH-80, Classic
	6	29954-71	ROTOR ASSEMBLY	71 to * — FL, FLH, FLH-80, Classic
	7	29956-73	ROTOR ASSEMBLY	70 to 80 — FL, FLH, 76 to 81 — FLH-80, Classic
	8	29957-81A	ROTOR ASSEMBLY	62 to * — FLH-80, Classic
	9	29965-70	STATOR	70 to 75 — FL, FLH
	10	29965-75	STATOR	71 to 80 — FL, FLH, FLH-80, Classic
	11	29967-81A	STATOR	81 to * — FLH-80, Classic
	12	29988-73	LOCKING PLATE, stator (2)	70 to * — FL, FLH, FLH-80, Classic
	13	71671-75	MALE FLUG, stator w/3 wires	76 to 85 — FL, FLH, FLH-80, Classic

GENERATOR
1958 TO 1969

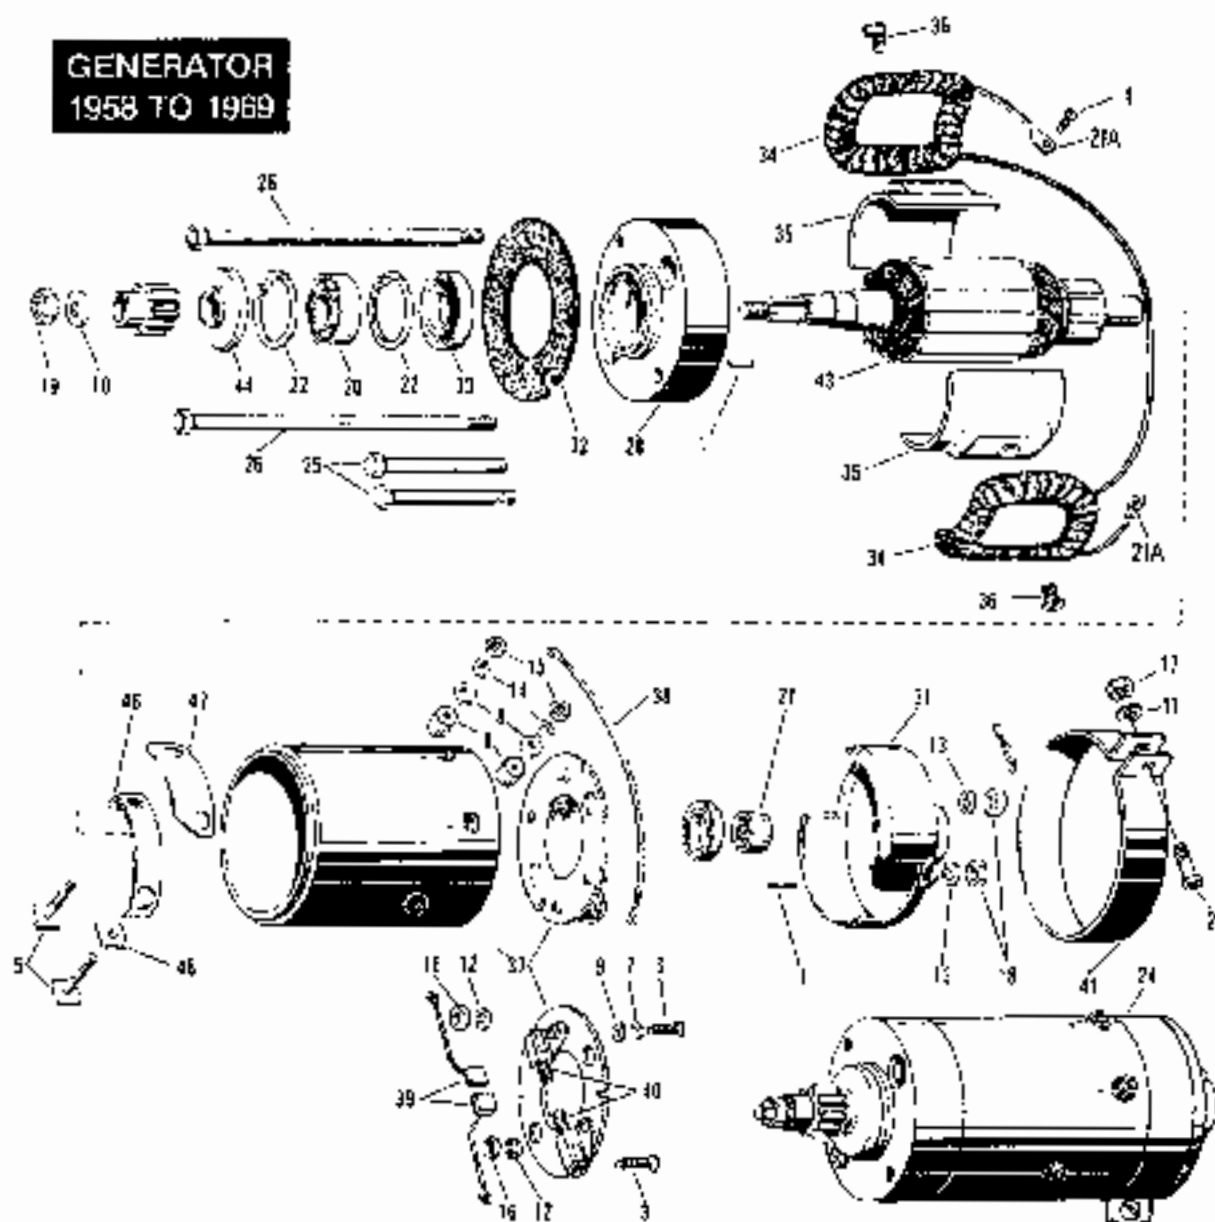


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	603	FOUR PIN (2)	58 to 69 — FL, FLH
	2	1374	SCREW, 1/4-28 x 3/4 Precision part nut	65 to 69 — FL, FLH
	3	2537	SCREW, No. 10-32 x 5/8 Precision part nut (2)	58 to 69 — FL, FLH
	4	7588	SCREW, No. 6-32 x 1/4 Precision part nut (4)	58 to 69 — FL, FLH
	5	2699W	SCREW, No. 10-32 x 1/8 sq. head (2)	58 to 69 — FL, FLH
	6	5911	INSULATING BUSHING (2)	58 to 69 — FL, FLH
	7	5165W	WASHER, No. 10 x 1/8 x 1/16-32	58 to 69 — FL, FLH
	8	6185	WASHER, No. 10 x 1/2 x 1/16-32 (2)	58 to 69 — FL, FLH
	9	5193	WASHER, No. 10 x 15/32 x 1/32	58 to 69 — FL, FLH
	10	6324W	WASHER, 5/16 x 11/16 x 3/32	58 to 69 — FL, FLH
	11	7036	LOCKWASHER, 1/4	66 to 69 — FL, FLH
	12	7069	LOCKWASHER, No. 10 (2)	58 to 69 — FL, FLH
	13	7124	LOCKWASHER, 1/4, int. lock (2)	58 to 69 — FL, FLH
	14	7220	LOCKWASHER, No. 10 ext. lock (2)	58 to 69 — FL, FLH
	15	7534	NUT, No. 10-32 x 1/8 x 5/16 hex. (brass) (2)	58 to 69 — FL, FLH
	16	7638	NUT, No. 10-32 x 1/8 x 3/8 hex. (4)	58 to 69 — FL, FLH
	17	7676	NUT, 1/4-28 x 3/16 x 7/16 hex.	65 to 69 — FL, FLH
	18	7683	LOCKNUT, 1/4-28 x 5/16 x 7/16 hex.	58 to 69 — FL, FLH
	19	7726	LOCKNUT, 5/16-24 x 1/2-32 x 1/2 hex.	58 to 69 — FL, FLH
	20	5007	ARMATURE BEARING gear end	58 to 69 — FL, FLH
	21	9054	ARMATURE BEARING commutator end	N/A
	21A	9521	WIRE TERMINAL, No. 6 hole	58 to 69 — FL, FLH
	22	11004	RETAINING PIN (2)	58 to 69 — FL, FLH
	24	28975-65A	GENERATOR, less drive gear 12 V.	65 to 69 — FL, FLH
	25	30011-58	SCREW, end cover (2)	56 to 69 — FL, FLH
	26	30012-58	SCREW, frame (2)	56 to 69 — FL, FLH
	28	30035-61	END PLATE, generator frame	58 to 69 — FL, FLH
	31	30132-61A	END COVER	61 to 69 — FL, FLH
	32	30143-58	GASKET generator mounting	58 to 69 — FL, FLH
	33	30145-46A	OIL SEAL, armature	58 to 69 — FL, FLH
	34	30201-56A	FIELD COIL	N/A
		30201-65	FIELD COIL — 12 V.	65 to 69 — FL, FLH
	35	30276-58	POLE PIECE (2)	58 to 69 — FL, FLH
	36	30280-58	SCREW, pole piece (2)	58 to 69 — FL, FLH
	37	30369-66	BRUSH HOLDER PLATE ASSEMBLY	66 to 69 — FL, FLH
	38	30421-58A	CABLE, pos. live brush	66 to 69 — FL, FLH
	39	30426-58	PAIR OF GENERATOR BRUSHES	58 to 69 — FL, FLH
	40	30453-58	BRUSH SPRING (2)	58 to 69 — FL, FLH
	41	30475-66	BRUSH COVER	66 to 69 — FL, FLH
	43	30851-61	ARMATURE — 6 V.	N/A
		30951-65A	ARMATURE — 12 V.	65 to 69 — FL, FLH
	44	31035-58	OL DEFLECTOR, gear end	58 to 69 — FL, FLH
	46	31096-58	C. F. terminal post	58 to 69 — FL, FLH
	47	31097-58	INSULATOR, terminal	58 to 69 — FL, FLH
	48	31098-58	INSULATOR terminal bracket	58 to 69 — FL, FLH

ELECTRONIC IGNITION SYSTEM **1980 & LATER**


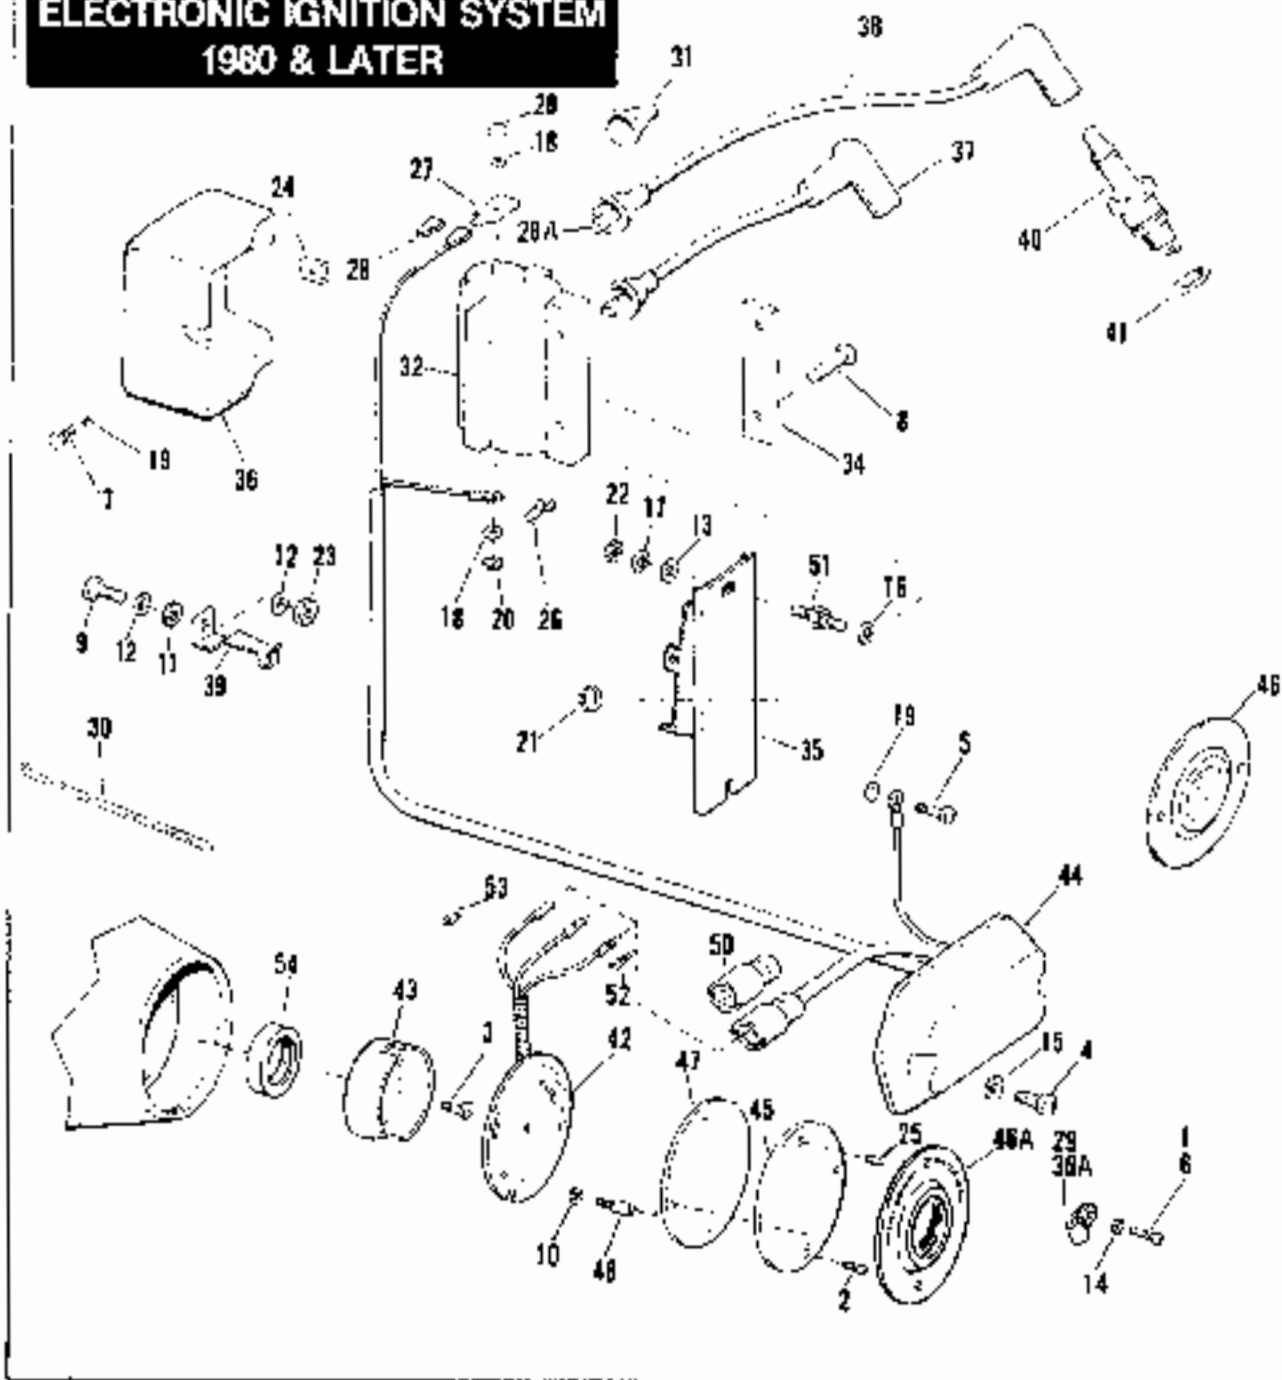


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	1301	SCREW, No. 1/4-20 x 1-1/4 Phynix, hd.	80 — FLH, FLH-80
	2	1601	SCREW, No. 8-32 x 1/2 hd, 21	80 to * — FLH, FLH-80, Classic
	3	2611B	SCREW, No. 10-32 x 1/2 hex, hd.	80 to * — FLH, FLH-80, Classic
	4	2959	SCREW, No. 10-24 x 7/8 Pan drive pan hd. (2)	80 to * — FLH, FLH-80, Classic
	5	2661W	SCREW, No. 10-24 x 1/2 self tapping Phynix hd.	80 to * — FLH, FLH-80, Classic
	6	2629	SCREW, 1/4-20 x 1-1/4 hex, socket hd. (used locking)	80 & Early 81 — FLH, FLH-80, Classic
	7	3473	SCREW, No. 10-32 x 1/2 hex, washer hd. (2)	80 to * — FLH, FLH-80, Classic
	8	3825	BOLT, 1/4-28 x 1-1/4 hex, hd. (2)	Late 82 to * — FLH-80, Classic
		3842	BOLT, 1/4-28 x 1-1/4 hex, hd. (2)	80 to Early 82 — FLH, FLH-80, Classic
	9	4726	BOLT, 7/16-20 x 1-1/2 hex, hd.	90 to * — FLH, FLH-80, Classic
	10	6132	WASHER, No. 8 x 7/16 x 3/64 (2)	80 to 82 — FLH, FLH-80, Classic
		6194	WASHER, 10/64 x 7/16 x 1/64 (2)	83 to * — FLH-80
	11	6437HW	WASHER, 7/16 x 1-1/8 x 1/16 (3) reg. d. 1	80 to * — FLH, FLH-80, Classic
	12	5518HW	WASHER, 7/16 x 1-1/8 x 1/8 (2)	80 to * — FLH, FLH-80, Classic
	13	6702	WASHER, 5/16 x 11/16 x 1/16 (2)	80 to Early 82 — FLH, FLH-80, Classic
	14	6703	WASHER, 1/4 x 5/8 x 1/16	90 to * — FLH, FLH-80, Classic
	15	6716	WASHER, No. 10 x 7/2 x 3/64 (2, 4 — Late 84 & later)	80 to * — FLH, FLH-80, Classic
	16	7030	LOCKWASHER, 1/4 (2)	Late 82 to * — FLH-80, Classic
		7039	LOCKWASHER, 3/8 (2)	80 to Early 82 — FLH, FLH-80, Classic
	17	7041	LOCKWASHER, 5/16 (2)	80 to Early 82 — FLH, FLH-80, Classic
	18	7389	LOCKWASHER, No. 10 (2)	80 to * — FLH, FLH-80, Classic
	19	7116	LOCKWASHER, No. 10 internal (2)	80 to * — FLH, FLH-80, Classic
	20	7636	NUT, No. 10-32 x 1/8 x 3/8 hex (2)	80 to * — FLH, FLH-80, Classic
	21	7683	LOCKNUT, 1/4-28 x 5/16 x 7/15 hex (2)	80 to * — FLH, FLH-80, Classic
	22	7713	NUT, 5/16-24 x 1/4 x 1/2 hex (2)	80 to Early 82 — FLH, FLH-80, Classic
	23	7825	LOCKNUT, 7/16-20 x 7/16 x 5/8 hex	80 to * — FLH, FLH-80, Classic
	24	8115K	SPEED NUT, 303 cover (2)	80 to * — FLH, FLH-80, Classic
	25	8535	POPRIVET, 3/10 x 3/8 x 3/8 dia. hd. (4)	80 to * — FLH, FLH-80, Classic
	26	5857	WIRE TERMINAL, ring type — No. 10 round — #16-22 wire	80 to * — FLH, FLH-80, Classic
	27	5881	TERMINAL ADAPTER, spark coil	80 to * — FLH, FLH-80, Classic
	28	9901	CONNECTOR, wire	80 to * — FLH, FLH-80, Classic
	29A	9909	TERMINAL, spark plug cable (2)	80 to * — FLH, FLH-80, Classic
	29	9965W	CLAMP, ground wire	90 & Early 81 — FLH, FLH-80, Classic
	30	10306	CABLE STRAP (2)	80 to * — FLH, FLH-80, Classic
	30A	10346	CLAMP, ignition wire	Late 81 to * — FLH-80, Classic
	31	31607-64	RUBBER CAP, spark plug cable (2)	80 to * — FLH, FLH-80, Classic
	32	31608-83	SPARK COIL	80 to * — FLH, FLH-80, Classic
	34	31727-72	PLATE, spark coil	80 to * — FLH, FLH-80, Classic
	35	31728-78A	BRACKET, spark coil	80 to Early 82 — FLH, FLH-80, Classic
	36	31809-78A	SPARK COIL COVER (includes item 7)	80 to * — FLH, FLH-80, Classic
	37	31960-65B	SPARK PLUG CABLE, 5 1/2 ft.	80 to * — FLH, FLH-80, Classic
	38	31981-65B	SPARK PLUG CANDLE, 16 in.	80 to * — FLH, FLH-80, Classic
	39	32000-87A	BRACKET, spark plug cable	80 to * — FLH, FLH-80, Classic
	40	32311-83	SPARK PLUGS (bulk package 12 — SR6A)	80 to Early 82 — FLH, FLH-80, Classic
		32312-78A	SPARK PLUG, No. 58L — 0.040 gap (2)	Late 82 to * — FLH-80, Classic
	41	32342-58	BASKET, spark plug (2)	80 to * — FLH, FLH-80, Classic
	42	32400-83A	SENSOR ASSEMBLY	80 to * — FLH, FLH-80, Classic
	43	32431-80	TRIGGER ROTOR	80 to 83 — FLH, FLH-80, Classic
		32432-83	TRIGGER ROTOR	84 to * — FLH-80
	44	32508-81	IGNITION MODULE ASSEMBLY	80 to * — FLH, FLH-80, Classic
	45	32509-80	INNER COVER, timer	80 to * — FLH, FLH-80, Classic
	46	32511-76	OUTER COVER, timer (No. 1)	80 to 82 — FLH, FLH-80, Classic
	46A	32521-82	OUTER COVER, timer	83 to * — FLH-80
	47	32551-80	BASKET, ignition timer	80 to * — FLH, FLH-80, Classic
	48	32800-82	STUD, timer plate (2)	80 to * — FLH-80, Classic
	49	77051-77	CONNECTOR, pin and socket	80 to * — FLH, FLH-80, Classic
	51	72341-86A	STUD, spark coil bracket to frame (2)	80 to Early 82 — FLH, FLH-80, Classic
	52	74535-77A	FIN, ignition module (2)	80 to * — FLH, FLH-80, Classic
	53	74539-77A	SOCKET, ignition module	80 to * — FLH, FLH-80, Classic
	54	83185-81	SEAL	80 to * — FLH, FLH-80, Classic


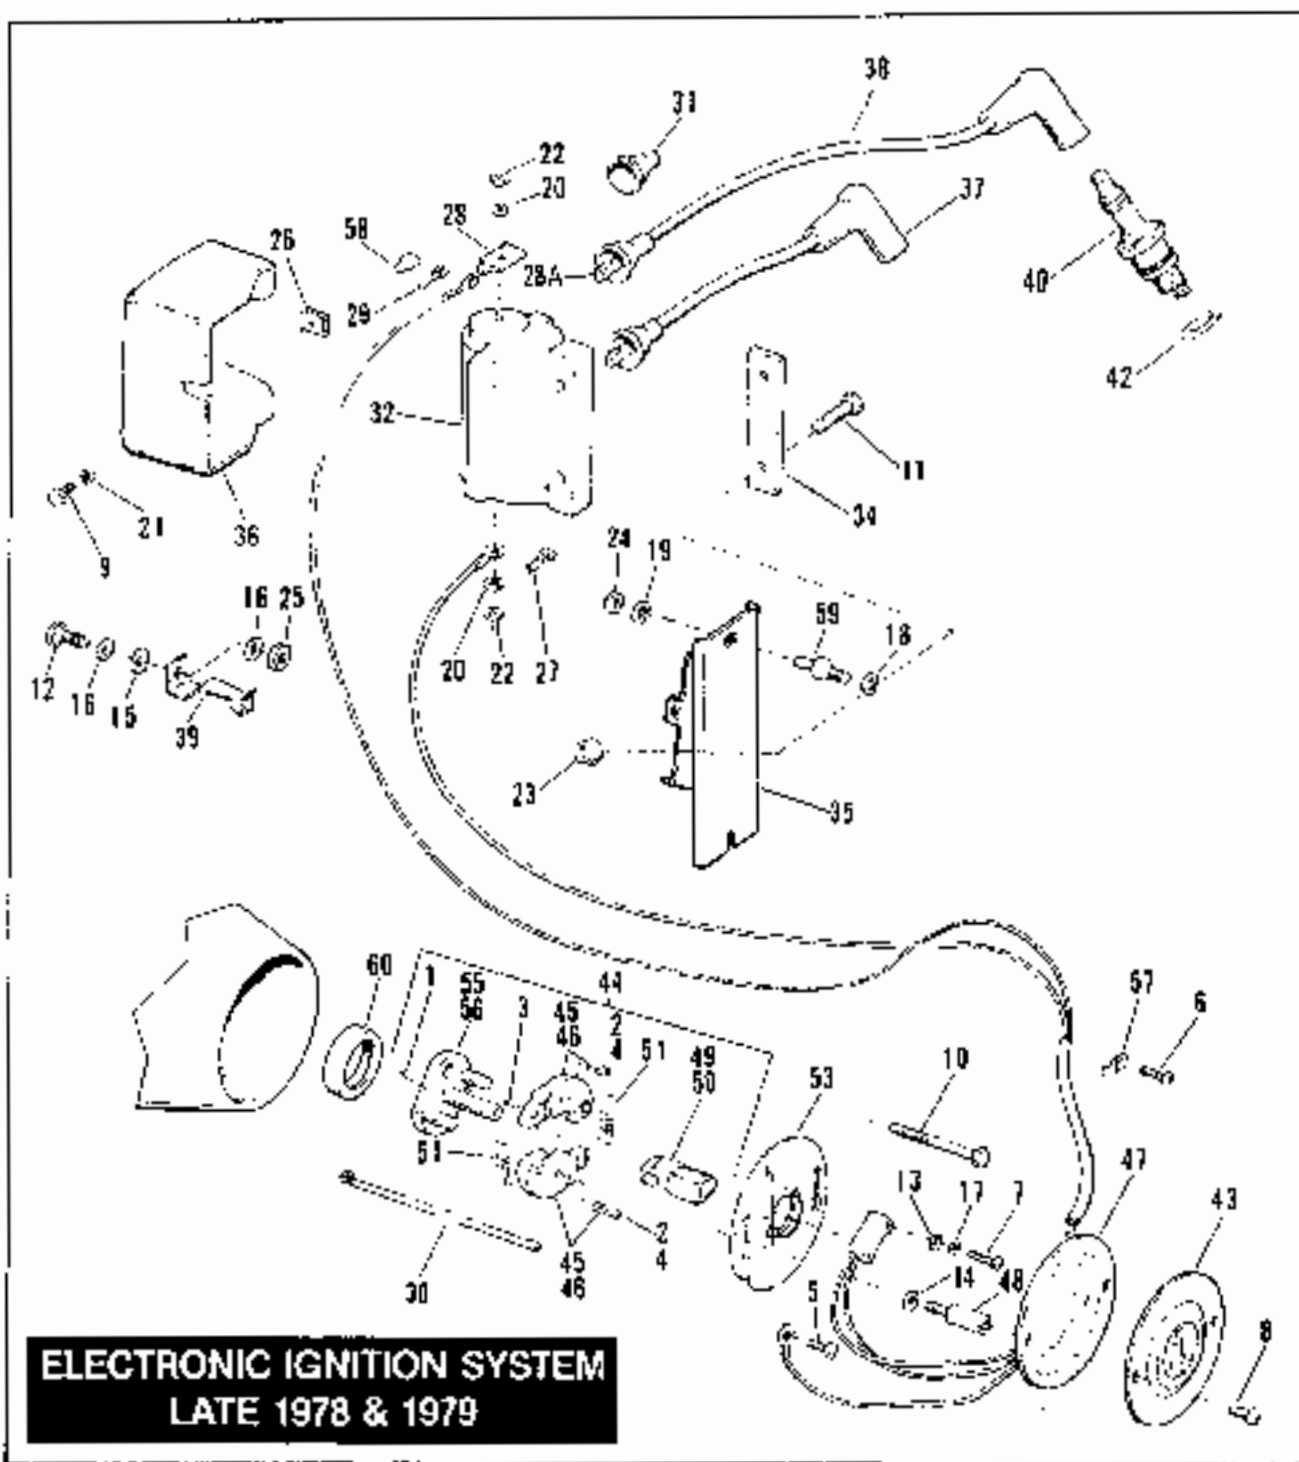


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	815	ROTOR, P/N, plate	Late 78 & 79 — FLH, FLH-80, Classic
	2	823	ROTOR, P/N, weight (2)	Late 78 & 79 — FLH, FLH-80, Classic
	3	823	ROTOR, P/N, plate	Late 78 & 79 — FLH, FLH-80, Classic
	4	835	PIN, breaker weight (use w/ 32529-80) (2)	Late 78 & 79 — FLH, FLH-80, Classic
	5	1047	SCREW, No. 8-32 x 1/4 in. hd.	Late 78 & 79 — FLH, FLH-80, Classic
	6	1331	SCREW, 1/4-20 x 1-1/4 in. hd. (2)	Late 78 & 79 — FLH, FLH-80, Classic
	7	2594	SCREW, No. 4-40 x 5/8 in. hd. (2)	Late 78 & 79 — FLH, FLH-80, Classic
	8	2645	SCREW, No. 8-32 x 3/4 in. hd. (2)	Late 78 & 79 — FLH, FLH-80, Classic
	9	3470	SCREW, No. 10-32 x 1/2 in. washer hd. (2)	Late 78 & 79 — FLH, FLH-80, Classic
	10	3570T	SCREW, No. 10-32 x 2 hex. hd.	Late 78 & 79 — FLH, FLH-80, Classic
	11	5947	BOLT, 1/4-28 x 1-1/2 in. hd. (2)	Late 78 & 79 — FLH, FLH-80, Classic
	12	4796	BOLT, 7/16-20 x 1-1/2 in. hd.	Late 78 & 79 — FLH, FLH-80, Classic
	13	6005	WASHER, No. 4 x 1/4 x 1/32 (2)	Late 78 & 79 — FLH, FLH-80, Classic
	14	6182	WASHER, No. 8 x 7/16 x 3/64 (2)	Late 78 & 79 — FLH, FLH-80, Classic
	15	6497HW	WASHER, 7/16 x 1-1/8 x 1/16 (serrated)	Late 78 & 79 — FLH, FLH-80, Classic
	16	6516HW	WASHER, 7/16 x 1-1/8 x 1/8 (2)	Late 78 & 79 — FLH, FLH-80, Classic
	17	6959	LOCKWASHER, No. 4 (2)	Late 78 & 79 — FLH, FLH-80, Classic
	18	7036	LOCKWASHER, 3/8 (2)	Late 78 & 79 — FLH, FLH-80, Classic
	19	7041	LOCKWASHER, 5/16 (2)	Late 78 & 79 — FLH, FLH-80, Classic
	20	7063	LOCKWASHER, No. 10 (2)	Late 78 & 79 — FLH, FLH-80, Classic
	21	7119	LOCKWASHER, No. 10 internal lock (2)	Late 78 & 79 — FLH, FLH-80, Classic
	22	7638	NUT, No. 10-32 x 1/8 x 3/8 hex. (2)	Late 78 & 79 — FLH, FLH-80, Classic
	23	7683	LOCKNUT, 1/4-28 x 5/16 x 7/16 hex. (2)	Late 78 & 79 — FLH, FLH-80, Classic
	24	7753	NUT, 5/16-24 x 1/4 x 1/2 hex. (2)	Late 78 & 79 — FLH, FLH-80, Classic
	25	7825	LOCKNUT, 7/16-20 x 7/16 x 5/8 hex.	Late 78 & 79 — FLH, FLH-80, Classic
	26	8115B	SPEED NUT, coil cover (2)	Late 78 & 79 — FLH, FLH-80, Classic
	27	9857	WIRE TERMINAL, ring type — No. 10 hole — #16-22 wire	Late 78 & 79 — FLH, FLH-80, Classic
	28	9861	TERMINAL ADAPTER, spark coil	Late 78 & 79 — FLH, FLH-80, Classic
	29A	9908	TERMINAL, spark plug cable	Late 78 & 79 — FLH, FLH-80, Classic
	29	9921	WIRE TERMINAL, female spade type, 3/16 slot — #16-20 wire	Late 78 & 79 — FLH, FLH-80, Classic
	30	10006	CABLE STRAP (2)	Late 78 & 79 — FLH, FLH-80, Classic
	31	21807-54	RUBBER CAP, spark plug cover (2)	Late 78 & 79 — FLH, FLH-80, Classic
	32	21808-55A	SPARK COIL	Late 78 & 79 — FLH, FLH-80, Classic
	34	31727-72	PLATE, spark coil	Late 78 & 79 — FLH, FLH-80, Classic
	35	31728-78A	BRACKET, spark coil	Late 78 & 79 — FLH, FLH-80, Classic
	36	31900-79A	SPARK COIL COVER with hardware	Late 78 & 79 — FLH, FLH-80, Classic
	37	31980-85D	SPARK PLUG CABLE, 5-1/2"	Late 78 & 79 — FLH, FLH-80, Classic
	38	31981-85B	SPARK PLUG CABLE, 16"	Late 78 & 79 — FLH, FLH-80, Classic
	39	32050-37A	BRACKET, spark plug cable	Late 78 & 79 — FLH, FLH-80, Classic
	40	32311-83	SPARK PLUG, No. 5P84 (2)	Late 78 & 79 — FLH, FLH-80, Classic
	42	32342-58	GASKET, spark plug (2)	Late 78 & 79 — FLH, FLH-80, Classic
	43	32503-77	TIMER COVER, No. 1	Late 78 & 79 — FLH, FLH-80, Classic
	44	32505-76A	WEIGHT & PIN (NOTOR ASSEMBLY; Teflon coated)	Late 78 & 79 — FLH, FLH-80, Classic
	45	32522-70	WEIGHT & PIN (2)	Late 78 & 79 — FLH, FLH-80, Classic
	46	32522-80	WEIGHT & PIN (use w/ 32529-80) (2)	Late 78 & 79 — FLH, FLH-80, Classic
	47	32598-78	IGNITION MODULE ASSEMBLY	Late 78 & 79 — FLH, FLH-80, Classic
	48	32601-78	SCREW, inner plate (2)	Late 78 & 79 — FLH, FLH-80, Classic
	49	32602-78	TRIGGER ROTOR	N/A Late 78 & 79 — FLH, FLH-80, Classic
	50	32602-80	TRIGGER ROTOR (use w/ 32625-80)	Late 78 & 79 — FLH, FLH-80, Classic
	51	32605-79	SPRING, weight (2)	Late 78 & 79 — FLH, FLH-80, Classic
	53	32610-79	PLATE, inner	N/A Late 78 & 79 — FLH, FLH-80, Classic
	55	32529-79	SHAFT AND PLATE	Late 78 & 79 — FLH, FLH-80, Classic
	56	32628-80	SHAFT AND PLATE (Teflon coated)	Late 78 & 79 — FLH, FLH-80, Classic
	57	56539-52	CLAMP, ignition wire	Late 78 & 79 — FLH, FLH-80, Classic
	58	71774-77	INSULATOR, female spade terminal	N/A Late 78 & 79 — FLH, FLH-80, Classic
	59	72541-56A	STUD, spark coil bracket to frame (2)	Late 78 & 79 — FLH, FLH-80, Classic
	60	83162-51	SEAL	Late 78 & 79 — FLH, FLH-80, Classic


IGNITION CIRCUIT BREAKER EARLY 1978 & EARLIER

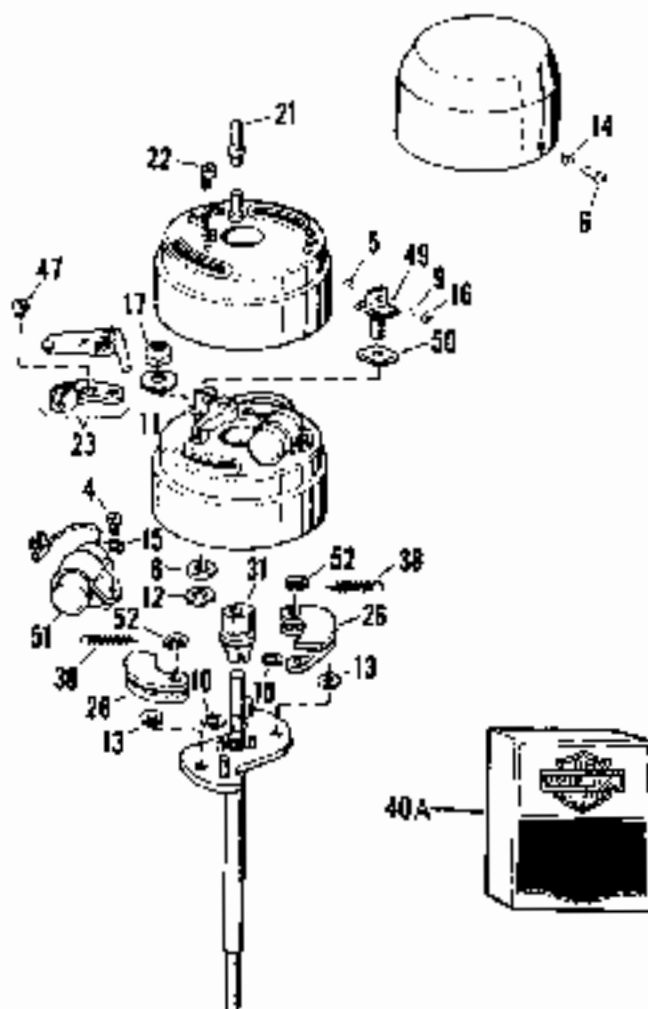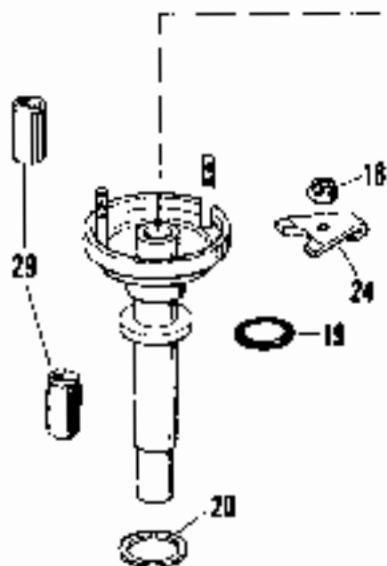

25

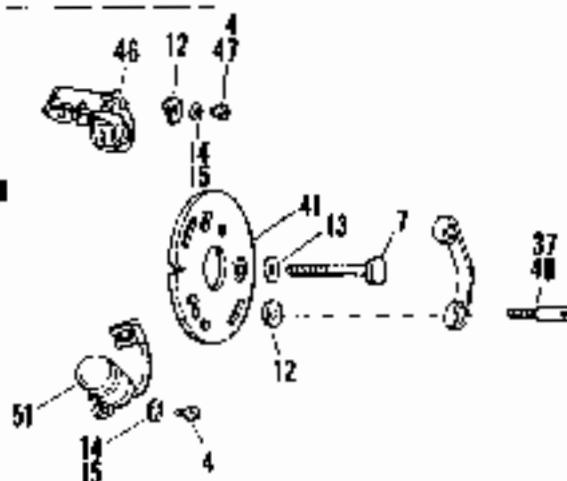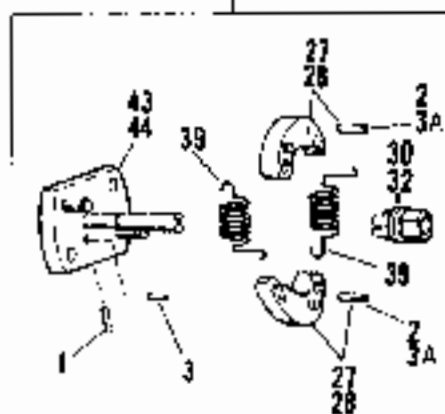


RETAIL PRICE	INDEX NO	PART NO.	N A M E	USED ON
	1	615	ROLL PIN, breaker plate	30 to Early 78 — FL, FLH
	2	620	ROLL PIN, breaker weight (2)	70 to Early 78 — FL, FLH
	3	624	ROLL PIN, breaker plate	70 to Early 78 — FL, FLH
	3A	635	PIN, breaker weight (use w/32629—80) (2)	70 to Early 78 — FL, FLH
	4	1041	SCREW, No. 8-32 x 1-1/4 inch (2) — Late 72 and later	61 to Early 78 — FL, FLH
	5	2585	SCREW, No. 8-32 x 3/16 inch (4) — Late 72 and later	47 to 62 — FL, FLH
	6	2586	SCREW, No. 8-32 x 1/4 inch (2) — Late 72 and later	65 to 68 — FL, FLH
	7	2587	SCREW, 1/4 inch	70 to Early 78 — FL, FLH
	8	8145	FIBER WASHER, No. 4 x 1/2 x 1/16 (2)	N/A 41 to 68 — FL, FLH
	9	9106	WASHER, 1/2 x 1/4 x 3/16 x 1/32	48 to 68 — FL, FLH
	10	6165W	WASHER, 1/2 x 3/16 x 1/32 (2)	65 to 68 — FL, FLH
	11	6182W	WASHER, No. 10 x 1/16 x 1/32 (2)	65 to 69 — FL, FLH
	12	6189W	WASHER, 11/64 x 1/16 x 1/32 (2)	65 to Early 70 — FL, FLH
	13	6335	WASHER, No. 4 x 1/2 x 1/32 (2)	65 to 68 — FL, FLH
	14	7015	LOCKWASHER, No. 8	48 to 68 — FL, FLH
	15	7115	LOCKWASHER, No. 8, internal depth (2) — Late 72 and later	61 to Early 78 — FL, FLH
	16	7808	NUT, No. 8-32 x 1/2 x 5/16 hex	48 to 69 — FL, FLH
	17	7826W	LOCKNUT, No. 10-32 x 3/16 x 3/16 hex (2)	65 to 68 — FL, FLH
	18	7503	LOCKWUT, 1/4-28 x 3/16 x 7/16 hex	66 to 68 — FL, FLH
	19	11101	SPRINGS, breaker housing	66 to 68 — FL, FLH
	20	79803—48	CLIP, breaker spring	65 — FL, FLH
	21	30505—47	PIN, circuit breaker wire	N/A 47 to 68 — FL, FLH
	22	30507—47A	SCREWING SCREW, breaker points	N/A 47 to Early 78; 65 to 68 — FL, FLH
	23	30605—48A	BREAKER POINT SET	49 to 69 — FL, FLH
	24	32516—66	CLAMP, circuit breaker	N/A 66 to 68 — FL, FLH
	25	32517—70	WEIGHT AND CAM ASSEMBLY (Teflon coated) Consists of: 32522—80 WEIGHT & PIN (2) 32523—70 CAM 32605—70 SPRING (2) 32529—80 SHAFT AND PLATE (Teflon coated)	70 to Early 78 — FL, FLH
	26	32522—67	WEIGHT & PIN, breaker assembly (2)	N/A 67 to 69 — FL, FLH
	27	32522—70	WEIGHT & PIN, breaker assembly (2)	70 to Early 78 — FL, FLH
	28	32522—80	WEIGHT & PIN, use w/32529—80 (2)	70 to Early 78 — FL, FLH
	29	32525—30A	BUSHING, breaker housing (2)	N/A 41 to 68 — FL, FLH
	30	32523—70	CAM, circuit breaker (use w/32529—80) (2)	70 to Early 78 — FL, FLH
	31	32542—64A	CAM	N/A 65 to 69 — FL, FLH
	32	32542—70A	CAM, circuit breaker	70 to Early 78 — FL, FLH
	33	32547—70	CIRCUIT BREAKER BASE ASSEMBLY	70 to Early 78 — FL, FLH
	34	32601—78	SCREW, lighter breaker plate (2)	Late 72 to Early 78 — FL, FLH
	35	32605—67	SPRING, breaker weight (2)	N/A 67 to Early 68 — FL, FLH
	36	32605—69	SPRING, breaker weight (2)	N/A Late 69 — FL, FLH
	37	32605—70	SPRING, breaker weight (2)	70 to Early 78 — FL, FLH
	38	32507—70	SLID, lighter breaker plate (2)	N/A Early 70 — FL, FLH
	39	32508—70	SLID, lighter breaker plate (2)	Late 70 to Early 72 — FL, FLH
	40A	32509—78	ELECTRONIC ON/OFF CONVERSION KIT	N/A 70 to Early 78 — FL, FLH
	41	32618—70A	BASE, circuit breaker	70 to Early 78 — FL, FLH
	42	32625—70	SHAFT AND PLATE	70 to Early 78 — FL, FLH
	43	32629—80	SHAFT AND PLATE (Teflon coated)	70 to Early 78 — FL, FLH
	44	32661—70	BREAKER POINT SET	70 to Early 78 — FL, FLH
	45	32669—47	LOCK SCREW, breaker points	N/A 48 to Early 68; 65 to Early 72 — FL, FLH
	46	32670—70	ADAPTER, terminal — circuit breaker	70 to Early 78 — FL, FLH
	47	32546—64	PIN, circuit breaker wire	N/A 65 to 68 — FL, FLH
	48	32678—49	INSULATOR, w/cond	N/A 49 to 68 — FL, FLH
	49	32726—20A	CONDENSED AND BRACKET	41 to Early 78 — FL, FLH
	50	62132—50	RETAINING RING, breaker plate (2)	N/A 65 to 68 — FL, FLH
	51	70455—70	WIRE, circuit breaker in coil	70 to Early 78 — FL, FLH

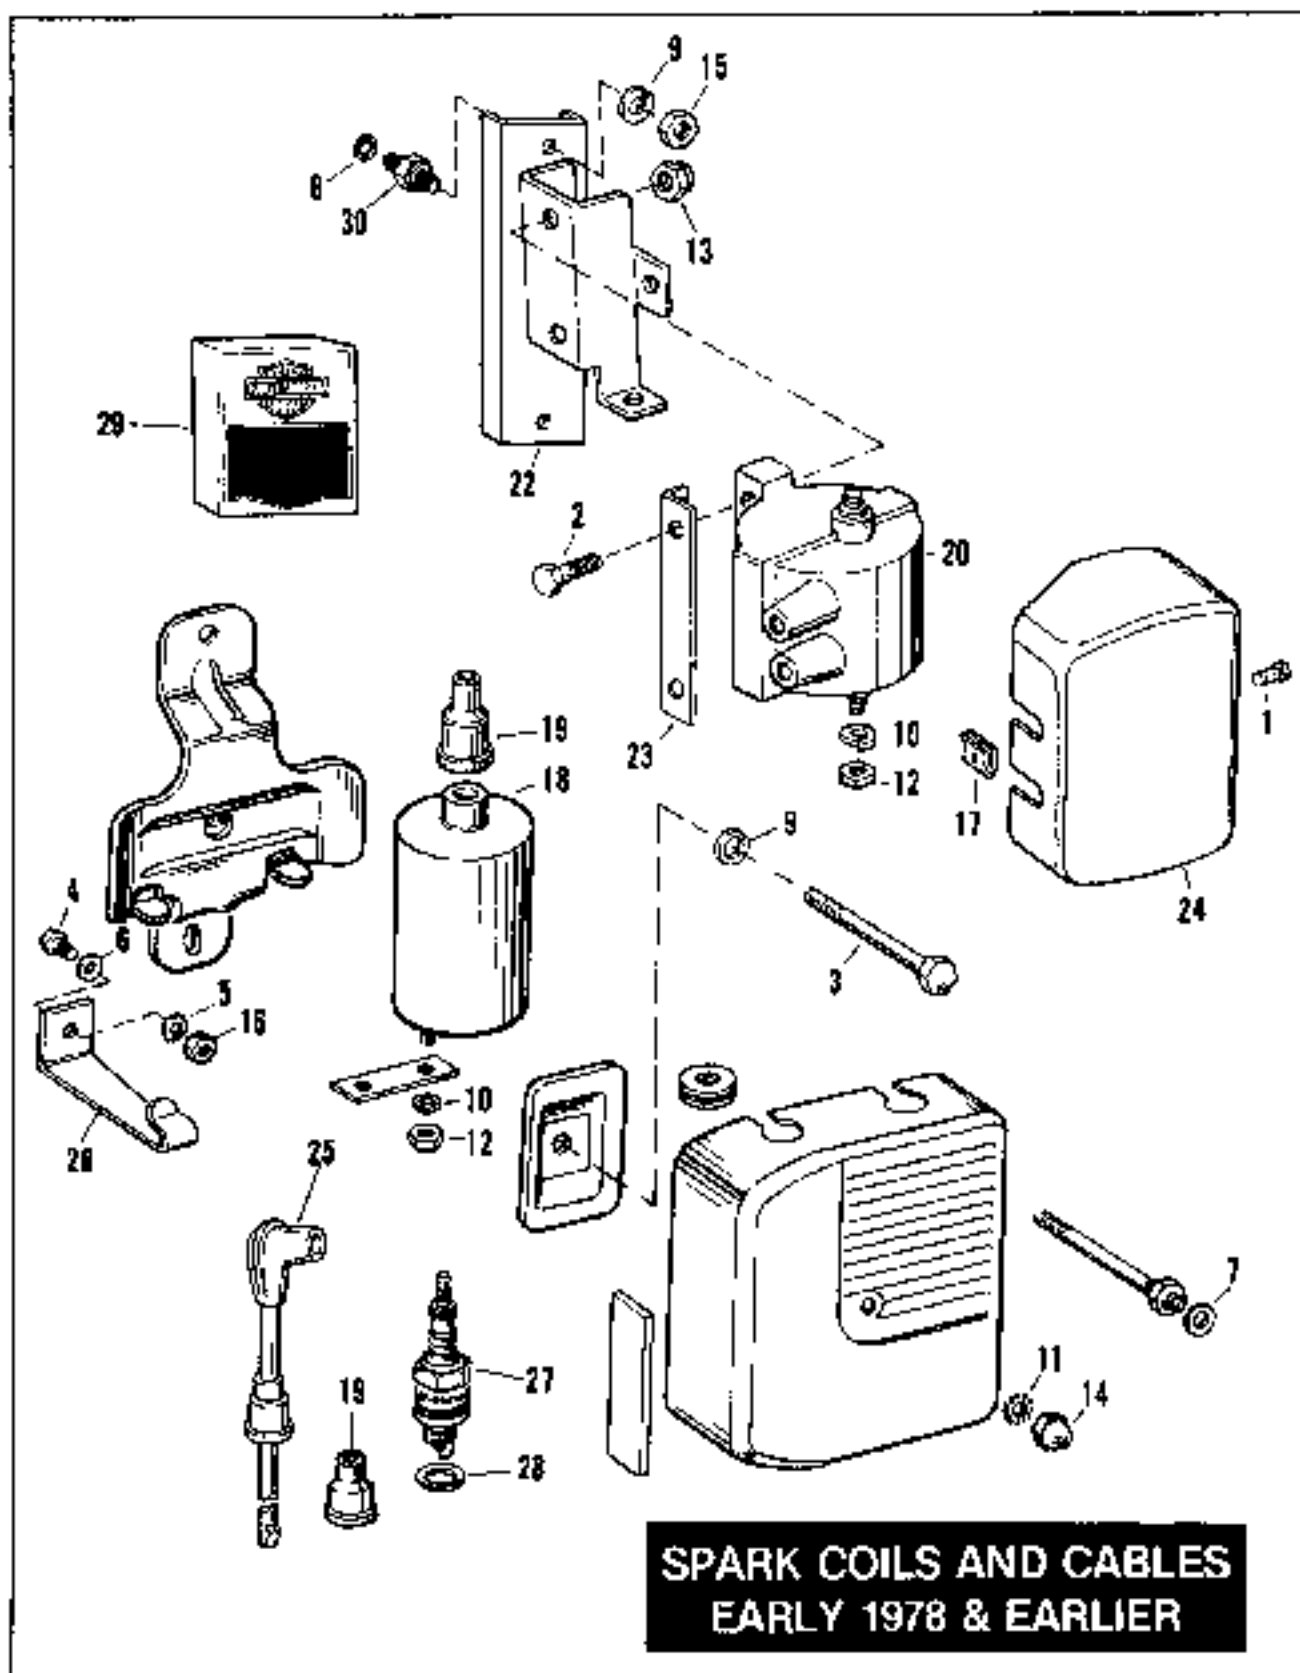


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	3463	BOLT, No. 10-32 x 1/2 hex. washer (2)	65 to Early 78 — FI, FIH
	2	3542	BOLT, 1/4-28 x 1 1/2 hex. hd (2)	65 to Early 78 — FL, FLH
	3	4755	BOLT, 5/16-24 x 2-3/4 hex. hd	61 to Early 78 — FI, FLH
	4	4726	BOLT, 7/16-20 x 1-1/2 hex. hd	66 to Early 78 — FL, FLH
	5	6497HW	WASHER, 7/16 x 1-1/8 x 1/4	65 to Early 78 — FL, FLH
	6	6516HW	WASHER, 7/16 x 1-1/8 x 1/8	65 to Early 78 — FL, FLH
	7	6700	WASHER, 1/4 x 5/8 x 1/16	61 to 64 — FI, FLH
	8	7039	LOCKWASHER, 3/8 (2)	65 to Early 78 — FL, FLH
	9	7041	LOCKWASHER, 5/16 (2)	61 to 64 — FL, FLH
	10	7069	LOCKWASHER, No. 10 (2)	61 to 64 — FL, FLH
	11	7231	LOCKWASHER, 1/4 ext. lock	61 to 64 — FL, FLH
	12	7638	NUT, No. 10-32 x 1/8 x 3/8 hex. (2)	61 to Early 78 — FL, FLH
	13	7663	LOCKNUT, 1/4-20 x 5/16 x 7/16 hex. (2)	65 to Early 78 — FL, FLH
	14	7684	ACORN NUT, 1/4-28 x 3/16 x 3/8 hex.	61 to 64 — FL, FLH
	15	7753	NUT, 5/16-24 x 1/4 x 1/2 hex. (2)	65 to Early 78 — FL, FLH
	16	7921	LOCKNUT, 7/16-20 x 7/16 x 5/8 hex.	65 to Early 78 — FL, FLH
	17	8115-9	SPEED NUT, coil cover (2)	65 to Early 78 — FL, FLH
	18	31504-61	SPARK COIL — 6 V (2)	N/A 61 to 64 — FL, FIH
	19	31607-64	RUBBER CAP, spark plug cable (2)	65 to Early 78 — FL, FLH
	20	31609-65A	SPARK COIL — 12 V	65 to Early 78 — FL, FLH
	21	31620-47	TERMINAL, spark plug cable	N/A 61 to Early 78 — FL, FLH
	22	31724-65	BRACKET, spark coil	65 to Early 78 — FL, FLH
	23	31727-72	PLATE, spark coil	65 to Early 78 — FI, FLH
	24	31803-78A	SPARK COIL COVER, with hardware	65 to Early 78 — FL, FLH
	25	31583-65B	SPARK PLUG CABLE, 5 1/2"	75 to Early 78 — FL, FLH
		31581-55B	SPARK PLUG CABLE, 16"	75 to Early 78 — FL, FLH
		31991-74A	SPARK PLUG CABLE, 9 1/2"	N/A 65 to Early 78 — FL, FLH
	26	32000-37A	BRACKET, spark plug cable	66 to Early 78 — FL, FLH
	27	32301-47A	SPARK PLUG, No. 4	48 to 74 — FL, FLH
		32301-60	SPARK PLUG, No. 3-4	48 to 74 — FL, FLH
		32303-47A	SPARK PLUG, No. 3	48 to 74 — FL, FLH
		32305-48A	SPARK PLUG, No. 2	N/A 48 to 74 — FI, FIH
		32307-55	SPARK PLUG, No. 5	58 to 74 — FL, FLH
		32310-77	SPARK PLUG, No. 5A6 — 0.025 gap (2)	75 to Early 78 — FI, FIH
		32312-77A	SPARK PLUGS, bulk package 500 — No. 5A6	N/A 77 & Early 78 — FI, FLH
		32312-77	SPARK PLUG, No. 5A6 — 0.025 gap (radio noise suppression) (2)	Late 77 to Early 78 — FI, FIH
	28	32342-56	GASKET, spark plug	Late 58 to Early 78 — FL, FLH
	29	32352-77	TUNE UP KIT	41 to 63 — FL, FLH
			Consists of	
		32305-48A	BREAKER POINT SET	
		32301-60	SPARK PLUG, No. 3-4 (2)	
		32726-30A	CONDENSER AND BRACKET	
	32353-77	TUNE UP KIT		70 to 74 — FL, FLH
			Consists of	
		32301-60	SPARK PLUG, No. 3-4 (2)	
		32301-70	BREAKER POINT SET	
		32726-30A	CONDENSER AND BRACKET	
	32354-77	TUNE UP KIT		75 to Early 78 — FL, FLH
			Consists of	
		32310-77	SPARK PLUG, No. 5A6 (2)	
		32361-70	BREAKER POINT SET	
		32726-30A	CONDENSER AND BRACKET	
	30	72341-56A	STUD, spark coil bracket to frame (2)	65 to Early 78 — FL, FLH

STARTER SHAFT AND HOUSING — 1965 TO 1982

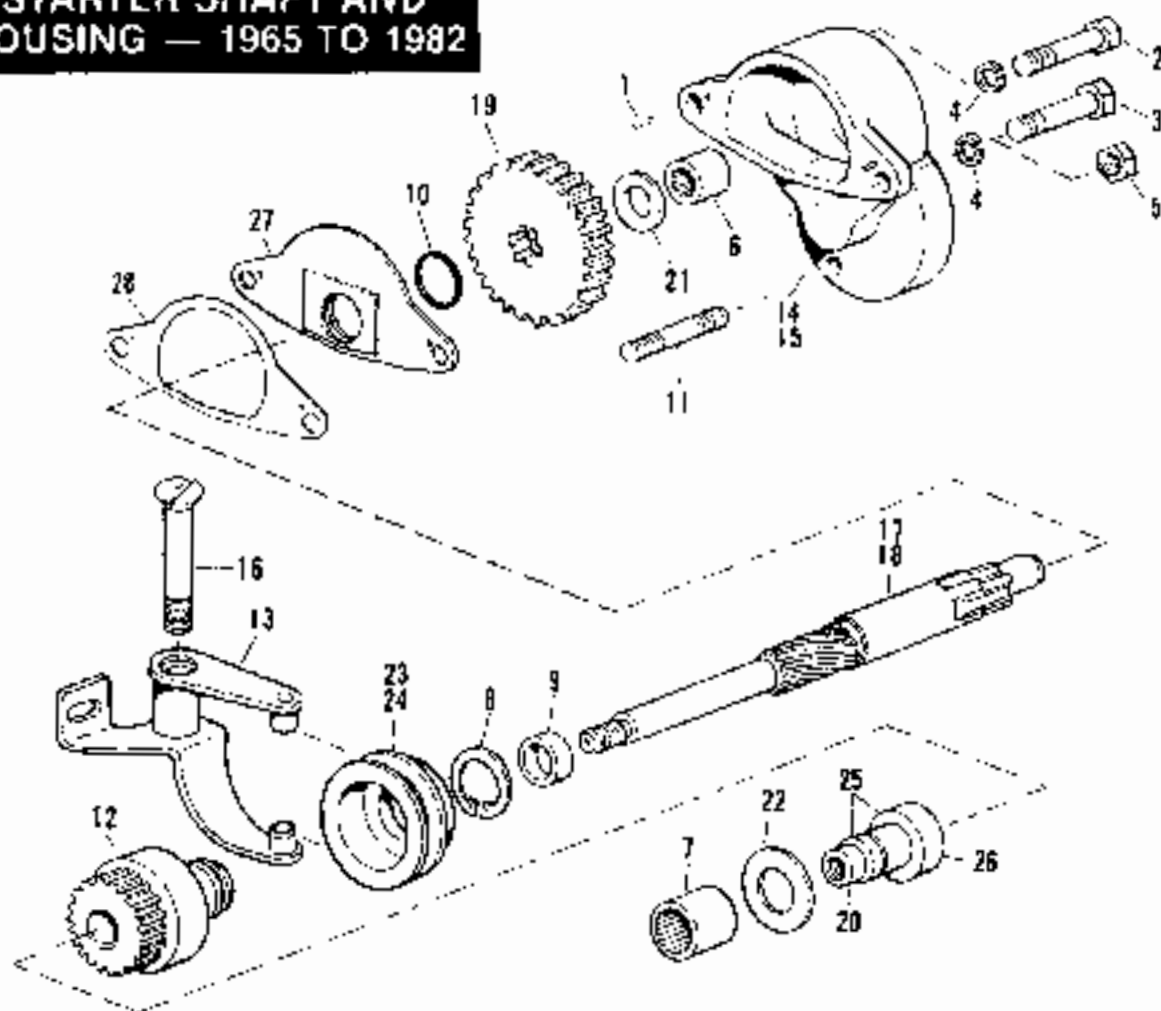


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	3344	ROLL PIN, starter shaft housing (2)	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	2	2967W	BOLT, 1/4-20 x 1 hex. hd.	79 to 82 — FI, FLH, FLH-80, 79 to 81 — Classic
	3	3872W	BOLT, 1/4-20 x 1-1/2 hex. hd.	79 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	4	7036	LOCKWASHER, 1/4 (2)	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	5	767E	NUT, 1/4-20 x 3/16 x 7/15 hex. (2)	65 to 82 — FI, FLH, FLH-80, 79 to 81 — Classic
	6	9082	NEEDLE BEARING, starter shaft housing	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	7	8053	NEEDLE BEARING, chain housing cover	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	8	11039	RETAINING RING, shifter collar	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	9	11041	SPACER, starter shaft	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	10	11101	O RING, deflector plate	Late 65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	11	24811-59A	STUD, starter shaft housing (2)	65 to 78 — FI, FLH, FLH-80
	12	31443-65A	STARTER DRIVE GEAR UNIT	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	13	31445-65A	SHIFT LEVER, starter gear	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	14	31465-55	STARTER SHAFT HOUSING, with bearing (Prestolite)	65 to early 79 — FL, FLH, FLH-80, Classic
	15	31465-79	STARTER SHAFT HOUSING, with bearing (Prestolite) (pulse shifter transmission)	late 79 to 82 — FL, FLH, FLH-80, late 79 to 81 — Classic
	16	31478-65A	PIVOT BOLT, shift lever	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	17	31482-65	STARTER SHAFT	65 to 89 — FL, FLH
	18	31482-70	STARTER SHAFT	70 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	19	31485-65	GEAR, starter shaft	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	20	31493-67	NUT, starter shaft (left hand thread)	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	21	31501-65	THRUST WASHER, starter shaft housing	65 to 71 — FL, FLH
	22	31502-65	THRUST WASHER, chain cover	65 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	23	31503-65	SHIFTER COLLAR	65 to 69 — FL, FLH
	24	31503-79	SHIFTER COLLAR	70 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	26	31531-69	SPACER	65 to 82 — FI, FLH, FLH-80, 79 to 81 — Classic
	27	50516-65A	PLATE, oil deflector	65 to 82 — FI, FLH, FLH-80, 79 to 81 — Classic
	28	50556-69	GASKET, oil deflector plate	65 to 82 — FL, FLH, FLH-80, 80 & 81 — Classic


STARTER SHAFT AND HOUSING — 1982 & LATER

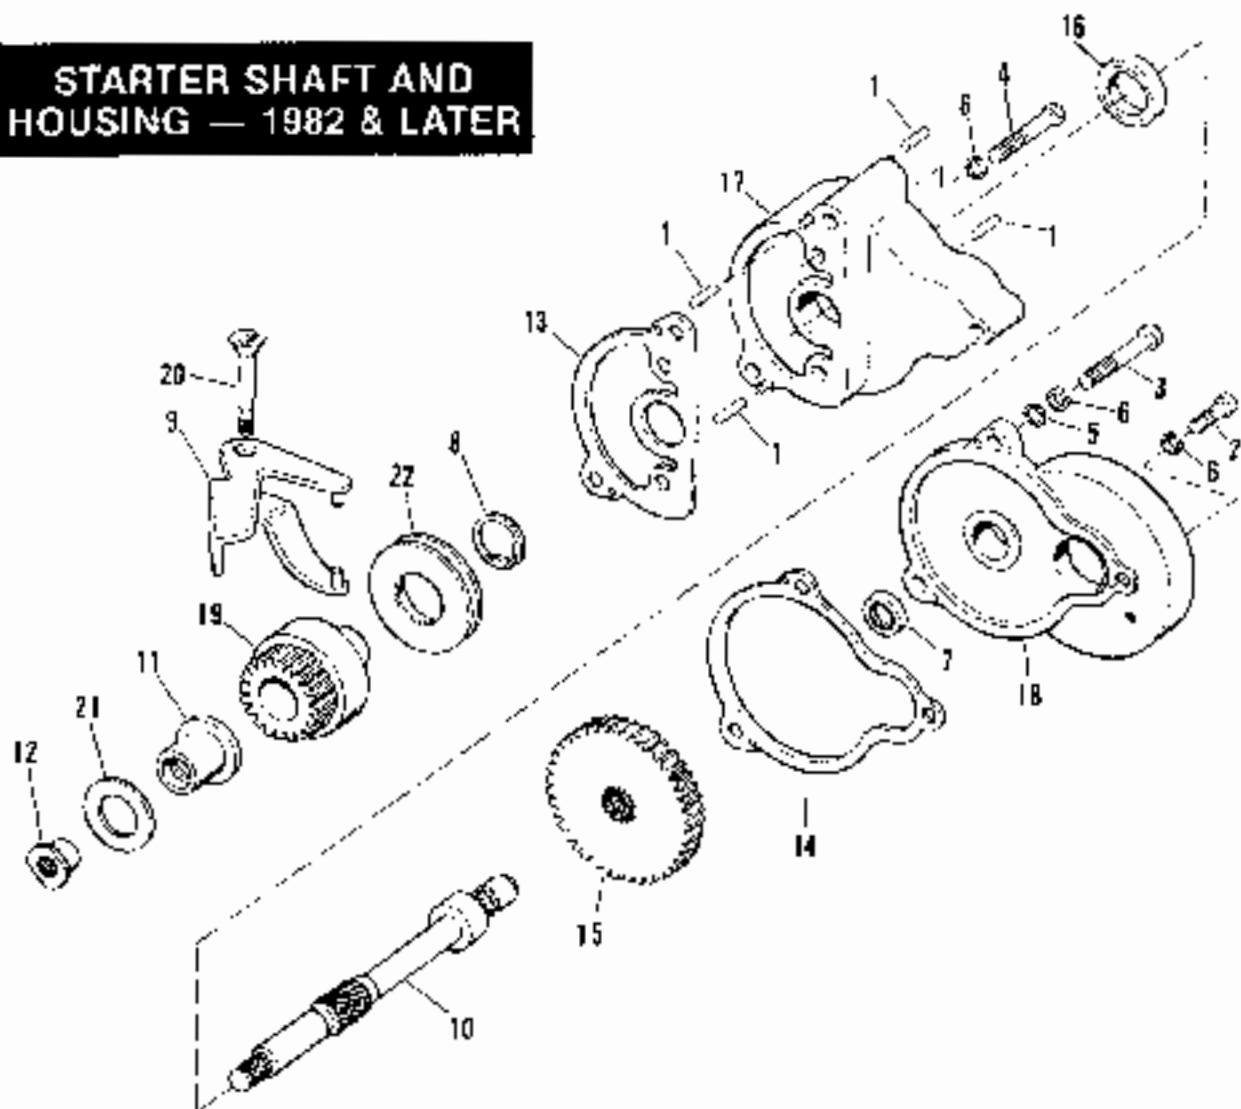

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	304A	BOLT PIN, starter shaft housing, 2"	82 - Classic; 83 to * - FLH-80
	2	2845W	SCREW 1/4-20 x 1 socket hd.	82 - Classic; 83 to * - FLH-80
	3	3768	BOLT, 1/4-20 x 2 1/2 hex. hd., 2"	82 - Classic; 83 to * - FLH-80
	4	3893	BOLT, 1/4-20 x 1-1/4 hex. hd., 12"	82 - Classic; 83 to * - FLH-80
	5	5703	WASHER 1/4 x 5/8 x 17/32	82 - Classic; 83 to * - FLH-80
	6	7075	LOCKWASHER, 1/4, 4t	82 - Classic; 83 to * - FLH-80
	7	0062	NEEDLE BEARING, starter shaft housing	82 - Classic; 83 to * - FLH-80
	8	11035	RETAINING RING, shifter cone	82 - Classic; 83 to * - FLH-80
	9	31300-80A	SHIFTER LEVER KIT, starter gear	82 - Classic; 83 to * - FLH-80
	10	31310-80A	STARTER SHAFT	82 - Classic; 83 to * - FLH-80
	11	31311-80	SPACER, starter shaft	82 - Classic; 83 to * - FLH-80
	12	31312-80	NUT, starter shaft	82 - Classic; 83 to * - FLH-80
	13	31320-80	GASKET, starter shaft housing	82 - Classic; 83 to * - FLH-80
	14	31321-80	GASKET, starter cover	82 - Classic; 83 to * - FLH-80
	15	31340-80	GEAR, starter shaft	82 - Classic; 83 to * - FLH-80
	16	31341-80	OIL SEAL, starter shaft housing	82 - Classic; 83 to * - FLH-80
	17	31387-80	STARTER SHAFT HOUSING	82 - Classic; 83 to * - FLH-80
	18	31397-80	STARTER COVER	82 - Classic; 83 to * - FLH-80
	19	31440-80A	STARTER DRIVE GEAR LIFT	82 - Classic; 83 to * - FLH-80
	20	31470-80A	PIVOT BOLT, shifter lever	82 - Classic; 83 to * - FLH-80
	21	31502-80	TRIPLIST WASHER, shaft cover	82 - Classic; 83 to * - FLH-80
	22	31503-80	SHIFTER CONE AD	82 - Classic; 83 to * - FLH-80

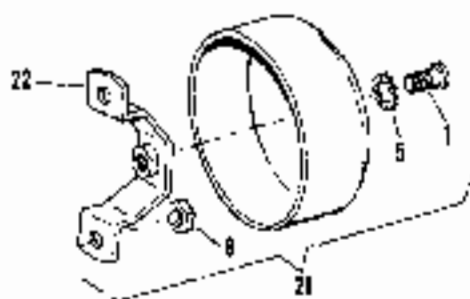


**STARTER MOTOR
LATE 1966 TO 1982**

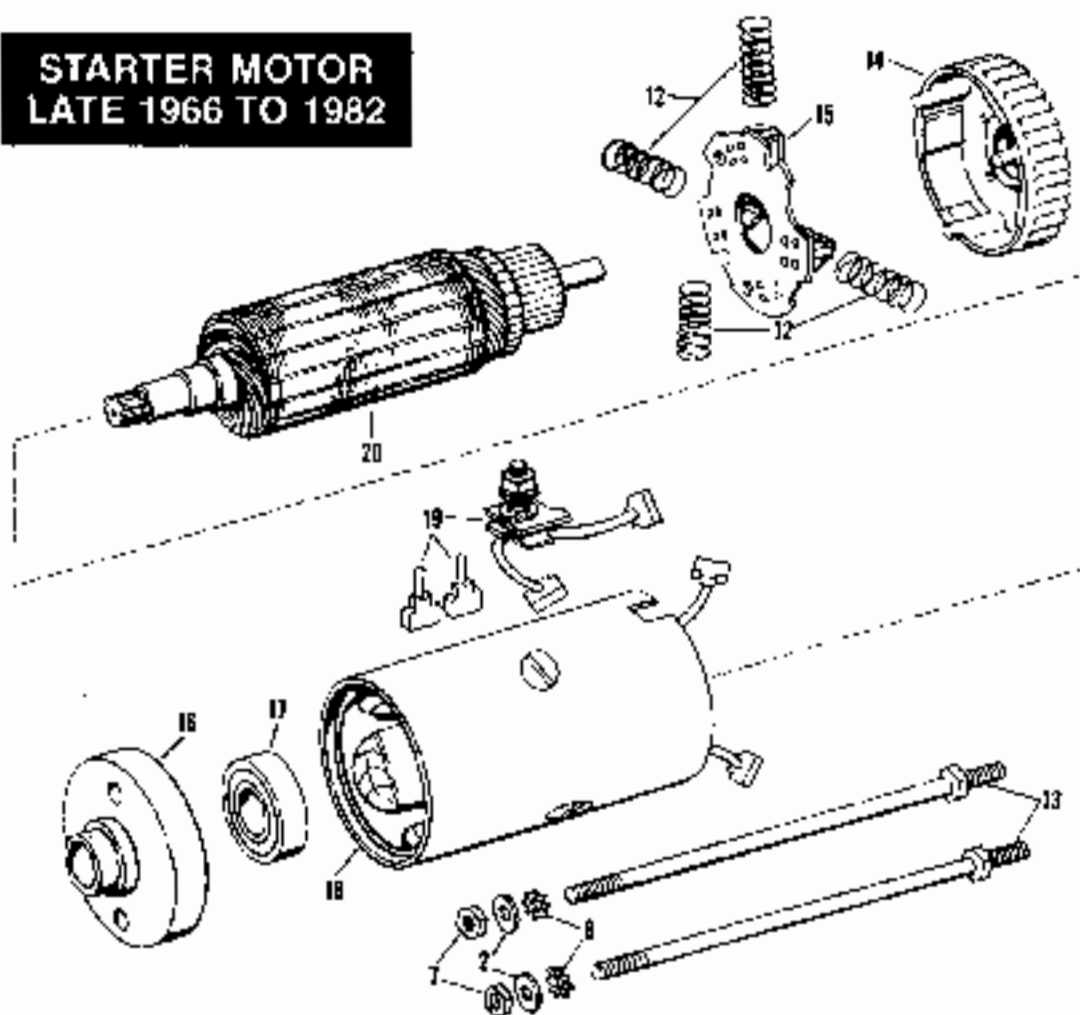


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	2082	SCREW, No. 10-32 x 3/8 Ph. 2nd	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	2	5253W	WASHER, 1/4 x 3/4 x 1/16-21	Late 66 to 79 — FL, FLH, FLH-80
		5700	WASHER, 1/4 x 5/8 x 1/16-21	79 to 82 — FL, FLH, FLH-80, 75 to 81 — Classic
	3	7028	LOCKWASHER, 1/4	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	4	7127	LOCKWASHER, 5/16 internal thread	Late 66 to 82 — FL, FLH, FLH-80, 75 to 81 — Classic
	5	7220	LOCKWASHER, No. 10 external thread	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	6	7500	LOCKWASHER, 1/4 external thread	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	7	7678	NUT, 1/4-28 x 7/32 x 7/16 hex. 12	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	8	7688	NUT, 1/4-20 x 7/32 x 7/16 hex. 12	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	9	7750	NUT, 5/16-24 x 17/64 x 1-2	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	9A	9070	BALL BEARING, drive end	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	10	31458-65A	STARTER MOTOR, only (Presto 10)	N/A Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	11	31476-65	BRACKET, starter motor	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	12	31534-65	SET OF BRUSH SPRINGS	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	13	31535-65	SET OF THRU-RODITS	N/A Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	14	31536-65	COVER ASSEMBLY, commutator end	N/A Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	15	31537-65	BRUSH PLATE AND HOLOFF ASSEMBLY	N/A Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	16	31538-65	COVER ASSEMBLY, drive end	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	18	31540-65	FRAME AND FIELD COILS, assembled	N/A Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	19	31541-65	SET OF FOUR BUSHES	Late 65 to 82 — FL, FLH, FLH-80, 75 to 81 — Classic
	20	31542-65	ARMATURE	Late 65 to 82 — FL, FLH, FLH-80, 75 to 81 — Classic
	21	31565-67	END COVER KIT, drive	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	22	31568-67	BRACKET, end cover	Late 66 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic


STARTER MOTOR 1982 & LATER

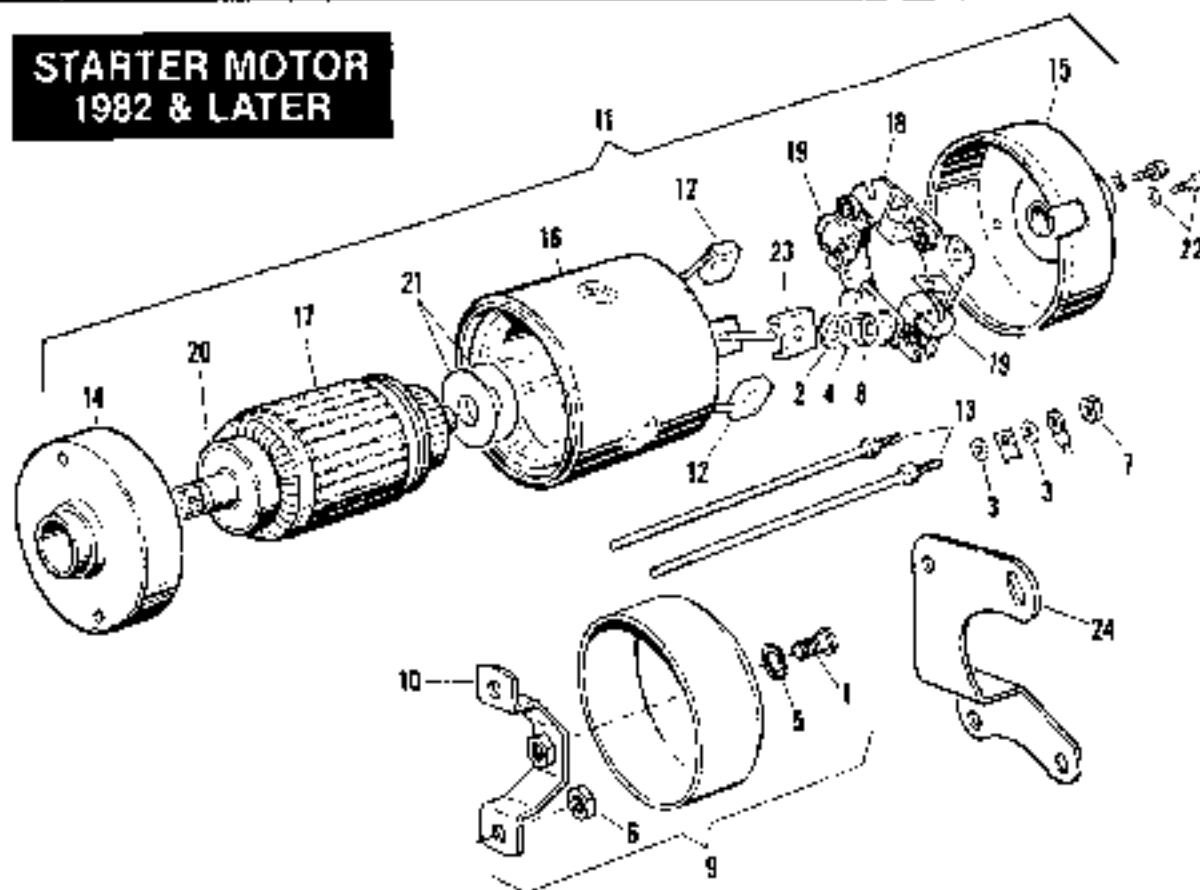

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	2680	SCREW, No. 10-32 x 3/4 Phillips hd	82 — Classic; 83 to * — FLH-80
	2	2700	WASHER, 1/4 x 5/8 x 1/16 (2)	82 — Classic; 83 to * — FLH-80
	3	2706	WASHER, No. 10 x 1/2 x 3/64 (2)	82 — Classic; 83 to * — FLH-80
	4	7036	LOCKWASHER, 1/4	82 — Classic; 83 to * — FLH-80
	5	7220	LOCKWASHER, No. 10 external tooth	82 — Classic; 83 to * — FLH-80
	6	7620W	NUT, No. 10-24 x 1 9/32 hex (2)	82 — Classic; 83 to * — FLH-80
	7	7624	NUT, No. 10-24 x 1/4 x 3/8 hex (2)	82 — Classic; 83 to * — FLH-80
	8	7680	NUT, 1/4-20 x 7/32 x 7/16 hex (3)	82 — Classic; 83 to * — FLH-80
	9	31498-67	BRACKET, starter motor support	Late 84 to * — FLH-80
	3A	31566-67	END COVER KIT, starter	82 — Classic; 83 to * — FLH-80
	10	31568-67	BRACKET, end cover	82 — Classic; 83 to * — FLH-80
	11	31570-73	STARTER MOTOR, only (Electric)	82 — Classic; 83 to * — FLH-80
	12	31575-73	BRUSH, field coil mounted (2)	82 — Classic; 83 to * — FLH-80
	13	31576-73	SET OF THREE BOLTS	82 — Classic; 83 to * — FLH-80
	14	31577-73	COVER, drive end	82 — Classic; 83 to * — FLH-80
	15	31578-73	COVER, commutator end - with cushion	82 — Classic; 83 to * — FLH-80
	16	31579-73	FRAME AND FIELD COILS - with 2 brushes	82 — Classic; 83 to * — FLH-80
	17	31580-73	ARMATURE, with ball bearing	82 — Classic; 83 to * — FLH-80
	18	31581-73	BRUSH - "OLDER" with springs & 2 brushes	82 — Classic; 83 to * — FLH-80
	19	31582-73	BRUSH (2)	82 — Classic; 83 to * — FLH-80
	20	31583-73	BALL BEARING - armature drive end	82 — Classic; 83 to * — FLH-80
	21	31584-73	SET OF THREE WASHERS, armature commutator end	82 — Classic; 83 to * — FLH-80
	22	31585-73	SCREW with lockwasher (2)	82 — Classic; 83 to * — FLH-80
	23	31586-73	INSULATOR, terminal	82 — Classic; 83 to * — FLH-80
	24	86030-82	BRACKET, starter motor support	82 — Classic; 83 & early 84 — FLH-80

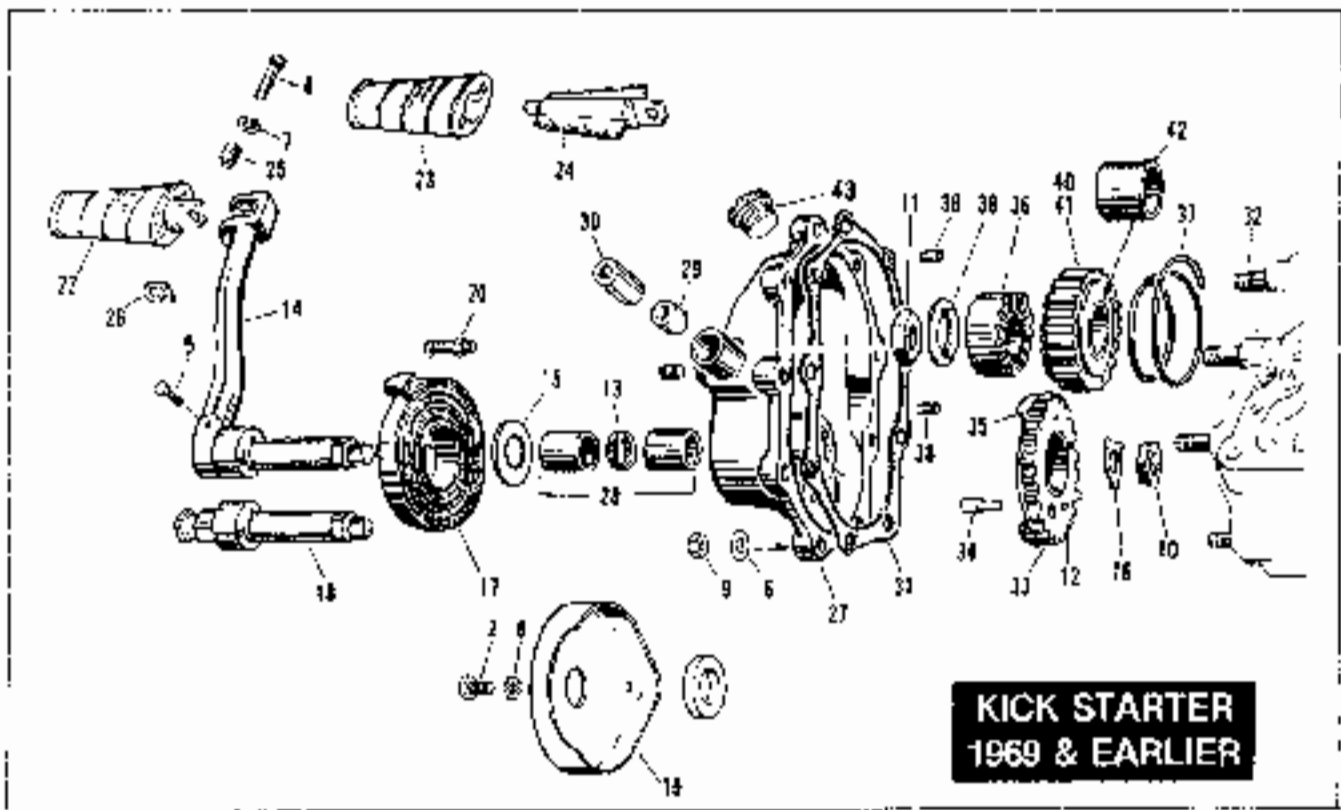

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	2	2054	SCREW, No. 10-24 x 7/16 Fuzichrome	41 to 69 — FL, FLH
	4	4238W	BOLT, 3/8-24 x 1-1/8 hex. hd.	41 to 69 — FL, FLH
	5	4411	BOLT, 3/8-24 x 1-3/4 hex. hd.	41 to 69 — FL, FLH
	6	5016	WASHER, 1/2-20 x 1-1/2 x 1/16 g.	41 to 69 — FL, FLH
	7	7038	LOCKWASHER, 3/8	41 to 69 — FL, FLH
	8	7220	LOCKWASHER, No. 10 external tooth	41 to 69 — FL, FLH
	9	7753	NUT, 5/16-24 x 1/4 x 1/2 hex. hd.	41 to 69 — FL, FLH
	10	7911	NUT, 1/2-20 x 7/16 x 7/8 hex.	41 to 69 — FL, FLH
	11	7977	NUT, 5/8-19 x 1/4 x 9/16 hex.	41 to 69 — FL, FLH
	12	8241	PIVOT, 3/16 x 5/32 x 3/8	41 to 69 — FL, FLH
	13	11101	CRANK	41 to 69 — FL, FLH
	14	33068-54	STARTER CRANK, dry (black)	N/A 54 to 69 — FL, FLH
	15	33069-30	WASHER, starter crank	41 to 69 — FL, FLH
	16	33082-15	LOCKWASHER, starter crank (2)	41 to 69 — FL, FLH
	17	33180-58	SPR NG, starter crank	41 to 69 — FL, FLH
	18	33056-54B	STARTER CRANK SHAFT	54 to 69 — FL, FLH
	19	33150-59	SPR NG COVER, 4", complete	41 to 69 — FL, FLH
	20	33152-59	STUD, starter spring w/ spring, cover screw hole	41 to 69 — FL, FLH
	22	33175-16A	STARTER PEDAL, complete (black rubber)	41 to 67 — FL, FLH
	23	33182-63A	PEDAL, COVER, starter (black)	63 to 67 — FL, FLH
	24	33202-63	AXLE PLATE, starter crank pedal	N/A 63 to 69 — FL, FLH
	26	33213-31	BUSHING, pedal pin	41 to 69 — FL, FLH
	28	33215-30	WASHER, pedal pin	41 to 69 — FL, FLH
	27	33277-36A	STARTER COVER, transmission	41 to 69 — FL, FLH
	28	33289-37	BUSHINGS, pair, starter cover	41 to 69 — FL, FLH
	29	33290-38	LOWER BUSHING, starter cover	41 to 69 — FL, FLH
	30	33291-38	UPPER BUSHING, starter cover	41 to 69 — FL, FLH
	31	33295-36	GASKET, starter cover	41 to 69 — FL, FLH
	32	33298-65	STUD, starter cover (9)	65 to 69 — FL, FLH
	33	33350-35	GEAR, starter crank — 24 T.	41 to 69 — FL, FLH
	34	33355-35	PIN, starter crank gear	N/A 41 to 69 — FL, FLH
	35	33358-36	CAM PLATE, starter crank gear	41 to 69 — FL, FLH
	36	33381-39	STARTER CLUTCH	41 to 69 — FL, FLH
	37	33391-38	SPRING, starter clutch	41 to 69 — FL, FLH
	38	33393-50	KEY, starter clutch (2)	41 to 69 — FL, FLH
	39	33396-39	LOCKWASHER, starter clutch	41 to 69 — FL, FLH
	40	33430-60	STARTER GEAR, mainshaft — 15 T.	67 to 69 — FL, FLH
	41	33430-55	STARTER GEAR, mainshaft — 14 T.	Late 55 to 66 — FL, FLH
	42	33438-60	BUSHING, mainshaft starter gear	Late 56 to 69 — FL, FLH
	43	37072-79	FLYER PLATE, starter cover	41 to 69 — FL, FLH

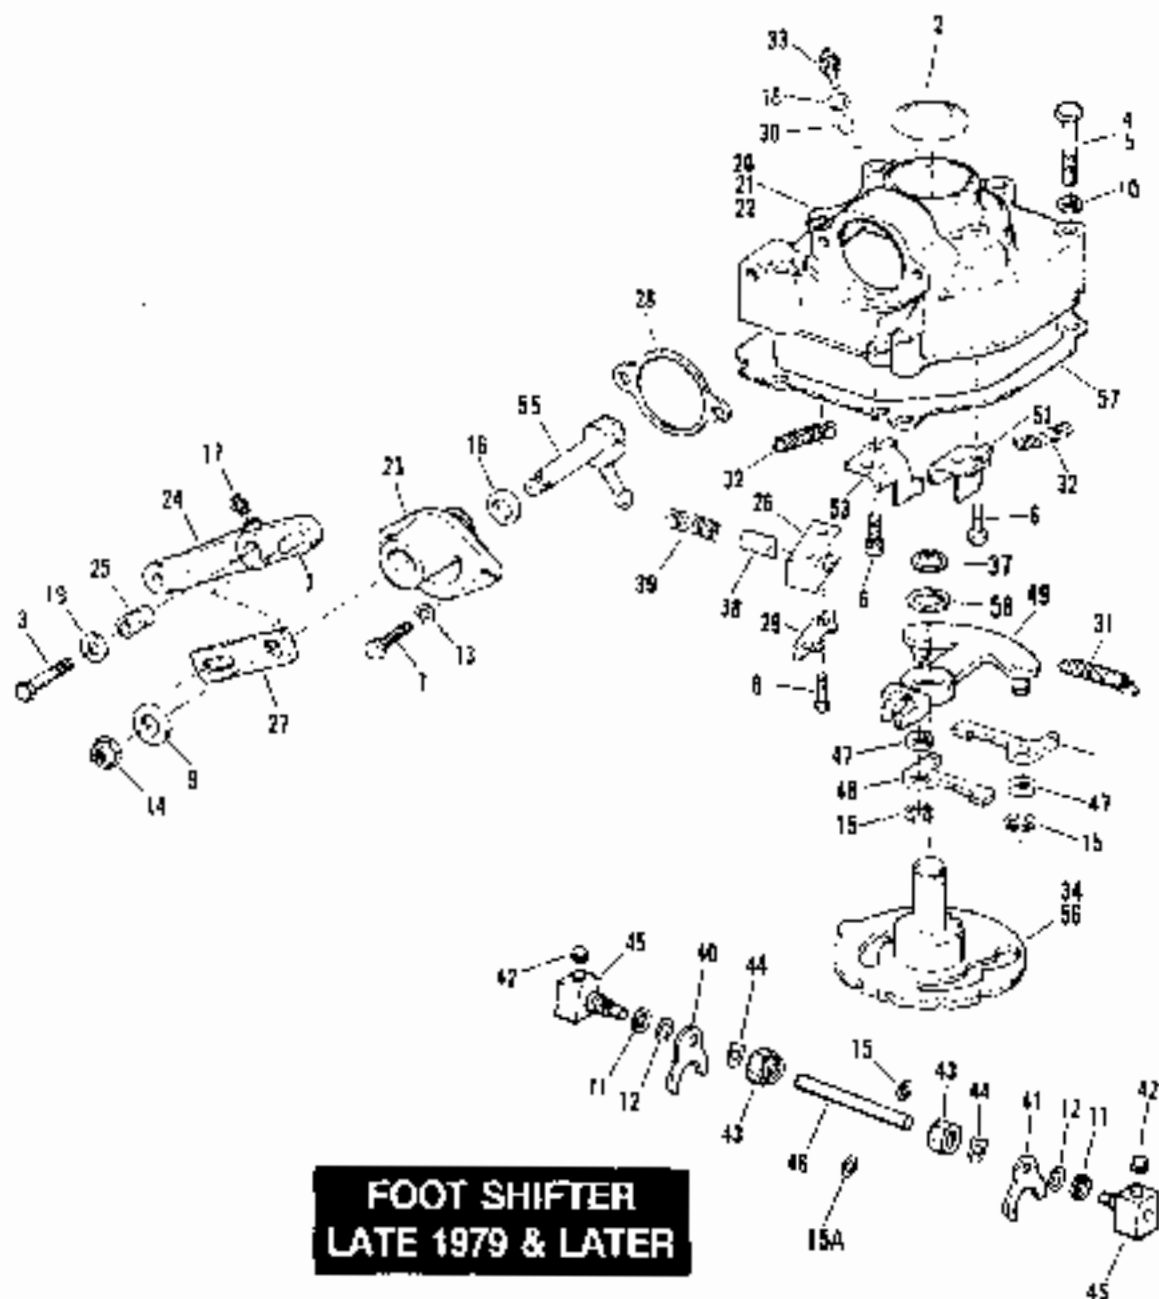


FOOT SHIFTER — LATE 1979 & LATER

A22-1

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
NOTE: See "FOOT GEAR SHIFTER" group for foot lever linkage parts.				
	1	215	PLATE, shift lever	Late 79 to * — FL, FLH, FLH-80, Classic
	2	950	PLUG, cover	Late 79 to * — FL, FLH, FLH-80, Classic
	3	2818	BOLT, 5/16-18 x 1 1/2 hex. hd.	Late 79 to * — FL, FLH, FLH-80, Classic
	4	2872W	BOLT, 1/4-20 x 1-1/2 hex. hd.	Late 79 to * — FL, FLH, FLH-80, Classic
	5	2881W	BOLT, 1/4-20 x 2 hex. hd. (4)	Late 79 to * — FL, FLH, FLH-80, Classic
	6	2789A	SCREW, 1/4-20 x 3/4 socket hd. (4)	Late 79 to * — FL, FLH, FLH-80, Classic
	7	2602W	BOLT, 1/4-20 x 2 3/8 hex. hd. (2)	Late 79 to * — FL, FLH, FLH-80, Classic


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	8	3993	BOLT, 1/4-20 x 1 1/4 hex. hex. (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	9	6761	WASHER, 3/8 x 13/16 x 1/16	Late 79 to Early 81 — FL, FLH, FLH-80, Classic
	10	5703	WASHER, 1/4 x 5/8 x 1/16 (4)	Late 79 to Early 84 — FL, FLH, FLH-80, Classic
	10A	6736	WASHER, 9/32 x 5/8 x 1/16 (5)	Late 84 to * — FLH-80
	11	6750	WASHER, 21/32 x 7/8 x 0.007 (25 req.)	Late 79 to * — FL, FLH, FLH-80, Classic
	12	6752	WASHER, 21/32 x 27/32 x 1/8 (as req.)	Late 79 to * — FL, FLH, FLH-80, Classic
	13	7036	LOCKWASHER, 1/4 (7)	Late 79 to * — FL, FLH, FLH-80, Classic
	14	7775	LOCKNUT, 3/8-24 x 7/16 x 9/16 hex.	Late 81 to * — FLH-80, Classic
		7776W	LOCKNUT, 3/8-24 x 3/4 x 9/16 hex.	Late 79 to Early 81 — FL, FLH, FLH-80, Classic
	15	11330	RETAINING RINGS, shifter pawls (2), lock shaft (1)	Late 79 to * — FL, FLH, FLH-80, Classic
	15A	11171	O-RINGS	Late 80 to * — FL, FLH, FLH-80, Classic
	16	12010	OIL SEAL, shaft cover	Late 79 to * — FL, FLH, FLH-80, Classic
	17	25715-47	GREASE FITTING, shift lever	Late 79 to * — FL, FLH, FLH-80, Classic
	18	25811-11	WASHER, transmission neutral switch	Late 79 — FL, FLH, FLH-80, Classic
	19	32535-48	THRUST WASHER, shift lever (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	20	33156-60	SHIFTER COVER ASSEMBLY, 4 speed	82 — Classic
		33166-80	COVER, shifter — with pawls	Late 79 to * — FL, FLH, FLH-80
				Late 79 to 81 — Classic
		33168-80	COVER, shifter — with pawls	82 — Classic
	21	33167-79	COVER, only	Late 79 to * — FL, FLH, FLH-80, Classic
	22	33170-79	SHIFTER COVER ASSEMBLY, 4 speed	Late 79 & Early 80 — FL, FLH, FLH-80, Classic
		33170-79A	SHIFTER COVER ASSEMBLY, 4 speed	Late 80 to * — FL, FLH, FLH-80
				Late 80 & 81 — Classic
	23	33174-79	COVER, shifter shaft	Late 79 to * — FL, FLH, FLH-80
				Late 79 to 81 — Classic
		33176-79	COVER, shifter shaft	82 — Classic
	24	33177-79	SHIFTER LEVER ASSEMBLY with holding and pin	Late 79 to * — FL, FLH, FLH-80, Classic
	25	33197-79	SPACER, shift lever	Late 79 to * — FL, FLH, FLH-80, Classic
	26	33188-79	PLUNGER BUSH, cam follower	Late 79 to * — FL, FLH, FLH-80, Classic
	27	33193-79	ARM, shift lever	Late 79 to * — FL, FLH, FLH-80, Classic
	29	33195-79	BASKET, shaft cover	Late 79 to * — FL, FLH, FLH-80, Classic
	29	33197-79	LOCK, plunger bush end	Late 79 to * — FL, FLH, FLH-80, Classic
	30	33198-79	BUSHING, neutral switch	Late 79 to * — FL, FLH, FLH-80, Classic
	31	33199-79	SPRING, shifter pawls	Late 79 to * — FL, FLH, FLH-80, Classic
	32	33201-79	PAWL CARRIER SPRING (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	33	33901-79	TRANSMISSION NEUTRAL SWITCH	Late 79 to * — FL, FLH, FLH-80, Classic
	34	34020-79B	SHIFTER CAM ASSEMBLY	Late 79 to * — FL, FLH, FLH-80
	37	34040-52	RETAINING RING, shifter cam	Late 79 to * — FL, FLH, FLH-80, Classic
	38	34063-52	SHIFTER CAM FOLLOWER	Late 79 to * — FL, FLH, FLH-80, Classic
	39	34068-52	SPRING, shifter cam follower	Late 79 to * — FL, FLH, FLH-80, Classic
	40	34158-55	SHIFTER FORK, main shaft	Late 79 to * — FL, FLH, FLH-80, Classic
	41	34159-55	SHIFTER FORK, countershaft	Late 79 to * — FL, FLH, FLH-80, Classic
	42	34159-52	ROLLER, shifter finger (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	43	34173-33	NUT, shifter fork (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	44	34180-33	LOCKWASHER, shifter fork (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	45	34184-79	SHIFTER FINGER, only (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	46	34186-79	FORK SHAFT KIT, includes items 15 & 36	Late 79 to * — FL, FLH, FLH-80, Classic
	47	34461-72	SPACER, shifter pawl	Late 79 to * — FL, FLH, FLH-80, Classic
	48	34476-72	SHIFTER PAWL (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	49	34494-74C	PAWL CARRIER	Late 79 to * — FL, FLH, FLH-80, Classic
	51	34517-60	SHIFTER PAWL STOP, rear	Late 80 to * — FL, FLH, FLH-80, Classic
	53	34518-60	SHIFTER PAWL STOP, front	Late 80 to * — FL, FLH, FLH-80, Classic
	55	34657-60	SHAFT, shifter lever	Late 80 to * — FL, FLH, FLH-80, Classic
	56	34681-80	SHIFTER KIT, includes items 34, 35, 51, 53 & 55	Late 79 & Early 80 — FL, FLH, FLH-80, Classic
	57	34624-79	BASKET, shifter cover	Late 79 to * — FL, FLH, FLH-80, Classic
	58	35036-74	THRUST WASHER, shifter cam	Late 79 to * — FL, FLH, FLH-80, Classic

FOOT GEAR SHIFTER

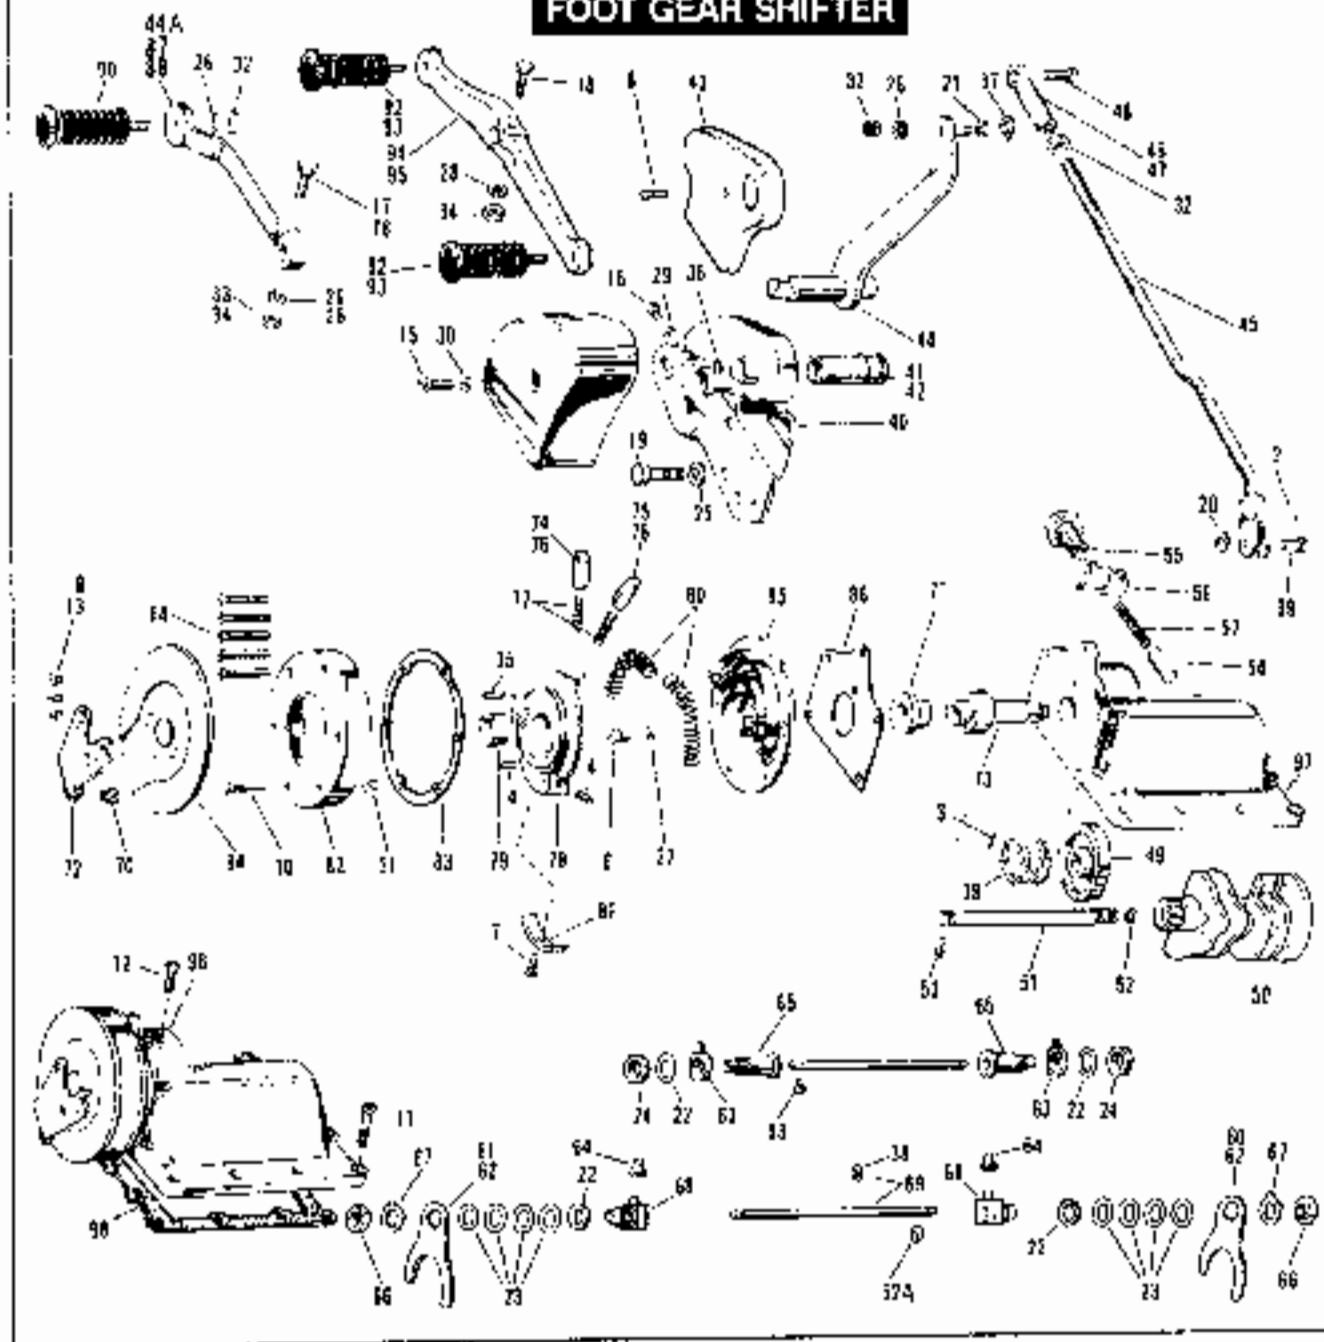


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	2	515	CUTTER PIN, 1/16 x 3/4	51 to * — FL, FLH, FLH-80, Classic
	3	534	CUTTER PIN, 3/32 x 5/8	51 to Early 75 — FL, FLH, FLH-80, Classic
	4	623	ROLL PIN (2)	74 to Early 79 — FL, FLH, FLH-80, Classic
	5	1309	SCREW, 1/4-20 x 1 1/16 hd	52 to Early 79 — FL, FLH, FLH-80, Classic
	7	1508	SCREW, No. 6-32 x 7/16 disk hd	52 to Early 79 — FL, FLH, FLH-80, Classic
	8	1719W	SCREW, No. 8-32 x 5/8 Phillips hd	65 to * — FL, FLH, FLH-80, Classic
	9	1761W	SCREW, No. 10-24 x 1/2 disk hd (3)	52 to 64 — FL, FLH
	10	1764W	SCREW, No. 10-24 x 5/16 socket hd	65 to Early 79 — FL, FLH, FLH-80, Classic
	11	1765W	SCREW, 1/4-24 x 2 socket hd (2)	69 to Early 79 — FL, FLH, FLH-80, Classic
	12	1766W	SCREW, 1/4-24 x 3/16 socket hd (5)	69 to Early 75 — FL, FLH, FLH-80, Classic
	13	1767W	SCREW, No. 10-24 x 1/2 disk hd (3)	65 to Early 75 — FL, FLH, FLH-80, Classic
	14	1772W	SCREW, No. 10-24 x 1-3/8 socket hd (5)	55 to Early 73 — FL, FLH, FLH-80, Classic
	15	2363	SCREW, 1/4-20 x 1-1/4 Factory pack disk hd	N/A 52 to 64 — FL, FLH
	16	2567	SCREW, 1/4-24 x 3/8 rd. hd	52 to * — FL, FLH, FLH-80, Classic
	17	4374W	BOLT, 5/16-24 x 1-1/4 hex. hd	52 to * — FL, FLH, FLH-80, Classic
	18	4337W	BOLT, 3/8-24 x 1-1/4 hex. hd	Late 65 to * — FL, FLH, FLH-80, Classic
	19	4713W	BOLT, 3/8-16 x 3/4 hex. hd (3)	52 to * — FL, FLH, FLH-80, Classic
	20	6226W	WASHER, 1/4 x 7/16 x 1/32	52 to * — FL, FLH, FLH-80, Classic
	21	6375B	WASHER, 3/8 x 9/16 x 1/32	65 to * — FL, FLH, FLH-80, Classic
	22	6750	WASHER, 43/64 x 55/64 x .0107 (as req.)	41 to * — FL, FLH, FLH-80, Classic
	23	6752	WASHER, 43/64 x 55/64 x .014 (as req.)	41 to * — FL, FLH, FLH-80, Classic
	24	6754	WASHER, 21/32 x 55/64 x 3/32 (2)	N/A 41 to Early 75 — FL, FLH
	25	7038	LOCKWASHER, 3/8 (3)	52 to * — FL, FLH, FLH-80, Classic
	26	7041	LOCKWASHER, 5/16	41 to * — FL, FLH, FLH-80, Classic
	27	7124	LOCKWASHER, 1/4 internal tooth	52 to Early 79 — FL, FLH, FLH-80, Classic
	28	7120W	LOCKWASHER, 3/8 internal tooth	Late 65 to * — FL, FLH, FLH-80, Classic
	29	7230	LOCKWASHER, 1/4 external tooth	52 to * — FL, FLH, FLH-80, Classic
	30	7231	LOCKWASHER, 1/4 external lock disk	52 to 64 — FL, FLH
	31	7623W	NUT, No. 10-24 x 1/8 x 3/8 hex	52 to Early 79 — FL, FLH, FLH-80, Classic
	32	7754	NUT, 5/16-24 x 3/16 x 1/2 hex	52 to * — FL, FLH, FLH-80, Classic
	33	7753	NUT, 5/16-24 x 1/4 x 1/2 hex	41 to * — FL, FLH, FLH-80, Classic
	34	7800W	NUT, 3/8-24 x 31/64 x 9/10 hex	Late 65 to * — FL, FLH, FLH-80, Classic
	35	9108A	P.N. shifter pawl carrier (2)	52 to Early 79 — FL, FLH, FLH-80, Classic
	36	9051	GRFUSE FITTING, lever bracket	52 to * — FL, FLH, FLH-80, Classic
	37	11031	RETAINING RING	65 to 73 — FL, FLH
	38	11036	RETAINING RING, hub shaft	Late 76 to * — FL, FLH, FLH-80, Classic
	39	33390-20	SPRING, shifter gear	41 to Early 75 — FL, FLH, FLH-80, Classic
	40	33630-70	BRACKET, shift lever	70 to * — FL, FLH, FLH-80, Classic
	41	33638-52	BUSHING, shift lever	N/A 52 to 59 — FL, FLH
	42	33638-70	BUSHING, shift lever	70 to * — FL, FLH, FLH-80, Classic
	43	33644-65	COVER, shift lever	65 to * — FL, FLH, FLH-80, Classic
	44	33660-70	SHIFT LEVER	N/A 70 to 73 — FL, FLH
		33660-74A	SHIFT LEVER (chrome)	74 to * — FL, FLH, FLH-80, Classic
	44A	33664-91	SHIFT LEVER	74 to Early 79 — FL, FLH, FLH-80, Classic
	45	33851-52A	SHIFTER ROD	N/A 52 to 64 — FL, FLH, FLH-80, Classic
	46	33870-51	END, shift rod	51 to 66 — FL, FLH, FLH-80, Classic
	47	33871-67	END, shift rod	67 to * — FL, FLH, FLH-80, Classic
	48	33878-51	SCREW, shift rod and shaft lever	N/A 51 to 64 — FL, FLH
	49	33900-36A	SHIFTER GEAR (4 speed only — 1965 & later)	N/A 41 to Early 79 — FL, FLH, FLH-80, Classic
		33950-65	SHIFTER GEAR (5 speed & reverse)	N/A 55 to 73 — FL, FLH
	50	34019-73	SHIFTER CAM (casting)	52 to Early 79 — FL, FLH, FLH-80, Classic

FOOT GEAR SHIFTER

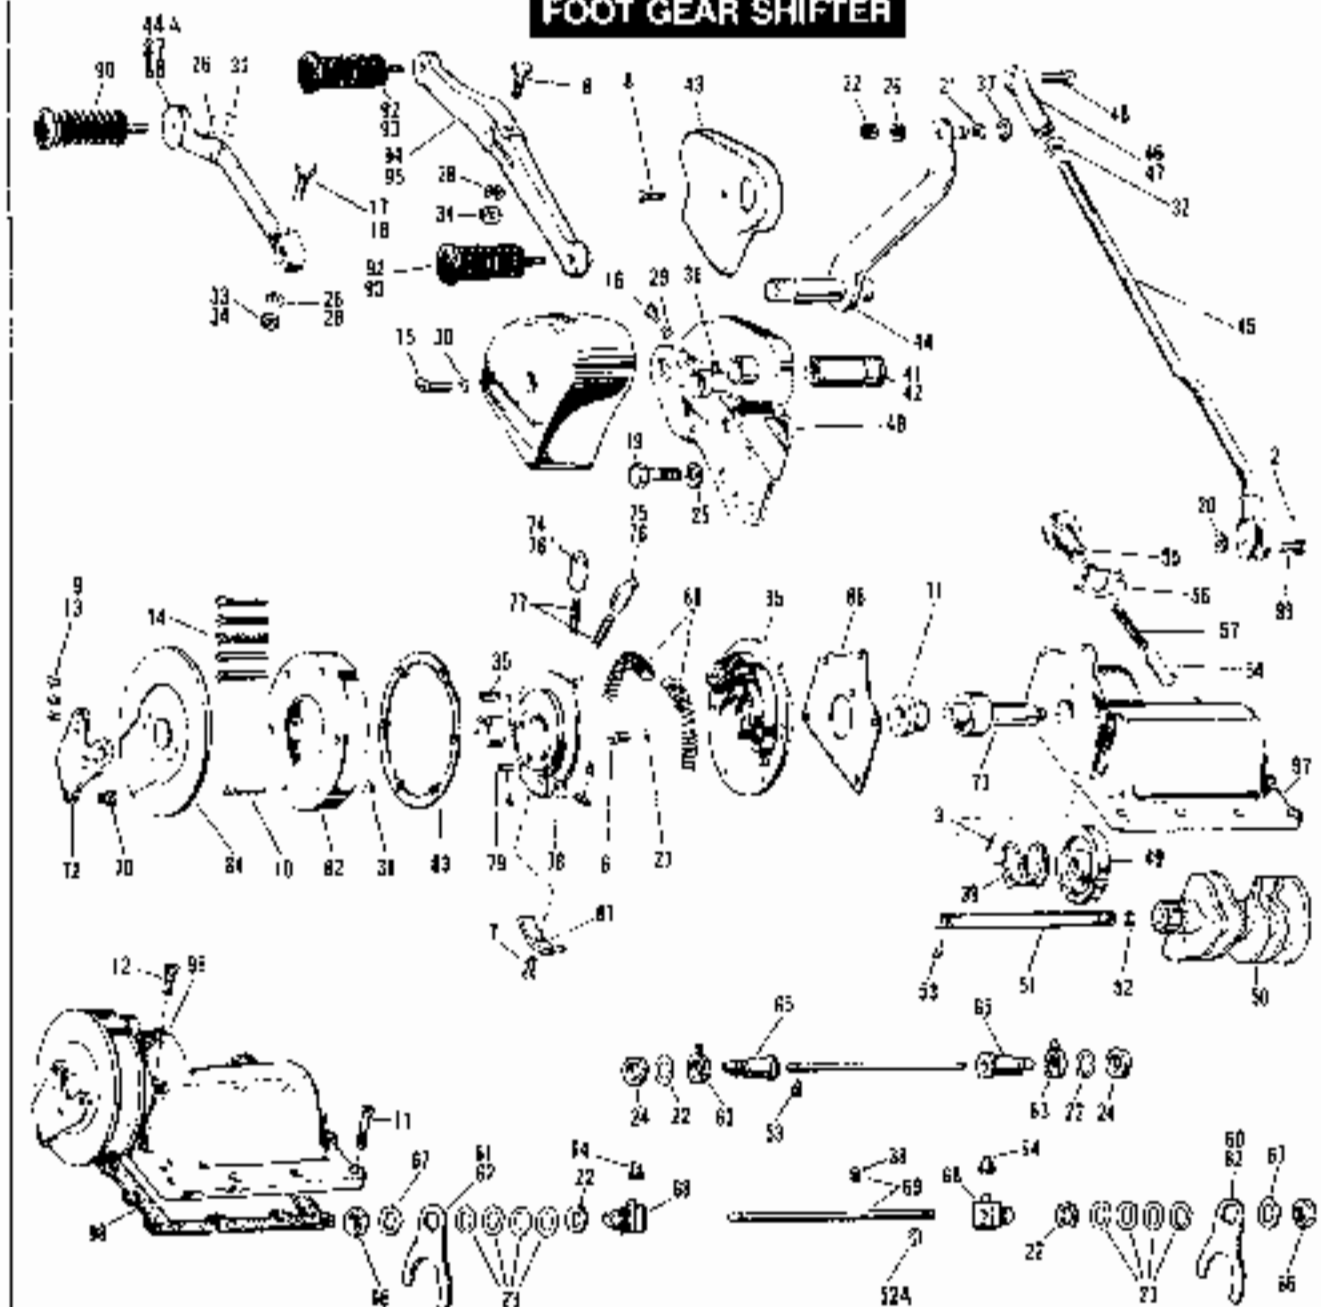


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	51	34031-41	SHAFT, shifter cam	52 to Early 79 — FL, FLH, FLH-80, Classic
	52	34036-36	GIL SEAL, shifter cam shaft	N/A 41 to Early 79 — FL, FLH, FLH-80, Classic
	52A	34036-80	CRANK, shifter cam shaft	41 to Early 79 — FL, FLH, FLH-80, Classic
	53	34050-36	LOCK SCREW, shifter cam shaft	41 to Early 79 — FL, FLH, FLH-80, Classic
	54	34062-52	CAM FOLLOWER	52 to * — FL, FLH, FLH-80, Classic
	55	34064-52	RETAINER, cam follower	52 to Early 79 — FL, FLH, FLH-80, Classic
	56	34066-52	WASHER, cam follower retainer	52 to Early 79 — FL, FLH, FLH-80, Classic
	57	34066-52A	SPRING, cam follower	52 to Early 79 — FL, FLH, FLH-80, Classic
	58	34158-59	SHIFTER PCHK, main shaft	41 to * — FL, FLH, FLH-80, Classic
	61	34155-56	SHIFTER PCHK, countershaft (4 speed)	41 to * — FL, FLH, FLH-80, Classic
	62	34160-59	SHIFTER PCHK, countershaft (3 speed & reverse)	N/A 41 to 78 — FL, FLH, FLH-80, Classic
	63	34155-36	SHIFTER FINGER (2)	N/A 41 to Early 79 — FL, FLH
	64	34158-39	ROLLER, shifter finger (2)	41 to Early 79 — FL, FLH, FLH-80, Classic
	65	34175-36	BUSHING, shifter fork (2)	N/A 41 to Early 79 — FL, FLH
	66	34179-33	NUT, bushing (2)	41 to * — FL, FLH, FLH-80, Classic
	67	34180-33	LOCK WASHER, bushing (2)	41 to * — FL, FLH, FLH-80, Classic
	68	34162-76	SHIFTER FINGER (2)	Late 76 to Early 79 — FL, FLH, FLH-80, Classic
		34164-73	SHIFTER FINGER (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	69	34186-75	PCRM SHAFT KIT, includes items 38 & 52A	41 to Early 79 — FL, FLH, FLH-80, Classic
	70	34428-52	BUSHING, shifter shaft lever	52 to Early 79 — FL, FLH, FLH-80, Classic
	71	34435-52	BUSHING, shifter shaft (bronzet)	41 to Early 79 — FL, FLH, FLH-80, Classic
	72	34447-52	LEVER, shifter shaft	52 to Early 79 — FL, FLH, FLH-80, Classic
	73	34463-52	SHIFTER SHAFT	N/A 52 to Early 79 — FL, FLH, FLH-80, Classic
	74	34477-53	SHIFTER PAWL, left — w/ thrust spring	N/A 52 to Early 79 — FL, FLH
	75	34478-53	SHIFTER PAWL, right — w/ thrust spring	N/A 52 to Early 79 — FL, FLH
	76	34478-75	SHIFTER PAWL (2)	N/A Late 75 to Early 79 — FL, FLH, FLH-80, Classic
	77	34482-53	SPRING, shifter pawl (2)	52 to Early 79 — FL, FLH, FLH-80, Classic
	78	34468-52B	CARRIER, shifter pawl	N/A 52 to Early 79 — FL, FLH, FLH-80, Classic
	79	34468-52	BUSHING, pawl carrier	N/A 52 to Early 79 — FL, FLH, FLH-80, Classic
	80	34500-52A	SPRING, pawl carrier (2)	52 to Early 79 — FL, FLH, FLH-80, Classic
	81	34525-54	RETAINER, pawl	N/A 52 to Early 79 — FL, FLH, FLH-80, Classic
	82	34551-52	COVER, shifter	52 to Early 79 — FL, FLH, FLH-80, Classic
	83	34552-52	GASKET, shifter cover	52 to Early 79 — FL, FLH, FLH-80, Classic
	84	34555-52	SHIELD, dust cover	N/A 52 to Early 79 — FL, FLH, FLH-80, Classic
	85	34560-52	ADAPTER PLATE, shifter	N/A 52 to Early 79 — FL, FLH, FLH-80, Classic
	86	34566-52	GASKET, adapter plate	52 to Early 79 — FL, FLH, FLH-80, Classic
	87	34600-74	SHIFT LEVER, with cover	N/A 74 to Early 79 — FL, FLH, FLH-80, Classic
	88	34605-54A	SHIFT LEVER, without cover	N/A 64 to 73 — FL, FLH
	89	34609-52	COVER, shift lever (black)	52 to Early 79 — FL, FLH, FLH-80, Classic
	92	34609-65	COVER, shift lever (white)	65 to * — FL, FLH, FLH-80, Classic
	93	34611-65	COVER, shift lever (black) (2)	65 to * — FL, FLH, FLH-80, Classic
	94	34690-56	SHIFT LEVER, with cover (heel & toe)	65 to 73 — FL, FLH
	95	34690-74A	SHIFT LEVER, with cover (heel & toe) (chrome)	74 to * — FL, FLH, FLH-80, Classic
		34797-73	CONVERSION KIT, hand shift to foot shift	N/A 70 to Early 79 — FL, FLH, FLH-80, Classic
	96	34756-79	SHIFTER ASSEMBLY, 4 speed	N/A Early 79 — Classic
		34730-65	SHIFTER ASSEMBLY, 4 speed	N/A 65 to Early 79 — FL, FLH, FLH-80, Classic
	97	34803-59	COVER, shifter	N/A 59 to Early 79 — FL, FLH, FLH-80, Classic
	98	34624-36	GASKET, shifter cover	59 to Early 79 — FL, FLH, FLH-80, Classic
	99	42269-30	CLEVIS PIN, shift rod	52 to 74 — FL, FLH

HAND GEAR SHIFTER

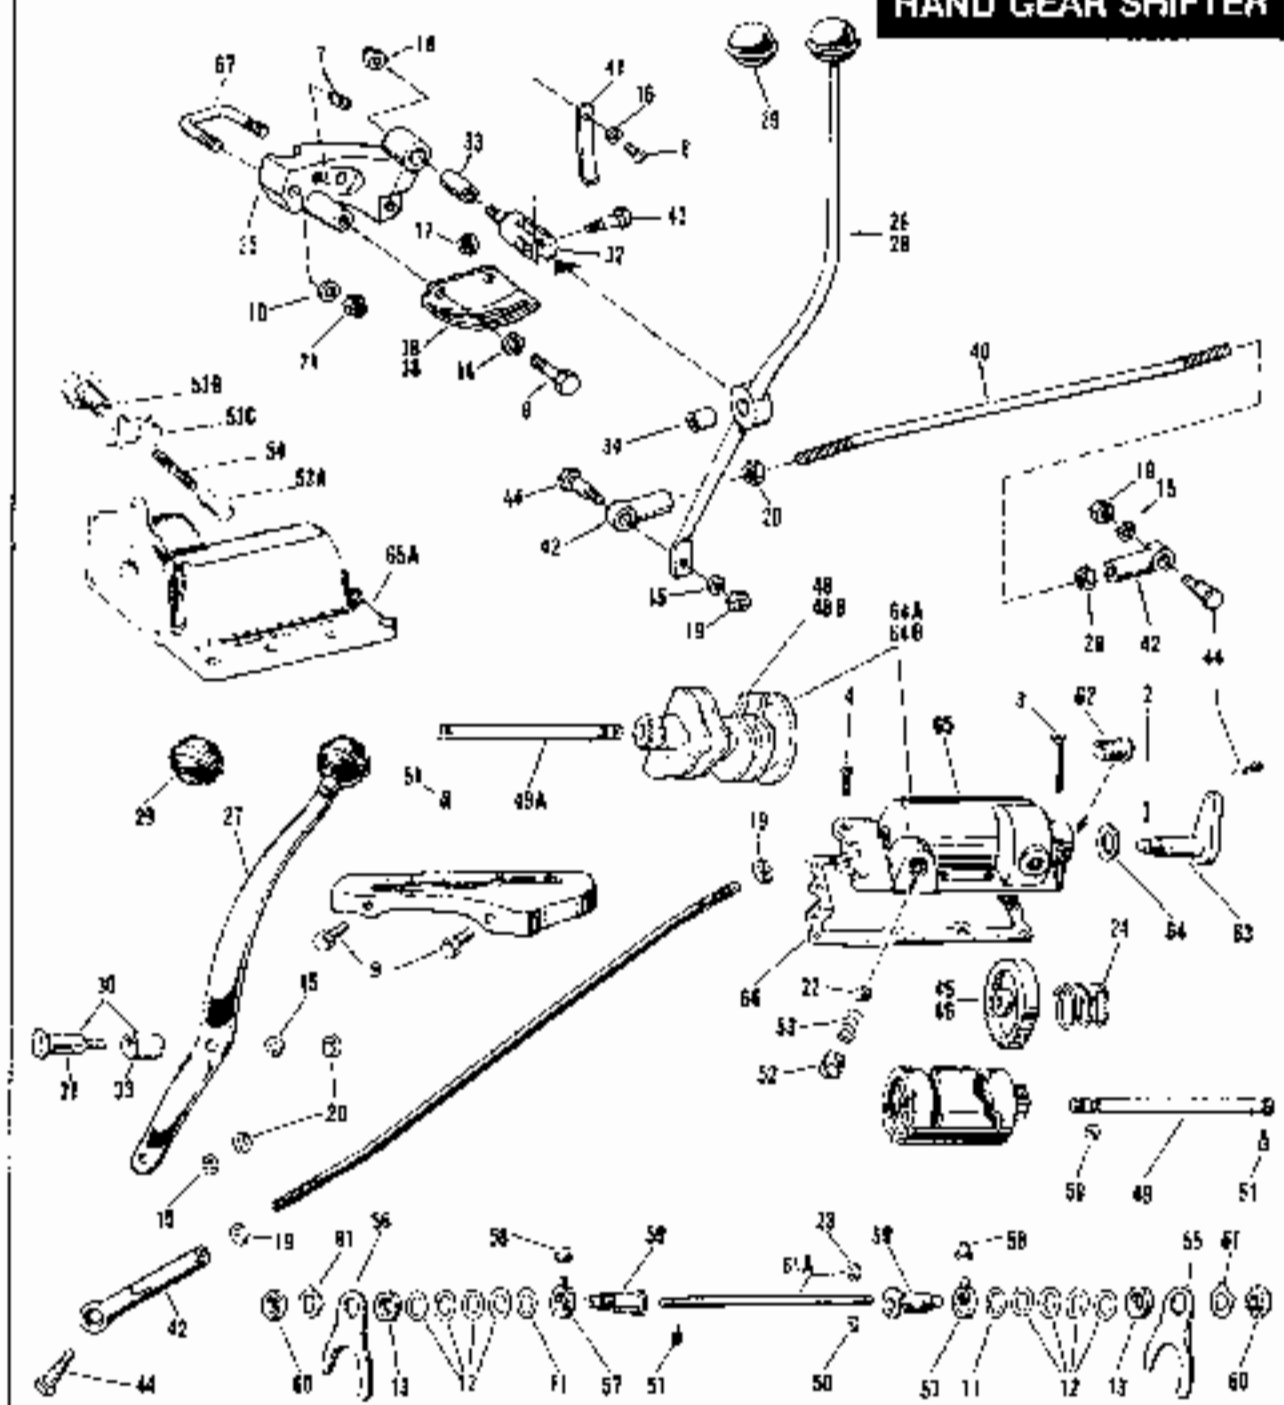


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	515	COTTER PIN, 1/16 x 3/4 (2)	51 to Early 76 — FL, FLH
	2	534	COTTER PIN, 3/32 x 5/8	51 to Early 76 — FL, FLH
	3	1755W	SCREW, 1/4-24 x 2 socket hd (2)	56 to Early 79 — FL, FLH
	4	1765W	SCREW, 1/4-24 x 13/16 socket hd (2)	66 to Early 79 — FL, FLH
		2133W	SCREW, 1/4-24 x 13/16 cup hd (10 to 16)	41 to 64 — FL, FLH
	5	2664	SCR-W, No. 10-24 x 1/16 flat chisel pt	66 to Early 79 — FL, FLH
	7	3227W	SET SCREW, shift lever bracket	N/A 66 to Early 79 — FL, FLH
	8	3770	BOLT, 1/4-28 x 7/16 hex. hd (2)	66 to Early 79 — FL, FLH
	9	3779	BOLT, 1/4-28 x 5/8 hex. hd (2)	47 to 56 — FL, FLH
	10	E403H3	WASHER, 3/8 x 13/16 x .004 (2)	56 to Early 79 — FL, FLH
	11	E750	WASHER, 43/64 x 55/64 x .007 (as req.)	41 to Early 79 — FL, FLH
	12	E752	WASHER, 43/64 x 55/64 x .014 (as req.)	41 to Early 79 — FL, FLH
	13	E754	WASHER, 21/32 x 55/64 x .023 (2)	N/A 41 to Early 79 — FL, FLH
	14	7036	LOCKWASHER, 1/4 (2)	66 to Early 79 — FL, FLH
	15	7041	LOCKWASHER, 5/16	41 to Early 79 — FL, FLH
	16	7069	LOCKWASHER, No. 10 (3)	66 to Early 79 — FL, FLH
	17	7663	LOCKNUT, 1/4-28 x 5/16 x 7/16 hex	66 to Early 79 — FL, FLH
	18	7725	LOCKNUT, 5/16-24 x 1/4 x 1/2 hex	66 to Early 79 — FL, FLH
	19	7797	LOCKNUT, 5/16-24 x 1/4 x 1/2 hex	51 to Early 79 — FL, FLH
	20	7765	NUT, 5/16-24 x 17/64 x 1/2 hex	41 to Early 79 — FL, FLH
	21	7775	LOCKNUT, 3/8-24 x 7/16 x 9/16 hex	66 to Early 79 — FL, FLH
	22	8672	STEEL BALL, 1/2 in.	N/A 41 to Early 79 — FL, FLH
	23	11036	RETAINING RING, lock shaft	Late 76 to Early 79 — FL, FLH
	24	33330-26	SPRING, shifter gear	41 to Early 79 — FL, FLH
	25	3303-66	SUPPORT BRACKET, shift lever	N/A 66 to Early 79 — FL, FLH
	26	3365E-66	LEVER (small tank)	N/A 66 to Early 79 — FL, FLH
	27	33675-37A	LEVER (left hand only)	N/A 41 to 56 — FL, FLH
	28	33675-56	LEVER (large tank)	N/A 66 to Early 79 — FL, FLH
	29	33745-31	BALL, hand shift lever (black)	N/A 41 to 65 — FL, FLH
	30	33775-37	STUD, shift lever, with bushing	N/A 41 to 65 — FL, FLH
	31	33776-47	STUD, shift lever	N/A 47 to 65 — FL, FLH
	32	33776-60	PIVOT SHAFT, hand shift lever	N/A 66 to Early 79 — FL, FLH
	33	33778-47	BUSHING, shift lever stud	N/A 47 to Early 79 — FL, FLH
	34	33778-56	BUSHING, hand shift lever	N/A 66 to Early 79 — FL, FLH
	35	33789-66	GUIDE, shift lever (4 speed)	N/A 66 to Early 79 — FL, FLH
	36	33791-66	GUIDE, shift lever (3 speed and reverse)	N/A 66 to Early 79 — FL, FLH
	40	33827-65	SHIFTER ROD	N/A 66 to Early 79 — FL, FLH
	41	33855-66A	SPRING, shift lever (2)	N/A 66 to Early 79 — FL, FLH
	42	33670-21	END, shift rod (2)	N/A 51 to Early 79 — FL, FLH
	43	33875-66	SHOULDER BOLT, shift lever	N/A 66 to Early 79 — FL, FLH
	44	33879-51	SCREW, shift rod & shaft lever	N/A 41 to Early 79 — FL, FLH
	45	33960-38A	SHIFTER ARM (4 speed only, on 1965 & later)	N/A 41 to Early 79 — FL, FLH
	46	33960-65	SHIFTER ARM (3 speed and reverse)	N/A 66 to Early 79 — FL, FLH
	48	34010-76	SHIFTER CAM (3 speed and reverse)	N/A Late 76 to Early 79 — FL, FLH
	48B	34019-73	SHIFTER CAM (4 speed)	Late 76 to Early 79 — FL, FLH
	49	34030-36	SHAFT, shifter cam	N/A 41 to Early 79 — FL, FLH
	49A	34031-41	SHAFT, shifter cam	Late 76 to Early 79 — FL, FLH
	50	34036-35	OIL SEAL, shifter cam shaft	41 to Early 79 — FL, FLH
	51	34050-36	LOCK SCREW, shifter cam shaft end lock nut	41 to Early 79 — FL, FLH
	52	34052-36	CAP SCREW, cam plunger	N/A 41 to Early 79 — FL, FLH
	53	34057-36	SPRING, plunger ball	N/A 41 to Early 79 — FL, FLH
	53A	34062-52	CAVIT. COVER	Late 76 to Early 79 — FL, FLH
	53B	34064-52	RETAINER, cam follower	Late 76 to Early 79 — FL, FLH
	53C	34066-52	WASHER, cam follower retainer	Late 76 to Early 79 — FL, FLH
	54	34068-52A	SPRING, cam follower	Late 76 to Early 79 — FL, FLH
	55	34158-26	SHIFTER FORK, mainshaft	41 to Early 79 — FL, FLH

HAND GEAR SHIFTER

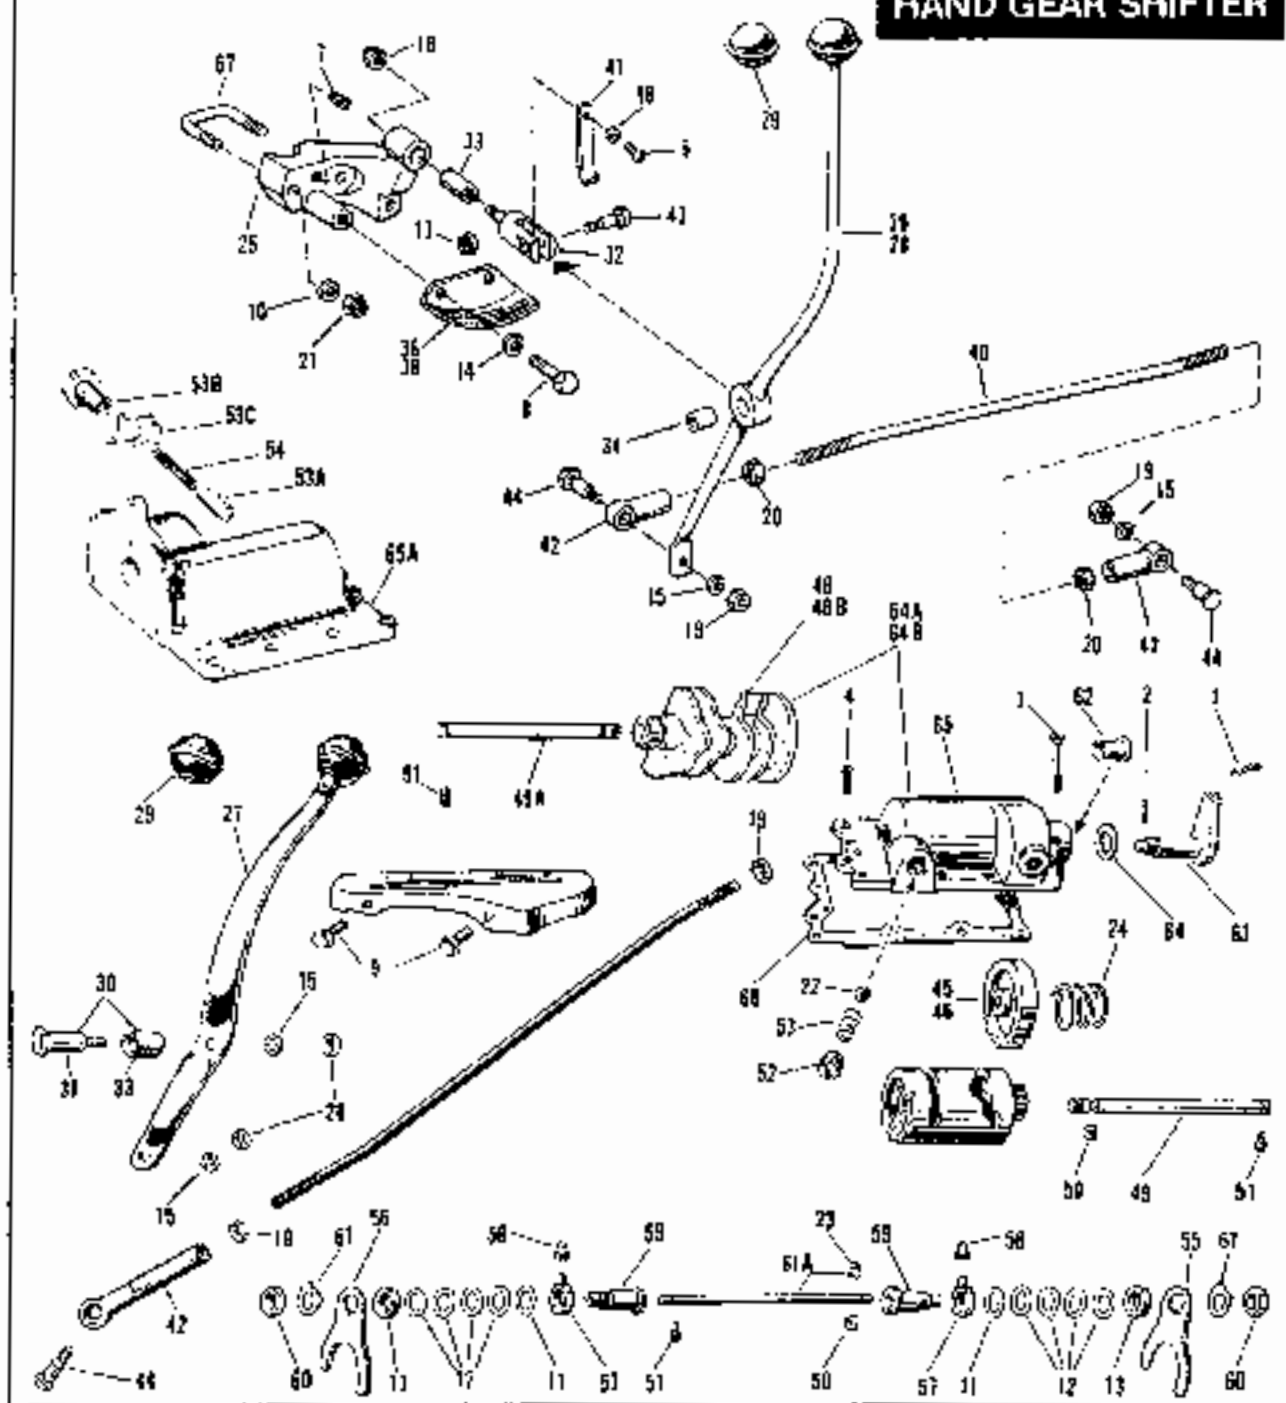

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	50	34119-36	SHIFTER FORK, countershaft (4 speed)	41 to Early 79 — FL, FLH
		34160-39	SHIFTER FORK, countershaft (3 speed and reverse)	N/A 41 to Early 78 — FL, FLH
	51	34165-36	SHIFTER FINGER (2)	N/A 41 to Early 79 — FL, FLH
	52	34168-39	ROLLER, shifter finger (2)	41 to Early 79 — FL, FLH
	53	34175-36	BUSHING, shifter fork (2)	N/A 41 to Early 79 — FL, FLH
	60	34179-33	WOT. bushing (2)	41 to Early 79 — FL, FLH
	61	34180-33	LOCKWASHER, bushing (2)	41 to Early 79 — FL, FLH
	514	34186-70	FORK SHAFT KIT Consists of besides shaft: THROTTLE RETAINING RING, fork shaft PISTON C-RING	41 to Early 79 — FL, FLH
	52	34430-36	BUSHING, shifter shaft	N/A 52 to Early 78 — FL, FLH
	53	34448-51	SHIFT LEVER, with shaft	51 to Early 79 — FL, FLH
	54	34459-26	LEATHER WASHER, shift shaft	41 to Early 79 — FL, FLH
		34797-70	CONVERSION KIT, handshift to footshift	N/A 70 to Early 79 — FL, FLH
	64A	34800-66	SHIFTER CAM & COVER ASSEMBLY (3 speed and reverse)	N/A 65 to Early 78 — FL, FLH
	64B	34801-66	SHIFTER CAM & COVER ASSEMBLY (4 speed)	N/A 65 to Early 79 — FL, FLH
	65	34802-66	COVER, shifter	N/A 65 to Early 78 — FL, FLH
	65A	34803-59	COVER, shifter	N/A Late 74 to Early 79 — FL, FLH
	66	34824-36	BASKET, shifter cover	41 to Early 79 — FL, FLH
	57	36400-57	U-BOLT, support bracket	N/A 68 to Early 79 — FL, FLH

TRANSMISSION — MAINSHAFT & HOUSING

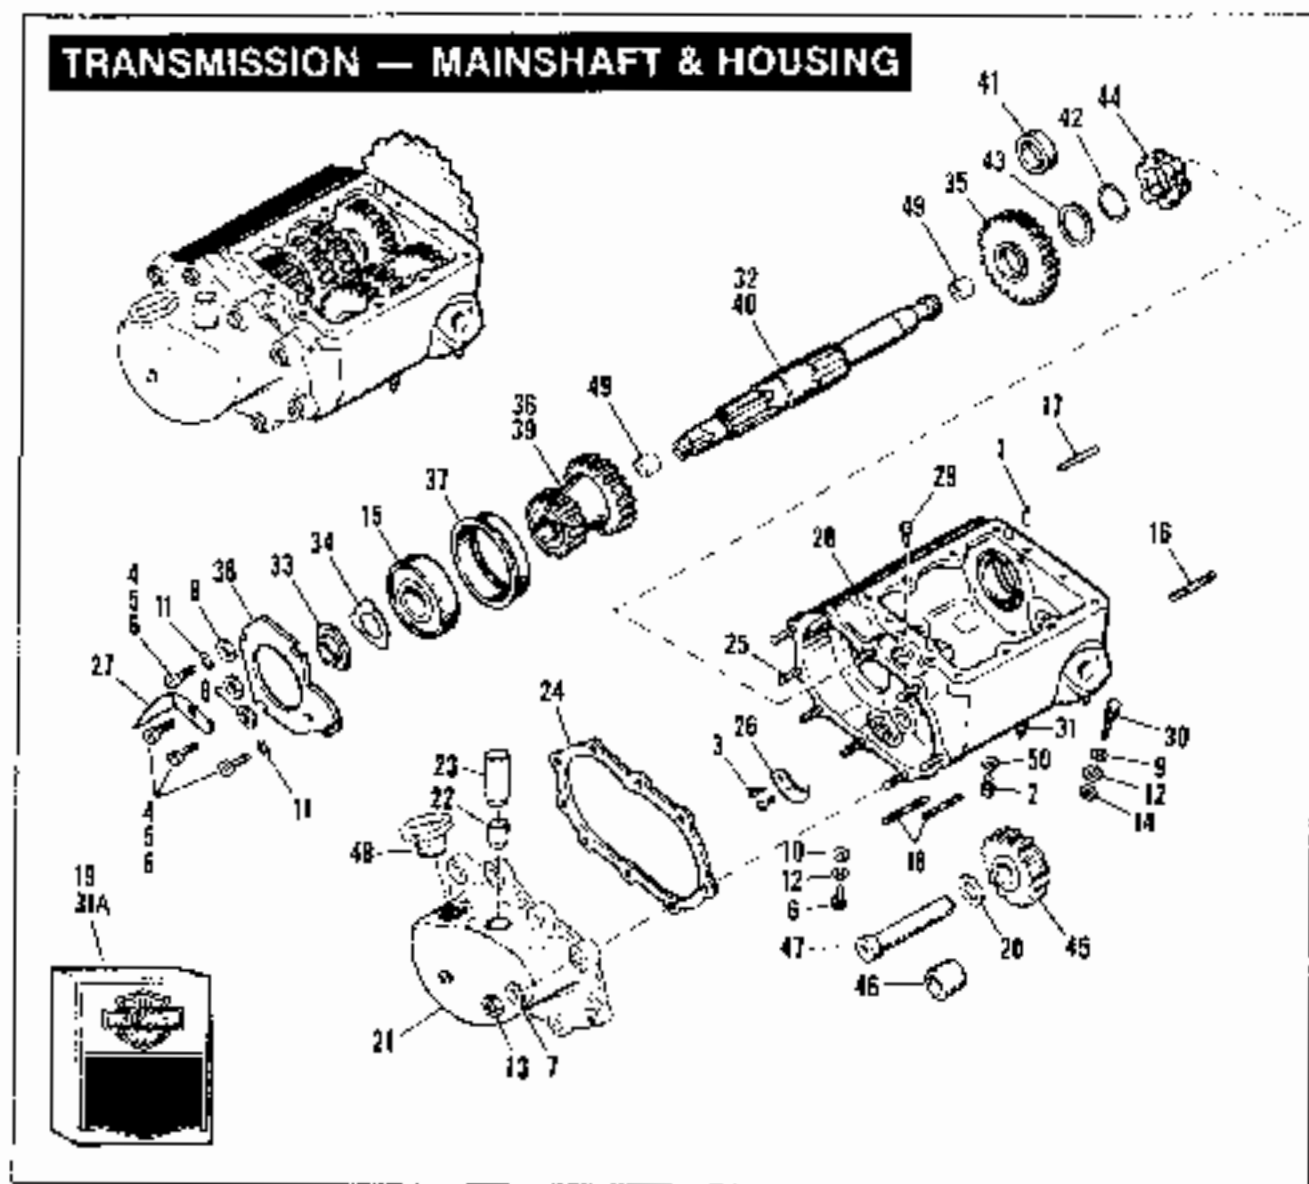


TRANSMISSION — MAINSHAFT AND HOUSING

A25-1

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
NOTE: Additional mainshaft parts may be found in the next section.				
	1	375	DOWEL PIN (2)	41 to 4 - FL, FLH, FLH-80, Classic
	2	707	CHAIN PULLS	41 to 4 - FL, FLH, FLH-80, Classic
	3	16640	SCREW, 1/4-24 x 5/8 disk, hd. (2)	41 to 69 - FL, FLH
	4	2333W	SCREW, 1/4-24 x 12/16 disk, hd. (4)	4 to 79 - FL, FLH, FLH-80, Classic
	5	2607	SCREW, 1/4-20 x 3/4 hex/drw pan hd. (4)	Early 80 - FL, FLH, FLH-80, Classic
	6	2769A	SCREW, 1/4-20 x 3/4 hex, sucker hd. (4)	1976-80 to 4 - FL, FLH, FLH-80, Classic
	7	6C16	WASHER, 1/2-20 x 1/2 x 1/16 (9)	70 to 4 - FL, FLH, FLH-80, Classic
	8	6090	WASHER, 1/4 x 7/16 x 3/64 (3)	1981 - Classic
	9	5F00HB	WASHER, 3/8 x 13/16 x 3/32 (4)	41 to 81 - FL, FLH, FLH-80, Classic
		6474	WASHER (4)	82 to 4 - FLH-80, Classic
	10	6701	WASHER, 3/8 x 13/16 x 1/16	41 to 4 - FL, FLH, FLH-80, Classic
	11	7036	LOCKWASHER, 1/4 (4)	Early 80 - FL, FLH, FLH-80, Classic
	12	7038	LOCKWASHER, 3/8 (5)	41 to 4 - FL, FLH, FLH-80, Classic
	13	7753	NUT, 5/16-24 x 1/4 x 1/2 hex. (9)	70 to 4 - FL, FLH, FLH-80, Classic
	14	7233W	NUT, 3/8-24 x 21/64 x 9/16 hex. (4)	41 to 4 - FL, FLH, FLH-80, Classic
	15	9C20	BALL BEARING, mainshaft	41 to 4 - FL, FLH, FLH-80, Classic


RETAIN PRICE	INDEX NO	PART NO.	NAME	USED ON
NOTE: Additional mainshaft parts may be found in the next section				
	15	16830-29A	STUD, 5/8-24 x 1-13/16 (2)	65 to 69 — FL, FLH
	17	16830-54	STUD, 5/8-24 x 2-5/16 (2, 4 — 1970 to 1979)	65 to * — FL, FLH, FLH-80, Classic
	18	24823-80	STUD, 5/16-13 x 5/16-24 x 1-2/4 (4, 5 — 1970 & later)	65 to * — FL, FLH, FLH-80, Classic
	19	33031-3E	TRANSMISSION GASKET SET	41 to 64 — FL, FLH
		33031-65A	TRANSMISSION GASKET, SEAL & LOCKPLATE KIT	65 to 79 — FL, FLH, FLH-80, Classic
		33031-80	TRANSMISSION GASKET, SEAL & LOCKPLATE KIT	80 to * — FL, FLH, FLH-80, Classic
	20	33237-64	SPACER, reverse idler gear	N/A
	21	33276-70	COVER, transmission (see Kick Starter for 1969 & earlier cover)	64 to Early 79 — FL, FLH
	22	33280-38	LOWER BUSHING, transmission cover	70 to * — FL, FLH, FLH-80, Classic
	23	33291-38	UPPER BUSHING, transmission cover	70 to * — FL, FLH, FLH-80, Classic
	24	33295-38	GASKET, transmission cover	70 to * — FL, FLH, FLH-80, Classic
	25	33298-65	STUD, 5/16-18 x 5/16-24 x 1-1/2 (5, 4 — 1970 & later)	65 to * — FL, FLH, FLH-80, Classic
	26	33353-78	BUMPER PLATE, starter crank	41 to 60 — FL, FLH
	27	33429-39	CLUTCH FLECTOR, mainshaft starter gear	41 to 69 — FL, FLH
	27A	34090-84	BEARING, MAIN SHAFT	Late 84 to * — FLH-80
	28	34701-79	TRANSMISSION HOUSING (3 speed & reverse)	N/A
		34702-79	TRANSMISSION HOUSING (4 speed)	Late 78 to Early 79 — FL, FLH
		34702-79	TRANSMISSION HOUSING (4 speed)	Late 79 to Early 79 — FL, FLH, FLH-80, Classic
		34702-80	TRANSMISSION HOUSING (4 speed)	Late 79 — FL, FLH, FLH-80, Classic
		34702-80	TRANSMISSION HOUSING (4 speed)	80 — FL, FLH, FLH-80, Classic
		34703-78	TRANSMISSION HOUSING KIT (4 speed)	55 to Early 78 — FL, FLH
		34705-65B	TRANSMISSION HOUSING KIT (3 speed)	55 to Early 78 — FL, FLH
		34711-80	TRANSMISSION HOUSING (4 speed)	81 — FL-80, Classic
		34714-82A	TRANSMISSION HOUSING (4 speed)	82 to * — FLH-80, Classic
	29	34720-56	VENT SCREW, transmission housing	56 to 78 — FL, FLH, FLH-80
	30	34723-47	STUD, gear box bottom, oversize (4)	47 to 83 — FL, FLH, FLH-80, Classic
	31	34724-26	BOTTOM STUD, transmission housing (4)	41 to 83 — FL, FLH, FLH-80, Classic
		34726-84	STUD, transmission housing (4)	84 to * — FLH-80
	31A	34797-70	CONVERSION KIT, handshift to clutch	79 to Early 79 — FL, FLH, FLH-80, Classic
	32	35039-65	MAINSHAFT	65 to 69 — FL, FLH
		35039-70B	MAINSHAFT KIT	70 to Early 80 — FL, FLH, FLH-80, Classic
		35039-80	MAINSHAFT	Late 80 to Early 84 — FL, FLH, FLH-80, Classic
		35039-84	MAINSHAFT	Late 84 to * — FLH-80
		35040-50	MAINSHAFT	41 to 64 — FL, FLH
	33	35046-53	NUT, mainshaft bearing, with lockwasher	41 to * — FL, FLH, FLH-80, Classic
	34	35050-40	LOCKWASHER, mainshaft bearing	41 to * — FL, FLH, FLH-80, Classic
	35	35072-70	GEAR, mainshaft second (handshift — 3 speed & rev.)	70 to Early 79 — FL, FLH
		22 T.		N/A
	36	35073-70	GEAR, mainshaft low & reverse (3 speed & rev.) — 15 & 20 T.	70 to Early 79 — FL, FLH
		20 T.		N/A
	37	35100-36	HOUSING, mainshaft bearing	41 to 79 — FL, FLH, FLH-80, Classic
		35100-75	HOUSING, mainshaft bearing	80 to * — FL, FLH, FLH-80, Classic
	38	35111-36	RETAINING PLATE, bearing housing	41 to 79 — FL, FLH, FLH-80, Classic
		35111-80	RETAINING PLATE, bearing housing	80 to * — FL, FLH, FLH-80, Classic
	39	35282-59	GEAR, mainshaft low & second (4 speed) — 15 & 20 T.	59 to * — FL, FLH, FLH-80, Classic
	40	35306-59	GEAR, mainshaft third (4 speed) — 24 T.	59 to * — FL, FLH, FLH-80, Classic
	41	35322-38	BUSHING, mainshaft second & third gears (handshift)	41 to 79 — FL, FLH, FLH-80, Classic
	42	35337-36	RETAINING PLNG, mainshaft second & third gears	41 to * — FL, FLH, FLH-80, Classic
	43	35365-35	WASHER, mainshaft second & third gears	41 to * — FL, FLH, FLH-80, Classic
	44	35440-38	CLUTCH, mainshaft	41 to * — FL, FLH, FLH-80, Classic
	45	36140-36	CLUTCH GEAR (3 speed & rev.) — 14 T.	41 to Early 79 — FL, FLH
	46	36150-31	BUSHING, idler gear (3 speed & rev.)	N/A
	47	36156-36	IDLER GEAR SHAFT (3 speed & rev.)	N/A
	48	37077-79	FLYER FLUG	70 to * — FL, FLH, FLH-80, Classic
	49	37438-36	BUSHING, mainshaft (2)	41 to Early 80 — FL, FLH, FLH-80, Classic
	50	62702-52	WASHER, chain plug	41 to * — FL, FLH, FLH-80, Classic

TRANSMISSION — COUNTERSHAFT

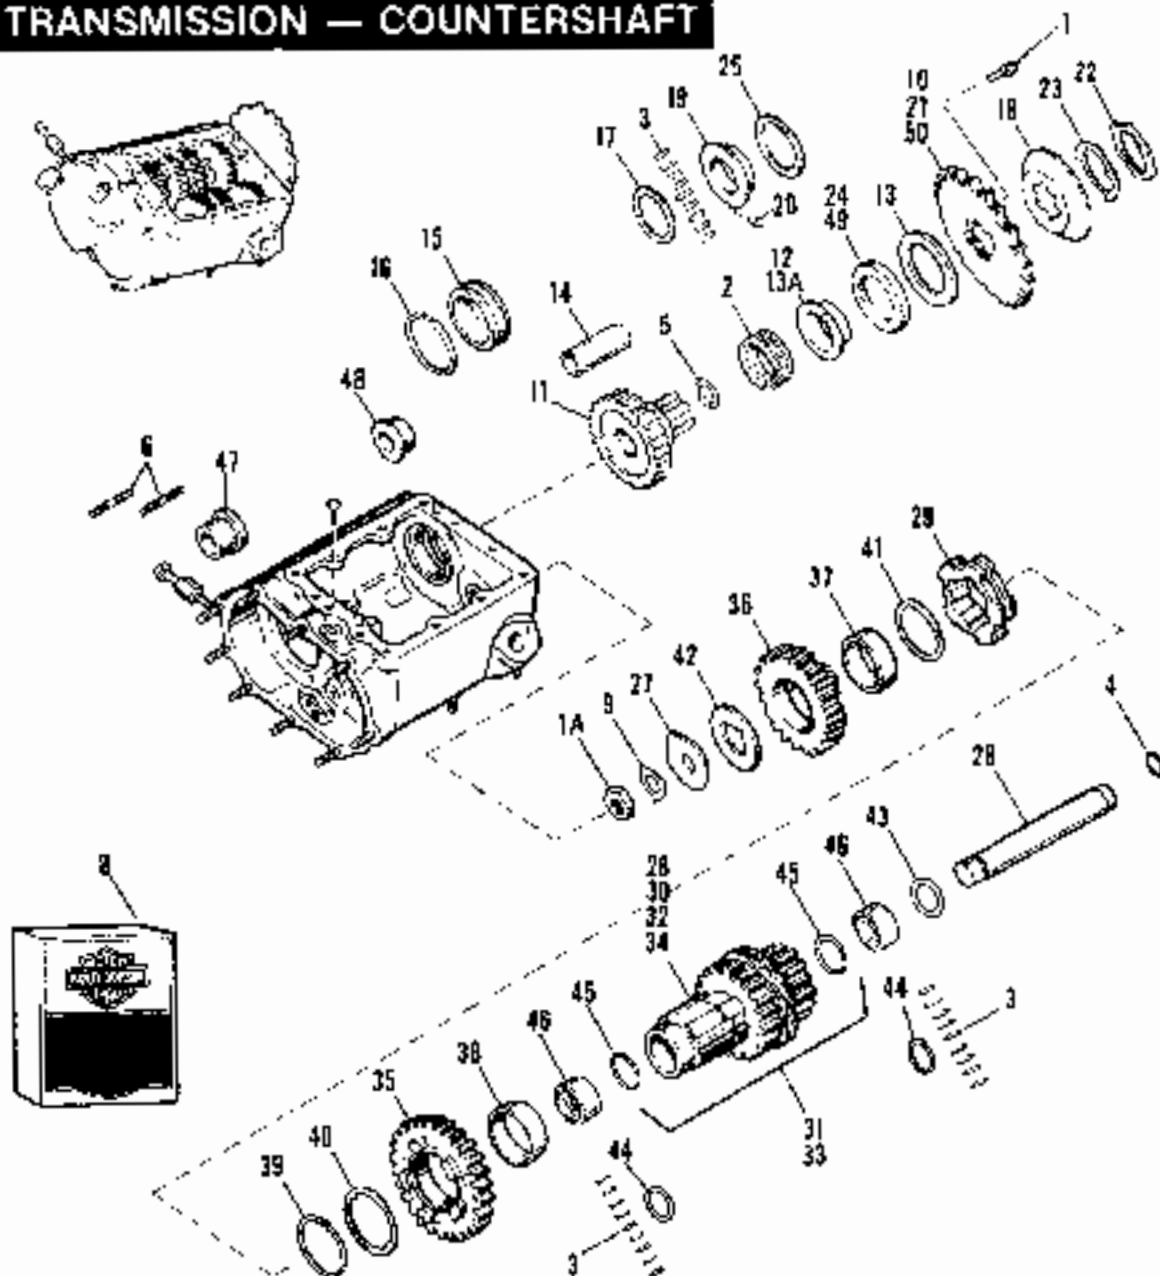


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
		NOTE: See previous section for additional transmission parts listing.		
	1	847	SHAFT, 15 1/2-24 x 3/8 knr. 40 speed (14)	82 to 84 — FL, H-80, Classic
	2	891	NO. 1, 17-20 x 7/32 x 3/8 knr.	41 to 79 — FL, FLH, FLH-80, Classic
		893	NEEDLE BEARING, mainshaft	Late 77 to 81 — FL, FLH, FLH-80, Classic
		894	NEEDLE BEARING, countershaft	82 to 84 — FL, H-80, Classic
		904	COLLET, main drive gear & countershaft 15 & 17 1/4 (14)	41 to Early 77 — FL, FLH
		905	COLLET, main drive gear & countershaft 15 & 17 1/4 (14)	41 to Early 77 — FL, FLH
		906	COLLET, main drive gear & countershaft 15 & 17 1/4 (14)	41 to Early 77 — FL, FLH
		907	COLLET, countershaft	85 to 87 — FL, FLH, FLH-80, Classic
		908	COLLET, main drive gear	85 & Early 86 — FL, FLH
		909	COLLET, main drive gear	Late 81 to 84 — FL, H-80, Classic
		910	COLLET, main drive gear	Late 86 to Early 87 — FL, FLH, FLH-80, Classic
		911	COLLET, main drive gear	85 to 87 — FL, FLH, FLH-80, Classic
		912	COLLET, main drive gear	85 to 87 — FL, FLH
		913	COLLET, main drive gear	85 to 79 — FL, FLH, FLH-80, Classic
		914	COLLET, main drive gear	80 to 84 — FL, FLH, FLH-80, Classic
		915	COLLET, main drive gear	41 to 79 — FL, FLH, FLH-80, Classic
		916	COLLET, main drive gear	80 to 82 — FL, FLH, FLH-80, 80 & 81 — Classic
		917	COLLET, main drive gear	41 to Early 77 — FL, FLH
		918	COLLET, main drive gear	Late 77 to 81 — FL, FLH, FLH-80, Classic
		919	COLLET, main drive gear	Late 77 to 79 — FL, FLH, FLH-80, Classic
		920	COLLET, main drive gear	80 & 81 — FL, FLH, FLH-80, Classic
		921	COLLET, main drive gear	82 — Classic, 85 to 87 — FL, H-80
		922	COLLET, main drive gear	80 & 81 — FL, FLH, FLH-80, Classic
		923	COLLET, main drive gear	82 — FL, H-80
		924	COLLET, main drive gear	41 to 84 — FL, FLH
		925	COLLET, main drive gear	65 to 84 — FL, FLH, FLH-80, Classic
		926	COLLET, main drive gear	41 to Early 77 — FL, FLH
		927	COLLET, main drive gear	41 to Early 77 — FL, FLH
		928	COLLET, main drive gear	41 to Early 77 — FL, FLH
		929	COLLET, main drive gear	41 to Early 77 — FL, FLH
		930	COLLET, main drive gear	41 to Early 77 — FL, FLH
		931	COLLET, main drive gear	41 to Early 77 — FL, FLH
		932	COLLET, main drive gear	41 to Early 77 — FL, FLH
		933	COLLET, main drive gear	41 to Early 77 — FL, FLH
		934	COLLET, main drive gear	41 to Early 77 — FL, FLH
		935	COLLET, main drive gear	41 to Early 77 — FL, FLH
		936	COLLET, main drive gear	41 to Early 77 — FL, FLH
		937	COLLET, main drive gear	41 to Early 77 — FL, FLH
		938	COLLET, main drive gear	41 to Early 77 — FL, FLH
		939	COLLET, main drive gear	41 to Early 77 — FL, FLH
		940	COLLET, main drive gear	41 to Early 77 — FL, FLH
		941	COLLET, main drive gear	41 to Early 77 — FL, FLH
		942	COLLET, main drive gear	41 to Early 77 — FL, FLH
		943	COLLET, main drive gear	41 to Early 77 — FL, FLH
		944	COLLET, main drive gear	41 to Early 77 — FL, FLH
		945	COLLET, main drive gear	41 to Early 77 — FL, FLH
		946	COLLET, main drive gear	41 to Early 77 — FL, FLH
		947	COLLET, main drive gear	41 to Early 77 — FL, FLH
		948	COLLET, main drive gear	41 to Early 77 — FL, FLH
		949	COLLET, main drive gear	41 to Early 77 — FL, FLH
		950	COLLET, main drive gear	41 to Early 77 — FL, FLH
		951	COLLET, main drive gear	41 to Early 77 — FL, FLH
		952	COLLET, main drive gear	41 to Early 77 — FL, FLH
		953	COLLET, main drive gear	41 to Early 77 — FL, FLH
		954	COLLET, main drive gear	41 to Early 77 — FL, FLH
		955	COLLET, main drive gear	41 to Early 77 — FL, FLH
		956	COLLET, main drive gear	41 to Early 77 — FL, FLH
		957	COLLET, main drive gear	41 to Early 77 — FL, FLH
		958	COLLET, main drive gear	41 to Early 77 — FL, FLH
		959	COLLET, main drive gear	41 to Early 77 — FL, FLH
		960	COLLET, main drive gear	41 to Early 77 — FL, FLH
		961	COLLET, main drive gear	41 to Early 77 — FL, FLH
		962	COLLET, main drive gear	41 to Early 77 — FL, FLH
		963	COLLET, main drive gear	41 to Early 77 — FL, FLH
		964	COLLET, main drive gear	41 to Early 77 — FL, FLH
		965	COLLET, main drive gear	41 to Early 77 — FL, FLH
		966	COLLET, main drive gear	41 to Early 77 — FL, FLH
		967	COLLET, main drive gear	41 to Early 77 — FL, FLH
		968	COLLET, main drive gear	41 to Early 77 — FL, FLH
		969	COLLET, main drive gear	41 to Early 77 — FL, FLH
		970	COLLET, main drive gear	41 to Early 77 — FL, FLH
		971	COLLET, main drive gear	41 to Early 77 — FL, FLH
		972	COLLET, main drive gear	41 to Early 77 — FL, FLH
		973	COLLET, main drive gear	41 to Early 77 — FL, FLH
		974	COLLET, main drive gear	41 to Early 77 — FL, FLH
		975	COLLET, main drive gear	41 to Early 77 — FL, FLH
		976	COLLET, main drive gear	41 to Early 77 — FL, FLH
		977	COLLET, main drive gear	41 to Early 77 — FL, FLH
		978	COLLET, main drive gear	41 to Early 77 — FL, FLH
		979	COLLET, main drive gear	41 to Early 77 — FL, FLH
		980	COLLET, main drive gear	41 to Early 77 — FL, FLH
		981	COLLET, main drive gear	41 to Early 77 — FL, FLH
		982	COLLET, main drive gear	41 to Early 77 — FL, FLH
		983	COLLET, main drive gear	41 to Early 77 — FL, FLH
		984	COLLET, main drive gear	41 to Early 77 — FL, FLH
		985	COLLET, main drive gear	41 to Early 77 — FL, FLH
		986	COLLET, main drive gear	41 to Early 77 — FL, FLH
		987	COLLET, main drive gear	41 to Early 77 — FL, FLH
		988	COLLET, main drive gear	41 to Early 77 — FL, FLH
		989	COLLET, main drive gear	41 to Early 77 — FL, FLH
		990	COLLET, main drive gear	41 to Early 77 — FL, FLH
		991	COLLET, main drive gear	41 to Early 77 — FL, FLH
		992	COLLET, main drive gear	41 to Early 77 — FL, FLH
		993	COLLET, main drive gear	41 to Early 77 — FL, FLH
		994	COLLET, main drive gear	41 to Early 77 — FL, FLH
		995	COLLET, main drive gear	41 to Early 77 — FL, FLH
		996	COLLET, main drive gear	41 to Early 77 — FL, FLH
		997	COLLET, main drive gear	41 to Early 77 — FL, FLH
		998	COLLET, main drive gear	41 to Early 77 — FL, FLH
		999	COLLET, main drive gear	41 to Early 77 — FL, FLH

TRANSMISSION — COUNTERSHAFT

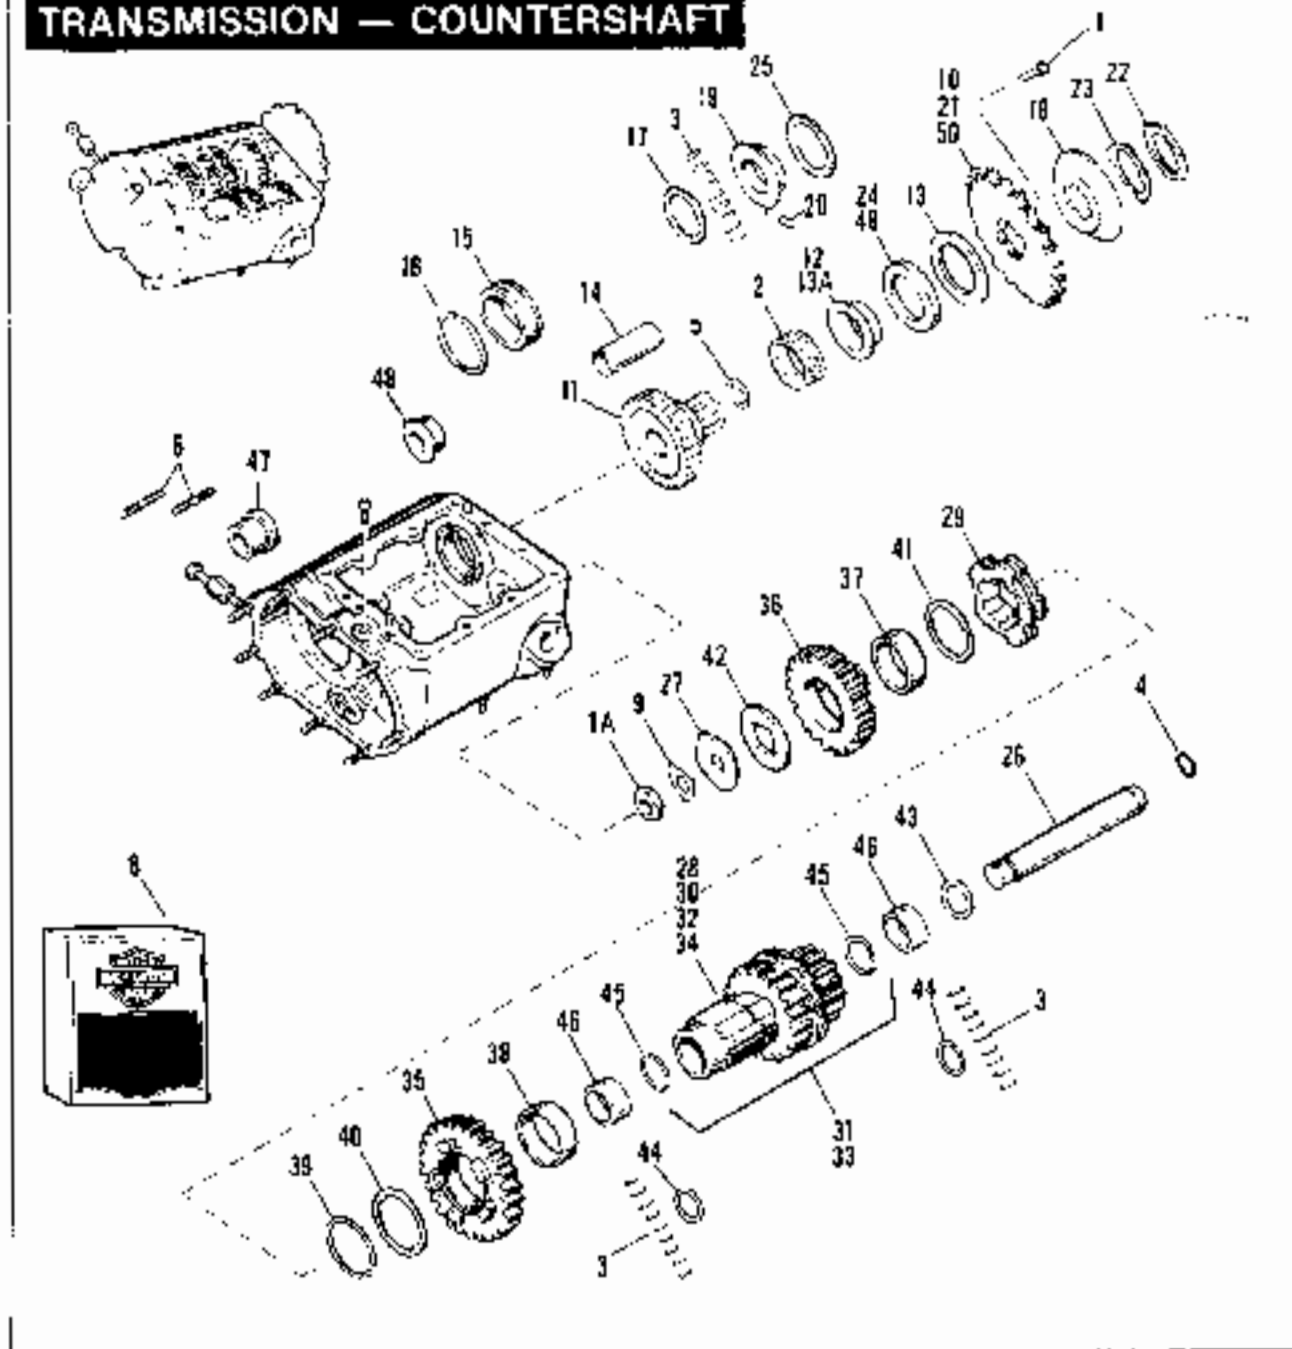

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
NOTE: See previous section for additional transmission parts listing.				
	34	35716-75	GEAR, countershaft — 1st & 2nd	81 & 82 — FLH-80, Classic
		35716-84	GEAR, countershaft — 3rd & 4th	80 to * — FLH-80
	35	35751-36	GEAR, countershaft second (4 speed) — 21 T.	41 to * — FL, FLH, FLH-80, Classic
	36	35762-39	GEAR, countershaft low (3 speed & rev) — 25 T.	41 to Early 79 — FL, FLH
		35765-36	GEAR, countershaft low (4 speed) — 26 T.	41 to * — FL, FLH, FLH-80, Classic
		35775-33	GEAR, countershaft reverse — 23 T.	41 to Early 79 — FL, FLH
	37	35799-36	BUSHING, countershaft low & reverse gears	41 to * — FL, FLH, FLH-80, Classic
	38	35791-36	BUSHING, countershaft low & second gears (4 speed)	41 to * — FL, FLH, FLH-80, Classic
	39	35816-36	RETAINING RING, countershaft low & second gears (4 speed)	41 to * — FL, FLH, FLH-80, Classic
	40	35811-3E	WASHER, countershaft second & low gears (4 speed)	41 to * — FL, FLH, FLH-80, Classic
	41	35812-36	WASHER, low & reverse gears	41 to * — FL, FLH, FLH-80, Classic
	42	35875-36	SET OF WASHERS, countershaft — gear end	41 to * — FL, FLH, FLH-80, Classic
		35876-36	WASHER, countershaft, gear end — .674 thick	41 to * — FL, FLH, FLH-80, Classic
		35877-36	WASHER, countershaft, gear end — .678 thick	41 to * — FL, FLH, FLH-80, Classic
		35878-36	WASHER, countershaft, gear end — .682 thick	41 to * — FL, FLH, FLH-80, Classic
		35879-3E	WASHER, countershaft, gear end — .683 thick	41 to * — FL, FLH, FLH-80, Classic
		35882-36	WASHER, countershaft, gear end — .690 thick	41 to * — FL, FLH, FLH-80, Classic
		35883-35	WASHER, countershaft, gear end — .695 thick	41 to * — FL, FLH, FLH-80, Classic
		35884-36	WASHER, countershaft, gear end — .699 thick	41 to * — FL, FLH, FLH-80, Classic
	43	35915-36	RETAINING WASHER, countershaft bearing (outer)	41 to * — FL, FLH, FLH-80, Classic
	44	35917-36	RETAINING WASHER, countershaft bearing (inner) (2)	41 to Early 76 — FL, FLH
	45	35920-36	RETAINING RING, countershaft bearing (2)	41 to Early 77 — FL, FLH
	46	35961-37	NEEDLE BEARING, countershaft (2)	Late 78 to * — FL, FLH, FLH-80, Classic
	47	36045-76	BUSHING, countershaft (starter side)	Late 78 to 79 — FL, FLH, FLH-80, Classic
		36046-36	BUSHING, countershaft (starter side)	41 to Early 76 — FL, FLH
	48	36048-36	BUSHING, countershaft (clutch side)	41 to Early 75 — FL, FLH
		36048-76A	BUSHING, countershaft (clutch side & starter side 80 & Later)	Late 76 to * — FL, FLH, FLH-80, Classic
	49	37741-87	OIL SEAL, main shaft	80 & 81 — FL, FLH, FLH-80, Classic
		37741-82	OIL SEAL, input shaft	82 to * — FLH-80, Classic

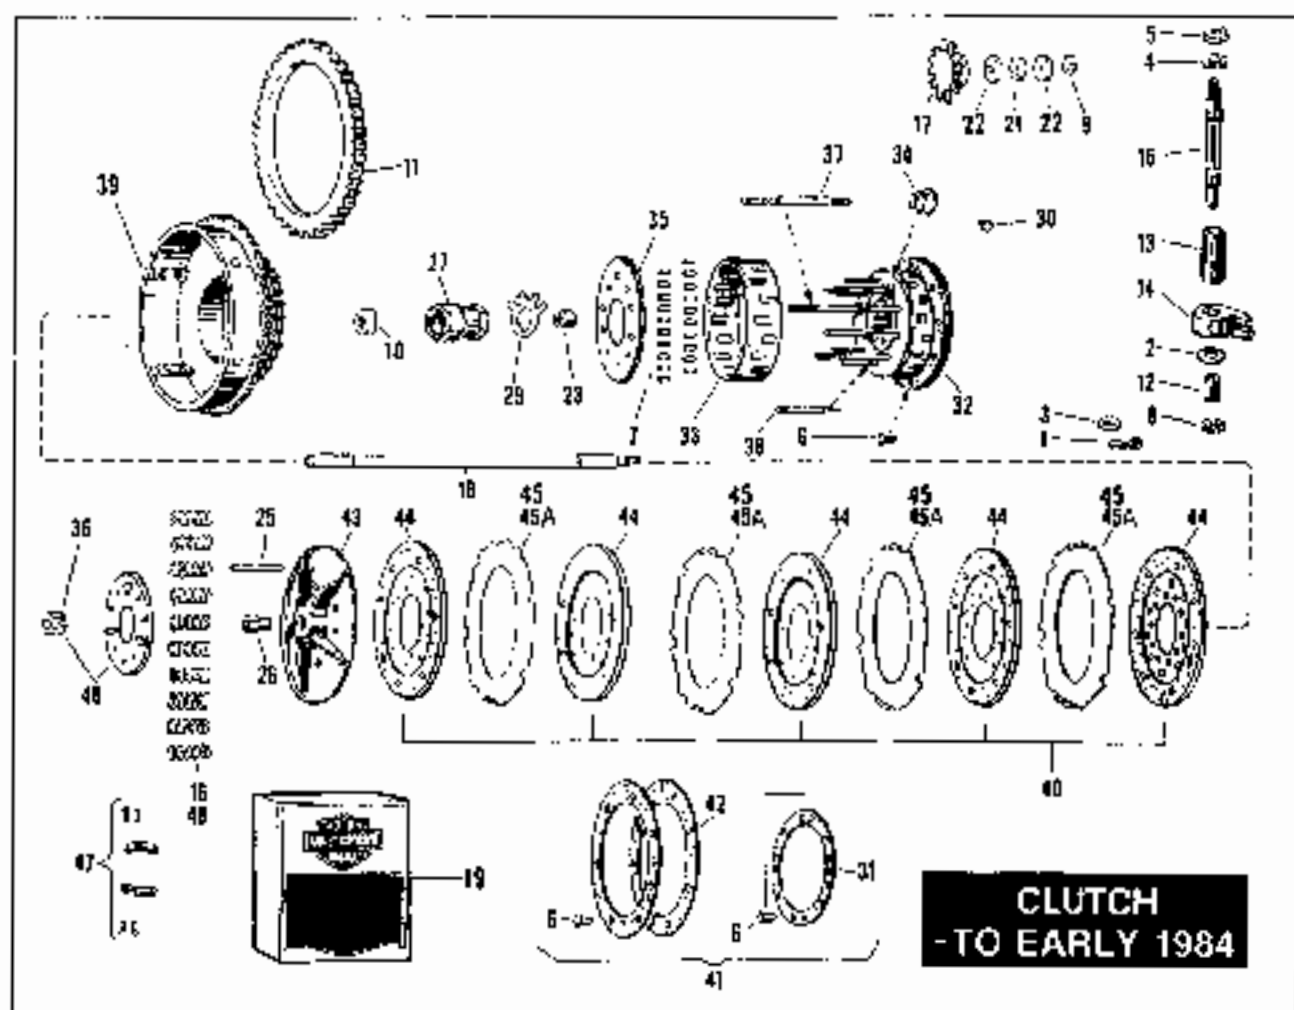


CLUTCH — 1941 TO EARLY 1984

A26-1


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	534	COTTER PIN, 3/32 x 5/8	41 to 60 — FL, FLH
	2	6443HV	WASHER, 12/32 x 11/16 x 5/16	41 to Early 84 — FL, FLH, FLH-80, Classic
	3	6702	WASHER, 5/16 x 11/15 x 1/15	41 to 60 — FL, FLH
	4	7039	LOCKWASHER, 7/16	41 to Early 84 — FL, FLH, FLH-80, Classic
	5	7937W	NUT, 7/16-20 x 3/8 x 11/15 hex.	41 to Early 84 — FL, FLH, FLH-80, Classic
	6	8226	RIVET, 3/16 x 7/32 (brass) (8)	41 to 73 — FL, FLH
		8227	RIVET, 3/16 x 5/32 (brass) (9)	41 to Early 84 — FL, FLH, FLH-80, Classic
		8232	RIVET, 3/16 x 11/32 (brass) (23)	41 to Early 84 — FL, FLH, FLH-80, Classic
	7	8545A	ROLLER, clutch hub bearing (2)	53 to Early 84 — FL, FLH, FLH-80, Classic
	8	11000	RETAINING RING	70 to Early 84 — FL, FLH, FLH-80, Classic
	9	1109E	RETAINING RING	Early 75 to Early 84 — FL, FLH, FLH-80, Classic
	10	12014	OIL SEAL, mainshaft hub	65 to Early 84 — FL, FLH, FLH-80, Classic
	11	32153—65B	STARTER RING GEAR	65 to Early 84 — FL, FLH, FLH-80, Classic
	12	33290—36	BUSHING, release lever shaft (lower)	41 to Early 84 — FL, FLH, FLH-80, Classic
	13	33291—36	BUSHING, release lever shaft (upper)	41 to Early 84 — FL, FLH, FLH-80, Classic
	14	37070—30B	RELEASE FINGER	41 to Early 84 — FL, FLH, FLH-80, Classic
	15	37074—38A	STUD, release lever (finger shaft)	41 to Early 84 — FL, FLH, FLH-80, Classic
	16	37077—68	CLUTCH SPRING (12)	69 to Early 84 — FL, FLH, FLH-80, Classic
	17	37226—75	OIL SLINGER	Early 75 to Early 84 — FL, FLH, FLH-80, Classic
	18	37280—41	PUSH ROD, clutch	41 to 84 — FL, FLH
		37285—75A	PUSH ROD, clutch	Early 75 to Early 84 — FL, FLH, FLH-80, Classic

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	19	37305-41	BEARING & PUSH ROD KIT Consists of besides push rod: 11096 RETAINING RING, push rod bearing 37070-398 RELEASE FINGER 37228-75 OIL SLINGER 37313-80 T-RUST WASHER inner 37312-75 BEARING, push rod 37436-36 RUSHING, clutch rod	41 to 64 — FL, FLH
		37305-65	BEARING & PUSH ROD KIT Consists of besides push rod: 11096 RETAINING RING, push rod bearing 37070-398 RELEASE FINGER 37228-75 OIL SLINGER 37313-90 T-RUST WASHER inner 37312-75 BEARING, push rod 37436-36 RUSHING, clutch rod	65 to 82 — FL, FLH
		37305-70	BEARING & PUSH ROD KIT Consists of besides push rod: 11096 RETAINING RING, push rod bearing 37070-398 RELEASE FINGER 37228-75 OIL SLINGER 37313-80 T-RUST WASHER inner 37312-75 BEARING, push rod 37436-36 RUSHING, clutch rod	70 to Early 84 — FL, FLH, FLH-80, Classic
21		37312-75	BEARING, push rod	Late 75 to Early 84 — FL, FLH, FLH-80, Classic
22		37313-80	T-RUST WASHER (2)	Late 75 to Early 84 — FL, FLH, FLH-80, Classic
23		37337-30	OIL SEAL, push rod (2)	41 to 64 — FL, FLH
25		37357-41	ADJUSTING SCREW, push rod	41 to Early 84 — FL, FLH, FLH-80, Classic
26		37361-41	NUT, adjusting screw	41 to Early 84 — FL, FLH, FLH-80, Classic
27		37496-41	NUT, mainshaft (clutch side)	N/A 41 to 64 — FL, FLH
		37496-65	NUT, mainshaft (clutch side)	65 to Early 84 — FL, FLH, FLH-80, Classic
29		37503-41	LOCKWASHER, clutch nut	41 to Early 84 — FL, FLH, FLH-80, Classic
30		37525-15A	KEY, clutch	41 to Early 84 — FL, FLH, FLH-80, Classic
31		37549-41	LINK, hub friction disc	41 to Early 84 — FL, FLH, FLH-80, Classic
32		37550-41B	CLUTCH HUB ASSEMBLY	41 to Early 84 — FL, FLH, FLH-80, Classic
33		37556-58	RETAINER, clutch hub roller	58 to Early 84 — FL, FLH, FLH-80, Classic
		37557-41A	RETAINER, clutch hub roller — with rollers	58 to Early 84 — FL, FLH, FLH-80, Classic
34		37574-41	SPRING, hub bearing plate (2)	41 to Early 84 — FL, FLH, FLH-80, Classic
35		37575-41	PLATE, hub bearing	41 to Early 84 — FL, FLH, FLH-80, Classic
36		37581-47	NUT, hub stud (3)	47 to Early 84 — FL, FLH, FLH-80, Classic
37		37583-41	STUD, drive hub (3)	41 to Early 84 — FL, FLH, FLH-80, Classic
38		37585-41	PLATE, clutch hub (7)	41 to Early 84 — FL, FLH, FLH-80, Classic
39		37702-70A	CLUTCH SHELL AND SPROCKET with starter ring gear	41 to 64 — FL, FLH 70 to 82 — FL, FLH, FLH-80, 75 to 81 — Classic 82 — Classic, 83 & Early 84 — FLH-80
		37707-82	CLUTCH SHELL AND SPROCKET with starter ring gear	82 — Classic, 83 & Early 84 — FLH-80
40		37840-58	SET OF THREE CLUTCH DISCS	68 to Early 84 — FL, FLH, FLH-80, Classic
41		37855-41	SET OF CLUTCH LIVING AND RIVETS	N/A 41 to 67 — FL, FLH
42		37860-41	LINK, clutch fork (push rod)	N/A 41 to 67 — FL, FLH
43		37871-41	RELEASING DISC	41 to Early 84 — FL, FLH, FLH-80, Classic
44		37930-68A	FRICITION DISC (5)	68 to Early 84 — FL, FLH, FLH-80, Classic
45		37975-81	DRIVE DISC (steel) (4)	41 to Early 84 — FL, FLH, FLH-80, Classic
46		38010-41	PRESSURE PLATE	41 to Early 84 — FL, FLH, FLH-80, Classic
47		38025-41	SET OF CLUTCH DISC BUFFERS	41 to Early 81 — FL, FLH, FLH-80, Classic
48		38077-41	CLUTCH SPRING (1)	41 to 81 — FL, FLH


CLUTCH -LATE 1984 AND LATER

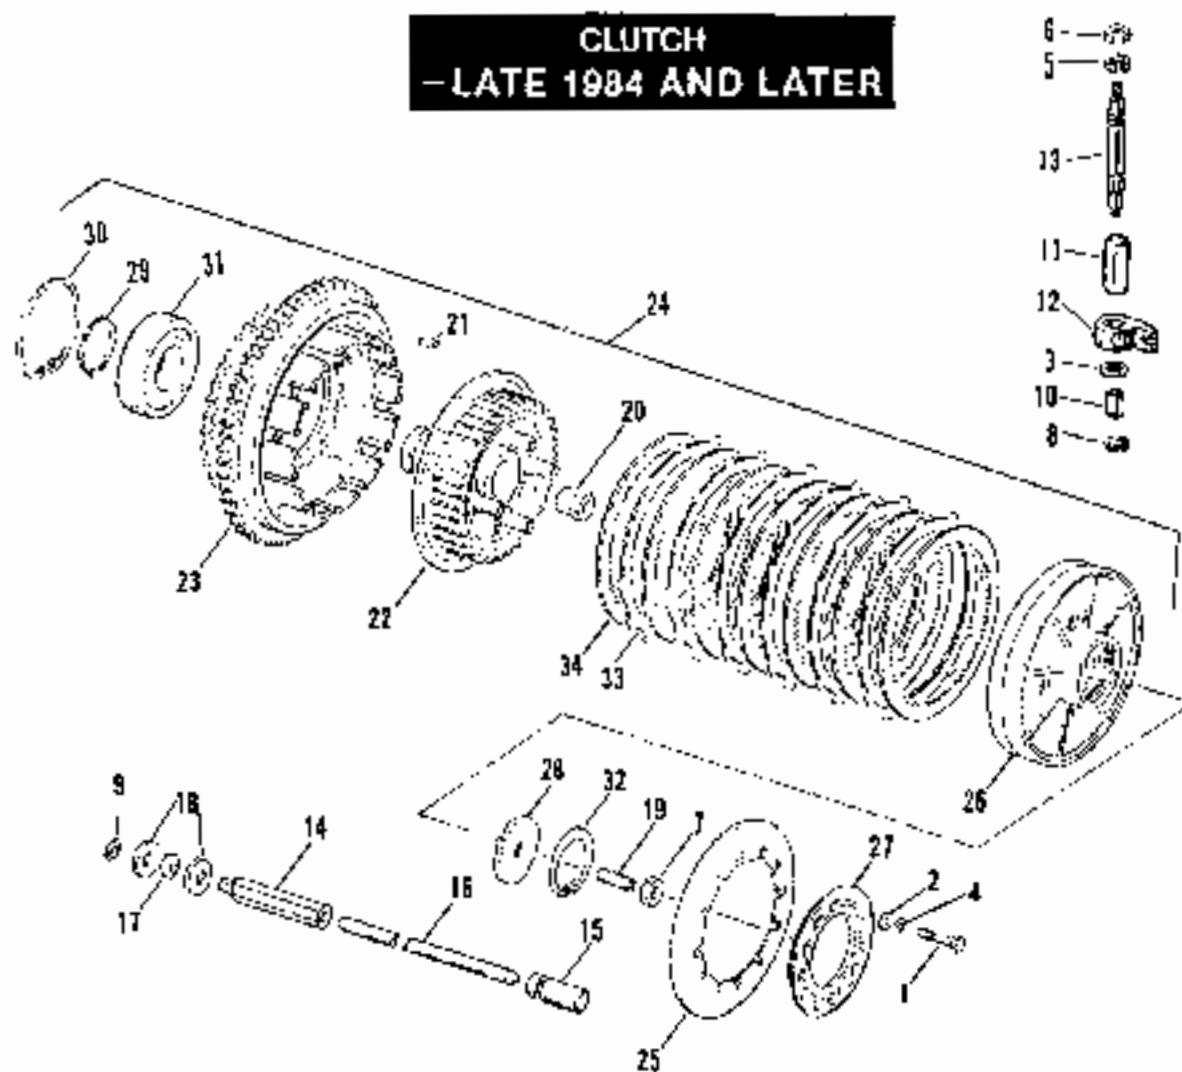

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	268119	SCREW, 1/4-20 x 1/8 hex. hex. (4)	Late 84 to * — FL-80
	2	5299	WASHER, 1/4 x 1/16 x 1/16 (1)	Late 84 to * — FL-80
	3	5443PW	WASHER, 3/8-32 x 1/2 (5) x 1/16	Late 84 to * — FLH-80
	4	7006	LOCKWASHER, 1/4 (4)	Late 84 to * — FLH-80
	5	7009	LOCKWASHER, 7/16	Late 84 to * — FLH-80
	6	7637W	NUT, 7/16-20 x 3/8 x 1/2 hex.	Late 84 to * — FLH-80
	7	7648W	NUT, 5/16-18 x 1/2 x 1/2 hex.	Late 84 to * — FLH-80
	8	11000	RETAINING RING	Late 84 to * — FLH-80
	9	11055	RETAINING RING	Late 84 to * — FLH-80
	10	33250-38	BUSHING, release lever shell - upper	Late 84 to * — FL-80
	11	33251-35	BUSHING, release lever shell - lower	Late 84 to * — FLH-80
	12	37070-39B	RELEASE HINGEP	Late 84 to * — FLH-80
	13	37074-38A	STUD, release finger	Late 84 to * — FLH-80
	14	37089-84	ROD END, clutch push rod	Late 84 to * — FLH-80
	15	37090-84	ROD END, clutch push rod	Late 84 to * — FLH-80
	16	37085-84	PUSH ROD, clutch release	Late 84 to * — FLH-80
	17	37112-75	BEARING, push rod	Late 84 to * — FLH-80
	18	37113-90	1-PIST WASHCO, lever (2)	Late 84 to * — FLH-80
	19	37357-84	ADJUSTING STUD, push rod	Late 84 to * — FLH-80
	20	37446-84	NUT, master/slave pin (5) set	Late 84 to * — FLH-80
	21	37523-15A	KEY, clutch	Late 84 to * — FLH-80
	22	37560-84	CLUTCH HUB, inner	Late 84 to * — FLH-80
	23	37707-84	CLUTCH SHAFT AND SPROCKET, with starter ring gear	Late 84 to * — FLH-80
	24	37800-84	CLUTCH ASSEMBLY, complete - except transmission, rod ends, push rod, o-ring and thrust washer	Late 84 to * — FLH-80
	25	37871-84	DIAPHRAGM SPRING PLATE	Late 84 to * — FLH-80
	26	37902-84A	PRESSURE PLATE	Late 84 to * — FLH-80
	27	37902-84	ADJUSTER PLATE	Late 84 to * — FLH-80
	28	37905-84	RELEASE PLATE, carrier	Late 84 to * — FLH-80
	29	37904-84	RETAINING RING, external - bearing	Late 84 to * — FLH-80
	30	37907-84	RETAINING RING, internal - bearing	Late 84 to * — FLH-80
	31	37978-84	BEARING, clutch assembly	Late 84 to * — FLH-80
	32	37907-84	RETAINING RING, pressure plate	Late 84 to * — FLH-80
	33	37921-84	FRICTION DISC (5)	Late 84 to * — FLH-80
	34	37975-84	DRIFT DISC (7)	Late 84 to * — FLH-80

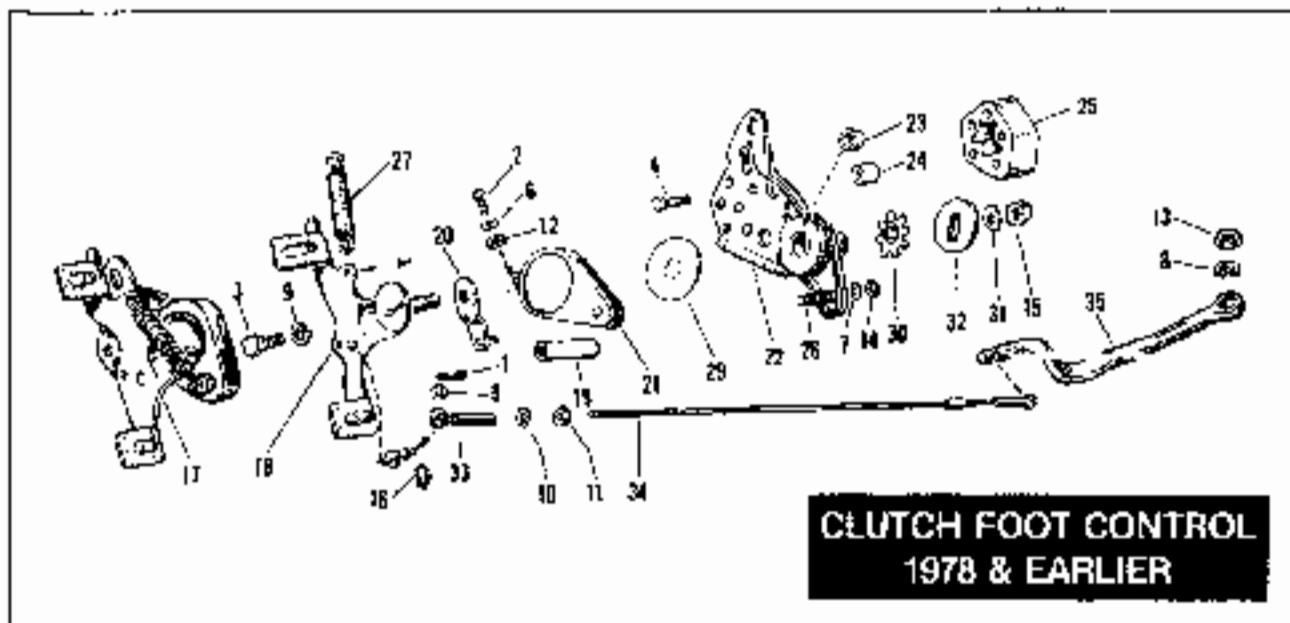


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	534	CUTTER PIN, 3/32 x 5/8	41 to 55 — FL, FLH
	2	2773	SCREW, 1/4-20 x 1/2 Pozidriv pan hd.	41 to 78 — FL, FLH
	3	2882W	BOLT, 5/16-18 x 5/8 hex. hd.	55 to 78 — FL, FLH
	4	3775	BOLT, 3/8-16 x 2 hex. hd. (2)	41 to 78 — FL, FLH
	5	6702	WASHER, 5/16 x 1 1/16 x 1 1/16	41 to 68 — FL, FLH
	6	7030	LOCKWASHER, 1/4	41 to 78 — FL, FLH
	7	7038	LOCKWASHER, 3/8	41 to 78 — FL, FLH
	8	7039	LOCKWASHER, 7/16	41 to 78 — FL, FLH
	9	7041	LOCKWASHER, 5/16	65 to 78 — FL, FLH
	10	7231	LOCKWASHER, 1/4 ext. tooth disk.	41 to 78 — FL, FLH
	11	7638	NUT, 5/8-10-32 x 1 1/8 x 3/8 hex.	41 to 78 — FL, FLH
	12	7681W	NUT, 1/4-24 x 5/32 x 7/16 hex.	41 to 78 — FL, FLH
	13	7837W	NUT, 7/16-20 x 3/8 x 1 1/16	41 to 78 — FL, FLH
	14	7851W	JAMNUT, 3/8-24 x 7/32 x 9/16 hex.	41 to 78 — FL, FLH
	15	7984	NUT, 5/8-24 x 7/32 x 7/8 hex.	N/A 41 to 78 — FL, FLH
	16	11037	RETAINING RING, rod end.	N/A 65 to 78 — FL, FLH
	17	36810-65A	FOOT LEVER AND BRACKET.	N/A 65 to 78 — FL, FLH
	18	36811-65	FOOT LEVER.	N/A 65 to 78 — FL, FLH
	19	36812-65	STOP PIN, clutch pedal.	N/A 65 to 78 — FL, FLH
	20	36816-65A	LEVER, operating rod.	N/A 65 to 78 — FL, FLH
	21	36830-35	COVER, foot lever bearing.	N/A 41 to 78 — FL, FLH
	22	36842-41	BRACKET, foot lever.	N/A 41 to 78 — FL, FLH
	23	36857-35	BUSHING, foot lever bracket.	N/A 41 to 78 — FL, FLH
	24	36859-48	SPACER, foot lever bracket (3 or 7).	N/A 48 to 78 — FL, FLH
	25	36859-70	SPACER, foot lever bracket.	N/A 70 to 78 — FL, FLH
	26	36871-40	STUD, foot lever spring.	N/A 41 to 78 — FL, FLH
	27	36883-35	SPRING, foot lever.	N/A 41 to 78 — FL, FLH
	28	36893-41	FRICTION DISC, foot lever.	N/A 41 to 78 — FL, FLH
	29	36906-35	FRICTION WASHER, foot lever.	N/A 41 to 78 — FL, FLH
	30	36909-35	WASHER, foot lever shaft (inner).	N/A 41 to 78 — FL, FLH
	31	36913-41	WASHER, foot lever shaft (outer).	N/A 41 to 78 — FL, FLH
	32	36916-35	ROD END, clutch lever.	N/A 41 to 78 — FL, FLH
	33	36917-35	PULL ROD, clutch lever.	N/A 41 to 64 — FL, FLH
	34	36917-65	PULL ROD, clutch lever.	N/A 65 to 78 — FL, FLH
	35	37052-65	RELEASE LEVER (1968 & later — handshift only).	N/A 55 to 78 — FL, FLH

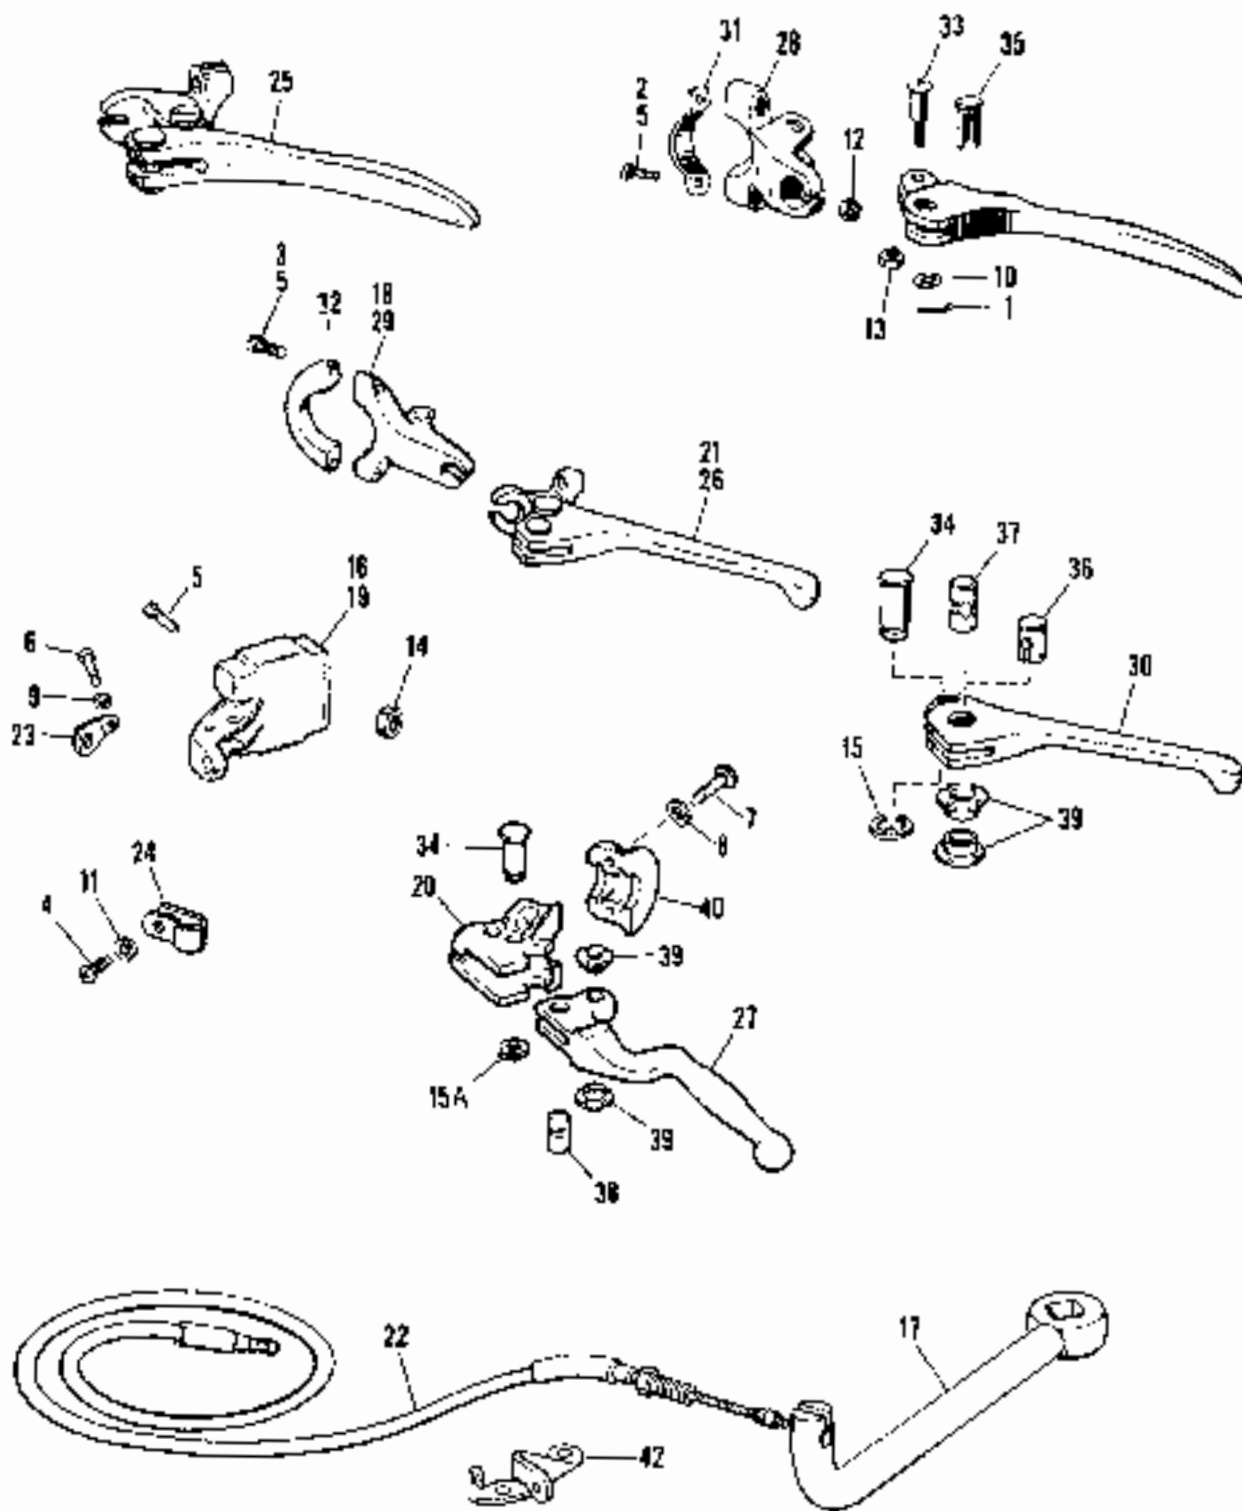


CLUTCH HAND CONTROL

RETAIL PRICE	INDEX NO	PART NO.	NAME	USED ON
	1	514	COILER PIN, 1/8 x 3/4	52 to 64 - FL, FLH
	2	991	SCREW, No. 10-24 x 1/2 Precision, 1/2 in. dia.	52 to 64 - FL, FLH
	3	1505	SCREW, No. 10-24 x 3/4 Precision, 1/2 in. dia.	72 - FL, FLH
	4	2565	SCREW, No. 8-32 x 5/16 Precision, 1/2 in. dia.	68 to 71 - FL, FLH, FLH-80, Classic
	5	2565W	SCREW, No. 10-24 x 1/2 Precision, 1/2 in. dia.	72 to 71 - FL, FLH, FLH-80, Classic
	6	2770W	SCREW, 1/4-20 x 3/4 anti-lapping Phillips id. hd.	68 to 71 - FL, FLH, FLH-80, Classic
	7	4015	SCREW, 1/4-20 x 7/8 hex, socket hd. no. 12	82 to 81 - FLH-80, Classic
	8	6010	WASHER, 1/4 x 7/16 x 3/64-2.	82 to 81 - FLH-80, Classic
	9	6703	WASHER, 1/4 x 5/8 x 7/16	68 to 81 - FL, FLH, FLH-80, Classic
	10	5807W	WASHER, 15/32 x 3/4 x 1/64	52 to 54 - FL, FLH
	11	7115	LOCKWASHER, No. 8 anti-lap	68 to 81 - FL, FLH, FLH-80, Classic
	12	7620W	NUT, No. 10-24 x 1/8 x 3/64 ex. 15	52 to 64 - FL, FLH
	13	7697W	NUT, 1/4-24 x 5/32 x 7/16	41 to 64 - FL, FLH
	14	7800W	NUT, 3/8-24 x 5/16 x 9/16 hex	68 to 81 - FL, FLH, FLH-80, Classic
	14A	10059	CLAMP, clutch cable	84 to 81 - FLH-80
	15	11036	RETAINING RING, pivot pin	58 to 81 - FL, FLH, FLH-80, Classic
		11143	RETAINING RING, pivot pin	92 to 81 - FLH-80, Classic
	16	37626-77	BRACKET, mirror mounting (hand control)	N/A 72 to 78 - FL, FLH, FLH-80
	17	37626-68	RELEASE LEVER, clutch	N/A 68 to Early 79 - FL, FLH, FLH-80, Classic
		37626-79A	RELEASE LEVER, clutch (casted)	Late 79 to 81 - FL, FLH, FLH-80, Classic
	18	38606-68	BRACKET, hand lever	68 to 71 - FL, FLH
	19	38606-72	BRACKET, hand lever (black)	72 to 81 - FL, FLH, FLH-80, Classic
	20	38606-82A	BRACKET, hand lever (black)	82 to 81 - FLH-80, Classic
	21	38609-68	HAND LEVER AND BRACKET	68 to 71 - FL, FLH
		38609-72	HAND LEVER AND BRACKET (includes items 39 & 37)	72 to 81 - FL, FLH, FLH-80, Classic
	22	38608-69C	CABLE AND COIL ASSEMBLY	68 to 81 - FL, FLH, FLH-80, Classic
	23	38626-68	CABLE GUIDE PLATE	68 to 81 - FL, FLH, FLH-80, Classic
	24	38712-68	CLAMP, clutch cable (at frame front)	68 to 83 - FL, FLH, FLH-80, Classic
	25	45002-41	HAND LEVER AND BRACKET	52 to 54 - FL, FLH
	26	45002-52A	HAND LEVER AND BRACKET	65 to 67 - FL, FLH
	27	45017-82A	HAND LEVER, only	92 to 81 - FLH-80, Classic
	28	45023-41	BRACKET, hand lever	N/A 52 to 64 - FL, FLH
	29	45023-65	BRACKET, hand lever	65 to 67 - FL, FLH
	30	45024-65A	HAND LEVER, includes items 27, 28 & 29	65 to 81 - FL, FLH, FLH-80, Classic
	31	45030-26	CLAMP, lever bracket	52 to 64 - FL, FLH
	32	45030-65A	CLAMP, lever bracket	65 to 71 - FL, FLH
	33	45031-41	PIVOT SCREW, hand lever	52 to 64 - FL, FLH
	34	45031-65	PIVOT PIN, hand lever	65 to 71 - FL, FLH
		45032-62	PIVOT PIN, hand lever	74 to 81 - FL, FLH, FLH-80, Classic
		45032-49	CABLE AND COIL PIN, hand lever	92 to 81 - FLH-80, Classic
	35	45033-62	CABLE AND COIL PIN, hand lever	N/A 52 to 64 - FL, FLH
	36	45033-65	CABLE AND COIL PIN, hand lever	N/A 65 to Early 68 - FL, FLH
	37	45034-68	CABLE ANCHOR PIN, hand lever	Early 58 - FL, FLH
		45035-58	CABLE ANCHOR PIN, hand lever	Late 68 to 81 - FL, FLH, FLH-80, Classic
	38	45035-82	CABLE ANCHOR PIN, hand lever	82 to 81 - FLH-80, Classic
	39	45039-68	BUSHING, hand lever cable anchor pin (plastic) (2)	Late 68 to 81 - FL, FLH, FLH-80, Classic
	40	45044-82	CLAMP, clutch cables	82 to 81 - FLH-80, Classic
	42	62576-65A	MOUNTING BRACKET, oil tank	65 to Early 79 - FL, FLH, FLH-80, Classic
		62576-79	MOUNTING BRACKET, oil tank	Late 79 to 81 - FL, FLH, FLH-80, Classic

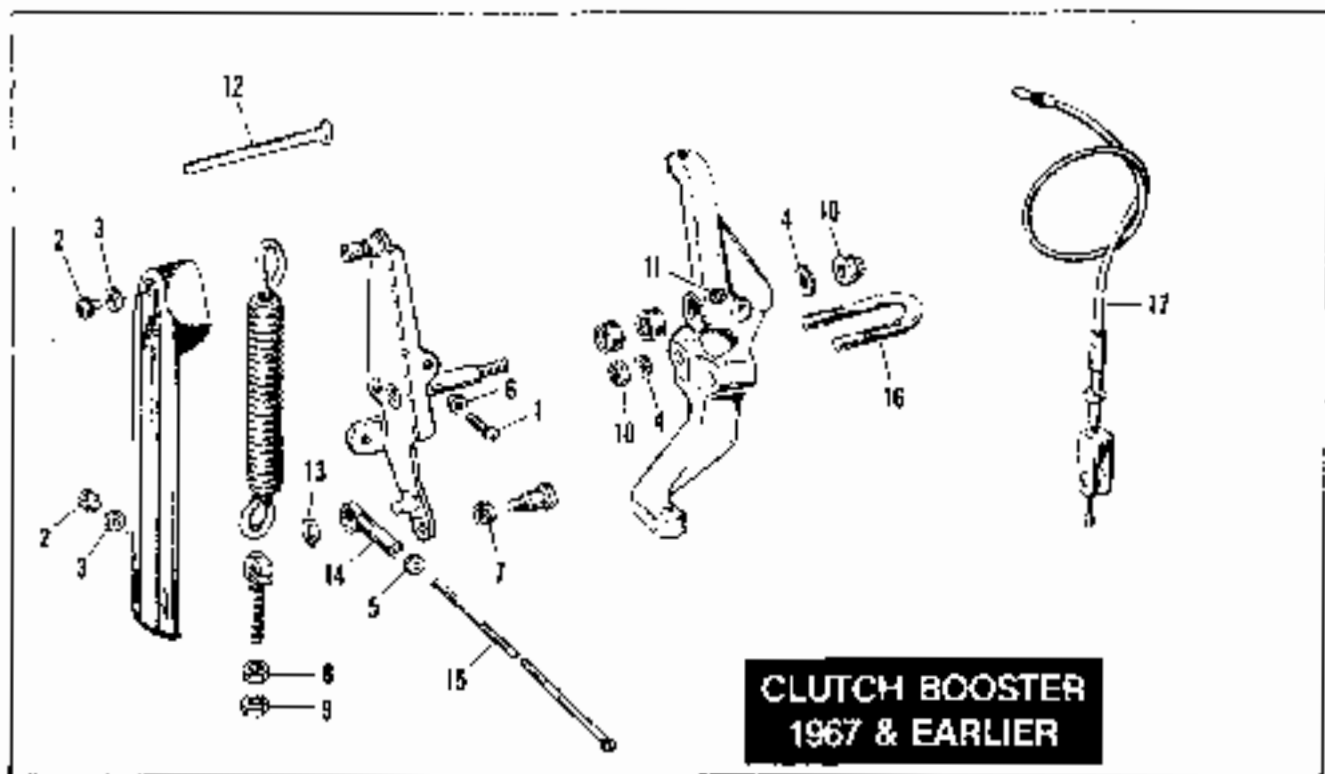


RETAIL PRICE	INDEX NO	PART NO.	N A M E	USED ON
	1	1174	SCREW 1/4-28 x 3/4 Phillips (31) (2)	52 to 67 — FL, FLH
	2	2731	SCREW 1/4-28 x 5/16 Phillips (2)	52 to 67 — FL, FLH
	3	5400HB	WASHER 3/8 x 13/16 x 7/64 (2)	52 to 67 — FL, FLH
	4	9703	WASHER 1/4 x 5/8 x 1/16 (2)	52 to 67 — FL, FLH
	5	7533	NUT, No. 10 3/8 x 1/8 x 3/8 hex.	52 to 67 — FL, FLH
	6	7516	NUT 1/4-28 x 2 1/2 x 7/16 hex.	52 to 67 — FL, FLH
	7	7727	LOCKNUT 5/16-24 x 1/4 x 1/2 hex.	52 to 67 — FL, FLH
	8	7744	NUT 5/16-24 x 3/16 x 1/2 hex. (2)	52 to 67 — FL, FLH
	9	7753	NUT 5/16-24 x 17/64 x 1/2 hex.	52 to 67 — FL, FLH
	10	7775	LOCKNUT 7/8-24 x 7/16 x 3/4 hex. (3)	52 to 67 — FL, FLH
	11	9951	ERLASE PLUG	52 to 67 — FL, FLH
	12	13006	STRAP, clutch booster cable	52 to 67 — FL, FLH
	13	11637	RETAINING RING (2)	52 to 67 — FL, FLH
	14	36915-52	CAD clutch lever rod	52 to 67 — FL, FLH
	15	36913-52	ROD, clutch lever	52 to 67 — FL, FLH
	16	39460-52	U BOLT, booster bracket	52 to 67 — FL, FLH
	17	39518-52	CABLE AND COIL ASSEMBLY (Buckeye bars)	52 to 67 — FL, FLH

BELT, CHAINS AND SPROCKET

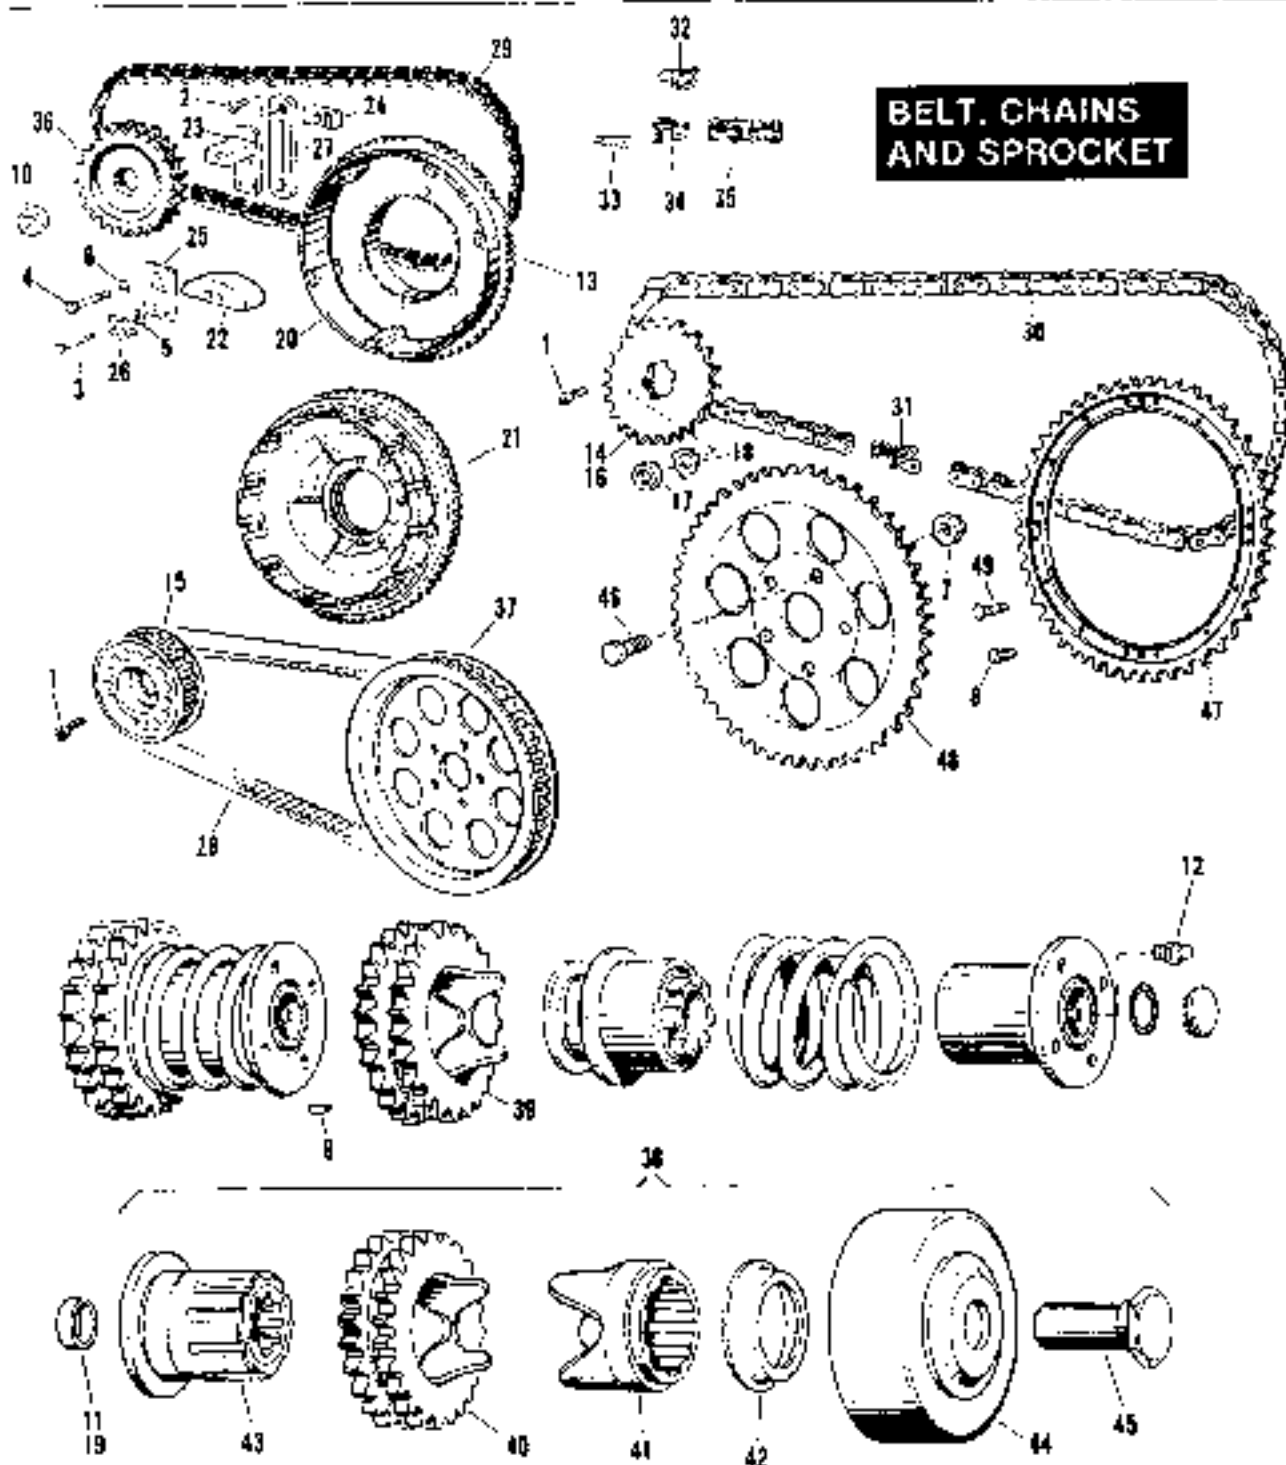


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	857	SCREW No. 10-24 x 1/2-6 knurled socket hd	52 to 71 - FLH-80 Classic
	2	1702	SCREW 5/16-18 x 7/8 hex. cyl. hd. sk. hd. (2)	52 to 71 - FL, FLH, FLH-80, Classic
	3	2614	BOLT 1/4-20 x 2 max. int. (2)	Late 84 to 87 - FLH-90
	4	98298	BOLT 1/4-20 x 1 1/2 hex. cyl. hd. (2)	55 to 87 yd4 - FL, FLH, FLH-80, Classic
	5	443 W	BOLT 3/8-24 x 2-3/4 hex. int.	55 to 87 - FL, FLH, FLH-80, Classic
	6	6703	WASHER 1/4 x 5/8 x 1/16 (2)	Late 84 to 87 - FLH-80
	7	7036	LOCKWASHER 3/8	55 to 87 - FL, FLH, FLH-80, Classic
	8	1807	LOCKWASHER 7/16-20 x 7/16 x 5/8 hex. (1)	70 to 87 - FL, FLH, FLH-80, Classic
	9	5524	Rivet 3/16 x 5/8 (16)	60 to 69 - FL, FLH
	10	6532	Rivet 3/16 x 1 (16)	67 to 72 - FL, FLH
	11	23925-12	KEY, compensating sprocket shaft	54 to 60 - FL, FLH
	12	24003-55	ALT. motor sprocket	55 to 71 - FL, FLH
	13	24003-70	SPACER, sprocket shaft - 080 thick	70 to 87 - FL, FLH, FLH-80, Classic
	14	24003-70	SPACER, sprocket shaft - 090 thick	70 to 87 - FL, FLH, FLH-80, Classic
	15	24003-70	SPACER, sprocket shaft - 120 thick	70 to 87 - FL, FLH, FLH-80, Classic
	16	24003-70	SPACER, sprocket shaft - 150 thick	70 to 87 - FL, FLH, FLH-80, Classic
	17	24003-70	SPACER, sprocket shaft - 180 thick	70 to 87 - FL, FLH, FLH-80, Classic
	18	24003-70	SPACER, sprocket shaft - 210 thick	70 to 87 - FL, FLH, FLH-80, Classic
	19	24051-80	SPACER, compensating sprocket (.070)	82 - Classic
	20	24052-80	SPACER, compensating sprocket (.100)	82 - Classic
	21	24053-80	SPACER, compensating sprocket (.140)	82 - Classic
	22	24054-80	SPACER, compensating sprocket (.180)	82 - Classic
	23	25715-47	GREASE FITTING, sprocket shaft (1)	48 to 64 - FL, FLH
	24	31161-650	STARTER RING GEAR	79 to 87 - FL, FLH, FLH-80, Classic
	25	31338-82	SPROCKET K.T. mandrel, chain drive - includes 857 SCREW	65 to 87 - FL, FLH, FLH-80, 80 & 81 - Classic
	26	31341-83	SPROCKET K.T. mandrel, belt drive - includes 857 SCREW	82 - Classic, 83 to 87 - FLH-80
	27	35200-36	SPROCKET, chain shaft - 22 T	41 to 79 - FL, FLH, FLH-80, Classic
	28	35211-36	LOCKWASHER, main shaft sprocket	41 to 87 - FL, FLH, FLH-80, Classic
	29	35216-36	WASHER, main shaft sprocket	41 to 87 yd4 - FL, FLH, FLH-80, Classic
	30	35853-84	SPACER, sprocket shaft - .110 thick (as req'd)	70 to 87 - FL, FLH, FLH-80, Classic
	31	35851-84	SPACER, sprocket shaft - .120 thick (as req'd)	70 to 87 - FL, FLH, FLH-80, Classic
	32	35852-84	SPACER, sprocket shaft - .130 thick (as req'd)	70 to 87 - FL, FLH, FLH-80, Classic
	33	37702-70A	CLUTCH SHELL AND SPROCKET with starter ring gear	70 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	34	37707-82	CLUTCH SHELL AND SPROCKET with starter ring gear	82 - Classic, 83 & Early 84 - FLH-80
	35	37707-84	CLUTCH SHELL AND SPROCKET with starter ring gear	Late 84 to 87 - FLH-80
	36	39976-55A	PAD ASSEMBLY, chain tensioner	65 to 87 - FL, FLH, FLH-80, Classic
	37	39990-55	CHAIN TENSIONER SHIM	65 to 87 - FL, FLH, FLH-80, Classic
	38	39992-55C	WUT, chain tensioner	65 to 87 - FL, FLH, FLH-80, Classic
	39	39993-55	PLATE, chain tensioner	65 to 87 - FL, FLH, FLH-80, Classic
	40	39996-55	LOCKWASHER, chain tensioner plate	65 to 87 - FL, FLH, FLH-80, Classic
	41	39998-55	ANCHOR PLATE, chain tensioner	65 to 87 - FL, FLH, FLH-80, Classic
	42	40063-73	BEELT, transmission sprocket to rear wheel sprocket	82 - Classic, 83 to 87 - FLH-80
	43	40067-35A	FRONT CHAIN, 50 c...	41 to 87 - FL, FLH, FLH-80, Classic
	44	40028-15E	REAR CHAIN (Duckworth)	41 to 82 - FL, FLH, FLH-80, Classic
	45	40029-15F	REAR CHAIN (Diamond)	41 to 82 - FL, FLH, FLH-80, Classic
	46	40030-15	REAR CHAIN - 25 H (Duckworth)	41 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	47	40034-15	REAR CHAIN - 25 H (Diamond)	41 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	48	40050-15	CONNECTING LINK, rear chain (Diamond, slip fit)	41 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	49	40052-65	CONNECTING LINK, rear chain (Diamond, press fit)	65 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	50	40053-15	CONNECTING LINK, rear chain (Duckworth, slip fit)	41 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	51	40055-19	CONNECTING LINK, front chain (Duckworth)	41 to 87 - FL, FLH, FLH-80, Classic
	52	40066-12	SPRING, connecting link, rear chain	41 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	53	40073-23	SPRING, connecting link, front chain (Duckworth)	41 to 87 - FL, FLH, FLH-80, Classic
	54	40091-15	OFFSET REPAIR LINK, rear chain (Diamond)	41 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	55	40092-15	OFFSET REPAIR LINK, rear chain (Duckworth)	41 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	56	40093-15	DOUBLE REPAIR LINK, rear chain (Diamond)	41 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	57	40094-15	DOUBLE REPAIR LINK, rear chain (Duckworth)	41 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	58	40209-55	MOTOR SPROCKET - 22 T	N/A 55 to 71 - FL, FLH
	59	40210-55	MOTOR SPROCKET - 23 T	N/A 55 to 71 - FL, FLH
	60	40211-55	MOTOR SPROCKET - 24 T	N/A 55 to 71 - FL, FLH

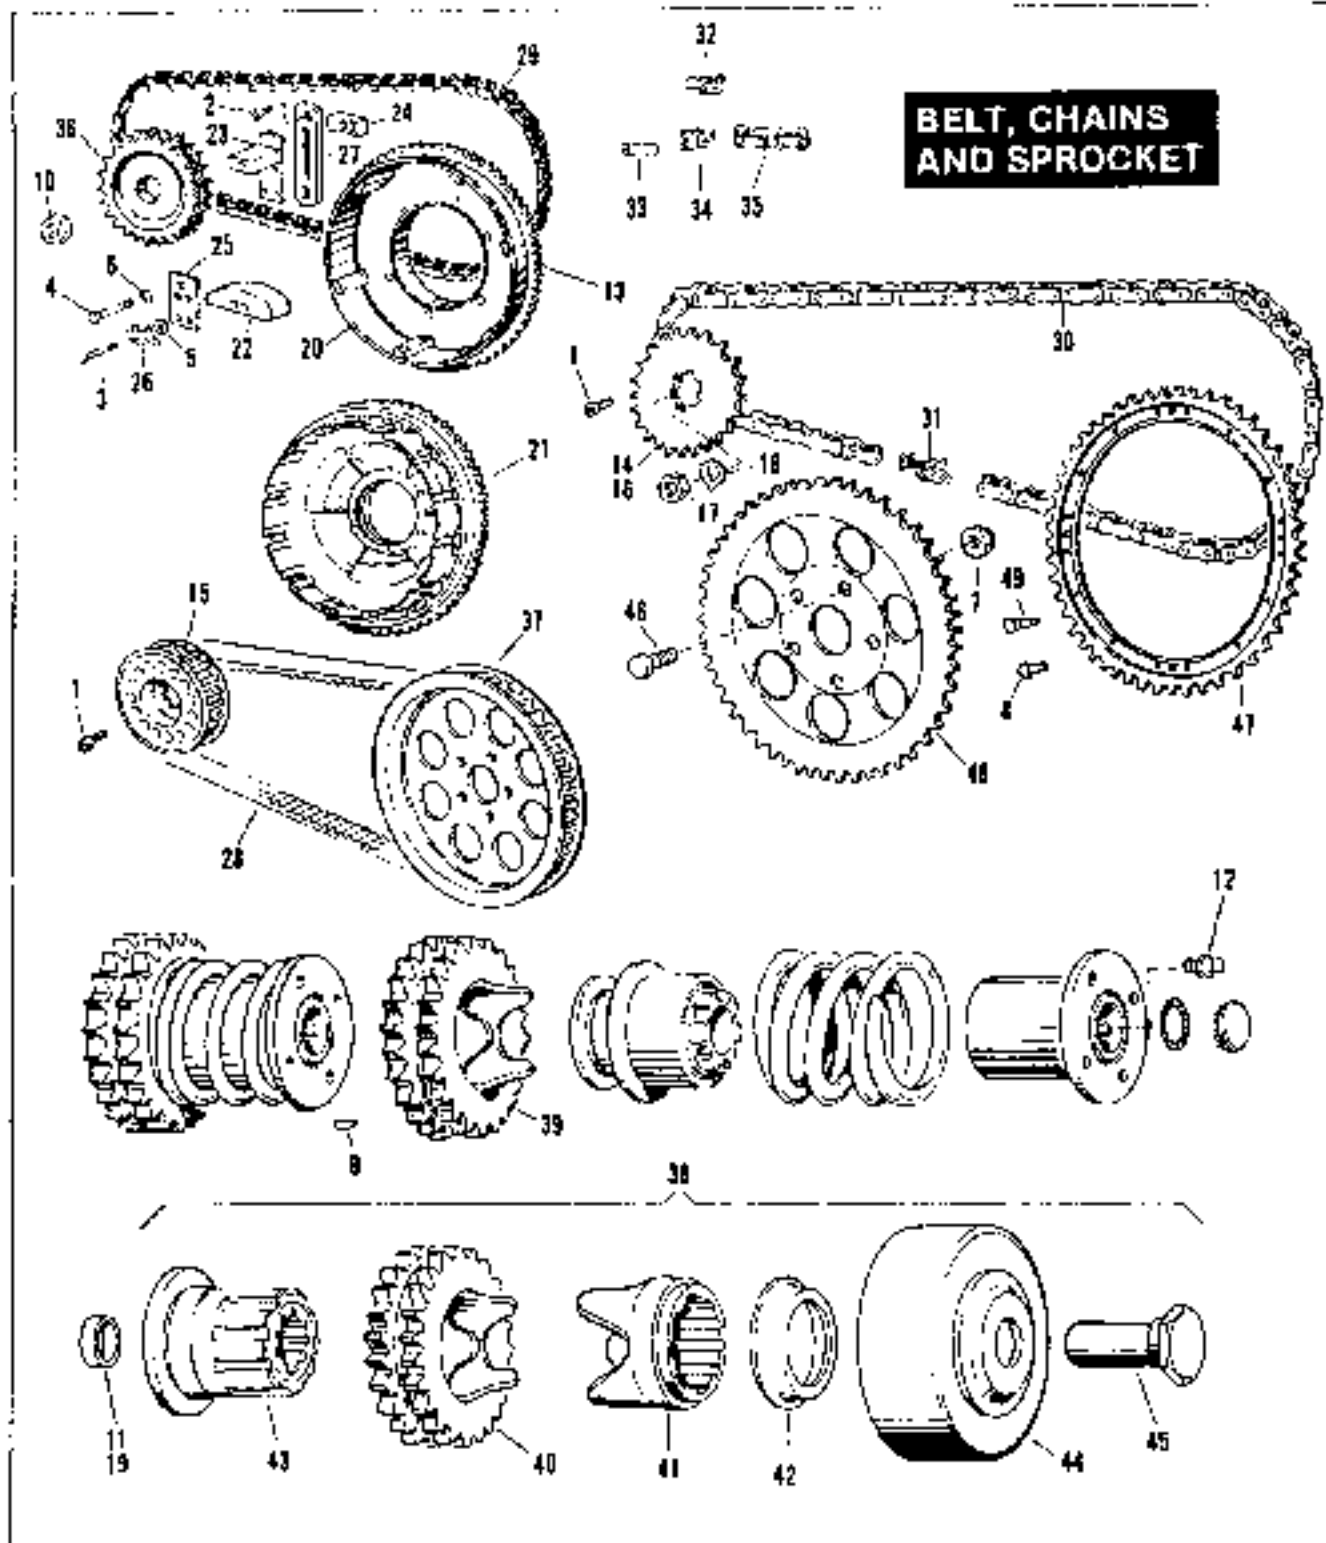

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	37	40217-79	SPROCKET, rear wheel (black)	62 — Classic; 83 to * — FLH-80
	38	40270-55A	COMPENSATING SPROCKET KIT — 24 T	65 to * — FL, FLH, FLH-80, Classic
		40271-55A	COMPENSATING SPROCKET KIT — 23 T	N/A 65 to Early 70 — FL, FLH, FLH-80, Classic
		40272-55A	COMPENSATING SPROCKET KIT — 22 T	N/A 65 to Early 70 — FL, FLH, FLH-80, Classic
	39	40275-55A	COMPENSATING SPROCKET — 24 T	N/A 65 to Early 70 — FL, FLH
	40	40275-70	COMPENSATING SPROCKET — 24 T	Late 70 to 82 — FL, FLH, FLH-80, Classic
		40275-83	COMPENSATING SPROCKET — 24 T	83 to * — FLH-90
		40280-70	COMPENSATING SPROCKET — 22 T (slicer/gr)	Late 70 to * — FL, FLH, FLH-90
		40282-70	COMPENSATING SPROCKET — 21 T	Late 70 to 81 — Classic
		40299-70	SLIDING CAM	Late 70 to * — FL, FLH, FLH-80, Classic
	41	40299-83	SLIDING CAM	Late 70 to 82 — FL, FLH, FLH-80, Classic
		40304-70	CLIP	63 to * — FLH-80
	42	40304-70	CLIP	Late 70 to 82 — FL, FLH, FLH-80, Classic
	43	40375-70	SHAFT EXTENSION	Late 70 to * — FL, FLH, FLH-80, Classic
	44	40384-70	RETAINER & COVER ASSEMBLY, w/ spring washers	Late 70 to 82 — FL, FLH, FLH-80, Classic
		40384-83A	RETAINER & COVER ASSEMBLY, w/ spring washers	83 to * — FLH-80
		40385-70	RETAINER & COVER ASSEMBLY, w/ out spring washers	Late 70 to 82 — FL, FLH, FLH-80, Classic
	45	40392-70	NUT	Late 70 to * — FL, FLH, FLH-80, Classic
	46	41197-73	BOLT, rear sprocket (5)	73 to 82 — FL, FLH, FLH-80, Classic
	47	41170-52	SPROCKET KIT, rear wheel	62 to 66 — FL, FLH
		41170-67	SPROCKET KIT, rear wheel	67 to 72 — FL, FLH
	48	41170-70A	SPROCKET, rear wheel (chrome & chrome)	73 to 82 — FL, FLH, FLH-80, 79 to 81 — Classic
	49	41485-53	DOWEL PIN, rear wheel sprocket	41 to 86 — FL, FLH
		41485-67	DOWEL PIN, rear wheel sprocket	57 to 72 — FL, FLH


FRONT BRAKE CONTROL **1982 & LATER**

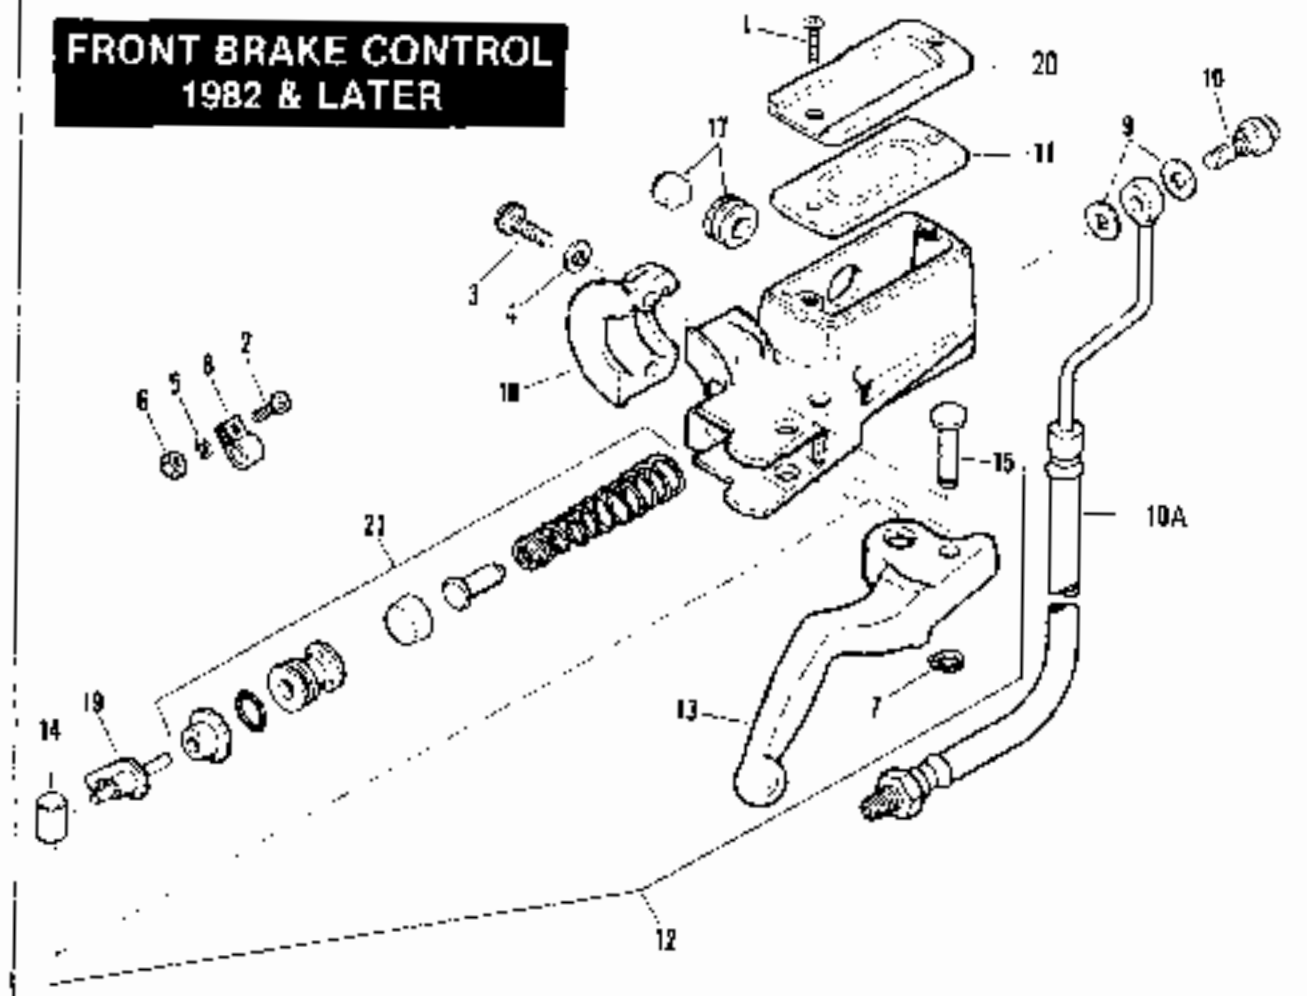

FRONT BRAKE CONTROL — 1982 & LATER

A30

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2579	SCREW, No. 6-32 x 5/8 Pozidriv oval disk, hd. (2)	82 to * — FLH-80, Classic
	2	2584	SCREW, No. 10-24 x 7/16 Pozidriv pan hd.	82 to * — FLH-80, Classic
	3	4375	SCREW, 1/4-20 x 7/8 hex socket rd. hd. (2)	82 to * — FLH-80, Classic
	4	5059	WASHER, 1/4 x 7/16 x 3/64 (2)	82 to * — FLH-80, Classic
	5	7069	LOCKWASHER, No. 10	82 to * — FLH-80, Classic
	6	7820W	NUT, No. 10-24 x 1/8 x 3/8 hex	82 to * — FLH-80, Classic
	7	11143	RETAINING RING, external	82 to * — FLH-80, Classic
	8	38712-82	CLIP, brake hose	92 to * — FLH-80, Classic
	9	41731-82	GASKET, brake hose (2)	92 to * — FLH-80, Classic
	10	41747-82A	ROD, front brake hose	92 to * — FLH-80, Classic
	10A	42304-82	FRONT BRAKE HOSE	92 to * — FLH-80, Classic
	11	45012-82	GASKET, master cylinder cover	92 to * — FLH-80, Classic
	12	45013-82	MASTER CYLINDER ASSEMBLY, with hand lever	82 to * — FLH-80, Classic
	13	45016-82	HAND LEVER, front brake	82 to * — FLH-80, Classic
	14	45031-82	PIN, stop light switch & pushrod	92 to * — FLH-80, Classic
	15	45032-82	PIN, hand lever pivot	82 to * — FLH-80, Classic
	17	45042-82	FLUID LEVEL WINDOW KIT	82 to * — FLH-80, Classic
	18	45044-82	CLAMP, master cylinder	82 to * — FLH-80, Classic
	19	45057-82	PUSH ROD, stop light switch & master cylinder	82 to * — FLH-80, Classic
	20	45057-82	COVER, master cylinder	82 to * — FLH-80, Classic
	21	45063-82A	REPAIR KIT, master cylinder	82 to * — FLH-80, Classic

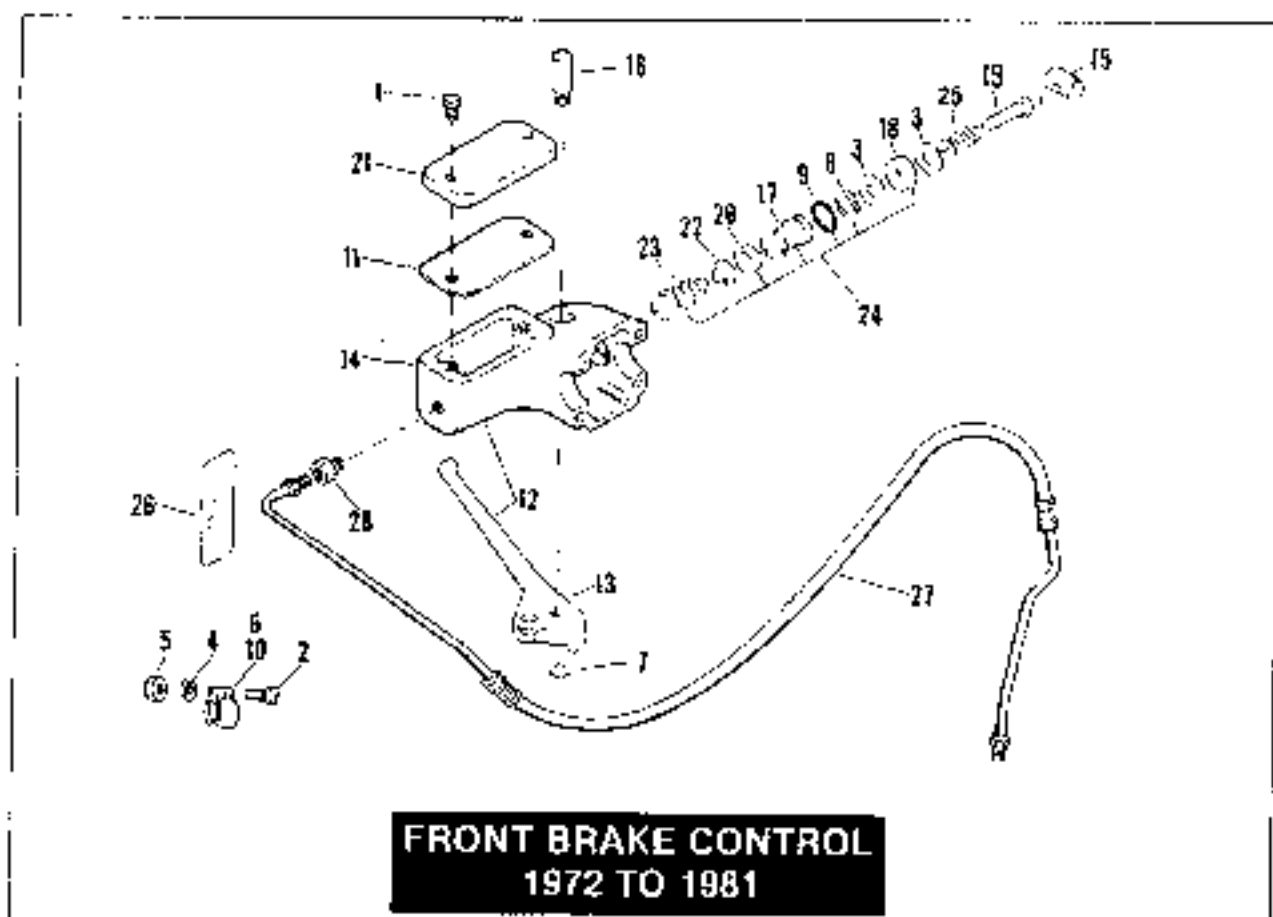


FRONT BRAKE CONTROL 1972 TO 1981

FRONT BRAKE CONTROL — DISC BRAKE — 1972 TO 1981


A30A

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2628	SCREW, No. 9-32 x 7/16 disk lid (2)	72 to 81 — FI, FLH, FLH 80, Classic
	2	2864	SCREW, No. 10-24 x 7/16 fender panel	73 to 81 — FI, FLH, FLH 80, Classic
	3	5811W	WASHER, 1/4 x 3/4 x 1/64 (2)	72 to 81 — FI, FLH, FLH 80, Classic
	4	7065	LOCKWASHER, No. 10	73 to 81 — FI, FLH, FLH 80, Classic
	5	7620W	NUT, R.D. 10-24 x 1/8 x 3/8 lex	73 to 81 — FI, FLH, FLH 80, Classic
	6	9950W	CLAMP, brake hose (mounted on fork side)	72 — FI, FLH
	7	1101E	RETAINING RING, hand lever pin (2)	72 to 81 — FI, FLH, FLH 80, Classic
	8	1105J	RETAINING RING, master cylinder piston	72 to 81 — FI, FLH, FLH 80, Classic
	9	11107	O-RING, master cylinder piston	72 to 81 — FI, FLH, FLH 80, Classic
	10	38712-72	O-RING, brake hose	72 to 81 — FI, FLH, FLH 80, Classic
	11	45012-72	GASKET, master cylinder cover	72 to 81 — FI, FLH, FLH 80, Classic
	12	45013-72	MASTER CYLINDER ASSEMBLY with hand lever (black)	72 to 81 — FI, FLH, FLH 80, Classic
	13	45015-72	HAND LEVER, from brake	72 to 81 — FI, FLH, FLH 80, Classic
	14	45024-72	BODY, master cylinder (black)	72 to 81 — FI, FLH, FLH 80, Classic
	15	45031-72	PIN, master cylinder plunger	72 to 81 — FI, FLH, FLH 80, Classic
	16	45032-72	PIN, hand lever pin	72 to 81 — FI, FLH, FLH 80, Classic
	17	45050-72	PISTON, master cylinder	72 to 81 — FI, FLH, FLH 80, Classic
	18	45054-72	DUST WIPER, master cylinder	72 to 81 — FI, FLH, FLH 80, Classic
	19	45055-72	PLUNGER, master cylinder	72 to 81 — FI, FLH, FLH 80, Classic
	20	45056-72	PISTON CUP, master cylinder	72 to 81 — FI, FLH, FLH 80, Classic
	21	45057-72	COVER, master cylinder	72 to 81 — FI, FLH, FLH 80, Classic
	22	45059-72	CUP, piston spring	72 to 81 — FI, FLH, FLH 80, Classic
	23	45061-72A	SPRING, piston return — master cylinder	72 to 81 — FI, FLH, FLH 80, Classic
	24	45063-72	REPAIR KIT, master cylinder	72 to 81 — FI, FLH, FLH 80, Classic
	25	45071-72	SPRING, plunger — master cylinder	72 to 81 — FI, FLH, FLH 80, Classic
	26	45105-72	WARNING LABEL, master cylinder (DOT 5)	72 to 81 — FI, FLH, FLH 80, Classic
	27	45120-72A	FRONT BRAKE HOSE	73 to 81 — FI, FLH, FLH 80, Classic
	28	60609-72	*J3E FITTING, 1/8-27 NPTF	Late 73 to 81 — FI, FLH, FLH 80, Classic

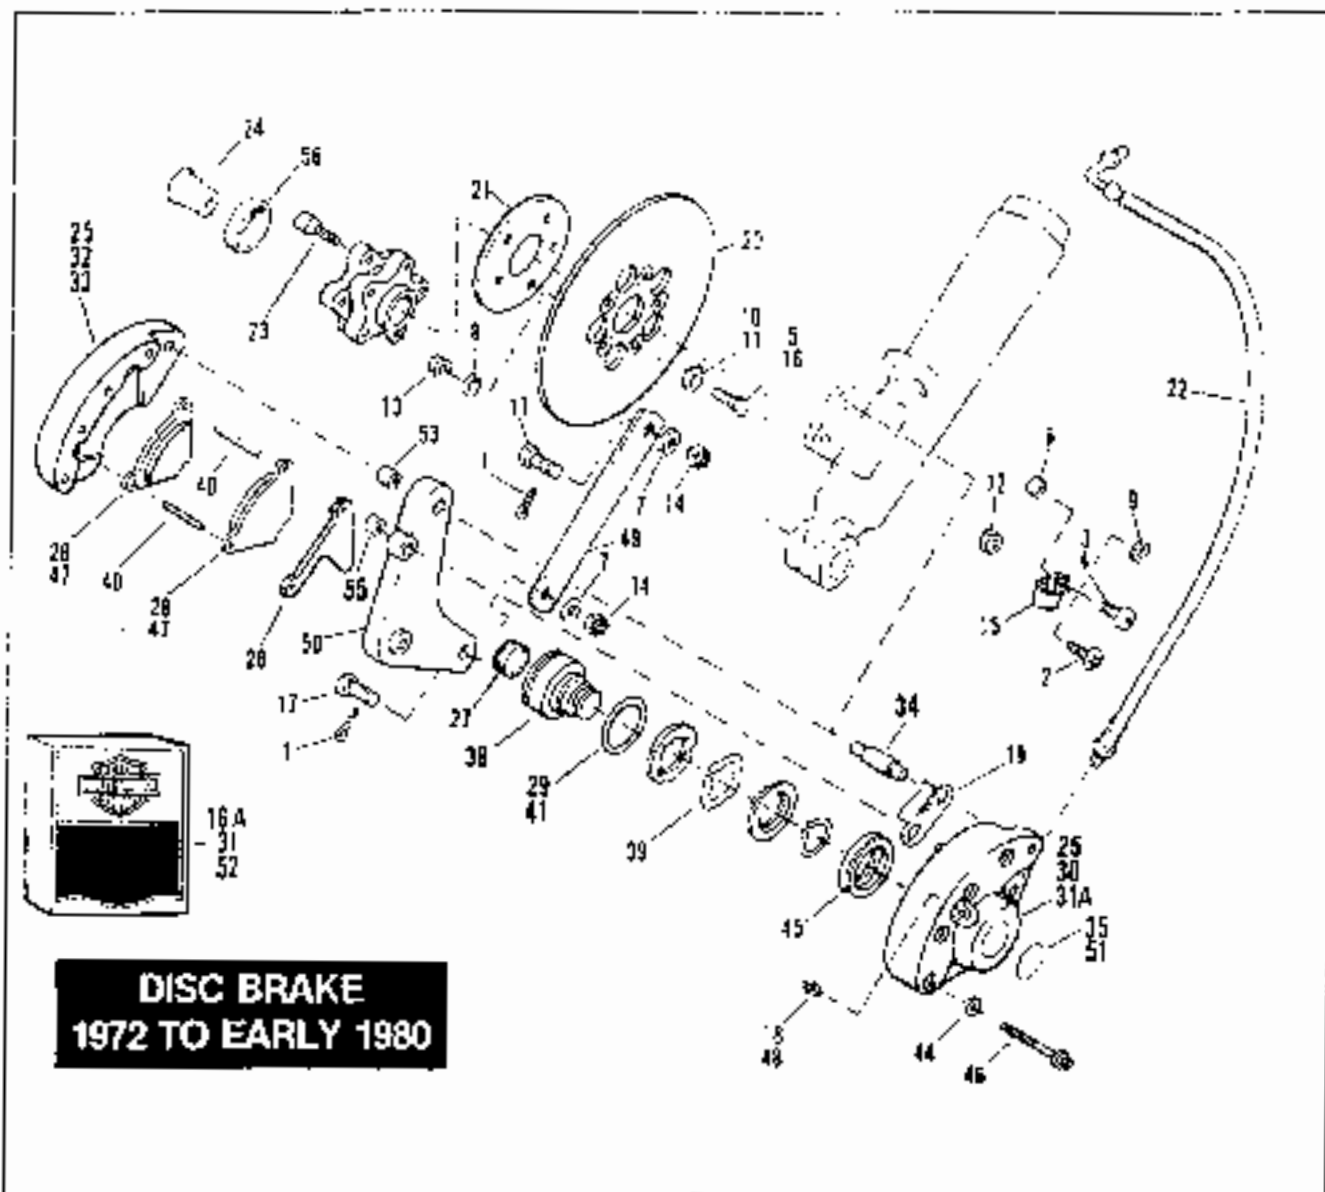

RETAIN PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	500W	COIL SPRING 1/8 x 1-1/4 (2)	73 to Early 80 — FL, FLH, FLH-80 Classic
	2	2652	SCREW, No. 10 x 3/8 self-tapping hex. hd. (2)	73 to Early 80 — FL, FLH, FLH-80 Classic
	3	2664	SCREW, No. 10 x 2 1/2 x 7/16 Pezdrive car hd.	73 to Early 80 — FL, FLH, FLH-80 Classic
	4	2668	SCREW, No. 10 x 2 1/2 x 9/16 Pezdrive car hd.	72 to Early 80 — FL, FLH, FLH-80 Classic
	5	2879W	BOLT, 3/8-16 x 1 hex. hd. (2)	72 — FL, FLH
	6	5380	SPACER, brake hose clamp	Late 72 to Early 80 — FL, FLH, FLH-80 Classic
	7	6718	WASHER, 1/2 x 1-1/8 x 3/32 (2)	73 to Early 80 — FL, FLH, FLH-80 Classic
	8	7039	LOCKWASHER, 3/8-16	Early 73 — FL, FLH
	9	7059	LOCKWASHER, No. 14	72 to Early 80 — FL, FLH, FLH-80 Classic
	10	7130W	LOCKWASHER, 3/8 external lock (5)	72 — FL, FLH
	11	7144W	LOCKWASHER, 3/8 external lock (2)	73 to Early 80 — Classic
	12	7622W	NUT, No. 10 2 1/2 x 1/8 x 3/8 hex.	73 to Early 80 — FL, FLH, FLH-80 Classic
	13	7778	LOCKWASHER, 3/8-16 x 1-1/8 hex. hd. (5)	73 to Early 80 — FL, FLH, FLH-80 Classic
	14	7811	CASSETTE, 1/2-13 x 7/16 x 3/4 hex. (2)	73 to Early 80 — FL, FLH, FLH-80 Classic
	15	38732-68	CLIP, brake hose	72 to Early 80 — FL, FLH, FLH-80 Classic
	16	41199-73	BOLT, 3/8-16 x 1 1/2 hex. hd. (2)	73 to Early 80 — FL, FLH, FLH-80 Classic
	16A	41E70-73	ANTI-VIBRATION KIT, includes 41671-73 CLIP	73 to Early 80 — FL, FLH, FLH-80 Classic
	17	41634-73	BOLT, 1/2-13 x 1-1/8 hex. hd. (10-90) (2)	73 to Early 80 — FL, FLH, FLH-80 Classic
	18	41649-58	BLEEDER VALVE, caliper	72 to 79 — FL, FLH, FLH-80 Classic
	19	41768-73	CLIP, vibration jumper — FRONT BRAKE ONLY	73 to Early 74 — FL, FLH
	20	41900-72B	DISC, brake (front & rear)	72 to Early 78 — FL, FLH
		41813-73	DISC, brake (front & rear)	Late 78 to Early 80 — FL, FLH, FLH-80 Classic
	21	41814-76	PLATE, brake disc	Late 75 to Early 80 — FL, FLH, FLH-80 Classic
	22	42300-73A	REAR BRAKE HOSE	73 to Early 80 — FL, FLH, FLH-80 Classic
	23	42530-35A	SCREW, wheel mounting, 3/8-20 socket hd. (5)	72 — FL, FLH
	24	43885-72	SPACER, front axle (2)	N/A 72 — FL, FLH
	25	44003-78B	CALIPER ASSEMBLY, front only (black)	72 to Early 80 — FL, FLH, FLH-80 Classic
	26	44002-78	SHIM, piston side — anti-rattle	Late 78 to Early 80 — FL, FLH, FLH-80 Classic
	27	44004-78	INSULATOR	Late 78 to Early 80 — FL, FLH, FLH-80 Classic
	28	44005-78	PAD SET	Late 78 to Early 80 — FL, FLH, FLH-80 Classic
	29	44007-80	SEAL, caliper piston	72 to Early 80 — FL, FLH, FLH-80 Classic
	30	44006-83A	CALIPER AND PISTON ASSEMBLY, outer — FRONT BRAKE — consists of items 31, 38 & 48	73 to Early 80 — FL, FLH, FLH-80 Classic
		44008-80	CALIPER AND PISTON ASSEMBLY, outer — REAR BRAKE — consists of, besides outer caliper, items 38 & 48	73 to Early 80 — FL, FLH, FLH-80 Classic
		44011-81	CALIPER AND PISTON ASSEMBLY, outer — REAR BRAKE — consists of besides outer caliper, items 38 & 48 Consists of besides outer caliper: 44012-81 SLEEVE KIT, with bushing 44118-80 PISTON, with seal and seal 44145-77 BLEEDER VALVE, caliper	73 to Early 80 — FL, FLH, FLH-80 Classic
	31	44070-72	ANTI-VIBRATION KIT Consists of: 3775 BOLT 3/8-15 x 2 hex. hd. 4700W BOLT 3/8-16 x 1 1/2 hex. hd. 6416 WASHER 1/2 x 1 x 5/64 (2) 44096-84 BUSHING 44057-84 SPRING 44066-84 LOCKWASHER 44071-72 BUSHING	Late 73 to Early 84 — FL, FLH, FLH-80 Classic
	31A	44105-72	BRAKE CALIPER, outer	N/A 72 to 79 — FL, FLH, FLH-80 Classic
	32	44106-72	BRAKE CALIPER, inner	72 to 79 — FL, FLH, FLH-80 Classic
	33	44106-80	BRAKE CALIPER, inner (black)	Early 80 — FL, FLH, FLH-80 Classic
	34	44107-72	MOUNTING PIN	72 to Early 80 — FL, FLH, FLH-80 Classic
	35	44108-72	LABEL, caliper	72 to 79 — FL, FLH, FLH-80 Classic
	36	44111-72	FLANGE, brake disc	N/A 72 — FL, FLH
	38	44118-80	PISTON, with seal & seal	72 to Early 80 — FL, FLH, FLH-80 Classic
	39	44123-72	SPRING WASHER, caliper	N/A 72 to Early 74 — FL, FLH 77 to Early 80 — FL, FLH, FLH-80 Classic


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	40	44124-72	PIN, brake pad (2)	72 to Early 80 — FL, FLH, FLH-80, Classic
	41	44127-72A	O-RING, caliper piston	72 to Early 80 — FL, FLH, FLH-80, Classic
	44	44132-72	WASHER, caliper bolt (4)	72 to Early 80 — FL, FLH, FLH-80, Classic
	45	44133-72	DUST BOOT, caliper	72 to Early 80 — FL, FLH, FLH-80, Classic
	46	44134-72A	BOLT, caliper (4)	72 to Early 80 — FL, FLH, FLH-80, Classic
	47	44135-74	PISTON SET, with piston pin	72 to Early 78 — FL, FLH, FLH-80
	48	44146-77	REFEED VALVE, outer caliper	Early 80 — FL, FLH, FLH-80, Classic
	49	44154-73	ANCHOR ARM, caliper bracket	73 to Early 80 — FL, FLH, FLH-80, Classic
	50	44166-73	BRACKET, caliper mounting	73 to Early 80 — FL, FLH, FLH-80, Classic
	51	44197-77	LABEL, brake caliper (original aluminum & black)	Early 80 — FL, FLH, FLH-80, Classic
	52	44331-73	CALIPER MOUNTING STUD KIT, consists of besides mounting stud, locknut & washer, items 40, 53 & 55	73 to Early 80 — FL, FLH, FLH-80, Classic
	53	45821-75	BUSHING, caliper mounting bracket — long (steel)	72 to Early 80 — FL, FLH, FLH-80, Classic
	55	45822-75	BUSHING, caliper mounting bracket — short (steel)	72 to Early 80 — FL, FLH, FLH-80, Classic
	56	47513-72	OIL SEAL, large	72 to Early 80 — FL, FLH, FLH-80, Classic

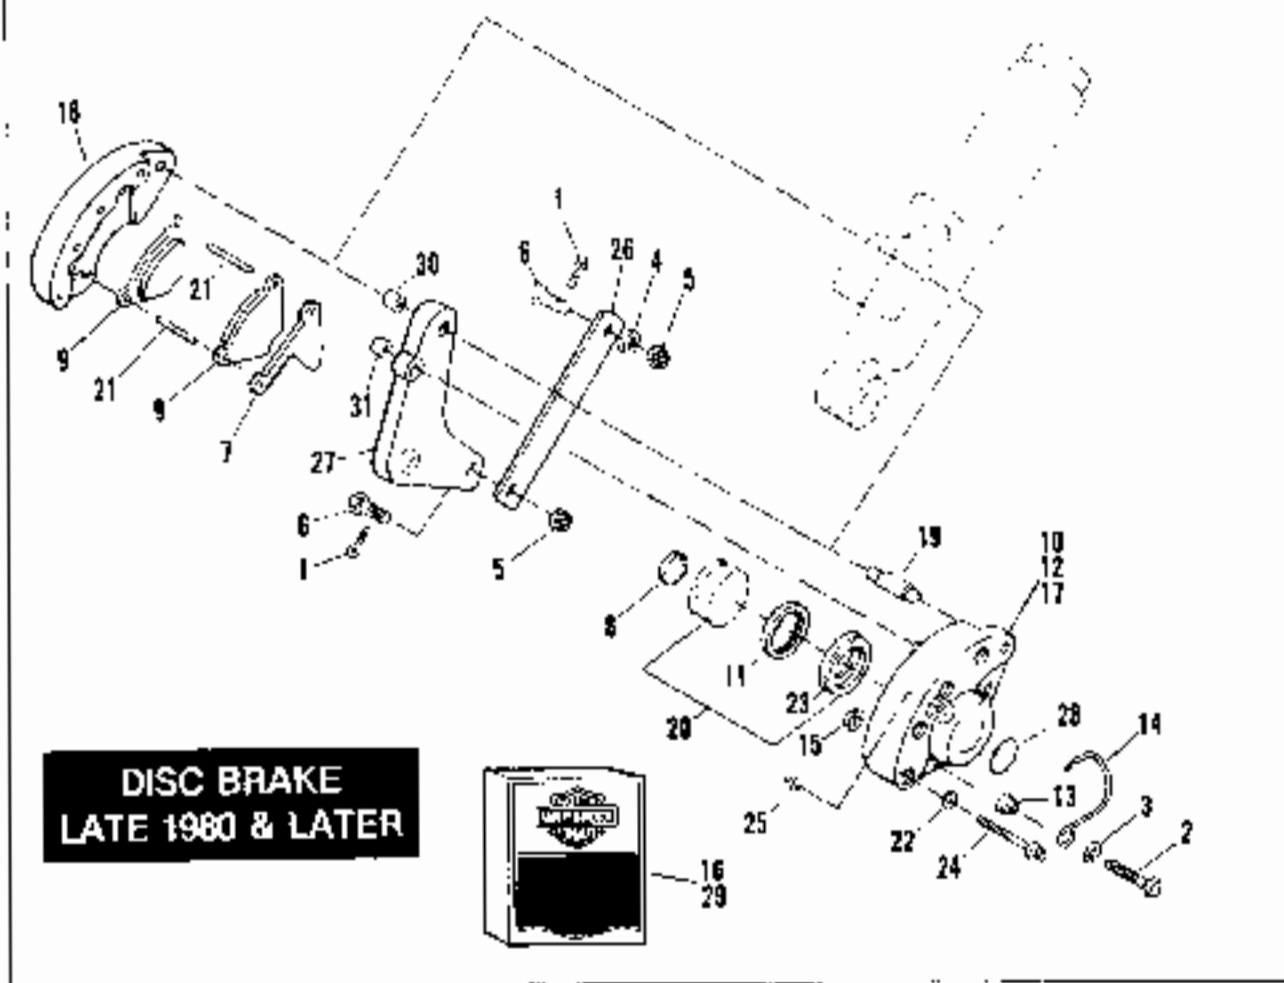

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
NOTE: See next pages for 1981 & later rear brake caliper components.				
	1	520W	GUIDE PIN, 1/8 x 1-1/4 (2)	Late 80 — FL, FLH, FLH-80, Classic
	2	9775	BOLT, 3/8 x 2 hex. hd	Late 84 to * — FLH-80
	3	9419	WASHER, 3/8 x 1 x 5/16	Late 84 to * — FLH-80
	4	9716	WASHER, 1/2 x 1-1/8 x 3/16	Late 80 — FL, FLH, FLH-80, Classic
	5	7843	CASTLE NUT, 1/2-13 x 7/16 x 3/4 hex. (2)	Late 80 — FL, FLH, FLH-80, Classic
	6	41754-72	BOLT, 1/2-13 x 1-1/8 hex. hd (incl. lock)	Late 80 — FL, FLH, FLH-80, Classic
		44000-780	Caliper assembly, complete — FRONT ONLY	Late 80 to * — FL, FLH, FLH-80, Classic
	7	44002-78	Seal, piston side — anti-rattle	Late 80 to * — FL, FLH, FLH-80, Classic
	8	44004-80	INSULATOR, 1-3/4 round x 5/16 thick	Late 80 to * — FL, FLH, FLH-80, Classic
	9	44005-78	PAW SET	Late 80 to * — FL, FLH, FLH-80, Classic
	10	44006-80	CALIPER AND PISTON ASSEMBLY, outer — FRONT BRAKE ON, V-brake, consists of items 11, 12, 21, 23 & 25	Late 80 to Early 84 — FL, FLH, FLH-80, Classic
		44006-90A	CALIPER AND PISTON ASSEMBLY, outer — FRONT ONLY	Late 84 to * — FLH-80
	11	44007-80	SEAL, caliper piston	Late 80 to * — FL, FLH, FLH-80, Classic
	12	44008-80	CALIPER AND PISTON ASSEMBLY, outer — REAR BRAKE ONLY (black), consists of besides outer caliper, items 11, 20, 23 & 25	Late 80 — FL, FLH, FLH-80, Classic
	13	44009-84	BUSHING, front brake caliper	Late 84 to * — FLH-80
	14	44007-84	SPRING, front brake — anti-vibration	Late 84 to * — FLH-80
	15	44009-84	LOCKNUT, front brake caliper	Late 84 to * — FLH-80
	16	44070-72	ANTI-VIBRATION K.T., front brake caliper Consists of besides items 2 & 13-15 4720W BOLT, 3/8-16 x 1-3/4 hex. hd 9419 WASHER, 3/8 x 1 x 5/16 (2) 44071-72 BUSHING	Late 80 to Early 84 — FL, FLH, FLH-80, Classic
	17	44105-80	REAR CALIPER, outer — FRONT ONLY (black)	Late 80 to Early 84 — FL, FLH, FLH-80, Classic
	18	44106-80	REAR CALIPER, inner (black)	Late 80 to * — FL, FLH, FLH-80, Classic
	19	44107-72	MOUNTING PIN	Late 80 to * — FL, FLH, FLH-80, Classic
	20	44118-80	PISTON, with bush & seal	Late 80 to * — FL, FLH, FLH-80, Classic
	21	44124-72	FIN, brake pad (2)	Late 80 to * — FL, FLH, FLH-80, Classic
	22	44132-72	WASHER, caliper bolt (4)	Late 80 to * — FL, FLH, FLH-80, Classic
	23	44133-72	DUST BOOT, caliper	Late 80 to * — FL, FLH, FLH-80, Classic
	24	44134-72A	BOLT, caliper (4)	Late 80 to * — FL, FLH, FLH-80, Classic
	25	44146-77	DIFFER VALVE, caliper	Late 80 to * — FL, FLH, FLH-80, Classic
	26	44154-73	ANCHOR ARM, caliper bracket	Late 80 — FL, FLH, FLH-80, Classic
	27	44156-73	BRACKET, caliper mounting	Late 80 — FL, FLH, FLH-80, Classic
	28	44197-77	CAREL, brake caliper (bright aluminum & black)	Late 80 to * — FL, FLH, FLH-80, Classic
	29	44031-73	CALIPER MOUNTING STUD K.T., consists of, besides mounting stud, locknut & washer, items 21, 30 & 31	Late 80 to * — FL, FLH, FLH-80, Classic
	30	45821-75	BUSHING, caliper mounting bracket — org (steel)	Late 80 to * — FL, FLH, FLH-80, Classic
	31	45822-75	BUSHING, caliper mounting bracket — front (steel)	Late 80 to * — FL, FLH, FLH-80, Classic

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	520W	CLEVIS PIN, 1/8 x 1-1/4 (2)	81 to * — FLH-80, Classic
	2	3967	BOLT, 5/16-16 x 3/4 hex. hd. (2)	81 to * — FLH-80, Classic
	3	6333	WASHER, 5/16 x 7/8 x 5/64 (2)	82 to * — FLH-80, Classic
		6702	WASHER, 5/16 x 11/16 x 1/16 (2)	81 — FLH-80, Classic
	4	6718	WASHER, 1/2 x 1-1/16 x 3/32	81 to * — FLH-80, Classic
	5	7845	CASSET NUT, 1/2-13 x 7/16 x 9/4 hex.	81 to * — FLH-80, Classic
	5A	11146	O-RING (4)	81 to * — FLH-80, Classic
	6	40916-81	BRAKING - rear, includes 1146 O-Ring (4)	81 to * — FLH-80, Classic
	7	40917-81	CALIPER ASSEMBLY, complete - rear	81 to * — FLH-80, Classic
	8	40919-81	CLEVIS PIN, rear caliper bracket	81 to * — FLH-80, Classic
	9	41734-72	BOLT, 1/2-13 x 1-1/8 hex. hd. (contact)	81 to * — FLH-80, Classic
	10	43345-79	BOOT (2)	81 to * — FLH-80, Classic
	11	43940-79	PISTON, includes boot & seal (2)	81 to * — FLH-80, Classic
	12	43947-79	SEAL, piston (2)	81 to * — FLH-80, Classic
	13	43957-80	PA2 SET	81 to * — FLH-80, Classic
	15	44038-80	PLATE (2)	81 to * — FLH-80, Classic
	15	44039-80	PIN (2)	81 to * — FLH-80, Classic
	17	44042-80	SPRING WASHER (2)	81 to * — FLH-80, Classic
	19	44146-77	B. ENDER FITTING	81 to * — FLH-80, Classic
	20	44155-91	ANCHOR ARM, caliper bracket	81 to * — FLH-80, Classic

FRONT BRAKE AND CONTROLS 1971 & EARLIER

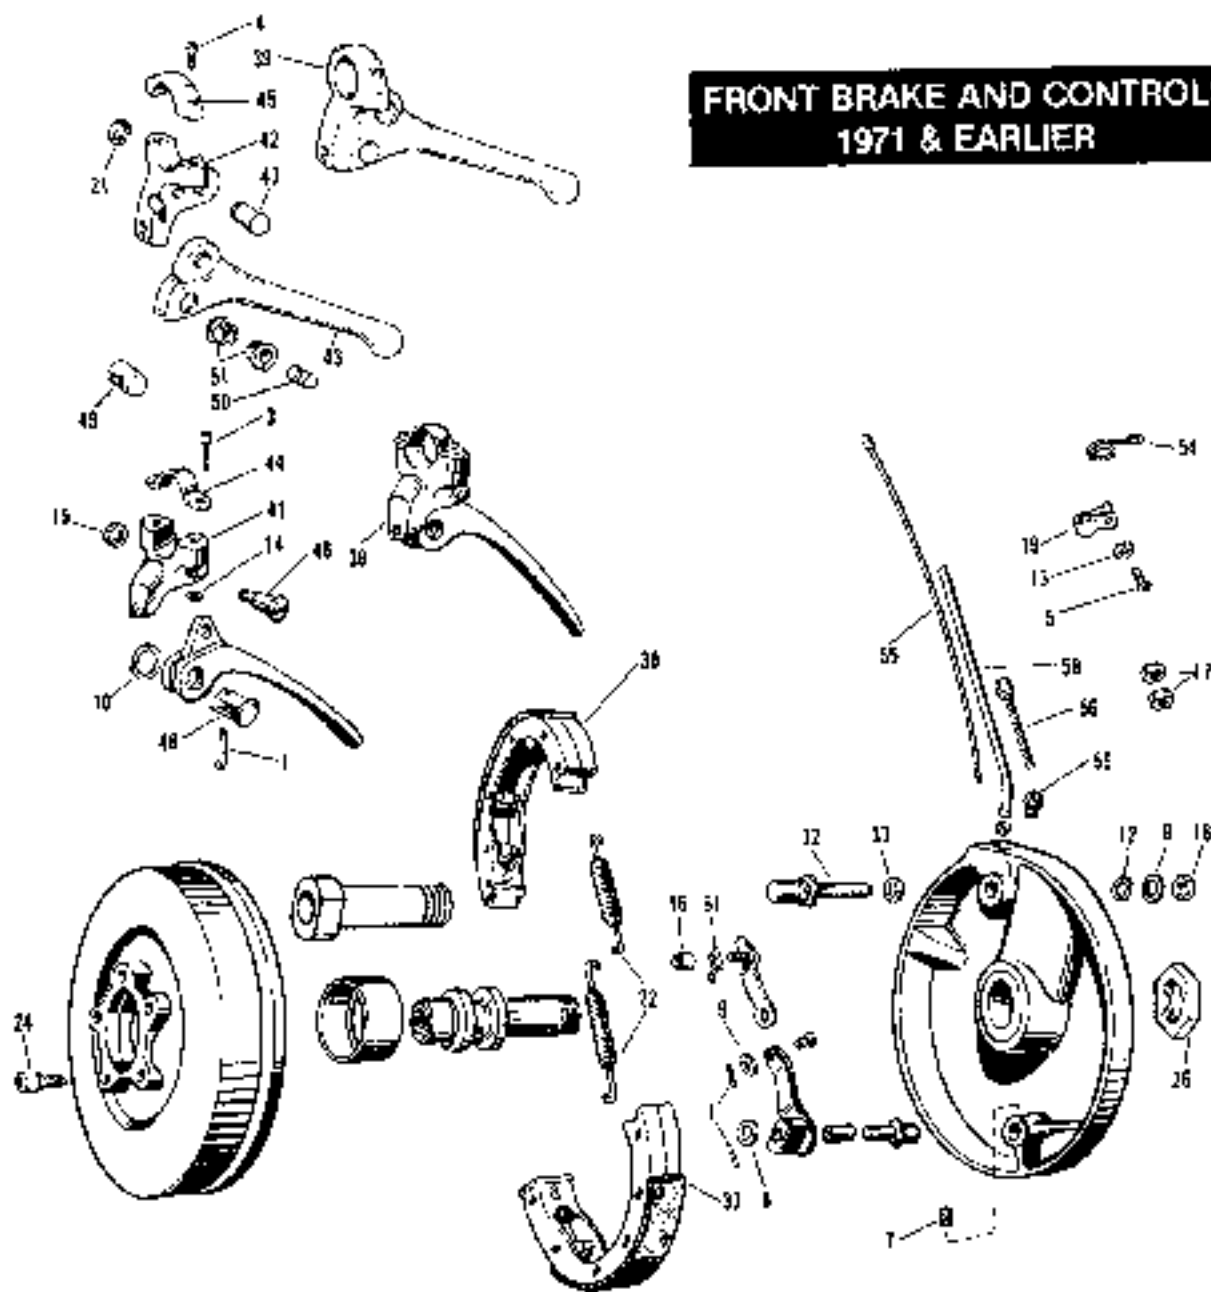

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	510	COTTER PIN, 1/8 x 3/4 (2 — 41 to 64)	71 to 71 — FL, FLH
	2	591	SCREW, No. 10-24 x 1/2 (2 — 41 to 64)	41 to 64 — FL, FLH
	4	1205	SCREW, No. 6-24 x 3/4 (2 — 41 to 64)	65 to 71 — FL, FLH
	5	2864	SCREW, No. 10-24 x 7/16 (2 — 41 to 64)	41 to 71 — FL, FLH
	7	3007	SET SCREW, No. 10-32 x 3/8 (2 — 41 to 64)	41 to 71 — FL, FLH
	8	5170B	WASHER, 3/8 x 3/16 x 1/32	41 to 71 — FL, FLH
	9	5702	WASHER, 5/16 x 1/2 x 1/16	41 to 71 — FL, FLH
	10	6907W	WASHER, 15/32 x 3/4 x 1/16	41 to 71 — FL, FLH
	12	7029	LOCKWASHER, 1/2	41 to 71 — FL, FLH
	13	7270	LOCKWASHER, No. 10-32 (2 — 41 to 64)	41 to 71 — FL, FLH
	14	7670W	NUT, No. 10-24 x 1/2 x 3/8 hex (2)	41 to 71 — FL, FLH
	15	7691W	NUT, 1/4-24 x 5/8 x 7/16 hex	41 to 64 — FL, FLH
	16	7725	LOCKNUT, 5/16-24 x 11/15 x 1/2 hex	41 to 71 — FL, FLH
	17	7714	NUT, 5/16-24 x 3/16 x 1/2 hex	50 to 71 — FL, FLH
	18	7907W	NUT, 7/16-20 x 11/16 x 3/8 hex	41 to 71 — FL, FLH
	19	9803	CLIP, handbrake cable	N/A 50 to 71 — FL, FLH
	21	11035	RETAINING RING, hand lever pivot pin	65 to 71 — FL, FLH
	23	41035-55	SPRING, brake shoe (2)	41 to 71 — FL, FLH
	24	45030-35A	SCREW, wheel mounting, 3/8-20 socket hd. (5)	41 to 71 — FL, FLH
	25	43886-51	NUT, axle screw	N/A 41 to 71 — FL, FLH
	34	44431-40B	SET OF BRAKE SHOES AND LININGS	41 to 71 — FL, FLH
	32	44446-48	PIVOT STUD	N/A 41 to 71 — FL, FLH
	33	44454-46	WASHER, pivot stud	N/A 41 to 71 — FL, FLH
	38	45002-41	HAND LEVER AND BRACKET	41 to 64 — FL, FLH
	39	45002-65A	HAND LEVER AND BRACKET	Late 60 & Early 69 — FL, FLH
		45002-68	HAND LEVER AND BRACKET	N/A Late 69 to 71 — FL, FLH
	41	45023-41	BRACKET, hand lever	N/A 41 to 64 — FL, FLH
	42	45023-65	BRACKET, hand lever	55 to Early 69 — FL, FLH
		45023-69	BRACKET, hand lever	N/A Late 69 to 71 — FL, FLH
	43	45024-65A	HAND LEVER, includes items 50 & 51	65 to 71 — FL, FLH
	44	45030-26	CLAMP, lever bracket	41 to 64 — FL, FLH
	45	45030-55A	CLAMP, lever bracket	65 to 71 — FL, FLH
	46	45031-41	PIVOT SCREW, hand lever	41 to 64 — FL, FLH
	47	45031-65	PIVOT PIN, hand lever	65 to 71 — FL, FLH
	48	45033-45	BUSHING, hand lever	41 to 64 — FL, FLH
	49	45033-65	BUSHING, hand lever	N/A 55 to Early 69 — FL, FLH
	50	45034-68	CABLE ANCHOR PIN, hand lever (used without bushings)	68 to 71 — FL, FLH
		45035-68	CABLE ANCHOR PIN, hand lever (used with plastic bushings)	Late 68 to 71 — FL, FLH
	51	45039-68	BUSHING, hand lever cable anchor pin (plastic) (2)	Late 68 to 71 — FL, FLH
		45065-54	CABLE AND COIL ASSEMBLY	Late 69 to 71 — FL, FLH
	54	45092-66	BUZZER, control cable	66 to 71 — FL, FLH
	55	45137-51	CABLE CORP	41 to 71 — FL, FLH
	56	45150-45	ADJUSTING SCREW, brake cable	N/A 50 to 71 — FL, FLH
	58	45202-59A	CABLE TUBE (handshift, 21 models, 1968, straight)	N/A 41 to 71 — FL, FLH
	59	45205-49	FITTING, cable tube	N/A 41 to 71 — FL, FLH
	61	45216-49	CLAMP, brake cable claws	N/A 41 to 71 — FL, FLH


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	515	DOTTER PIN, 1/16 x 3/4	Late 79 to * — FL, FLH, FLH-80, Classic
	2	8352	SCREW, No. 10-18 x 3/8 self tapping hex. washer hd. (2 — 81 & Earlier)	Late 79 to 82 — FL, FLH, FLH-80, Classic
	3	3415	BOLT, 5/16-18 x 2-1/4 hex. hd.	Late 79 to * — FL, FLH, FLH-80, Classic
	4	3825	BOLT, 1/4-20 x 1 hex. hd.	Late 79 & Early 80 — FL, FLH, FLH-80, Classic
	5	4319	JOINT, 3/8-24 x 1 hex. hd.	Late 79 to * — FL, FLH, FLH-80, Classic
	5A	4410	BOLT, 1/4-29 x 7/8 hex. hd.	Late 80 to * — FL, FLH, FLH-80, Classic
	6	4713W	BOLT, 3/8-15 x 3/4 hex. hd.	Late 79 to * — FL, FLH, FLH-80, Classic
	7	5220W	WASHER, 1/4 x 7/16 x 1/32	Late 79 to * — FL, FLH, FLH-80, Classic
	8	5334	WASHER, 7/16 x 15/16 x 1/16	Late 79 to * — FL, FLH, FLH-80, Classic
	9	6496W	WASHER, 7/16 x 13/16 x 3/32	Late 79 to * — FL, FLH, FLH-80, Classic
	10	6702	WASHER, 5/16 x 11/16 x 1/16 (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	11	7026	LOCKWASHER, 3/8 (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	12	7130W	LOCKWASHER, 3/8 internal top flt (3)	Late 79 to * — FL, FLH, FLH-80, Classic
	13	7692W	JAMNUT, 3/8-18 x 7/32 x 5/16 hex.	Late 79 to * — FL, FLH, FLH-80, Classic
	14	7670	NUT, 1/4-28 x 7/32 x 7/16 hex.	Late 79 to * — FL, FLH, FLH-80, Classic
	15	7740	LOCKNUT, 5/16-18 x 1/4 x 1/2 hex. (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	16	7825	LOCKNUT, 7/16-20 x 7/16 x 5/8 hex. (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	16A	10032	CLAMP, rear brake hose	Late 83 to * — FLH-80
	17	10006	STRAP, brake tube to frame (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	17A	10038	CLAMP, rear brake hose	81 to * — FLH-80, Classic
	18	3695E-85A	PAD KIT, brake pedal, includes index nos. 5, 15, 19 & 20	Late 79 to * — FL, FLH, FLH-80, Classic
	19	36962-87	SPACER, brake pedal	Late 79 to * — FL, FLH, FLH-80, Classic
	20	36964-87	PAD ONLY, brake pedal	Late 79 to * — FL, FLH, FLH-80, Classic
	21	30712-88	CLAMP, rear brake hose - small (2)	Late 79 to 82 — FL, FLH, FLH-80, Classic
	21A	43912-81	REAR BRAKE HOSE	81 to Early 84 — FLH-80, Classic
		40912-84	REAR BRAKE HOSE	Late 84 to * — FLH-80
	22	41670-72	ANTI-VIBRATION KIT	Late 79 to 80 — FL, FLH, FLH-80, Classic
	22A	41745-75	COVER, master cylinder (without sidecar) (chrome)	Late 79 to * — FL, FLH, FLH-80, Classic
	23	41748-79	COVER, master cylinder (with sidecar) (chrome)	Late 79 to 82 — Classic, 93 to * — FLH-80
	24	41754-79A	MASTER CYL. NOIR.	Late 79 to * — FL, FLH, FLH-80, Classic
	25	41764-79	RUBBER BOOT, master cylinder	Late 79 to * — FL, FLH, FLH-80, Classic
	26	41835-69	SPRING, foot lever	Late 79 to * — FL, FLH, FLH-80, Classic
	27	42269-70	CLEVIS PIN	Late 79 to * — FL, FLH, FLH-80, Classic
	28	42300-73A	REAR BRAKE TUBE	Late 79 & 80 — FL, FLH, FLH-80, Classic
	29	42301-79	STUD, master cylinder	Late 79 to * — FL, FLH, FLH-80, Classic
	30	42304-79	FRONT BRAKE TUBE	Late 79 to Early 84 — FL, FLH, FLH-80, Classic
		42304-84	FRONT BRAKE TUBE	Late 84 to * — FLH-80
	31	42309-70	BRAKE LINE TEE (used w/ sidecar)	Late 79 to * — FL, FLH, FLH-80, Classic
	32	42314-71A	BACKET, brake front tube	Late 79 to * — FL, FLH, FLH-80, Classic
	33	42318-70	BRAKE LINE TEE (used w/o sidecar)	Late 79 to * — FL, FLH, FLH-80, Classic
	34	42319-72	HOSE PAD, brake front tube	Late 79 to * — FL, FLH, FLH-80, Classic
	35	42327-70	CLAMP, rear brake hose — large	Late 79 to Early 83 — FL, FLH, FLH-80, Classic
	36	42333-79	PLUNGER, master cylinder	Late 79 to * — FL, FLH, FLH-80, Classic
	37	42374-77B	REPAIR KIT, master cylinder	Late 79 to * — FL, FLH, FLH-80, Classic
	38	42375-77	SCREW, master cylinder (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	39	42376-71A	COVER, master cylinder	Late 79 to * — FL, FLH, FLH-80, Classic
	40	42401-79	FOOT LEVER AND BRACKET ASSEMBLY	Late 79 to * — FL, FLH, FLH-80, Classic
	41	42402-79	LEVER, foot brake (chrome)	Late 79 to * — FL, FLH, FLH-80, Classic
	42	42405-80	GASKET, master cylinder	Late 79 to * — FL, FLH, FLH-80, Classic
	43	42480-79	BRACKET ASSEMBLY, only	Late 79 to * — FL, FLH, FLH-80, Classic
	44	45195-77	WARNING LABEL, master cylinder (DOT S: 17-79 to 81)	Late 79 to 82 — FL, FLH, FLH-80, Classic
	45	47730-77	CARRIAGE BOLT, brake line tee, 3/8-16 x 1-3/8	Late 79 to * — FL, FLH, FLH-80, Classic

**REAR BRAKE CONTROL
EARLY 1979 & EARLIER**


This exploded view diagram illustrates the components of a rear brake control system. The central component is the master cylinder (27), which is connected to the brake lines (34) and hoses (21). The diagram also shows the brake lines (34) and hoses (21) connected to the brake lines (34) and hoses (21). The diagram includes various fittings, bolts, and nuts, such as the master cylinder (27), brake lines (34), hoses (21), and various fittings, bolts, and nuts. The diagram is numbered to identify each part, including the master cylinder (27), brake lines (34), hoses (21), and various fittings, bolts, and nuts.

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	515	CUTTER PIN, 1-16 x 3/4	58 to Early 79 — FL, FLH, FLH-80, Classic
	2	2E52	SCREW, No. 10-16 x 3/8, self-lap, hex wash, hd. (2)	71 to Early 79 — FL, FLH, FLH-80, Classic
	3	3B53W	BOLT, 5/16-24 x 1/2, hex, hd.	58 to 69 — FL, FLH
	4	44C1W	BOLT, 3/8-24 x 2-3/4, hex, hd.	70 to Early 79 — FL, FLH, FLH-80, Classic
	5	442C	BOLT, 3/8-16 x 2-3/4, hex, hd.	58 to 72 — FL, FLH
	6	4717W	BOLT, 3/8-16 x 3/4, hex, hd.	58 to Early 79 — FL, FLH, FLH-80, Classic
	7	6220W	WASHER, 1/4 x 7/16 x 1/32	58 to Early 79 — FL, FLH, FLH-80, Classic
	8	5334	WASHER, 7/16 x 15/16 x 1/16	58 to Early 79 — FL, FLH, FLH-80, Classic
	9	9444H8	WASHER, 3/8 x 13/16 x 3/32	58 to Early 79 — FL, FLH, FLH-80, Classic
	10	548511W	WASHER, 7/16 x 13/16 x 3/32	65 to Early 79 — FL, FLH, FLH-80, Classic
	11	7038	LOCKWASHER, 3/8	58 to Early 79 — FL, FLH, FLH-80, Classic
	12	7039	LOCKWASHER, 7/16	58 to Early 79 — FL, FLH, FLH-80, Classic
	13	7041	LOCKWASHER, 5/16	58 to Early 79 — FL, FLH, FLH-80, Classic
	14	742W	NUT, 5/16-18 x 1/4 x 1/2, hex.	58 to 69 — FL, FLH
	15	7753	NUT, 5/16-24 x 1/4 x 1/2, hex.	58 to Early 79 — FL, FLH, FLH-80, Classic
	16	7E03W	NUT, 3/8-24 x 5/16 x 9/16, hex.	73 to Early 79 — FL, FLH, FLH-80, Classic
	17	7B25	LOCKNUT, 7/16-20 x 7/16 x 5/8, hex.	65 to Early 79 — FL, FLH, FLH-80, Classic
	18	7B48W	JAMNUT, 7/16-20 x 1/4 x 11/16, hex.	65 to Early 79 — FL, FLH, FLH-80, Classic
	19	5851	BRACE FITTING	70 to Early 79 — FL, FLH, FLH-80, Classic
	20	10000	STAP, brake tube to frame (2)	70 to Early 79 — FL, FLH, FLH-80, Classic
	21	11137	C-RING, repair kit	58 to Early 79 — FL, FLH, FLH-80, Classic
	22	36956-65A	PAD KIT, brake pedal, includes index nos. 10, 17, 23 & 24	65 to Early 79 — FL, FLH, FLH-80, Classic
	23	36952-67	SPACER, brake pedal pad	67 — FL, FLH Early 79 — FL, FLH, FLH-80, Classic
	24	36964-67	PAD ONLY, brake pedal	67 to Early 79 — FL, FLH, FLH-80, Classic
	25	58712-58	CLAMP, brake rear hose — small (2)	70 to Early 79 — FL, FLH, FLH-80, Classic
	25A	41E70-73	ANTI-VIBRATION KIT	73 to Early 79 — FL, FLH, FLH-80, Classic
	26	41737-63	MASTER CYLINDER COVER KIT w/ 6701 WASHER	N/A 60 to Early 79 — FL, FLH, FLH-80, Classic
	27	41751-58	MASTER CYLINDER	58 to 72 — FL, FLH
	28	41761-78	MASTER CYLINDER	73 to Early 79 — FL, FLH, FLH-80, Classic
	28	41762-58A	REPAIR KIT, master cylinder	58 to Early 79 — FL, FLH, FLH-80, Classic
			NOTE: Must order 41773-58 valve and seat for use on 1972 and earlier vehicles with drum brake	
	31	41764-70	RUBBER BOOT, master cylinder	70 to Early 79 — FL, FLH, FLH-80, Classic
	32	41765-58	FILTER PLUG, master cylinder	58 to Early 79 — FL, FLH, FLH-80, Classic
	33	41766-59	WASHER, filter plug	58 to Early 79 — FL, FLH, FLH-80, Classic
	34	41768-58	MASTER CYLINDER SPRING, with cup, valve, & seat	58 to Early 79 — FL, FLH, FLH-80, Classic
	35	4178E-79	WARNING LABEL, master cylinder (round)	Min 79 — FL, FLH, FLH-80, Classic
	36	41835-69	SHIM, foot lever	70 to Early 79 — FL, FLH, FLH-80, Classic
	37	42259-70	PIV, rear brake rod clevis	58 to 69 — FL, FLH
	38	42259-70	CLEVIS PIN	70 to Early 79 — FL, FLH, FLH-80, Classic
	39	42302-58	FRONT TUBE	N/A 58 to 69 — FL, FLH
	40	42303-70A	REAR BRAKE TUBE	N/A 70 to 72 — FL, FLH
	41	42304-70A	FRONT TUBE	73 to Early 79 — FL, FLH, FLH-80, Classic
	42	42309-70	BRAKE LINE TEE (used w/ sidebrake)	70 to Early 79 — FL, FLH, FLH-80, Classic
	43	42311-58	PLUG, rear brake line	58 to 72 — FL, FLH
	44	42314-71A	BRACKET, brake front tube	Late 72 to Early 79 — FL, FLH, FLH-80, Classic
	45	42318-72	BRAKE LINE TEE (used w/o sidebrake)	Late 72 to Early 79 — FL, FLH, FLH-80, Classic
	46	42319-72	HOSE PAD, brake front tube	Late 72 to Early 79 — FL, FLH, FLH-80, Classic
	47	42321-71	BRAKE TUBE & T. front (rubber mounted)	N/A 71 to Early 72 — FL, FLH, FLH-80, Classic
	48	42327-73	CLAMP, brake rear hose — large	70 to Early 79 — FL, FLH, FLH-80, Classic
	49	42333-70	PUNGER, master cylinder	70 to Early 79 — FL, FLH, FLH-80, Classic
	50	42431-70	FOOT LEVER AND BRACKET	N/A 70 to 72 — FL, FLH
	51	42431-73A	FOOT LEVER AND BRACKET	73 to Early 79 — FL, FLH, FLH-80, Classic
	52	42432-70	LEVER, foot brake	N/A 70 to 72 — FL, FLH
	53	42439-73A	LEVER, foot brake (chrome)	73 to Early 79 — FL, FLH, FLH-80, Classic
	54	42441-70	STOP PLATE, foot brake lever	N/A 70 to Early 79 — FL, FLH, FLH-80, Classic
	55	42480-70	BRACKET ASSEMBLY, only	N/A 70 to 72 — FL, FLH
	56	42480-73	BRACKET ASSEMBLY, only	73 to Early 79 — FL, FLH, FLH-80, Classic
	58	45056-77	CUP, repair kit	58 to Early 79 — FL, FLH, FLH-80, Classic
	59	45105-77	WARNING LABEL, master cylinder (DOT 5)	N/A 77 to Early 79 — FL, FLH, FLH-80, Classic
	60	50E58-75	SPACER, master cylinder stud (2)	58 to Early 79 — FL, FLH, FLH-80, Classic
	61	83566-51	BRAKE LINE TEE, only	N/A 58 to 69 — FL, FLH

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	2592	SCREW, No. 10-24 x 1-1/2 hex. cap. pan. hd.	53 to 72 — FI, FLH
	3	3720	BOLT, 1/4-28 x 7/16 hex. hd.	58 to 62 — FL, FLH
	4	4020W	BOLT, 5/16-24 x 1-3/8 hex. hd.	58 to 62 — FI, FLH
	5	4019	BOLT, 3/8-24 x 1 hex. hd. (2)	63 to 72 — FL, FLH
	6	6716	WASHER, No. 10 x 1/2 x 3/64	58 to 72 — FI, FLH
	7	7022	LOCKWASHER, 3/8	58 to 62 — FI, FLH
	8	7038	LOCKWASHER, 3/8	63 to 72 — FL, FLH
	9	7060	LOCKWASHER, No. 10	58 to 72 — FL, FLH
	10	7220	LOCKWASHER, No. 10 external tooth (2)	58 to 62 — FI, FLH
	11	7242	LOCKWASHER, 5/16 external tooth	58 to 70 — FI, FLH
	12	7810	NUT, 5/8-18 x 9/16 x 15/16	58 to 62 — FI, FLH
	13	7988	NUT, 5/8-18 x 1-1/4 x 1 hex.	58 to 72 — FI, FLH
	14	7990	LOCK NUT, 5/8-18 x 3/8 x 15/16 hex.	63 to 72 — FL, FLH
	15	8095A	NUT, 1-20 x 3/8 x 1 3/8 hex.	N/A 58 to 72 — FI, FLH
	16	8695	CLAMP, rear brake hose	N/A 58 to 72 — FL, FLH
	18	4140C-67	REAR BRAKE DRUM, with sprocket	N/A 57 to 72 — FI, FLH
	20	41425-37	COUPLER PIN, brake shell (5)	N/A 58 to 72 — FI, FLH
	21	41596-30	COLLAR, rear axle sleeve	N/A 58 to 72 — FL, FLH
	22	41596-33	SPACER, slide plate	N/A 63 to 72 — FL, FLH
	24	41600-67	AXLE SLEEVE	N/A 67 to 72 — FL, FLH
	25	41650-58	SIDE PLATE ASSEMBLY	N/A 56 to 62 — FL, FLH
	26	41720-58	ANCHOR STUD	58 to 62 — FL, FLH
	32	41740-63	WHEEL BRAKE CYLINDER	63 to 72 — FL, FLH
	33	41741-63	BLEEDER FITTING, wheel brake cylinder	N/A 63 to 72 — FI, FLH
	34	41742-59	SCREW, wheel cylinder	58 to 72 — FL, FLH
	35	41743-59	BOLT, wheel cylinder	N/A 58 to 72 — FL, FLH
	36	41744-58	GASKET, cylinder fitting (2)	N/A 58 to 72 — FL, FLH
	37	41746-65	REPAIR KIT, wheel cylinder	63 to 72 — FL, FLH
	38	41746-58	BLEEDER NIPPLE, wheel cylinder	58 to 62 — FL, FLH
	39	41750-63	SWIVEL FITTING, brake cylinder	63 to 72 — FL, FLH
	40	41801-58A	SET OF BRAKE SHOES AND LININGS (cast iron drums)	Late 58 to 62 — FI, FLH
	41	41801-53	SET OF BRAKE SHOES AND LININGS, stc.	63 to 72 — FI, FLH
	43	41808-63	SET OF REAR BRAKE LININGS AND RIVETS	N/A 63 to 72 — FL, FLH
	44	41835-58	RETAINER, brake shoe (2)	58 to 72 — FI, FLH
	45	41836-58	RETURN SPRING, brake shoe	58 to 62 — FL, FLH
	46	41836-63	RETURY SPRING, brake shoe	N/A 63 to 72 — FL, FLH
	47	41837-58	SPRING, brake shoe	58 to 62 — FL, FLH
	48	41837-62	SPRING, brake shoe	N/A 63 to 72 — FL, FLH
	49	41841-31	RIVET, brake lining (18)	63 to 72 — FL, FLH
	50	42000-63	REAR BRAKE HOSE	63 to 72 — FL, FLH
	51	43520-35A	SCREW, wheel mounting socket, stc. — 3/8-20	48 to 72 — FL, FLH
	52	43531-35	SCREW, wheel mounting socket — 7/16-20 Q.S.	N/A 58 to 72 — FL, FLH

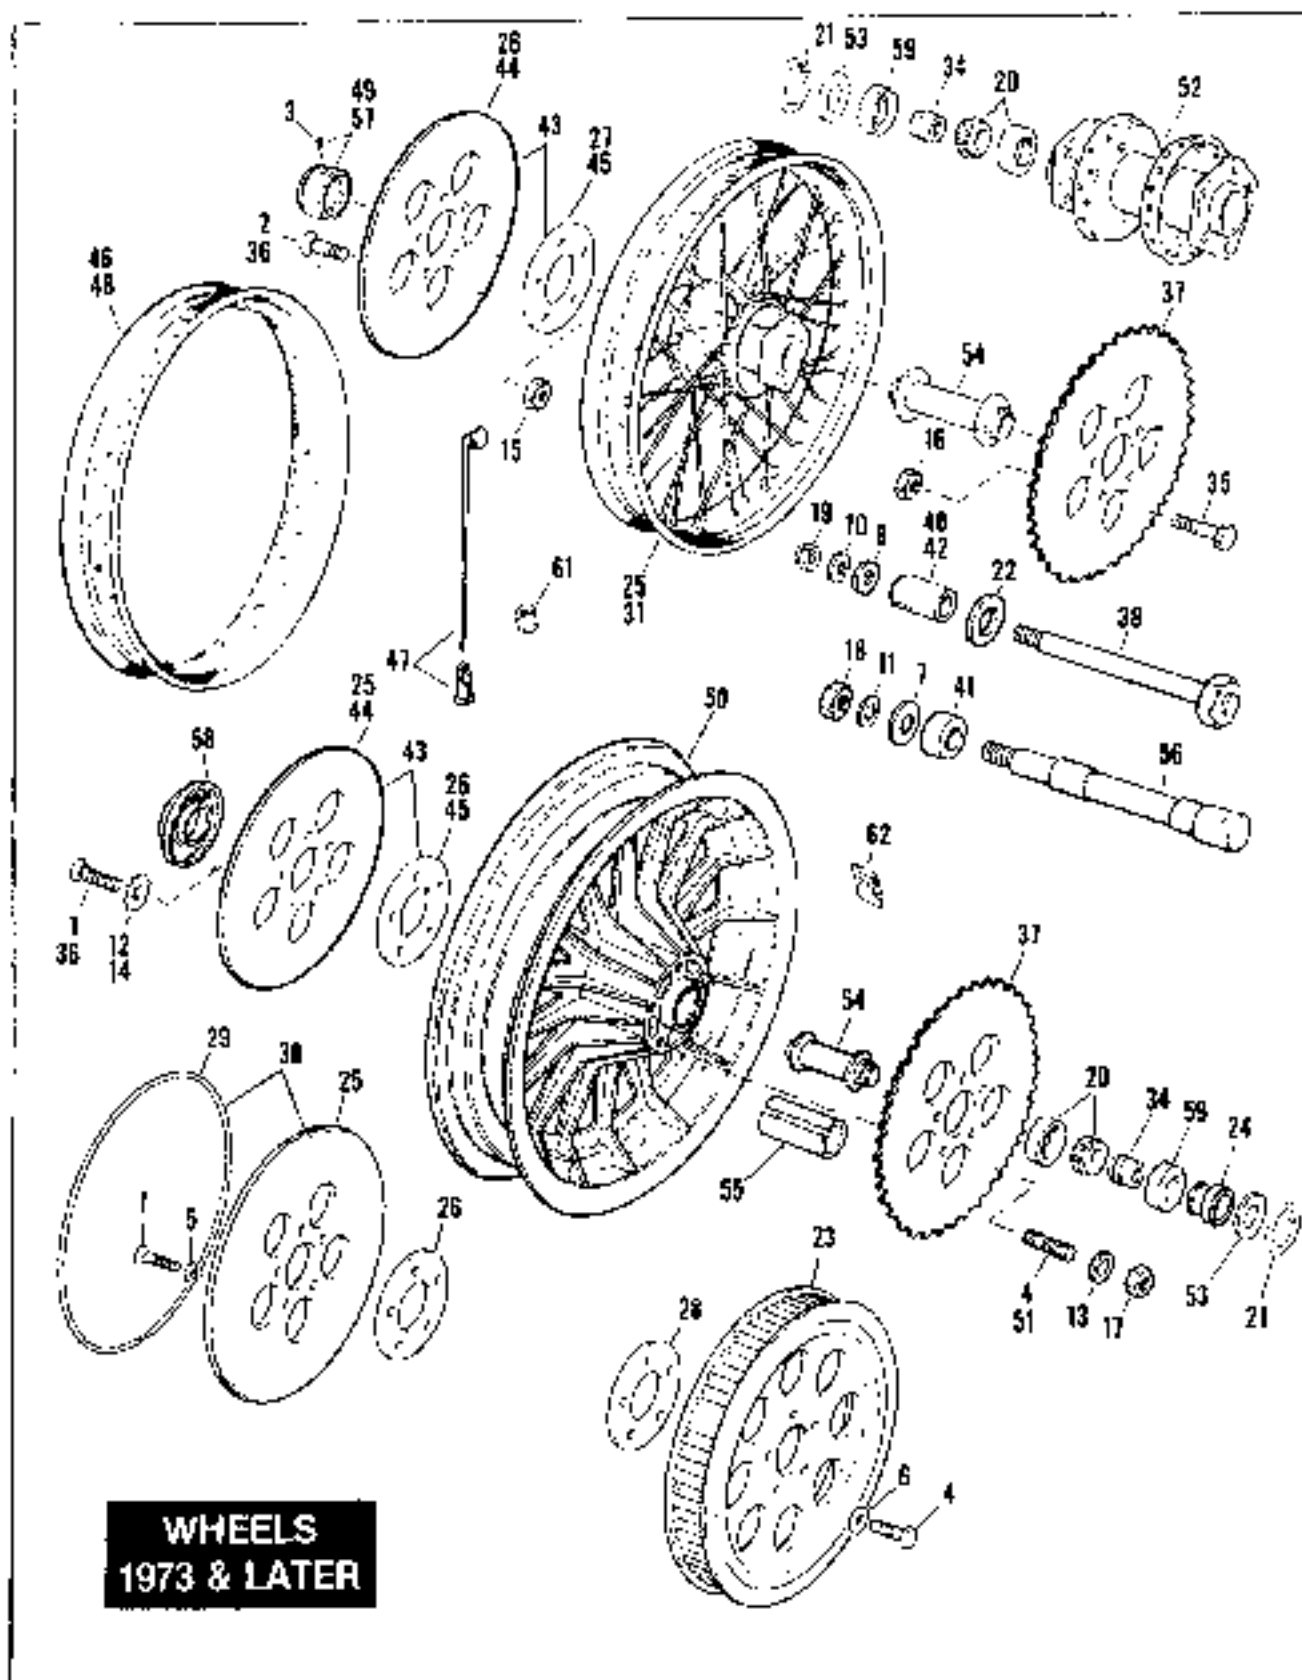


RETAIL PRICE	INDEX NO	PART NO.	NAME	USED ON
	1	1504	SCREW, 3/8-16 x 1 1/2 lock flat washer & washbar patch (yes, only 1/2)	81 to * — FLH-80 Classic
	2	1505	SCREW, 3/8-16 x 1 1/2 lock flat washer & lock only (5)	81 to FLH-80
	3	3234W	ELL SCREW, 1/4-20 x 5/16 lock (2)	79 to * — FL, FLH, FLH-80, Classic
	4	3771	BOLT, 7/16-14 x 1 1/2 hex. nut (2)	82 — Classic; 83 to * — FLH-80
	5	6007	LOCKWASHER, 25/64 dia. extra (5) (only 1/5)	82 to * — FLH-80, Classic
	6	6516-W	WASHER, 7/16 x 1 1/8 x 1/8 (5)	82 — Classic; 83 to * — FLH-80
	7	6590-W	WASHER, 1/2 x 1 1/8 x 3/32	83 to * — FL, FLH, FLH-80, Classic
	8	6653	WASHER, 5/8 x 1 1/2 x 3/32	83 to Early 78 — FL, FLH, FLH-80
		6655	WASHER, 5/8 x 1 1/2 x 1/8	late 79 to * — FL, FLH, FLH-80, Classic
	10	7022	LOCKWASHER, 5/8	83 to * — FL, FLH, FLH-80, Classic
	11	7068	LOCKWASHER, 1/2	83 to * — FL, FLH, FLH-80, Classic
	12	7130W	LOCKWASHER, 3/8 (5)	83 to * — FL, FLH, FLH-80, Classic
	13	7136	LOCKWASHER, 7/16 internal (only 1/5)	83 to 87 — FL, FLH, FLH-80; 79 to 81 — Classic
	14	7145W	LOCKWASHER, 3/8 external (only 1/5)	79 to 82 — Classic
	15	7770	LOCKWUT, 3/8-15 x 7/16 x 9/16 hex. (5)	83 to * — FL, FLH, FLH-80, Classic
	16	7825	LOCKWUT, 7/16-20 x 7/16 x 5/8 hex. (5)	83 to * — FL, FLH, FLH-80, Classic
	17	7837W	NUT, 7/16-20 x 3/8 x 1 1/16 hex. (5)	83 to 87 — FL, FLH, FLH-80, Classic
	18	7845	NUT, 1/2-20 x 7/16 x 3/4 hex.	83 to * — FL, FLH, FLH-80, Classic
	19	7888	NUT, 5/8-18 x 7/16 x 1 1/16 hex.	83 to * — FL, FLH, FLH-80, Classic
	20	8052	ROLLER BEARING (2)	83 to * — FL, FLH, FLH-80, Classic
	21	11024	RETAINING RING (2)	83 to * — FL, FLH, FLH-80, Classic
	22	30080-86	WASHER	79 — FL, FLH
	23	43217-79	SPROCKET, belt drive (black)	82 — Classic; 83 to * — FLH-80
	24	4090E-82A	SPACER, rear cast wheel (2)	late 84 to * — FLH-80
	25	40908-81	WHEEL ASSEMBLY, 16" (chrome)	79 to 81 — FL, FLH, FLH-80, Classic
	26	40909-81A	DISC, brake includes index pos. 5 & 30	81 to * — FLH-80, Classic
	27	40911-81	PLATE, brake disc rear only	81 to * — FLH-80, Classic
	28	40912-81	SPACER, bearing — inner	82 — Classic; 83 to * — FLH-80
	29	40934-82	SPF NG, brake disc	82 to * — FLH-80, Classic
	30	40939-79A	DISC ASSEMBLY, rear — to stud item 29	82 to * — FLH-80, Classic
	31	40981-77	WHEEL ASSEMBLY, 16" (black)	79 to 78 — FL, FLH, FLH-80
	32	41196-73	SPACER, bearing — outer (2 front; 2 rear)	79 to Early 83 — FL, FLH, FLH-80, Classic
	33	41198-83	SPACER, bearing — outer (2 front; 2 rear)	late 83 to * — FLH-80
	34	41197-73	BOLT, rear sprocket (5)	79 to 82 — FL, FLH, FLH-80, Classic
	35	41198-73	BOLT, 3/8-16 x 1 1/8 hex. nut (front only 80 & later) (5)	79 to * — FL, FLH, FLH-80, Classic
	36	41470-72A	SPROCKET, rear wheel (shot blast and chrome)	83 to 82 — FL, FLH, FLH-80; 79 to 81 — Classic
	37	41552-72	AXLE, rear wheel	83 to 82 — FL, FLH, FLH-80; 79 to 81 — Classic
		41580-75	AXLE, rear wheel	82 — Classic; 83 to * — FLH-80
	40	41592-79	SPACER, rear axle	82 — Classic; 83 to * — FLH-80
	41	41584-73	SPACER, front axle — left	79 to * — FL, FLH, FLH-80, Classic
	42	41595-73	SPACER, rear axle — left	79 to 82 — FL, FLH, FLH-80; 79 to 81 — Classic
	43	41606-72B	DISC, brake — with plate	79 to Early 78 — FL, FLH, FLH-80
	44	41610-79	DISC, brake (front only 81 & later)	late 78 to * — FL, FLH, FLH-80, Classic
	45	41614-76	PLATE, brake disc (front only 81 & later)	late 78 to * — FL, FLH, FLH-80, Classic
	46	43006-406	RIM, 16" (black)	79 to 78 — FL, FLH, FLH-80
	47	43032-403	SPOKE AND WHEEL, 16" rim — metal (40)	83 to 81 — FL, FLH, FLH-80, Classic
	48	43085-81	RIM, 16" (chrome)	83 to 81 — FL, FLH, FLH-80, Classic
	49	43304-73	AXLE CAP, front wheel — 2 diam. (chrome)	79 to 78 — FL, FLH, FLH-80
	50	43485-77A	WHEEL ASSEMBLY, cast aluminum — with bearings & seals (black finish)	79 to * — FL, FLH, FLH-80, Classic

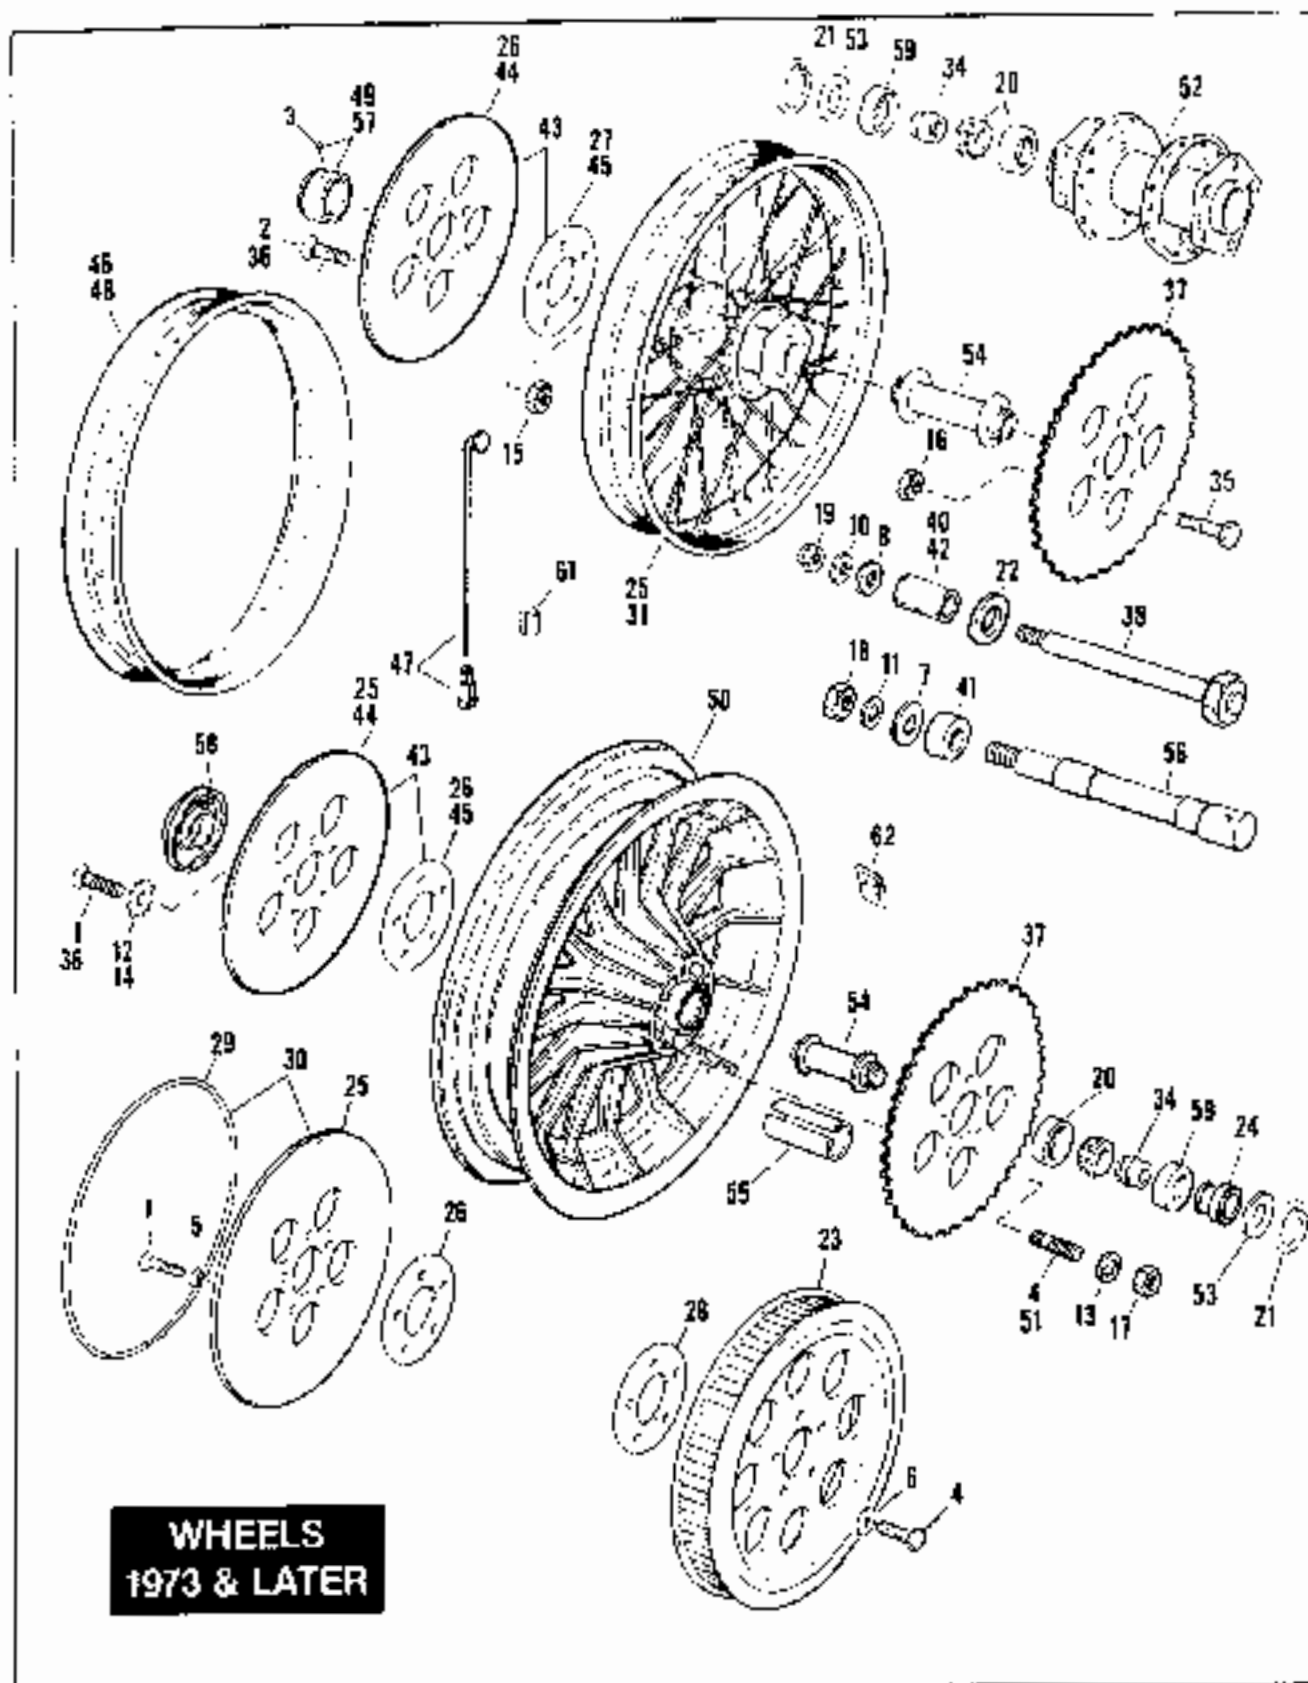


**WHEELS
1973 & LATER**

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
		13495--75	WHEEL ASSEMBLY, cast aluminum — with orange & yellow wheels	73 to 75 — FL, FLH, FLH-80, Classic Late 84 to * — FLH-90
		13496--81	WHEEL ASSEMBLY, cast — with black	73 to 82 — FL, FLH, FLH-80, 73 to 81 — Classic
51		43932--73	STUD (S)	73 to late 81 — FL, FLH, FLH-80, Classic
1		43940--73A	WHEEL-HUB, complete	73 to * — FL, FLH, FLH-80, Classic
55		43959--71	AXIAL (1/2" dia.) (stud)	73 to * — FL, FLH, FLH-80, Classic
75		43961--79	SPACER, between bearings (1 1/2" dia.) — 4.42 (orange)	73 to * — FL, FLH, FLH-80, Classic
		43962--78	SPACER, between bearings (1 1/2" dia.) — 4.44 (yellow)	73 to * — FL, FLH, FLH-80, Classic
		43963--72	SPACER, between bearings (1 1/2" dia.) — 4.448 (white)	73 to * — FLH, FLH-80, Classic
25		43965--82	SLIPPER, rear cast wheel	late 84 to * — FLH-80
15		43969--83	TRAIL AXLE	81 to * — FL — 80, Classic
		43975--73	TRAIL AXLE	73 to 80 — FL — LH, FLH-80, Classic
51		43980--86	AXLE CAP, front (cast wheel with oil groove) (2)	78 to * — FL, FLH, FLH-80, Classic
55		44441--75	HUBCAP, front cast wheel	73 to early 79 — FL, FLH, FLH-80, Classic
		44441--73	HUBCAP, front cast wheel — 4.5 (black)	late 78 & 80 — FL, FLH, FLH-80, Classic
		44442--81	HUBCAP, 4-7, 10" diam.	81 to * — FLH-80, Classic
55		47519--72	Oil SEAL, cast wheel (2)	73 to 75 — FL, FLH, FLH-80, Classic
		47519--83A	Oil SEAL, cast wheel (cast wheel — 80 & later) (2)	73 to * — FL, FLH, FLH-80, Classic
51		95575--41	WHEEL WEIGHT, 1.2 oz. — 0.275 (1/2")	73 to * — FL, FLH, FLH-80, Classic
		95581--47	WHEEL WEIGHT, 3.4 oz. — 0.275 (1/2")	73 to * — FL, FLH, FLH-80, Classic
		95582--47	WHEEL WEIGHT, 1.0 oz. — 0.275 (1/2")	73 to * — FL, FLH, FLH-80, Classic
62		95587--75	WHEEL WEIGHT, 1.2 oz. (cast aluminum wheel)	73 to 78 — FL, FLH, FLH-80
		95588--75	WHEEL WEIGHT, 1.0 oz. (cast aluminum wheel)	73 to 78 — FL, FLH, FLH-80
		95590--77	WHEEL WEIGHT, 1.2 oz. (cast aluminum wheel) (black)	73 to * — FL, FLH, FLH-80, Classic
		95591--77	WHEEL WEIGHT, 1.0 oz. (cast aluminum wheel) (black)	73 to * — FL, FLH, FLH-80, Classic
		95592--79	WHEEL WEIGHT, 1.2 oz. (cast aluminum wheel)	81 & 81 — FL, FLH, FLH-80, Classic
		95593--75	WHEEL WEIGHT, 1.0 oz. (cast wheel) (gold)	80 & 81 — FL, FLH, FLH-80, Classic


WHEELS **1972 & EARLIER**

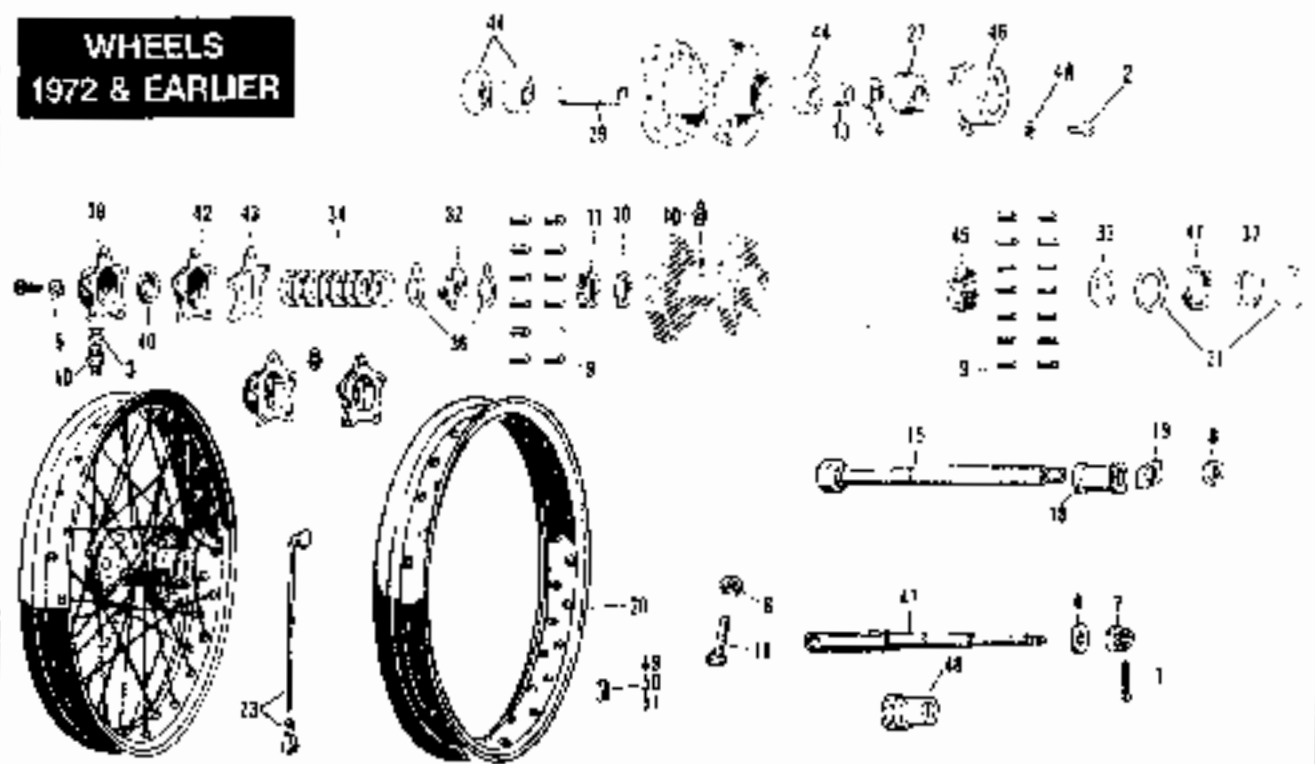


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	534	COTTER PIN 3/32 x 1-0	41 to 72 — FL, FLH
	2	7550	SCREW, 1/4-10-32 x 3-8 (machine and 70-72)	41 to 72 to 72 — FL, FLH
	3	5300	WASHER, 5/16 x 7/16 x 1/32	N/A 41 to 66 — FL, FLH
	4	5590HW	WASHER, 1/2 x 1-1/8 x 3/32	41 to 66 — FL, FLH
	4a	7119	LOCKWASHER, No. 10 (intermediate 2)	Late 70 to 72 — FL, FLH
	5	7200	LOCKWASHER, 1-4 (external bolt 5)	41 to 66 — FL, FLH
	6	7600W	NUT, 3/8-24 x 5/16 x 9/16 (lock 2)	41 to 72 — FL, FLH
	7	7734W	CASTER WHEEL, 1-2 3/4 x 9/16 x 3/4 (lock)	41 to 72 — FL, FLH
	8	7813	NUT, 1/2-13 x 5/16 x 15/16 (lock)	41 to 72 — FL, FLH
	9	9220A	ROLLER (26)	41 to 66 — FL, FLH
	10	9051	GREASE FITTING (2)	41 to 66 — FL, FLH
	11	24721-30	ROLLER RETAINER	41 to 66 — FL, FLH
	13	41195-65	SPACER, wheel hub	67 to 72 — FL, FLH
	14	41210-55	WHEEL SEAL, wheel bearing	67 to 72 — FL, FLH
	15	41552-67	HEAR AXLE	67 to 72 — FL, FLH
	16	41576-66	BOLT, axle adjuster (2)	41 to 72 — FL, FLH
	18	41585-67	SPACER, rear axle	N/A 67 to 72 — FL, FLH
	19	41583-62	LOCKWASHER, rear axle (1)	N/A 41 to 72 — FL, FLH
	20	43006-40A	RIM, 16" (black)	N/A 41 to 72 — FL, FLH
		43005-61	RIM, front and rear — 16" (chrome)	41 to 72 — FL, FLH
	23	43032-40B	SHOCK AND NIPPLE, 16" rear — (chrome) (40)	41 to 72 — FL, FLH
	27	43042-67	LOCKNUT, wheel bearing (L.H. tire side)	67 to 72 — FL, FLH
	29	43049-67	SPACER, wheel bearing	67 to 72 — FL, FLH
	30	43052-39	THRUST WASHER, inner	N/A 41 to 66 — FL, FLH
	31	43054-35	LOCK RING, thrust washer (2)	N/A 41 to 66 — FL, FLH
	32	43056-35	SCREW, thrust bearing	N/A 41 to 66 — FL, FLH
	33	43058-39	THRUST WASHER, roller bearing — brake side	N/A 41 to 66 — FL, FLH
	34	43060-35	ADJUSTING SHIM — 0.002 thick	41 to 66 — FL, FLH
	35	43062-35	THRUST WASHER, thick (2 per hub)	41 to 66 — FL, FLH
	37	43064-35	RETAINER, brake side (cork)	N/A 41 to 66 — FL, FLH
	38	43066-35A	COVER, outer thrust bearing	N/A 41 to 66 — FL, FLH
	40	43070-35	WASHER (cork)	41 to 66 — FL, FLH
	41	43071-35	WASHER — brake side (cork)	N/A 41 to 66 — FL, FLH
	42	43074-35	THRUST WASHER, wheel hub	67 to 66 — FL, FLH
	43	43076-35	GASKET, inner thrust bearing cover	N/A 41 to 66 — FL, FLH
	44	43077-57	BEARING, wheel hub and brake cover (2 front 2 rear)	57 to 72 — FL, FLH
	45	43078-35	ROLLER RETAINER — brake side	41 to 66 — FL, FLH
	46	43092-70	RETAINER, wheel bearing lock nut	41 to 72 to 72 — FL, FLH
	47	43075-48	FRONT AXLE	N/A 49 to 56 — FL, FLH
		43075-67	FRONT AXLE	N/A 67 to 71 — FL, FLH
	48	43085-72	SPACER, front axle — left	N/A 72 — FL, FLH
	49	95578-41	WHEEL WEIGHT 1/2 oz. — 0.275 I.D.	41 to 72 — FL, FLH
	50	95581-47	WHEEL WEIGHT 3/4 oz. — 0.275 I.D.	41 to 72 — FL, FLH
	51	95582-47	WHEEL WEIGHT 1 oz. — 0.275 I.D.	41 to 72 — FL, FLH

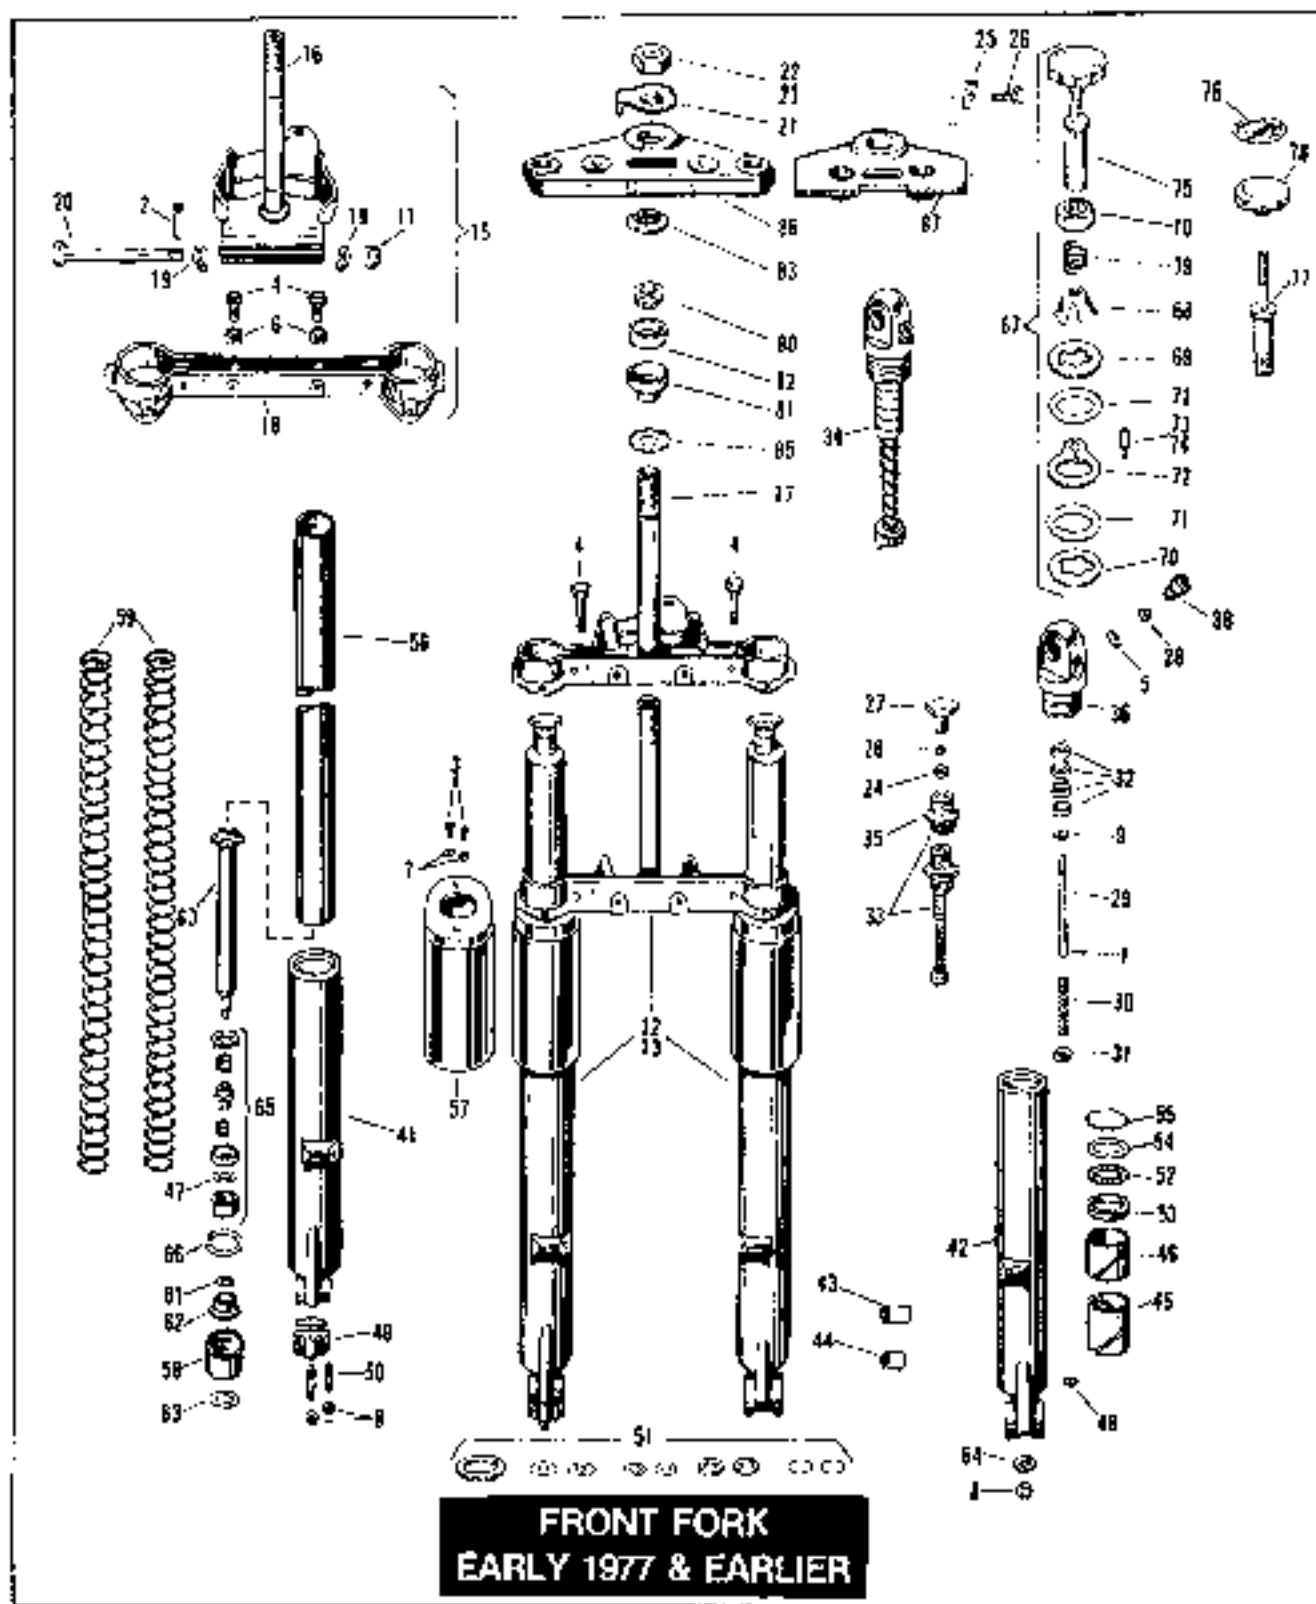


RETAIL PRICE	INDEX NO.	PART NO	NAME	USED ON
	1	545	CUTTER PLATE 1 1/2" x 3/4"	49 to Early 77 — FL, FLH
	2	545	CUTTER PLATE 1 1/2" x 1 1/4" — adjustable fork	59 to Early 77 — FL, FLH
	3	2417	SCREW 1/4" x 20 x 5/8 (used 14)	19 to Early 77 — FL, FLH
	4	4729	BOLT 1/2" in 20 x 1 1/4 hex (4)	55 to Early 77 — FL, FLH
	5	6549	WASHER, 5/16 x 3/4 x 1/2 — adjustable fork (2)	50 to Early 77 — FL, FLH
	6	7009	LOCKWASHER 1/2" — adj. fork (2)	72 to Early 77 — FL, FLH
	7	7124	FORK WASHER 1/2" — adjust. fork — adj. fork (2)	72 to Early 77 — FL, FLH
	8	7725	BULKHEAD 5/16 2 1/4 x 1 1/2 x 1 1/2 hex	49 to Early 77 — FL, FLH
	9	7744	NUT 5/16 2 1/4 x 3/16 x 1/2 (2)	49 to Early 77 — FL, FLH
	10	7752W	NUT 5/16 2 1/4 x 3/16 x 1/2 (2) — adjustable fork	60 to Early 77 — FL, FLH
	11	7947W	WASHER ADJ. 5/16-18 x 1 1/2 x 1 1/2 hex	19 to Early 77 — FL, FLH
	12	45496-72A	FRONT FORK ASSEMBLY	72 to Early 77 — FL, FLH
	13	45529-72B	FRONT FORK ASSEMBLY — adjustable	72 to Early 77 — FL, FLH
		45605-73	FRONT FORK CONVERSION KIT — non adjustable to adjustable for orders Consists of besides items 15, 25, 26, 34 & 87 2651W SCREW headlamp, adapting ring No 10-24 x 1 1/2 sec. clamping Phillips rd. hd. (5) 50535-00 COVER, headlight clamp (polished) 57642-40 ADAPTER 4 1/2" headlamp housing (chrome)	60 to Early 77 — FL, FLH
	15	45550-58	FORK STEM AND BRACKET, w/Lampage — adj. fork	60 to Early 77 — FL, FLH
	16	45557-59	FORK STEM — adjustable fork	50 to Early 77 — FL, FLH
	17	45700-50A	FORK STEM AND BRACKET	60 to Early 77 — FL, FLH
	18	45708-50B	FORK BRACKET — adjustable fork	19 to Early 77 — FL, FLH
	19	45710-58	WASHER, fork bracket (2)	58 to Early 77 — FL, FLH
	20	45711-51A	BOLT, fork bracket	50 to Early 77 — FL, FLH
	21	45717-63	LOCKWASHER, fork stem (not used with steering rampers)	60 to Early 77 — FL, FLH
	22	45719-48	NUT, fork stem	49 to Early 77 — FL, FLH
	23	45718-60	NUT, fork stem (not used with steering rampers)	60 to Early 77 — FL, FLH
	24	45720-48	OL. SEAL, tube plug (2)	49 to Early 77 — FL, FLH
	25	45752-50	WASHER, upper bracket bolt — adjustable fork (used w/ slider) (2)	50 to 72 — FL, FLH, late 76 & Early 77 — FL, FLH
	26	45753-50	BOLT, upper bracket — adjustable fork (used w/ slider) (2)	50 to 72 — FL, FLH, late 76 & Early 77 — FL, FLH
	27	45754-50	BOLT, upper bracket (2)	60 to Early 77 — FL, FLH
	28	45757-45	BREATHER VALVE (2)	50 to Early 77 — FL, FLH
	29	45765-49	STUD, ball (2)	N/A 49 to Early 77 — FL, FLH
	30	45766-49	SPRING, ball (2)	N/A 49 to Early 77 — FL, FLH
	31	45769-49	CUP, lower ball (2)	N/A 49 to Early 77 — FL, FLH
	32	45768-49	CUP, upper ball (2)	N/A 49 to Early 77 — FL, FLH
	33	45775-49	PLUG, slider tube (2)	N/A 49 to Early 77 — FL, FLH
	34	45775-50	PLUG, slider tube — adjustable fork (2)	50 to Early 77 — FL, FLH
	35	45776-49	PLUG, fork tube (2)	49 to Early 77 — FL, FLH
	36	45777-50	PLUG, fork tube — adjustable fork	N/A 50 to Early 77 — FL, FLH
	38	45778-50	FILDER SCREW, with valve — adjustable fork	N/A 50 to Early 77 — FL, FLH
	41	45800-50A	FORK SLIDER (4) — with bushings, polished	50 to 58 — FL, FLH 72 to Early 77 — FL, FLH
	42	45807-72	FORK SLIDER, left — with bushings, polished	N/A 72 to Early 77 — FL, FLH

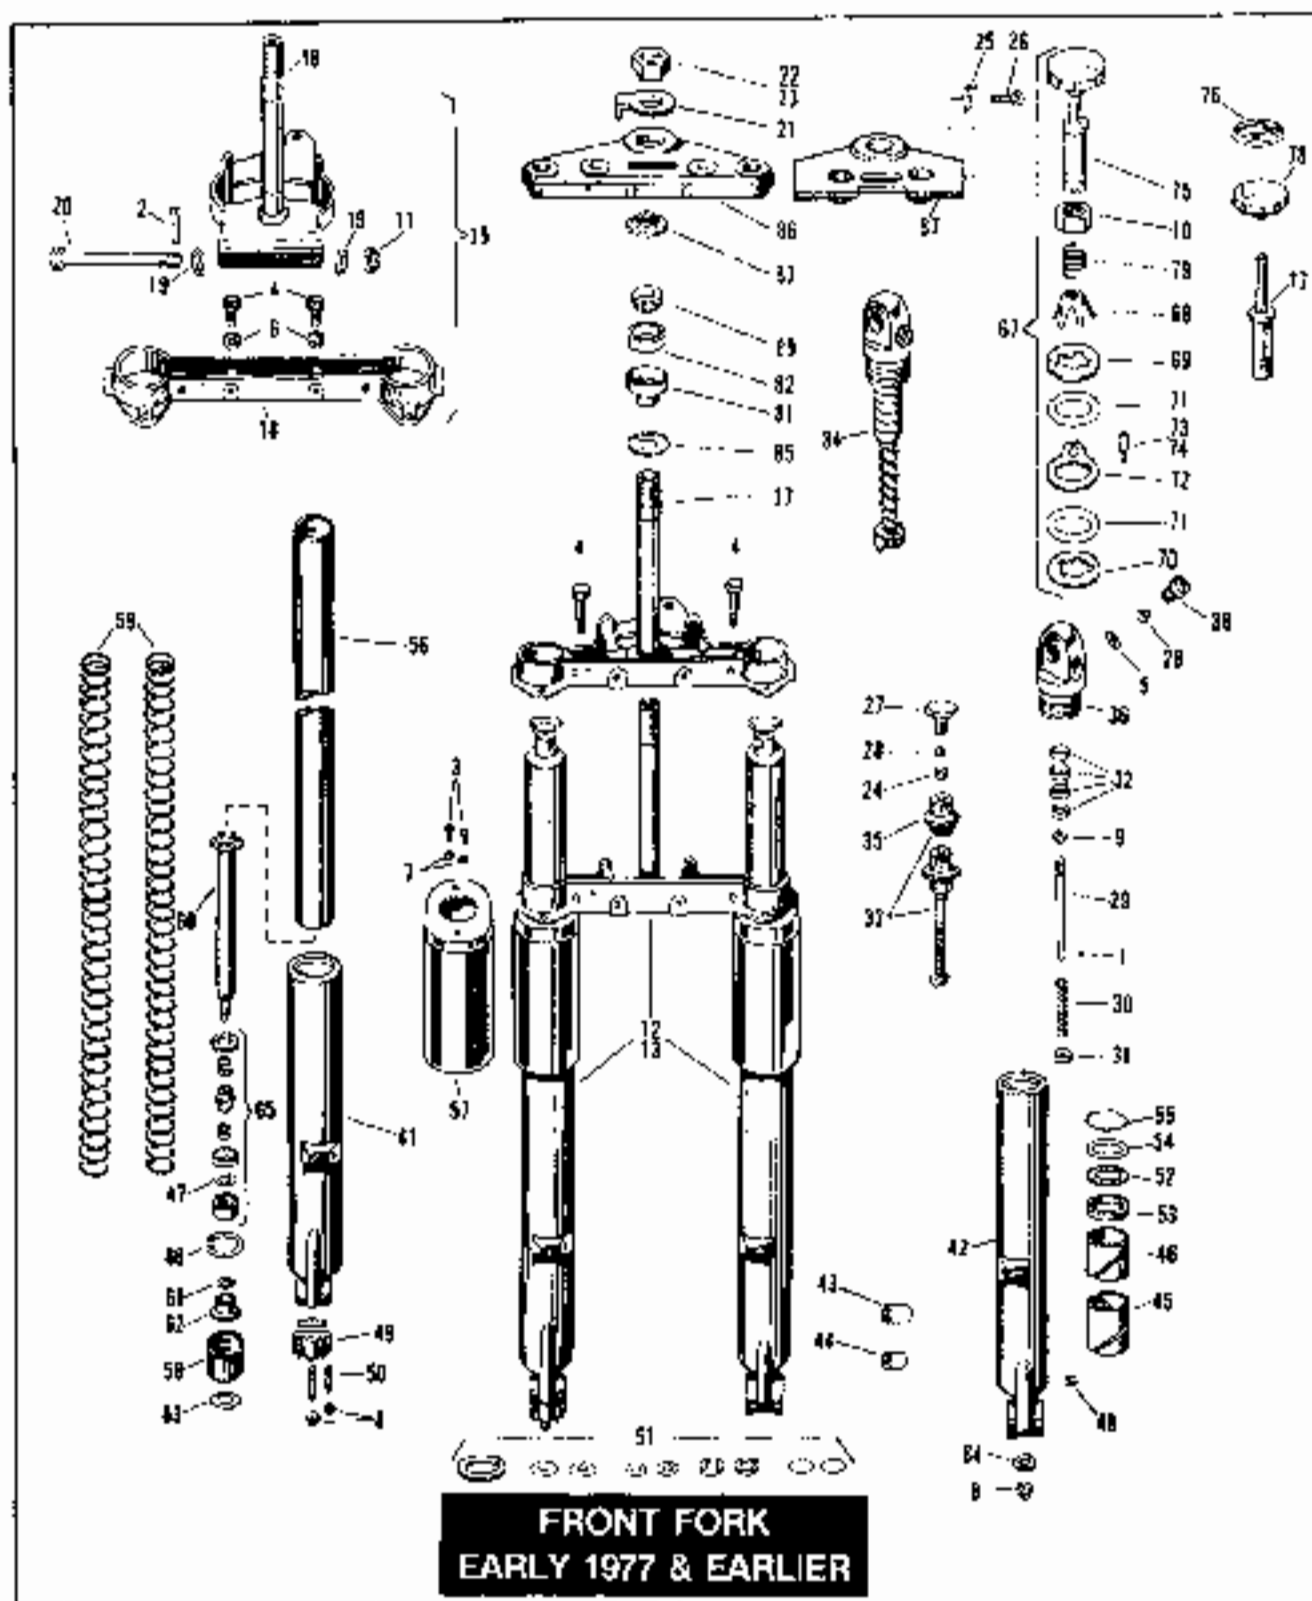

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	13	45021-75	UPPER BUSH NG fork slider — long (disc brake mounting)	72 to Early 77 — FL, FLH
	14	45022-75	LOWER BUSH NG fork slider — short (disc brake mounting)	72 to Early 77 — FL, FLH
45	45023-49	LOWER BUSHING, lock & cap (2)	49 to Early 77 — FL, FLH	
46	45024-49	UPPER BUSHING, fork slider (2)	49 to Early 77 — FL, FLH	
47	45026-49	SHIM, slider bushing (3/16" eq.)	N/A 49 to Early 77 — FL, FLH	
48	45030-48	CHAIN PLUG (2)	49 to Early 77 — FL, FLH	
49	45036-48	BOTTOM CAM, right slider	49 to Early 77 — FL, FLH	
50	45040-48	STEEL, right slider bottom cap (2)	49 to Early 77 — FL, FLH	
51	45049-49	SET OF OIL SEALS AND GASKETS	49 to Early 77 — FL, FLH	
52	45050-48	PELL WASHER, upper oil seal (2)	49 to Early 77 — FL, FLH	
53	45052-48A	UPPER OIL SEAL (2)	49 to Early 77 — FL, FLH	
54	45054-48	WASHER, retaining ring (2)	49 to Early 77 — FL, FLH	
55	45056-48	RETAINING RING (2)	49 to Early 77 — FL, FLH	
56	45057-48	SLINGER TUBE (2)	49 to Early 77 — FL, FLH	
57	45061-49	COVER, slider (stainless) (2)	49 to Early 77 — FL, FLH	
58	45072-40	TAPER BUSHING, fork tube	N/A 49 to Early 77 — FL, FLH	
59	46051-49A	SET OF FORK SPRINGS	49 to Early 77 — FL, FLH	
60	46100-49	DAMPER TUBE (2)	49 to Early 77 — FL, FLH	
61	46111-48	GASKET, camper tube stud	49 to Early 77 — FL, FLH	
62	46121-49	LOWER BUSH NG, damper tube (2)	49 to Early 77 — FL, FLH	
63	46125-48	GASKET, damper tube bushing	49 to Early 77 — FL, FLH	
64	46126-48	WASHER, damper tube end (2)	49 to Early 77 — FL, FLH	
65	46161-48	VALVE KIT, damper tube (2) fits damper tubes with square cone — no radius on valve seat	49 to Early 77 — FL, FLH	
66	46172-48	RETAINING RING, slider tube (lower) (2)	49 to Early 77 — FL, FLH	
67	46170-60	STEERING DAMPER, complete	60 to Early 77 — FL, FLH	
		Consists of:		
		45718-49	ROD, fork stem	
		46711-48	SPIDER SPRING, steering damper	
		46718-48	PRESSURE DISC, steering damper	
		46720-48	PRESSURE DISC, lower — steering damper	
		46727-48	FRUITION WASHER, damper (2)	
		46730-48	ANCHOR PLATE, damper	
		46731-48	PIN, anchor plate	
		46740-60	ADJUSTING SCREW ASSEMBLY	
		45751-48	SPRING, adjusting screw	
68	46711-48	SPIDER SPRING, steering damper	49 to Early 77 — FL, FLH	
69	46718-48	PRESSURE DISC, steering damper	49 to Early 77 — FL, FLH	
70	46720-48	PRESSURE DISC, lower, damper	49 to Early 77 — FL, FLH	
71	46727-48	FRUITION WASHER, damper (2)	49 to Early 77 — FL, FLH	
72	46730-48	ANCHOR PLATE, damper	49 to Early 77 — FL, FLH	
73	46731-48	PIN, anchor plate	49 to Early 77 — FL, FLH	
74	46732-48	PIN, anchor plate	N/A 49 to Early 77 — FL, FLH	
75	46740-60	ADJUSTING SCREW ASSEMBLY	60 to Early 77 — FL, FLH	
76	46741-71	KNOB, steering damper knob	60 to Early 77 — FL, FLH	
77	46743-60	ADJUSTING SCREW, knob	60 to Early 77 — FL, FLH	
78	46746-60	KNOB, camper	60 to Early 77 — FL, FLH	
79	46751-48	SPRING, adjusting screw	49 to Early 77 — FL, FLH	
80	48300-60	HEAD BEARING (2)	60 to Early 77 — FL, FLH	
81	48311-60	HEAD CUP (2)	60 to Early 77 — FL, FLH	
82	48315-60	WASHER, (Timken) (2)	60 to Early 77 — FL, FLH	
83	48330-48A	CONE SEAT, upper — with guard	49 to Early 77 — FL, FLH	
84	48365-48A	LIST SHIELD, head bearing — lower	49 to Early 77 — FL, FLH	
85	56121-73A	FOUR BRACKET, handlebar (adjustable)	73 to Early 77 — FL, FLH	
86	56126-73A	FOUR BRACKET, handlebar (adjustable)	73 to Early 77 — FL, FLH	

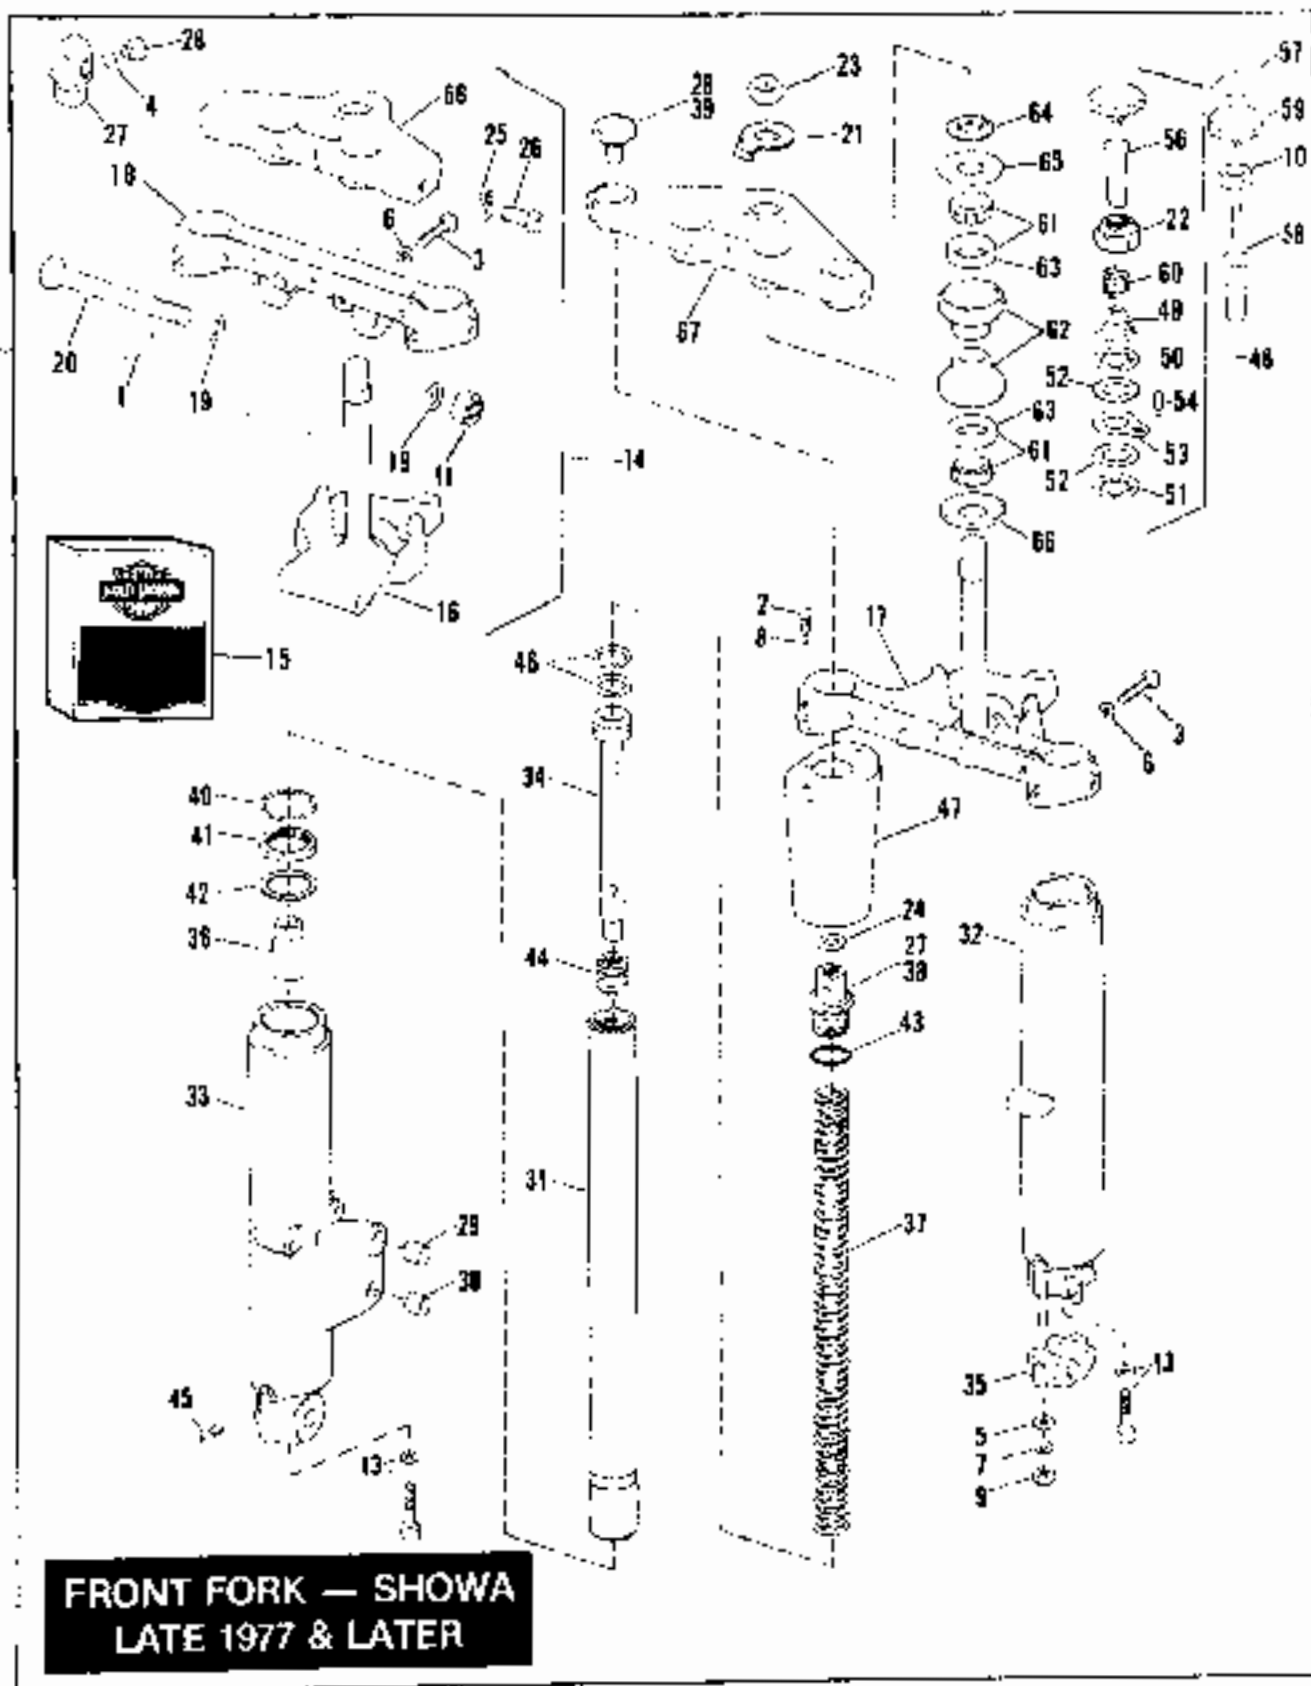


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	559	COTTER PIN 1/8 x 1-1/4 — adjustable fork	Late 77 to * — FL, FLH, FLH-80, Classic
	2	7417	SCREW, 1/4-28 x 5/8 Poz-driv (Type 11-15)	Late 77 to * — FL, FLH, FLH-80, Classic
	3	4725	BOLT 7/16-20 x 1 1/4 hex (Type 2)	Late 77 to * — FL, FLH, FLH-80, Classic
	4	0645	WASHER, 9/16 x 3/4 x 1/2 — adjustable fork (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	5	6732	WASHER, 5/16 x 1/2 x 1/16 x 1/16 (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	6	7030	LOCKWASHER, 7/16 (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	7	7041	LOCKWASHER, 5/16 (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	8	7124	LOCKWASHER, 1/4 internal (Type 11-15)	Late 77 to * — FL, FLH, FLH-80, Classic
	9	7742W	NUT, 5/16-18 x 1/4 x 1/2 hex (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	10	7765W	NUT, 5/16-18 x 3/16 x 5/16 hex — adjustable fork	Late 77 to * — FL, FLH, FLH-80, Classic
	11	7947W	CASTLE NUT 5/8 18 x 1/2 x 15/16 hex	Late 77 to * — FL, FLH, FLH-80, Classic
	12	45405-75A	SCREW AND WASHER, damper tube (2)	Late 77 to * — FL, FLH, FLH-80, Classic
		45498-77A	FRONT FORK ASSEMBLY	Late 77 to * — FL, FLH, FLH-80, Classic
		45509-72B	FRONT FORK ASSEMBLY — adjustable	Late 77 to * — FL, FLH, FLH-80, Classic
	14	45500-80	FORK STEM AND BRACKET, w/bearings — adjustable	Late 77 to * — FL, FLH, FLH-80, Classic
	15	45595-77	FRONT FORK COVERS ON KIT — non-adjustable to adjustable for sidecar	Late 77 to 79 — FL, FLH, FLH-80, Classic
			Consists of besides items 4, 14, 25-28, 43 & 68	
		2816W	SCREW, headlamp adapter ring No. 10-24 x 1/2 self tapping Phillips (2) (16)	
		67842-80	ADAPTER RING, headlamp housing (chrome)	
			NOTE: For two piece handlebars order 45595-80 COVER	
	16	45697-80	FORK STEM — adjustable fork	Late 77 to * — FL, FLH, FLH-80, Classic
	17	45700-80A	FORK STEM AND BRACKET	Late 77 to * — FL, FLH, FLH-80, Classic
	18	45708-50B	FORK BRACKET — adjustable fork	Late 77 to * — FL, FLH, FLH-80, Classic
	19	45710-50	WASHER, adjustable fork bracket bolt (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	20	45711-51A	BOLT, adjustable fork bracket	Late 77 to * — FL, FLH, FLH-80, Classic
	21	45717-53	LOCKWASHER, fork stem nut (not used with steering damper)	Late 77 to * — FL, FLH, FLH-80, Classic
	22	45718-46	NUT, fork stem	Late 77 to * — FL, FLH, FLH-80, Classic
	23	45718-60	NUT, fork stem (not used with steering damper)	Late 77 to * — FL, FLH, FLH-80, Classic
	24	45733-46	OIL SEAL, fork tube plug (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	25	45752-50	LOCK PLATE, upper bracket bolt — adjustable fork (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	26	45753-50	BOLT, upper bracket — adjustable fork (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	27	45777-77	PLUG, fork tube — adjustable fork	Late 77 to * — FL, FLH, FLH-80, Classic
	28	45778-77	FLIFR SCREW, fork plug — adjustable fork	Late 77 to * — FL, FLH, FLH-80, Classic
		45815-84	FORK SLIDER, right — complete	Late 77 to * — FL, FLH, FLH-80, Classic
		45816-84	FORK SLIDER, left — complete	Late 77 to * — FL, FLH, FLH-80, Classic
	29	45821-75	BUSHING, brake caliper — upper	Late 77 to * — FL, FLH, FLH-80, Classic
	30	45822-75	BUSHING, brake caliper — lower	Late 77 to * — FL, FLH, FLH-80, Classic
	31	45825-77A	SLIDER TUBE (2)	Late 77 to * — FL, FLH, FLH-80, Classic

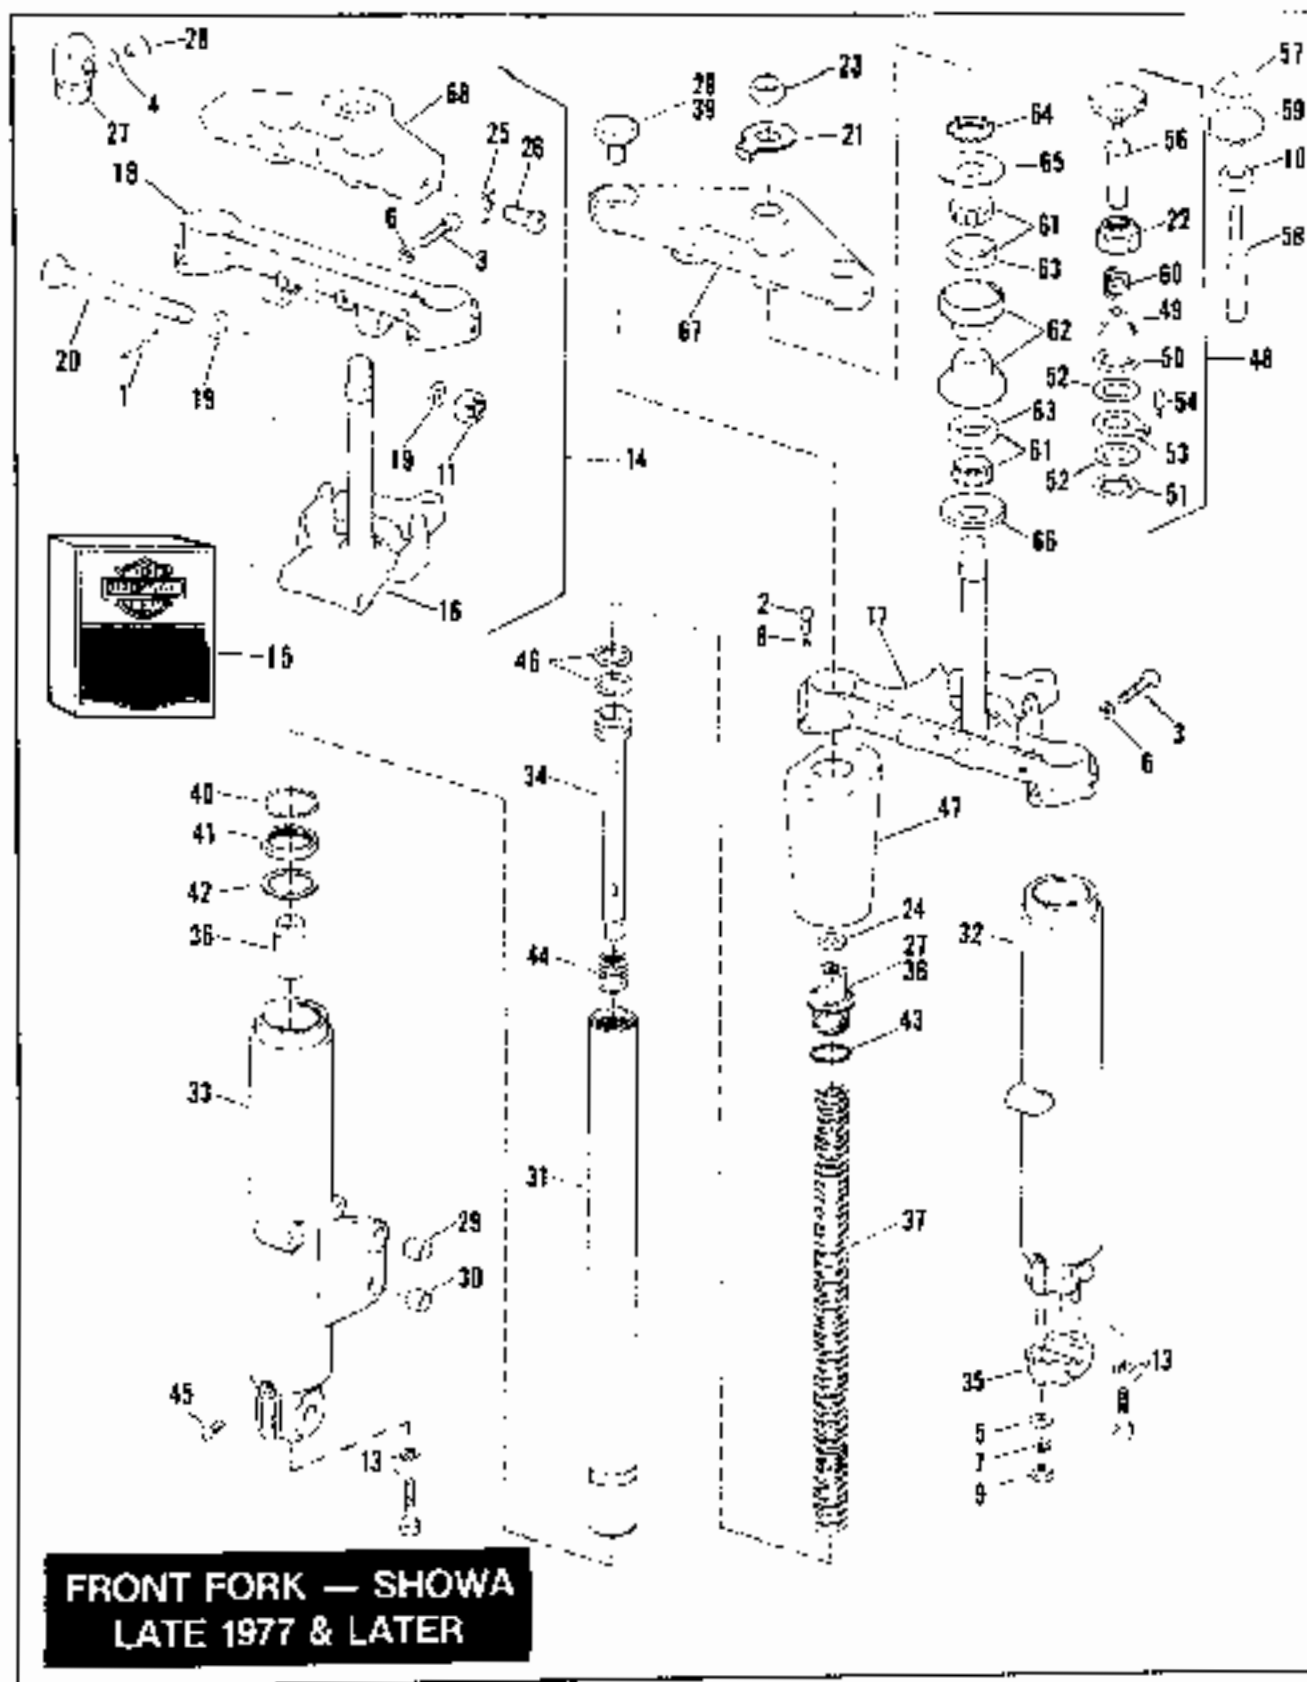




RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	32	45828-77A	FORK SLIDER, right — with bushings (pouched)	Late 77 to * — FL, FLH, FLH-80, Classic
	33	45829-77	FORK SLIDER, left — with bushings (polished)	Late 77 to * — FL, FLH, FLH-80, Classic
	34	45831-77	DAMPER TUBE (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	35	45832-77A	AXLE CAP, right side	Late 77 to * — FL, FLH, FLH-80, Classic
	36	45834-77	LOWER STOP (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	37	45837-77	SPRING (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	38	45838-77	PLUG, fork tube (non-adjustable) (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	39	45839-77	CAP, upper bracket (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	40	45842-77	RETAINING RING, oil seal (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	41	45843-77	OIL SEAL, slider (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	42	45844-77	WASHER, slider (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	43	45845-77	O-RING, slider inner plug (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	44	45855-77	SPRING, slider tube (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	45	45858-77	DRAIN SCREW, slider (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	46	45859-77	RING, damper tube (4)	Late 77 to * — FL, FLH, FLH-80, Classic
	47	45864-49	COVER, slider (stainless)	Late 77 to * — FL, FLH, FLH-80, Classic
	48	4E700-60	STEERING DAMPER, complete Consists of: 45718-48 NUT, fork stem 48715-48 SPIDER SPRING, steering damper 4E710-48 PRESSURE DISC, steering damper 45720-48 PRESSURE DISC, lower — steering damper 46727-48 FRICTION WASHER, damper (2) 46730-48 ANCHOR PLATE, damper 46731-48 PIN, anchor plate 46740-60 ADJUSTING SCREW ASSEMBLY 4E751-49 SPRING, adjusting screw	Late 77 to * — FL, FLH, FLH-80, Classic
	49	45715-48	SPIDER SPRING, steering damper	Late 77 to * — FL, FLH, FLH-80, Classic
	50	46718-48	PRESSURE DISC, steering damper	Late 77 to * — FL, FLH, FLH-80, Classic
	51	46720-48	PRESSURE DISC, lower, damper	Late 77 to * — FL, FLH, FLH-80, Classic
	52	46727-48	FRICTION WASHER, damper (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	53	46730-48	ANCHOR PLATE, damper	Late 77 to * — FL, FLH, FLH-80, Classic
	54	46731-48	PIN, anchor plate	Late 77 to * — FL, FLH, FLH-80, Classic
	56	46740-60	ADJUSTING SCREW ASSEMBLY	Late 77 to * — FL, FLH, FLH-80, Classic
	57	46741-71	LABEL, steering damper knob	Late 77 to * — FL, FLH, FLH-80, Classic
	58	46743-60	ADJUSTING SCREW, damper	Late 77 to * — FL, FLH, FLH-80, Classic
	59	4E746-52	KNOB, damper	Late 77 to * — FL, FLH, FLH-80, Classic
	60	46751-48	SPRING, adjusting screw	Late 77 to * — FL, FLH, FLH-80, Classic
	61	48303-60	HEAD BEARING, cup & cone (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	62	49211-60	ADAPTER CUP, bearing cup (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	63	48315-60	BEARING CUP (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	64	48330-48A	CONE SEAT, upper — with dust shield	Late 77 to 83 — FL, FLH, FLH-80
		48332-48B	CONE SEAT, upper — with dust shield	84 to * — FLH-80
	65	48361-80	DUST SHIELD, head bearing — upper	79 to * — FL, FLH, FLH-80, Classic
	66	48365-48A	DUST SHIELD, head bearing — lower	Late 77 to * — FL, FLH, FLH-80, Classic
	67	56121-73A	FORK BRACKET, upper (non-adjustable)	Late 77 to * — FL, FLH, FLH-80, Classic
	68	56129-73A	FORK BRACKET, upper (adjustable)	Late 77 to * — FL, FLH, FLH-80, Classic

FRAME AND REAR FORK

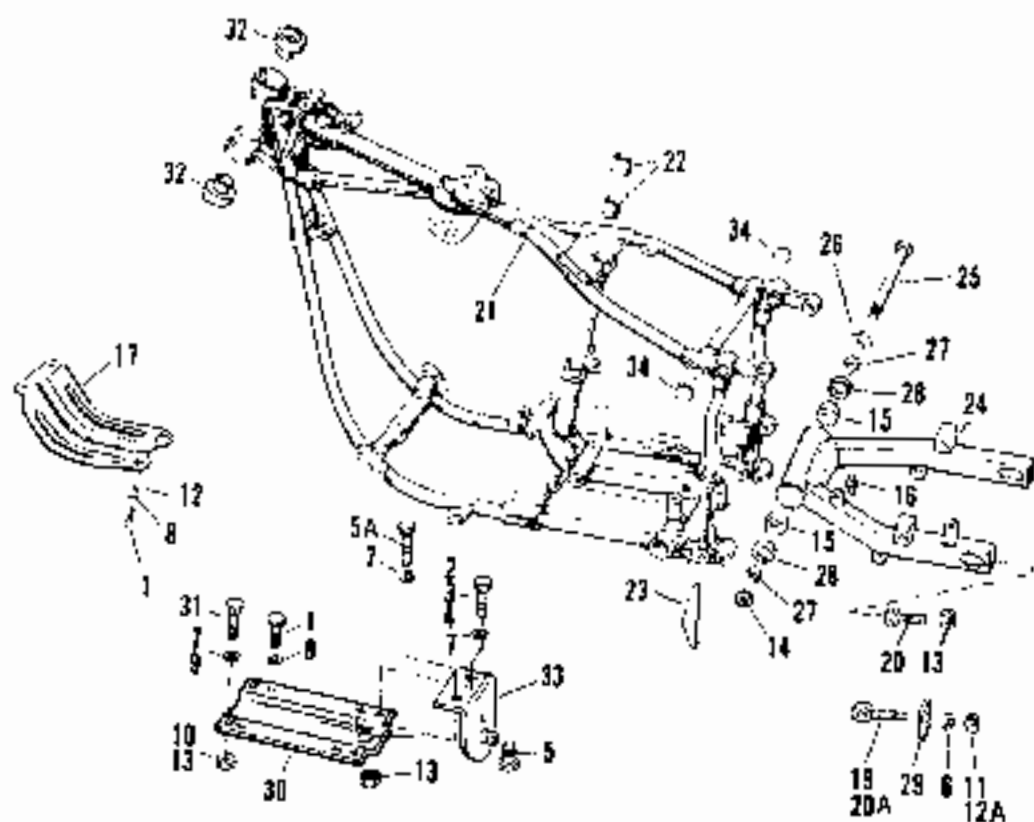


RETAIL PRICE	INDEX NO	PART NO.	NAME	USED ON
	1	3374HW	BOLT, 5/16-24 x 2 1/4 hex. hd. (4) 2 — Late 77 & Later)	41 to Early 91 — FL, FLH, FLH-80, Classic
	2	4319	BOLT, 5/8-24 x 1 hex. hd. (4) — Early 77; 2 — Late 77, 78 & Later)	77 to * — FL, FLH, FLH-80, Classic
	3	4330W	BOLT, 3/8-24 x 1-1/8 hex. hd. (2)	41 to Early 77 — FL, FLH
	4	4327W	BOLT, 2/9-24 x 1-1/4 hex. hd.	Late 82 to * — FLH-80, Classic; 78 — FL, FLH, FLH-80
	5	4362	BOLT, 3/8-24 x 1-3/8 hex. hd. (2)	41 to 84 — FL, FLH, FLH-80, Classic
	5A	4724	BOLT, 2/9-24 x 1-1/2 hex. hd.	Late 82 to * — FLH-80, Classic
	6	6324W	WASHER, 5/16 x 11/16 x 3/32 (2)	73 to Early 84 — FL, FLH, FLH-80, Classic
	7	7036	LOCKWASHER, 1/4 (4) — Early 77, Late 77 to Early 82 (3)	77 to * — FL, FLH, FLH-80, Classic
	8	7041	LOCKWASHER, 5/16 (4) 2 — Late 77 & Later)	41 to Early 81 — FL, FLH, FLH-80, Classic
	9	7130W	LOCKWASHER, 3/8 internal tooth	Late 77 to * — FL, FLH, FLH-80, Classic
	10	7643W	NUT, 3/8-16 x 7/32 x 5/16 hex. (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	11	7725	LOCKNUT, 5/16-24 x 1/4 x 1-1/2 hex. (2)	73 to Early 84 — FL, FLH, FLH-80, Classic
	12	7753	NUT, 5/16-24 x 17/64 x 1/2 hex. (4) 2 — Late 77 & later)	41 to Early 81 — FL, FLH, FLH-80, Classic
	12A	7767	FLANGE NUT (2)	Late 84 to * — FLH-80
	13	7800W	NUT, 3/8-24 x 5/16 x 9/16 hex. (2) — Early 77 & Earlier)	Late 82 to * — FLH-80, Classic; 41 to Early 77 — FL, FLH
	14	7913	NUT, 5/16-16 x 9/16 x 15/16 hex.	58 to 72 — FL, FLH
	15	8082	ROLLER BEARINGS (2)	58 to * — FL, FLH, FLH-80, Classic
	16	8951	SHIFTS PLATING, rear fork	68 to * — FL, FLH, FLH-80, Classic
	17	24450-36	CHAMKASE GUARD	41 to Early 81 — FL, FLH, FLH-80, Classic
	18	41570-77	ADJUSTER, rear axle (2)	73 to Early 84 — FL, FLH, FLH-80, Classic
	20	41576-36	BOLT, axle adjuster (2)	41 to 72 — FL, FLH
	20A	41583-84	ADJUSTER, rear axle (2)	Late 84 to * — FLH-80
	21	47015-77D	FRAME (for Police models through 84)	65 to Early 81 — FL, FLH, FLH-80, Classic
		47015-81	FRAME	Late 81 to * — FLH-80, Classic
	22	47084-58	BUSHING, seal post (2)	58 to Early 81 — FL, FLH, FLH-80, Classic
	22	47281-68	GUSSET PLATE, frame (repair part only — welded in left down loop)	66 to Early 68 — FL, FLH
	24	47446-79	REAR FORK	82 — Classic; 83 to * — FLH-80
		47501-73	REAR FORK (used with siren — Late 79 & Later)	73 to * — FL, FLH, FLH-80, Classic
		47506-78	REAR FORK	Late 78 to 82 — FL, FLH, FLH-80; 79 to 81 — Classic
	25	47510-68	FLYCT BOLT, rear fork	58 to * — FL, FLH, FLH-80, Classic
	26	47513-58	LOCKWASHER, pivot bolt	58 to * — FL, FLH, FLH-80, Classic
	27	47517-58	SPACER, pivot bearing (2)	58 to * — FL, FLH, FLH-80, Classic
	28	47519-72	SEAL, pivot bearing (2)	73 to 83 — FL, FLH, FLH-80, Classic
		47519-80A	SEAL, pivot bearing (2)	58 to 72 — FL, FLH; 84 to * — FLH-80
	29	47548-84	END COVER, rear axle (2)	Late 84 to * — FLH-80
		47564-73	END COVER, rear fork (2)	73 to Early 84 — FL, FLH, FLH-80, Classic
	30	47668-85C	TRANSMISSION MOUNTING PLATE	66 to * — FL, FLH, FLH-80, Classic
	31	47730-77	CARRIAGE BOLT, transmission mounting plate (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	32	48311-80	HEADLAMP, frame (2)	60 to * — FL, FLH, FLH-80, Classic
	33	62538-82	MOUNTING BRACKET, oil filler	Late 82 to * — FLH-80, Classic
	34	68797-89A	END FLUIG, frame (2)	80 to * — FL, FLH, FLH-80, Classic


FRONT AND REAR HIGHWAY BAR

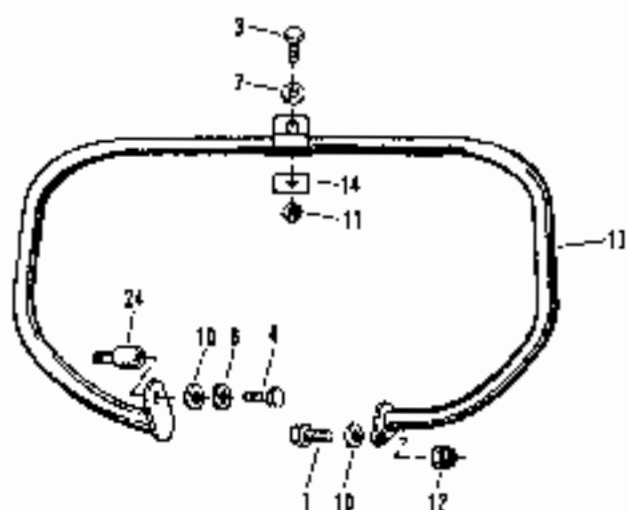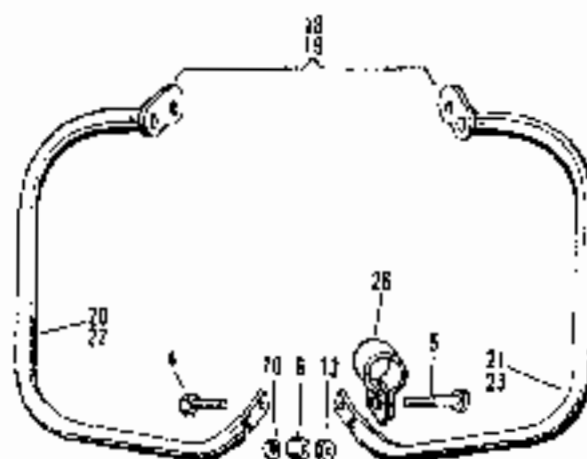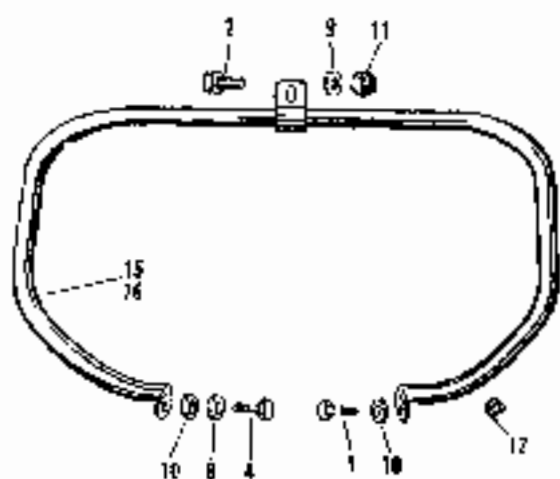

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	2851	BOLT, 3/8 x 7/8 hex. hd.	Late 79 to * — FL, FLH, FLH-80, Classic
	2	3506	BOLT, 5/16-24 x 3/4 hex. hd.	58 to * — FL, FLH, FLH-80, Classic
	3	4014W	BOLT, 5/16-24 x 1 1/4 hex. hd.	Late 79 to * — FL, FLH, FLH-80, Classic
	4	4411	BOLT, 3/8-24 x 1-3/4 hex. hd.	58 to * — FL, FLH, FLH-80, Classic
	5	4434W	BOLT, 3/8-24 x 3-1/4 hex. hd.	65 to * — FL, FLH, FLH-80, Classic
	6	55429	SHAFER, right lower mount (saddle mount)	65 to * — FL, FLH, FLH-80, Classic
	7	6336B	WASHER, 5/16 x 13/16 x 5/32 (black)	Late 79 to * — FL, FLH, FLH-80, Classic
	8	6448-6	WASHER, 13/32 x 13/16 x 3/32	Late 79 to * — FL, FLH, FLH-80, Classic
	9	6702	WASHER, 5/16 x 11/16 x 1/16	58 to * — FL, FLH, FLH-80, Classic
	10	7038	LOCKWASHER, 200 (2)	Late 54 to * — FL, FLH, FLH-80, Classic
	11	7775	LOCKNUT, 5/16-24 x 1 1/2 x 1/2 hex.	58 to * — FL, FLH, FLH-80, Classic
	12	7733	NUT, 3/8-16 x 5/16 x 9/16 hex.	Late 79 to * — FL, FLH, FLH-80, Classic
	13	7803W	NUT, 3/8-24 x 2 1/8 x 9/16 hex. (2)	58 to * — FL, FLH, FLH-80, Classic
	14	49027-79	REINFORCEMENT front highway bar (30)	Late 79 to * — FL, FLH, FLH-80, Classic
	15	49037-58B	FRONT HIGHWAY BAR KIT (black)	58 to Early 79 — FL, FLH, FLH-80, Classic
	16	49038-58B	FRONT HIGHWAY BAR KIT (chrome)	58 to Early 79 — FL, FLH, FLH-80, Classic
	17	49040-79	FRONT HIGHWAY BAR (chrome)	Late 79 to * — FL, FLH, FLH-80, Classic
	18	49135-67B	REAR HIGHWAY BAR KIT (black)	Late 67 to 78 — FL, FLH, FLH-80
	19	49137-67B	REAR HIGHWAY BAR KIT (chrome)	Late 67 to * — FL, FLH, FLH-80, Classic
	20	49138-67B	REAR HIGHWAY BAR, left (chrome)	Late 67 to * — FL, FLH, FLH-80, Classic
	21	49162-67B	REAR HIGHWAY BAR, right (chrome)	Late 67 to * — FL, FLH, FLH-80, Classic
	22	49170-67B	REAR HIGHWAY BAR, left (black)	Late 67 to 78 — FL, FLH, FLH-80
	23	49171-67B	REAR HIGHWAY BAR, right (black)	Late 67 to 78 — FL, FLH, FLH-80
	24	50658-79A	STUD, left front — test stud (chrome)	Late 79 to * — FL, FLH, FLH-80, Classic
	26	55276-67	MUFFLER CLAMP (2 in. dia.)	Late 67 to * — FL, FLH, FLH-80, Classic

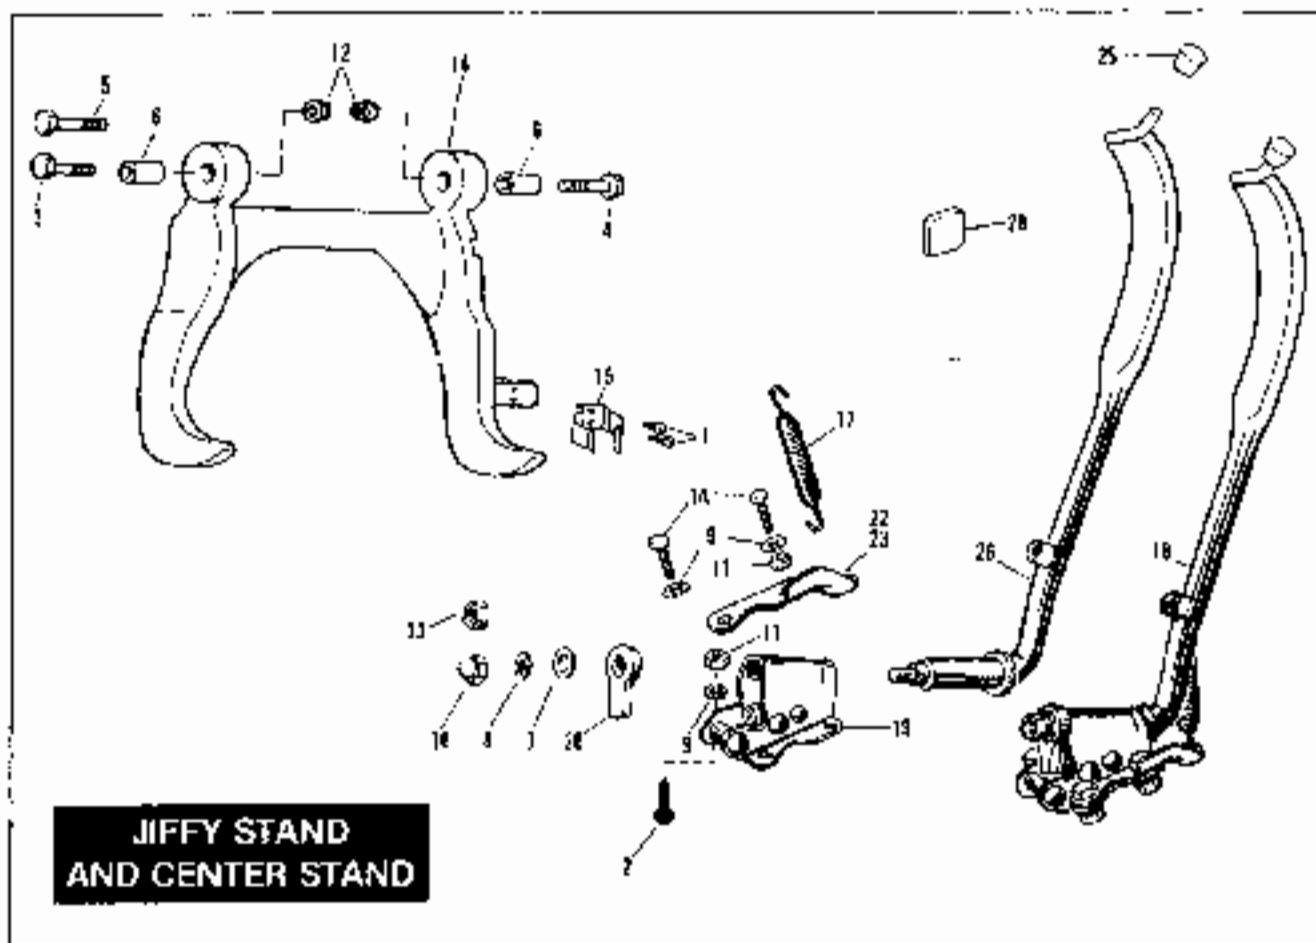


RETAIL PRICE	INDEX NO	PART NO.	N A M E	USED ON
	1	3634W	SCREW, No. 8 32 x 1 1/2 hex. hd. (2)	N/A Late 61 to 81 — FL, FLH, FLH-80, Classic
	1A	3980W	BOLT, 5/16-24 x 1 hex. hd. (2)	Early 81 to * — FLH-80, Classic
	2	3956	BOLT, 5/16-24 x 7/8 hex. hd. (4, 2 — Late 81 & Later)	41 to * — FL, FLH, FLH-80, Classic
	3	4434W	BOLT, 3/8-24 x 3-1/4 hex. hd. (used with standard ext.)	58 to 78 — FL, FLH, FLH-80
	4	4440W	BOLT, 3/8-24 x 4 hex. hd.	58 to 81 — FL, FLH, FLH-80, Classic
	5	4450W	BOLT, 3/8-24 x 1-1/2 hex. hd. (used with dual ext.)	58 to 81 — FL, FLH, FLH-80, Classic
	6	5935	BUSHING, center stand (2)	N/A Late 61 to 91 — FL, FLH, FLH-80, Classic
	7	6334	WASHER, 7/16 x 15/16 x 1/16	41 to * — FL, FLH, FLH-80, Classic
	8	7038	LOCKWASHER, 7/16	41 to * — FL, FLH, FLH-80, Classic
	9	7041	LOCKWASHER, 5/16 (4)	41 to * — FL, FLH, FLH-80, Classic
	10	7513	ACU-BOLT, 7/16-20 x 1 1/2 x 5/8 hex.	49 to * — FL, FLH, FLH-80, Classic
	11	7753	NUT, 5/16-24 x 1/4 x 1/2 hex. (2)	41 to * — FL, FLH, FLH-80, Classic
	12	7775	LOCKNUT, 3/8-24 x 7/16 x 9/16 hex. (2)	Early 61 to * — FL, FLH, FLH-80, Classic
	13	7837W	NUT, 7/16-20 x 3/8 x 1 1/16 hex.	41 to 78 — FL, FLH, FLH-80
	14	45400-50A	CENTER STAND ASSEMBLY, with fittings	58 to 81 — FL, FLH, FLH-80, Classic
	15	45404-61	CLIP, center stand	N/A 58 to 81 — FL, FLH, FLH-80, Classic
	17	50011-80A	SPRING, jiffy stand leg	41 to * — FL, FLH, FLH-80, Classic
	18	50013-74A	JIFFY STAND ASSEMBLY (chrome)	58 to * — FL, FLH, FLH-80, Classic
	19	50014-74	LEG BRACKET	58 to * — FL, FLH, FLH-80, Classic
	20	50015-74	LEG STOP	58 to * — FL, FLH, FLH-80, Classic
	22	50028-74A	BRACKET, spring	79 to * — FL, FLH, FLH-80, Classic
	23	50036-36	BRACKET, spring	N/A 41 to 78 — FL, FLH, FLH-80
	25	50052-70	TIP, jiffy stand leg	70 to 78 — FL, FLH, FLH-80
	26	50057-86C	LEG, jiffy stand (chrome)	48 to * — FL, FLH, FLH-80, Classic
	28	50100-70	BUMPER, jiffy stand	70 to * — FL, FLH, FLH-80, Classic

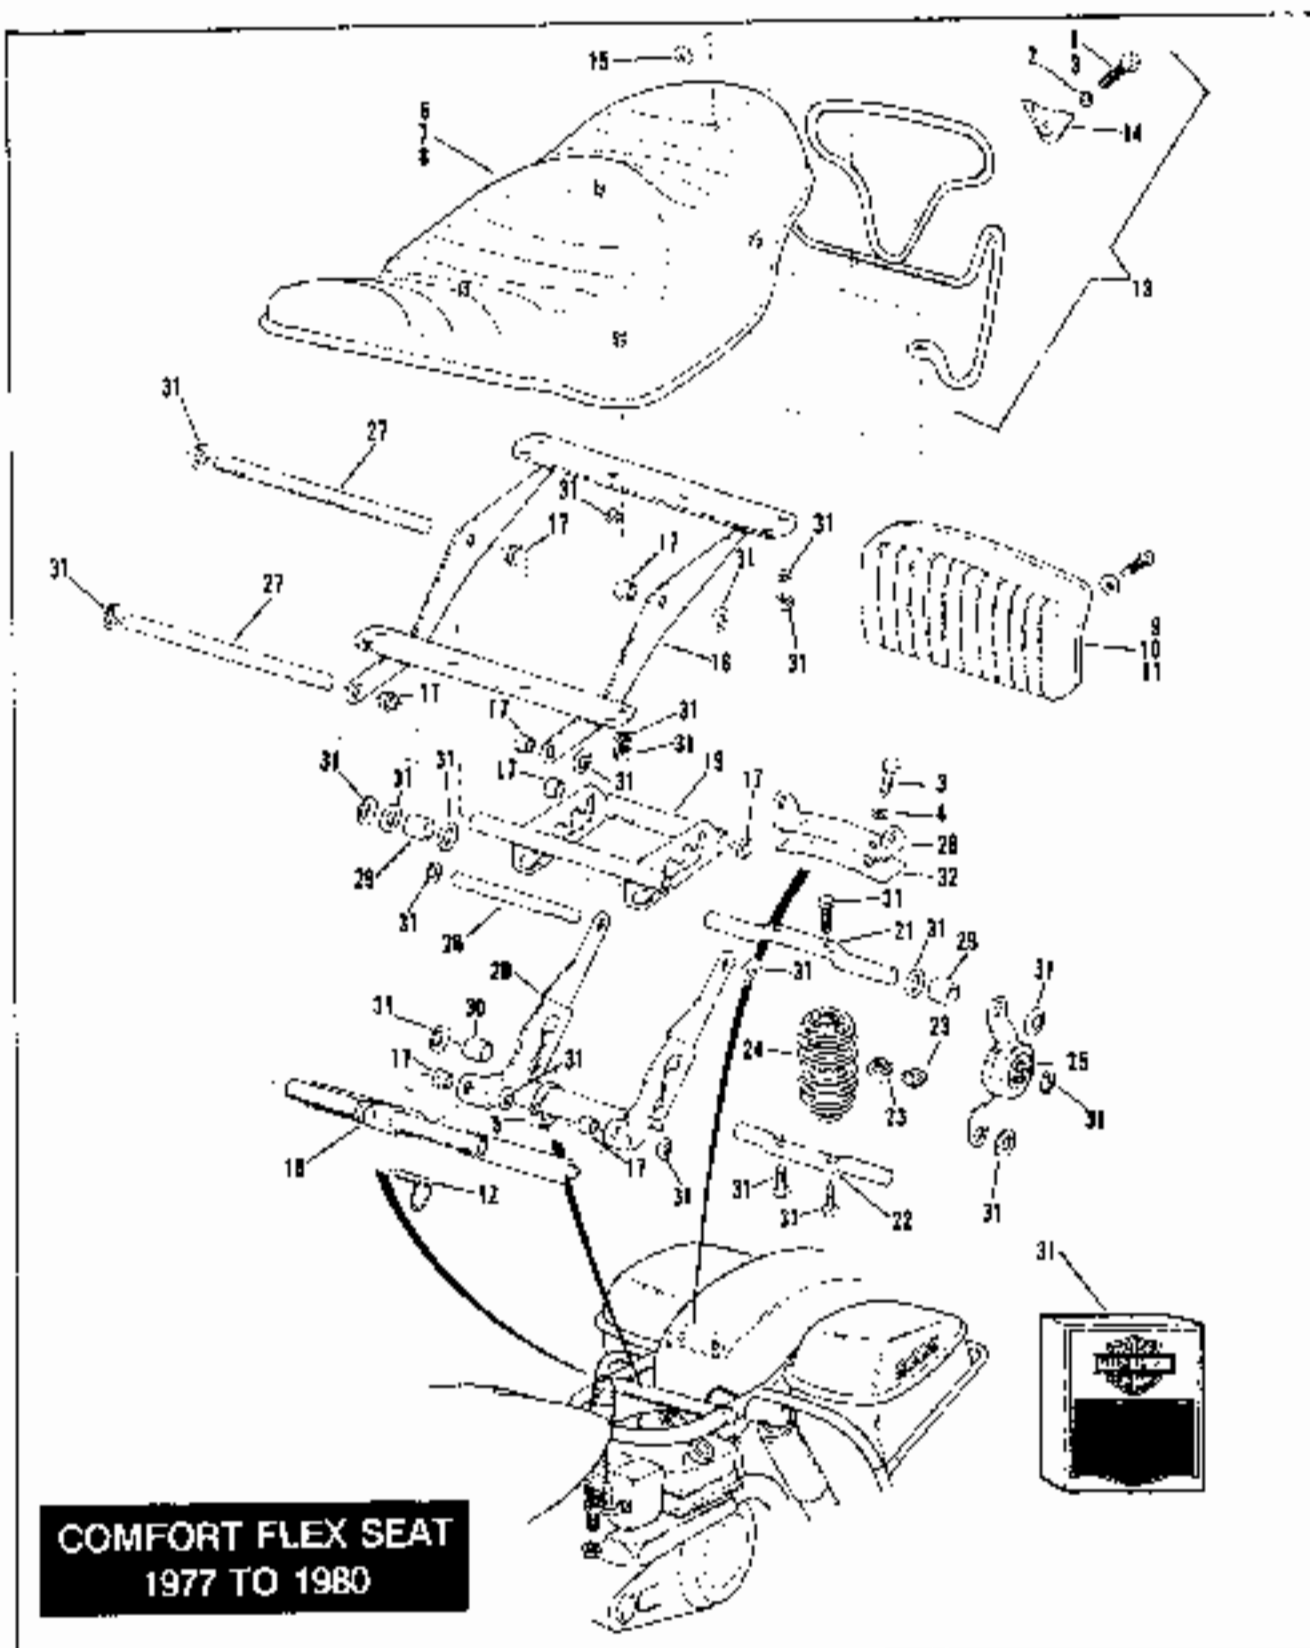


RETAIL PRICE	INDEX NO.	PART NO	NAME	USED ON
	1	2602	SCREW, 5/16 x 5/8 socket flange end (2)	1977 to 80 — FL, FLH, FLH-80, Classic
	2	6702	WASHER, 5/16 x 1/2 x 1/4 (12)	1977 to 80 — FL, FLH, FLH-80, Classic
	3	4301	BOLT, 5/16-24 x 5/8 hex. hd. (3)	77 to 80 — FL, FLH, FLH-80, Classic
	4	7341	LOCKWASHER, 5/16 (2)	77 to 80 — FL, FLH, FLH-80, Classic
	5	9055	CLAMP, wood (2)	77 to 80 — FL, FLH, FLH-80, Classic
		52510-77	SUSPENSION ASSEMBLY	N/A 77 to 80 — FL, FLH, FLH-80, Classic
	6	52514-77A	SEAT, only (black vinyl)	77 to 80 — FL, FLH, FLH-80, Classic
		52514-78	SEAT, only (black leather)	N/A 79 to 80 — FL, FLH, FLH-80, Classic
	7	52516-77A	SEAT, only (white vinyl)	N/A 77 to 80 — FL, FLH, FLH-80, Classic
		52516-78	SEAT, only (white leather)	N/A 79 to 80 — FL, FLH, FLH-80, Classic
	8	52518-77A	SEAT, only (brown vinyl)	N/A 77 to 80 — FL, FLH, FLH-80, Classic
		52518-78	SEAT, only (brown leather)	N/A 79 to 80 — FL, FLH, FLH-80, Classic
		52530-78	SEAT & SUSPENSION KIT (brown leather)	N/A 79 to 80 — FL, FLH, FLH-80, Classic
		52534-77	SEAT & SUSPENSION KIT (white vinyl)	N/A 77 to 80 — FL, FLH, FLH-80, Classic
		52534-78	SEAT & SUSPENSION KIT (white leather)	N/A 79 to 80 — FL, FLH, FLH-80, Classic
		52536-78	SEAT & SUSPENSION KIT (black leather)	N/A 79 to 80 — FL, FLH, FLH-80, Classic
	9	52567-77	BACKREST ASSEMBLY (black vinyl)	77 to 80 — FL, FLH, FLH-80, Classic
		52568-77	BACKREST ASSEMBLY (black leather)	N/A 77 to 80 — FL, FLH, FLH-80, Classic
	10	52569-77	BACKREST ASSEMBLY (brown vinyl)	N/A 77 to 80 — FL, FLH, FLH-80, Classic
		52580-77	BACKREST ASSEMBLY (brown leather)	N/A 77 to 80 — FL, FLH, FLH-80, Classic
	11	52581-77	BACKREST ASSEMBLY (white vinyl)	77 to 80 — FL, FLH, FLH-80, Classic
	12	52603-77	PIN, seat post	77 to 80 — FL, FLH, FLH-80, Classic
	13	52620-77	HANDRAIL ASSEMBLY	77 to 80 — FL, FLH, FLH-80, Classic
	14	52622-77	SUPPORT PLATE, handrail	77 to 80 — FL, FLH, FLH-80, Classic
	15	52623-77	LOCKNUT, support plate to handrail	77 to 80 — FL, FLH, FLH-80, Classic
	16	52801-77	SUPPORT, seat	77 to 80 — FL, FLH, FLH-80, Classic
	17	52802-77	BUSHING (8)	77 to 80 — FL, FLH, FLH-80, Classic
	18	52803-77	ADJUSTING BRACKET, seat suspension — front	77 to 80 — FL, FLH, FLH-80, Classic
	19	52804-77	ADJUSTING BRACKET, seat suspension — rear	77 to 80 — FL, FLH, FLH-80, Classic
	20	52805-77	SEAT SUSPENSION BASE	77 to 80 — FL, FLH, FLH-80, Classic
	21	52806-77	BRACKET, spring mounting — upper	77 to 80 — FL, FLH, FLH-80, Classic
	22	52807-77	BRACKET, spring mounting — lower	77 to 80 — FL, FLH, FLH-80, Classic
	23	52808-77	RETAINER, spring (4)	77 to 80 — FL, FLH, FLH-80, Classic
	24	52809-77	SPRING, compression (2)	77 to 80 — FL, FLH, FLH-80, Classic
	25	52810-77	DAMPER, spring	77 to 80 — FL, FLH, FLH-80, Classic
	26	52811-77	SHAFT, ladder bracket	77 to 80 — FL, FLH, FLH-80, Classic
	27	52812-77	SHOFT, seat support (2)	77 to 80 — FL, FLH, FLH-80, Classic
	28	52813-77	BRACKET, support — ladder	77 to 80 — FL, FLH, FLH-80, Classic
	29	52814-77	SPACER, spring upper bracket	77 to 80 — FL, FLH, FLH-80, Classic
	30	52815-77	SPACER, spring lower bracket	77 to 80 — FL, FLH, FLH-80, Classic
	31	52816-77	HARDWARE KIT, seat suspension	77 to 80 — FL, FLH, FLH-80, Classic
	32	59731-77	FENDER REINFORCEMENT, wheelwells	N/A 41 to 76 — FL, FLH


COMFORT FLEX SEAT 1981 & 1982

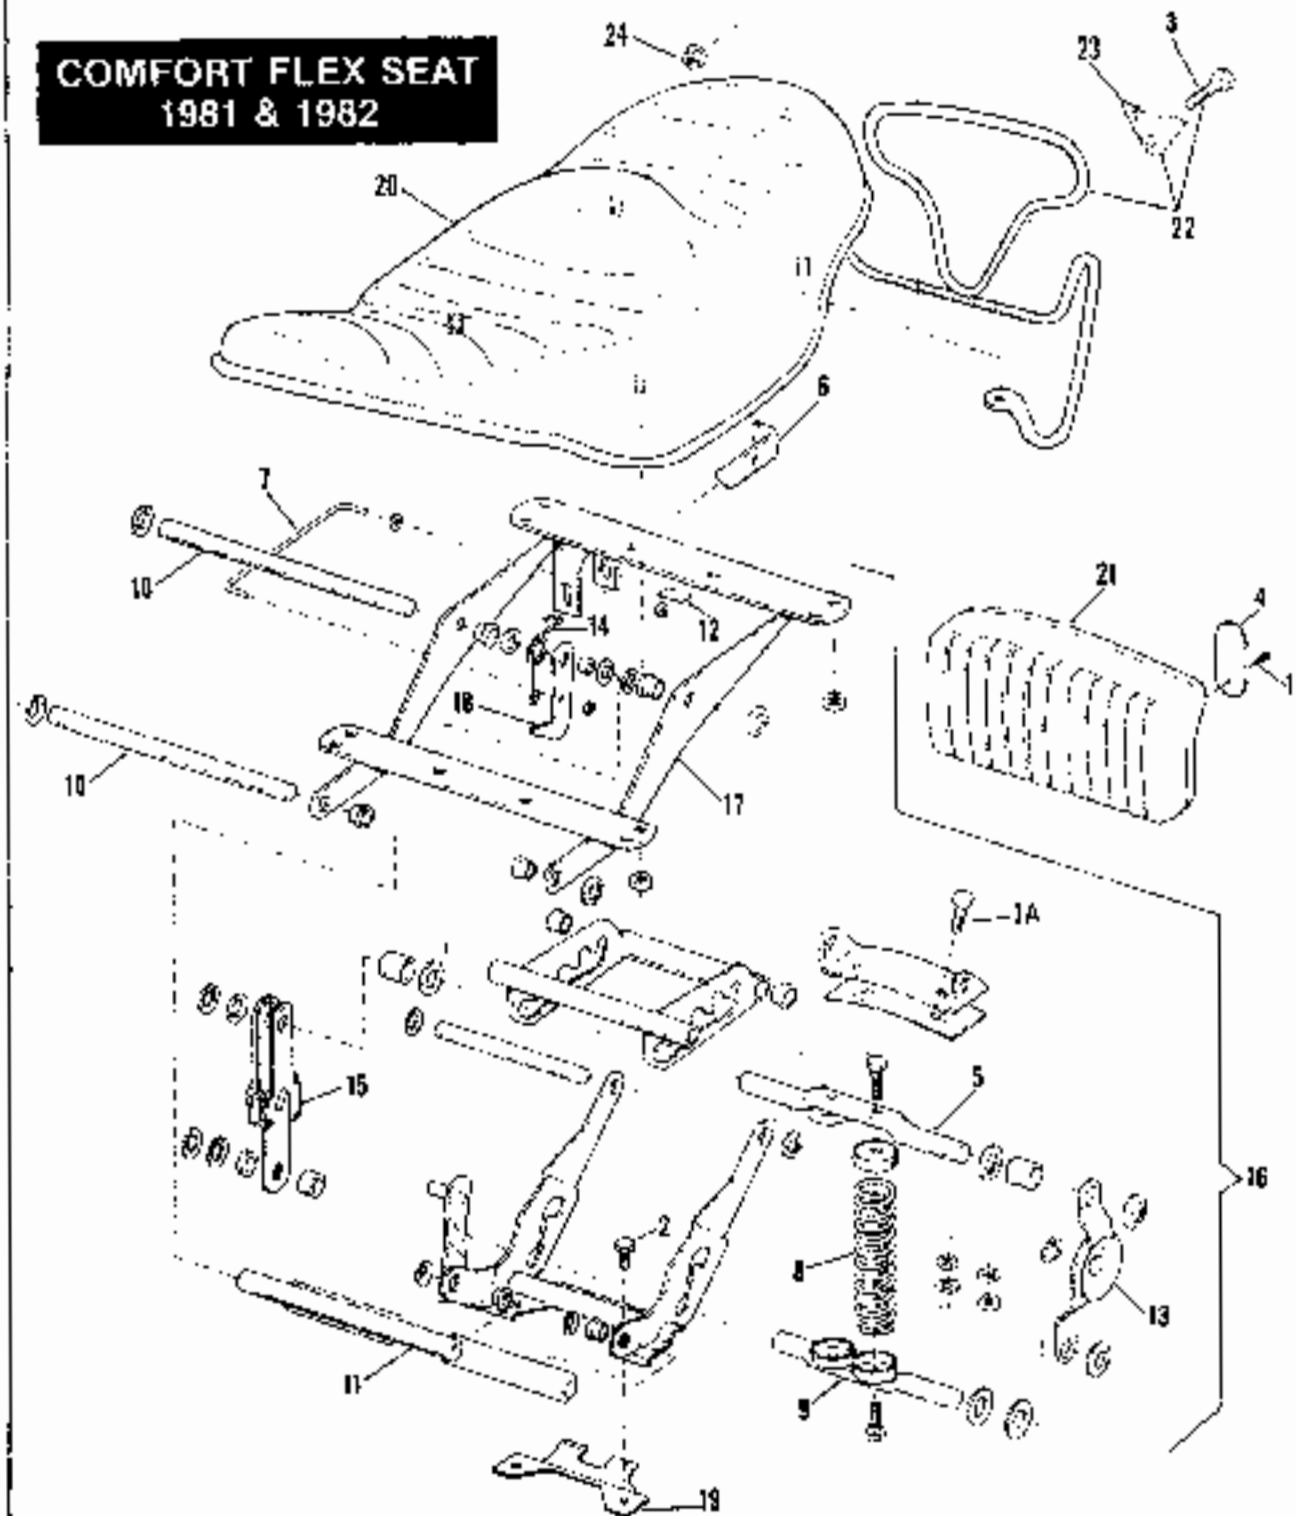

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	215*	SCREW, 1/4-20 x 3/4 Phillips brass hd. (2)	81 & 82 — FLH-80, Classic
	1A	3498	SCREW, 5/16-24 x 5/8 hex. socket button hd. (2)	81 & 82 — FLH-80, Classic
	2	3797	BOLT, 1/4-20 x 3 1/4 hex. hd. (2)	81 — FLH-80, Classic
		2551W	BOLT, 1/4-20 x 1 hex. hd. (2)	82 — FLH-80, Classic
	3	439*	BOLT, 5/16-24 x 5/8 hex. hd.	81 & 82 — FLH-80, Classic
	4	52114-79	SUPPRT. backrest (2)	81 & 82 — FLH-80, Classic
	5	52147-80	SHAFT ASSEMBLY, upper	81 & 82 — FLH-80, Classic
	6	52148-80	HANDLE	81 & 82 — FLH-80, Classic
	7	52149-80	ROD	81 & 82 — FLH-80, Classic
	8	52150-80	SPRING, compressor (2)	81 & 82 — FLH-80, Classic
	9	52151-80	SHAFT ASSEMBLY, lower	81 & 82 — FLH-80, Classic
	10	52154-80	SHAFT (2)	81 & 82 — FLH-80, Classic
	11	52156-80	FRONT LINK	81 & 82 — FLH-80, Classic
	12	52157-80	DAMPER	81 & 82 — FLH-80, Classic
	13	52159-80	DAMPER	81 & 82 — FLH-80, Classic
	14	52162-80	SPRING	81 & 82 — FLH-80, Classic
	15	52163-80	SLIDER ASSEMBLY	81 & 82 — FLH-80, Classic
	16	52418-81	SUSPENSION ASSEMBLY	81 & 82 — FLH-80, Classic
	17	52419-81	SUPPORT, seat	81 & 82 — FLH-80, Classic
	18	52420-81	HOOK	81 & 82 — FLH-80, Classic
	19	52421-81	CLAMP	81 & 82 — FLH-80, Classic
	20	52514-77A	SEAT (black vinyl)	81 & 82 — FLH-80, Classic
		52515-77A	SEAT (white vinyl)	N/A 81 & 82 — FLH-80, Classic
	21	52567-77	BACKREST ASSEMBLY (black vinyl)	81 & 82 — FLH-80, Classic
	22	52620-77	HANDRAIL KIT	81 & 82 — FLH-80, Classic
	23	52622-77	SUPPORT PLATE, handrail	81 & 82 — FLH-80, Classic
	24	52623-77	LOCK NUT, support plate to handrail	81 & 82 — FLH-80, Classic

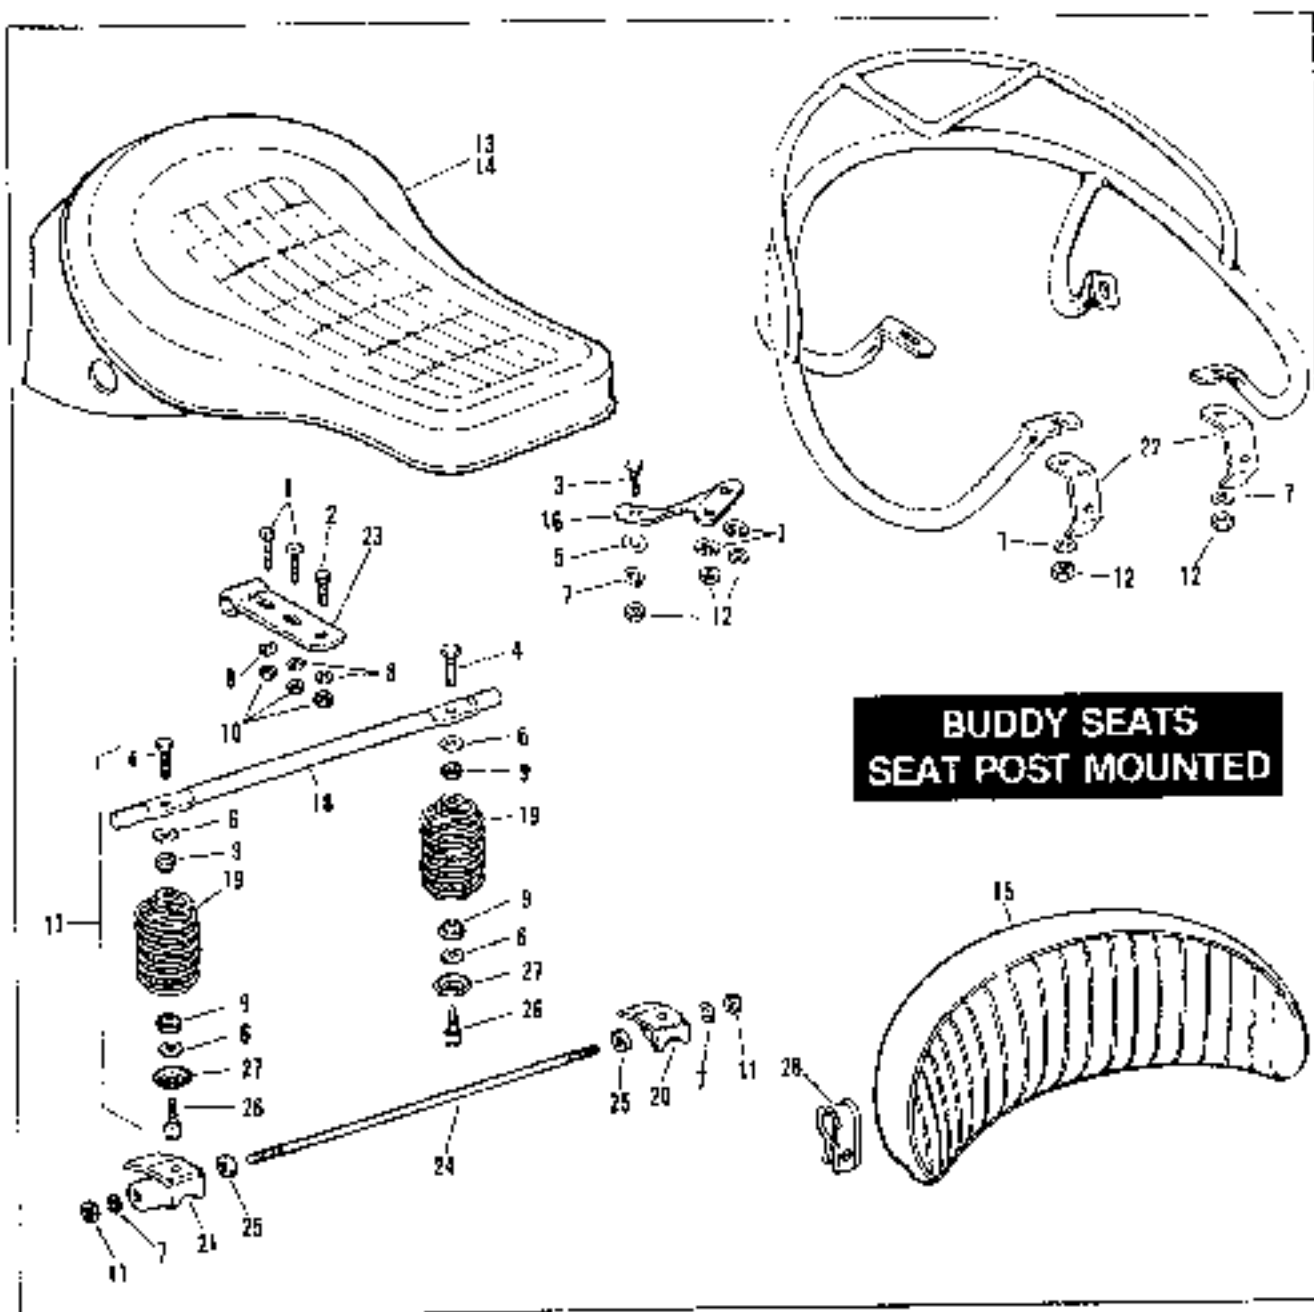


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	39516	BOLT, 1/4-24 x 7/8 sq. hd. (2)	55 to 80 — FL, FLH
	2	3996	BOLT, 5/16-24 x 7/8 hex. hd.	58 to 80 — FL, FLH
	3	4337W	BOLT, 3/8-24 x 1-1/4 hex. hd.	65 to 80 — FL, FLH
	4	4410	BOLT, 1/4-24 x 7/8 hex. hd. (2)	65 to 80 — FL, FLH
	5	6701	WASHER, 3/8 x 13/16 x 1/16	41 to 80 — FL, FLH
	6	6703	WASHER, 1/2 x 5/8 x 1/16 (4)	65 to 80 — FL, FLH
	7	7038	LOCKWASHER, 3/8 (2)	41 to 80 — FL, FLH
	8	7041	LOCKWASHER, 5/16 (3)	41 to 80 — FL, FLH
	9	7582	LOCKNUT, 1/4-28 x 3/16 x 7/16 hex. (1)	65 to 80 — FL, FLH
	10	7753	NUT, 5/16-24 x 1-1/4 x 1/2 hex. (3)	41 to 80 — FL, FLH
	11	7800W	NUT, 3/8-24 x 2-1/4 x 9/16 hex. (2)	65 to 80 — FL, FLH
	12	7851W	NUT, 3/8-24 x 7/32 x 9/16 hex. (5)	41 to 80 — FL, FLH
	13	82506-559	SUPER DELUXE BUDDY SEAT, with handrail (white)	N/A 55 to 80 — FL, FLH
	14	82507-550	SUPER DELUXE BUDDY SEAT, with handrail (black)	N/A 58 to 80 — FL, FLH
		82510-65A	BUDDY SEAT FITTINGS	N/A 65 to 80 — FL, FLH
	15	82520-64A	BACK REST, buddy seat (white)	N/A 65 to 80 — FL, FLH
		82525-65	SHELL, buddy seat	N/A 55 to 80 — FL, FLH
	16	82551-56A	FRONT BRACKET	41 to 80 — FL, FLH
	17	82552-68	SPRING YOKES ASSEMBLY	58 to 80 — FL, FLH
	18	82560-65	SUPPORT ROD	55 to 80 — FL, FLH
	19	82575-65	AUXIL. SPR. SPRING (2)	65 to 80 — FL, FLH
	20	82583-68	SUPPORT BRACKET left	68 to 80 — FL, FLH
	21	82584-68	SUPPORT BRACKET right	68 to 80 — FL, FLH
	22	82586-68	SPRING BRACKET (2)	68 to 80 — FL, FLH
	23	82590-65	BRACKET, spring yoke	65 to 80 — FL, FLH
	24	82602-65	SLID. spring support	65 to 80 — FL, FLH
	25	82605-58	SPACER, support stud (2)	58 to 80 — FL, FLH
	26	82608-68	SHOULDER BOLT	68 to 80 — FL, FLH
	27	82620-65	CUP WASHER, spring mounting (2)	65 to 80 — FL, FLH
	28	82702-64	CUP FASTENER, back rest (white plastic) (4)	N/A 55 to 80 — FL, FLH

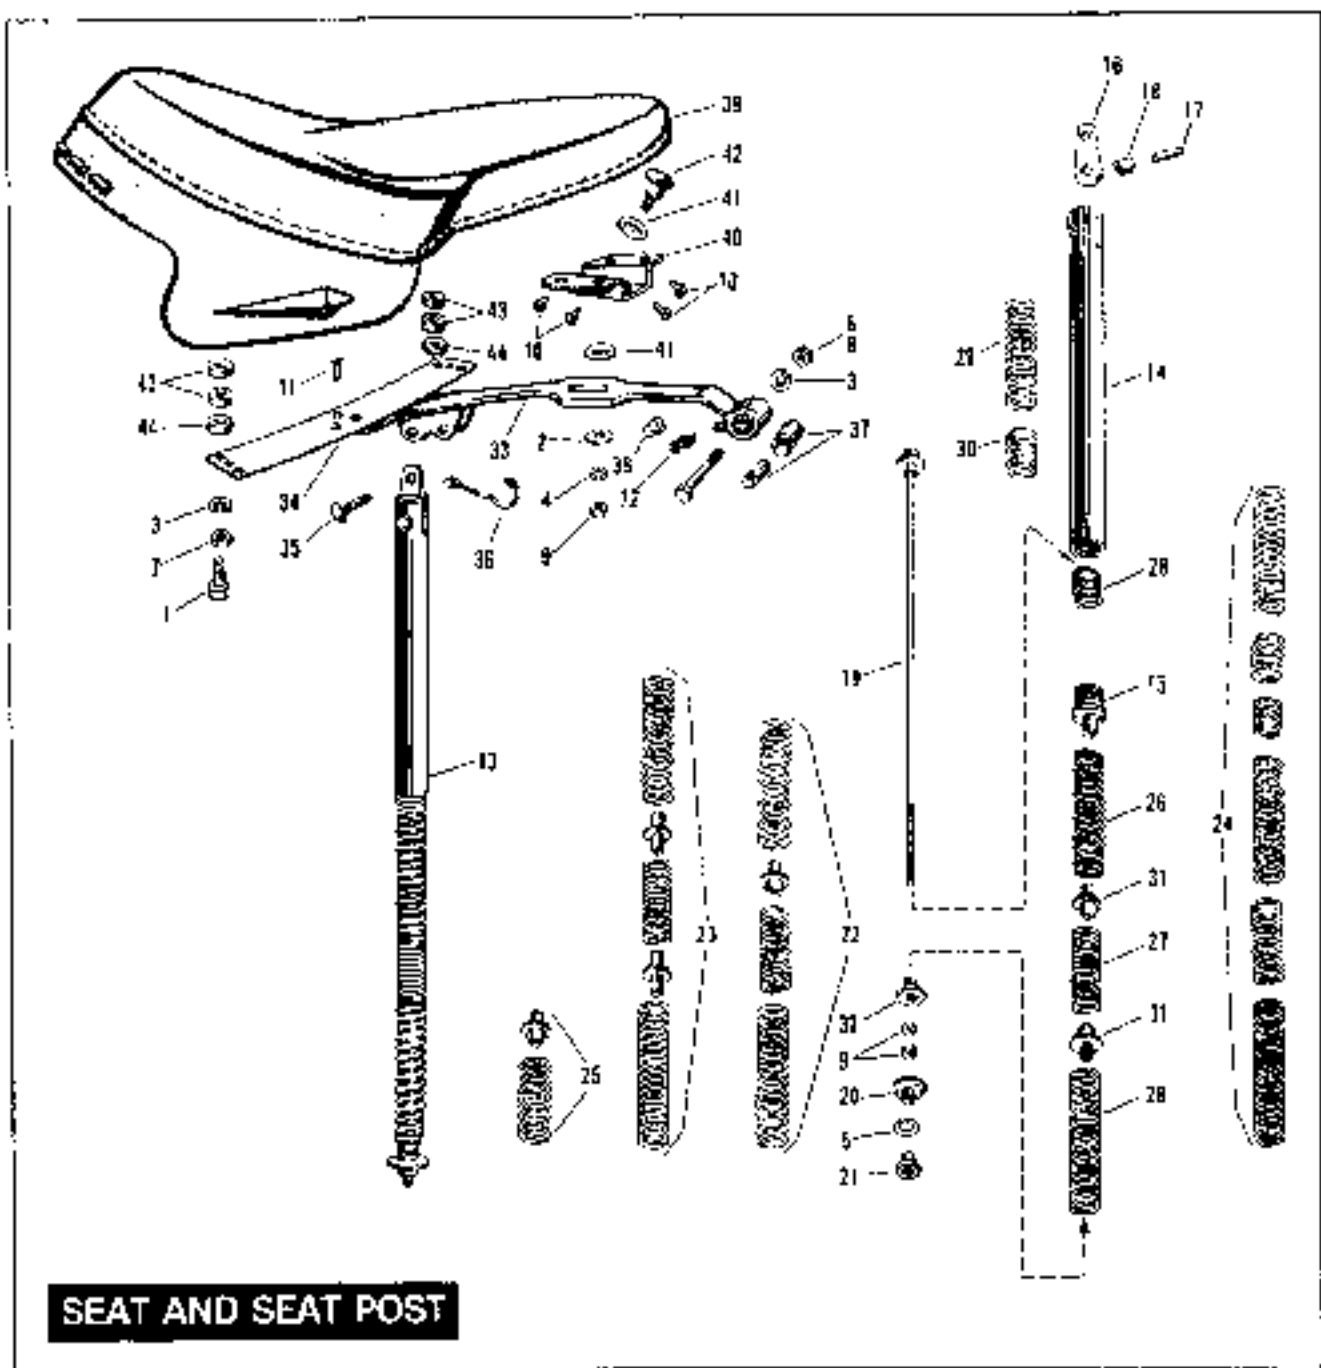


SEAT AND SEAT POST

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	4314W	BOLT, 5/16-24 x 1-1/2 hex hd (2)	Late 70 to 80 — FL, FLH, FLH 80 Classic
		4380W	BOLT, 3/8-24 x 2 hex hd	65 to Early 70 — FL, FLH
		4411	BOLT, 3/8-24 x 1-3/4 hex hd	Late 70 to 80 — FL, FLH, FLH 80 Classic
	2	5400H9	WASHER, 3/8 x 10/16 x 7/32	41 to 80 — FL, FLH, FLH 80 Classic
	3	7038	LOCKWASHER, 3/8	41 to 80 — FL, FLH, FLH 80 Classic
	4	7041	LOCKWASHER, 5/16-10	48 to 80 — FL, FLH, FLH 80 Classic
	5	7055	LOCKWASHER, 3/16	41 to 80 — FL, FLH, FLH 80 Classic
	6	7244	NUT, 5/16-24 x 3/16 x 1.2 hex	41 to 64 — FL, FLH
	7	7750	NUT, 5/16-24 x 17/64 x 1/2 hex	41 to 80 — FL, FLH, FLH 80 Classic
	8	7775	LOCKWAL, 3/8-24 x 7/16 x 5/16 hex	65 to Early 70 — FL, FLH
		7775W	LOCKWAL, 3/8-24 x 3/4 x 5/16 hex	Late 70 to 80 — FL, FLH, FLH 80 Classic
	9	7851W	NUT, 3/8-24 x 7/32 x 5/16 hex (2)	41 to 80 — FL, FLH, FLH 80 Classic
	10	8515	RIVET, 3/16 x 3/8 (4)	41 to 80 — FL, FLH, FLH 80 Classic
	11	8580	RIVET, 1/4 x 3/4 (3)	41 to 80 — FL, FLH, FLH 80 Classic
	12	95N1	GRASS CUTTING	41 to 66 — FL, FLH, FLH 80 Classic
	13	51510-58	SEAT PLUNGER ASSEMBLY (150 to 220 lbs.)	58 to 80 — FL, FLH, FLH 80 Classic
		51514-58	SEAT PLUNGER ASSEMBLY (over 220 lbs.)	58 to 80 — FL, FLH, FLH 80 Classic
	14	51820-36	PLUNGER, seat post	41 to 80 — FL, FLH, FLH 80 Classic
	15	51834-36	LOCKWAL, plunger	41 to 80 — FL, FLH, FLH 80 Classic
	16	51540-29	PLUNGER LINK	41 to 80 — FL, FLH, FLH 80 Classic
	17	51842-20	RIVET, plunger link	41 to 80 — FL, FLH, FLH 80 Classic
	18	51844-13	BUSHING, plunger link	41 to 80 — FL, FLH, FLH 80 Classic
	19	51861-36	RND, seat post	41 to 80 — FL, FLH, FLH 80 Classic
	20	51872-25	NUT, seat post rod	41 to 80 — FL, FLH, FLH 80 Classic
	21	51874-25	LOCKWAL, seat post rod	41 to 80 — FL, FLH, FLH 80 Classic
	22	51770-29	SET OF SEAT POST SPRINGS — std	N/A 41 to 80 — FL, FLH, FLH 80 Classic
	23	51771-29	SET OF SEAT POST SPRINGS, heavy	41 to 80 — FL, FLH, FLH 80 Classic
	24	51772-31	SET OF SEAT POST SPRINGS, complete	N/A 41 to 80 — FL, FLH, FLH 80 Classic
	25	51773-31	CUSHION SPRING, with coil	41 to 80 — FL, FLH, FLH 80 Classic
	26	51774-31	CUSHION SPRING (2)	41 to 80 — FL, FLH, FLH 80 Classic
	27	51775-31	CUSHION SPRING, short	41 to 80 — FL, FLH, FLH 80 Classic
	28	51777-30	RECOIL SPRING	N/A 41 to 80 — FL, FLH, FLH 80 Classic
	29	51778-30	AUXILIARY SPRING — 3 in. (2)	41 to 80 — FL, FLH, FLH 80 Classic
	30	51780-30	AUXILIARY SPRING — 2-1/2 in.	41 to 80 — FL, FLH, FLH 80 Classic
		51790-29	COLLAP, cushion spring (2) (over 220 lbs.)	41 to 80 — FL, FLH, FLH 80 Classic
	31	51791-31	SPACER, seat post spring (2)	41 to 80 — FL, FLH, FLH 80 Classic
	32	51795-29	ADJUSTING NUT, seat post spring	41 to 80 — FL, FLH, FLH 80 Classic
	33	51800-30	SEAT BAR	41 to 80 — FL, FLH, FLH 80 Classic
	34	51811-20	CROSS-BAR	41 to 80 — FL, FLH, FLH 80 Classic
	35	51818-29	PIN, seat bar clamp	41 to 80 — FL, FLH, FLH 80 Classic
	36	51820-20	SPRING, clamp pin	41 to 80 — FL, FLH, FLH 80 Classic
	37	51825-37	BUSHING SET, seat bar	N/A 41 to 64 — FL, FLH
		51825-65	BUSHING SET, seat bar	65 to 80 — FL, FLH, FLH 80 Classic
	38	51868-66	PLASTIC PLUG, seat bar grease fitting hole	41 to 80 — FL, FLH, FLH 80 Classic
	39	52004-26	SEAT, standard	41 to 79 — FL, FLH, FLH 80 Classic
		52008-47R	SEAT, deluxe (black leather)	41 to 80 — FL, FLH, FLH 80 Classic
	40	52090-25	CLAMP PLATE, seat bar	41 to 80 — FL, FLH, FLH 80 Classic
	41	52098-34	WASHER, front bolt (2)	41 to 80 — FL, FLH, FLH 80 Classic
	42	52098-34	BOLT, front	41 to 80 — FL, FLH, FLH 80 Classic
	43	52103-31	SPACER, rear slid — upper (4)	41 to 80 — FL, FLH, FLH 80 Classic
	44	52104-38	SPACER, rear slid — lower (2)	41 to 80 — FL, FLH, FLH 80 Classic

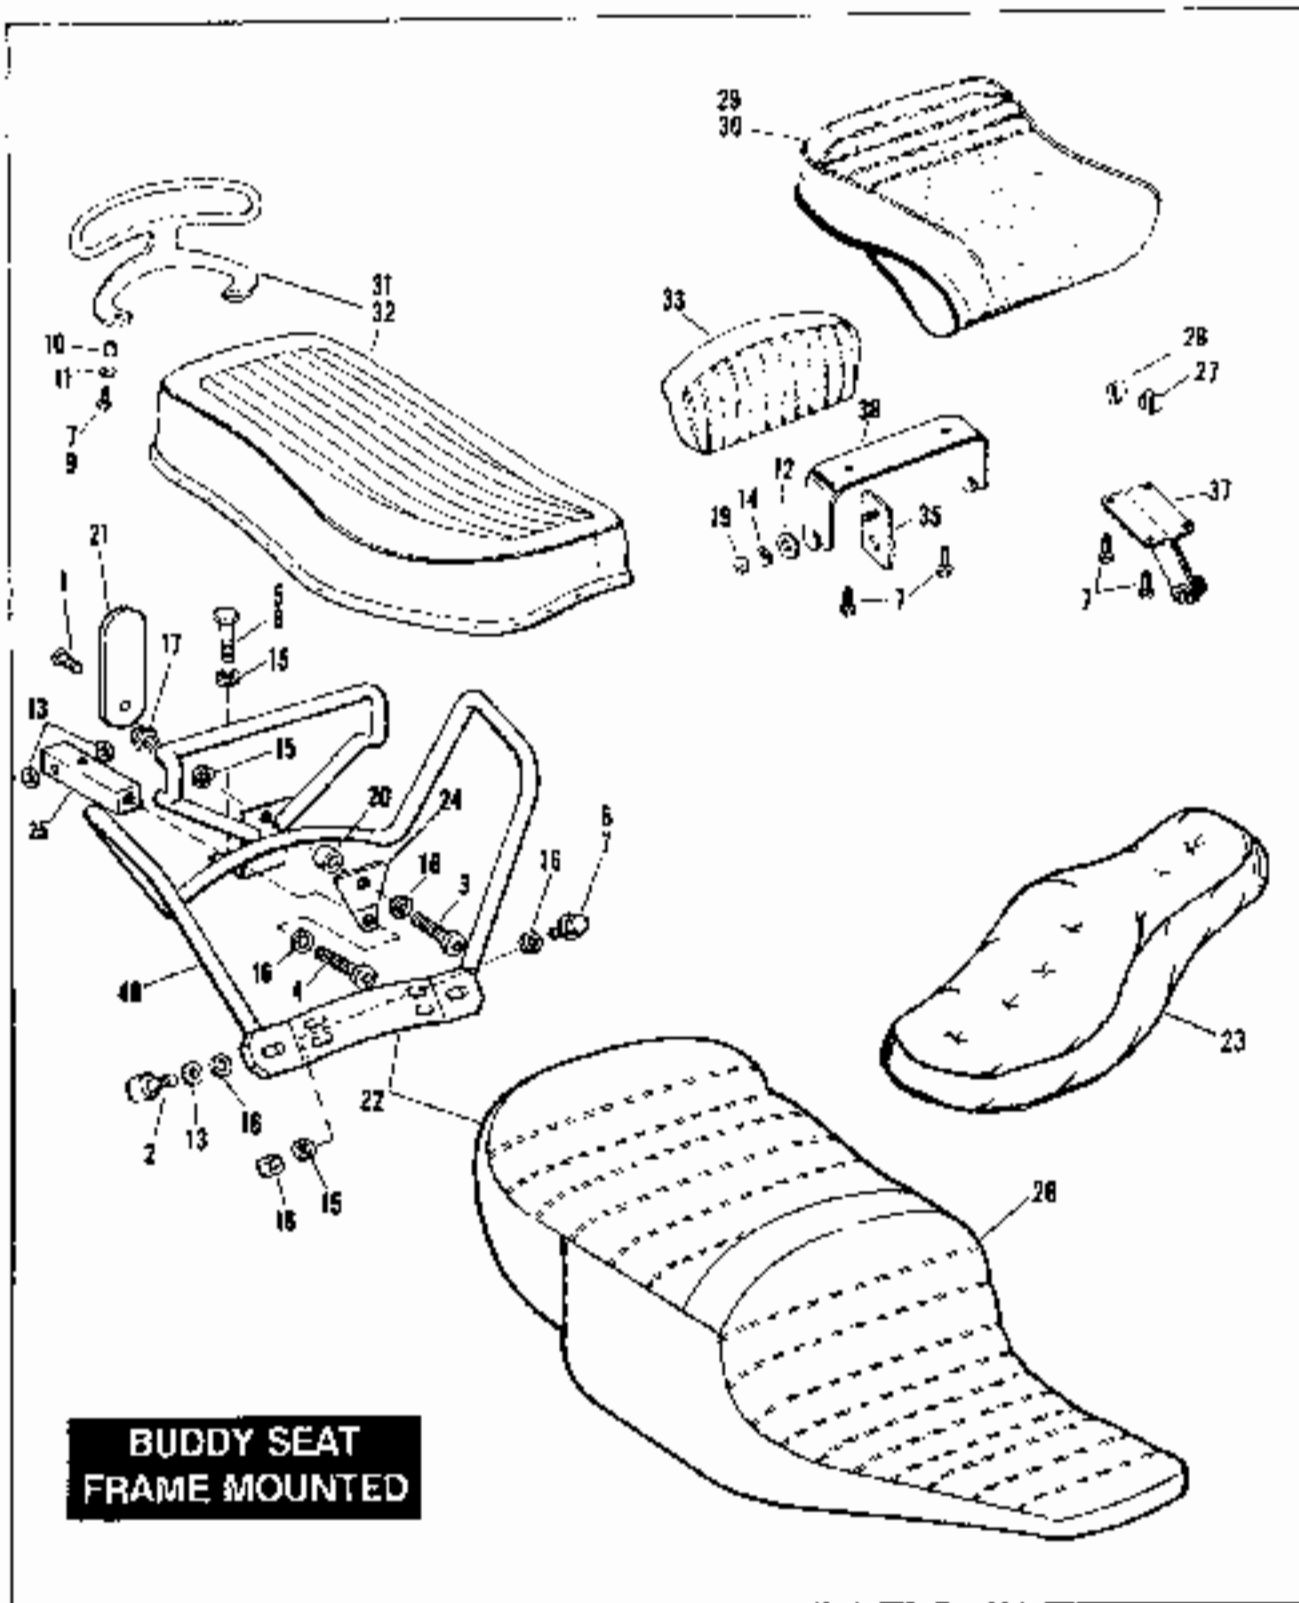


RETAIL PRICE	INDEX NO.	PART NO	NAME	USED ON
NOTE: REFER TO DEALER ACCESSORY GUIDE FOR ADDITIONAL FRAME MOUNTED SEATS AND BACKREST KITS				
	1	2151	SCREW, 1/4-20 x 3/4 Phillips head (2)	78 to * — FL, FLH, FLH-80, Classic
	2	2099	SCREW, 5/16 x 5/8 socket head (2)	79 to * — FL, FLH, FLH-80, Classic
	3	2741	SCREW, 5/16-24 x 1-1/4 hex pan hd	Late 79 to * — FL, FLH, FLH-80, Classic
	4	2754	SCREW, 5/16-18 x 7/8 hex cross hd	Late 79 to * — FL, FLH, FLH-80, Classic
	5	3442	BOLT, 5/16-24 x 5/8 hex head	Early 79 — FL, FLH, FLH-80, Classic
	6	3447	BOLT, 5/16-24 x 5/8 hex head (2)	Late 80 to * — FL, FLH, FLH-80, Classic
	7	3974-W	BOLT, 5/16-24 x 3/4 hex head (B, 2-7/8 A later)	58 to 64 — FL, FLH, 79 to * — FL, FLH, FLH-80, Classic Late 79 to * — FL, FLH, FLH-80, Classic
	8	2091	BOLT, 5/16-18 x 7/8 hex head	65 to 78 — FL, FLH, FLH-80
	9	4730	BOLT, 5/16-24 x 1-1/4 hex head (2)	65 to 78 — FL, FLH, FLH-80
	10	5940	SPACER (2)	N/A 58 to 79 — FL, FLH, FLH-80
	11	63418	WASHER, 5/16 x 1-1/8 x 1/16 (2)	65 to 78 — FL, FLH, FLH-80
	12	6731	WASHER, 3/8 x 1-1/8 x 1/16 (2)	59 to 78 — FL, FLH, FLH-80
	13	6732	WASHER, 5/16 x 1-1/8 x 1/16 (4)	79 to * — FL, FLH, FLH-80, Classic
	14	7038	LOCKWASHER, 3/8 (2)	58 to 78 — FL, FLH, FLH-80
	15	7041	LOCKWASHER, 5/16 (4)	79 to * — FL, FLH, FLH-80, Classic
	16	7127	LOCKWASHER, 5/16 nut (only 4)	Late 79 to * — FL, FLH, FLH-80, Classic
	17	7736	ACORN NUT, 5/16-24 x 1/2 (2) x 9/16 hex	Late 79 to * — FL, FLH, FLH-80, Classic
	18	7753	NUT, 5/16-24 x 1/4 x 1/2 hex (2)	Late 80 to * — FL, FLH, FLH-80, Classic
	19	7800W	NUT, 5/16-24 x 21-64 x 9/16 hex (2)	58 to 79 — FL, FLH, FLH-80
	20	42623-80	SPACER, handrail & backrest bracket	Late 79 to * — FL, FLH, FLH-80, Classic
	21	52115-85	SUPPORT, backrest (2)	79 to * — FL, FLH, FLH-80, Classic
	22	52120-79	SEAT AND HANDRAIL, frame mounted (black vinyl)	79 to * — FL, FLH, FLH-80, Classic
	23	52169-81	RAINCOVER, cloth seat	N/A 80 — FL, FLH, FLH-80, Classic
		52171-81	RAINCOVER, cloth seat	N/A 81 to 94 — FLH-80, Classic
	24	52195-79	BRACKET, handrail & backrest	Late 79 to * — FL, FLH, FLH-80, Classic
	25	52198-79	SUPPORT BRACKET, handrail & backrest	Late 79 to * — FL, FLH, FLH-80, Classic
	26	52411-79A	SEAT, frame mounted (black vinyl)	79 to * — FL, FLH, FLH-80, Classic
	27	52462-85	SLIP ON SEAT COVER KIT	N/A 65 to 78 — FL, FLH, FLH-80
	28	52465-85	JOINT CLIP seat cover	N/A 65 to 78 — FL, FLH, FLH-80
	29	52467-85A	SEAT COVER REPLACEMENT KIT (black)	N/A 65 to 78 — FL, FLH, FLH-80
	30	52469-85A	SEAT COVER REPLACEMENT KIT (white)	N/A 65 to 78 — FL, FLH, FLH-80
	31	52486-60D	BUDDY SEAT AND HANDRAIL (black)	58 to 78 — FL, FLH, FLH-80
	32	52490-60C	BUDDY SEAT AND HANDRAIL (white)	N/A 58 to 78 — FL, FLH, FLH-80
		52511-85	BUDDY SEAT FITTINGS	N/A 65 to 78 — FL, FLH, FLH-80
		52524-85	SHELL, buddy seat (Universal Style)	N/A 60 to 78 — FL, FLH, FLH-80
	33	52526-66	BACKREST, frame mounted buddy seat	N/A 66 to 78 — FL, FLH, FLH-80
	35	52541-59	PLATE, rear bracket (2)	N/A 58 to 78 — FL, FLH, FLH-80
	37	52550-85	FRONT BRACKET	N/A 65 to 78 — FL, FLH, FLH-80
	38	52554-85	REAR BRACKET	N/A 58 to 78 — FL, FLH, FLH-80
	40	91682-79	WANDPAIL, with hardware	79 to * — FL, FLH, FLH-80, Classic

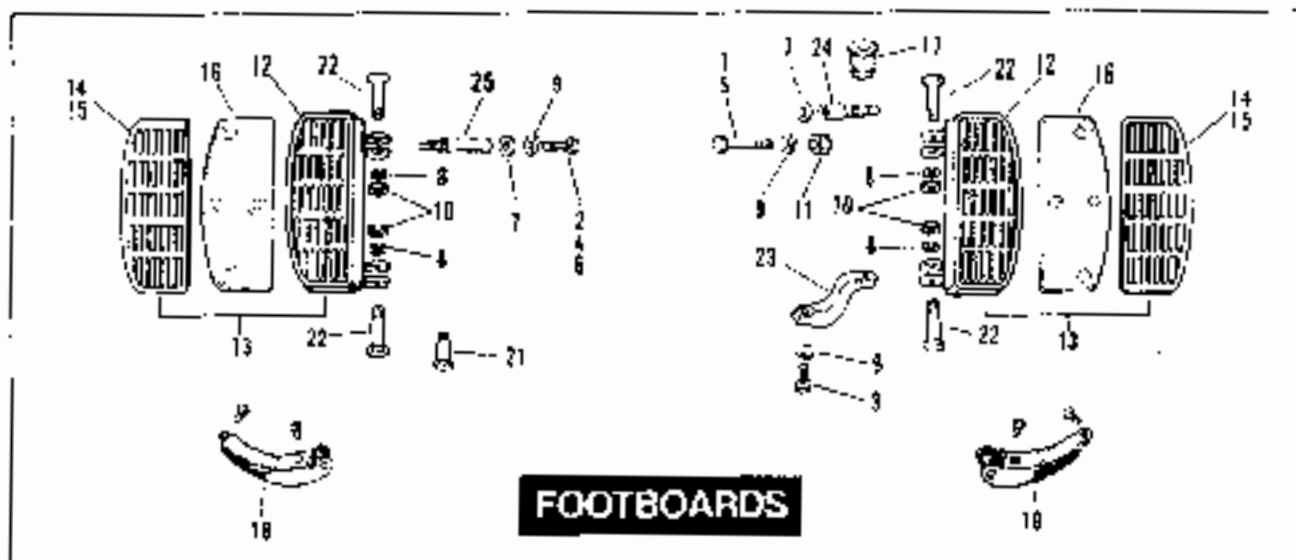

FOOTBOARDS

A48

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2851	BOLT, 3/8-24 x 1-3/4 hex. hd.	Late 79 to * — FL, FLH, FLH-80, Classic
	2	4319	BOLT, 3/8-24 x 1 hex. hd. (front left — footshift) (right rear — handshift)	70 to 79 — FL, FLH, FLH-80, Classic
	3	4337W	BOLT, 3/8-24 x 1-1/4 hex. hd.	70 to * — FL, FLH, FLH-80, Classic
	4	4370HB	BOLT, 3/8-24 x 1-9/16 hex. hd. (handshift only)	70 to 78 — FL, FLH, FLH-80
	5	4401W	BOLT, 3/8-24 x 2-3/4 hex. hd.	70 to Early 73 — FL, FLH, FLH-80, Classic
	6	4411	BOLT, 3/8-24 x 1-3/4 hex. hd. (front left — footshift)	79 to * — FL, FLH, FLH-80, Classic
	7	5448HB	WASHER, 13/32 x 13/16 x 3/32 (2, 1-79 & later)	41 to Early 82 — FL, FLH
	8	7035	LOCKWASHER, 1/4 (4)	79 to * — FL, FLH, FLH-80, Classic
	9	7039	LOCKWASHER, 3/8 (5, 3-78 & later)	41 to * — FL, FLH, FLH-80, Classic
	10	7691W	NUT, 1/4-20 x 5/32 x 7/16 hex. (4)	41 to Early 82 — FL, FLH, FLH-80, Classic
		7742	LOCKNUT, 1/4-20 x 7/32 x 7/16 hex. (4)	Late 82 to * — FLH-80, Classic
	11	7783	NUT, 3/8-16 x 5/16 x 9/16 hex.	Late 79 to * — FL, FLH, FLH-80, Classic
	12	50503-36	FOOTBOARD	N/A 58 to 74 — FL, FLH
	13	50603-74A	FOOTBOARD, includes index nos. 14, 16 & 17	86 to * — FL, FLH, FLH-80, Classic
	14	50614-86	PAD, footboard	86 to * — FL, FLH, FLH-80, Classic
	15	50616-86	PAIR OF PADS, footboards (white)	86 to * — FL, FLH, FLH-80, Classic
	16	50619-74A	UPPER PLATE, only — rubber mounted footboard (2)	86 to * — FL, FLH, FLH-80, Classic
	17	50623-74	RUBBER MOUNT, footboard (8)	86 to * — FL, FLH, FLH-80, Classic
	18	50622-40	HINGE, footboard — right front & left rear (2)	N/A 41 to 73 — FL, FLH
	19	50623-40	HINGE, footboard — left front & right rear (2)	N/A 41 to 73 — FL, FLH
	21	50635-14A	BOLT, hinge (4)	41 to Early 82 — FL, FLH, FLH-80, Classic
	22	50635-82	BOLT, hinge (4)	Late 82 to * — FLH-80, Classic
	23	50655-70	STUD, right rear	70 to * — FL, FLH, FLH-80, Classic
	24	50657-70A	STUD, right front (chrome)	70 to Early 73 — FL, FLH, FLH-80, Classic
	25	50658-70A	STUD, left front — footshift only (chrome)	70 to * — FL, FLH, FLH-80, Classic
		50659-70	STUD, left front (handshift only)	70 to 78 — FL, FLH, FLH-80

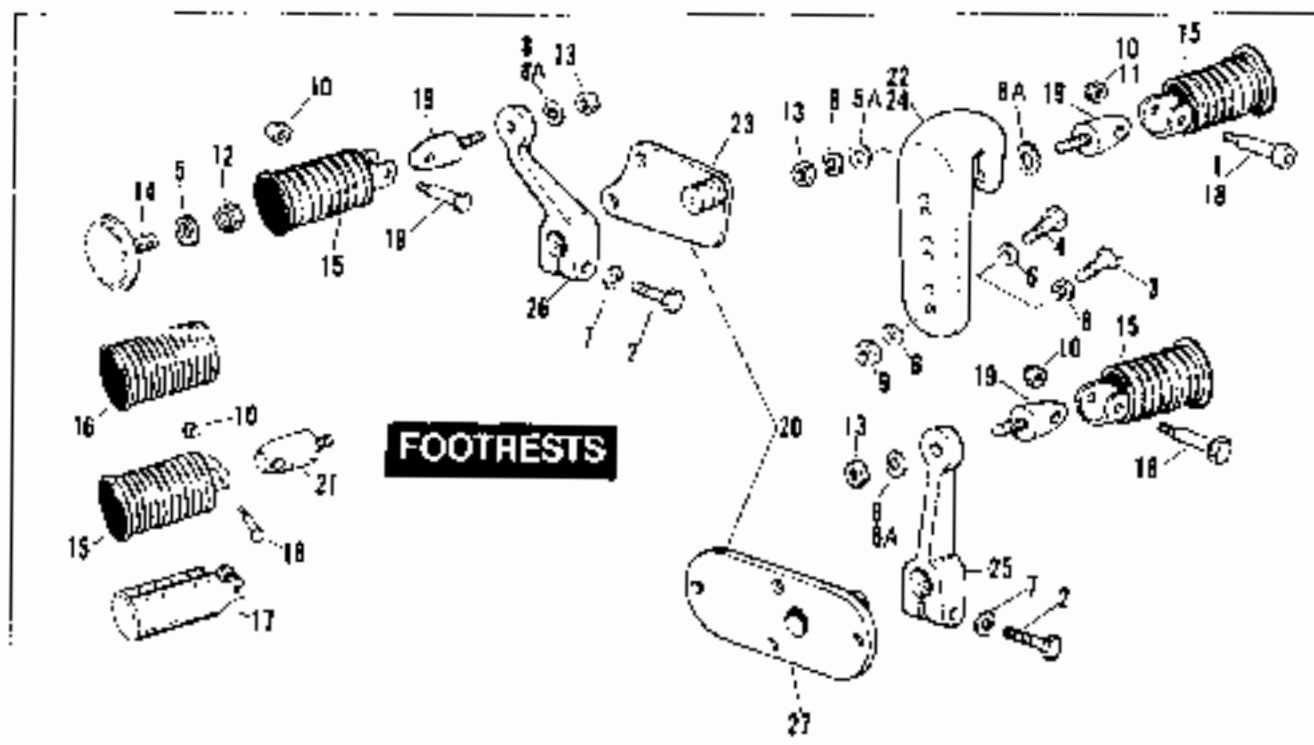


FOOTRESTS

A49

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	3636	SCREW, 5/16-18 x 1-1/2 socket hd. - shouldered (2)	Late 81 to * - FL - 90, Classic
	2	3625	BOLT, 1/4-28 x 1 hex. hd. (2)	65 to 77 - FL, FLH, FLH-80, Classic
	3	4716W	BOLT, 3/8-16 x 1-1/4 hex. hd. (4)	81 to * - FLH-80, Classic
	4	4720W	BOLT, 3/8-16 x 1-3/4 hex. hd. (4)	78 to 80 - FL, FLH, FLH-80, Classic
	5	6235	WASHER, 1/4 x 3/4 x 1/16 (2)	41 to * - FL, FLH, FLH-80, Classic
	5A	6379W	WASHER, 3/8 x 5/8 x 3/64 (2)	84 to * - FLH-80
	6	6781	WASHER, 3/8 x 13/16 x 1/16 (6 2-61 & later)	78 to * - FL, FLH, FLH-80, Classic
	7	7336	LOCKWASHER, 1/4 (2)	41 to 77 - FL, FLH, FLH-80, Classic
	8	7338	LOCKWASHER, 3/8 (2, 8-81 to 83, 4-84)	65 to * - FL, FLH, FLH-80, Classic
	8A	7145W	LOCKWASHER, 3/8 (2)	84 to * - FLH-80
	9	7633	LOCKNUT, 3/8-18 x 5/15 x 9/15 hex. (4)	78 to 80 - FL, FLH, FLH-80, Classic
	10	7725	LOCKNUT, 5/16-24 x 11/32 x 1/2 hex. (2)	41 to Early 81 - FL, FLH, FLH-80, Classic
	11	7739	LOCKNUT, 5/16-18 x 11/32 x 1/2 hex. (2)	Late 81 to * - FLH-80, Classic
	12	7742	LOCKNUT, 1/4-28 x 7/32 x 7/16 hex. (2)	41 to * - FL, FLH, FLH-80, Classic
	13	7776W	LOCKNUT, 3/8-24 x 9/32 x 9/16 hex. (2)	84 to * - FLH-80
		7900W	NUT, 3/8-24 x 5/16 x 9/16 hex. (2)	55 to 83 - FL, FLH, FLH-80, Classic
	14	50890-53	FOOTREST COVER KIT, Chrome	41 to * - FL, FLH, FLH-80, Classic
	15	50939-52	FOOTREST (2)	41 to * - FL, FLH, FLH-80, Classic
	16	50940-52	RUBBER footrest (2)	41 to * - FL, FLH, FLH-80, Classic
	17	50946-52	FOOTREST, only (2)	41 to * - FL, FLH, FLH-80, Classic
	18	50970-52	BOLT, "hex" (2)	41 to Early 81 - FL, FLH, FLH-80, Classic
	19	50973-65	STUD, footrest (2)	65 to * - FL, FLH, FLH-80, Classic
	20	52850-65	SET OF FOOTRESTS AND FITTINGS	65 to 77 - FL, FLH
	21	52863-74	SET OF footrest	41 to 64 - FL, FLH
	22	52865-77A	FOOTREST BRACKET right - adjustable	77 to * - FL, FLH, FLH-80, Classic
	23	52868-55	FOOTREST BRACKET right	65 to 77 - FL, FLH
	24	52890-77A	FOOTREST BRACKET left - adjustable	77 to * - FL, FLH, FLH-80, Classic
	25	52898-55	FOOTREST SUPPORT left	65 to 77 - FL, FLH
	26	52900-65	FOOTREST SUPPORT right	65 to 77 - FL, FLH
	27	60574-55	FOOTREST BRACKET left (for dual power)	65 to 77 - FL, FLH


NOTE: REFER TO DEALER ACCESSORY GUIDE FOR HIGHWAY FOOTREST KITS.

LUGGAGE BOX KING TOUR PAK

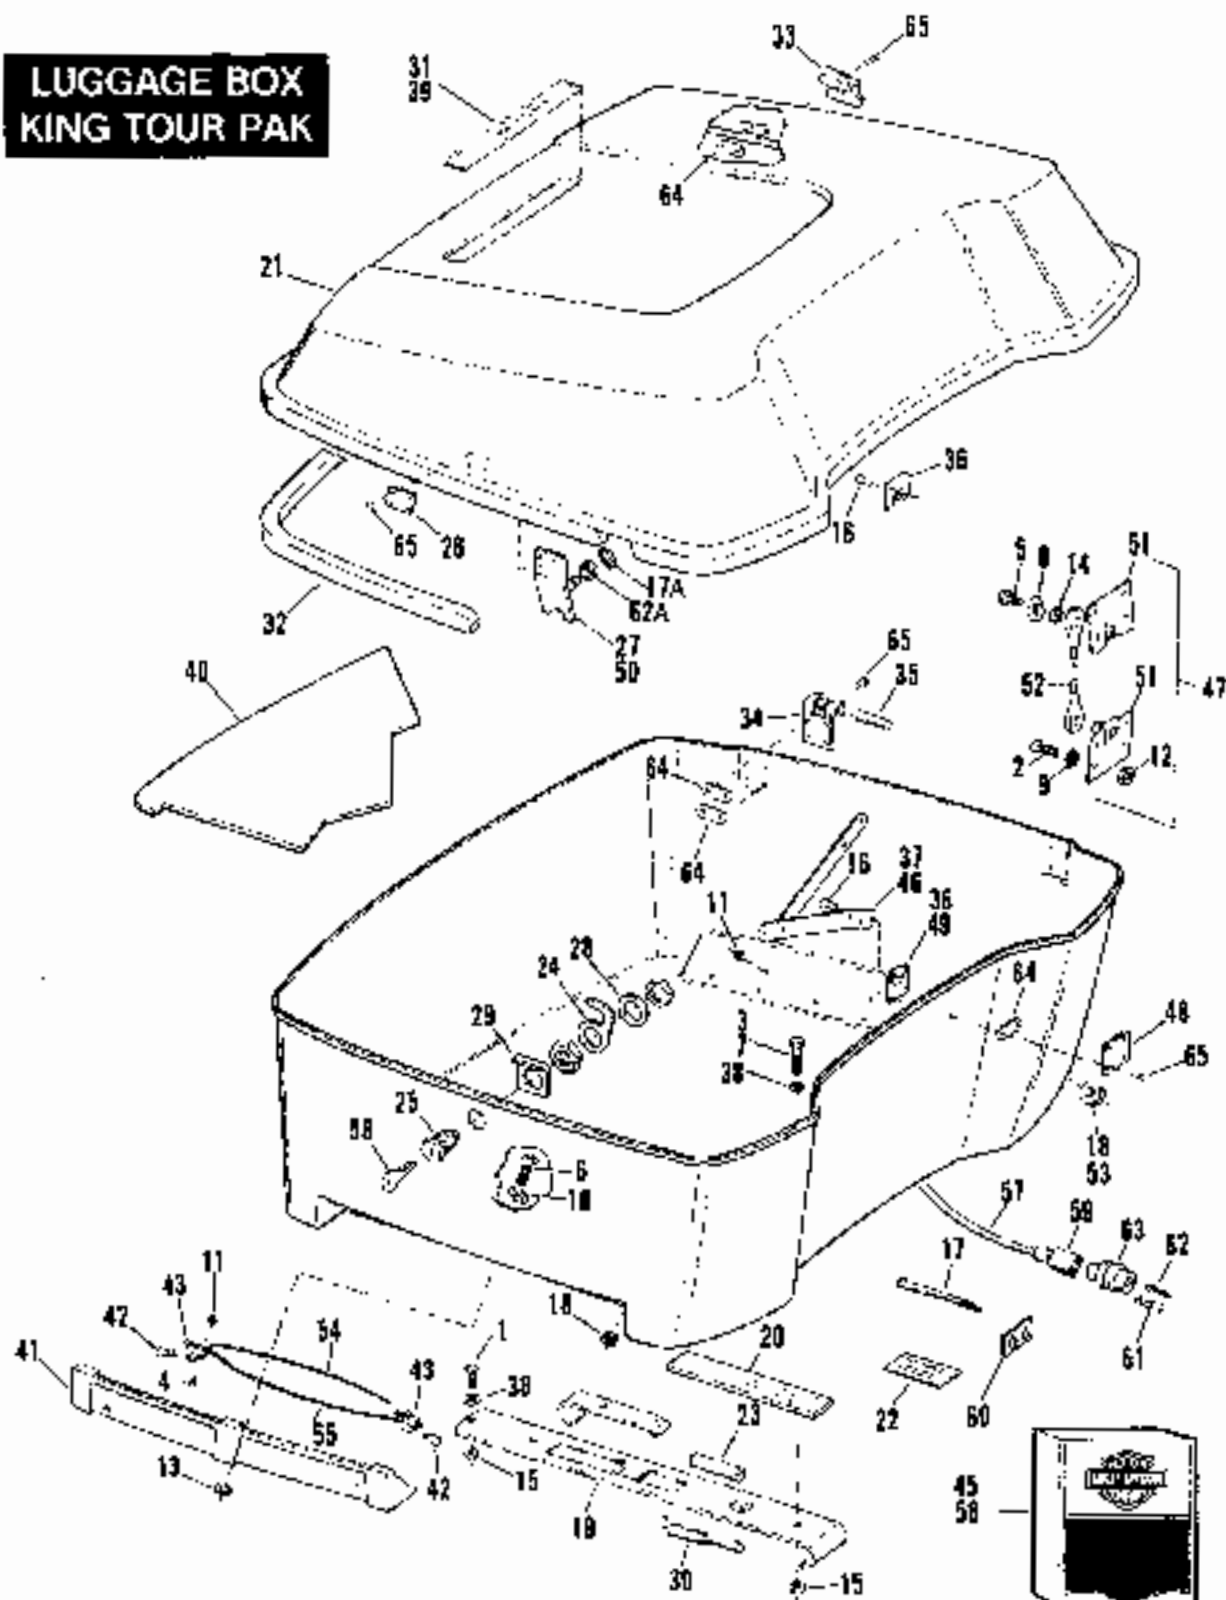


RETAIL PRICE	INDEX NO.	PART NO	NAME	USED ON
NOTE: REFER TO DEALER ACCESSORY CATALOG FOR ADDITIONAL PAINTED PARTS				
NOTE: See next column for luggage carrier parts				
		5538	SCREW, 1/4-20 x 1/2 Polaris painted (4)	80 to 82 - FL, FLH, FLH-80, Classic
		2774	SCREW, 1/4-20 x 5/8 Polaris painted (4)	49 to 79 - FL, FLH, FLH-80, Classic
2	2539	SCREW, No. 6-32 x 1/2 Polaris painted (3)	82 - FLH-80, Classic	
3	2561W	NUT, No. 6-32 x 1/2 hex. (2)	90 to 82 - FL, FLH, FLH-80, Classic	
4	2560	SCREW, No. 6-32 x 1/4 Polaris painted (10)	49 to 82 - FL, FLH, FLH-80, Classic	
5	2831	SCREW, No. 6-32 x 3/8 Polaris painted (2)	82 - FLH-80, Classic	
6	2869	SCREW, No. 8-32 x 1/2 Polaris painted (6)	49 to 82 - FL, FLH, FLH-80, Classic	
7	3767B	BOLT, 1/4-20 x 5/8 hex. (2)	49 to 79 - FL, FLH, FLH-80, Classic	
8	6570	WASHER, 1/4 x 1/2 x 3/16 (2)	82 - FLH-80, Classic	
9	7112	LOCKWASHER, No. 6 diameter (10)	82 - FLH-80, Classic	
10	7115	LOCKWASHER, No. 8 diameter (10)	49 to 82 - FL, FLH, FLH-80, Classic	
11	7520	ACORN NUT, No. 6-32 x 7/32 x 1/4 hex. (10)	49 to 82 - FL, FLH, FLH-80, Classic	
12	7590	NUT, No. 6-32 x 1/8 x 5/16 hex. (2)	82 - FLH-80, Classic	
13	7608	NUT, No. 6-32 x 1/8 x 1/16 hex. (10)	49 to 79 - FL, FLH, FLH-80, Classic	
	7621W	LOCKWASHER, No. 10-32 x 3/16 x 3/8 hex. (6)	80 to 82 - FL, FLH, FLH-80, Classic	
14	7609W	LOCKWASHER, No. 6-32 x 3/16 x 3/8 hex. (6)	82 - Classic	
15	7747	LOCKWASHER, 1/4-20 x 7/32 x 3/8 hex. (6)	49 to 82 - FL, FLH, FLH-80, Classic	
16	8420	RIVET (4) 2 - 82 & later	49 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic	
	8632	PUP RIVET (2)	82 - Classic	
17	10006	CABLE STRAP (2)	49 to 82 - FL, FLH, FLH-80, Classic	
	10007	CABLE STRAP (3)	49 to 79 - FL, FLH, FLH-80, Classic	
17A	11015	RETAINING RING	80 to 82 - FL, FLH, FLH-80, Classic	
18	11410	BRIGHTMET, side light wiring (2)	49 to 82 - FL, FLH, FLH-80, Classic	
19	53151-80A	BOX BRACKET, lower (2)	49 to 82 - FL, FLH, FLH-80, Classic	
20	53152-80	FOAM TAPE (2)	80 to 82 - FL, FLH, FLH-80, Classic	
21	53275-80A	COVER, tour-pak (caric back)	80 to 82 - FL, FLH, FLH-80	
	53292-80	COVER, bump pack	90 & 81 - Classic	
22	53292-79	WARNING LABEL, tour-pak	49 to 82 - FL, FLH, FLH-80, Classic	
23	53294-77	SPACER, box bracket	49 to 82 - FL, FLH, FLH-80, Classic	
24	53306-99	LOCKING HOOK, luggage box cover	49 to 82 - FL, FLH, FLH-80, Classic	
	53306-80	LOCKING HOOK, tour-pak cover	81 & 82 - FLH-80, Classic	
25	53307-80	LATCH, luggage box - with pins	49 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic	
26	53326-80A	LATCH PLATE, luggage box cover	49 to 82 - FL, FLH, FLH-80, Classic	
27	53329-80A	LATCH, luggage box cover	49 to 80 - FL, FLH, FLH-80, Classic	
28	53321-99	WASHER, locking gear	49 to 82 - FL, FLH, FLH-80, Classic	
29	53332-80	WASHER, body lock	49 to 82 - FL, FLH, FLH-80, Classic	
30	53404-79	SPRING, luggage box (2)	49 to 82 - FL, FLH, FLH-80, Classic	
31	53424-79	NAMEPLATE, luggage box - "KING TOUR-PAK" (brown)	49 to 82 - FL, FLH, FLH-80, Classic	
32	53425-80	SPACER, luggage box cover	40 to 82 - FL, FLH, FLH-80, Classic	
33	53426-80	HINGE, luggage box cover - upper (2)	49 to 82 - FL, FLH, FLH-80, Classic	
34	53427-80	HINGE, luggage box cover - lower (2)	49 to 82 - FL, FLH, FLH-80, Classic	
35	53428-80A	HINGE PIN, luggage box cover (2)	49 to 82 - FL, FLH, FLH-80, Classic	
36	53429-80	BRACKET, luggage box brace (2)	49 to 82 - FL, FLH, FLH-80, Classic	
37	53431-80	BRACE, luggage box	49 to 81 - FL, FLH, FLH-80, Classic	
38	53453-80	WASHER, box bracket (nylon) (6)	49 to 82 - FL, FLH, FLH-80, Classic	
39	53434-80	NAMEPLATE, luggage box - "KING TOUR-Pak" (black)	49 to 82 - FL, FLH, FLH-80, Classic	
40	53435-80	NAIL, luggage box	49 to 82 - FL, FLH, FLH-80, Classic	
41	53437-79	LENS, luggage box side light (2)	49 to 82 - FL, FLH, FLH-80, Classic	
42	53438-79	BULB, luggage box side light (2)	49 to 82 - FL, FLH, FLH-80, Classic	
43	53440-79	SOCKET, luggage box side light (4)	49 to 82 - FL, FLH, FLH-80, Classic	

LUGGAGE BOX KING TOUR PAK

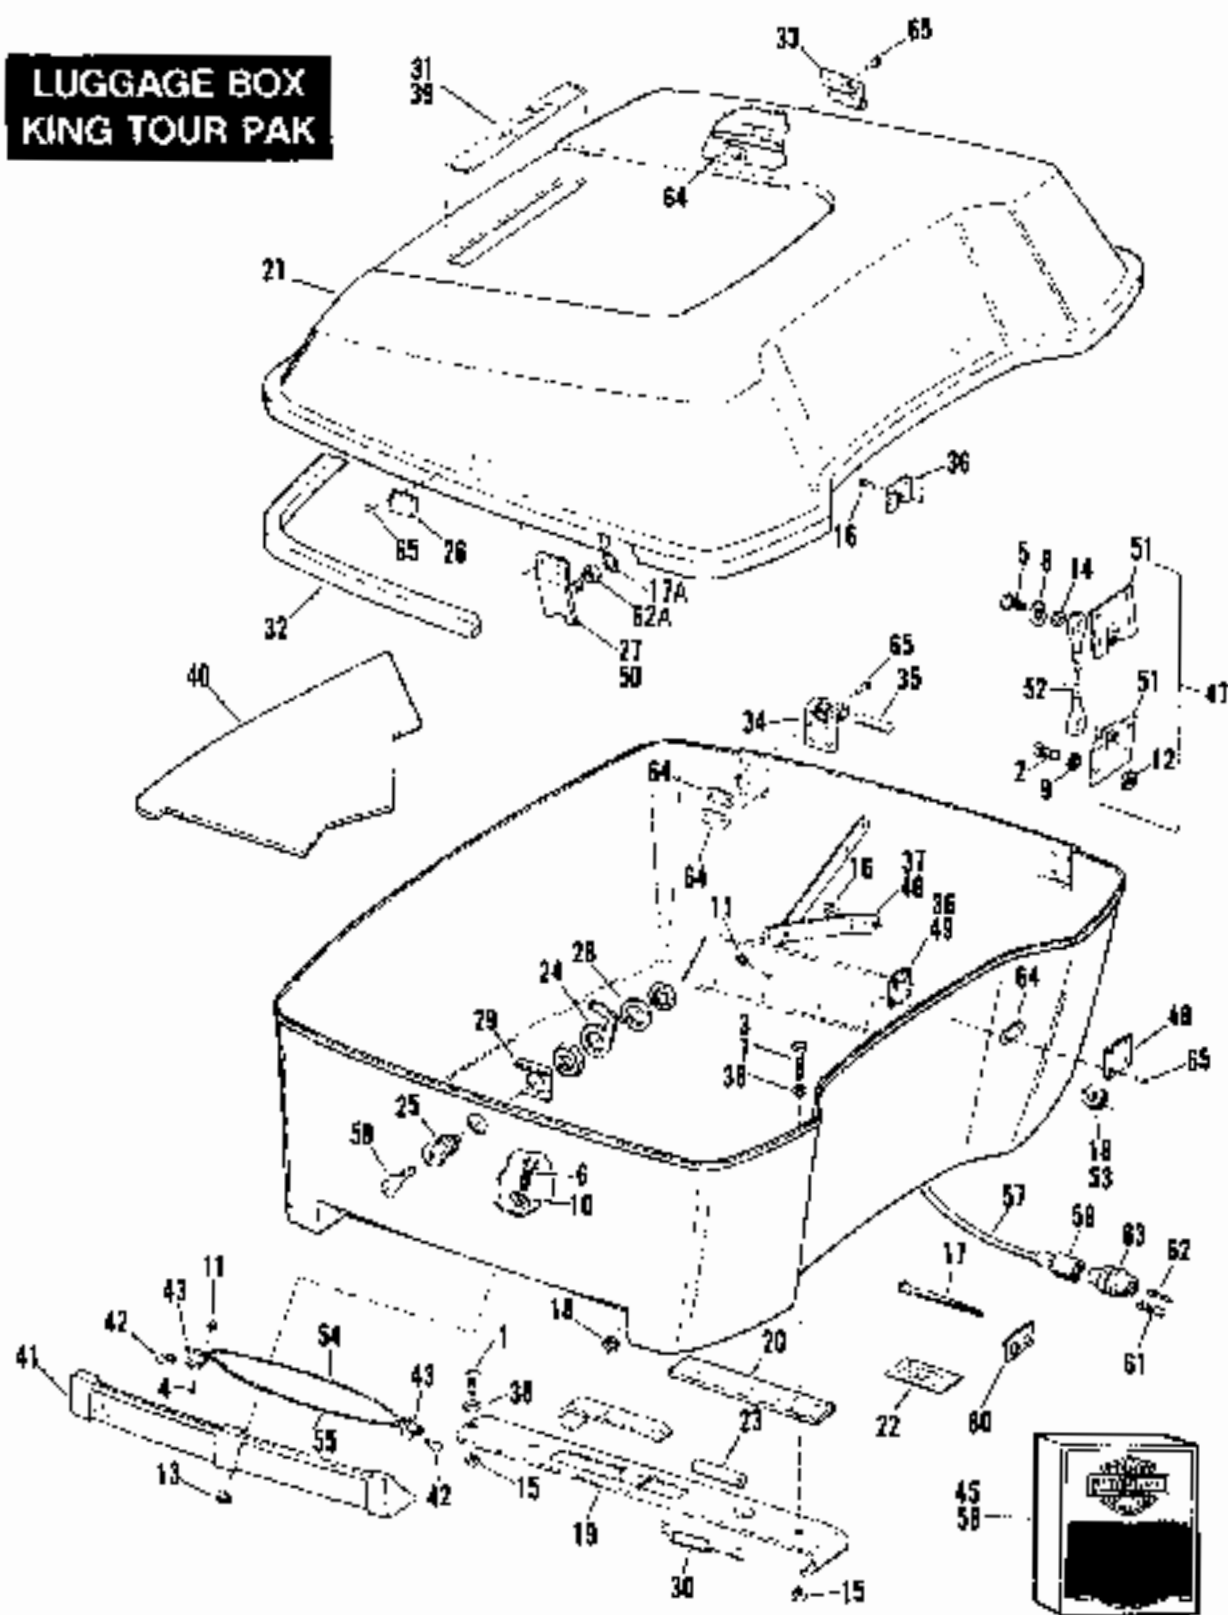


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
NOTE: REFER TO DEALER ACCESSORY GUIDE FOR ADDITIONAL PAINTED PARTS				
	15	53457-79	LIGHT KIT, luggage box (includes items 4, 6, 10, 11, 13, 17, 18, 22, 41-43, 53-57, 59 & 60)	49 to 82 - FL, FLH, FLH-80 Classic
46		53477-80	BRACE ASSEMBLY, luggage box - with brackets	Late 60 & 61 - FL, FLH, FLH-80 Classic
47		53477-90A	BRACE ASSEMBLY, luggage box - with brackets	82 - FLH-80 Classic
48		53478-80	BACKING PLATE (2)	Late 60 to 82 - FL, FLH, FLH-80 Classic
49		53479-80	BRACKET, luggage box brace (2)	Late 60 to 81 - FL, FLH, FLH-80 Classic
50		53513-81	LATCH, luggage box cover	91 & 92 - FLH-90 Classic
51		53563-82	BRACKET, cover to box cable (2)	82 - FLH-80 Classic
52		53564-82	CABLE, cover to box	82 - FLH-80 Classic
53		57978-63	GROMMET, side light wiring	49 to 82 - FL, FLH, FLH-80 Classic
54		70643-79A	CABLE ASSEMBLY, green - side light (2)	49 to 62 - FL, FLH, FLH-80 Classic
55		70644-79A	CABLE ASSEMBLY, black - side light (2)	49 to 82 - FL, FLH, FLH-80 Classic
56		70645-79	1/2 RING HARNESS, rear fender - KING TOUR-PAK	49 to 62 - FL, FLH, FLH-80 Classic
57		70646-79	1/2 RING HARNESS, luggage box side light	49 to 62 - FL, FLH, FLH-80 Classic
58		71676-62	KEY (includes serial no.)	49 to 82 - FL, FLH, FLH-80 Classic
59		72052-79	RECEPTACLE, side light wire	49 to 82 - FL, FLH, FLH-80 Classic
60		75775-74	CONNECTOR TAB, King Tour Pak wiring harness	49 to Early 80 - FL, FLH, FLH-80 Classic
61		74530-77A	SOCKET, King Tour Pak wiring harness	49 to 82 - FL, FLH, FLH-80 Classic
62		74536-77A	PIN, King Tour Pak wiring harness	49 to 82 - FL, FLH, FLH-80 Classic
62A		90630-60	ROLLER, saddlebag latch - 0.56 diameter	60 to 92 - FL, FLH, FLH-80 Classic
		30631-80	ROLLER, saddlebag latch - 0.45 diameter	80 to 82 - FL, FLH, FLH-80 Classic
63		90771-79	FLUID, King Tour Pak wiring harness	49 to 82 - FL, FLH, FLH-80 Classic
64		90954-63	BACKING PLATE (10, 11 - Late 60 & later)	49 to 92 - FL, FLH, FLH-80 Classic
65		90985-63	RIVET (24: 26 - Late 80 & later)	49 to 92 - FL, FLH, FLH-80 Classic

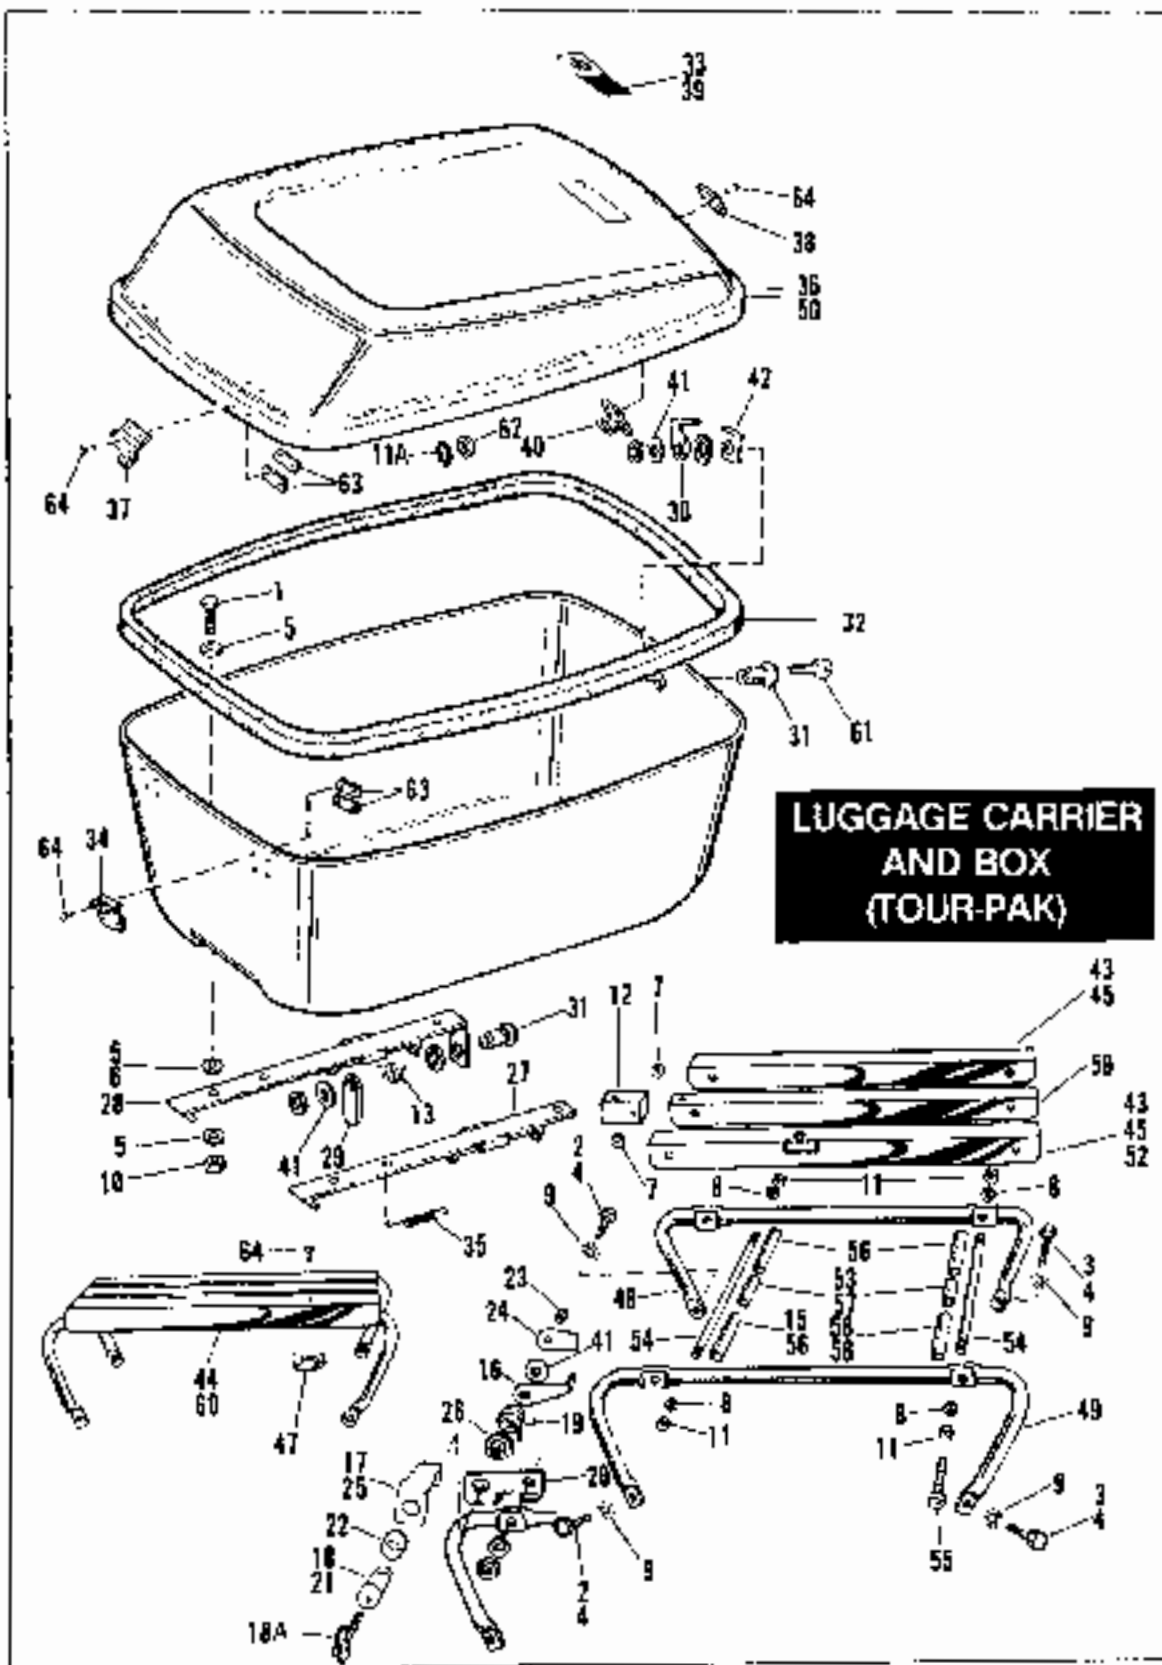

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
--------------	-----------	----------	------	---------

NOTE: REFER TO DEALER ACCESSORY GUIDE FOR PAINTED PARTS.

1	3487	BOLT, 1/4-20 x 3/4 hex (1.14)	49 to 82 - FL, FLH, FLH-80
2	3974HW	BOLT, 5/16-24 x 3/4 hex (nd. 12)	Late 79 to * - FL, FLH, FLH-80, Classic
3	3996	BOLT, 5/16-24 x 3/4 hex (nd. 12)	Late 79 to * - FL, FLH, FLH-80, Classic
4	4311W	BOLT, 5/16-24 x 1-5/8 hex (nd. 14)	58 to Early 78 - FL, FLH, FLH-80, Classic
5	6253W	WASHER, 1/4 x 3/4 x 17/16 (12) (8 - Late 77 & later)	49 to 82 - FL, FLH, FLH-80
6	6E47	WASHER, 3/32 x 1-1/2 x 17/16 nylon (4)	Late 77 to 82 - FL, FLH, FLH-80
7	6762	WASHER, 5/16 x 11/16 x 17/16 (2)	Late 79 to * - FL, FLH, FLH-80, Classic
8	7041	LOCKWASHER, 5/16 (4)	58 to * - FL, FLH, FLH-80, Classic
9	7232	LOCKWASHER, 5/16 (external lock) (4)	58 to * - FL, FLH, FLH-80, Classic
10	7E88	LOCKNUT, 1/4-20 x 5/16 x 17/16 hex (4)	49 to 82 - FL, FLH, FLH-80
11	7753	NUT, 5/16-24 x 1/4 x 1/2 hex (4)	49 to * - FL, FLH, FLH-80
11A	11010	RETAINING PLUG	80 to 82 - FL, FLH, FLH-80
12	5218E-79	SUPPORT BLOCK	1979 to Early 84 - FL, FLH, FLH-80, Classic
	5218E-84	SUPPORT BLOCK	Late 84 to * - FLH-80
13	53291-69	SPRING, luggage box lock	N/A 49 to 76 - FL, FLH
14	53293-79	WARNING LABEL, Tour-Pak	Late 84 to * - FLH-80
15	53294-77	SPACER, left front (Use with 53290-77A LOCK)	77 to Early 84 - FL, FLH, FLH-80, Classic
16	53295-77	LOCKING EAR, luggage box to carrier	77 to Early 82 - FL, FLH, FLH-80
17	53297-77	COVER, lock assembly	77 to Early 82 - FL, FLH, FLH-80
18	53298-77A	LOCK ASSEMBLY, luggage carrier Consists of:	77 to 82 - FL, FLH, FLH-80
		KEY (specify key no. 1 to 100)	
18A	48152-82	KEY	
19	53291-77	SPRING	
20	53296-77	BRACKET	
21	53580-82	LOCK	
22	53581-82	SPACER	
23	53582-82	SCREW	
24	53584-82	EARM, lock release	
25	53586-82	COVER, lock assembly	
26	84850-87	NUT, lock bracket	
27	53302-69	BOX BRACKET, left (2 - Late 77 & later)	49 to 82 - FL, FLH, FLH-80
28	53304-69	BOX BRACKET, right (locking)	N/A 49 to 76 - FL, FLH
29	53305-69	LOCKING EAR, luggage box to carrier	N/A 49 to 76 - FL, FLH
30	53306-69	LOCKING HOOK, luggage box cover	49 to 83 - FL, FLH, FLH-80
31	53307-69	LOCK (with key) (2 - Early 82 & earlier)	49 to 82 - FL, FLH, FLH-80
32	53310-69A	GASKET, luggage box cover	N/A 49 to 82 - FL, FLH, FLH-80
33	53311-69	NAMEPLATE, "Tour-Pak"	49 to 82 - FL, FLH, FLH-80
34	53312-69	HINGE, luggage box cover (lower) (2)	49 to 82 - FL, FLH, FLH-80

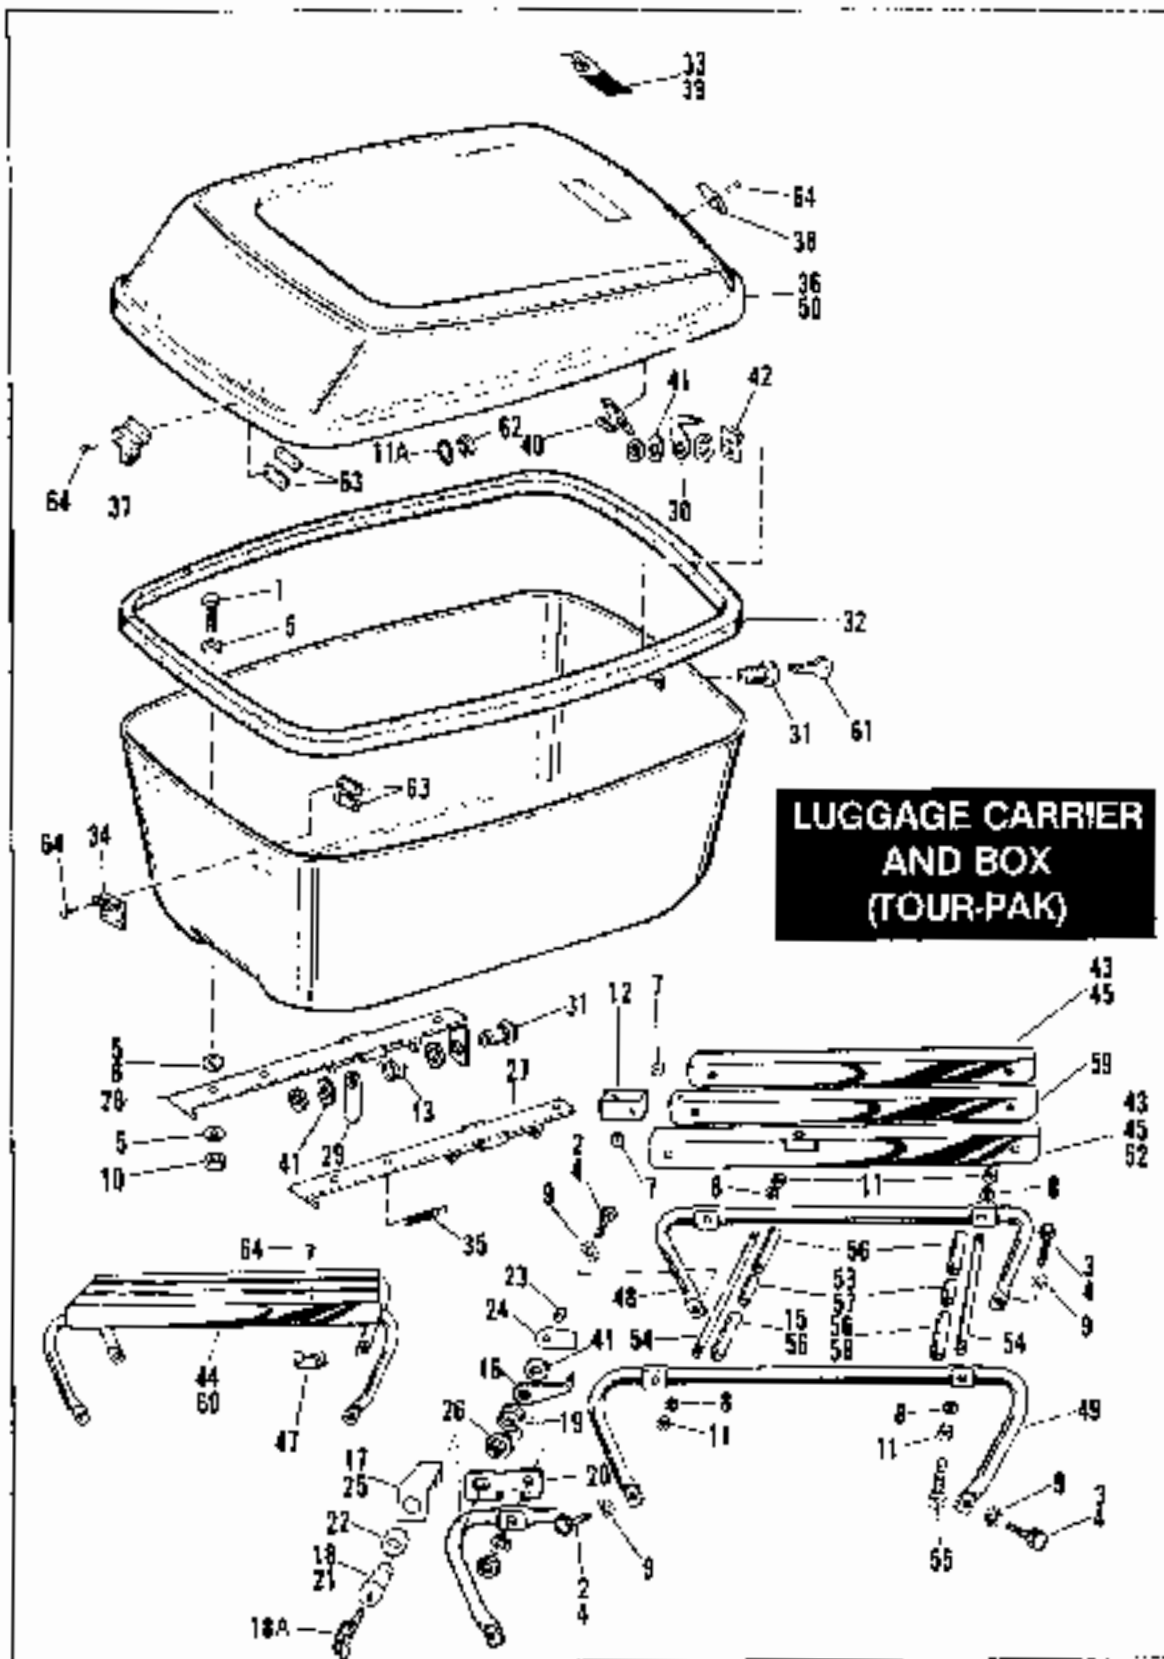


**LUGGAGE CARRIER
AND BOX
(TOUR-PAK)**

RETAIL PRICE	INDEX NO	PART NO.	N A M E	USED ON
NOTE: REFER TO DEALER ACCESSORY GUIDE FOR PAINTED PARTS.				
	36	53319-09	SPRING, luggage box (2)	49 to 82 — FL, FLH, FLH-80
	38	53321-58A	COVER, luggage box (white)	N/A 49 to 82 — FL, FLH, FLH-80
	37	53325-99	HINGE, luggage box cover — upper (2)	49 to 82 — FL, FLH, FLH-80
	38	53326-69A	LATCH PLATE, luggage box cover	49 to 82 — FL, FLH, FLH-80
	39	53327-77	NAMERPLATE, "Electric Slide Classic" (chrome)	77 to 82 — FL, FLH, FLH-80 Classic
	40	53329-69A	LATCH, luggage box cover	49 to 82 — FL, FLH, FLH-80
	41	53331-60	WASHER, locking bar (2)	49 to Early 82 — FL, FLH, FLH-80
	42	53332-69	WASHER, lock, lock	49 to 82 — FL, FLH, FLH-80
	43	53339-60	OUTER CHANNEL KIT	83 to * — FLH-80
	44	53400-58C	LUGGAGE CARRIER	58 to 82 — FL, FLH, FLH-80 Classic
	45	53409-85	OUTER CHANNEL (2)	83 to * — FLH-80
	47	53410-83	RECEPTACLE, leaf spring (4)	83 to * — FLH-80
	48	53417-65A	LEFT BRACE	65 to * — FL, FLH, FLH-80, Classic
	49	53418-65A	RIGHT BRACE	65 to * — FL, FLH, FLH-80, Classic
	50	53419-90	COVER, luggage box — with hardware (black)	80 & 81 — FL, FLH, FLH-80
		53419-80A	COVER, luggage box — with hardware (black)	82 — FLH-80
	52	53450-52	OUTER CHANNEL (2)	49 to 82 — FL, FLH, FLH-80 Classic
	53	53453-84	SPACER (2)	Late 84 to * — FLH-80
	54	53454-52	CROSS STUD (2)	49 to Early 84 — FL, FLH, FLH-80 Classic
	55	53454-84	SCREW, outer channel mounting (4)	Late 84 to * — FLH-80
	56	53455-52	SPACER (4)	49 to * — FL, FLH, FLH-80, Classic
	57	53456-52	SPACER (short) (2)	49 to Early 79 — FL, FLH, FLH-80, Classic
	58	53456-84	SPACER	Late 84 to * — FLH-80
	59	53492-79	CENTER CHANNEL	49 to * — FL, FLH, FLH-80, Classic
	60	53548-84A	LUGGAGE CARRIER	Late 84 to * — FLH-80
		53550-79A	LUGGAGE CARRIER	83 & Early 84 — FLH-80
	61	71626-62	KEY (include serial no.)	N/A 49 to 82 — FL, FLH, FLH-80
	62	90833-90	HOLLER, notch — 3.63 diameter	80 & 81 — FL, FLH, FLH-80
		90831-80	HOLLER, notch — 3.45 diameter	82 — FLH-80
	63	90964-53	PACKING PLATE (8)	49 to 82 — FL, FLH, FLH-80
	64	90965-63	RIVET (20: E 83)	49 to * — FL, FLH, FLH-80


1967 & LATER

1966 & EARLIER


SHOCK ABSORBERS

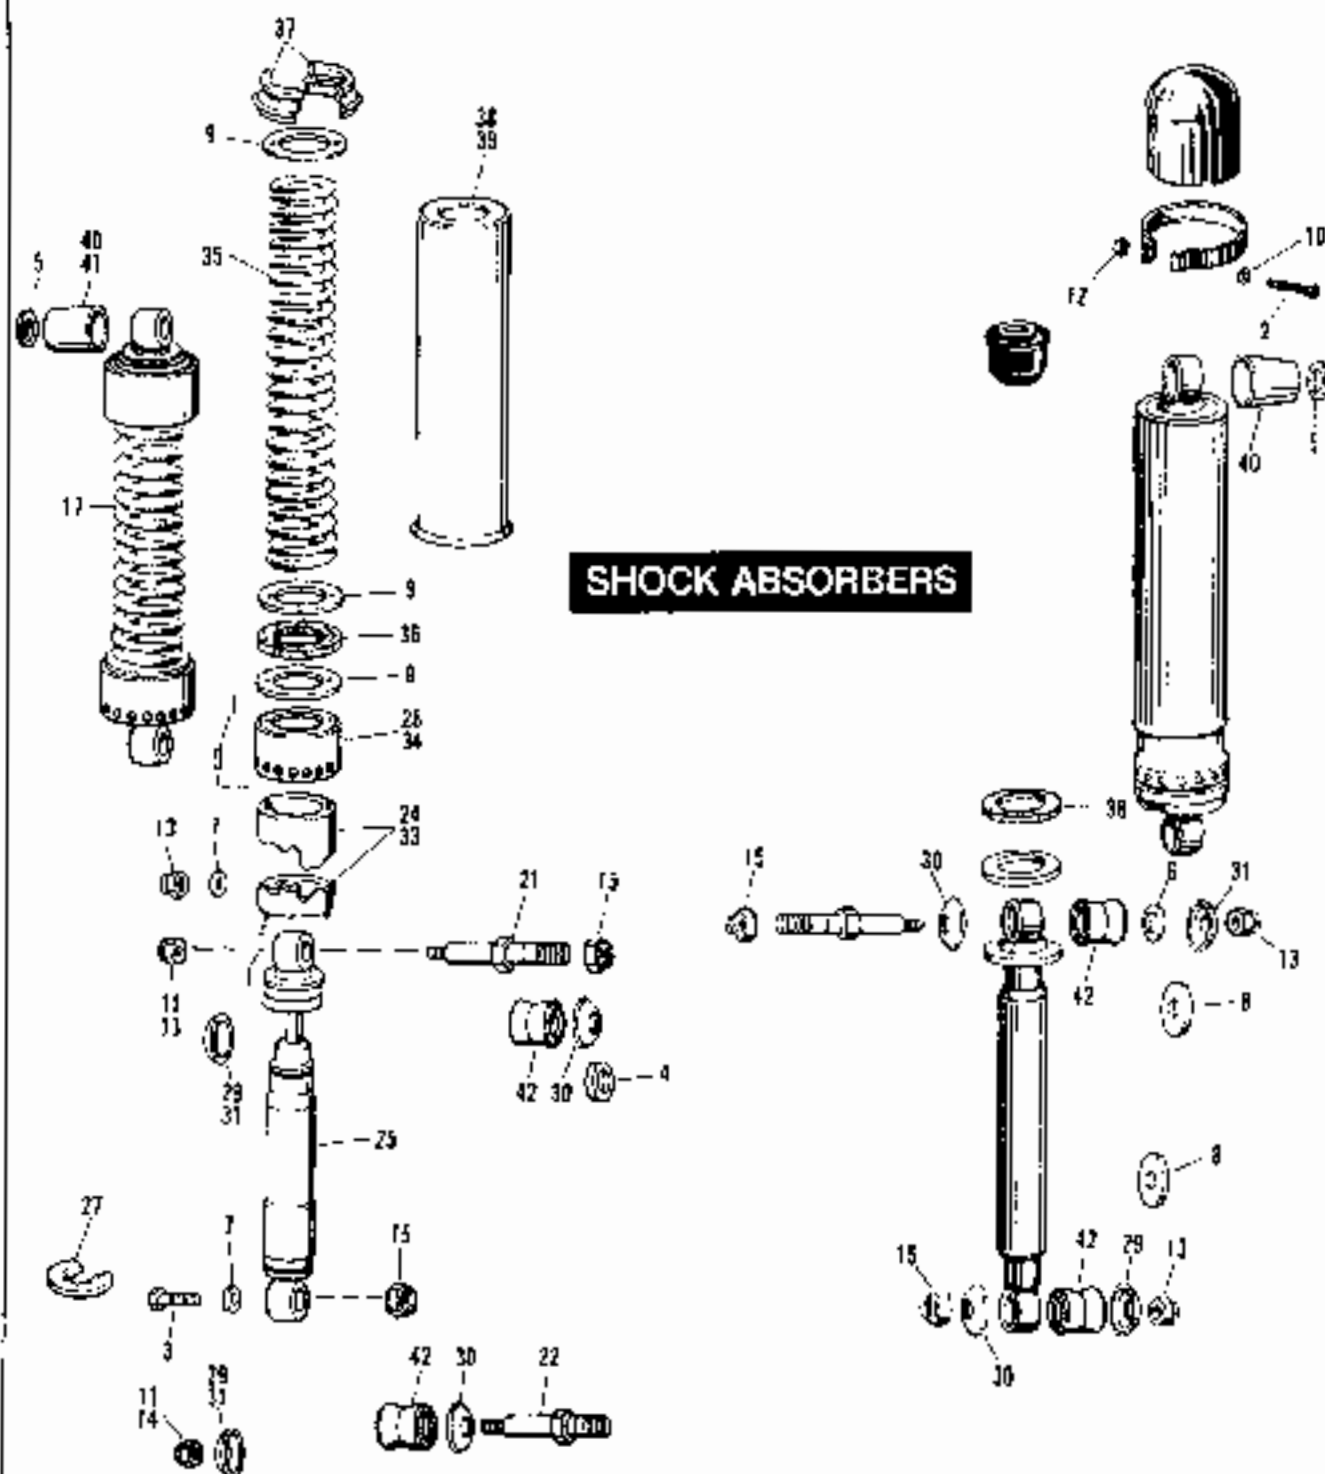


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	804	ROL: Pin (2) (4)	58 to 72 — FL, FLH
	2	891	SCREW, No. 10-24 x 1 Pan-head (4) (2)	58 to 64 — FL, FLH
	3	1956	BOLT, 1/2-20 x 2-1/4 hex. hd. (2)	73 to * — FL, FLH, FLH-80, Classic
	4	5960W	SPACER, upper stud (not used with safety guards) (2)	67 to 79 & 81 — FL, FLH, FLH-80, Classic
	5	6373W	WASHER, 3/8 x 5/8 x 1-1/6 (2)	Late 70 to * — FL, FLH, FLH-80, Classic
	6	6415	WASHER, 3/8 x 1 x 5/6 (4)	58 to 64 — FL, FLH
	7	6418	WASHER, 1/2 x 1 x 3/32 (4)	73 to * — FL, FLH, FLH-80, Classic
	8	6722B	WASHER, 5/8 x 1-1/8 x 1/32 (4)	58 to 64 — FL, FLH
	9	6910W	WASHER, 1-21/32 x 2-15/32 x 3/32 1/2 x 1/8 hex. (3)	67 to * — FL, FLH, FLH-80, Classic
	10	7019	LOCKWASHER, No. 10 (2)	58 to 64 — FL, FLH
	11	7572W	LOCKNUT, 1/2-20 x 19-32 x 3-4 hex. (2)	67 to Early 70 — FL, FLH
	12	7920W	NUT, No. 10-24 x 1/8 x 5/8 hex. (2)	58 to 64 — FL, FLH
	13	7775	LOCKNUT, 3/8-24 x 7/16 x 3/4 hex. (4)	58 to 68 — FL, FLH Late 70 to * — FL, FLH, FLH-80, Classic
	14	7812W	LOCKNUT, 1/2-20 x 5/16 x 3/4 hex. (2)	Late 72 — FL, FLH
	15	7993	LOCKNUT, 5/8-18 x 1/8 x 15/16 hex. (4)	58 to * — FL, FLH, FLH-80, Classic
	17	54500-73	REAR SHOCK ABSORBER, complete (2)	73 to 80 — FL, FLH, FLH-80, Classic
		54500-81	REAR SHOCK ABSORBER, complete (chrome) (2)	81 to * — FLH-80, Classic
	21	54515-73	UPPER STUD (2)	73 to * — FL, FLH, FLH-80, Classic
	22	54517-87	LOWER STUD (2)	67 to Early 72 — FL, FLH
	24	54530-67	ROTATING CAM, shock absorber (2)	N/A 67 to 72 — FL, FLH
	25	54534-73	SHOCK ABSORBER, only	73 to 80 — FL, FLH, FLH-80, Classic
		54534-81	SHOCK ABSORBER, only	81 to * — FLH-80, Classic
	27	54538-73	CAM SUPPORT (2)	73 to * — FL, FLH, FLH-80, Classic
	28	54540-67	CAM SLEEVE, rear shock absorber (2)	N/A 67 to 72 — FL, FLH
	29	54543-65	OUTER WASHER, lower — upper 73 to 72 (4)	65 to 72 — FL, FLH
	30	54544-65	INNER WASHER (4)	65 to 72 — FL, FLH
	31	54545-55	OUTER WASHER, upper — lower Late 72 (2)	Late 65 to Early 70 — FL, FLH Late 72 — FL, FLH, FLH-80, Classic
	33	54558-73	ROTATING CAM, shock absorber (2)	73 to 80 — FL, FLH, FLH-80, Classic
	34	54559-73	CAM SLEEVE, rear shock absorber (2)	73 to * — FL, FLH, FLH-80, Classic
	36	54570-73	SPRING, shock absorber (clack)	73 to * — FL, FLH, FLH-80, Classic
	38	54580-56	UPPER SEAL	56 to * — FL, FLH, FLH-80, Classic
	37	54581-57	SPRING RETAINER, upper (2)	67 to * — FL, FLH, FLH-80, Classic
	38	54702-67	COVER, shock absorber spring (2)	67 to 72 — FL, FLH
	39	54702-73	COVER, shock absorber spring (2)	73 to * — FL, FLH, FLH-80, Classic
	40	54704-55	COVER, shock absorber stud — 3/8" hole (2)	Early 65 — FL, FLH; Late 70 to * — FL, FLH, FLH-80, Classic
	41	54708-55	COVER, shock absorber stud — 1/2" hole	N/A Late 65 to Early 70 — FL, FLH
	42	85210-42A	BUSHING (rubber) (2)	58 to 72 — FL, FLH

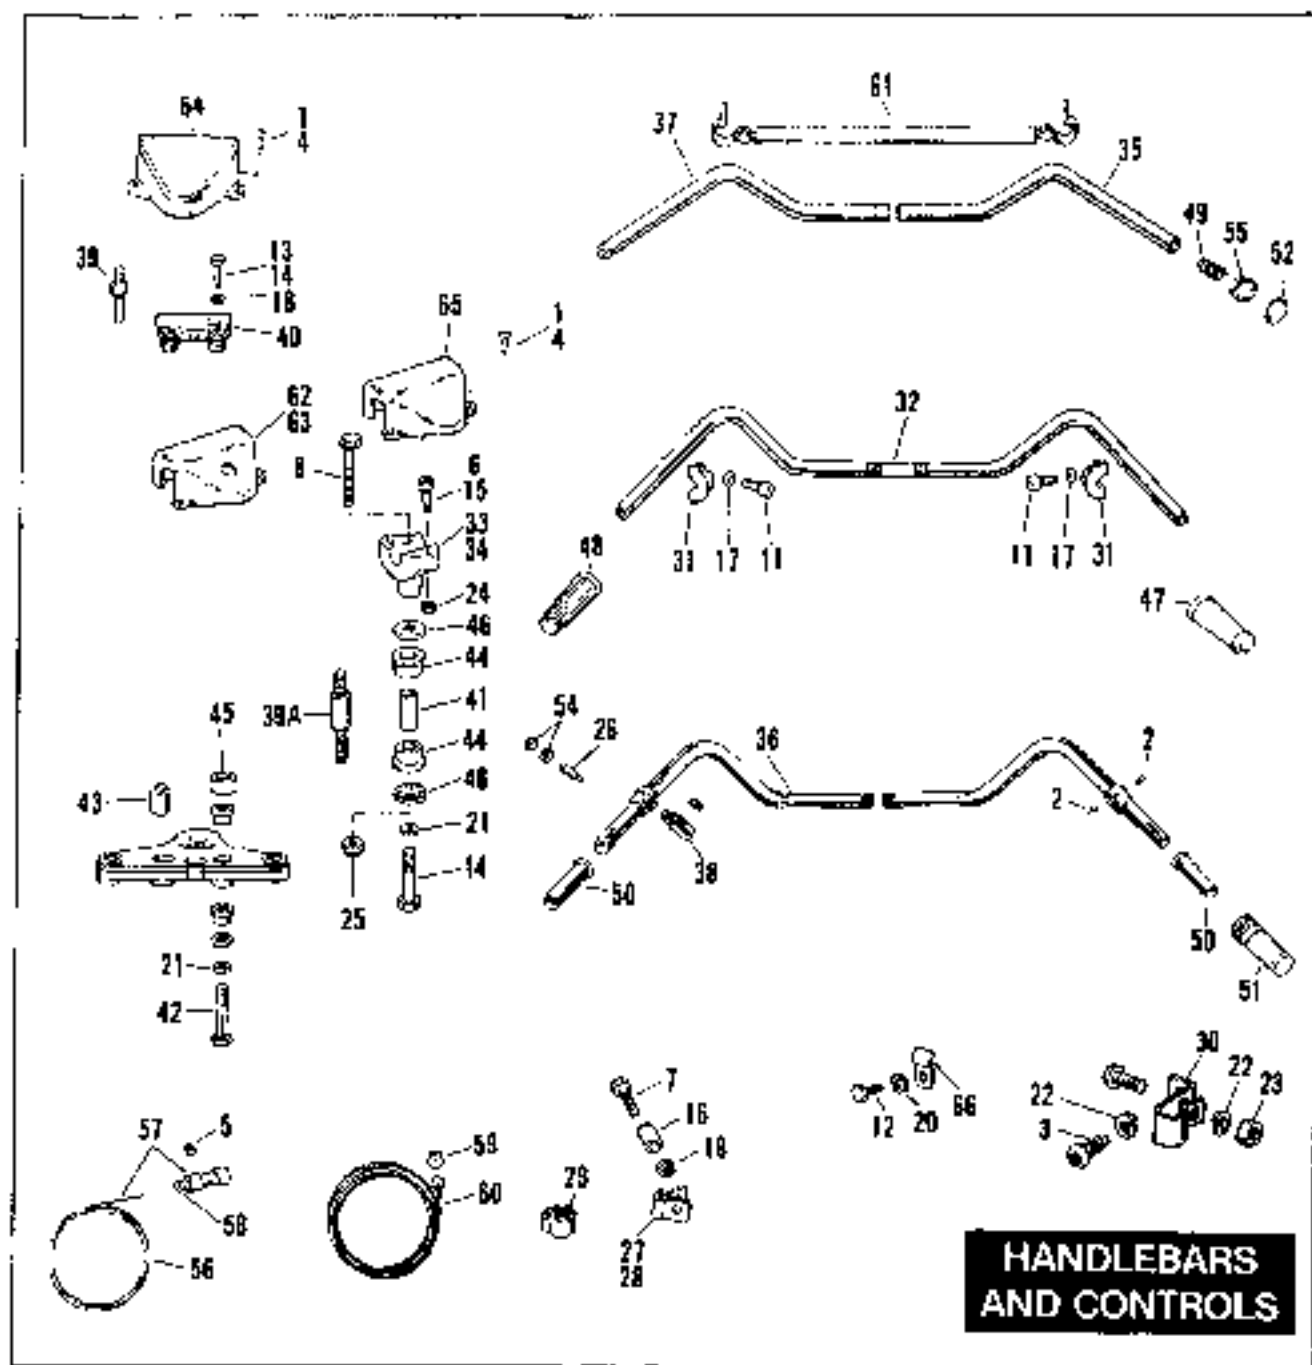


RETAIL PRICE	INDEX NO	PART NO	NAME	USED ON
NOTE: Only current production handlebar assemblies are sold for parts price.				
	1	915	SCREW, 5/16-24 x 5.8 self-lapping Phillips hd. (2)	Late 79 & Early 80 FL, FLH-80, Classic
	2	9594	SCREW, No. 8-22 x 1/4 spacer, pan hd. (4)	54 to 79 — FL, FLH, FLH-80, Classic
	3	2663	SCREW, No. 10-24 x 3/8 spacer, pan hd.	68 to 74 — FL, FLH
	4	9764W	SCREW, 1/4-20 self-lapping Phillips hd. (2)	68 to 83 — FL, FLH, FLH-80, Classic
	5	9207	SET SCREW, No. 10-32 x 1/16 socket hd.	N/A 54 to 74 — FL, FLH
	6	9213	SCREW, 5/16-18 x 1-1/4 socket hd. (4)	80 & Early 81 FL, FLH, FLH-80, Classic
				Late 80 to * — FL-80
	7	9429W	BOLT, 1/2-20 x 3/4 hex hd.	N/A 71 to 74 — FL, FLH
	9	3431	BOLT, 1/2-12 x 3/4 hex hd. (2)	Late 80 to 83 — FL, FLH, FLH-80, Classic
		3607	BOLT, 1/2-12 x 2 1/4 hex hd. (2)	Early 84 — FLH-80
	11	4315	SCREW, 1/4-20 x 7/8 hex socket hd. (4)	82 to * — FLH-80, Classic
	12	3790	BOLT, 1/4-28 x 1/16 hex hd.	52 to 85 — FL, FLH
	13	4326W	BOLT, 3/8-24 x 1-1/8 hex hd.	60 to 72 — FL, FLH
				76 to 79 — FL, FLH, FLH-80, Classic
	14	4414	BOLT, 1/2-20 x 2 1/2 hex hd. (2)	73 to 79 — FL, FLH, FLH-80, Classic
	15	4816	SCREW, 5/16-18 x 1-1/2 hex, socket hd. (4)	Late 81 to Early 83 — FLH-80, Classic
	16	9915E	SPACER, throttle cable clamp.	N/A 71 to 74 — FL, FLH
	17	6098	WASHER, 1/4 x 1/16 x 3/32 (4)	82 to * — FLH-80, Classic
	18	6079W	WASHER, 5/8 x 5/8 x 3/64 (2)	60 to 72 — FL, FLH
				76 to 79 — FL, FLH, FLH-80, Classic
	19	7039W	LOCKWASHER, No. 12	71 to 74 — FL, FLH
	20	7036	LOCKWASHER, 1/4	52 to 65 — FL, FLH
	21	7058	LOCKWASHER, 1/2 (2)	63 to * — FL, FLH, FLH-80, Classic
	22	7059	LOCKWASHER, No. 10 (2)	69 to 74 — FL, FLH
	23	7620W	NUT, No. 10-24 x 1/8 x 3/8 hex	68 to 74 — FL, FLH
	24	7740	LOCKNUT, 5/16-18 x 1/4 x 1/2 hex. (2)	84 to * — FLH-80
		7748W	NUT, 5/16-18 x 1/4 x 1/2 hex. (4, 2 — 84 & later)	80 to * — FL, FLH, FLH-80, Classic
	25	7769W	LOCKNUT, 1/2-13 x 1 1/2 x 3/4 hex. (2)	Late 83 to * — FLH, FLH-80, Classic
	26	9260	COLLIER, handlebar grip.	Late 79 & 74 — FL, FLH
	27	9957	CLIP, control coil (timer)	N/A 50 to 54 — FL, FLH
			(1971 & later include — gas tank)	71 to 78 — FL, FLH, FLH-80
	28	9958	CLAMP, throttle cable (brake link)	60 to 73 — FL, FLH
	29	9983	CLIP, control coil (carburetor)	49 to 65 — FL, FLH
	30	45218-52	CLAMP, throttle cable (main steering head)	N/A 68 to 72 — FL, FLH, 74 — FL, FLH
	31	45044-82	CLAMP, handlebar (2)	82 to * — FLH-80, Classic
	32	55919-75	HANDLEBAR, only	80 & 81 — FL, FLH, FLH-80, Classic
		55919-82	HANDLEBAR, only	82 to * — FLH-80, Classic
	33	55940-79A	CLAMP, handlebar — lower right	80 to 83 — FL, FLH, FLH-80, Classic
		55940-82	CLAMP, handlebar — lower right	84 to * — FLH-80
	34	55941-79A	CLAMP, handlebar — lower left	80 to 83 — FL, FLH, FLH-80, Classic
		55941-82	CLAMP, handlebar — lower left	84 to * — FLH-80
	35	56044-77	HANDLEBAR SIDE, right, bushhorn (chrome)	N/A 72 to 74 — FL, FLH
		56044-75	HANDLEBAR SIDE, right, bushhorn (chrome)	75 to 79 — FL, FLH, FLH-80, Classic
	36	56056-77	HANDLEBAR SIDE, left, bushhorn (chrome)	N/A 72 to 74 — FL, FLH
	37	56056-75	HANDLEBAR SIDE, left, bushhorn (chrome)	75 to 79 — FL, FLH, FLH-80, Classic
	38	56070-81	CLIP, wire routing (4)	92 & 93 — FLH-80, Classic
		56070-83	CLIP, wire routing (4)	84 to * — FLH-80
	39	56102-80	HANDLEBAR STUD, in-mount radio speaker (2)	N/A 60 to 79 — FL, FLH
	39A	56105-84	STUD, handlebar mounting (2)	Late 84 to * — FLH-80
	40	56115-77	HANDLEBAR CLAMP, upper	60 to * — FL, FLH, FLH-80, Classic
	41	56150-73	SPACER, handlebar mounting (2)	73 to Early 84 — FL, FLH, FLH-80, Classic
	42	56154-52	BOLT, upper mounting (2)	N/A 60 to 72 — FL, FLH
	43	56158-49	HUBBER BUSH (2)	49 to 72 — FL, FLH
	44	56158-73	HUBBER BUSHING, handlebar mounting (4)	73 to * — FL, FLH, FLH-80, Classic
	45	56159-49	HUBBER WASHER (2)	N/A 48 to 72 — FL, FLH
	46	56159-73	CUP WASHER, handlebar mounting (4)	73 to * — FL, FLH, FLH-80, Classic
	47	56201-02A	PAIR OF HANDLEBAR GRIPS — with plugs (white)	N/A 52 to 80 — FL, FLH, FLH-80, Classic
		56201-02B	PAIR OF HANDLEBAR GRIPS — w/ plugs (black)	52 to 71 — FL, FLH
	48	56206-81A	HANDLEBAR GRIP, left (black)	81 to * — FLH-80, Classic
	49	56216-53	SPRING, handlebar grip	N/A 54 to 74 — FL, FLH

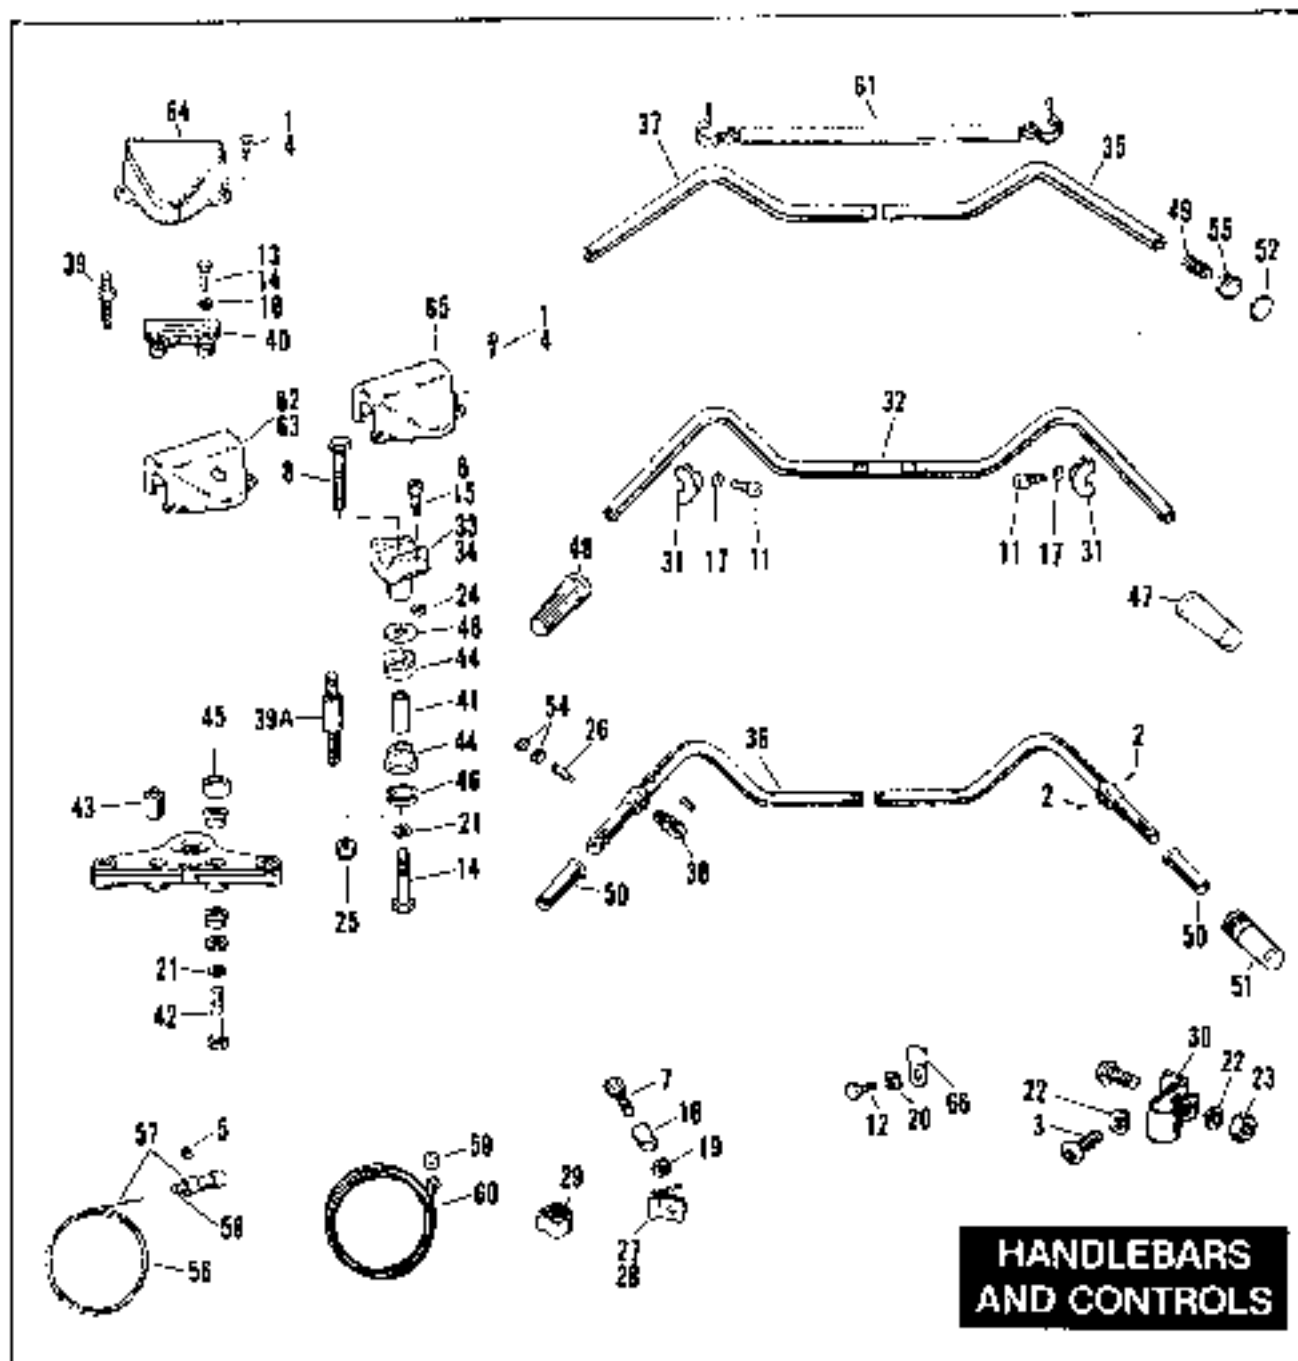

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	50	56220-53	SLEEVE, handlebar grip (2)	54 to 70 -- FL, FLH
		56220-54	SLEEVE, handlebar grip (2)	71 to 74 -- FL, FLH
	51	56220-74	HANDLEBAR GRIP AND SLEEVE, right	75 to 80 -- FL, FLH, FLH-80, Classic
		56220-918	HANDLEBAR GRIP AND SLEEVE, right	91 to * -- FLH-80, Classic
	52	56238-62	PLUG, handlebar grip (2)	80 to 80 Classic
	54	56278-10	ROLLER, handlebar grip	A-A 54 to 74 -- FLH
	55	56286-53	END SCREW	A-A 54 to 74 -- FL, FLH
	56	56377-05	CONTROL WIRE, only	57 to 73 -- FL, FLH
	57	56379-65	CONTROL WIRE AND PLUNGER	A-A 54 to 73 -- FL, FLH
	58	56400-524	PLUNGER kit, control wire	A-A 54 to 74 -- FL, FLH
		56401-70	PLUNGER, control cable	A-A Late 70 & 74 -- FL, FLH
	59	56410-50	PLUG, control cable (2)	54 to 74 -- FL, FLH
	60	56502-65	CONTROL CABLE throttle and starter	50 to * -- FL, FLH, FLH-80, Classic
	61		NOTE: See section A20	
	62	56588-60	COVER, handlebar clamp (polished) (used with steering damper)	60 to 70 -- FL, FLH, FLH-80, Classic
	63	56589-79	COVER, handlebar clamp (polished) (used with steering damper)	80 to * -- FL, FLH, FLH-80, Classic
	64	56590-60	COVER, handlebar clamp (polished) (not used with steering damper)	60 to 79 -- FL, FLH, FLH-80, Classic
	65	56590-79	COVER, handlebar clamp (polished) (not used with steering damper)	80 to * -- FL, FLH, FLH-80, Classic
	66	56609-52	CLAMP, rebounder cable	02 to 65 -- FL, FLH

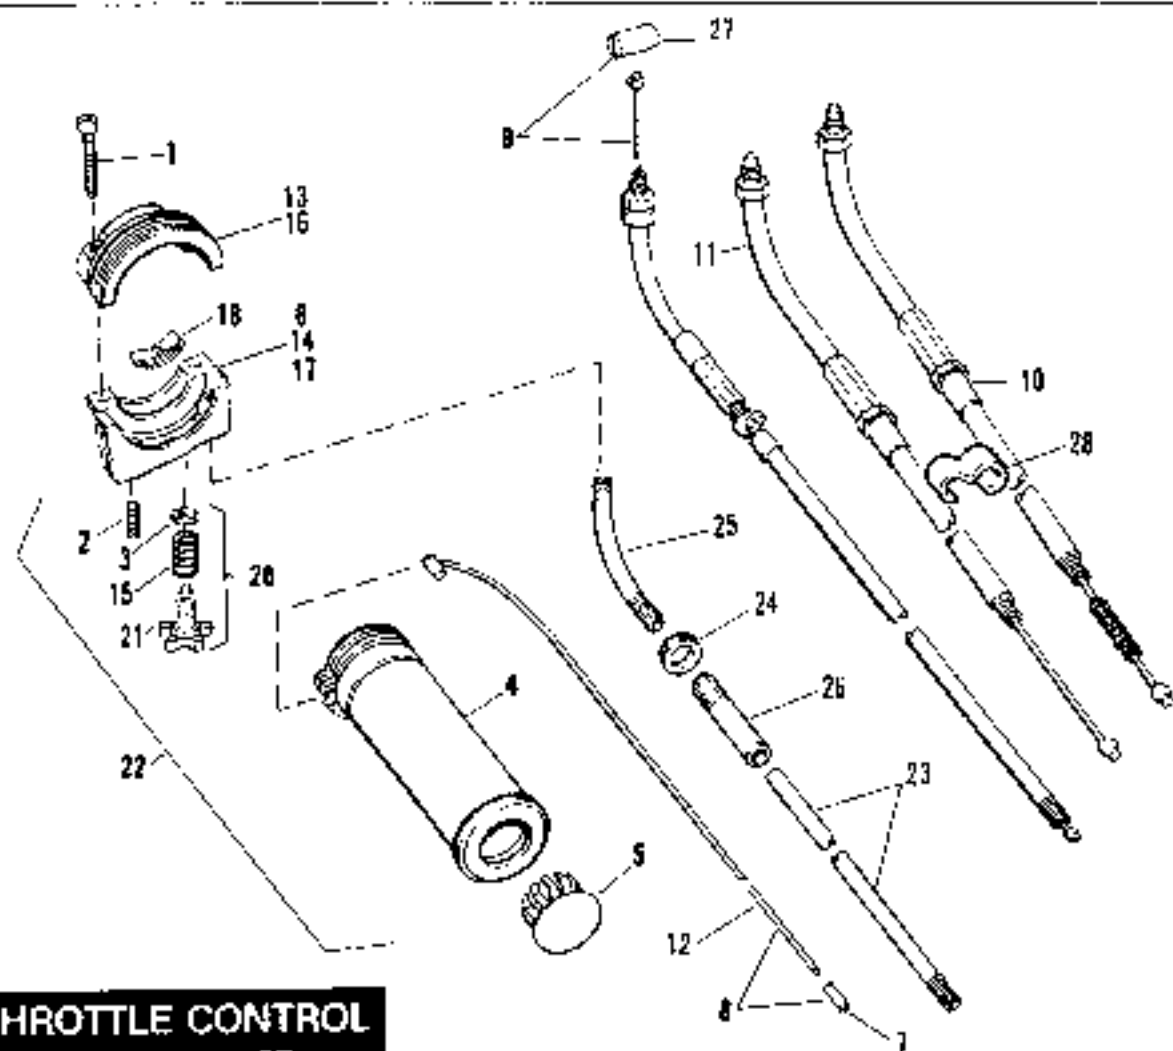


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
		910	SCREW, 1/4" x 32 x 5/16 in. hex. cap.	81 — FLH-80, Classic
		1200	SCREW, 1/4" x 32 x 7/8 Pozidriv H. cap. (2)	75 to 80 — FL, FLH, FLH-80, Classic
	2	1708	SET SCREW, throttle cable stop	75 to 80 — FL, FLH, FLH-80, Classic
	3	11155	SNAP RING, throttle screw	75 to * — FL, FLH, FLH-80, Classic
	4	56220-74	GRIP AND SLEEVE, throttle	75 to 80 — FL, FLH, FLH-80, Classic
		56220-81B	GRIP AND SLEEVE, throttle	81 to * — FLH-80, Classic
	5	56238-67	PLUG, barometer grip	75 to * — FL, FLH, FLH-80, Classic
	6	56300-74	LOWER CLAMP AND CABLE ASSEMBLY, complete	75 — FL, FLH
	7	56302-74	FERRULE, throttle control wire	75 — FL, FLH
	9	56303-74	CONTROL WIRE AND FERRULE	75 — FL, FLH
	3	56313-75	CONTROL WIRE ASSEMBLY	76 to 80 — FL, FLH, FLH-80, Classic
	10	56323-81A	SOLE CONTROL ASSEMBLY	81 to * — FLH-80, Classic
	11	56324-81A	THROTTLE CONTROL ASSEMBLY	81 to * — FLH-80, Classic
	12	56309-74	CONTROL WIRE, only	75 — FL, FLH
	13	56332-77	UPPER CLAMP, throttle control	81 — FLH-80, Classic
	14	56333-74A	LOWER CLAMP, throttle control	75 to 80 — FL, FLH, FLH-80, Classic
	15	56394-74	SPRING, throttle control cable adjusting screw	75 to * — FL, FLH, FLH-80, Classic
	16	56395-74	UPPER CLAMP, throttle control	75 to 80 — FL, FLH, FLH-80, Classic
	17	56396-81	LOWER CLAMP, throttle control	81 — FLH-80, Classic
	18	56398-74	FRICTION SPRING, throttle grip	75 to * — FL, FLH, FLH-80, Classic
	20	56397-74C	KIT, throttle adjusting screw, includes items 15 & 21	75 to * — FL, FLH, FLH-80, Classic
	21	56402-83A	ADJUSTING SCREW, throttle control cable	75 to * — FL, FLH, FLH-80, Classic
	22	56500-78	THROTTLE CONTROL ASSEMBLY	75 to 80 — FL, FLH, FLH-80, Classic
	23	56502-74	CASINGS, control wire	75 — FL, FLH
	24	56505-74	LOCKWUT, throttle cable adjuster	75 — FL, FLH
	25	56506-74	ELBOW, throttle cable	75 — FL, FLH
	26	56507-74	ADJUSTER, throttle cable	75 — FL, FLH
	27	56508-76	FERRULE, control wire — hand grip end (Part 000° angle piece) (2 - 81 & later)	76 to * — FL, FLH, FLH-80, Classic
		56520-77	FERRULE, control wire — hand grip end (Steel 90° angle piece)	75 to 80 — FL, FLH, FLH-80, Classic
	28	70504-81	CLIP, throttle cables	81 to * — FLH-80, Classic

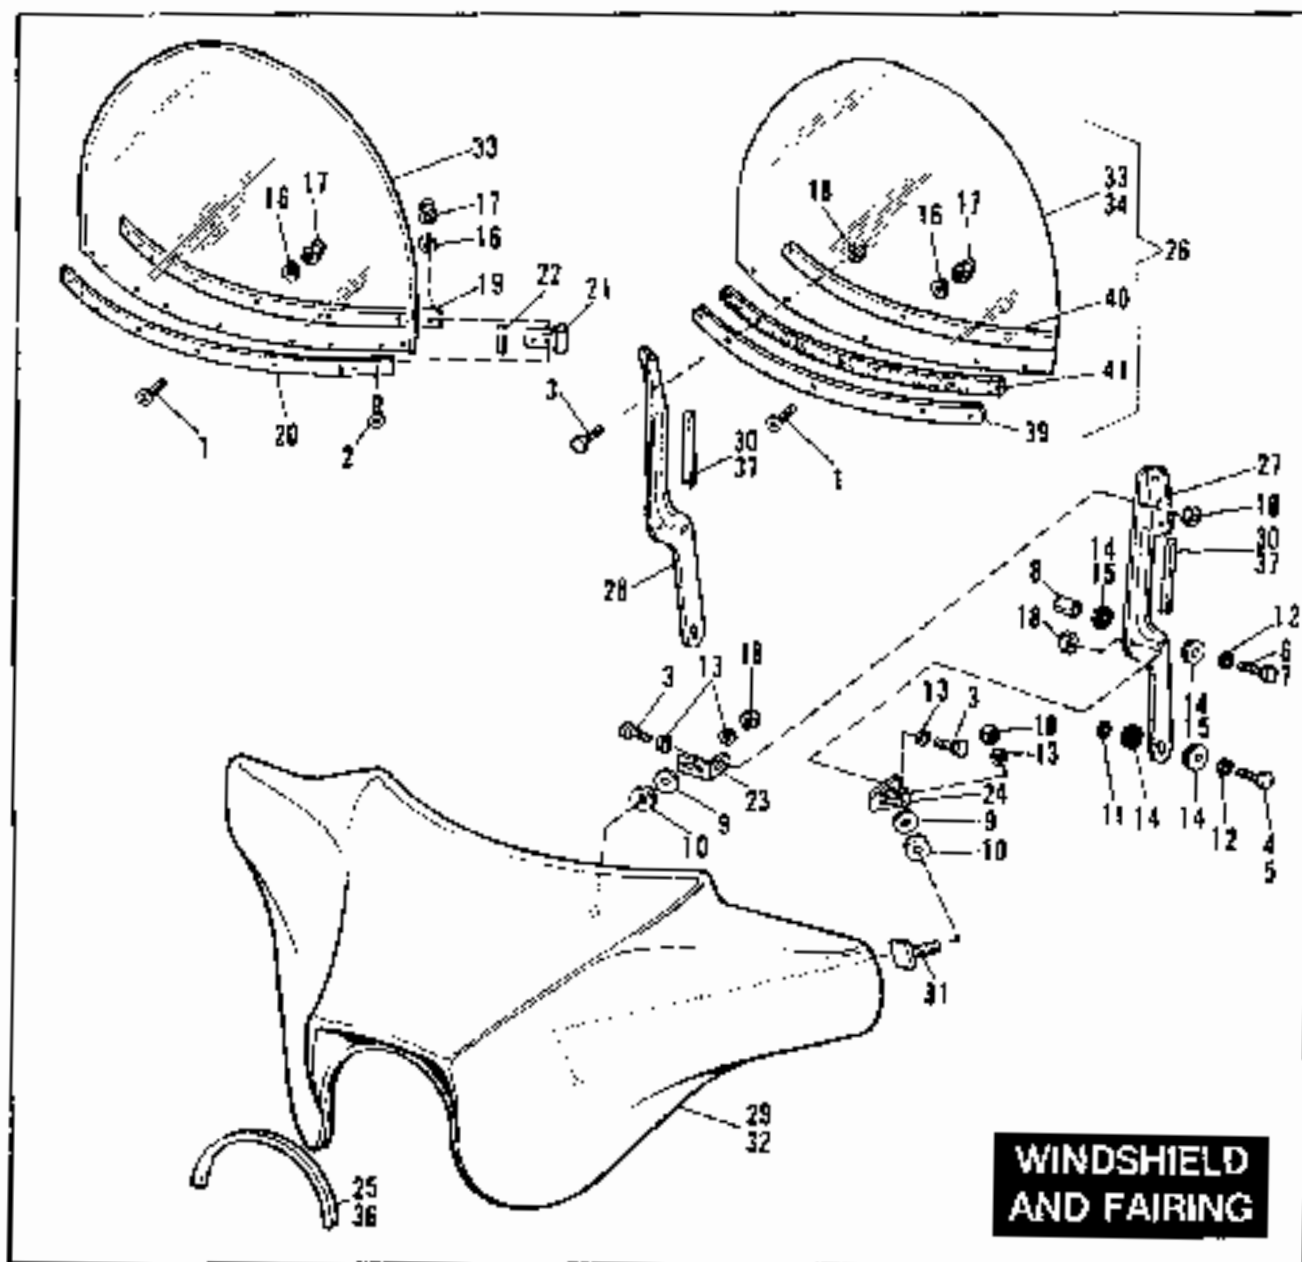

**WINDSHIELD
AND FAIRING**

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
NOTE: REFER TO DEALER ACCESSORY GUIDE FOR ADDITIONAL PAINTED PARTS				
	1	2725	SCREW, No. 12-24 x 5/16 Phillips hd. (13)	68 to * — FL, FLH, FLH-80, Classic
	2	2776	SCREW, No. 12-24 x 11/16 Phillips hd. (14)	68 to early 77 — FL, FLH
	3	2787	POUT, 5/16-24 x 3/4 hex. hd. (2)	68 to * — FL, FLH, FLH-80, Classic
	4	3950W	BOLT, 5/16-24 x 1 hex. hd. (2)	81 to * — FLH-80, Classic
	5	2070	POUT, 5/16-24 x 7/8 hex. hd. (2)	68 to * — FL, FLH, FLH-80, Classic
	6	4010W	POUT, 5/16-24 x 1 1/4 hex. hd. (2)	68 to * — FL, FLH, FLH-80, Classic
	7	4036	POUT, 5/16-24 x 1 1/2 hex. hd. (2)	81 to * — FLH-80, Classic
	8	5930W	SPACER, lock washer to lock, upper (2)	68 to 82 — FL, FLH, FLH-80, Classic
	9	5255B	WASHER, 1/4 x 3/4 x 1/32 (4)	68 to * — FL, FLH, FLH-80, Classic
	10	5261	WASHER, 1/4 x 3/4 x 1/8 (rubber) (4)	70 to * — FL, FLH, FLH-80, Classic
	11	5214W	WASHER, 5/16 x 9/16 x 1/8 (2)	68 to * — FL, FLH, FLH-80, Classic
	12	5702	WASHER, 5/16 x 1 1/16 x 1/16 (4)	68 to * — FL, FLH, FLH-80, Classic
	13	5703	WASHER, 1/4 x 5/8 x 1/16 (8)	68 to * — FL, FLH, FLH-80, Classic
	14	5652	WASHER (rubber & steel) (8) 81 & Later	81 to * — FLH-80, Classic
	15	5955	WASHER (rubber & steel) (4)	68 to * — FLH-80
	16	7030W	LOCKWASHER, No. 12 (5) 3-Late 77 & later	68 to * — FL, FLH, FLH-80, Classic
	17	7651	ACORN NUT, No. 12-24 x 1.1/32 x 5/16 (3) — Late 77 & later	80 to * — FL, FLH, FLH-80, Classic
	18	7665	LOCKWASHER, 1/4-20 x 5/16 x 1/16 hex. (10)	68 to * — FL, FLH, FLH-80, Classic
	19	58032-49A	BRACE, windshield — inner	N/A 68 to Early 77 — FL, FLH
	20	58037-49A	BRACE, windshield — outer	N/A 68 to Early 77 — FL, FLH
	21	58042-50	CLAMP, windshield molding (2)	N/A 68 to Early 77 — FL, FLH
	22	58043-50A	BUSHING, windshield molding (2)	68 to Early 77 — FL, FLH
		58153-77A	WINDSHIELD AND FAIRING KIT (black)	Late 77 to * — FL, FLH, FLH-80
		58160-69B	WINDSHIELD AND FAIRING KIT (white)	68 to * — FL, FLH, FLH-80
	23	58161-55	BRACKET, windshield faring — upper, 50" (2)	68 to * — FL, FLH, FLH-80, Classic
	24	58162-55	BRACKET, windshield faring — lower, 60" (2)	68 to * — FL, FLH, FLH-80, Classic
	25	58163-69	TRIM, windshield faring (white)	78 to 82 — Classic; 83 to 87 — FL, FLH, FLH-80
	26	58164-59A	WINDSHIELD & FAIRING	68 to Early 77 — FL, FLH, FLH-80, Classic
			Includes: Does not include: 2725 SCREW, windshield braces, No. 12-24 x 17/32 Phillips hd. (13) 7030W LOCKWASHER, windshield braces, No. 12 (3) 7651 ACORN NUT, windshield braces, No. 12-24 (3) 58161-55 WINDSHIELD 58162-55 BRACE, outer 58163-69 BRACE, inner 58164-59A CLS-ION TAPE, windshield brace	
	27	58165-69A	FORK BRACKET, left (chrome)	68 to 82 — FL, FLH, FLH-80, Classic
		58165-80	FORK BRACKET, left	83 to * — FLH-80
	28	58165-69A	FORK BRACKET, right (chrome)	68 to 82 — FL, FLH, FLH-80, Classic
		58165-80	FORK BRACKET, right	83 to * — FLH-80
	29	58167-69A	WINDSHIELD FAIRING (only white)	68 to 82 — FL, FLH, FLH-80, Classic
	30	58168-69	TRIM, faring brackets (white) (2)	79 to * — Classic; 68 to 81 — FL, FLH, FLH-80
	31	58171-69	MOUNTING STUD, windshield faring (4)	N/A 68 to 84 — FL, FLH, FLH-80, Classic
	32	58175-77A	WINDSHIELD FAIRING, only black	Late 77 to * — FL, FLH, FLH-80
	33	58181-78	WINDOW AND CUSHION TAPE & T. 18-1/2 high window	68 to * — FL, FLH, FLH-80, Classic
	34	58182-78	WINDOW AND CUSHION TAPE & T. 16-1/2 high window	Late 77 to * — FL, FLH, FLH-80, Classic
	35	58350-76	TRIM, windshield faring (black)	Late 77 to * — FL, FLH, FLH-80, Classic
	36	58321-76	TRIM, windshield faring (black) (2)	Late 77 to * — FL, FLH, FLH-80
	37	58411-76	BRACE, outer	Late 77 to * — FL, FLH, FLH-80, Classic
	38	58412-76	BRACE, inner	Late 77 to * — FL, FLH, FLH-80, Classic
	39	58416-77	CUSHION TAPE, windshield brace	Late 77 to * — FL, FLH, FLH-80, Classic


WINTER WINDSHIELD

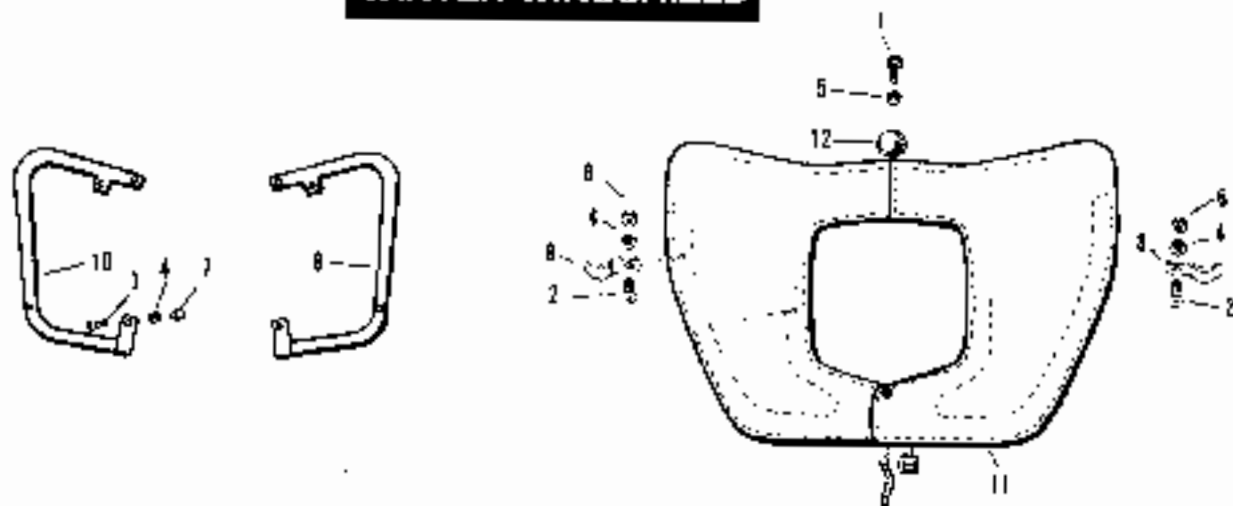

WINTER WINDSHIELD

A57


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2583	SCREW, No. 10-32 x 1/8 Pozd riv pan hd.	63 to Early 62 FL, FLH
	2	2726	SCREW, No. 12-24 x 17/32 Phil. hd. (4)	49 to 79 - FL, FLH, FLH-80, Classic
	3	2773	SCREW, 1/4-20 x 1/2 Pozd riv pan hd. (2)	49 to 79 - FL, FLH, FLH-80, Classic
	4	7030W	LOCKWASHER, No. 12-17	49 to 79 - FL, FLH, FLH-80, Classic
	5	7069	LOCKWASHER, No. 10-13	49 to 79 - FL, FLH, FLH-80, Classic
	6	7654W	NUT, No. 12-24 x 5/32 x 7/16 hex (5)	49 to 79 - FL, FLH, FLH-80, Classic
	7	7754	WELD NUT, windshield bracket	N/A, 49 to 79 - FL, FLH, FLH-80, Classic
	8	9965W	CLIP, apron to windshield (4)	63 to Early 62 - FL, FLH
		58090-60B	WINTER WINDSHIELD KIT (lins plastic shields)	N/A, 49 to 79 - FL, FLH, FLH-80, Classic
			Consists of besides left support:	
		2584	SCREW, No. 10-32 x 1/2 Pozd riv pan hd.	
		2725	SCREW, No. 12-24 x 5/8 Phillips brass hd.	
		2726	SCREW, No. 12-24 x 17/16 Phil. pos. truss hd.	
		7030W	LOCKWASHER, No. 12	
		7069	LOCKWASHER, No. 10	
		7654W	NUT, No. 12-24 x 5/32 x 7/16 hex	
		9965W	CLIP	
		58073-63	SUPPORT, right	
		58125-63	APRON, windshield	
		58225-41	TEE NUT, center brace	
	9	58072-63	SUPPORT, left	N/A Late 62 to 79 - FL, FLH, FLH-80, Classic
	10	58073-63	SUPPORT, right	Late 63 to 79 - FL, FLH, FLH-80, Classic
	11	58125-63	APRON, windshield	Late 62 to 79 - FL, FLH, FLH-80, Classic
	12	58225-41	TEE NUT, center brace	49 to 79 - FL, FLH, FLH-80, Classic

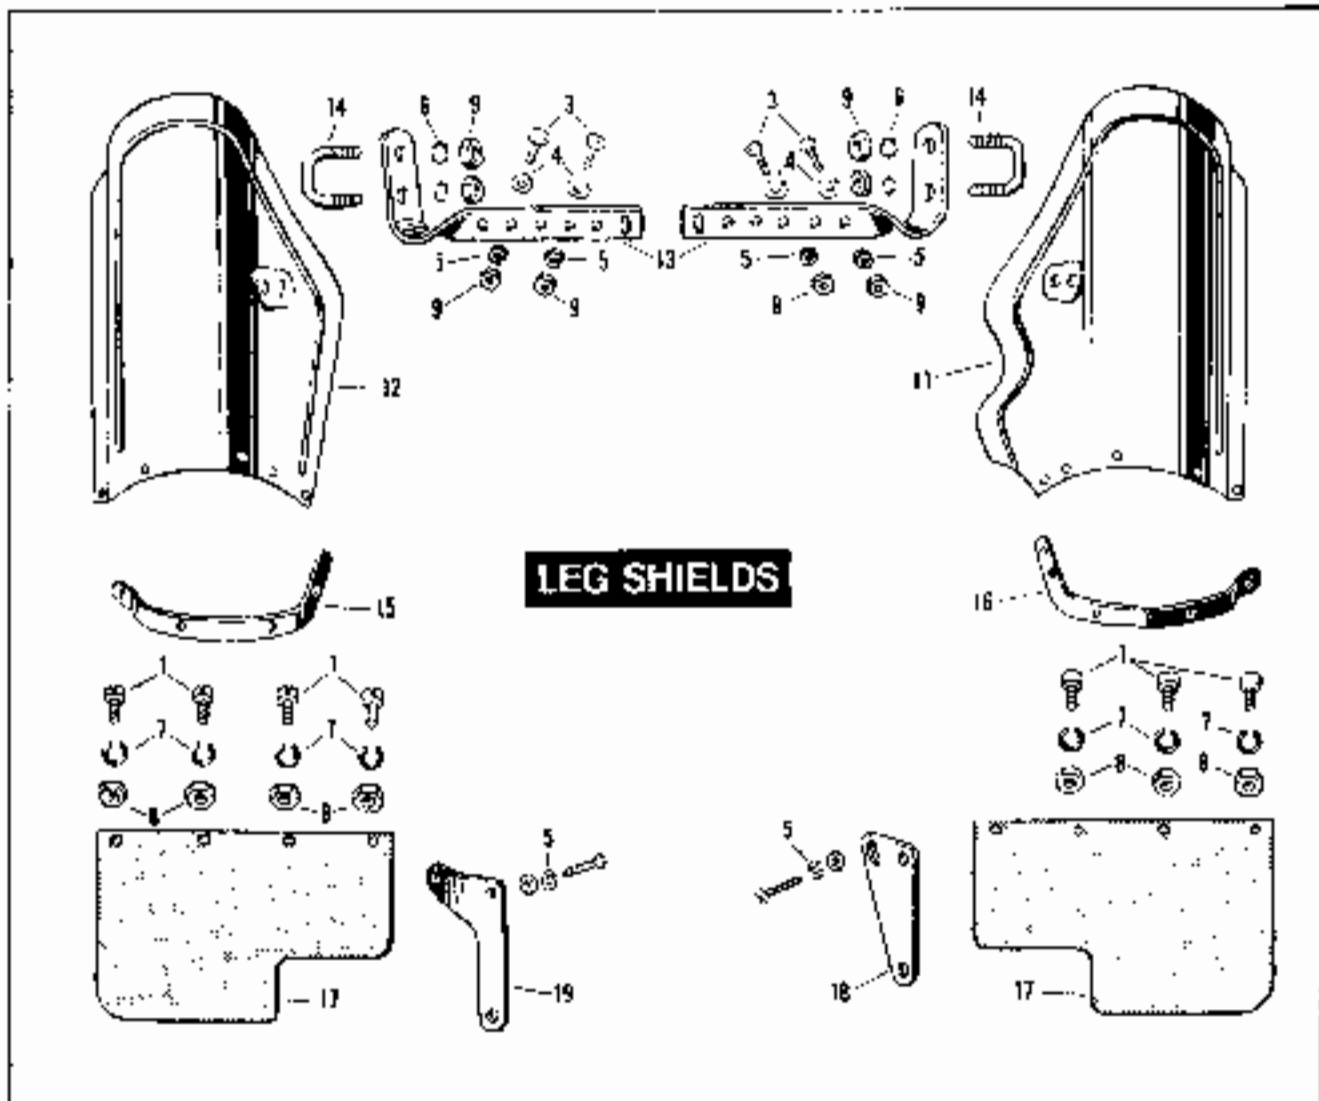

LEG SHIELDS

A58

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	7592	SCREW, No. 10-24 x 1/2 Pozidriv pan hd (7)	41 to 77 - FL, FLH
	3	3974HW	RD.T, 5/16-24 x 3/4 hex. hd. (4)	41 to 77 - FL, FLH
	4	6016	WASHER, 1 1/32 x 1 1/16 x 7/16 (4)	41 to 77 - FL, FLH
	5	7006	LOCKWASHER, 1/4 (4)	41 to 77 - FL, FLH
	5	704	LOCKWASHER, 5/16 (4)	41 to 77 - FL, FLH
	7	7069	LOCKWASHER, No. 10 (7)	41 to 77 - FL, FLH
	8	7620W	NUT, No. 10-24 x 1/8 x 3/8 hex. (7)	41 to 77 - FL, FLH
	9	7676	NUT, 1/4-28 x 3/16 x 7/16 hex. (8)	41 to 77 - FL, FLH
	11	58511-37	LEG SHIELD, left	41 to 77 - FL, FLH
	12	58531-37	LEG SHIELD, right	N/A 41 to 77 - FL, FLH
	13	58594-37	BRACKET, leg shield (2)	41 to 77 - FL, FLH
	14	58582-37	U-BOLT (2)	41 to 77 - FL, FLH
	15	58556-20	FLAP BRACKET, right	N/A 41 to 77 - FL, FLH
	16	58558-36	FLAP BRACKET, left	41 to 77 - FL, FLH
	17	58581-37	FLAP, rubber (2)	N/A 41 to 77 - FL, FLH
	18	58587-38	LOWER BRACKET, left	41 to 77 - FL, FLH
	19	58589-30	LOWER BRACKET, right	N/A 41 to 77 - FL, FLH

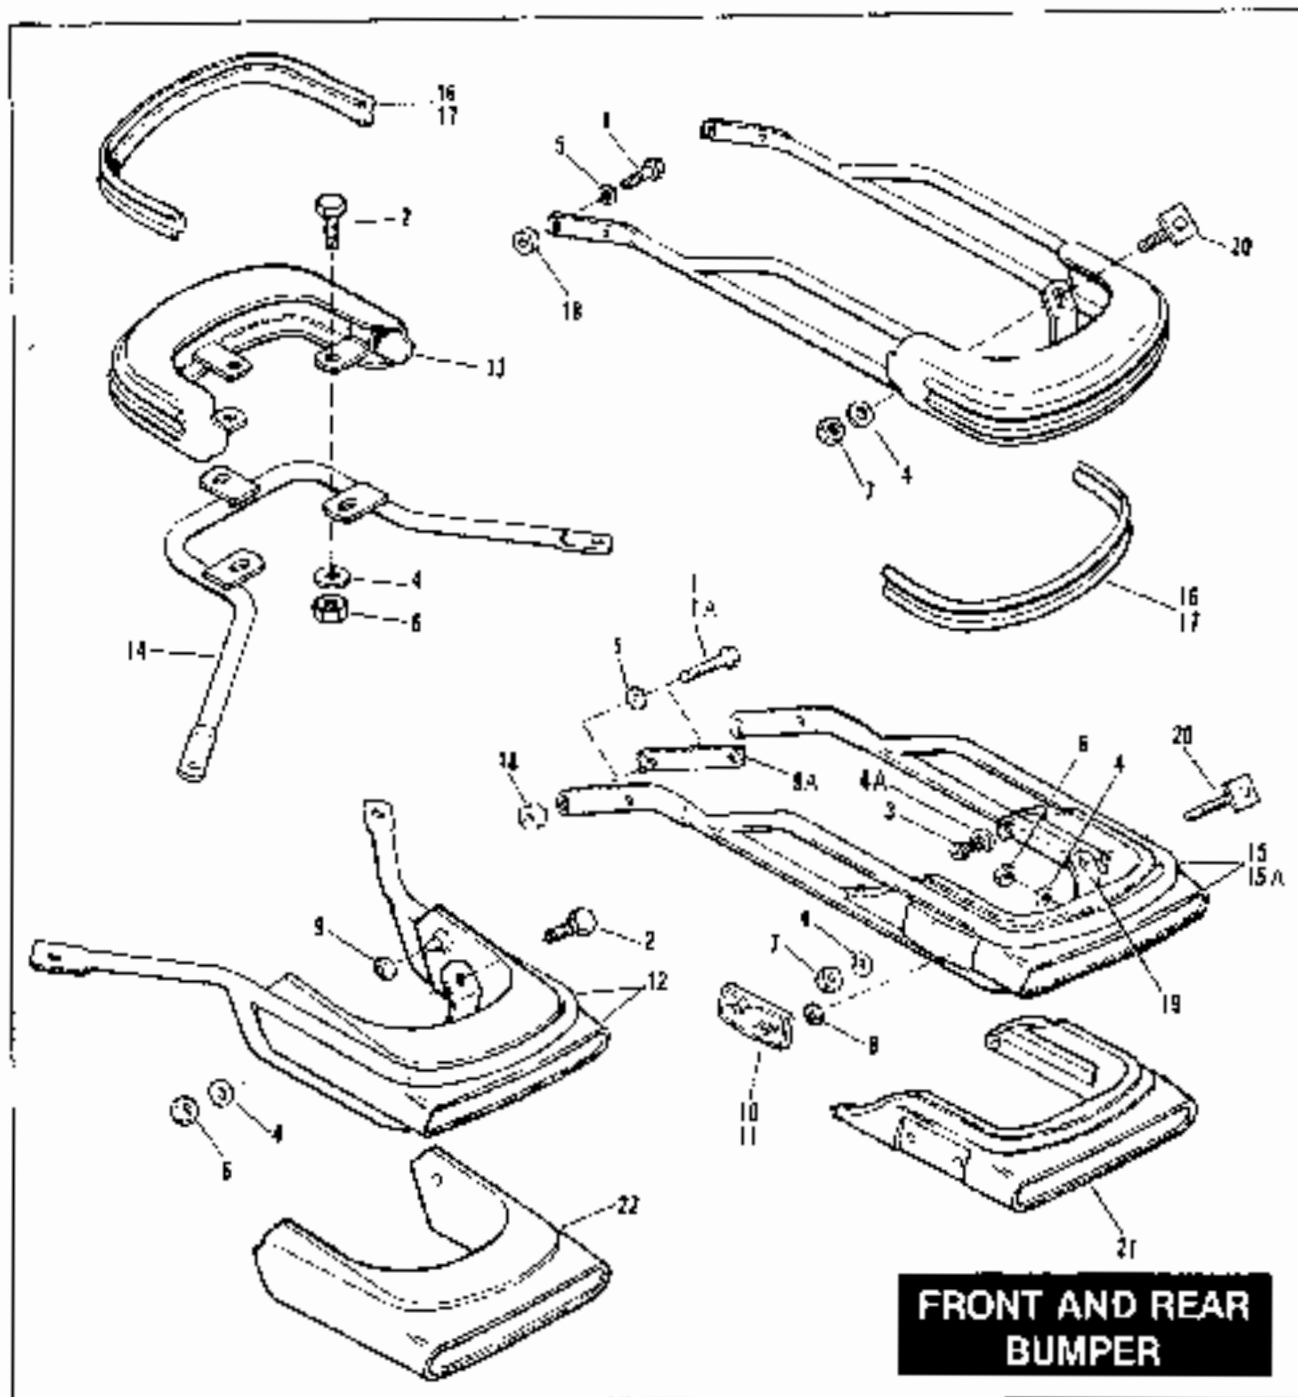

**FRONT AND REAR
BUMPER**

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2871W	BOLT, 5/16-18 x 1-1/4 hex. hd. (4)	68 to 74 — FL, FLH
	1A	3477	BOLT, 5/16-18 x 1-1/4 hex. hd. (4)	75 to * — FL, FLH, FLH-80, Classic
	2	3766	BOLT, 1/4-28 x 5/8 hex. hd. (3; 2 — Late 82 & later)	68 to * — FL, FLH, FLH-80, Classic
	3	4091	SCREW, No. 10-24 x 1-2 self-tapping, slotted hex washer (6)	77 to * — FL, FLH, FLH-80, Classic
	4	6703	WASHER, 1/4 x 5/16 x 1-1/6 (6; 5 — Late 81 & later)	68 to * — FL, FLH, FLH-80, Classic
	4A	6716	WASHER, No. 10 x 1/2 x 3/16 (2)	69 to * — FL, FLH, FLH-80, Classic
	5	7232	LOCKWASHER, 5/16 external teeth (4)	58 to 74 — FL, FLH, FLH-80, Classic
	6	7982	LOCKNUT, 1/4-28 x 3/16 x 7/16 hex. (5)	68 to * — FL, FLH, FLH-80, Classic
	7	7586	LOCKNUT, 1/4-20 x 5/16 x 7/16 hex. (2)	68 to * — FL, FLH, FLH-80
	8	8126	SPEED NUT, reflector (2)	77 to * — FL, FLH, FLH-80, Classic
	9	81353	SPEED NUT, rear bumper (2)	77 to * — FL, FLH, FLH-80, Classic
	9A	58186-80	LOCK PLATE, fender bolts (2)	76 to * — FL, FLH, FLH-80, Classic
	10	58254-69	REFLECTOR, amber (2)	N/A Early 77 — FL, FLH
	11	58261-77	REFLECTOR, amber (2)	Late 77 to * — FL, FLH, FLH-80, Classic
	12	91007-66A	REAR BUMPER, with fittings (used with saddlebags only)	68 to * — FL, FLH, FLH-80, Classic
	13	91014-88	REAR BUMPER, only	N/A 68 to 76 — FL, FLH
	14	91021-88	SUPPORT, rear bumper	N/A 68 to 76 — FL, FLH
	15	91075-88B	FRONT BUMPER, with fittings	68 to 80 — FL, FLH, FLH-80, Classic
	15A	91075-81	FRONT BUMPER, includes items 14 & 9A	81 to * — FLH-80, Classic
	16	91081-60	FRONT BUMPER STRIP (white)	N/A 66 to 76 — FL, FLH
	17	91082-69	FRONT BUMPER STRIP (black)	N/A 68 to 78 — FL, FLH
	18	91085-58	SPACER, front bumper (4)	68 to Early 80 — FL, FLH, FLH-80, Classic
	19	91090-77A	BRACKET, front bumper mounting	77 to * — FL, FLH, FLH-80, Classic
	20	91091-61	TEG GUIT, front bumper	68 to Early 81 — FL, FLH, FLH-80, Classic
	21	91107-77	FRONT BUMPER, only	77 to * — FL, FLH, FLH-80, Classic
	22	91123-77	REAR BUMPER, only	77 to * — FL, FLH, FLH-80, Classic


FRONT AND REAR FENDERS

This diagram illustrates the assembly of front and rear fenders. The main components shown are the front fender (41A), the rear fender (59), and the rear fender extension (61A). The diagram includes numerous numbered parts and their corresponding assembly instructions:

- Front Fender (41A):** Includes parts 36, 39, 40A, 19, 75, 31, 44, 46, 35, 45, 55, 56, 11, 10, 24, 28, 4A, 23, 50, 52, 51, 49, 38, 15, 58, 71, 72, 23, 61, 14, 38, 40, 28, 40, 41, 23, 47, 48, 47.
- Rear Fender (59):** Includes parts 52A, 37, 16, 34, 21, 8, 9, 12, 27, 22, 20, 3, 53, 62, 61A, 66, 65, 68, 64, 67, 14, 35, 57, 2, 24, 13, 43, 40, 42, 41, 23, 47, 48, 47.
- Rear Fender Extension (61A):** Includes parts 62, 61A, 66, 65, 68, 64, 67, 14, 35, 57, 2, 24, 13, 43, 40, 42, 41, 23, 47, 48, 47.
- Assembly Instructions:**
 - 1. Insert 37 into 52A.
 - 2. Insert 16 into 34.
 - 3. Insert 21 into 8, 9, and 12.
 - 4. Insert 27 into 22 and 20.
 - 5. Insert 3 into 53.
 - 6. Insert 62 into 61A.
 - 7. Insert 66 into 65 and 68.
 - 8. Insert 64 into 67 and 14.
 - 9. Insert 35 into 57 and 2.
 - 10. Insert 24 into 13 and 43.
 - 11. Insert 40 into 40 and 41.
 - 12. Insert 42 into 41 and 23.
 - 13. Insert 47 into 48 and 47.


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
NOTE: REFER TO DEALER ACCESSORY GUIDE FOR PAINTED PARTS.				
	1	903	SCREW, 1/4-20 x 1/2 Phillips hd. (wingless) (10)	75 to Early 90 — FL, FLH, FLH-80, Classic
	2	2217	SCREW, 5/16-24 x 1 1/4 hex. (rivet) (1) (4)	58 to 78 — FL, FLH, FLH-80
	3	2533	SCREW, No. 10-24 x 1/2 Panhead (hd. 13)	41 to * — FL, FLH, FLH-80, Classic
	4	2604	SCREW, No. 10-32 x 1/2 Panhead (hd. 14)	Late 82 to * — FLH-80, Classic
	4A	2630W	SCREW, No. 8-32 x 5/16 self-tapping (hd. 15)	59 to 81, 87 to 90 — FL, FLH, FLH-80, Classic
	5	2633	SCREW, No. 8-32 x 3/8 self-tapping (hd. 15)	80 to Early 82 — FL, FLH, FLH-80, Classic
	6	2634W	SCREW, No. 8-32 x 1/2 self-tapping (hd. 16)	53 to 65 — FL, FLH
	7	27100	SCREW, No. 4-40 x 3/8 Phillips hd. (1)	54 to * — FL, FLH, FLH-80, Classic
	8	3476	BOLT, 5/16-18 x 1 1/8 hex. (hd. 4) (new with bumper)	75 to Early 80 — FL, FLH, FLH-80, Classic
	9	3477	BOLT, 5/16-18 x 1 1/4 hex. (hd. 4) (new with bumper)	75 to * — FL, FLH, FLH-80, Classic
	10	3560W	TIE BOLT, No. 10-24 x 3/8 (2)	57 to * — FL, FLH, FLH-80, Classic
	11	2561W	TIE BOLT, No. 10-24 x 1/4 (2)	57 to * — FL, FLH, FLH-80, Classic
	12	3991	BOLT, 5/16-18 x 7/8 hex. (hd. 4)	49 to 74 — FL, FLH
	13	4018W	BOLT, 5/16-24 x 1 1/4 hex. (hd. 12)	60 to 78 — FL, FLH, FLH-80
	14	4060W	BOLT, 3/8-24 x 2 hex. (hd. 12)	56 to 81 — FL, FLH, FLH-80, Classic; 82 to * — FLH-80
		4411	BOLT, 3/8-24 x 1 3/4 hex. (hd. 12)	82 to * — FLH-80, Classic
	15	6039	WASHER, 5/32 x 3/8 debris collector (8)	82 — Classic; 83 to * — FLH-80
	16	6305	WASHER, No. 4 x 5/16 x 1/32 (4)	54 to * — FL, FLH, FLH-80, Classic
	18	6701	WASHER, 5/8 x 13/16 x 1/16	82 — Classic; 82 to * — FLH-80
	19	6733	WASHER, 1/4 x 5/8 x 1/16 (2 — 82 & Later)	73 to * — FL, FLH, FLH-80, Classic
	20	6715	WASHER, No. 10 x 1/2 x 5/64 (3)	45 to * — FL, FLH, FLH-80, Classic
	21	7041	LOCKWASHER, 5/16 (4)	Late 70 to Early 78 — FL, FLH
	22	7069	LOCKWASHER, No. 10 (3)	41 to * — FL, FLH, FLH-80, Classic
	23	7135	LOCKWASHER, No. 8 internal (bolt 12)	59 to Early 82 — FL, FLH, FLH-80, Classic
		7138	LOCKWASHER, No. 10 internal (bolt 14)	Late 82 to * — FLH-80, Classic
	24	7220	LOCKWASHER, No. 10 internal (bolt 15)	57 to * — FL, FLH, FLH-80, Classic
	25	7232	LOCKWASHER, 5/16 external (bolt 14)	58 to * — FL, FLH, FLH-80, Classic
	26	7213	LOCKWASHER, 5/16 external (bolt 12)	58 to 73 — FL, FLH
	27	7421W	NUT, No. 10-24 x 1 1/8 x 1/8 hex. (3)	47 to * — FL, FLH, FLH-80, Classic
	28	7624	NUT, No. 10-24 x 1/4 x 3/8 hex. (4)	57 to * — FL, FLH, FLH-80, Classic
	29	7600	NUT, No. 10-32 x 1/8 x 3/8 hex. (2)	Late 82 to * — FLH-80, Classic
	30	7683	LOCKNUT, 1/4-20 x 5/16 x 7/16 hex.	82 — Classic; 83 to * — FLH-80
	31	7686	LOCKNUT, 1/4-20 x 5/16 x 7/16 hex.	74 to Early 81 — FL, FLH, FLH-80, Classic
	32	7753	NUT, 5/16-24 x 17/64 x 1/2 hex. (4)	41 to * — FL, FLH, FLH-80, Classic
	33	7800W	NUT, 3/8-24 x 21/64 x 9/16 hex. (2)	58 to 73 — FL, FLH
	34	8131W	NUT, No. 4-40 (2)	54 to * — FL, FLH, FLH-80, Classic
	35	8103W	SPEED NUT, reflector (4)	55 to 71 — FL, FLH
	37	8515	RIVET, 3/16 x 3/8 (10)	54 to 74 — FL, FLH, FLH-80
	38	8692	POP RIVET (8)	80 — Classic; 83 to * — FLH-80
	38A	10306	CABLE STRAP, inner to bow (res 12 — Late 82)	Late 82 to * — FLH-80, Classic
	39	11431	GRUMMET, speedometer cable guide	81 to * — FLH-80, Classic
	39A	11430	GRUMMET, rear fender	82 to * — FLH-80, Classic
	40	11437	GRUMMET, wing harness	Late 82 to * — FLH-80, Classic
	40A	38622-78	GUIDE, speedometer cable	81 to * — FLH-80, Classic
	41	52438-75	OUTER fender lip (mp) (2)	Late 82 to * — FLH-80, Classic
	41A	59000-588	FRONT FENDER, paint	54 to 79 — FL, FLH, FLH-80
	42	59082-79	LAMP ASSEMBLY, front fender	Late 82 to * — FLH-80, Classic
		59101-79A	FRONT FENDER, paint	79 & 80 — FL, FLH, FLH-80, Classic
	43	59083-79	FRONT FENDER, chrome mesh	81 to * — FLH-80, Classic

FRONT AND REAR FENDERS

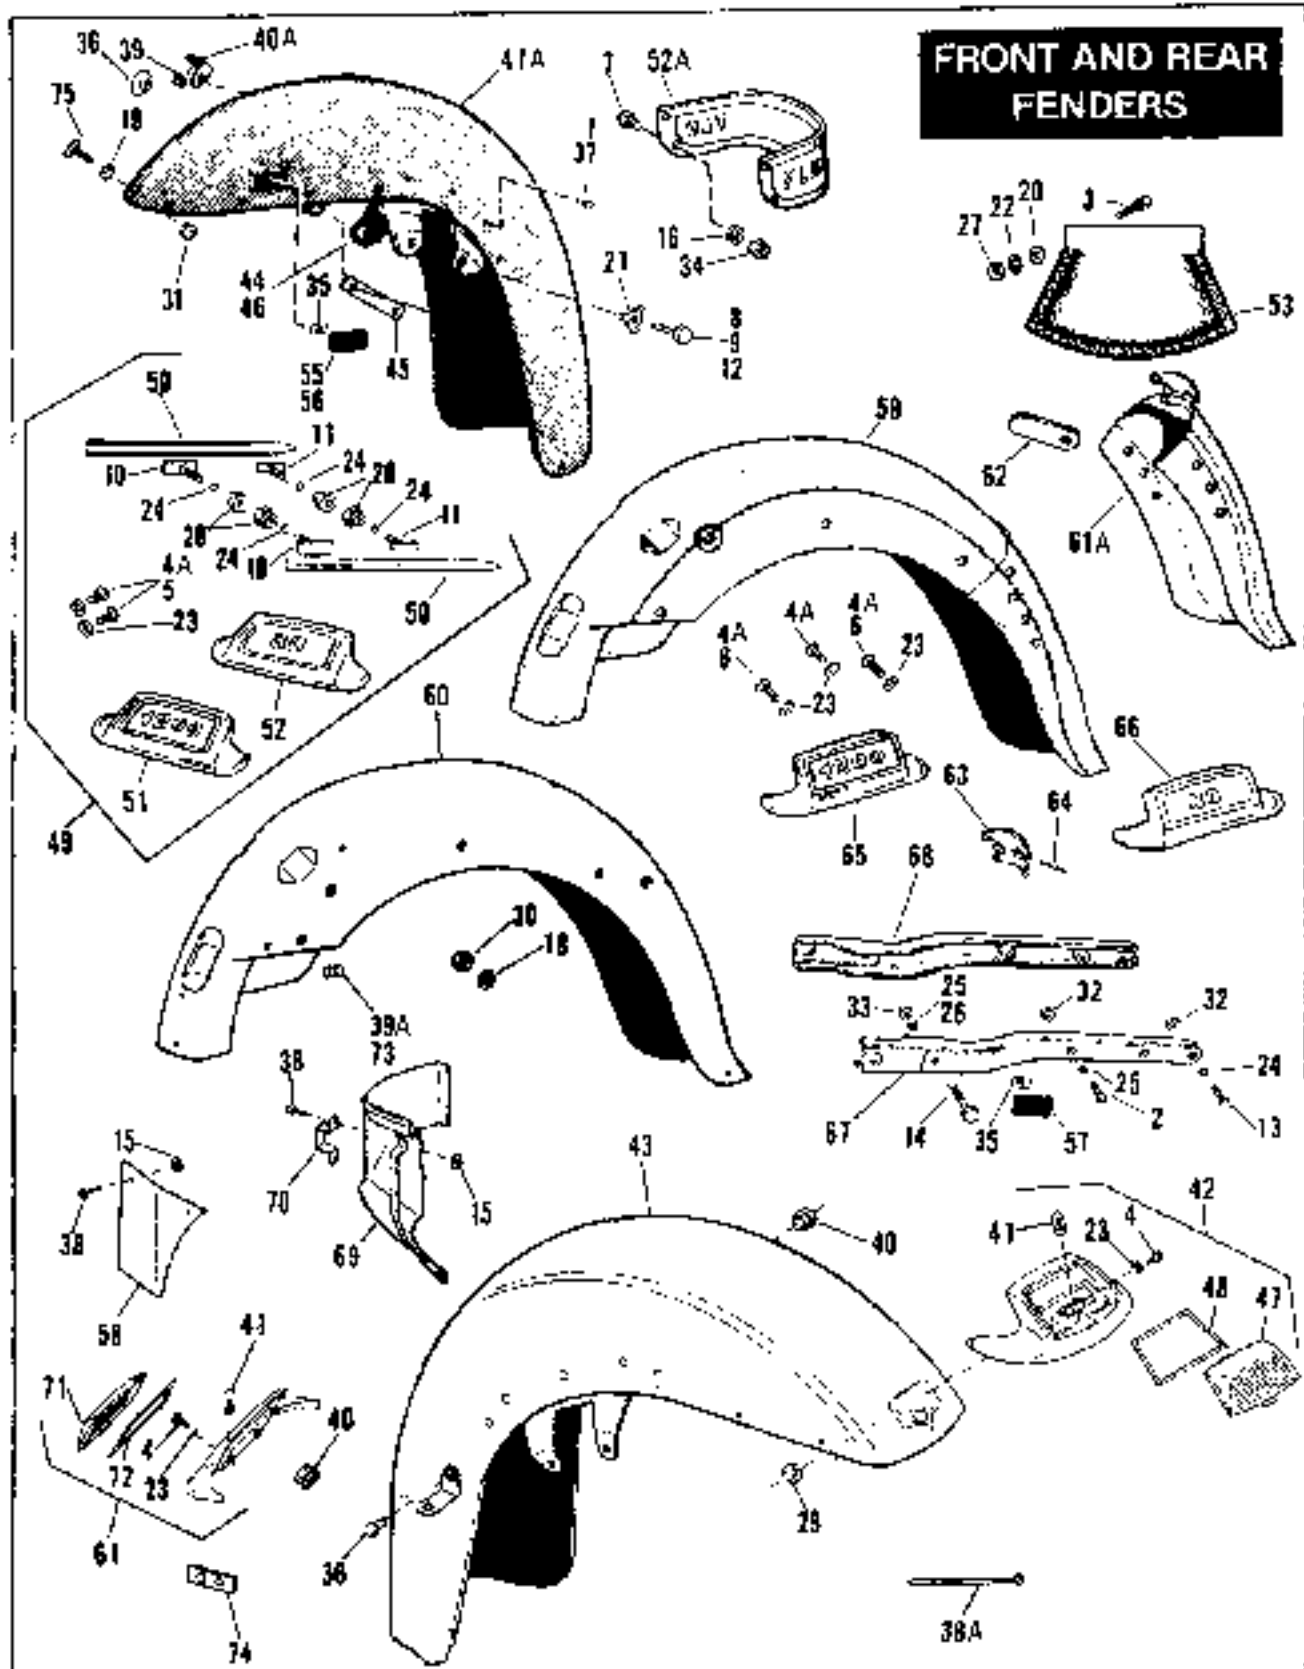

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
NOTE: REFER TO DEALER ACCESSORY GUIDE FOR PAINTED PARTS.				
	44	59100-66	FRONT FENDER BRACE (2)	N/A 66 to 74 - FL, FLH, FLH-80, Classic
		59104-80	FRONT FENDER BRACE (right prime)	75 to Early 82 - FL, FLH, FLH-80, Classic
	45	59105-90	LOCK PLATE (fender bolt (2))	75 to * - FL, FLH, FLH-80, Classic
	46	59107-80	FRONT FENDER BRACE (right prime)	75 to * - FL, FLH, FLH-80, Classic
		59109-90	FRONT FENDER BRACE (right prime)	N/A 75 to Early 82 - FL, FLH, FLH-80, Classic
		59110-80	FRONT FENDER BRACE (right prime)	N/A 75 to Early 82 - FL, FLH, FLH-80, Classic
	47	59180-80	LENS, front fender lamp	Late 82 to * - FLH-80, Classic
	49	59181-80	GASKET, front fender lamp lens	Late 82 to * - FLH-80, Classic
	49	59204-596	FRONT FENDER TRIM SET, with linings 1200	67 to 80 - FL, FLH, FLH-80, Classic
		59204-78	FRONT FENDER TRIM SET, with linings 90"	73 to Early 82 - FL, FLH, FLH-80, Classic
	50	59211-74	SIDE TRIM STRIP (2)	57 to * - FL, FLH, FLH-80, Classic
	51	59216-596	FRONT FENDER TIP, with linings 1200	67 to 90 - FL, FLH
	52	59216-72	FRONT FENDER TIP, with linings 90"	73 to Early 82 - FL, FLH, FLH-80, Classic
	52A	59233-76	FRONT FENDER TRIM KIT (lower) - complete (accy)	54 to * - FL, FLH, FLH-80, Classic
	53	59238-80	FENDER FLAP, less trim (black)	45 to * - FL, FLH, FLH-80, Classic
		59239-80	FENDER FLAP, less trim (white)	45 to * - FL, FLH, FLH-80, Classic
	55	59252-68	REFLECTOR KIT (front (amber) (2))	N/A 65 to 71 - FL, FLH
	56	59254-72	REFLECTOR (amber) (2)	72 to * - FL, FLH, FLH-80, Classic
	57	59255-70	REFLECTOR (red) (2)	72 to * - FL, FLH, FLH-80, Classic
	58	59646-81	FENDER DEBRIS DEFLECTOR	82 - Classic; 83 to * - FLH-80
	59	59651-73R	REAR FENDER (with turn signals (prime))	79 to Late 82 - FL, FLH, FLH-80, 79 to 91 - Classic
		59651-63C	REAR FENDER (with turn signals (prime))	Late 73 to 78 - FL, FLH, FLH-80
	60	59641-82A	REAR FENDER (prime)	82 - Classic; 83 to * - FLH-80
	61	59650-79	LAMP ASSEMBLY, rear fender	Late 82 to * - FLH-80, Classic
	61A	59699-73	REAR FEND, rear fender	Late 74 to 75 - FL, FLH, FLH-80, Classic
	62	59790-E2	SCREW PLATE, rear fender (2)	82 to 79 - FL, FLH, FLH-80, Classic
	63	59853-584	REAR FENDER HINGE (with rivets)	58 to 79 - FL, FLH, FLH-80, Classic
	64	59862-30	HINGE PIN	41 to 79 - FL, FLH, FLH-80, Classic
	50	59867-580	REAR FENDER TIP (with linings 1200)	67 to 80 - FL, FLH
	56	59887-78	REAR FENDER TIP (with linings 90")	73 to Early 82 - FL, FLH, FLH-80, Classic
	57	59932-58	REAR FENDER SUPPORT, left	N/A 53 to 76 - FL, FLH
		59932-77	REAR FENDER SUPPORT, left	77 to * - FL, FLH, FLH-80, Classic
	68	59933-58	REAR FENDER SUPPORT, right	N/A 53 to 76 - FL, FLH
		59933-77	REAR FENDER SUPPORT, right	77 to * - FL, FLH, FLH-80, Classic
	69	60396-84	FRAME, debris deflector	Early 84 - FLH-80
		60396-60	FRAME, debris deflector	82 - Classic; 83 & Late 84 to * - FLH-80
	70	60494-80	BRACKET, debris deflector (2)	82 - Classic; 83 & Late 84 to * - FLH-80
	71	60646-79	LENS, rear fender lamp	Late 82 to * - FLH-80, Classic
	72	69047-79	GASKET, rear fender lamp lens	Late 82 to * - FLH-80, Classic
	73	70577-26	GRIMMET, rear fender	75 to 81 - FL, FLH, FLH-80, Classic
	74	72275-74	CONNECTOR TAB (2 per hat)	Late 82 to * - FLH-80, Classic
	75	51051-51	LEE BOLT, front fender	79 to Early 81 - FL, FLH, FLH-80, Classic

FENDER TRIM

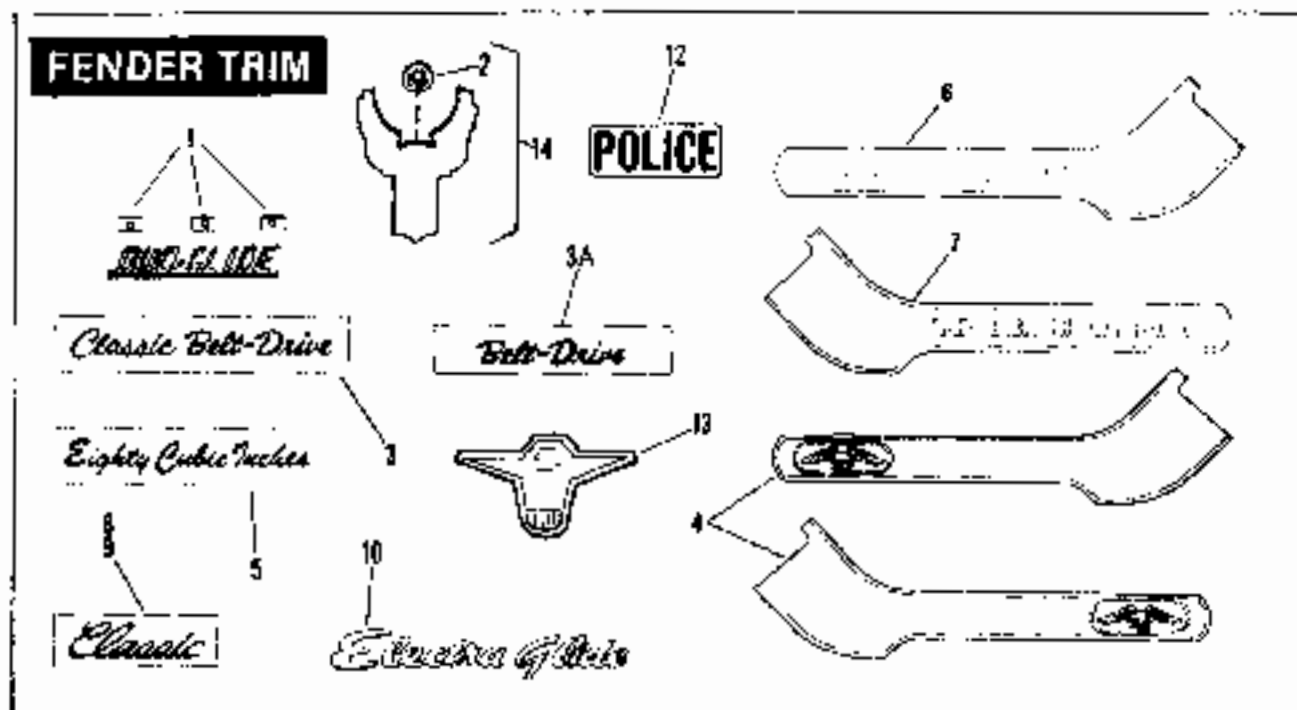


FENDER TRIM

A60A

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	7611	SPEEDNUT	62 - FLH-80, Classic
	2	7613A	SPEEDNUT (6)	58 to 61 - FL, FLH, FLH-80, Classic
	3	14015-82	TRIM, front fender - "Classic Belt-Drive" (gold) (2)	82 - Classic
		14015-92	TRIM, front fender - "Classic Belt-Drive" (silver) (2)	N/A 82 - Classic
	3A	14023-83	TRIM, front fender - "Belt-Drive" (gold) (2)	83 to 84 - FLH-80
		14024-83	TRIM, front fender - "Belt-Drive" (silver) (2)	83 to 84 - FLH-80
	4	59076-77	TRIM KIT, front fender - eagle (brown) (2)	N/A 77 & 78 - FL, FLH
		59077-77	TRIM KIT, front fender - eagle (blue) (2)	N/A 77 - FL, FLH
		59078-77	TRIM KIT, front fender - eagle (gray) (2)	N/A 77 - FL, FLH
		59079-77	TRIM KIT, front fender - eagle (red) (2)	N/A 77 - FL, FLH
		59080-77	TRIM KIT, front fender - "Classic" (2)	N/A 77 - Classic
	5	59121-80	TRIM, front fender - "Eighty Cubic Inches" (silver) (2)	80 to 82 - FLH-80
		59122-80	TRIM, front fender - "Eighty Cubic Inches" (gold) (2)	80 to 82 - FLH-80
	6	59150-79	TRIM, front fender - R, "Eighty Cubic Inch Electra-Glide" (silver)	79 - FLH-80
		59151-79	TRIM, front fender - R, "Eighty Cubic Inch Electra-Glide" (red)	79 - FLH-80
		59152-79	TRIM, front fender - R, "Eighty Cubic Inch Electra-Glide" (blue)	79 - FLH-80
		59153-79	TRIM, front fender - R, "Eighty Cubic Inch Electra-Glide" (brown)	79 - FLH-80
	7	59154-79	TRIM, front fender - L, "Eighty Cubic Inch Electra-Glide" (silver)	79 - FLH-80
		59155-79	TRIM, front fender - L, "Eighty Cubic Inch Electra-Glide" (red)	N/A 79 - FLH-80
		59156-79	TRIM, front fender - L, "Eighty Cubic Inch Electra-Glide" (blue)	79 - FLH-80
		59157-79	TRIM, front fender - L, "Eighty Cubic Inch Electra-Glide" (brown)	79 - FLH-80
	8	59158-79	TRIM, front fender - "Classic" (brown) (2)	79 & 80 - Classic
		59159-80	TRIM, front fender - "Classic" (silver) (2)	80 - Classic
		59173-81A	TRIM, front fender - "Classic" (gold) (2)	80 & 81 - Classic
	10	59186-65	NAMEPLATE, "Electra-Glide" (2)	65 to 70 - FL, FLH
	12	60111-58A	POLICE DECAL, front fender (2)	58 to 61 - FL, FLH, FLH-80, Classic
	13	61162-74	TRIM, rear fender, "FLH 1200"	N/A 74 & 75 - FLH
	14	69031-82	TRIM KIT, front, includes item 1	82 - FLH-80, Classic

LICENSE PLATE BRACKETS

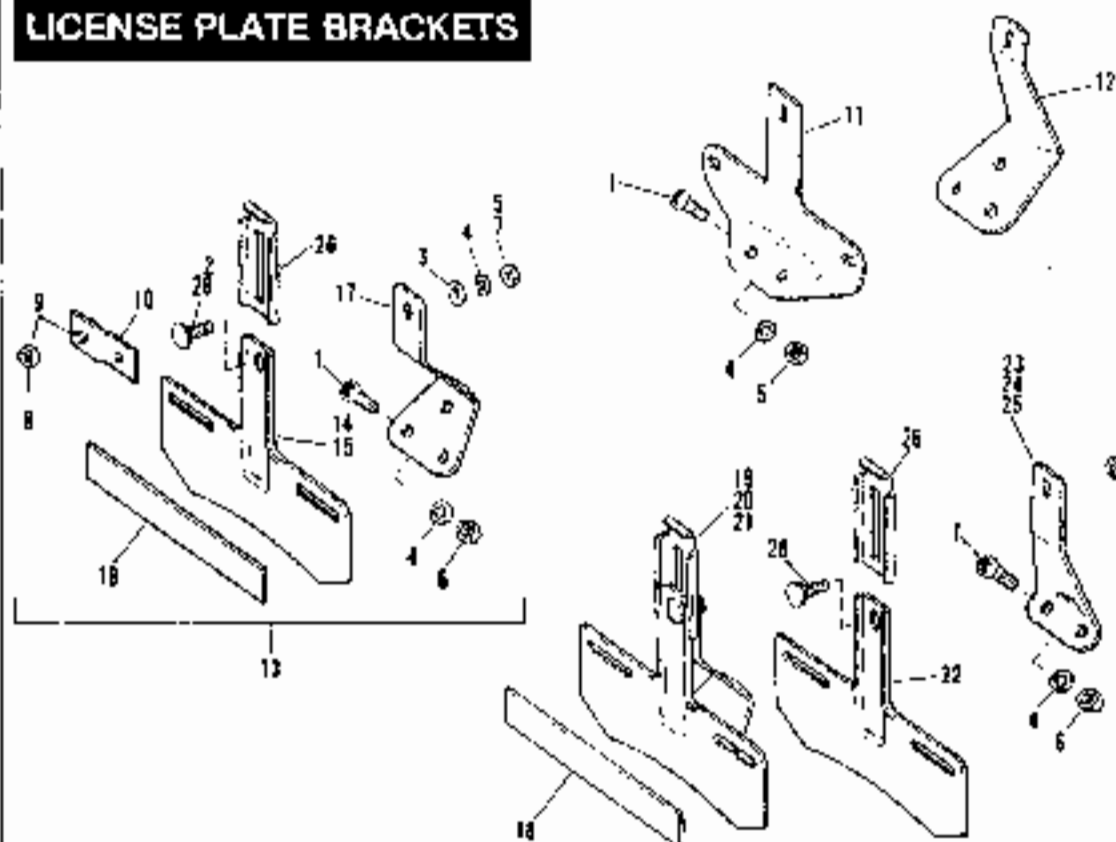


LICENSE PLATE BRACKETS

A61

DETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2774	SCREW, 1/4-20 x 5/8 Pozidriv pan hd. (2 or 3)	Late 75 to * — FL, FLH, FLH-80, Classic
	2	54098	CARRIAGE BOLT, 1/4-20 x 1/2	80 to * — FL, FLH, FLH-80, Classic
	3	5703	WASHER, 1/4 x 5/8 x 1/16	55 to * — FL, FLH, FLH-80, Classic
	4	7036	LOCKWASHER, 1/4 (2 or 3)	55 to * — FL, FLH, FLH-80, Classic
	5	7676	NUT, 1/4-20 x 3/16 x 7/16 Hex	55 to 79 — FL, FLH, FLH-80, Classic
	6	7688	NUT, 1/4-20 x 7/32 x 7/16 Hex (2 or 3)	55 to * — FL, FLH, FLH-80, Classic
	7	7689W	JAM NUT, 1/4-20 x 5/32 x 7/16 Hex	80 to * — FL, FLH, FLH-80, Classic
	11	59981-74	BRACKET, license plate (security system)	N/A 74 & 75 — FL, FLH
	12	59982-74	SUPPORT, license plate bracket (security system)	N/A 74 & 75 — FL, FLH
	13	59983-75	BRACKET ASSEMBLY, license plate	76 to * — FL, FLH, FLH-80, Classic
	14	59984-77	BRACKET, license plate	N/A Late 72 & Early 73 — FL, FLH
	15	59984-73	BRACKET, license plate	Late 73 to * — FL, FLH, FLH-80, Classic
	17	59986-75	SUPPORT, license plate bracket	75 to * — FL, FLH, FLH-80, Classic
	18	59988-72	REFLECTOR, license plate bracket	72 to * — FL, FLH, FLH-80, Classic
	19	59989-55A	LICENSE PLATE BRACKET ASSEMBLY	N/A 55 to Early 72 — FL, FLH
	20	59993-72A	LICENSE PLATE BRACKET ASSEMBLY	N/A Late 72 & Early 73 — FL, FLH
	21	59995-73	LICENSE PLATE BRACKET ASSEMBLY	N/A Late 73 — FL, FLH
	22	59997-55	BRACKET, license plate	N/A 55 to 71 — FL, FLH
	23	59999-55A	SUPPORT, license plate bracket	N/A 55 to 71 — FL, FLH
	24	59999-72	SUPPORT, license plate bracket	N/A Late 72 & Early 73 — FL, FLH
	25	59999-73	SUPPORT, license plate bracket	Late 73 — FL, FLH
	26	60001-55	CLAMP, license plate	55 to * — FL, FLH, FLH-80, Classic
	28	60002-55	BOLT, license plate clamp	55 to 79 — FL, FLH, FLH-80, Classic


1965 AND LATER

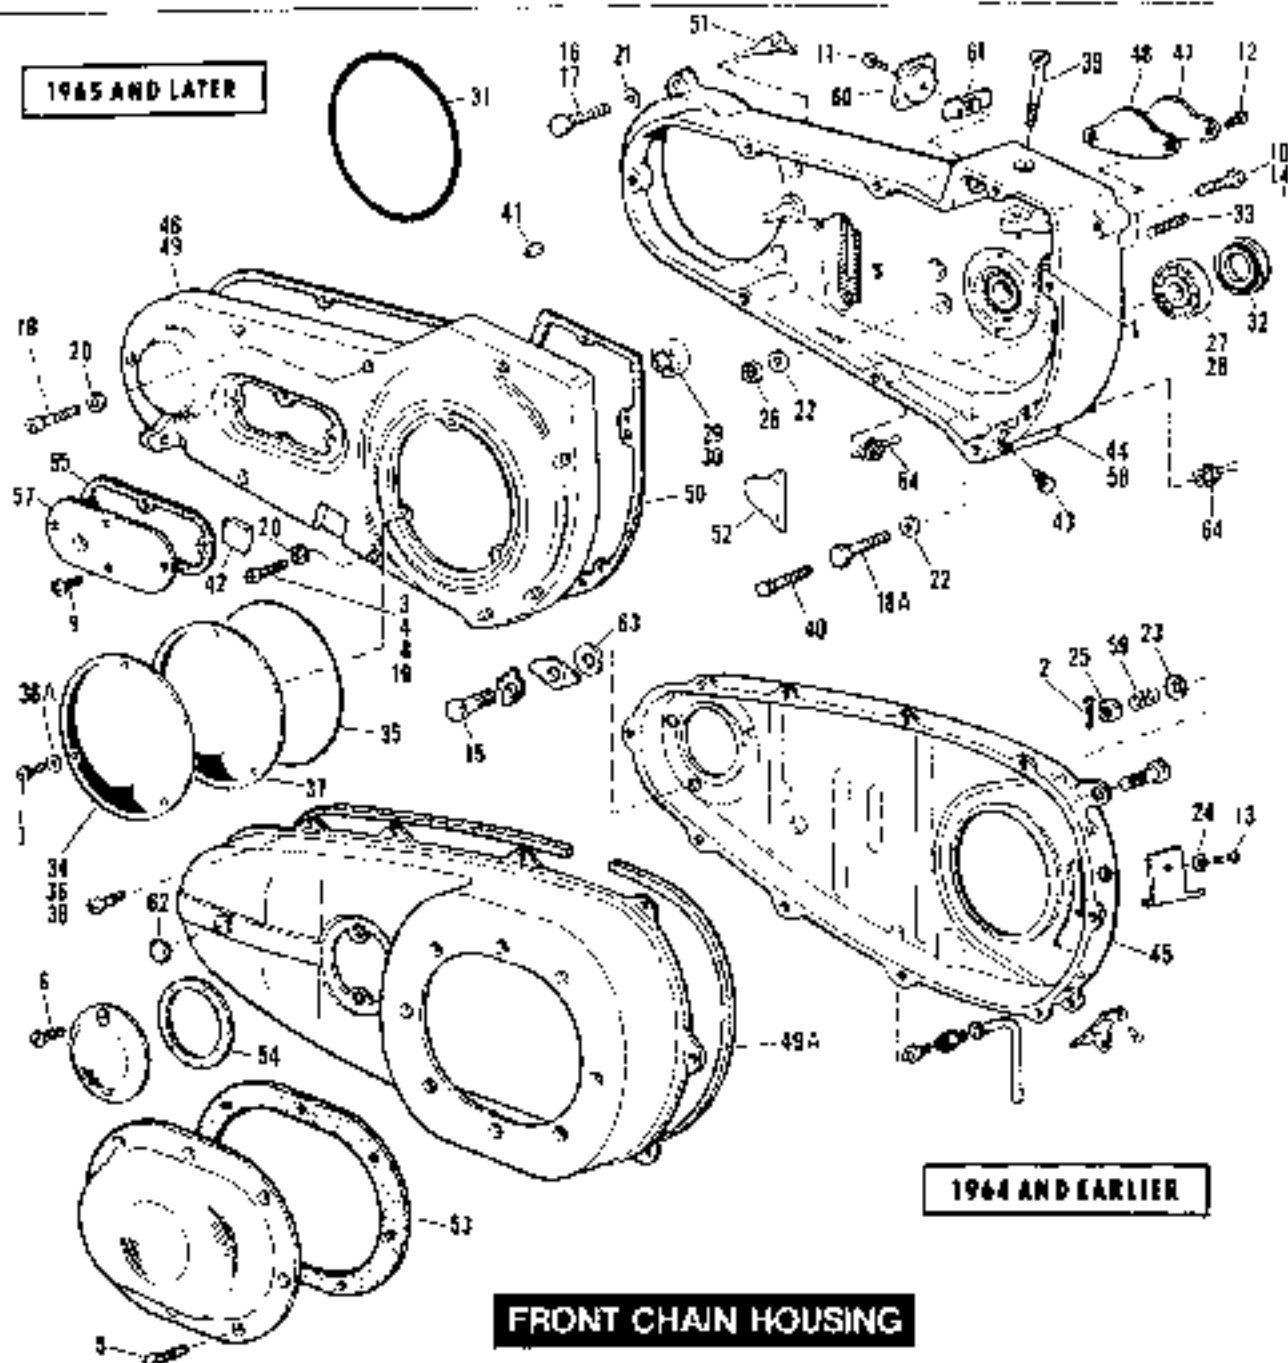

1964 AND EARLIER


FRONT CHAIN HOUSING

RETAIL PRICE	INDEX NO	PART NO	NAME	USED ON
		354A	BOLT, front chain housing	65 to * — FL, FLH, FLH-80, Classic
	2	515	OUTTER PIN	41 to 64 — FL, FLH
	2	601	SCREW, 1/4-20 x 1-1/4 Pozidriv pan hd. (black) (8)	73 & 82 — Classic
	4	1351	SCREW, 1/4-20 x 1-1/4 Pozidriv pan hd. (6; 7 3/4 & later)	70 to * — FL, FLH, FLH-80
	5	2269W	SCREW, No. 12-24 x 3/8 hex hd. (8)	41 to 64 — FL, FLH
	6	3758W	SCREW, No. 12-24 x 1/2 hex hd. (2)	41 to 64 — FL, FLH
	7	2337W	SCREW, 1/4-20 x 1/2 Phillips pan hd. (w/ top patch) (13)	73 to * — FL, FLH, FLH-80, Classic
	8	3545	SCREW, 1/4-20 x 1-1/2 disk, oval hd. (8)	N/A
	9	2356	SCREW, 1/4-20 x 1/4 Pozidriv oval disk hd. (4)	65 to 84 — FL, FLH
	10	3551W	BOLT, 1/4-20 x 1 hex hd. (rear)	65 to * — FL, FLH, FLH-80, Classic
	11	2772	SCREW, 1/4-20 x 1/2 Pozidriv pan hd.	74 to * — FL, FLH, FLH-80, Classic
	12	2774	SCREW, 1/4-20 x 5/8 Pozidriv pan hd. (2)	65 to 79 — FL, FLH, FLH-80, Classic
	12	2608	SCREW, No. 8-32 x 3/8 Pozidriv pan hd.	65 to 69 — FL, FLH
	14	2672W	BOLT, 1/4-20 x 1-1/2 hex hd. (if only)	Late 82 to 84 — FL, FLH
	15	3997	BOLT, 5/16-18 x 3/4 hex hd. (2)	79 to * — FL, FLH, FLH-80, Classic
	16	4017	BOLT, 5/16-18 x 1 hex hd. (2)	41 to 64 — FL, FLH
	17	4071	BOLT, 5/16-18 x 1 hex hd. (2) (with safety wire holes)	Early 70 — FL, FLH, FLH-80, Classic
	18	4718	SCREW, 1/4-20 x 1-1/2 socket hd.	Late 70 to * — FL, FLH, FLH-80, Classic
	18A	4720W	BOLT, 3/8-16 x 1-3/4 hex hd. (2)	81 & 82 — FLH-80, Classic
		4722	BOLT, 3/8-16 x 2-1/4 hex hd. (2)	Late 82 to * — FLH-80
	19	4813	SCREW, 1/4-20 x 1-3/8 socket hd. (7; 9-80 & later)	Late 81 & Early 82 — FLH-80; Late 81 — Classic
	20	5099	WASHER, 1/4 x 7/16 x 3/64 (9, 9-80 & later)	81 & 82 — Classic; 82 to * — FLH-80
	21	5324W	WASHER, 5/16 (4)	70 to * — FL, FLH, FLH-80, Classic
	22	5338HW	WASHER, 3/8 x 23/32 x 1/16 (4)	74 to * — FL, FLH, FLH-80, Classic
	23	5703	WASHER, 1/4 x 5/8 x 1/16 (2)	41 to 64 — FL, FLH
	24	7115	LOCKWASHER, No. 8 int. & ext. tooth	Late 82 to 84 — FL, FLH
	25	7688	NUT, 1/4-20 x 1/4 x 1/2 hex. (2)	41 to 64 — FL, FLH
	26	7775	LOCKNUT, 3/8-24 x 7/16 x 9/16 hex. (4; 2-80 & later)	55 to * — FL, FLH, FLH-80, Classic
	27	9237	BEARING, chain housing	55 to 63 — FL, FLH
	29	9640	BALL BEARING	73 to * — FL, FLH, FLH-80, Classic
	29	9681	BALL BEARING, chain housing	73 to Early 84 — FL, FLH, FLH-80, Classic
		9135	BEARING, chain housing	Late 84 to * — FLH-80
	30	9083	NEEDLE BEARING	65 to 78 — FL, FLH, FLH-80
	31	11125	O-RING, chain housing cover	70 to 82 — FL, FLH, FLH-80; 73 to 81 — Classic
		11147	O-RING, chain housing cover	82 — Classic; 83 to * — FLH-80
	32	12013	OIL SEAL	70 to Early 84 — FL, FLH, FLH-80; 82 — Classic
		12032	OIL SEAL	Late 84 to * — FLH-80
	33	24811-59A	STUD, starter shaft housing (2)	N/A
	34	25401-77	COVER, clutch, chain guard (Bagle Modification)	N/A
		25414-77	COVER, clutch, chain guard	70 to * — FL, FLH, FLH-80
	35	25416-73	GASKET, chain & clutch cover	70 to Early 84 — FL, FLH, FLH-80, Classic
		25416-84	O-RING, clutch cover	Late 84 to * — FLH-80
	36	25417-73	COVER, clutch, chain guard "80"	79 — FLH-80, Classic
	37	25420-73	INNER COVER, chain guard	Late 73 to * — FLH-80, Classic
	38	25426-80	COVER, clutch chain guard — "EIGHTY CUBIC INCHES"	80 to * — FL-80
	38A	31433-84	WASHER, clutch cover (nylon) (3)	Late 84 to * — FLH-80
	39	31478-60A	TOP SCREW, chain housing	65 to * — FL, FLH, FLH-80, Classic

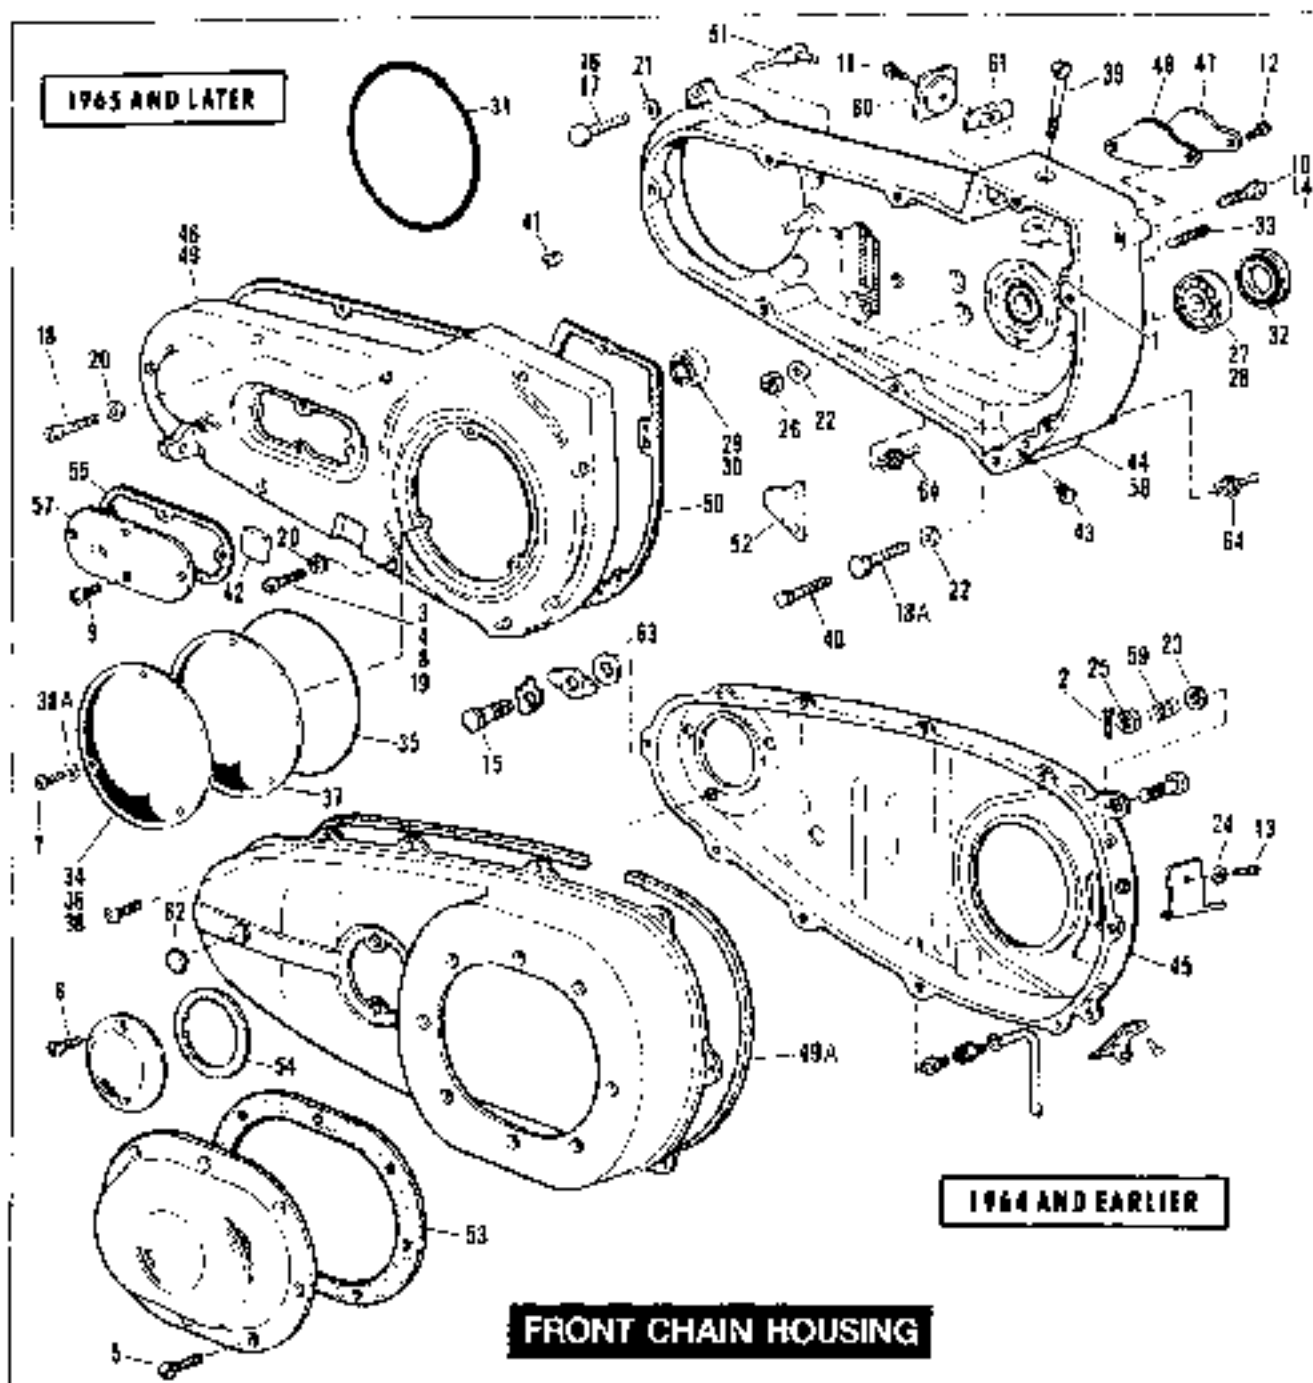


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	40	60134-79A	ROD, 12 pt. Flanged (2)	80 & Early 81 - FL, FLH-80 Classic, 85 - Classic
	41	15830-48	FLUSH, chain housing vent hole	85 - FL, FLH
	42	60130-70	FLMPTR, ply stand	70 to * - FL, FLH, FLH-80 Classic
	43	60143-55A	MAGNETIC BRAKE FLUSH KIT	85 to * - FL, FLH, FLH-80 Classic
	44	60411-79A	FRONT CHAIN HOUSING - 8 hole	79 to 82 - FL, FLH, FLH-80
		60441-78	FRONT CHAIN HOUSING (painted)	79 to 81 - Classic
			For all the above housings, on 70 thru 78 models, you must order the following hardware:	
		1454	SCREW, 1/4-20 x 1-3/4 hex. hd.	
		15036	LOCKWASHER, 1/4	
		1588	NUT, 1/4-20 x 1-1/2 hex.	
		60414-82	FRONT CHAIN HOUSING - 9 hole	92 & Early 84 - FLH-80
		60414-84	FRONT CHAIN HOUSING - 9 hole	Late 84 to * - FLH-80
		60444-82	FRONT CHAIN HOUSING (black wrinkle)	92 Classic
	45	60535-55	COVER, chain housing	N/A, 55 to 64 - FL, FLH
	46	60536-70	COVER, chain housing - with needle bearing 9062	70 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
		60536-82A	COVER, chain housing - with needle bearing 9062	83 - FLH-90
	47	60514-65	COVER, starter hole	65 to 69 - FL, FLH
	48	60518-65	GASKET, starter hole cover	65 to 69 - FL, FLH
	49	60533-82	COVER, chain housing - with needle bearing 9053	Early 82 - Classic
		60525-82A	COVER, chain housing	Late 82 Classic; 83 to * - FLH-83
	49A	60540-86	GASKET, housing cover	41 to 64 - FL, FLH
	50	60538-81C	GASKET, housing cover	65 to * - FL, FLH, FLH-80 Classic
	51	60549-70	CHAIN OILER FITTING, chain housing	70 to * - FL, FLH, FLH-80 Classic
	52	60555-74	BAFFLE PLATE, front chain housing	N/A, 66 to 72 - FL, FLH
	53	60565-36	GASKET, clutch cover	N/A, 41 to 54 - FL, FLH
	54	60567-35	GASKET, inspection cover (3)	41 to 54 - FL, FLH
	55	60567-55	GASKET, inspection cover	65 to 80 - FL, FLH, FLH-83 Classic
		60567-65B	GASKET, inspection cover	84 to * - FLH-83
	57	60572-78	INSPECTOR COVER, w/vent hole (chrome)	55 to * - FL, FLH, FLH-80, Classic
	58	60617-85A	FRONT CHAIN HOUSING	N/A, 95 to 99 - FL, FLH
	59	60640-29	SPRING, chain cover pull (2)	N/A, 41 to 64 - FL, FLH
	60	60644-55	COVER, switch hole	55 to 79 - FL, FLH, FLH-80 Classic
	61	60646-55	RETAINER, switch hole cover	55 to 78 - FL, FLH, FLH-80
	62	60650-54A	FITTING, chain housing - with gasket	N/A, 54 to 64 - FL, FLH
	63	60655-55	SPACER, spring clip (3)	N/A, 55 to 64 - FL, FLH
	64	60533-41	FITTING, vent hose	65 to * - FL, FLH, FLH-80 Classic

REAR CHAIN & BELT GUARD

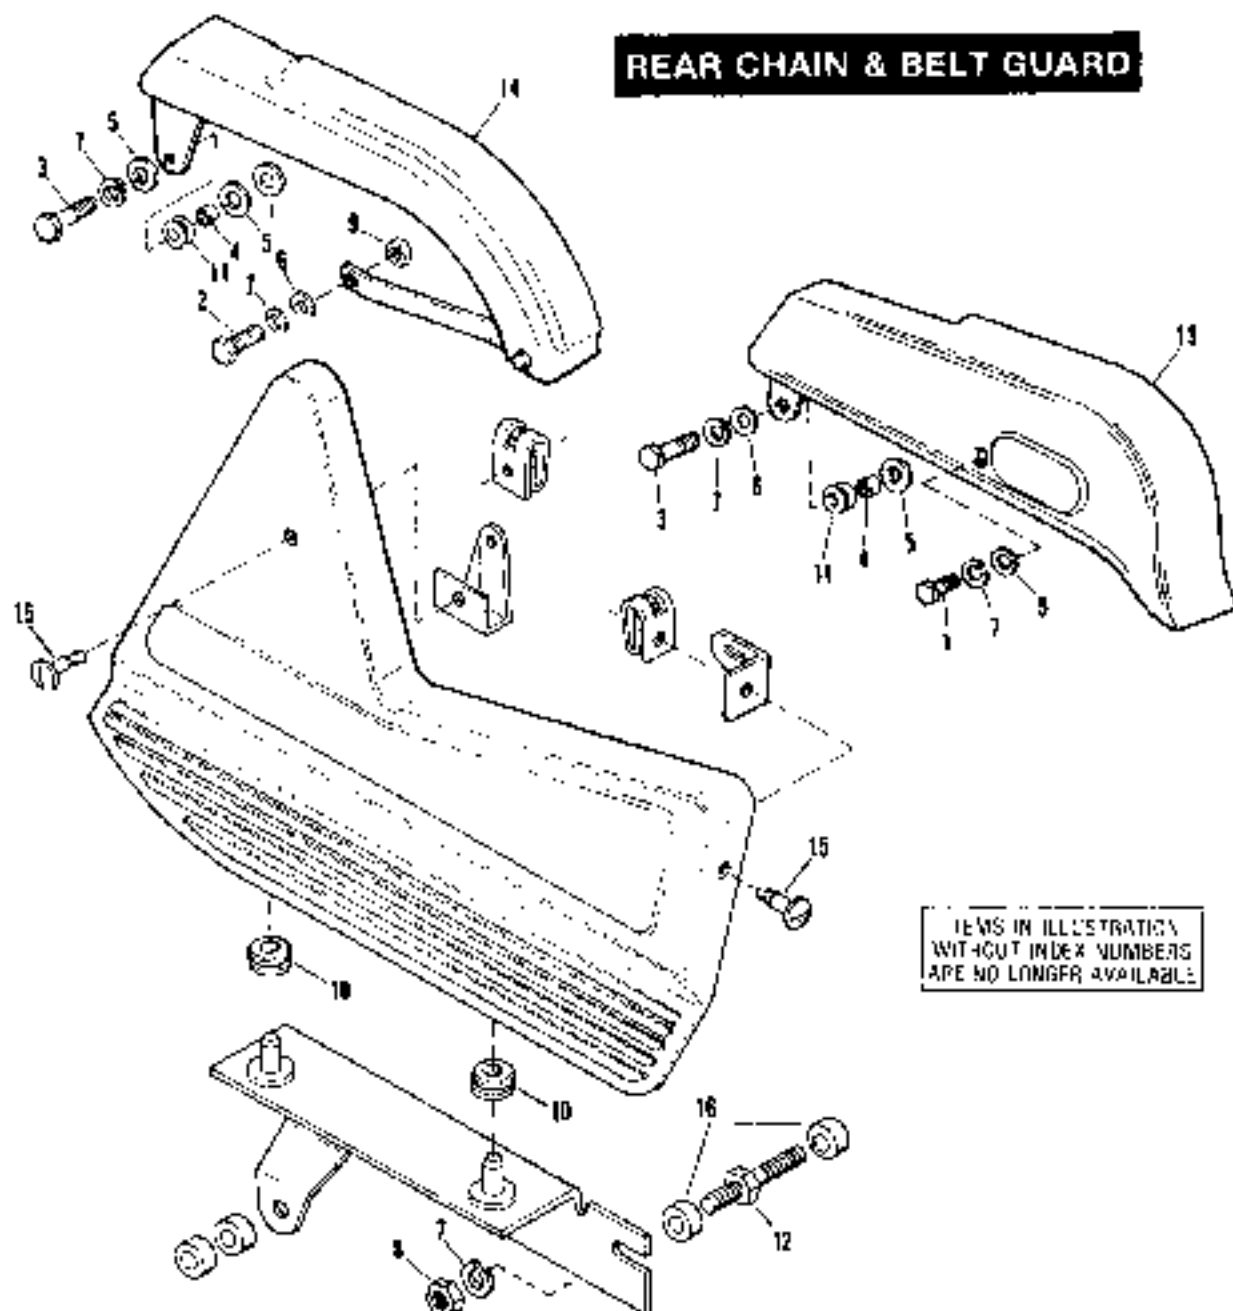


ITEMS IN ILLUSTRATION
WITHOUT INDEX NUMBERS
ARE NO LONGER AVAILABLE

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2974-W	BOLT, 5/16-24 x 3/4 hex, hd	63 to 82 - FL, FLH, FLH-80, 79 to 81 - Classic
	2	3936	BOLT, 5/16-24 x 7/8 hex, hd	82 - Classic, 83 to * - FLH-80
	3	4074-W	BOLT, 5/16-24 x 1-1/4 hex, hd	68 to * - FL, FLH, FLH-80, Classic
	4	5926B	SPACER, chain/guard - front mounting	63 to 72 - FL, FLH; 74 to * - FL, FLH, FLH-80, Classic
	5	6197B	WASHER, 5/16 x 11/16 x 1/8, 2, 3 - 1 are 83	63 to * - FL, FLH, FLH-80, Classic
	6	6702	WASHER, 5/16 x 11/16 x 1/16	73 to * - FL, FLH, FLH-80, Classic
	7	7041	LOCKWASHER, 5/16 (3: 1 92 & later - Classic)	68 to * - FL, FLH, FLH-80, Classic
	8	7744	NUT, 5/16-24 x 3/16 x 1/2 (panel kit)	65 to 72 - FL, FLH
	9	7753	NUT, 5/16-24 x 1/4 x 1/2 hex	82 - Classic, 83 to * - FLH-80
	10	11450	GROMMET, plate, ballcm, bracket (2)	65 to 72 - FL, FLH
	11	11451	GROMMET, chain/guard mounting	63 to * - FL, FLH, FLH-80, Classic
	12	24827-58A	STUD, transmission cover (panel kit)	65 to 72 - FL, FLH
	13	60307-53	REAR CHAIN GUARD	63 to 82 - FL, FLH, FLH-80; 79 to 81 - Classic
	14	60388-92	BELT GUARD, rear (black)	82 - Classic, 83 to * - FLH-80
	15	60580-69	STUD (2)	N/A 65 to 72 - FL, FLH
	16	91089-58	SPACER, transmission cover stud (2) (panel kit)	65 to * - FL, FLH, FLH-80, Classic

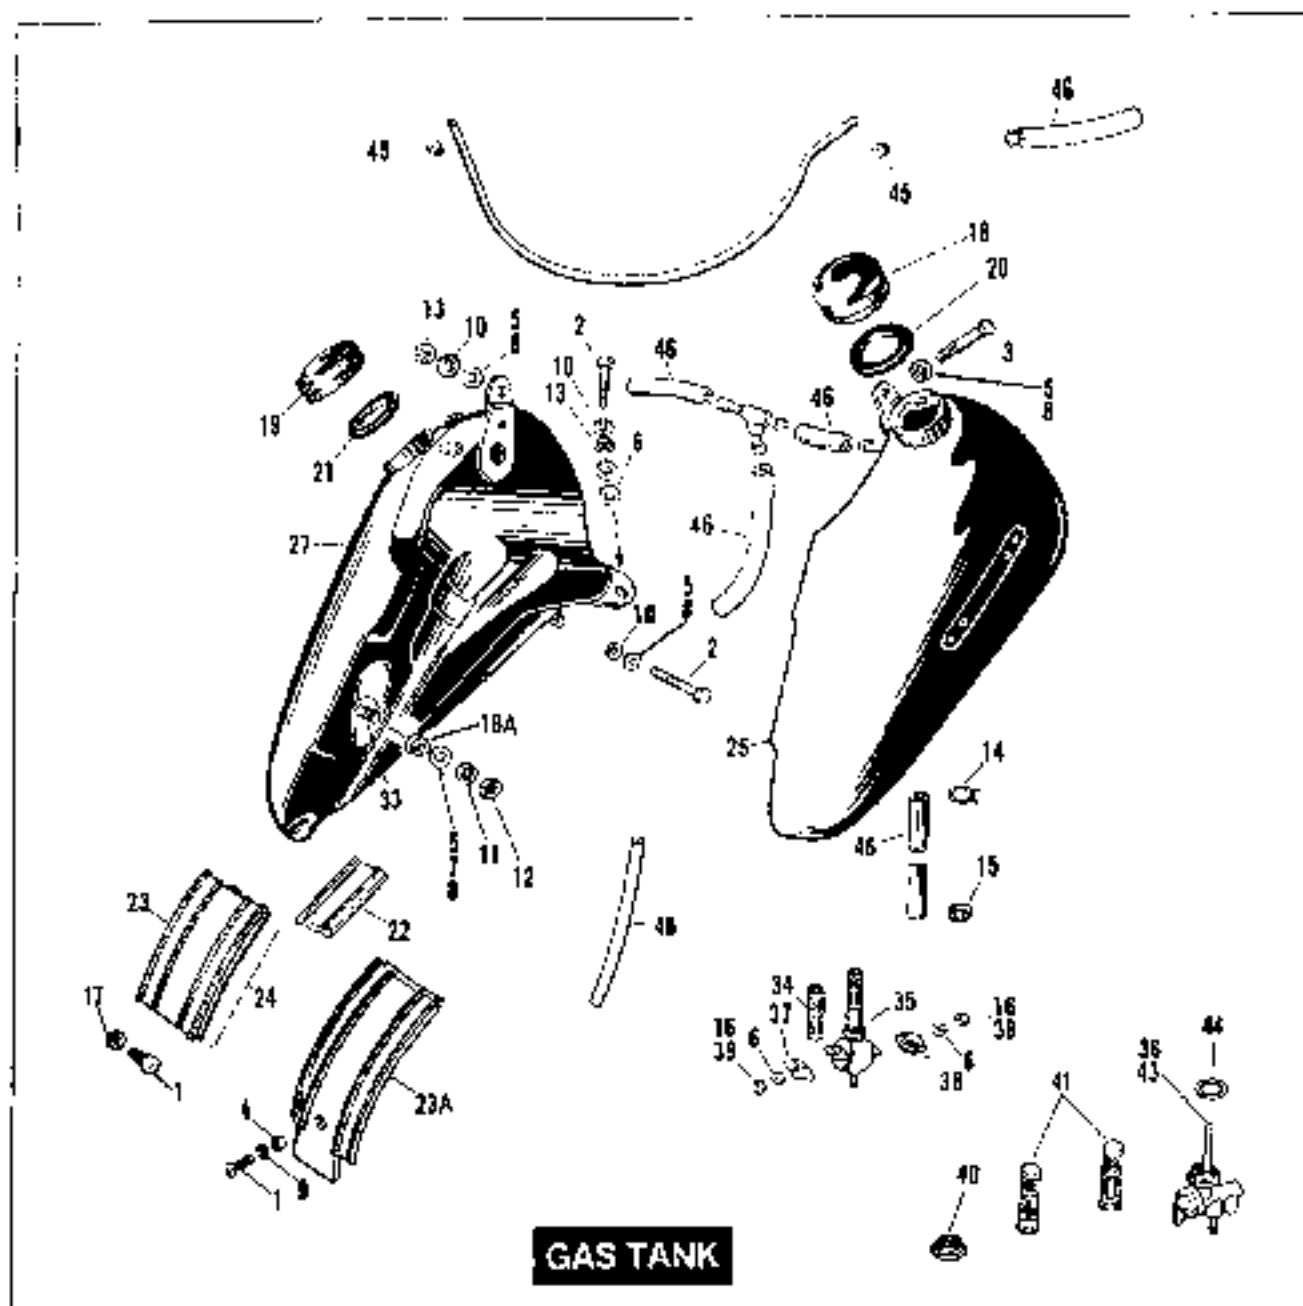

REF. NO.	INDEX NO.	PART NO.	NAME	USED ON
NOTE: REFER TO DEALER ACCESSORY GUIDE FOR PAINTED PARTS.				
1	903	SCREW, 1/4-20x1 1/4 Round head, zinc pl. (dash)	82 to Early 84	FL-90, Classic
	2513	SCREW, 1/4-20 x 1-1/4 serrated end (dash)	Late 84 to * - FL-80	
2	3900W	BOLT, 5/16-24 x 1-1/4 hex. (incl. 3-2-82 & later)	41 to 82 - FL, FLH, FLH-80, Classic	
	4014W	BOLT, 5/16-24 x 1-1/4 hex. (incl.)	83 to * - FLH-80	
3	4725	BOLT, 5/16-24 x 2-3/4 hex. (incl.)	41 to * - FL, FLH, FLH-80, Classic	
4	5733	SPLASH, fuel tank trim	83 to * - FLH-80	
5	5708	WASHER, 5/16 x 11/16 x 1/8 (dash)	41 to * - FLH-80	
6	5760P	1-FLH WASHER (as required)	N/A Late 80 to 74 - FL, FLH	
7	9024W	WASHER, 5/16 x 11/16 x 3/32 (dash)	65 to 75 - FL, FLH	
8	9024H	WASHER, 5/16 x 2/4 x 1/16 (5-2-82 & later)	41 to * - FL, FLH, FLH-80, Classic	
	9400HE	WASHER, 3/8 x 13/16 x 9/32 (dash)	82 & 83 - FL-80, Classic	
9	9411	WASHER, 9/32 x 5/8 x 1/2 (dash)	83 to * - FLH-80	
10	7041	LOCKWASHER, 5/16 (dash)	41 to * - FL, FLH, FLH-80, Classic	
11	7127	LOCKWASHER, 5/16 (internal thread) (2)	83 to Early 71 - FL, FLH	
12	7725	LOCKWASHER, 5/16-24 x 11/32 x 1/2 hex. (2)	74 & 75 - FL, FLH	
13	7752	NUT, 5/16-24 x 17/64 x 1/2 hex. (4)	41 to * - FL, FLH, FLH-80, Classic	
14	9993	WIRE CLAMP (1/2" incl. hose) (2)	Late 65 to 82 - FL, FLH, FLH-80, Classic	
15	10014	BAND CLAMP (1/2" incl. hose) (2) (5-83 & later)	87 to * - FL, FLH, FLH-80, Classic	
16	11040P	LOCK RING (2)	Late 69 to 74 - FL, FLH	
16A	52103-31	SPACER, fuel tank (2)	Late 80 to * - FL, FLH, FLH-80, Classic	
17	60975-78	MOUNTING, fuel tank trim	82 - FLH-80, Classic	
18	91107-73	CAP, fuel tank (vented)	N/A Late 73 to 82 - FL, FLH, FLH-80, Classic	
	61102-33A	CAP, fuel tank (vented)	83 to * - FLH-80	
	61103-36	CAP, fuel tank (vented)	N/A 41 to Early 73 - FL, FLH	
19	61103-65	CAP, fuel tank - (not vented)	N/A 65 to Early 73 - FL, FLH	
	91113-73A	CAP, fuel tank (not vented)	N/A Late 73 to 82 - FL, FLH, FLH-80, Classic	
	91113-80	CAP, fuel tank (not vented)	83 to * - FLH-80	
20	51111-77	GASKET, right tank cap	41 to 82 - FL, FLH, FLH-80, Classic	
21	51116-80	GASKET, left tank cap	55 to 82 - FL, FLH, FLH-80, Classic	
22	51122-35	FILLER STRIP (rubber) (standard seat)	41 to Early 78 - FL, FLH, FLH-80, Classic	
	51122-75	FILLER STRIP (rubber) (standard seat)	Late 75 to 81 - FL, FLH, FLH-80, Classic	
23	91141-80	FILLER STRIP, fuel tank	82 - FLH-80, Classic	
23A	91141-80B	FILLER STRIP, fuel tank	83 to * - FLH-80	
24	91199-82	TAFF, filler strip (2)	82 - FLH-80, Classic	
25	61212-83	FUEL TANK, right (15 gal.) (primer)	57 to * - FL, FLH, FLH-80, Classic	
	61217-69A	FUEL TANK, right (13-1/2 gal.) (primer w/ new tab)	N/A 64 to 77 - FL, FLH	
	61219-83	FUEL TANK, right (10-1/2 gal.) (primer)	78 to * - FL, FLH, FLH-80, Classic	
27	61229-83	FUEL TANK, left (15 gal.) (primer)	57 to * - FL, FLH, FLH-80, Classic	
	61230-69A	FUEL TANK, left (13-1/2 gal.) (primer w/ new tab)	N/A 68 to 77 - FL, FLH	
	61425-80	FUEL TANK, left (12-1/2 gal.) (primer)	78 to * - FL, FLH, FLH-80, Classic	
30	61505-35	REAR MOUNTING STUD (2)	N/A 41 to 75 - FL, FLH	
31	62066-60	FILTER SCREEN, fuel valve (Nylon)	59 to 74 - FL, FLH	
32	92125-55B	FUEL VALVE, ASSFAB 7	66 to 74 - FL, FLH	
36	62129-75	FUEL VALVE, without filter or with - with reserve tube	75 to 80 - FL, FLH, FLH-80, Classic	
37	62141-65P	4/8B, fuel valve	N/A Late 68 to 74 - FL, FLH	
38	62142-58P	4/8B, fuel valve (reserve)	N/A Late 58 to 74 - FL, FLH	
39	62150-58	NETA HUNG R. NO. valve - 190 (2)	N/A 66 to 69 - FL, FLH	
40	52161-75	RLT, fuel valve	75 to * - FL, FLH, FLH-80, Classic	
41	62162-75	FILTER, fuel valve	75 to 80 - FL, FLH, FLH-80, Classic	
	62165-81	FILTER, fuel valve - with reserve tube	81 to * - FLH-80, Classic	
42	62166-81	FUEL VALVE, without filter and with reserve tube	81 to * - FLH-80, Classic	
44	52172-75	GASKET, fuel valve	81 to * - FLH-80, Classic	
45	62160-50	SLEEVE, fuel line (2)	N/A 59 to 65 - FL, FLH	
NOTE: Hose is sold only in bulk length under the following part number. Cut to required length.				
46	60501-50	HOSE, 1/4 ID x 5/8 OD - extruded rubber (25 ft.)	59 to * - FL, FLH, FLH-80, Classic	

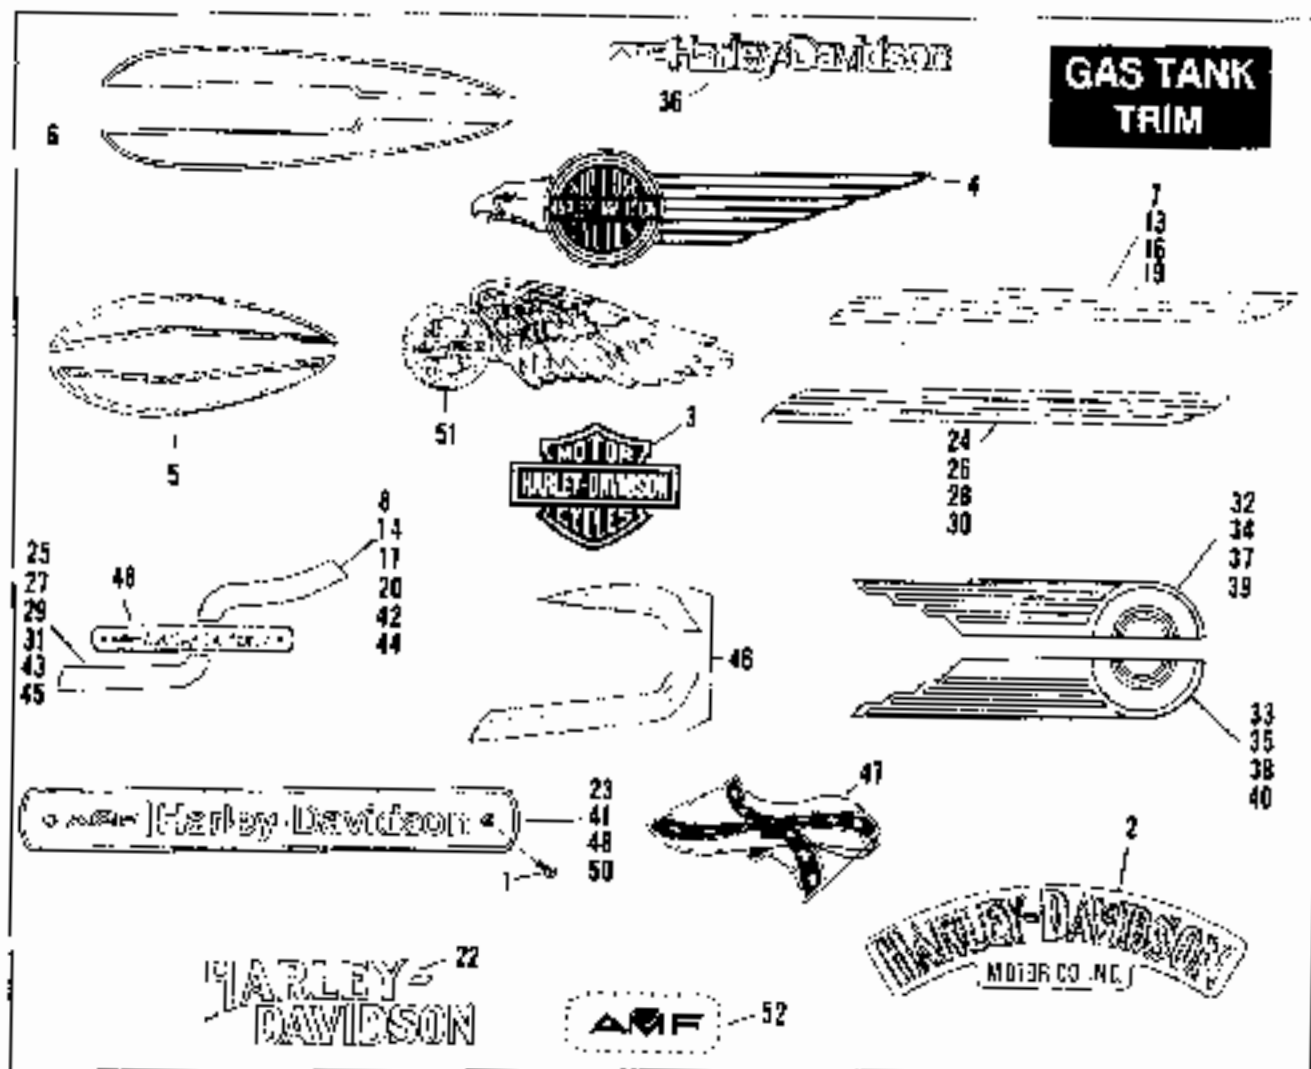


GAS TANK TRIM


A65-1

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2061W	SCREW, No. 4-40 x 3/16 Ph tip-hd (4)	63 to 81 — FL, FLH, FLH 80 Classic
	2	14001-82	DECAL, tank side (gold)	82 — Classic
		14002-82	DECAL, tank side (gold & red)	82 — Classic
		14003-82	DECAL, tank side (silver & grey)	82 — Classic
	3	14004-82	DECAL, tank side (silver on black)	83 FLH-80
		14005-82	DECAL, tank side (gold on black)	83 to * — FL-83
		14006-82	DECAL, tank side (gold on brown)	83 to * — FL-83
	4	14061-84	WING DECAL, tank side — R (gold / brown / black)	84 to * — FL-83
		14062-84	WING DECAL, tank side — L (gold / brown / black)	84 to * — FL-83
		14063-84	WING DECAL, tank side — R (silver / gray / black)	84 to * — FL-83
		14064-84	WING DECAL, tank side — L (silver / gray / black)	84 to * — FL-83
	5	E1145-71	DECAL, bottom #1 (black)	N/A 71 — FL, FLH
	6	E1146-72	DECAL, tank side — L (red, white & blue)	N/A 72 — FL, FLH
	7	E1148-74	TRIM, tank side — upper right (red, white & blue)	N/A 74 — FL, FLH
	8	E1146-75	TRIM, tank side — upper right (red, white & blue)	N/A 75 — FL, FLH
	13	E1150-74	TRIM, tank side — upper right	N/A 74 — FL, FLH
	14	E115C-75	TRIM, tank side — upper right (brown, pink & purple)	N/A 75 — FL, FLH
	15	E1153-74	TRIM, tank side — upper left	N/A 74 — FL, FLH
	17	E1153-75	TRIM, tank side — upper left (brown, pink & purple)	N/A 75 — FL, FLH
	19	E1155-74	TRIM, tank side — upper left (red, white & blue)	N/A 74 — FL, FLH
	20	E1155-75	TRIM, tank side — upper left (red, white & blue)	N/A 75 — FL, FLH

RETAIL PRICE	INDEX NO	PAHT NO.	N A M E	USED ON
	22	61205-77	TRIM, gas tank (blue & yellow)	1977 & 78 - FL
		61243-78	TRIM, gas tank (black & gold) (2)	Early 80 - FL, FLH
	23	61201-79A	NAMEPLATE, gas tank (gold) (2)	79 & 80 - FL, FLH, FLH-80
	24	61257-74	TRIM, tank side - lower right (red, white & blue)	N/A 74 - FL, FLH
	25	61257-75	TRIM, tank side - lower right (red, white & purple)	N/A 75 - FL, FLH
	26	61258-74	TRIM, tank side - lower right (red, white & blue)	N/A 74 - FL, FLH
	27	61258-75	TRIM, tank side - lower right (red, white & blue)	N/A 75 - FL, FLH
	28	61258-76	TRIM, tank side - lower left (red, white & blue)	N/A 74 - FL, FLH
	29	61258-75	TRIM, tank side - lower left (brown, blue & purple)	N/A 75 - FL, FLH
	30	61258-74	TRIM, tank side - lower left (red, white & blue)	N/A 74 - FL, FLH
	31	61259-75	TRIM, tank side - lower left (red, white & blue)	N/A 75 - FL, FLH
	32	61225-79	TRIM, tank side - upper right (gold, light & dark brown)	79 & 80 - FL, FLH, FLH-80, Classic
	33	61225-75	TRIM, tank side - lower right (gold, light & dark brown)	79 & 80 - FL, FLH, FLH-80, Classic
	34	61227-79	TRIM, tank side - upper left (gold, light & dark brown)	79 & 80 - FL, FLH, FLH-80, Classic
	35	61228-79	TRIM, tank side - lower left (gold, light & dark brown)	79 & 80 - FL, FLH, FLH-80, Classic
	36	61348-78	NAMEPLATE - L (red)	78 - FL, FLH, FLH-80
		61349-79	NAMEPLATE - L (blue)	N/A 79 - FL, FLH, FLH-80
		61350-76	NAMEPLATE - L (orange)	N/A 78 - FL, FLH, FLH-80
		61352-76	NAMEPLATE - R (red)	N/A 78 - FL, FLH, FLH-80
		61353-76	NAMEPLATE - R (blue)	N/A 78 - FL, FLH, FLH-80
		61354-78	NAMEPLATE - R (brown)	N/A 78 - FL, FLH, FLH-80
	37	61356-79	TRIM, tank side - upper right (silver, red & gray)	79 & 80 - FL, FLH, FLH-80, Classic
	38	61357-79	TRIM, tank side - lower right (silver, red & gray)	79 & 80 - FL, FLH, FLH-80, Classic
	39	61358-79	TRIM, tank side - upper left (silver, red & gray)	79 & 80 - FL, FLH, FLH-80, Classic
	40	61359-79	TRIM, tank side - lower left (silver, red & gray)	79 & 80 - FL, FLH, FLH-80, Classic
	41	61350-79	NAMEPLATE, gas tank (gold) (2)	79 & 80 - Classic, 80 - FL, FLH, FLH-80
	42	61370-75	TRIM, tank side - upper right (green, blue & black)	N/A 75 - FL, FLH
	43	61371-75	TRIM, tank side - lower right (green, blue & black)	N/A 75 - FL, FLH
	44	61372-75	TRIM, tank side - upper left (green, blue & black)	N/A 75 - FL, FLH
	45	61373-75	TRIM, tank side - lower left (green, blue & black)	N/A 75 - FL, FLH
	46	61470-76	TRIM KIT, gas tank - R (black)	N/A 76 - FL, FLH
		61471-76	TRIM KIT, gas tank - R (brown)	N/A 76 - FL, FLH
		61472-76	TRIM KIT, gas tank - R (blue)	N/A 76 - FL, FLH
		61473-75	TRIM KIT, gas tank - R (red)	N/A 76 - FL, FLH
		61474-76	TRIM KIT, gas tank - R (orange)	N/A 75 - FL, FLH
		61475-76	TRIM KIT, gas tank - L (black)	N/A 76 - FL, FLH
		61476-76	TRIM KIT, gas tank - L (brown)	N/A 76 - FL, FLH
		61477-76	TRIM KIT, gas tank - L (blue)	N/A 76 - FL, FLH
		61478-76	TRIM KIT, gas tank - L (red)	N/A 76 - FL, FLH
		61479-76	TRIM KIT, gas tank - L (orange)	N/A 76 - FL, FLH
	47	61550-77	TRIM, "CONFEDERATE EDITION" - R	N/A 77 - FLH
		61551-77	TRIM, "CONFEDERATE EDITION" - L	N/A 77 - FLH
	48	61771-77	NAMEPLATE (silver) (2)	N/A 72 & 75 - FL, FLH
		61772-76	NAMEPLATE (gold) (2)	76 & 77 - FL, FLH, FLH-80
	49	61796-77	NAMEPLATE, gas tank (brown) (2)	N/A 77 - FL, FLH
		61797-77	NAMEPLATE, gas tank (blue) (2)	N/A 77 - FL, FLH
		61798-77	NAMEPLATE, gas tank (black) (2)	N/A 77 - FL, FLH
		61799-77	NAMEPLATE, gas tank (red) (2)	N/A 77 - FL, FLH
	50	61900-81	WING DECAL, tank side - L (gold)	81 & 82 - FLH-80
		61901-81	WING DECAL, tank side - R (gold)	81 & 82 - FLH-80
		61902-81	WING DECAL, tank side - L (silver)	81 & 82 - FLH-80, Classic
		61903-81	WING DECAL, tank side - R (silver)	81 & 82 - FLH-80, Classic
		61904-81	WING DECAL, tank side - L (red)	81 & 82 - FLH-80, Classic
		61905-81	WING DECAL, tank side - R (red)	81 & 82 - FLH-80, Classic
	51	61905-81	DECAL, tank side (gold) (2)	N/A 81 - FLH-80, 81 - Classic
		61907-81	DECAL, tank side (gray) (2)	N/A 81 - FLH-80, 81 - Classic

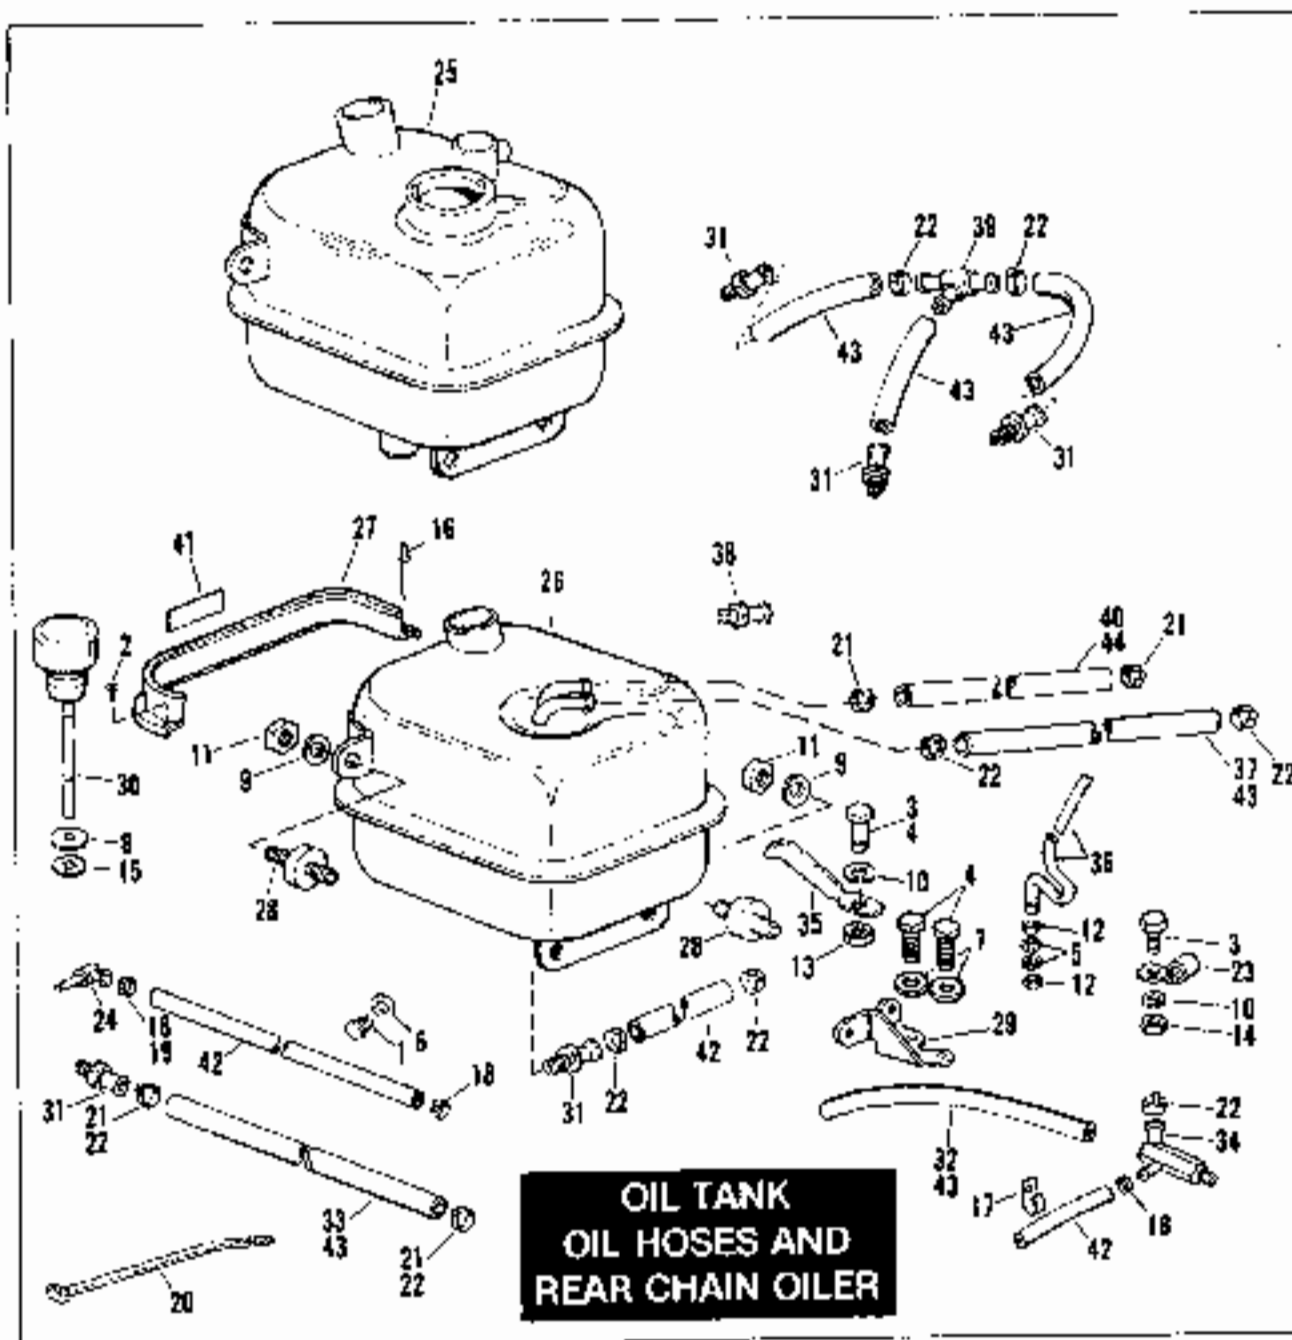


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	734	DRAIN PLUG	Late 61 - FLH-60, Classic
		735A	DRAIN PLUG	61 to * - FL, FLH, FLH-90, Classic
	2	20729	SCREW, hex 4-24 x 1/2 in. (locking type) (2)	65 to Early 81 - FL, FLH, FLH-80, Classic
	3	3974-22	BOLT 5/16-24 x 1/4 hex. (2)	65 to Early 80 - FL, FLH, FLH-80, Classic
		3987	BOLT 5/16-18 x 3/4 hex. (4)	Late 80 to Early 84 - FL, FLH, FLH-80, Classic
	4	4991	BOLT 5/16-24 x 3/8 hex. (6)	63 to * - FL, FLH, FLH-80, Classic
	5	6239	WASHER, 1/4 x 5/8 x 1/16 (chrome) (2)	Late 64 to * - FLH-80
	6	6700B	WASHER 5/16 x 11/16 x 1/32	41 to 83 - FL, FLH, FLH-80, Classic
	7	6702	WASHER 5/16 x 11/16 x 1/16 (2)	80 to * - FL - FLH-90, Classic
	8	6703	WASHER, 1/4 x 5/8 x 1/16	70 to * - FL, FLH, FLH-80, Classic
	9	7036	LOCKWASHER, 1/4	58 to * - FL, FLH, FLH-80, Classic
	10	7041	LOCKWASHER, 5/16	41 to Early 84 - FL, FLH, FLH-80, Classic
	11	7986	NUT, 1/4-20 x 1/4 x 1/2 hex. (2)	65 to * - FL, FLH, FLH-80, Classic
	12	7989A	NUT (2) 1/4-20 x 5/32 x 7/16 hex. (2)	Late 84 to * - FLH-80
	13	77684	NUT 5/16-18 x 17/64 x 1/2 hex.	Late 80 to Early 84 - FL, FLH, FLH-80, Classic
	14	7793	NUT 5/16-24 x 1/4 x 1/2 hex.	67 to Early 76 - FL, FLH, FLH-80, Classic
	15	8126	SELF-LOCKING NUT (2)	70 to * - FL, FLH, FLH-80, Classic
	16	8898	POP RIVET (2)	65 to * - FL, FLH, FLH-80, Classic
	17	9451	CLAMP, chain oiler hose	Late 79 to 82 - FL, FLH, FLH-80
				79 to 81 - Classic
	18	9992	HOSE CLAMP, oiler hose - 1 1/2 dia. (3 - Late 77 & early 78; 2 - 81 & Earlier - Classic; 2 - 82 & Later - FLH-80)	65 to * - FL, FLH, FLH-80, Classic
	19	9996	HOSE CLAMP - 3/8 dia.	Late 79 to Early 84 - FL, FLH, FLH-80, Classic
	20	10006	HOSE STRAP, oil hose (2-80 & later)	65 to * - FL, FLH, FLH-80, Classic
	21	10014	CLAMP, oil hoses - 1 1/2 dia. (2)	Late 61 to * - FL, FLH, FLH-80, Classic
	22	10080	CLAMP, oil hoses (15, 18 - Classic)	Late 61 to * - FL, FLH, FLH-80, Classic
	23	24623-67	CLAMP, rear chain oiler hose	67 to Early 77 - FL, FLH
		24921-77	CLAMP, rear chain oiler hose	N/A Late 77 & Early 78 - FL, FLH, FLH-80
	24	80549-72	CHAIN OILER FITTING, chain housing	70 to Early 84 - FL, FLH, FLH-80, Classic
	25	62493-81	OIL TANK KIT	65 to Early 62 - FL, FLH, FLH-80, Classic
			NOTE: To use on 1975 & earlier vehicles, use 62504-80 BATTERY CARRIER	
	26	62504-87A	OIL TANK	Late 92 to * - FLH-80, Classic
		62541-82A	OIL TANK KIT	N/A 63 & 64 - FLH-80
	27	62504-85	COILING, oil tank (without "H" decal)	65 to * - FL, FLH, FLH-90, Classic
	28	62563-85	RUBBER MOUNT (2)	65 to * - FL, FLH, FLH-80, Classic
	29	62576-65A	BRACKET, oil tank mounting	65 to Early 75 - FL, FLH, FLH-80, Classic
		62576-74	BRACKET, oil tank mounting	Late 79 & Early 80 - FL, FLH, FLH-80, Classic
	30	62625-79A	FILTER CAP, with dipstick	70 to * - FL, FLH, FLH-80, Classic
	31	63543-41	FITTING, feed and oiler return hoses (2)	65 to * - FL, FLH, FLH-80, Classic
	32	63536-94	HOSE, oil pump to filter inlet	Late 84 to * - FLH-80
	33	63539-84	HOSE, oil pump to filter from oil tank outlet	Late 84 to * - FLH-90
	34	63541-79	TEE, rear chain oiler	70 to Early 78 - FL, FLH, FLH-80
	35	63545-65A	BRACKET, includes items 5 & 7	65 to * - FL, FLH, FLH-80, Classic
	36	63564-84	HOSE, crankcase to oil tank vent	Late 84 to * - FLH-80
	37	63570-62	FITTING, vent hose	51 to 75 - FL, FLH, FLH-90, Classic
	38	63580-66A	TEE, vent hoses	65 to Early 84 - FL, FLH, FLH-90, Classic
	39	63587-84	HOSE, oil filter to oil tank vent	Late 84 to * - FLH-80
	40	56035-79	CABLE, "warning - disconnect battery, etc." (silver)	70 & 80 - FL, FLH, FLH-80, Classic
		66047-80A	CABLE, "warning - disconnect battery, etc." (silver)	61 to * - FLH-80, Classic
	42	63591-82	HOSE, front & rear chain oiler (rear - 82 & Earlier)	66 to * - FL, FLH, FLH-90, Classic
			NOTE: Hose is sold only in 6 ft. length under the following part numbers. Cut to required length.	
	43	53503-66	HOSE, 3/8 I.D. x 9/8 O.D., reinforced (25 ft. lg.)	59 to * - FL, FLH, FLH-80, Classic
	44	53531-68	HOSE, 1/4 I.D. x 1/2 O.D., reinforced (25 ft. lg.)	65 to * - FL, FLH, FLH-80, Classic

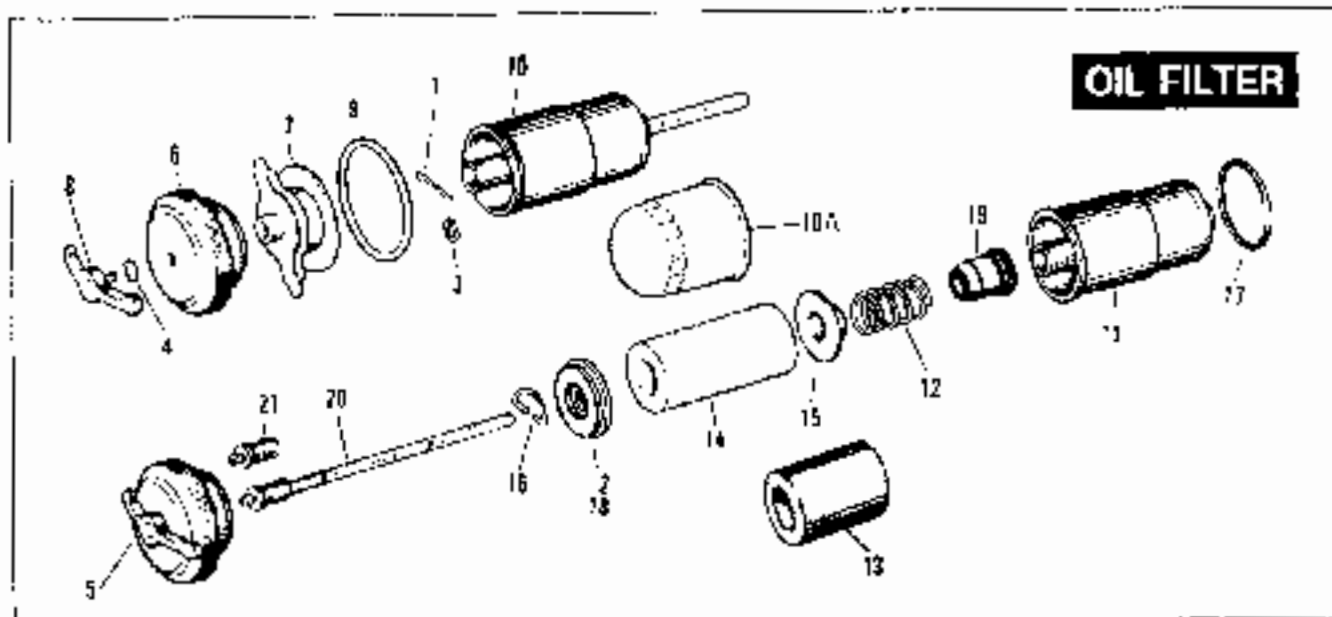

OIL FILTER

A67

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	534	COTTER PIN, 3/32 x 5/8	58 to Early 82 — FL, FLH, FLH-80, Classic
	2	6377	WASHER, 3/4 x 1-11/16 x 1/8	58 to Early 82 — FL, FLH
	3	11012	RETAINING RING	Late 86 to Early 82 — FL, FLH, FLH-80, Classic
	4	11105	O-RING, cap top	Late 86 to Early 82 — FL, FLH, FLH-80, Classic
	5	62610-52A	CAP ASSEMBLY	58 to Early 82 — FL, FLH, FLH-80, Classic
	5	52611-66	CAP TOP	N/A, Late 86 to Early 82 — FL, FLH, FLH-80, Classic
	7	52612-65	LOCKING NUT, filter cap	Late 86 to Early 82 — FL, FLH, FLH-80, Classic
	8	62620-66	SCREW, filter cap	Late 86 to Early 82 — FL, FLH, FLH-80, Classic
	9	52626-65	GASKET, oil filter cap	Late 86 to Early 82 — FL, FLH, FLH-80, Classic
		53785-80	OIL FILTER CONVERSION KIT — chrome	80 to Early 82 — FLH, FLH-80, Classic
		53794-77	OIL FILTER CONVERSION KIT — chrome	Late 77 to 79 — FL, FLH, FLH-80, Classic
			NOTE: Cannot be used with Iron Highway Rail	
	10	53795-65A	OIL FILTER ASSEMBLY, less cap	65 to 80 — FL, FLH
	10A	63805-80	OIL FILTER, conversion kit (black)	Early 82 — FL-80, Classic
		53810-80A	OIL FILTER, spin-on (black)	Late 82 to 84 — FLH-80, Classic
	11	53826-53	CLIP, oil filter	58 to Early 82 — FL, FLH, FLH-80, Classic
	12	53831-67	SPRING, filter cap	Late 67 to Early 82 — FL, FLH, FLH-80, Classic
	13	63840-46A	FILTER ELEMENT	41 to 64 — FL, FLH
	14	53840-53	FILTER ELEMENT	53 to Early 82 — FL, FLH, FLH-80, Classic
	15	53846-67	LOWER RETAINER, filter element	Late 67 to Early 82 — FL, FLH, FLH-80, Classic
	16	53876-53	CLIP, oil filter	58 to Early 82 — FL, FLH, FLH-80, Classic
	17	53876-53	O-RING	58 to Early 82 — FL, FLH, FLH-80, Classic
	18	53881-67	UPPER SEAL, oil filter	Late 67 to Early 82 — FL, FLH, FLH-80, Classic
	19	53882-67	LOWER SEAL, oil filter	Late 67 to Early 82 — FL, FLH, FLH-80, Classic
	20	53885-65	VALVE, with gage rod	65 to 69 — FL, FLH
	21	53885-70	VALVE, less gage rod	70 to Early 82 — FL, FLH, FLH-80, Classic

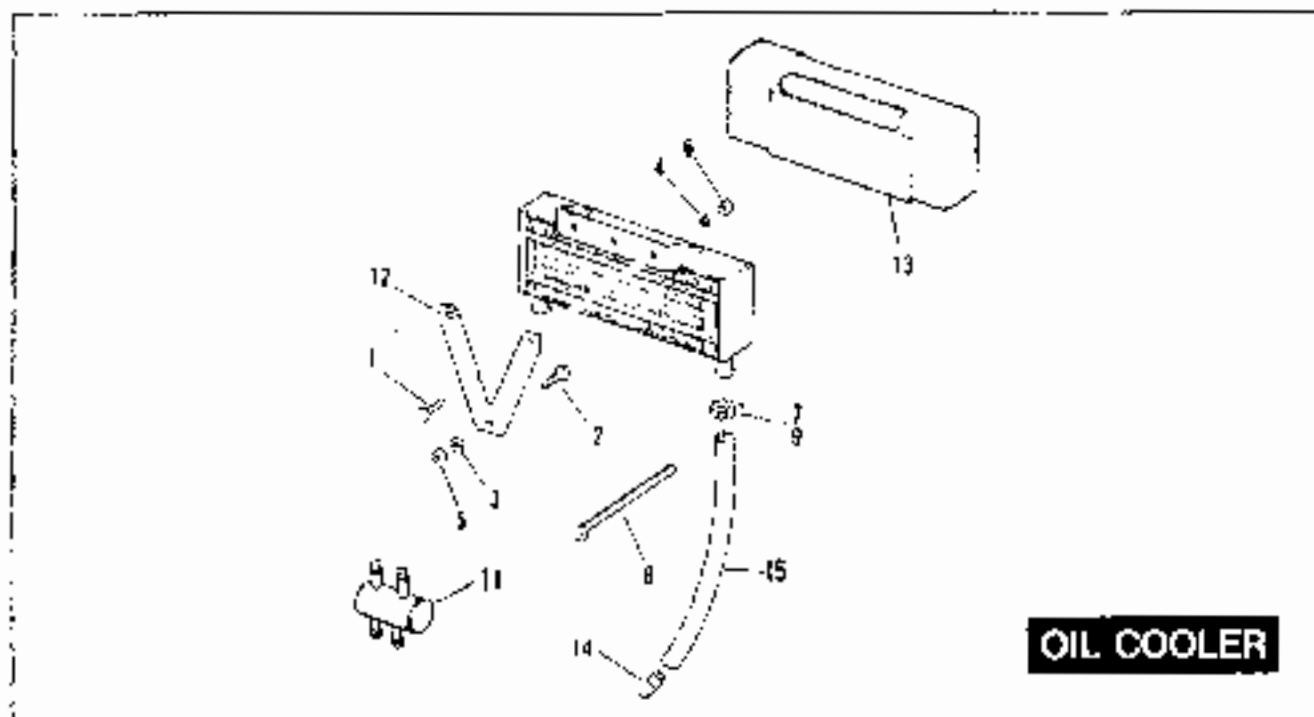


OIL COOLER

A68


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	3953W	BOLT, 5/16-24 x 1 7/8 hex. hd (2)	78 to 81 FL, FLH, FLH-80, Classic
	2	3096	BOLT, 5/16-24 x 7/8 hex. hd	78 to 81 FL, FLH, FLH-80, Classic
	3	6792	WASHER, 5/16 x 1 1/16 x 1 1/16	78 to 81 FL, FLH, FLH-80, Classic
	4	7141	LOCKWASHER, 5/16 (2)	78 to 81 FL, FLH, FLH-80, Classic
	5	7725	LOCKNUT, 5/16-24 x 1 1/32 x 1/2 hex.	78 to 81 FL, FLH, FLH-80, Classic
	6	7753	NUT, 5/16-24 x 1 1/4 x 1 1/2 hex. (2)	78 to 81 FL, FLH, FLH-80, Classic
	7	9946	CLAMP, on hose (5)	78 to 81 FL, FLH, FLH-80, Classic
	8	10006	STRAP, on hose (6)	78 to 81 FL, FLH, FLH-80, Classic
	9	10080	CLAMP, on hoses — 1 1/2 IE dia. (2)	78 to 81 FL, FLH, FLH-80, Classic
	11	25251-78	THERMOSTATIC BYPASS VALVE, oil cooler (black) Includes besides valve: 6946 — CLAMP, on hose (4) 10006 — CABLE STRAP (4)	78 to 81 FL, FLH, FLH-80, Classic
		62571-77A	OIL COOLER KIT (black)	78 to 81 FL, FLH, FLH-80, Classic
	13	E1574-77	MOUNTING BRACKET, oil cooler	78 to 81 FL, FLH, FLH-80, Classic
		62577-77A	OIL COOLER KIT (chrome)	78 to 81 FL, FLH, FLH-80, Classic
	12	62578-77	COVER, oil cooler	78 to 81 FL, FLH, FLH-80, Classic
	14	53792-77	FITTING, on hose	78 to 81 FL, FLH, FLH-80, Classic
		NOTE: Hose is only sold in bulk length under the following part number. Cut to length required.		
	15	53500-88	HOSE, 3/8 ID x 5/8 OD reinforced rubber (25 ft. long)	78 to 81 FL, FLH, FLH-80, Classic

DUAL EXHAUST SYSTEMS

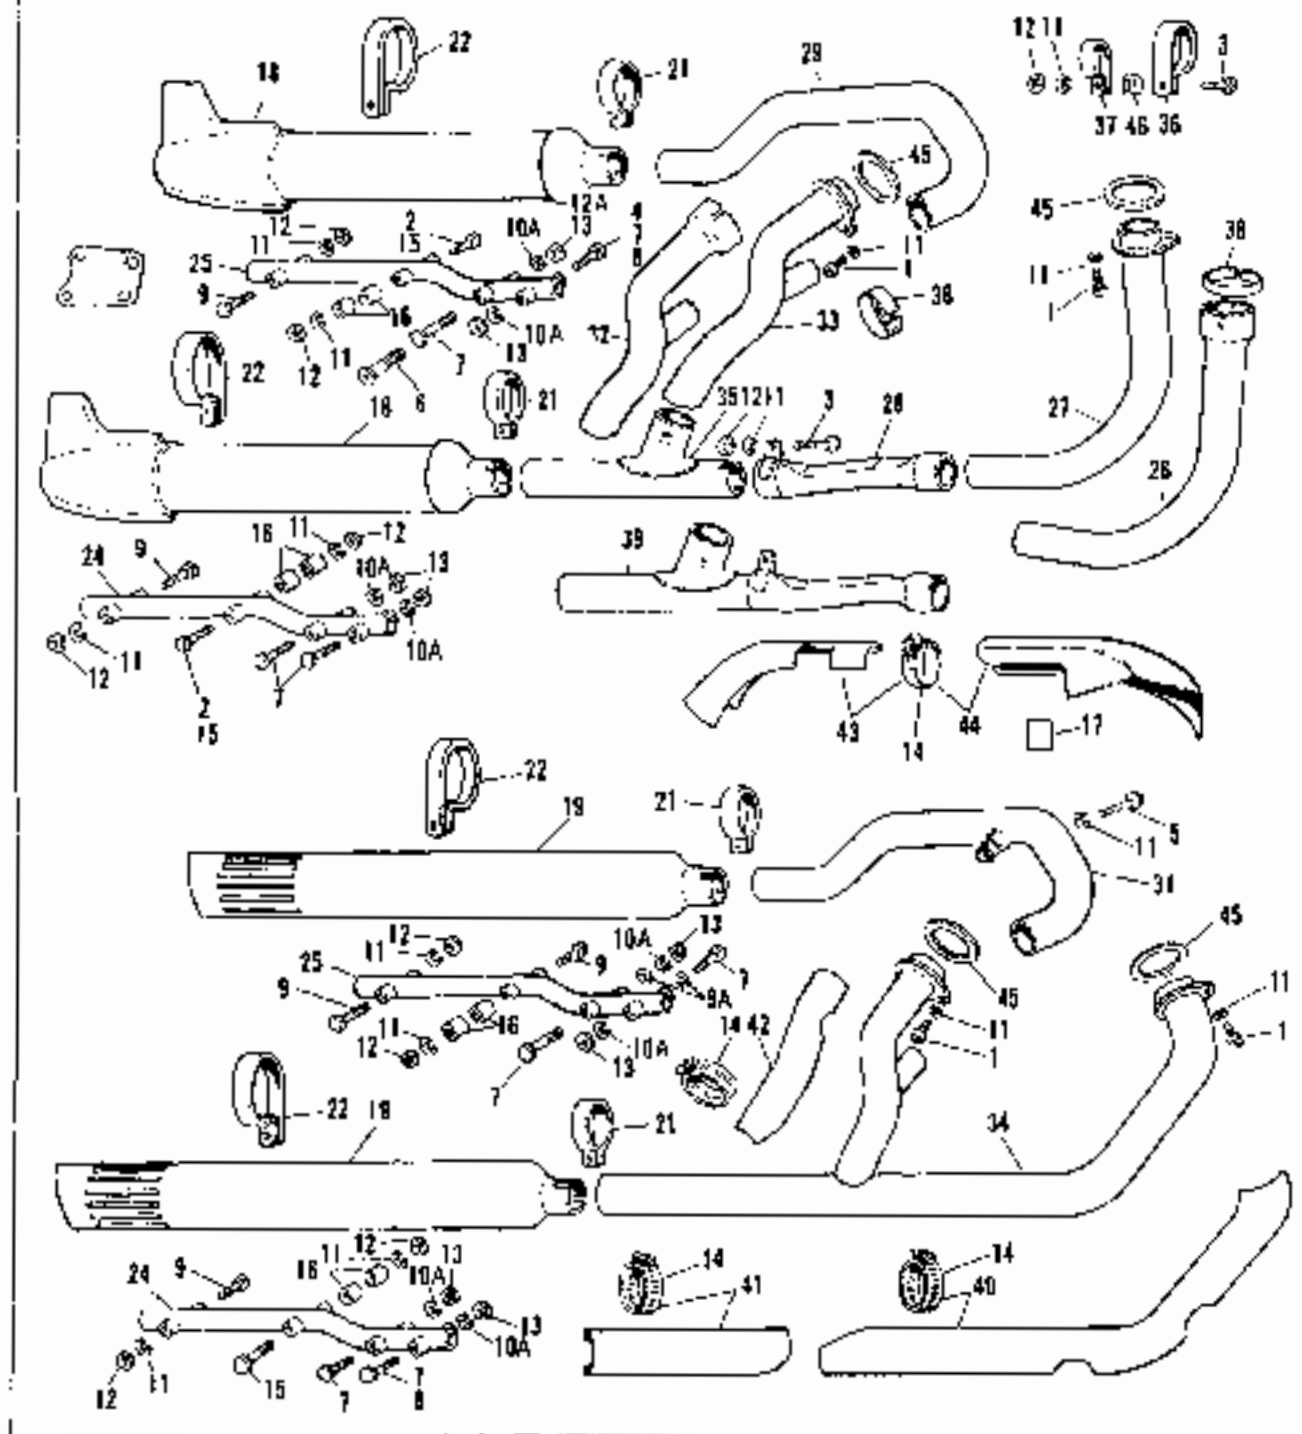


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	3906W	SCREW, 5/16-18 x 3-4 special (2)	56 to * — FL, FLH, FLH-80, Classic
	2	3409	BOLT, 5/16-24 x 3-1/2 hex. hd. (2)	Late 81 to * — FLH-80, Classic
	3	3360W	BOLT, 5/16-24 x 3 hex. hd. (2)	41 to 81 — FL, FLH, FLH-80, Classic
		3374HW	BOLT, 5/16-24 x 3/4 hex. hd.	41 to * — FL, FLH, FLH-80, Classic
	4	3345	BOLT, 3/8-24 x 2-1/4 hex. hd.	82 — Classic, 83 to * — FLH-80
	5	4317	BOLT, 5/16-18 x 1 hex. hd.	75 to * — FL, FLH, FLH-80, Classic
	6	4350	SCREW, 3/8-16 x 2 3/4 standard (2)	92 to * — FLH-80, Classic
	7	4380W	BOLT, 3/8-24 x 2 hex. hd. (2)	58 to 79 — FL, FLH, FLH-80
		4415	BOLT, 3/8-24 x 3 hex. hd. (3, 2-82 — Classic)	79 to * — FL, FLH, FLH-80, Classic
	8	4435W	BOLT, 3/8-24 x 3-7/16 hex. hd. (2). (Not used with rear safety guard)	58 to * — FL, FLH, FLH-80, Classic
		4440W	BOLT, 3/8-24 x 4 hex. hd. (2). (Used with rear safety guard)	58 to 79 — FL, FLH, FLH-80, Classic
	9	4713	BOLT, 5/16-24 x 2-1/4 hex. hd. (2-83 & Later)	58 to * — FL, FLH, FLH-80, Classic
		4757W	BOLT, 5/16-24 x 2 hex. hd.	Late 82 to * — FLH-80, Classic
	9A	5701	WASHER, 3/8 x 13/16 x 1/16 (2)	Late 83 — FLH-80
	10	5702	WASHER, 5/16 x 11/16 x 1/16	81 to * — FLH-80, Classic
	10A	7630	LOCKWASHER, 3/8 (2)	58 to * — FL, FLH, FLH-80, Classic
	11	7641	LOCKWASHER, 5/16 (2)	41 to 80 — FL, FLH, FLH-80, Classic
	12	7725	LOCKNUT, 5/16-24 x 1-1/2 x 1/2 hex.	81 to * — FLH-80, Classic
		7733	NUT, 5/16-24 x 1-1/4 x 1/2 hex.	58 to 80 — FL, FLH, FLH-80, Classic
	12A	7740	NUT, 3/8-16 x 5/16 x 3/16 hex.	82 to * — FLH-80, Classic
	12	7800W	NUT, 3/8-24 x 5/16 x 3/16 hex. (2, 2-82 — Classic)	58 to * — FL, FLH, FLH-80, Classic
	14	8555	CLAMP, exhaust pipe shield (2)	70 to * — FL, FLH, FLH-80, Classic
	15	30913-71	BOLT, 5/16-24 x 3-1/4 hex. hd. (3-58 to Early 81)	58 to * — FL, FLH, FLH-80, Classic
	16	57088-71	SPACER (2)	79 to * — FL, FLH, FLH-80, Classic
		58137-49	SPACER (4)	58 to 79 — FL, FLH, FLH-80
	17	61079-82	CUSHION, rear shield	Late 83 to * — FLH-80
	18	E5240-61	MUFFLER, light	58 to 56 — FL, FLH
		65213-62A	MUFFLER, light — extra quiet	62 to 86 — FL, FLH
	19	65242-70B	MUFFLER, extra quiet (chrome) (2)	70 to 77 — FL, FLH
		65213-73B	MUFFLER (chrome) (2)	78 to * — FL, FLH, FLH-80, Classic
	21	65276-62	CLAMP, muffler — front (2) (62)	58 to * — FL, FLH, FLH-80, Classic
	22	65233-58	HANGER, muffler — rear (2)	68 to 77 — FL, FLH
		65294-79	HANGER, muffler — rear (2)	78 to * — FL, FLH, FLH-80, Classic
	24	E5318-58A	SUPPORT TUBE, muffler — right side	58 to * — FL, FLH, FLH-80, Classic
	25	E5318-59C	SUPPORT TUBE, muffler — left side	58 to * — FL, FLH, FLH-80, Classic
	26	E5440-49	EX-AUST PIPE, front	N/A 48 to 55 — FL, FLH
	27	E5443-66	EX-AUST PIPE, front	N/A 56 to 69 — FL, FLH
	28	E5465-36	PIPE CONNECTOR, with hangers	N/A 41 to 54 — FL, FLH
	29	E5434-61	EX-AUST PIPE, left — rear, cross-over	N/A 58 to 64 — FL, FLH
		E5434-65	EX-AUST PIPE, left — rear, cross-over	N/A 55 to 65 — FL, FLH
	31	E5434-70	EXHAUST PIPE, left — rear, cross-over	70 to * — FL, FLH, FLH-80, Classic
	32	E5436-61	EXHAUST PIPE, right — rear	N/A 58 to 65 — FL, FLH
	33	E5436-66	EXHAUST PIPE, right — rear	66 to 69 — FL, FLH
	34	E5496-70	EXHAUST PIPE, ...	70 to * — FL, FLH, FLH-80, Classic
	35	E5506-61	CONNECTION, rear exhaust pipe	N/A 62 to 64 — FL, FLH
	36	E5512-37A	CLAMP, front pipe to frame	N/A 41 to 63 — FL, FLH
	37	E5512-58	CLAMP, front pipe to frame	N/A 58 to 69 — FL, FLH
	38	E5515-43A	CLAMP, exhaust port (2)	48 to 65 — FL, FLH
	39	E5538-65	CONNECTOR, rear exhaust pipe	65 to 69 — FL, FLH
	40	E5551-70	SHIELD KIT, front exhaust pipe	70 to * — FL, FLH, FLH-80
	41	E5560-70A	SHIELD KIT, rear exhaust pipe — right front	70 to * — FL, FLH, FLH-80, Classic
	42	E5567-70	SHIELD KIT, rear exhaust pipe — right rear	70 to * — FL, FLH, FLH-80, Classic
	43	E5707-77	EXHAUST PIPE LOWER HEAT SHIELD — vertical left front, includes 999S CLAMP (2)	65 to * — FL, FLH, FLH-80, Classic
	44	E5710-66	EXHAUST PIPE UPPER HEAT SHIELD — horizontal left front, includes 999A CLAMP (2)	65 to * — FL, FLH, FLH-80, Classic
	45	E5674-68A	CASKET, exhaust port (2)	Late 68 to * — FL, FLH, FLH-80, Classic
	46	90908-58	SPACER	69 to * — FL, FLH, FLH-80, Classic


SINGLE EXHAUST SYSTEMS

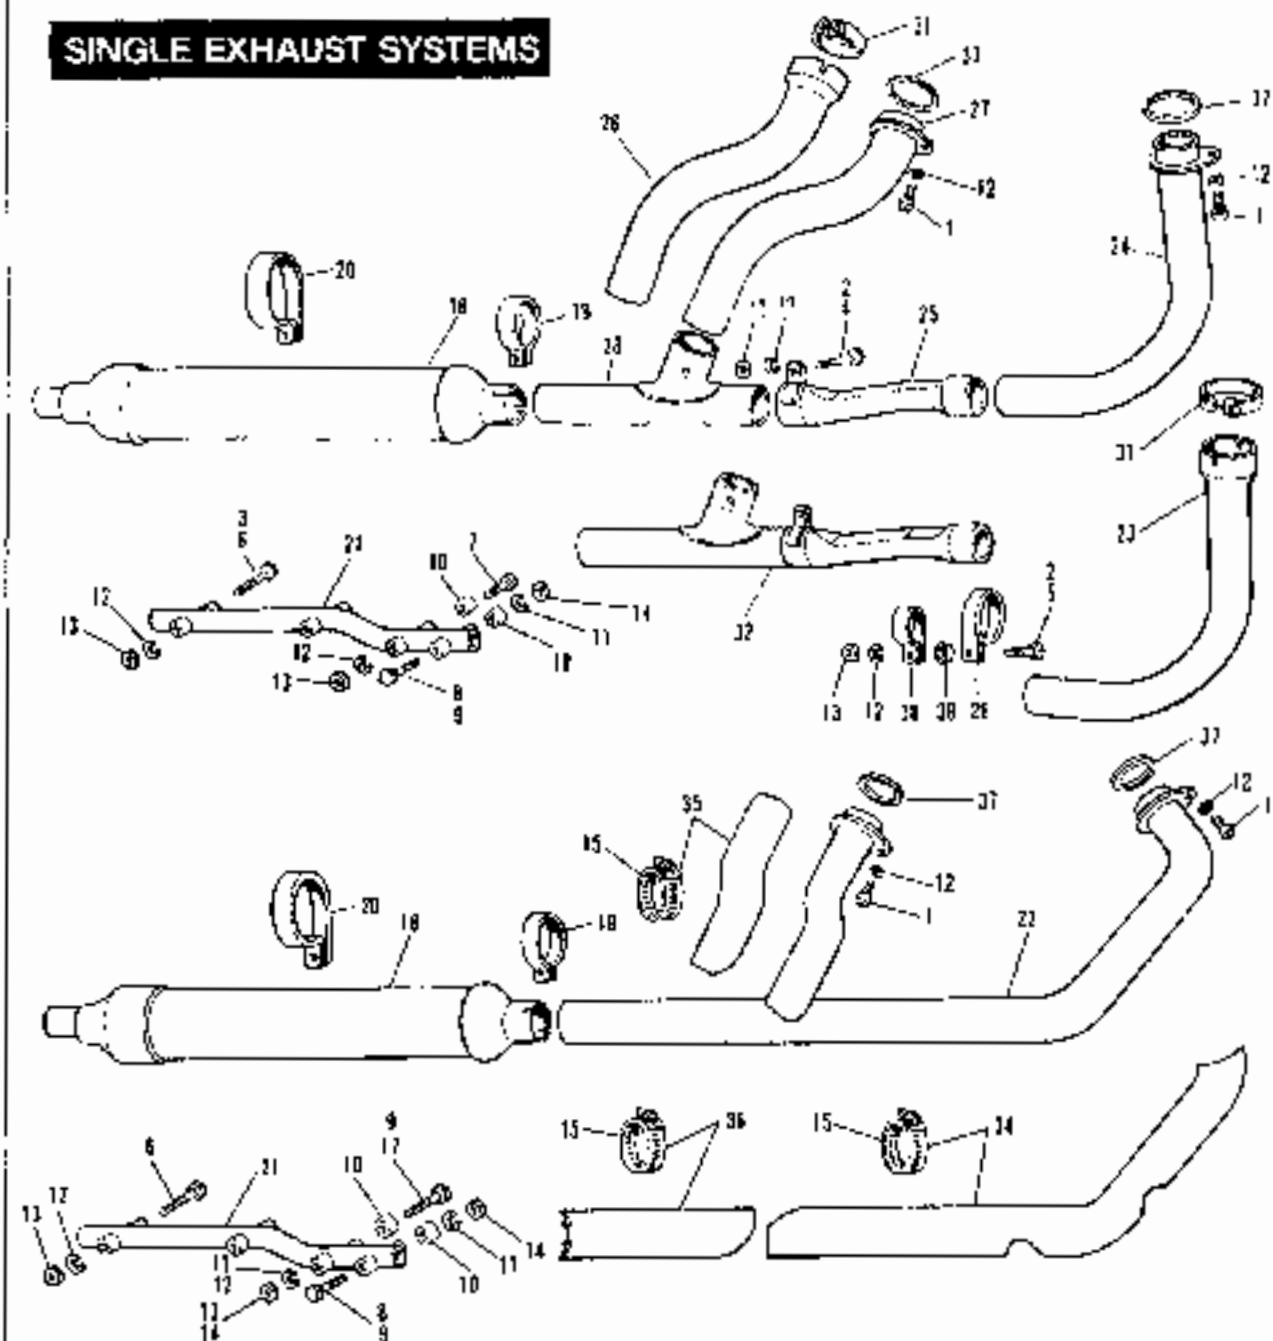

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	3103W	SCREW, 5/16-18 x 3/4 socket head (2)	66 to Early 78 — FL, FLH, FLH-80
	2	3103W	BOLT, 5/16-24 x 1 1/4 hex. hd. (2)	41 to Early 78 — FL, FLH, FLH-80
	3	3174W	BOLT, 5/16-24 x 3/4 hex. hd.	41 to Early 78 — FL, FLH, FLH-80
	4	3196	BOLT, 5/16-24 x 7/8 hex. hd. (2)	41 to 63 — FL, FLH
		4014W	BOLT, 5/16-24 x 1 1/4 hex. hd.	58 to Early 78 — FL, FLH, FLH-80
	5	4020W	BOLT, 5/16-24 x 1 3/4 hex. hd.	66 to 71 — FL, FLH, FLH-80
	6	4115	BOLT, 3/8-24 x 3/4 hex. hd. (2)	58 to Early 78 — FL, FLH, FLH-80
	7	4405W	BOLT, 3/8-24 x 5/8-15 hex. hd. (2) (for used with rear safety guard)	58 to Early 78 — FL, FLH, FLH-80
		4440W	BOLT, 3/8-24 x 4 hex. hd. (used with rear safety guard)	58 to Early 78 — FL, FLH, FLH-80
	9	4710	BOLT, 5/16-24 x 2 1/4 hex. hd.	58 to Early 78 — FL, FLH, FLH-80
	10	4725	BOLT, 5/16-24 x 2-3/4 hex. hd.	58 to 62 — FL, FLH
	11	5542B	SPACER, muffler front clamp	58 to Early 78 — FL, FLH, FLH-80
	12	7038	LOCKWASHER, 3/8	58 to Early 78 — FL, FLH, FLH-80
	13	7041	LOCKWASHER, 5/16 (2)	41 to Early 78 — FL, FLH, FLH-80
	14	7753	NUT, 5/16-24 x 1 1/4 x 1/2 hex.	58 to Early 78 — FL, FLH, FLH-80
	15	7900W	NUT, 3/8-24 x 5/16 x 9/16 hex.	58 to Early 78 — FL, FLH, FLH-80
	16	9955	CLAMP, exhaust pipe shield (2)	70 to Early 78 — FL, FLH, FLH-80
	17	00013-71	BOLT, 5/16-24 x 3-1/4 hex. hd.	67 to 72 — FL, FLH
	18	65239-41A	MUFFLER, black	N/A 59 to Early 78 — FL, FLH, FLH-80
		65243-41A	MUFFLER, extra quiet (chrome)	58 to Early 78 — FL, FLH, FLH-80
	19	65276-62	CLAMP, muffler hanger (2) (2)	58 to Early 78 — FL, FLH, FLH-80
	20	65290-58	HANGER, muffler — rear	58 to Early 78 — FL, FLH, FLH-80
	21	65318-58A	SUPPORT TUBE, muffler, right side	59 to Early 78 — FL, FLH, FLH-80
	22	65435-70	EXHAUST PIPE	70 to Early 78 — FL, FLH, FLH-80
	23	65440-46	FRONT EXHAUST PIPE	N/A 48 to 65 — FL, FLH
	24	65443-66	FRONT EXHAUST PIPE	N/A 66 to 69 — FL, FLH
	25	65465-36	PIPE CONNECTOR, with fittings	N/A 41 to 64 — FL, FLH
	26	65490-18	REAR EXHAUST PIPE	N/A 58 to 59 — FL, FLH
	27	65493-56	REAR EXHAUST PIPE	N/A 66 to 69 — FL, FLH
	28	65505-58	CONNECTOR, rear exhaust pipe	N/A 58 to 59 — FL, FLH
	29	65512-37A	CLAMP, front pipe to frame	N/A 41 to 65 — FL, FLH
	30	65513-58	CLAMP, front pipe to frame	N/A 58 to 69 — FL, FLH
	31	65519-48A	PORT CLAMP (2)	48 to 65 — FL, FLH
	32	65539-65	CONNECTOR, rear exhaust pipe	N/A 66 to 69 — FL, FLH
	33	65561-70	SHIELD KIT, single exhaust pipe — front	70 to Early 78 — FL, FLH, FLH-80
	34	65563-70	SHIELD KIT, single exhaust pipe — rear	N/A 70 to Early 78 — FL, FLH, FLH-80
	35	65565-70A	SHIELD KIT, front exhaust pipe	70 to Early 78 — FL, FLH, FLH-80
		65713-61	CLAMP, exhaust pipe guard	Late 61 to 64, 66 to 69 — FL, FLH
	37	65934-68A	GASKET, exhaust port (2)	Late 66 to Early 78 — FL, FLH, FLH-80
		67779-49	SCREW, exhaust pipe guard	Late 61 to 64, 66 to 69 — FL, FLH
	38	80908-58	SPACER	69 to Early 78 — FL, FLH, FLH-80

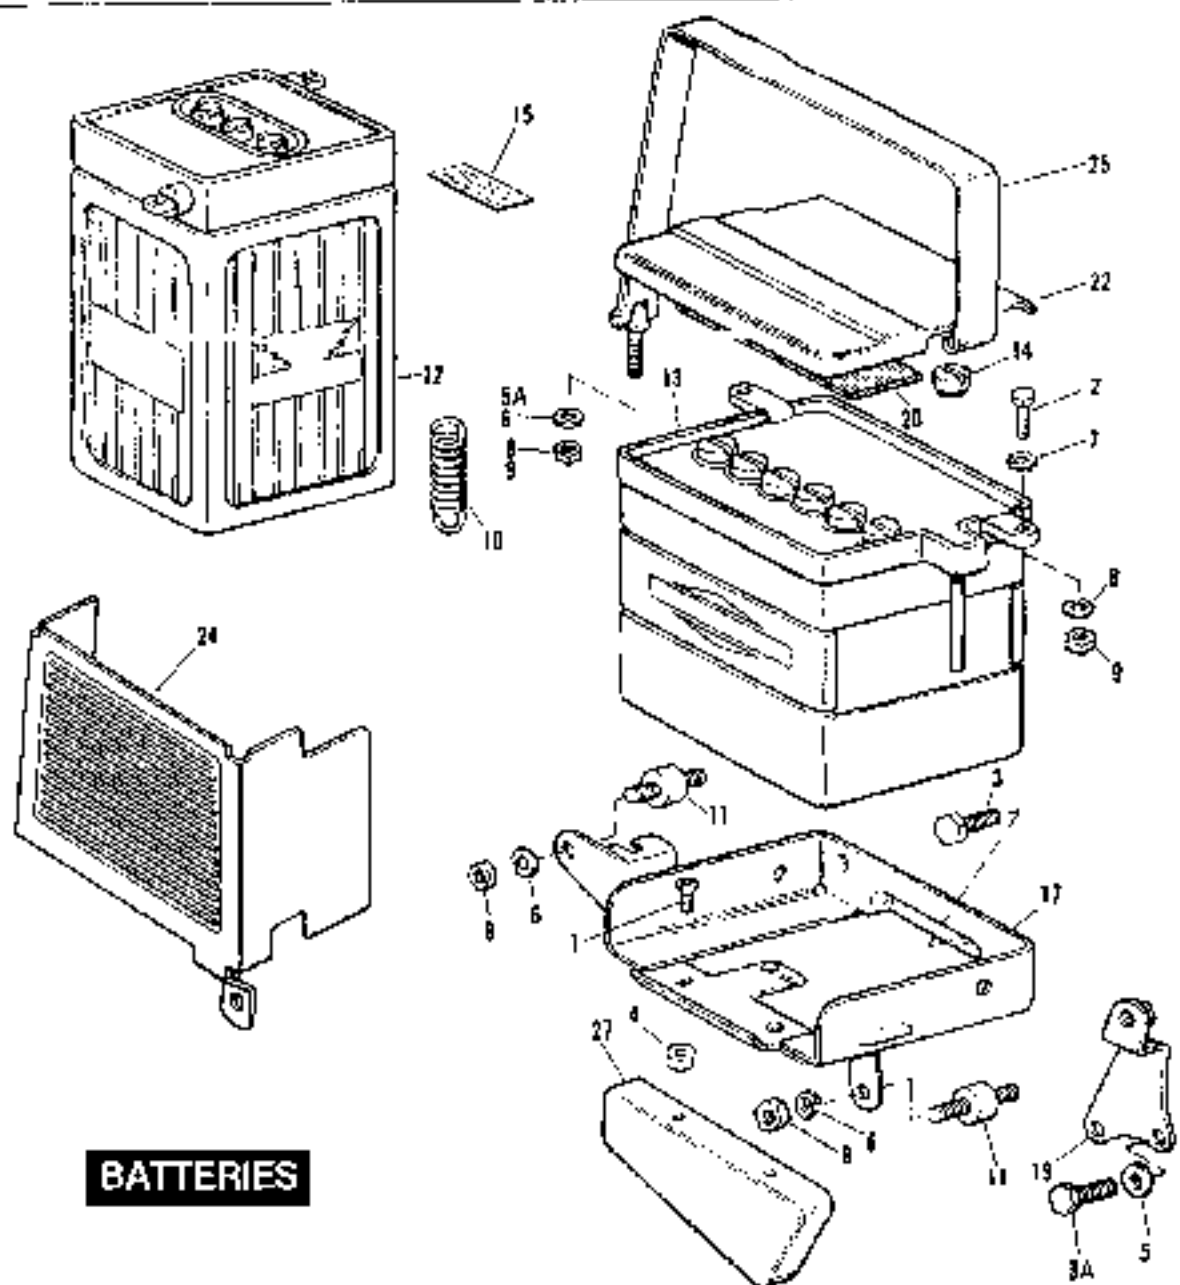


RETAIL PRICE	INDEX NO.	PART NO	NAME	USED ON
	1	7095	SCREW 1/4-20 x 3/4 hex (2) (2)	65 to * - FL, FLH, FLH-80, Classic
	2	3787	SCREW 1/4-20 x 3/4 hex (2)	65 to * - FL, FLH, FLH-80, Classic
	3	3858	SCREW 1/4-20 x 3/4 hex (2)	65 to * - FL, FLH, FLH-80, Classic
	4	4091	SCREW 1/4-20 x 3/4 hex (2)	65 to * - FLH, FLH-80, Classic
	5	5917d	SPACER (2)	65 to * - FL, FLH, FLH-80, Classic
	6	6702	WASHER 5/16 x 11/16 x 1/16 (2)	65 to * - FLH, FLH-80, Classic
	6A	6703	WASHER 1/4 x 5/8 x 1/16	79 to * - FL, FLH, FLH-80, Classic
	7	7035	LOCKWASHER 1/4-14 (1) (2) & (2)	65 to * - FL, FLH, FLH-80, Classic
	7	7229W	LOCKWASHER 1/4 (1) (2) & (2) (2)	65 to * - FL, FLH, FLH-80, Classic
	8	7076	NUT 1/4-20 x 3/16 x 7/16 hex (2)	65 to * - FL, FLH, FLH-80, Classic
	9	7585	NUT 1/4-20 x 1/4 x 1/2 hex (1) (4) - (1) (2) & (1) (2)	65 to * - FL, FLH, FLH-80, Classic
	10	5722-02	SPRING battery cover (1) (2)	late E2 to 64 - FL, FLH
	11	62563-01	RUBBER MOUNT (2)	65 to * - FL, FLH, FLH-80, Classic
	12	66006-09C	BATTERY, 22 amp. - 6V	41 to 64 - FL, FLH
	13	66017-04	BATTERY, 22 amp. - 12V	65 to * - FL, FLH, FLH-80, Classic
	14	66016-05	PLUG PLUG (6)	65 to 72 - FL, FLH
	15	66047-00A	LABEL, warning - d (on heat battery, etc.) (1) (2)	65 to * - FL, FLH, FLH-80, Classic
	17	66204-74	BATTERY CAP (6)	74 to 75 - FL, FLH, FLH-80, Classic
		66204-80	BATTERY CAP (6)	80 to * - FL, FLH, FLH-80, Classic
	19	66215-05	SUPPORT BRACKET	65 to * - FL, FLH, FLH-80, Classic
	20	66352-65	CUSHION, battery cover (2)	49 to * - FL, FLH, FLH-80, Classic
		66352-66	CUSHION, battery cover (2) (2)	65 to * - FL, FLH, FLH-80, Classic
	22	66370-65	BATTERY COVER (chrome)	65 to * - FL, FLH, FLH-80, Classic
		66371-65	BATTERY COVER (black)	65 to 78 - FL, FLH, FLH-80
	24	66372-70	BATTERY COVER, battery (chrome)	70 to * - FL, FLH, FLH-80, Classic
	25	66383-65	BATTERY STRAP	65 to 66 - FL, FLH
		66383-70A	BATTERY STRAP	70 to * - FL, FLH, FLH-80, Classic
	27	66425-08	COVER KIT, starter relay (chrome)	65 to * - FL, FLH, FLH-80, Classic

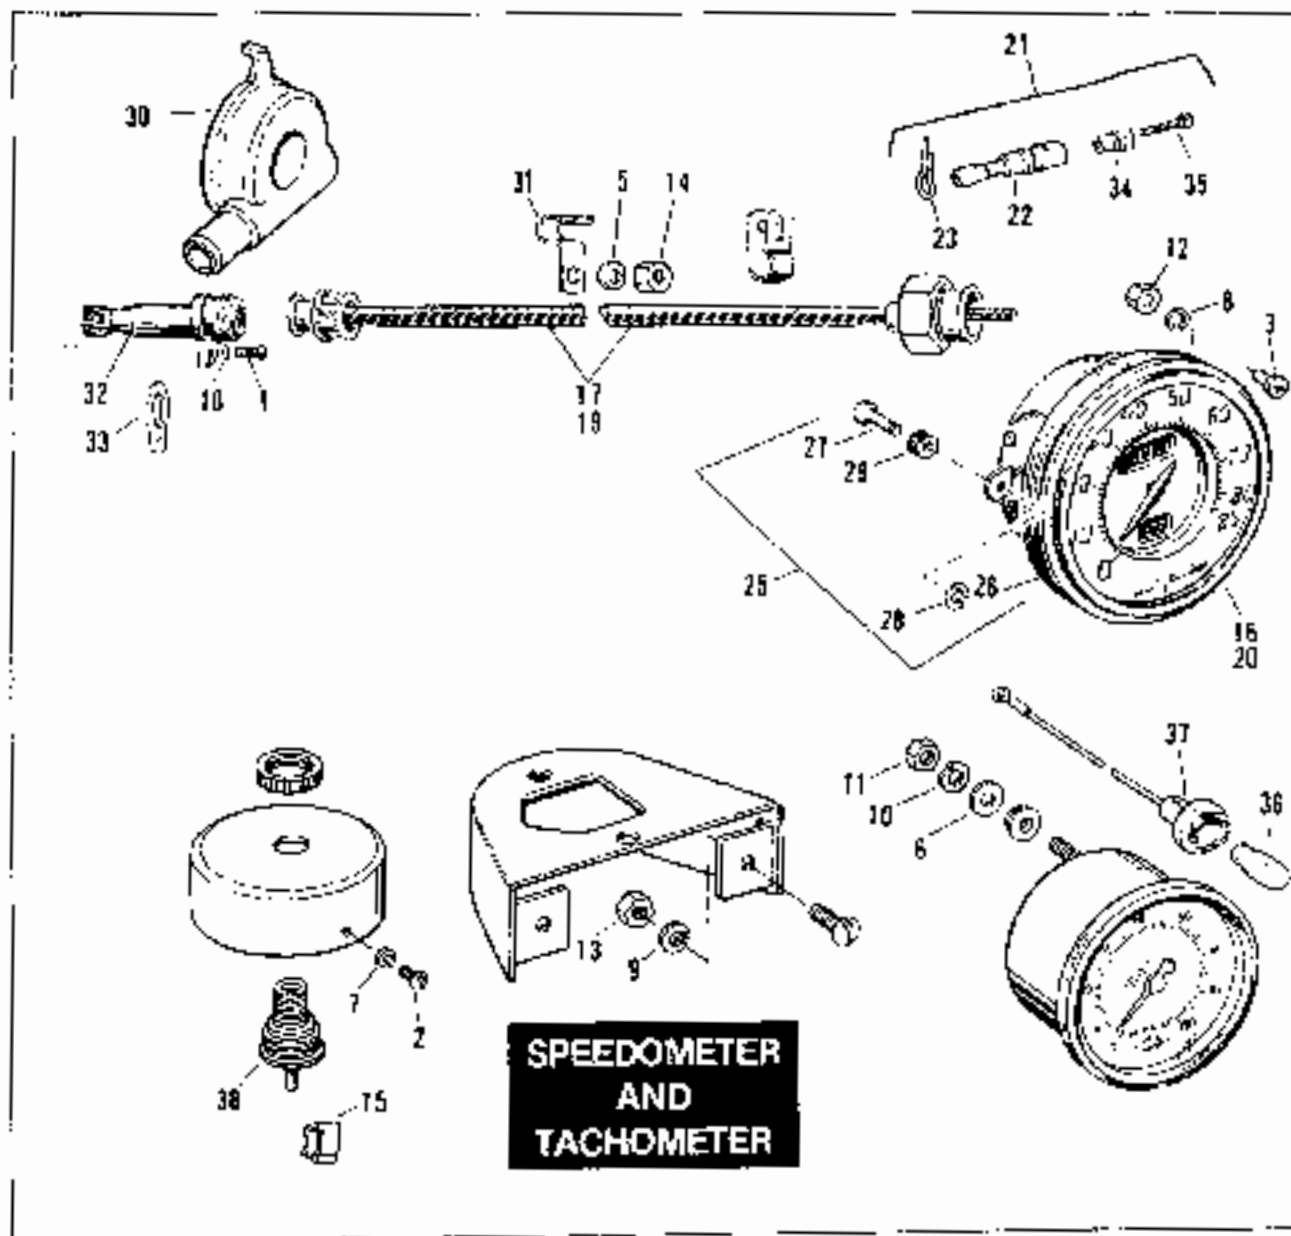


**SPEEDOMETER
AND
TACHOMETER**

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2592	SCREW, No. 10-24 x 1/2 Panhead, panhead	41 to 61 - FL, FLH, FLH-80, Classic
	2	2594	SCREW, No. 8-32 x 1/4 Hexal, hexal (2)	51 to 69 - FL, FLH
	3	2598	SCREW, No. 12-24 x 3/8 Panhead, panhead (2)	N/A 47 to 75 - FL, FLH
	4	6702	WASHER, 5/16 x 11/16 x 1/16	Late 61 to 71 - FL, FLH, FLH-80, Classic
	5	6715	WASHER, No. 10 x 1/2 x 3/64 (2)	61 to 63 - FL, FLH
	6	7015	LOCKWASHER, No. 8 (2)	61 to 65 - FL, FLH
	7	7030W	LOCKWASHER, No. 12 (2)	47 to 76 - FL, FLH
	8	7035	LOCKWASHER, 1/4 (2)	61 to 65 - FL, FLH
	9	7061	LOCKWASHER, No. 10 (2)	41 to 71 - FL, FLH, FLH-80, Classic
	10	7638	NUT, No. 10-32 x 1/8 x 3/8 hex (2)	65 to 71 - FL, FLH, FLH-80, Classic
	11	7634W	NUT, No. 12-24 x 5/32 x 7/16 hex (2)	47 to 76 - FL, FLH
	12	7675	NUT, 1/4-28 x 3/16 x 7/16 hex (2)	61 to 69 - FL, FLH
	13	7723	NUT, 5/16-24 x 1/2 x 1/2 hex	Late 61 to 71 - FL, FLH, FLH-80, Classic
	14	8663	CABLE CLIP, frame tube	61 to 69 - FL, FLH
	15	67004-66B	SPEEDOMETER HEAD, mile (120 mph)	66 to 73 - FL, FLH, FLH-80, Classic
		67004-80	SPEEDOMETER HEAD, mile (85 mph)	80 - FLH, FLH-80, Classic
		67005-68A	SPEEDOMETER HEAD, kilometers	68 to 69 - FL, FLH, FLH-80, Classic
		67005-68B	SPEEDOMETER HEAD, kilometers	Late 61 - FL, FLH, FLH-80, Classic
		67006-68B	SPEEDOMETER HEAD, miles	66 to 80 - FL, FLH, FLH-80, Classic
		67006-81A	SPEEDOMETER HEAD, miles	61 to 71 - FLH-80
	17	67026-62	DRIVE CABLE ASSEMBLY	62 to 80 - FL, FLH, FLH-80, Classic
	19	67026-81	DRIVE CABLE ASSEMBLY	61 to 71 - FLH-80, Classic
	20	67027-31B	SPEEDOMETER HEAD, mile (85 mph)	61 to 71 - FL-80, Classic
		67030-31C	SPEEDOMETER HEAD, kilometers	61 to 71 - FL-80, Classic
	21	67031-60	SPEEDOMETER REPAIR KIT	66 to 71 - FL-80, Classic
			Consists of:	
			67044-68 SHAFT, odometer/resel	
			67045-68 RETAINING WIRE, odometer	
			67215-68 KNOB, odometer/resel	
			67317-68 SCREW, reset knob	
	22	67044-68	SHAFT, odometer/resel	66 to 71 - FLH-80, Classic
	23	67045-68	RETAINING WIRE, odometer	66 to 71 - FLH-80, Classic
	24	67056-76	SPEEDOMETER ISOLATION KIT	Late 76 to 77 - FL, FLH, FLH-80, Classic
			Consists of:	
			67067-76 ISOLATOR STRIP, speedometer head	
			67068-76 PIN, speedometer mounting (2)	
			67069-76 RETAINING RING, speedometer mounting pin (2)	
			67070-76 GROMMET, speedometer mounting (2)	
	25	67070-81	DRIVE UNIT, speedometer	61 to 71 - FLH-80, Classic
	26	67075-67A	CLIP, speedometer cable (on crankcase)	Late 61 to 76 - FL, FLH, FLH-80
	27	67130-69	DRIVE UNIT ASSEMBLY, 23 T	69 to 80 - FL, FLH, FLH-80, Classic
	28	67141-66	GASKET, drive housing	41 to 60 - FL, FLH, FLH-80, Classic
	29	67215-68	KNOB, odometer/resel	66 to 71 - FL, FLH, FLH-80, Classic
	30	67217-68	SCREW, reset knob	66 to 71 - FL, FLH, FLH-80, Classic
	31	71090-64	BULB, tachometer lamp, 12 V	65 to 69 - FL, FLH
	32	71151-48	SOCKET, with wire - tachometer lamp	N/A 51 to 69 - FL, FLH
	33	94097-65	CABLE ADAPTER - choke breaker cover	N/A 61 to 69 - FL, FLH

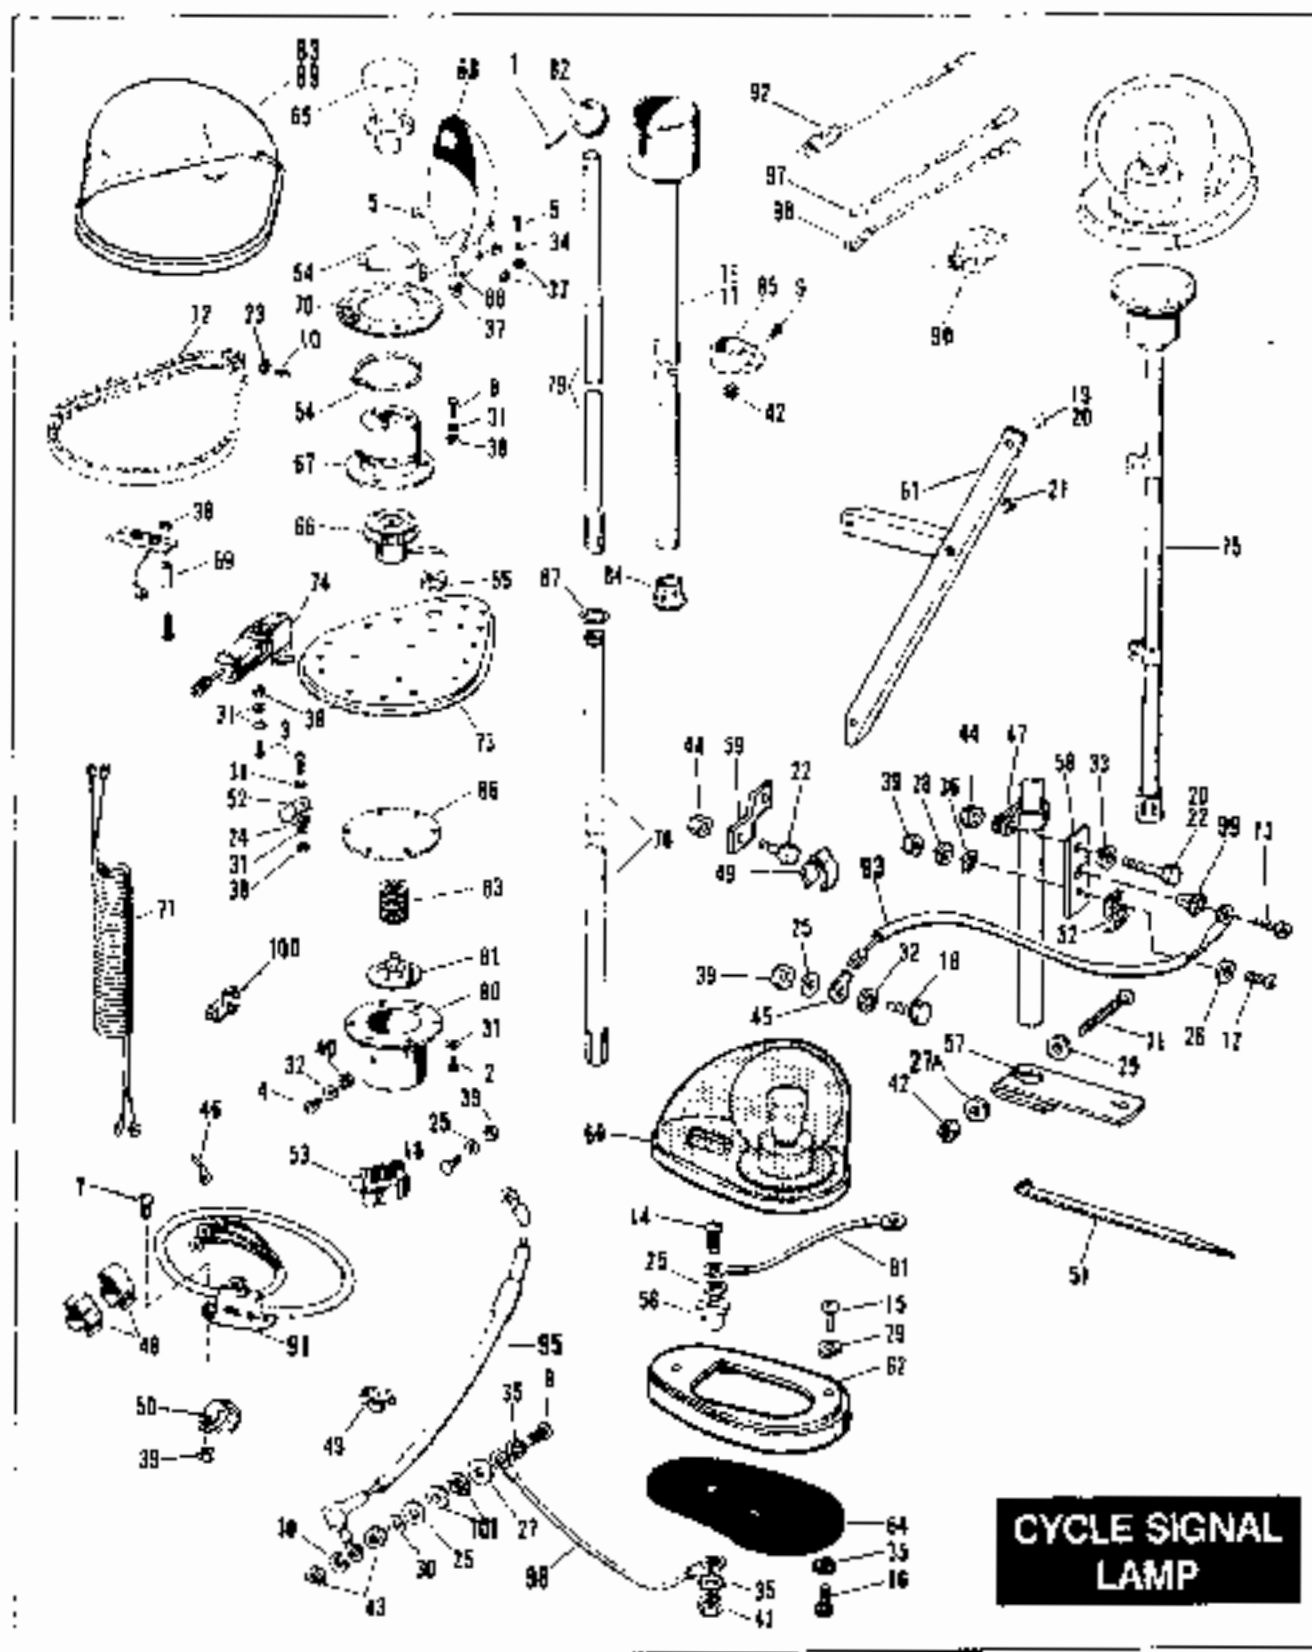

CYCLE SIGNAL LAMP


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	384	POI 1 PIN 5-wire ball	60 to * - FL, FLH, FLH-80
	2	990W	SCREW, No. 6-32 x 3/16 rd. hd. (3)	60 to * - FL, FLH, FLH-80
	3	997W	SCREW, No. 6-32 x 3/8 rd. hd. (1)	N/A 60 to Early 77 - FL, FLH
	4	1040	SCREW, No. 8-32 x 15/32 lf. hd. (1)	60 to * - FL, FLH, FLH-80
	5	9540	SCREW, No. 4-30 x 1/4 rd. hd. (2)	N/A 60 to Early 77 - FL, FL-
	6	2544W	SCREW, No. 4-30 x 3/8 rd. hd. (1)	N/A 60 to Early 77 - FL, FL-
	7	2585	SCREW, No. 8-32 x 1/8 Pozidriv pan hd.	60 to 83 - FL, FLH, FLH-80
	8	2586	SCREW, No. 8-32 x 1/8 lf. hd.	N/A 60 to Early 77 - FL, FL-
	9	2587	SCREW, No. 10-32 x 5/8 Pozidriv pan hd. (2)	60 to * - FL, FLH, FLH-80
	10	2589	SCREW, No. 5-32 x 1/4 Pozidriv pan hd.	60 to Early 77 - FL, FLH
	11	2591	SCREW, No. 10-32 x 1-3/4 Franchis hd.	60 to 75 - FL, FLH, FLH-80
	12	2622	SCREW, No. 9-32 x 7/16 Pozidriv pan hd.	60 to * - FL, FLH, FLH-80
	13	2623W	SCREW, No. 8-15 x 5/8 self tapping rd. hd. (1)	60 to * - FL, FLH, FLH-80
	14	2659	SCREW, No. 10-24 x 7/8 Pozidriv pan hd.	70 to Early 77 - FL, FLH
	15	2663	SCREW, No. 10-32 x 2/8 Pozidriv pan hd. (3)	70 to Early 77 - FL, FLH
	16	2664	SCREW, No. 10-24 x 7/16 Pozidriv pan hd. (2)	70 to Early 77 - FL, FL-
	18	3491	BOLT, No. 8-32 x 5/8 hex. hd. (1)	60 to 83 - FL, FLH, FLH-80
	19	3956	BOLT, 5/16-24 x 9/16 hex. hd. (1)	60 to * - FL, FLH, FLH-80
	20	3974-W	BOLT, 5/16-24 x 3/4 hex. hd. (1)	Late 74 to * - FL, FLH, FLH-80
	21	3986	BOLT, 5/16-24 x 27/32 hex. hd. (1)	60 to * - FL, FLH, FLH-80
	22	4036	BOLT, 5/16-24 x 1-1/2 hex. hd. (3)	60 to * - FL, FLH, FLH-80
	23	6045	WASHER, 1/8 x 1/4 x 3/64	N/A 60 to Early 77 - FL, FL-
	24	6150W	WASHER, 3/16 x 3/8 x 1/16	60 to Early 77 - FL, FL-
	25	6102W	WASHER, 3/16 x 7/16 x 1/32 (4)	60 to Early 77 - FL, FL-
	26	6192	WASHER, No. 8 x 7/16 x 3/64	Late 77 to 83 - FL, FLH
	27	6157	INSULATING WASHER	70 to 83 - FL, FLH, FLH-80
	27A	6710	WASHER, No. 10 x 1/2 x 3/64	84 to * - FLH-90
	28	7015	LOCKWASHER, No. 9	60 to 83 - FL, FLH, FLH-80
	29	7030W	LOCKWASHER, No. 12 (3)	70 to Early 77 - FL, FLH
	30	7060	LOCKWASHER, No. 10 (2)	70 to 83 - FL, FLH, FLH-80
	31	7112	LOCKWASHER, No. 6 int. tooth (2)	60 to * - FL, FLH, FLH-80
	32	7115	LOCKWASHER, No. 8 int. tooth	60 to 83 - FL, FLH, FLH-80
	33	7127	LOCKWASHER, 5/16 int. tooth	60 to 83 - FL, FLH, FLH-80
	34	7235W	LOCKWASHER, No. 4 int. tooth (2)	N/A 60 to Early 77 - FL, FLH
	35	7222	LOCKWASHER, No. 10 ext. tooth (4)	70 to * - FL, FLH, FLH-80
	36	7315	LOCKWASHER, No. 6 int. & ext. tooth	60 to 83 - FL, FLH, FLH-80
	37	7564	NUT, No. 4-36 x 3/32 x 1/4 hex. (2)	N/A 60 to Early 77 - FL, FLH
	38	7580	NUT, No. 5-32 x 7/34 x 5/16 hex. (3)	60 to Early 77 - FL, FLH
	39	7606	NUT, No. 8-32 x 1/2 x 5/16 hex. (3)	60 to 83 - FL, FLH, FLH-80
	40	7609W	LOCKNUT, No. 3-32 x 3/16 x 3/8 hex.	60 to * - FL, FLH, FLH-80
	41	7620W	NUT, No. 10-24 x 1/8 x 3/8 hex.	70 to * - FL, FLH, FLH-80
	42	7628W	LOCKNUT, No. 10-32 x 3/16 x 3/8 hex. (2)	60 to * - FL, FLH, FLH-80
	43	7638	NUT, No. 10-32 x 1/8 x 3/8 hex. (2)	70 to 83 - FL, FLH, FLH-80
	44	7727	LOCKNUT, 5/16-24 x 1/4 x 1/2 hex.	Late 79 to * - FL, FLH, FLH-80
	45	9802	WIRE TERMINAL, ring type, 3/16 dia. hole - #14-16 wire	60 to 83 - FL, FLH, FLH-80
	46	9831	WIRE TERMINAL, female spade type - 3/16 slot	70 to 83 - FL, FLH, FLH-80
	47	9872	WIRE CLAMP, fender brace	60 to 75 - FL, FLH, FLH-80
	48	9876	CLAMP, handlebar switch cap's (2)	60 to 83 - FL, FLH, FLH-80
	49	9883	SPRING CLIP (2)	60 to * - FL, FLH, FLH-80
	50	10001	CLAMP, handlebar switch	60 to 83 - FL, FLH, FLH-80
	51	10006	WIRING STRAP (3)	60 to * - FL, FLH, FLH-80
	52	10009	CABLE CLIP	60 to 79 - FL, FLH, FLH-80
	53	10012	CLIP, lamp cable	60 to 83 - FL, FLH, FLH-80
	54	11017	RETAINING RING, driver gear (2)	N/A 60 to Early 77 - FL, FLH
	55	11405	GRONOMET, lamp cable	60 to Early 77 - FL, FLH
	56	59271-68 E7605-68A	WELL NUT, lamp terminal FFAF MOUNTING KIT, cycle signal lamp (hardware only)	70 to Early 77 - FL, FLH 60 to 83 - FL, FLH, FLH-80

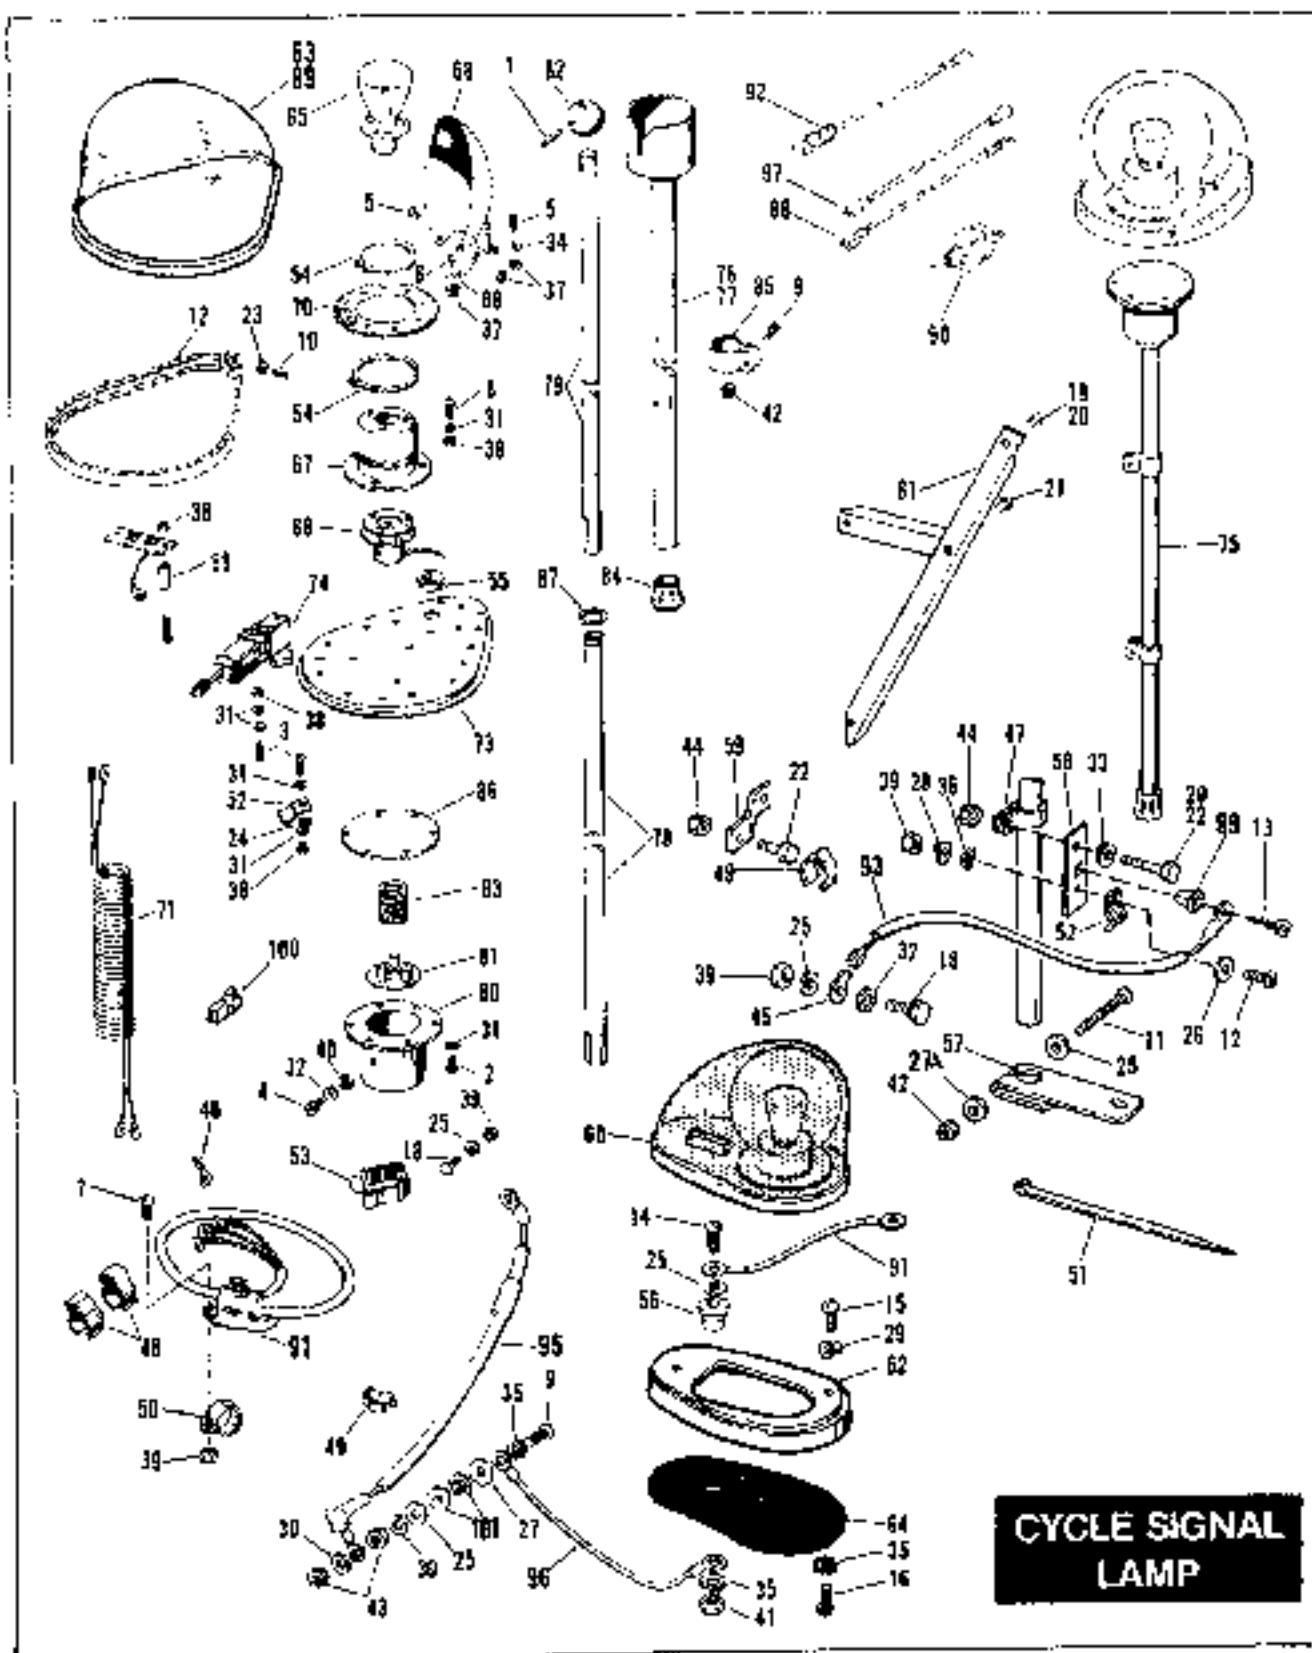


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	57	67607-60	MOUNTING BRACKET	60 to * - FL, FLH, FLH-80
	58	67608-60	WIRING BRACKET	60 to 63 - FL, FLH, FLH-80
	59	67610-70	BRACKET, top support	60 to * - FL, FLH, FLH-80
		67623-64C	CYCLE SIGNAL ROTATING LAMP KIT, less brackets (blue lens)	65 to * - FL, FLH, FLH-80
		67624-64C	CYCLE SIGNAL ROTATING LAMP KIT, less brackets - 12 V. (red lens)	65 to * - FL, FLH, FLH-80
		67627-64B	LAMP AND LENS ASSEMBLY, less mast, wire - 12 v. (red)	N/A 65 to 84 - FL, FLH, FLH-80
60		67627-703	LAMP AND LENS ASSEMBLY, with tender adapter - 12 v. (red)	70 to * - FL, FLH, FLH-80
61		67628-59	FOK BRACKET left hand	60 to 83 - FL, FLH, FLH-80
		67628-59A	FOK BRACKET left hand	64 to * - FLH-80
		67629-59	FOK BRACKET right hand	60 to 83 - FL, FLH, FLH-80
		67629-59A	FOK BRACKET right hand	64 to * - FLH-80
		67630-62	BRUSH ASS'Y, WBLV, signal lamp motor	60 to Early 77 - FL, FLH, FLH-80
62		67632-70	BASE PLATE, cycle signal lamp	N/A 70 to Early 77 - FL, FLH
63		67634-59	LAMP LENS (purple)	N/A 60 to Early 77 - FL, FLH, FLH-80
		67636-77	LAMP LENS (blue)	60 to Early 77 - FL, FLH
64		67637-70	GASKET, cycle signal lamp	N/A 70 to Early 77 - FL, FLH
65		67638-59	BULB, rotating lamp - 6 v.	N/A 53 to 64 - FL, FLH
		67638-64	BULB, rotating lamp - 12 v.	N/A 55 to Early 77 - FL, FLH
56		67639-59	SOCKET, rotating lamp	N/A 53 to Early 77 - FL, FLH
57		67640-59	SOCKET HOLDER	N/A 60 to Early 77 - FL, FLH
58		67641-59	SHIELD, rotating lamp	N/A 60 to Early 77 - FL, FLH
59		67642-59	INSULATOR, terminal strip	N/A 60 to Early 77 - FL, FLH
70		67643-59	DRIVEN GEAR	N/A 60 to Early 77 - FL, FLH
71		67644-70	CABLE, rotating lamp	N/A 70 to Early 77 - FL, FLH
72		67645-59	RETAINING RING, lamp lens	N/A 60 to Early 77 - FL, FLH
73		67647-59	BASE PLATE	N/A 60 to Early 77 - FL, FLH
74		67648-64	DRIVE MOTOR - 12 v.	N/A 60 to Early 77 - FL, FLH
75		67649-59	MAST ASSEMBLY, complete	60 to 83 - FL, FLH, FLH-80
76		67650-59	CUTTER MAST SECTION	N/A 60 to Early 78 - FL, FLH, FLH-80
77		67650-78	CUTTER MAST SECTION	Late 78 to * - FL, FLH, FLH-80
78		67651-59	CENTER MAST SECTION	60 to * - FL, FLH, FLH-80
79		67652-59	INNER MAST SECTION	60 to * - FL, FLH, FLH-80
80		67655-59	BALL SOCKET	60 to * - FL, FLH, FLH-80
81		67656-59	WASHER, ball socket	60 to * - FL, FLH, FLH-80
82		67657-59	SWIVEL BALL	60 to * - FL, FLH, FLH-80
83		67658-59	SPRING, ball washer	60 to * - FL, FLH, FLH-80
84		67659-59	BURDEN TIP, lamp mast	60 to * - FL, FLH, FLH-80
85		67660-59	CLAMP, lamp mast mounting (2)	60 to * - FL, FLH, FLH-80
86		67661-59	COVER PLATE, ball socket	60 to * - FL, FLH, FLH-80
87		67662-59	RETAINING RING, mast section	60 to * - FL, FLH, FLH-80
88		67663-59	SUPPORT BRACKET, lamp shield, right	N/A 60 to Early 77 - FL, FLH
		67664-59	SUPPORT BRACKET, lamp shield, left	N/A 60 to Early 77 - FL, FLH
89		67670-77	LAMP LENS (red)	60 to Early 77 - FL, FLH
90		67694-70	TOGGLE SWITCH, cycle signal light	84 to * - FLH-80
91		70060-29	HAND LEVER SWITCH, with lugs	60 to Early 78 - FL, FLH, FLH-80
92		70061-81	WIRE, terminal 11 to cycle signal light (blue)	94 to * - FLH-80
93		70068-70	WIRE, terminal plate to lamp terminal	70 to 83 - FL, FLH, FLH-80
94		70335-70	CABLE, tender terminal to lamp	N/A 70 to Early 77 - FL, FLH
95		70338-59	CABLE, tender to terminal board	70 to 83 - FL, FLH, FLH-80
96		70337-59	WIRE, tender terminal to tender terminal	70 to Early 77 - FL, FLH
97		70425-70A	WIRE, terminal 11 to toggle switch (brown)	64 to * - FLH-80
98		70430-70	WIRE, terminal 3 to toggle switch (blue)	84 to * - FLH-80
99		70574-68	EXPANSION NUT, wiring bracket	80 to 83 - FL, FLH, FLH-80
100		70576-68	WIRE CONNECTION	85 to 86 - FL, FLH, FLH-80
101		70598-59	INSULATING WASHER (2)	70 to 83 - FL, FLH, FLH-80

SIGNAL LAMP AND LENS LATE 1977 & LATER


SEE PREVIOUS PAGE
FOR MOUNTING PARTS

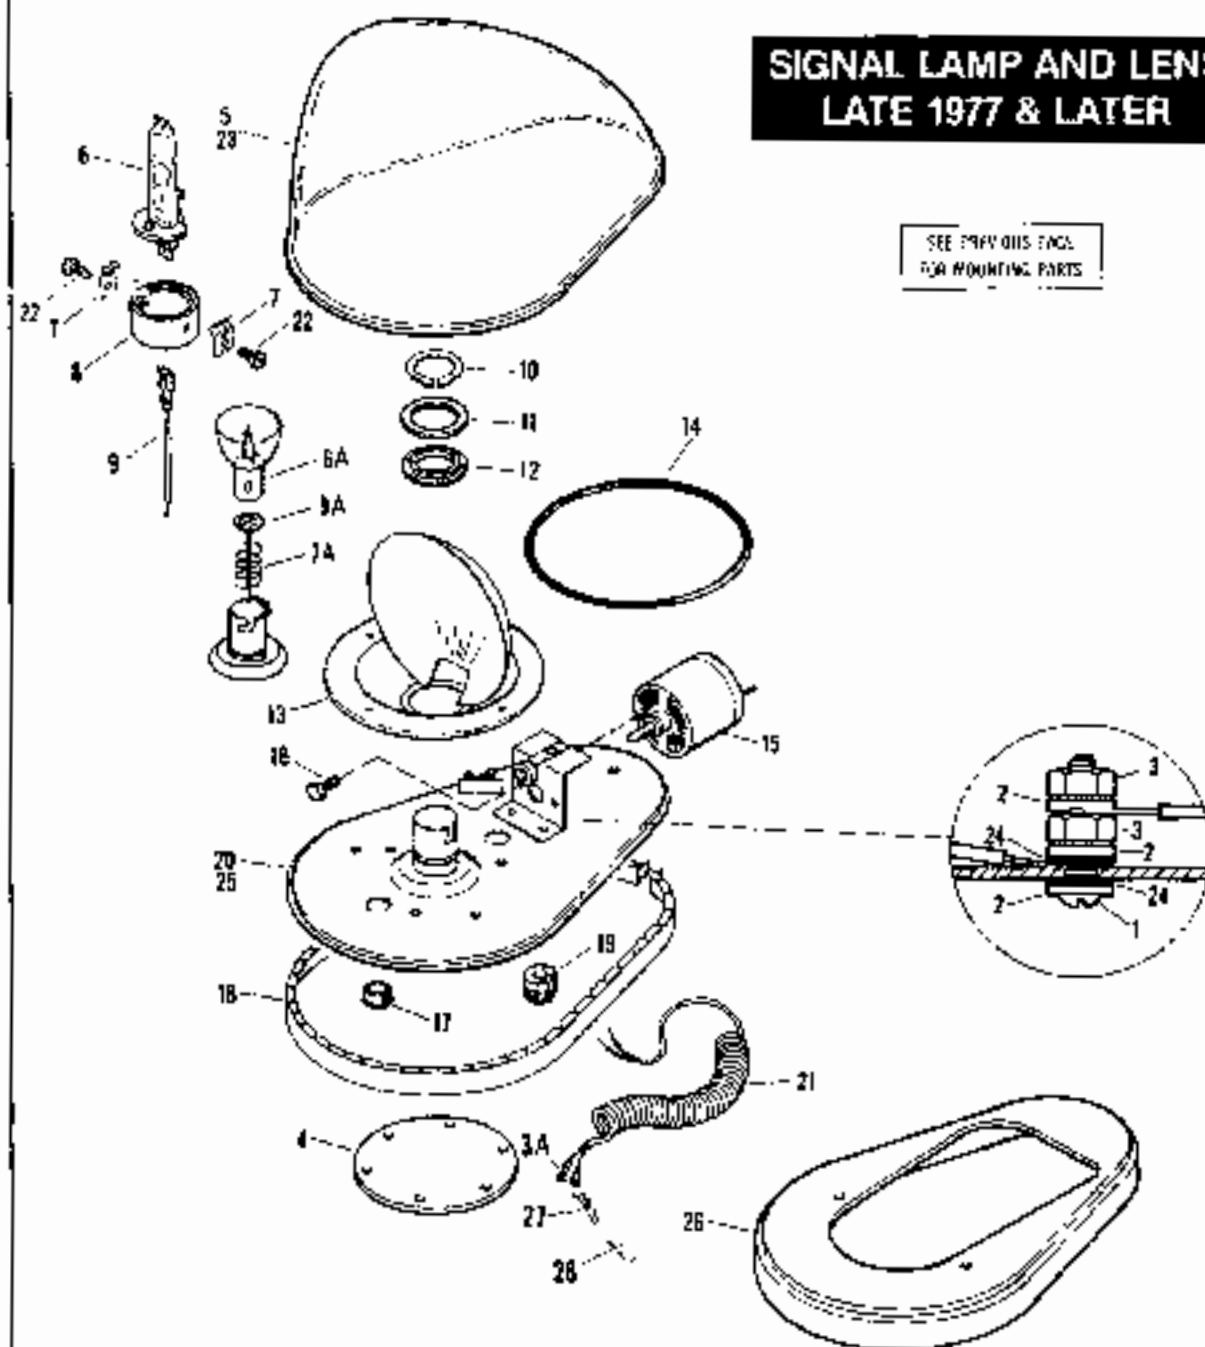

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
		2636	SCREW, No. 6-32 x 3/4 Flat head pan h	Late 77 to * — FL, FLH, FLH-80
	2	6717	WASHER, No. 6 x 3/8 x 3/64 (2)	Late 77 to * — FL, FLH, FLH-80
	3	7530	NUT, No. 6-32 x 1/8 x 5/16 hex (2)	Late 77 to * — FL, FLH, FLH-80
	3A	5556	WIRE TERMINAL, ring type, 1/4 dia. hole #16-22 wire	84 to * — FL-80
		67627-54B	LAMP AND LENS ASSEMBLY, lens mount, with cap - 12 V, incandescent (red)	Late 77 to 84 — FL, FLH, FLH-80
		67627-64C	LAMP AND LENS ASSEMBLY, lens mount, with cap - 12 V, incandescent (red)	81 to * — FL-80
		67633-77A	LAMP AND LENS ASSEMBLY, lens mount, with cap - 12 V, incandescent (blue)	Late 77 to * — FL, FLH, FLH-80
	4	67651-53	COVER PLATE, signal lamp kit base	Late 77 to * — FL, FLH, FLH-80
	5	67670-77	LAMP LENS, red	Late 77 to * — FL, FLH, FLH-80
	5	67671-77	BULB, rotating lamp — 12 v, incandescent	Late 77 to 80 — FL, FLH, FLH-80
	5A	67671-80	BULB, rotating lamp — 12 v, incandescent	81 to * — FLH-80
	7	67672-77	RETAINER, bolt (2)	Late 77 to 80 — FL, FLH, FLH-80
	7A	67672-80	SPRING, bolt contact	81 to * — FLH-80
	8	67673-77	BUSHING, bolt	Late 77 to 80 — FL, FLH, FLH-80
	9	67674-77	ADAPTER, bolt	Late 77 to 80 — FL, FLH, FLH-80
	9A	67674-80	LEAD WIRE, bolt	81 to * — FLH-80
	10	67675-77	HEATING RING, bolt	Late 77 to * — FL, FLH, FLH-80
	11	67676-77	WASHER, nylon	Late 77 to * — FL, FLH, FLH-80
	12	67677-77	WASHER, drive wheel import	Late 77 to * — FL, FLH, FLH-80
	13	67678-77	DRIVEN WHEEL AND MIRROR	Late 77 to * — FL, FLH, FLH-80
	14	67679-77	RUBBER CUSHION, driven wheel and mirror	Late 77 to * — FL, FLH, FLH-80
	15	67680-77	DRIVE MOTOR — 12 v	Late 77 to * — FL, FLH, FLH-80
	16	67681-77	BOLT, motor (2)	Late 77 to * — FL, FLH, FLH-80
	17	67682-77	PLUG, base plate (2)	Late 77 to * — FL, FLH, FLH-80
	18	67683-77	RTTA RINGS BAND, base plate	Late 77 to * — FL, FLH, FLH-80
	19	67684-77	BUSHING, base plate — signal lamp kit	Late 77 to * — FL, FLH, FLH-80
	20	67685-77	BASE PLATE, signal lamp kit	Late 77 to * — FL, FLH, FLH-80
	21	67686-77A	CABLE, rotating lamp	Late 77 to * — FL, FLH, FLH-80
	22	67687-77	SCREW, pin retainer (2)	Late 77 to 80 — FL, FLH, FLH-80
	23	67688-77	LAMP LENS, blue	Late 77 to * — FL, FLH, FLH-80
		67690-77A	LAMP AND LENS ASSEMBLY, lenser mounted — 12 V, incandescent (red)	Late 77 to * — FL, FLH, FLH-80
	24	67691-77	WASHER, lenser mounted base plate (nylon) (2)	Late 77 to * — FL, FLH, FLH-80
	25	67692-77	BASE PLATE, lenser mount lamp	Late 77 to * — FL, FLH, FLH-80
	26	67695-77	BASE PLATE ADAPTER, lenser mounted lamp	Late 77 to * — FL, FLH, FLH-80
	27	72038-71	SOCKET, single pin	84 to * — FLH-80
	28	72044-71	CONNECTOR, single pin	84 to * — FLH-80

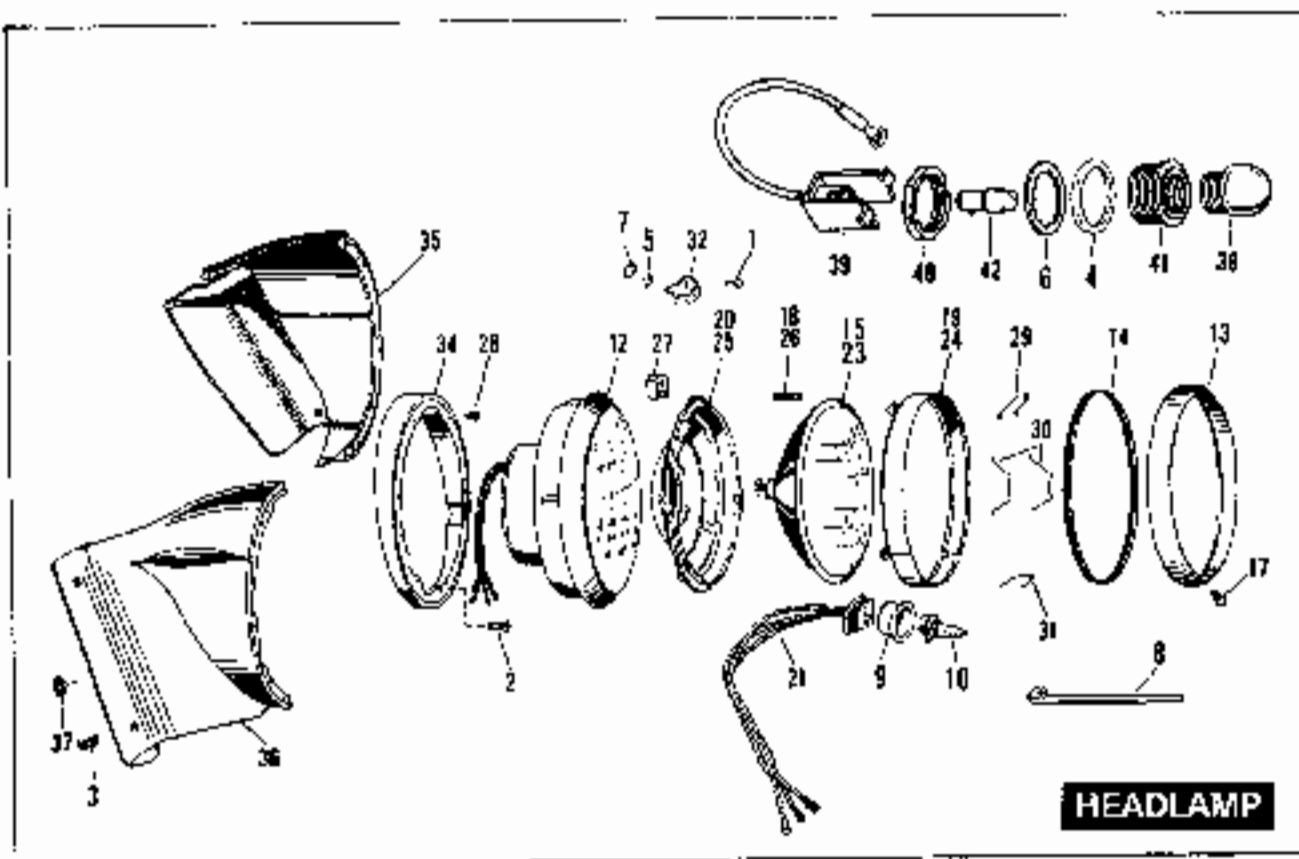

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	1635	SCREW, No. 8-32 x 3/8 flat hd. (2)	60 to * - FL, FLH, FLH-80, Classic
	2	2651N	SCREW, No. 10-24 x 1/2 self tapping, Phillips rd. hd. (adjustable fork tie)	79 to * - FL, FLH, FLH-80, Classic
		2652W	SCREW, No. 10-24 x 3/8 self tapping Phillips rd. hd. (7)	60 to * - FL, FLH, FLH-80, Classic
	3	2824W	SCREW, SAE 24 x 9/16 Phillips hd. (4)	60 to 75 - FL, FLH
		3914-W	BOLT, 5/16-24 x 3/4 hex. hd. (imp. steel) (2)	79 to * - FL, FLH, FLH-80, Classic
		4014W	BOLT, 5/16-24 x 1 1/4 hex. no. (steel) (2)	79 to * - FL, FLH, FLH-80, Classic
	4	6768	WASHER, 15/16 x 1 1/2 (5 x 1 1/6 (steel))	N/A 60 to 69 - FL, FLH
	5	7112	LOCKWASHER, No. 8-32 tooth (2)	60 to * - FL, FLH, FLH-80, Classic
	6	7149	LOCKWASHER, 15/16 in. (steel)	Late 66 to 69 - FL, FLH
	7	7550	NUT, No. 6-32 x 7/64 x 5/16 hex. (2)	60 to * - FL, FLH, FLH-80, Classic
	8	10008	WIRING STRAP, lamp	Early 77 to * - FL, FLH, FLH-80, Classic
	9	6769B-B1	BOOT, headlamp	61 to * - FL - 80, Classic
	10	57697-B1	BULB, 12 V. halogen	61 to * - FL - 80, Classic
	12	67702-70	HEADLAMP, 12 V.	N/A 70 to 90 - FL, FLH, FLH-80, Classic
		67702-81	HEADLAMP, complete - 12 V. halogen	61 to * - FLH-80, Classic
	13	67712-80A	DOOR ASSEMBLY, with gasket and springs (chrome)	60 to 90 - FL, FLH, FLH-80, Classic
		67712-83	DOOR ASSEMBLY, with gasket and springs	61 to * - FLH-80
	14	67716-60A	GASKET, headlamp door	60 to * - FL, FLH, FLH-80, Classic
	15	67717-45B	SEALED BEAM UNIT, 6 V.	N/A 49 to 54 - FL, FLH
		67717-84	SEALED BEAM UNIT, 12 V.	65 to * - FL, FLH, FLH-80, Classic
	17	67718-80A	SCREW, headlamp door	60 to * - FL, FLH, FLH-80, Classic
	18	67724-71	ADJUSTING SCREW, 1/4-28 x 1 3/8 Phillips hd. (2)	Late 71 to Early 75 - FL, FLH, FLH-80, Classic
	19	67726-71	RETAINING RING, sealed unit - 3/4" deep	Late 71 to Early 75, 81 to * - FL, FLH, FLH-80, Classic
	20	67732-71	MOUNTING RING, sealed unit - 10 slots in I.D.	Late 71 to Early 75 - FL, FLH, FLH-80, Classic
	21	67765-93	LAMP WIRING AND CONNECTOR	N/A 60 to 69 - FL, FLH
		67763-70	LAMP WIRING AND CONNECTOR	70 to * - FL, FLH, FLH-80, Classic
	23	67757-85	HEADLAMP, includes lens & 9 & 13	81 to * - FLH-80, Classic
	24	67765-52	RETAINING RING, sealed unit, 1" deep	60 to 80 - FL, FLH, FLH-80, Classic
	25	67766-50	MOUNTING RING, sealed unit - 5 slots in I.D.	60 to * - FL, FLH, FLH-80, Classic
	26	67767-60	ADJUSTING SCREW, 1/4-28 x 1 3/8 hd. (2)	60 to * - FL, FLH, FLH-80, Classic
	27	67768-60	ADJUSTING NUT (2)	N/A 60 to 84 - FL, FLH, FLH-80, Classic
	28	67769-60	FLIGHT BUMPER (2)	N/A 60 to 78 - FL, FLH, FLH-80
	29	57778-60	TOP SPRING, headlamp door	60 to * - FL, FLH, FLH-80, Classic
	30	67779-80	SIDE SPRING, headlamp door (2)	60 to Early 72 - FL, FLH
	31	57780-80	BOTTOM SPRING, headlamp door (2)	60 to * - FL, FLH, FLH-80, Classic
	32	57782-80A	BLOCKER, headlamp door	81 to * - FLH-80, Classic
	34	67842-60	ADAPTER RING, headlamp housing - adjustable fork (chrome)	60 to * - FL, FLH, FLH-80, Classic
	35	67847-60	HEADLAMP HOUSING, left (polished)	60 to * - FL, FLH, FLH-80, Classic
		67850-84	HEADLAMP HOUSING, left (polished)	84 to * - FLH-80
	36	67848-60	HEADLAMP HOUSING, right (polished)	60 to * - FL, FLH, FLH-80, Classic
	37	67850-76	SOLE PLUG, headlamp housing	Late 76 to 79 - FL, FLH, FLH-80
	38	67868-66	LENS, high beam door and (rec)	N/A 49 to 69 - FL, FLH
	39	68563-60	SOCKET AND WIRE	N/A 49 to 69 - FL, FLH
	40	68564-60	NUT, high beam lamp	49 to 69 - FL, FLH
	41	68565-60	HOLDER, high beam lamp	49 to 69 - FL, FLH
	42	71090-64	BULB, high beam lamp - 12 V.	55 to 69 - FL, FLH
		71092-68A	BULB, high beam lamp - 12 V.	82 to * - FL - 80

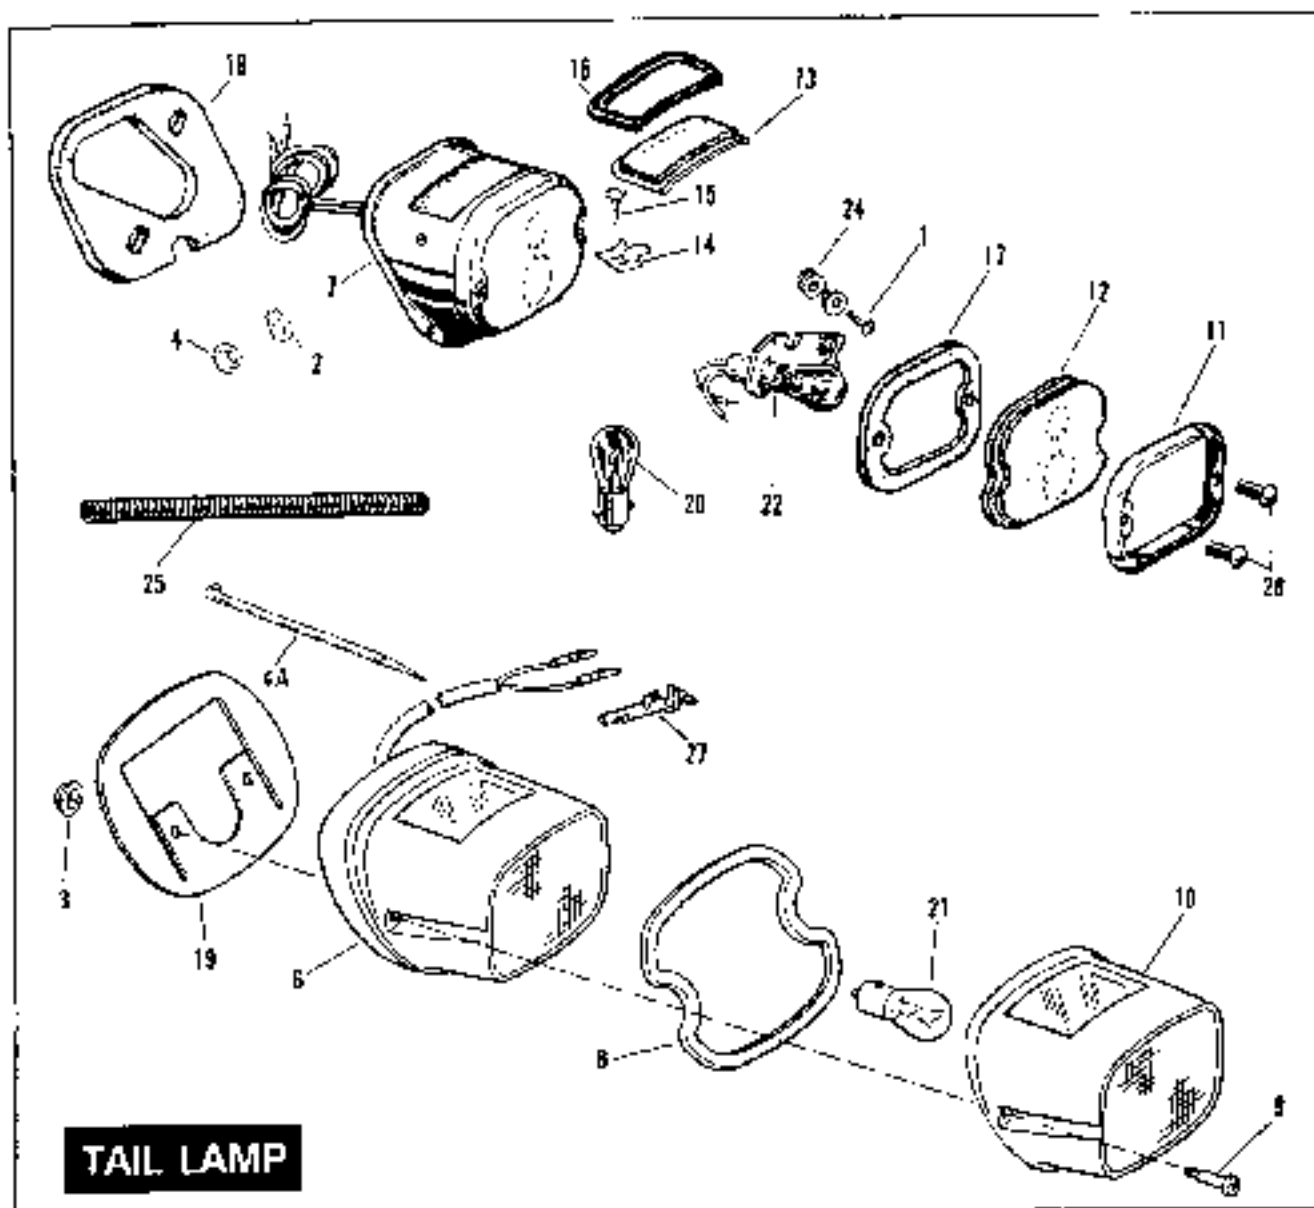

TAIL LAMP

A77

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	7512	SCREW, No. 8-32 x 1/2" d. hd. (2)	42 to 72 - FL, FLH
	2	7229W	LOCKWASHER, 1/4" internal and external teeth (2)	55 to 72 - FL, FLH
	3	7531	SPEED NUT, 1/4 x 7/16 hex. (2)	73 to * - FL, FLH, FLH-80, Classic
	4	7988	NUT, 1/4-20 x 1/4 x 1/2 hex. (2)	55 to 72 - FL, FLH
	4A	90906	WIRING STRAP, tail lamp	80 to * - FL, FLH, FLH-80, Classic
	5	68068-73A	TAIL LAMP ASSEMBLY	73 to * - FL, FLH, FLH-80, Classic
	7	68010-64B	TAIL LAMP AND STOP LIGHT ASSEMBLY	N/A 69 to 72 - FL, FLH
	8	68025-73	GASKET, tail lamp lens	73 to * - FL, FLH, FLH-80, Classic
	9	68077-73	SCREW, tail lamp lens (2)	73 to * - FL, FLH, FLH-80, Classic
	10	68034-77	LENS, tail lamp	73 to * - FL, FLH, FLH-80, Classic
	11	68086-55	GASKET, tail lamp lens	N/A 55 to 72 - FL, FLH
	12	68090-69	LENS, tail lamp (red)	55 to 72 - FL, FLH
	13	68093-55A	GLITTER LENS	N/A 55 to 72 - FL, FLH
	14	58114-55	SPEED NUT, lens screw (2)	N/A 55 to 72 - FL, FLH
	15	58119-69	SCREW, outlook lens (2)	N/A 69 to 72 - FL, FLH
	16	58121-55	GASKET, outlook lens	N/A 55 to 72 - FL, FLH
	17	58122-55	GASKET, tail lamp lens	55 to 72 - FL, FLH
	18	58123-55	GASKET, tail lamp housing	55 to 72 - FL, FLH
	19	58123-73	GASKET, tail lamp housing	73 to * - FL, FLH, FLH-80, Classic
	20	58165-47	BULB, tail and stop lamp - 6 V	N/A 47 to 64 - FL, FLH
	21	68105-64	BULB, tail lamp - 12 V	65 to * - FL, FLH, FLH-80, Classic
	22	68185-70	SOCKET AND WIRING	N/A 70 to 72 - FL, FLH
	24	68198-55	GEOMWCT, socket screw (2)	N/A 55 to 72 - FL, FLH
	25	68225-55	PHOTOETCH CON, tail lamp wire	55 to * - FL, FLH, FLH-80, Classic
	26	68672-38	SCREW, tail lamp base (2)	47 to 72 - FL, FLH
	27	72039-73	FIN TERMINAL (2)	80 to * - FL, FLH, FLH-80, Classic


**TURN SIGNALS
AND
PARKING LAMPS**

This diagram illustrates the exploded view of a turn signal and parking lamp assembly. The components are numbered as follows:


- 47: Upper mounting bracket
- 40, 41, 48: Lamp housing assembly
- 21, 10: Screws/bushings
- 6A, 6: Electrical components
- 54: Lens assembly
- 58: Lens
- 44: Mounting bracket
- 20, 16, 20, 16, 20, 16: Screws/bushings
- 5, 5A, 7: Electrical components
- 66, 28: Electrical components
- 53A: Mounting bracket
- 19, 19, 19, 19, 19, 19: Screws/bushings
- 44, 45, 45, 45, 45, 45: Mounting brackets
- 37, 37, 37, 37, 37, 37: Screws/bushings
- 16, 16, 16, 16, 16, 16: Electrical components
- 23, 15, 16, 18: Mounting brackets
- 52: Lamp housing
- 35, 35, 35, 35, 35, 35: Screws/bushings
- 55, 58, 58, 58, 58, 58: Lens assembly
- 34, 34, 34, 34, 34, 34: Mounting brackets
- 2, 2, 2, 2, 2, 2: Screws/bushings
- 50, 50, 50, 50, 50, 50: Electrical components
- 24A, 51: Mounting brackets
- 52: Lamp housing
- 31, 31, 31, 31, 31, 31: Screws/bushings
- 33: Lamp housing
- 24, 16, 16, 16, 16, 16: Mounting brackets
- 19, 19, 19, 19, 19, 19: Screws/bushings
- 25, 25, 25, 25, 25, 25: Electrical components
- 46, 46, 46, 46, 46, 46: Mounting brackets
- 68, 68, 68, 68, 68, 68: Screws/bushings
- 31A: Mounting bracket
- 10, 27, 29, 29, 29, 29: Electrical components
- 12: Mounting bracket

RETAIL PRICE	INDEX NO	PART NO	NAME	USED ON
	1	1302	SCREW, No. 10-24 x 5/8 Panhead, Hd. (2)	Late 74 to 82 — FL, FLH, FLH-80, Classic
	2	2073W	SCREW, No. 4-40 self-lapping, Hd. (two forming flasher)	Late 63 to * — FL, FLH, FLH-80, Classic
	3	2563	SCREW, No. 10-32 x 3/4 Panhead, Hd. (2)	73 to * — FL, FLH, FLH-80, Classic
	4	2565	SCREW, No. 8-32 x 5/16 Panhead, Hd. (3)	49 to 72 — FL, FLH
	5	2552	SCREW, No. 10-24 x 1/2 Panhead, Hd. (4 - front)	Late 64 to * — FL, FLH, FLH-80, Classic
	6	2622	SCREW, No. 8-32 x 7/16 Panhead, Hd.	70 to Early 79 — FL, FLH, FLH-80, Classic
	6A	2647	SCREW, No. 10-24 x 3/4 socket, Hd. (8)	83 to * — FLH-80
	7	2647W	SCREW, No. 10-24 x 1/2 self-lapping, Hd. (8)	63 to Early 64 — FL, FLH
	8	2692W	SCREW, No. 10-24 x 1/2 socket, Hd. (4 - rear)	Late 64 to 82 — FL, FLH, FLH-80, Classic
	9	3205R	SFt SCREW, No. 8-32 x 3/16 socket, Hd.	Late 68 to Early 82 — FL, FLH, FLH-80, Classic
	10	3728	BOLT, 1/4-20 x 1/2 hex, Hd. (2)	63 to * — FL, FLH, FLH-80, Classic
	11	3956	BOLT, 5/16-24 x 5/16 hex, Hd.	49 to * — FL, FLH, FLH-80, Classic
	12	4410	BOLT, 1/4-28 x 7/8 hex, Hd. (2)	49 to 62 — FL, FLH
	13	4718W	BOLT, 3/8-16 x 1-1/4 hex, Hd. (2)	69 to * — FL, FLH, FLH-80, Classic
	14	6182W	WASHER, No. 10 x 7/16 x 1/32	63 to * — FL, FLH, FLH-80, Classic
	15	6189W	WASHER, 5/32 x 13/32 x 1/32	Late 70 to Early 79 — FL, FLH, FLH-80, Classic
	16	5192	WASHER, No. 8 x 7/16 x 3/64	70 to Early 76 — FL, FLH
	17	6702	WASHER, 5/16 x 11/16 x 1/16 (2)	49 to * — FL, FLH, FLH-80, Classic
	18	7635	LOCKWASHER, 1/4 (2)	59 to 62 — FL, FLH
	19	7941	LOCKWASHER, 5/16 (4)	79 to * — FL, FLH, FLH-80, Classic
	20	7955	LOCKWASHER, No. 10 (6)	58 to 62 — FL, FLH
	21	7239	LOCKWASHER, 1/4 external thread (2)	63 to * — FL, FLH, FLH-80, Classic
	22	7608	NUT, No. 8-32 x 1/8 x 5/16 hex.	49 to 72 — FL, FLH
	23	7609W	LOCKNUT, No. 8-32 x 3/16 x 11/32 hex.	73 to Early 75 — FL, FLH, FLH-80, Classic
	24	7676	NUT, 1/4-28 x 3/16 x 7/16 hex (2)	59 to 62 — FL, FLH
	25	7744	NUT, 5/16-24 x 3/16 x 1/2 hex (4)	58 to 82 — FL, FLH
	26	7778	LOCKNUT, 3/8-16 x 7/16 x 9/16 hex.	66 to * — FL, FLH, FLH-80, Classic
	26A	9856	INSULATOR flag (air) (2)	70 to 83 — FL, FLH, FLH-80, Classic
	27	9952	FLASHER CLIP (3)	49 to * — FL, FLH, FLH-80, Classic
	28	9963	CLIP, turn signal amp cable (2)	58 to 62 — FL, FLH
	29	9976	HANDLEBAR CLAMP (2)	49 to 72 — FL, FLH
	30	10007	CLAMP, handlebar switch (2)	49 to 72 — FL, FLH
	31	10002	CLIP, front wires to fork (2)	49 to 72 — FL, FLH
	31A	10006	WIRING STRAP, hazard and parking lamp wires	80 to * — FL, FLH, FLH-80, Classic
	32	10012	CLAMP, frame head	49 to * — FL, FLH, FLH-80, Classic
	33	31650-69A	GROUND STRAP	59 to 62 — FL, FLH
	34	47841-31	SPRET, 8/64 x 9/32 umbrella head (2)	Late 79 to * — FL, FLH, FLH-80, Classic
	35	67840-70	OEAL, flasher, parking lamp	70 to * — FL, FLH, FLH-80, Classic
	36	67843-70	TOGGLE SWITCH, hazard warning flasher kit	70 to * — FL, FLH, FLH-80, Classic
	37	67846-70	NU1, toggle switch	70 to * — FL, FLH, FLH-80, Classic
	38	68165-64	BULB, directional — 12 V (3)	82 to * — FLH-80, Classic
		68166-64	BULB, parking lamp — 12 V (2)	65 to * — FL, FLH, FLH-80, Classic
		68503-68	FRONT PARKING LAMP KIT	68 to * — FL, FLH, FLH-80, Classic
	40	68510-70	BRACKET, rear turn signal lamps	Mid 73 — FL, FLH
	41	68510-74A	BRACKET, rear turn signal lamps	74 to * — FL, FLH, FLH-80, Classic
	42	68518-68	AMP MOUNTING K 1, parking lamp (hardware only)	Late 68 to 82 — FL, FLH, FLH-80, Classic
	43	68519-68	BRACKET, front turn signal or parking lamp (2)	69 to * — FL, FLH, FLH-80, Classic
	44	68520-63	O-RING, amp mounting (4)	63 to * — FL, FLH, FLH-80, Classic
	45	68521-63A	LENS GASKET (4)	63 to * — FL, FLH, FLH-80, Classic
	46	68525-52A	BRACKET, rear turn signal lamps	58 to 62 — FL, FLH, 72 to 78 — FL, FLH, FLH-80
	47	68525-62	MOUNTING BRACKET, rear	73 to 78 — FL, FLH, FLH-80
	48	68525-63	BRACKET, rear turn signal lamps	63 to 73 — FL, FLH
	49	68527-63	BRACKET, front turn signal lamps (2)	63 to * — FL, FLH, FLH-80, Classic
	50	68541-64A	FLASHER, hazard warning	68 to * — FL, FLH, FLH-80, Classic
	51	68543-64B	FLASHER, turn signal — 12 V	65 to Early 83 — FL, FLH, FLH-80, Classic
	52	68545-70	BRACKET, flasher	70 to Early 81 — FL, FLH, FLH-80, Classic
		68546-61	BRACKET, flasher	Late 81 to * — FLH-80, Classic

TURN SIGNALS AND PARKING LAMPS

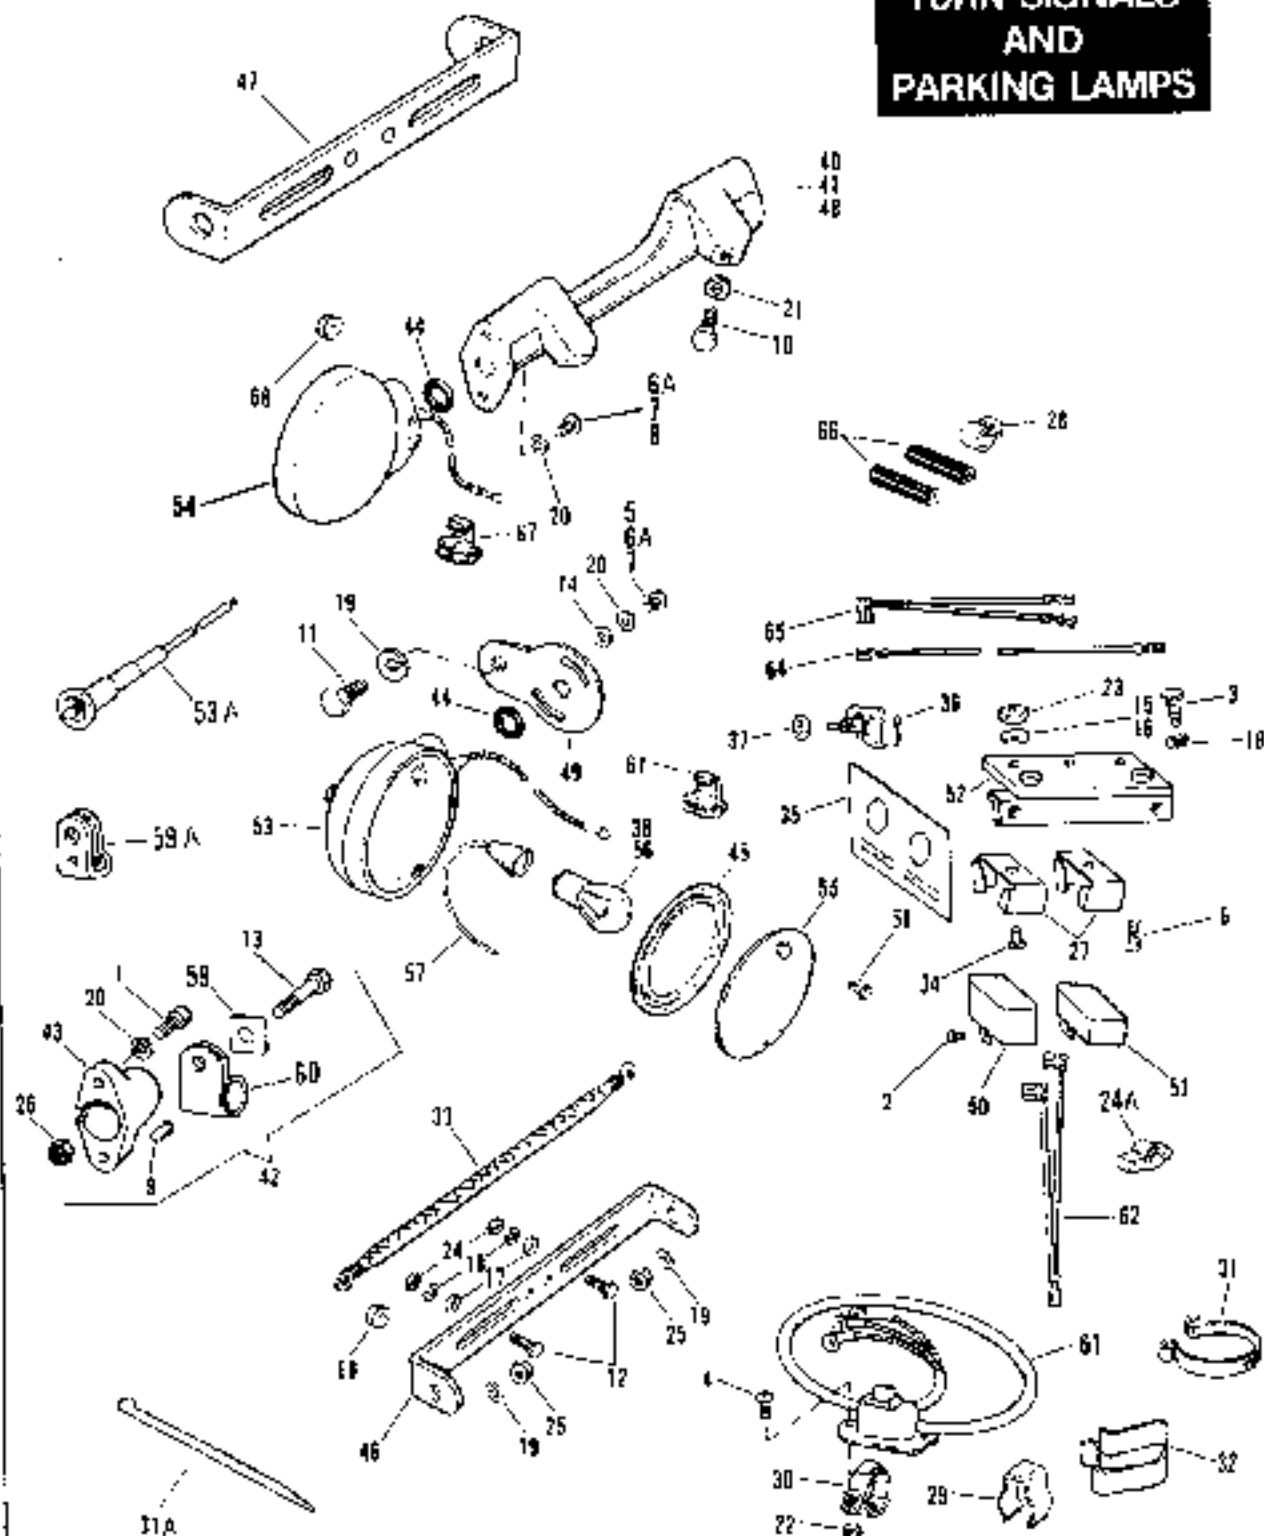

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	83	68552-70A	LAMP WITH WIRE, front — 12 V (amber) (2)	63 to * — FL, FLH, FLH-80, Classic
	83A	68554-92	WIRE, terminals to directional (1000x) (4)	82 to * — FLH-80, Classic
	84	68557-70A	LAMP WITH WIRE, rear — 12 V (amber) (2)	63 to * — FL, FLH, FLH-80, Classic
	85	68570-82	LENS, red, lamp (red) (2)	63 to 73 — FL, FLH
		68571-60A	LENS, front & rear (amber) (4)	63 to * — FL, FLH, FLH-80, Classic
	86	68572-64A	BULB, turn signal (12 — 12 V)	65 to * — FL, FLH, FLH-80, Classic
	87	68579-70	SOCKET AND WIRE	63 to 81 — FL, FLH, FLH-80, Classic
	88	68583-81	SCREW, lens mounting (2)	63 to 81 — FL, FLH, FLH-80, Classic
		68586-50A	SCREW, lens mounting (2)	N/A 82 to 84 — FLH-80, Classic
	89	68591-92	WASHER 3/8 x 1-1/8 square	Late 92 — FLH-80, Classic
	90A	68705-58	CLAMP	Late 88 to Early 92 — FL, FLH, FLH-80, Classic
	90	68705-92	CLAMP, lamp support	Late 92 — FLH-80, Classic
	91	70058-50B	HANDLEBAR SWITCH AND CABLE	N/A 49 to 63 — FL, FLH, FLH-80, Classic
	92	70126-79	WIRE, front and turn signal flasher (orange) (2 — Late 84)	60 to * — FL, FLH, FLH-80, Classic
	94	70425-70A	WIRE, terminal 2 to toggle switch (brown)	70 to * — FL, FLH, FLH-80, Classic
		70425-70A	WIRE, terminal 2 to toggle switch (brown)	60 to * — FL, FLH, FLH-80, Classic
		70428-70A	WIRE, terminal 1 to toggle switch (white)	70 to * — FL, FLH, FLH-80, Classic
	95	70429-70	WIRING HARNESS, toggle switch to flasher	70 to 79 — FL, FLH, FLH-80, Classic
		70429-80	WIRING HARNESS, toggle switch to flasher (yellow)	80 to 82 — FL, FLH, FLH-80, Classic
	96	70575-50	INSULATING CONNECTING TUBE (2)	N/A 49 to 71 — FL, FLH
	97	70576-99	WIRE CONNECTOR	70 to * — FL, FLH, FLH-80, Classic
	98	70577-25	300 MM FT., rear lamp cable	49 to 72 — FL, FLH
				76 to * — FL, FLH, FLH-80, Classic

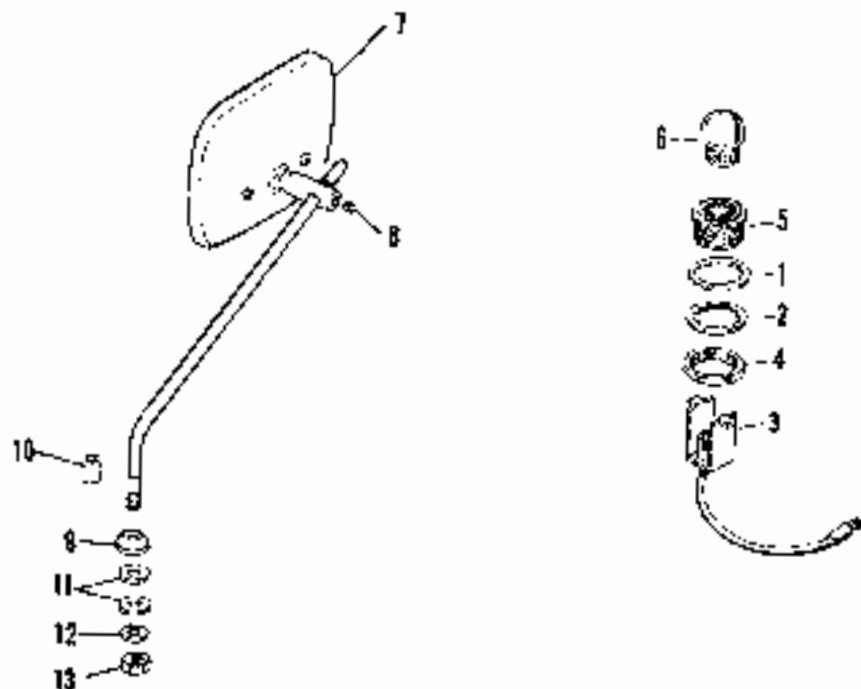


MIRROR AND INDICATOR LAMPS

MIRROR AND INDICATOR LAMPS

A76

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	5768	WASHER (liber)	N/A 60 to 74 — FL, FLH
	2	7149	LOCKWASHER 15/16 internal tooth	49 to 74 — FL, FLH
	3	68563-60	SOCKET AND WIRE, pilot amp	60 to 74 — FL, FLH
	4	68564-60	NUT, pilot amp holder	60 to 74 — FL, FLH
	5	68565-60	HOLDER, pilot lamp	60 to 74 — FL, FLH
	6	68566-60	LENS, pilot lamp (green)	60 to 74 — FL, FLH
	7	91979-67B	MARKER KIT, 5" rectangular - long stem (chrome) 12 - Classic	late 79 to * — FLH-80, Classic
	8	3275	SET SCREW	Consists of besides mirror & stem.
	9	5714	SPACER (Early 82)	
	10	5978W	SPACER (Late 79 to 81, Late 82 to *)	
	11	6702	WASHER (2)	
	12	7041	LOCKWASHER	
	13	7744	JAMNUT	

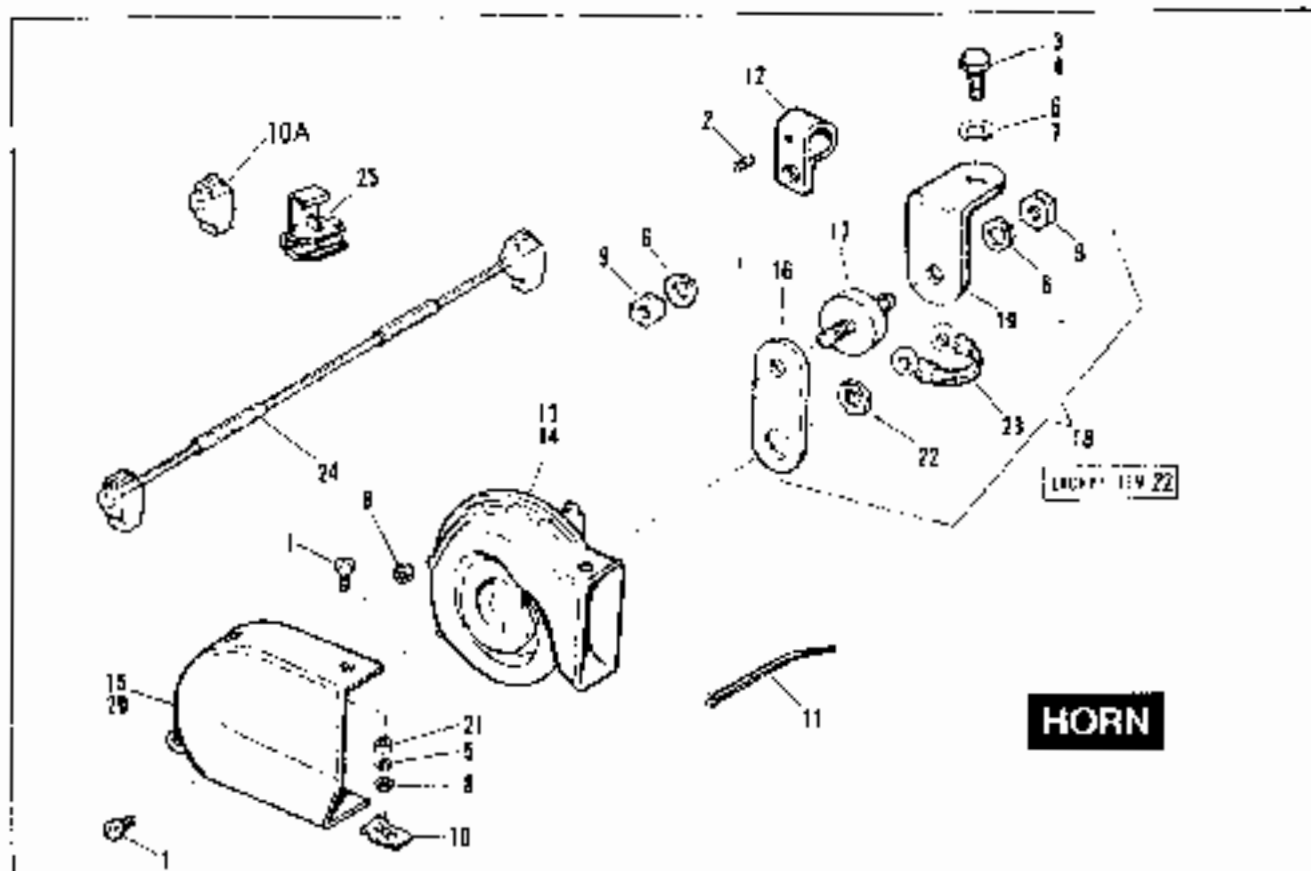


HORN

A81


RETAIL PRICE	INDEX NO.	PART NO	NAME	USED ON
	1	1719W	SCREW, No. 8-32 x 5/8 Pm. hd. (3)	70 to * — FL, FLH, FLH-80, Classic
	2	3205B	SLT SCREW, No. 8-32 x 3/15 slot hd. (2)	70 to * — FL, FLH, FLH-80, Classic
	3	0853W	BOLT, 5/16-24 x 1/2 hex. hd.	79 to * — FL, FLH, FLH-80, Classic
	4	.4955	BOLT, 5/16-24 x 5/16 hex. hd.	66 to 78 — FL, FLH, FLH-80
	5	7015	LOCKWASHER, No. 8 (2)	70 to * — FL, FLH, FLH-80, Classic
	6	7041	LOCKWASHER, 5/16 (3) (2 — 79 & later)	54 to * — FL, FLH, FLH-80, Classic
	7	7127	LOCKWASHER, 5/16 intermediate	79 to * — FL, FLH, FLH-80, Classic
	8	7608	NUT, No. 8-32 x 1/8 x 11/32 hex. (2)	70 to * — FL, FLH, FLH-80, Classic
	9	7748W	NUT, 5/16-18 x 17/64 x 1/2 hex. (2)	65 to * — FL, FLH, FLH-80, Classic
	10	8125	SPEED NUT, horn cover	73 to * — FL, FLH, FLH-80, Classic
	10A	9099	INSULATOR, flag terminal	79 to 83 — FL, FLH, FLH-80, Classic
	11	10006	PLASTIC STRAP, horn wire to frame (2)	73 to * — FL, FLH, FLH-80, Classic
	12	10025	CLAMP, horn to frame (1 or 2)	70 to * — FL, FLH, FLH-80, Classic
	13	69C00-76	HORN, low note	Late 76 to * — FL, FLH, FLH-80, Classic
		69C03-76	TWIN HORN KIT	Late 76 to * — FL, FLH, FLH-80, Classic
	14	69C15-76	HORN, high note	Late 76 to * — FL, FLH, FLH-80, Classic
	15	69C17-76	COVER, high note horn	Late 76 to * — FL, FLH, FLH-80, Classic
	16	69117-65	MOUNTING PLATE, horn	65 to * — FL, FLH, FLH-80, Classic
	17	69125-65	RUBBER MOUNT, horn — 5/16-18 threads	65 to * — FL, FLH, FLH-80, Classic
	18	69130-65C	HORN MOUNTING BRACKET, with rubber mount	65 to * — FL, FLH, FLH-80, Classic
	19	69131-65	MOUNTING BRACKET, horn	65 to * — FL, FLH, FLH-80, Classic
	20	69141-70	COVER, high note horn	70 to Early 76 — FL, FLH
	21	69144-65	SPACER, horn cover	70 to * — FL, FLH, FLH-80, Classic
	22	69149-65	NUT, horn mounting	65 to * — FL, FLH, FLH-80, Classic
	23	70016-65A	GROUND STRAP, horn	Late 69 to * — FL, FLH, FLH-80, Classic
	24	70018-70	CABLE ASSEMBLY, low note	70 to * — FL, FLH, FLH-80, Classic
	25	70576-68	WIRE CONNECTOR	70 to * — FL, FLH, FLH-80, Classic

SPOTLAMPS, PASSING LAMPS AND PURSUIT LAMPS

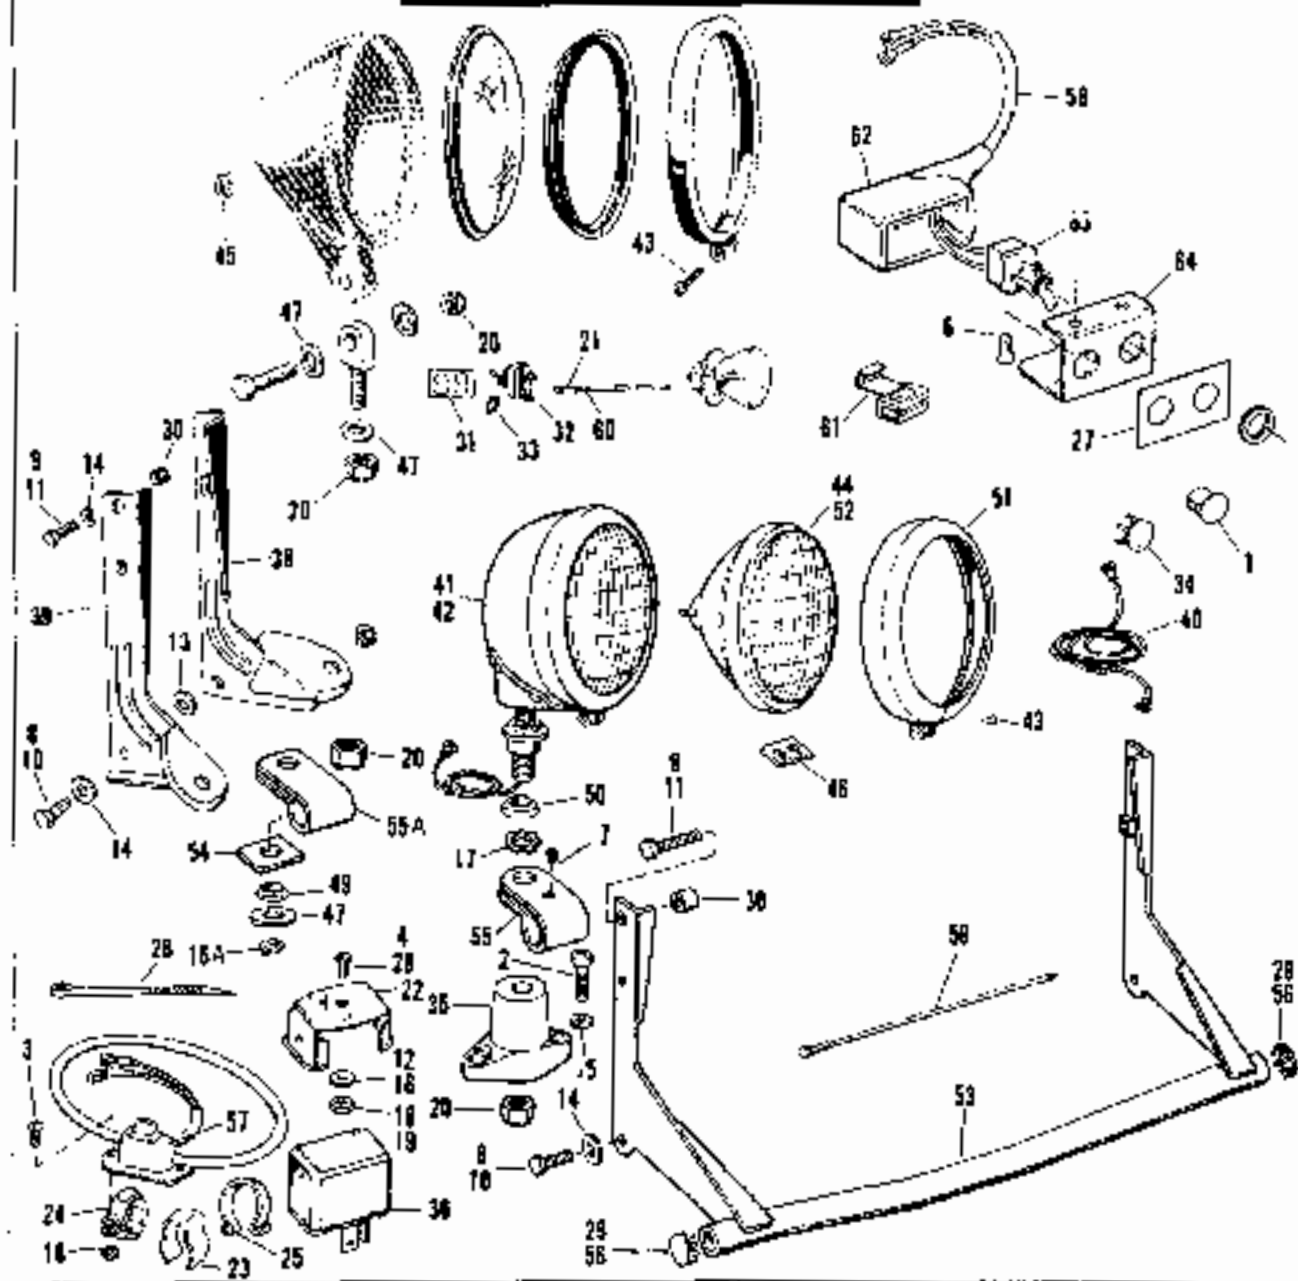


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
		729	HOUS. 2 LG. switch	84 to * - FLH-80
	1	1302	SCREW, No. 10-24 x 5/8 Panhead, (1) incl. (4)	66 to 82 - FI, FLH, FLH-80, Classic
	2	2285	SCREW, No. 8-32 x 1/2 Flathead pan hd (2)	60 to 83 - FL, FLH, FLH-80, Classic
	3	2282	SCREW, No. 8-32 x 7/16 Flathead pan hd	70 to 83 - FI, FLH, FLH-80, Classic
	4	2547	SCREW, No. 10-24 x 3/4 hex. hd (1)	84 to * - FLH-80
	5	2561W	SCREW, No. 10-24 x 1/2 self-tapping Phil. hd (2)	84 to * - FLH-80
	6	3200N	SE. SCREW, No. 8-32 x 3/8 socket hd (2)	68 to Early 82 - FL, FLH, FLH-80, Classic
	7	3295B	BOLT, 5/16-24 x 1/4 hex. hd (2)	49 to 73 - FL, FLH, FLH-80
	8	3295W	BOLT, 5/16-24 x 1/4 hex. hd (2)	49 to 78-84 to * - FI, FLH, FLH-80
	9	3294W	BOLT, 5/16-24 x 1/4 hex. hd (2)	79 to 83 - FI, FLH, FLH-80, Classic
	10	4014W	BOLT, 5/16-24 x 1/4 hex. hd (2)	79 to * - FL, FLH, FLH-80, Classic
	11	6188W	WASHER, No. 8 x 3/8 x 1/32	70 to Early 78 - FL, FLH, FLH-80
	12	6192	WASHER, No. 8 x 7/16 x 3/64 - 5/8	Late 73 to * - FL, FLH, FLH-80, Classic
	13	6706B	WASHER, 5/16 x 7/16 x 3/16 (2)	84 to * - FLH-80
	14	6702	WASHER, 5/16 x 7/16 x 7/16 (2)	84 to * - FLH-80
		7041	LOCKWASHER, 5/16 (4)	49 to 82 - FI, FLH, FLH-80, Classic
	15	7049	LOCKWASHER, No. 10 (4)	86 to * - FL, FLH, FLH-80, Classic
	16	7115	LOCKWASHER, No. 11 (4, 5-7) & later	49 to 83 - FI, FLH, FLH-80, Classic
	16A	7130W	LOCKWASHER, 3/8	92 to * - FLH-80, Classic
	17	7145W	LOCKWASHER, 3/8 external lock (2)	88 to Early 82 - FL, FLH, FLH-80, Classic
	18	7608	NUT, No. 8-32 x 1/8 x 3/8 hex. (2)	49 to 83 - FI, FLH, FLH-80, Classic
	19	7609W	LOCKNUT, No. 8-32 x 3/16 x 3/8 hex.	70 to 79 - FI, FLH, FLH-80, Classic
	20	7773	LOCKNUT, 3/8-16 x 7/16 x 9/16 hex. (2)	49 to * - FL, FLH, FLH-80, Classic
		7783	NUT, 3/8-16 x 3/16 x 9/16 hex. (2)	82 to * - FLH-80, Classic
	21	8300	CONNECTION wire	81 to * - FLH-80, Classic
	22	9552	MOUNTING CLIP, Castor (2-E4)	49 to 84 - FL, FLH
				70 to * - FL, FLH, FLH-80, Classic
	23	9976	CLAMP, switch wires (2)	49 to 82 - FL, FLH, FLH-80, Classic
	24	10001	CLAMP, handlebar switch (2)	49 to 82 - FL, FLH, FLH-80, Classic
	25	10032	WIRE CLIP (2)	62 to 89 - FI, FLH
	26	10030	CABLE STRAP (2)	70 to * - FI, FLH, FLH-80, Classic
	27	1402*-83	LABEL, siren & lights	84 to * - FLH-80
	28	4194*-31	HOSE, 3/64 x 4/32 umbrella hd (2)	84 to * - FLH-80
	29	56238*-62	END PLUG, spotlight bracket (2)	Late 78 to 82 - FL, FLH, FLH-80, Classic
	56575*-28	GRASS BAR, handlebar - mount spotlamps & accessories	41 to 78 - FL, FLH, FLH-80, Classic	
			Consists of besides items 10 & 14	
			7751 NUT, 5/16-24 x 1/4 x 1/2 hex. (2)	
			58521-26 CLAMP, bar to handlebar (2)	
	30	59102*-48	SPACER, spotlight brackets (2)	62 to * - FL, FLH, FLH-80, Classic
	31	67643*-73	LABEL, headlamp housing	70 to * - FI, FLH, FLH-80, Classic
		67653-94	LABEL, headlamp housing	84 to * - FLH-80
	32	67644*-70	TOGGLE SWITCH, spotlight	70 to * - FI, FLH, FLH-80, Classic
	33	67649-70	NUT, toggle switch	70 to * - FL, FLH, FLH-80, Classic
	34	67663-76	HOLE PLUG, cycle signal	84 to * - FLH-80
		67661-84	HOLE PLUG, microphone jack	84 to * - FLH-80
	35	68513*-E8	MOUNTING BRACKET, directional lamp (2)	69 to * - FI, FLH, FLH-80, Classic
	36	68541*-E4A	FLASHER, 12 v.	65 to * - FI, FLH, FLH-80, Classic
		68589-70	SET OF PURSUIT LAMPS & FITTINGS, 12 V. (blue lens)	70 to 82 - FI, FLH, FLH-80
		68603-70	SET OF PASSING LAMPS & FITTINGS, 12 V.	70 to 82 - FI, FLH, FLH-80, Classic
		68601-70	SET OF PURSUIT LAMPS & FITTINGS, 12 V. (red lens)	70 to 82 - FL, FLH, FLH-80
	38	68603-E2	MOUNTING BRACKET, left	82 to * - FI, FLH, FLH-80, Classic
		68603-70	SET OF PURSUIT LAMPS & FITTINGS, 12 V.	70 to 78 - FI, FLH, FLH-80
	39	68604-E2	MOUNTING BRACKET, right	82 to * - FI, FLH, FLH-80, Classic

SPOTLAMPS, PASSING LAMPS AND PURSUIT LAMPS

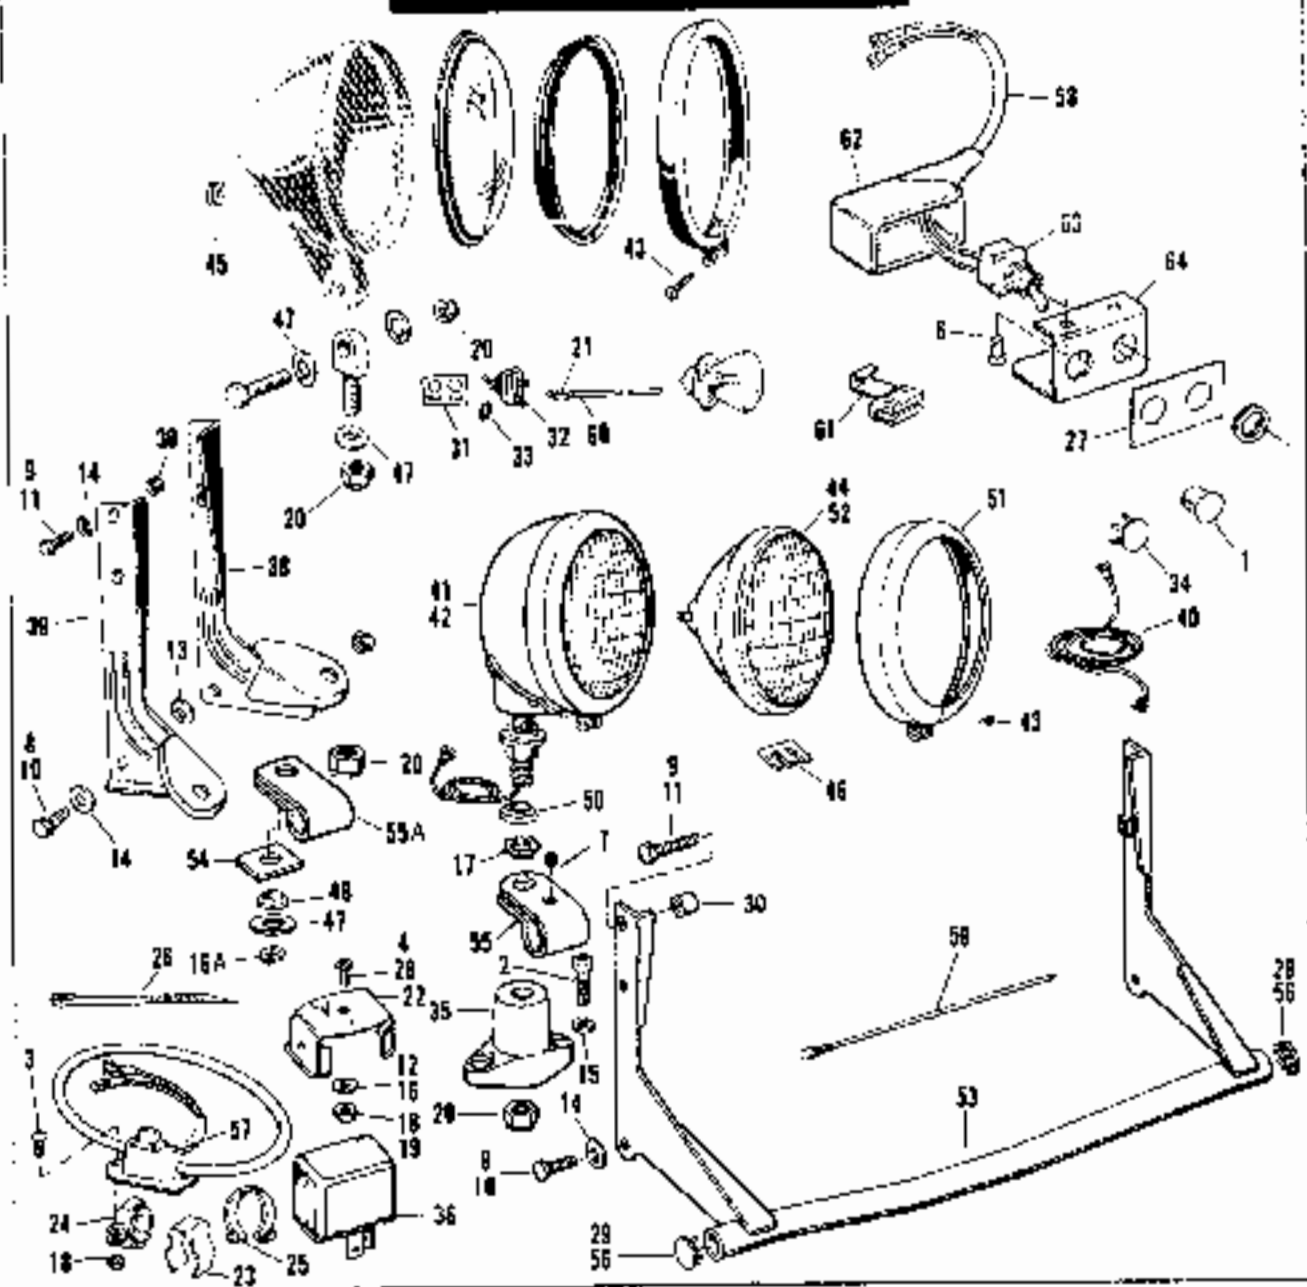


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
		68605-70	SET UP PURSUIT LAMPS WITH AIDS (red & clear lens)	76 to 79 - FL, FLH, FLH-80
40		68627-62A	SPOT LAMP WIRE (2)	62 to * - FL, FLH, FLH-80, Classic
41		68652-540	PASSING LAMP, 12 V. (clear lens)	62 to 79 - FL, FLH
		68654-64	PURSUIT LAMP - 12 V. (red lens)	62 to 82 - FL, FLH, FLH-80
		68657-70	PURSUIT LAMP KIT, left - 12 V. (red lens)	70 to * - FL, FLH, FLH-80
		68658-70	PURSUIT LAMP KIT, right - 12 V. (red lens)	70 to * - FL, FLH, FLH-80
42		68667-79	PASSING LAMP KIT, 12 V. (clear lens)	78 to * - FL, FLH, FLH-80, Classic
		68669-70	PURSUIT LAMP, right - 12 V. (red lens)	70 to * - FL, FLH, FLH-80
		68670-70	PURSUIT LAMP KIT, left - 12 V. (blue lens)	70 to * - FL, FLH, FLH-80
43		68672-68	SCREW, spotlight cover	41 to * - FL, FLH, FLH-80, Classic
44		68674-69	PASSING LAMP SEALED UNIT, 12 V. (2)	Late 69 to * - FL, FLH, FLH-80, Classic
45		68686-68	GROUNDING, lamp wire	N/A 41 to 41 - FL, FLH, FLH-80, Classic
46		68690-69	WIRE CLIP, passing lamp (2)	Late 69 to * - FL, FLH, FLH-80, Classic
47		68693-66	SWITCH WASHING (2)	41 to * - FL, FLH, FLH-80, Classic
49		68720-62	CLAMP BLOCK (2)	62 to 67 - FL, FLH
				70 to * - FL, FLH, FLH-80, Classic
50		68721-67	SWITCH BLOCK (2)	62 to * - FL, FLH, FLH-80, Classic
51		68725-52	LAMP MOUNTING, spotlight and pursuit lamp	62 to * - FL, FLH, FLH-80, Classic
52		68725-52	SPOT LAMP SEALED UNIT, 6 V. (clear lens)	N/A 62 to 64 - FL, FLH
		68725-54	SPOT LAMP SEALED UNIT, 12 V. (clear lens)	65 to 78 - FL, FLH, FLH-80
		68727-54A	PURSUIT LAMP SEALED UNIT, 12 V. (red lens)	65 to * - FL, FLH, FLH-80
		68728-64	PURSUIT LAMP SEALED UNIT, 12 V. (blue lens)	65 to * - FL, FLH, FLH-80
53		68790-68	SUPPORT BAR	69 to 92 - FL, FLH, FLH-80, Classic
54		68791-87	WASHING, 3/16 x 1-1/8 square	Late 82 - FLH-80, Classic
55		68795-69	CLAMP BRACKET, spotlight (2)	68 to Early 92 - FL, FLH, FLH-80, Classic
55A		68795-87	CLAMP BRACKET, spotlight (2)	Late 82 - FLH-80, Classic
56		68797-69A	END FILL, spotlight bracket (2)	68 to Early 78 - FL, FLH, FLH-80
57		70350-29	HANDLEBAR SWITCH, with wires	41 to Early 78 - FL, FLH, FLH-80, Classic
58		70152-64	WIRING HARNESS, pursuit lamp	84 to * - FLH-80
59		70246-70	WIRE, passing lamp (gray) (2)	70 to Early 79 - FL, FLH, FLH-80
60		70430-70	WIRE, toggle switch - passing lamp (blue) (2)	70 to * - FL, FLH, FLH-80, Classic
61		70576-68	WIRE CONNECTION (2 - 68 to early 70)	56 to * - FL, FLH, FLH-80, Classic
62		71430-63	BOOT, toggle switch	84 to * - FLH-80
63		71431-63	TOGGLE SWITCH, pursuit lamp	84 to * - FLH-80
64		81152-85	BRACKET, toggle switches	84 to * - FLH-80

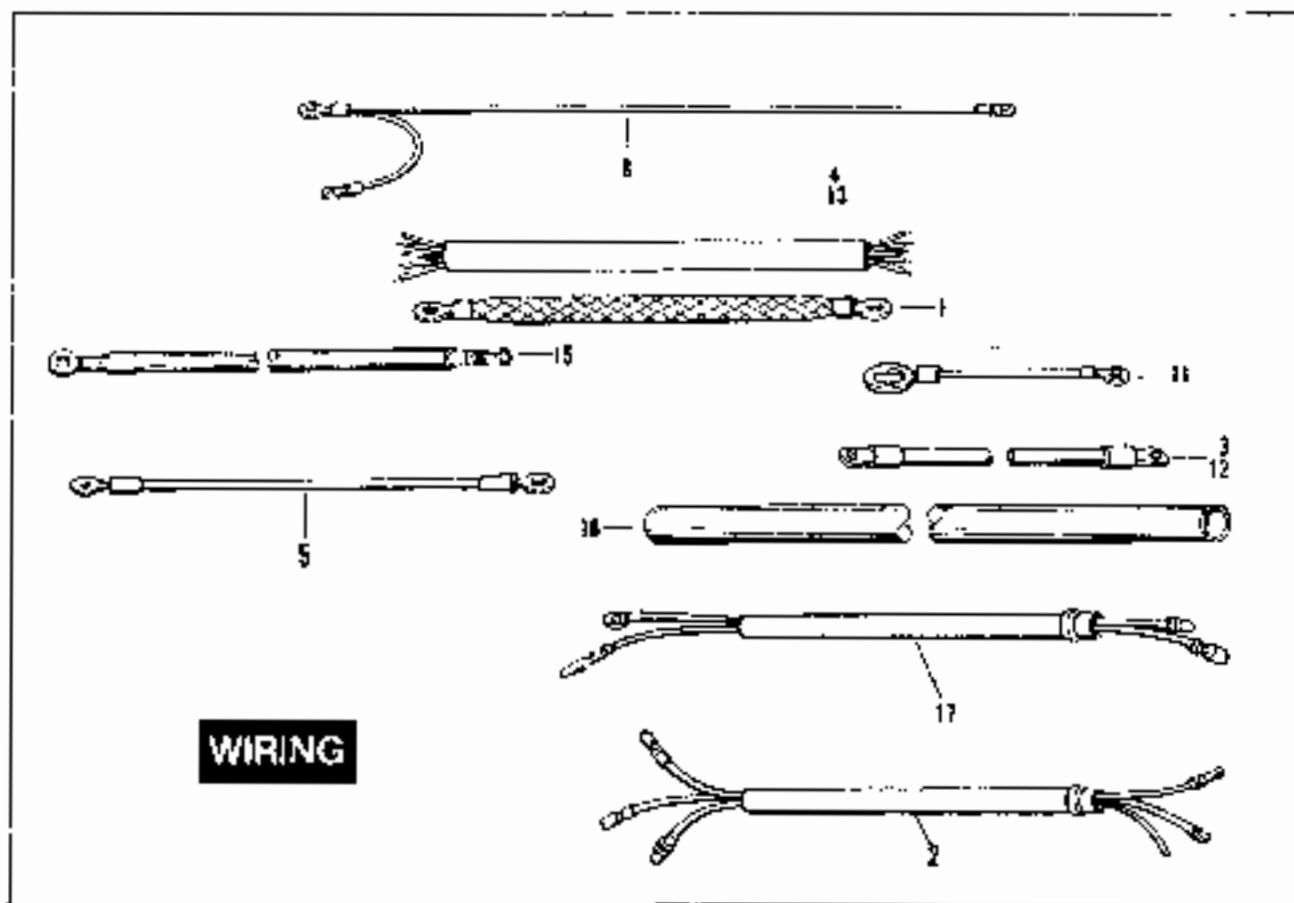


RETAIL PRICE	INDEX NO.	PART NO	NAME	USED ON
	1	21050-80A	GROUND STRAP, regulator	N/A 65 to 69 - FL, FLH
	2	70063-79	WIRING HARNESS, sidecar connector	79 to 82 - Classic
		70068-92	WIRING HARNESS, sidecar connector	83 - Classic
		70063-84	WIRING HARNESS, sidecar connector	84 to * - CLT
	3	70060-65B	CABLE, solenoid to starter & battery (2 - Early 90 & Earlier)	late 65 to * - FL, FLH, FLH-80, Classic
		70069-80	CABLE, solenoid to starter	late 82 to * - FLH-80
	4	70105-73	WIRE, leg lock link (part, positive to starter relay)	N/A 73 to 78 - FL, FLH, FLH-80
	5	70144-73	WIRE, ignition switch terminal 2 & 4	N/A 73 to 78 - FL, FLH, FLH-80
		70145-73	WIRE, ignition switch terminal 1 & 3	N/A 73 to 78 - FL, FLH, FLH-80
		70158-73	WIRE, ignition switch terminal 5 & ignition circuit breaker	N/A 73 to 78 - FL, FLH, FLH-80
	8	70150-73A	WIRE, ignition switch terminal 6 & lights circuit breaker	N/A 73 to 78 - FL, FLH, FLH-80
	9	70150-73	WIRE, ignition switch terminal 4 & accessory circuit breaker	N/A 73 to 78 - FL, FLH, FLH-80
		70159-70	WIRE, starter relay to starter motor mount (back)	70 to * - FL, FLH, FLH-80, Classic
	11	70191-73A	WIRE, hand lever ground	Early 78 to * - FL, FLH, FLH-80, Classic
	12	70209-55A	BATTERY GROUND CABLE	85 to * - FL, FLH, FLH-80, Classic
	13	70281-47	TAIL LAMP WIRE (red)	N/A 47 to 77 - FL, FLH, FLH-80, Classic
		70282-47	TAIL LAMP WIRE (black)	N/A 47 to 77 - FL, FLH, FLH-80, Classic
		70320-73A	MAIN WIRING HARNESS	73 to 77 - FL, FLH
		70320-73	MAIN WIRING HARNESS	78 & 79 - FL, FLH, FLH-80, Classic
		70320-80	MAIN WIRING HARNESS	80 to 81 - FL, FLH, FLH-80, Classic
		70320-82A	MAIN WIRING HARNESS	82 to * - FLH-80, Classic
	15	70456-73	WIRE, circuit breaker to coil	70 to * - FL, FLH, FLH-80, Classic
	16	70551-69	CONDUIT, 1/8 I.D. x 13 ft. lg. (black vinyl) (hi temp)	41 to * - FL, FLH, FLH-80, Classic
		70552-69	CONDUIT, 3/8 I.D. x 13 ft. lg. (black vinyl)	41 to * - FL, FLH, FLH-80, Classic
		70553-69	CONDUIT, 7/16 I.D. x 10 ft. lg. (black vinyl)	41 to * - FL, FLH, FLH-80, Classic
		70554-69	CONDUIT, 1/4 I.D. x 10 ft. lg. (black vinyl)	41 to * - FL, FLH, FLH-80, Classic
		70555-69	CONDUIT, 1/4 I.D. x 13 ft. lg. (black vinyl) (hi temp)	41 to * - FL, FLH, FLH-80, Classic
		70556-71	CONDUIT, 5/16 I.D. x 10 ft. lg. (black vinyl)	41 to * - FL, FLH, FLH-80, Classic
		70558-71	CONDUIT, 1/2 I.D. x 10 ft. lg. (black vinyl)	41 to * - FL, FLH, FLH-80, Classic
		70559-71	CONDUIT, 1/8 I.D. x 10 ft. lg. (black vinyl)	41 to * - FL, FLH, FLH-80, Classic
	17	70645-79	WIRING HARNESS, rear tender (four-Pak)	73 to * - FL, FLH, FLH-80, Classic
		91704-15	BRAIDED CABLE, 16 strand (soft black)	48 to * - FL, FLH, FLH-80, Classic

MISCELLANEOUS ELECTRICAL

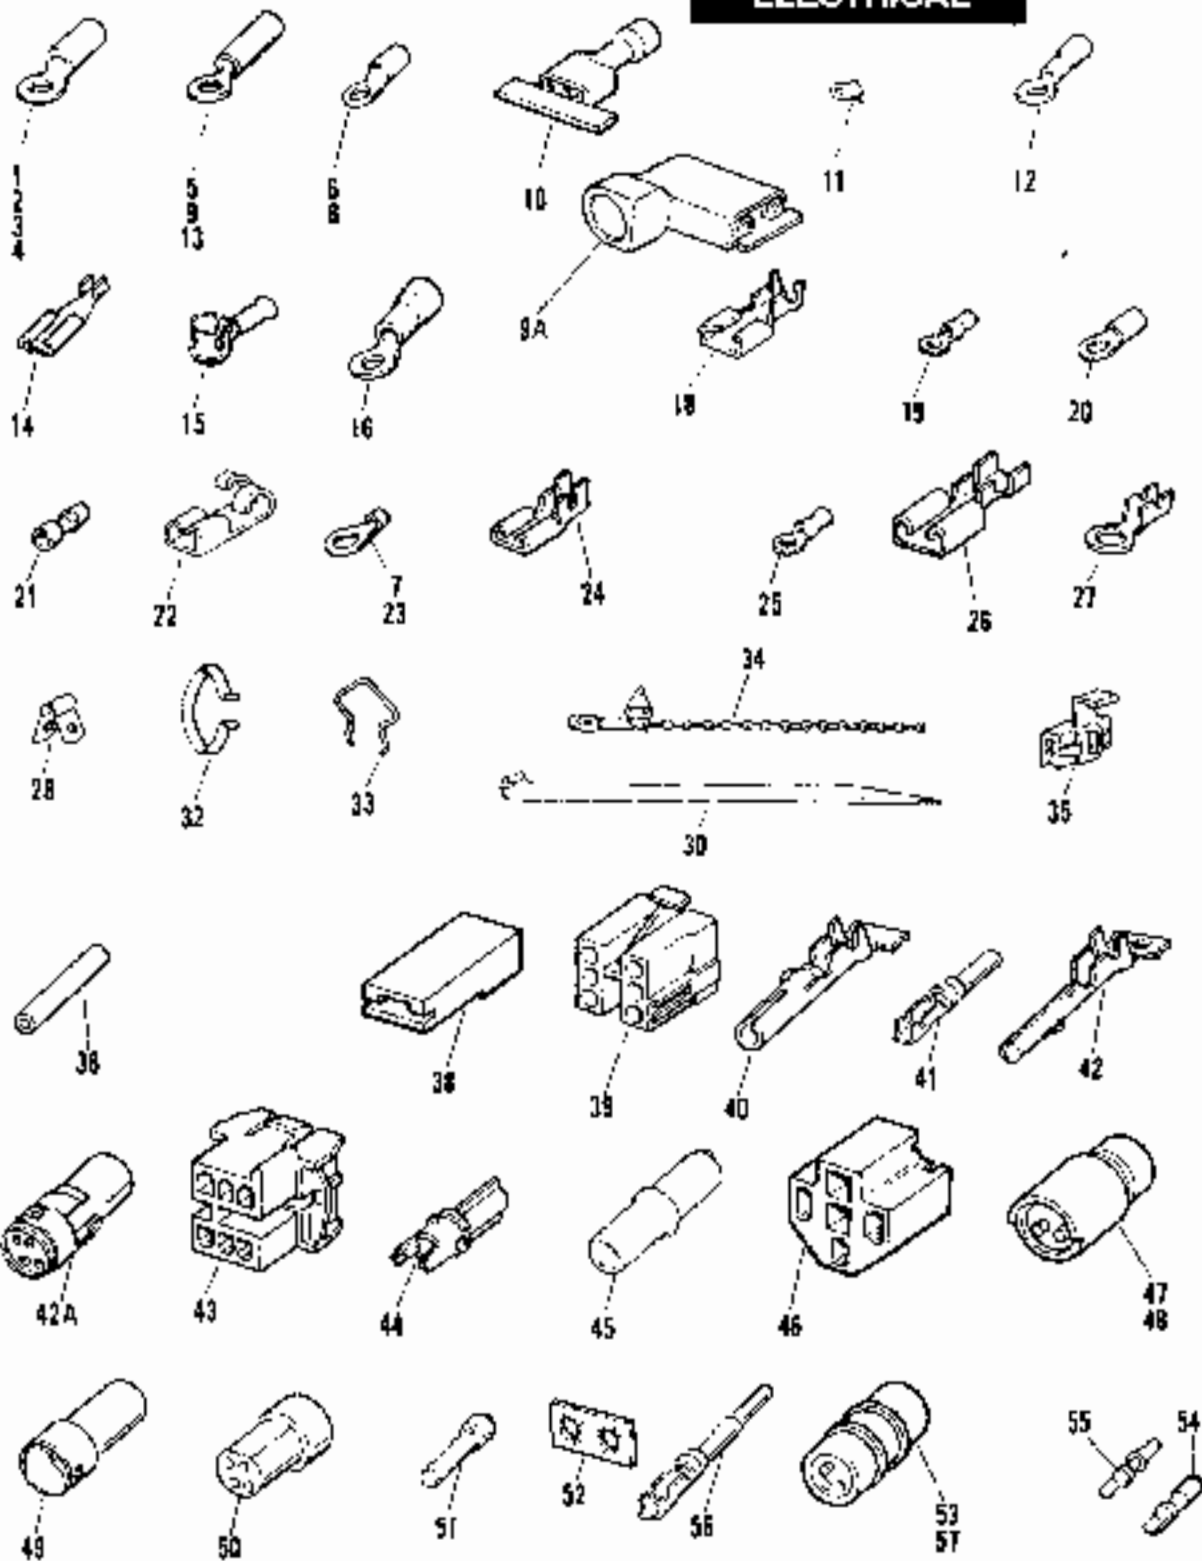

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	9850	WIRE TERMINAL, ring type, No. 5 hole, #15-22 wire	20 to * — FL, FLH, FLH-80, Classic
	2	9851	WIRE TERMINAL, ring type, No. 10 hole, #16-22 wire	19 to * — FL, FLH, FLH-80, Classic
	3	9852	WIRE TERMINAL, ring type, 1.4 dia. hole, #16-22 wire	79 to * — FL, FLH, FLH-80, Classic
	4	9853	WIRE TERMINAL, ring type, 1.4 dia. hole, #10-22 wire	76 & 79 — FL, FLH, FLH-80, Classic
	5	9854	WIRE TERMINAL, ring type, 1.4 dia. hole, #14-18 wire	78 to * — FL, FLH, FLH-80, Classic
	6	9855	WIRE TERMINAL, ring type, 1.4 dia. hole, #14-16 wire	76 to * — FL, FLH, FLH-80, Classic
	7	9855	WIRE TERMINAL, ring type, No. 10 hole, #13-12 wire	80 to * — FL, FLH, FLH-80, Classic
	8	9856	WIRE TERMINAL, ring type, 3/16 dia. hole, #10-12 wire	76 & 79 — FL, FLH, FLH-80, Classic
	9	9871	WIRE TERMINAL, ring type, No. 6 dia. hole, #14-18 wire	74 to * — FL, FLH, FLH-80, Classic
	3A	9898	WIRE TERMINAL, female spade type, crimpless — #14-16 wire	70 to * — FL, FLH, FLH-80, Classic
	10	9900	CONNECTOR, wire	90 to * — FL, FLH, FLH-80, Classic
	11	9901	WIRE TERMINAL, ring type, 5/32 dia. hole, #14-16 wire	N/A
	12	9902	WIRE TERMINAL, ring type, 3/16 dia. hole, #14-16 wire	48 to 64 — FL, FLH, FLH-80, Classic
	13	9903	WIRE TERMINAL, ring type, 1.6 dia. hole, #16-22 wire	40 to * — FL, FLH, FLH-80, Classic
	14	9904	WIRE TERMINAL, female spade type, 1/8 slot — #15-20 wire	48 to * — FL, FLH, FLH-80, Classic
	15	9905	WIRE TERMINAL, 1/4 dia. cap type, #16-22 wire	49 to * — FL, FLH, FLH-80, Classic
	16	9906	WIRE TERMINAL, ring type, 3/16 dia. hole, #10-12 wire	N/A
	18	9914	WIRE TERMINAL, female spade type, 1/4 slot #14-18 wire	46 to * — FL, FLH, FLH-80, Classic
	19	9916	WIRE TERMINAL, ring type, 1.4 dia. hole, #14-16 wire	48 to * — FL, FLH, FLH-80, Classic
	21	9924	WIRE TERMINAL, round plug type	N/A
	22	9925	WIRE TERMINAL, female spade type, 1/4 slot — #16-18 wire	48 to 70 — FL, FLH, FLH-80
	24	9931	WIRE TERMINAL, female spade type, 3/16 slot — #10-20 wire	48 to 80 — FL, FLH, FLH-80, Classic
	25	9932	WIRE TERMINAL, ring type, 3/16 dia. hole, #18-22 wire	48 to 79 — FL, FLH, FLH-80
	26	9932	WIRE TERMINAL, female spade type, 1/4 slot — #14-18 wire	80 to * — FL, FLH, FLH-80, Classic
	27	9945	WIRE TERMINAL, ring type, 3/16 dia. hole, #10-12 wire	48 to * — FL, FLH, FLH-80, Classic
	28	9957	WIRE CLIP, spark coil	Late 50 to 78 — FL, FLH, FLH-80
	30	10006	PLASTIC STRAP (black)	Late 58 to * — FL, FLH, FLH-80, Classic
		10007	PLASTIC STRAP (white)	late 69 to 72 — FL, FLH
	31	10012	WIRE CLIP, capes to frame	41 to * — FL, FLH, FLH-80, Classic
	32	10365	PLASTIC STRAP (6)	84 to * — FLH-80
	33	50062-73	WIRE CLIP, handlebar wires (4)	72 to 81 — FL, FLH, FLH-80, Classic
		50070-81	WIRE CLIP, handlebar wires (4)	82 & 93 — FLH-80, Classic
		50073-83	WIRE CLIP, handlebar wires (4)	84 to * — FLH-80
	34	70035-70	CABLE STRAP (2)	70 to * — FL, FLH, FLH-80, Classic
	35	70576-85	WIRE CONNECTOR	50 to * — FL, FLH, FLH-80, Classic


MISCELLANEOUS ELECTRICAL

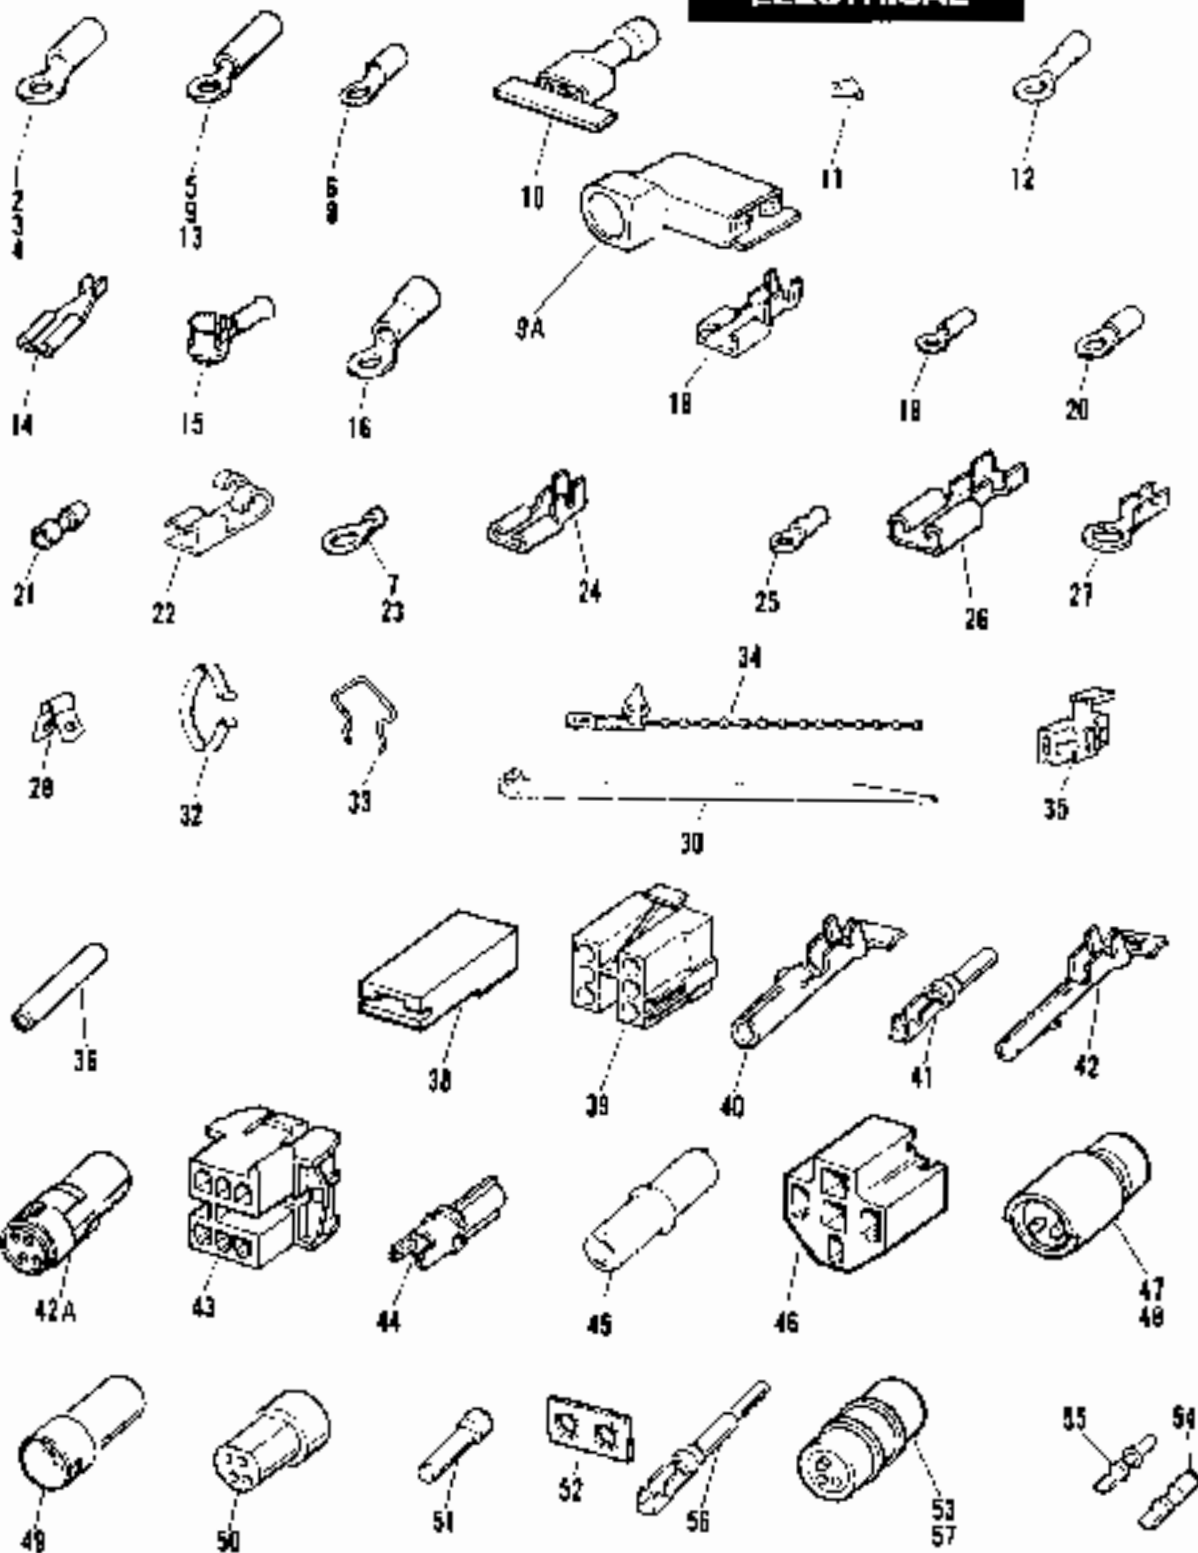

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	31	72051-73	CONNECTOR, hood cable, 2, 6, 9, 10, 11	73 to 82 - Class 84 - CLE
	32	72052-75	CONNECTOR, six socket	78 to 81 - FL, FLH, FLH-80, Classic
	40	72058-77	SOCKET, single pin	72 to 81 - FL, FLH, FLH-80, Classic
	41	72059-80	CONNECTOR, 2, 4, single pin	Like 82 & 83 - CLE
	42	72060-79	FL, single socket	73 to 81 - FL, FLH, FLH-80, Classic
	42A	72060-80	SOCKET, four terminal	Like 82 & 83 - CLE
	43	72061-78	CONNECTOR, six pin	79 to 81 - FL, FLH, FLH-80, Classic
	44	72064-77	DAVE VECTOR, 4 terminal	73 to 81 - FL, FLH, FLH-80, Classic
	45	72064-78	CONNECTOR, single socket	73 & 74 - FL, FLH
				78 to 81 - FL, FLH, FLH-80, Classic
	46	72046-79	CONNECTOR, starter relay, 4 terminal, 4-pin terminals bracket wiring harness	90 to 91 - FL, FLH, FLH-80, Classic
	47	72091-77	CONNECTOR, three socket (5 data)	75 to 82 - Classic
	48	72053-79	CAP, wiring protection, used when a data is removed	79 to 82 - Classic
		72057-84	CAP, wiring protection, used when a data is removed	84 to 85 - CLE
	49	72054-82	SOCKET, four terminal	83 - FL
		72054-84	SOCKET, four terminal	84 to 85 - CLE
	50	72055-82	CAP, wiring protection, includes a 2-pin, 40 & 41	83 - CLE
	51	72056-82	PLUG, wiring (plastic) 40	83 - CLE
	52	72275-74	CONNECTOR, ABS, two terminal (5)	75 to 82 Only 90 - FL, FLH, FLH-80, Classic
	53	74571-77	CONNECTOR, am and socket	90 to 92 - FL, FLH, FLH-80, Classic
	54	74536-77A	SOCKET, wiring harness	79 to 92 - FL, FLH, FLH-80, Classic, 84 to 85 - CLE
	55	74539-77A	MIN, wiring harness	79 to 92 - FL, FLH, FLH-80, Classic, 84 to 85 - CLE
	56	74538-83	PIN, single socket	83 - CLE
	57	90771-79	PLUG, four terminal wiring harness (King Tom Post)	79 to 82 - FL, FLH, FLH-80, Classic

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2508	SCREW, No. 10-32 x 3/16 hex socket hd (4)	82 to * — FLH-90, Classic
	2	2528	WIRE TERMINAL, insulated (2)	82 to * — FLH-80, Classic
	2A	10307	STRAP switch ring (2)	94 to * — FLH-80
	3	11156	SNAP RING (another screw)	82 to * — FLH-80, Classic
	3A	55070-81	RETAINER, wiring harness to handlebar (4)	92 & 93 — FLH-90, Classic
		55073-82	RETAINER, wiring harness to handlebar (4)	94 to * — FLH-80
	4	55094-74	SPRING, adjusting screw	82 to * — FLH-80, Classic
	5	55096-74	SPRING, grip	82 to * — FLH-80, Classic
	6	55097-74C	KIT, throttle adjusting screw, includes items 3, 4 & 5A	82 to * — FLH-80, Classic
	6A	55102-83A	SCREW, throttle adjusting	82 to * — FLH-80, Classic
	7	70047-82	WIRE ASSEMBLY, 5 lg (white)	82 to * — FLH-80, Classic
	8	70082-82	WIRE ASSEMBLY, 3 lg (orange)	82 to * — FLH-80, Classic
	9	70218-82	SWITCH-KIT, left — complete	82 & 83 — FLH-80, Classic
		70218-84	SWITCH-KIT, left — complete	84 to * — FLH-80
	10	70219-82	SWITCH-KIT, right — complete	82 & 83 — FLH-80, Classic
		70219-84	SWITCH-KIT, right — complete	84 to * — FLH-80
	12	71560-82A	HOUSING, lower, right	82 to * — FLH-80, Classic
	13	71564-82	HOUSING, upper, right	82 to * — FLH-80, Classic
	14	71567-82	HOUSING, upper, left	82 to * — FLH-80, Classic
	15	71568-82A	HOUSING, lower, left	82 to * — FLH-80, Classic
	16	71570-82	SWITCH ASSEMBLY, with terminals, left directional	82 to * — FLH-80, Classic
	17	71571-82	SWITCH ASSEMBLY, with terminals, engine stop/start	82 to * — FLH-80, Classic
	18	71572-82	SWITCH ASSEMBLY, with terminals, right directional	82 to * — FLH-80, Classic
	19	71573-82A	SWITCH ASSEMBLY, with terminals & wiring, starter & horn	82 to * — FLH-80, Classic
	20	71574-82	STOPLIGHT SWITCH, with terminals & wiring	82 to * — FLH-80, Classic
	21	77039-71	PIN, single socket (1/2)	82 to * — FLH-80, Classic
		77042-71	CONNECTOR, single pin	82 to * — FLH-80, Classic

HANDLEBAR SWITCHES 1972 TO 1981

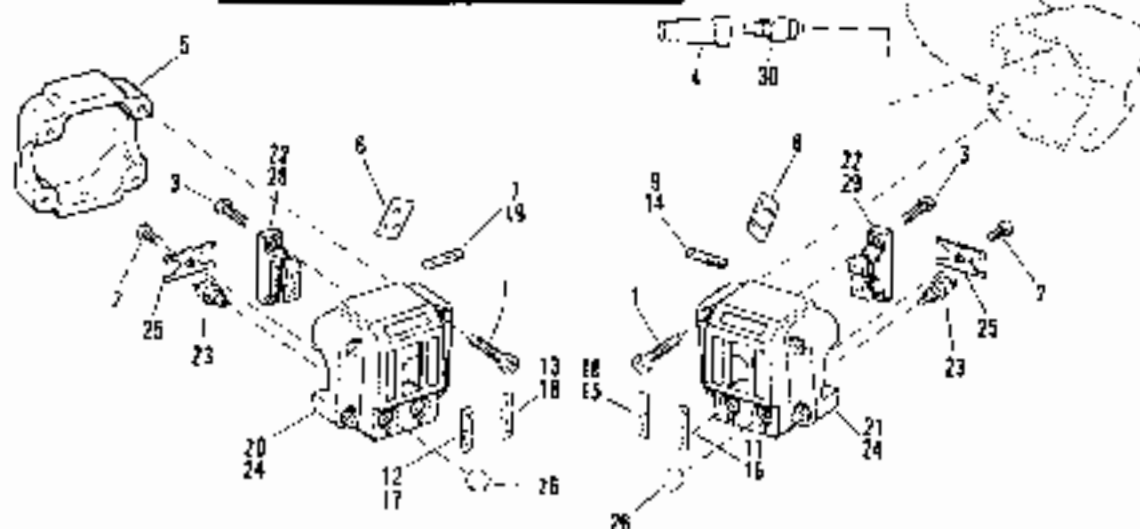


HANDLEBAR SWITCHES — 1972 TO 1981

A85

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2699W	SCREW, No. 10-24 x 1-1/8 Posi-drive fl. hd. (8)	72 to 81 — FL, FLH, FLH-80, Classic
	2	2800W	SCREW, No. 5-32 x 1/4 Phillips hd. (2)	72 to 81 — FL, FLH, FLH-80, Classic
	3	2804W	SCREW, No. 5-32 x 1/2 Phillips hd. (2)	72 to 81 — FL, FLH, FLH-80, Classic
	4	2775-69P	RUBBER CAP, front stoplight switch	72 to 81 — FL, FLH, FLH-80, Classic
	5	3362E-72	CLAMP, left handlebar switch (handshift only)	N/A 72 to 78 — FL, FLH, FLH-80
	5	46901-73	LABEL, dimmer switch	N/A 73 & 74 — FL, FLH
	7	46901-75	LABEL, lights	N/A 75 & 76 — FL, FLH
	8	46902-73	LABEL, engine stop switch	N/A 73 & 74 — FL, FLH
	9	46902-75	LABEL, engine stop	N/A 75 & 76 — FL, FLH
	10	46903-75	LABEL, start	75 & 76 — FL, FLH
	11	46904-75	LABEL, turn — R	N/A 75 & 76 — FL, FLH
	12	46905-75	LABEL, turn — L	75 & 76 — FL, FLH
	13	46906-75	LABEL, horn	75 & 76 — FL, FLH
	14	46907-77	LABEL, engine stop	77 to 81 — FL, FLH, FLH-80, Classic
	15	46908-77	LABEL, start	77 to 81 — FL, FLH, FLH-80, Classic
	16	46909-77	LABEL, turn — R	77 to 81 — FL, FLH, FLH-80, Classic
	17	46910-77	LABEL, turn — L	77 to 81 — FL, FLH, FLH-80, Classic
	18	46911-77	LABEL, horn	77 to 81 — FL, FLH, FLH-80, Classic
	19	46912-77	LABEL, lights	77 to 81 — FL, FLH, FLH-80, Classic
		70022-72	WIRING HARNESS, left handlebar switch	N/A 72 to 74 — FL, FLH
		70023-75	WIRING HARNESS, left handlebar switch	75 to 81 — FL, FLH, FLH-80, Classic
		70024-73	WIRING HARNESS, right handlebar switch	N/A 73 & 74 — FL, FLH
		70024-75	WIRING HARNESS, right handlebar switch	75 to 81 — FL, FLH, FLH-80, Classic
	20	70051-72A	SWITCH ASSEMBLY, complete — left handlebar	72 to 81 — FL, FLH, FLH-80, Classic
	21	70054-73A	SWITCH ASSEMBLY, complete — right handlebar	72 to 81 — FL, FLH, FLH-80, Classic
	22	71482-72	ROCKER SWITCH (2)	72 to 74 — FL, FLH
	23	71484-72A	BUTTON SWITCHES (4)	72 to 81 — FL, FLH, FLH-80, Classic
	24	71519-75	HOUSING, handlebar switches (vertical rocker switch) (2)	72 to 81 — FL, FLH, FLH-80, Classic
	25	71533-72	RETAINER, button switches (2)	72 to 81 — FL, FLH, FLH-80, Classic
	26	71534-72	BUTTON CAP, switch — horn (2)	72 to 81 — FL, FLH, FLH-80, Classic
	28	71546-75A	ROCKER SWITCH (UP — LOW)	75 to 81 — FL, FLH, FLH-80, Classic
	29	71547-75A	ROCKER SWITCH (ON — OFF)	75 to 81 — FL, FLH, FLH-80, Classic
	30	72001-89B	STOPLIGHT SWITCH, front brake	72 to 81 — FL, FLH, FLH-80, Classic


HANDLEBAR SWITCHES 1971 & EARLIER

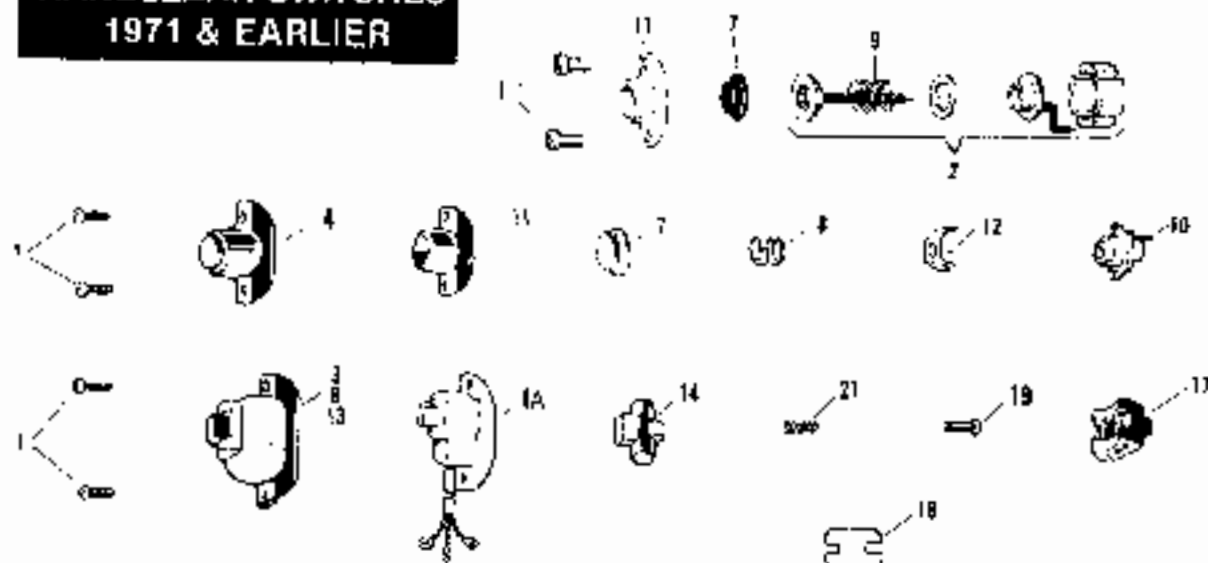


HANDLEBAR SWITCHES — 1971 & EARLIER

A86


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2594	SCREW, No. 8-32 x 1/4 Pozidriv pan hd. (2)	41 to 71 — FL, FLH
	1A	70056-50B	HANDLEBAR SWITCH, with wires — 3 wire... .. N/A	Late 60 to 69 — FL, FLH
			Consists of bezel, housing & wiring items 14, 18 & 21	
	2	70059-66	BUTTON SWITCH REPAIR KIT, 2 wire... .. N/A	66 to 71 — FL, FLH
	3	70060-29	HANDLEBAR SWITCH, with wires — 2 wire... .. N/A	41 to 71 — FL, FLH
	4	70060-65	BUTTON SWITCH ASSEMBLY... .. N/A	65 to 69 — FL, FLH
		70060-73	BUTTON SWITCH, horn and starter (2)	70 & 71 — FL, FLH
	5	71800-25A	BUTTON SWITCH ASSEMBLY... .. N/A	41 to 64 — FL, FLH
	7	71802-25A	BUTTON, horn & starter switch... .. N/A	41 to 71 — FL, FLH
	8	71804-25	SPRING, horn switch... .. N/A	41 to 64 — FL, FLH
	9	71804-65	SPRING, horn and starter switch... .. N/A	65 to 71 — FL, FLH
	10	71806-65	WIRE TERMINAL... .. N/A	41 to 64 — FL, FLH
	11	71811-26	HOUSING, horn and starter switch... .. N/A	41 to 71 — FL, FLH
	12	71812-26	CONTACT, horn switch... .. N/A	41 to 64 — FL, FLH
	13	71840-29	HANDLEBAR LIGHT SWITCH, 2-wire, less wire... .. N/A	41 to 69 — FL, FLH
	14	71842-29	LEVER, light switch... .. N/A	41 to 71 — FL, FLH
	17	71851-29	CONTACT BLOCK, light switch... .. N/A	41 to 71 — FL, FLH
	18	71855-61	PLATE, light switch contact retainer block... .. N/A	64 to Early 69
				Late 61 to 71 — FL, FLH
	19	71855-25	FLH light switch contact — two position... .. N/A	41 to 71 — FL, FLH
		71855-38A	FLH light switch contact — three position... .. N/A	41 to 71 — FL, FLH
	21	71861-29	SPRING, light switch contact pin... .. N/A	41 to 71 — FL, FLH

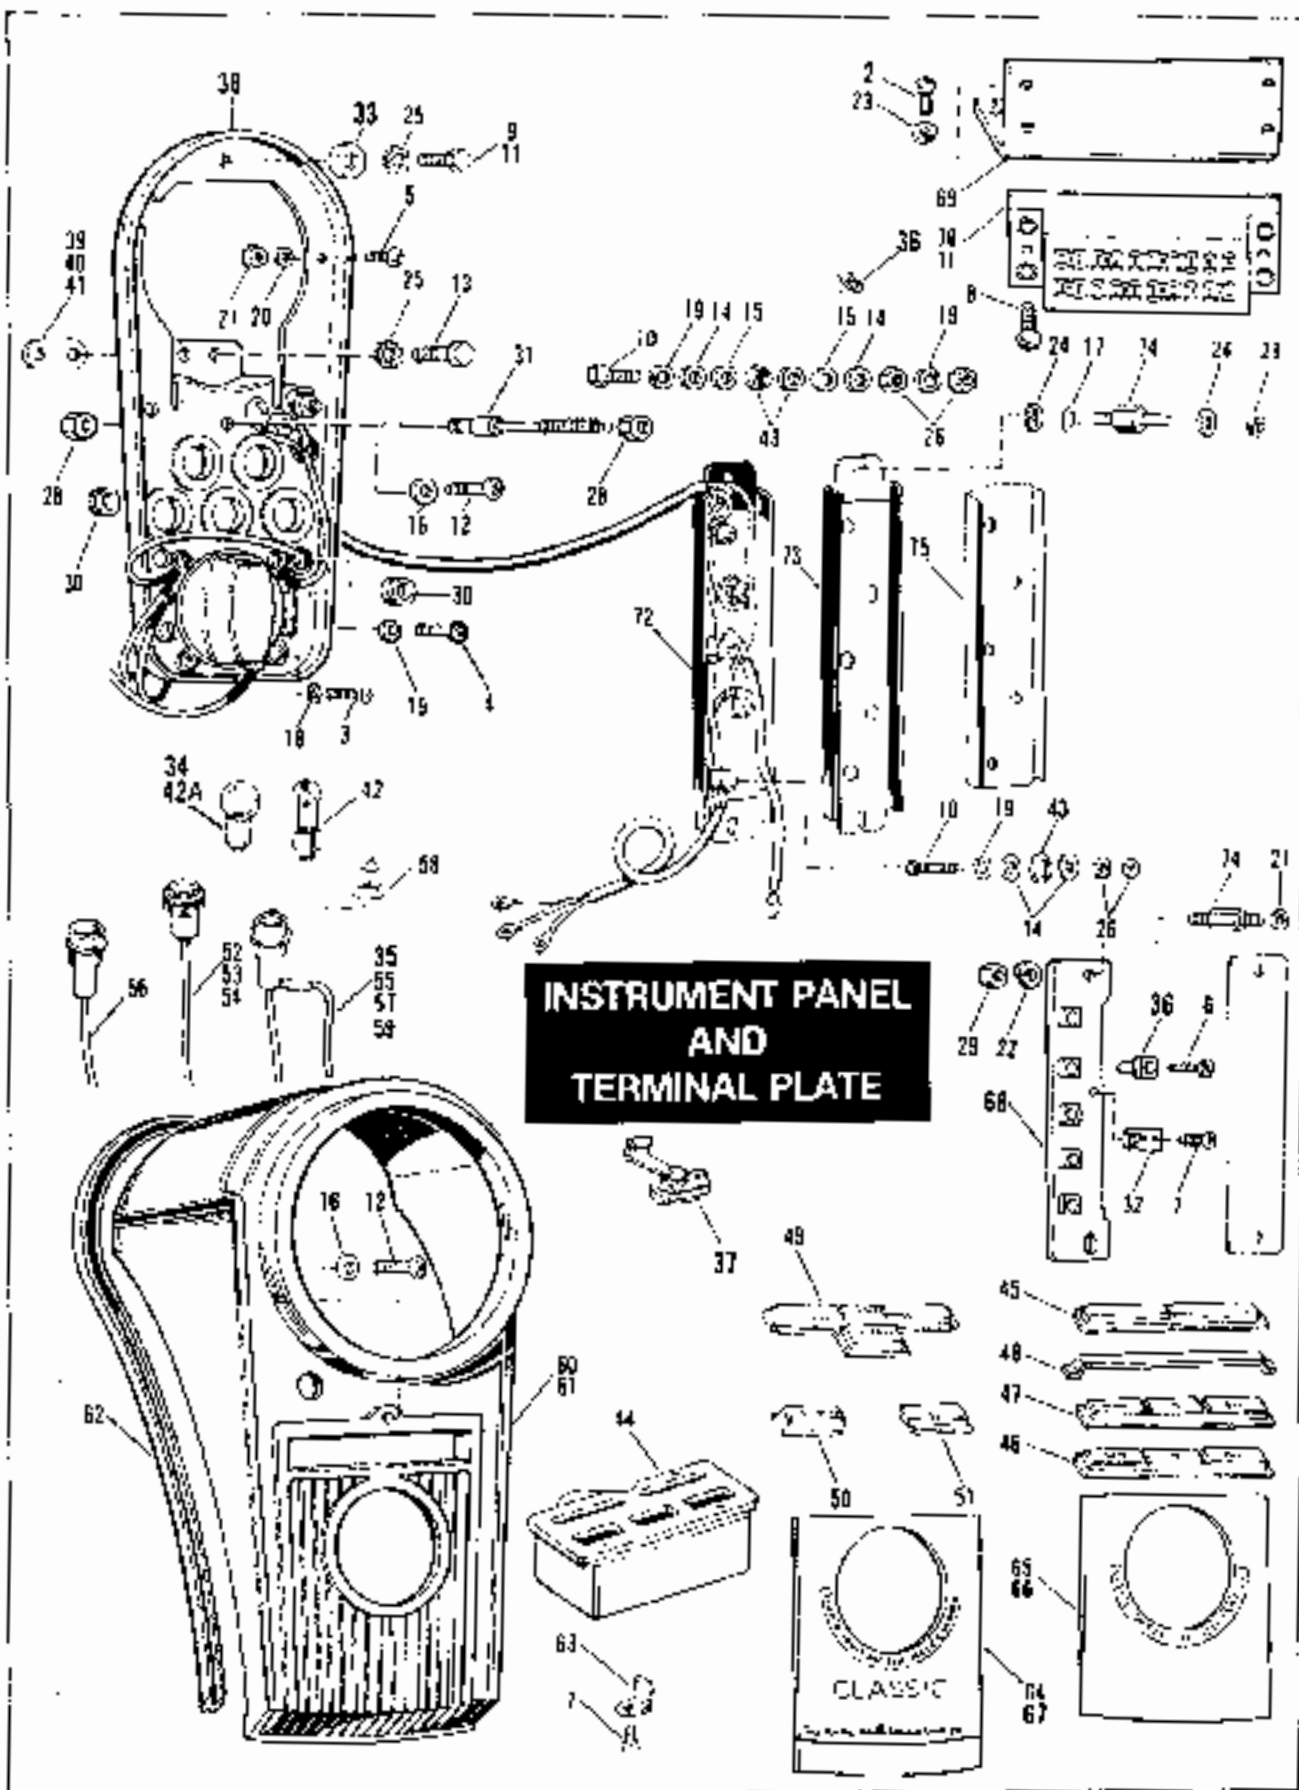

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	2	2585	SCREW, No. 0-32 x 3/8 Posi-drive pan hd (2)	70 to * - FL, FLH, FLH-80, Classic
	3	2589	SCREW, No. 0-32 x 1/4 Posi-drive pan hd (5)	71 to 73 & 75 - FL, FLH
	4	2594	SCREW, No. 0-32 x 1/4 Posi-drive pan hd (4)	80 to * - FL, FLH, FLH-80, Classic
	5	2598	SCREW, No. 12-24 x 5/8 Posi-drive pan hd (2)	47 to 76 - FL, FLH
	6	2623W	SCREW, No. 8-16 x 3/8 self-tapping pan hd (10)	70 to 77 - FL, FLH
	7	2630W	SCREW, No. 8-32 x 5/16 self-tapping d. hd (3 - 77 & 78 to)	58 to * - FL, FLH, FLH-80, Classic
	8	2750	SCREW, No. 8-32 x 3/4 self-tapping d. hd (4)	70 to 81 - FL, FLH, FLH-80, Classic
		2779	SCREW, No. 8-32 x 1/2 self-tapping pan hd (4)	82 to * - FLH-80, Classic
	9	2862W	BOLT, 5/16-18 x 1/8 hex hd	53 to * - FL, FLH, FLH-80, Classic
	10	3491	SCREW, No. 0-32 x 5/8 hex hd (4)	48 to 60 - FL, FLH
	11	3952	BOLT, 5/16-18 x 7/16 hex hd (3)	N/A 56 to 67 - FL, FLH
	12	3983W	SCREW, 1/4-20 x 1-3/4 Phil. pos. hd	N/A 58 to 70 - FL, FLH
	13	3987	BOLT, 5/16-18 x 3/4 hex hd (2)	55 to * - FL, FLH, FLH-80, Classic
	14	5182W	WASHER, 3/16 x 7/16 x 1/32 (6)	48 to 60 - FL, FLH
	15	5185	WASHER, 3/16 x 1/2 x 1/16 (8)	48 to 69 - FL, FLH
	16	8220W	WASHER, 1/4 x 7/16 x 1/32	58 & 60 - FL, FLH
	17	5192	WASHER, 5/16 x 11/16 x 1/16 (3s req'd)	48 to 69 - FL, FLH
	18	7010	LOCKWASHER, No. 6 (6)	Late 70 to * - FL, FLH, FLH-80, Classic
	19	7015	LOCKWASHER, No. 8 (4)	48 to 69 - FL, FLH
				90 to * - FL, FLH, FLH-80, Classic
	20	7030W	LOCKWASHER, No. 12 (2)	47 to 76 - FL, FLH
	21	7036	LOCKWASHER, 3-11 (3)	79 to * - FL, FLH, FLH-80, Classic
	22	7041	LOCKWASHER, 5-1E (2)	70 to 77 - FL, FLH
	23	7069	LOCKWASHER, No. 10 (2)	70 to * - FL, FLH, FLH-80, Classic
	24	7127	LOCKWASHER, 5/16 internal (2)	48 to 69 - FL, FLH
	25	7337	LOCKWASHER, 5/16 external (3)	46 to * - FL, FLH, FLH-80, Classic
	26	7608	NUT, No. 8-32 x 1/4 x 5/16 hex (8)	48 to 55 - FL, FLH
	27	7654W	NUT, No. 12-24 x 5/32 x 7/16 hex (2)	47 to 76 - FL, FLH
	28	7744	NUT, 5/16-24 x 3/16 x 1/2 hex (2)	80 to * - FL, FLH, FLH-80, Classic
	29	7753	NUT, 5/16-24 x 1/4 x 1/2 hex (2)	48 to * - FL, FLH, FLH-80, Classic
	30	11453	SPRINT, instrument panel (2)	70 to * - FL, FLH, FLH-80, Classic
	31	29213-79	CONTROL CABLE	60 to * - FL, FLH, FLH-80, Classic
	32	39712-68	CLAMP	70 to 77 - FL, FLH
	33	52703-21	SPACER	Late 82 to * - FLH-80, Classic
	34	69462-64	SLB, signal tones - 12 V (3.5 - BU & B2: 4 - 80 & 81)	65 to * - FL, FLH, FLH-80, Classic
	35	68582-75	SOCKET, neutral indicator	73 to * - FL, FLH, FLH-80, Classic
	36	70574-68	EXPANSION NUT, terminal board (4)	70 to 77 - FL, FLH
	37	70576-68	WIRE CONNECTOR	70 to * - FL, FLH, FLH-80, Classic
	38	70935-75	INSTRUMENT PANEL BASE	73 to * - FL, FLH, FLH-80, Classic
	39	71027-68	SPACER - .030 thick	68 to * - FL, FLH, FLH-80, Classic
	40	71028-68	SPACER - .050 thick	68 to * - FL, FLH, FLH-80, Classic
	41	71029-68	SPACER - .120 thick	68 to * - FL, FLH, FLH-80, Classic
	42	71090-64	BULB, speedometer lamp - 12 V	65 to * - FL, FLH, FLH-80, Classic
	42A	71092-68A	BULB, high beam indicator	67 to * - FLH-80
	43	71098-38	INSULATOR, terminal screw (9)	41 to 59 - FL, FLH
	44	71104-68	SUPPORT, indicator lamp lens	68 to * - FL, FLH, FLH-80, Classic
	45	71138-68	LENS, direction lamp	N/A 68 to 74 - FL, FLH
	46	71139-68	LENS, warning lamps	N/A 68 & 69 - FL, FLH
	47	71139-70	LENS, warning lamps	N/A 70 to 74 - FL, FLH
	48	71141-68	REFRACTOR, indicator lamp lens	68 to * - FL, FLH, FLH-80, Classic
	49	71143-75	LENS, direction lamp	75 to * - FL, FLH, FLH-80, Classic
	50	71144-75A	LENS, high beam indicator	75 to * - FL, FLH, FLH-80, Classic

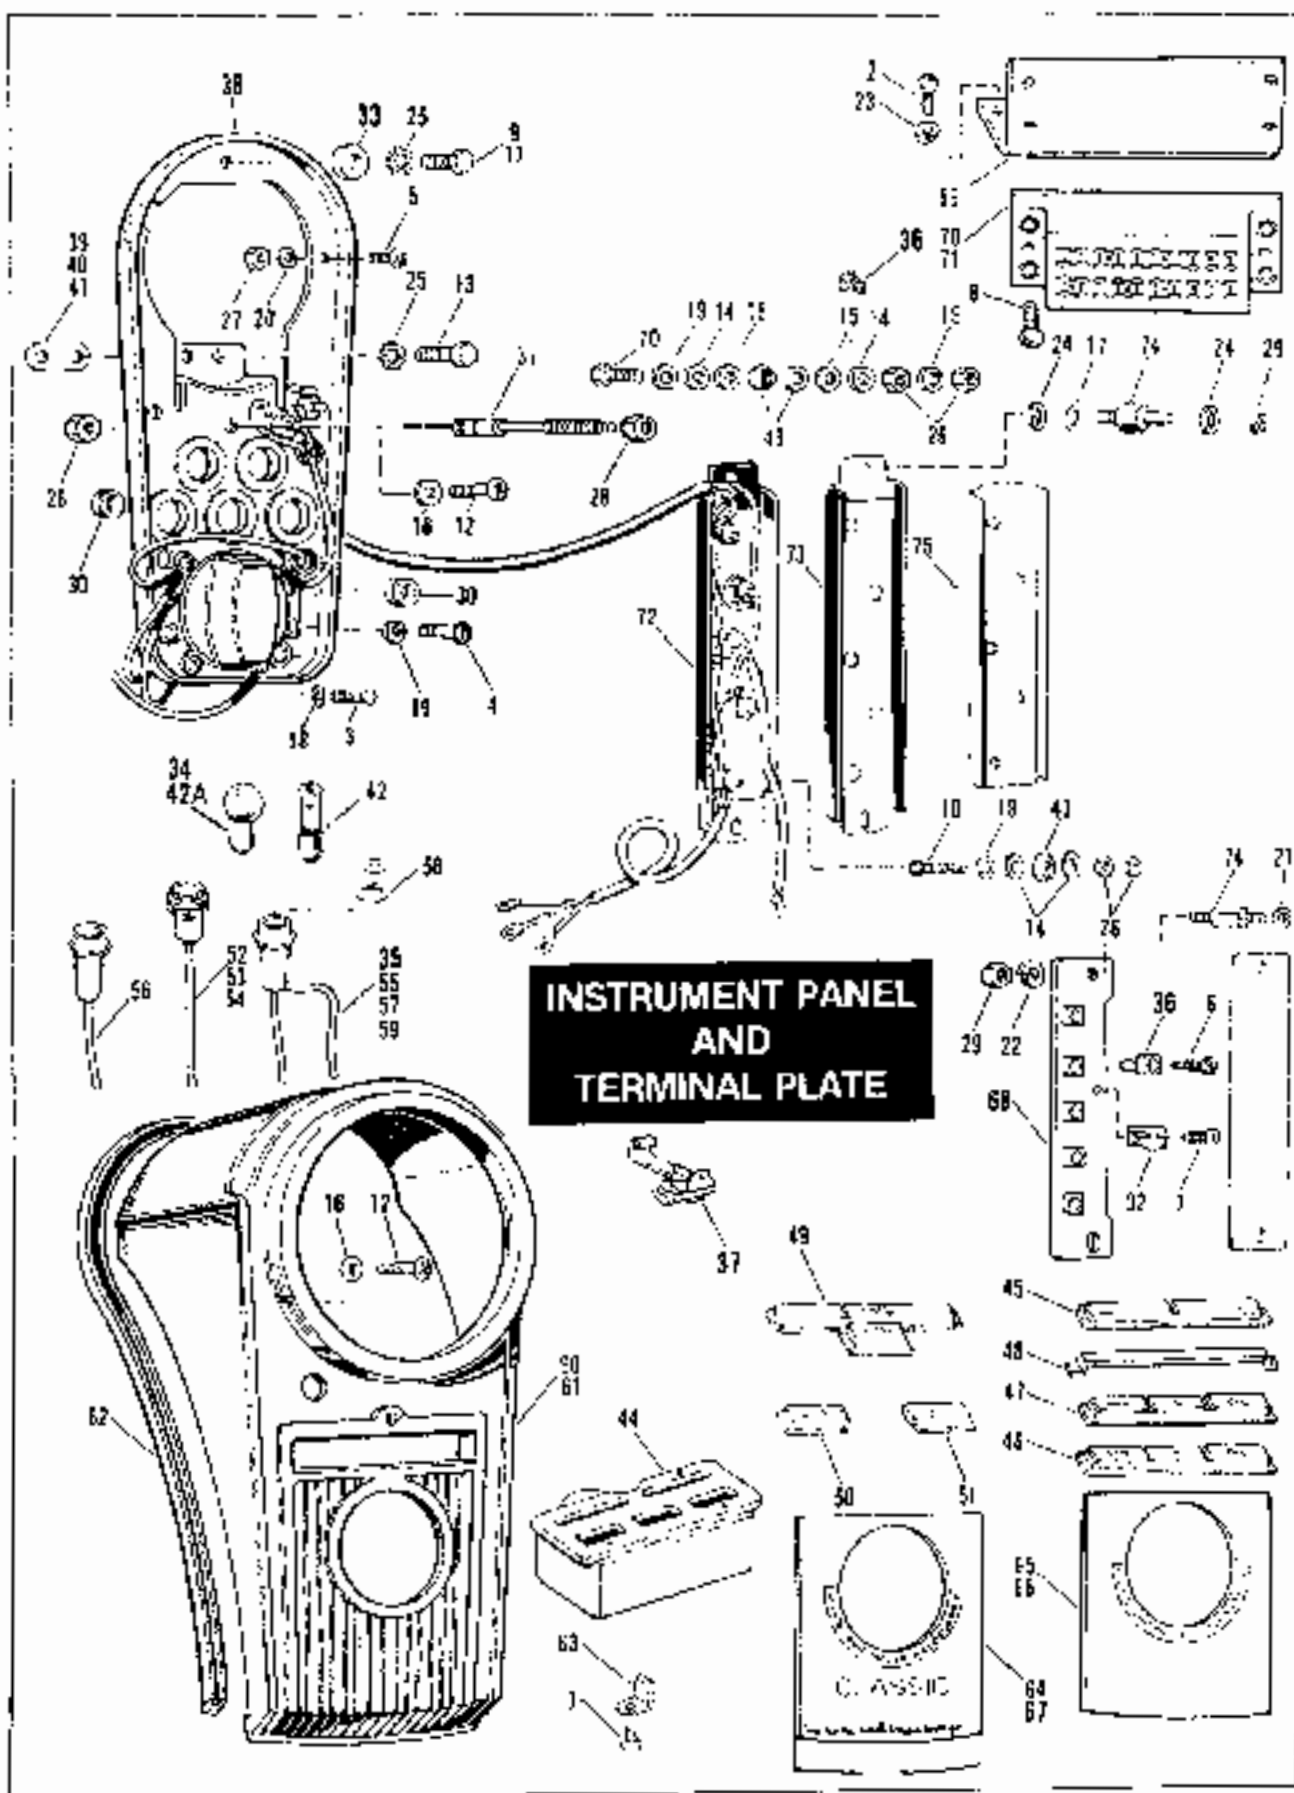


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	81	71145-75	LENS, oil indicator	75 to * FL, FLH, FLH-80 Classic
	82	71151-48	SOCKET, speedometer amp	N/A 48 to 55 - FL, FL-
	83	71151-70	SOCKET, speedometer amp	N/A 70 to 72 FL, FL-
	84	71150-72A	SOCKET, speedometer amp	73 to * - FL, FLH, FLH-80 Classic
	85	71161-70	SOCKET, oil signal lamp	N/A 70 to 72 FL, FL-
	86	71162-70	SOCKET (4; (3 - 1975 & later)	70 to * FL, FLH, FLH-80 Classic
	87	71165-73	SOCKET, oil signal lamp	73 to * - FL, FLH, FLH-80, Classic
	88	71182-47A	WASHER, signal lamp socket	47 to * FL, FLH, FLH-80 Classic
	89	71160-47	WIRE, amp socket (green)	N/A 47 to 54 FL, FLH, FLH-80
	90	71241-58B	COVER, instrument panel (chrome)	68 to * FL, FLH, FLH-80, Classic
	91	71244-58B	COVER, instrument panel (prime)	N/A 68 to 78 - FL, FLH, FLH-80
	92	71255-58	GASKET, instrument panel cover	58 to * FL, FL-, FLH-80, Classic
	93	71287-80	G.I.F. lens support (2)	66 to * - FL, FL-, FLH-80, Classic
	94	71259-79	DECAL, instrument housing cover - "CLASSIC LIGHTS IGNITION," etc. (brown)	79 to 81 Classic
	95	71300-88A	PLATE, ignition switch	68 to 78 FL, FLH, FLH-80
	96	71330-79	DECAL, instrument housing cover - "LIGHTS IGNITION," etc. (aluminum)	79 to * - FL, FLH, FLH-80
	97	71306-82	NAMEPLATE, personalized	82 - Classic
	98	72300-70	TERMINAL PLATE	N/A 70 to 77 FL, FLH
	99	72310-70	BRAKET, terminal block	70 to * FL, FLH, FLH-80, Classic
	70	72311-70	TERMINAL BLOCK	N/A 71 to 72 - FL, FL-
	71	72312-73	TERMINAL BLOCK	73 to * - FL, FLH, FLH-80 Classic
	72	72325-48	TERMINAL BDY.	N/A 48 to 69 FL, FL-
	73	72335-43	COVER, terminal box	N/A 48 to 69 - FL, FLH
	74	72341-56A	STUD, terminal box and terminal plate (2)	56 to * - FL, FLH, FLH-80 Classic
	75	72346-48	INSULATOR, terminal box	N/A 48 to 59 - FL, FLH

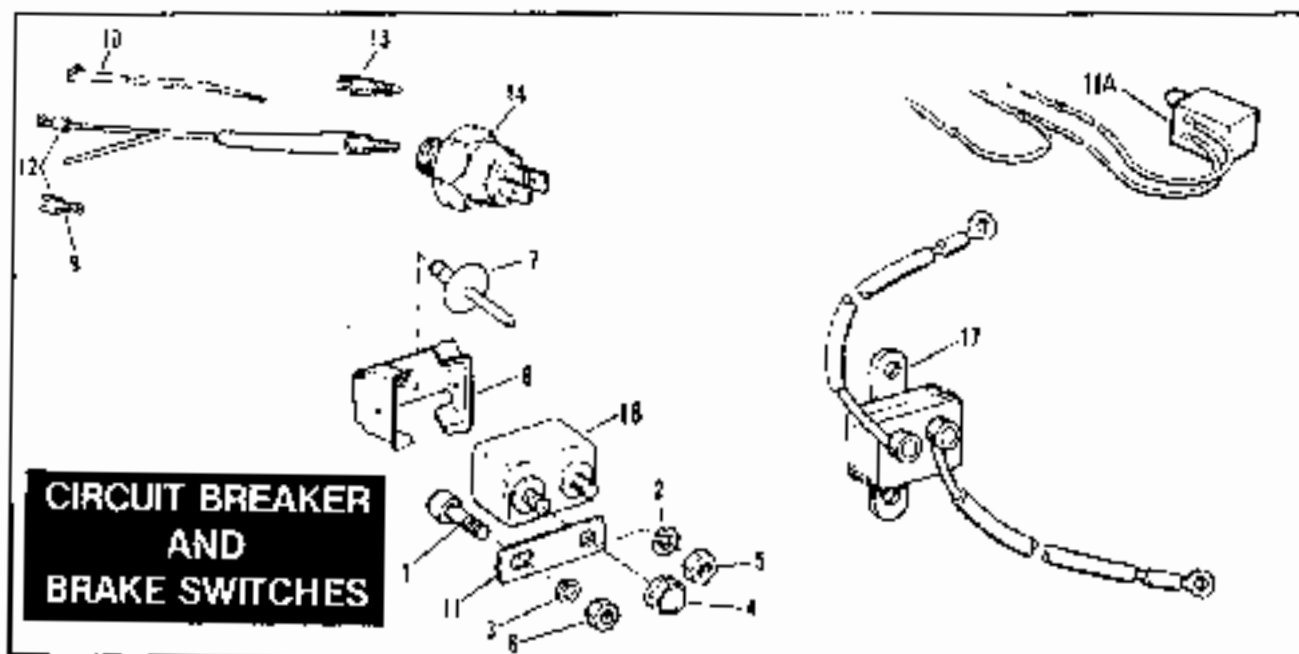

CIRCUIT BREAKER AND BRAKE SWITCHES

A88


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	3787	SCREW, 1/4-20 x 3/4 hex hd	78 to * - FL, FLH, FLH-80, Classic
	2	7060	LOCKWASHER, No. 13 (6)	78 to * - FL, FLH, FLH-80, Classic
	3	722377	LOCKWASHER, 1/4 internal tooth	78 to * - FL, FLH, FLH-80, Classic
	4	7602	ACORN NUT, No. 13-32 ny on St	1 to 74 to * - FL, FLH, FLH-80, Classic
	5	7639	NUT, No. 10-32 x 1/8 x 3/8 (E)	73 to * - FL, FLH, FLH-80, Classic
	6	7688	NUT, 1/4-20 x 7/32 x 7/16 hex	78 to * - FL, FLH, FLH-80, Classic
	7	8480	PDP RIVET, circuit breaker (1 & 13)	73 to * - FL, FLH, FLH-80, Classic
	8	8952	Q.I.P., circuit breaker (3)	73 to * - FL, FLH, FLH-80, Classic
	9	9931	TERMINAL, brake light switch	70 to * - FL, FLH, FLH-80, Classic
	10	10007	CABLE STRAP, switch cable to handlebar (2)	Last 89 to 79 - FL, FLH, FLH-80, Classic
	11	00993-77	CONNECTOR BAR, circuit breaker to battery	71 to * - FL, FLH, FLH-80, Classic
	11A	71574-82	STOPLIGHT SWITCH, w/ terminals & wiring	82 to * - FL-80, Classic
	12	71900-70	STOPLIGHT SWITCH, front, with terminals	1 to 59 to 71 - FL, FLH
	13	72001-896	STOPLIGHT SWITCH, rear	72 to 81 - FL, FLH, FLH-80, Classic
	14	72023-51A	STOPLIGHT SWITCH, rear - includes 9888 TERMINAL	51 to * - FL, FLH, FLH-80, Classic
	15	7458E-70	CIRCUIT BREAKER, only	71 to 72 - FL, FLH
	16	7458-73	CIRCUIT BREAKER (3)	73 to * - FL, FLH, FLH-80, Classic
		74599-77A	CIRCUIT BREAKER, battery	76 to * - FL, FLH, FLH-80, Classic

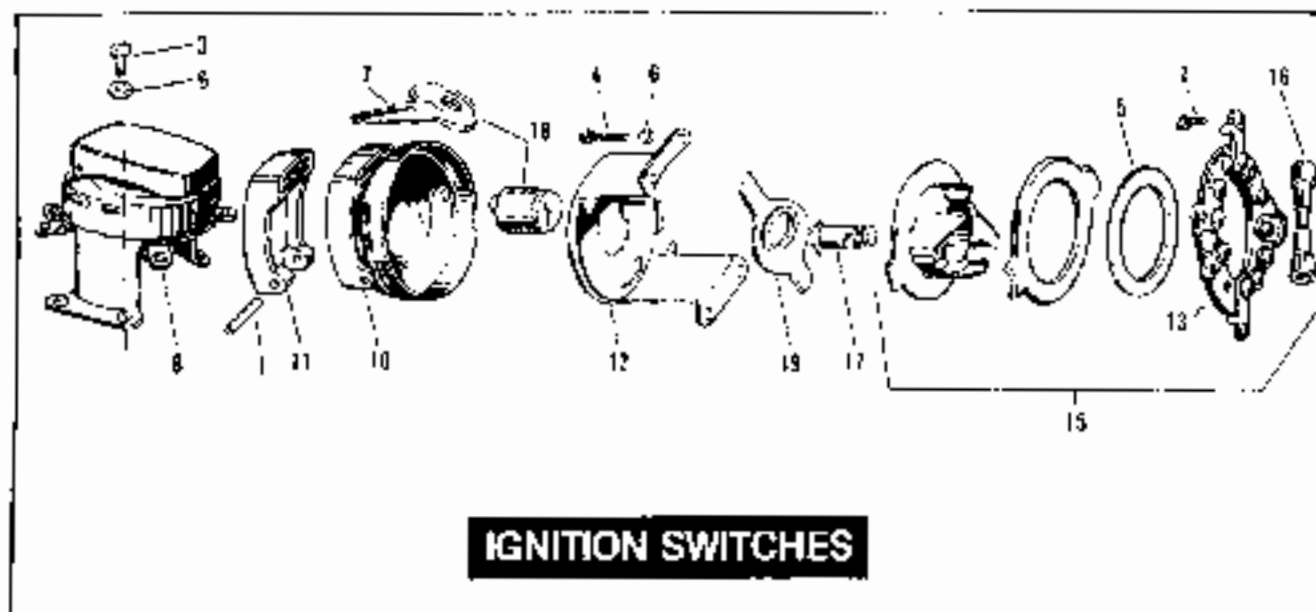

IGNITION SWITCHES


A89

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	612	ROLL PIN, keyhole cover	48 to * — FL, FLH, FLH-80, Classic
	2	2694	SCREW, No. 8-32 x 1/4 (See note paragraph 4)	80 to * — FL, FLH, FLH-80, Classic
	4	2675	SCREW, No. 8-32 x 5/8 (See note paragraph 4)	41 to * — FL, FLH, FLH-80, Classic
	5	6730	WASHER, 1 x 1-11/16 x 1/32 (See note)	152 to 76 to * — FL, FLH, FLH-80, Classic
	6	7015	LOCKWASHER, No. 8 (4, 8 — 90 & later)	41 to * — FL, FLH, FLH-80, Classic
	7	4915-30	KEY, ignition switch (specify letter and number of lock) (2)	N/A 48 to 84 — FL, FLH, FLH-80, Classic
	8	71503-36A	IGNITION AND LIGHT SWITCH, with lock	N/A 49 to 72 — FL, FLH
		71501-73A	IGNITION AND LIGHT SWITCH, with lock	70 to * — FL, FLH, FLH-80, Classic
	10	71506-36A	SWITCH COVER	41 to * — FL, FLH, FLH-80, Classic
	11	71510-36A	KEYHOLE COVER, with roll pin	41 to * — FL, FLH, FLH-80, Classic
	12	71516-36	SWITCH BASE	41 to * — FL, FLH, FLH-80, Classic
	13	71525-36	PLATE, switch mounting	N/A 41 to 72 — FL, FLH
		71541-70	PLATE, switch mounting	73 to * — FL, FLH, FLH-80, Classic
	15	71556-36	CONTACT HOLDER	N/A 41 to 72 — FL, FLH
	16	71560-36	CONTACT ROLLER	41 to * — FL, FLH, FLH-80, Classic
	17	71562-36	RETAINER, contact roller	41 to * — FL, FLH, FLH-80, Classic
	18	71563-36	SWITCH-LOCK AND KEYS	64 to * — FL, FLH, FLH-80, Classic
	19	71567-36	PLATE, switch lock	41 to * — FL, FLH, FLH-80, Classic

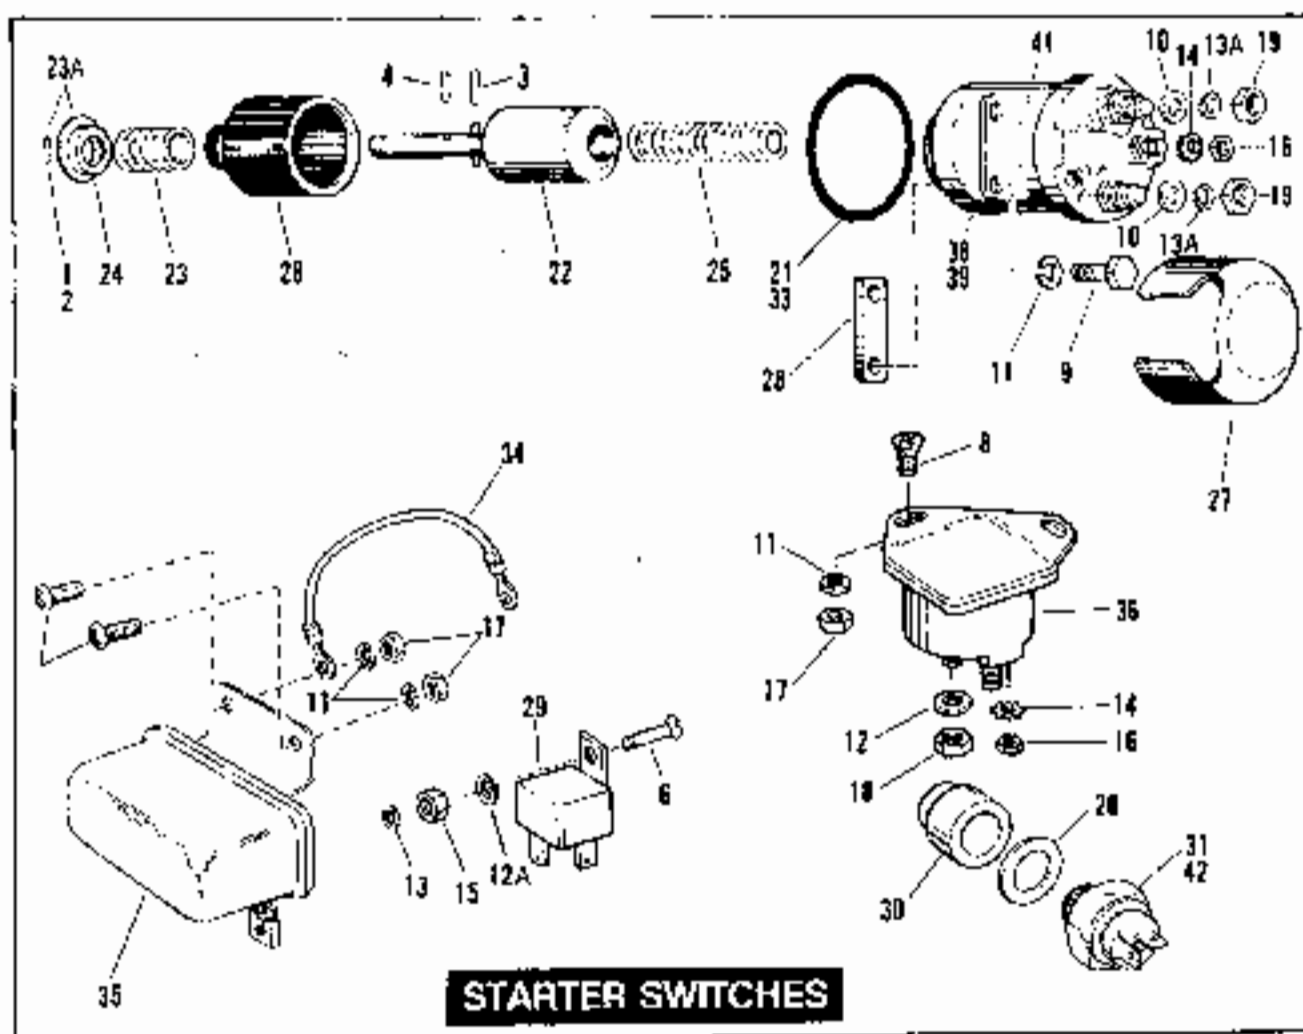


RETAIL PRICE	INDEX NO	PART NO.	NAME	USED ON
	1	257	Pin, 7/16 dia x 3/8 g.	65 to * — FL, FLH, FLH-80, Classic
	3	600	ROLL PIN 1/8 dia x 1 1/2 lg.	65 to * — FL, FLH, FLH-80, Classic
	4	601	ROLL PIN 1/8 dia x 1 1/4 lg.	Late 81 & Early 82 — FLH-80, Classic
		610	ROLL PIN 1/8 dia x 1 1/4 g.	Late 76 to Early 81,
		614	ROLL PIN 1/8 dia x 1 lg.	Late 82 to * — FL, FLH, FLH-80, Classic
	6	784	SCREW, No. 10-24 x 3/4 Pan-drive flat disc head	65 to Early 75 — FL, FLH
	7	2774	SCREW, 1/4-20 x 5/8 hex drive wash. hd. (2)	60 to * — FL, FLH, FLH-80, Classic
	8	2816	SCREW, 1/4-20 x 1/2 Pan-drive disk. hd. (2)	Late 67 to 73 — FL, FLH
	9	2602W	ROD, 1/4-20 x 7/8 hex. hd. (2)	74 to 79 — FL, FLH, FLH-80, Classic
	10	6701	WASHER, 3/8 x 3/16 x 1/16, (2)	65 to * — FL, FLH, FLH-80, Classic
	11	7006	LOCKWASHER, 1/4 (2)	65 to * — FL, FLH, FLH-80, Classic
	12	7045	LOCKWASHER, 5/16 (2)	74 to * — FL, FLH, FLH-80, Classic
	12A	7069	LOCKWASHER, No. 10	79 to * — FL, FLH, FLH-80, Classic
	13	7110	LOCKWASHER, No. 10 internal tooth	82 to * — FLH-80, Classic
	13A	7130W	LOCKWASHER, 3/8 internal tooth (5)	65 to * — FL, FLH, FLH-80, Classic
	14	7220	LOCKWASHER, No. 10 external tooth	65 to * — FL, FLH, FLH-80, Classic
	15	7620W	NUT, No. 13-24 x 1/8 x 3/8 hex	60 to * — FL, FLH, FLH-80, Classic
	16	7632	NUT, No. 13-22 x 1/8 x 3/8 hex	65 to * — FL, FLH, FLH-80, Classic
	17	7682	NUT, 1/4-20 x 1/4 x 1/2 (2)	74 to * — FL, FLH, FLH-80, Classic
	18	7742W	NUT, 5/16-18 x 1/4 x 1/2 hex (2)	74 to 79 — FL, FLH, FLH-80, Classic
	19	7780	NUT, 5/16-18 x 5/16 x 9/16 hex. (2)	65 to * — FL, FLH, FLH-80, Classic
	20	75911-11	WASHER, transmission neutral switch (fiber) (as req'd)	65 to Early 79 — FL, FLH, FLH-80, Classic
	21	27060-55	CH. NO. solenoid mounting	65 & Early 84 — FLH-80
	22	31435-65B	PLUNGER ASSEMBLY, solenoid	65 to * — FL, FLH, FLH-80, Classic
	23	31438-65A	COVER-PIN SPRING	65 to * — FL, FLH, FLH-80, Classic
	23A	31429-65A	RETAINER KIT w/ #1 & 24	65 to * — FL, FLH, FLH-80, Classic
	24	31439-84	RETAINER, over-run spring	65 to * — FL, FLH, FLH-80, Classic
	25	31440-65	RETURN SPRING plunger	65 to * — FL, FLH, FLH-80, Classic
	26	31441-65A	BOGT, solenoid plunger (rubber)	65 to * — FL, FLH, FLH-80, Classic
	27	31444-65A	COVER, solenoid switch (rubber)	65 to * — FL, FLH, FLH-80, 79 to 81 — Classic
		31475-77	COVER, solenoid switch	82 — Classic
	28	31452-65A	SPACER, solenoid mounting	65 to * — FL, FLH, FLH-80, Classic
	29	31536-79B	STARTER RELAY, without wires	80 to * — FL, FLH, FLH-80, Classic
	30	33198-70	BUSHING, neutral switch	Late 79 to * — FL, FLH, FLH-80, Classic
	31	33920-99	TRANSMISSION NEUTRAL SWITCH	59 to 84 — FL, FLH,
		33901-79	TRANSMISSION NEUTRAL SWITCH	Late 73 to Early 79 — FL, FLH, FLH-80, Classic
		33901-79	TRANSMISSION NEUTRAL SWITCH	Late 79 to * — FL, FLH, FLH-80, Classic
	32	60545-65	GASKET, solenoid mounting	Late 65 to 92 — FL, FLH, FLH-80, Classic
	34	70189-70	WFF, starter relay (black)	70 to * — FL, FLH, FLH-80, Classic
	35	71455-67	STARTER RELAY, without wires	70 to 73 — FL, FLH
	36	71463-73A	STARTER RELAY	74 to 79 — FL, FLH, FLH-80, Classic
	38	71466-65	SOLENOID INNER PLUNGER	65 to * — FL, FLH, FLH-80, Classic
	39	71457-65	COVER GASKET, starter solenoid	65 to * — FL, FLH, FLH-80, Classic
	41	71455-66B	STARTER SOLENOID SWITCH	65 to * — FL, FLH, FLH-80; 79 to 81 — Classic
		71473-77B	STARTER SOLENOID SWITCH	82 — Classic
	42	71507-64A	TRANSMISSION NEUTRAL SWITCH, w/ 9942 TERMINALS W/A	65 to 79 — FL, FLH
		71507-71	TRANSMISSION NEUTRAL SWITCH	71 to Early 73 — FL, FLH

VOLTAGE REGULATOR

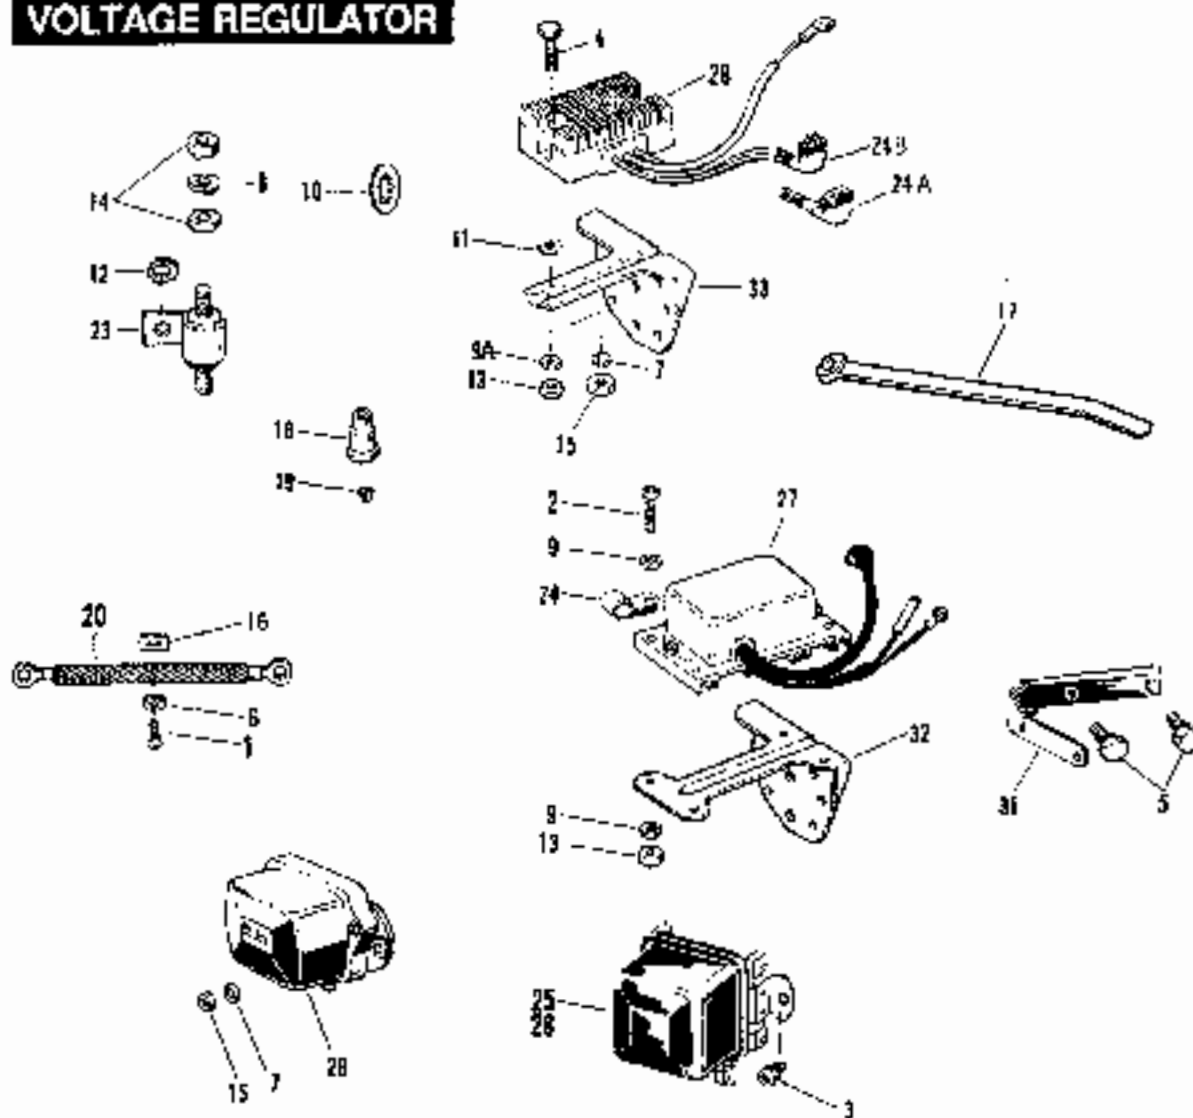


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2585	SCREW, No. 8-32 x 5/16 Phillips hd.	65 to 69 — FL, FLH
	2	2595	SCREW, No. 10-24 x 1/2 Phillips hd. (4)	N/A 70 to 75 — FL, FLH
	3	2751	SCREW, 1/4-28 x 5/16 Phillips hd.	N/A 58 to 64 — FL, FLH
	4	3632W	BOLT, 1/4-20 x 7/8 hex. (2)	76 to * — FL, FLH, FLH-80, Classic
	5	3953	BOLT, 5/16-18 x 7/8 hex. (2)	N/A 58 to 64 — FL, FLH
	6	6132W	WASHER, No. 10 x 7/16 x 1/32 (2)	65 to 69 — FL, FLH
	7	7036	LOCKWASHER, 1/4 (2)	41 to 54 — FL, FLH 76 to Early 81 — FLH-80, Classic
	8	7089	LOCKWASHER, No. 10 (2)	65 to * — FL, FLH, FLH-80, Classic
	9	7116	LOCKWASHER, No. 12 internal tooth (8)	70 to 79 — FL, FLH
	5A	7124	LOCKWASHER, 1/4 internal tooth (2)	Early 81 to * — FLH-80, Classic
	10	7127	LOCKWASHER, 5/16 internal tooth (2)	65 to * — FL, FLH, FLH-80, Classic
	11	7145W	LOCKWASHER, 3/8 external tooth (3)	79 to * — FL, FLH, FLH-80, Classic
	12	7230	LOCKWASHER, 1/4 external tooth (3)	65 to * — FL, FLH, FLH-80, Classic
	13	7624	NUT, No. 10-24 x 1/4 x 3/8 hex. (4)	70 to 79 — FL, FLH
	14	7636	NUT, No. 10-32 x 1/8 x 3/8 hex. (4)	55 to * — FL, FLH, FLH-80, Classic
	15	7688	NUT, 1/4-20 x 1/4 x 1/2 hex. (2)	55 to 69 — FL, FLH
	16	8125	SPEED NUT, connecting strap	55 to 69 — FL, FLH
	17	9006	CABLE STRAP	65 to * — FL, FLH, FLH-80, Classic
	18	31607-64	RUBBER CAP, spark plug cables (2)	55 to 77 — FL, FLH
	19	31620-47	TERMINAL, spark plug cable	N/A 65 to 77 — FL, FLH
		31643-70A	RADIO SUPPRESSION KIT	N/A 70 to 84 — FL, FLH, FLH-80, Classic
	20	31645-70	WIRE, capacitor to spark coil	70 to * — FL, FLH, FLH-80, Classic
		31650-69A	GROUND STRAP, regulator — radio suppression kit	N/A 55 to 69 — FL, FLH
		31651-70	WIRE, engine to frame	70 to * — FL, FLH, FLH-80, Classic
	25	31713-69	CAPACITOR, 0.15 MFD — radio suppression kit	55 to * — FL, FLH, FLH-80, Classic
	24	71795-83A	CLAMP, regulator cable	70 to 75 — FL, FLH
	24A	71879-70	FEMALE PLUG, regulator/regulator — with wires	75 to 80 — FL, FLH, FLH-80, Classic
	24B	71875-81	MALE PLUG, rectifier/regulator — with wires	81 to * — FLH-80, Classic
	25	74513-47A	VOLTAGE REGULATOR, only — standard generator	N/A 58 to 64 — FL, FLH
	26	74510-64	VOLTAGE REGULATOR — 12 V.	65 to 69 — FL, FLH
	27	74510-70A	RECTIFIER AND REGULATOR ASSEMBLY, 12 V. (chrome)	70 to 75 — FL, FLH
	28	74511-59	CURRENT AND VOLTAGE REGULATION, std. generator	N/A 50 to 64 — FL, FLH
	29	74512-79A	RECTIFIER AND REGULATOR ASSEMBLY	76 to 80 — FL, FLH, FLH-80, Classic
		74514-80	RECTIFIER AND REGULATOR ASSEMBLY	81 to * — FLH-80, Classic
	31	74531-58	SUPPORT, regulator	N/A 58 to 64 — FL, FLH
	32	74533-70A	BRACKET, regulator	N/A 70 to 75 — FL, FLH
	33	74533-75A	BRACKET, regulator (chrome)	76 to Early 81 — FL, FLH, FLH-80, Classic
		74534-60	BRACKET, regulator (black)	Early 81 to * — FLH-80, Classic

SIDECAR BODY AND CHASSIS — LE —

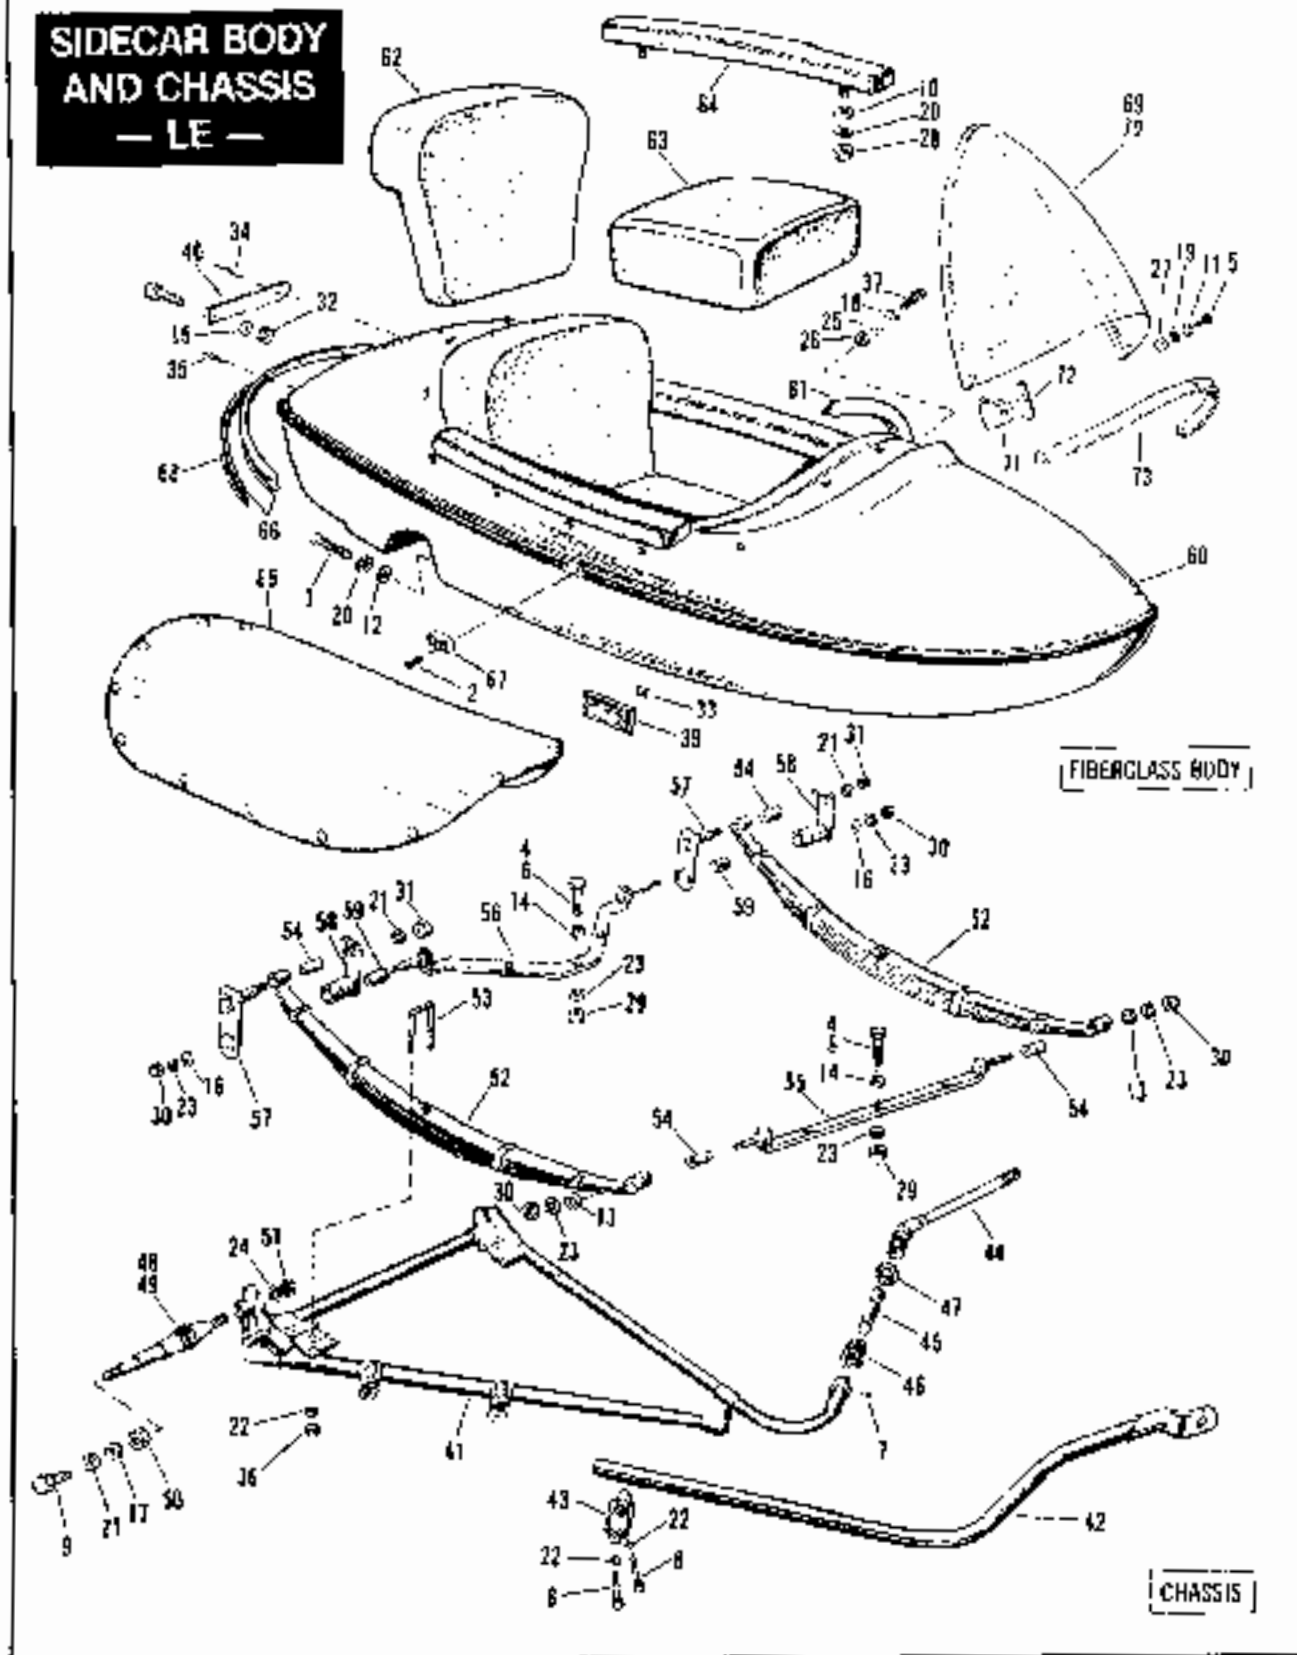


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	2	2219W	SCREW, No. 4-14 x 1/4 x 1/4 (2)	Late 67 to 79 — LF
	3	2530	SCREW, 1/2-20 x 1 3/4 (2)	Late 67 to 79 — LE
	4	2605	SCREW, 5/16-18 x 1-3/4 (2)	Late 67 to 79 — LF
	5	2726	SCREW, No. 12-24 x 2 1/2 (2)	Late 67 to 79 — LE
	6	2687W	BOLT, 5/16-18 x 1-3/4 hex (5)	77 to 79 — LF
	7	3232H	SET SCREW, 5/16-24 x 9/32 (2)	41 to 79 — LF
	8	304E	BOLT, 7/16-20 x 2 hex (4)	41 to 79 — LE
	9	4315	BOLT, 3/8-24 x 1 hex (4)	Late 67 to 79 — LE
	10	E226W	WASHER, 1/4 x 1/2 x 1/16 (2)	Late 67 to 79 — LF
	11	E206P	WASHER, 1/4 x 1/2 x 1/32 (5)	Late 67 to 79 — LE
	12	E252W	WASHER, 1/4 x 3/4 x 1/16 (2)	Late 67 to 79 — LE
	13	E327B	WASHER, 5/16 x 3/4 x 1/16 (2)	41 to 79 — LE
	14	E332P	WASHER, 5/16 x 15/16 x 1/16 (6)	Late 67 to 79 — LE
	15	E305	WASHER, No. 4-5/16 x 1/32 (2)	Late 67 to 79 — LF
	16	E341P	WASHER, 5/16 x 1 1/8 x 1/16 (2)	41 to 79 — LE
	17	E701	WASHER, 3/8 x 1 3/8 x 1/16 (2)	Late 67 to 79 — LF
	18	E716	WASHER, No. 12 x 1/2 x 3/64 (6)	Late 67 to 79 — LE
	19	7300W	LOCKWASHER, No. 12 (5)	Late 67 to 79 — LE
	20	7326	LOCKWASHER, 1/4 (10)	Late 67 to 79 — LE
	21	7638	LOCKWASHER, 3/8 (5)	41 to 79 — LE
	22	7639	LOCKWASHER, 7/16 (9)	41 to 79 — LE
	23	7641	LOCKWASHER, 5/16 (8)	Late 67 to 79 — LF
	24	7643	LOCKWASHER, 3/4	41 to 79 — LF
	25	7660	LOCKWASHER, No. 10 (10)	Late 67 to 79 — LE
	26	7609	NUT, No. 9-32 x 1/8 x 5/16 hex (16)	Late 67 to 79 — LF
	27	7654W	NUT, No. 12-24 x 5/32 x 7/16 hex (5)	41 to 79 — LF
	28	7658	NUT, 1/4-20 x 1/4 x 1/2 hex (4)	Late 67 to 79 — LE
	29	7748W	NUT, 5/16-18 x 1/4 x 1/2 hex (8)	41 to 79 — LF
	30	7754	NUT, 5/16-24 x 17/64 x 1/2 hex (4)	41 to 79 — LF
	31	7800W	NUT, 3/8-24 x 5/16 x 5/16 hex (2)	41 to 79 — LE
	32	9131W	LOCKWASHER, No. 4 (4)	Late 67 to 79 — LE
	33	9133W	SPEED NUT, selector (2)	N/A 55 to 71 — LE
	34	9521	POP RIVET, 1/8 x 1/2 x 1/4 dia. (2)	N/A 71 to 79 — LE
	35	966R	POP RIVET, 3/16 x 1/2 x 3/8 dia. (20)	41 to 79 — LE
	36	10902-53	NUT, 7/16-20 x 1/2 x 5/8 hex (2)	41 to 79 — LE
		45752-53	WASHER, fork upper bracket (See Front Fork)	Late 76 to 79 — LE
		45753-53	BOLT, fork upper bracket (See Front Fork)	Late 76 to 79 — LE
	37	58132-6R	SNAP STUD, drive (2)	Late 67 to 79 — LE
	38	59265-72	REFLECTOR, red (2)	72 to 79 — LE
	39	E1771-72	NAMEPLATE	N/A 72 to 79 — LE
	40	G1775-76	NAMEPLATE	76 to 79 — LF
	41	87084-074	SIDE CAR FRAME	68 to 79 — LE
	42	87354-36B	BRACE, sidecar frame	41 to 79 — LE
	43	87117-3E	LOWER CLAMP (2)	41 to 79 — LF
	44	87116-37	TIE ROD, lower front	41 to 79 — LE
	45	87254-24	BALL STUD	41 to 79 — LF
	46	87265-24	NUT, ball stud	41 to 79 — LE
	47	87267-24	LOCKWASHER, ball stud (2)	41 to 79 — LE
	48	87433-36	AXLE, sidecar	N/A 41 to early 79 — LE
	49	87433-76	AXLE, sidecar	Late 76 to 79 — LF
	50	87436-57	NUT, axle extension	Late 67 to 79 — LE


**SIDECAR BODY
AND CHASSIS
— LE —**

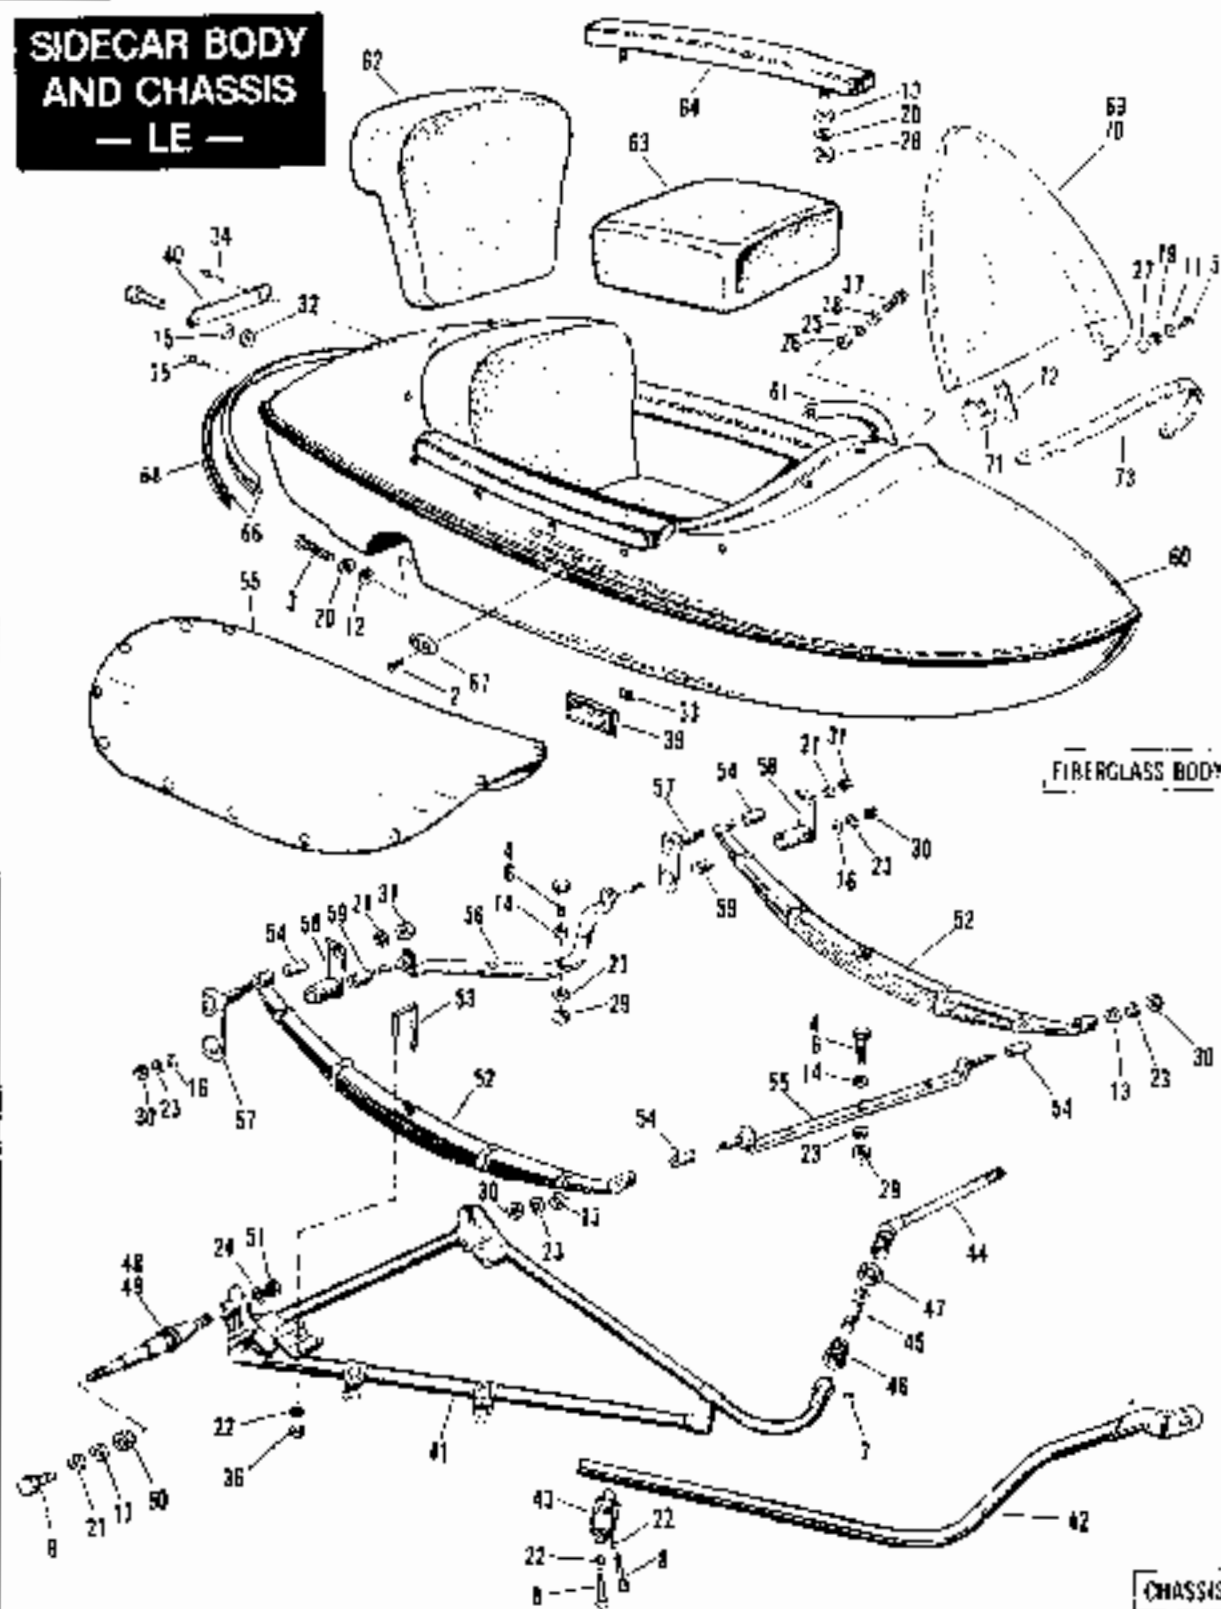

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	51	87444-33	AXLE W/IN (inside frame)	41 to 79 — LE
	52	88180-24A	SIDE CAR SPRING, with bushings (2)	41 to 79 — LE
	53	88172-25	UPPER springs (4)	41 to 79 — LE
	54	88174-27	SPRING BUSHING (4)	41 to 79 — LE
	55	88261-36	SUPPORT ROD, front	41 to 79 — LE
	56	88264-38	SUPPORT ROD, rear	41 to 79 — LE
	57	88300-79	S-ACKLE PLATE, with stud	Late 67 to 79 — LF
	58	88301-79	S-ACKLE PLATE, with bushing inner (2)	Late 67 to 79 — LF
	59	88314-37	S-ACKLE BUSHINGS	41 to 79 — LF
	60	88366-36A	SIDECAR, only — without frame (Fiberglass)	41 to 79 — LE
	61	88435-57	TRIM STRIP, body top	Late 67 to 79 — LF
	62	88481-57	BACK CUSHION	Late 67 to 79 — LE
	63	88487-57	SEAT CUSHION	Late 67 to 79 — LF
	64	88493-57	ARM REST CUSHION (2)	Late 67 to 79 — LE
	65	88528-57	COVER, sidecar body	Late 67 to 79 — LF
	66	88594-57	TRIM STRIP, with fittings	Late 67 to 79 — LF
	67	88595-57	RETAINER CLIP, sidecar trim strip	Late 67 to 79 — LE
	68	88598-57	C-CHANNEL INSERT, body trim (black vinyl)	Late 67 to 79 — LF
	69	88650-57	WINDSHIELD, with fittings	Late 67 to 79 — LE
	70	88662-57	WINDSHIELD, only	Late 67 to 79 — LF
	71	88680-57	CLAMP, windshield molding (2)	Late 67 to 79 — LE
	72	88685-57	BUSHING, windshield molding (2)	Late 67 to 79 — LF
	73	88695-57	WINDSHIELD BRACE	Late 67 to 79 — LE

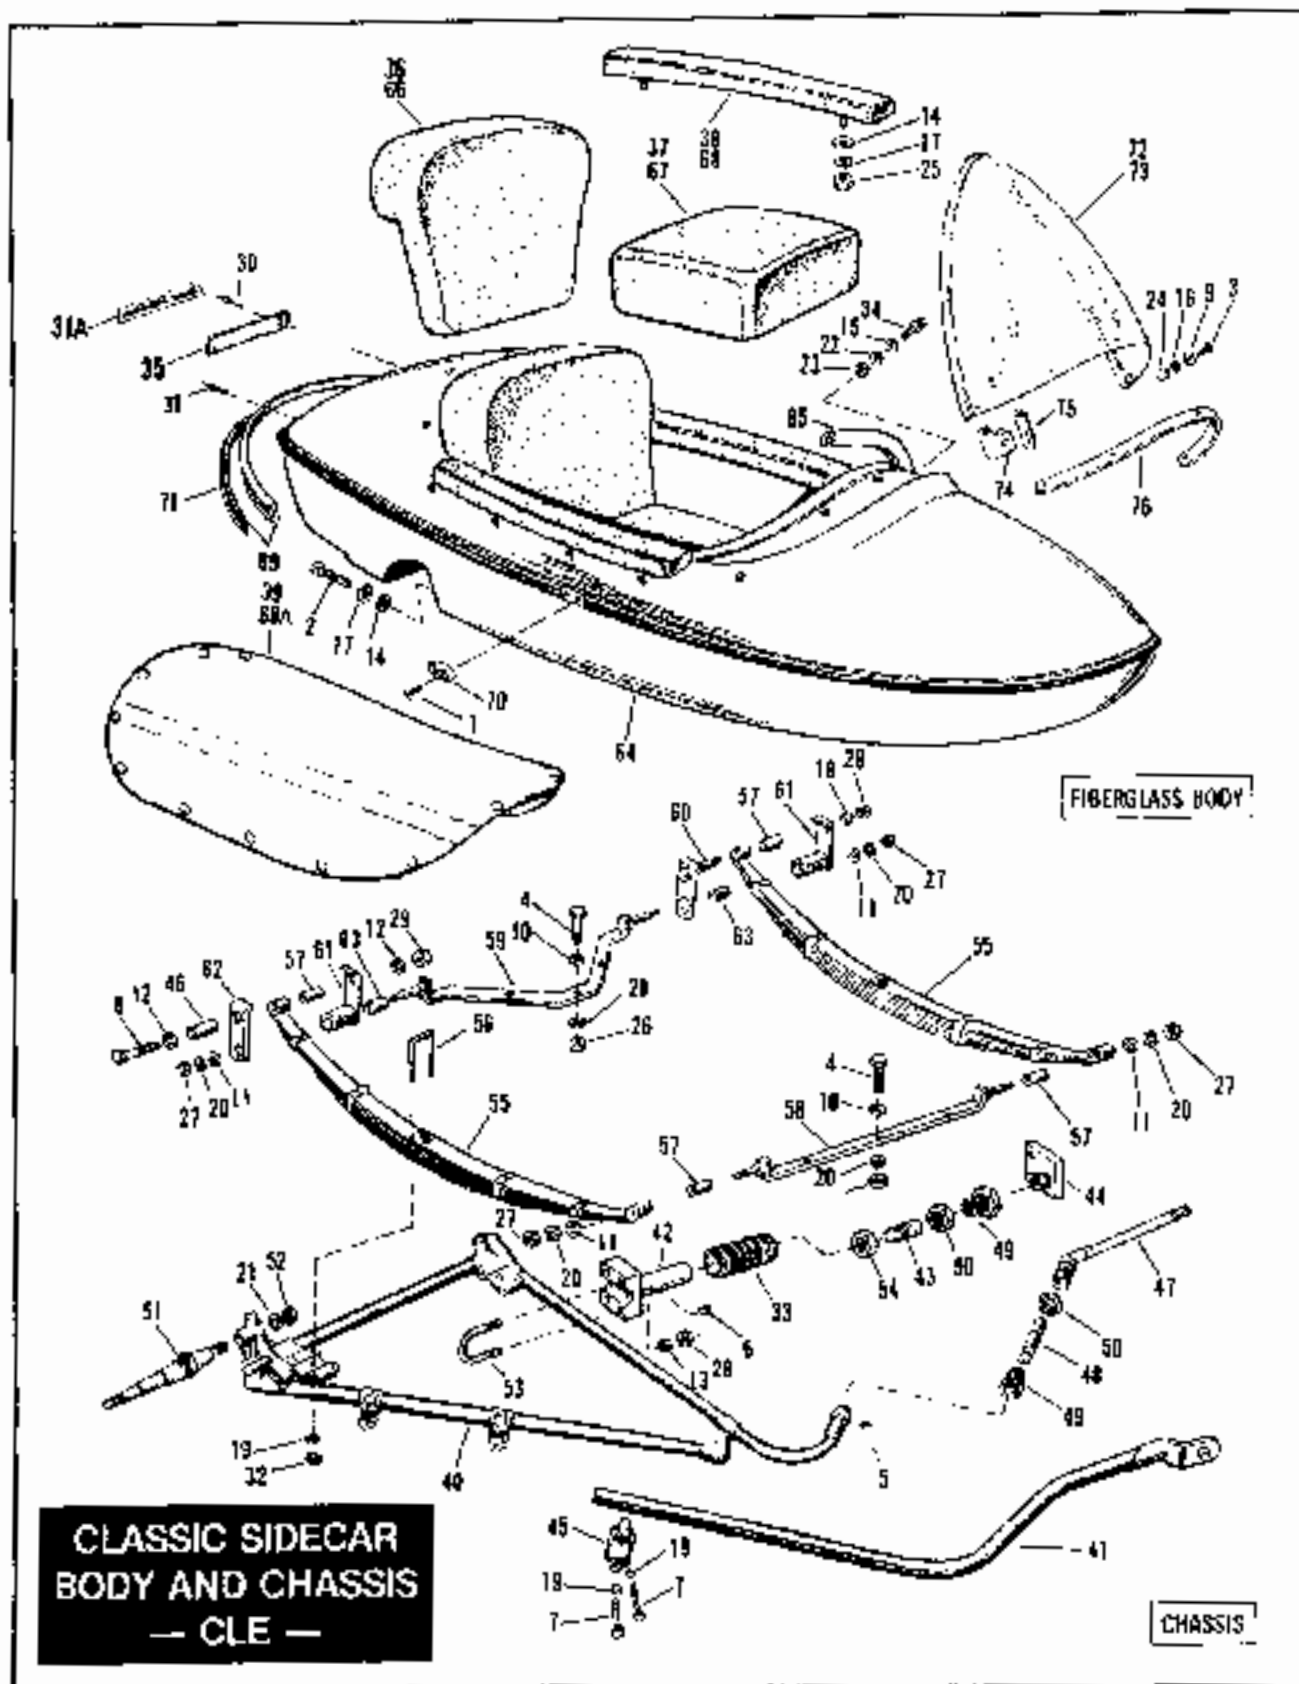


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2210W	SCREW, No. 1-24 self-tapping, 1/4" x 1/2" hex. (2)	78 to 81 — CLE
	2	353B	SCREW, 1/4-20 x 1-5/4 Phillips, 10000 (2)	79 to 81 — CLE
	3	372B	SCREW, No. 13-24 x 2-1/32 PH., No. 5	79 to 81 — CLE
	4	2384W	BOLT, 5/16-18 x 1-3/4 hex. hd.	79 to 81 — CLE
	5	3232H	SET SCREW, 5/16-24 x 3/32 (2)	79 to 81 — CLE
	6	3233	SET SCREW, 1/4-20 x 1/8 socket hd. (2)	79 to 81 — CLE
	7	3346	BOLT, 7/16-20 x 2-1/2 hex. hd. (2)	79 to 81 — CLE
	8	4401W	BOLT, 3/8-24 x 2-3/4 hex. hd.	79 to 81 — CLE
	9	6226W	WASHER, 1/4 x 1/2 x 1/16 (5)	79 to 81 — CLE
	10	6332B	WASHER, 5/16 x 1/2 x 1/16 (5)	79 to 81 — CLE
	11	6341B	WASHER, 5/16 x 1-1/8 x 1/16 (4)	79 to 81 — CLE
	12	6415	WASHER, 3/8 x 1 x 5/64 (2)	79 to 81 — CLE
	13	6701	WASHER, 3/8 x 1-3/16 x 1/16 (4)	79 to 81 — CLE
	14	6703	WASHER, 1/4 x 5/8 x 1/16 (5)	79 to 81 — CLE
	15	6715	WASHER, No. 10 x 1/2 x 5/64 (5)	79 to 81 — CLE
	16	7039W	LOCKWASHER, No. 12 (5)	79 to 81 — CLE
	17	7036	LOCKWASHER, 1/4 (6)	79 to 81 — CLE
	18	7038	LOCKWASHER, 3/8	79 to 81 — CLE
	19	7039	LOCKWASHER, 7/16 (12)	79 to 81 — CLE
	20	7041	LOCKWASHER, 5/16 (10)	79 to 81 — CLE
	21	7043	LOCKWASHER, 3/4	79 to 81 — CLE
	22	7056	LOCKWASHER, No. 10 (16)	79 to 81 — CLE
	23	7638	NUT, No. 10-32 x 1/8 x 3/8 hex. (15)	79 to 81 — CLE
	24	7654W	NUT, No. 12-24 x 5/32 x 7/16 hex. (5)	79 to 81 — CLE
	25	7668	NUT, 1/4-20 x 1/4 x 1/8 hex. (4)	79 to 81 — CLE
	26	7743W	NUT, 5/16-18 x 1/4 x 1/2 hex. (6)	79 to 81 — CLE
	27	7753	NUT, 5/16-24 x 17/64 x 1/2 hex. (4)	79 to 81 — CLE
	28	7775	LOCKNUT, 3/8-24 x 7/16 x 9/16 hex. (4)	79 to 81 — CLE
	29	7780	LOCKNUT, 3/8-24 x 3/8 x 11/16 hex.	79 to 81 — CLE
	30	8321	POP RIVET, 1/8 x 1/2 x 1/4 dia. (aluminum) (2)	N/A 79 to 81 — CLE
	31	863B	POPRIVET, 3/16 x 1/2 x 3/16 dia. (29)	79 to 81 — CLE
31A	14015-82	NAMEPLATE (gold)		82 — CLE
	14016-82	NAMEPLATE (silver)		N/A 82 — CLE
	32	16602-30	NUT, 7/16-20 x 1/2 x 5/8 hex. (8)	79 to 81 — CLE
	33	60945-60	RUBBER, front	79 to 81 — CLE
	34	53123-60	SNAPSHOULDER, body cover (16)	79 to 81 — CLE
	35	61773-75	NAMEPLATE	79 to 82 — CLE
	36	67353-79	BACK CUSHION (brown)	79 to 80 — CLE
	37	67355-79	SEAT CUSHION (brown)	79 to 80 — CLE
	38	67357-79	ARMREST CUSHION (brown) (2)	79 to 80 — CLE
	39	87056-79	COVER, side car body (brown)	79 to 80 — CLE
	40	87060-79	FRAME, sidecar	N/A 79 to 84 — CLE
	41	87064-36B	BRACE, sidecar frame	79 to 81 — CLE
	42	87100-79	BRACKET, rear mounting	79 to 81 — CLE
	43	87103-79	BALL STUD, rear mounting bracket	79 to 81 — CLE
	44	87105-79	MOUNTING BLOCK, rear connection	79 to 81 — CLE
	45	87117-79	LOWER CLAMP (2)	79 to 81 — CLE
	46	87120-79	SPACER, turn signal and spring shackle	79 to 81 — CLE
	47	87176-37	TIE ROD, lower front	79 to 81 — CLE
	48	87254-24	BALL STUD, front mounting	79 to 81 — CLE
	49	87265-24	NUT, ball stud front and rear (2)	79 to 81 — CLE
	50	87267-24	LOCKNUT, ball stud front and rear (2)	79 to 81 — CLE

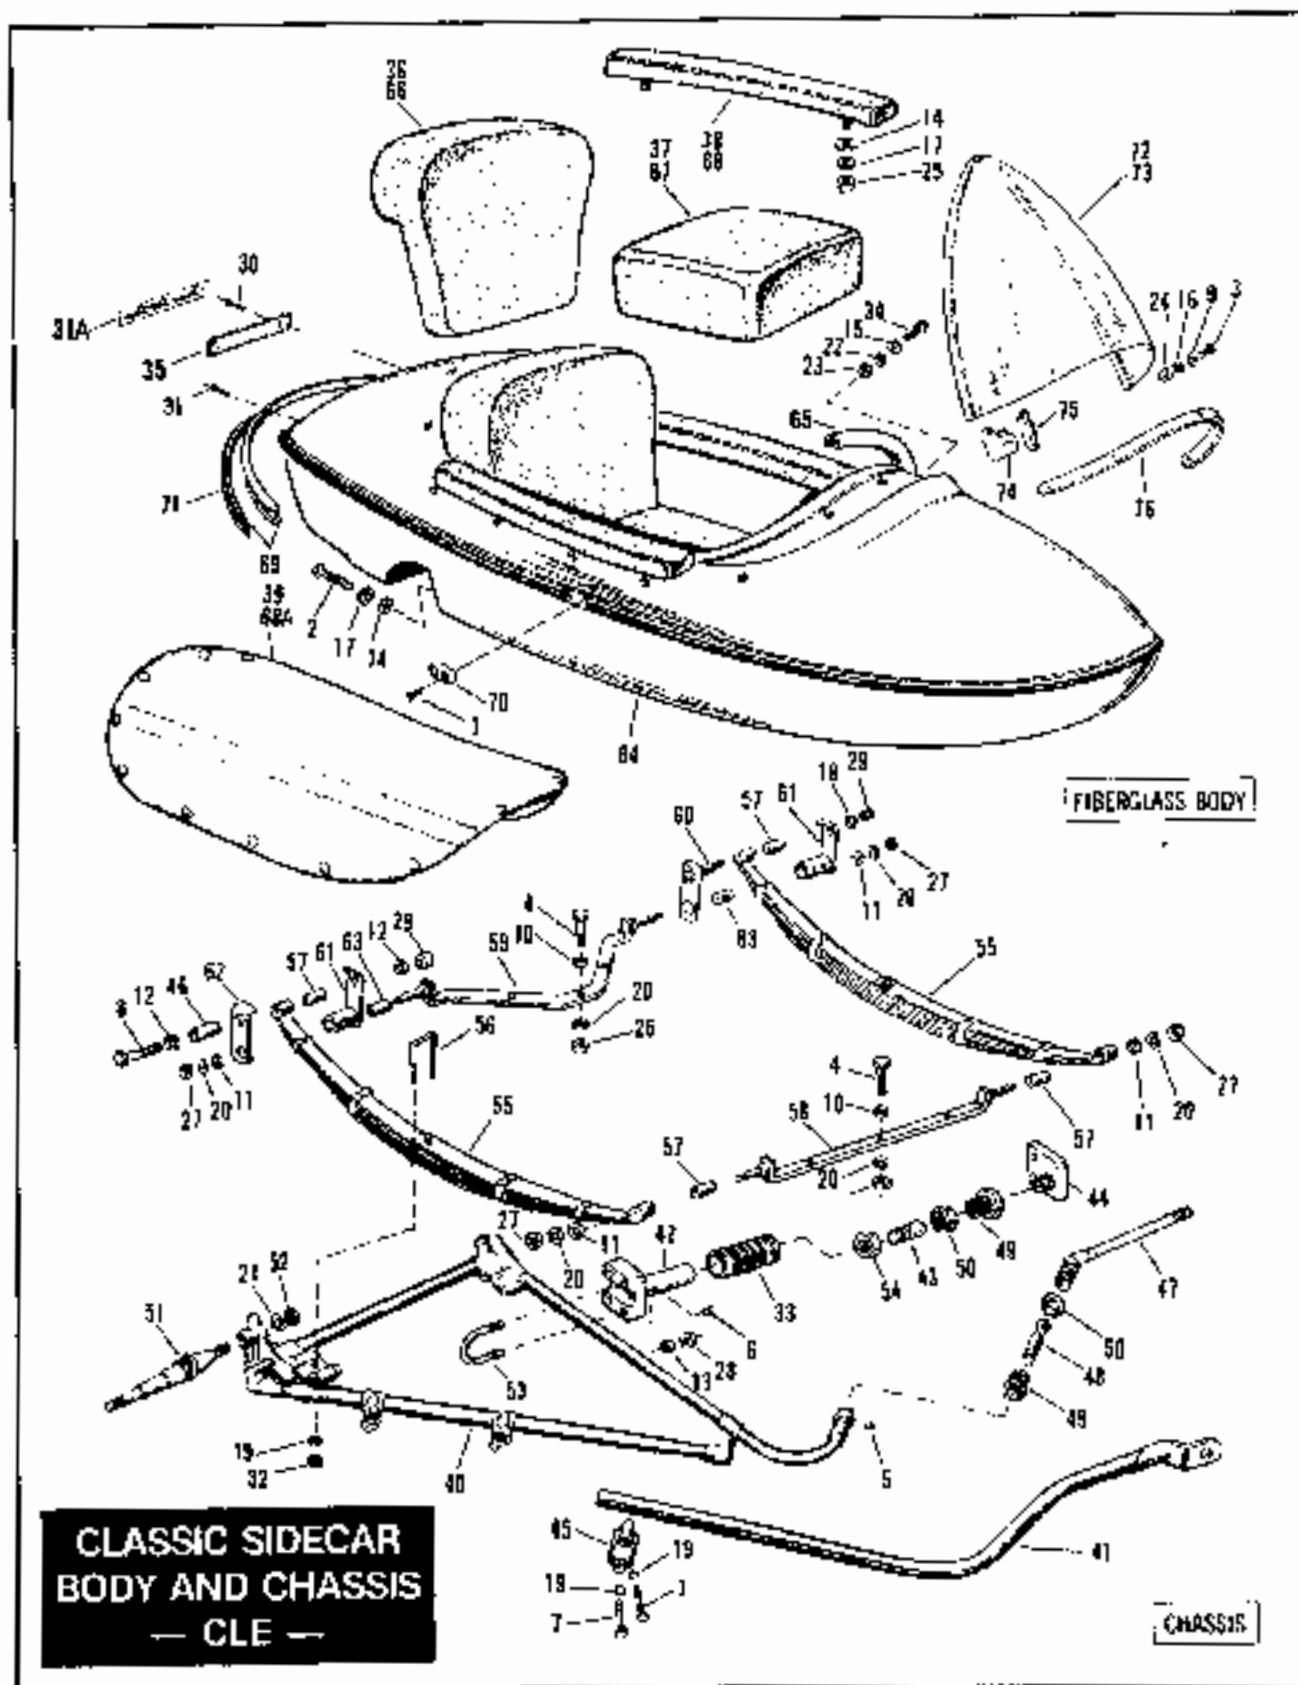


RETAIL PRICE	INDEX NO	PART NO	N A M E	USED ON
	51	87430-79	AXLE, sidecar	79 to 82 — CLE
		87435-83	AXLE, sidecar	83 to * — CLL
	52	87444-33	AXLE KIT (w/ side frame)	79 to * — CLE
	53	87701-79	J-BOLT, rear mounting bracket (2)	79 to * — CLL
	54	87702-79	JAM NUT, 1-14 x 5-16 x 1-1/2 hex	79 to * — CLE
	55	88100-24A	SIDECAR SPRINGS (w/ bushings) (2)	79 to * — CLF
	56	88172-75	II-ROUT, springs (4)	79 to * — CLE
	57	88174-37	SPRING BUSHING (4)	79 to * — CLF
	58	88261-36	SUPPORT ROD, front	79 to * — CLE
	59	88264-36	SUPPORT ROD, rear	79 to * — CLE
	60	88300-75	SHOCK PLATE, with shock absorber spring	79 to * — CLE
	61	88301-75	SHOCK PLATE, with bushing-spring (2)	79 to * — CLE
	62	88302-75	SHOCK PLATE, spring-cular	79 to * — CLE
	63	88314-37	SHOCK BUSHING (2)	79 to * — CLL
	64	88365-35A	SIDECAR, only - w/ metal frame, 2 seat glass (white)	79 to * — CLE
	65	88425-37	TRIM STRIP, body top (white)	79 to * — CLL
	66	88481-57	BACK CUSHION (black)	80 to * — CLE
	67	88487-57	SEAT CUSHION (black)	80 to * — CLF
	68	88493-57	ARM REST CUSHION (black)	80 to * — CLE
	68A	88528-57	COVER, side car body (black)	80 to * — CLE
	69	88584-57	TRIM STRIP, with fittings	79 to * — CLE
	70	88595-67	RETAINER CLIP, sidecar trim strip	79 to * — CLF
	71	88598-67	CHANNEL INSERT, body trim (black vinyl)	79 to * — CLL
	72	88650-67	WINDSHIELD, with fittings	79 to * — CLE
	73	88652-67	WINDSHIELD, only	79 to * — CLL
	74	88883-67	CLAMP, windshield mounting (2)	79 to * — CLF
	75	88885-67	BUSHING, windshield mounting (2)	79 to * — CLE
	76	88885-67	WINDSHIELD BRACE	79 to * — CLE

SIDECAR CONNECTION KIT — LE —

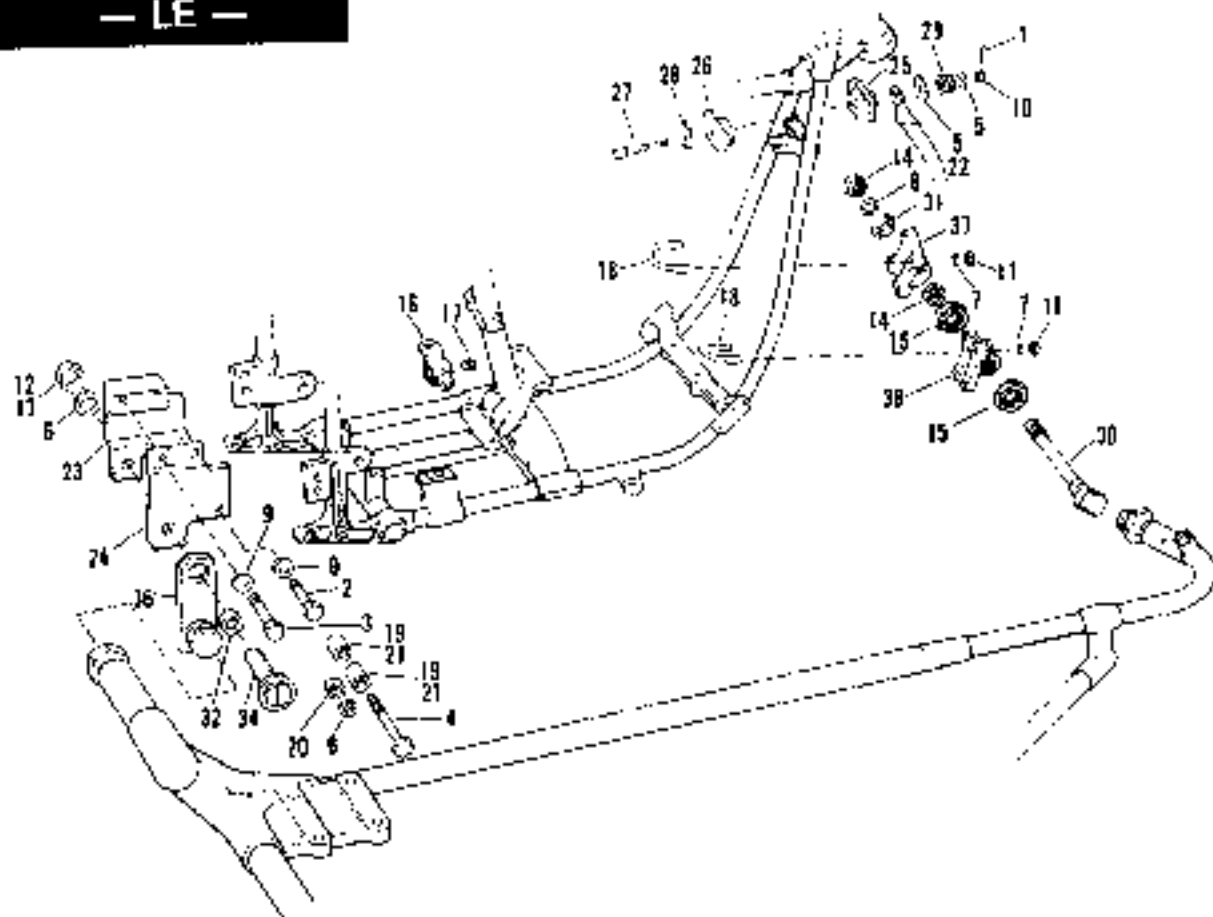


RETAIL PRICE	INDEX NO	PART NO	NAME	USED ON
	1	859	BOLT, 1/8-18 x 1-1/4 (1)	41 to 73 — LE
	2	2871W	BOLT, 5/16-18 x 1-1/4 hex hd	73 to 79 — LE
	3	4317	BOLT, 5/16-18 x 1-1/4 hex hd (2)	73 to 79 — LE
	4	4440W	BOLT, 3/8-24 x 1-1/4 hex hd (2)	74 to 79 — LF
	5	6716	WASHER, 1/2 x 1-1/16 x 3/32 (2)	41 to 79 — LE
	6	5725-5	WASHER, 41/64 x 1-7/16 x 9/64	58 to 79 — LE
	7	7038	LOCKWASHER, 3/8 (4)	41 to 79 — LE
	8	7043	LOCKWASHER, 3/4	41 to 79 — LE
	9	7127	LOCKWASHER, 5/16 intermediate (3)	73 to 73 — LE
	10	7344W	CASILE NUT, 1/2-20 x 3/16 x 3/4 hex	41 to 79 — LE
	11	7000W	NUT, 3/8-24 x 5/16 x 9/16 hex (8)	71 to 79 — LF
	12	7325	NUT, 1/4-16 x 3/8 x 1/2 hex	73 to 79 — LE
	13	7347W	CASILE NUT, 5/8-18 x 1/2 x 15/16 hex	58 to 73 — LE
	14	8004	NUT, 3/4-16 x 7/16 x 1-3/16 hex (2)	41 to 79 — LE
	15	8059	NUT, 12/16-18 x 15/32 x 1-3/16 hex	41 to 79 — LE
	16	42308--70	TEE, brake line	41 to 73 — LE
	17	42511-56	PLUG, rear brake line (used after is detail removed)	41 to 79 — LE
	18	48061--36	LEBOLT, sidecar connection (4)	58 to 79 — LE
	19	53068-35	SPACER, muffler support — 11-15 (3)	58 to 79 — LE
	20	52103-31	SPACER, muffler mounting — 3-4 (3)	58 to 73 — LE
	21	58107--49	SPACER, muffler support — 1-2 (3)	58 to 79 — LF
	22	65975--57A	WASHER, 5/8 x 1-1/2 x 1/16	N/A 73 to 79 — LE
		87082--73	SIDECAR CONNECTION Kit with frame hangers	73 to 79 — LE
	23	87083--73	BRACKET, main	73 to 73 — LF
	24	87084--73	BRACKET, main	73 to 79 — LE
	25	87127--36	UPPER CONNECTION, front	41 to 79 — LE
	26	87128--36	UPPER CONNECTION, rear	41 to 79 — LF
	27	87130-35	BOLT, upper connection	41 to 79 — LF
	28	87136-35	LOCKWASHER, connection bolt	41 to 79 — LE
	29	87138--36	SPRING, connection bolt	41 to 79 — LE
	30	87176--37	TIE ROD, lower front	41 to 79 — LE
	31	87181--37	WASHER, lower front tie rod	41 to 79 — LE
	32	87191--58	BUSHING, sidecar connection	58 to 79 — LE
	33	87192--72	CONNECTOR ST.L., 5/8-18 thread	73 to 79 — LE
	34	87197--73	SIDECAR CONNECTION	73 to 79 — LE
	35	87205--58	BRACKET, front left	58 to 79 — LF
	36	87206--58	BRACKET, front right	58 to 79 — LF

**CLASSIC SIDECAR
CONNECTION KIT
— CLE —**

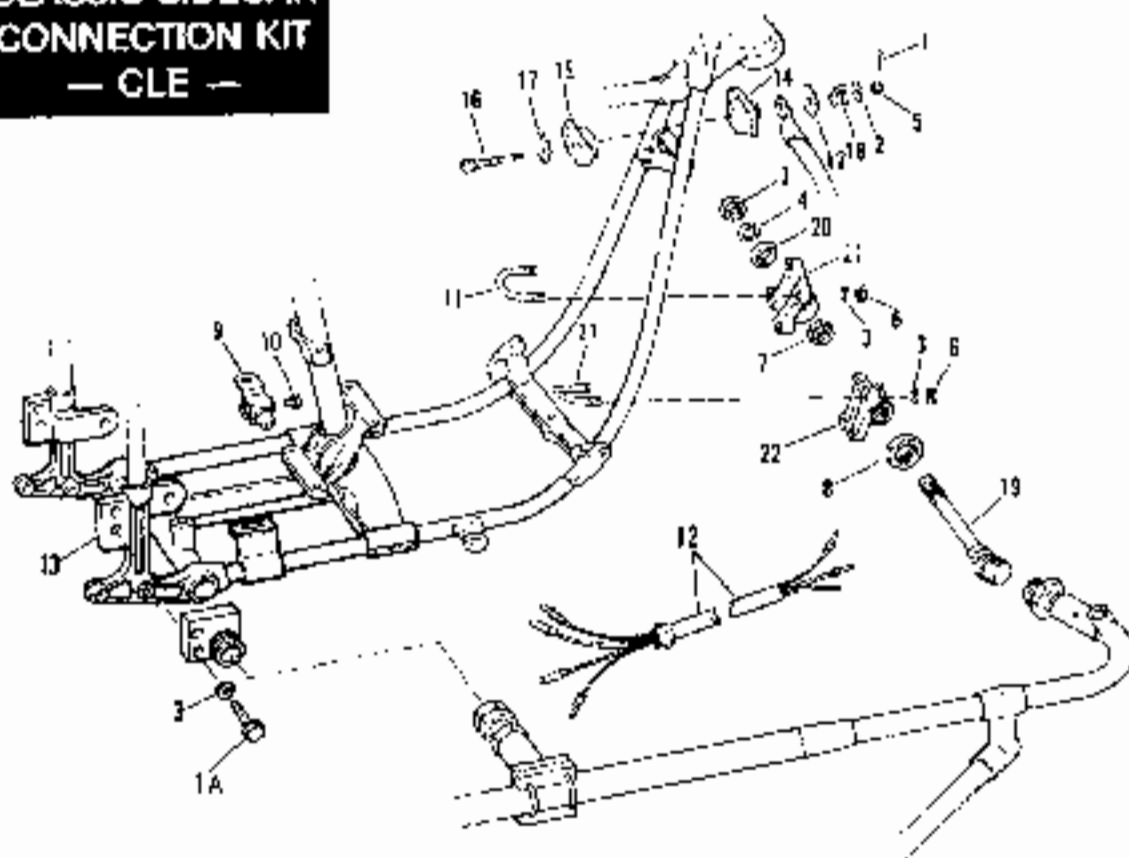


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
		550	CUTTER PIN, 1/8 x 1-1/4	79 to * — CLE
	A	4716W	BOLT, 3/8-16 x 1-1/4 hex. hd. (2)	79 to * — CLE
	2	5719	WASHER, 1/2 x 1-1/4 IE x 3/32	79 to * — CLE
	J	7038	LOCKWASHER, 3/8, 8	79 to * — CLE
	4	7040	LOCKWASHER, 3/4	79 to * — CLE
	6	7633	LOCKNUT, 3/8-16 x 5/16 x 9/16 hex. (2)	79 to * — CLE
	5	7734W	CASCLE BOLT, 1/2-20 x 5/16 x 2 1/4 hex.	79 to * — CLE
	6	7900W	NUT, 3/8-24 x 5/16 (3/16 hex. 8)	79 to * — CLE
	7	8234	NUT, 3/4-16 x 7/32 x 1-1/4 hex. (2)	79 to * — CLE
	8	8055	NUT, 13/16-18 x 15/32 x 1-3/16 hex.	79 to * — CLE
	9	403E9-73	TIE, rear brake line	Late 64 to * — CLE
		42309-70	TIE, brake line	79 to 84 x 84 — CLE
	10	4131-58	PLUG, rear brake (not used when sidecar is removed)	79 to * — CLE
	11	49063-08	W-BOLT, sidecar connector (4)	79 to * — CLE
	12	70058-87	WIRELESS sidecar connection	82 to early 84 — CLE
		71058-84	HARNES sidecar connection	Late 84 to * — CLE
	13	87105-79	MOUNTING BLOCK, rear connection	79 to * — CLE
		87105-76	SIDECAR CONNECTION KIT (Classic)	79 to * — CLE
	14	87127-36	UPPER CONNECTION, front	79 to * — CLE
	15	87128-35	UPPER CONNECTION, rear	79 to * — CLE
	16	87135-35	BOLT, upper connection	79 to * — CLE
	17	87136-36	LOCKWASHER, upper connection bolt	79 to * — CLE
	18	87138-26	SPRING, connection bolt	79 to * — CLE
	19	87176-37	TIE ROD, lower front	79 to * — CLE
	20	87181-37	WASHER, lower front tie rod	79 to * — CLE
	21	87201-58	SHOCKLE, front left	79 to * — CLE
	22	87206-58	BRACKET, front right	79 to * — CLE

SIDECAR BRAKE AND FENDER — LE —

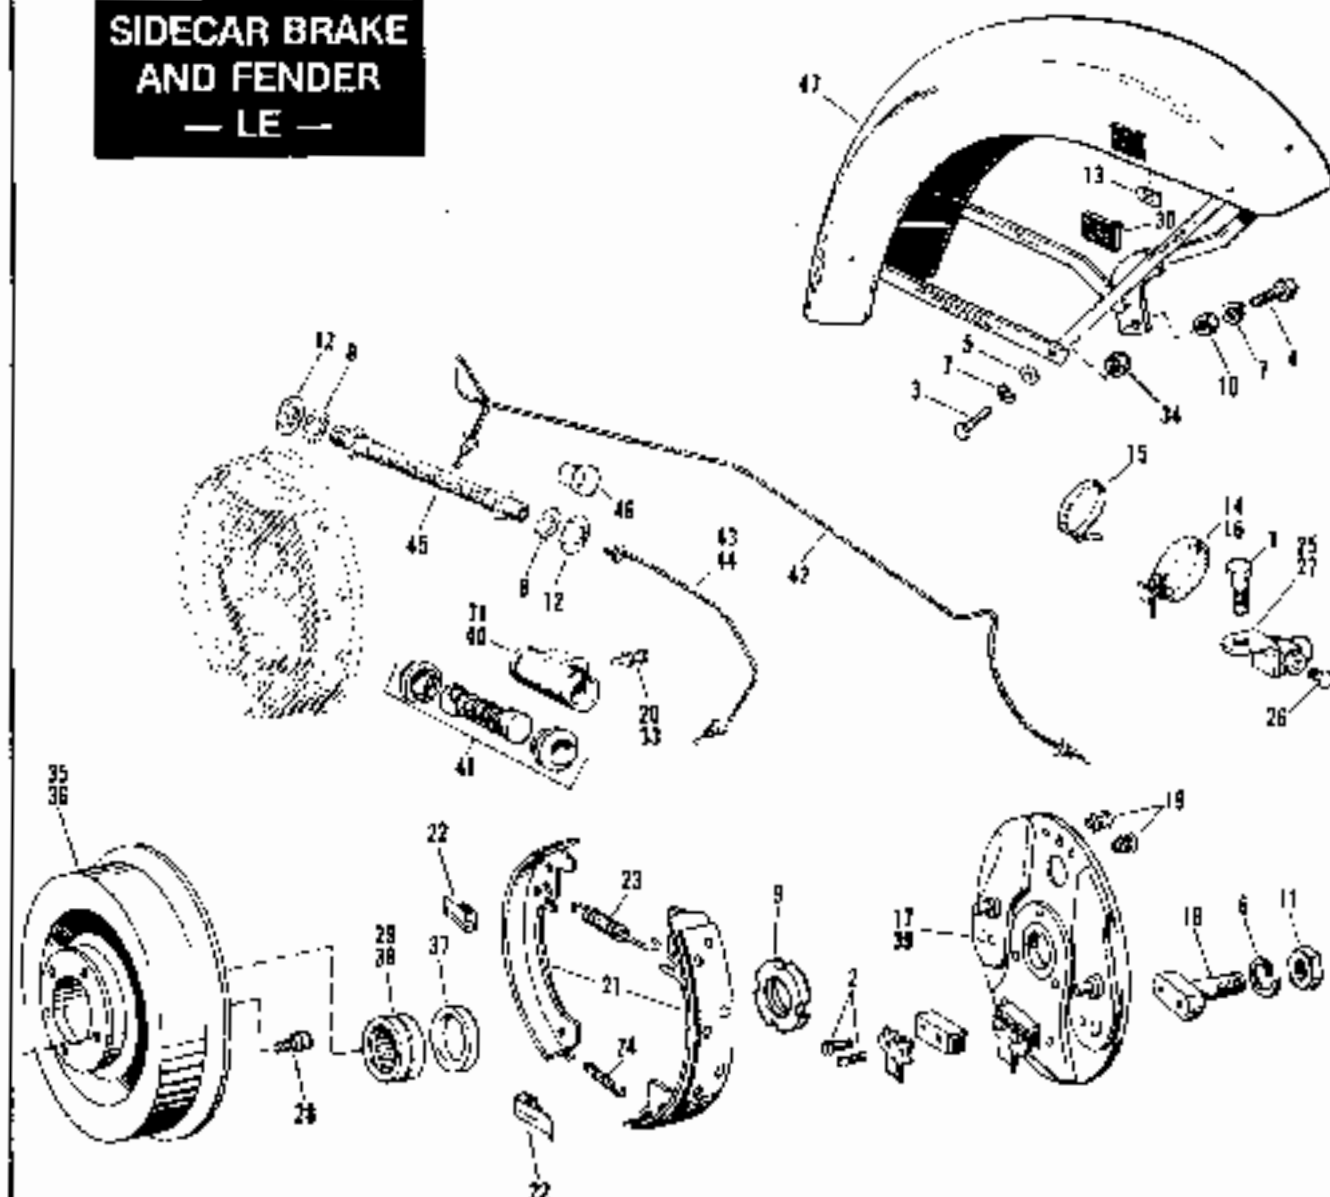


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	3953W	BOLT, 5/16-24 x 1-1/2 hex. hd.	70 to 79 — LF
	2	4026W	BOLT, 5/16-24 x 1-3/8 hex. (2)	18 to 79 — LE
	3	4319	BOLT, 3/8-24 x 1 hex. hd.	Late 57 to 79 — LF
	4	4716W	BOLT, 3/8-16 x 1-1/2 hex. hd.	41 to 76 — LE
		4721	BOLT, 3/8-16 x 1-1/2 hex. hd.	79 — LE
	5	6707	WASHER, 3/8 x 53/64 x 1-1/8	Late 67 to 79 — LE
	6	7022	LOCKWASHER, 5/8	58 to 79 — LE
	7	7039	LOCKWASHER, 3/8	41 to 73 — LE
	8	7247	LOCKWASHER, 3/8 external main (2)	58 to 79 — LF
	9	7587	LOCKWASHER	Late 76 to 79 — LE
	10	7793	NUT, 3/8-16 x 5/16 x 3/15 hex.	41 to 79 — LF
	11	7913	NUT, 5/8-12 x 9/16 x 15/16 hex.	58 to 79 — LE
	12	7968	NUT, 5/8-18 x 1/4 x 1 hex. (2)	58 to 79 — LE
	13	8123W	SPLIT NUT, reflector	N/A 60 to 71 — LE
	14	8997A	HOSE CLAMP	58 to 79 — LE
	15	9008	STRAP, brake (to 13)	58 to 79 — LE
	16	97052-57	HOSE CLAMP	73 to 79 — LF
	17	41630-55	SIDE PLATE	N/A 58 to Early 76 — LE
	18	41720-58	ANCHOR STUD	58 to 79 — LF
	19	41747-59	SCREW AND LOCKWASHER, brake cylinder (2)	58 to 79 — LE
	20	41749-59	BLEEDER FITTING, brake cylinder	58 to Early 79 — LE
	21	41807-58A	SET OF BRAKE SHOES AND LININGS	58 to 79 — LE
	22	41835-58	HOLD DOWN SPRINGS (2)	58 to 79 — LE
	23	41835-58	BRAKE SHOE SPRING, upper	58 to 79 — LE
	24	41837-58	BRAKE SHOE SPRING, lower	58 to 79 — LE
	25	42009-70	TEE, brake line (used w/ disc car)	73 to 79 — LE
	26	42317-58	PLUG, rear brake line (used when a defect is removed)	Late 76 to 79 — LE
	27	42319-72	TEE, brake line (used w/ disc car)	Late 73 to 79 — LF
	28	42930-75A	SCREW, wheel mounting	41 to 79 — LE
	29	43577-67	BEARING, brake drum (2)	57 to Early 76 — LF
	30	55255-72	REFLECTOR (2)	72 to 79 — LE
	31	87077-79	BRAKE CYLINDER, wheel	Late 79 — LE
	32	87073-75	BLEEDER FITTING, brake cylinder	Late 79 — LE
	33	87408-67	EXTENDER NUT, axle	Late 67 to 79 — LF
	34	87657-58A	BRAKE SHELL	N/A 58 to Early 76 — LE
	35	87657-76	BRAKE SHELL	Late 76 to 79 — LF
	36	87670-76	OIL SEAL	Late 76 to 79 — LE
	37	87671-76	BEARING	Late 76 to 79 — LE
	38	87672-76	SIDE PLATE	Late 76 to 79 — LE
	39	87750-58	WHEEL CYLINDER	58 to Early 79 — LF
	40	87752-58A	REPAIR KIT, wheel cylinder	58 to 79 — LE
	41	87775-58	BRAKE TUBE, rear	58 to 79 — LF
	42	87777-58	BRAKE TUBE, front	N/A 58 to 69 — LF
	43	87777-79	BRAKE TUBE, front	79 to 79 — LE
	44	87778-58A	BRAKE HOSE	58 to 79 — LE
	45	87779-64	CAF, brake hose (used when hose is removed)	N/A 64 to 79 — LE
	46	87959-57A	FENDER (punch)	Late 67 to 79 — LF

CLASSIC SIDECAR FENDER — CLE

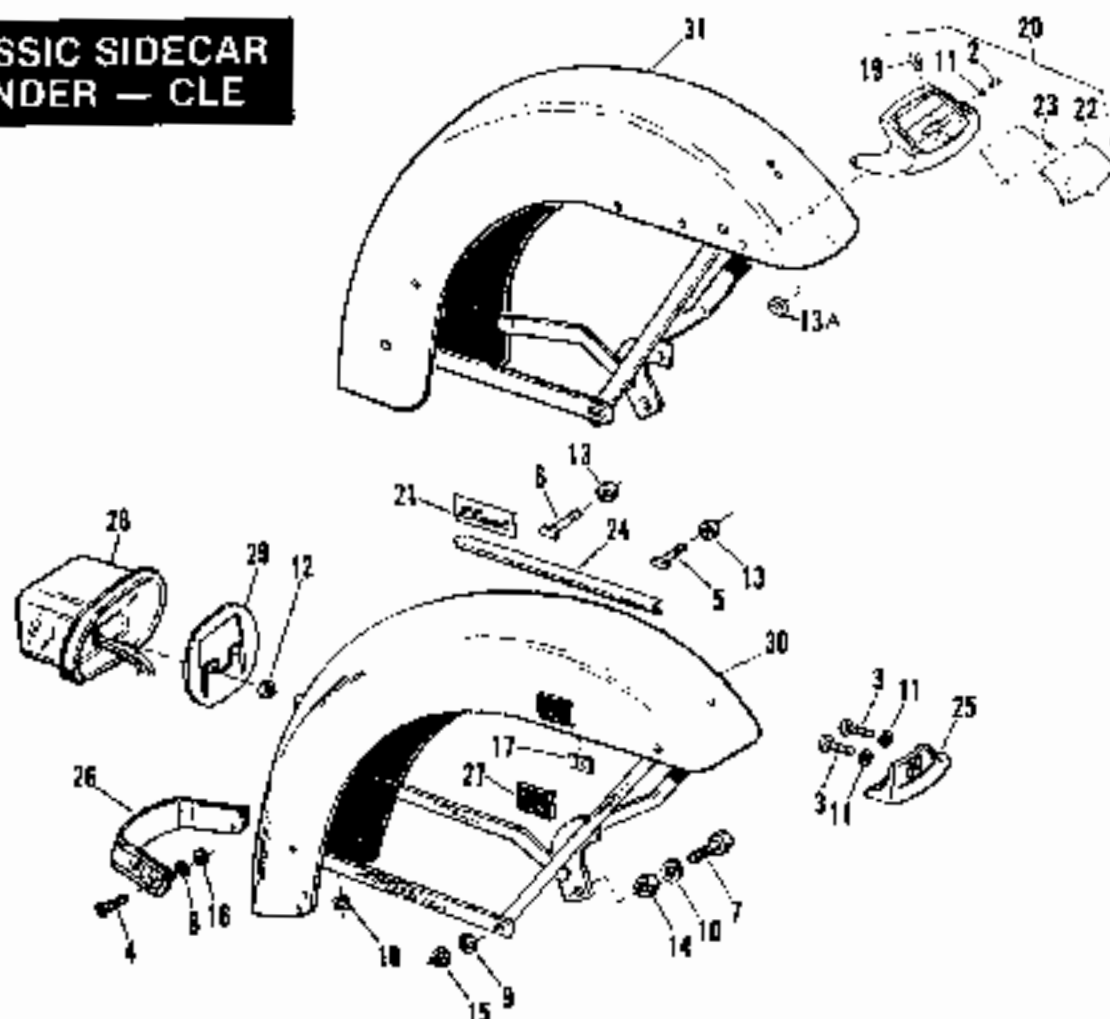


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
NOTE: REFER TO DEALER ACCESSORY GUIDE FOR PAINTED PARTS.				
	2	2604	SCREW, No. 10-32 x 1/2 Round, painted (4)	Late 82 to * — CLE
	3	2630A	SCREW, No. 8-32 x 5/16 Self-Drilling, painted (2)	79 to * — CLE
	4	27100	SCREW, No. 4-40 x 1.8 Flat-Head (4)	79 to * — CLE
	5	3500W	TEE BOLT, No. 10-24 x 3/8 (2)	79 to * — CLE
	6	3501WA	TEE BOLT, No. 10-24 x 1/2 (2)	79 to * — CLE
	7	4721	BOLT, 3/8-16 x 1 1/2 Hex. (6)	79 to * — CLE
	8	6335	WASHER, No. 5 x 5/16 x 1/32 (4)	79 to * — CLE
	9	6553	WASHER, 5/8 x 5/8 x 1/6 x 3/32	79 to * — CLE
	10	7038	LOCKWASHER, 3/8	79 to * — CLE
	11	7115	LOCKWASHER, No. 8, internal (each 2)	79 to 82 to * — CLE
		7116	LOCKWASHER, No. 10, internal (each 4)	80 to * — CLE
	17	7501	SPEED NUT, 1/16 x 1/4 x 7/16 Hex. (Self-Drilling) (2)	79 to * — CLE
	18	7624	LOCKNUT, No. 10-24 x 1/4 x 1/8 Hex. (4)	79 to * — CLE
	124	7636	NUT, No. 10-32 x 1/8 x 3/8 Hex. (2)	83 to * — CLE
	14	7782	NUT, 3/8-16 x 5/16 x 9/16 Hex.	79 to * — CLE
	15	7873	CASTLE NUT, 5/8-18 x 5/16 x 13/16 Hex.	79 to * — CLE
	16	8131W	LOCKNUT, No. 4-40 (4)	79 to * — CLE
	18	11410	GRONMET, tail lamp wiring	79 to * — CLE
	19	53439-79	BULB, tender lamp (2)	Late 82 to * — CLE
	23	60082-79	LAMP ASSEMBLY, sidecar fender	Late 82 to * — CLE
	21	59152-79	DECAL, tender — "Classic" (forward)	79 & 80 — CLE
		59153-80	DECAL, tender — "Classic" (reverse)	80 — CLE
		55173-81A	DECAL, tender — "Classic" (right)	81 & 82, Late 83 to * — CLE
	22	55183-80	LENS, sidecar tender lamp lens	Late 82 to * — CLE
	27	55181-80	GASKET, sidecar tender lamp lens	Late 82 to * — CLE
	24	55211-74	SIDE TRIM STRIP (2)	79 to * — CLE
	25	55212-76	FENDER TRIM KIT, with fittings — (6) — includes index nos. 2 & 11	79 to * — CLE
	26	55233-76	FENDER TRIM KIT, lower (complete) — FLH — includes index nos. 4, 8 & 16	79 to * — CLE
	27	55255-72	REFLECTOR (rear)	79 to * — CLE
	28	68030-73A	TAIL LAMP ASSEMBLY	79 to * — CLE
	29	68123-73	GASKET, tail lamp	79 to * — CLE
	30	67400-67A	FENDER, prime	79 to 90 — CLE
	31	87901-83A	FENDER, prime	81 to * — CLE

CLASSIC SIDECAR BRAKE — CLE

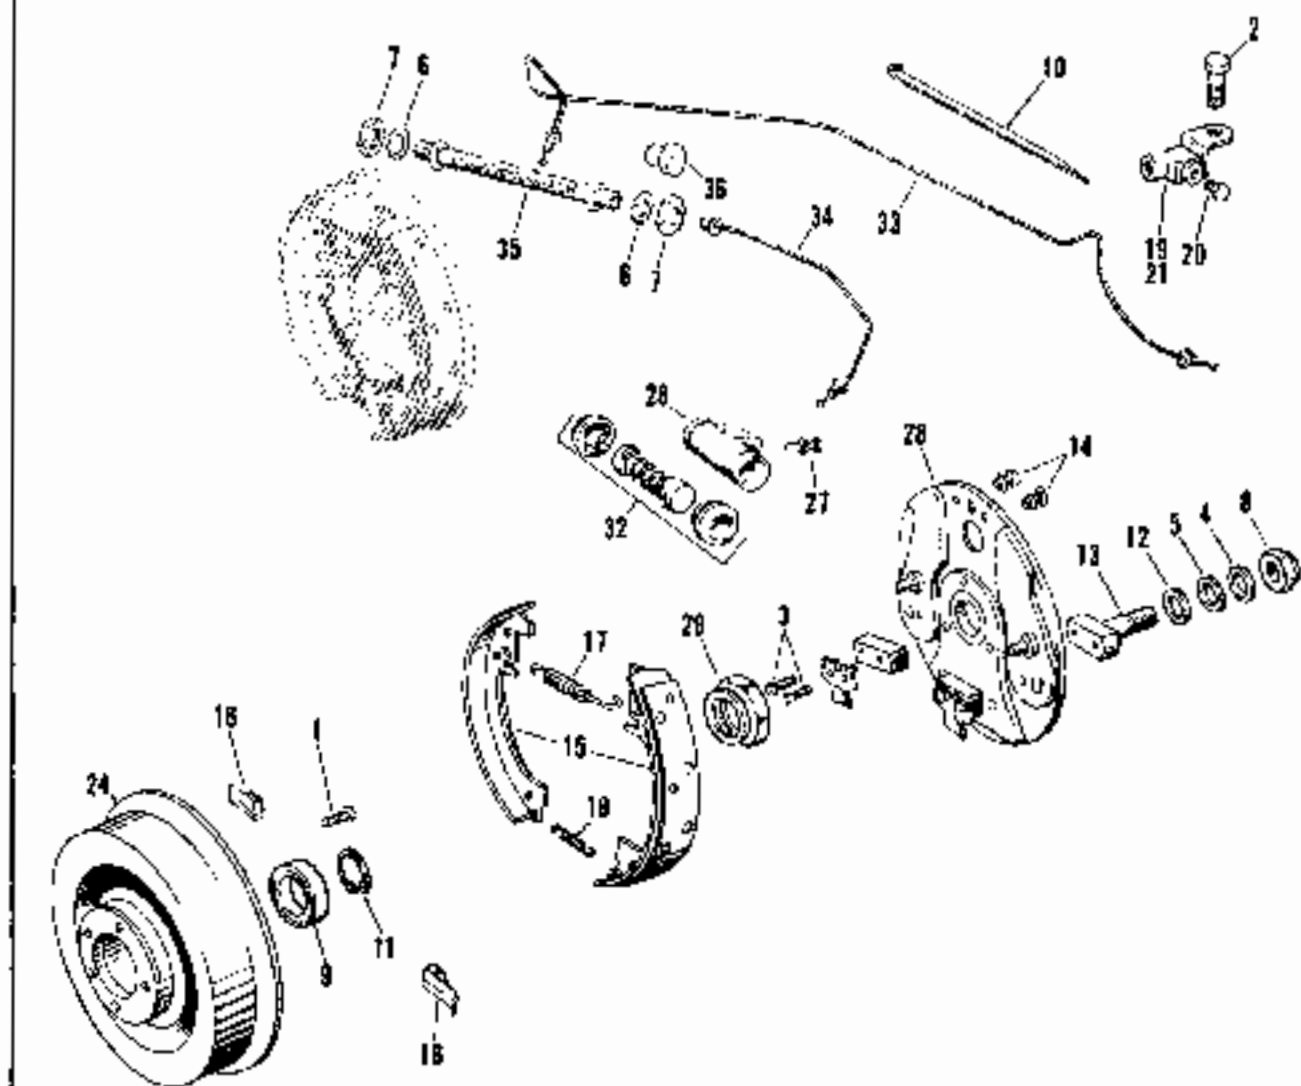

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	1643	SCREW, 7/16-14 x 1 1/4 disk fastener (2)	79 to * — CLE
	2	3953W	BOLT, 5/16-24 x 1 1/2 hex. Hd.	79 to * — CLE
	3	4120W	BOLT, 5/16-24 x 1 3/8 hex. (2)	79 to * — CLE
	4	5700B	WASHER, 5/8 x 13/16 x 1/32 (as req'd)	79 to * — CLE
	5	5712B	WASHER, 5/8 x 15/16 x 3/32 (as req'd)	79 to * — CLE
	6	7242	LOCKWASHER, 3/8 external tooth (2)	79 to * — CLE
	7	7986	NUT, 5/8-18 x 1/4 x 1 hex. (2)	79 to * — CLE
	8	7993	LOCKNUT, 5/8-18 x 3/8 x 15/16 hex.	79 to * — CLE
	9	9700	BEARING, brake drum	79 to * — CLE
	10	10006	STRAP, brake tube (3)	79 to * — CLE
	11	10959	RETAINING RING, brake drum bearing	79 to * — CLE
	12	18206-48	WASHER (as req'd)	79 to * — CLE
	13	41720-58	ANCHOR STUD	79 to * — CLE
	14	41742-58	SCREW AND LOCKWASHER, brake cylinder (2)	79 to * — CLE
	15	41801-58A	SET OF BRAKE SHOES AND LINKS	79 to * — CLE
	16	41830-58	HOLD DOWN, spring (2)	79 to * — CLE
	17	41836-58	BRAKE SHOE SPRING, upper	79 to * — CLE
	18	41837-58	BRAKE SHOE SPRING, lower	79 to * — CLE
	19	42339-70	TEL, brake line (used w/ sidecar)	79 to * — CLE
	20	42311-58	P, UG, rear brake line (used when sidecar removed)	79 to * — CLE
	21	42318-72	TEL, brake line (used w/ sidecar)	79 to * — CLE
	24	86899-78	BRAKE DRUM ASSEMBLY	79 to * — CLE
	25	87071-78	BRAKE CYLINDER, wheel	79 to * — CLE
	27	87073-75	BLEEDER FITTING, brake cylinder	79 to * — CLE
	28	87072-76	SIDE PLATE	79 to * — CLE
	29	87706-78	LOCKNUT, axle shaft	79 to * — CLE
	32	87752-58A	REPAIR KIT, brake cylinder	79 to * — CLE
	33	87775-58	BRAKE TUBE, rear	79 to * — CLE
	34	87777-70	BRAKE TUBE, front	79 to * — CLE
	35	87778-58A	BRAKE HUSH	79 to * — CLE
	36	87778-64	CAP, brake hose (used when sidecar is removed)	79 to 83 — CLE
		87778-64A	CAP, brake hose (used when sidecar is removed)	84 to * — CLE

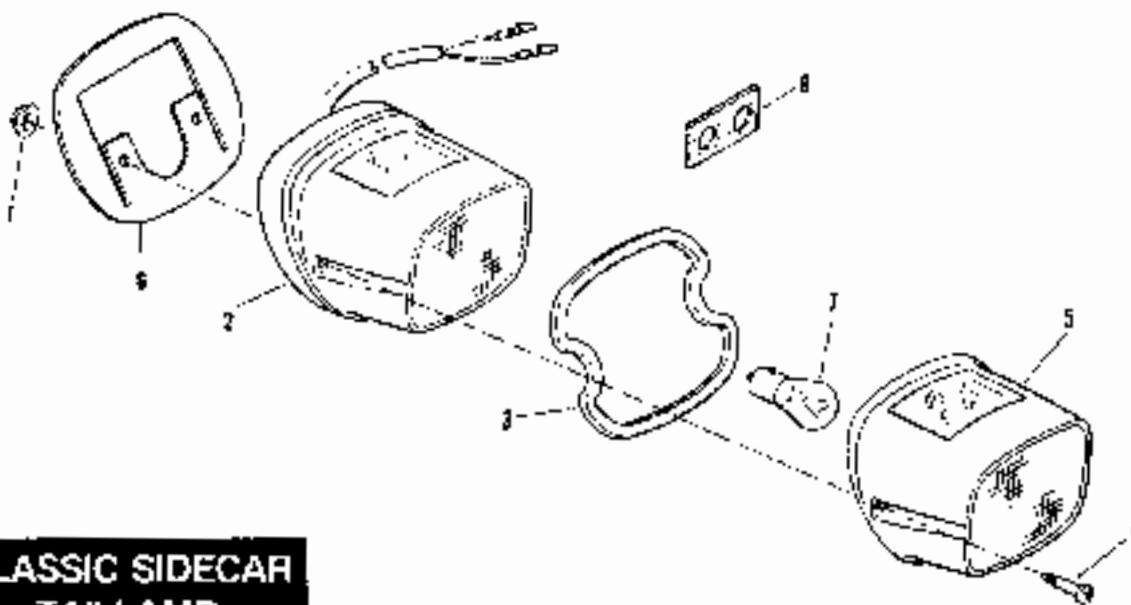


**CLASSIC SIDECAR
TAILLAMP
— CLE —**

CLASSIC SIDECAR TAIL LAMP — CLE

A99

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	7501	SPEED NUT, 1/4 x 7/16 hex. (2)	79 10 * — CLE
	2	59008-72A	TAIL LAMP ASSEMBLY	79 10 * — CLE
	3	59025-73	GASKET, tail lamp lens	79 10 * — CLE
	4	6802E-73	SCREW, tail lamp lens (2)	79 10 * — CLE
	5	68034-77	LENS, tail lamp	79 10 * — CLE
	6	68123-73	GASKET, tail lamp housing	79 10 * — CLE
	7	68155-64	BULB, tail lamp - 12 v.	79 10 * — CLE
	8	72275-74	CONNECTOR, TAB - 2 terminal	Late 68 10 * — CLE

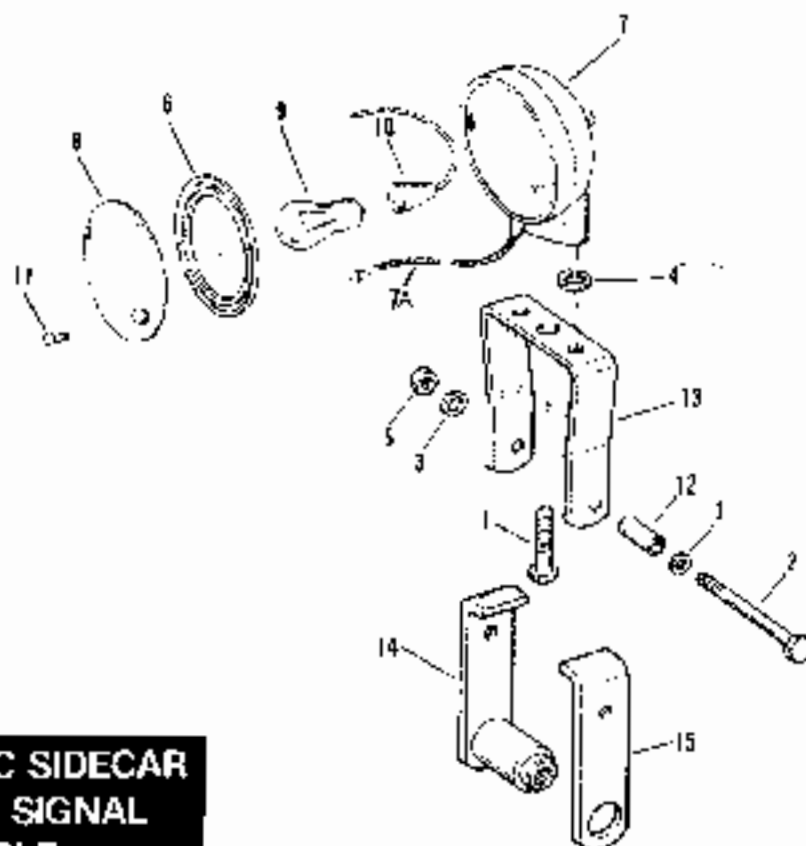


**CLASSIC SIDECAR
TURN SIGNAL
— CLE —**

CLASSIC SIDECAR TURN SIGNAL — CLE


A100

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2884	SCREW, 10-24 x 7-16 Pozidriv pan hd. (2)	79 10 * — CLE
	2	4431W	BOLT, 3/8-24 x 2-3/4 hex. hd.	79 10 * — CLE
	3	6416	WASHER, 3/8 x 1 x 5/16 (4)	79 10 * — CLE
	4	7006	LOCKWASHER, No. 13 (2)	79 10 * — CLE
	5	7790	LOCKNUT, 3/8-24 x 3/8 x 1-1/16 hex.	79 10 * — CLE
	6	68521-634	GASKET, sidecar turn signal lens	79 10 * — CLE
	7	68552-70A	LAMP WITH WIRE — sidecar turn signal (amb.)	79 10 * — CLE
	7A	6A354-80	WIRING, turn signal	82 10 * — CLE
	8	66571-60A	LENS, sidecar turn signal	79 10 * — CLE
	9	68572-644	BOLT, sidecar turn signal temp.	79 10 * — CLE
	10	68576-70	SOCKET AND WIRE, sidecar turn signal	79 10 * — CLE
	11	68586-60	SCREW, lens mounting — sidecar turn signal (2)	79 10 * — CLE
		68586-60A	SCREW, lens mounting — sidecar turn signal (2)	82 10 * — CLE
	12	97120-79	SPACER, turn signal and spring shackle	79 10 * — CLE
	13	97121-79	BRACKET, sidecar turn signal	79 10 * — CLE
	14	98301-70	SHACKLE PLATE, with bushing, turn signal arm spring	79 10 * — CLE
	15	98302-70	SHACKLE PLATE, turn signal and spring	79 10 * — CLE

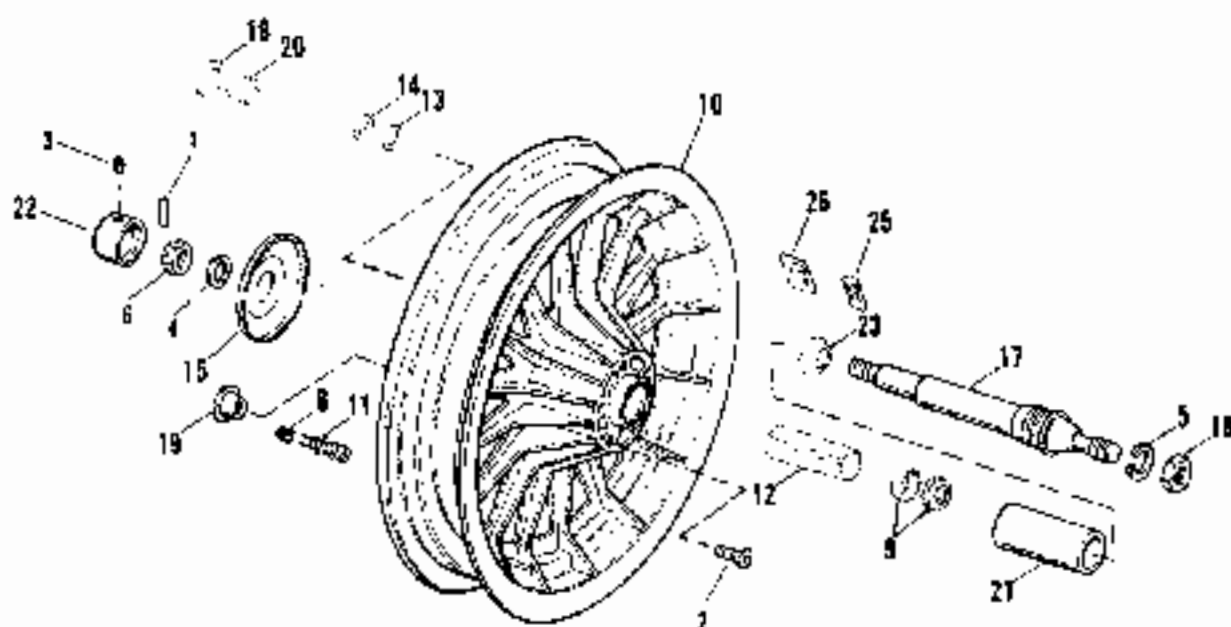


**CLASSIC SIDECAR
CAST WHEEL
— CLE —**

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	1	601	ROLL PIN, 1/8 dia. x 3/4" lg.	79 10 * — CLE
	2	7040	SCREW 7/16-14 x 1-1/4 dia. 18-100-1/4" lg.	79 10 * — CLE
	3	7050W	SET SCREW 1/4-20 x 1-1/8 dia. 18-100-1/4" lg.	79 10 * — CLE
	4	6050	WASHER 5/16 x 1 1/8 x 15 x 3/32	79 10 * — CLE
	5	7043	LOCKWASHER 3/4	79 10 * — CLE
	6	7320	CASTLE NUT 5/8" dia. with 1/2-16 hex	79 10 * — CLE
	8	41123-79	VALVE CAP	83 10 * — CLE
	9	41124-81	ROLLER BEAR NG, sidecar wheel	79 10 * — CLE
	10	41126-79	WHEEL, cast, with 41124-81 BEAR NG (black)	79 10 * — CLE
	11	43157-83A	VALVE STEM	83 10 * — CLE
	12	43292-82	SLEEVE, inner	83 10 * — CLE
	13	43293-82	SPACER -- .032 thick	83 10 * — CLE
		43291-82	SPACER -- .016 thick	83 10 * — CLE
		43290-82	SPACER -- .006 thick	83 10 * — CLE
		43292-82	SPACER -- .004 thick	83 10 * — CLE
		43294-82	SPACER -- .002 thick	83 10 * — CLE
	14	43655-82	WASHER, with flange	83 10 * — CLE
	15	44444-79	HUB CAP, sidecar (chrome)	79 10 * — CLE
	16	47519-83	OIL SEAL, outer -- axle	83 10 * — CLE
		47519-83A	OIL SEAL, outer -- axle	83 — CLE
	17	87435-79	AXLE, sidecar	79 10 * — CLE
	18	87444-33	AXLE NUT (inside frame)	79 10 * — CLE
	19	87700-79	CAP, sidecar wheel, outer (chrome)	79 10 * — CLE
	20	87703-79	SPACER, outer -- axle	79 10 * — CLE
	21	87704-79	SLEEVE, axle bearing	79 10 * — CLE
	22	87705-79	CAP, axle end	79 10 * — CLE
	23	87706-79	AXLE NUT -- 5/8	79 10 * — CLE
	25	55590-77	WHEEL WEIGHT, 1/2 oz. (black)	79 10 * — CLE
	26	55591-77	WHEEL WEIGHT, 1 oz. (black)	79 10 * — CLE

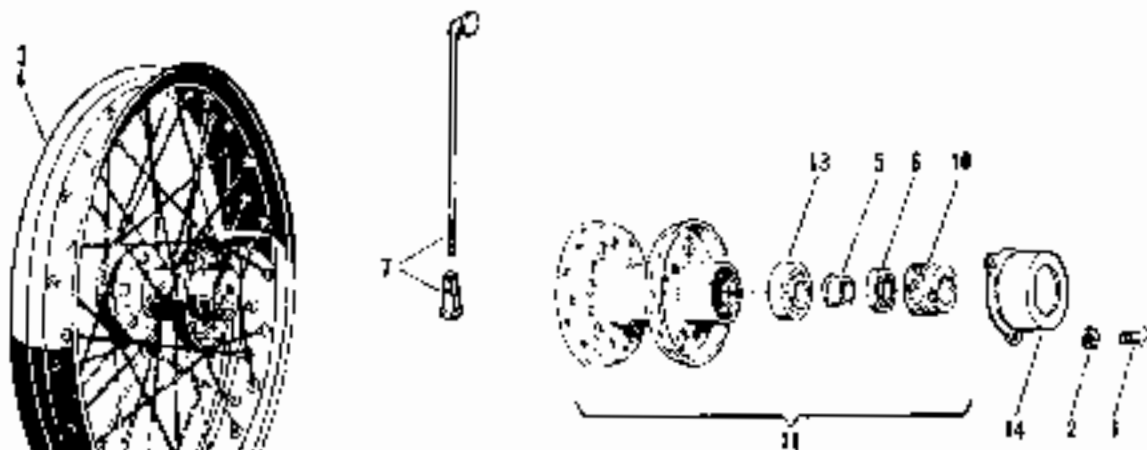


SIDECAR WHEEL
— LE —


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	2000	SCREW, No. 10-24 x 3/8 Poz. drv pan hd.	67 to 79 — LE
	2	7-18	LOCKWASHER, No. 10 interna. thread	67 to 79 — LE
	3	40982-76	WHEEL ASSEMBLY, 16 in. (chrome)	76 to 79 — LE
	4	40985-76	WHEEL ASSEMBLY, 16 in. (black)	76 to 76 — LE
	5	4-196-55	SPACER, wheel hub	67 to 79 — LE
	8	4-210-55	OIL SEAL, wheel bearing	67 to 79 — LE
	7	40032-40A	SPOKE AND WIPPLE SET — metric (40)	67 to 79 — LE
	10	40542-67	LOCKWUT, wheel bearing	67 to 79 — LE
	11	40551-76	WHEEL HUB, complete	67 to 79 — LE
		40567-76	WHEEL HUB REPLACEMENT KIT	N/A 41 to 75 — LE
	13	40577-67	BEARING, wheel hub (brake drum — Early 76 & earlier)	67 to 79 — LE
	14	40582-70	RETAINER, wheel bearing locknut	67 to 79 — LE

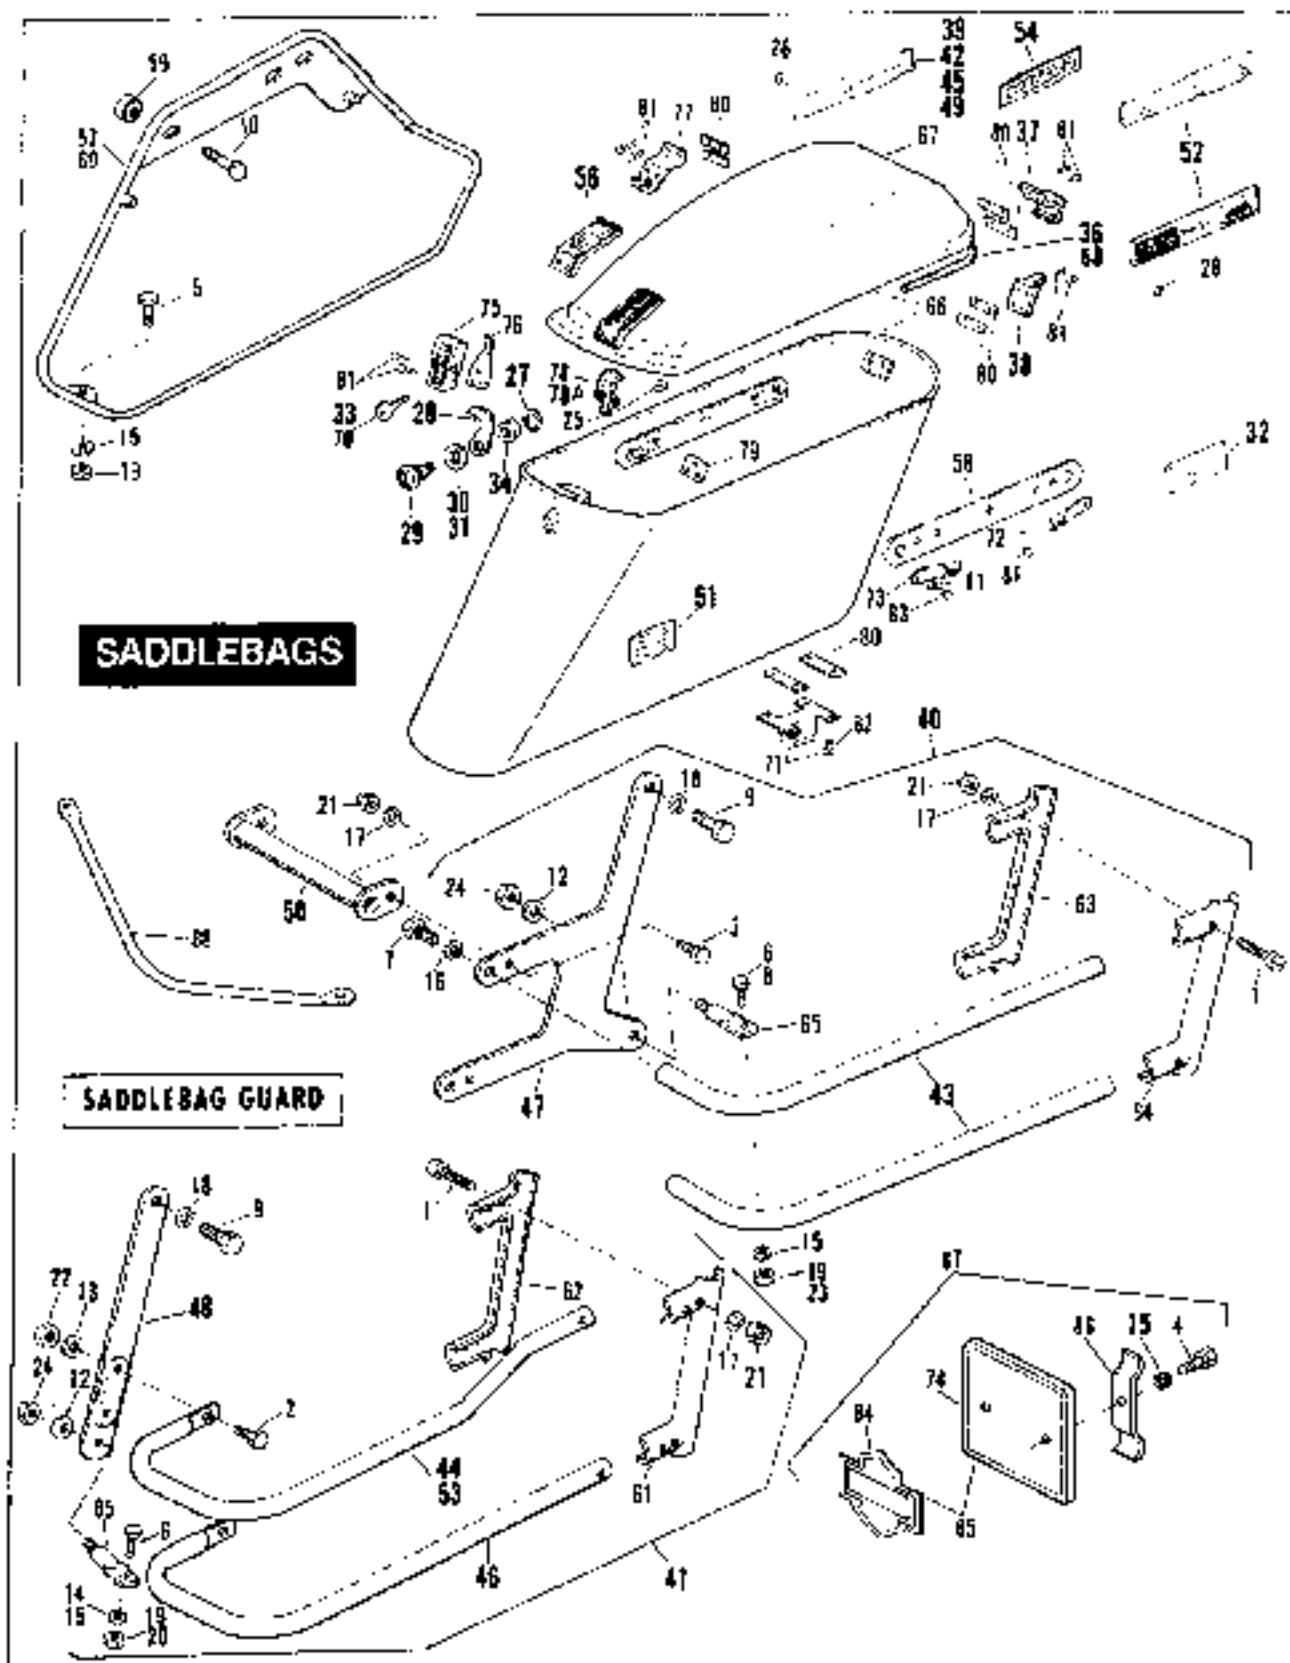


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
NOTE: REFER TO STAFF ACCESSORY GUIDE FOR ADDITIONAL PAINTED PARTS				
	1	2821W	SCREW, 1/4-28 x 1-1/4 hex. hd. (4)	68 to * - FL, FLH, FLH-80, Classic
	2	2822W	BOLT, 5/16-18 x 5/8 hex. hd. (4)	70 to * - FL, FLH, FLH-80, Classic
	3	3730	BOLT, 1/4-28 x 5/8 hex. hd. (4)	68 to 77 - FL, FLH
	4	3767B	BOLT, 1/4-20 x 5/8 hex. hd. (4)	78 to * - FL, FLH, FLH-80, Classic
	5	3875	BOLT, 1/4-28 x 1 hex. hd. (2)	63 to * - FL, FLH, FLH-80, Classic
	6	3826	BOLT, 1/4-28 x 1-1/4 hex. hd. (2)	68 to 76 - FL, FLH
				78 to * - FL, FLH, FLH-80, Classic
	7	3874HW	BOLT, 5/16-24 x 3/4 hex. hd. (4)	68 to 77 - FL, FLH
	8	4014W	BOLT, 5/16-24 x 1-1/4 hex. hd.	77 - FL, FLH
	9	4320W	BOLT, 5/16-24 x 1-3/8 hex. hd. (2)	68 to * - FL, FLH, FLH-80, Classic
	10	4341W	BOLT, 5/16-24 x 1-5/8 hex. hd. (4)	63 to * - FL, FLH, FLH-80, Classic
	11	6046W	WASHER, 1/2 x 1/4 x 1/32 (4)	78 to * - FL, FLH, FLH-80, Classic
	12	6701	WASHER, 3/8 x 1/2 x 1/16 (2)	68 to * - FL, FLH, FLH-80, Classic
	13	6702	WASHER, 5/16 x 1/2 x 1/16 (4)	78 to * - FL, FLH, FLH-80, Classic
	14	6703	WASHER, 1/4 x 5/8 x 1/16	78 to * - FL, FLH, FLH-80, Classic
	15	7036	LOCKWASHER, 1/4 (2, 6-79 & later)	63 to * - FL, FLH, FLH-80, Classic
	16	7041	LOCKWASHER, 5/16 (4)	68 to 77 - FL, FLH
	17	7124	LOCKWASHER, 1/4 internal lock (8)	68 to Early 80 - FL, FLH, FLH-80, Classic
	18	7202	LOCKWASHER, 5/16 external lock (2)	68 to * - FL, FLH, FLH-80, Classic
	19	7676	NUT, 1/4-28 x 3/16 x 7/16 hex. (2)	63 to 76 - FL, FLH
	20	7682	LOCKNUT, 1/4-28 x 3/16 x 7/16 hex.	78 to * - FL, FLH, FLH-80, Classic
	21	7683	LOCKNUT, 1/4-28 x 5/16 x 7/16 hex. (8)	78 to * - FL, FLH, FLH-80, Classic
		7684	ACORN NUT, 1/4-28 x 1/2 x 3/8 hex. (4; 8-78 & later)	Late 80 to * - FL, FLH, FLH-80, Classic
	22	7710W	LOCKNUT, 5/16-18 x 5/4 x 1/2 hex. (4)	78 to * - FL, FLH, FLH-80, Classic
	23	7753	NUT, 5/16-24 x 1/4 x 1/2 hex. (2)	77 - FL, FLH
	24	7775	LOCKNUT, 3/8-24 x 7/16 x 9/16 hex. (2)	68 to * - FL, FLH, FLH-80, Classic
	25	8135B	SPEED NUT (2)	70 to 82 - FL, FLH
	26	8160	SPEED NUT, saddlebag cover (6)	76 to * - FL, FLH
	27	1101B	RETAINING RING (2)	60 to * - FLH-80
	28	5330B-69	LOCKING HOOK, saddlebag	70 to 80 - FL, FLH, FLH-80, Classic
		5330B-80	LOCKING HOOK, saddlebag	81 to * - FLH-80, Classic
	29	53307-69	LOCK, saddlebag - 4 thin tabs & key	70 to * - FL, FLH, FLH-80
	30	53324-69	WASHER, saddlebag lock	70 to * - FL, FLH, FLH-80
	31	53039-69	WASHER, body lock	70 to * - FL, FLH, FLH-80, Classic
	32	56255-72	REFLECTOR (each) (2)	72 to * - FL, FLH, FLH-80, Classic
		58263-79	REFLECTOR (each) (2)	Early 81 - FLH-80, Classic
	33	71676-C7	KEY (indicate serial no.)	N/A 73 to 84 - FL, FLH, FLH-80, Classic
	34	90633-80	ROLLER, saddlebag latch - 0.580 diameter	93 to * - FLH-80
		90634-90	ROLLER, saddlebag latch - 0.450 diameter	93 to * - FLH-80
		90637-90A	SAFETY bag cover	81 to * - FLH-80, Classic
	37	90744-75	HINGE, top (2)	79 to * - FL, FLH, FLH-80, Classic
	38	90745-79A	HINGE, bottom (2)	79 to * - FL, FLH, FLH-80, Classic
		90746-79	HINGE KIT (converts 2 saddlebags)	70 to 76 - FL, FLH, FLH-80
	39	90792-78	TRIM ASSEMBLY, left cover (red)	78 to 80 - FL, FLH, FLH-80
		90793-78	TRIM ASSEMBLY, left cover (blue)	N/A 78 - FL, FLH, FLH-80, Classic
		90794-78	TRIM ASSEMBLY, left cover (brown)	N/A 78 - FL, FLH, FLH-80, Classic
		90795-78	TRIM ASSEMBLY, left cover (gold)	N/A 78 - FL, FLH, FLH-80
		90796-78	TRIM ASSEMBLY, left cover (black cherry)	78 - FL, FLH, FLH-80
	40	90800-68	SADDLEBAG GLAZING KIT	63 to 77 - FL, FLH
	41	90900-78	SADDLEBAG GLAZING KIT	78 to * - FL, FLH, FLH-80, Classic
	42	90902-78	TRIM ASSEMBLY, right cover (red)	78 to 80 - FL, FLH, FLH-80
		90903-78	TRIM ASSEMBLY, right cover (blue)	N/A 78 - FL, FLH, FLH-80, Classic
		90904-78	TRIM ASSEMBLY, right cover (brown)	N/A 78 - FL, FLH, FLH-80, Classic
	43	90905-68	SADDLEBAG GLAZING KIT	N/A 68 to 77 - FL, FLH
	44	90906-78	SADDLEBAG GLAZING KIT - right	78 to * - FL, FLH, FLH-80, Classic
	45	90906-78	TRIM ASSEMBLY, right cover (gold)	N/A 78 - FL, FLH, FLH-80
	46	90907-78	SADDLEBAG GLAZING KIT - lower (2)	78 to * - FL, FLH, FLH-80, Classic
	47	90908-68	BRACKET, saddlebag (each) (2)	68 to 77 - FL, FLH

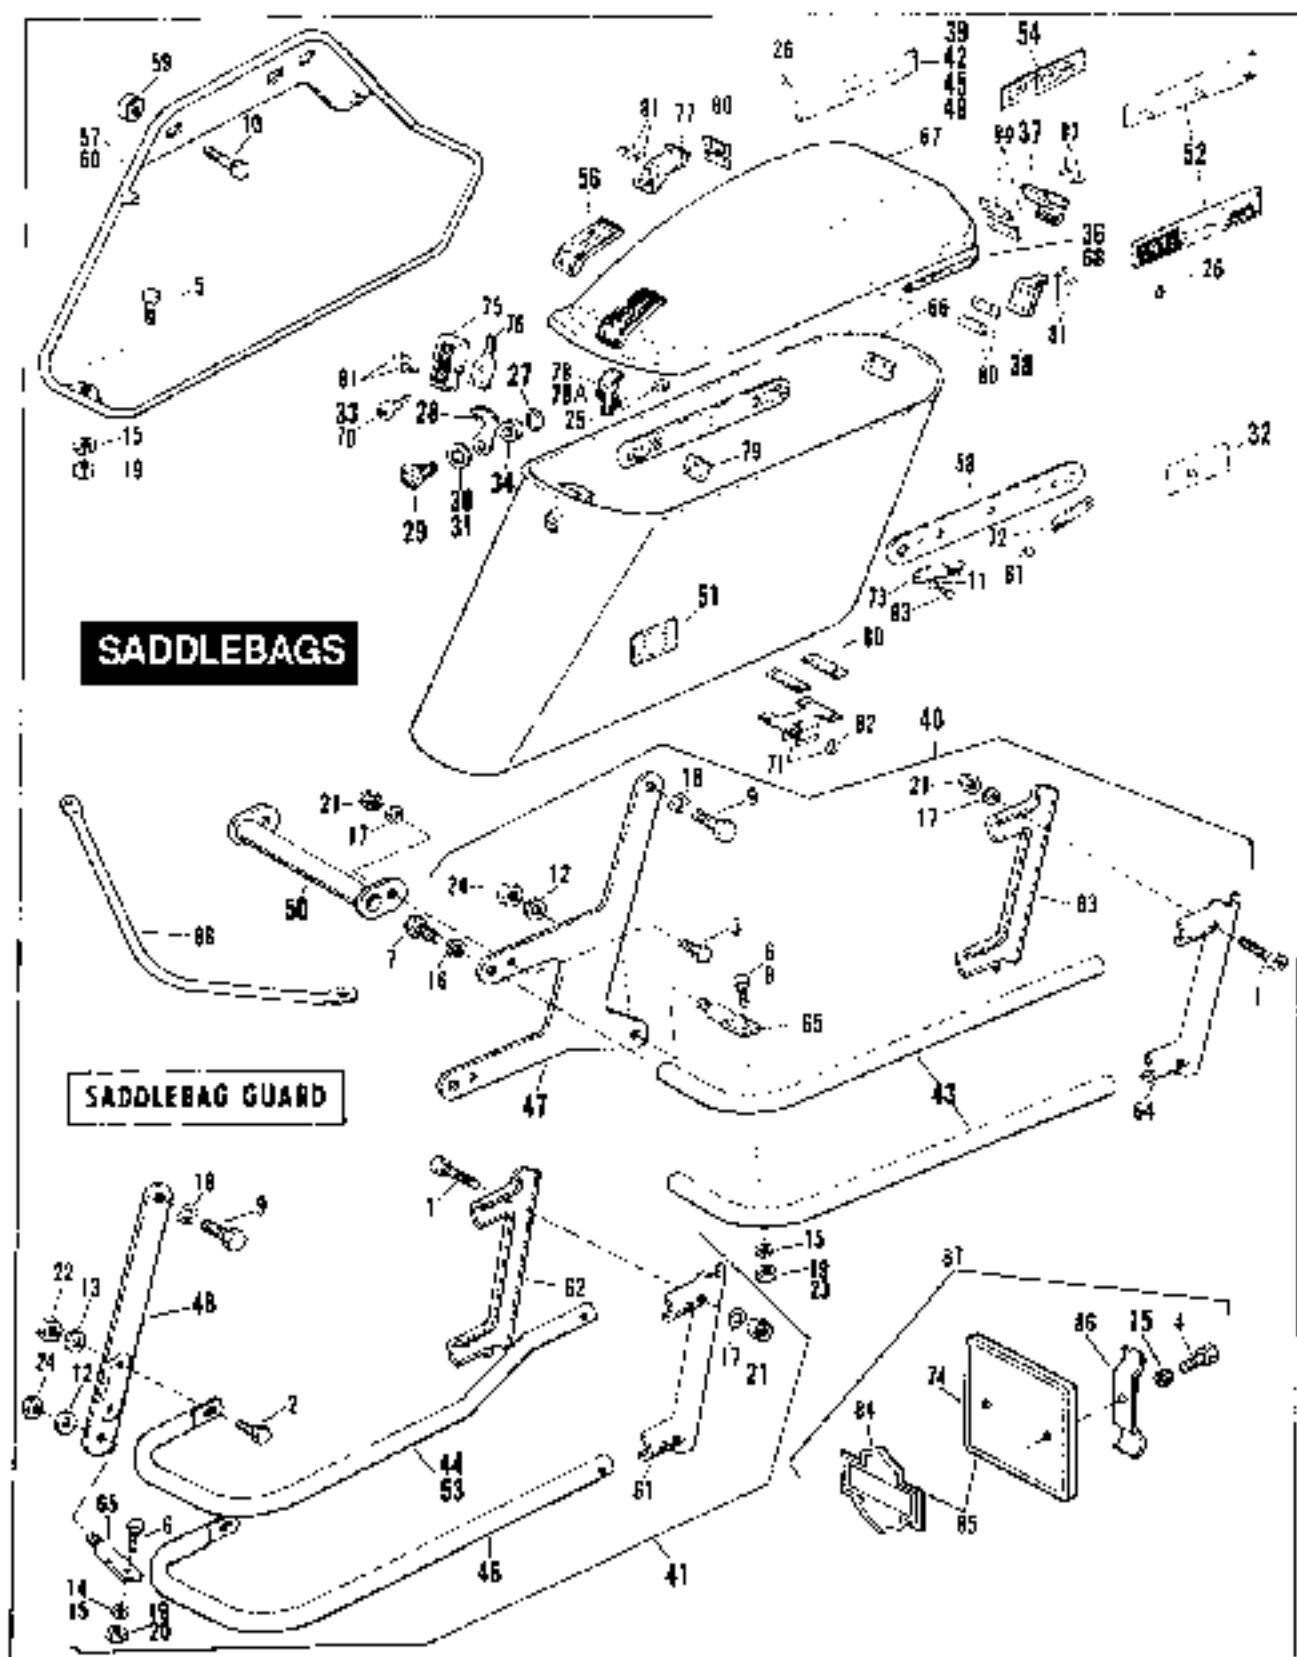

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
NOTE: REFER TO DEALER ACCESSORY GUIDE FOR ADDITIONAL PAINTED PARTS.				
48		90809-02	RFACKEIT, saddlebag guard (2)	78 to * - FL, FLH, FLH-80, Classic
49		90810-078	TRIM ASSEMBLY, right cover, black/cherry	78 - FL, FLH, FLH-80
50		90811-068	SADDLEBAG GUARD, rear (2)	68 to 77 - FL, FLH
		90820-77A	LABEL, saddlebag load m.l.	68 to * - FL, FLH, FLH-80, Classic
52		90822-75	TRIM, saddlebag - right, "1376"	N/A 75 - FL, FLH
		90823-77	TRIM, saddlebag - right, "King of the Highway"	N/A 77 - FL, FLH
		90822-79	TRIM, saddlebag cover (2)	78 to * - FL, FLH, FLH-80, Classic
		90823-75	TRIM, saddlebag - left, "978"	N/A 76 - FL, FLH
		90823-77	TRIM, saddlebag - left, "King of the Highway"	N/A 77 - FL, FLH
53		90830-73	SADDLEBAG GUARD, upper - left	78 to * - FL, FLH, FLH-80, Classic
54		90841-79	DECAL, saddlebag cover "90 CUBIC INCHES" (green)	79 to 81 - FLH-80
		90842-79	DECAL, saddlebag cover "90 CUBIC INCHES" (blue)	79 to 81 - FLH-80
		90843-79	DECAL, saddlebag cover "90 CUBIC INCHES" (brown)	79 to 81 - FLH-80
		90845-79	DECAL, saddlebag cover, "90 CUBIC INCHES" (light brown) (2)	79 & 80 - Classic
		90849-77E	SADDLEBAGS AND CARRIER (white)	68 to * - FL, FLH, FLH-80, 79 to 81 - Classic
		90851-77E	SADDLEBAGS AND CARRIER (black)	68 to * - FL, FLH, FLH-80, 79 to 81 - Classic
56		90871-70	LOCK PLATE (2)	70 to * - FL, FLH, FLH-80, Classic
57		90875-77A	SUPPORT BRACKET, right (order w/kit for Early 77 & earlier)	63 to * - FL, FLH, FLH-80, Classic
		90877-77B	SUPPORT BRACKET, left (order w/kit for Early 77 & earlier)	63 to * - FL, FLH, FLH-80, Classic
59		90891-67	SUPPORT PLATE (2)	63 to * - FL, FLH, FLH-80, Classic
59		90908-68	SUPPORT, support bracket (4)	77 to * - FL, FLH, FLH-80, Classic
60		90910-67	SUPPORT BRACKET, left - radio	67 to 78 - FL, FLH, FLH-80
61		90914-78	CLAMP, saddlebag guard, right (2)	78 to * - FL, FLH, FLH-80, Classic
62		90918-78	CLAMP, saddlebag guard, left (2)	78 to * - FL, FLH, FLH-80, Classic
63		90913-80	CLAMP, saddlebag guard, left (2)	69 to 77 - FL, FLH
64		90920-86	CLAMP, saddlebag guard, right (2)	69 to 77 - FL, FLH
65		90921-86	STUD, saddlebag guard	68 to * - FL, FLH, FLH-80, Classic
66		90924-87C	SADDLEBAG, left (G.E. or tube type Motorola radio) (black)	67 to * - FL, FLH, FLH-80, Classic
		90924-88C	SADDLEBAG, left (Solid-State Motorola radio) (black)	68 to * - FL, FLH, FLH-80, Classic
		90925-87C	SADDLEBAG, left (G.E. or tube type Motorola radio) (white)	67 to * - FL, FLH, FLH-80, Classic
		90925-88C	SADDLEBAG, left (Solid-State Motorola radio) (white)	N/A 68 to * - FL, FLH, FLH-80, Classic
67		90921-70A	SADDLEBAG COVER (white)	N/A 70 to 80 - FL, FLH, FLH-80, Classic
68		90937-64	MOLTING, bag cover	60 to 80 - FL, FLH, FLH-80, Classic
70		90947-63	SADDLEBAG KEY	60 to 69 - FL, FLH
71		90948-63A	SPRING CLIP, with levers (2)	63 to * - FL, FLH, FLH-80, Classic
72		90952-63	LOCKING CLIP, left	60 to * - FL, FLH, FLH-80, Classic
73		90953-63	LOCKING CLIP, right	63 to * - FL, FLH, FLH-80, Classic
74		90955-79	BACK PLATE, saddlebag guard nameplate	79 to * - FL, FLH, FLH-80, Classic
75		90957-64	SADDLEBAG LOCK KIT, with anchor plate	63 to 69 - FL, FLH
76		90960-64	LATCH PLATE, saddlebag	Late 64 to 69 - FL, FLH
77		90961-63A	LOCK PLATE, bag cover	50 to 69 - FL, FLH
78		90961-70A	LATCH (2)	70 to 80 - FL, FLH, FLH-80, Classic
78A		90961-80	LATCH (2)	81 to * - FLH-80, Classic
79		90963-63	BACKING PLATE, lock	60 to 69 - FL, FLH
80		90964-63	BACKING PLATE, mounting clips	63 to * - FL, FLH, FLH-80, Classic
81		90985-63	4-VET, saddlebag clips - 5/16" g. (25)	63 to * - FL, FLH, FLH-80, Classic
82		90986-67	4-VET, saddlebag clips - 1/4" g. (16)	Late 67 to * - FL, FLH, FLH-80, Classic
83		90967-64	RIVET, saddlebag - 3/8" lg. (8)	Late 64 to * - FL, FLH, FLH-80, Classic
84		90971-79	NAME PLATE, saddlebag guard	79 to * - FL, FLH, FLH-80, Classic
85		90972-79	NAMER, ATT. ASSMBLY, saddlebag guard (2)	79 to * - FL, FLH, FLH-80, Classic
86		90973-79	BRACKET, nameplate assembly (4)	79 to * - FL, FLH, FLH-80, Classic
87		90974-79	NAMER PLATE KIT, saddlebag guard - includes index nos. 4, 15, 65 & 86	78 to * - FL, FLH, FLH-80, Classic
92		90989-63	REAR CROSS BRACE	63 to * - FL, FLH, FLH-80, Classic


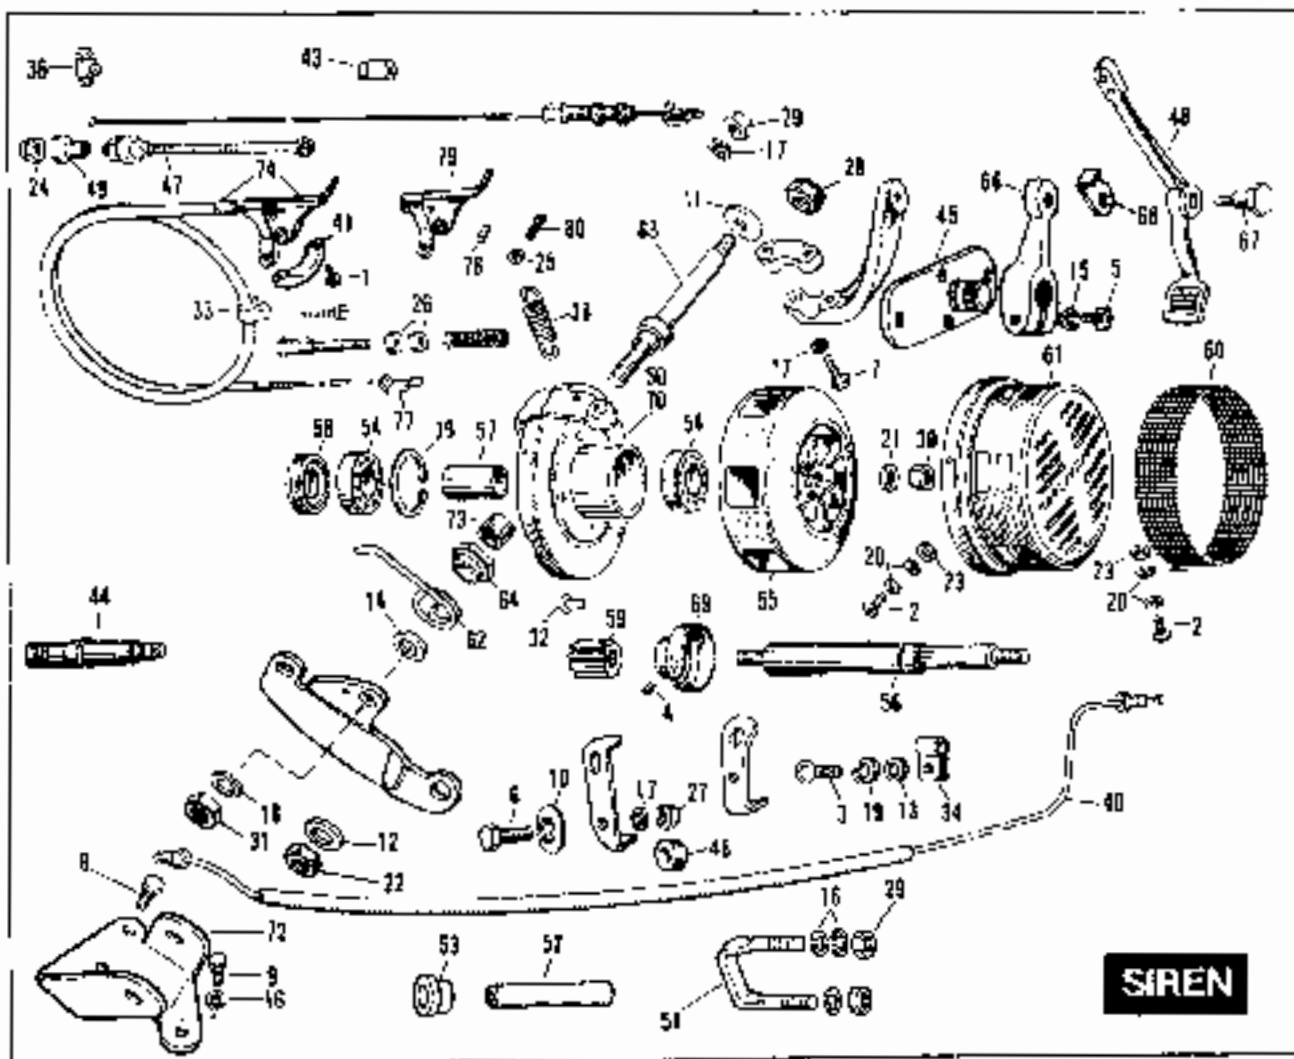


RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	1084	SCREW, No. 10-24 x 1/2 Posi-drive pan hd.	58 to * — FL, FLH, FLH-80
	2	2085	SCREW, No. 10-24 x 5/16 Posi-drive pan hd.	58 to * — FL, FLH, FLH-80
	3	2485	SCREW, No. 10-24 x 1/2 Posi-drive pan hd.	57 to * — FL, FLH, FLH-80
	4	3233	SET SCREW, 1/4-28 x 1/8 socket hd.	58 to * — FL, FLH, FLH-80
	5	3825	BOLT, 1/4-28 x 1 hex. hd.	58 to * — FL, FLH, FLH-80
	6	3960W	BOLT, 5/16-24 x 1 hex. hd.	58 to * — FL, FLH, FLH-80
	7	4017	BOLT, 5/16-18 x 1 hex. hd. (2)	49 to 63 — FL, FLH
	8	4411	BOLT, 3/8-24 x 1-3/4 hex. hd.	73 to * — FL, FLH, FLH-80
	9	4441W	BOLT, 3/8-24 x 1 hex. hd.	73 to 79 — FL, FLH, FLH-80
	10	6333	WASHER, 5/16 x 1/8 x 5/64	58 to * — FL, FLH, FLH-80
	11	6406H2	WASHER, 3/8 x 1/4 x 3/32	Late 58 to * — FL, FLH, FLH-80
	12	6590HW	WASHER, 1/2 x 1/4 x 3/32	69 to * — FL, FLH, FLH-80
	13	6716	WASHER, No. 10 x 1/2 x 3/64	67 to * — FL, FLH, FLH-80
	14	6718	WASHER, 1/2 x 1-1/16 x 3/32	Late 58 to Early 69 — FL, FLH
	15	7038	LOCKWASHER, 1/4	58 to * — FL, FLH, FLH-80
	16	7038	LOCKWASHER, 3/8	73 to * — FL, FLH, FLH-80
	17	7041	LOCKWASHER, 5/16	49 to * — FL, FLH, FLH-80
	18	7060	LOCKWASHER, 1/2	49 to * — FL, FLH, FLH-80
	19	7069	LOCKWASHER, No. 10	67 to * — FL, FLH, FLH-80
	20	7115	LOCKWASHER, No. 8 int. tooth (3)	58 to * — FL, FLH, FLH-80
	21	7138	LOCKWASHER, 7/16 int. tooth	58 to Early 69 — FL, FLH
	22	7572W	LOCKNUT, 1/2-20 x 19/32 x 3/4 hex.	Late 69 to * — FL, FLH, FLH-80
	23	7608	NUT, No. 8-32 x 1/8 x 5/16 hex. (3)	58 to * — FL, FLH, FLH-80
	24	7626W	LOCKNUT, No. 10-32 x 3/15 x 3/8 hex.	70 to * — FL, FLH, FLH-80
	25	7676	NUT, 1/4-28 x 3/16 x 7/16 hex.	58 to * — FL, FLH, FLH-80
	26	7744	NUT, 5/16-24 x 3/16 x 1/2 hex. (2)	58 to * — FL, FLH, FLH-80
	27	7753	NUT, 5/16-24 x 1/4 x 1/2 hex. (2)	49 to * — FL, FLH, FLH-80
	28	7775	LOCKNUT, 3/8-24 x 7/15 x 9/15	Late 69 to * — FL, FLH, FLH-80
	29	7800W	NUT, 3/8-24 x 5/15 x 9/15 hex.	73 to * — FL, FLH, FLH-80
	30	7807W	NUT, 7/16-20 x 3/8 x 1 1/16 hex.	58 to * — FL, FLH, FLH-80
	31	7921	NUT, 1/2-20 x 7/16 x 1 hex.	58 to Early 69 — FL, FLH
	32	8524	RIVET, 3/16 x 3/8 x 1 1/32 dia. rd. hd.	Late 55 to * — FL, FLH, FLH-80
	33	9058	CLAMP, wire cable	Late 59 to Early 71 — FL, FLH
		9961	CABLE CLIP	Late 67 to * — FL, FLH, FLH-80
		9965W	CABLE CLIP	58 to * — FL, FLH, FLH-80
	34	9995	CLAMP, brake hose to steel bracket	N/A 58 to 77 — FL, FLH, FLH-80
	35	11704	RETAINING RING	58 to * — FL, FLH, FLH-80
	36	38641-61P	CABLE BLOCK WITH SCREWS	Late 71 to * — FL, FLH, FLH-80
	38	41937-58	CABLE SPRING	58 to 71 — FL, FLH
	40	47003-73A	HYDRAULIC LUBE, rear brake	N/A 70 to 77 — FL, FLH, FLH-80
	41	45030-65A	CAP, hand lever bracket	65 to * — FL, FLH, FLH-80
		45073-26	CONTROL COIL, 1/64 I.D. x 5/16 O.D. pack w/nyl covered — 25 lb.	58 to 79 — FL, FLH, FLH-80
	43	45161-71	CABLE END, hand control w/steel lever cable	Early 71 to * — FL, FLH, FLH-80
	44	54516-58	STRIP, shock absorber — felt	N/A 58 to Early 67 — FL, FLH
	45	60574-65	SUPPORT PLATE, on chain housing cover	65 to * — FL, FLH, FLH-80
	46	91089-66	SPACER, brake hose pipe	Late 65 to * — FL, FLH, FLH-80
		91126-73	SIREN AND FITTINGS (foot-operated)	73 to 79 — FL, FLH, FLH-80
		91129-73	SIREN AND FITTINGS (hand or hand control)	73 to 79 — FL, FLH, FLH-80
	47	91134-70	ROD ASSEMBLY, rear siren	70 to * — FL, FLH, FLH-80
	48	91135-70	FOOT LAYER AND BUSHING	70 to * — FL, FLH
	49	91147-70	ROD END, rear siren	70 to * — FL, FLH, FLH-80

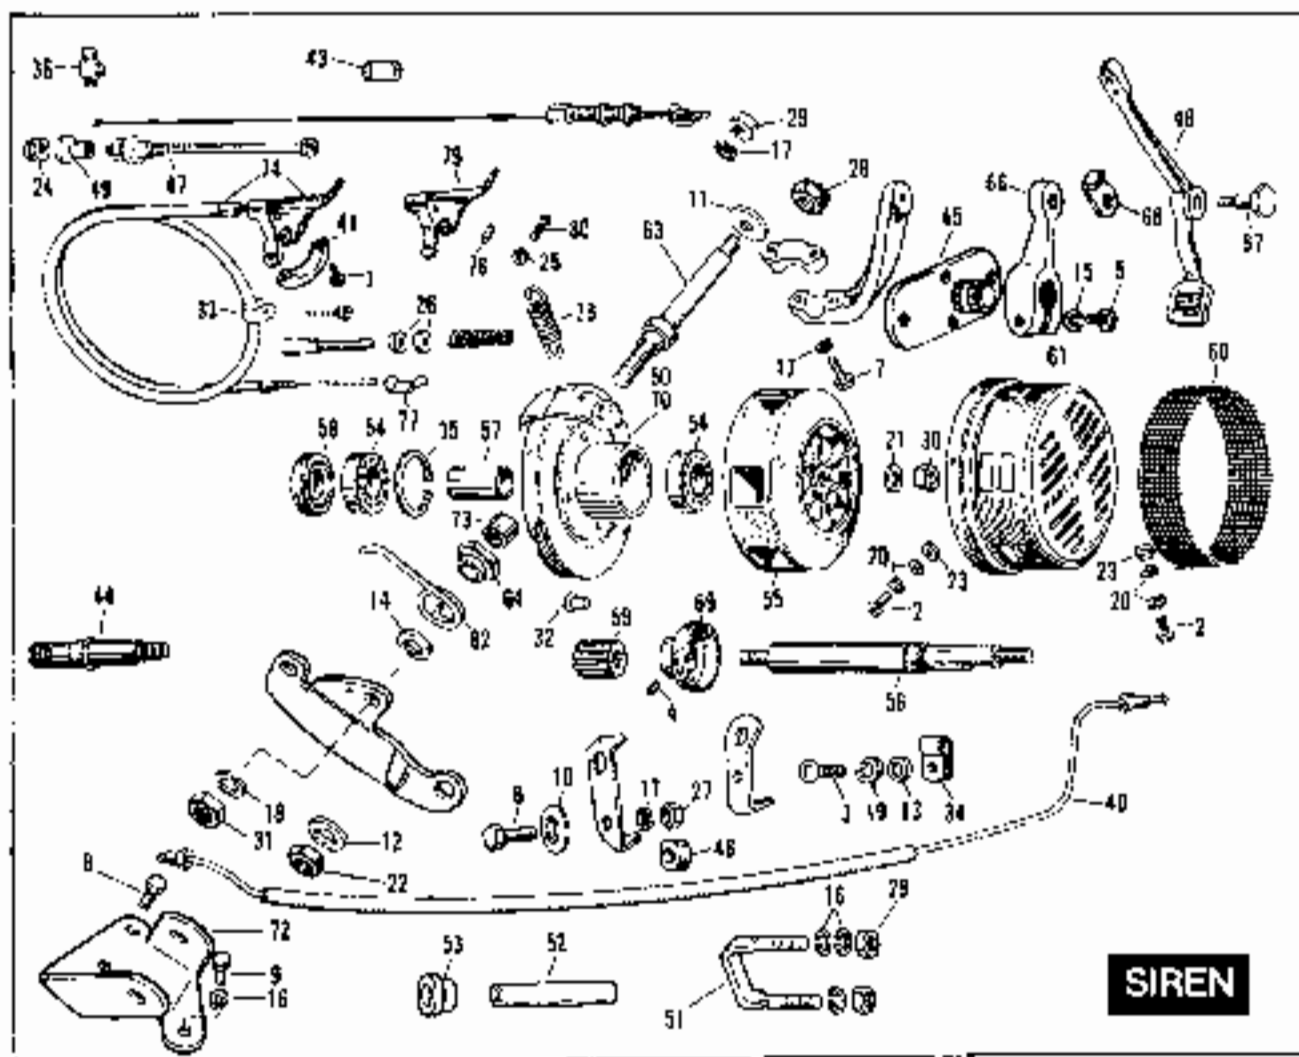


RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	50	91143-70	HUB, rear siren	Late 67 to * = FL, FLH, FLH-80
	51	91144-70	U-BOLTS	73 to * = FL, FLH, FLH-80
	52	91147-70	SLEEVE, rear siren support	73 to * = FL, FLH, FLH-80
	53	91148-70	SPRING COLLAR, rear siren support	73 to * = FL, FLH, FLH-80
	54	91153-48	BALL BEAM VOLTAGE	48 to 57, 60 to * = FL, FLH, FLH-80
	55	91160-58	ROTOR	58 to * = FL, FLH, FLH-80
	56	91162-59	ROTOR SHAFT, rear siren	Late 59 to * = FL, FLH, FLH-80
	57	91163-58	SPACER, rotor shaft	58 to * = FL, FLH, FLH-80
	58	91164-58A	BEARING RETAINER	58 to * = FL, FLH, FLH-80
	58	91168-59	TIME ROLLER, rear siren	Late 59 to Early 67 = FL, FLH
		91168-67	TIME ROLLER, siren	Late 67 to * = FL, FLH, FLH-80
	59	91191-59	SCREEN, rear siren cover	Late 58 to * = FL, FLH, FLH-80
	61	91192-58	COVER, rear siren	58 to * = FL, FLH, FLH-80
	62	91226-50	SPR VOLTAGE	Late 59 to Early 67 = FL, FLH 73 to 83 = FL, FLH, FLH-80
		91226-67	SPRING, rear siren	84 to * = FLH-80
	63	91253-59	SUPPORT SHAFT, rear siren	Late 59 to * = FL, FLH, FLH-80
	64	91254-59	COLLAR, support shaft	Late 59 to Early 69 = FL, FLH
	66	91252-61	SUPPORT, foot lever	65 to * = FL, FLH, FLH-80
	67	91257-48	SHAFT, foot lever	48 to * = FL, FLH, FLH-80
	68	91269-58A	FEED STOP	Late 59 to * = FL, FLH, FLH-80
	69	91280-58	DEFLECTOR, rear siren	Late 59 to * = FL, FLH, FLH-80
	70	91305-58A	HUB, rear siren	Late 58 to 60 = FL, FLH
		91309-61	BRACKET, rear siren hub	Late 58 to 60 = FL, FLH
	72	91310-73	JOINING BRACKET, siren	73 to * = FL, FLH, FLH-80
	72	91313-58	ELASTIC, hub bracket	58 to * = FL, FLH, FLH-80
	74	91351-59	HAND LEVER AND CABLE ASSEMBLY, rear siren	Late 58 to Early 80 = FL, FLH, FLH-80
		91350-71	CONTROL CABLE ASSEMBLY, rear siren (hand control with foot lever)	Late 71 to 79 = FL, FLH, FLH-80
		91360-71	COTE, control cable, rear siren (hand control with foot lever)	Late 71 to * = FL, FLH, FLH-80
	76	91372-67	CABLE END	58 to 75 = FL, FLH, FLH-80
	77	91374-59	COCK, cable spring	Late 59 to Early 71 = FL, FLH
	79	91379-58	HAND LEVER ASSEMBLY	58 to * = FL, FLH, FLH-80
	80	91385-58	SCREW, hand lever	58 to * = FL, FLH, FLH-80

ELECTRONIC SIREN AND AMPLIFIER

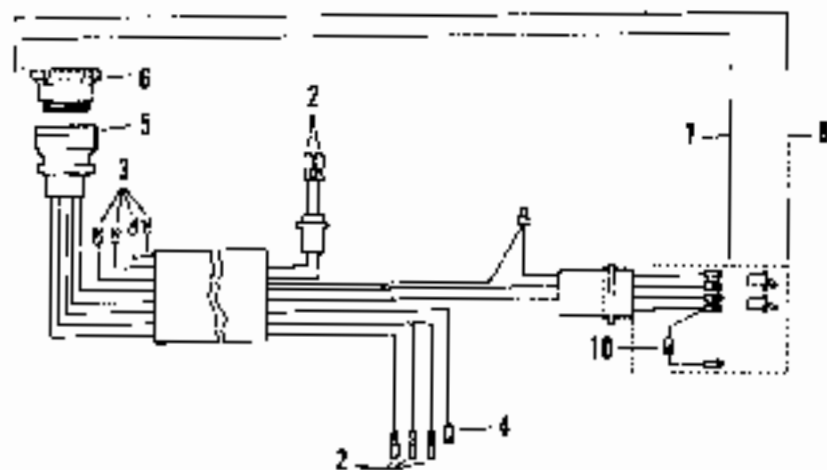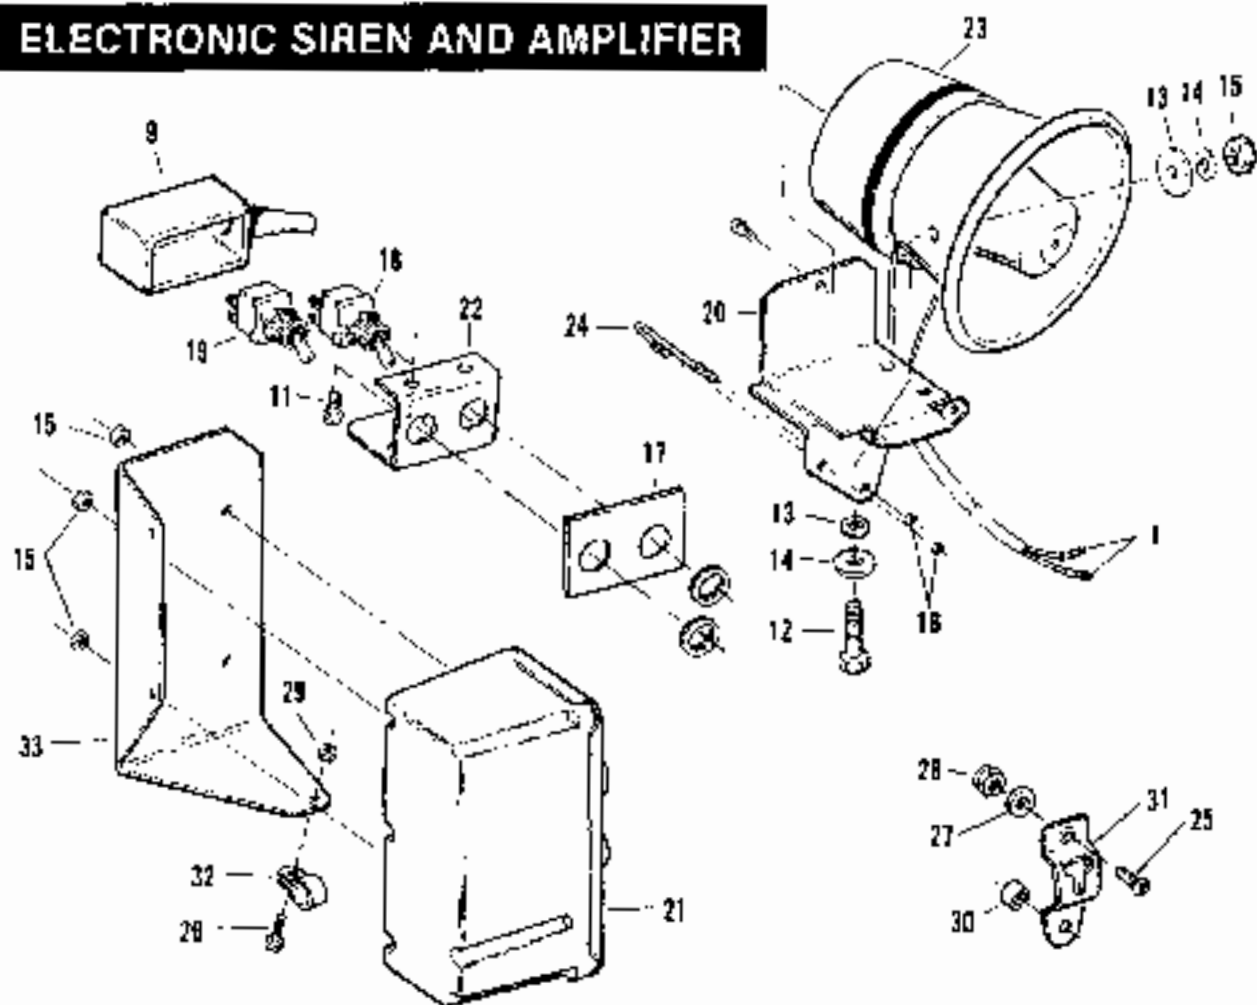

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
	1	9866	CONNECTOR, wire (male) (2)	84 to * - FLH-80
	2	9867	CONNECTOR, wire (female) (2)	84 to * - FLH-80
	3	6856	WIRE TERMINAL, solder type, kn. 8 slot, #14-18 wire (4)	84 to * - FLH-80
	4	9930	WIRE TERMINAL, female space type, 3-15 slot, #18-22 wire	84 to * - FLH-80
		60472-70	INSPECT QV COVER (chrome)	84 to * - FLH-80
	5	69526-33	CONNECTOR, male	84 to * - FLH-80
	6	66510-83	RECEPTACLE, female	84 to * - FLH-80
	7	70344-84	WIRING HARNESS, siren, includes items 2-6, 8 & 10	84 to * - FLH-80
	8	70346-84	WIRING HARNESS, siren & switches, with items 7, 18 & 19	84 to * - FLH-80
	9	71430-83	BOOT, toggle switches	84 to * - FLH-80
	10	71563-85	DIODE (silicon)	84 to * - FLH-80
		91151-90	SIREN KIT Consists of:	84 to * - FLH-80
	11	36874	SCREW, No. 10-24 x 1/2 self-tapping Pan. Hd. (2)	84 to * - FLH-80
	12	36927	BOLT, 1/4-20 x 7/8 hex. hd. (2)	84 to * - FLH-80
	13	6035	WASHER, 1/4 x 1-1/4 x 1/8; neoprene (4)	84 to * - FLH-80
	14	6036	WASHER, 1/4-20 x 1 x 1/8 (4)	84 to * - FLH-80
	15	7666	LOCKWIT, 1/4-20 x 5/16 x 7/16 hex. (6)	84 to * - FLH-80
	16	7739	LOCKWIT, 1/4-20 x 1/2 x 7/16 hex. (2)	84 to * - FLH-80
	17	10021-83	LABEL, siren & amps	84 to * - FLH-80
	18	71431-83	TOGGLE SWITCH, lamps	84 to * - FLH-80
	19	71432-83	TOGGLE SWITCH, siren	84 to * - FLH-80
	20	91127-92	MOUNTING BRACKET, speaker	84 to * - FLH-80
	21	91150-82	AMPLIFIER	84 to * - FLH-80
	22	91152-80	BRACKET, toggle switches	84 to * - FLH-80
	23	91153-80	SPEAKER, includes item 1	84 to * - FLH-80
	24	91159-82	U-BOLT (2)	84 to * - FLH-80
		91191-84	SIREN AMPLIFIER MOUNTING KIT Consists of:	84 to * - FLH-80
	25	2690	SCREW, No. 10-24 x 7/8 Pan. Hd. (2)	84 to * - FLH-80
	26	3987	BOLT, 5/16-18 x 3/4 hex. hd. (2)	84 to * - FLH-80
	27	6716	WASHER, No. 10 x 1/2 x 3/64	84 to * - FLH-80
	28	7624	LOCKWIT, No. 10-24 x 1/4 x 2-5 hex. (2)	84 to * - FLH-80
	29	7740	LOCKWIT, 5/16-18 x 1/4 x 1/2 hex. (3)	84 to * - FLH-80
	30	45076-72	SPACER, microphone bracket	84 to * - FLH-80
	31	76201-80A	HANGER, microphone	84 to * - FLH-80
	32	91173-84	CLAMP, amplifier bracket (3)	84 to * - FLH-80
		91174-84	CLAMP, amplifier bracket	84 to * - FLH-80
	33	91192-84	BRACKET, amplifier mounting	84 to * - FLH-80

RIDER TOOLS

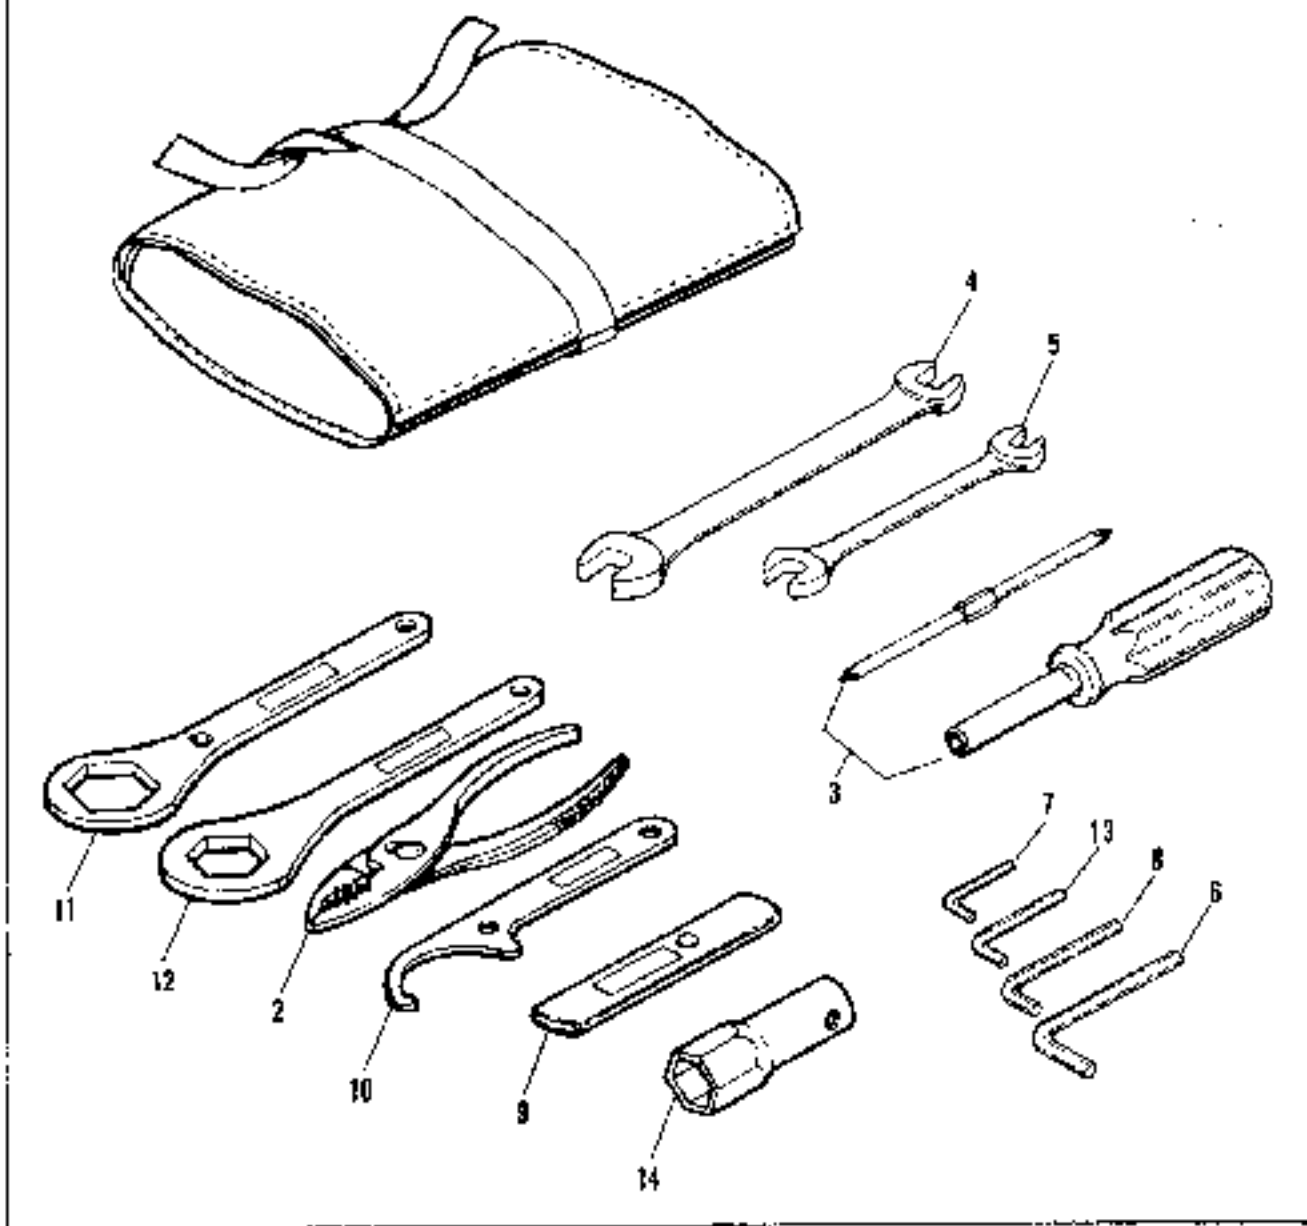

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
	2	94422-82	PLIERS, 6 in.	82 to * - FLH-80, Classic
	3	94423-82	SCREWDRIVER, with Phillips bit	82 to * - FLH-80, Classic
	4	94424-70	WRENCH, open end - 5/16 x 1/2	82 to * - FLH-80, Classic
	5	94425-78	WRENCH, open end - 3/8 x 7/16	82 to * - FLH-80, Classic
	6	94430-78	WRENCH, hex end, 1/4"	N/A 82 to 94 - FLH-80, Classic
	7	94441-82	WRENCH, hex end, 1/8"	82 to * - FLH-80, Classic
	8	94442-82	WRENCH, hex end, 3/16"	82 to * - FLH-80, Classic
	9	94443-82	EXTENSION HANDLE, 6"	82 to * - FLH-80, Classic
	10	94444-82	WRENCH, shock absorber	82 to * - FLH-80, Classic
	11	94445-82	WRENCH, replaceable	82 to * - FLH-80, Classic
	12	94446-82	WRENCH, front axle	82 to * - FLH-80, Classic
	13	94451-82	WRENCH, hex end, 5/32"	82 to * - FLH-80, Classic
	14	94515-68A	SPARK PLUG WRENCH	82 to * - FLH-80, Classic

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
-----------------	--------------	-------------	------	---------

ENGINE & CARBURETOR — PAGE 3-9, 14-21 & 37

27470-81A	CARBURETOR (028F)	Late 81, Late 82 to 84 — FLHS-80
27988-78	MAIN JET, 1.50mm	Late 81 to 84 — FLHS-80
27997-78	LOW SPEED JET, 0.72mm	Late 81 to 84 — FLHS-80

AIR CLEANER — PAGE 47 & 49

3458	SCREW, grill mounting, 5/16-18 x 1 socket hd. (black)	Late 82 — FLHS-80
604E	WASHER, grill mounting, 5/16 x 9/16 x 1/32 (black)	Late 82 — FLHS-80
29024-77	BACK PLATE, air cleaner (snorkle type)	N/A 77 — FLHS
29057-78A	GRILL, air intake	Late 82 — FLHS-80
29096-75	FILTER ELEMENT, foam type — with screen (3-1/2" wide)	77 — FLHS

ELECTRONIC IGNITION SYSTEM — PAGE 55

2731W	SCREW, groundwire &c. 10 x 3/8 self tapping Phillips hd.	Late 81 — FLHS-80
-------	--	-------------------

VOLTAGE REGULATOR — PAGE 241

74534-80	BRACKET, regulator	Late 81 — FLHS-80
----------	--------------------	-------------------

STARTER SHAFT, HOUSING AND MOTOR — PAGE 63, 65 & 69

5715	WASHER (2 - starter motor mount; 2-cell cover)	Late 82) Late 82 & 83 — FLHS-80
31570-73	STARTER MOTOR	Late 81 & Late 82 — FLHS-80
31572-79	STARTER SHAFT HOLDING, with bearing	Late 81 & Late 82 — FLHS-80

TRANSMISSION AND FOOT SHIFTER — PAGE 72-77 & 82-86

33268-78	COVER, transmission	Late 81 to 84 — FLHS-80
33337-83	SPROCKET KIT, trans/halt - includes 857 SCREW	Late 81 & Late 82 — FLHS-80
33664-81	SHIFTER LEVER	Late 81 to 84 — FLHS-80
33683-80	BRACKET ASSEMBLY, brake lever & footrest mounting	Late 81 to 84 — FLHS-80
34609-82	COVER, shift lever (black)	Late 82 to 84 — FLHS-80
35282-79	GEAR, mainshaft, low & second — 17T & 25T	Late 81 to 84 — FLHS-80
35777-79	GEAR, countershaft, second — 24T	Late 81 to 84 — FLHS-80
42517-80	GEAR/SH ASSEMBLY, shifter rod	Late 81 — FLHS-80

LACED WHEELS — PAGE 121 & 123

7825	LOCKRUD, rear wheel assy. 7/16-20 x 7/16 x 5/8 hex (5)	Late 82 & 84 — FLHS-80
11037	REAR/IRING RING, front wheel hub (2)	Late 82 to 84 — FLHS-80
40906-82A	SPACER, rear wheel (2)	Late 82 & 83 — FLHS-80
40908-81	WHEEL ASSEMBLY, 16" — front (chrome)	Late 82 to 84 — FLHS-80
40951-82	WHEEL ASSEMBLY, 16" — rear (chrome)	Late 82 to 84 — FLHS-80
40952-82A	WHEEL HUB, complete — front	Late 82 to 84 — FLHS-80
41196-73	SPACER, front wheel hub (2)	Late 82 to 84 — FLHS-80
41197-73	BOLT, rear sprocket	Late 82 — FLHS-80
43032-40B	SPOKE & NIPPLE, 16" rim — metric (40 — each wheel)	Late 82 to 84 — FLHS-80
43085-81	RIM, 16" — front & rear (chrome) (2)	Late 82 to 84 — FLHS-80
43304-73	AXLE CAP, front laced wheel — 2" diameter	81 — FLHS-80
42540-73A	WHEEL HUB, complete — front	Late 82 to 84 — FLHS-80
43559-73	WASHER, front wheel hub (2)	Late 82 to 84 — FLHS-80
44653-82	HUB CAP, front — 8-1/4" diameter (chrome)	Late 82 to 84 — FLHS-80

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
REAR BRAKE CALIPER — PAGE 109 & 111				
	513		SPRINGER PIN, front mounting, 3/32 x 1 5/16 (2)	83 & Late 84 — FLHS-80
	7664		SCREW, No. 10-24 x 7/16, Pop rivet, 209 (2)	Late 82 — FLHS-80
	3495		BOLT, strap to strut (drilled)	93 — FLHS-80
	3497		BOLT, strap to rear lock (drilled)	83 — FLHS-80
	3570		BOLT, caliper to strut (drilled)	Late 84 — FLHS-80
	3575		BOLT, strap to rear lock (drilled)	Late 84 — FLHS-80
	6017		WASHER, strut mounting, 3/8 x 1 1/2 x 1/4 (2)	Late 83 — FLHS-80
	6115		WASHER, co-pole to strut mounting, 1 1/2 x 3/4 x 3/32 x 1/16	83 & Late 84 — FLHS-80
	6607W		WASHER, 3/8 x 2 3/4 x 3/32 x 1/16	Late 83 — FLHS-80
	7000		LOCKWASHER, No. 10	Late 82 — FLHS-80
	7130W		LOCKWASHER, rear brake mounting plate	83 — FLHS-80
	7510		CASTLE NUT, strut mounting, 2 3/8 x 2 1/2 x 7/32 x 9/16 hex (2)	83 — FLHS-80
	7628		NUT, strut mounting (2)	Late 84 — FLHS-80
	7620W		NUT, No. 10-24 x 1/2 x 3/8 hex	Late 82 & 83 — FLHS-80
	41039-82		STRUT, rear lock to co-pole (black)	83 & Late 84 — FLHS-80
	41065-82		ADJUSTMENT SHIM, mounting bracket (2)	Late 83 & 84 — FLHS-80
	41781-75A		DISC, brake	Late 81 to 84 — FLHS-80
	42269-80		PLA, rear brake rod clevis	83 — FLHS-80
	42300-73A		REAR BRAKE HINGE, rear caliper	Late 81 & Late 82 — FLHS-80
	42511-80		PUSHING, mounting bracket	Late 81 — FLHS-80
	43067-79		SCREW, brake disc (5)	Late 81 to 84 — FLHS-80
	44014-81		CALIPER ASSEMBLY, rear (black) (FEBRUARY TO JULY 84 FX)	
			CATALOG, SPECIFICATIONS	Late 81 & Late 82 — FLHS-80
	44050-82A		CALIPER BODY ASSEMBLY	93 & Late 94 — FLHS-80
	44146-77		BLEED SCREW, with dust cover	Late 81, 82, 83 & Late 84 — FLHS-80
	44154-73		ANCHOR ARM, caliper bracket	Late 81, 82 — FLHS-80
	44197-77		LABEL, rear brake caliper	Late 81, 82 & 84 — FLHS-80
	44203-82		PIN, BUSH	83 & Late 84 — FLHS-80
	44201-82		BOLT, mounting	83 & Late 84 — FLHS-80
	44207-82		MOUNTING BRACKET	83 & Late 84 — FLHS-80
	44208-82		REPAIR KIT, rear brake caliper	83 & Late 84 — FLHS-80
	44209-82		PAINT, rear caliper	83 & Late 84 — FLHS-80
	44211-82		PAU SPRING	83 & Late 84 — FLHS-80
	44212-82		GUIDE PIN KIT	83 & Late 84 — FLHS-80

REAR BRAKE CONTROL AND FOOTRESTS — PAGE 115, 117 & 151

515		SPRINGER PIN, rear brake rod clevis, 1/16 x 3/4	83 & Late 84 — FLHS-80
770		PLUG, footrest and bracket assembly	Late 82 — FLHS-80
2248		BOLT, footrest, 1/2-20 x 7/8 hex, hd. (2)	77 — FLHS-80; Late 81 — FLHS-80
2708		SCREW, brake pedal, 5/16-18 x 1 1/2 hex, hd. (2)	Late 81 & Late 82 — FLHS-80
2872W		BOLT, support bracket, 1/4-20 x 1 1/2 hex, hd. (2)	83 & Late 84 — FLHS-80
2879W		BOLT, footrest mounting bracket, 3/8-15 x 1 1/2 hex, hd. (2)	83 & Late 84 — FLHS-80
2887W		BOLT, master cylinder mounting, 5/16-18 x 1 3/4 hex, hd. (2)	83 & Late 84 — FLHS-80
3237W		SCREW, brake pedal, 5/16-18 x 3/8 bracket, hd. (2)	Late 82 — FLHS-80
3454		BOLT, master cylinder mounting, 3/8-15 x 3/4 hex, hd. (2)	Late 81 to 84 — FLHS-80
3825		BOLT, 1/4-28 x 1 1/2 hex, hd. brake pedal adjustment	83 — FLHS-80
4064W		BOLT, bracket assembly, 5/16-24 x 3 hex, hd. (2)	Late 81, Late 82 & 83 — FLHS-80
4723W		BOLT, footrest bracket, 3/8-16 x 1 3/4 hex, hd. (2)	Late 81 — FLHS-80
4721		BOLT, footrest (2) & footrest bracket (2), 3/8-16 x 1 1/2 hex, hd.	77 — FLHS-80; Late 81 to 84 — FLHS-80
5151		SPACER, footrest bracket (2)	Late 81 — FLHS-80
5220W		WASHER, brake rod clevis, 1/4 x 7/8 x 1/32	83 & Late 84 — FLHS-80
7038		LOCKWASHER, footrest bracket, 3/8 (4)	77 — FLHS-80
7063		LOCKWASHER, footrest, 1/2 (2)	77 — FLHS-80
7683		LOCKNUT, 1/4-28 x 3/8 x 7/16 hex, pedal adjustment	93 — FLHS-80
7729		LOCKNUT, bracket assembly, 5/16-24 x 1/4 x 1/2 hex	Late 81 & Late 82 — FLHS-80
7744		NUT, brake rod, 5/16-24 x 3/8 hex, 1/2 hex	83 — FLHS-80
7778		LOCKNUT, footrest mounting, 3/8-15 x 7/16 x 3/16 hex (2)	77 — FLHS-80; Late 82 to 84 — FLHS-80

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
REAR BRAKE CONTROL AND FOOTRESTS (CONT'D)				
	7715		NUT, brake line, 3/8-16 (footrest bracket) - 4 -- 771	77 -- FLHS-Late 82 & 83 FLHS-80
	13033		CLAMP, brake hose	83 & Late 84 -- FLHS-80
	18838		CLAMP, reservoir hose, 1/2-12 (2)	83 & Late 84 -- FLHS-80
	30048-72		FOOTREST (2)	77 -- FLHS-Late 81 to 84 -- FLHS-80
	34183-82		RUBBER PAD, only - footrest (4)	77 -- FLHS-Late 81 to 84 -- FLHS-80
	40518-82		WASHER, piston cup	83 & Late 84 -- FLHS-80
	40920-79		SPRING, brake return	83 -- FLHS-80
	40920-82		SPRING, brake return	Late 84 -- FLHS-80
	40921-79		WASHER, brake return	83 -- FLHS-80
	40922-79		BOOT, piston rod	83 & Late 84 -- FLHS-80
	41004-80		REAR BRAKE TUBE (10)	Late 81 & Late 82 -- FLHS-80
	41004-82		REAR BRAKE TUBE, to brake line	83 -- FLHS-80
	41005-82		REAR BRAKE HOSE, to caliper	83 & Late 84 -- FLHS-80
	41564-82		BRACKET, front brake tube	83 -- FLHS-80
	41753-80		COMP, master cylinder (brake)	Late 81 & Late 82 -- FLHS-80
	41900-81A		RESERVOIR, master cylinder	83 & Late 84 -- FLHS-80
	42316-80		LOCKPLATE, foot lever and bracket assembly	Late 81 & Late 82 -- FLHS-80
	42374-82A		REPAIR KIT, master cylinder	83 & Late 84 -- FLHS-80
	42448-82A		PUNGER, master cylinder	83 & Late 84 -- FLHS-80
	42454-80A		MASTER CYLINDER	Late 81 & Late 82 -- FLHS-80
	42473-82A		MASTER CYLINDER	83 & Late 84 -- FLHS-80
	42507-80		FOOT LEVER AND BRACKET ASSEMBLY	Late 82 -- FLHS-80
	42507-82		MOUNTING BRACKET (black, wheel)	83 & Late 84 -- FLHS-80
	42515-80		LEVER, foot brake (polished)	Late 81 & Late 82 -- FLHS-80
	42515-82		LEVER, foot brake	83 & Late 84 -- FLHS-80
	42519-80		CROSS SHAFT, brake lever to clevis	Late 81 & Late 82 -- FLHS-80
	42521-80		SPIND, brake foot lever	Late 81 & Late 82 -- FLHS-80
	42522-80		PUNGER, master cylinder	Late 81 to 83 -- FLHS-80
	42522-82		PUNGER, master cylinder	Late 84 -- FLHS-80
	42524-82		BUSHING (2)	83 & Late 84 -- FLHS-80
	42526-82		SUPPORT BRACKET, master cylinder mounting	83 & Late 84 -- FLHS-80
	42527-82		MOUNTING BRACKET, reservoir	83 & Late 84 -- FLHS-80
	42531-82		WASHER, lever mounting	83 & Late 84 -- FLHS-80
	42532-82		PAD, brake lever	83 & Late 84 -- FLHS-80
	42534-82		SCREW, reservoir cover (2)	83 & Late 84 -- FLHS-80
	44125-82		WASHER, brake return spring	83 & Late 84 -- FLHS-80
	45152-78A		BRACKET, brake line to	83 & Late 84 -- FLHS-80
	45154-84		REAR BRAKE LINE, master cylinder to toe	Late 84 -- FLHS-80
	47137-81		BRACKET, footrest - left	83 & Late 84 -- FLHS-80
	47138-81		BRACKET, footrest - right	83 & Late 84 -- FLHS-80
	47116-77		BRACKET, footrest - left	77 -- FLHS-Late 81 -- FLHS-80
	47117-77		BRACKET, footrest - right	77 -- FLHS-Late 81 -- FLHS-80
	50900-72		FOOTREST SUPPORT (2)	77 -- FLHS-Late 81 -- FLHS-80
	50912-72		SPRING WASHER, footrest support (4)	77 -- FLHS-Late 81 -- FLHS-80
	63551-82		FITTING, reservoir hose (brake)	83 & Late 84 -- FLHS-80
	63573-82		HOSE, 5/16 (rubber) - 25 ft. long	83 & Late 84 -- FLHS-80

FRAME, REAR FORK AND JIFFY STAND — PAGE 135 & 139

7130W	LOCKWASHER, 3/8 internal tooth	Late 83 -- FLHS-80
7506	ADJUST NUT, jiffy stand (mg. 5/16 24 x 15/32 x 1/2 hex) (3)	Late 81 to 84 -- FLHS-80
47013-78C	FRAME	Late 82 to 84 -- FLHS-80
47446-82	REAR FORK	83 & Late 84 -- FLHS-80
47496-82A	REAR FORK	Late 83 -- FLHS-80

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
SEAT — PAGE 149				
	2757W		SCREW, seat intgl., 1/4-28 x 7-10 Phillips brass hd. (with lockwasher) (chrome)	77 — FLHS-80 to 84 — FLHS-83
	2832W		SCREW, seat assy., No. 6-32 x 3/4 Pozidriv black hd. (4)	77 — FLHS-80 to 84 — FLHS-83
	3757B		BOLT, seat bracket, 1/4-20 x 5/8 hex. hd. (2)	90, Late 82 & 83 — FLHS-80
	5950W		SPACER, seat strap mounting (2)	Late 82 to 84 — FLHS-83
	6375W		WASHER, seat strap mounting, 1/8 x 5/16 x 3/4 (2)	Late 82 & 83 — FLHS-83
	6410		WASHER, seat mounting, 1/4 x 3/16 x 1/16 (polymer)	Late 82 to 84 — FLHS-83
	703E		LOCKWASHER, seat bracket, 1/4-20 (2)	90 — FLHS-80
	51195--80		SHAB STRAP (black)	83 to 84 — FLHS-83
	51196--80		SHAB STRAP (brown)	83 & Late 81 — FLHS-80
	51661--79		BRACKET, seat mounting	80 to 84 — FLHS-83
	520E4--78		HI-LO SEAT (black leather)	77 — FLHS-80 -- FLHS-80
	52178--77		HI-LO SEAT (black vinyl)	83 to 84 — FLHS-80
	52190--80		HI-LO SEAT (brown vinyl)	N/A 83 to 83 — FLHS-80
	52191--79		HI-LO SEAT (brown vinyl)	N/A 77 — FLHS
	52538--77		BRACKET, seat — rear	77 — FLHS: 80 to 83 — FLHS-80

FOOTBOARDS — PAGE 150

50517--80	SPACER, left front footboard intgl.	80 — FLHS-80
50603--74A	FOOTBOARD (2)	80 & Late 81 — FLHS-80

HANDLEBARS — PAGE 163 & 165

377B	BOLT, 1/2-13 x 3-3/4 hex. hd. lower handlebar clamp (2)	Late 82 & 83 — FLHS-83
56091--82	HANDLEBAR, buckhorn	Late 82 to 84 — FLHS-83
56086--81	HANDLEBAR, city	Late 81 — FLHS-83
56220--81R	GRIP & SLEEVE, throttle	Late 82 to 84 — FLHS-83

FENDERS — PAGE 175 & 177

NOTE: REFER TO DEALER ACCESSORY GUIDE FOR PAINTED PARTS

2272	SCREW, rear fender support, 5/16-24 x 1-1/4 Pozidriv oval pts. hd. (4, 6 — Late 82, 83 & 84)	90 to 84 — FLHS-83
3476	BOLT, front fender intgl., 5/16-19 x 1-1/8 hex. hd. (4)	Late 82 to 84 — FLHS-80
5410	SCREW, rear fender support, 5/16-24 x 1/2 Pozidriv truss hd. (chrome) (4)	Late 82 to 84 — FLHS-80
59227--82	TRIM, front fender	83 & Late 84 — FLHS-80
59254--72	REFLECTOR, front (amorph) (2)	Late 82 to 84 — FLHS-80
59255--72	REFLECTOR, rear (red) (2)	Late 82 to 84 — FLHS-80
59834--80C	REAR FENDER, w/turn signal supports	77 — FLHS
59827--80D	REAR FENDER, w/turn signal supports	83 to 82 — FLHS-80
59839--80	REAR FENDER (prime)	83 & Late 84 — FLHS-80
70577--2E	SHOULDER, rear fender (turn signal wheel)	77 — FLHS

FRONT AND REAR BUMPER — PAGE 173

3537	BOLT, front bumper — rear intgl., 1/4-20 x 3/4 hex. hd.	80 — FLHS-80
------	---	--------------

RETAIL PRICE	INDEX NO	PART NO.	NAME	USED ON
FRONT AND REAR CHAIN HOUSING — PAGE 181, 183 & 185				
		6396	WASHER, guard to transmission, 3/8 x 13/16 x 3/32 rubber (4 — Late 82)	Late 81 & Late 82 — FLHS 80
	48	62850	DRAIN PLUG, vent — front chain housing	Late 81 to 84 — FLHS-80
	73	60302	REAR CHAIN GUARD (chrome)	Late 81 & Late 82 — FLHS-80
	76	60302	REAR CHAIN GUARD (black)	Late 81 — FLHS-80
	77	60507	COVER, front chain housing	Late 81 — FLHS-80
	82A	60507	COVER, front chain housing	Late 82 — FLHS-80
	83B	60531	COVER, front chain housing, belt drive (polished)	83 & 84 — FLHS-80

FUEL TANK TRIM — PAGE 188 & 189

61126	-71	PLASTIC PANEL, fuel tank	N/A	77 — FLHS
61127	-71	TAPE, tank panel (2)	N/A	77 — FLHS
61297	-77	DECAL, fuel tank panel — Electra Glide Sport	N/A	77 — FLHS

EXHAUST SYSTEM — PAGE 195 & 197

262BW	BOLT, muffler support tube, 3/8-16 x 3 hex. hd. (2)	77 — FLHS
3201W	SCREW, exhaust mounting, 5/16-18 x 5/8 socket hd. (2 — 77)	77 — FLHS, Late 82 — FLHS-80
4014W	BOLT, mufflers & reinforcement strap, 5/16-24 x 1-1/4 hex. hd. (3)	Late 82 — FLHS-80
4066	BOLT, muffler support tube to frame, 5/16-18 x 3 hex. hd.	77 — FLHS
4097	BOLT, muffler support tube to frame, 5/16-18 x 3-1/4 hex. hd.	77 — FLHS
6324W	WASHER, 5/16 x 11/16 x 1/16 (2 — muffler support, 1 — exhaust pipe brace)	Late 82 & 83 — FLHS-80
7038	LOCKWASHER, muffler support tube (3/8, 2)	77 — FLHS
7041	LOCKWASHER, exhaust pipe mounting (2) & muffler support tube to frame (2) 5/16	77 — FLHS
774BW	NUT, muffler support tube to frame, 5/16-18 x 1/4 x 1/2 hex. (2)	77 — FLHS
7763	NUT, muffler support tube 3/8-16 x 5/16 x 5/16 hex. (2)	77 — FLHS
8555	CLAMP, exhaust pipe shield (2)	77 — FLHS
10049	CLAMP, crossover pipe shield (2)	Late 82 to 84 — FLHS-80
65276-82	CLAMP, muffler front — 2" dia. (chrome)	77 — FLHS
65336-77	MUFFLER	N/A 77 — FLHS
65344-77	BRACKET, muffler — rear	N/A 77 — FLHS
65349-81	MUFFLER, front	Late 81 to Early 83 — FLHS-80
65343-81A	MUFFLER, front	Late 83 & 84 — FLHS-80
65354-77	SUPPORTER, muffler support tube to trans (2)	N/A 77 — FLHS
65397-81A	MUFFLER, rear	Late 81 to 84 — FLHS-80
65399-81	SUPPORT STRAP, rear	Late 81 to 84 — FLHS-80
65401-81	EXHAUST PIPE, front	Late 81 to 84 — FLHS-80
65411-80A	CLAMP, crossover exhaust	Late 81 to 84 — FLHS-80
65425-70	EXHAUST PIPE	77 — FLHS
65506-80	HEAT SHIELD KIT, crossover (with clamps)	Late 81 & Late 82 — FLHS-80
65507-80	SHIELD KIT, rear (with clamps)	Late 81, Late 82, Late 84 — FLHS-80
65501-70	SHIELD KIT, single exhaust pipe — front	77 — FLHS
65503-70	SHIELD KIT, single exhaust pipe — rear	N/A 77 — FLHS
65506-80	SHIELD KIT, front — with clamps	Late 81, Late 82, Late 84 — FLHS-80
65505-81	EXHAUST PIPE, rear	Late 81 to 84 — FLHS-80
65515-80A	MUFFLER SUPPORT	Late 81 to 84 — FLHS-80
65534-C9A	GASKET, exhaust port (2)	77 — FLHS

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
HEADLAMP — PAGE 209				
	2690		SCREW, ground wire, No. 10-24 x 3/8 Phillips pan hd.	Late 82 to 84 — FLHS-80
	2624W		SCREW, headlamp mtg., 5/16-24 x 9/16 Phillips hd. (4)	80 to 84 — FLHS-80
	7220		LOCKWASHER, ground wire, No. 10 external lock	Late 82 & 83 — FLHS-80
	67850-75		HOLE PLUG, headlamp housing	80 to 84 — FLHS-80

BATTERY — PAGE 199

2692	SCREW, battery carrier, No. 10-24 x 1/2 Phillips pan hd.	Late 82 to 84 — FLHS-80
6107-8	WASHER, battery carrier, 5/16 x 1 1/16 x 1/8	Late 82 & 83 — FLHS-80
7236	LOCKWASHER, battery carrier, 1/4	Late 82 — FLHS-80
7620W	ALT. battery carrier, No. 10-24 x 1/2 B x 3/8 hex	Late 82 — FLHS-80
55991-75C	BATTERY ASSEMBLY (smoke)	Late 81 — FLHS-80
55991-82	BATTERY — 12 V	Late 82 to 84 — FLHS-80
65000-80	TERMINAL KIT	Late 82 to 84 — FLHS-80
65009-80	BRACKET, battery carrier	83 — FLHS-80
66103-74A	CUSHION, battery	Late 81 to Late 84 — FLHS-80
65191-80	BATTERY CARRIER	Late 81 to 84 — FLHS-80
66228-76	SUPPORT BRACKET (polished)	Late 81 & Late 82 — FLHS-80
66367-73	BATTERY COVER (chrome)	Late 81 to 84 — FLHS-80
66475-73A	BATTERY STRAP	Late 81 to 84 — FLHS-80
70461-67B	BATTERY GROUND CABLE	Late 81 to 84 — FLHS-80
69053-80Z	TRIM, battery	Late 84 — FLHS-80

TURN SIGNALS — FRONT — PAGE 213 & 215

4069	SCREW, top mounting clamp, 1/4-20 x 3/4 knurled socket hd. (2)	Late 82 to 84 — FLHS-80
4070	SCREW, bottom — mounting clamp, 5/16-24 x 7/14 socket hd. (chrome) (2)	Late 82 to 84 — FLHS-80
10037	CABLE STRAP, wires (2)	80 — FLHS-80
11442	GROMMET, mounting clamps (2)	Late 82 to 84 — FLHS-80
56032-73	CLIP, handlebar wires (4)	77 — FLHS
56070-81	CLIP, turn signal cable (4)	Late 81 — FLHS-80
58470-73A	CLAMP, handlebar (2)	77 — FLHS-80, Late 82 & 83 — FLHS-80
68477-73	BRACKET, handlebar clamp to lamp (2)	77 — FLHS-80, Late 82 to 84 — FLHS-80
68478-73	SCREW, handlebar clamp, No. 10-24 x 3/4 socket hd. (2)	77 — FLHS-80 — FLHS-80
68479-73	SCREW, mounting — front, 5/16-24 x 2 socket hd. (2)	77 — FLHS-80 — FLHS-80
68481-73	GASKET, turn signals (2)	77 — FLHS-80, Late 82 to 84 — FLHS-80
68482-73	SCREW, turn signal lens (2)	77 — FLHS-80, Late 82 to 84 — FLHS-80
68483-73	LENS, turn signal (2)	77 — FLHS-80, Late 82 to 84 — FLHS-80
66486-80A	LAMP, handlebar — outer (2)	Late 82 to 84 — FLHS-80
66487-82	LAMP, handlebar — inner (2)	Late 82 to 84 — FLHS-80
66514-73	LAMP WIRE WIRE (amber) (2)	77 — FLHS-80 to 84 — FLHS-80
58572-74A	DUAL, turn signal — 12 V (2)	77 — FLHS-80 — FLHS-80
77036-71	SOCKET, turn signal (2)	77 — FLHS-80 — FLHS-80

MIRRORS — PAGE 216

91875-70B	MIRROR KIT, 5" rectangular — short stem (chrome)	Late 82 to 84 — FLHS-80
-----------	--	-------------------------

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
		53299-76	LUGGAGE BOX, complete	N/A 75 — FL FLH
		53350-76	COVER, luggage box	N/A 75 — FL FLH
		58175-76	WINDSHIELD FAIRING, only (Liberty Edition painted with decals)	N/A 75 — FL FLH
		58218-76	DECAL, fairing — "Sugar"	N/A 75 — FL FLH
		58320-76	TRIM STRIP, windshield fairing — 14" black (1)	75 — FL FLH
		58321-76	TRIM STRIP, windshield fairing — 4" black (2)	76 — FL FLH
		51773-76	NAMEPLATE "AMF-Harley Davidson" (fuel tank) (2)	76 — FL FLH
		61830-76	DECAL, fuel tank (2)	N/A 76 — FL FLH
		90627-76	TRIM, saddlebag — right "1976"	N/A 76 — FL FLH
		90628-76	TRIM, saddlebag — left "1976"	N/A 76 — FL FLH
		91000-76	SADDLEBAG KIT, right	N/A 76 — FL FLH
		91001-76	SADDLEBAG KIT, left	N/A 76 — FL FLH
		91002-76	SADDLEBAG COVER ASSEMBLY	N/A 76 — FL FLH

FLH-1200 75th ANNIVERSARY PARTS

RETAIL PRICE	INDEX NO.	PART NO.	N A M E	USED ON
		29207-78	TPIM, air cleaner	N/A 77 — FLH
		44138-78	LABEL, brake caliper	N/A 77 — FLH
		44461-78	WHEEL ASSEMBLY, with bearings and seals (2)	77 — FLH
		53326-78	LUGGAGE BOX, complete — Tour-Pak	N/A 77 — FLH
		53334-78	NAMEPLATE, luggage box	N/A 77 — FLH
		58428-78	WINDSHIELD AND FAIRING KIT	N/A 77 — FLH
		58138-78	FENDER DECALS (black cherry)	N/A 77 — FLH
		58139-78	FENDER DECALS (brown)	N/A 77 — FLH
		58140-78	FENDER DECALS (blue)	N/A 77 — FLH
		58141-78	FENDER DECALS (gray)	N/A 77 — FLH
		58142-78	FENDER DECALS (red)	N/A 77 — FLH
		58143-78	FENDER DECALS (gold)	N/A 77 — FLH
		58249-78	FENDER TRIM KIT, front lower	N/A 77 — FLH
		61240-78	NAME TRANSFER, fuel tank (2)	77 — FLH
		61351-78	NAMEPLATE, fuel tank — left	N/A 77 — FLH
		61352-78	NAMEPLATE, fuel tank — right	N/A 77 — FLH
		90657-78	SADDLEBAGS AND CARRIER	N/A 77 — FLH
		95532-78	WHEEL WEIGHT, 1/2 oz. (gold)	77 — FLH
		95533-78	WHEEL WEIGHT, 1 oz. (gold)	77 — FLH

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
-----------------	--------------	-------------	------	---------

CRANKCASE — GEAR SIDE

32511—80 COVER, inner (No. 1) (black) 81 — FLH

AIR CLEANER

3455 SCREW, air intake grill, 5/16"-18 x 1/2" socket hd. 81 — FLH

6046 WASHER, air intake grill 81 — FLH

29057—78A AIR INTAKE GRILL 91 — FLH

FRONT FORK

45496—72A FRONT FORK ASSEMBLY, non-adjustable (stainless covers, polished sliders) 81 — FLH

45717—63 LOCKWASHER, fork stem nut 81 — FLH

45718—60 NUT, fork stem 81 — FLH

56121—73A FORK BRACKET, handlebar non-adjustable 81 — FLH

FRAME AND REAR FORK

47013—72D FRAME ASSEMBLY 91 — FLH

LUGGAGE CARRIER

59988—72 REFLECTOR (2) (left & right sides of luggage carrier) 81 — FLH

WINDSHIELD

52289—81 WINDSHIELD BAG, leather with two pockets 81 — FLH

58416—77 CUSHION TAPES, upper window brace (29" long) 81 — FLH

57996—61 WINDSHIELD ASSEMBLY 81 — FLH

50932—78 CONCHOS, gun 81 — FLH

FRONT FENDER

59174—81 FRONT FENDER DECAL, "Heritage Edition" (2) 81 — FLH

FRONT CHAIN HOUSING

25450—81 DECAL, clutch cover, "Heritage Edition" 81 — FLH

25451—81 COVER, clutch (painted) (black) 81 — FLH

60441—73 CHAIN HOUSING, front (painted) (black) 81 — FLH

GAS TANK

61123—81 TRIM PLATE ASSEMBLY, between tanks 81 — FLH

GAS TANK TRIM

61296—81A TRIM, tank side, "HAMP HANLEY-DAVIDSON" (2) 91 — FLH


INSTRUMENT PANEL AND TERMINAL PLATE

25309 SCREW, No. 8-32 x 5/16" self-lapping rd. hd. (2) 81 — FLH

71240—80 INSTRUMENT PANEL COVER (black w/ink) 81 — FLH

71330—68A PLATE, ignition switch 81 — FLH

71333—61 NAME PLATE, personalized 81 — FLH

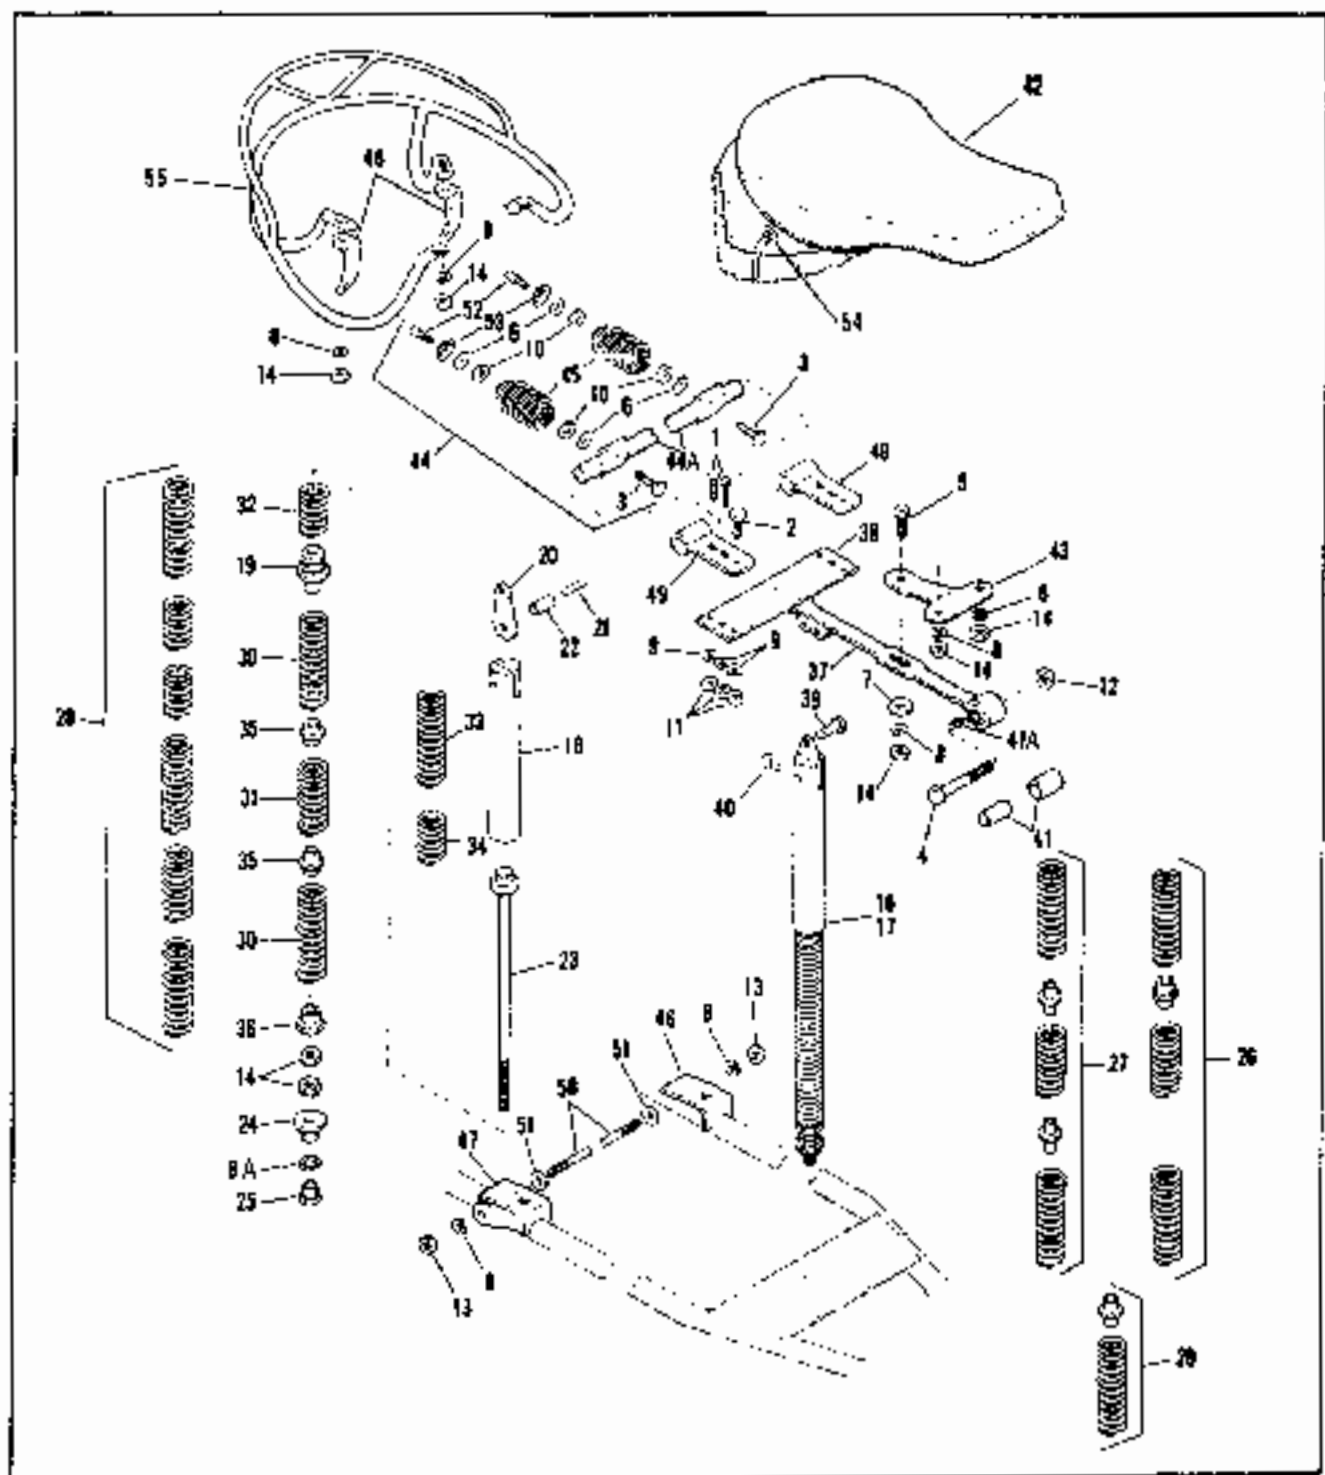

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
SEAT AND SEAT POST				
	1	3351B	BOLT, 5/16-24 x 1-8 sq. hd. (4)	81 — FLH
	2	3974HW	BOLT, 5/16-24 x 3/4 hex. hd. (2)	81 — FLH
	3	4410	BOLT, 1/4-24 x 7/16 hex. hd. (2)	81 — FLH
	4	4411	BOLT, 3/8-24 x 1-3/4 hex. hd.	81 — FLH
	5	4310	BOLT, 3/8-24 x 1 hex. hd.	81 — FLH
	6	6223W	WASHER, 1/4 x 3/4 x 1/16 (steel) (4)	81 — FLH
	7	6701	WASHER, 3/8 x 1 1/2 x 1/16	81 — FLH
	8	7038	LOCKWASHER, 3/8 x 7/8	81 — FLH
	9	7041	LOCKWASHER, 5/16 (5)	81 — FLH
	9A	7050	LOCKWASHER, 9/16	81 — FLH
	10	7682	LOCKNUT, 1/4-24 x 3/16 x 7/16 hex. (4)	81 — FLH
	11	7752	NUT, 5/16-24 x 1/4 x 1/2 hex. (8)	81 — FLH
	12	7776W	LOCKNUT, 3/8-24 x 3/4 x 9/16 hex.	81 — FLH
	13	7802W	NUT, 3/8-24 x 21/32 x 9/16 hex. (2)	81 — FLH
	14	7851W	NUT, 3/8-24 x 7/32 x 9/16 hex. (7)	81 — FLH
	15	51610-58	SEAT PLUNGER ASSEMBLY (150-220 lbs.)	81 — FLH
	17	51614-58	SEAT PLUNGER ASSEMBLY (over 220 lbs.)	81 — FLH
	18	51626-58	PLUNGER, seat post	81 — FLH
	19	51634-58	LOCKWALT, plunger	81 — FLH
	20	51640-58	PLUNGER LINK	81 — FLH
	21	51642-58	RYE plunger link	81 — FLH
	22	51644-13	BUSHING, plunger link	81 — FLH
		51661-58	ROD, seat post	81 — FLH
	23	51672-25	NUT, seat post rod	81 — FLH
	24	51674-25	LOCKNUT, seat post rod	81 — FLH
	25	51770-29	SET OF SEAT POST SPRINGS — standard	N/A 81 — FLH
	27	51771-29	SET OF SEAT POST SPRINGS — heavy	81 — FLH
	28	51772-31	SET OF SEAT POST SPRINGS — complete	N/A 81 — FLH
	29	51773-31	CUSHION SPRING with collar	81 — FLH
	30	51774-31	CUSHION SPRING (2)	81 — FLH
	31	51775-31	CUSHION SPRING short	81 — FLH
	32	51777-20	RECOIL SPRING	N/A 81 — FLH
	33	51778-30	AUXILIARY SPRING — 5"	81 — FLH
	34	51780-30	AUXILIARY SPRING — 2-1/2"	81 — FLH
	35	51791-31	SPACER, seat post spring (2)	81 — FLH
	36	51795-28	ADJUSTING NUT, seat post spring	81 — FLH
	37	51900-30	SEAT BAF	81 — FLH
	38	51911-28	GROSS BAR	81 — FLH
	39	51918-28	PIN, seat bar clamp	81 — FLH
	40	51920-28	SPRING, clamp pin	81 — FLH
	41	51925-65	BUSHING SET, seat bar	81 — FLH
	41A	51986-68	PLASTIC PLUG, seat bar grease fitting hole	81 — FLH
	42	52502-61	BUCSY SEAL with fringed skirt and two notches	N/A 81 — FLH
		52526-65	GHELL, bulky seal	N/A 81 — FLH
	43	52551-36A	FRONT BRACKET	81 — FLH
	44	52540-68	SPRING YOKE ASSEMBLY (2)	81 — FLH
	44A	52566-65	ROD, auxiliary spring support	81 — FLH
	45	52575-65	AUXILIARY SPRING (2)	81 — FLH
	46	52583-68	SUPPORT BRACKET, left	81 — FLH
	47	52584-68	SUPPORT BRACKET, right	81 — FLH
	48	52585-68	SPRING BRACKET (2)	81 — FLH
	49	52595-65	BRACKET, spring yoke (2)	81 — FLH
	50	52602-65	STUD, spring support	81 — FLH
	51	52605-58	SPACER, support stud (2)	81 — FLH
	52	52608-68	SHOULDER BOLT (2)	81 — FLH
	53	52609-65	CLIP WASHER, spring mounting (2)	81 — FLH
	54	30998-78	CONCHOS (pair)	81 — FLH
	55	31574-58A	HANDBRAKE, bulky seal	81 — FLH

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
-----------------	--------------	-------------	------	---------

SADDLEBAGS

90988-7B		CONCHO, pair		B1 — FLH
91005-91		SADDLEBAG, left (leather, w. 10 conchos)		B1 — FLH
91006-91		SADDLEBAG, right (leather, w. 10 conchos)	N/A	B1 — FLH

PAINTED PARTS

59092-81H		FRONT FENDER (olive and orange)	N/A	B1 — FLH
59604-81H		REAR FENDER (olive and orange)	N/A	B1 — FLH
60382-81H		FUEL TANK, right (olive and orange)	N/A	B1 — FLH
60383-81H		FUEL TANK, left (olive and orange)	N/A	B1 — FLH

SPECIAL AIR DRY PAINT

98600F1		OLIVE, 1/2 oz. Touch-Up Bottle w/brush	N/A	B1 — FLH
98603FT		OLIVE, quart		B1 — FLH
98606FT		OLIVE, aerosol	N/A	B1 — FLH
98606F1		ORANGE, 1/2 oz. Touch-Up Bottle w/brush	N/A	B1 — FLH
98603FU		ORANGE, quart		B1 — FLH
98606FL		ORANGE, aerosol	N/A	B1 — FLH

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
STARTER MOTOR, SHAFT AND HOUSING				
		7524	LOCKWIT No. 10-24 x 1/4 x 3/8 hex. ground wire (2)	Late 82 - FLHF
		31570-72	STARTER MOTOR	Late 82 - FLHF
		31572-75	STARTER SHAFT HOUSING, with bearing	Late 82 - FLHF
		31575-73	BRUSH (also commutator)	Late 82 - FLHF
		31573-73	SLIP OF THRU-BOLTS	Late 82 - FLHF
		31577-73	COVER, drive end	Late 82 - FLHF
		31578-73	COVER, commutator -- with bushing	Late 82 - FLHF
		31579-73	FRAME & FIELD COILS, with 2 brushes	Late 82 - FLHF
		31580-73	ARMATURE, with ball bearing	Late 82 - FLHF
		31591-73	BRUSH HOLDER, with 4 springs & 2 brushes	Late 82 - FLHF
		31592-73	BRUSH	Late 82 - FLHF
		31593-73	BALL BEARING, armature drive end	Late 82 - FLHF
		31584-73	SLIP OF THRU WASHERS, armature commutator end	Late 82 - FLHF
		31595-73	SCREW, with lockwasher (2)	Late 82 - FLHF
		31595-73	INSULATOR terminal	Late 82 - FLHF

FRONT CHAIN HOUSING

11125	O-RING, chain housing cover	Late 82 - FLHF
52573-77A	COVER, clutch, chain guard (chrome)	Late 82 - FLHF
60535-70	COVER, chain housing (with 5062 ROLLER BEARING)	Late 82 - FLHF

LACED WHEEL

1E05	SCREW, 3/8-16 x 1-1/2 flat socket disk, hd. (10)	Late 82 - FLHF
40809-91	WHEEL ASSEMBLY, 15 in. (chrome)	Late 82 - FLHF
43032-43A	SPOKE & NIPPLE, 16 in. (chrome) (40)	Late 82 - FLHF
43543-73A	WHEEL HUB, complete	Late 82 - FLHF

SEAT

27577	SCREW, 1/4-20 x 7/16 Phillips cross hd., seal (rounding with lockwasher) (chrome)	Late 82 - FLHF
51990-82	GRAB STRAP (black)	Late 82 - FLHF
51993-82	MOUNTING BRACKET, seat to frame	Late 82 - FLHF
52411-79A	SEAT, bucket (chrome) - black vinyl	Late 82 - FLHF

HEADLAMP

2660	SCREW, No. 10-24 x 3/8 Panhead pan hd., type hd. wire	Late 82 - FLHF
26247	SCREW, 5/16-24 x 1-1/4 Phillips hd. headlamp housing (4)	Late 82 - FLHF
67752-77T	VEHICLE headlamp	Late 82 - FLHF
67860-75	HOLE PLUG, headlamp housing	Late 82 - FLHF

FRONT AND REAR FENDERS

2612	SCREW, No. 8-32 x 1/2 Panhead pan hd. (rod flap) (3)	Late 82 - FLHF
2272	SCREW, 5/16-24 x 1-1/4 Phillips oval disk, P.D., rear fender support (2)	Late 82 - FLHF
2603	SCREW, No. 8-32 x 3/8 self tapping rd. hd., rear fender lip (3)	Late 82 - FLHF
5410	SCREW, 5/16-24 x 1/2 Panhead cross hd. rear fender support (chrome) (2)	Late 82 - FLHF
5260W	SPACER, rear fender support	Late 82 - FLHF
6410	WASHER, 1/4 x 9/16 x 1/16 nylon, rear fender	Late 82 - FLHF
7629W	LOCKWIT No. 8-32 x 3/16 x 5/16 hex. (rod flap) (3)	Late 82 - FLHF

ACTUAL PRICE	INDEX NO.	PART NO.	NAME	USED ON
FRONT AND REAR FENDERS (CONT'D)				
		59200-82	FRONT FENDER (prime)	WA Late 82 FLHF
		59214-82	FRONT FENDER BRACE, left (prime)	Late 82 FLHF
		59216-78	FRONT FENDER TIP, with fenders	Late 82 FLHF
		59218-79	BRACE mud flap	Late 82 FLHF
		59270-60	MUD FLAP, essential (black)	Late 82 FLHF
		59294-72	REFLECTOR (chrome) (2)	Late 82 FLHF
		59297-80	REAR FENDER, with turn signals (prime)	WA Late 82 FLHF
		59297-78	FENDER TIP & T. rear	Late 82 FLHF
EXHAUST SYSTEM				
		47194	BOLT, 3/8-16 x 2-1/2 hex. hd. for muffler support	Late 82 FLHF
FUEL TANK				
		E1159-60A	DECAL, Lwr & shield (orange & black) (2)	Late 82 FLHF
		E1237-82UH	FUEL TANK, right (5 gal) (black)	Late 82 FLHF
		E1240-82DH	FUEL TANK, left (5 gal) (black)	WA Late 82 FLHF
OIL TANK				
		62531-80	ENGINE oil tank	Late 82 FLHF
FRONT TURN SIGNALS				
		4068	SCREW, 1/4-20 x 3/4 knurled socket hd., top - mounting clamp (2)	Late 82 FLHF
		4070	SCREW, 5/16-24 x 2-1/4 socket hd., bottom - mounting clamp (chrome) (2)	Late 82 FLHF
		41442	GRG MMEI, mounting clamps (2)	Late 82 FLHF
		66477-73	BRACKET, handlebar clamp to lamp (2)	Late 82 FLHF
		66481-73	LAMP, turn signal lens (2)	Late 82 FLHF
		66492-73	SCREW, turn signal lens (4)	Late 82 FLHF
		66493-73	LENS, turn signal (2)	Late 82 FLHF
		66486-82A	LAMP, handlebar (2)	Late 82 FLHF
		66487-82	LAMP, handlebar (2)	Late 82 FLHF
		66514-72	LAMP WITH WIFE (amber) (2)	Late 82 FLHF
MIRRORS				
		91875-708	MIRROR RT, 5" rectangular (2)	Late 82 FLHF
			Consists of	
		5714	SPACER	
		5273W	SPACER	
		6702	WASHER, 5/16 x 1 1/16 x 1/16	
		7041	LOCKWASHER, 5/16	
		7716	ADORN NUT, 3/16-24 x 3/16 x 1/2 hex. (chrome)	
SADDLEBAGS				
		3825	BOLT, 1/4-20 x 1 hex. hd., saddlebag brace (2)	Late 82 FLHF
		59255-72	REFLECTOR (red) (4)	Late 82 FLHF
		59289-63	REAR CROSS BRACE	Late 82 FLHF

RETAIL PRICE	INDEX NO	PART NO	NAME	USED ON
OIL PUMP				
	26216-84		COVER, oil pump (polished)	Early 84 - FLHX
	26226-84		OIL PUMP BODY (nonshed)	84 to * - FL-X
	26242-84		COVER, oil pump (polished)	Early 84 to * - FLHX
	26277-84		COVER ASSEMBLY, oil pump (polished)	N/A 84 - FL-X

WHEELS

1805	SCREW, rear disc mounting — steel wheel (5)	84 to * - FLHX
4776	BOLT, rear sprocket mounting — steel wheel (5)	84 to * - FLHX
6027	LOCKWASHER, rear disc mounting (5)	84 to * - FLHX
8518W	WASHER, rear sprocket mounting (5)	84 to * - FLHX
7501	LOCKNUT, rear sprocket mounting — steel wheel (5)	84 to * - FL-X
7778	LOCKNUT, rear disc mounting — steel wheel (5)	84 to * - FL-X
40903-91	WHEEL ASSEMBLY, front or rear (steel — 16 in., 16 chrome)	84 to * - FLHX
43012-43B	SPOKE AND NIPPLE, 16" rim — metric (40)	84 to * - FLHX
43095-81	RIM, 16" (chrome)	84 to * - FLHX
43540-73A	WHEEL HUB, complete	84 to * - FLHX

BUDDY SEAT — FRAME MOUNTED

2151	SCREW, support backrest (2)	84 to * - FLHX
52116-85	SUPPORT backrest	84 to * - FLHX
52540-75	BACKREST ASSEMBLY	84 to * - FLHX

RETAIL PRICE	INDEX NO	PART NO.	NAME	USED ON
LUGGAGE BOX (KING TOUR-PAK)				
		2607	SCREW, side light socket mounting (8)	94 10 * — FLHX
		2631	SCREW, cable brace mounting (2)	94 10 * — FLHX
		2632	SCREW, lens mounting (6)	94 10 * — FLHX
		6070	WASHER, reinforcing plate (3)	94 10 * — FLHX
		6234	WASHER, cable brace (4)	94 10 * — FLHX
		6670	WASHER, cable brace mounting (2)	94 10 * — FLHX
		7115	LOCKWASHER, lens mounting (6)	94 10 * — FLHX
		7590	ACORN NUT, nylon side light socket mounting (6)	94 10 * — FLHX
		7638	LOCKNUT, lens mounting (6)	94 10 * — FLHX
		9502	PIVET, hinge pin (2)	84 10 * — FLHX
		9592	PIVET, reinforcing plate (3)	84 10 * — FLHX
		10006	CABLE STRAP (2)	84 10 * — FLHX
		10007	CABLE STRAP (4)	84 10 * — FLHX
		11016	RETAINING RING	84 10 * — FLHX
		11410	GROUNDING, side light wiring (2)	84 10 * — FLHX
	84	14098	TRIM, King Tour-Pak. Made in U.S.A. (102.4x)	84 10 * — FLHX
	84	14100	TRIM, King Tour-Pak. Made in U.S.A. (147.0x)	84 10 * — FLHX
	82	52773	TRIM PLATE, latch	84 10 * — FLHX
	83	53415	GASKET, cover	84 10 * — FLHX
	80	53426	HINGE PLATE, cover (2)	84 10 * — FLHX
	80	53434	NAMEPLATE, luggage box, King Tour-Pak. (10.8x)	84 10 * — FLHX
	80	53435	MAT, luggage box	84 10 * — FLHX
	79	53437	LENS, luggage box side light (3)	84 10 * — FLHX
	79	53438	BULB, luggage box side light (14)	84 10 * — FLHX
	79	53440	SOCKET, luggage box side light (4)	84 10 * — FLHX
	83A	53447	HINGE PLATE, box (2)	84 10 * — FLHX
	80	53479	BACKING PLATE, cable brace bracket (2)	84 10 * — FLHX
	81	53513	LATCH ASSEMBLY, King Tour-Pak	84 10 * — FLHX
	82	53563	BRACKET, cable brace (2)	84 10 * — FLHX
	82	53564	CABLE BRACE, cover to box	84 10 * — FLHX
	53	54978	GROUNDING, side light wiring	84 10 * — FLHX
	75A	70643	CABLE ASSEMBLY, green side light (2)	84 10 * — FLHX
	75A	70644	CABLE ASSEMBLY, black side light (2)	84 10 * — FLHX
	75	70645	WIRING HARNESS, rear lender	84 10 * — FLHX
	75	70646	WIRING HARNESS, luggage box side light	84 10 * — FLHX
	71	72039	PIN TERM NAL	84 10 * — FLHX
	70	72052	RECEPTACLE, luggage box harness	84 10 * — FLHX
	74	72275	CONNECTOR T43, wiring harness	84 10 * — FLHX
	77A	74526	SOCKET, box & lender wiring harness (2)	84 10 * — FLHX
	77A	74539	PIN, box & lender wiring harness (2)	84 10 * — FLHX
	83	90620	RULLER, saddlebag latch — 580 dia	84 10 * — FLHX
	83	90743	GASKET, Tour-Pak mounting (2)	84 10 * — FLHX
	79	90771	PLATE, luggage box harness	84 10 * — FLHX
	83	90785	TAIL HEAD STUD, Tour-Pak mounting (4)	84 10 * — FLHX
	83	90790	RETAINER, nail head stud (4)	84 10 * — FLHX
	74A	90821	LABEL, Tour-Pak	84 10 * — FLHX
	83	90964	EACHING PLATE, hinge plates (8)	84 10 * — FLHX
	83	90985	PIVET, reinforcing plate & hinges (28)	84 10 * — FLHX

RETAIL PRICE	INDEX NO.	PART NO.	NAME	USED ON
LUGGAGE CARRIER				
		7220	LOCKWASHER (4)	Early 84 — FLHX
		90293-75	WARNING LABEL, Tour Pak	84 to * — FLHX
		53413-82	RECEPTACLE (leaf spring) (4)	84 to * — FLHX
		90549-84A	LUGGAGE CARRIER ASSEMBLY	Early 84 to * — FLHX
		90905-83	RIVET (8)	84 to * — FLHX

WINDSHIELD AND FAIRING — Page 165

14093-84	DECAL, "Made in U.S.A." (black)	84 to * — FLHX
14094-84	DECAL, "Made in U.S.A." (white)	84 to * — FLHX

FENDER TRIM

14088-84	TRIM, front fender, left — "Special Edition Electra-Glide" (black)	84 to * — FLHX
14090-84	TRIM, front fender, left — "Special Edition Electra-Glide" (white)	84 to * — FLHX
14091-84	TRIM, front fender, right — "Special Edition Electra-Glide" (black)	84 to * — FLHX
14092-84	TRIM, front fender, right — "Special Edition Electra-Glide" (white)	84 to * — FLHX

FRONT CHAIN HOUSING

80444-82	FRONT CHAIN HOUSING (black w/white)	Early 84 — FLHX
80444-84	FRONT CHAIN HOUSING (black w/white)	Late 84 to * — FLHX

GAS TANK TRIM

14072-84	DECAL, tank side — right (gold & black)	84 to * — FLHX
14073-84	DECAL, tank side — left (gold & black)	84 to * — FLHX
14095-84	DECAL, tank side — left (black)	84 to * — FLHX
14096-84	DECAL, tank side — left (white)	84 to * — FLHX
14097-84	DECAL, tank side — right (black)	84 to * — FLHX
14098-84	DECAL, tank side — right (white)	84 to * — FLHX

SADDLEBAGS

14085-84	TRIM, saddlebag, left — "Special Edition Electra-Glide" (black)	84 to * — FLHX
14086-84	TRIM, saddlebag, left — "Special Edition Electra-Glide" (white)	84 to * — FLHX
14087-84	TRIM, saddlebag, right — "Special Edition Electra-Glide" (black)	84 to * — FLHX
14088-84	TRIM, saddlebag, right — "Special Edition Electra-Glide" (white)	84 to * — FLHX

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
215	72		75		97	2538	153	2611 B	55
223	29	635	57	1430	23	2539	153	2612	211
257	239		59	1601	24	2540	45		289
275	23	653	72		35		203	2614	99
	24	653	24	1604	121	2544 W	203	2622	24
334 A	63	655	23	1605	121	2551 W	63		203
	65	657	24		289		143		213
	101	700	19		291		153		219
341	19		29	1608	75		181	2623 W	203
356	24	704	19	1643	259	2554	57		233
375	82		191		263	2579	102	2625	237
376	23	706 A	191	1655	209	2583	170	2628	24
384	253	707	52	1719 W	75		213		103
513	275	711	45		217		233	2630 W	175
515	45	720	19	1761 W	75	2585	59		233
	75		279	1764 W	75		95		257
	79	723	19	1765 W	75		203		265
	95	725	47		79		213	2633	175
	113	729	219	1766 W	75		219		289
	113	857	85		79		241	2634 W	139
	117		99	1767 W	75		271		175
	127	903	181	1772 W	75	2586	203	2646	57
	151		187	1783	59	2587	53	2647	213
	279	906	7	1784	239		203		219
520 W	165	915	165	1864 W	82	2589	45	2652	105
	169	916	167	2061 W	188		53		115
	111	930	33	2073 W	191		153		117
534	2		37		213		203	2653	51
	11		39	2151	143		233	2659	55
	19		43		149	2591	203		203
	75		45		291	2592	119		275
	79	932	175	2216 W	51		171	2660	14
	85	990 W	203		243		175		125
	93	991	95		247		201		163
	125		113	2265 W	181		213		203
	192		161	2268 W	161		271		265
559	127	997 W	263	2272	175		265		283
	131	1040	203		281	2594	59		289
	251	1047	57		289		163	2661 W	55
	253		59	2333 W	79		201		127
600	239	1183	29		82		231		131
601	239	1203	167	2337 W	181		233		209
	263	1205	95	2341 W	23		237		213
603	51		113	2345	181	2595	241		219
	53	1301	24	2348	279	2597	75		275
604	161		55	2356	181	2598	201	2662 W	209
612	237		51		199		233	2664	71
613	239		181	2366	75	2599	243		79
614	239	1302	213	2402 W	49		247		102
615	57		219	2417	127	2604	170		103
	59	1304	271		131		175		165
620	57	1305	24	2507	292		257		113
	59	1308	24	2508	229	2605	243		203
623	57	1369	75	2511	24	2607	62		261
	59	1374	53	2513	187	2608	151		279

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
2668	105		292	3454	183		199		209
2682	67	2841 W	267	3456	47		236		219
	69	2851	137		278	3729 A	72		219
2690 W	53		150		285		82		267
2692 W	213	2871 W	57	3464	219	3802 W	12		267
2695 W	95		173	3473	55		239	3983 W	233
	236		251		57		241	3986	203
2696	141	2872 W	74		61		275	3987	57
	449		63	3476	175	3625	49		49
2708	219		72		281		115		111
2710 L	175		161	3477	173		151		181
	257		279		175		267		191
2725	169	2879 W	105	3487	149		271		233
	169		279	3489	143		279		275
	170	2881 W	72	3491	203		290		281
	170		91		233	3826	55	3991	149
2726	169	2882 W	93	3496	279		267		175
	170		233	3497	279	3842	55	3993	69
	243		267	3504	19		57		75
	247	2887 W	243	3505	19		61	3996	137
2731 W	278		247	3506	19	3945	195		139
2741	149		279	3507	163	3946	243		145
2750	233	2888	153	3520	279		247		157
2751	97		292	3525	279	3951 B	145		169
	241	3201 W	195	3560 W	175		287		165
2757 W	281		197		257	3952	233		193
	269		279	3561 WA	175		241		197
2758	49		282		257	3953 W	117	4014 W	75
2764 W	162	3206 L	213	3570 T	57		193		137
2770 W	55		217		59		217		147
2772	93		219	3720	79		255		169
	170	3207	113		119		259		185
	181		163		163	3956	199		187
2774	47	3208	167	3726	213		263		197
	153	3210	163	3736	49		213		209
	179	3212	51		79		217		219
	181	3232 L	243		267		219		267
	239		247	3750	7	3958	161		282
2779	233	3233	216		11	3960 W	139	4015	95
2784	149		247	3765	49		169		162
2802 W	281		271		173		167		183
2803 W	220	3234 W	121	3767 B	47		195	4017	181
2804 W	230		263		153		197		195
2806	207	3237 W	79		267		219		251
2806	181	3409	195		281		271		271
2816	259	3413	47	3768	65	3974 HW	19	4018 W	175
2818	72	3419	115	3770	7		135	4020 W	119
2824 W	209	3425 W	163	3771	121		149		197
	253	3427	19	3775	93		157		257
	269	3428	19		105		171		259
2825 W	65	3429	29		109		185		267
2826 W	262	3430	19	3776	281		191	4021	181
2829	24	3431	103	3787	143		195	4036	169
	55	3442	149		157		197		203
2831	153	3447	47		169		203	4041 W	157

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
	287	4432 W	19	5714	216	6150 W	11		247
4050	195	4434 W	137		290		203	6333	111
4053 W	195		139	5723	2	6156	29		271
4069	283	4435 W	19	5733	187		59	6334	115
	290		195	5751	279	6160 P	187		117
4070	283		197	5905	139	6165 K	53		139
	290	4440 W	139	5911	53		59	6335	59
4084 K	279		195	5915 B	183	6182 W	59		175
4086	282		197	5917 B	159		263		243
4091	179		251	5926 B	185		213		257
4319	110		271	5933 W	169		233	6336 B	137
	115	4450 W	139	5940	149		241		219
	155	4710	195	5942 B	137	6185	253	6339	191
	150		197		157	6186	53	6341 B	149
	243	4713 W	15	5960 K	161	6189 W	45		243
	255		115		281		59		247
	287		117		289		213	6375 B	75
4336 W	71	4716 W	151	5978 W	216		219		115
	155		213		290	6192	24	6377	29
	153		253	5989	105		55	6379 W	151
4337 W	75		255	6001	7		57		161
	135	4718	181	6002	7		205		163
	145	4719 K	250	6006	57		213		281
	150	4720 W	105	6016	7		219	6388 HB	181
4382	135		109		19	6193	53	6398	282
4370 HB	150		151		43	6194	24	6400 HB	19
4380 W	147		181		47		55		79
	175		279		71	6197	203		82
	195	4721	255		82	6220 K	75		97
4391	141		257		171		115		147
	145		279	6017	279		117		187
	191	4722	181	6027	121		233	6408 HB	271
	199	4724	135		291		279	6410	281
4392	282	4725	61	6029	175	6228 W	243		284
4401 W	19		187		292		247	6411	187
	99		197	6035	275	6235	151	6416	2
	117	4726	2	6036	275		292		105
	150		55	6041	265	6236 B	243		109
	247		57	6046	47	6253 W	67		109
	261		61		278		157		161
4410	115		291		285		243		247
	145	4729	127	6048 W	267		287		281
	215		131	6095	47	6255 B	169	6443 HW	86
	287	4730	149	6099	24	6261	169		91
4411	71	4740	24		82	6300	125	6448 HB	117
	137	4806	19		91	6314 W	169		137
	147	4810	24		95	6316 HW	7		150
	150	4813	24		102	6324 W	53	6466 K	7
	175		181		163		135	6469 HW	2
	271	4814	24		181		181		11
	287	4816	163	6106	59		187	6474	82
4414	163	5403 B	179	6107 B	185		282	6486 HW	115
4415	195	5410	281		283	6327 H	187		117
	197		284	6109	187		243	6495 HW	2
4420	117	5430 W	29	6115	279	6332 B	243		11

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
6497 Hk	3		93		278		233		233
	55		111	6717	267		243		243
	57		113	6718	105		247		247
	61		115		109	7036	29		251
6506	14		131		111		49		253
6516 Hk	3		137		161		53		255
	11		141		251		55		257
	55		149		253		65		271
	57		157		271		65		279
	61		169	6722 H	161		67		282
	121		165	6725 Hd	251		69		287
	291		191	6736	237		73	7039	5
6521 W	3		193	6736	29		79		11
	11		195		73		82		85
6522 Hk	3		199	6750	73		91		91
	11		201		75		93		93
6524 W	3		213		75		150		105
	11		216	6752	73		151		113
6551	29		219		75		163		117
6590 Hk	121		233		79		171		127
	125		267	6754	75		179		131
	271		250		79		183		139
6607 W	279	6703	24	6762 H	7		191		243
6647	157		29		11		199		247
6649	127		55	6768	209		201	7041	19
	131		61		216		213		47
6653	121		65	6774	19		239		49
	257		67	6807 H	95		241		55
	263		69		113		243		57
6655	121		73	6811 W	103		247		61
6700 H	191		95	6817	142		261		73
	259		97	6910 W	161		271		79
6701	19		99	6952	169		281		93
	73		145	6955	169		283		117
	82		169	6969	45	7056	49		131
	145		173		57		55		135
	149		175	6970	153		57		139
	151		179		292		61		141
	175		181	7010	233		71		145
	195		191	7015	59		75		147
	239		199		201		82		149
	243		247		203		93		157
	247		267		217		99		171
	255	6712 b	259		233		115		175
	267	6716	55		237		117		185
	267		69	7022	119		119		187
6702	7		119		121		135		191
	19		173		255		137		193
	33		175	7030 W	163		145		195
	37		201		169		147		197
	39		203		169		149		213
	47		243		170		150		216
	49		247		170		151		217
	55		271		201		195		219
	68		275		203		197		219

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
	233		175		203		271		205
	239		203		239		292		230
	243		219		283	7609 W	153		239
	247		257		293		203		241
	267		271	7229 W	199		213		247
	271		292		211		219		257
	282	7118	51		236		289	7643 W	115
	287		55	7230	47	7610	279		135
	290		57		61	7611	176	7651	169
7043	243		125		67	7613 A	176		169
	247		175		75	7620 W	33	7654 W	170
	251		239		125		37		176
	253		241		213		39		201
	263		257		241		69		233
7065	147		265	7231	75		75		243
	287	7124	93		93		95		247
7066	121		15	7232	157		102	7676	53
	163		127		173		103		63
	271		131		175		105		67
	279		241		233		113		97
7069	29		267		267		161		115
	32	7127	67	7233	175		163		171
	55		149	7242	119		171		179
	57		167		255		175		199
	61		203		259		203		201
	79		217	7315	161		237		213
	102		233		263		279		267
	103		241	7501	211		283		271
	105		251		257	7624	69	7682	145
	119	7130 W	75		400		175		173
	161		105	7504	53		241		267
	163		115	7508	280		257		267
	170		121	7509	7		275	7683	49
	176		135	7513	159		289		53
	171		219	7520	153	7626 W	29		55
	175		239		252		59		57
	201		279	7561	291		153		59
	203		280	7564	263		203		61
	213	7136	121	7572 W	161		271		79
	219		271		271	7628	279		175
	233	7145 W	105	7581	255	7633	151		207
	236		121	7590	153		253		219
	239		151		203	7634	29	7684	61
	241		219		207		53		267
	243		241		209	7638	29	7686	157
	247	7149	209	7602	226		47		169
	261		216	7606	49		49		173
	271	7206 W	203		59		53		175
	279	7220	53		153		55		275
7112	153		67		203		57	7688	67
	203		69		213		61		69
	209		71		217		93		179
7115	59		113		219		97		181
	95		119		233		175		183
	153		175		243		201		191

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
	199		147		73	7823	251	8103	47
	211		155		79		257	8115 b	55
	230		213		97		263		57
	239		216		139	7825	3		61
	241		233		147		11	8125	217
	243		271		161		55		241
	247		279		161		57	8126	173
7689 w	179	7748 w	137		247		61		191
	191		151		267		99	8131 w	175
7691 w	29		163		271		115		243
	93		191	7776 w	45		117		257
	95		217		73		121	8133 w	175
	113		239		147		276		243
	150		243		151	7837 w	88		255
7710 w	47		247		267		91	8135 b	173
	267		282	7778	105		93		267
7725	35	7753	7		121		113	8160	267
	43		19		213		121	8226	85
	53		55		219		139	8227	85
	79		57		279		271	8232	85
	113		61		291	7843	105	8241	71
	127		67	7780	247		109	8321	242
	135		71		261		111		247
	137		75	7783	137	7845	121	8420	153
	151		79		150	7848 w	91	8483	236
	167		82		195		117	8502	292
	193		97		239	7851 w	49	8515	147
	195		117		255		93		175
7727	11		135		257		145	8524	99
	79		159		260		147		271
	97		145		282		287	8532	99
	203		147	7800 w	75	7867 w	3	8585	147
7729	279		149		82		11	8688	243
7734 w	125		157		95	7873	7		247
	251		175		117	7875	7	8692	153
	253		125		125	7911	71		175
7736	149		167		135		85		292
	290		191		137	7921	271	8698	191
7739	33		195		145	7947 w	127	8699	24
	37		195		149		131		55
	39		197		151		251	8872	79
	151		201		175	7977	71	8873	29
	275		219		195	7984	93	8905	85
7740	115		233		197	7986	171	8906	85
	163		243		243	7988	119	9007	53
	275		247		251		255	9020	82
7742	150		267		253		259	9025	19
	151		271		271	7993	119	9029	19
	153		287		287		161	9037	181
7744	47	7754	110	7839	19		259	9040	181
	49	7763 w	127	7812 w	161	8034	251	9052	121
	75		131	7813	119		253		135
	97	7767	135		125	8059	251	9058	23
	113	7768 w	163		135		253		24
	127	7775	19		255	8095 A	119	9061	181

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
9062	63	9223 A	19	9918	225	10003	115	11007	19
	65	9224 A	19	9921	53	10006	55	11012	192
9063	61	9225 A	19	9924	225		57	11013	47
	161	9260	103	9925	225		97	11015	103
9064	53	9421	19	9931	57		115	11016	153
9073	61	9441 A	15		203		117		157
9084	85	9442 A	15		225		153		267
9085	85	9443 A	15		236		175		292
9086	85	9444 A	15	9932	225		191	11017	203
9101 A	14	9445 A	15	9937	225		193	11027	121
9102 A	14	9446 A	15	9945	225		193		278
9103 A	14	9450 A	15	9946	193		203	11031	75
9104 A	14	9540 A	88		193		209	11036	73
9105 A	14	9851	75	9951	191		211		75
9106 A	14		97	9952	213		213		79
	75		117		219		217		81
9108 A	14		125		236		219		95
9120	19		135	9955	141		225		113
9121	19		147		195		241	11037	93
9122	19	9856	225		197		255		97
9123	19	9857	55		282		259	11039	63
9124	19		57	9957	49		292		65
9125	19		225		163	10007	153	11040 P	187
9126	19	9858	267		225		225	11041	63
9127	19		225	9958	163		229	11063	103
9128	19	9859	225		271		236	11084	51
9129	19	9862	225	9961	271		253	11096	88
9130	19	9863	225	9963	113		292		89
9131	19	9866	225		213	10009	203		89
9132	19	9868	225	9965 W	24	10012	203		89
9133	19	9871	225		53		213		91
9134	19	9881	55		170		225	11101	3
9135	181		57		170	10014	3		7
9171 A	14	9886	275		271		7		59
9172 A	14	9887	275	9972	203		187		63
9173 A	14	9896	275	9976	203		191		71
9174 A	14	9898	213		213	10020 A	47	11105	25
9175 A	14		217		219	10025	217		29
9176 A	14		225	9979	19	10033	280		192
9179 A	14		229		47	10036	115	11107	45
9180	14	9900	55	9983	163	10038	280	11115	85
9181	14		219		201	10046	24	11118	7
9182	14		225		203		55	11125	181
9183	14		275	9990 W	103	10048	282		289
9184	14	9901	225	9991 A	255	10059	95	11132	7
9185	14	9902	203	9992	191	10065	225	11133 A	7
9186	14		225	9993	187	10080	191	11137	103
9206	259	9903	225	9995	119		193		117
9217	19	9904	225		271	10999	259	11143	95
9218	19	9905	225	9996	191	11000	88		102
9219	19	9908	55	10001	203		91	11147	181
9220 A	19		57		213	11002	25	11149	111
	125	9909	225		219		29		111
9221 A	19	9914	29	10002	213	11004	53	11155	167
9222 A	19		225		219		271		229

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
11160	19	14091-84	293	17130-80	3	18086-80	11	18556-57	9
11171	73	14098-84	293	17131-80	3		5		13
	81	14099-84	292	17160-81	4	18086-81	5	18570-58	9
11215	17	14160-84	292	17161-81	4	18089-80	5		13
11405	203	16303-81	3	17170-81	4		11	18597-81	9
11410	153	16484-600	3	17171-81	4	18089-81	5	18598-81	9
	185	16484-700	3	17360-48	11	18100-49	11	18599-81	9
	257	16485-600	3	17360-60A	7	18102-49	11	18600-60C	9
	292	16485-74A	3	17375-60A	7	18103-81A	5	18602-60A	9
11411	185	16492-600	3	17428-57	7	18104-81A	5	18603-60A	9
11430	175	16492-74A	3	17448-57	7	18105-79	5	18610-66B	9
	233	16493-600	3	17448-71A	7	18106-81A	5	18610-76A	9
11431	175	16493-74A	3	17449-77	7	18107-81A	5	18633-48B	9
11437	175	16494-78	3	17450-73	7	18108-81A	5		13
11442	283	16495-78	3	17452-66	7	18109-81A	5	18633-48C	9
	290	16498-80A	3	17506-66A	4	18138-79A	5	18634-48B	9
12010	73	16499-80A	3	17507-48	11		11		13
12013 A	85	16508-81	3	17508-60	5	18139-79A	5	18660-53	9
12014	86	16509-81	3	17540-69	7		11		13
12018	101	16602-30	3	17541-48B	11	21920-85	16		16
12022	85		11	17550-60	7	21921-83	16		16
12026 B	19		243	17552-60	7	21923-83	16		16
12052	181		247	17611-60B	7	21991-80A	15		15
14001-82	188	16725-60A	3	17904-60	7	21992-80A	15		15
14002-82	188	16770-48	11	17905-53B	11	21993-80A	15		15
14003-82	188	16770-60B	3	17920-53A	7	21994-85	15		15
14004-82	188	16776-48	11		11	22101-53C	15		15
14005-82	188	16776-63	3	17935-79B	7	22101-74A	15		15
14006-82	188		11	17938-48B	7	22103-53D	15		15
14015-82	178	16777-48	11		11	22103-74A	15		15
	247	16777-63	3	17938-79	7	22104-53D	15		15
14016-82	178		11	17945-36B	7	22104-74A	15		15
	247	16814-77	3		11	22105-530	15		15
14021-83	219		11	17947-36	7	22105-74A	15		15
	275	16830-29A	53		11	22106-53D	15		15
14023-83	178	16830-54	53	17950-48	11	22106-74A	15		15
14024-83	178	16831-30	3	17950-66	7	22107-53C	15		15
14061-84	188		11	17955-36	7	22107-74A	15		15
14062-84	188	16836-70	3		11	22108-53D	15		15
14063-84	188	16837-70	3	17955-48	7	22108-74A	15		15
14064-84	188		11		11	22109-53C	15		15
14072-84	293	16838-70	3		11	22109-74A	15		15
14073-84	293	16852-67A	3	18000-81	5	22141-55B	15		15
14085-84	293	16853-48	3	18010-79	5	22141-74A	15		15
14086-84	293		11	18020-79	5		15		15
14087-84	293	16864-48	3	18055-66A	5	18222-48	5	22143-55C	15
14088-84	293	16865-52	3	18056-66B	5		13	22143-74A	15
14089-84	293		11	18057-48	11	18222-79	5	22144-55C	15
14090-84	293	17028-58	11	18057-66	5	18222-81	5	22144-74A	15
14091-84	293	17029-60A	3	18071-48	11	18228-36	5	22145-55C	15
14092-84	293	17029-79	3	18075-80	5		13	22145-74A	15
14093-84	293	17034-48A	7	18075-81	5	18268-48	259	22146-55C	15
14094-84	293		11	18078-60	5	18522-53A	9	22146-74A	15
14095-84	293	17034-80A	7	18078-81	5		13	22147-55C	15
14096-84	293	17121-80	3	18082-80	5	18534-29A	9	22147-74A	15

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
22148-55C	15	24003-55	17	24519-66A	21	25262-80	25	25552-36	23
22148-74A	15	24006-58	17	24519-70	21	25275-36	23		27
22149-55C	15	24006-73	17	24519-75F	21	25275-82	25	25553-36	23
22149-74A	15	24006-80	17	24524-77E	21	25313-50	23		27
22191-76	15	24006-83	17	24553-63	21	25313-70	23	25554-36	23
22192-78	15	24010-54	23	24582-77A	25		25	25555-36	23
22194-78	15		25	24599-58A	21	25313-77B	25		27
22196-76	15	24016-80	17	24600-58A	21	25314-50	23	25556-74	23
22325-55B	15	24017-72	17	24601-58A	21		25		27
22327-55B	15	24017-80	17	24605-54	21	25315-50	23	25557-74	23
22328-55B	15	24023-36	17	24641-36	23		25		27
22329-55B	15	24023-54	23		25	25316-52	23	25558-74	23
22330-55B	15		25	24645-81	21		25		27
22331-55B	15	24029-55	17	24649-81	21	25320-79	25	25559-79	23
22334-78B	15	24032-70	21	24650-58	21	25320-82	25		27
22335-78B	15		49	24650-61	21	25321-79	25	25581-36	23
22336-78B	15	24033-70	21	24651-50	21	25321-82	25	25581-70	27
22337-78A	16		99	24652-58	21	25322-79	25	25582-54	23
22355-57	16	24034-70	21	24653-53	21	25322-82	25		27
22356-53	16		99	24654-55	21	25323-79	25	25582-73	27
22581-32	16	24035-70	21	24655-56	21	25323-82	25	25715-47	73
22582-52	16		99	24692-58	21	25325-79	25		99
22588-76	16	24036-70	21	24703-54B	23	25325-82	25	25785-30A	23
22589-83	16		99		25	25326-79	25	25791-36	23
22735-32	16	24037-70	21	24721-30	125	25326-82	25	25794-36	23
22760-73A	16		99	24791-36	21	25327-79	25	25800-36	23
22762-73	16	24040-76	25	24805-30	21	25327-82	25	25811-11	73
22764-83	16	24041-76	25	24809-30	21	25328-79	25		239
23741-55	19	24042-78	25	24811-59A	63	25328-82	25	25856-36	23
23906-74	16	24043-78	25		181	25401-77	181	26190-73	25
23906-78F	16	24044-78	25	24811-63	21	25405-62	21	26200-68B	29
23909-80	16	24045-76	25	24815-40	21	25414-70	181	26201-48B	29
23919-72	16	24046-76	25	24819-36	29	25416-70	181	26202-63	29
23922-76	17	24051-80	99	24820-36	29	25416-84	181	26207-63	29
23922-80	17	24052-80	99	24820-76	39	25417-79	181	26216-84	291
23924-76	17	24053-80	99	24823-80	39	25420-79	181	26226-84	291
23926-80A	17	24054-80	99		83	25426-80	181	26227-58	29
23940-41A	17	24281-41A	17		85	25450-81	285	26231-78	29
23961-41	17	24281-74A	17	24824-67	45	25451-81	285	26234-82	29
23961-80A	17	24281-80	17	24827-68A	105	25523-56	23	26239-82	29
23966-54A	17	24261-83	17	24918-52A	21	25523-70	27	26242-84	291
23969-80	17	24334-36	17	24920-67	191	25527-61A	27	26245-41	29
23969-83	17	24335-36	17	24921-77	191	25528-81A	27	26246-68A	29
23973-41	17	24345-36A	17	24981-66	23	25529-61A	27	26247-78	29
23985-12	17	24356-36A	17	24981-70	25	25530-81A	27	26251-78	193
	99	24366-51	17	24982-66	23	25531-81A	27	26257-50A	29
23985-18	17	24366-71	17	24982-70	25	25532-81A	27	26258-68B	29
23985-54	17	24367-71	17	25216-73B	25	25534-81A	27	26262-86	29
	23	24385-40B	17	25225-36C	23	25550-36	23	26263-80	27
	25	24387-40B	17	25225-70B	25		27		29
23985-56	17	24388-40B	17	25258-80A	25	25550-57	23	26265-68A	29
24001-65	17	24389-40B	17	25260-76	25		27	26273-80B	29
24001-70	17	24390-40B	17		47	25551-36	23	26276-80A	29
24001-72	17	24391-40B	17	25261-82	25		27	26277-84	291
24002-70	19	24490-36	21						

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
26278-84	29		37	27315-76	39		39	27621-71	45
26315-46	29	27063-57	39	27319-76	39	27366-76	33	27622-71	45
26315-65A	29		43	27320-76	39		37	27623-71	43
26317-68A	29		45		39		39	27630-71	43
26326-62A	31		45	27321-76	39	27369-76	33	27631-71	43
26327-52	31	27063-80	33		39		37	27640-66	45
26327-68	31		37	27322-76	33		39	27641-71	43
26328-74	31	27077-76	39		39	27371-76	33	27642-71	43
26336-68	31	27076-80	33	27324-83	37		37	27644-66	45
26340-36	31		37	27325-83	37		39	27645-71	43
26345-39	23	27093-76	33	27326-71	43	27372-80	33	27646-71	43
	27	27094-76	33	27327-83	37	27373-76	33	27651-75	45
26345-73	27	27098-76	33	27328-76	33		37	27652-75	43
26346-10	27	27130-61	37		39		39	27653-75	43
	31	27132-71	43	27330-83	37	27379-76	39	27654-75	43
26346-15	17	27136-61	37	27333-76	33	27385-76	33	27655-75	43
	23	27137-61	37		37		37	27656-75	43
	27	27139-61	37		39		39	27658-66	45
	31	27141-61	37	27335-76	33	27389-71	43	27659-71	43
26348-20	23	27142-61	37		37	27395-76A	39	27661-66	45
	31	27143-61	37		39	27396-71	43	27663-71	43
26349-54	23	27145-61	37	27336-76	39	27403-71	43	27664-71	43
	27	27147-66	45	27337-76	39	27404-71	43	27665-71	43
26349-75A	27	27155-72B	43	27338-76	33	27406-26	45	27666-71	43
26362-36	31	27155-76A	39		37	27407-66	45	27668-66	45
26363-36	31	27164-71	43		39	27416-76	41	27669-66	45
26363-56	31	27271-71	43	27339-76	39	27417-76	41	27671-55	45
26374-54	31	27272-71	43	27340-76	39	27418-76	41	27673-66	45
26377-68	31	27272-74	43	27343-71	43	27419-76	41	27686-71	43
26390-66	21	27281-71A	43	27342-71	43	27420-76	41	27688-66	45
	31	27282-71	43	27347-69	45	27450-82	47	27689-61	45
26400-54	31	27304-76	33	27348-76	39		49	27691-59	45
26400-82	31		37	27348-77	39	27451-82	47	27708-66	45
	31		39	27352-66	45		49	27707-66	45
26410-82	31	27305-76	39	27353-66	45	27452-82	47	27708-67	45
26424-50	31	27306-76	33	27354-66	45		49	27712-66	45
26552-72	31		39	27355-76	39	27459-74	43	27714-66	45
26560-63	31	27307-76	33	27356-76	39	27466-78A	33	27716-55	45
26569-56	31		37	27358-76	39	27466-80A	33	27716-61	45
27006-76	39		39	27359-76	39	27467-78A	33	27716-67	45
27021-71A	33	27308-76	33	27360-76	33	27467-80A	33	27717-66	45
	39		37		37	27470-81A	276	27718-67	45
	45		39		39	27494-81A	37	27720-62	45
27021-76	33	27309-76	33	27361-76	33	27594-76	35	27725-71	43
	37		37		37	27595-66	45	27737-71	43
27023-71	43		39		39	27596-66	45	27740-66	45
27045-76	33	27310-76	39	27362-76	33	27598-66	45	27746-66	45
	39	27311-76	33		37	27599-66	45	27747-66	45
27046-76	33		37		39	27612-71	43	27748-71	43
	39		39	27364-76	39	27613-71	43	27750-72	43
27060-55	39	27312-76	39	27366-76	33	27614-71	43	27751-66P	230
	45	27313-76	33		37	27618-71	43	27759-66	45
	45		39		39	27619-66	45	27760-66	45
27062-78	33	27314-76	33	27367-76	33	27619-71	43	27762-71A	43
			39		37	27620-71	43	27763-71	43

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
27804-66A	45	29084-73	49	30350-66	53	31503-70	63	31645-70	241
27806-66	45	29086-73	49	30421-56A	53	31506-79B	239	31650-69A	213
27812-66	45	29086-75	49	30426-58	53	31531-69	63		223
27814-66	45		278	30453-55	53	31534-66	67		241
27816-66	45	29113-73	47	30475-66	53	31535-66	67	31651-70	241
27822-72	35	29113-74A	47	30505-47	59	31536-66	67	31710-69	241
	37	29114-76	47	30507-47A	59	31537-66	67	31724-65	61
27883-78	35	29114-74A	47	30605-46A	59	31538-66	67	31727-72	55
27884-78	35	29144-77	49		61	31540-66	67		57
27885-76	35	29205-69	49	30851-61	53	31541-66	67		61
27886-76	35	29205-76	49	30851-65A	53	31542-66	67	31728-78A	55
	37	29206-76	49	31035-58	53	31565-67	67		57
27887-78	35	29207-76	284	31046-58	53		69	31800-76A	55
	37	29212-71	49	31097-58	53	31566-67	67		57
27888-78	35	29213-79	47	31098-58	53		69		61
	37		233	31300-80A	63	31570-73	69	31980-65B	55
	37	29214-67A	49	31310-80A	63		278		57
	278	29214-71	47	31311-80	65		289		61
	37		49	31312-80	65	31572-79	278	31981-65H	55
27869-76	35	29216-67	49	31320-80	65		289		57
	37	29220-67	49	31321-80	65	31575-73	69		61
27890-76	35	29239-76	47	31340-80	65		289	31991-74A	61
	37	29250-78A	35	31341-80	65	31576-73	69	32000-37A	55
27891-80	35		37	31367-80	65		289		57
	37		41	31397-80	65	31577-73	69		61
27892-78	35	29252-78	47	31433-64A	161		289	32301-47A	61
	37	29252-79	47	31435-65B	239	31578-73	69	32301-60	61
27893-76	35	29253-78	35	31436-65A	239		289		61
27894-78	35		37	31439-65A	239	31579-73	69		61
27895-76	35	29255-78	47	31439-84	239		289	32303-47A	61
	37	29261-80	47	31440-65	239	31580-73	69	32305-48A	61
27897-76	33	29270-78	47	31441-65A	239		289	32307-58	61
	278	29272-76	47	31443-65A	63	31581-73	69	32310-71	61
27898-76	35	29299-76	47		63		289		61
	37	29603-48	59	31444-65A	239	31582-73	69	32310-77X	61
29018-71A	49	29954-71	51	31445-65A	63		289	32311-63	55
29018-76	49	29956-70	51	31452-65A	239	31583-73	69		57
29020-71	49	29957-81B	51	31458-66A	67		289	32312-77	61
29024-73	49	29965-70	51	31465-65	63	31584-73	69	32312-76A	55
29024-77	278	29965-72	51	31465-79	63		289	32342-58	55
29030-56	49	29965-81A	51	31475-77	239	31585-73	69		57
29036-41A	49	29979-65A	53	31476-66	67		289		61
29036-66	49	29988-73	51	31478-65A	63	31586-73	69	32352-77	61
29036-76	49	30011-58	53		65		289	32353-77	61
29057-78A	47	30012-58	53		161	31604-61	61	32354-77	61
	278	30013-71	195	31482-65	63	31607-64	55	32399-64	55
	285		197	31482-70	63		57	32400-80A	55
29058-77	35	30095-61	53	31485-65	63		61	32401-80	55
	37	30132-61A	53	31493-67	63		241	32402-83	55
	41	30143-58	53	31499-83	64	31609-65A	57	32503-77	27
	47	30145-46A	53	31501-65	63		61		57
	49	30201-58A	53	31502-65	63	31609-80	55	32504-80	27
29061-76	47	30201-65	53		65	31620-47	61		55
29064-78	47	30276-58	53	31503-65	63		241	32505-76A	27
29071-79	47	30280-58	53		65	31640-70A	241	32508-77	27

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
32511-78	27	32670-70	59	33291-30	71	33865-66A	79	34179-33	73
32511-80	285	32676-64	59		83	33870-51	75		77
32515-77	27	32678-49	59		91		79	34180-33	73
32516-66	59	32726-30A	59		83	33871-67	75		77
32517-70	59		61		88	33875-66	79		81
32521-53	27		61		91	33878-51	75		77
	55	33031-36	83	33295-36	71		79	34182-76	73
32522-67	59		85		83	33900-54	239	34184-79	73
32522-70	57	33031-65A	83	33298-65	41	33901-79	73		77
	59		85		43		239	34186-76	73
32522-80	57	33031-80	83		71	33960-30A	75		77
	59		85		83		79		81
	59	33048-72	260	33337-83	278	33960-65	75	34428-52	77
32525-36A	59	33060-54	71	33338-83	85		79	34430-36	81
32533-70	59	33080-36	71		99	34010-76	79	34435-52	77
	59		121	33350-36	71	34019-73	75	34447-52	77
32535-48	73	33082-16	71	33353-76	83		79	34448-51	81
32542-64A	59		85	33355-36	71	34020-79B	73	34453-52	77
32542-70A	59	33085-36	71	33358-36	71	34030-36	79	34459-26	81
32577-70	59	33096-54B	71	33381-39	71	34031-41	77	34461-72	73
32584-70	27	33150-54	71	33390-26	75		79	34476-72	73
32588-70A	27	33152-54	71		79	34036-36	77	34477-53	77
32591-70	27	33158-80	73	33391-36	71		79	34478-53	77
32591-80	27	33163-65B	88	33393-50	71	34036-80	77	34478-75	77
	55		99	33396-39	71	34040-52	73	34482-53	77
32598-78	57	33165-80	73	33429-39	83	34050-36	77	34488-52B	77
32601-72	27	33166-80	71	33430-50	71		79	34494-74C	73
	57	33167-79	73	33430-54	71	34053-36	79	34498-52	77
	59	33170-79	73	33438-50	71	34057-36	79	34500-52A	77
32602-76	57	33170-79A	73	33626-72	95	34062-52	73	34517-80	73
32602-80	57	33174-79	73		230		77	34518-80	73
32605-67	59	33175-16A	71	33630-70	75		79	34525-54	77
32605-69	59	33176-79	73	33631-66	79	34064-52	77	34551-52	77
32605-70	57	33177-79	73	33632-52	75		79	34552-52	77
	59	33182-63A	71	33636-70	75	34066-52	77	34555-52	77
	59	33187-79	73	33644-65	75		79	34560-52	77
32606-82	27	33188-79	73	33656-60	79	34068-52A	73	34565-52	77
	55	33189-63	280	33660-70	75		77	34600-74	77
32607-70	27	33190-79	73	33660-74A	75	34090-84	83	34606-54A	77
	59	33196-79	73	33664-61	75	34158-36	73	34609-52	278
32608-76	27	33197-79	73		278		77	34609-65	77
	59	33198-79	73	33675-37A	79		79	34611-65	77
32609-78	59		239	33676-66	79	34159-36	73	34652-80	73
32610-76	57	33199-79	73	33683-80	275		77	34661-80	73
32616-70A	59	33201-79	73	33745-31	79		81	34690-65	77
32629-70	57	33202-63	71	33775-37	79	34160-39	77	34690-74A	77
	59	33213-31	71	33776-47	79		81	34701-78	83
32629-80	57	33215-30	71	33776-66	79	34165-36	77	34702-78	83
	59	33237-64	63	33778-47	79		81	34702-79	83
	59	33266-78	278	33778-60	79	34168-39	77	34702-80	83
32661-70	59	33276-70	83	33789-66	79		81	34703-78	83
	61	33277-30A	71	33791-66	79	34168-52	73	34705-65B	83
	61	33288-37	71	33851-52A	75	34175-36	77	34711-80	83
32669-47	59	33290-38	71	33857-66	79		81	34714-62A	83

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
34720-56	83	35106-50	83	36842-41	93		89		97
34723-47	83	35322-38	83	36857-46	93		91	38608-68	95
34724-30	83	35336-74	73	36869-48	93	37337-36	89	38608-72	95
34726-84	83	35337-36	83	36869-70	93	37357-41	89	38608-82A	95
34797-70	77	35365-36	82	36871-40	93	37357-84	91	38609-68	95
	81	35440-38	83	36880-30	93	37361-41	89	38609-72	95
	83	35614-65	85	36889-41	93	37436-36	83	38618-52	97
34798-79	77	35614-70	85	36906-36	93		89	38618-68C	95
34799-65	77	35614-80	85	36909-30	93		89	38622-78	175
34800-60	81	35630-40	85	36913-41	93		89	38623-68	95
34801-60	81	35635-69	85	36916-36	93	37496-41	89	38641-61P	271
34802-65	81	35665-36A	85		97	37496-65	89	38712-68	95
34803-59	77	35695-76	85	36917-36	93	37496-84	91		102
	81	35700-69	85	36917-65	93	37503-41	89		103
34824-36	77	35701-76	85	36918-52	97	37523-15A	89		105
	81	35703-69	85	36956-65A	115		91		115
34824-79	73	35716-76	87		117	37549-41	89		117
35039-65	83	35716-84	87	36962-67	115	37550-41B	89		233
35039-70C	83	35751-30	87		117	37550-84	91	39974-64	99
35039-80	83	35762-39	87	36964-67	115	37566-58	89	39976-65B	99
35039-84	83	35765-36	87		117	37567-41A	89	39990-65	99
35040-50	83	35775-39	87	37052-65	93	37574-44	89	39992-65C	99
35046-30	83	35777-79	276	37053-65	95	37576-41	89	39993-65	99
35050-40	83	35789-36	87	37054-79A	95	37581-47	89	39996-65	99
35065-65B	85	35791-36	87	37070-398	88	37583-41	89	39998-65	99
35067-77A	85	35810-30	87		89	37585-41	89	40003-79	99
35070-77	85	35811-36	87		89	37702-70A	89	40007-36A	99
35070-80	85	35812-36	87		89		99	40026-15E	99
35070-82A	85	35850-64	99		91	37707-82	89	40029-15E	99
35072-70	83	35851-64	99	37072-79	71		99	40033-15	99
35073-70	83	35852-64	99		83	37707-84	91	40034-15	99
35079-80	85	35875-36	87	37074-38A	88		99	40052-15	99
35079-82A	85	35876-36	87		91	37741-67	87	40052-65	99
35094-31	85	35877-30	87	37077-68	88	37741-82	87	40053-15	99
35094-65	85	35878-36	87	37089-84	91	37800-64	91	40055-34	99
35100-36	83	35879-36	87	37090-84	91	37850-68	89	40066-12	99
35100-79	83	35882-36	87	37222-52	199	37855-41	89	40070-28	99
35111-36	83	35883-30	87	37228-75	88	37860-41	89	40091-15	99
35111-80	83	35884-36	87		89	37871-41	89	40092-15	99
35125-37	85	35915-36	87		89	37871-84	91	40093-15	99
35129-36	85	35917-30	87		89	37901-84	91	40094-15	99
35131-36	85	35920-36	87	37285-41	88	37902-84A	91	40209-55	99
35159-39	85	35961-52	87	37285-75A	88	37903-84	91	40210-55	99
35171-37	85	36045-70	87	37285-84	91	37904-84	91	40211-55	99
35175-38	85	36046-36	87	37305-41	89	37905-84	91	40212-80C	87
35203-36	85	36048-36	87	37305-65	89	37906-84	91		99
	99	36048-76A	87	37305-70	89	37907-84	91	40217-79	101
35211-36	85	36140-36	83	37312-75	89	37930-68A	89		121
	99	36150-31	83		89	37931-64	91	40210-65A	101
35216-36	85	36156-36	83		89	37975-61	89	40271-65A	101
	99	36810-65A	93		89	37975-84	91	40272-65A	101
35230-59	85	36811-65	93		91	38010-41	89	40275-55A	101
35231-36	85	36812-65	93	37313-65	89	38025-41	89	40275-70	101
35282-59	83	36816-65A	93		89	38077-41	89	40275-83	101
35282-79	276	36830-36	93		89	38460-52	81	40280-70	101

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
40282-70	101	41400-67	119	41761-50	117	42304-70A	117	42521-80	280
40299-70	101	41425-57	119	41761-78	117	42304-79	115	42522-80	280
40299-83	101	41470-62	101	41762-55A	117	42304-82	102	42522-82	280
40324-70	101	41470-67	101	41764-70	117	42304-84	115	42524-82	280
40375-70	101	41470-73A	101	41764-79	115	42309-70	115	42526-82	280
40384-70	101		121	41765-58	117		117	42527-82	280
40384-83A	101	41485-30	101	41766-58	117		251	42531-82	280
40385-70	101	41485-67	101	41768-73	105		253	42532-82	280
40392-70	101	41552-67	125	41769-58	117		255	42534-82	280
40906-82A	121	41552-73	121	41780-79	117		259	43006-44A	121
	278	41570-77	135	41791-79A	279	42311-58	117		127
40908-81	121	41576-30	175	41800-81A	280		251	43032-403	121
	278		135	41801-55A	119		253		125
	289	41580-79	121		255		255		265
	291	41583-84	135		259		259		278
40909-81A	121	41592-79	121	41801-63	119	42314-71A	115		289
40911-81	121	41594-73	121	41806-72B	105		117		291
40912-81	115	41595-67	125		121	42316-80	280	43085-81	121
40912-84	115	41595-73	121	41808-63	119	42318-72	115		125
40916-81	111	41596-30	119	41813-79	105		117		278
40917-81	111	41596-63	119		121		255		291
40918-82	280	41600-67	119	41814-76	105		259	43157-83A	283
40919-81	111	41603-32	125		121	42319-72	115	43288-82	263
40920-79	280	41650-58	119	41835-56	119		117	43290-82	263
40920-82	280		255		255	42321-71	117	43291-82	263
40921-79	280	41664-82	280		259	42327-70	115	43292-82	263
40922-79	280	41665-82	279	41835-69	113		117	43293-82	263
40932-81	121	41670-73	105		115	42333-70	117	43294-82	263
40934-82	121		115		117	42333-79	115	43304-73	121
40939-79A	121		117	41838-58	119	42374-77B	115		278
40951-82	278	41720-50	119		255	42374-82A	280	43340-83	123
40952-82A	278		255		259	42375-77	115	43483-77A	121
40969-79	253		259	41836-63	119	42376-77A	115	43485-75	123
40981-73	121	41731-82	102	41837-50	119	42401-70	117	43495-84	123
40982-70	265	41734-73	105		255	42401-73A	117	43530-35A	105
40985-76	265		109		259	42401-79	115		113
41004-80	280		111		271	42402-70	117		119
41004-82	280	41737-63	117	41837-63	119	42402-73A	117		255
41033-82	280	41740-63	119	41841-31	119	42402-79	115	43531-35	119
41039-82	279	41741-63	119		213	42411-70	117	43532-73	123
41123-79	263	41742-58	119		219	42448-82A	280	43540-73A	123
41124-81	263		255	42269-30	77	42454-80A	280		278
41126-79	263		259		117	42455-80	115		289
41196-55	125	41743-50	119		279	42470-82A	280		291
	265	41744-58	119	42269-70	47	42480-70	117	43542-67	125
41196-73	121	41745-79	115		115	42480-73	117		265
	278	41746-79	115		117	42480-79	115	43549-67	125
41196-83	121	41747-82A	102	42300-63	119	42507-80	280	43551-76	265
41197-73	101	41748-63	119	42300-73A	105	42507-82	280	43552-39	125
	121	41749-56	105		115	42511-80	279	43554-35	125
	278		119		279	42515-80	280	43556-35	125
41198-73	105		255	42301-79	115	42515-82	280	43558-39	125
	121	41750-63	119	42302-58	117	42517-80	278	43559-73	123
41210-55	125	41753-80	280	42303-70A	117	42519-80	280		278
	265	41754-79A	115		271	42520-80	149	43560-35	125

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
43562-76	125	44067-84	105	44331-73	107	45042-82	113	45710-56	131
43563-35	125		109		109		102		127
43564-35	125	44068-84	105	44401-49B	113	45044-82	95		131
43566-35A	125		109	44441-75	123		102	45711-51A	127
43567-79	279	44070-72	105	44441-79	123		163		131
43570-35	125		109	44443-81	123	45051-62	102	45717-63	127
43571-35	125	44071-72	105	44444-79	263	45053-72	103		131
43574-55	125		109	44448-48	113	45055-72	103		285
43576-35	125	44105-72	105	44454-48	113	45055-72	103	45718-48	127
43577-67	125	44105-80	109	44461-76	264	45056-77	103		129
	255	44106-72	105	44463-82	276		117		131
	265	44106-80	105	45002-41	95	45057-72	103		133
43578-35	21		109		113	45057-82	102	45718-60	127
	125	44107-72	105	45002-65A	95	45059-72	103		131
43592-70	125		109		113	45060-54	113		285
	265	44108-72	105	45002-69	113	45061-72A	103	45733-48	127
43601-70	123	44111-72	105	45012-72	103	45063-72	103		131
43602-70	123	44118-80	105	45012-82	102	45063-82A	102	45752-50	127
43603-70	123		109	45013-72	103	45071-72	103		131
43615-82	123		109	45013-82	102	45073-26	271		243
43650-82	263	44123-72	105	45016-72	103	45092-66	35	45753-50	127
43875-48	125	44124-72	107	45016-82	102		37		131
43875-67	125		109	45017-82A	95		41		243
43875-73	125	44126-82	280	45023-41	95		43	45754-60	127
43885-72	105	44127-72A	107		113		45	45757-49	127
	125	44132-72	107	45023-65	95		113	45765-49	127
43886-30	113		109		113	45105-77	103	45766-49	127
43899-86	123	44133-72	107	45023-69	113		115	45768-49	127
43945-79	111		105	45024-65A	95		117	45769-49	127
43946-79	111	44134-72A	107		113	45120-72A	103	45775-49	127
43947-79	111		109	45024-72	103	45137-51	113	45775-50	127
43957-80	111		163	45030-28	95	45152-78A	280	45776-49	127
44000-780	105	44135-74	107		113	45154-84	280	45777-50	127
	109	44138-78	284	45030-65A	95	45159-50	113	45777-77	131
44002-78	105	44146-77	105		113	45161-71	271	45778-50	127
	109		107		271	45202-50A	113	45778-77	131
44004-70	105		109	45031-41	95	45205-49	113	45800-50A	127
44004-80	109		111		113	45216-49	113	45807-72	127
44005-78	105		279	45031-65	95	45216-52	163	45815-84	131
	109	44154-72	107		113	45405-75A	131	45816-84	131
44006-60A	105		109	45031-72	103	45419-80	131	45821-75	107
	105		279	45031-82	102	45498-72A	127		169
44007-80	105	44155-61	111	45032-72	103		131		129
	109	44166-73	107	45032-82	95		285		131
44008-80	105		109		102	45509-72B	127	45822-75	107
	109	44197-77	107	45033-49	95		131		109
44011-81	105		109		113	45690-69	127		129
44012-81	105		279	45033-65	95		131		131
44014-81	279	44200-82	279		113	45695-73	127	45823-49	129
44038-80	111	44201-82	279	45034-68	95	45695-77	131	45824-49	129
44039-80	111	44207-82	279		113	45697-69	127	45825-77A	131
44042-80	111	44208-82	279	45036-68	95		131	45826-49	129
44050-82A	279	44209-82	279		113	45700-69A	127	45828-77A	133
44056-84	105	44211-82	279	45036-82	95		131	45829-77	133
	109	44212-82	279	45039-68	95	45708-50B	127	45830-48	27

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
	129		133	47519-BJA	123	50620-74	150	51775-31	147
	123	46731-43	129		135	50622-40	150		281
	282		129		263	50623-40	150	51776-30	147
45831-77	133		133	47548-B4	135	50635-14A	150		287
45832-77A	133		133	47554-73	135	50635-82	150	51780-30	147
45834-77	133	46732-48	129	47698-65C	135	50655-70	150		287
45836-40	129	46740-60	129	47730-77	115	50657-70A	150	51790-29	147
45837-77	133		129		135	50658-70A	150	51791-31	147
45838-77	133		133	48152-B2	157		150		287
45840-48	129		133	48155-30	237	50659-70	150	51795-29	147
45842-77	133	46741-71	129	48300-60	129	50668-35	117		287
45843-77	133		133		133		251	51900-30	147
45844-77	133	46743-60	129	48311-60	129	50880-69	151		287
45845-77	133		133		133	50900-72	280	51911-29	147
45849-49	129	46746-52	129		135	50912-72	280		287
45850-48	129		133	48315-60	129	50939-52	151	51918-29	147
45852-46A	129	46751-46	129		133	50940-52	151		287
45854-48	129		129	48330-46A	129	50945-80	247	51920-29	147
45855-77	133		133		133	50946-52	151		287
45856-48	129		133	48332-46B	133	50970-52	151	51925-37	147
45858-77	133	46901-75	230	48361-80	133	50973-65	151	51925-65	147
45859-77	133	46901-75	230	48365-46A	129	51190-82	269		287
45950-48	129	46902-73	230		133	51195-80	281	51930-82	289
45964-49	129	46902-75	230	49027-79	137	51196-60	281	51988-66	147
	133	46903-75	230	49037-58B	137	51610-58	147		287
45972-48	129	46904-75	230	49038-58B	137		287	52004-25	147
46051-49A	129	46905-75	230	49040-79	137	51614-58	147	52006-47B	147
46100-48	129	46908-75	230	49063-30	251		287	52064-78	281
46111-48	129	46907-77	230		253	51626-36	147	52090-25	147
46121-48	129	46908-77	230	49079-72	275		287	52096-34	147
46125-48	129	46909-77	230	49135-67B	137	51634-30	147	52098-34	147
46128-48	129	46910-77	230	49137-67B	137		287	52103-31	147
46161-49	129	46911-77	230	49168-67B	137	51640-29	147		187
46172-48	129	46912-77	230	49169-67B	137		287		283
46700-60	129	47013-720	135	49170-67B	137	51642-29	147		281
	133		285	49171-67B	137		287	52104-38	147
46715-48	129	47013-78C	280	49400-59A	139	51644-12	147	52115-85	147
	129	47015-81	135	49404-61	139		287		149
	133	47094-58	135	50011-30A	139	51651-79	281		291
	133	47107-81	280	50013-74A	139	51661-36	147	52120-79	147
46718-48	129	47108-81	280	50014-74	139		287	52147-80	143
	129	47116-77	280	50015-74	139	51672-25	147	52148-80	143
	133	47117-77	280	50028-74A	139		287	52149-80	143
	133	47261-68	135	50036-36	139	51674-25	147	52150-80	143
46720-45	129	47446-79	135	50052-70	139		287	52153-80	143
	129	47446-82	280	50061-36C	139	51770-29	147	52154-80	143
	133	47498-62A	280	50100-70	139		287	52156-80	143
	133	47500-73	135		183	51771-29	147	52157-80	143
46727-42	129	47500-76	135	50517-80	281		287	52159-80	143
	129	47510-58	135	50603-66	150	51772-31	147	52162-80	143
	133	47513-58	135	50603-74A	150		287	52163-80	143
	133	47517-58	135		281	51773-31	147	52169-81	149
46730-40	129	47519-72	107	50614-60	150		287	52171-81	149
	129		123	50616-66	150	51774-31	147	52178-77	281
	133		135	50619-74A	150		287	52180-80	281

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
52185-79	149	52575-65	145	53275-80A	153	53419-80A	159	54517-67	161
52186-79	149		287	53282-80	153	53424-79	153	54530-67	161
	157	52580-77	141	53291-69	157	53425-80	153	54534-73	161
52186-84	157	52581-77	141	53291-77	157	53426-80	153	54534-81	161
52411-79A	149	52583-68	145	53293-79	153		292	54538-73	161
	209		287		157	53427-80	153	54540-67	161
52418-81	143	52584-68	145		293	53428-80A	153	54543-65	161
52419-81	143		287	53294-77	153	53429-80	153	54544-65	161
52420-81	143	52586-68	145		157	53431-80	153	54545-65	161
52421-81	143		287	53295-77	157	53433-80	153	54558-73	161
52465-65	149	52596-65	145	53296-77	157	53434-80	153	54559-73	161
52466-65	149		287	53297-77	157		292	54570-73	161
52467-65A	149	52602-65	145	53298-77A	157	53435-80	153	54590-56	161
52469-65A	149		287	53299-76	284		292	54635-67	161
52480-60U	149	52603-77	141	53303-69	157	53437-79	153	54702-67	161
52490-60C	149	52605-58	145	53304-69	157		292	54702-73	161
52502-81	287		287	53305-69	157	53439-79	153	54704-65	161
52506-65b	145	52608-68	145	53306-69	153		175	54708-65	161
52507-65C	145		287		157		257	55919-79	163
52510-65A	145	52609-65	145		267		292	55919-82	163
52510-77	141		287	53306-80	153	53440-79	153	55940-79A	163
52511-65	149	52626-77	141		267		292	55940-82	163
52514-77A	141		143	53307-65	153	53447-83A	292	55941-79A	163
	143	52622-77	141		157	53450-52	159	55941-82	163
52514-73	141		143		267	53453-84	159	56044-72	163
52516-77A	141	52623-77	141	53310-67A	157	53454-52	159	56044-75	163
	143		143	53311-69	157	53454-84	159	56056-72	163
52516-78	141	52650-65	151	53312-69	157	53455-52	159	56056-75	163
52518-77A	141	52682-74	151	53316-69	159	53456-52	159	56062-73	225
52518-75	141	52686-77A	151	53321-69A	159	53458-84	159		283
52520-64A	145	52688-65	151	53324-69	287	53457-79	155	56070-81	163
52524-59	149	52690-77A	151	53325-65	159	53477-80	155		225
52525-65	145	52698-65	151	53326-69A	153	53477-80A	155		229
	287	52700-65	151		159	53478-80	155		283
52526-66	149	52773-82	292	53327-77	159		292	56073-83	163
52533-78	141	52793-64	145	53328-78	284	53479-80	155		225
52534-77	141	52801-77	141	53329-69A	153	53492-79	159		229
52534-78	141	52802-77	141		159	53513-81	155	56081-82	283
52536-78	141	52803-77	141	53331-69	153		292	56086-81	281
52538-72	281	52804-77	141		159	53546-64A	159	56102-60	163
52540-79	291	52805-77	141	53332-69	153		293	56105-84	163
52541-59	149	52806-77	141		159	53550-79A	159	56115-77	163
52550-65	149	52807-77	141		287	53563-82	155	56121-73A	129
52551-38A	145	52808-77	141	53334-78	284		292		133
	287	52809-77	141	53350-76	284	53564-82	155		285
52554-59	149	52810-77	141	53399-86	159		292	56129-73A	129
52560-66	145	52811-77	141	53403-58U	159	53580-82	157		133
	287	52812-77	141	53404-79	153	53581-82	157	56153-73	163
52566-65	145	52813-77	141	53406-85	159	53582-82	157	56154-52	163
	287	52814-77	141	53410-83	159	53584-82	157	56158-49	163
52567-77	141	52815-77	141		293	53586-82	157	56158-73	163
	143	52816-77	141	53419-85	294	54500-73	161	56159-49	163
52568-77	141	53161-80A	153	53417-65A	159	54500-81	161	56159-73	163
52569-77	141	53162-80	153	53418-65A	159	54515-73	161	56201-62A	163
52573-77A	289	53269-81	285	53419-80	159	54516-58	271	56205-62A	163

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
56206-B1A	163	57084-71	195	58568-36	171	59216-59B	177	59986-70	179
56216-53	163	5797E-63	155	58581-37	173	59216-76	177	59988-72	179
56220-53	165		242	58587-36	171		177		265
56220-56	165	57990-60B	176	58589-36	171		257	59995-50A	179
56220-74	165	57995-61	265	58992-61HR	285		290	59995-72A	179
	167			59000-58G	175	59219-79	290	59995-73	179
56220-E1B	165	58033-49A	169	59000-82	290	59233-76	177	59997-55	179
	167	58037-49A	169	59076-77	178		257	59999-55A	179
	261	58048-50	169	59077-77	178	59237-E3	261	59999-72	179
56216-62	165	58049-50A	165	59078-77	178	59238-60	177	59999-73	179
	167	58072-63	176	59079-77	178		290	60001-55	179
	219	58073-63	176	59080-77	178	59239-60	177	60002-55	179
56276-10	165	58102-49	195	59082-79	175	59249-78	284	60111-56A	178
56288-53	165		219		257	59252-69	177	60302-63	185
56300-74	167		251	59093-79	175	59254-69	173	60302-73	282
56302-74	167	58125-63	170	59101-79A	175	59254-72	177	60302-78	282
56303-74	167	58132-66	243	59121-60	178		261	60348-65A	183
56313-76	167		247	59122-80	178		290	60386-84	177
56323-81A	167	58153-77A	169	59130-65	177	59255-72	177	60388-H2	185
56324-81A	167	58160-69B	169	59138-78	284		243	60389-70	177
56371-65	165	58161-69	169	59139-78	284		255	60411-79A	183
56378-65	165	58162-69	169	59140-78	284		257	60414-62	183
56389-74	167	58163-69	169	59141-78	284		267	60414-84	183
56392-77	167	58164-69A	169	59142-78	284		281	60441-79	183
56393-74A	167	58165-69A	169	59143-78	284		290		265
56394-74	167	58165-83	169	59150-79	178	59261-77	173	60444-82	183
	229	58166-69A	169	59151-79	178	59263-79	267		293
56395-74	167	58166-63	169	59152-79	178	59271-66	203	60444-84	293
56395-81	167	58167-69A	169	59153-79	178	59601-79B	177	60494-60	177
56396-74	167	58168-69	169	59154-79	178	59604-69C	177	60505-55	183
	229	58171-69	169	59155-79	178		281	60507-77	282
56397-74C	167	58176-76	264	59156-79	178	59604-81HR	286	60507-82A	282
	229	58178-77A	169	59157-79	178	59627-80	290	60508-70	183
56400-53A	165	58181-78	169	59158-79	178	59627-80B	261		269
56401-73	165		169		257	59639-83	281	60508-82A	183
56402-81A	167	58182-73	169	59159-80	178	59641-82A	177	60514-60	183
	229	58225-41	170		257	59646-80	177	60516-65A	63
56410-53	165	58318-76	284	59164-80	177	59658-79	177	60518-85	183
56500-79	167	58320-76	169		290	59699-73	177	60523-82	183
56502-74	167		284	59166-80	173	59731-77	141	60525-82A	183
56503-65	165	58321-76	169		177	59790-62	177	60531-83B	282
56505-74	167		284	59167-80	177	59853-58A	177	60538-81D	183
56506-74	167	58411-76	169	59169-80	177	59862-30	177	60540-36	183
56507-74	167		169	59170-80	177	59887-59C	177	60549-70	183
56508-76	167	58412-76	169	59173-81A	178	59887-78	177		191
56520-77	167		169		257		290	60556-74	183
56575-26	219	58416-77	169	59174-81	285	59932-58	177	60559-80	63
56581-26	219		169	59180-80	177	59932-77	177	60565-36	183
56589-60	127		285		257	59933-58	177	60567-36	183
	165	58426-78	284	59181-80	177	59933-77	177	60567-65B	183
56589-79	165	58511-37	171		257	59981-74	179	60572-78	183
56590-60	165	58531-37	171	59196-65	178	59982-74	179		275
56590-79	165	58554-51	171	59204-59B	177	59983-75	179	60574-85	151
56609-52	27	58563-51	171	59204-78	177	59984-72	179		271
	57	58566-30	171	59211-74	177	59984-73	179	60589-69	185

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
60617-55A	183	61259-74	189	61904-81	189	63529-57	9		197
60640-29	183	61259-75	189	61905-81	189	63533-15	21	65294-78	195
60644-65	183	61268-74	189	61906-81	189		31	65318-58A	195
60645-65	239	61268-75	189	61907-81	189	63533-41	21		197
60646-65	183	61296-81A	285	62096-69	187		31	65318-59C	195
60650-54A	183	61325-79	189	62125-55B	187		183	65336-77	282
60655-55	183	61326-79	189	62129-75	187		191	65344-77	282
60975-76	187	61327-79	189	62141-69P	187	63533-65	21	65349-71	282
60982-81HK/28		61328-79	189	62142-69P	187	63536-84	191	65349-81A	282
60983-81HK/28		61348-78	189	62150-50	59	63539-84	191	65354-77	282
61079-82	195	61349-78	189		187	63540-62	31	65397-81A	282
61102-75	187	61350-78	189	62161-75	187	63541-70	21	65399-81	282
61102-83A	187	61351-78	284	62162-75	187		191	65401-81	282
61103-36	187	61352-78	189	62166-81	187	63543-82	9	65411-80A	282
61103-65	187	61353-78	189	62168-81	187	63549-85A	191	65435-70	197
61103-73A	187	61354-78	189	62172-75	187	63551-82	280		282
61103-83	187	61355-78	284	62360-50	187	63564-84	191	65440-48	195
61111-77	187	61356-79	189	62375-57	5	63573-82	280		197
61116-65	187	61357-79	189	62483-81	191	63578-52	21	65443-60	195
61122-39	187	61358-79	189	62484-81	4		43		197
61122-79	187	61359-79	189	62504-82A	191		191	65465-36	195
61123-81	285	61360-79	189	62531-80	290	63580-62A	191		197
61126-71	282	61370-75	189	62534-65	191	63587-84	191	65493-58	197
61177-71	282	61371-75	189	62536-82	135	63591-82	47	65493-66	197
61141-82	187	61372-75	189	62541-82A	191		191	65494-61	195
61141-83B	187	61373-75	189	62563-65	191	63609-72	103	65494-65	195
61145-71	187	61425-83	187		199	63610-70	31	65494-70	195
61146-72	187	61470-76	189	62571-77A	193	63614-72	31	65496-61	195
61148-74	187	61471-76	189	62574-77	193	63795-80	192	65496-66	195
61148-75	187	61472-76	189	62576-65A	95	63792-77	193	65496-70	195
61150-74	183	61473-76	189		191	63794-77	192	65505-58	197
61150-75	188	61474-76	189	62576-79	95	63799-65A	192	65505-61	195
61153-74	188	61475-76	189		191	63805-80	192	65512-37A	195
61153-75	188	61476-76	189	62577-77A	193	63810-80A	192		197
61155-74	188	61477-76	189	62578-77	193	63826-53	192	65513-58	195
61155-75	188	61478-76	189	62610-52A	192	63831-67	192		197
61159-80A	290	61479-76	189	62611-60	192	63840-48A	192	65519-48A	195
61162-74	178	61605-36	187	62612-60	192	63840-53	192		197
61169-82	187	61650-77	189	62620-68	192	63846-67	192	65538-65	195
61205-77	189	61651-77	189	62625-70A	191	63876-53	192	65539-65	197
61207-77	282	61771-72	189	62628-68	192	63879-53	192	65556-80	282
61213-83	187		243	62702-52	23	63881-67	192	65557-80	282
61217-69A	187	61773-76	189		63	63882-67	192	65561-70	195
61215-83	187		243	62783-60A	9	63885-65	192		197
61229-83	187		247	62785-60A	9	63885-70	192		282
61230-69A	187		284	63500-65	47	65239-41A	197	65563-70	197
61237-820H/290		61796-77	189		191	65240-41A	197		282
61240-820H/290		61797-77	189		193	65240-61	195	65565-70A	195
61243-78	189	61796-77	189	63501-68	5	65242-708	195		197
	284	61799-77	189		187	65242-768	195	65566-80	282
61253-79A	189	61835-76	284		191	65276-62	137	65567-70	195
61257-74	189	61900-81	189	63526-57	9		195	65603-81	282
61257-75	189	61901-81	189		23		197	65615-80A	282
61258-74	189	61902-81	189		27		282	65707-77	195
61258-75	189	61903-81	189	63527-57A	9	65293-58	195	65710-65	195

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
65713-61	197	67215-68	201	67672-77	207	67843-70	209	68482-73	283
65834-68A	195		201	67672-80	207	67843-70	213		290
	197	67217-68	201	67673-77	207	67844-70	205	68483-73	283
	242		201	67674-77	207		219		290
65991-75C	283	67605-68A	203	67674-80	207	67846-70	213	68486-82A	283
65991-82	283	67607-68	205	67675-77	207		219		290
66000-60	283	67609-68	205	67676-77	207	67847-80	209	68487-82	283
66006-290	199	67610-78	205	67677-77	207	67848-80	209		290
66007-84	199	67623-64C	205	67678-77	207	67850-84	209	68500-68	211
66016-65	199	67624-84C	205	67679-77	207	67853-84	219	68510-73	213
66035-79	191		205	67680-77	207	67860-76	209	68510-74A	213
66047-80A	191	67627-648	205	67681-77	207		219	68514-73	283
	199		207	67682-77	207		283		290
66098-84	195	67627-64C	207	67683-77	207		284	68518-80	213
66099-80	283	67627-708	205	67684-77	207	67861-84	219	68519-88	213
66103-74A	283	67628-59	205	67685-77	207	67898-86	209		219
66191-80	283	67628-59A	205	67686-77A	207	68008-74A	211	68520-80	213
66204-74	199	67629-59	205	67687-77	207		257	68521-63A	213
66204-80	199	67629-59A	205	67688-77	205		260		261
66212-65	199	67630-82	205		207	68010-648	211	68525-52A	213
66228-78	283	67632-70	205	67690-77A	207	68025-73	211	68525-67	213
66352-65	199	67633-77A	207	67691-77	207		260	68526-63	213
66353-65	199	67634-59	205	67692-77	207	68026-73	211	68527-63	213
66367-73	283	67637-70	205	67695-77	207		260	68541-64A	213
66376-80	199	67638-59	205	67696-81	209	68034-77	211		219
66377-65	199	67638-84	205	67697-81	209		260	68543-648	213
66378-70	199	67639-59	205	67702-70	209	68046-79	177	68545-70	213
66383-65	199	67640-59	205	67702-81	209	68047-79	177	68545-81	213
66383-70A	199	67641-59	205	67712-60A	209	68086-55	211	68552-70A	213
66425-68	199	67642-59	205	67712-83	209	68090-69	211		261
66476-73A	283	67643-59	205	67716-60A	209	68093-55A	211	68554-82	213
67004-68B	201	67644-70	205	67717-48B	205	68114-55	211		261
67004-80	201	67646-59	205	67717-64	209	68119-69	211	68557-70A	213
67005-68A	201	67647-59	205	67718-60A	209	68121-55	211	68563-60	209
67005-68B	201	67648-64	205	67724-71	209	68122-55	211		216
67006-68B	201	67649-59	205	67726-71	209	68123-55	211	68564-60	209
67006-81A	201	67650-59	205	67729-48	197	68123-73	211		216
67026-62	201	67654-78	205	67732-71	209		257	68565-60	209
67026-81	201	67651-59	205	67752-77T	289		260		216
67027-618	201	67652-59	205	67753-60	209	68165-47	211	68566-60	216
67030-61C	201	67655-59	205	67753-70	209	68165-64	211	68570-63	213
67031-68	201	67656-59	205	67757-65	209		213	68571-63A	213
67044-68	201	67657-59	205	67765-60	209		260		261
	201	67658-59	205	67766-60	209	68166-64	213	68572-64A	213
67045-68	201	67659-59	205	67767-60	209	68185-70	211		261
	201	67660-59	205	67768-60	209	68196-55	211		283
67066-76	201	67661-59	205	67769-60	209	68225-55	211	68576-70	213
67067-76	201		207	67778-60	209	68462-64	233		261
67068-76	201	67662-59	205	67779-60	209	68476-73A	283	68582-73	233
67069-76	201	67663-59	205	67780-60	209	68477-73	263	68586-63	213
67070-76	201	67664-59	205	67782-60A	209		290		261
67073-61	201	67670-77	205	67840-70	213	68478-73	283	68586-63A	213
67075-57A	201		207		219	68479-73	283		261
67130-69	201	67671-77	207	67842-60	127	68481-73	283	68598-70	219
67141-36	201	67671-80	207		131		290	68600-70	219

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
68601-70	219	70047-82	229	70430-75	205	71151-48	201	71571-82	229
68603-62	219	70051-72A	230		221		235	71572-82	249
68603-70	219	70054-73A	230	70456-73	59	71151-70	235	71573-82A	229
68604-62	219	70058-50B	215		223	71159-73A	235	71574-82	229
68605-70	219		231	70461-47B	283	71161-70	235		236
68607-62A	219	70059-66	231	70504-61	167	71162-70	235	71580-36	237
68607-64B	219	70060-29	205	70551-69	223	71166-73	235	71587-36	237
68604-64	219		221	70552-69	223	71182-47A	235	71626-62	155
68607-70	219		231	70553-69	223	71190-47	235		159
68608-70	219	70066-60	231	70554-69	223	71240-80	235		267
68607-72	219	70066-70	231	70555-69	223	71241-68B	235	71774-77	57
68609-70	219	70068-79	223	70556-71	223	71244-68B	235	71795-63A	241
68670-70	219	70068-82	223	70558-71	223	71295-68	235	71800-26A	231
68672-36	221		253	70559-71	223	71297-68	235	71802-26A	231
	221	70068-84	223	70574-68	205	71299-79	235	71804-26	231
68674-69	221		253		233	71300-68A	235	71804-65	231
68689-38	221	70069-65B	223	70575-50	215		285	71806-53	231
68690-69	221	70069-63A	223	70576-60	205	71300-79	235	71811-26	231
68693-36	221	70082-82	229		215	71303-81	235	71813-26	231
68720-62	221	70105-73	223		217	71305-82	235	71840-29	231
68721-62	221	70128-79	215		221	71430-83	221	71843-29	231
68725-62	221	70144-73	223		225		275	71851-29	231
68726-62	221	70145-73	223		233	71431-83	221	71856-61	231
68726-64	221	70152-84	221	70577-26	177		275	71859-29	231
68727-64A	221	70158-73	223		215	71432-83	275	71859-36A	231
68728-64	221	70159-73A	223		281	71455-67	235	71861-29	231
68760-66	221	70160-73	223	70581-73	227	71463-73A	239	71870-79	241
68791-82	215	70169-70	223	70643-79A	155	71466-65	239	71871-75	51
	221		235		202	71467-65	239	71875-81	241
68795-68	215	70191-73A	223	70644-79A	155	71469-65B	239	71900-70	236
	221	70209-65A	223		292	71473-77B	239	72001-69B	230
68795-82	215	70218-82	229	70645-79	155	71483-72	230		236
	221	70218-84	229		223	71484-72A	230	72023-51A	236
68797-60A	135	70219-82	229		292	71500-36A	237	72028-83	227
	221	70219-84	229	70646-79	155	71501-73A	237	72029-83	227
69000-70	217	70249-70	221		292	71506-36A	237	72037-71	247
69003-76	217	70281-47	223	70935-73	233	71507-64A	239	72038-71	207
69016-76	217	70282-47	223	71027-68	233	71507-71	239		227
69017-70	217	70301-84	205	71028-68	233	71510-36A	237		283
69117-65	217	70306-70	205	71029-68	233	71516-30	237	72039-71	211
69125-65	217	70318-70	217	71090-64	201	71519-70	230		227
69130-65C	217	70320-73A	223		209	71525-36	237		229
69131-68	217	70320-78	223		233	71533-72	230		292
69141-70	217	70320-80	223	71092-68A	209	71534-72	230	72041-71	227
69144-65	217	70320-82A	223		233	71541-73	237	72043-71	227
69149-65	217	70335-70	205	71096-30	205	71546-75A	230		229
69506-83	275	70336-68	205		231	71547-75A	230	72044-71	237
69510-83	275	70337-68	205	71134-68	233	71550-36	237		227
69999-71	236	70344-84	275	71138-68	233	71560-36	237	72046-74	227
70005-70	225	70346-84	275	71139-68	233	71562-36	237	72051-77	55
70016-65A	217	70425-70A	205	71139-70	233	71563-62A	229		227
70023-72	230		215	71141-68	233	71564-82	229	72052-79	155
70023-75	230	70428-70A	215	71143-75	233	71567-82	229		292
70024-73	230	70429-70	215	71144-70A	233	71568-82A	229	72053-74	227
70024-75	230	70429-80	215	71145-75	235	71570-82	229	72054-62	227

NUMERICAL INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
72054-64	227	87055-79	247	87435-79	249	88314-37	245	90503-78	267
72055-82	227	87057-79	247		263		249	90504-78	267
72056-82	227	87058-79	247	87435-83	249	88366-36A	245	90505-68	267
72057-64	227	87060-79	247	87438-67	243		249	90505-78	267
72275-74	155	87064-67A	243		253	88425-07	245	90806-78	267
	177	87071-79	255	87444-33	245		249	90807-78	267
	227		259		249	88481-67	245	90808-68	267
	260	87373-79	255		263		249	90809-67	269
	292		259	87657-58A	255	88487-67	245	90810-78	269
72300-70	235	87082-73	251	87657-76	255		249	90811-68	269
72310-70	235	87083-73	251	87670-76	255	88493-67	245	90820-74A	269
72311-70	235	87084-73	251	87671-76	255		249	90821-74A	292
72312-73	235	87094-363	242	87672-76	255	88528-67	245	90822-76	269
72325-46	235		247		259		249		284
72335-46	235	87100-79	247	87700-79	263	88694-67	245	90822-77	269
72341-56A	55	87103-79	247	87701-79	249		249	90822-78	269
	61	87105-79	247	87702-79	249	88695-67	245	90823-78	269
	235		253	87703-79	263		249		284
72345-48	235	87106-79	253	87704-79	263	88698-67	245	90823-77	269
74510-47A	241	87117-36	245	87705-79	263		249	90830-76	269
74510-64	241	87120-79	247	87706-79	259	88850-67	245	90841-79	269
74510-70A	241		261		263		249	90842-79	269
74511-58	241	87121-79	261	87750-58	255	88862-67	245	90843-79	269
74512-79A	241	87127-36	251	87752-58A	255		249	90845-79	269
74516-66	241		253	87775-56	255	88883-67	245	90849-77E	269
74521-77	227	87128-36	251		259		249	90851-77E	269
74531-58	241		253	87777-58	255	88885-67	245	90857-76	264
74533-70A	241	87135-36	251	87777-70	255		249	90871-70	269
74533-75B	241		253		259	88895-67	245	90875-77A	269
74534-80	241	87136-36	251	87778-58A	255		249	90877-77B	269
	278		253		259	90630-80	155	90891-63	269
74536-77A	55	87138-26	251	87778-64	255		159	90938-58	195
	155		253		259		267		197
	227	87176-37	243	87778-64A	259	90631-80	155	90913-67	269
	292		247	87900-67A	255		159	90914-78	269
74539-77A	55		251		257		267	90916-78	269
	155		253	87901-63A	257	90632-80A	267	90919-68	269
	227	87181-37	251	88100-24A	245	90743-83	292	90920-68	269
	292		253		249	90744-79	267	90921-68	269
74539-83	227	87191-58	251	88172-25	245	90745-79A	267	90924-67C	269
74563-65	235	87192-73	251		249	90746-79	267	90924-68C	269
74586-70	236	87197-73	251	88174-37	245	90771-79	155	90925-67C	269
74589-73	236	87205-58	251		249		227	90925-68C	269
74599-77A	236		253	88261-36	245		292	90931-70A	269
76251-80A	275	87206-58	251		249	90789-83	292	90937-64	269
83162-51	27		253	88264-36	245	90790-83	292	90947-63	269
	55	87254-24	243		249	90792-78	267	90949-63A	269
	57		247	88300-79	245	90793-78	267	90952-63	269
83566-51	117	87265-24	243		249	90794-78	267	90953-63	269
83975-37A	251		247	88301-79	245	90795-78	267	90955-79	269
84850-67	157	87267-24	243		249	90796-78	267	90957-64	269
85216-42A	161		247		261	90800-68	267	90960-64	269
86989-79	259	87433-36	243	88302-79	249	90800-78	267	90961-63A	269
87053-79	247	87433-76	243		261	90802-78	267	90961-70A	269

NUMERICAL INDEX


Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
90961-60	269		275	95578-41	123				
90963-63	269	91153-63	275		125				
90964-63	155	91158-49	273	95581-47	123				
	159	91159-82	275		125				
	269	91160-58	273	95582-47	123				
	292	91162-55	273		125				
90965-63	155	91163-58	273	95587-75	123				
	159	91164-58A	273	95588-75	123				
	269	91166-59	275	95590-77	123				
	292	91168-61	273		263				
	293	91173-84	275	95591-77	123				
90966-61	269	91174-84	275		263				
90967-64	269	91181-54	273	95592-78	123				
90971-79	269	91182-58	273		264				
90972-79	269	91191-64	275	95593-78	123				
90973-79	269	91192-64	275		264				
90974-79	269	91225-59	273	98600 FT	288				
90986-76	283	91225-67	273	98600 FU	288				
	287	91233-59	273	98603 FI	288				
	288	91234-59	273	98603 FL	288				
90989-63	269	91252-65	273	98606 FI	288				
	290	91257-49	273	98606 FU	288				
91000-76	284	91269-59A	273	99031-82	176				
91001-76	284	91290-59	273	99353-822	283				
91002-76	284	91305-59A	273						
91005-81	288	91309-61	273						
91006-81	288	91310-73	273						
91007-68A	173	91313-56	273						
91014-68	173	91354-59	273						
91021-63	173	91356-71	273						
91075-68B	173	91360-71	273						
91075-81	173	91372-57	273						
91081-66	173	91374-59	273						
91082-66	173	91379-56	273						
91089-58	173	91385-58	273						
	185	91574-58A	267						
	271	91582-79	149						
91090-71A	173	91704-15	223						
91091-61	173	91875-70A	283						
	177		290						
91107-77	173	91879-61B	216						
91123-77	173	92097-65	201						
91127-82	275	94422-82	277						
91128-73	271	94423-82	277						
91129-73	271	94424-78	277						
91134-70	271	94425-78	277						
91135-70	271	94430-78	277						
91142-70	271	94441-82	277						
91143-70	273	94442-82	277						
91146-73	273	94443-82	277						
91147-73	273	94444-82	277						
91148-73	273	94445-82	277						
91150-82	275	94446-82	277						
91151-83A	275	94451-82	277						
91152-83	221	94515-68A	277						

GENERAL INFORMATION (CONT'D.)

1981 & LATER VEHICLE IDENTIFICATION NUMBER (V.I.N.)

The full 17 digit serial, or Vehicle Identification Number (V.I.N.) is stamped on the steering head and on a label located on the front frame downtube. An abbreviated V.I.N. is stamped on the side crankcase, near the front of the engine.

Always give one of these numbers when ordering parts or making any inquiry about your motorcycle.

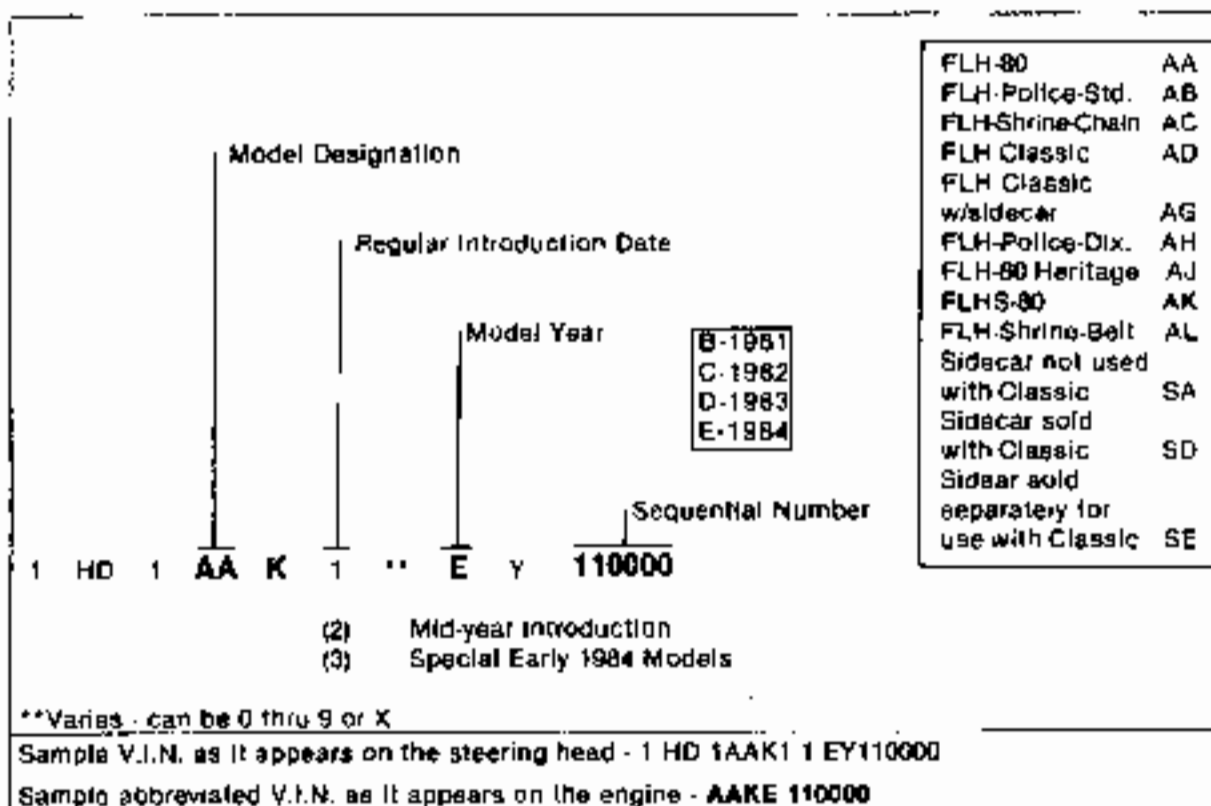

NOTE:

Also see inside front cover for additional ordering information and 1980 & earlier Serial Number information.