

TRIUMPH

REPLACEMENT PARTS CATALOG

Publication No 00-5738

FOR 1974

TRIDENT MODEL T150V.

Commencing at motor/frame No. CJ41610

IMPORTANT

**REPLACEMENT PARTS CAN BE OBTAINED THROUGH
NORMAL TRADE CHANNELS ONLY.**

NORTON TRIUMPH INTERNATIONAL LIMITED

KITTS GREEN - BIRMINGHAM B33. 0LF. - ENGLAND.

TELEPHONE. BIRMINGHAM 021-783-3657. - TELEX 339478.

Norton Triumph International Ltd. reserve the right to alter the designs or constructional details of their manufactures at any time without giving notice.

INTRODUCTION

Norton Triumph International Ltd. print out that the information contained in this catalog was complete and correct at the time of printing. Distributors will be informed of any subsequent alterations.

WARRANTY

Please refer to your local dealer or distributor for the latest terms of warranty.

Western U.S.A. Distributor:

Triumph Norton Incorporated,
P.O. Box 2765,
East Huntington Drive,
Ogato,
California 91040.

Telex—Tricon Duarte 675469
Telephone—213-359-1221
213-681-0255

MOTOR AND FRAME NUMBERS

The motor number is located on the left side of the engine, immediately below the cylinder barrel to crankcase flange.

The frame number is located on the left side of the frame headlug, forward of the gasoline tank.

The motor and frame number (both of which are the same), should be quoted in full in any correspondence relating to the machine.

COPYRIGHT

All rights reserved. No part of this publication may be reproduced without permission.

PROPRIETARY GROUP

Any equipment which is fitted to our motor cycles is of the highest quality and is guaranteed by the manufacturers and not by ourselves. Any repairs or claims should be directed to the actual makers or their local agents who will always give owners every possible assistance. The following are the addresses in England of the various manufacturers:—

CARBURETORS.

Messrs. Amal Ltd.,
Hedford Road,
Winton,
Birmingham, 6.

SPARK PLUGS.

Champion Sparking Plug Co. Ltd.,
Feltham,
Middlesex

CHAINS.

Renold Chain Ltd.,
Wythenshawe,
Manchester.

SPEEDOMETERS.

Messrs. Smiths Industries Ltd.,
Cricklewood Works,
London, N.W. 2

ELECTRICAL EQUIPMENT.

Messrs. J. Lucas Ltd.,
61, Hampton Street,
Birmingham, 18.

SUSPENSION UNITS.

Messrs. Girling Ltd.,
Birmingham Road,
West Bromwich,
Staffordshire.


TIRES.

Dunlop Co. Ltd.,
Forc Dunlop,
Birmingham, 24.

The Avon Rubber Co. Ltd.,
Melksham
Wiltshire

INDEX

	Page		Page
AIR FILTER	59	MANIFOLDS	23, 43
ALTERNATOR	21	MASTER CYLINDER (Front brake) ...	49
AUTO-ADVANCE UNIT	21	MOTOR MOUNTING PLATES	41
		MOTOR TORQUE STAY	41
BATTERY CARRIER	59	MUFFLERS	43
BRAKE SWITCH	25		
		NUMERICAL INDEX	61
CAMSHAFT, INLET AND EXHAUST ...	9	OIL COOLER	53
CARBURETOR	27	OIL PUMP	13
CENTRE STAND	37	OIL TANK	57
CHAINS	35	OIL FILTER	13
CHAINCASE	33	OVERSIZE PARTS	7
CLUTCH	31		
COIL	75	PISTONS	9
CONDENSER PACK	75	PROP STAND	37
CONNECTING RODS	9	PUSH RODS	19
CONTACT BREAKER	71		
CONTROL CABLES	69	REAR WHEEL	51
CONTROL LEVERS	67	RECTIFIER	75
CRANKCASE	11	REFLECTORS (Front)	53
CRANKSHAFT	9	ROCKERS	15
CYLINDERS	19		
CYLINDER HEAD	15	SIZE PANELS	61
		SPARK PLUGS	75
EXHAUST PIPES	43	SPEEDOMETER	73
EXHAUST PIPE ADAPTOR	15	SPEEDOMETER GEARBOX	51
		STEERING RACES	37
FLASHERS	77	SUSPENSION UNITS	39
FENDERS	63	SWINGING FORK	39
FOOTRESTS	41, 43	SWITCHES (Handlebar)	67
FRAME	37		
FRONT BRAKE	49	TABLE OF STANDARD HARDWARE ...	78
FRONT FORKS	45	TACHOMETER	73
FRONT WHEEL	47	TACHOMETER DRIVE UNIT	73
		TAIL LAMP	65
GAS TANK	55	TAPPETS	19
GEARBOX	25, 27, 29	TIMING GEARS	9
		TOOLKIT	71
HANDLEBARS	67	TWIN SEAT	61
HANDLEBAR MOUNTINGS	67	TRANSMISSION	25, 27, 29
HEADLAMP	77	VALVES	15
HEAT SINK	75	VALVE GUIDES	15
HORN	75		
		WARNING LIGHTS	77
KICKSTARTER	25	WIRING HARNESS	77
		ZENER DIODE	75

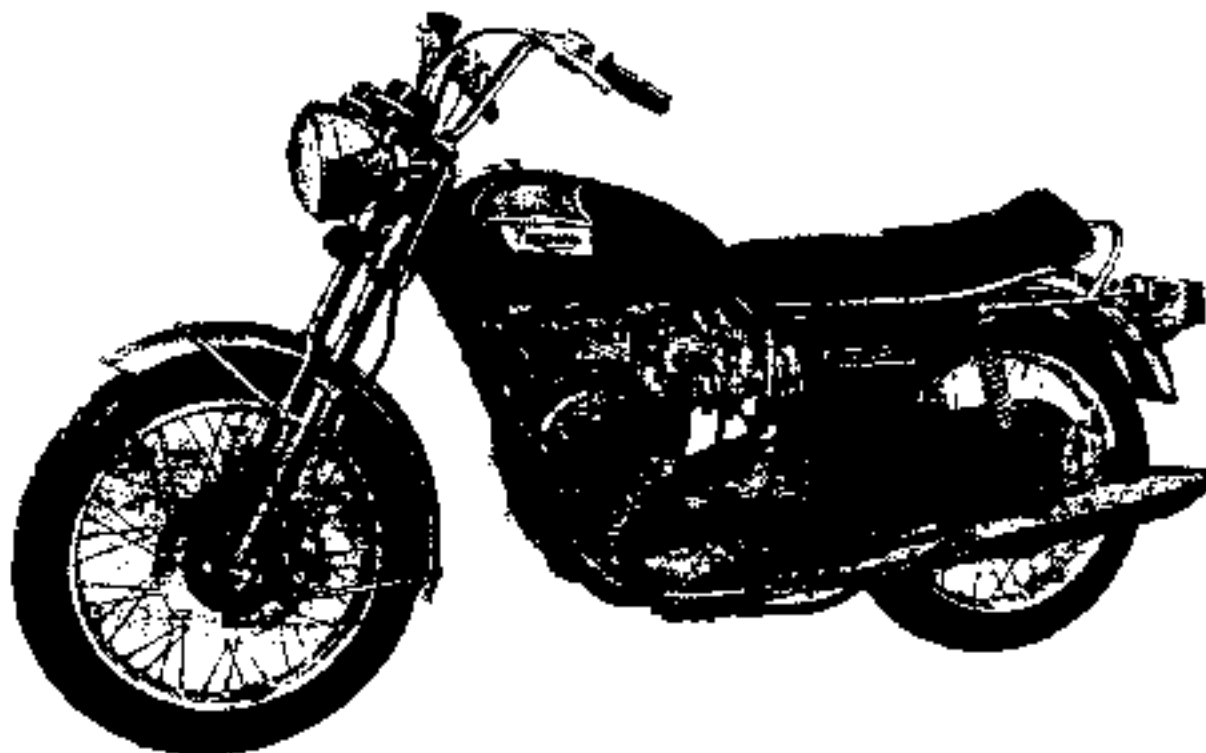

TRIDENT (T 150V) TECHNICAL DATA

Bore and stroke	...	...	...	...	...	...	...	...	...	67 - 70 mm. 2.67 - 2.75" ins.
Capacity	...	...	...	...	...	...	...	...	...	741 cm ³ (45 cu. ins.)
Compression ratio	...	...	...	...	...	...	...	...	...	9.5 : 1 (U.S.A.), 8.5 (General)
Spark plugs	...	...	...	...	...	...	...	...	...	Champion N3
Carburetors	...	...	...	...	...	...	...	...	...	3 Ama Concentric 626
										150
										106
										No. 3 $\frac{1}{2}$
Gearbox sprocket	...	...	...	...	...	...	...	...	...	18 teeth
Chains	...	...	...	...	...	...	...	...	...	$\frac{3}{8}$ " Triplex x 82 links
										$\frac{3}{8}$ " x $\frac{1}{4}$ " x 105 links (107, U.S.A.)
Capacities	...	...	...	...	...	...	...	...	...	
										Fuel Tank ... 4.2 U.S. gals. (3 $\frac{3}{4}$ Imp. gals.) (15.94 litres)
										Oil Tank ... 6 U.S. pints (5 Imp. pints) (2.8 litres) working capacity
										Transmission (Gearbox) ... 1 $\frac{1}{2}$ U.S. pints (1 $\frac{1}{2}$ Imp. pints) (850 cm ³)
										Primary Chaincase ... $\frac{1}{2}$ U.S. pint ($\frac{1}{2}$ Imp. pints) (350 cm ³)
										Front Forks (each leg) ... 230 cm ³
Tire size	...	...	...	...	...	...	...	...	...	
										Front ... 4.10 - 19 ins.
										Rear ... 4.75 - 19 ins.

HOW TO USE THIS PARTS CATALOG

First check that the motor number of your machine is subsequent to that quoted on the title page.

Next consult the index on Page 4 for the parts or group of parts which you wish to locate. If proprietary parts are marked 'reference only', they are not available from the factory, and application should be made direct to the manufacturer concerned (see page 3).

List the quantities required as single units; do not ask for "2 pairs" or "3 dozen".

COLOR

Gasolene tank—Sundance yellow/Black
Fenders—Chromium plated.
Side covers—Black

N.B. It is important to state year, model and frame number of machine when ordering enamelled components.

PLEASE NOTE

THROUGHOUT THIS LIST, ASSEMBLIES ARE PRINTED IN CAPITAL LETTERS AND THE COMPONENTS INCLUDED IN THAT ASSEMBLY ARE INDENTED IN THE DESCRIPTION COLUMN. REVERTING TO THE ORIGINAL ALIGNMENT WHEN THE ASSEMBLY IS COMPLETE. TO ORDER THE COMPLETE ASSEMBLY IT IS NECESSARY ONLY TO QUOTE THE ASSEMBLY NUMBER. ANY COMPONENT PARTS LISTED MAY ALSO BE OBTAINED SEPARATELY IF REQUIRED.

ABBREVIATIONS

J.H. Length measured from under the bolt head
O.A. Overall length.
R.H. Right hand side.
L.H. Left hand side.
C.W. complete with.
D.S. Driving side (motor)
T.S. Timing gear side (motor).

SPECIAL WORKSHOP TOOLS

A COMPLETE LIST OF WORKSHOP TOOLS CAN BE MADE AVAILABLE BY CONTACTING YOUR DEALER. IN MOST CASES THESE TOOLS ARE VERY COSTLY AS THEY ARE MADE ENTIRELY FOR WORKSHOP USE, AND THEREFORE, IT IS NOT RECOMMENDED THAT THE PRIVATE OWNER PURCHASES THE TOOLS IN ORDER TO AID SERVICING THE MACHINE ONCE OR TWICE ONLY. IN THESE CIRCUMSTANCES IT IS FAR MORE ECONOMICAL TO GET IN TOUCH WITH A DEALER.

PISTON, PISTON RING AND BEARING OVERSIZES

PISTONS (Complete with rings, wrist pins and circlips)

These are in effect "carton pack" assemblies

Compression ratio 9.5:1	{	70-9741 Std.	}
		70-9762 — .010 in. oversize	
		70-9763 — .020 in. oversize	
		70-9764 — .040 in. oversize.	

PISTON RINGS

99-3780	{	2 off 70-6838 Compression ring	}	Std
		1 off 70-9739 Scraper ring		
99-3781	{	2 off 70-9016 Compression ring	}	— .010 in. oversize.
		1 off 70-9766 Scraper ring		
99-3782	{	2 off 70-9017 Compression ring	}	— .020 in. oversize
		1 off 70-9767 Scraper ring		
99-3783	{	2 off 70-9018 Compression ring	}	— .040 in. oversize.
		1 off 70-9768 Scraper ring		

BIG END BEARINGS SHELLS

70-599B Shell Std.
70-9023 Shell — .010 in. undersize.
70-9024 Shell — .020 in. undersize.
70-9025 Shell — .030 in. undersize.
70-9026 Shell — .040 in. undersize.

MAIN BEARING SHELLS

70-9027 — .010 in. undersize.
70-9028 — .020 in. undersize.
70-9029 — .030 in. undersize.
70-9030 — .040 in. undersize.

CYLINDER BLOCK

70-6529 Std.
71-2507 — .010 in. oversize.
71-2508 — .020 in. oversize.
71-2509 — .04 in. oversize.

VALVE GUIDES

71-3280 — .002 in. oversize.
71-3281 — .015 in. oversize.

GASKET SETS

DECOKE	99-0039
OVERHAUL	99-0030

FRONT BRAKE

Master cylinder repair kit	99-2768
Brake pad kit.	99-2769

MOTOR/GEARBOX

Assembly	71-3247. (U.S.A.)
	71-4070 (General)

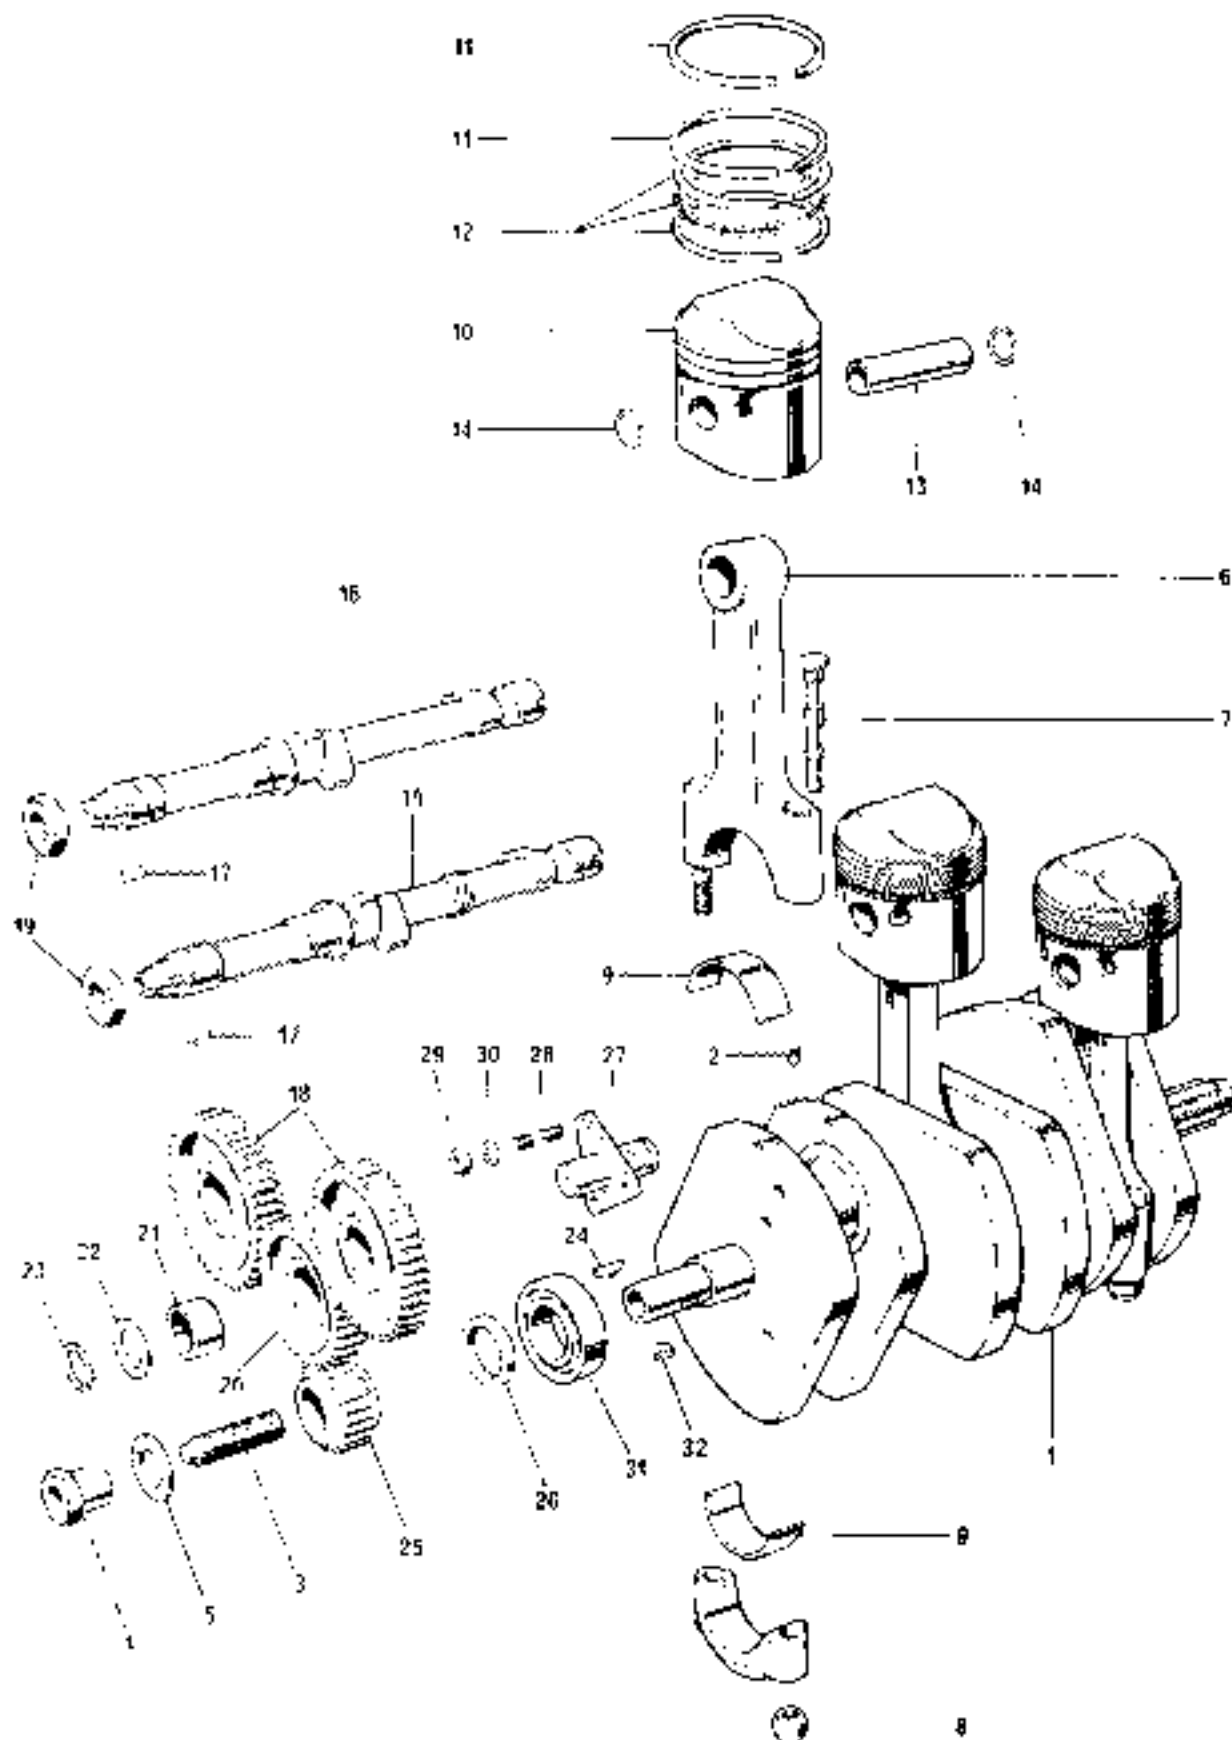


FIG. 1. CRANKSHAFT AND CONNECTING RODS

CRANKSHAFT AND CONNECTING RODS

1	71-3307	CRANKSHAFT ASSEMBLY	1
2	70-6577	Oilway plug	4
3	21-2185	Rotor stud (1½ in. O.A.)	1
4	70-8763	Rotor nut	1
5	70-3975	Washer	1
6	70-9740	CON ROD ASSEMBLY	3
7	70-9727	Bolt con rod	2
8	60-3761	Nut con rod	2
9	70-5990	*Bearing, big end	6
10	70-9741	*PISTON ASSEMBLY	3
11	70-6838	†Taper piston ring	2
12	70-9739	Scraper ring	1
13	70-6836	Wrist pin (Gudgeon pin)	1
14	70-6840	Circlip	2
15	70-8765	Exhaust camshaft	1
16	70-8764	Intake camshaft	1
17	70-1558	Key, camshaft	2
18	71-2718	Pinion camshaft	2
19	70-6523	Nut, camshaft	2
20	71-2246	Intermediate timing gear	1
21	71-2248	Bronze bush	1
22	70-6088	Thrust washer	1
23	70-8768	Circlip	1
24	70-1582	Key timing pinion	1
25	70-6524	Timing pinion	1
26	70-6173	Distance piece	1
27	71-2250	Spindle, Intermediate gear	1
28	21-0547	Stud (½ in. O.A.)	3
29	14-0401	Nut, Intermediate gear	3
30	60-4250	Washer	3
31	70-8780	Main bearing (roller)	1
32	70-8144	Key-rotor	1

*Available in undersizes of —0.010", 0.020", 0.030", 0.040"

†Available in oversizes of +0.010", 0.020", 0.040"

‡Available in oversizes of —0.010", 0.020", 0.040"

} See page 7

ALTERNATIVE FITMENTS (NOT USA)

71-4069	Piston assembly 8.25 : 1 C.R.	...	3
---------	-------------------------------	-----	---

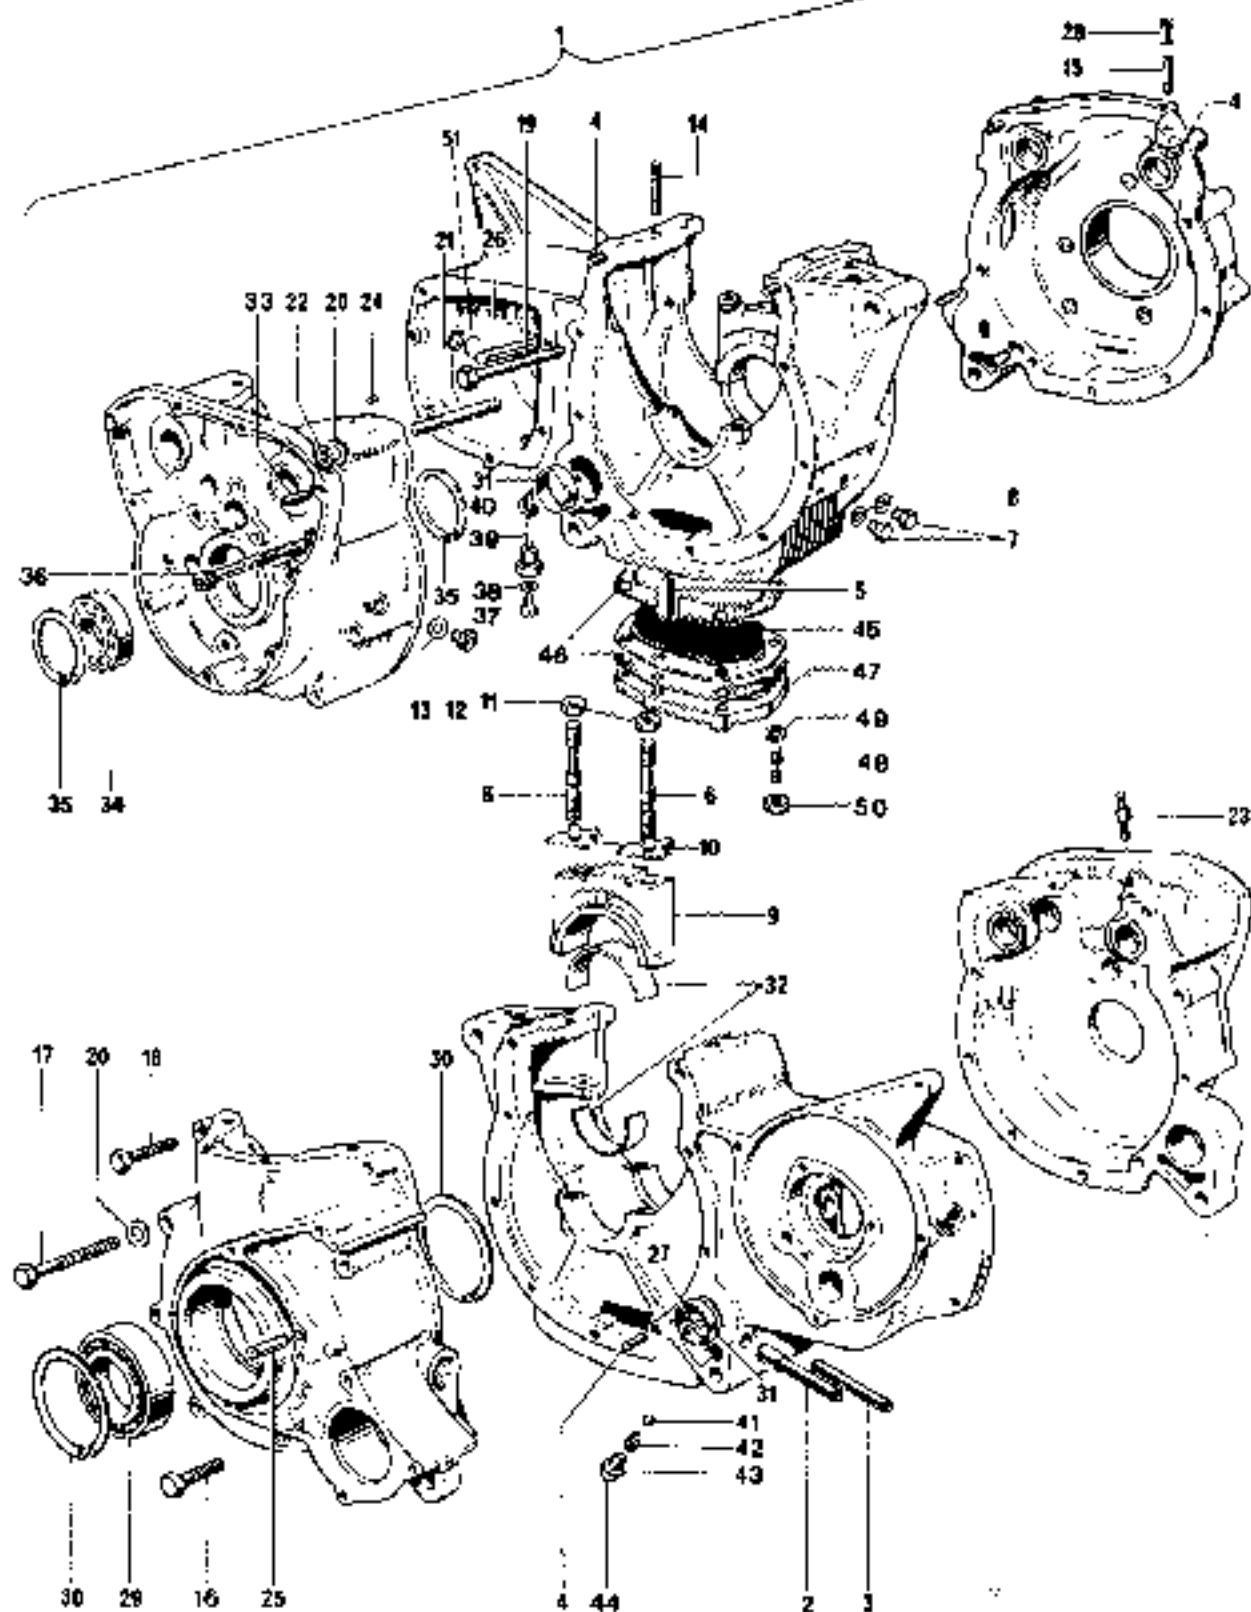


Fig. 2. CRANKCASES

CRANKCASE

1	71-3215	CRANKCASES (3 portions, assembled together)	1	
2	70-6573	Oil return pipe stub	1	
3	70-6574	Oil feed pipe stub	1	
4	70-8774	Dowe T.S. and D.S.	4	
5	70-6578	Scavenge tube	1	
6	70-8745	Wasted stud, main bearing cap	4	
7	14-6113	Plug, main bearing oilways	2	
8	70-8776	Washer	2	
9	71-3208	Cap, main bearing		Reference only
10	71-1129	Tab washer	4	
11	14-0303	Nut	4	
12	70-8755	Plug, timing aperture	1	
13	70-1523	Washer, timing aperture	1	
14	21-1931	Stud, cylinder base (1 $\frac{1}{2}$ in. O.A.)	4	
15	70-8738	Stud, cylinder at dowel (1 $\frac{1}{2}$ in. O.A.)	2	
16	14-6218	Clamping bolt	2	
17	14-6226	Clamping bolt	9	
18	14-6220	Clamping bolt	2	
19	14-6223	Clamping bolt	1	
20	60-4247	Washer	9	
21	14-1427	Stud, T.S. crankcase	2	
22	14-0302	Nut	2	
23	21-1912	Stud, cylinder base	4	
24	57-0912	Peg, needle roller thrust	1	
25	71-1051	Spindle, intermediate gear (oil pump)	1	
26	57-3989	Selector spindle	1	
27	70-1532	Dowe., oil pump to crankcase	1	
28	70-8751	Dowel, cylinder base	2	
29	70-1591	D.S. main bearing	1	
30	70-6025	Circlip, main bearing	2	
31	70-9856	Sleeve or 'O' ring	2	
32	70-6023	*Main Bearing Shell	4	
33	57-0989	Dowel	2	
34	70-8780	Main bearing T.S. (roller)	1	
35	70-6026	Circlip	2	
36	21-0679	Socket screw (4 in. U.H.)	1	
37	57-3851	Gearbox drain plug	1	
38	70-2441	Fibre washer	1	
39	21-0543	Level plug	1	
40	57-1257	Fibre washer	1	
41	60-2370	Non return valve ball ($\frac{1}{4}$ in. dia.)	1	
42	70-6567	Spring	1	
43	71-2792	Inner washer (copper)	1	
44	70-6584	Plug	1	
45	70-6501	Scavenge filter	1	
46	71-1444	Gasket	2	
47	70-6580	Cover	1	
48	71-1349	Stud, sump plate	6	
49	60-2320	Spring washer	6	
50	14-1301	Nut	6	
51	57-1920	Blanking disc	1	

*Available in undersize of 0.010", 0.020", 0.030", 0.040" (see page 7).

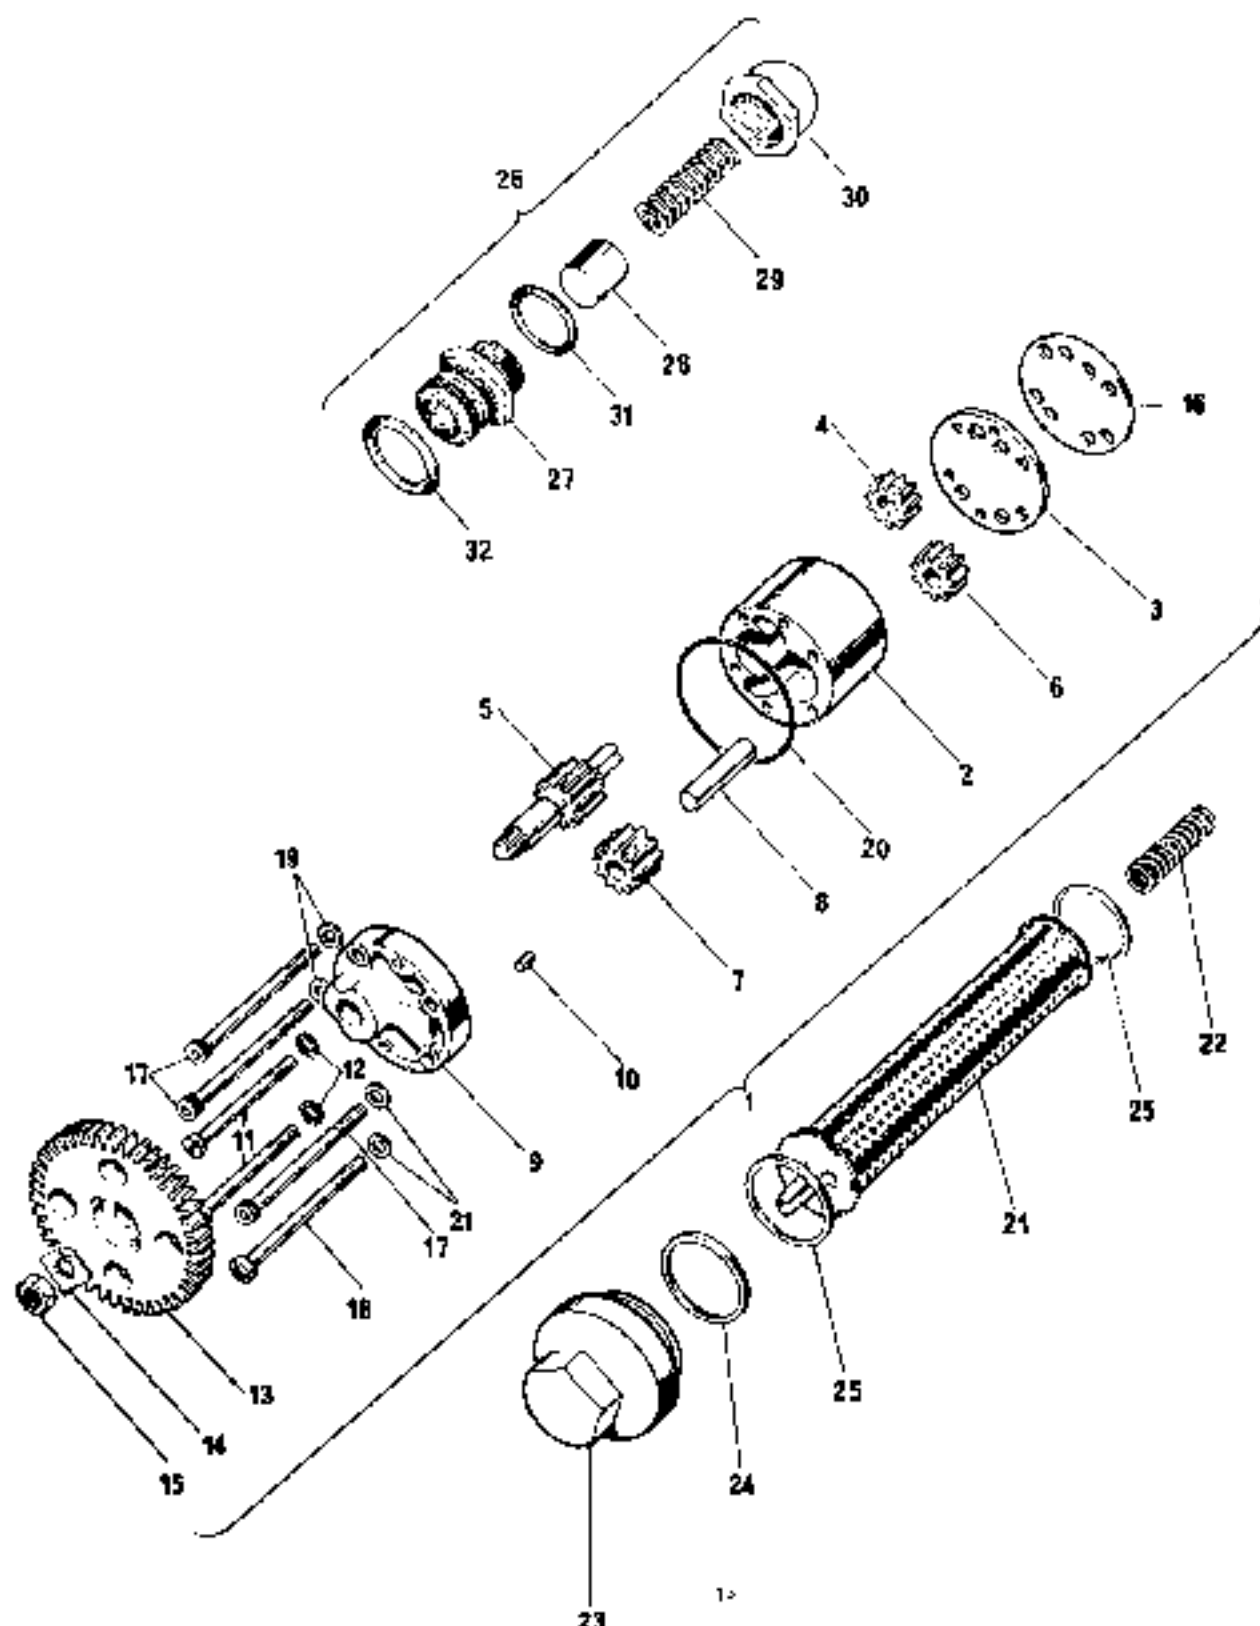


Fig. 3. OIL PUMP, RELEASE VALVE AND FILTER

OIL PUMP RELEASE VALVE AND OIL FILTER

1	71-1351	OIL PUMP COMPLETE	1	
2	70-6430	Oil pump, body	1	Reference only
3	70-6502	Base plate	1	
4	70-6455	Drive feed gear	1	
5	70-9987	Drive scavenge gear	1	
6	70-6038	Driven feed gear	1	
7	70-6039	Driven scavenge gear	1	
8	70-6454	Driven gear spindle	1	
9	70-9885	Cover	1	
10	70-6459	Dowel, cover to body	1	
11	21-0359	Screw, cover to body (2 in. U.H.)	2	
12	70-8731	Washer, cover to pump screw	2	
13	71-4237	Driven gear	1	
14	71-1353	Tab washer	1	
15	14-0402	Nut	1	
16	71-1442	Gasket, oil pump to crankcase	1	
17	71-4236	Screw, pump to crankcase (2½ in. U.H.)	3	
18	70-9601	Screw, pump to crankcase at dowel (2½ in. U.H.)	1	
19	70-8732	Washer, pump to crankcase	4	
20	70-6576	Seal, pump to crankcase	1	
21	70-6571	Oil filter element	1	
22	70-6130	Spring	1	
23	71-1270	Cap	1	
24	71-1070	O' ring—cap	1	
25	71-1070	O' ring—filter	2	
Net illus.	60-3/19	Oil pressure switch	1	
26	70-6595	OIL PRESSURE RELEASE VALVE	1	
27	70-7590	Body	1	Reference only
28	70-8752	Piston	1	
29	70-7591	Spring	1	
30	70-6596	Cap	1	
31	70-8754	Joint washer (cap to body)	1	
32	70-1670	Joint washer (valve to crankcase)	1	

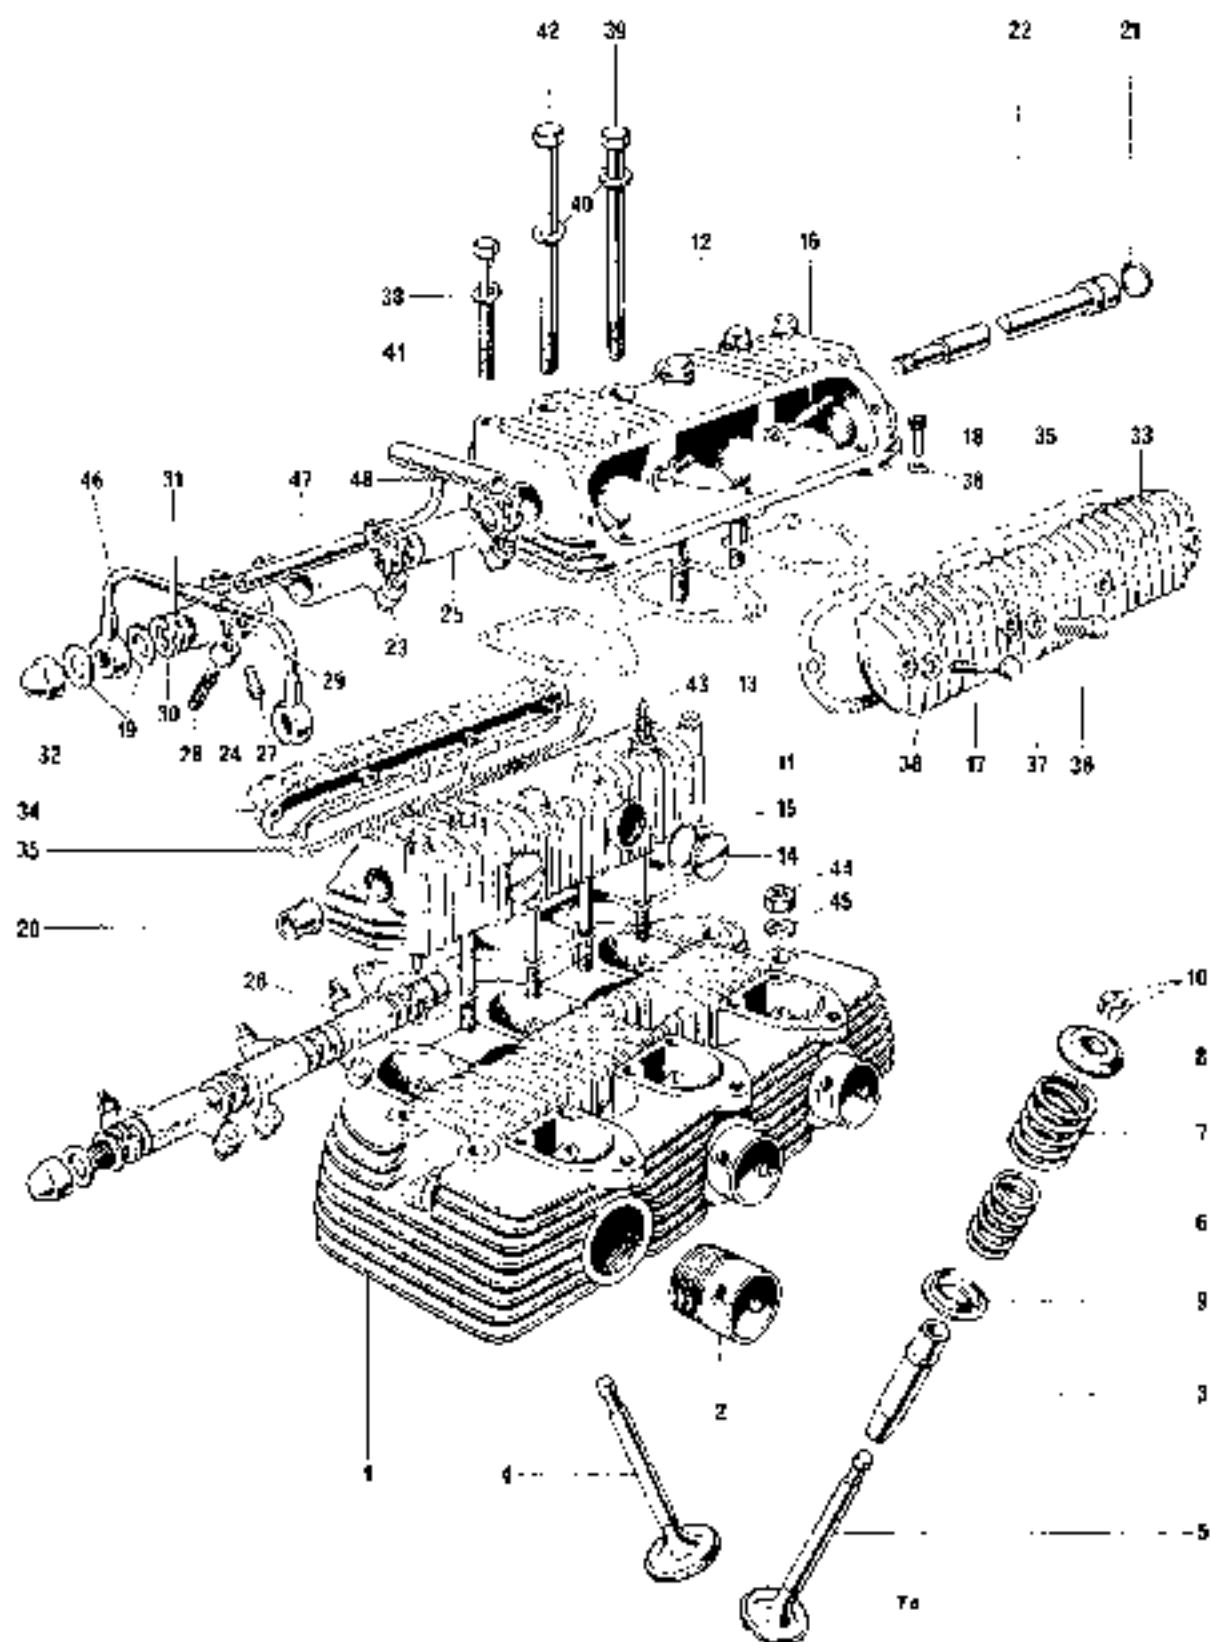


Fig. 4. CYLINDER HEAD AND ROCKER BOXES

CYLINDER HEAD AND ROCKER BOXES

1	70-8781	CYLINDER HEAD	1	
2	70-9510	Exhaust pipe adaptor	3	
3	70-6429	Valve guide	6	
4	71-3361	Intake valve	3	
5	71-3362	Exhaust valve	3	
6	70-8787	Inner valve spring (White and red paint dabs)	6	
7	70-8788	Outer valve spring (White and red paint dabs)	6	
8	70-8720	Top collar	6	
9	70-8789	Bottom cup	6	
10	71-3748	Split cotter	12	
11	71-4245	Intake rocker box	1	
12	71-4246	Exhaust rocker box	1	
13	70-8773	Rocker box gasket	2	
14	57-2166	Rocker box cap	4	
15	70-8782	"O" ring cap	4	
16	14-1401	Stud, rocker box cover	4	
17	14-0202	Bolt, rocker box cover	4	
18	14-7004	Screw	6	
19	70-1335	Copper washer	4	
20	70-6018	Bush, T.S. for rocker spindle	2	
21	60-3548	"O" ring, D.S. bush	2	
22	70-9558	Rocker spindle	2	
23	71-3587	ROCKER LEVER, T.S. INLET; CENTRE EXHAUST	2	
24	71-3588	ROCKER LEVER, T.S. EXHAUST; CENTRE INLET	2	
25	71-3589	ROCKER LEVER, EXHAUST D.S.	1	
26	71-3390	ROCKER LEVER, INLET D.S.	1	
27	71-0070	Ball pin	6	
28	71-3358	Adjusting pin	6	
29	14-0402	Locknut	6	
30	70-1574	Thackeray washer	6	
31	70-1575	Plain washer	12	
32	21-0350	Dome nut	2	
33	70-6564	Inspection cover, exhaust	1	
34	70-6563	Inspection cover, inlet	1	
35	71-1445	Gasket	2	
36	70-9237	Sleeve nut	4	
37	70-9239	Plain washer	4	
38	60-4245	Washer	8	
39	70-8820	Bolt, short rocker box to barrel ($1\frac{1}{2}$ " x $4\frac{1}{2}$ ")	4	
40	70-9240	Washer	8	
41	14-6211	Bolt, rocker box to head	4	
42	70-8819	Bolt, rocker box to barrel ($1\frac{1}{2}$ " x $4\frac{1}{2}$ ")	2	
43	71-0280	Bolt, torque stay, rocker box to barrel ($5\frac{1}{8}$ " in.)	2	
44	14-0303	Nut	4	
45	82-2184	Washer	4	
46	71-1168	Rocker pipe	1	
47	71-1175	Connecting tube	1	
48	71-1172	Oil feed pipe	1	

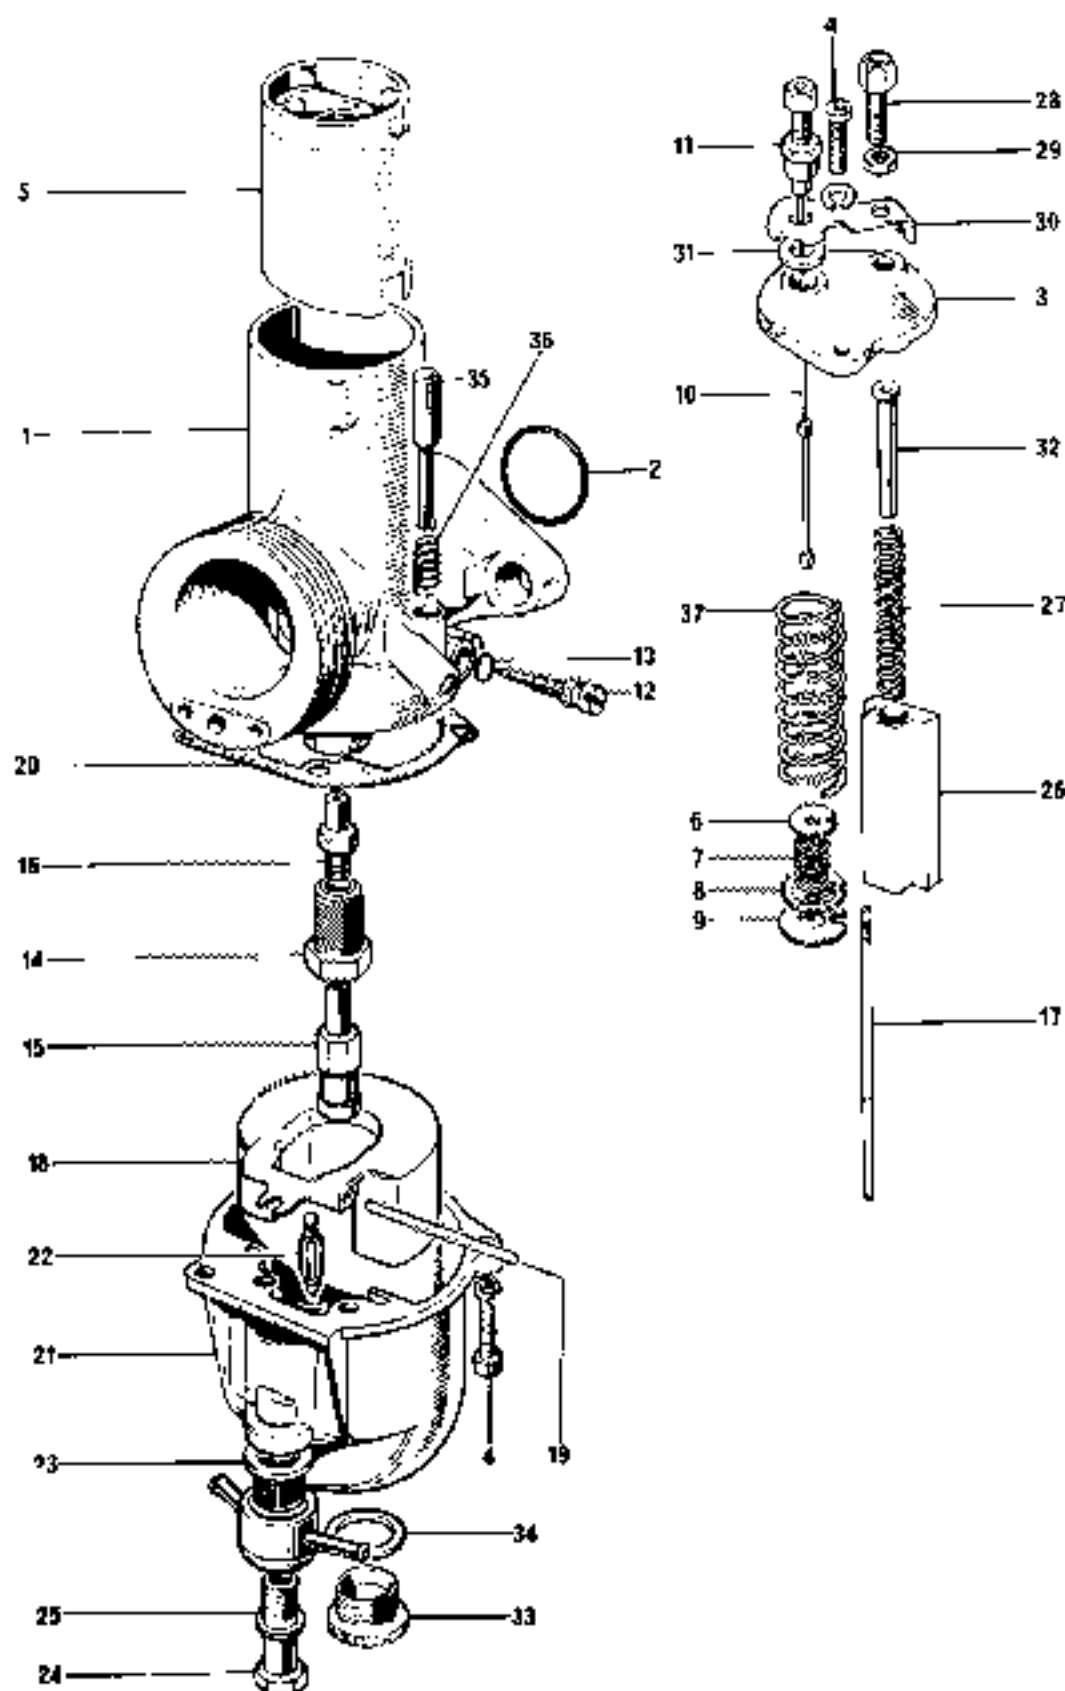


Fig. 5. CARBURETORS

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
CARBURETORS				
1	60-4092	CARBURETOR R.H. (Amal R626/66)	1	
1	60-4094	CARBURETOR CENTRE (Amal R626/68)	1	
1	60-4093	CARBURETOR L.H. (Amal L626/67)	1	
2	622 101	O'ring seal (99-0522)	3	
3	622 097	Mixing chamber top (99-1049)	1	
4	622 086	Screw (99-0521)	4	
5	622 060	Throttle valve (No. 3½) (99-0506)	1	
6	60-1959	Top spring abutment	1	
7	60-1960	Spring	1	
8	622 067	Needle clip (99-0510)	1	
9	60-1987	Bottom spring abutment	1	
10	60-1984	Throttle rod assembly	1	
11	70-9253	Locknut	1	
12	622 076	Pilot air screw (99-0515)	1	
13	622 082	Friction 'O' ring (99-0520)	1	
14	622 128	Jet holder (99-1034)	1	
15	376 100	Main jet (155) (99-1020)	1	
16	677 122	Needle jet (106) (99-1035)	1	
17	622 124	Needle (Standard) (99-1036)	1	
18	622 069	Pin (99-0512)	1	
19	622 071	Float spindle (99-0513)	2	Each Carburetor
20	622 073	Joint washer (99-0514)	1	
21	622 050	Float chamber (99-0506)	1	
22	622 068	Float needle (99-0511)	1	
23	376 093	Filter (99-0438)	1	
24	622 078	Banjo bolt (99-0517)	1	
25	13 163	Fibre washer (99-1124)	1	
26	622 062	Air slide (99-1021)	1	
27	677 186	Spring	1	
28	4 035	Cable adjuster (99-1024)	1	
29	5 077	Locknut (99-0224)	1	
30	622 125	Clip (99-1022)	1	
31	622 126	Sealing rubber (99-1023)	1	
32	622 134	Air slide guide tube (99-1051)	1	
33	622 147	Drain plug (99-1152)	1	
34	622 151	Washer (99-1153)	1	
35	622 089	Flicker pin	1	Reference on p
36	14 032	Flicker pin spring	1	Reference on p
37	71-3312	Spring-carburetor slide	1	

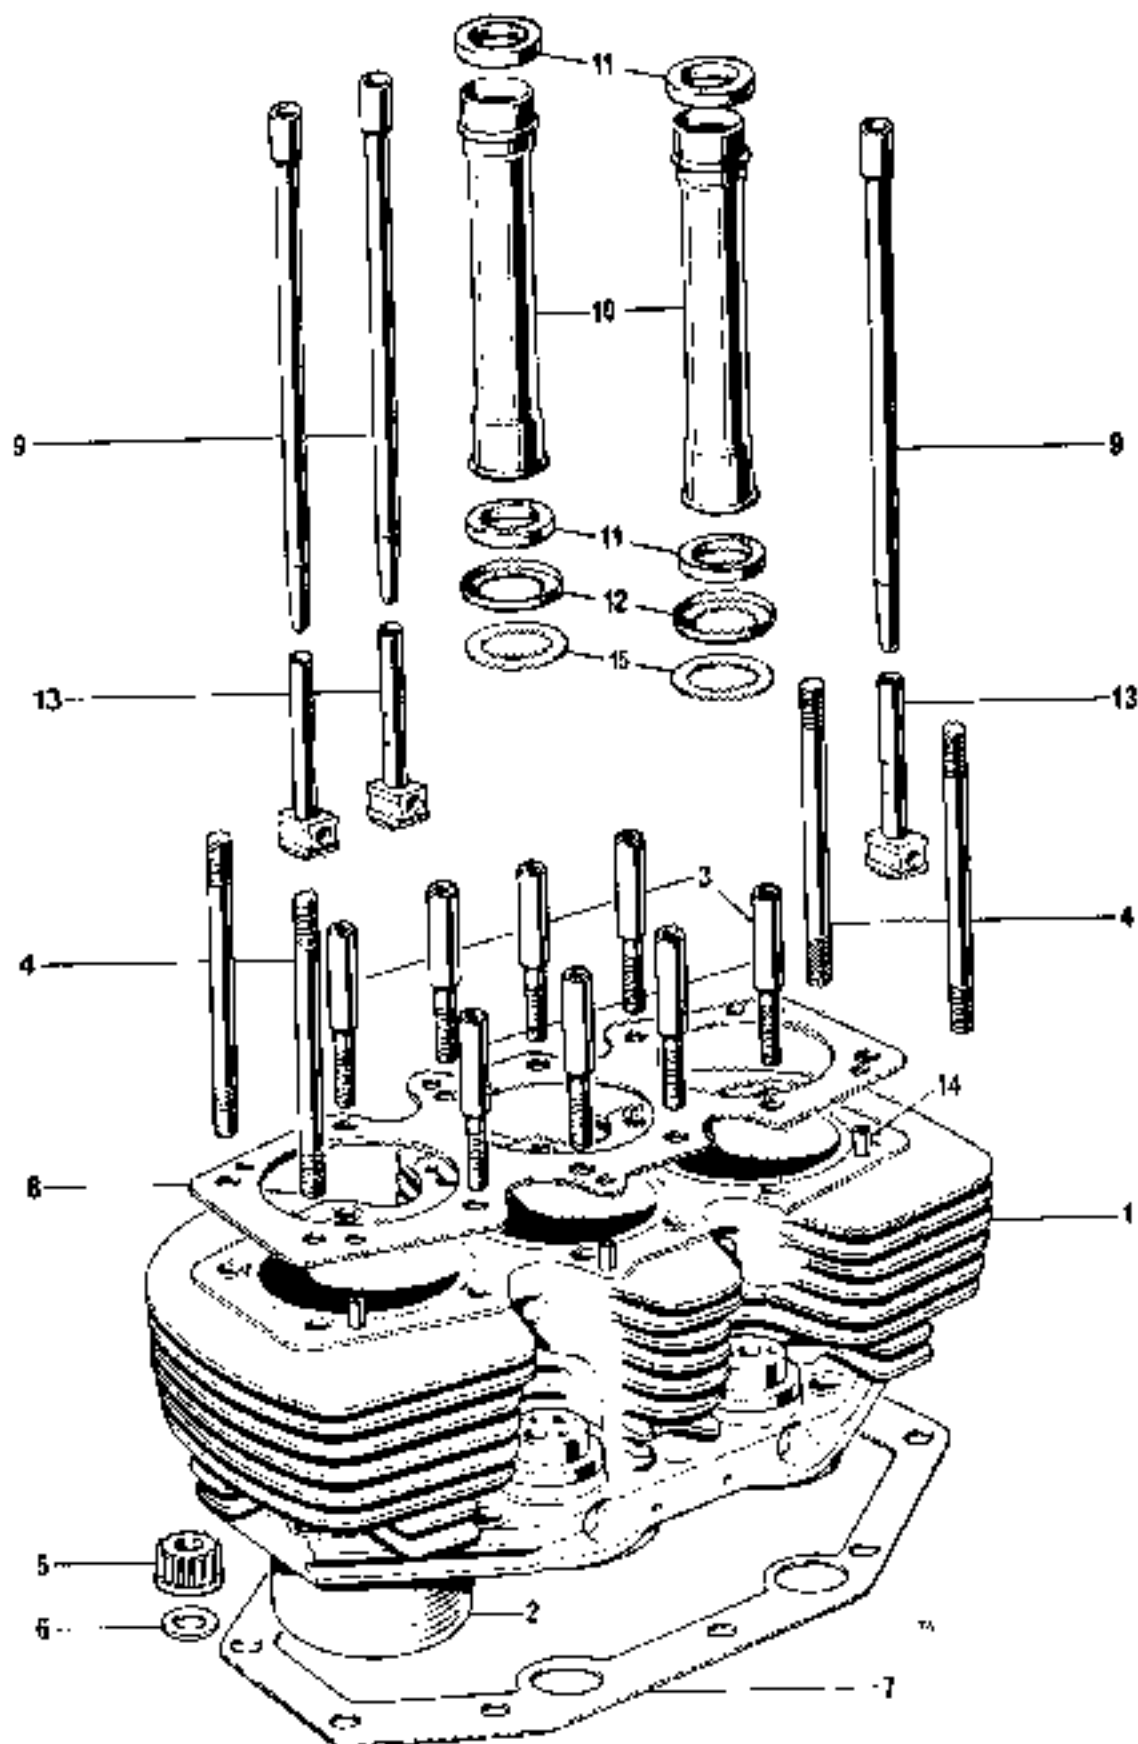


Fig. 4. CYLINDER BARREL, PUSH RODS AND TUBES, TAPPETS

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

CYLINDER BARREL, PUSH RODS AND TUBES, TAPPET BLOCKS

1	71-3209	CYLINDER BARREL C/W LINERS ...	1	
2	70-8914	Cylinder liner ...	3	
3	70-8817	Pillar stud ...	8	
4	21-0686	Stud, barrel to head ($4\frac{1}{2}$ in. O.A.) ...	4	
5	21-0692	Base nut (12 point) ...	10	
6	70-8770	Washer ...	10	
7	70-6496	Cylinder base gasket ...	1	
8	71-3941	Cylinder head gasket ...	1	
9	71-1238	Push rod ...	6	
10	71-4000	Push rod tube ...	4	
11	70-4752	Sealing rubber ...	8	
12	70-4746	Bottom cup ...	4	
13	71-3213	Tappet ...	6	
14	70-1532	Dowel ...	6	
15	71-1190	Gasket, push rod cover tube ...	4	

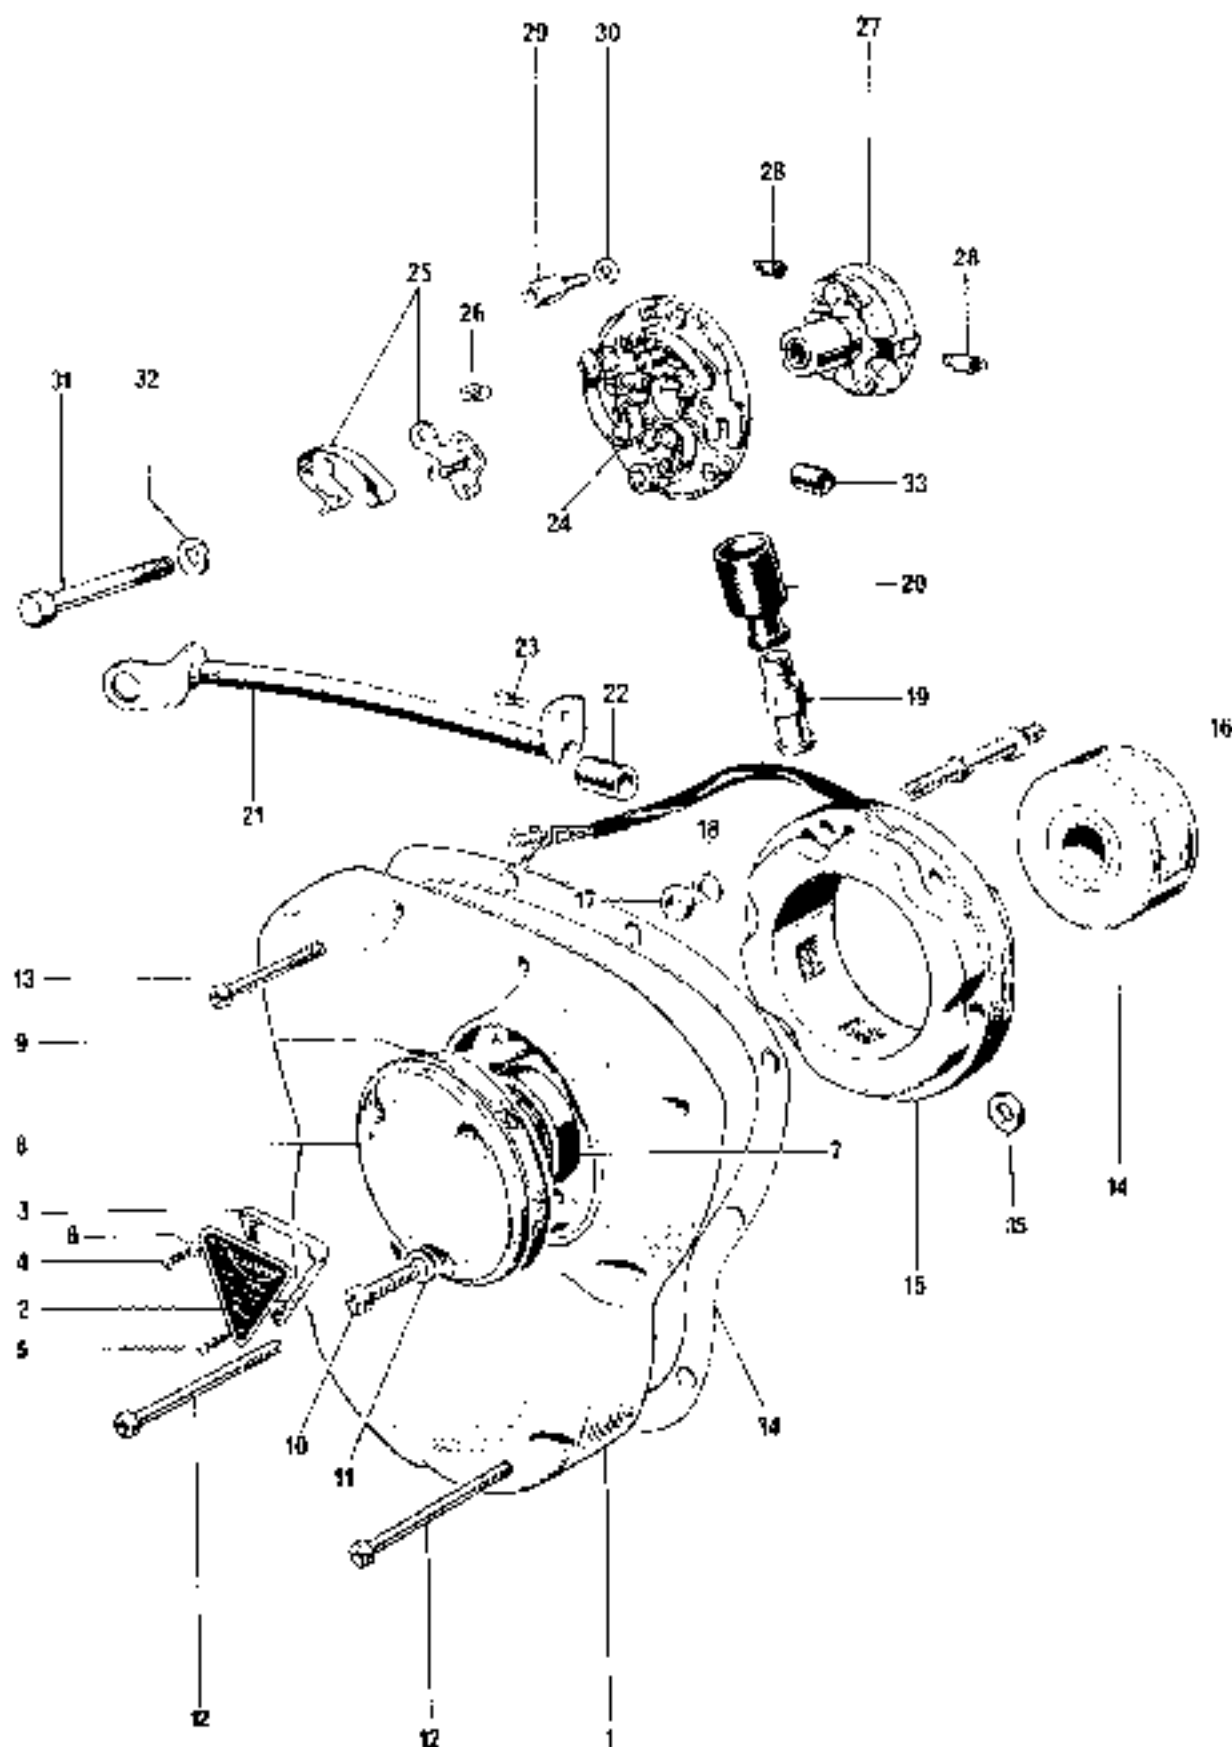


Fig. 1. TIMING COVER AND CONTACT BREAKER

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

TIMING COVER AND CONTACT BREAKER

1	70-6432	Timing cover	1	
2	70-8762	Cover, timing aperture	1	
3	71-1440	Joint washer	1	
4	71-0007	Screw ($\frac{3}{16}$ in. U.H.)	2	
5	71-0006	Pointer screw	1	
6	70-9266	Washer	3	
7	70-4568	Oil seal	1	
8	70-6519	C.B. cover	1	
9	71-1441	Gasket C.B. cover	1	
10	82-4715	Screw ($\frac{1}{8}$ in. U.H.)	3	
11	97-0430	Washer	3	
12	14-6612	Screw	3	
13	14-6608	Screw	6	
14	54210937	Rotor (99-0739) RM 20	1	
15	47205	Stator (99-1016)—RM 21	1	
16	70-6522	Stud, alternator mounting	3	
17	21-1852	Nut, alternator mounting	3	
18	60-4247	Washer	3	
19	70-8760	Cable seal nut	1	
20	70-4144	Grommet	1	
21	70-8757	Cover, alternator leads	1	
22	70-8756	Rubber ferrule	1	
23	97-0916	Screw, lead cover to crankcase ($\frac{5}{16}$ in. U.H.)	1	
24	54419327	CONTACT BREAKER 7CA (99-1233)	1	
25	54419828	Contact set (99-1014)	3	
26	54419220	Adjusting screw (99-0769)	3	
27	54419867	AUTO ADVANCE UNIT (99-1015)	1	
28	54417992	Spring (99-1234)	2	
29	70-6521	Pillar bolt	3	
30	70-6559	Washer	3	
31	14-0208	Bolt C.B.	1	
32	70-8163	Washer	1	
33	70-8756	Grommet	2	
34	71-1350	Gasket timing cover	1	
35	97-2123	Distance piece, stator	6	

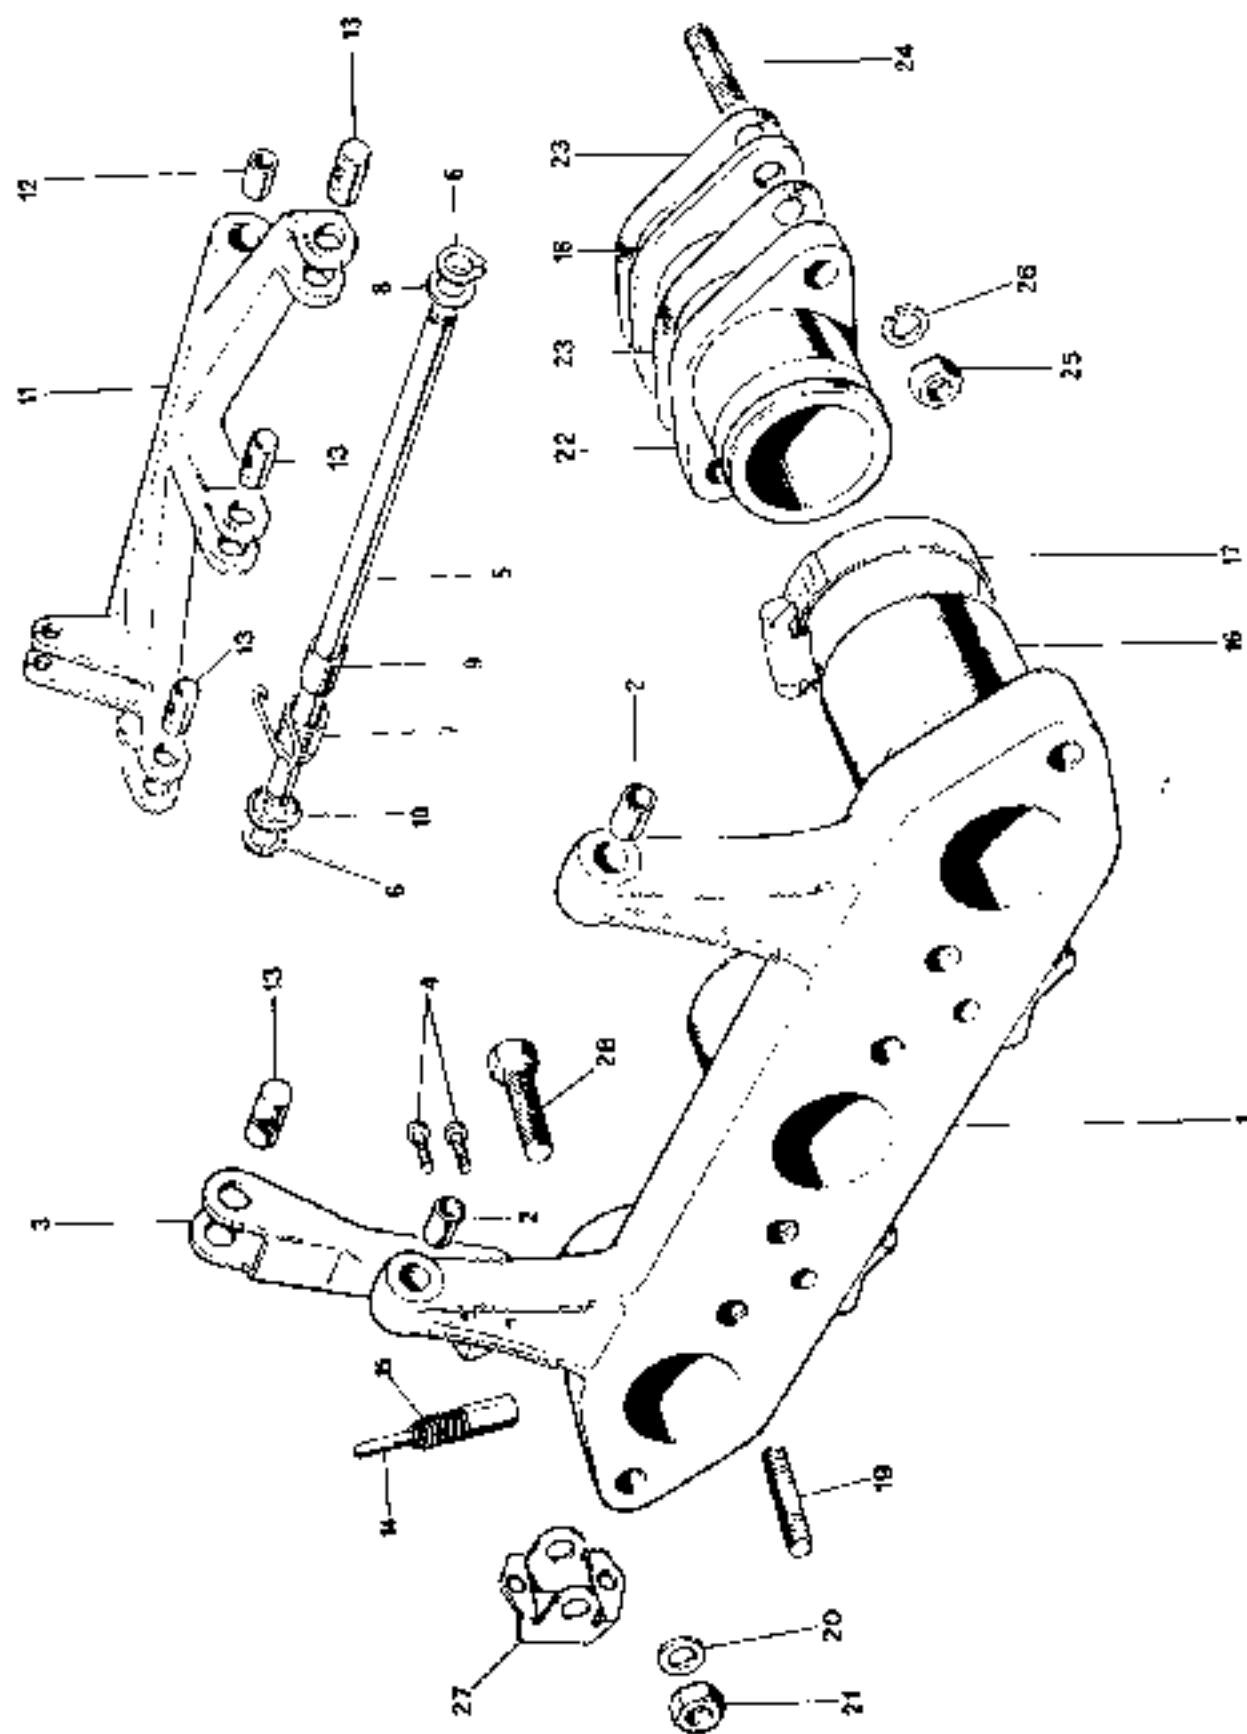


FIG. 8. MANIFOLD AND THROTTLE LINKAGE

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

MANIFOLD AND THROTTLE LINKAGE

1	71-1303	ADAPTOR c/w BUSHES	1	
2	70-9073	Bush	2	
3	70-9242	Support arm	1	
4	21-1930	Screw self-tapping	2	
5	70-9251	Spindle	1	
6	70-9255	Circlip	2	
7	71-3311	Return spring	1	
8	71-0245	Washer	1	
9	70-9820	Spacer	1	
10	70-9821	Retaining cup	1	
11	70-9278	Operating arm	1	
12	70-9073	Bush	2	
13	70-9243	Trunnion	4	
14	71-3924	Screw, adjuster	1	
15	70-9254	Spring	1	
16	70-9060	Rubber sleeve	3	
17	60-3707	jubilee type clip	6	
18	70-8981	Insulating block	3	
19	14-1619	Stud carburetor	5	
20	60-4247	Washer	6	
21	14-1302	Nut, carburetor fixing	6	
22	70-9057	Stub, cylinder head	3	
23	71-1446	Joint washer, stub to head	5	
24	21-0557	Stub (1 $\frac{5}{16}$ " O.A.) cylinder head	6	
25	14-1301	Nut	6	
26	60-4248	Washer	6	
27	82-3665	Bracket, air control lever	1	
28	14-0219	Bolt, bracket	1	

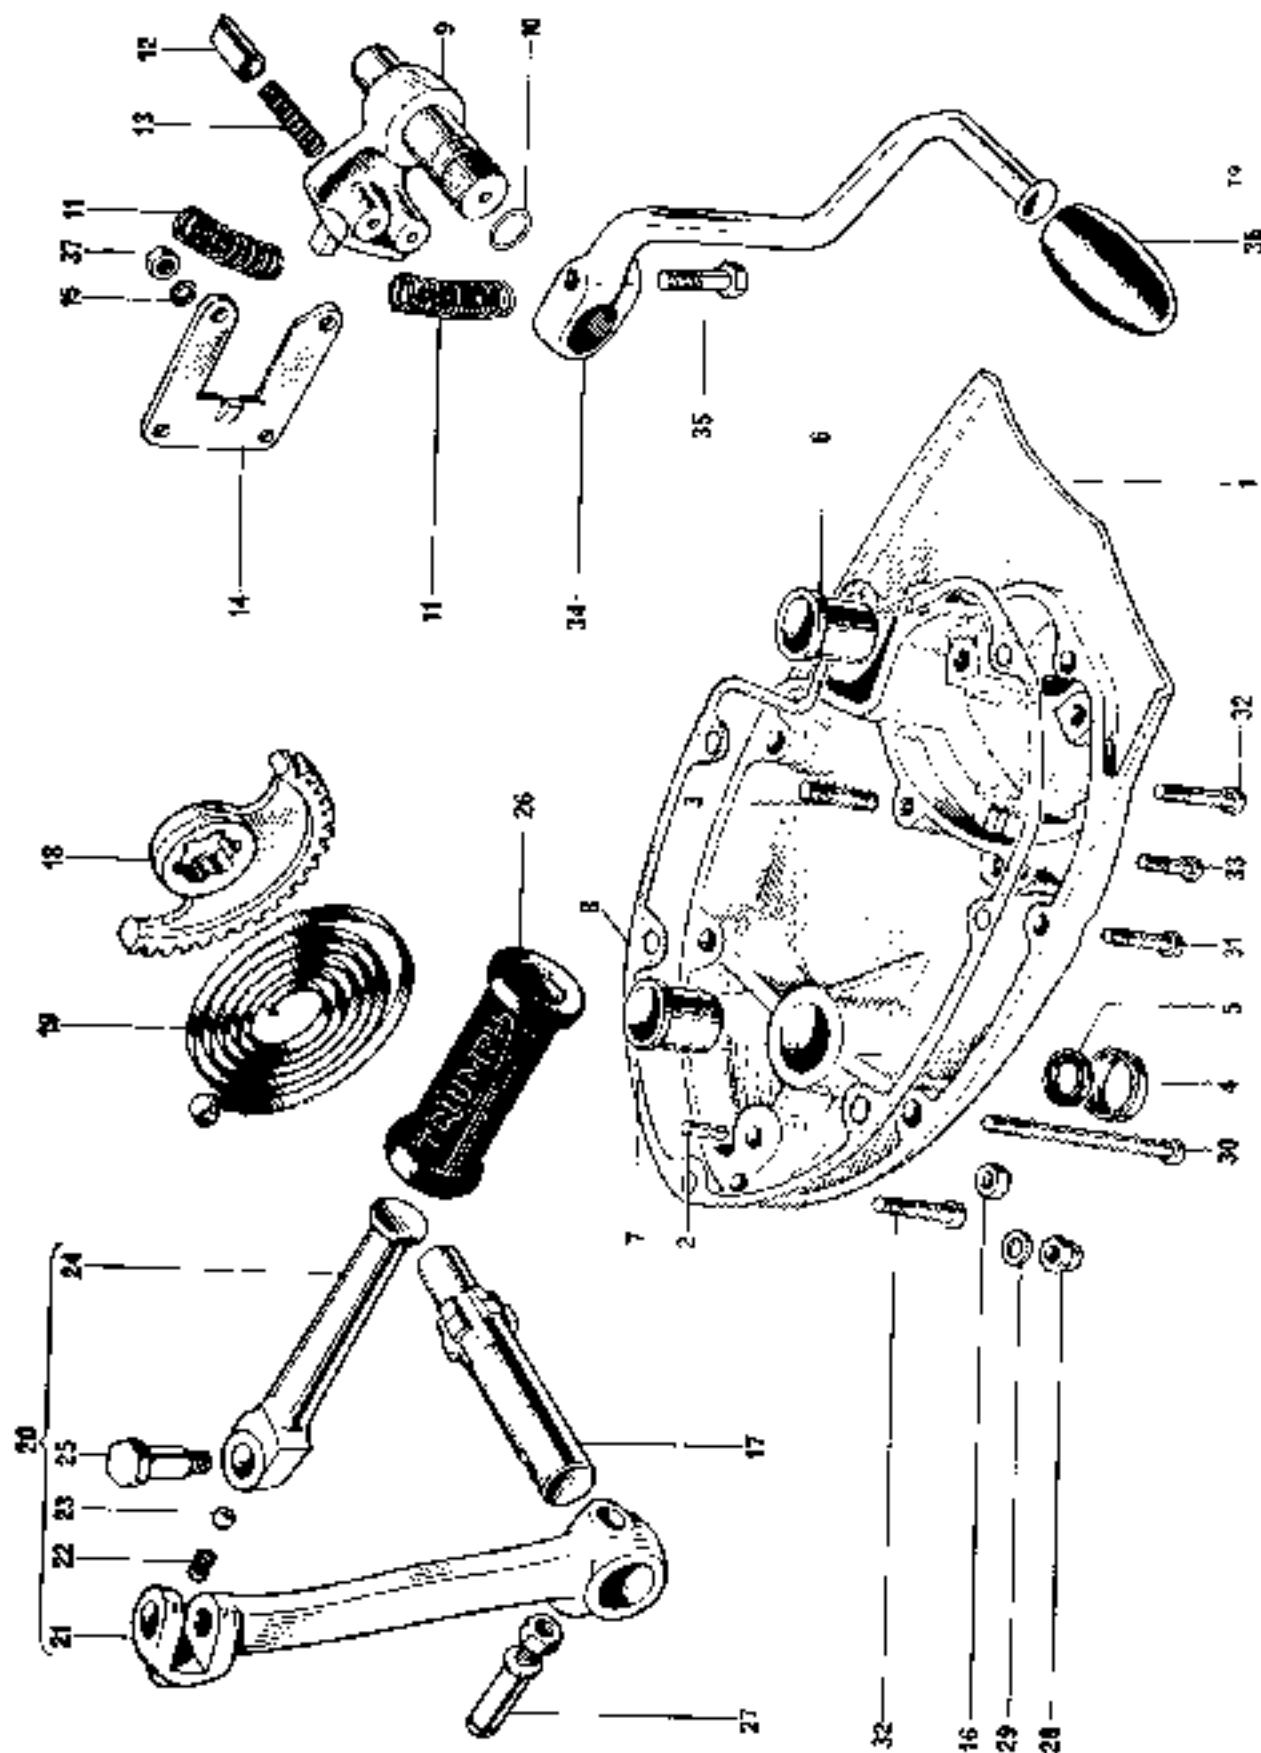


FIG. 9. GEARBOX OUTER COVER

GEARBOX OUTER COVER

1	57-3750	GEARBOX OUTER COVER ..	1
2	57-0047	Kickstart anchor peg ...	1
3	21-0547	Stud guide plate ($\frac{3}{8}$ in. O.A.) ...	4
4	57-1955	Housing, oil seal ..	1
5	57-1956	Oil seal ..	1
6	57-0057	Bush (F.C. Spindle) ..	1
7	57-0023	Bush (K/S Spindle) ..	1
8	71-1448	Gasket, outer to inner gearbox ...	1
9	57-4910	Plunger quadrant ..	1
10	60-3530	Sealing Ring ...	1
11	57-0404	Spring ...	2
12	57-4403	Plunger ...	2
13	57-0405	Spring ..	2
14	57-0407	Guide plate ...	1
15	70-1612	Washer ...	4
16	14-1302	Nut ...	4
17	57-4756	Kickstart axle shaft ..	1
18	57-4117	Kickstart quadrant ..	1
19	57-0031	Kickstart return spring ...	1
20	57-3632	FOLDING KICKSTART COMPLETS :	1
21	57-2173	Crank ..	1
22	57-1167	Spring ..	2
23	60-2354	Ball, $\frac{1}{4}$ in. dia. ...	1
24	57-1272	Pedal ...	1
25	21-0541	Pivot bolt ...	1
26	57-2330	Rubber ..	1
27	57-4356	Cotter pin c/w nut and washer ...	1
28	71-0544	Domed nut outer cover ..	2
29	60-4247	Washer ...	2
30	21-2140	Screw, outer cover long ..	1
31	14-6609	Screw, outer cover ..	1
32	14-6610	Screw, outer cover ..	2
33	14-6608	Screw, outer cover ..	1
34	57-3751	Gearchange pedal ..	1
35	14-0201	Pinch bolt ..	1
36	57-2450	Rubber ..	1
37	14-0301	Nut ...	4

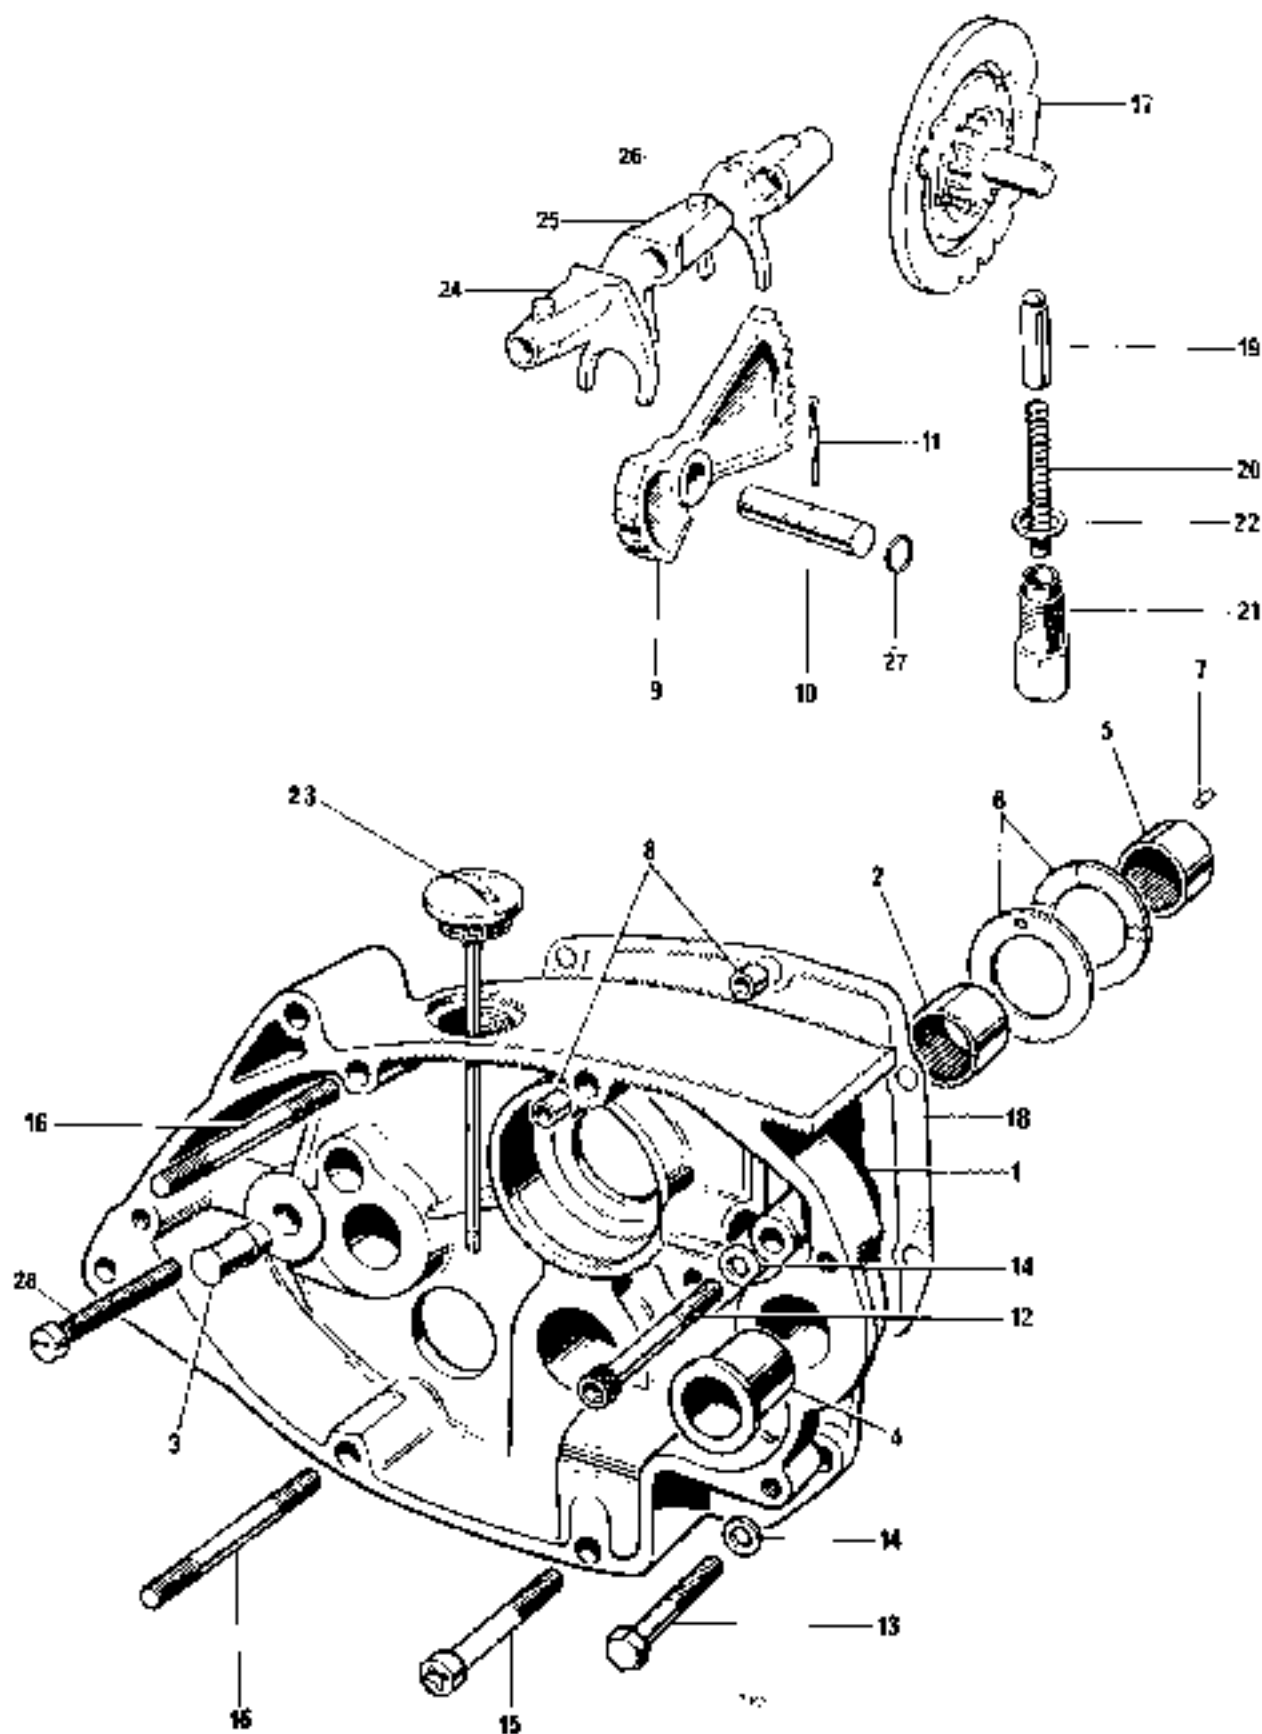


Fig. 18. GEARBOX INNER COVER AND SELECTORS

Ref No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
---------	----------	-------------	----------	---------

GEARBOX INNER COVER AND SELECTORS

1	57-4633	INNER COVER ASSEMBLY	1	
1	57-4947	Inner cover	1	
2	57-1614	Layshaft Bearing	1	
3	57-4470	Kickstart stop	1	
4	57-0412	Bush (F/C spindle)	1	
5	57-1606	Layshaft, needle roller bearing	1	
6	57-1607	Thrust washer	2	
7	57-0912	Peg, L/S thrust washer		(Also in crankcase group)
8	57-0989	Dowel, inner to outer cover	2	
9	57-4363	Quadrant	1	
10	57-1896	Quadrant spindle	1	
11	60-2708	Split pin (5/64 in. + 1 1/2 in.)		Reference only
12	14-7101	Socket screw	1	
13	14-6121	Bolt, inner cover to crankcase	1	
14	70-3446	Washer, inner cover to crankcase	1	
15	21-917	Screw, inner cover to crankcase (2 1/2 in. U.H.)	1	
16	14-1431	Stud, gearbox cover	2	
17	57-4624	Camplate	1	
18	71-1447	Gasket, inner cover to crankcase	1	
19	57-3660	Plunger	1	
20	57-4459	Plunger spring	1	
21	57-4400	Plunger sleeve nut	1	
22	57-3978	Washer	1	
23	57-4948	Filler cap	1	
24	57-4364	Selector fork—mainshaft 4th gear	1	
25	57-4366	Selector fork—layshaft 3rd gear	1	
26	57-4660	Selector fork—layshaft 1st gear	1	
27	37-3761	'O' ring, gearchange quadrant spindle	1	
28	14-6614	Screw, inner cover to crankcase (2 1/2 in. U.H.)	1	

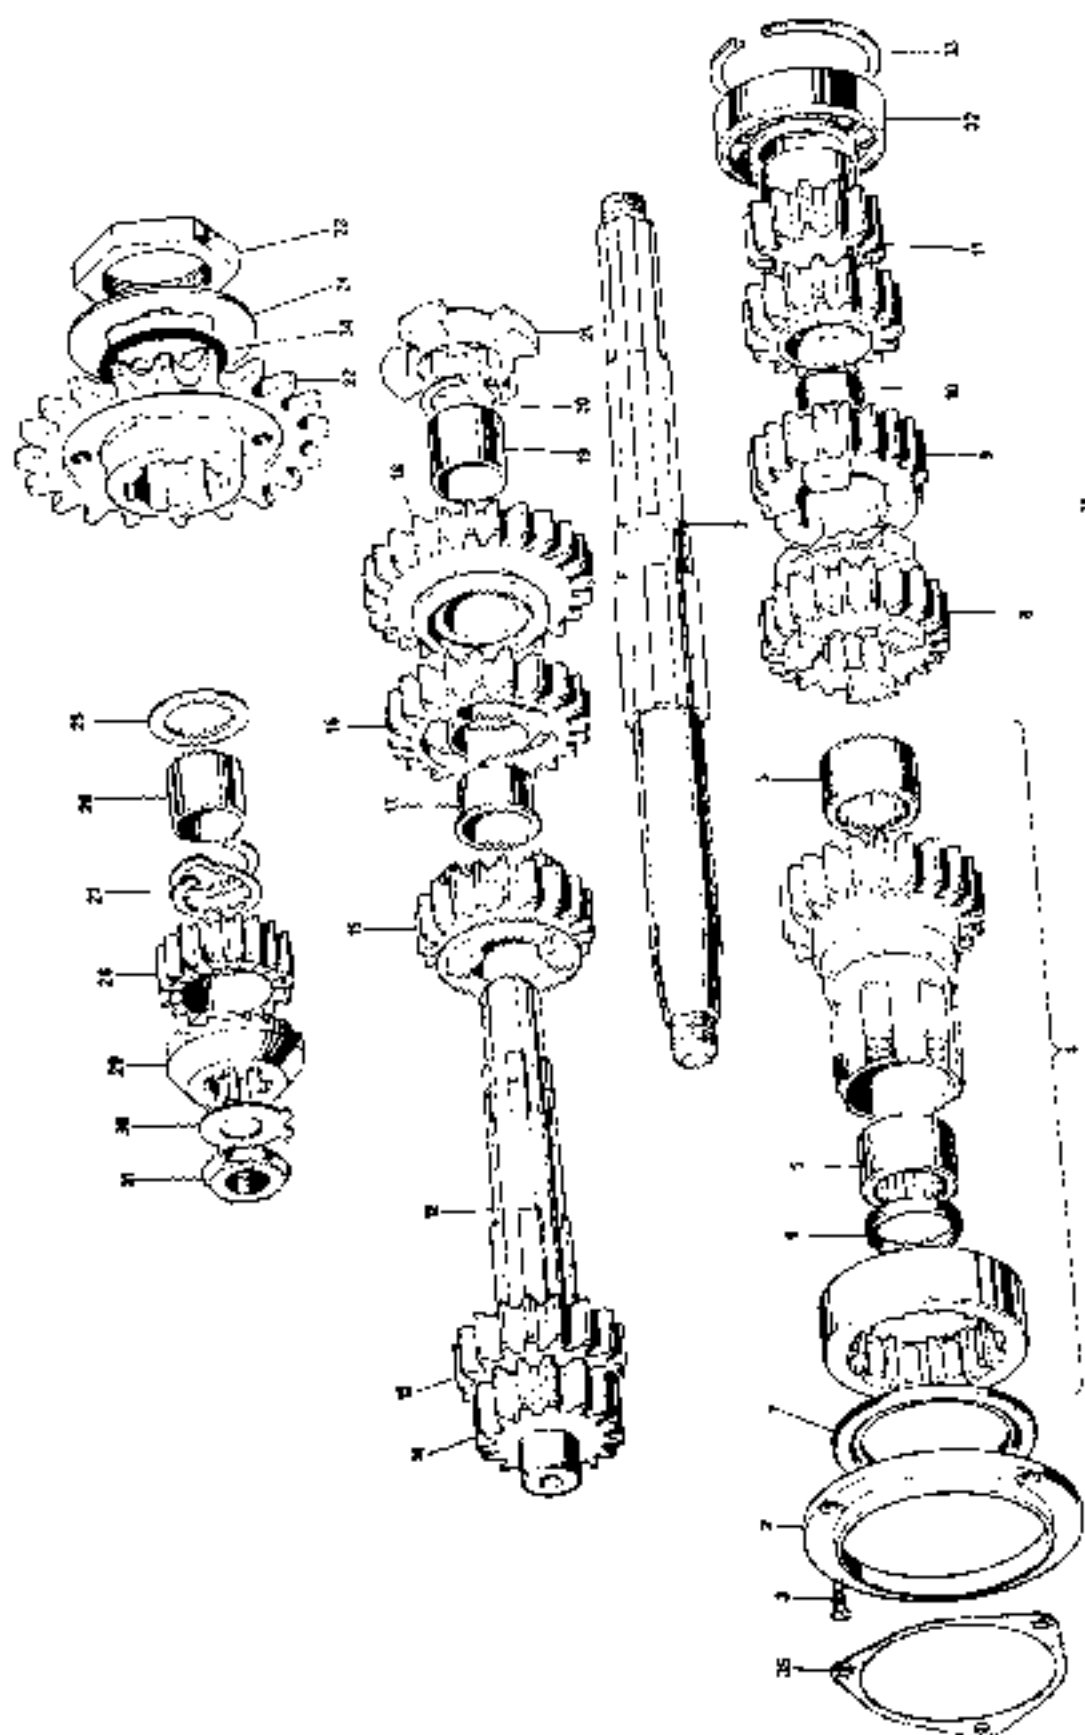


Fig. 11 GEARBOX SHAFTS AND GEARS

Ref No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
---------	----------	-------------	----------	---------

GEARBOX SHAFTS AND GEARS

1	60-3510	Oil seal	1	
2	57-4394	Housing—oil seal	1	
3	21-2106	Screw	3	
4	57-4781	MAINSHAFT HIGH GEAR ASSEMBLY (c/w bearing)	1	
5	60-3511	Needle Roller bearing	2	
6	60-3500	Oil Seal	1	
7	57-4370	Mainshaft	1	
8	57-4376	Mainshaft 4th gear	1	
9	57-4377	MAINSHAFT 3rd GEAR	1	
10	57-4575	Bush	1	
11	57-4653	Mainshaft 1st and 2nd gear .. .	1	
12	57-4900	Layshaft	1	
13	57-4787	Layshaft 4th gear .. .	Reference only	
14	57-4791	Layshaft high gear	Reference only	
15	57-4647	Layshaft 3rd gear	1	
16	57-4657	LAYSHAFT 2nd GEAR	1	
17	57-4662	Bush	1	
18	57-4654	LAYSHAFT 1st GEAR .. .	1	
19	57-4663	Bush	1	
20	60-3494	Circlip	1	
21	57-4661	Driving dog	1	
22	57-4784	Gearbox sprocket—1BT .. .	1	
23	57-4396	Locknut	1	
24	57-4909	Lock washer	1	
25	57-1962	Washer	1	
26	57-1963	Pinion sleeve	1	
27	57-1250	Pinion spring .. .	1	
28	57-0730	Kickstart pinion	1	
29	57-0731	Kickstart ratchet	1	
30	57-2240	Tab washer .. .	1	
31	21-0594	Nut	1	
32	60-3552	Mainshaft bearing	1	
33	57-4113	Bearing Circlip .. .	1	
34	71-1070	'O' ring, gearbox sprocket .. .	1	
35	71-1451	Gasket—oil seal housing .. .	1	

N.B. High gear bearing not available as a separate item

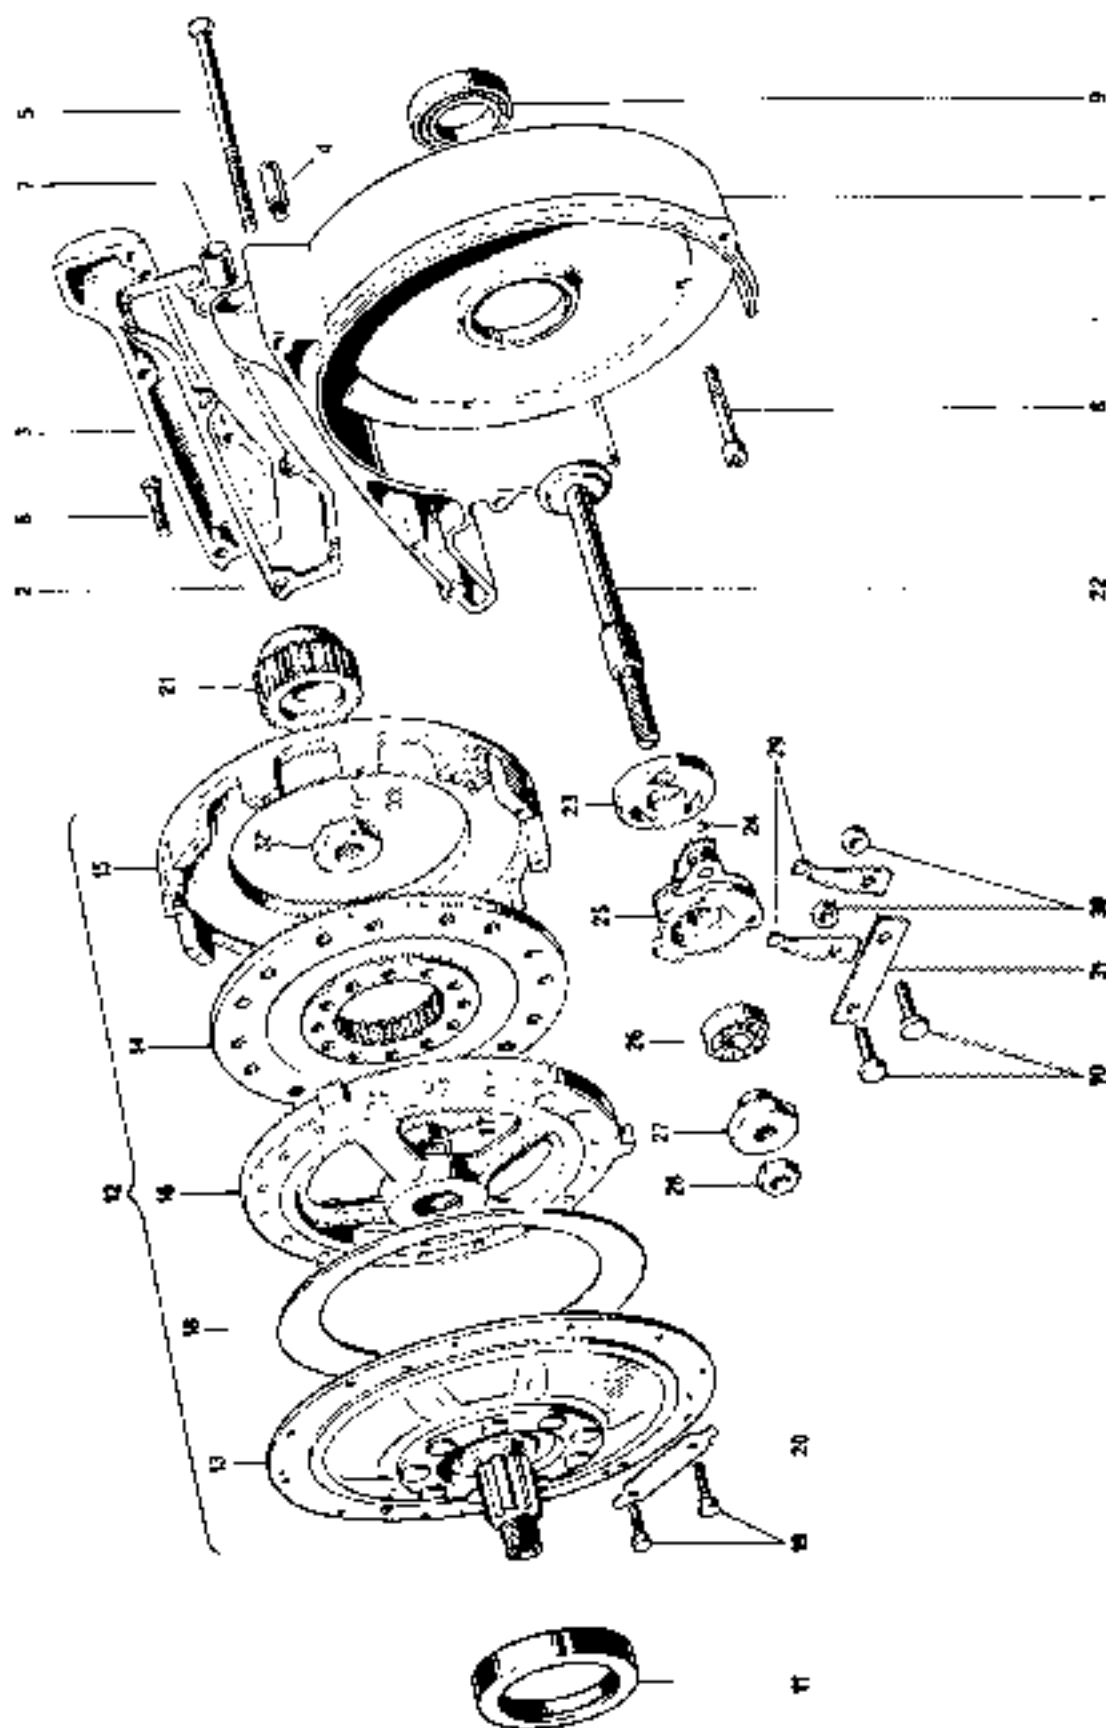


FIG. 12. CLUTCH AND CLUTCH OPERATING MECHANISM

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

CLUTCH AND CLUTCH OPERATING MECHANISM

1	57-2554	Clutch cover	1	
2	71-1452	Joint washer	1	
3	57-2555	Cover, breather duct	1	
4	57-3756	Adaptor	1	
5	14-6515	Screw, orig. cover to crankcase (4 in. U.H.)	1	
6	21-0680	Screw, short, cover to crankcase ($\frac{1}{16}$ in.)	3	
7	57-2557	Tube	1	
8	14-6610	Screw cover on crankcase	3	
9	57-3642	Oil seal cover to main shaft	1	
10	14-6102	Bolt	2	
11	57-3642	Oil seal clutch shaft	1	
12	57-2562	CLUTCH ASSEMBLY (BORG & BECK 76183)	1	
13	57-3705	End cover, assembly (BORG & BECK 76169)	1	
14	57-3709	Driven plate assembly (BORG & BECK 53273)	1	
15	57-3708	Drive ring (BORG & BECK 76167)	1	
16	57-3715	Pressure plate (BORG & BECK 76164)	1	
17	57-3717	Thrust bearing (BORG & BECK 76168)	1	
18	57-3718	Diaphragm spring rod (BORG & BECK 75303;13)	1	
19	57-3719	Bolt end cover to housing (BORG & BECK K26904)	12	
20	57-3720	Tab washer, end cover to housing (BORG & BECK 76170)	6	
21	57-2560	Clutch hub	1	
22	57-2552	Pull rod clutch release	1	
23	57-2465	Thrust plate inner	1	
24	60-2354	Ball, $\frac{1}{4}$ in. dia.	3	
25	57-2547	Clutch lever complete	1	
26	57-3647	Bearing, outer thrust plate	1	
27	57-2553	Sleeve nut	1	
28	14-0402	Locknut	1	
29	57-2473	Spring, outer thrust plate	2	
30	57-3638	Distance piece, outer thrust plate	2	
31	57-2474	Tab washer	1	
32	21-0681	Nut-clutch hub	1	
33	60-4253	Key-clutch hub	1	

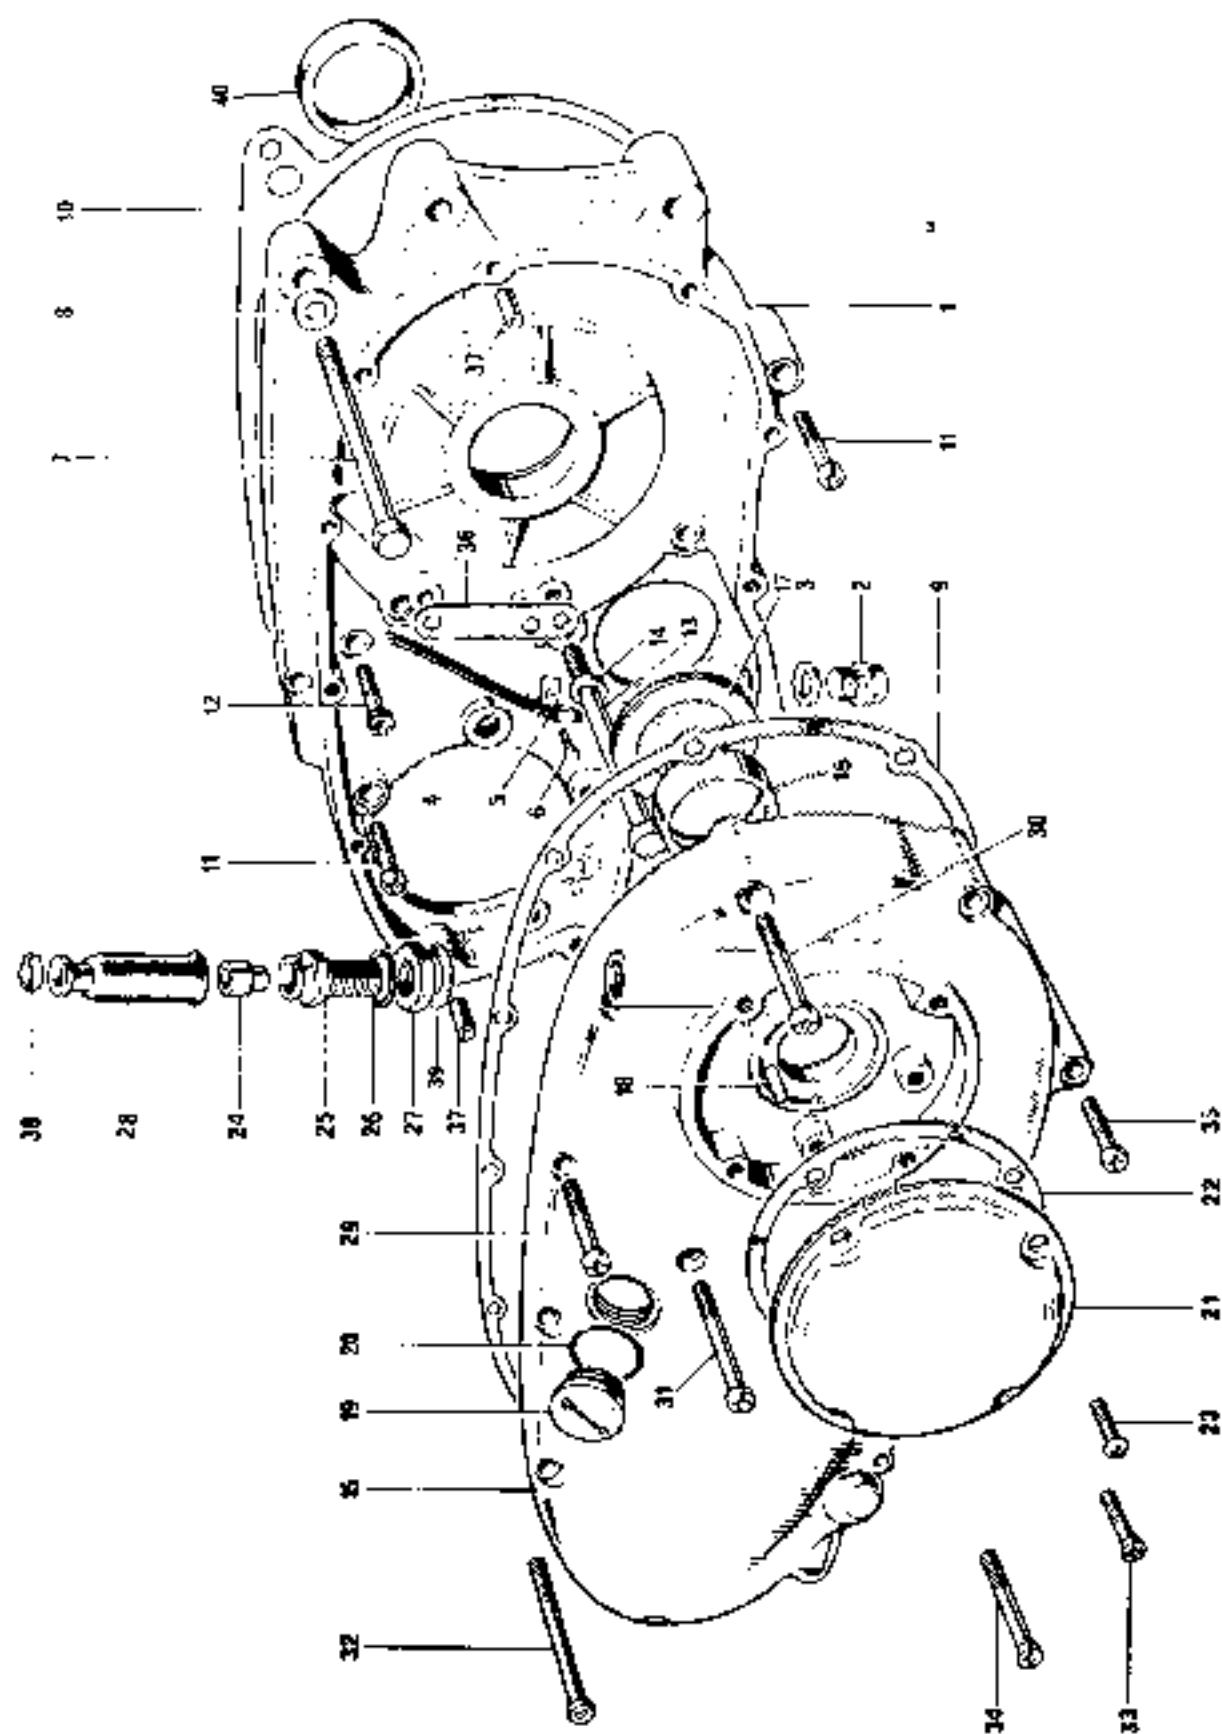


FIG. 13. INNER AND OUTER CHAINCASE

INNER AND OUTER CHAINCASE

1	57-4018	Inner primary chaincase	1	
2	21-0536	Drain plug	1	
3	70-0402	Washer	1	
4	71-3925	Tube, chain oiler	1	
5	70-4705	Clip, chain oiler—tube	1	
6	14-6101	Bolt, clip	1	
7	21-1820	Bolt, long	1	
8	60-4247	Washer	1	
9	71-1454	Gasket inner to outer chaincase	1	
10	71-1453	Gasket inner case to crankcase	1	
11	14-6606	Screw, short	2	
12	14-7006	Socket screw	7	
13	21-1819	Bolt	1	
14	60-4247	Washer	1	
15	57-4593	OUTER PRIMARY CHAINCASE	1	
16	57-3643	Needle roller bearing	1	
17	57-2215	Thrust washer	1	
18	57-0912	Peg, thrust plate	1	
19	57-2166	Filler plug	1	
20	70-8782	"O" ring	1	
21	57-3954	Inspection cover	1	
22	71-1449	Inspection cover gasket	1	
23	14-6605	Screw, inspect on cover	4	
24	57-2220	Clutch cable abutment	1	
25	57-1645	Adaptor	1	
26	57-3733	Sealing Ring	1	
27	21-0567	Locknut	1	
28	57-1646	Rubber cap	1	
29	14-6611	Screw, outer to inner chaincase	6	
30	14-6612	Screw, outer to inner chaincase	1	
31	14-6613	Screw, long outer to inner chaincase	2	
32	14-6615	Screw, outer to inner chaincase	1	
33	14-6504	Screw, short countersunk	2	
34	14-6509	Screw, long countersunk	1	
35	14-6610	Screw, short, chaincase	1	
36	71-2793	Joint washer	1	
37	57-0989	Dowel	2	
38	57-4124	Clip, clutch cable	1	
39	57-3990	Washer, abutment locknut	1	
40	57-3642	Oil seal	1	

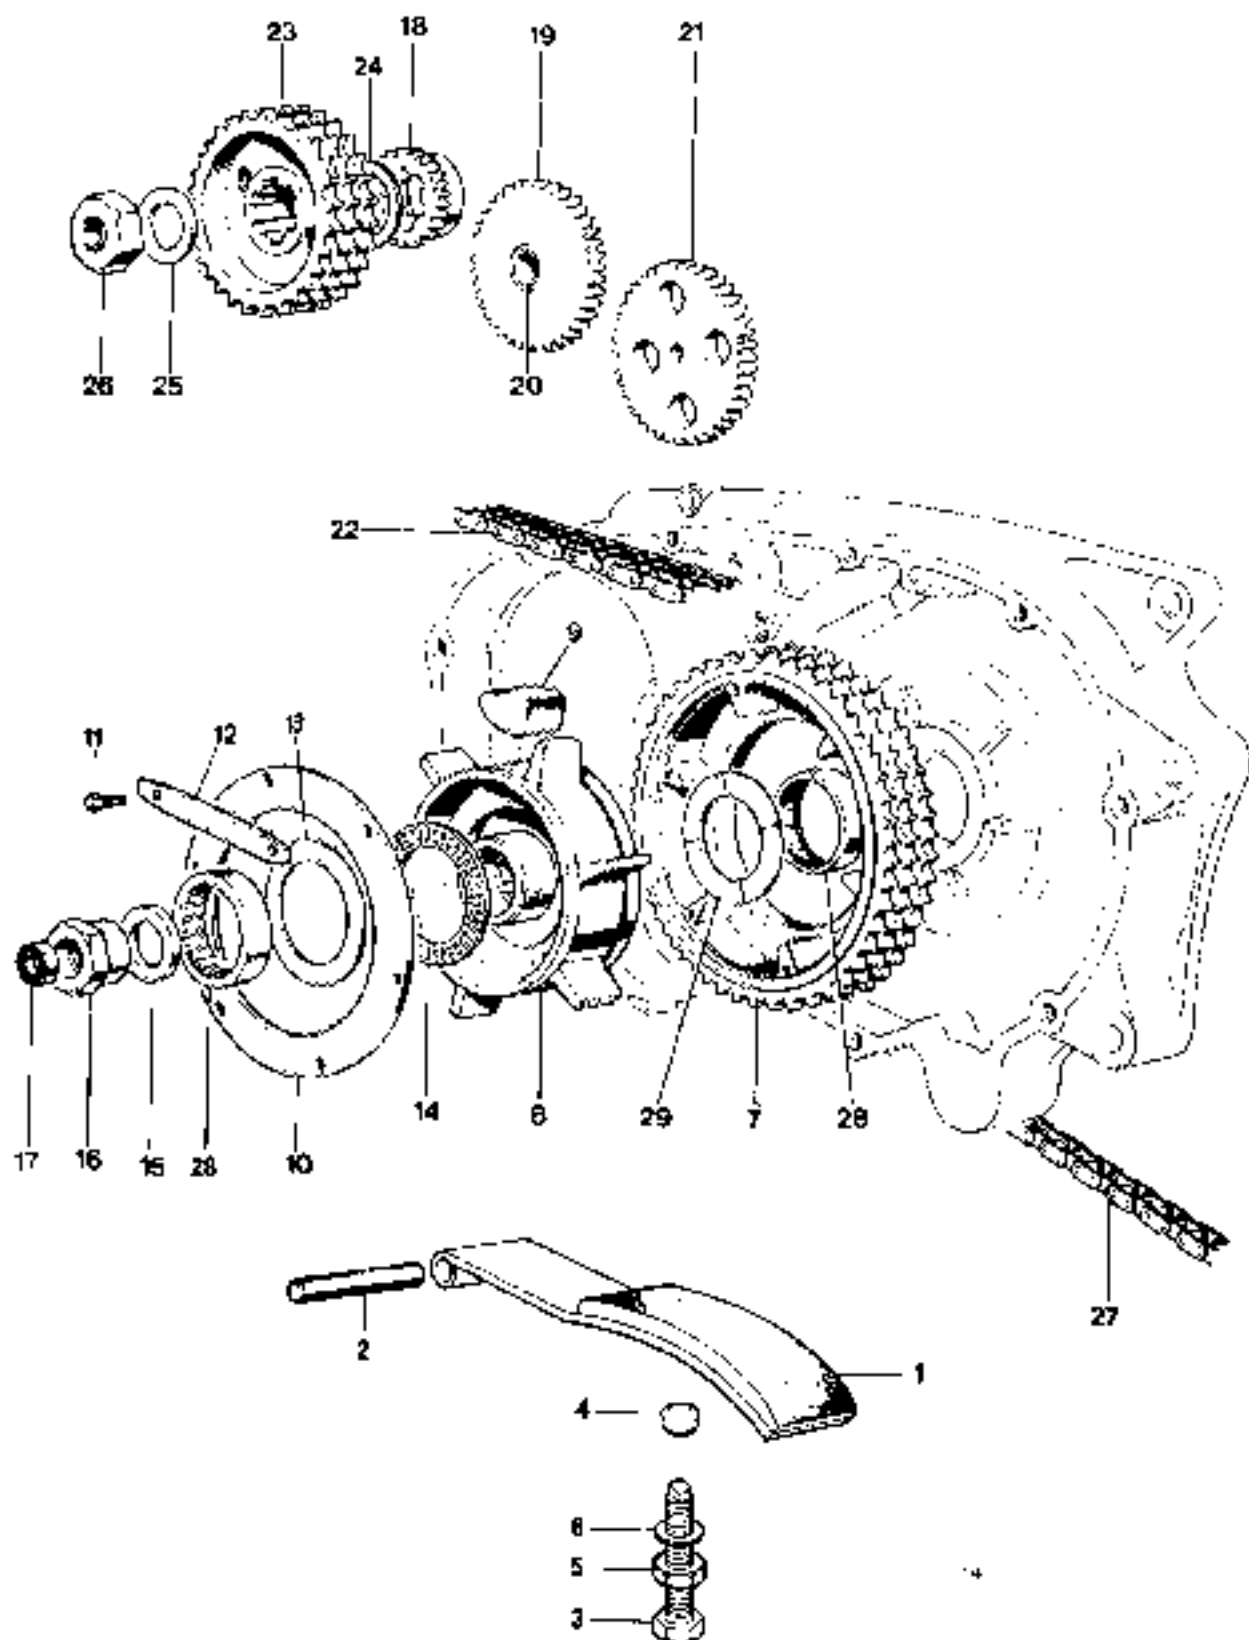


Fig. 14. PRIMARY TRANSMISSION AND OIL PUMP DRIVE

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

PRIMARY TRANSMISSION AND OIL PUMP DRIVE

1	57-4597	Tensioner blade ..	1	
2	57-4596	Pivot pin ...	1	
3	71-1502	Screw	1	
4	71-3221	Pad	1	
5	14-1904	Nut	1	
6	71-3222	Washer	1	
7	57-4225	Clutch sprocket (50T)	1	
8	57-4671	Spider ...	1	
9	57-5001	Shock absorber rubber ..	12	
10	57-4004	Retaining plate ...	1	
11	57-3940	Bolt, retaining plate ...	6	
12	57-3941	Tab washer ...	3	
13	57-2215	Outer thrust washer, clutch shaft	1	
14	57-3646	Thrust race ...	1	
15	57-2478	Spacer, shock absorber nut	1	
16	57-2480	Nut ...	1	
17	57-3644	Oil seal ...	1	
18	70-7248	Driven gear ...	1	
19	70-7246	INTERMEDIATE GEAR C/W BUSH	1	
20	70-6885	Bush ...	1	
21	*71-4237	Oil pump driven gear ...	1	
22	60-0699	Primary chain, triple row, 82 links ..	1	
23	71-6890	Engine sprocket (28T) ..	1	
24	70-8038	Shim, engine sprocket (0.010 in. thick)	as required	
24	71-2660	Shim, engine sprocket (0.030 in. thick)	as required	
25	70-8785	Tab washer ...	1	
26	71-0585	Nut, engine sprocket ...	1	
27	60-2118	Rear chain, 107 links ...	1	
27	60-0649	Rear chain, 105 links ...	Available	
28	57-3643	Needle race ...	2	
29	57-2214	Thrust washer, inner ...	1	

*Also listed on page 13.

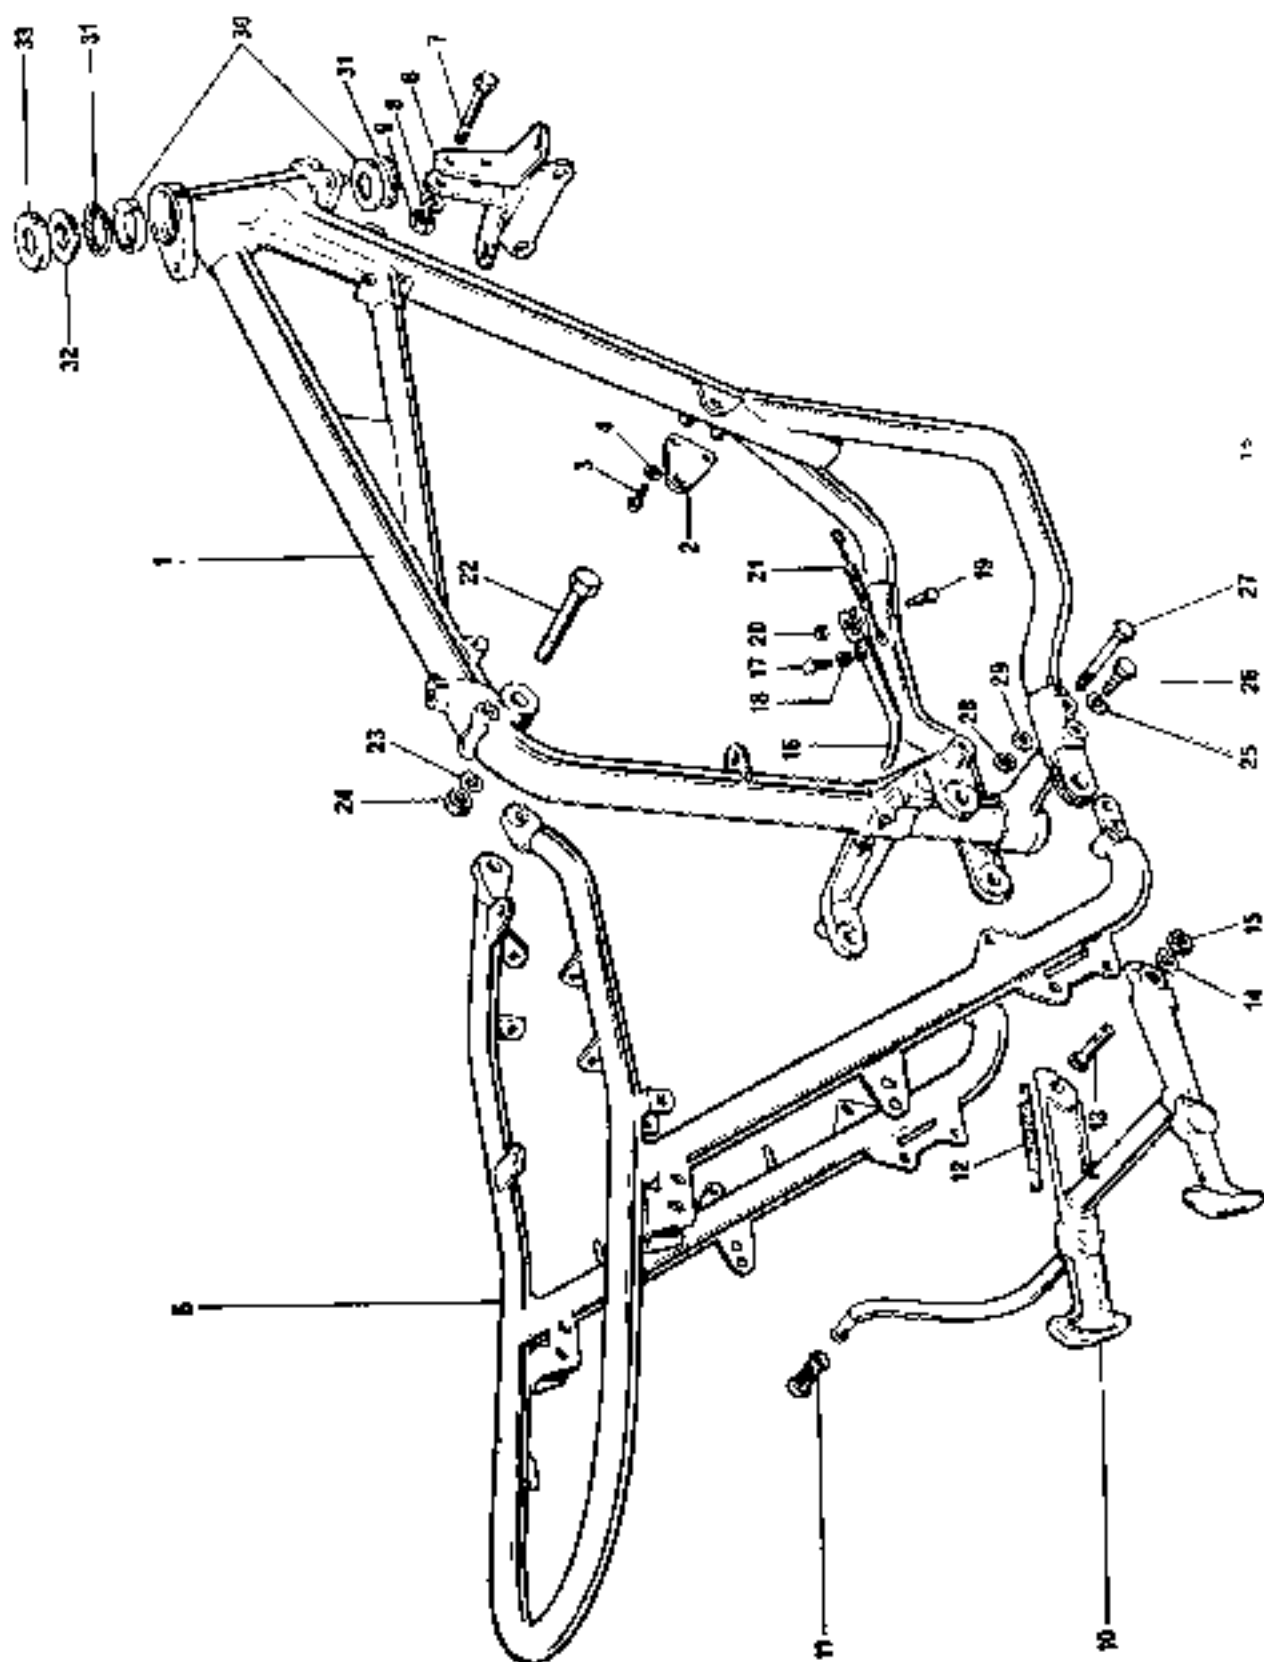


Fig. 15. FRAME

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
FRAME				
1	83-5576	Front frame	1	
2	82-7159	Front O.S. engine plate	1	
3	14-0126	Bolt	2	
4	60-4259	Spring washer	2	
5	83-3219	Rear frame	1	
6	83-2024	Mounting bracket, petrol tank	1	
7	21-1805	Bolt	2	
8	60-2418	Spring Washer	2	
9	14-0402	Nut	2	
10	83-1267	Centre stand	1	
11	57-2331	Pedal rubber	1	
12	82-4671	Spring	1	
13	21-1978	Pivot bolt	2	
14	83-1270	Tab washer	2	
15	14-0404	Nut	2	
16	83-1560	Prop stand	1	
17	14-0113	Bolt	1	
18	14-0402	Nut	1	
19	82-7071	Swivel pin	1	
20	14-0703	Nut, swivel pin	1	
21	82-8192	Spring	1	
22	14-0241	Bolt, top rear to front frame	1	
23	60-4246	Washer	2	
24	14-1303	Nut	1	
25	60-4251	Spring Washer	2	
26	21-0588	Bolt, bottom rear to front frame	2	
27	14-0251	Bolt, front rear to front frame	2	
28	14-1304	Nut	2	
29	60-2323	Washer	2	
30	97-0111	Cup, top and bottom steering race	2	
31	60-2364	Steering head bal.	40	
32	97-1018	Top cone (c.w. dust cover)	1	
33	97-4145	Steering stem collar	1	
Not illus.	60-4520	Transfer "Safety Standards" (U.S.A.)	1	
Not illus.	60-2349	Prop stand washer (Sweden, Denmark and Switzerland)	2	
Not illus.	83-3970	Prop stand pivot pin (Sweden, Denmark and Switzerland)	1	
Not illus.	83-3971	Prop stand spring (Sweden, Denmark and Switzerland)	1	

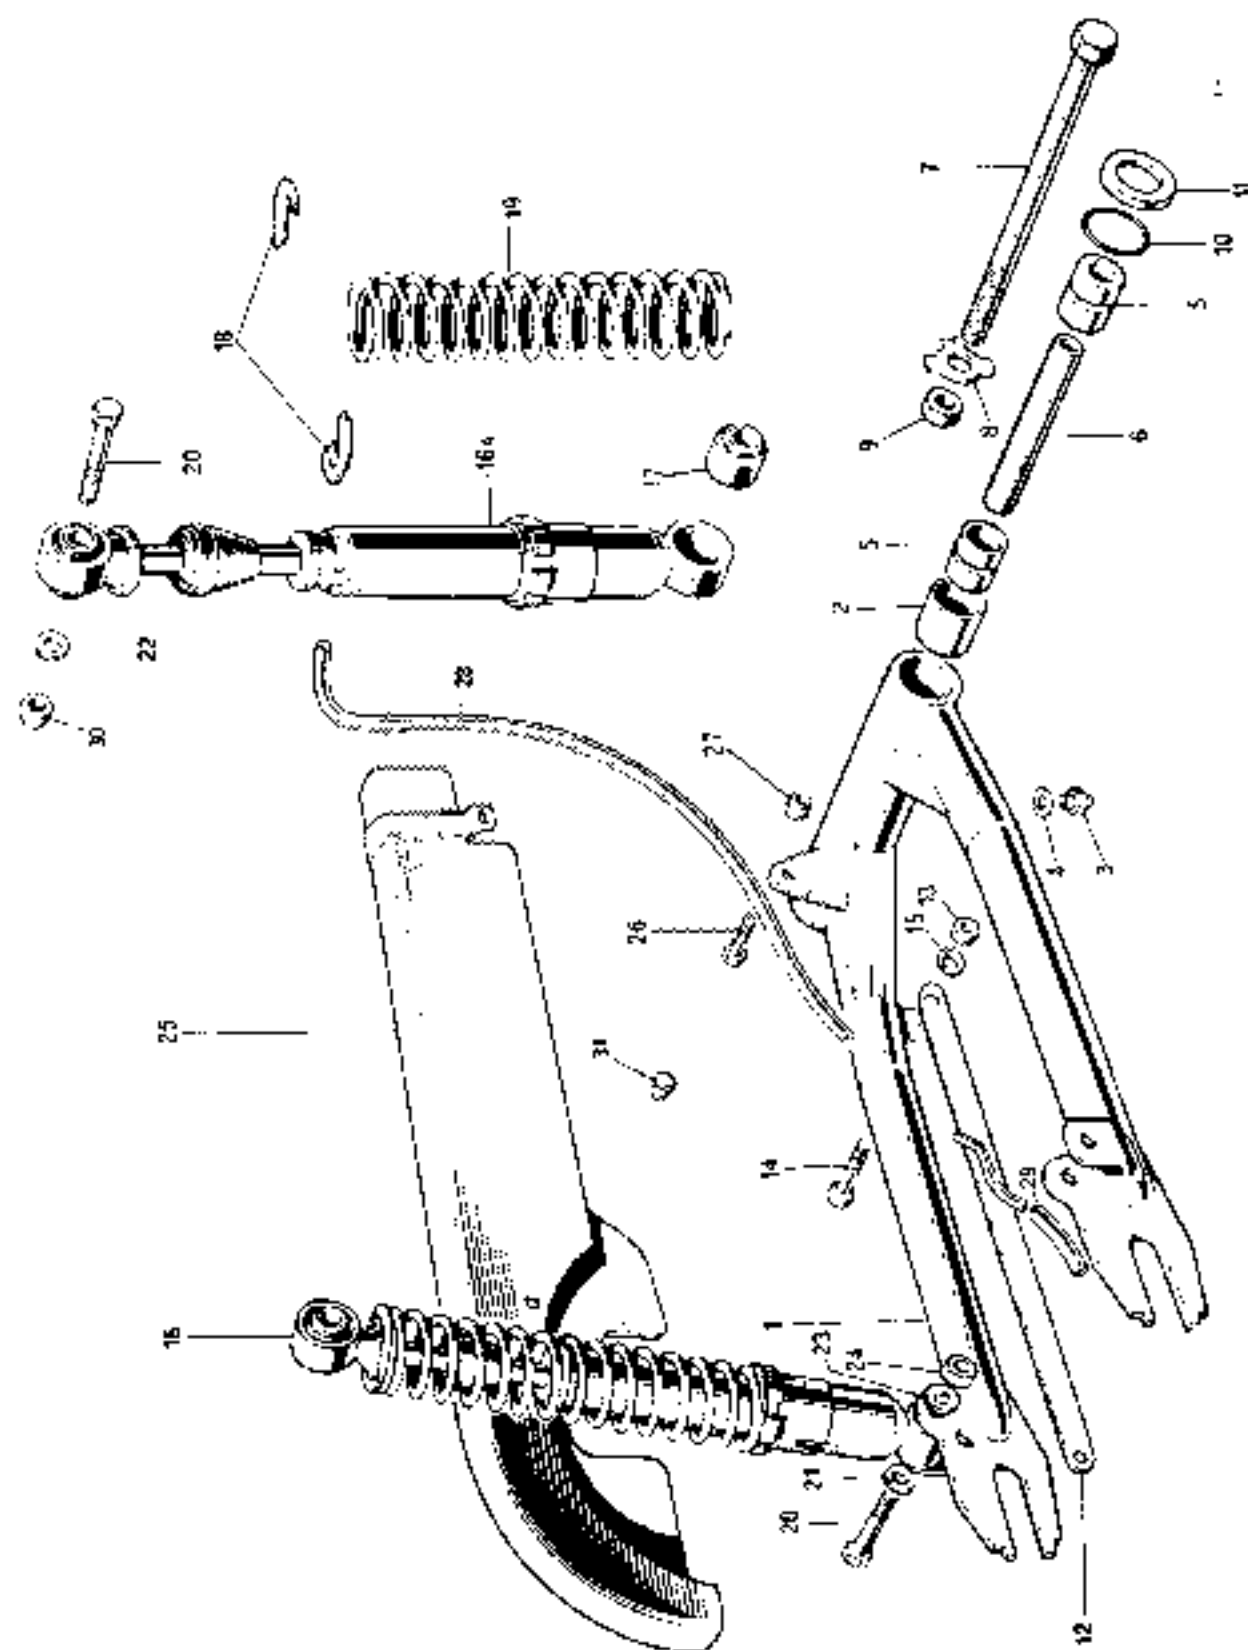


FIG. 16. SWINGING FORK AND SUSPENSION UNITS

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

SWINGING FORK AND SUSPENSION UNITS

1	83-3233	SWINGING FORK	1	
2	82-6042	Bush	2	
3	60-1841	Grease nipple	1	
4	71-2501	Washer, grease nipple	1	
5	82-6821	Bobbin	2	
6	82-5313	Distance tube	1	
7	21-0620	Stem bolt	1	
8	82-5914	Tab washer	1	
9	21-0545	Nut	1	
10	82-8090	"O" ring	2	
11	82-7848	Oil seal housing	2	
12	83-3228	Torque stay	1	
13	14-1304	Nut	1	
14	14-0133	Bolt	1	
15	60-4267	Spring washer	1	
16	60-2294	SUSPENSION UNIT 64052345	2	
16a	64052090	Damper unit		Reference only
17	64533645	Bonded bush (99-0122)	4	
18	9054171	Spring retainer (99-0107)	4	
19	64544754	Spring (110 lbs.) (99-1139)	2	
20	14-0235	Bolt, top and bottom	4	
21	60-2429	Spring washer--D.S. lower	1	
22	60-4246	Washer, . . .	7	
23	87-2184	Washer--D.S. lower	1	
24	14-1303	Nut	2	
25	83-5429	Rear chainguard	1	
26	14-0113	Front pivot bolt	1	
27	14-0702	Self-locking nut	1	
28	82-7352	Chain oiler pipe--long	1	
29	82-9997	Chain oiler pipe--short	1	
30	14-1303	Nut	2	
31	82-7994	Blanking plug	2	

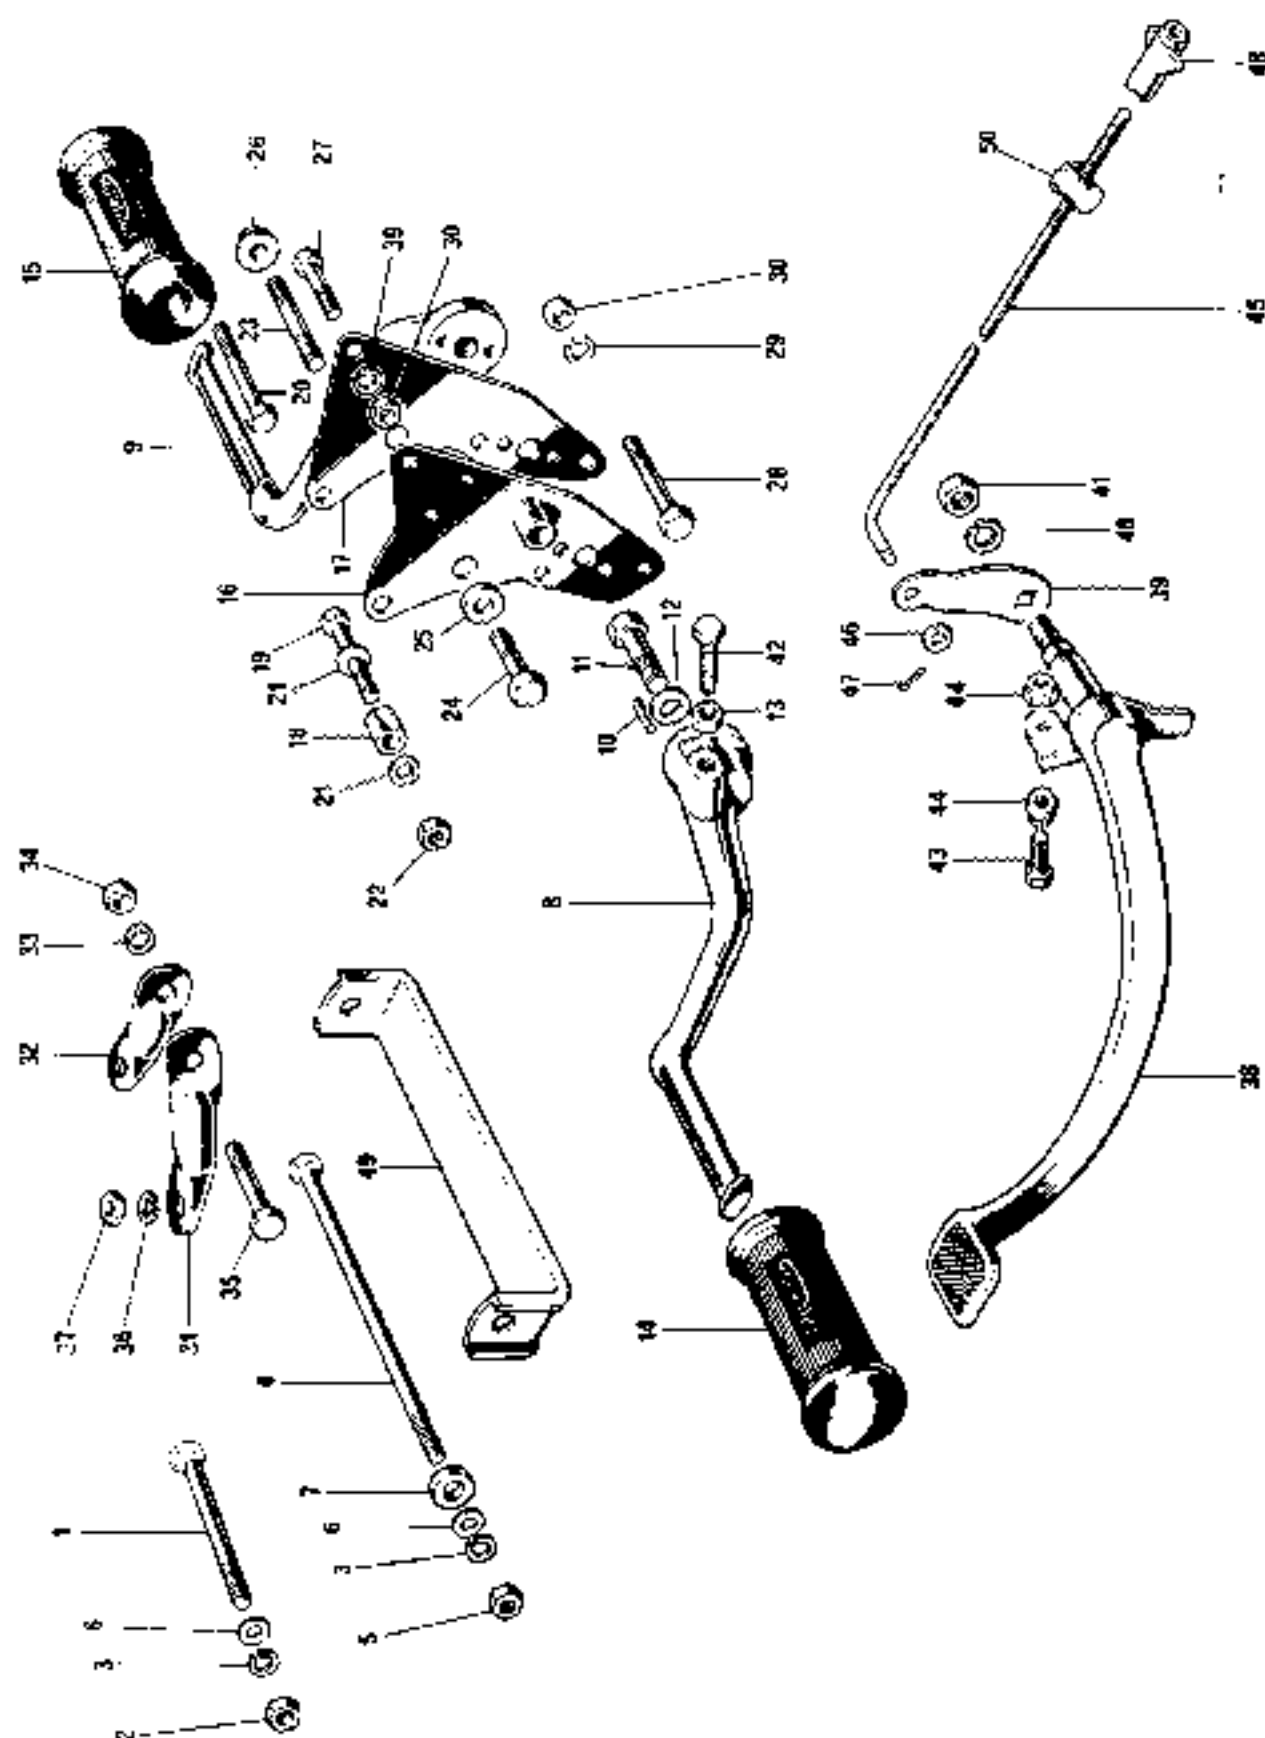


Fig. 17. MOTOR UNIT FITTINGS AND FOOTRESTS

MOTOR UNIT FITTINGS AND FOOTRESTS

1	14-0254	Bolt, front engine to frame (3 $\frac{1}{2}$ in. U.H.)	1	
2	14-1304	Nut	1	
3	60-2323	Spring washer	2	
4	21-2112	Bolt (bottom) engine to frame	1	
5	14-1304	Nut	1	
6	60-2332	Washer, plain	2	
7	82-5532	Spacer, bottom engine fixing	1	
8	82-9623	Drive side footrest	1	
9	82-9624	Timing side footrest	1	
10	82-5943	Peg	4	
11	21-1969	Bolt, footrest	2	
12	82-8243	Washer, footrest stud	2	
13	14-0401	Locknut	1	
14	82-9279	Footrest rubber T.S.	1	
15	82-9630	Footrest rubber D.S.	1	
16	83-1597	Rear engine plate T.S.	1	
17	83-1594	Rear engine plate D.S.	1	
18	83-1598	Sparer D.S. rear engine plate	2	
19	14-0222	Bolt, D.S. rear engine plate to engine	2	
20	14-0221	Bolt, T.S. rear engine plate to engine	2	
21	60-4247	Washer, rear engine plate to engine	8	
22	14-1302	Nut	4	
23	21-0548	Stud, T.S. pivot lug to engine plate (1 $\frac{1}{2}$ in. O.A.)	1	
24	14-0132	Bolt, D.S. pivot lug to engine plate	1	
25	82-3770	Washer	1	
26	82-7389	Nut	2	
27	14-0128	Bolt, upper rear engine plate to frame	2	
28	14-0234	Bolt, lower rear engine plate to frame	2	
29	60-2322	Spring washer	4	
30	14-1303	Nut	4	
31	82-9378	Torque stay engine L.H.	1	
32	82-9379	Torque stay engine R.H.	1	
33	60-4246	Washer	2	
34	14-1303	Nut	2	
35	14-0237	Bolt, torque stay to frame	1	
36	60-2321	Washer	2	
37	14-1302	Nut	1	
38	82-9635	Rear brake pedal	1	
39	82-6064	Lever	1	
40	60-2322	Spring washer	1	
41	14-1303	Nut	1	
42	14-0105	Stop bolt	1	
43	14-0103	Adjuster, stoplamp switch	1	
44	14-0401	Nut, adjuster	2	
45	83-1752	Brake rod	1	
46	60-4248	Washer, plain	1	
47	60-2583	Split pin, (1 $\frac{1}{2}$ in. - 2 in.)	Reference only	
48	82-7387	Adjuster nut	1	
49	82-9529	Oil pipe retaining strap	1	
50	37-1467	Pivot pin	1	

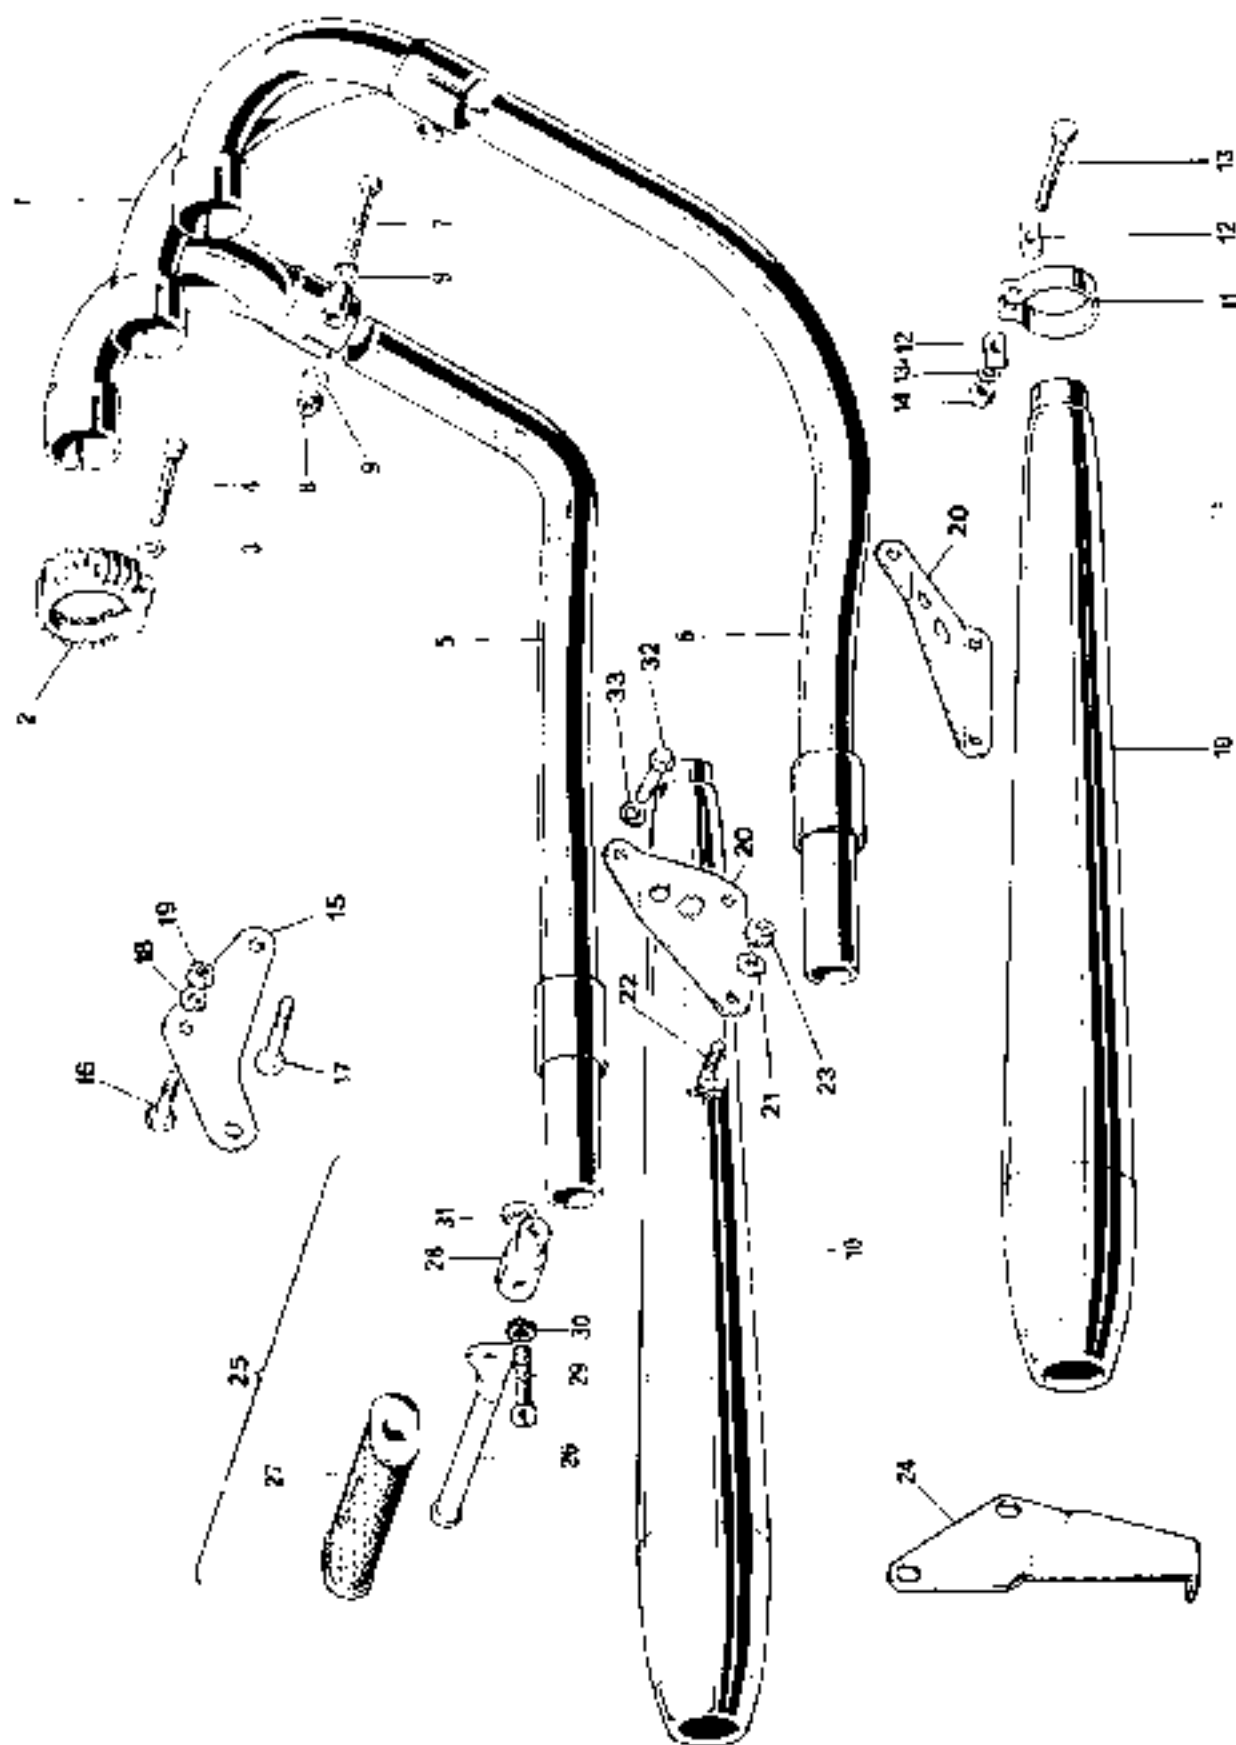


FIG. 18. EXHAUST PIPES AND MUFFLERS

EXHAUST PIPES AND MUFFLERS

1	70-7597	Exhaust manifold	1	
2	70-6743	Finned clip	3	
3	70-8860	Hemispherical washer	3	
4	70-6744	Bolt	3	
5	71-3812	Exhaust pipe—L H	1	
6	71-3815	Exhaust pipe—R H	1	
7	14-0205	Bolt	2	
8	14-201	Nut	2	
9	60-4245	Washer	4	
10	71-4159	Muffler	2	
11	70-5874	Clip	2	
12	70-3768	"D" washer	4	
13	14-0219	Bolt	2	
13A	60-4247	Washer	2	
14	14-1202	Nut	2	
15	71-3817	Hanger	2	
16	14-0115	Bolt	2	
17	14-0116	Bolt	2	
18	60-4247	Washer	4	
19	14-1302	Nut	4	
20	71-3810	Bracket—L.H.	1	
20	71-3811	Bracket—R.H.	1	
21	60-4248	Washer	4	
22	14-0102	Bolt	4	
23	14-1201	Nut	4	
24	83-2033	Centre stand stop plate	1	
25	82-9369	PALLION FOOTREST	2	
26	82-1634	Pin	1	
27	82-1635	Rubber	1	
28	82-9370	Hanger	1	
29	82-9371	Pivot bolt	1	
30	60-2438	Thackeray washer	1	
31	14-0302	Nut	1	
32	14-0128	Bolt	1	
33	60-4259	Spring washer	1	

Each assembly

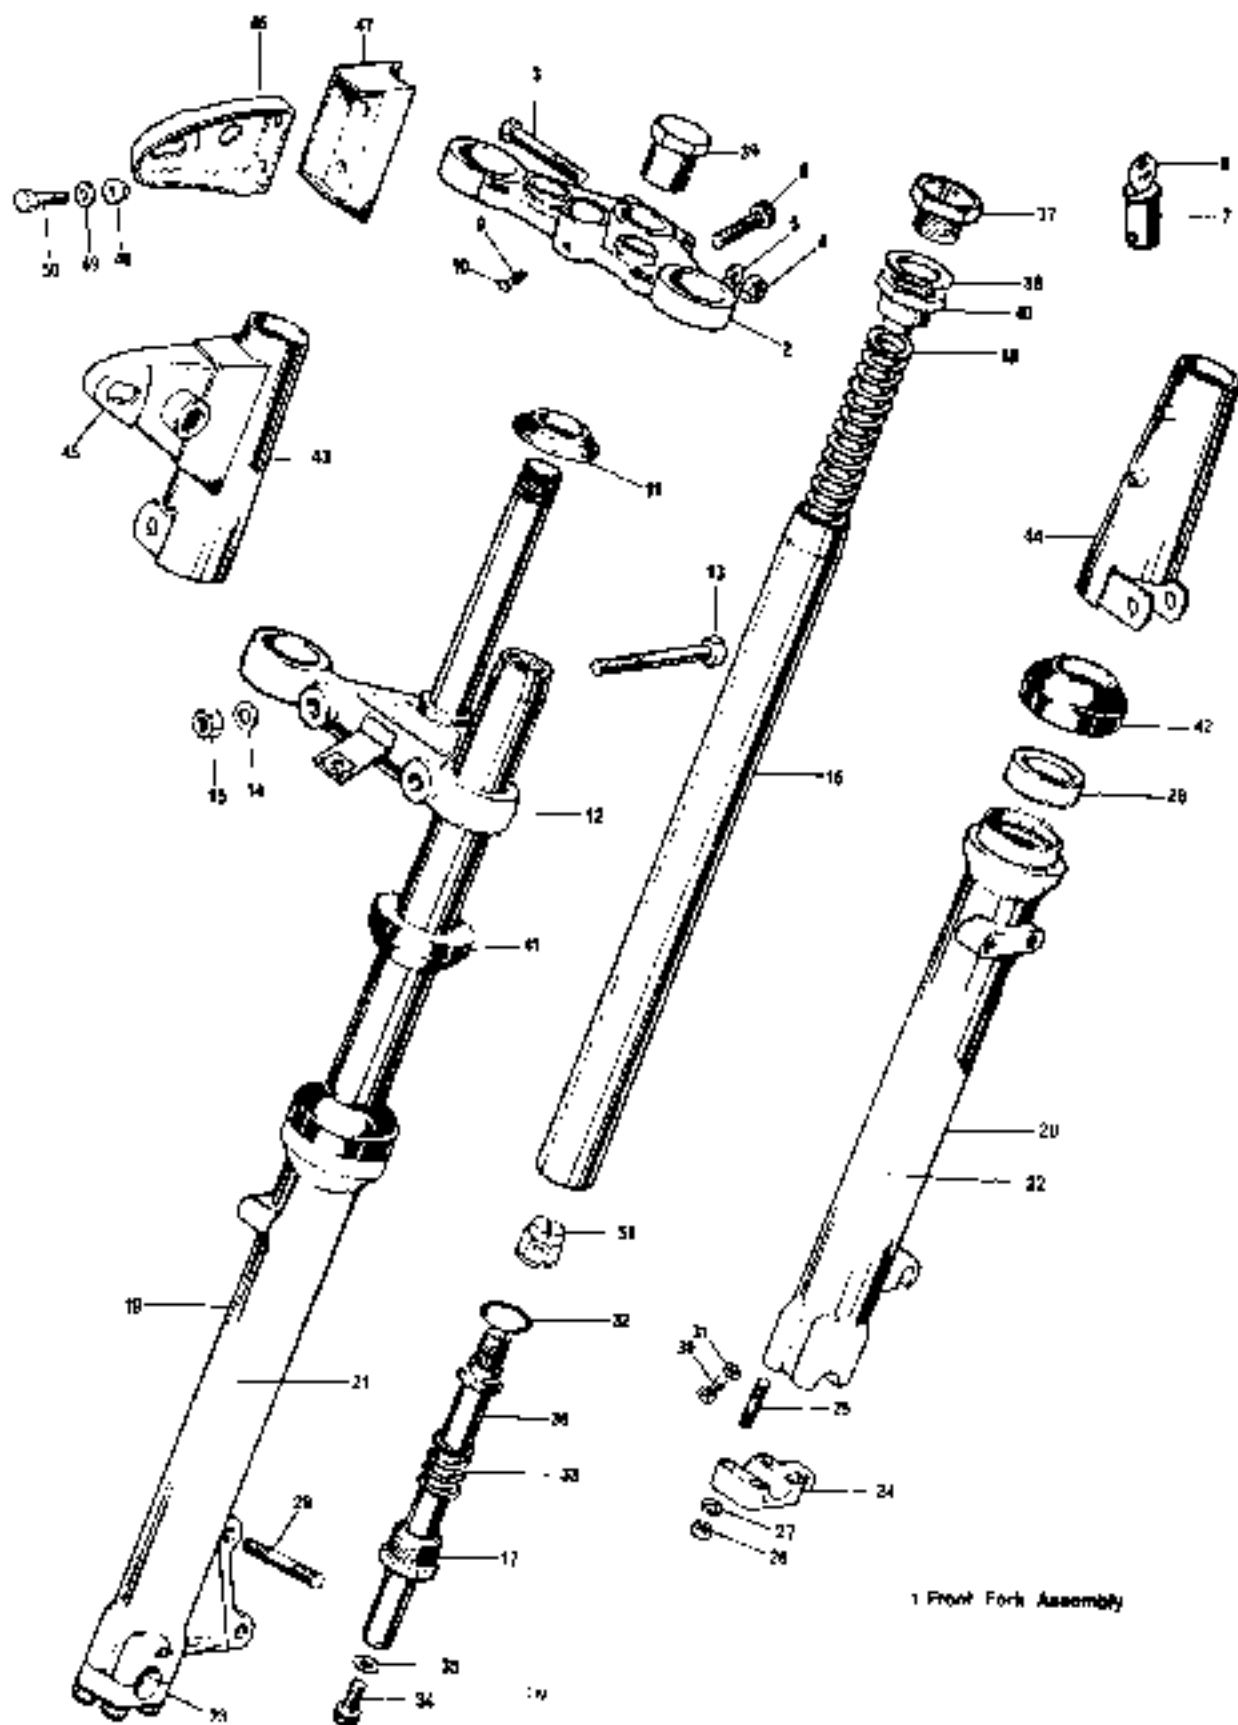


Fig. 19. TELESCOPIC FRONT FORK.

TELESCOPIC FRONT FORK

1	97-4468	FORK ASSEMBLY	1	
2	97-4381	Top yoke	1	
3	14-0234	Pinch bolt	1	
4	14-1303	Nut	1	
5	60-2331	Washer	1	
6	14-1034	Cap screw	2	
7	82-6738	Lock pin 2 keys	1	
8	60-2623	Key (state serial number)	1	
9	21-0578	Grub screw	1	
10	97-2266	Sealing washer	1	
11	97-0439	Bottom cone	2	
12	97-4463	Bottom yoke and stem	1	
13	14-0237	Pinch bolt	1	
13	97-4476	Pinch bolt	1	
14	82-2184	Washer	4	
15	14-1303	Nut	2	
16	97-4380	Stanchion	2	
17	97-4076	End plug	2	
18	97-4215	Main spring	2	
19	97-4399	OUTER MEMBER—L.H. (Assembly)	1	
20	97-4398	OUTER MEMBER—R.H. (Assembly)	1	
21	97-4377	Outer Member L.H.	1	
22	97-4376	Outer Member R.H.	1	
23	97-4456	Cap, wheel spindle—L.H.	1	
24	97-4457	Cap, wheel spindle—R.H.	1	
25	21-2102	Stud	8	
26	14-0302	Nut	8	
27	60-2428	Washer	8	
28	97-4001	Oil seal	2	
29	21-2189	Stud, caliper to outer member	2	
30	82-4715	Drain plug	2	
31	97-3893	Washer	2	
32	97-4003	O' ring	2	
33	97-4009	Recoil spring	2	
34	14-1019	Cap screw	2	
35	97-4004	Cap screw seal	2	
36	97-4242	Damper tube and valve assembly	2	
37	97-4404	Top cap nut	2	
38	97-4166	Washer	2	
39	97-4347	Steering stem nut	1	
40	97-4387	Cap screw, top cap nut	2	
41	97-4461	Rubber ring, outer cover	2	
42	97-4002	Stripper sleeve	2	
43	97-4482	Outer cover—L.H.	1	
44	97-4483	Outer cover—R.H.	1	
45	97-4121	Headlamp bracket—L.H.	1	
46	97-4203	Headlamp bracket—R.H.	1	
47	97-2208	Rubber mounting	2	
48	97-2209	Rubber buffer	4	
49	97-2210	Barking washer	4	
50	21-2095	Attachment bolt	4	
51	97-4244	Nut, damper valve	1	

ALTERNATIVE FITMENTS (NOT U.S.A.)

	97-4469	Fork assembly	1	
	97-1510	Gaiter	2	
	97-4484	Outer cover—L.H.	1	
	97-4485	Outer cover—R.H.	1	
Not illus.	66-3780	Lock assembly (Germany and Fin and only)	1	
Not illus.	97-4470	Top yoke (Germany and Fin and only)	1	

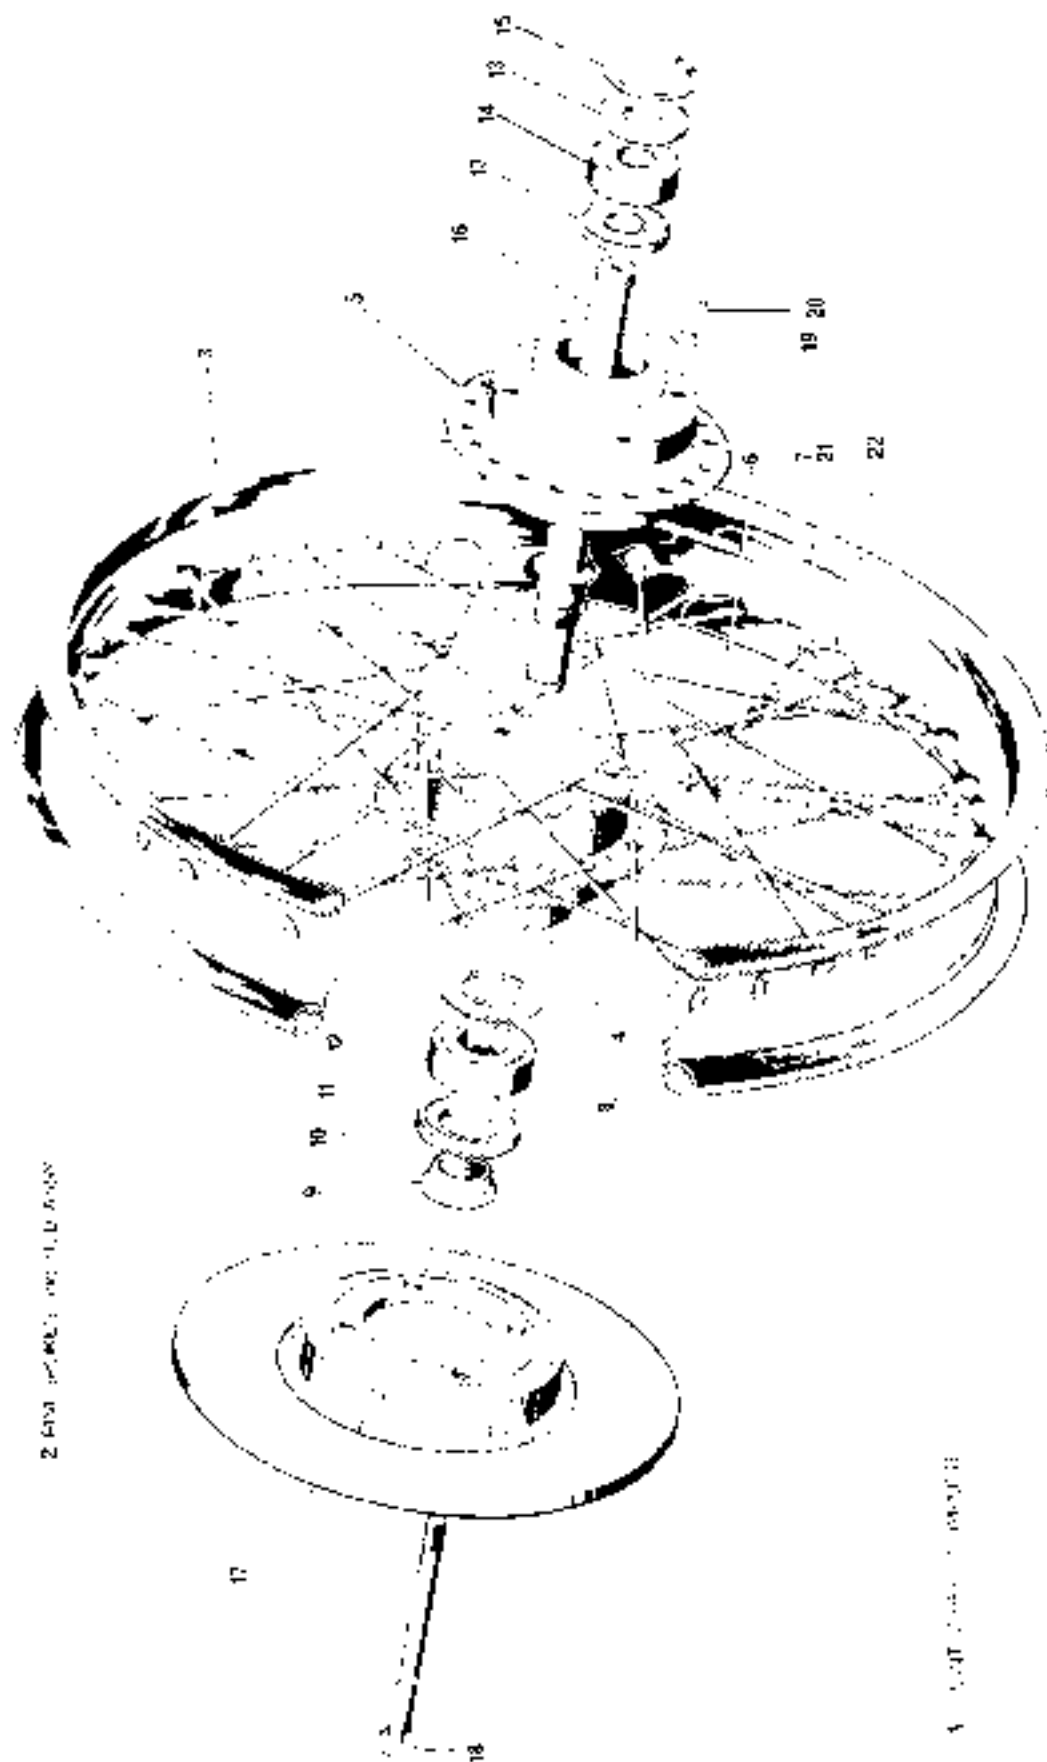


FIG. 20. FRONT WHEEL

FRONT WHEEL

1	37-4141	FRONT WHEEL COMPLETE	1	
2	37-4304	RIM, SPOKES AND HUB ASSEMBLY	1	
3	37-4129	Rim	1	
4	37-4126	Hub—L.H. half	1	
5	37-4127	Hub—R.H. half	1	
6	37-4131	Spoke—Outer	20	
7	37-4130	Spoke—Inner	20	
8	37-4302	Spoke Nipple	40	
9	37-4133	Locknut—L.H.	1	
10	37-4134	Lock Ring—L.H.	1	
11	57-1070	Bearing—L.H.	1	
12	37-4135	Grease retainer—L.H.	1	
13	37-1237	Dust Cover—R.H.	2	
14	37-0653	Bearing—R.H.	1	
15	57-0280	Circlip—R.H.	1	
16	37-4132	Spindle	1	
17	37-4275	Disc	1	
18	2-2207	Bolt	4	
19	70-8770	Washer } Disc to hub	4	
20	14-1903	Nut }	4	
21	37-3969	Balance weight	As reqd.	
22	37-3970	Balance weight	As reqd.	

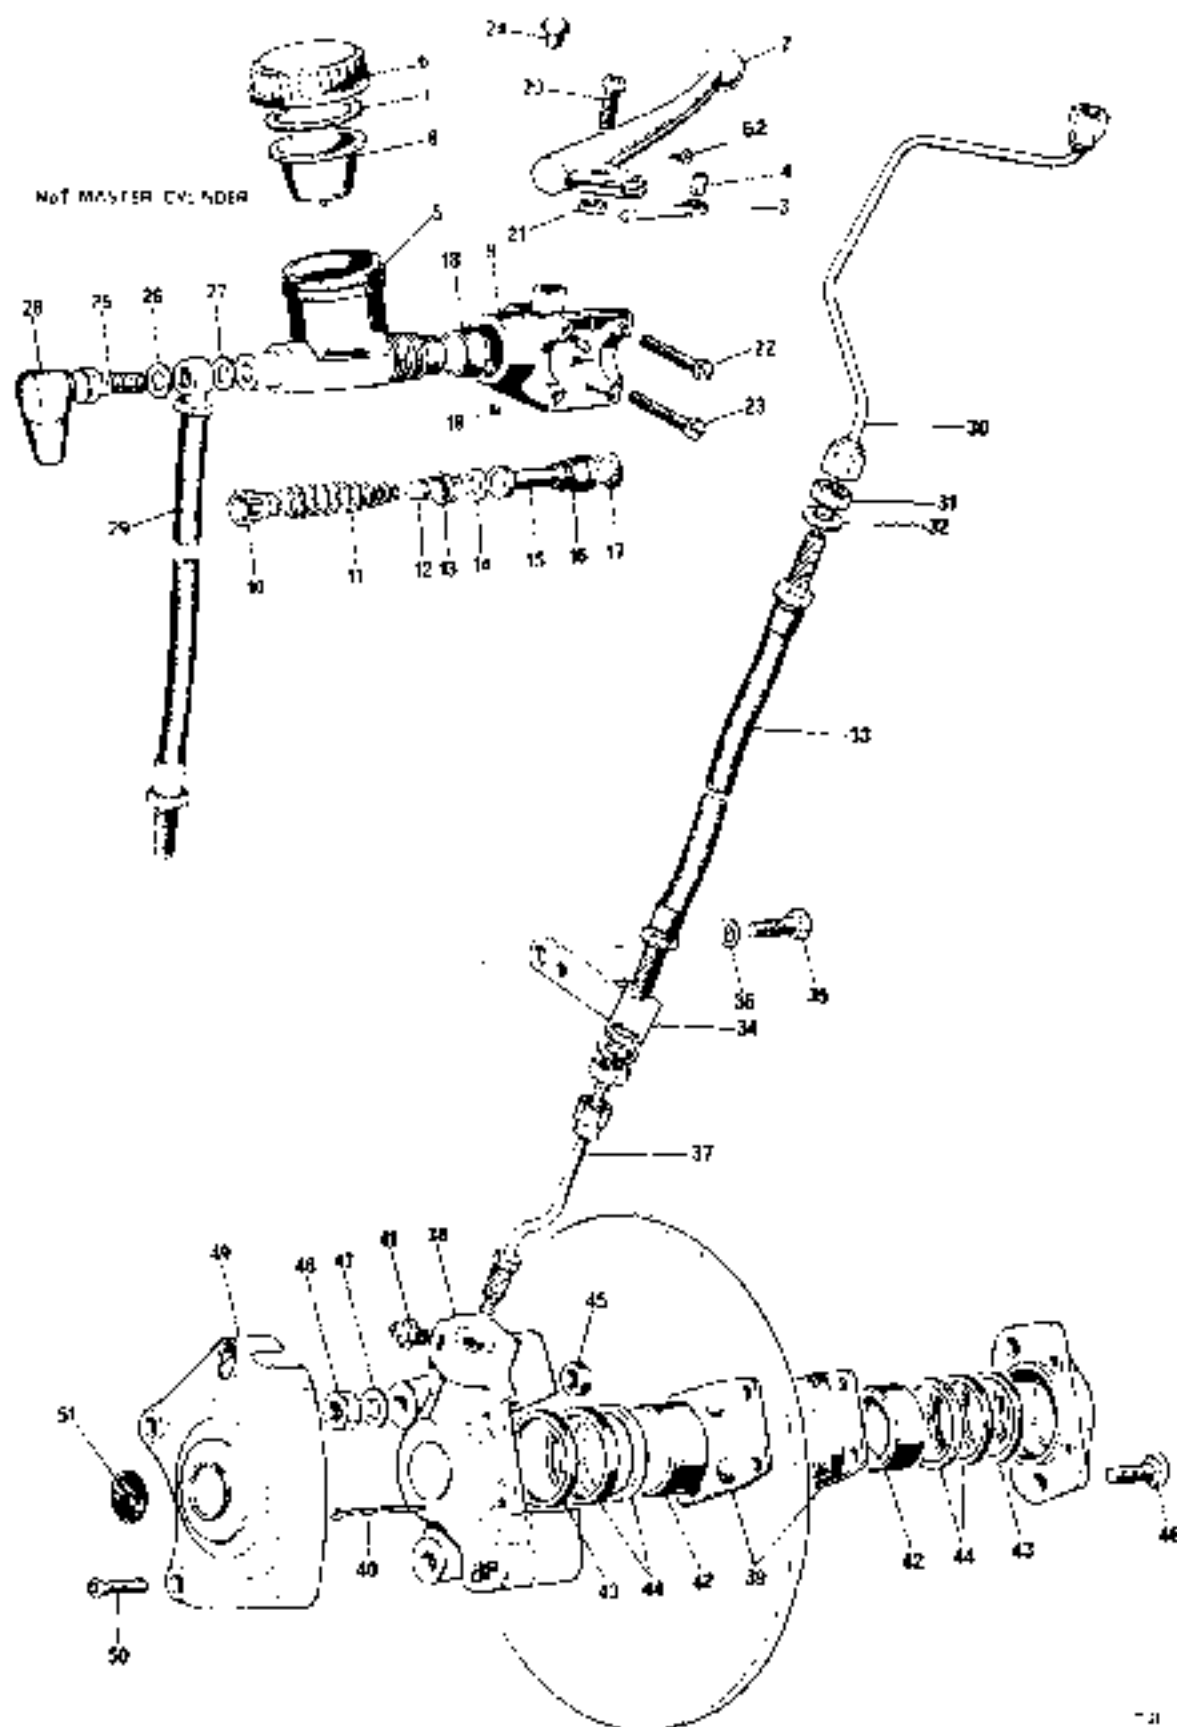


Fig. 21. FRONT BRAKE

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
FRONT BRAKE				
1	4222-979	MASTER CYLINDER (60-4102)	1	
2	97-4391	Brake lever ..	1	
3	3761-270	Piston ..	Reference only	
4	3528-441	Spiral pin ..	Reference only	
5	4221-072	Barrel and tank assy. (99-2770)	1	
6	3847-240	Cap (99-2751)	1	
7	60-4328	Washer ..	1	
8	*3818-747	Diaphragm (99-2752)	1	
9	3338-901	Switch housing (99-2753)	1	
10	*4312-318	Trap valve (99-2754)	1	
11	3118-234	Spring (99-2755)	1	
12	3675-216	Spring retainer (99-2756)	1	
13	*3842-424	Primary cup (99-2757)	1	
14	*106418	Piston washer (99-2758)	1	
15	3261-542	Piston (99-2759)	1	
16	*3871-473	Secondary cup (99-2760)	1	
17	K29103	Circlip (99-2761)	1	
18	*3811-420	Rubber boot (99-2762)	1	
19	3476-209	Grub screw (99-2763)	1	
20	21-2191	Pivot screw ..	1	
21	14-1201	Nut ..	1	
22	21-2192	Screw } Switch assy. to housing	2	
23	21-2194	Screw }	2	
24	70-7573	Plug ..	1	
25	30420	Banjo bolt (60-4183)	1	
26	KL44516	Sealing washer (60-4182)	1	
27	KL44518	Sealing washer (60-4184)	1	
28	3817-810	Rubber boot (60-4186)	1	
29	KL58505 cs.	Hose, master cylinder to top yoke (60-4176)	1	
29	KL10007 cs.	Hose, master cylinder to top yoke (60-4177)	Available	
30	ZT2071N	Pipe, top yoke to bottom yoke (60-4179)	1	
31	K24103	Locknut (60-4180)	3	
32	K19407	Washer (60-4181)	3	
33	KL56612 cs.	Hose, bottom yoke to fork leg (60-4175)	1	
34	B3-5150	Bracket, pipe support ..	1	
35	14-0103	Bolt } Bracket to fork leg	2	
36	60-2427	Washer }	2	
37	ZTA2070N	Pipe, fork leg caliper (60-4178)	1	
38	4823-432	C.A. IPFR (60-4101)	1	
39	*4741-537	Brake pad ..	Reference only	
40	†K19866TP2	Retaining pin ..	Reference only	
41	3486-229	Bleed nipple (99-2764)	1	
42	3275-428	Piston (99-2765)	2	
43	96498	Fluid seal (99-2766)	2	
44	55B72075	Retainer (99-2767)	2	
45	102799	Fluid seal ..	Reference only	
46	3437-307	Bolt ..	Reference only	
47	60-2337	Washer } Caliper to outer member	2	
48	14-1303	Nut }	2	
49	37-4263	Cover, caliper ..	2	
50	21-2196	Screw, cover attachment ..	2	
51	60-4156	Decal, caliper cover ..	1	
52	21-1998	Screw, stop switch to lever body ..	1	
Not illus	60-4266	Cover, Bleed Nipple ..	1	

**Available as separate service kits (see page 7)

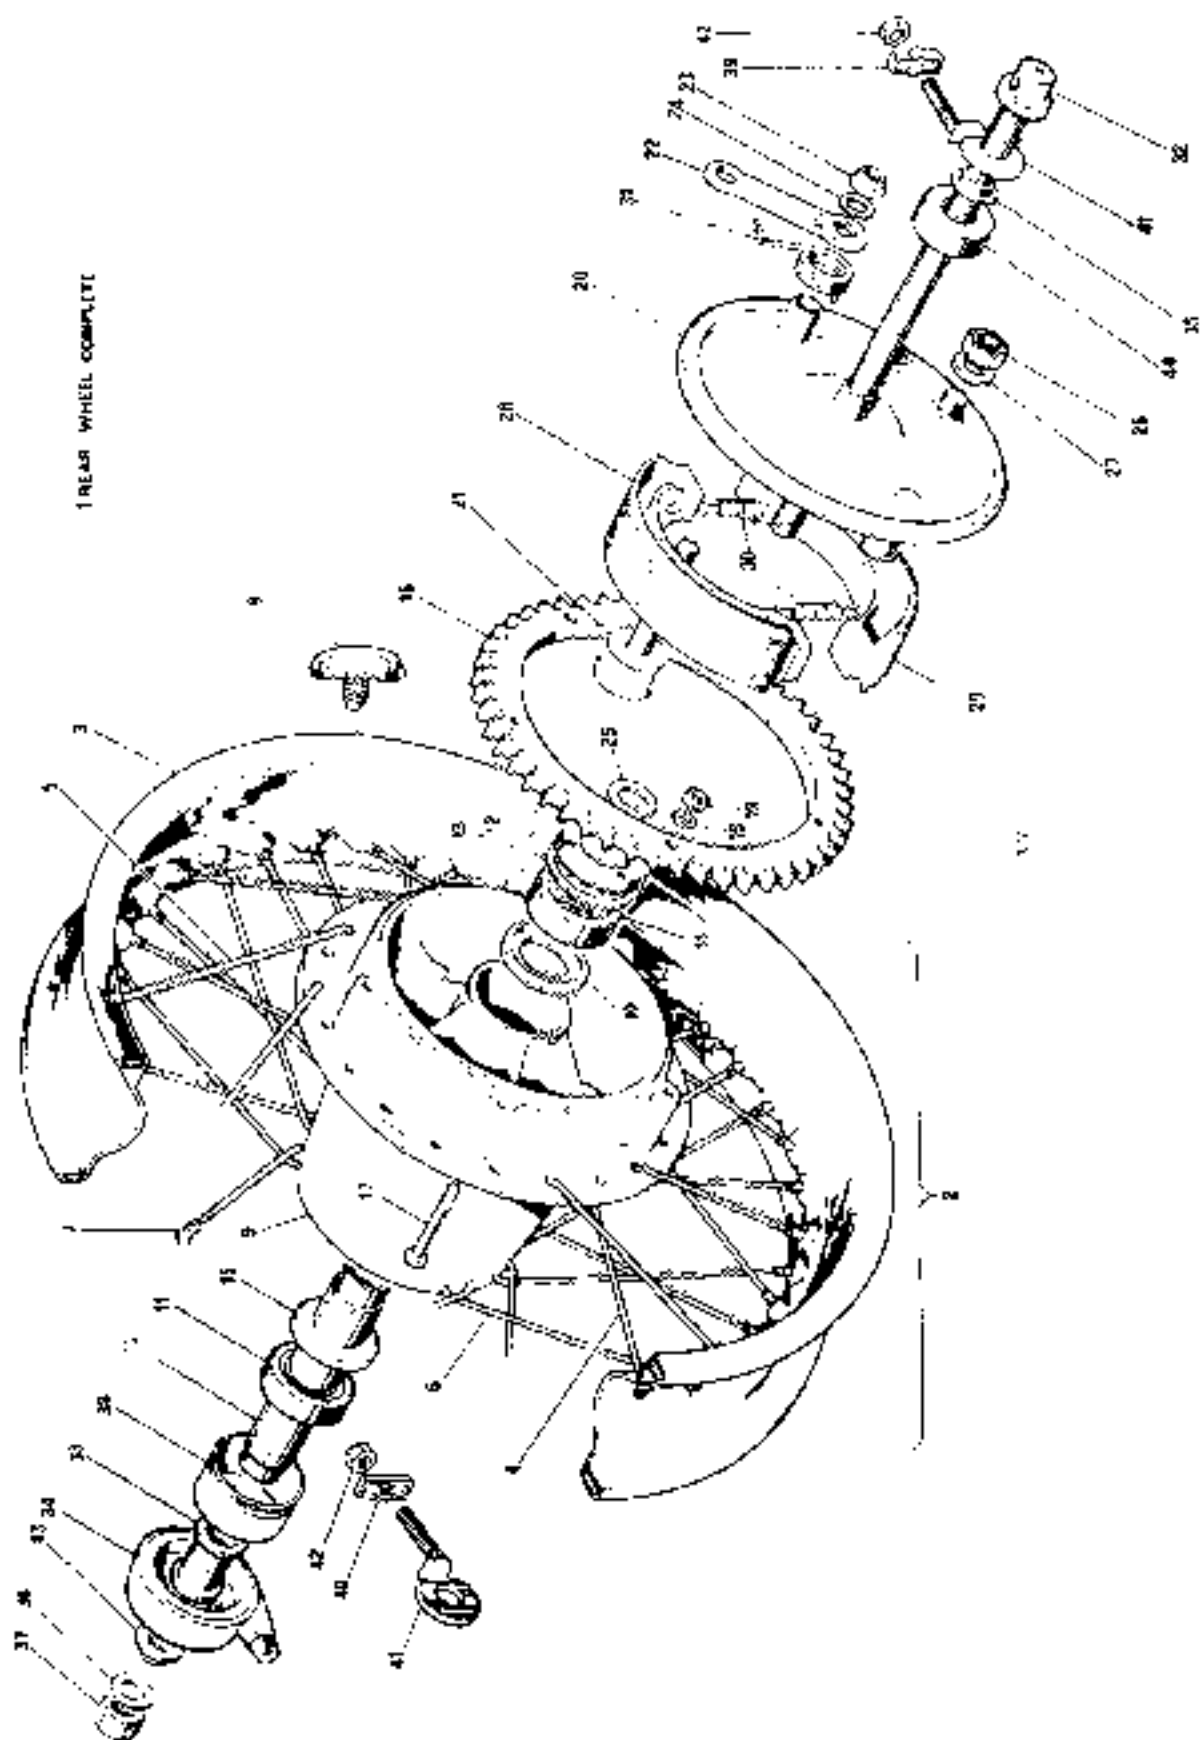


FIG. 22 REAR WHEEL

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

REAR WHEEL

1	37-4250	REAR WHEEL COMPLETE	1	
1	37-4284	REAR WHEEL COMPLETE (not U.S.A.)	1	
2	37-4184	RIM SPOKES AND HUB ASSEMBLY	1	
3	37-3920	Rim (WM3 x 19)	1	
4	37-3921	Spoke (inner—L.H.)	10	
5	37-3922	Spoke (outer—L.H.)	10	
6	37-3821	Spoke—R.H.	20	
7	37-2294	Nipple	40	
8	37-4282	Hub and brake drum	1	
9	37-3468	Tyre security bolt	2	
10	37-3749	Support ring—L.H.	1	
11	37-0653	Bearing	2	
12	37-4181	Locking ring—L.H.	1	
13	37-4180	Spacer—L.H.	1	
14	37-3753	Spacer—bearing	1	
15	37-1654	Grease retainer—R.H.	1	
16	37-3903	Sprocket 53 teeth	1	
16	37-4046	Sprocket—50 teeth	1	Available
17	14-0207	Bolt	5	
18	60-2320	Washer	5	
19	14-1301	Nut	5	
20	37-4112	Brake anchor plate	1	
21	37-4110	Brake cam	1	
22	37-2015	Brake lever	1	
23	14-1303	Nut	1	
24	82-2184	Washer	1	
25	60-2335	Washer, plain—brake side bearing	1	
26	14-1304	Nut	1	
27	60-4251	Washer } torque arm fixing	1	
28	37-3925	Brake shoe complete (leading)	1	
29	37-3926	Brake shoe complete (trailing)	1	
30	37-2328	Return spring (brake shoe)	2	
31	37-1090	Return spring (brake lever)	1	
32	37-3980	Wheel spindle	1	
33	37-3750	Distance piece inner—speedometer gearbox	1	
34	60-3213	Speedometer drive gearbox	1	
35	37-3901	Distance piece outer—L.H.	1	
36	83-2266	Washer	1	
37	14-1307	Nut	1	
38	37-3751	Speedometer drive ring	1	
39	37-1015	Chain adjuster end plate—L.H.	1	
40	37-3961	Chain adjuster end plate—R.H.	1	
41	37-3919	Chain adjuster	2	
42	14-1902	Nut—chain adjuster	2	
43	37-3976	Spacer R.H.—REAR rear wheel spindle	1	
44	37-4119	Wheel spacer—L.H.	1	

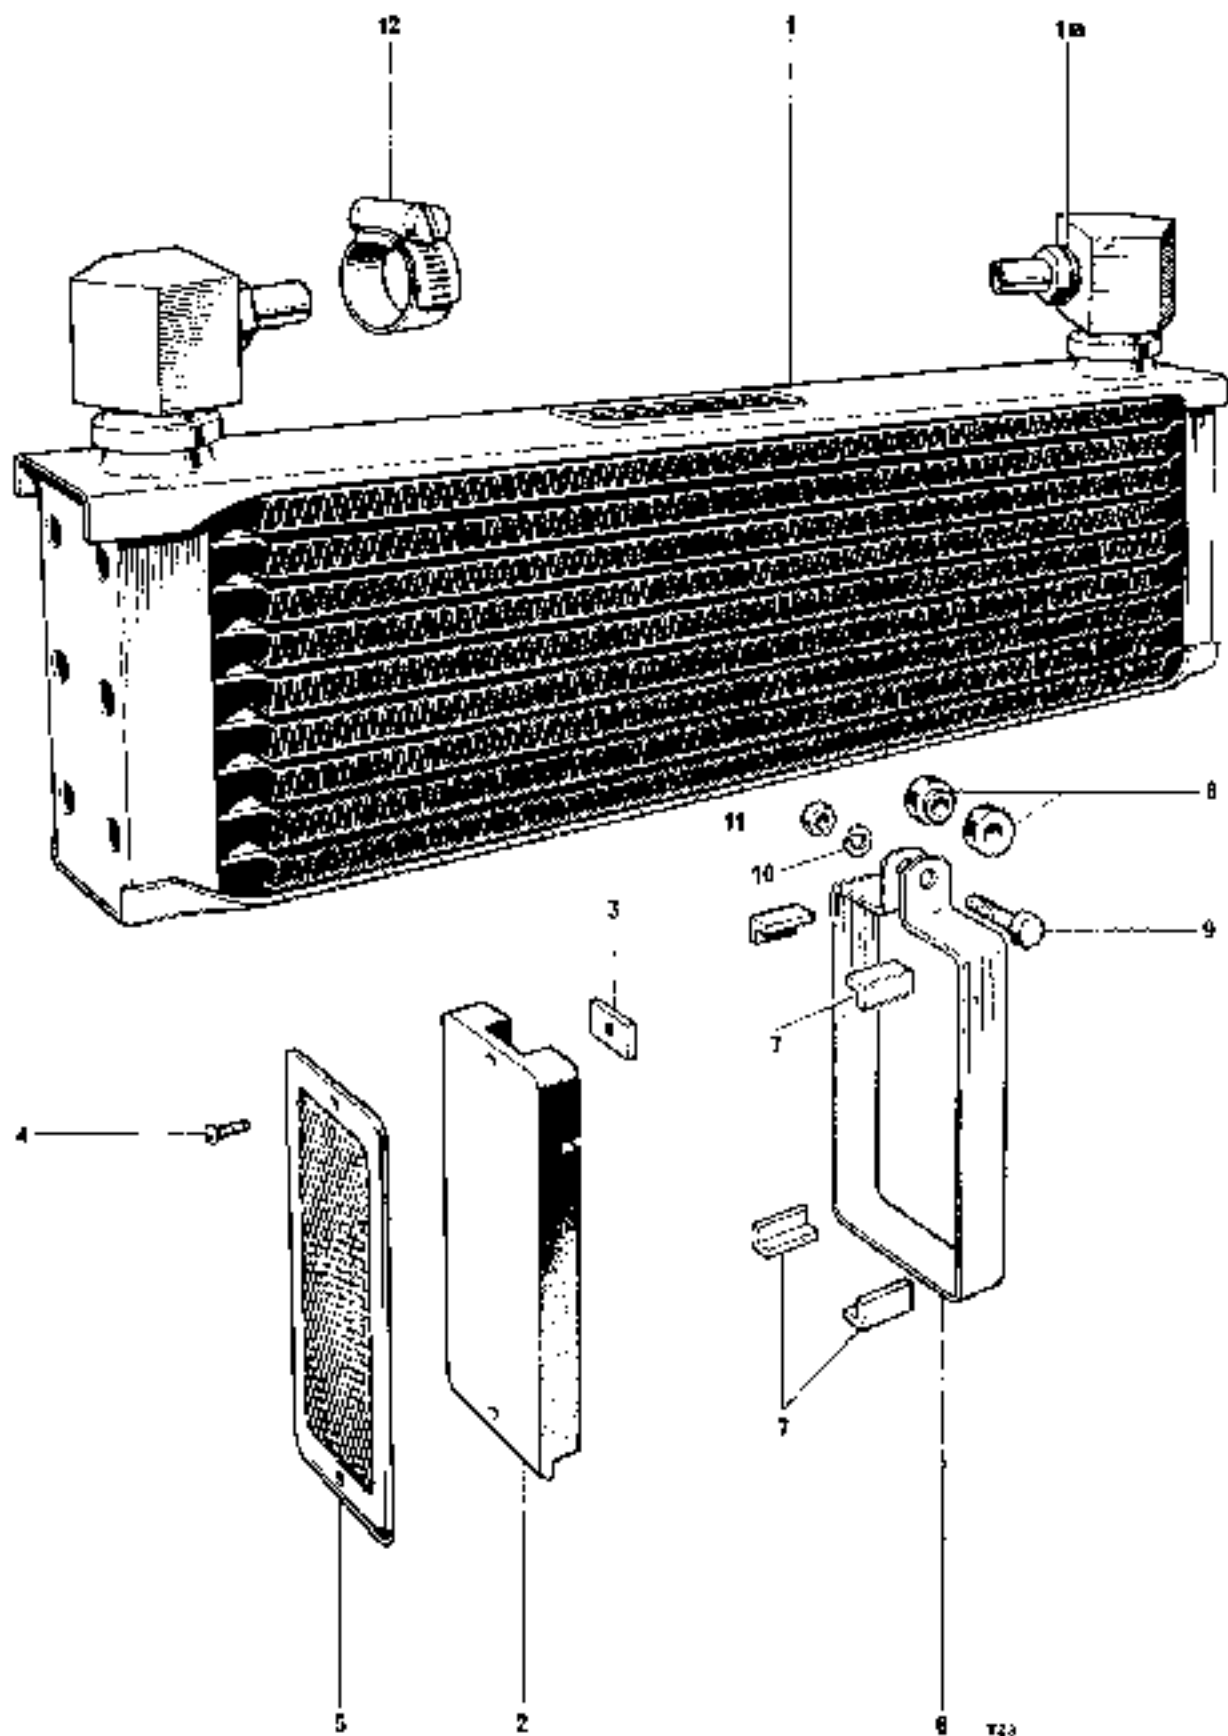


Fig. 21. OIL COOLER

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
OIL COOLER GROUP				
1	82-9315	Oil cooler, including unions	1	
1A	M10441	Washer (Cov. Rad.)		Reference only
2	83-9907	Reflector rubber and plate	2	
3	82-9573	Reflector nut	4	
4	21-1940	Reflector screw	4	
5	57160	Reflector (99-1119)	2	
6	82-9317	Support strap	2	
7	82-9322	Corner packing	8	
8	82-9321	Rubber bush	4	
9	82-9323	Clamp bolt ($\frac{39}{64}$ in. U.H.)	2	
10	70-2351	Spring washer	2	
11	82-4717	Nut	2	
12	60-0702	Clip, hose	2	

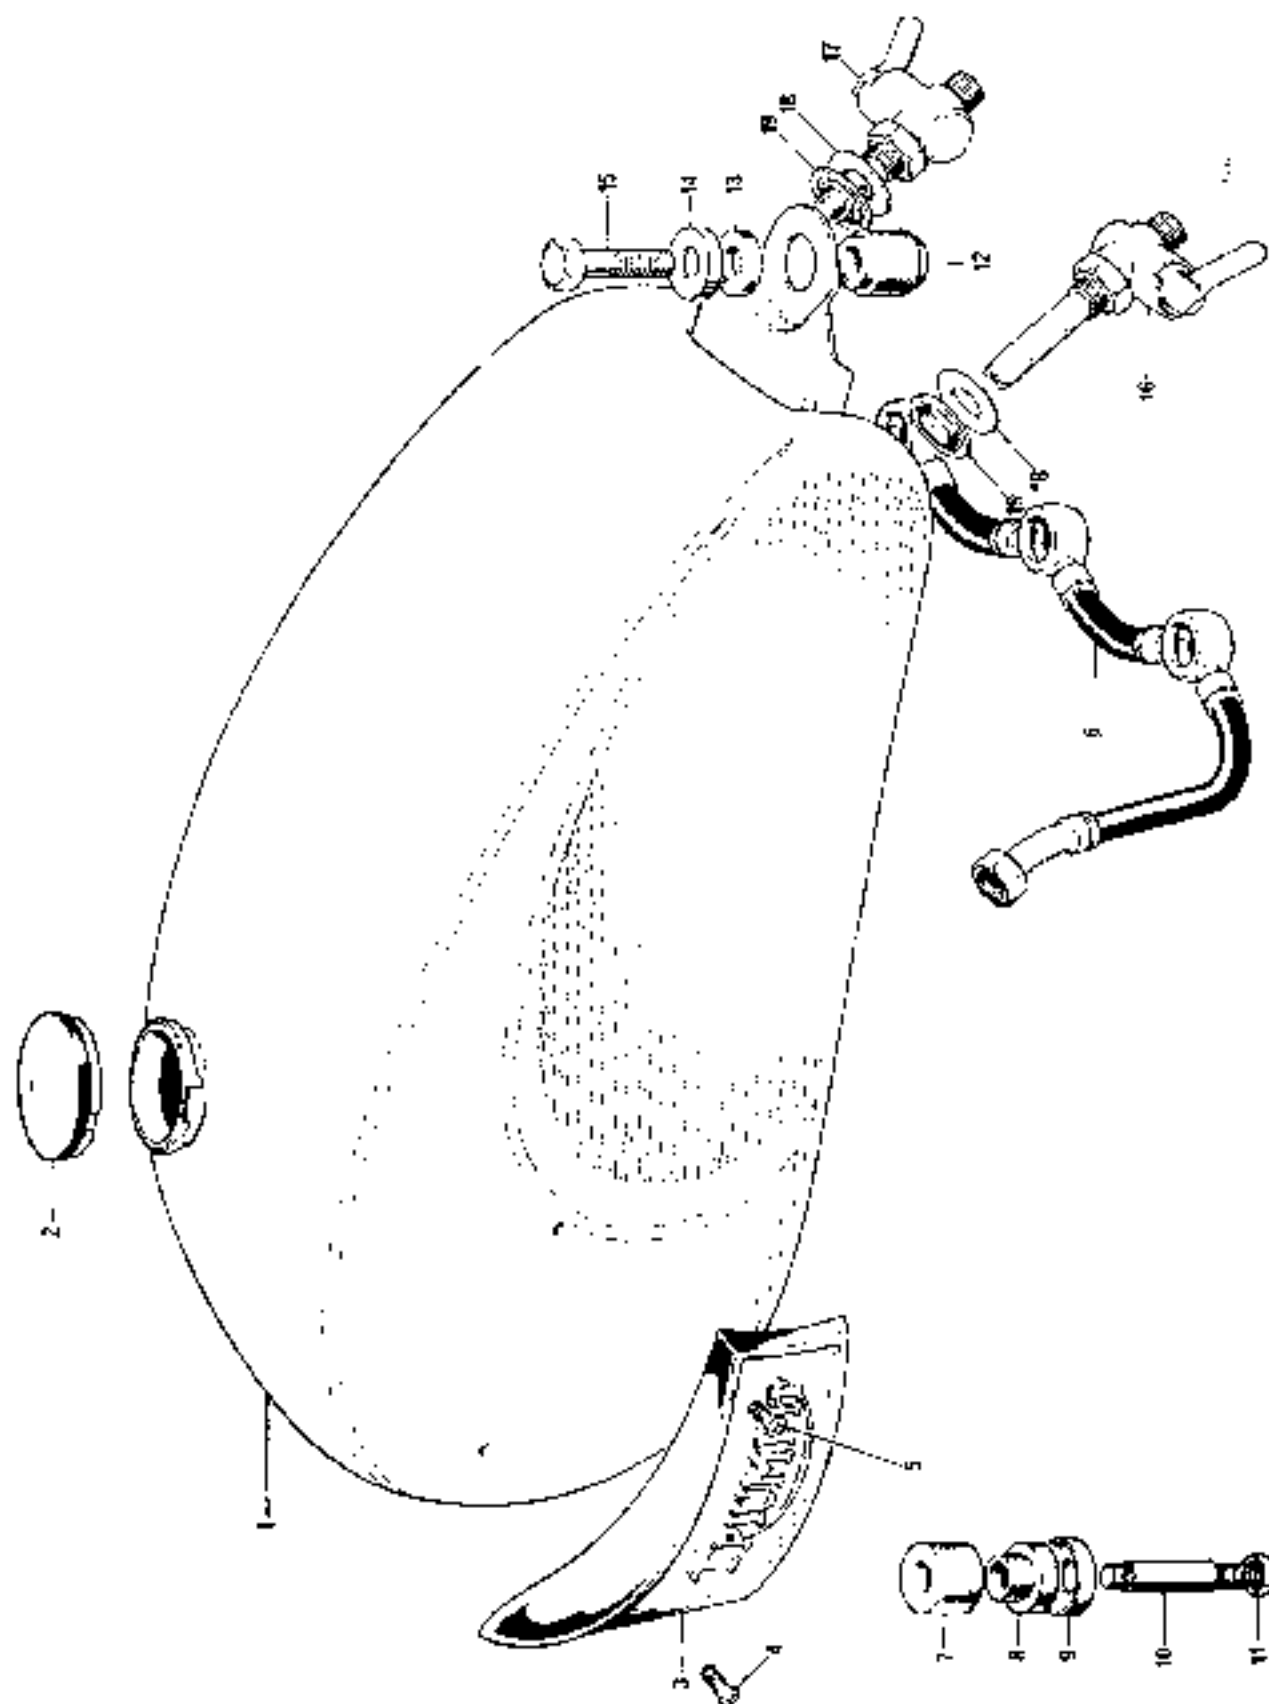


Fig. 24. GAS TANK

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
GAS TANK				
1	83-5416	Gas tank (4 U.S. galls)	1	
2	83-3875	Filler cap ...	1	
3	82-9701	Styling unit—D.S.	1	
3	82-9700	Styling unit—T.S.	1	
4	83-1339	Screw—front	Styling unit to tank	2
5	82-7888	Screw—rear		
6	83-3154	Gas pipe ..	1	
7	82-5228	Top rubber	2	
8	82-9543	Spigoted rubber	2	
9	82-3814	Bottom cup	2	
10	21-2019	Stud	2	
11	14 1302	Nut	2	
12	82-5336	Mounting rubber	1	
13	82-0967	Rubber washer	1	
14	82-3814	Cup	1	
15	82-7388	Bolt	1	
16	83-2801	Gas tap—reserve	1	
17	83-2500	Gas tap	1	
18	83-0602	Washer	2	
19	70-7351	Tap seal ..	2	

ALTERNATIVE FITMENTS (NOT USA)

83-4438	Mounting bracket petrol tank	1	
83-5415	Petrol tank—(4 Imp. Galls.)	1	
82-9360	Styling unit L.H.	1	
82-9361	Styling unit—R.H.	1	
92-9381	Spring clip	Styling unit attachment	2
21-1804	Screw		
82-4715	Screw		4
83-1673	Centre band	1	
82-4129	Screw, centre band	2	
82-9372	Knee grip—L.H.	1	
83-9373	Knee grip—R.H.	1	
82-0967	Rubber washer (rear)	1	
82-0967	Rubber washer (front, cap)	2	

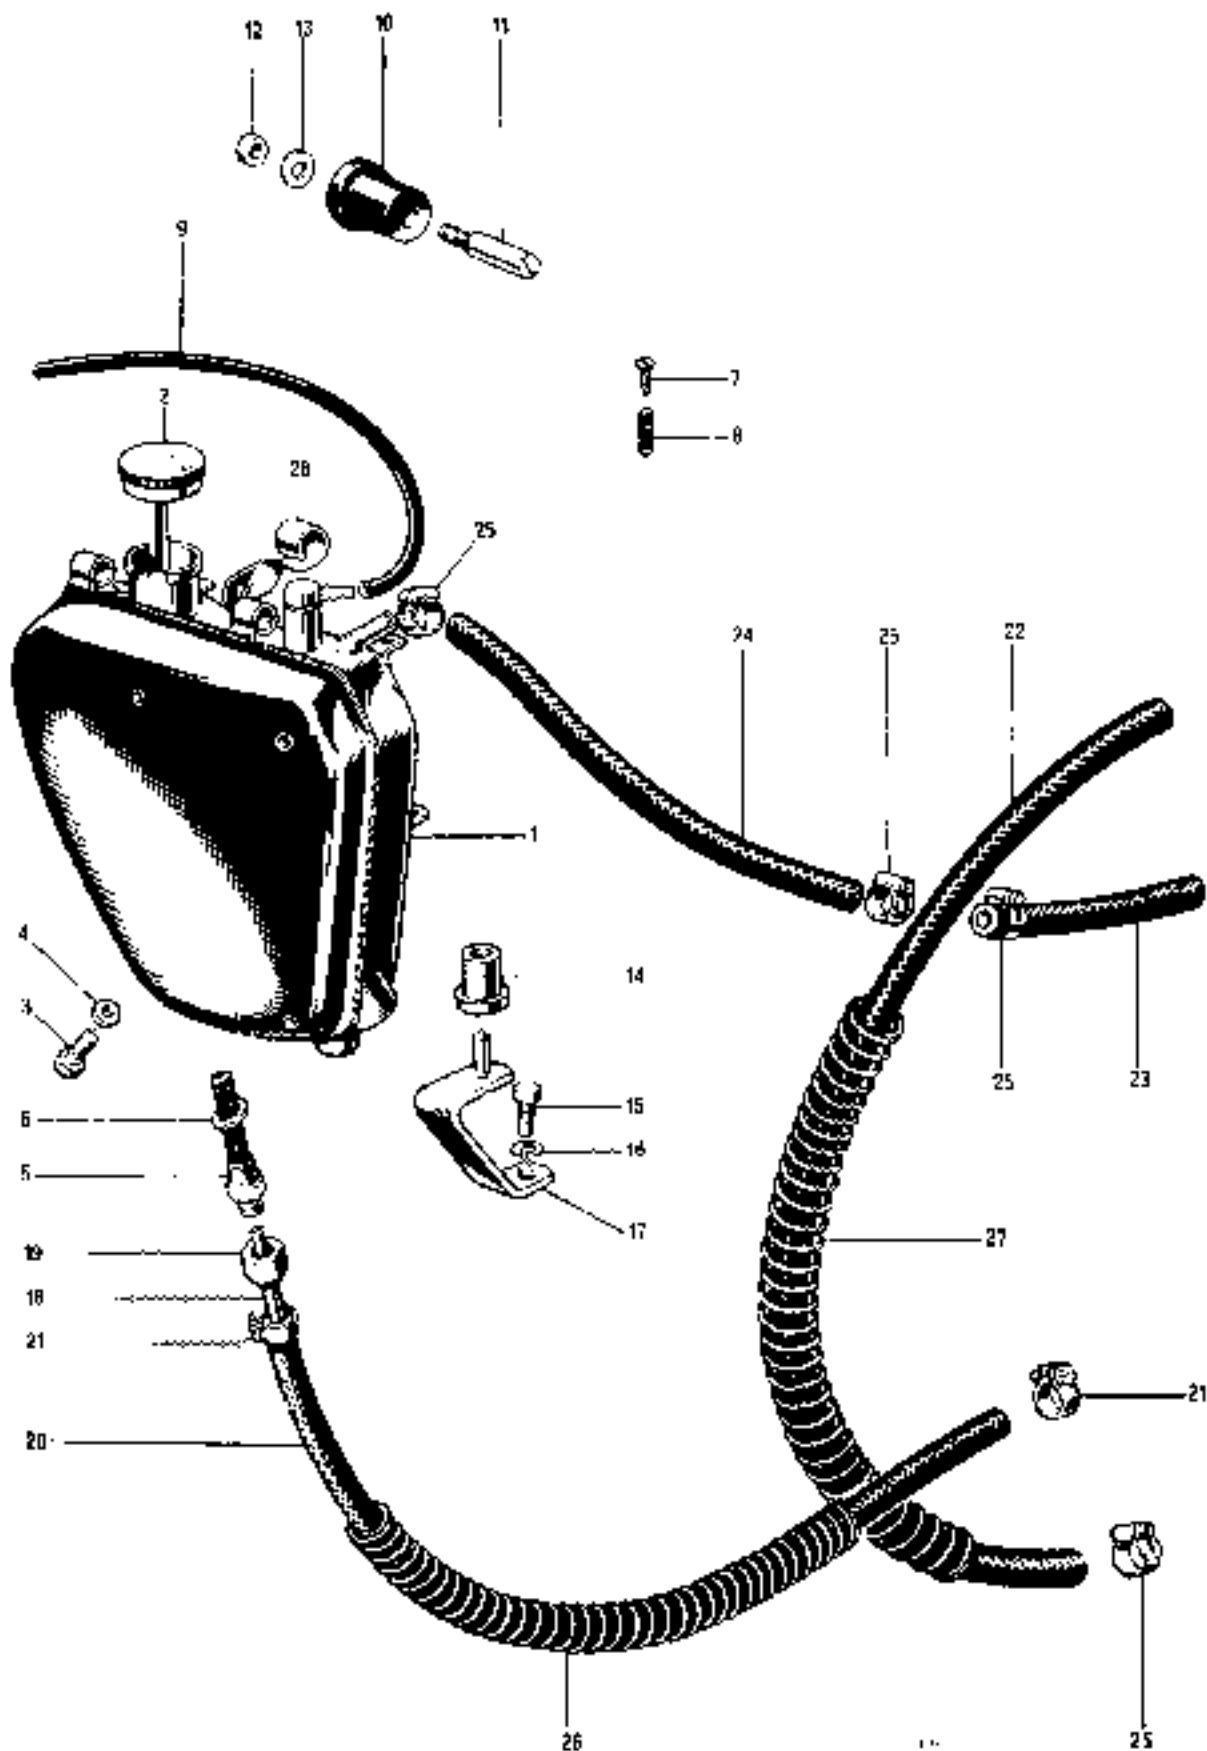


Fig. 25. OIL TANK

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
OIL TANK				
1	83-1761	Oil tank	1	
Not illus.	60-1816	Decal (Transfer)	1	
2	82-9659	Filler cap	1	
3	82-5343	Drain plug	1	
4	60-4262	Fibre washer	1	
5	82-9430	Filter	1	
6	82-1713	Fibre washer	1	
7	82-9435	Metering screw	1	
8	82-6874	Metering screw spring	1	
9	82-9664	Extension pipe, froth tower	1	
10	82-6471	Spigotted rubber	2	
11	82-7510	Peg, tank to frame	2	
12	14-1301	Nut, tank to frame	2	
13	60-4248	Washer, tank to frame	2	
14	82-6039	Bottom grommet	1	
15	21-1822	Bottom bolt	1	
16	60-2418	Spring washer	1	
17	82-9588	Bottom bracket	1	
18	83-5129	Oil feed pipe top half	1	
19	82-3182	Union nut	1	
20	70-8904	Oil pipe flex tank, to engine	1	
21	70-6848	Oil pipe clip	2	
22	70-8905	Oil pipe engine to oil cooler	1	
23	71-1742	Rocker to oil cooler flexible pipe	1	
24	71-1743	Cooler to oil tank flexible pipe	1	
25	60-0792	Clip oil return pipe	4	
26	82-9530	Feed pipe protection spring	1	
27	82-9531	Scavenge pipe spring	1	
Not illus.	82-9918	Clip, oil pipes to frame	2	
28	83-1549	Clip for choke cable	1	

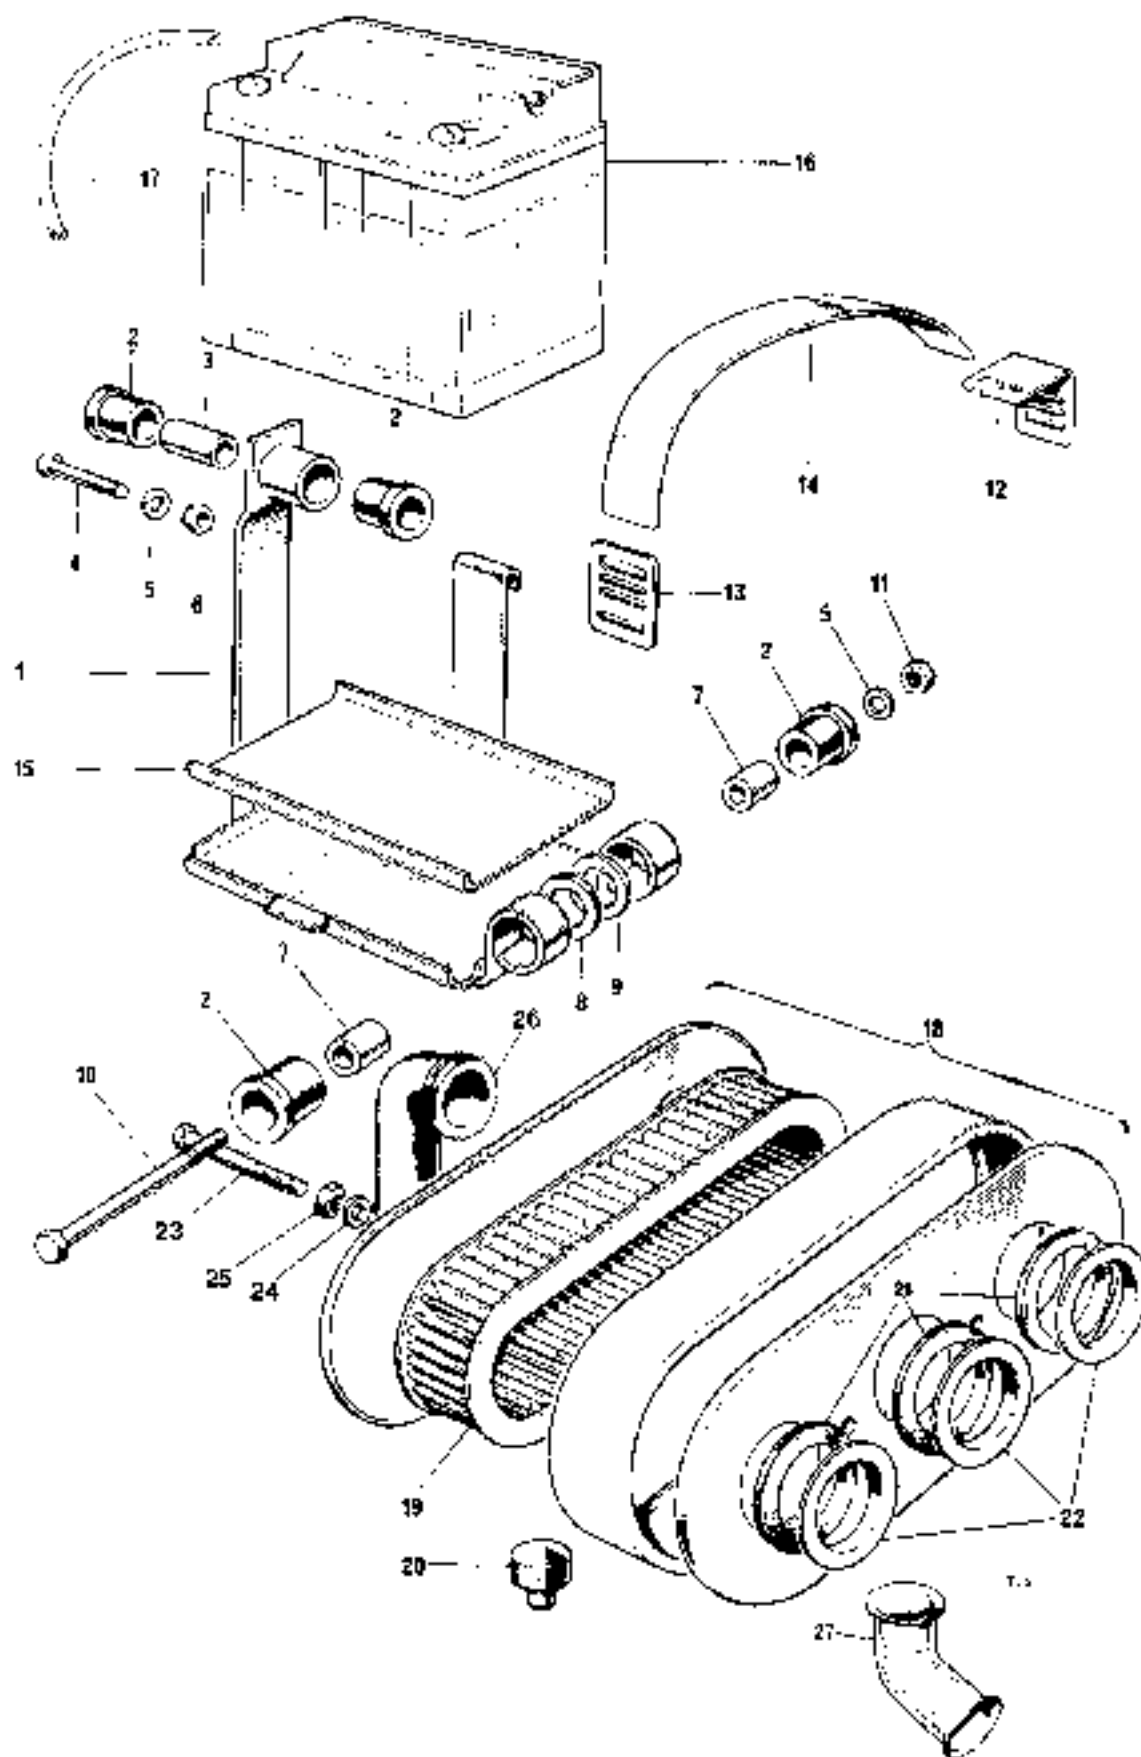


Fig. 26. BATTERY CARRIER AND AIR FILTER

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

BATTERY CARRIER AND AIR FILTER

1	82-9343	Battery carrier	1	
2	82-9351	Spigotted rubber bush .	4	
3	82-9349	Top distance tube .. .	1	
4	14-0222	Top bolt	1	
5	60-4247	Washer	2	
6	14-1302	Nut	1	
7	82-9350	Bottom distance tube ...	2	
8	82-9352	Rubber washer .. .	2	
9	82-4299	Washer .	2	
10	14-0228	Bolt .	1	
11	14-1302	Nut ..	1	
12	82-9354	Strap buckle top. .	1	
13	82-9355	Strap buckle bottom ..	1	
14	82-9353	Retaining strap	1	
15	82-8091	Rubber battery tray .	1	
Not illus.	50-0052	Transfer, positive earth. .	1	
16	54029795	Battery PUZSA (99-0719)	1	
17	82-7431	Battery vent pipe .	1	
18	60-4421	AIR CLEANER C/W ELEMENT	1	
19	60-4528	Element .. .	1	
20	82-4838	Buffer	1	
21	82-9562	Grommet	3	
22	70-9586	Sieve .	3	
23	14-0213	Bolt	2	
24	60-2347	Washer .. .	2	
25	14-G401	Locknut .	2	
26	82-9563	Connector hose (breather)	1	
27	33-5504	Air intake .	2	

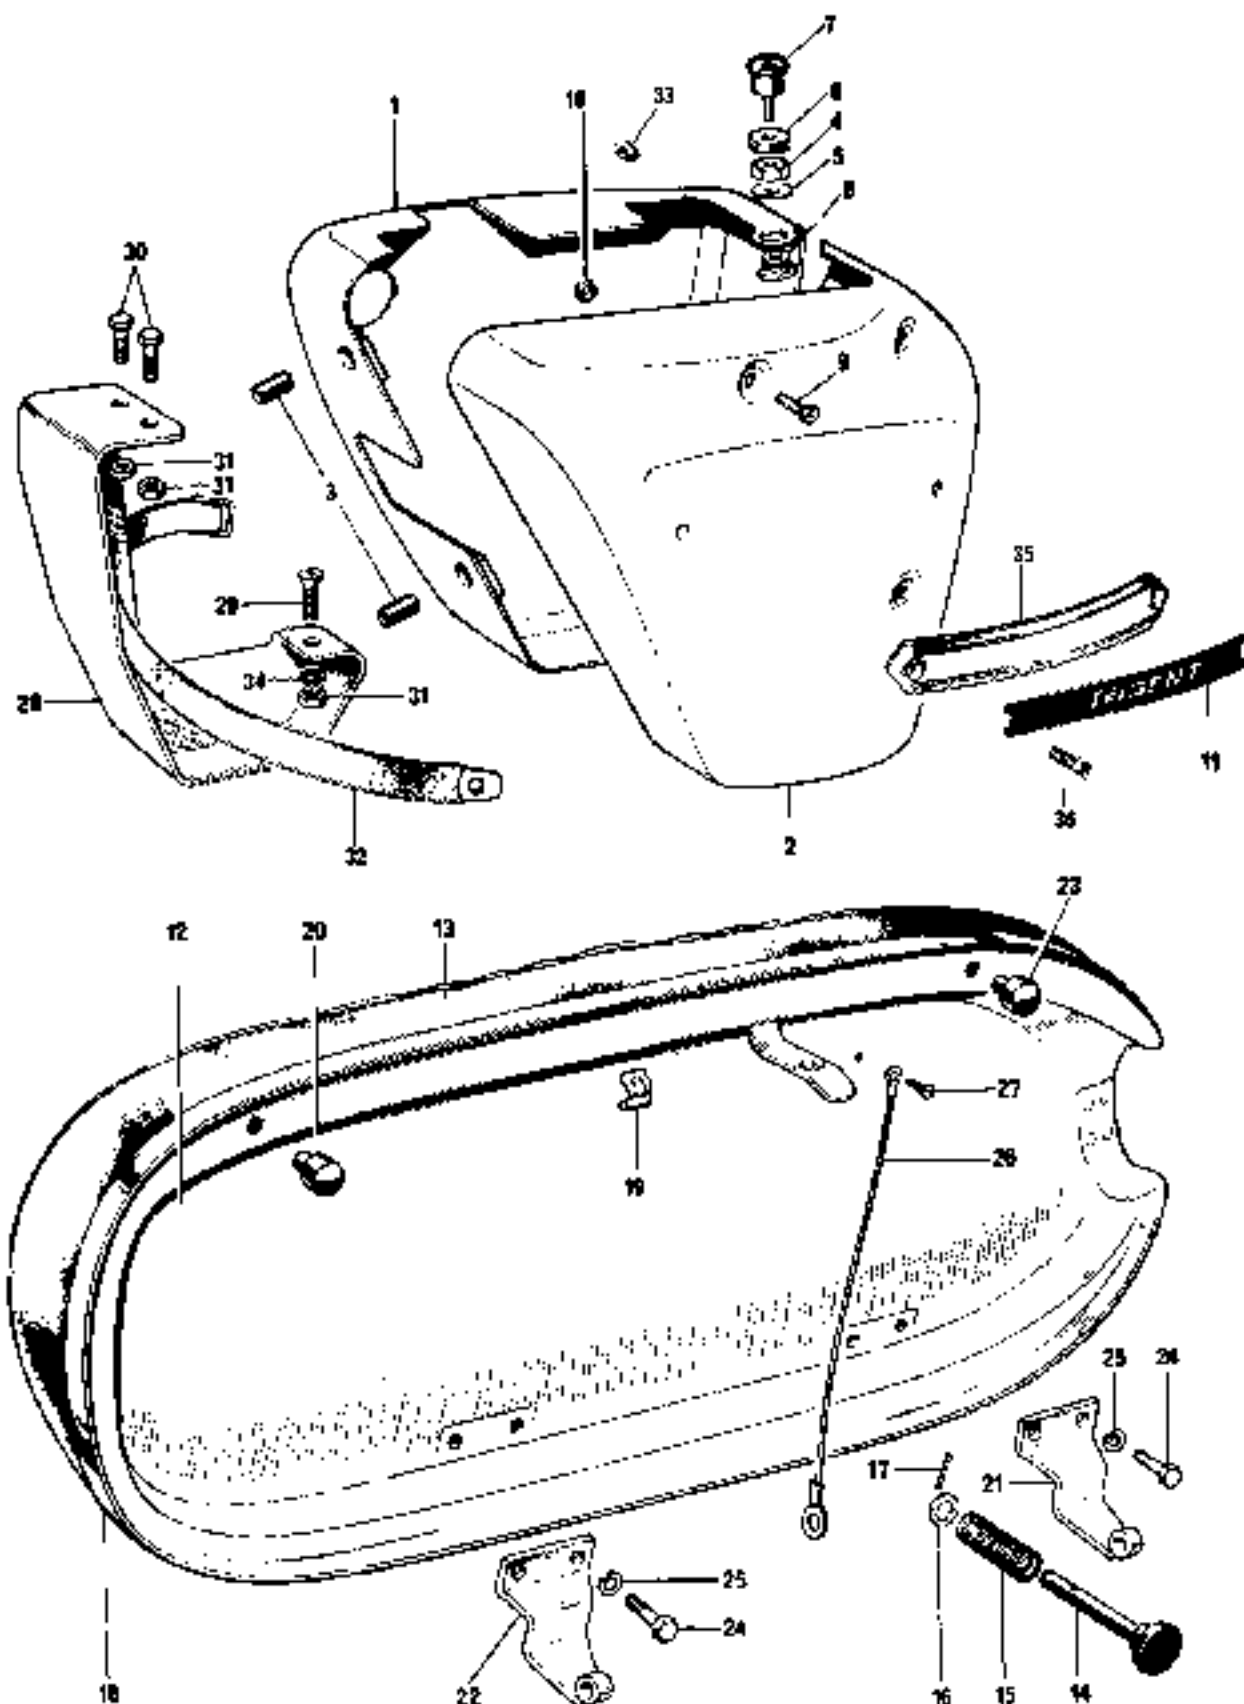


Fig. 27. PANELS AND TWINSEAT

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

PANELS AND TWINSEAT

1	83-4856	D.S. Panel	...	...	...	...	...	...	...	1	
2	83-4857	T.S. Panel	...	...	...	...	...	...	...	1	
3	82-6673	Grommet	...	...	...	...	...	...	...	2	
4	21-1833	Lock nut	...	...	...	...	...	...	...	1	
5	60-4267	Washer	...	...	...	...	...	...	...	1	
6	82-6968	Rubber spacer	...	...	...	...	...	...	...	1	
7	82-9445	Release knob	...	...	...	...	...	...	...	1	
8	82-9590	Boss	...	...	...	...	...	...	...	1	
9	14-2205	Screw T.S. panel to oil tank	...	...	...	...	...	...	...	4	
10	82-9442	Grommet	...	...	...	...	...	...	...	3	
11	60-4391	Decal, 'Trident'	...	...	...	...	...	...	...	2	
12	83-2039	TWINSEAT	...	...	...	...	...	...	...	1	
13	83-2239	Twinscat cover	...	...	...	...	...	...	...	1	
14	82-7560	Knob	...	...	...	...	...	...	...	1	
15	82-4228	Spring	...	...	...	...	...	...	...	1	
16	70-1719	Washer	...	...	...	...	...	...	...	1	
17	60-2720	Split pin ($\frac{3}{32}$ in $\times$ $\frac{1}{2}$ in.)	...	...	...	...	...	...	...		Reference only 1
18	60-0696	Trim strip	...	...	...	...	...	...	...	1	
19	60-0697	Sprag	...	...	...	...	...	...	...	1	
20	82-4898	Buffer	...	...	...	...	...	...	...	2	
21	82-8626	Front hinge	...	...	...	...	...	...	...	1	
22	82-7862	Rear hinge	...	...	...	...	...	...	...	1	
23	82-4898	Buffer	...	...	...	...	...	...	...	2	
24	14-010*	Bolt, hinge	...	...	...	...	...	...	...	4	
25	60-4250	Spring washer	...	...	...	...	...	...	...	4	
26	60-2687	Check wire	...	...	...	...	...	...	...	1	
27	60-2381	Self tapping screw	...	...	...	...	...	...	...	1	
28	83-2035	Toolbox	...	...	...	...	...	...	...	1	
29	14-0503	Screw, tool box to battery carrier	...	...	...	...	...	...	...	1	
30	14-0102	Bolt	...	...	...	...	...	...	...	2	
31	14-1301	Nut	...	...	...	...	...	...	...	3	
32	82-9749	Toolrol strap	...	...	...	...	...	...	...	1	
33	60-3659	Cable, clutch cable	...	...	...	...	...	...	...	1	
34	82-4299	Washer	...	...	...	...	...	...	...	3	
35	60-4151	Nameplate	...	...	...	...	...	...	...	2	
36	82-4129	Screw	...	...	...	...	...	...	...	4	
Not illus,	82-4717	Nut	Nameplate attachment							4	
Not illus,	60-239*	Washer								4	

ALTERNATIVE FITMENTS (NOT USA)

82-9996	Twin-seat	} For use with large Petrol tank	...	...	...	1
82-9715	Twin-Seat cover		...	...	...	1

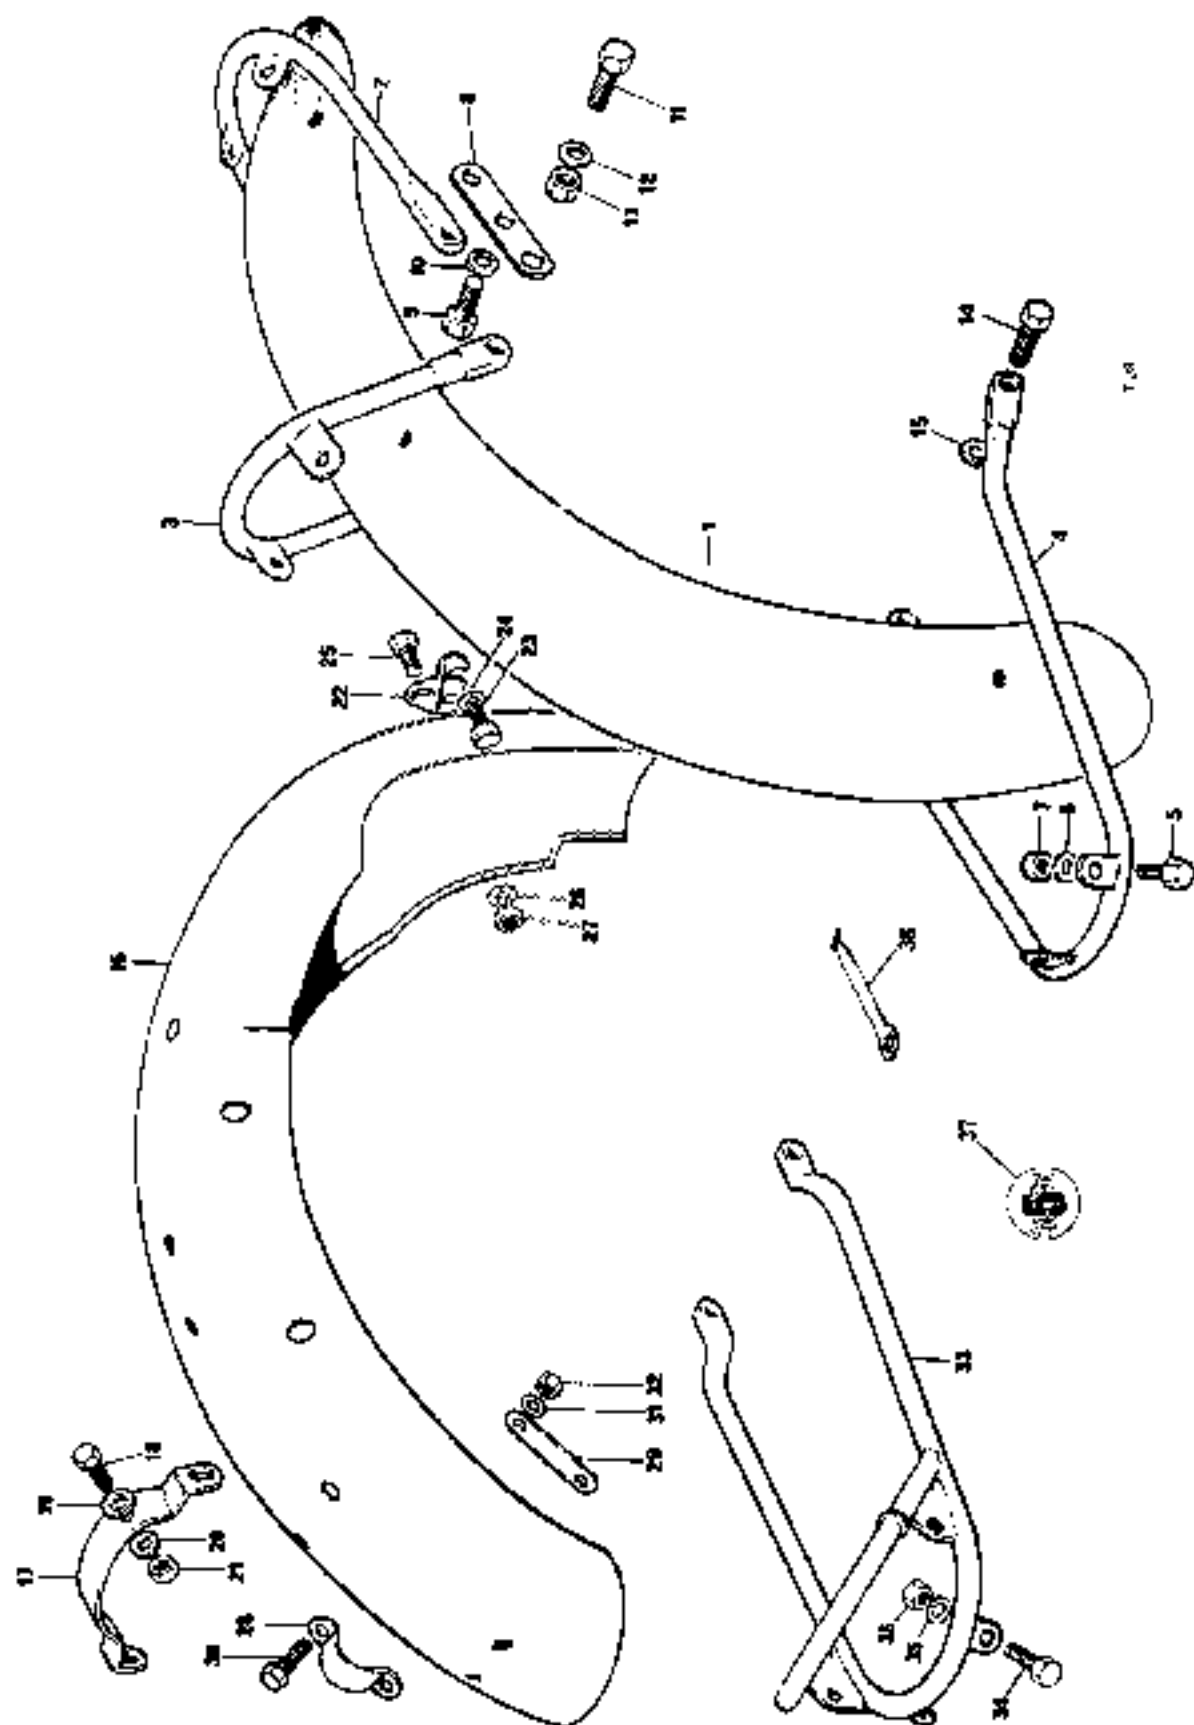


FIG. 28. FENDERS AND STAYS

Ref No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
---------	----------	-------------	----------	---------

FENDERS AND STAYS

1	97-4439	Front fender	1	
2	97-4533	Front stay	1	
3	97-4534	Centre stay	1	
4	97-4535	Bottom stay	1	
5	14-0101	Bolt	6	
6	60-4245	Washer	6	Stays to fender
7	14-1201	Nut	6	
8	83-5151	Bracket	1	
9	14-0103	Bolt	2	Bracket to fork leg
10	60-2427	Washer	2	
11	14-0116	Bolt	2	Front and centre stays to bracket
12	60-2330	Washer	2	
13	14-1302	Nut	2	
14	14-6114	Bolt	2	Bottom stay to fork leg
15	60-2428	Washer	2	
16	83-4822	Rear fender	1	
17	82-6915	Bridge	1	
18	14-0102	Bolt	2	Bridge to fender
19	82-6310	Washer	2	
20	60-4245	Washer	1	
21	14-1201	Nut	2	
22	82-6851	Front bracket	1	
23	21-1822	Bolt	2	Bracket to pivot lug
24	60-2418	Washer	2	
25	14-0101	Bolt	1	Bracket to fender
26	82-6310	Washer	1	
27	14-1201	Nut	1	
28	82-5994	Clip	1	
29	82-6031	Backing plate	1	
30	21-1822	Bolt	2	
31	60-4247	Washer	2	Clip to fender
32	14-1302	Nut	2	
33	83-5147	Lifting handle	1	
34	14-0102	Bolt	2	Lifting handle to fender
35	60-4245	Washer	2	
36	14-1301	Nut	2	
37	60-3748	Decal '5 Speed'	1	
38	60-0777	Cable clip	1	
Not illus. 83-5167		Rear Fender, long. (Germany, Sweden, Finland, Switzerland, Denmark)	1	

ALTERNATIVE FITMENTS (NOT U.S.A.)

97-4440	Front fender	1	
83-4823	Front number plate	1	
57-1076	Screw	2	Number plate attachment
71-2448	'O' ring	2	
60-4249	Washer	2	
83-2726	Rear number plate	1	
14-0101	Screw	4	Rear number plate attachment
60-2329	Washer	4	
14-0301	Nut	4	

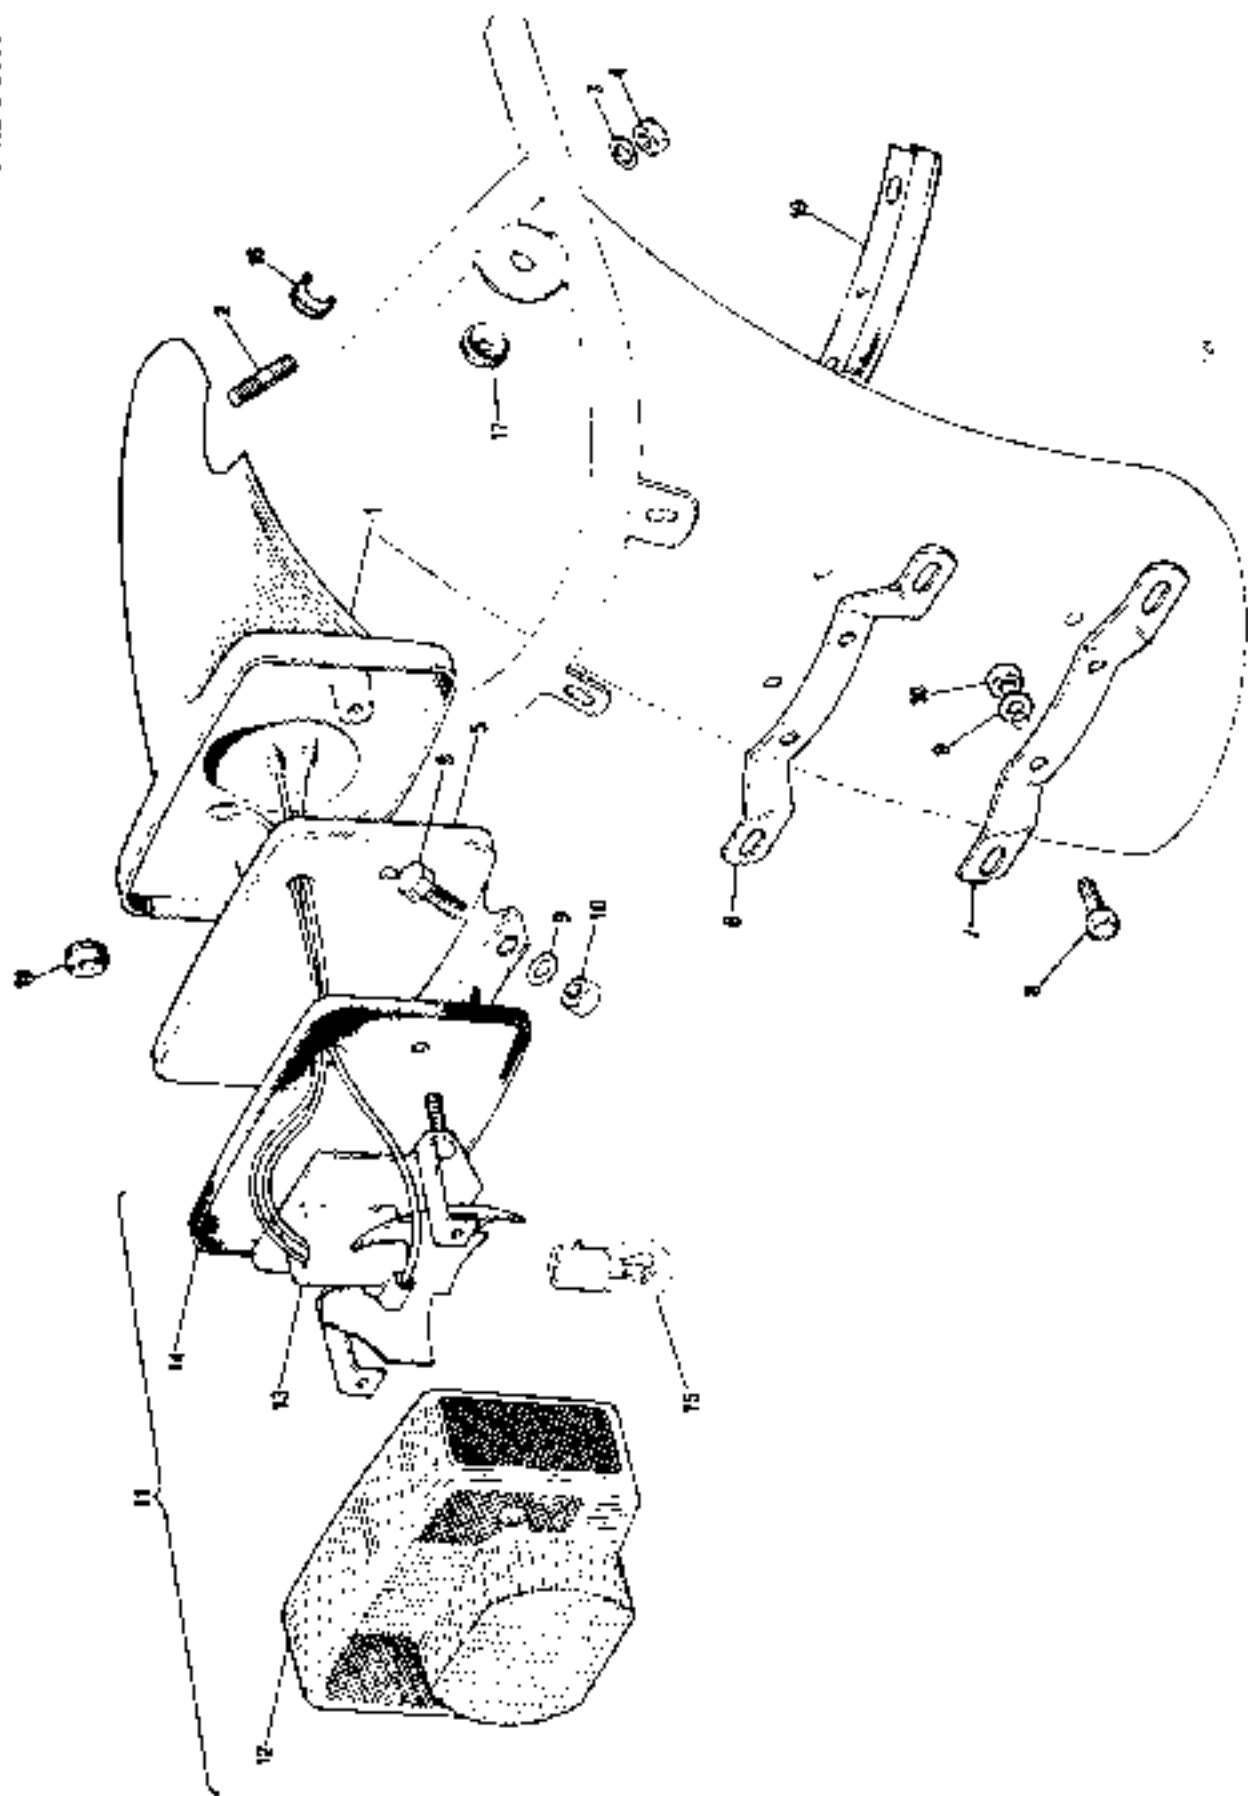


Fig. 29. TAIL LAMP AND SUPPORT

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

TAIL LAMP AND SUPPORT

1	83-4774	Tail lamp support	1	
2	21-2225	Stud	1	
3	60-4250	Washer	1	
4	14-0301	Nut	1	
5	83-5001	Support plate	1	
6	83-4784	Rear number plate bracket—top	1	
7	82-6850	Rear number plate bracket—bottom	1	
8	14-0102	Bolt	4	
9	60-2329	Washer	4	
10	14-1301	Nut	4	
11	56513	STOP-TAIL LAMP—L917 (99-1252)	1	
12	545B4930	Lens (complete with screws) (99-1257)	1	
13	545B4931	Base assembly		Reference only
14	545B3914	Gasket		Reference only
15	380	Bulb (99-0542)	1	
16	83-5105	Grommet Tail Lamp Support	2	
17	60-4103	Grommet—Flasher wire	1	
18	97-0961	Grommet—Tail Lamp Wires	4	
19	83-4806	Cable protection strip—Rear Lamp	1	

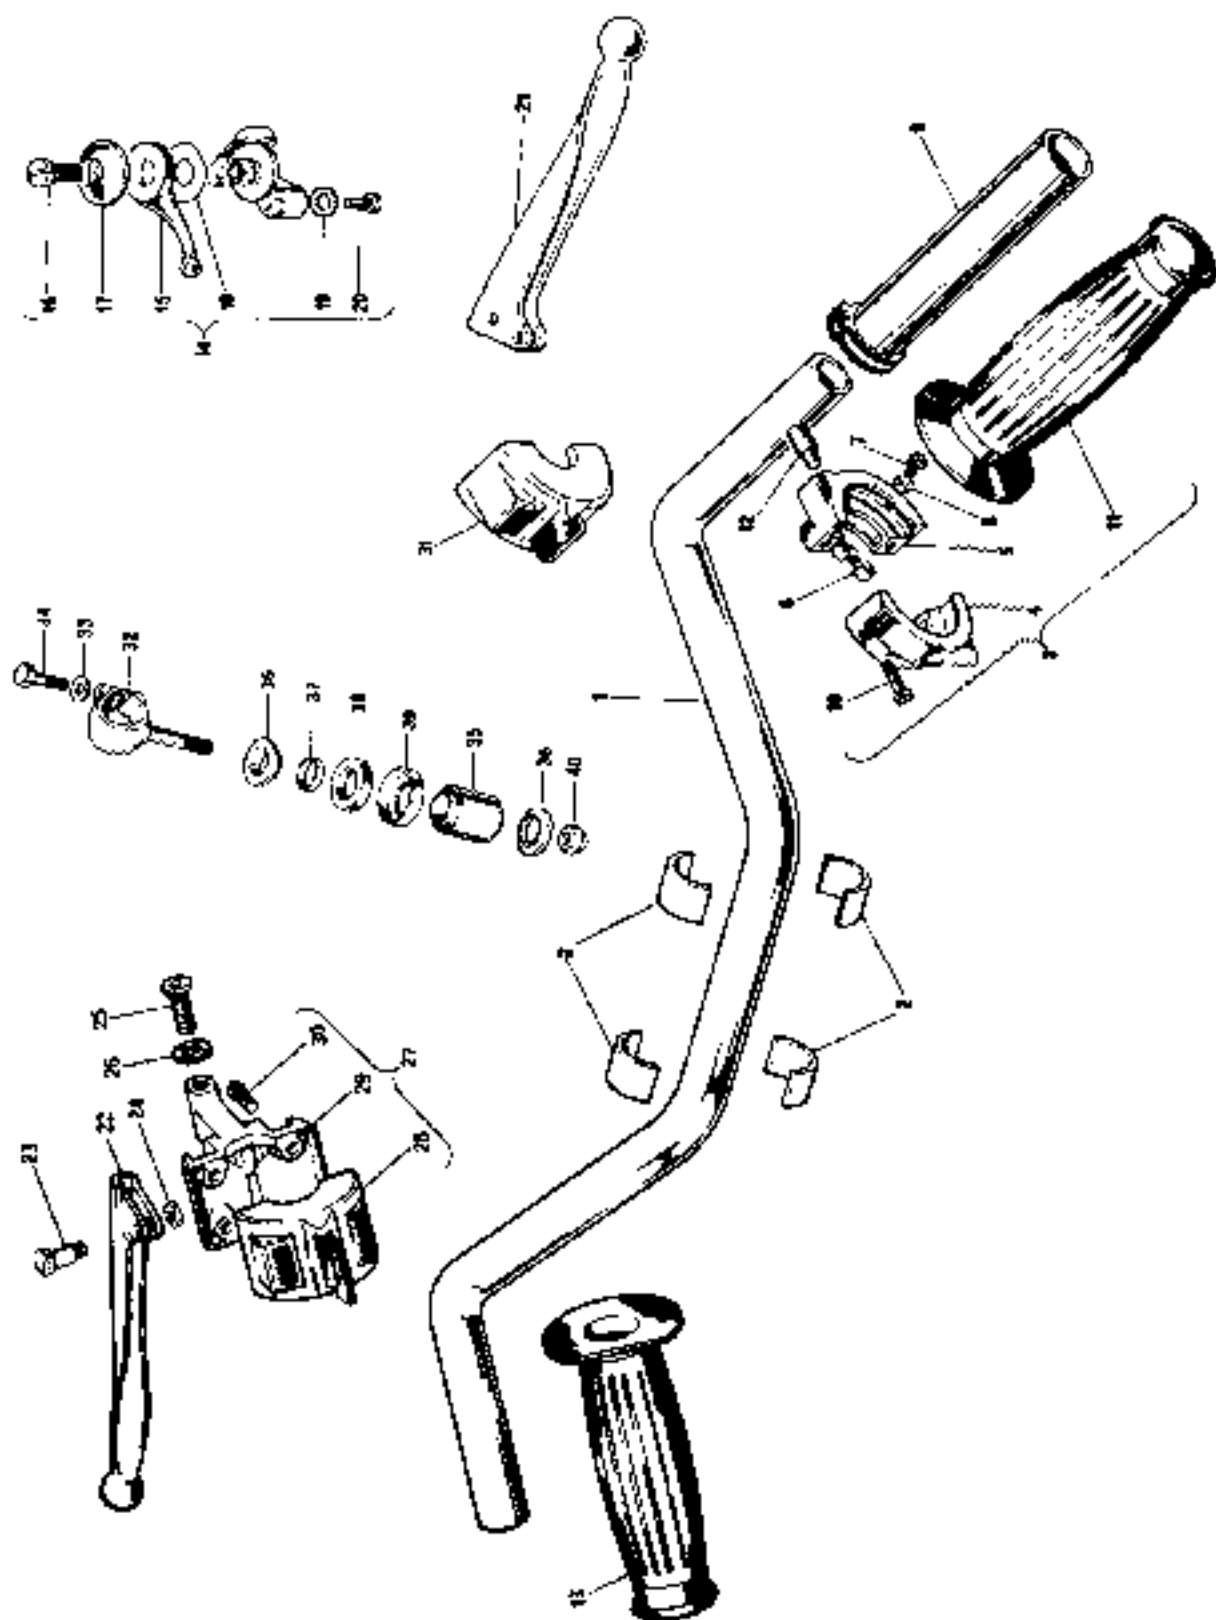


Fig. 30. HANDLEBAR AND CONTROL LEVERS

HANDLEBAR AND CONTROL LEVERS

1	97-4563	Handlebar (high)	1	
1	97-4300	Handlebar (low)	Alternative	
2	97-1425	Packing piece	4	
3	364-11	TWISTGRIP (99-1102)	1	
4	364-013	Body, top half	Reference only	
5	364-014	BODY, BOTTOM HALF	Reference only	
6	16-008	Friction spring	Reference only	
7	16-009	Screw	Reference only	
8	16-010	Locknut	Reference only	
9	364-017	Rotor	Reference only	
10	11-013	Screw (99-0225)	2	
11	97-2125	Grip	1	
12	16-011	Cable stop	Reference only	
13	97-2412	Grip—L.H.	1	
14	60-3367	AIR CONTROL LEVER	1	
15	12-536	Lever	Reference only	
16	12-607	Bolt	Reference only	
17	12-606	Cap	Reference only	
18	12-033	Spring washer	Reference only	
19	60-4756	Shakeproof washer	2	
20	60-3896	Screw	2	
21	*97-4391	Front brake lever	Reference only	
22	60-3981	Clutch lever	1	
23	21-2048	Pivot pin	2	
24	14-1201	Nut	2	
25	60-3585	Adjuster	2	
26	60-3586	Lockring	2	
27	30597	HANDLEBAR SWITCH—L.H. (19-1370)	1	
28	39951	Switch half (19-1371)	1	
29	54343791	Lever half (19-1372)	1	
30	54115246	Screw (99-1108)	4	
31	39949	Handlebar switch half—R.H. (19-1373)	1	
32	97-2291	Handlebar eyebolt	2	
33	82-1335	Washer	2	
34	21-0589	Bolt	2	
35	97-1527	Metastatic bush	2	
36	97-1529	Hemispner cal washer	4	
37	97-1581	Distance piece	2	
38	97-1580	Rubber washer	2	
39	97-2221	Cup	2	
40	14-1303	Nut	2	

*Front brake and master cylinder detail: are shown on page 49.

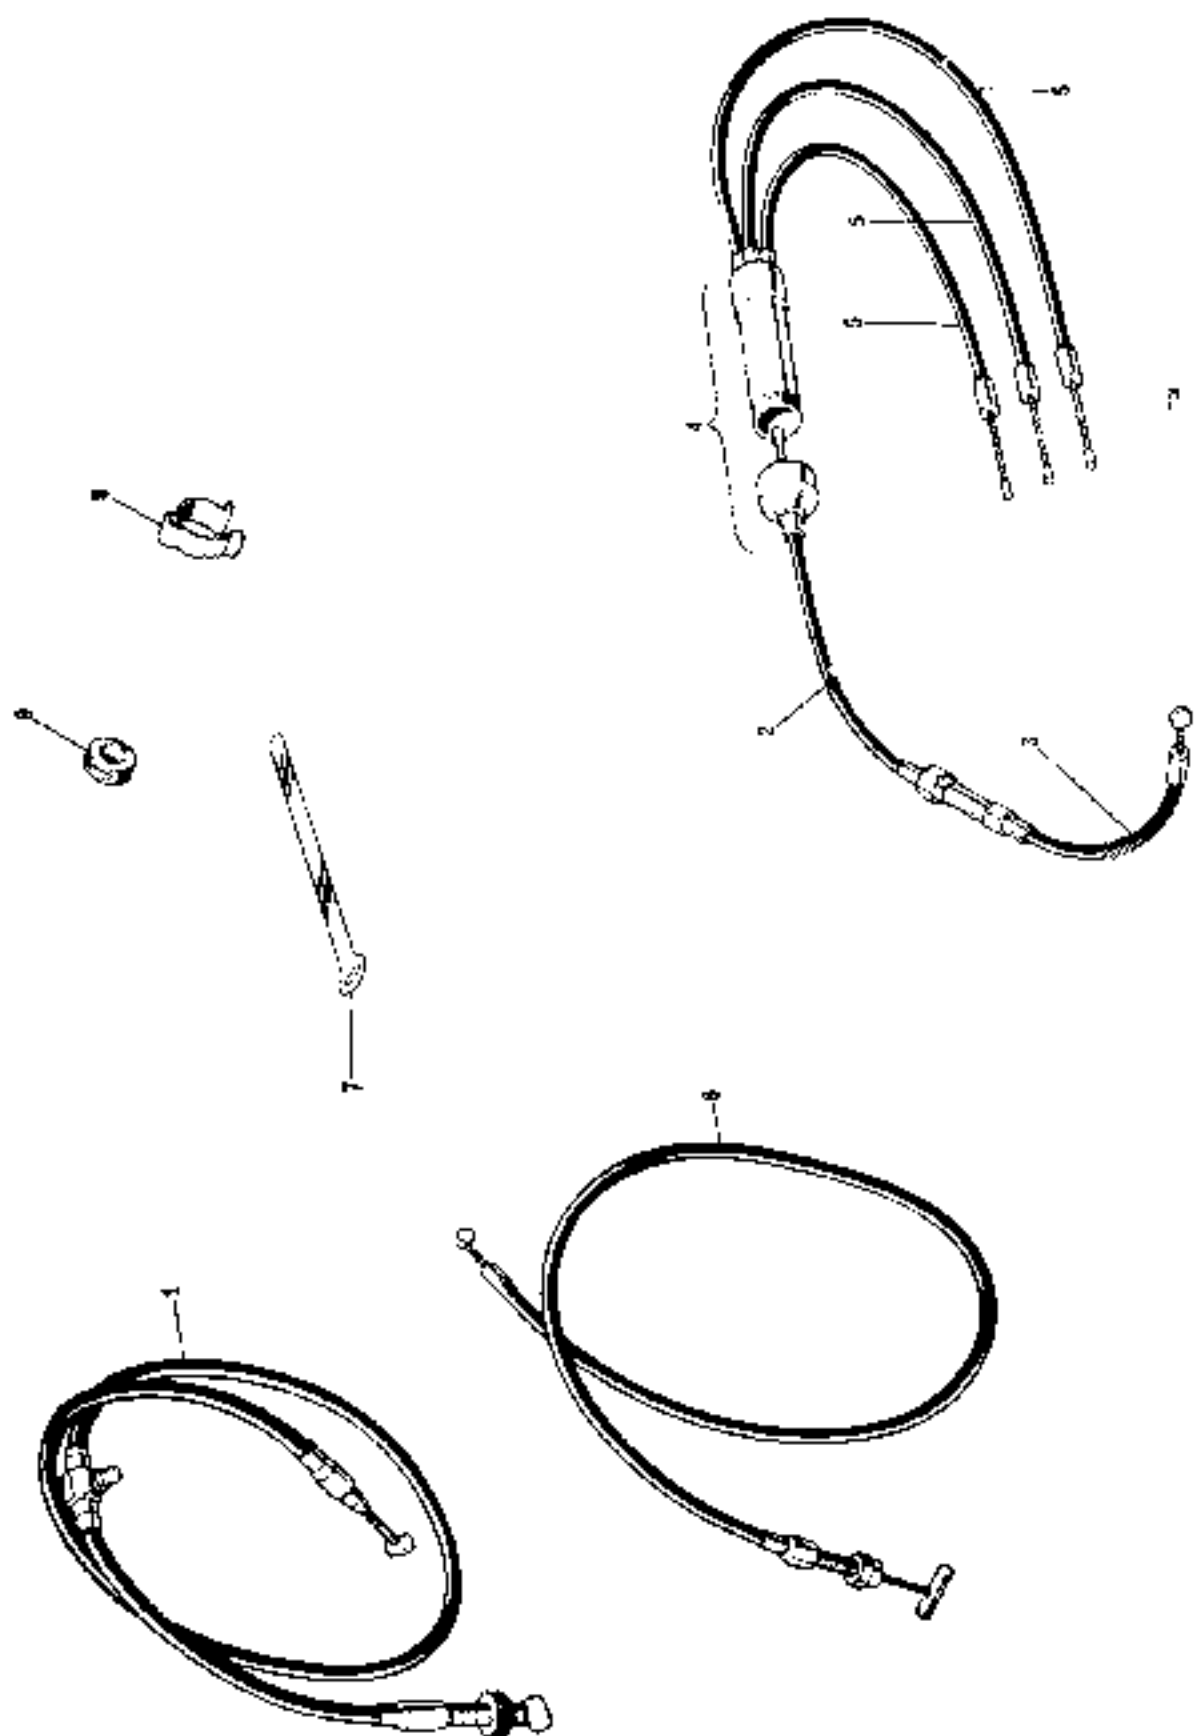


Fig. 31. CONTROL CABLES

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
CONTROL CABLES				
1	60-2445	Clutch cable	1	
2	60-3565	CHOKE CABLE ASSEMBLY	1	
3	60-3566	Cable, lever to junction box	1	
4	60-1978	Junction box (244, 2080)	1	
5	60-2061	Cable, junction box to carburettor	3	
6	60-0899	Throttle cable	1	
7	60-4251	Cable clip	9	
8	97-4112	Cable clip (at handlebar)	4	
9	02-6784	GROMMET—THROTTLE CABLE	1	

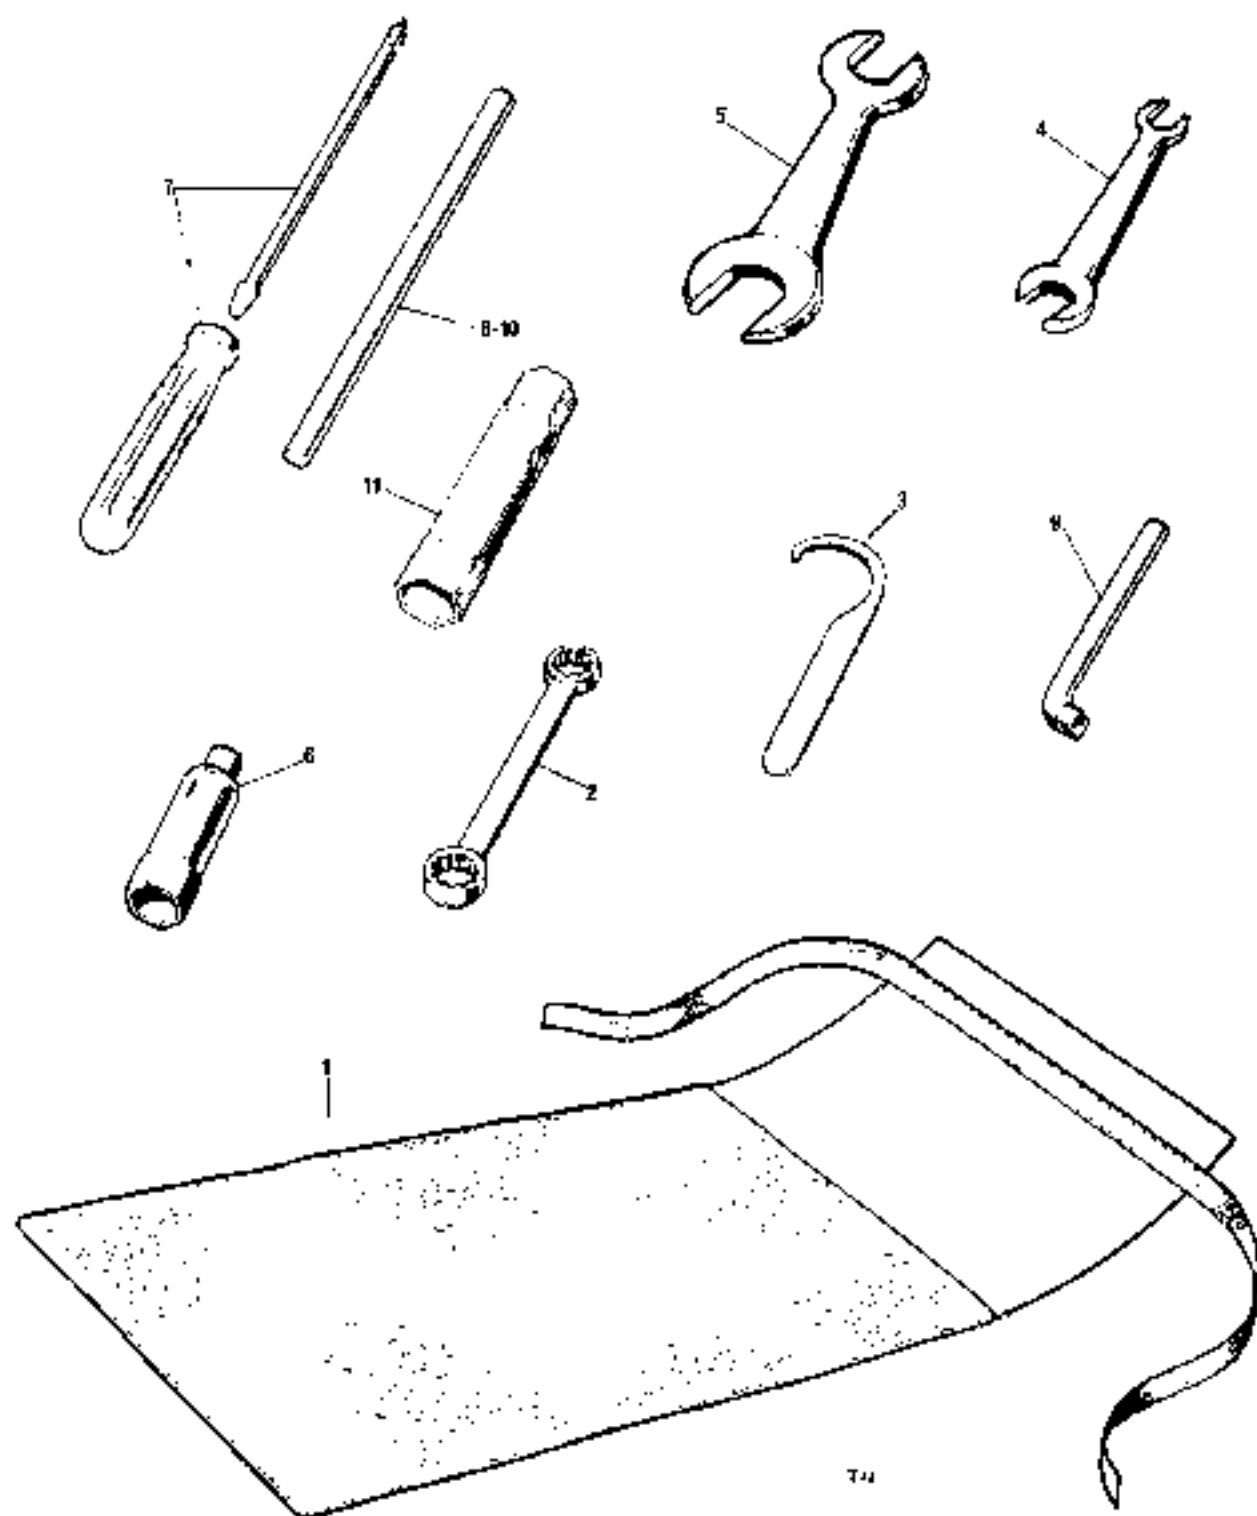


FIG. 12. TOOLKIT

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

TOOLKIT

—	60-3351	TOOLKIT COMPLETE	...	...	...	...	...	1	
1	60-0291	Tool roll	...	...	...	...	...	1	
2	60-1907	Ring spanner	...	...	...	...	...	1	
3	60-2184	"C" spanner	...	...	...	...	...	1	
4	60-3350	Open ended spanner	...	...	...	...	...	1	
5	60-4523	Open ended spanner	...	...	...	...	...	1	
6	60-1910	Plug spanner	...	...	...	...	...	1	
7	60-0767	Screw driver complete	...	...	...	...	...	1	
8	60-1911	Tommy bar	...	...	...	...	...	1	
9	60-2020	Tappet spanner	...	...	...	...	...	1	
Not illus.	60-2599	Licence holder	...	...	...	...	...	Available	
10	60-3711	Tommy bar $\frac{1}{4}$ in. diam.	...	...	...	...	...	1	
11	60-1909	Box spanner $\frac{1}{4}$ in. A.F. x $\frac{1}{2}$ in. A.F.	...	...	...	...	...	1	

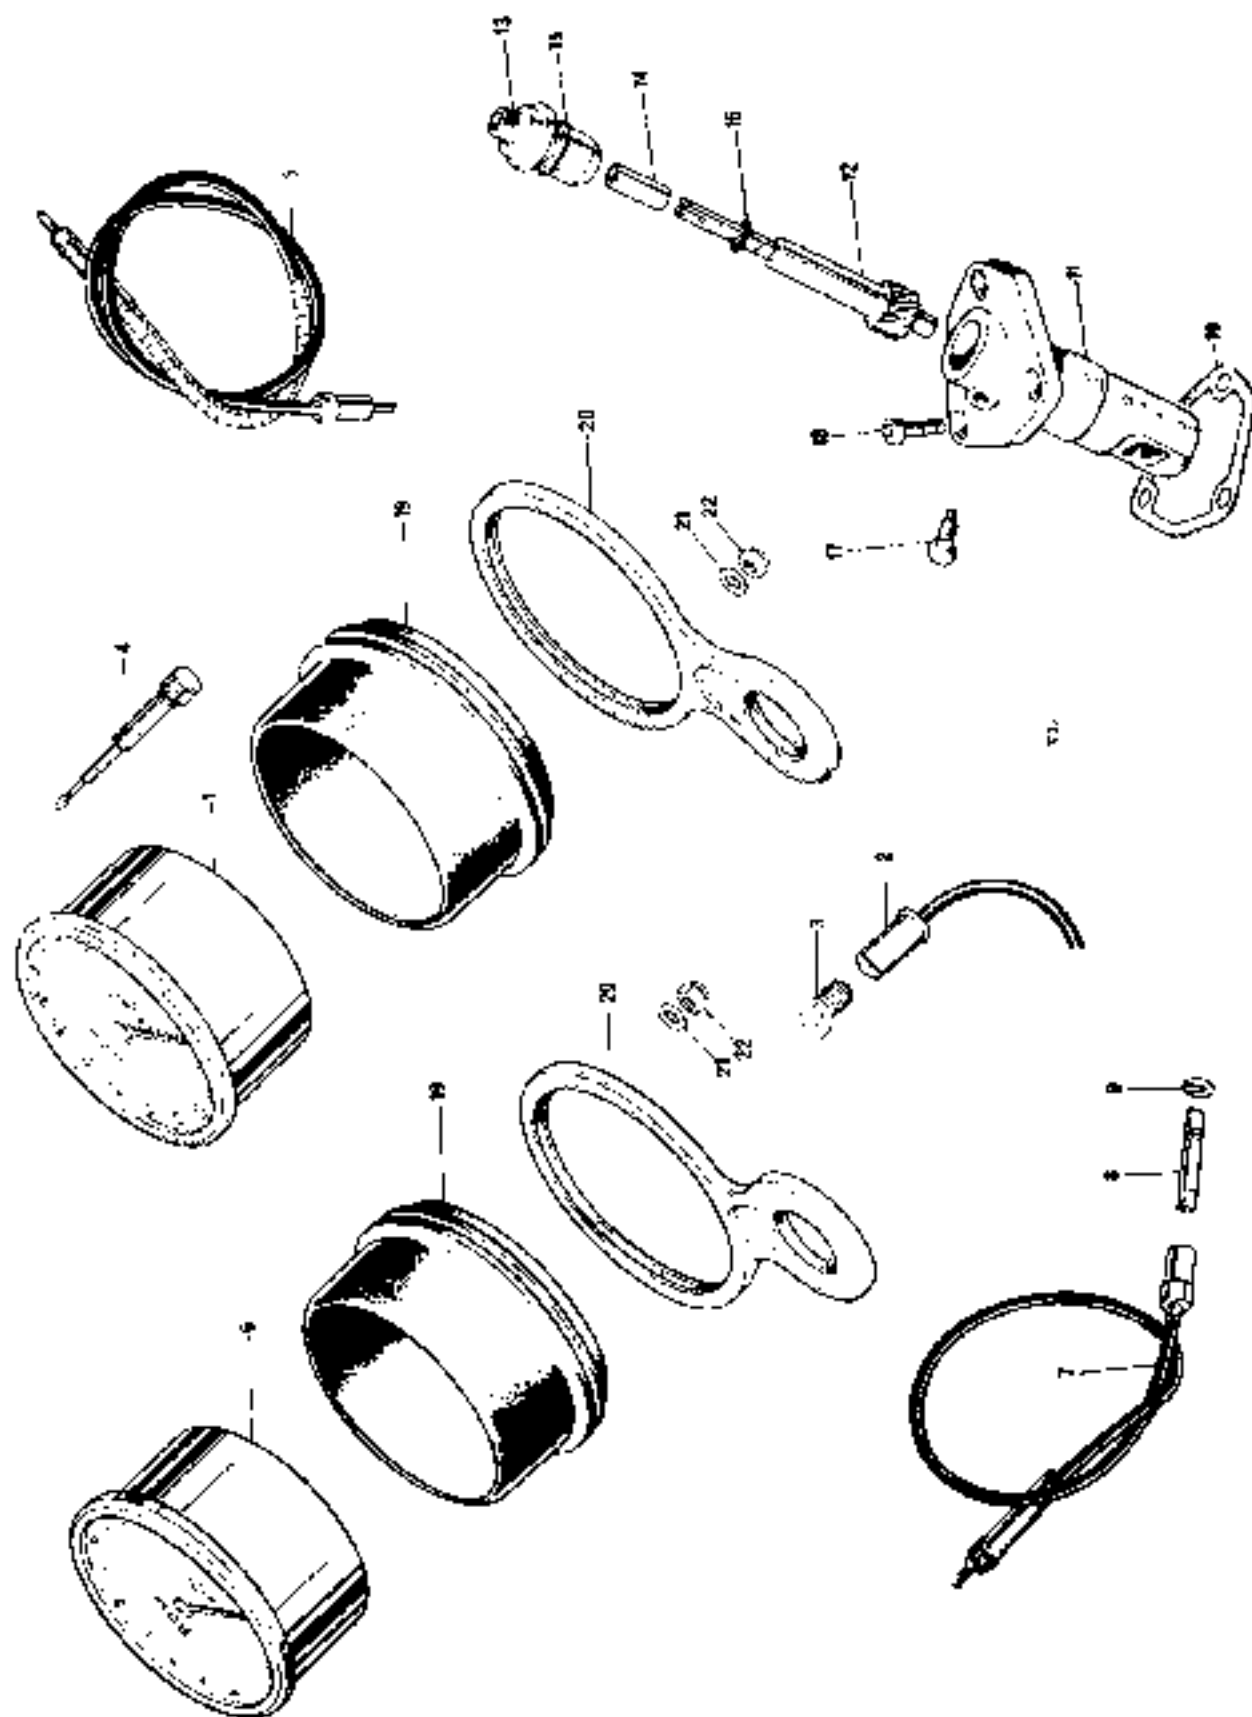


Fig. 31. SPEEDOMETER AND TACHOMETER

Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
----------	----------	-------------	----------	---------

SPEEDOMETER AND TACHOMETER

1	60-2394	Speedometer head MPH (SSM 5007'00))	1	
1	60-2395	Speedometer head Km/hr (SSM 5007'01)	1	Available
2	51271406	Bulbholder	1	Reference only
3	504	Bulb	1	Reference only
4	41-148-203-10	Tilt control (99-0176)	1	
5	60-3376	Speedometer cable	1	
6	60-2396	Tachometer head (RSM 3003 13)	1	
7	60-0578	Tachometer cable	1	
8	31-371-398	Spade (99-0173)	1	
9	60-0494	Circlip	1	
10	71-1419	Joint washer, tacho drive	1	
11	70-8740	Housing tacho driven gear	1	
12	70-8741	Driven gear	1	
13	70-8742	Tacho bearing housing	1	
14	70-6124	Bush	1	
15	70-3309	O'ring	1	
16	70-6259	O'ring, driven gear	1	
17	70-8744	Locating screw	1	
18	14-6605	Screw, housing to case	3	
19	60-2600	Rubber cup	2	
20	97-4026	Bracket	2	
21	60-2391	Washer	4	
22	21-0776	Nut	4	

Speedo and Tacho mounting

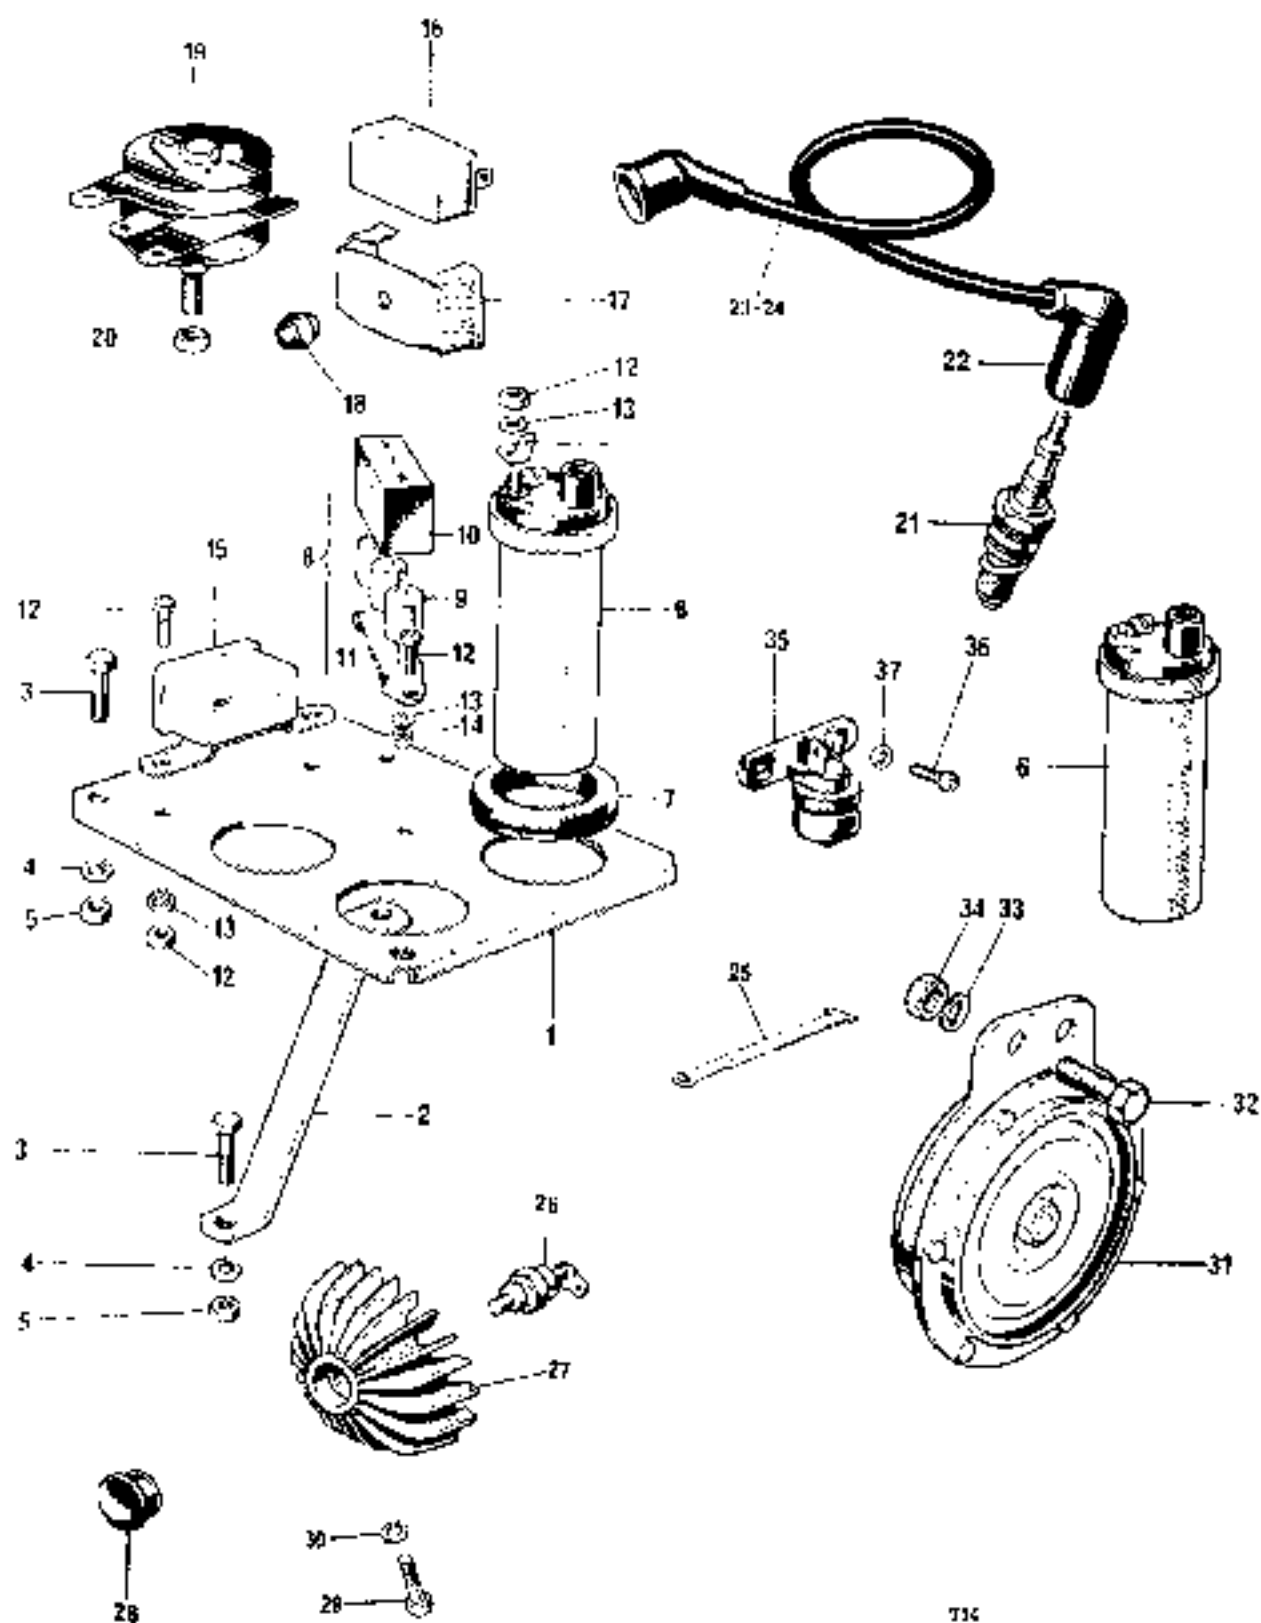


Fig. 34. IGNITION COILS, HORNS, RECTIFIER AND ZENER DIODE

IGNITION COILS, HORNS, RECTIFIER ZENER DIODE

1	83-3230	Electrical platform	1	
2	82-9565	Platform stay	1	
3	14-0102	Bolt	4	
4	60-2329	Washer	4	
5	14-1301	Nut	4	
6	60-2203	Ignition coil—17m 12 (45223)	3	
7	82-9561	Coll grommet	3	
8	47637	CAPACITOR PACK—2CP (60-1935)		Reference only
9	54420128	Capacitor (99-1043)	3	
10	54418528	Cover (99-0767)	1	
11	54418526	Base plate (99-1160)	1	
12	21-2079	Screw	5	
13	60-2391	Shakeproof washer	4	
14	21-0778	Nut	4	
15	33213	Horn relay 6RA (99-1227)	1	
16	35048	Flasher unit—BFL (99-1201)	1	
17	54385091	Clip, flasher unit (60-3521)	1	
18	83-2569	Grommet, flasher unit	1	
19	59-0589	RECTIFIER (49072)	1	
20	82-5338	Nut (56596)	1	
21	N3	Spark plug (60-0911)		Reference only
22	60-3043	Plug cover (VVC200)	3	
23	60-3923	High-tension cable (non-resistive)	3	
24	60-3924	High-tension cable (resistive), NOT U.S.A.	3	
25	60-0777	Harness cable clip	1	
26	49345	Zener diode (99-0590)	1	
27	97-2237	Heat sink	1	
28	97-2275	Plug, heat sink	1	
29	14-6104	Bolt	1	Bracket to heat sink
30	70-1612	Washer	1	
31	60-2623	Horn (Clearhooter HF80—low note)	1	
31	60-2624	Horn (Clearhooter HF80—high note)	1	
32	14-0103	Bolt	2	Horn mounting
33	60-4245	Washer	4	
34	14-1201	Nut	4	
35	34815	Stoplamp switch 1185A (99-1028)	1	
36	83-0033	Screw	2	
37	70-2351	Washer	2	
Not illus.	60-3891	Spark plug cap (France, Sweden, Switzerland and Denmark only)	3	
Not illus.	60-3892	Flexible sleeve (France, Sweden, Switzerland and Denmark only)	3	
Not illus.	60-3893	Ignition lead (France, Sweden, Switzerland and Denmark only)	3	

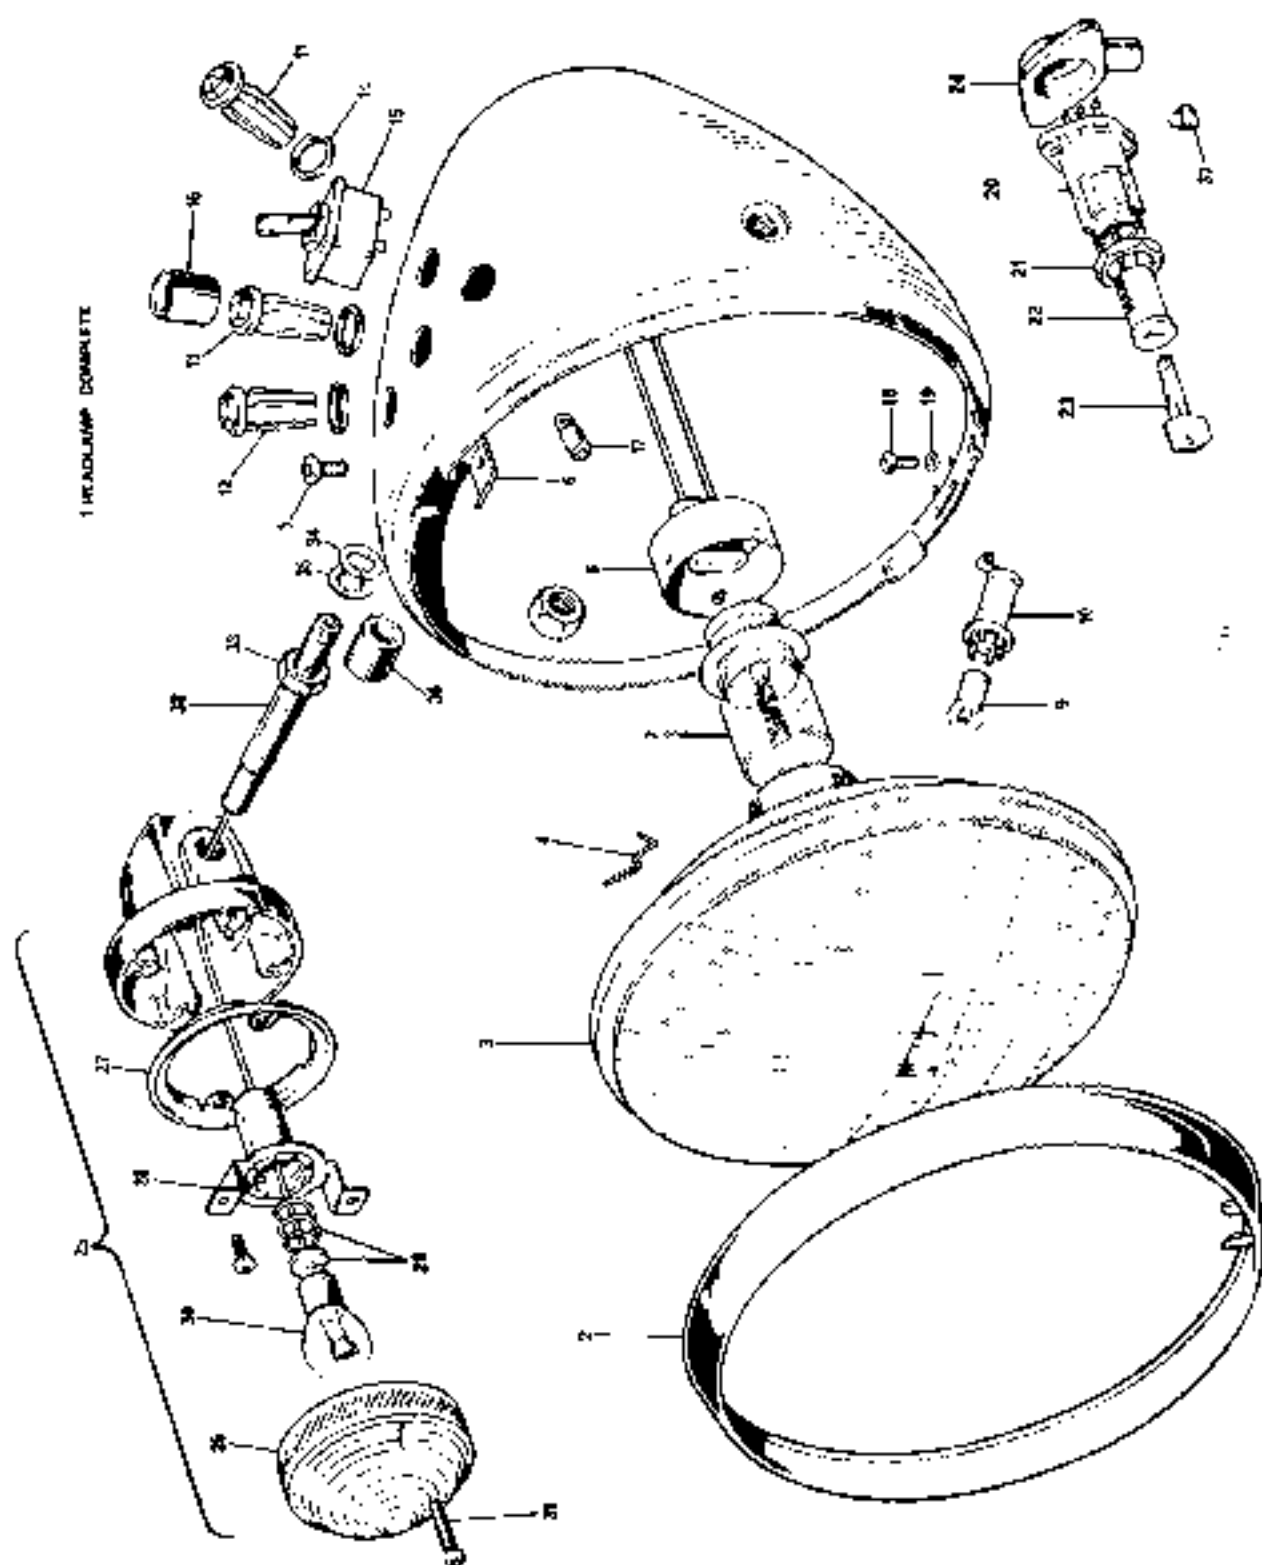


Fig. 35. HEADLAMP AND FLASHER LAMPS

HEADLAMP AND FLASHER LAMPS

1	60512	HEADLAMP COMPLETE SS 700 P.(99-1267)	1	
2	553248	Rim (99-0692)	1	
3	54525272	Light unit (99-1213)	1	
4	504665	Flxing wire (99-0683)	6	
5	144921	Screw		Reference only
3	534296	Plate		Reference only
7	370	Main bulb (45/35W) (99-1214)	1	
Not illus.	60-3671	Bulb, yel ow (France only)...	1	
8	554602	Bulbholder		Reference only
9	989	Pilot bulb (99-0548)	1	
10	54573590	Pilot bulbholder (99-1213)	1	
11	54363454	Warning light (Red) (99-1208)	1	
12	54363455	Warning light (Green) (99-1209)	1	
13	54363453	Warning light (Amber) (99-1207)	1	
14	54140331	Sealing washer (99-1210)	3	
15	35710	Light switch (99-0563)	1	
16	54525212	Shield, warning light		Reference only
17	281	Bulb, warning light (99-0537)	3	
18	54115106	Screw, (99-1223)	2	
19	143086	Washer, (99-1224)	2	
Not illus.	54961595	Wiring harness (99-1260)	1	
20	31899	IGNITION SWITCH (99-0558)	1	
21	54130041	Nut		Reference only
22	82-6981	IGNITION LOCK C/W KEY	1	
23	60-0622	Key (state serial number)		As required
24	97-2262	Cover, ignition switch	1	
25	54057476	FLASHER LAMP (FRONT) C/W stanchion (60-4104)	2	
25	54057543	FLASHER LAMP (REAR) C/W stanchion (60-4105)	2	
26	54581638	Lens (99-1191)	1	
27	54580300	Gasket		Reference only
28	554548	Bulbholder		Reference only
29	573832	Interior assembly		Reference only
30	382	Bulb (99-1192)	1	
31	54123401	Screw (99-1193)	2	
32	60600313	Stanchion, flasher lamp, front, (19-1368)	2	
32	60600312	Stanchion, flasher lamp, rear (19-1369)	2	
33	14-0404	Nut-stanchion to bracket	4	
34	60-2332	Washer	4	
35	37-2331	Washer, shakeproof	4	
36	97-4125	Distance piece—headlamp bolt	2	
37	82-7994	Grommet plug	1	
Not illus.	60-3544	Flasher lens, white (Italy only)	4	

STANDARD HARDWARE SPECIFICATION BOLTS

Part No.	Material	Thd. dia.	Length under head	Min. length of thread	Hexagon A.F.
21-1822	Steel	$\frac{1}{8}$ " UNF	$\frac{1}{2}$ "	$\frac{23}{64}$ "	0.500"
21-1910	"	$\frac{1}{8}$ " UNF	$\frac{1}{2}$ "	$\frac{13}{64}$ "	0.565"
21-1919	"	$\frac{1}{8}$ " UNC	$\frac{1}{2}$ "	$\frac{7}{16}$ "	0.500"
21-2010	"	$\frac{1}{8}$ " UNF	$\frac{1}{2}$ "	$\frac{1}{2}$ "	0.375"
14-0101	"	$\frac{1}{8}$ " UNF	$\frac{1}{2}$ "		0.438"
14-0102	"	$\frac{1}{8}$ " UNF	$\frac{3}{4}$ "		0.438"
14-0103	"	$\frac{1}{8}$ " UNF	$\frac{3}{4}$ "		0.438"
14-0105	"	$\frac{1}{8}$ " UNF	1"		0.438"
14-0113	"	$\frac{1}{8}$ " UNF	$\frac{1}{2}$ "		0.500"
14-0114	"	$\frac{1}{8}$ " UNF	$\frac{3}{4}$ "		0.500"
14-0115	"	$\frac{1}{8}$ " UNF	$\frac{3}{4}$ "		0.500"
14-0116	"	$\frac{1}{8}$ " UNF	1"		0.500"
14-0126	"	$\frac{1}{4}$ " UNF	$\frac{3}{4}$ "		0.563"
14-0128	"	$\frac{3}{8}$ " UNF	1"		0.563"
14-0132	"	$\frac{1}{4}$ " UN	$\frac{3}{4}$ "		0.625"
14-0201	"	$\frac{1}{2}$ " UNF	1"	$\frac{1}{2}$ "	0.438"
14-0202	"	$\frac{1}{2}$ " UNF	$1\frac{1}{2}$ "	$\frac{1}{2}$ "	0.438"
14-0205	"	$\frac{1}{2}$ " UNF	$1\frac{1}{2}$ "	$\frac{3}{4}$ "	0.438"
14-0208	"	$\frac{1}{2}$ " UNF	2 $\frac{1}{4}$ "	$\frac{3}{4}$ "	0.438"
14-0216	"	$\frac{3}{8}$ " UNF	$1\frac{1}{2}$ "	$\frac{3}{4}$ "	0.500"
14-0217	"	$\frac{3}{8}$ " UNF	$1\frac{1}{2}$ "	$\frac{3}{4}$ "	0.500"
14-0219	"	$\frac{3}{8}$ " UNF	$1\frac{1}{2}$ "	$\frac{3}{4}$ "	0.500"
14-0220	"	$\frac{3}{8}$ " UNF	$1\frac{3}{4}$ "	$\frac{3}{4}$ "	0.500"
14-0221	"	$\frac{3}{8}$ " UNF	2"	$\frac{3}{4}$ "	0.500"
14-0222	"	$\frac{1}{2}$ " UNF	2 $\frac{1}{4}$ "	$\frac{3}{4}$ "	0.500"
14-0225	"	$\frac{1}{2}$ " UNF	3"	$\frac{3}{4}$ "	0.500"
14-0228	"	$\frac{1}{2}$ " UNF	4"	$\frac{3}{4}$ "	0.500"
14-0234	"	$\frac{3}{4}$ " UNF	$1\frac{1}{2}$ "	1"	0.563"
14-0235	"	$\frac{3}{4}$ " UNF	2"	1"	0.563"
14-0236	"	$\frac{3}{4}$ " UNF	2 $\frac{1}{4}$ "	1"	0.563"
14-0237	"	$\frac{3}{4}$ " UNF	2 $\frac{1}{4}$ "	1"	0.563"
14-0239	"	$\frac{3}{4}$ " UNF	3"	1"	0.563"
14-0241	"	$\frac{3}{4}$ " UNF	3 $\frac{1}{2}$ "	1"	0.563"
14-0242	"	$\frac{3}{4}$ " UNF	4"	1"	0.563"
14-0251	"	$\frac{1}{2}$ " UNF	2 $\frac{3}{4}$ "	$1\frac{1}{4}$ "	0.625"
14-6101	"	$\frac{1}{4}$ " UNC	$\frac{1}{2}$ "		0.438"
14-6102	"	$\frac{1}{4}$ " UNC	$\frac{1}{2}$ "		0.438"
14-6115	"	$\frac{1}{8}$ " UNC	$\frac{3}{4}$ "		0.500"
14-6121	"	$\frac{1}{8}$ " UNC	2 $\frac{1}{4}$ "		0.500"

NUTS

	Material	Thd. dia.	Hexagon A.F.	Thickness	Remarks
21-0778	Steel	No. 10 UNF	0.375"	0.225"	Cleaveloc
21-1852	"	$\frac{3}{16}$ " UNF	0.437"	0.330"	Philidas
21-1906	"	$\frac{1}{4}$ " UNF	0.438"	0.188"	Plain
21-1908	"	$\frac{5}{16}$ " UNF	0.438"	0.313"	Plain
21-1914	"	$\frac{3}{8}$ " UNEF	1.125"	0.250"	Plain
21-2013	"	$\frac{1}{2}$ " UNEF	1.313"	0.313"	Plain
21-2014	"	$\frac{3}{4}$ " UNEF	1.313"	0.438"	Plain
21-2912	"	$\frac{7}{8}$ " UNEF	1.313"	0.438"	Plain
14-0301	"	$\frac{1}{8}$ " UNF	0.438"	0.224"	Plain
14-0302	"	$\frac{9}{16}$ " UNF	0.500"	0.271"	Plain
14-0303	"	$\frac{5}{8}$ " UNF	0.563"	0.300"	Plain
14-0304	"	$\frac{3}{4}$ " UNF	0.688"	0.375"	Plain
14-0401	"	$\frac{1}{8}$ " UNF	0.438"	0.161"	Lock
14-0402	"	$\frac{9}{16}$ " UNF	0.500"	0.192"	Lock
14-0403	"	$\frac{5}{8}$ " UNF	0.563"	0.224"	Lock
14-0404	"	$\frac{3}{4}$ " UNF	0.688"	0.250"	Lock
14-0701	"	$\frac{1}{4}$ " UNF	0.438"	0.203"	Philidas
14-0702	"	$\frac{5}{16}$ " UNF	0.500"	0.246"	Philidas
14-0703	"	$\frac{3}{8}$ " UNF	0.563"	0.296"	Philidas
14-1201	"	$\frac{1}{4}$ " UNF	0.438"	0.285"	St. Nut
14-1202	"	$\frac{5}{16}$ " UNF	0.500"	0.335"	Stiffnut
14-1301	"	$\frac{3}{8}$ " UNF	0.438"	0.245"	Stiffnut
14-1302	"	$\frac{5}{16}$ " UNF	0.500"	0.290"	Stiffnut
14-1303	"	$\frac{3}{4}$ " UNF	0.563"	0.320"	Stiffnut
14-1304	"	$\frac{7}{8}$ " UNF	0.688"	0.375"	Stiffnut
14-1305	"	$\frac{1}{2}$ " UNF	0.750"	0.435"	Stiffnut
14-1901	"	$\frac{1}{4}$ " UNF	0.438"	0.283"	Nyloc
14-1902	"	$\frac{5}{16}$ " UNF	0.500"	0.351"	Nyloc
14-1903	"	$\frac{3}{8}$ " UNF	0.563"	0.375"	Nyloc

SCREWS

Part No.	Type of head	Material	Thd. dia.	Length under head	Type of drive
21-1916	Cheese head	Steel	$\frac{1}{4}$ " UNC	$1\frac{1}{2}$ "	Cross recess
21-1917	Cheese head	"	$\frac{1}{4}$ " UNC	$2\frac{1}{2}$ "	Cross recess
21-1918	Cheese head	"	$\frac{3}{8}$ " UNC	$2\frac{1}{2}$ "	Cross recess
21-1920	Hex. head	"	$\frac{3}{8}$ " UNC	$\frac{3}{4}$ "	Cross recess
21-1929	Countersunk B2°	"	$\frac{3}{8}$ " UNC	$1\frac{1}{2}$ "	Slot
21-2079	Cheese head	"	No. 10 UNF	$\frac{1}{2}$ "	Pozidrive
14-6504	Cheese head	"	$\frac{1}{4}$ " UNF	$\frac{1}{2}$ "	Cross recess
14-6504	Countersunk (B2°)	"	$\frac{1}{4}$ " UNC	$2\frac{1}{2}$ "	Cross recess
14-6505	Countersunk (B2°)	"	$\frac{1}{4}$ " UNC	$\frac{3}{4}$ "	Cross recess
14-6606	Cheese head	"	$\frac{1}{4}$ " UNC	$\frac{1}{2}$ "	Cross recess
14-6607	Cheese head	"	$\frac{1}{4}$ " UNC	$\frac{3}{4}$ "	Cross recess
14-6608	Cheese head	"	$\frac{1}{4}$ " UNC	$1\frac{1}{2}$ "	Cross recess
14-6609	Cheese head	"	$\frac{1}{4}$ " UNC	$1\frac{1}{2}$ "	Cross recess
14-6610	Cheese head	"	$\frac{1}{4}$ " UNC	$1\frac{1}{2}$ "	Cross recess
14-6611	Cheese head	"	$\frac{1}{4}$ " UNC	$1\frac{1}{2}$ "	Cross recess
14-6612	Cheese head	"	$\frac{1}{4}$ " UNC	$2\frac{1}{2}$ "	Cross recess
14-6613	Cheese head	"	$\frac{1}{2}$ " UNC	$2\frac{1}{2}$ "	Cross recess
14-6614	Cheese head	"	$\frac{1}{2}$ " UNC	$2\frac{1}{2}$ "	Cross recess
14-6615	Cheese head	"	$\frac{3}{4}$ " UNC	$3\frac{1}{2}$ "	Cross recess
14-7004	Socket head	"	$\frac{1}{4}$ " UNC	$\frac{1}{2}$ "	Hex. socket
14-7019	Socket head	"	$\frac{3}{8}$ " UNC	$\frac{3}{4}$ "	Hex. socket
14-7024	Socket head	"	$\frac{1}{2}$ " UNC	$2\frac{1}{2}$ "	Hex. socket

WASHERS—PLAIN

Part No.	Material	i/dia.	o/dia.	Thickness
60-4245	Steel	0.273"	0.563"	0.048"
60-4246	Steel	0.398"	0.750"	0.063"
60-4247	Steel	0.336"	0.625"	0.063"
37-2027	Steel	0.531"	1.031"	0.091"
60-4248	Steel	0.266"	0.469"	0.064"
60-4267	Steel	0.453"	0.750"	0.064"

WASHERS—SPRING

Part No.	Material	i/dia.	o/dia.	o/a height	Thickness
60-4259	Spring Steel	$\frac{1}{8}$ " clearance	$\frac{1}{8}$ "	$\frac{7}{16}$ "	0.104"
60-4250	Spring Steel	$\frac{1}{4}$ " clearance	$\frac{1}{2}$ "	$\frac{1}{2}$ "	0.064"
60-3541	Spring Steel	$\frac{1}{16}$ "	$\frac{3}{8}$ "	$\frac{7}{16}$ "	0.040**
21-0648	Spring Steel	$\frac{5}{16}$ " clearance	$\frac{1}{2}$ "	$\frac{7}{16}$ "	0.080"

** Double coil.

NUMERICAL INDEX

Part No.	Plate ref.			Qty
	Page	No.		
14-0101	61	24	4	
14-0101	63	5	6	
14-0101	63	15	1	
14-0101	63	—	4	
14-0101	65	8	4	
14-0101	61	22	4	
14-0101	61	30	2	
14-0101	63	18	2	
14-0102	63	34	2	
14-0102	75	3	4	
14-0103	41	43	1	
14-0103	49	35	2	
14-0103	63	9	2	
14-0103	75	32	2	
14-0105	41	42	1	
14-0113	37	17	1	
14-0113	39	26	1	
14-0115	43	16	2	
14-0116	43	17	2	
14-0116	63	11	2	
14-0126	37	3	1	
14-0129	41	27	2	
14-0128	43	32	1	
14-0132	41	24	1	
14-0132	39	14	1	
14-0201	25	35	1	
14-0202	15	17	4	
14-0205	43	7	2	
14-0207	51	17	5	
14-0208	21	31	1	
14-0213	59	23	2	
14-0219	23	28	1	
14-0219	43	11	2	
14-0221	41	20	2	
14-0222	41	19	2	
14-0222	59	4	1	
14-0228	59	10	1	
14-0234	41	28	2	
14-0234	45	3	1	
14-0235	39	20	4	
14-0237	41	35	1	
14-0317	45	13	1	
14-0344	37	23	1	
14-0351	37	27	2	
14-0354	41	1	1	
14-0301	25	37	4	
14-0301	63	—	4	
14-0301	65	4	1	
14-0302	11	22	2	
14-0302	43	31	1	
14-0302	45	26	8	
14-0303	11	11	4	
14-0303	15	44	4	
14-0401	9	29	2	
14-0401	41	1	1	
14-0401	41	44	2	
14-0401	59	25	2	
14-0402	13	15	1	
14-0402	15	29	6	
14-0402	31	28	1	

Part No.	Plate ref.			Qty
	Page	No.		
14-0402	37	9	2	
14-0402	37	18	1	
14-0404	37	15	2	
14-0404	77	—	4	
14-0503	61	29	1	
14-0702	39	27	1	
14-0703	37	20	1	
14-1019	45	34	2	
14-1034	45	6	2	
14-1201	43	8	2	
14-1201	43	23	4	
14-1201	49	21	1	
14-1201	63	7	6	
14-1201	63	21	2	
14-1201	63	27	1	
14-1201	67	24	2	
14-1201	75	34	4	
14-1202	43	14	2	
14-1301	11	50	6	
14-1301	23	25	6	
14-1301	31	19	5	
14-1301	57	12	2	
14-1301	61	31	1	
14-1301	61	36	2	
14-1301	65	10	4	
14-1301	75	5	4	
14-1302	23	21	6	
14-1302	25	16	4	
14-1302	41	22	4	
14-1302	41	37	1	
14-1302	43	19	4	
14-1302	55	11	2	
14-1302	59	6	1	
14-1302	55	11	1	
14-1302	63	13	2	
14-1302	63	32	2	
14-1303	37	24	1	
14-1303	39	14	1	
14-1303	39	10	2	
14-1303	41	30	4	
14-1303	41	34	2	
14-1303	41	41	1	
14-1303	45	4	1	
14-1303	45	15	2	
14-1303	49	48	2	
14-1303	51	21	1	
14-1303	67	40	2	
14-1304	37	28	2	
14-1304	39	13	1	
14-1304	41	2	1	
14-1304	41	5	1	
14-1304	51	26	1	
14-1307	51	37	1	
14-1401	15	16	4	
14-1427	11	21	2	
14-1431	27	16	2	
14-1619	23	19	5	
14-1902	31	42	2	
14-1903	47	20	4	
14-1904	33	5	1	

Part No.	Plate ref.			Qty
	Page	No.		
14-2205	61	9	4	
14-6101	33	6	1	
14-6102	31	10	2	
14-6104	75	27	1	
14-6113	11	7	2	
14-6114	63	14	2	
14-6121	27	13	1	
14-6211	15	41	4	
14-6219	11	16	2	
14-6223	11	18	2	
14-6223	11	19	1	
14-6226	11	17	9	
14-6304	33	33	2	
14-6507	33	34	1	
14-6515	31	5	1	
14-6605	33	23	4	
14-6605	73	18	3	
14-6606	33	11	2	
14-6608	21	13	6	
14-6608	25	33	1	
14-6609	25	31	1	
14-6610	25	32	2	
14-6610	31	8	3	
14-6610	33	35	1	
14-6611	33	29	6	
14-6612	31	12	3	
14-6612	33	10	1	
14-6613	33	11	2	
14-6614	27	28	1	
14-6615	33	32	1	
14-7004	15	18	6	
14-7006	33	12	2	
14-7101	27	12	1	
21-0536	37	7	1	
21-0544	25	15	1	
21-0543	11	39	1	
21-0544	25	28	2	
21-0545	19	7	1	
21-0547	9	28	3	
21-0547	25	3	4	
21-0548	41	23	1	
21-0550	15	32	2	
21-0557	23	24	6	
21-0559	13	11	2	
21-0567	33	27	1	
21-0578	45	9	1	
21-0585	15	26	1	
21-0588	37	26	2	
21-0589	67	34	2	
21-0594	29	31	1	
21-0620	39	7	1	
21-0678	11	36	1	
21-0680	31	6	3	
21-0681	31	32	1	
21-0686	19	4	4	
21-0692	19	5	10	
21-0778	73	—	4	
21-0778	75	14	4	
21-1804	55	—	2	

NUMERICAL INDEX—contd.

Part ref.				Part No.				Part No.			
Place ref.				Place ref.				Place ref.			
Page	No.	Qty		Page	No.	Qty		Page	No.	Qty	
21-1805	37	7	2	37-3961	51	40	1	57-1953	25	4	1
21-1819	31	11	1	37-3969	47	21	1	57-1956	25	5	1
21-1870	31	7	1	37-3970	47	22	1	57-1962	29	25	1
21-1822	57	13	1	37-3976	51	41	—	57-1963	29	26	1
21-1822	63	23	2	37-3980	51	32	1	57-2166	15	14	4
21-1822	63	30	2	37-4046	51	16	—	57-2166	33	19	1
21-1833	61	4	1	37-4110	51	21	1	57-2173	25	21	1
21-1852	21	17	3	37-4112	51	20	1	57-2214	35	29	1
21-1912	111	23	4	37-4119	51	44	1	57-2215	33	17	1
21-1917	27	15	1	37-4126	47	4	1	57-2215	35	13	1
21-1930	23	4	2	37-4127	47	5	1	57-2220	33	24	1
21-1931	11	14	4	37-4129	47	3	1	57-2240	29	30	1
21-1940	53	4	4	37-4130	47	7	20	57-2330	25	25	1
21-1969	41	1	2	37-4131	47	6	20	57-2331	37	15	1
21-1978	37	11	2	37-4132	47	16	1	57-2450	25	16	1
21-1996	49	51	1	37-4133	47	9	1	57-2455	31	23	1
21-2019	55	10	2	37-4134	47	10	1	57-2473	31	29	2
21-2046	67	21	2	37-4135	47	12	1	57-2474	31	31	1
21-2079	73	12	5	37-4141	47	1	1	57-2478	35	13	1
21-2095	45	50	4	37-4180	51	13	1	57-2480	35	16	1
21-2102	45	25	3	37-4191	51	12	1	57-2547	31	25	1
21-2106	29	1	3	37-4184	51	2	1	57-2557	31	22	1
21-2112	41	4	1	37-4250	51	1	1	57-2557	31	27	1
21-2140	25	30	1	37-4261	49	99	2	57-2554	31	1	1
21-2185	9	1	1	37-4275	47	17	1	57-2555	31	3	1
21-2189	45	29	2	37-4282	51	8	1	57-2557	31	7	1
21-2191	49	20	1	37-4284	51	1	1	57-2562	31	12	1
21-2192	49	22	2	37-4302	47	8	40	57-2580	21	21	1
21-2194	49	23	2	37-4304	47	2	1	57-2622	25	20	1
21-2196	49	50	2	50-2708	27	11	—	57-2630	31	30	2
21-2207	47	18	4	57-0073	25	7	1	57-3642	31	4	1
21-2225	65	2	1	57-0031	25	19	1	57-3642	31	11	1
33-5504	59	27	2	57-0047	25	2	1	57-3643	33	16	1
33-5576	37	1	1	57-0057	25	6	1	57-3643	35	29	2
37-0451	47	14	1	57-0280	47	15	1	57-3644	35	17	1
37-0451	51	11	1	57-0404	25	11	2	57-3646	35	14	1
37-1015	51	39	1	57-0405	25	13	2	57-3647	31	26	1
37-1090	51	21	1	57-0407	25	14	1	57-3660	27	19	1
37-1217	47	13	2	57-0412	27	4	1	57-3705	31	13	1
37-1467	41	50	1	57-0703	29	28	1	57-3708	31	15	1
37-1654	51	15	1	57-0731	29	19	1	57-3709	31	14	1
37-2015	51	11	1	57-0912	11	24	1	57-3715	31	10	1
37-2294	51	7	40	57-0912	27	7	—	57-3717	31	17	1
37-2338	51	30	3	57-0912	13	18	1	57-3718	31	18	1
37-2338	77	—	4	57-0989	11	11	1	57-3719	31	19	12
37-2468	51	9	3	57-0989	27	8	1	57-3720	31	20	6
37-2749	51	10	1	57-0989	33	37	2	57-3731	33	26	1
37-2750	51	11	1	57-1070	47	11	1	57-3750	25	1	1
37-2751	51	16	1	57-1076	63	—	2	57-3751	25	34	1
37-2751	51	14	1	57-1167	25	22	1	57-3756	31	4	1
37-2761	27	27	1	57-1250	29	27	1	57-3851	11	37	1
37-2821	51	6	20	57-1257	11	40	1	57-3940	35	11	6
37-3501	51	15	1	57-1272	25	24	1	57-3941	35	12	3
37-3963	51	16	1	57-1606	27	5	1	57-3954	33	21	1
37-3919	51	4	2	57-1607	27	6	2	57-3978	27	22	1
37-3920	51	1	1	57-1614	27	2	1	57-3989	11	26	1
37-3921	51	4	10	57-1645	33	25	1	57-3990	33	39	1
37-3922	51	5	10	57-1646	33	28	1	57-4004	35	10	1
37-3925	51	26	1	57-1896	27	10	1	57-4018	33	1	1
37-3926	51	29	1	57-1923	11	51	1	57-4113	29	13	1

NUMERICAL INDEX—contd.

Place ref.				Place ref.				Place ref.			
Part No.	Page	No.	Qty	Part No.	Page	No.	Qty	Part No.	Page	No.	Qty
57-4117	25	18	1	60-0890	69	6	1	60-2429	39	21	1
57-4154	33	38	1	60-0911	75	21	—	60-2445	69	1	1
57-4225	35	7	1	60-1816	57	—	1	60-2599	71	—	—
57-4356	25	27	1					60-2600	73	19	2
57-4363	22	9	1	60-1841	39	2	—	60-2623	75	31	1
57-4364	27	24	1	60-1907	71	3	—	60-2624	75	31	1
57-4366	27	25	1	60-1909	71	—	—	60-2683	41	47	—
57-4370	29	7	1	60-1910	71	6	—	60-2720	61	17	—
57-4376	29	8	1	60-1911	71	8	—	60-3043	75	22	3
57-4377	29	9	1	60-1915	75	8	—				
57-4394	29	2	1	60-1959	17	6	1	60-3213	51	34	1
57-4396	29	23	1	60-1960	17	7	1	60-3250	71	4	1
57-4403	27	21	1	60-1978	69	4	1	60-3351	71	—	1
57-4403	25	12	2	60-1984	17	10	1	60-3376	73	5	1
57-4459	27	20	1	60-1987	17	9	1	60-3494	29	30	1
57-4470	27	3	1	60-2020	71	9	1	60-3500	29	6	1
57-4575	29	10	1	60-2061	69	5	3	60-3510	29	1	1
57-4593	33	15	1	60-2067	61	26	1	60-3511	29	5	1
57-4593	33	15	1	60-2116	35	27	1	60-3521	75	17	1
57-4596	35	2	1	60-2164	71	3	1	60-3530	35	10	1
57-4597	35	1	1	60-2203	75	6	3	60-3544	77	—	4
57-4621	35	8	1	60-2264	39	16	2	60-3548	15	21	2
57-4624	27	17	1	60-2320	11	49	6	60-3552	29	32	1
57-4633	27	1	1	60-2370	51	18	5	60-3565	49	2	1
57-4647	29	15	—	60-2371	41	36	2	60-3566	49	3	1
57-4651	29	18	—	60-2372	41	29	4	60-3567	67	14	1
57-4654	29	18	—	60-2373	41	40	1	60-3585	67	75	2
57-4657	29	16	—	60-2373	37	29	2	60-3586	67	26	2
57-4660	27	16	—	60-2423	41	3	2	60-3639	59	—	1
57-4661	29	21	—	60-2429	63	—	4	60-3659	61	33	1
57-4662	29	17	—	60-2529	65	9	4	60-3671	77	—	1
				60-2529	75	4	4	60-3711	71	16	1
				60-2530	63	12	2	60-3719	71	—	1
				60-2531	45	3	1	60-3748	21	—	1
				60-2531	45	47	2	60-3748	63	37	1
								60-3761	9	11	2
57-4663	29	19	1	60-2532	41	6	2	60-3780	45	—	1
57-4756	25	17	—	60-2532	37	—	4	60-3891	75	—	3
57-4781	29	4	—	60-2535	59	24	2	60-3892	75	—	3
57-4784	29	22	—	60-2547	51	45	1	60-3893	75	—	3
57-4747	29	11	—	60-2549	37	—	2				
57-4794	29	14	—	60-2564	25	23	1	60-3896	67	20	2
57-4900	29	12	—	60-2564	31	24	3	60-3923	75	—	3
57-4909	29	24	1	60-2564	37	31	2	60-3924	75	—	3
57-4947	27	1	1	60-2570	11	41	1	60-3981	67	22	1
57-4948	27	23	1	60-2581	51	27	1	60-4092	17	1	1
57-5009	15	5	12	60-2591	61	—	4	60-4093	17	1	1
60-0052	59	—	1	60-2591	73	—	4	60-4094	17	1	1
60-0251	21	1	1	60-2591	75	12	4	60-4101	49	38	1
60-0454	71	9	1	60-2594	73	4	1	60-4102	49	1	1
60-0578	71	7	1	60-2595	73	1	—	60-4103	65	17	1
60-0622	77	23	1	60-2596	73	6	1	60-4104	77	25	2
60-0623	45	9	1	60-2618	17	8	2	60-4105	77	15	3
60-0649	35	27	—	60-2418	57	16	1	60-4151	61	35	3
60-0656	61	18	1	60-2418	63	24	2	60-4156	49	54	1
60-0657	61	19	4	60-2427	49	16	2	60-4175	49	33	1
60-0699	35	22	1	60-2427	63	10	2	60-4176	94	29	1
60-0702	53	12	2	60-2428	43	27	8	60-4177	49	29	—
60-0702	57	25	4	60-2428	63	15	2	60-4178	49	37	1
60-0707	23	17	6	60-2438	43	33	1				
60-0767	71	7	1								
60-0777	63	38	1								
60-0777	75	—	1								

[illegible]

NUMERICAL INDEX—cont'd

Plate ref.				Plate ref.				Plate ref.			
Part No.	Page	No.	Qty	Part No.	Page	No.	Qty	Part No.	Page	No.	Qty
70-8776	11	8	2	70-9767	7	—	1	71-3208	11	9	—
70-8780	9	11	1	70-9768	7	—	1	71-3209	19	1	1
70-8780	11	14	1	70-9810	11	9	1	71-3213	19	13	6
70-8781	15	1	1	70-9821	11	10	1	71-3215	11	1	1
70-8782	15	15	4	70-9856	11	11	2	71-3221	35	4	1
70-8782	33	10	1	70-9885	13	9	1	71-3222	35	6	1
70-8785	35	25	1	70-9887	13	5	1	71-3247	7	—	—
70-8787	15	6	6	71-0006	11	5	1	71-3274	55	—	1
70-8788	15	7	6	71-0007	21	4	2	71-3280	7	—	—
70-8789	15	9	6	71-0070	15	17	6	71-3281	7	—	—
70-8817	19	3	8	71-0245	23	8	1	71-3307	9	1	1
70-8819	15	42	2	71-0280	15	43	7	71-3311	21	7	1
70-8820	15	39	1	71-1051	11	25	1	71-3312	17	17	1
70-8860	43	3	1	71-1070	29	34	1	71-3358	15	28	6
70-8904	57	20	1	71-1078	13	24	1	71-3361	15	4	3
70-8905	57	77	1	71-1078	13	25	2	71-3362	15	5	3
70-8914	19	2	1	71-1129	11	10	4	71-3387	15	23	2
70-8967	21	12	1	71-1168	15	46	1	71-3388	15	24	2
70-9076	7	—	2	71-1172	15	40	1	71-3569	15	25	1
70-9077	7	—	2	71-1175	15	47	1	71-3590	13	26	1
70-9078	7	—	2	71-1190	19	13	4	71-3748	13	10	12
70-9023	7	—	—	71-1238	19	9	6	71-3810	41	20	1
70-9024	7	—	—	71-1270	11	21	1	71-3811	41	20	1
70-9025	7	—	—	71-1270	11	21	1	71-3812	41	5	1
70-9026	7	—	—	71-1301	21	1	1	71-3815	41	6	1
70-9027	7	—	—	71-1349	11	48	6	71-3817	41	15	2
70-9028	7	—	—	71-1350	21	14	1	71-3924	21	14	1
				71-1351	11	1	1	71-3925	33	4	1
				71-9153	13	14	1	71-3941	19	8	1
				71-1409	73	12	1	71-4000	19	16	4
				71-1419	73	12	1	71-4069	9	—	2
								71-4159	43	13	2
70-9079	7	—	—								
70-9080	7	—	—								
70-9087	23	22	1	71-1440	21	3	1	71-4236	13	17	3
70-9088	23	16	3	71-1441	21	9	1	71-4237	13	13	1
70-9093	23	2	2	71-1442	13	16	1	71-4237	15	21	1
70-9094	23	12	2	71-1444	11	46	2	71-4245	15	11	1
70-9227	15	36	4	71-1445	13	15	2	71-4246	15	12	1
70-9229	15	37	4	71-1446	21	23	5	71-6090	15	23	1
70-9240	15	40	8	71-1447	27	18	1	87-0967	55	13	1
70-9242	21	3	1	71-1448	25	8	1	87-0967	55	—	1
70-9243	21	13	4	71-1449	31	22	1	87-0967	55	—	2
70-9251	21	5	5	71-1451	29	15	1	87-1335	57	30	2
70-9253	17	11	1	71-1452	11	2	1	87-1694	43	26	1
70-9254	21	15	1	71-1453	13	10	1	87-1695	43	27	1
70-9255	21	6	2	71-1454	13	9	1	87-1713	57	6	1
70-9266	21	6	3	71-1502	35	3	1	87-2184	15	45	4
70-9278	21	11	1	71-1742	57	23	1	87-2184	19	27	1
70-9510	15	2	3	71-1743	57	24	1	87-2184	45	14	1
70-9558	15	22	2	71-2246	9	23	1	87-2184	51	14	1
70-9586	57	22	3	71-2248	9	21	1	87-3182	57	19	1
70-9601	13	19	1	71-2250	9	27	1	87-3770	41	15	1
70-9727	9	7	2	71-2448	63	—	2	87-3814	55	9	2
70-9739	7	—	1	71-2501	39	4	1	87-3814	55	14	1
70-9739	9	12	1	71-2507	7	—	—	87-4129	55	—	2
70-9740	9	6	3	71-2508	7	—	—	87-4129	61	16	1
70-9741	7	—	—	71-2509	7	—	—	87-4228	61	15	1
70-9741	9	10	3	71-2660	15	14	1	87-4299	59	9	2
70-9762	7	—	—	71-2768	9	18	2	87-4299	61	34	3
70-9763	7	—	—	71-2792	11	43	1	87-4671	37	12	1
70-9764	7	—	—	71-2793	13	16	1	87-4775	21	10	3
70-9766	7	—	—								

NUMERICAL INDEX—contd.

Plate no.				Plate no.				Plate no.			
Part No.	Page	No.	Qty	Part No.	Page	No.	Qty	Part No.	Page	No.	Qty
82-4713	43	30	2	82-9279	4	14	1	82-1267	37	10	1
82-4715	55	—	4	82-9313	53	1	1	82-1270	37	14	2
82-4717	52	11	2	82-9317	53	6	2	82-1339	53	4	2
82-4717	51	—	4	82-9321	53	8	4	82-1547	57	29	1
82-4872	59	20	1	82-9322	53	7	8	82-1560	37	16	1
82-4998	61	21	2	82-9331	53	9	2	82-1594	41	17	1
82-4998	61	20	2	82-9341	59	1	1	82-1597	41	16	1
82-5228	55	7	2	82-9349	59	3	1	82-1598	41	18	2
82-5338	55	12	1	82-9350	59	7	2	82-1673	55	—	1
82-5338	55	20	1					82-1757	41	45	1
82-5341	57	1	1					82-1761	57	1	1
82-5511	41	7	1					82-2024	37	6	1
82-5941	41	17	4					82-2031	43	24	1
82-5944	39	8	1	82-9351	59	2	4	82-2035	61	78	1
82-5994	63	28	1	82-9352	59	3	2	82-2039	61	17	1
82-6011	55	29	1	82-9353	59	14	1	82-2219	61	11	1
82-6039	57	14	1	82-9354	59	12	1				
82-6041	39	2	2	82-9355	59	13	1				
82-6044	41	39	1	82-9360	55	—	1	82-2266	51	36	1
82-6110	63	19	2	82-9361	55	—	1	82-2369	75	18	1
82-6210	63	76	1	82-9369	43	25	2	82-2726	61	—	1
82-6675	57	10	2	82-9370	43	28	1	82-2806	55	17	1
82-6675	61	3	2	82-9371	43	29	1	82-2807	55	16	1
82-6738	43	7	1	82-9372	55	—	1	82-2814	55	6	1
82-6784	69	9	1	82-9378	41	31	1	82-2819	37	5	1
82-6821	39	5	2	82-9379	41	32	1	82-2828	59	11	1
82-6850	65	7	1	82-9410	57	5	1	82-2830	75	1	1
82-6851	63	22	1	82-9415	57	7	1	82-2833	39	1	1
82-6874	57	11	1	82-9442	61	10	1	82-2865	23	27	1
82-6915	63	17	1	82-9443	61	7	1	82-2875	55	2	1
82-6948	61	6	1	82-9529	41	49	1	82-2879	37	—	1
82-6981	77	22	1	82-9530	57	26	1	82-2891	37	—	1
82-7121	37	19	1	82-9531	57	27	1	82-4438	55	—	1
				82-9541	55	8	2	82-4763	55	—	1
				82-9561	75	7	1	82-4774	65	1	1
				82-9562	59	21	1	82-4784	65	6	1
				82-9563	59	26	1	82-4806	55	19	1
				82-9565	75	2	1	82-4822	63	16	1
82-7155	37	—	2	82-9571	53	1	4	82-4823	55	—	1
82-7159	37	2	1	82-9588	57	17	1	82-4856	61	3	1
82-7352	19	28	1	82-9590	61	8	1	82-4857	61	1	1
82-7387	41	48	1	82-9621	41	6	1	82-5031	65	5	1
82-7388	55	15	1	82-9624	41	5	1	82-5105	65	16	1
82-7389	41	26	2					82-5129	57	18	1
82-7431	59	17	1					82-5147	55	55	1
82-7510	57	11	2					82-5150	41	31	1
82-7560	61	14	1					82-5151	63	9	1
82-7848	39	11	1					82-5167	65	—	1
82-7862	51	22	1	82-9610	41	15	1				
82-7888	55	5	2	82-9615	41	38	1	82-5415	55	—	1
82-7994	39	51	2	82-9659	57	1	1	82-5416	55	1	1
82-7994	77	—	1	82-9664	57	9	1	82-5429	39	25	1
				82-9700	55	2	1	82-5471	55	—	1
				82-9701	55	3	1	82-5381	55	—	2
				82-9715	61	—	1	82-5381	55	—	2
				82-9749	61	32	1	82-5381	37	33	2
				82-9907	53	2	2	82-5430	21	11	2
				82-9918	57	—	2	82-5439	45	11	2
				82-9996	61	—	1	82-5916	21	23	1
				82-9997	39	29	1	82-5961	63	—	4
				82-0002	55	18	2				
				82-0033	75	36	2				
82-8026	61	21	1								
82-8090	39	10	2								
82-8091	59	15	1								
82-8243	41	12	2								
82-8382	37	21	1								

NUMERICAL INDEX—contd

Part No	Plate ref.			Part No	Plate ref.			Part No	Plate ref.		
	Page	No.	Qty		Page	No.	Qty		Page	No.	Qty
97-0961	65	18	1	97-4469	45	—	1	99-1011	17	16	1
97-1018	37	32	1	97-4470	45	—	1	99-1016	17	17	1
97-1425	67	2	4	97-4476	45	13	1	99-1043	75	9	1
97-1510	45	—	2	97-4481	45	43	1	99-1046	21	13	1
97-1527	67	15	2	97-4482	45	44	1	99-1051	17	32	1
97-1529	67	16	4	97-4486	45	—	1	99-1102	67	3	1
97-1580	67	18	2	97-4485	45	—	1	99-1119	53	5	2
97-1581	67	17	2	97-4533	63	2	1	99-1124	17	25	1
97-2121	21	—	6	97-4534	63	3	1	99-1139	39	19	2
97-2175	67	11	1	97-4535	63	4	1	99-1152	17	53	1
97-2208	45	47	2	97-4535	63	4	1	99-1151	17	14	1
97-2209	45	48	4	99-0030	7	—	—	99-1160	75	—	1
97-2710	45	49	4	99-0039	7	—	—	99-1167	67	29	1
97-2771	67	39	2	99-0107	39	18	4	99-1168	67	30	4
97-2237	75	24	1	99-0122	39	17	4	99-1191	77	26	1
97-2262	77	24	1	99-0173	71	6	1	99-1197	77	30	1
97-2766	45	13	1	99-0176	71	4	1	99-1191	77	31	2
97-2273	75	25	1	99-0224	17	29	1	99-1201	75	16	1
97-2291	67	32	2	99-0235	67	10	2	99-1207	77	13	1
97-2412	67	13	1	99-0344	67	5	1	99-1208	77	11	1
				99-0418	17	23	1	99-1209	77	17	4
				99-0506	17	5	1	99-1210	77	14	1
				99-0504	17	21	1	99-1212	77	1	1
				99-0509	17	27	1	99-1213	77	10	1
								99-1214	77	7	1
97-4093	45	31	2					99-1223	77	16	2
97-4001	45	28	2					99-1224	77	19	2
97-4002	45	47	2								
97-4033	45	11	2	99-0510	17	8	1				
97-4034	45	15	2	99-0511	17	22	1				
97-4039	45	11	2	99-0512	17	10	1				
97-4226	71	16	2	99-0513	17	19	1	99-1227	75	15	1
97-4575	45	17	3	99-0514	17	20	1	99-1233	21	24	1
97-4117	67	8	4	99-0515	17	12	1	99-1234	21	28	2
97-4121	45	45	1	99-0517	17	24	1	99-1235	67	28	1
97-4113	77	—	1	99-0519	17	14	1	99-1257	65	11	1
97-4145	37	31	1	99-0570	17	13	1	99-1257	65	12	1
97-4166	45	38	2	99-0521	17	4	4	99-1267	77	1	1
97-4201	45	46	1	99-0522	17	2	3	99-1268	67	31	1
97-4215	13	18	2	99-0537	77	17	3	99-2751	49	6	1
97-4242	45	36	2	99-0542	65	15	1	99-2752	49	8	1
97-4244	45	51	1	99-0548	77	9	1	99-2752	49	9	1
97-4300	67	1	1	99-0558	77	23	1	99-2754	49	10	1
97-4317	45	39	1	99-0563	77	15	1	99-2755	49	11	1
97-4338	45	20	1	99-0589	75	17	1	99-2756	49	12	1
97-4380	45	16	2	99-0590	75	25	1	99-2757	49	13	1
97-4387	45	2	1	99-0683	77	4	6	99-2758	49	14	1
97-4387	45	40	2	99-0692	77	2	1	99-2759	49	15	1
97-4391	49	2	1	99-0719	59	16	1	99-2760	49	16	1
97-4391	67	21	—	99-0739	21	14	1	99-2761	49	17	1
97-4399	45	19	1	99-0767	75	10	1	99-2762	49	18	1
97-4404	45	37	2	99-0769	21	26	1	99-2763	49	19	1
97-4411	67	1	1	99-1014	21	25	1	99-2764	49	41	1
				99-1015	71	27	1	99-2765	49	42	2
				99-1019	17	3	1	99-2766	49	43	2
				99-1020	17	15	1	99-2767	49	44	2
				99-1021	17	26	1	99-2768	7	—	1
				99-1022	17	30	1	99-2769	7	—	1
								99-2770	49	5	1
97-4439	63	1	1								
97-4440	3	—	1	99-1023	17	31	1				
97-4456	45	23	1	99-1024	17	28	1				
97-4457	45	24	1	99-1028	75	11	1				
97-4461	45	41	2								
97-4463	45	12	1								
97-4460	45	1	1								