




Kawasaki

Z250-A

For Export Market

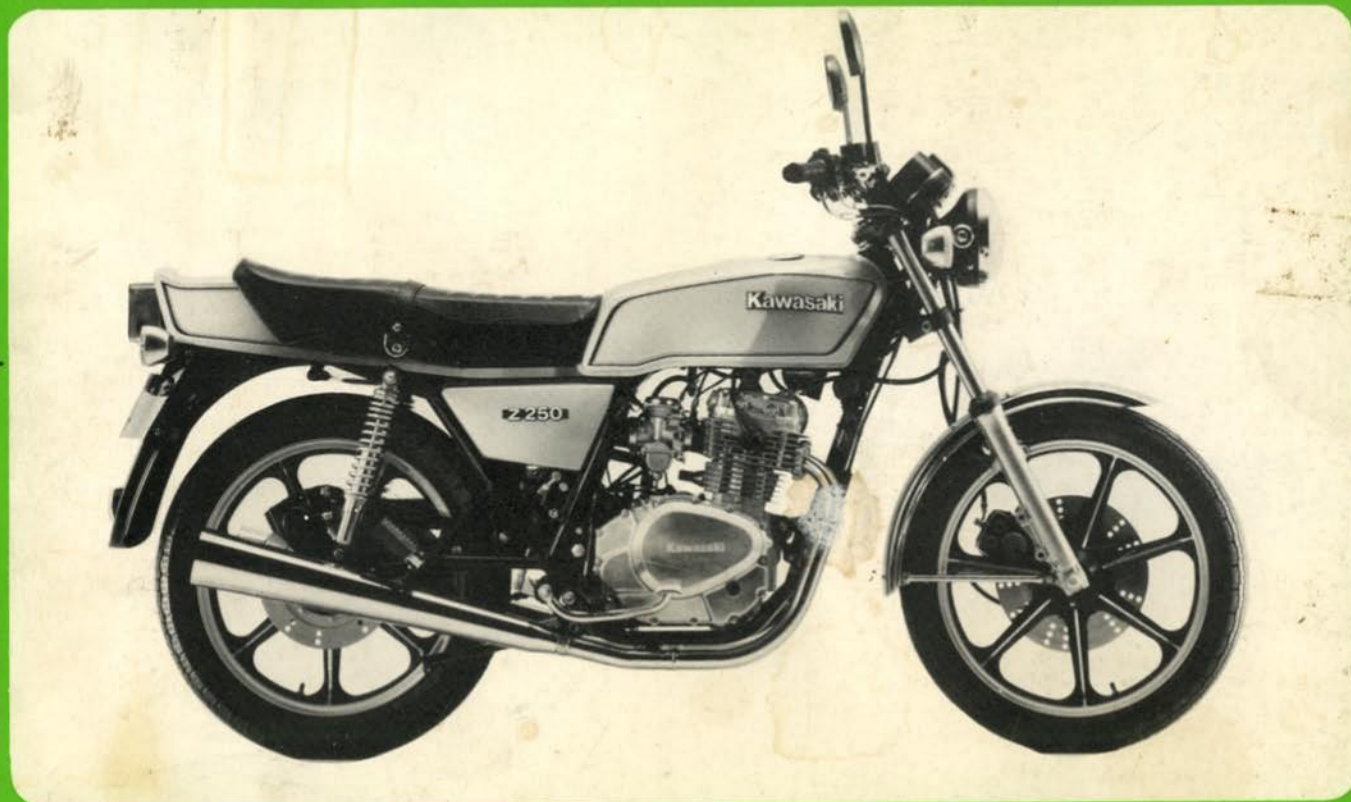

**Motorcycle
Parts Catalog**



Z250-A1

Motorcycle Parts Catalog

PARTS LIST INTRODUCTION

This parts catalog lists parts and subassemblies provided as spare parts.

When it becomes necessary to replace parts, always use KAWASAKI GENUINE PARTS which passed strict inspection which guarantees quality and performance.

1. COMPOSITION OF THE PART NUMBER

1-1 Part Number (Old Structure)

○○○○○ - ○○○ - ○○

Color Code

Production Number

Function Code

(New Structure)

○○○○○ - ○○○○ - ○○

1-2 Standard Hardware Number

○○○ ○ ○○○○ A

ISO Code

Size Number

Material of Surface Treatment Code (Alphabet)

Item Code

2. ABBREVIATIONS

(1) WHEN EXH USE P/No. _____

Abbreviated from the phrase "When exhausted, use P/No. _____" which indicates that the new parts be used for replacement, but old parts in stock may be used until exhausted.

(2) E/No. _____ and Below. E/NO. _____ and Above.

These are applied to the part requested to use only for engines having the serial number _____ and below (or above).

(3) "AR" indicates the part is to be used "as required". It is used mainly for bulk items such as liquid gasket.

(4) "ALT" indicates the part may be used as "alternate", if another part called for that location is not available.

(5) STD	Standard	T	Teeth	t	Thickness
ASSY	Assembly	PR	Ply Rating	I. D.	Inside Diameter
Ref.	Reference	Hex	Hexagonal	O. D.	Outside Diameter
L. H.	Left Hand	L	Length	AR	As Required
R. H.	Right Hand	d	Diameter	C. A.	Cut Away
ALT	Alternate	N. A.	Not Available	W	Width

3. HOW TO ORDER PARTS

Always without fail include three items exactly as listed in this Parts Catalog in your parts order.

(1) Type and Model of motorcycle.

(2) Color Code

Specify the color using color code and name without fail for ordering of painted parts.

Example: 51001-1015-4U TANK, fuel, Candy Emerald Green

(3) Part Name

Part not shown disassembled in the illustrations of this Parts Catalog are not sold separately; only the complete units or next higher assemblies illustrated, are supplied as spare parts.

Please be advised to order the parts in typescript instead of hand-writing to avoid the mistake expected.

KAWASAKI HEAVY INDUSTRIES, LTD.
MOTORCYCLE DIVISION

1-1, Kawasaki-cho, Akashi, Hyogo Pref. Japan

Part No. 99910-1051-01 ©

Z250-A1

Right Side View



Left Side View




● Color	Fuel Tank	Metallic Stardust Silver Candy Emerald Green
	Front Fender	Chrome Plating
● Engine No.	KZ250AE000101 to Subsequent	
● Frame No.	KZ250A-000101 to Subsequent	
● Owner's Manual No.	99922-1027-01	
● A & P Manual No.	99939-1011-01	
● Service Manual No.	99924-1019-01	



Z250-A1

1. Cylinder Head Cover, Cylinder Head


..... 1

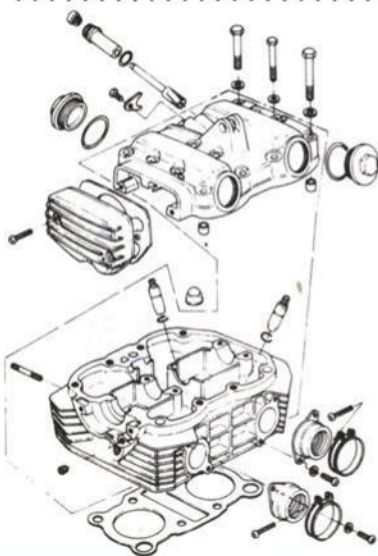


2. Rocker Arm, Valves 2




3. Camshaft, Cam Chain, Tensioner . 3

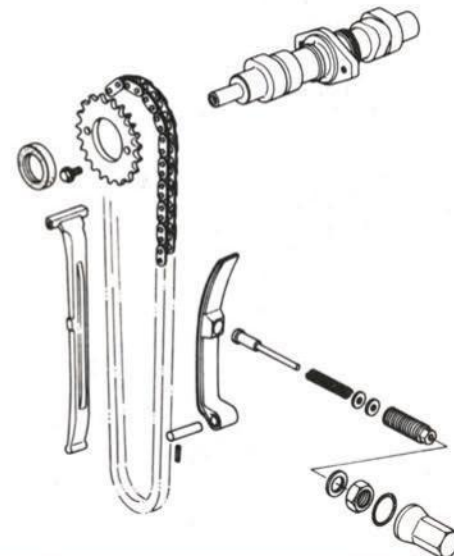


4. Cylinder, Piston, Crankshaft 4

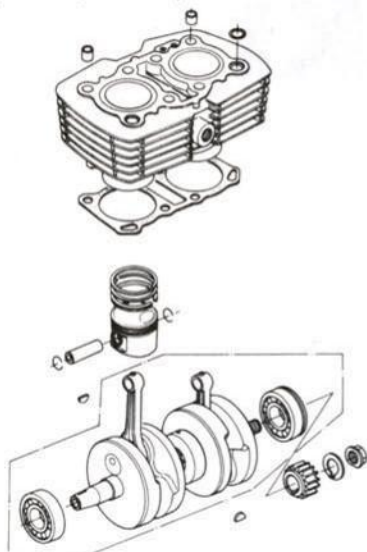


6. Crankcase Bolts, Dowel Pins, "O" Ring, Nozzle, Position Rings . . 6

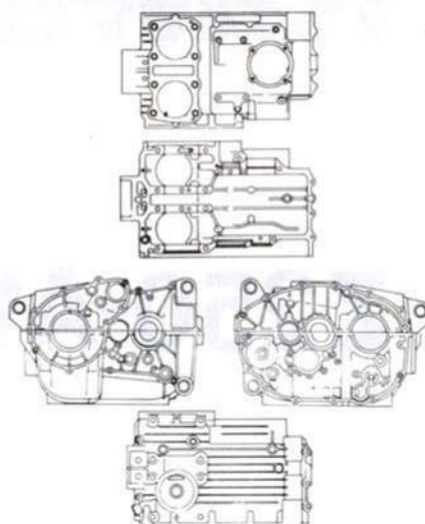


8. Transmission Gears 8

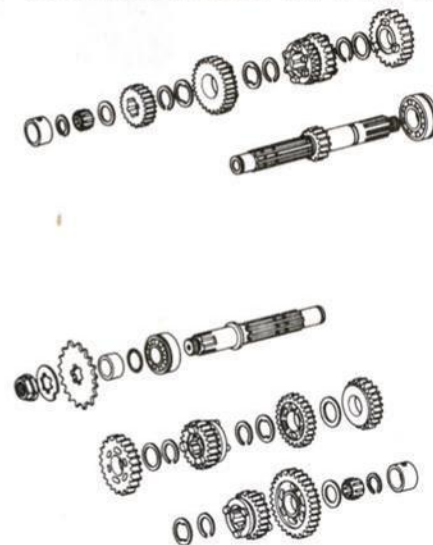


5. Crankcase 5

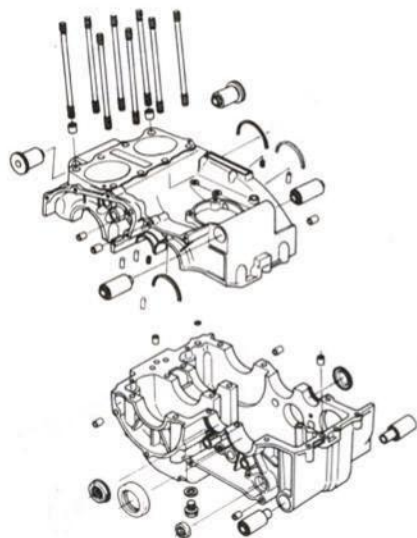


7. Clutch 7

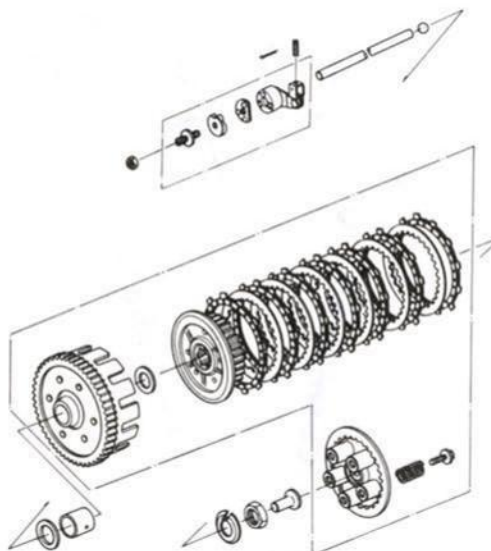


9. Gear Shift Drum, Shift Fork 9

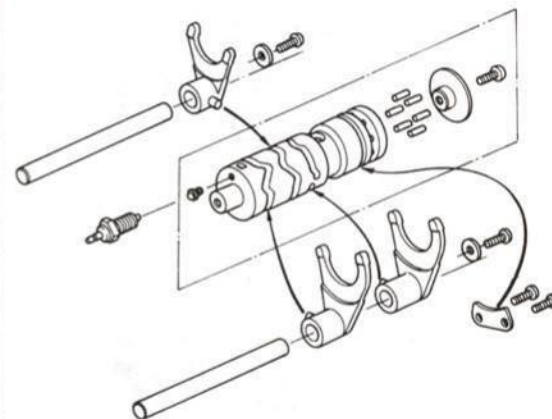


10. Gear Change Mechanism 10

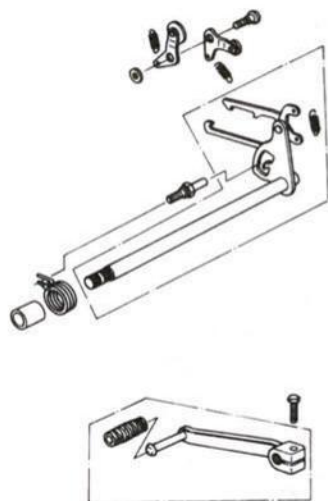


12. Carburetor "A" 12

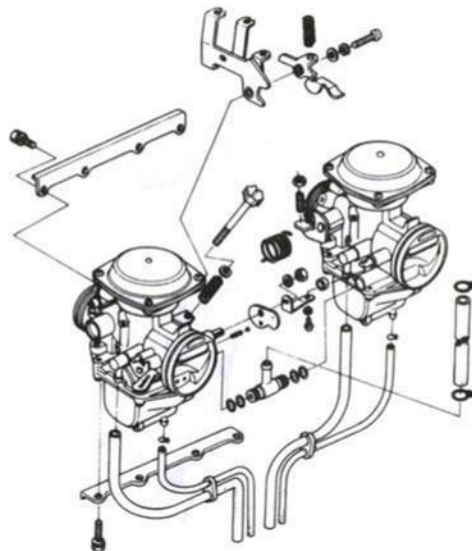


14. Oil Pump, Oil Filter 14

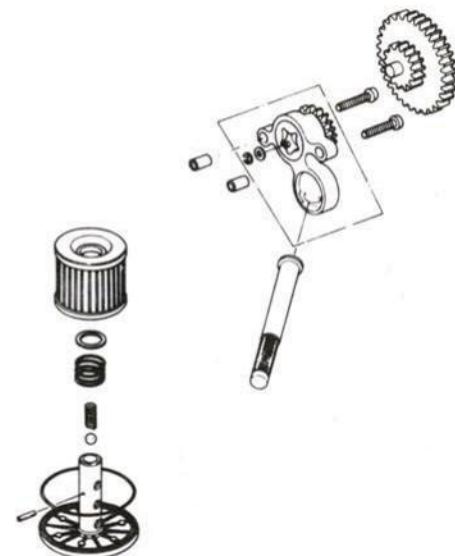


11. Engine Covers 11

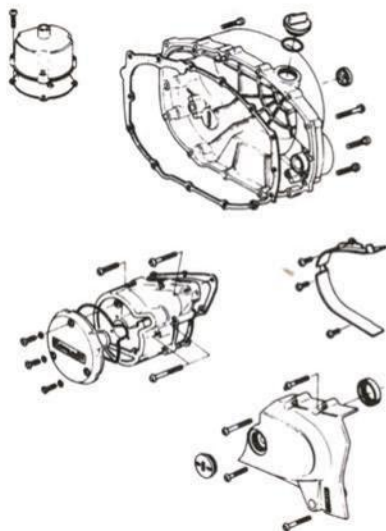


13. Carburetor "B" 13

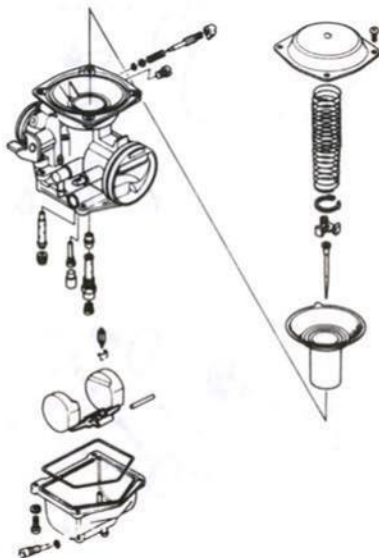


15. Air Cleaner 15

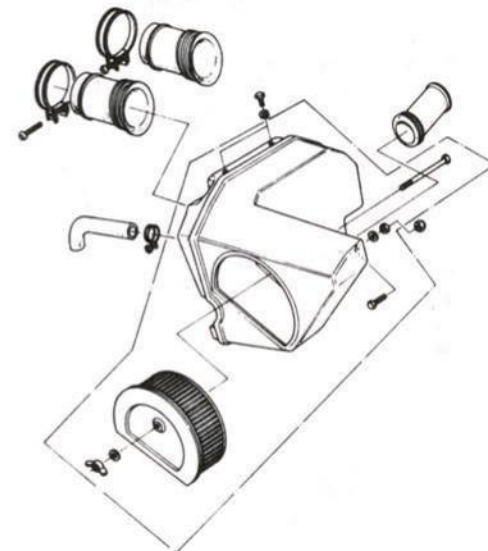


16. Mufflers 16

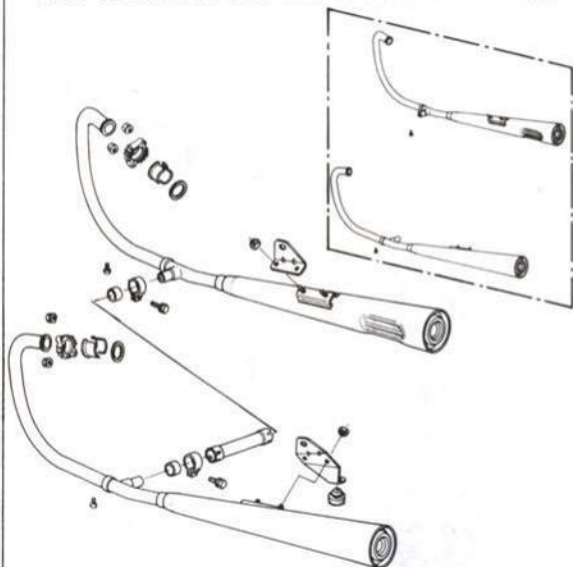


18. Generator, Regulator 18

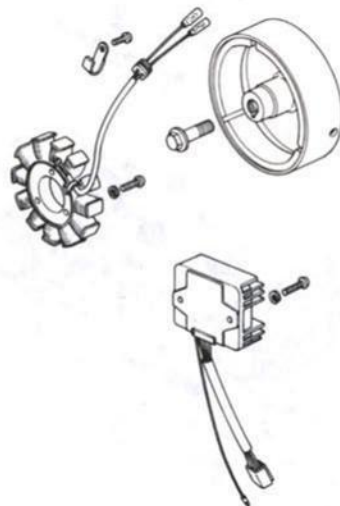


20. Frame 21

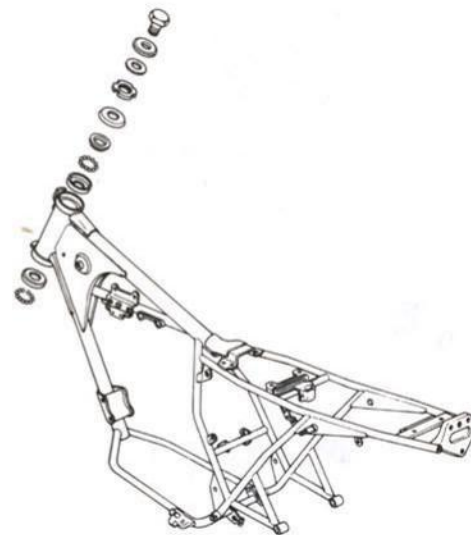


17. Ignition Coil, Contact Breaker, Condenser, Advancer.....17

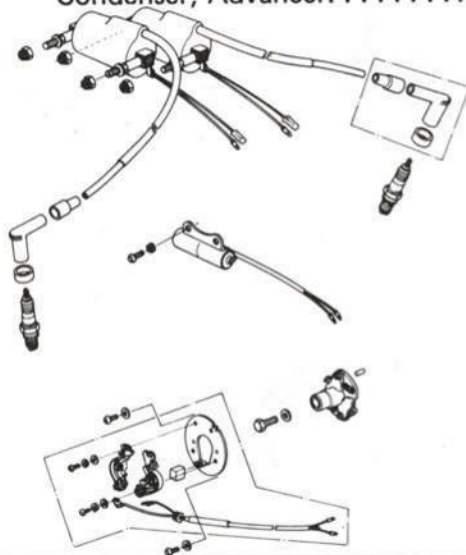


19. Starter Motor, Magnetic Switch, Oneway Clutch 19

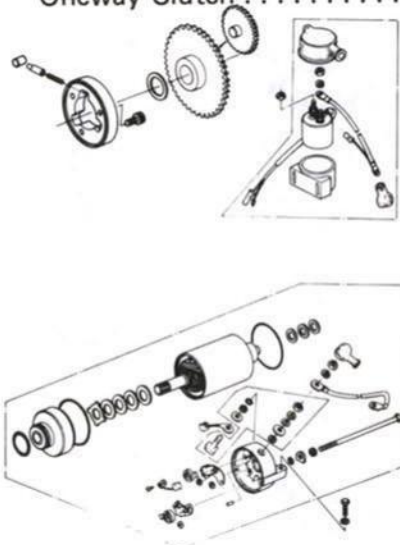


21. Frame Fitting, Battery Case, Electro Base Bracket 22

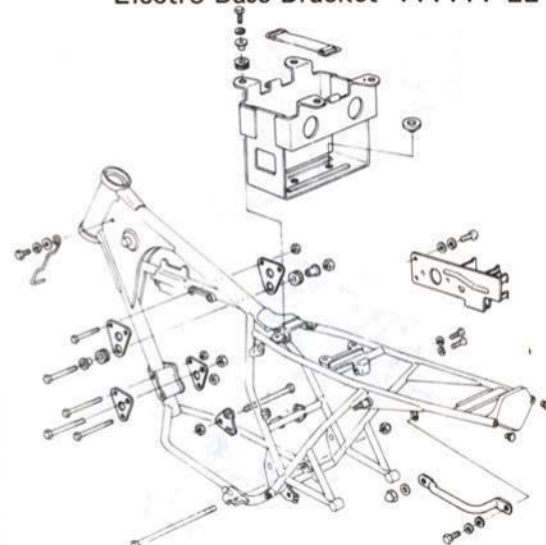


22. Swing Arm, Rear Shock Absorber 23

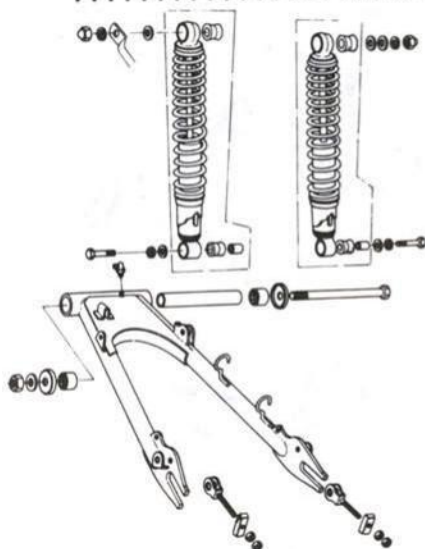


24. Stands, Brake Pedal, Torque Link 25

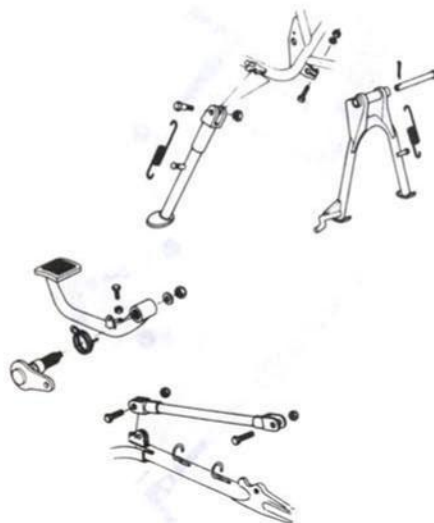


26. Front Fork 27

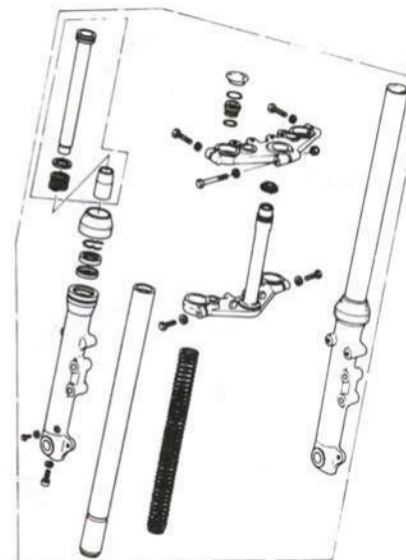


23. Footrests 24

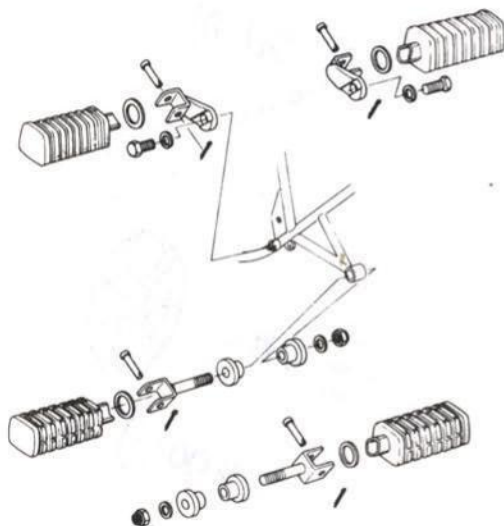

25. Handlebar, Grips, Rear View Mirror 26

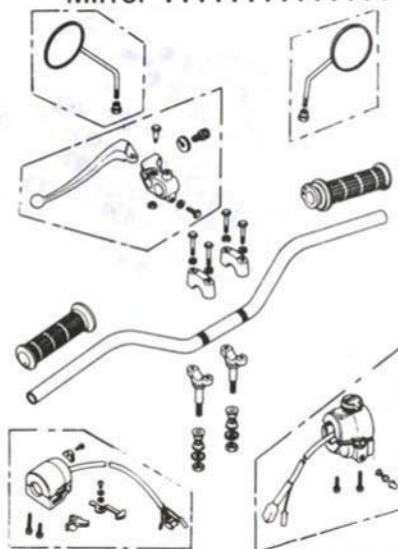


27. Fenders 28

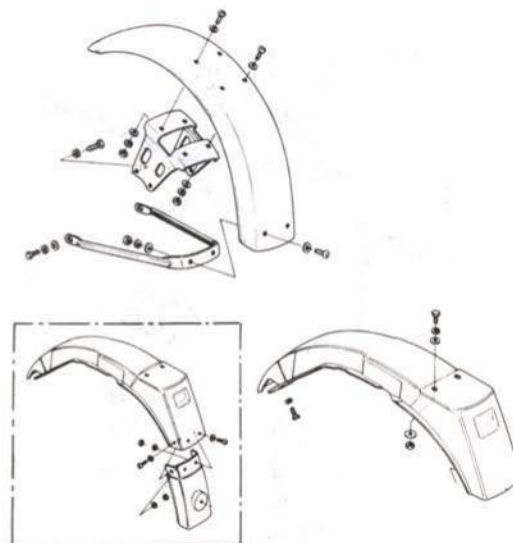


28. Wheels 29




30. Rear Master Cylinder 31.

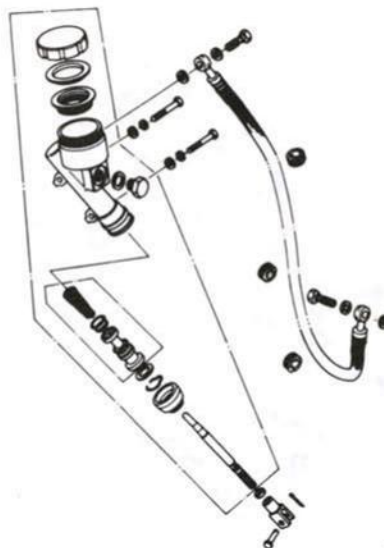


32. Rear Caliper 33.

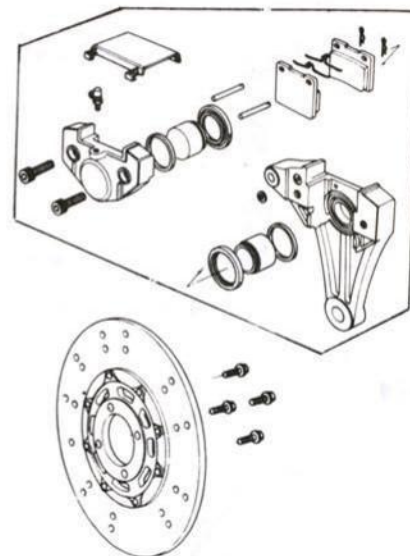


29. Front Master Cylinder 30

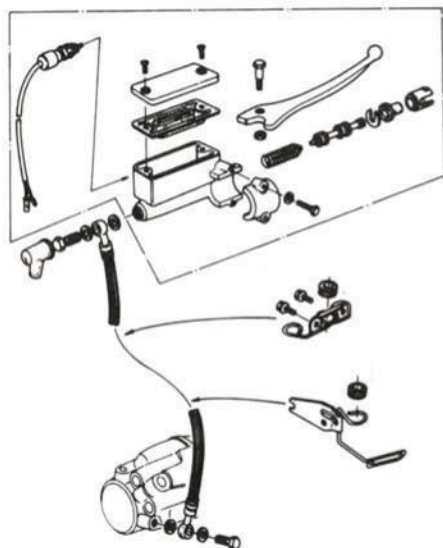


31. Front Caliper 32

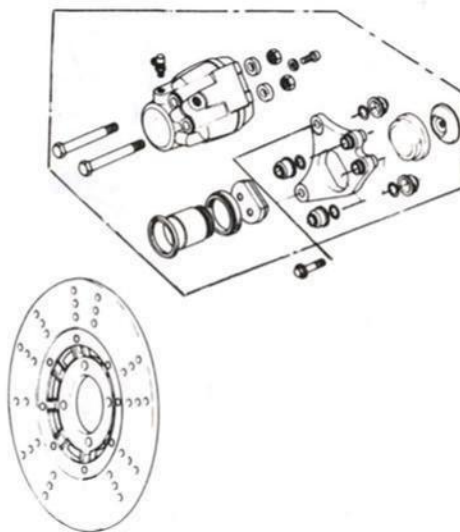


33. Front Hub 34

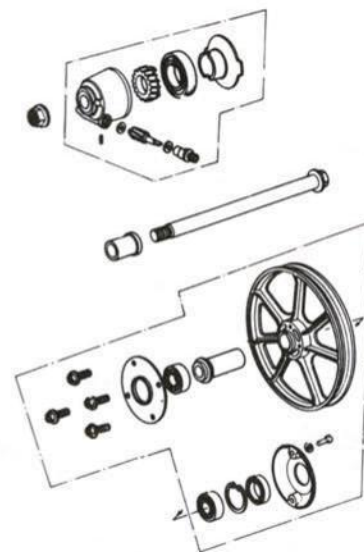

34. Rear Hub 35

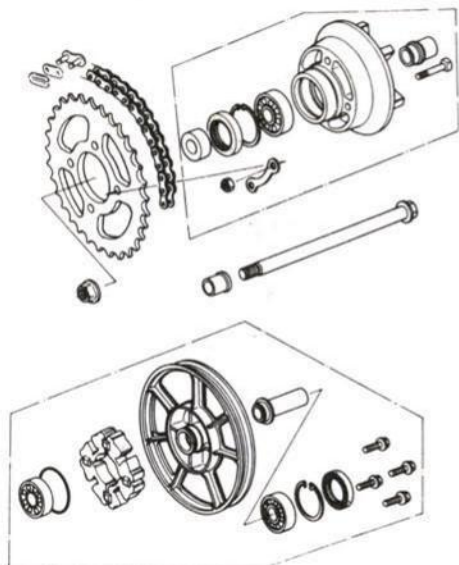


36. Side Covers, Chain Cover 37

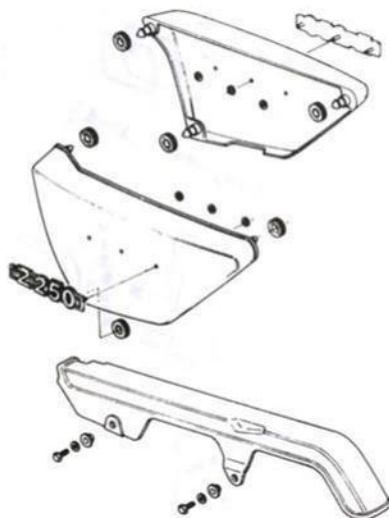


38. Cables 40




35. Fuel Tank 36

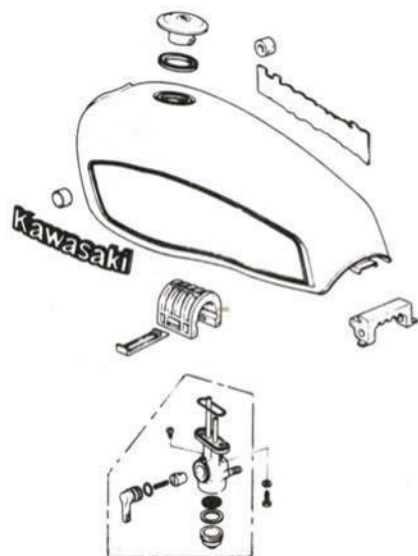


37. Dual Seat, Seat Cover 38

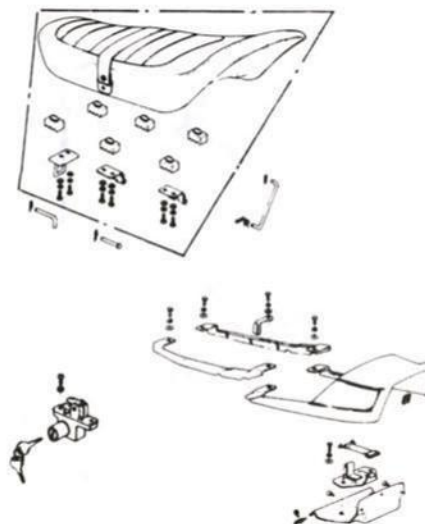


39. Speedometer, Tachometer 41

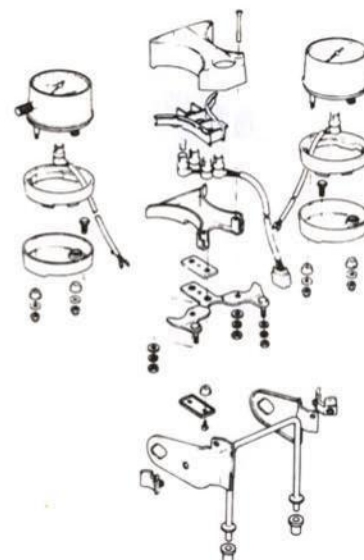


40. Head Lamp 42

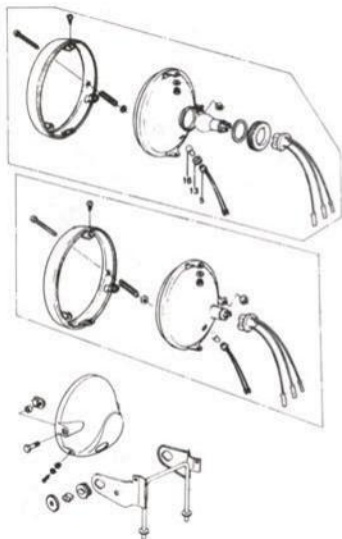


42. Turn Signal Lamp 44

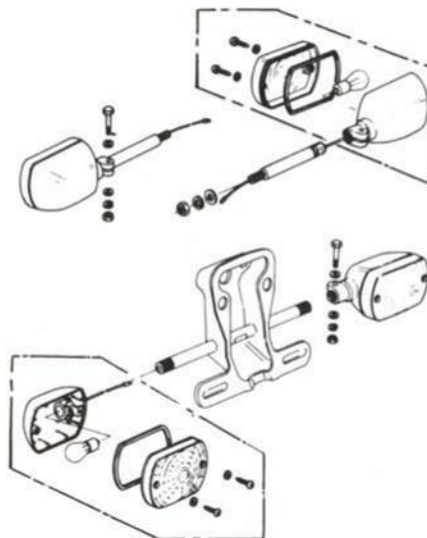


44. Electrical Equipments 46

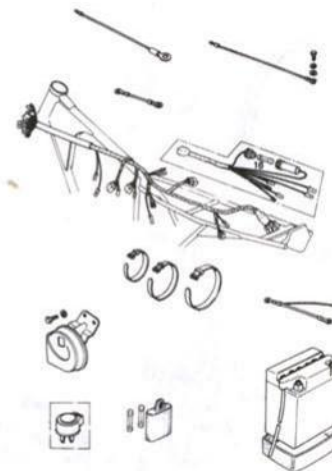


41. Tail Lamp 43

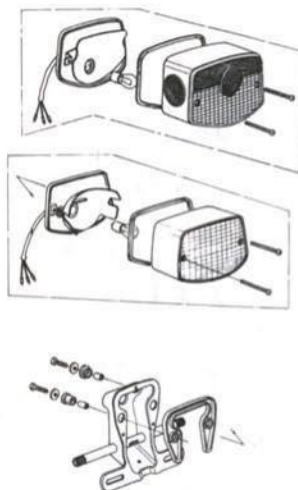


43. Ignition Switch, Brake Lamp Switch, Reflector 45

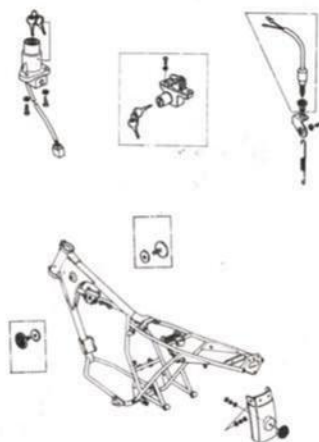


45. Tools 47

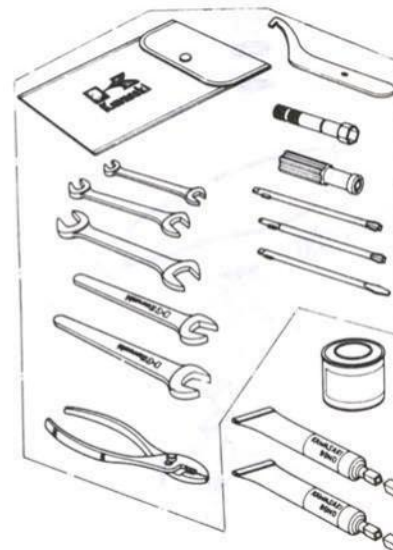

46. Special Service Tools "A" 48

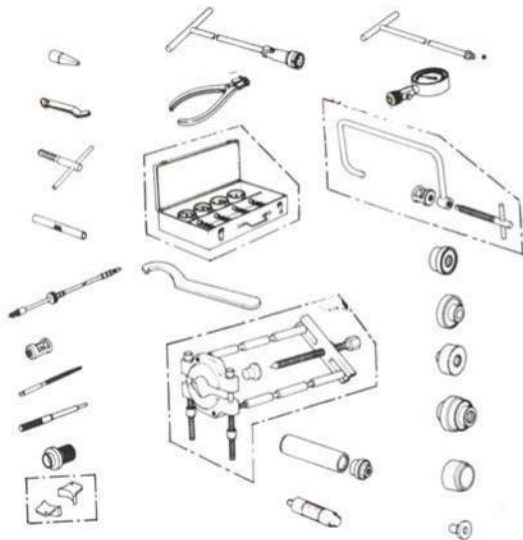


47. Special Service Tools "B" 49

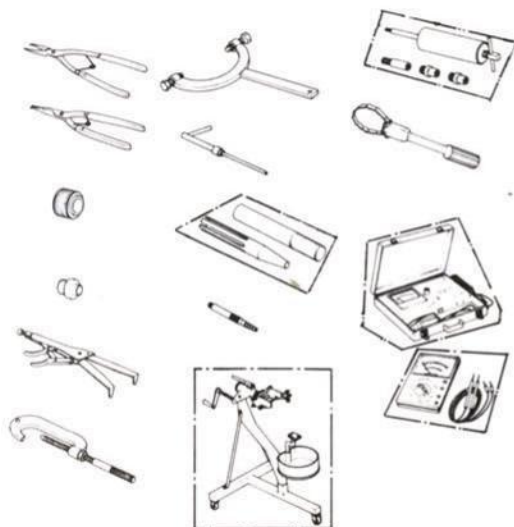

1. Cylinder Head Cover, Cylinder Head


Rev. No.		Date	
----------	--	------	--

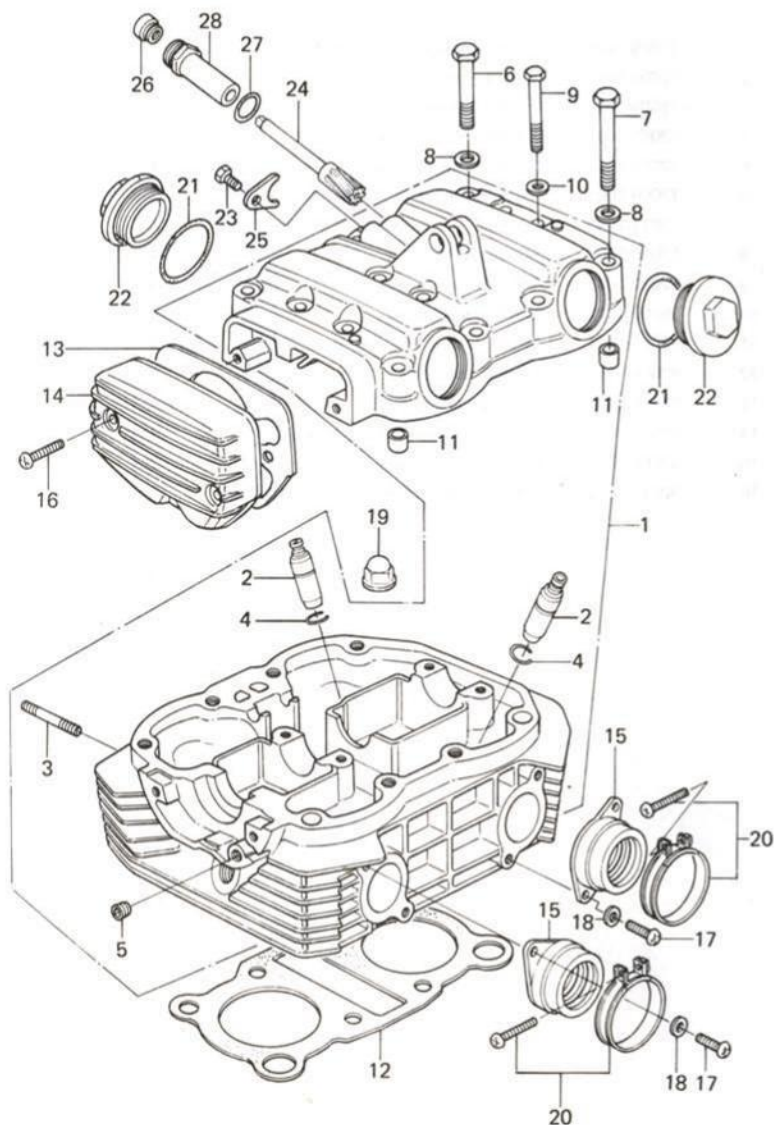

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	11002-5002	CYLINDER HEAD ASSY, Flat Black	1	
2	49002-1006	GUIDE, valve	4	
3	92004-049	STUD, 6 x 30	4	
4	92036-023	CIRCLIP, valve guide	4	
5	92066-059	PLUG, oil line	1	
6	110G0850	BOLT, hex head, 8 x 50	6	
7	110G0860	BOLT, hex head, 8 x 60	2	
8	410B0800	WASHER, plain, 8 m/m	8	
9	110G0650	BOLT, hex head, 6 x 50	6	
10	411B0600	WASHER, plain, 6 m/m	6	
11	92042-031	PIN, dowel, 12 x 9.2 x 14L	2	
12	11004-1009	GASKET, cylinder head	1	
13	11009-1067	GASKET, breaker	1	
14	14025-1047	COVER, breaker, Flat Black	1	
15	16065-1013	HOLDER, carburetor	2	
16	220B0625	SCREW, pan head, 6 x 25	2	
17	220B0618	SCREW, pan head, 6 x 18	4	
18	410B0600	WASHER, plain, 6 m/m	4	
19	92015-1037	NUT, cap, 8 m/m	8	
20	92037-1021	CLAMP, carburetor holder	2	
21	92055-1005	"O" RING, 36 m/m, valve clearance adjust	4	
22	92066-1006	PLUG, valve clearance adjust	4	
23	110B0614	BOLT, hex head, 6 x 14	1	
24	41060-1020	GEAR, tachometer screw, 10T	1	
25	92037-1030	CLAMP, tachometer gear bushing	1	
26	92050-075	OIL SEAL, tachometer gear bushing	1	
27	92055-1021	"O" RING, 13 m/m, tachometer gear	1	
28	92087-1001	BUSHING, tachometer gear	1	


2. Rocker Arm, Valves

Rev. No.		Date	
----------	--	------	--

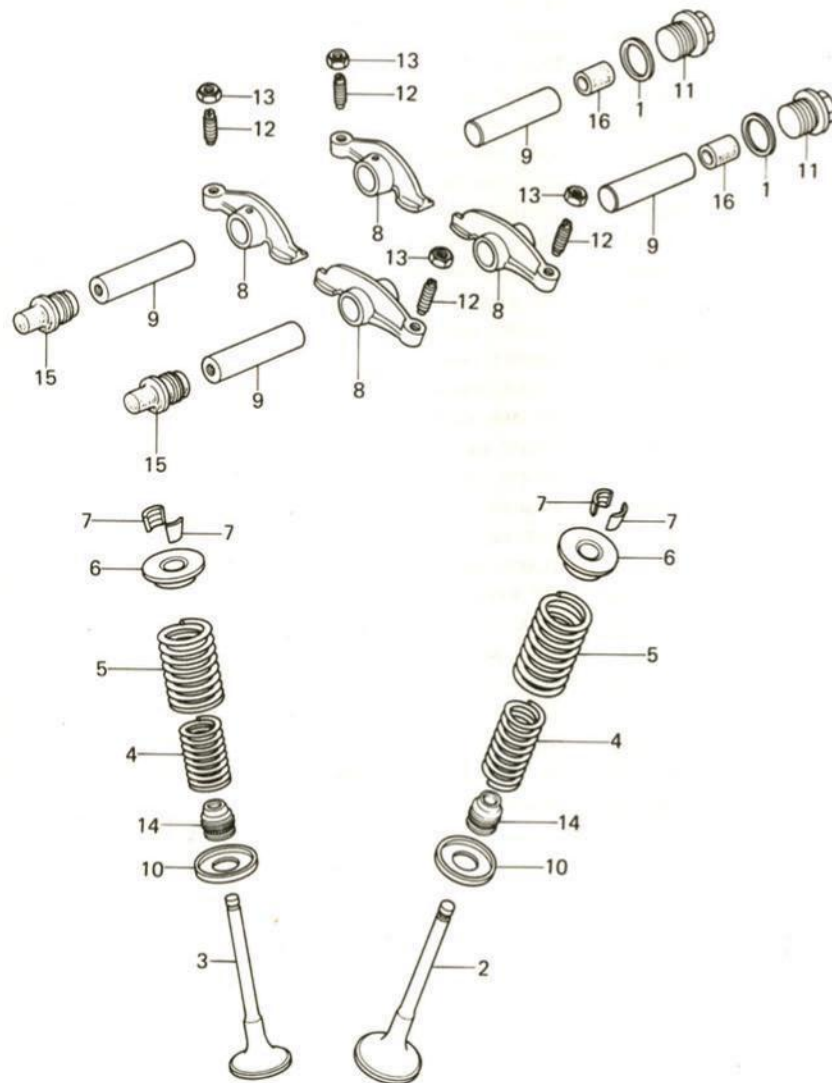

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	11009-1106	GASKET, rocker shaft, R. H.	2	
2	12004-1003	VALVE, intake	2	
3	12005-1003	VALVE, exhaust	2	
4	12007-1001	SPRING, valve, inner	4	
5	12007-1002	SPRING, valve, outer	4	
6	12009-1001	RETAINER, valve spring	4	
7	12011-1002	COLLET, split keeper	8	
8	12016-1002	ARM, rocker	4	
9	12020-1002	SHAFT, rocker arm	4	
10	16007-1012	SEAT, valve spring	4	
11	92001-1114	BOLT, rocker shaft, R. H.	2	
12	92009-1032	SCREW, adjusting	4	
13	92016-061	NUT, adjusting	4	
14	92049-1016	OIL SEAL, RVC1-5.5 x 8.5 x 8.0	4	
15	92066-1021	PLUG, rocker shaft, L. H.	2	
16	92075-1093	DAMPER RUBBER, rocker shaft, R. H.	2	

3. Camshaft, Cam Chain, Tensioner

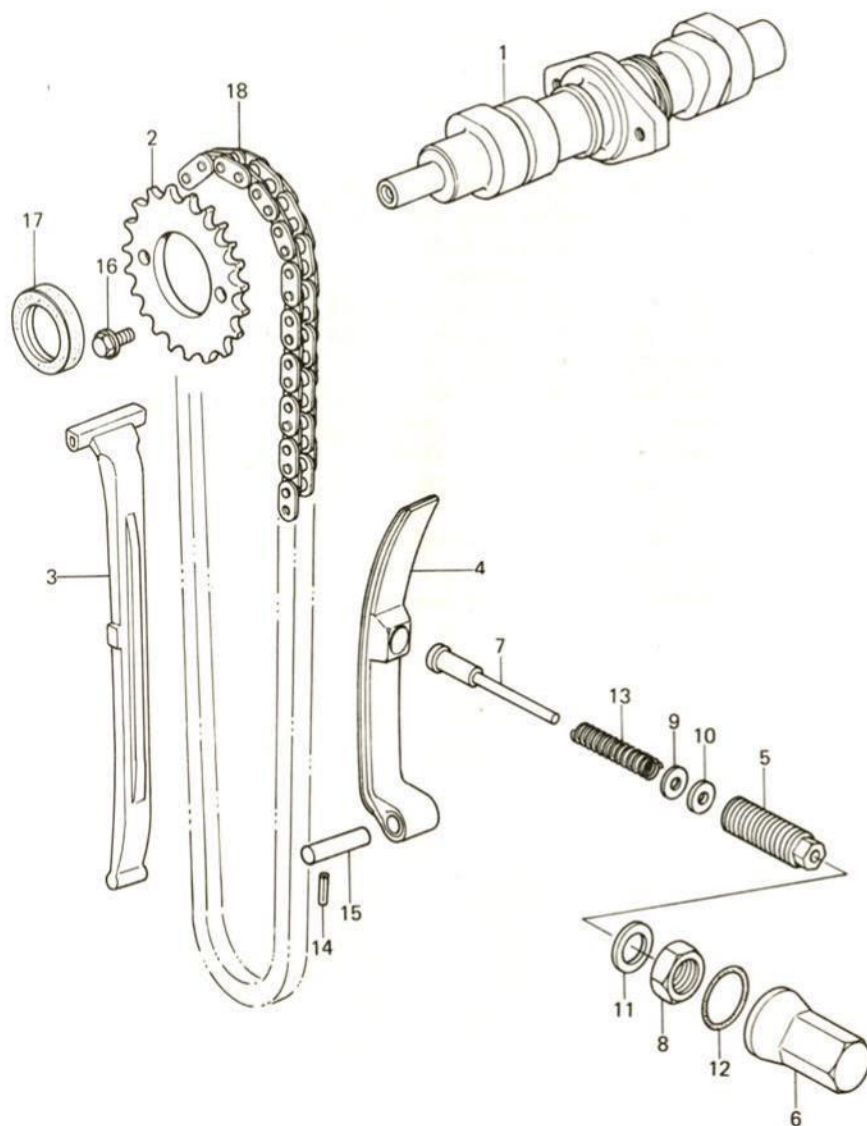


Rev. No.		Date	
----------	--	------	--

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	12044-1002	SHAFT, cam	1	
2	12046-1008	SPROCKET, cam, 30T	1	
3	12053-1020	GUIDE A, cam chain	1	
4	12053-1021	GUIDE B, cam chain	1	
5	92001-1271	GUIDE, push rod	1	
6	12064-005	CAP, chain tensioner	1	
7	13116-1003	ROD, push	1	
8	92016-054	NUT, lock, 14 m/m	1	
9	92022-1029	WASHER, plain, $\phi 5 \times \phi 12 \times 1t$	1	
10	92022-1030	WASHER, plain, $\phi 4.5 \times \phi 12 \times 2t$	1	
11	92022-1040	WASHER, plain, $\phi 14 \times \phi 20 \times 2t$	1	
12	92055-018	"O" RING, 22 m/m	1	
13	92081-131	SPRING, chain tensioner	1	
14	551A0316	PIN, dowel, 3 x 16	1	
15	551A0840	PIN, dowel, 8 x 40	1	
16	92003-208	BOLT, sprocket fitting, 6 x 11	2	
17	92050-065	OIL SEAL, S25407	1	
18	92057-1015	CHAIN, cam, BF05M x 82L	1	

4. Cylinder, Piston, Crankshaft


Rev. No.		Date	
----------	--	------	--

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	11006-1001	CYLINDER ASSY, Flat Black	1	
2	11009-1064	GASKET, cylinder	1	
3	92042-031	PIN, dowel, 12 m/m	2	
4	92055-098	"O" RING	2	
5	13001-1012	PISTON, engine, S.T.D.	2	
	13027-1009	PISTON, engine, 0.040" O/S	(2)	
	13029-1007	PISTON, engine, 0.020" O/S	(2)	
6	13002-1006	PIN, piston, 15 x 10 x 43	2	
7	13008-1003	RING SET, piston, S.T.D.	2	
	13024-1003	RING SET, piston, 0.040" O/S	(2)	
	13025-1003	RING SET, piston, 0.020" O/S	(2)	
8	92036-005	CIRCLIP, piston pin	4	
9	13031-1013	CRANKSHAFT ASSY	1	
10	92045-1011	BEARING, ball, # 6305	1	
11	92045-1012	BEARING, ball, # 6305N	1	
12	13097-1009	GEAR, primary, 19T	1	
13	42081612	WASHER, lock, 16 m/m	1	
14	510A5100	KEY, woodruff, primary gear	1	
15	92015-1046	NUT, 16 m/m, primary gear	1	
16	92038-001	KEY, woodruff, generator	1	

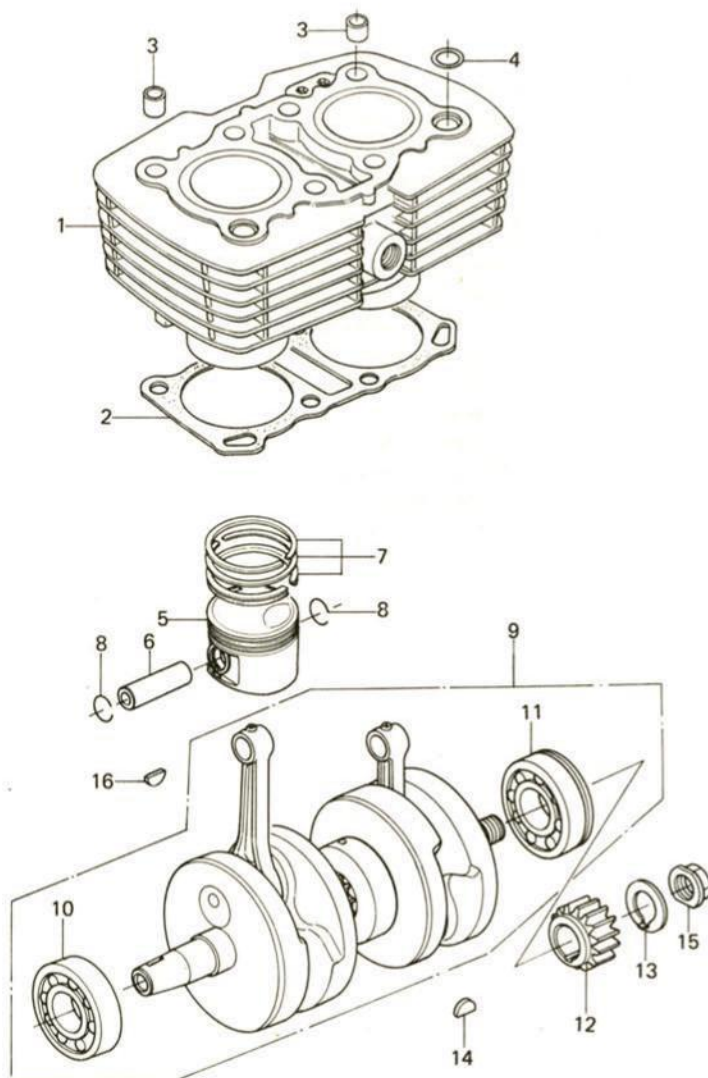

5. Crankcase

Rev. No.		Date	
----------	--	------	--

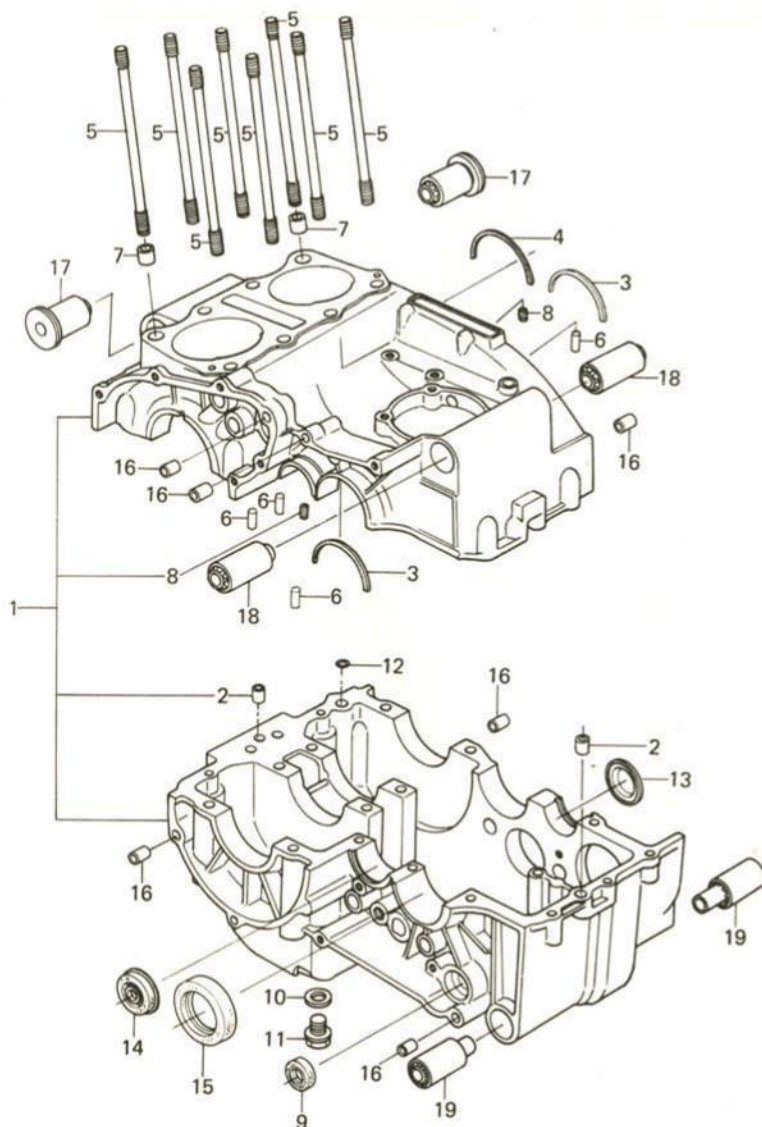


Ref. No.	Part No.	Part Name	Quantity	Remarks
1	14001-5029	CRANKCASE SET, Flat Black	1	
2*	92043-1037	PIN, dowel, 8.2 x 10 x 14	2	
3	14013-004	RING, positioning, 55 m/m	2	
4	14013-1004	RING, positioning, 65 m/m	1	
5*	92004-1016	STUD, 8 x 146L	8	
6	92042-016	PIN, dowel, 6 m/m	4	
7*	92042-031	PIN, dowel, 12 m/m	2	
8*	92062-011	NOZZLE, oil line	2	
9	92051-005	OIL SEAL, TB 13 x 22 x 5.5	1	
10	92065-097	GASKET, drain plug	1	
11	92066-053	PLUG, drain	1	
12	67082010	"O" RING, 10 m/m	1	
13	92049-1019	OIL SEAL, output shaft, R. H.	1	
14	92049-1041	OIL SEAL, push rod	1	
15	92050-024	OIL SEAL, SC325210	1	
16	92042-007	PIN, dowel, 6.2 x 8 x 14	6	
17	92075-1081	ABSORBER, front upper	2	
18	92075-1082	ABSORBER, rear upper	2	
19	92075-1083	ABSORBER, rear lower	2	

Asterisk (*) marked parts are included in crankcase set.


(Ref. Crankcase Bolts, Dowel Pins, "O" Ring, Nozzle, Position Rings)

6. Crankcase Bolts, Dowel Pins, "O" Ring, Nozzle, Position Rings

Rev. No.		Date	
----------	--	------	--

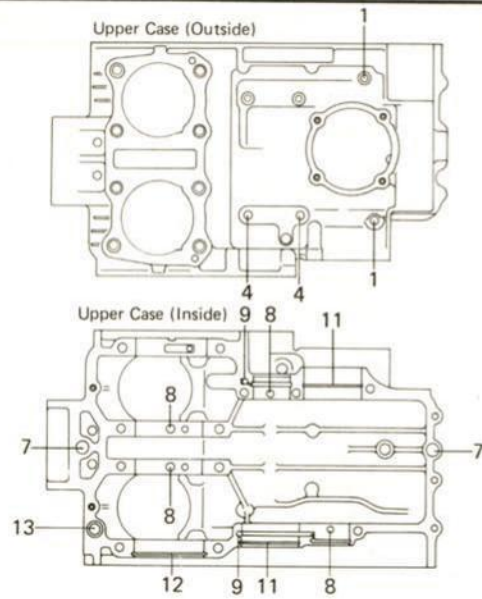


Ref. No.	Part No.	Part Name	Quantity	Remarks
1	130G0690	BOLT, flanged, 6 x 90	2	
2	92001-1115	BOLT, flanged, 8 x 115	1	
3	92001-1116	BOLT, flanged, 8 x 140	1	
4	92003-110	BOLT, hex head, 6 x 54	2	
5	92003-159	BOLT, hex head, 6 x 34	5	
6	92003-167	BOLT, hex head, 8 x 90	6	
7	92043-1037	PIN, dowel, 10 x 14	(2)	Ref. Crankcase
8	92042-016	PIN, dowel, 6 m/m	(4)	
9	92062-011	NOZZLE, oil line	(2)	
10	92042-007	PIN, dowel, 8 x 14	(6)	
11	14013-004	RING, positioning, 55 m/m	(2)	
12	14013-1004	RING, positioning, 65 m/m	(1)	
13	670B2010	"O" RING, 10 m/m	(1)	

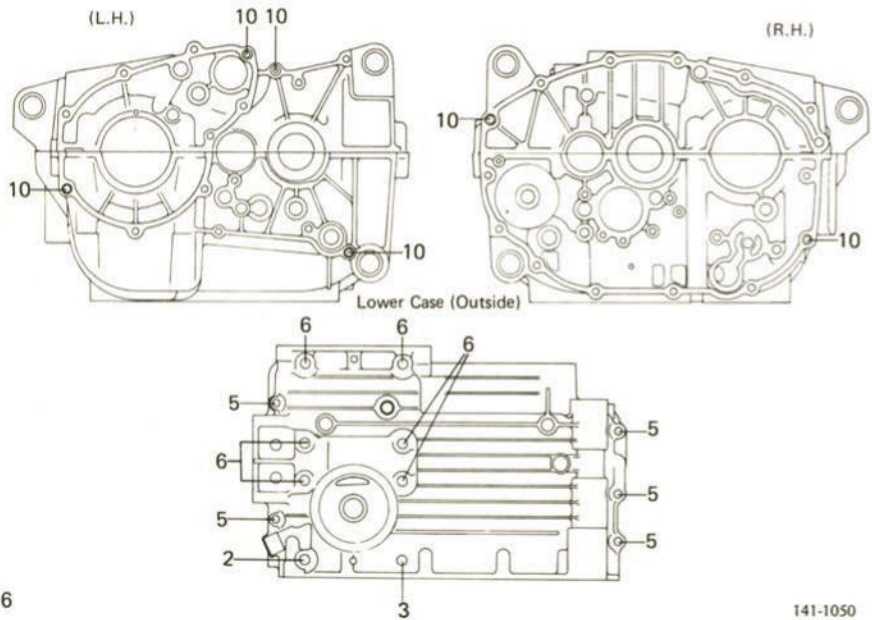



7. Clutch

Rev. No.	Date
----------	------

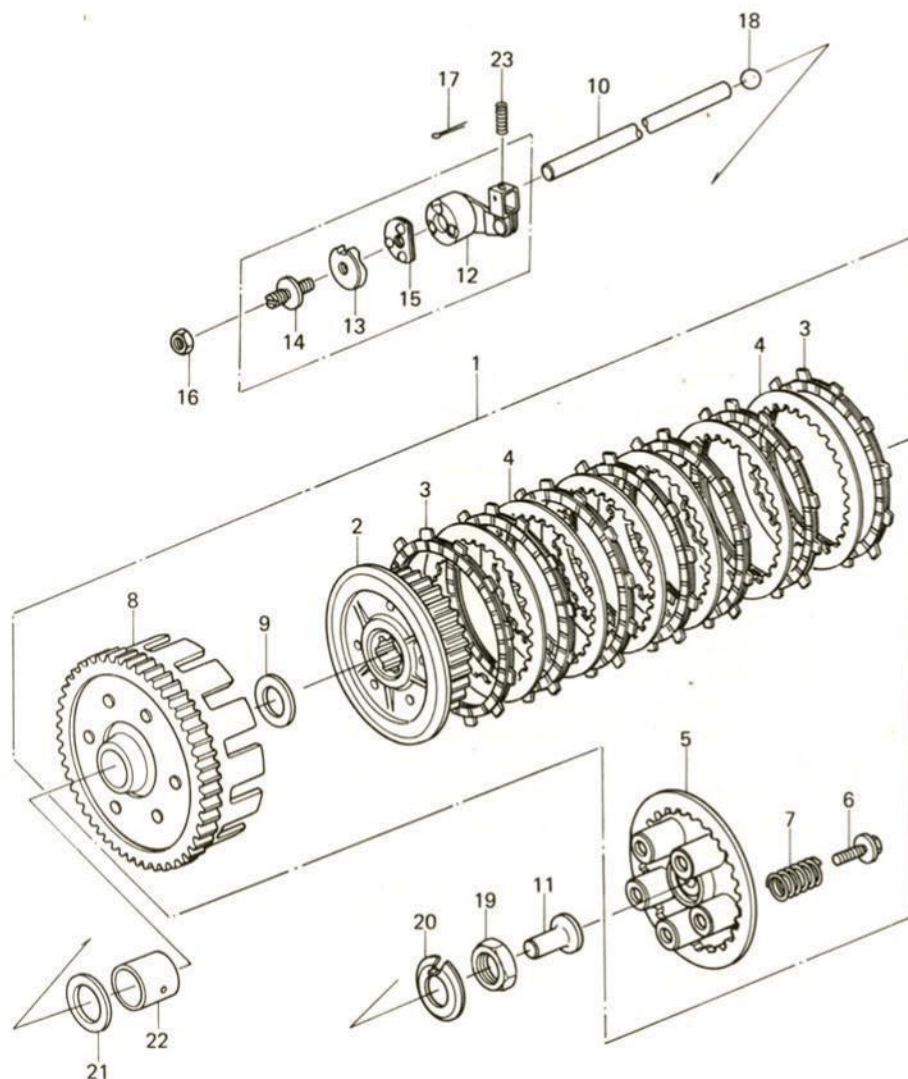

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	13081-1030	CLUTCH ASSY	1	
2	13087-1005	HUB, clutch	1	
3	13088-041	PLATE, clutch friction	7	
4	13089-1001	PLATE, clutch steel	6	
5	13187-009	PLATE, clutch operating	1	
6	92001-1066	BOLT, clutch spring, 6 x 18	5	
7	92081-1078	SPRING, clutch	5	
8	13095-1020	HOUSING, clutch	1	
9	92022-1075	WASHER, clutch thrust, 25.5 x 38 x 2t	1	
10	13116-1009	ROD, clutch push, long, 7 x 234ℓ	1	
11	13116-1010	ROD, clutch pusher	1	
12	13102-1004	RELEASE, clutch	1	
13	13119-1003	CAM, release, clutch	1	
14	92009-1009	SCREW, slotted, 8 m/m	1	
15	92045-1001	BEARING, ball, clutch release	1	
16	318B0800	NUT, 8 m/m	1	
17	550D1615	PIN, cotter, 1.6 x 15	1	
18	600A1200	BALL, steel, 3/8"	1	
19	92016-028	NUT, 20 m/m	1	
20	92022-1142	WASHER, lock, 20 m/m	1	
21	92022-145	WASHER, clutch thrust	1	
22	92026-1052	BUSHING, clutch, $\phi 25 \times \phi 30 \times 30.5$	1	
23	92081-069	SPRING, clutch release	1	

8. Transmission Gears

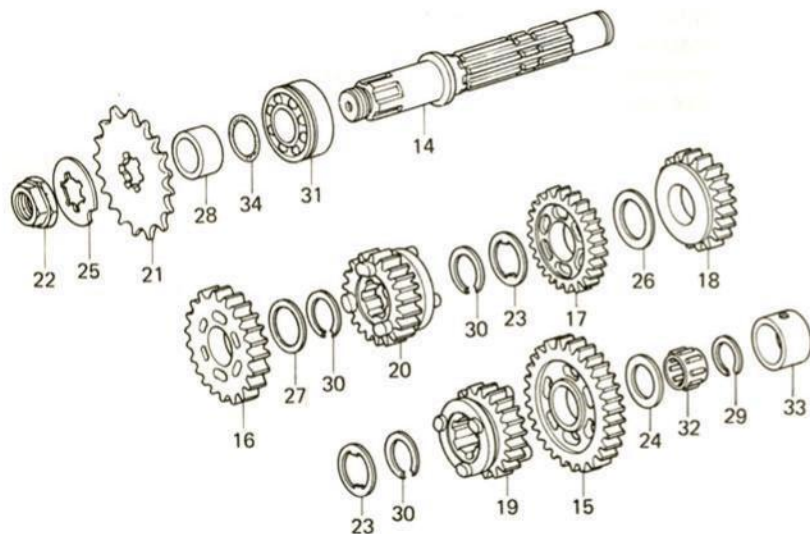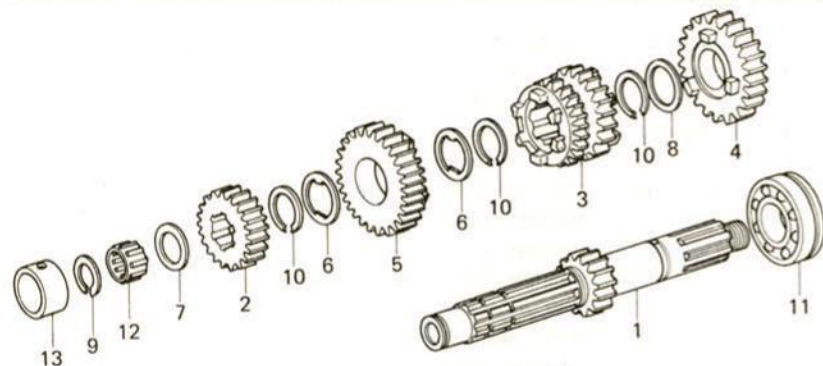


Rev. No.		Date		
Ref. No.	Part No.	Part Name	Quantity	Remarks
1	13127-1009	SHAFT, drive, 15T	1	
2	13129-1086	2ND GEAR, drive, 19T	1	
3	13129-1087	3RD & 4TH GEAR, drive, 22T x 25T	1	
4	13129-1088	5TH GEAR, drive, 27T	1	
5	13129-1089	TOP GEAR, drive, 28T	1	
6	92022-1072	WASHER, lock, 1.0t	2	
7	92022-112	WASHER, plain, 20.5 x 30 x 1.0, steel	1	
8	92022-159	WASHER, plain, 25.3 x 30 x 0.5	1	
9	92033-015	CIRCLIP, 19 m/m	1	
10	92033-026	CIRCLIP, 23 m/m	3	
11	92045-1013	BEARING, ball, # 6205NX3	1	
12	92046-044	BEARING, needle, 20R-2513P	1	
13	92048-1003	RACE, needle bearing, 25 x 33 x 14	1	
14	13128-1010	SHAFT, output	1	
15	13129-1090	LOW GEAR, output, 39T	1	
16	13129-1091	2ND GEAR, output, 34T	1	
17	13129-1092	3RD GEAR, output, 31T	1	
18	13129-1093	4TH GEAR, output, 29T	1	
19	13129-1094	5TH GEAR, output, 27T	1	
20	13129-1095	TOP GEAR, output, 25T	1	
21	13144-1021	ENGINE SPROCKET, 15T	1	
22	92015-1044	NUT, 20 m/m	1	
23	92022-1072	WASHER, lock, 1.0t	2	
24	92022-112	WASHER, plain, 20.5 x 30 x 1.0, steel	1	
25	92022-1128	WASHER, lock	1	
26	92022-145	WASHER, plain, 25.5 x 38 x 1.0, steel	1	
27	92022-159	WASHER, plain, 25.3 x 30 x 0.5	1	
28	92027-1108	COLLAR, engine sprocket, 25 x 32 x 16.5	1	
29	92033-015	CIRCLIP, 19 m/m	1	
30	92033-026	CIRCLIP, 23 m/m	3	
31	92045-1013	BEARING, ball, # 6205NX3	1	
32	92046-044	BEARING, needle, 20R-2513P	1	
33	92048-1003	RACE, needle bearing, 25 x 33 x 14	1	
34	92055-035	"O" RING	1	

9. Gear Shift Drum, Shift Fork

Rev. No.


Date

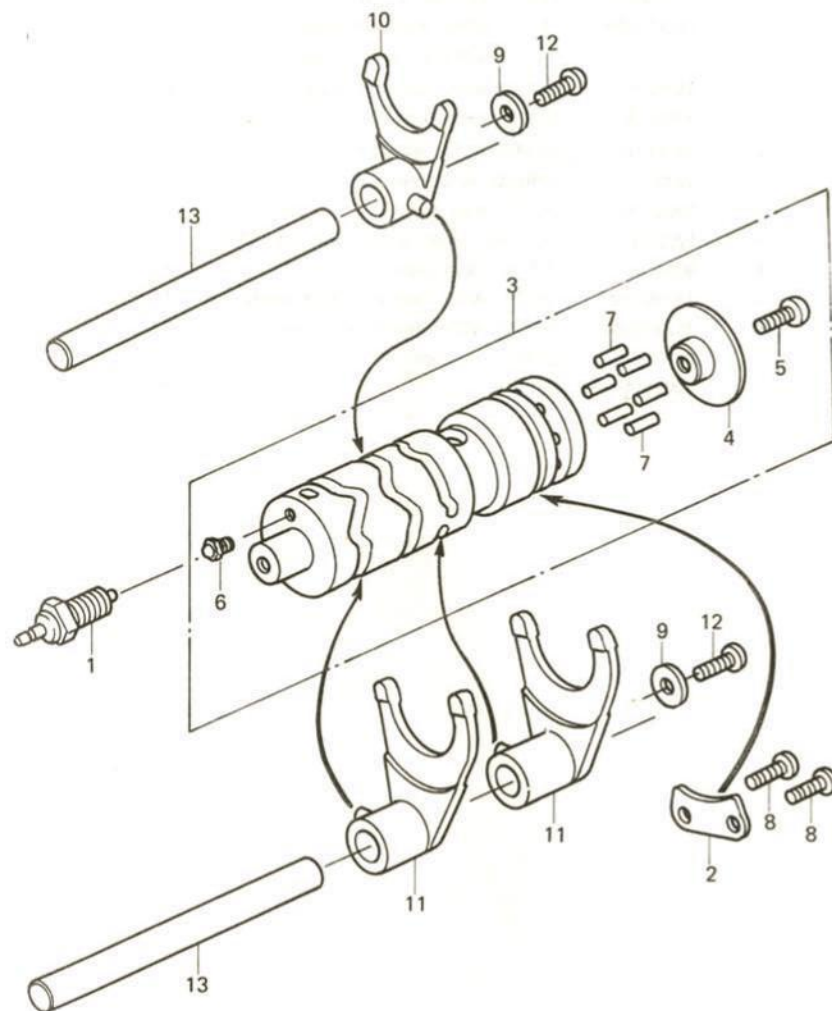

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	13151-1004	SWITCH, neutral indicator	1	
2	13169-012	PLATE, shift drum positioning	1	
3	13239-1016	DRUM ASSY, gear shift	1	
4	13091-1029	HOLDER, gear shift drum	1	
5	22080614	SCREW, pan head, 6 x 14	1	
6	92001-1215	BOLT, neutral point, 4 x 16	1	
7	92042-014	PIN, gear shift drum	6	
8	22080614	SCREW, pan head, 6 x 14	2	
9	13091-011	HOLDER, shift rod	2	
10	13140-1017	SHIFT FORK, gear shift, drive	1	
11	13140-1018	SHIFT FORK, gear shift, output	2	
12	22080614	SCREW, pan head, 6 x 14	2	
13	49047-1007	ROD, shift, 12 x 133ℓ	2	

10. Gear Change Mechanism





Rev. No.		Date	
----------	--	------	--

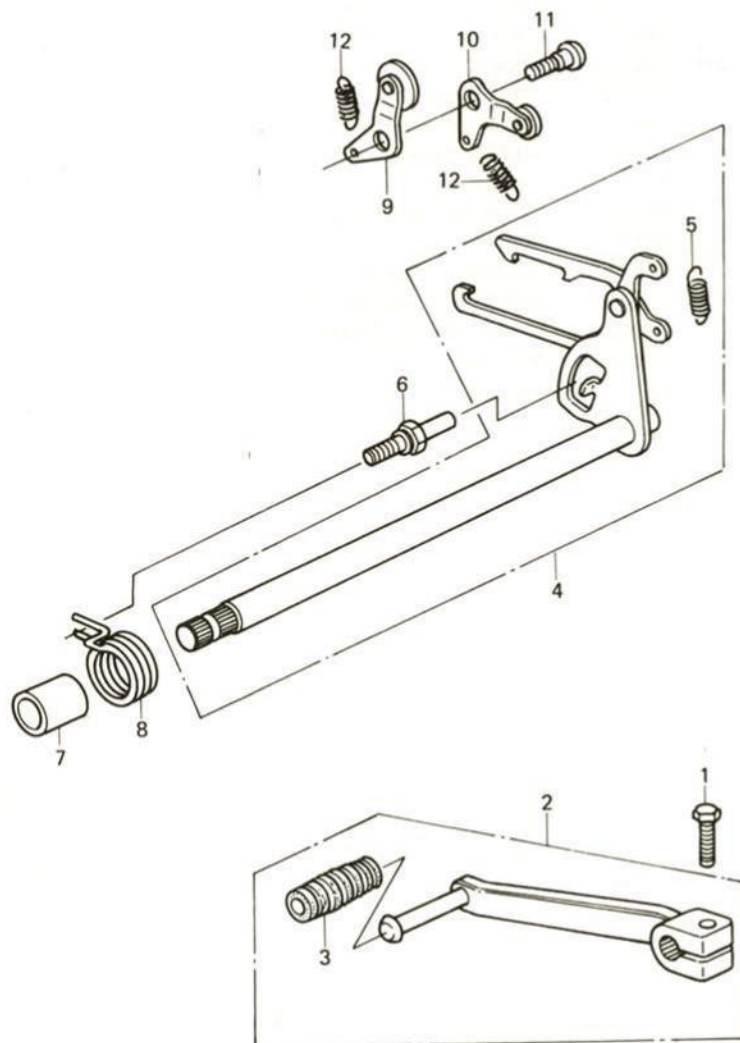

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	110G0620	BOLT, hex head, 6 x 20	1	
2	13242-1009	LEVER ASSY, gear shift pedal	1	
		WHN EXH USE 13242-1015		
	13242-1015	LEVER ASSY, gear shift pedal	1	
3	13157-007	BUSH, shift pedal	1	
4	13161-1007	LEVER ASSY, gear shift	1	
5	92081-076	SPRING, shift lever	1	
6	92001-1003	BOLT, return spring	1	
7	92027-272	COLLAR, return spring, 13 x 18.3 x 21.5	1	
8	92083-031	SPRING, shift pedal return	1	
9	13236-1006	LEVER ASSY, gear shift drum positioning	1	
10	13236-1007	LEVER ASSY, neutral positioning	1	
11	92011-023	SCREW, pan head	1	
12	92081-051	SPRING	2	


11. Engine Covers

Rev. No.		Date	
----------	--	------	--

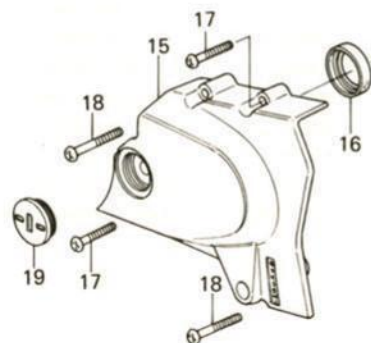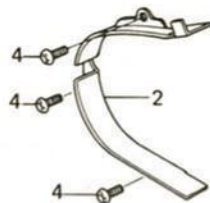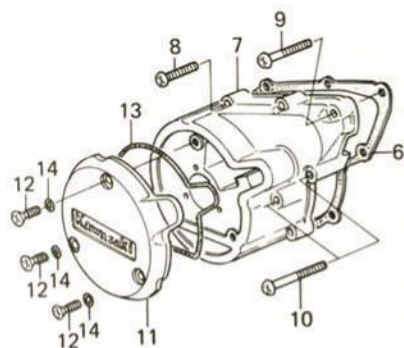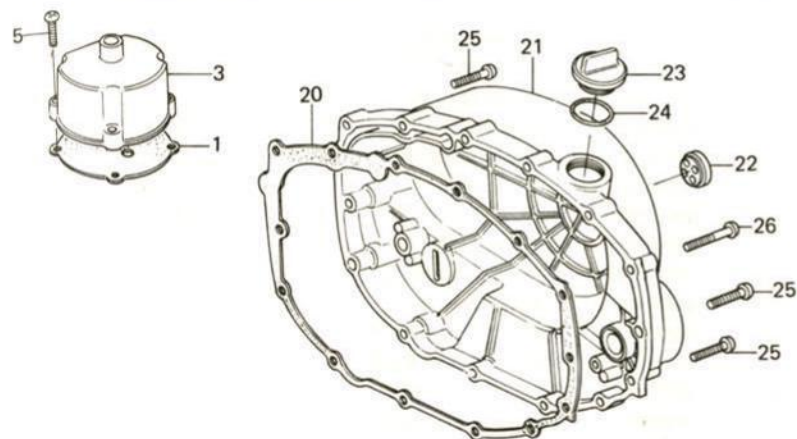

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	11009-1072	GASKET, breather body	1	
2	12053-1023	GUIDE, chain	1	
3	14070-1002	BODY, breather	1	
4	220B0614	SCREW, pan head, 6 x 14	3	
5	220B0625	SCREW, pan head, 6 x 25	4	
6	11009-1070	GASKET, generator cover A	1	
7	14031-1017	COVER, generator A	1	
8	220B0630	SCREW, pan head, 6 x 30	5	
9	220B0640	SCREW, pan head, 6 x 40	2	
10	220B0655	SCREW, pan head, 6 x 55	2	
11	14031-1018	COVER, generator B	1	
12	92009-1016	SCREW, 6 x 25	3	
13	92055-108	"O" RING, generator cover B	1	
14	92055-109	"O" RING, generator cover B, 5.6 m/m	3	
15	14026-1018	COVER, chain	1	
16	92049-1003	OIL SEAL, clutch release	1	
17	220B0635	SCREW, pan head, 6 x 35	2	
18	220B0645	SCREW, pan head, 6 x 45	2	
19	92067-024	PLUG, clutch adjust	1	
20	11009-1071	GASKET, clutch cover	1	
21	14032-1008	COVER, clutch	1	
22	52015-004	GAUGE, oil level	1	
23	16115-013	PLUG, oil filler	1	
24	92055-049	"O" RING, oil filler plug, 32 m/m	1	
25	220B0630	SCREW, pan head, 6 x 30	12	
26	220B0640	SCREW, pan head, 6 x 40	2	


12. Carburetor "A"

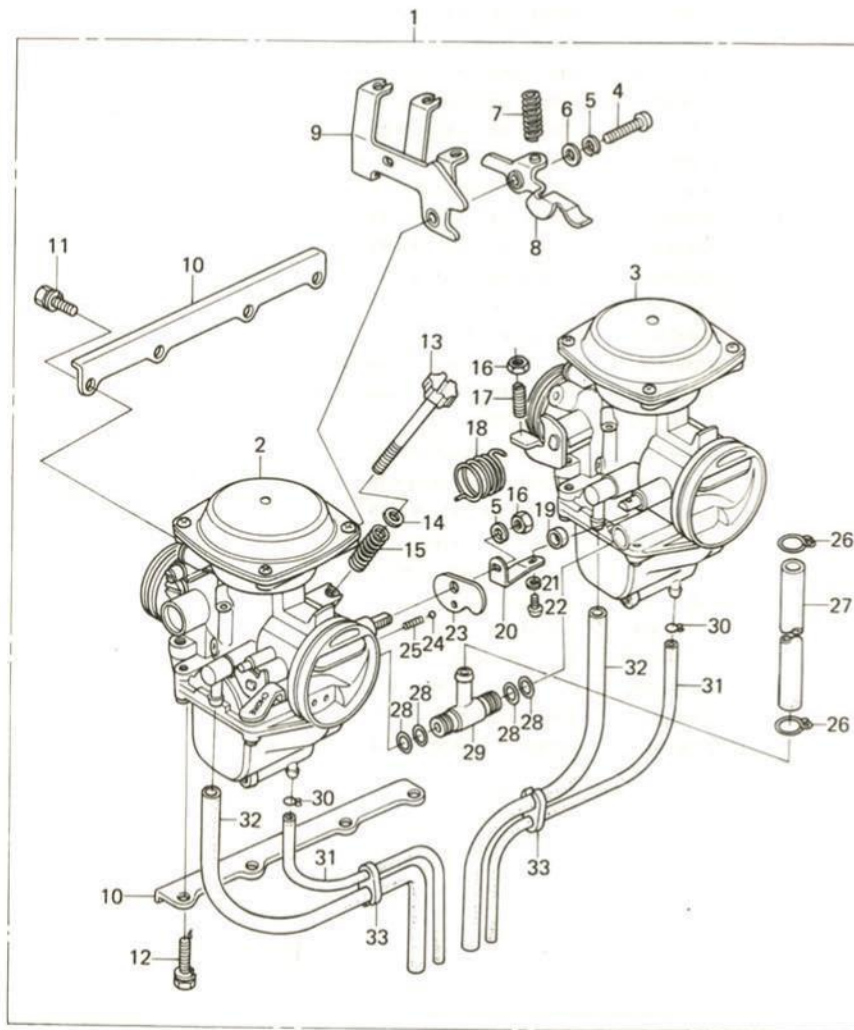

		Rev. No.		Date	
Ref. No.	Part No.	Part Name	Quantity	Remarks	
1	16001-1074	CARBURETOR ASSY, "V57A"	1		
2	16001-1092	CARBURETOR, L. H.	1		
3	16001-1091	CARBURETOR, R. H.	1		
4	220B0525A	SCREW, pan head, 5 x 25	1		
5	461F0500	WASHER, spring, 5 m/m	2		
6	16039-027	WASHER, plain	1		
7	92081-1003	SPRING	1		
8	11034-1009	ROCKER ARM	1		
9	11034-1008	BRACKET, throttle	1		
10	16065-1012	PLATE, stay	2		
11	92009-1005	BOLT, hex head, 6 x 16	4		
12	92009-1006	BOLT, hex head, 6 x 22	4		
13	16021-1001	SCREW, throttle stop	1		
14	41080500	WASHER, plain, 5 m/m	1		
15	92081-1005	SPRING, throttle stop screw	1		
16	311B0500A	NUT, 5 m/m	2		
17	16021-1002	SCREW, slotted	1		
18	92081-1083	SPRING, throttle return	1		
19	16073-1001	COLLAR, choke lever	1		
20	11034-1203	BRACKET, choke lever	1		
21	461F0300	WASHER, spring, 3 m/m	1		
22	220B0306A	SCREW, pan head, 3 x 6	1		
23	13169-1151	CAM, choke link	1		
24	600A0400	BALL, steel, 1/8"	1		
25	92081-1004	SPRING	1		
26	16044-006	CLAMP, fuel inlet hose	2		
27	92059-1001	HOSE, fuel inlet, 5.5 x 10.5 x 200	1		
28	92055-1004	"O" RING, fitting	4		
29	92005-1013	FITTING, fuel hose	1		
30	92037-1142	CLAMP, overflow hose	2		
31	92059-111	HOSE, fuel overflow, 3.5 x 6.5 x 330	2		
32	92059-110	HOSE, air vent, 4.5 x 8 x 380	2		
33	92037-1067	CLAMP, overflow & air vent hose	2		

13. Carburetor "B"


Rev. No.	Date
----------	------

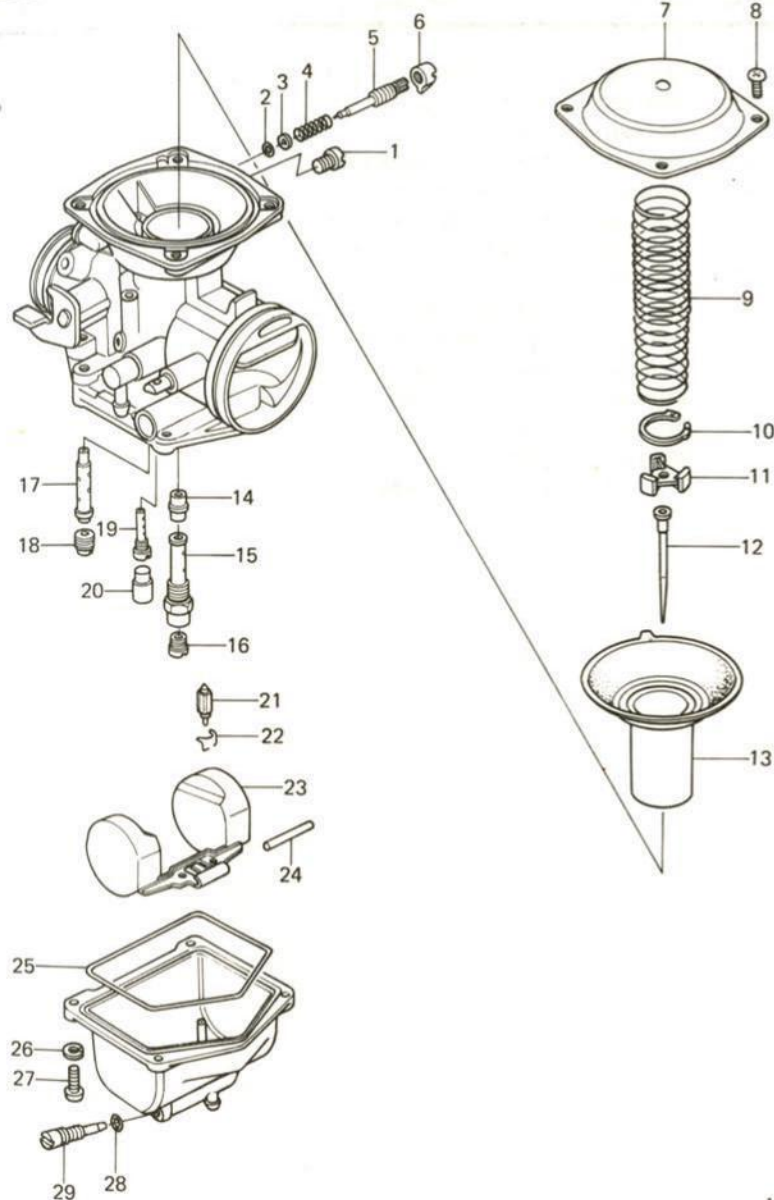

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	92009-1004	SCREW, plug	2	
2	92055-1002	"O" RING, pilot adjust screw	2	
3	92022-1003	WASHER, plain	2	
4	92081-1002	SPRING, pilot adjust screw	2	
5	16014-1011	SCREW, pilot adjust	2	
6	16012-1002	CAP, limiter	2	
7	16005-1001	TOP, mixing chamber	2	
8	22080408A	SCREW, pan head, 4 x 8	8	
9	92081-1001	SPRING	2	
10	92037-1005	CIRCLIP	2	
11	16007-1001	COLLAR	2	
12	16009-1031	JET NEEDLE, # 002301	2	
13	16059-005	VACUUM, piston	2	
14	16017-1001	NEEDLE JET	2	
15	13091-1050	HOLDER, needle jet	2	
16	92063-1036	MAIN JET, 2nd, # 75, L.H, S.T.D.	1	Use for 16001-1092
	92063-1037	MAIN JET, 2nd, # 80, R.H, S.T.D.	1	Use for 16001-1091
17	92062-1001	NOZZLE, main	2	
18	92063-1002	MAIN JET, primary, # 70	2	
19	92064-1025	PILOT JET, # 38	2	
20	16012-1001	CAP, rubber	2	
21	16030-028	FLOAT VALVE	2	
22	16044-007	CLIP, float valve	2	
23	16031-1001	FLOAT	2	
24	92043-1002	FLOAT PIN	2	
25	16019-024	"O" RING, float chamber	2	
26	461F0400	WASHER, spring, 4 m/m	8	
27	22080412A	SCREW, pan head, 4 x 12	8	
28	92055-1053	"O" RING, drain screw	2	
29	92009-1057	SCREW, drain	2	

14. Oil Pump, Oil Filter


Rev. No.		Date	
----------	--	------	--

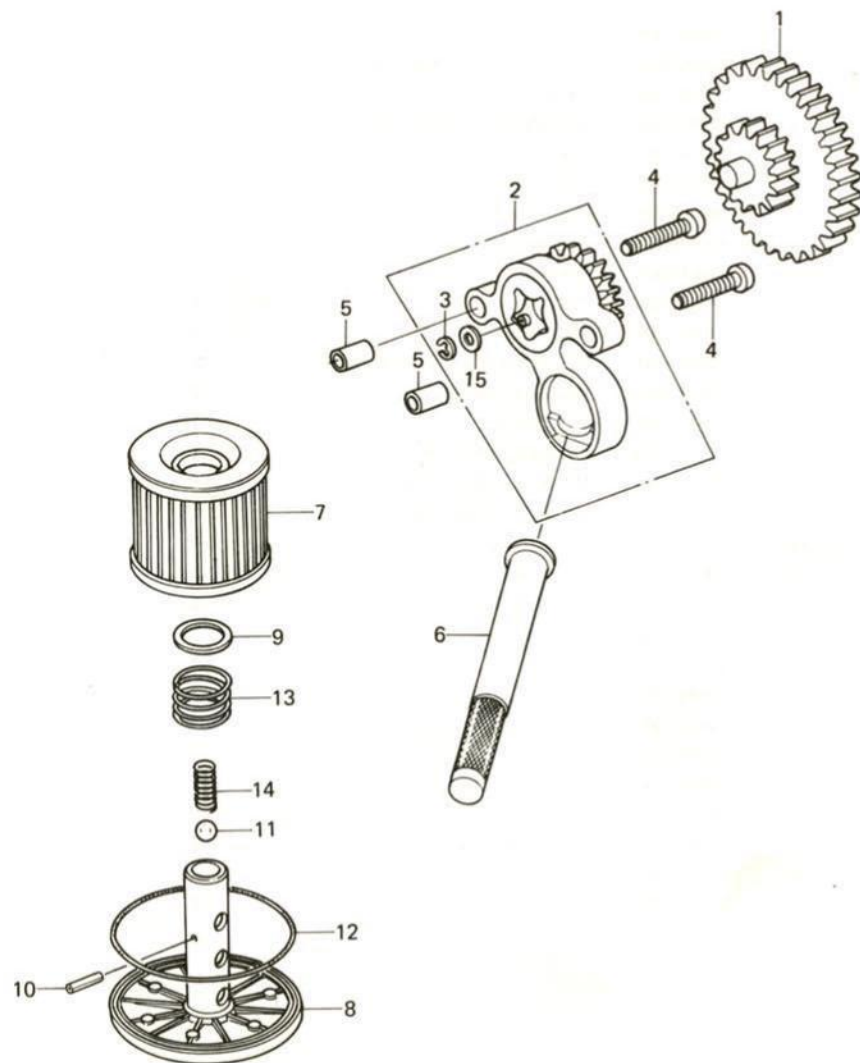

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	13216-1004	GEAR ASSY, oil pump, idle, 35T x 16T	1	
2	16082-1007	PUMP ASSY, oil	1	
3	482K4000	CIRCLIP, 4 m/m	1	
4	220B0630	SCREW, pan head, 6 x 30	2	
5	92042-007	PIN, dowel, 8 x 14	2	
6	16097-1003	FILTER ASSY, oil strainer	1	
7	16097-1002	FILTER ASSY, oil	1	
8	14025-1052	COVER, oil filter	1	
9	41065-004	WASHER, $\phi 26 \times \phi 19.5 \times 0.8t$	1	
10	555A0216	PIN, spring, 2 x 16	1	
11	600A1200	BALL, steel, 3/8"	1	
12	671B2565	"O" RING, 65 m/m	1	
13	92081-1018	SPRING, oil filter	1	
14	92081-109	SPRING, piston	1	
15	92022-1146	WASHER, 5 x 9 x 0.5t	1	

15. Air Cleaner

Rev. No.		Date	
----------	--	------	--

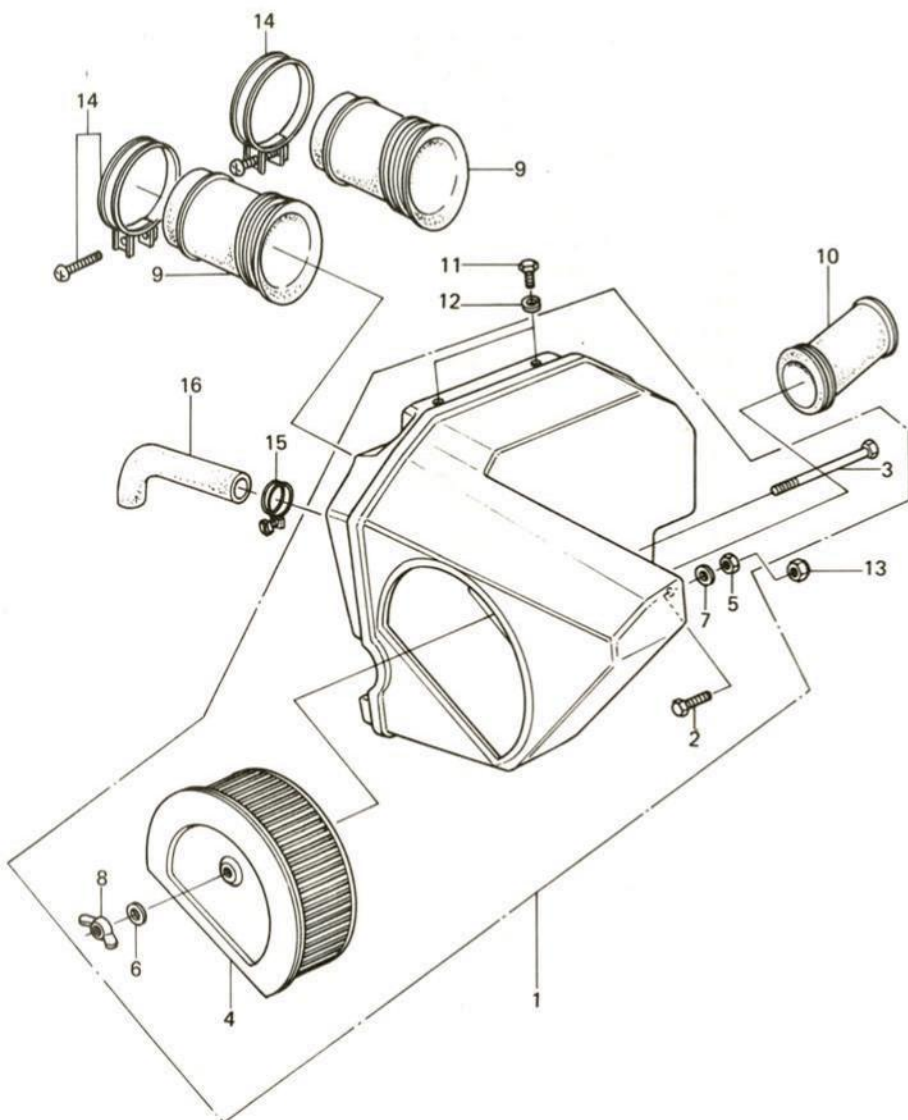


Ref. No.	Part No.	Part Name	Quantity	Remarks
1	11010-1020	FILTER ASSY, air	1	
2	110B0618	BOLT, hex head, 6 x 18	1	
3	110B0665	BOLT, hex head, 6 x 65	1	
4	11013-1011	ELEMENT, air filter	1	
5	312B0600	NUT, 6 m/m	1	
6	410B0600	WASHER, plain, 6 m/m	1	
7	411B0600	WASHER, plain, 6 m/m	1	
8	92016-062	NUT, 6 m/m	1	
9	14073-1010	DUCT, air filter	2	
10	14073-1013	DUCT, air filter, inlet	1	
11	110B0616	BOLT, hex head, 6 x 16	2	
12	461F0600	WASHER, spring, 6 m/m	2	
13	92019-008	NUT, lock, 6 m/m	1	
14	92037-1006	CLAMP	2	
15	92037-213	CLAMP	1	
16	92059-1037	TUBE, breather	1	

16. Mufflers

Rev. No.	Date
----------	------


(AUSTRALIA TYPE)

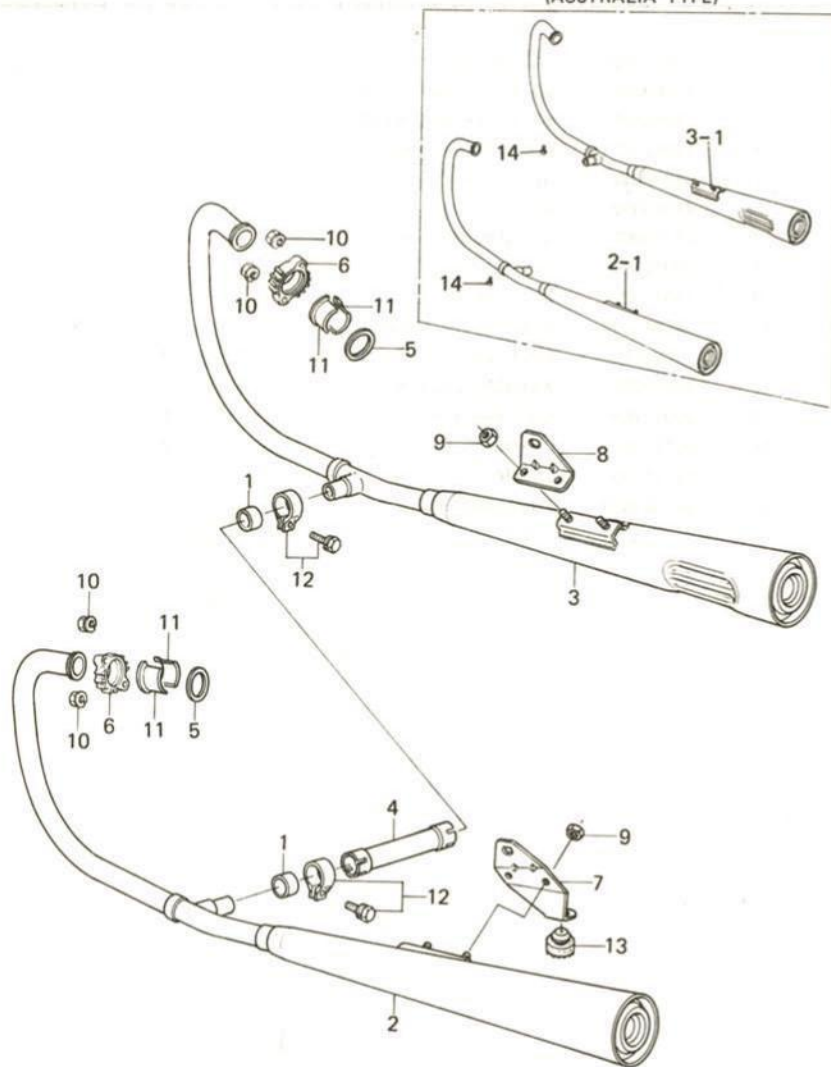

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	11009-1011	GASKET, muffler connection	2	
2	18001-1041	MUFFLER ASSY, L. H,	1	
	18001-1170	WHN EXH USE 18001-1053		
2-1	18001-1053	MUFFLER ASSY, L. H, USE WITH 110N0610	1	Use for Australia Market
3	18001-1042	MUFFLER ASSY, R. H,	1	
	18001-1171	WHN EXH USE 18001-1054		
3-1	18001-1054	MUFFLER ASSY, R. H, USE WITH 110N0610	1	Use for Australia Market
4	18039-020	PIPE, muffler connection	1	
5	18067-004	GASKET, exhaust pipe holder	2	
6	18069-061	HOLDER, exhaust pipe	2	
7	32069-1029	BRACKET, muffler, L. H.	1	
8	32069-1030	BRACKET, muffler, R. H.	1	
9	92017-013	NUT, lock, 8 m/m	4	
10	92017-014	NUT, lock, 6 m/m	4	
11	92027-264	COLLAR, exhaust pipe	4	
12	92037-1045	CLAMP, exhaust pipe connection	2	
13	92075-015	DAMPER RUBBER, main stand	1	
14	110N0610	BOLT, hex head, 6 x 10	2	Use for 18001-1053/1054

17. Ignition Coil, Contact Braker, Condenser, Advanser


Rev. No.	Date
----------	------

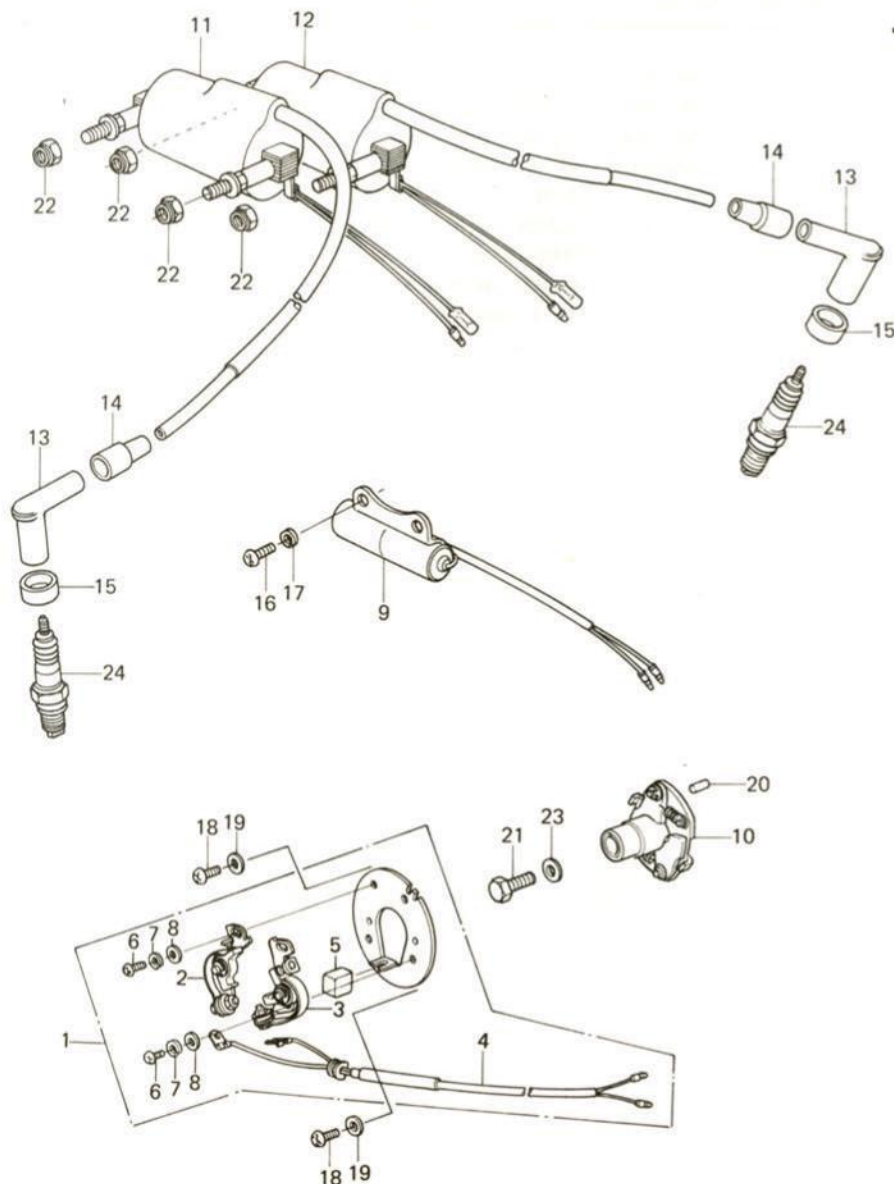

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	21008-1005	BREAKER ASSY, contact	1	
2	21008-1009	BREAKER, contact, L. H.	1	
3	21008-1010	BREAKER, contact, R. H.	1	
4	26001-1085	WIRING HARNESS, breaker	1	
5	21019-005	FELT, oil	1	
6	220B0406A	SCREW, pan head, 4 x 6	4	
7	461F0400	WASHER, spring, 4 m/m	4	
8	410B0400	WASHER, plain, 4 m/m	4	
9	21013-1003	CONDENSER	1	
10	21148-1012	ADVANCER, automatic timing	1	
11	21121-1009	COIL, ignition, L. H.	1	
12	21121-093	COIL, ignition, R. H.	1	
13	21130-1003	CAP, spark plug, "LD05F" Mark	2	
14	21132-005	GROMMET, spark plug cap	2	
15	92071-1015	GROMMET, spark plug cap	2	
16	220B0512A	SCREW, pan head, 5 x 12	2	
17	461F0500	WASHER, spring, 5 m/m	2	
18	220B0610	SCREW, pan head, 6 x 10	2	
19	411B0600	WASHER, plain, 6 m/m	2	
20	551A0308	PIN, dowel, 3 x 8	1	
21	92003-221	BOLT, hex head, 6 x 14	1	
22	92019-008	NUT, lock, 6 m/m	4	
23	92022-323	WASHER, plain	1	
24	92070-1011	SPARK PLUG, NGK D8EA	2	

18. Generator, Regulator

Rev. No.		Date	
----------	--	------	--

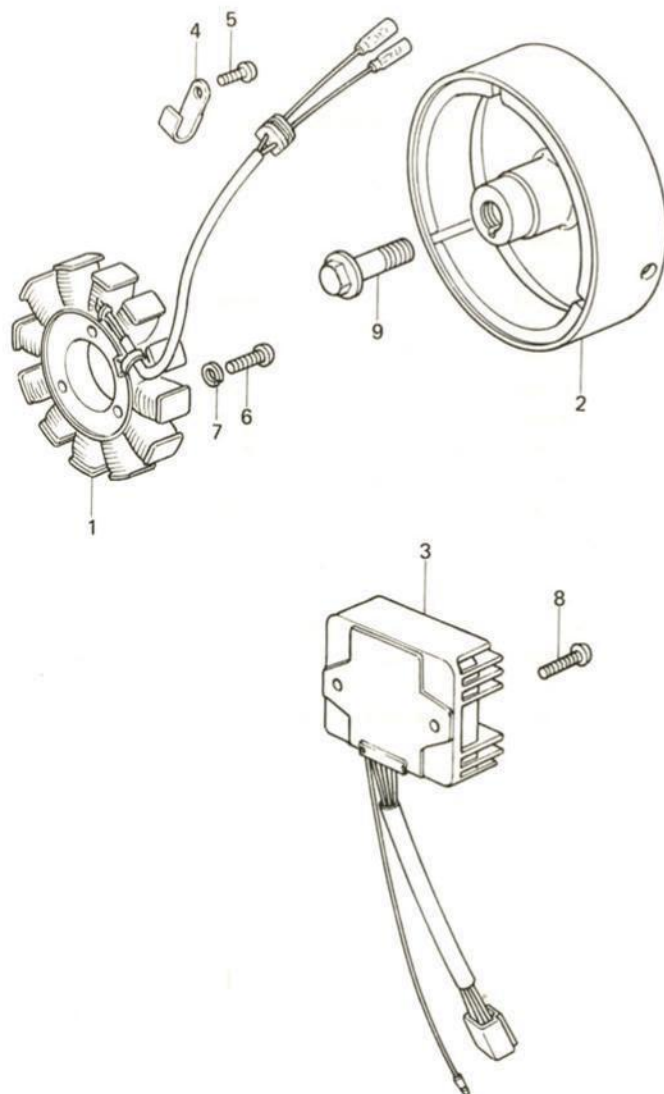


Ref. No.	Part No.	Part Name	Quantity	Remarks
----------	----------	-----------	----------	---------

1	21003-1012	STATOR ASSY, generator	1	
2	21007-1009	ROTOR, generator	1	
3	21066-1013	REGULATOR, voltage	1	
4	21126-008	CLAMP, generator lead wire	1	
5	220B0612	SCREW, pan head, 6 x 12	1	
6	220B0530A	SCREW, pan head, 5 x 30	3	
7	461F0500	WASHER, spring, 5 m/m	3	
8	220B0614	SCREW, pan head, 6 x 14	2	
9	92001-1201	BOLT, rotor, 10 x 40	1	

19. Stater Motor, Magnetic Switch, Oneway Clutch (1/2)

Rev. No.		Date	
----------	--	------	--

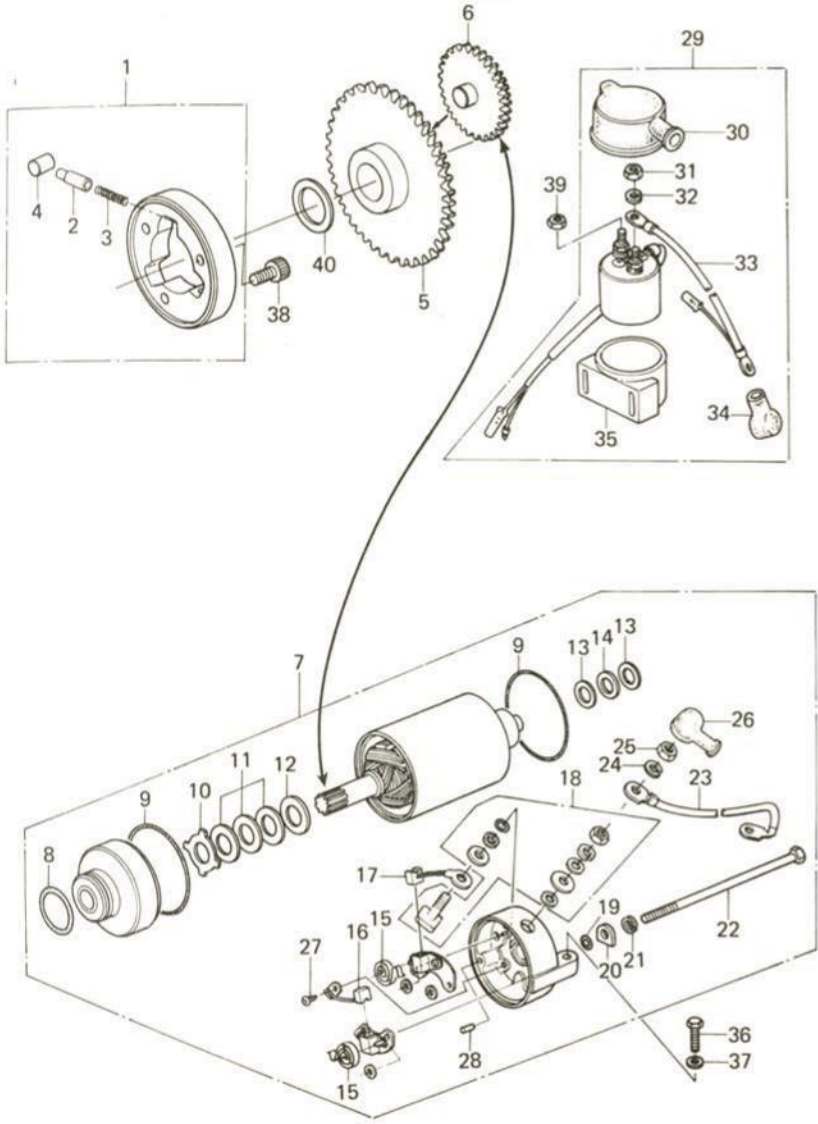


Ref. No.	Part No.	Part Name	Quantity	Remarks
1	13193-1002	CLUTCH ASSY, oneway	1	
2	92043-132	PIN, oneway clutch	3	
3	92081-159	SPRING, oneway clutch	3	
4	92122-006	ROLLER, oneway clutch	3	
5	13216-1005	GEAR, oneway clutch	1	
6	13216-1009	GEAR ASSY, starter idle, 59T x 17T	1	
7	21163-1003	MOTOR ASSY, starter	1	
8	671B2525	"O" RING, 25 m/m	1	
9	92055-1042	"O" RING, 56 m/m	2	
10	92022-1130	WASHER, thrust supporter	1	
11	92022-1129	WASHER, thrust "B"	3	
12	92022-1131	WASHER, bakelite	1	
13	21025-011	WASHER, thrust, 0.2 t	2	
14	92022-1132	WASHER, thrust, 0.8 t	1	
15	21040-1001	SPRING, carbon brush	2	
16	21039-1002	BRUSH, carbon (-)	1	
17	21039-1001	BRUSH, carbon (+)	1	
18	92001-1204	BOLT SET, starter motor terminal	1	
19	670B1505	"O" RING, 5 m/m	2	
20	92022-1133	WASHER, lock, $\phi 5.2 \times 3.2$ t	2	
21	461F0500	WASHER, spring, 5 m/m	2	
22	92001-1156	BOLT, pan head, $\phi 5 \times 108.5$ L	2	
23	26011-1049	WIRE, starter motor lead, L = 440 m/m	1	
24	461F0600	WASHER, spring, 6 m/m	1	
25	312B0600	NUT, 6 m/m	1	
26	21017-017	CAP, starter motor terminal	1	
27	92009-1058	SCREW, tapping, 3.5 x 8	1	
28	551A0306	PIN, dowel, 3 x 6	1	
29	21164-007	SWITCH, magnetic	1	
30	21141-004	COVER, magnetic switch	1	

20. Frame

Rev. No.		Date	
----------	--	------	--


Ref. No.	Part No.	Part Name	Quantity	Remarks
----------	----------	-----------	----------	---------

1	32002-1048	FRAME	1	
2	600A0800	BALL, steel, 1/4"	38	
3	92047-006	CONE, steering stem bearing	1	
4	92048-006	RACE, steering ball	2	
5	46098-016	CAP, steering stem head	1	
6	46100-003	WASHER, wave	1	
7	92007-031	BOLT, steering stem	1	
8	92022-230	WASHER, steering stem head	1	
9	92090-007	NUT, steering stem head	1	

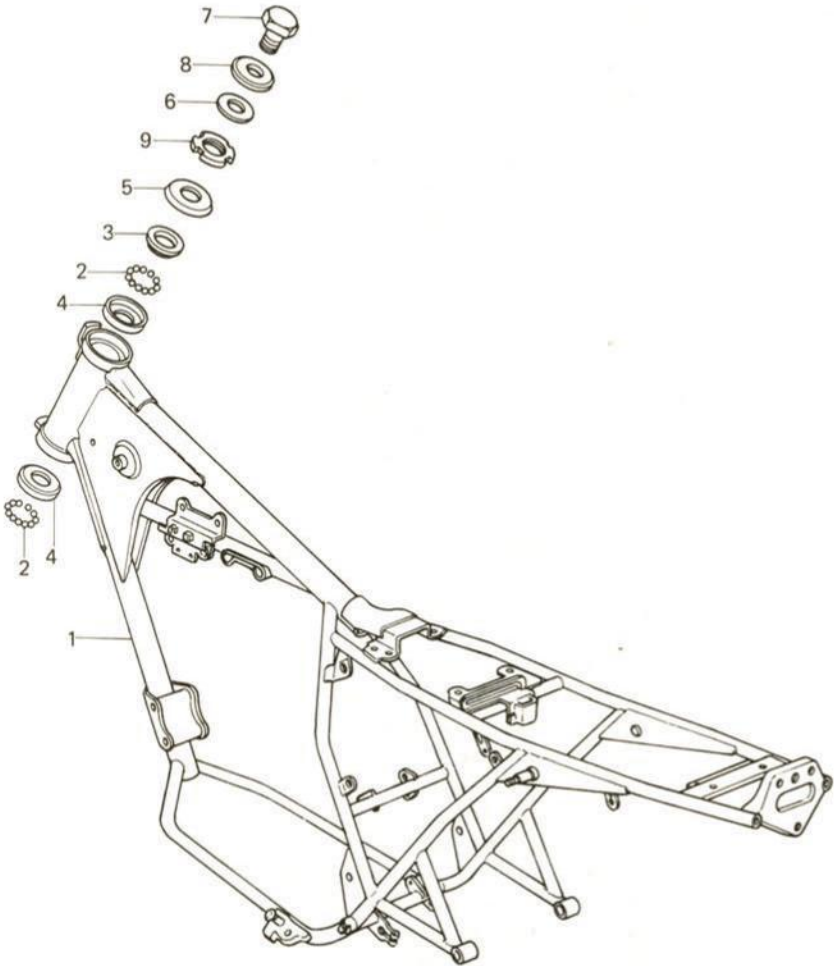


21. Frame Fitting, Battery Case, Electro Base Bracket

Rev. No.		Date	
----------	--	------	--

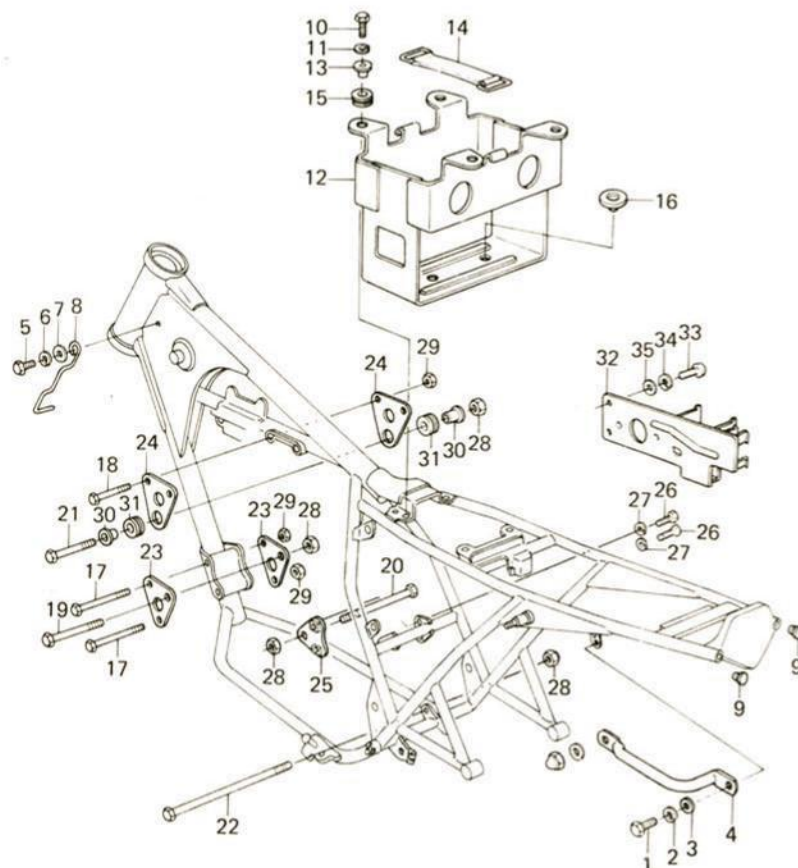

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	110B0816	BOLT, hex head, 8 x 16	1	
2	461F0800	WASHER, spring, 8 m/m	1	
3	410B0800	WASHER, plain, 8 m/m	1	
4	32109-1005	GRIP, frame	1	
5	110B0614	BOLT, hex head, 6 x 14	1	
6	461F0600	WASHER, spring, 6 m/m	1	
7	411B0600	WASHER, plain, 6 m/m	1	
8	92037-1062	CLAMP, head lamp wiring harness	1	
9	32112-009	PLUG, frame end	2	
10	110B0618	BOLT, hex head, 6 x 18	4	
11	461F0600	WASHER, spring, 6 m/m	4	
12	32097-1014	CASE, battery	1	
13	92027-153	COLLAR, battery case	4	
14	92072-071	BAND, battery	1	
15	92075-051	DAMPER, battery case	4	
16	92075-078	DAMPER, battery base	2	
17	110B08110	BOLT, hex head, 8 x 110	2	
18	110B0850	BOLT, hex head, 8 x 50	2	
19	113B10110	BOLT, hex head, 10 x 110	1	
20	113B10130	BOLT, hex head, 10 x 130	1	
21	113G1070	BOLT, hex head, 10 x 70	1	
22	113G10200	BOLT, hex head, 10 x 200	1	
23	13169-1111	PLATE, engine, front	2	
24	13169-1112	PLATE, engine, head	2	
25	13169-1113	PLATE, engine, rear-upper	1	
26	110B0820	BOLT, hex head, 8 x 20	2	
27	461F0800	WASHER, spring, 8 m/m	2	
28	92019-021	NUT, lock, 10 m/m	4	
29	92019-007	NUT, lock, 8 m/m	4	
30	92027-1116	COLLAR, engine head	2	
31	92075-1086	DAMPER, engine head	2	
32	11034-1253	BRACKET, electro base	1	
33	220B0612	SCREW, pan head, 6 x 12	3	
34	461F0600	WASHER, spring, 6 m/m	3	
35	411B0600	WASHER, plain, 6 m/m	3	


22. Swing Arm, Rear Shock Absorber

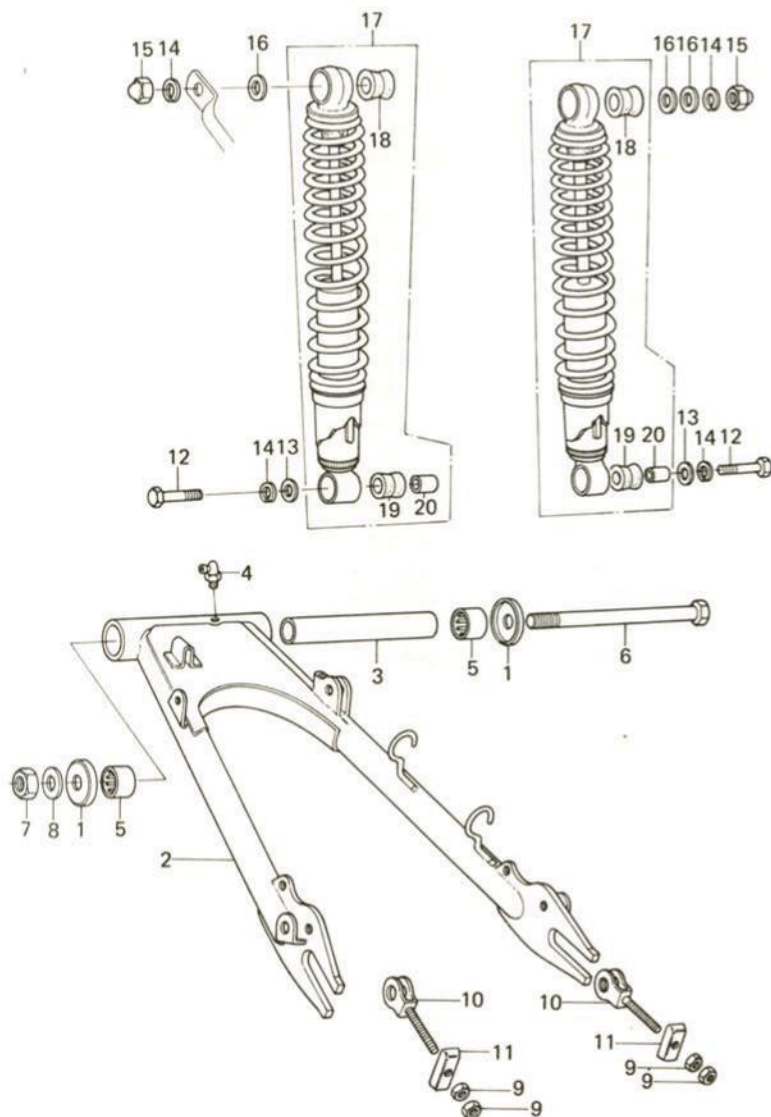

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	11012-1029	CAP, swing arm	2	
2	33001-1025	SWING ARM	1	
3	42036-1021	SLEEVE, swing arm, 14.1 x 22 x 204.5	1	
4	92005-002	GREASE FITTING, swing arm	1	
5	92046-061	NEEDLE BEARING, 22BTM2816	2	
6	33032-046	SHAFT, swing arm pivot, 14 x 249	1	
7	92019-011	NUT, lock, 14 m/m	1	
8	92022-1067	WASHER, 14.2 x 30 x 3.2 t	1	
9	31280800	NUT, 8 m/m	4	
10	33040-1008	ADJUSTER, chain	2	
11	33041-002	PLATE, chain adjuster	2	
12	113N1035	BOLT, hex head, 10 x 35	2	
13	411B1000	WASHER, plain, 10 m/m	2	
14	461F1000	WASHER, spring, 10 m/m	4	
15	92020-003	NUT, cap, 10 m/m	2	
16	92022-176	WASHER, plain, 10 m/m	3	
17	45014-1027	SHOCK ABSORBER	2	
18	45017-015	BUSHING, shock absorber rubber	2	
19	45017-012	BUSHING, shock absorber rubber	2	
20	45016-008	COLLAR, shock absorber rubber	2	


23. Footrests

Rev. No.	Date
----------	------

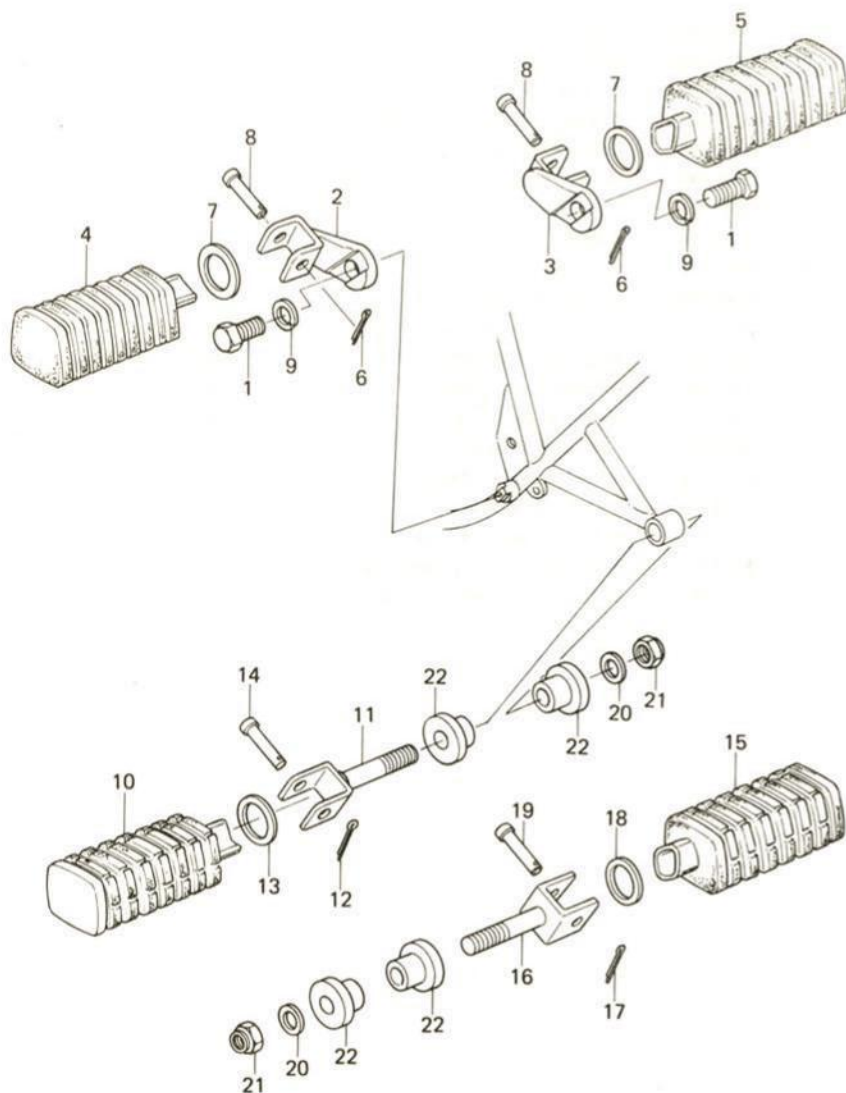


Ref. No.	Part No.	Part Name	Quantity	Remarks
1	113G1225A	BOLT, hex head, 12 x 25	2	
2	34003-1026	HOLDER, footrest step, L. H.	1	
3	34003-1027	HOLDER, footrest step, R. H.	1	
4	34028-1002	STEP, footrest, front, L. H.	1	
5	34028-1003	STEP, footrest, front, R. H.	1	
6	550D2516	PIN, cotter, 2.5 x 16	2	
7	92022-250	WASHER, plain, 25 x 36 x 2.3 t	2	
8	92043-080	PIN, footrest step, front	2	
9	461F1200	WASHER, spring, 12 m/m	2	
10	34028-1009	STEP, footrest, rear, L. H.	1	
11	34029-011	HOLDER, footrest step	1	
12	550D2012	PIN, cotter, 2.0 x 12	1	
13	92022-181	WASHER, plain, 22.5 x 30 x 2.6 t	1	
14	92043-079	PIN, footrest step, rear	1	
15	34028-1010	STEP, footrest, rear, R. H.	1	
16	34029-011	HOLDER, footrest step	1	
17	550D2012	PIN, cotter, 2.0 x 12	1	
18	92022-181	WASHER, plain, 22.5 x 30 x 2.6 t	1	
19	92043-079	PIN, footrest step, rear	1	
20	41181000	WASHER, plain, 10 m/m	2	
21	92019-021	NUT, lock, 10 m/m	2	
22	92092-010	BUSHING, rubber, rear footrest	4	

24. Stands, Brake Pedal, Torque Link

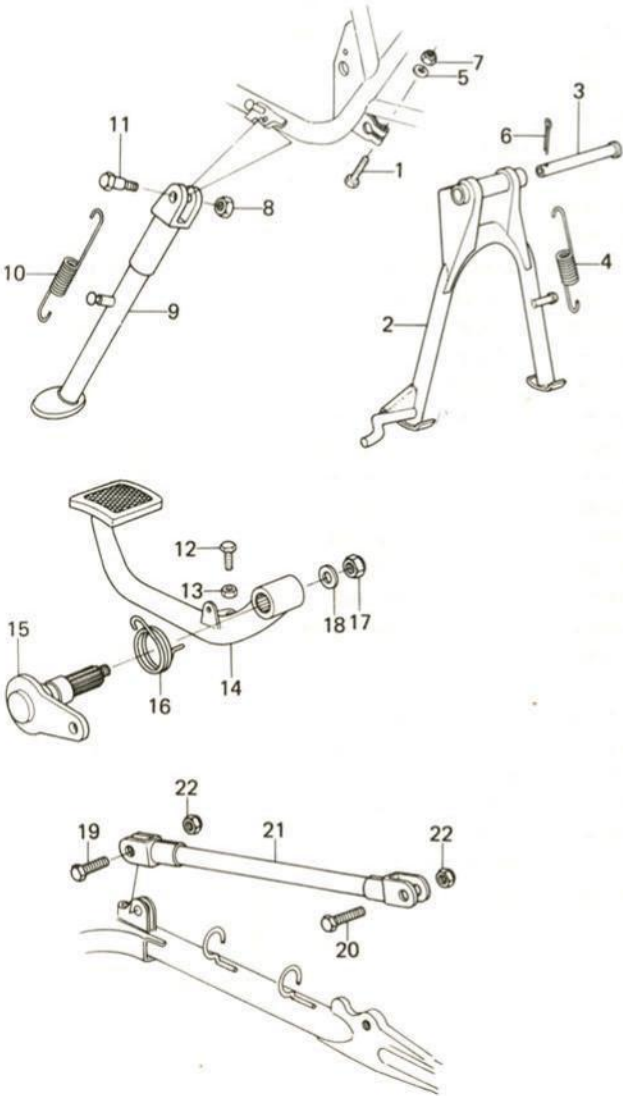

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	110B0635	BOLT, hex head, 6 x 35	2	
2	34011-1011	STAND, main	1	
3	34019-015	SHAFT, main stand	1	
4	34023-016	SPRING, main stand	1	
5	410B0600	WASHER, plain, 6 m/m	2	
6	550D3030	PIN, cotter, 3.0 x 30	1	
7	92019-008	NUT, lock, 6 m/m	2	
8	315B1000	NUT, 10 m/m	1	
9	34024-1022	STAND, side	1	
10	34025-005	SPRING, side stand	1	
11	92003-157	BOLT, side stand	1	
12	110B0620	BOLT, hex head, 6 x 20	1	
13	311B0600	NUT, 6 m/m	1	
14	43001-1021	PEDAL, brake	1	
15	43004-1005	SHAFT, brake	1	
16	43005-022	SPRING, brake pedal, return	1	
17	92019-013	NUT, lock, 8 m/m	1	
18	92022-195	WASHER, plain, 8 m/m	1	
19	92001-1252	BOLT, hex head, 10 x 35	1	
20	113G1040	BOLT, hex head, 10 x 40	1	
21	43007-1007	TORQUE LINK, rear caliper	1	
22	92019-021	NUT, lock, 10 m/m	2	


25. Handlebar, Grips, Rear View Mirror

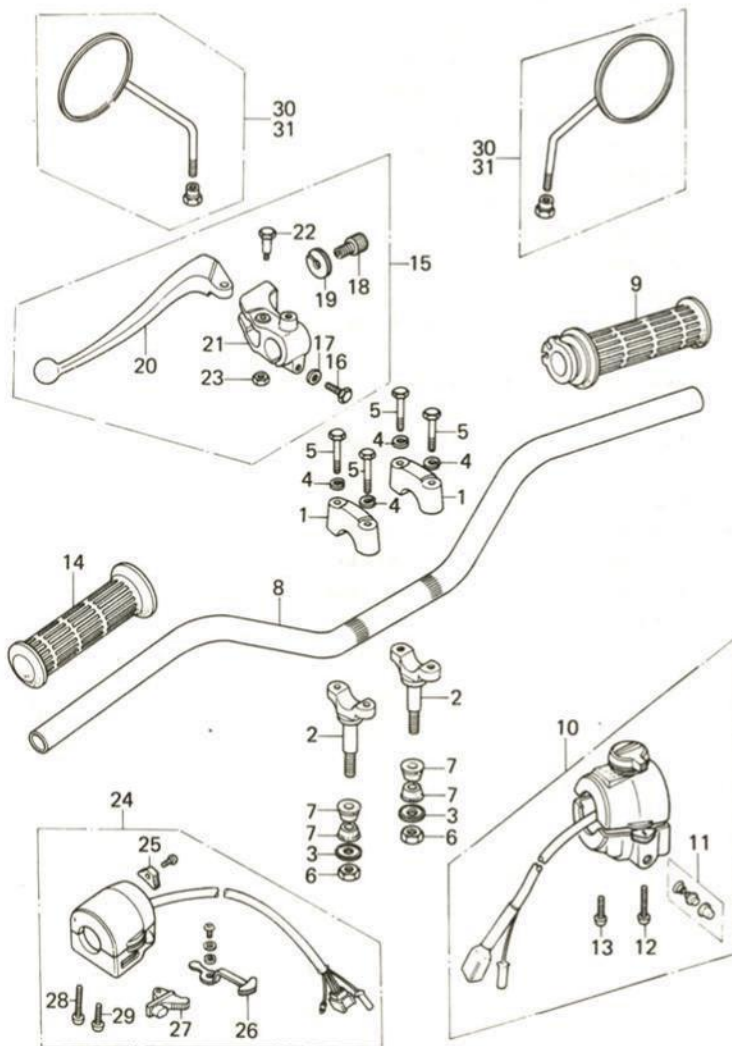

		Rev. No.			Date
Ref. No.	Part No.	Part Name		Quantity	Remarks
1	46012-008	HOLDER, handlebar, upper		2	
2	46012-010	HOLDER, handlebar, lower		2	
3	46016-003	CAP, handlebar holder		2	
4	461F0800	WASHER, spring, 8 m/m		4	
5	92007-002	BOLT, handlebar holder, 8 x 38		4	
6	92019-021	NUT, lock, 10 m/m		2	
7	92075-039	DAMPER RUBBER, handlebar		4	
8	46003-1024	HANDLE BAR		1	
9	46019-1004	GRIP ASSY, throttle		1	
10	46091-1030	CASE ASSY, R. H.		1	
11	27010-1009	SWITCH ASSY, starter push button		1	
12	220B0540A	SCREW, pan head, 5 x 40		1	
13	220B0530A	SCREW, pan head, 5 x 30		1	
14	46075-1001	RUBBER, L. H, grip		1	
15	46076-052	LEVER ASSY, clutch		1	
16	110N0625	BOLT, hex head, 6 x 25		1	
17	410B0600	WASHER, plain, 6 m/m		1	
18	46055-003	SCREW, cable adjust		1	
19	46056-007	NUT, cable adjust lock		1	
20	46092-023	LEVER, clutch		1	
21	46094-017	HOLDER, clutch lever		1	
22	92007-047	BOLT, clutch lever fitting		1	
23	92019-008	NUT, lock, 6 m/m		1	
24	46091-057	CASE ASSY, L. H.		1	
25	46044-013	KNOB, lighting switch		1	
26	46043-005	KNOB, signal lamp switch		1	
27	27010-1001	BUTTON, horn push		1	
28	220B0535A	SCREW, pan head, 5 x 35		2	
29	220B0530A	SCREW, pan head, 5 x 30		2	
30	56002-030	REAR VIEW MIRROR		2	
31	56002-033	REAR VIEW MIRROR		2	Use for Overseas Market

26. Front Fork

Rev. No.		Date	
----------	--	------	--

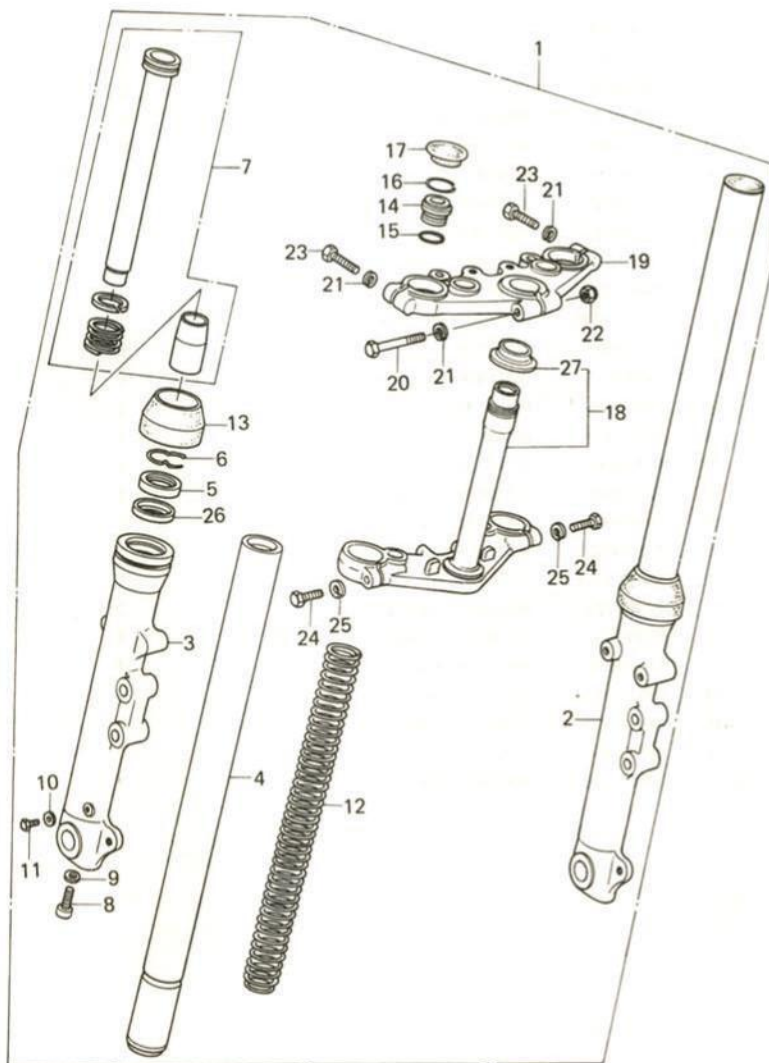


Ref. No.	Part No.	Part Name	Quantity	Remarks
1	44001-1047	FRONT FORK ASSY	1	
2	44006-1025	TUBE, R. H, fork outer	1	
3	44005-1025	TUBE, L. H, fork outer	1	
4	44013-1017	TUBE, fork inner	2	
5	44009-022	OIL SEAL, fork	2	
6	44043-057	RING, oil seal stopper	2	
7	44022-1018	CYLINDER, fork	2	
8	44041-078	BOLT, fork cylinder	2	
9	44045-051	GASKET, fork cylinder bolt	2	
10	44045-047	GASKET, drain plug	2	
11	110B0608	BOLT, hex head, 6 x 8	2	
12	44026-1024	SPRING, fork inner	2	
13	44010-030	DUST SHIELD, fork	2	
14	44029-022	GUIDE, spring	2	
15	44046-025	"O" RING	2	
16	44044-023	CIRCLIP	2	
17	11012-1021	CAP, rubber, fork top	2	
18	44037-1014	STEM, steering	1	
19	44039-1012	HEAD, steering stem	1	
20	92001-1064	BOLT, hex head, 8 x 55	1	
21	461F0800	WASHER, spring, 8 m/m	3	
22	92019-007	NUT, lock, 8 m/m	1	
23	92001-1063	BOLT, hex head, 8 x 40	2	
24	113B1035	BOLT, hex head, 10 x 35	2	
25	461F1000	WASHER, spring, 10 m/m	2	
26	92026-1005	SPACER, fork	2	
27	92047-006	CONE, steering stem bearing	1	

26. Front Fork


Rev. No.		Date	
----------	--	------	--

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	44001-1047	FRONT FORK ASSY	1	
2	44006-1025	TUBE, R. H, fork outer	1	
3	44005-1025	TUBE, L. H, fork outer	1	
4	44013-1017	TUBE, fork inner	2	
5	44009-022	OIL SEAL, fork	2	
6	44043-057	RING, oil seal stopper	2	
7	44022-1018	CYLINDER, fork	2	
8	44041-078	BOLT, fork cylinder	2	
9	44045-051	GASKET, fork cylinder bolt	2	
10	44045-047	GASKET, drain plug	2	
11	110B0608	BOLT, hex head, 6 x 8	2	
12	44026-1024	SPRING, fork inner	2	
13	44010-030	DUST SHIELD, fork	2	
14	44029-022	GUIDE, spring	2	
15	44046-025	"O" RING	2	
16	44044-023	CIRCLIP	2	
17	11012-1021	CAP, rubber, fork top	2	
18	44037-1014	STEM, steering	1	
19	44039-1012	HEAD, steering stem	1	
20	92001-1064	BOLT, hex head, 8 x 55	1	
21	461F0800	WASHER, spring, 8 m/m	3	
22	92019-007	NUT, lock, 8 m/m	1	
23	92001-1063	BOLT, hex head, 8 x 40	2	
24	113B1035	BOLT, hex head, 10 x 35	2	
25	461F1000	WASHER, spring, 10 m/m	2	
26	92026-1005	SPACER, fork	2	
27	92047-006	CONE, steering stem bearing	1	

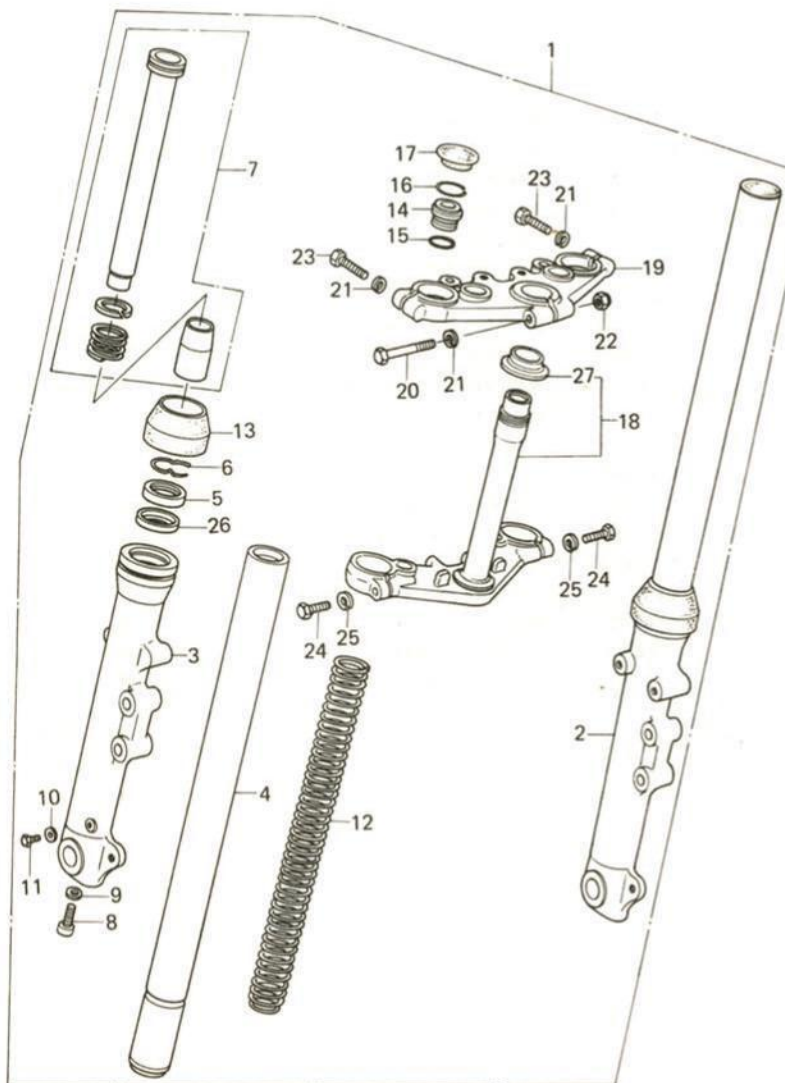

28. Wheels


Rev. No.		Date	
----------	--	------	--

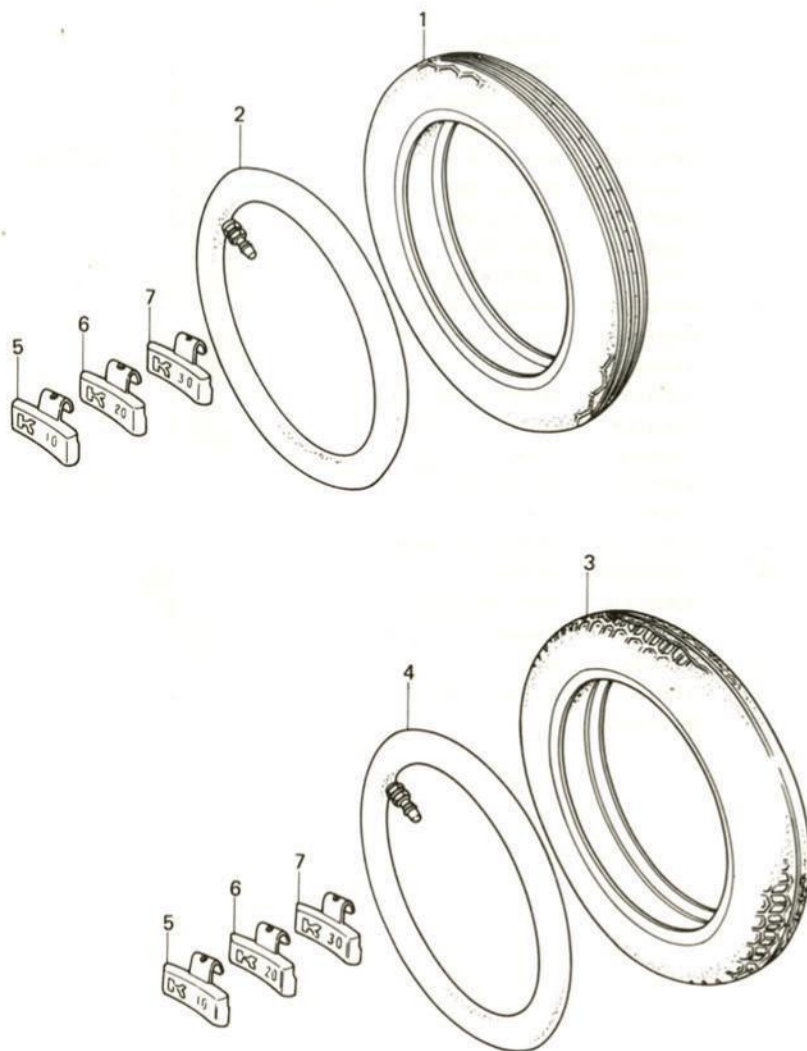

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	41002-1062	TIRE, front, 3.00S18 4PR	1	F7
2	41022-1014	TUBE, tire, front, 2.75/3.00-18	1	
3	41002-1063	TIRE, rear, 3.50S18 4PR	1	K102
4	41022-1004	TUBE, tire, rear, 3.25/3.50/4.10-18	1	
5	41075-1004	WEIGHT, balance, 10 g	AR	
6	41075-1005	WEIGHT, balance, 20 g	AR	
7	41075-1006	WEIGHT, balance, 30 g	AR	

29. Front Master Cylinder


Rev. No.		Date	
----------	--	------	--

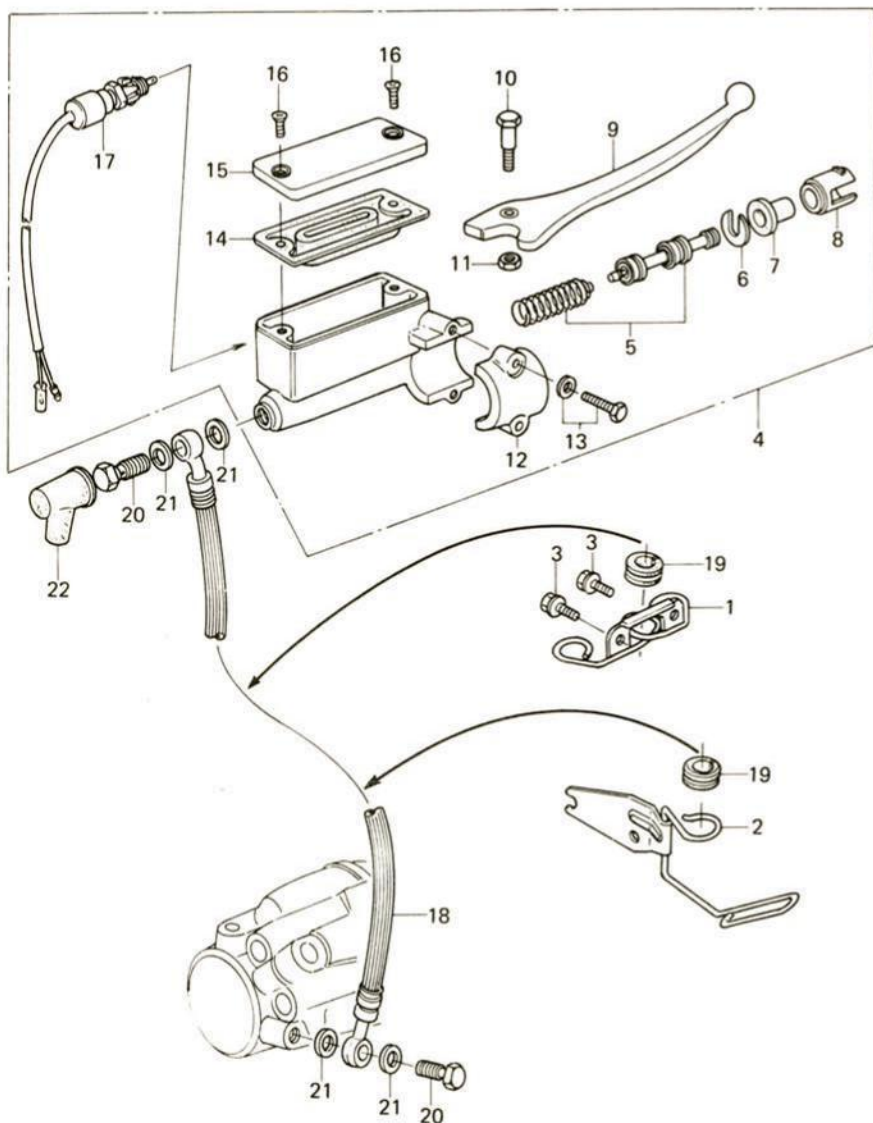

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	11034-1204	BRACKET, front brake hose	1	
2	11034-1468	BRACKET, front brake hose	1	
3	131B0610	BOLT, flanged, 6 x 10	2	
4	43015-1033	CYLINDER ASSY, front master	1	
	43015-1034	CYLINDER ASSY, front master	1	Use for Australia Market
5	43020-1002	PISTON ASSY, front master cylinder	1	
6	43022-1001	STOPER, piston	1	
7	49016-1010	DUST COVER	1	
8	14008-1007	LINER, piston	1	
9	46092-1008	LEVER, front brake	1	
10	92001-1056	BOLT, brake lever fitting	1	
11	43032-002	NUT, 6 m/m	1	
12	43034-1001	HOLDER, master cylinder	1	
13	43033-003	BOLT, hex head, 6 x 25	2	
14	43028-1008	DIAPHRAGM	1	
15	43026-1007	CAP, oil cup	1	Use for 43015-1033
	43026-1006	CAP, oil cup	1	Use for 43015-1034
16	92001-1055	SCREW, countersunk head	2	
17	27010-1028	SWITCH, brake	1	
18	43059-1016	HOSE, front brake, L = 760 m/m	1	
19	43064-006	GROMMET, brake hose	2	
20	43066-001	BOLT, oil	2	
21	43067-001	WASHER, oil bolt	4	
22	49006-1008	BOOT, dust	1	

30. Rear Master Cylinder



Rev. No.	Date
----------	------

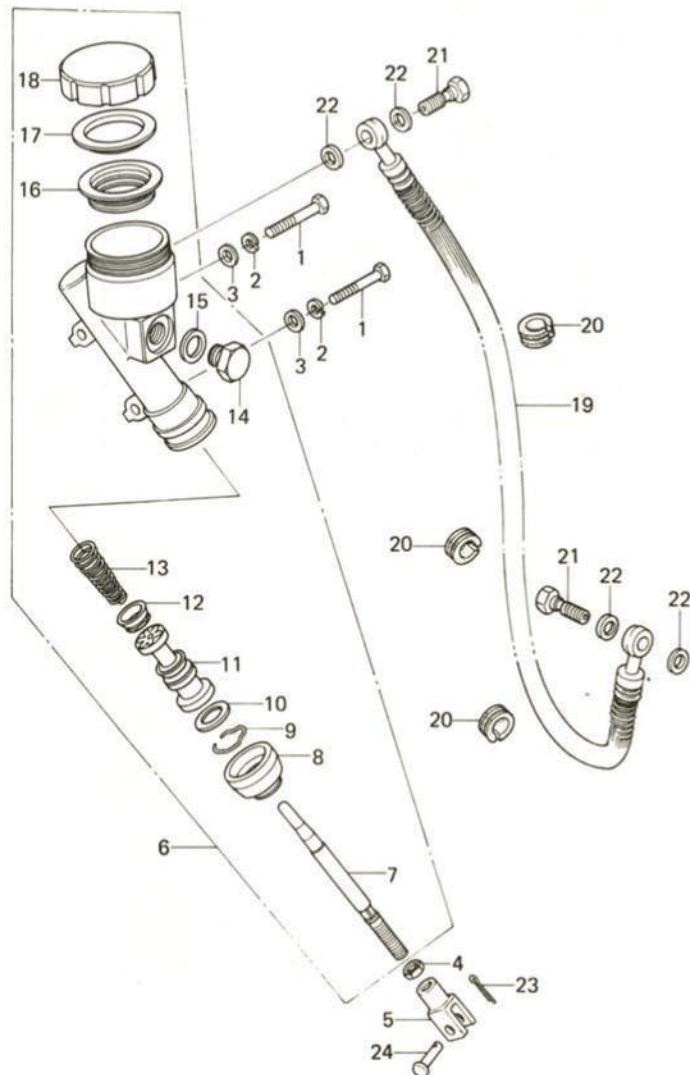

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	110G0845	BOLT, hex head, 8 x 45	2	
2	461F0800	WASHER, spring, 8 m/m	2	
3	410B0800	WASHER, plain, 8 m/m	2	
4	318B0800	NUT, 8 m/m	1	
5	41058-1001	ROD END, brake	1	
6	43015-1022	CYLINDER ASSY, rear master	1	
	43015-1027	CYLINDER ASSY, rear master	1	Use for Australia Market
7	43011-1010	ROD END, brake	1	
8	43024-003	DUST COVER	1	
9	43058-004	RING, dust seal	1	
10	43022-002	STOPPER, piston	1	
11	43020-1007	PISTON ASSY, rear master cylinder	1	
12	43019-001	CUP, primary	1	
13	43018-001	SPRING ASSY, return	1	
14	92001-1073	BOLT	1	
15	43079-002	GASKET	1	
16	43028-003	DIAPHRAGM	1	
17	43027-001	PLATE, diaphragm	1	
18	43026-003	CAP, oil cup	1	Use for 43015-1022
	43026-004	CAP, oil cup	1	Use for 43015-1027
19	43059-1017	HOSE, rear brake, L = 530 m/m	1	
20	43064-007	GROMMET, brake hose	3	
21	43066-001	BOLT, oil	2	
22	43067-001	WASHER, oil bolt	4	
23	550D1615	PIN, cotter, 1.6 x 15	1	
24	92043-1013	PIN, brake rod	1	


31. Front Caliper

Rev. No.	Date
----------	------

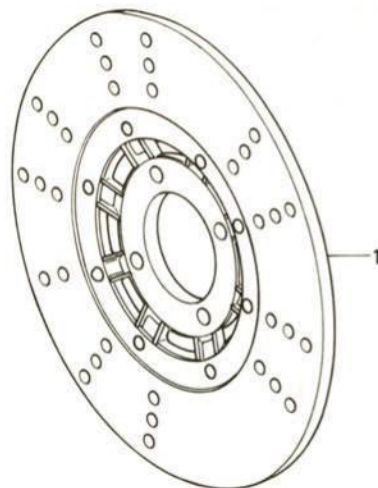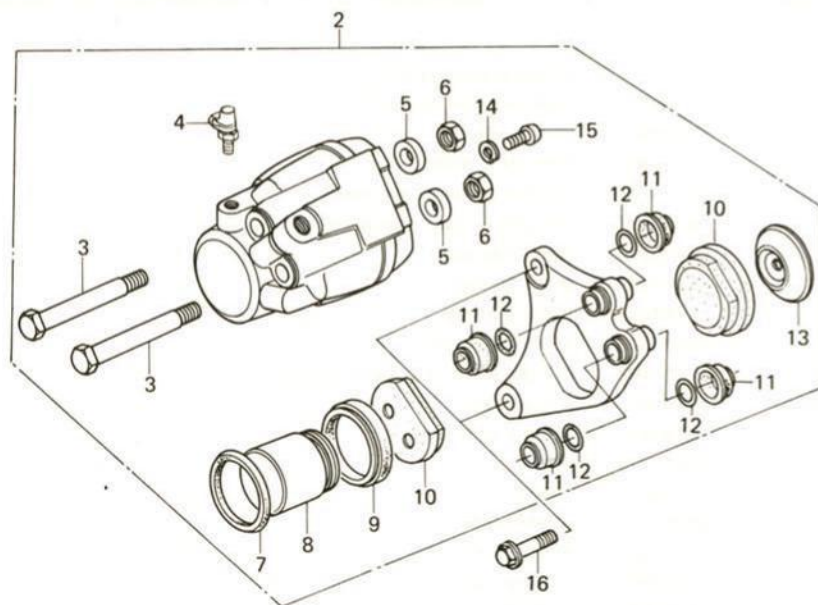

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	41080-1010	DISK PLATE, front brake, 277 ϕ x 5 t	1	
2	43041-1024	CALIPER ASSY, front brake	1	Blue Mark
3	43045-006	BOLT, front caliper	2	
4	43085-001	BLEEDER ASSY	1	
5	43088-002	COLLAR, front caliper	2	
6	315B1000	NUT, 10 m/m	2	
7	43049-002	RING, piston seal	1	
8	43020-1012	PISTON	1	
9	43054-003	DUST SEAL, piston	1	
10	43082-1001	PAD SET, front brake	1	
11	43052-005	DUST SEAL	4	
12	43053-006	"O" RING	4	
13	43040-004	SPACER	1	
14	461F0600	WASHER, spring, 6 m/m	1	
15	220B0612	SCREW, pan head, 6 x 12	1	
16	92001-1101	BOLT, 10 x 44	2	

32. Rear Caliper

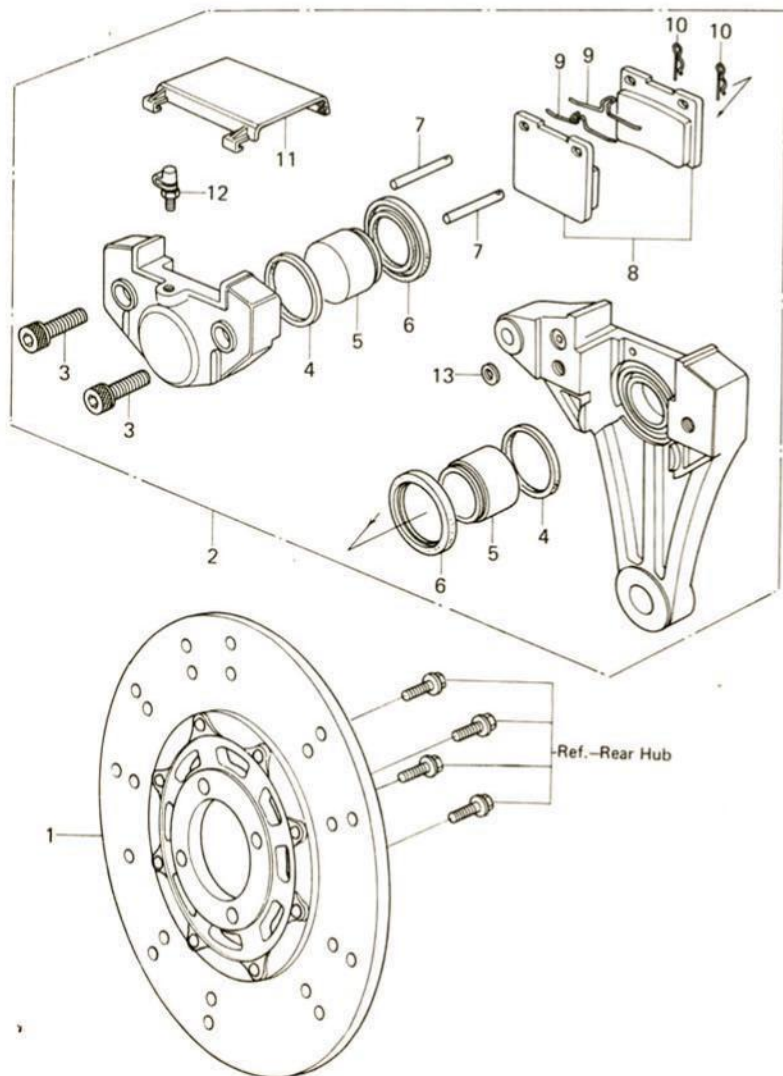


Rev. No.		Date		
Ref. No.	Part No.	Part Name	Quantity	Remarks
1	41080-1011	DISK PLATE, rear brake, 250 ϕ x 5 t	1	
2	43041-1015	CALIPER ASSY, rear brake	1	
3	92001-1071	BOLT, tie, 10 x 45	2	
4	43049-001	RING, piston seal	2	
5	43020-1013	PISTON	2	
6	49006-1025	BOOT, piston	2	
7	43045-007	PIN	2	
8	43082-1003	PAD SET, rear brake	1	
9	92081-1113	SPRING, pad	2	
10	43084-003	CLIP	2	
11	43024-004	CAP	1	
12	43085-001	BLEEDER ASSY	1	
13	43049-1004	RING, seal	1	


33. Front Hub

Rev. No.		Date	
----------	--	------	--

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	41068-1015	AXLE, front	1	
2	92015-1032	NUT, 14 m/m	1	
3	92027-1118	COLLAR, front axle, L = 34 m/m	1	
4	41073-1022	SOLID WHEEL ASSY, front	1	
5	14025-1042	DUST COVER, R. H.	1	
6	411B0500	WASHER, plain, 5 m/m	2	
7	220B0514A	SCREW, pan head, 5 x 14	2	
8	41042-014	DUST COVER, L. H.	1	
9	481J3500	CIRCLIP, 35 m/m	1	
10	601B6202Z	BEARING, ball, # 6202ZC3	2	
11	654A223508	OIL SEAL, 22 x 35 x 8	1	
12	92001-1110	BOLT, 10 x 24	4	
13	92027-1117	COLLAR, front wheel, L = 60 m/m	1	
14	41078-1006	GEAR BOX ASSY, speedometer	1	
15	41060-1024	PINION, speedometer, 9 T	1	
16	41060-1025	GEAR, speedometer, 24 T	1	
17	41062-005	BUSHING, speedometer cable	1	
18	41063-001	WASHER, thrust	2	
19	41064-013	RECEIVER, speedometer gear	1	
20	41082-001	SPRING PIN, 3 x 15	1	
21	654A304208	OIL SEAL, 30 x 42 x 8	1	

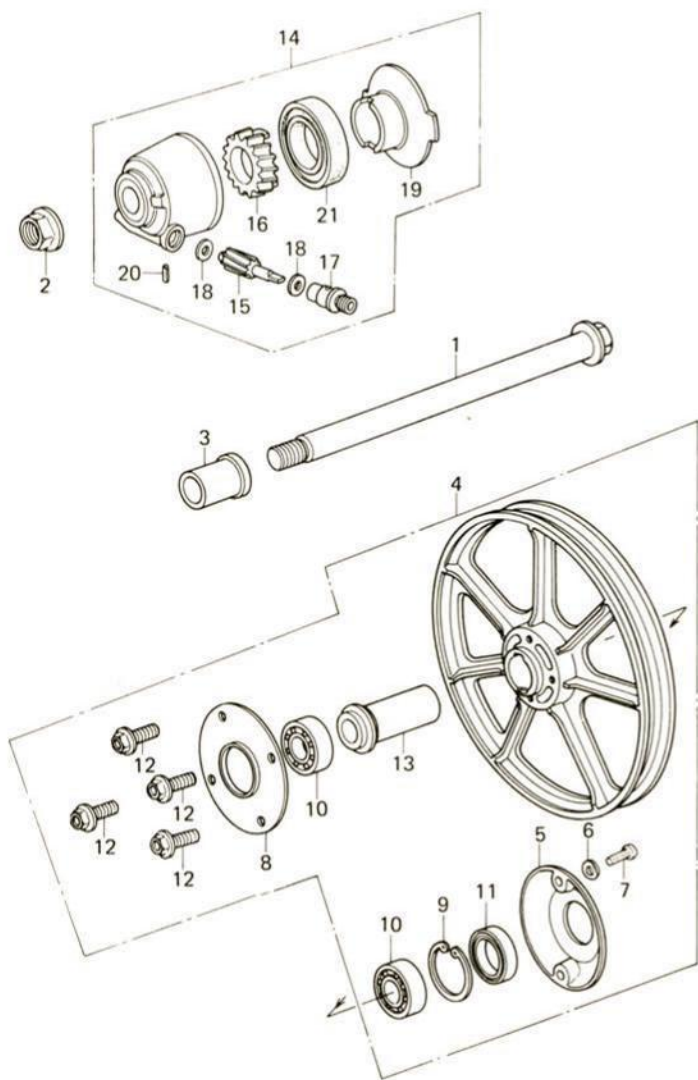


34. Rear Hub

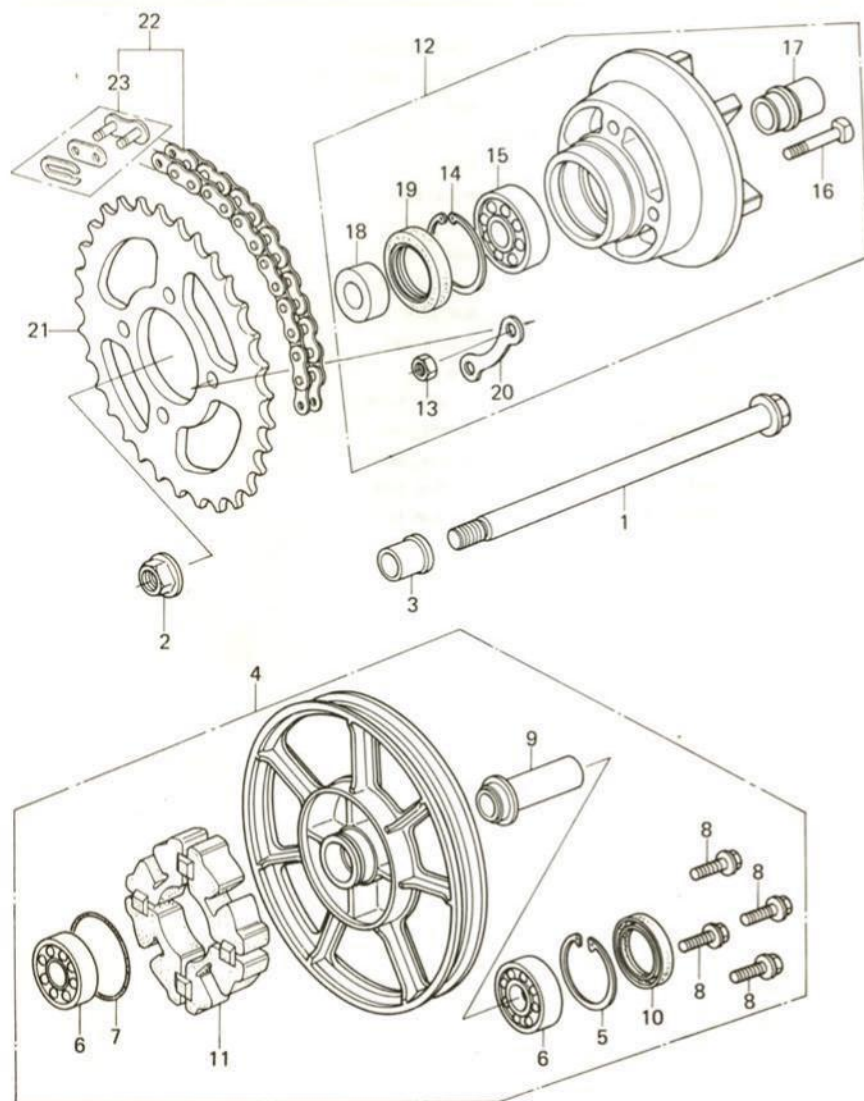

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	41068-1014	AXLE, rear	1	
2	92015-1041	NUT, 16 m/m	1	
3	92027-1114	COLLAR, rear axle, R. H, L = 21.5 m/m	1	
4	41073-1021	SOLID WHEEL ASSY, rear	1	
5	481J4700	CIRCLIP, 47 m/m	1	
6	601B6303Z	BEARING, ball, # 6303ZC3	2	
7	671B2560	"O" RING, 60 m/m	1	
8	92001-1110	BOLT, 10 x 24	4	
9	92027-1111	COLLAR, rear wheel bearing, L = 69 m/m	1	
10	92049-1008	OIL SEAL, NOK AE1351EO	1	
11	92075-1008	SHOCK DAMPER, rear wheel	1	
12	42033-1008	COUPLING ASSY, rear wheel	1	
13	314B1000	NUT, 10 m/m	4	
14	481J5200	CIRCLIP, 52 m/m	1	
15	601B6205	BEARING, ball, # 6205C3	1	
16	92003-156	BOLT, rear sprocket, 10 x 55	4	
17	92027-1112	COLLAR, rear coupling, L = 41 m/m	1	
18	92027-1113	COLLAR, rear axle, L. H, L = 13.5 m/m	1	
19	92052-006	OIL SEAL, WTC35527	1	
20	92088-005	WASHER, lock	2	
21	42041-1033	SPROCKET, rear, 35T, I. D. = 70 m/m	1	
22	92057-014	CHAIN ASSY, drive, 98 L	1	EK530SH-G
23	92058-008	JOINT, drive chain	1	

35. Fuel Tank


Rev. No.		Date	
----------	--	------	--

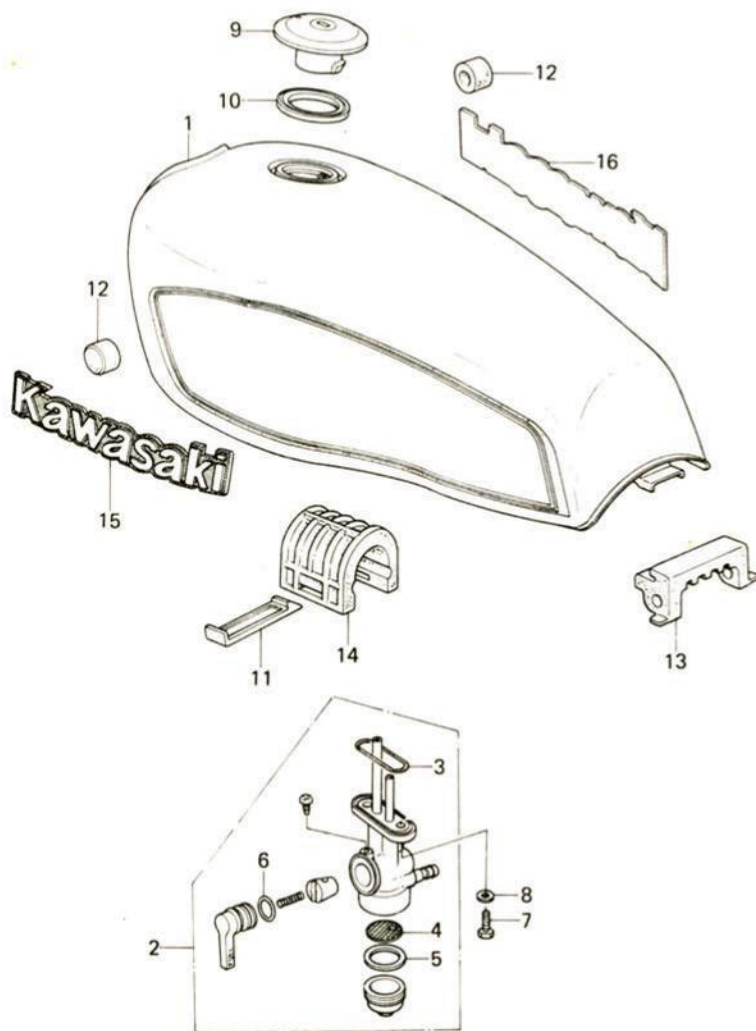

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	51001-1015-4U	TANK, fuel, Candy Emerald Green	1	
	51001-1015-7W	TANK, fuel, Metallic Stardust Silver	1	
2	51023-059	TAP ASSY, fuel	1	
3	51039-003	"O" RING	1	
4	14043-1002	STRAINER, fuel	1	
5	11009-1013	GASKET, fuel tap cap	1	
6	670B2010	"O" RING, 10 m/m	1	
7	92001-1091	BOLT, hex head, 6 x 20	2	
8	92022-183	WASHER, plain, 6.2 x 11 x 1.5 t	2	
9	51048-1001	CAP ASSY, fuel tank	1	
10	11009-1053	GASKET, fuel tank cap	1	
11	92072-1013	BAND, fuel tank	1	
12	92075-101	DAMPER, fuel tank, front	2	
13	92075-1087	DAMPER, fuel tank, rear	1	
14	92075-215	DAMPER, fuel tank, center	1	
15	56014-1021	EMBLEM, L. H, fuel tank	1	
16	56014-1022	EMBLEM, R. H, fuel tank	1	

36. Side Covers, Chain Cover


Rev. No.		Date	
----------	--	------	--

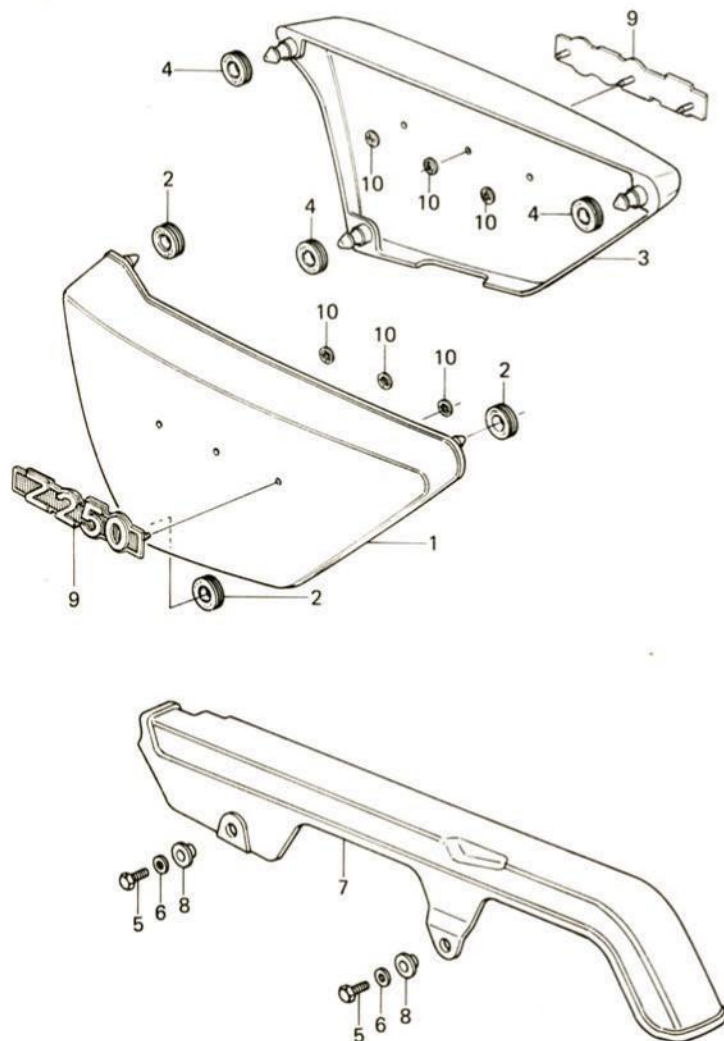

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	36001-1032-4U	COVER, side, L. H, Candy Emerald Green	1	
	36001-1032-7W	COVER, side, L. H, Metallic Stardust Silver	1	
2	92071-056	GROMMET	3	
3	36001-1033-4U	COVER, side, R. H, Candy Emerald Green	1	
	36001-1033-7W	COVER, side, R. H, Metallic Stardust Silver	1	
4	92071-056	GROMMET	3	
5	110B0614	BOLT, hex head, 6 x 14	2	
6	410B0600	WASHER, plain, 6 m/m	2	
7	36014-1008	COVER, chain	1	
8	92027-122	COLLAR, chain cover	2	
9	56018-1069	MARK, side cover	2	
10	92018-005	SPEED NUT	6	

37. Dual Seat, Seat Cover (1/2)



Rev. No.		Date	
----------	--	------	--

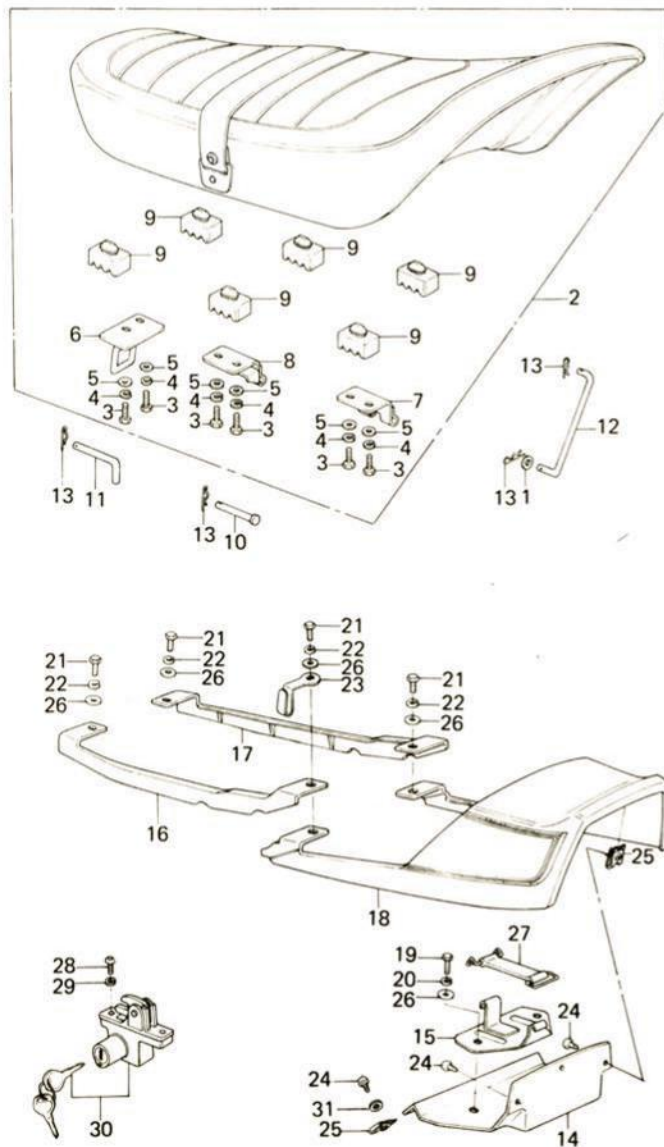

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	410B0600	WASHER, plain, 6 m/m	1	
2	53001-1023	SEAT ASSY, dual	1	
3	110B0614	BOLT, hex head, 6 x 14	6	
4	461F0600	WASHER, spring, 6 m/m	6	
5	411B0600	WASHER, plain, 6 m/m	6	
6	27012-1005	HOOK, seat	1	
7	53009-018	HINGE, seat, rear	1	
8	53009-030	HINGE, seat, front	1	
9	92075-1007	DAMPER RUBBER, seat	6	
10	53011-002	PIN, dual seat pivot, rear	1	
11	53011-008	PIN, dual seat pivot, front	1	
12	53054-006	STOPPER, dual seat	1	
13	92041-003	PIN, cotter	4	
14	13169-1115	PLATE, rear seat cover	1	
15	13169-1116	PLATE, rear seat cover	1	
16	14025-1056-4U	COVER, front seat, L. H., Candy Emerald Green	1	
	14025-1056-7W	COVER, front seat, L. H., Metallic Stardust Silver	1	
17	14025-1057-4U	COVER, front seat, R. H., Candy Emerald Green	1	
	14025-1057-7W	COVER, front seat, R. H., Metallic Stardust Silver	1	
18	14025-1060-4U	COVER, rear seat, Candy Emerald Green	1	
	14025-1060-7W	COVER, rear seat, Metallic Stardust Silver	1	

37. Dual Seat, Seat Cover (2/2)

Rev. No.	Date
----------	------

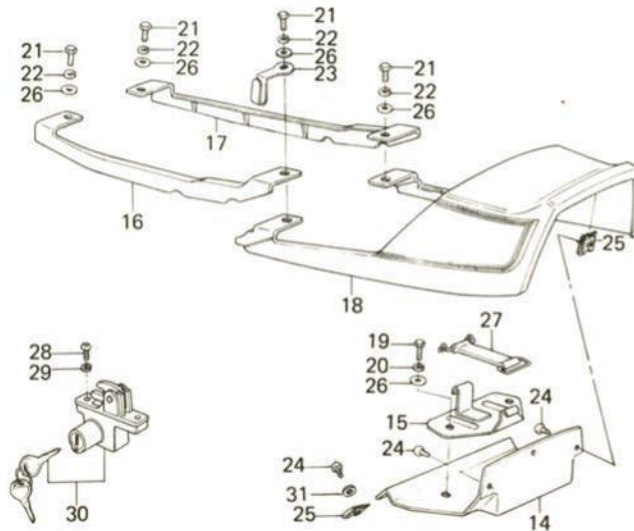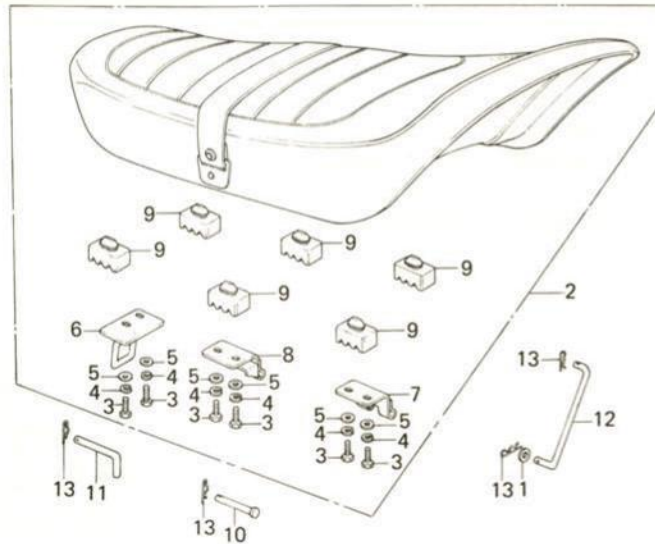


Ref. No.	Part No.	Part Name	Quantity	Remarks
19	110B0614	BOLT, hex head, 6 x 14	2	
20	461F0600	WASHER, spring, 6 m/m	2	
21	110B0620	BOLT, hex head, 6 x 20	4	
22	461F0600	WASHER, spring, 6 m/m	4	
23	27012-1010	HOOK, helmet	1	
24	92008-010	TAPPING SCREW, 4 x 14	5	
25	92018-006	SPEED NUT, 4 m/m	5	
26	92022-125	WASHER, plain, 6.5 x 20 x 1.6 t	6	
27	92072-041	BAND, tool bag	1	
28	220B0614	SCREW, pan head, 6 x 14	2	
29	461F0600	WASHER, spring, 6 m/m	2	
30	27016-5024	LOCK ASSY, seat	1	
31	92022-1029	WASHER, plain, 5 x 12 x 1.0t	2	

38. Cables

Rev. No.		Date	
----------	--	------	--

Ref. No.	Part No.	Part Name	Quantity	Remarks
----------	----------	-----------	----------	---------


1	54001-048	CABLE, speedometer	1	"01-048" Mark
2	54011-1015	CABLE, clutch	1	"11-1015" Mark
3	54012-1024	CABLE, throttle control, opening	1	"12-1024" Mark
4	54012-1025	CABLE, throttle control, closing	1	"12-1025" Mark
5	54018-1002	CABLE, tachometer	1	"18-1002" Mark
6	92037-093	CLAMP, clutch cable	2	
7	92065-103	GASKET, tachometer gear	1	

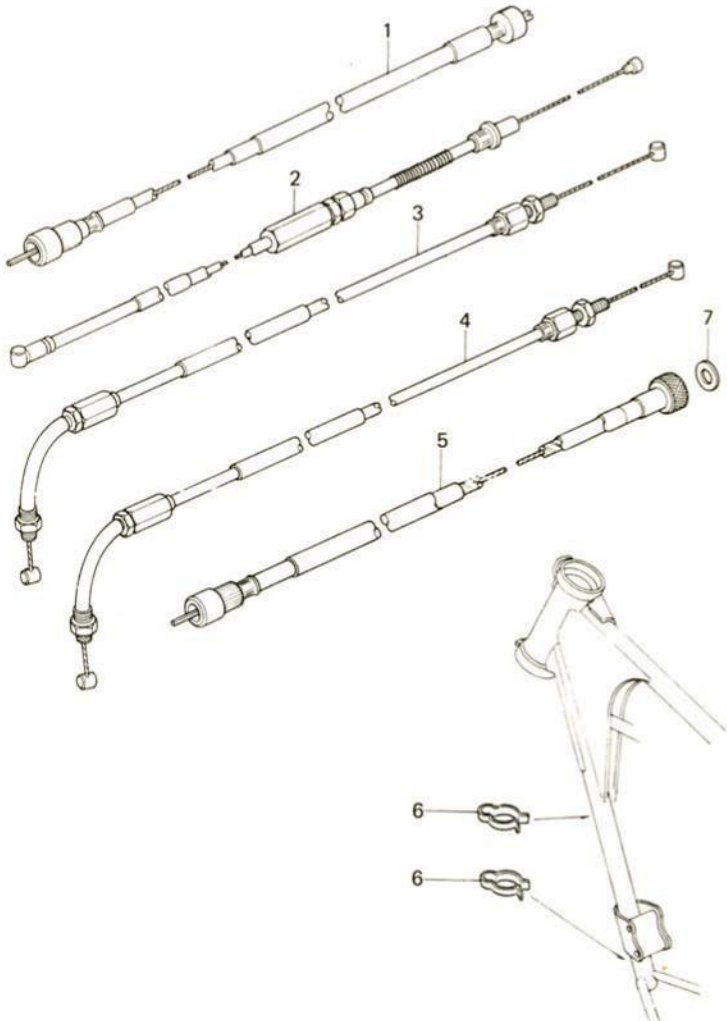

39. Speedometer, Tachometer

Rev. No.		Date	
----------	--	------	--


Ref. No.	Part No.	Part Name	Quantity	Remarks
1	11034-1535	BRACKET, lamp	1	
2	25005-1041	SPEEDOMETER, KPH (km/h)	1	
3	25015-1035	TACHOMETER (x 1000 rpm)	1	
	25015-1036	TACHOMETER (x 1000 r/min)	1	Use for S. Africa Market
4	13169-1133	PLATE, socket	1	
5	14025-1093	COVER, pilot box, lower	1	
6	14025-1094	COVER, speedometer	1	
7	14025-1095	COVER, tachometer	1	
8	14025-1096	COVER, pilot box damper	1	
9	23008-1031	SOCKET ASSY, pilot box	1	
10	25008-1021	BRACKET, meter	1	
11	25009-004	WASHER, plain, 5.2 x 16 x 1.2 t	4	
12	25010-022	SOCKET ASSY, meter	2	
13	25019-013	SHOCK DAMPER, meter	4	
14	25019-023	SHOCK DAMPER, pilot box	2	
15	25023-1008	COVER, pilot box, upper	1	
16	311B0800	NUT, 8 m/m	2	
17	411B0800	WASHER, plain, 8 m/m	2	
18	461F0800	WASHER, spring, 8 m/m	2	
19	92001-1154	BOLT, meter, 8 x 16	2	
20	92009-1040	SCREW, tapping, 4 x 10	2	
21	92009-1046	SCREW, countersunk, 4 x 45	2	
22	92020-017	NUT, cap, 5 m/m	4	
23	92069-018	BULB, 12V - 3.4W	6	
24	92075-1135	SHOCK DAMPER, meter	2	
25	92075-1136	SHOCK DAMPER, pilot box	1	
26	311B0600	NUT, 6 m/m	2	
27	411B0600	WASHER, plain, 6 m/m	2	
28	461F0600	WASHER, spring, 6 m/m	2	
29	92075-1106	SHOCK DAMPER, lamp bracket	2	
30	92075-1107	SHOCK DAMPER, lamp bracket	2	

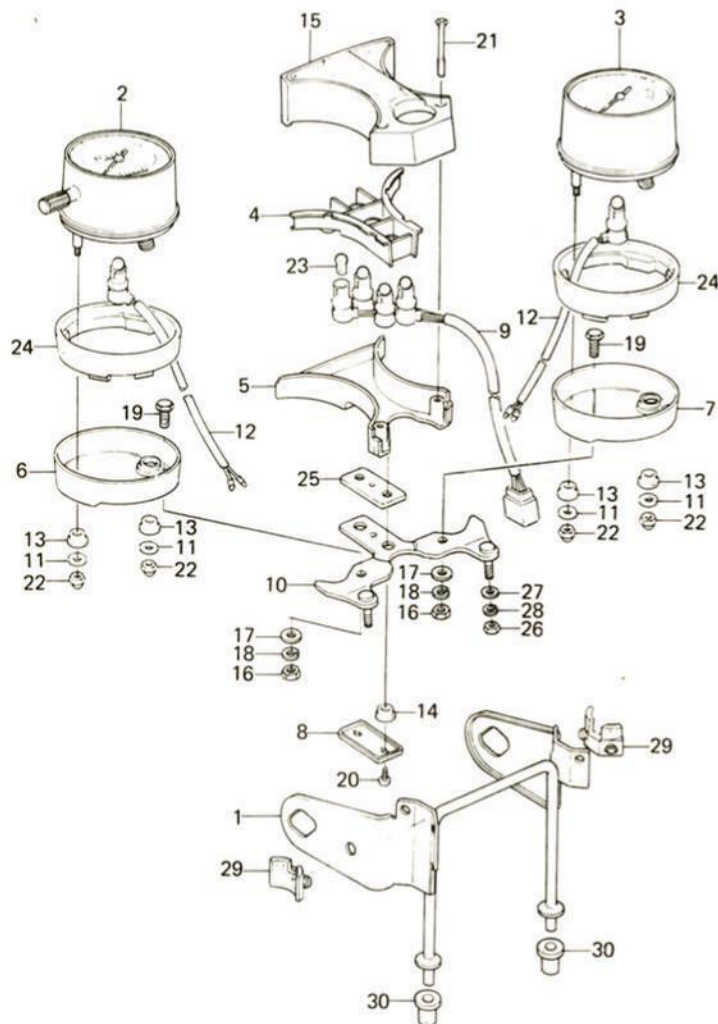

40. Head Lamp

Rev. No.



Date

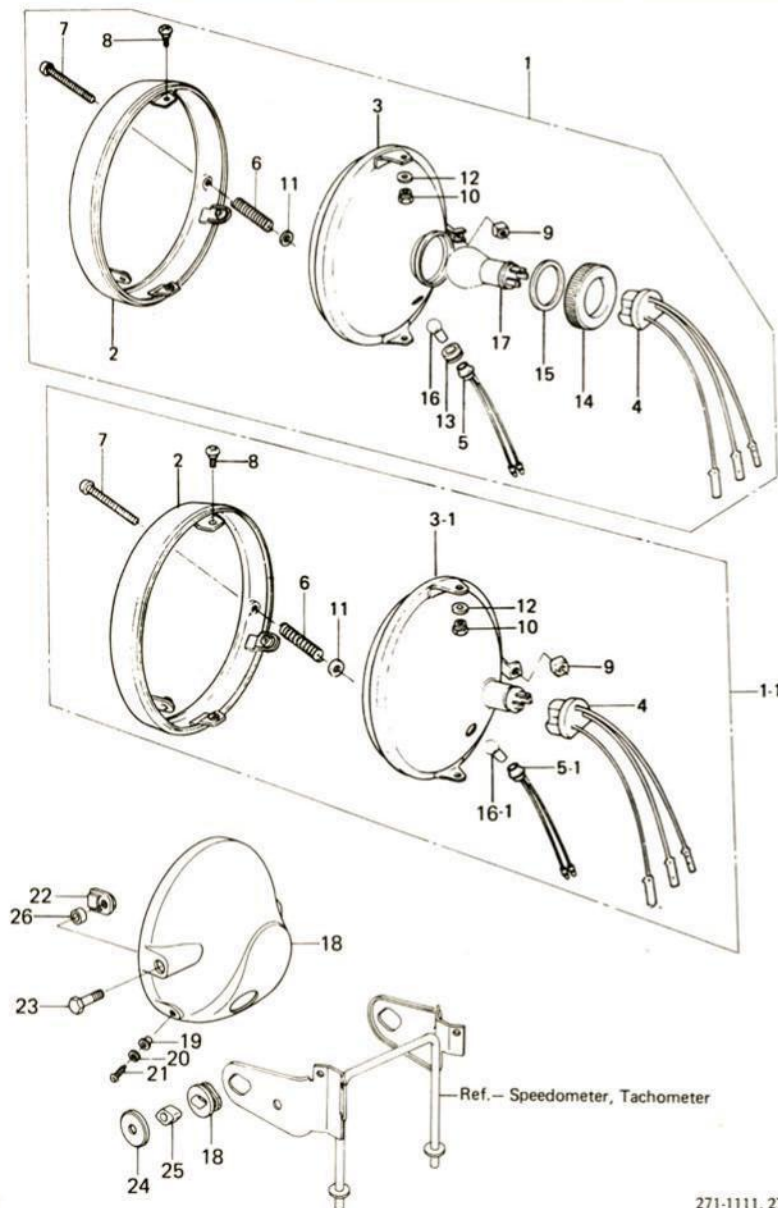

Ref. No.	Part No.	Part Name	Quantity		Remarks
			AUSTRALIA	GENERAL	
1	23004-063	LAMP UNIT, head		1	
1-1	23004-1013	LAMP UNIT, head	1		
2	23006-044	RIM, head lamp	1	1	
3	23007-066	LENS UNIT, head lamp		1	
3-1	23007-1012	SEALED BEAM UNIT, head lamp	1		
4	23008-037	SOCKET, head lamp	1	1	
5	23008-038	SOCKET, positioning lamp		1	
5-1	23008-1018	SOCKET, positioning lamp	1		
6	23014-011	SPRING, focus adjusting	1	1	
7	23019-021	SCREW, focus adjusting	1	1	
8	23019-023	SCREW, lens fitting	2	2	
9	23020-018	NUT, 4 m/m, nylon	1	1	
10	23020-023	NUT, 5 m/m	2	2	
11	23021-004	WASHER, 4.1 x 8 x 0.8 t	1	1	
12	23021-012	WASHER, rubber, 7 x 14.8 x 4 t	2	2	
13	23066-008	DAMPER RUBBER, positioning lamp		1	
14	23079-001	HOLDER, bulb		1	
15	23080-001	WASHER, bulb		1	
16	92069-075	BULB, 12V - 3W		1	
16-1	92069-018	BULB, 12V - 3 W, clear	1		
17	92069-081	BULB, 12V - 50/40W		1	
18	23005-047-21	BODY, head lamp, Flat Black	1	1	
19	23021-010	WASHER	2	2	
20	461F0500	WASHER, spring, 5 m/m	2	2	
21	92011-024	SCREW, pan head, 5 m/m	2	2	
22	23020-021	NUT, 10 m/m	2	2	
23	92007-024	BOLT, hex head, 10 x 35	2	2	
24	92022-289	WASHER, plain	2	2	
25	92027-1129	COLLAR, head lamp bracket	2	2	
26	92027-231	COLLAR, head lamp body	2	2	
27	92075-128	DAMPER RUBBER, head lamp bracket	2	2	

41. Tail Lamp

Rev. No.		Date	
----------	--	------	--

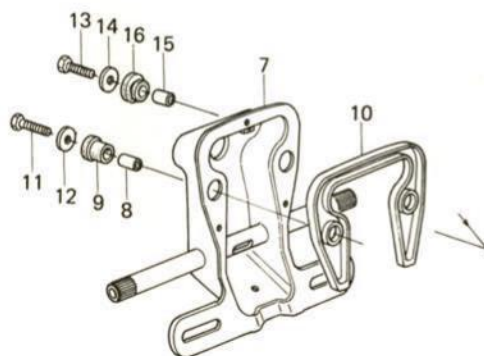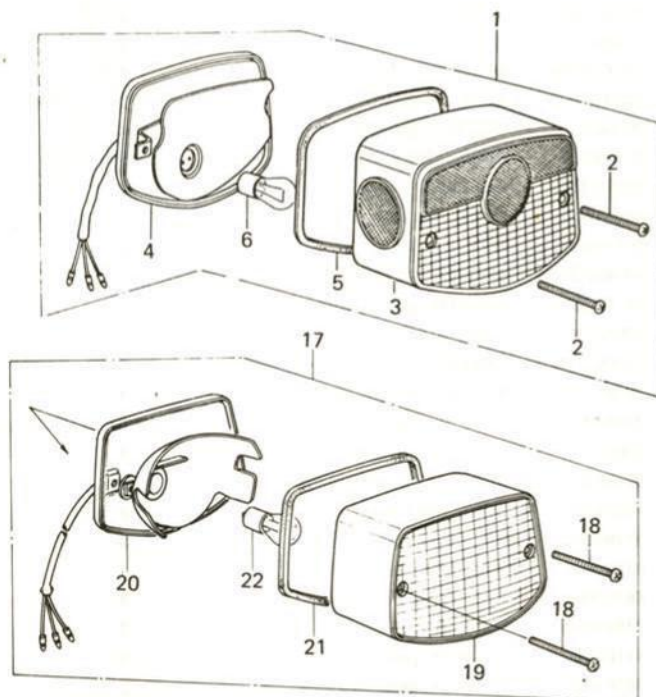


Ref. No.	Part No.	Part Name	Quantity	Remarks
1	23025-1013	TAIL LAMP UNIT,	1	
2	220E0460A	SCREW, pan head, 4 x 60	2	
3	23026-1010	LENS, tail lamp	1	
4	23027-041	CASE, tail lamp	1	
5	23028-021	GASKET, tail lamp lens	1	
6	92069-059	BULB, 12V-32/3CP (27/8W)	1	
7	23036-1013	BRACKET, tail lamp, "220-40856" MARK	1	
8	92027-156	COLLAR, 6.8 x 10 x 14.5	2	
9	92075-1092	DAMPER RUBBER	2	
10	92075-1103	DAMPER RUBBER, tail lamp	1	
11	11080622	BOLT, hex head, 6 x 22	2	
12	92022-125	WASHER, plain, 6.5 x 20 x 1.6 t	2	
13	11080620	BOLT, hex head, 6 x 20	3	
14	92022-125	WASHER, plain, 6.5 x 20 x 1.6 t	3	
15	92027-120	COLLAR	3	
16	92075-112	DAMPER RUBBER	3	
17	23025-066	TAIL LAMP UNIT, "220-40783" MARK	1	
18	220E0460A	SCREW, pan head, 4 x 60	2	
19	23026-035	LENS, tail lamp	1	Use for Australia Market
20	23027-042	CASE, tail lamp	1	
21	23028-021	GASKET, tail lamp lens	1	
22	92069-063	BULB, 12V - 21/5W	1	

42. Turn Signal Lamp

Rev. No.



Date

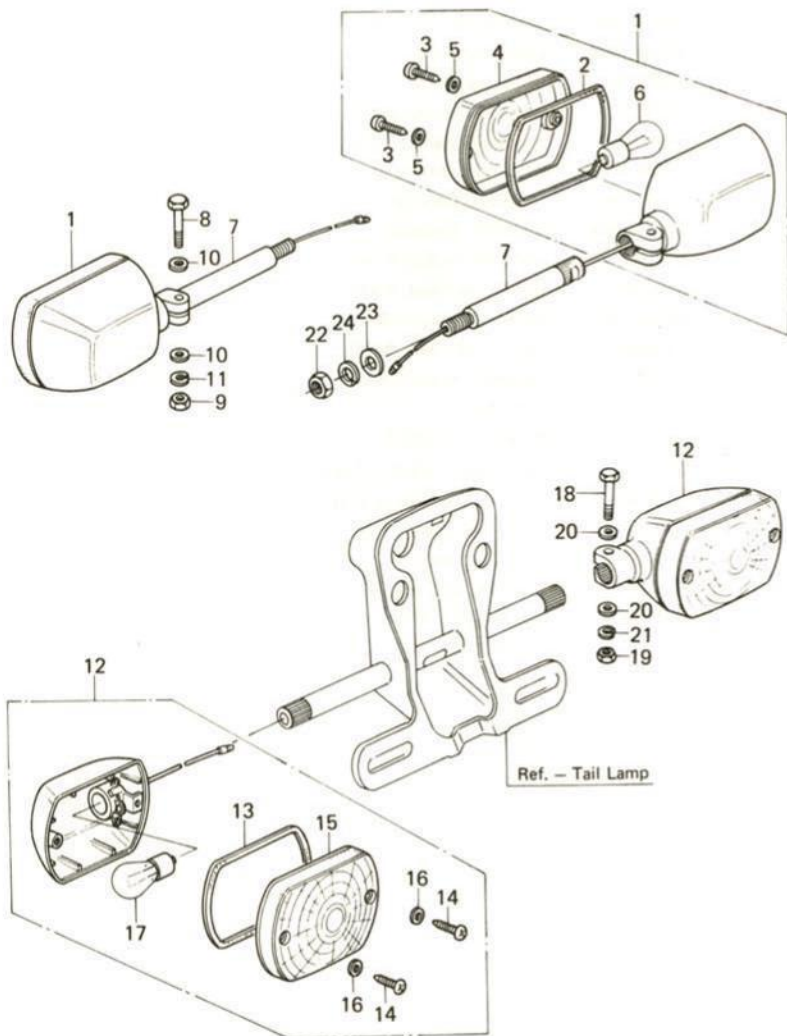

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	23040-1018	LAMP ASSY, front turn signal	2	
2	11009-1052	GASKET, turn signal lamp lens	2	
3	220E0412A	SCREW, pan head, 4 x 12	4	
4	23048-1006	LENS, front turn signal	2	"045-7280" MARK
5	23058-002	WASHER, plain, 4 m/m, rubber	4	
6	92069-055	BULB, 12V - 32CP (23W)	2	
7	23051-1022	BRACKET, front turn signal lamp	2	
8	110N0630	BOLT, hex head, 6 x 30	2	
9	311B0600	NUT, 6 m/m	2	
10	411B0600	WASHER, plain, 6 m/m	4	
11	461F0600	WASHER, spring, 6 m/m	2	
12	23040-1018	LAMP ASSY, rear turn signal	2	
13	11009-1052	GASKET, turn signal lamp lens	2	
14	220E0412A	SCREW, pan head, 4 x 12	4	
15	23048-1006	LENS, rear turn signal	2	"045-7280" MARK
16	23058-002	WASHER, plain, 4 m/m, rubber	4	
17	92069-055	BULB, 12V - 32CP (23W)	2	
18	110N0630	BOLT, hex head, 6 x 30	2	
19	311B0600	NUT, 6 m/m	2	
20	411B0600	WASHER, plain, 6 m/m	4	
21	461F0600	WASHER, spring, 6 m/m	2	
22	315B1000	NUT, 10 m/m	2	
23	411D1000	WASHER, plain, 10 m/m	2	
24	461F1000	WASHER, spring, 10 m/m	2	

43. Ignition Switch, Brake Lamp Switch, Reflector

Rev. No.	Date
----------	------

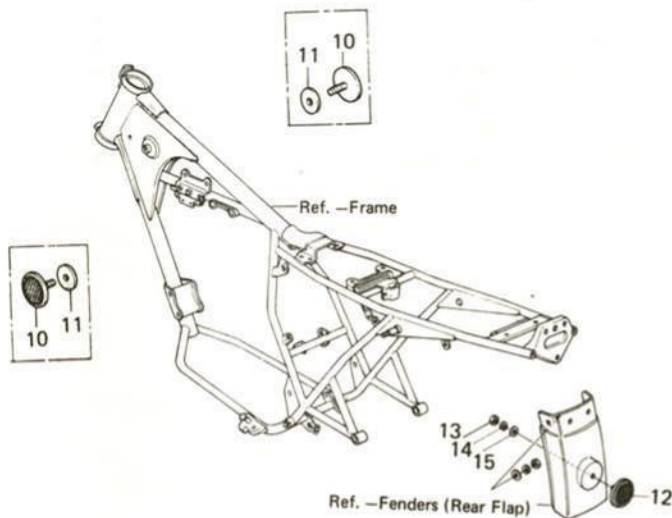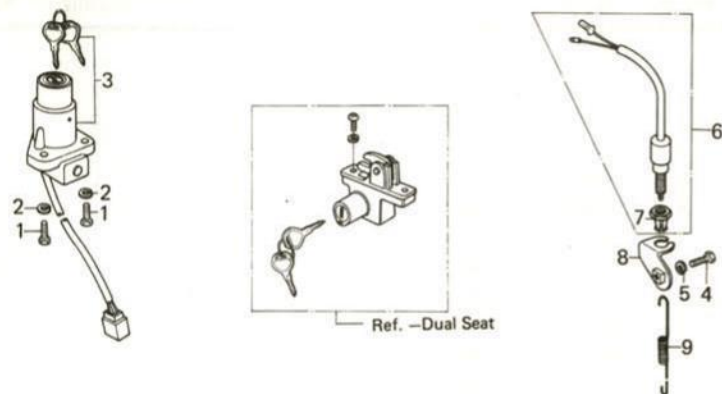


Ref. No.	Part No.	Part Name	Quantity	Remarks
1	110B0616	BOLT, hex head, 6 x 16	2	
2	461F0600	WASHER, spring, 6 m/m	2	
3	27005-1027	SWITCH ASSY, ignition, with steering lock	1	
4	110B0618	BOLT, hex head, 6 x 18	1	
5	461F0600	WASHER, spring, 6 m/m	1	
6	27010-025	SWITCH, brake lamp	1	
7	27037-001	NUT, brake lamp switch	1	
8	32059-1006	BRACKET, brake lamp switch	1	
9	92081-1086	SPRING, brake lamp switch	1	
10	28012-016	REFLECTOR, reflex	2	
11	92094-011	DAMPER RUBBER, reflector	2	
12	28012-1001	REFLECTOR, rear reflex	1	
13	312B0500A	NUT, 5 m/m	1	Use for Australia Market
14	461F0500	WASHER, spring, 5 m/m	1	
15	92022-104	WASHER, plain, 6 m/m	1	

44. Electrical Equipments


Rev. No.

Date

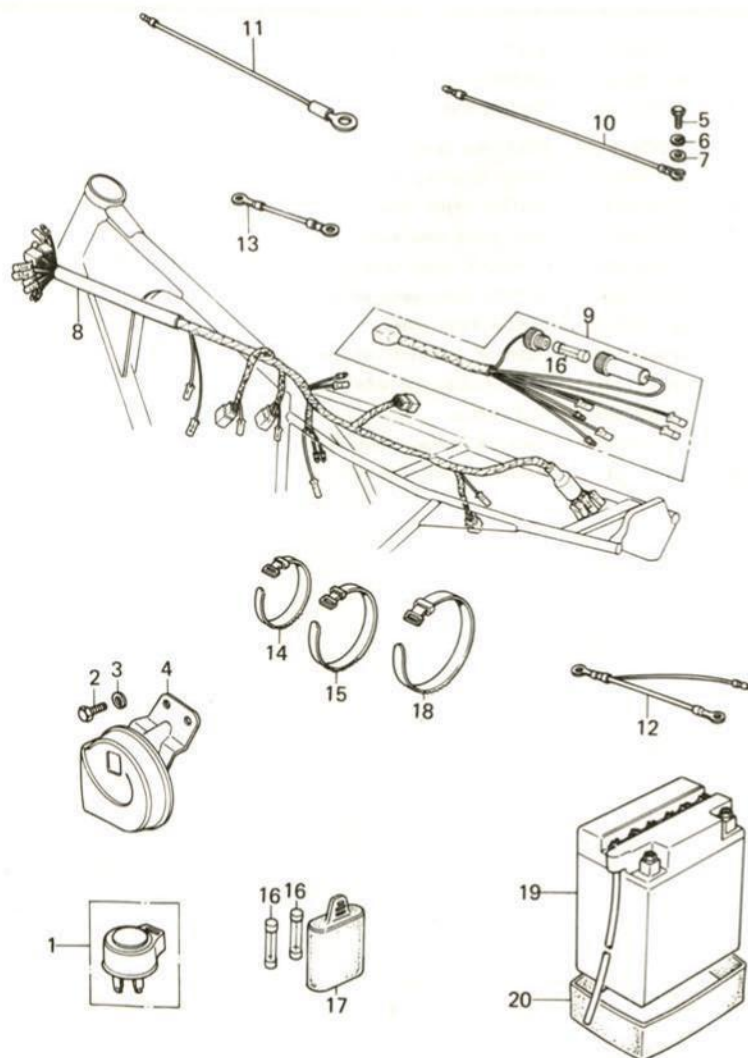

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	27002-011	RELAY, turn signal	1	
2	110B0612	BOLT, hex head, 6 x 12	2	
3	461F0600	WASHER, spring, 6 m/m	2	
4	27003-078	HORN	1	
5	110B0612	BOLT, hex head, 6 x 12	1	
6	461F0600	WASHER, spring, 6 m/m	1	
7	411B0600	WASHER, plain, 6 m/m	1	
8	26001-1057	WIRING HARNESS, main	1	
9	26001-1103	WIRING HARNESS, sub	1	
10	26011-039	WIRE, lead, rear turn signal, L = 250 m/m	1	
11	26011-063	WIRE, lead, front turn signal, L = 185 m/m	2	
12	26011-1033	WIRE, lead, battery ground	1	
13	26011-1034	WIRE, lead, crankcase ground, L = 80 m/m	1	
14	92072-030	BAND, L = 123 m/m	5	
15	92072-056	BAND, L = 186 m/m	2	
16	26006-007	FUSE, 15A, L = 26 m/m	3	
17	26016-004	HOLDER, spare fuse	1	
18	92072-1032	BAND, L = 324 m/m	1	
19	26012-1018	BATTERY, 12V 11AH, YB10L-A2	1	
20	92072-1020	BAND, rubber, battery, I.D. = 128 m/m	1	

45. Tools

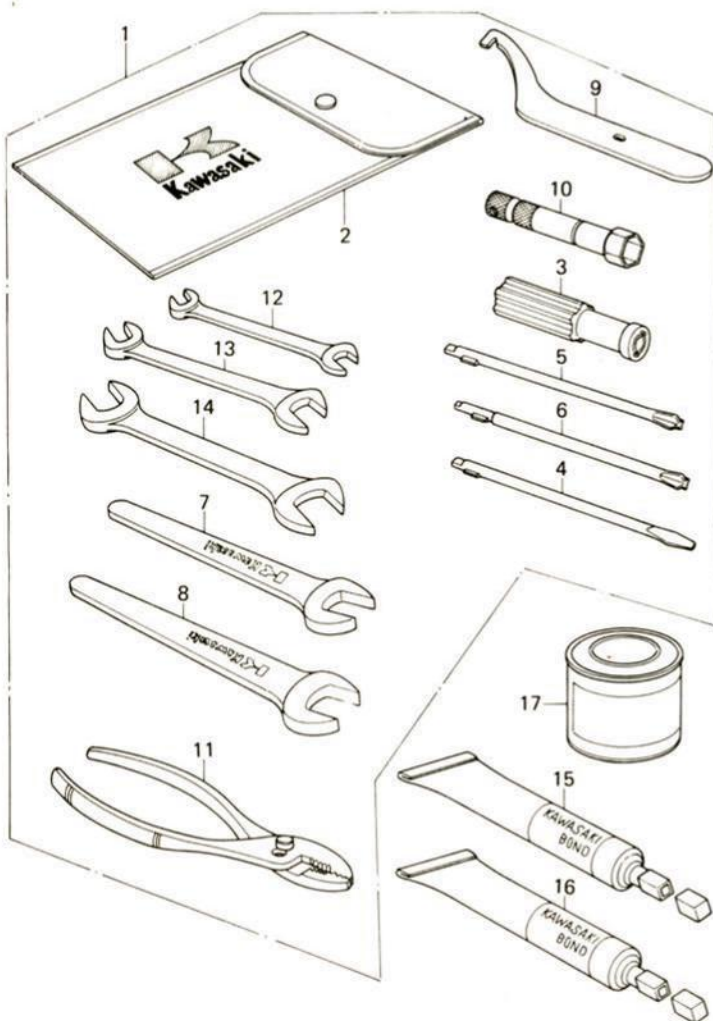


Rev. No.	Date
----------	------

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	56007-1022	TOOL KIT	1	
2	56008-009	BAG, tool	1	
3	92106-1001	GRIP, screw driver	1	
4	92107-007	SCREW DRIVER, # 2 slot	1	
5	92107-006	SCREW DRIVER, # 2 phillips	1	
6	92107-008	SCREW DRIVER, # 3 phillips	1	
7	92110-1004	WRENCH, open end, 19 m/m	1	
8	92110-1005	WRENCH, open end, 22 m/m	1	
9	92110-1014	WRENCH, hook	1	
10	92110-1018	WRENCH, spark plug	1	
11	92112-005	PLIERS, 125 m/m	1	
12	92126-001	WRENCH, open end, 8 x 10	1	
13	92126-002	WRENCH, open end, 12 x 13	1	
14	92126-003	WRENCH, open end, 14 x 17	1	
15	92104-002	LIQUID GASKET, 100gr tube	(1)	
16	56019-120	LIQUID GASKET, bond # 10, 100gr tube	(1)	
17	56019-108-4U	PAINT, Candy Emerald Green, 1/12L	(1)	
	56019-108-7W	PAINT, Metallic Stardust Silver, 1/12L	(1)	

46. Special Service Tools "A"


Rev. No.		Date	
----------	--	------	--

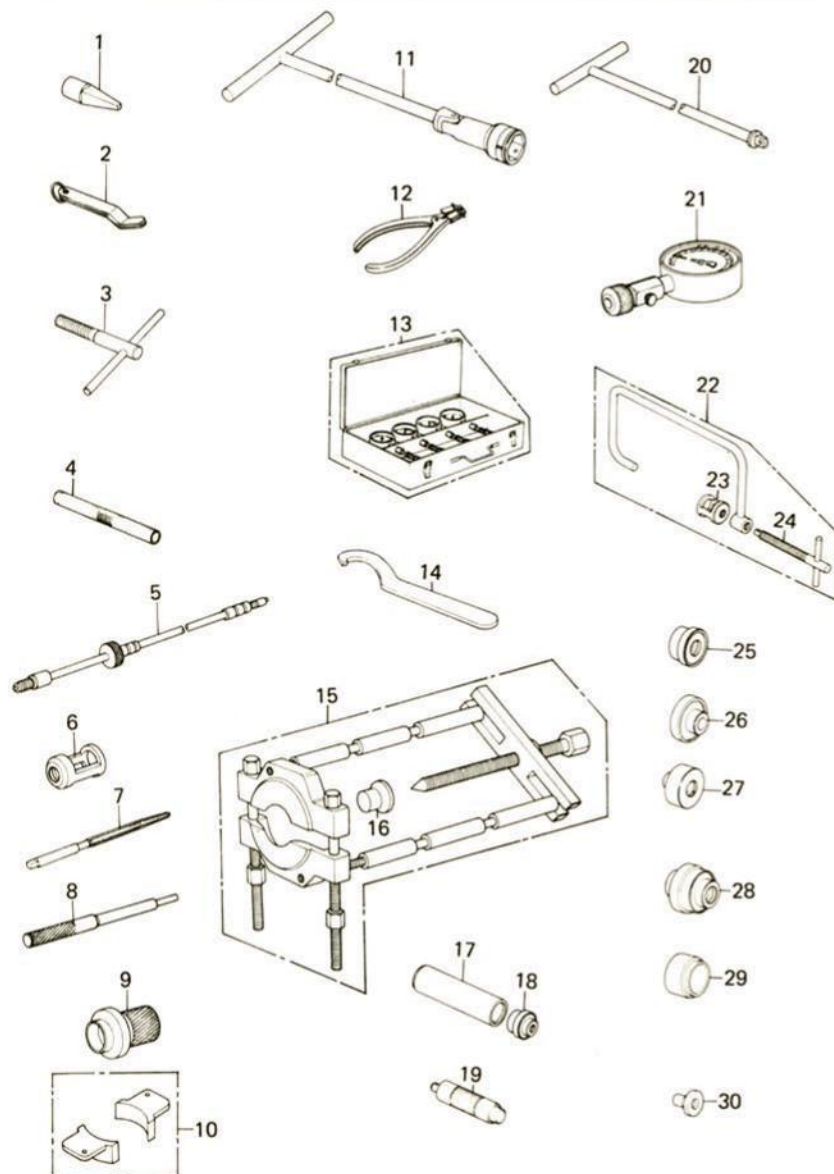

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	57001-1011	ADAPTER, front fork cylinder holder	1	
2	57001-1013	THICKNESS GAUGE, valve	1	
3	57001-1016	PULLER, rotor	1	
4	57001-1017	GAUGE, fuel level, tube	1	
5	57001-1018	ADAPTER HOSE, compression gauge	1	
6	57001-1019	ADAPTER, valve spring compressor	1	
7	57001-1020	REAMER, valve guide	1	
8	57001-1021	ARBOR, valve guide	1	
9	57001-1022	GUIDE, cam shaft oil seal	1	
10	57001-1023	HOLDER, piston	2	
11	57001-1024	WRENCH, spark plug	1	
12	57001-115	PLIERS, piston ring	1	
13	57001-127	GAUGE SET, vacuum	1	
14	57001-134	WRENCH, stem nut, 48 m/m	1	
15	57001-135	PULLER, bearing	1	
16	57001-136	ADAPTER, stem bearing	1	
17	57001-137	DRIVER, stem bearing	1	
18	57001-138	DRIVER, stem cup	1	
19	57001-139	HOLDER, bearing driver	1	
20	57001-183	HANDLE, front fork cylinder holder	1	
21	57001-221	GAUGE, compression	1	
22	57001-241	COMPRESSOR ASSY, valve spring	1	
23	57001-242	ADAPTER, valve spring compressor	(1)	Use for KZ400
24	57001-244	BOLT, valve spring compressor	1	
25	57001-284	DRIVER, wheel bearing	1	
26	57001-289	DRIVER, wheel bearing, "B"	1	
27	57001-290	DRIVER, wheel bearing, "C"	1	
28	57001-293	DRIVER, stem cap	1	
29	57001-294	ADAPTER, stem bearing driver	1	
30	57001-317	ADAPTER, bearing puller	1	

47. Special Service Tools "B"

Rev. No.	Date
----------	------

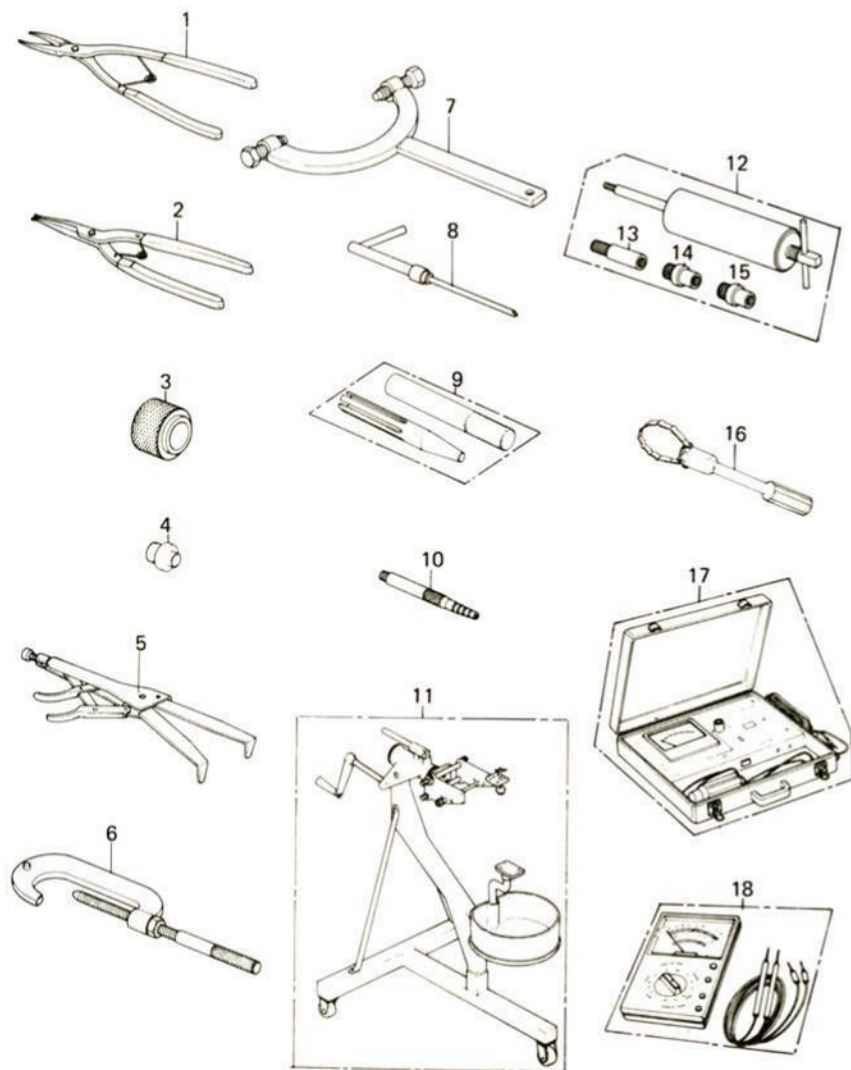

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	57001-143	PLIERS, circlip, inside	1	
2	57001-144	PLIERS, circlip, outside	1	
3	57001-191	DRIVER, front fork oil seal	1	
4	57001-264	GUIDE, shift shaft oil seal	1	
5	57001-305	HOLDER, clutch	1	
6	57001-307	HOLDER, engine sprocket	1	
7	57001-308	HOLDER, fly wheel	1	
8	57001-351	ADJUSTER, balance	1	
9	57001-380	DRIVER, transmission circlip	1	
10	57001-401	ADAPTER, vacuum gauge	2	
11	57001-900	ENGINE STAND	1	
12	57001-910	PULLER ASSY, piston pin	1	
13	57001-912	ADAPTER "A", piston pin	(1)	Use for KE125
14	57001-913	ADAPTER "B", piston pin	1	
15	57001-914	ADAPTER "C", piston pin	(1)	Use for Z650
16	57001-921	COMPRESSOR ASSY, piston ring	2	
17	57001-980	ELECTRO TESTER	1	
18	57001-983	HAND TESTER	1	