



RESERVDELAR SPARE PARTS 1980

Gäller fr.o.m. ram nr
Valid from frame No MM07673, MN00001

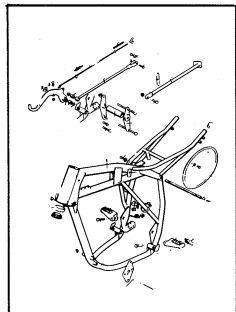


4


Sida
Page

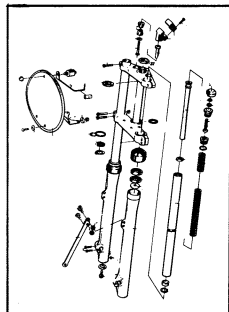


13

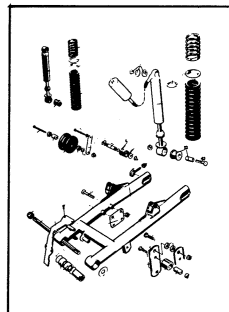


17

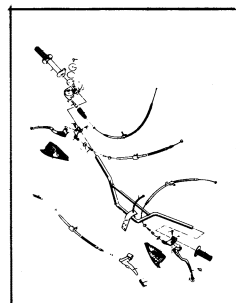


21

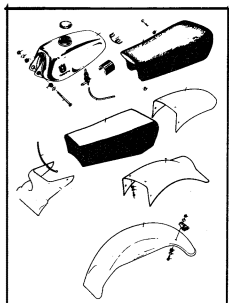


23

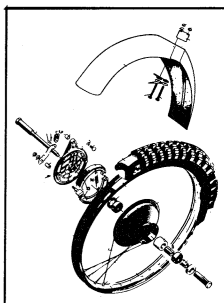


25

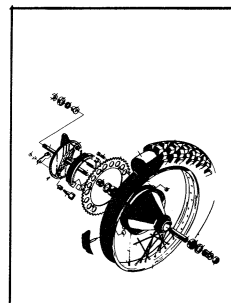


33

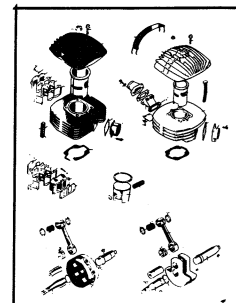


37

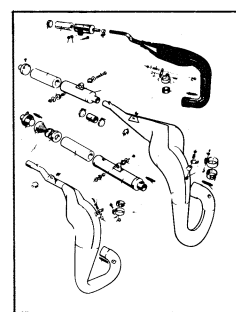


43

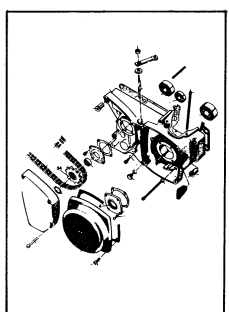


49

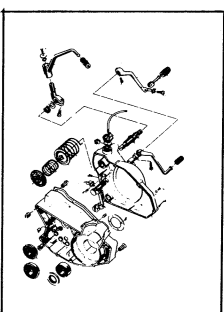


61

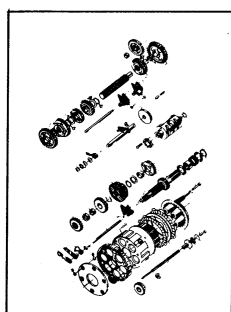


73

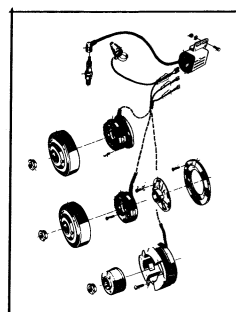


83

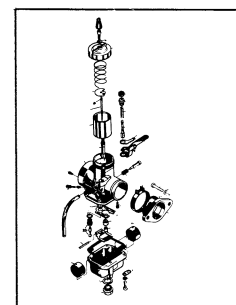

89

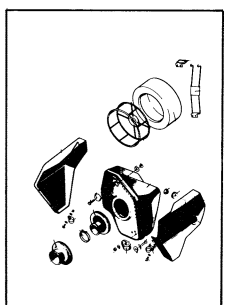

93

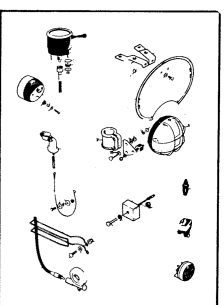

95

Tillbehör/
Accessories



Dimensioner och beteckningar Dimensions and descriptions

Skravar:
Screws: Gängdimension x längd (M6 x 30)
Thread dimensions x length

Muttrar:
Nuts: Gängdimension (M8)
Thread dimension

Brickor:
Washer: Typ, inre $\varnothing$ x yttre $\varnothing$ x tjocklek (FBB 6,4x10x1)
Type, inner $\varnothing$ x exterior $\varnothing$ x thickness

Typen: FBB = Fjäderbricka, öppen
Types: Spring washer open

FA = Fjäderbricka
Spring washer

LI = Låsbricka innertandad
Lock washer, inside indent

Kullager:
Ball bearings: Fabrikantens beteckning (SKF 6301)
Manufacturers description

Tätningar:
Sealing rings: Inre $\varnothing$ x yttre $\varnothing$ x tjocklek (25x42x7)
Inner $\varnothing$ x exterior $\varnothing$ x thickness

L = Längd
Length

z = Antal kuggar
Numbers of cogs

N = Ny reservdel
New spare part

Rätt till ändringar förbehålles.

Specifications subject to change without notice.

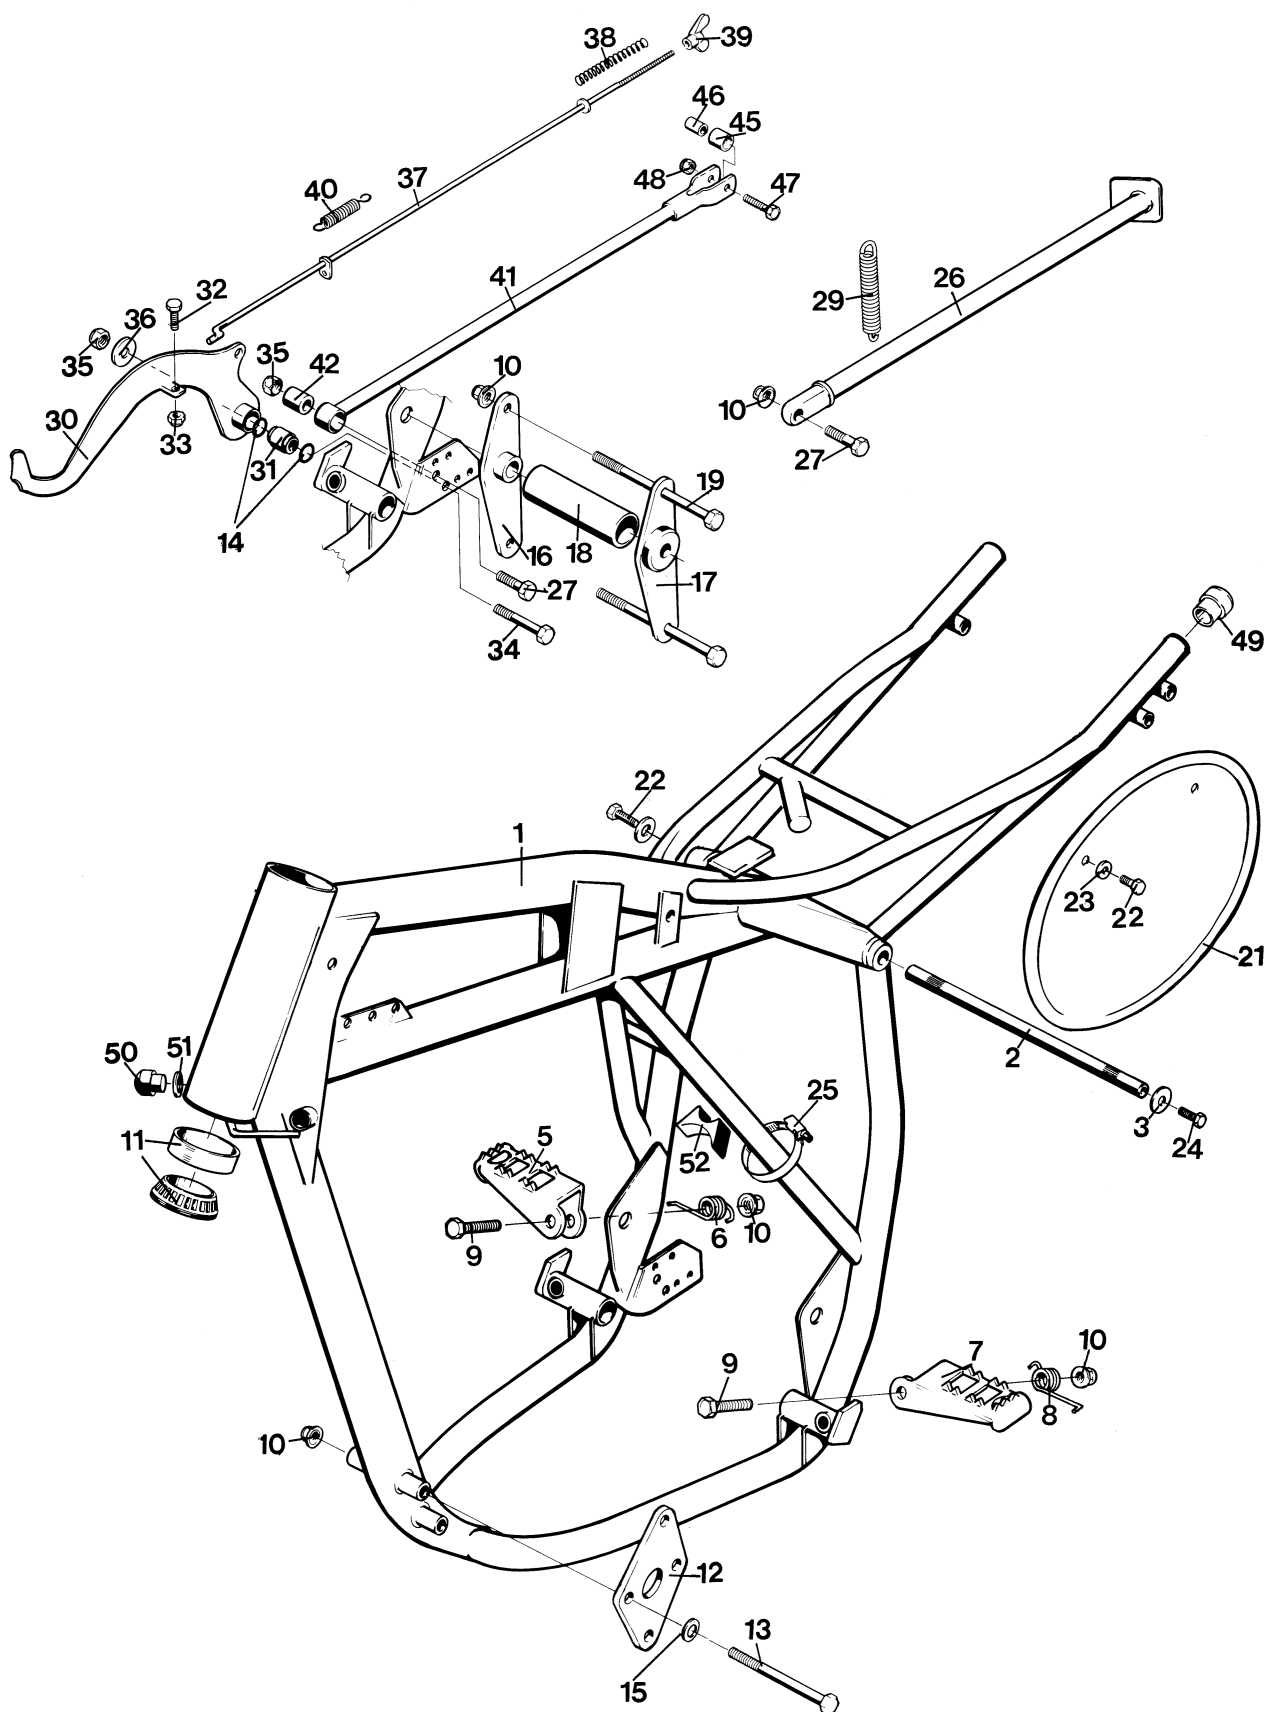


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av	
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
N	1	15 10 846-01	1		1		1			1							Ram Frame	
	2	15 10 787-01	1		1		1			1							Fästbult Att. bolt	
	3	28 01 416-01	2		2		2			2							Bricka 6,5x22x1,5 Washer	
	5	15 13 051-01	1		1		1			1							Fotstöd höger Footrest right	
	6	15 13 076-01	1		1		1			1							Fjäder Spring	
	7	15 13 053-01	1		1		1			1							Fotstöd vänster Footrest left	
	8	15 13 077-01	1		1		1			1							Fjäder Spring	
	9	20 06 462-12	2		2		2			2							Skruv M8x55 Screw	
	10	25 82 118-14	7		9		9			9							Mutter M8 Nut	
	11	15 13 070-01	2		2		2			2							Styrlager kpl. Bearing compl.	
N	12	15 10 783-01			2		2			2							Motorfästplåt Engine clamp plate	
		15 10 784-01	2														Motorfästplåt Engine clamp plate	
	13	20 06 472-14	4		4		4			4							Skruv M8 x 105 Screw	
N	14	29 70 404-03	2		2		2			2							O-ring O-ring	
	15	28 16 231-01	4		4		4			4							Bricka 8,4 x 16 Washer	
	16	15 10 665-01			1		1			1							Motorfästplåt Engine clamp plate	
	17	15 10 702-01			1		1			1							Motorfästplåt Engine clamp plate	
	18	15 10 559-01			1		1			1							Distans Distance	
	19	20 06 476-14			2		2			2							Skruv M8 x 125 Screw	
	21	15 19 458-01			2		2										Nummerskylt, grön Numberplate green	
		15 19 461-01								2							Nummerskylt, gul Number plate yellow	
		15 19 479-01	2														Nummerskylt, vit Number plate white	
	22	20 06 364-12	2		2		2			2							Skruv M6 x 10 Screw	
	23	28 16 211-01	2		2		2			2							Bricka 6,4 x 14 Washer	
	24	20 06 368-12	1		1		1			1							Skruv M6 x 16 Screw	
	25	16 13 538-01	4		4		4			4							Klamma Clamp	
	26	15 10 604-01	1		1		1			1							Parkeringsstöd Parking rest	
	27	20 06 455-11	2		2		2			2							Skruv M8x30 Screw	
	29	15 10 442-01	1		1		1			1							Fjäder Spring	
	30	15 15 433-01	1		1		1			1							Bromspedal Brake pedal	
	31	15 15 431-01	1		1		1			1							Bussning Bushing	
	32	20 06 371-12	1		1		1			1							Skruv M6x22 Screw	
	33	25 80 142-01	1		1		1			1							Låsmutter M6 Nut	
	34	20 06 461-14	1		1		1			1							Skruv M8x50 Screw	
	35	25 80 153-01	2		2		2			2							Låsmutter M8 Nut	
	36	28 01 501-01	1		1		1			1							Bricka Washer	
	37	15 15 419-01	1														Bromsstång Brake rod	
N		15 15 419-02			1		1			1							Bromsstång Brake rod	
	38	12 15 160-01	1		1		1			1							Fjäder Spring	

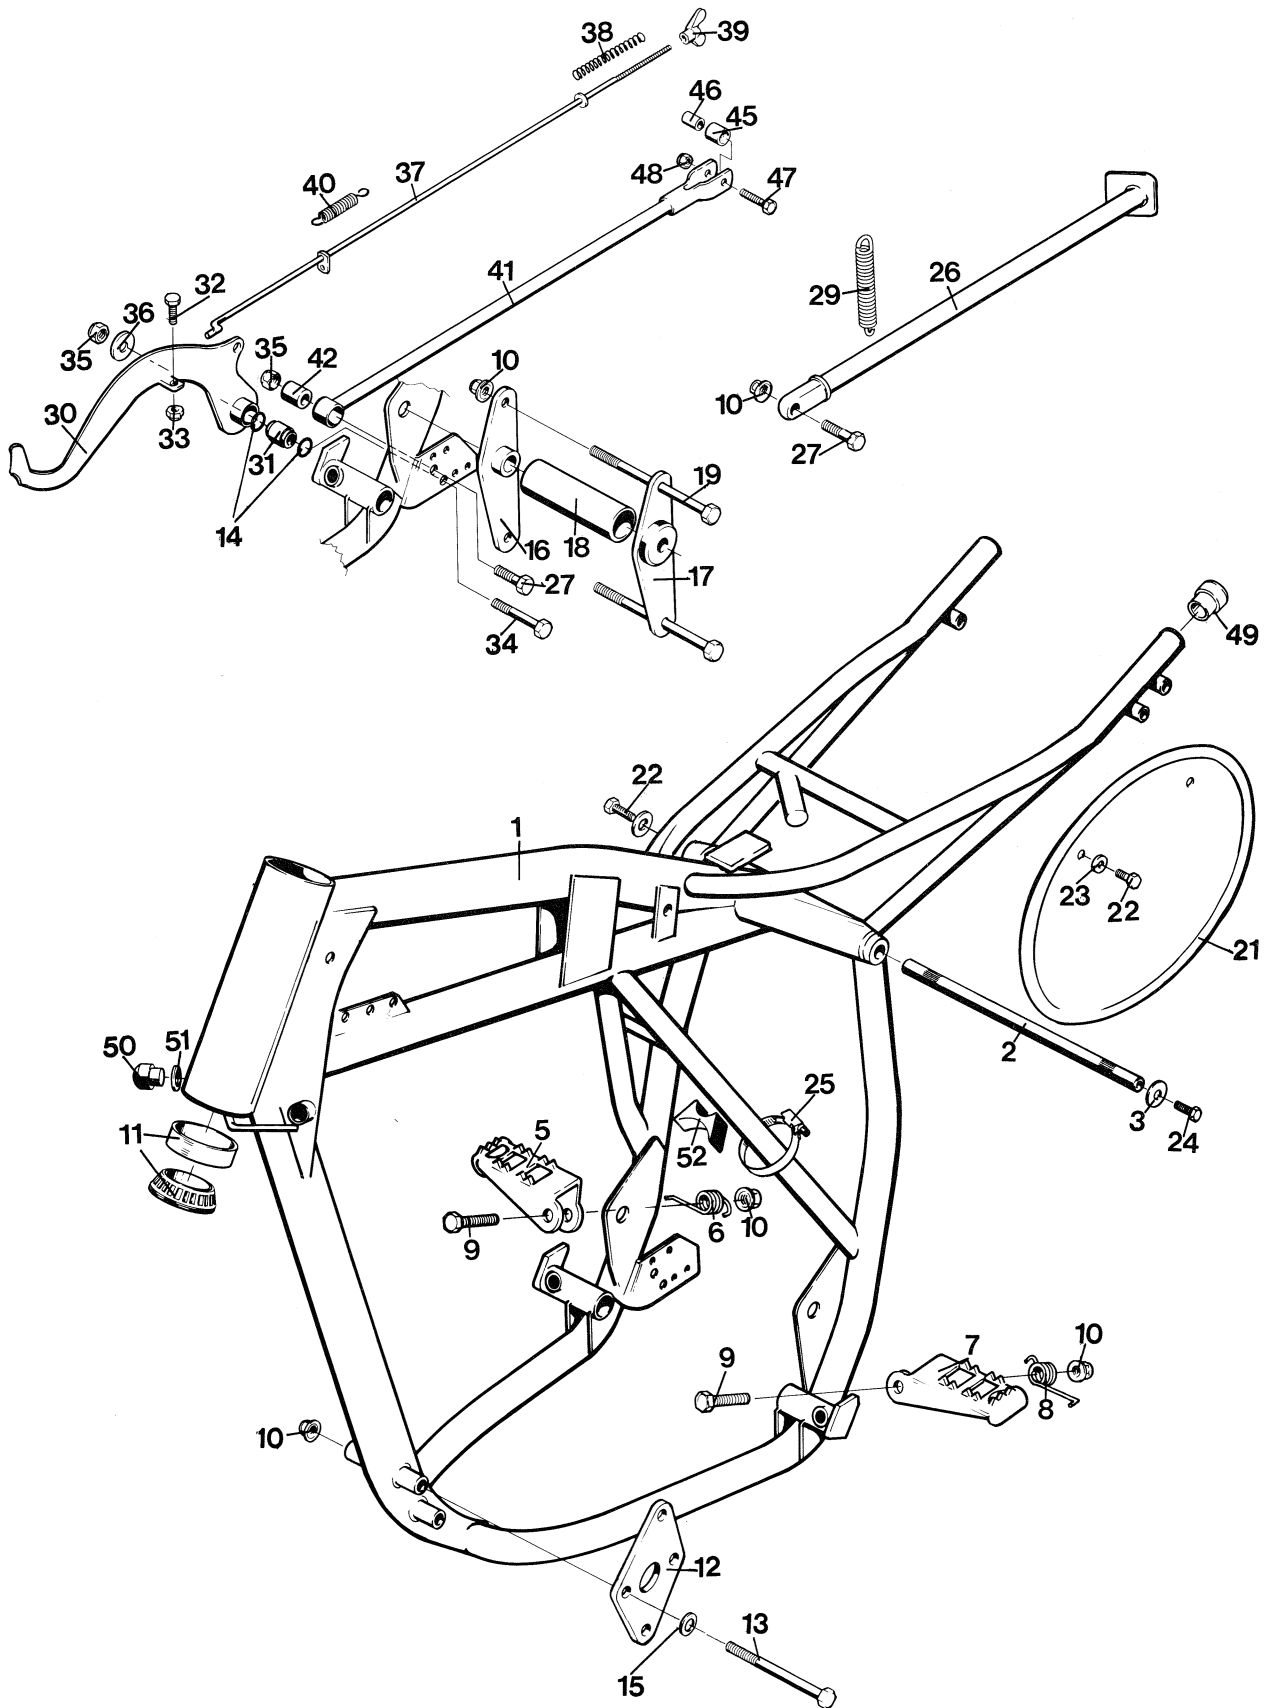


Fig.	Part Number Detaljnummer	Quantity/Antal															Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
39	15 15 173-01	1		1		1			1							Vingmutter Wing nut		
40	15 19 864-01	1		1		1			1							Fjäder Spring		
41	15 15 434-01	1														Bromslänk Brakelink		
	15 15 434-02			1		1			1							Bromslänk Brake link		
42	15 15 431-01	1		1		1			1							Bussning Bushing		
45	15 15 107-01	1		1		1			1							Bussning Bushing		
46	15 15 108-01	1		1		1			1							Hylsa Sleeve		
47	20 06 374-12	1		1		1			1							Skruv M6x30 Screw		
48	25 80 142-01	1		1		1			1							LåsmutterM6 Nut		
49	15 19 537-01	2		2		2			2							Propp Plug		
50	15 10 555-01	2		2		2			2							Buffert Buffer		
51	28 01 634-11	2		2		2			2							Bricka Washer		
52	15 19 473-01	2		2		2			2							Reservoargummi Reservoir rubber		

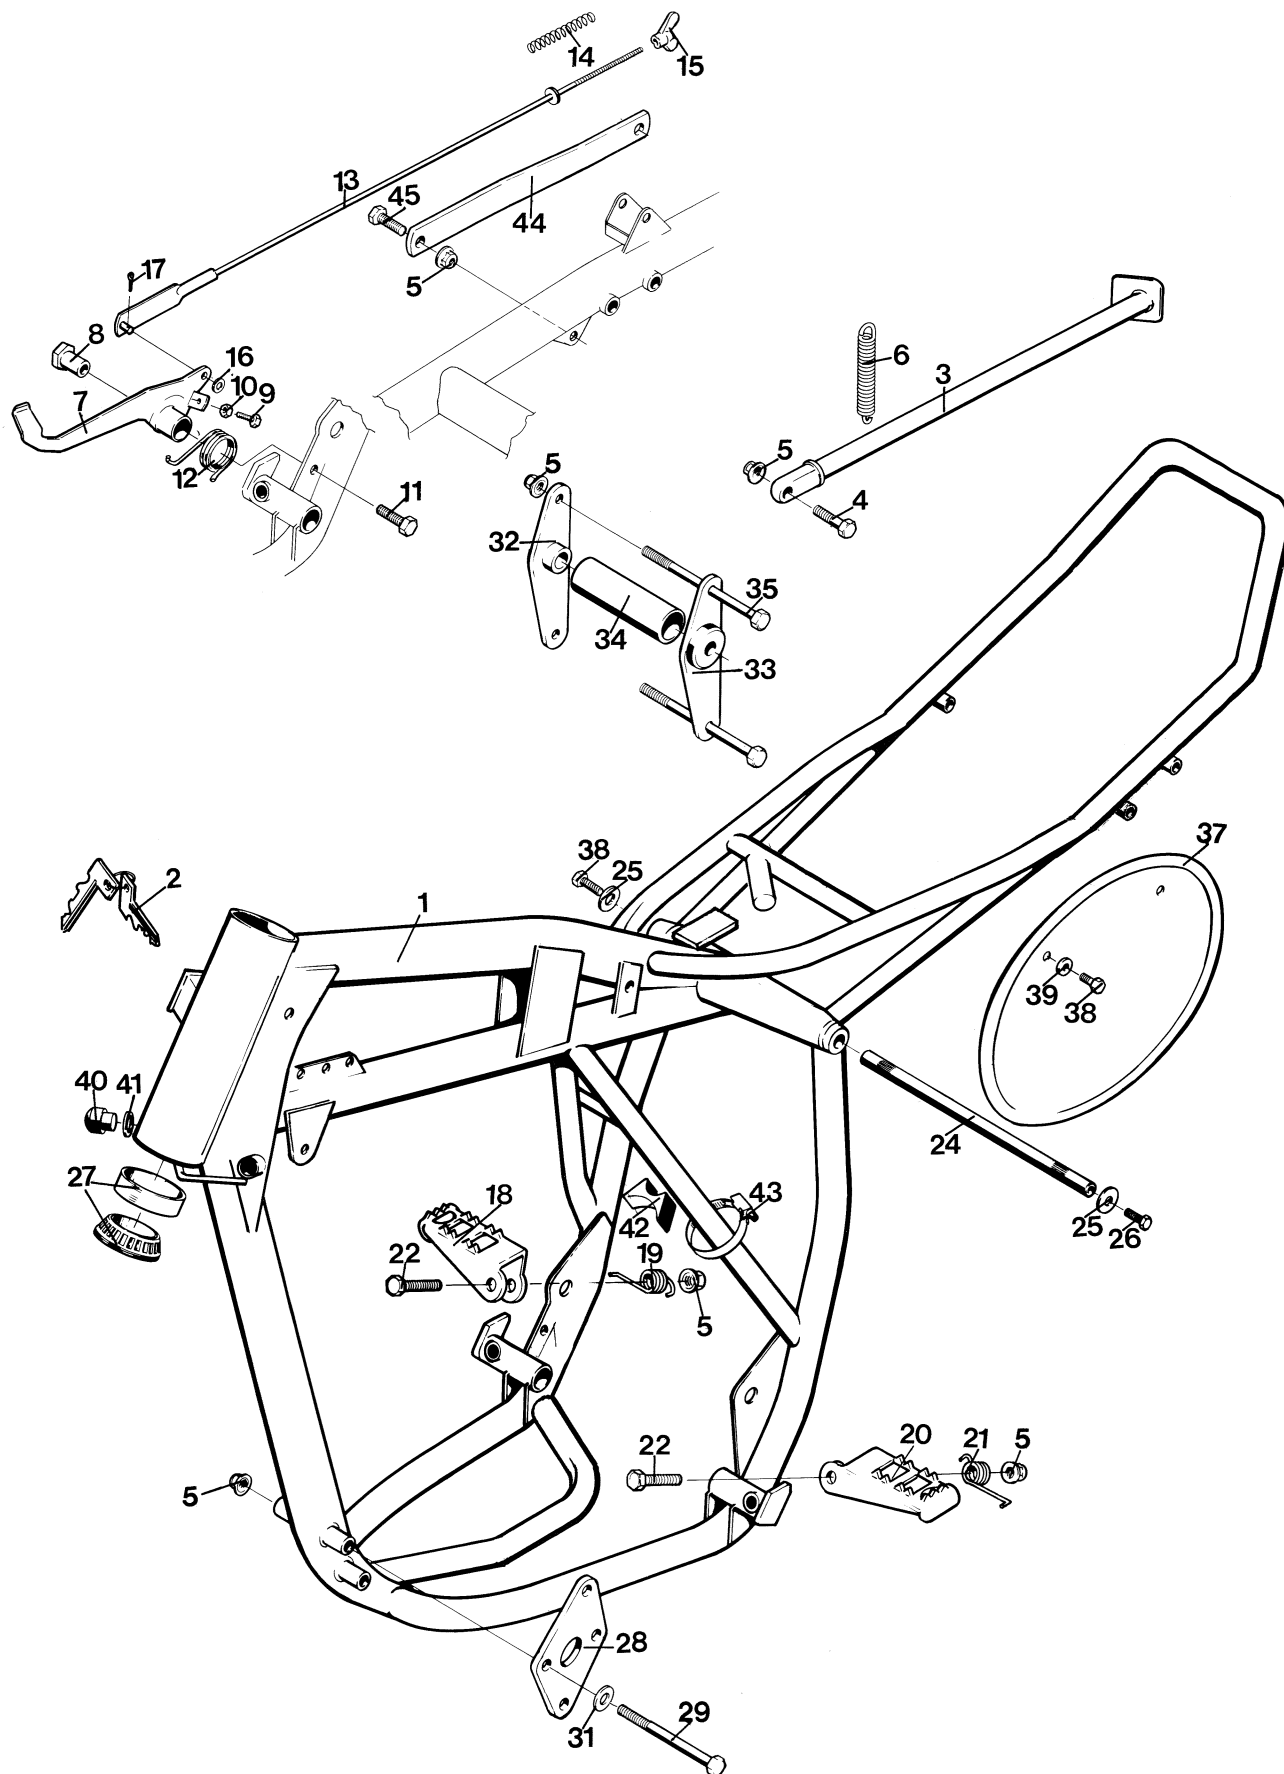


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	15 10 882-01						1	1		1		1				Ram	
	15 10 882-02		1		1						1					Frame	
	15 10 829-01													1	1	Ram	
2	15 13 088-01		1		1						1					Frame	
3	15 10 604-01		1		1		1	1		1	1	1	1	1		Styrlås, insats	
4	20 06 455-11		1		1		1	1		1	1	1	1	1		Steering lock	
5	25 82 118-14		8		10		10	10		10	10	10	8	8		Parkeringsstöd	
6	15 10 442-01		1		1		1	1		1	1	1	1	1		Parking rest	
7	15 15 447-01		1		1		1	1		1	1	1	1	1		Skruv M8x30	
8	15 15 448-01		1		1		1	1		1	1	1	1	1		Screw	
9	20 06 368-12		1		1		1	1		1	1	1	1	1		Mutter M8	
10	25 80 142-01		1		1		1	1		1	1	1	1	1		Nut	
11	20 06 455-12		1		1		1	1		1	1	1	1	1		Fjäder	
12	15 10 835-01		1		1		1	1		1	1	1	1	1		Spring	
13	15 15 444-01		1		1		1						1	1		Bromspedal	
	15 15 444-02									1	1					Brake pedal	
	15 15 444-03							1				1				Bussning	
14	12 15 160-01		1		1		1	1		1	1	1	1	1		Bushing	
15	15 15 173-01		1		1		1	1		1	1	1	1	1		Skruv M6x16	
16	28 16 201-01		2		2		2	2		2	2	2	2	2		Screw	
17	28 35 151-01		1		1		1	1		1	1	1	1	1		Låsmutter M6	
18	15 13 051-01		1		1		1	1		1	1	1	1	1		Nut	
19	15 13 076-01		1		1		1	1		1	1	1	1	1		Skruv M8x30	
20	15 13 053-01		1		1		1	1		1	1	1	1	1		Screw	
21	15 13 077-01		1		1		1	1		1	1	1	1	1		Returfjäder	
22	20 06 462-12		2		2		2	2		2	2	2	2	2		Spring	
24	15 10 787-01		1		1		1	1		1	1	1	1	1		Bromsstång	
25	28 01 416-01		2		2		2	2		2	2	2	2	2		Brake rod	
26	20 06 368-12		1		1		1	1		1	1	1	1	1		Bromsstång	
27	15 13 070-01		2		2		2	2		2	2	2	2	2		Brake rod	
28	15 10 783-01				2		2	2		2	2	2				Bromsstång	
	15 10 784-01		2													Brake rod	
	15 10 838-01												2	2		Bromsstång	
29	20 06 472-14		4		4		4	4		4	4	4	4	4		Brake rod	
31	28 16 231-01		4		4		4	4		4	4	4	4	4		Skruv M8x105	
32	15 10 665-01				1		1	1		1	1	1				Screw	
33	15 10 702-01				1		1	1		1	1	1				Bricka	
34	15 10 559-01				1		1	1		1	1	1				Washer	
35	20 06 476-14				2		2	2		2	2	2				Motorfästplåt höger	
																Engine clamp plate	

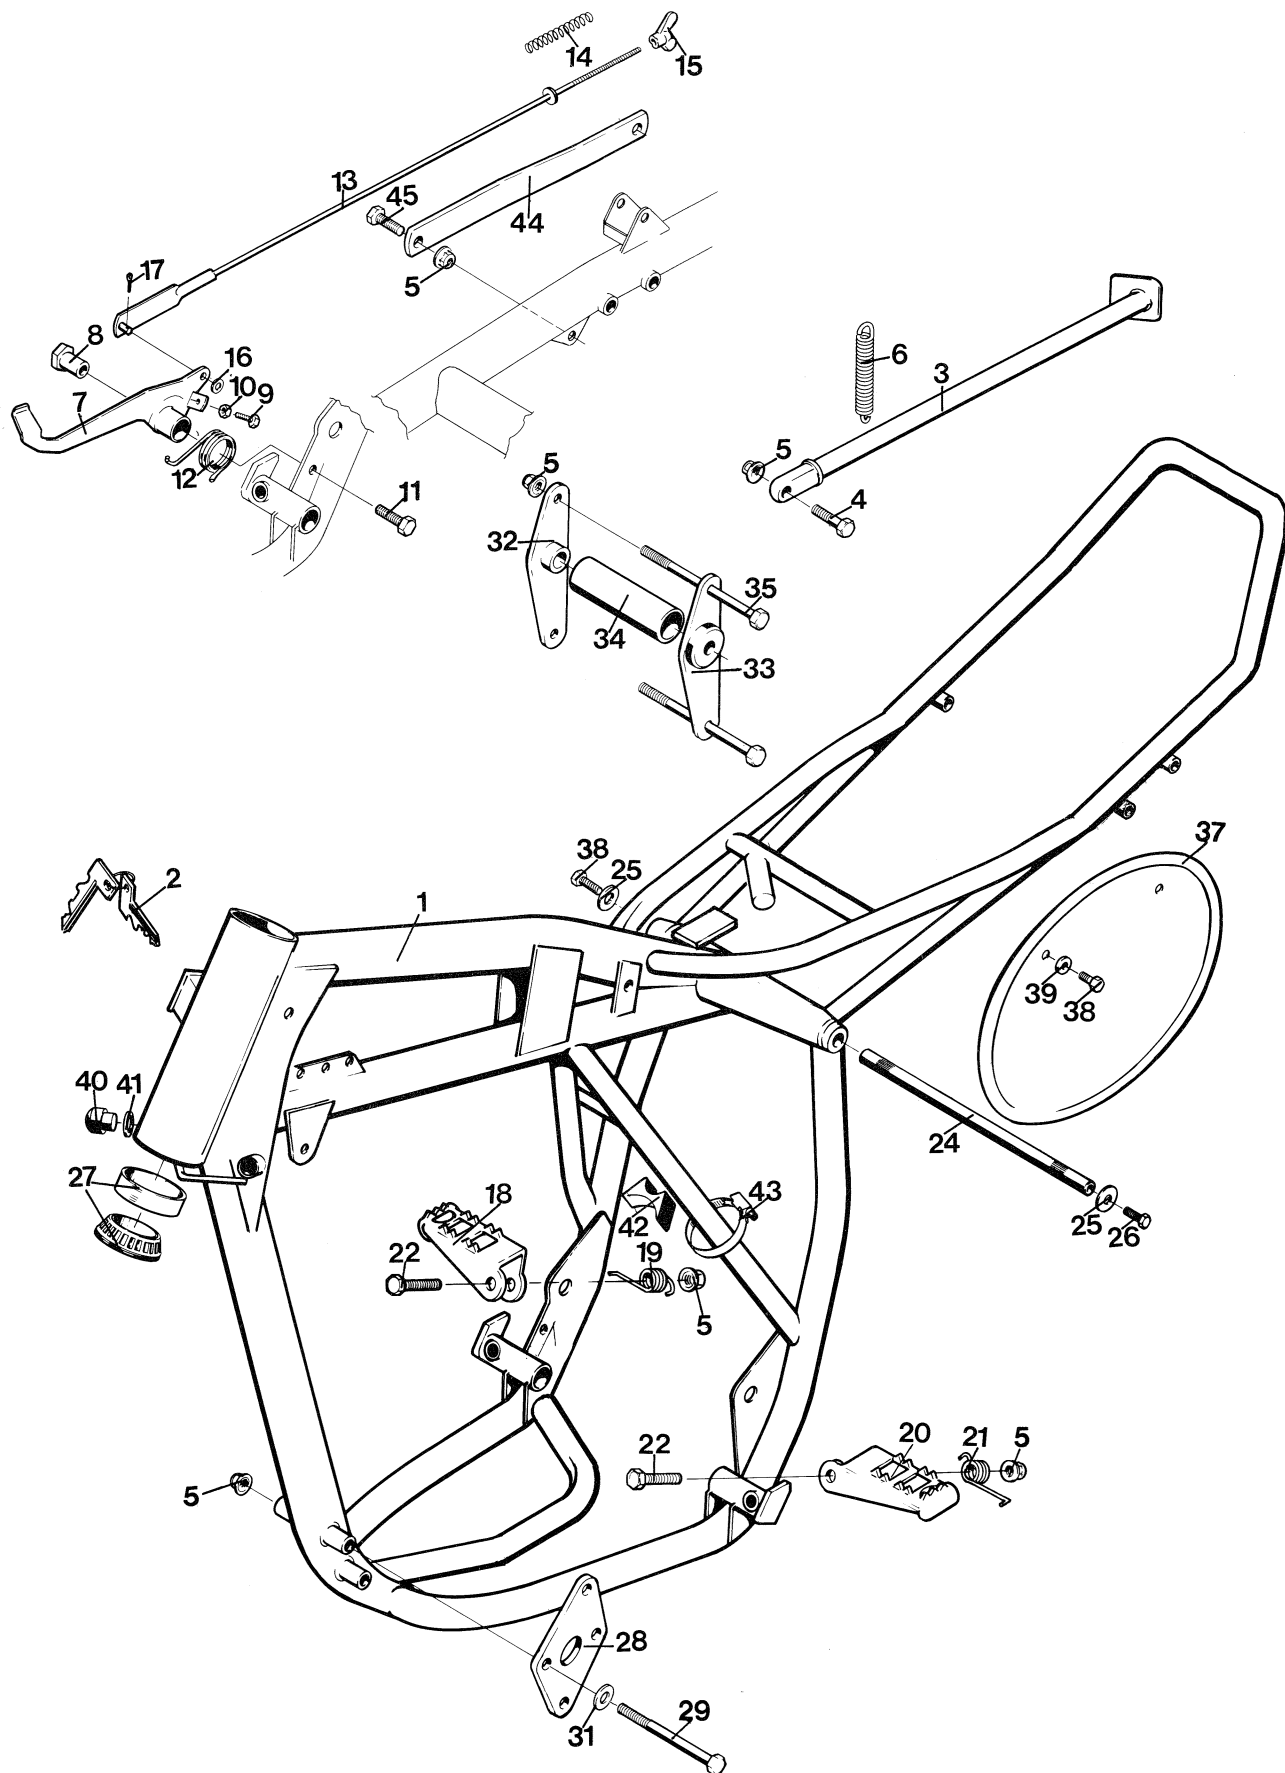


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
37	15 19 479-01		2		2		2	2		2	2	2	2	2		Nummerskylt, vit Number plate white	
38	20 06 364-12		3		3		3	3		3	3	3	3	3		Skruv M6x10 Screw	
39	28 16 211-01		4		4		4	4		4	4	4	4	4		Bricka 6,4x14 Washer	
40	15 10 555-01		2		2		2	2		2	2	2	2	2		Buffert Buffer	
41	28 01 634-11		2		2		2	2		2	2	2	2	2		Bricka Washer	
42	15 19 473-01		2		2		2	2		2	2	2	2	2		Reservoargummi Reservoir rubber	
43	16 13 538-01		4		4		4	4		4	4	4	4	4		Klamma Clamp	
44	15 16 794-01		1		1		1	1		1	1	1	1	1		Bromsstag Brake link	
45	20 06 493-12		1		1		1	1		1	1	1	1	1		Skruv M10x25 Screw	
46	25 80 171-01		1		1		1	1		1	1	1	1	1		Låsmutter M10 Nut	
47	15 10 785-01				1		1	1		1	1	1				Fästplåt Clamp plate	
48	20 06 378-12				2		2	2		2	2	2				Skruv M6x40 Screw	
49	25 82 116-14				2		2	2		2	2	2				Låsmutter M6 Nut	



Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	15 12 350-01	1		1		1		1	1			1				Framgaffel, kpl. Front fork compl.	
	15 12 350-03		1		1		1			1	1		1	1		Framgaffel, kpl. Front fork compl.	
2	15 12 342-01	2		2		2		2	2			2				Gaffelben, kpl. Fork leg compl.	
	15 12 342-03		2		2		2			2	2		2	2		Gaffelben, kpl. Fork leg compl.	
3	15 12 354-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Gaffelben, nedre Fork leg lower	
4	15 12 343-01	2		2		2		2	2			2				Dämpspindel, kpl. (300) Damping spindle compl.	
	15 12 343-03		2		2		2			2	2		2	2		Dämpspindel, kpl. (240) Damping spindle compl.	
5	15 12 258-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Bricka Washer	
6	15 12 042-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Tätning Seal	
7	15 12 165-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Tätning Seal	
8	15 12 353-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Gummiskrapare Stripper	
9	15 12 336-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Gaffelben, övre Fork leg upper	
10	15 12 339-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Bottenventil Bottom valve	
11	28 22 030-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Spårring Circlip	
12	15 12 161-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Bricka, undre Washer lower	
13	15 12 160-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Bricka, övre Washer upper	
14	20 06 457-12	2	2	2	2	2	2	2	2	2	2	2	2	2		Skruv, M8x35 Screw	
15	15 12 337-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Fjäder, kort. Spring short	
16	15 12 307-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Fjäder, lång Spring long	
17	15 12 338-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Toppskruv Top screw	
18	29 70 165-03	2	2	2	2	2	2	2	2	2	2	2	2	2		O-ring O-ring	
19	15 12 346-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Propp kpl. Plug compl.	
20	15 12 340-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Propp Plug	
21	15 12 347-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Ventil kpl. Valve compl.	
22	29 95 288-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Bricka 8,1 x 12,5 Washer	
23	29 70 385-03	2	2	2	2	2	2	2	2	2	2	2	2	2		O-ring O-ring	
24	15 12 348-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Ventilskydd Valve cover	
25	20 62 362-11	2	2	2	2	2	2	2	2	2	2	2	2	2		Skruv M6x8 Screw	
26	16 10 823-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Packning Gasket	
27	20 24 372-12	4	4	4	4	4	4	4	4	4	4	4	4	4		Skruv M6x25 Screw	
28	15 12 322-02	1	1	1	1	1	1	1	1	1	1	1	1	1		Gaffelkrona kpl. Fork crown compl.	
29	15 12 325-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Bricka Washer	
30	28 20 025-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Spårring Circlip	
31	20 24 460-12	4	4	4	4	4	4	4	4	4	4	4	4	4		Skruv M8x45 Screw	
32	25 80 153-01	6	6	6	6	6	6	6	6	6	6	6	6	6		Låsmutter M8 Nut	
33	20 24 457-12	2	2	2	2	2	2	2	2	2	2	2	2	2		Skruv M8x35 Screw	
34	15 12 328-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Distansring Distance ring	
35	15 12 327-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Mutter Nut	
36	15 12 326-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Gaffelkrona, övre Fork crown upper	

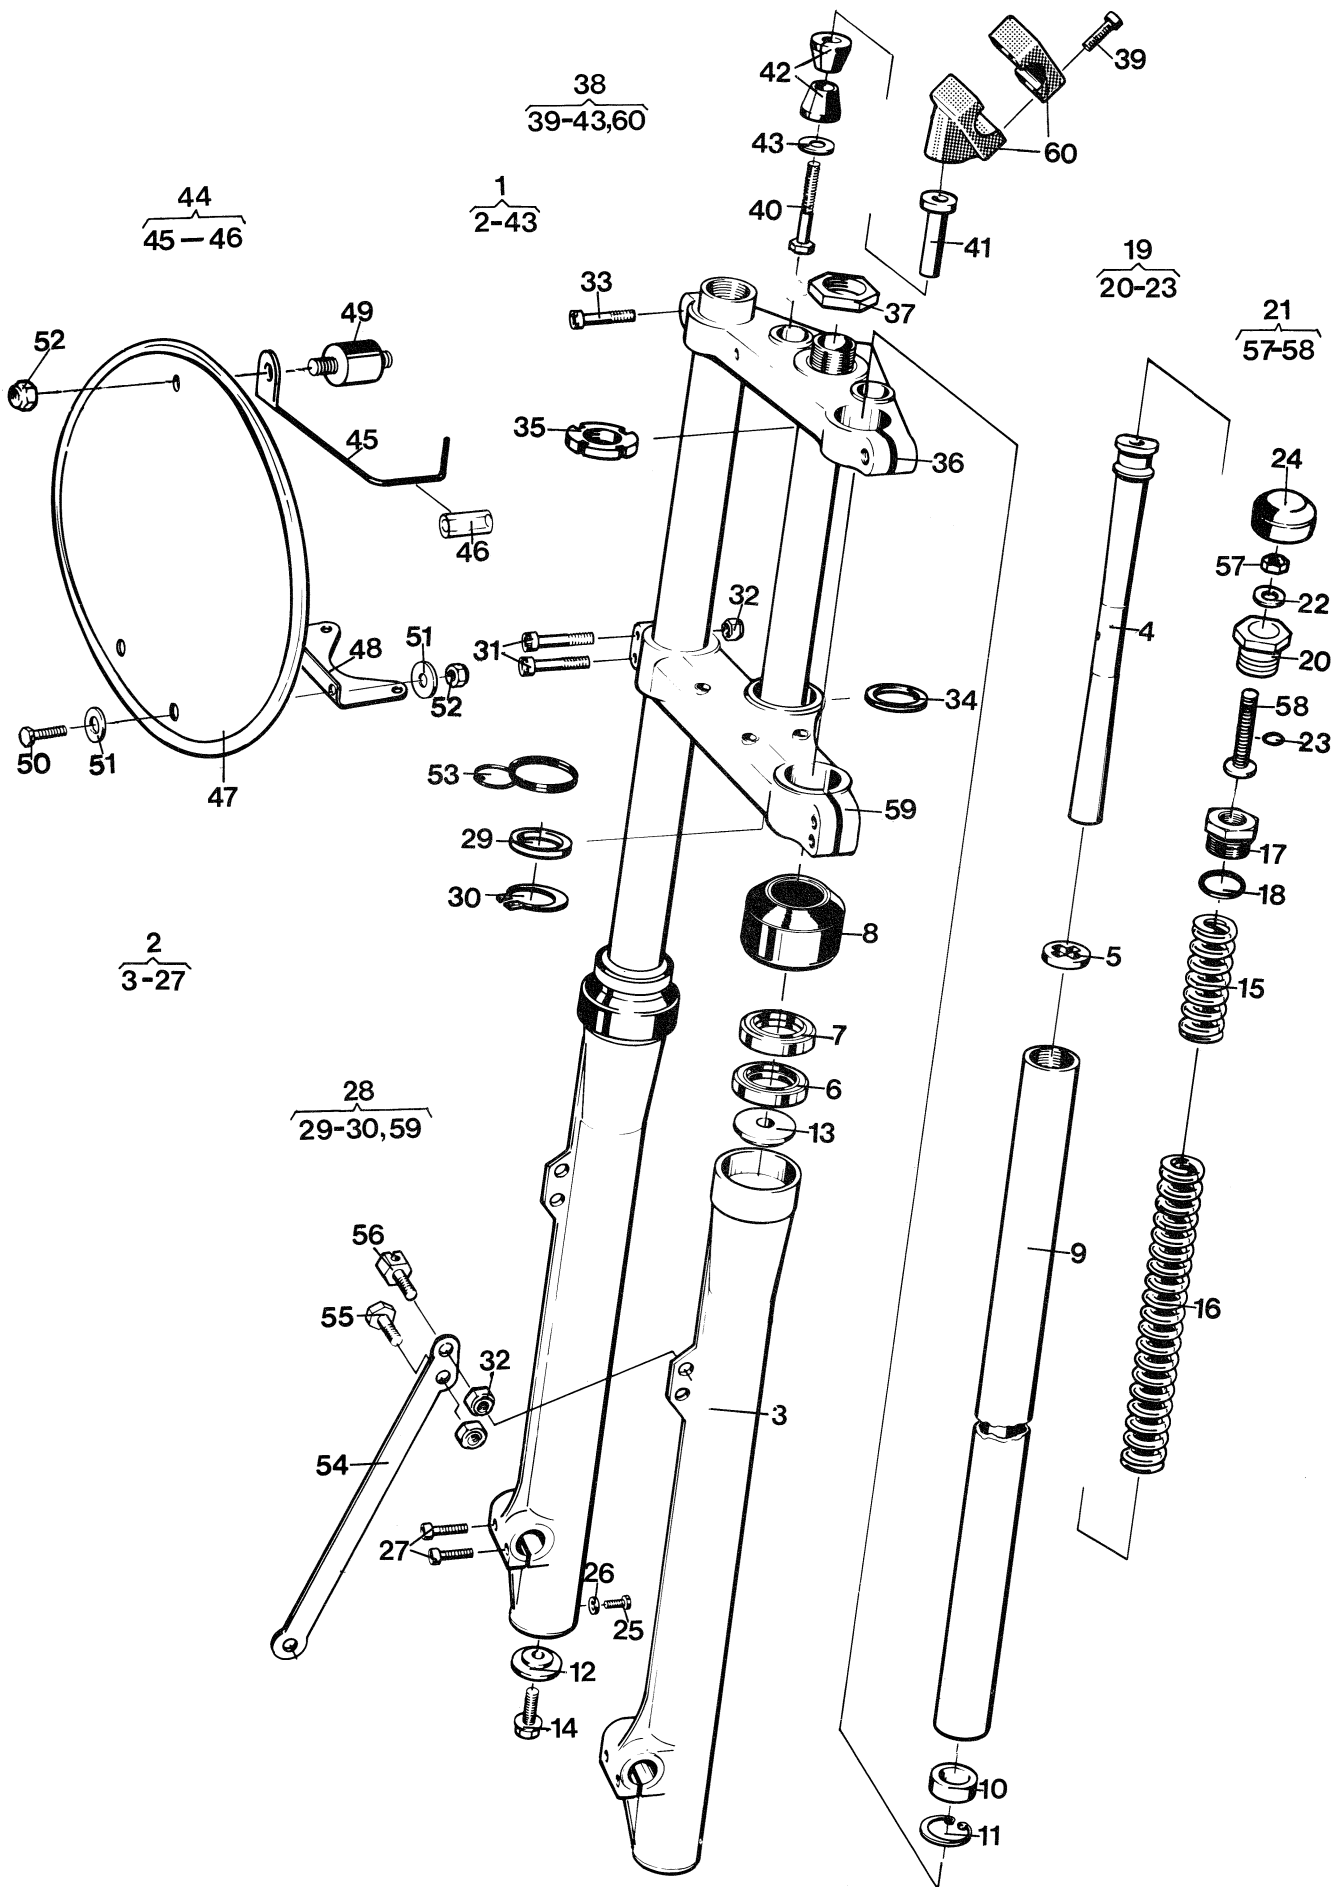


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
37	15 12 329-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Slutmutter Nut	
38	15 12 317-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Styrhållare, kpl. Handlebar ret compl.	
39	20 24 374-12	8	8	8	8	8	8	8	8	8	8	8	8	8		Skruv M6x30 Screw	
40	20 06 503-14	2	2	2	2	2	2	2	2	2	2	2	2	2		Skruv M10x60 Screw	
41	15 12 352-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Distans Distance	
42	15 12 351-01	4	4	4	4	4	4	4	4	4	4	4	4	4		Dämpbussning Rubber element	
43	15 12 341-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Bricka 10x26 Washer	
44	15 19 439-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Wirestyrare, kpl. Wire guide compl.	
45	25 29 440-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Wirestyrare, kpl. Wire guide	
47	15 19 461-01								1							Nummerskylt, gul Number plate yellow	
	15 19 479-01	1						1				1				Nummerskylt, vit Number plate white	
	15 19 458-01			1		1										Nummerskylt, grön Number plate green	
48	15 19 491-01	1		1		1		1	1			1				Nummerplåtsfäste Attachment	
49	15 17 090-01	1		1		1		1	1			1				Vibrationselement Vibration damper	
50	20 06 368-12	2		2		2		2	2			2				Skruv M6 x 16 Screw	
51	28 16 211-01	4		4		4		4	4			4				Bricka 6,4 x 14 Washer	
52	25 80 142-01	3		3		3		3	3			3				Låsmutter M6 Nut	
53	15 19 360-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Wire-guide Wire guide	
54	15 16 227-01		1		1		1	1		1	1	1		1		Bromsstag Brake link	
	15 16 744-01	1		1		1			1				1			Bromsstag Brake link	
55	20 06 451-12	1	1	1	1	1	1	1	1	1	1	1	1	1		Skruv M8x20 Screw	
56	15 12 315-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Wirefäste Wire attachment	
Tillbehör/Accessories																	
4	15 12 343-02															Dämpspindel kpl. 270 Damping spindle compl.	

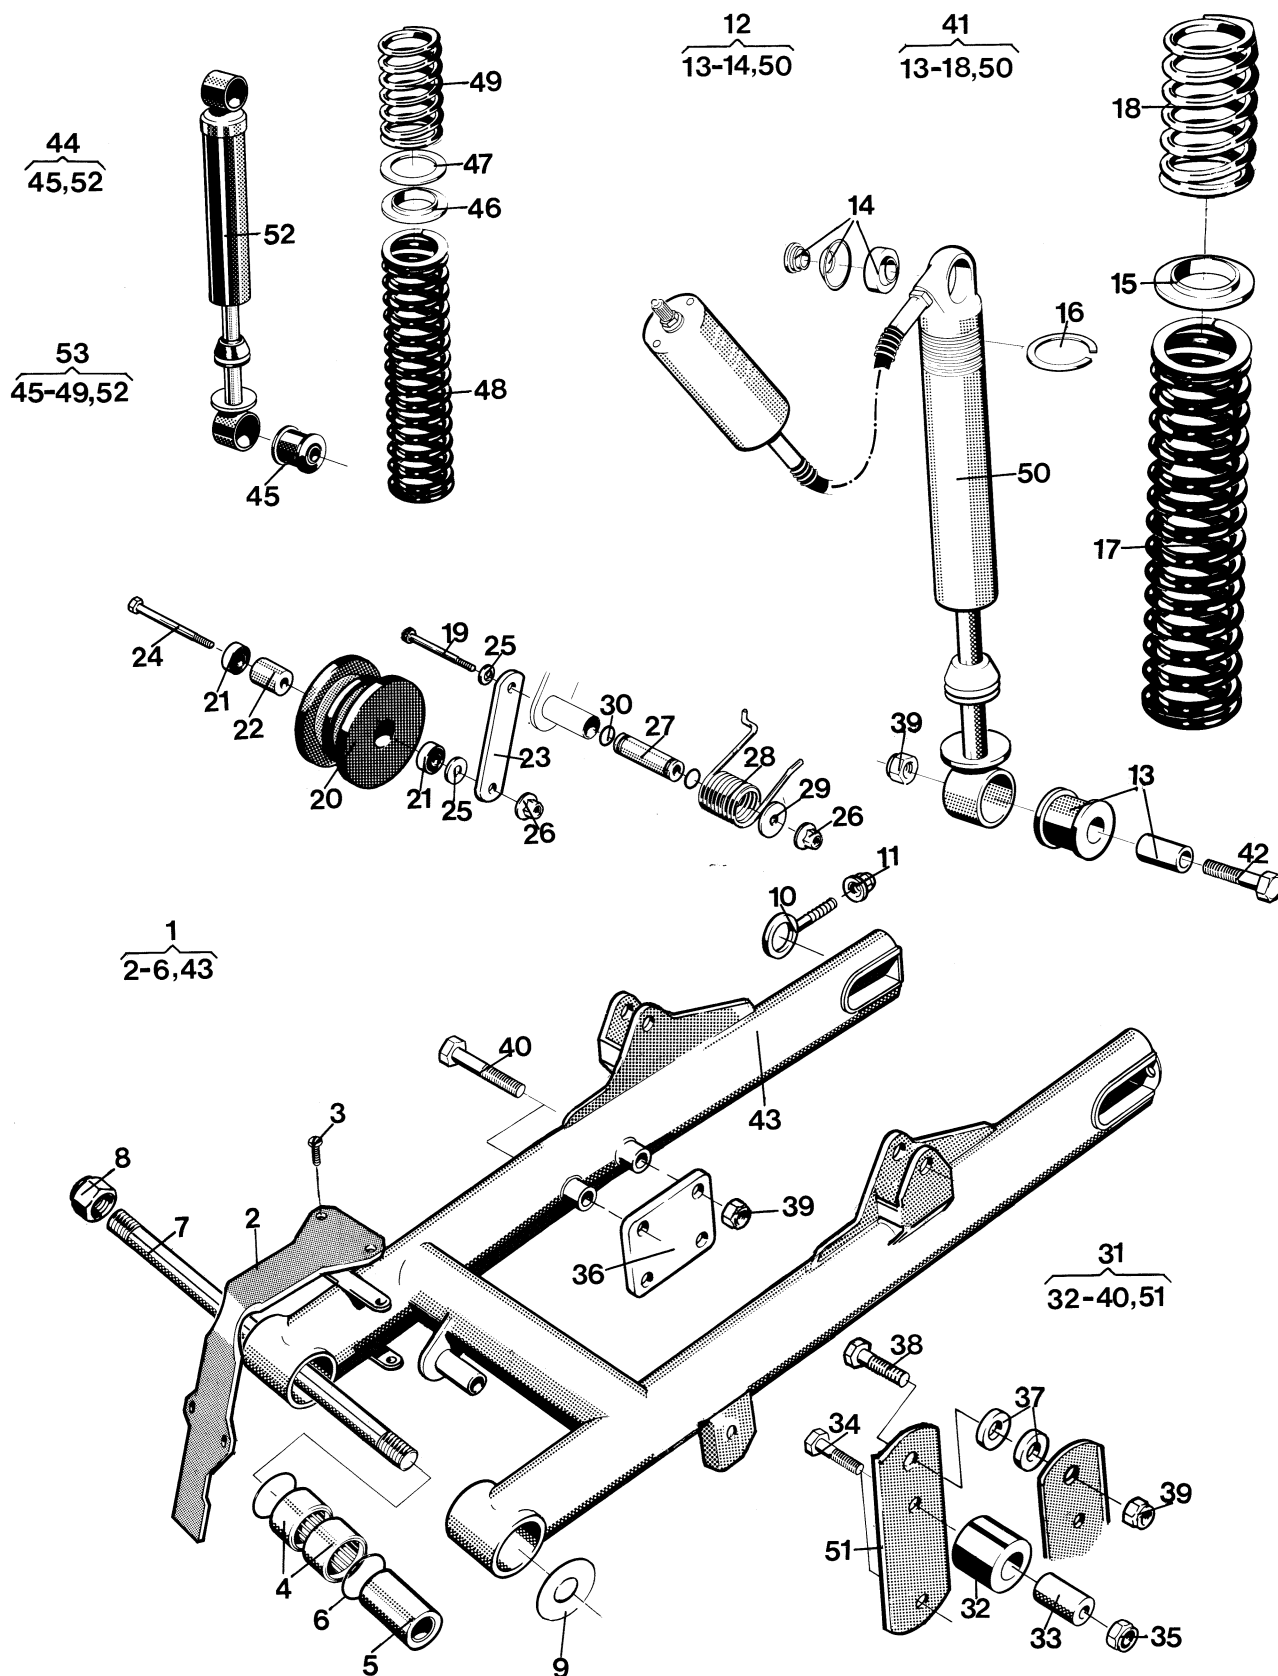


Fig.	Part Number Detaljnummer	Quantity/Antal															Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
1	15 10 801-01		1		1		1						1	1		Bakgaffel, kpl. Rear fork compl.		
	15 10 788-01	1														Bakgaffel, kpl. Rear fork compl.		
	15 10 788-03									1	1					Bakgaffel, kpl. Rear fork compl.		
	15 10 901-01			1		1			1							Bakgaffel, kpl. Rear fork compl.		
	15 10 901-02							1				1				Bakgaffel, kpl. Rear fork compl.		
2	15 10 906-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Slitskydd Wear cover		
3	20 62 362-11	4	4	4	4	4	4	4	4	4	4	4	4	4		Skruv M6x8 Screw		
4	15 10 607-01	4	4	4	4	4	4	4	4	4	4	4	4	4		Nållager Needle bearing		
5	15 10 778-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Lagerdistans Distance		
6	29 71 200-03	4	4	4	4	4	4	4	4	4	4	4	4	4		O-ring O-ring		
7	15 10 774-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Fästbult Att. bolt		
8	25 81 170-12	2	2	2	2	2	2	2	2	2	2	2	2	2		Låsmutter M12x1 Nut		
9	15 10 621-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Axialbricka Washer		
10	15 10 730-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Kedjesträckare Chain tensioner		
11	25 82 118-14	2	2	2	2	2	2	2	2	2	2	2	2	2		Mutter M8 Nut		
12	15 10 817-01				2		2			2	2		2	2		Stötdämpare Suspension		
	15 10 805-01	2		2		2		2	2			2				Stötdämpare Suspension		
13	15 10 736-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Gummibussning Rubber bushing		
14	15 10 816-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Kulled kpl. Attachment compl.		
15	15 10 710-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Mellanbricka Washer		
16	15 10 733-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Låsring Circlip		
17	15 10 786-01	2														Fjäder, lång 22,5 N/mm Spring long		
	15 10 786-02			2		2		2	2			2				Fjäder, lång 27,0 N/mm Spring long		
	15 10 688-01				2					2	2					Fjäder, lång 26,0 N/mm Spring long		
	15 10 688-03						2						2	2		Fjäder, lång 22,0 N/mm Spring long		
18	15 10 689-01				2		2			2	2		2	2		Fjäder, kort 24,0 N/mm Spring short		
	15 10 794-01	2		2		2		2	2			2				Fjäder, kort 24,0 N/mm Spring short		
19	20 06 382-12	1		1	1	1	1	1	1	1	1	1	1	1		Skruv M6S 6x60 Screw		
20	15 15 451-01	1		1	1	1	1	1	1	1	1	1	1	1		Spännarrulle Tension wheel		
21	29 31 125-39	2		2	2	2	2	2	2	2	2	2	2	2		Kullager Ball bearing		
22	15 15 455-01	1		1	1	1	1	1	1	1	1	1	1	1		Lagerdistans Distance		
23	15 15 452-01	1		1	1	1	1	1	1	1	1	1	1	1		Länk Link		
24	20 06 380-12	1		1	1	1	1	1	1	1	1	1	1	1		Skruv M6x50 Screw		
25	28 16 201-01	3		3	3	3	3	3	3	3	3	3	3	3		Bricka 6,4 x 12 Washer		
26	25 82 116-14	2		2	2	2	2	2	2	2	2	2	2	2		Mutter M6 Nut		
27	15 15 453-01	1		1	1	1	1	1	1	1	1	1	1	1		Lagringsdistans Distance		
28	15 15 454-01	1		1	1	1	1	1	1	1	1	1	1	1		Fjäder Spring		
29	28 01 416-01	1		1	1	1	1	1	1	1	1	1	1	1		Bricka 6,5x22 Washer		
30	29 70 404-03	2		2	2	2	2	2	2	2	2	2	2	2		O-ring O-ring		
31	15 15 438-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Kedjestyrare kpl. Chain guide compl.		

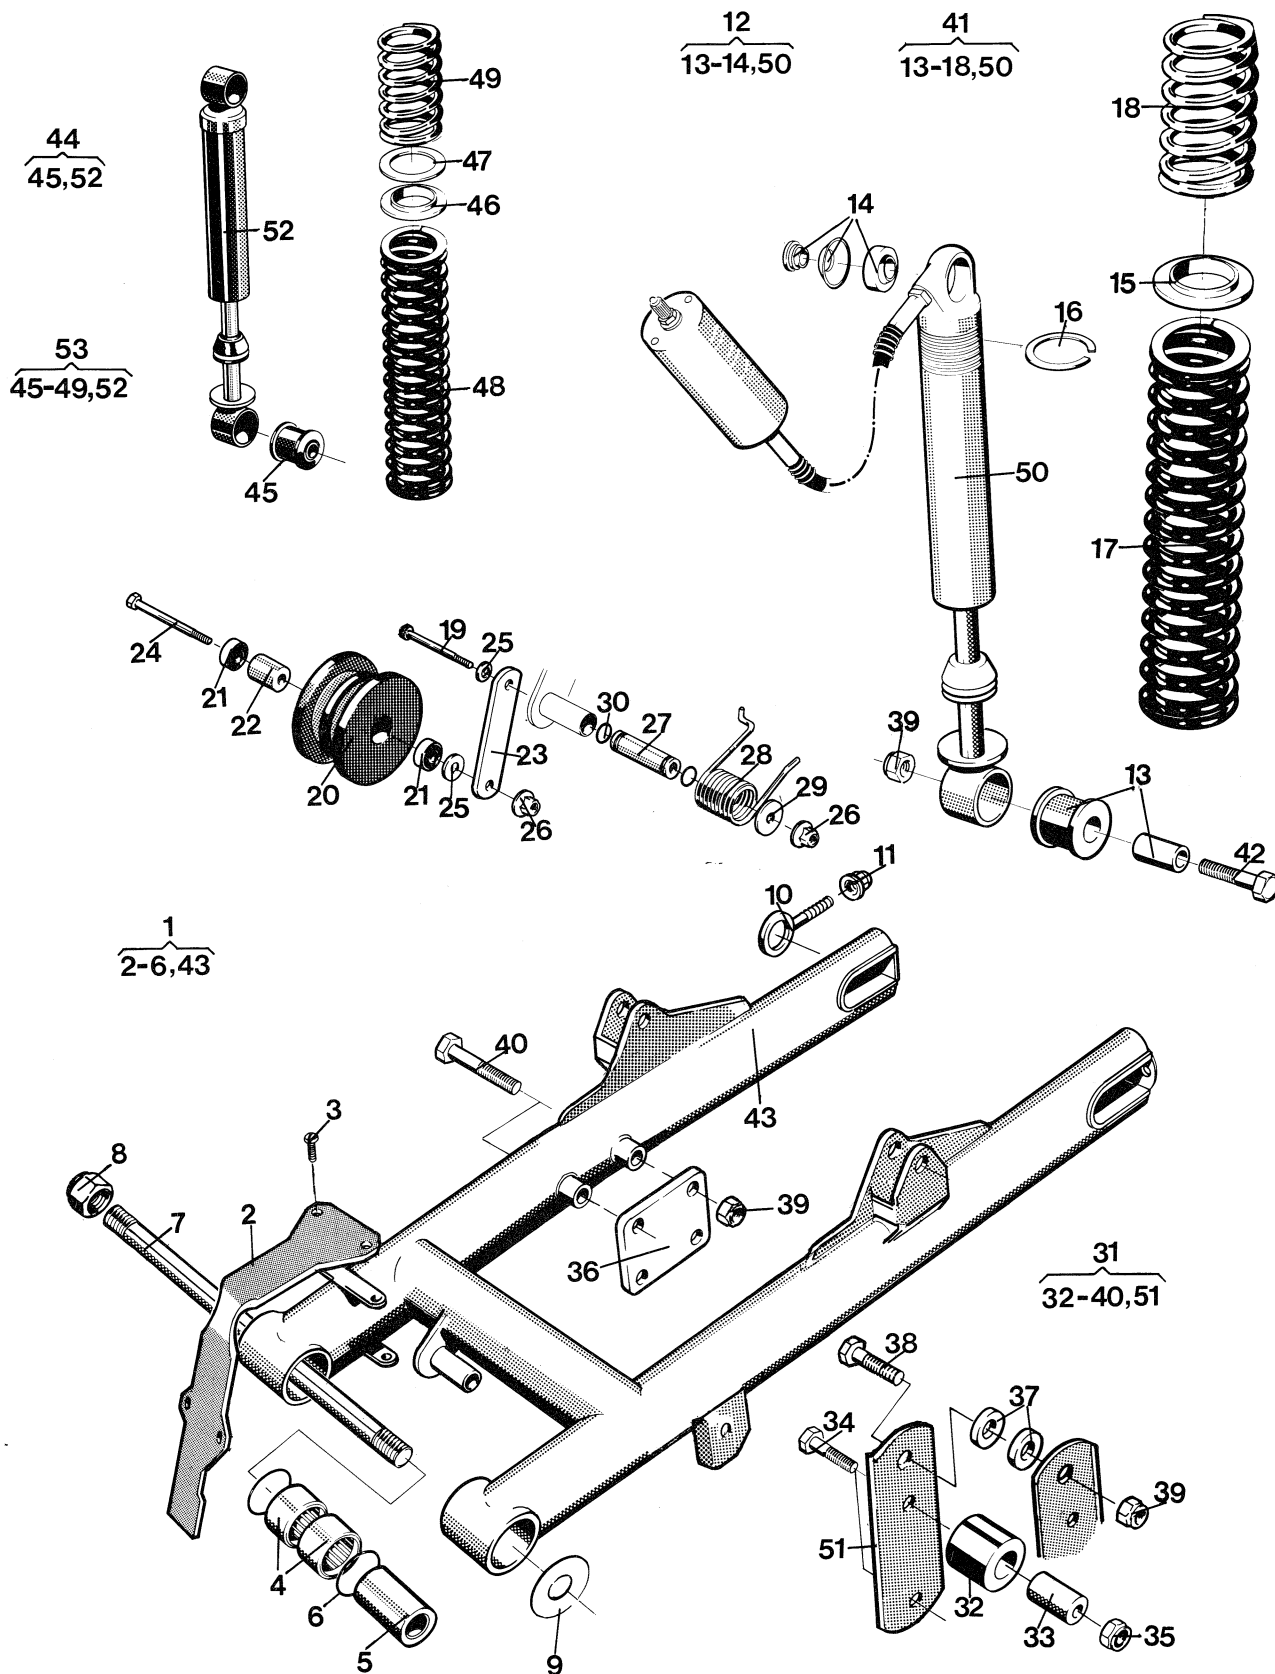


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
32	15 15 412-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Kedjestyrarerulle Roller	
33	15 15 413-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Distanshylsa Distance sleeve	
34	20 06 376-12	2	2	2	2	2	2	2	2	2	2	2	2	2		Skruv M6x35 Screw	
35	25 80 142-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Låsmutter M6 Nut	
36	15 15 441-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Fästplåt Clamp plate	
37	15 15 440-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Distans Distance	
38	20 06 457-12	1	1	1	1	1	1	1	1	1	1	1	1	1		Skruv 8x35 Screw	
39	25 80 153-01	5	5	5	5	5	5	5	5	5	5	5	5	5		Låsmutter M8 Nut	
40	20 06 465-12	2	2	2	2	2	2	2	2	2	2	2	2	2		Skruv M8x70 Screw	
41	15 10 804-01			2		2		2	2			2				Stötdämpare kpl. m. fjädrar Suspension compl. w. springs	
	15 10 804-02	2														Stötdämpare kpl. m. fjädrar Suspension compl. w. springs	
	15 10 807-01						2						2	2		Stötdämpare kpl. m. fjädrar Suspension compl. w. springs	
	15 10 891-01				2					2	2					Stötdämpare kpl. m. fjädrar Suspension compl. w. springs	
42	20 06 459-14	2	2	2	2	2	2	2	2	2	2	2	2	2		Skruv M8x40 Screw	
44	15 10 697-01		2													Stötdämpare Suspension	
45	15 10 639-01		2													Gummibussning, kpl. Rubber bushing compl.	
46	15 10 643-01		2													Plastbricka Plastic washer	
47	15 10 678-01		2													Bricka Washer	
48	15 10 698-01		2													Fjäder, lång Spring long	
49	15 10 646-01		2													Fjäder, kort Spring short	
53	15 10 699-01		2													Stötdämpare kpl. m. fjädrar Suspension compl. w. springs	

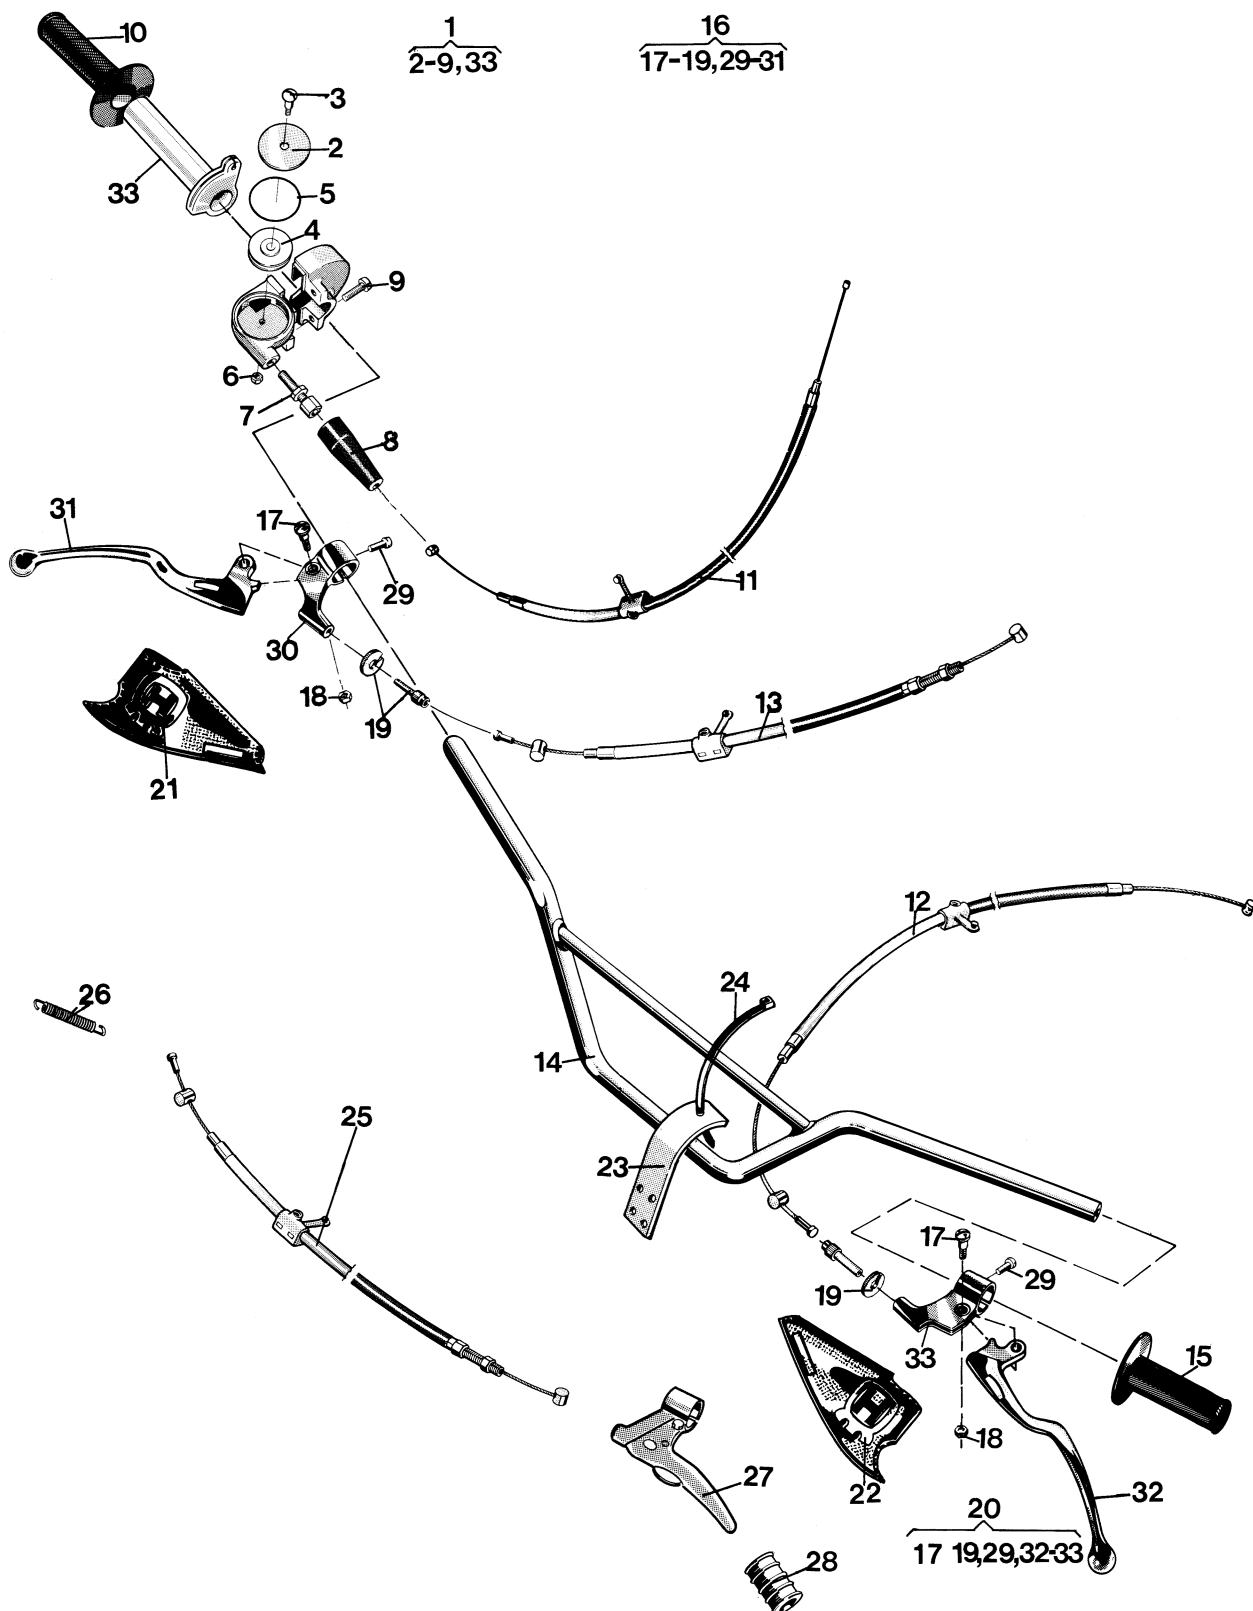


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	15 15 278-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Gashandtag, kpl. Throttle handle compl.	
2	15 15 281-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Skyddslock Protec washer	
3	15 15 282-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Skruv Screw	
4	15 15 283-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Brytrulle Plastic roller	
5	15 15 287-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Packning Gasket	
6	25 80 118-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Låsmutter M4 Nut	
7	15 15 261-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Justernippel Nipple	
8	15 15 262-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Skyddshylsa Protecting sleeve	
9	20 62 329-12	2	2	2	2	2	2	2	2	2	2	2	2	2		Skruv M5x 16 Screw	
10	15 15 266-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Gummihandtag höger Rubber handle right	
11	15 15 277-01			1	1	1	1	1	1	1	1	1	1	1		Gaswire, kpl. Throttle wire	
	15 15 277-02	1	1													Gaswire, kpl. Throttle wire	
12	15 15 308-01	1	1													Frikopplingswire, kpl. Declutching wire	
	15 15 308-02			1	1	1	1	1	1	1	1	1				Frikopplingswire, kpl. Declutching wire	
13	15 15 022-01	1		1		1		1	1			1				Bromswire, kpl. Brake wire	
	15 15 022-03		1		1		1			1	1		1	1		Bromswire, kpl. Brake wire	
14	15 13 083-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Styrstång, kpl. Handle bar	
15	15 15 265-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Gummihandtag, vänster Rubber handle left	
16	15 15 310-01		1		1		1			1	1					Bromshandtag kpl. Brake handle compl.	
	15 13 029-01	1		1		1		1	1			1	1	1		Bromshandtag kpl. Brake handle compl.	
17	12 13 810-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Ansattsskruv Screw	
18	25 09 316-11	2	2	2	2	2	2	2	2	2	2	2	2	2		Mutter Nut	
19	12 13 821-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Kabelspännskruv Cable adjusting screw	
20	15 15 314-01		1		1		1			1	1					Kopplingshandtag kpl. Declutching handle compl.	
	15 13 032-01	1		1		1		1	1							Kopplingshandtag kpl. Declutching handle compl.	
21	15 13 055-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Handtagsskydd, höger Handle protector right	
22	15 13 056-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Handtagsskydd, vänster Handle protector left	
23	15 19 236-01	1		1		1		1	1			1				Wireavbärare Cable deflector	
24	15 19 532-05	3		3		3		3	3			3				Buntband Stripe	
25	15 15 306-02												1	1		Kopplingswire, kpl. Declutching wire	
26	15 15 307-01												1	1		Fjäder Spring	
27	15 15 301-01												1	1		Kopplingshandtag Declutching handle	
28	16 12 813-01												1	1		Gummi Rubber	
29	22 86 595-01	2		2		2		2	2			2	1	1		Skruv Screw	
	20 62 368-11		4		4		4			4	4					Skruv Skruv Screw	

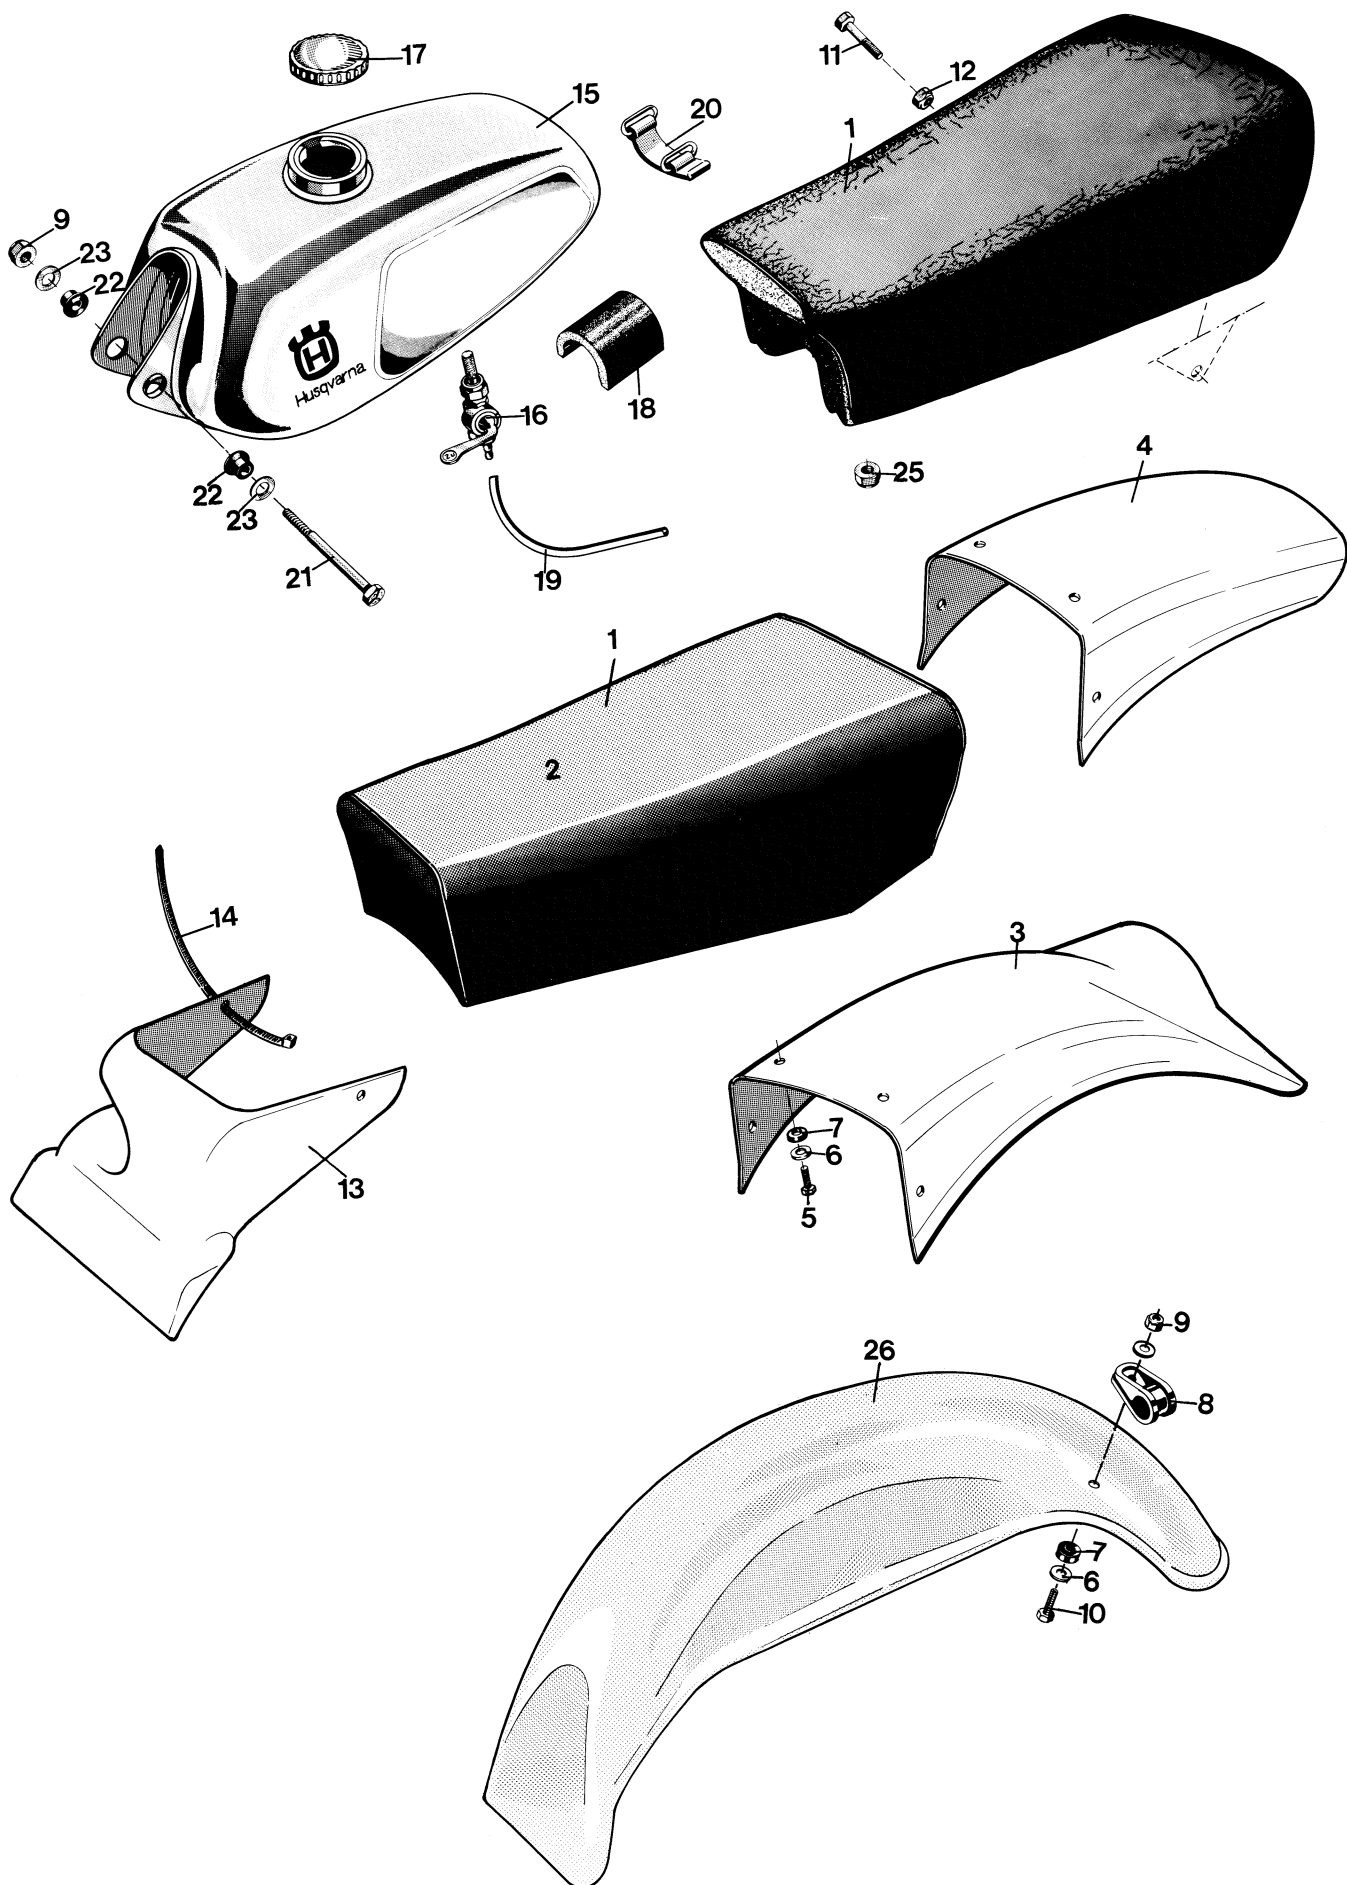


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
	1	15 13 533-01											1	1		Sadel Saddle	
		15 13 546-01	1	1	1	1	1	1	1	1	1	1				Sadel Saddle	
	2	15 13 535-01											1	1		Sadelöverdrag Saddle cover	
		15 13 555-01	1	1	1	1	1	1	1	1	1	1				Sadelöverdrag Saddle cover	
	3	15 18 158-01		1		1		1			1	1				Bakskärm, WR Rear mudguard	
	4	15 18 153-01	1		1			1	1				1			Bakskärm, CR Rear mudguard	
	5	20 06 370-11	4		4			4	4				4			Skruv M6x20 Screw	
	6	28 16 211-01	4	6	4	6	4	6	4	4	6	6	4	8	8	Bricka Washer	
	7	15 18 121-01	4	6	4	6	4	6	4	4	6	6	4	4	4	Gummibricka Rubber washer	
	8	15 18 137-01		2		2		2	2		2		2	4	4	Fäste Attachment	
	9	25 80 142-01	3	5	3	5	3	5	5	3	5	5	5	5	5	Låsmutter Nut	
	10	20 06 372-11		2		2		2	2		2	2	2	4	4	Skruv M6x25 Screw	
	11	20 06 376-12	2	2	2	2	2	2	2	2	2	2	2	1	1	Skruv M6x35 Screw	
	12	25 82 116-14	2	2	2	2	2	2	2	2	2	2	2	1	1	Låsmutter Nut	
	13	15 18 154-01	1	1	1	1	1	1	1	1	1	1	1			Stänkskydd Splash guard	
	14	15 19 532-05	4	4	4	4	4	4	4	4	4	4	4			Buntband Stripe	
	15	15 14 053-01				1		1	1							Bensintank, röd Fuel tank, red	
		15 14 053-06							1							Bensintank, svart Fuel tank, black	
		15 14 055-01			1		1									Bensintank, röd Fuel tank, red	
		15 14 055-03	1	1												Bensintank, blå Fuel tank, blue	
		15 14 055-06									1	1	1	1	1	Bensintank, svart Fuel tank, black	
	16	16 14 056-01	1	1	1	1	1	1	1	1	1	1	1	1	1	Bensinkran Fuel cock	
	17	15 14 008-02	1	1	1	1	1	1	1	1	1	1	1	1	1	Tanklock Tank cap	
	18	15 14 041-01	1	1	1	1	1	1	1	1	1	1	1	1	1	Stöd Support	
	19	15 14 057-10	1	1	1	1	1	1	1	1	1	1	1	1	1	Bensinslang Fuel hose	
	20	15 14 060-01	1	1	1	1	1	1	1	1	1	1	1	1	1	Tankhållare Tankholder	
	21	20 24 388-14	1	1	1	1	1	1	1	1	1	1	1	1	1	Skruv M6x90 Screw	
	22	15 14 032-01	2	2	2	2	2	2	2	2	2	2	2	2	2	Gummibussning Rubber bushing	
	23	28 16 222-01	2	2	2	2	2	2	2	2	2	2	2	2	2	Bricka Washer	
	25	25 82 118-14												1	1	Låsmutter M8 Nut	
	26	15 18 151-01												1	1	Bakskärm Rear mudguard	

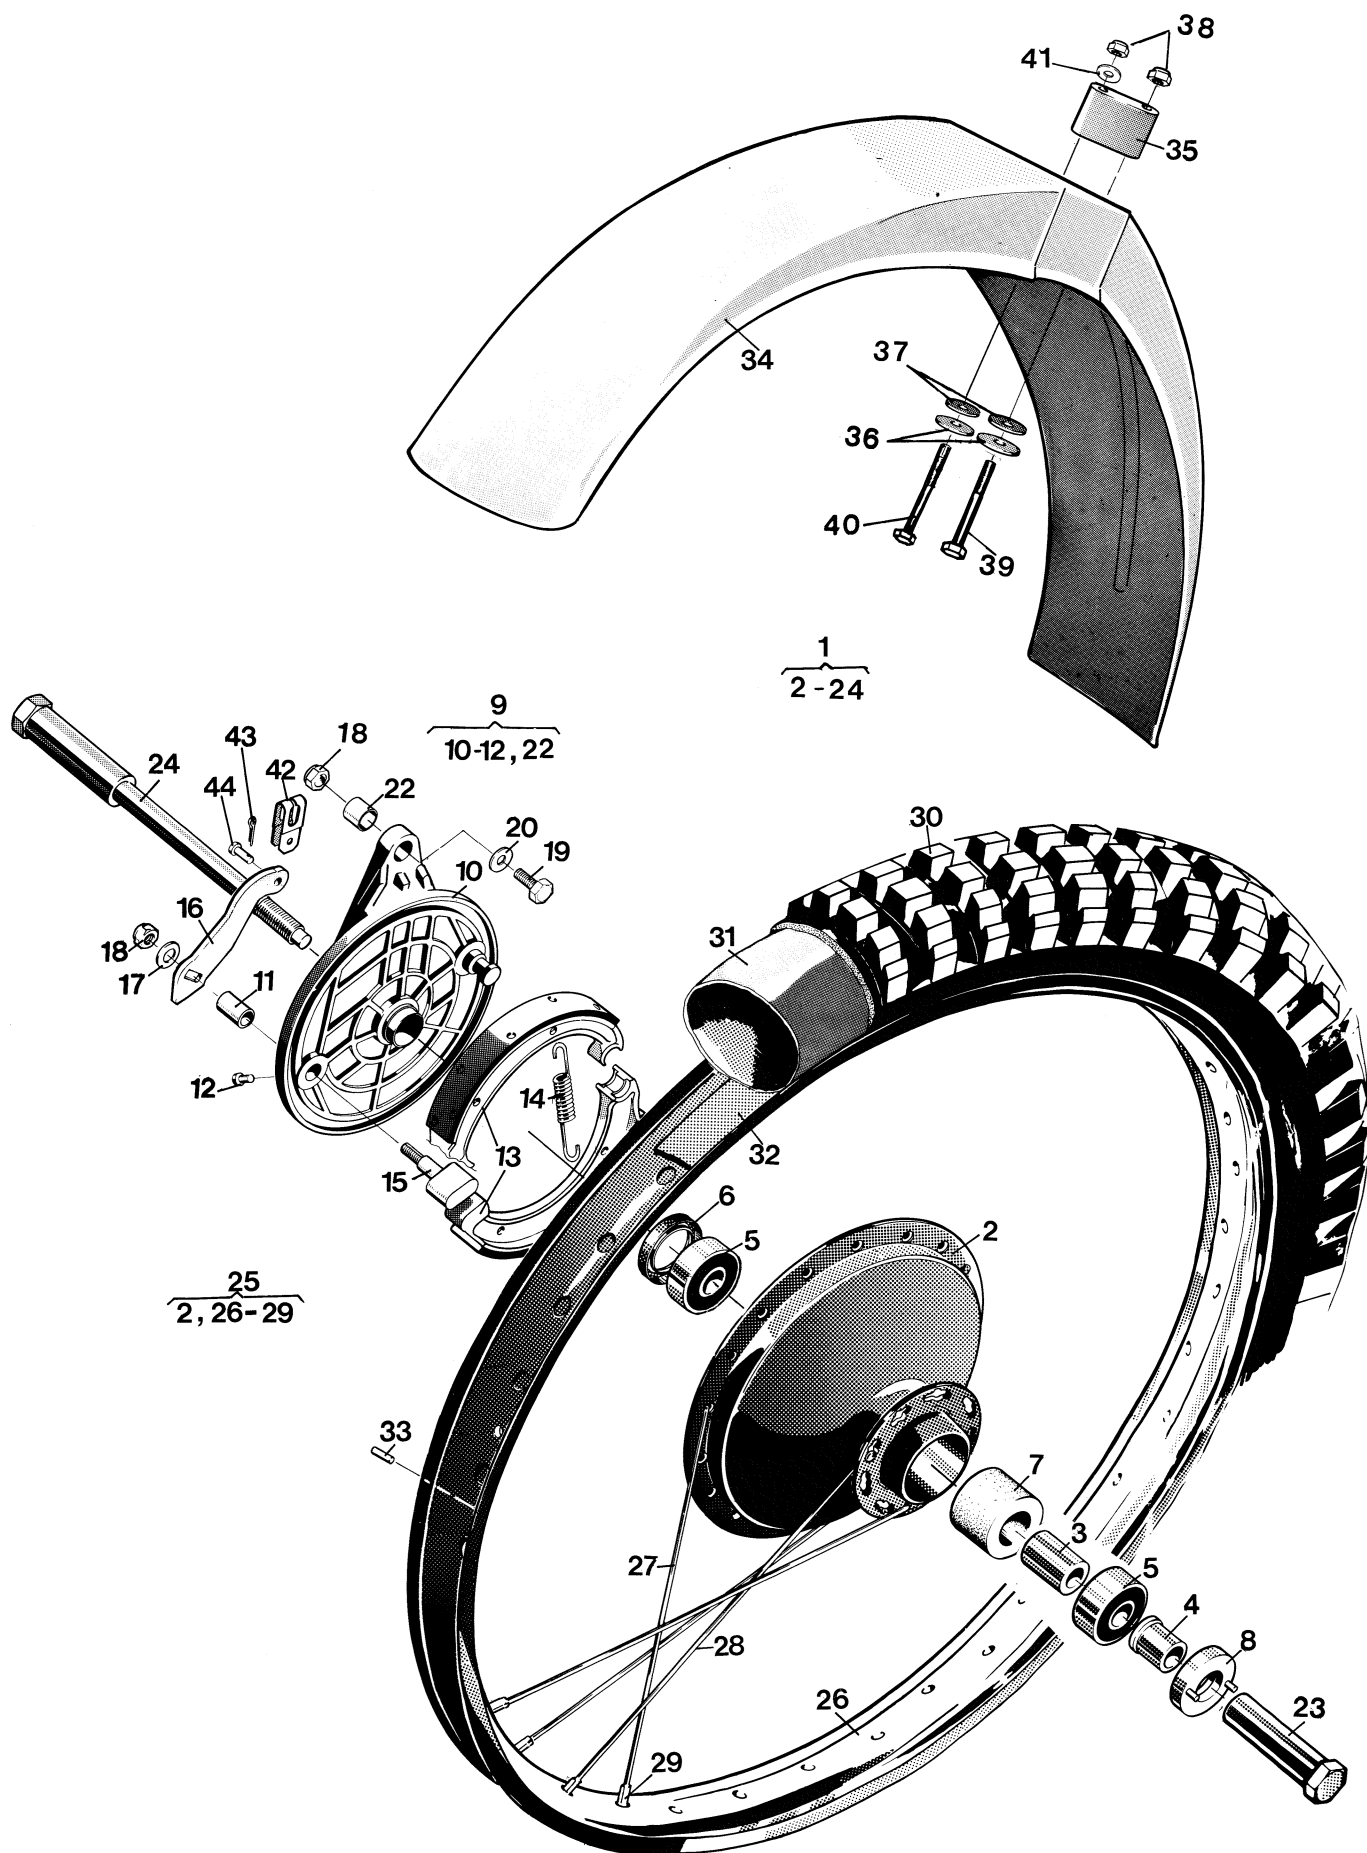


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	15 16 210-01	1		1		1			1				1	1		Framnav, kpl. Front hub compl.	
3	15 16 211-01	1		1		1			1				1	1		Distans Distance	
4	15 16 212-01	1		1		1			1				1	1		Distansring Distance ring	
5	29 31 200-39	2		2		2			2				2	2		Kullager Ball bearing	
6	29 65 448-07	1		1		1			1				1	1		Tätning Seal	
7	15 16 215-01	1		1		1			1				1	1		Distanshållare Distance	
8	15 16 214-01	1		1		1			1				1	1		Medbringare Driving washer	
9	15 16 743-01	1		1		1			1				1	1		Bromssköld, kpl. Brake plate compl.	
11	15 16 667-01	1		1		1			1				1	1		Bussning Bushing	
13	15 16 543-01	2		2		2			2				2	2		Bromsback Brake shoe	
14	15 16 547-01	2		2		2			2				2	2		Fjäder Spring	
15	15 16 548-01	1		1		1			1				1	1		Bromsexcenter Brake cam	
16	15 16 747-01	1		1		1			1				1	1		Hävarm Lever	
17	28 16 241-01	1		1		1			1				1	1		Bricka 8,4 x 18 Washer	
18	25 80 153-01	2		2		2			2				2	2		Låsmutter M8 Nut	
19	20 06 455-12	1		1		1			1				1	1		Skruv M 8 x 30 Screw	
20	28 16 231-01	1		1		1			1				1	1		Bricka 8,4 x 16 Washer	
22	15 16 746-01	1		1		1			1				1	1		Bussning Bushing	
23	15 16 084-01	1		1		1			1				1	1		Axelmutter Nut	
24	15 16 082-01	1		1		1			1				1	1		Axel Shaft	
25	15 16 198-01	1		1		1			1				1	1		Hjul, kpl. exkl. gummi Wheel compl. excl. rubber	
26	15 16 200-01	1		1		1			1				1	1		Fälg WM 1-21'' Rim	
27	15 16 049-05	18		18		18			18				18	18		Eker L=227 Spoke	
28	15 16 049-06	18		18		18			18				18	18		Eker L=244 Spoke	
29	15 16 202-01	36		36		36			36				36	36		Ekernippel Nipple	
30	15 16 141-01	1		1		1							1	1		Däck 3.00x21'', Barum Tyre	
	15 16 217-01								1							Däck 3.50x21'', Trelleborg Tyre	
31	15 16 028-01	1		1		1			1				1	1		Innerslang 3.00x21'' Innertube	
32	15 16 029-01	1		1		1			1				1	1		Fälgband 21'' Rimband	
33	28 24 215-08	18		18		18			18				18	18		Pinne Cyl. pin	
34	15 18 041-02	1		1		1			1				1	1		Framskärm Front mudguard	
35	15 18 028-01	2		2		2			2				2	2		Stöd Support	
36	28 01 416-01	4		4		4			4				4	4		Bricka 6,5x22 Washer	
37	15 18 121-01	4		4		4			4				4	4		Gummibricka Rubber washer	
38	25 80 142-01	4		4		4			4				4	4		Låsmutter M6 Nut	
39	20 06 381-12	2		2		2			2				2	2		Skruv M 6x55 Screw	
40	20 06 382-12	2		2		2			2				2	2		Skruv M 6x60 Screw	
41	28 16 211-01	2		2		2			2				2	2		Bricka 6,4 x 14 Washer	

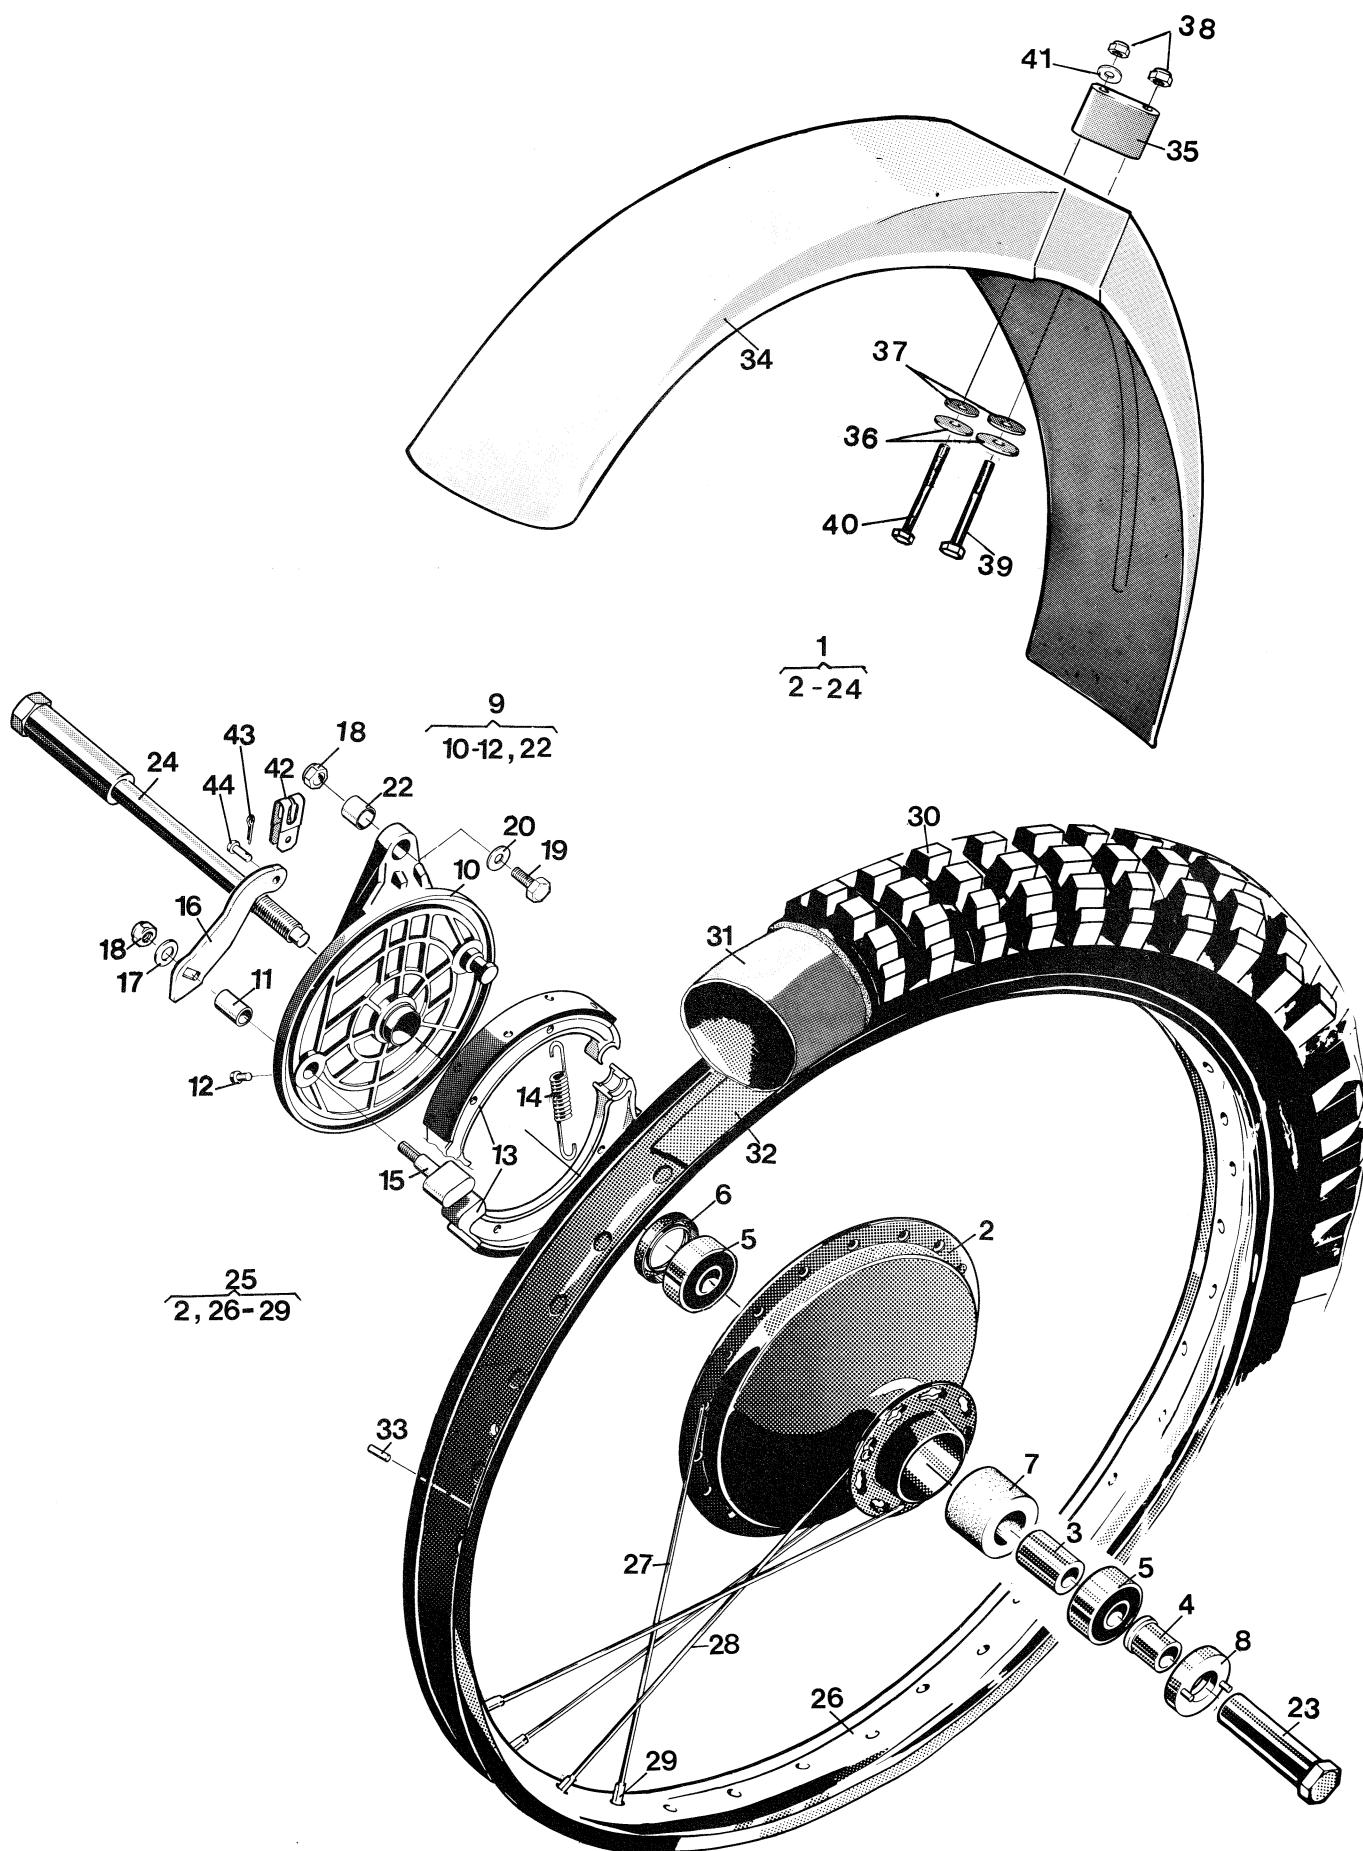


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
42	15 16 194-01	1		1		1			1				1	1		Bygel Strop	
43	28 35 217-01	1		1		1			1				1	1		Saxpinne Split pin	
44	12 25 258-01	1		1		1			1				1	1		Bult Bolt	
Tillbehör/Accessories																	
	15 16 087-01															Ekersats fram Spoke unit front	
	15 19 867-01															Ekernippelsats 36 st Spoke nipple kit 36 pcs	
	15 19 886-01															Däcklåssats Cyl pinne 3x8, 40 st Tyre lock kit Cyl pin 3x8, 40 pcs	

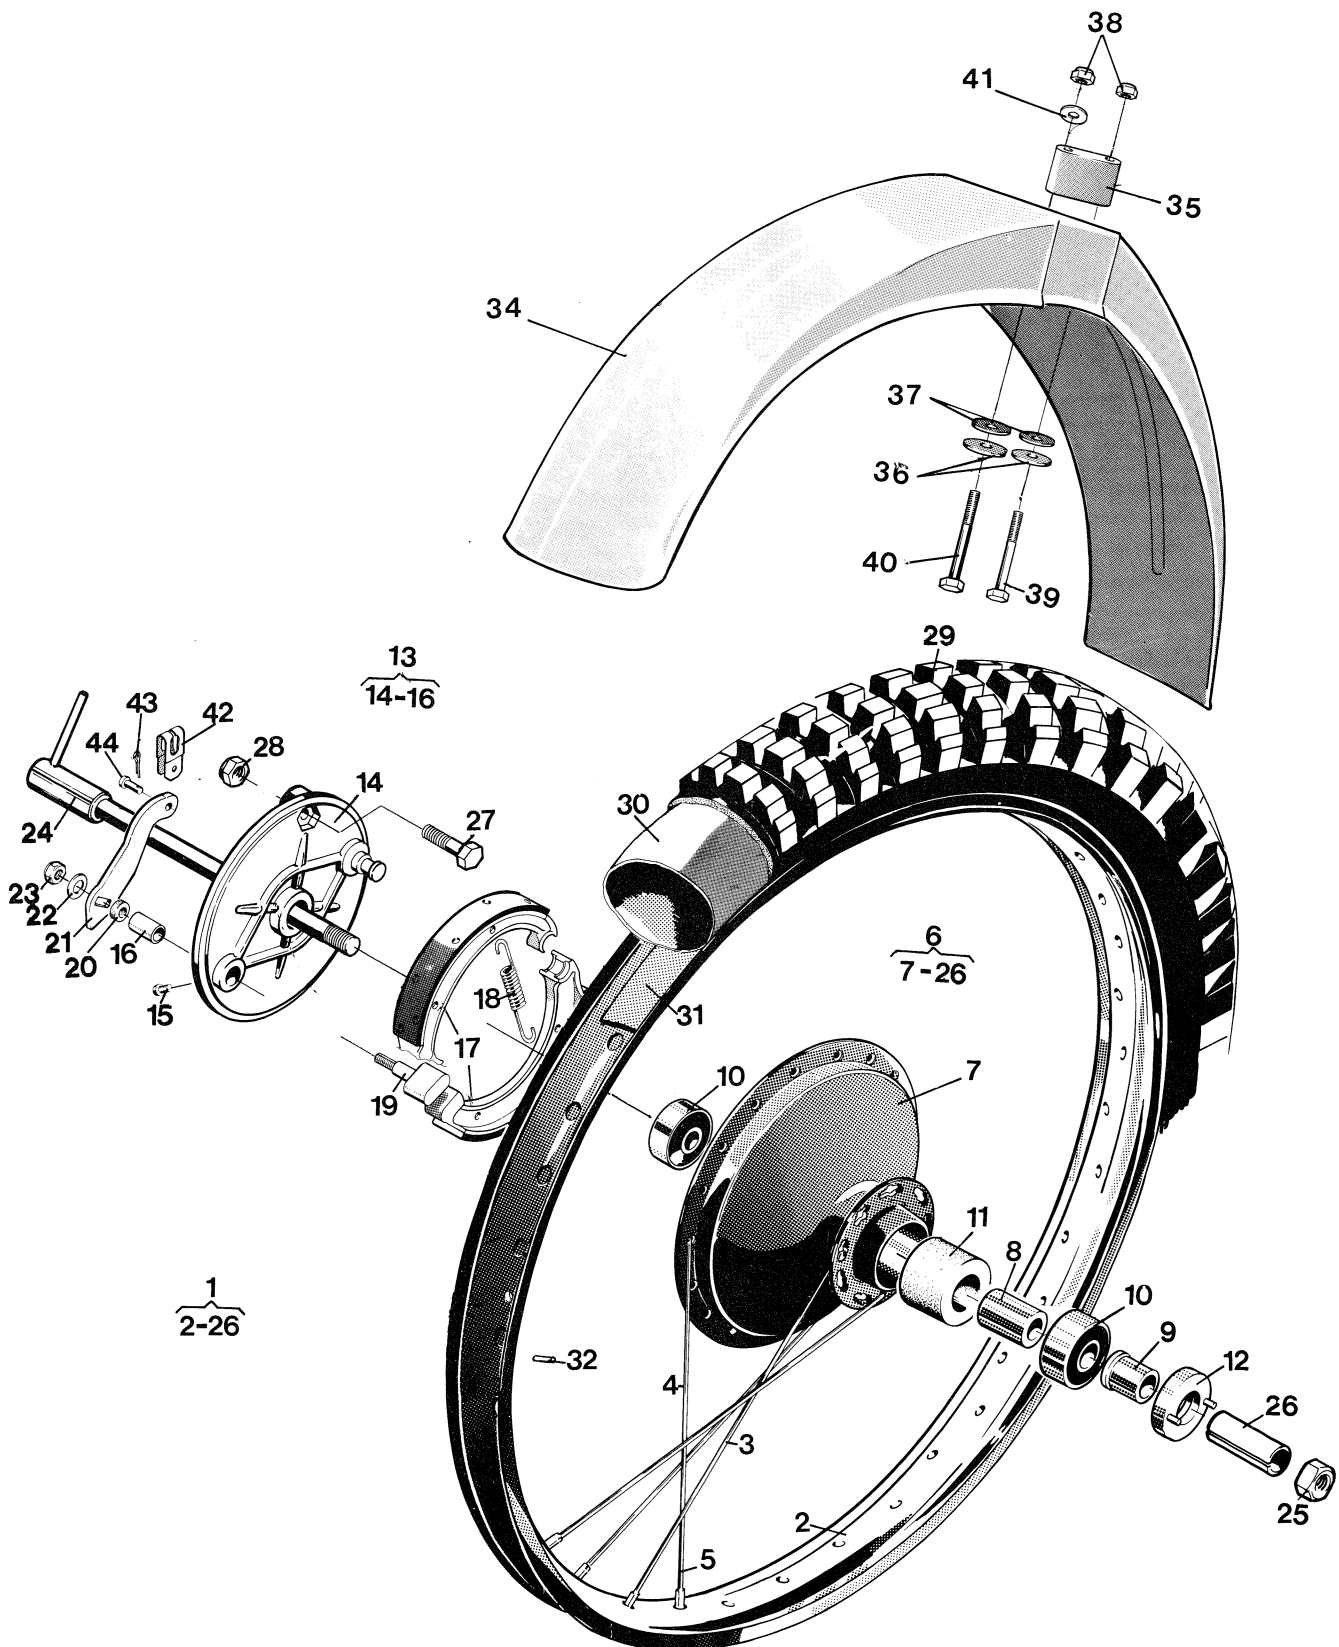


Fig.	Part Number Detaljnummer	Quantity/Antal															Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
N	1	15 16 232-01		1		1		1	1		1	1	1				Hjul, kpl. exkl. gummi Wheel compl. exkl. rubber	
	2	15 16 200-01		1		1		1	1		1	1	1				Fälg 1,60-21'' Rim	
	3	15 16 049-05		18		18		18	18		18	18	18				Eker L = 227 Spoke	
	4	15 16 049-06		18		18		18	18		18	18	18				Eker L = 244 Spoke	
	5	15 16 202-01		36		36		36	36		36	36	36				Ekernippel Nipple	
N	6	15 16 231-01		1		1		1	1		1	1	1				Framnav, kpl. Front hub compl.	
	8	15 16 228-01		1		1		1	1		1	1	1				Distans Distance	
	9	15 16 212-01		1		1		1	1		1	1	1				Distansring Distance ring	
	10	29 31 200-39		2		2		2	2		2	2	2				Kullager Ball bearing	
	11	15 16 215-01		1		1		1	1		1	1	1				Distanshållare Distance	
N	12	15 16 214-01		1		1		1	1		1	1	1				Medbringare Driving washer	
	13	15 16 790-01		1		1		1	1		1	1	1				Bromssköld, kpl. Brake plate	
	15	20 62 360-11		1		1		1	1		1	1	1				Skruv M6x6 Screw	
	16	15 16 667-01		1		1		1	1		1	1	1				Bussning Bushing	
	17	15 16 788-01		2		2		2	2		2	2	2				Bromsback Brake plate	
N	18	15 16 547-01		2		2		2	2		2	2	2				Fjäder Spring	
	19	15 16 782-01		1		1		1	1		1	1	1				Bromsexcenter Brake cam	
	20	15 16 801-01		1		1		1	1		1	1	1				Tätning Seal	
	21	15 16 747-02		1		1		1	1		1	1	1				Hävarm Lever	
	22	28 16 241-01		1		1		1	1		1	1	1				Bricka 8,4x18 Washer	
N	23	25 80 153-01		1		1		1	1		1	1	1				Låsmutter M8 Nut	
	24	15 16 234-01		1		1		1	1		1	1	1				Axel Shaft	
	25	15 16 238-01		1		1		1	1		1	1	1				Mutter Nut	
	26	15 16 239-01		1		1		1	1		1	1	1				Hylsa Sleeve	
	27	20 06 493-12		1		1		1	1		1	1	1				Skruv M10x25 Screw	
N	28	25 80 171-01		1		1		1	1		1	1	1				Låsmutter M10 Nut	
	29	15 16 141-01		1		1		1	1		1	1	1				Däck 3,00-21'', Barum Tyre	
	30	15 16 028-01		1		1		1	1		1	1	1				Innerslang 3,00-21'' Innertube	
	31	15 16 029-01		1		1		1	1		1	1	1				Fälgband 21'' Rim band	
	32	28 24 215-08		18		18		18	18		18	18	18				Pinne Cyl. pin	
N	34	15 18 041-01		1		1		1	1		1	1	1				Framskärm Front mudguard	
	35	15 18 028-01		2		2		2	2		2	2	2				Stöd Support	
	36	28 01 416-01		4		4		4	4		4	4	4				Bricka 6,5x22 Washer	
	37	15 18 121-01		4		4		4	4		4	4	4				Gummibricka Rubber washer	
	38	25 80 142-01		4		4		4	4		4	4	4				Låsmutter M6 Nut	
N	39	20 06 381-12		2		2		2	2		2	2	2				Skruv M6x55 Screw	
	40	20 06 382-12		2		2		2	2		2	2	2				Skruv M6x60 Screw	
	41	28 16 211-01		2		2		2	2		2	2	2				Bricka 6,4x14 Washer	
	42	15 16 194-01		1		1		1	1		1	1	1				Bygel Strop	

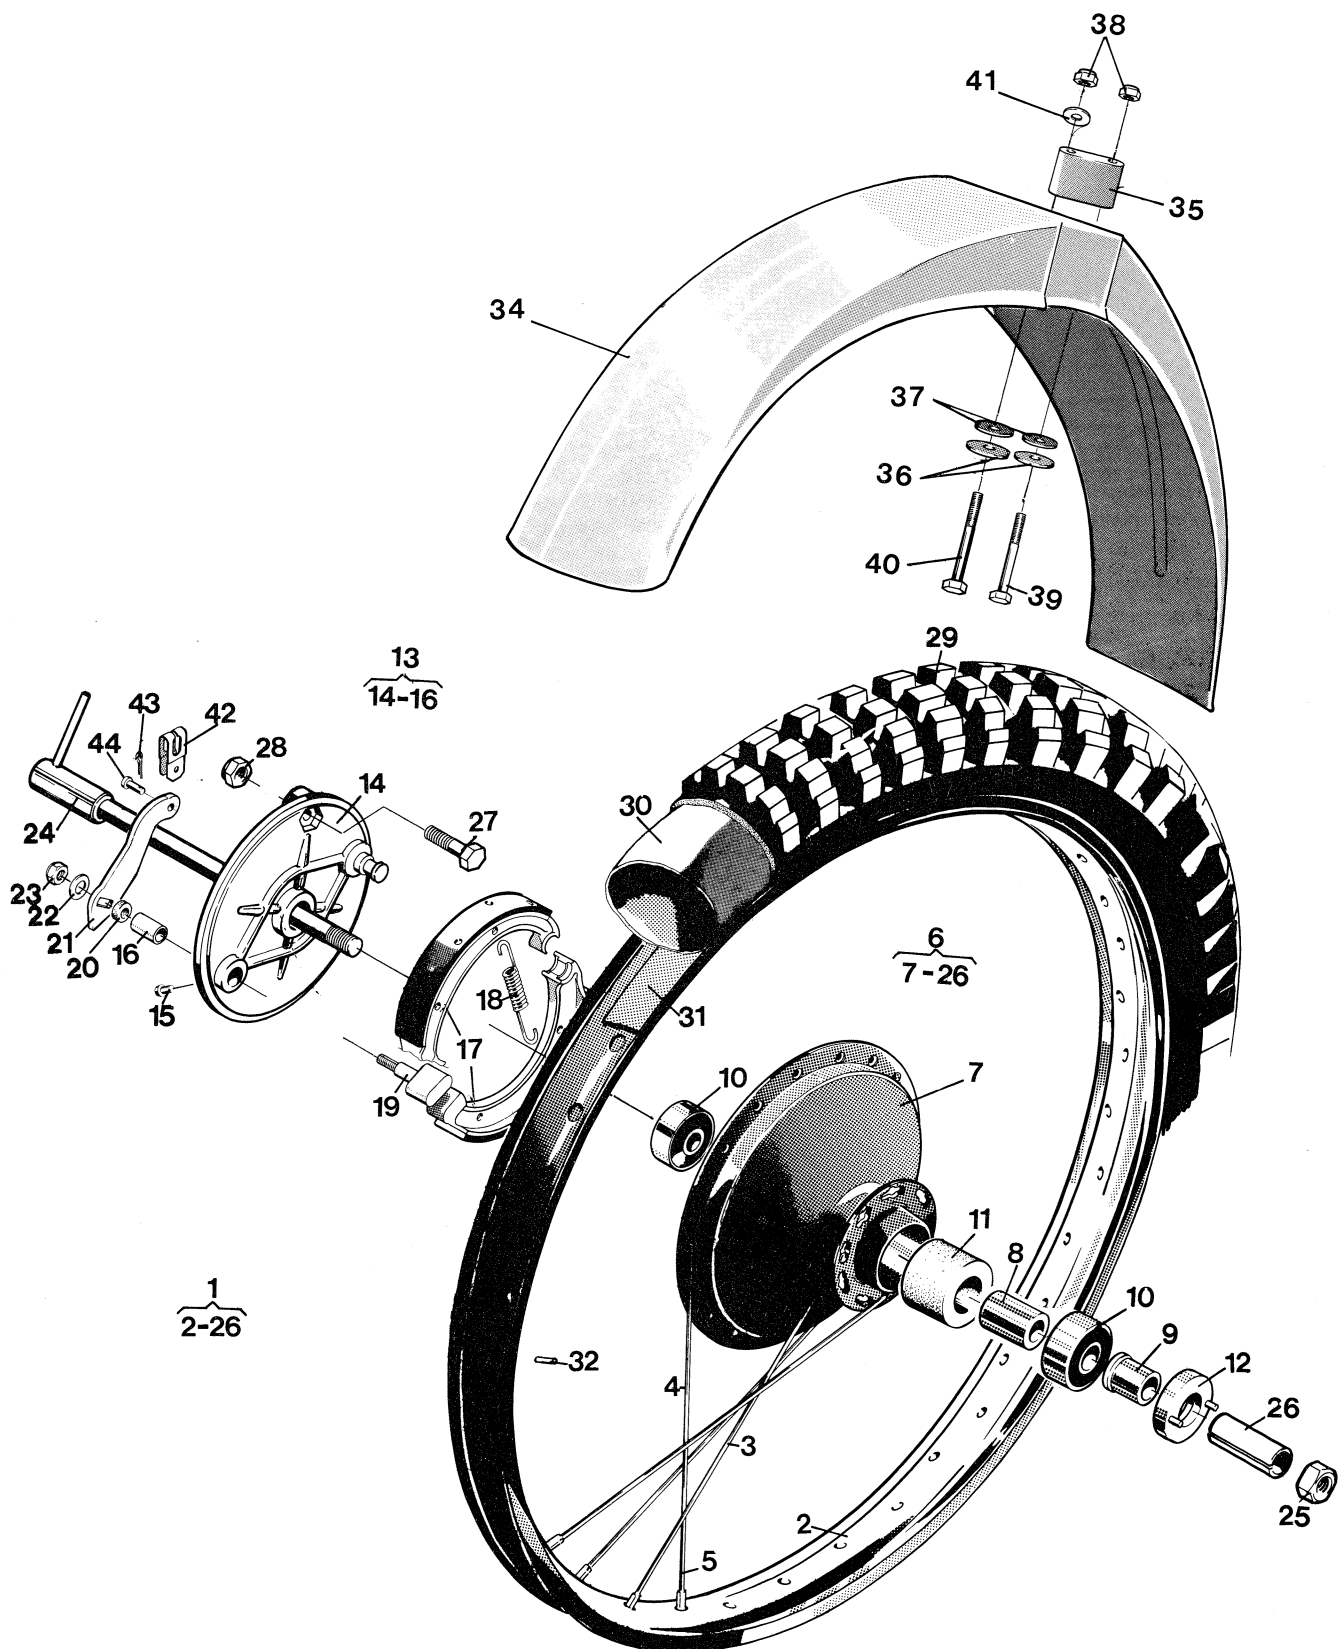


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
43	28 35 217-01		1		1		1	1		1	1	1				Saxpinne 2 x 12 Splitpin	
44	12 25 258-01		1		1		1	1		1	1	1				Bult Bolt	
Tillbehör/Accessories																	
	15 16 087-01															Ekersats fram Spoke unit front	
	15 19 867-01															Ekernippelsats 36 st Spoke nippel kit 36 pcs	
	15 19 886-01															Däcklåsats Cyl pinne 3x8, 40 st Tyre lock kit Cyl pin 3x8, 40 pcs	

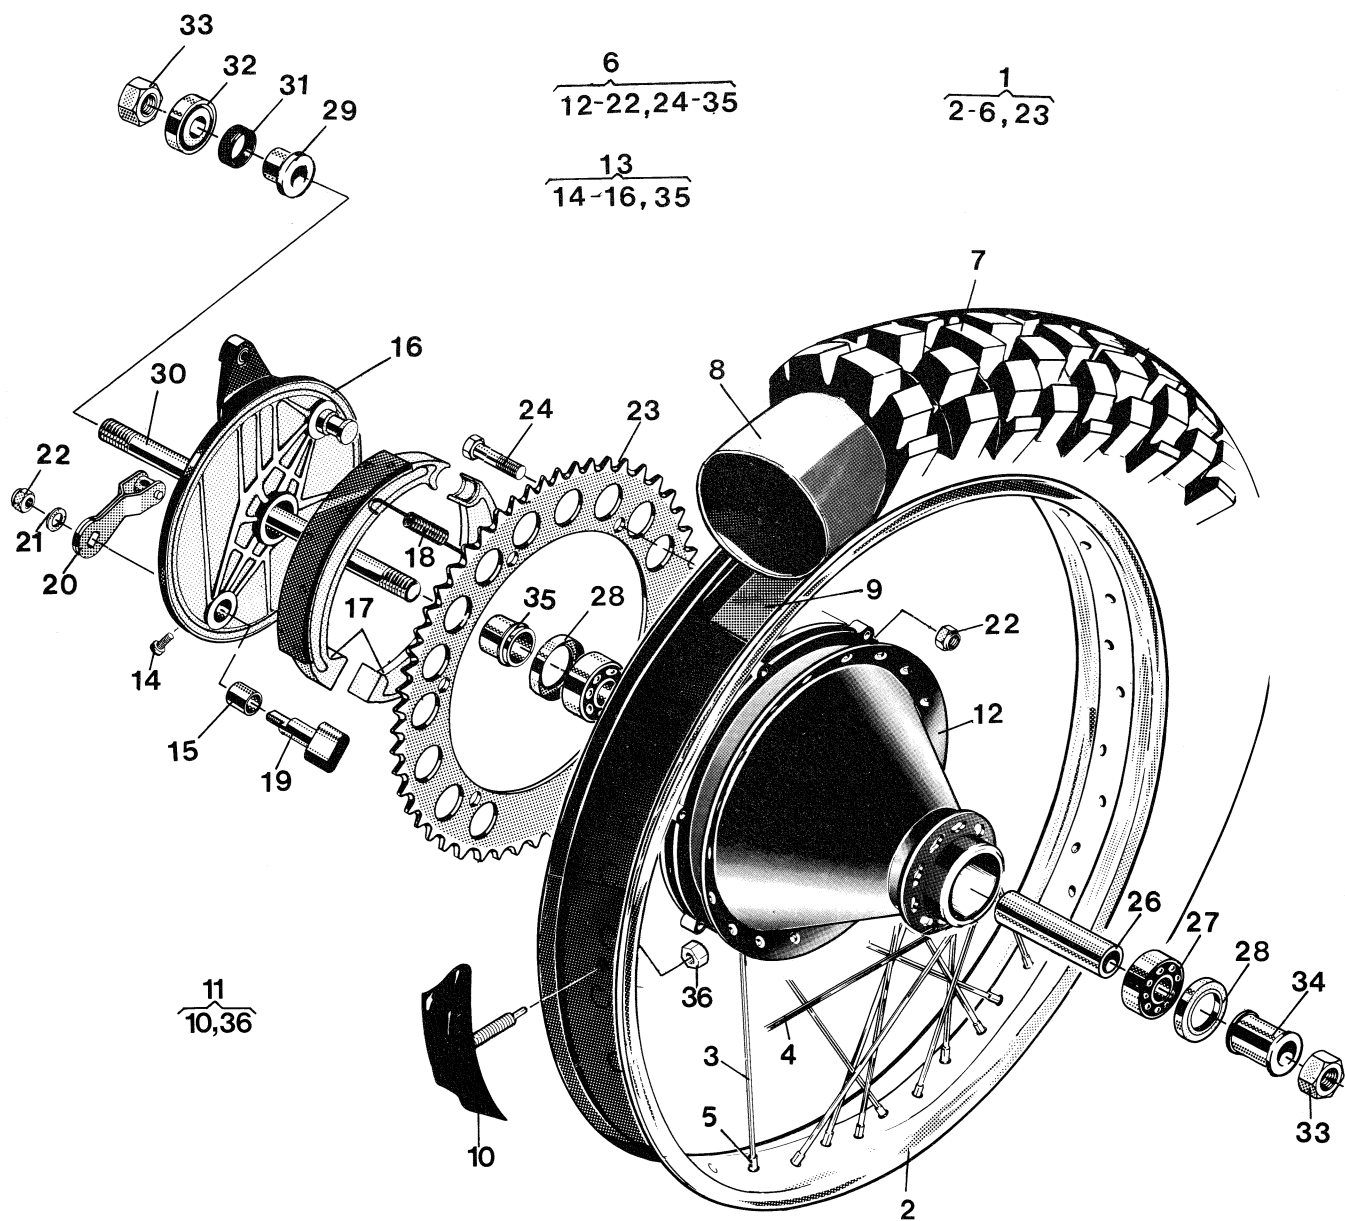


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	15 19 884-01	1		1		1			1							Hjul, kpl. exkl. gummi Wheel compl. excl. rubber	
2	15 16 748-01	1		1		1			1							Fälg 2,50x17'' Rim	
3	15 16 218-01	18		18		18			18							Eker L = 181 Spoke	
4	15 16 218-02	18		18		18			18							Eker L = 196 Spoke	
5	15 16 219-01	36		36		36			36							Ekernippel Spoke nipple	
6	15 19 883-01	1		1		1			1							Baknav kpl. utan kedjedrev Rear hub compl.	
7	15 16 759-01															Däck 5,50x17'', Trelleborg Tyre	
	15 16 763-01								1							Däck 140/90-17'', Barum Tyre	
	15 16 775-01	1		1		1										Däck 4,50x17'', Trelleborg Tyre	
8	15 16 508-01	1		1		1										Innerslang 4,00x18'' Innertube	
	15 16 770-01								1							Innerslang 17'' Innertube	
9	15 16 761-01	1		1		1										Fälgband 17'' Rimband	
	15 16 771-01								1							Fälgband 17'' Rimband	
11	15 16 772-01	2		2		2			2							Däcklås, kpl. Tyre lock	
12	15 16 751-01	1		1		1			1							Navhylsa, kpl. Hub sleeve	
13	15 16 665-01	1		1		1			1							Bromssköld, kpl. Brake plate compl.	
14	20 62 360-11	1		1		1			1							Skruv MCS 6x6 Screw	
15	15 16 667-01	1		1		1			1							Bussning Bushing	
17	15 16 543-01	2		2		2			2							Bromsback Brake shoe	
18	15 16 547-01	2		2		2			2							Fjäder, bromsback Spring	
19	15 16 548-01	1		1		1			1							Bromsexcenter Brake cam	
20	15 16 723-01	1		1		1			1							Hävarm Lever	
21	28 16 241-01	1		1		1			1							Bricka 8,4x18 Washer	
22	25 80 153-01	7		7		7			7							Låsmutter M8 Nut	
23	15 16 755-01	1		1		1			1							Kedjekrans 53 T	
24	20 06 455-12	6		6		6			6							Skruv M8x30 Screw	
26	15 16 752-01	1		1		1			1							Distanshylsa Distance sleeve	
27	29 31 200-39	2		2		2			2							Kullager Ball bearing	
28	29 65 448-07	2		2		2			2							Tätning Seal	
29	15 16 725-01	1		1		1			1							Lagerhylsa Bearing sleeve	
30	15 16 728-01	1		1		1			1							Bakaxel Shaft	
31	12 16 549-01	1		1		1			1							Tätningsring Seal	
32	15 16 611-01	1		1		1			1							Tätningshållare Seal case	
33	15 16 598-01	1		1		1			1							Mutter Nut	
34	15 16 753-01	1		1		1			1							Distans, vänster Distance	
35	15 16 605-01	1		1		1			1							Bussning Bushing	
Tillbehör/Accessories																	
	15 19 901-01															Ekersats Spoke Unit	
	15 19 902-01															Nippelsats 36 st Nipple kit 36 pcs	

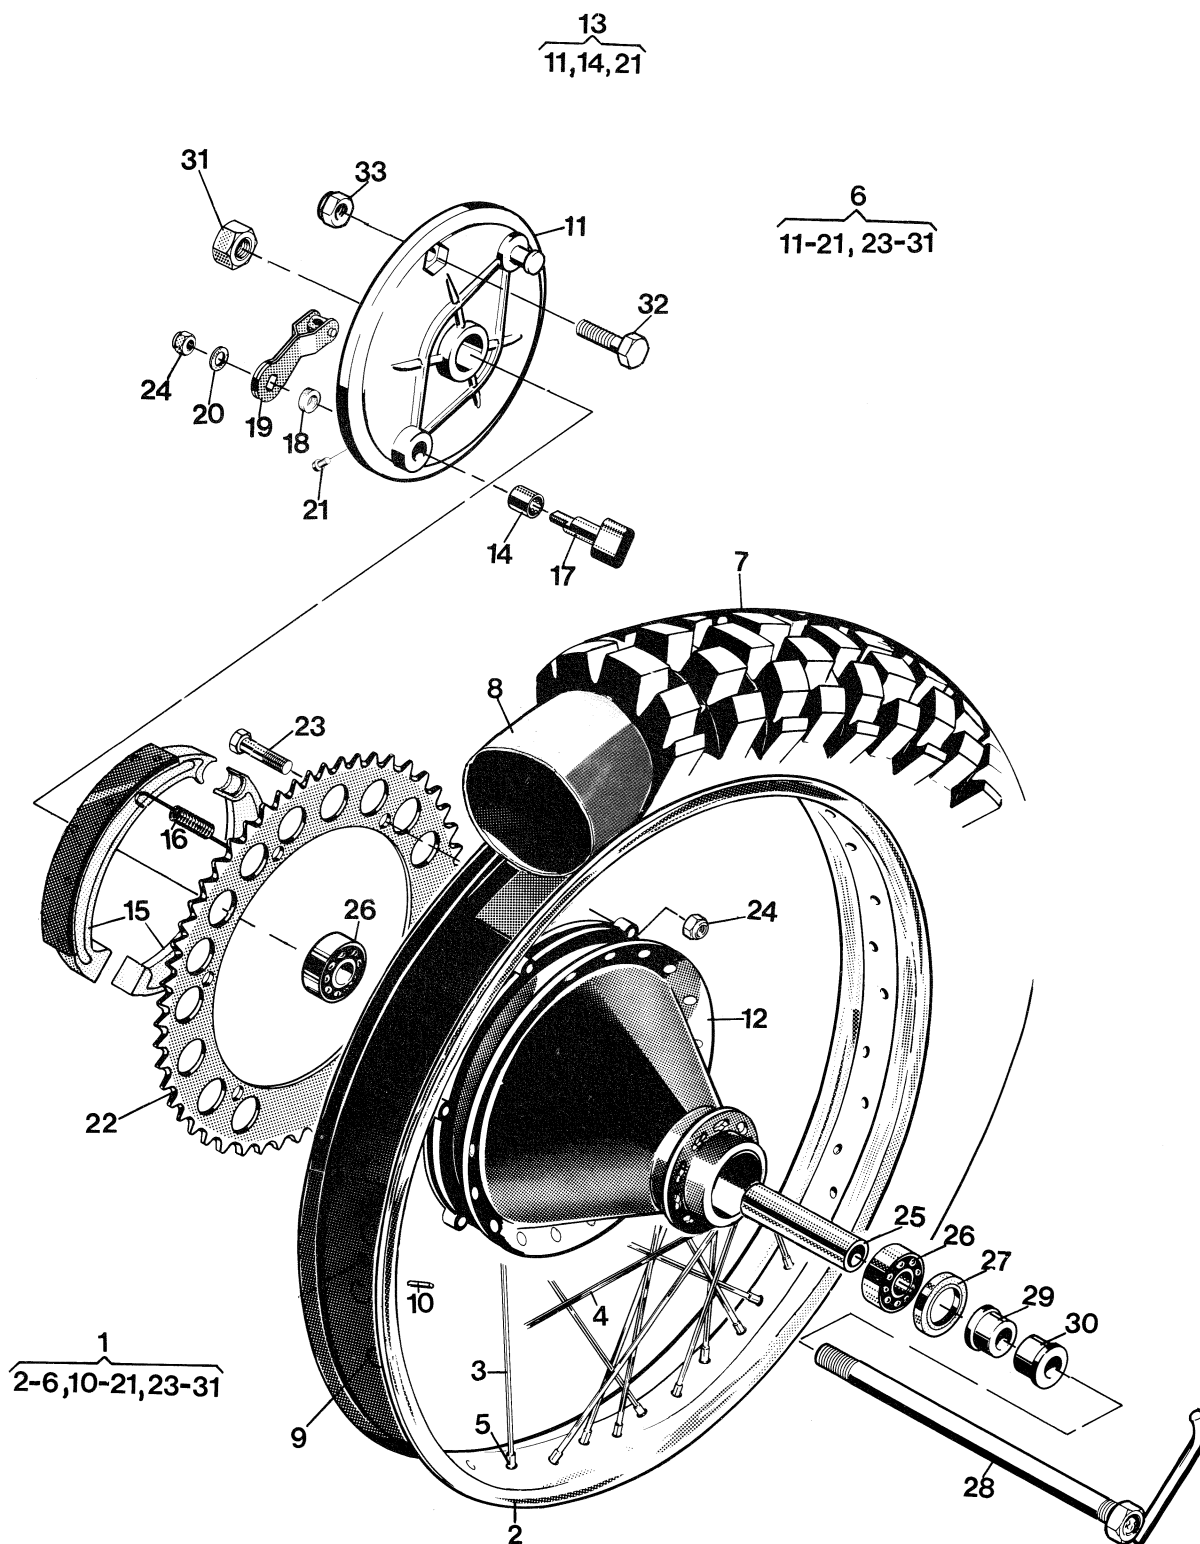


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av	
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
N	1	15 19 907-01		1		1		1	1		1	1	1	1	1		Hjul, kpl. exkl. gummi Wheel compl. excl. rubber	
	2	15 16 748-01		1		1		1	1		1	1	1	1	1		Fälg 2,50x17'' Rim	
	3	15 16 218-01		18		18		18	18		18	18	18	18	18		Eker 181 Spoke	
	4	15 16 218-02		18		18		18	18		18	18	18	18	18		Eker 196 Spoke	
	5	15 16 219-01		36		36		36	36		36	36	36	36	36		Ekernippel Spoke nipple	
N	6	15 19 906-01		1		1		1	1		1	1	1	1	1		Baknav, kpl. Rear hub compl.	
	7	15 16 763-01		1		1		1	1		1	1	1	1	1		Däck 140/90-17'' Barum Tyre	
	8	15 16 770-01		1		1		1	1		1	1	1	1	1		Innerslang 17'' Innertyre	
	9	15 16 771-01		1		1		1	1		1	1	1	1	1		Fälgband 17'' Rim band	
	10	28 24 215-08		18		18		18	18		18	18	18	18	18		Pinne 3x8 Cyl pin	
N	12	15 16 792-01		1		1		1	1		1	1	1	1	1		Navhylsa Hub sleeve	
N	13	15 16 790-01		1		1		1	1		1	1	1	1	1		Bromssköld, kpl. Brake plate compl.	
	14	15 16 667-01		1		1		1	1		1	1	1	1	1		Bussning Bushing	
N	15	15 16 788-01		2		2		2	2		2	2	2	2	2		Bromsback, kpl. Brake plate	
	16	15 16 547-01		2		2		2	2		2	2	2	2	2		Fiäder Spring	
N	17	15 16 782-01		1		1		1	1		1	1	1	1	1		Bromsexcenter Brake cam	
N	18	15 16 801-01		1		1		1	1		1	1	1	1	1		Tätning Seal	
	19	15 16 513-01		1		1		1	1		1	1	1	1	1		Hävarm Lever	
	20	28 16 241-01		1		1		1	1		1	1	1	1	1		Bricka 8,4'x18 Washer	
	21	20 62 360-11		1		1		1	1		1	1	1	1	1		Skruv M6x6 Screw	
	22	15 16 755-01		1		1		1	1		1	1	1	1	1		Kedjekrans z = 53 Sprocket	
	23	20 06 455-12		6		6		6	6		6	6	6	6	6		Skruv M8x30 Screw	
	24	25 80 153-01		7		7		7	7		7	7	7	7	7		Låsmutter M8 Nut	
	25	15 16 752-01		1		1		1	1		1	1	1	1	1		Distanshylsa Distance sleeve	
	26	29 31 200-38		2		2		2	2		2	2	2	2	2		Kullager Ball bearing	
	27	29 65 448-07		1		1		1	1		1	1	1	1	1		Tätning Seal	
N	28	15 16 800-01		1		1		1	1		1	1	1	1	1		Bakaxel, kpl. Shaft	
	29	15 16 793-01		1		1		1	1		1	1	1	1	1		Distans Distance	
	30	15 16 536-01		1		1		1	1		1	1	1	1	1		Distansring Distance ring	
	31	15 16 598-01		1		1		1	1		1	1	1	1	1		Mutter Nut	
	32	20 06 493-12		1		1		1	1		1	1	1	1	1		Skruv M10x25 Screw	
	33	25 80 171-01		1		1		1	1		1	1	1	1	1		Låsmutter M10 Nut	
Tillbehör/Accessories																		
	15 19 901-01																Ekersats Spoke Unit	
	15 19 902-01																Nippelsats 36 st Nipple kit 36 pcs	
	15 19 886-01																Däcklåssats Cyl pinne 3x8, 40 st Tyre lock kit Cyl pin 3x8, 40 pcs	

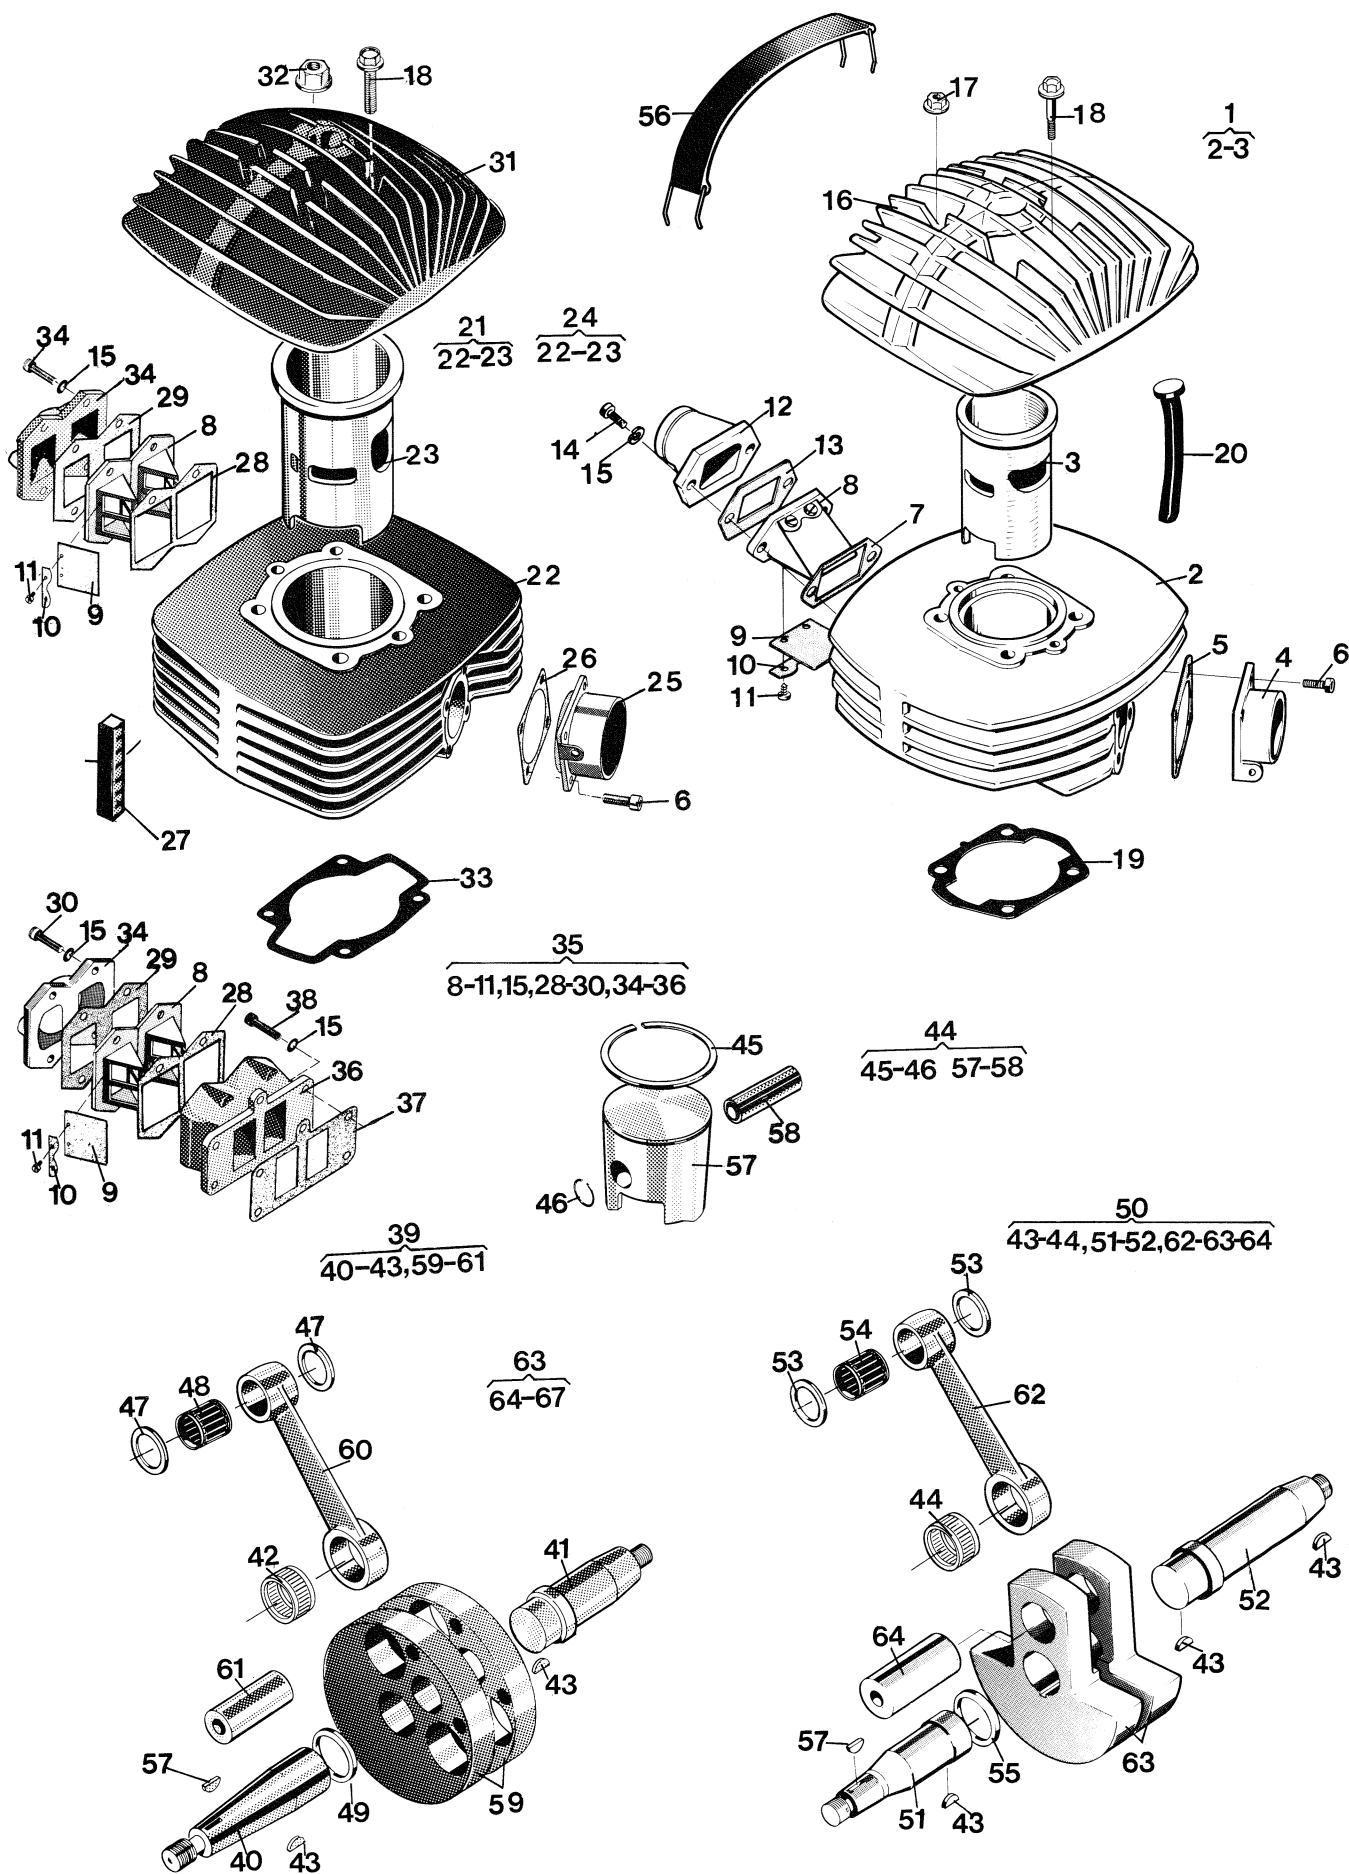


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	16 11 767-01	1	1													Cylinder, kpl. Cylinder compl.	
3	16 11 765-01	1	1													Cylinderfoder Cylinder liner	
4	16 11 511-01	1	1													Avgasstos, kpl. Exhaust manifold	
5	16 11 512-01	1	1													Packning Gasket	
6	20 24 370-12	4	4	4	4	4	4	4	4	4	4	4	4	4		Skruv M6x20 Screw	
7	16 11 514-01	1	1													Packning Gasket	
8	16 10 357-01	1	1	2	2	2	2	2	2	2	2	2	2	2		Ventilhållare Valve holder	
9	16 10 359-01	2	2	4	4	4	4	4	4	4	4	4	4	4		Ventil Valve	
10	16 10 377-01	2	2	4	4	4	4	4	4	4	4	4	4	4		Ventilstöd Valve support	
11	22 96 285-11	4	4	8	8	8	8	8	8	8	8	8	8	8		Skruv M4x6 Screw	
12	16 11 770-01	1	1													Anslutningsrör Inlet manifold	
13	16 11 513-01	1	1													Packning Gasket	
14	20 24 372-12	2	2													Skruv M6x25 Screw	
15	28 88 180-01	2	2	4	4	4	4	4	9	9	9	9	9	9		Fjäderbricka Washer	
16	16 11 769-01	1	1													Cylinderlock Cylinder head	
17	25 46 118-14	4	4													Mutter Nut	
18	20 18 459-12	2	2	2	2	2	2	2	2	2	2	2	2	2		Skruv M8x40 Screw	
19	16 11 568-01	1	1													Packning Gasket	
20	16 11 764-01		4		4		4	4								Dämpstav Damping rod	
21	16 11 790-01					1	1	1								Cylinder, kpl. Cylinder compl.	
22	16 11 829-01								1	1	1					Cylinder, kpl. Cylinder compl.	
	16 11 750-01												1	1		Cylinder, kpl. Cylinder compl.	
23	16 11 651-01					1	1	1								Cylinderfoder Cylinder liner	
	16 11 651-02			1	1											Cylinderfoder Cylinder liner	
24	16 11 790-02			1	1											Cylinder, kpl. Cylinder compl.	
25	16 10 730-01			1	1	1	1	1								Avgasstos, kpl. Exhaust manifold	
	16 10 891-01								1	1	1	1	1	1		Avgasstos, kpl. Exhaust manifold	
26	16 10 894-01								1	1	1	1	1	1		Packning Gasket	
	16 10 912-01			1	1	1	1	1								Packning Gasket	
27	16 11 556-01									1	1	1	1	1		Dämpelement Damping element	
28	16 10 362-01			1	1	1	1	1	1	1	1	1	1	1		Packning Gasket	
29	16 10 396-01			1	1	1	1	1	1	1	1	1	1	1		Packning Gasket	
30	20 24 374-55			4	4	4	4	4	4	4	4	4	4	4		Skruv M4x6 Screw M4x6	
31	16 11 724-01			1	1	1	1	1								Cylinderlock Cylinder head	
	16 11 751-01								1	1	1	1	1	1		Cylinderlock Cylinder head	
32	25 46 120-14			4	4	4	4	4	4	4	4	4	4	4		Mutter Nut	
33	16 11 648-01			1	1	1	1	1	1	1	1	1				Packning Gasket	
	16 11 763-01												1	1		Packning Gasket	
34	16 11 742-01			1	1	1	1	1	1	1	1	1	1	1		Anslutningsrör Inlet manifold	
35	16 11 743-01								1	1	1	1	1	1		Ventilhus, kpl. Valve housing, compl.	

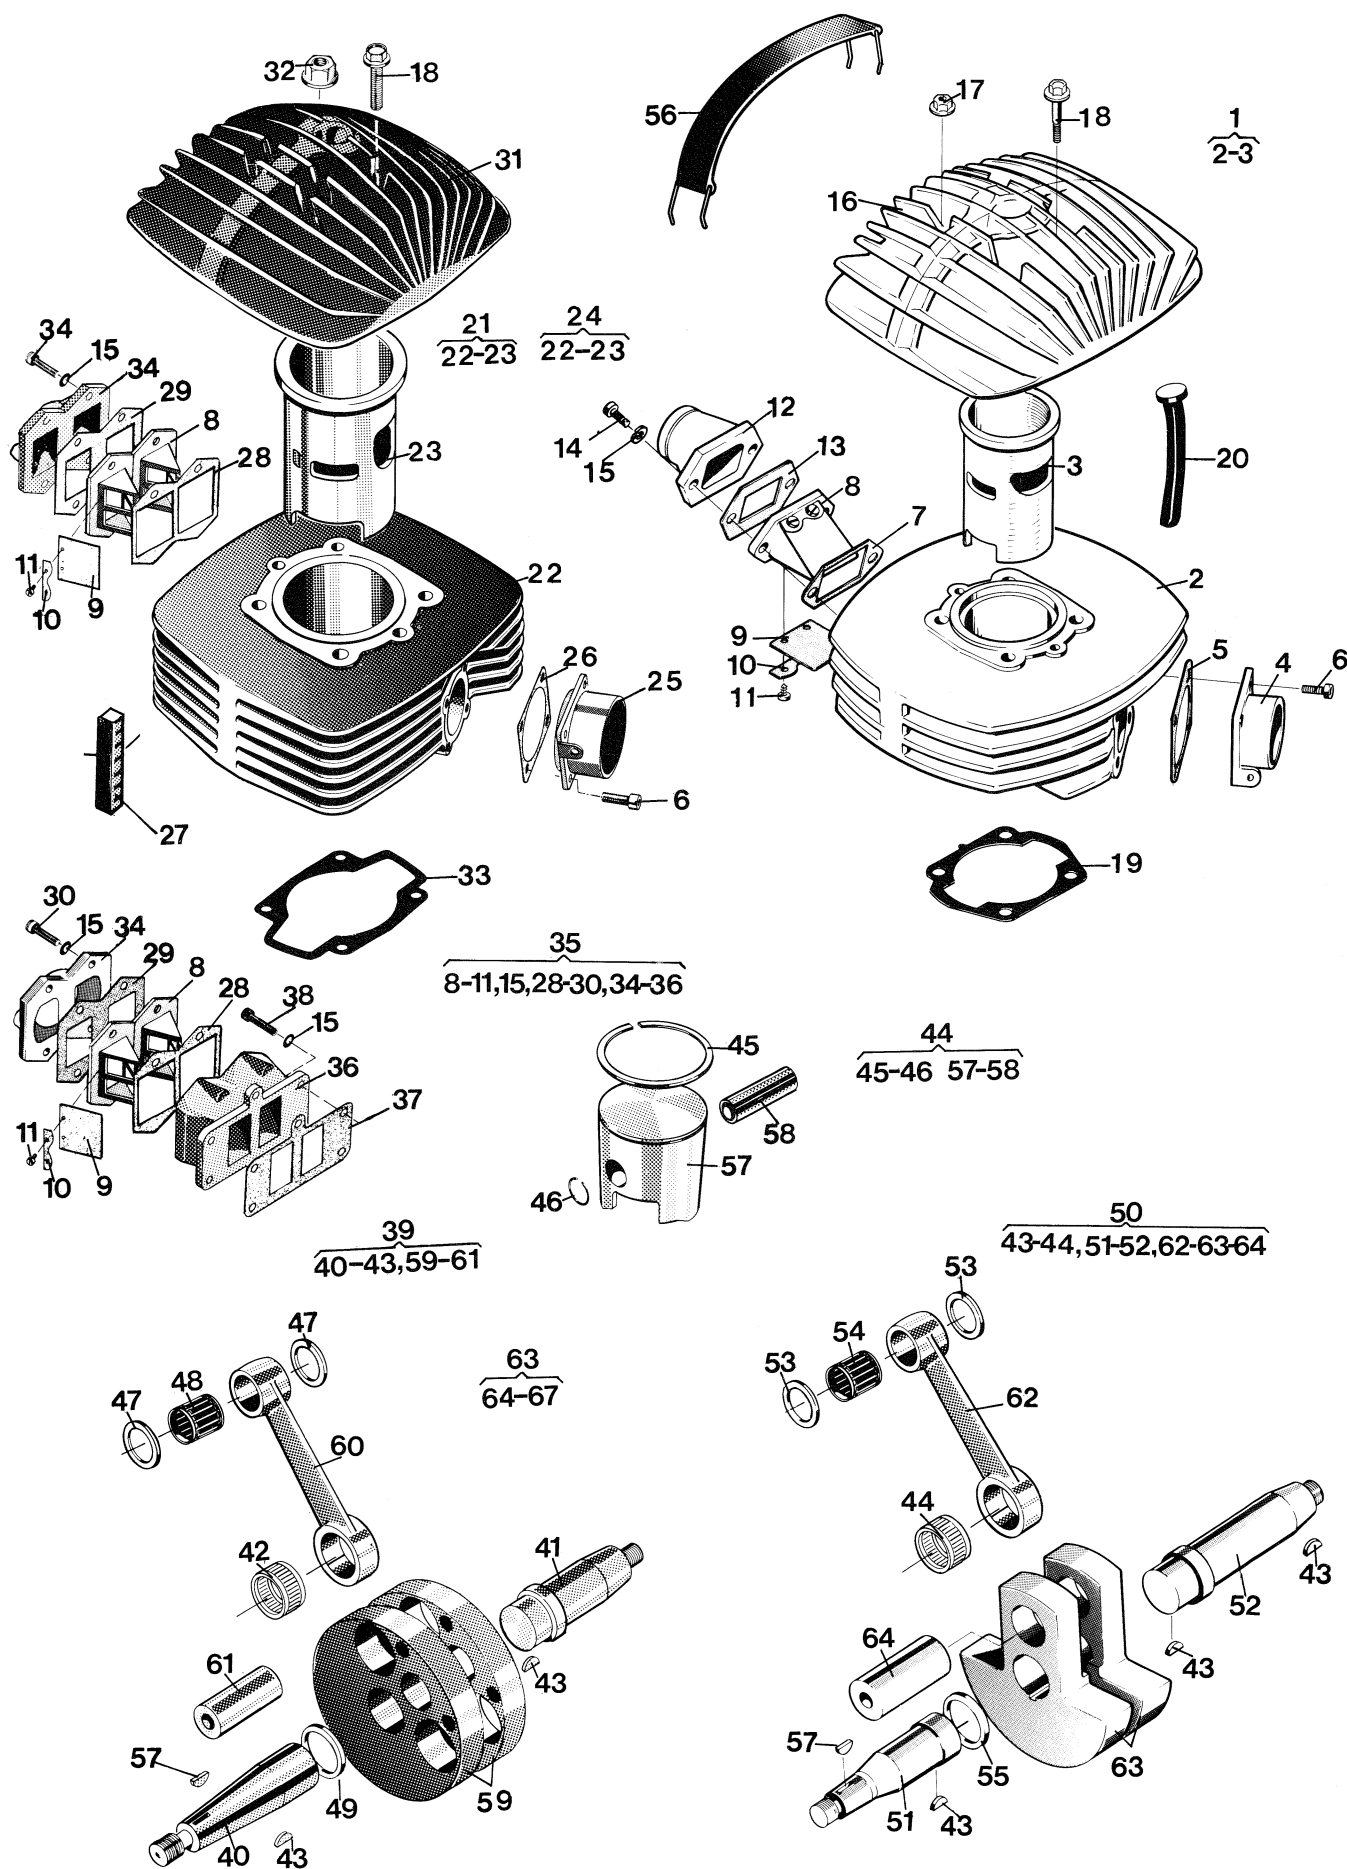


Fig.	Part Number Detaljnummer	Quantity/Antal															Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
36	16 11 569-01								1	1	1	1	1	1		Ventilhus Valve housing		
37	16 10 361-01								1	1	1	1	1	1		Packning Gasket		
38	20 24 371-12								5	5	5	5	5	5		Skruv M6x22 Screw		
39	16 10 381-01	1	1													Vevparti, kpl. Crank shaft, compl.		
	16 11 723-01			1		1		1								Vevparti, kpl. Crank shaft, compl.		
	16 11 741-02				1		1									Vevparti, kpl. Crank shaft, compl.		
40	16 10 653-01	1	1													Vevaxel, höger Crank shaft, right		
	16 11 815-01				1		1									Vevaxel, höger Crank shaft, right		
	16 10 851-01			1		1		1								Vevaxel, höger Crank shaft, right		
41	16 10 654-01	1	1													Vevaxel, vänster Crank shaft, left		
	16 11 543-01			1	1	1	1	1								Vevaxel, vänster Crank shaft, left		
42	16 11 533-01	1	1													Nållager Needle bearing		
	16 10 926-01			1	1	1	1	1								Nållager Needle bearing		
43	29 00 560-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Woodruffkil Woodruff key		
44	16 10 376-01					1	1	1								Kolv, kpl. (cyl. ø 69,50) Piston compl.		
	16 10 376-02															Kolv, kpl. (cyl. ø 69,75) Piston, compl.		
	16 10 376-03															Kolv, kpl. (cyl. ø 70,00) Piston, compl.		
	16 10 376-04															Kolv, kpl. (cyl. ø 70,25) Piston, compl.		
	16 10 376-05			1	1											Kolv, kpl. (cyl. ø 68,75) Piston, compl.		
	16 10 378-01	1	1													Kolv, kpl. (cyl. ø 55,00) Piston, compl.		
	16 10 378-02															Kolv, kpl. (cyl. ø 55,25) Piston, compl.		
	16 10 378-03															Kolv, kpl. (cyl. ø 55,50) Piston, compl.		
	16 11 408-04								1	1	1	1	1	1		Kolv, kpl. (cyl. ø 83,00) Piston, compl.		
	16 11 408-05															Kolv, kpl. (cyl. ø 83,50) Piston, compl.		
	16 11 408-06															Kolv, kpl. (cyl. ø 84,00)		
45	16 10 671-01	1	1													Kolvring (cyl. ø 55,00) Piston ring		
	16 10 671-02															Kolvring (cyl. ø 55,25) Piston ring		
	16 10 671-03															Kolvring (cyl. ø 55,50) Piston ring		
	16 10 831-01					1	1	1								Kolvring (cyl. ø 69,50) Piston ring		
	16 10 831-02															Kolvring (cyl. ø 69,75) Piston ring		
	16 10 831-03															Kolvring (cyl. ø 70,00) Piston ring		
	16 10 831-04															Kolvring (cyl. ø 70,25) Piston ring		
	16 10 831-05			1	1											Kolvring (cyl. ø 68,75) Piston ring		
	16 10 878-04								1	1	1	1	1	1		Kolvring (cyl. ø 83,00) Piston ring		
	16 10 878-05															Kolvring (cyl. ø 83,50) Piston ring		
	16 10 878-06															Kolvring (cyl. ø 84,00) Piston ring		
46	16 11 738-01			2	2	2	2	2	2	2	2	2	2	2		Låsring Circlip		
	16 11 739-01	2	2													Låsring Circlip		
47	16 10 674-01	2	2													Distansring Distance ring		
	16 10 971-01			2	2	2	2	2								Distansring Distance ring		
48	16 11 534-01	1	1													Nållager Needle bearing		
	16 10 933-01			1	1	1	1	1								Nållager Needle bearing		
49	16 10 676-01	1	1													Distansring Distance ring		
	16 10 921-01			1	1	1	1	1								Distansring Distance ring		

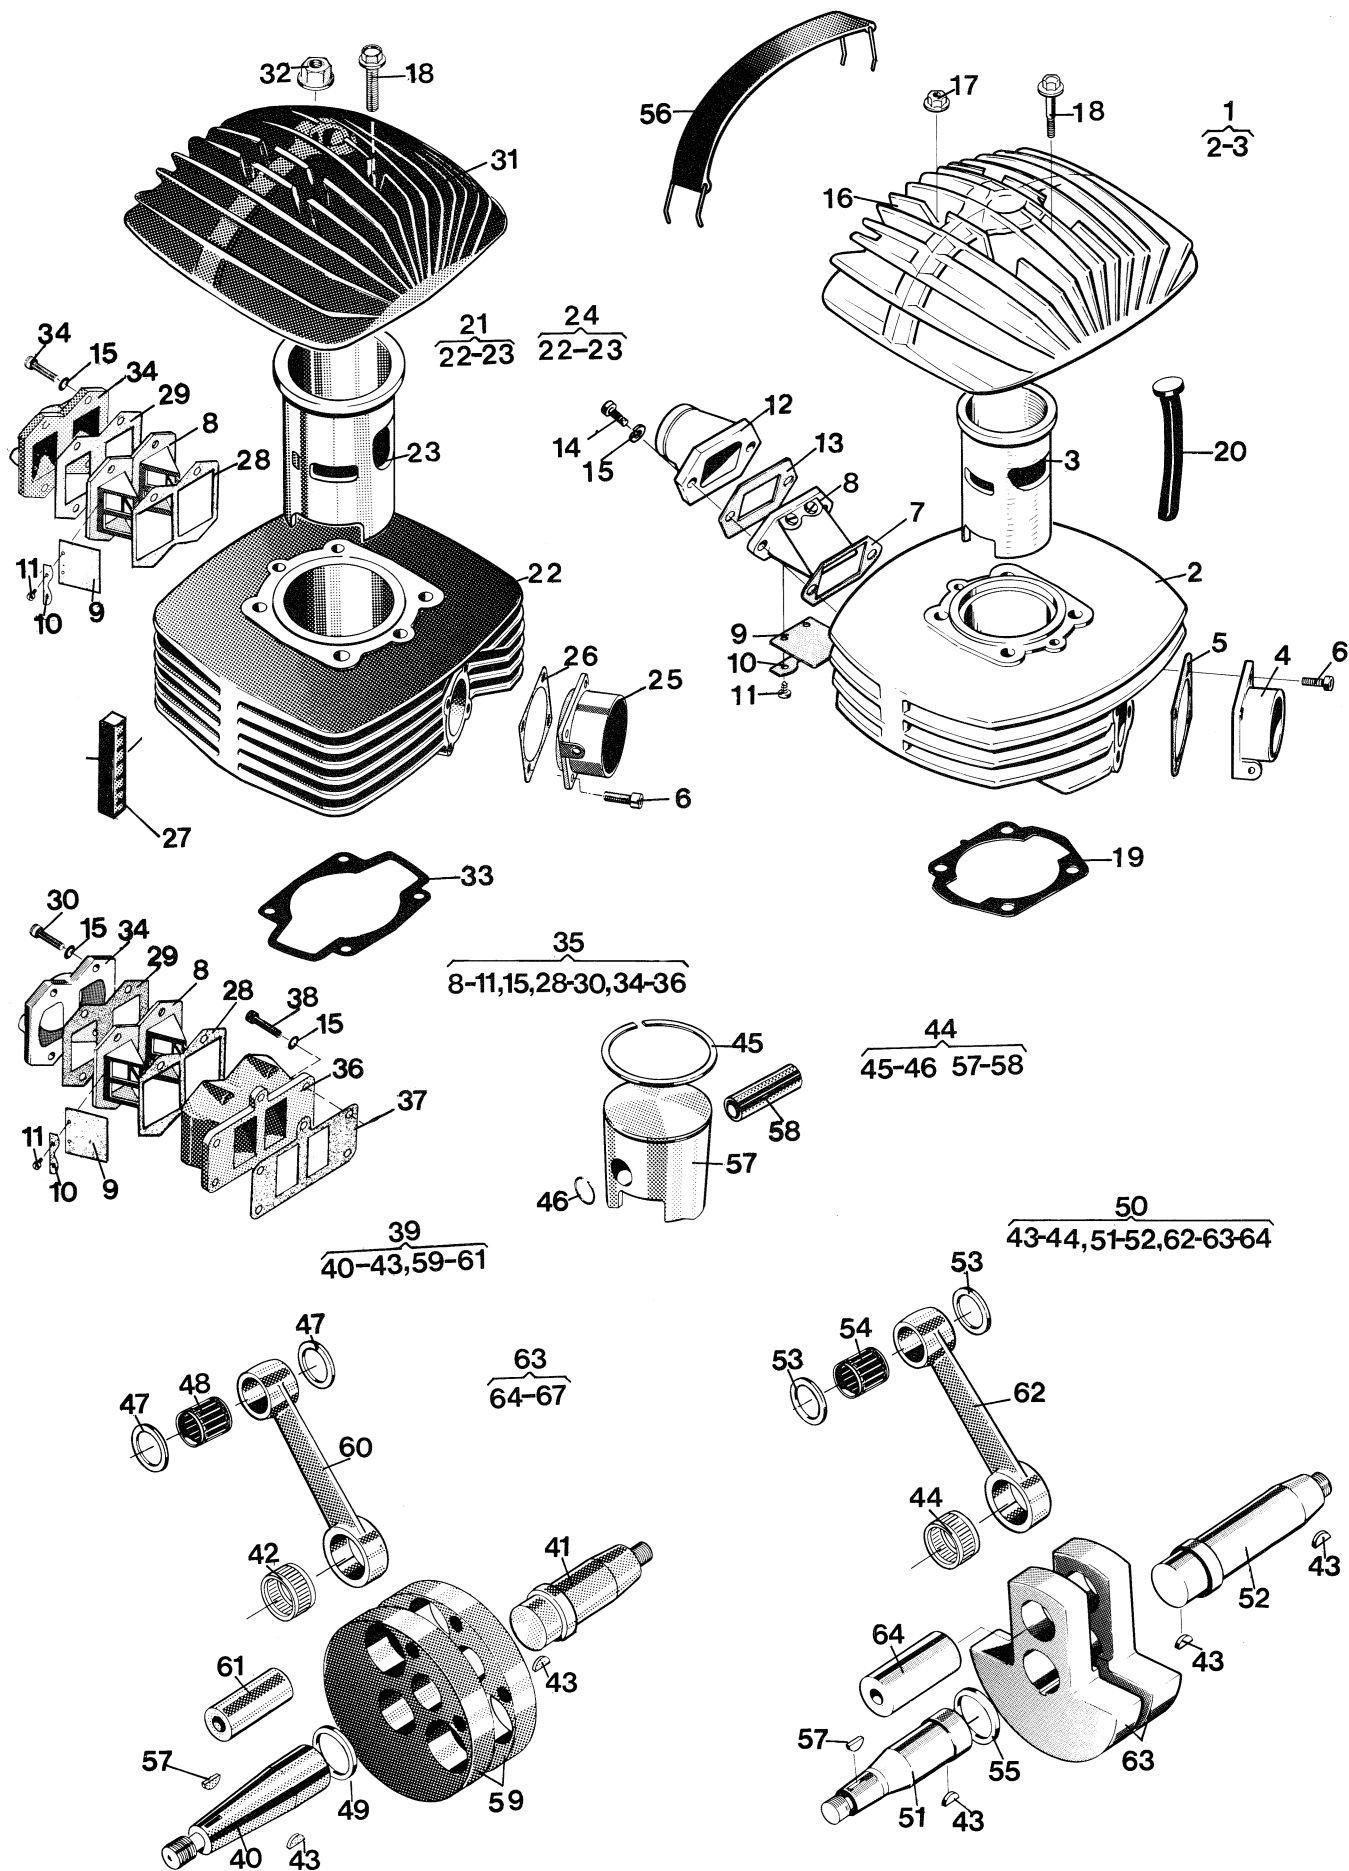


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av		
		125		240		250			390										
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX				
50	16 11 599-02 16 11 735-01								1	1	1	1		1	1		Vevparti kpl. Crank shaft compl. Vevparti kpl. Crank shaft compl.		
51	16 10 851-01 16 11 815-01									1	1	1	1		1	1		Vevaxel, höger Crank shaft, right Vevaxel, höger Crank shaft, right	
52	16 11 494-01 16 11 543-01									1	1	1	1		1	1		Vevaxel, vänster Crank shaft, left Vevaxel, vänster Crank shaft, left	
53	16 10 922-01								2	2	2	2	2	2	2	2		Distansring Distance ring	
54	16 10 933-01								1	1	1	1	1	1	1	1		Nållager Needle bearing	
55	16 10 921-01								1	1	1	1	1	1	1	1		Distansring Distance ring	
56	16 11 559-01				2		2	2		2	2	2	2	2	2	2		Dämpband kpl. Damping belt compl.	
57	29 01 265-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1		Woodruffkil Woodruff key	
Tillbehör/Accessories																			
	15 19 830-01 15 19 249-01			1	1	1	1	1	1	1	1	1	1	1	1	1		Renoveringssats, flaps Overhaul kit, reed-valves Dorn för kolv Drift for piston	

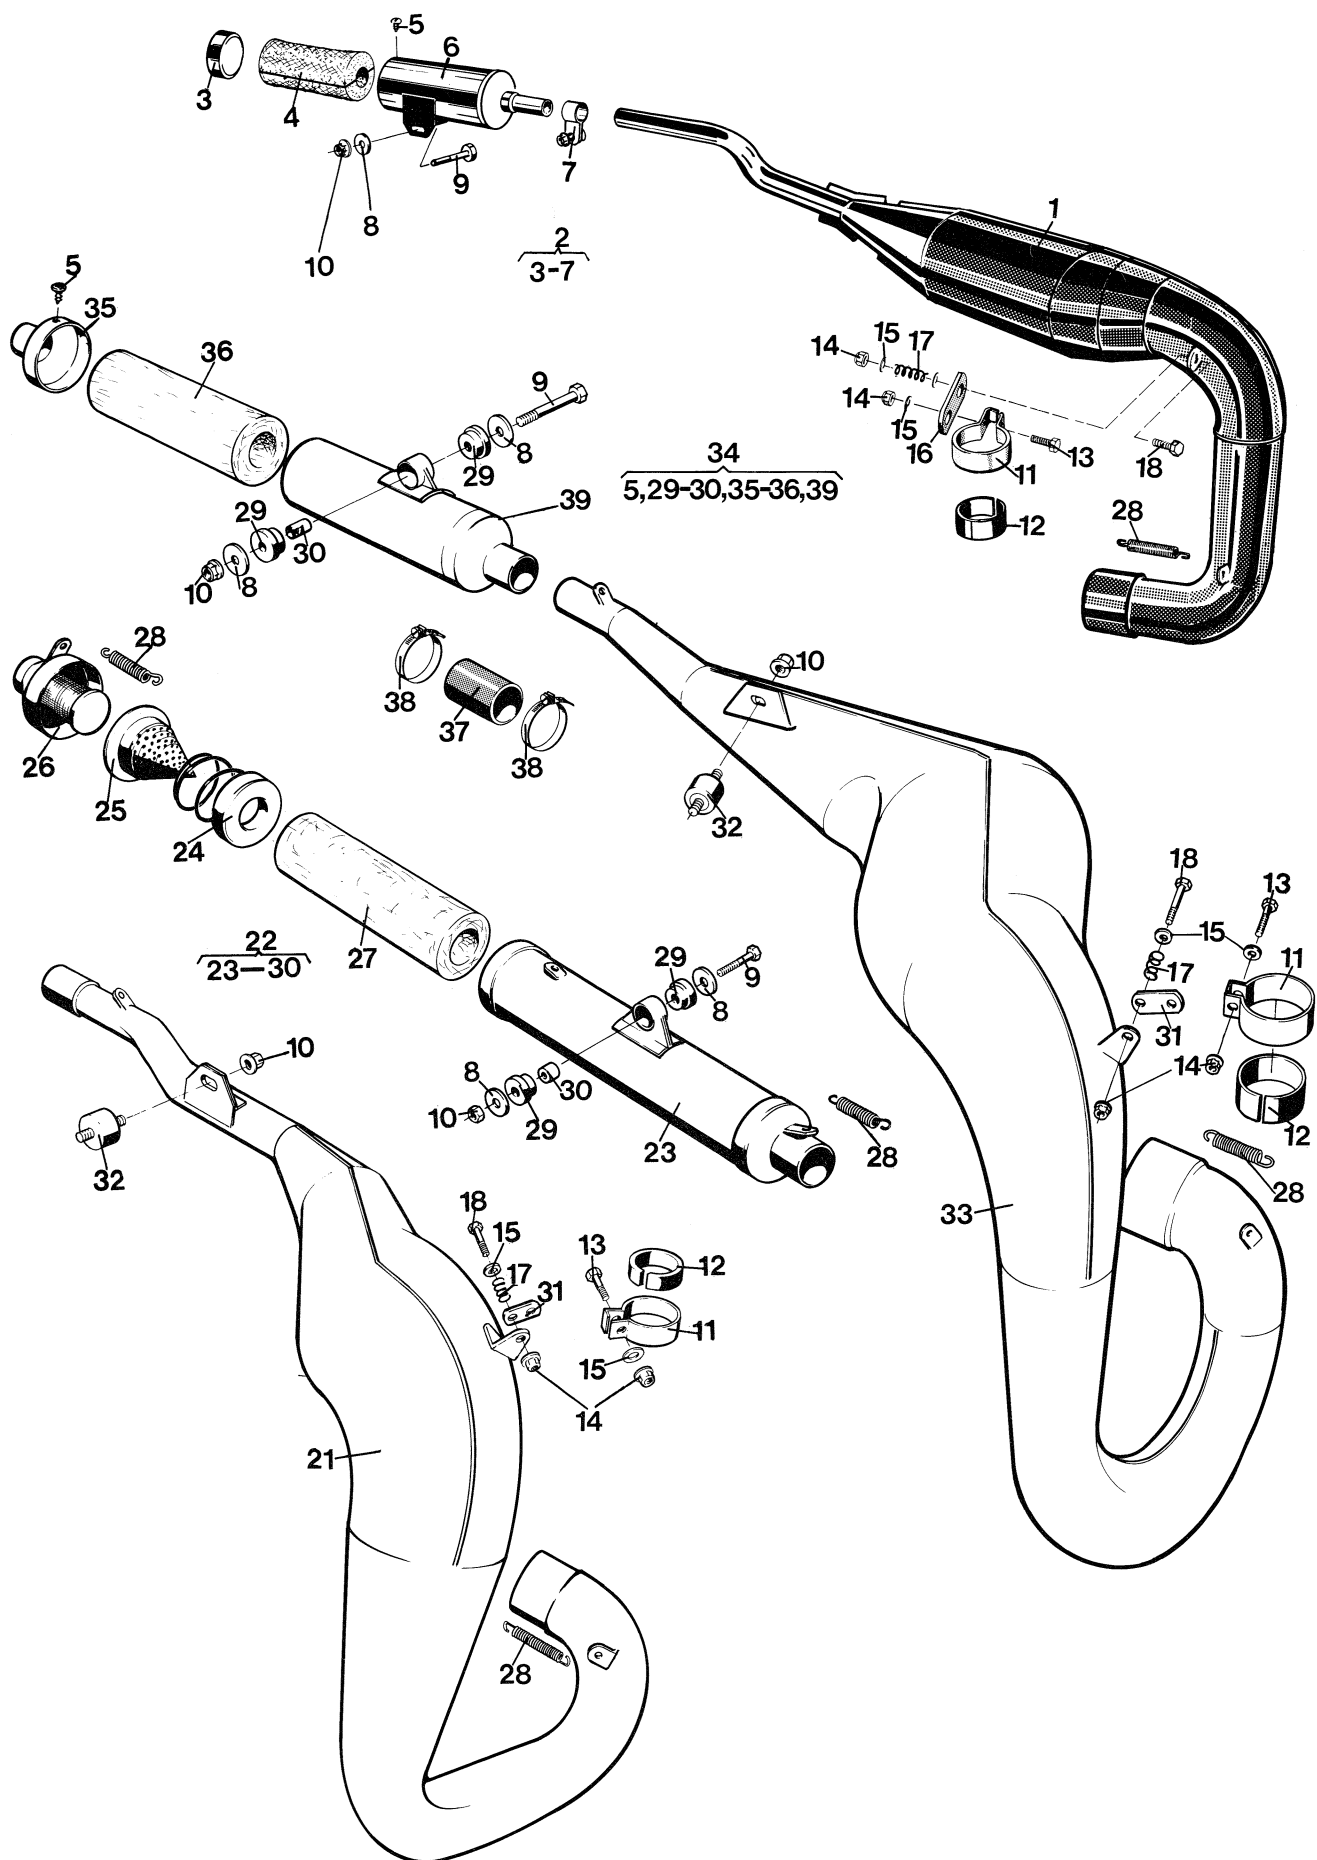


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av	
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
N 1	15 14 314-01	1	1														Avgasrör Exhaust pipe	
2	15 14 316-01	1	1														Ljuddämpare kpl. Silencer compl.	
3	15 14 888-01	1	1														Bakstycke Cover	
4	15 14 889-01	1	1														Absorbent Absorber	
5	23 40 400-12	2	2	3		3			3								Skruv Screw	
7	15 14 890-01	1	1														Klamma Clamp	
8	15 14 661-01	2	2	2	2	2	2	2	2	2	2	2	2	2			Bricka Washer	
9	20 06 464-12	1	1	1	1	1	1	1	1	1	1	1	1	1			Skruv M8x65 Screw	
10	25 82 118-14	1	1	2	2	2	2	2	2	2	2	2	2	2			Mutter M8 Nut	
11	15 14 624-01	1	1	1	1	1	1	1	1	1	1	1	1	1			Klamma Clamp	
12	15 14 641-01	1	1	1	1	1	1	1	1	1	1	1	1	1			Gummiskydd Rubber protection	
13	20 06 372-11	1	1	1	1	1	1	1	1	1	1	1	1	1			Skruv M6x25 Screw	
14	25 82 116-14	2	2	2	2	2	2	2	2	2	2	2	2	2			Mutter M6 Nut	
15	28 16 211-01	2	2	2	2	2	2	2	2	2	2	2	2	2			Bricka 6,4x14 Washer	
16	15 14 849-01	1	1														Länk Link	
17	15 14 038-01	1	1	1	1	1	1	1	1	1	1	1	1	1			Fjäder Spring	
18	20 06 376-12	1	1	1	1	1	1	1	1	1	1	1	1	1			Skruv M6x35 Screw	
21	15 14 241-01				1		1	1									Avgasrör Exhaust pipe	
	15 14 280-01			1		1											Avgasrör Exhaust pipe	
22	15 14 244-01				1		1	1		1	1	1	1	1			Ljuddämpare kpl. Silencer compl.	
24	15 14 242-01				1		1	1		1	1	1	1	1			Gavel, kpl. Gable compl.	
25	15 14 200-01				1		1	1		1	1	1	1	1			Gnistsil Spark arrestor	
26	15 14 999-01				1		1	1		1	1	1	1	1			Bakstycke End gable	
27	15 14 248-01				1		1	1		1	1	1	1	1			Absorbent Absorber	
28	15 19 864-01	2	2	2	6	2	6	6	2	6	6	6	6	6			Fjäder Spring	
29	15 14 662-01			2	2	2	2	2	2	2	2	2	2	2			Gummiement Rubber element	
30	15 14 663-01			1	1	1	1	1	1	1	1	1	1	1			Hylsa Sleeve	
31	15 14 893-01			1	1	1	1	1	1	1	1	1	1	1			Länk Link	
32	15 14 590-01			1	1	1	1	1	1	1	1	1	1	1			Vibrationsdämpare Vibration damper	
33	15 14 246-01									1	1	1	1	1			Avgasrör Exhaust pipe	
	15 14 277-01								1								Avgasrör Exhaust pipe	
N 34	15 14 278-01			1		1			1								Ljuddämpare kpl. Silencer, compl.	
N 35	15 14 291-01			1		1			1								Gavel Cover	
36	15 14 916-02			1		1			1								Absorbent Absorber	
J 37	15 14 295-01			1		1			1								Gummianslutning Rubber connection	
N 38	15 14 305-01			2		2			2								Klamma Clamp	

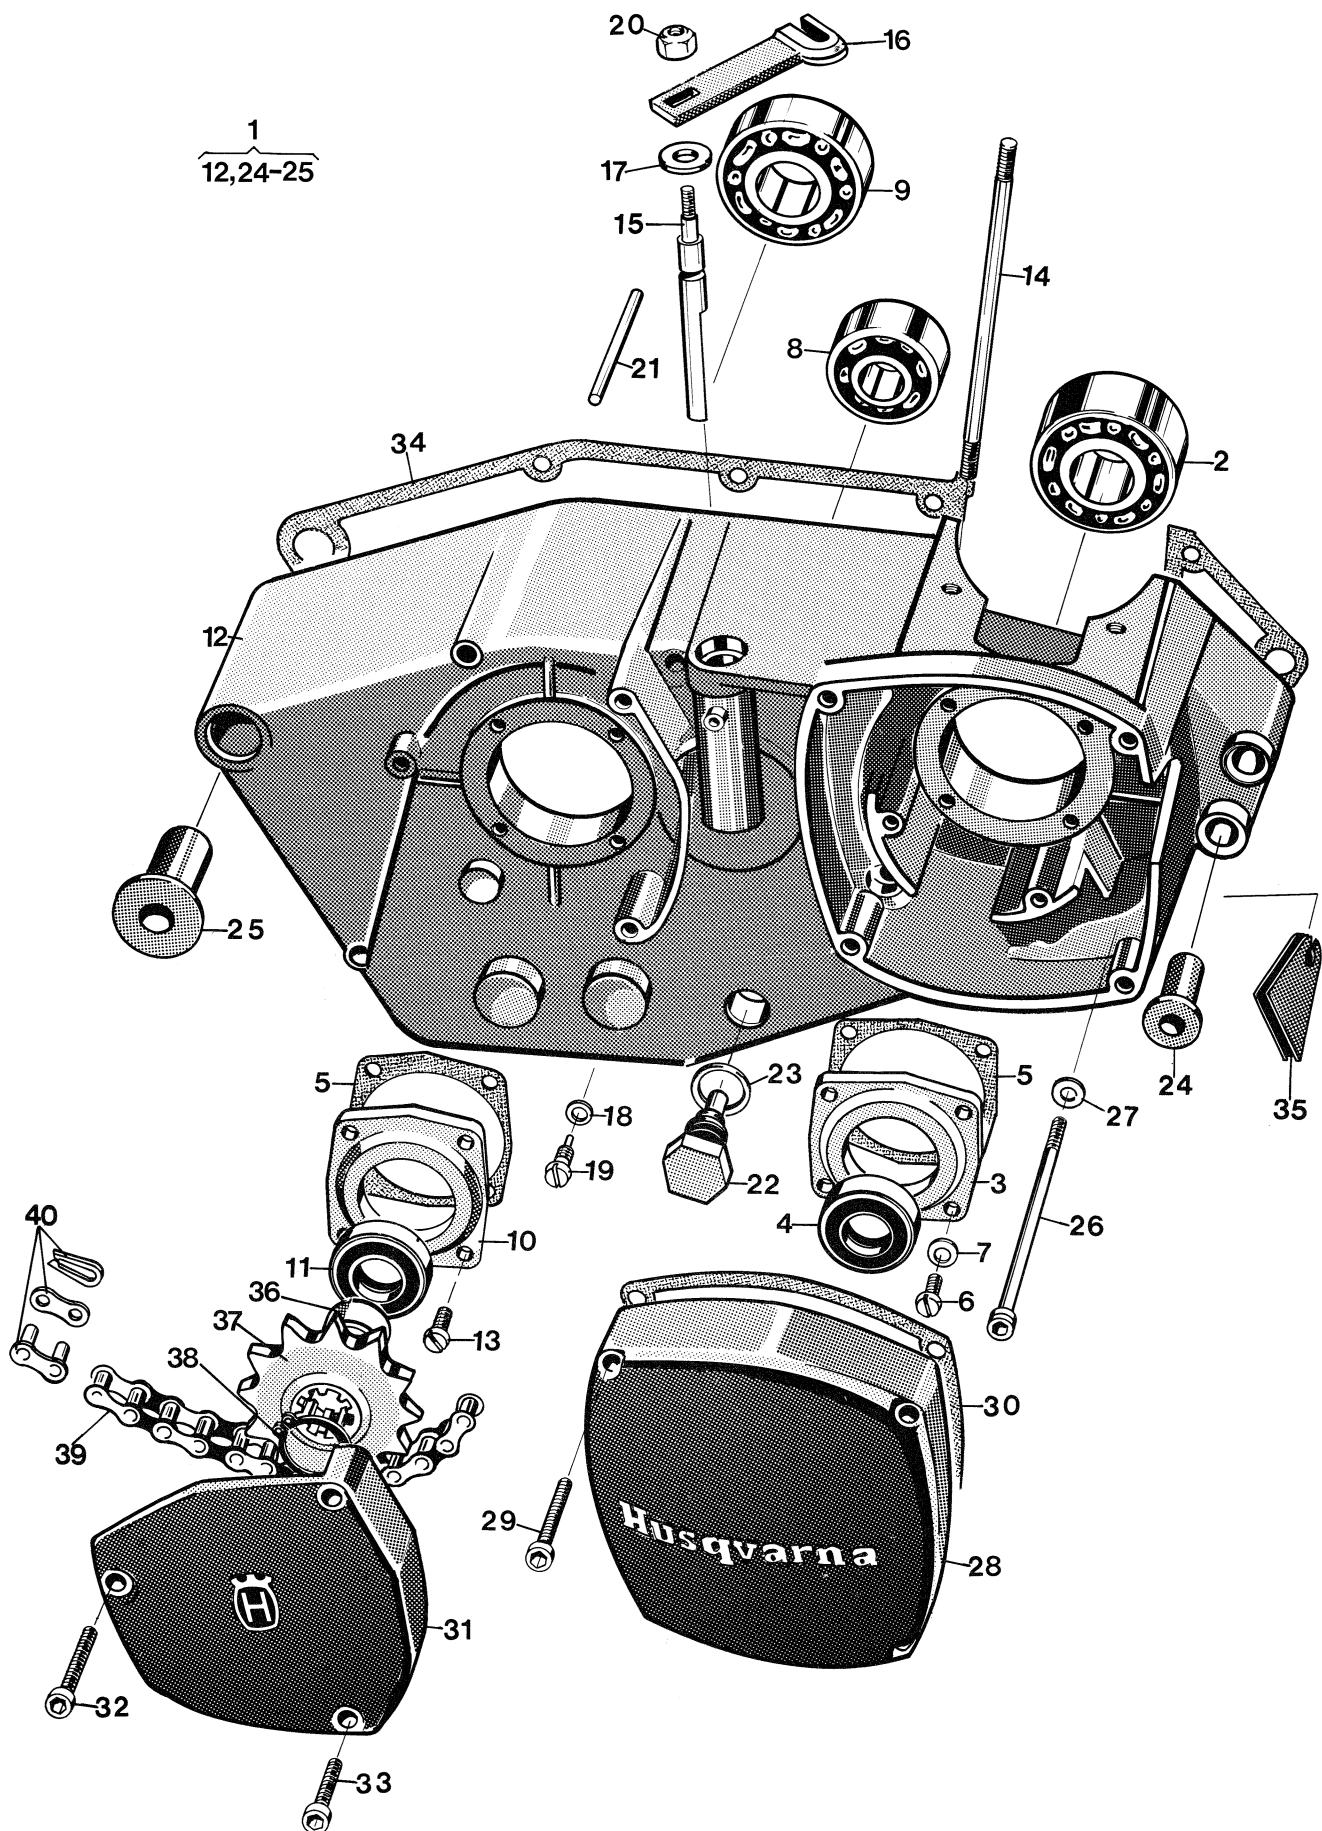


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av	
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
N	1	16 19 816-01	1	1													Vevhushalva höger Crankcase halve right	
		16 11 572-01	1	1													Vevhushalvor par Crankcasehalves pain	
	2	29 32 520-21	1	1													Kullager Ball bearing	
	3	16 10 679-01	1	1													Fläns Flange	
	4	16 10 681-01	1	1													Tättring Seal	
	5	12 25 360-01	2	2													Packning Gasket	
	6	20 62 328-12	4	4													Skruv Screw	
	7	28 88 170-01	4	4													Fjäderbricka Washer	
	8	29 31 180-04	1	1													Kullager Ball bearing	
	9	29 31 240-04	1	1													Kullager Ball bearing	
	10	16 10 938-01	1	1													Fläns Flange	
	11	29 65 444-01	1	1													Tättring Seal	
	13	21 21 328-52	4	4													Skruv Screw	
	14	16 11 546-01	4	4													Dragbult, cylinder Cylinder stud	
	15	16 10 774-01	1	1													Frikopplingsaxel Declutching shaft	
	16	16 11 171-01	1	1													Hävarm Lever	
	17	29 65 173-16	1	1													Tättring Seal	
	18	28 16 190-01	1	1													Bricka Washer	
	19	12 25 077-01	1	1													Stoppskruv Screw	
	20	25 80 153-01	1	1													Låsmutter M8 Nut	
	21	28 38 465-01	1	1													Pinne Pin	
	22	16 12 537-01	1	1													Magnetplugg Magneto plug	
	23	12 25 025-01	1	1													Packning Gasket	
	24	16 10 777-01	2	2													Flänsbussning Flange sleeve	
	25	16 11 516-01	1	1													Flänsbussning Flange sleeve	
	26	20 24 385-12	9	9													Skruv M6x75 Screw	
	27	28 16 201-01	9	9													Bricka Washer	
	28	16 10 647-01	1	1													Magnetkåpa Magneto cover	
	29	20 24 378-12	4	4													Skruv M6x40 Screw	
	30	16 11 623-01	1	1													Packning Gasket	
	31	16 11 560-01	1	1													Kåpa Cover	
	32	20 24 380-12	1	1													Skruv M6x50 Screw	
	33	20 24 376-12	2	2													Skruv M6x35 Screw	
	34	16 11 562-01	1	1													Vevhuspackning Gasket	
	35	16 14 728-01	1	1													Genomföring Grommet	
	36	16 12 472-01	1	1													Distansring Spacer	
	37	16 12 471-04	1	1													Kedjedrev z = 13 Sprocket	
	38	28 20 020-01	1	1													Spårring Circlip	
	39	15 19 373-08	1	1													Kedja 5/8x1/4 110 Chain	

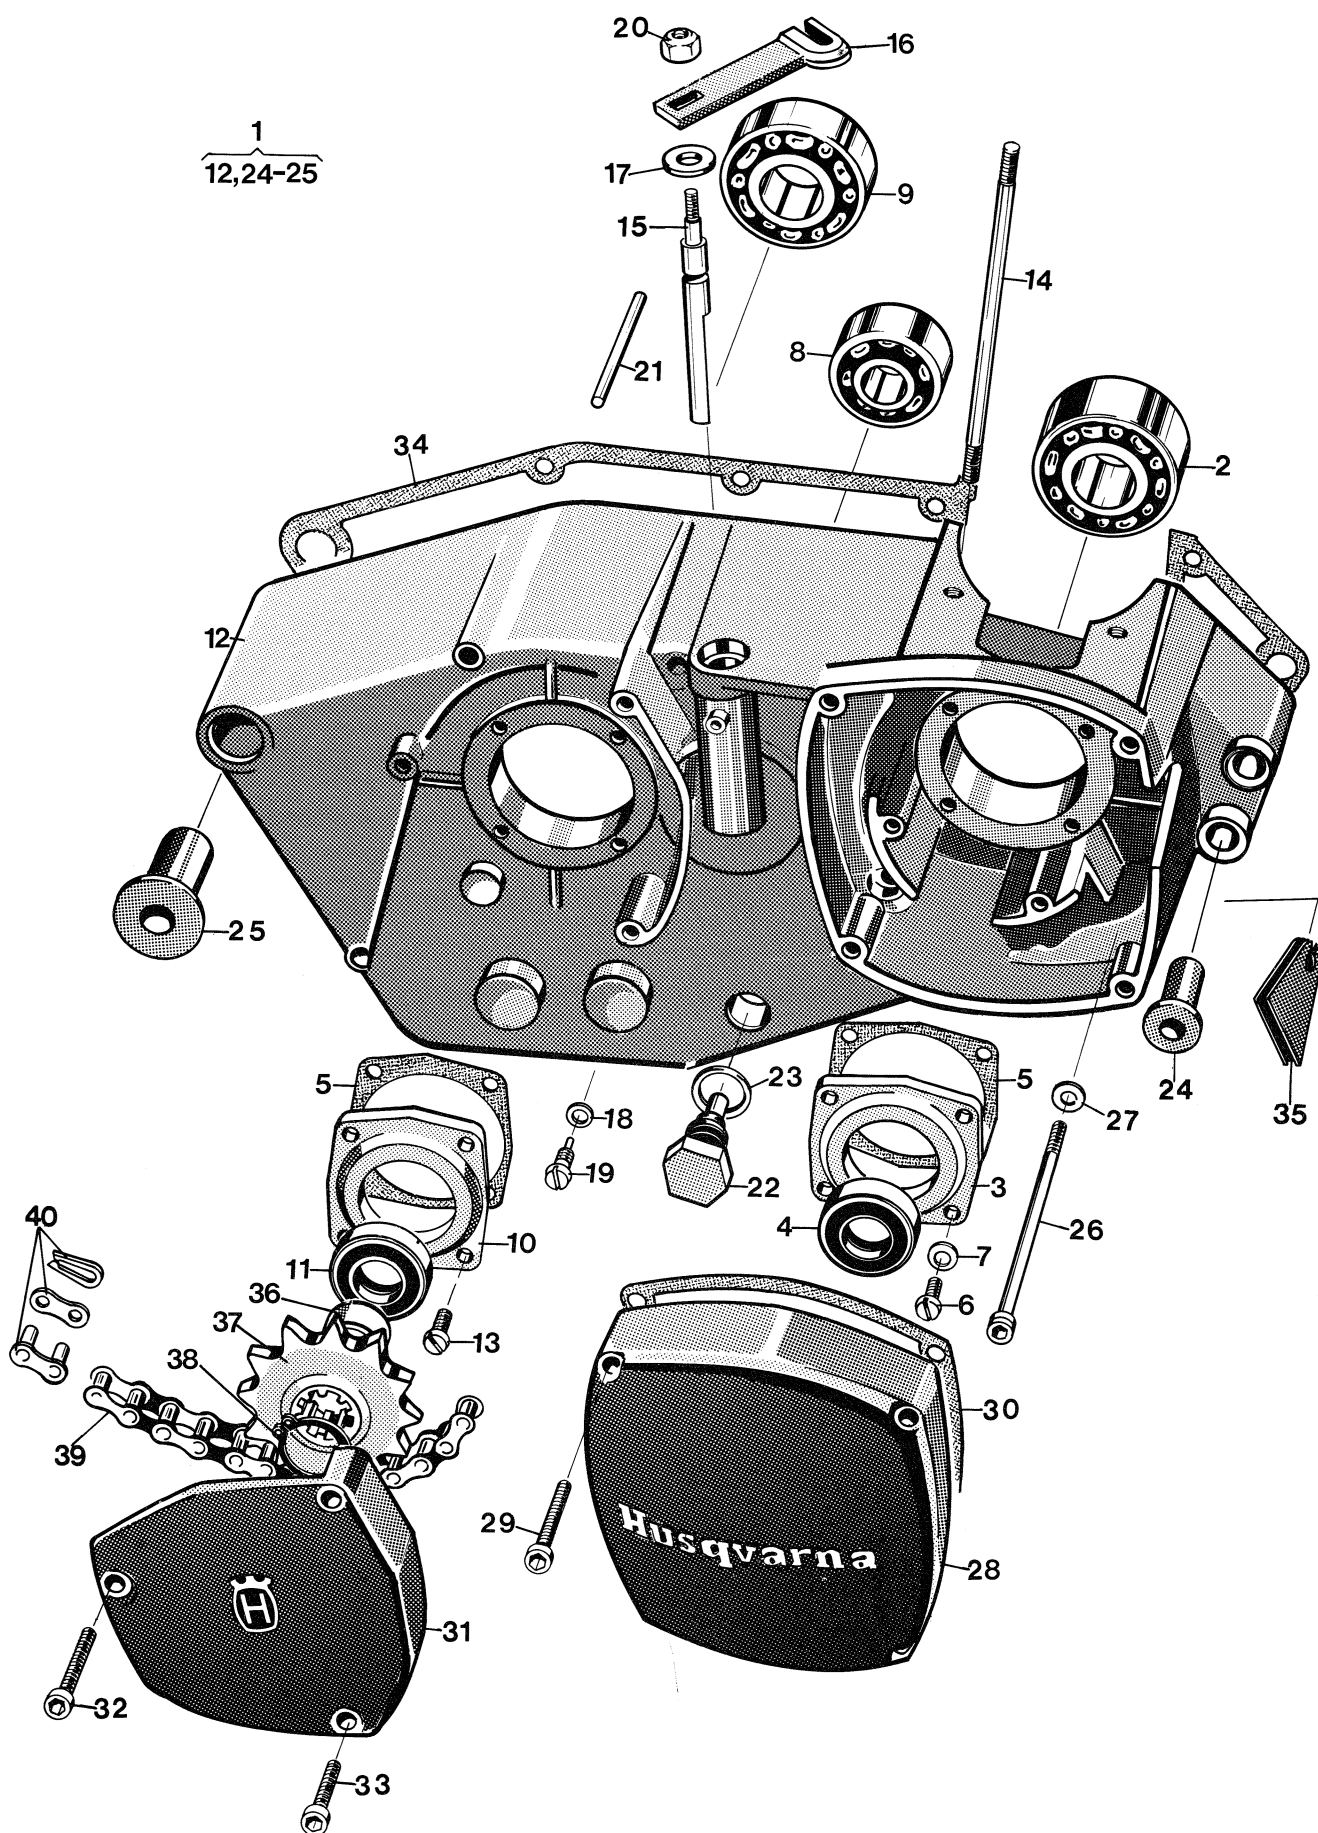


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
40	15 19 374-01	1	1													Kedjelås Master link	
Tillbehör/Accessories																	
	16 12 471-01	1	1													Kedjedrev Front sprocket z = 10	
	16 12 471-02	1	1													z = 11	
	16 12 471-03	1	1													z = 12	
	16 12 471-05	1	1													z = 14	
	16 12 471-06	1	1													z = 15	
	16 12 471-07	1	1													z = 16	
	16 12 471-08	1	1													z = 17	
	16 19 803-01	1	1													Packningssats Gasket set	

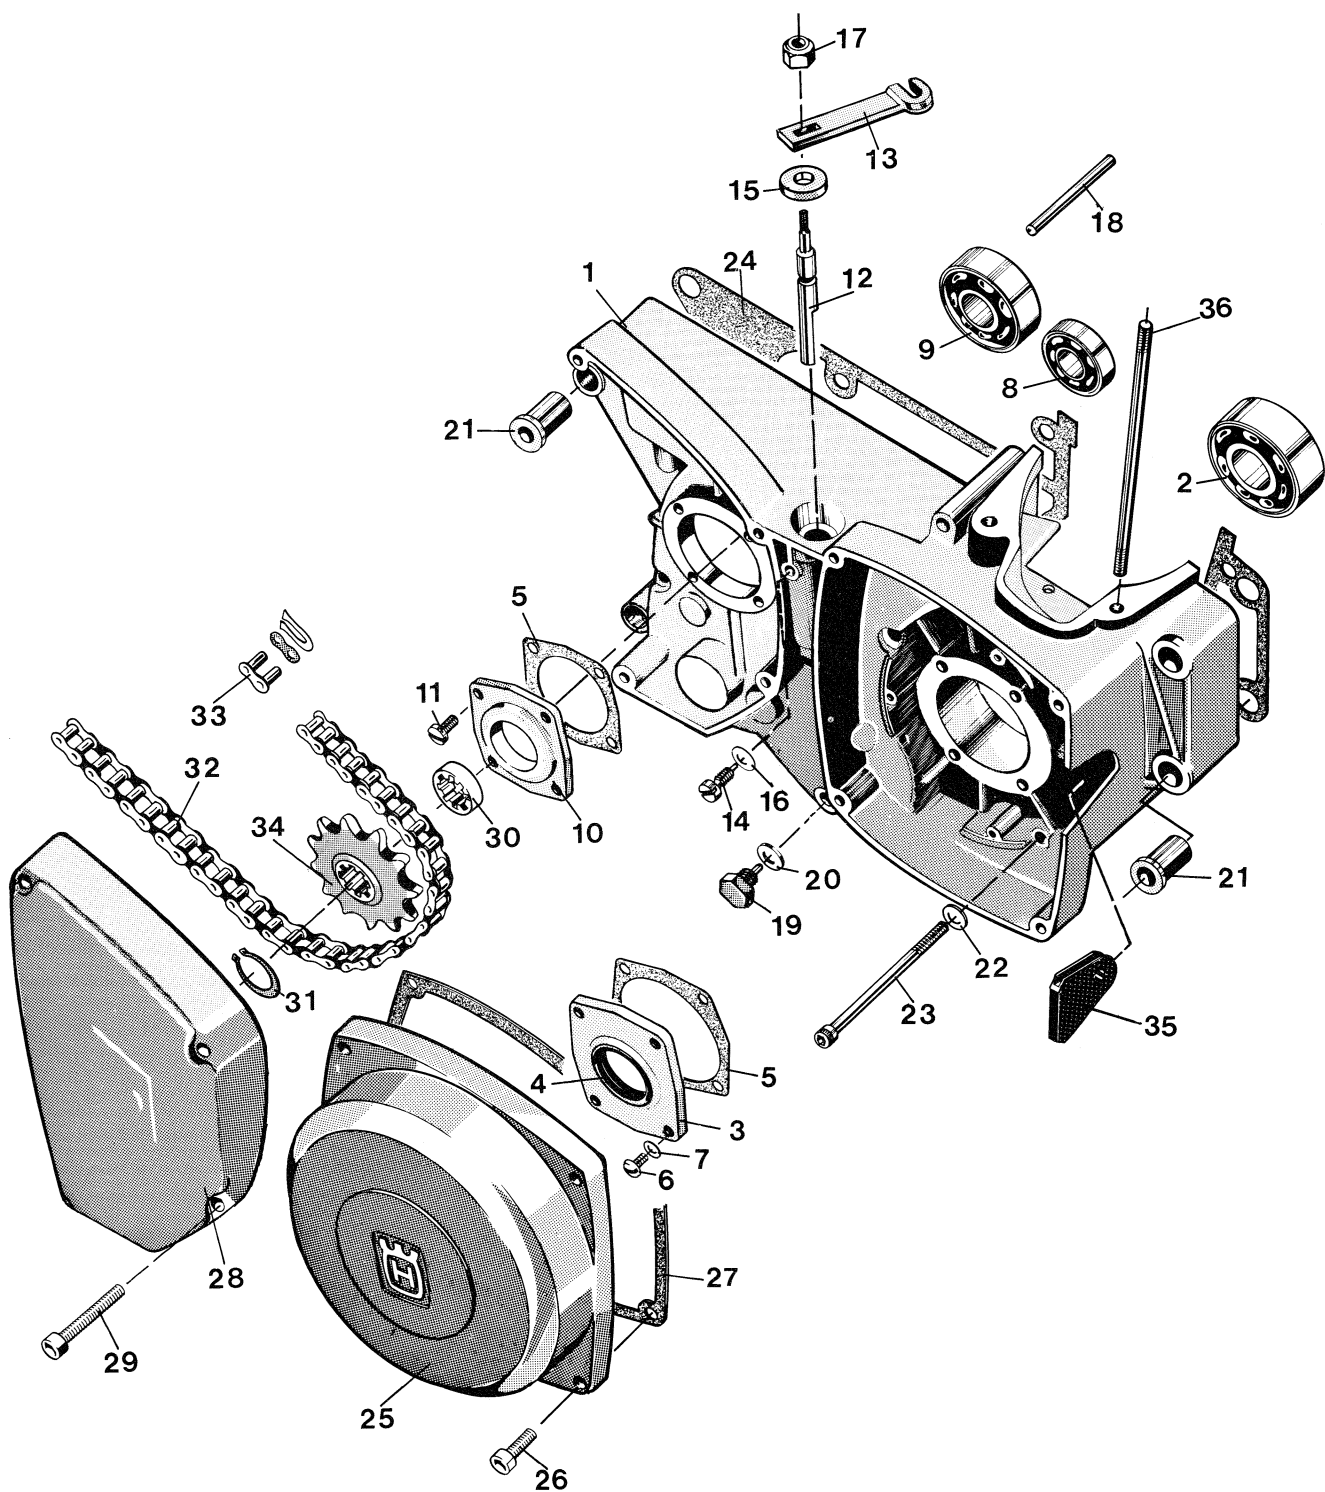


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av	
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
N	1	16 19 812-01			1	1	1	1	1	1	1	1	1				Vevhushalva, höger	
		16 11 788-01			1	1	1	1	1	1	1	1	1				Crankcase halve, right	
N	2	29 32 524-21			1	1	1	1	1	1	1	1	1				Vevhushalvor par	
	3	16 10 810-01			1	1	1	1	1	1	1	1	1				Crankcase halves pair	
N	4	29 65 444-01			1	1	1	1	1	1	1	1	1				Kullager SKF 3205/C3	
	5	12 25 358-01			2	2	2	2	2	2	2	2	2				Ball bearing	
N	6	20 62 328-12			4	4	4	4	4	4	4	4	4				Fläns	
	7	28 88 170-01			4	4	4	4	4	4	4	4	4				Flange	
N	8	29 31 200-04			1	1	1	1	1	1	1	1	1				Tätning	
	9	29 31 265-59			1	1	1	1	1	1	1	1	1				Seal	
N	10	16 11 778-01			1	1	1	1	1	1	1	1	1				Packning	
	11	21 21 328-52			4	4	4	4	4	4	4	4	4				Gasket	
N	12	16 10 774-01			1	1	1	1	1	1	1	1	1				Skruv M5x14	
	13	16 11 171-01			1	1	1	1	1	1	1	1	1				Screw	
N	14	12 25 077-01			1	1	1	1	1	1	1	1	1				Frikopplingsaxel	
	15	29 65 173-16			1	1	1	1	1	1	1	1	1				Declutching shaft	
N	16	28 16 190-01			1	1	1	1	1	1	1	1	1				Hävarm	
	17	25 80 153-01			1	1	1	1	1	1	1	1	1				Lever	
N	18	28 38 465-01			1	1	1	1	1	1	1	1	1				Stoppskruv	
	19	16 12 537-01			1	1	1	1	1	1	1	1	1				Stop screw	
N	20	12 25 025-01			1	1	1	1	1	1	1	1	1				Tätning	
	21	16 10 777-01			4	4	4	4	4	4	4	4	4				Seal	
N	22	28 16 201-01			8	8	8	8	8	8	8	8	8				Bricka 5,3x12	
	23	20 24 385-12			8	8	8	8	8	8	8	8	8				Washer	
N	24	16 11 581-01			1	1	1	1	1	1	1	1	1				Skruv M6x75	
	25	16 11 571-01			1	1	1	1	1	1	1	1	1				Screw	
N	26	20 24 372-12			4	4	4	4	4	4	4	4	4				Packning	
	27	16 11 621-01			1	1	1	1	1	1	1	1	1				Gasket	
N	28	16 11 441-01			1	1	1	1	1	1	1	1	1				Magnetplugg	
	29	20 24 376-12			3	3	3	3	3	3	3	3	3				Magneto plug	
N	30	16 12 353-01			1	1	1	1	1	1	1	1	1				Packning	
	31	28 20 025-01			1	1	1	1	1	1	1	1	1				Gasket	
N	32	15 19 373-08				1		1			1	1					Kåpa	
		15 19 373-10			1		1		1				1				Cover	
N	33	15 19 374-01			1	1	1	1	1	1	1	1	1				Skruv M6x35	
	34	16 12 693-02			.	.	.	.	.	.	.	.	.				Screw	
N		16 12 693-03			1		1										Distansring	
		16 12 693-04				1		1	1	1	1	1	1				Distance ring	
N		16 12 693-05			.	.	.	.	.	.	.	.	.				Spårring	
		16 12 693-06			.	.	.	.	.	.	.	.	.				Circlip	
N																	Drivkedja 5/8''x1/4'' 110	
																	Chain	
N																	Drivkedja 5/8''x1/4'' 114	
																	Chain	
N																	Kedjelås 5/8x1/4	
																	Master link	
N																	Kedjedrev z = 11	
																	Sprocket	
N																	Kedjedrev z = 12	
																	Sprocket	
N																	Kedjedrev z = 13	
																	Sprocket	
N																	Kedjedrev z = 14	
																	Sprocket	
N																	Kedjedrev z = 15	
																	Sprocket	

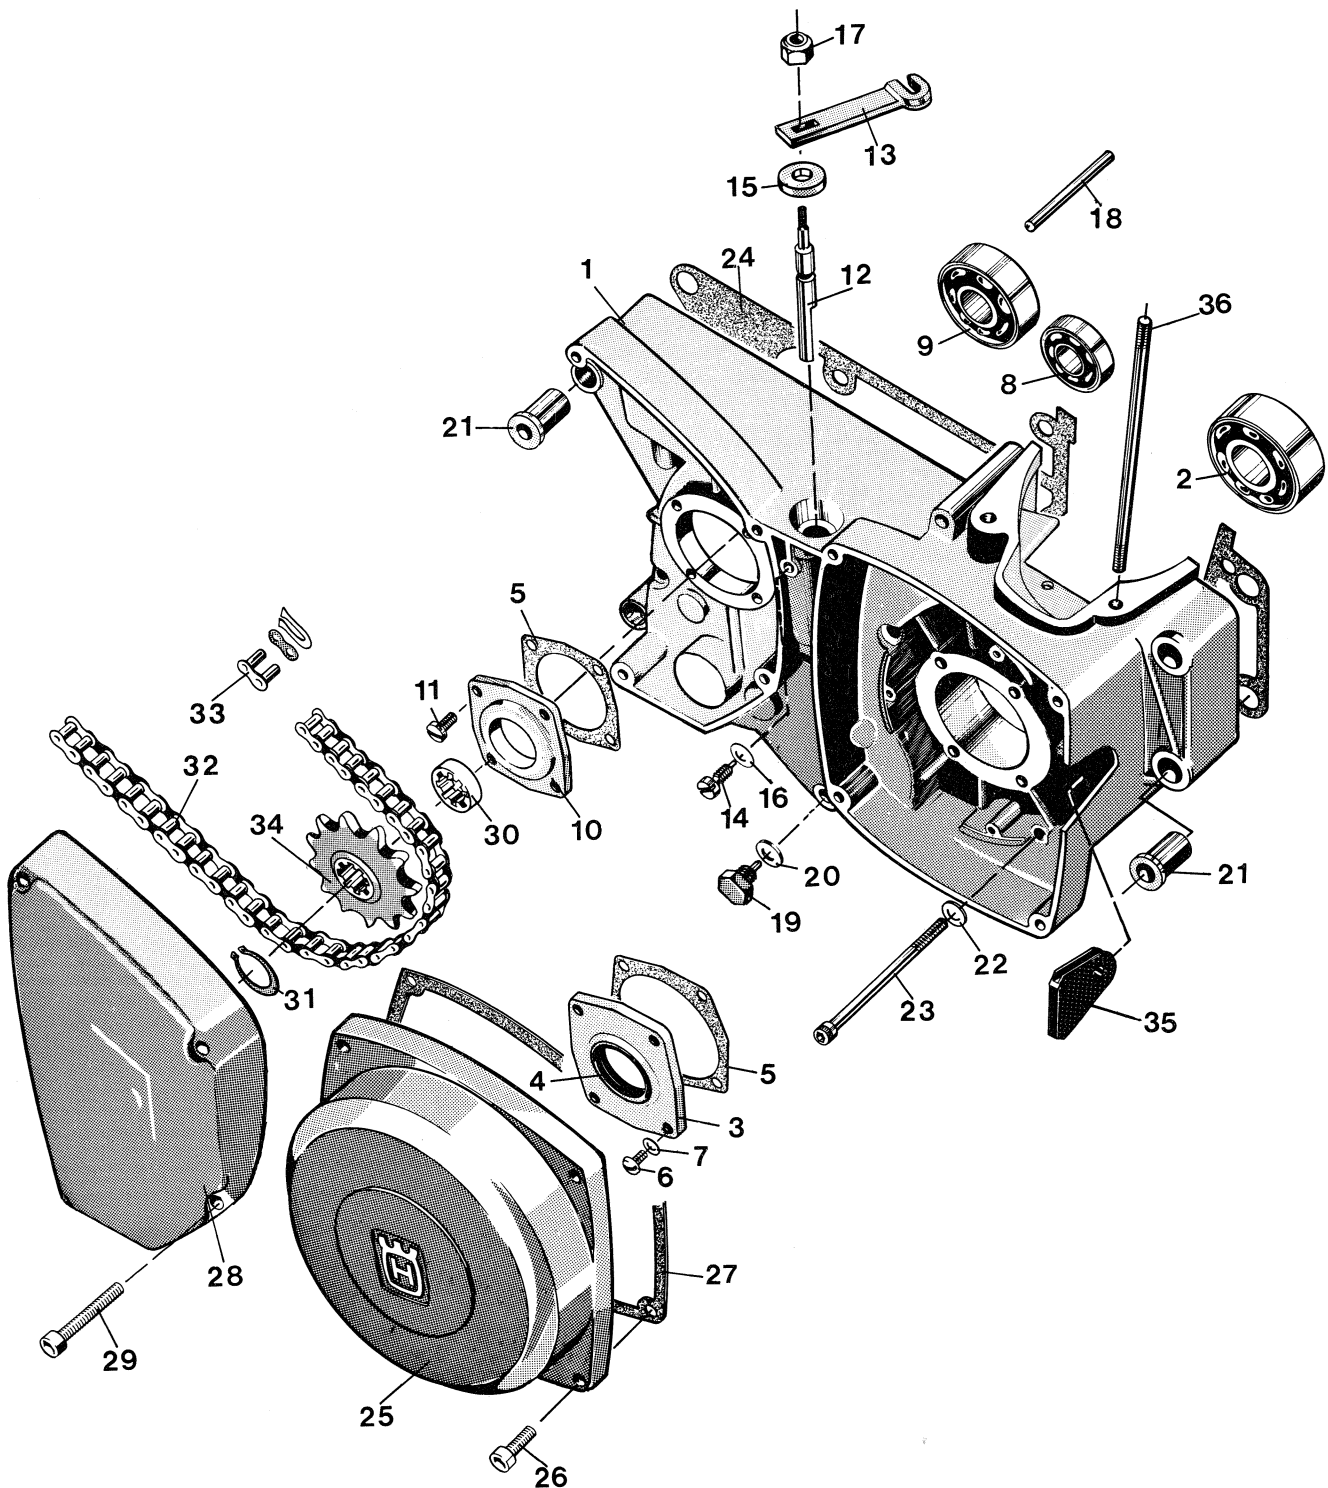


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
35	16 14 728-01			1	1	1	1	1	1	1	1	1				Kabelgenomföring Grommet	
36	16 11 422-01			4	4	4	4	4								Dragbult, cylinder Cylinder stud	
	16 11 451-01								4	4	4	4				Dragbult, cylinder Cylinder stud	

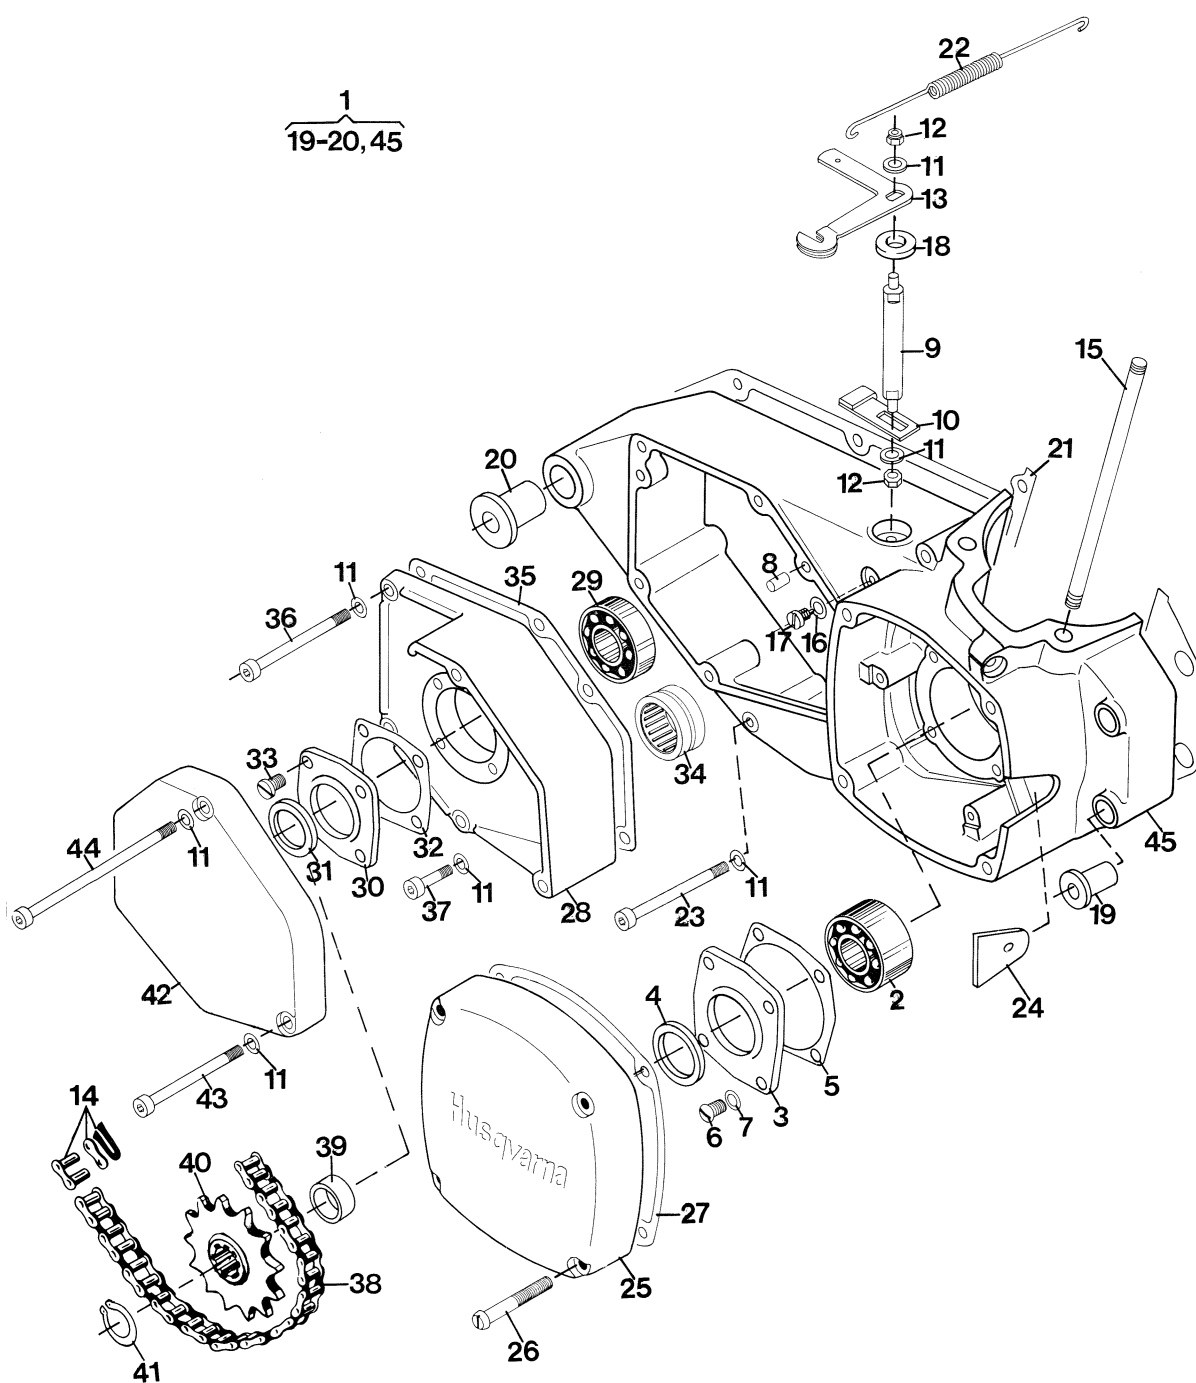


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
N N <																	

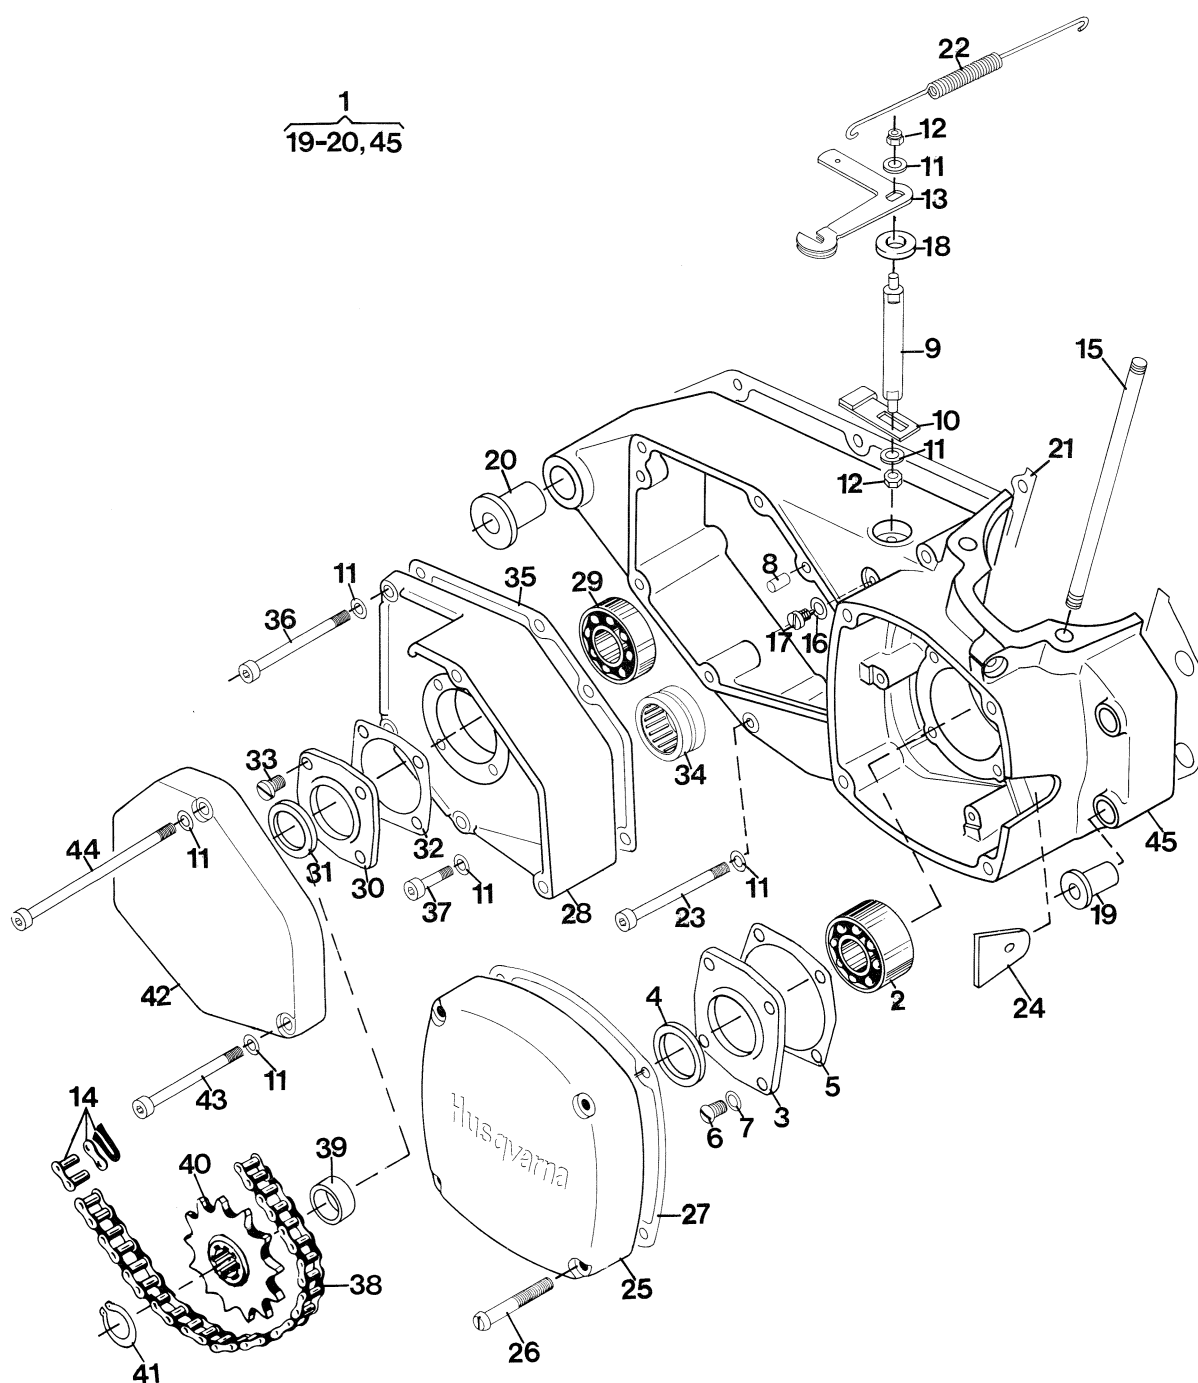


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
39	16 12 472-01												1	1		Distansring Distance ring	
40	16 12 471-03												1	1		Kedjedrev Sprocket	
41	28 20 020-01												1	1		Spårring Circlip	
42	16 11 620-01												1	1		Kedjedrevskåpa Cover, sprocket	
43	20 24 383-12												1	1		Skruv M6x65 Screw	
44	20 24 392-12												1	1		Skruv M6x110 Screw	

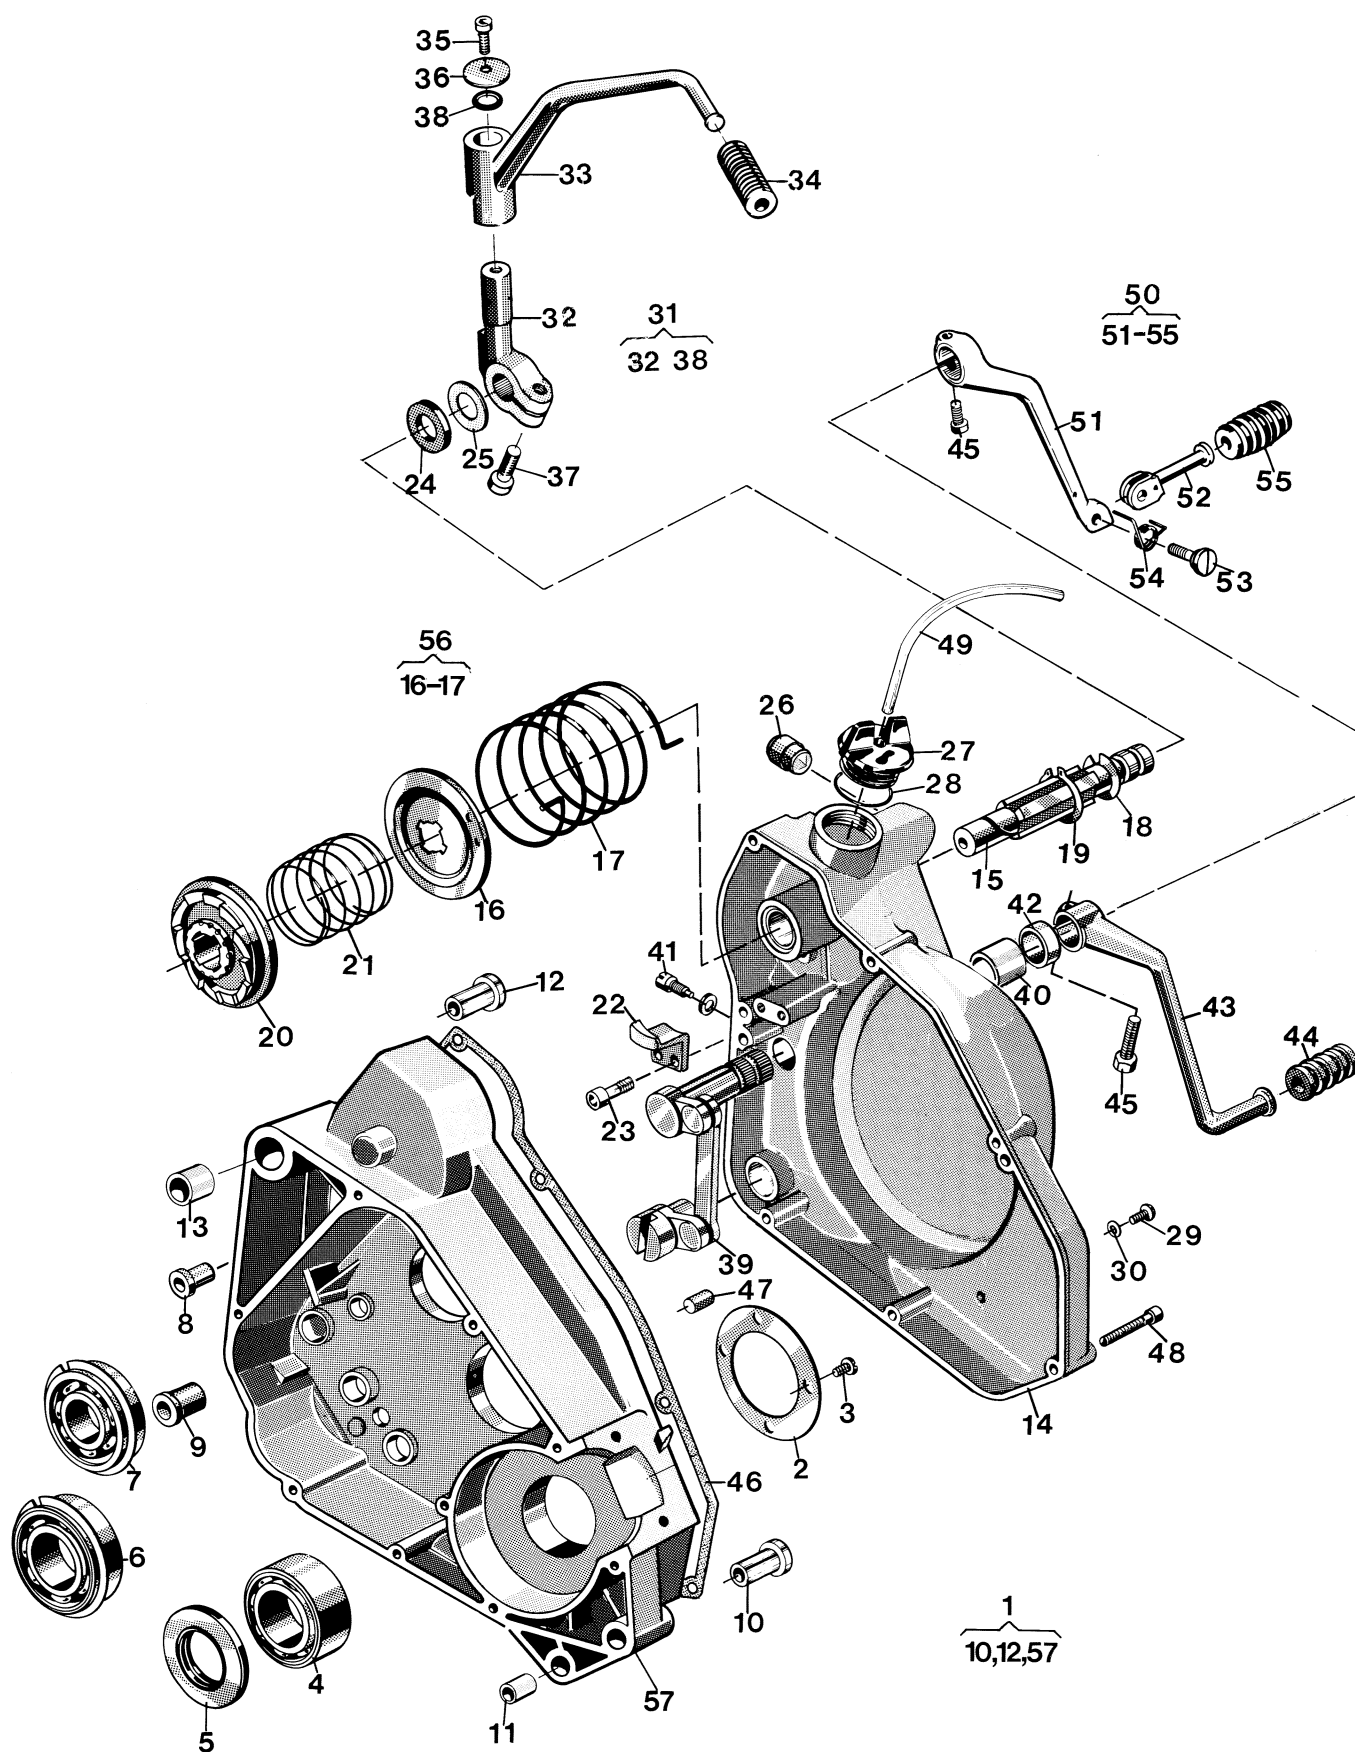


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	16 19 817-01 16 11 572-01	1	1													Vevhushalva, vänster Crankcase halve left Vevhushalvor par Crankcase halves pais	
2	16 11 566-01	1	1													Stödbricka Support washer	
3	20 06 331-59	4	4													Skruv M5 x 20 Screw	
4	29 32 520-21	1	1													Kullager SKF 3205/C3 Ball bearing	
5	29 65 443-14	1	1													Tätning Seal	
6	29 31 265-57	1	1													Kullager SKF 6205 NR/C3 Ball bearing	
7	29 31 220-57	1	1													Kullager SKF 6303 NR/C3 Ball bearing	
8	16 11 465-01	2	2													Bussning Bushing	
9	12 25 356-01	1	1													Bussning Bushing	
10	16 10 777-01	2	2													Flänsbussning Flange sleeve	
11	16 10 776-01	1	1													Styrhylsa Steering sleeve	
12	16 11 516-01	1	1													Flänsbussning Flange sleeve	
13	16 11 527-01	1	1													Styrhylsa Steering sleeve	
14	16 11 486-01	1	1													Vevhuskåpa, vänster Transmission cover	
15	12 25 434-01	1	1													Axel Shaft	
16	12 25 435-01	1	1													Medbringarskiva Driving disc	
17	12 25 437-01	1	1													Returfjäder Spring	
18	12 25 436-01	1	1													Spärring Circlip	
19	28 20 020-01	1	1													Spärring Circlip	
20	12 25 438-01	1	1													Medbringarehjul Driving wheel	
21	12 25 439-01	1	1													Fjäder Spring	
22	12 25 440-01	1	1													Lyfthake Pawl	
23	20 26 370-44	2	2													Skruv Screw	
24	12 25 442-01	1	1													Packning Gasket	
25	12 25 443-01	1	1													Stödbricka Support washer	
26	12 25 446-01	1	1													Buffert Buffer	
27	16 10 786-01	1	1													Lock Cap	
28	50 12 782-01	1	1													Packning Gasket	
29	20 62 364-11	1	1													Skruv M6 x 10 Screw	
30	16 10 823-01	1	1													Packning Gasket	
31	16 12 680-01	1	1													Kickstartpedal, kpl. Kick starter pedal compl.	
33	16 12 679-01	1	1													Kickstartpedal Kick starter pedal	
34	12 25 702-01	1	1													Pedalgummi Pedal rubber	
35	20 24 368-12	1	1													Skruv M6 x 16 Screw	
36	28 01 416-01	1	1													Bricka 6,5 x 22 Washer	
37	20 24 455-12	1	1													Skruv M8 x 30 Screw	
38	29 70 135-01	1	1													O-ring 13,3 x 2,4 O-ring	
39	16 11 535-01	1	1													Växelmekanism, kpl. Gear links compl.	




Fig.	Part Number Detaljnummer	Quantity/Antal															Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
40	16 11 474-01	1	1													Bussning Bushing		
41	12 25 077-01	1	1													Stoppskruv Screw		
42	29 65 289-07	1	1													Tätning Seal		
43	16 12 504-02	1														Fotväxelpedal Shift lever		
44	16 12 813-01	1														Pedalgummi Pedal rubber		
45	20 24 370-12	1	1													Skruv M6x20 Screw		
46	16 10 792-01	1	1													Packning Gasket		
47	28 26 571-01	2	2													Cyl. pinne Dowel pin		
48	20 24 376-12	7	7													Skruv M6x35 Screw		
49	12 25 621-10															Slang/m 4,8x8 Hose/m		
50	16 12 683-01		1													Fotväxelpedal Shift lever		
53	16 12 686-01		1													Skruv Screw		
54	16 12 687-01		1													Fjäder Spring		
55	16 12 688-01		1													Pedalgummi Pedal rubber		
56	16 12 344-01	1	1													Medbringareskiva kpl. Driving disc compl.		

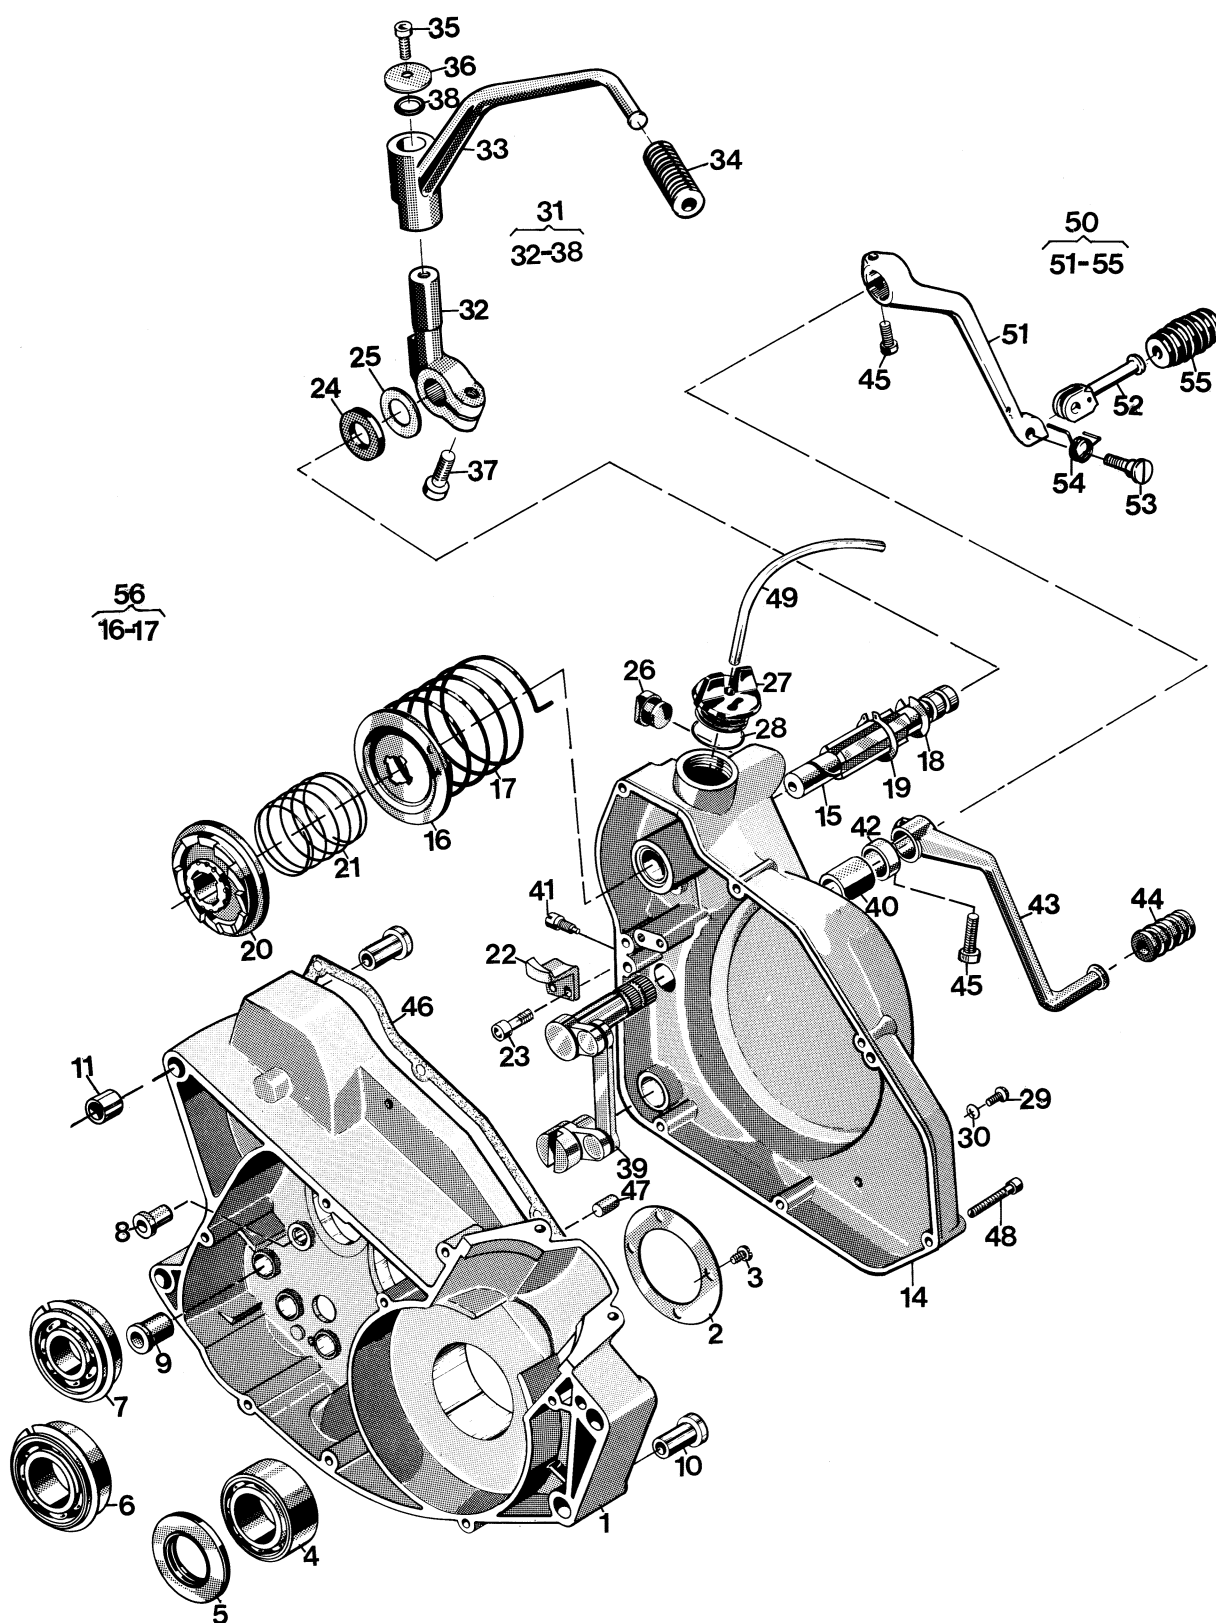


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
N 																	

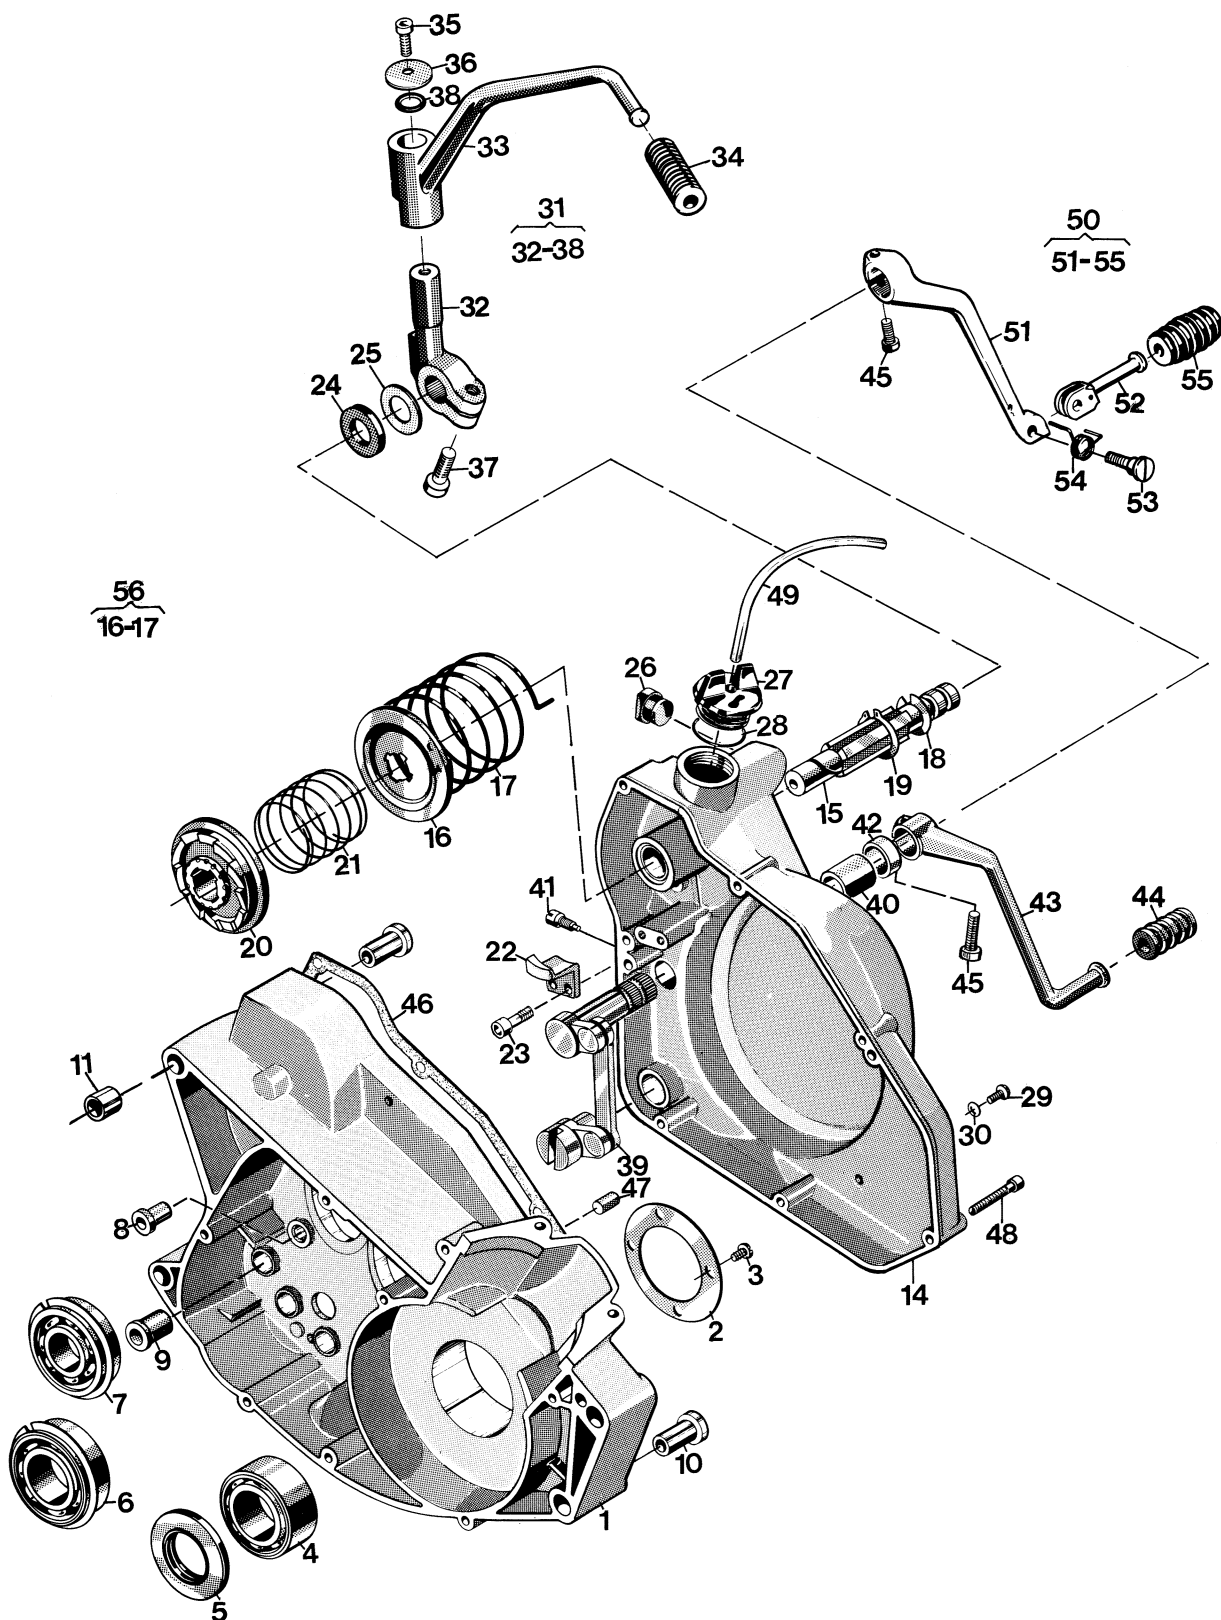


Fig.	Part Number Detaljnummer	Quantity/Antal															Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
42	29 65 289-07			1	1	1	1	1	1	1	1	1				Tätning Seal		
43	16 12 504-02			1		1			1							Fotväxelpedal Shift lever		
44	16 12 813-01			1		1			1							Pedalgummi Pedal rubber		
45	20 24 370-12			1	1	1	1	1	1	1	1	1				Skruv M6x20 Screw		
46	16 10 792-01			1	1	1	1	1	1	1	1	1				Packning Gasket		
47	28 26 571-01			2	2	2	2	2	2	2	2	2				Cyl. pinne Dowel pin		
48	20 24 376-12			7	7	7	7	7	7	7	7	7				Skruv M6x35 Screw		
49	12 25 621-10			1	1	1	1	1	1	1	1	1				Slang/m 4,8x8 Hose/m		
50	16 12 683-01				1		1	1		1	1	1				Fotväxelpedal Shift lever		
53	16 12 686-01				1		1	1		1	1	1				Skruv Screw		
54	16 12 687-01				1		1	1		1	1	1				Fjäder Spring		
55	16 12 688-01				1		1	1		1	1	1				Pedalgummi Pedal rubber		
56	16 12 344-01			1	1	1	1	1	1	1	1	1				Medbringareskiva kpl. Driving disc compl.		

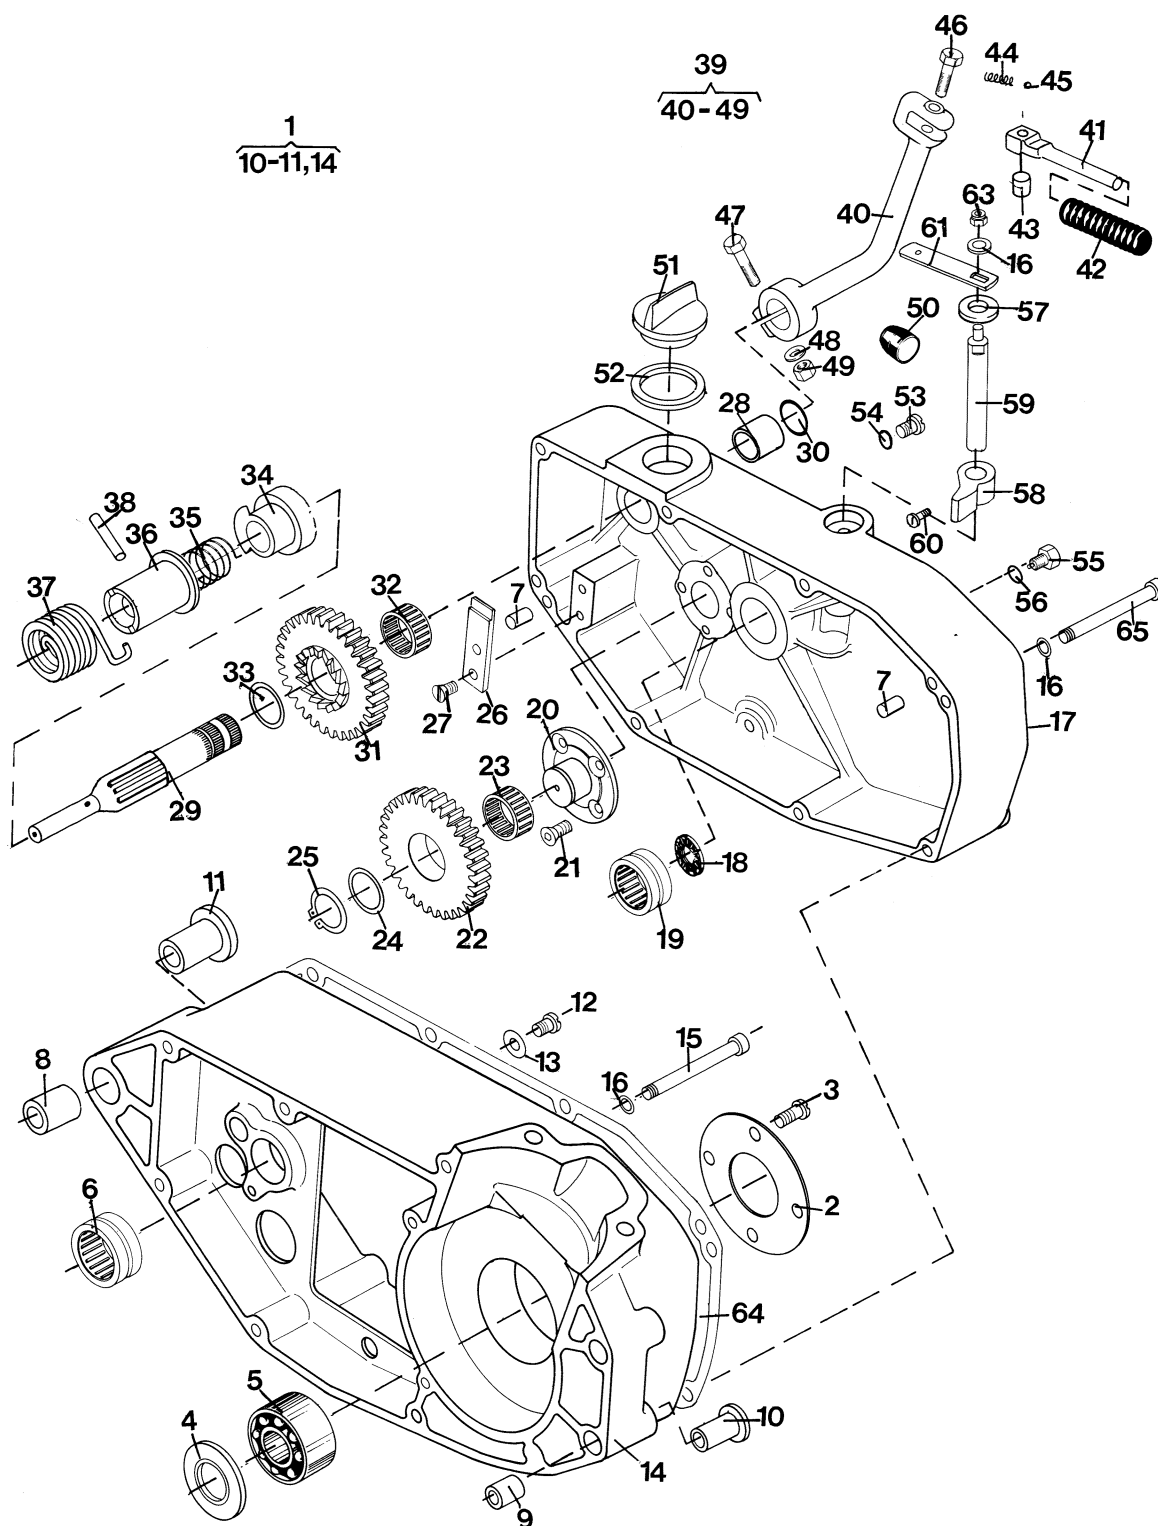


Fig.	Part Number Detaljnummer	Quantity/Antal															Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
N	1	16 19 815-01												1	1		Vevhushalva, vänster Crankcase halve left	
	2	16 11 515-01												1	1		Stöddbricka Support washer	
N	3	20 06 331-59												4	4		Skruv M5x20 Screw	
	4	29 65 549-14												1	1		Tätning Seal	
	5	29 32 524-21												1	1		Kullager SKF 3205/C3 Ball bearing	
	6	16 12 517-01												1	1		Nållager Needle bearing	
	7	28 26 571-01												2	2		Cyl. pinne Dowel pin	
	8	16 11 527-01												1	1		Styrhylsa Steering sleeve	
	9	16 10 776-01												1	1		Styrhylsa Steering sleeve	
	10	16 10 777-01												2	2		Flänsbussning Flange sleeve	
	11	16 11 747-01												1	1		Flänsbussning Flange sleeve	
	12	20 62 366-11												1	1		Skruv M6x 12 Screw	
	13	28 01 416-01												1	1		Bricka 6,5x22 Washer	
	15	20 24 380-12												2	2		Skruv M6x50 Screw	
	16	28 16 201-01												11	11		Bricka 6,4x12 Washer	
N	17	16 11 616-01												1	1		Transmissionskåpa Transmission cover	
	18	16 12 516-01												1	1		Axiallager Bearing	
	19	16 12 517-01												1	1		Nållager Needle bearing	
	20	16 12 521-01												1	1		Axel Shaft	
	21	29 98 942-45												4	4		Skruv M6x12-10,9 Screw	
	22	16 12 627-01												1	1		Mellanhjul Support gear	
	23	16 12 520-01												1	1		Nålkrans Needle bearing	
	24	16 12 523-01												1	1		Bricka Washer	
	25	28 20 020-01												1	1		Spårring Circlip	
	26	16 12 529-01												1	1		Stoppklack Pawl	
	27	20 63 368-01												2	2		Skruv Screw	
	28	16 12 530-01												1	1		Bussning, kickaxel Bushing	
	29	16 12 673-01												1	1		Kickaxel Kick shaft	
	30	29 71 230-04												1	1		O-ring O-ring	
	31	16 12 628-01												1	1		Kickdrev Kick gear	
	32	16 12 519-01												1	1		Nålkrans Needle bearing	
	33	16 12 524-01												1	1		Bricka Washer	
	34	16 12 533-01												1	1		Medbringarehjul Driving wheel	
	35	16 12 534-01												1	1		Fjäder Spring	
	36	16 12 674-01												1	1		Distanshylsa Distance sleeve	
	37	16 12 536-01												1	1		Returfjäder Spring	
	38	28 80 485-01												1	1		Fjädrande rörpinne Spring action pin	
	39	16 12 585-01												1	1		Kickstartpedal kpl. Kick starter pedal compl.	
	41	12 25 701-01												1	1		Kickstartpedal Kick starter pedal	

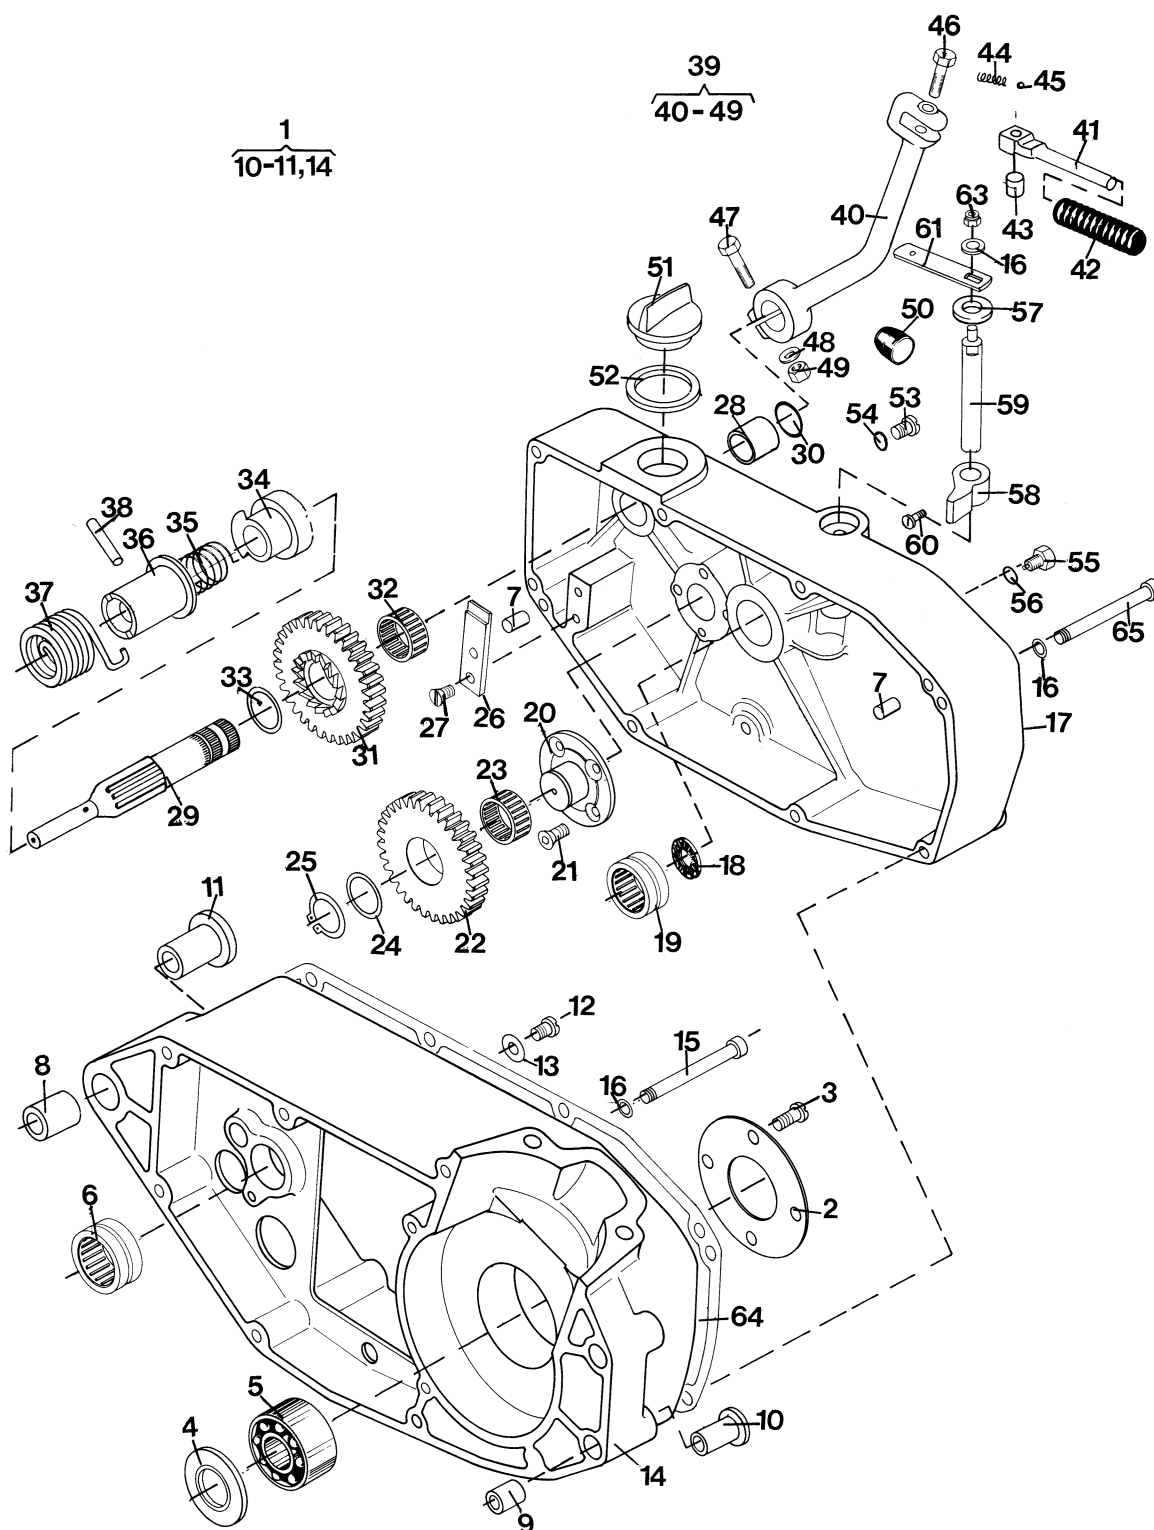


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
42	12 25 702-01												1	1		Pedal gummi Pedal rubber	
43	12 25 480-01												1	1		Distanshylsa Distance sleeve	
44	12 25 151-01												1	1		Spärrfjäder Spring	
45	29 30 220-05												1	1		Stålkula Steel ball	
46	20 06 455-11												1	1		Skruv M8 x 30 Screw	
47	20 06 457-12												1	1		Skruv M8 x 35 Screw	
48	28 04 351-01												1	1		Fjäderbricka Washer	
49	25 08 318-12												1	1		Mutter M8 Nut	
50	12 25 446-01												1	1		Buffert Buffer	
51	50 11 538-03												1	1		Tanklock Cap	
52	50 12 782-01												1	1		Tanklockspackning Gasket	
53	20 62 364-11												1	1		Skruv M6 x 10 Screw	
54	16 10 823-01												1	1		Packning Gasket	
55	16 12 537-01												1	1		Magnetplugg Magneto plug	
56	12 25 025-01												1	1		Packning Gasket	
57	29 65 175-01												1	1		Tätning Seal	
58	16 12 610-01												1	1		Bromsback Brake shoe	
59	16 12 611-01												1	1		Bromsaxel Brake shaft	
60	20 62 289-12												1	1		Skruv M4 x 10 Screw	
61	16 12 612-01												1	1		Bromshävarm Brake lever	
63	25 80 142-01												1	1		Låsmutter M6 Nut	
64	16 11 762-01												1	1		Packning Gasket	
65	20 24 382-12												8	8		Skruv M6 x 60 Screw	

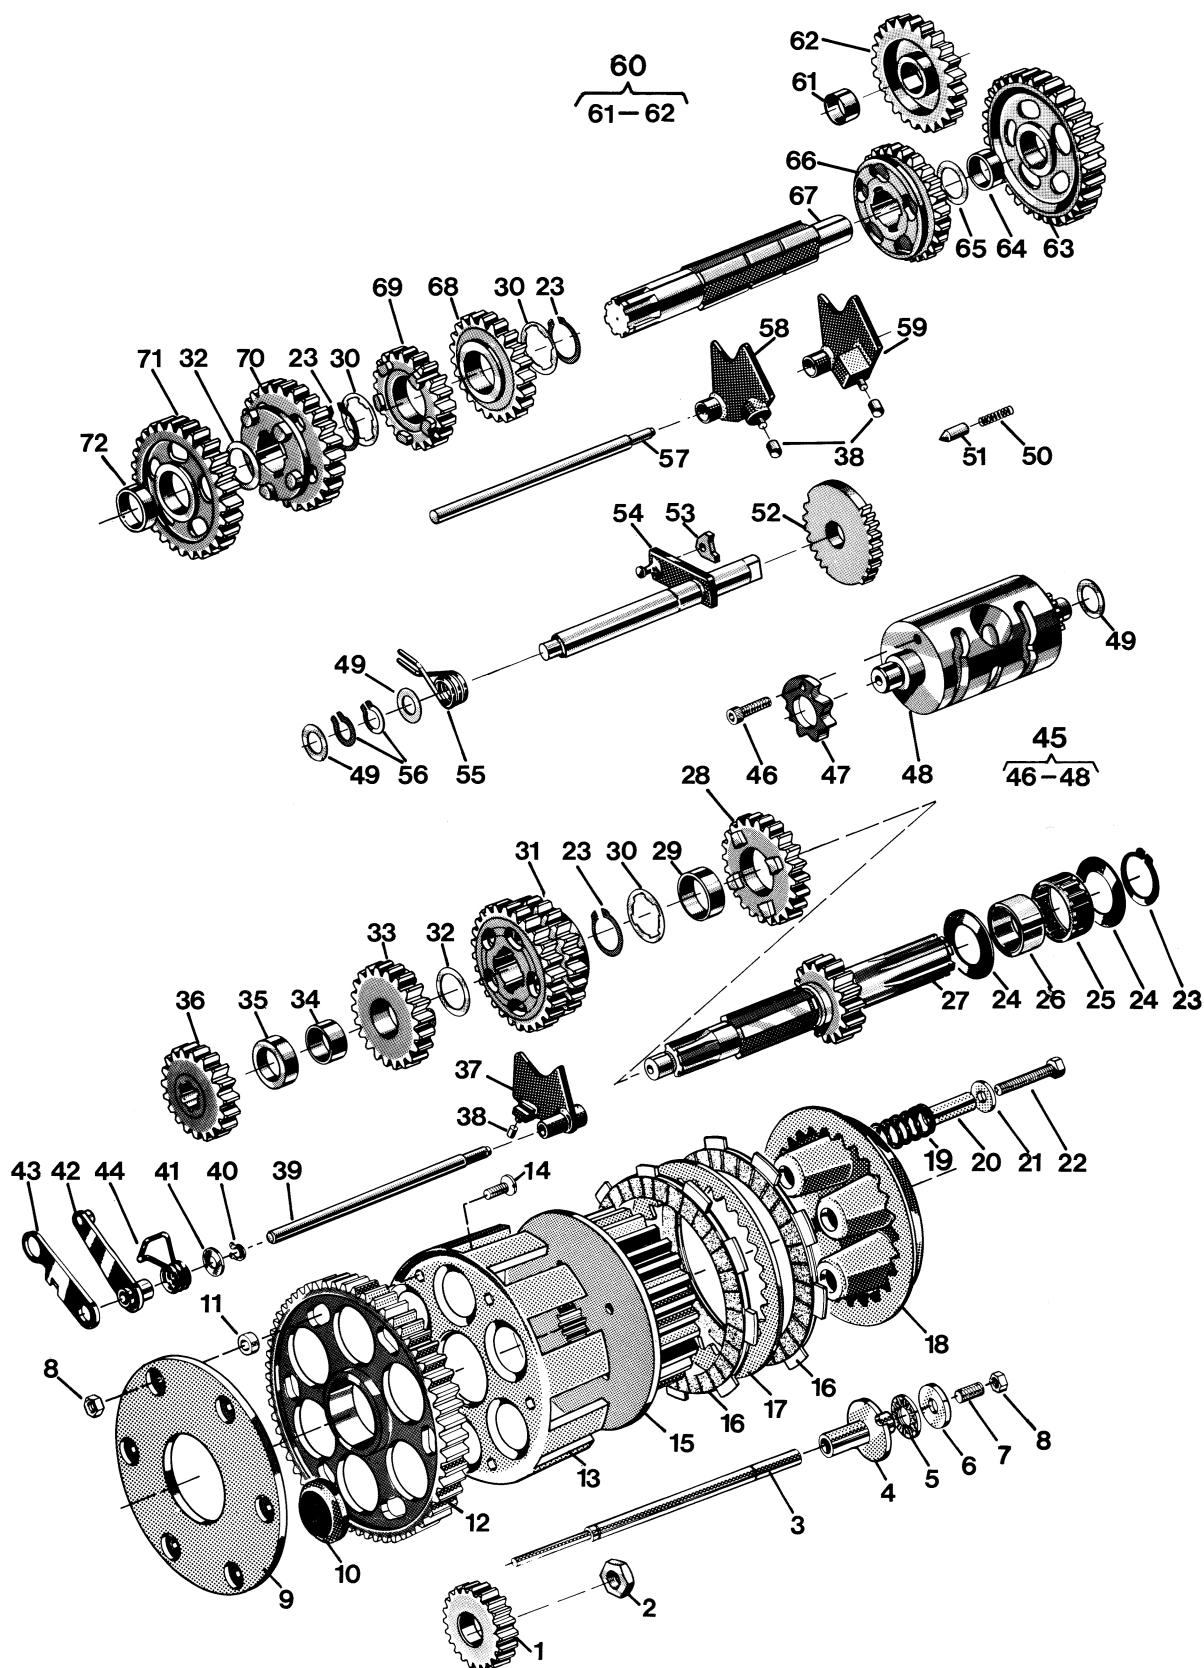


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	16 11 174-01	1														Drivhjul CR z = 18	
	16 11 182-01		1													Driving gear CR	
																Drivhjul WR z = 20	
																Driving gear WR	
2	16 11 175-01	1	1													Mutter	
																Nut	
3	16 11 160-01	1	1													Tryckstång	
																Push rod	
4	16 11 170-01	1	1													Axelhylsa	
																Shaft sleeve	
5	16 11 166-01	1	1													Axiallager	
																Axial bearing	
6	16 11 167-01	2	2													Axialbricka	
																Axial washer	
7	22 26 370-06	1	1													Skruv TSS6 x 20-10,9	
																Screw	
8	25 09 316-02	1	1													Mutter M6	
																Nut	
9	16 11 150-01	1	1													Stödplatta	
																Support plate	
10	16 11 152-01	6	6													Dämpelement	
																Damping element	
11	16 11 151-01	6	6													Distansring	
																Distance ring	
12	16 11 148-01	1														Kugghjul CR z = 70	
																Cog wheel CR	
	16 11 179-01		1													Kugghjul WR z = 68	
																Cog wheel WR	
13	16 11 149-01	1	1													Kopplingskorg	
																Clutch ring	
14	21 23 368-02	6	6													Skruv 6 x 16	
																Screw	
15	16 11 156-01	1	1													Kopplingscentrum	
																Clutch hub	
16	16 11 157-01	6	6													Lamell m belägg	
																Disc w lining	
17	16 11 158-01	5	5													Lamell	
																Disc	
18	16 11 168-01	1	1													Tryckskena	
																Pressure plate	
19	16 11 177-02	5	5													Fjäder	
																Spring	
20	16 11 169-01	5	5													Distanshylsa	
																Distance sleeve	
21	28 16 222-01	5	5													Bricka 6,7 x 16 x 1,5	
																Washer	
22	20 06 378-57	5	5													Skruv M6 x 40	
																Screw	
23	28 20 025-01	4	4													Spårring SgA25	
																Circlip	
24	16 11 155-01	2	2													Bricka	
																Washer	
25	16 11 154-01	1	1													Nållager	
																Needle bearing	
26	16 11 153-01	1	1													Innerring	
																Internal ring	
27	16 12 477-01	1														Huvudaxel CR z = 15	
																Clutch shaft CR	
	16 12 508-01		1													Huvudaxel WR z = 14	
																Clutch shaft WR	
28	16 12 404-01	1	1													Kugghjul 4:an z = 23	
																Gear wheel 4th	
29	16 12 418-01	1	1													Lagerhylsa	
																Sleeve 4th	
30	16 12 421-01	3	3													Bricka	
																Washer 4th-6th	
31	16 12 405-01	1	1													Kugghjul 5:an, 6:an z = 25, 27	
																Gear wheel 5th, 6th	
32	16 12 842-01	2	2													Bricka	
																Washer 3rd	
33	16 12 403-01	1														Kugghjul 3:an z = 21 CR	
																Gear wheel 3rd z = 21 CR	
	16 12 497-01		1													Kugghjul 3:an z = 20 WR	
																Gear wheel 3rd z = 20 WR	
34	16 12 480-01	1	1													Lagerhylsa	
																Sleeve 3rd, 2nd	
35	16 12 481-01	1	1													Distansring	
																Spacer	

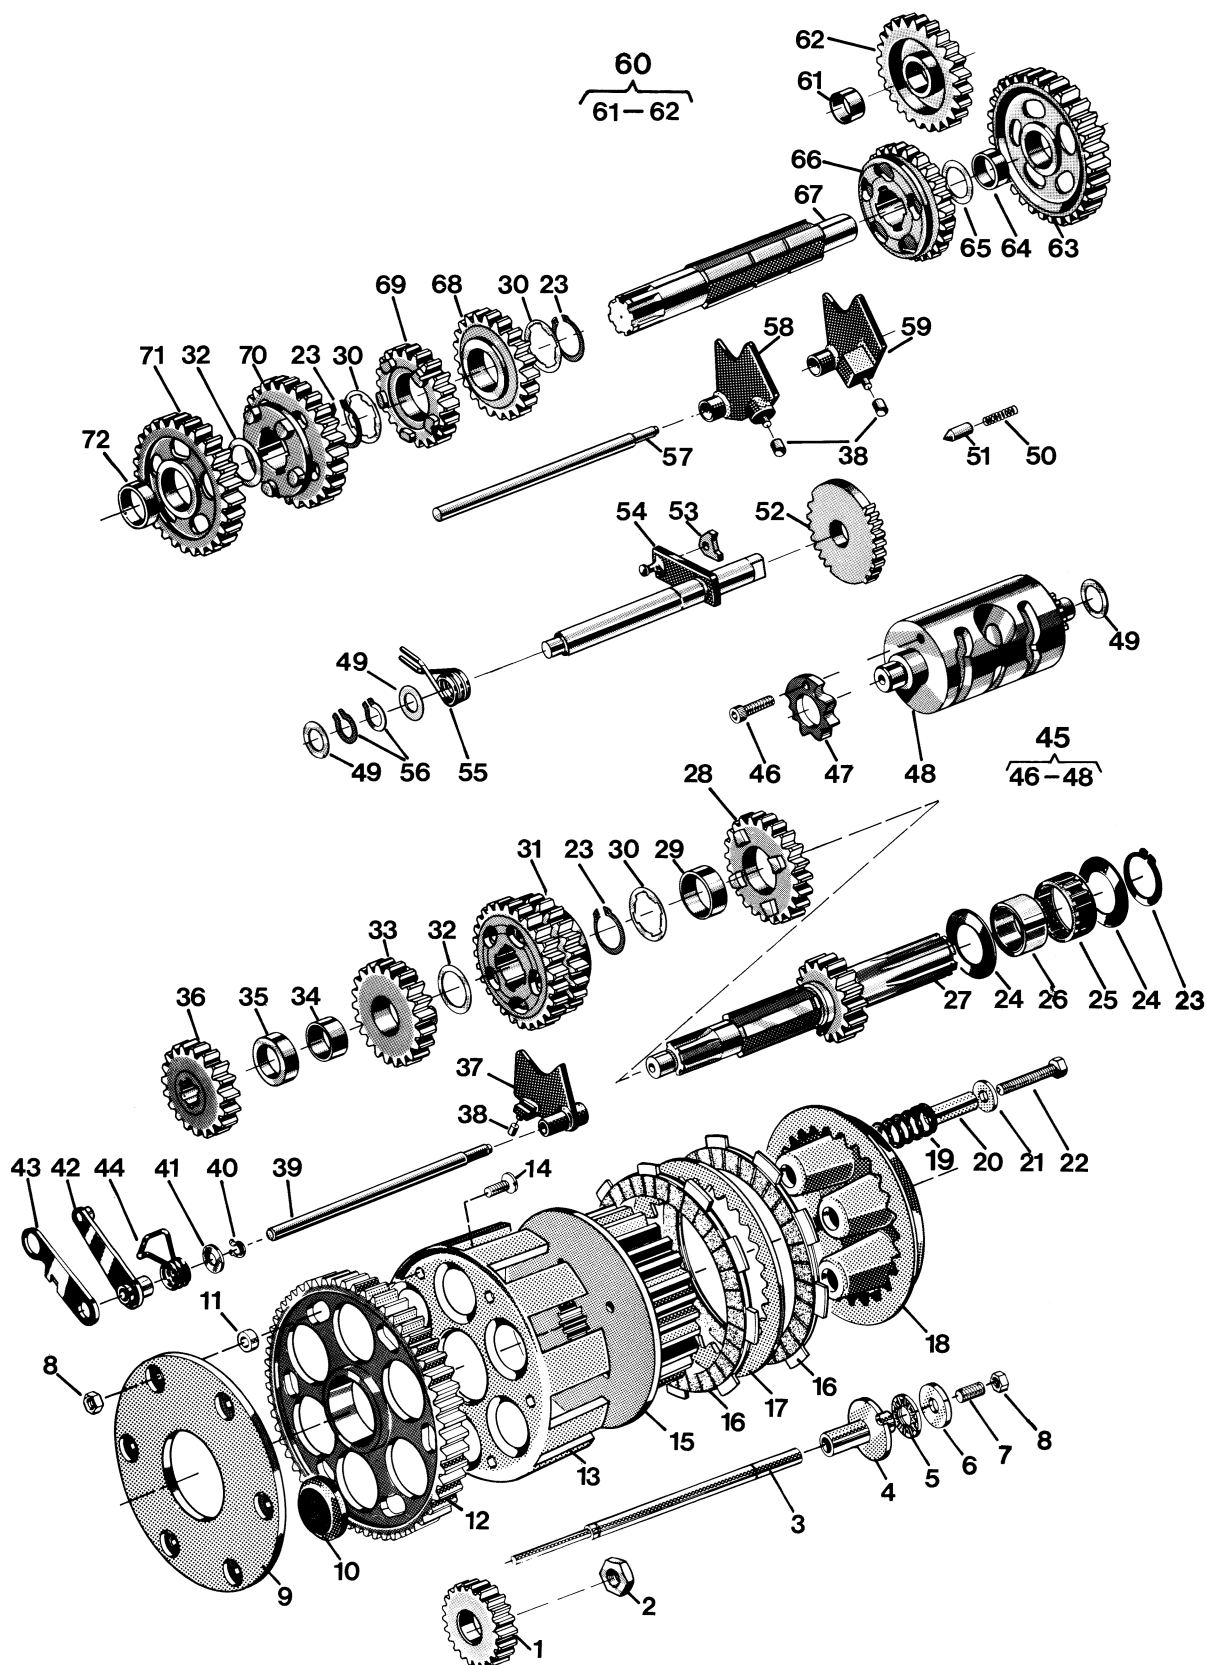


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
36	16 12 596-01	1														Kuggghjul 2:an z = 18 CR Gear wheel 2nd z = 18 CR	
	16 12 496-01		1													Kuggghjul 2:an z = 17 WR Gear wheel 2nd z = 17 WR	
37	16 12 897-01	1	1													Växelförare 3-4:an Gear striker	
38	16 12 424-01	3	3													Ledrulle Guide roller	
39	16 12 484-01	1	1													Axel Shaft	
40	28 20 010-01	1	1													Spårring SgA10 Circlip	
41	16 12 485-01	1	1													Bricka Washer	
42	16 12 489-01	1	1													Spärrarm Ratchet arm	
43	16 12 493-01	1	1													Distansarm Distance arm	
44	16 12 494-01	1	1													Fjäder Spring	
45	16 12 486-01	1	1													Kulissrulle kpl. Linkroller compl.	
46	20 24 366-39	1	1													Skruv M6x12 Screw	
47	16 12 488-01	1	1													Spärrhjul Ratchet wheel	
49	29 95 175-01	2	2													Bricka 15x24x1 Washer	
50	16 12 593-01	1	1													Fjäder Spring	
51	16 12 455-01	1	1													Spärrhylsa Ratchet sleeve	
52	16 12 870-01	1	1													Stegmatare Stepfeeder	
53	16 12 895-01	1	1													Medbringarhake Pawl	
54	16 12 600-01	1	1													Växlingsaxel Gear shaft	
55	16 12 594-01	1	1													Fjäder Spring	
56	28 20 015-01	2	2													Spårring SgA15 Circlip	
57	16 12 843-01	1	1													Axel Shaft	
58	16 12 848-01	1	1													Växelförare 2-6:an Gear striker	
59	16 12 896-01	1	1													Växelförare 1-5:an Gear striker	
60	16 12 482-01	1														Kuggghjul start CR Gear wheel start CR	
	16 12 501-01		1													Kuggghjul start WR Gear wheel start WR	
61	12 25 713-01	1	1													Bussning Sleeve	
63	16 12 406-01	1														Kuggghjul 1:an z = 31 CR Gear wheel 1st z = 31 CR	
	16 12 442-01		1													Kuggghjul 1:an z = 33 WR Gear wheel 1st z = 33 WR	
64	16 12 415-01	1	1													Lagerhylsa Sleeve 1st	
65	29 95 250-01	1	1													Bricka 17,02x23x1 Washer 1st	
66	16 12 409-01	1	1													Kuggghjul 4:an z = 24 Gear wheel 4th	
67	16 12 470-01	1	1													Hjälpxaxel Sprocket shaft	
68	16 12 410-01	1	1													Kuggghjul 5:an z = 22 Gear wheel 5th	
69	16 12 411-01	1	1													Kuggghjul 6:an z = 21 Gear wheel 6th	
70	16 12 408-01	1	1													Kuggghjul 3:an z = 26 Gear wheel 3rd	
71	16 12 597-01	1														Kuggghjul 2:an z = 28 CR Gear wheel 2nd z = 28 CR	
	16 12 453-01		1													Kuggghjul 2:an z = 29 WR Gear wheel 2nd z = 29 WR	
72	16 12 416-01	1	1													Lagerhylsa Sleeve 2nd	

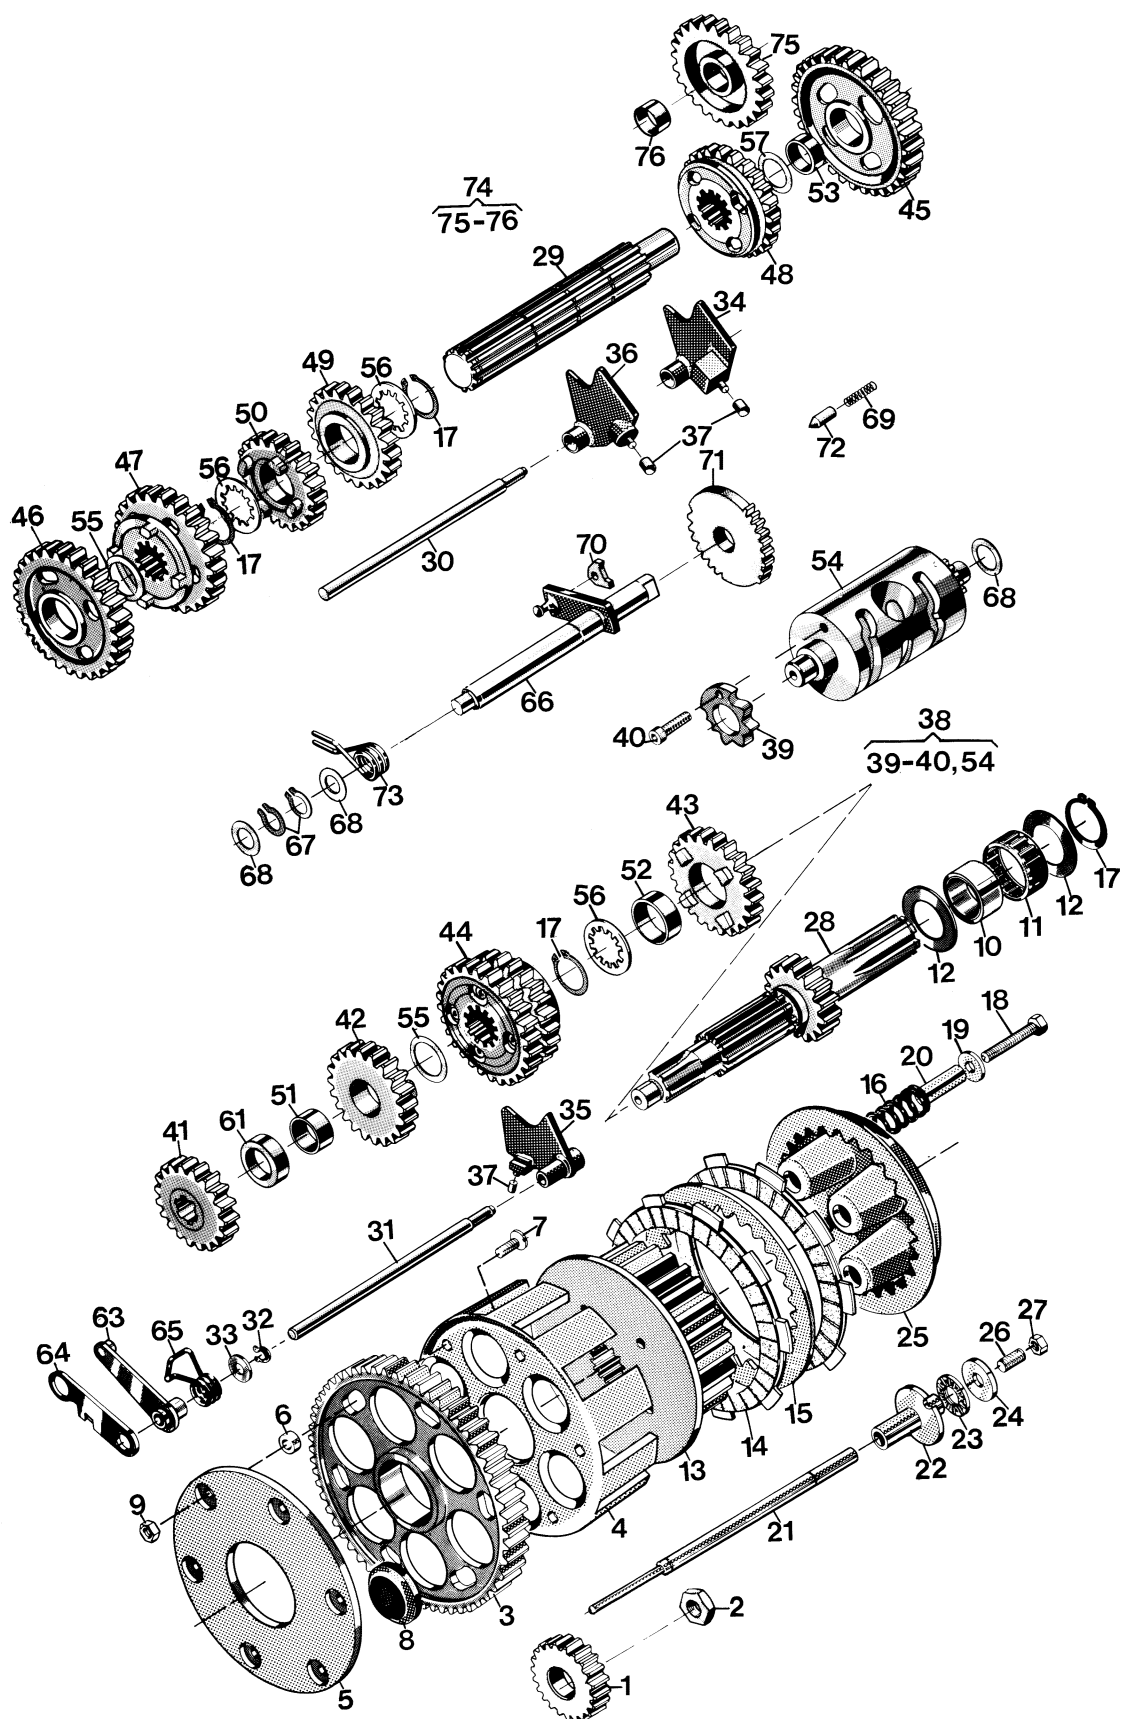


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av	
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
1	16 11 138-01 16 11 178-01			1	1	1	1	1		1	1	1	1				Drivhjul z = 29 Driving gear Drivhjul z = 30 Driving gear	
2	16 11 101-01			1	1	1	1	1		1	1	1	1				Mutter Nut	
3	16 11 148-01 16 11 179-01			1	1	1	1	1		1	1	1	1				Kugghjul z = 70 Gear wheel Kugghjul z = 68 Gear wheel	
4	16 11 149-01			1	1	1	1	1		1	1	1	1				Kopplingskorg Clutch ring	
5	16 11 150-01			1	1	1	1	1		1	1	1	1				Stödplatta Support plate	
6	16 11 151-01			6	6	6	6	6		6	6	6	6				Distans Distance	
7	21 23 368-02			6	6	6	6	6		6	6	6	6				Skruv M6 x 16 Screw	
8	16 11 152-01			6	6	6	6	6		6	6	6	6				Dämpelement Damping element	
9	25 09 316-02			6	6	6	6	6		6	6	6	6				Mutter Nut	
10	16 11 153-01			1	1	1	1	1		1	1	1	1				Innerring Internal ring	
11	16 11 154-01			1	1	1	1	1		1	1	1	1				Nållager Needle bearing	
12	16 11 155-01			2	2	2	2	2		2	2	2	2				Bricka Washer	
13	16 11 156-01			1	1	1	1	1		1	1	1	1				Kopplingscentrum Clutch hub	
14	16 11 157-01			6	6	6	6	6		6	6	6	6				Lamell m. belägg Disc w. lining	
15	16 11 158-01			5	5	5	5	5		5	5	5	5				Lamell Disc	
16	16 11 177-01 16 11 177-02									5	5	5	5				Kopplingsfjäder Clutch spring Kopplingsfjäder Clutch spring	
17	28 20 025-01			4	4	4	4	4		4	4	4	4				Spårring Circlip	
18	20 06 378-57			5	5	5	5	5		5	5	5	5				Skruv M6 x 40 Screw	
19	28 16 222-01			5	5	5	5	5		5	5	5	5				Bricka Washer	
20	16 11 169-01			5	5	5	5	5		5	5	5	5				Distanshylsa Distance sleeve	
21	16 11 160-01			1	1	1	1	1		1	1	1	1				Tryckstång Push rod	
22	16 11 170-01			1	1	1	1	1		1	1	1	1				Axelhylsa Shaft sleeve	
23	16 11 166-01			1	1	1	1	1		1	1	1	1				Axiallager Axial bearing	
24	16 11 167-01			1	1	1	1	1		1	1	1	1				Axialbricka Axial washer	
25	16 11 168-01			1	1	1	1	1		1	1	1	1				Tryckskena Pressure plate	
26	22 26 370-06			1	1	1	1	1		1	1	1	1				Skruv TSS6 x 20 Screw	
27	25 09 316-02			1	1	1	1	1		1	1	1	1				Mutter M6 Nut	
28	16 12 690-01 16 12 691-01				1		1	1		1	1	1	1				Huvudaxel z = 14 Clutch shaft Huvudaxel z = 15 Clutch shaft	
29	16 12 350-01			1	1	1	1	1		1	1	1	1				Hjälpaxel Sprocket shaft	
30	16 12 843-01			1	1	1	1	1		1	1	1	1				Axel Shaft	
31	16 12 484-01			1	1	1	1	1		1	1	1	1				Axel Shaft	
32	28 20 010-01			1	1	1	1	1		1	1	1	1				Spårring Circlip	
33	16 12 485-01			1	1	1	1	1		1	1	1	1				Bricka Washer	
34	16 12 896-01			1	1	1	1	1		1	1	1	1				Växelförare kpl. 1-5 Gear striker	
35	16 12 897-01			1	1	1	1	1		1	1	1	1				Växelförare kpl. 3-4 Gear striker	

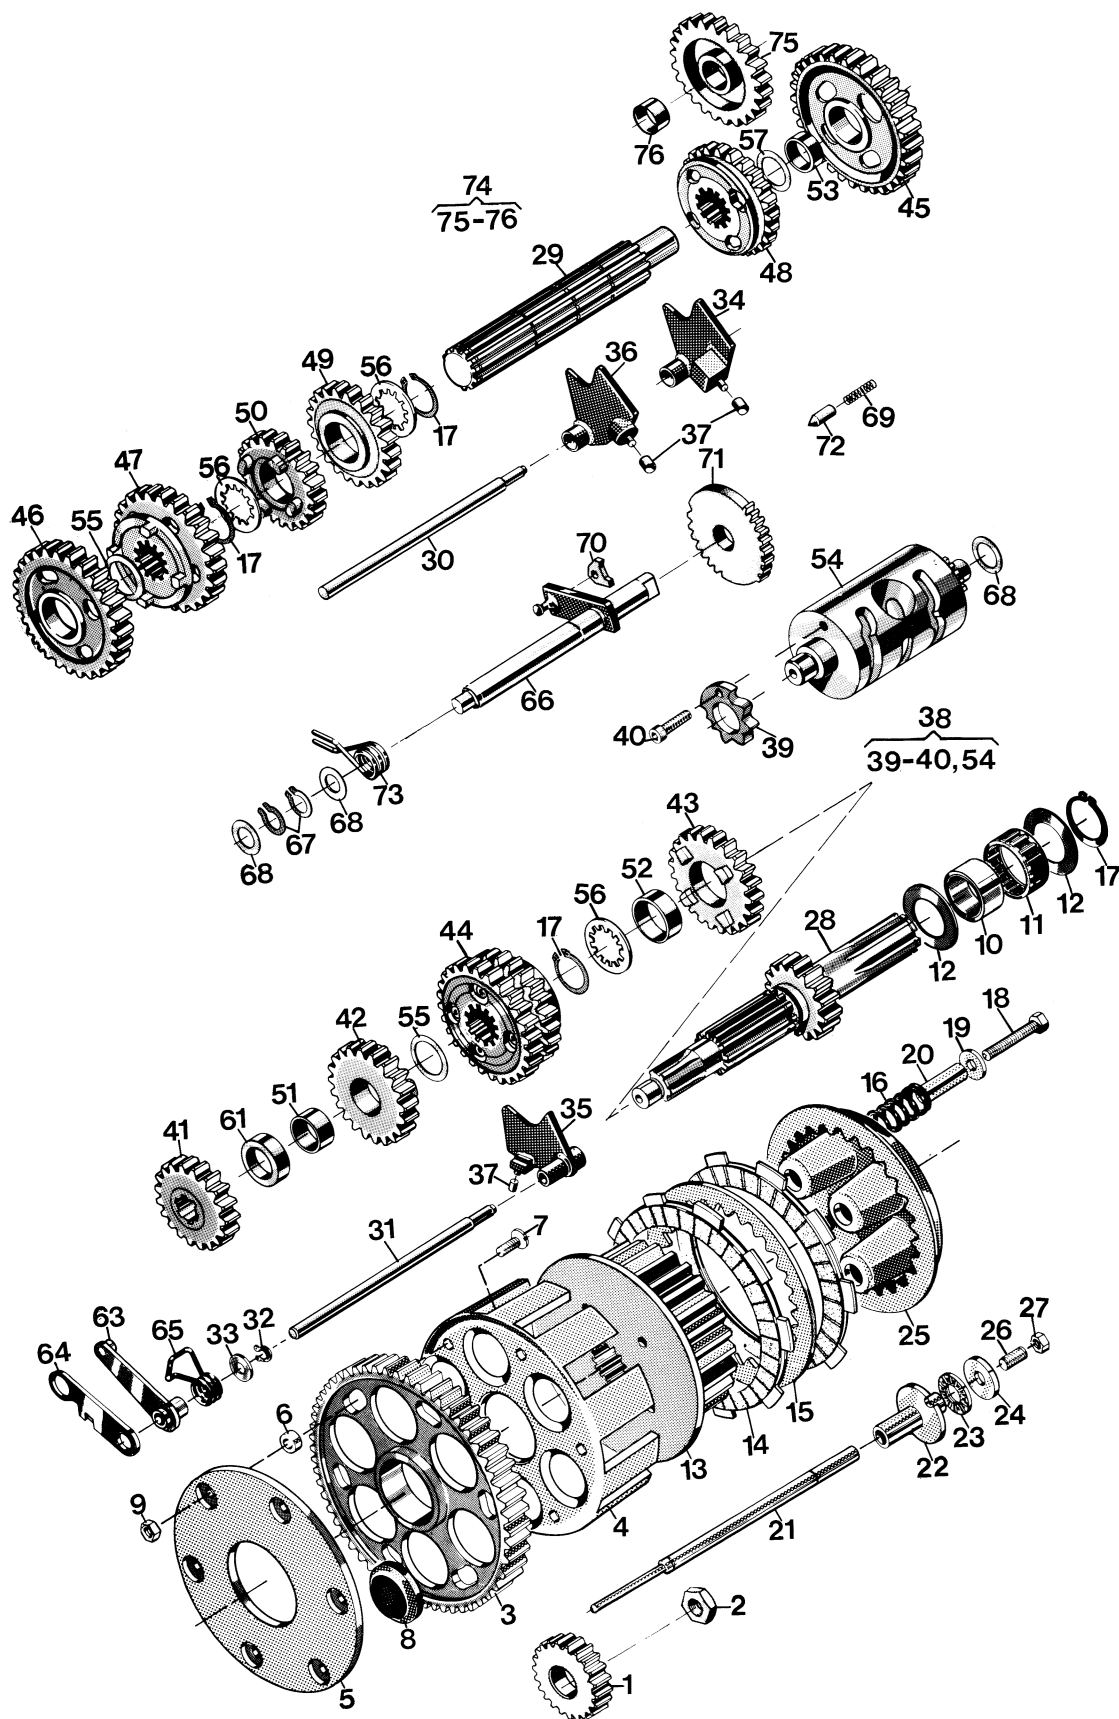


Fig.	Part Number Detalnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av	
		125		240		250			390									
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX			
	36	16 12 848-01			1	1	1	1	1	1	1	1	1				Växelförare kpl. 6-2 Gear striker	
	37	16 12 424-01			3	3	3	3	3	3	3	3	3				Ledrulle Guide roller	
	38	16 12 486-01			1	1	1	1	1	1	1	1	1				Kulissrulle kpl. Linkroller compl.	
	39	16 12 488-01			1	1	1	1	1	1	1	1	1				Spärrhjul Ratchet wheel	
	40	20 24 366-39			1	1	1	1	1	1	1	1	1				Skruv M6x12 Screw	
N	41	16 12 351-01				1			1	1	1	1	1				Kugghjul 2:an z = 17 Gear wheel	
N		16 12 352-01			1			1									Kugghjul 2:an z = 18 Gear wheel	
N	42	16 11 703-01			1			1									Kugghjul 3:an z = 21 Gear wheel	
N		16 12 349-01				1			1	1	1	1	1				Kugghjul 3:an z = 20 Gear wheel	
N	43	16 11 837-01			1	1	1	1	1	1	1	1	1				Kugghjul 4:an z = 23 Gear wheel	
N	44	16 12 355-01				1			1			1	1				Kugghjul 4:an z = 23 Gear wheel	
N		16 11 705-01			1			1		1				1			Kugghjul 5:an, 6:an, z = 25, 27 Gear wheel	
N	45	16 11 711-01			1			1									Kugghjul 1:an z = 31 Gear wheel	
N		16 12 346-01				1			1	1	1	1	1				Kugghjul 1:an z = 33 Gear wheel	
N	46	16 12 347-01				1			1	1	1	1	1				Kugghjul 2:an z = 29 Gear wheel	
N		16 12 354-01			1			1									Kugghjul 2:an z = 28 Gear wheel	
N	47	16 11 713-01			1			1									Kugghjul 3:an z = 26 Gear wheel	
N		16 12 348-01				1			1	1	1	1	1				Kugghjul 3:an z = 26 Gear wheel	
	48	16 11 714-01			1	1	1	1	1	1	1	1	1				Kugghjul 4:an z = 24 Gear wheel	
N	49	16 11 715-01			1	1	1	1	1	1	1	1	1				Kugghjul 5:an z = 22 Gear wheel	
N	50	16 11 716-01			1			1		1	1			1			Kugghjul 6:an z = 20 Gear wheel	
N		16 12 357-01				1			1			1	1				Kugghjul 6:an Gear wheel	
	51	16 12 480-01			1	1	1	1	1	1	1	1	1				Lagerhylsa Sleeve	
N	52	16 12 538-01			1	1	1	1	1	1	1	1	1				Lagerhylsa Sleeve	
	53	16 12 415-01			1	1	1	1	1	1	1	1	1				Lagerhylsa Sleeve	
	55	16 12 842-01			1	1	1	1	1	1	1	1	1				Stöbricka Washer	
N	56	16 11 717-01			4	4	4	4	4	4	4	4	4				Stöbricka Washer	
	57	29 95 250-01			1	1	1	1	1	1	1	1	1				Stöbricka Washer	
N	61	16 12 481-01			1	1	1	1	1	1	1	1	1				Distansring Spacer	
	63	16 12 489-01			1	1	1	1	1	1	1	1	1				Spärrarm Ratchet arm	
	64	16 12 493-01			1	1	1	1	1	1	1	1	1				Distansarm Distance arm	
	65	16 12 494-01			1	1	1	1	1	1	1	1	1				Fjäder Spring	
	66	16 12 600-01			1	1	1	1	1	1	1	1	1				Växlingsaxel Gear shaft	
	67	28 20 015-01			2	2	2	2	2	2	2	2	2				Spärring Circlip	
	68	29 95 175-01			3	3	3	3	3	3	3	3	3				Bricka Washer	
	69	16 12 593-01			1	1	1	1	1	1	1	1	1				Fjäder Spring	
	70	16 12 895-01			1	1	1	1	1	1	1	1	1				Medbringare Pawl	
	71	16 12 870-01			1	1	1	1	1	1	1	1	1				Stegmatare Stepfeeder	
	72	16 12 455-01			1	1	1	1	1	1	1	1	1				Spärrhylsa Ratchet sleeve	
	73	16 12 594-01			1	1	1	1	1	1	1	1	1				Fjäder Spring	

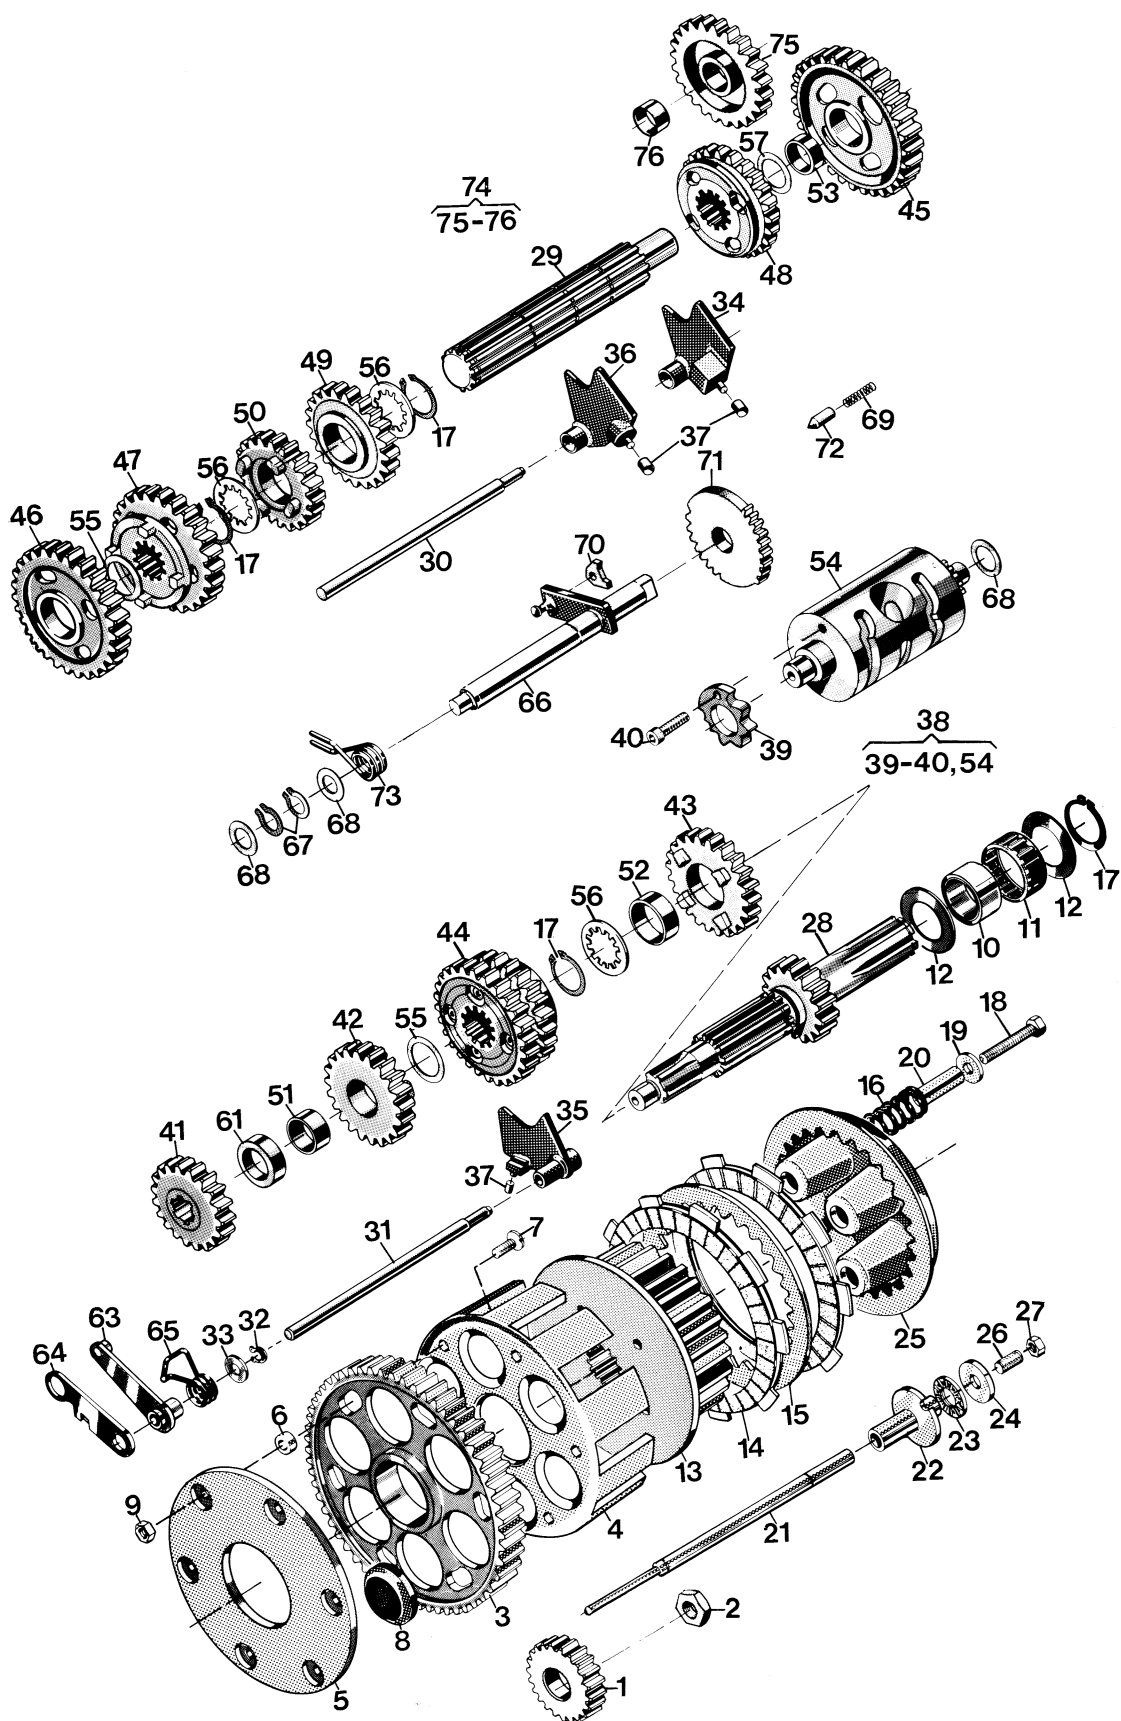


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
74	16 12 501-01				1			1	1	1	1	1				Kugghjul z = 21 Gear wheel Kugghjul z = 23 Gear wheel Bussning Bushing	
	16 12 698-01			1		1											
76	12 25 713-01			1	1	1	1	1	1	1	1	1					

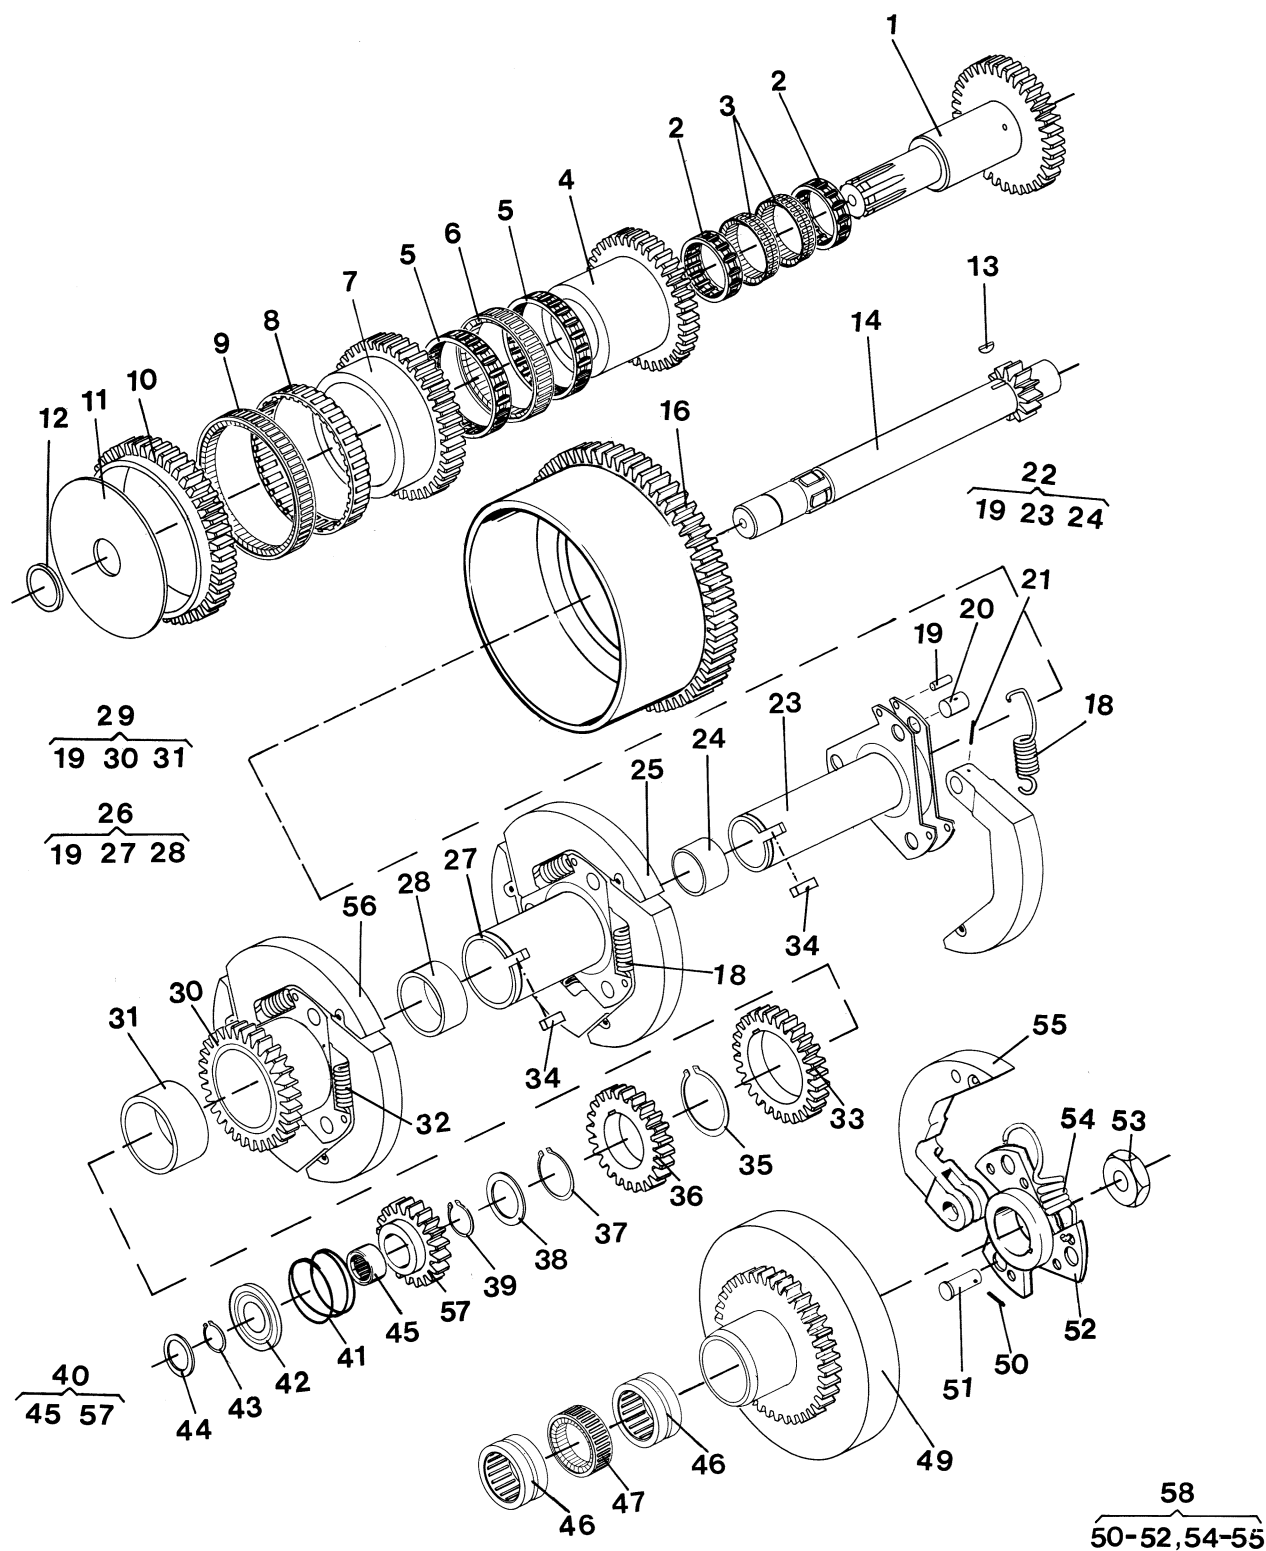


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	16 12 577-01												1	1		Hjälpxel Auxialry shaft	
2	16 12 579-01												2	2		Nållager Needle bearing	
3	16 12 546-01												2	2		Frihjul Freewheel	
4	16 12 578-01												1	1		Kugghjul Gearwheel	
5	16 12 581-01												2	2		Nållager Needle bearing	
6	16 12 547-01												1	1		Frihjul Freewheel	
7	16 12 580-01												1	1		Kugghjul Gearwheel	
8	16 12 583-01												1	1		Rullager Roller bearing	
9	16 12 548-01												1	1		Frihjul Freewheel	
10	16 12 582-01												1	1		Kugghjul Gearwheel	
11	16 12 527-01												1	1		Bricka Washer	
12	16 12 584-01												1	1		Distansring Distance ring	
13	29 00 580-01												1	1		Woodruffkil Key	
14	16 12 630-01												1	1		Huvudaxel Mainshaft	
16	16 12 727-01												1	1		Kopplingstrumma Clutch drum	
18	16 12 554-01												6	6		Kopplingsfjäder 12 kp röd Clutchspring red	
19	28 81 550-02												9	9		Fjädrande rörpinne 5x14 Spring action pin	
20	16 12 555-01												9	9		Tapp Peg	
21	28 80 200-02												9	9		Fjädrande rörpinne 2x14 Spring action pin	
22	16 12 660-01												1	1		Axel 2:an kpl. Shaft 2:nd compl.	
24	16 12 564-01												2	2		Bussning Bushing	
25	16 12 552-01												6	6		Kopplingsback Clutchshoe	
26	16 12 666-01												1	1		Axel 3:an kpl. Shaft 3:rd compl.	
28	16 12 565-01												2	2		Bussning Bushing	
29	16 12 671-01												1	1		Kugghjul 4:an kpl. Gearwheel 4:th compl.	
31	16 12 566-01												2	2		Bussning Bushing	
32	16 12 554-02												3	3		Kopplingsfjäder 8 kp grön Clutchspring green	
33	16 12 571-01												1	1		Kugghjul Gearwheel	
34	16 12 572-01												3	3		Kil Key	
35	28 20 040-02												1	1		Spårring Circlip	
36	16 12 573-01												1	1		Kugghjul 2:an Gearwheel	
37	28 20 030-02												1	1		Spårring Circlip	
38	16 12 842-01												1	1		Bricka Washer	
39	28 20 020-01												1	1		Spårring Circlip	
40	16 12 631-01												1	1		Kugghjul 1:an Gearwheel	
41	16 12 575-01												1	1		Inkopplingsfjäder Spring	
42	16 12 528-01												1	1		Bricka Washer	
43	28 20 017-02												1	1		Spårring Circlip	
44	16 12 526-01												1	1		Bricka Washer	

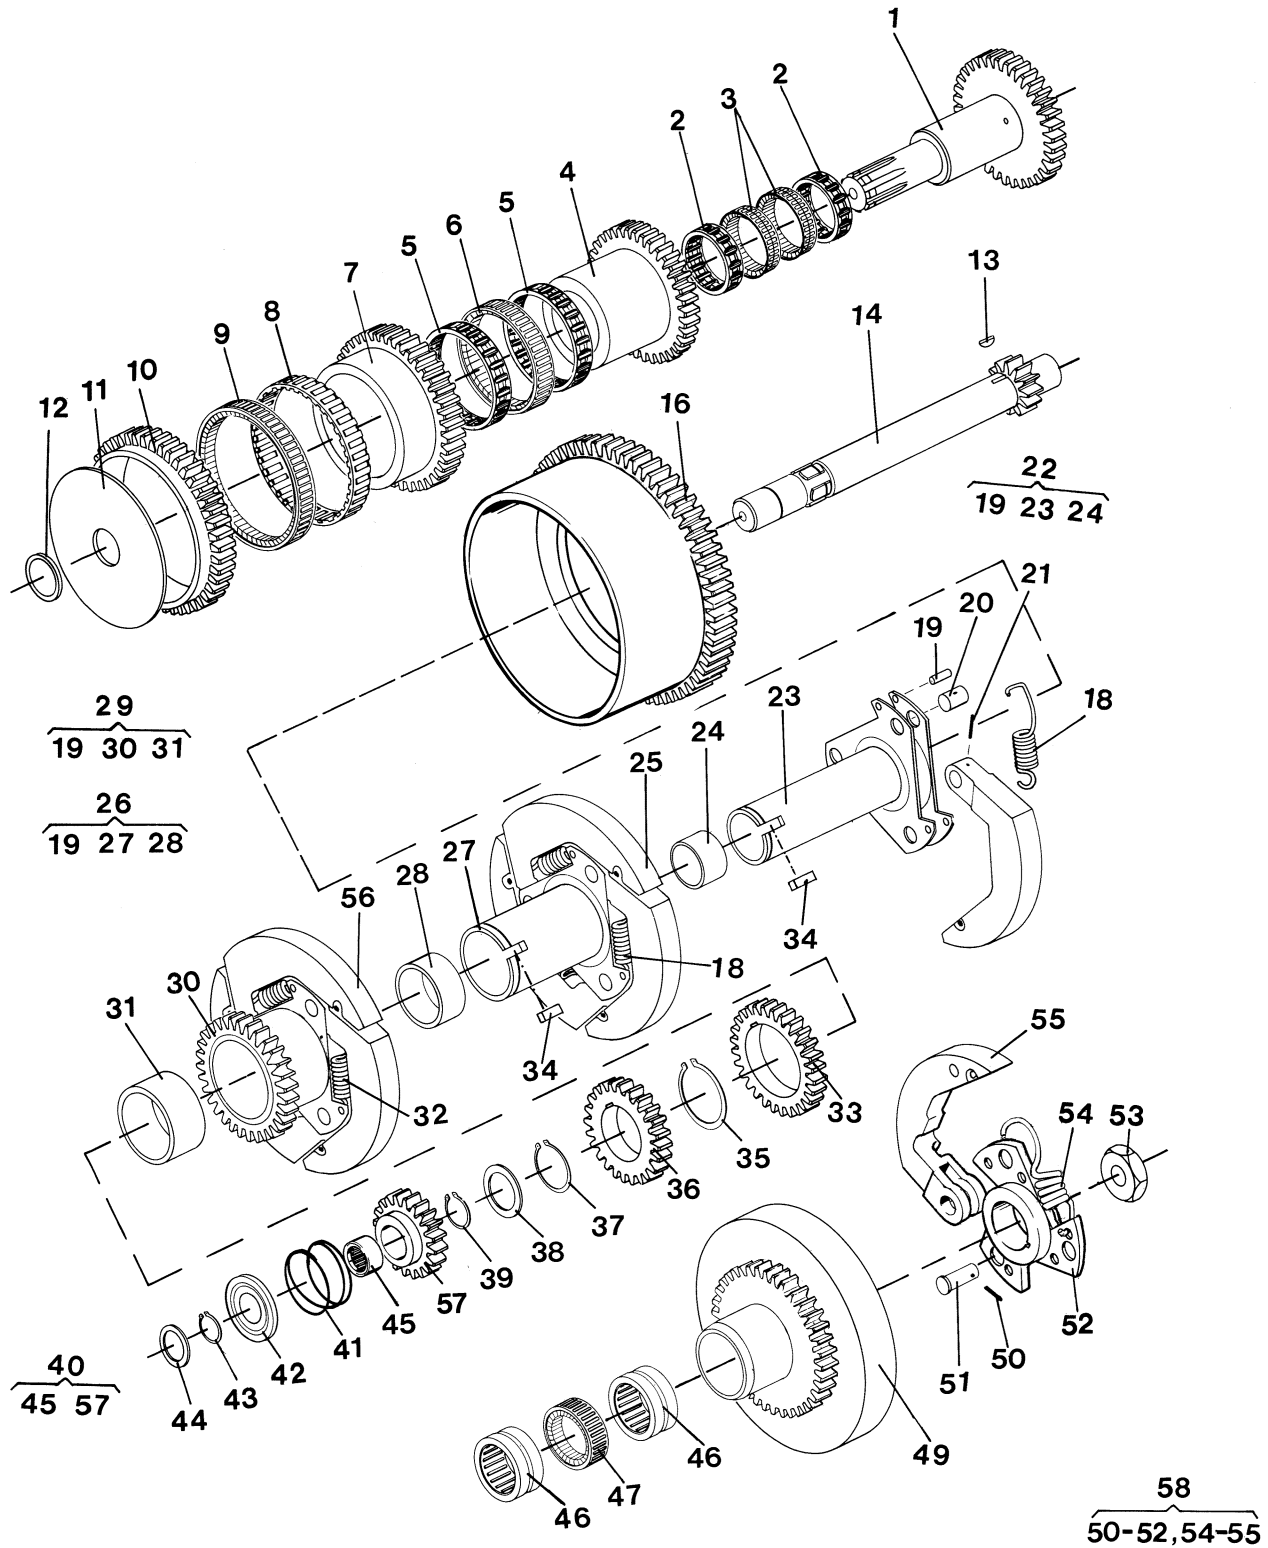


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
45	16 12 632-01												1	1		Nålkrans Needle bearing	
46	16 12 518-01												2	2		Nållager Needle bearing	
47	16 12 545-01												1	1		Frihjul Freewheel	
49	16 12 729-01												1	1		Kopplingsstrumma Clutch drum	
50	28 80 200-02												3	3		Fjädrande rörpinne 1,5x14 Spring action pin	
51	16 12 695-01												3	3		Tapp Peg	
52	16 12 656-01												1	1		Kopplingsnav Clutch hub	
53	16 11 101-01												1	1		Mutter Nut	
54	16 12 556-01												3	3		Kopplingsfjäder 41 kp Clutch spring	
55	16 12 657-01												3	3		Kopplingsback Clutchshoe	
56	16 12 617-01												3	3		Kopplingsback Clutchshoe	
58	16 12 655-01												1	1		Kopplingsnav kpl. Clutch hub compl.	
Tillbehör/Accessories																	
18	16 12 553-01															Kopplingsfjäder huvudaxel 17 kp Clutch spring main shaft	
54	16 12 556-02															Kopplingsfjäder 1:an 48 kp gul Clutch spring 1:st yellow	

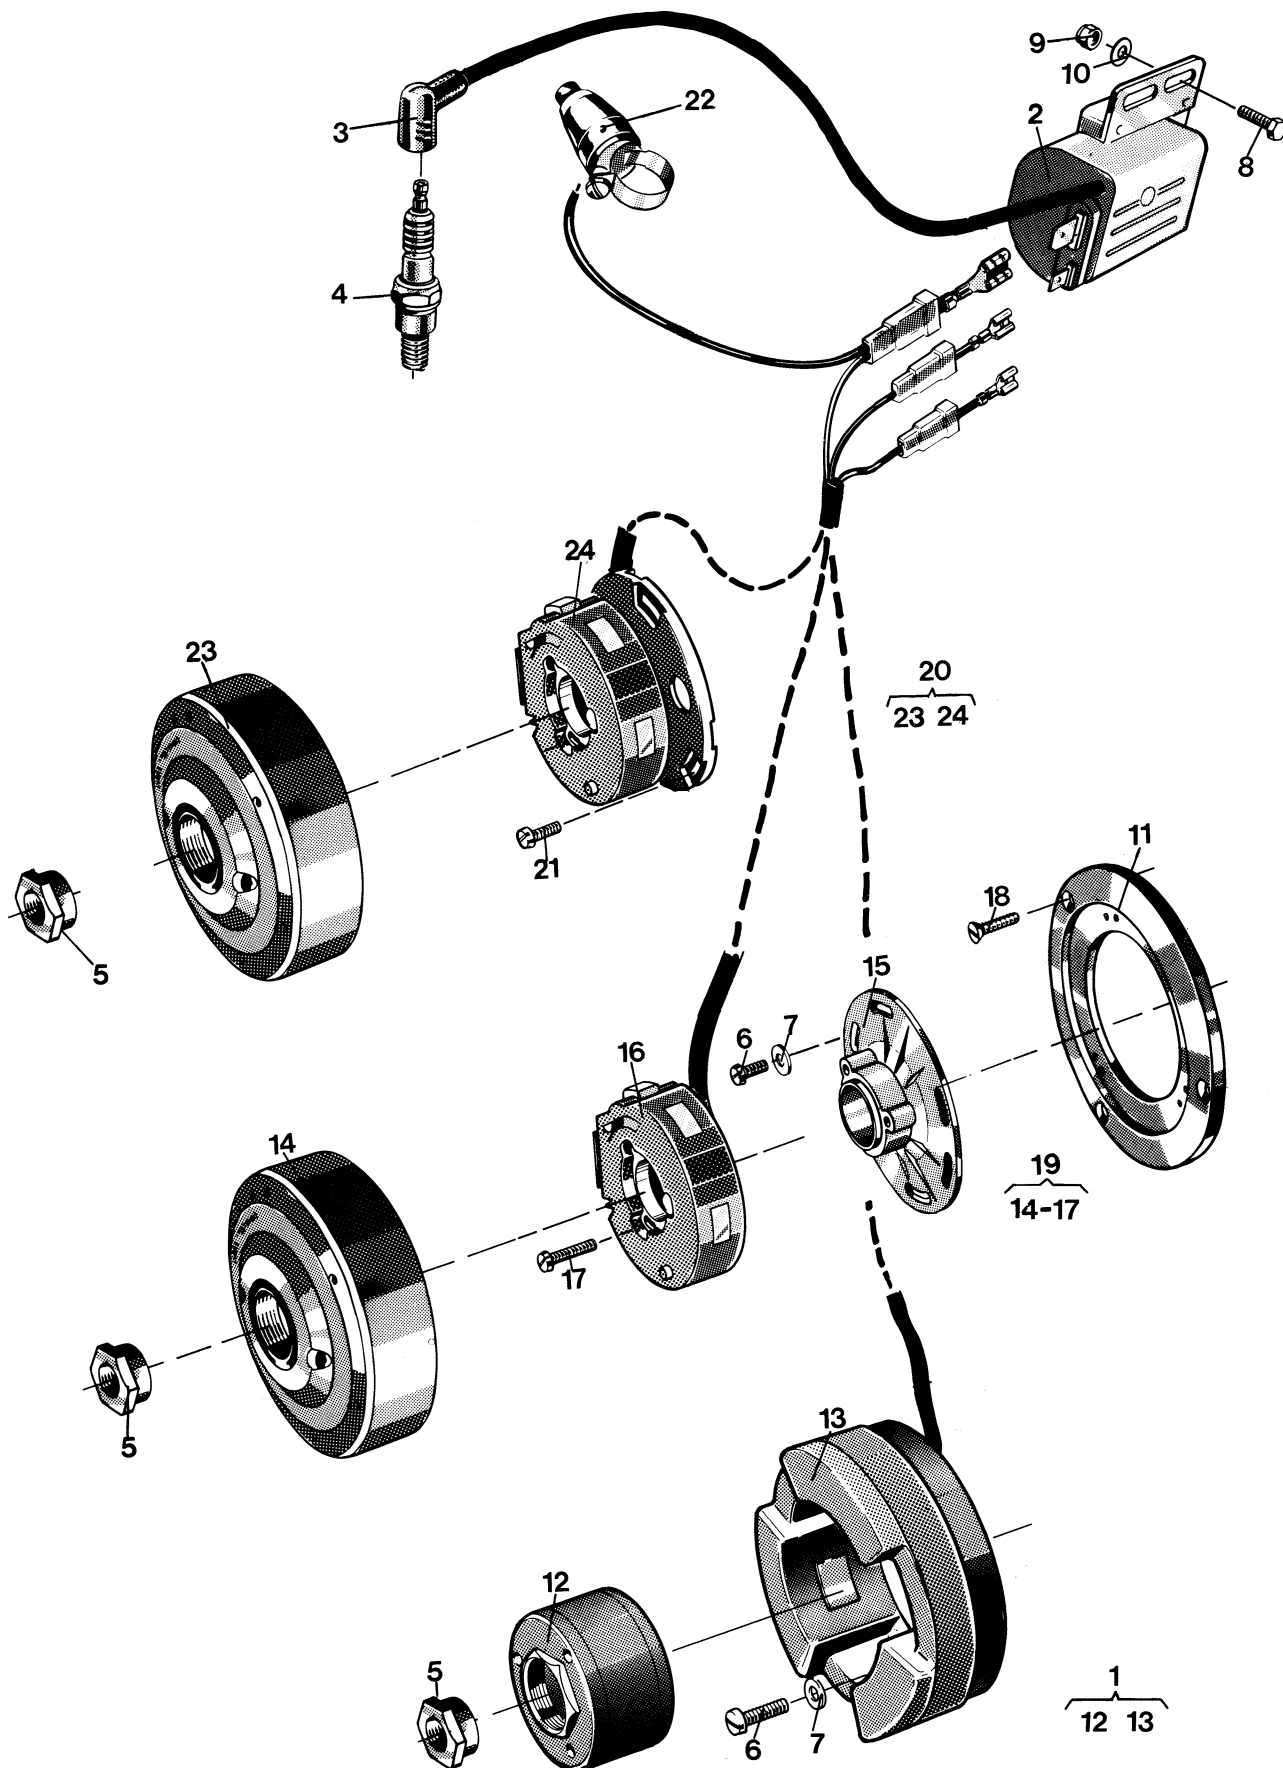


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
N 1	16 14 759-01	1														Svä nghjuls magnet, kpl. Flywheel magneto compl.	
2	16 14 714-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Tändspole, kpl. Ignition coil	
3	16 14 635-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Tändstiftsansl. Spark plug protector	
4	16 14 769-01			1	1	1	1	1	1	1	1	1	1	1		Tändstift Bosch W4C Spark plug	
	16 14 769-02	1	1													Tändstift Bosch W3C Spark plug	
5	16 10 768-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Mutter Nut	
6	20 62 291-11	3	3	3		3		3					3	3		Skruv M4x12 Screw	
7	28 16 165-01	3	3	3		3		3					3	3		Bricka 4,3x8 Washer	
8	20 06 368-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Skruv M6x16 Screw	
9	25 80 142-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Låsmutter M6 Nut	
10	28 16 201-01	2	2	2	2	2	2	2	2	2	2	2	2	2		Bricka 6,4x12 Washer	
11	16 14 715-01			1		1		1					1	1		Fästplatta Mounting plate	
18	20 62 331-12			3		3		3					3	3		Skruv M5x20 Screw	
19	16 14 740-01			1		1		1								Svä nghjuls magnet, kpl. Flywheel magneto compl.	
	16 14 751-02												1	1		Svä nghjuls magnet, kpl. Flywheel magneto compl.	
	16 14 751-01		1													Svä nghjuls magnet, kpl. Flywheel magneto compl.	
20	16 14 743-01				1		1		1	1	1	1				Svä nghjuls magnet, kpl. Flywheel magneto compl.	
21	20 62 329-12				3		3		3	3	3	3				Skruv M5x16 Screw	
22	15 17 281-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Kortslutningsknapp, kpl. Kill button	

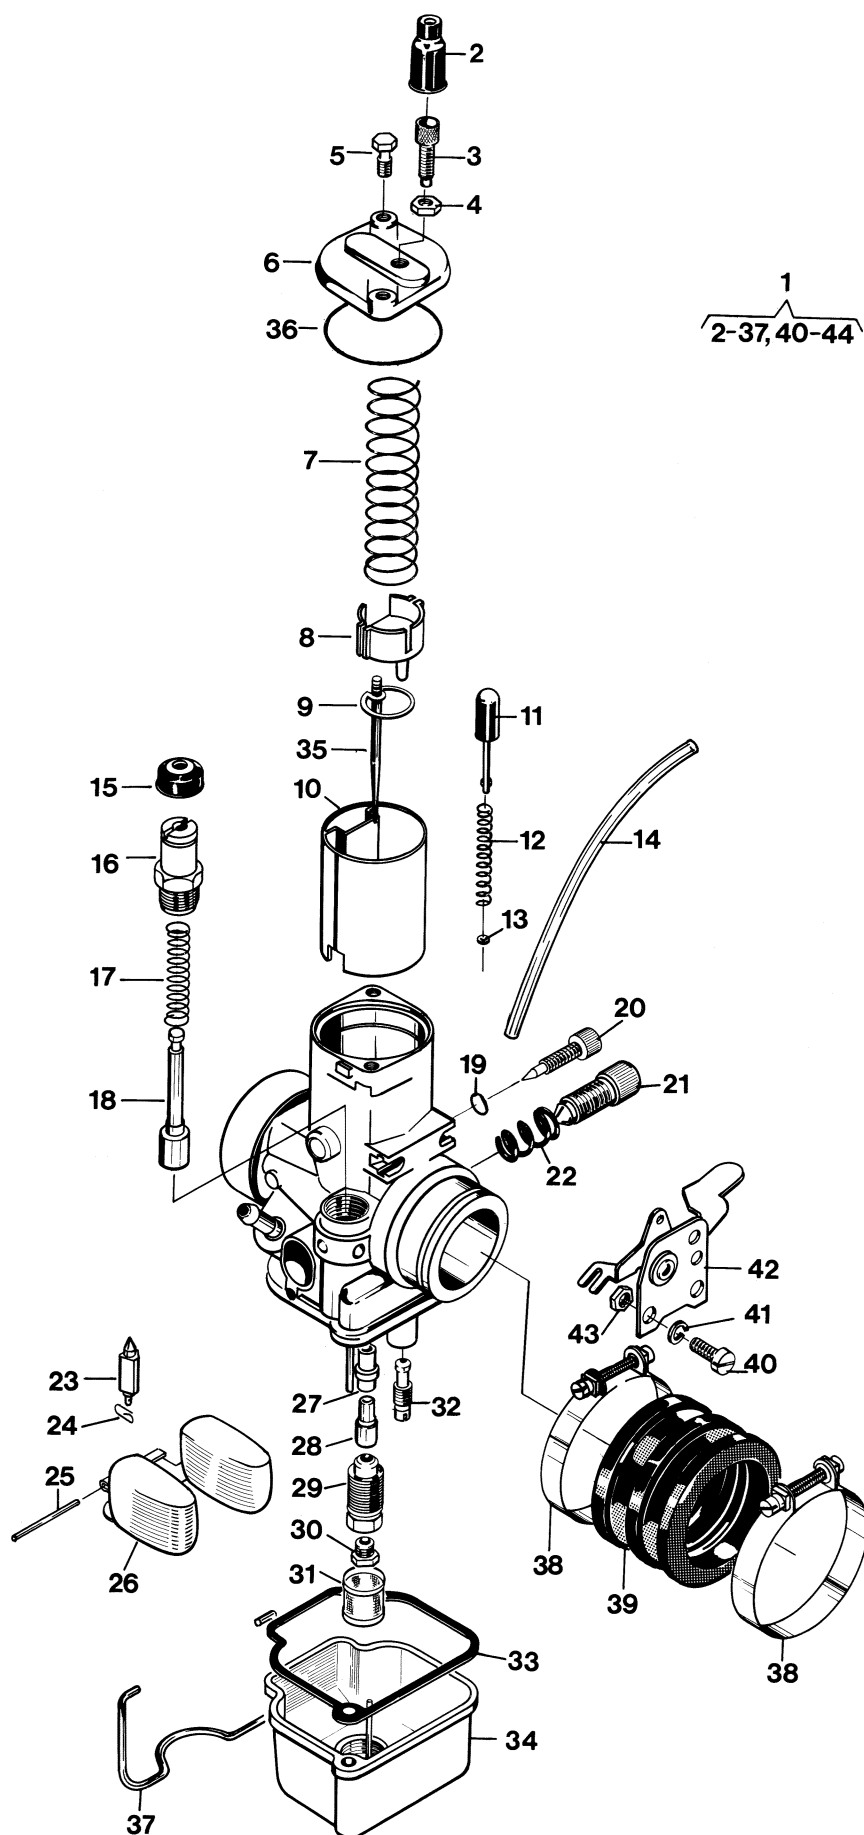


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	16 13 442-01	1	1													Förgasare, kpl. Carburettor compl.	
2	16 13 128-01	1	1													Skyddshylsa Protector sleeve	
3	16 13 916-01	1	1													Ställskruv Tension screw	
4	16 13 908-01	1	1													Mutter Nut	
5	16 13 126-01	2	2													Skruv Screw	
6	16 13 247-01	1	1													Förgasarelock Carburettor cover	
7	16 13 597-01	1	1													Trottelfjäder Throttle spring	
8	16 13 237-01	1	1													Wirelås Wire lock	
9	16 13 244-01	1	1													Hållare Needle holder	
10	16 13 484-01	1	1													Trottel Throttle	
11	16 13 449-01	1	1													Flödareknapp Tickler button	
12	16 13 451-01	1	1													Fjäder Spring	
13	16 13 450-01	1	1													Bricka Washer	
14	11 28 072-05	1	1													Slang/m 8x4 Hose/m	
15	16 13 464-01	1	1													Gummiskydd Rubber cap.	
16	16 13 459-01	1	1													Starthylsa Start sleeve	
17	15 13 458-01	1	1													Fjäder Spring	
18	16 13 457-01	1	1													Kolv Piston	
19	16 13 465-01	1	1													O-ring O-ring	
20	16 13 453-01	1	1													Luftskruv Air screw	
21	16 13 986-01	1	1													Ställskruv Adjusting screw	
22	16 13 987-01	1	1													Fjäder Spring	
23	16 13 417-01	1	1													Nål Needle	
24	16 13 330-01	1	1													Fjäder Spring	
25	16 13 993-01	1	1													Stift Peg	
26	16 13 537-01	1	1													Flottör Float	
27	16 13 215-01	1	1													Spridare Atomizer	
28	16 13 238-01	1	1													Nålmunstycke 2,76 Needle jet.	
29	16 13 979-01	1	1													Blandarrör Mixer tube	
30	16 13 506-01	1	1													Huvudmunstycke 170 Main jet.	
31	16 13 509-01	1	1													Silhylsa Strainer sleeve	
32	16 13 505-01	1	1													Tömångsmunstycke 35 Idling jet	
33	16 13 989-01	1	1													Packning Gasket	
34	16 13 494-01	1	1													Flottörhus Float chamber	
35	16 13 596-01	1	1													Nål Needle	
36	16 13 248-01	1	1													O-ring O-ring	
37	16 13 990-01	1	1													Fjäderbygel Spring strop	
38	16 13 538-01	2	2													Klamma Clamp	
39	16 13 226-01	1	1													Muff Muff	

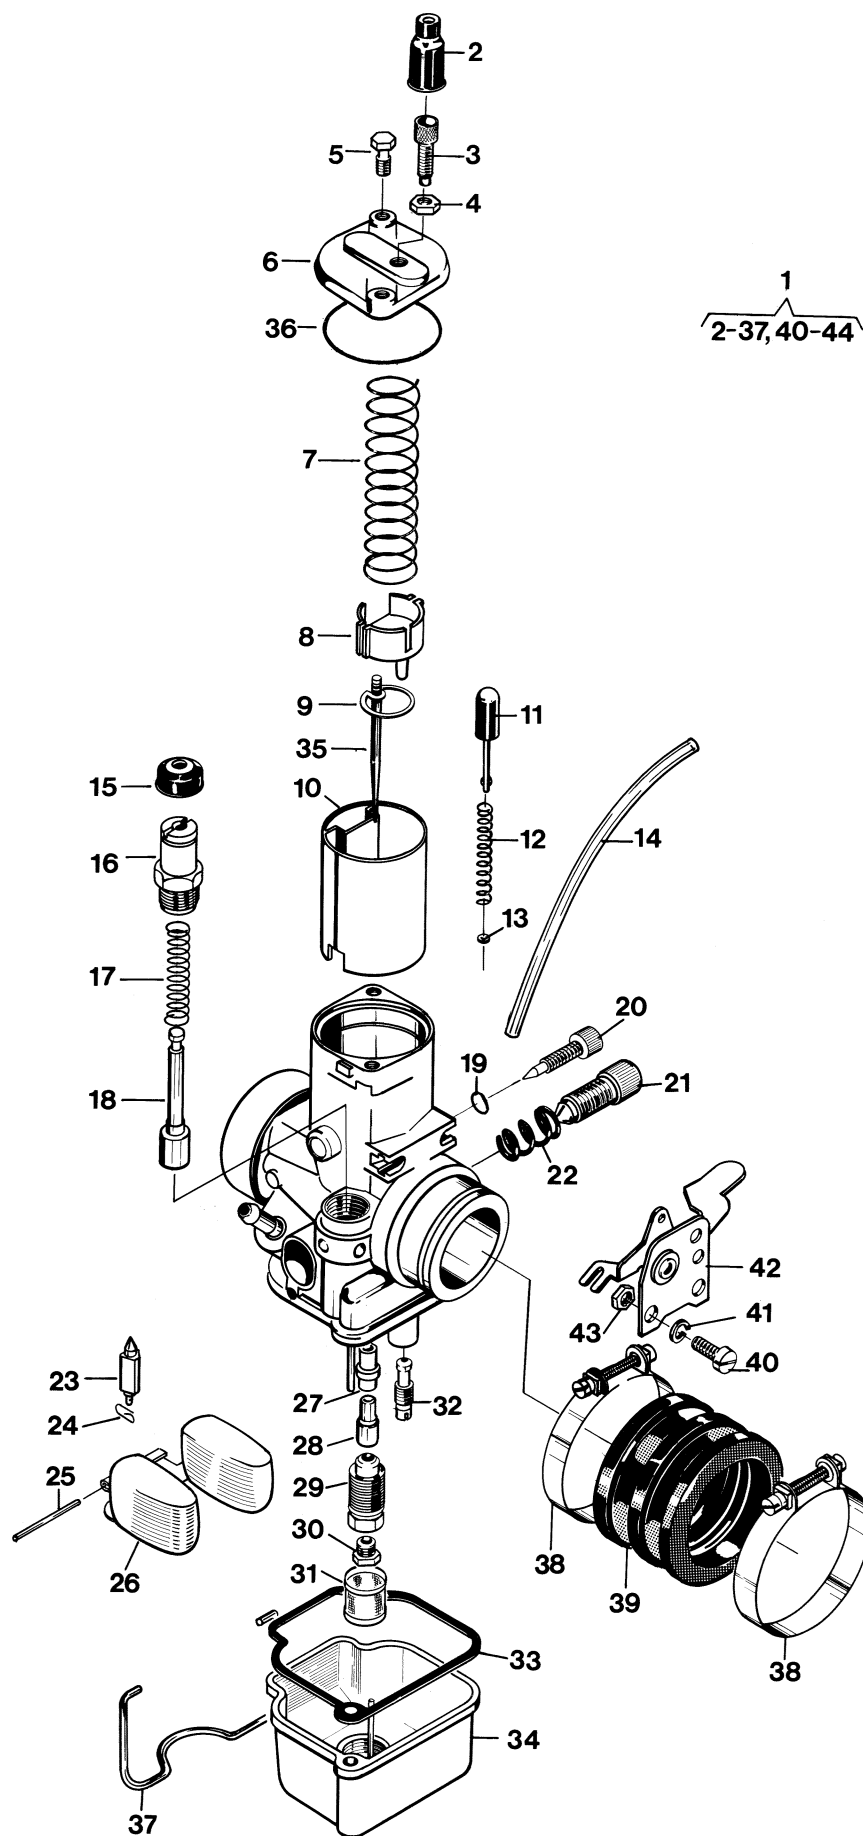


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
40	20 62 325-11	2	2													Skruv Screw	
41	28 04 301-01	2	2													Bricka Washer	
42	16 13 483-01	1	1													Choke reglage Choke lever	
43	16 13 463-01	2	2													Mutter Nut	
Tillbehör/Accessories																	
28	16 13 485-01 16 13 240-01 16 13 241-01															Nålmunstycken Needle jets 2,70 2,73 2,80	
30	16 13 232-01 16 13 239-01 16 13 234-01 16 13 235-01 16 13 236-01 16 13 506-01 16 13 507-01															Huvudmunstycken Main jets 145 150 155 160 165 170 175	
32	16 13 510-01 16 13 981-01 16 13 216-01															Tomgångmunstycken Idling jets 30 40 45	

Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	16 13 532-01			1	1	1	1	1	1	1	1	1	1	1		Förgasare kpl. Carburettor compl.	
2	16 13 128-01			1	1	1	1	1	1	1	1	1	1	1		Skyddshylsa Protector sleeve	
3	16 13 916-01			1	1	1	1	1	1	1	1	1	1	1		Ställskruv Tension screw	
4	16 13 908-01			1	1	1	1	1	1	1	1	1	1	1		Mutter Nut	
6	16 13 570-01			1	1	1	1	1	1	1	1	1	1	1		Förgasarelock Carburettor cover	
7	16 13 571-01			1	1	1	1	1	1	1	1	1	1	1		Trottefjäder Throttle spring	
8	16 13 584-01			1	1	1	1	1	1	1	1	1	1	1		Wirelås Wire lock	
9	16 13 583-01			1	1	1	1	1	1	1	1	1	1	1		Hållare Needle holder	
10	16 13 575-01			1	1	1	1	1	1	1	1	1	1	1		Trottel c.A2,0 Throttle	
11	22 00 430-17			4	4	4	4	4	4	4	4	4	4	4		Skruv M5x16 Screw	
12	28 04 301-01			4	4	4	4	4	4	4	4	4	4	4		Bricka Washer	
13	16 13 569-01			2	2	2	2	2	2	2	2	2	2	2		Hållare Holder	
14	16 13 448-20			2	2	2	2	2	2	2	2	2	2	2		Slang/m 6x4 Hose/m	
15	16 13 590-01			1	1	1	1	1	1	1	1	1	1	1		Gummiskydd Rubber cap.	
16	16 13 589-01			1	1	1	1	1	1	1	1	1	1	1		Startventil, kpl. Start valve, compl.	
17	16 13 594-01			1	1	1	1	1	1	1	1	1	1	1		Fjäder Spring	
18	16 13 595-01			1	1	1	1	1	1	1	1	1	1	1		Chokereglage Choke lever	
19	16 13 572-01			1	1	1	1	1	1	1	1	1	1	1		Fjäder Spring	
20	16 13 573-01			1	1	1	1	1	1	1	1	1	1	1		Luftskruv Air screw	
21	16 13 588-01			1	1	1	1	1	1	1	1	1	1	1		Ställskruv Adjusting screw	
22	16 13 587-01			1	1	1	1	1	1	1	1	1	1	1		Fjäder Spring	
23	16 13 565-01			1	1	1	1	1	1	1	1	1	1	1		Nålventil, kpl. Needle valve, compl.	
24	16 13 585-01			2	2	2	2	2	2	2	2	2	2	2		Flottörstopp Cap	
25	16 13 566-01			1	1	1	1	1	1	1	1	1	1	1		Stift Peg	
26	16 13 578-01			2	2	2	2	2	2	2	2	2	2	2		Flottör Float	
28	16 13 554-01			1	1	1	1	1	1	1	1	1	1	1		Nålmunstycke N.JR2 Needle jet	
29	16 13 580-01			1	1	1	1	1	1	1	1	1	1	1		Mellanskruv Distance screw	
30	16 13 560-01			1	1	1	1	1	1	1	1	1	1	1		Huvudmunstycke M.J 430 Main jet	
31	16 13 586-01			1	1	1	1	1	1	1	1	1	1	1		Skvalplåt Baffle plate	
32	16 13 546-01			1	1	1	1	1	1	1	1	1	1	1		Tomgångsmunstycke P.J 45 Idling jet	
33	16 13 543-01			1	1	1	1	1	1	1	1	1	1	1		Packning Gasket	
34	16 13 574-01			1	1	1	1	1	1	1	1	1	1	1		Flottörhus Float chamber	
35	16 13 579-01			1	1	1	1	1	1	1	1	1	1	1		Nål Needle	
36	16 13 581-01			1	1	1	1	1	1	1	1	1	1	1		Bottenskruv Screw drain	
37	16 13 582-01			1	1	1	1	1	1	1	1	1	1	1		Packning Gasket	
38	16 13 535-01			1	1	1	1	1	1	1	1	1	1	1		Klamma Clamp	
40	16 13 533-01			1	1	1	1	1	1	1	1	1	1	1		Anslutning, kpl. Connection, compl.	
41	16 13 564-01			1	1	1	1	1	1	1	1	1	1	1		Flottörm Floar lever	
42	16 13 567-01			2	2	2	2	2	2	2	2	2	2	2		Bricka Washer	

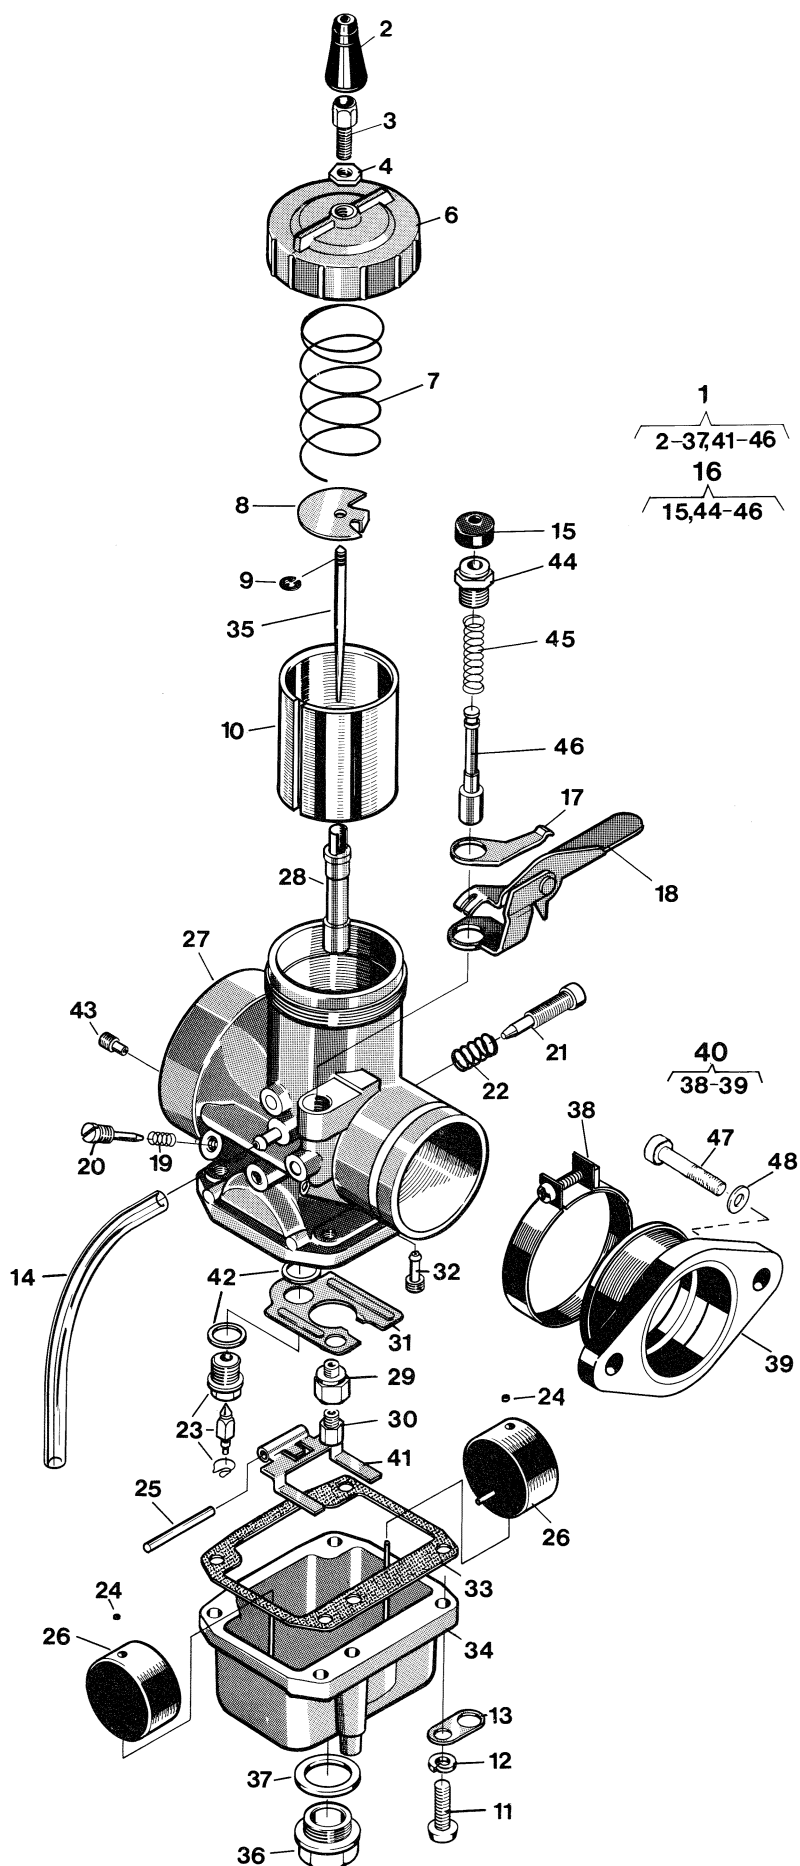


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
43	16 13 568-01			1	1	1	1	1	1	1	1	1	1	1		Luftmunstycke A:J2,0 Air jet	
47	20 24 453-02			2	2	2	2	2	2	2	2	2	2	2		Skruv M8x25 Screw	
48	28 16 231-01			2	2	2	2	2	2	2	2	2	2	2		Bricka 8,4 x 16 Washer	
Tillbehör/Accessories																	
10	16 13 576-01 16 13 577-01															Trottlar Throttles C.A 2.5 C.A 3.0	
28	16 13 549-01 16 13 550-01 16 13 551-01 16 13 552-01 16 13 553-01 16 13 555-01															Nålmunstycke Needle jets N.J Q-4 N.J Q-5 N.J Q-6 N.J Q-8 N.J R-0 N.J R-4	
30	16 13 556-01 16 13 557-01 16 13 558-01 16 13 559-01 16 13 561-01 16 13 562-01 16 13 563-01															Huvudmunstycke Main jets M.J 390 M.J 400 M.J 410 M.J 420 M.J 440 M.J 450 M.J 460	
32	16 13 544-01 16 13 545-01 16 13 547-01 16 13 548-01															Tomgångsmunstycken Idling jets P.J 35 P.J 40 P.J 50 P.J. 55	

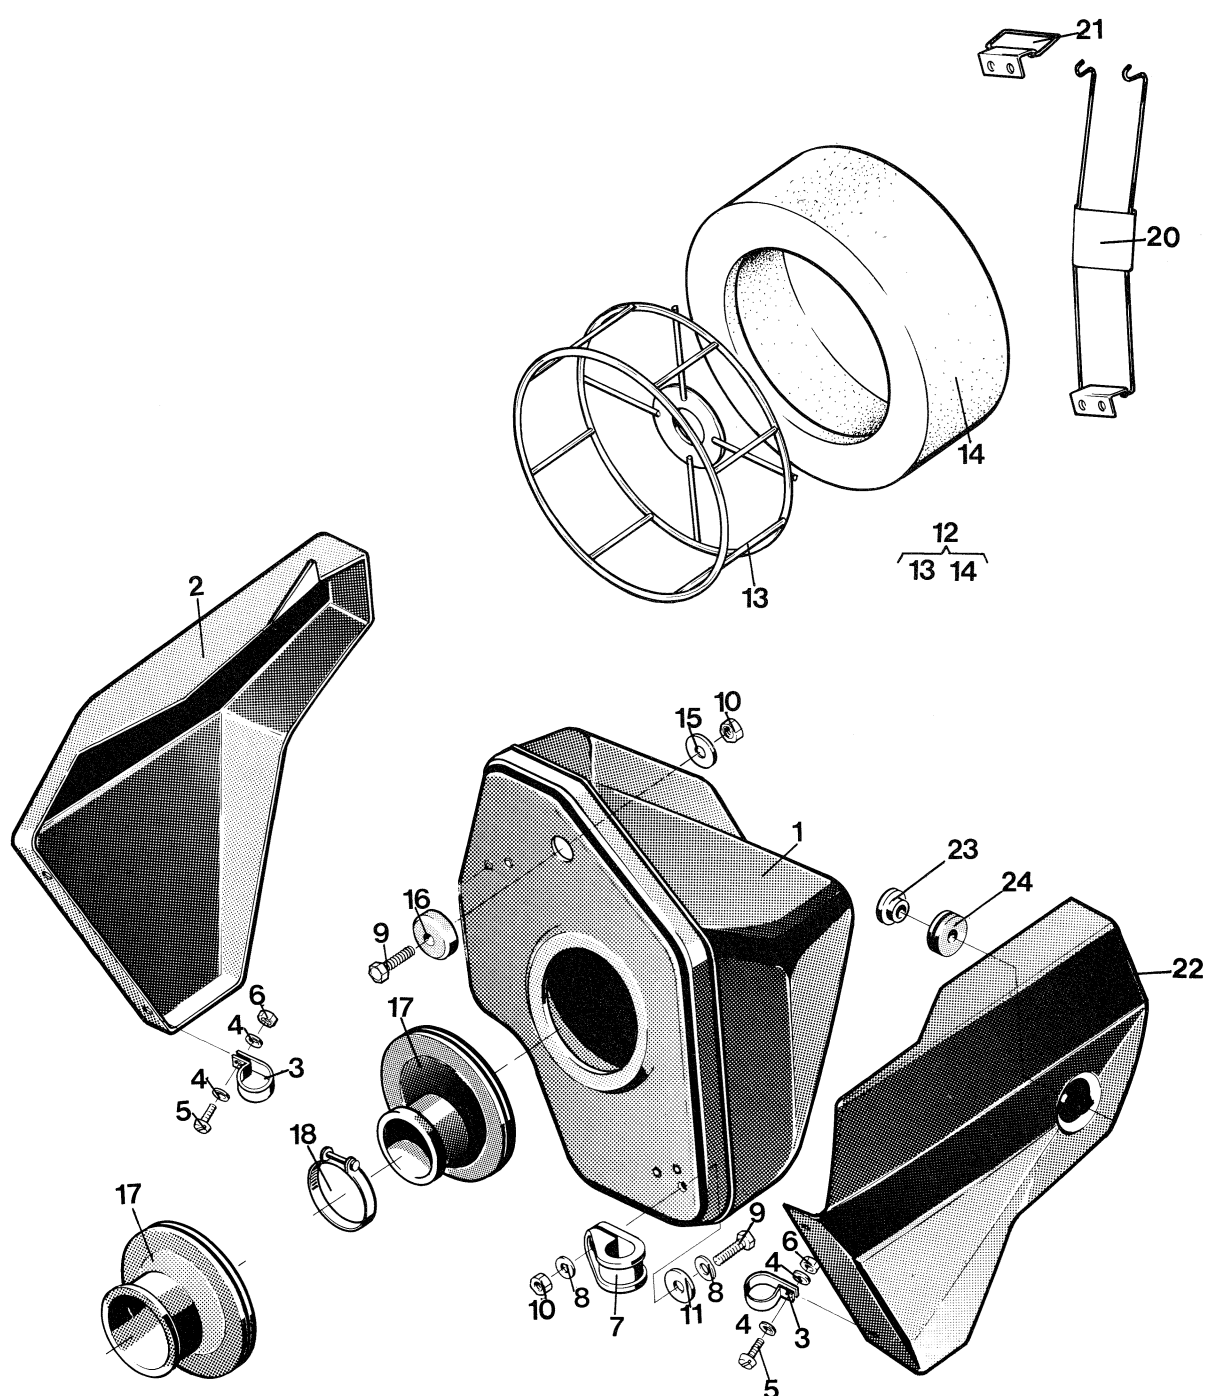


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	15 14 979-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Luftfilterbehållare Air filter box	
2	15 14 991-01	1	1	1	1	1	1	1	1	1	1	1	1	1		Lock Cover	
3	15 14 201-01	4	4	4	4	4	4	4	4	4	4	4	4	2	2	Klamma Clamp	
4	28 01 233-01	8	8	8	8	8	8	8	8	8	8	8	8	4	4	Bricka 4,3x12 Washer	
5	20 62 291-11	4	4	4	4	4	4	4	4	4	4	4	4	2	2	Skruv M4x12 Screw	
6	25 80 118-01	4	4	4	4	4	4	4	4	4	4	4	4	2	2	Mutter M4x12 Nut	
7	15 18 137-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Fäste Attachment	
8	28 16 211-01	2	2	2	2	2	2	2	2	2	2	2	2	2	2	Bricka 6,4x14 Washer	
9	20 06 371-12	2	2	2	2	2	2	2	2	2	2	2	2	2	2	Skruv M6x22 Screw	
10	25 80 142-01	2	2	2	2	2	2	2	2	2	2	2	2	2	2	Mutter M6 Nut	
11	15 18 121-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Gummirbricka Rubber washer	
12	15 14 981-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Luftfilter, kpl. Air filter compl.	
14	15 14 983-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Luftfilter Air filter	
15	28 01 416-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Bricka 6,5x22 Washer	
16	15 19 342-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Bussning Bushing	
17	15 14 301-01	1	1													Anslutning Connection	
	15 14 984-01			1	1	1	1	1	1	1	1	1	1	1	1	Anslutning Connection	
18	16 13 539-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Klamma Clamp	
20	15 14 985-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Bygel, kpl. Filter holder	
21	15 14 986-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Länk, kpl. Link	
22	15 19 472-01			1	1	1	1	1								Sidopanel Side panel	
	15 19 499-01	1	1						1	1	1	1				Sidopanel Side panel	
23	15 19 474-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Distans Distance	
24	15 19 475-01	1	1	1	1	1	1	1	1	1	1	1	1	1	1	Bussning Bushing	

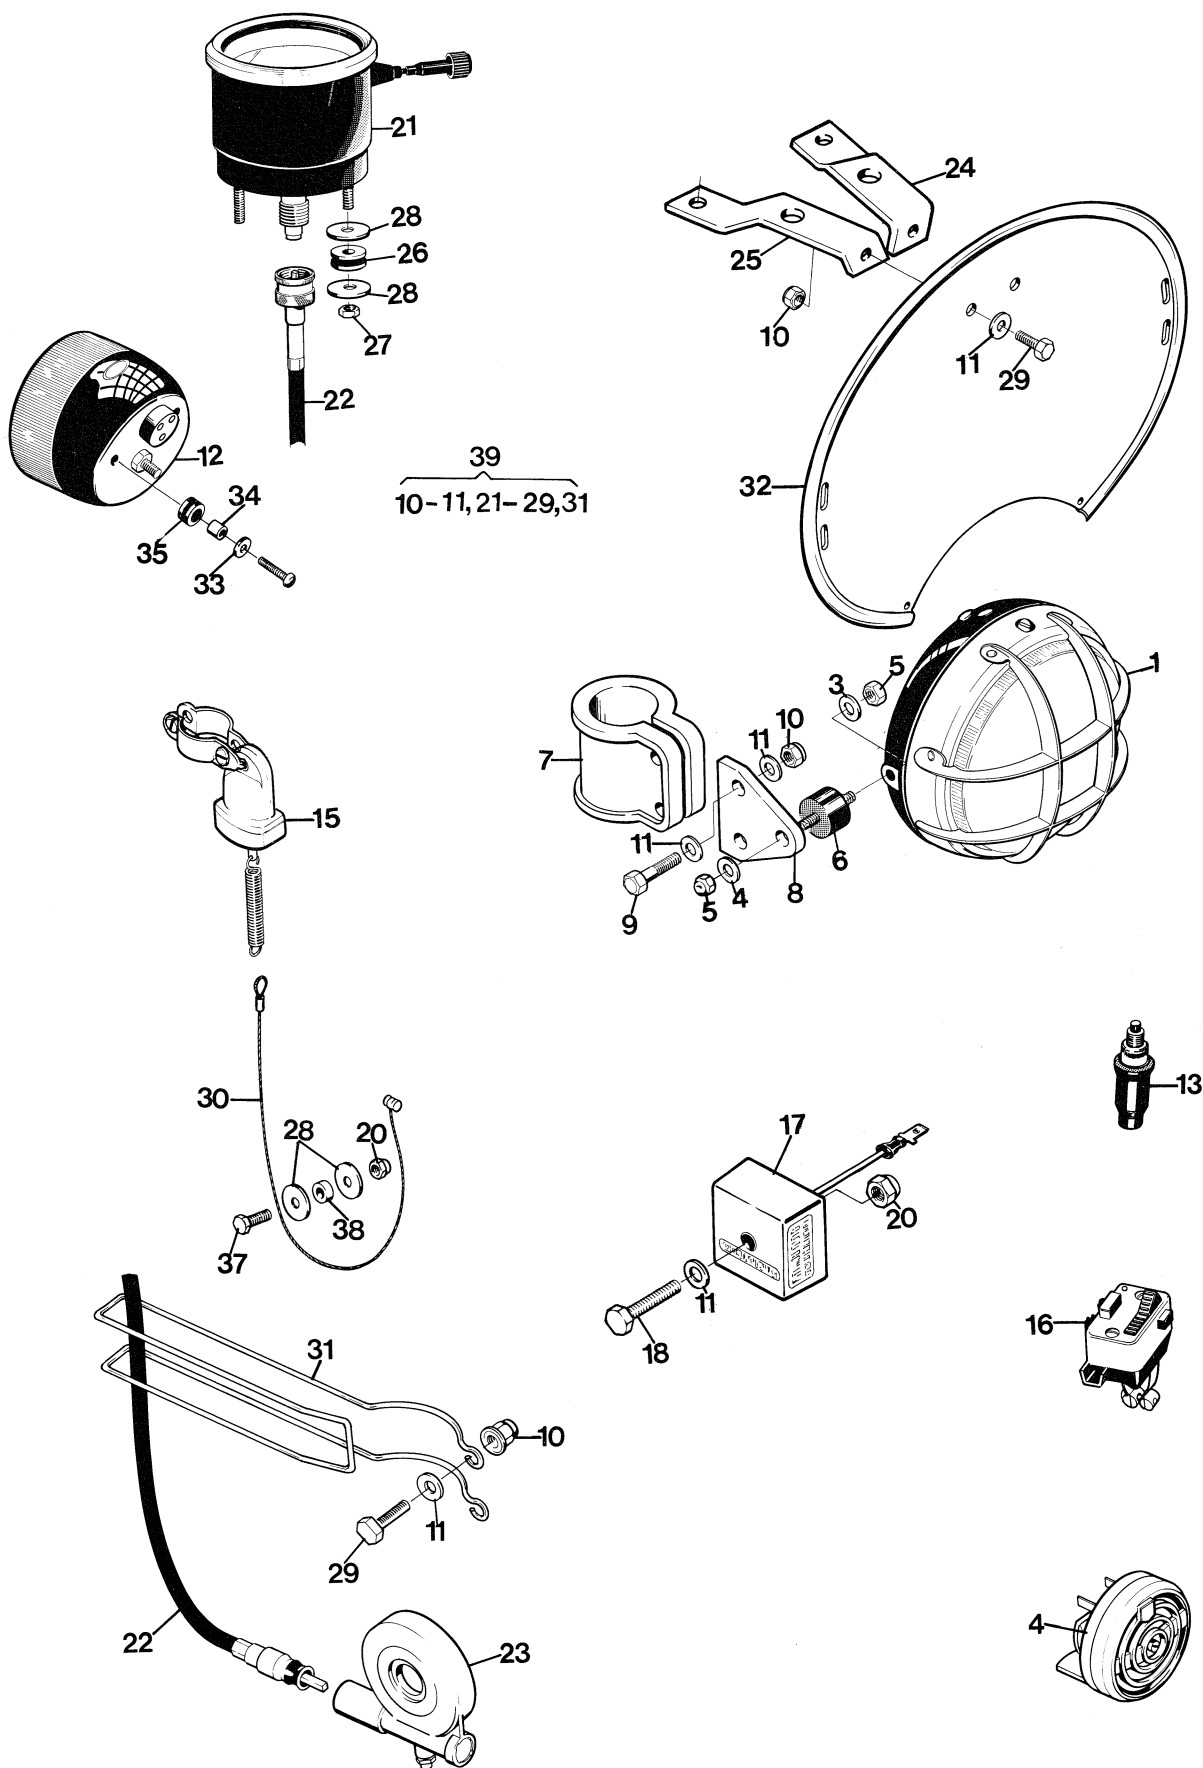


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
1	15 17 307-01		1		1		1			1	1		1	1		Strålkastare Head lamp	
2	15 17 342-01		1		1		1			1	1		1	1		Glödlampa 12V-36/36W Electric bulb.	
3	15 17 339-01		2		2		2			2	2		2	2		Plastbricka Washer	
4	15 17 340-01		2		2		2			2	2		2	2		Bricka Washer	
5	25 80 153-01		4		4		4			4	4		4	4		Mutter M8 Nut	
6	15 14 590-01		2		2		2			2	2		2	2		Vibrationselement Damping element	
7	15 17 300-01		2		2		2			2	2		2	2		Lamphållare Rubber holder	
8	15 17 304-01		2		2		2			2	2		2	2		Lampfäste Lamp attachment	
9	20 06 374-12		4		4		4			4	4		4	4		Skruv M6x30 Screw	
10	25 81 146-01		7		7		7			7	7		7			Mutter M6 Nut	
11	28 16 211-01		8		8		8			8	8		8	8		Bricka 6,4x14 Washer	
12	15 17 311-01		1		1		1			1	1		1	1		Baklykta Rear lamp	
13	15 17 328-01		1		1						1			1		Bromsljuskontakt Brake contact	
14	15 17 308-01		1		1						1			1		Signalhorn Signal horn	
15	15 17 313-01		1		1						1			1		Bromsljuskontakt Brake contact	
16	15 17 292-01		1		1						1			1		Omkopplare Switcher	
17	16 14 757-01		1		1		1			1	1		1	1		Spänningsregulator Voltage regulator	
18	20 06 376-12		1		1		1			1	1		1	1		Skruv M6x35 Screw	
19	28 16 211-01		2		2		2			2	2		2	2		Bricka 6,4x14 Washer	
20	25 80 142-01		2		2		2			2	2		2	2		Mutter M6 Nut	
21	15 19 877-01		1		1									1		Hastighetsmätare Speedo-meter Km	
	15 19 878-01						1			1			1			Hastighetsmätare Speedo-meter Miles	
22	15 17 301-01		1		1		1			1	1		1	1		Böjlig axel Speedo wire	
23	15 17 302-01		1		1		1			1	1		1	1		Vinkelväxel Angle gear	
N 24	15 17 325-01		1		1		1			1	1		1	1		Fäste, höger Attachment right	
N 25	15 17 326-01		1		1		1			1	1		1	1		Fäste, vänster Attachment left	
26	50 15 495-01		2		2		2			2	2		2	2		Gummigenomföring Rubber attach.	
27	25 80 132-01		2		2		2			2	2		2	2		Mutter M5 Nut	
28	28 01 416-01		6		6		6			6	6		6	6		Bricka 6,5x22 Washer	
29	20 06 371-12		4		4		4			4	4		4	4		Skruv M6x22 Screw	
N 30	15 17 364-01		1		1						1			1		Wire Wire	
31	15 17 306-01		1		1		1			1	1		1	1		Avvisarbygel Wire protec.	
32	15 19 479-05		1		1		1			1	1		1	1		Nummerplåt (vit) Number plate	
33	28 01 233-01		2		2		2			2	2		2	2		Bricka 4,3x12x1 Washer	
34	15 17 341-01		2		2		2			2	2		2	2		Distans Distance	
N 35	50 12 482-01		2		2		2			2	2		2	2		Genomföring Rubber attach.	
37	20 06 368-12		1		1						1			1		Skruv M6x16 Screw	
38	16 11 151-02		1		1						1			1		Distans Distance	

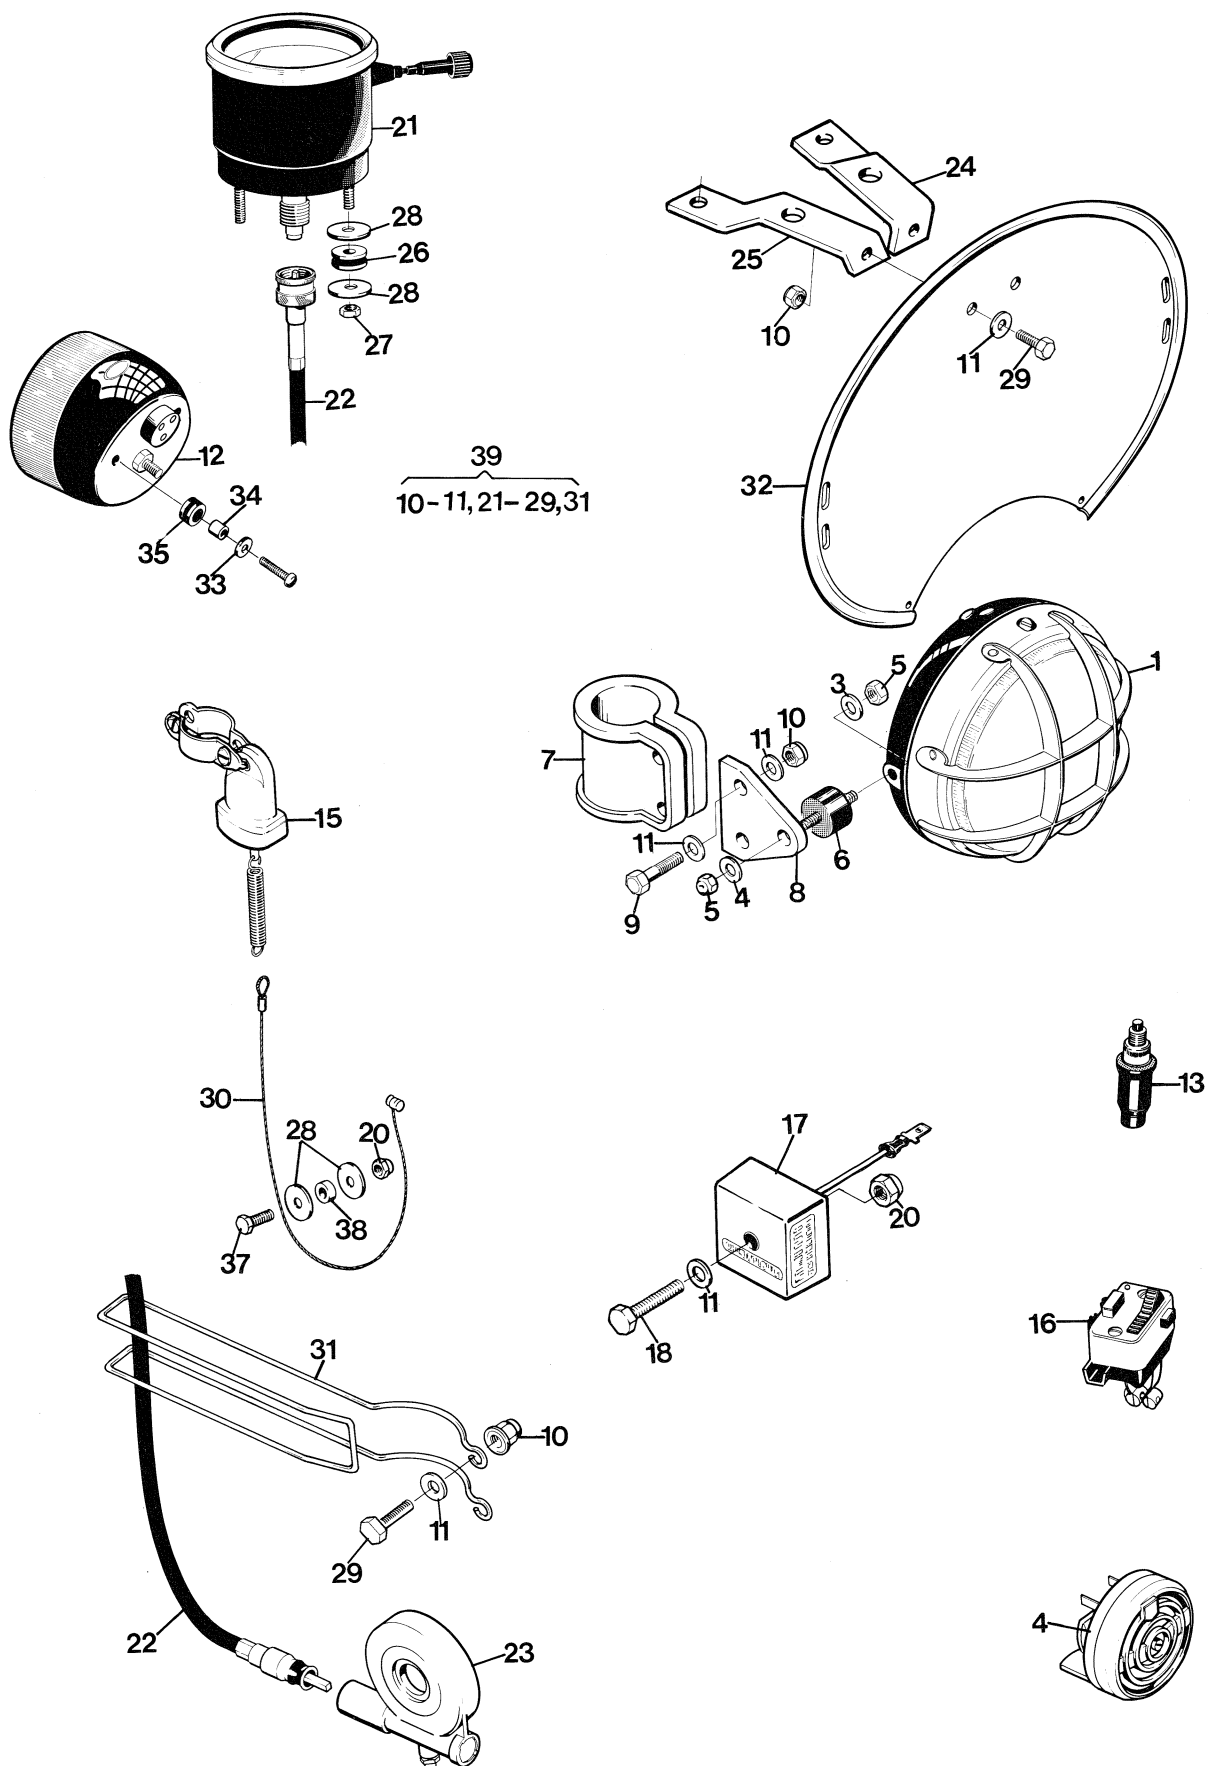


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	Replac- ed by No Ersatt av
		125		240		250			390								
		CR	WR	CR	WR	CR	WR	OR	CR	WR	WR/E	OR	ACC	ACCE	AMX		
39	15 17 312-01 15 17 312-02															Hast. mätaresats kpl. MILES Speedo-meter kit compl. MILES Hast. mätaresats kpl. KM Speedo-meter kit compl. KM	
Tillbehör/Accessories																	
	15 19 910-01		1		1		1			1	1		1	1		Glödlampshållare BA20d Electric bulb holder	

