



RESERVDELAR SPARE PARTS 1981


Gäller fr.o.m. ram nr
Valid from frame No **CN 1001**

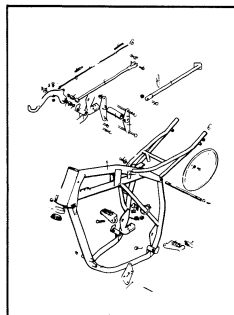


Sida 4
Page

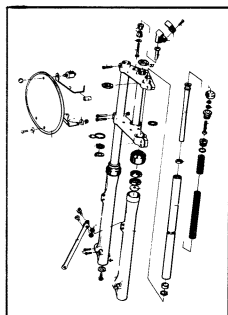


12

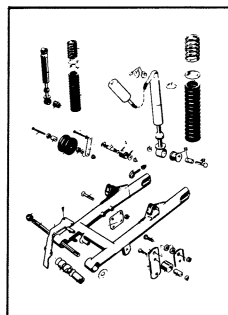


20

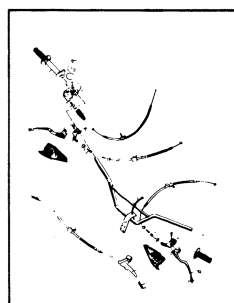


26

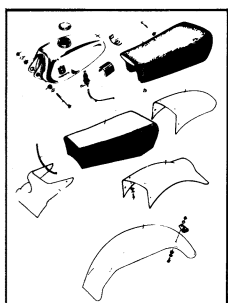


28

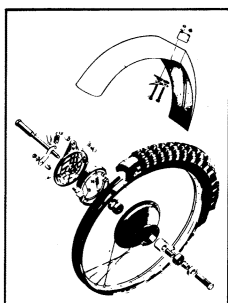


30

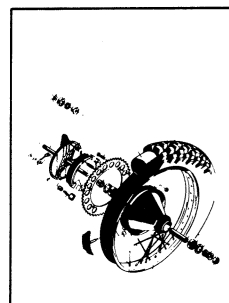


34

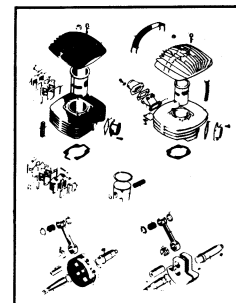


40

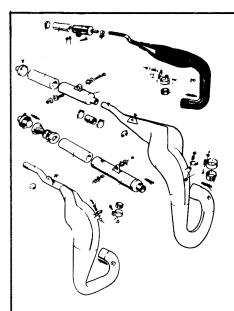


44

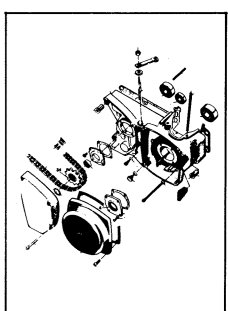


46

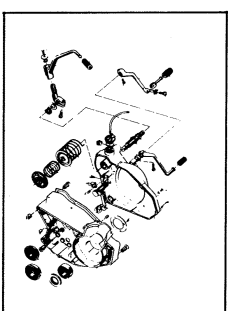


56

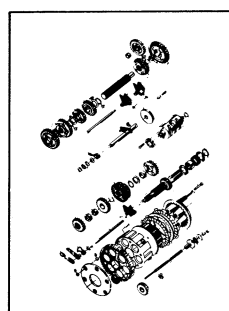


68

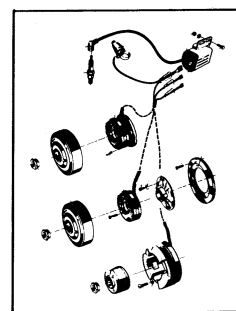


80

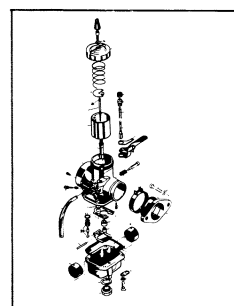


82

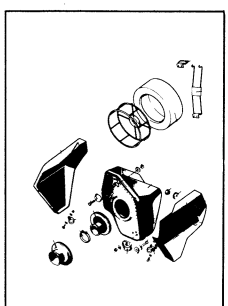

90

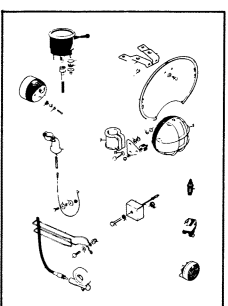

94

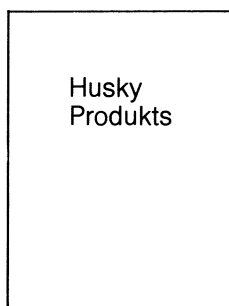

Dimensioner och beteckningar Dimensions and descriptions

Skravar: Gängdimension x längd (M6 x 30)
Screws: Thread dimensions x length

Muttrar: Gängdimension (M8)
Nuts: Thread dimension

Brickor: Typ, inre Ø x yttre Ø x tjocklek (FBB 6,4x10x1)
Washer: Type, inner Ø x exterior Ø x thickness

Typ: FBB = Fjäderbricka, öppen
Types: Spring washer open

FA = Fjäderbricka
Spring washer

LI = Låsbricka innertandad
Lock washer, inside indent

Kullager: Fabrikantens beteckning (SKF 6301)
Ball bearings: Manufacturers description

Tätningar: Inre Ø x yttre Ø x tjocklek (25x42x7)
Sealing rings: Inner Ø x exterior Ø x thickness

L = Längd
Length

z = Antal kuggar
Numbers of cogs

N = Ny reservdel
New spare part

Rätt till ändringar förbehålles.

Specifications subject to change without notice.

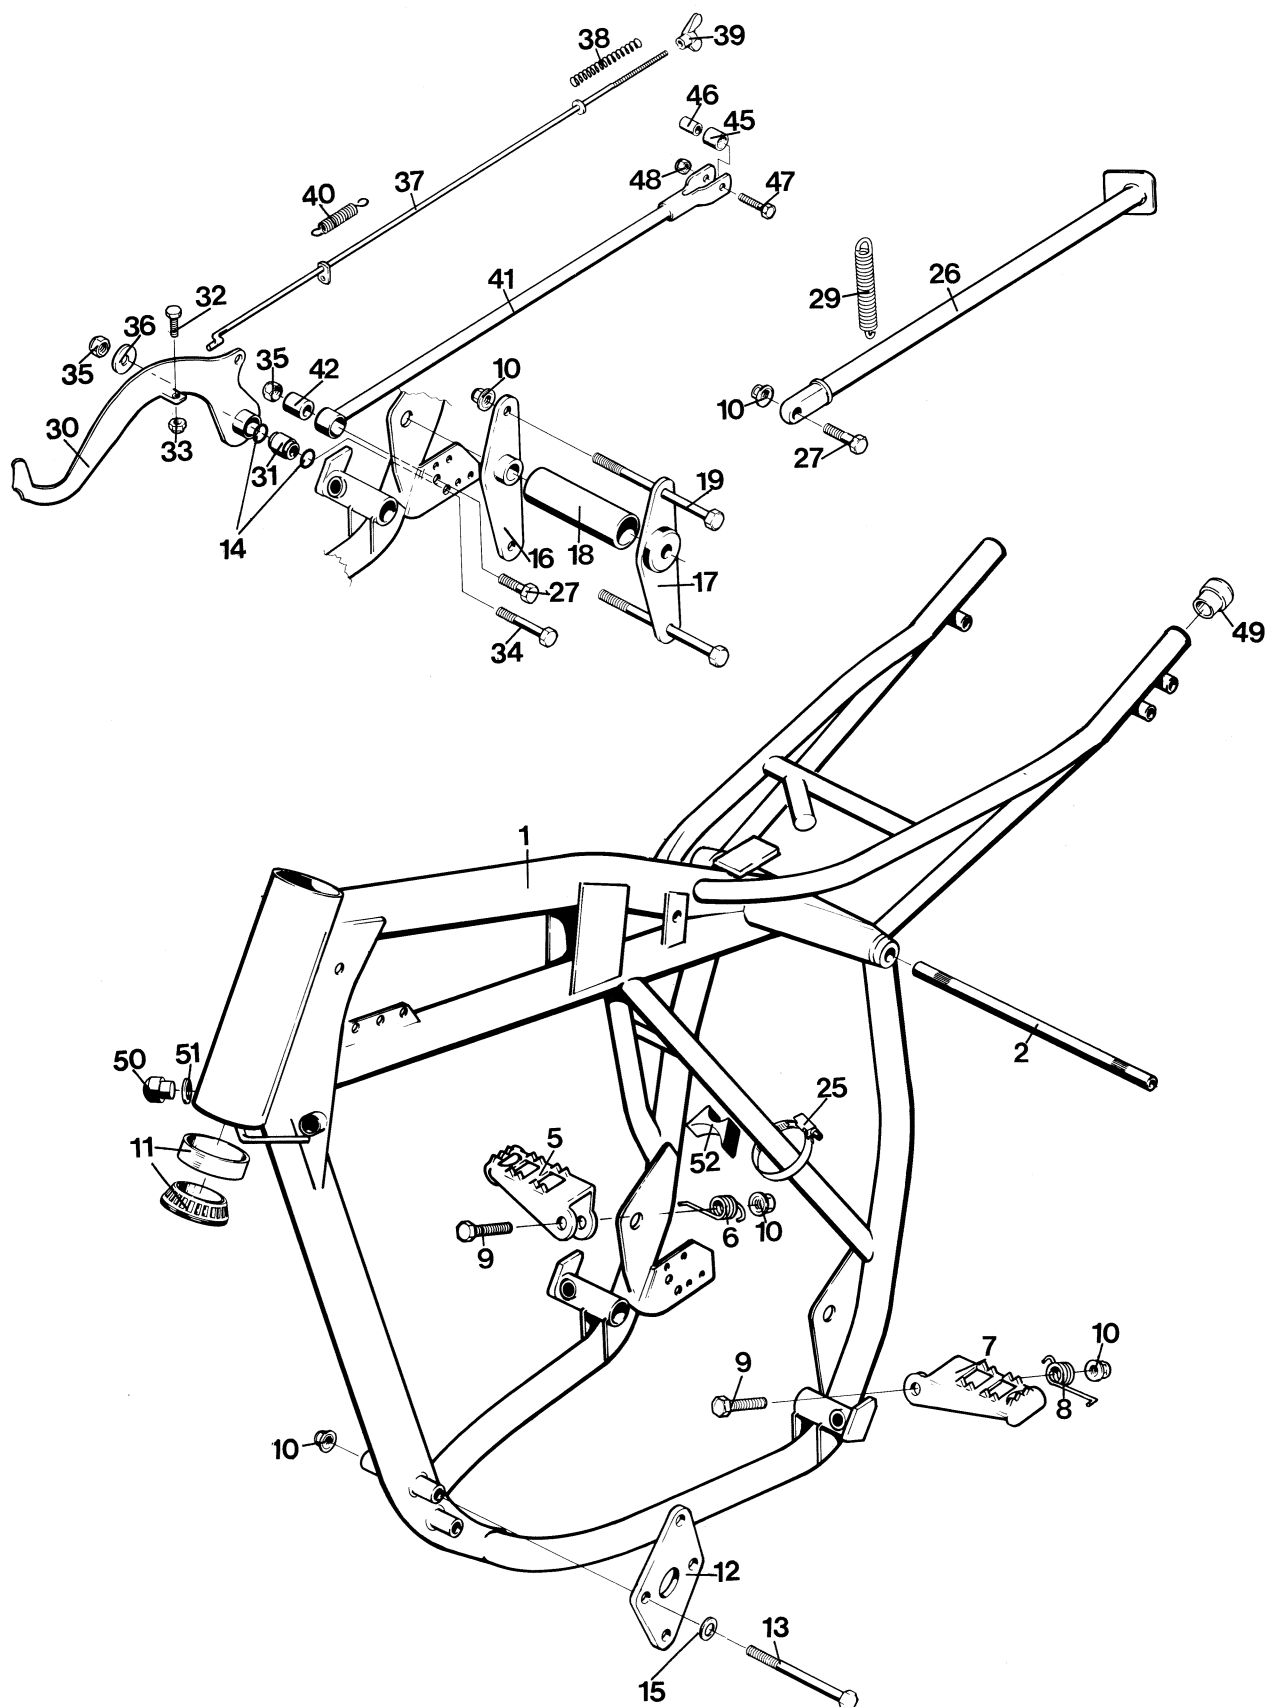


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
	1	15 10 846-01	1		1		1				1						Ram Frame	
	2	15 10 787-01	1		1		1				1						Fästbult Att. bolt	
	5	15 13 051-01	1		1		1				1						Fotstöd höger Footrest right	
	6	15 13 076-01	1		1		1				1						Fjäder Spring	
	7	15 13 053-01	1		1		1				1						Fotstöd vänster Footrest left	
	8	15 13 077-01	1		1		1				1						Fjäder Spring	
	9	20 06 462-12	2		2		2				2						Skruv M8x55 Screw	
	10	25 82 118-14	7		9		9				9						Mutter M8 Nut	
	11	15 13 070-01	2		2		2				2						Styrlager kpl. Bearing compl.	
	12	15 10 783-01			2		2										Motorfästplåt Engine clamp plate	
N		15 10 784-01	2								2						Motorfästplåt Engine clamp plate	
		15 10 838-01															Motorfästplåt Engine clamp plate	
	13	20 06 472-14	4		4		4				4						Skruv M8x 105 Screw	
N	14	29 70 415-05	2		2		2				2						O-ring O-ring	
	15	28 16 231-01	4		4		4				4						Bricka 8,4x16 Washer	
	16	15 10 665-01			1		1										Motorfästplåt Engine clamp plate	
	17	15 10 702-01			1		1										Motorfästplåt Engine clamp plate	
	18	15 10 559-01			1		1										Distans Distance	
	19	20 06 476-14			2		2										Skruv M8x 125 Screw	
	24	20 06 368-12	1		1		1				1						Skruv M6x 16 Screw	
	25	16 13 538-01	4														Klamma Clamp	
	26	15 10 604-01	1		1		1				1						Parkeringsstöd Parking rest	
	27	20 06 455-11	2		2		2				2						Skruv M8x30 Screw	
	29	15 10 442-01	1		1		1				1						Fjäder Spring	
	30	15 15 433-01	1		1		1				1						Bromspedal Brake pedal	
	31	15 15 431-01	1		1		1				1						Bussning Bushing	
	32	20 06 371-12	1		1		1				1						Skruv M6x 22 Screw	
	33	25 80 142-01	1		1		1				1						Låsmutter M6 Nut	
	34	20 06 461-14	1		1		1				1						Skruv M8x 50 Screw	
	35	25 80 153-01	2		2		2				2						Låsmutter M8 Nut	
	36	28 01 501-01	1		1		1				1						Bricka Washer	
	37	15 15 419-02	1		1		1				1						Bromsstång Brake rod	
	38	12 15 160-01	1		1		1				1						Fjäder Spring	
	39	15 15 173-01	1		1		1				1						Vingmutter Wing nut	
	40	15 19 864-01	1		1		1				1						Fjäder Spring	
	41	15 15 434-02	1		1		1				1						Bromslänk Brake link	
	42	15 15 431-01	1		1		1				1						Bussning Bushing	
	45	15 15 107-01	1		1		1				1						Bussning Bushing	
	46	15 15 108-01	1		1		1				1						Hylsa Sleeve	

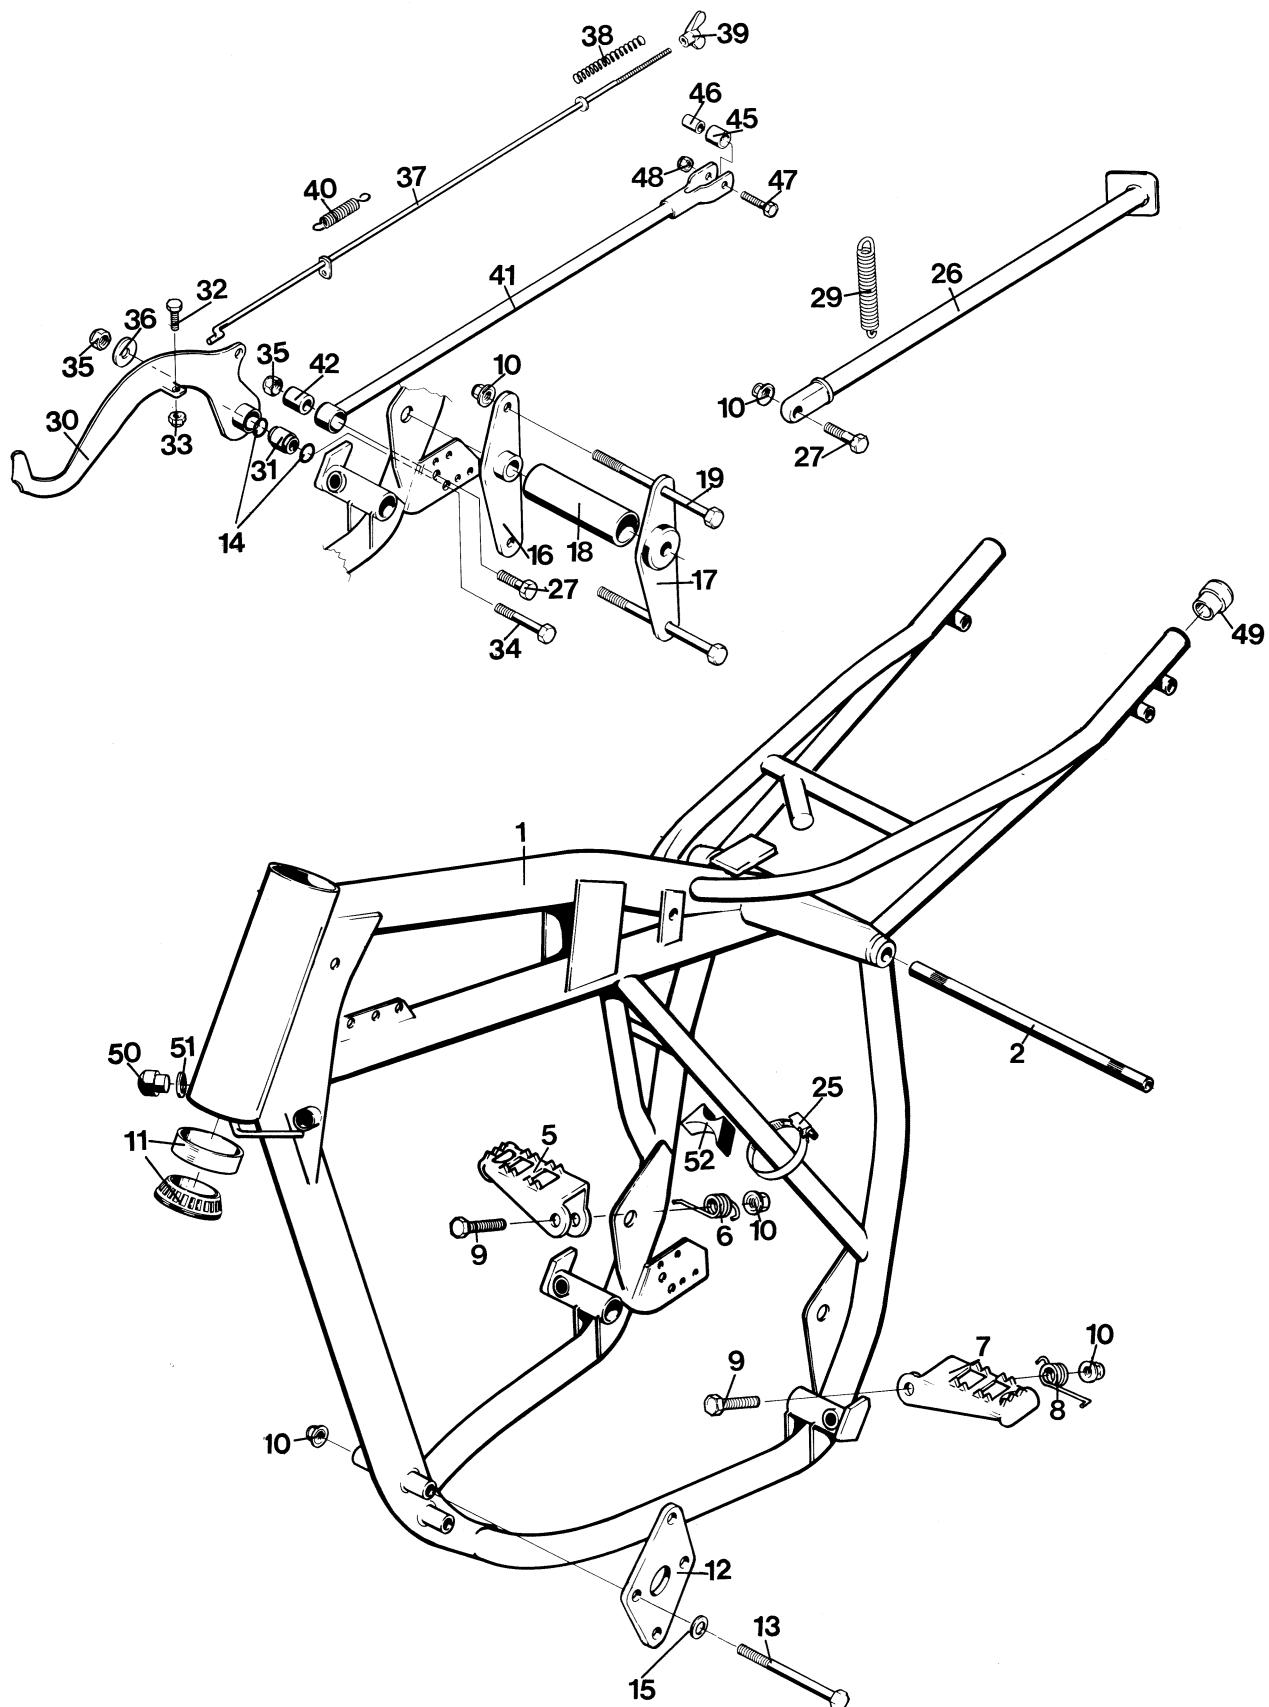


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
47	20 06 374-12	1		1		1			1							Skruv M6x30 Screw	
48	25 80 142-01	1		1		1			1							LåsmutterM6 Nut	
49	15 19 537-01	2		2		2			2							Propp Plug	
50	15 10 555-01	2		2		2			2							Buffert Buffer	
51	28 01 634-11	2		2		2			2							Bricka Washer	
52	15 19 473-01	2														Reservoargummi Reservoir rubber	

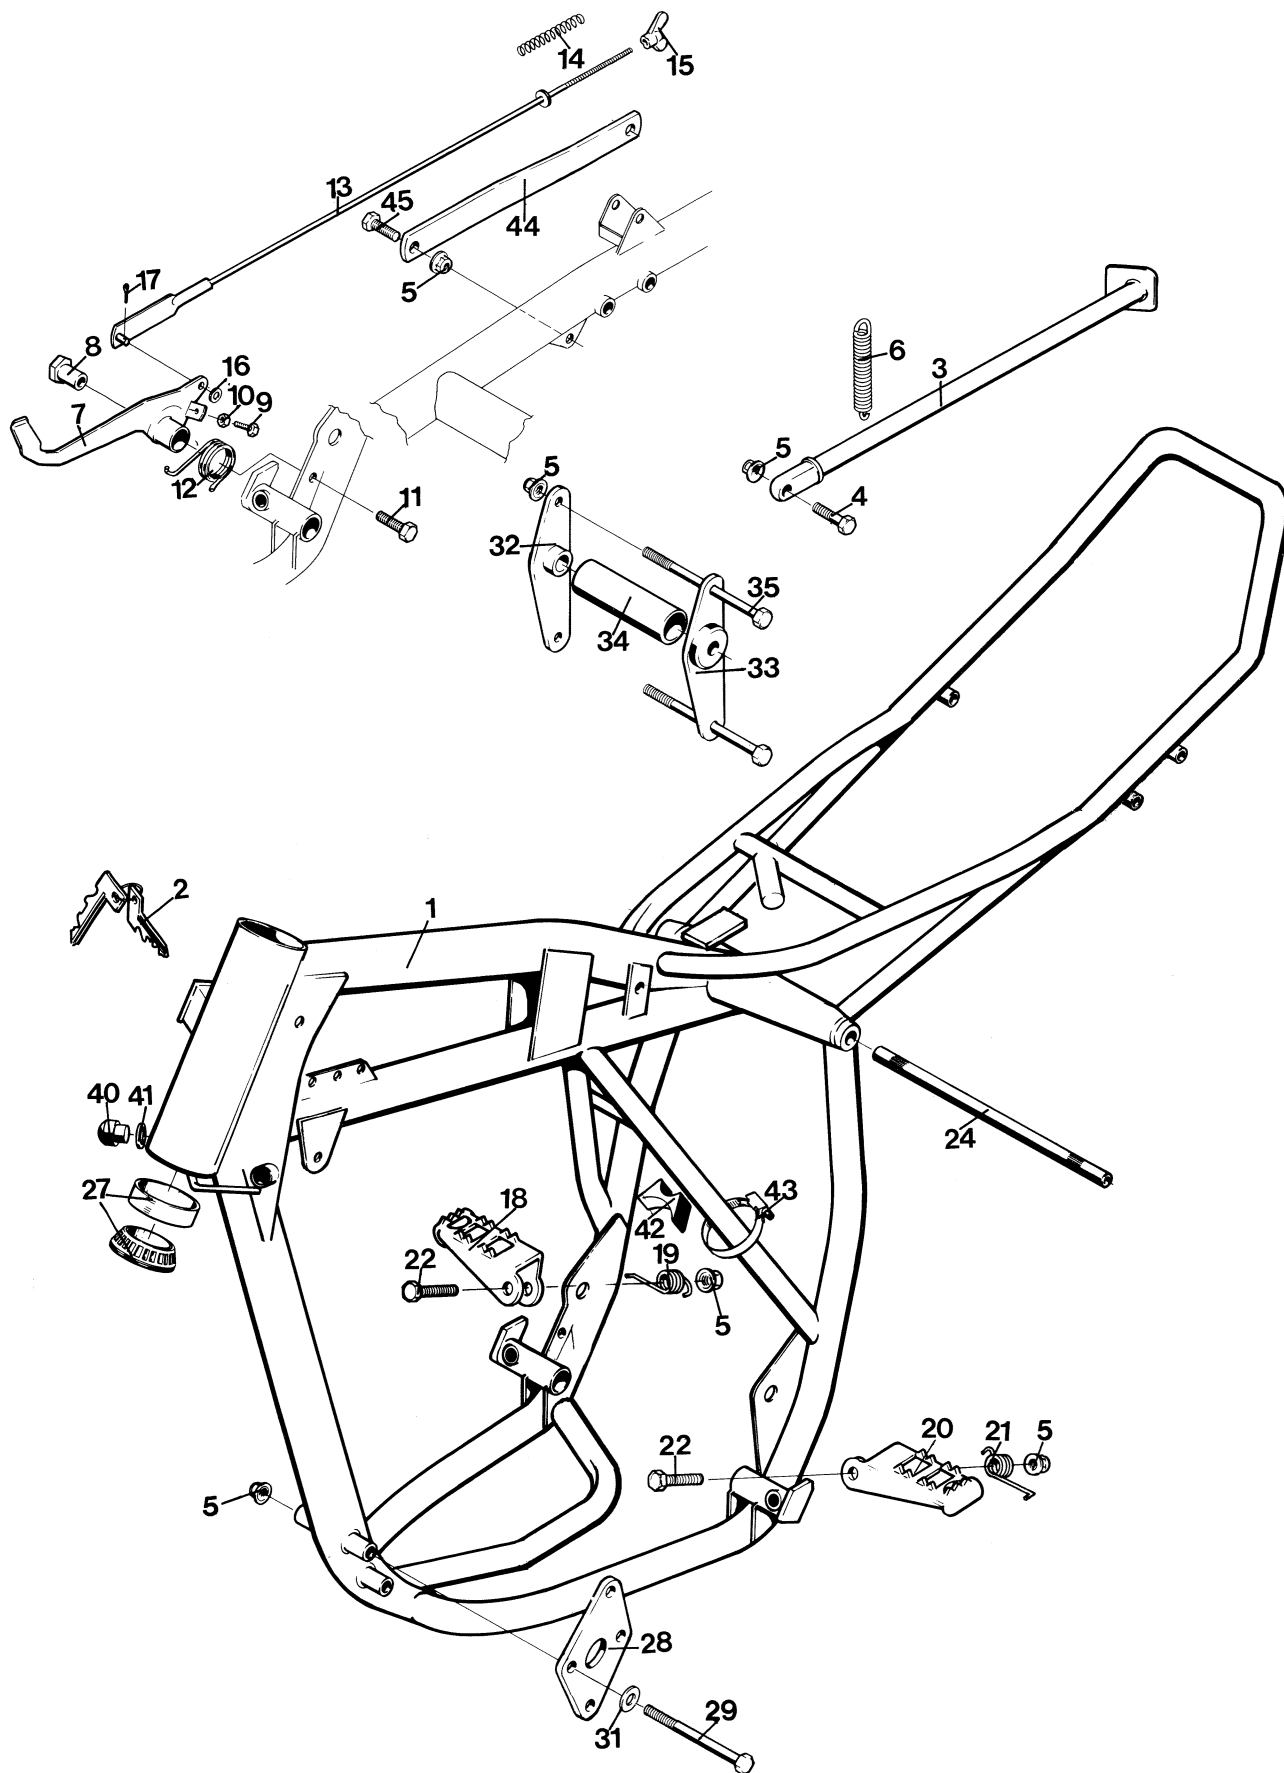


Fig.	Part Number Detaljnummer	Quantity/Antal												Description Benämning				
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
1	15 10 882-01						1	1		1		1					Ram	
	15 10 882-02		1		1						1						Frame	
2	15 13 088-01		1		1						1						Ram	
																	Frame	
3	15 10 604-01		1		1		1	1		1	1	1					Styrlås, insats	
																	Steering lock	
4	20 06 455-11		1		1		1	1		1	1	1					Parkeringsstöd	
																	Parking rest	
5	25 82 118-14		8		10		10	10		10	10	10					Skruv M8x30	
																	Screw	
6	15 10 442-01		1		1		1	1		1	1	1					Mutter M8	
																	Nut	
7	15 15 447-01		1		1		1	1		1	1	1					Fjäder	
																	Spring	
8	15 15 448-01		1		1		1	1		1	1	1					Bromspedal	
																	Brake pedal	
9	20 06 368-12		1		1		1	1		1	1	1					Bussning	
																	Bushing	
10	25 80 142-01		1		1		1	1		1	1	1					Skruv M6x16	
																	Screw	
11	20 06 455-12		1		1		1	1		1	1	1					Låsmutter M6	
																	Nut	
12	15 10 835-01		1		1		1	1		1	1	1					Skruv M8x30	
																	Screw	
13	15 15 444-02		1		1		1			1	1						Returfjäder	
	15 15 444-03							1					1				Spring	
14	12 15 160-01		1		1		1	1		1	1	1					Bromsstång	
																	Brake rod	
15	15 15 173-01		1		1		1	1		1	1	1					Bromsstång	
																	Brake rod	
16	28 16 201-01		2		2		2	2		2	2	2					Fjäder	
																	Spring	
17	28 35 255-11		1		1		1	1		1	1	1					Vingmutter	
																	Wingnut	
18	15 13 051-01		1		1		1	1		1	1	1					Bricka	
																	Washer	
19	15 13 076-01		1		1		1	1		1	1	1					Pinne	
																	Pin	
20	15 13 053-01		1		1		1	1		1	1	1					Fotstöd höger	
																	Footrest right	
21	15 13 077-01		1		1		1	1		1	1	1					Fjäder	
																	Spring	
22	20 06 462-12		2		2		2	2		2	2	2					Fotstöd vänster	
																	Footrest left	
24	15 10 787-01		1		1		1	1		1	1	1					Fjäder	
																	Spring	
25	28 01 416-01		2		2		2	2		2	2	2					Skruv M8x55	
																	Screw	
26	20 06 368-12		1		1		1	1		1	1	1					Fästbult	
																	Att. bolt	
27	15 13 070-01		2		2		2	2		2	2	2					Bricka 6,5x22	
																	Washer	
28	15 10 783-01				2		2	2									Skruv M6x16	
	15 10 784-01		2														Screw	
	15 10 838-01									2	2						Styrlager kpl.	
																	Bearing compl.	
29	20 06 472-14		4		4		4	4		4	4	4					Motorfästplåt	
																	Engine clamp plate	
31	28 16 231-01		4		4		4	4		4	4	4					Motorfästplåt	
																	Engine clamp plate	
32	15 10 665-01				1		1	1									Motorfästplåt vänster	
																	Engine clamp plate	
33	15 10 702-01				1		1	1									Distans	
																	Distance	
34	15 10 559-01				1		1	1									Skruv M8x125	
																	Screw	
35	20 06 476-14				2		2	2									Buffert	
	15 10 555-01		2		2		2	2		2	2	2					Buffer	
40																		
41	28 01 634-11		2		2		2	2		2	2	2					Bricka	
																	Washer	

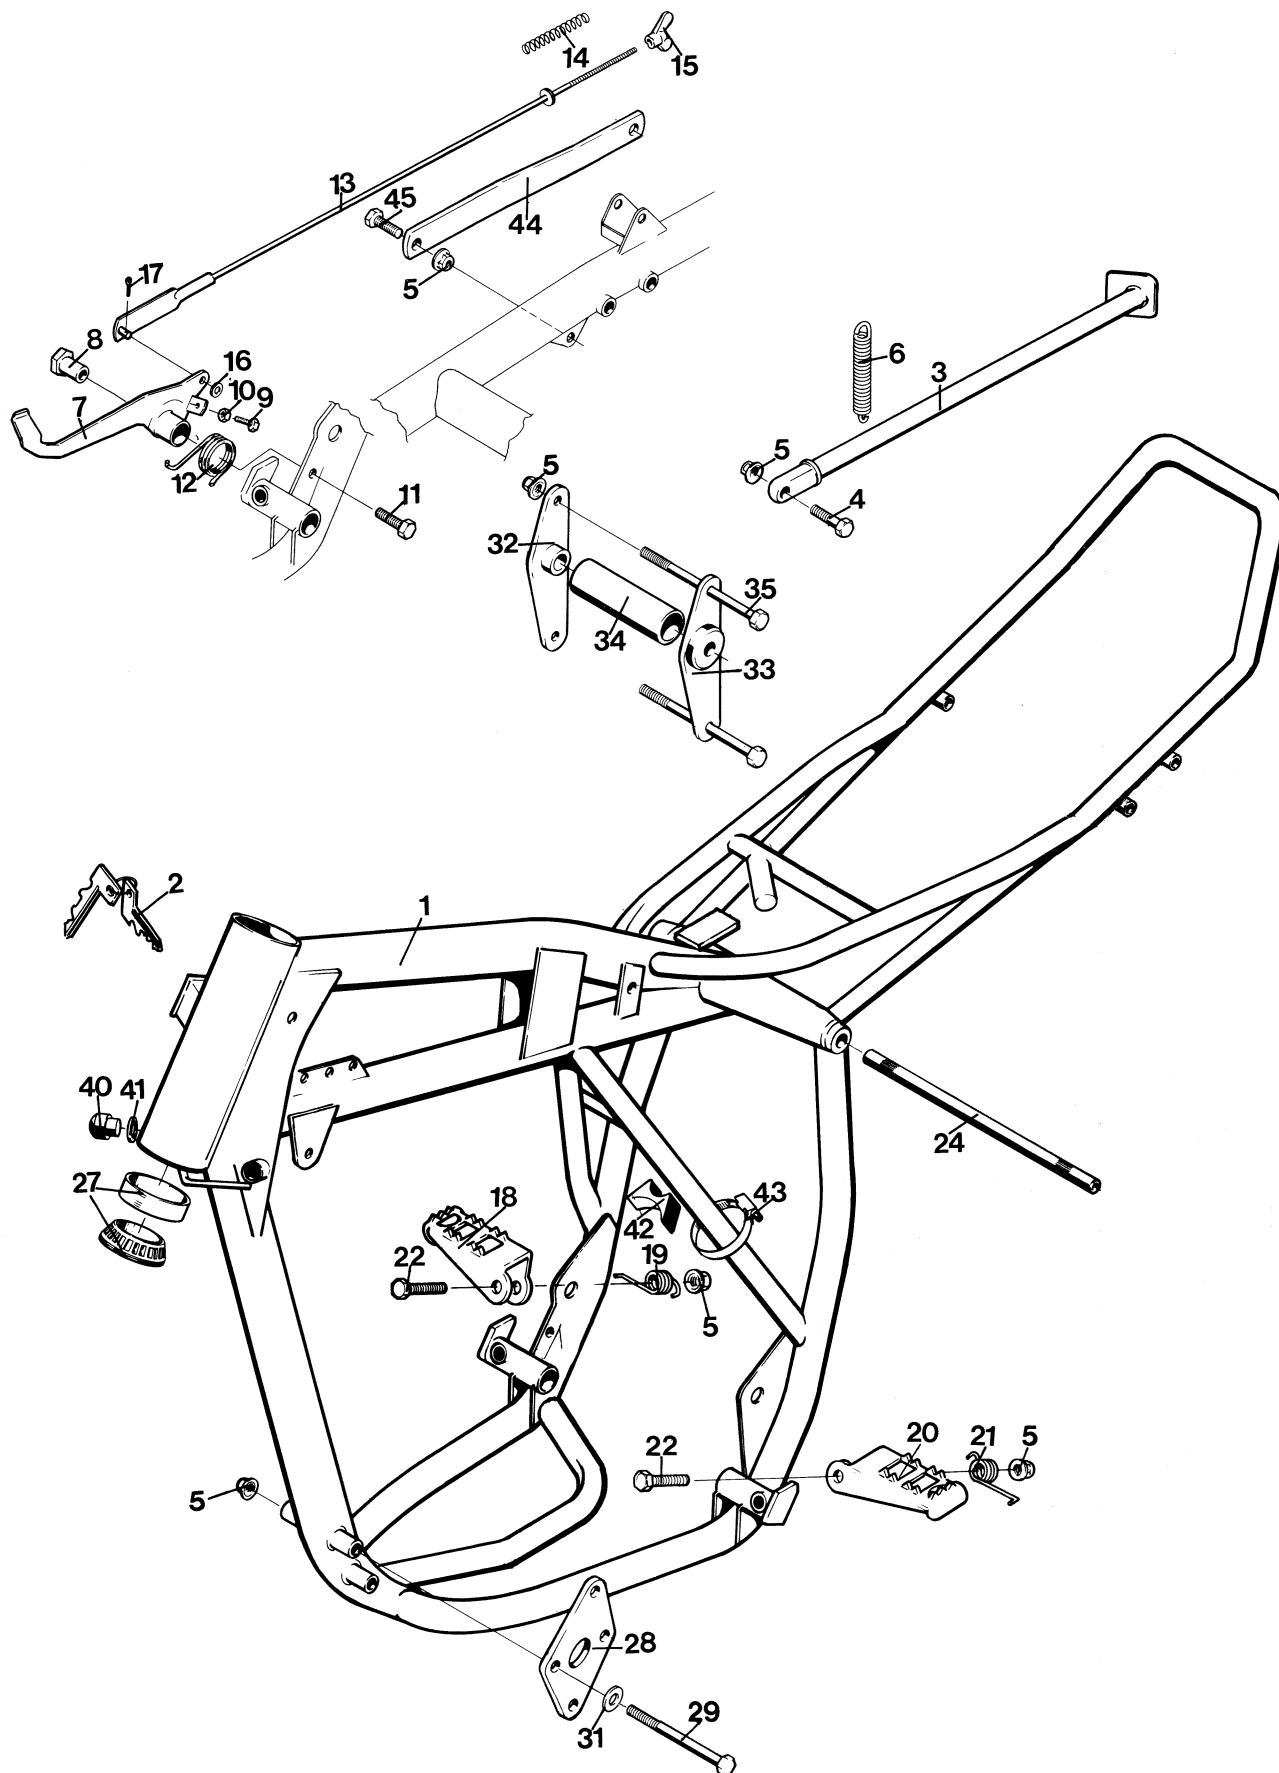


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
42	15 19 473-01		2													Reservoargummi Reservoir rubber	
43	16 13 538-01		4													Klamma Clamp	
44	15 16 794-01		1		1		1	1		1	1	1				Bromsstag Brake link	
45	20 06 461-14		1		1		1	1		1	1	1				Skruv M10x25 <i>8x50</i> Screw	

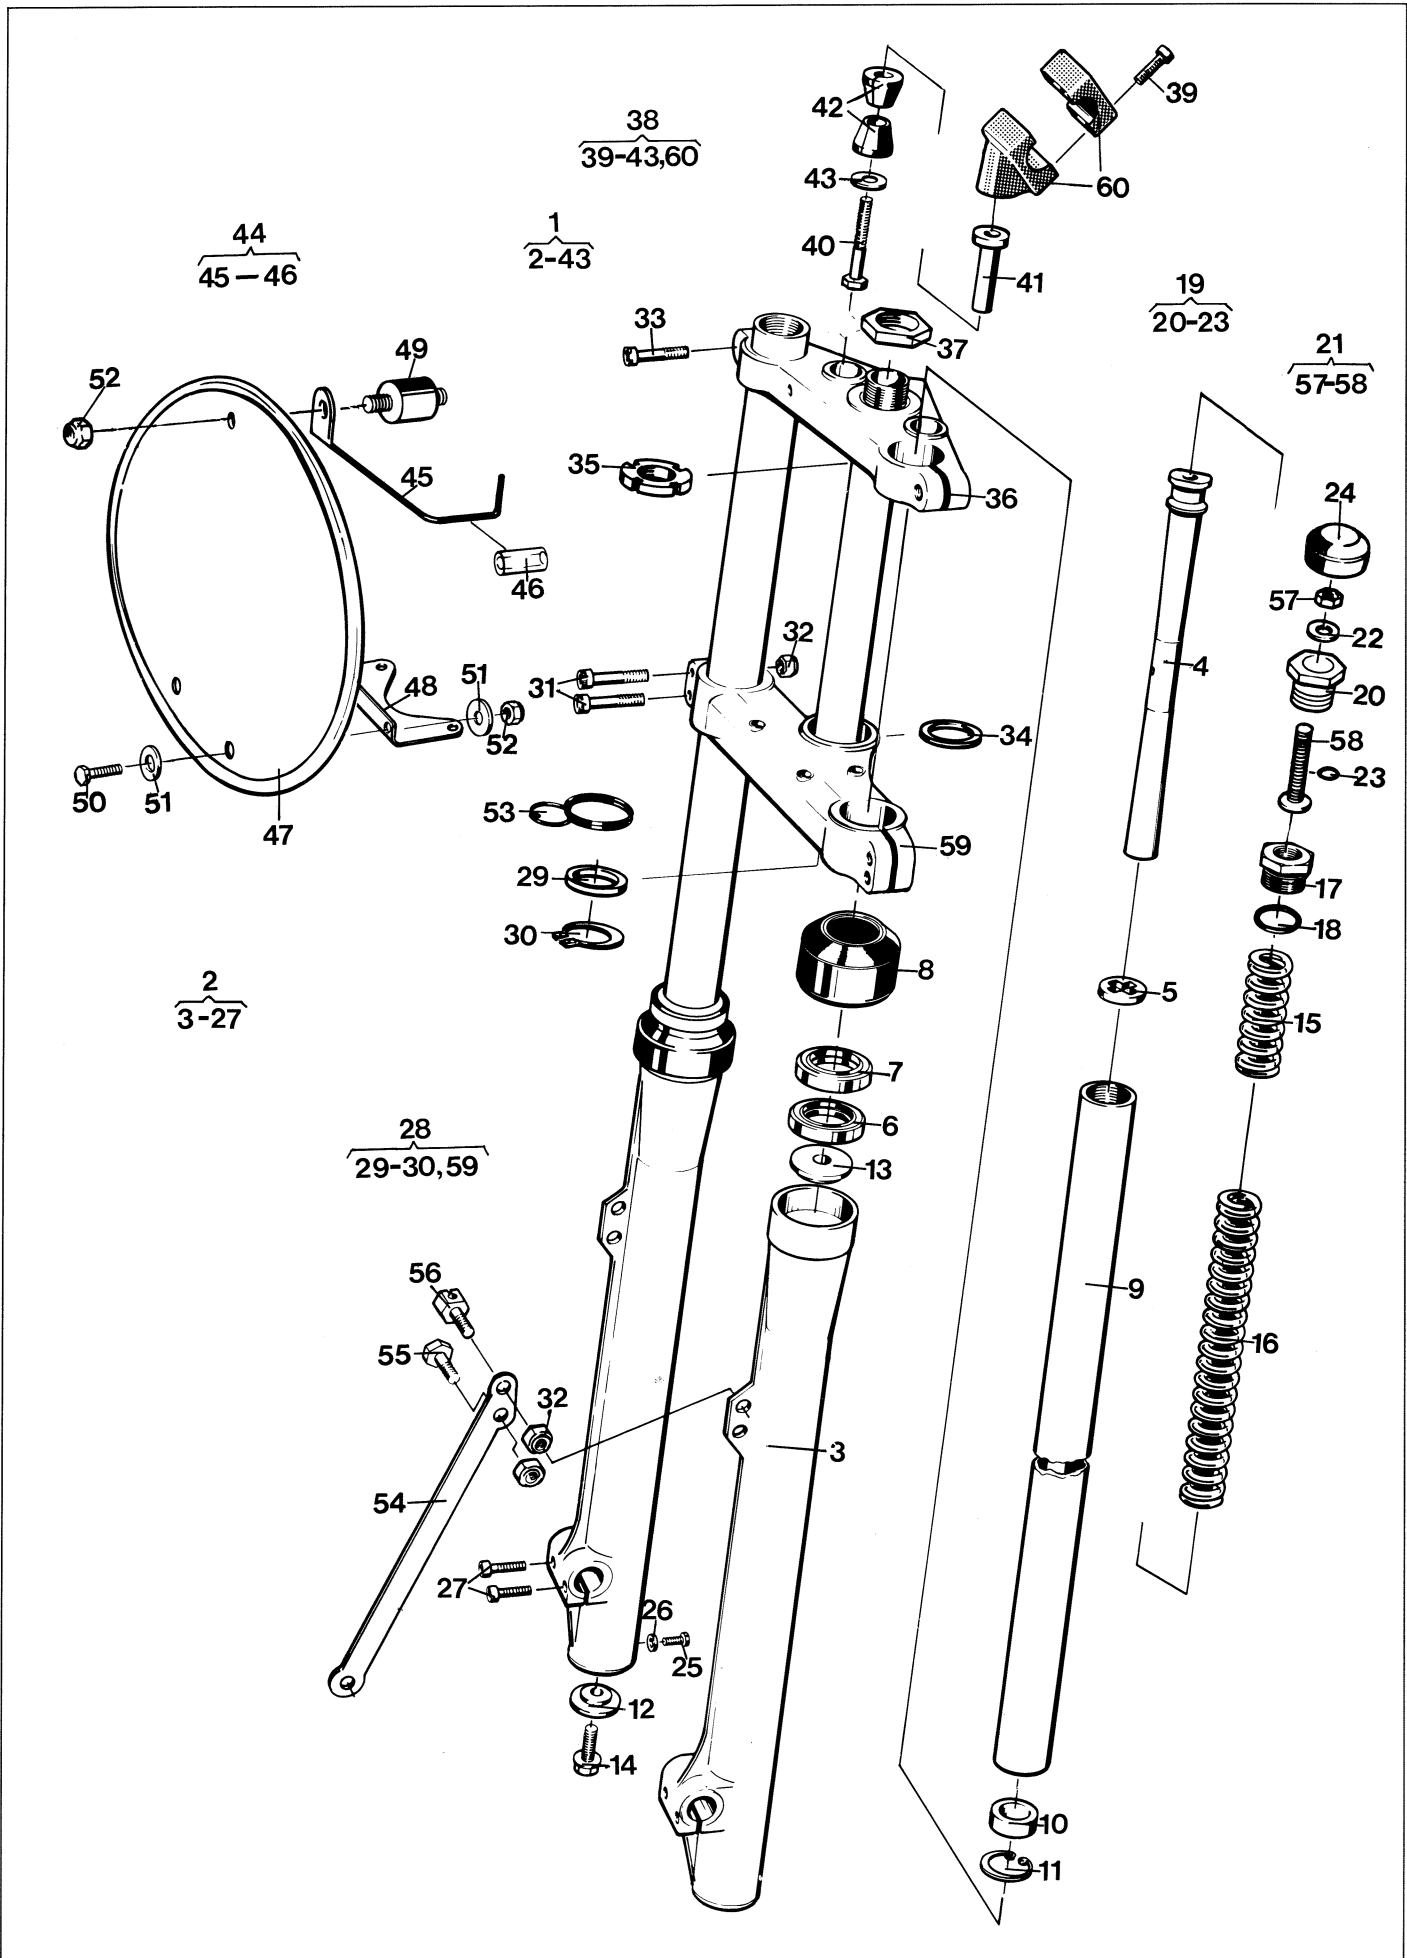


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
1	15 12 350-01	1														Framgaffel, kpl. Front fork compl.	
	15 12 350-03		1		1		1			1	1					Framgaffel, kpl. Front fork compl.	
2	15 12 342-01	2														Gaffelben, kpl. Fork leg compl.	
	15 12 342-03		2		2		2			2	2					Gaffelben, kpl. Fork leg compl.	
3	15 12 354-01	2	2		2		2			2	2					Gaffelben, nedre Fork leg lower	
4	15 12 343-01	2														Dämpspindel, kpl. (300) Damping spindle compl.	
	15 12 343-03		2		2		2			2	2					Dämpspindel, kpl. (240) Damping spindle compl.	
5	15 12 258-01	2	2		2		2			2	2					Bricka Washer	
6	15 12 042-01	2	2		2		2			2	2					Tättring Seal	
7	15 12 165-01	2	2		2		2			2	2					Tättring Seal	
8	15 12 353-01	2	2		2		2			2	2					Gummiskrapare Stripper	
9	15 12 336-01	2	2		2		2			2	2					Gaffelben, övre Fork leg upper	
10	15 12 339-01	2	2		2		2			2	2					Bottenventil Bottom valve	
11	28 22 030-01	2	2		2		2			2	2					Spårring Circlip	
12	15 12 161-01	2	2		2		2			2	2					Bricka, undre Washer lower	
13	15 12 160-01	2	2		2		2			2	2					Bricka, övre Washer upper	
14	20 06 457-12	2	2		2		2			2	2					Skruv, M8x35 Screw	
15	15 12 337-01	2	2		2		2			2	2					Fjäder, kort. Spring short	
16	15 12 307-01	2	2		2		2			2	2					Fjäder, lång Spring long	
17	15 12 338-01	2	2		2		2			2	2					Toppskruv Top screw	
18	29 70 165-03	2	2		2		2			2	2					O-ring O-ring	
19	15 12 346-01	2	2		2		2			2	2					Propp kpl. Plug compl.	
20	15 12 340-01	2	2		2		2			2	2					Propp Plug	
21	15 12 347-01	2	2		2		2			2	2					Ventil kpl. Valve compl.	
22	29 95 288-01	2	2		2		2			2	2					Bricka 8,1 x 12,5 Washer	
23	29 70 385-03	2	2		2		2			2	2					O-ring O-ring	
24	15 12 348-01	2	2		2		2			2	2					Ventilskydd Valve cover	
25	20 62 362-11	2	2		2		2			2	2					Skruv M6x8 Screw	
26	16 10 823-01	2	2		2		2			2	2					Packning Gasket	
27	20 24 372-12	4	4		4		4			4	4					Skruv M6x25 Screw	
28	15 12 322-02	1	1		1		1			1	1					Gaffelkrona kpl. Fork crown compl.	
29	15 12 325-01	1	1		1		1			1	1					Bricka Washer	
30	28 20 025-01	1	1		1		1			1	1					Spårring Circlip	
31	20 24 460-12	4	4		4		4			4	4					Skruv M8x45 Screw	
32	25 80 153-01	6	6		6		6			6	6					Låsmutter M8 Nut	
33	20 24 457-12	2	2		2		2			2	2					Skruv M8x35 Screw	
34	15 12 328-01	1	1		1		1			1	1					Distansring Distance ring	
35	15 12 327-01	1	1		1		1			1	1					Mutter Nut	
36	15 12 326-01	1	1		1		1			1	1					Gaffelkrona, övre Fork crown upper	

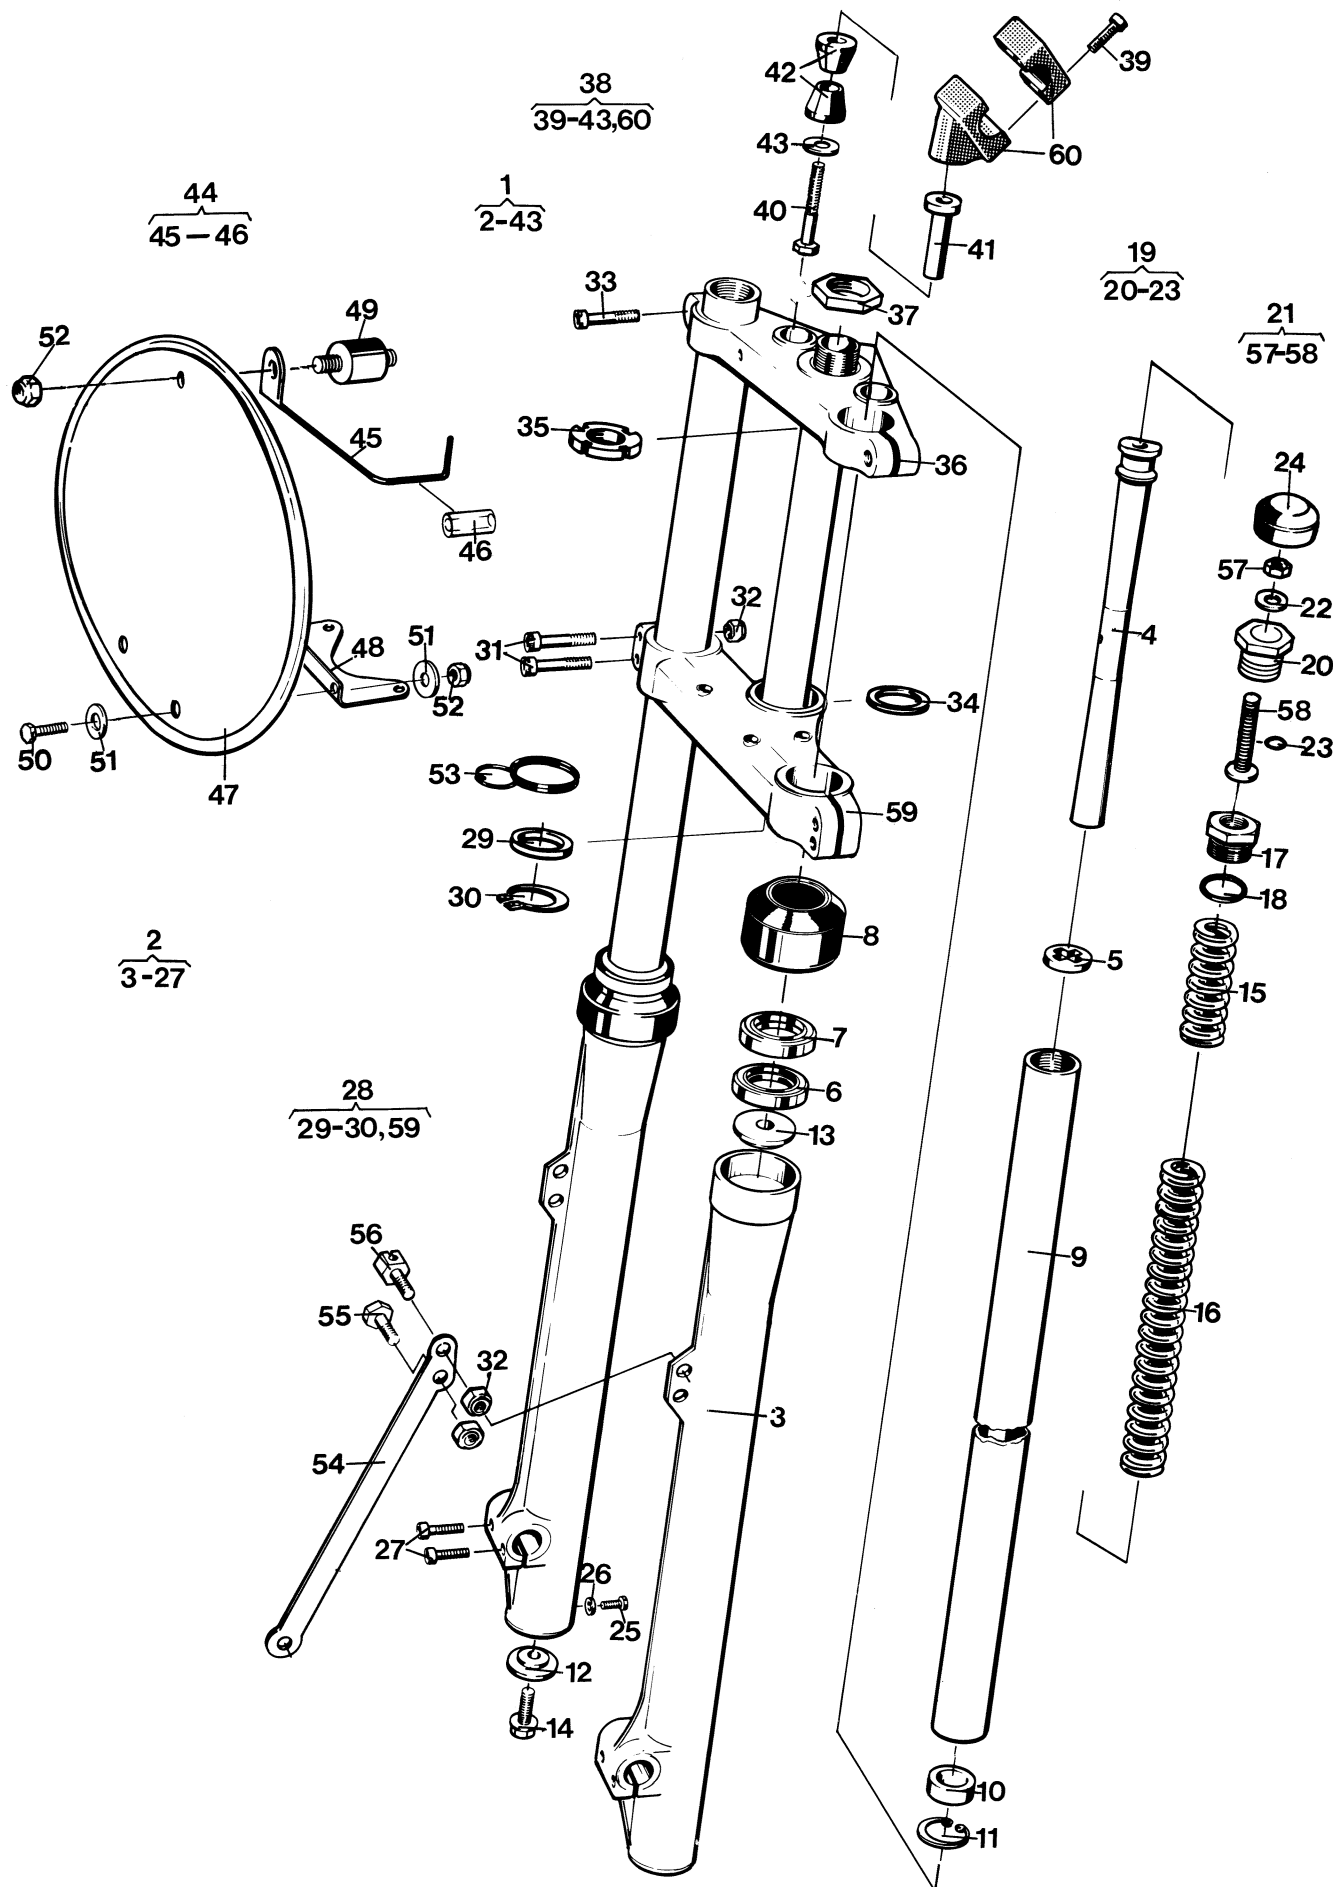


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
37	15 12 329-01	1	1		1		1			1	1					Slutmutter Nut	
38	15 12 317-01	2	2		2		2			2	2					Styrhållare, kpl. Handlebar ret compl.	
39	20 24 374-12	8	8		8		8			8	8					Skruv M6x30 Screw	
40	20 06 503-14	2	2		2		2			2	2					Skruv M10x60 Screw	
41	15 12 352-01	2	2		2		2			2	2					Distans Distance	
42	15 12 351-01	4	4		4		4			4	4					Dämpbussning Rubber element	
43	15 12 341-01	2	2		2		2			2	2					Bricka 10x26 Washer	
44	15 19 532-06	2	2		2		2			2	2					Buntband Strip	
45	15 19 532-02	2	2		2		2			2	2					Buntband Strip	
47	15 19 566-01	1														Nummerskylt Number plate	
	15 19 479-05		1		1		1			1	1					Nummerskylt Number plate	
	15 19 566-01			1		1										Nummerskylt, grön Number plate green	
49	15 17 090-01	1	1		1		1			1	1					Vibrationsdämpare Vibration damper	
53	15 19 360-01	2	2		2		2			2	2					Wire-guide Wire guide	
54	15 16 227-01		1		1		1			1	1					Bromsstag Brake link	
	15 16 744-01	1														Bromsstag Brake link	
55	20 06 451-12	1	1		1		1			1	1					Skruv M8x20 Screw	
56	15 12 315-01	1	1		1		1			1	1					Wirefäste Wire attachment	
Tillbehör/Accessories																	
4	15 12 343-02															Dämpspindel kpl. 270 Damping spindle compl.	

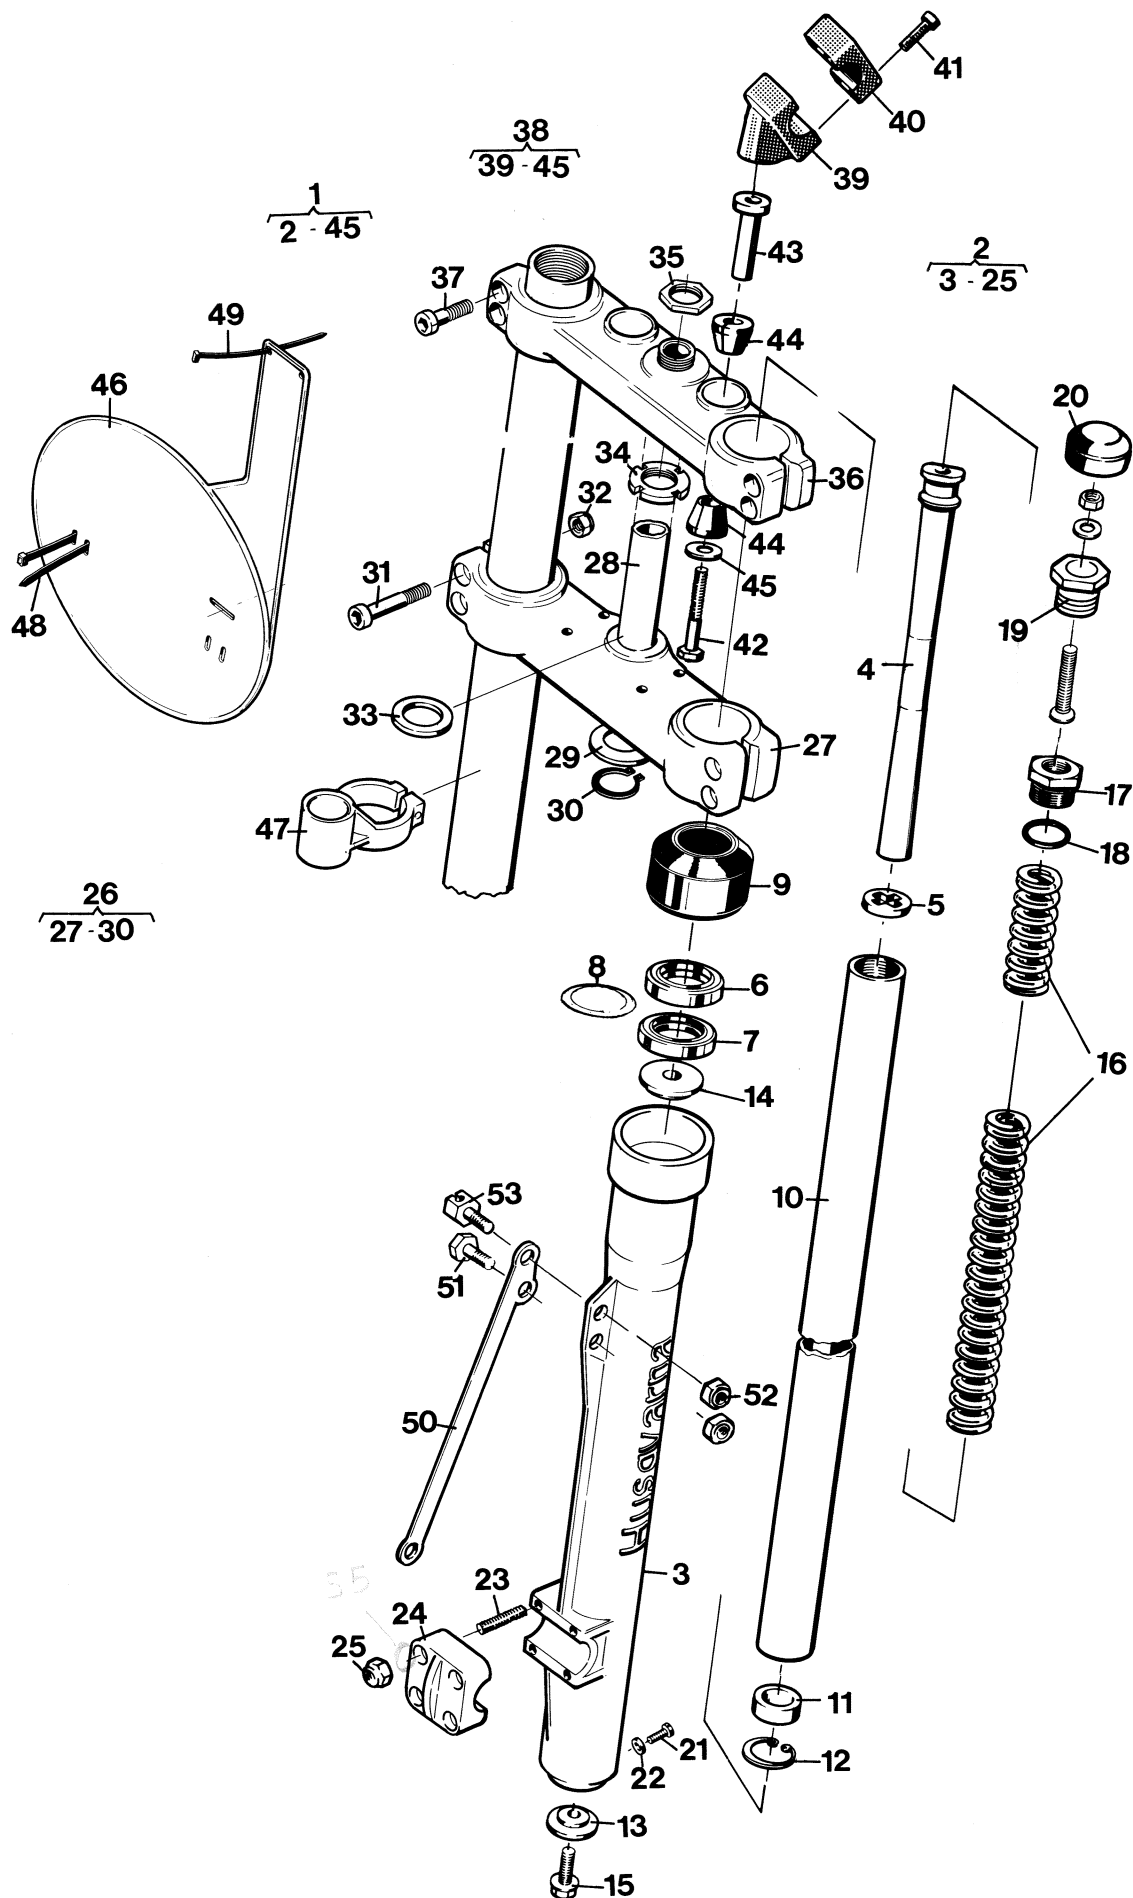


Fig.	Part Number Detaljnummer	Quantity/Antal												Description Benämning				
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
N	1	15 12 380-01			1		1		1	1			1				Framgaffel, kpl. Stroke 300 mm Front fork compl.	
N	2	15 12 385-01			2		2		2	2			2				Gaffelben, kpl. Fork leg compl.	
N	3	15 19 620-01			1		1		1	1			1				Gaffelben, nedre med pinnskruvar Fork leg,	
N	4	15 12 384-01			1		1		1	1			1				Dämpspindel, kpl. Damping spindle compl.	
N	5	15 12 373-01			1		1		1	1			1				Tätningsbricka Seal washer	
N	6	15 12 389-01			1		1		1	1			1				Tätningsring Seal	
N	7	15 12 388-01			1		1		1	1			1				Tätningsring Seal	
N	8	15 12 390-01			1		1		1	1			1				Stödbricka Washer	
N	9	15 12 372-01			1		1		1	1			1				Avstrykare Stripper	
N	10	15 12 382-01			1		1		1	1			1				Gaffelben, övre Fork leg upper	
N	11	15 12 375-01			1		1		1	1			1				Bottenventil Bottom valve	
N	12	28 22 035-01			1		1		1	1			1				Spårring Circlip	
	13	15 12 161-01			1		1		1	1			1				Bricka Washer	
N	14	15 12 376-01			1		1		1	1			1				Stödbricka Washer	
	15	20 06 457-12			1		1		1	1			1				Skruv M6S 8x35 Screw	
N	16	15 12 378-01			1		1		1	1			1				Fjäder Spring	
N	17	15 12 377-01			1		1		1	1			1				Toppskruv Top screw	
N	18	29 71 400-03			1		1		1	1			1				O-ring 31,5x3 O-ring	
N	19	15 12 346-01			1		1		1	1			1				Oljepåfyllningspropp, kpl. Plug compl.	
	20	15 12 348-01			1		1		1	1			1				Ventilskydd Valve cover	
	21	20 62 362-11			1		1		1	1			1				Skruv M 6x8 Screw	
N	22	12 25 310-01			1		1		1	1			1				Packning Gasket	
N	23	15 12 371-01			4		4		4	4			4				Pinnskruv Screw	
N	24	15 12 379-01			1		1		1	1			1				Överfall Clamp	
N	25	25 82 116-14			4		4		4	4			4				Låsmutter Nut	
N	26	15 12 386-01			1		1		1	1			1				Gaffelkrona nedre, kpl. Fork crown lower compl.	
	29	15 12 325-01			1		1		1	1			1				Bricka Washer	
	30	28 20 025-01			1		1		1	1			1				Spårring Circlip	
N	31	20 24 461-12			4		4		4	4			4				Skruv M 8x50 Screw	
	32	25 80 153-01			4		4		4	4			4				Låsmutter M8 Nut	
	33	15 12 328-01			1		1		1	1			1				Distansring Distance ring	
	34	15 12 327-01			1		1		1	1			1				Styrlagermutter Nut	
	35	15 12 329-01			1		1		1	1			1				Slutmutter Nut	
N	36	15 12 357-01			1		1		1	1			1				Gaffelkrona, övre Fork crown upper	
	37	20 24 457-12			4		4		4	4			4				Skruv M 8x35 Screw	
	38	15 12 317-01			2		2		2	2			2				Styrhållare, kpl. Handle bar ret compl.	
	39	15 13 058-01			1		1		1	1			1				Styrhållare Handle bar ret compl.	
	40	15 13 059-01			1		1		1	1			1				Överfall Clamp	
	41	20 24 374-12			4		4		4	4			4				Skruv M 6x30 Screw	

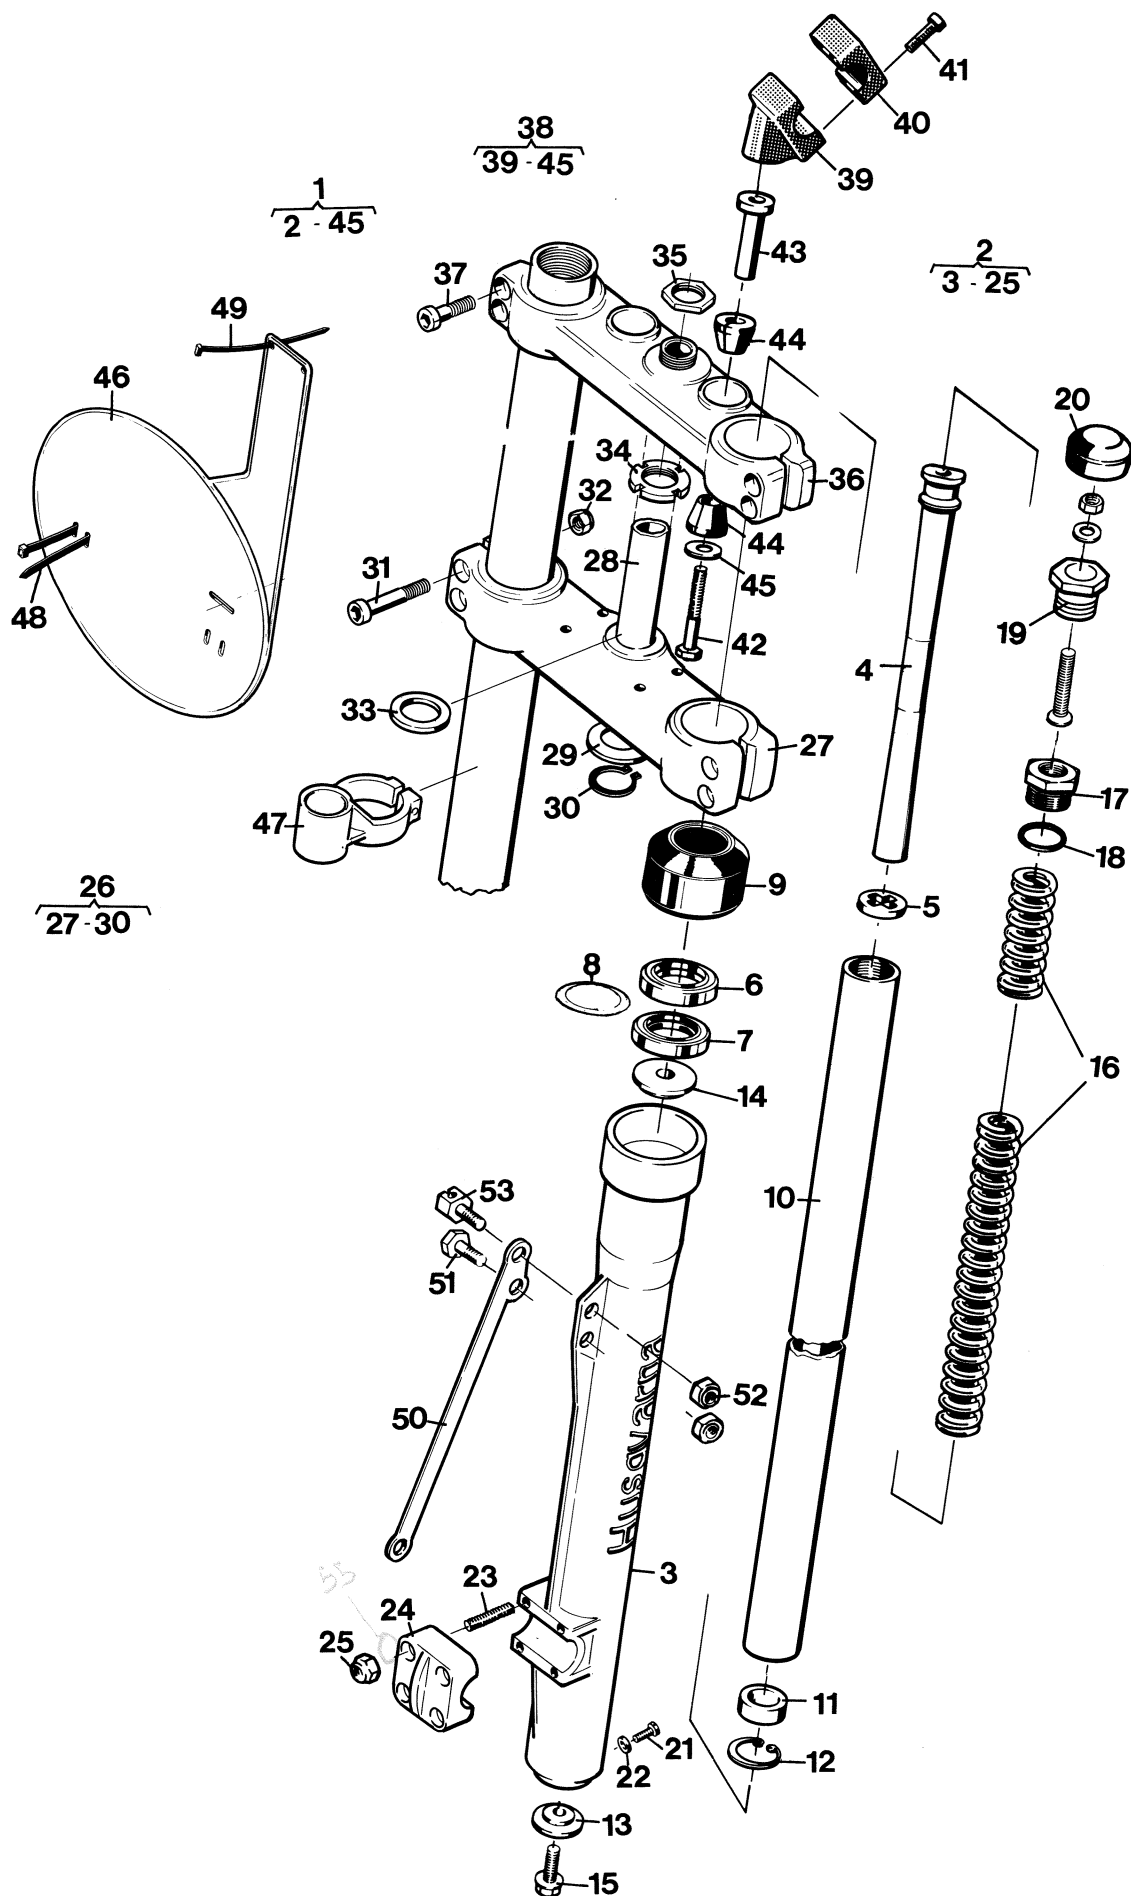


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
N	42	20 06 503-14			1		1		1	1			1				Skruv M 10x60 Screw	
	43	15 12 352-01			1		1		1	1			1				Distans Distance	
	44	15 12 351-01			2		2		2	2			2				Dämpbussning Rubber element	
	45	15 12 341-01			1		1		1	1			1				Bricka Washer	
	46	15 19 566-03			1		1		1	1							Nummerskylt, gul Number plate yellow	
		15 19 566-01											1				Nummerskylt, gul Number plate yellow	
		15 19 479-05									1	1					Nummerskylt, gul Number plate yellow	
	47	15 12 391-01			2		2		2	2			2				Wirestyrare Wire guide	
	48	15 19 532-06			2		2		2	2			2				Buntband Strip	
	49	15 19 532-02			2		2		2	2			2				Buntband Strip	
50	15 16 227-01	1	1	1	1	1	1	1	1	1	1	1				Bromsstag Brakelink		
51	20 06 451-12	1	1	1	1	1	1	1	1	1	1	1				Skruv M8x20 Screw		
52	25 80 153-01	2	2	2	2	2	2	2	2	2	2	2				Mutter Nut		
53	15 12 315-01	1	1	1	1	1	1	1	1	1	1	1				Vajerfäste Wire attachment		
55	25 10 200-02	4	4	4	4	4	4	4	4	4	4	4				WASHER		

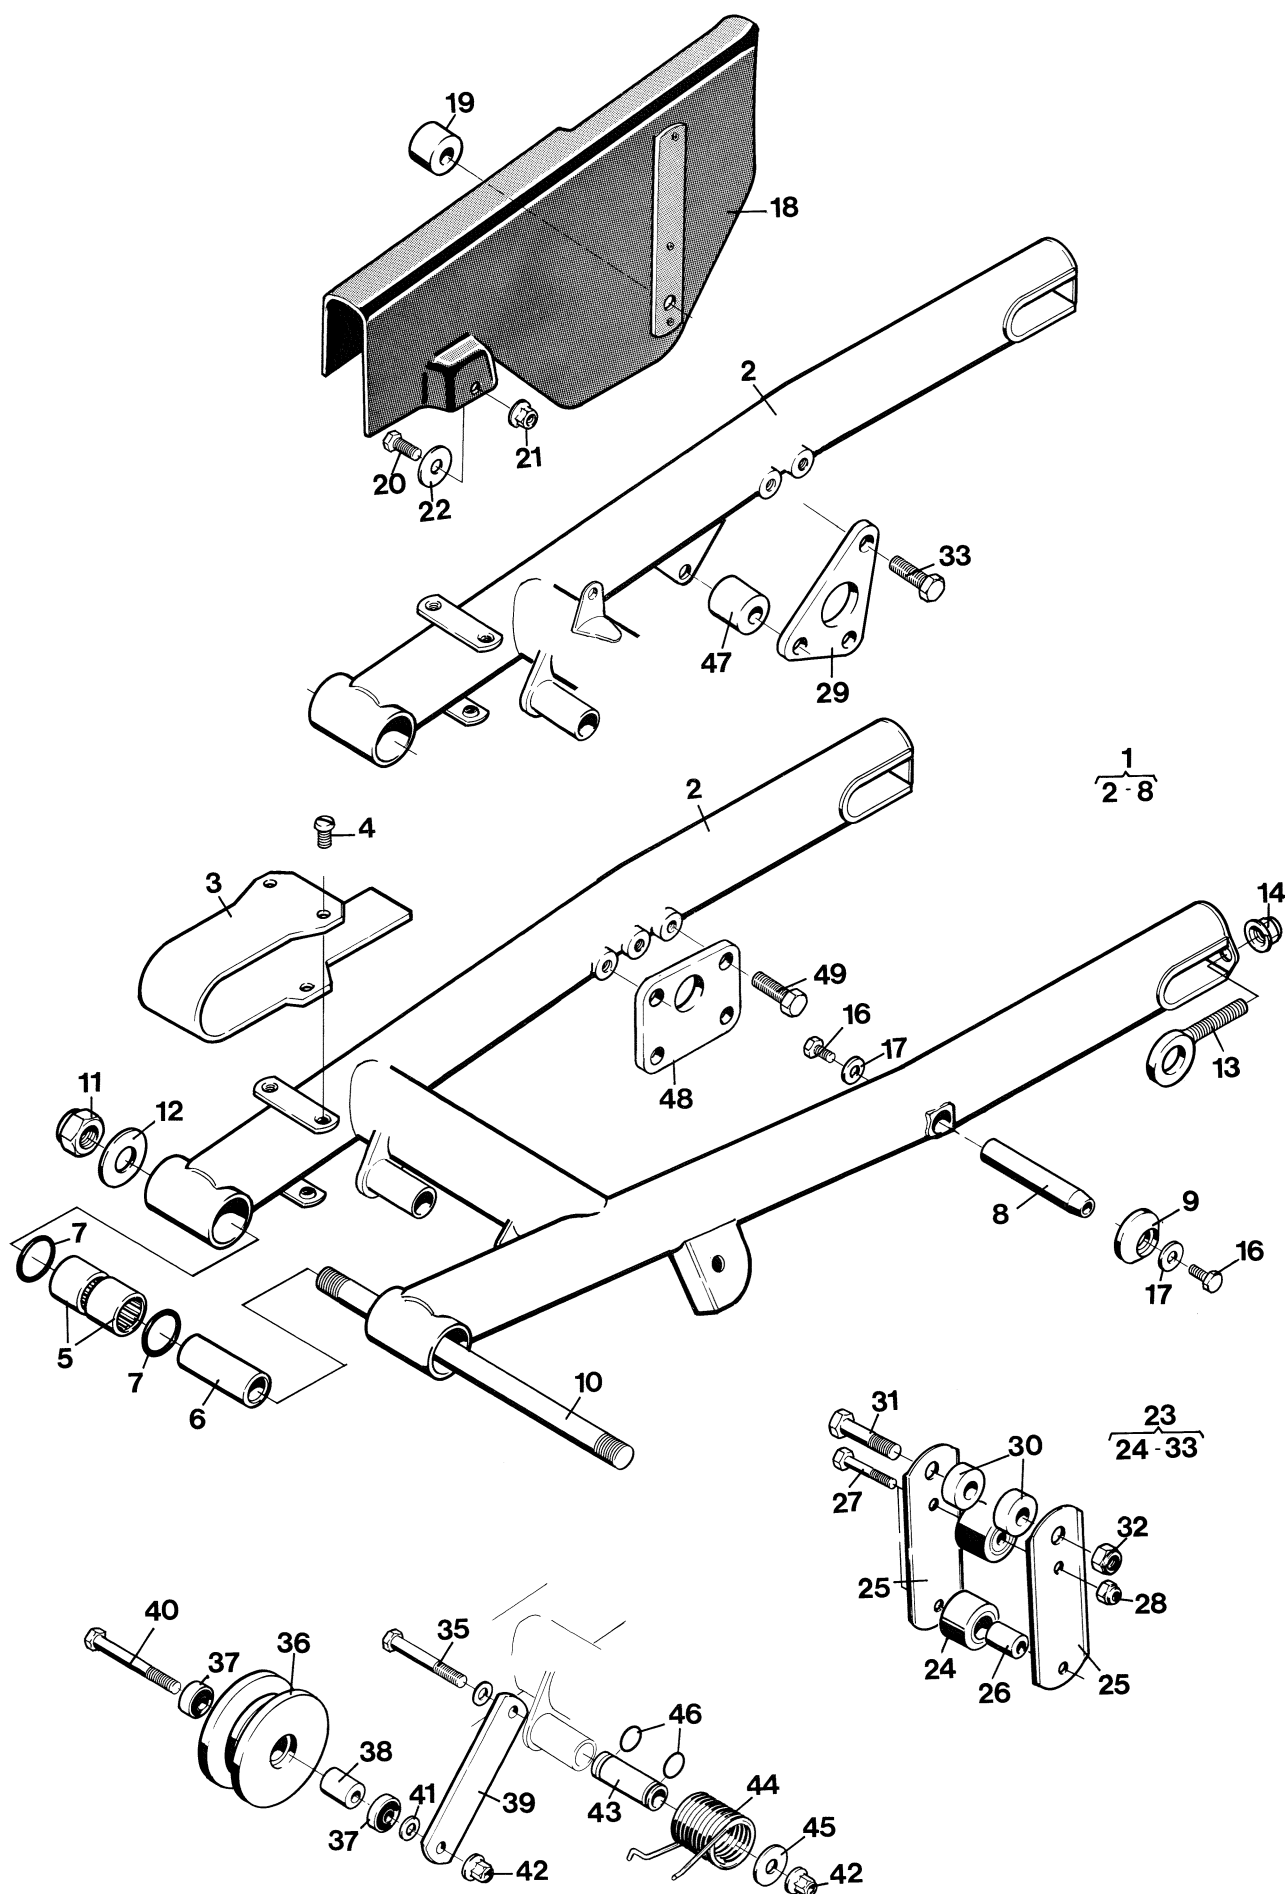


Fig.	Part Number Detaljnummer	Quantity/Antal													Description Benämning			
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
N	1	15 10 911-01	1		1		1			1						Bakgaffel, kpl. Rear fork compl.		
		15 10 911-02						1					1			Bakgaffel, kpl. Rear fork compl.		
		15 10 801-01		1												Bakgaffel, kpl. Rear fork compl.		
		15 10 951-01				1		1			1	1				Bakgaffel, kpl. Rear fork compl.		
	3	15 10 906-01	1	1	1	1	1	1	1	1	1	1				Slitskydd Wear cover		
	4	20 62 362-11	4	4	4	4	4	4	4	4	4	4				Skruv Screw		
	5	15 10 607-01	4	4	4	4	4	4	4	4	4	4				Nållager Needle bearing		
	6	15 10 778-01	2	2	2	2	2	2	2	2	2	2				Lagerdistans Distance		
	7	29 71 200-03	4	4	4	4	4	4	4	4	4	4				O-ring O-ring		
N	8	15 10 918-01	2	2	2	2	2	2	2	2	2	2				Fästbult Att. bolt		
N	9	15 10 958-01	2	2	2	2	2	2	2	2	2	2				Bricka Washer		
	10	15 10 774-01	1	1	1	1	1	1	1	1	1	1				Fästbult Att. bolt		
	11	25 81 170-12	2	2	2	2	2	2	2	2	2	2				Låsmutter Nut		
	12	15 10 621-01	2	2	2	2	2	2	2	2	2	2				Bricka Washer		
	13	15 10 730-01	2	2	2	2	2	2	2	2	2	2				Kedjesträckare Chain tensioner		
	14	25 82 118-14	2	2	2	2	2	2	2	2	2	2				Mutter Nut		
	16	20 06 364-12	4	4	4	4	4	4	4	4	4	4				Skruv Screw		
	17	28 16 211-01	2	2	2	2	2	2	2	2	2	2				Bricka Washer		
N	18	15 18 220-01		1		1		1			1	1				Kedjeskydd Chain guard		
N	19	15 15 457-01		1		1		1			1	1				Distans Distance		
	20	20 06 368-12		1		1		1			1	1				Skruv Screw		
	21	25 82 116-14		1		1		1			1	1				Låsmutter Nut		
	22	28 01 416-01		1		1		1			1	1				Bricka Washer		
	23	15 15 459-01 15 15 438-00	1	1	1	1	1	1	1		1	1	1			Kedjestyrare, kpl. Chain guide compl.		
									1							Kedjestyrare, kpl. Chain guide compl.		
	24	15 15 412-01	2	2	2	2	2	2	2	2	2	2				Kedjestyrarrulle Roller		
	26	15 15 413-01	2	2	2	2	2	2	2	2	2	2				Distanshylsa Distance sleeve		
	27	20 06 376-12	2	2	2	2	2	2	2	2	2	2				Skruv Screw		
	28	25 80 142-01	2	2	2	2	2	2	2	2	2	2				Låsmutter M8 Nut		
	29	15 15 458-01		1		1		1	1	1	1	1				Länk Link		
	30	15 15 440-01	2	2	2	2	2	2	2	2	2	2				Distans Distance		
	31	20 06 457-12	1	1	1	1	1	1	1	1	1	1				Skruv Screw		
	32	25 80 153-01	1	1	1	1	1	1	1	1	1	1				Låsmutter M8 Nut		
	33	20 06 378-12		2		2		2			2	2				Skruv Screw		
	35	20 06 382-12	1	1	1	1	1	1	1	1	1	1				Skruv Screw		
	36	15 15 451-01	1	1	1	1	1	1	1	1	1	1				Spännarrulle Tension wheel		
	37	29 31 125-39	2	2	2	2	2	2	2	2	2	2				Kullager Ball bearing		
	38	15 15 455-01	1	1	1	1	1	1	1	1	1	1				Lagerdistans Distance		
	39	15 15 452-01	1	1	1	1	1	1	1	1	1	1				Länk Link		

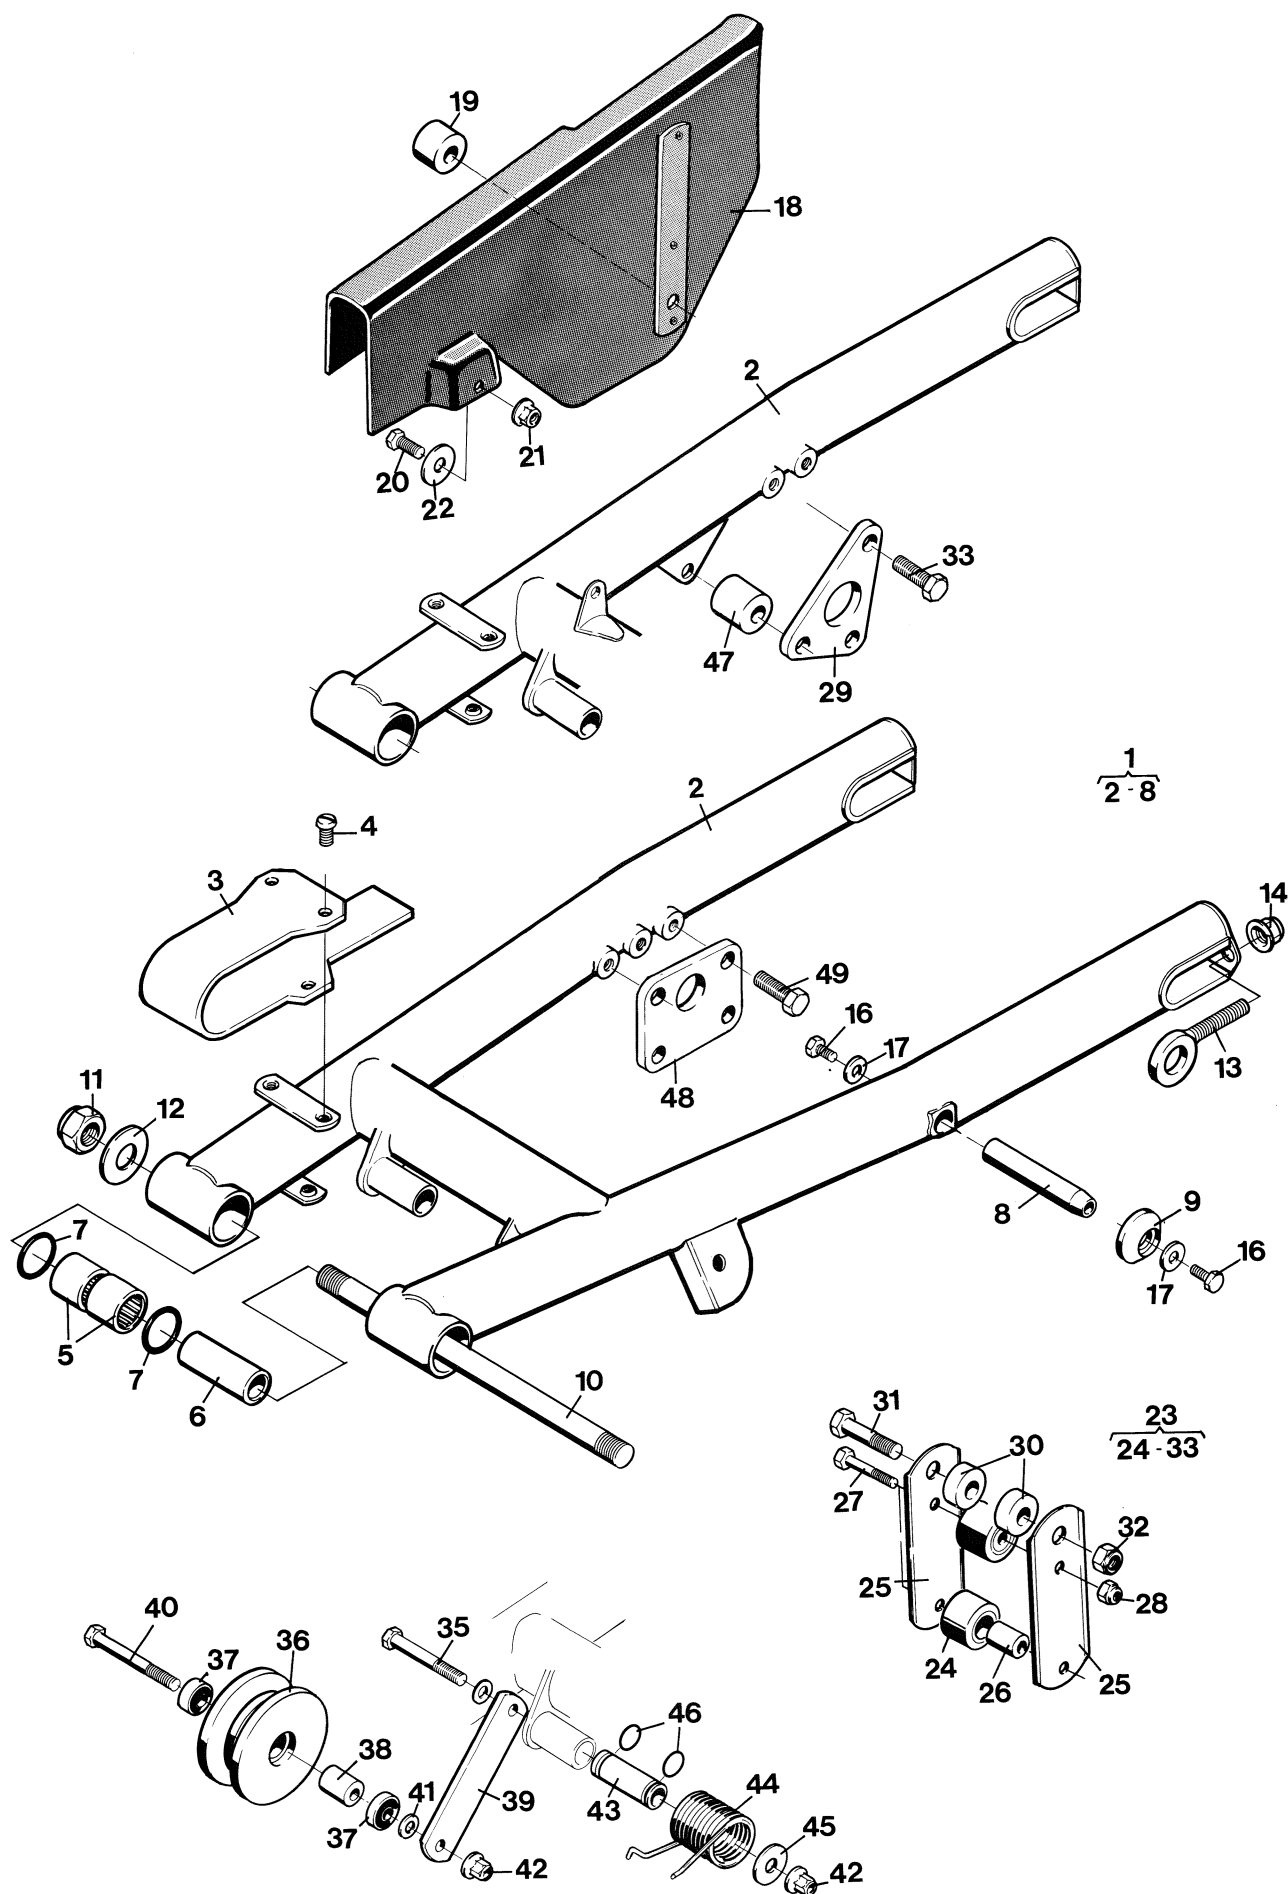


Fig.	Part Number Detaljnummer	Quantity/Antal												Description Benämning			
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
40	20 06 380-12	1	1	1	1	1	1	1	1	1	1	1				Skruv Screw	
41	28 16 201-01	2	2	2	2	2	2	2	2	2	2	2				Bricka Washer	
42	25 82 116-14	2	2	2	2	2	2	2	2	2	2	2				Mutter Nut	
43	15 15 453-01	1	1	1	1	1	1	1	1	1	1	1				Lagringsdistans Distance	
44	15 15 454-01	1	1	1	1	1	1	1	1	1	1	1				Spännfjäder Spring	
45	28 01 416-01	1	1	1	1	1	1	1	1	1	1	1				Bricka Washer	
46	29 70 404-03	2	2	2	2	2	2	2	2	2	2	2				O-ring O-ring	
47	15 15 424-01		1		1		1			1	1					Distans Distance	
48	15 15 441-01	1		1		1		1	1			1				Fästplåt Plate	
49	20 06 453-12		2		2		2			2	2					Skruv M 8x25 Screw	

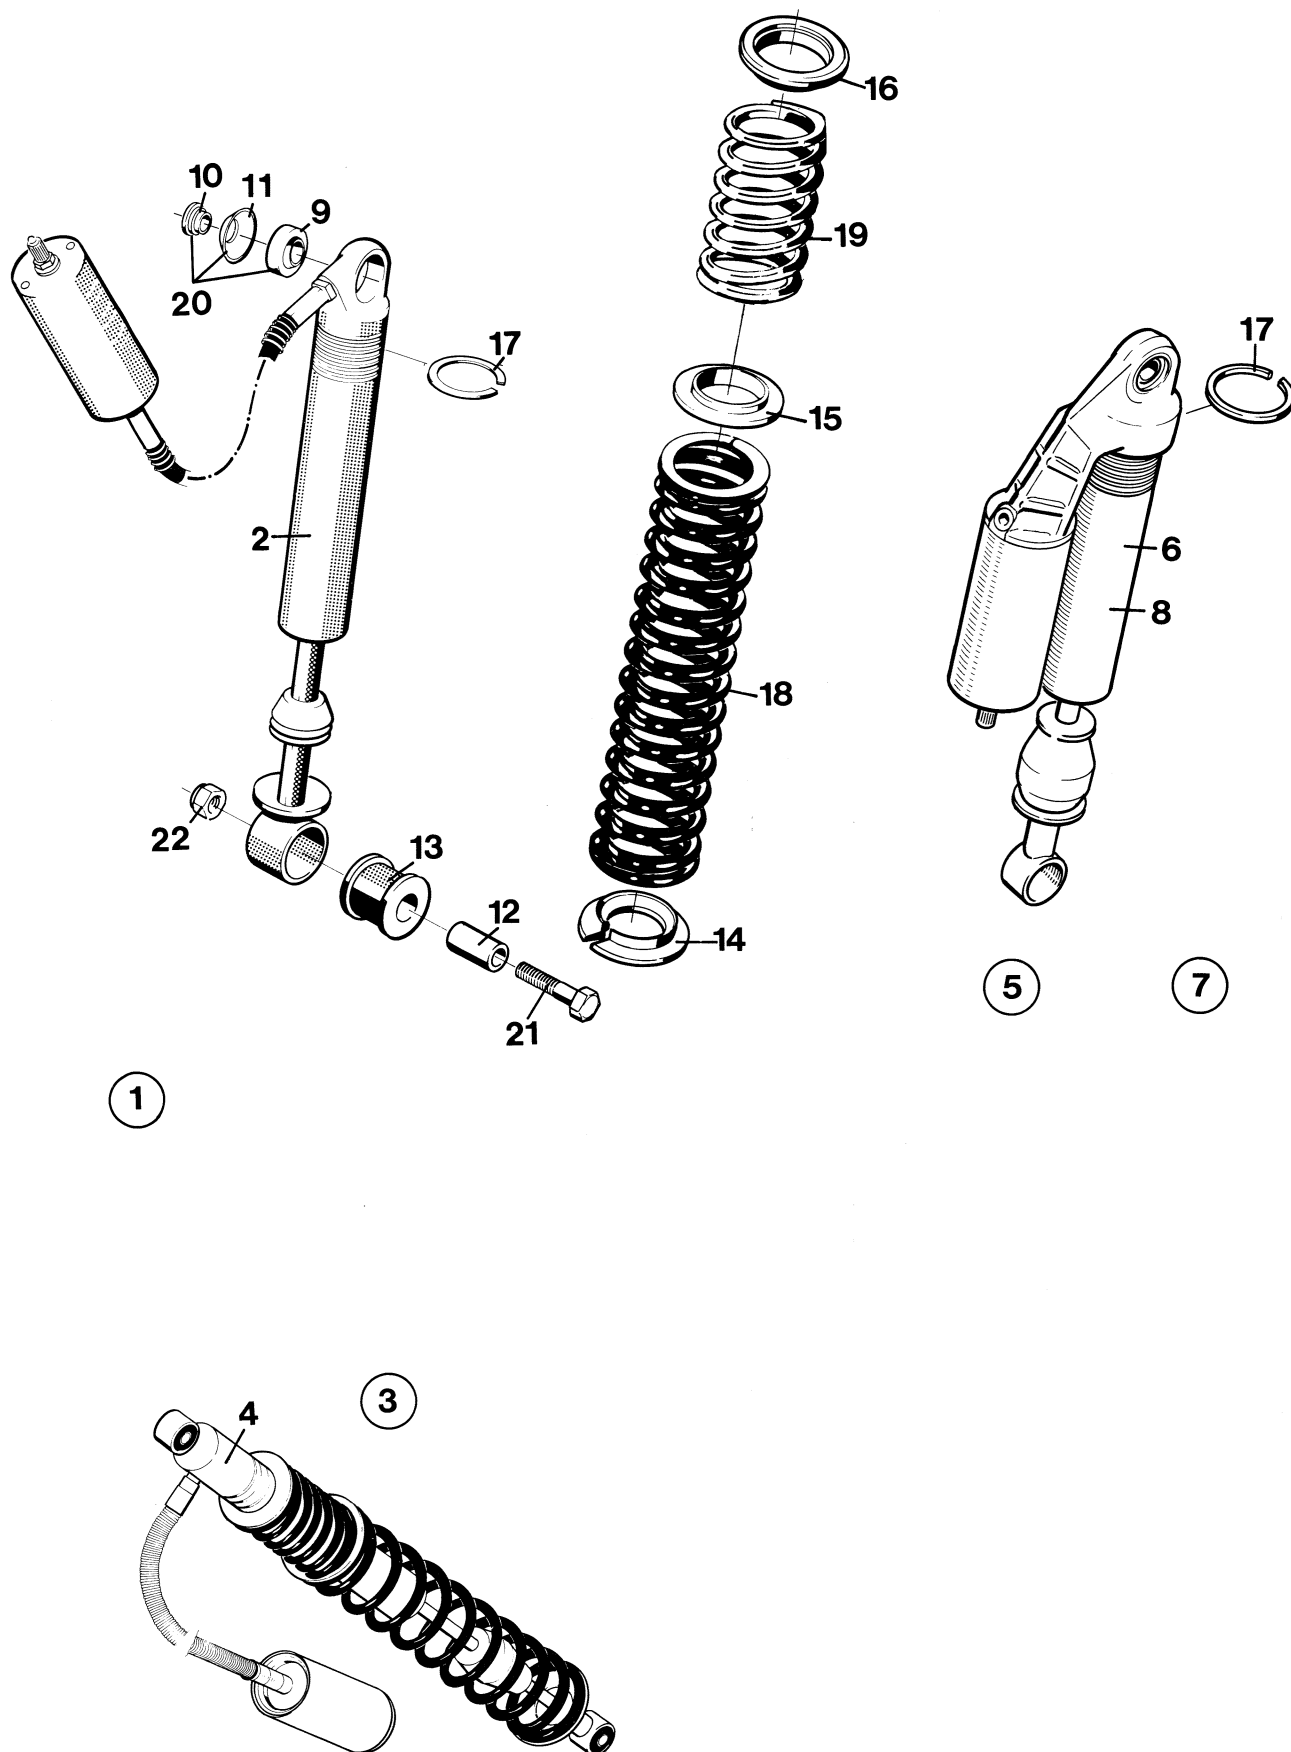


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
N	1	15 10 936-01		2													Stötdämpare komplett Corto-Cosso Chock absorber cpl	
N	2	15 10 937-01		2													Stötdämpare utan fjädrar Chock absorber (without spring)	
N	3	15 10 925-01	2														Stötdämpare komplett Koni Chock absorber cpl	
N	4	15 10 926-01	2														Stötdämpare med kuller (utan fjädrar) Chock absorber (without spring)	
N	5	15 10 919-01			2		2		2	2			2				Stötdämpare komplett Öhlin (437 mm) Chock absorber cpl	
N	6	15 10 920-01			2		2		2	2			2				Stötdämpare (utan fjädrar) Chock absorber (without spring)	
N	7	15 10 955-01				2		2			2	2					Stötdämpare komplett Öhlin (412 mm) Chock absorber cpl	
N	8	15 10 956-01				2		2			2	2					Stötdämpare (utan fjädrar) Chock absorber (without spring)	
N	9	15 10 933-01		1													Kuller Attachment compl	
N	10	15 10 939-01		2													Distans Distance	
N	11	15 10 934-01		2													Spårring Circlip	
N	12	15 10 941-01		1													Hylsa Distance	
		15 10 948-01	2														Hylsa Distance	
		15 10 922-01			1	1	1	1	1	1	1	1	1				Hylsa Distance	
13		15 10 940-01		1													Gummibussning Rubber bushing	
		15 10 709-01			1	1	1	1	1	1	1	1	1	1			Gummibussning Rubber bushing	
14		15 10 944-01		1													Fjäderclips Circlip	
		15 10 928-01	1															
		15 10 705-01			1	1	1	1	1	1	1	1	1	1				
15		15 10 943-01		1													Mellanbricka Washer	
		15 10 929-01	1															
		15 10 710-01			1	1	1	1	1	1	1	1	1	1				
16		15 10 942-01		1													Fjäderclips Circlip	
		15 10 930-01	1															
		15 10 704-01			1	1	1	1	1	1	1	1	1	1				
17		15 10 945-01		1													Spårring Circlip	
		15 10 924-01																
		15 10 733-01			1	1	1	1	1	1	1	1	1	1				
18		15 10 946-01		1													Fjäder lång Spring	
		15 10 931-02	1														Fjäder lång Spring	
		15 10 688-05			1		1		1	1			1				Fjäder lång Spring	
		15 10 898-01				1		1			1	1					Fjäder lång Spring	
19		15 10 947-01		1													Fjäder kort Spring	
		15 10 932-02	1														Fjäder kort Spring	
		15 10 793-03			1		1		1	1			1				Fjäder kort Spring	
		15 10 689-02				1		1			1	1					Fjäder kort Spring	
20		15 10 927-01	2														Kuller komplett Attachment compl	
		15 10 816-01			1	1	1	1	1	1	1	1	1					
21		20 06 459-14	2														Skruv M 8x40 Screw	
22		25 80 153-01	2														Låsmutter M 8 Nut	

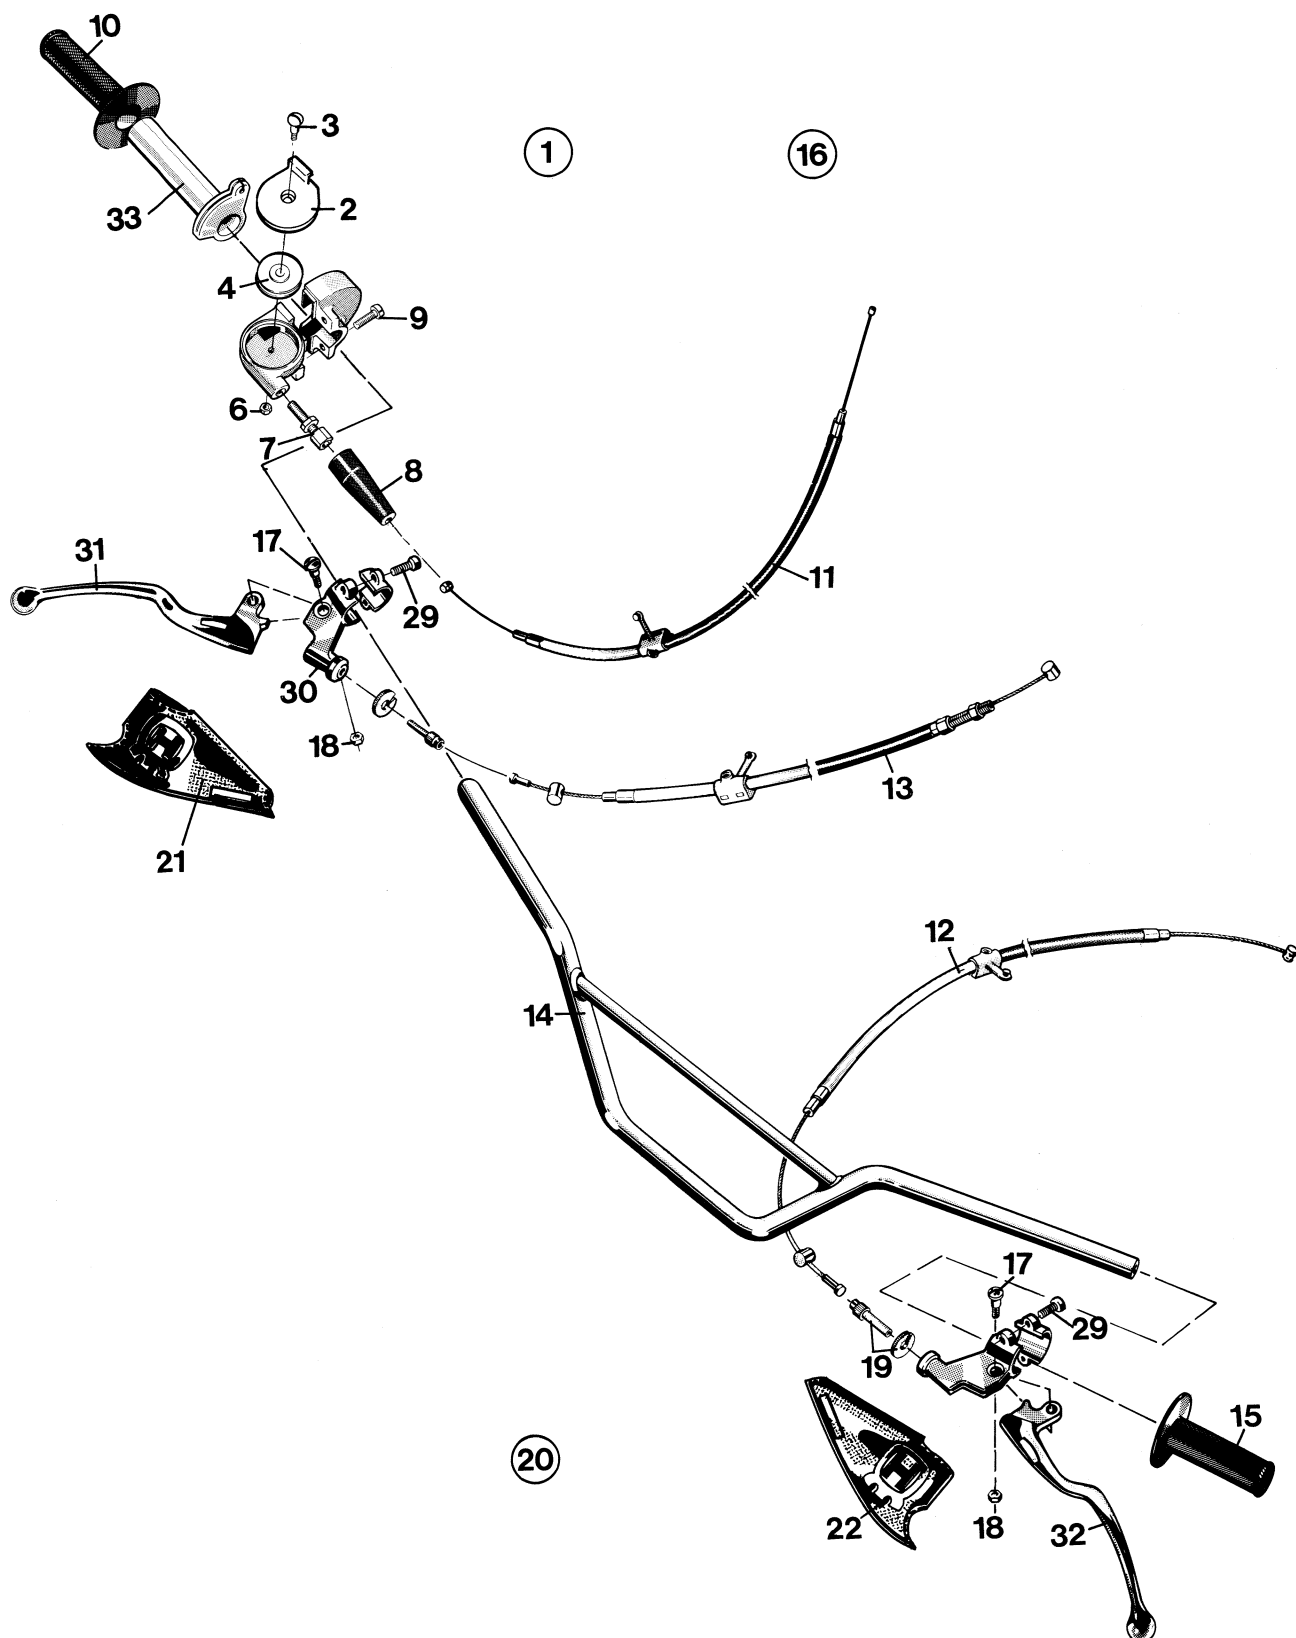


Fig.	Part Number Detaljnummer	Quantity/Antal													Description Benämning		
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
1	15 15 278-01	1	1	1	1	1	1	1	1	1	1	1				Gashandtag, kpl. Throttle handle compl.	
2	15 15 281-01	1	1	1	1	1	1	1	1	1	1	1				Skyddslock Protec washer	
3	15 15 282-01	1	1	1	1	1	1	1	1	1	1	1				Skruv ScRew	
4	15 15 283-01	1	1	1	1	1	1	1	1	1	1	1				Brytrulle Plastic roller	
5	15 15 287-01	1	1	1	1	1	1	1	1	1	1	1				Packning Gasket	
6	25 80 118-01	1	1	1	1	1	1	1	1	1	1	1				Låsmutter M4 Nut	
7	15 15 261-01	1	1	1	1	1	1	1	1	1	1	1				Justernippel Nipple	
8	15 15 262-01	1	1	1	1	1	1	1	1	1	1	1				Skyddshylsa Protecting sleeve	
9	20 62 329-12	2	2	2	2	2	2	2	2	2	2	2				Skruv M5x16 Screw	
10	15 15 266-01	1	1	1	1	1	1	1	1	1	1	1				Gummihandtag höger Rubber handle right	
11	15 15 277-01			1	1	1	1	1	1	1	1	1				Gaswire, kpl. Throttle wire	
	15 15 277-02	1	1														
12	15 15 308-01	1	1													Frikopplingswire, kpl. Declutching wire	
	15 15 308-02			1	1	1	1	1	1	1	1	1					
13	15 15 022-01	1		1		1		1	1			1				Bromswire, kpl. Brake wire	
	15 15 022-03		1		1		1			1	1						
14	15 13 083-01	1	1	1	1	1	1	1	1	1	1	1				Styrstång, kpl. Handle bar	
15	15 15 265-01	1	1	1	1	1	1	1	1	1	1	1				Gummihandtag, vänster Rubber handle left	
16	15 15 310-01	1	1	1	1	1	1	1	1	1	1	1				Bromshandtag kpl. Brake handle compl.	
17	12 13 810-01	2	2	2	2	2	2	2	2	2	2	2				Ansattsskruv Screw	
18	25 09 316-11	2	2	2	2	2	2	2	2	2	2	2				Mutter Nut	
19	12 13 821-01	2	2	2	2	2	2	2	2	2	2	2				Kabelspännskruv Cable adjusting screw	
20	15 15 314-01	1	1	1	1	1	1	1	1	1	1					Kopplingshandtag kpl. Declutching handle compl.	
21	15 13 055-01	1	1	1	1	1	1	1	1	1	1	1				Handtagsskydd, höger Handle protector right	
22	15 13 056-01	1	1	1	1	1	1	1	1	1	1	1				Handtagsskydd, vänster Handle protector, left	
29	22 86 595-01	2		2		2		2	2			2				Skruv Screw	
	20 62 368-11		4		4		4			4	4					Skruv Screw	

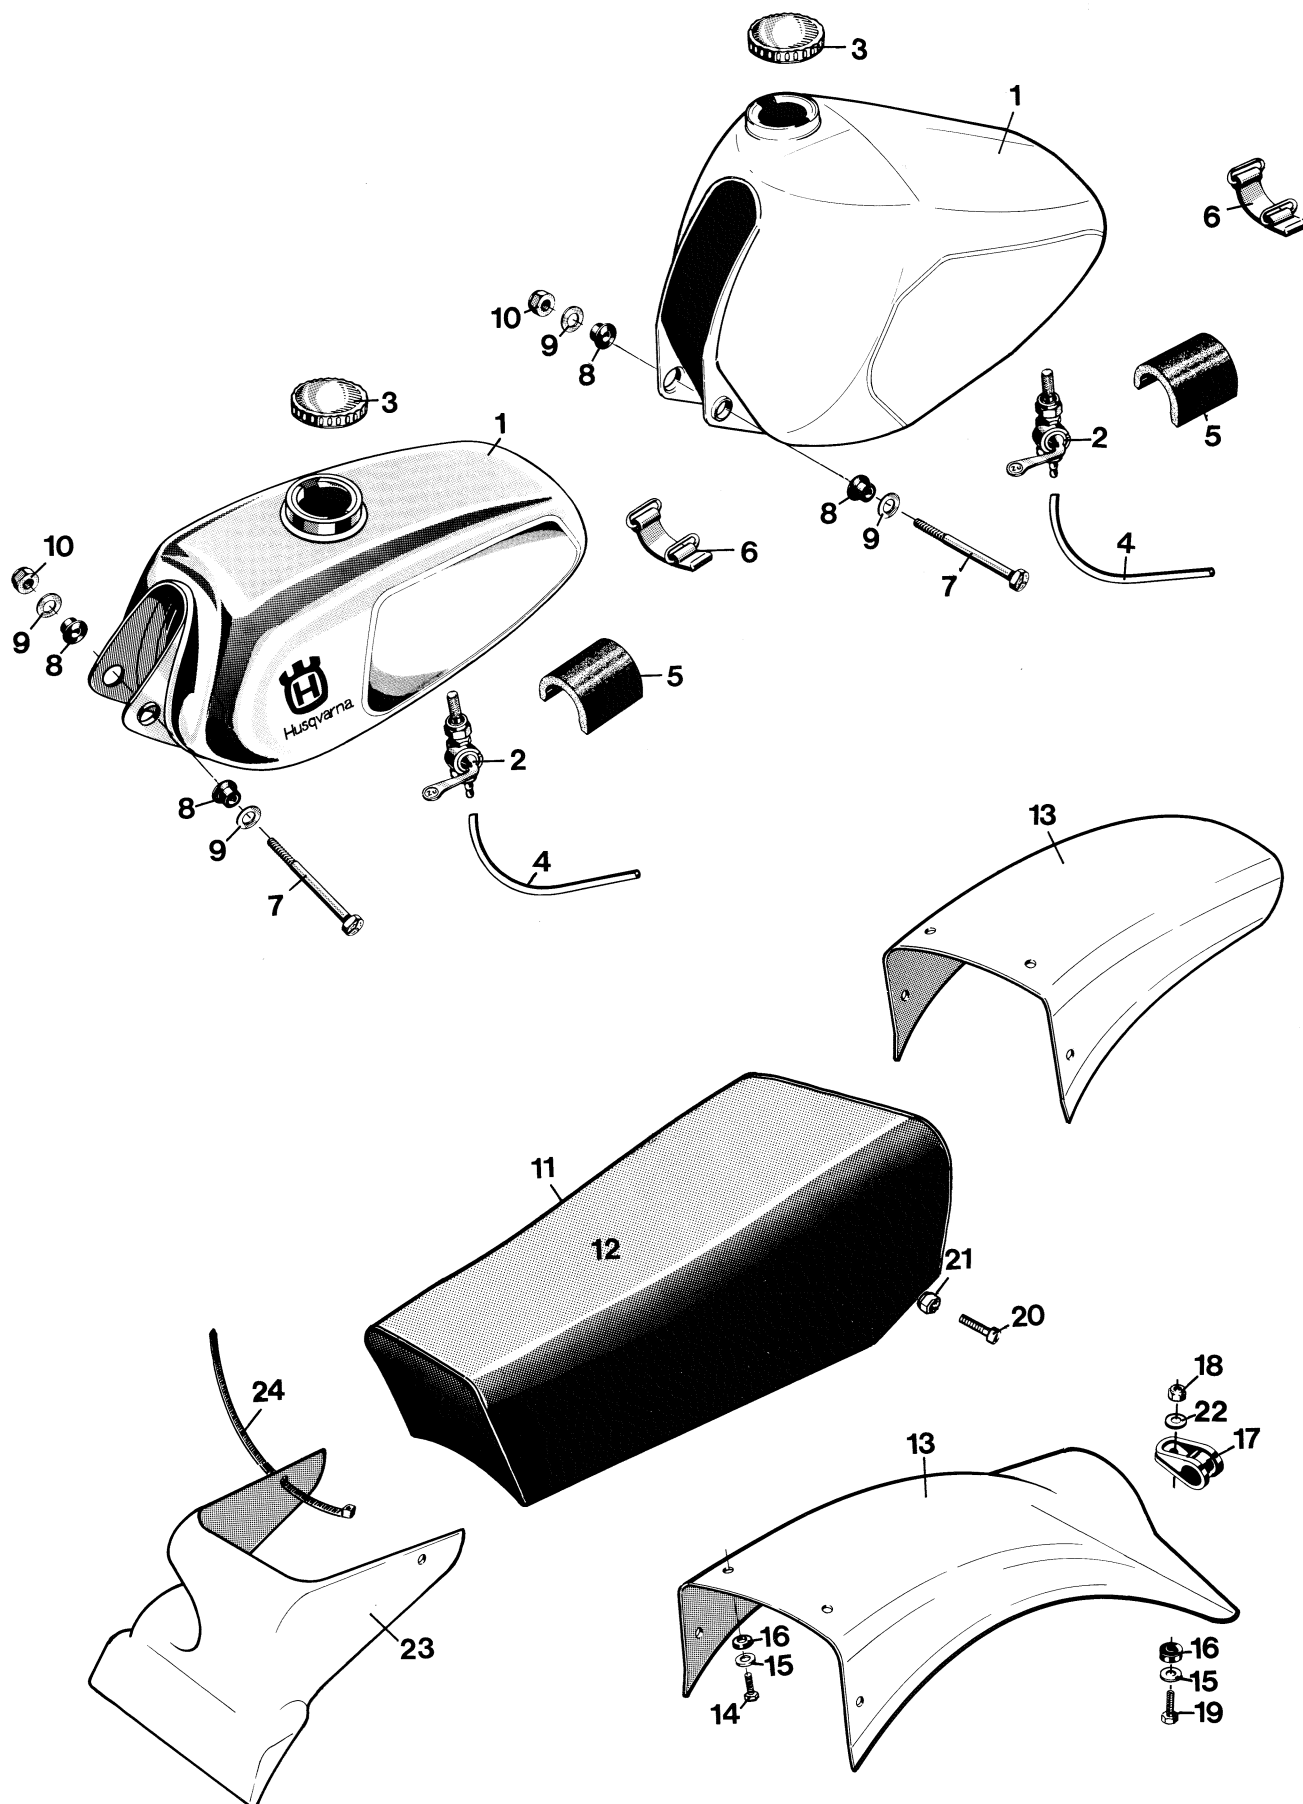


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
N	1	15 14 055-01	1														Bensintank röd Fuel tank red	
		15 14 055-03		1													Light blue	
N		15 14 072-02			1		1		1								Red 9,8 lit	
N		15 14 082-01						1					1				Light blue 10,9 lit	
N		15 14 082-03				1		1		1	1						Dark blue 10,9 lit	
	2	15 14 056-01	1	1	1	1	1	1	1	1	1	1					Bensingkran Ruel cock	
	3	15 14 008-02	1	1	1	1	1	1	1	1	1	1					Tanklock Tank cap	
	4	15 14 057-03	1	1	1	1	1	1	1	1	1	1					Bensinslang Fuel hose	
	5	15 14 041-01	1	1	1	1	1	1	1	1	1	1					Stöd Support	
	6	15 14 060-01	1	1	1	1	1	1	1	1	1	1					Tankhållare Tankholder	
	7	20 24 388-14	1	1	1	1	1	1	1	1	1	1					Skruv Screw	
	8	15 14 032-01	2	2	2	2	2	2	2	2	2	2					Gummibussning Rubber bushing	
	9	28 16 222-01	2	2	2	2	2	2	2	2	2	2					Bricka Washer	
	10	25 80 142-01	1	1	1	1	1	1	1	1	1	1					Låsmutter Nut	
	11	15 13 561-01 15 13 546-01	1	1		1	1	1	1	1	1	1					Sadel Saddle	
	12	15 13 563-01 15 13 555-01	1	1		1	1	1	1	1	1	1					Sadelöverdrag Saddle cover	
	13	15 18 158-01 15 18 153-01	1	1		1		1	1		1	1					Bakskärm Rear mudguard	
	14	20 06 370-11	4	4	4	4	4	4	4	4	4	4					Skruv M 6x20 Screw	
	15	28 01 416-01	4	6	4	6	4	6	4	4	6	6	4				Bricka Washer	
	16	15 18 121-01	4	4	4	6	4	6	4	4	6	6	4				Gummibricka Rubber washer	
	17	15 18 137-01		2		2		2			2	2					Fäste Attachment	
	18	25 80 142-01		2		2		2			2	2					Låsmutter Nut	
	19	20 06 372-11		2		2		2			2	2					Skruv Screw	
	20	20 06 376-12	1			2		2			2	2					Skruv Screw	
	21	25 82 116-14	1		1		1		1	1			1				Låsmutter Nut	
	22	28 16 211-01		2		2		2			2	2					Bricka Washer	
	23	15 18 154-01	1	1	1	1	1	1	1	1	1	1					Stänkskydd Splash guard	
	24	15 19 532-05	4	4	6	6	6	6	6	6	6	6					Buntband Stripe	

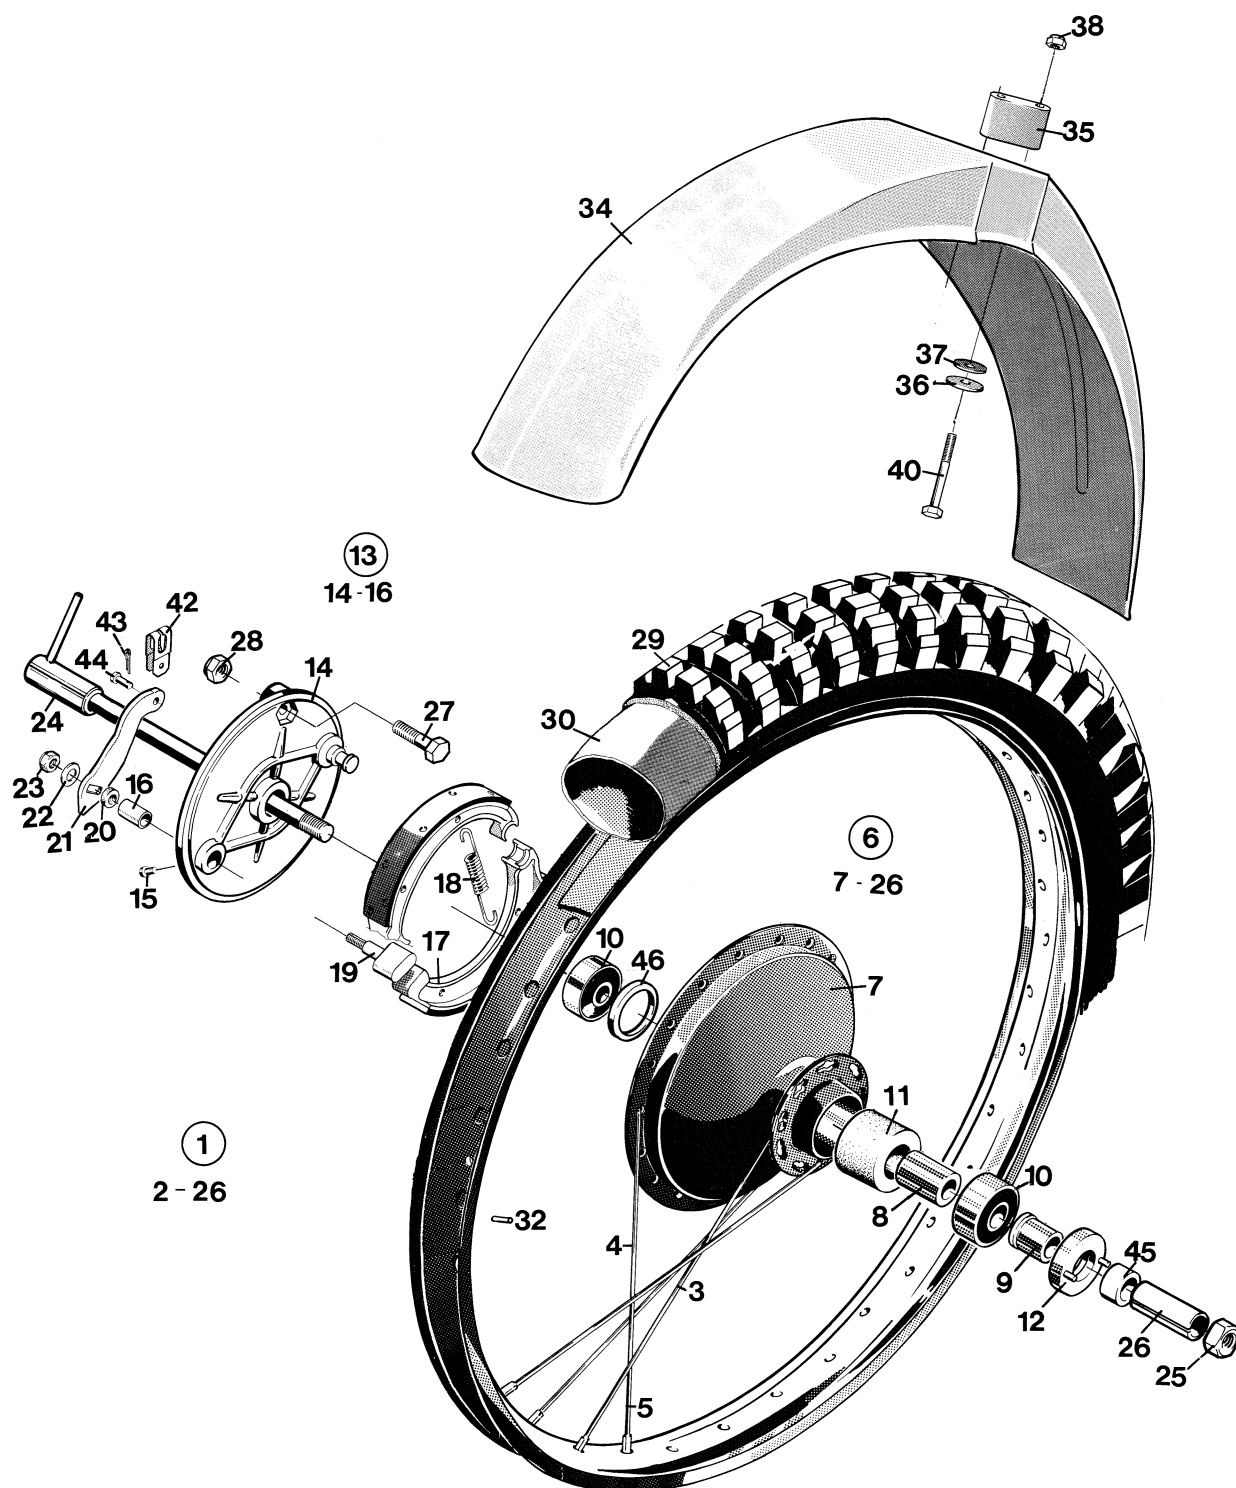


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
N	1	15 16 251-02 15 16 232-01		1		1		1	1		1	1	1				Hjul, kpl. exkl. gummi Wheel compl. exkl. rubber	
	2	15 16 200-01	1	1	1	1	1	1	1	1	1	1	1				Fälg, 1,60-21" Rim	
	3	15 16 218-03	18	18	18	18	18	18	18	18	18	18	18				Eker L = 277 Spoke	
N	4	15 16 218-04	18	18	18	18	18	18	18	18	18	18	18				Eker L = 244 Spoke	
N	5	15 16 219-01	36	36	36	36	36	36	36	36	36	36	36				Ekernippel Nipple	
	6	15 16 231-01 15 16 231-02 15 16 250-02	1	1	1	1	1	1				1	1				Framnav, kpl. Front hub compl.	
	8	15 16 228-01	1	1	1	1	1	1	1	1	1	1	1				Distans Distance	
	9	15 16 212-01	1	1	1	1	1	1	1	1	1	1	1				Distansring Distance ring	
	10	29 31 200-39	2	2	2	2	2	2	2	2	2	2	2				Kullager Ball bearing	
	11	15 16 215-01	1	1	1	1	1	1	1	1	1	1	1				Distanshållare Distance	
	12	15 16 214-01	1	1	1	1	1	1	1	1	1	1	1				Medbringare Driving washer	
	13	15 16 790-01	1	1	1	1	1	1	1	1	1	1	1				Bromssköld, kpl. Brake plate	
	15	20 62 360-11	1	1	1	1	1	1	1	1	1	1	1				Skruv M6x6 Screw	
	16	15 16 667-01	1	1	1	1	1	1	1	1	1	1	1				Bussning Bushing	
	17	15 16 788-01	2	2	2	2	2	2	2	2	2	2	2				Bromsback Brake plate	
	18	15 16 547-01	2	2	2	2	2	2	2	2	2	2	2				Fjäder Spring	
	19	15 16 782-01	1	1	1	1	1	1	1	1	1	1	1				Bromsexcenter Brake cam	
N	20	29 71 820-03	1	1	1	1	1	1	1	1	1	1	1				Tätning Seal	
	21	15 16 747-02	1	1	1	1	1	1	1	1	1	1	1				Hävarm Lever	
	22	28 16 241-01	1	1	1	1	1	1	1	1	1	1	1				Bricka 8,4x18 Washer	
	23	25 80 153-01	1	1	1	1	1	1	1	1	1	1	1				Låsmutter M8 Nut	
	24	15 16 234-01 15 16 255-01		1		1		1	1		1	1	1				Axel Shaft	
	25	15 16 238-01	1	1	1	1	1	1	1	1	1	1	1				Mutter Nut	
	26	15 16 239-01 15 16 249-01	1	1	1	1	1	1	1	1	1	1	1				Hylsa Sleeve	
	27	20 06 493-12	1	1	1	1	1	1	1	1	1	1	1				Skruv M10x25 Screw	
	28	25 80 171-01	1	1	1	1	1	1	1	1	1	1	1				Låsmutter M10 Nut	
N	29	15 16 141-01 15 16 257-01 15 16 268-01															Däck 3,00-21", Barum Tyre 3,00-21", Trelleborg Tyre 3,00-21", Pirelli	
	30	15 16 028-01	1	1	1	1	1	1	1	1	1	1	1				Innerslang 3.00-21" Innertube	
	31	15 16 029-01	1	1	1	1	1	1	1	1	1	1	1				Fälgband 21" Rim band	
	32	28 24 215-08		18		18		18	18		18	18	18				Pinne Cyl. pin	
	34	15 18 041-01	1	1	1	1	1	1	1	1	1	1	1				Framskärm Front mudguard	
	35	15 18 028-01	2	2	2	2	2	2	2	2	2	2	2				Stöd Support	
	36	28 01 416-01	4	4	4	4	4	4	4	4	4	4	4				Bricka 6,5x22 Washer	
	37	15 18 121-01	4	4	4	4	4	4	4	4	4	4	4				Gummibricka Rubber washer	
	38	25 80 142-01	4	4	4	4	4	4	4	4	4	4	4				Låsmutter M6 Nut	
	39	20 06 381-12		4		4		4	4		4	4	4				Skruv M 6x55 Screw	
	42	15 16 194-01		1		1		1	1		1	1	1				Bygel Strop	
	43	28 35 217-01		1		1		1	1		1	1	1				Saxpinne 2x12 Splitpin	

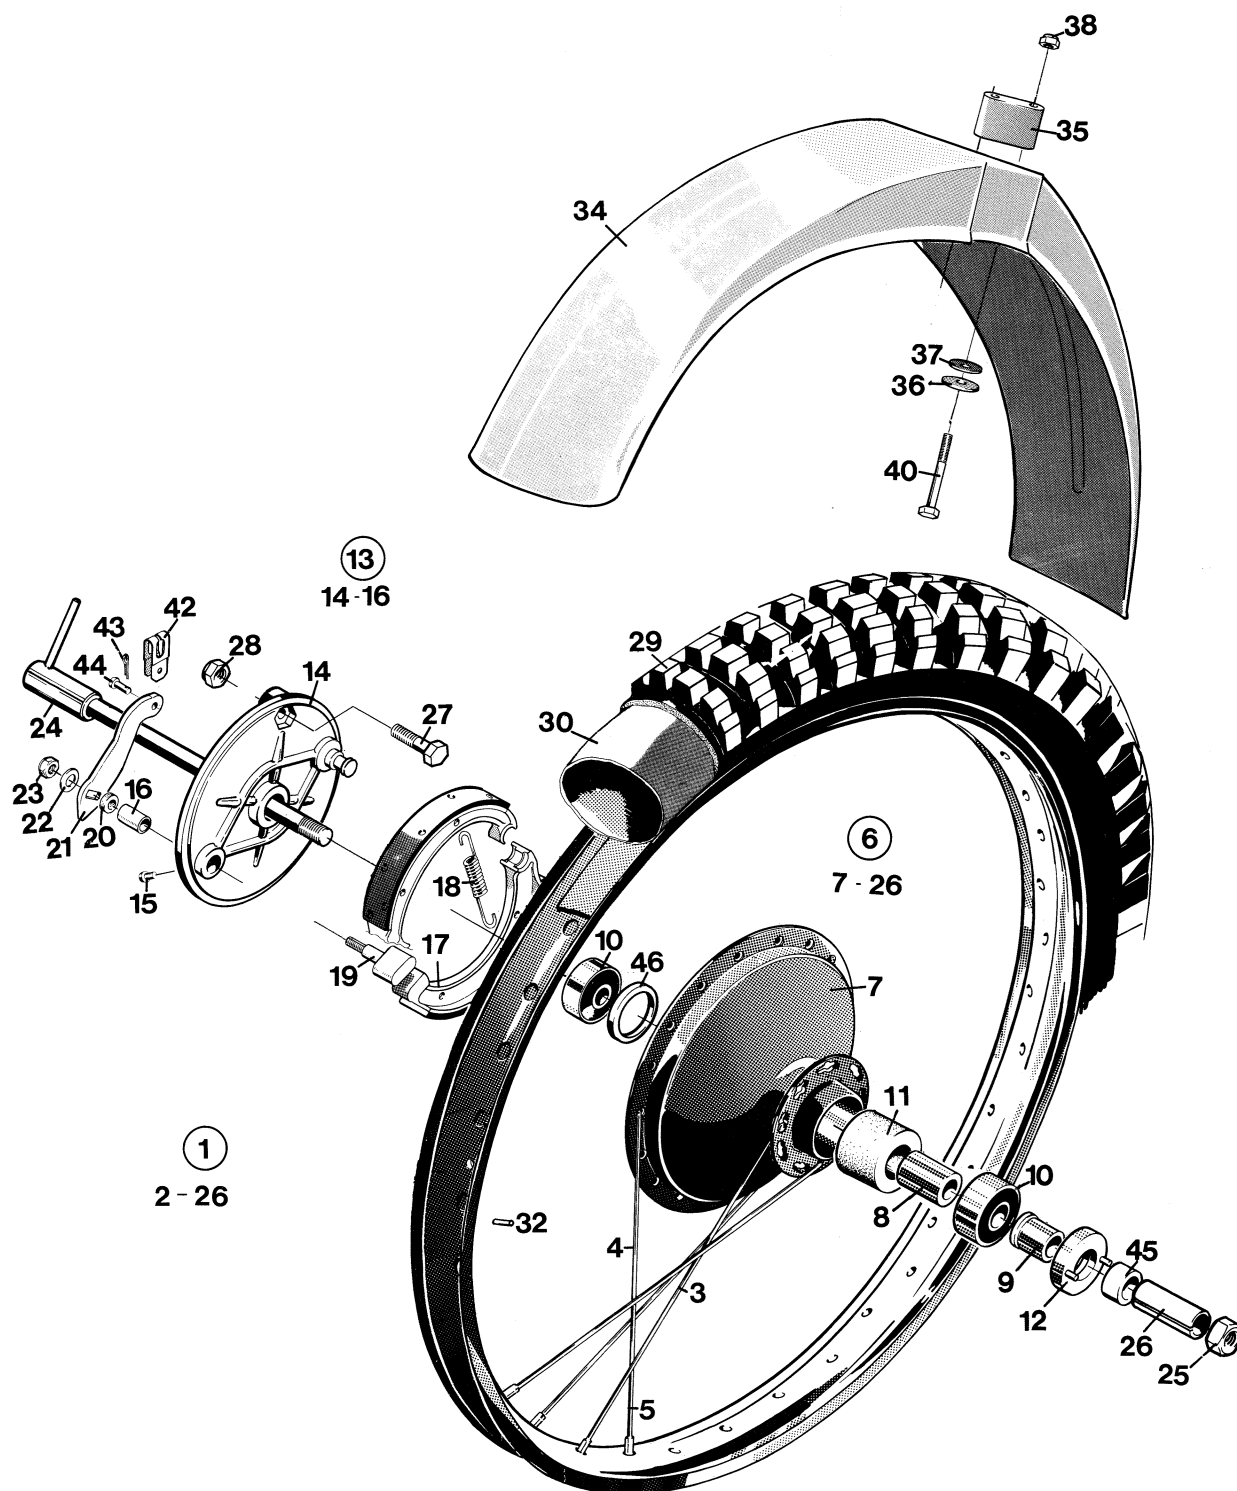


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
44	12 25 258-01		1		1		1	1		1	1	1				Bult Bolt	
45	15 16 247-01	1		1		1		1	1			1				Distans Distance	
46	15 16 272-01	1	1	1	1	1	1	1	1	1	1	1				Distansring Distance	
Tillbehör/Accessories																	
	15 19 886-01															Däcklåssats Cyl pinne 3x8, 40 st Tyre lock kit Cyl pin 3x8, 40 pcs	

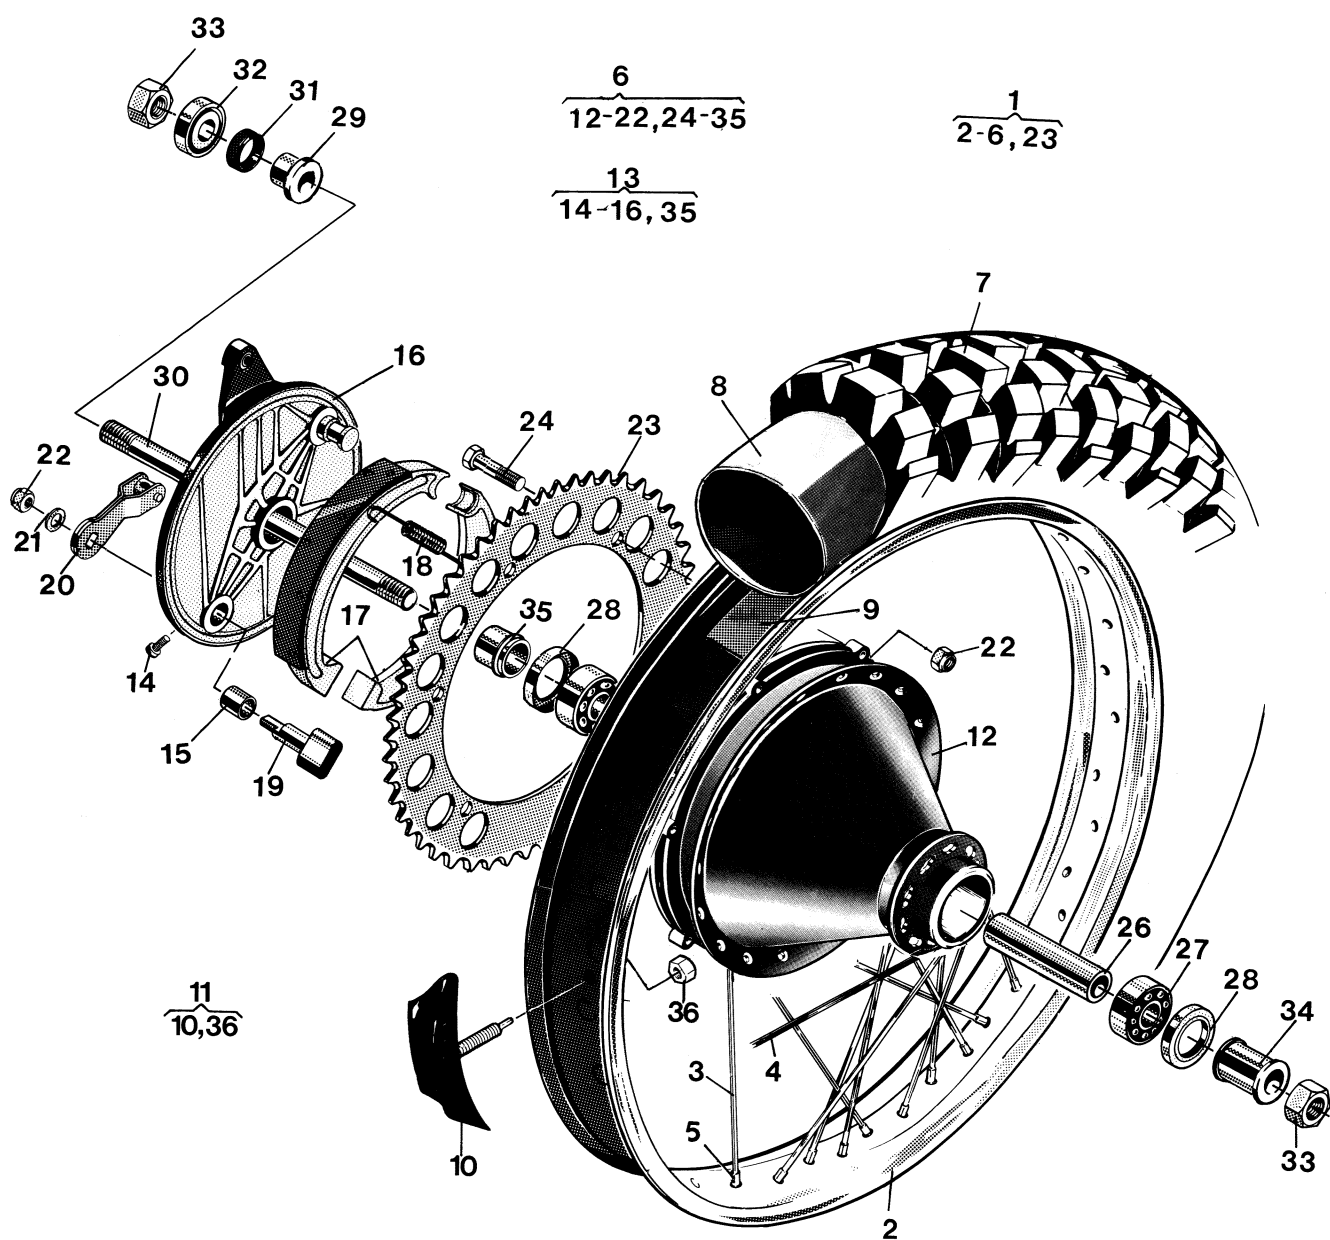
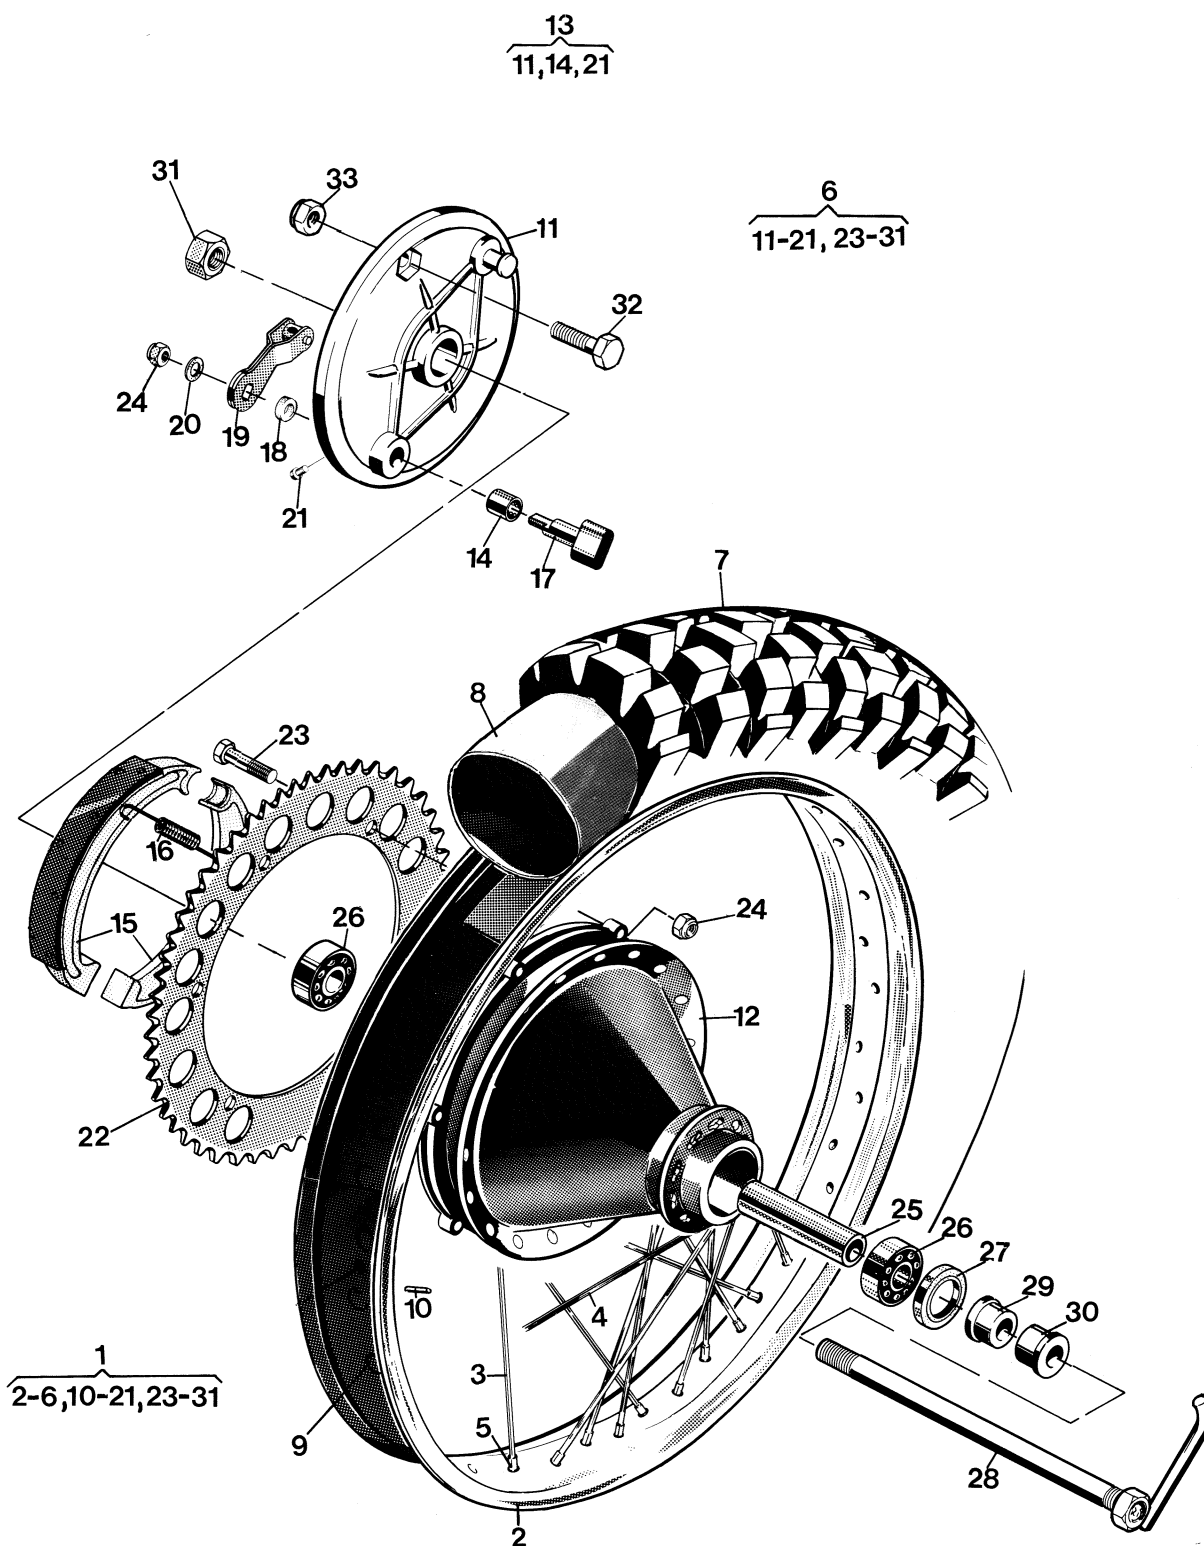


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
	1 15 19 884-01	1		1		1			1							Hjul, kpl. exkl. gummi Wheel compl. excl. rubber	
	2 15 16 748-01	1		1		1			1							Fälg 2,50x17'' Rim	
	3 15 16 218-01	18		18		18			18							Eker L = 181 Spoke	
	4 15 16 218-02	18		18		18			18							Eker L = 196 Spoke	
	5 15 16 219-01	36		36		36			36							Ekernippel Spoke nipple	
	6 15 19 883-01	1		1		1			1							Baknav kpl. utan kedjedrev Rear hub compl.	
N	7 15 16 759-01															Däck 5,50x17'', Trelleborg Tyre	
	15 16 763-01															Däck 140/90-17'', Braun Tyre	
	15 16 775-01															Däck 4,50x17'', Trelleborg Tyre 4,50x17'', Pirelli MT 25	
	15 16 252-01																
	8 15 16 508-01															Innerslang 4,00x18'' Trelleborg Innertyre	
N	15 16 770-01															Innerslang 17'', Trelleborg Innertube 17'' Pirelli	
	15 16 263-01																
	15 16 761-01															Fälgband 17'' Rimband	
	15 16 771-01															Fälgband 17'' Rimband	
	11 15 16 772-01	2		2		2			2							Däcklås, kpl. Tyre lock	
	12 15 16 751-01	1		1		1			1							Navhylsa, kpl. Hub sleeve	
	13 15 16 665-01	1		1		1			1							Bromssköld, kpl. Brake plate compl.	
	14 20 62 360-11	1		1		1			1							Skruv MCS 6x6 Screw	
	15 15 16 667-01	1		1		1			1							Bussning Bushing	
	17 15 16 543-01	2		2		2			2							Bromsback Brake shoe	
	18 15 16 547-01	2		2		2			2							Fjäder, bromsback Spring	
	19 15 16 548-01	1		1		1			1							Bromsexcenter Brake cam	
	20 15 16 723-01	1		1		1			1							Hävarm Lever	
	21 28 16 241-01	1		1		1			1							Bricka 8,4x18 Washer	
	22 25 80 153-01	7		7		7			7							Låsmutter M8 Nut	
	23 15 16 755-01	1		1		1			1							Kedjekrans 53 T Skruv M8x30 Screw	
	24 20 06 455-12	6		6		6			6								
	26 15 16 752-01	1		1		1			1							Distanshylsa Distance sleeve	
	27 29 31 200-39	2		2		2			2							Kullager Ball bearing	
	28 29 65 448-07	2		2		2			2							Tätning Seal	
N	29 15 16 820-01	1		1		1			1							Lagerhylsa Bearing sleeve	
	30 15 16 728-01	1		1		1			1							Bakaxel Shaft	
N	31 12 16 549-01	1		1		1			1							Tättningsring Seal	
N	32 15 16 826-01	1		1		1			1							Tättningshållare Seal case	
	33 15 16 598-01	1		1		1			1							Mutter Nut	
	34 15 16 793-01	1		1		1			1							Distans, vänster Distance	
	35 15 16 819-01	1		1		1			1							Bussning Bushing	



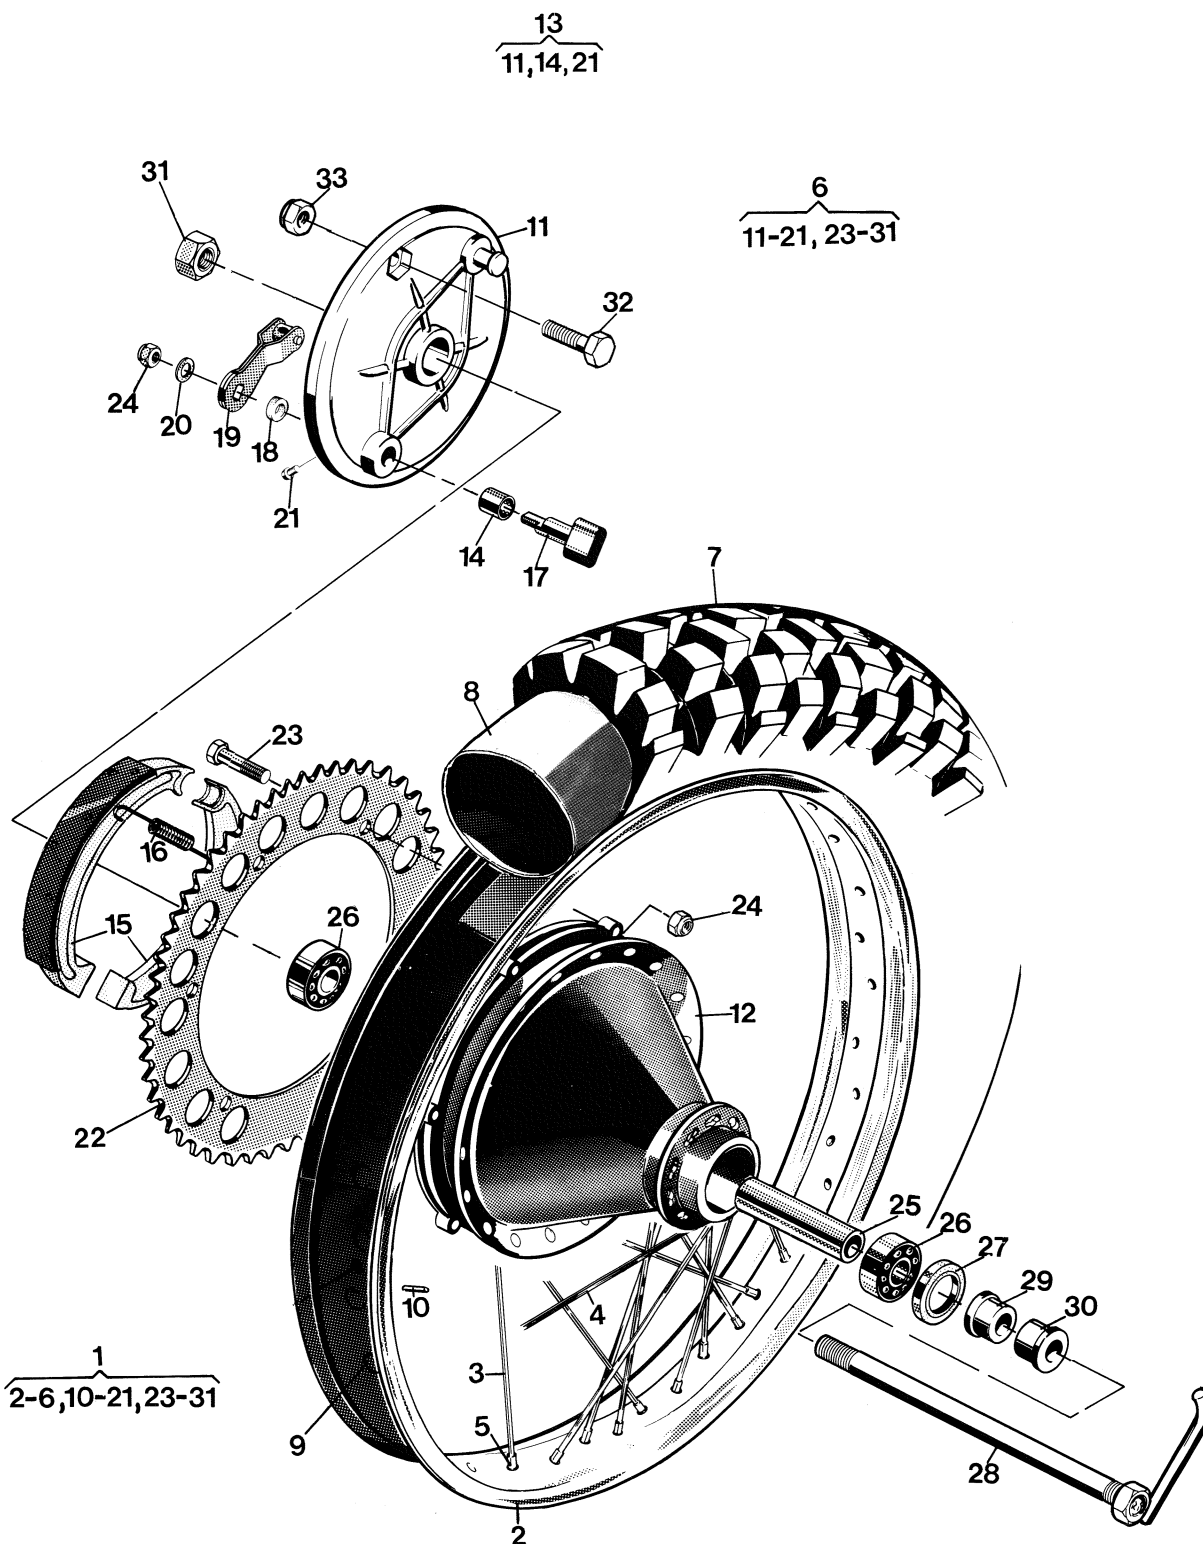


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
1	15 19 907-01		1		1		1	1		1	1						Hjul, kpl. exkl. gummi. Wheel compl. excl. rubber	
2	15 16 748-01		1		1		1	1		1	1						Fälg, 2,50x17'' Rim	
3	15 16 218-01		18		18		18	18		18	18						Eker 181 Spoke	
4	15 16 218-02		18		18		18	18		18	18						Eker 196 Spoke	
5	15 16 219-01		36		36		36	36		36	36						Ekernippel Spoke nipple	
6	15 19 906-01		1		1		1	1		1	1						Baknav, kpl. Rear hub compl.	
7	15 16 763-01																Däck 140/90-17'' Barum Tyre	
8	15 16 770-01																Innerslang 17'' Innertyre	
9	15 16 771-01																Fälgband 17'' Rim band	
10	28 24 215-08		18		18		18	18		18	18						Pinne 3x8 Cyl pin	
12	15 16 792-01		1		1		1	1		1	1						Navhylsa Hub sleeve	
13	15 16 790-01		1		1		1	1		1	1						Bromssköld, kpl. Brake plate compl.	
14	15 16 667-01		1		1		1	1		1	1						Bussning Bushing	
15	15 16 788-01		2		2		2	2		2	2						Bromsback, kpl. Brake plate	
16	15 16 547-01		2		2		2	2		2	2						Fjäder Spring	
17	15 16 782-01		1		1		1	1		1	1						Bromsexcenter Brake cam	
18	15 16 801-01		1		1		1	1		1	1						Tätning Seal	
19	15 16 513-01		1		1		1	1		1	1						Hävarm Lever	
20	28 16 241-01		1		1		1	1		1	1						Bricka 8,4x18 Washer	
21	20 62 360-11		1		1		1	1		1	1						Skruv M6x6 Screw	
22	15 16 755-01		1		1		1	1		1	1						Kedjekrans z = 53 Sprocket	
23	20 06 455-12		6		6		6	6		6	6						Skruv M8x30 Screw	
24	25 80 153-01		7		7		7	7		7	7						Låsmutter Nut	
25	15 16 752-01		1		1		1	1		1	1						Distanshylsa Distance sleeve	
26	29 31 200-38		2		2		2	2		2	2						Kullager Ball bearing	
27	29 65 448-07		1		1		1	1		1	1						Tätning Seal	
28	15 16 800-01		1		1		1	1		1	1						Bakaxel, kpl. Shaft	
29	15 16 793-01		1		1		1	1		1	1						Distans Distance	
30	15 16 536-01		1		1		1	1		1	1						Distansring Distance ring	
31	15 16 598-01		1		1		1	1		1	1						Mutter Nut	
32	20 06 493-12		1		1		1	1		1	1						Skruv M10x25 Screw	
33	25 80 171-01		1		1		1	1		1	1						Låsmutter M10 Nut	
Tillbehör/Accessories																		
	15 19 901-01																Ekersats Spoke Unit	
	15 19 902-01																Nippelsats 36 st Nipple kit 36 pcs	
	15 19 886-01																Däcklåssats Cyl pinne 3x8, 40 st Tyre lock kit Cyl pin 3x8, 40 pcs	

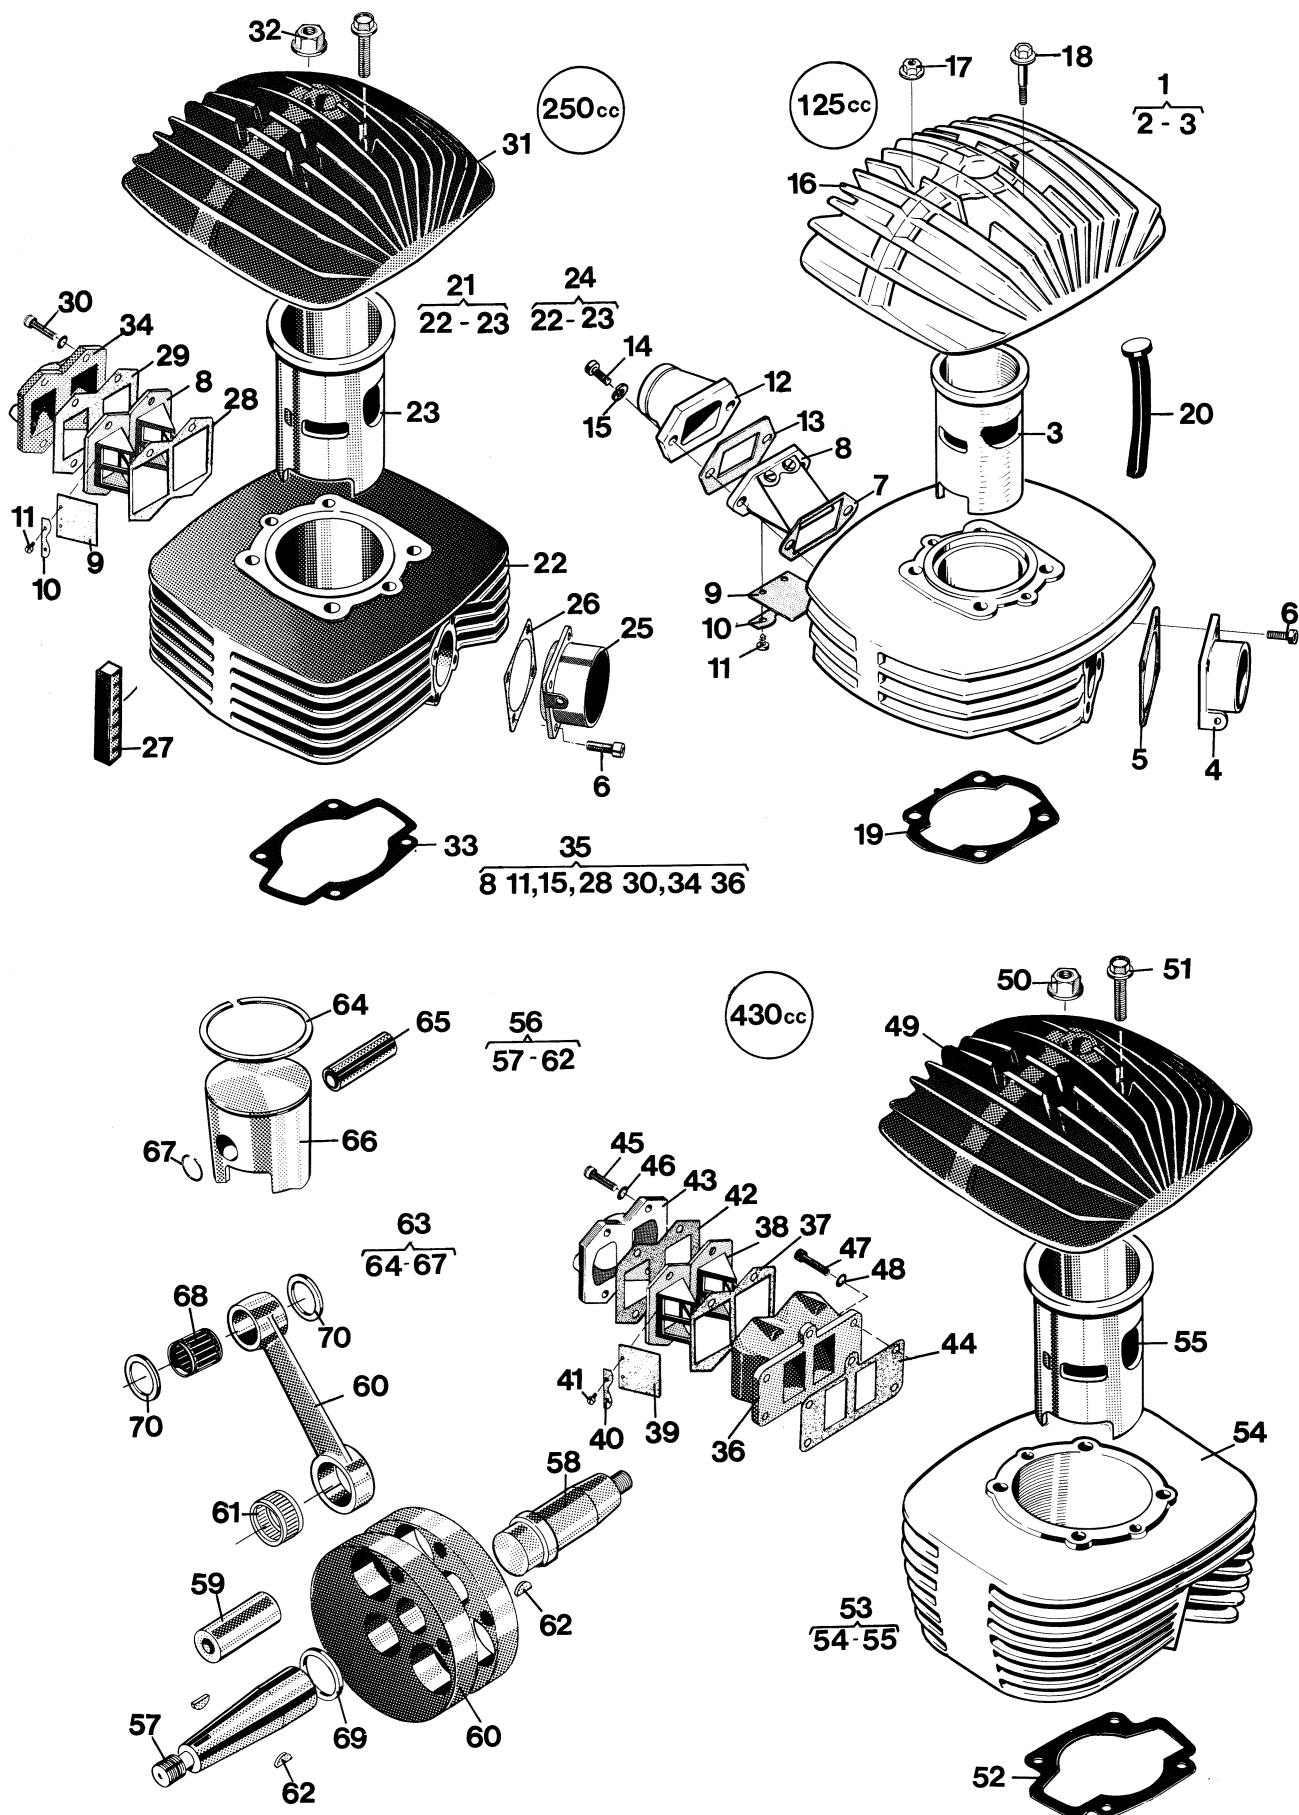


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
1	16 11 767-01	1	1														Cylinder, kpl. Cylinder compl.	
3	16 11 765-01	1	1														Cylinderfoder Cylinder liner	
4	16 11 511-01	1	1														Avgasstos, kpl. Exhaust manifold	
5	16 11 512-01	1	1														Packning Gasket	
6	20 24 370-12	4	4	4	4	4	4	4	4	4	4						Skruv M6x20 Screw	
7	16 11 514-01	1	1														Packning Gasket	
8	16 10 357-01	1	1	2	2	2	2	2	2	2	2						Ventilhållare Valve holder	
9	16 10 359-01	2	2	4	4	4	4	4	4	4	4						Ventil Valve	
10	16 10 377-01	2	2	4	4	4	4	4	4	4	4						Ventilstöd Valve support	
11	22 96 285-11	4	4	8	8	8	8	8	8	8	8						Skruv M4x6 Screw	
12	16 11 770-01	1	1														Anslutningsrör Inlet manifold	
13	16 11 513-01	1	1														Packning Gasket	
14	20 24 372-12	2	2														Skruv M6x25 Screw	
15	28 88 180-01	2	2	4	4	4	4	4	9	9	9						Fjäderbricka Washer	
16	16 11 769-01	1	1														Cylinderlock Cylinder head	
17	25 46 118-14	4	4														Mutter Nut	
18	20 18 459-12	2	2	2	2	2	2	2	2	2	2						Skruv M8x40 Screw	
19	16 11 568-01	1	1														Packning Gasket	
20	16 11 764-01		4	4	4	4	4	4									Dämpstav Damping rod	
21	16 11 790-01					1	1	1									Cylinder, kpl. Cylinder, compl.	
22	16 11 829-01								1	1	1						Cylinder, kpl. Cylinder compl.	
	16 11 750-01																Cylinder, kpl. Cylinder compl.	
23	16 11 651-01					1	1	1									Cylinderfoder Cylinder liner	
	16 11 651-02			1	1												Cylinderfoder Cylinder liner	
24	16 11 790-02			1	1												Cylinder kpl. Cylinder compl.	
25	16 10 730-01			1	1	1	1	1									Avgasstos, kpl. Exhaust manifold	
	16 10 891-01								1	1	1						Avgasstos, kpl. Exhaust manifold	
26	16 10 894-01								1	1	1						Packning Gasket	
	16 10 912-01			1	1	1	1	1									Packning Gasket	
27	16 11 556-01									1	1						Dämpelement Damping element	
28	16 10 362-01			1	1	1	1	1	1	1	1						Packning Gasket	
29	16 10 396-01			1	1	1	1	1	1	1	1						Packning Gasket	
30	20 24 374-55			4	4	4	4	4	4	4	4						Skruv M4x6 Screw M4x6	
N 31	16 11 850-01			1	1	1	1	1									Cylinderlock Cylinder head	
	16 11 751-01								1	1	1						Cylinderlock Cylinder head	
32	25 46 120-14			4	4	4	4	4	4	4	4						Mutter Nut	
33	16 11 648-01			1	1	1	1	1	1	1	1						Packning Gasket	
	16 11 763-01																Packning Gasket	
34	16 11 742-01			1	1	1	1	1	1	1	1						Anslutningsrör Inlet manifold	
35	16 11 743-01								1	1	1						Ventilhus, kpl. Valve housing, compl.	

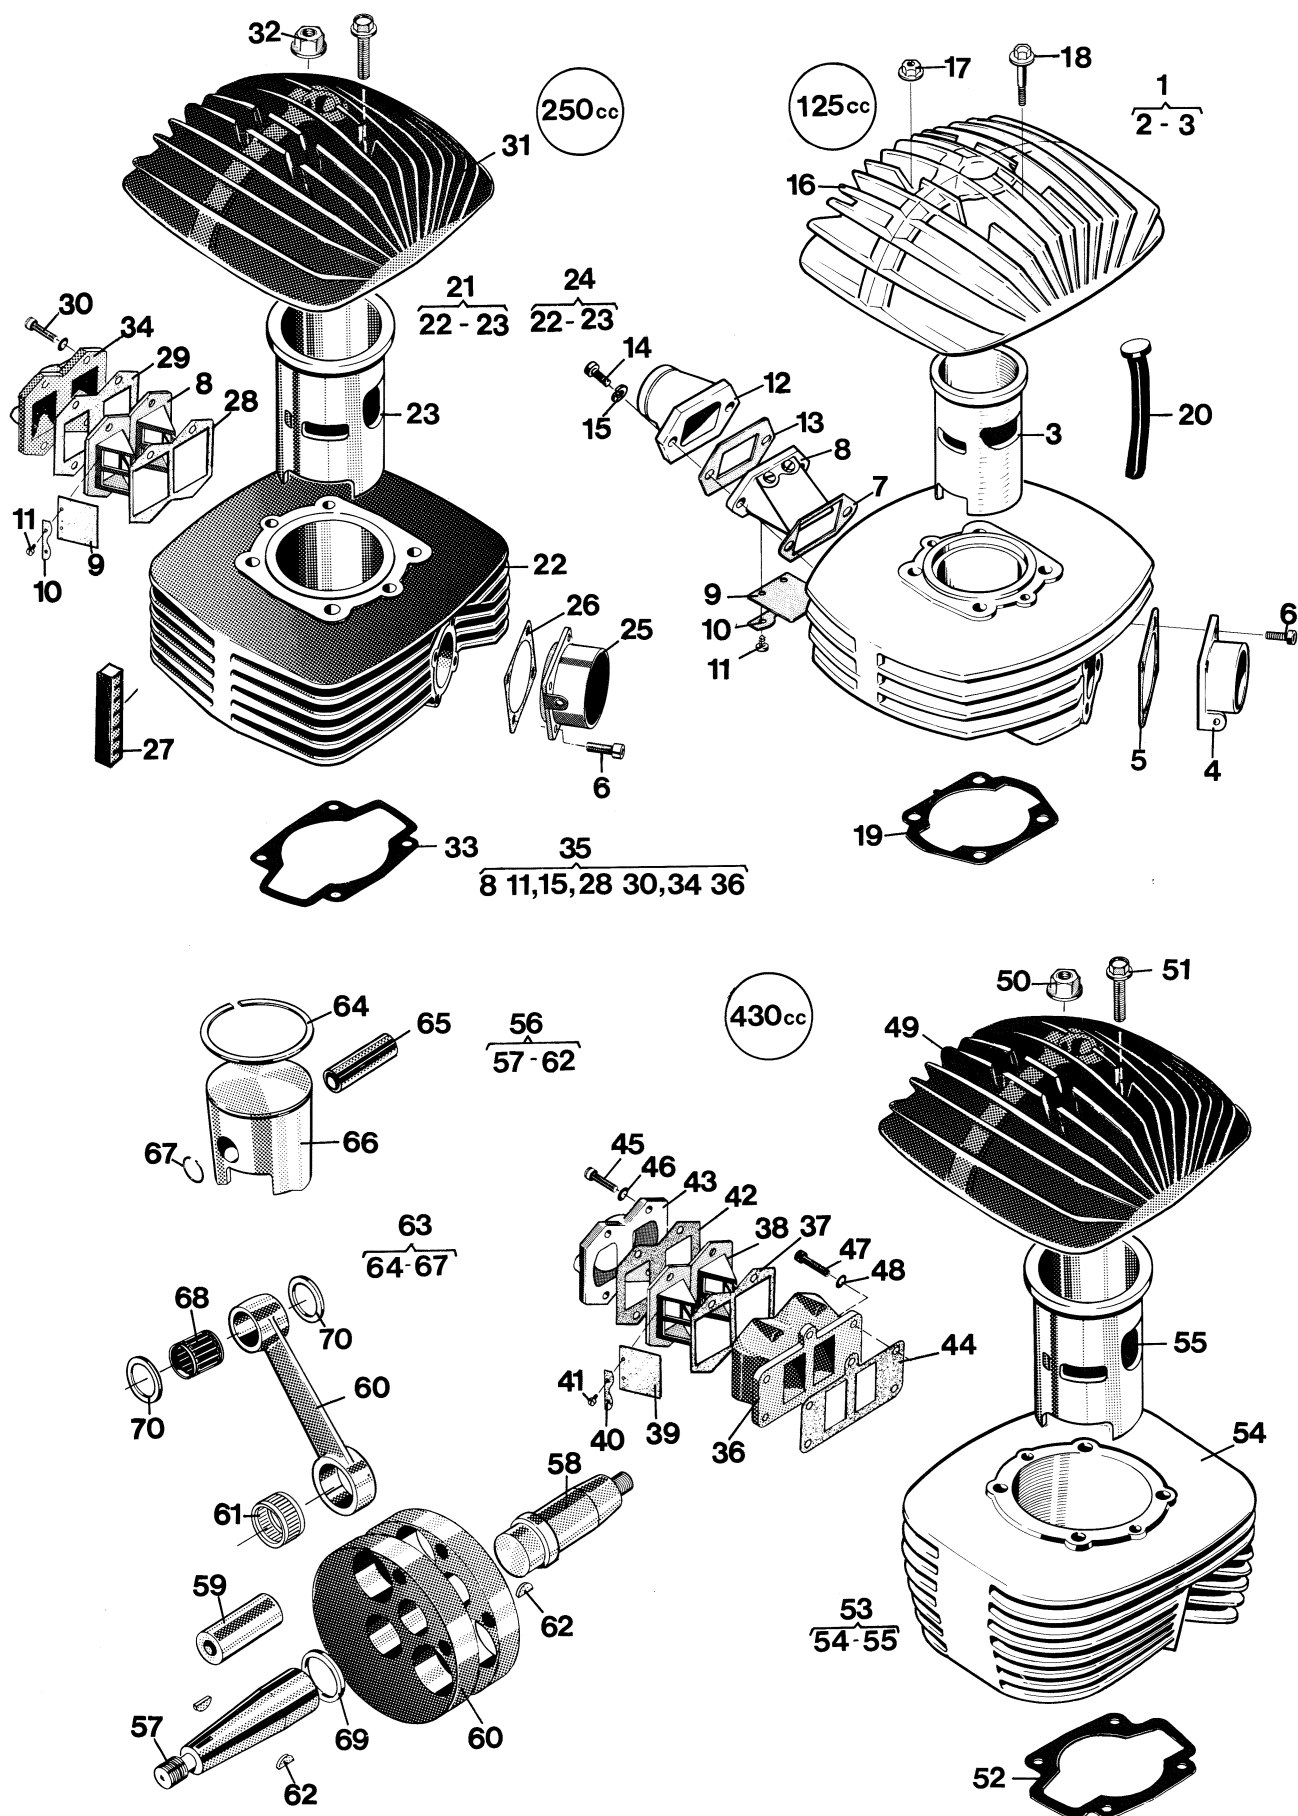


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
36	16 11 569-01								1	1	1	1				Ventilhus Valve housing	
37	16 10 362-01								1	1	1	1				Packning Gasket	
38	16 10 357-01								2	2	2	2				Ventilhållare Valve holder	
39	16 10 359-01								4	4	4	4				Ventil Valve	
40	16 10 377-01								4	4	4	4				Ventilstöd Valve support	
41	22 96 285-11								8	8	8	8				Skruv Screw	
42	16 10 396-01								1	1	1	1				Packning Gasket	
43	16 11 742-01								1	1	1	1				Anslutning Inlet manifold	
44	16 10 361-01								1	1	1	1				Packning Gasket	
45	20 24 374-55								4	4	4	4				Skruv Screw	
46	28 88 180-01								4	4	4	4				Fjäderbricka Washer	
47	20 24 371-12								5	5	5	5				Skruv Screw	
48	28 88 180-01								5	5	5	5				Fjäderbricka Washer	
49	16 11 694-01								1	1	1	1				Cylinderlock Cylinder head	
50	25 46 120-14								4	4	4	4				Mutter Nut	
51	20 18 459-12								2	2	2	2				Skruv Screw	
52	16 11 648-01								1	1	1	1				Packning Gasket	
53	16 11 840-01								1	1	1	1				Cylinder, kpl. Cylinder compl.	
55	16 11 826-01								1	1	1	1				Cylinderfoder Cylinder liner	
56	16 11 695-01								1	1	1	1				Vevparti kpl. utan kolv Crank shaft	
	16 11 723-01 16 11 741-02 16 10 381-01	1	1		1		1		1								
57	16 11 659-01								1	1	1	1				Vevaxel, höger Crank shaft, right	
	16 10 851-01 16 11 815-01 16 10 653-01	1	1		1		1										
58	16 11 660-01								1	1	1	1				Vevaxel, vänster Crank shaft, left	
	16 11 543-01 16 10 654-01	1	1		1	1	1	1	1	1	1	1					
61	16 10 926-01			1	1	1	1	1	1	1	1	1				Nållager Needle bearing	
	16 11 533-01	1	1														
62	29 00 560-01	2	2	2	2	2	2	2	2	2	2	2				Woodruffkil Woodruff key	
63	16 11 781-01								1	1	1	1				Kolv, kpl. std Piston compl.	
	16 10 376-01 16 10 376-05 16 10 378-01	1	1		1		1	1									
64	16 11 189-01								1	1	1	1				Kolvring Piston ring	
	16 10 831-01 16 10 831-05 16 10 671-01	1	1		1		1	1									
67	16 11 738-01			2	2	2	2	2	2	2	2	2				Låsring Circlip	
	16 11 739-01	2	2														
68	16 11 838-01								1	1	1	1				Nållager Needle bearing	
	16 10 933-01 16 11 534-01	1	1		1		1	1									
69	16 10 921-01			1	1	1	1	1	1	1	1	1				Distansring Distance ring	
	16 10 676-01	1	1														
70	16 10 971-01			2	2	2	2	2	2	2	2	2				Distansring Distance ring	
	16 10 674-01	2	2													Distansring Distance ring	
	16 10 642-01 16 10 643-01																

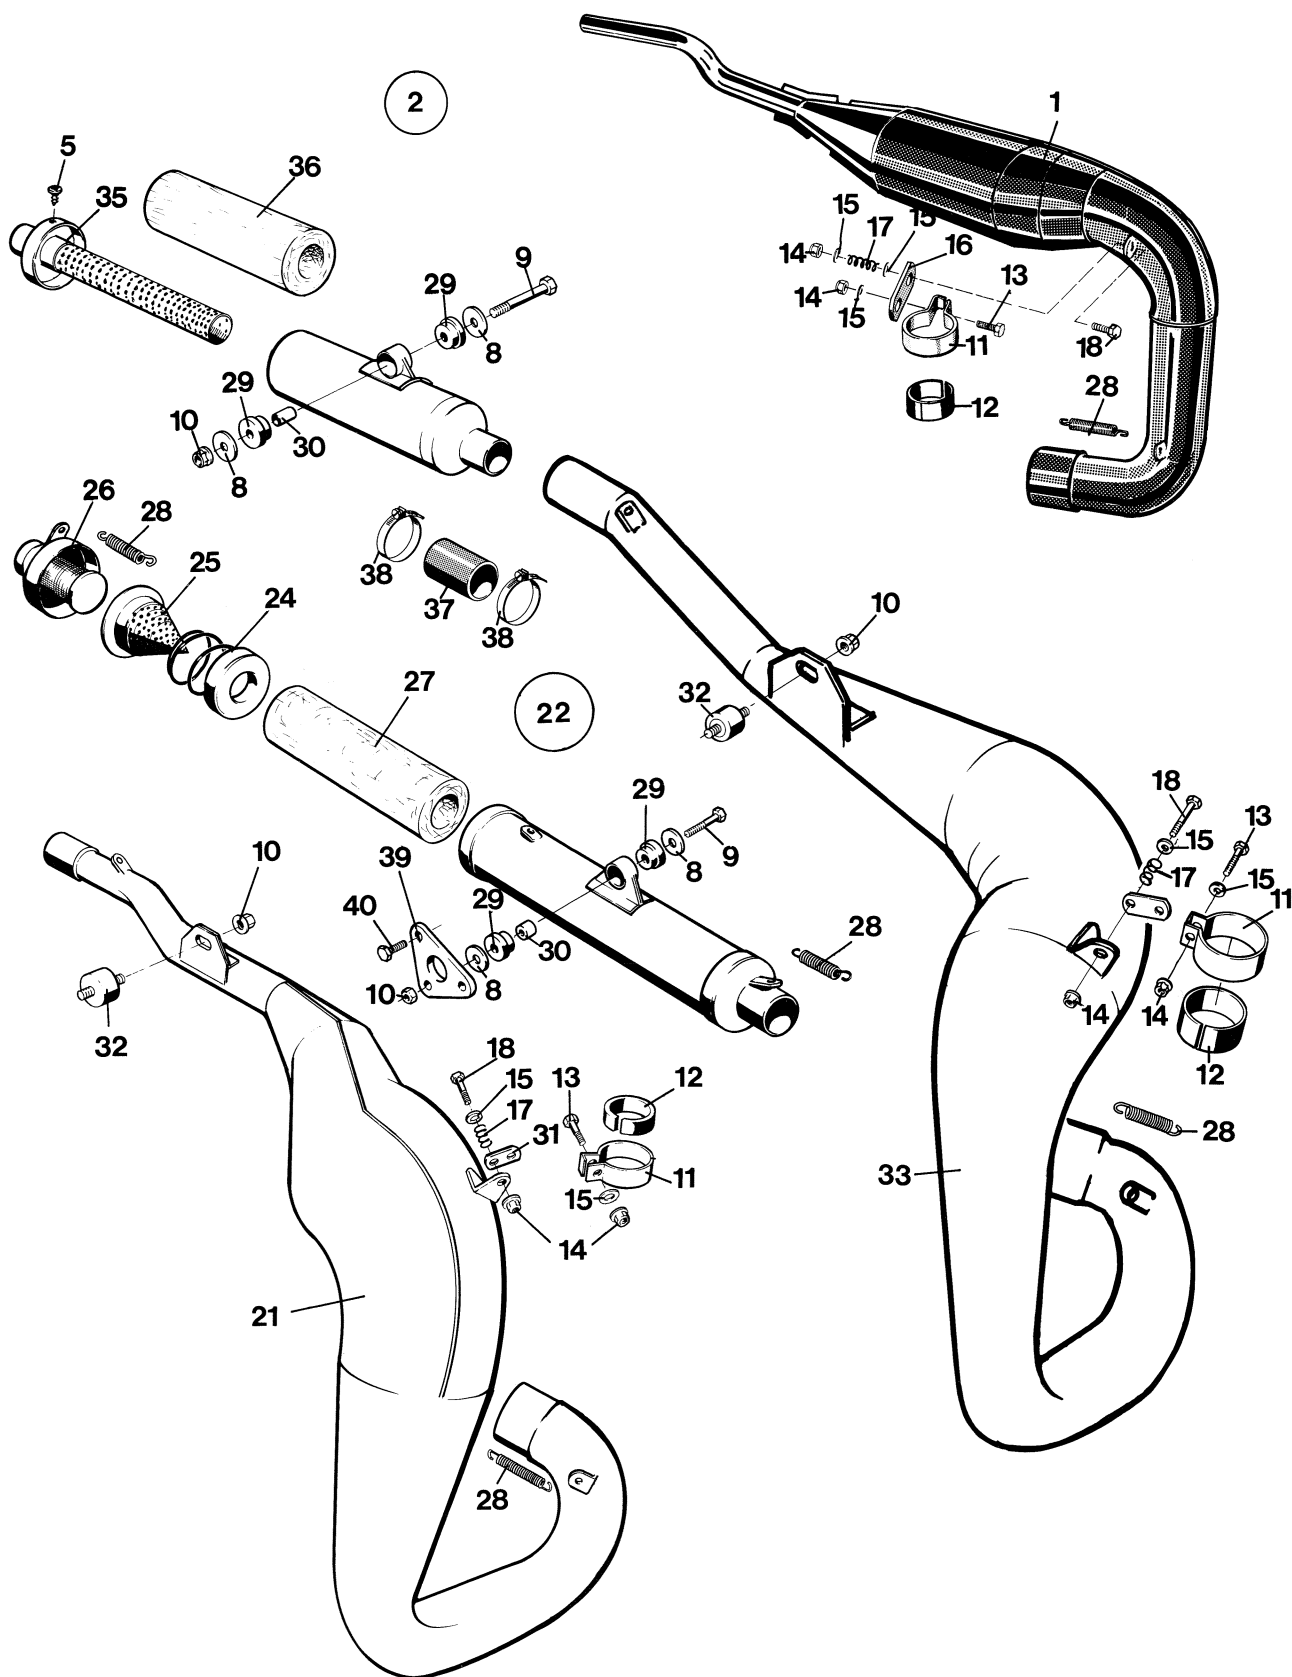


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
N	1	15 14 370-01	1	1													Avgasrör Exhaust pipe	
✓	2	15 14 278-01 278-02	1	1	1		1			1			1				Ljuddämpare kpl. Silencer compl.	
	5	23 40 400-12	3	3	3		3			3							Skruv Screw	
	8	15 14 661-01	2	2	2	2	2	2	2	2	2	2	2				Bricka Washer	
	9	20 06 464-12	1	1	1	1	1	1	1	1	1	1	1				Skruv M8x65 Screw	
	10	25 82 118-14	1	1	2	2	2	2	2	2	2	2	2				Mutter M6 Nut	
	11	15 14 624-01	1	1	1	1	1	1	1	1	1	1	1				Klamma Clamp	
	12	15 14 641-01	1	1	1	1	1	1	1	1	1	1	1				Gummiskydd Rubber protection	
	13	20 06 372-11	1	1	1	1	1	1	1	1	1	1	1				Skruv M6x25 Screw	
	14	25 82 116-14	2	2	2	2	2	2	2	2	2	2	2				Mutter M6 Nut	
	15	28 16 211-01	2	2	2	2	2	2	2	2	2	2	2				Bricka 6,4x14 Washer	
	16	15 14 849-01	1	1													Länk Link	
	17	15 14 038-01	1	1	1	1	1	1	1	1	1	1	1				Fjäder Spring	
	18	20 06 376-12	1	1	1	1	1	1	1	1	1	1	1				Skruv M6x35 Screw	
	21	15 14 241-01				1		1	1								Avgasrör Exhaust pipe	
		15 14 280-01			1		1										Avgasrör Exhaust pipe	
	21	15 14 244-01				1		1	1		1	1	1				Ljuddämpare kpl. Silencer compl.	
	24	15 14 242-01				1		1	1		1	1	1				Gavel, kpl. Gable compl.	
	25	15 14 200-01				1		1	1		1	1	1				Gnistsil Spark arrestor	
	26	15 14 999-01				1		1	1		1	1	1				Bakstycke End gable	
	27	15 14 248-01				1		1	1		1	1	1				Absorbent Absorber	
	28	15 19 864-01	2	2	2	6	2	6	6	2	6	6	6				Fjäder Spring	
	29	15 14 662-01	2	2	2	2	2	2	2	2	2	2	2				Gummielement Rubber element	
	30	15 14 663-01	2	2	1	1	1	1	1	1	1	1	1				Hylsa Sleeve	
	31	15 14 893-01			1	1	1	1	1	1	1	1	1				Länk Link	
	32	15 14 590-01			1	1	1	1	1	1	1	1	1				Vibrationsdämpare Vibration damper	
N	33	15 14 386-01									1	1	1				Avgasrör Exhaust pipe	
N		15 14 376-01								1							Avgasrör Exhaust pipe	
	35	15 14 323-01 323-02			1		1			1							Gavel Cover	
	36	15 14 916-02			1		1			1							Absorbent Absorber	
	37	15 14 295-01	1	1	1		1			1							Gummianslutning Rubber connection	
	38	15 14 305-01	2	2	2		2			2							Klamma Clamp	
N	39	15 10 785-01				1		1	1		1	1	1				Fäste för ljuddämpare	
	40	20 06 378-12			2		2	2		2	2	2					Skruv	

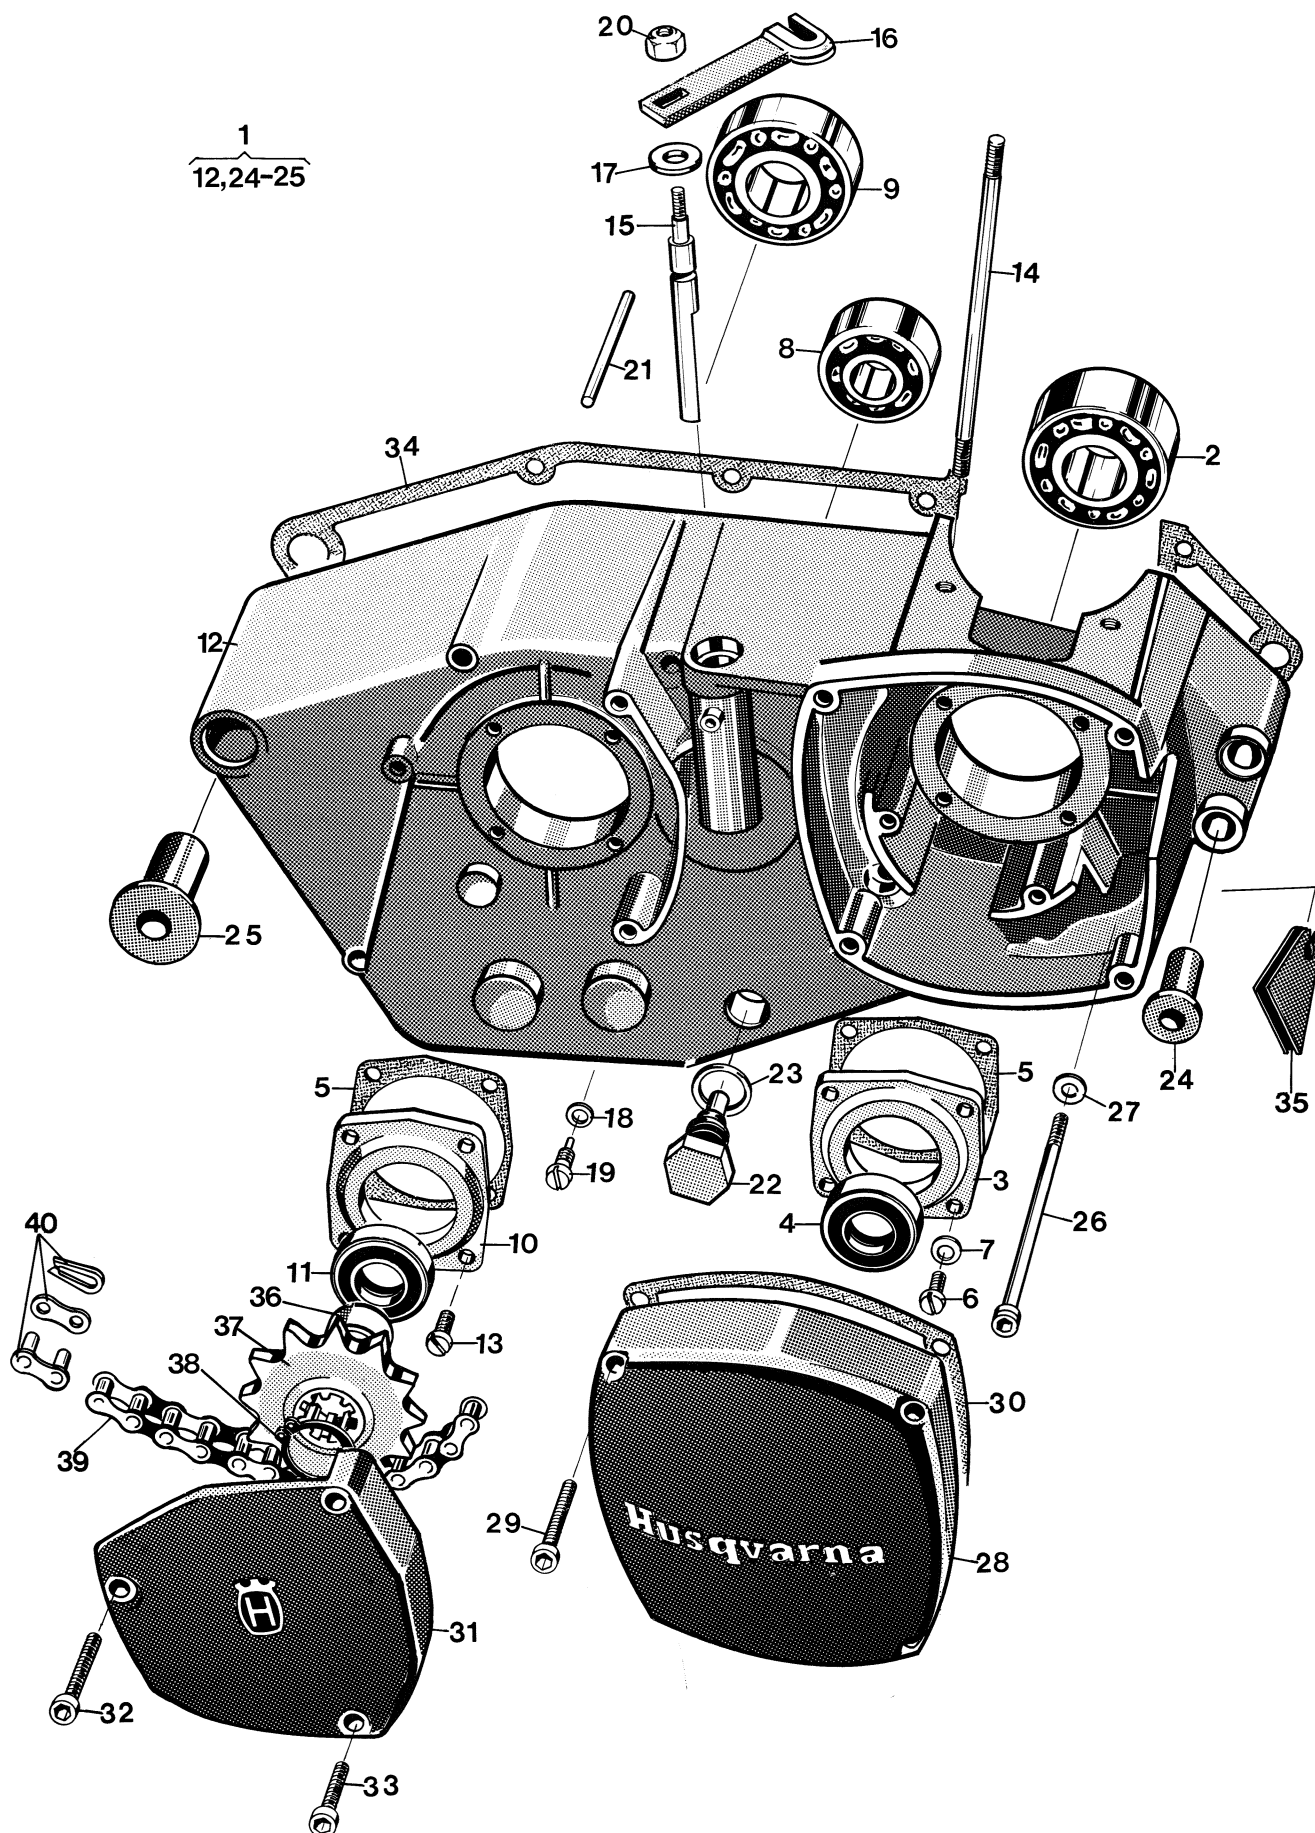


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
1	16 11 816-01	1	1														Vevhushalva höger Crankcase halve right	
	16 11 572-01	1	1														Vevhushalvor par Crankcasehalves pain	
2	29 32 520-21	1	1														Kullager Ball bearing	
3	16 10 679-01	1	1														Fläns Flange	
4	16 10 681-01	1	1														Tätning Seal	
5	12 25 360-01	2	2														Packning Gasket	
6	20 62 328-12	4	4														Skruv Screw	
7	28 88 170-01	4	4														Fjäderbricka Washer	
8	29 31 180-04	1	1														Kullager Ball bearing	
9	29 31 240-04	1	1														Kullager Ball bearing	
10	16 10 938-01	1	1														Fläns Flange	
11	29 65 444-01	1	1														Tätning Seal	
13	21 21 328-52	4	4														Skruv Screw	
14	16 11 546-01	4	4														Dragbult, cylinder Cylinder stud	
15	16 10 774-01	1	1														Frikopplingsaxel Declutching shaft	
16	16 11 171-01	1	1														Hävarm Lever	
17	29 65 173-16	1	1														Tätning Seal	
18	28 16 190-01	1	1														Bricka Washer	
19	12 25 077-01	1	1														Stoppskruv Screw	
20	25 80 153-01	1	1														Låsmutter M8 Nut	
21	28 38 465-01	1	1														Pinne Pin	
22	16 12 537-01	1	1														Magnetplugg Magneto plug	
23	12 25 025-01	1	1														Packning Gasket	
24	16 10 777-01	2	2														Flänsbussning Flange sleeve	
25	16 11 516-01	1	1														Flänsbussning Flange sleeve	
26	20 24 385-12	9	9														Skruv M6x 75 Screw	
27	28 16 201-01	9	9														Bricka Washer	
28	16 10 647-01	1	1														Magnetkåpa Magneto cover	
29	20 24 378-12	4	4														Skruv M6x 40 Screw	
30	16 11 623-01	1	1														Packning Gasket	
31	16 11 560-01	1	1														Kåpa Cover	
32	20 24 380-12	1	1														Skruv M6x 50 Screw	
33	20 24 376-12	2	2														Skruv M6x 35 Screw	
34	16 11 562-01	1	1														Vevhuspackning Gasket	
35	16 14 728-01	1	1														Genomföring Grommet	
36	16 12 472-01	1	1														Distansring Spacer	
37	16 12 471-04	1	1														Kedjedrev z = 13 Sprocket	
38	28 20 020-01	1	1														Spårring Circlip	
39	15 19 373-08	1	1														Kedja 5/8x 1/4 110 Chain	

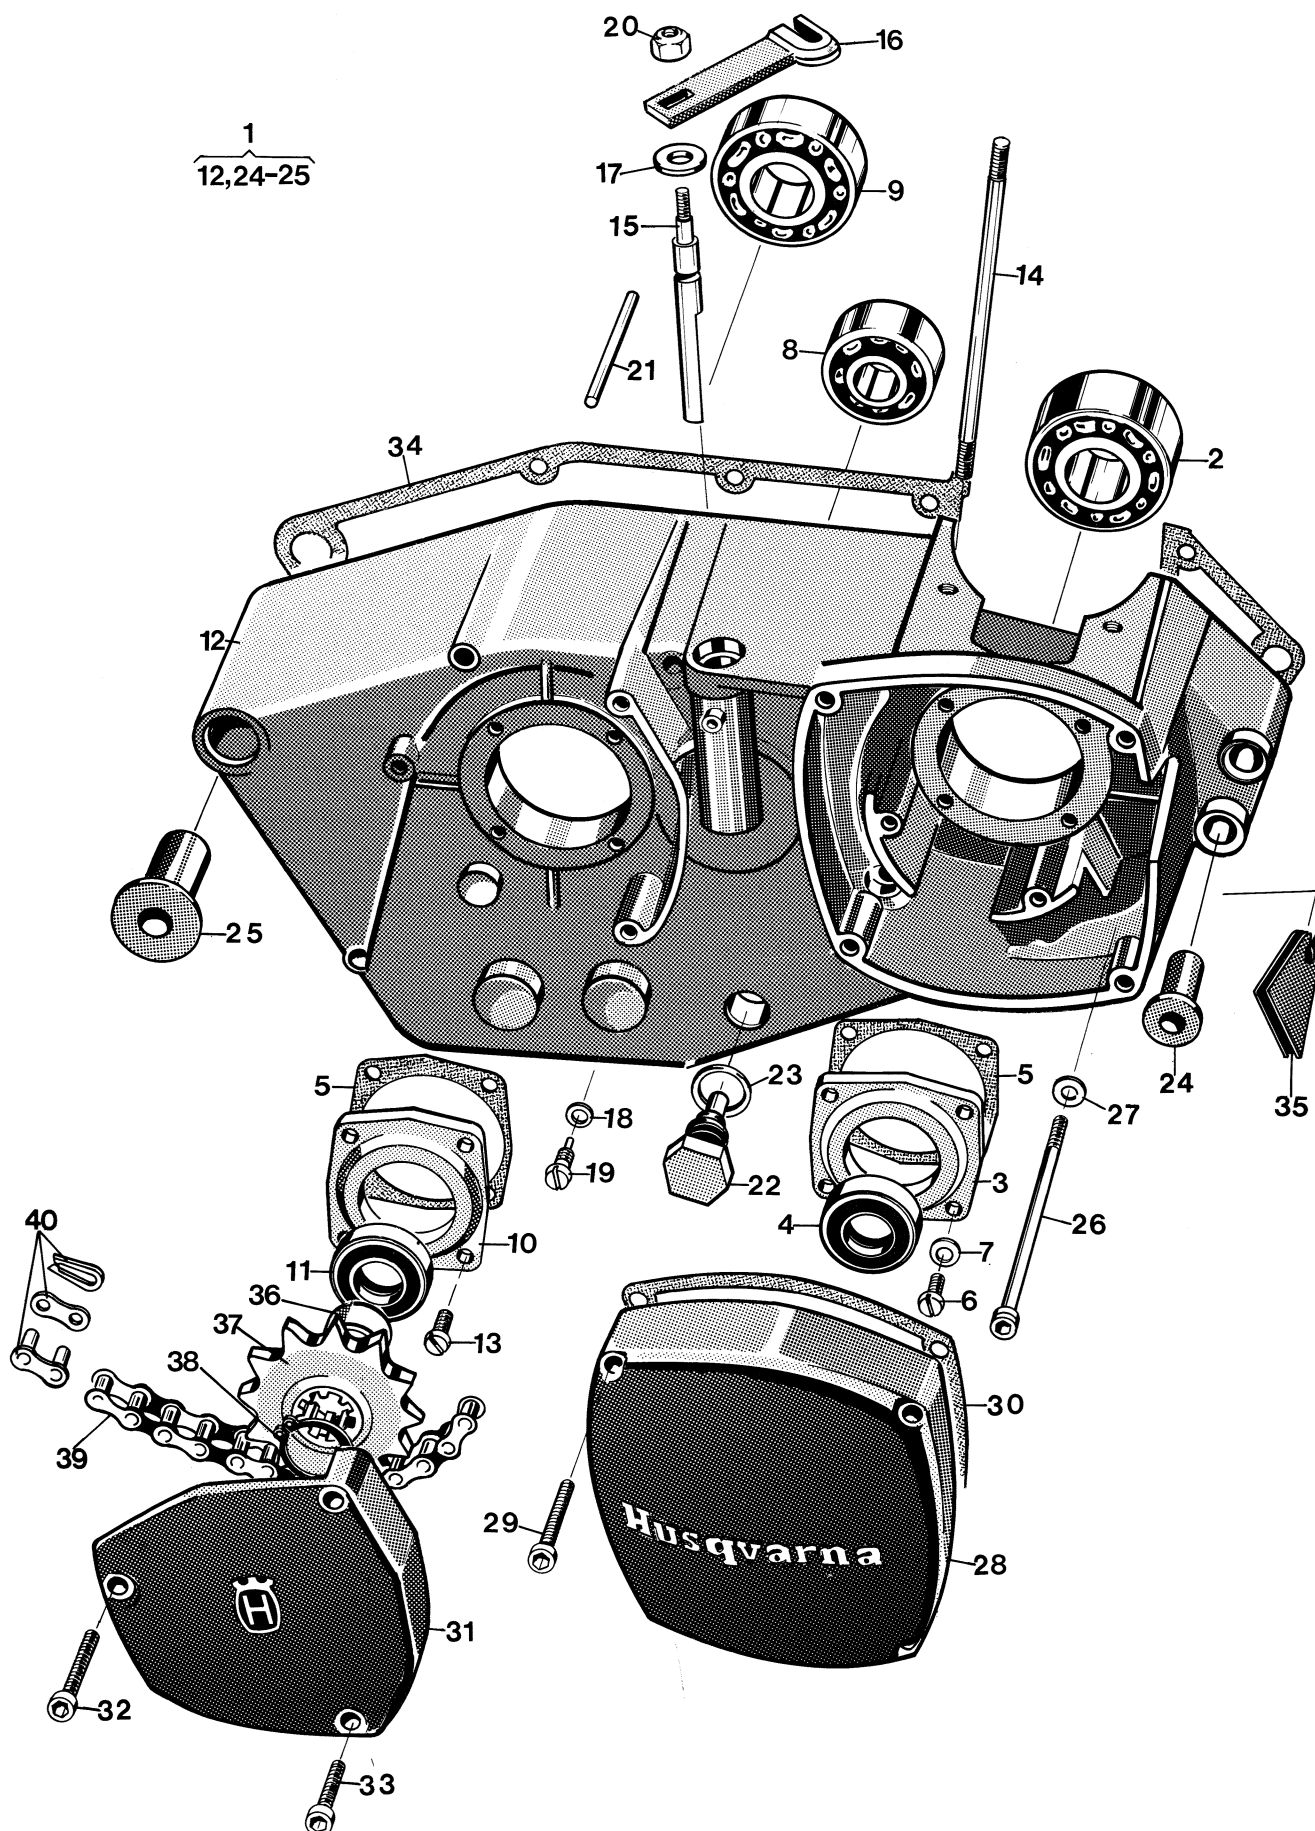


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
40	15 19 374-01	1	1													Kedjelås Master link	
Tillbehör/Accessories																	
	16 12 471-01 16 12 471-02 16 12 471-03 16 12 471-05 16 12 471-06 16 12 471-07 16 12 471-08 16 19 803-01															Kedjedrev Front sprocket z = 10 z = 11 z = 12 z = 14 z = 15 z = 16 z = 17 Packningssats Gesket set	

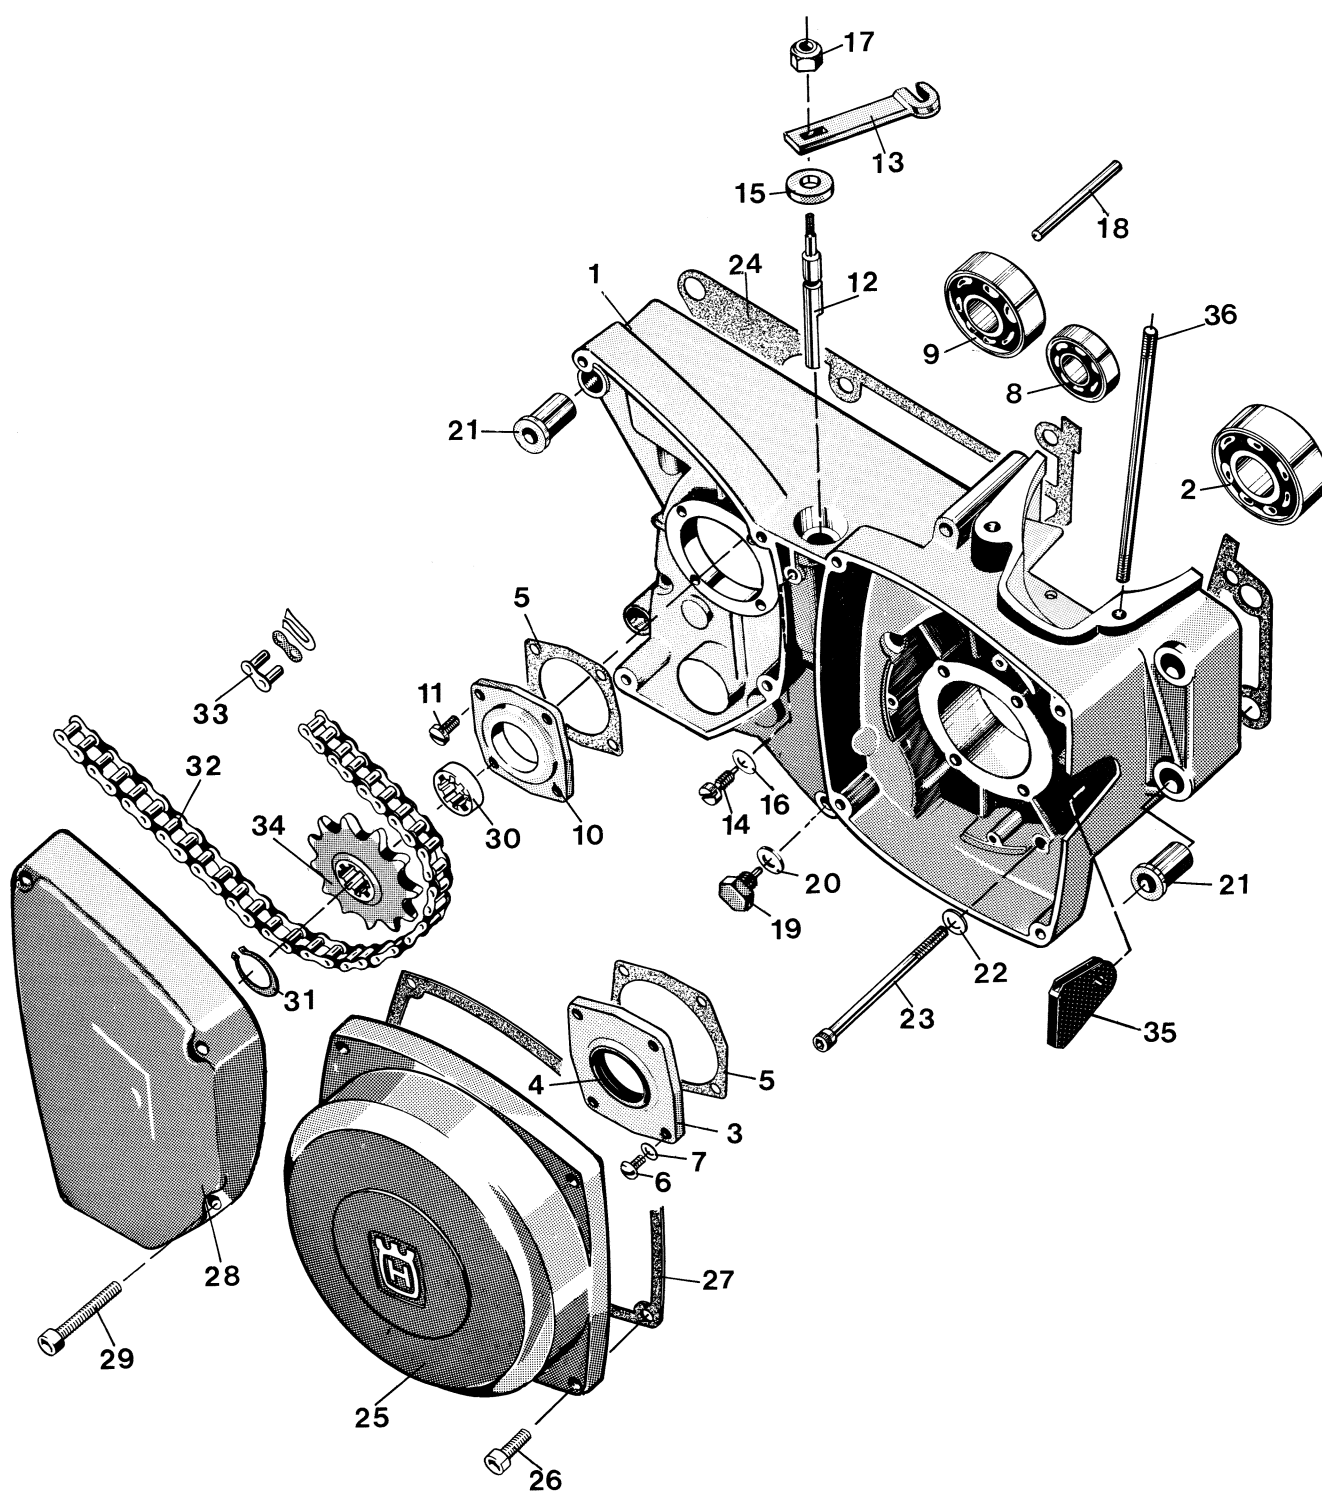


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
1	16 19 812-01			1	1	1	1	1									Vevhushalva, höger	
	16 11 788-01			1	1	1	1	1									Crankcase halve, right	
																	Vevhushalvor par	
2	29 32 524-21			1	1	1	1	1									Crankcase halves pair	
3	16 10 810-01			1	1	1	1	1									Kullager SKF 3205/C3	
																	Ball bearing	
4	29 65 444-01			1	1	1	1	1									Fläns	
																	Flange	
4	29 65 444-01			1	1	1	1	1									Tätning	
																	Seal	
5	12 25 358-01			2	2	2	2	2									Packning	
																	Gasket	
6	20 62 328-12			4	4	4	4	4									Skruv M5x14	
																	Screw	
7	28 88 170-01			4	4	4	4	4									Bricka	
																	Washer	
9	29 31 200-04			1	1	1	1	1									Kullager SKF 6302/C3	
																	Ball bearing	
9	29 31 265-59			1	1	1	1	1									Kullager SKF 6205RS/C3	
																	Ball bearing	
10	16 11 778-01			1	1	1	1	1									Fläns	
																	Flange	
11	21 21 328-52			4	4	4	4	4									Skruv M5x14	
																	Screw	
12	16 10 774-01			1	1	1	1	1									Frikopplingsaxel	
																	Declutching shaft	
13	16 11 171-01			1	1	1	1	1									Hävarm	
																	Lever	
14	12 25 077-01			1	1	1	1	1									Stoppskruv	
																	Stop screw	
15	29 65 173-16			1	1	1	1	1									Tätning	
																	Seal	
16	28 16 190-01			1	1	1	1	1									Bricka 5,3x12	
																	Washer	
17	25 80 153-01			1	1	1	1	1									Mutter M8	
																	Nut	
18	28 38 465-01			1	1	1	1	1									Räffelpinne	
																	Dowelpin	
19	16 12 537-01			1	1	1	1	1									Magnetplugg	
																	Magneto plug	
20	12 25 025-01			1	1	1	1	1									Packning	
																	Gasket	
21	16 10 777-01			4	4	4	4	4									Flänsbussning	
																	Flange sleeve	
22	28 16 201-01			8	8	8	8	8									Bricka 6,4x12	
																	Washer	
23	20 24 385-12			8	8	8	8	8									Skruv M6x75	
																	Screw	
24	16 11 581-01			1	1	1	1	1									Packning	
																	Gasket	
25	16 11 571-01			1	1	1	1	1									Magnetkåpa	
																	Magneto cover	
26	20 24 372-12			4	4	4	4	4									Skruv M6x25	
																	Screw	
27	16 11 621-01			1	1	1	1	1									Packning	
																	Gasket	
28	16 11 441-01			1	1	1	1	1									Kåpa	
																	Cover	
29	20 24 376-12			3	3	3	3	3									Skruv M6x35	
																	Screw	
30	16 12 353-01			1	1	1	1	1									Distansring	
																	Distance ring	
31	28 20 025-01			1	1	1	1	1									Spårring	
																	Circlip	
32	15 19 373-08				1		1										Drivkedja 5/8"x 1/4" 110	
																	Chain Renold	
	15 19 373-09			1		1											Drivkedja 5/8"x 1/4" 112	
																	Chain Renold	
	15 19 373-10							1									Drivkedja 5/8"x 1/4" 114	
																	Chain Renold	
	15 19 375-08				1		1										Drivkedja 5/8"x 1/4" 110	
																	Chain DID	
	15 19 375-09			1		1											Drivkedja 5/8"x 1/4" 112	
																	Chain DID	
	15 19 375-10							1									Drivkedja 5/8"x 1/4" 114	
																	Chain DID	
33	15 19 374-01			1	1	1	1	1									Kedjelås 5/8x1/4	
																	Master link Renold	
	15 19 376-01			1		1											Kedjelås 5/8x1/4	
																	Master link DID	

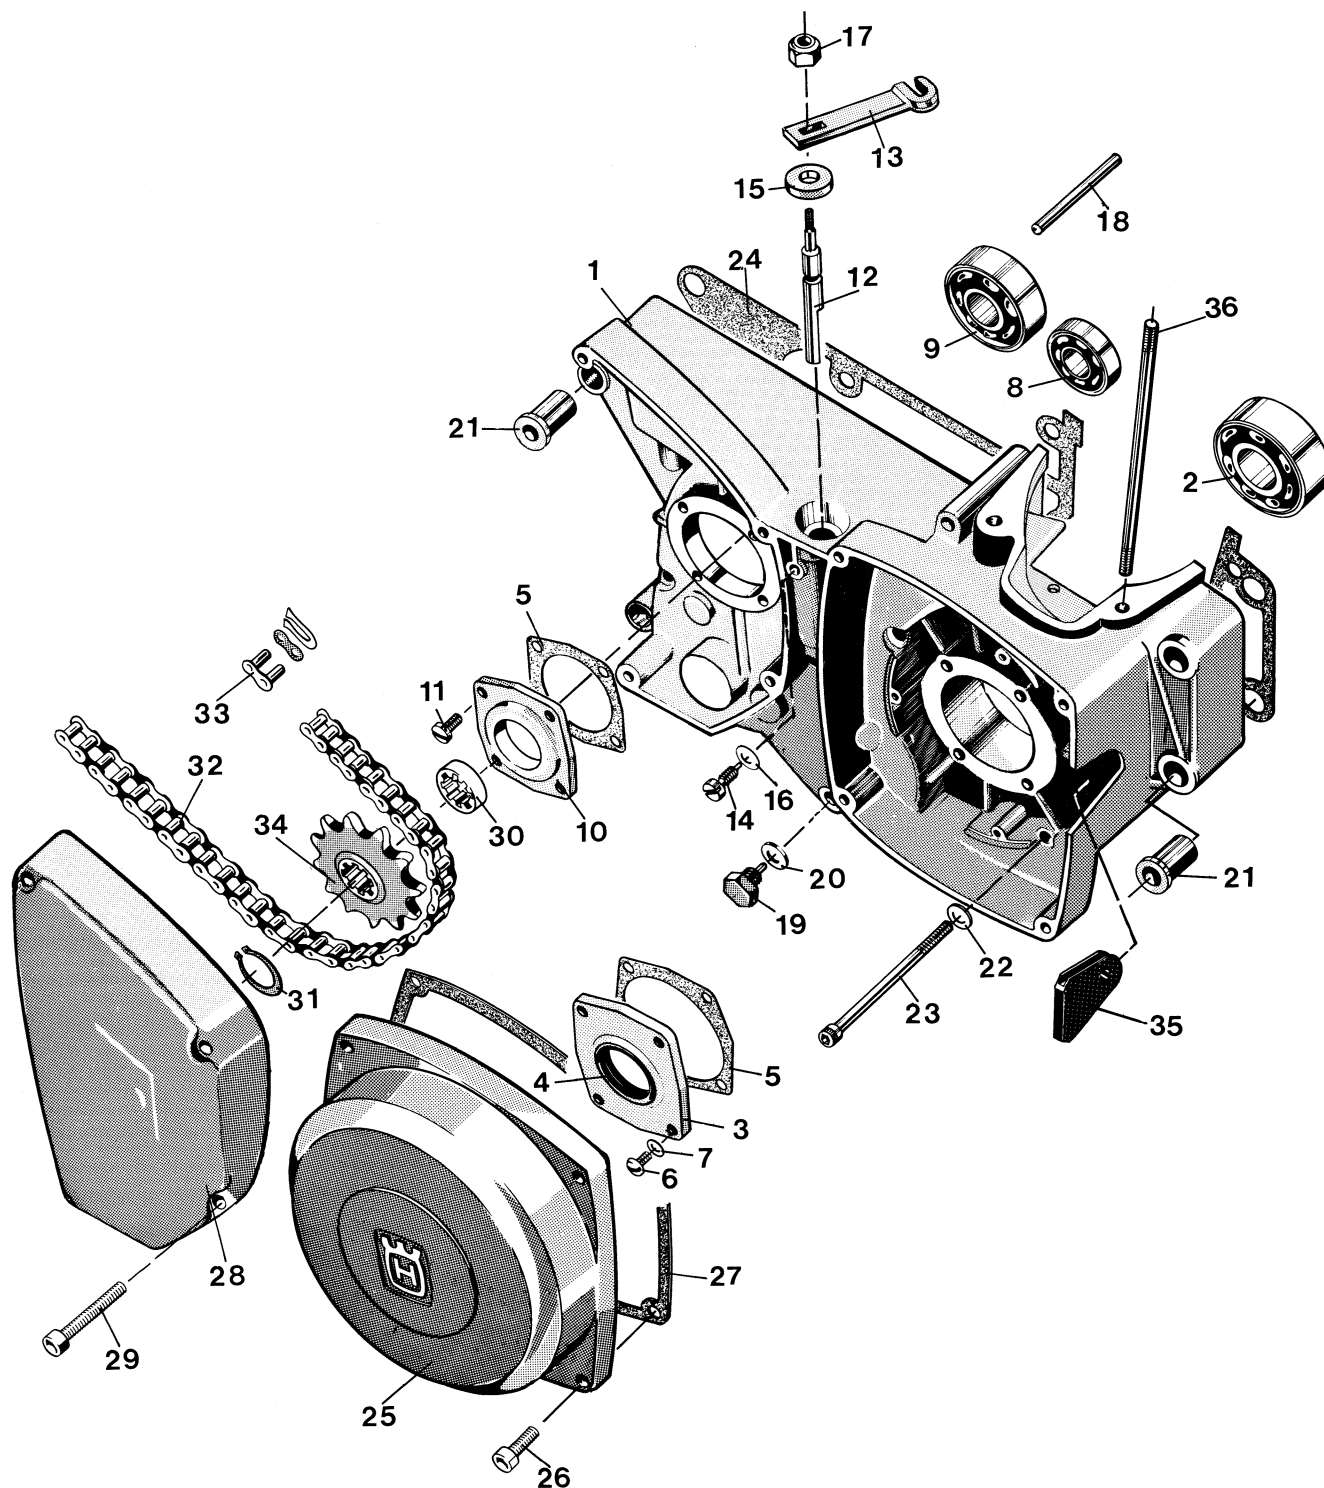


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
34	16 12 693-02			.	.	.	.	.								Kedjedrev z = 11 Sprocket	
	16 12 693-03			1		1										Kedjedrev z = 12 Sprocket	
	16 12 693-04				1		1	1								Kedjedrev z = 13 Sprocket	
	16 12 693-05			.	.	.	.	.								Kedjedrev z = 14 Sprocket	
	16 12 693-06			.	.	.	.	.								Kedjedrev z = 15 Sprocket	
35	16 14 728-01			1	1	1	1	1								Kabelgenomföring Grommet	
36	16 11 422-01			5	5	5	5	5								Dragbult, cylinder Cylinder stud	
37	16 11 322-01					1	1	1								SSFF 1/8"	

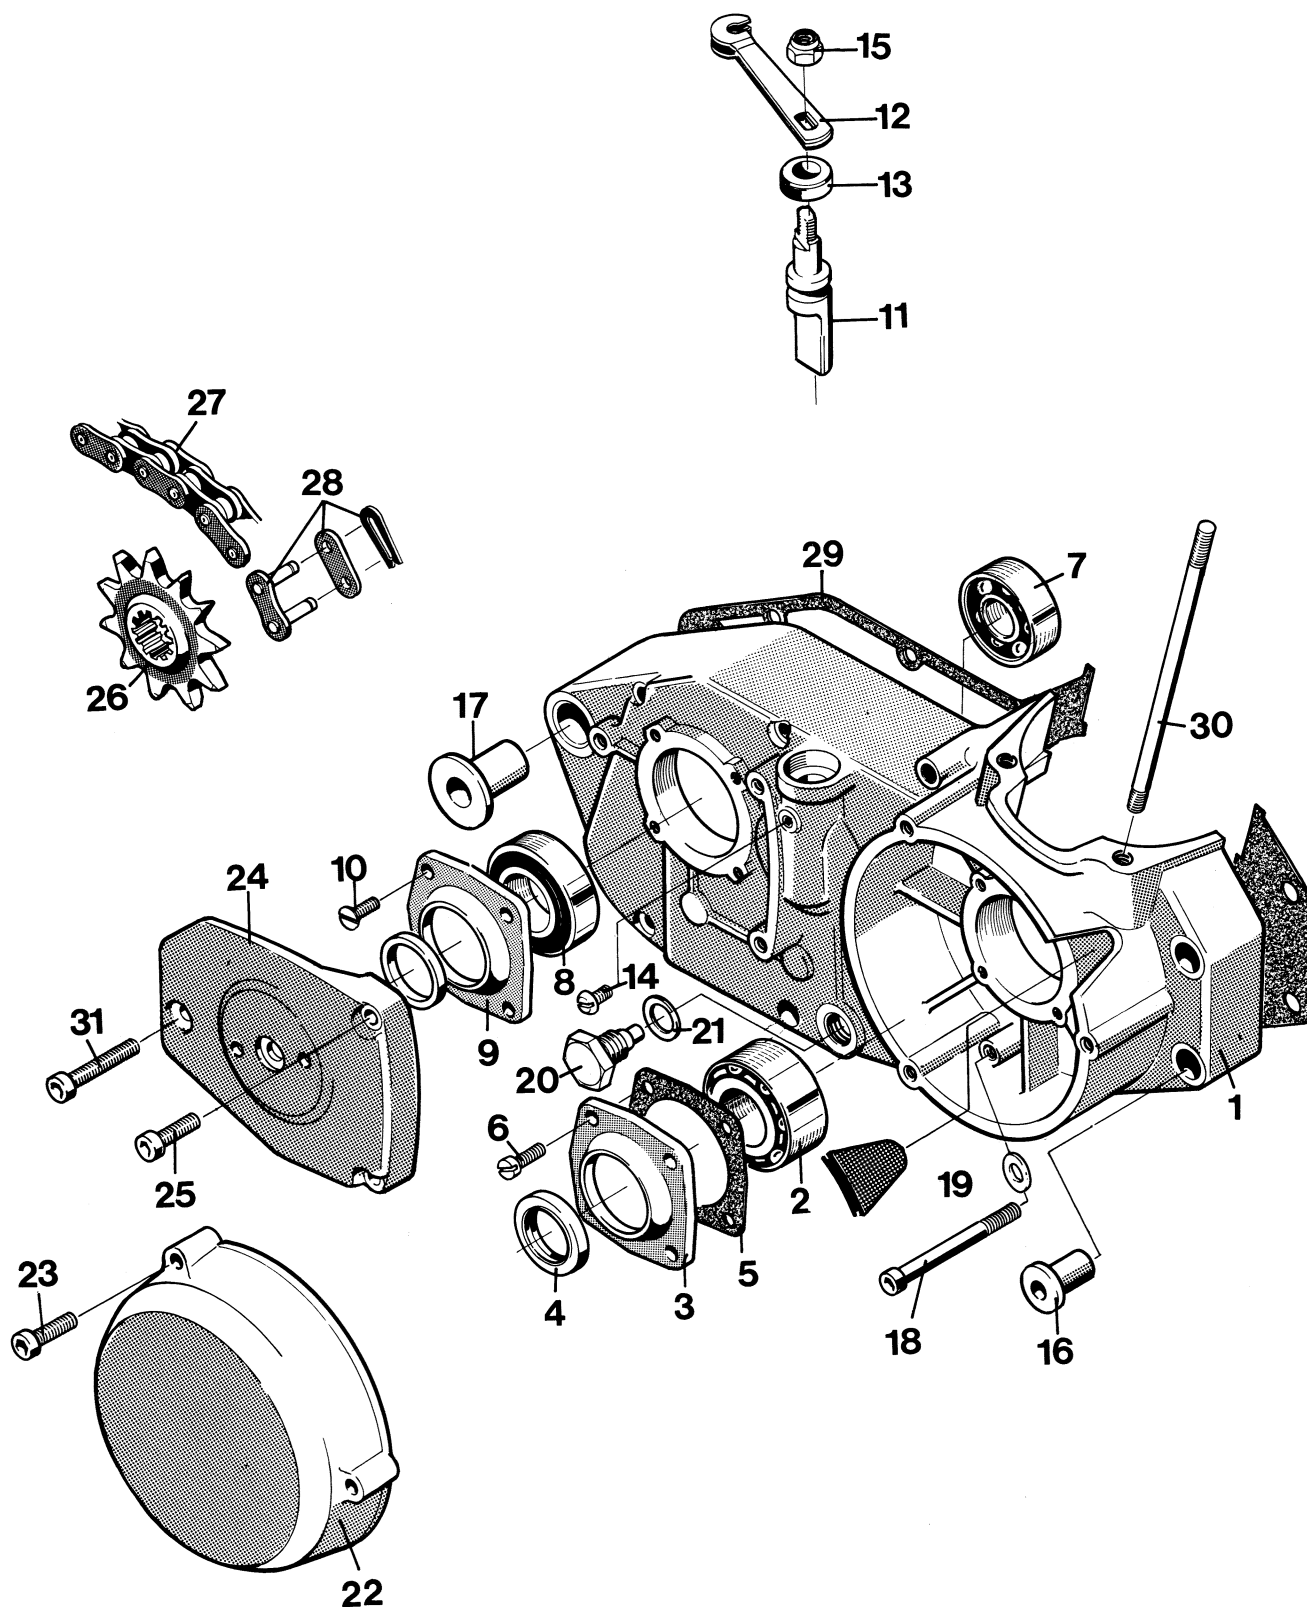


Fig.	Part Number Detaljnummer	Quantity/Antal												Description Benämning			
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
N	1	16 11 636-02							1	1	1	1				Vevhushalva höger Crankcase halve	
		16 19 822-01														Vevhushalva höger med bussning Crankcase half with bushing	
	2	29 32 524-21							1	1	1	1				Vinkelkontaktkullager Ball bearing	
	3	16 10 810-01							1	1	1	1				Fläns Flange	
	4	29 65 444-01							1	1	1	1				Tätning Seal	
	5	12 25 358-01							1	1	1	1				Packning Gasket	
	6	20 62 328-12							4	4	4	4				Skruv Screw	
	7	29 31 200-04							1	1	1	1				Kullager Ball bearing	
	8	29 31 265-59							1	1	1	1				Kullager Ball bearing	
	9	16 11 778-01							1	1	1	1				Fläns Flange	
10	21 21 328-52							4	4	4	4				Skruv Screw		
N	11	16 11 663-01							1	1	1	1				Frikopplingsaxel Declutching shaft	
	12	16 11 171-01							1	1	1	1				Hävarm Lever	
	13	29 65 173-16							1	1	1	1				Tätning Seal	
	14	20 62 323-11							1	1	1	1				Skruv Screw	
	15	25 80 153-01							1	1	1	1				Låsmutter Nut	
	16	16 10 777-01							2	2	2	2				Flänsbussning Flange sleeve	
	17	16 11 516-01							1	1	1	1				Flänsbussning Flange sleeve	
	18	20 24 385-12							6	6	6	6				Skruv Screw	
	19	28 16 201-01							6	6	6	6				Bricka Washer	
	20	16 12 537-01							1	1	1	1				Magnetplugg Magneto plug	
N	21	12 25 025-01							1	1	1	1				Packning Gasket	
	22	16 11 640-01							1	1	1	1				Magnetkåpa Magneto cover	
	23	20 24 378-12							3	3	3	3				Skruv Screw	
	24	16 11 816-01							1	1	1	1				Kåpa Cover	
	25	20 24 374-12							2	2	2	2				Skruv Screw	
	26	16 12 693-05							1	1	1	1				Kedjedrev z= 14 Sprocket = 14	
	27	15 19 373-09 15 19 375-09							1	1	1	1				Drivkedja Renold 5/8x1/4", 112 länkar Chain DID 5/8x1/4", 112 tinks	
	28	15 19 374-01 15 19 376-01							1	1	1	1				Kedjelås Renold Chain lock DID	
	29	16 11 667-02							1	1	1	1				Packning	
	30	16 11 694-01							4	4	4	4				Dragbult Cylinder stud	
N	31	20 24 376-12							1	1	1	1				Skruv Screw	
	32	16 14 728-01							1	1	1	1				Kabelgenomföring Grommet	
	33	16 19 663-01							1	1	1	1				GSKT -ET 130	

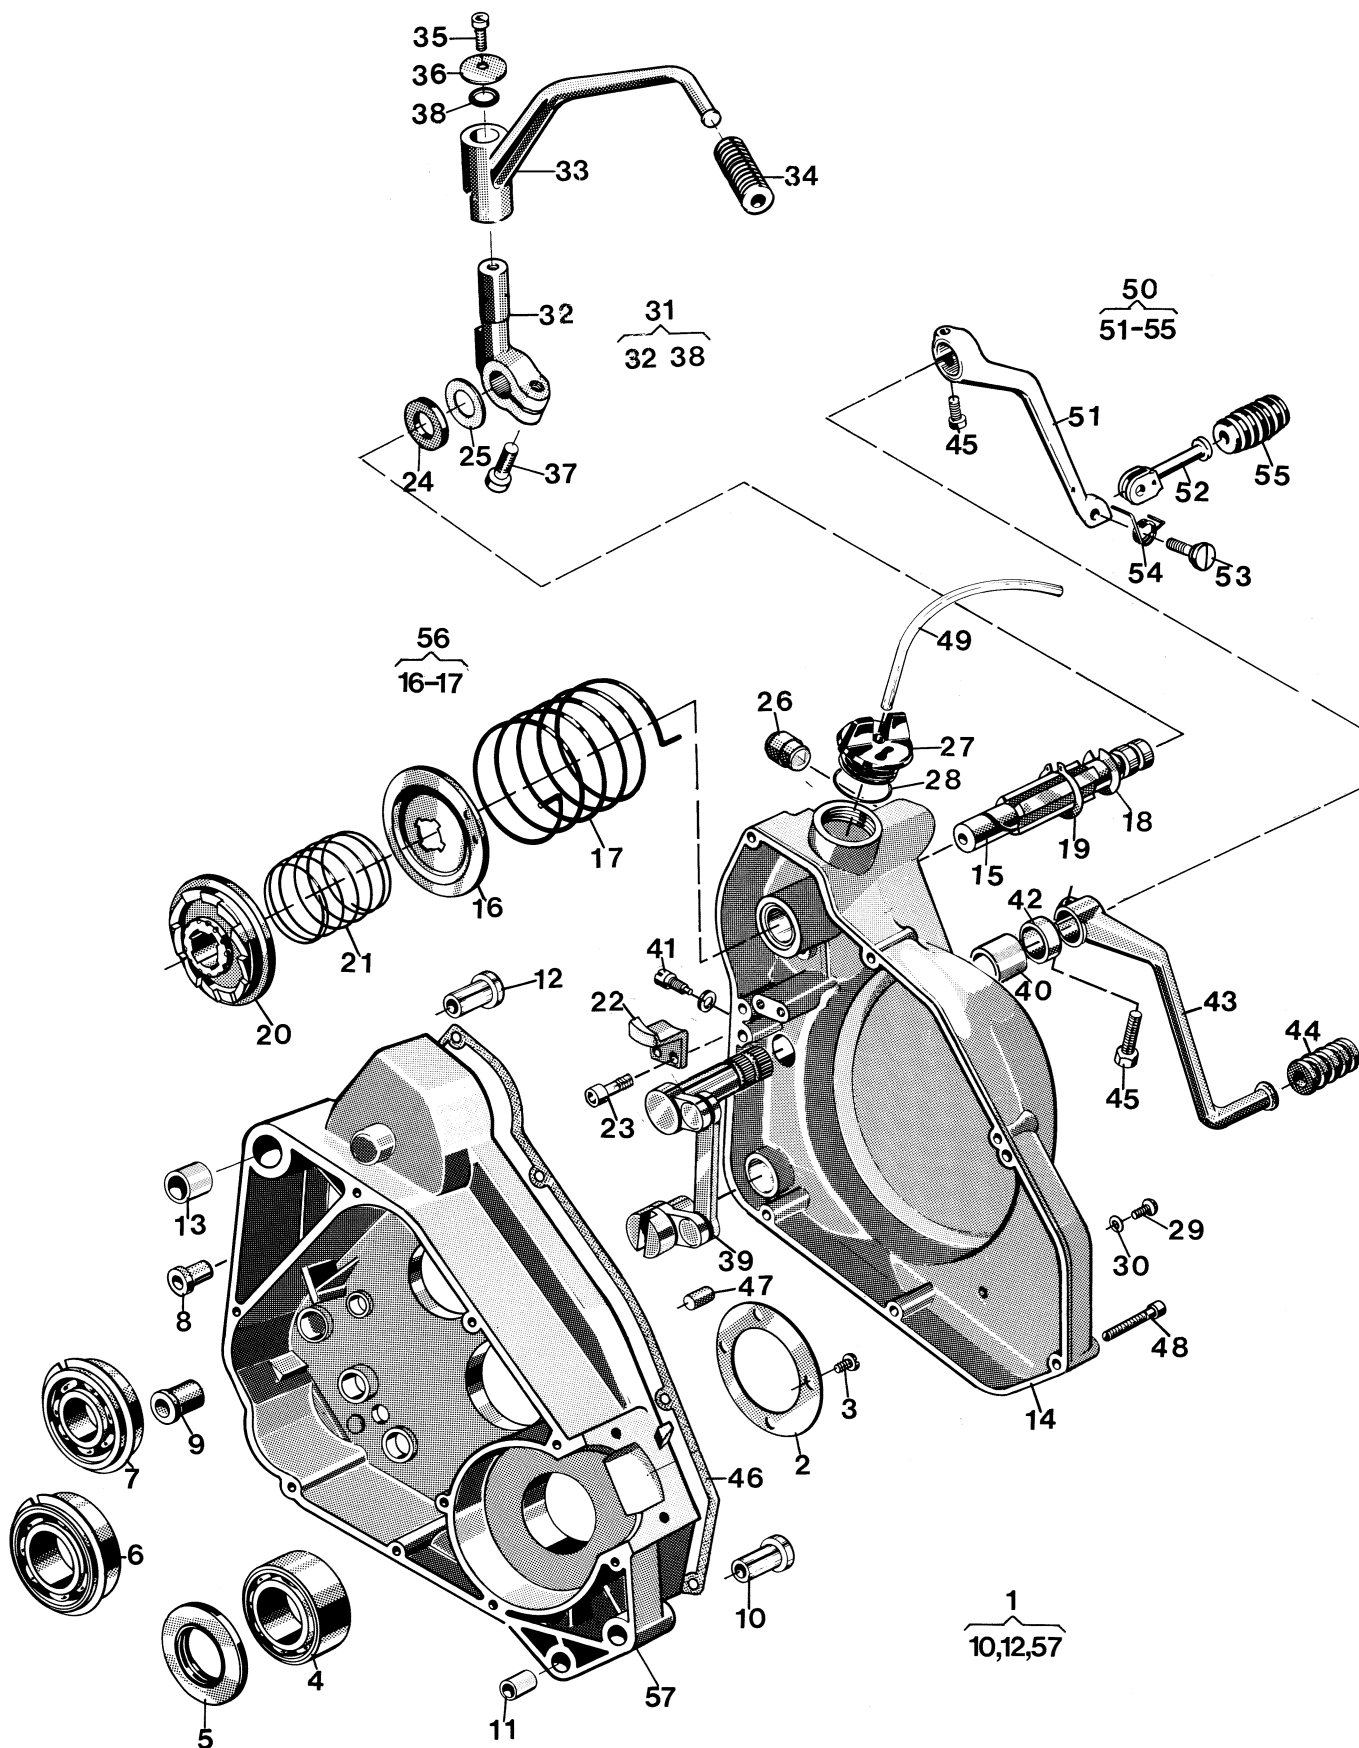


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
1	16 19 817-01 16 11 572-01	1	1														Vevhushalva, vänster Crankcase halve left Vevhushalvor par Crankcase halves pairs	
2	16 11 566-01	1	1														Stödbricka Support washer	
3	20 06 331-59	4	4														Skruv M5x20 Screw	
4	29 32 520-21	1	1														Kullager SKF 3205/C3 Ball bearing	
5	29 65 443-14	1	1														Tätning Seal	
6	29 31 265-57	1	1														Kullager SKF 6205 NR/C3 Ball bearing	
7	29 31 220-57	1	1														Kullager SKF 6303 NR/C3 Ball bearing	
8	16 11 465-01	2	2														Bussning Bushing	
9	12 25 356-01	1	1														Bussning Bushing	
10	16 10 777-01	2	2														Flänsbussning Flange sleeve	
11	16 10 776-01	1	1														Styrhylsa Steering sleeve	
12	16 11 516-01	1	1														Flänsbussning Flange sleeve	
13	16 11 527-01	1	1														Styrhylsa Steering sleeve	
14	16 11 486-01	1	1														Vevhuskåpa, vänster Transmission cover	
15	12 25 434-01	1	1														Axel Shaft	
16	12 25 435-01	1	1														Medbringarskiva Driving disc	
17	12 25 437-01	1	1														Returfjäder Spring	
18	12 25 436-01	1	1														Spårring Circlip	
19	28 20 020-01	1	1														Spårring Circlip	
20	12 25 438-01	1	1														Medbringarehjul Driving wheel	
21	12 25 439-01	1	1														Fjäder Spring	
22	12 25 440-01	1	1														Lyfthake Pawl	
23	20 26 370-44	2	2														Skruv Screw	
24	12 25 442-01	1	1														Packning Gasket	
25	12 25 443-01	1	1														Stödbricka Support washer	
26	12 25 446-01	1	1														Buffert Buffer	
27	16 10 786-01	1	1														Lock Cap	
28	50 12 782-01	1	1														Packning Gasket	
29	20 62 364-11	1	1														Skruv M6x10 Screw	
30	16 10 823-01	1	1														Packning Gasket	
31	16 12 680-01	1	1														Kickstartpedal, kpl. Kick starter pedal compl.	
33	16 12 679-01	1	1														Kickstartpedal Kick starter pedal	
34	12 25 702-01	1	1														Pedalgummi Pedal rubber	
35	20 24 368-12	1	1														Skruv M6x16 Screw	
36	28 01 416-01	1	1														Bricka 6,5x22 Washer	
37	20 24 455-12	1	1														Skruv M8x30 Screw	
38	29 70 135-01	1	1														O-ring 13,3x2,4 O-ring	
39	16 11 535-01	1	1														Växelmekanism, kpl. Gear links compl.	




Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
40	16 11 474-01	1	1													Bussning Bushing	
41	12 25 077-01	1	1													Stoppskruv Screw	
42	29 65 289-07	1	1													Tätning Seal	
43	16 12 504-02	1														Fotväxelpedal Shift lever	
44	16 12 813-01	1														Pedalgummi Pedal rubber	
45	20 24 370-12	1	1													Skruv M6x20 Screw	
46	16 10 792-01	1	1													Packning Gasket	
47	28 26 571-01	2	2													Cyl. pinne Dowel pin	
48	20 24 376-12	7	7													Skruv M6x35 Screw	
49	12 25 621-10															Slang/m 4,8x8 Hose/m	
50	16 12 683-01		1													Fotväxelpedal Shift lever	
53	16 12 686-01		1													Skruv Screw	
54	16 12 687-01		1													Fjäder Spring	
55	16 12 688-01		1													Pedalgummi Pedal rubber	
56	16 12 344-01	1	1													Medbringareskiva kpl. Driving disc compl.	

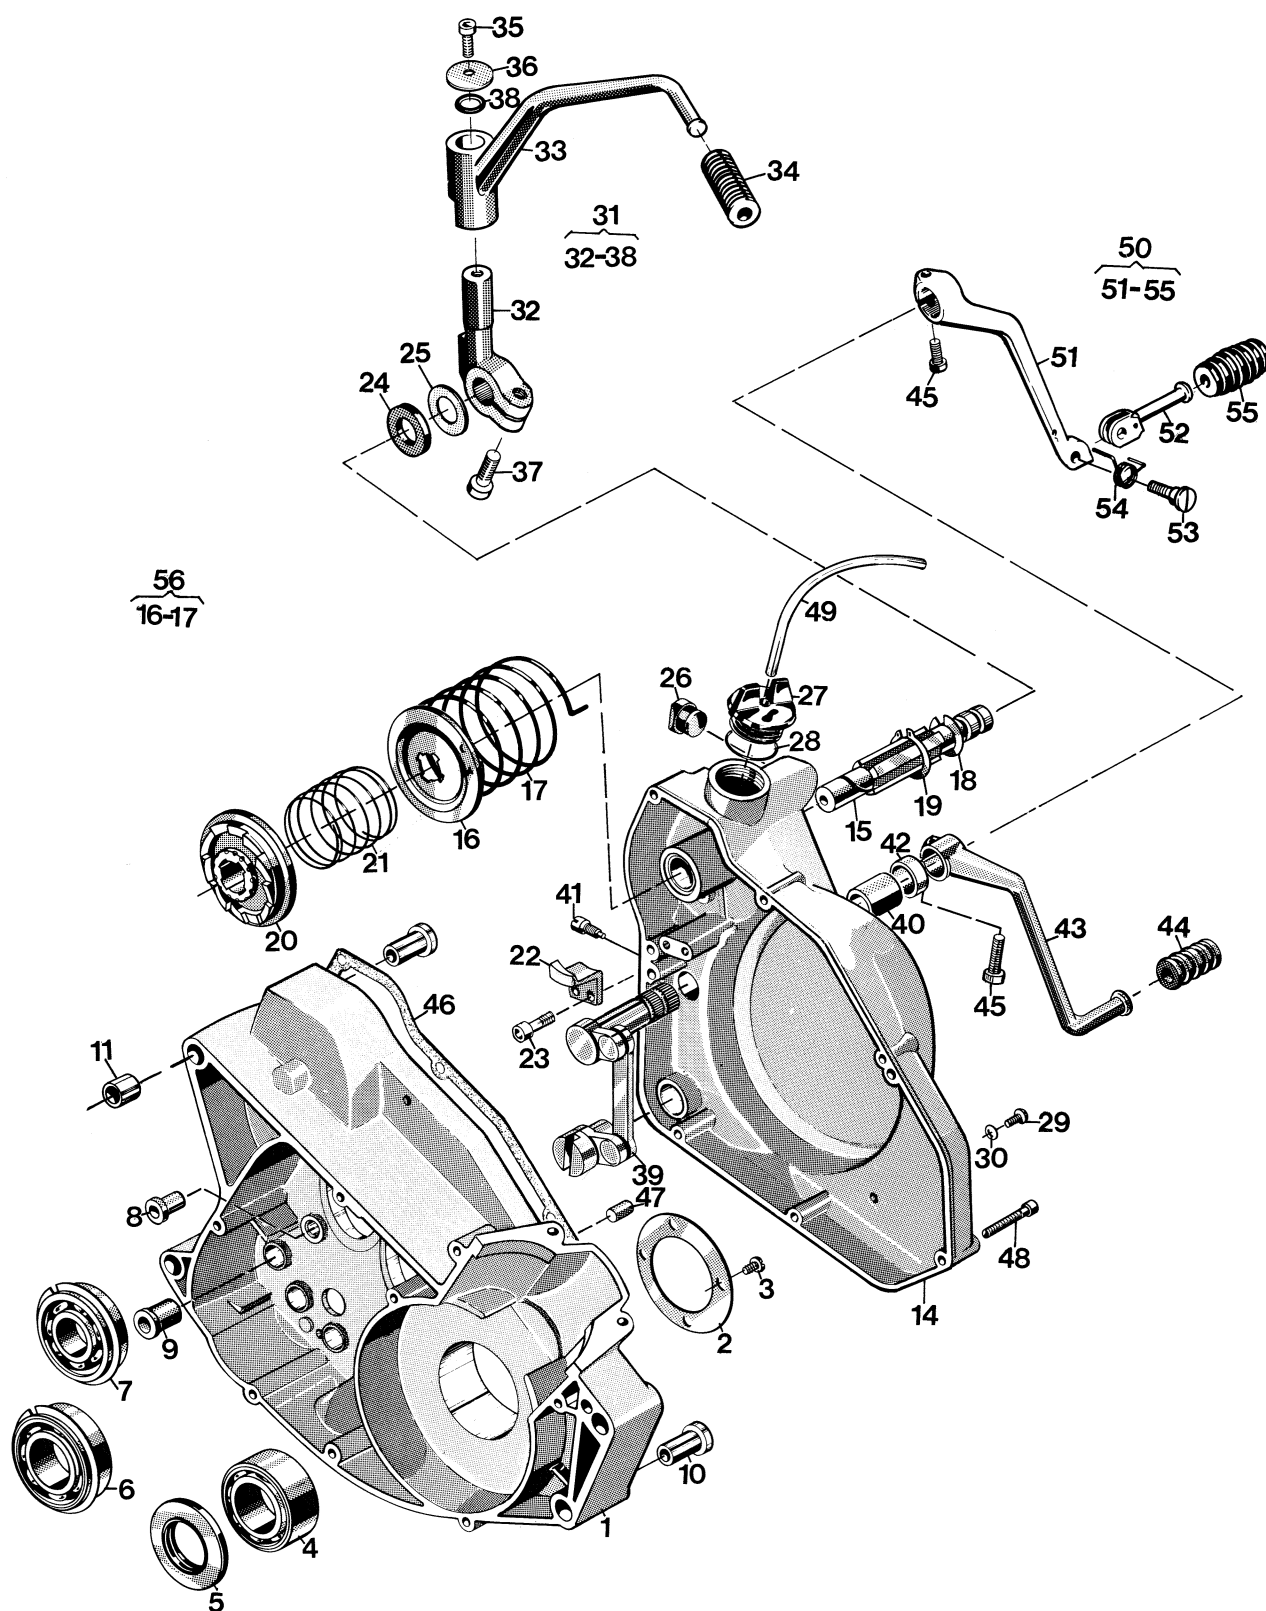


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
1	16 19 823-01 16 11 788-01			1	1	1	1	1									Vevhushalva, vänster Crankcase halve left Vevhushalvor par Crankcase halves pair	
2	16 10 779-01			1	1	1	1	1									Stödbricka Support washer	
3	20 06 331-59			4	4	4	4	4									Skruv M5x20 Screw	
4	29 32 524-21			1	1	1	1	1									Kullager SKF 3205/C3 Ball bearing	
5	29 65 549-14			1	1	1	1	1									Tätning Seal	
6	29 31 265-57			1	1	1	1	1									Kullager SKF 6205 NR/C3 Ball bearing	
7	29 31 220-57			1	1	1	1	1									Kullager SKF 6305 NR/C3 Ball bearing	
8	16 11 465-01			2	2	2	2	2									Bussning Bushing	
9	12 25 356-01			1	1	1	1	1									Bussning Bushing	
10	16 10 777-01			4	4	4	4	4									Flänsbussning Flange sleeve	
11	16 10 776-01			2	2	2	2	2									Styrhylsa Steering sleeve	
14	16 11 486-01			1	1	1	1	1									Vevhuskåpa, vänster Transmission cover	
15	12 25 434-01			1	1	1	1	1									Axel Shaft	
16	12 25 435-01			1	1	1	1	1									Medbringarskiva Driving disc	
17	12 25 437-01			1	1	1	1	1									Returfjäder Spring	
18	12 25 436-01			1	1	1	1	1									Spårring Circlip	
19	28 20 020-01			1	1	1	1	1									Spårring Circlip	
20	12 25 438-01			1	1	1	1	1									Medbringarehjul Driving wheel	
21	12 25 439-01			1	1	1	1	1									Fjäder Spring	
22	12 25 440-01			1	1	1	1	1									Lyfthake Pawl	
23	20 26 370-44			2	2	2	2	2									Skruv Screw	
24	12 25 442-01			1	1	1	1	1									Packning Gasket	
25	12 25 443-01			1	1	1	1	1									Stödbricka Support washer	
26	12 25 446-01			1	1	1	1	1									Buffert Buffer	
27	16 10 786-01			1	1	1	1	1									Lock Cap	
28	50 12 782-01			1	1	1	1	1									Packning Gasket	
29	20 62 364-11			1	1	1	1	1									Skruv M6x10 Screw	
30	16 10 823-01			1	1	1	1	1									Packning Gasket	
31	16 12 680-01			1	1	1	1	1									Kickstartpedal, kpl. Kick starter pedal compl.	
33	16 12 679-01			1	1	1	1	1									Kickstartpedal Kick starter pedal	
34	12 25 702-01			1	1	1	1	1									Pedalgummi Pedal rubber	
35	20 24 368-12			1	1	1	1	1									Skruv M6x16 Screw	
36	28 01 416-01			1	1	1	1	1									Bricka 6,5x22 Washer	
37	20 24 455-12			1	1	1	1	1									Skruv M8x30 Screw	
38	29 70 135-01			1	1	1	1	1									O-ring 13,3x2,4 O-ring	
39	16 11 535-01			1	1	1	1	1									Växelmekanism, kpl. Gear links compl.	
40	16 11 474-01			1	1	1	1	1									Bussning Bushing	
41	12 25 077-01			1	1	1	1	1									Stoppskruv Screw	

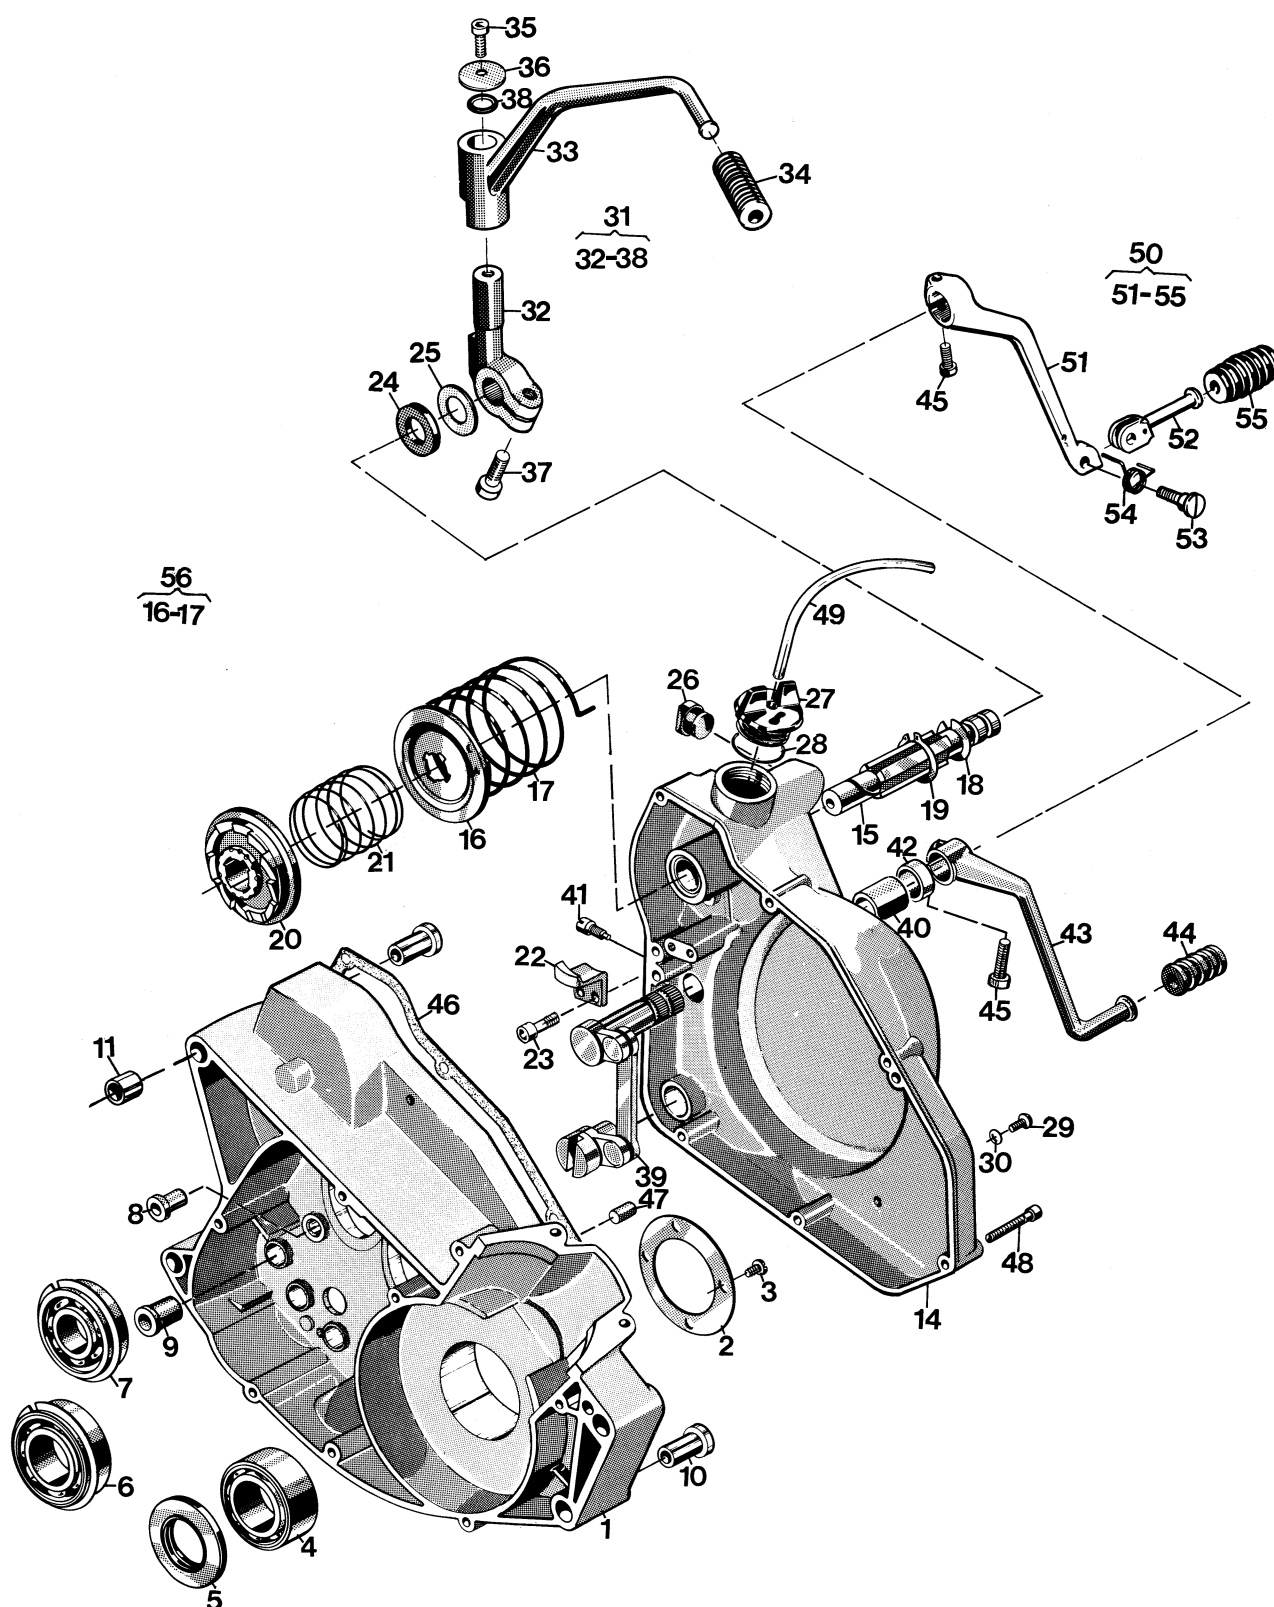


Fig.	Part Number Detaljnummer	Quantity/Antal													Description Benämning		
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
42	29 65 289-07			1	1	1	1	1								Tätning Seal	
43	16 12 504-02			1		1										Fotväxelpedal Shift lever	
44	16 12 813-01			1		1										Pedalgummi Pedal rubber	
45	20 24 370-12			1	1	1	1	1								Skruv M6x20 Screw	
46	16 10 792-01			1	1	1	1	1								Packning Gasket	
47	28 26 571-01			2	2	2	2	2								Cyl. pinne Dowel pin	
48	20 24 376-12			7	7	7	7	7								Skruv M6x35 Screw	
49	12 25 621-10			1	1	1	1	1								Slang/m 4,8x8 Hose/m	
50	16 12 683-01				1			1	1							Fotväxelpedal Shift lever	
53	16 12 686-01				1			1	1							Skruv Screw	
54	16 12 687-01				1			1	1							Fjäder Spring	
55	16 12 688-01				1			1	1							Pedalgummi Pedal rubber	
56	16 12 344-01			1	1	1	1	1								Medbringareskiva kpl. Driving disc compl.	

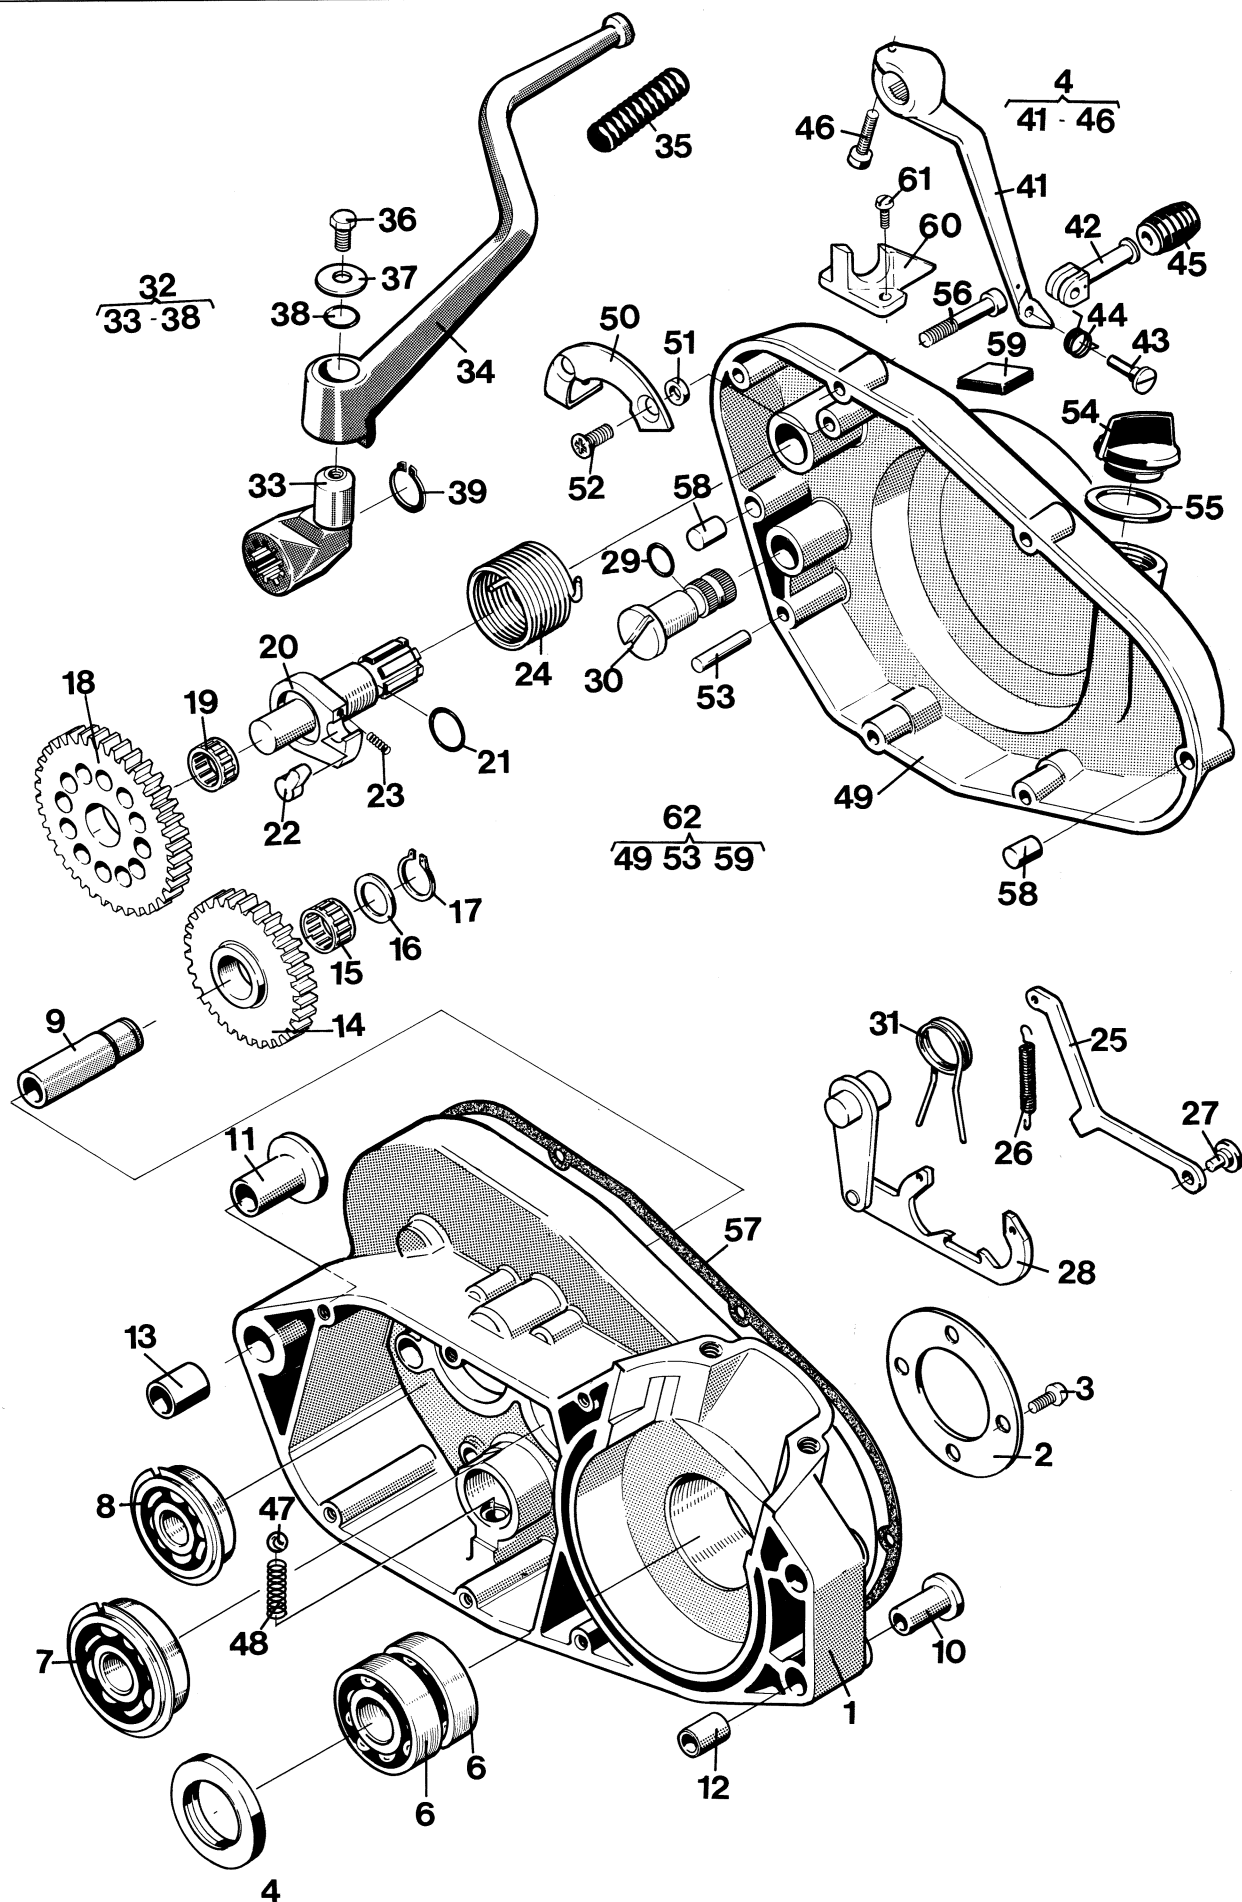


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
N	1	16 19 823-01								1	1	1	1				Vevhushalva, vänster komplett Crankcase halve left	
	2	16 10 779-01								1	1	1	1				Stödbricka Support washer	
	3	20 06 331-59								4	4	4	4				Skruv M6S 5x20 Screw	
	4	29 65 549-14								1	1	1	1				Tätning Seal	
N	6	29 31 265-04								2	2	2	2				Kullager Ball bearing	
	7	29 31 265-57								1	1	1	1				Kullager Ball bearing	
	8	29 31 220-57								1	1	1	1				Kullager Ball bearing	
	10	16 10 777-01								2	2	2	2				Flänsbussning Flange sleeve	
N	11	16 11 516-01								1	1	1	1				Flänsbussning Flange sleeve	
	12	16 10 776-01								1	1	1	1				Styrhylsa, fram Steering sleeve	
	13	16 11 527-01								1	1	1	1				Styrhylsa, bak Steering sleeve	
N	14	16 11 674-01								1	1	1	1				Mellanhjul Cog wheel	
N	15	16 11 675-01								1	1	1	1				Nålhållare Needle holder	
	16	29 95 250-01								1	1	1	1				Bricka Washer	
	17	28 20 016-01								1	1	1	1				Spårring Circlip	
N	18	16 11 676-01								1	1	1	1				Kuggghjul Gear wheel	
N	19	16 11 675-01								1	1	1	1				Nålhylsa Sleeve	
N	20	16 11 677-01								1	1	1	1				Kickaxel Shaft	
N	21	29 70 140-03								1	1	1	1				O-ring O-ring	
N	22	16 11 680-01								1	1	1	1				Medbringare Driving	
N	23	16 11 681-01								1	1	1	1				Fjäder Spring	
N	24	16 11 682-01								1	1	1	1				Kickfjäder Spring	
N	25	16 11 683-01								1	1	1	1				Lägeshake Hook link	
N	26	16 11 684-01								1	1	1	1				Fjäder Spring	
N	27	16 11 685-01								1	1	1	1				Stift Pin	
N	28	16 11 686-01								1	1	1	1				Växelmätare Kicker	
N	29	29 70 415-05								1	1	1	1				O-ring O-ring	
N	30	16 11 746-01								1	1	1	1				Växlingsaxel Shaft	
N	31	16 11 692-01								1	1	1	1				Återgångsfjäder Return spring	
N	32	16 11 696-01								1	1	1	1				Kickstartvev kpl Kick starter cpl	
	34	16 12 731-01								1	1	1	1				Kickstartpedal Kick starter pedal	
	35	12 25 702-01								1	1	1	1				Pedalgummi Pedal rubber	
	36	20 24 368-12								1	1	1	1				Skruv Screw	
	37	28 01 416-01								1	1	1	1				Bricka Washer	
	38	29 70 132-03								1	1	1	1				O-ring O-ring	
	39	28 20 020-01								1	1	1	1				Spårring Circlip	
	40	16 12 683-01								1	1	1	1				Fotväxelpedal, kpl. Shift lever compl.	
	41	16 12 684-01								1	1	1	1				Spak Lever	
	42	16 12 685-01								1	1	1	1				Pedal Pedal	

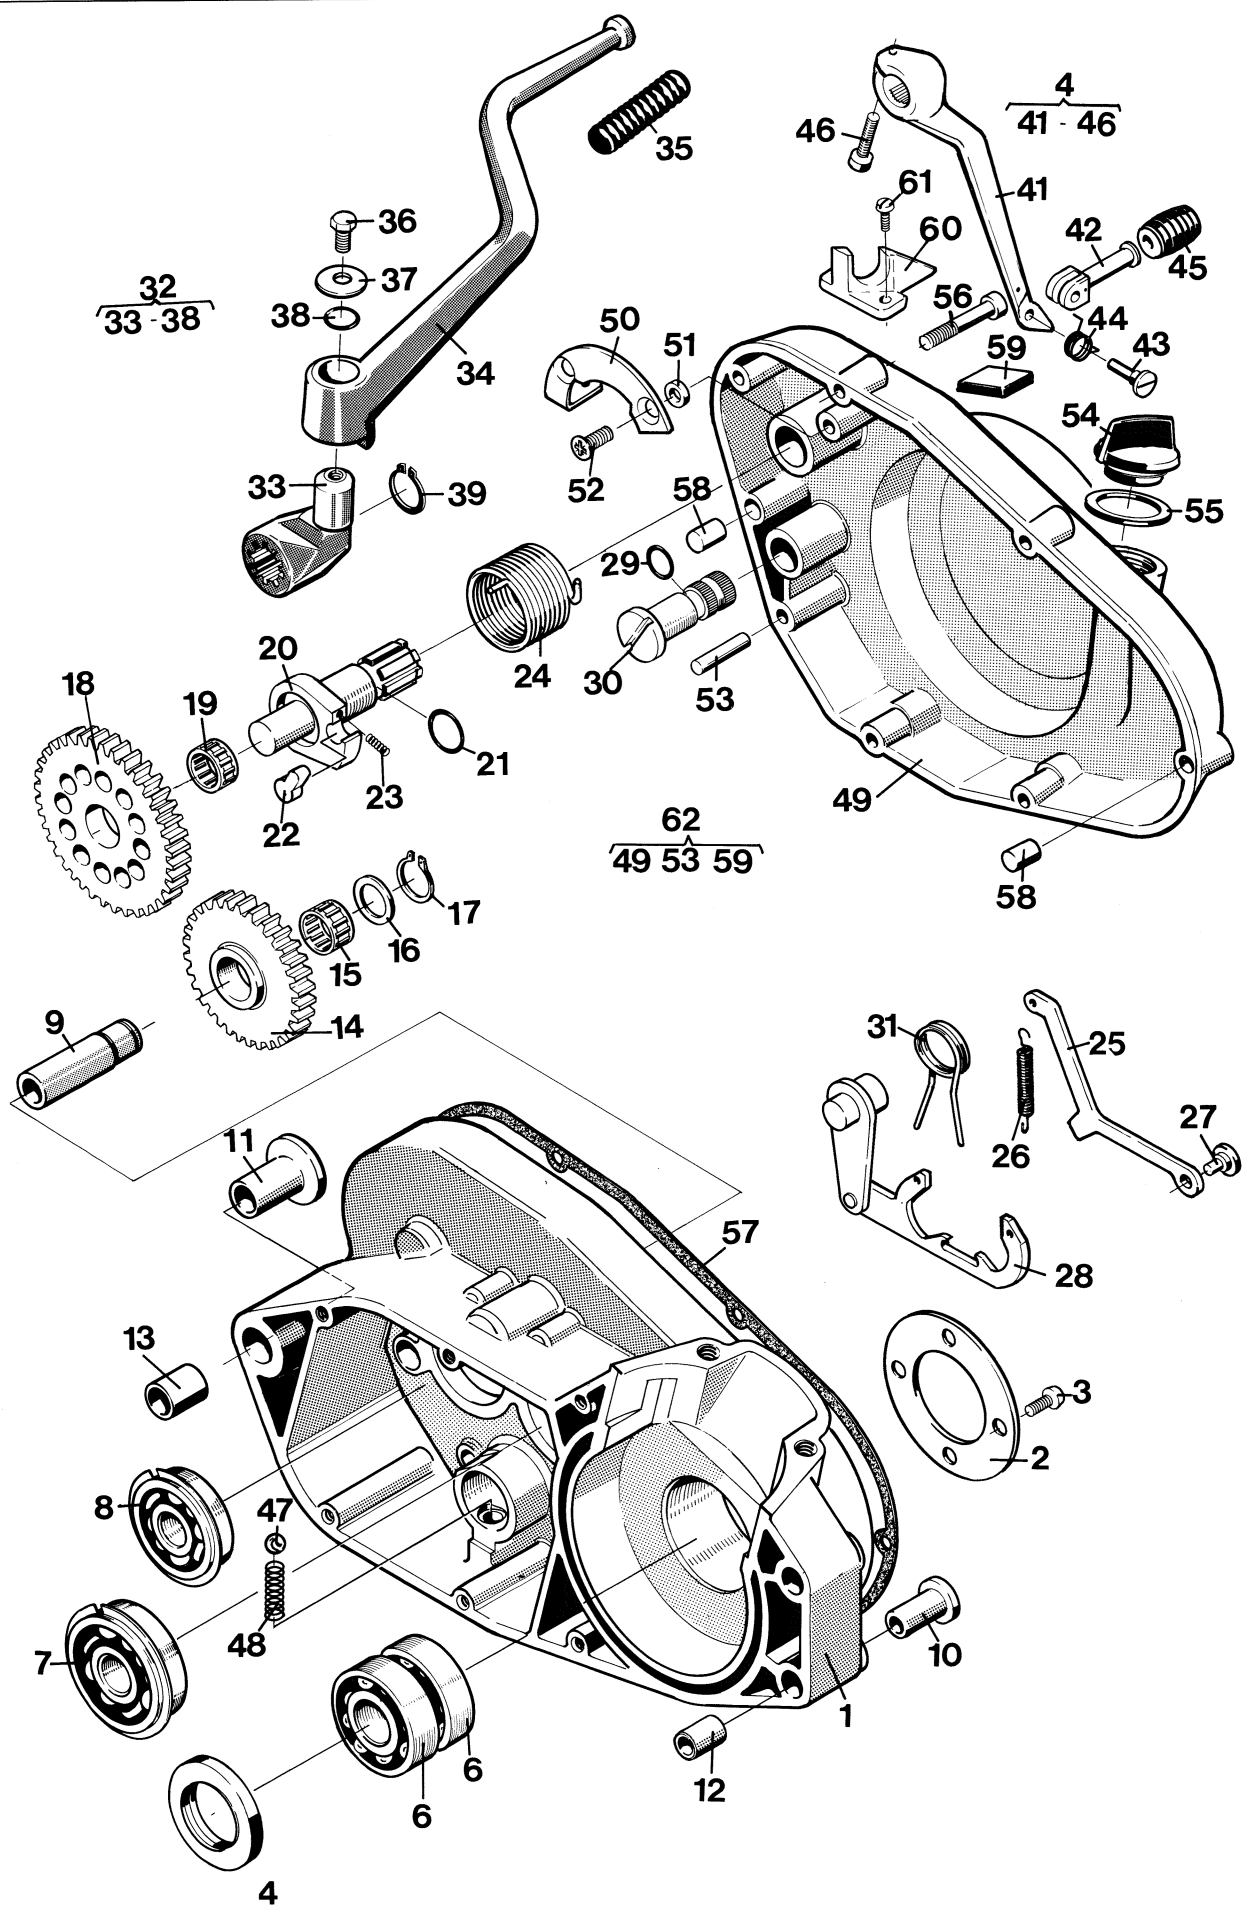


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
	43	16 12 686-01							1	1	1	1				Ledskruv Screw	
	44	16 12 687-01							1	1	1	1				Fjäder Spring	
	45	16 12 688-01							1	1	1	1				Pedalgummi Pedal rubber	
	46	20 24 370-12							1	1	1	1				Skruv Screw	
	47	29 30 324-05							1	1	1	1				Kula Ball	
	48	16 12 745-01							1	1	1	1				Fjäder Spring	
	49	16 11 644-01							1	1	1	1				Vevhuskåpa vänster Transmission cover	
N	50	16 11 704-01							1	1	1	1				Fjäderhållare Spring holder	
N	51	16 11 706-01							2	2	2	2				Distans Distance	
N	52	21 23 370-02							2	2	2	2				Skruv Screw	
	53	28 40 383-02							1	1	1	1				Cylindrisk pinne Pin	
	54	50 11 538-03							1	1	1	1				Tanklock Cap	
	55	50 12 782-01							1	1	1	1				Tanklockspackning Gasket	
N	56	20 24 379-12							6	6	6	6				Skruv Screw	
N	57	16 11 650-01							1	1	1	1				Packning Gasket	
N	58	16 11 708-01							2	2	2	2				Styhylsa Steering sleeve	
N	59	16 11 709-01							1	1	1	1				Gummistop, kickstart Buffer	
N	60	16 11 848-01							1	1	1	1				Hållare, kickpedal Holder	
N	61	20 62 328-11							2	2	2	2				Skruv Screw	

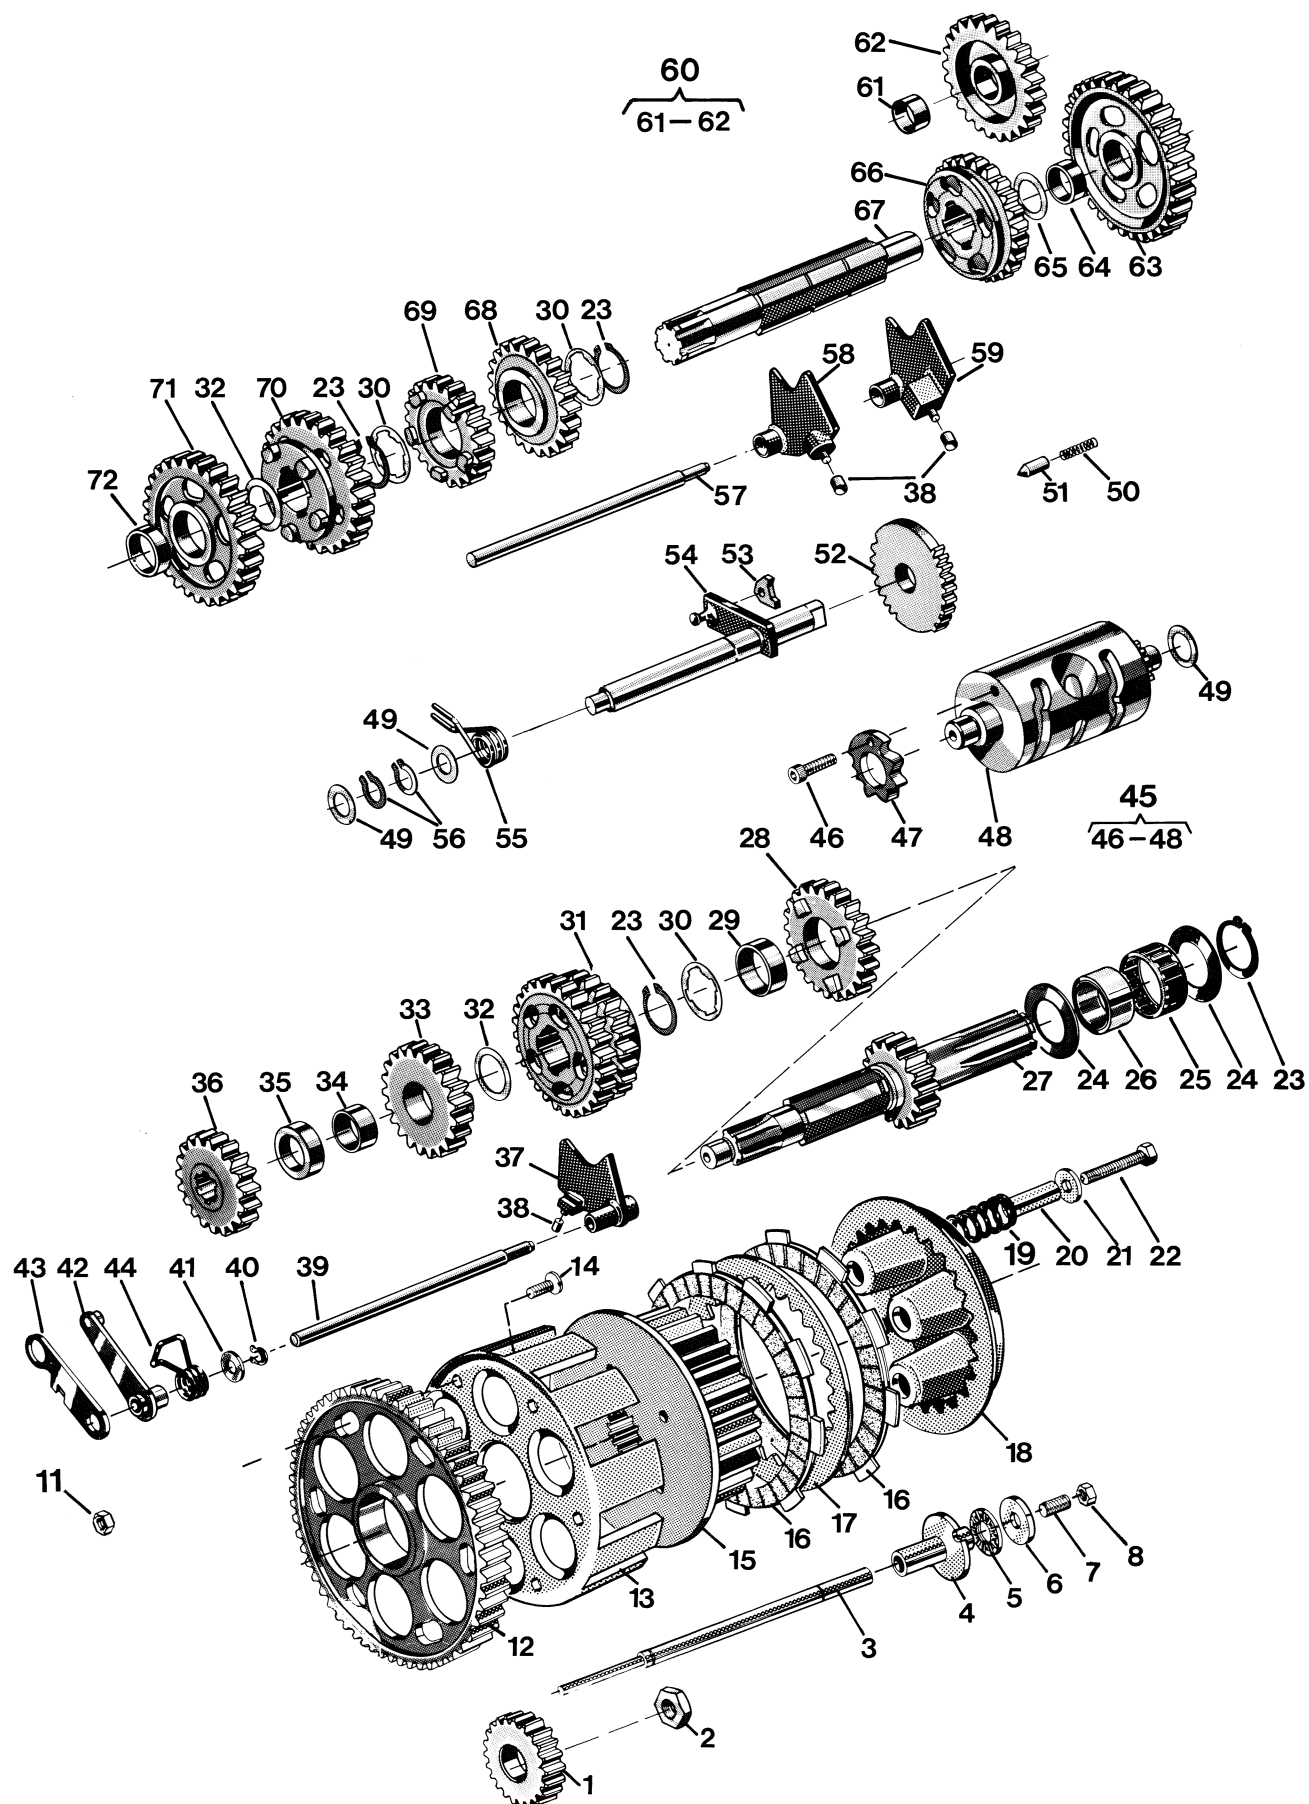


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
	1 16 11 174-01 16 11 182	1															Drivhjul CR z = 18 Driving gear CR Drivhjul WR z = 20 Driving gear WR	
	2 16 11 175-01	1	1														Mutter Nut	
	3 16 11 160-01	1	1														Tryckstång Push rod	
	4 16 11 170-01	1	1														Axelhylsa Shaft sleeve	
	5 16 11 166-01	1	1														Axiallager Axial bearing	
	6 16 11 167-01	2	2														Axialbricka Axial washer	
	7 22 26 370-06	1	1														Skruv TSS6x20-10,9 Screw	
N	8 25 09 316-02	6	6														Mutter M6 Nut	
	11 25 08 316-53	6	6														Mutter Nut	
	12 16 11 148-01 16 11 179-01	1															Kugghjul CR z = 70 Cog wheel CR Kugghjul WR z = 68 Cog wheel WR	
	13 16 11 149-01	1	1														Kopplingskorg Clutch ring	
N	14 29 98 945-49	6	6														Skruv 6x16 Screw	
	15 16 11 156-01	1	1														Kopplingscentrum Clutch hub	
	16 16 11 157-01	6	6														Lamell m belägg Disc w lining	
	17 16 11 158-01	5	5														Lamell Disc	
	18 16 11 168-01	1	1														Tryckskiva Pressure plate	
	19 16 11 177-02	5	5														Fjäder Spring	
	20 16 11 169-01	5	5														Distanshylsa Distance sleeve	
	21 28 16 222-01	5	5														Bricka 6,7x16x1,5 Washer	
	22 20 06 378-57	5	5														Skruv M6x40 Screw	
	23 28 20 025-01	4	4														Spårring SgA25 Circlip	
	24 16 11 155-01	2	2														Bricka Washer	
	25 16 11 154-01	1	1														Nållager Needle bearing	
	26 16 11 153-01	1	1														Innerring Internal ring	
	27 16 12 477-01 16 12 508-01	1															Huvudaxel CR z = 15 Clutch shaft CR Huvudaxel WR z = 14 Clutch shaft WR	
	28 16 12 404-01	1	1														Kugghjul 4:an z = 23 Gear wheel 4th	
	29 16 12 418-01	1	1														Lagerhylsa Sleeve 4th	
	30 16 12 421-01	3	3														Bricka Washer 4th-6th	
	31 16 12 405-01	1	1														Kugghjul 5:an, 6:an z = 25, 27 Gear wheel 5th, 6th	
	32 16 12 842-01	2	2														Bricka Washer 3rd	
	33 16 12 403-01 16 12 497-01	1															Kugghjul 3:an z = 21 CR Gear wheel 3rd z = 21 CR Kugghjul 3:an z = 20 WR Gear wheel 3rd z = 20 WR	
	34 16 12 480-01	1	1														Lagerhylsa Sleeve 3rd, 2nd	
	35 16 12 481-01	1	1														Distansring Spacer	
	36 16 12 596-01 16 12 496-01	1															Kugghjul 2:an z = 18 CR Gear wheel 2nd z = 18 CR Kugghjul 2:an z = 17 WR Gear wheel 2nd z = 17 WR	
	37 16 12 897-01	1	1														Växelförare 3-4:an Gear striker	

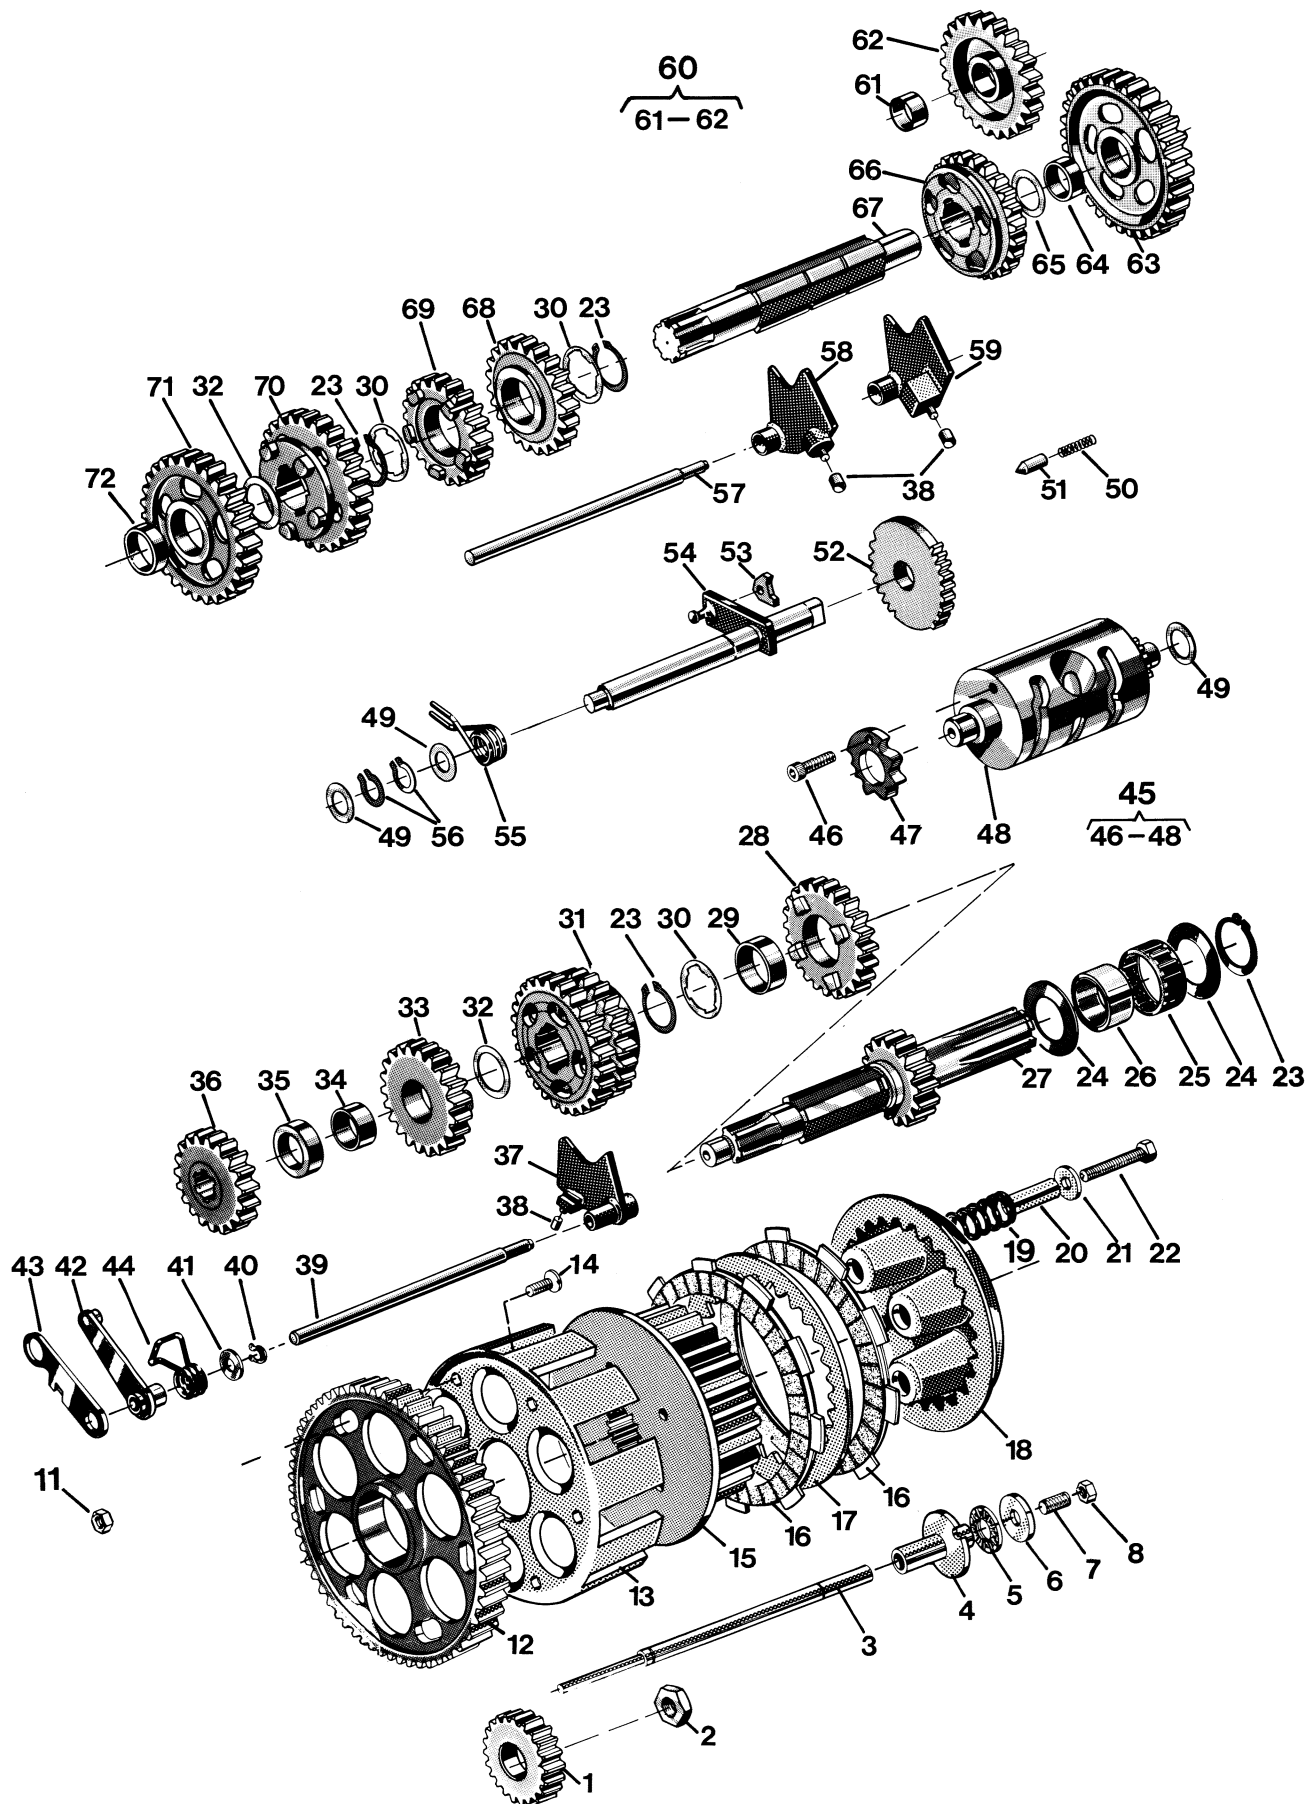


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
38	16 12 424-01	3	3														Ledrulle Guide roller	
39	16 12 484-01	1	1														Axel Shaft	
40	28 20 010-01	1	1														Spårring SgA10 Circlip	
41	16 12 485-01	1	1														Bricka Washer	
42	16 12 489-01	1	1														Spärrarm Ratchet arm	
43	16 12 493-01	1	1														Distansarm Distance arm	
44	16 12 494-01	1	1														Fjäder Spring	
45	16 12 486-01	1	1														Kulissrulle kpl. Linkroller compl.	
46	20 24 366-39	1	1														Skruv M6x 12 Screw	
47	16 12 488-01	1	1														Spärrhjul Ratchet wheel	
49	29 95 175-01	2	2														Bricka 15x24x1 Washer	
50	16 12 593-01	1	1														Fjäder Spring	
51	16 12 455-01	1	1														Spärrhylsa Ratchet sleeve	
52	16 12 870-01	1	1														Stegmatare Stepfeeder	
53	16 12 895-01	1	1														Medbringarhake Pawl	
54	16 12 600-01	1	1														Växlingsaxel Gear shaft	
55	16 12 594-01	1	1														Fjäder Spring	
56	28 20 015-01	2	2														Spårring SgA15 Circlip	
57	16 12 843-01	1	1														Axel Shaft	
58	16 12 848-01	1	1														Växelförare 2-6:an Gear striker	
59	16 12 896-01	1	1														Växelförare 1-5:an Gear striker	
60	16 12 482-01	1															Kugghjul start CR Gear wheel start CR	
	16 12 501-01		1														Kugghjul start WR Gear wheel start WR	
61	12 25 713-01	1	1														Bussning Sleeve	
63	16 12 406-01	1															Kugghjul 1:an z = 31 CR Gear wheel 1st z = 31 CR	
	16 12 442-01		1														Kugghjul 1:an z = 33 WR Gear wheel 1st z = 33 WR	
64	16 12 415-01	1	1														Lagerhylsa Sleeve 1st	
65	29 95 250-01	1	1														Bricka 17,02x23x1 Washer 1st	
66	16 12 409-01	1	1														Kugghjul 4:an z = 24 Gear wheel 4th	
67	16 12 470-01	1	1														Hjälpaxel Sprocket shaft	
68	16 12 410-01	1	1														Kugghjul 5:an z = 22 Gear wheel 5th	
69	16 12 411-01	1	1														Kugghjul 6:an z = 21 Gear wheel 6th	
70	16 12 408-01	1	1														Kugghjul 3:an z = 26 Gear wheel 3rd	
71	16 12 597-01	1															Kugghjul 2:an z = 28 CR Gear wheel 2nd z = 28 CR	
	16 12 453-01		1														Kugghjul 2:an z = 29 WR Gear wheel 2nd z = 29 WR	
72	16 12 416-01	1	1														Lagerhylsa Sleeve 2nd	

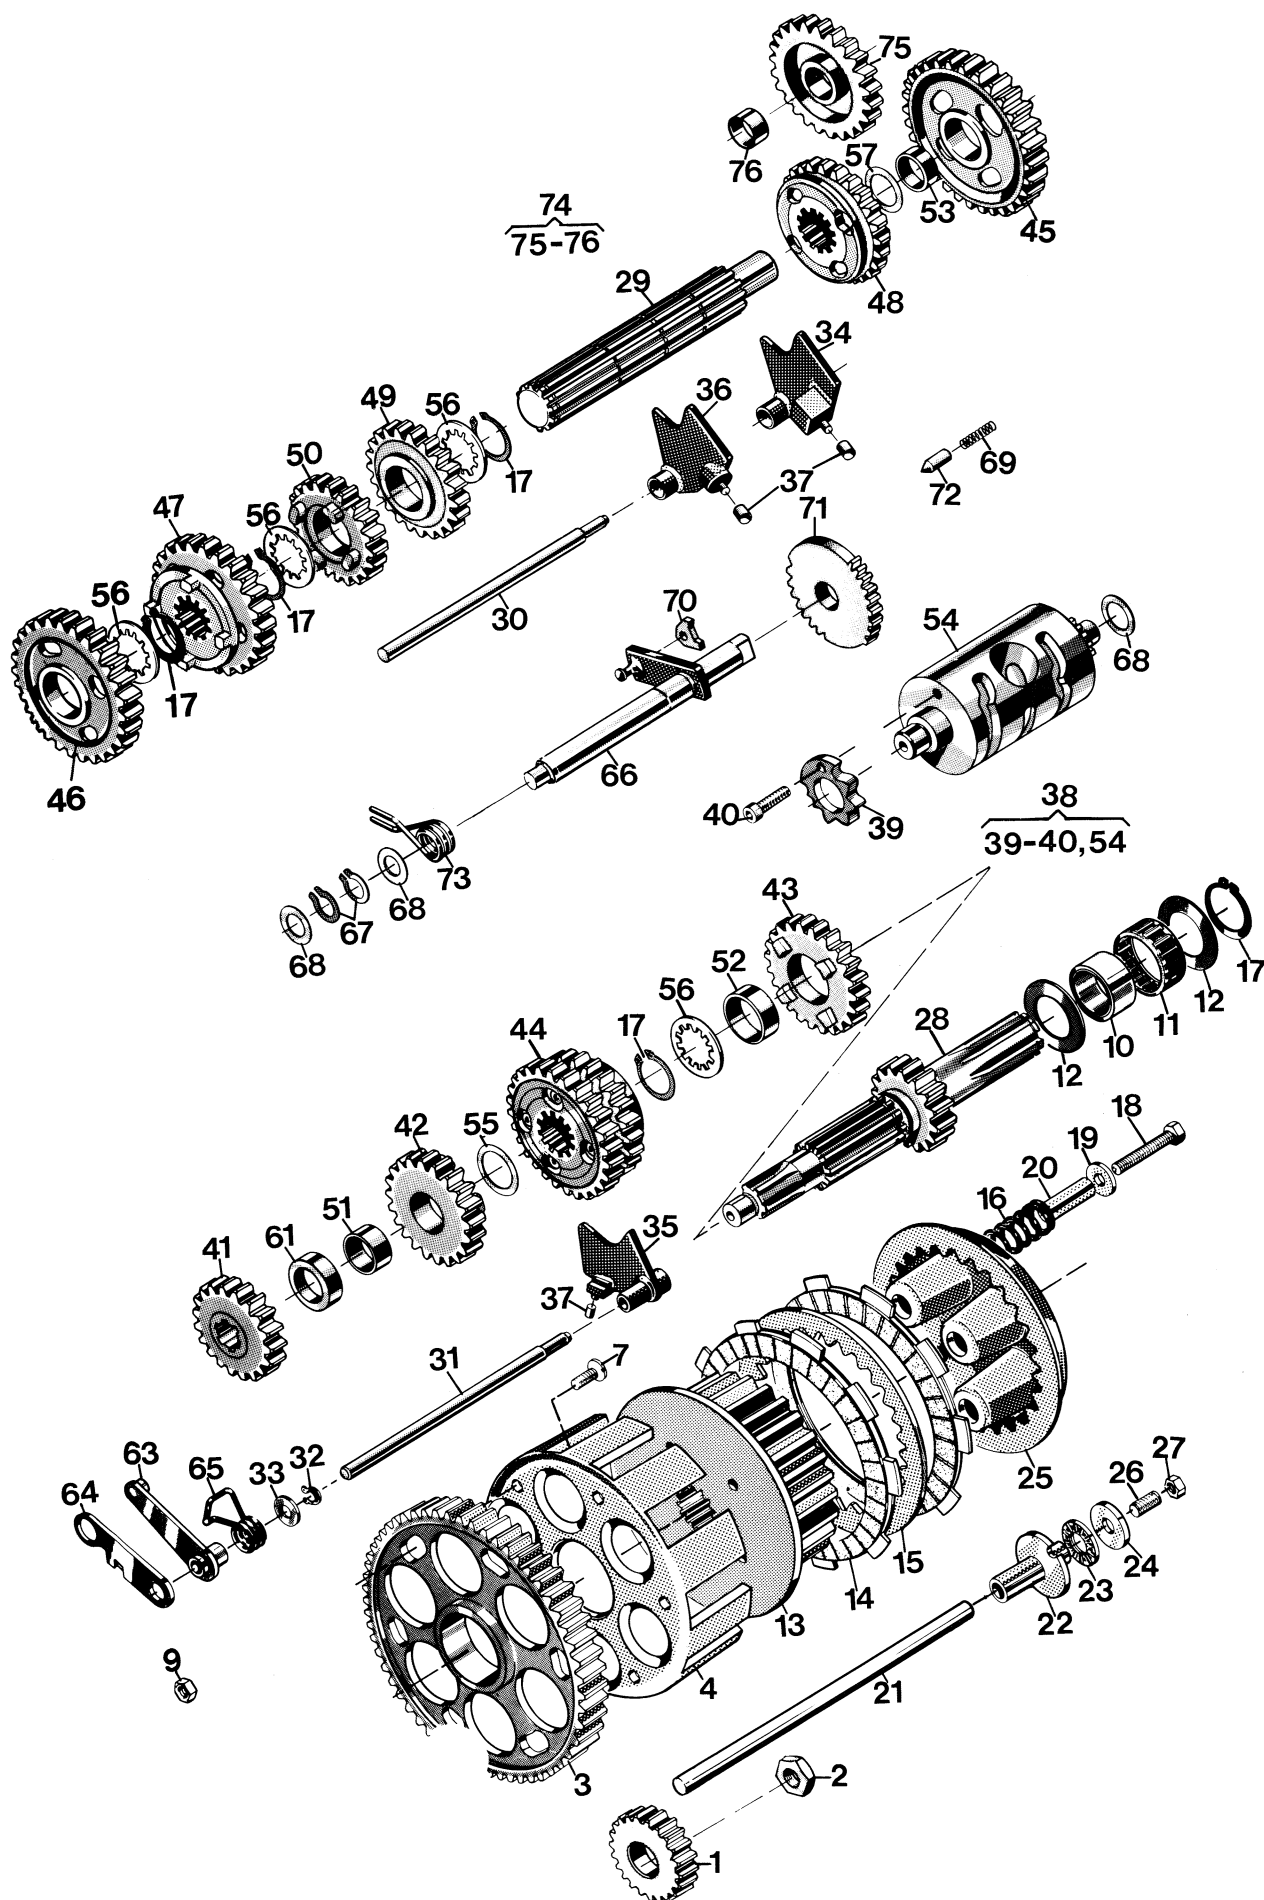


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
	1	16 11 138-01 16 11 178-01			1	1	1	1	1								Drivhjul z = 29 Driving gear Drivhjul z = 30 Driving gear	
	2	16 11 101-01			1	1	1	1	1								Mutter Nut	
	3	16 11 148-01 16 11 179-01			1	1	1	1	1								Kugghjul z = 70 Gear wheel Kugghjul z = 68 Gear wheel	
	4	16 11 149-01			1	1	1	1	1								Kopplingskorg Clutch ring	
N	7	29 98 945-49			6	6	6	6	6								Skruv M6x16 Screw	
N	9	25 08 316-53			6	6	6	6	6								Mutter Nut	
	10	16 11 153-01			1	1	1	1	1								Innerring Internal ring	
	11	16 11 154-01			1	1	1	1	1								Nållager Needle bearing	
	12	16 11 155-01			2	2	2	2	2								Bricka Washer	
	13	16 11 156-01			1	1	1	1	1								Kopplingscentrum Clutch hub	
	14	16 11 157-01			6	6	6	6	6								Lamell m. belägg Disc w. lining	
	15	16 11 158-01			5	5	5	5	5								Lamell Disc	
	16	16 11 177-01 16 11 177-02															Kopplingsfjäder Clutch spring Kopplingsfjäder Clutch spring	
	17	28 20 025-01			4	4	4	4	4								Spårring Circlip	
	18	20 06 378-57			5	5	5	5	5								Skruv M6x40 Screw	
	19	28 16 222-01			5	5	5	5	5								Bricka Washer	
	20	16 11 169-01			5	5	5	5	5								Distanshylsa Distance sleeve	
	21	16 11 160-01			1	1	1	1	1								Tryckstång Push rod	
	22	16 11 170-01			1	1	1	1	1								Axelhylsa Shaft sleeve	
	23	16 11 166-01			1	1	1	1	1								Axiallager Axial bearing	
	24	16 11 167-01			1	1	1	1	1								Axialbricka Axial washer	
	25	16 11 168-01			1	1	1	1	1								Tryckskiva Pressure plate	
	26	22 26 370-06			1	1	1	1	1								Skruv TSS6x20 Screw	
	27	25 09 316-02			1	1	1	1	1								Mutter M6 Nut	
	28	16 12 690-01 16 12 691-01				1			1	1							Huvudaxel z = 14 Clutch shaft Huvudaxel z = 15 Clutch shaft	
	29	16 12 350-01			1	1	1	1	1	1							Hjälpaxel Sprocket shaft	
	30	16 12 843-01			1	1	1	1	1	1							Axel Shaft	
	31	16 12 484-01			1	1	1	1	1	1							Axel Shaft	
	32	28 20 010-01			1	1	1	1	1	1							Spårring Circlip	
	33	16 12 485-01			1	1	1	1	1	1							Bricka Washer	
	34	16 12 896-01			1	1	1	1	1	1							Växelförare kpl. 1-5 Gear striker	
	35	16 12 897-01			1	1	1	1	1	1							Växelförare kpl. 3-4 Gear striker	
	36	16 12 848-01			1	1	1	1	1	1							Växelförare kpl. 6-2 Gear striker	
	37	16 12 424-01			3	3	3	3	3	3							Ledrulle Guide roller	
	38	16 12 486-01			1	1	1	1	1	1							Kulissrulle kpl. Linkroller compl.	

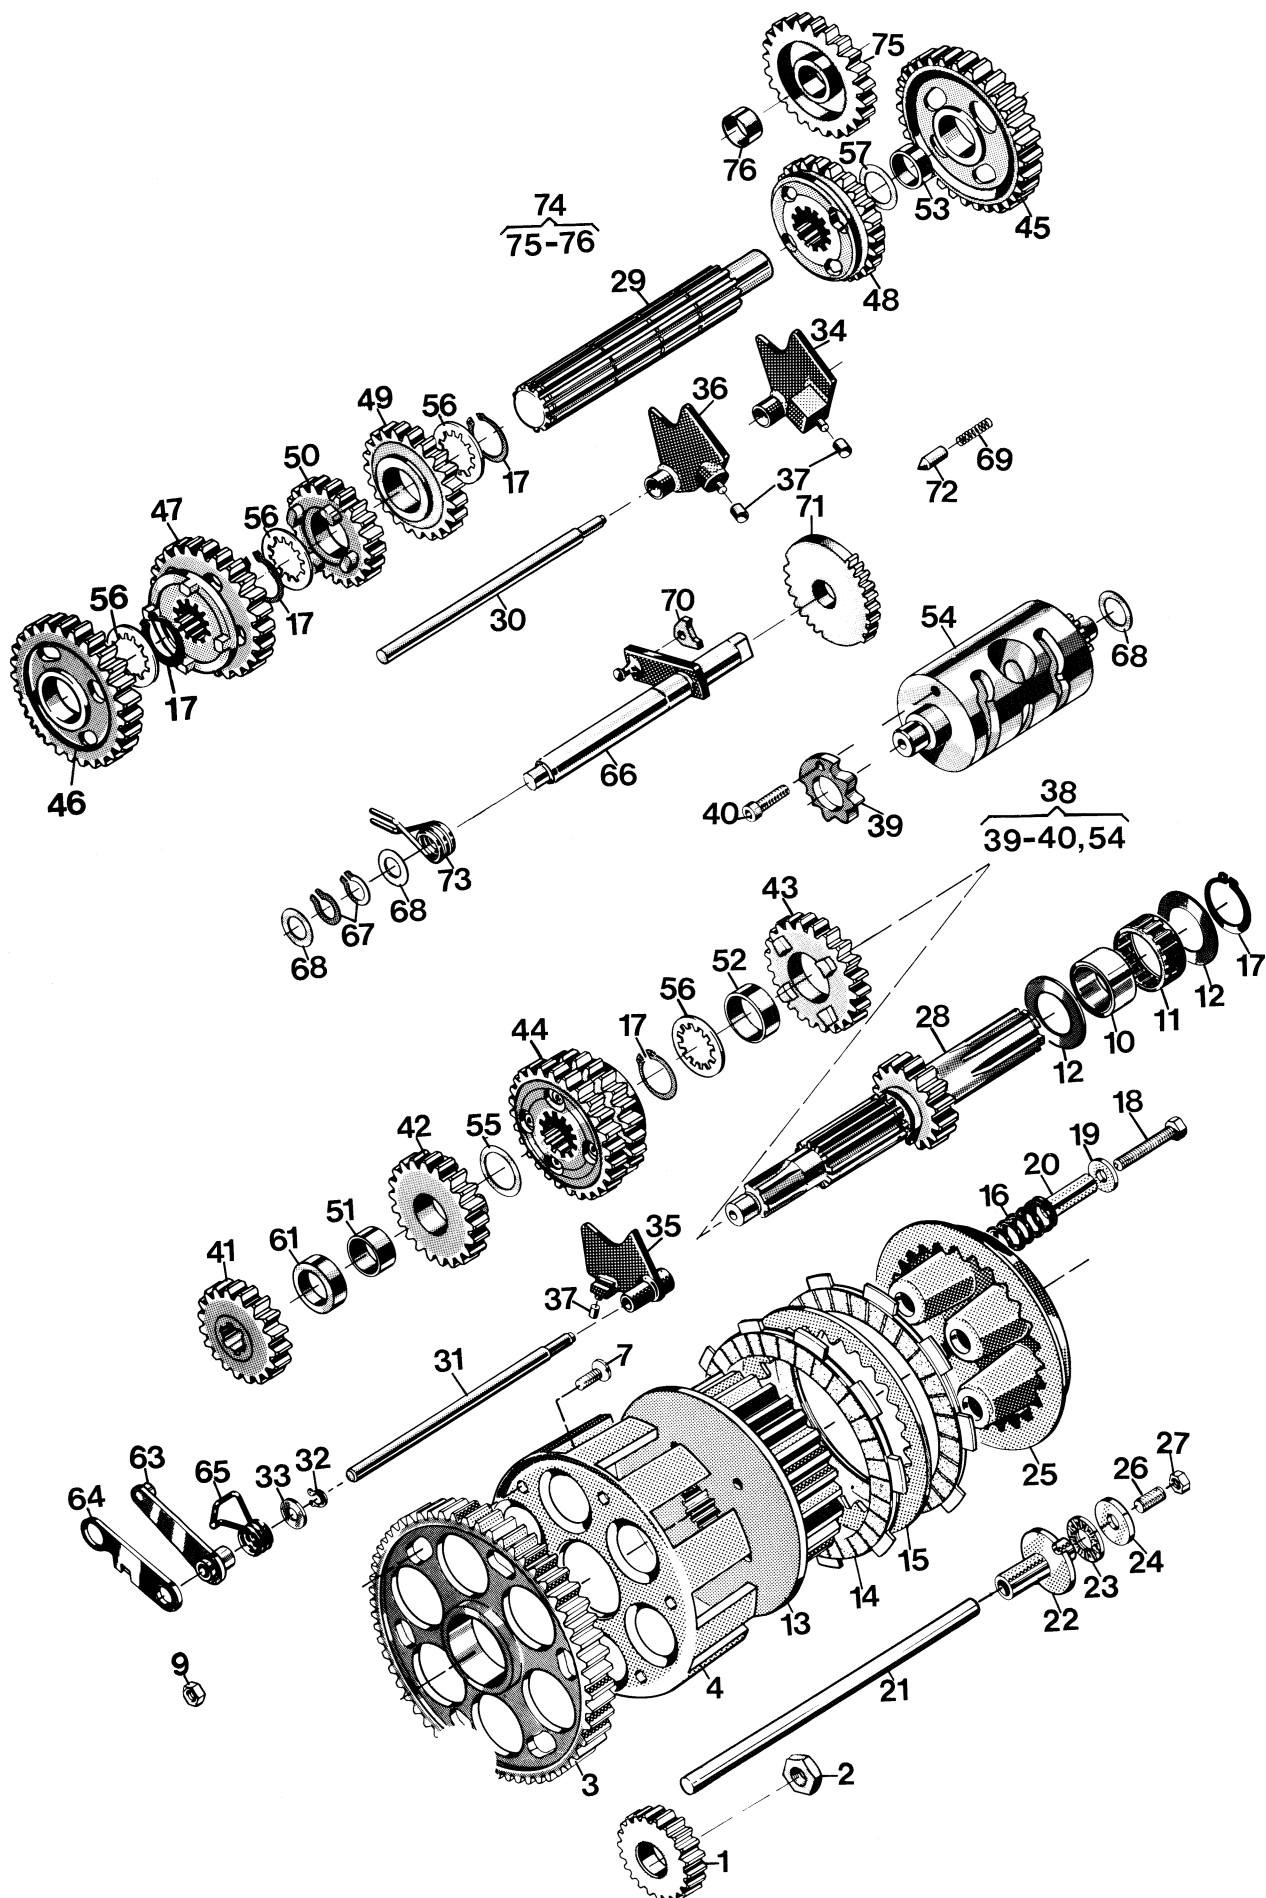


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
39	16 12 488-01			1	1	1	1	1									Spärrhjul Ratchet wheel	
40	20 24 366-39			1	1	1	1	1									Skruv M6x12 Screw	
41	16 12 351-01				1			1	1								Kugghjul 2:an z = 17 Gear wheel	
	16 12 352-01			1		1											Kugghjul 2:an z = 18 Gear wheel	
42	16 11 703-01			1		1											Kugghjul 3:an z = 21 Gear wheel	
	16 12 349-01				1			1	1								Kugghjul 3:an z = 20 Gear wheel	
43	16 11 837-01			1	1	1	1	1	1								Kugghjul 4:an z = 23 Gear wheel	
44	16 12 355-01				1			1									Kugghjul 4:an z = 23 Gear wheel	
	16 11 705-01			1		1			1								Kugghjul 5:an, 6:an, z = 25, 27 Gear wheel	
45	16 11 711-01			1		1											Kugghjul 1:an z = 31 Gear wheel	
	16 12 346-01				1			1	1								Kugghjul 1:an z = 33 Gear wheel	
46	16 12 347-01				1			1	1								Kugghjul 2:an z = 29 Gear wheel	
	16 12 354-01			1		1											Kugghjul 2:an z = 28 Gear wheel	
47	16 11 713-01			1		1											Kugghjul 3:an z = 26 Gear wheel	
	16 12 348-01				1			1	1								Kugghjul 3:an z = 26 Gear wheel	
48	16 11 714-01			1	1	1	1	1	1								Kugghjul 4:an z = 24 Gear wheel	
49	16 11 715-01			1	1	1	1	1	1								Kugghjul 5:an z = 22 Gear wheel	
50	16 11 716-01			1		1			1								Kugghjul 6:an z = 20 Gear wheel	
	16 12 357-01				1			1									Kugghjul 6:an Gear wheel	
51	16 12 480-01			1	1	1	1	1	1								Lagerhylsa Sleeve	
52	16 12 418-01			1	1	1	1	1	1								Lagerhylsa Sleeve	
53	16 12 415-01			1	1	1	1	1	1								Lagerhylsa Sleeve	
56	16 11 717-01			4	4	4	4	4	4								Stödbricka Washer	
57	29 95 250-01			1	1	1	1	1	1								Stödbricka Washer	
61	16 12 481-01			1	1	1	1	1	1								Distansring Spacer	
63	16 12 489-01			1	1	1	1	1	1								Spärrarm Ratchet arm	
64	16 12 493-01			1	1	1	1	1	1								Distansarm Distance arm	
65	16 12 494-01			1	1	1	1	1	1								Fjäder Spring	
66	16 12 600-01			1	1	1	1	1	1								Växlingsaxel Gear shaft	
67	28 20 015-01			2	2	2	2	2	2								Spårring Circlip	
68	29 95 175-01			3	3	3	3	3	3								Bricka Washer	
69	16 12 593-01			1	1	1	1	1	1								Fjäder Spring	
70	16 12 895-01			1	1	1	1	1	1								Medbringare Pawl	
71	16 12 870-01			1	1	1	1	1	1								Stegmatore Stepfeeder	
72	16 12 455-01			1	1	1	1	1	1								Spärrhylsa Ratchet sleeve	
73	16 12 594-01			1	1	1	1	1	1								Fjäder Spring	
74	16 12 501-01				1			1	1								Kugghjul z = 21 Gear wheel	
	16 12 698-01			1		1											Kugghjul z = 23 Gear wheel	
76	12 25 713-01			1	1	1	1	1	1								Bussning Bushing	

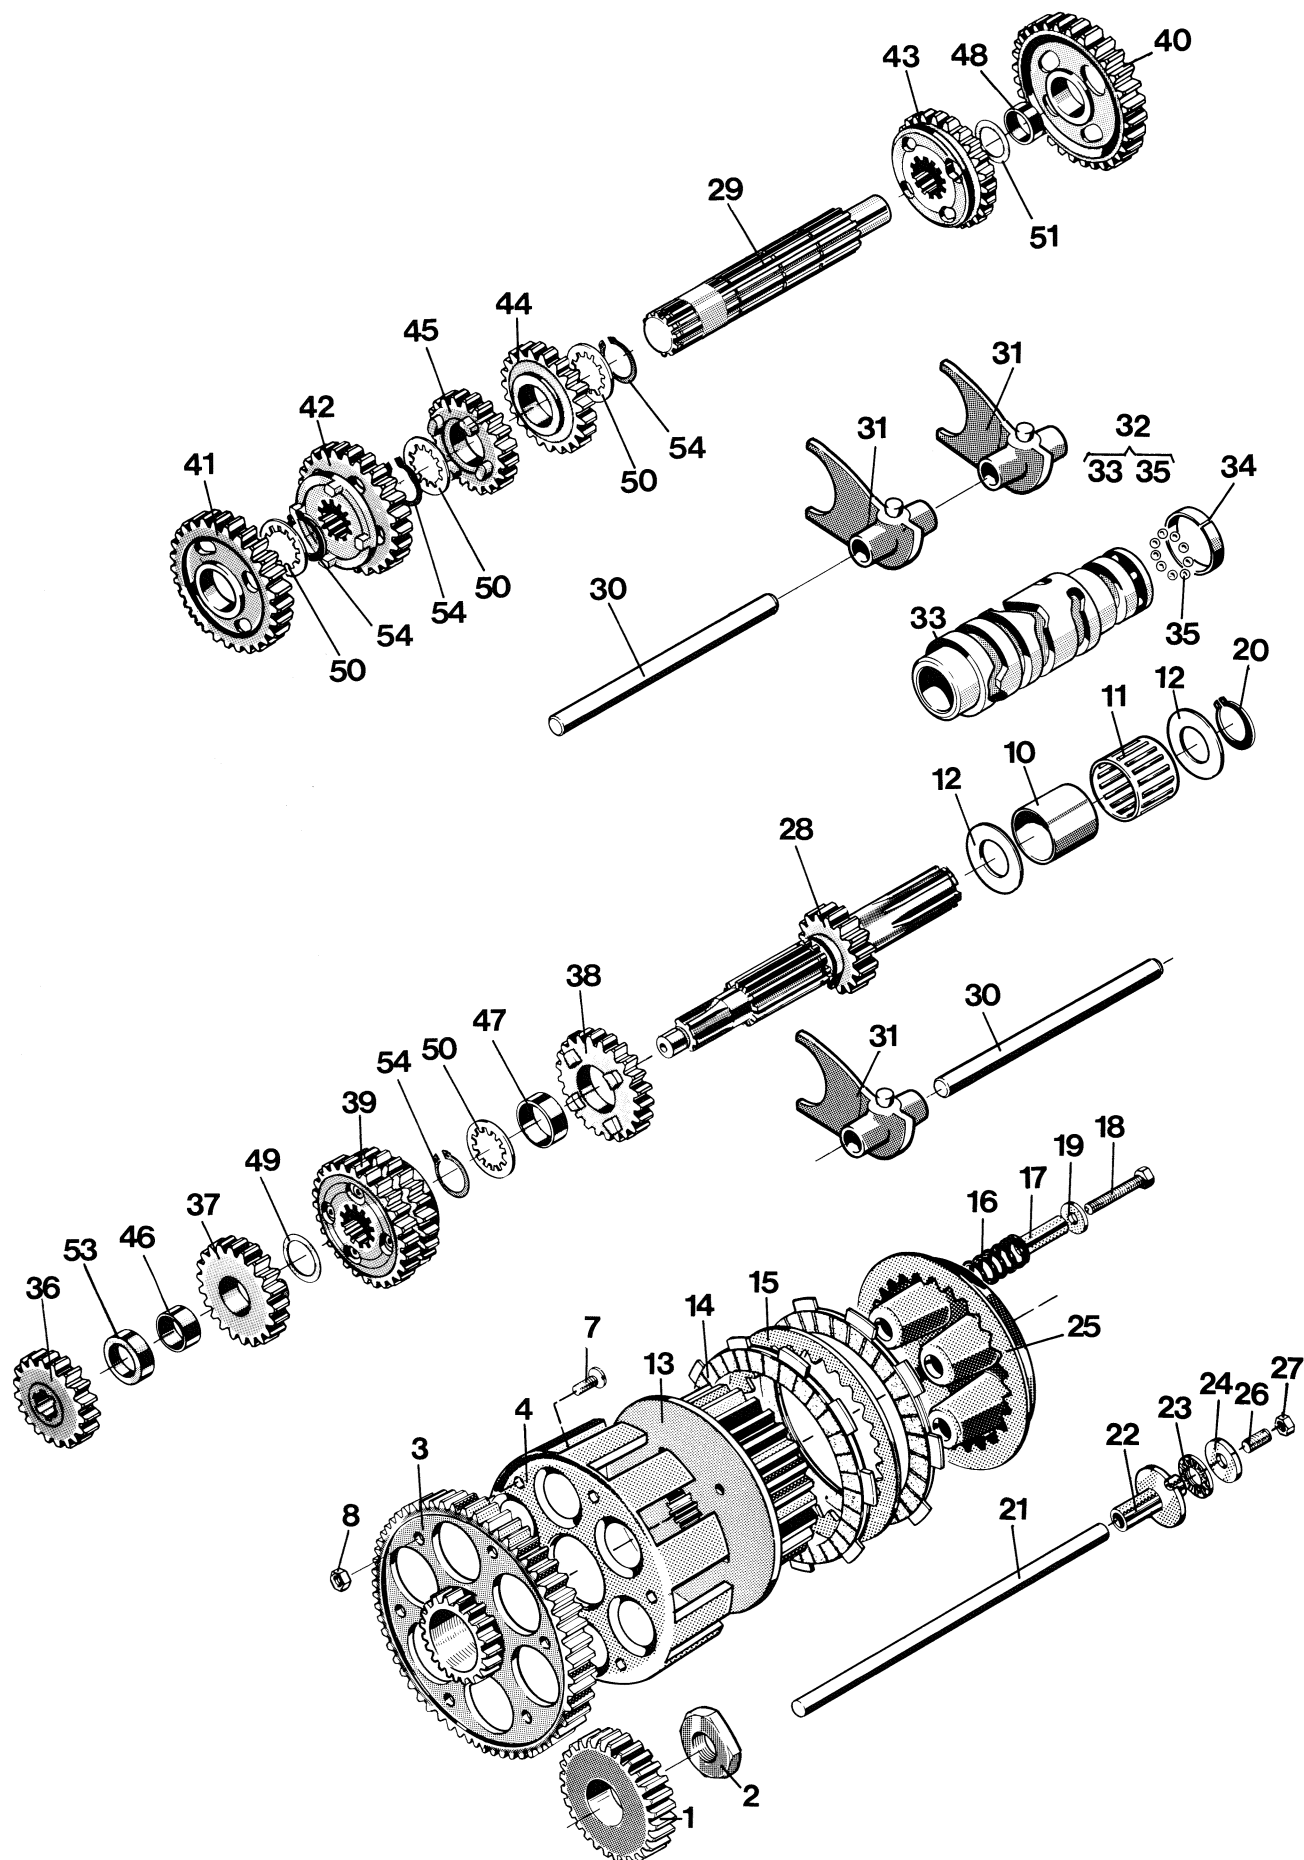


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
N	1	16 11 656-01								1	1	1	1				Drivhjul Driving gear	
	2	16 11 101-01								1	1	1	1				Mutter Nut	
N	3	16 11 657-01								1	1	1	1				Kopplingskrans Gear wheel, clutch	
	4	16 11 149-10								1	1	1	1				Kopplingskorg Clutch ring	
	7	29 98 945-49								6	6	6	6				Skruv Screw	
	8	25 08 316-53								6	6	6	6				Mutter Nut	
N	10	16 11 670-01								1	1	1	1				Innerring Internal ring	
N	11	16 11 671-01								1	1	1	1				Nålhållare Needle ring	
	12	16 11 155-01								2	2	2	2				Bricka Washer	
	13	16 11 156-01								1	1	1	1				Kopplingscentrum Clutch hub	
	14	16 11 157-01								6	6	6	6				Lamell Disc	
	15	16 11 158-01								5	5	5	5				Lamell Disc	
N	16	16 11 177-03								5	5	5	5				Kopplingsfjäder Clutch spring	
	17	16 11 169-01								5	5	5	5				Distanshylsa Distance sleeve	
	18	20 06 378-57								5	5	5	5				Skruv Screw	
	19	28 16 222-01								5	5	5	5				Bricka Washer	
	20	28 20 025-01								1	1	1	1				Spårring Circlip	
N	21	16 11 673-01								1	1	1	1				Tryckstång Push rod	
	22	16 11 170-01								1	1	1	1				Axeldel Shaft	
	23	16 11 166-01								1	1	1	1				Axiallager Axial bearing	
	24	16 11 167-01								1	1	1	1				Axialbricka Axial washer	
	25	16 11 168-01								1	1	1	1				Tryckskiva Pressure plate	
	26	22 21 370-06								1	1	1	1				Skruv Screw	
	27	25 09 316-02								1	1	1	1				Mutter Nut	
N	28	16 12 360-01 16 12 345-01								1	1	1	1				Huvudaxel Clutch shaft	
N	29	16 12 350-01								1	1	1	1				Hjälpaxel Sprocket shaft	
N	30	16 11 699-01								2	2	2	2				Axel Shaft	
N	31	16 11 700-01								3	3	3	3				Växelförare Gear striker	
N	32	16 11 701-01								1	1	1	1				Kulissrulle, kpl. Linkroller compl.	
N	34	16 12 699-01								1	1	1	1				Kulbana Outer race	
N	35	29 30 250-05								11	11	11	11				Kula Ball	
N	36	16 12 362-01 16 12 351-01								1	1	1	1				Kugghjul 2:an Huvudaxel Gear wheel	
N	37	16 12 363-01 16 12 349-01								1	1	1	1				Kugghjul 3:an Huvudaxel Gear wheel	
	38	16 11 837-01								1	1	1	1				Kugghjul 4:an Huvudaxel Gear wheel	
	39	16 12 355-01 16 11 705-01								1	1	1	1				Kugghjul 5:an-6:an Huvudaxel Gear wheel	
N	40	16 12 361-01 16 12 346-01								1	1	1	1				Kugghjul 1:an Hjälpaxel Gear wheel	
N	41	16 12 365-01 16 12 347-01								1	1	1	1				Kugghjul 2:an Hjälpaxel Gear wheel	
N	42	16 12 366-01 16 12 348-01								1	1	1	1				Kugghjul 3:an Hjälpaxel Gear wheel	
	43	16 11 714-01								1	1	1	1				Kugghjul 4:an Hjälpaxel Gear wheel	

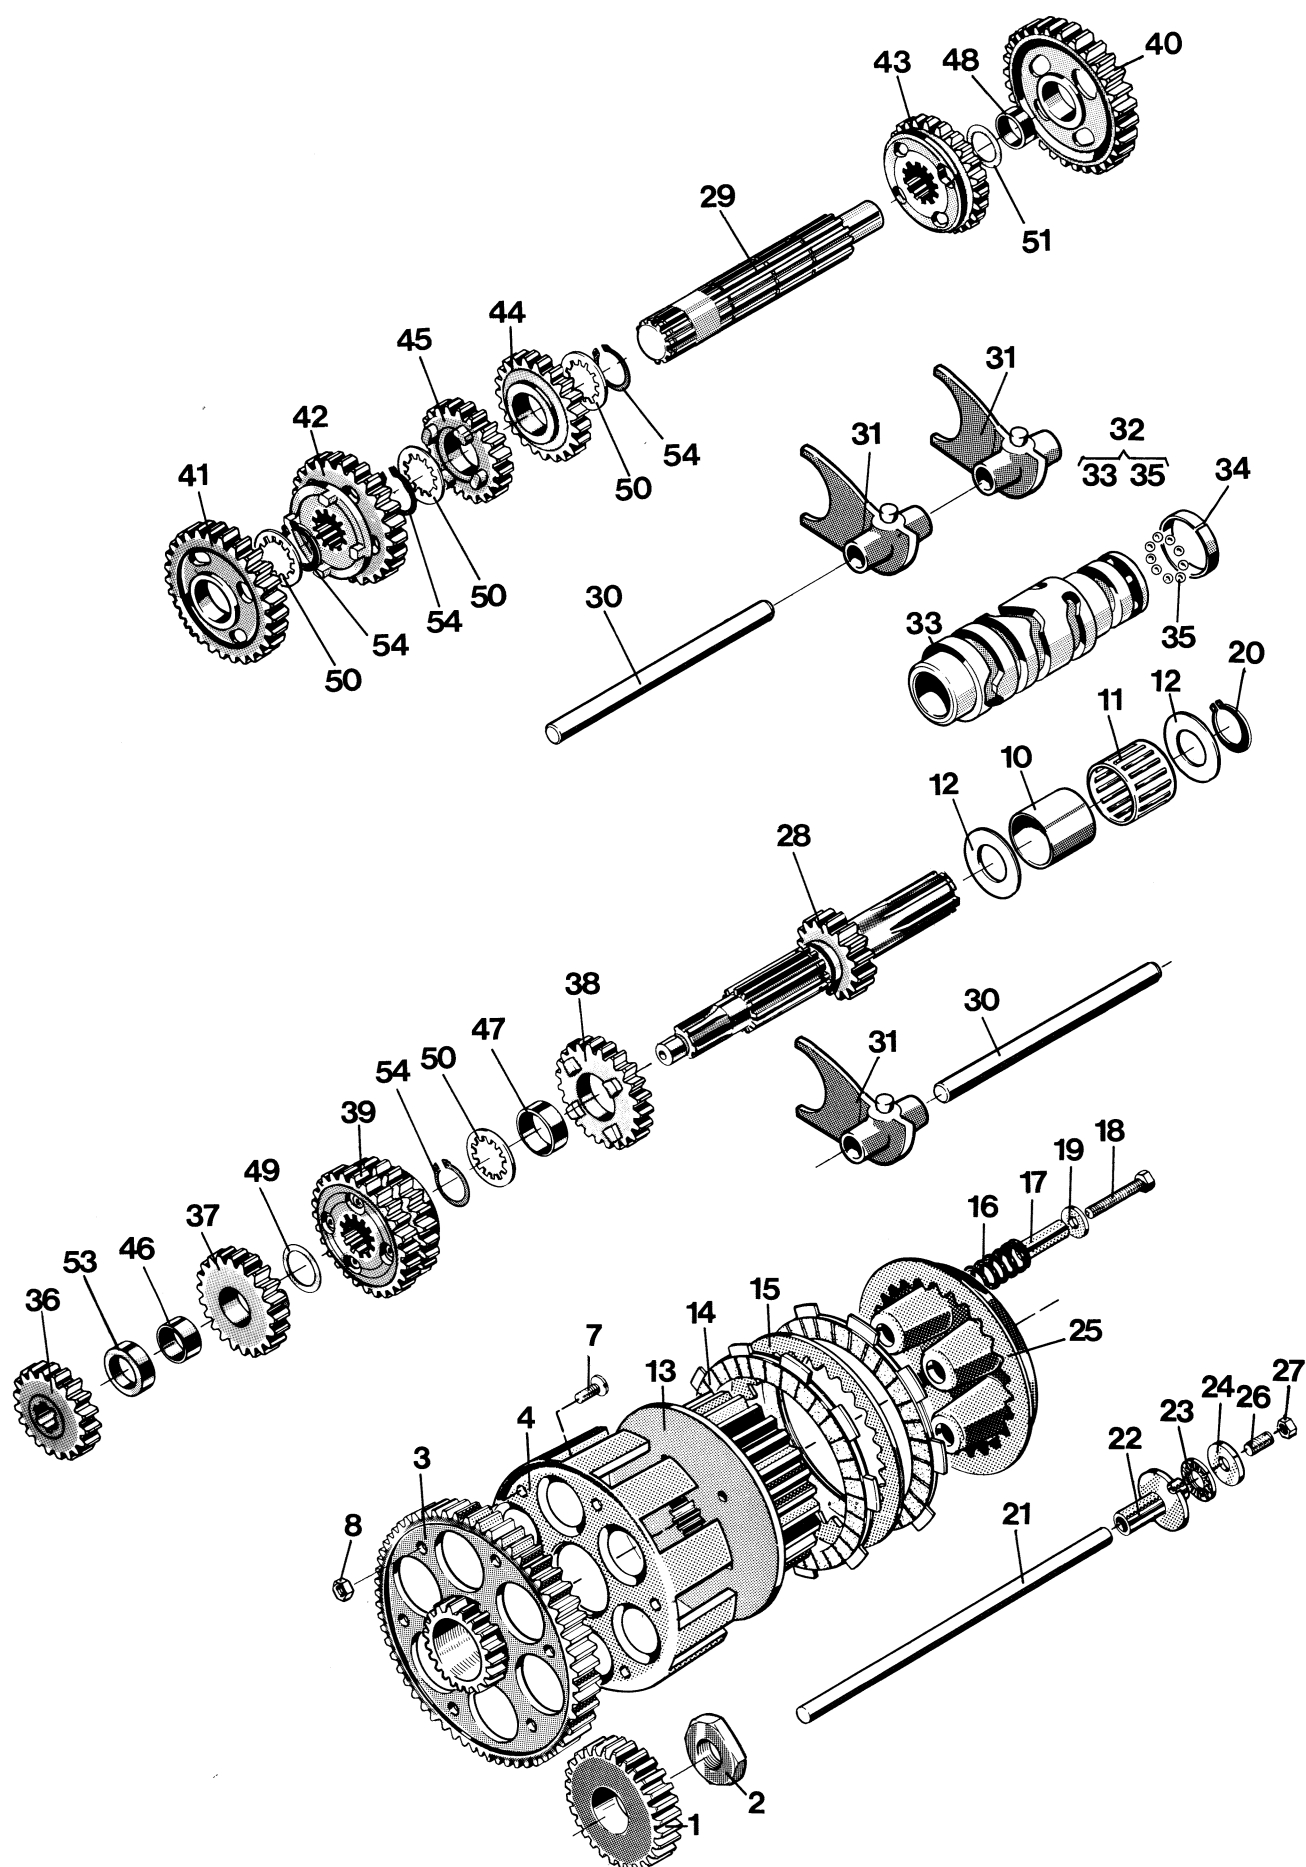


Fig.	Part Number Detaljnummer	Quantity/Antal												Description Benämning		
		125		240		250			430							
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC				
44	16 11 715-01								1	1	1	1				Kugghjul 5:an Hjälpaxel Gear wheel
45	16 12 357-01								1	1	1	1				Kugghjul 6:an Hjälpaxel Gear wheel
46	16 11 716-01								1	1	1	1				Lagerhylsa 3:an, Huvudaxel Sleeve
46	16 12 480-01								1	1	1	1				Lagerhylsa 4:an, Huvudaxel Sleeve
47	16 12 418-01								1	1	1	1				Lagerhylsa 1:an, Hjälpaxel Sleeve
48	16 12 415-01								1	1	1	1				Stödbricka Washer
49	16 12 842-01								1	1	1	1				Stödbricka Washer
50	16 11 717-01								4	4	4	4				Stödbricka Washer
51	29 95 250-01								1	1	1	1				Distansring, huvudaxel Spacer, cluth shaft
53	16 12 481-01								5	5	5	5				Spårring Circlip
54	28 20 025-01								5	5	5	5				Distansring Spacer
55	16 12 353-01								5	5	5	5				

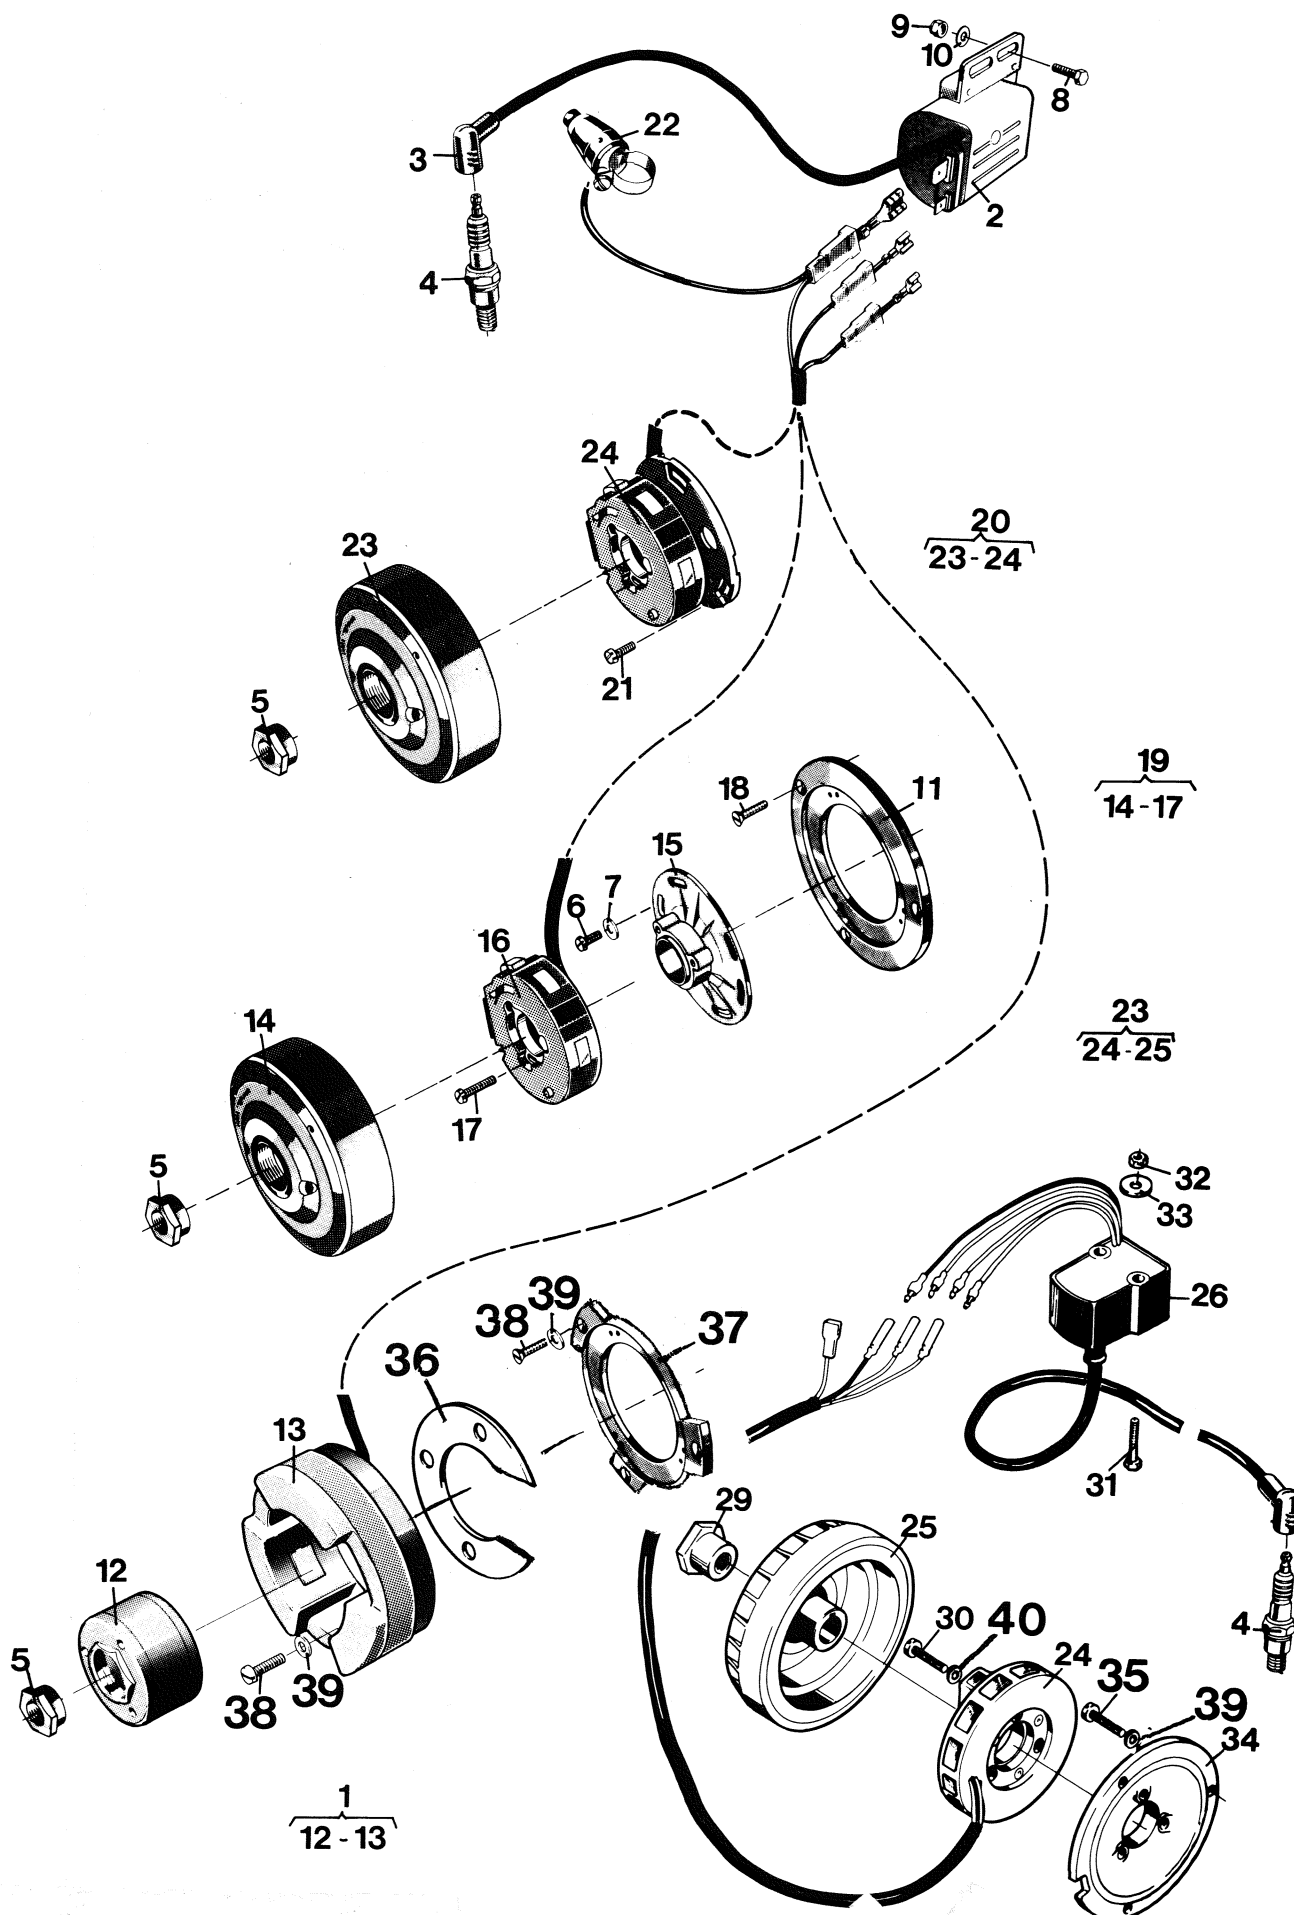


Fig.	Part Number Detaljnummer	Quantity/Antal												Description Benämning			
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
1	16 14 759-01	1							1							Svänghjuls magnet, kpl. Flywheel magneto compl.	
2	16 14 714-01	1		1	1	1	1	1	1							Tändspole, kpl. Ignition coil	
3	16 14 635-01	1		1	1	1	1	1	1	1	1	1				Tändstiftsansl. Spark plug protector	
4	16 14 769-01			1	1	1	1	1	1	1	1	1				Tändstift Bosch W4C Spark plug	
	16 14 769-02	1	1													Tändstift Bosch W3C Spark plug	
5	16 10 768-01	1		1	1	1	1	1	1			1				Mutter Nut	
6	2024291-45			3		3		3								Skruv M4 x 12 Screw	
7	2816165-01			3		3		3								Bricka 4,3x8 Washer	
8	20 06 368-01	2		2	2	2	2	2	2			2				Skruv M6 x 16 Screw	
9	25 80 142-01	2		2	2	2	2	2	2			2				Låsmutter M6 Nut	
10	28 16 201-01	2		2	2	2	2	2	2			2				Bricka 6,4 x 12 Washer	
11	16 14 715-01			1		1		1								Fästplatta Mounting plate	
18	2024331-55			3		3		3								Skruv M5 x 20 Screw	
19																	
	16 14 751-01			1		1		1								Svänghjuls magnet, kpl. Flywheel magneto compl.	
20	16 14 743-01				1		1									Svänghjuls magnet, kpl. Flywheel magneto compl.	
21	20 62 329-12				3		3		3			3				Skruv M5 x 16 Screw	
22	15 17 281-01	1		1	1	1	1	1	1			1				Kortslutningsknapp, kpl. Kill button	
23	1614785-01		1									1				Svänghjuls magnet, kpl. SEM Flywheel magneto compl.	
26	1614774-01		1									1	1	1		Tändspole, kpl. Ignition coil	
			1									1					
29	16 11 191-01		1									1				Mutter Nut	
30	20 62 335-42		3									3	3	3		Skruv M5 x 30 Screw	
31	20 06 380-01		2									2				Skruv Screw	
32	25 81 146-01		2									2				Låsmutter Nut	
33	28 16 211-01		2									2				Bricka Washer	
34	1614778-01		1									1	1	1		Fästplatta Mounting plate	
35	2024329-55		3									3				Skruv M5 x 16 Screw	
36	1614167-01	1							1							Distansplatta Spacer plate	
37	1614165-01								1	1		1	1			Fästplatta Mounting plate	
38	2024332-55	3							6							Skruv M5 x 22 Screw	
39	2816181-01	3	3						6	3		3	3			Bricka Washer	
40	2816192-01		3									3	3	3		Bricka Washer	
17	2024295-45			3		3		3								Skruv M4 x 20 Screw	

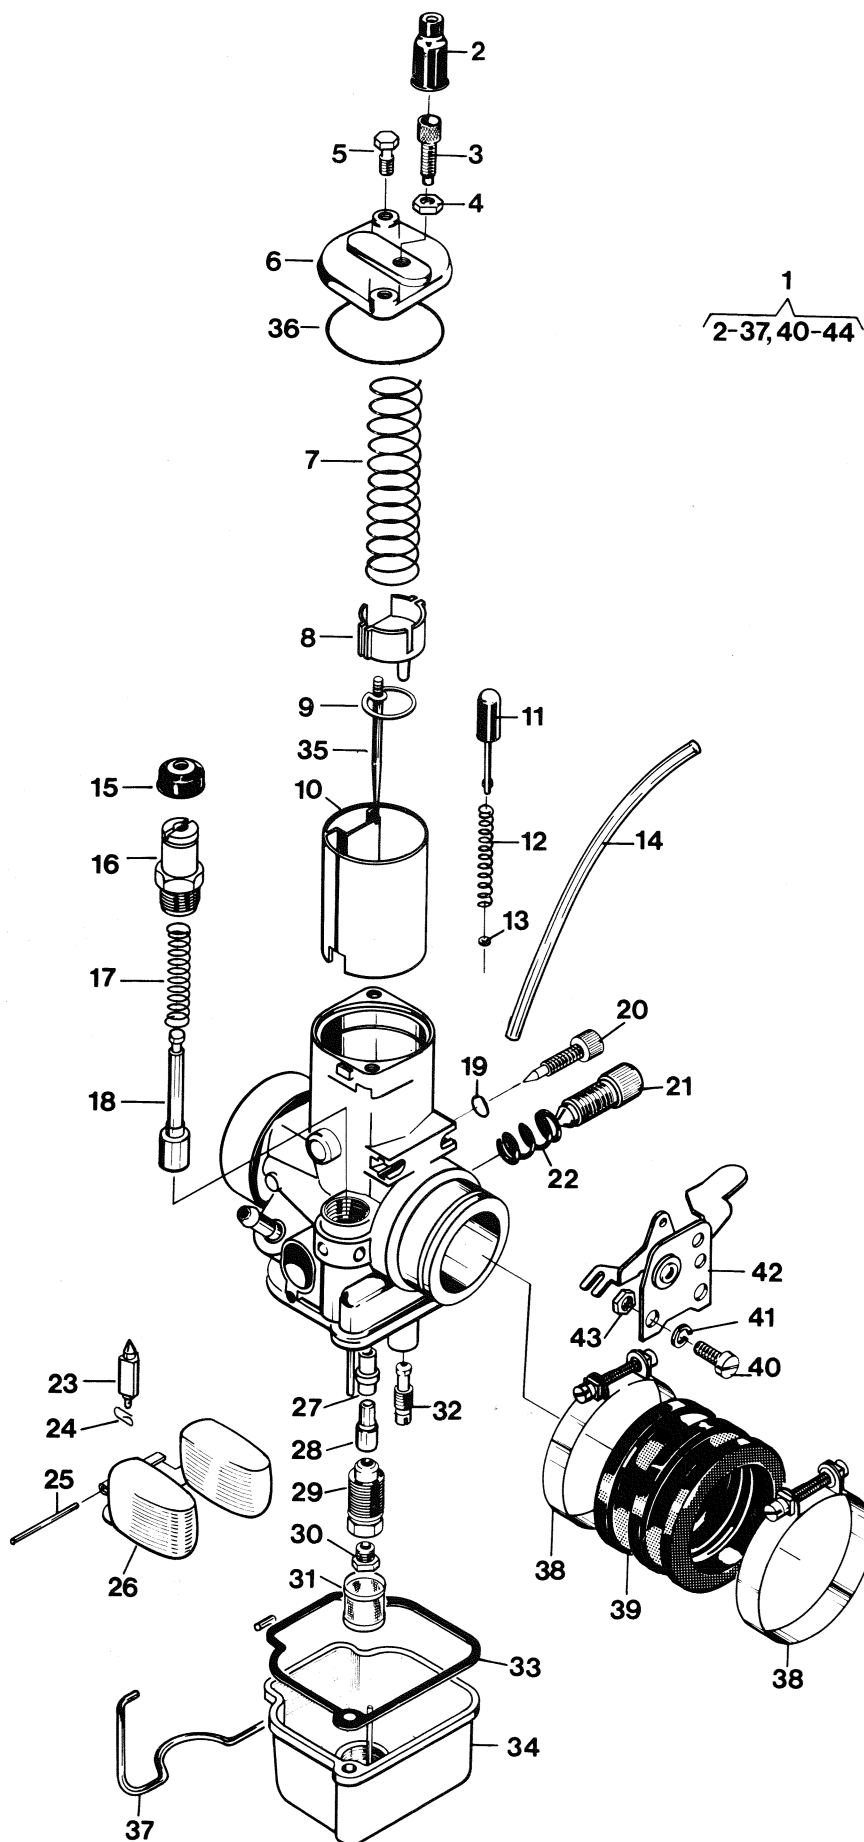


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
1	16 13 442-01	1	1													Förgasare, kpl. Carburettor compl.	
2	16 13 128-01	1	1													Skyddshylsa Protecttor sleeve	
3	16 13 916-01	1	1													Ställskruv Tension screw	
4	16 13 908-01	1	1													Mutter Nut	
5	16 13 126-01	2	2													Skruv Nut	
6	16 13 247-01	1	1													Förgasarelock Carburettor cover	
7	16 13 597-01	1	1													Trottelfjäder Throttle spring	
8	16 13 237-01	1	1													Wirelås Wire lock	
9	16 13 244-01	1	1													Hållare Needle holder	
10	16 13 484-01	1	1													Trottel Throttle	
11	16 13 449-01	1	1													Flödareknapp Tickler button	
12	16 13 451-01	1	1													Fjäder Spring	
13	16 13 450-01	1	1													Bricka Washer	
14	11 28 072-05	1	1													Slang/m 8x4 Hose/m	
15	16 13 464-01	1	1													Gummiskydd Rubber cap.	
16	16 13 459-01	1	1													Starthylsa Start sleeve	
17	15 13 458-01	1	1													Fjäder Spring	
18	16 13 457-01	1	1													Kolv Piston	
19	16 13 465-01	1	1													O-ring Rubber ring	
20	16 13 453-01	1	1													Luftskruv Air screw	
21	16 13 986-01	1	1													Ställskruv Adjusting screw	
22	16 13 987-01	1	1													Fjäder Spring	
23	16 13 417-01	1	1													Nål Needle	
24	16 13 330-01	1	1													Fjäder Spring	
25	16 13 993-01	1	1													Stift Peg	
26	16 13 537-01	1	1													Flottör Float	
27	16 13 215-01	1	1													Spridare Atomizer	
28	16 13 238-01	1	1													Nålmunstycke 2,76 Needle jet.	
29	16 13 979-01	1	1													Blandarrör Mixer tube	
30	16 13 506-01	1	1													Huvudmunstycke 170 Main jet.	
31	16 13 509-01	1	1													Silhylsa Strainer sleeve	
32	16 13 505-01	1	1													Tomgångsmunstycke 35 Idling jet	
33	16 13 989-01	1	1													Packning Gasket	
34	16 13 494-01	1	1													Flottörhus Float chamber	
35	16 13 596-01	1	1													Nål Needle	
36	16 13 248-01	1	1													O-ring Rubber ring	
37	16 13 990-01	1	1													Fjäderbygel Spring strop	
38	16 13 538-01	2	2													Klamma Clamp	
39	16 13 226-01	1	1													Muff Muff	

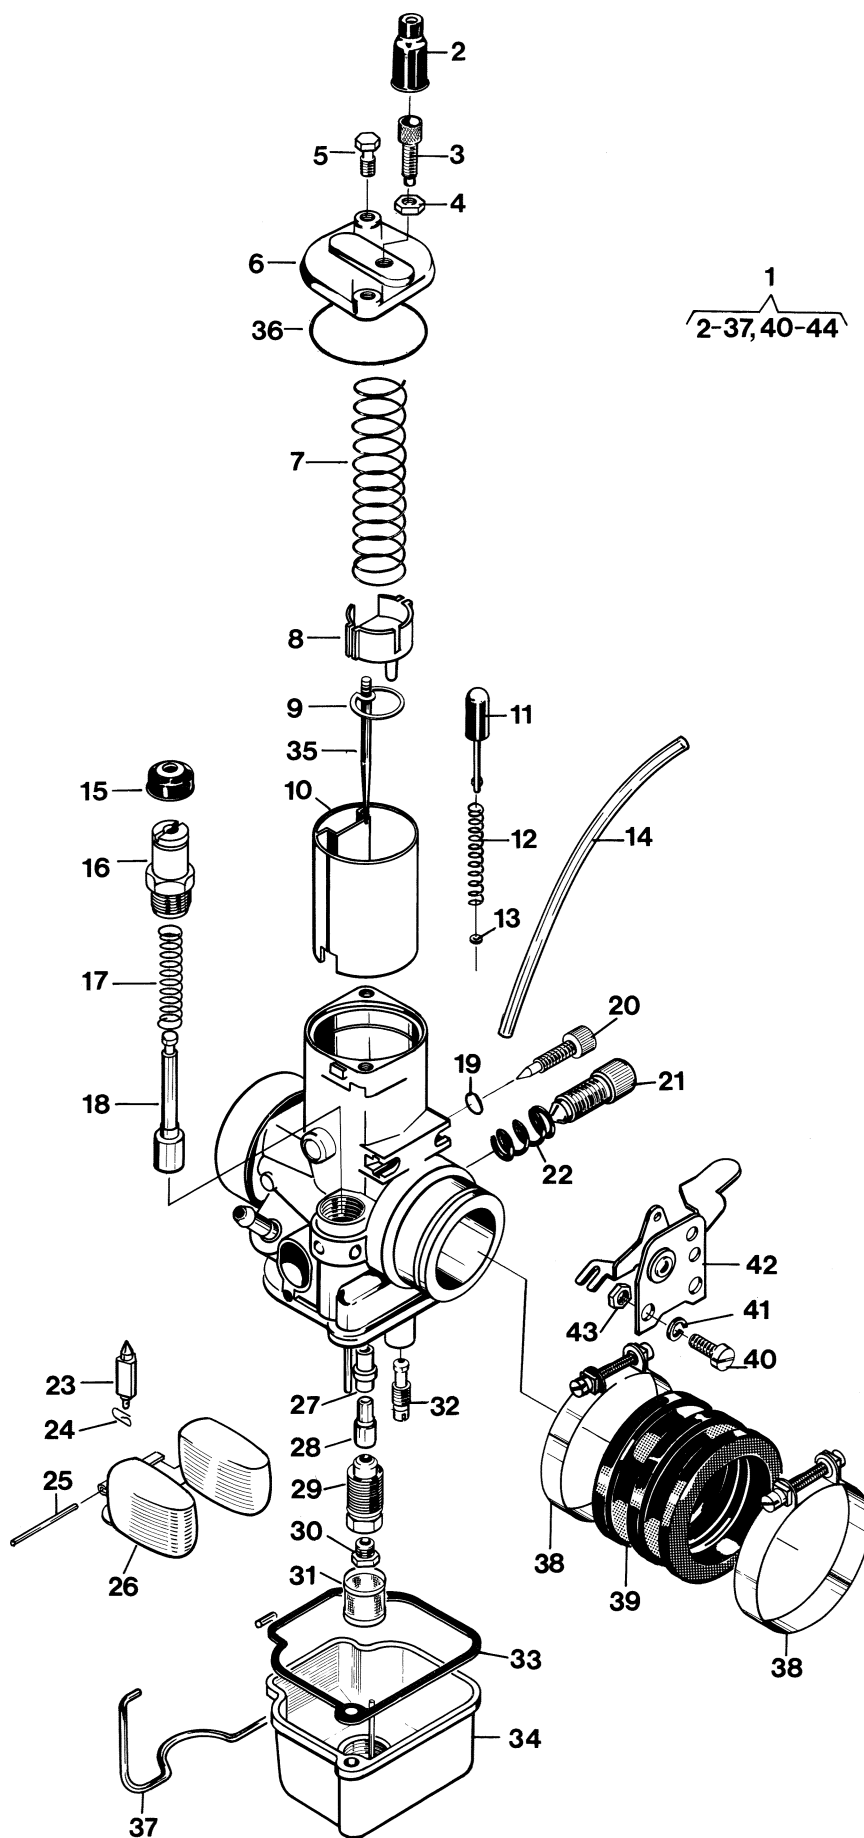


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
40	20 62 325-11	2	2													Skruv Screw	
41	28 04 301-01	2	2													Bricka Washer	
42	16 13 483-01	1	1													Choke reglage Choke lever	
43	16 13 463-01	2	2													Mutter Nut	
Tillbehör/Accessories																	
28	16 13 485-01 16 13 240-01 16 13 241-01															Nålmunstycken Needle jets 2,70 2,73 2,80	
30	16 13 232-01 16 13 239-01 16 13 234-01 16 13 235-01 16 13 236-01 16 13 506-01 16 13 507-01															Huvudmunstycken Main jets 145 150 155 160 165 170 175	
32	16 13 510-01 16 13 981-01 16 13 216-01															Tomgångsmunstycken Idling jets 30 40 45	

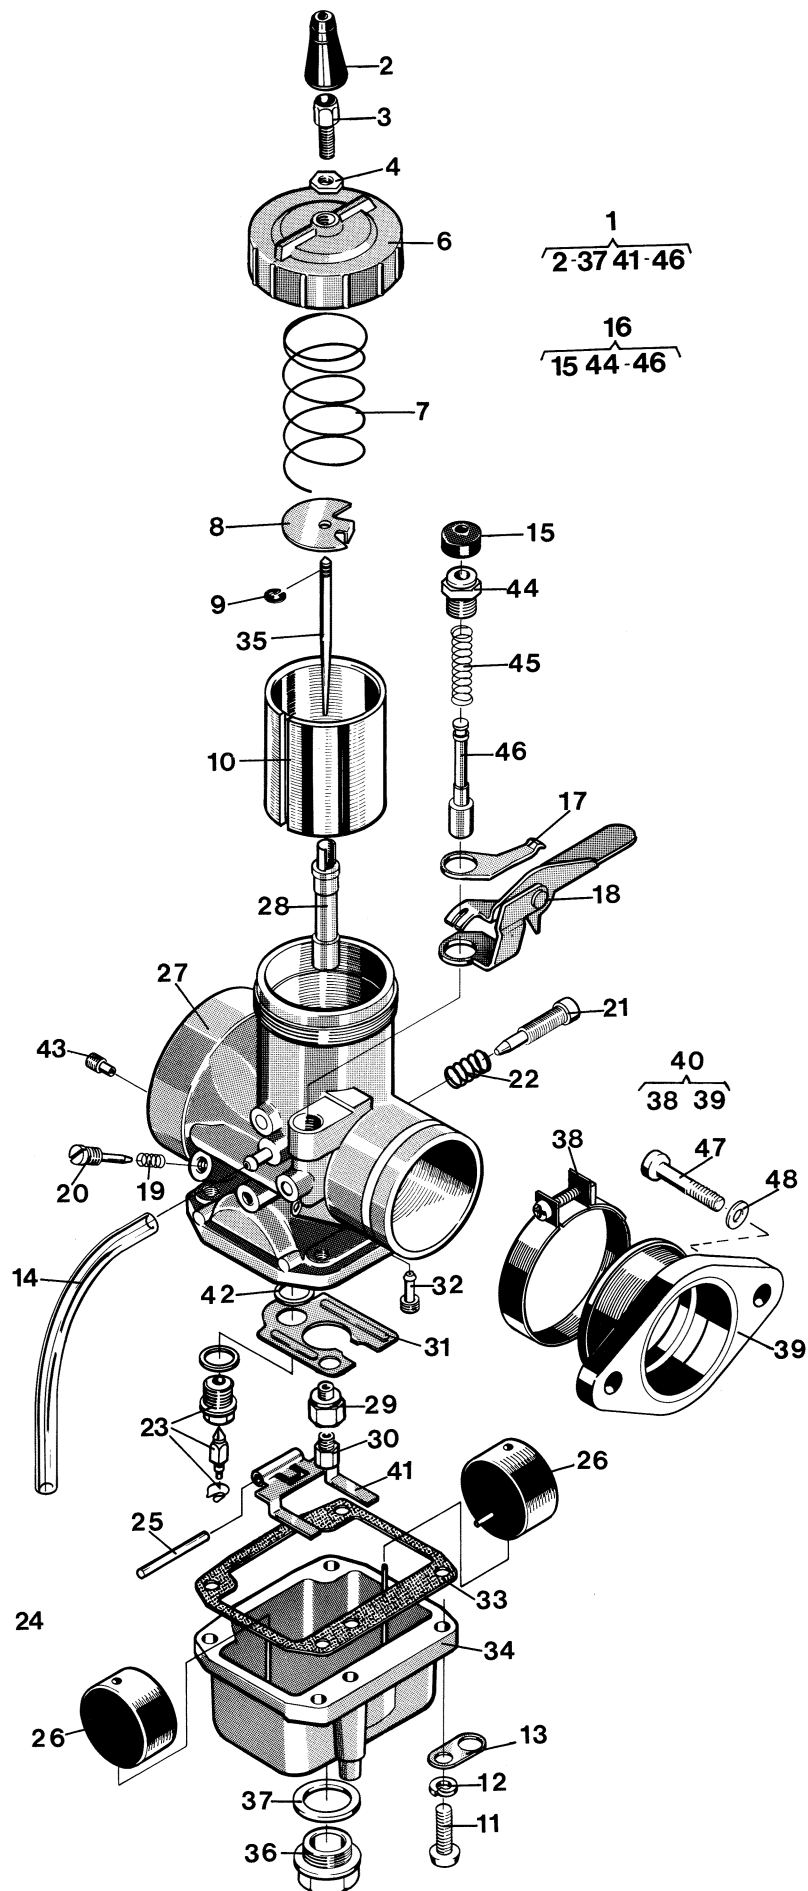


Fig.	Part Number Detaljnummer	Quantity/Antal													Description Benämning			
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
N	1	16 13 644-01								1	1					Förgasare Mikuni Carburettor compl.		
		16 13 532-01			1	1	1	1	1				1					
		16 13 640-01								1								
	2	16 13 128-01			1	1	1	1	1	1	1	1	1			Skyddshylsa Protector sleeve		
	3	16 13 916-01			1	1	1	1	1	1	1	1	1			Ställskruv Tension screw		
	4	16 13 908-01			1	1	1	1	1	1	1	1	1			Mutter Nut		
	6	16 13 570-01			1	1	1	1	1	1	1	1	1			Förgasarelock Carburettor cover		
	7	16 13 571-01			1	1	1	1	1	1	1	1	1			Trottefjäder Throttle spring		
	8	16 13 584-01			1	1	1	1	1	1	1	1	1			Wirelås Wire lock		
9	16 13 583-01			1	1	1	1	1	1	1	1	1			Hållare Needle holder			
N	10	16 13 575-01			1	1	1	1	1		1	1				Trottel ca 2,0 Throttle ca 2.5		
		16 13 576-01								1			1					
	11	22 00 430-17			4	4	4	4	4	4	4	4	4			Skruv M5x16 Screw		
	12	28 04 301-01			4	4	4	4	4	4	4	4	4			Bricka Washer		
	13	16 13 569-01			2	2	2	2	2	2	2	2	2			Hållare Holder		
	14	16 13 448-01			2	2	2	2	2	2	2	2	2			Slang/m 6x4 Hose/m		
	15	16 13 590-01			1	1	1	1	1	1	1	1	1			Gummiskydd Rubber cap.		
	16	16 13 589-01			1	1	1	1	1	1	1	1	1			Startventil, kpl. Start valve, compl.		
	17	16 13 594-01			1	1	1	1	1	1	1	1	1			Fjäder Spring		
	18	16 13 595-01			1	1	1	1	1	1	1	1	1			Chokereglage Choke lever		
	19	16 13 572-01			1	1	1	1	1	1	1	1	1			Fjäder Spring		
	20	16 13 573-01			1	1	1	1	1	1	1	1	1			Luftskruv Air screw		
	21	16 13 588-01			1	1	1	1	1	1	1	1	1			Ställskruv Adjusting screw		
	22	16 13 587-01			1	1	1	1	1	1	1	1	1			Fjäder Spring		
	23	16 13 565-01			1	1	1	1	1	1	1	1	1			Nålventil, kpl. Needle valve, compl.		
	24	16 13 585-01			2	2	2	2	2	2	2	2	2			Flottörstopp Cap		
	25	16 13 566-01			1	1	1	1	1	1	1	1	1			Stift Peg		
	26	16 13 578-01			2	2	2	2	2	2	2	2	2			Flottör Float		
	28	16 13 554-01			1	1	1	1	1	1				1		Nålmunstycke N.JR4 Needle jet NJ Q8		
		16 13 552-01									1	1						
	29	16 13 580-01			1	1	1	1	1	1	1	1	1			Mellanskruv Distance screw		
	N	30	16 13 562-01							1				1			Huvudmunstycke M.J 450 Main jet 430 Main jet 441	
			16 13 560-01			1	1	1	1	1								
			16 13 561-01								1	1						
		31	16 13 586-01			1	1	1	1	1	1	1	1	1			Skvalpplåt Baffle plate	
		32	16 13 546-01			1	1	1	1	1	1	1	1	1			Tomgångsmunstycke P.J 45 Idling jet	
		33	16 13 543-01			1	1	1	1	1	1	1	1	1			Packning Gasket	
		34	16 13 574-01			1	1	1	1	1	1	1	1	1			Flottörhus Float chamber	
35		16 13 579-01			1	1	1	1	1	1	1	1	1			Nål Needle		
36		16 13 581-01			1	1	1	1	1	1	1	1	1			Bottenskruv Screw drain		
37		16 13 582-01			1	1	1	1	1	1	1	1	1			Packning Gasket		
	38	16 13 535-01			1	1	1	1	1	1	1	1	1			Klamma Clamp		

Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning	
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
40	16 13 533-01			1	1	1	1	1	1	1	1	1				Anslutning, kpl. Connection, compl.	
41	16 13 564-01			1	1	1	1	1	1	1	1	1				Flottörarm Floar lever	
42	16 13 567-01			2	2	2	2	2	2	2	2	2				Bricka Washer	
43	16 13 568-01			1	1	1	1	1	1	1	1	1				Luftmunstycke A:J2,0 Air jet	
47	20 24 453-02			2	2	2	2	2	2	2	2	2				Skruv M8x25 Screw	
48	28 16 231-01			2	2	2	2	2	2	2	2	2				Bricka 8,4x16 Washer	
Tillbehör/Accessories																	
10	16 13 575-01 16 13 576-01 16 13 577-01															Trottlar Throttles C.A 2.0 C.A 2.5 C.A 3.0	
28	16 13 549-01 16 13 550-01 16 13 551-01 16 13 552-01 16 13 553-01 16 13 554-01 16 13 555-01 16 13 642-01															Nålmunstycke Needle jets N.J Q-4 N.J Q-5 N.J Q-6 N.J Q-8 N.J R-0 N.J R-2 N.J R-4 N.J R-6	
30	16 13 556-01 16 13 557-01 16 13 558-01 16 13 559-01 16 13 561-01 16 13 562-01 16 13 563-01 16 13 641-01															Huvudmunstycke Main jets M.J 390 M.J 400 M.J 410 M.J 420 M.J 440 M.J 450 M.J 460 M.J 470	
32	16 13 544-01 16 13 545-01 16 13 546-01 16 13 547-01 16 13 548-01															Tomgångsmunstycken Idling jets P.J 35 P.J 40 P.J 45 P.J 50 P.J 55	

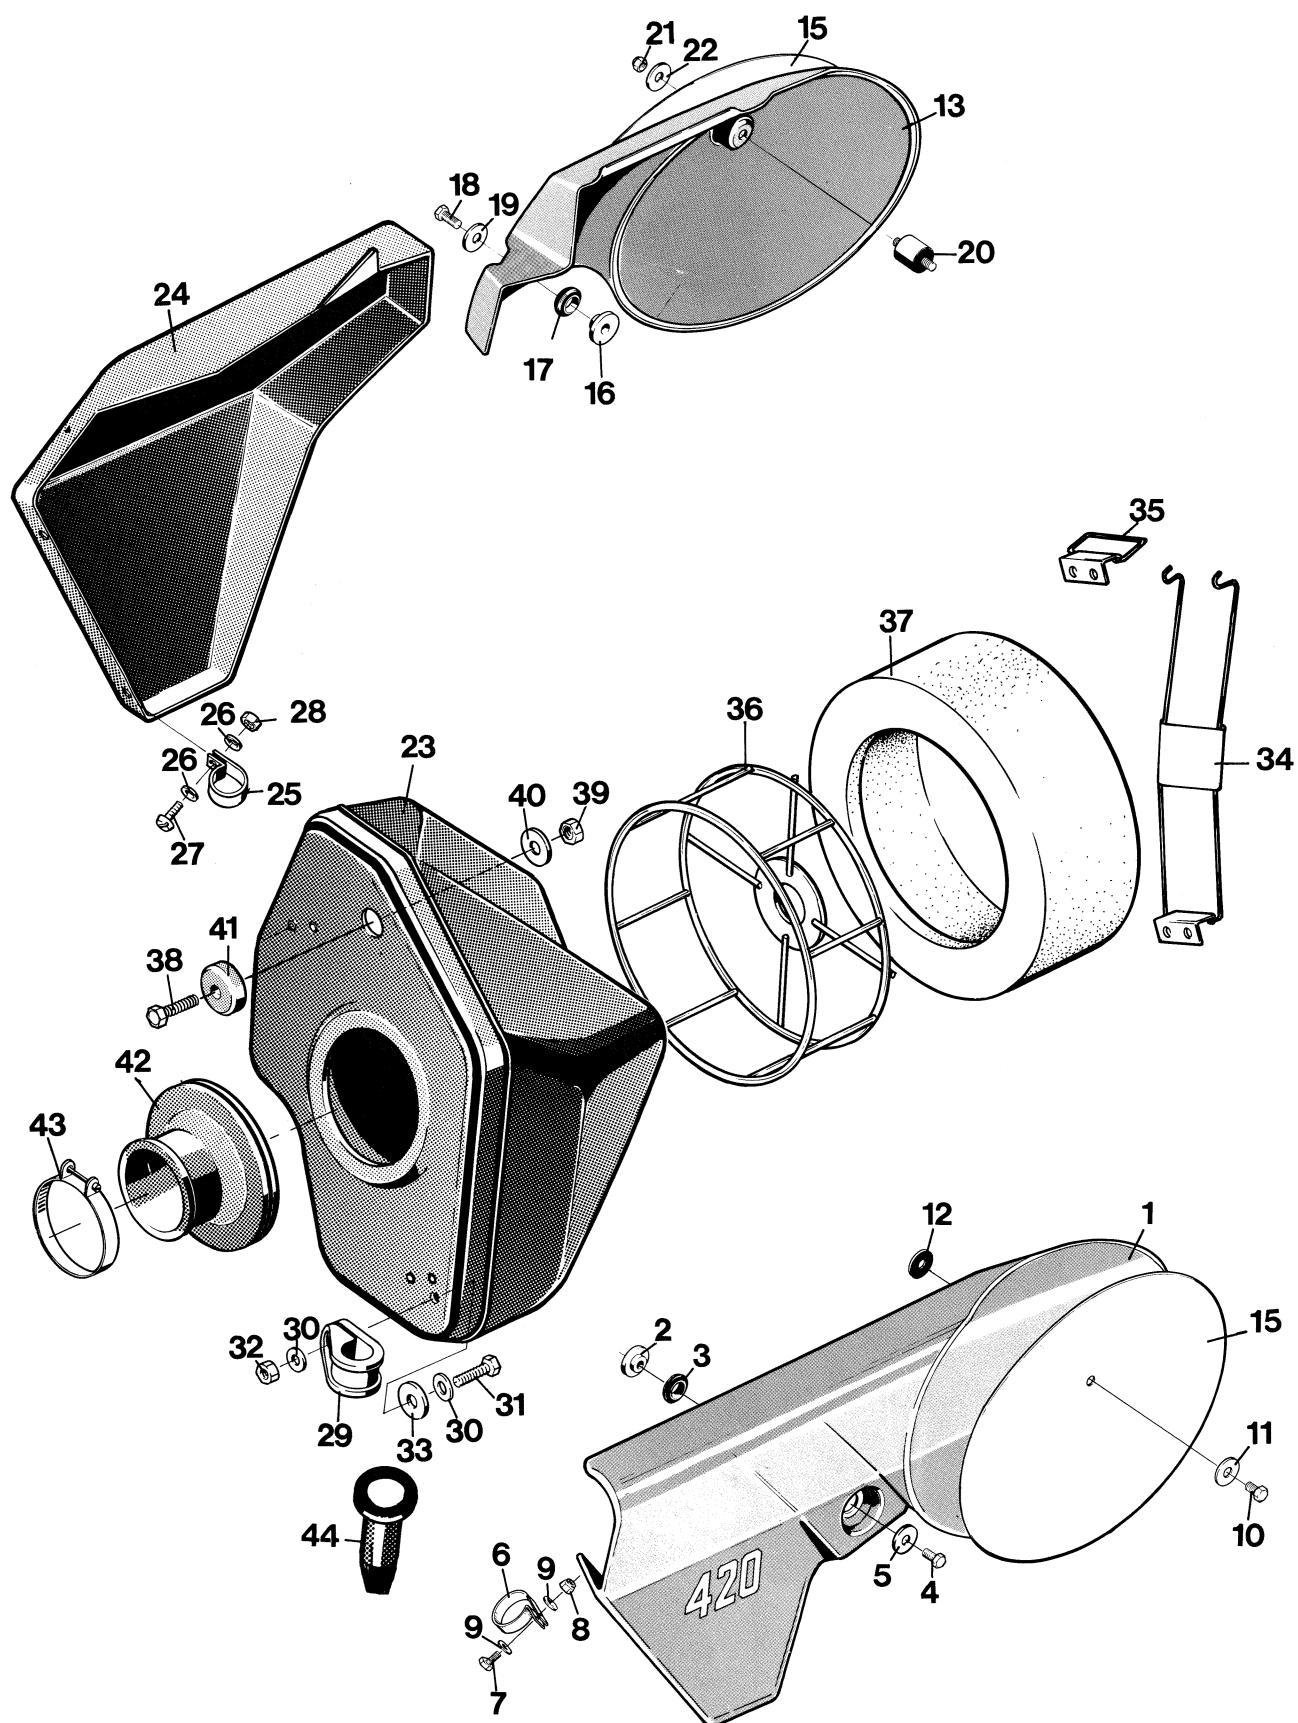


Fig.	Part Number Detailnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
N	1	15 19 574-01 15 19 569-03 15 19 569-01 15 19 574-02 15 19 474-01				1		1	1	1							Sidopanel vänster, kpl. Side panel left, compl.	
	2		1	1	1	1	1	1	1	1	1	1	1				Distans Distance	
	3	15 19 475-01	1	1	1	1	1	1	1	1	1	1	1				Genomföring Rubber attach	
	4	20 06 368-12	1	1	1	1	1	1	1	1	1	1	1				Skruv M6S 6x16 Screw	
	5	28 01 416-01	1	1	1	1	1	1	1	1	1	1	1				Bricka 6,5x22 Washer	
	6	15 14 201-01	2	2	2	2	2	2	2	2	2	2	2				Klamma Clamp	
	7	20 62 291-11	2	2	2	2	2	2	2	2	2	2	2				Skruv Screw	
	8	25 80 118-01	2	2	2	2	2	2	2	2	2	2	2				Låsmutter Nut	
	9	28 01 233-01	4	4		4		4		4	4	4	4				Bricka 4,3x12 Washer	
	10	20 62 368-11	1	1	1	1	1	1	1	1	1	1	1				Skruv 6x16 Screw	
	11	28 01 416-01	1	1	1	1	1	1	1	1	1	1	1				Bricka 6,5x22 Washer	
	12	15 19 342-01	1	1	1	1	1	1	1	1	1	1	1				Gummibricka Rubber washer	
N	13	15 19 574-03 15 19 574-01 15 19 574-02	1	1		1		1	1		1	1	1				Sidopanel höger, kpl. Side panel right, compl.	
N	15	15 19 573-03 15 19 573-01 15 19 573-02	1	1		1		1	1		1	1	1				Nummeroval Decal	
	16	15 19 474-01	1	1	1	1	1	1	1	1	1	1	1				Distans Distance	
	17	15 19 475-01	1	1	1	1	1	1	1	1	1						Genomföring Rubber attach	
	18	20 06 368-12	1	1	1	1	1	1	1	1	1	1	1				Skruv M6x12 Screw	
	19	28 01 416-01	1	1	1	1	1	1	1	1	1	1	1				Bricka 6,5x22 Washer	
	20	15 17 090-01	1	1	1	1	1	1	1	1	1	1	1				Vibrationselement Vibration damper	
	21	25 80 142-01	1	1	1	1	1	1	1	1	1	1	1				Mutter Nut	
	22	28 01 416-01	1	1	1	1	1	1	1	1	1	1	1				Bricka 6,5x22 Washer	
	23	15 14 979-01	1	1	1	1	1	1	1	1	1	1	1				Luftfilterbehållare Air filter box	
	24	15 14 991-01	1	1	1	1	1	1	1	1	1	1	1				Lock Cover	
	25	15 14 201-01	2	2	2	2	2	2	2	2	2	2	2				Klamma Clamp	
	26	28 01 233-01	4	4	4	4	4	4	4	4	4	4	4				Bricka 4,3x12 Washer	
	27	20 62 291-11	2	2	2	2	2	2	2	2	2	2	2				Skruv M4x12 Screw	
	28	25 80 118-01	2	2	2	2	2	2	2	2	2	2	2				Låsmutter M4 Nut	
	29	15 18 137-01	1	1	1	1	1	1	1	1	1	1	1				Fäste Attachment	
	30	28 16 211-01	2	2	2	2	2	2	2	2	2	2	2				Bricka Washer	
	31	20 06 371-12	1	1	1	1	1	1	1	1	1	1	1				Skruv M6x22 Screw	
	32	25 80 142-01	1	1	1	1	1	1	1	1	1	1	1				Låsmutter M6 Nut	
	33	15 18 121-01	1	1	1	1	1	1	1	1	1	1	1				Gummibricka Rubber washer	
	34	15 14 985-01	1	1	1	1	1	1	1	1	1	1	1				Bygel Filter holder	
	35	15 14 986-01	1	1	1	1	1	1	1	1	1	1	1				Länk Link	
	36	15 14 982-01	1	1	1	1	1	1	1	1	1	1	1				Korg Basket	
	37	15 14 983-01	1	1	1	1	1	1	1	1	1	1	1				Luftfilter Air filter	
	38	20 06 371-12	1	1	1	1	1	1	1	1	1	1	1				Skruv M6x22 Screw	

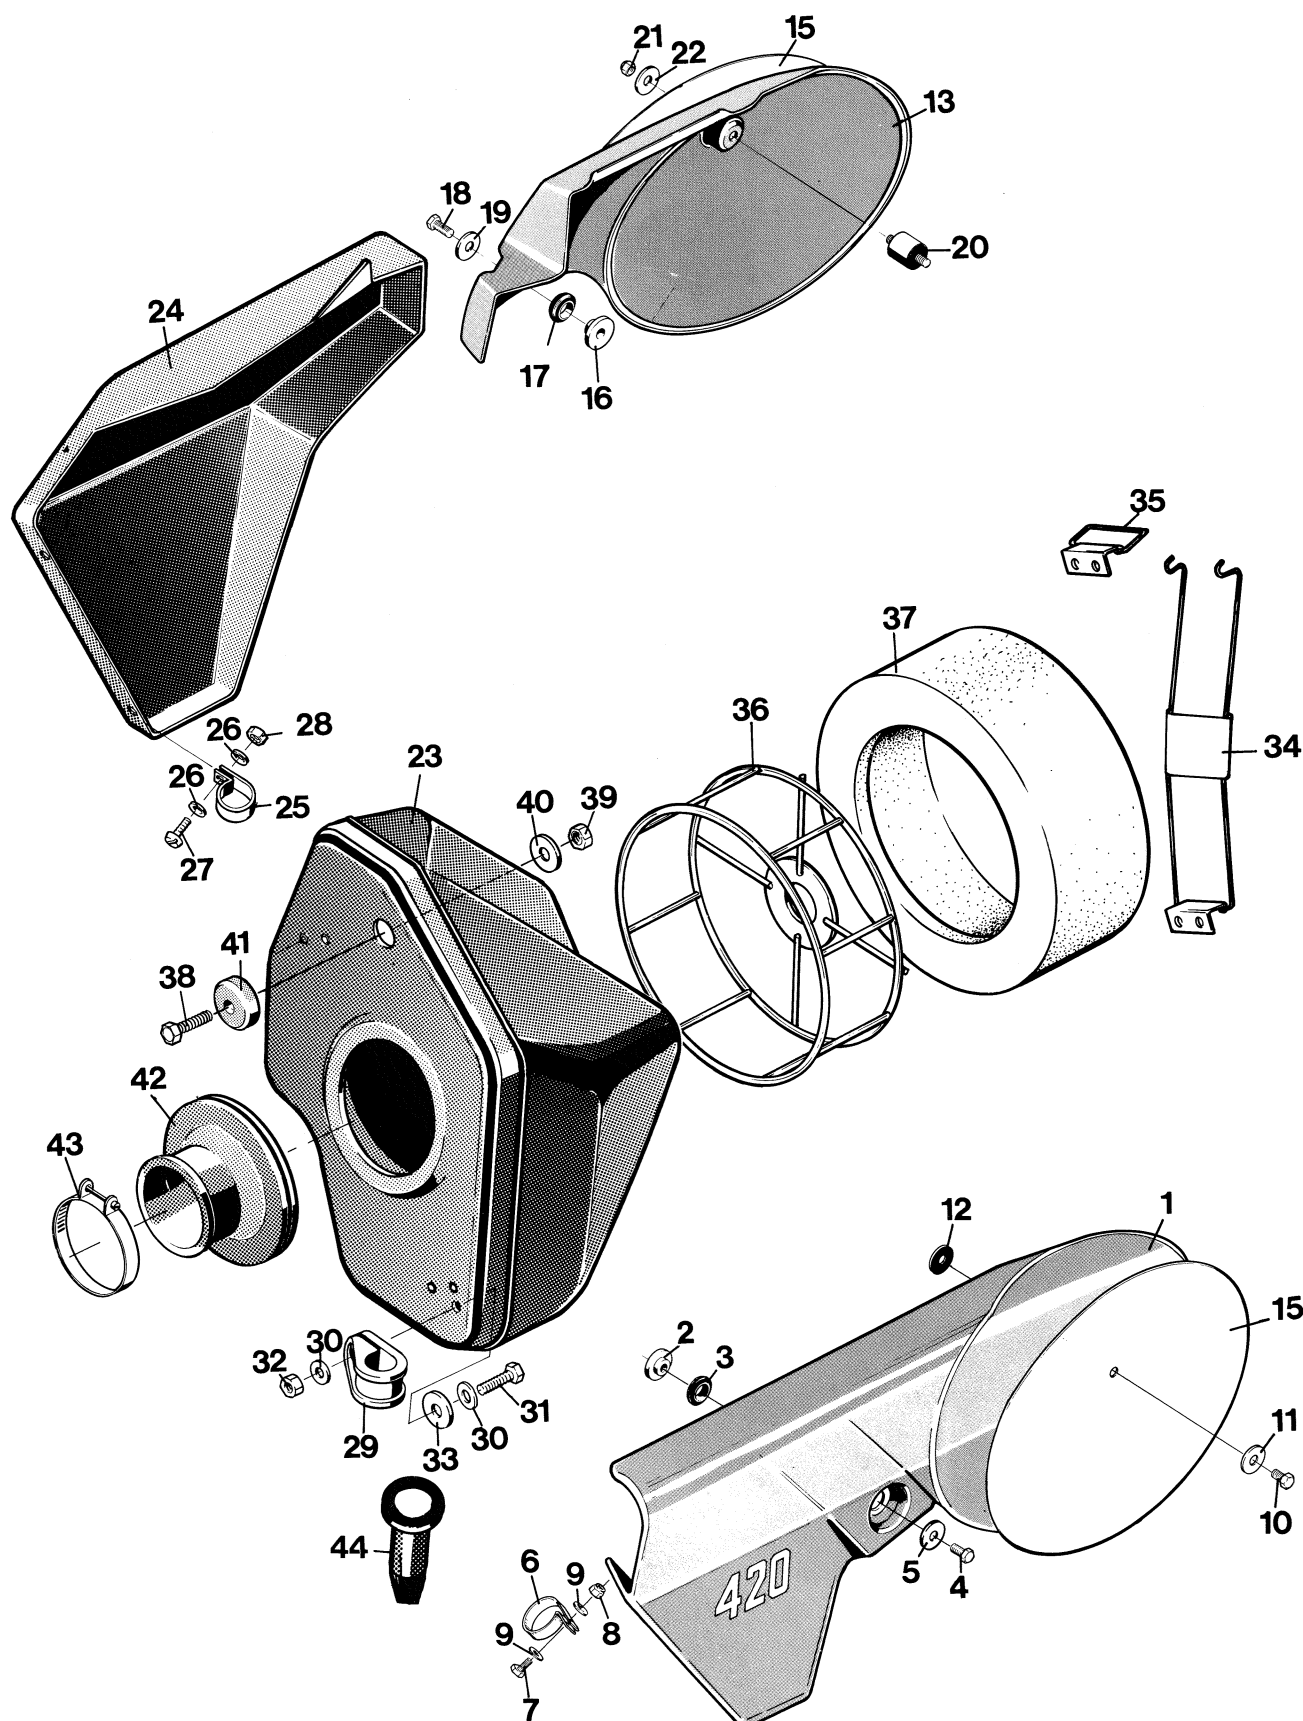


Fig.	Part Number Detaljnummer	Quantity/Antal													Description Benämning		
		125		240		250			430								
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC					
39	25 80 142-01	1	1	1	1	1	1	1	1	1	1	1				Låsmutter Nut	
40	28 01 416-01	1	1	1	1	1	1	1	1	1	1	1				Bricka Washer	
41	15 19342-01	1	1	1	1	1	1	1	1	1	1	1				Gummibussning Bushing	
42	15 14 984-01 15 14 301-01	1	1	1	1	1	1	1	1	1	1	1				Gummianslutning Rubber Connection	
43	16 13 539-01	1	1	1	1	1	1	1	1	1	1	1				Klamma Clamp	
44	15 14 324-01	1	1	1	1	1	1	1	1	1	1	1				Dräneringsventil Outlet hose	

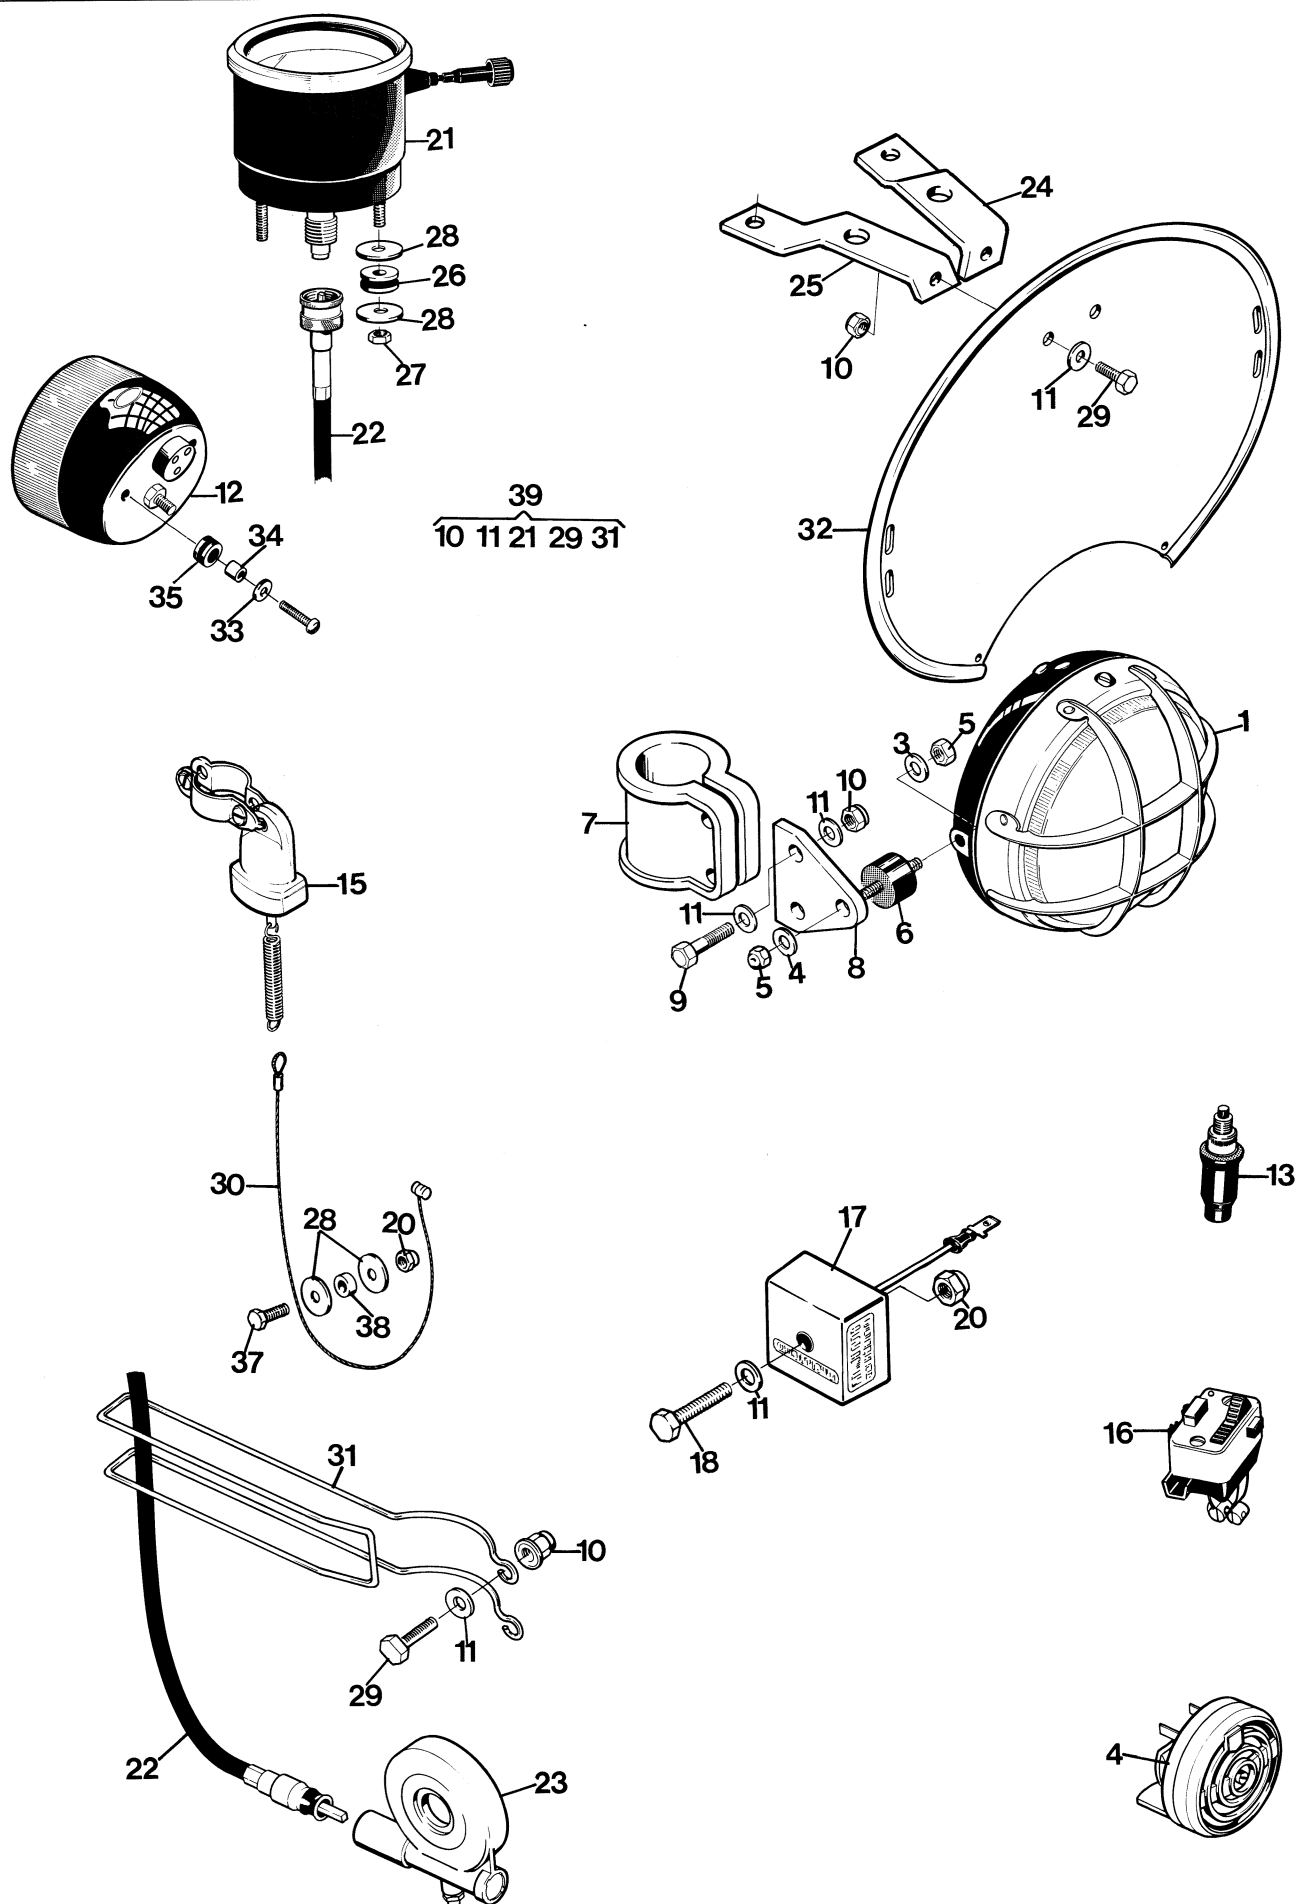


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
1	15 17 307-01		1		1		1			1	1						Strålkastare Head lamp	
2	15 17 342-01		1		1		1			1	1						Glödlampa 12V-36/36W Electric bulb.	
3	15 17 339-01		2		2		2			2	2						Plastbricka Washer	
4	15 17 340-01		2		2		2			2	2						Bricka Washer	
5	25 80 153-01		4		4		4			4	4						Mutter M8 Nut	
6	15 14 590-01		2		2		2			2	2						Vibrationselement Damping element	
7	15 17 300-01		2		2		2			2	2						Lamphållare Rubber holder	
8	15 17 304-01		2		2		2			2	2						Lampfäste Lamp attachment	
9	20 06 374-12		4		4		4			4	4						Skruv M6x30 Screw	
10	25 81 146-01		7		7		7			7	7						Mutter M6 Nut	
11	28 16 211-01		8		8		8			8	8						Bricka 6,4 x 14 Washer	
12	15 17 311-01		1		1		1			1	1						Baklykta Rear lamp	
13	15 17 328-01		1		1						1						Bromsljuskontakt Brake contact	
14	15 17 308-01		1		1						1						Signalhorn Signal horn	
15	15 17 313-01		1		1						1						Bromsljuskontakt Brake contact	
16	15 17 292-01		1		1						1						Omkopplare Switcher	
17	16 14 757-01		1		1		1			1	1						Spänningsregulator Voltage regulator	
18	20 06 376-12		1		1		1			1	1						Skruv M6x35 Screw	
19	28 16 211-01		2		2		2			2	2						Bricka 6,4 x 14 Washer	
20	25 80 142-01		2		2		2			2	2						Mutter M6 Nut	
21	15 19 877-01		1		1		1			1	1						Hastighetsmätare Speedo-meter Km	
	15 19 878-01		1		1		1			1	1						Hastighetsmätare Speedo-meter Miles	
22	15 17 301-01		1		1		1			1	1						Böjlig axel Speedo wire	
23	15 17 302-01		1		1		1			1	1						Vinkelväxel Angle gear	
24	15 17 325-01		1		1		1			1	1						Fäste, höger Attachment right	
25	15 17 326-01		1		1		1			1	1						Fäste, vänster Attachment left	
26	50 15 495-01		2		2		2			2	2						Gummigenomföring Rubber attach.	
27	25 80 132-01		2		2		2			2	2						Mutter M5 Nut	
28	28 01 416-01		6		6		6			6	6						Bricka 6,5x22 Washer	
29	20 06 371-12		4		4		4			4	4						Skruv M6x22 Screw	
30	15 17 364-01		1		1						1						Wire Wire	
31	15 17 306-01		1		1		1			1	1						Avvisarbygel Wire protec.	
32	15 19 479-05		1		1		1			1	1						Nummerplåt (vit) Number plate (white)	
33	28 01 233-01		2		2		2			2	2						Bricka 4,3x12x1 Washer	
34	15 17 341-01		2		2		2			2	2						Distans Distance	
35	50 12 482-01		2		2		2			2	2						Genomföring Rubber attach.	
37	20 06 368-12		1		1						1						Skruv M6x16 Screw	
38	16 11 151-02		1		1						1						Distans Distance	

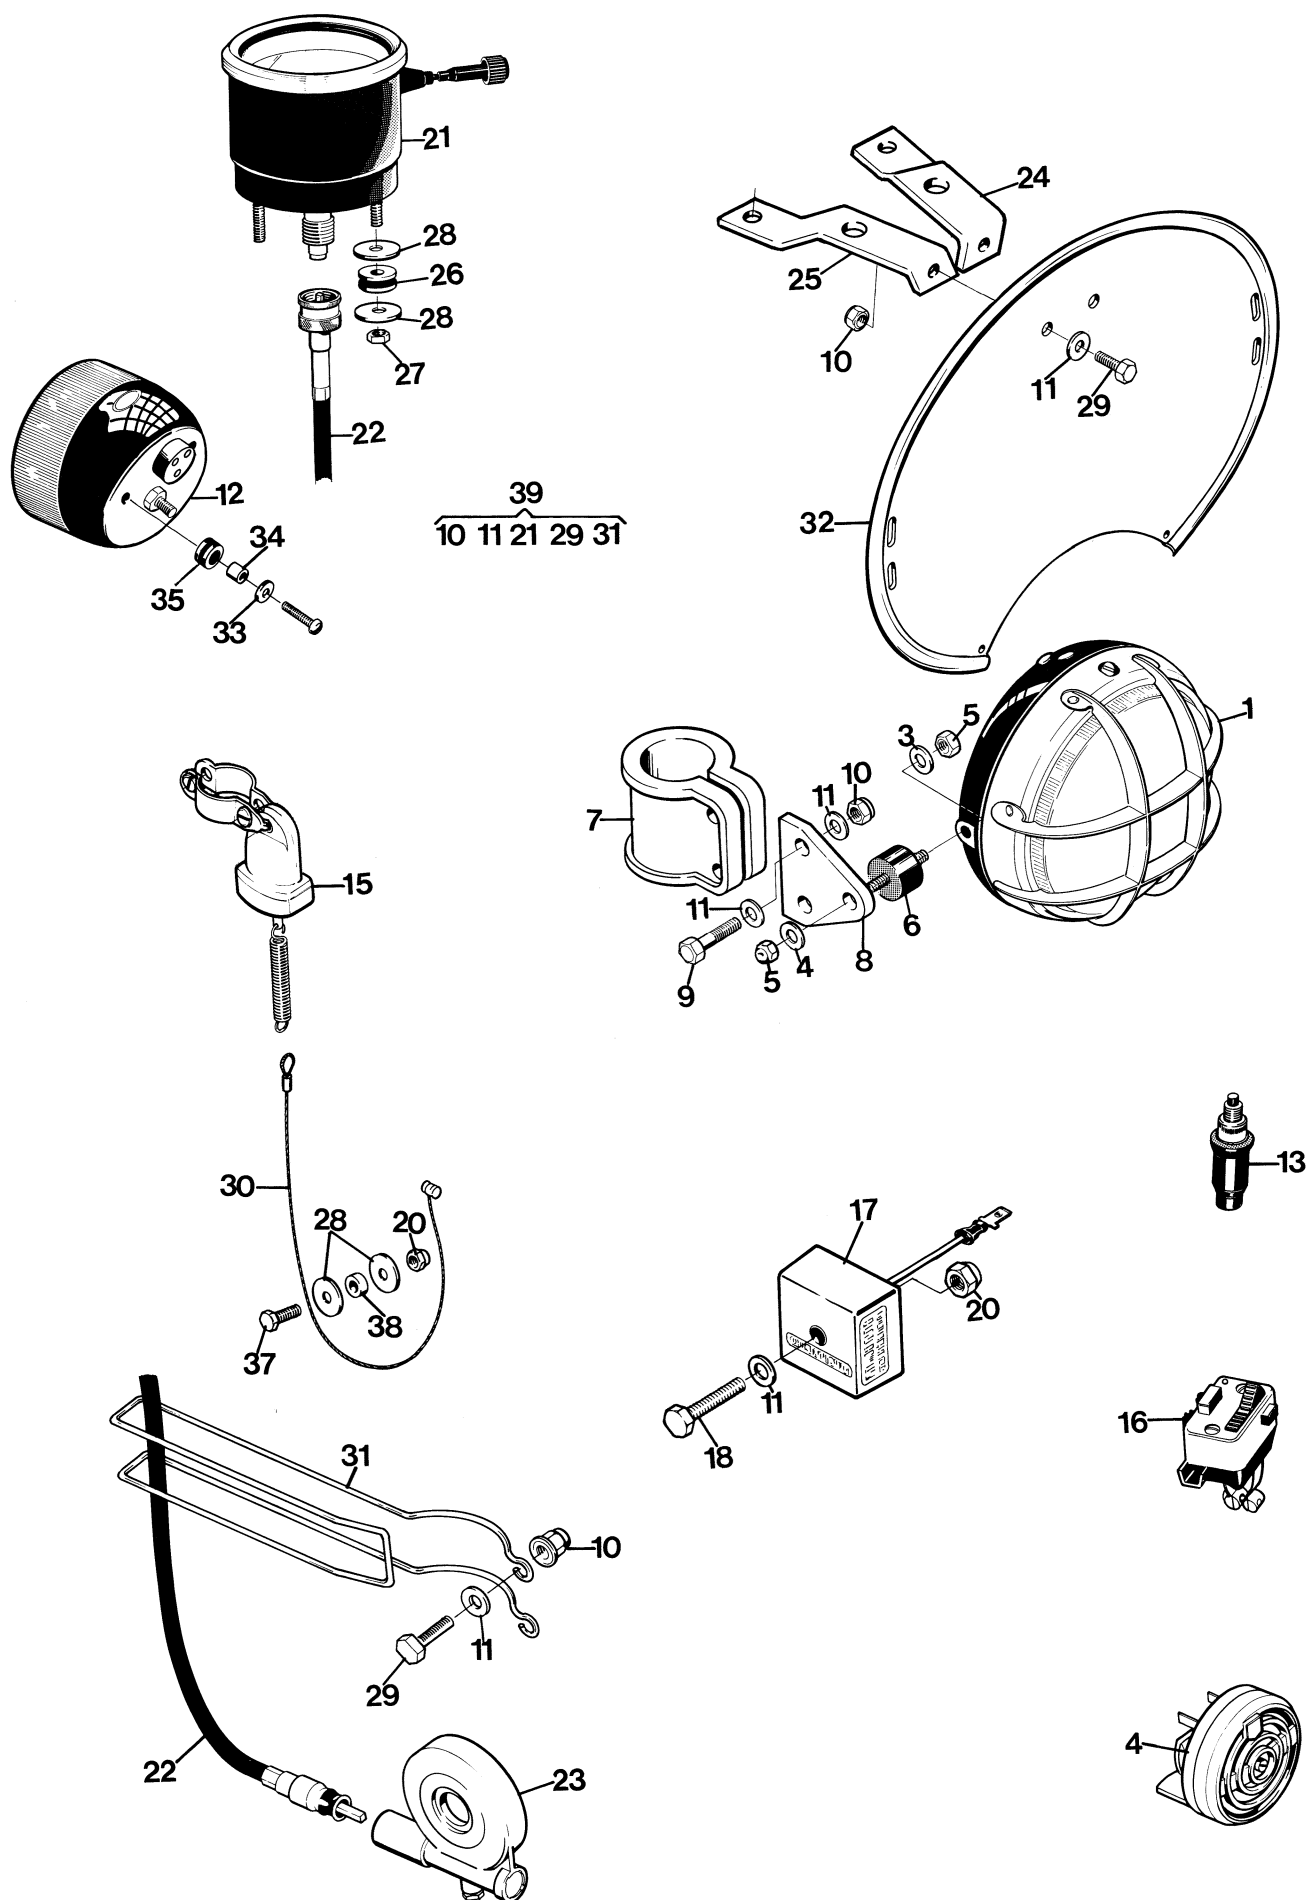


Fig.	Part Number Detaljnummer	Quantity/Antal														Description Benämning		
		125		240		250			430									
		CR	WR	CR	WR	CR	WR	XC	CR	WR	WR/E	XC						
39	15 17 312-01 15 17 312-02																Hast. mätaresats kpl. MILES Speedo-meter kit compl. MILES Hast. mätaresats kpl. KM Speedo-meter kit compl. KM	
Tillbehör/Accessories																		
	15 19 910-01 <i>1519912-01</i> <i>915-01</i> <i>916-01</i>		1		1		1			1	1						Glödlampshållare BA20d Electric bulb holder <i>SPARES FOR HEADLIGHT</i> <i>GLASS+REFLECTOR</i> <i>H-L FRAME</i> <i>H-L SPRING</i>	

