




500

Replacement parts list 1971

500 cm³ models

Publication
Ref. 00-5721

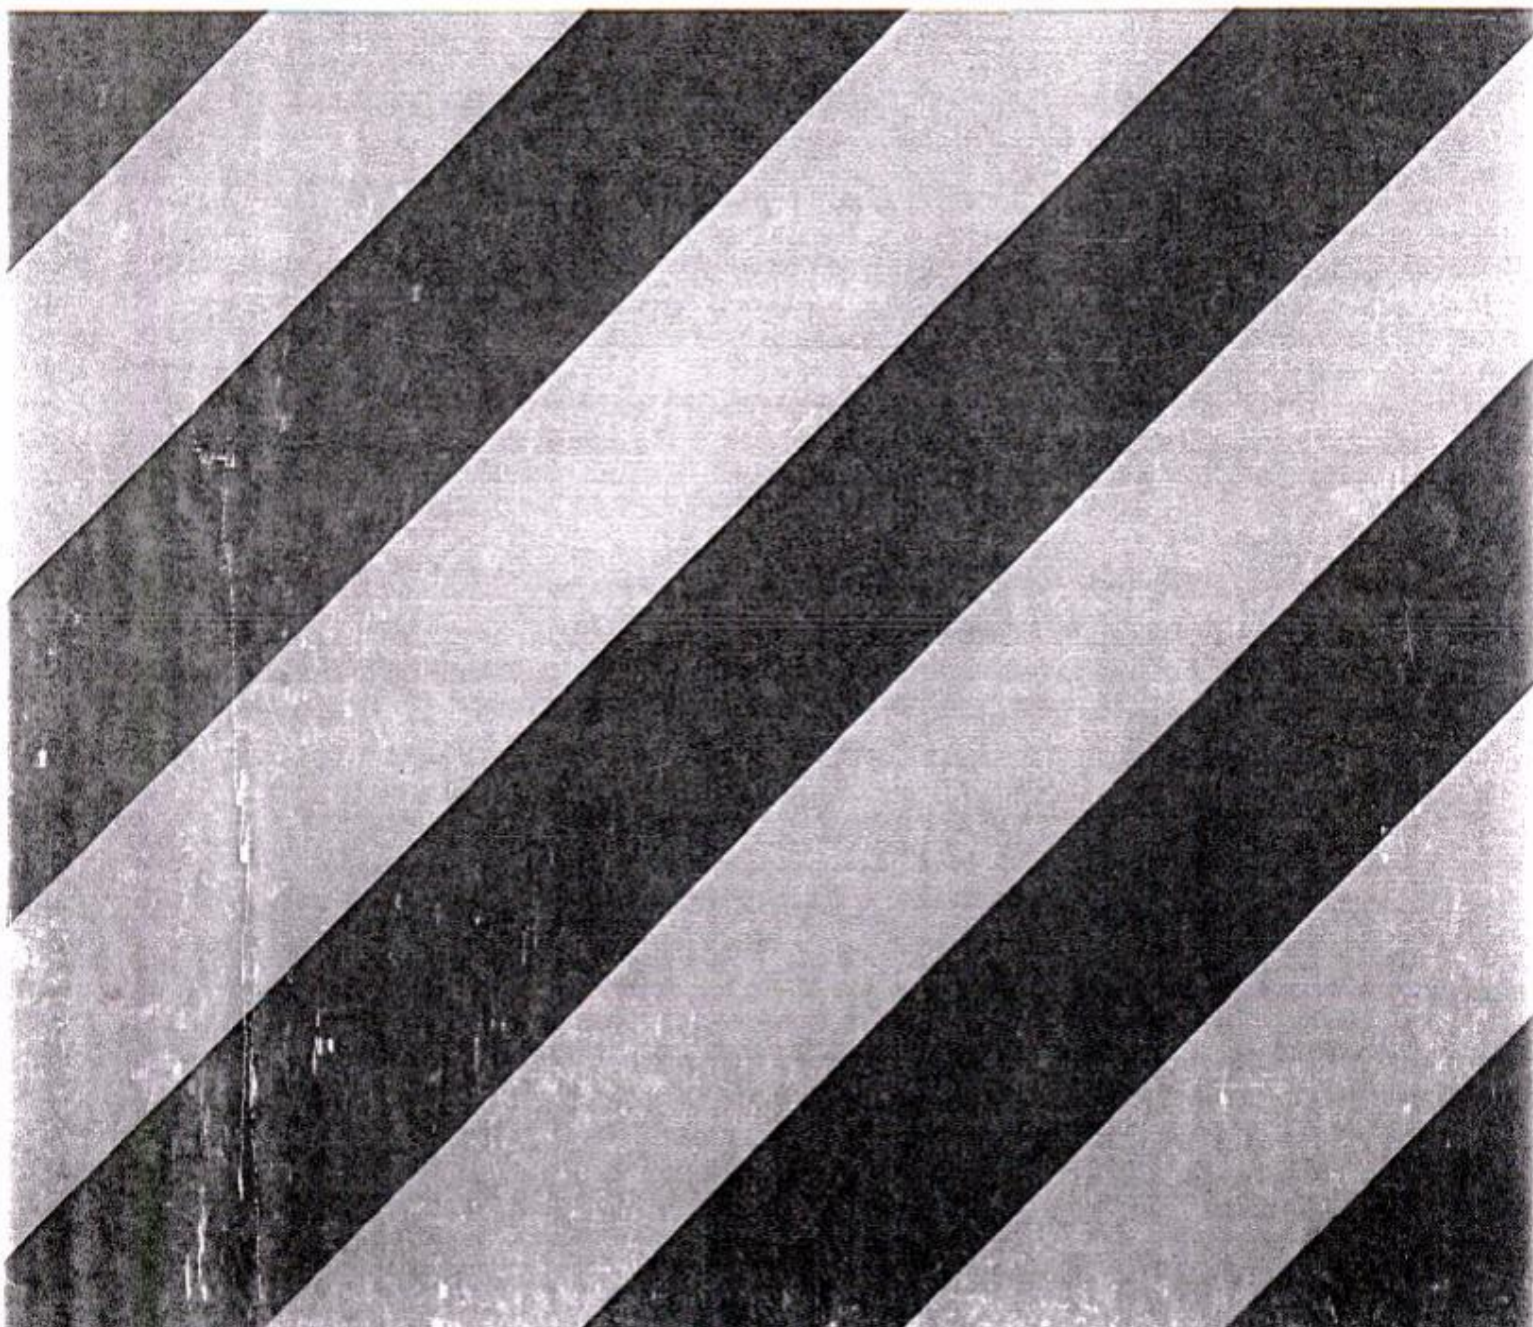



Replacement parts list

500 cm³ models

B50T Victor 500 Trail

B50SS Gold Star 500 Street Scrambler

B50SS Gold Star 500 Street Scrambler

(Home and General Export)

B50MX Victor 500 Motor Cross

Commencing	JE.00101 B50T
Engine and	JE.00101 B50SS
Frame numbers	JE.00101 B50MX

Please Note!

Replacement parts or accessories must be of B.S.A. origin or as approved by B.S.A. Motor Cycles Ltd.

In this respect your attention is drawn to the Terms and Conditions of B.S.A. Guarantee.

MODEL ABBREVIATIONS

T	=	TRAIL
SS	=	STREET SCRAMBLER
H	=	STREET SCRAMBLER — HOME AND GENERAL EXPORT
MC	=	MOTO-CROSS

SUFFIX NUMBERS TO BE USED TO IDENTIFY VARYING FINISHES

When ordering components with varying finishes, please state finish required by adding the APPROPRIATE SUFFIX TO PART NUMBER.

EXAMPLE:—Front mudguard, flamboyant red with black centre stripe 97-4052/293

PETROL TANK:

Polished alloy sides, black centre stripe, black side stripe, red lining	..	..	..	..	/291
Flamboyant red	..	..	..	..	/170
Flamboyant red, black centre stripe, black side stripe, red lining	..	..	..	..	/285

MUDGUARDS:

Flamboyant red, black centre stripe	..	..	..	..	..	..	..	..	..	/293
Flamboyant red, white centre stripe	..	..	..	..	..	..	..	..	..	/287

SIDECOVERS:

Flamboyant red	..	..	..	..	..	..	..	..	..	..	/170
----------------	----	----	----	----	----	----	----	----	----	----	------

OTHER PARTS:

Chrome	..	..	..	..	..	..	..	..	..	..	..	/003
Black	..	..	..	..	..	..	..	..	..	..	..	/007
Silver	..	..	..	..	..	..	..	..	..	..	..	/165
Grey	..	..	..	..	..	..	..	..	..	..	..	/288

PRICES:

No price codes are quoted in this list. For prices please refer to the latest edition of the Master Price List No. 00-5125.

Wherever possible details of thread form and size are quoted after description of nuts, bolts, screws, studs and washers. Such as: 14-7006 Socket screw ($\frac{1}{4}$ " U.N.C. $\times$ 1") = $\frac{1}{4}$ " diameter unified coarse thread 1" long under head.

Vital components, which are manufactured from special material, are indicated by a sign and the British Standard symbol for the material is quoted at the foot of the page.

ABBREVIATIONS

B.A.	=	British Association screw thread.
B.S.C.	=	British Standard Cycle screw thread.
B.S.F.	=	British Standard Fine screw thread.
W.F.	=	Whitworth Form screw thread.
U.N.F.	=	Unified Fine screw thread.
U.N.C.	=	Unified Coarse screw thread.
U.N.S.	=	Unified Special screw thread.

BRAKES (LOCKHEED)

AUTOMOTIVE PRODUCTS CO. LIMITED. P.O. BOX 14, SOUTHAM ROAD, BANBURY, OXFORDSHIRE.

CARBURETTORS

AMAL LIMITED, HOLDFORD ROAD, WITTON, BIRMINGHAM 6.

CHAINS

RENOLDS LIMITED, WYTHENSHAW, MANCHESTER.

ELECTRICAL EQUIPMENT

J. LUCAS LIMITED, GREAT HAMPTON STREET, BIRMINGHAM 18.

WIPAC GROUP SALES LIMITED, LONDON ROAD, BUCKINGHAM.

SHOCK ABSORBERS

GIRLING LIMITED, BIRMINGHAM ROAD, WEST BROMWICH.

SPARKING PLUGS

CHAMPION SPARKING PLUG CO. LIMITED, FELTHAM, MIDDLESEX.

SPEEDOMETERS

SMITH'S MOTOR ACCESSORIES LIMITED, CRICKLEWOOD WORKS, LONDON N.W.2.

TYRES

DUNLOP COMPANY LIMITED, FORT DUNLOP, BIRMINGHAM 24.

ASSEMBLIES COMPLETE

<i>Spares Number</i>	<i>Description</i>
00-7009	LOCTITE PLASTIC GASKET (10 bottle trade pack).
00-3174	TOP OVERHAUL GASKET SET.
00-3316	FULL OVERHAUL GASKET SET.
71-1863	ENGINE UNIT, LESS CARBURETTER AND EXHAUST SYSTEM (Trail).
71-2237	ENGINE UNIT, LESS CARBURETTER AND EXHAUST SYSTEM (Moto-Cross).
71-2234	ENGINE UNIT, LESS CARBURETTER AND EXHAUST SYSTEM (Street Scrambler).
71-1870	CRANKCASE COMPLETE WITH FIXED FITTINGS.
71-2228	OIL PUMP COMPLETE.
71-1675	FLYWHEEL AND CONNECTING ROD ASSEMBLY.
57-4302	CLUTCH ASSEMBLY COMPLETE.
83-2985	FRAME COMPLETE (Trail and Street Scrambler).
83-2984	FRAME COMPLETE (Moto-Cross).
97-4113	FRONT FORK COMPLETE (Trail and Street Scrambler).
97-4114	FRONT FORK COMPLETE (Moto-Cross).
37-3791	FRONT WHEEL LESS BRAKE DETAILS (Trail and Moto-Cross) 6" brake.
37-3735	FRONT WHEEL LESS BRAKE DETAILS (Street Scrambler) 8" brake.
37-3792	FRONT WHEEL WITH BRAKE DETAILS (Trail and Moto-Cross) 6" brake.
37-3793	FRONT HUB WITH SPINDLE AND BEARINGS (Trail and Moto-Cross) 6" brake.
37-3848	FRONT HUB WITH SPINDLE AND BEARINGS (Street Scrambler) 8" brake.
37-3958	REAR WHEEL LESS BRAKE DETAILS (Trail).
37-3959	REAR WHEEL LESS BRAKE DETAILS (Moto-Cross).
37-3957	REAR WHEEL LESS BRAKE DETAILS (Street Scrambler).
37-3780	REAR WHEEL WITH BRAKE DETAILS (Trail).
37-3960	REAR WHEEL WITH BRAKE DETAILS (Moto-Cross).
37-3781	REAR WHEEL WITH BRAKE DETAILS (Street Scrambler).
37-3908	REAR HUB WITH SPINDLE AND BEARING (Moto-Cross).
37-3907	REAR HUB WITH SPINDLE AND BEARINGS (Trail and Street Scrambler).
00-5220	TACHOMETER KIT (80 mm.).
19-2429	CARBURETTER COMPLETE (Moto-Cross).
19-2430	CARBURETTER COMPLETE (Trail and Street Scrambler).

PISTON CHART

PISTON COMPLETE

Model	Compression Ratio	Standard	$-\frac{1}{2}$ mm.	1 mm.
T SS H MC	10 : 1	71-1643	71-2148	71-2150

PISTON RINGS (STANDARD)

Model	COMPRESSION (2) Taper	SCRAPER Upper Segment	SCRAPER Lower Segment
T SS H MC	71-2152	71-2155	71-2167

PISTON RINGS ($+\frac{1}{2}$ mm.)

Model	COMPRESSION (2) Taper	SCRAPER Upper Segment	SCRAPER Lower Segment
T SS H MC	71-2153	71-2156	71-2168

PISTON RINGS (+ 1 mm.)

Model	COMPRESSION (2) Taper	SCRAPER Upper Segment	SCRAPER Lower Segment
T SS H MC	71-2154	71-2157	71-2169

CARBURETTER

Model	Spares No.	Makers No.	Main Jet	Throttle Slide	Needle Jet	Needle Position
T SS H	19-2430	R930/62	200	3½	·106	1
MC	19-2429	R932/18	250	3	·106	2

INDEX

	<i>Page</i>
ASSEMBLIES COMPLETE	5
Plate 1 CYLINDER HEAD — EXHAUST PIPE — SILENCER CLAMP	8 - 9
Plate 2 CYLINDER — CRANKSHAFT	10 - 11
Plate 3 CRANKCASE	12 - 15
Plate 4 OIL PUMP — SUMP — GEARBOX SPROCKET	16 - 17
Plate 5 GEAR CLUSTER	18 - 91
Plate 6 GEARCHANGE MECHANISM	20 - 21
Plate 7 KICKSTART — FOOTCHANGE	22 - 25
Plate 8 CLUTCH — PRIMARY COVER	26 - 27
Plate 9 FRAME — BATTERY CARRIER — TOOL TRAY — ENGINE SHIELD ..	28 - 31
Plate 10 SWINGING ARM — REAR SUSPENSION — CHAINGUARD	32 - 33
Plate 11 REAR BRAKE CONTROL — FOOTREST — SILENCER	34 - 35
Plate 12 AIR CLEANER — SIDECOVERS — OIL PIPES	36 - 37
Plate 13 FRONT FORKS	38 - 41
Plate 14 FRONT WHEEL (6" Brake)	42 - 43
Plate 15 FRONT WHEEL (8" Brake)	44 - 45
Plate 16 REAR WHEEL — CHAIN GUIDE	46 - 47
Plate 17 MUDGUARDS — HANDRAIL	48 - 49
Plate 18 PETROL TANK — TWINSEAT — CONTROLS	50 - 53
Plate 19 ELECTRICAL EQUIPMENT	54 - 59
Plate 20 TOOLS	60 - 61
Plate 21 CARBURETTER	62 - 63

Plate 1

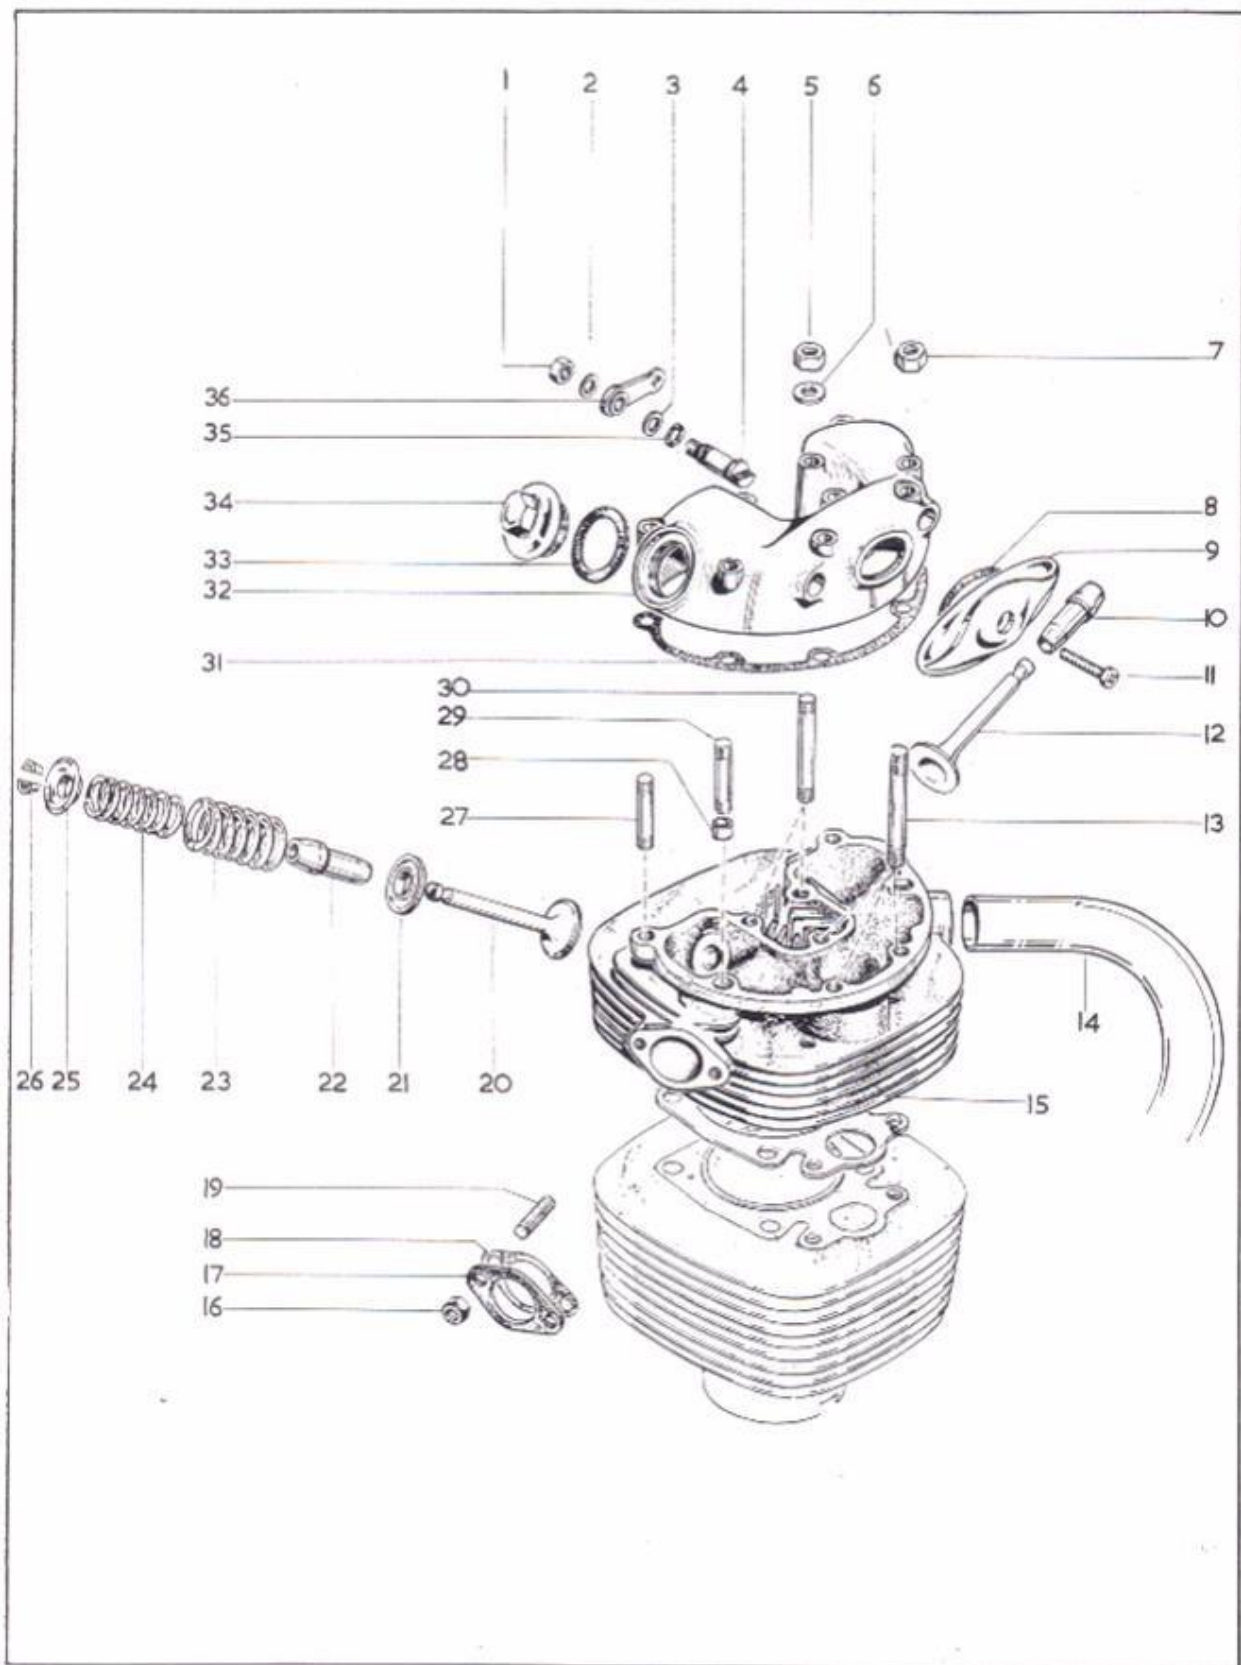


Plate 1

CYLINDER HEAD — EXHAUST PIPE — SILENCER CLAMP

Model	Plate Ref.	Spares Number	Description	Per Set
T SS H MC		00-3174	Decoke gasket set	1
T SS H MC		00-3316	Full overhaul gasket set	1
T SS H	1	02-0443	Nut — valve lifter ($\frac{1}{4}$ " B.S.C.)	1
T SS H	2	02-0525	Washer for nut — valve lifter ($\frac{1}{4}$ " $\times$ $\frac{1}{2}$ " $\times$ $\frac{3}{64}$ ")	1
T SS H	3	15-5155	Washer — valve lifter ($21/64$ " $\times$ $\frac{1}{2}$ " $\times$ $\frac{3}{64}$ ")	1
T SS H	4	40-0417	Exhaust valve lifter	1
T SS H MC	5	14-0302	Nut — rocker box ($\frac{5}{16}$ " UN.F.)	2
T SS H MC	6	60-2330	Washer — rocker box nut ($\frac{5}{16}$ " $\times$ $\frac{3}{8}$ " $\times$ $\frac{1}{16}$ ")	9
T SS H MC	7	14-1302	Locknut — rocker box ($\frac{5}{16}$ " UN.F.)	7
T SS H MC	8	71-1429	Gasket — rocker inspection cover	1
T SS H MC	9	40-0208	Rocker inspection cover	1
T SS H MC	10	71-1627	Exhaust valve guide	1
T SS H MC	11	40-0309	Screw — rocker inspection cover (2 B.A. $\times$ $1\frac{3}{8}$ ")	1
T SS H MC	12	71-1736	Exhaust valve	1
T SS H MC	13	14-1628*	Cylinder head stud ($\frac{5}{16}$ " UN.C./UN.F. $\times$ $3\frac{1}{4}$ ")	3
T SS H MC	14	71-2177	Exhaust pipe complete	1
T SS H MC	15	71-1732	Cylinder head with fixed fittings	1
T SS H MC	16	14-1302	Carburetter stud nut ($\frac{5}{16}$ " UN.F.)	2
T SS H MC	17	70-7821	Tufnol washer — carburetter joint	1
T SS H MC	18	71-1421	Carburetter joint gasket	1
T SS H MC	19	14-1620*	Carburetter stud ($\frac{5}{16}$ " UN.C./UN.F. $\times$ $1\frac{1}{2}$ ")	2
T SS H MC	20	71-1735	Inlet valve	1
T SS H MC	21	68-0931	Valve spring bottom cup	2
T SS H MC	22	71-1626	Inlet valve guide	1
T SS H MC	23	65-2494	Valve spring — outer	2
T SS H MC	24	65-2495	Valve spring — inner	2
T SS H MC	25	71-1165	Valve spring top collar	2
T SS H MC	26	71-1166	Valve spring collet	4
T SS H MC	27	14-1626	Cylinder head stud ($\frac{5}{16}$ " UN.F./UN.C. $\times$ $2\frac{3}{4}$ ")	2
T SS H MC	28	71-1989	Cylinder head dowel	2
T SS H MC	29	14-1627*	Cylinder head stud ($\frac{5}{16}$ " UN.C./UN.F. $\times$ 3 ")	2
T SS H MC	30	21-2092	Rocker box stud ($\frac{5}{16}$ " UN.C./UN.F. $\times$ $3\frac{1}{4}$ ")	2
T SS H MC	31	71-1623	Rocker box gasket	1
T SS H MC	32	71-1638	Rocker box	1
T SS H MC	33	40-0969	Washer — valve inspection cap	2
T SS H MC	34	40-0968	Valve inspection cap	2
T SS H	35	68-0289	"O" ring — valve lifter	1
T SS H	36	41-0176	Exhaust valve lifter lever	1
T SS H MC		75-2725†	Clamp — silencer to exhaust pipe	1
T SS H MC		75-2719†	"D" washer — clamp bolt	2
T SS H MC		14-0218†	Bolt — silencer clamp ($\frac{5}{16}$ " UN.F. $\times$ $1\frac{3}{8}$ ")	1
T SS H MC		14-1302†	Nut — silencer clamp bolt ($\frac{5}{16}$ " UN.F.)	1

*Special material: 13—EN16R, 19—EN16R, 29—EN15.

†Not illustrated.

Plate 2

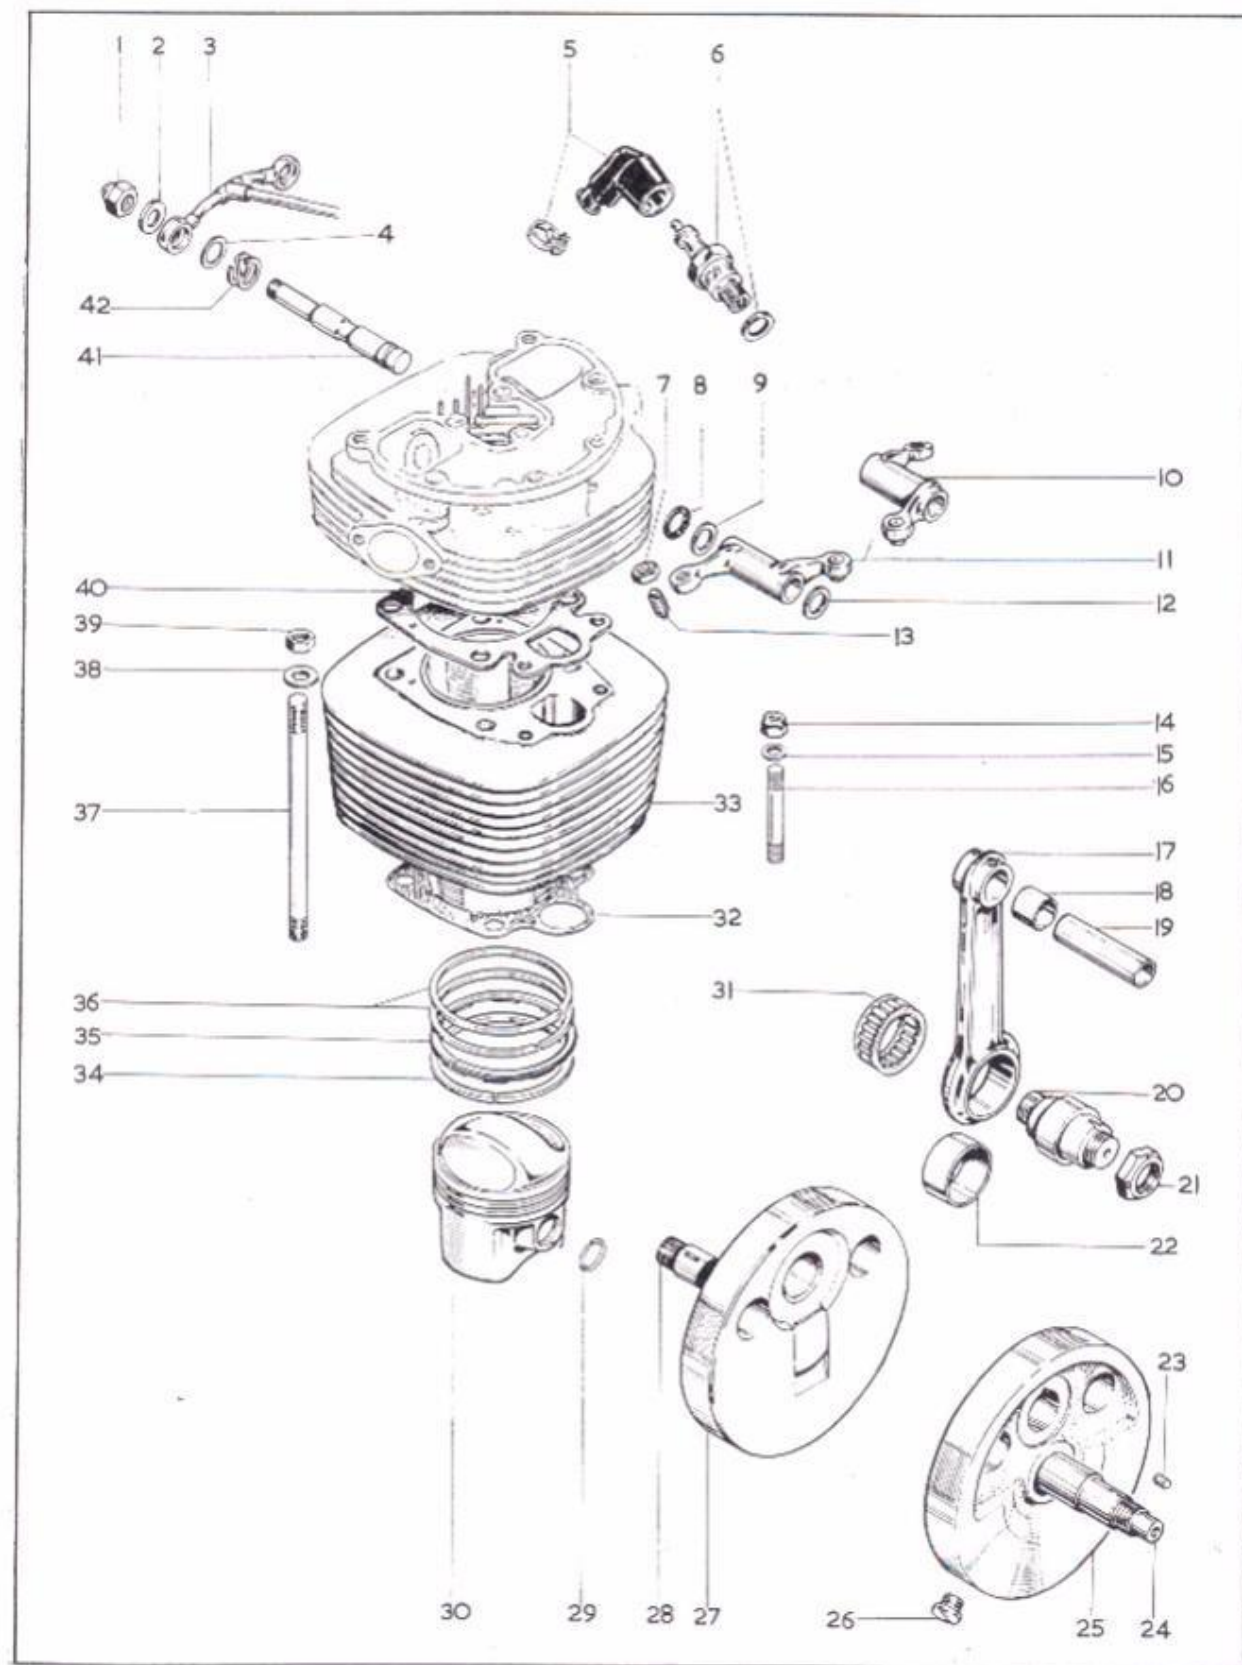


Plate 2

CYLINDER — CRANKSHAFT

Model	Plate Ref.	Spares Number	Description	Per Set
T SS H MC	1	40-0162	Nut — rocker spindle (domed $\frac{3}{8}$ " B.S.C.)	2
T SS H MC	2	40-0159	Copper washer — oil feed union	2
T SS H MC	3	41-0307	Rocker oil feed pipe	1
T SS H MC	4	40-0159	Copper washer — oil feed union	2
T SS H MC	5	19-7625	Spark plug cover — Champion WC.548	1
T SS H	6	19-7616	Spark plug — Champion N.4	1
MC	6	19-7606	Spark plug — Champion W.3	1
T SS H MC	7	24-0563	Nut — rocker adjusting screw ($\frac{5}{16}$ " B.S.C.)	2
T SS H MC	8	40-0148	"O" ring — rocker spindle	2
T SS H MC	9	40-0157	Thrust washer — rocker spindle	2
T SS H MC	10	40-0296	Exhaust rocker complete	1
T SS H MC	11	40-0292	Inlet rocker complete	1
T SS H MC	12	40-0158	Thrust washer — rocker spindle	2
T SS H MC	13	68-0155*	Rocker adjusting screw ($\frac{1}{16}$ " B.S.C.)	2
T SS H MC	14	14-0302	Nut — cylinder stud ($\frac{5}{16}$ " UN.F.)	2
T SS H MC	15	76-0012	Washer — cylinder stud ($21/64$ " $\times$ $\frac{3}{16}$ " $\times$ $\frac{3}{32}$ ")	2
T SS H MC	16	21-2034*	Cylinder stud ($\frac{5}{16}$ " UN.C./UN.F. $\times$ $3\frac{1}{8}$ ")	2
T SS H MC	17	71-1635	Connecting rod complete	1
T SS H MC	18	66-0492	Small-end bush — connecting rod	1
T SS H MC	19	66-0953	Gudgeon pin	1
T SS H MC	20	71-1616	Crankpin	1
T SS H MC	21	41-0588	Crankpin nut	2
T SS H MC	22	71-1199	Big-end bush — connecting rod	1
T SS H MC	23	41-0551	Peg — crankpin location	1
T SS H MC	24	71-1681	Engine shaft — right	1
T SS H MC	25	71-1677	Flywheel complete — right	1
T SS H MC	26	71-1678	Flywheel plug	1
T SS H MC	27	71-1676	Flywheel complete — left	1
T SS H MC	28	71-1632	Engine shaft — left	2
T SS H MC	29	66-0954	Gudgeon pin circlip	2
T SS H MC	30	71-1643	Piston complete	1
T SS H MC	31	70-7850	Needle roller — big-end bearing	1
T SS H MC	32	71-1624	Cylinder base washer	1
T SS H MC	33	71-1219	Cylinder barrel	1
T SS H MC	34	71-2167 [‡]	Piston ring — scraper, lower segment (standard)	1
T SS H MC	35	71-2155 [‡]	Piston ring — scraper, upper segment (standard)	1
T SS H MC	36	71-2152 [‡]	Piston ring — taper (standard)	2
T SS H MC	37	21-2033	Stud — cylinder holding	4
T SS H MC	38	41-0639	Washer — cylinder barrel stud ($\frac{7}{16}$ " $\times$ $25/32$ " $\times$ $\frac{1}{8}$ ")	4
T SS H MC	39	14-0304	Nut — cylinder barrel stud ($\frac{7}{16}$ " UN.F.)	4
T SS H MC	40	71-1625	Cylinder head gasket	1
T SS H MC	41	40-0294	Rocker spindle — inlet and exhaust	2
T SS H MC	42	40-0156	Spring washer — rocker spindle	2
T SS H MC		71-1675	Flywheel and connecting rod assembly	1
T SS H MC		71-2586	Connecting rod and crankpin assembly	1

*Special material: 13—EN9. 16—EN15.

[‡]See page 6 for piston details.


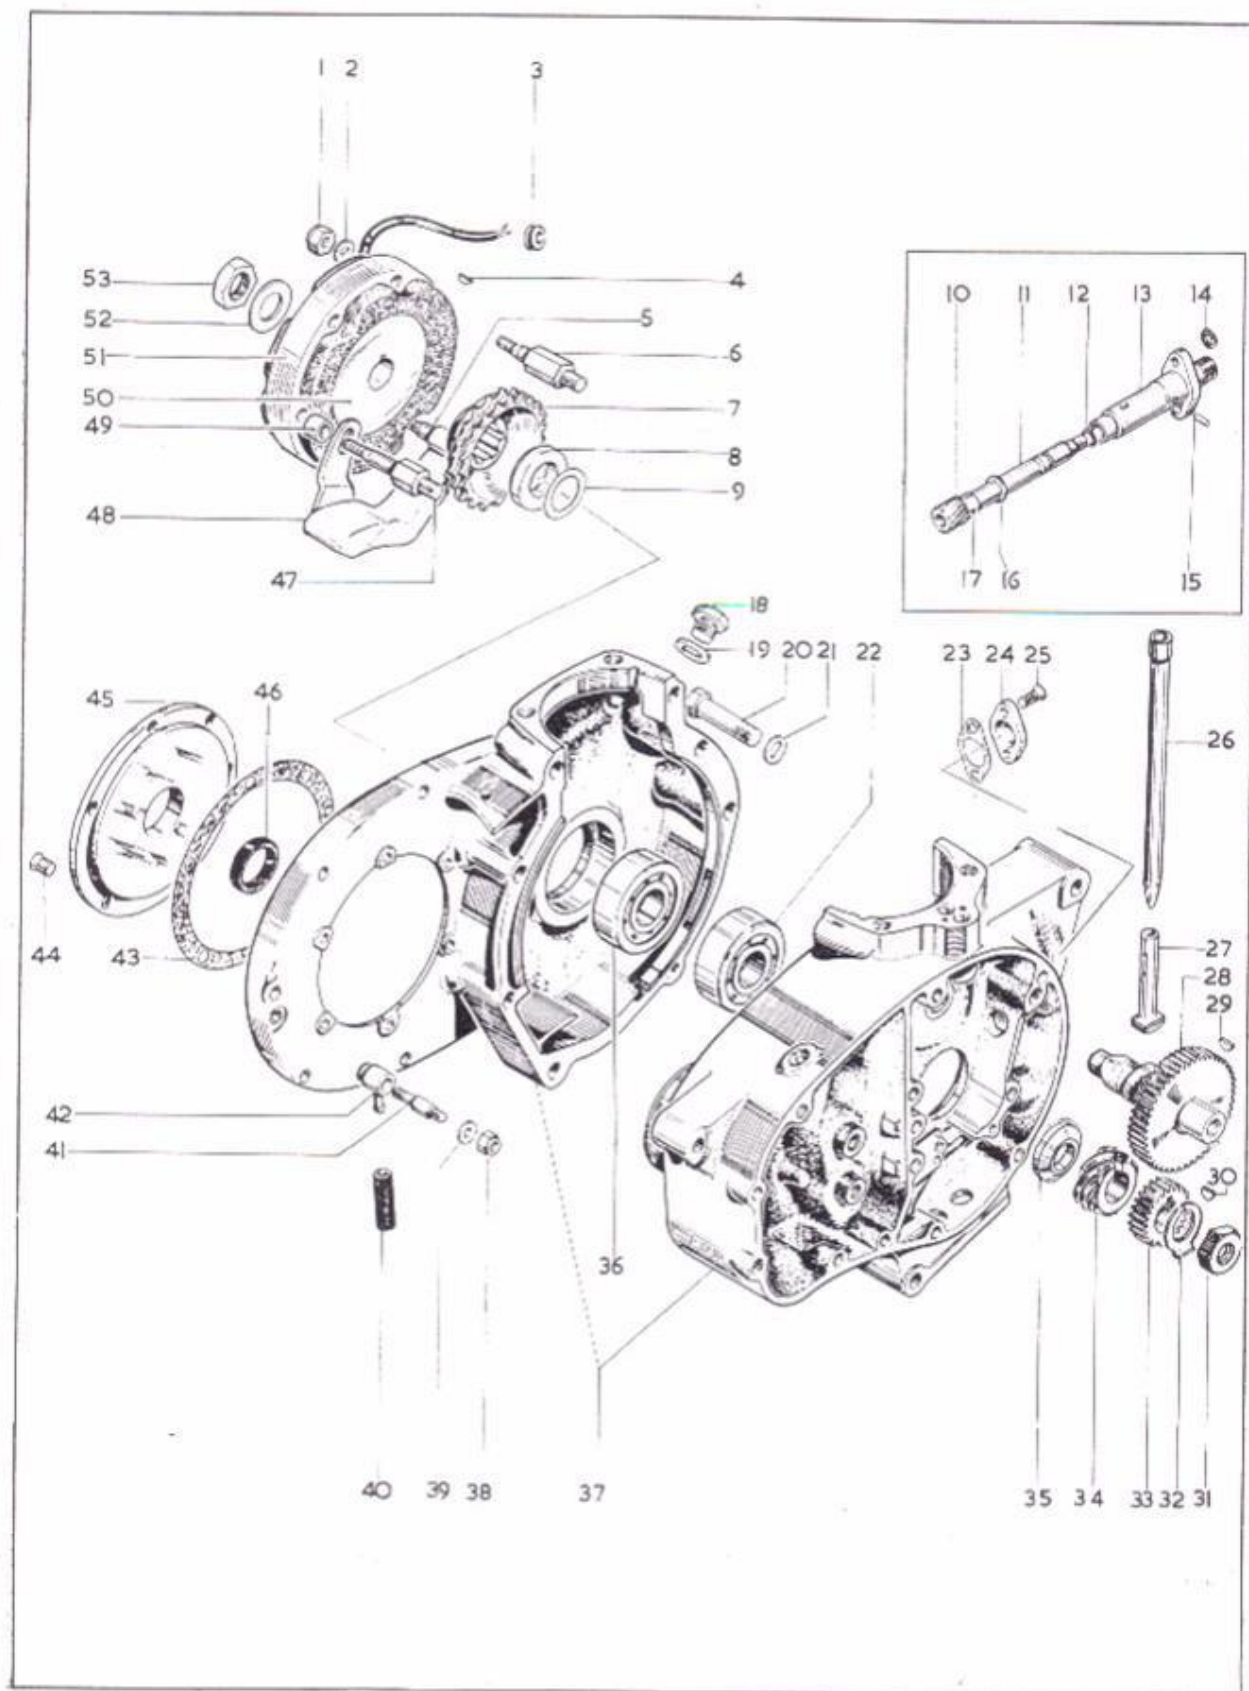


Plate 3

CRANKCASE

Model	Plate Ref.	Spares Number	Description	Per Set
T SS H MC	1	14-1901	Nut — stator fixing ($\frac{1}{4}$ " UN.F.)	3
T SS H MC	2	02-0525	Washer — stator fixing ($\frac{1}{4}$ " $\times$ $\frac{1}{2}$ " $\times$.048")	3
T SS H MC	3	40-0705	Grommet — generator lead	1
T SS H MC	4	41-0673	Key — rotor to shaft	1
T SS H MC	5	21-1896*	Bottom stud — stator fixing ($\frac{1}{4}$ " UN.F. $\times$ $\frac{5}{16}$ " UN.C. $\times$ $2\frac{9}{16}$ ")	1
T SS H MC	6	21-1895*	Front stud — stator fixing ($\frac{1}{4}$ " UN.F. $\times$ $\frac{5}{16}$ " UN.C. $\times$ $2\frac{19}{32}$ ")	1
T SS H MC	7	71-1634	Engine sprocket — 28 teeth	1
T SS H MC	8	40-0327	Engine sprocket spacer (.294—.297")	1
T SS H MC	9	71-1630	Bearing shims (.015") — engine sprocket	as reqd.
T SS H MC	9	71-1629	Bearing shims (.030") — engine sprocket	as reqd.
T SS H MC		70-9428 [‡]	Tachometer drive assembly	1
T SS H MC	10	70-9382	Tachometer drive shaft gear	1
T SS H MC	11	70-9381	Tachometer drive shaft	1
T SS H MC	12	70-9430	"O" ring — drive shaft	1
T SS H MC	13	70-9517	Drive shaft body	1
T SS H MC	14	24-0036	Sealing washer — drive shaft	1
T SS H MC	15	70-9431	Locating pin — drive shaft	1
T SS H MC	16	70-9383	Thrust washer — drive shaft	1
T SS H MC	17	70-9429	Retaining pin — drive gear	1
T SS H MC	18	21-1872	Plug — timing aperture	1
T SS H MC	19	70-8896	Washer — timing plug	1
T SS H MC	20	14-6219	Bolt — crankcase ($\frac{5}{16}$ " UN.C. $\times$ $1\frac{1}{2}$ ")	3
T SS H MC	21	02-0923	Washer — crankcase bolt ($\frac{5}{16}$ " $\times$ $\frac{3}{4}$ " $\times$ $\frac{1}{16}$ ")	3
T SS H MC	22	24-0732	Bearing — ball, right (Hoffmann 325)	1
T SS H MC	23	71-1422	Gasket — tachometer drive	1
T SS H MC	24	70-9384	Plate — tachometer drive cover	1
T SS H MC	25	40-0242*	Screw — tachometer drive (2 B.A. $\times$ $27/64$ " countersunk)	2
T SS H MC	26	71-1620	Push rod — inlet and exhaust	2

[‡]See page 5 for tachometer kit complete

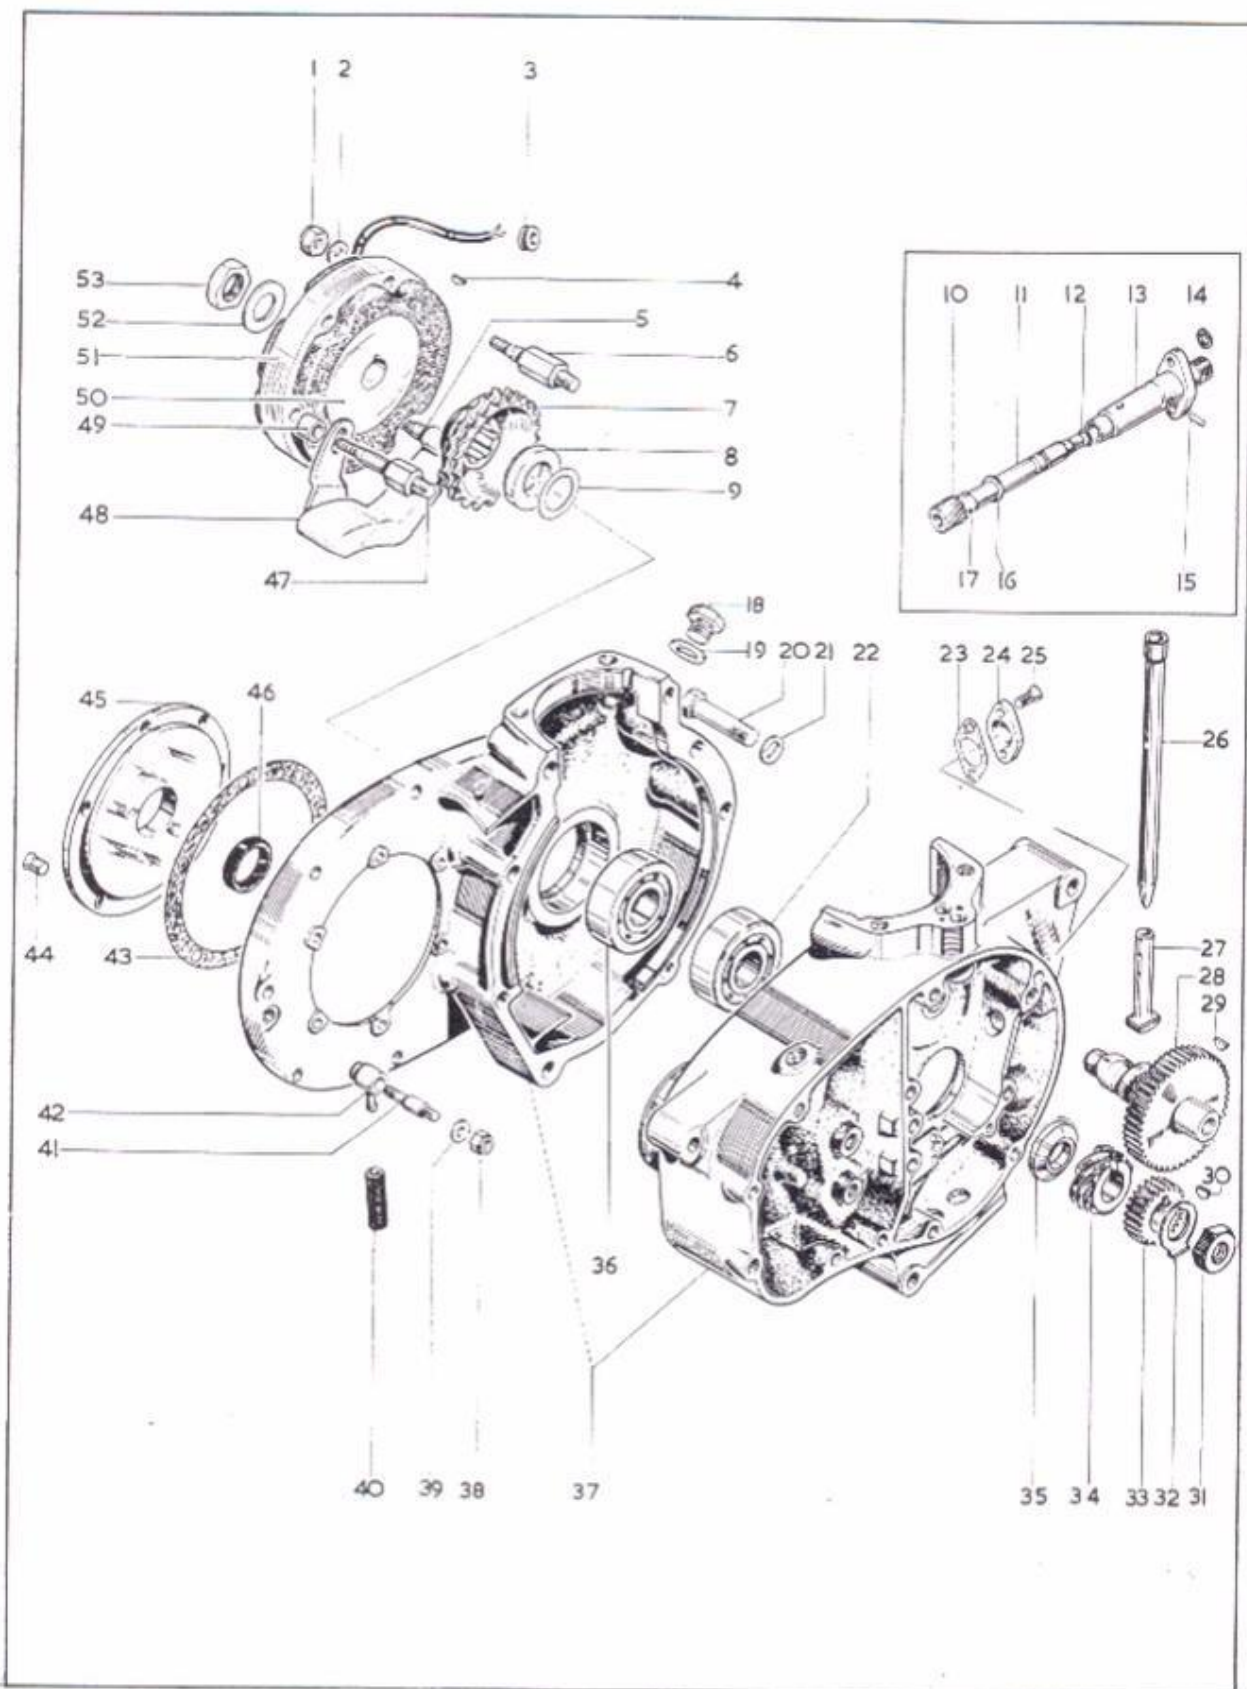

CRANKCASE

<i>Model</i>	<i>Plate Ref.</i>	<i>Spares Number</i>	<i>Description</i>	<i>Per Set</i>
T SS H MC	27	71-2513	Tappet — inlet and exhaust	2
T SS H MC	28	71-1680	Camshaft complete	1
T SS H MC	29	71-1679	Key — camshaft pinion	1
T SS H MC	30	41-0560	Key — crankshaft pinion	1
T SS H MC	31	21-2039	Nut — crankshaft ($\frac{3}{8}$ " UN.F.)	1
T SS H MC	32	40-0455	Lockwasher — crankshaft nut	1
T SS H MC	33	41-0569	Pinion — crankshaft	1
T SS H MC	34	41-0567	Oil pump drive — crankshaft	1
T SS H MC	35	41-0565	Distance piece — oil pump drive	1
T SS H MC	36	24-0724	Bearing — roller, left, inner (Hoffmann R.325L)	1
T SS H MC	36	65-5883	Bearing — ball, left, outer (Hoffmann LS.9)	1
T SS H MC		71-2546†	Circlip — crankcase bearing	1
T SS H MC		71-1631†	Spacer — crankcase bearing	1
T SS H MC	37	71-1870	Crankcase with fixed fittings	1
T SS H MC	38	14-1901	Nut — chain oiler stud ($\frac{1}{4}$ " UN.F.)	1
T SS H MC	39	02-0525	Washer — chain oiler stud ($\frac{1}{4}$ " $\times$ $\frac{1}{2}$ " $\times$ $\frac{3}{64}$ ")	1
T SS H MC	40	40-0375	Oil pipe — rear chain oiler	1
T SS H MC	41	21-1985*	Stud — rear chain oiler ($\frac{1}{4}$ " UN.C./UN.F. $\times$ $1\frac{1}{8}$ ")	1
T SS H MC	42	68-0383	Rear chain oiler	1
T SS H MC	43	71-1419	Gasket — primary case back	1
T SS H MC	44	40-0246	Screw — primary case back (2 B.A. $\times$ $\frac{5}{16}$ ")	6
T SS H MC	45	70-3789	Cover plate — primary case back	1
T SS H MC	46	40-0243	Oil seal — primary case back	1
T SS H MC	47	21-1894*	Rear stud — stator fixing ($\frac{1}{4}$ " UN.F. $\times$ $\frac{5}{16}$ " UN.C. $\times$ $2\frac{11}{32}$ ")	1
T SS H MC	48	41-0143	Chain tensioner — primary	1
T SS H MC	49	41-0146	Distance piece — chain tensioner	1
T SS H MC	50	19-8019	Generator rotor (Lucas 54213901)	1
T SS H	51	19-1262	Generator stator (Lucas 47205)	1
MC	51	19-1264	Generator stator (Lucas 47226)	1
T SS H MC	52	71-1731	Washer — rotor fixing	1
T SS H MC	53	21-2066	Nut — rotor fixing ($\frac{3}{8}$ " UN.F.)	1

*Special material: 5—EN8. 6—EN14B. 25—EN8R. 41—EN14B. 47—EN14B.

†Not illustrated.


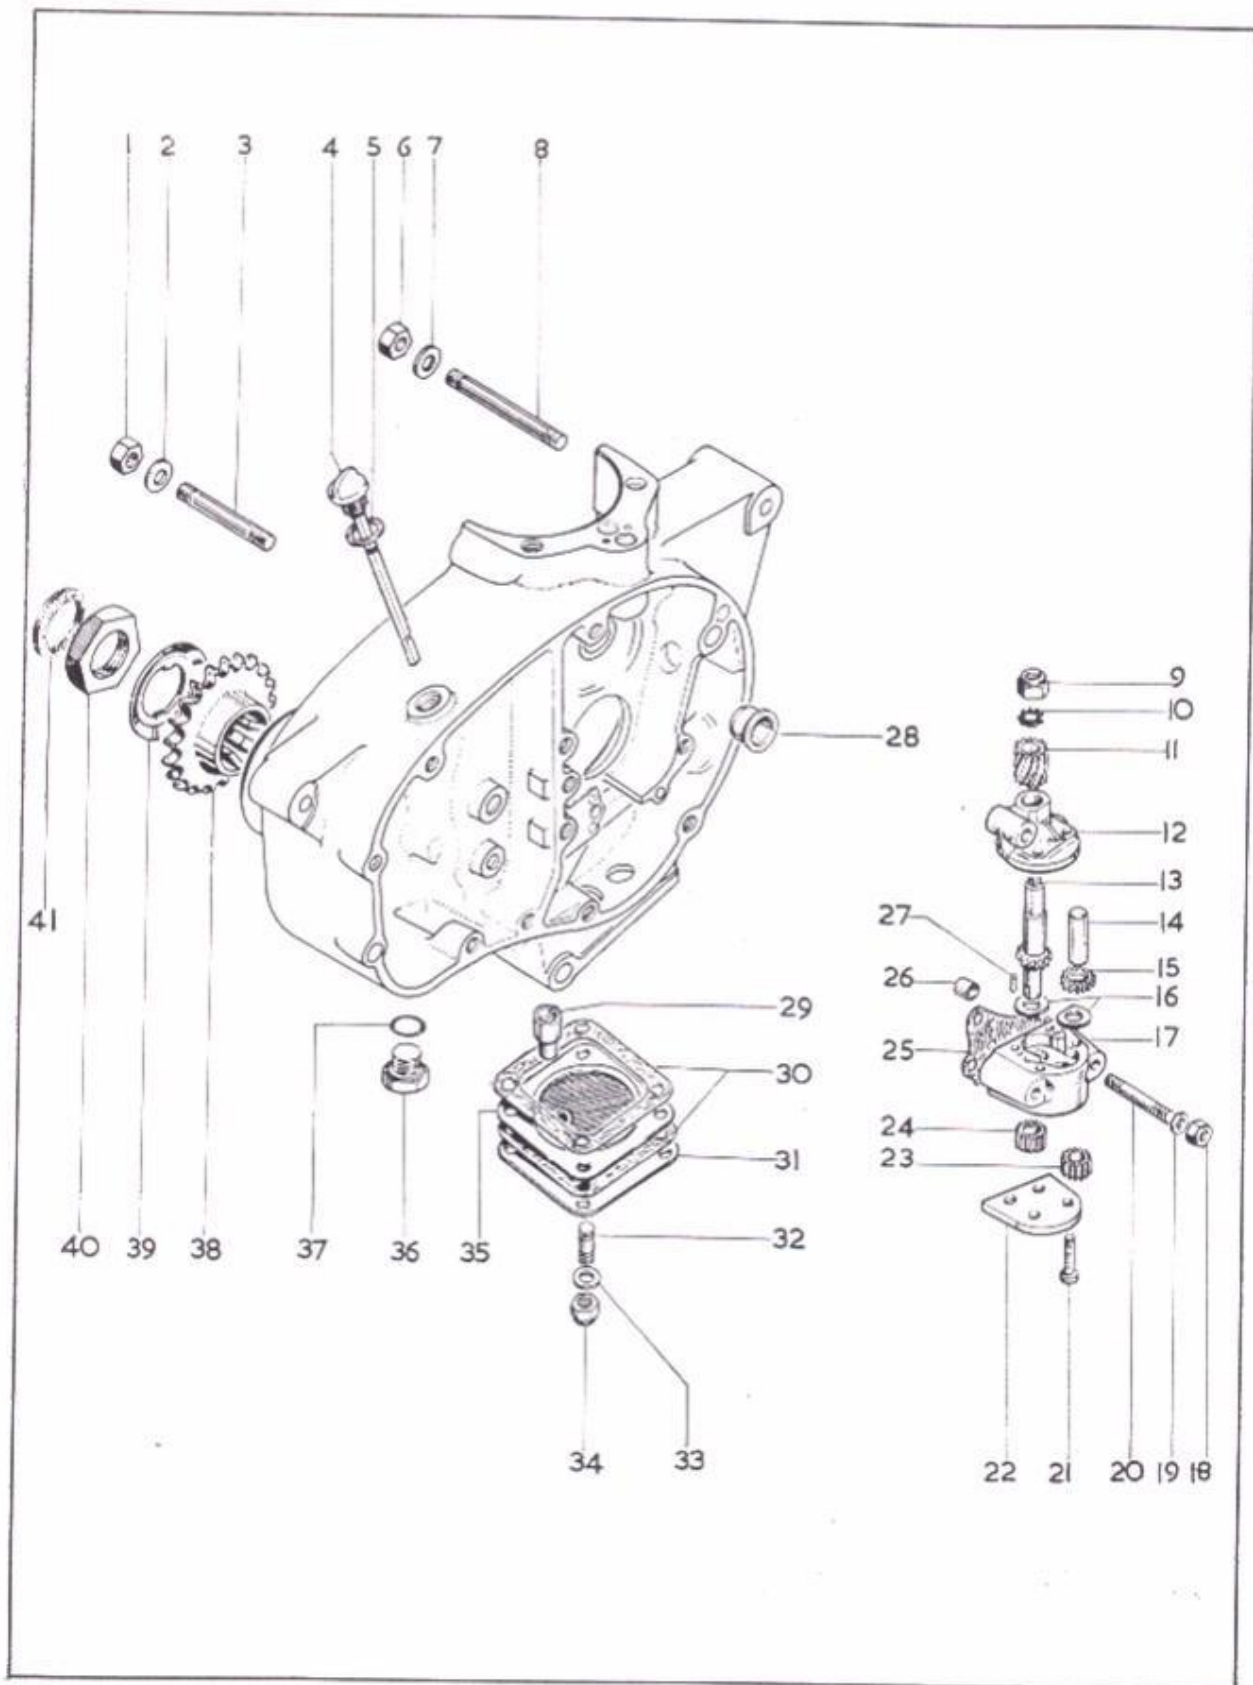


Plate 4

OIL PUMP — SUMP — GEARBOX SPROCKET


Model	Plate Ref.	Spares Number	Description	Per Set
T SS H MC	1	14-0302	Nut — crankcase stud ($\frac{5}{16}$ " UN.F.)	2
T SS H MC	2	02-0923	Washer — crankcase stud ($\frac{5}{16}$ " $\times$ $\frac{3}{8}$ " $\times$ $\frac{1}{16}$ ")	2
T SS H MC	3	21-1890	Stud — crankcase, rear ($\frac{5}{16}$ " UN.F./UN.C. $\times$ $2\frac{1}{16}$ ")	2
T SS H MC	4	40-1033	Gearbox dipstick	1
T SS H MC	5	57-0948	Dipstick washer	1
T SS H MC	6	14-0302	Nut — crankcase stud ($\frac{5}{16}$ " UN.F.)	2
T SS H MC	7	02-0923	Washer for nut — crankcase stud ($\frac{5}{16}$ " $\times$ $\frac{3}{8}$ " $\times$ $\frac{1}{16}$ ")	2
T SS H MC	8	21-2042	Crankcase stud — top	2
T SS H MC	9	14-1301	Locknut — oil pump spindle ($\frac{1}{4}$ " UN.F.)	1
T SS H MC	10	29-0541	Lockwasher — oil pump spindle	1
T SS H MC	11	41-0603	Oil pump driving gear	1
T SS H MC	12	71-2119	Oil pump spindle housing	1
T SS H MC	13	71-2123	Oil pump driving spindle	1
T SS H MC	14	71-1147	Oil pump driven spindle	1
T SS H MC	15	71-2121	Oil pump feed gear — driven	1
T SS H MC	16	41-0714	Oil pump thrust washer	2
T SS H MC		71-2228	Oil pump complete	1
T SS H MC	17	71-2125	Oil pump body	1
T SS H MC	18	14-1901	Nut — oil pump mounting ($\frac{1}{4}$ " UN.F.)	3
T SS H MC	19	68-0938	Washer — oil pump mounting ($17/64$ " $\times$ $\frac{1}{2}$ " $\times$ $\frac{1}{16}$ ")	3
T SS H MC	20	21-1893*	Stud — oil pump mounting ($\frac{1}{4}$ " UN.F./UN.C. $\times$ $2\frac{3}{16}$ ")	2
T SS H MC	20	14-1606	Stud — oil pump mounting ($\frac{1}{4}$ " UN.F./UN.C. $\times$ $1\frac{3}{4}$ ")	1
T SS H MC	21	41-0609	Screw — oil pump cover plate ($\frac{3}{16}$ " B.S.C. $\times$ $1\frac{5}{16}$ ")	4
T SS H MC	22	67-1391	Oil pump cover plate	1
T SS H MC	23	71-2124	Oil pump scavenge gear — driven	1
T SS H MC	24	71-2122	Oil pump scavenge gear — driving	1
T SS H MC	25	71-2115	Oil pump gasket	1
T SS H MC	26	41-0706	Dowel — oil pump	1
T SS H MC	27	71-1148	Dowel — oil pump body	2
T SS H MC	28	70-8315	Camshaft bush	1
T SS H MC	29	41-0624	Scavenge valve complete	1
T SS H MC	30	71-1424	Scavenge cover gasket	2
T SS H MC	31	67-1286	Sump plate	1
T SS H MC	32	14-1401	Stud — scavenge cover ($\frac{1}{4}$ " UN.F./UN.C. $\times$ 1")	4
T SS H MC	33	02-0525	Washer — scavenge cover ($\frac{1}{4}$ " $\times$ $\frac{1}{2}$ " $\times$ $3/64$ ")	4
T SS H MC	34	14-1901	Locknut — scavenge cover ($\frac{1}{4}$ " UN.F.)	4
T SS H MC	35	70-9979	Crankcase filter assembly	1
T SS H MC	36	21-1857	Drain plug — gearbox ($\frac{1}{2}$ " UN.C.)	1
T SS H MC	37	68-3168	"O" ring — drain plug	1
T	38	41-3094	Gearbox sprocket — 15 teeth	1
SS, H	38	41-3095	Gearbox sprocket — 16 teeth	1
MC	38	57-4306	Gearbox sprocket — 14 teeth	1
T SS H MC	39	40-3121	Lockwasher — gearbox sprocket	1
T SS H MC	40	40-3051*	Nut — gearbox sprocket ($1\frac{3}{16}$ " $\times$ 20 l.p.i., WHITWORTH)	1
T SS H MC	41	90-6074	Felt washer — gearbox sprocket	1

*Special material: 20—EN14B, 40—EN8.

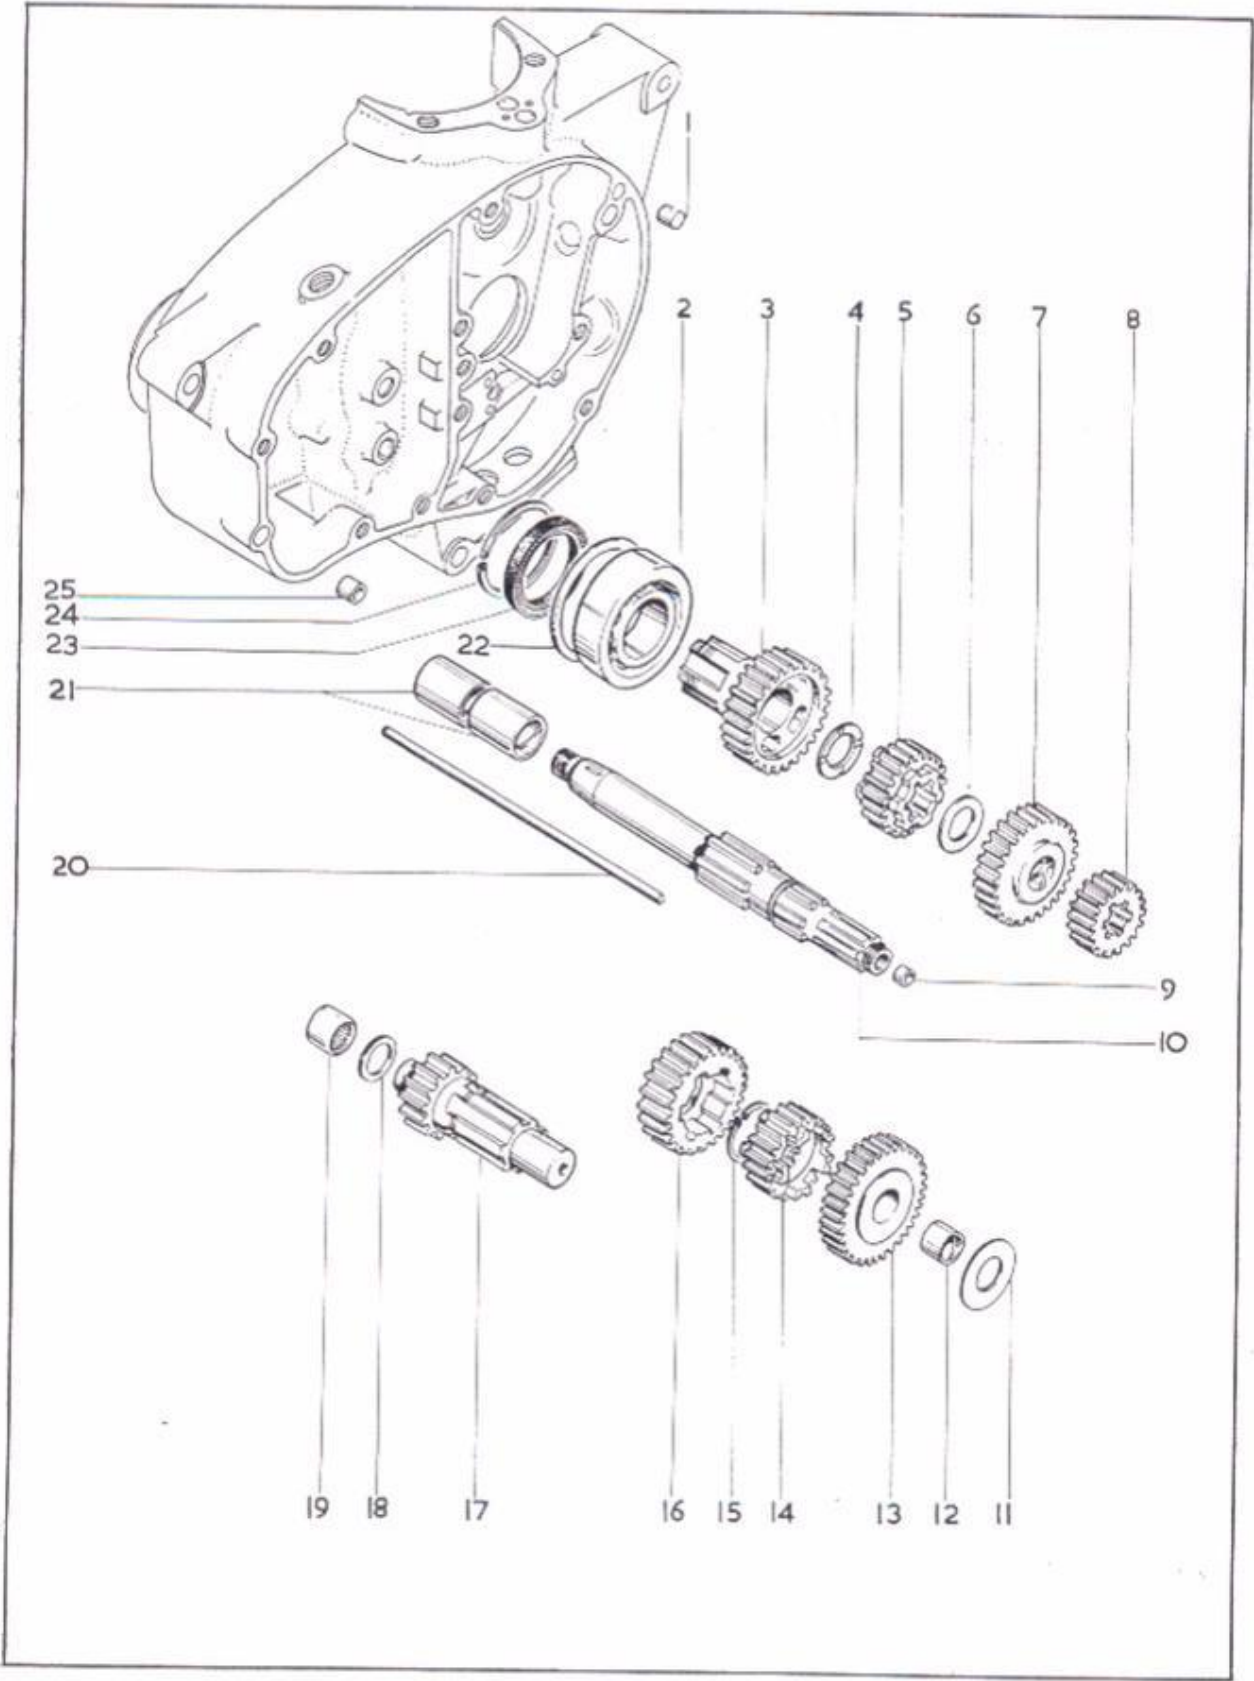

GEAR CLUSTER


Model	Plate Ref.	Spares Number	Description	Per Set
T SS H MC	1	40-0394	Dowel — inner cover to crankcase	2
T SS H MC	2	29-3857	Mainshaft bearing (Hoffmann 130)	1
T SS H MC	3	57-3872	Pinion — mainshaft top gear (22 teeth)	1
T SS H MC	4	40-3020	Spacer (.093—.094")	as reqd.
T SS H MC	4	40-3126	Spacer (.098—.099")	as reqd.
T SS H MC	4	40-3127	Spacer (.103—.104")	as reqd.
T SS H MC	5	57-3876	Pinion — layshaft second gear (21 teeth)	1
T SS H MC	6	40-3019	Spacer (.075—.076")	as reqd.
T SS H MC	6	40-3119	Spacer (.070—.071")	as reqd.
T SS H MC	6	40-3120	Spacer (.080—.081")	as reqd.
T SS H MC	7	41-3063	Pinion — mainshaft third gear (24 teeth)	1
T SS H	8	41-3089	Pinion — mainshaft first gear (16 teeth)	1
MC	8	41-3065	Pinion — mainshaft first gear (18 teeth)	1
T SS H MC	9	40-3007	Mainshaft bush — push rod	1
T SS H MC	10	57-4344	Mainshaft with bush	1
T SS H MC	11	40-3258	Layshaft shim	1
T SS H MC	12	40-3262	Bush — layshaft first gear	1
T SS H	13	57-3874	Pinion — layshaft first gear (27 teeth)	1
MC	13	41-3073	Pinion — layshaft first gear (25 teeth)	1
T SS H MC	14	57-3877	Pinion — layshaft third gear (19 teeth)	1
T SS H MC	15	41-3078	Layshaft circlip	1
T SS H MC	16	41-3070	Pinion — layshaft second gear (22 teeth)	1
T SS H MC	17	41-3068	Layshaft with top gear (14 teeth)	1
T SS H MC	18	41-3074	Thrust washer (.083—.085")	as reqd.
T SS H MC	18	41-3072	Thrust washer (.078—.080")	as reqd.
T SS H MC	19	40-3292	Layshaft bearing (Torrington B.108)	1
T SS H MC	20	40-3265	Clutch push rod	1
T SS H MC	21	41-3045	Bush — mainshaft top gear	2
T SS H MC	22	71-1271	Shield — gearbox main bearing	1
T SS H MC	23	41-3054	Mainshaft oil seal	1
T SS H MC	24	70-6026	Circlip — mainshaft oil seal	1
T SS H MC	25	71-2547	Dowel — crankcase inner cover	2

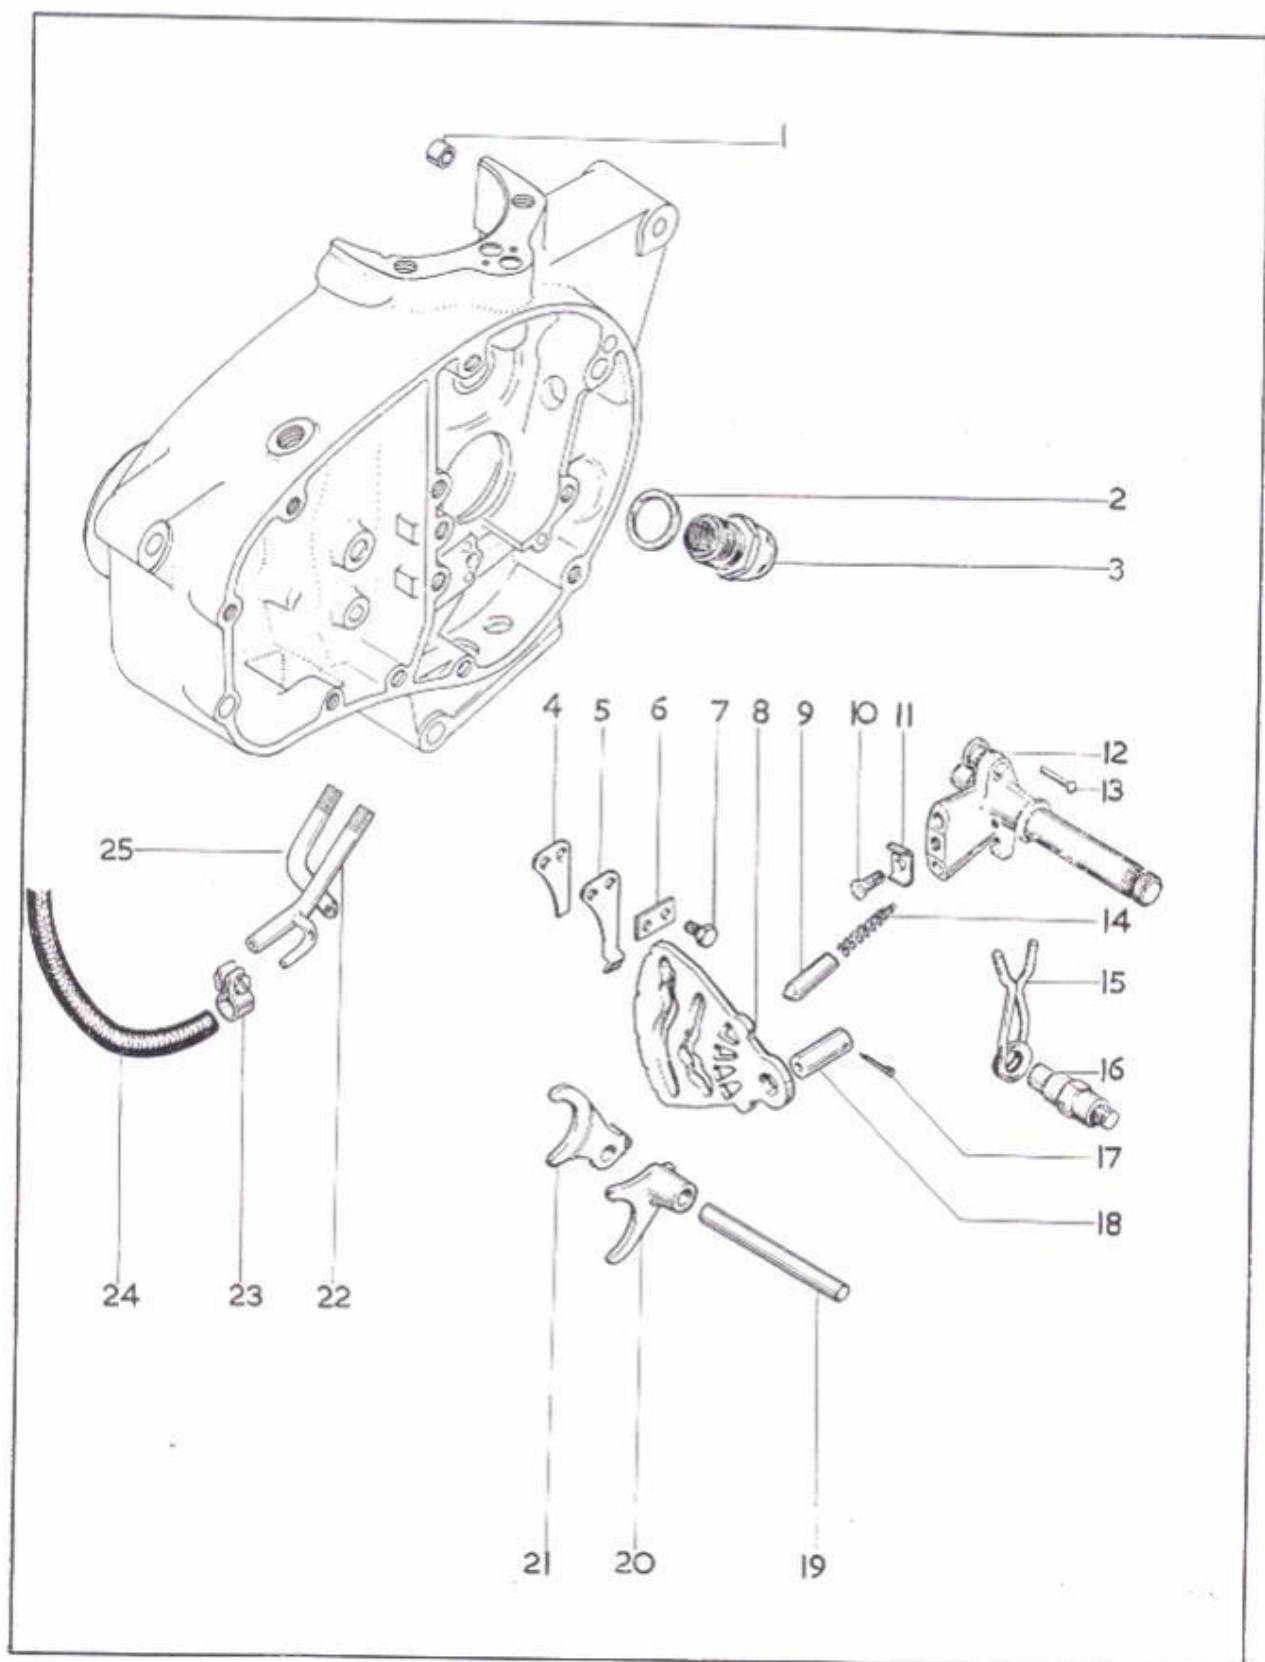

GEARCHANGE MECHANISM

<i>Model</i>	<i>Plate Ref.</i>	<i>Spares Number</i>	<i>Description</i>	<i>Per Set</i>
T SS H MC	1	67-1236	Crankcase dowel	1
T SS H MC	2	71-2211	Washer — pressure release valve	1
T SS H MC	3	71-2370	Pressure release valve assembly	1
T SS H MC	4	40-3043	Spring plate	1
T SS H MC	5	40-3042	Cam plate spring	1
T SS H MC	6	40-3045	Lock plate — cam plate spring	1
T SS H MC	7	40-3044	Screw — cam plate spring (2 B.A. $\times \frac{3}{8}$ ")	2
T SS H MC	8	57-3850	Cam plate — gearchange	1
T SS H MC	9	40-3193	Plunger — gearchange quadrant	2
T SS H MC	10	40-3323	Screw — plunger retaining plate (5 B.A. $\times \frac{5}{16}$ ")	1
T SS H MC	11	40-3194	Retaining plate — quadrant plungers	1
T SS H MC	12	40-3321	Gearchange quadrant complete	1
T SS H MC	13	40-3059	Rivet — plunger spring	2
T SS H MC	14	40-3155	Plunger spring	2
T SS H MC	15	40-3061	Gearchange return spring	1
T SS H MC	16	57-3763	Anchor bolt — return spring	1
T SS H MC	17	60-2724	Split pin — cam plate spindle ($\frac{3}{32}$ " $\times$ 1")	1
T SS H MC	18	40-3291	Cam plate spindle	1
T SS H MC	19	40-3032	Selector fork spindle	1
T SS H MC	20	40-3033	Layshaft selector fork	1
T SS H MC	21	57-3854	Mainshaft selector fork	1
T SS H MC	22	71-2240	Oil return pipe	1
T SS H MC	23	62-0263	Clamp — rocker feed pipe	1
T SS H MC	24	40-1037	Rocker oil feed pipe	1
T SS H MC	25	71-2243	Oil feed pipe	1
T SS H MC		14-0302†	Nut — oil feed and return pipes ($\frac{5}{16}$ " UN.F.)	2


†Not illustrated.

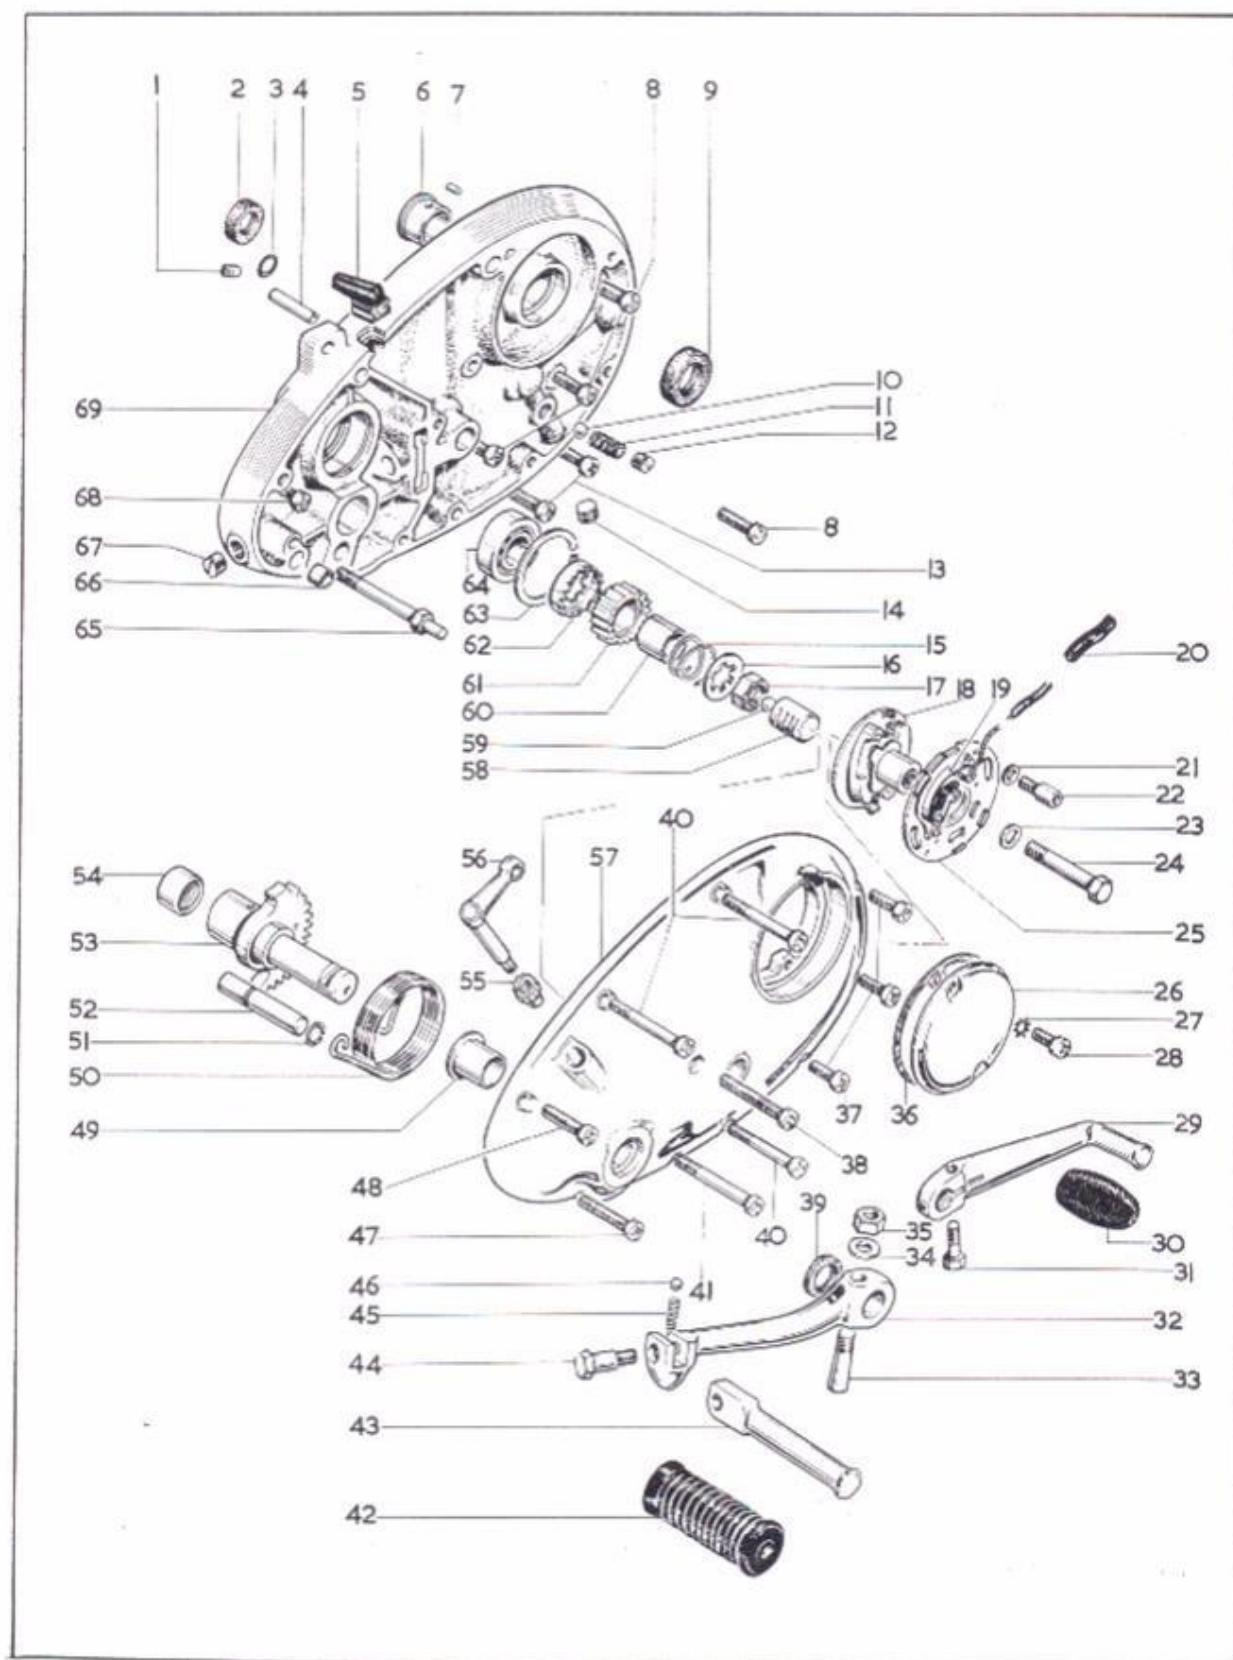

KICKSTART — FOOTCHANGE

Model	Plate Ref.	Spares Number	Description	Per Set
T SS H MC	1	53-3049	Plug — mainshaft oil feed	1
T SS H MC	2	40-0977	Oil seal — crankshaft	1
T SS H MC		40-0862†	Circlip — crankshaft oil seal	1
T SS H MC	3	68-0289	"O" ring — inner cover	1
T SS H MC	4	75-0257	Breather pipe — inner cover	1
T SS H MC	5	41-0715	Grommet — contact breaker cable	1
T SS H MC	6	40-0222	Camshaft bush	1
T SS H MC	7	40-0028	Camshaft bush peg	1
T SS H MC	8	14-6610	Screw — inner cover to crankcase ($\frac{1}{4}$ " UN.C. $\times$ $1\frac{1}{2}$ ")	4
T SS H MC	9	40-0679	Camshaft oil seal	1
T SS H MC	10	60-2364	Ball — non-return valve ($\frac{1}{2}$ ")	1
T SS H MC	11	40-0385	Spring — non-return valve	1
T SS H MC	12	21-2044	Plug — non-return valve	1
T SS H MC	13	14-6606	Bottom screw — inner cover ($\frac{1}{4}$ " UN.C. $\times$ $\frac{3}{4}$ ")	2
T SS H MC	14	70-9526	Sealing plug	2
T SS H MC	15	40-3273	Spring — kickstart ratchet	1
T SS H MC	16	57-4343	Mainshaft lockwasher	1
T SS H MC	17	76-0271	Mainshaft nut	1
T SS H MC	18	19-1853	Auto-advance unit (Lucas 54419653)	1
T SS H MC	18	19-1906	Auto-advance unit (Lucas 54419652)	1
T SS H MC	19	19-1849	Contact set (Lucas 54419827)	1
T SS H MC	20	40-0723	Contact breaker lead sleeve	1
T SS H MC	21	40-0682	Washer — contact breaker plate ($\frac{3}{16}$ " $\times$ $\frac{3}{8}$ " $\times$ $\frac{1}{16}$ ")	2
T SS H MC	22	40-0683	Pillar bolt — contact breaker plate	2
T SS H MC	23	68-0331	Washer — auto-advance unit	1
T SS H MC	24	14-0208	Bolt — auto-advance unit ($\frac{1}{4}$ " UN.F. $\times$ $2\frac{1}{4}$ ")	1
T SS H MC	25	19-1852	Contact breaker plate assembly (Lucas 54419645)	1
T SS H MC	26	70-8737	Contact breaker cover	1
T SS H MC	27	29-3319	Lockwasher — cover screw	2
T SS H MC	28	70-7354	Screw — contact breaker cover (2 B.A. $\times$ $1\frac{1}{2}$ ")	2
T SS H MC	29	40-3073	Gearchange lever	1
T SS H MC	30	89-3208	Rubber — gearchange pedal	1
T SS H MC	31	42-6554	Bolt — gearchange pedal ($\frac{1}{4}$ " B.S.C. $\times$ $\frac{3}{4}$ ")	1
T SS H MC	32	57-2764	Kickstart lever complete	1
T SS H MC	32	57-2652	Kickstart lever crank	1
T SS H MC	33	02-2579	Cotter — kickstart lever	1
T SS H MC	34	02-2580	Washer — kickstart lever cotter ($\frac{3}{32}$ " $\times$ $\frac{1}{2}$ " $\times$ $\frac{1}{16}$ ")	1
T SS H MC	35	02-2578	Nut — kickstart lever cotter ($\frac{1}{4}$ " B.S.C.)	1

†Not illustrated.

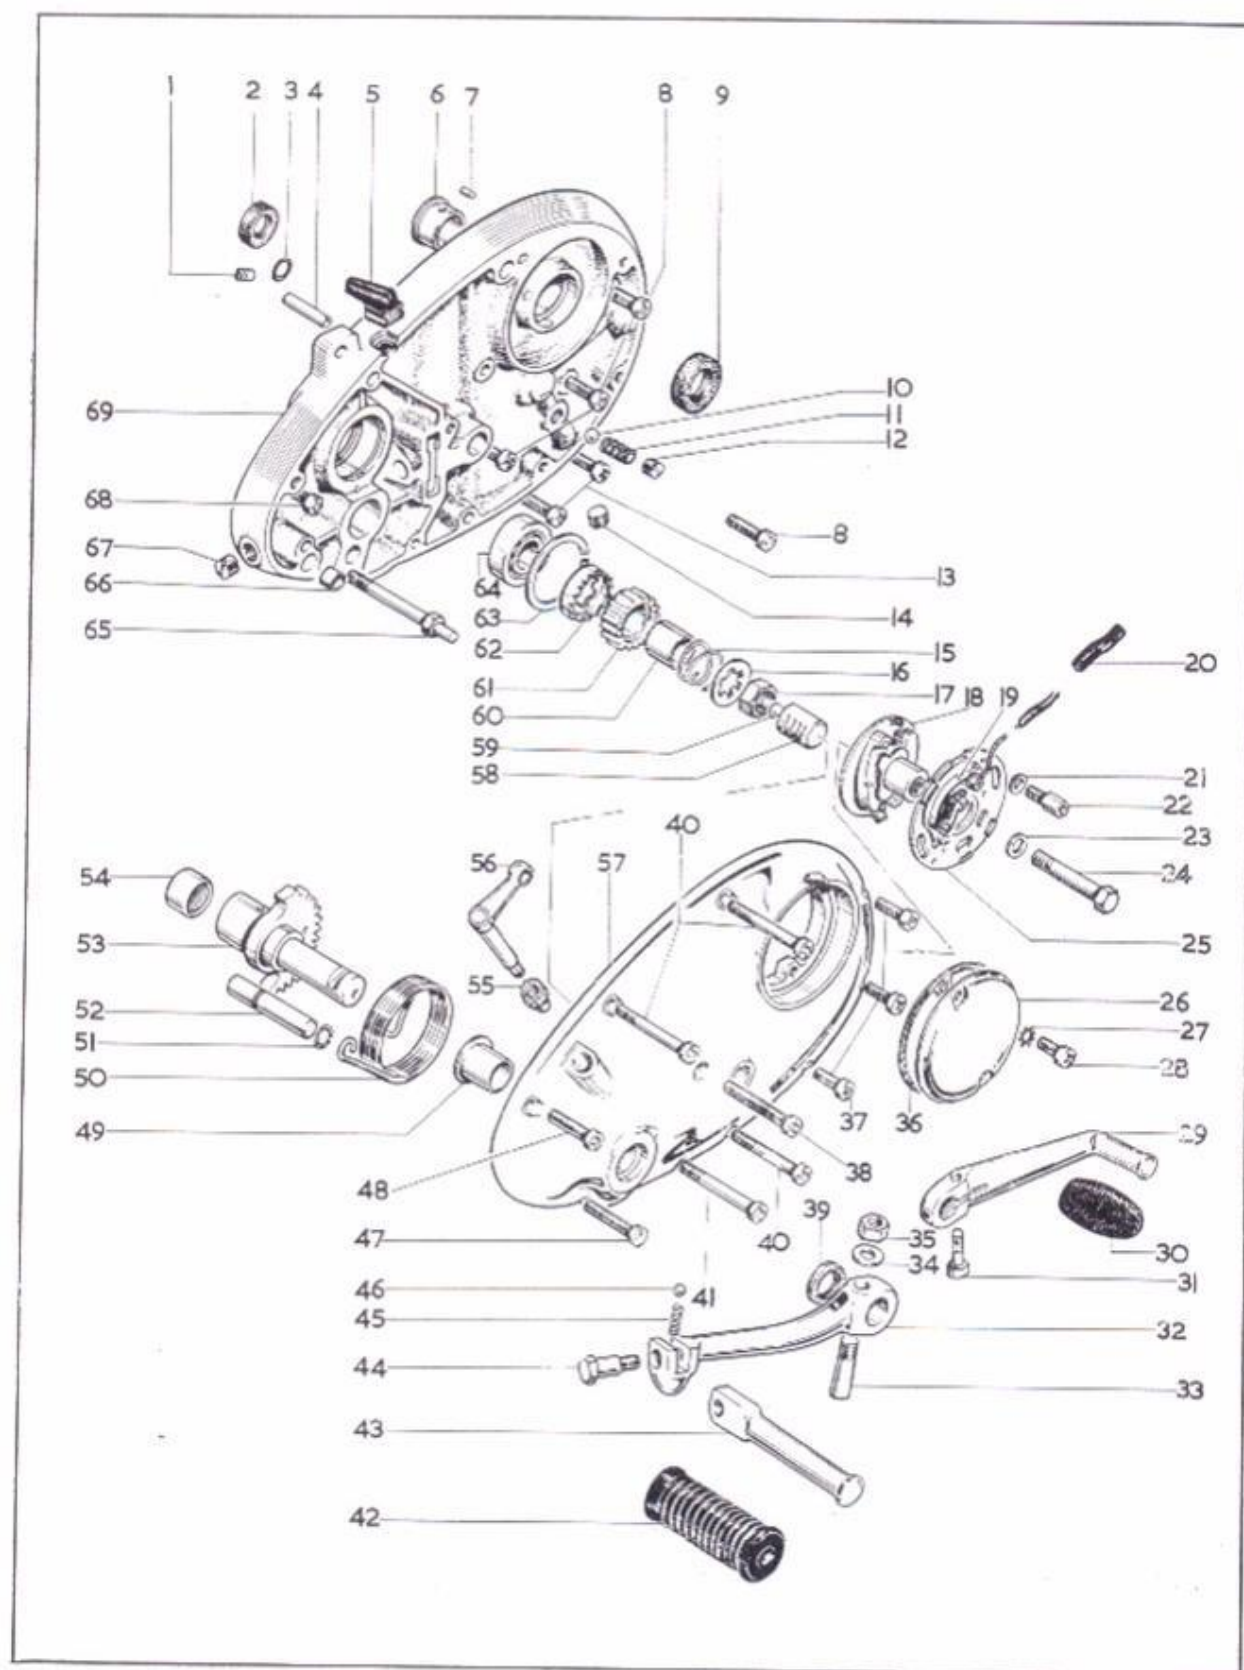

KICKSTART — FOOTCHANGE

Model	Plate Ref.	Spares Number	Description	Per Set
T SS H MC	36	71-1423	Gasket — contact breaker cover	1
T SS H MC	37	40-0236	Screw — outer cover (2 B.A. $\times$ $\frac{3}{8}$ ")	3
T SS H MC	38	14-6611	Screw — outer cover ($\frac{1}{4}$ " UN.C. $\times$ $1\frac{1}{2}$ ")	1
T SS H MC	39	57-2641	Oil seal — kickstart spindle	1
T SS H MC	40	14-6612	Screw — outer cover ($\frac{1}{4}$ " UN.C. $\times$ 2")	3
T SS H MC	41	14-6614	Screw — outer cover ($\frac{1}{4}$ " UN.C. $\times$ $2\frac{1}{2}$ ")	1
T SS H MC	42	57-2759	Pedal rubber — kickstart lever	1
T SS H MC	43	57-2646	Folding pedal — kickstart lever	1
T SS H MC	44	40-3084	Bolt — kickstart folding pedal ($\frac{5}{16}$ " B.S.C. $\times$ $1\frac{3}{16}$ ")	1
T SS H MC	45	40-3085	Spring — kickstart folding pedal	1
T SS H MC	46	60-2364	Ball — kickstart folding pedal ($\frac{1}{4}$ ")	1
T SS H MC	47	14-6610	Screw — outer cover ($\frac{1}{4}$ " UN.C. $\times$ $1\frac{1}{2}$ ")	1
T SS H MC	48	14-6606	Screw — outer cover ($\frac{1}{4}$ " UN.C. $\times$ $\frac{3}{4}$ ")	1
T SS H MC	49	57-2642	Bush — kickstart spindle	1
T SS H MC	50	57-4338	Return spring — kickstart lever	1
T SS H MC	51	40-3277	Circlip — kickstart quadrant stop	1
T SS H MC	52	57-4342	Kickstart quadrant stop	1
T SS H MC	53	57-4341	Kickstart spindle complete	1
T SS H MC	54	40-3292	Bearing — kickstart spindle (Torrington B.108)	1
T SS H MC	55	40-3283	Pinion — clutch operating lever	1
T SS H MC	56	57-2750	Clutch lever complete	1
T SS H MC	57	71-2273	Outer timing cover complete	1
T SS H MC	58	40-3282	Rack — clutch operating	1
T SS H MC	59	60-2363	Ball — clutch push rod ($\frac{5}{32}$ ")	1
T SS H MC	60	40-3272	Bush — kickstart ratchet pinion	1
T SS H MC	61	57-4336	Kickstart ratchet pinion	1
T SS H MC	62	57-4339	Kickstart ratchet	1
T SS H MC	63	76-0528	Circlip — mainshaft bearing	1
T SS H MC	64	90-0011	Bearing — gearbox mainshaft (Hoffmann LS.7)	1
T SS H MC	65	57-3764	Anchor bolt — kickstart return spring	1
T SS H MC	66	66-3074	Dowel — outer to inner cover	1
T SS H MC	67	21-1899	Screw plug — inner cover	1
T SS H MC	68	14-6608	Screw — inner cover ($\frac{1}{4}$ " UN.C. $\times$ 1")	1
T SS H MC	69	71-2545	Inner cover complete	1

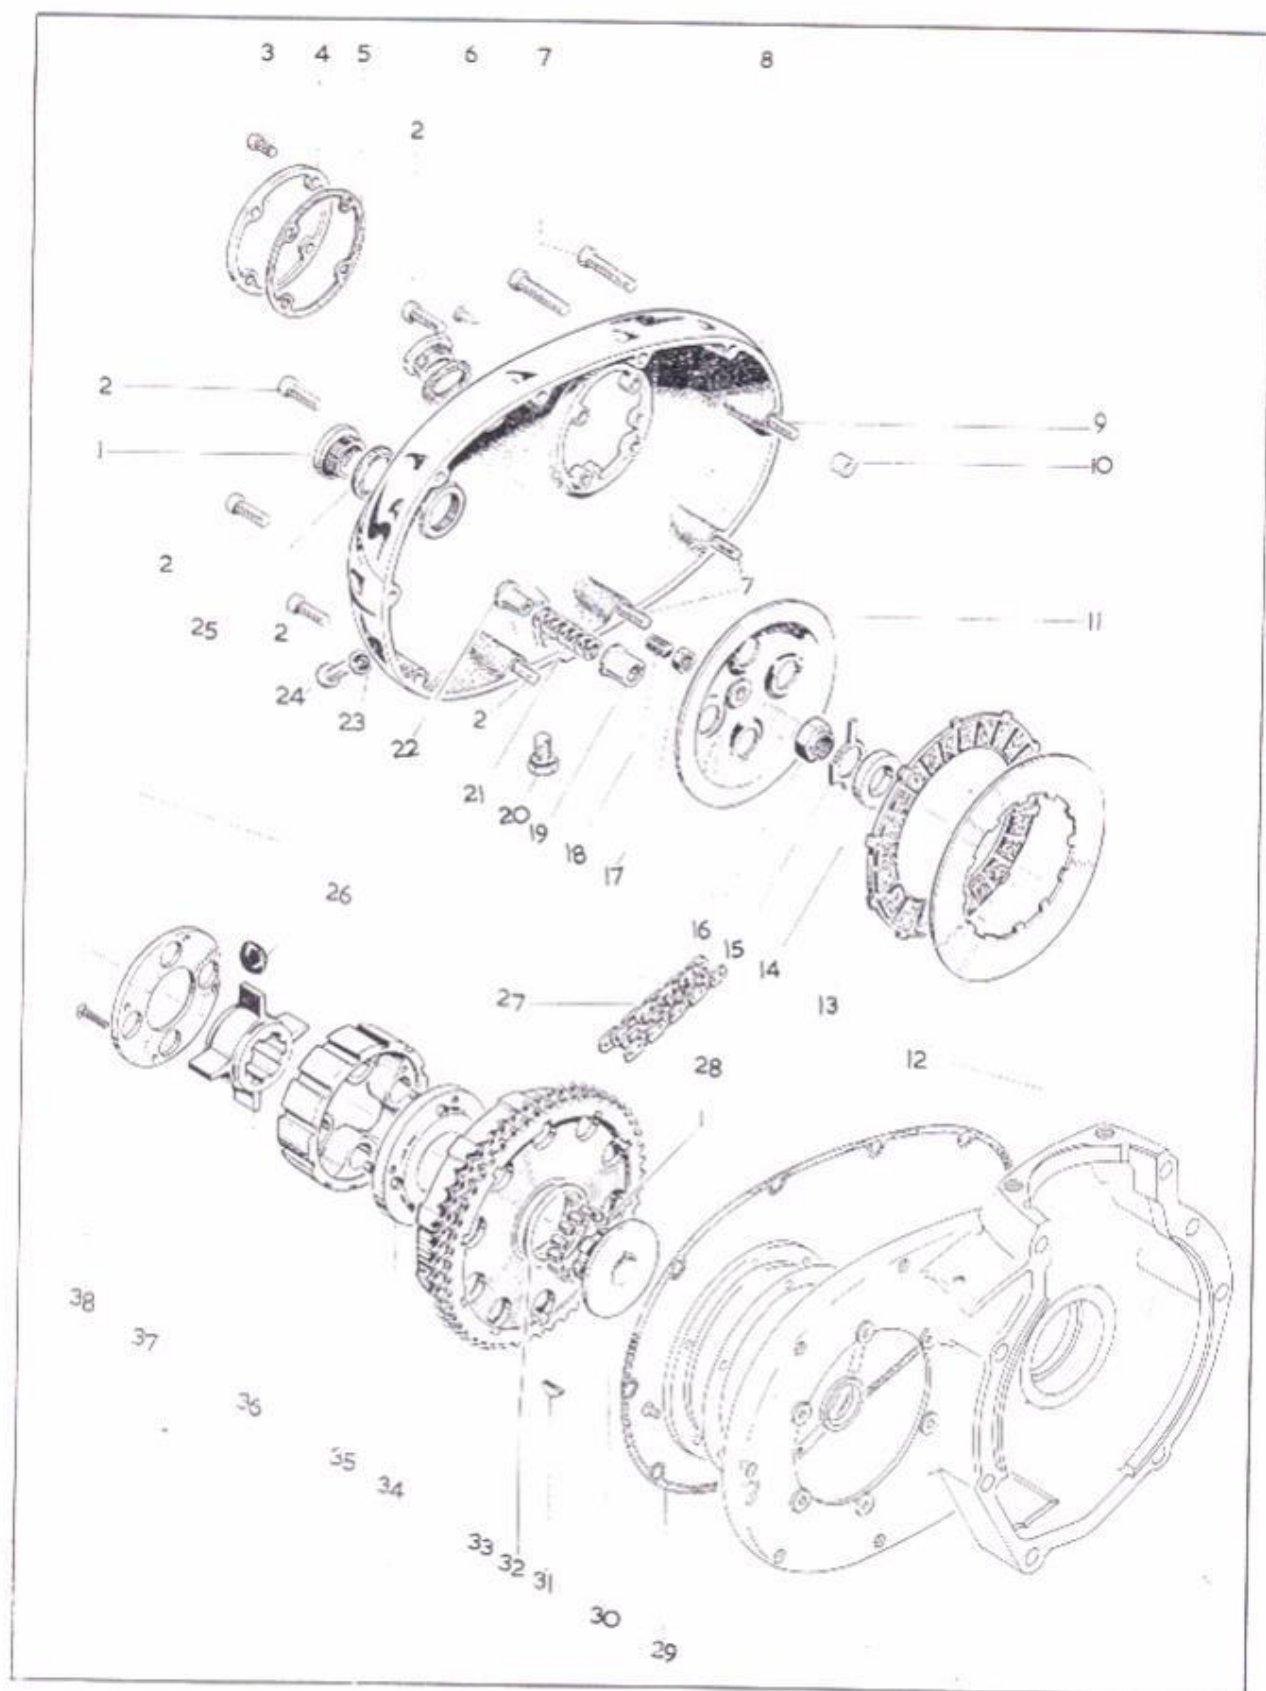


Plate 8

CLUTCH — PRIMARY COVER

Model	Plate Ref.	Spares Number	Description	Per Set
T SS H MC	1	57-2166	Screwed plug — primary cover (1" UN.S.)	1
T SS H MC	1	70-9800	Screwed breather plug — primary cover (1" UN.S.)	1
T SS H MC	2	14-6610	Primary cover screw ($\frac{1}{4}$ " UN.C. $\times$ $1\frac{1}{2}$ ")	5
T SS H MC	3	76-4116	Inspection cover screw (2 B.A. $\times$ $\frac{1}{2}$ ")	4
T SS H MC	4	68-0839	Timing inspection cover	1
T SS H MC	5	71-1420	Gasket — inspection cover	1
T SS H MC	6	40-1005	Ignition timing pointer	1
T SS H MC	7	14-6611	Primary cover screw ($\frac{1}{4}$ " UN.C. $\times$ $1\frac{3}{4}$ ")	4
T SS H MC	8	71-2025	Primary cover assembly	1
T SS H MC	9	21-1951	Primary cover screw — dowel hole ($\frac{1}{4}$ " UN.C. $\times$ $1\frac{1}{2}$ ")	1
T SS H MC	10	66-3074	Dowel — primary cover to crankcase	2
T SS H MC	11	57-4019	Clutch pressure plate	1
T SS H MC	12	40-3220	Clutch driven plate	5
T SS H MC	13	40-3233	Clutch driving plate	4
T SS H MC	14	40-3234	Spacing washer	1
T SS H MC	15	40-3221	Lockwasher — clutch retaining nut	1
T SS H MC	16	40-3227	Clutch retaining nut ($\frac{1}{2}$ " B.S.C.)	1
T SS H MC	17	14-0401	Nut — clutch adjusting screw ($\frac{1}{4}$ " UN.F.)	1
T SS H MC	18	57-4189	Clutch adjusting screw ($\frac{1}{4}$ " UN.F. $\times$ $\frac{3}{8}$ ")	1
T SS H MC	19	57-4121	Clutch spring cup	4
T SS H MC	20	21-1943	Primary case drain plug	1
T SS H MC	21	41-3091	Clutch spring	4
T SS H MC	22	41-3215	Clutch spring nut	4
T SS H MC	23	71-1065	Washer — oil level screw	1
T SS H MC	24	14-7804	Oil level screw	1
T SS H MC	25	70-8782	Washer for screwed plugs	2
T SS H MC	26	41-3212	Rubber pad — drive and rebound	8
T SS H MC	27	19-8683	Primary chain (72 pitches)	1
T SS H MC	28	40-3206	Clutch roller ($\frac{3}{16}$ " $\times$ $\frac{3}{16}$ ")	25
T SS H MC	29	71-1418	Gasket — primary cover	1
T SS H MC	30	57-4200	Clutch hub	1
T SS H MC	31	40-3150	Clutch hub key	1
T SS H MC	32	57-3931	Thrust washer	1
T SS H MC	33	57-4303	Clutch chainwheel	1
T SS H MC	34	40-3207	Retaining plate — inner	1
T SS H MC	35	57-4186	Clutch centre	1
T SS H MC	36	41-3209	Clutch spider	1
T SS H MC	37	40-3210	Retaining plate — outer	1
T SS H MC	38	40-3330	Screw — inner and outer retaining plates (1 B.A. $\times$ $\frac{11}{16}$ ")	4
T SS H MC		57-4302	Clutch assembly complete	1

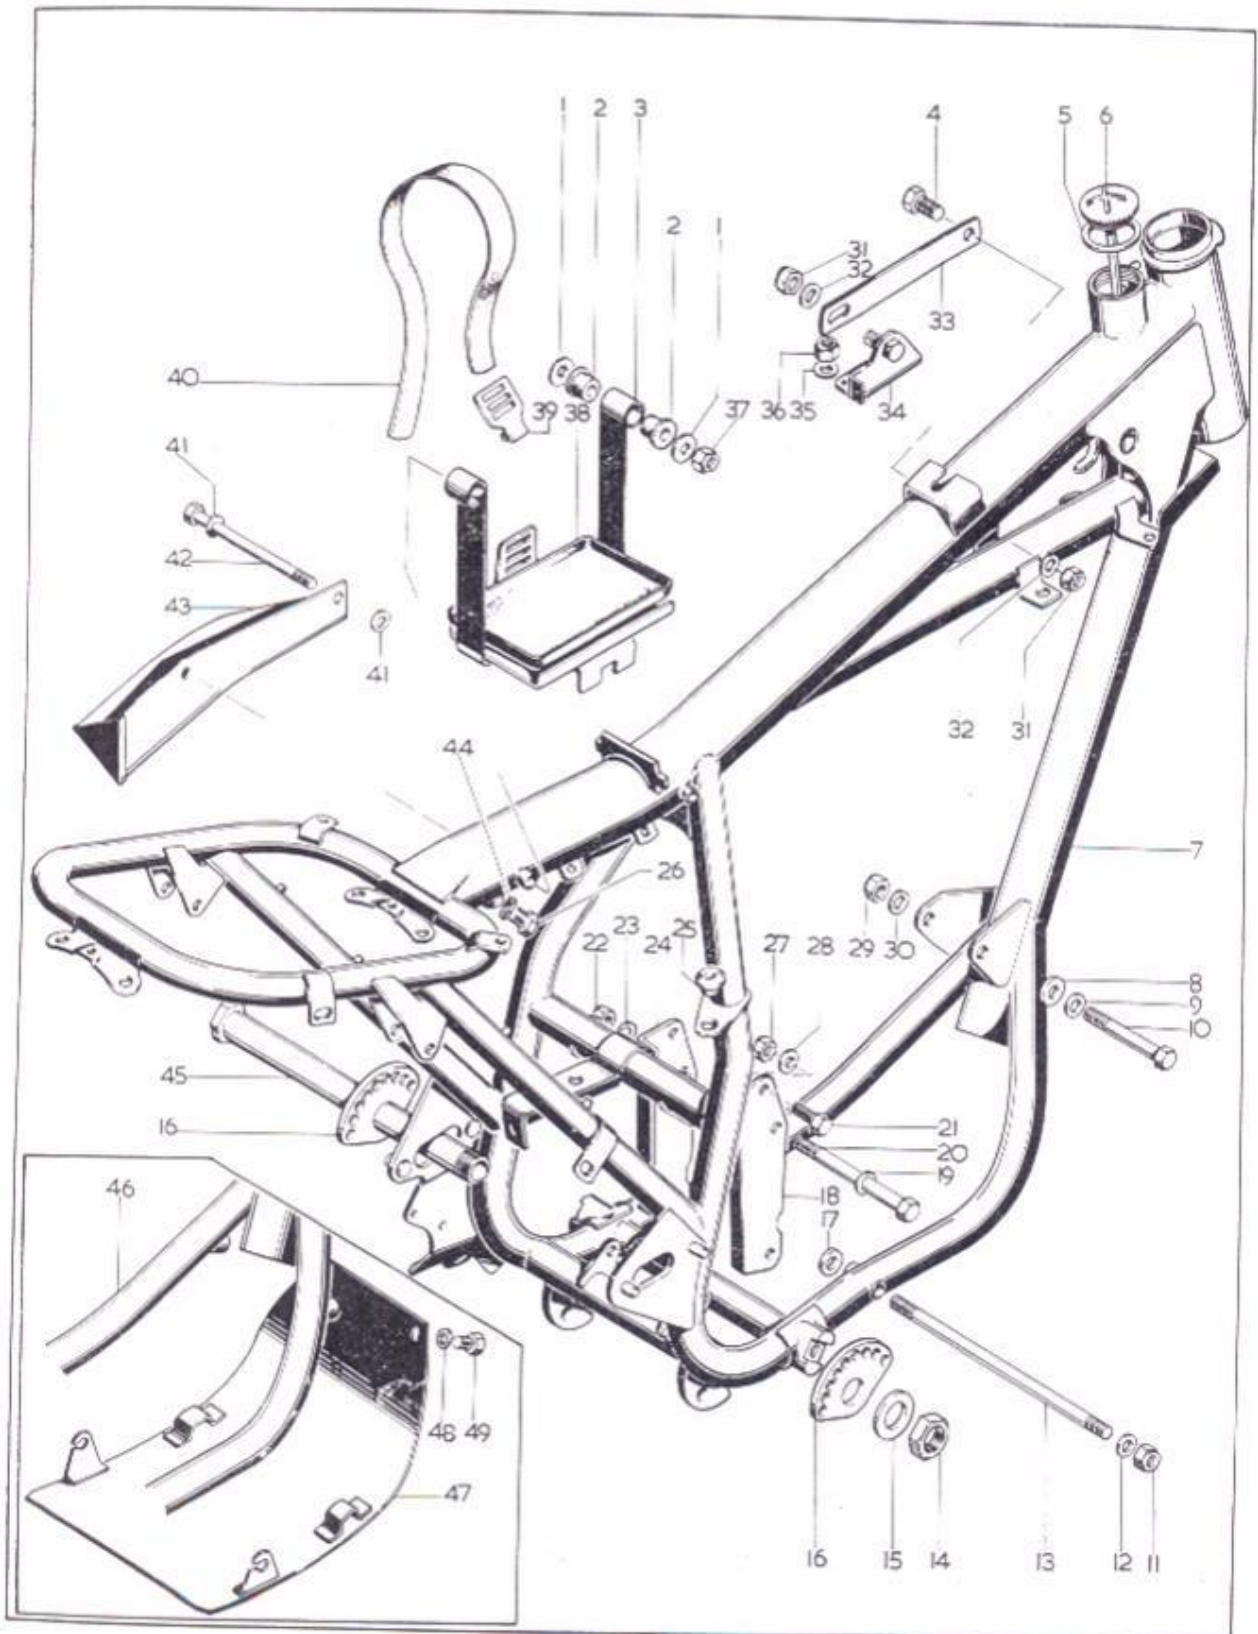


Plate 9

FRAME — BATTERY CARRIER — TOOL TRAY — ENGINE SHIELD

Model	Plate Ref.	Spares Number	Description	Per Set
T SS H	1	76-0101	Washer — battery carrier mounting	4
T SS H	2	83-2204	Bush — battery carrier mounting	4
T SS H	3	83-2018	Battery carrier	1
T SS H MC	4	14-0126	Bolt — engine steady ($\frac{3}{8}$ " UN.F. $\times$ $\frac{3}{4}$ ")	1
T SS H MC	5	70-3751	Washer — oil filler	1
T SS H MC	6	83-3046	Oil filler cap	1
MC	7	83-2984	Frame complete	1
T SS H	7	83-2985	Frame complete	1
T SS H MC	8	83-2004	Distance piece — engine mounting, front	1
T SS H MC	8	68-4925	Distance piece — exhaust pipe and front engine bolt	1
T SS H MC	9	70-8770	Washer — engine mounting, front	1
T SS H MC	10	14-0239	Bolt — engine mounting, front ($\frac{3}{8}$ " UN.F. $\times$ $\frac{3}{4}$ ")	1
T SS H MC	11	14-1303	Locknut — engine mounting, bottom ($\frac{3}{8}$ " UN.F.)	2
T SS H MC	12	70-8770	Washer — engine mounting, bottom	2
T SS H MC	13	21-2061*	Stud — engine mounting, bottom ($\frac{3}{8}$ " UN.F. $\times$ $8\frac{11}{16}$ ")	1
T SS H MC	14	21-0755	Nut — swinging arm pivot ($\frac{15}{16}$ " UN.C.)	1
T SS H MC	15	37-2085	Washer — swinging arm pivot	1
T SS H MC	16	83-1972	Adjuster — swinging arm pivot	2
T SS H MC	17	83-2005	Spacer — engine mounting, bottom	1
T SS H MC	18	83-2015	Engine mounting plate — rear, right	1
T SS H MC	19	70-8770	Washer — engine mounting, rear	2
T SS H MC	20	21-0671	Bolt — engine mounting, rear ($\frac{3}{8}$ " UN.F. $\times$ $3\frac{1}{4}$ ")	1
T SS H MC	21	14-0114	Bolt — engine mounting, rear ($\frac{15}{16}$ " UN.F. $\times$ $\frac{3}{4}$ ")	4
T SS H MC	22	14-1303	Locknut — engine mounting, rear ($\frac{3}{8}$ " UN.F.)	1
T SS H MC	23	70-8770	Washer — engine mounting, rear	2
T SS H MC	24	83-2014	Engine mounting plate — rear, left	1
T SS H	25	83-2006	Grommet — battery carrier mounting	1
T SS H MC	26	21-2015	Oil drain plug	1

For colour finish code refer to page 3.

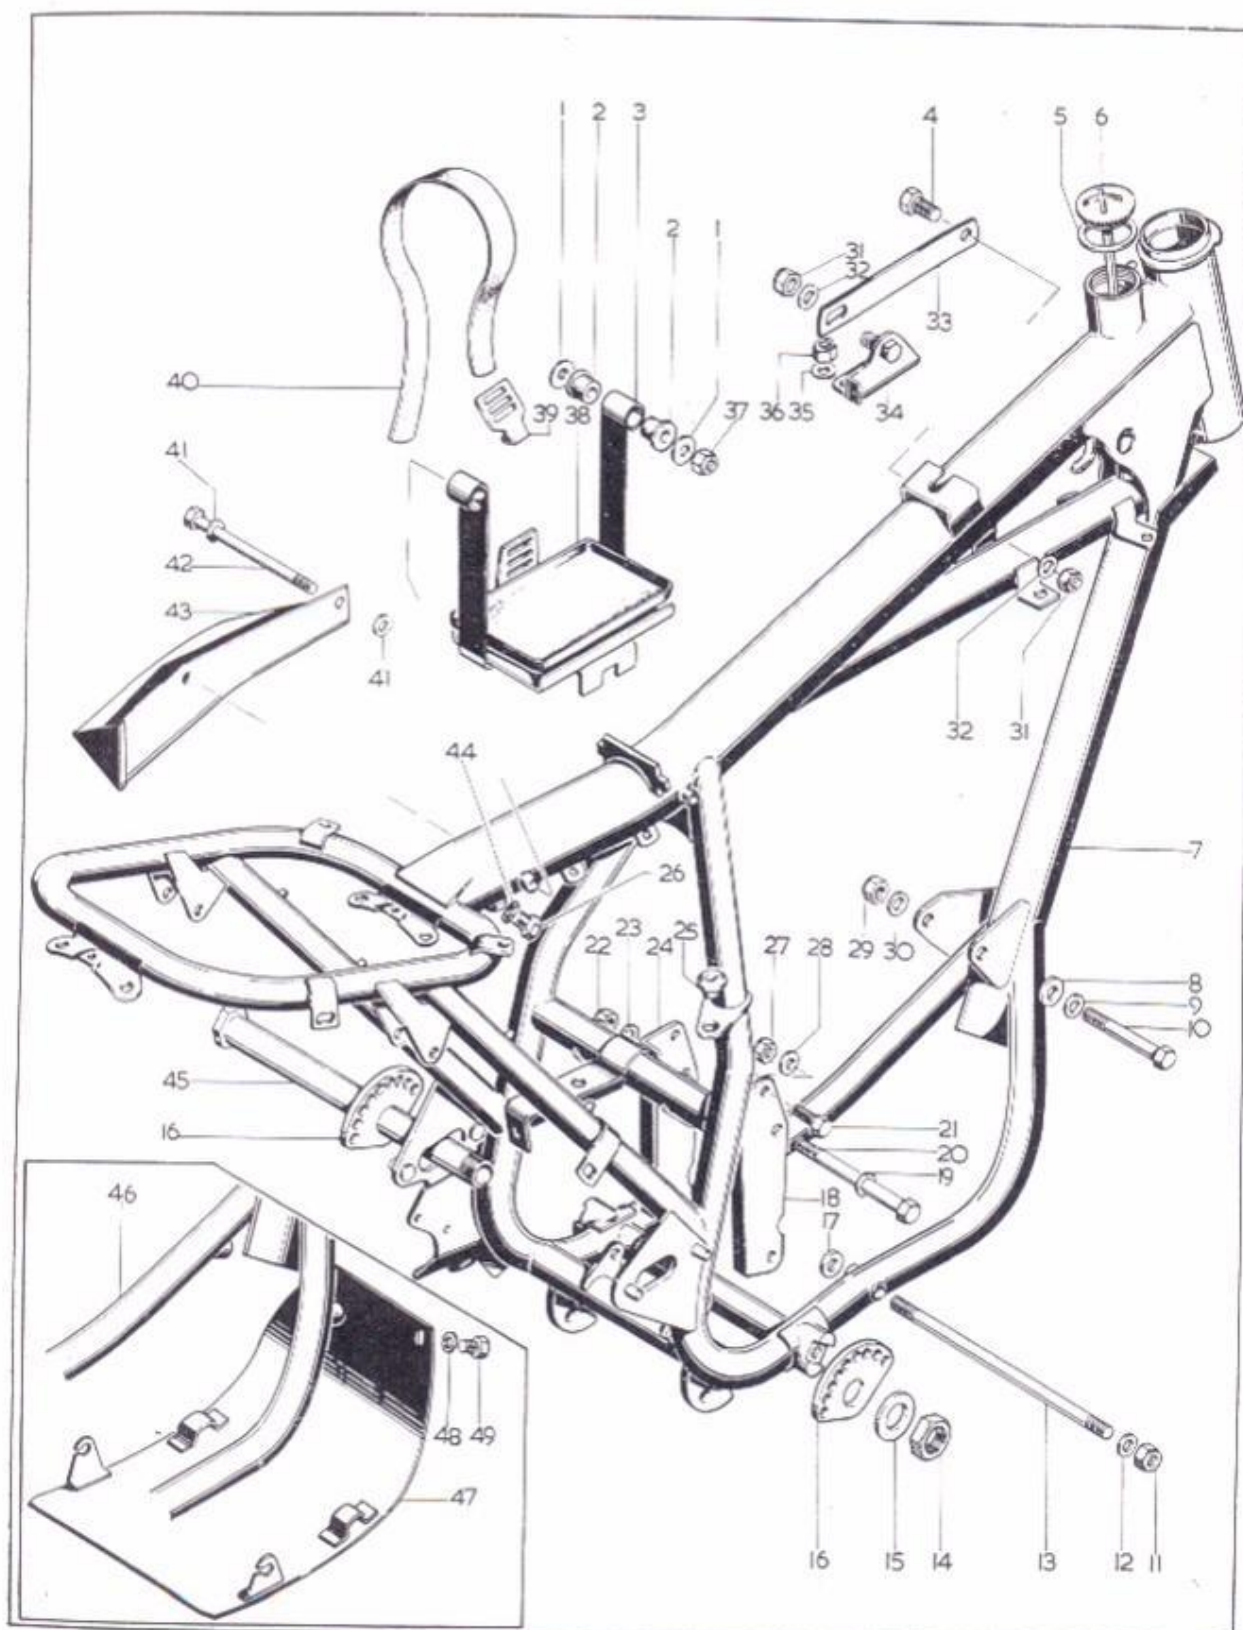


Plate 9—continued

FRAME — BATTERY CARRIER — TOOL TRAY — ENGINE SHIELD

<i>Model</i>	<i>Plate Ref.</i>	<i>Spares Number</i>	<i>Description</i>	<i>Per Set</i>
T SS H MC	27	14-1302	Locknut — engine mounting, rear ($\frac{5}{16}$ " UN.F.)	4
T SS H MC	28	75-0176	Washer — engine mounting, rear	8
T SS H MC	29	14-1303	Locknut — engine mounting, front ($\frac{3}{8}$ " UN.F.)	1
T SS H MC	30	70-8770	Washer — engine mounting, front	1
T SS H MC	31	14-1303	Locknut — engine steady ($\frac{3}{8}$ " UN.F.)	2
T SS H MC	32	60-2331	Washer — engine steady ($\frac{3}{8}$ " $\times$ $\frac{3}{4}$ " $\times$ 5/64")	2
T SS H MC	33	83-2717	Engine steady stay	1
T SS H MC	34	83-3153	Engine steady bracket	1
T SS H MC	35	60-2330	Washer — engine steady	2
T SS H MC	36	14-1302	Locknut — engine steady ($\frac{5}{16}$ " UN.F.)	2
T SS H	37	14-1301	Locknut — battery carrier mounting ($\frac{1}{2}$ " UN.F.)	2
T SS H	38	68-4597	Battery tray	1
T SS H	39	82-9004	Hook — battery strap	1
T SS H	40	68-4577	Battery strap	1
T SS H	41	60-2347	Washer — tool tray mounting ($\frac{1}{4}$ " $\times$ $\frac{3}{4}$ " $\times$ 5/64")	4
T SS H	42	21-2060	Bolt — tool tray and battery carrier mounting ($\frac{1}{2}$ " UN.F. $\times$ 4 $\frac{3}{4}$ ")	1
T SS H	43	83-2671	Tool tray	1
T SS H MC	44	54-8006	Washer — drain plug	1
T SS H MC	45	83-2013	Spindle complete — swinging arm	1
MC	46	83-2984	Frame complete	1
T SS H	46	83-2985	Frame complete	1
T	47	83-2228	Engine shield	1
T	48	75-0214	Washer — engine shield fixing (17/64" $\times$ $\frac{13}{32}$ " $\times$ 5/64")	2
T	49	21-0543	Bolt — engine shield fixing ($\frac{1}{4}$ " UN.F. $\times$ $\frac{1}{4}$ ")	2

*Special material: 13—EN16R.

For colour finish code refer to page 3.

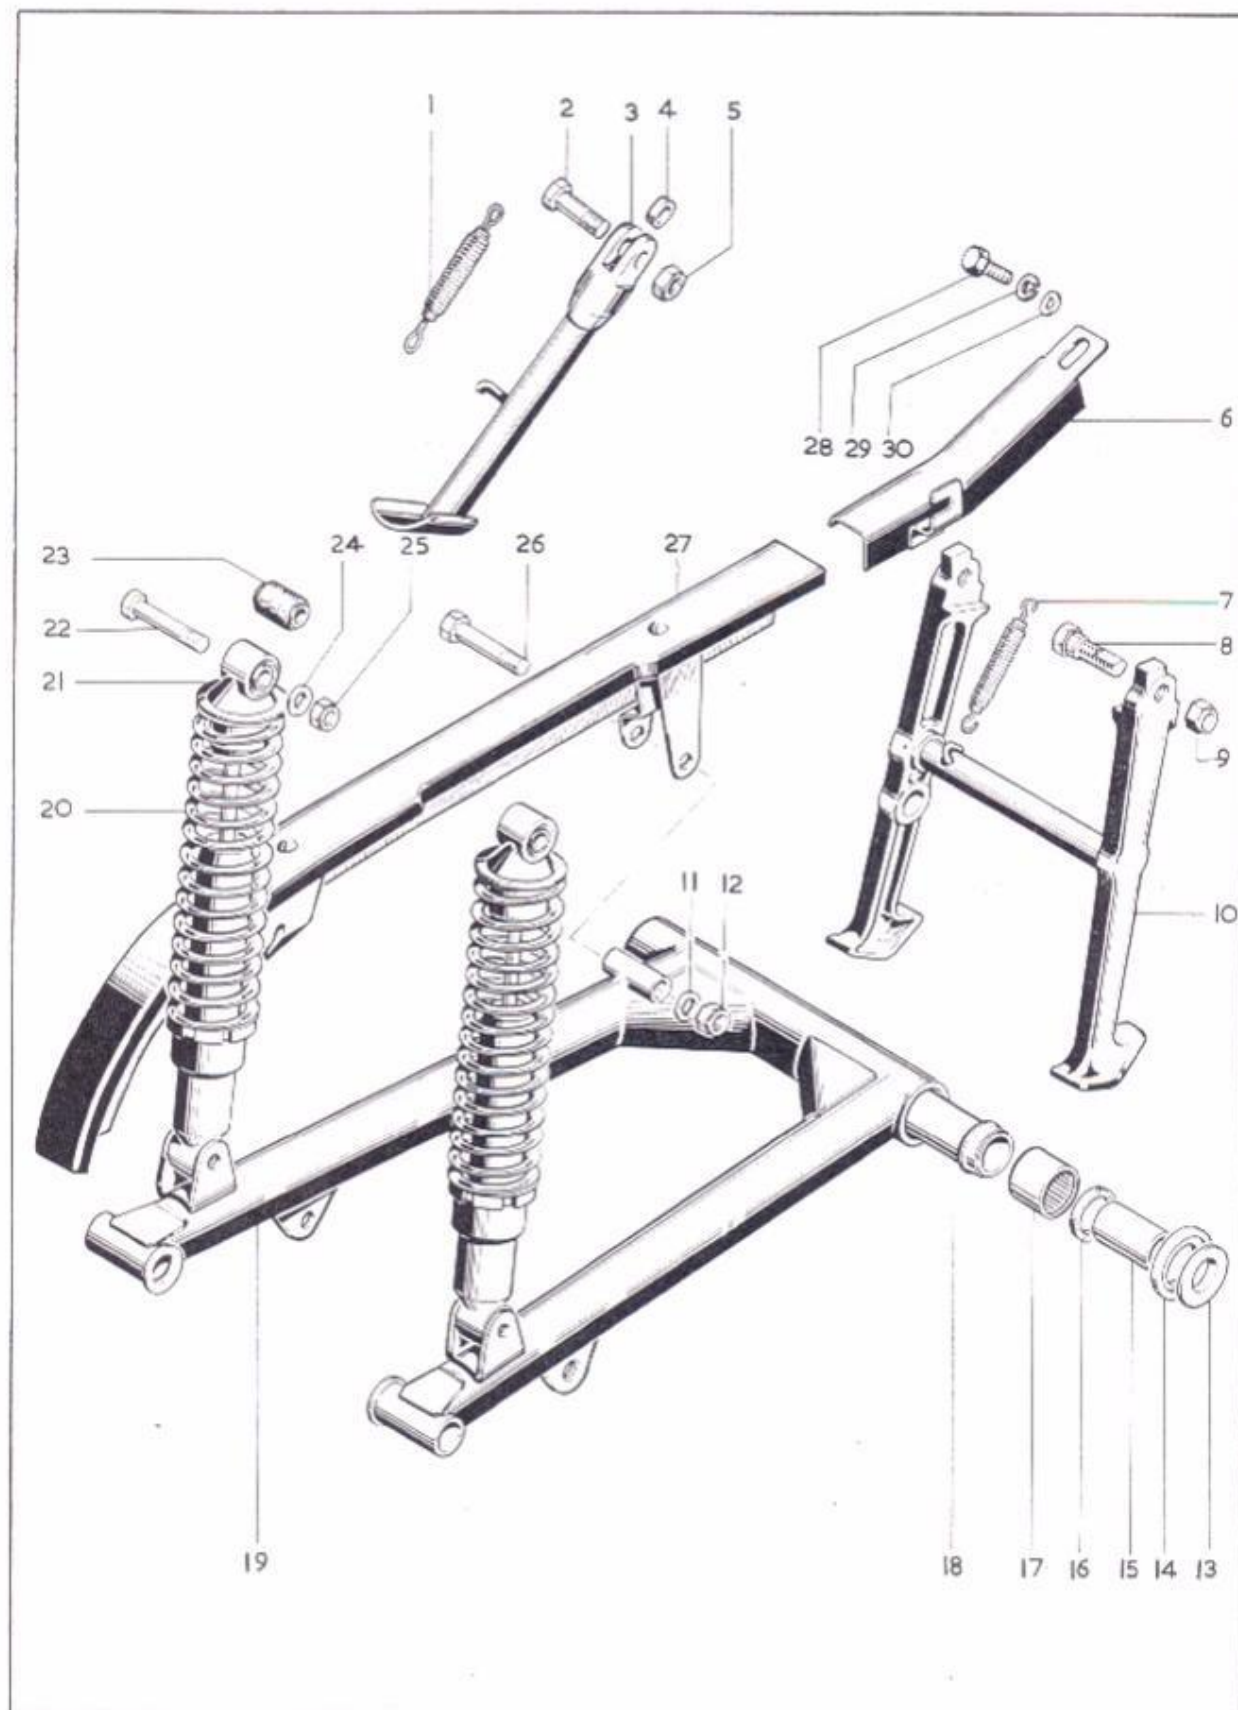


Plate 10

SWINGING ARM — REAR SUSPENSION — CHAIN GUARD

Model	Plate Ref.	Spares Number	Description	Per Set
T SS H	1	68-4708	Spring — prop stand	1
T SS H	2	14-0232	Bolt — prop stand ($\frac{3}{8}$ " UN.F. $\times$ $1\frac{1}{4}$ ")	1
T SS H	3	83-3162	Prop stand	1
T SS H	4	83-3165	Distance piece	1
T SS H	5	14-1303	Locknut — prop stand bolt ($\frac{3}{8}$ " UN.F.)	1
T SS H	6	83-2674	Chainguard extension	1
T SS H	7	82-4671	Spring — centre stand (optional extra)	1
T SS H	8	21-2077	Bolt — centre stand fixing (optional extra)	2
T SS H	9	14-1304	Locknut — centre stand fixing ($\frac{7}{16}$ " UN.F.) (optional extra)	2
T SS H	10	83-3170	Centre stand (optional extra)	1
T SS H	11	60-2339	Washer — chainguard to swinging arm	1
T SS H	12	14-1302	Locknut — chainguard to swinging arm ($\frac{5}{16}$ " UN.F.)	1
T SS H MC	13	83-2233	Thrust washer — swinging arm	2
T SS H MC	14	83-3014	Seal — thrust washer	2
T SS H MC	15	83-2012	Sleeve — inner	2
T SS H MC	16	83-2244	Oil seal — swinging arm	2
T SS H MC	17	83-2245	Needle bearing — swinging arm (Torrington B.1616)	2
T SS H MC	18	83-1969	Spacer tube — swinging arm bearing	1
T SS H MC	19	83-2212	Swinging arm complete	1
T SS H	20	19-7458	Suspension unit spring (Girling 64543708)	2
MC	20	19-7460	Suspension unit spring (Girling 64543626)	2
T SS H	21	19-7454	Suspension unit complete (Girling S.2484)	2
MC	21	19-7456	Suspension unit complete (Girling S.2488)	2
T SS H MC	22	14-0234	Bolt — suspension unit fixing, top and bottom ($\frac{3}{8}$ " UN.F. $\times$ $1\frac{3}{4}$ ")	4
T SS H MC	23	19-7461	Bush — suspension unit (Girling 64533645)	4
T SS H MC	24	60-2322	Washer — suspension unit fixing, top and bottom	4
T SS H MC	25	14-1303	Locknut — suspension unit fixing, top and bottom ($\frac{3}{8}$ " UN.F.)	4
T SS H	26	14-6221	Bolt — chainguard to swinging arm ($\frac{5}{16}$ " UN.C. $\times$ 2")	1
T SS H	27	83-2224	Chainguard complete	1
T SS H	28	14-6101	Screw — chainguard extension fixing ($\frac{1}{4}$ " UN.C. $\times$ $\frac{1}{2}$ ")	1
T SS H	29	60-2417	Lockwasher — chainguard extension fixing	1
T SS H	30	60-2329	Washer — chainguard extension fixing ($17/64$ " $\times$ $\frac{9}{16}$ " $\times$ $\frac{1}{2}$ ")	1

For colour finish code refer to page 3.

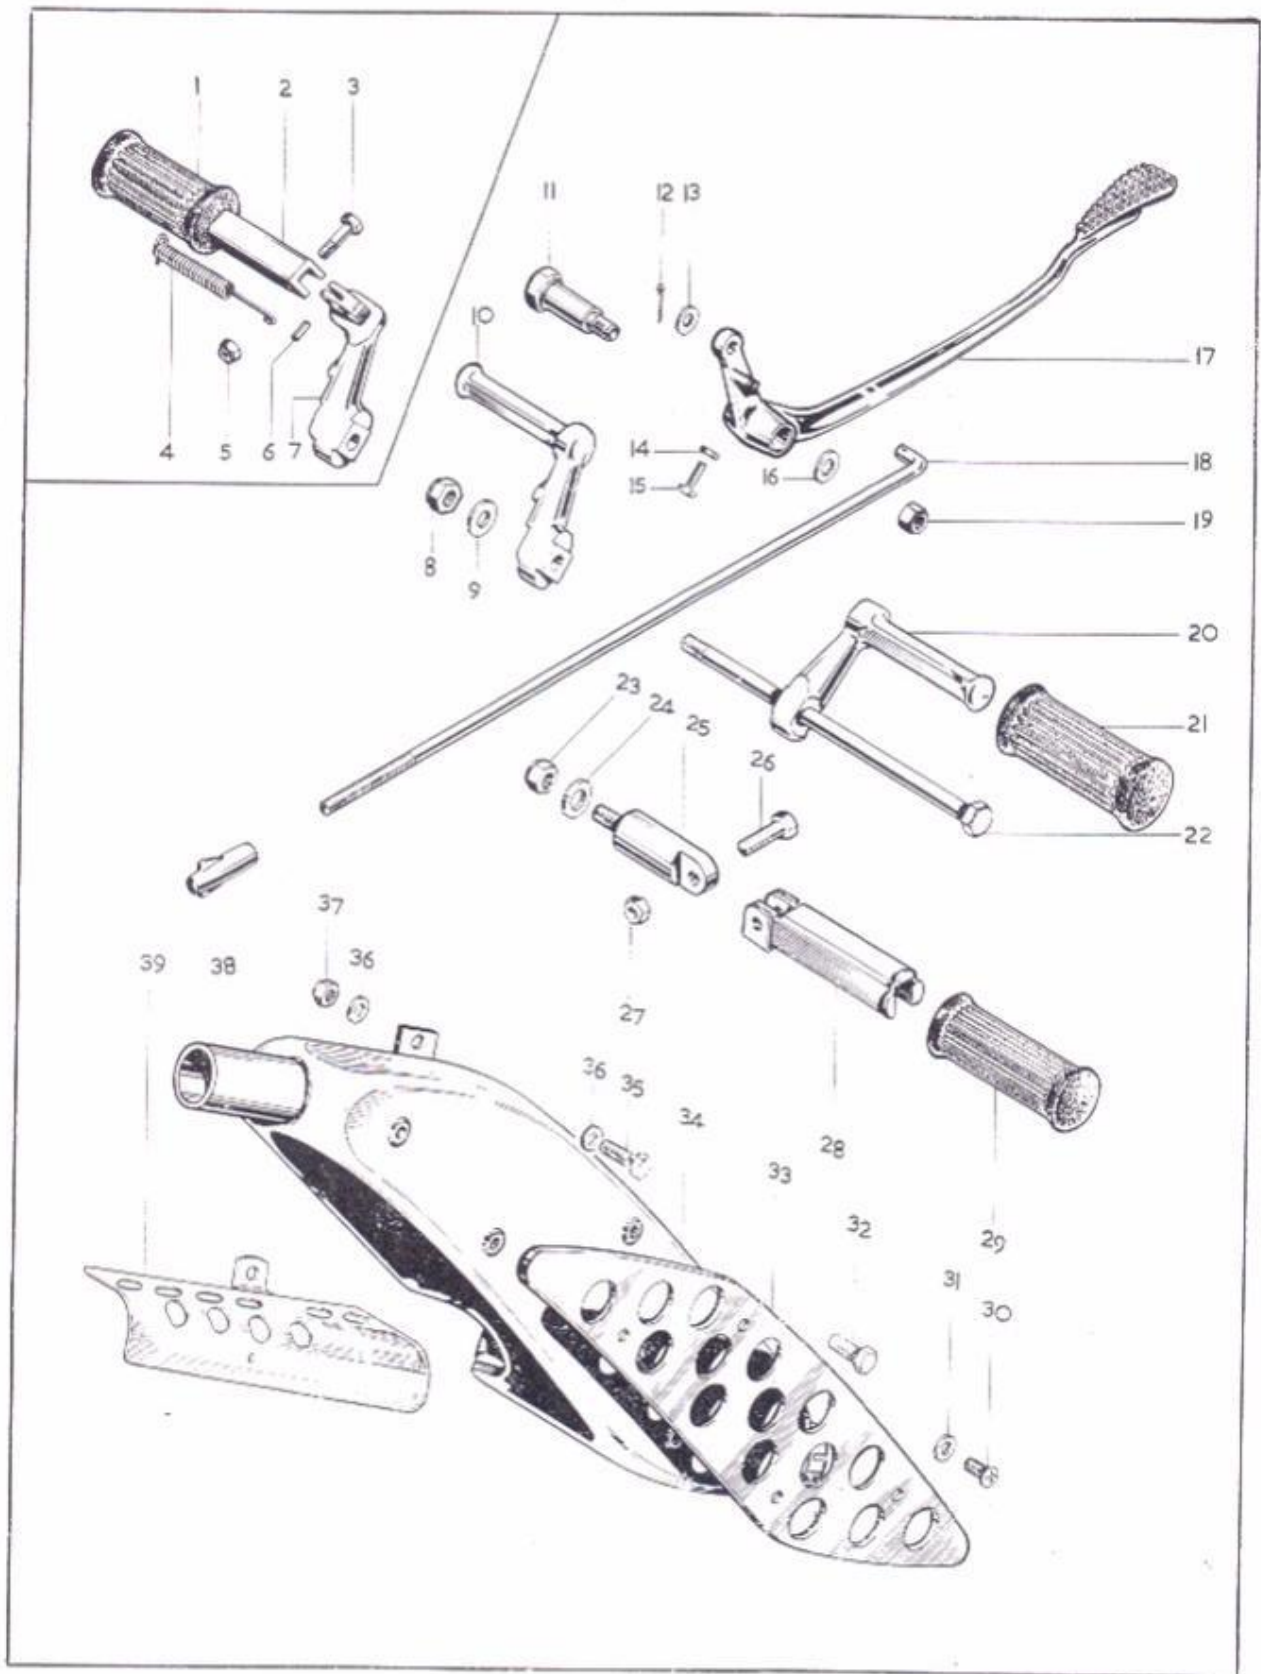


Plate 11 REAR BRAKE CONTROL — FOOTREST — SILENCER

Model	Plate Ref.	Spares Number	Description	Per Set
T MC	1	42-4925	Rubber — folding footrest	2
T MC	2	83-3092	Folding footrest	2
T MC	3	14-0216	Pivot bolt — folding footrest ($\frac{5}{16}$ " UN.F. $\times$ $1\frac{1}{8}$ ")	2
T MC	4	83-3095	Return spring — folding footrest	2
T MC	5	14-1302	Locknut — folding footrest pivot ($\frac{5}{16}$ " UN.F.)	2
T MC	6	83-3094	Anchor peg — return spring	2
T MC	7	83-2218	Bracket — folding footrest, left	1
T MC	7	83-2220	Bracket — folding footrest, right	1
T SS H MC	8	14-1303	Locknut — footrest bolt ($\frac{3}{8}$ " UN.F.)	1
T SS H MC	9	02-2138	Washer — footrest bolt ($\frac{3}{8}$ " $\times$ $\frac{3}{4}$ " $\times$ $\frac{1}{16}$ ")	1
SS H	10	83-3015	Footrest — left	1
T SS MC	11	21-2045	Pivot — rear brake pedal	1
T SS MC	12	60-2683	Split pin — brake rod ($\frac{1}{16}$ " $\times$ $\frac{3}{4}$ ")	1
T SS MC	13	60-2393	Washer — brake rod ($\frac{1}{4}$ " $\times$ $\frac{1}{2}$ " $\times$ $3/64$ ")	1
T SS MC	14	14-1301	Locknut — brake pedal adjuster ($\frac{1}{4}$ " UN.F.)	1
T SS MC	15	14-0103	Screw — brake pedal adjuster ($\frac{1}{4}$ " UN.F. $\times$ $\frac{3}{8}$ ")	1
T SS MC	16	02-2138	Washer — brake pedal pivot ($\frac{3}{8}$ " $\times$ $\frac{3}{4}$ " $\times$ $\frac{1}{16}$ ")	1
T SS MC	17	83-2040	Brake pedal	1
T SS MC	18	83-2616	Brake rod	1
T SS MC	19	14-1303	Locknut — brake pedal pivot ($\frac{3}{8}$ " UN.F.)	1
SS H	20	83-3017	Footrest — right	1
SS H	21	40-4850	Footrest rubber	2
T SS H MC	22	21-2094	Footrest bolt	1
T SS H	23	14-1303	Locknut — pillion footrest anchor bolt ($\frac{3}{8}$ " UN.F.)	2
T SS H	24	40-0157	Washer — pillion footrest anchor bolt	2
T SS H	25	83-2617	Anchor bolt — pillion footrest	2
T SS H	26	14-0216	Bolt — pillion footrest pivot ($\frac{5}{16}$ " UN.F. $\times$ $1\frac{1}{8}$ ")	2
T SS H	27	14-1302	Locknut — pillion footrest pivot ($\frac{5}{16}$ " UN.F.)	2
T SS H	28	68-4835	Pillion footrest	2
T SS H	29	29-7583	Rubber — pillion footrest	2
T SS H	30	14-2203	Screw — heat shield fixing ($\frac{1}{4}$ " UN.F. $\times$ $\frac{3}{8}$ ")	5
T SS H	31	68-0331	Washer — heat shield fixing	5
T SS H	32	14-0113	Bolt — silencer fixing, lower ($\frac{5}{16}$ " UN.F. $\times$ $\frac{3}{4}$ ")	1
T SS H	33	71-2114	Heat shield	1
H	34	71-2412	Silencer assembly	1
T SS	34	71-2401	Silencer	1
MC		82-9239†	Megaphone complete	1
MC		71-2171†	Bracket — megaphone fixing	1
MC		21-1822†	Bolt — bracket to megaphone ($\frac{3}{16}$ " UN.F. $\times$ $\frac{1}{2}$ ")	1
MC		24-8784†	Spring washer — bracket to megaphone	1
MC		14-0233†	Bolt — bracket to frame ($1\frac{1}{2}$ " UN.F. $\times$ $\frac{3}{8}$ ")	1
MC		02-0522†	Spring washer — bracket to frame	1
MC		14-1303†	Nut — bracket to frame ($\frac{3}{8}$ " UN.F.)	1
T SS H	35	14-0114	Bolt — silencer fixing, top ($\frac{5}{16}$ " UN.F. $\times$ $\frac{3}{4}$ ")	1
T SS H	36	15-5155	Washer — silencer fixing ($21/64$ " $\times$ $33/64$ " $\times$ $3/64$ ")	4
T SS H	37	14-1302	Locknut — silencer fixing ($\frac{5}{16}$ " UN.F.)	2
T SS H MC	38	82-7387	Adjuster nut — brake rod	1
T SS H	39	71-2402	Heat shield — tail pipe	1

†Not illustrated.


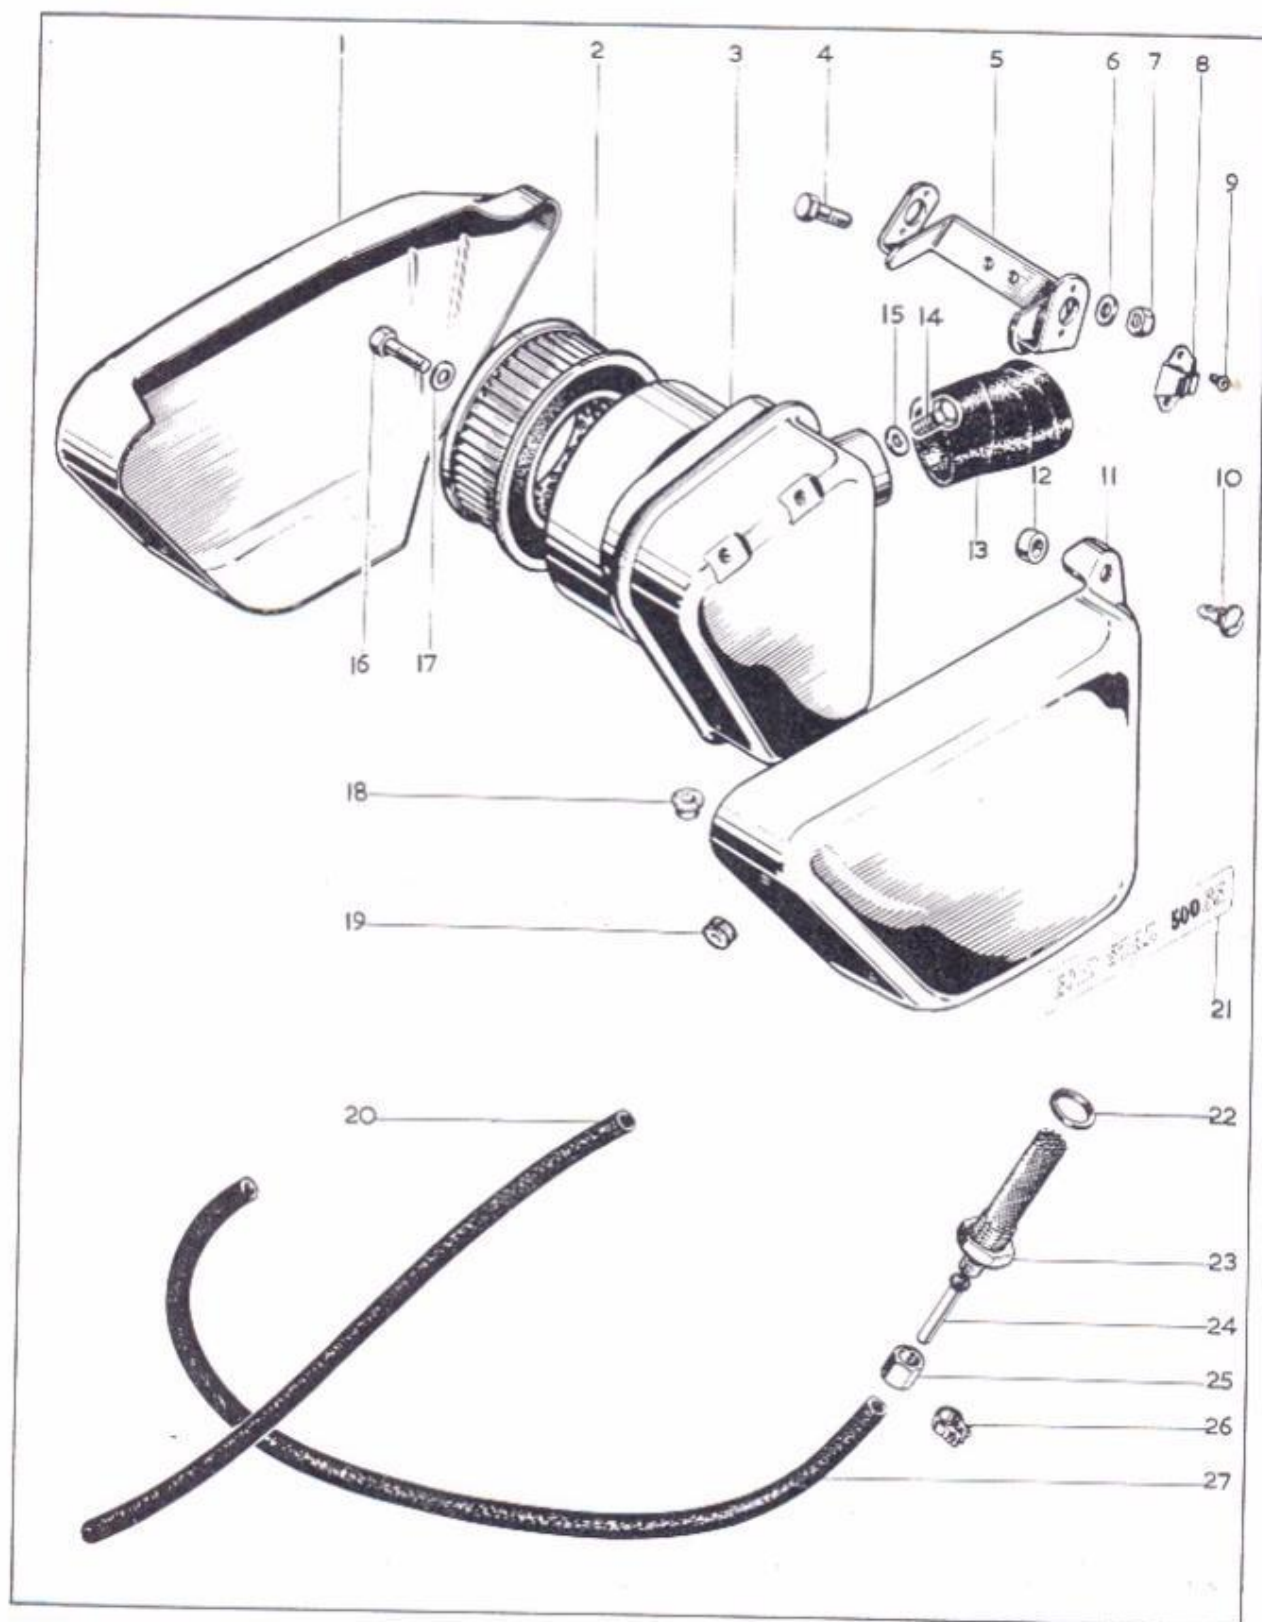


Plate 12

AIR CLEANER — SIDECOVERS — OIL PIPES


Model	Plate Ref.	Spares Number	Description	Per Set
T SS H	1	83-2937	Sidecover — left	1
T SS H MC	2	60-2601	Element — air cleaner	1
T SS H	3	83-2042	Air filter box complete	1
MC	3	83-3299†	Air filter assembly	1
MC		83-3305†	Air filter fixing plate	1
MC		14-0102†	Bolt — air filter, top fixing	2
MC		60-2427†	Spring washer — top fixing bolt	2
MC		14-0102†	Bolt — bottom fixing	1
MC		14-1301†	Nut — bottom fixing bolt	1
MC		76-0101†	Washer — bottom fixing bolt	1
MC		60-3354†	Hose — air filter to carburetter	1
T SS H	4	14-0102	Bolt — front fixing bracket ($\frac{1}{4}$ " UN.F. $\times \frac{9}{16}$ ")	2
T SS H	5	83-3035	Bracket — front fixing	1
T SS H	6	27-8560	Washer — front fixing bracket	2
T SS H	7	14-1301	Nut — front fixing bracket ($\frac{1}{4}$ " UN.F.)	2
T SS H	8	68-9115	Oddie clip — sidecover fixing	2
T SS H	9	83-2785	Rivet — Oddie clip fixing	4
T SS H	10	60-3159	Oddie fastener	2
T SS H	11	83-2938	Sidecover — right	1
T SS H	12	60-3160	Rubber washer — Oddie fastener	2
T SS H	13	83-2507	Rubber sleeve — air cleaner to carburetter	1
T SS H	14	14-0103	Bolt — filter box to frame ($\frac{1}{4}$ " UN.F. $\times \frac{3}{4}$ ")	2
T SS H	15	40-2705	Washer — filter box to frame	4
T SS H	16	14-0101	Bolt — element to box ($\frac{1}{4}$ " UN.F. $\times \frac{1}{2}$ ")	1
T SS H	17	40-2705	Washer — element to box	1
T SS H	18	83-2006	Rubber — air cleaner mounting	4
T SS H	19	60-3161	Grommet — sidecover mounting	6
T SS H	20	83-3077	Breather pipe — oil reservoir	1
T	21	60-3258	Transfer — sidecover	2
H	21	60-3260	Transfer — sidecover	2
SS	21	60-3262	Transfer — sidecover	2
T SS H MC	22	40-8331	Fibre washer — frame oil filter	1
T SS H MC	23	82-9430	Oil filter — frame	1
T SS H MC	24	40-8322	Oil feed pipe	1
T SS H MC	25	40-8323	Nut — oil pipe union	1
T SS H MC	26	68-8343	Clamp — oil pipe	4
T SS H MC	27	83-3078	Oil feed pipe — frame to engine	1
T SS H MC		83-3076*	Oil return pipe — engine to frame	1

†Not illustrated.

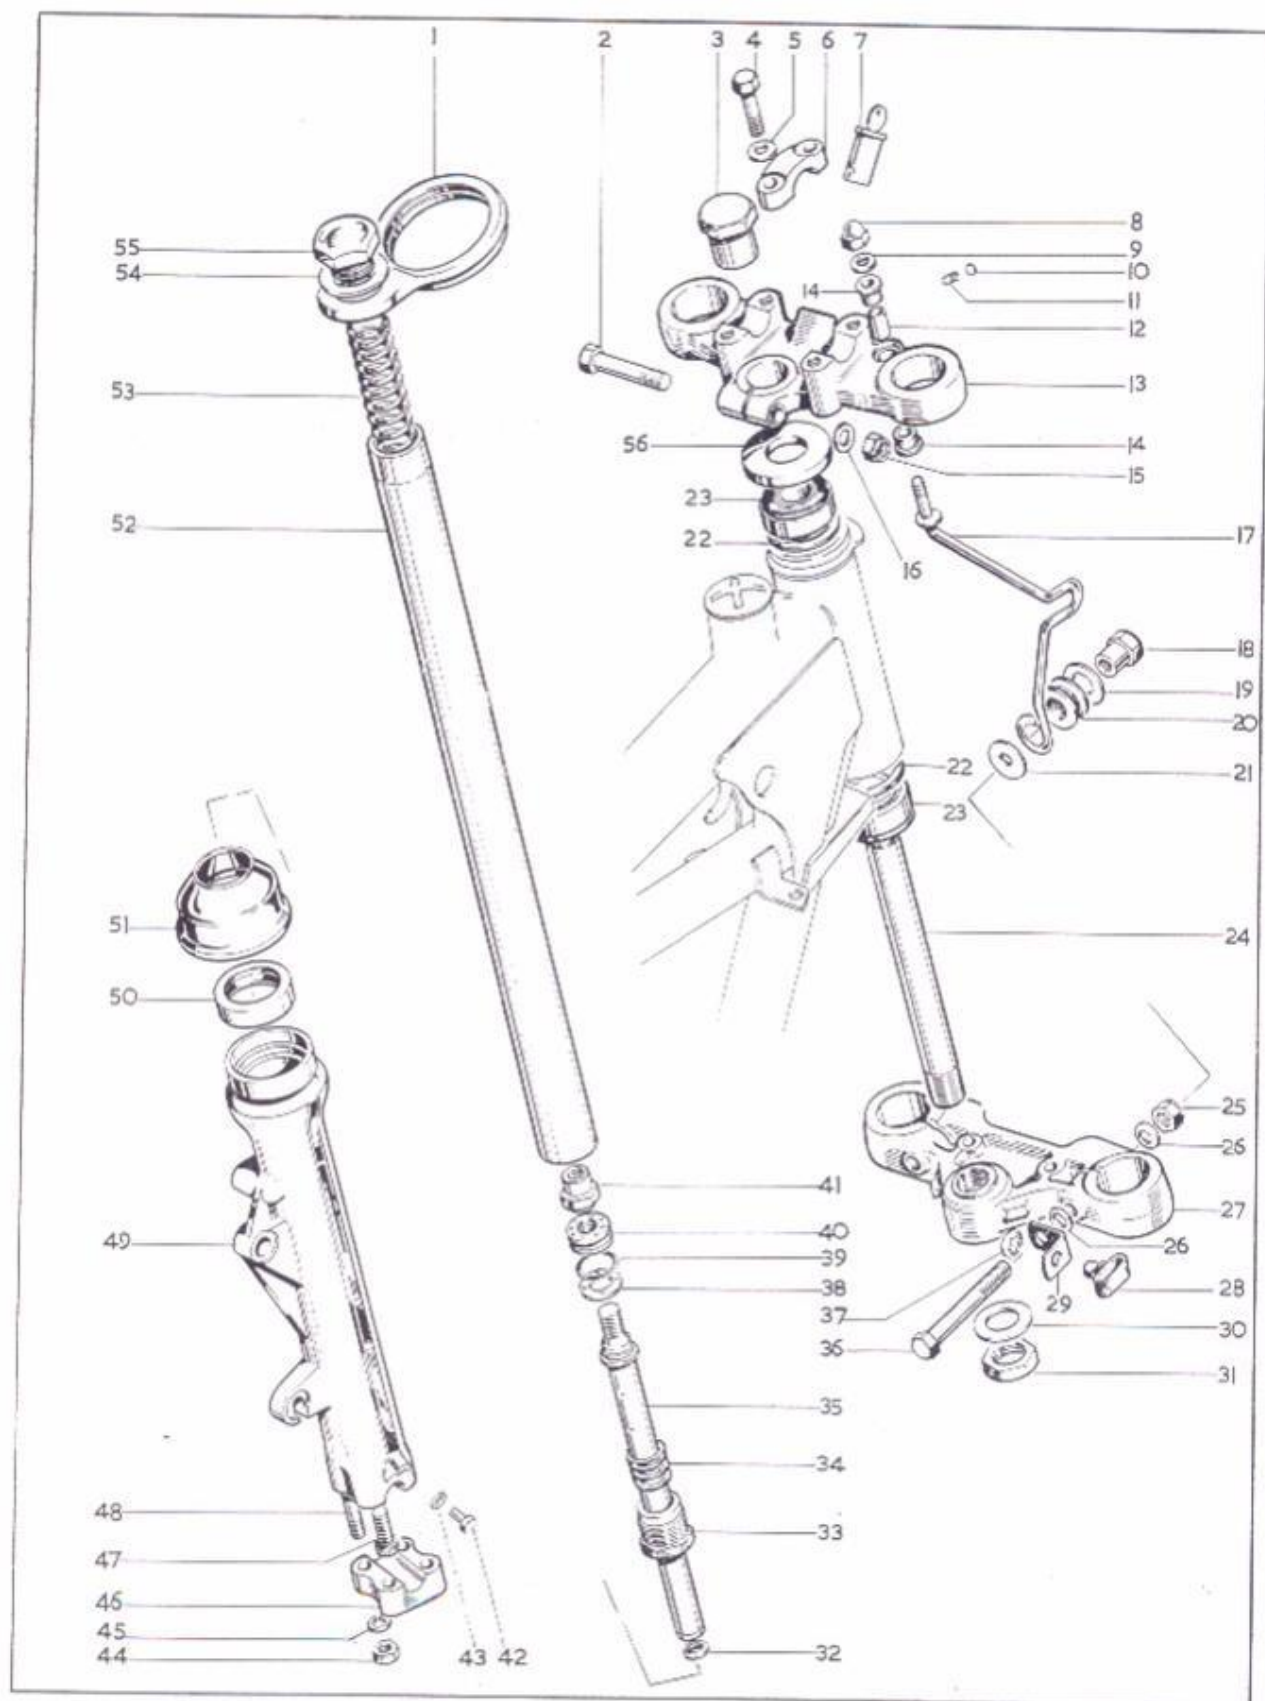

FRONT FORKS

Model	Plate Ref.	Spares Number	Description	Per Set
T SS H	1	97-4026	Speedometer mounting bracket	1
T SS H MC	2	14-0236	Pinch bolt — top yoke ($\frac{3}{8}$ " UN.F. $\times$ 2 $\frac{1}{4}$ ")	1
T SS H MC	3	97-4029	Nut — steering stem	1
T SS H MC	4	14-6219	Bolt — handlebar cap ($\frac{1}{16}$ " UN.C. $\times$ 1 $\frac{1}{2}$ ")	4
T SS H MC	5	42-0157	Washer — handlebar cap	4
T SS H MC	6	97-0722	Handlebar cap	2
T SS H	7	68-5050	Steering lock and key	1
T SS H	8	21-1809	Nut — headlamp mounting, top (domed $\frac{1}{4}$ " UN.F.)	2
T SS H	9	60-2338	Washer — headlamp mounting, top (17/64" $\times$ $\frac{3}{8}$ " $\times$ 3/64")	2
T SS H	10	97-2266	Sealing washer — steering lock grub-screw	1
T SS H	11	21-0578	Grub-screw — steering lock	1
T SS H	12	83-2211	Spacer — headlamp mounting bush	2
T SS H	13	97-4115	Top yoke complete	1
MC	13	97-3985	Top yoke complete	1
T SS H	14	83-2209	Bush — headlamp mounting	4
T SS H MC	15	14-1303	Locknut — pinch bolt ($\frac{3}{8}$ " UN.F.)	1
T SS H MC	16	02-2138	Washer — pinch bolt (25/64" $\times$ $\frac{3}{8}$ " $\times$ $\frac{1}{16}$ ")	1
T SS H	17	97-4048	Bracket — headlamp mounting, left	1
T SS H	17	97-4050	Bracket — headlamp mounting, right	1
T SS H	18	21-2062	Sleeve nut — headlamp mounting bracket	2
T SS H	19	60-2333	Washer — sleeve nut, headlamp mounting bracket (33/64" $\times$ 1" $\times$ $\frac{1}{16}$ ")	2
T SS H	20	60-2630	Grommet — sleeve nut, headlamp mounting bracket	2
T SS H	21	76-8010	Washer — sleeve nut, headlamp mounting bracket ($\frac{3}{8}$ " $\times$ 1" $\times$ $\frac{1}{16}$ ")	2
T SS H MC	22	83-2007	Bearing abutment ring	2
T SS H MC	23	97-4031	Taper roller bearing	2
T SS H MC	24	97-4116	Steering stem	1
T SS H MC	25	14-1203	Locknut — bottom yoke pinch bolt ($\frac{3}{8}$ " UN.F.)	2
T SS H MC	26	02-2138	Washer — bottom yoke pinch bolt (25/64" $\times$ $\frac{3}{8}$ " $\times$ $\frac{1}{16}$ ")	4
T SS H MC	27	97-3987	Bottom yoke	1
T SS H MC	28	97-2270	Retainer — brake cable	2
T SS H MC	29	97-3682	Bracket — brake cable retainer	1
SS H	30	60-2326	Washer — steering stem (25/32" $\times$ 1 $\frac{1}{2}$ " $\times$ 5/64")	1
T SS H MC	31	14-7308	Locknut — steering stem ($\frac{3}{8}$ " UN.C.)	1

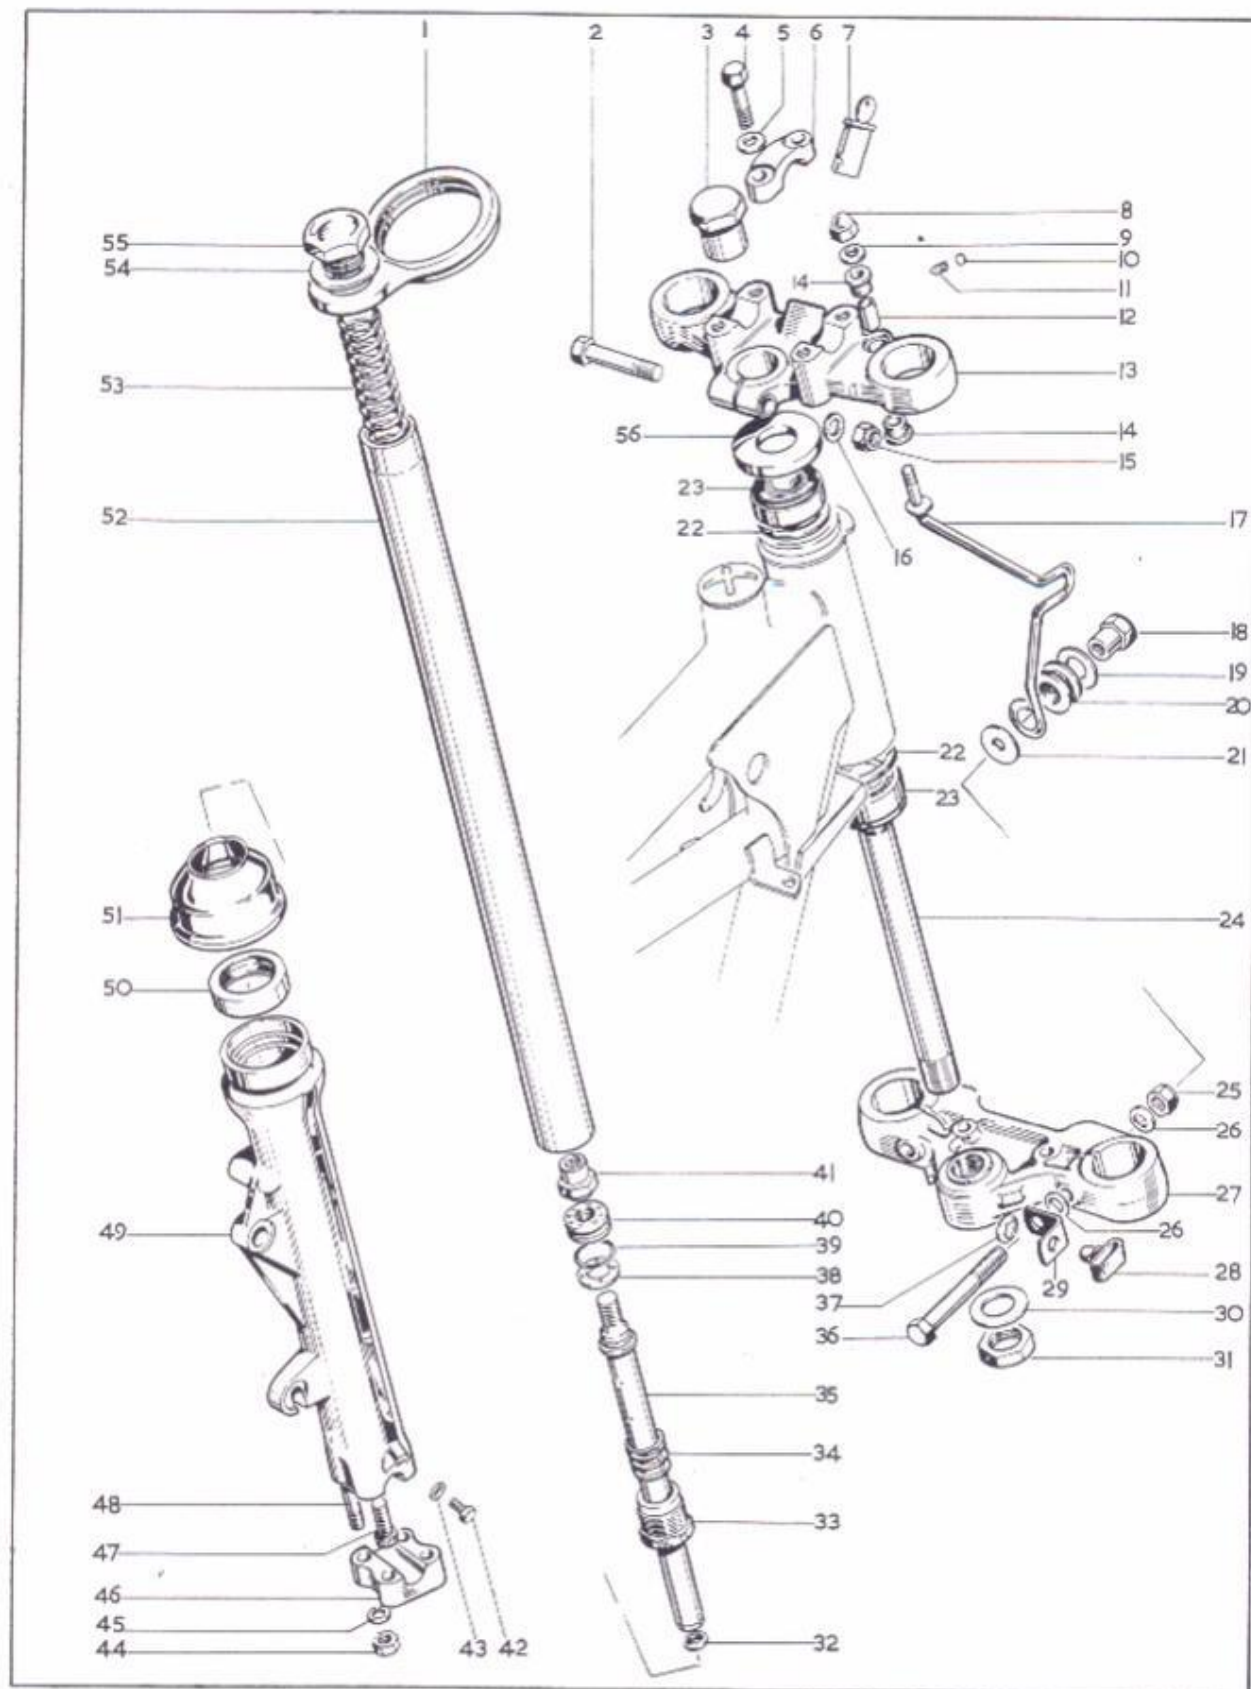

FRONT FORKS

<i>Model</i>	<i>Plate Ref.</i>	<i>Spares Number</i>	<i>Description</i>	<i>Per Set</i>
T SS H MC	32	97-4004	Washer — damper tube	2
T SS H MC	33	97-4076	Stanchion end plug complete	2
T SS H MC	34	97-4009	Recoil spring	2
T SS H MC	35	97-3996	Damper tube complete	2
T SS H	36	14-0239	Bolt — bottom yoke pinch bolt	2
MC	36	14-0238	Bolt — bottom yoke pinch bolt	2
T SS H	37	82-8245	Lockwasher — brake cable retainer	2
T SS H MC	38	97-4010	Washer — damper	2
T SS H MC	39	97-4003	"O" ring — damper valve	2
T SS H MC	40	97-4020	Valve — damper	2
T SS H MC	41	97-4012	Nut — damper valve	2
T SS H MC	42	97-3894	Drain plug — outer member	2
T SS H MC	43	97-3893	Washer — drain plug	2
T SS H MC	44	14-1902	Locknut — fork end cap ($\frac{5}{16}$ " UN.F.)	8
T SS H MC	45	60-2321	Washer — fork end cap ($21/64" \times \frac{3}{4}" \times 32/32"$)	8
T SS H MC	46	97-3947	Fork end cap	2
T SS H MC	47	14-1019	Bolt — damper tube	2
T SS H MC	48	21-2047	Stud — fork end cap	8
T SS H MC	49	97-4032	Outer member complete — right	1
T SS H MC	49	97-4033	Outer member complete — left	1
T SS H MC	50	97-4001	Oil seal — outer member	2
T SS H MC	51	97-4002	Scraper sleeve — outer member	2
T SS H MC	52	97-4007	Fork stanchion	2
T SS H MC	53	97-4011	Fork spring	2
T SS H MC	54	97-4166	Washer — top cap nut	2
T SS H MC	55	97-4008	Top cap nut	2
T SS H MC	56	97-4028	Dust cover — steering head	1

Plate 14


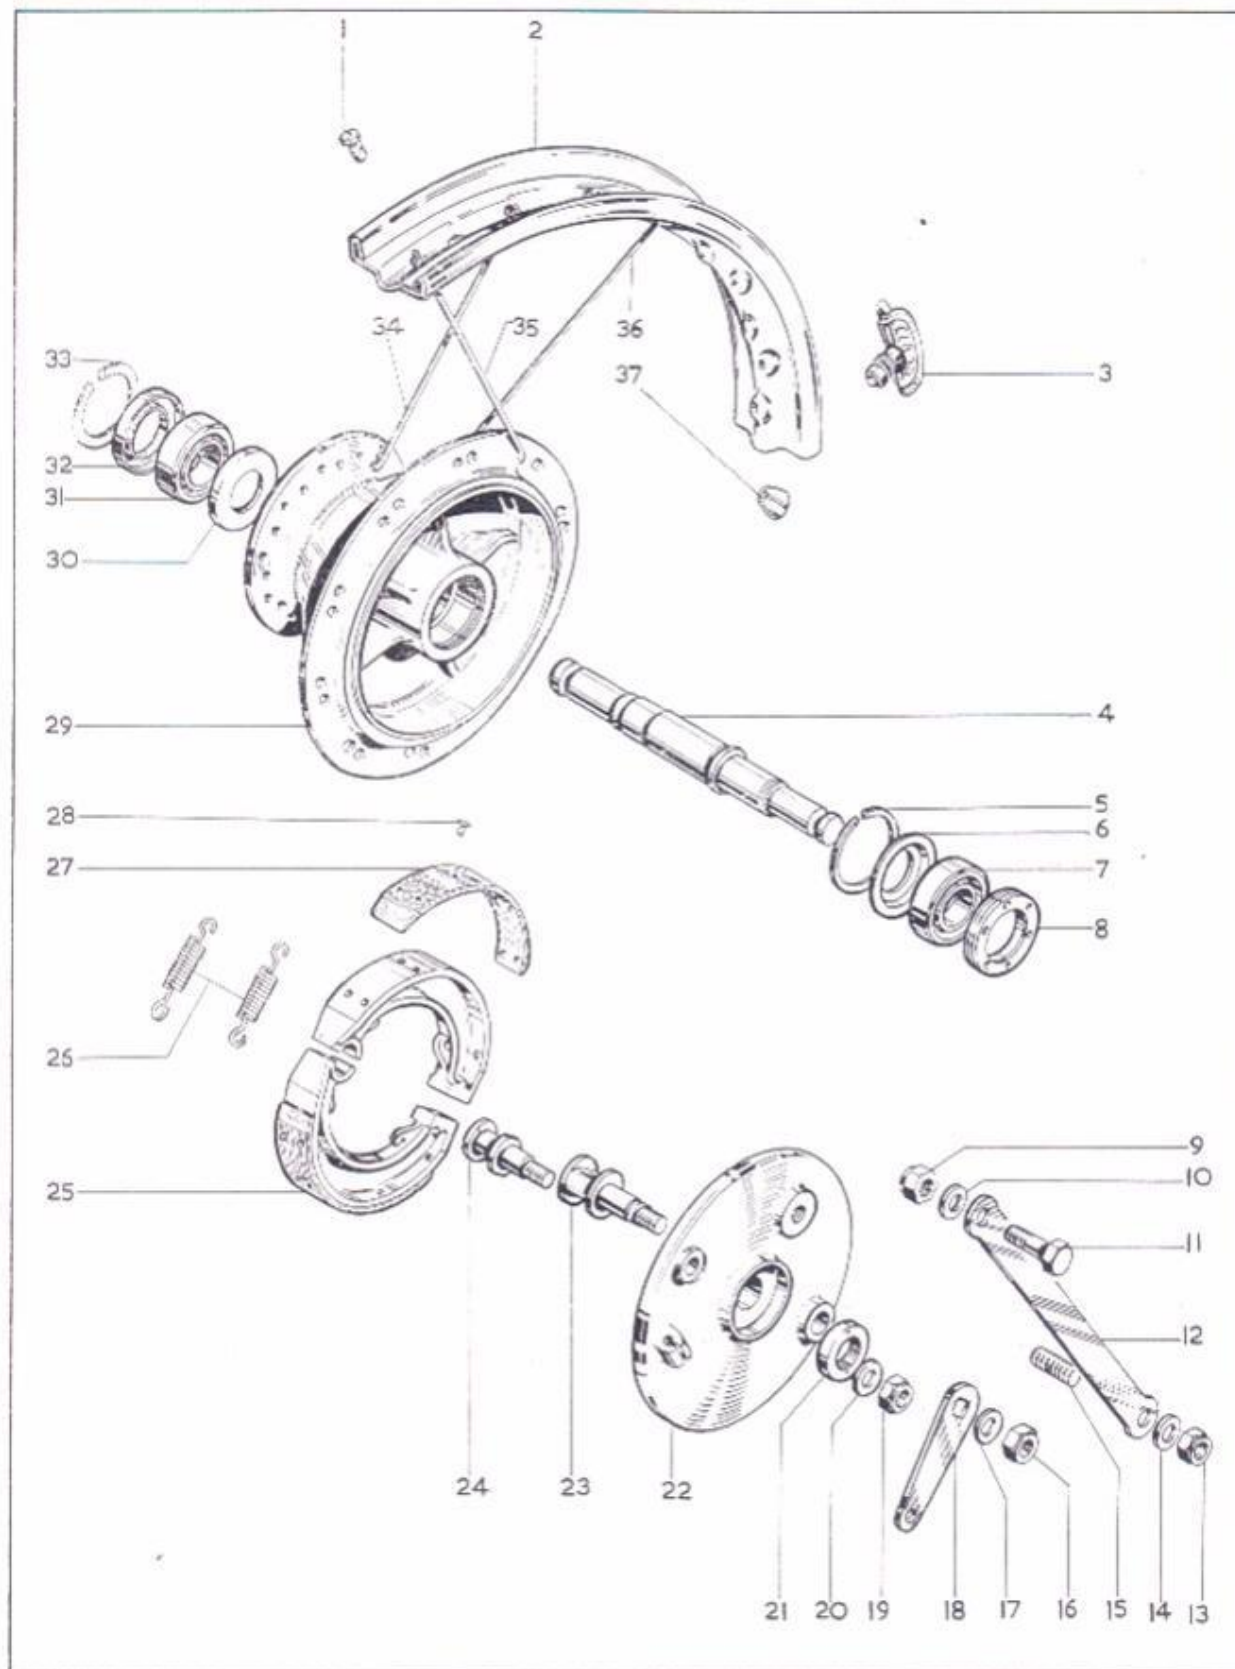


Plate 14

FRONT WHEEL (6" Brake)

Model	Plate Ref.	Spares Number	Description	Per Set
T	MC	1 27-6810	Spoke nipple	40
T	MC	2 37-3795	Wheel rim (WM1 - 20)	1
T	MC	3 37-3584	Security bolt	1
T	MC	4 37-3796	Wheel spindle	1
T	MC	5 60-2632	Circlip — grease retainer, right	1
T	MC	6 37-3797	Grease retainer — right	1
T	MC	7 37-0653	Bearing (Hoffmann 120)	1
T	MC	8 37-3759	Lock ring	1
T	MC	9 14-1304	Locknut — anchor strap to leg ($\frac{1}{16}$ " UN.F.)	1
T	MC	10 60-2332	Washer — locknut, anchor strap to leg ($29/64$ " $\times$ $\frac{3}{8}$ " $\times$ $3/64$ ")	1
T	MC	11 14-0134	Bolt — anchor strap to leg ($\frac{1}{16}$ " UN.F. $\times$ $1\frac{1}{4}$ ")	1
T	MC	12 83-2660	Anchor strap	1
T	MC	13 14-1304	Locknut — anchor strap to brake plate ($\frac{1}{16}$ " UN.F.)	1
T	MC	14 60-2332	Washer — locknut, anchor strap to brake plate ($25/64$ " $\times$ $\frac{3}{8}$ " $\times$ $3/64$ ")	1
T	MC	15 21-2063	Stud — anchor strap to brake plate	1
T	MC	16 14-1303	Locknut — brake lever ($\frac{3}{8}$ " UN.F.)	1
T	MC	17 60-2331	Washer — locknut, brake lever ($25/64$ " $\times$ $\frac{3}{8}$ " $\times$ $3/64$ ")	1
T	MC	18 37-3694	Brake lever	1
T	MC	19 14-1303	Locknut — fulcrum pin ($\frac{3}{8}$ " UN.F.)	1
T	MC	20 60-2331	Washer — locknut, fulcrum pin ($25/64$ " $\times$ $\frac{3}{8}$ " $\times$ $3/64$ ")	1
T	MC	21 37-3758	Locknut — wheel spindle ($25/64$ " $\times$ $\frac{3}{8}$ " $\times$ $3/64$ ")	1
T	MC	22 37-3704	Brake anchor plate	1
T	MC	23 37-3799	Brake cam complete	1
T	MC	24 37-3798	Fulcrum pin	1
T	MC	25 37-3804	Brake shoe complete	2
T	MC	26 65-5904	Brake shoe spring	2
T	MC	27 19-7707	Brake shoe lining	2
T	MC	28 29-5853	Rivet — brake shoe lining	16
T	MC	29 37-3793	Hub complete with spindle and bearings	1
T	MC	30 37-1481	Grease retainer — left, inner	1
T	MC	31 37-0653	Bearing (Hoffmann 120)	1
T	MC	32 37-1237	Grease retainer — left, outer	1
T	MC	33 57-0280	Circlip — grease retainer, left	1
T	MC	34 37-3697	Spoke — left	20
T	MC	35 37-3696	Spoke — outer, right	10
T	MC	36 37-3695	Spoke — inner, right	10
T	MC	37 42-5873	Balance weight — $\frac{1}{4}$ "	as reqd.
T	MC	37 42-5875	Balance weight — 1"	as reqd.
T	MC	42-5836†	Pivot pin — front brake cable to lever	1
T	MC	60-2683†	Split pin — brake cable pivot pin	1
T	MC	60-3152†	Gaiter — front brake cable	1


*Not illustrated.

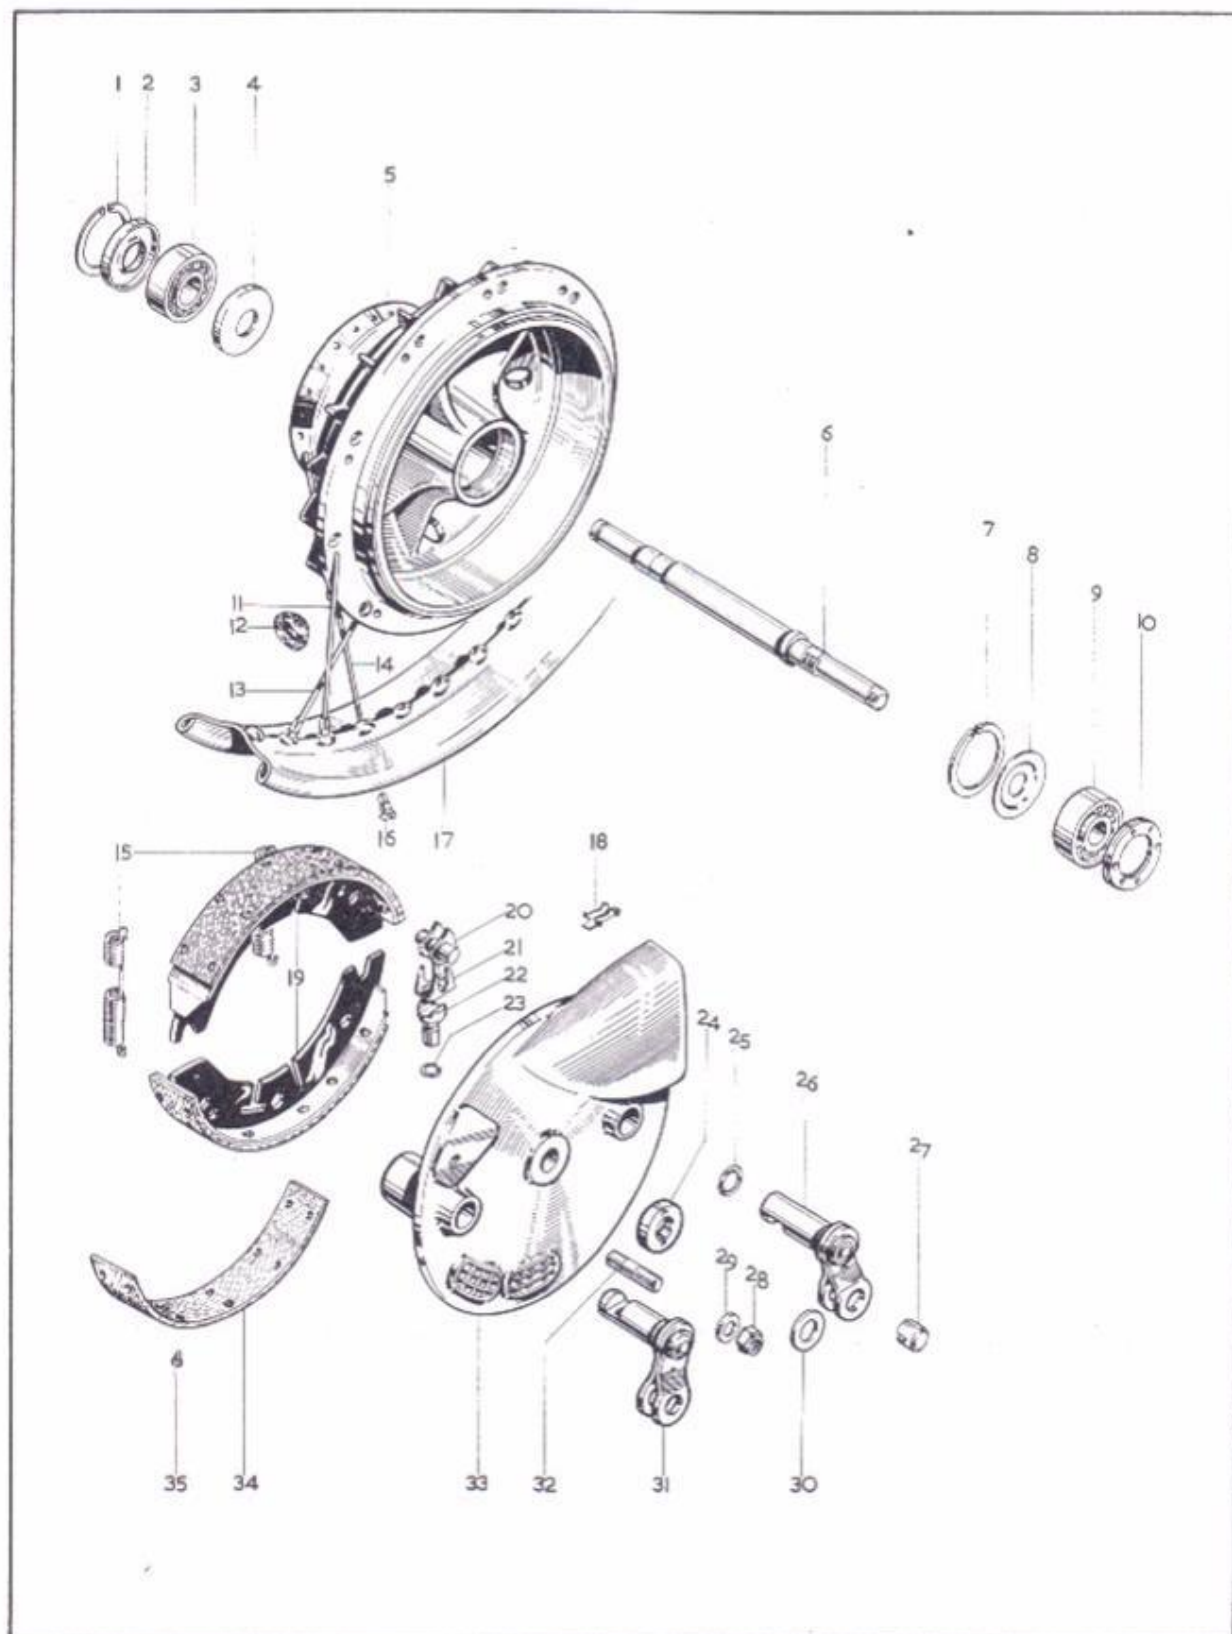

FRONT WHEEL (8" Brake)


Model	Plate Ref.	Spares Number	Description	Per Set
SS H	1	57-0280	Circlip — grease retainer, left	1
SS H	2	37-1237	Grease retainer — left, outer	1
SS H	3	37-0653	Bearing — left (Hoffmann 120)	1
SS H	4	37-1481	Grease retainer — left, inner	1
SS H	5	37-3848	Hub with spindle and bearings	1
SS H	6	37-3796	Wheel spindle	1
SS H	7	60-2632	Circlip — grease retainer, right	1
SS H	8	37-3797	Grease retainer — right	1
SS H	9	37-0653	Bearing — right (Hoffmann 120)	1
SS H	10	37-3759	Lock ring — bearing	1
SS H	11	37-3817	Spoke — right, outer	10
SS H	12	60-2594	Grommet — brake drum	1
SS H	13	37-3816	Spoke — right, inner	10
SS H	14	37-3726	Spoke — left	20
SS H	15	19-7745	Spring — brake shoe	2
SS H	16	27-6810	Spoke nipple	40
SS H	17	37-3785	Wheel rim (WM2 / 18)	1
SS H	18	19-7743	Abutment — Micram adjuster (Lockheed 25241)	2
SS H	19	19-7744	Brake shoe complete (Lockheed 4523-166)	2
SS H	20	19-7742	Micram adjuster (Lockheed 3135-514)	2
SS H	21	19-7741	Cage — brake adjuster (Lockheed 25253)	2
SS H	22	37-3762	Tappet — brake cam	2
SS H	23	37-3761	"O" ring — brake tappet	2
SS H	24	37-3758	Locknut — wheel spindle	1
SS H	25	60-2639	"O" ring — brake cam	2
SS H	26	37-3913	Brake lever complete — front	1
SS H	27	37-3868	Bush — cable to levers	2
SS H	28	14-1803	Locknut — anchor plate to fork ($\frac{3}{8}$ " UN.F.)	1
SS H	29	37-2338	Washer — anchor plate to fork	1
SS H	30	67-0645	Washer — cable to lever bush	2
SS H	31	37-3914	Brake lever complete — rear	1
SS H	32	14-1636	Stud — anchor plate to fork ($\frac{3}{8}$ " UN.C./UN.F. / $1\frac{1}{4}$ ")	1
SS H	33	37-3655	Brake anchor plate	1
SS H	34	19-7466	Lining — brake shoe	2
SS H	35	19-7467	Rivet — brake shoe	10
SS H		37-3932†	Distance piece — front wheel spindle, inner side right bearing	1

†Not illustrated.

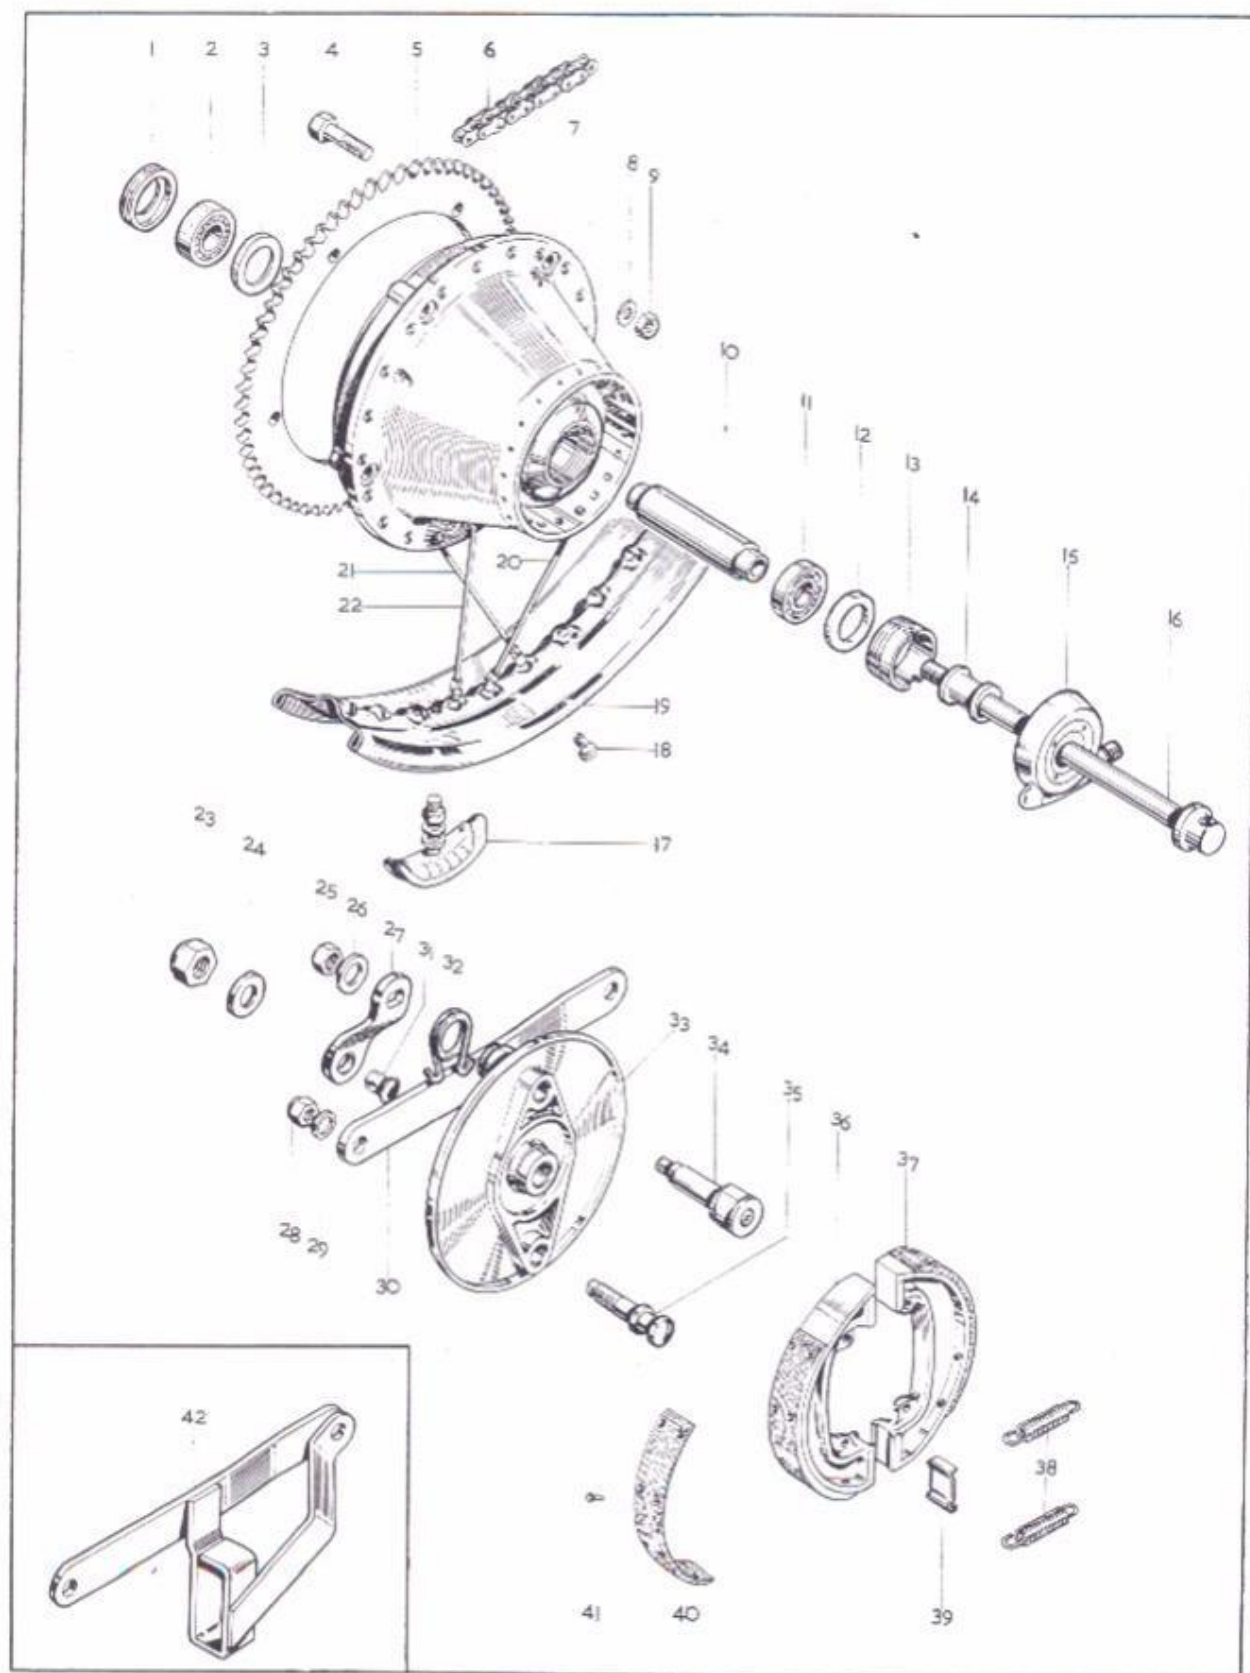

Model	Plate Ref.	Spares Number	Description	Per Set
T SS H MC	1	37-3752	Lock ring — left	1
T SS H	2	37-0653	Bearing — left (Hoffmann 120)	1
MC	2	37-1340	Bearing — left (Hoffmann 120RS)	1
T SS H MC	3	37-3749	Support ring — left	1
T SS H MC	4	14-0207	Bolt — sprocket to hub ($\frac{1}{2}$ " UN.F. $\times$ 2")	5
T SS H MC	5	37-3741	Sprocket — 52 teeth, rear wheel	1
T MC	6	19-8701	Chain — rear ($\frac{3}{8}$ " $\times$ $\frac{1}{4}$ " $\times$ 107 pitches)	1
SS H	6	19-8702	Chain — rear ($\frac{3}{8}$ " $\times$ $\frac{1}{4}$ " $\times$ 108 pitches)	1
T SS H	7	37-3907	Hub — rear, with spindle and bearings	1
MC	7	37-3908	Hub — rear, with spindle and bearings	1
T SS H MC	8	60-2320	Washer — sprocket bolt ($\frac{3}{32}$ " $\times$ $\frac{9}{16}$ " $\times$ $\frac{1}{16}$ ")	5
T SS H MC	9	14-1301	Nut — sprocket to hub ($\frac{1}{2}$ " UN.F.)	5
T SS H MC	10	37-3753	Spacer — bearing	1
T SS H	11	37-0653	Bearing — right (Hoffmann 120)	1
MC	11	37-1340	Bearing — right (Hoffmann 120RS)	1
T SS H	12	37-1654	Grease retainer — right	1
MC	12	37-3909	Grease retainer assembly — right	1
T SS H MC	13	37-3751	Ring — speedometer drive	1
T SS H MC	14	37-3750	Distance piece — speedometer drive	1
T	15	19-9224	Speedometer drive — gearbox 21/10 (BG.5330/104)	1
SS H	15	19-9223	Speedometer drive — gearbox 2/1 (BG.5330/24)	1
T SS H MC	16	37-3774	Spindle — rear wheel	1
T H MC	17	37-3468	Security bolt	2
T SS H MC	18	27-6810	Spoke nipple	40
T MC	19	37-3784	Rim (WM3 $\times$ 18)	1
SS H	19	37-3785	Rim (WM2 $\times$ 18)	1
T SS H MC	20	37-3726	Spoke — right	20
T SS H MC	21	37-3725	Spoke — left, outer	10
T SS H MC	22	37-3724	Spoke — left, inner	10
T SS H MC	23	14-1307	Locknut — rear wheel spindle ($\frac{1}{2}$ " UN.F.)	1
T SS H MC	24	83-2266	Washer — rear wheel spindle	1
T SS H MC	25	14-1303	Locknut — brake lever ($\frac{3}{8}$ " UN.F.)	1
T SS H MC	26	60-2331	Washer — brake lever	1
T SS H MC	27	37-3877	Brake lever	1
T SS H MC	28	14-1305	Locknut — torque arm to brake pivot ($\frac{1}{2}$ " UN.F.)	1
T SS H MC	29	60-2333	Washer — torque arm to brake pivot ($\frac{33}{64}$ " $\times$ 1" $\times$ $\frac{1}{32}$ ")	1
SS H	30	83-2023	Torque arm	1
T SS H MC	31	37-1467	Brake rod pivot pin	1
T SS H MC	32	37-3880	Return spring — brake lever	1
T SS H MC	33	37-3857	Brake anchor plate	1
T SS H MC	34	37-3872	Brake cam	1
T SS H MC	35	37-3870	Brake pivot	1
T SS H MC	36	37-3925	Brake shoe complete — leading	1
T SS H MC	37	37-3926	Brake shoe complete — trailing	1
T SS H MC	38	65-5904	Spring — brake shoe	2
T SS H MC	39	41-6078	Brake pivot pad	2
T SS H MC	40	19-7740	Brake shoe lining	2
T SS H MC	41	42-5840	Rivet — brake shoe	16
T MC	42	83-2022	Torque arm — chain guide	1

Plate 17

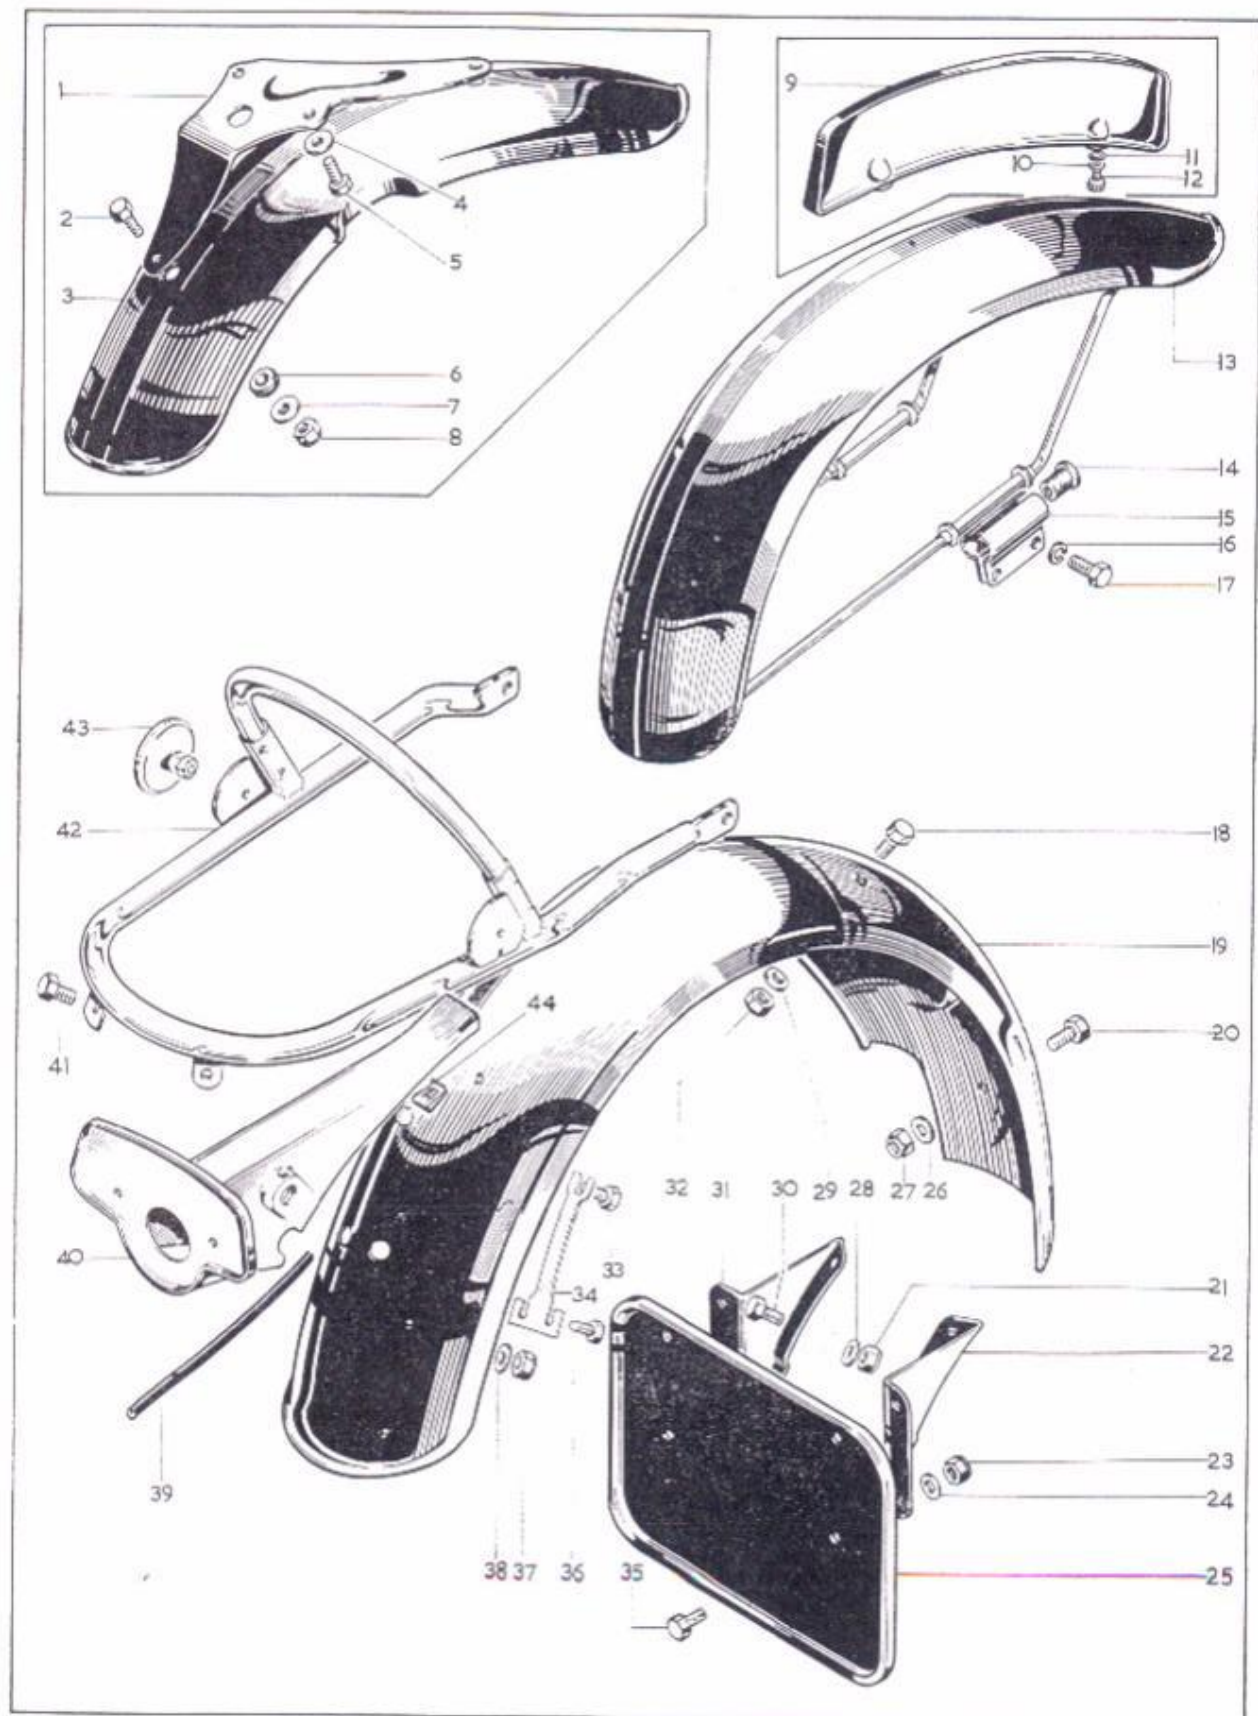


Model	Plate Ref.	Spares Number	Description	Per Set
T MC	1	97-4075	Bracket — front mudguard	1
T MC	2	14-0114	Bolt — mudguard to bracket ($\frac{5}{16}$ " UN.F. $\times$ $\frac{1}{2}$ ")	2
T	3	97-4154	Front mudguard complete	1
MC	3	97-4072	Front mudguard complete	1
T MC	4	60-2348	Washer — bracket to bottom yoke ($21/64$ " $\times$ $\frac{3}{4}$ " $\times$ $3/64$ ")	2
T MC	5	14-6114	Bolt — bracket to bottom yoke ($\frac{5}{16}$ " UN.C. $\times$ $\frac{1}{2}$ ")	2
T MC	6	60-3242	Grommer — mudguard fixing	2
T MC	7	60-2348	Washer — bracket to mudguard ($21/64$ " $\times$ $\frac{3}{4}$ " $\times$ $3/64$ ")	2
T MC	8	14-1302	Locknut — bracket to mudguard ($\frac{5}{16}$ " UN.F.)	2
H	9	83-2834	Front number plate	1
H	10	90-6219	Washer — front number plate fixing	2
H	11	60-3398	Neoprene "O" ring — front number plate fixing	2
H	12	40-3044	Screw — front number plate fixing	2
H	13	97-4127	Front mudguard complete	1
SS	13	97-4052	Front mudguard complete	1
SS H	14	97-4021	Rubber bush — mudguard stay	4
SS H	15	97-4022	Bracket — mudguard stay to fork	4
SS H	16	60-2427	Lockwasher — mudguard stay	4
SS H	17	14-0103	Bolt — mudguard stay ($\frac{1}{4}$ " UN.F. $\times$ $\frac{3}{4}$ ")	4
T SS H	18	14-0101	Bolt — mudguard to frame ($\frac{1}{4}$ " UN.F. $\times$ $\frac{1}{2}$ ")	4
T SS H	19	83-2263	Rear mudguard	1
MC	19	83-2934 [‡]	Rear mudguard	1
T SS H MC	20	14-0101	Bolt — mudguard fixing ($\frac{1}{4}$ " UN.F. $\times$ $\frac{1}{2}$ ")	1
T SS H	21	14-1301	Locknut — bracket to mudguard, lower ($\frac{1}{4}$ " UN.F.)	2
T SS H	22	83-2728	Bracket — number plate mounting	1
T SS H	23	14-1301	Locknut — number plate mounting ($\frac{1}{4}$ " UN.F.)	4
T SS H	24	60-2329	Washer — number plate mounting ($17/64$ " $\times$ $\frac{9}{16}$ " $\times$ $\frac{1}{32}$ ")	4
T SS H	25	83-2726	Rear number plate	1
T SS H MC	26	27-8560	Washer — mudguard fixing ($17/64$ " $\times$ $\frac{3}{4}$ " $\times$ $3/64$ ")	1
T SS H MC	27	14-1301	Locknut — mudguard fixing ($\frac{1}{4}$ " UN.F.)	1
T SS H	28	60-2329	Washer — bracket to mudguard, lower ($17/64$ " $\times$ $\frac{9}{16}$ " $\times$ $\frac{1}{32}$ ")	2
T SS H	29	27-8560	Washer — mudguard to frame ($17/64$ " $\times$ $\frac{3}{4}$ " $\times$ $3/64$ ")	4
T SS H	30	14-0101	Bolt — bracket to mudguard, lower ($\frac{1}{4}$ " UN.F. $\times$ $\frac{1}{2}$ ")	2
T SS H	31	83-2727	Bracket — number plate mounting	1
T SS H	32	14-1301	Locknut — mudguard to frame ($\frac{1}{4}$ " UN.F.)	4
T SS H	33	14-6101	Bolt — lamp mounting bracket, front fixing ($\frac{1}{4}$ " UN.C. $\times$ $\frac{1}{2}$ ")	1
T SS H	34	83-3254	Triple "cee" washer — lamp bracket to mudguard	1
T SS H	35	14-0101	Bolt — number plate fixing ($\frac{1}{4}$ " UN.F. $\times$ $\frac{1}{2}$ ")	4
T SS H	36	14-0101	Bolt — lamp mounting bracket, rear fixing ($\frac{1}{4}$ " UN.F. $\times$ $\frac{1}{2}$ ")	2
T SS H	37	14-1301	Locknut — support rail and number plate bracket ($\frac{1}{4}$ " UN.F.)	2
T SS H	38	27-8560	Washer — support rail and number plate bracket ($17/64$ " $\times$ $\frac{3}{8}$ " $\times$ $3/64$ ")	2
T SS H	39	83-3212	Rubber heading — lamp mounting bracket	2
T SS H	40	83-2693	Bracket — rear lamp mounting	1
T SS H	41	14-0102	Bolt — support rail and number plate bracket ($\frac{1}{4}$ " UN.F. $\times$ $\frac{3}{8}$ ")	2
T SS H	42	83-3174	Support rail — rear mudguard	1
T SS H	43	19-1339	Reflector — rear, side	2
T SS H	44	60-3313	Spire nut — rear lamp mounting bracket	1

For colour finish code refer to page 5.

[‡]For Moto-Cross rear mudguard fixing refer to page 61.

Plate 18

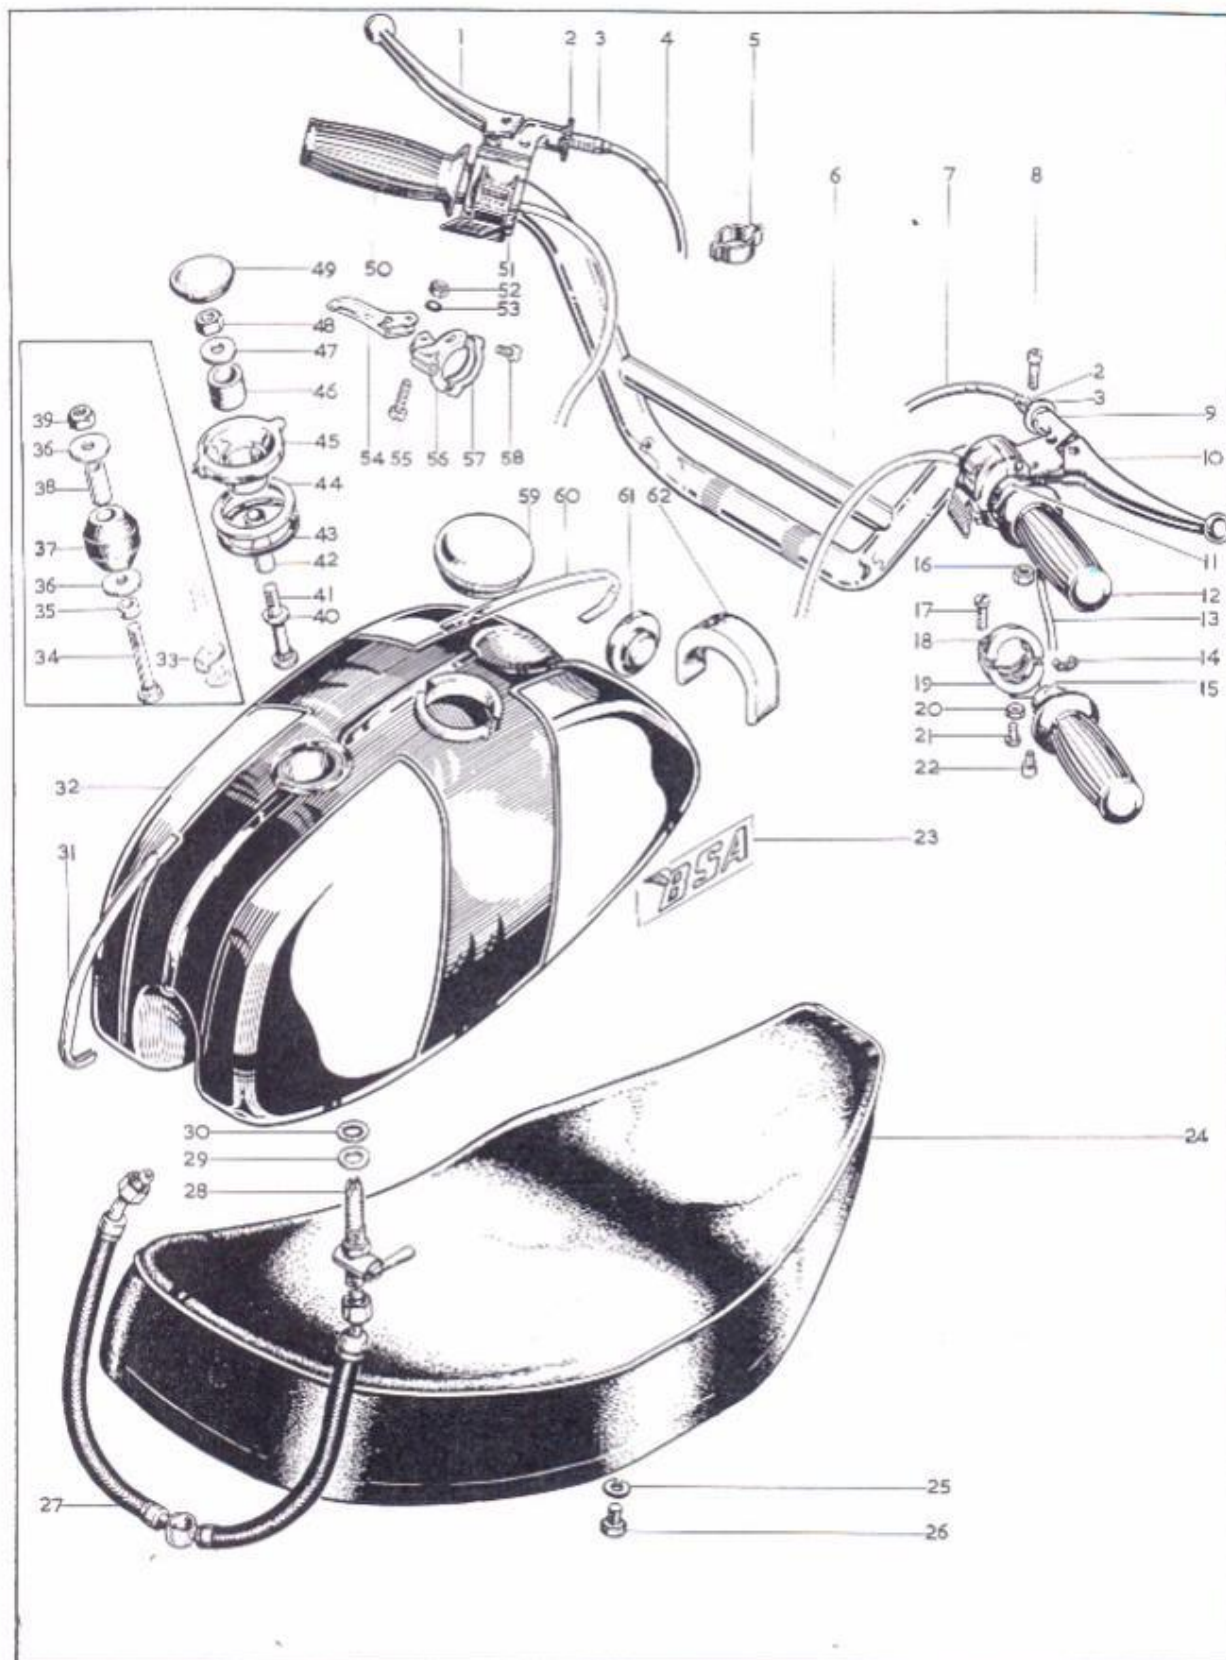

Model	Plate Ref.	Spares Number	Description	Per Set
		B.S.A. MAKERS		
T	1	60-2627	Lever — clutch control	1
SS H	1	60-3144	Lever — clutch control	1
MC	1	60-3207	Lever — clutch control complete	1
T SS H	2	60-2072	Adjuster nut — control cables	2
T SS H	3	60-2071	Adjuster — control cables	2
T SS H MC	4	60-2083	Clutch cable	1
T SS H	5	97-4112	Cable clip	4
T MC	6	97-4062	Handlebar	1
SS H	6	97-4173	Handlebar	1
SS H	7	60-3075	Cable — front brake	1
T MC	7	60-3390	Cable — front brake	1
T SS H	8	21-2048	Pivot pin — control levers	2
T SS H	9	19-13322	Switch assembly — right	1
T	10	60-2628	Lever — front brake	1
SS H	10	60-3143	Lever — front brake	1
MC	10	60-3208	Front brake control lever complete	1
T SS H	11	19-7223	Throttle control	1
MC	11	19-9502	Throttle control — quick action	1
T SS H	12	19-7222	Rubber grip — right handlebar	1
MC	12	19-9526	Rubber grip — right handlebar	1
T SS H	13	40-8657	Cable — throttle control	1
MC	13	60-3499	Cable — throttle control	1
T SS H	14	16-008	Friction spring	1
T SS H	15	16-091	Rotor — throttle control	1
T SS H	16	14-1301	Nut — pivot pin	2
T SS H	17	11-013	Clamp screw	2
T SS H	18	16-328	Body — top half	1
T SS H	19	16-329	Body — bottom half	1
T SS H	20	16-010	Nut — friction screw	1
T SS H	21	16-009	Screw — friction spring	1
T SS H	22	16-011	Cable stop — throttle control	1
T SS H MC	23	60-3158	Transfer — petrol tank	2
MC	23	60-3256	Transfer — petrol tank	2
T SS	24	83-2621	Twinseat	1
H	24	83-3198	Twinseat	1
MC	24	83-2746	Short seat complete	1
T SS H	25	60-2428	Spring washer — seat bolt ($39/64" \times \frac{11}{32}" \times \frac{1}{8}"$)	2
T SS H	26	14-0113	Bolt — seat fixing ($\frac{1}{4}"$ U.N.F. $\times \frac{3}{8}"$)	2
MC		83-2742†	Front bracket — seat fixing	1
MC		14-0113†	Bolt — front bracket to seat	2
MC		14-0216†	Bolt — rear fixing	2
MC		83-2745†	Distance piece — rear fixing	2
MC		60-2428†	Spring washer ($39/64" \times \frac{11}{32}" \times \frac{1}{8}"$)	4
T SS H	27	83-3040	Petrol pipe	1
MC	27	83-3208	Petrol pipe	1
T SS H MC	28	83-2800	Petrol tap	1
T SS H	28	83-2801	Petrol tap — reserve	1
T SS H MC	29	83-0002	Washer — petrol tap	2
T SS H MC	30	70-7351	Sealing washer — petrol tap	2

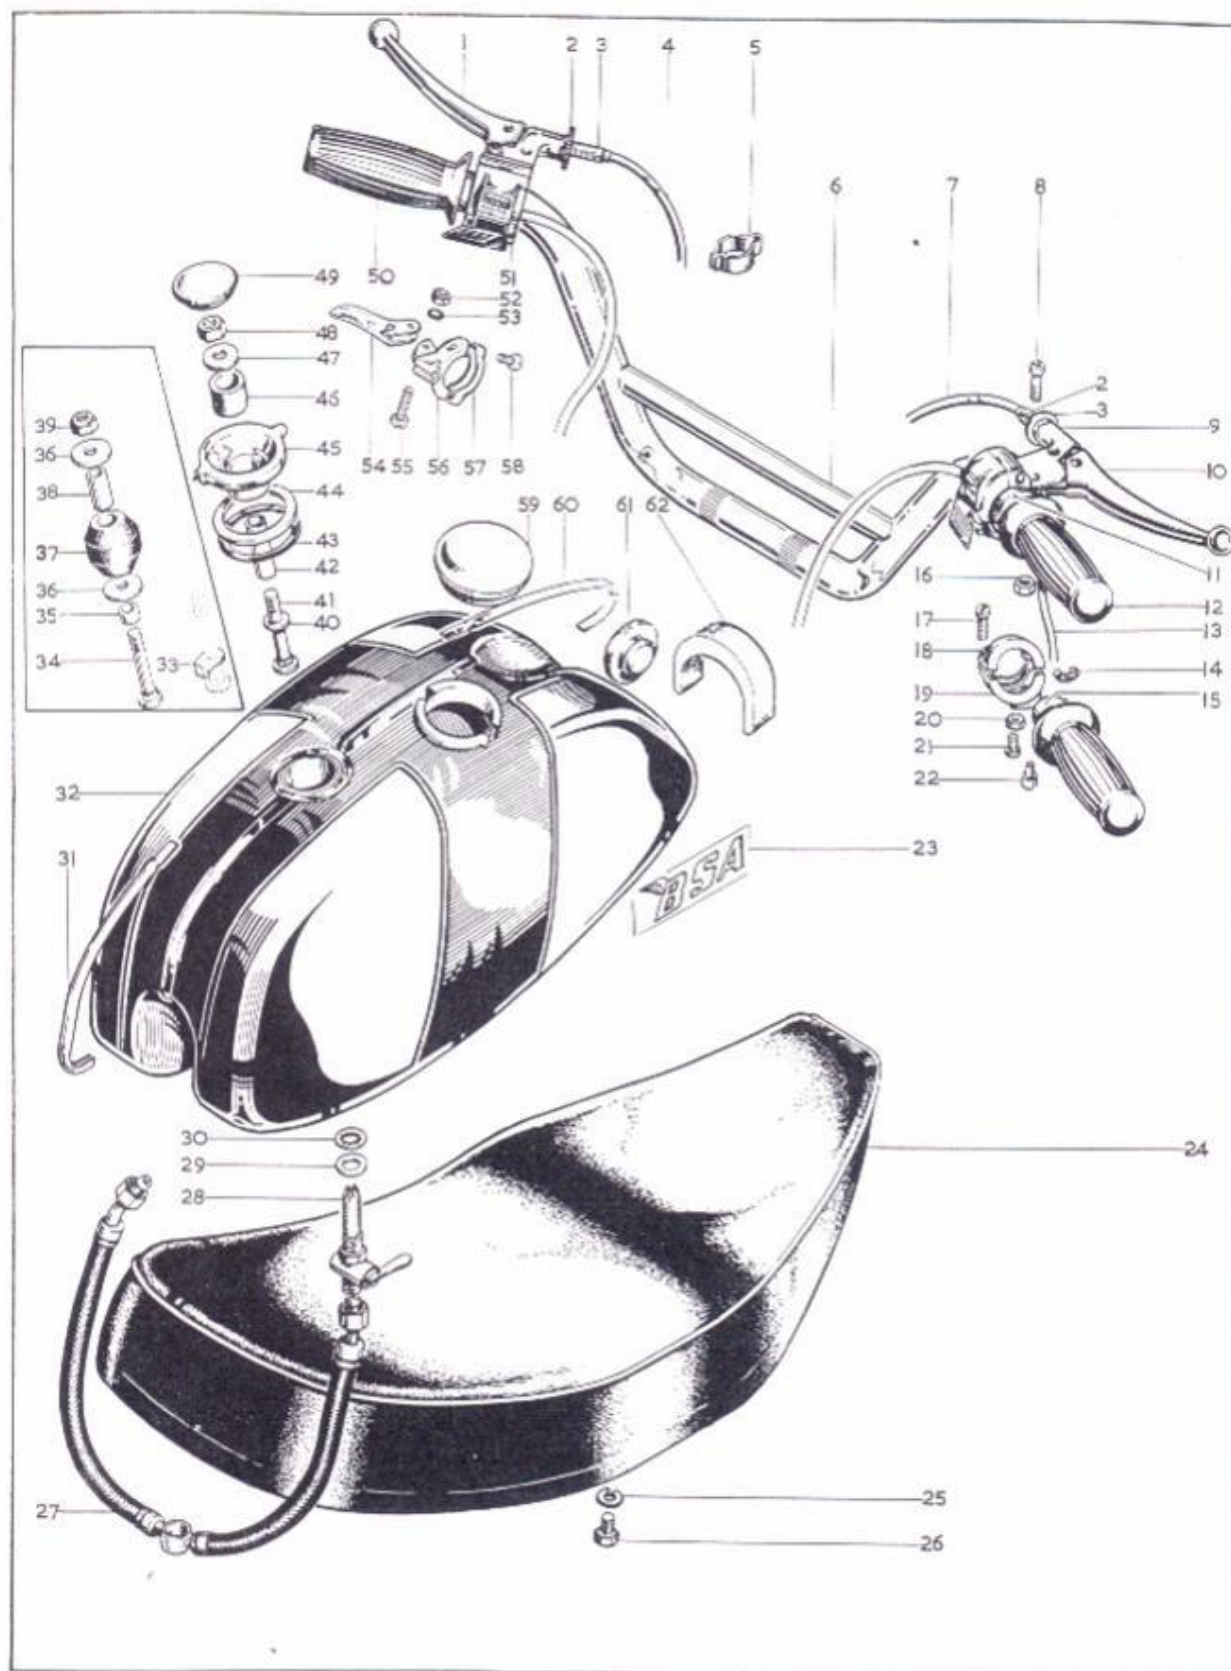



Plate 18—continued

PETROL TANK — TWINSEAT — CONTROLS

Model	Plate Ref.	Spares Number	Description	Per Set	
		B.S.A.	MAKERS		
SS	31	83-3056	Trim strip — petrol tank, rear	1	
H	31	83-3180	Trim strip — petrol tank, rear	1	
T		32	83-2652	Petrol tank	1
MC	32	83-2721	Petrol tank	1	
SS	32	83-3050	Petrol tank	1	
H	32	83-2998	Petrol tank	1	
H	33	82-9795	Tapered washer — petrol tank, centre bolt	1	
T SS	MC	34	83-2776	Bolt — petrol tank, centre fixing	1
T	MC	35	82-3017	Distance collar — petrol tank, centre	1
T	MC	36	03-0101	Washer — petrol tank, centre bolt	2
T	MC	37	40-8085	Mounting rubber — petrol tank, centre	2
T	MC	38	76-4120	Distance tube — petrol tank, centre	1
T	MC	39	14-1302	Locknut — petrol tank, centre bolt ($\frac{5}{16}$ " U.S.F.)	1
SS	40	02-0370	Washer — petrol tank, centre fixing (15/64" × 37/64" - 3/64")	1	
H	41	83-3042	Bolt — petrol tank, centre fixing	1	
H	42	41-8011	Distance tube — petrol tank, centre ($\frac{11}{32}$ " - $\frac{15}{32}$ " × 2 $\frac{1}{2}$ ")	1	
SS	42	40-8066	Distance tube — petrol tank, centre ($\frac{11}{32}$ " - $\frac{15}{32}$ " - 1 $\frac{3}{4}$ ")	1	
SS H	43	68-8013	Rubber ring — petrol tank mounting	1	
SS H	44	68-8019	Mounting ring — petrol tank, centre	1	
SS H	45	82-9782	Trim strip holder	1	
SS H	46	42-8017	Mounting rubber — petrol tank, centre	1	
SS H	47	68-8016	Washer — petrol tank, centre bolt	1	
SS H	48	21-1999	Nut — petrol tank, centre bolt	1	
SS H	49	83-3068	Grommet — petrol tank, centre	1	
T	MC	49	83-3069	Grommet — petrol tank, centre	1
T SS H		50	19-7221	Rubber grip — left handlebar	1
MC	50	19-9503	Rubber grip — left handlebar	1	
T SS H	51	19-1333 [‡]	39595	Switch assembly — left	1
T SS H		42-8611 [‡]	18-864	Exhaust lifter control complete	1
T SS H		41-8548 [‡]		Cable — exhaust lifter control	1
T SS H	52	19-2763	18-060	Nut — exhaust lifter fulcrum pin	1
T SS H	53	19-3087		Lockwasher — exhaust lifter fulcrum pin	1
T SS H	54	19-3085	18-871	Lever — exhaust lifter	1
T SS H	55	19-3084	11-014	Fulcrum pin — exhaust lifter lever	1
T SS H	56	19-3086	18-869	Bracket — exhaust lifter	1
T SS H	57	19-3083	12-064	Clamp — exhaust lifter	1
T SS H	58	19-3082	376-079	Screw — exhaust lifter clamp	1
SS H	59	82-3220		Filler cap — petrol tank	1
T	MC	59	83-1547	Filler cap — petrol tank	1
SS	60	83-3055		Trim strip — front	1
H	60	83-3179		Trim strip — front	1
T SS H MC	61	82-9222		Rubber — petrol tank anti-roll	1
T SS H MC	62	83-2980		Rubber — petrol tank, front	1
T SS H MC		60-3371 [‡]		Cable clips	6
T SS H MC		60-3372 [‡]		Cable clips	6


*Not illustrated.

[‡]See page 57 for handlebar switch details.

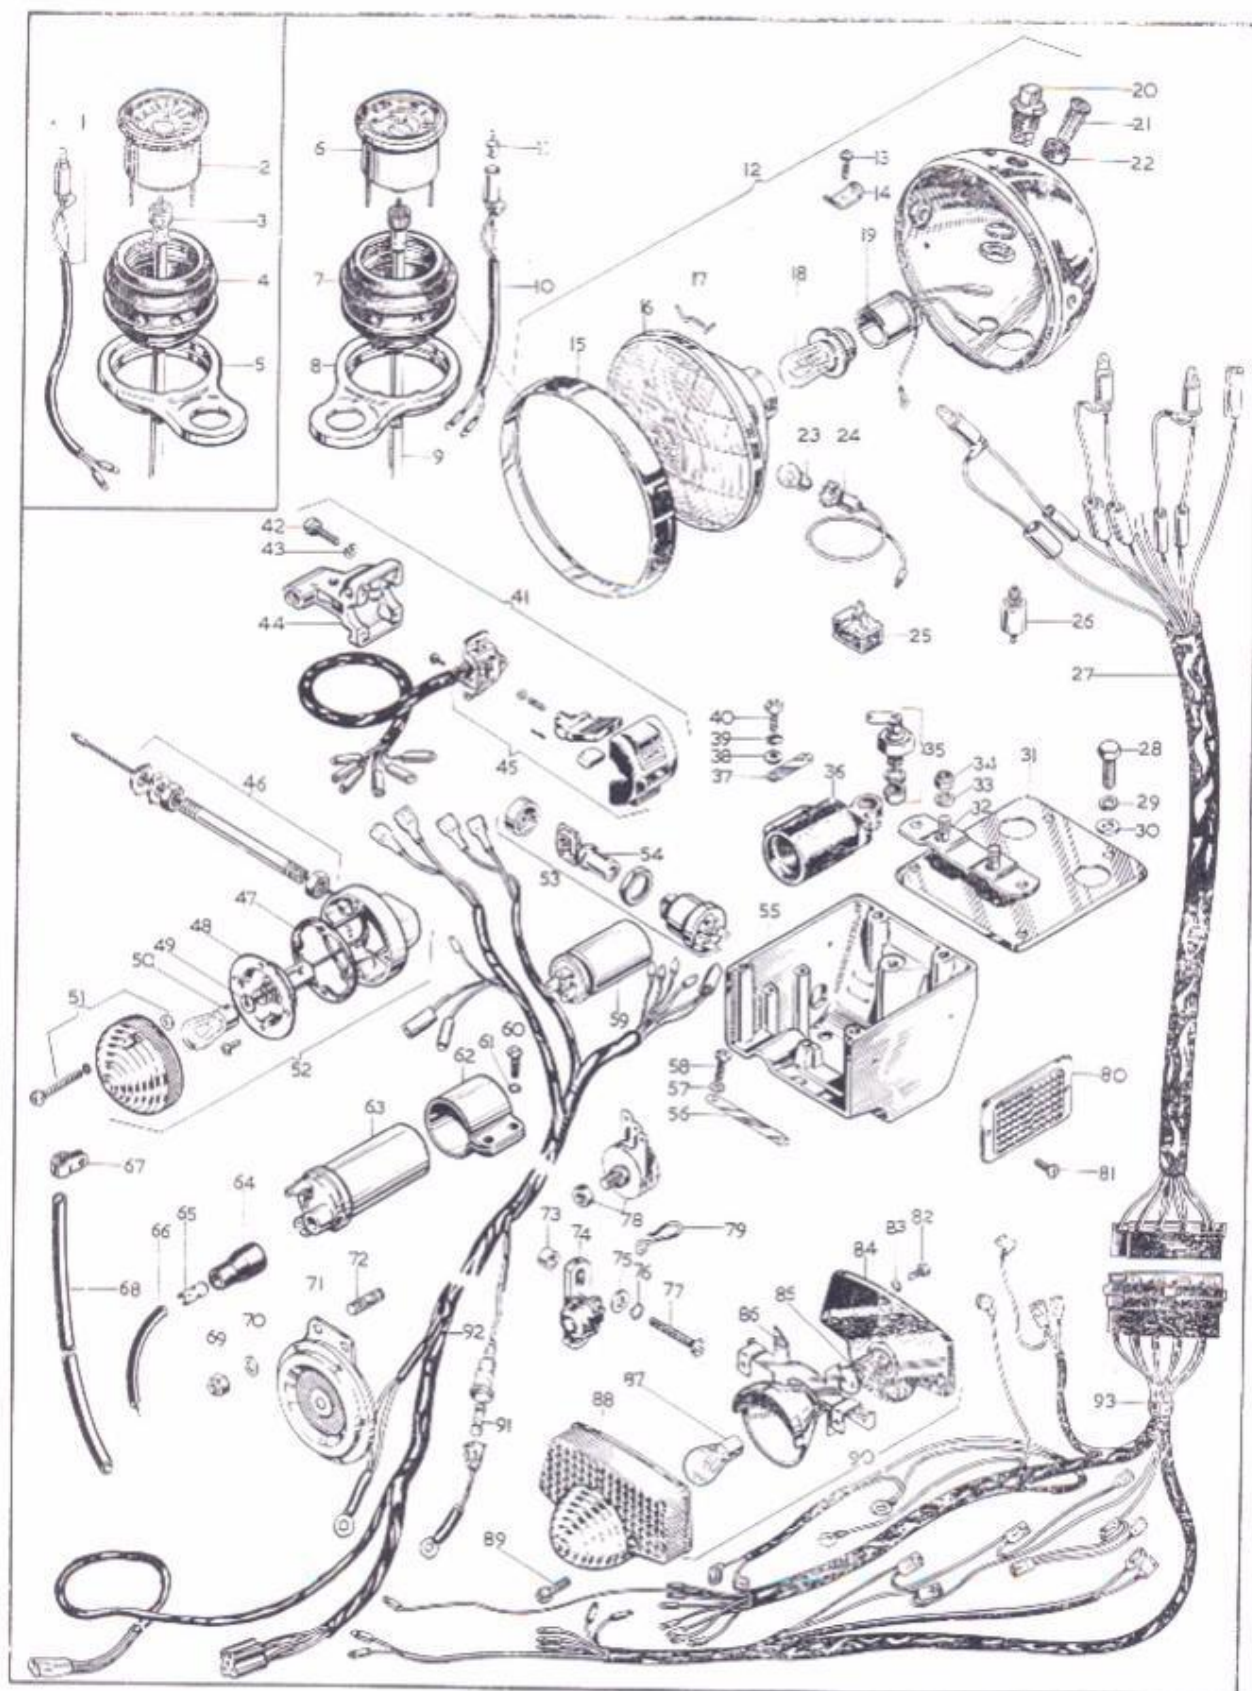

ELECTRICAL EQUIPMENT


Model	Plate Ref.	Spares Number	Description	Per Set
		B.S.A.	MAKERS	
T SS H	1	19-9101	Light lead — tachometer, 80 mm. (optional extra)	1
T SS H	2	19-8953	RSM.3003/13 Tachometer — 80 mm. (optional extra)	1
T SS H	3	19-9103	Cable — tachometer drive (optional extra)	1
T SS H	4	60-2600	Rubber cup — tachometer, 80 mm. (optional extra)	1
T SS H	5	97-4026	Mounting bracket — tachometer, 80 mm. (optional extra)	1
SS H	6	19-8955	SSM.5007/02 Speedometer — 80 mm.	1
T	6	19-8958	Speedometer — 80 mm. with reversable trip	1
T SS H	7	60-2600	Rubber cup — speedometer, 80 mm.	1
T SS H	8	97-4026	Mounting bracket — speedometer, 80 mm.	1
T SS H	9	19-9095	Cable — speedometer drive	1
T SS H	10	19 9101	Light lead — speedometer, 80 mm.	1
T SS H	11	643	Bulb — speedometer and tachometer	1
T SS H	11	281	Bulb — warning lights	4
T SS H	12	19-1094	60262 Headlamp complete	1
T SS H	13	144921	Screw — headlamp rim fixing	1
T SS H	14	534296	Plate — headlamp rim fixing	1
T SS H	15	553343	Headlamp rim	1
T SS H	16	19-1088	54525272 Light unit — headlamp	1
T SS H	17	504665	Wire clip — light unit fixing	6
T SS H	18	370	Bulb — standard, main	1
T SS H	18	19-1064	371 Bulb — main, for France	as reqd.
T SS H	19	554602	Bulb holder — main	1
T SS H	20	19-1095	31276 Lighting switch	1
T SS H	21	54363454	Ignition warning light body — red	1
T SS H	21	54363455	Main beam warning light body — green	1
T SS H	21	54363453	Direction indicator warning light body — amber	1
T SS H	22	54525212	Rubber cup — warning lights	2
T SS H	23	989	Bulb — pilot	1
T SS H	24	54573590	Bulb holder — pilot	1
T SS H	25	19-1079	35048 Flasher unit	1
T SS H	26	19-1847	54420128 Condenser	1
MC	26	19-1747	54441582 Condenser	1
T SS H	27	19-1096	54959532 Harness — headlamp to electrical box	1
T SS H	28	14-6101	Bolt — electrical box cover ($\frac{1}{2}$ " UN.C. $\times \frac{1}{2}$ ")	4
T SS H	29	60-2427	Spring washer — electrical box cover ($\frac{35}{32}$ " $\times \frac{9}{32}$ " $\times \frac{1}{16}$ ")	4
T SS H	30	02-0525	Plain washer — electrical box cover ($\frac{1}{2}$ " $\times \frac{1}{2}$ " $\times \frac{3}{64}$ ")	4
T SS H	31	83-2678	Top cover — electrical box	1
T SS H	32	83-2718	Bracket — electrical box, rear fixing	1
T SS H	33	76-0012	Washer — electrical box bracket	2

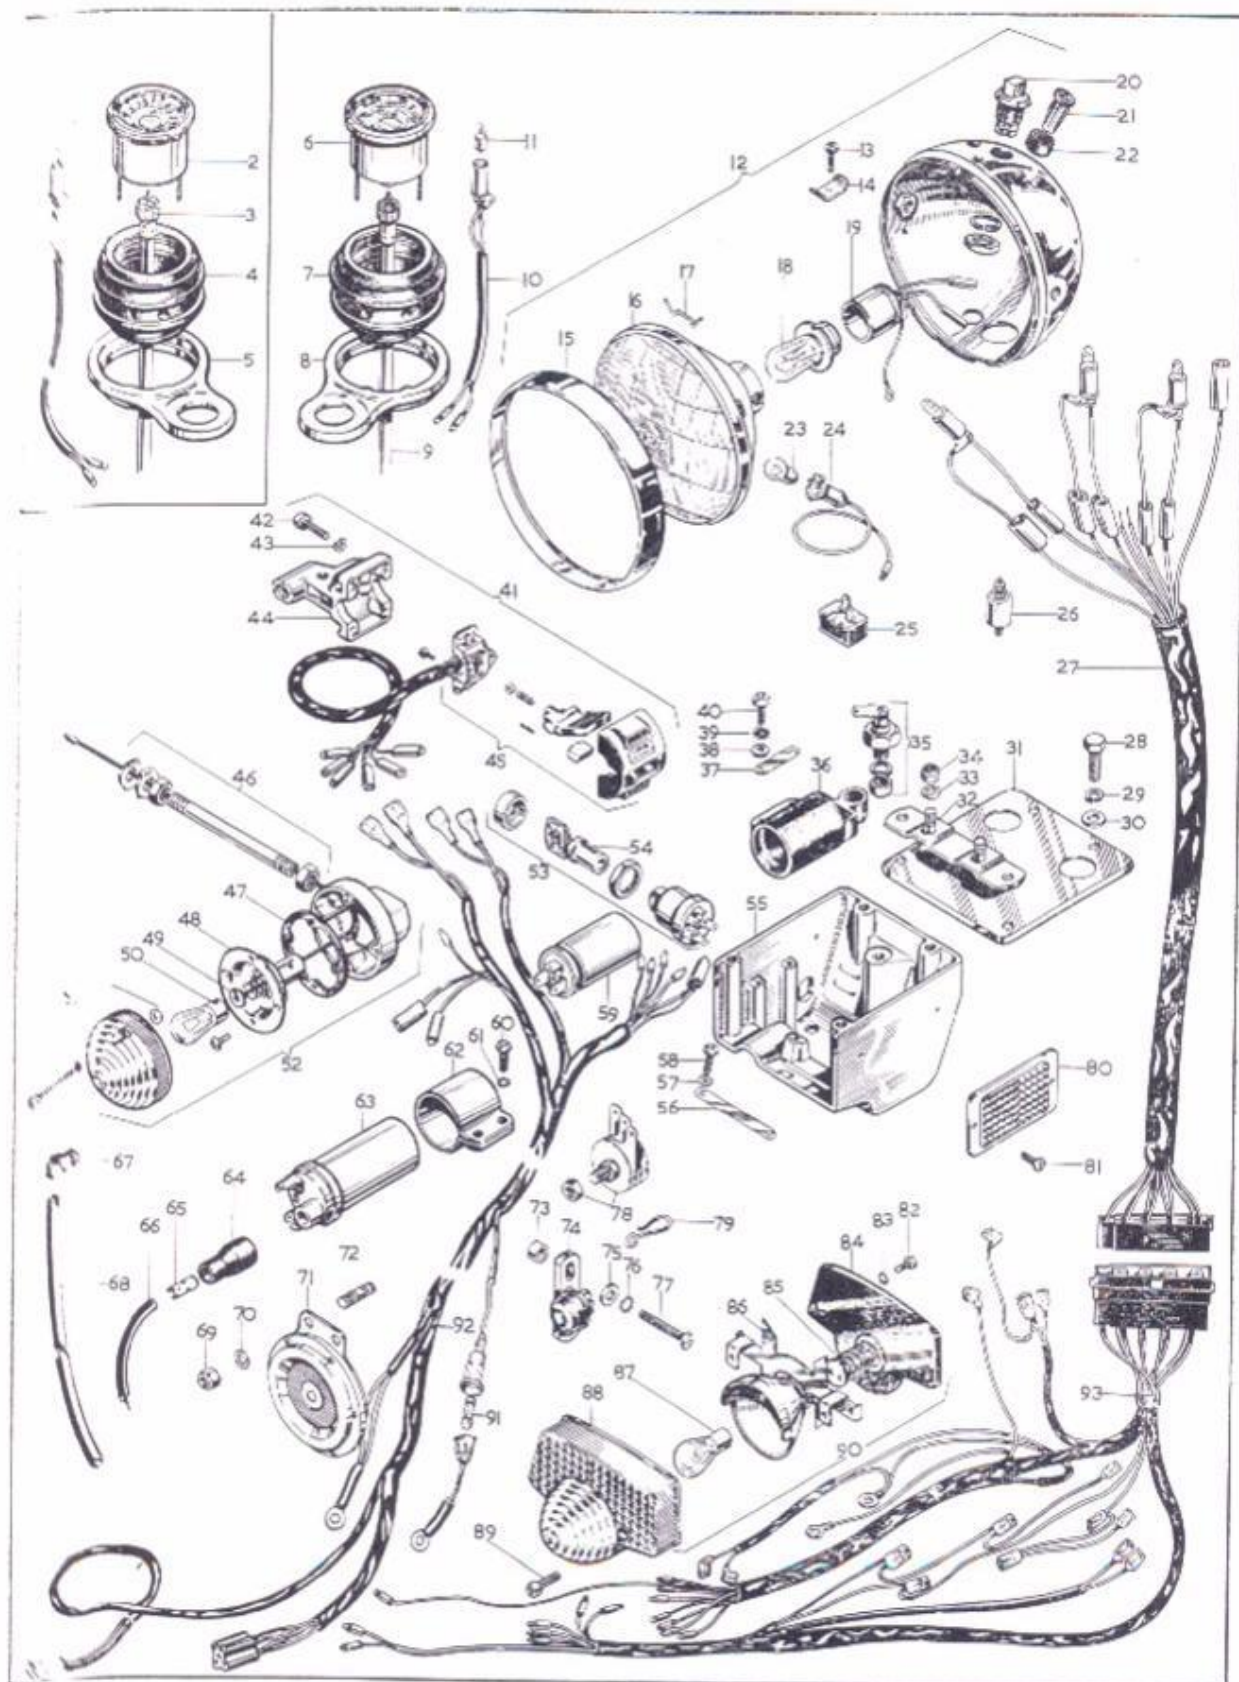

ELECTRICAL EQUIPMENT

Model	Plate Ref.	Spares Number	Description	Per Set
		B.S.A.	MAKERS	
T SS H	34	14-1302	Locknut — electrical box bracket ($\frac{5}{16}$ " UN.F.)	2
T SS H	35	19-1735	Zener diode	1
T SS H	36	19-1077	Rubber moulding — condenser, capacitor and flasher unit	1
T SS H	37	83-2669	Plate — capacitor support	1
T SS H	38	76-0293	Plain washer — capacitor moulding ($13/64"$ $\times$ $\frac{3}{8}"$ $\times$ $\frac{1}{32}"$)	2
T SS H	39	29-3319	Shakeproof washer — capacitor moulding	2
T SS H	40	21-2067	Screw — capacitor moulding	2
T SS H	41	19-1332	Switch assembly — right	1
T SS H	41	19-1333	Switch assembly — left	1
T SS H	42		Screw — handlebar switch	8
T SS H	43		Washer — handlebar switch	8
T SS H	44	19-1335	Lever half — switch assembly, left and right	2
T SS H	45	19-1337	Switch half — switch assembly, right	1
T SS H	45		Switch half — switch assembly, left	1
T SS H	46	19-1071	Tube — flasher lamp mounting, front	2
T SS H	46	10-1072	Tube — flasher lamp mounting, rear	2
T SS H	47		Gasket — flasher lamp	4
T SS H	48		Bulb holder — flasher lamp	4
T SS H	49		Interior assembly	4
T SS H	50		Bulb — flasher lamp	4
T SS H	51	19-1068	Lens assembly — flasher lamp	4
T SS H	52	19-1067	Flasher lamp complete	4
T SS H	53	19-1904	Switch — ignition and lighting	1
T SS H	54	82-6981	Lock and key — ignition and lighting switch	1
T SS H	55	83-2679	Electrical box	1
T SS H	56	83-2670	Terminal clamp strip	1
T SS H	57	76-0293	Washer — terminal clamp strip ($13/64"$ $\times$ $\frac{3}{4}"$ $\times$ $\frac{1}{32}"$)	2
T SS H	58	21-1930	Screw — terminal clamp strip	2
T SS H	59	19-1858	Capacitor	1
T SS H	60	21-2067	Screw — coil fixing	2
T SS H	61	29-3319	Shakeproof washer — coil fixing	2
T SS H	62		Coil clamp	1
T SS H	63	19-1881	Coil — ignition	1
MC	63	19-0456	Coil — energy transfer ignition	1
MC		83-3306†	Bracket — coil mounting	1
MC		14-0214†	Bolt — coil and bracket ($\frac{1}{4}"$ UN.F. $\times$ 4")	1
MC		14-0104†	Bolt — coil to bracket ($\frac{1}{4}"$ UN.F. $\times$ $\frac{1}{2}"$)	1
MC		14-0213†	Bolt — bracket to frame ($\frac{1}{4}"$ UN.F. $\times$ $3\frac{1}{2}"$)	1
MC		14-0102†	Bolt — condenser fixing ($\frac{1}{4}"$ UN.F. $\times$ $\frac{3}{4}"$)	1
MC		60-2427†	Washer — condenser fixing bolt ($29/64"$ $\times$ $\frac{9}{32}"$ $\times$ $\frac{3}{32}"$)	1
MC		14-1301†	Nut — coil bracket, frame, condenser fixing ($\frac{1}{4}"$ UN.F.)	4


†Not illustrated.

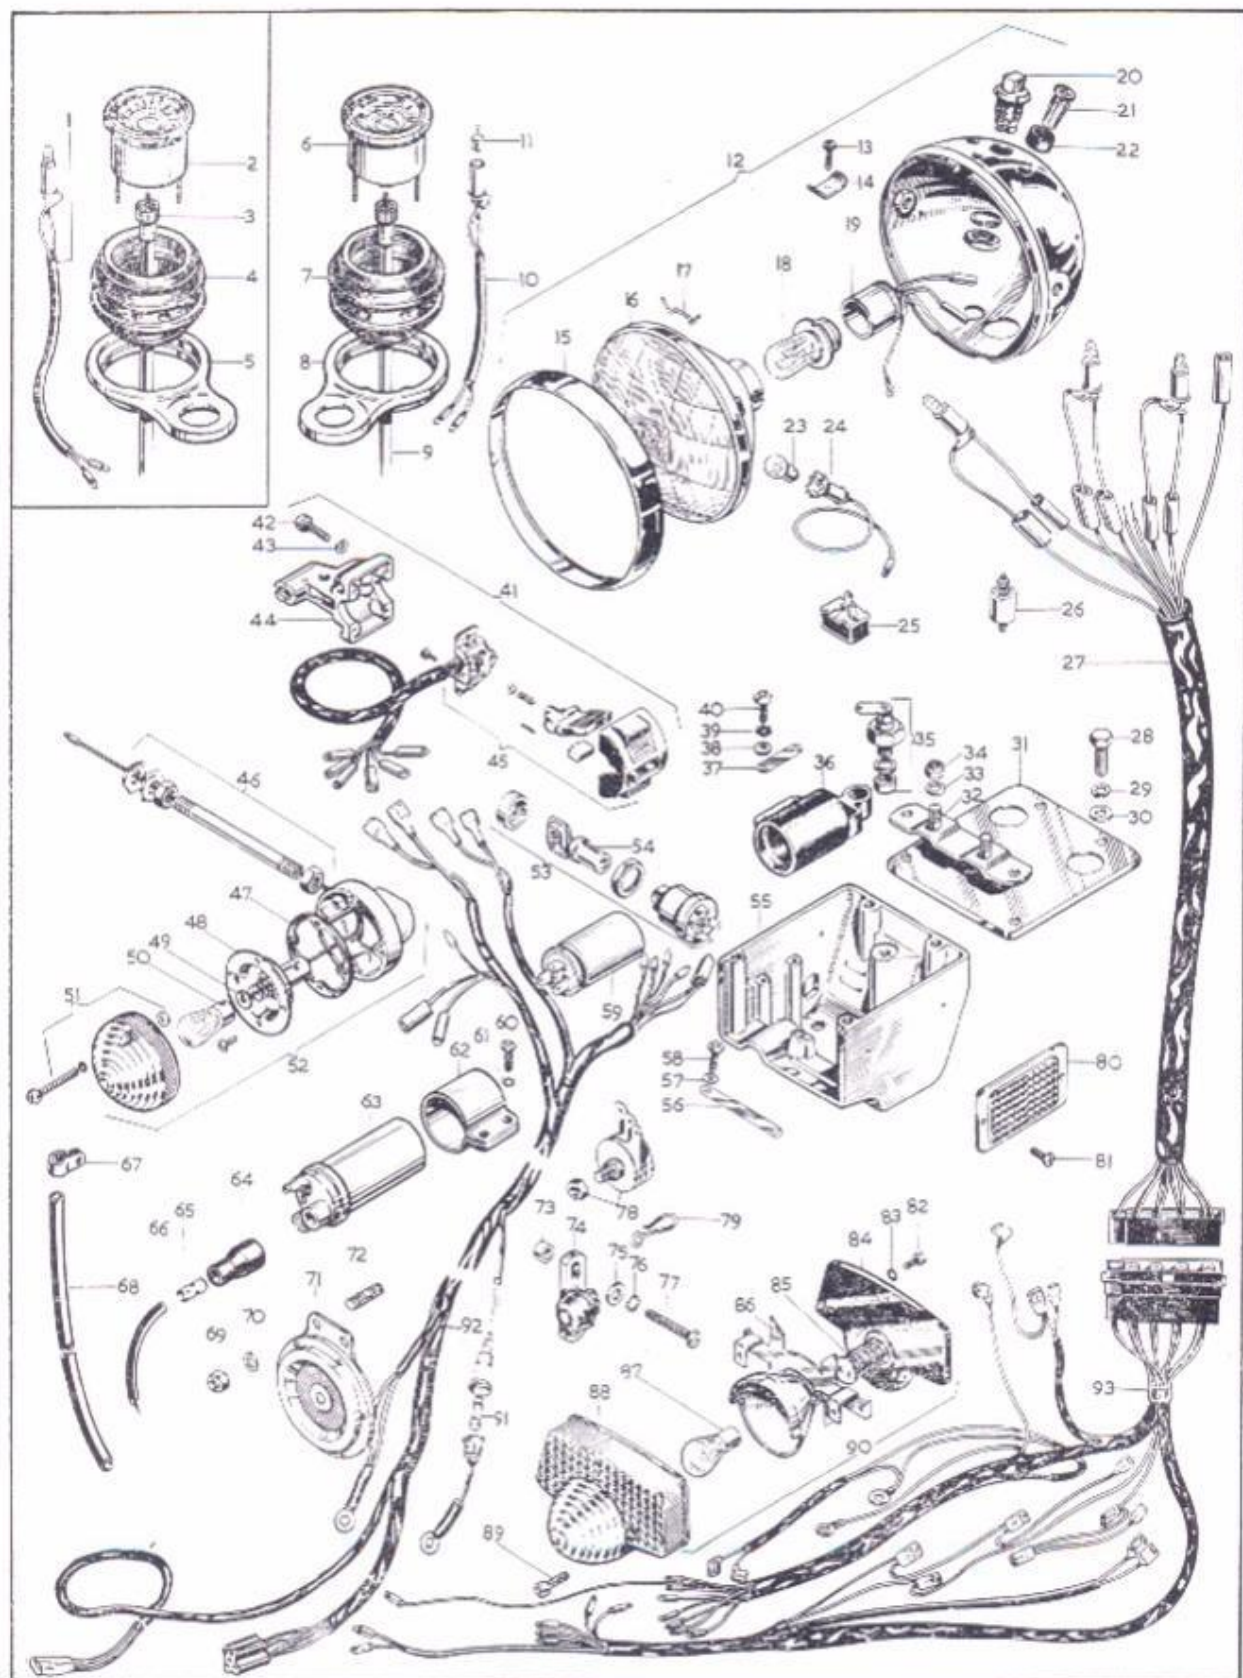

ELECTRICAL EQUIPMENT

Model	Plate Ref.	Spares Number	Description	Per Set
		B.S.A.	MAKERS	
T SS H	64	54949011	Rubber grommet — high-tension lead	1
T SS H	65	421863	Clip — high-tension contact	1
T SS	66	54956424	High-tension lead	1
H	66	54956466	High-tension lead	1
T SS H	67	66-8340	Clip — battery vent pipe	1
T SS H	68	68-9163	Vent pipe — battery	1
T SS H	69	14-1301	Nut — horn fixing ($\frac{1}{4}$ " UN.F.)	2
T SS H	70	02-0525	Washer — horn fixing stud ($\frac{1}{4}$ " $\times$ $\frac{1}{2}$ " $\times$ $\frac{3}{64}$ ")	2
T SS H	71	19-2084	70216 Horn — 6H, high note	1
T SS H	72	14-1601	Stud — horn fixing ($\frac{1}{4}$ " UN.F. $\times$ 1")	2
T SS H	73	82-4366	Distance piece — stop switch mounting	2
T SS H	74	19-0916	34815 Stop switch — rear	1
T SS H	75	90-6219	Washer — stop switch fixing screw	2
T SS H	76	60-2426	Spring washer — stop switch fixing screw ($\frac{25}{64}$ " $\times$ $\frac{13}{64}$ " $\times$ $\frac{3}{32}$ ")	2
T SS H	77	21-5356	Screw — stop switch fixing	2
T SS H	78	19-1715	49072 Rectifier	1
T SS H	79	47-9030	Clip — stop switch cable	1
T SS H	80	19-1338	57160 Reflector — front	2
T SS H	81	21-2073	Screw — reflector fixing	4
T SS H	82	110714	Screw — rear lamp fixing	2
T SS H	83	188330	Washer — rear lamp fixing screw	2
T SS H	84	54571677	Gasket — rear lamp lens backing	1
T SS H	85	573828	Interior bulb holder — rear lamp	1
T SS H	86	54525286	Base plate — rear lamp	1
T SS H	87	380	Bulb — rear lamp	1
T SS H	88	54577109	Lens — rear lamp	1
T SS H	89	144921	Screw — lens fixing	2
T SS H	90	19-1245	53973 Rear lamp complete	1
T SS H	91	19-1249	188218 Fuse — main harness, 35 amp.	1
T SS H	92	19-1075	54959480 Main harness	1
MC	92	19-1340	54959649 Harness — ignit on	1
T SS H	93	19-1080	54959680 Harness — electrical box	1
T SS H		19-1776	54027029† Battery (PUZ5A)	1

†Not illustrated.

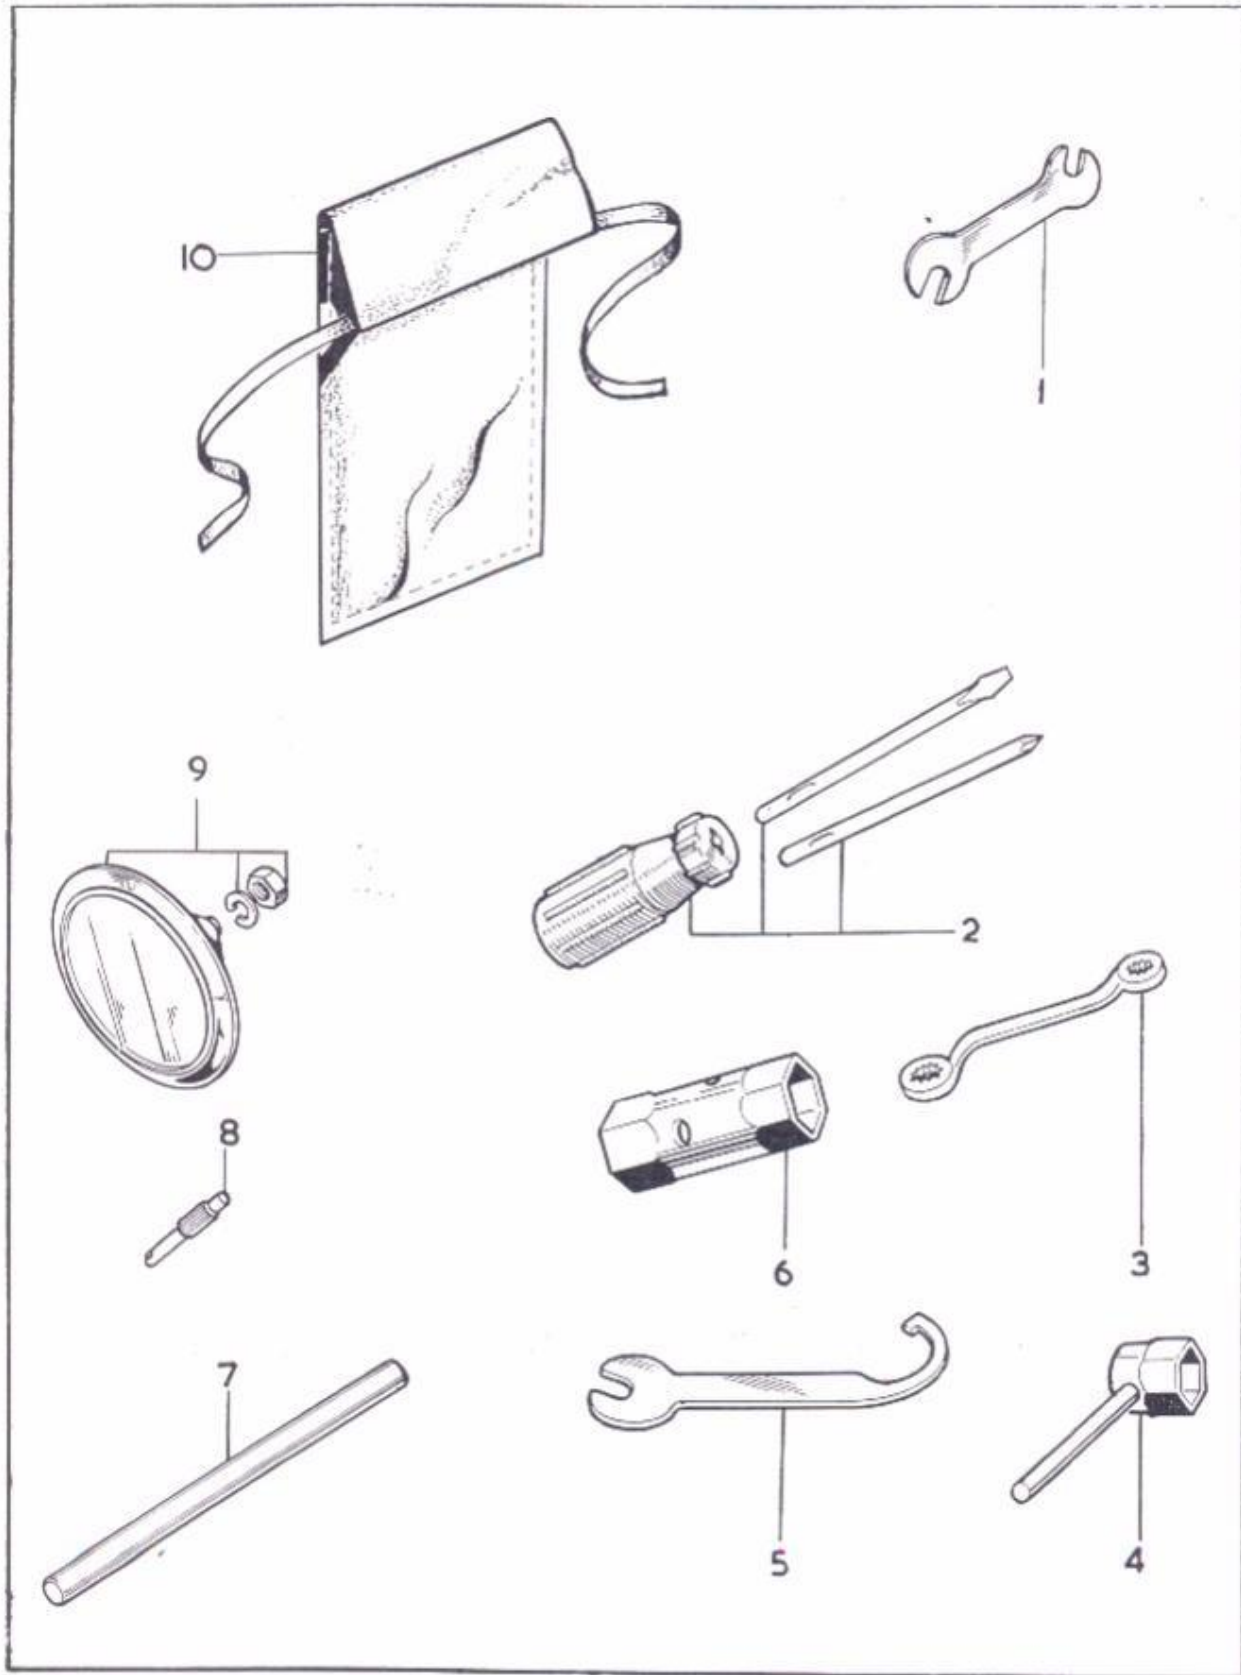


TOOLS

<i>Model</i>	<i>Plate Ref.</i>	<i>Spares Number</i>	<i>Description</i>	<i>Per Set</i>
T SS H	1	65-9132	Spanner	1
T SS H	2	60-0767	Screwdriver set	1
T H	3	67-9026	Ring spanner	1
H	4	60-1050	Plug spanner	1
T SS H	5	60-2184	Suspension unit "C" spanner	1
T SS H	6	40-9017	Box spanner	1
T SS H	7	60-1911	Tommy bar	1
T SS H	8	68-9467	Tyre valve key	1
H	9	42-9273	Licence holder complete	1
T SS H	10	75-9089	Tool roll	1
T SS H		60-2114	Tool roll complete with tools	1

MOTO-CROSS REAR MUDGUARD FIXINGS

<i>Model</i>	<i>Plate Ref.</i>	<i>Spares Number</i>	<i>Description</i>	<i>Per Set</i>
MC		60-3370†	Grommet — rear mudguard	5
MC		14-0103†	Bolt — mudguard fixing	5
MC		60-2347†	Washer — mudguard fixing	5
MC		14-1301†	Nut — mudguard fixing	5

†Not illustrated.

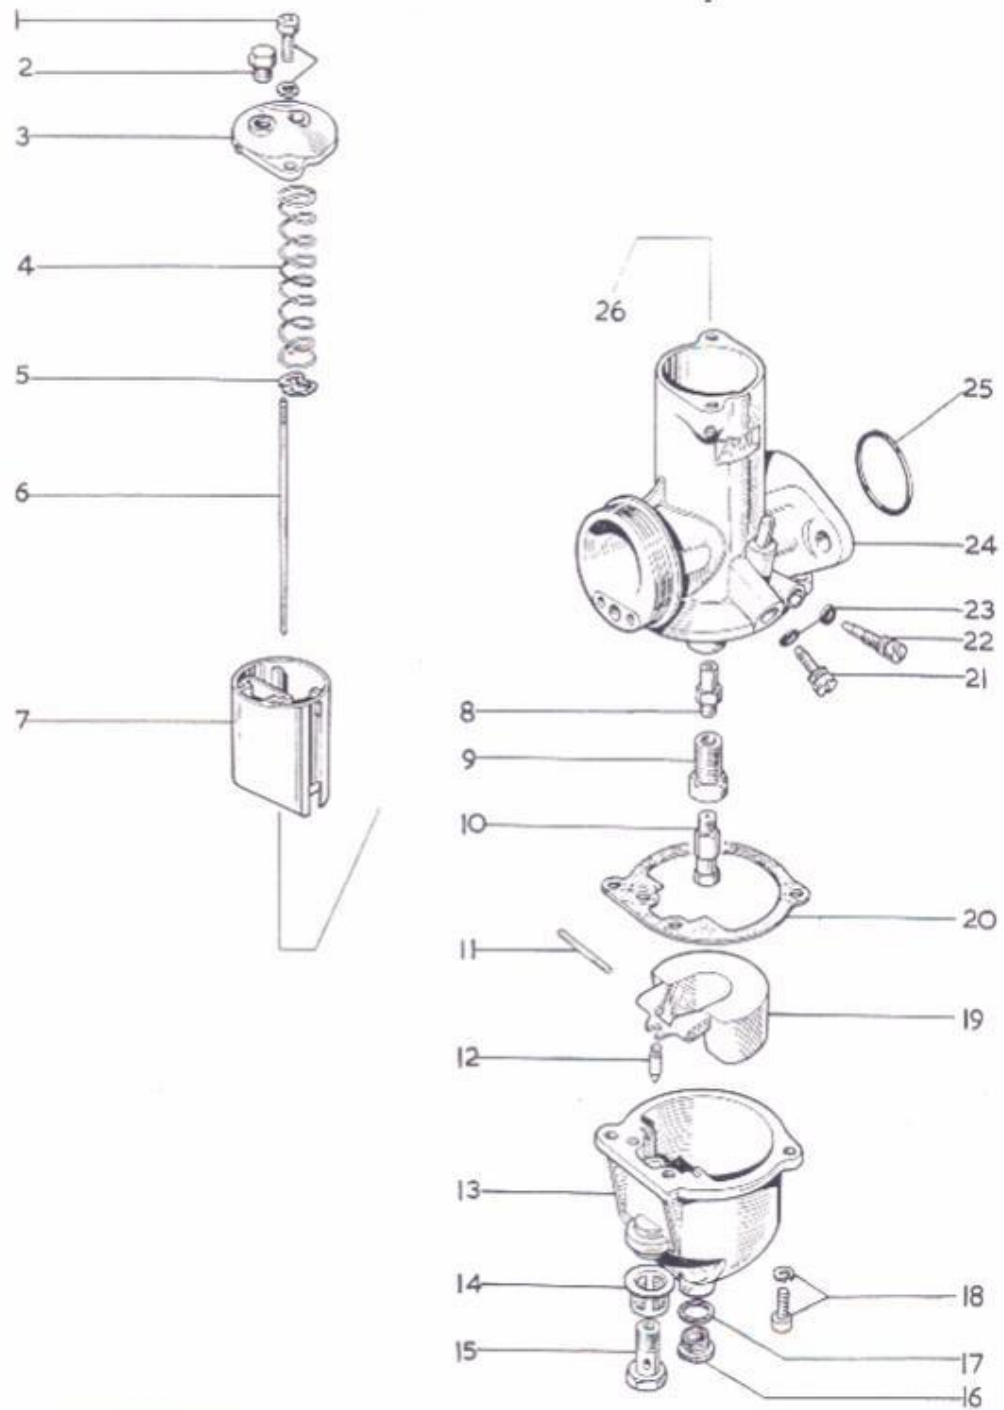

CARBURETTER

Model	Plate Ref.	Spares Number		Description	Per Set
		B.S.A.	MAKERS		
T SS H MC	1	19-3093	622/086	Screw and washer — top cap	2
T SS H MC	2		4/137A	Screw plug — top cap	1
T SS H MC	3		928/097	Cap — mixing chamber	1
T SS H MC	4	19-3094	622/061	Spring — throttle	1
T SS H MC	5	19-3095	622/067	Clip — throttle needle	1
T SS H MC	6	19-3137	928/131	Needle — throttle	1
T SS H	7	19-3127	928/060	Throttle slide (No. 3½ cutaway)	1
MC	7	19-3108	928/060	Throttle slide (No. 3 cutaway)	1
T SS H MC	8	19-3136	622/079	Needle jet (-106)	1
T SS H MC	9		622/128	Jet holder	1
T SS H	10	19-2880	376/100	Main jet (200 c.c.)	1
MC	10	19-2885	376/100	Main jet (250 c.c.)	1
T SS H MC	11		622/071	Float spindle	1
T SS H MC	12	19-3105	622/068	Float needle	1
T SS H MC	13		622/055	Float chamber	1
T SS H MC	14	19-3048	376/093	Petrol filter	1
T SS H MC	15	19-3103	622/078	Banjo bolt	1
T SS H MC	16		622/147	Drain plug	1
T SS H MC	17		622/151	Washer — drain plug	1
T SS H MC	18	19-3093	622/086	Screw and washer — float chamber to body	2
T SS H MC	19	19-3102	622/069	Float	1
T SS H MC	20	19-3106	622/073	Gasket — float chamber	1
T SS H MC	21		622/077	Screw — throttle stop	1
T SS H MC	22		622/076	Adjusting screw — pilot air	1
T SS H MC	22	19-3098	622/082	"O" ring — pilot air and throttle stop screws	2
T SS H MC	23	19-3090	622/101	"O" ring — carburetter flange	1
T SS H	24		R.930	Carburetter body	1
MC	24		R.932	Carburetter body	1
T SS H		19-2430†	R930/62	Carburetter complete	1
MC		19-2429†	R932/18	Carburetter complete	1

†Not illustrated.

NUMERICAL INDEX

PART No.	LINE No.	PAGE No.	NO. OFF	PART No.	LINE No.	PAGE No.	NO. OFF	PART No.	LINE No.	PAGE No.	NO. OFF
00-3174	—	9	1	14-1019	47	41	2	14-6219	20	13	3
00-3316	—	9	1	14-1203	25	39	2	14-6219	4	39	4
00-7009	—	5	1	14-1301	9	17	1	14-6221	26	33	1
02-0370	40	53	1	14-1301	37	31	2	14-6606	13	23	2
02-0443	1	9	1	14-1301	14	35	1	14-6606	48	25	1
02-0522	—	35	1	14-1301	—	37	2	14-6608	68	25	1
02-0525	2	9	1	14-1301	—	37	1	14-6610	8	23	4
02-0525	2	13	3	14-1301	9	47	5	14-6610	47	25	1
02-0525	39	15	1	14-1301	21	49	2	14-6610	2	27	5
02-0525	33	17	4	14-1301	23	49	2	14-6611	38	25	1
02-0525	30	55	4	14-1301	27	49	1	14-6611	7	27	4
02-0525	70	59	2	14-1301	32	49	4	14-6612	40	25	3
02-0923	21	13	3	14-1301	37	49	2	14-6614	41	25	1
02-0923	2	17	2	14-1301	16	51	2	14-7308	31	39	1
02-0923	7	17	2	14-1301	—	59	4	14-7804	24	27	1
02-2138	9	35	1	14-1301	69	59	5	15-5155	3	9	1
02-2138	16	35	1	14-1301	—	61	5	15-5155	36	35	4
02-2138	16	39	1	14-1302	5	9	1	19-0456	63	57	1
02-2138	26	39	4	14-1302	—	9	1	19-0916	74	59	1
02-2578	35	23	1	14-1302	16	9	2	19-1064	18	55	1
02-2579	32	23	1	14-1302	—	9	1	19-1067	52	57	4
02-2580	34	23	1	14-1302	27	31	4	19-1068	51	57	4
03-0101	36	53	2	14-1302	36	31	2	19-1071	46	57	2
10-1072	46	57	2	14-1302	12	33	1	19-1075	92	59	1
14-0101	14	37	2	14-1302	3	35	2	19-1077	36	57	1
14-0101	16	37	1	14-1302	27	35	2	19-1079	25	55	1
14-0101	18	49	4	14-1302	37	35	2	19-1080	93	59	1
14-0101	20	49	1	14-1302	8	49	2	19-1088	16	55	1
14-0101	30	49	2	14-1302	39	53	1	19-1094	12	55	1
14-0101	35	49	4	14-1302	34	57	2	19-1095	20	55	1
14-0101	36	49	2	14-1303	11	29	2	19-1096	27	55	1
14-0102	4	37	3	14-1303	22	29	1	19-1245	90	59	1
14-0102	41	49	2	14-1303	29	31	1	19-1249	91	59	1
14-0102	—	59	1	14-1303	31	31	2	19-1262	51	15	1
14-0103	15	35	1	14-1303	5	33	1	19-1264	51	15	1
14-0103	17	49	4	14-1303	25	33	4	19-1332	9	51	1
14-0103	—	61	5	14-1303	8	35	1	19-1332	41	37	1
14-0104	—	59	1	14-1303	19	35	1	19-1333	51	53	1
14-0113	32	35	1	14-1303	23	35	2	19-1333	41	57	1
14-0113	26	51	2	14-1303	—	35	1	19-1335	44	57	2
14-0114	21	29	4	14-1303	15	39	1	19-1337	45	57	1
14-0114	35	35	1	14-1303	16	43	1	19-1338	80	59	2
14-0114	2	49	2	14-1303	19	43	1	19-1339	43	49	2
14-0126	4	29	1	14-1304	25	47	1	19-1340	92	59	1
14-0134	11	43	1	14-1304	9	33	2	19-1715	78	59	1
14-0207	4	47	1	14-1304	9	43	1	19-1735	35	57	1
14-0208	24	23	1	14-1304	13	43	1	19-1747	26	55	1
14-0213	—	59	5	14-1305	28	47	1	19-1776	—	59	1
14-0214	—	57	1	14-1307	23	47	1	19-1847	26	55	1
14-0216	3	35	2	14-1401	32	17	4	19-1849	19	23	1
14-0216	26	35	2	14-1601	72	59	2	19-1852	25	23	1
14-0218	—	9	1	14-1606	20	17	1	19-1853	18	23	1
14-0232	2	33	1	14-1620	19	9	2	19-1858	59	57	1
14-0233	—	35	1	14-1626	27	9	2	19-1881	63	57	1
14-0234	22	33	4	14-1627	29	9	2	19-1904	53	57	4
14-0236	2	39	1	14-1628	13	9	3	19-1906	18	23	1
14-0238	36	41	2	14-1636	32	45	1	19-2084	71	59	1
14-0239	10	29	1	14-1803	28	45	1	19-2429	—	63	1
14-0239	36	41	2	14-1901	1	13	3	19-2430	—	63	1
14-0302	14	11	2	14-1901	38	15	1	19-2763	52	53	1
14-0302	1	17	2	14-1901	18	17	2	19-2878	10	63	1
14-0302	6	17	2	14-1901	34	17	4	19-3048	14	63	1
14-0302	—	21	2	14-1902	44	41	8	19-3082	58	53	1
14-0304	39	11	4	14-2203	30	35	5	19-3083	57	53	1
14-0401	17	27	1	14-6101	28	33	1	19-3084	55	53	1
				14-6101	33	49	1	19-3085	54	53	1
				14-6101	28	55	4	19-3086	56	53	1
				14-6114	5	49	2				

NUMERICAL INDEX—continued

PART No.	LINE No.	PAGE No.	NO. OFF	PART No.	LINE No.	PART No.	NO. OFF	PART No.	LINE No.	PAGE No.	NO. OFF
19-3087	53	53	1	21-1951	9	27	1	37-3696	35	43	10
19-3090	23	63	1	21-1985	41	15	1	37-3697	34	43	20
19-3093	1	63	2	21-1999	48	53	1	37-3704	22	43	1
19-3093	18	63	2	21-2015	26	29	1	37-3724	22	47	10
19-3094	4	63	1	21-2033	37	11	4	37-3725	21	47	10
19-3093	5	63	1	21-2034	16	11	2	37-3726	14	45	20
19-3098	22	63	2	21-2039	31	15	1	37-3726	20	47	20
19-3102	19	63	1	21-2042	8	17	2	37-3741	5	47	1
19-3103	15	63	1	21-2044	12	23	1	37-3749	3	47	1
19-3105	12	63	1	21-2045	11	35	1	37-3750	14	47	1
19-3106	20	63	1	21-2047	48	41	8	37-3751	13	47	1
19-3127	7	63	1	21-2048	8	51	2	37-3752	1	47	1
19-3136	8	63	1	21-2060	42	31	1	37-3753	10	47	1
19-3137	6	63	1	21-2061	13	29	1	37-3758	21	43	1
19-7221	50	53	1	21-2062	18	39	2	37-3758	24	45	1
19-7222	12	51	1	21-2063	15	43	1	37-3759	8	43	1
19-7223	11	51	1	21-2066	53	15	1	37-3759	10	45	1
19-7454	21	33	2	21-2067	40	57	2	37-3761	23	45	2
19-7456	21	33	2	21-2067	60	57	2	37-3762	22	45	2
19-7458	20	33	2	21-2073	81	59	4	37-3774	16	47	1
19-7460	20	33	2	21-2077	8	33	2	37-3784	19	47	1
19-7461	23	33	4	21-2092	30	9	2	37-3785	17	45	1
19-7466	34	45	2	21-2094	22	35	1	37-3785	19	47	1
19-7467	35	45	10	21-5356	77	59	2	37-3793	29	43	1
19-7606	6	11	1					37-3795	2	43	1
19-7616	6	11	1	24-0036	14	13	1	37-3796	4	43	1
19-7625	5	11	1	24-0563	7	11	2	37-3796	6	45	1
19-7707	27	43	2	24-0724	36	15	1	37-3797	6	43	1
19-7740	40	47	2	24-0732	22	13	1	37-3797	8	45	1
19-7741	21	45	2	24-8784	—	35	1	37-3798	24	43	1
19-7742	20	45	2					37-3799	23	43	1
19-7743	18	45	2	27-6810	1	43	40	37-3804	25	43	2
19-7741	19	45	2	27-6810	16	45	40	37-3816	13	45	10
19-7745	15	45	2	27-6810	18	47	40	37-3817	11	45	10
19-8019	50	15	1	27-8560	6	37	2	37-3848	5	45	1
19-8683	27	27	1	27-8560	26	49	1	37-3857	33	47	1
19-8701	6	47	1	27-8560	29	49	4	37-3868	27	45	2
19-8702	6	47	1	27-8560	38	49	2	37-3870	35	47	1
19-8953	2	55	1					37-3872	34	47	1
19-8955	6	55	1	29-0541	10	17	1	37-3877	27	47	1
19-8958	6	55	1	29-3319	27	23	2	37-3880	32	47	1
19-9095	9	55	1	29-3339	39	57	2	37-3892	2	43	1
19-9101	1	55	1	29-3319	61	57	2	37-3907	7	47	1
19-9101	10	55	1	29-3857	2	19	1	37-3908	7	47	1
19-9103	3	55	1	29-5853	28	43	16	37-3909	12	47	1
19-9223	15	47	1	29-7583	29	35	2	37-3913	26	45	1
19-9224	15	47	1					37-3914	31	45	1
19-9502	11	51	1	37-0653	7	43	1	37-3925	36	47	1
19-9503	50	53	1	37-0653	31	43	1	37-3926	37	47	1
19-9526	12	51	1	37-0653	3	45	1	37-3932	—	45	1
19-9699	6	47	1	37-0653	9	45	1				
				37-0653	2	47	1	40-0028	7	23	1
21-0543	49	31	2	37-0653	11	47	1	40-0148	8	11	2
21-0578	11	39	1	37-1237	32	43	1	40-0156	42	11	1
21-0671	20	29	1	37-1237	2	45	1	40-0157	24	35	2
21-0755	14	29	1	37-1340	2	47	1	40-0157	9	11	2
21-1809	8	39	2	37-1340	12	47	1	40-0158	12	11	2
21-1822	—	35	1	37-1467	31	47	1	40-0159	2	11	2
21-1857	36	17	1	37-1481	30	43	1	40-0162	1	11	2
21-1872	18	13	1	37-1481	4	45	1	40-0208	9	9	1
21-1890	3	17	2	37-1654	12	47	1	40-0222	6	23	1
21-1893	20	17	2	37-2085	15	29	1	40-0236	37	25	3
21-1894	47	15	1	37-2338	29	45	1	40-0242	25	13	2
21-1895	6	13	1	37-3468	17	47	2	40-0243	46	15	1
21-1896	5	13	1	37-3584	3	43	1	40-0246	44	15	6
21-1899	67	25	1	37-3655	33	45	1	40-0292	11	11	1
21-1930	58	57	2	37-3694	18	43	1	40-0294	41	11	2
21-1943	20	27	1	37-3695	36	43	10	40-0296	10	11	1

NUMERICAL INDEX—continued

PART NO.	LINE NO.	PAGE NO.	NO. OFF	PART NO.	LINE NO.	PAGE NO.	NO. OFF	PART NO.	LINE NO.	PAGE NO.	NO. OFF
40-0309	11	9	1	40-4850	21	35	2	57-2166	1	27	1
40-0327	8	13	1	40-8066	42	53	1	57-2641	39	25	1
40-0375	40	15	1	40-8085	37	53	1	57-2642	49	25	1
40-0385	11	23	1	40-8322	24	37	1	57-2646	43	25	1
40-0394	1	19	2	40-8323	25	37	1	57-2652	32	23	1
40-0417	4	9	1	40-8331	22	37	1	57-2750	56	25	1
40-0455	32	15	1	40-8657	13	31	1	57-2759	42	25	1
40-0679	9	23	1	40-9017	6	61	1	57-2764	32	23	1
40-0682	21	23	2					57-3763	16	21	1
40-0683	22	23	2	41-0143	48	15	1	57-3764	65	25	1
40-0705	3	13	1	41-0146	49	15	1	57-3850	8	21	1
40-0723	20	23	1	41-0176	36	9	1	57-3854	21	21	1
40-0862	—	23	1	41-0551	23	11	1	57-3872	3	19	1
40-0968	34	9	2	41-0560	30	15	1	57-3874	13	19	1
40-0969	33	9	2	41-0565	35	15	1	57-3876	5	19	1
40-0977	2	23	1	41-0567	34	15	1	57-3877	14	19	1
40-1005	6	27	1	41-0569	33	15	1	57-3931	32	27	1
40-1033	4	17	1	41-0588	21	11	2	57-4019	11	27	1
40-1037	24	21	1	41-0603	11	17	1	57-4121	19	27	4
40-2705	15	37	4	41-0609	21	17	4	57-4186	35	27	1
40-2705	17	37	1	41-0624	29	17	1	57-4189	18	27	1
40-3007	9	19	1	41-0639	38	11	4	57-4200	30	27	1
40-3019	6	19	1	41-0673	4	13	1	57-4302	—	27	1
40-3020	4	19	1	41-0706	26	17	1	57-4303	33	27	1
40-3032	19	21	1	41-0714	16	17	2	57-4306	38	17	1
40-3033	20	21	1	41-0715	5	23	1	57-4336	61	25	1
40-3042	5	21	1	41-0807	3	11	1	57-4338	50	25	1
40-3043	4	21	1	41-3045	21	19	2	57-4339	62	25	1
40-3044	7	21	2	41-3054	23	19	1	57-4341	53	25	1
40-3044	12	49	2	41-3063	7	19	1	57-4342	52	25	1
40-3045	6	21	1	41-3065	8	19	1	57-4343	16	23	1
40-3051	40	17	1	41-3068	17	19	1	57-4344	10	19	1
40-3059	13	21	2	41-3070	16	19	1				
40-3061	15	21	1	41-3072	18	19	1	60-0767	2	61	1
40-3073	29	23	1	41-3073	13	19	1	60-1050	4	61	1
40-3084	44	25	1	41-3074	18	19	1	60-1911	7	61	1
40-3085	45	25	1	41-3078	15	19	1	60-2071	3	51	2
40-3119	6	19	1	41-3089	8	19	1	60-2072	2	51	2
40-3120	6	19	1	41-3091	21	27	4	60-2083	4	51	1
40-3121	39	17	1	41-3092	38	17	1	60-2114	—	61	1
40-3126	4	19	1	41-3094	38	17	1	60-2184	5	61	1
40-3127	4	19	1	41-3209	36	27	1	60-2320	8	47	5
40-3150	31	27	1	41-3212	26	27	8	60-2321	45	41	8
40-3155	14	21	2	41-3215	22	27	4	50-2322	24	33	4
40-3193	9	21	2	41-6078	39	47	2	50-2329	30	33	1
40-3194	11	21	1	41-8011	42	53	1	50-2329	24	49	4
40-3206	28	27	25	41-8548	—	53	1	60-2329	28	49	2
40-3207	34	27	1					60-2330	6	9	9
40-3210	32	27	1	42-0157	5	39	4	60-2330	35	31	2
40-3220	12	27	5	42-4925	1	35	2	60-2331	32	31	2
40-3221	15	27	1	42-5836	—	43	1	60-2331	17	43	1
40-3227	16	27	1	42-5840	41	47	16	60-2331	20	43	1
40-3233	13	27	4	42-5873	37	43	1	60-2331	26	47	1
40-3234	14	27	1	42-5875	37	43	1	60-2332	10	43	1
40-3258	11	19	1	42-6554	31	23	1	60-2332	14	43	1
40-3262	12	19	1	42-8017	46	53	1	60-2333	19	39	2
40-3265	20	19	1	42-8611	—	53	1	60-2333	29	47	1
40-3272	60	25	1	42-9273	9	61	1	60-2336	30	39	1
40-3273	15	23	1					60-2338	9	39	2
40-3277	51	25	1	47-9030	79	59	1	60-2339	11	33	1
40-3282	58	25	1					60-2347	41	31	4
40-3283	55	25	1	53-3049	1	23	1	60-2347	—	61	5
40-3291	18	21	1					60-2348	4	49	2
40-3292	19	19	1	54-8006	44	31	1	60-2348	7	49	2
40-3292	54	25	1					60-2363	59	25	1
40-3321	12	21	1	57-0280	33	43	1	60-2364	10	23	1
40-3323	10	21	1	57-0280	1	45	1	60-2364	46	25	1
40-3330	38	27	4	57-0948	5	17	1	60-2393	1	35	1

NUMERICAL INDEX—continued

PART No.	LINE No.	PAGE No.	NO. OFF	PART No.	LINE No.	PAGE No.	NO. OFF	PART No.	LINE No.	PAGE No.	NO. OFF
60-2417	29	33	1	68-0331	31	35	5	71-1624	32	11	1
60-2426	76	59	2	68-0383	42	15	1	71-1625	40	11	1
60-2427	—	37	2	68-0839	4	27	1	71-1626	22	9	1
60-2427	16	49	4	68-0931	21	9	2	71-1627	10	9	1
60-2427	29	55	4	68-0938	19	17	1	71-1629	9	13	as reqd.
60-2427	—	59	1	68-3168	37	17	2	71-1630	9	13	as reqd.
60-2428	25	51	2	68-4577	40	31	1	71-1631	—	15	1
60-2428	—	51	4	68-4597	38	31	1	71-1632	28	11	2
60-2594	12	45	1	68-4708	1	33	1	71-1634	7	13	1
60-2600	4	55	1	68-4835	28	35	2	71-1635	17	11	1
60-2600	7	55	1	68-4925	8	29	1	71-1638	32	9	1
60-2601	2	37	1	68-5050	7	39	1	71-1643	30	11	1
60-2627	1	51	1	68-8013	43	53	1	71-1675	—	11	1
60-2628	10	51	1	68-8016	47	53	1	71-1676	27	11	1
60-2630	20	39	2	68-8019	44	53	1	71-1677	25	11	1
60-2632	5	43	1	68-8343	26	37	4	71-1678	26	11	1
60-2632	7	45	1	68-9115	8	37	2	71-1679	29	15	1
60-2639	25	45	2	68-9163	68	59	1	71-1680	28	15	1
60-2683	12	35	1	68-9467	8	61	1	71-1681	24	11	1
60-2683	—	43	1					71-1731	52	15	1
60-2724	17	21	1	70-3751	5	29	1	71-1732	15	9	1
60-3075	7	51	1	70-3789	45	15	1	71-1735	20	9	1
60-3143	10	51	1	70-6026	24	19	1	71-1736	12	9	1
60-3144	1	51	1	70-7351	30	51	2	71-1870	37	15	1
60-3158	23	51	2	70-7354	28	23	2	71-1989	28	9	2
60-3159	10	37	2	70-7821	17	9	1	71-2025	8	27	1
60-3160	12	37	2	70-7850	31	11	1	71-2114	33	35	1
60-3161	19	37	6	70-8315	28	17	1	71-2115	25	17	1
60-3207	1	51	1	70-8737	26	23	1	71-2119	12	17	1
60-3208	10	51	1	70-8770	9	29	1	71-2121	15	17	1
60-3242	6	49	2	70-8770	12	29	2	71-2122	24	17	1
60-3256	23	51	2	70-8770	19	29	2	71-2123	13	17	1
60-3258	21	37	2	70-8770	23	29	2	71-2124	23	17	1
60-3260	21	37	2	70-8770	30	31	1	71-2125	17	17	1
60-3262	21	37	2	70-8782	25	27	2	71-2152	36	11	1
60-3313	44	49	1	70-8896	19	13	1	71-2155	35	11	1
60-3354	—	37	1	70-9381	11	13	1	71-2167	34	11	1
60-3370	—	61	5	70-9382	10	13	1	71-2171	—	35	1
60-3371	—	53	6	70-9383	16	13	1	71-2177	14	9	1
60-3372	—	53	6	70-9384	24	13	1	71-2211	2	21	1
60-3390	7	51	1	70-9428	—	13	1	71-2228	—	17	1
60-3398	11	49	2	70-9429	17	13	1	71-2240	22	21	1
60-3499	13	51	1	70-9430	12	13	1	71-2243	25	21	1
				70-9431	15	13	1	71-2273	57	25	1
62-0263	23	21	1	70-9517	13	13	1	71-2370	3	21	1
				70-9526	14	23	2	71-2401	34	35	1
65-2494	23	9	2	70-9800	1	27	1	71-2402	39	35	1
65-2495	24	9	2	70-9979	35	17	1	71-2412	34	35	1
65-5883	36	15	1					71-2513	27	15	2
65-5904	26	43	2	71-1065	23	27	1	71-2545	69	25	1
65-5904	38	47	2	71-1147	14	17	1	71-2546	—	15	1
65-9132	1	61	1	71-1148	27	17	2	71-2547	25	19	2
				71-1165	25	9	2	71-2586	—	11	1
66-0492	18	11	1	71-1166	26	9	4				
66-0953	19	11	1	71-1199	22	11	1	75-0176	28	31	8
66-0954	29	11	2	71-1219	33	11	1	75-0214	48	31	2
66-3074	66	25	1	71-1271	22	19	1	75-0257	4	23	1
66-3074	10	27	2	71-1418	29	27	1	75-2719	—	9	2
66-8340	67	59	1	71-1419	43	15	1	75-2725	—	9	1
				71-1420	5	27	1	75-9089	10	61	1
67-0645	30	45	2	71-1421	13	9	1				
67-1236	1	21	1	71-1422	23	13	1	76-0012	15	11	2
67-1286	31	17	1	71-1423	36	25	1	76-0012	33	55	2
67-1391	22	17	1	71-1424	30	17	2	76-0101	1	29	4
67-9026	3	61	1	71-1429	8	9	1	76-0101	—	37	1
				71-1616	20	11	1	76-0271	17	23	1
68-0155	13	11	2	71-1620	26	13	2	76-0293	38	57	2
68-0289	35	9	1	71-1623	31	9	1	76-0293	57	57	2
68-0289	3	23	1								
68-0331	23	23	1								

NUMERICAL INDEX—continued

PART No.	LINE No.	PAGE No.	NO. OFF	PART No.	LINE No.	PAGE No.	NO. OFF	PART No.	LINE No.	PAGE No.	NO. OFF
76-0528	63	25	1	83-2669	37	57	1	83-3254	34	49	1
76-4116	3	27	4	83-2670	56	57	1	83-3299	3	37	1
76-4120	38	53	1	83-2671	43	31	1	83-3305	—	37	1
76-8010	21	39	2	83-2674	6	33	1	83-3306	—	57	1
				83-2678	31	55	1				
82-3017	35	53	1	83-2679	55	57	1	89-3208	30	23	1
82-3220	59	53	1	83-2693	40	49	1	90-0011	64	25	1
82-4366	73	59	2	83-2717	33	31	1	90-6074	41	17	1
82-4671	7	33	1	83-2718	32	55	1	90-6219	10	49	2
82-6981	54	57	1	83-2721	32	53	1	90-6219	75	59	2
82-7387	38	35	1	83-2726	25	49	1				
82-8245	37	41	1	83-2727	31	49	1	97-0722	6	39	2
82-9004	39	31	1	83-2728	22	49	1	97-2266	10	39	1
82-9222	61	53	1	83-2746	24	51	1	97-2270	28	39	2
82-9239	34	35	1	83-2776	34	53	1	97-3682	29	39	1
82-9430	23	37	1	83-2785	9	37	4	97-3893	43	41	2
82-9782	45	53	1	83-2800	28	51	1	97-3894	42	41	2
82-9795	33	53	1	83-2801	28	51	1	97-3947	46	41	2
				83-2834	9	49	1	97-3985	13	39	1
83-0002	29	51	2	83-2934	19	49	1	97-3987	27	39	1
83-1547	59	53	1	83-2937	1	37	1	97-3996	35	41	2
83-1969	18	33	1	83-2938	11	37	1	97-4001	50	41	2
83-1972	16	29	2	83-2980	62	53	1	97-4002	51	41	2
83-2004	8	29	1	83-2984	7	29	1	97-4003	39	41	2
83-2005	17	29	1	83-2984	46	31	1	97-4004	32	41	2
83-2006	25	29	1	83-2985	7	29	1	97-4007	52	41	2
83-2006	18	37	4	83-2985	46	31	1	97-4008	55	41	2
83-2007	22	39	2	83-2998	32	53	1	97-4009	34	41	2
83-2012	15	33	2	83-3014	14	33	2	97-4010	38	41	2
83-2013	45	31	1	83-3015	10	35	1	97-4011	53	41	2
83-2014	24	29	1	83-3017	20	35	1	97-4012	41	41	2
83-2015	18	29	1	83-3035	5	37	1	97-4020	40	41	2
83-2018	3	29	1	83-3040	27	51	1	97-4021	14	49	4
83-2022	42	47	1	83-3042	41	53	1	97-4022	15	49	4
83-2023	30	47	1	83-3046	6	29	1	97-4026	1	39	1
83-2040	17	35	1	83-3050	32	53	1	97-4026	5	55	1
83-2042	3	37	1	83-3055	60	53	1	97-4026	8	55	1
83-2204	2	29	4	83-3056	31	53	1	97-4028	56	41	1
83-2209	14	39	4	83-3068	49	53	1	97-4029	3	39	1
83-2211	12	39	2	83-3069	49	53	1	97-4031	23	39	2
83-2213	19	33	1	83-3076	—	37	1	97-4032	49	41	1
83-2218	7	35	1	83-3077	20	37	1	97-4033	49	41	1
83-2220	7	35	1	83-3078	27	37	1	97-4048	17	39	1
83-2224	27	33	1	83-3092	2	35	2	97-4050	17	39	1
83-2228	47	31	1	83-3094	6	35	2	97-4052	13	49	1
83-2233	13	33	2	83-3095	4	35	2	97-4062	6	51	1
83-2244	16	33	2	83-3153	34	31	1	97-4072	3	49	1
83-2245	17	33	2	83-3162	3	33	1	97-4075	1	49	1
83-2263	19	49	1	83-3165	4	33	1	97-4076	33	41	2
83-2266	24	47	1	83-3170	10	33	1	97-4112	5	51	4
83-2507	13	37	1	83-3174	42	49	1	97-4115	13	39	1
83-2616	18	35	1	83-3179	60	53	1	97-4116	24	39	1
83-2617	25	35	2	83-3180	31	53	1	97-4127	13	49	1
83-2621	24	51	1	83-3198	24	51	1	97-4154	3	49	1
83-2652	32	53	1	83-3208	27	51	1	97-4166	54	41	2
83-2660	12	43	1	83-3212	39	49	2	97-4173	6	51	1

B.S.A. SPARES STOCKISTS

Save time and postage by contacting your nearest B.S.A. Stockist for B.S.A. Spare Parts, Spare Part Catalogues, Instruction Books, Transfers, etc.

All B.S.A. Dealers carry stocks of B.S.A. Spare Parts but the following appointed Stockists maintain a comprehensive range.

<i>Town</i>	<i>Name of Stockist</i>	<i>Address</i>	<i>Telephone Number</i>	<i>Telegraphic Address</i>
Aberdeen	George Cheyne (Cycles) Ltd.	147-149 Holburn Street	50341/2	Motorbike, Aberdeen.
Accrington	N. Goulding Ltd.	396 Blackburn Road	31221	
Aldershot	Archer & Sons	149 Victoria Road	20323/4	
Ashington	Mains of Ashington	Laburnam Terrace	3204	
Banbury	Eddie Dow Ltd.	Southam Road, Oxon.	4287/8	
Barnsley	T. Garner & Son	John Street Showrooms, New St.	2866 (P.B.E.)	
Barnstaple	Godfrey Sampson	129 Boutport Street	2952	
Barrow-in-Furness	E. & E. Roberts	162 Rawlinson Street	1104	
Basingstoke	H. J. Gifford Ltd.	Giffords Corner	5266/7	
Bath	R. U. Holoway & Son	32, 33 & 34 St. Johns Road	64101/5084	
Beccles	L. C. Green & Son (Beccles) Ltd.	Peddars Lane	2370	
Belfast	W. J. Chambers & Co.	106 & 108 Donegall Pass.	27253/4	Eastmore Belfast.
Birmingham	C. E. Cope & Sons Ltd.	477-487 Hagley Road, Smethwick, Warley, Worcestershire.	021 - 429 3501	
	Aston Auto Motors	33-41 Potters Hill, B'ham 6	021 - 554 2091	
	Vale-Onslow (Mrs.) Ltd.	116 Stratford Rd., B'ham 11	021 - 772 2062	
	W. G. King	608 Bromford Lane, B'ham 8	021 - 783 3297	
Blackpool	J. Hall & Son (Blackpool) Ltd.	102-106 Devonshire Road	32957	
Bletchley (Bucks)	A. W. Mayle	13 Victoria Road	2211	
Bolton	Charlie Robinson (Motor Cycles) Ltd.	119 & 121 Higher Bridge St.	23931	
Bradford	J. K. Hirst Ltd.	16 Listerhills Road	QBR-4-33971	
Bridgend	Waterton Coss Motors (Bridgend) Ltd.	11 Derwen Road	3082	
Brighton	Redhill Motors (Brighton) Ltd.	104 North Road	61391	
Bristol	Fowlers of Bristol Ltd.	96-100 Grosvenor Road	551538	
Bury St. Edmunds	C. J. Powers & Son	98A-100 Rishygate Street	4635	
Caernarvon	Gareth Jones	39 Pool Street	2653	
Cambridge	Hallens of Cambridge Ltd.	Hawthorn Way	56225	
Canterbury	Hallets of Canterbury Ltd.	St. Dunstan's Street	62275	
Cardiff	Car Distributors (Cardiff) Ltd.	B.S.A. House, 134-140 City Rd.	30022	
Carlisle	W. T. Tiffen & Son	Irishgate Brow	25024	Tiffen, Irishgate, Carlisle.

